

R&S®NRX Power Meter Getting Started



1424707002

Version 13

ROHDE & SCHWARZ

Make ideas real



This document describes the following R&S®NRX models and options:

- R&S®NRX (1424.7005K02)
- R&S®NRX-B1 (1424.7805K02)
- R&S®NRX-B4 (1424.8901K02)
- R&S®NRX-B8 (1424.8301K02)
- R&S®NRX-B9 (1424.8601K02)
- R&S®NRX-K2 (1424.9208K02)
- R&S®NRX-K4 (1424.9308K02)

© 2025 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1424.7070.02 | Version 13 | R&S®NRX

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information.....	5
1.1 Safety instructions.....	5
1.2 Labels on the product.....	8
1.3 Warning messages in the documentation.....	9
1.4 CE declaration of conformity.....	9
1.5 Where to find key documents on Rohde & Schwarz.....	10
1.6 Korea certification class B.....	10
2 Documentation overview.....	11
2.1 Getting started manual.....	11
2.2 User manual.....	11
2.3 Printed safety instructions.....	11
2.4 Instrument security procedures.....	12
2.5 Specifications and product brochures.....	12
2.6 Application notes, application cards, white papers, etc.....	12
2.7 Release notes and open source acknowledgment (OSA).....	12
3 Key features.....	14
4 Preparing for use.....	15
4.1 Lifting and carrying.....	15
4.2 Unpacking and checking.....	15
4.3 Choosing the operating site.....	16
4.4 Setting up the product.....	16
4.4.1 Placing the product on a bench top.....	16
4.4.2 Mounting the product in a rack.....	18
4.5 Considerations for test setup.....	18

4.6 Connecting to power.....	19
4.7 Connecting sensors.....	20
4.7.1 Sensor connectors A to D.....	20
4.7.2 Optional sensor interface for R&S NRT.....	21
4.7.3 LAN interface.....	22
4.7.4 USB 2.0 host interfaces.....	23
4.8 Connecting USB and external devices.....	23
4.9 Switching on or off.....	23
 5 Instrument tour.....	 25
5.1 Front panel tour.....	25
5.1.1 Sensor connectors A and B.....	25
5.1.2 Module bay.....	26
5.1.3 Touchscreen.....	27
5.1.4 Keys.....	27
5.1.5 On/standby key.....	29
5.1.6 USB host interface.....	29
5.2 Rear panel tour.....	30
5.2.1 Sensor connectors C and D.....	30
5.2.2 Trig In / Out 2 and Out 1 / Trig Out connectors.....	31
5.2.3 Ethernet interface.....	31
5.2.4 USB device interface.....	31
5.2.5 AC supply and power switch.....	31
5.2.6 IEC 625/IEEE 488 interface.....	32
5.2.7 Name plate.....	32
 6 Contacting customer support.....	 34
 Index.....	 35

1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following sections.

Intended use

Combined with the supported sensors, the R&S NRX base unit is intended for power measurements in development and production. The supported sensors are listed in the specifications document.

Observe the operating conditions and performance limits stated in the specifications document.

Target audience

The target audience is developers and technicians. The required skills and experience in power measurements depend on the used operating concept. While manual operation is suitable for beginners, remote control requires expertise in power measurements.

Depending on the used R&S sensor, the applications vary greatly. A profound knowledge of the intended application and test setup is recommended.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Section 1.1, "Safety instructions"](#), on page 5. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Mains-Powered Products, Not Heavy" (document number 1171.1771.99) are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow

Safety instructions

the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires skilled persons or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at <https://www.rohde-schwarz.com/support>.

Lifting and carrying the product

The maximum weight of the product is provided in the specifications document. You can lift or carry the product by yourself, if you can manage the weight on your own. Alternatively, you can use lifting or transporting equipment. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces or measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power

The product is an overvoltage category II product. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death. Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Take the following measures for your safety:

- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.

Labels on the product





- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product and its accessories warn against potential hazards.

	<p>Potential hazard</p> <p>Read the product documentation to avoid personal injury or product damage.</p>
	<p>Electrical hazard</p> <p>Indicates live parts. Risk of electric shock, fire, personal injury or even death.</p>
	<p>Hot surface</p> <p>Do not touch. Risk of skin burns. Risk of fire.</p>
	<p>Protective conductor terminal</p> <p>Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.</p>


1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see "[Meaning of safety labels](#)" on page 8

- Environment safety, see [Table 1-1](#)
- Identification of the product, see [Section 5.2.7, "Name plate"](#), on page 32.

Table 1-1: Labels regarding environment safety

	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its service life. For more information, see the product user manual, section "Disposal".
---	---

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 CE declaration of conformity

The CE declaration of conformity of the base unit is delivered with the product. Keep the document for further reference.

The current version of this CE declaration of conformity is available at:

www.rohde-schwarz.com/product/NRX

1.5 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.6 Korea certification class B



이 기기는 가정용(B급) 전자파 적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

2 Documentation overview

This section provides an overview of the R&S NRX user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/NRX

Further documents are available at:

www.rohde-schwarz.com/product/NRX

2.1 Getting started manual

Introduces the R&S NRX and describes how to set up and start working with the product. A printed version is delivered with the instrument.

2.2 User manual

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.

The user manual is provided on the R&S NRX for download under:

[System] > "Instrument Info" > "Help & Copyrights"

2.3 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

2.4 Instrument security procedures

Deals with security issues when working with the R&S NRX in secure areas. It is available for download on the internet.

2.5 Specifications and product brochures

The specifications document, also known as the data sheet, contains the technical specifications of the R&S NRX. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/NRX

2.6 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/NRX

2.7 Release notes and open source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current software version, and describe the software installation.

The software uses several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

On the instrument, the open source acknowledgment document is provided under:

Release notes and open source acknowledgment (OSA)

[System] > "Instrument Info" > "Help & Copyrights"

See www.rohde-schwarz.com/firmware/NRX

3 Key features

The R&S NRX supports:

- Easy RF power measurements
- Multichannel measurements
- RF pulse analysis
- System integration

The R&S NRX is a versatile, user-friendly base unit.

- Straightforward numerical and graphical display of measured values, plus intuitive operation with touchscreen-based graphical user interface
- Supports up to four R&S NRP and R&S NRQ6 sensors.
- Supports all sensor-dependent measurement functions
- Hardware interfaces for remote control and triggering
- Code emulation of the R&S NRP2
- Optional high-precision CW and pulse mode reference source module
- Optional power reflection measurements with R&S NRT-Zxx directional power sensors

See also the R&S NRX fact sheet at www.rohde-schwarz.com.

4 Preparing for use

Here, you can find basic information about setting up the product for the first time.

• Lifting and carrying	15
• Unpacking and checking	15
• Choosing the operating site	16
• Setting up the product	16
• Considerations for test setup	18
• Connecting to power	19
• Connecting sensors	20
• Connecting USB and external devices	23
• Switching on or off	23

4.1 Lifting and carrying

For safety information, see "[Lifting and carrying the product](#)" on page 6.

The R&S NRX weighs below 3 kg, details are provided in the specifications document. Due to the low weight, you can move the R&S NRX easily.

4.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

4.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see ["Choosing the operating site"](#) on page 6.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
 - Residential environments
 - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

4.4 Setting up the product

For safety information, see:

- ["Setting up the product"](#) on page 7
- ["Intended use"](#) on page 5

4.4.1 Placing the product on a bench top

The R&S NRX is a small and lightweight product. You can stack the R&S NRX with other products, but place the R&S NRX on top. In the following procedure, the weight indication for stacking refers to the most common design of larger Rohde & Schwarz instruments. Verify the load suitable for your product before stacking.

To place the product on a bench top


1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the specifications document.
2. **CAUTION!** Foldable feet can collapse. For safety information, see "[Setting up the product](#)" on page 7.

Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.

3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack.

Stack as follows:

- If the products have foldable feet, fold them in completely.
- It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
- Do not exceed the permissible total load placed on the product at the bottom of the stack:
 - 50 kg when stacking products of identical dimensions (left figure).
 - 25 kg when stacking smaller products on top (middle figure).

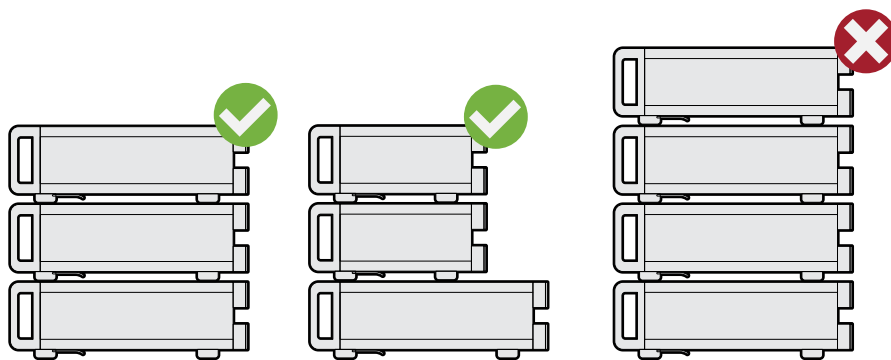

Left = Stacked correctly, same dimensions

Middle = Stacked correctly, different dimensions

Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.

Considerations for test setup

- Do not place the product next to heat-generating equipment such as radiators or other products.

4.4.2 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in ["Setting up the product"](#) on page 7.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product. Design and implement an efficient ventilation concept for the rack.

To mount the product in a rack

1. Use an adapter kit to prepare the product for rack mounting.
 - a) Order the rack adapter kit designed for the product. For the order number, see data sheet.
 - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the product to shelf height. If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws on the rack brackets to secure the product in the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. Remove the product from the rack.
3. If placing the product on a bench top again, unmount the adapter kit from the product. Follow the instructions provided with the adapter kit.

4.5 Considerations for test setup

For safety information, see ["Connecting the product"](#) on page 7.

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.
- Do not use USB connecting cables exceeding 5 m.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

4.6 Connecting to power

The R&S NRX can be used with different AC power voltages and adapts itself automatically to them. Adjusting the R&S NRX to a particular AC supply voltage is therefore not required. Refer to the specifications document for the requirements of voltage and frequency.

For safety information, see "[Connecting to power](#)" on page 7.

1. Plug the AC power cable into the AC power connector on the rear panel of the product. Only use the AC power cable delivered with the product.
2. Plug the AC power cable into a power outlet with ground contact.

The required ratings are listed next to the AC power connector and in the data sheet.

Further information:

- [Section 5.2.5, "AC supply and power switch"](#), on page 31

4.7 Connecting sensors

The R&S NRX supports a wide range of Rohde & Schwarz power sensors. See the specifications document for detailed information.

Depending on the sensor, you have different choices for connecting sensors.

4.7.1 Sensor connectors A to D

See [Section 5.1.1, "Sensor connectors A and B"](#), on page 25 and [Section 5.2.1, "Sensor connectors C and D"](#), on page 30.

Suitable for:

- NRP USB and LAN sensor models
- R&S NRQ6
- R&S NRP-Zxx sensors

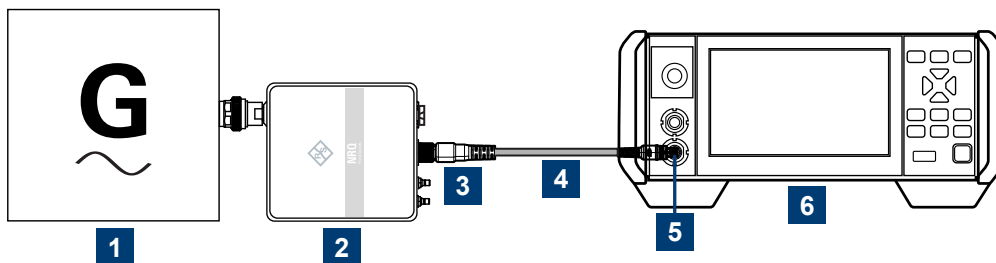


Figure 4-1: Setup with R&S NRQ6 (example)

- 1 = Signal source
- 2 = Sensor
- 3 = Host interface
- 4 = R&S NRP-ZK8 cable
- 5 = Sensor connector of the R&S NRX
- 6 = R&S NRX

Use an R&S NRP-ZK8 cable to connect a sensor to the R&S NRX. If you use an R&S NRP-ZK6 cable, the reference clock and trigger are not supported.

1. 8-pin female connector of the R&S NRP-ZK8 cable:

Connecting sensors

- a) Insert the screw-lock cable connector into the host interface of the sensor.
 - b) Tighten the union nut manually.
2. 8-pin male connector of the R&S NRP-ZK8 cable:
 - a) Insert this connector into one of the sensor ports of the R&S NRX.
 3. Connect the RF connector of the sensor to the signal source. For details, see the user manual of the sensor.

Note: Incorrectly connecting/disconnecting a sensor can damage the sensor or lead to erroneous results.

4.7.2 Optional sensor interface for R&S NRT

See [Section 5.1.2, "Module bay"](#), on page 26.

Suitable for R&S NRT-Zxx sensors.

Communication between the R&S NRT-Zxx sensor and a base unit is only possible with a baud rate setting of 38400 Bd. This setting is the factory default that needs to be restored if the setting was changed. If the R&S NRT-Zxx sensor is not recognized by the base unit, check that the baud rate setting of the R&S NRT-Zxx sensor is 38400 Bd.

See the manual of the R&S NRT-Zxx sensor for details.

The arrow on the sensor front side shows the forward power flow.

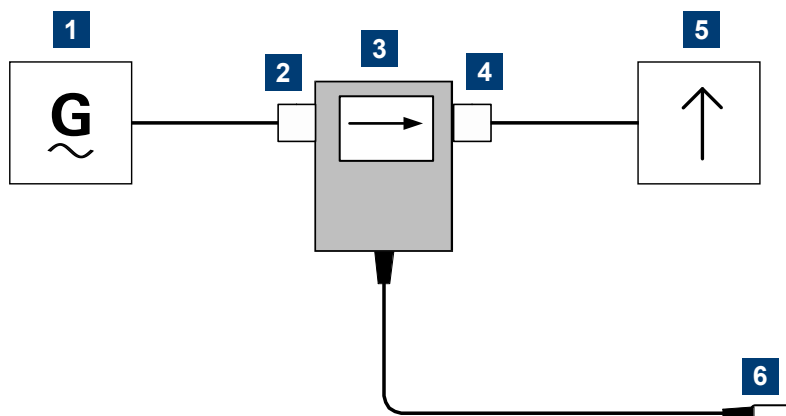


Figure 4-2: Connecting to source and load

- 1 = Source
- 2 = Port 1 (RF connector)
- 3 = R&S NRT-Zxx sensor

4 = Port 2 (RF connector)
5 = Load
6 = Host interface connector

To connect the R&S NRT-Zxx sensor

Connect the R&S NRT-Zxx sensor between the source and load of your test setup as follows.

1. Connect RF connector (2, port 1) to the source.
 - a) Insert RF connector (2) straight into the RF connector of the source. Take care not to tilt the R&S NRT-Zxx sensor.
 - b) Tighten the RF connector securely by hand.
2. Connect RF connector (4, port 2) to the load.
 - a) Insert RF connector (4) straight into the RF connector of the load. Take care not to tilt the R&S NRT-Zxx sensor.
 - b) Tighten the RF connector tightly by hand.

During the measurement, the RF power flow can be high. Power leakage has the risk of electric shock and severe skin burns.
3. Connect the host interface connector of the R&S NRT-Zxx sensor (6) to the R&S NRX-B9 sensor connector.

To disconnect the R&S NRT-Zxx sensor

1. **CAUTION!** Risk of electric shock and severe skin burns. During the measurement, the RF power flow can be high.

Switch off the RF power before touching the RF connectors.
2. Unscrew the RF connectors by hand.
3. Disconnect the cable of the R&S NRT-Zxx sensor (6) from the R&S NRX-B9 sensor connector.

4.7.3 LAN interface

See [Section 5.2.3, "Ethernet interface"](#), on page 31.

Suitable for LAN sensors.

4.7.4 USB 2.0 host interfaces

See [Section 5.1.6, "USB host interface"](#), on page 29.

Suitable for USB power sensors. You can increase the number of connected power sensors by using USB hubs.

4.8 Connecting USB and external devices

Use the USB interfaces to connect USB devices. You can increase the number of connected devices by using USB hubs.

Due to the large number of available USB devices, there is almost no limit to the possible expansions. In the following, useful USB devices are listed exemplarily:

- Memory stick for easy transfer of data to/from a computer (e.g. firmware updates).
- Mouse if you prefer this way of operation over a touchscreen.

4.9 Switching on or off

Table 4-1: Overview of power states

Status	LED	Position of power switch
Off	Off	[0]
Standby	● orange	[I]
Ready	● green	[I]

To switch on the product

The product is off but connected to power.

1. Set the switch on the power supply to position [I]. See [Section 5.2.5, "AC supply and power switch"](#), on page 31.

The LED of the [standby] key is orange. See [Section 5.1.5, "On/standby key"](#), on page 29.

2. Press the [standby] key.

The LED changes to green. The product boots.

If the previous session ended regularly, the product uses the settings from the last session.

3. If you want to return to a defined initial state, perform a preset.

To shut down the product

The product is in the ready state.

- Press the [standby] key.

The operating system shuts down. The LED changes to orange. The product changes to standby state.

To disconnect from power

The product is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.
Set the switch on the power supply to position [0].
The LED of the standby key is switched off.
2. Disconnect the product from the power source.

Further information:

- [Section 5.1.5, "On/standby key"](#), on page 29

5 Instrument tour

The meanings of the labels on the product are described in [Section 1.2, "Labels on the product"](#), on page 8.

- [Front panel tour](#).....25
- [Rear panel tour](#).....30

5.1 Front panel tour

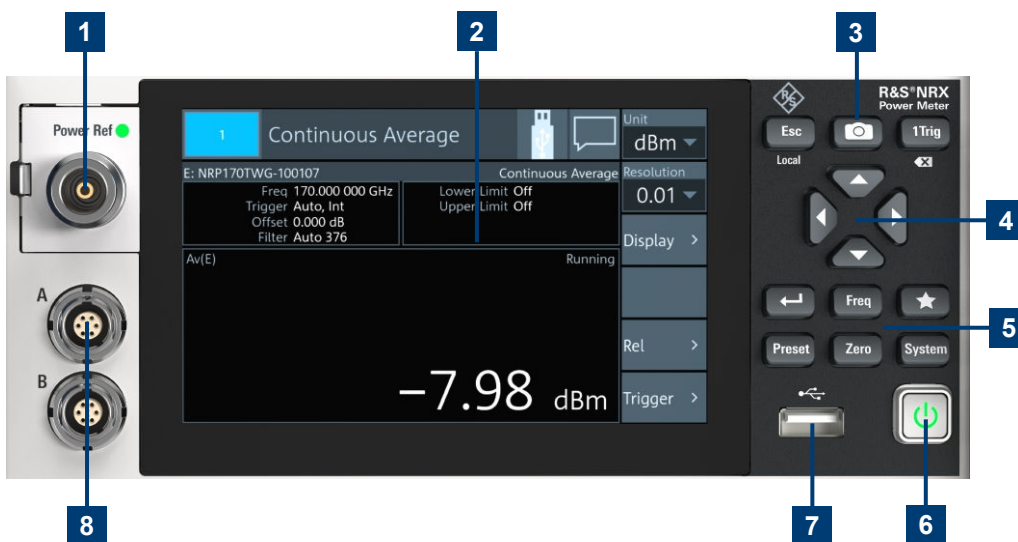


Figure 5-1: Front panel of the R&S NRX

- 1 = Module bay for optional connectors, see [Section 5.1.2, "Module bay"](#), on page 26.
- 2 = Touchscreen, see [Section 5.1.3, "Touchscreen"](#), on page 27.
- 3, 5 = Keys, see [Section 5.1.4, "Keys"](#), on page 27.
- 4 = Cursor keys, see ["Cursor keys"](#) on page 29.
- 6 = On/standby key, see [Section 5.1.5, "On/standby key"](#), on page 29.
- 7 = USB host interface, see [Section 5.1.6, "USB host interface"](#), on page 29.
- 8 = Sensor connectors A and B, see [Section 5.1.1, "Sensor connectors A and B"](#), on page 25.

5.1.1 Sensor connectors A and B

See (8) in [Figure 5-1](#).

Sensor connectors A and B are used to connect the R&S NRP power sensors and the R&S NRQ6. For details on the supported power sensors, see the specifications document.

The complete functional range, including external trigger and reference clock for the synchronization of connected sensors, is provided by these connectors.

Further information:

- [Section 4.7, "Connecting sensors"](#), on page 20

5.1.2 Module bay

See (1) in [Figure 5-1](#).

Two options fit in this bay. If you have both options, you can exchange them, see ["To exchange the option"](#) on page 27.

If no option is installed, the module bay is closed by a cover.

R&S NRX-B1 sensor check source

Used as a power reference for testing the connected sensors and the cabling. The LED of the R&S NRX-B1 sensor check source shows the state, see [Table 5-1](#).

You can remove the option and send it to Rohde & Schwarz for calibration. Contact the Rohde & Schwarz customer support, see [Section 6, "Contacting customer support"](#), on page 34.

Table 5-1: Possible states

Illumination	State	Signal output setting
Off	No signal is generated.	"Off"
Steady green	Continuous wave is output.	"CW"
Blinking green	Pulse signal is output.	"Pulse"
Blinking red	Settings conflict exists. For example if "Pulse" is set and the power level is set to 20 dBm.	"CW" or "Pulse"

R&S NRX-B9 sensor interface for R&S NRT

Provides an optional power sensor interface to connect an R&S NRT-Zxx sensor. For supported sensors, see the specifications document.

To exchange the option

1. Press the latch to the right, using your thumbnail or a small pen.



2. Pull the option from its casing.
3. Insert the other option.
4. Press until you hear a click when the latch locks.

Further information:

- [Section 4.7, "Connecting sensors"](#), on page 20
- [Section 4.7.2, "Optional sensor interface for R&S NRT"](#), on page 21

5.1.3 Touchscreen

See (2) in [Figure 5-1](#).

The R&S NRX displays results in panes. Depending on the measurement mode, values are displayed digitally or graphically.

False triggers can occur

If an object (e.g. a human finger) that is charged with static electricity is brought near the touch panel, false triggers can occur.

This behavior is caused by the principle of operation of a PCAP (projected capacitive) touch panel.

5.1.4 Keys

See (3, 5) in [Figure 5-1](#).

[Esc] / Local

If you press shortly:

- Changes to the next-higher hierarchy level.

- Escapes from the entry mode in text boxes and lists.
- Closes dialogs without losing any entries that have been made.
- Switches from remote control mode (all controls disabled) to manual operation.

If you press and hold:

- Goes to the start dialog that shows an overview of the active measurements.



Screenshot

Creates a screenshot of the current display.



[1Trig] / Delete

- Controls the measurements depending on the trigger mode:
 - For all trigger modes except "Single", starts and stops the measurement.
 - For the "Single" trigger mode, enables and triggers the measurement.

Changes of the trigger state apply to all measurements.

- Resets the auxiliary values that provide additional information about the measured values.
- Deletes numbers or text in a field so that you can enter a new value.



Enter

- Confirms entries in text fields, dialogs and selections in lists.
- Shows a frame around the control in focus. You can change the focus using the [Cursor keys](#).



[Freq]

Sets the carrier frequency of the applied signal. This value is used for frequency response correction of the measurement result.



Favorites

Reserved for future use.



[Preset]

Opens the "Save / Recall / Preset" dialog.

If you press [Preset] again, the preset function starts.

If you press the [Preset] key during booting, the R&S NRX starts with the factory default state.



[Zero]

Pressing [Zero] opens the "Zeroing Sensors" dialog.

If you press [Zero] again, "Zero All Sensors" starts.

Also displays status information:

- Zeroing status
- Sensor status

**[System]**

Opens the "System Overview" dialog.

Cursor keys

See (4) in [Figure 5-1](#).

The cursor keys are context-sensitive. The control in focus is indicated by a focus frame. Use the cursor keys as follows:

- Selecting an element in the navigation pane.
- Selecting the active pane.
- Selecting an element from a list.
- Moving the cursor in text boxes.
- Changing the value of an entry in a text box.

5.1.5 On/standby key

See (6) in [Figure 5-1](#).

The on/standby key switches between standby and ready state, if the power switch is set to [I].

Further information:

- [Section 5.2.5, "AC supply and power switch"](#), on page 31
- [Section 4.9, "Switching on or off"](#), on page 23

5.1.6 USB host interface

See (7) in [Figure 5-1](#).

USB 2.0 (universal serial bus) interface of the type A (host USB). Used to connect:

- USB sensors
- External devices like a keyboard, mouse, or memory stick

Further information:

- [Section 4.7.4, "USB 2.0 host interfaces"](#), on page 23

- [Section 4.8, "Connecting USB and external devices"](#), on page 23

5.2 Rear panel tour

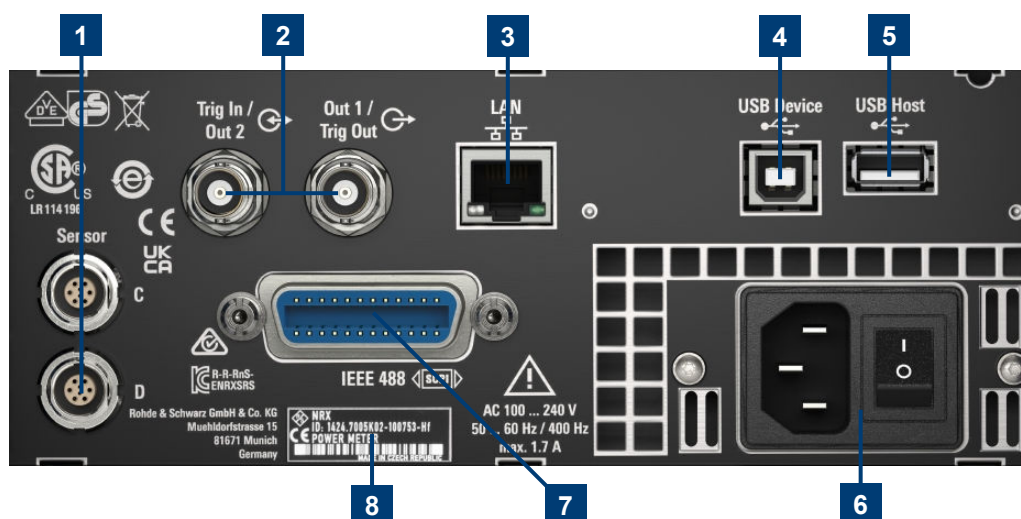


Figure 5-2: Rear panel of the R&S NRX

- 1 = Sensor connectors C and D (optional), used to connect R&S power sensors, see [Section 5.2.1, "Sensor connectors C and D"](#), on page 30.
- 2 = Trig In / Out 2 and Out 1 / Trig Out connectors, see [Section 5.2.2, "Trig In / Out 2 and Out 1 / Trig Out connectors"](#), on page 31.
- 3 = Ethernet interface, see [Section 5.2.3, "Ethernet interface"](#), on page 31.
- 4 = USB device interface, see [Section 5.2.4, "USB device interface"](#), on page 31.
- 5 = USB host interface, see [Section 5.1.6, "USB host interface"](#), on page 29.
- 6 = AC supply and power switch, see [Section 5.2.5, "AC supply and power switch"](#), on page 31.
- 7 = IEC 625/IEEE 488 interface, optional, see [Section 5.2.6, "IEC 625/IEEE 488 interface"](#), on page 32.
- 8 = Name plate, see [Section 5.2.7, "Name plate"](#), on page 32

5.2.1 Sensor connectors C and D

See (8) in [Figure 5-2](#).

Requires R&S NRX-B4 third and fourth sensor connector.

For more details, see [Section 5.1.1, "Sensor connectors A and B"](#), on page 25.

5.2.2 Trig In / Out 2 and Out 1 / Trig Out connectors

See (2) in [Figure 5-2](#).

The Out 1 / Trig Out BNC connectors supply an analog signal with a voltage between 0 V and 2.5 V. It can be used to output a voltage that is proportional to the measured value (e.g. for level regulation) or a digital signal for limit monitoring.

The Trig In / Out 2 BNC connectors can be used either as an external trigger input with a switchable impedance (10 k Ω or 50 Ω) or as a second analog output.

By default, both connectors are disabled.

5.2.3 Ethernet interface

See (3) in [Figure 5-2](#).

The Ethernet connector is an RJ-45 socket for remote controlling the R&S NRX via a network.

5.2.4 USB device interface

See (4) in [Figure 5-2](#).

USB 2.0 (universal serial bus) interface of the type B (receptacle). Used to connect the R&S NRX to a computer for USB remote control.

5.2.5 AC supply and power switch

See (6) in [Figure 5-2](#).

Observe the safety instructions in ["Connecting to power"](#) on page 7.

When the R&S NRX is connected to the AC supply, it automatically sets itself to the correct range for the applied voltage. The range is printed on the casing. There is no need to set the voltage manually.

The power supply does not have a replaceable fuse. If the product is connected to the mains but cannot be started, contact Rohde & Schwarz customer support for troubleshooting help.

Further information:

- [Section 4.6, "Connecting to power"](#), on page 19

5.2.6 IEC 625/IEEE 488 interface


See (7) in [Figure 5-2](#).

Requires the R&S NRX-B8 GPIB/IEEE488 interface.

IEC bus (IEEE-488) interface for remote control of the R&S NRX. Used to connect a controller to the remote control the R&S NRX. Use a shielded cable for the connection.

Characteristics of the IEC bus (IEEE-488) interface:

- 8-bit parallel data transfer
- Bidirectional data transfer
- Three-wire handshake
- High data transfer rate
- Maximum length of connecting cables 15 m (single connection 2 m)

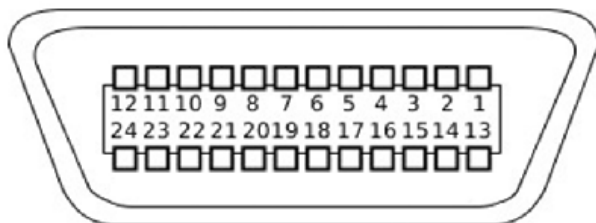

5.2.7 Name plate

See (8) in [Figure 5-2](#).

Shows the type, identification and name of the R&S NRX. The device ID consists of:

<stock number> - <serial number> - <checksum>

The framed 6 digits in [Figure 5-3](#) are the individual serial number.



Figure 5-3: Name plate

The name plate also shows the parts of the default host name. The default host name consists of <type>-<serial number>.

For the R&S NRX with the name plate shown in [Figure 5-3](#), the default host name is:

NRX-100758

6 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 6-1: QR code to the Rohde & Schwarz support page

Index

Symbols

1 Trig key 28

A

AC power supply 31
 Connecting to 19
 Application cards 12
 Application notes 12

B

Bench top operation 16
 Brochures 12

C

Casing
 Labels 8
 Connecting
 External devices 23
 Power supply 19
 Sensor 20
 Connector
 AC power supply 31
 Out 1 / Trig Out 31
 Sensor 25, 30
 Trig In / Out 2 31
 Cursor keys 29
 Customer support 34

D

Data sheets 12
 Delete key 28
 Device ID 32
 Documentation overview 11

E

Electromagnetic interference (EMI) 18
 Electrostatic discharge (ESD) 19
 EMI 18
 Enter key 28
 Esc key 27
 ESD 19
 Ethernet interface 31
 External devices 23

F

Favorites key 28

Freq key 28
 Front panel 25
 Keys 27

G

Getting started 11

H

Hardware option 26
 Help 11
 Host name
 Default 32

I

IEC 625/IEEE 488 interface 32
 Instrument security procedures 12
 Intended use 5
 Interface
 Ethernet 31
 IEC 625/IEEE 488 32
 Module bay 26
 USB device 31

K

Key 27
 1 Trig 28
 Delete 28
 Enter 28
 Esc 27
 Favorites 28
 Freq 28
 Local 27
 On/standby 29
 Preset 28
 Screenshot 28
 System 29
 Zero 28

L

Labels on casing 8
 Local key 27

M

Module bay 26

O

On/standby key	29
Open source acknowledgment	12
Operating	
Conditions	16
Site	16
OSA	12
Out 1 / Trig Out connector	31

P

Power supply	
Connecting to	19
Preparing for use	15
Preset key	28

R

Rack mounting	18
Rear panel	30
Release notes	12

S

Safety instructions	5, 11
Warning messages	9
Screenshot key	28
Security procedures	12
Sensor	
Connecting	20
Connector	25, 30
Serial number	32
Setting up	16
Shutdown	24
Specifications	12
Stock number	32
Switching on/off	23
System key	29

T

Target audience	5
Test setup	18
Touchscreen	27
Trig In / Out 2 connector	31

U

Unpacking	15
USB	
Device interface	31
Host interface	29
User manual	11

W

Warning messages	9
White papers	12

Z

Zero key	28
----------------	----