

# R&S®NRQ6

## Frequency Selective Power Sensors Installation Instructions for Options



1421471102  
Version 03

**ROHDE & SCHWARZ**  
Make ideas real



## Installing the License Key

Use one of the following methods:

- Entering the license key manually.  
See "[To install the license key](#)" on page 2.
- Using an RSI file.  
See "[To install the license key](#)" on page 2.
- Using remote control.  
`SYSTEM:LiCense: . . .` commands; for details, see the user manual.

### To install the license key

1. Make sure that the most recent firmware version is installed.
2. Open the web user interface.
3. In the navigation pane of the main dialog, select "System".
4. Click "Enter License Key".  
The "Enter License Key" dialog is displayed.
5. If you install the license key manually:
  - a) Under "License Key", enter the license key from the software option list supplied with the option.
6. If you use an RSI file:
  - a) Copy the RSI file delivered with the option into a folder that you can access with your R&S NRQ6.
  - b) Click "Browse License File".
  - c) Select the RSI file you want to install.
7. Click "Apply".
8. Click "Reboot".  
The R&S NRQ6 performs a reboot.
9. Check whether the option is active. The name of the option is displayed under "Installed Options", for example "NRQ-K1".

If you need further information on this or related topics, see the user manual of the R&S NRQ6.

© 2018 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.