


# R&S®FSW-K40

## Phase Noise Measurements

### User Manual

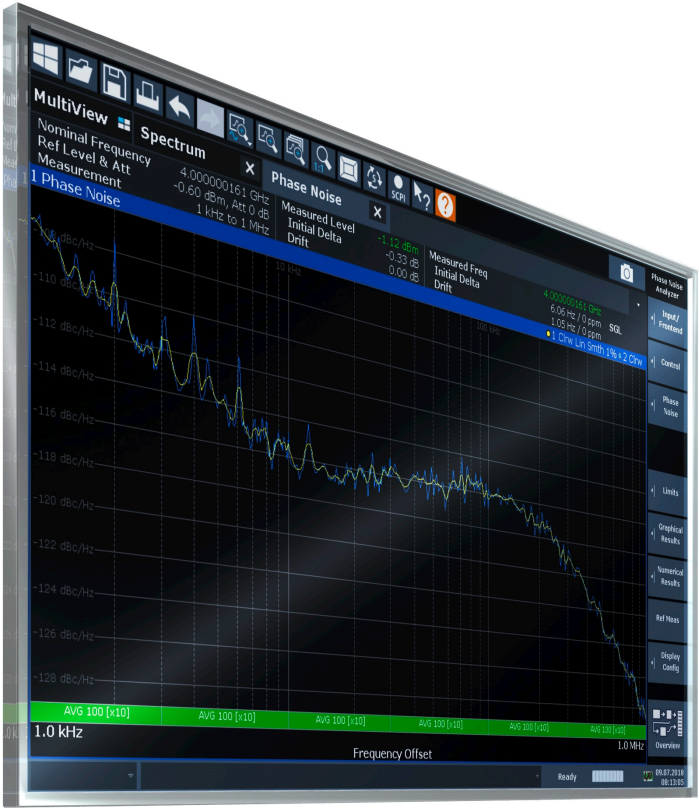

1173928602  
Version 29



This manual applies to the following FSW models with firmware version 6.00 and later:

- R&S®FSW8 (1331.5003K08 / 1312.8000K08)
- R&S®FSW13 (1331.5003K13 / 1312.8000K13)
- R&S®FSW26 (1331.5003K26 / 1312.8000K26)
- R&S®FSW43 (1331.5003K43 / 1312.8000K43)
- R&S®FSW50 (1331.5003K50 / 1312.8000K50)
- R&S®FSW67 (1331.5003K67 / 1312.8000K67)
- R&S®FSW85 (1331.5003K85 / 1312.8000K85)

The following firmware options are described:

- FSW-K40 (1313.1397.02)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1173.9286.02 | Version 29 | R&S®FSW-K40

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol , e.g. R&S®FSW is indicated as R&S FSW.

# Contents

<b>1</b>	<b>Preface</b> .....	<b>7</b>
1.1	<b>About this manual</b> .....	<b>7</b>
1.2	<b>Documentation overview</b> .....	<b>8</b>
1.2.1	Getting started manual.....	8
1.2.2	User manuals and help.....	8
1.2.3	Service manual.....	8
1.2.4	Instrument security procedures.....	9
1.2.5	Printed safety instructions.....	9
1.2.6	Specifications and brochures.....	9
1.2.7	Release notes and open-source acknowledgment (OSA).....	9
1.2.8	Application notes, application cards, white papers, etc.....	9
1.2.9	Videos.....	9
1.3	<b>Conventions used in the documentation</b> .....	<b>10</b>
1.3.1	Typographical conventions.....	10
1.3.2	Conventions for procedure descriptions.....	10
1.3.3	Notes on screenshots.....	10
<b>2</b>	<b>Welcome to the phase noise measurement application</b> .....	<b>11</b>
2.1	<b>Starting the application</b> .....	<b>11</b>
2.2	<b>Understanding the display information</b> .....	<b>12</b>
<b>3</b>	<b>Measurements and result displays</b> .....	<b>16</b>
<b>4</b>	<b>Measurement basics</b> .....	<b>24</b>
4.1	<b>Spurs and spur removal</b> .....	<b>24</b>
4.2	<b>Residual effects</b> .....	<b>25</b>
4.3	<b>Measurement range</b> .....	<b>26</b>
4.4	<b>Sweep modes</b> .....	<b>27</b>
4.5	<b>Trace averaging</b> .....	<b>27</b>
4.5.1	Half decade averaging.....	28
4.5.2	Sweep count.....	28
4.5.3	Trace smoothing.....	28
4.6	<b>Frequency determination</b> .....	<b>29</b>

4.7	Level determination.....	32
4.8	Signal attenuation.....	32
4.9	Using limit lines.....	33
4.10	Analyzing several traces - trace mode.....	35
4.11	Using markers.....	37
4.11.1	Marker types.....	37
4.11.2	Activating markers.....	37
<b>5</b>	<b>Configuration.....</b>	<b>38</b>
5.1	Configuration overview.....	38
5.2	Default settings for phase noise measurements.....	40
5.3	Configuring the frontend.....	40
5.4	Controlling the measurement.....	43
5.5	Configuring the measurement range.....	46
5.6	Performing measurements.....	50
5.7	Configuring in- and outputs.....	52
5.7.1	Input source configuration.....	52
5.8	Automatic measurement configuration.....	53
<b>6</b>	<b>Analysis.....</b>	<b>55</b>
6.1	Configuring graphical result displays.....	55
6.1.1	Scaling the diagram.....	56
6.1.2	Configuring traces.....	57
6.1.3	Copying traces.....	59
6.1.4	Trace/data ex/import.....	59
6.1.5	Trace math.....	62
6.1.6	Trace labels.....	63
6.2	Configure numerical result displays.....	64
6.2.1	Configuring residual noise measurements.....	64
6.2.2	Configuring spot noise measurements.....	65
6.3	Using limit lines.....	66
6.3.1	Using phase noise limit lines.....	67
6.3.2	Selecting standard limit lines.....	68
6.3.3	Creating and editing standard limit lines.....	71
6.4	Using markers.....	73

<b>7</b>	<b>How to configure phase noise measurements.....</b>	<b>77</b>
7.1	Performing a basic phase noise measurement.....	77
7.2	Customizing the measurement range.....	77
<b>8</b>	<b>Remote control commands for phase noise measurements.....</b>	<b>79</b>
8.1	Common suffixes.....	80
8.2	Introduction.....	80
8.2.1	Conventions used in descriptions.....	80
8.2.2	Long and short form.....	81
8.2.3	Numeric suffixes.....	81
8.2.4	Optional keywords.....	82
8.2.5	Alternative keywords.....	82
8.2.6	SCPI parameters.....	82
8.2.6.1	Numeric values.....	83
8.2.6.2	Boolean.....	84
8.2.6.3	Character data.....	84
8.2.6.4	Character strings.....	84
8.2.6.5	Block data.....	84
8.3	Controlling the phase noise measurement channel.....	85
8.4	Performing measurements.....	89
8.5	Configuring the result display.....	93
8.5.1	General window commands.....	93
8.5.2	Working with windows in the display.....	94
8.6	Configuring the frontend.....	101
8.7	Controlling the measurement.....	104
8.8	Configuring the measurement range.....	108
8.9	Using limit lines.....	114
8.9.1	Using phase noise limit lines.....	114
8.9.2	Using standard limit lines.....	117
8.9.3	Creating and editing standard limit lines.....	122
8.10	Graphical display of phase noise results.....	125
8.11	Configure numerical result displays.....	138
8.11.1	Configuring residual noise measurements.....	138
8.11.2	Reading out residual noise results.....	141

8.11.3	Configuring spot noise measurements.....	144
8.11.4	Reading out the spur list.....	147
8.11.5	Reading out measured values.....	148
8.11.6	Reading out the sweep result list.....	149
<b>8.12</b>	<b>Using markers.....</b>	<b>152</b>
8.12.1	Using markers.....	152
8.12.2	Using delta markers.....	154
8.12.3	Configuring markers.....	157
8.12.4	Using the marker zoom.....	158
<b>8.13</b>	<b>Configuring in- and outputs.....</b>	<b>158</b>
<b>8.14</b>	<b>Automatic measurement configuration.....</b>	<b>160</b>
<b>8.15</b>	<b>Using the status register.....</b>	<b>161</b>
8.15.1	Status registers for phase noise measurements.....	161
8.15.1.1	STATus:QUEStionable register.....	163
8.15.1.2	STATus:QUEStionable:POWer register.....	163
8.15.1.3	STATus:QUEStionable:LIMit register.....	164
8.15.1.4	STATus:QUEStionable:PNOise register.....	164
8.15.1.5	Status register remote commands.....	165
<b>8.16</b>	<b>Remote control example scripts.....</b>	<b>167</b>
8.16.1	Performing a basic phase noise measurement.....	167
8.16.2	Configuring the measurement range.....	168
8.16.3	Scaling the display.....	169
8.16.4	Configuring numerical results.....	170
8.16.5	Using limit lines.....	171
8.16.6	Using markers.....	172
	<b>List of Commands (Phase Noise).....</b>	<b>173</b>
	<b>Index.....</b>	<b>178</b>

# 1 Preface

## 1.1 About this manual

This User Manual provides all the information **specific to the application**. All general instrument functions and settings common to all applications and operating modes are described in the main FSW User Manual.

The main focus in this manual is on the measurement results and the tasks required to obtain them. The following topics are included:

- **Welcome to the Phase Noise Application**  
Introduction to and getting familiar with the application
- **Typical applications**  
Example measurement scenarios in which the application is frequently used.
- **Measurements and Result Displays**  
Details on supported measurements and their result types
- **Phase Noise Measurement Basics**  
Background information on basic terms and principles in the context of the measurement
- **Phase Noise Measurement Configuration + Analysis**  
A concise description of all functions and settings available to configure measurements and analyze results with their corresponding remote control command
- **How to Perform Measurements with the Phase Noise Application**  
The basic procedure to perform each measurement and step-by-step instructions for more complex tasks or alternative methods
- **Measurement Examples**  
Detailed measurement examples to guide you through typical measurement scenarios and allow you to try out the application immediately
- **Optimizing and Troubleshooting the Measurement**  
Hints and tips on how to handle errors and optimize the test setup
- **Remote Commands for Phase Noise Measurements**  
Remote commands required to configure and perform phase noise measurements in a remote environment, sorted by tasks  
(Commands required to set up the environment or to perform common tasks on the instrument are provided in the main FSW User Manual)  
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes
- **Annex**  
Reference material
- **List of remote commands**  
Alphabetical list of all remote commands described in the manual
- **Index**

## 1.2 Documentation overview

This section provides an overview of the FSW user documentation. Unless specified otherwise, you find the documents at:

[www.rohde-schwarz.com/manual/FSW](http://www.rohde-schwarz.com/manual/FSW)

Further documents are available at:

[www.rohde-schwarz.com/product/FSW](http://www.rohde-schwarz.com/product/FSW)

### 1.2.1 Getting started manual

Introduces the FSW and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

### 1.2.2 User manuals and help

Separate user manuals are provided for the base unit and the firmware applications:

- Base unit manual  
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Firmware application manual  
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the FSW is not included.

The contents of the user manuals are available as help in the FSW. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

### 1.2.3 Service manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):



<https://gloris.rohde-schwarz.com>

### 1.2.4 Instrument security procedures

Deals with security issues when working with the FSW in secure areas. It is available for download on the internet.

### 1.2.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

### 1.2.6 Specifications and brochures

The specifications document, also known as the data sheet, contains the technical specifications of the FSW. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/FSW](http://www.rohde-schwarz.com/brochure-datasheet/FSW)

### 1.2.7 Release notes and open-source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The firmware makes use of several valuable open source software packages. An open-source acknowledgment document provides verbatim license texts of the used open source software.

See [www.rohde-schwarz.com/firmware/FSW](http://www.rohde-schwarz.com/firmware/FSW)

### 1.2.8 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See [www.rohde-schwarz.com/application/FSW](http://www.rohde-schwarz.com/application/FSW)

### 1.2.9 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>

## 1.3 Conventions used in the documentation

### 1.3.1 Typographical conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
Filenames, commands, program code	Filenames, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
<a href="#">Links</a>	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

### 1.3.2 Conventions for procedure descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

### 1.3.3 Notes on screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

## 2 Welcome to the phase noise measurement application

The FSW-K40 is a firmware application that adds functionality to measure the phase noise characteristics of a device under test with the FSW signal analyzer.

This user manual contains a description of the functionality that the application provides, including remote control operation.

Functions that are not discussed in this manual are the same as in the Spectrum application and are described in the FSW User Manual. The latest versions of the manuals are available for download at the product homepage.

<http://www.rohde-schwarz.com/product/FSW.html>.

### Installation

Find detailed installing instructions in the Getting Started or the release notes of the FSW.

 
- [Starting the application](#)..... 11
- [Understanding the display information](#)..... 12

### 2.1 Starting the application

The phase noise measurement application adds a new type of measurement to the FSW.

#### To activate the Phase Noise application

1. Select [MODE].  
A dialog box opens that contains all operating modes and applications currently available on your FSW.
2. Select the "Phase Noise" item.




The FSW opens a new measurement channel for the Phase Noise application. All settings specific to phase noise measurements are in their default state.

#### Multiple Measurement Channels and Sequencer Function

When you enter an application, a new measurement channel is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channels for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel. However, in order to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently active channels are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label. The result displays of the individual channels are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function see the FSW User Manual.

## 2.2 Understanding the display information

The following figure shows the display as it looks for phase noise measurements. All different information areas are labeled. They are explained in more detail in the following sections.

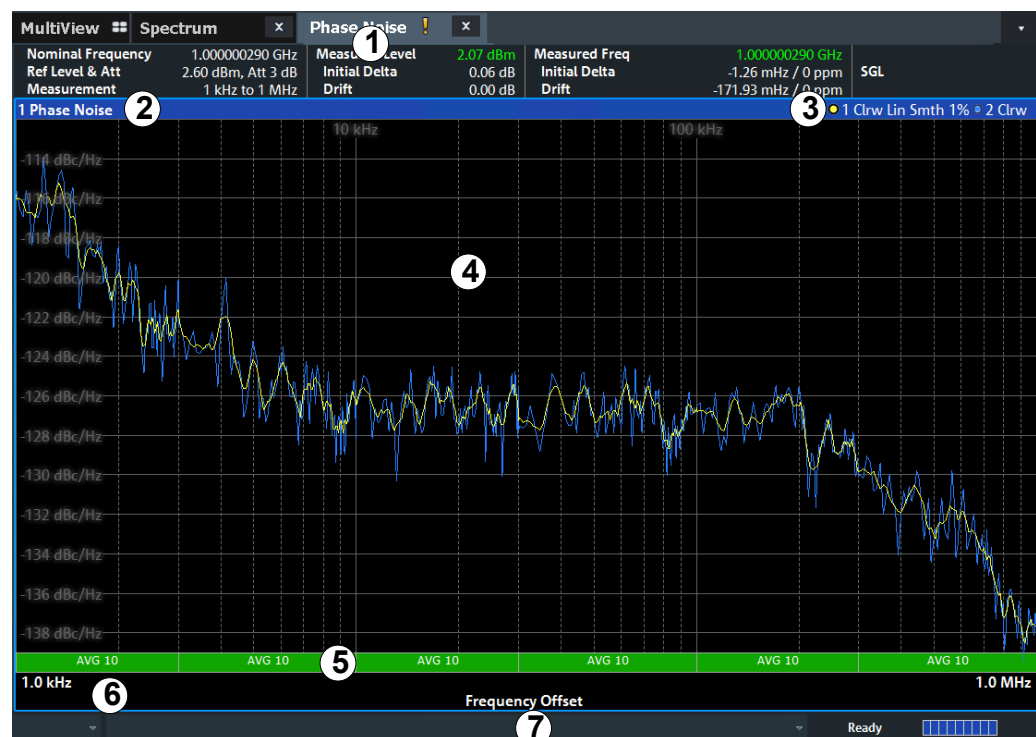


Figure 2-1: Screen layout of the phase noise measurement application

- 1 = Channel bar
- 2+3 = Diagram header
- 4 = Result display

- 5 = Measurement status
- 6 = Diagram footer
- 7 = Status bar


For a description of the elements not described below, please refer to the Getting Started of the FSW.

### Measurement status

The application shows the progress of the measurement in a series of green bars at the bottom of the diagram area. For each half decade in the measurement, the application adds a bar that spans the frequency range of the corresponding half decade.

The bar has several features.

- The numbers within the green bar show the progress of the measurement(s) in the half decade the application currently works on.  
The first number is the current, the second number the total count of measurements for that half decade. The last number is the time the measurement requires.
- A double-click on the bar opens an input field to define the number of averages for that half decade.
- A right-click on the bar opens a context menu.

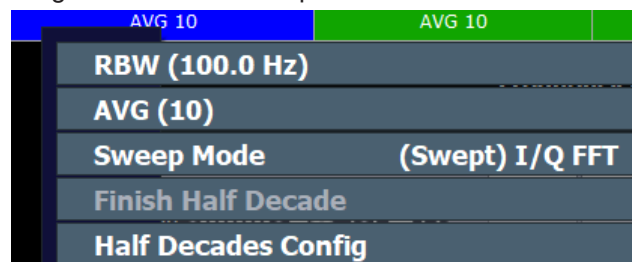

The context menu provides easy access to various parameters (resolution bandwidth, sweep mode etc.) that define the measurement characteristics for a half decade. The values in parentheses are the currently selected values. For more information on the available parameters see "[Half Decades Configuration Table](#)" on page 49.

### Channel bar information


The channel bar contains information about the current measurement setup, progress and results.

Phase Noise					
Nominal Frequency	10.718361607 GHz	Measured Level	-25.87 dBm	Measured Freq	10.718361607 GHz
Ref Level & Att	-42.60 dBm, Att 0 dB	Initial Delta	-0.00 dB	Initial Delta	-1.20 GHz / -100835.9 ppm
Measurement	1 kHz to 1 MHz	Drift	0 dB	Drift	-2.65 kHz / -0.22 ppm

Figure 2-2: Channel bar of the phase noise application

<b>Frequency</b>	Frequency the FSW has been tuned to.  The frontend frequency is the expected frequency of the carrier. When frequency tracking or verification is on, the application might adjust the frontend frequency.
<b>Ref Level &amp; Att</b>	Reference level (first value) and attenuation (second value) of the FSW.  When level tracking or verification is on, the application might adjust the frontend level.
<b>Measurement</b>	Complete phase noise measurement range. For more information see <a href="#">Chapter 4.3, "Measurement range"</a> , on page 26.
<b>Measured Level</b>	DUT level that has been actually measured.  The measured level might differ from the frontend level, e.g. if you are using level verification.
<b>Initial Delta</b>	Difference between the nominal level and the first level that has been measured.
<b>Drift</b>	Difference between the 1st level that has been measured and the level that has been measured last.  In continuous sweep mode, the drift is the difference between the 1st level that has been measured in the 1st sweep and the level that has been measured last.
<b>Measured Frequency</b>	DUT frequency that has been actually measured.  The measured frequency might differ from the frontend frequency, e.g. if you are using level verification.
<b>Initial Delta</b>	Difference between the nominal frequency and the first frequency that has been measured.
<b>Drift</b>	Difference between the 1st frequency that has been measured and the frequency that has been measured last.  In continuous sweep mode, the drift is the difference between the 1st frequency that has been measured in the 1st sweep and the frequency that has been measured last.
<b>SGL [###]</b>	Sweep mode (single or continuous). If you use trace averaging, it also shows the current measurement number out of the total number of measurements.


The following two figures show the relations between the frequency and level errors.

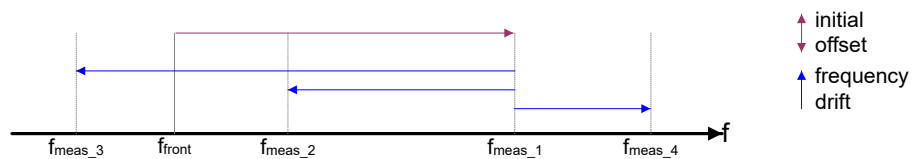

**Figure 2-3: Frequency errors**

$f_{\text{front}}$  = initial frequency set on the frontend

$f_{\text{meas}_x}$  = actual frequency that has been measured

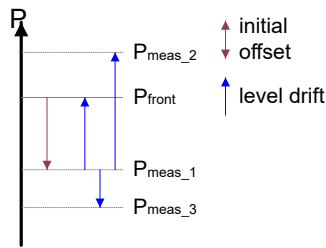

**Figure 2-4: Level errors**

$P_{\text{front}}$  = reference level if tracking = off

$P_{\text{front}}$  = initial reference level if tracking = on

$P_{\text{meas}_1}$  = becomes reference level after first sweep if tracking = on

$P_{\text{meas}_2}$  = becomes reference level after second sweep if tracking = on

$P_{\text{meas}_3}$  = becomes reference level after third sweep if tracking = on

### Window title bar information

For each diagram, the header provides the following information:



**Figure 2-5: Window title bar information of the phase noise application**

1 = Window number

2 = Window type

3 = Trace color and number

4 = Trace mode

5 = Smoothing state and degree

### Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.



### Event-based actions

The R&S FSW Phase Noise Measurement application supports event-based actions, as described in the FSW User Manual.

## 3 Measurements and result displays

### Access:

The Phase Noise application measures the phase noise of a single sideband of a carrier.

It features several result displays. Result displays are different representations of the measurement results. They may be diagrams that show the results in a graphic way or tables that show the results in a numeric way.

In the default state of the application, only the graphical display of phase noise results is active.

Phase Noise Diagram.....	16
Residual Noise.....	17
Spot Noise.....	18
Spur List.....	19
Sweep Result List.....	20
Spectrum Monitor.....	21
Frequency Drift.....	22
Frequency and Level Stability.....	22
Reference Measurement.....	23

### Phase Noise Diagram

The phase noise diagram shows the power level of the phase noise over a variable frequency offset from the carrier frequency.

#### Measurement range

The unit of both axes in the diagram is fix. The x-axis always shows the offset frequencies in relation to the carrier frequency on a logarithmic scale in Hz. It always has a logarithmic scale to make sure of an equal representation of offsets near and far away from the carrier. The range of offsets that the x-axis shows is variable and depends on the measurement range you have defined and the scope of the x-axis that you have set.

For more information on the measurement range see [Chapter 4.3, "Measurement range"](#), on page 26.

If the measurement range you have set is necessary, but you need a better resolution of the results, you can limit the displayed result by changing the x-axis scope. The scope works like a zoom to get a better view of the trace at various points. It does not start a new measurement or alter the current measurements results in any way.

The y-axis always shows the phase noise power level contained in a 1 Hz bandwidth in relation to the level of the carrier. The unit for this information is dBc/Hz and is also fix.

#### Y-axis scale

The scale of the y-axis is variable. Usually it is best to use the automatic scaling that the application provides, because it makes sure that the whole trace is always visible. You can, however, also customize the range, the minimum and the maximum values on the y-axis by changing the y-axis scale.



The measurement results are displayed as traces in the diagram area. Up to six active traces at any time are possible. Each of those may have a different setup and thus show different aspects of the measurement results.

In the default state, the application shows two traces. A yellow one and a blue one. Both result from the same measurement data, but have been evaluated differently. On the first trace, smoothing has been applied, the second one shows the raw data.

For more information on trace smoothing see [Chapter 4.5, "Trace averaging"](#), on page 27.

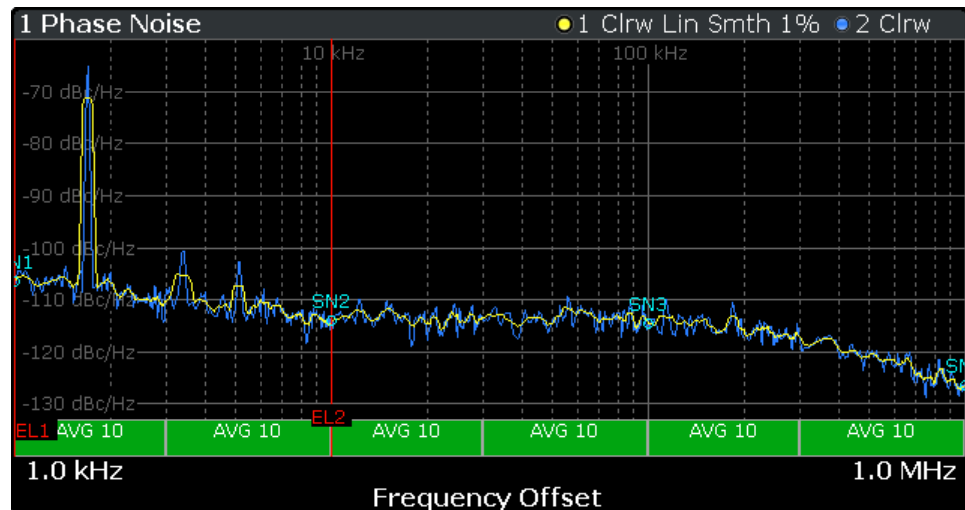


Figure 3-1: Overview of the phase noise result display

The figure above shows a phase noise curve with typical characteristics. Frequency offsets near the carrier usually have higher phase noise levels than those further away from the carrier. The curve has a falling slope until the thermal noise of the DUT has been reached. From this point on, it is more or less a straight horizontal line.

Remote command:

`TRACe<n> [:DATA]` on page 137

### Residual Noise

The residual noise display summarizes the residual noise results in a table.

For more information on the residual noise results see [Chapter 4.2, "Residual effects"](#), on page 25.

The table consists of up to four rows with each row representing a different integration interval. Each row basically contains the same information with the exception that the first row always shows the results for the first trace and the other rows with custom integration ranges the results for any one trace.

2 Residual Noise						
Trace	Start Offset	Stop Offset	Int PHN	PM	FM	Jitter
T1	1.00 kHz	10.00 kHz	-50.15 dBc	251.81 m° / 4...	7.72 Hz	134.52 fs
T1	10.00 kHz	100.00 kHz	-63.80 dBc	52.32 m° / 91...	55.32 Hz	27.95 fs
T1	100.00 kHz	200.68 kHz	-64.34 dBc	49.17 m° / 85...	129.94 Hz	26.26 fs

The residual noise information is made up out of several values.

<b>Type</b>	Shows the number of the trace that is integrated (T[x]).
<b>Start / Stop Offset</b>	Shows the start and stop offset of the integration interval.
<b>Int. PHN</b>	Shows the Integrated Phase Noise. The integral is calculated over the frequency range defined by the Start and Stop Offset values.
<b>PM</b>	Shows the Residual PM result in degrees and rad.
<b>FM</b>	Shows the Residual FM results in Hz.
<b>Jitter</b>	Shows the Jitter in seconds.

For more information on residual noise see [Chapter 4.2, "Residual effects"](#), on page 25.

Remote command:

Querying Residual PM:

`FETCh:PNOise<t>:USER<range>:RPM?` on page 143

Querying Residual FM:

`FETCh:PNOise<t>:USER<range>:RFM?` on page 143

Querying Jitter:

`FETCh:PNOise<t>:USER<range>:RMS?` on page 143

Querying Integrated Phase Noise

Querying user ranges:

`FETCh:PNOise<t>:USER<range>:RFM?` on page 143

`FETCh:PNOise<t>:USER<range>:RMS?` on page 143

`FETCh:PNOise<t>:USER<range>:RPM?` on page 143

### Spot Noise

Spot noise is the phase noise at a particular frequency offset (or spot) that is part of the measurement range. It is thus like a fixed marker.

The unit of spot noise results is dBc/Hz. The application shows the results in a table.

2 Spot Noise		
Type	Offset Frequency [T1]	Phase Noise [T1]
User 1	<b>1.00 kHz</b>	<b>-115.33 dBc/Hz</b>
User 2	<b>10.00 kHz</b>	<b>-124.42 dBc/Hz</b>
User 3	<b>100.00 kHz</b>	<b>-122.67 dBc/Hz</b>
User 4	<b>1.00 MHz</b>	<b>-132.82 dBc/Hz</b>
User 5	<b>10.00 MHz</b>	<b>---</b>

The table consists of a variable number of 10<sup>x</sup> frequencies (depending on the measurement range), and a maximum of five user frequencies, with each row containing the spot noise information for a particular frequency offset.

The spot noise information is made up out of several variables.

<b>Type</b>	Shows where the spot noise offset frequency comes from. By default, the application evaluates the spot noise for the first offset frequency of a decade only (10 <sup>x</sup> Hz, beginning at 1 kHz). However, you can add up to five customized offsets frequencies that you want to know the phase noise for. If you want to use more custom offsets, you can add another spot noise table.  The "User" label indicates a custom offset frequency.
<b>Offset Frequency</b>	Shows the offset frequency the spot noise is evaluated for. You may add any offset that is part of the measurement range.  The number in brackets (T<x>) indicates the trace the result refers to.
<b>Phase Noise</b>	Shows the phase noise for the corresponding offset frequency.  The number in brackets (T<x>) indicates the trace the result refers to.

Note that the spot noise results are calculated for a particular trace only. You can select the trace by tapping on the trace LED in the header of the result display.

1 Phase Noise ● 1 Clrw Lin Smth 1% ○ 2 Clrw

Remote command:

Querying spot noise results on 10<sup>x</sup> offset frequencies:

[CALCulate<n>:SNOise<m>:DECades:X](#) on page 145

[CALCulate<n>:SNOise<m>:DECades:Y](#) on page 145

Querying custom spot noise results:

[CALCulate<n>:SNOise<m>:Y](#) on page 146

Trace selection: [DISPlay\[:WINDow<n>\]:TRACe<t>:SElect](#) on page 147

### Spur List

Spurs are peak levels at one or more offset frequencies and are caused mostly by interfering signals. The application shows the location of all detected spurs in a table.

4 Spur List			
No	Offset Frequency	Power	Jitter
1	1.70 kHz	-50.20 dBc	133.82 fs
2	3.40 kHz	-80.59 dBc	4.04 fs
3	5.10 kHz	-82.42 dBc	3.28 fs
Total	Discrete Jitter		133.92 fs
	Random Jitter		12.62 fs

The table consists of a variable number of rows. For each detected spur, the table shows several results.

<b>Number</b>	Shows the spur number. Spurs are sorted by their frequency, beginning with the spur with the lowest frequency.
<b>Offset Frequency</b>	Shows the position (offset frequency) of the spur.

<b>Power</b>	Shows the power level of the spur in dBc.
<b>Jitter</b>	Shows the jitter value of the spur in s. In addition to the jitter for each spur, the result display also shows the <b>Discrete Jitter</b> and the <b>Random Jitter</b> at the end of the table. <ul style="list-style-type: none"> <li>The Discrete Jitter is the RMS value of all individual jitter values.</li> <li>The Random Jitter is the difference of the overall jitter (as shown in the <a href="#">Residual Noise</a> result display) and the Discrete Jitter. The result is an RMS value: <math>\text{RandomJitter}^2 = \text{Jitter}^2 - \text{DiscreteJitter}^2</math></li> </ul>

For more information see [Chapter 4.1, "Spurs and spur removal"](#), on page 24.

Remote command:

[FETCh:PNOise<t>:SPURs?](#) on page 147

[FETCh:PNOise<t>:SPURs:DISCcrete?](#) on page 148

[FETCh:PNOise<t>:SPURs:RANDom?](#) on page 148

### Sweep Result List

The sweep result list summarizes the results of the phase noise measurement.

3 Sweep Result List						
Start	Stop	Sampling Rate	AVG	Freq Drift	Level Drift	Max Freq Drift
300.00 Hz	1.00 kHz	2.50 kHz	134	3.32 Hz	0.08 dB	35.94 mHz
1.00 kHz	3.00 kHz	7.50 kHz	1000	3.33 Hz	0.08 dB	82.92 mHz
3.00 kHz	10.00 kHz	25.00 kHz	1000	3.33 Hz	0.08 dB	219.37 mHz
10.00 kHz	30.00 kHz	75.00 kHz	1000	3.32 Hz	0.08 dB	553.48 mHz
30.00 kHz	100.00 kHz	250.00 kHz	1000	3.33 Hz	0.08 dB	2.17 Hz
100.00 kHz	300.00 kHz	750.00 kHz	1000	3.33 Hz	0.08 dB	11.45 Hz
300.00 kHz	1.00 MHz	2.50 MHz	1000	3.33 Hz	0.08 dB	105.11 Hz

The table consists of several rows with each row representing a half decade. The number of rows depends on the number of half decades analyzed during the measurement.

The sweep results are made up out of several values.

- Results in a red font indicate that the frequency drift is so large that the frequency has drifted into the range of a higher half decade. The result is therefore invalid.
- Results in a green font indicate the half decade that is currently measured.

<b>Start / Stop</b>	Shows the start and stop offset of the half decade.
<b>Sampling Rate</b>	Shows the sample rate used in the corresponding half decade.
<b>AVG</b>	Shows the number of measurements performed in the half decade to calculate the average (final) result.
<b>Freq Drift</b>	Shows the difference to the initial (nominal) frequency that was measured in the half decade.  If you perform more than one measurement (averages) in the half decade, the value is updated for each single measurement. The last value that has been measured in the half decade will remain in the table.

<b>Max Drift</b>	Shows the highest difference to the initial (nominal) frequency that was measured in the half decade.
<b>Level Drift</b>	Shows the difference to the initial (nominal) level that was measured in the half decade.  If you perform more than one measurement (averages) in the half decade, the value is updated for each single measurement. The last value that has been measured in the half decade will remain in the table.

Remote command:

Start offset: `FETCh:PNOise<t>:SWEep:START?` on page 151

Stop offset: `FETCh:PNOise<t>:SWEep:STOP?` on page 151

Sample rate: `FETCh:PNOise<t>:SWEep:SRATe?` on page 151

Averages: `FETCh:PNOise<t>:SWEep:AVG?` on page 149

Frequency drift: `FETCh:PNOise<t>:SWEep:FDRift?` on page 149

Max drift: `FETCh:PNOise<t>:SWEep:MDRift?` on page 150

Level drift: `FETCh:PNOise<t>:SWEep:LDRift?` on page 150

### Spectrum Monitor


The spectrum monitor shows the spectrum for the half decade that is currently measured.

#### Span

The span on the x-axis is defined by the start and stop frequency of the half decade that is currently measured.

#### Y-axis scale

The scale of the y-axis is automatically determined according to the signal characteristics.

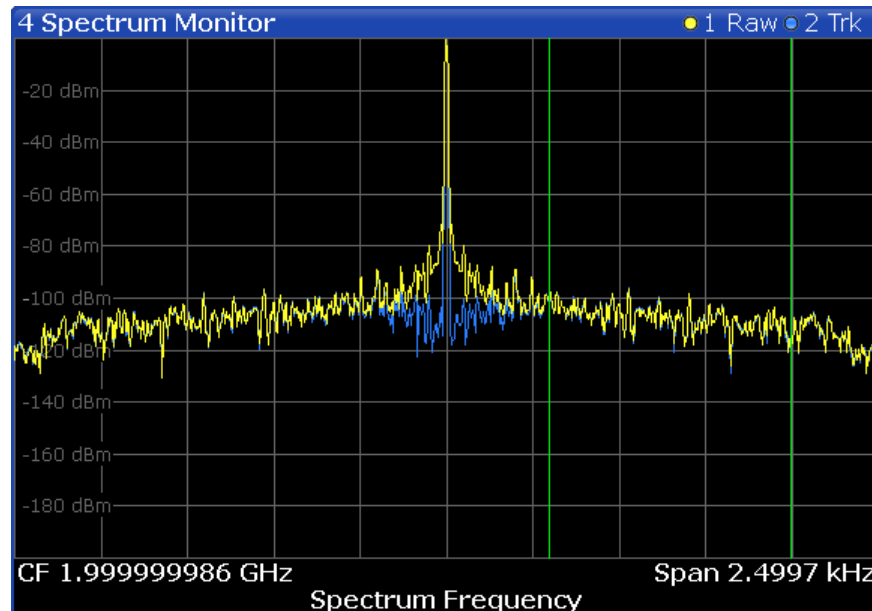

In I/Q mode, the result display contains two traces.

- The yellow trace ("raw trace") represents the live signal with the actual center frequency currently measured.

- The blue trace ("track trace") equalizes frequency drifting signals and thus shows a stable version of the signal with the intended center frequency.

If necessary, you can turn the traces on and off. For more information see "[Spectrum Monitor: Raw Trace / Trk Trace \(On Off\)](#)" on page 59.

The green vertical lines indicate the phase noise offset to be measured on in relation to the displayed center frequency. The position of the two green lines depends on the half decade that is currently measured and the sample rate you have selected.

Remote command:

`TRACe<n> [: DATA]` on page 137

### Frequency Drift

The frequency drift shows the instantaneous frequency over time for the half decade that is currently measured.


### Time span

The displayed time span on the x-axis is defined by the time it takes to perform a measurement in the half decade that is currently measured. If the measurement time for a particular half decade is very long (several seconds), the application probably updates the result display several times. In that case, the application splits the measurement into several "sub-measurements".

### Y-axis scale

The scale of the y-axis is automatically determined according to the sample rate. For a better resolution, the trace is offset by the first measured frequency value. Thus, the trace always starts at 0 Hz. The initial correction value is displayed in the diagram as a numeric result.

To get a better resolution of the time axis, use the zoom function.

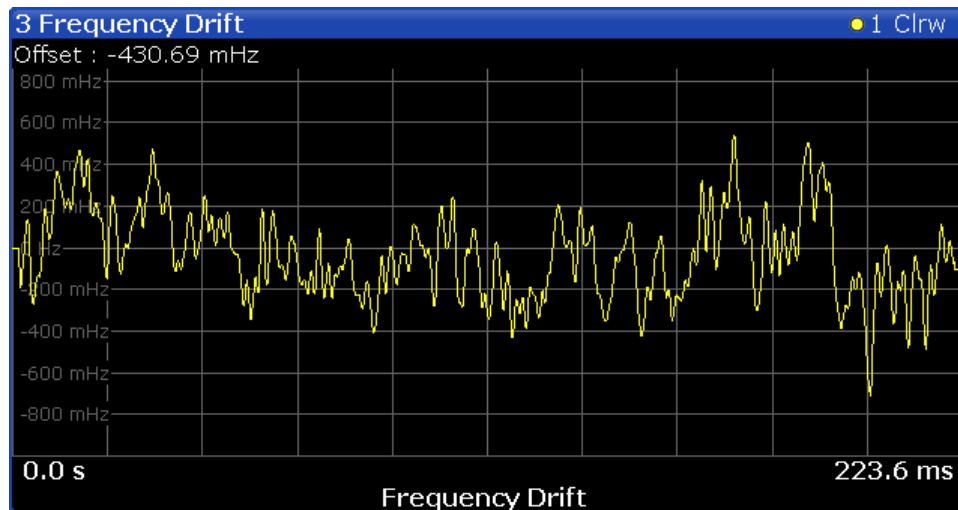





### Frequency and Level Stability

The stability results show the current level and frequency drift characteristics of the carrier signal compared to the initial frequency and level. In addition to the numerical results, the result display also contains a graphical representation of the drift characteristics.

The result display contains the following results.

- **Carrier Stability**  
Difference between the 1st frequency that has been measured and the frequency that has been measured last.
- **$\Delta$  to Ref Level**  
Difference between the 1st level that has been measured and the level that has been measured last.

2 Frequency & Level Stability				
Type	Min	Indicator	Max	Value
Carrier Stability	-3.75 kHz		3.75 kHz	0.07 Hz
$\Delta$ to Ref Level				-0.51 dB

2 Frequency & Level Stability	
<b>Carrier Stability</b>	
Min	-3.75 kHz
Indicator	
Max	3.75 kHz
Value	0.07 Hz
<b><math>\Delta</math> to Ref Level</b>	
Indicator	
Value	-0.51 dB

The results correspond to the Level Drift and Frequency Drift results displayed in the channel bar. For more information see "[Channel bar information](#)" on page 13

Note that the results are only valid for I/Q FFT measurements (see "[Global Sweep Mode](#)" on page 49).

### Reference Measurement

The reference measurement measures the inherent noise figure (DANL) of the FSW.

To determine the inherent noise, you must remove the signal from the input. The application then performs a measurement without the signal. The resulting trace shows the inherent noise of the FSW only. When you subtract that inherent noise from the phase noise of the measurement with trace mathematics, you get a trace that shows the phase noise of the DUT only.

Remote command:

[CONFigure:REFMeas](#) on page 90

## 4 Measurement basics

The measurement basics contain background information on the terminology and principles of phase noise measurements.

Phase noise measurements in general determine the single sideband phase noise characteristics of a device under test (DUT).

• <a href="#">Spurs and spur removal</a> .....	24
• <a href="#">Residual effects</a> .....	25
• <a href="#">Measurement range</a> .....	26
• <a href="#">Sweep modes</a> .....	27
• <a href="#">Trace averaging</a> .....	27
• <a href="#">Frequency determination</a> .....	29
• <a href="#">Level determination</a> .....	32
• <a href="#">Signal attenuation</a> .....	32
• <a href="#">Using limit lines</a> .....	33
• <a href="#">Analyzing several traces - trace mode</a> .....	35
• <a href="#">Using markers</a> .....	37

### 4.1 Spurs and spur removal

Most phase noise results contain unwanted spurs. Spurs are peak levels at one or more offset frequencies and are caused mostly by interfering signals. For some applications, you might want to identify the location of spurs. For other applications, spurs do not matter in evaluating the results and you might want to remove them from the trace to get a "smooth" phase noise trace.

#### Spur display

Usually, spurs are visible on the trace as a peak. In addition, the FSW draws a straight, vertical line to represent the position of a spur visually. The length of these lines indicates the level of the spur in dBc and refers to the scale on the right side of the phase noise diagram.

The lines indicating a spur are not part of the trace data. When you export the trace, for example, the spur data is not exported.

#### Spur suppression

The application allows you to (visually) remove spurs from the trace. Spur removal is based on an algorithm that detects and completely removes the spurs from the trace and fills the gaps with data that has been determined mathematically.

The spur removal functionality separates the actual spur power from the underlying phase noise and displays the latter in a two-stage process. The first stage of spur detection is based on a sliding median during the signal processing.



### Spur threshold

During the second stage, the application uses statistical methods to remove a spur. A spur is detected, if the level of the signal is above a certain threshold. The spur threshold is relative to an imaginary median trace that the application calculates.

If parts of the signal are identified as spurs, the application removes all signal parts above that level and substitutes them with the median trace.

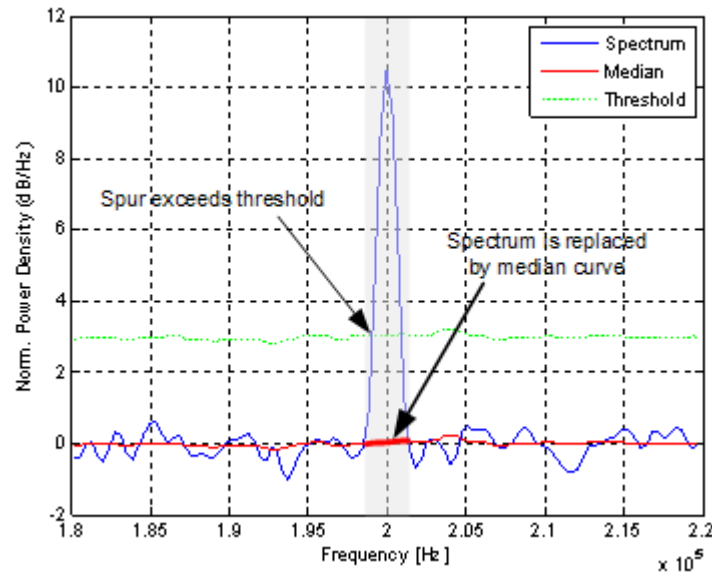


Figure 4-1: Spur detection and removal principle

## 4.2 Residual effects

Residual noise effects are modulation products that originate directly from the phase noise. It is possible to deduce them mathematically from the phase noise of a DUT.

The application calculates three residual noise effects. All calculations are based on an integration of the phase noise over a particular offset frequency range.

### Residual PM

The residual phase modulation is the contribution of the phase noise to the output of a PM demodulator. It is evaluated over the frequency range you have defined.

$$\text{Residual PM} = \sqrt{2 \cdot \int_{f_{start}}^{f_{stop}} L(f_m) df_m} \text{ [rad]}$$

with  $L(f)$  = single sideband phase noise [dBc/Hz]

### Residual FM

The residual frequency modulation is the contribution of the phase noise to the output of an FM demodulator. It is evaluated over the frequency range you have defined.

$$\text{Residual FM} = \sqrt{2 \cdot \int_{f_{\text{start}}}^{f_{\text{stop}}} f_m^2 L(f_m) df_m} \text{ [Hz]}$$

with  $L(f_m)$  = single sideband phase noise [dBc/Hz]

$f_m$  = frequency [Hz]

### Jitter

The jitter is the RMS temporal fluctuation of a carrier with the given phase noise evaluated over a given frequency range of interest.

$$\text{Jitter[s]} = \frac{\text{Residual PM [rad]}}{2\pi \cdot f_0}$$

with  $f_0$  = Carrier frequency

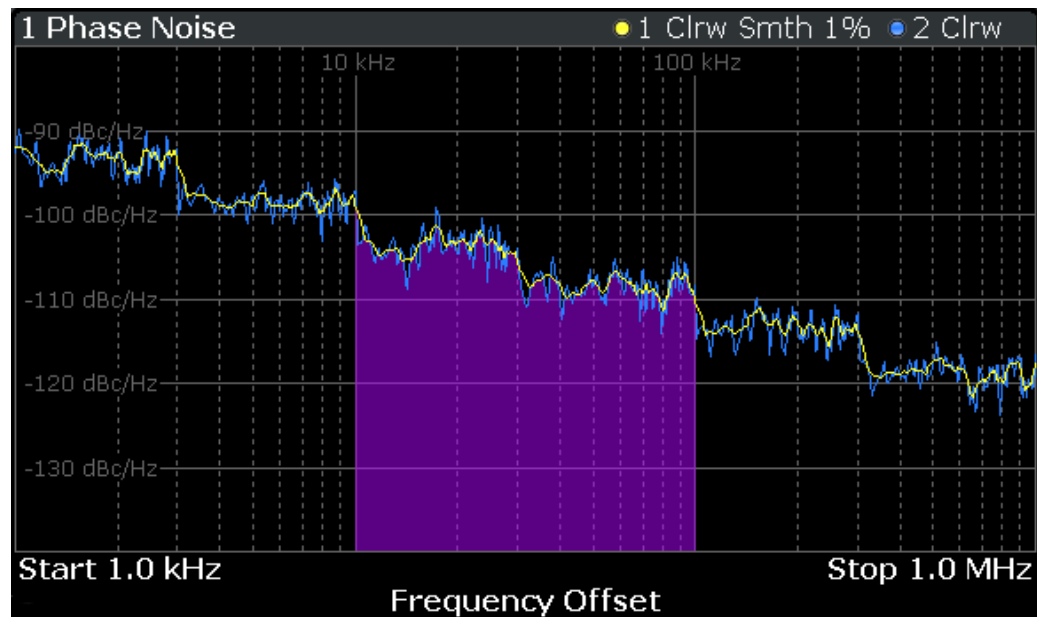


Figure 4-2: Residual noise based on an integration between 10 kHz and 100 kHz offset

## 4.3 Measurement range

Noise measurements determine the noise characteristics of a DUT over a particular measurement range. This **measurement range** is defined by two offset frequencies. The **frequency offsets** themselves are relative to the nominal frequency of the DUT.

The measurement range again is divided into several (logarithmic) decades, or, for configuration purposes, into **half decades**.

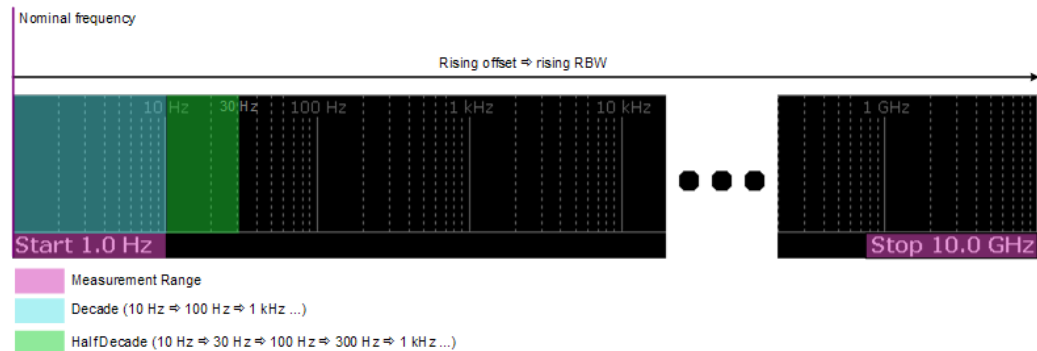


Figure 4-3: Measurement range and half decades

This breakdown into several half decades is made to speed up measurements. You can configure each half decade separately in the "Half Decade Configuration Table". For quick, standardized measurements, the application provides several predefined sweep types or allows you to configure each half decade manually, but globally.

The main issue in this context is the **resolution bandwidth (RBW)** and its effect on the measurement time. In general, it is best to use a resolution bandwidth as small as possible for the most accurate measurement results. However, accuracy comes at the price of measurement speed.

To avoid long measurement times, the application provides only a certain range of RBWs that are available for each half decade.

## 4.4 Sweep modes

Sweep modes define the data processing method.

### Swept

The application performs a sweep of the frequency spectrum.

### I/Q FFT

The application evaluates the I/Q data that has been collected and calculates the trace based on that data.

## 4.5 Trace averaging

The application provides several methods of trace averaging that you can use separately or in any combination.

The order in which averaging is performed is as follows.

1. Half decade averaging.  
The application measures each half decade a particular number of times before measuring the next one.
2. Cross-correlation  
The application performs a certain number of cross-correlation operations in each half decade.
3. Sweep count.  
The application measures the complete measurement range a particular number of times.  
It again includes half decade averaging as defined.  
After the measurement over the sweep count is finished, the application displays the averaged results.
4. Trace smoothing.  
Calculates the moving average for the current trace.

#### 4.5.1 Half decade averaging

Define the number of measurements that the application performs for each half decade before it displays the averaged results and measures the next half decade.

In combination with the RBW, this is the main factor that affects the measurement time. Usually, a small number of averages is sufficient for small RBWs, because small RBWs already provide accurate results, and a high number of averages for high RBWs to get more balanced results.

#### 4.5.2 Sweep count


The sweep count defines the number of sweeps that the application performs during a complete measurements.

A sweep in this context is the measurement over the complete measurement range once. A complete measurement, however, can consist of more than one sweep. In that case, the application measures until the number of sweeps that have been defined are done. The measurement configuration stays the same all the time.

In combination with the average trace mode and half decade averaging, the sweep count averages the trace even more.

#### 4.5.3 Trace smoothing

(Software-based) **smoothing** is a way to remove anomalies visually in the trace that can distort the results. The smoothing process is based on a moving average over the complete measurement range. The number of samples included in the averaging process (the *aperture* size) is variable and is a percentage of all samples that the trace consists of.

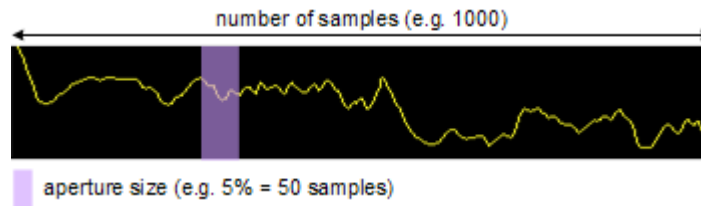

**Figure 4-4: Sample size included in trace smoothing**

The application smooths the trace only after the measurement has been finished and the data has been analyzed and written to a trace. Thus, smoothing is just an enhancement of the trace display, not of the data itself. This also means that smoothing is always applied after any other trace averagings have been done, as these happen during the measurement itself.

You can turn trace smoothing on and off for all traces individually and compare, for example, the raw and the smooth trace.

Linear smoothing is based on the following algorithm:

$$y'(s) = \frac{1}{n} \left( \sum_{x=s-\frac{n-1}{2}}^{x=s+\frac{n-1}{2}} y(x) \right)$$

**Equation 4-1: Linear trace smoothing**

Logarithmic smoothing is based on the following algorithm:

$$y'(s) = 10 \cdot \log_{10} \left( \frac{1}{n} \left( \sum_{x=s-\frac{n-1}{2}}^{x=s+\frac{n-1}{2}} 10^{\left( \frac{y(x)}{10} \right)} \right) \right)$$

**Equation 4-2: Logarithmic trace smoothing**

$y(s)$  = logarithmic phase noise level

## 4.6 Frequency determination

### Nominal frequency

The nominal frequency is the output or center frequency of the DUT. To get correct and valid measurement results, the application needs to know the real frequency of the DUT.



### Unverified signals

The FSW tries to start the measurement as soon as you enter the phase noise application. If it cannot verify a signal, it will try to start the measurement over and over.

To stop the repeated (and probably unsuccessful) signal verification, stop the measurement on the first verification failure.

The available (nominal) frequency range depends on the hardware you are using. For more information see the datasheet of the FSW.

If you are not sure about the nominal frequency, define a tolerance range to verify the frequency. For measurements on unstable or drifting DUTs, use the frequency tracking functionality.

### Frequency verification

When you are using frequency verification, the application initiates a measurement that verifies that the frequency of the DUT is within a certain range of the nominal frequency. This measurement takes place before the actual phase noise measurement. Its purpose is to find strong signals within a frequency tolerance range and, if successful, to adjust the nominal frequency and lock onto that new frequency. The frequency tolerance is variable. You can define it in absolute or relative terms.

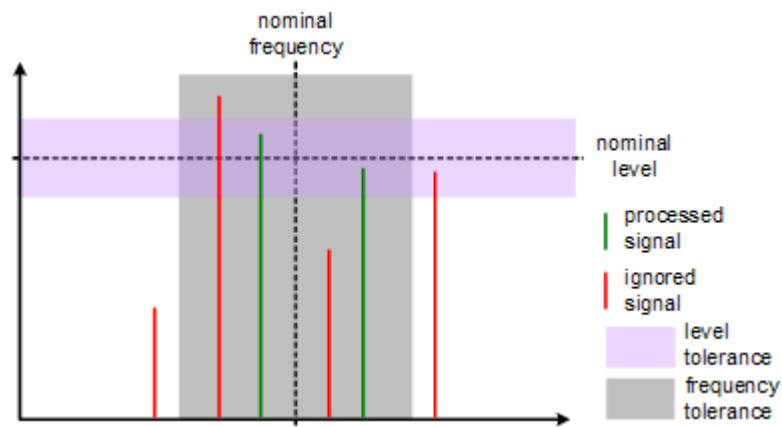


Figure 4-5: Frequency and level tolerance

You can define both absolute and relative tolerances. In that case, the application uses the higher tolerance to determine the frequency.

If there is no signal within the tolerance range, the application aborts the phase noise measurement.

In the numerical results, the application always shows the frequency the measurement was actually performed on. If the measured frequency is not the same as the nominal frequency, the numerical results also show the deviation from the nominal frequency.

### Frequency tracking

When you are using the frequency tracking, the application tracks drifting frequencies of unstable DUTs. It internally adjusts and keeps a lock on the nominal frequency of the DUT.

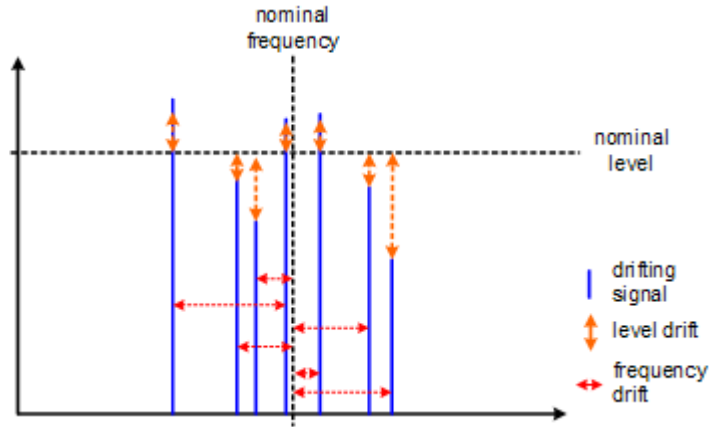


Figure 4-6: Frequency and level tracking

### Tracking bandwidth

The tracking bandwidth defines the bandwidth within which the application tracks the frequency.

Normally, the application adjusts the sample rate to the half decade it is currently measuring. For half decades that are near the carrier, the sample rate is small. Half decades far from the carrier use a higher sample rate. However, in case of drifting signals, this method may result in data loss because the default bandwidth for a half decade might be too small for the actual drift in the frequency. In that case, you can define the tracking bandwidth which increases the sample rate if necessary and thus increases the chance to capture the signal.

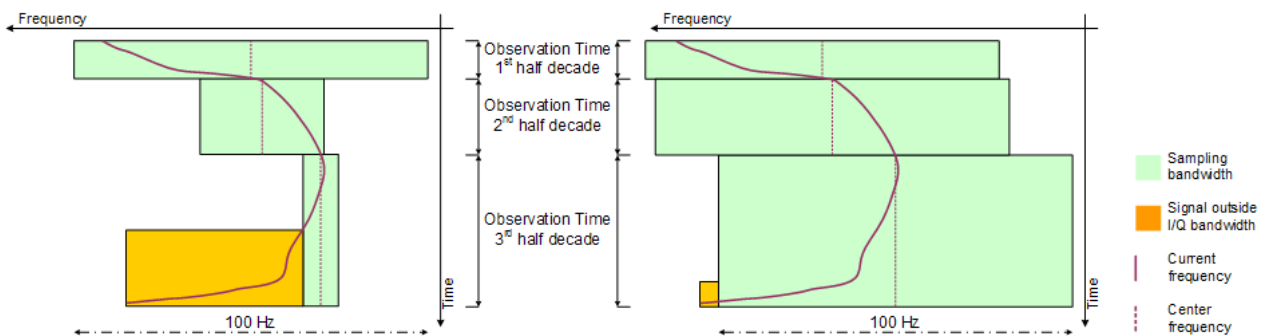


Figure 4-7: Frequency tracking with tracking bandwidth turned off (left) and a tracking bandwidth of 100 Hz (right)

## 4.7 Level determination

### Nominal level

The nominal level in other terms is the reference level of the FSW. This is the level that the analyzer expects at the RF input.

The available level range depends on the hardware. For more information see the datasheet of the FSW.

Make sure to define a level that is as close to the level of the DUT to get the best dynamic range for the measurement. At the same time make sure that the signal level is not higher than the reference level to avoid an overload of the A/D converter and thus deteriorating measurement results.

If you are not sure about the power level of the DUT, but would still like to use the best dynamic range and get results that are as accurate as possible, you can verify or track the level.

### Level verification

When you are using the level verification, the application initiates a measurement that determines the level of the DUT. If the level of the DUT is within a certain tolerance range, it will adjust the nominal level to that of the DUT. Else, it will abort the phase noise measurement.

Define a level tolerance in relation to the current nominal level. The tolerance range works for DUT levels that are above or below the current nominal level.

### Level tracking

For tests on DUTs whose level varies, use level tracking. If active, the application keeps track of the DUTs level during the phase noise measurement and adjusts the nominal level accordingly.

For a graphical representation of level verification and level tracking see the figures in [Chapter 4.6, "Frequency determination"](#), on page 29.

## 4.8 Signal attenuation

Attenuation of the signal may become necessary if you have to reduce the power of the signal that you have applied. Power reduction is necessary, for example, to prevent an overload of the input mixer. An overload of the input mixer may lead to incorrect measurement results or damage to the hardware if the signal power is too strong.

In the default state, the application automatically determines the attenuation according to the reference level. If necessary, you can also define the attenuation manually.

When you attenuate the signal, the application adjusts graphical and numerical results accordingly.



Because the reference level and attenuation are interdependent, changing the attenuation manually may also adjust the reference level.

### RF attenuation

RF attenuation is always available. It is a combination of mechanical and IF attenuation.

The mechanical attenuator is located directly after the RF input of the FSW. Its step size is 5 dB. IF attenuation is applied after the signal has been down-converted. Its step size is 1 dB.

Thus, the step size for RF attenuation as a whole is 1 dB. Mechanical attenuation is used whenever possible (attenuation levels that are divisible by 5). IF attenuation handles the 1 dB steps only.

### Example:

If you set an attenuation level of 18 dB, 15 dB are mechanical attenuation and 3 dB are IF attenuation.

If you set an attenuation level of 6 dB, 5 dB are mechanical attenuation and 1 dB is IF attenuation.

### Electronic attenuation

Electronic attenuation is available with FSW-B25. You can use it in addition to mechanical attenuation. The step size of electronic attenuation is 1 dB with attenuation levels not divisible by 5 again handled by the IF attenuator. Compared to RF attenuation, you can define the amount of mechanical and electronic attenuation freely.

## 4.9 Using limit lines

Limit lines provide an easy way to verify if measurement results are within the limits you need them to be. As soon as you turn a limit line on, the application will indicate if the phase noise a trace displays is in line with the limits or if it violates the limits.

The application provides two kinds of limit lines. 'Normal' limit lines as you know them from the Spectrum application and special thermal limit lines for easy verification of thermal noise results.

### Phase noise limit lines

Phase noise limit lines have been designed specifically for phase noise measurements. Their shape is based on the thermal noise floor of the DUT and the typical run of the phase noise curve.

The typical slope of the phase noise curve depends on the offset from the DUT frequency. In the white noise range (the noise floor), far away from the carrier, the slope is more or less 0 dB per frequency decade. In the colored noise segment, the slope is greater than 0 dB. The slope, however, is not constant in that segment, but again is typical for various carrier offset segments (or ranges).

The application supports the definition of up to five ranges, each with a different slope. The ranges themselves are defined by corner frequencies. Corner frequencies are those frequencies that mark the boundaries of typical curve slopes. If you use all five ranges, the result would be a limit line with six segments.

All segments have a slope of 10 dB per decade ( $f^{-1}$ ) by default.

In most cases, these special limit lines will suffice for phase noise measurements as they represent the typical shape of a phase noise curve.

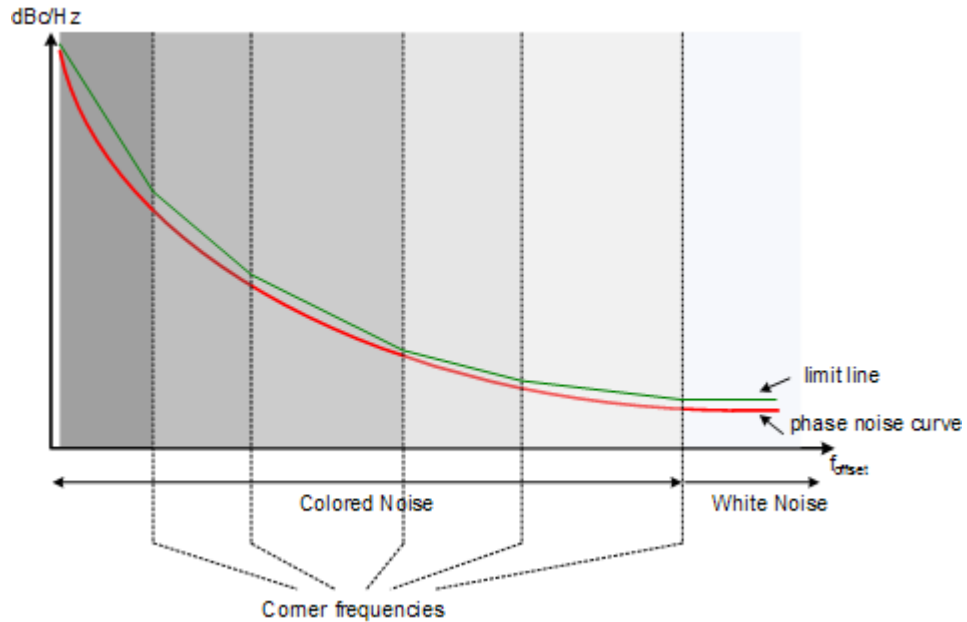


Figure 4-8: Typical looks of a special limit line

### Normal limit lines

Normal limit lines on the other hand may have any shape and may consist of up to 200 data points. You can turn on up to 8 normal limit lines at the same time. Each of those limit lines can test one or several traces.

If you want to use them for phase noise measurements however, a limit line must be scaled in the unit dBc/Hz and must be defined on a logarithmic scale on the horizontal axis.

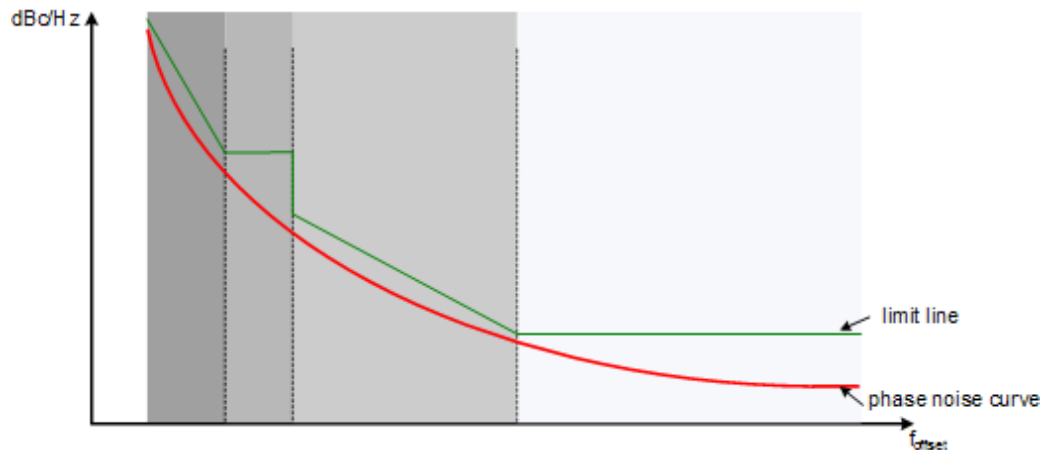


Figure 4-9: Possible looks of a normal limit line

## 4.10 Analyzing several traces - trace mode

If several sweeps are performed one after the other, or continuous sweeps are performed, the trace mode determines how the data for subsequent traces is processed. After each sweep, the trace mode determines whether:

- the data is frozen (View)
- the data is hidden (Blank)
- the data is replaced by new values (Clear Write)
- the data is replaced selectively (Max Hold, Min Hold, Average)




Each time the trace mode is changed, the selected trace memory is cleared.

The FSW provides the following trace modes:

Table 4-1: Overview of available trace modes

Trace Mode	Description
Blank	Hides the selected trace.
Clear Write	Overwrite mode: the trace is overwritten by each sweep. This is the default setting.
Max Hold	The maximum value is determined over several sweeps and displayed. The FSW saves the sweep result in the trace memory only if the new value is greater than the previous one.
Min Hold	The minimum value is determined from several measurements and displayed. The FSW saves the sweep result in the trace memory only if the new value is lower than the previous one.
Average	The average is formed over several sweeps. The sweep count determines the number of averaging procedures.
View	The current contents of the trace memory are frozen and displayed.



If a trace is frozen ("View" mode), the instrument settings, apart from level range and reference level, can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the FSW automatically adapts the trace data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

### Trace averaging algorithm

In "Average" trace mode, the sweep count determines how many traces are averaged. The more traces are averaged, the smoother the trace is likely to become.

The algorithm for averaging traces depends on the sweep mode and sweep count.

- sweep count = 0 (default)  
In continuous sweep mode, a continuous average is calculated for 10 sweeps, according to the following formula:

$$Trace = \frac{9 * Trace_{old} + MeasValue}{10}$$

Figure 4-10: Equation 1

Due to the weighting between the current trace and the average trace, past values have practically no influence on the displayed trace after about ten sweeps. With this setting, signal noise is effectively reduced without need for restarting the averaging process after a change of the signal.

- sweep count = 1  
The currently measured trace is displayed and stored in the trace memory. No averaging is performed.
- sweep count > 1  
For both "Single Sweep" mode and "Continuous Sweep" mode, averaging takes place over the selected number of sweeps. In this case the displayed trace is determined during averaging according to the following formula:

$$Trace_n = \frac{1}{n} \cdot \left[ \sum_{i=1}^{n-1} (T_i) + MeasValue_n \right]$$

Figure 4-11: Equation 2

where n is the number of the current sweep (n = 2 ... Sweep Count).

No averaging is carried out for the first sweep but the measured value is stored in the trace memory. With increasing n, the displayed trace is increasingly smoothed since there are more individual sweeps for averaging.

After the selected number of sweeps the average trace is saved in the trace memory. Until this number of sweeps is reached, a preliminary average is displayed. When the averaging length defined by the "Sweep Count" is attained, averaging is continued in continuous sweep mode or for "Continue Single Sweep" according to the following formula:

$$Trace = \frac{(N-1) * Trace_{old} + MeasValue}{N}$$

where N is the sweep count

## 4.11 Using markers

Markers are used to mark points on traces, to read out measurement results and to select a display section quickly. The application provides 4 markers.

By default, the application positions the marker on the lowest level of the trace. You can change a marker position in several ways.

- Enter a particular offset frequency in the input field that opens when you activate a marker.
- Move the marker around with the rotary knob or the cursor keys.
- Drag the marker around using the touchscreen.

### 4.11.1 Marker types

All markers can be used either as normal markers or delta markers. A normal marker indicates the absolute signal value at the defined position in the diagram. A delta marker indicates the value of the marker relative to the specified reference marker (by default marker 1).

In addition, special functions can be assigned to the individual markers. The availability of special marker functions depends on whether the measurement is performed in the frequency or time domain.

### 4.11.2 Activating markers

Only active markers are displayed in the diagram and in the marker table. Active markers are indicated by a highlighted softkey.

By default, marker 1 is active and positioned on the maximum value (peak) of trace 1 as a normal marker. If several traces are displayed, the marker is set to the maximum value of the trace which has the lowest number and is not frozen (View mode). The next marker to be activated is set to the frequency of the next lower level (next peak) as a delta marker; its value is indicated as an offset to marker 1.

A marker can only be activated when at least one trace in the corresponding window is visible. If a trace is switched off, the corresponding markers and marker functions are also deactivated. If the trace is switched on again, the markers along with coupled functions are restored to their original positions, provided the markers have not been used on another trace.

## 5 Configuration

**Access:** [MODE] > "Phase Noise"

When you activate a measurement channel in the Phase Noise application, a measurement for the input signal is started automatically with the default configuration. The "Phase Noise" menu is displayed and provides access to the most important configuration functions.

For a description see

- [Chapter 5.3, "Configuring the frontend"](#), on page 40
- [Chapter 5.4, "Controlling the measurement"](#), on page 43
- [Chapter 5.5, "Configuring the measurement range"](#), on page 46
- [Chapter 6.3, "Using limit lines"](#), on page 66
- [Chapter 6.1, "Configuring graphical result displays"](#), on page 55
- [Chapter 6.2, "Configure numerical result displays"](#), on page 64



### Automatic refresh of preview and visualization in dialog boxes after configuration changes


The FSW supports you in finding the correct measurement settings quickly and easily - after each change in settings in dialog boxes, the preview and visualization areas are updated immediately and automatically to reflect the changes. Thus, you can see if the setting is appropriate or not before accepting the changes.

• <a href="#">Configuration overview</a> .....	38
• <a href="#">Default settings for phase noise measurements</a> .....	40
• <a href="#">Configuring the frontend</a> .....	40
• <a href="#">Controlling the measurement</a> .....	43
• <a href="#">Configuring the measurement range</a> .....	46
• <a href="#">Performing measurements</a> .....	50
• <a href="#">Configuring in- and outputs</a> .....	52
• <a href="#">Automatic measurement configuration</a> .....	53

### 5.1 Configuration overview



Throughout the measurement channel configuration, an overview of the most important currently defined settings is provided in the "Overview". The "Overview" is displayed when you select the "Overview" icon, which is available at the bottom of all softkey menus.

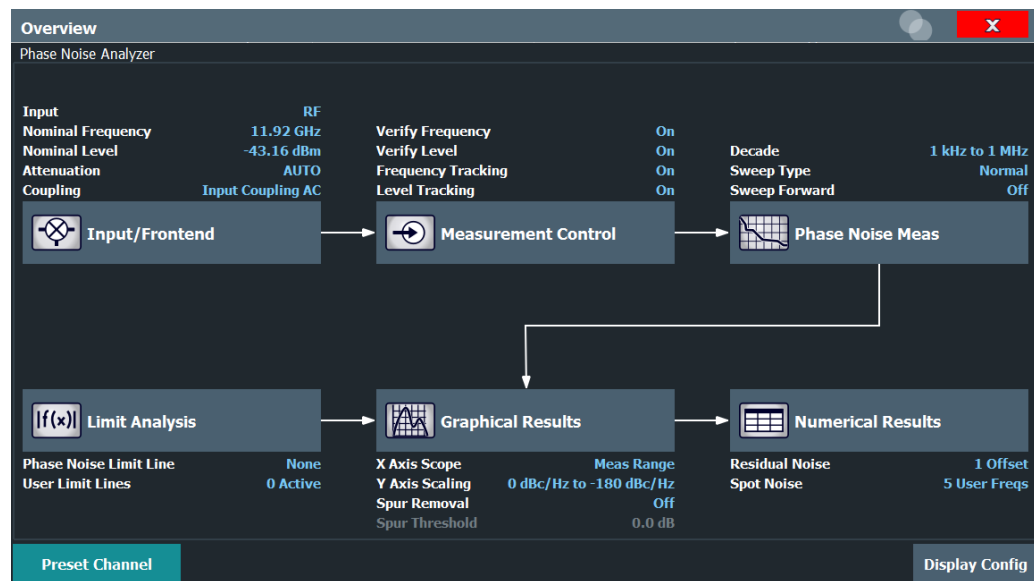

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. Thus, you can easily configure an entire measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview".

In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Frontend  
See [Chapter 5.3, "Configuring the frontend"](#), on page 40.
2. Measurement Control  
See [Chapter 5.4, "Controlling the measurement"](#), on page 43.
3. Phase Noise Measurement  
See [Chapter 5.5, "Configuring the measurement range"](#), on page 46.
4. Limit Analysis  
See [Chapter 6.3, "Using limit lines"](#), on page 66.
5. Graphical Results  
See [Chapter 6.1, "Configuring graphical result displays"](#), on page 55.
6. Numerical Results  
See [Chapter 6.2, "Configure numerical result displays"](#), on page 64.

#### To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box.  
Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

**Preset Channel**

Select "Preset Channel" in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel* to their default values.

**Note:** Do not confuse "Preset Channel" with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channels* on the FSW (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel [:EXEC]` on page 89

## 5.2 Default settings for phase noise measurements

When you enter the phase noise application for the first time, a set of parameters is passed on from the currently active application:

- nominal or center frequency
- nominal or reference level
- input coupling

After initial setup, the parameters for the measurement channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

Apart from these settings, the following default settings are activated directly after a measurement channel has been set to the Phase Noise application, or after a channel preset:

**Table 5-1: Default settings for phase noise measurement channels**


Parameter	Value
Attenuation	Auto (0 dB)
Verify frequency & level	On
Frequency & level tracking	Off
Measurement range	1 kHz ... 1 MHz
Sweep type	Normal
X-axis scaling	Measurement range
Y-axis scaling	20 dBc/Hz ... 120 dBc/Hz
Smoothing	1%
Smoothing type	Linear

## 5.3 Configuring the frontend

**Access:** "Overview" > "Input / Frontend"



The "Frontend" tab of the "Measurement Settings" dialog box contains all functions necessary to configure the frontend of the RF measurement hardware.

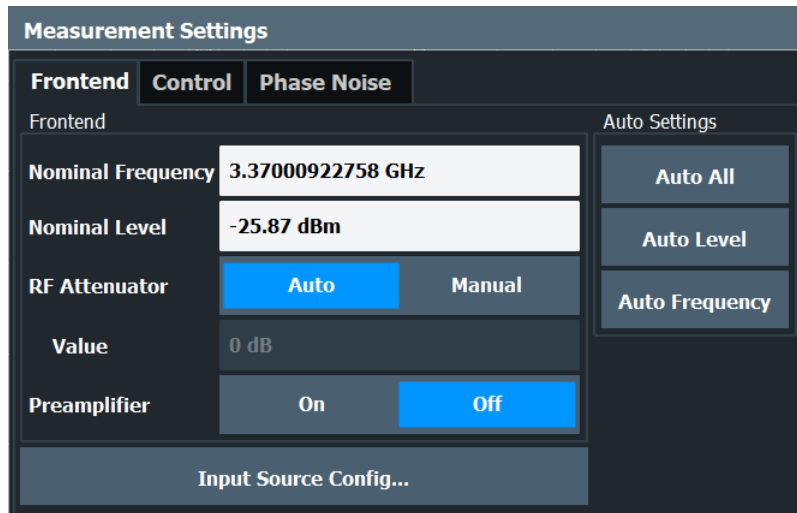

Functions to configure the RF input described elsewhere:

- [Chapter 5.7.1, "Input source configuration"](#), on page 52

<a href="#">Nominal Frequency</a> .....	41
<a href="#">Nominal Level</a> .....	41
<a href="#">Mechanical Attenuator / Value</a> .....	41
<a href="#">Coupling</a> .....	42
<a href="#">Preamplicifier</a> .....	42
<a href="#">Ext. PA Correction</a> .....	42

### Nominal Frequency

Defines the nominal frequency of the measurement.

For more information see [Chapter 4.6, "Frequency determination"](#), on page 29.

Remote command:

[\[SENSe:\] FREQuency:CENTer](#) on page 101

### Nominal Level

Defines the nominal level of the FSW.

For more information see [Chapter 4.7, "Level determination"](#), on page 32

Remote command:

[\[SENSe:\] POWer:RLEVel:VERify\[:STATe\]](#) on page 107

### Mechanical Attenuator / Value

Turns mechanical attenuation on and off.

If on, you can define an attenuation level in 5 dB steps.

For more information see [Chapter 4.8, "Signal attenuation"](#), on page 32.

Remote command:

Turning manual attenuation on and off:

[INPut:ATTenuation:AUTO](#) on page 102

Defining an attenuation level:

[INPut:ATTenuation](#) on page 102

### Coupling

Selects the coupling method at the RF input.

AC coupling blocks any DC voltage from the input signal. DC coupling lets DC voltage through.

For more information refer to the specifications document.

Remote command:

[INPut:COUPling](#) on page 159

### Preamplifier

If the (optional) internal preamplifier hardware is installed on the FSW, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low output power.

**Note:** If an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

For all FSW models except for FSW85, the following settings are available:

"Off"	Deactivates the preamplifier.
"15 dB"	The RF input signal is amplified by about 15 dB.
"30 dB"	The RF input signal is amplified by about 30 dB.

For FSW85 models, the input signal is amplified by 30 dB if the preamplifier is activated.

Remote command:

[INPut:GAIN:STATe](#) on page 103

[INPut:GAIN\[:VALue\]](#) on page 103

### Ext. PA Correction

This function is only available if an external preamplifier is connected to the FSW, and only for frequencies above 1 GHz. For details on connection, see the preamplifier's documentation.

Using an external preamplifier, you can measure signals from devices under test with low output power, using measurement devices which feature a low sensitivity and do not have a built-in RF preamplifier.

When you connect the external preamplifier, the FSW reads out the touchdown (.S2P) file from the EEPROM of the preamplifier. This file contains the s-parameters of the preamplifier. As soon as you connect the preamplifier to the FSW, the preamplifier is permanently on and ready to use. However, you must enable data correction based on the stored data explicitly on the FSW using this setting.

When enabled, the FSW automatically compensates the magnitude and phase characteristics of the external preamplifier in the measurement results. Any internal preamplifier, if available, is disabled.

For FSW85 models with two RF inputs, you can enable correction from the external preamplifier for each input individually, but not for both at the same time.

When disabled, no compensation is performed even if an external preamplifier remains connected.


Remote command:

`INPut:EGain[:STATe]` on page 102

## 5.4 Controlling the measurement

**Access:** "Overview" > "Measurement Control"

The "Control" tab of the "Measurement Settings" dialog box contains all functions necessary to control the sequence of the phase noise measurement.

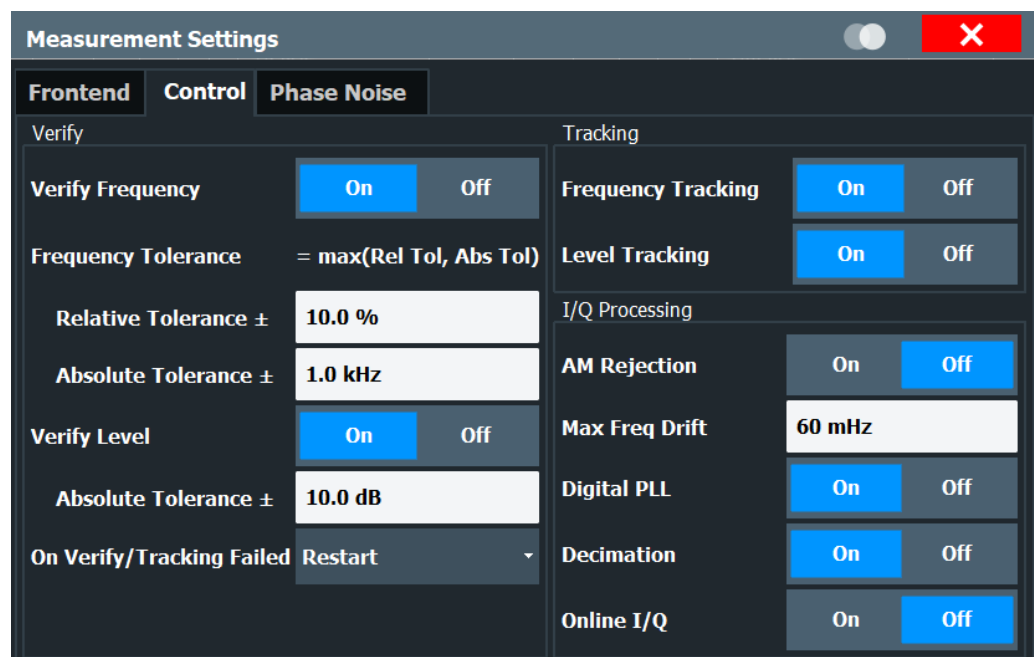

Verify Frequency.....	43
Verify Level.....	44
On Verify Failed.....	44
Frequency Tracking.....	44
Level Tracking.....	45
AM Rejection.....	45
Max Freq Drift.....	45
Digital PLL.....	45
Decimation.....	45
Online I/Q.....	46

### Verify Frequency

Turns frequency verification on and off.

If frequency verification is on, the FSW initiates the phase noise measurement only if the frequency of the DUT is within a certain frequency tolerance range. The tolerance range is either a percentage range of the nominal frequency or an absolute deviation from the nominal frequency.

If you define both an absolute and relative tolerance, the application uses the higher tolerance level.

For more information see [Chapter 4.6, "Frequency determination"](#), on page 29.

Remote command:

Verify frequency:

`[SENSe:] FREQuency:VERify[:STATe]` on page 105

Relative tolerance:

`[SENSe:] FREQuency:VERify:TOLerance[:RELative]` on page 105

Absolute tolerance:

`[SENSe:] FREQuency:VERify:TOLerance:ABSolute` on page 104

### Verify Level

Turns level verification on and off.

If level verification is on, the FSW initiates the phase noise measurement only if the level of the DUT is within a certain level tolerance range. The tolerance range is a level range relative to the nominal level.

For more information see [Chapter 4.7, "Level determination"](#), on page 32.

Remote command:

Verify level:

`[SENSe:] POWer:RLEVel:VERify[:STATe]` on page 107

Level tolerance:

`[SENSe:] POWer:RLEVel:VERify:TOLerance` on page 107

### On Verify Failed

Selects the way the application reacts if signal verification fails.

Takes effect on both frequency and level verification.

"Restart"            Restarts the measurement if verification has failed.

"Stop"                Stops the measurement if verification has failed.

"Run Auto All"      Starts an automatic frequency and level detection routine if verification has failed. After the new frequency and level have been set, the measurement restarts. For more information see [Chapter 5.8, "Automatic measurement configuration"](#), on page 53.

Remote command:

`[SENSe:] SWEep:SVFailed` on page 107

### Frequency Tracking

Turns frequency tracking on and off.

If on, the application tracks the frequency of the DUT during the phase noise measurement and adjusts the nominal frequency accordingly. The application adjusts the frequency after each half decade measurement.

For more information see [Chapter 4.6, "Frequency determination"](#), on page 29.

Remote command:

[\[SENSe:\] FREQuency:TRACk](#) on page 104

### Level Tracking

Turns level tracking on and off.

If on, the FSW tracks the level of the DUT during phase noise measurements and adjusts the nominal level accordingly. The application adjusts the level after each half decade measurement.

For more information see [Chapter 4.7, "Level determination"](#), on page 32.

Remote command:

[\[SENSe:\] POWer:RLEVel:VERify\[:STATe\]](#) on page 107

### AM Rejection

Turns the suppression of AM noise on and off.

If on, the application suppresses the AM noise that the signal contains in order to display phase noise as pure as possible.

AM rejection is available for the I/Q sweep mode.

Remote command:

[\[SENSe:\] REJect:AM](#) on page 107

### Max Freq Drift

Defines the minimum bandwidth or sample rate used in the signal processing to increase the probability of capture drifting signals.

The tracking bandwidth is valid for all half decades measured in I/Q mode.

Remote command:

[\[SENSe:\] IQ:TBW](#) on page 106

### Digital PLL

Turns an additional frequency correction based on the I/Q data on and off.

If on, the application is able to track frequency changes during the I/Q data capture that would otherwise fall into the half decade measurement bandwidth (see [Max Freq Drift](#)).

The digital PLL works for all half decades measured in I/Q mode.

Remote command:

[\[SENSe:\] IQ:DPLL](#) on page 106

### Decimation

Turns decimation on and off.

When you turn on decimation, the samples that have already been used for a given half decade are resampled in lower half decades. Reusing these samples results in lower measurement times in the lower half decades, because less samples have to be recorded there.

To get valid results for lower offset frequencies, make sure to use an appropriate sample rate.

This feature is especially useful when you are measuring half decades with very low offset frequencies.

Using decimation is available for the "I/Q FFT" sweep mode.

Remote command:

[\[SENSe:\]IQ:DECimation](#) on page 105

### Online I/Q

Turns the online measurement mode for I/Q measurements on and off.

When you turn the online measurement mode on, the application records smaller amounts of data at a time. It is thus able to process that data faster, because it does not have to wait until the I/Q capture buffer is full, before processing the data.. The result is that the measurement results are updated faster.

This mode is useful to measure the phase noise at small offset frequencies, because the small bandwidths required to measure these offset frequencies usually lead to long measurement times (and especially when you apply averaging).

In the Half Decade Configuration Table, half decades that are measured in online mode are highlighted in a darker shade of green (compared to the shade of green that is used to highlight the half decades that are taken into account in the measurement).

10 kHz	30 kHz	300 Hz	10	I/Q FFT	Blackman-Harris	< 0.1 s
30 kHz	100 kHz	1 kHz	10	I/Q FFT	Blackman-Harris	< 0.1 s

Light green = normal I/Q mode

Dark green = online I/Q mode

The online measurement mode is available under the following conditions:

- Only half decades with a frequency offset smaller than 30 kHz can be measured in online mode.
- The half decades that you want to measure in online mode have to be set to "I/Q FFT" sweep mode.
- [Decimation](#) has to be turned on.
- [Sweep Forward](#) has to be turned off.


Remote command:

[\[SENSe:\]IQ:ONLine](#) on page 106

## 5.5 Configuring the measurement range

**Access:** "Overview" > "Phase Noise Meas"

The "Phase Noise" tab of the "Measurement Settings" dialog box contains all functions necessary to configure the measurement range for phase noise measurements, including individual range settings.

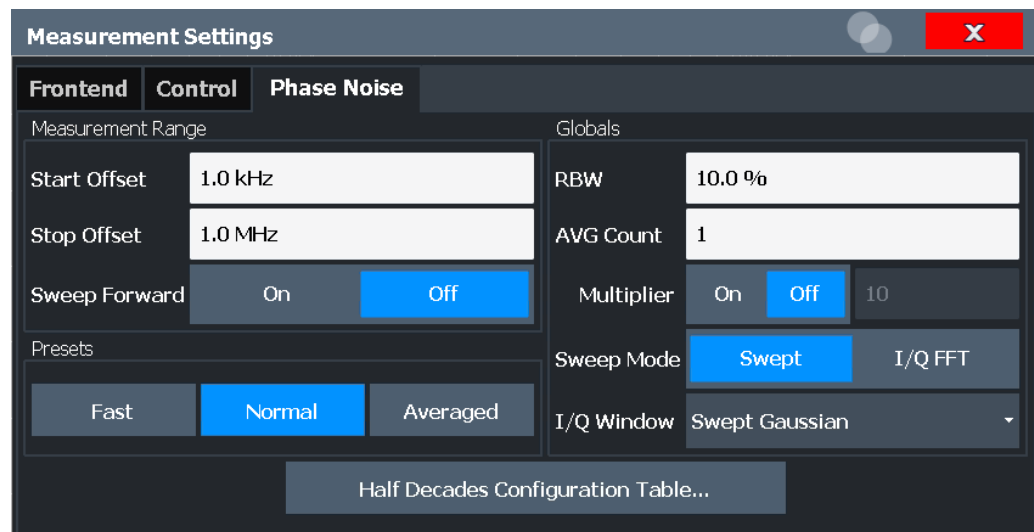

Range Start / Stop.....	47
Sweep Forward.....	47
Presets.....	48
Global RBW.....	48
Global Average Count.....	48
Multiplier.....	48
Global Sweep Mode.....	49
Global I/Q Window.....	49
Half Decades Configuration Table.....	49

### Range Start / Stop

Defines the frequency offsets that make up the measurement range.

Note that the maximum offset you can select depends on the hardware you are using.

If a preamplifier is used, make sure the entire frequency range is covered by the pre-amplifier.

(See "Preamplifier" on page 42)

Remote command:

Measurement Range Start

[SENSe:] FREQuency: START on page 109

Measurement Range Stop

[SENSe:] FREQuency: STOP on page 110

### Sweep Forward

Selects the sweep direction. Forward and reverse sweep direction are available.

Forward sweep direction performs a measurement that begins at the smallest frequency offset you have defined. The measurement ends after the largest offset has been reached.

Reverse sweep direction performs a measurement that begins at the largest frequency offset you have defined. The measurement ends after the smallest offset has been reached. The reverse sweep is the default sweep direction because the application is able to lock on a drifting carrier frequency in that case.

Remote command:

[SENSe:] SWEep:FORWARD on page 113

### Presets

Selects predefined measurement settings for each individual half decade that are used for the measurement.

If the measurement settings differ from one of the preset states, the application displays a symbol (✱) at the label.

"Fast"	Fast measurements perform one measurement in each half decade. No averaging takes place.
"Normal"	Normal measurements use averaging for some half decades, but with respect to measurement speed.
"Average"	Average measurements use averaging for all half decades. However, you have to put up with slower measurement speed.

Remote command:

[SENSe:] SWEep:MODE on page 113

### Global RBW

Defines the resolution bandwidth for all half decades globally.

The resulting RBW is a percentage of the start frequency of the corresponding half decade.

If the resulting RBW is not available, the application rounds to the next available bandwidth.

You can also change the global bandwidth with the "RBW Global" softkey in the "Bandwidth" menu.

Remote command:

[SENSe:] LIST:RANGe<range>:BWIDth[:RESolution] on page 110

### Global Average Count

Defines the number of measurements that the application uses to calculate averaged results in each half decade.

The range is 1 to 10000.

Remote command:

[SENSe:] LIST:SWEep:COUNT on page 112

### Multiplier

Turns a multiplier that changes the average count in each half decade on and off.

If on, you can define a value that multiplies the number of averages currently defined for each half decade by that value.

When you turn it off, the original averages are restored and used again.



**Example:**

You have three half decades:

- 1st half decade average count: 1
- 2nd half decade average count: 3
- 3rd half decade average count: 5

If you turn the multiplier on and define a value of 5, the average count changes as follows:

- 1st half decade average count: 5
- 2nd half decade average count: 15
- 3rd half decade average count: 25

Remote command:

[\[SENSe:\]LIST:SWEep:COUNT:MULTIplier](#) on page 112

[\[SENSe:\]LIST:SWEep:COUNT:MULTIplier:STATE](#) on page 112

**Global Sweep Mode**

Selects the analysis mode for all half decades. The sweep mode defines the way the application processes the data.

For more information see [Chapter 4.4, "Sweep modes"](#), on page 27.

"Normal" Uses spectrum analyzer data for the data analysis.

"I/Q / FFT" Uses I/Q data for the data analysis.

Remote command:

[\[SENSe:\]LIST:BWIDth\[:RESolution\]:TYPE](#) on page 110

**Global I/Q Window**

Selects the window function for all half decades.

The window function is available for I/Q analysis.

"Blackman Harris" Blackman Harris window.

"Chebychev" Chebychev window.

"Gaussian" Gaussian window.

"Rectangular" Rectangular window.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:IQWindow:TYPE](#) on page 111

**Half Decades Configuration Table**

Contains all functionality to configure the phase noise measurement range.

"Start" Shows the offset frequency that the half decade starts with.

"Stop" Shows the offset frequency that the half decade stops with.

**Tip:** Note that double-clicking on one of the start or stop offset values is an easy way to adjust the measurement range.

"RBW" Selects resolution bandwidth for the half decade.

To avoid invalid measurements and long measurement times, the availability of RBW for each half decade is limited.

"Sweep Mode"	Selects the measurement mode. The measurement mode is the way the application analyzes the data. <ul style="list-style-type: none"> <li>• Swept</li> <li>• I/Q / FFT</li> </ul> For more information see <a href="#">Chapter 4.4, "Sweep modes"</a> , on page 27.
"AVG"	Defines the number of averagings that the application performs before the results for a half decade are displayed.
"Window"	Selects the window type for a half decade. Window functions are available for I/Q measurements.
"Meas Time"	Shows an estimation of how long the measurement of a half decade lasts.

Remote command:

RBW:

[\[SENSe:\]LIST:RANGe<range>:BWIDth\[:RESolution\]](#) on page 110

Sweep Mode

[\[SENSe:\]LIST:RANGe<range>:FILTer:TYPE](#) on page 111

Averages:

[\[SENSe:\]LIST:RANGe<range>:SWEep:COUNT](#) on page 112

Window:

[\[SENSe:\]LIST:RANGe<range>:IQWindow:TYPE](#) on page 111

## 5.6 Performing measurements

**Access:** [SWEEP]

The "Sweep" menu contains all functionality necessary to control and perform phase noise measurements.

Functions to configure the sweep described elsewhere:

- ["Multiplier"](#) on page 48
- ["Global Average Count"](#) on page 48

<a href="#">Continuous Sweep / Run Cont</a> .....	50
<a href="#">Single Sweep / Run Single</a> .....	51
<a href="#">Continue Single Sweep</a> .....	51
<a href="#">Sweep/Average Count</a> .....	51
<a href="#">Finish Half Decade</a> .....	52

### Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, "Continuous Sweep" and [RUN CONT] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

**Note:** Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes

effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the FSW User Manual.

Remote command:

`INITiate<n>:CONTInuous` on page 91

### Single Sweep / Run Single

While the measurement is running, "Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

**Note:** Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

For details on the Sequencer, see the FSW User Manual.

Remote command:

`INITiate<n>[:IMMediate]` on page 91

### Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.

While the measurement is running, "Continue Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

`INITiate<n>:CONMeas` on page 90

### Sweep/Average Count

Defines the number of sweeps to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed.

The sweep count is applied to all the traces in all diagrams.

If the trace modes "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if "Sweep Count" = 0 (default), averaging is performed over 10 sweeps. For "Sweep Count" = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

`[SENSe:]SWEep:COUNT` on page 113

**Finish Half Decade**

Aborts the measurement in the current half decade and continues measuring the subsequent half decade.

Averaged results displayed for a half decade finished prematurely are based on the number of measurements already done.

Remote command:

[SENSe:] SWEep: FHDecade on page 92

## 5.7 Configuring in- and outputs

The "In- / Output" menu contains all functionality necessary to control and perform phase noise measurements.

The R&S FSW Phase Noise Measurement application can also process input from an external mixer. For details on configuring the external mixer see the manual of the FSW.

- [Input source configuration](#).....52

### 5.7.1 Input source configuration

**Access:** "Overview" > "Input / Frontend" > "Input Source Config"

The "Radio Frequency" dialog box contains functionality to configure the input source.

Note that the "Radio Frequency (On Off)" button is unavailable in the FSW-K40

<a href="#">Coupling</a> .....	52
<a href="#">Direct Path</a> .....	52
<a href="#">YIG-Preselector</a> .....	53
<a href="#">Input Connector</a> .....	53

**Coupling**

Selects the coupling method at the RF input.

AC coupling blocks any DC voltage from the input signal. DC coupling lets DC voltage through.

For more information refer to the specifications document.

Remote command:

INPut:COUPling on page 159

**Direct Path**

Enables or disables the use of the direct path for small frequencies.

In spectrum analyzers, passive analog mixers are used for the first conversion of the input signal. In such mixers, the LO signal is coupled into the IF path due to its limited isolation. The coupled LO signal becomes visible at the RF frequency 0 Hz. This effect is referred to as LO feedthrough.

To avoid the LO feedthrough the spectrum analyzer provides an alternative signal path to the A/D converter, referred to as the *direct path*. By default, the direct path is selected automatically for RF frequencies close to zero. However, this behavior can be disabled. If "Direct Path" is set to "Off", the spectrum analyzer always uses the analog mixer path.

"Auto" (Default) The direct path is used automatically for frequencies close to zero.

"Off" The analog mixer path is always used.

Remote command:

[INPut:DPATH](#) on page 159

### YIG-Preselector

Enables or disables the YIG-preselector.

This setting requires an additional option on the FSW.

An internal YIG-preselector at the input of the FSW ensures that image frequencies are rejected. However, image rejection is only possible for a restricted bandwidth. To use the maximum bandwidth for signal analysis you can disable the YIG-preselector at the input of the FSW, which can lead to image-frequency display.

**Note:** Note that the YIG-preselector is active only on frequencies greater than 8 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

To use the optional 90 GHz frequency extension ( FSW-B90G), the YIG-preselector must be disabled.

Remote command:

[INPut:FILTer:YIG\[:STATe\]](#) on page 159

### Input Connector

Selects the input source.

The Phase Noise application supports the following input sources:

- RF Input
- Analog Baseband Input  
The "Baseband Input I" requires option FSW-B71.

Remote command:

[INPut:CONNector](#) on page 159

## 5.8 Automatic measurement configuration

**Access:** [AUTO SET]

The "Auto Set" menu contains all functionality necessary to determine measurement parameters automatically.

<a href="#">Adjusting all Determinable Settings Automatically (Auto All)</a> .....	54
<a href="#">Adjusting the Center Frequency Automatically (Auto Frequency)</a> .....	54
<a href="#">Setting the Reference Level Automatically (Auto Level)</a> .....	54

**Adjusting all Determinable Settings Automatically (Auto All)**

Activates all automatic adjustment functions for the current measurement settings, including:

- [Auto Frequency](#)
- [Auto Level](#)

Remote command:

[\[SENSe:\]ADJust:ALL](#) on page 160

**Adjusting the Center Frequency Automatically (Auto Frequency)**

The FSW adjusts the center frequency automatically.

The optimum center frequency is the frequency with the highest S/N ratio in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

Remote command:

[\[SENSe:\]ADJust:FREQuency](#) on page 160

**Setting the Reference Level Automatically (Auto Level)**

Automatically determines a reference level which ensures that no overload occurs at the FSW for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the full-scale level) are adjusted. As a result, the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the FSW.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 160

## 6 Analysis


The application provides various means and methods to analyze and evaluate measurement results.

- [Configuring graphical result displays](#)..... 55
- [Configure numerical result displays](#)..... 64
- [Using limit lines](#)..... 66
- [Using markers](#)..... 73

### 6.1 Configuring graphical result displays

**Access:** "Overview" > "Graphical Results"

The "Graphical" tab of the "Results" dialog box and the "Trace" menu contains all functions necessary to set up and configure the graphical phase noise result displays.

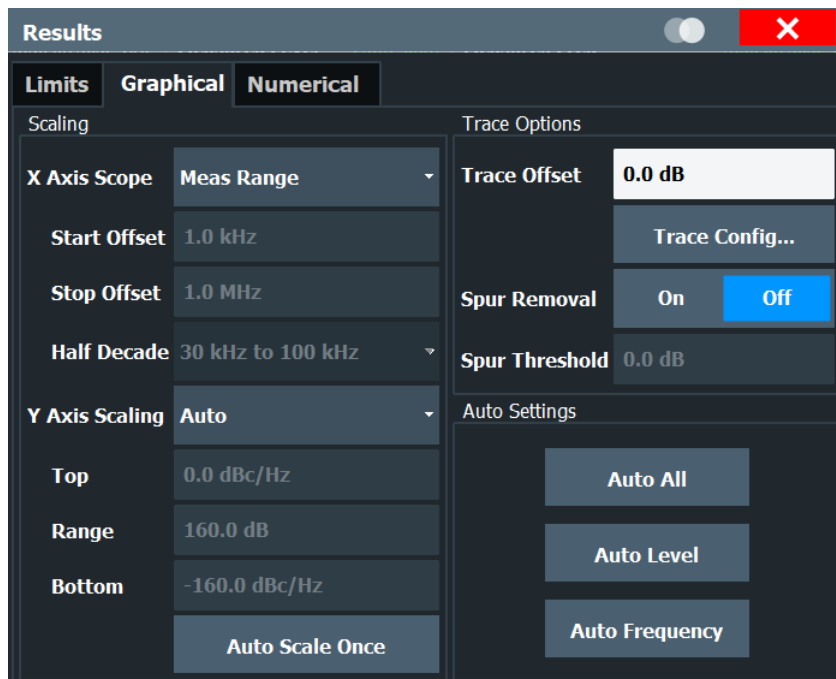

- [Scaling the diagram](#)..... 56
- [Configuring traces](#)..... 57
- [Copying traces](#)..... 59
- [Trace/data ex/import](#)..... 59
- [Trace math](#)..... 62
- [Trace labels](#)..... 63

### 6.1.1 Scaling the diagram

X-Axis Scope.....	56
X-Axis Start / Stop.....	56
Half Decade.....	56
Y Axis Scaling.....	56
Top / Range / Bottom.....	57
Auto Scale Once.....	57

#### X-Axis Scope

Selects the way the application scales the horizontal axis.

"Half Decade" The horizontal axis shows one half decade that you can select.

"Manual" The horizontal axis shows a detail of the measurement range that you can define freely.

"Meas Range" The horizontal axis shows the complete measurement range.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:SCOPE` on page 130

#### X-Axis Start / Stop

Defines the start and stop frequency of the horizontal axis.

Note that the displayed frequency range is a detail of the measurement range. Regardless of the displayed frequency range, the application still performs all measurement over the measurement range you have defined.

The range depends on the measurement range. and possible increments correspond to the half decades.

Available for a manual "X Axis Scope".

Remote command:

X-axis start:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:START` on page 130

X-axis stop:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:STOP` on page 131

#### Half Decade

Selects the half decade that is displayed.

Available if you have selected the half decade "X Axis Scope".

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:HDECade` on page 129

#### Y Axis Scaling

Selects the type of scaling for the vertical axis.

"Auto" Automatically scales the vertical axis.

"Top & Bottom" Allows you to set the values at the top and bottom of the vertical axis.

"Top & Range" Allows to set the value at the top of the vertical axis and its range.

"Bottom & Range" Allows you to set the value at the bottom of the vertical axis and its range.



Remote command:

Automatic scaling:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO` on page 132

Manual scaling:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MANual` on page 132

### Top / Range / Bottom

Define the top and bottom values or the range of the vertical axis.

Top defines the top values of the vertical axis. The unit is dBm/Hz.

Bottom defines the bottom value of the vertical axis. The unit is dBm/Hz.

Range defines the range of the vertical axis. The unit is dB.

The availability of the three fields depends on the type of manual "Y Axis Scaling" you have selected.

Remote command:

Top:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 133

Range:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 131

Bottom:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:LOWer` on page 133

### Auto Scale Once

Automatically scales the vertical axis for ideal viewing.

## 6.1.2 Configuring traces

Trace Offset.....	57
Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6.....	57
Trace Mode.....	58
Smoothing.....	58
Spur Removal / Spur Threshold.....	58
Predefined Trace Settings - Quick Config.....	59
Spectrum Monitor: Raw Trace / Trk Trace (On Off).....	59

### Trace Offset

**Access:** "Overview" > "Graphical Results" > "Graphical" tab

Defines a trace offset in dB.

The trace offset moves the trace vertically by the level you have defined.

The range is from -200 dB to 200 dB.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 133

### Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the corresponding trace for configuration. The currently selected trace is highlighted.

Remote command:

Selected via numeric suffix of:TRACe<1 . . . 6> commands

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>\[:STATe\]](#) on page 129

### Trace Mode

Defines the update mode for subsequent traces.

"Clear/ Write"	Overwrite mode (default): the trace is overwritten by each sweep. All available detectors can be selected.
"Max Hold"	The maximum value is determined over several measurements and displayed. The FSW saves the sweep result in the trace memory only if the new value is greater than the previous one.
"Min Hold"	The minimum value is determined from several measurements and displayed. The FSW saves the sweep result in the trace memory only if the new value is lower than the previous one.
"Average"	The average is formed over several sweeps.
"View"	The current contents of the trace memory are frozen and displayed. <b>Note:</b> If a trace is frozen, you can change the measurement settings, apart from scaling settings, without impact on the displayed trace. The fact that the displayed trace no longer matches the current measurement settings is indicated by a yellow asterisk * on the tab label. If you change any parameters that affect the scaling of the diagram axes, the FSW automatically adapts the trace data to the changed display range. Thus, you can zoom into the diagram after the measurement to show details of the trace.
"Blank"	Removes the selected trace from the display.

Remote command:

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:MODE](#) on page 127

### Smoothing

If enabled, the trace is smoothed by the specified value (between 1 % and 50 %). The smoothing value is defined as a percentage of the display width. The larger the smoothing value, the greater the smoothing effect.

Remote command:

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:SMOothing\[:STATe\]](#) on page 128

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:SMOothing:APERture](#) on page 127

### Spur Removal / Spur Threshold

Turns spur removal for all traces on and off and defines the threshold for spur removal.

For more information see [Chapter 4.1, "Spurs and spur removal"](#), on page 24.

Note that you can also remove spurs for individual traces in the "Trace Config" dialog box.

Remote command:

Turn spur suppression on and off:

[\[SENSe:\]SPURs:SUPPpress](#) on page 136

Set the threshold:

[SENSe:] SPURs: THReshold on page 137

### Predefined Trace Settings - Quick Config

Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

Function	Trace Settings	
Preset All Traces	Trace 1:	Clear Write
		Blank
Set Trace Mode Max   Avg   Min	Trace 1:	Max Hold
	Trace 2:	Average
	Trace 3:	Min Hold
		Blank
Set Trace Mode Max   ClrWrite   Min	Trace 1:	Max Hold
	Trace 2:	Clear Write
	Trace 3:	Min Hold
		Blank

### Spectrum Monitor: Raw Trace / Trk Trace (On Off)

**Access:** [TRACE] for selected Spectrum Monitor window

Turns the traces displayed in the Spectrum Monitor result display on and off.

"Raw Trace (On Off)" controls the yellow trace.

"Trk Trace (On Off)" controls the blue trace.

## 6.1.3 Copying traces

### Copy Trace

**Access:** "Overview" > "Analysis" > "Traces" > "Copy Trace"

**Or:** [TRACE] > "Copy Trace"

Copies trace data to another trace.

The first group of buttons (labeled "Trace 1" to "Trace 6") selects the source trace. The second group of buttons (labeled "Copy to Trace 1" to "Copy to Tace 6") selects the destination.

Remote command:

TRACe<n>:COPY on page 137


## 6.1.4 Trace/data ex/import

**Access:** [TRACE] > "Trace Config" > "Trace / Data Export"

The FSW provides various evaluation methods for the results of the performed measurements. However, you may want to evaluate the data with other, external applications. In this case, you can export the measurement data to a standard ASCII format file (DAT or CSV). You can also import existing trace data from a file, for example as a reference trace (Spectrum application only).



The standard data management functions (e.g. saving or loading instrument settings) that are available for all FSW applications are not described here.

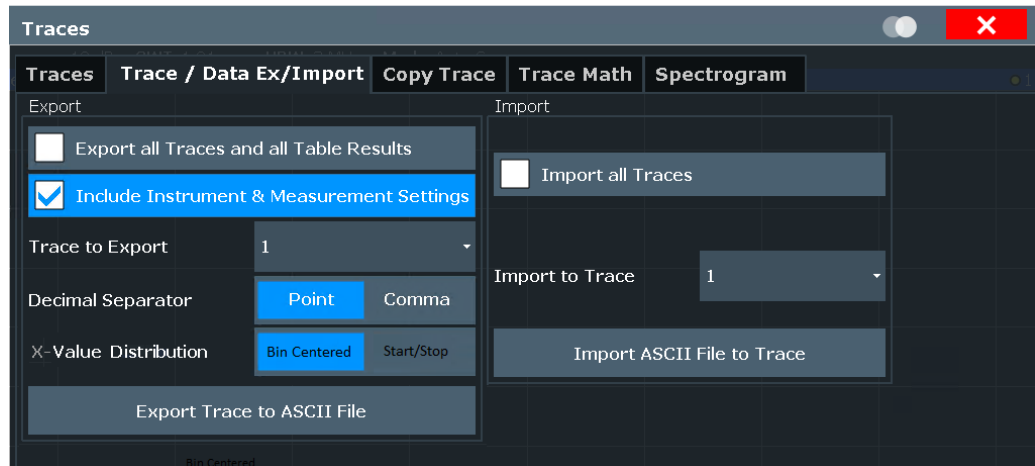

Export all Traces and all Table Results.....	60
Include Instrument & Measurement Settings.....	60
Trace to Export.....	61
Decimal Separator.....	61
X-Value Distribution.....	61
Export Trace to ASCII File.....	61
Importing Traces.....	61
L Import All Traces/Import to Trace.....	62
L Import ASCII File to Trace.....	62
L File Explorer.....	62

### Export all Traces and all Table Results

Selects all displayed traces and result tables (e.g. "Result Summary", marker table etc.) in the current application for export to an ASCII file.

Alternatively, you can select one specific trace only for export (see [Trace to Export](#)).

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

[FORMat:DEXPort:TRACes](#) on page 134

### Include Instrument & Measurement Settings

Includes additional instrument and measurement settings in the header of the export file for result data.

Remote command:

[FORMat:DEXPort:HEADer](#) on page 134

### Trace to Export

Defines an individual trace to be exported to a file.

This setting is not available if [Export all Traces and all Table Results](#) is selected.

### Decimal Separator

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 134

### X-Value Distribution

Defines how the x-values of the trace are determined in the frequency domain.

"Bin-Centered" The full measurement span is divided by the number of sweep points to obtain *bins*. The x-value of the sweep point is defined as the x-value at the center of the bin (bin/2).

"Start/Stop" (Default): The x-value of the first sweep point corresponds to the starting point of the full measurement span. The x-value of the last sweep point corresponds to the end point of the full measurement span. All other sweep points are divided evenly between the first and last points.

Remote command:

[FORMat:DEXPort:XDIStrib](#) on page 135

### Export Trace to ASCII File

Opens a file selection dialog box and saves the selected trace in ASCII format (.dat) to the specified file and directory.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

**Note:** Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the FSW base unit user manual.

Remote command:

[MMEMory:STORe<n>:TRACe](#) on page 136

### Importing Traces

Trace data that was stored during a previous measurement can be imported to the Spectrum application, for example as a reference trace.

**Import All Traces/Import to Trace ← Importing Traces**

If the import file contains more than one trace, you can import several traces at once, overwriting the existing trace data for any active trace in the result display with the same trace number. Data from the import file for currently not active traces is not imported.

Alternatively, you can import a single trace only, which is displayed for the trace number specified in "Import to Trace". This list contains all currently active traces in the result display. If a trace with the specified number exists in the import file, that trace is imported. Otherwise, the first trace in the file is imported (indicated by a message in the status bar).

Remote command:

[FORMat:DIMPort:TRACes](#) on page 135

**Import ASCII File to Trace ← Importing Traces**

Loads one trace or all traces from the selected file in the selected ASCII format (.DAT or .CSV) to the currently active result display.

Remote command:

[FORMat:DIMPort:TRACes](#) on page 135

**File Explorer ← Import ASCII File to Trace ← Importing Traces**

Opens the Microsoft Windows File Explorer.

Remote command:


not supported

**6.1.5 Trace math**

**Access:** [TRACE] > "Trace Math"

**Or:** "Overview" > "Analysis" > "Traces" > "Trace Math"

If you have several traces with different modes, for example an average trace and a maximum trace, it may be of interest to compare the results of both traces. In this example, you could analyze the maximum difference between the average and maximum values. To analyze the span of result values, you could subtract the minimum trace from the maximum trace. For such tasks, the results from several traces can be combined using mathematical functions.

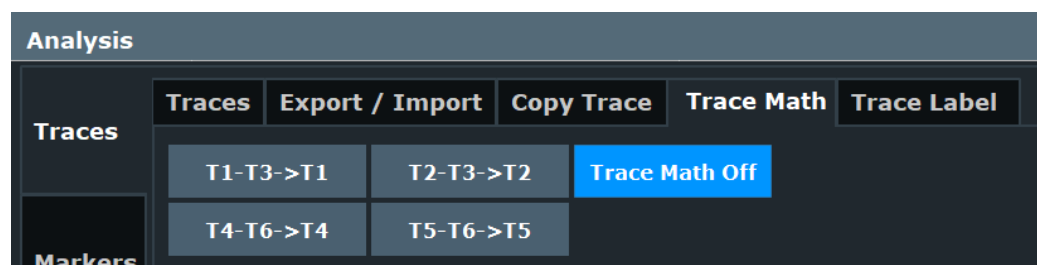

[Trace Math Function](#)..... 63

[Trace Math Off](#)..... 63

### Trace Math Function

You can select one of several different math operations.

Each operation subtracts one trace from another as indicated on the corresponding button and writes the result to one of the traces. "T1 - T3 > T1", for example, subtracts trace 3 from trace 1 and writes the result to trace 1. You can apply one operation at a time.

"T1-T3->T1"	Subtracts trace 3 from trace 1
-------------	--------------------------------

To switch off the trace math, use the [Trace Math Off](#) button.

Remote command:

[CALCulate<n>:MATH<t>\[:EXPRession\] \[:DEFine\]](#) on page 126

[CALCulate<n>:MATH<t>:STATe](#) on page 126

### Trace Math Off

Deactivates any previously selected trace math functions.


Remote command:

`CALC:MATH:STAT OFF`, see [CALCulate<n>:MATH<t>:STATe](#) on page 126

## 6.1.6 Trace labels

**Access:** "Overview" > "Analysis" > "Traces" > "Trace Label"

Trace labels are a way to assign a descriptive label to traces instead of the general "Trace <x>" label (default). The labels you use are arbitrary and are displayed in the diagram area. The font color corresponds to the color of the respective trace (for example yellow trace: yellow font).

 

*Figure 6-1: Example: the yellow and blue traces have a label.*

You can define trace labels in the "Trace Label" tab of the "Trace" dialog box.

### How to assign trace labels

Trace labels can be configured via the "Trace Labels" dialog box.

1. Turn on the trace label for a specific trace and assign a label in the corresponding input field.  
Note that a trace must be active. Otherwise assigning a label is not possible.
2. Move the trace label to any position on the display by dragging it to the new position.

Remote command:

State: [DISPlay\[:WINDow<n>\]:TRACe<t>:LABel\[:STATe\]](#) on page 137

Label: [DISPlay\[:WINDow<n>\]:TRACe<t>:LABel:TEXT](#) on page 138

## 6.2 Configure numerical result displays

**Access:** "Overview" > "Numerical Results"

The "Numerical" tab of the "Results" dialog box contains all functions necessary to set up and configure the numerical phase noise result displays.

**Results**

**Limits** **Graphical** **Numerical**

Residual Noise

Range	Meas	Manual	1.0 kHz	1.0 MHz
User Ranges	None		1.0 kHz	1.0 MHz
	None		1.0 kHz	1.0 MHz
	None		1.0 kHz	1.0 MHz

Spot Noise

Sort by Frequency:  On  Off

On all Decade Edges:  On  Off

On User Defined Offsets:  On  Off

<input checked="" type="checkbox"/>	1.0 kHz
<input checked="" type="checkbox"/>	10.0 kHz
<input checked="" type="checkbox"/>	100.0 kHz
<input checked="" type="checkbox"/>	1.0 MHz
<input checked="" type="checkbox"/>	10.0 MHz

### 6.2.1 Configuring residual noise measurements

Meas Range.....	64
User Range.....	65

#### Meas Range

Turns the integration of the entire measurement range for residual noise calculations on and off.

The range defined here is applied to all traces.



"Meas"	The application calculates the residual noise over the entire measurement range.
"Manual"	The application calculates the residual noise over a customized range. The input fields become available to define a customized integration range. The application shows two red lines ("EL1" and "EL2") in the graphical result display to indicate the custom range.

Remote command:

Turn customized range on and off:

[CALCulate<n>:EVALuation\[:STATe\]](#) on page 139

Define start point of custom range:

[CALCulate<n>:EVALuation:START](#) on page 139

Define end point of custom range:

[CALCulate<n>:EVALuation:USER<range>:STOP](#) on page 140

### User Range

Defines a custom range for residual noise calculations. You have to assign a user range to a particular trace.

In the default state, user ranges are inactive. "None" is selected in the dropdown menu. If you assign the user range to a trace by selecting one of the traces from the dropdown menu, the input fields next to the trace selection become active. In these fields, you can define a start and stop offset frequency.

Remote command:

Selecting a trace:

[CALCulate<n>:EVALuation:USER<range>:TRACe](#) on page 141

Define start frequency of user range:

[CALCulate<n>:EVALuation:START](#) on page 139

Define stop frequency of user range:

[CALCulate<n>:EVALuation:USER<range>:STOP](#) on page 140

## 6.2.2 Configuring spot noise measurements

<a href="#">Sort by Frequency</a> .....	65
<a href="#">On All Decade Edges</a> .....	65
<a href="#">On User Defined Offsets / Offset Frequency</a> .....	66

### Sort by Frequency

If enabled, the spot noise result table is sorted in ascending order of the offset frequency from the carrier.

### On All Decade Edges

Turns the calculation of spot noise on all 10<sup>x</sup> offset frequencies on and off.

Remote command:

Turn on and off spot noise calculation on 10<sup>x</sup> offset frequencies:

[CALCulate<n>:SNOise<m>:DECades\[:STATe\]](#) on page 144

Querying spot noise results on 10<sup>x</sup> offset frequencies:

[CALCulate<n>:SNOise<m>:DECades:X](#) on page 145

[CALCulate<n>:SNOise<m>:DECades:Y](#) on page 145

### On User Defined Offsets / Offset Frequency

Turns custom spot noise frequencies on and off.

If on, the "Offset Frequency" input fields become available. You can measure the spot noise for up to five custom offset frequencies. If active, the application adds those spots to the spot noise table.

Remote command:

Turning spot noise marker on and off:

[CALCulate<n>:SNOise<m>:DECades\[:STATe\]](#) on page 144

[CALCulate<n>:SNOise<m>:AOFF](#) on page 144

Positioning spot noise markers:

[CALCulate<n>:SNOise<m>:X](#) on page 146


Querying custom spot noise results:

[CALCulate<n>:SNOise<m>:Y](#) on page 146

## 6.3 Using limit lines

**Access:** "Overview" > "Limit Analysis"

The "Limits" tab of the "Results" dialog box contains all functions necessary to set up and configure limit lines.

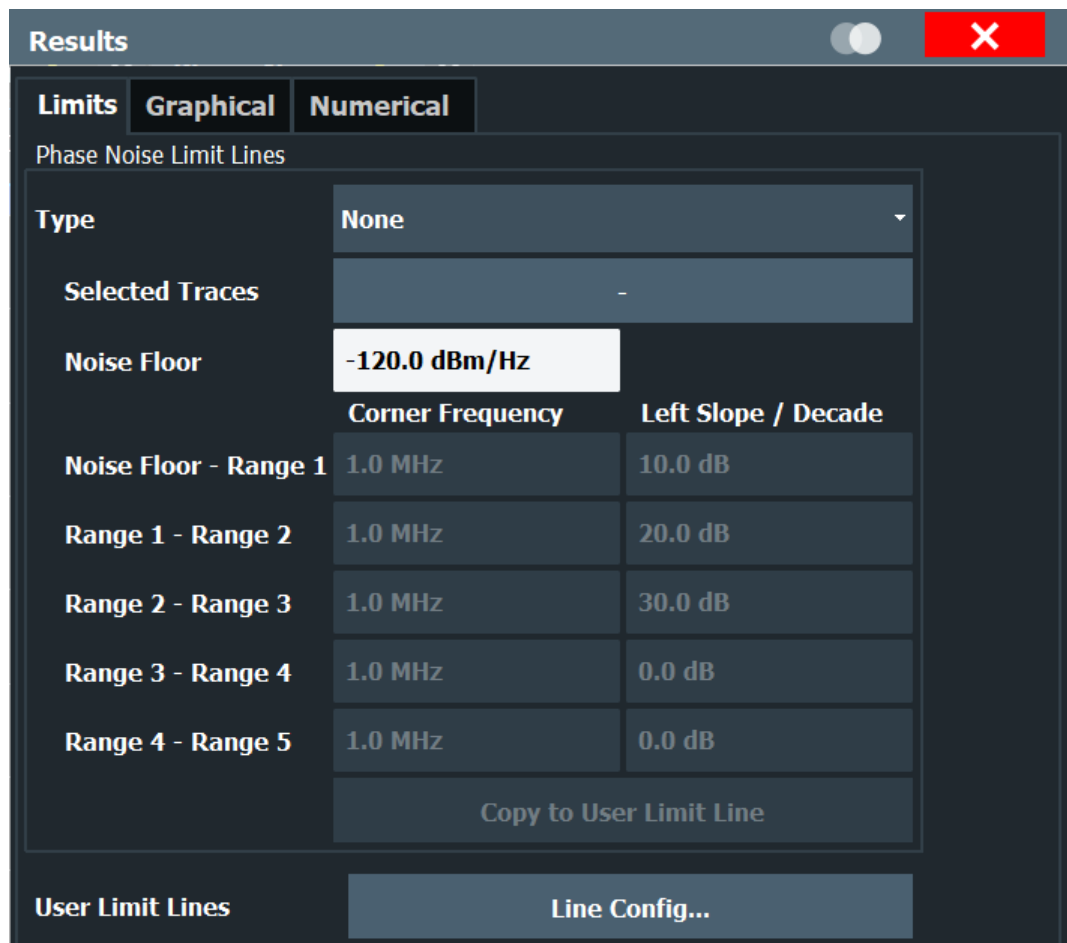

### 6.3.1 Using phase noise limit lines

Phase Noise Limit Line.....	67
Selected Traces.....	67
Noise Floor.....	68
Range x - Range y.....	68
Copy to User Limit Line.....	68

#### Phase Noise Limit Line

Selects the shape of the phase noise limit line.

For more information see [Chapter 4.9, "Using limit lines"](#), on page 33.

"None" No limit line.

"Noise floor and x Ranges" Limit line defined by the noise floor and x corner frequencies and slopes. The application supports up to 5 ranges.

Remote command:

`CALCulate<n>:PNLimit:TYPE` on page 116

#### Selected Traces

Selects the trace(s) to assign a phase noise limit line to.

For more information see [Chapter 4.9, "Using limit lines"](#), on page 33.

Remote command:

`CALCulate<n>:PNLimit:TRACe` on page 115

### Noise Floor

Defines the noise floor level in dBm/Hz of the DUT.

For more information see [Chapter 4.9, "Using limit lines"](#), on page 33.

Remote command:

`CALCulate<n>:PNLimit:NOISe` on page 115

### Range x - Range y

Defines the corner frequencies and slope for a particular segment of phase noise limit lines.

The slope defines the slope of the limit line segment to the left of the corner frequency.

For more information see [Chapter 4.9, "Using limit lines"](#), on page 33.

Remote command:

Corner frequencies:

`CALCulate<n>:PNLimit:FC<1 to 5>` on page 115

Slope:

`CALCulate<n>:PNLimit:SLOPe<segment>` on page 117

### Copy to User Limit Line

Creates a new user limit line from the data of a phase noise limit line.

The file is stored in the default folder for user limit lines. You can load and edit the limit line via the "Select Limit Line" dialog box. For more information see ["Select Limit Line"](#) on page 69.

Remote command:

`CALCulate<n>:PNLimit:COpy<k>` on page 114

## 6.3.2 Selecting standard limit lines


**Access:** "Overview" > "Limit Analysis" > "Line Config"

Select Limit Line.....	69
L Name.....	69
L Unit.....	69
L Compatible.....	69
L Visible.....	69
L Check Traces.....	70
L Comment.....	70
L View Filter.....	70
L New / Edit / Copy To.....	70
L Delete.....	70
L Disable All Lines.....	71

### Select Limit Line

The "Select Limit Line" dialog box contains functionality to include standard limit lines in the measurement.

The dialog box consists of a table that shows all available limit lines and their characteristics and a few buttons to manage individual limit lines.

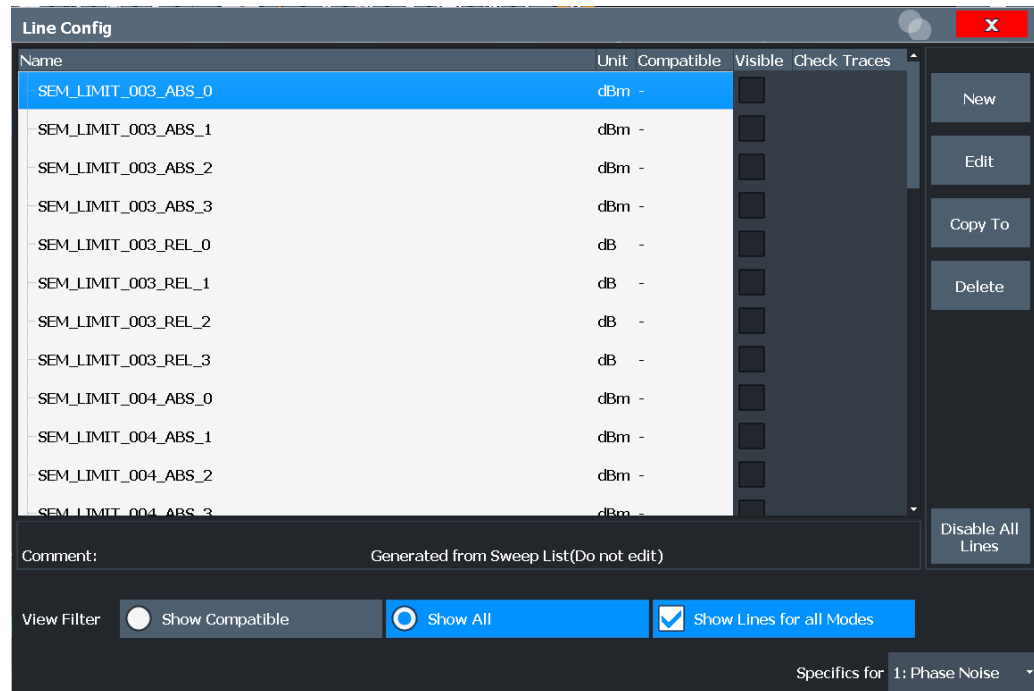

#### Name ← Select Limit Line

Shows the name of the limit line.

#### Unit ← Select Limit Line

Shows the unit of the limit line.

#### Compatible ← Select Limit Line

Shows if the limit line is compatible to the current measurement setup or not.

"Yes"                    You can use the limit line because it is compatible to the current measurement setup.

"No"                     You cannot use the limit line because it is compatible to the current measurement setup.

#### Visible ← Select Limit Line

Displays a limit line in the diagram area.

You can display up to eight limit lines at the same time.

Remote command:

Display a limit line:

Lower limit: `CALCulate<n>:LIMit<li>:LOWer:STATe` on page 119

Upper limit: `CALCulate<n>:LIMit<li>:UPPer:STATe` on page 121

Query all visible limit lines:

[CALCulate<n>:LIMit<li>:ACTive?](#) on page 117

#### **Check Traces** ← **Select Limit Line**

Turns the limit check for a particular trace on and off.

Remote command:

Assign a limit line to a particular trace:

[CALCulate<n>:LIMit<li>:TRACe<t>](#) on page 120

Activate the limit check:

[CALCulate<n>:LIMit<li>:STATe](#) on page 120

Querying limit check results:

[CALCulate<n>:LIMit<li>:FAIL?](#) on page 119

#### **Comment** ← **Select Limit Line**

Shows the comment of the selected limit line. If the limit line has no comment, this field stays empty.

#### **View Filter** ← **Select Limit Line**

Turns filter for the list of limit lines on and off.

By default, the list includes all limit lines that are stored on the FSW.

"Show Compatible"	Filters the list of limit lines by compatibility. If on, the list includes only those limit lines that are compatible to the current measurement setup.
"Show Lines For PNoise"	Filters the list of limit lines by compatibility to phase noise measurements. If on, the list includes only those limit lines that are compatible to phase noise measurements.

#### **New / Edit / Copy To** ← **Select Limit Line**

All three buttons open the "Edit Limit Line" dialog box to create or edit limit lines.

When you use "New", the dialog box contains no data.

When you use "Edit", the dialog box contains the data of the previously selected limit line.

When you use "Copy To", the dialog box also contains a copy the data of the previously selected limit line.

Remote command:

New:

[CALCulate<n>:LIMit<li>:NAME](#) on page 119

Copy:

[CALCulate<n>:LIMit<li>:COPY](#) on page 118

#### **Delete** ← **Select Limit Line**

Deletes the selected limit line.

Remote command:

[CALCulate<n>:LIMit<li>:DELete](#) on page 118

**Disable All Lines ← Select Limit Line**

Turns all active limit lines off.

**6.3.3 Creating and editing standard limit lines**


**Access:** "Overview" > "Limit Analysis" > "Line Config" > "New" / "Edit" > "Copy To"

- Edit Limit Line.....71
  - L Name..... 71
  - L Comment..... 72
  - L X-Axis..... 72
  - L Y-Axis..... 72
  - L Data Points..... 72
  - L Insert Value..... 73
  - L Delete Value..... 73
  - L Shift X..... 73
  - L Shift Y..... 73
  - L Save..... 73

**Edit Limit Line**

The "Edit Limit Line" dialog box contains functionality to describe the shape of a limit line.

Because limit lines have to meet certain conditions for phase noise measurements, the availability of parameters is limited.

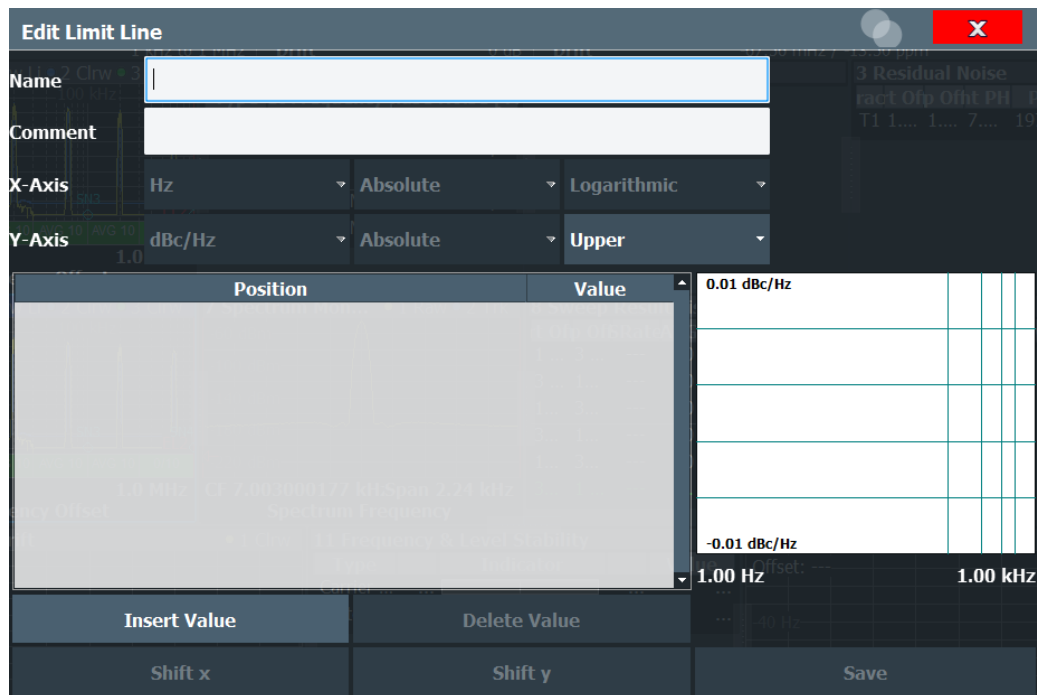

**Name ← Edit Limit Line**

Defines the name of a limit line.

Remote command:

[CALCulate<n>:LIMit<li>:NAME](#) on page 119

#### **Comment ← Edit Limit Line**

Defines a comment for the limit line.

A comment is not mandatory.

Remote command:

[CALCulate<n>:LIMit<li>:COMMent](#) on page 122

#### **X-Axis ← Edit Limit Line**

Defines the characteristics of the horizontal axis.

The characteristics consist of the unit, the scaling and the type of values.

In the Phase Noise application, the unit for the horizontal axis is always Hz. The scaling can either be logarithmic or linear

"Unit" In the Phase Noise application, the unit is always Hz.

"Scaling" In the Phase Noise application, the scaling of the horizontal axis is always logarithmic.

"Type of Values" The type of values can be absolute values or relative to the nominal frequency.

Remote command:

Type of values:

[CALCulate<n>:LIMit<li>:LOWer:MODE](#) on page 123

[CALCulate<n>:LIMit<li>:UPPer:MODE](#) on page 124

#### **Y-Axis ← Edit Limit Line**

Defines the characteristics of the vertical axis.

The characteristics consist of the unit, the type of values and the usage of the line.

"Unit" In the Phase Noise application, the unit is always dBc/Hz.

"Type of Values" In the Phase Noise application, the type of values is always absolute.

"Line usage" Selects if the limit line is used as an upper or lower limit line.

#### **Data Points ← Edit Limit Line**

The data points define the shape of the limit line. A limit line consists of at least 2 data points and a maximum of 200 data points.

A data point is defined by its position in horizontal ("Position" column) and vertical direction ("Value" column). The position of the data points have to be in ascending order.

Remote command:

Horizontal data (position):

[CALCulate<n>:LIMit<li>:CONTrol\[:DATA\]](#) on page 122

Vertical data (value):

Lower limit: [CALCulate<n>:LIMit<li>:LOWer\[:DATA\]](#) on page 123

Upper limit: [CALCulate<n>:LIMit<li>:UPPer\[:DATA\]](#) on page 124



**Insert Value ← Edit Limit Line**

Insert a new limit line data point below the selected data point.

**Delete Value ← Edit Limit Line**

Deletes the selected limit line data point.

**Shift X ← Edit Limit Line**

Shifts each data point horizontally by a particular amount.

Remote command:

`CALCulate<n>:LIMit<li>:CONTRol:SHIFt` on page 122

**Shift Y ← Edit Limit Line**

Shifts each data point vertically by a particular amount.

Remote command:

Lower limit: `CALCulate<n>:LIMit<li>:LOWer:SHIFt` on page 124

Upper limit: `CALCulate<n>:LIMit<li>:UPPer:SHIFt` on page 125

**Save ← Edit Limit Line**

Saves the limit line or the changes you have made to a limit line.

## 6.4 Using markers


**Access** (marker position): [MKR] > "Marker Config" > "Markers"

**Access** (marker settings): [MKR] > "Marker Config" > "Marker Settings"


The "Marker Configuration" dialog box and the "Marker" menu contain all functionality necessary to control markers.

The "Marker Configuration" dialog box consists of two tabs.

The "Markers" tab contains functionality to define characteristics for each marker.

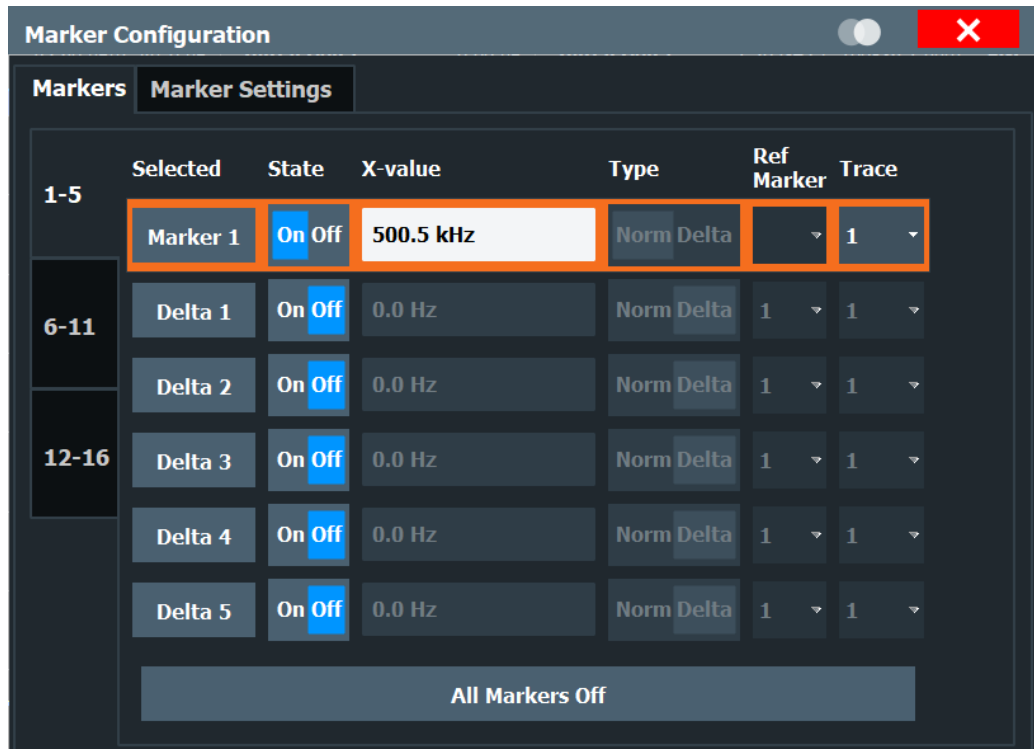

The "Marker Settings" tab contains general marker functionality.

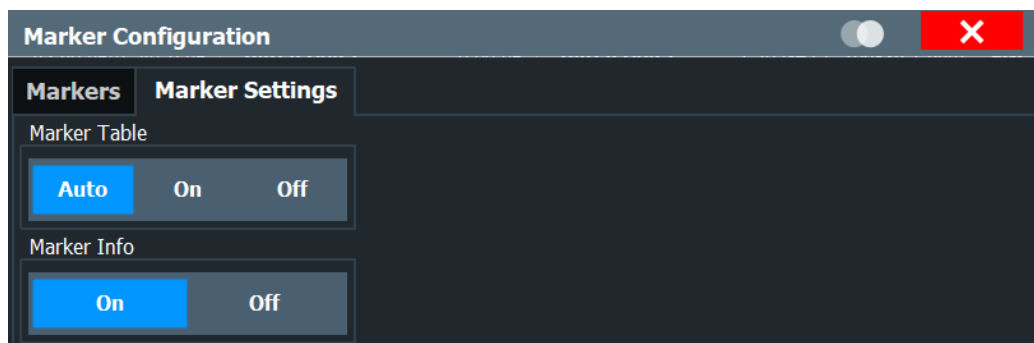

Marker 1 ... Marker x.....	74
Marker Type.....	75
Reference Marker.....	75
Assigning the Marker to a Trace.....	75
Marker Zoom.....	75
All Markers Off.....	76
Marker Table Display.....	76
Marker Info.....	76

**Marker 1 ... Marker x**

Selects and turns the corresponding marker on and off.

Turning on a marker also opens an input field to define the horizontal position of the marker.

In the "Marker Configuration" dialog box, you can also define the horizontal position of each marker ("x-value").

By default, the first marker you turn on is a normal marker, all others are delta markers.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 152

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 155

### Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

**Note:** If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal"            A normal marker indicates the absolute value at the defined position in the diagram.

"Delta"            A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 152

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 155

### Reference Marker

Defines a marker as the reference marker which is used to determine relative analysis results (delta marker values).

Remote command:

[CALCulate<n>:DELTAmarker<m>:MREference](#) on page 154

### Assigning the Marker to a Trace

The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 153

### Marker Zoom

Turns the marker zoom on and off.

The marker zoom magnifies the diagram area around marker 1 by a certain factor.

Turning on the zoom also opens an input field to define the zoom factor.

Remote command:

Turning on the zoom:

[DISPlay\[:WINDow<n>\]:ZOOM\[:STATe\]](#) on page 158

Defining the zoom factor:

[CALCulate<n>:MARKer<m>:FUNction:ZOOM](#) on page 158

### All Markers Off

Deactivates all markers in one step.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 152

### Marker Table Display

Defines how the marker information is displayed.


"On"	Displays the marker information in a table in a separate area beneath the diagram.
"Off"	No separate marker table is displayed. If <a href="#">Marker Info</a> is active, the marker information is displayed within the diagram area.
"Auto"	(Default) If more than two markers are active, the marker table is displayed automatically. If <a href="#">Marker Info</a> is active, the marker information for up to two markers is displayed in the diagram area.

Remote command:

[DISPlay\[:WINDow<n>\]:MTABLE](#) on page 157

### Marker Info

Turns the marker information displayed in the diagram on and off.

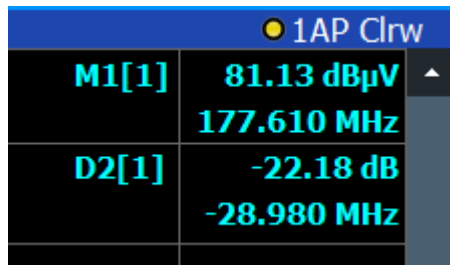

1AP Clrw	
M1[1]	81.13 dBµV 177.610 MHz
D2[1]	-22.18 dB -28.980 MHz

Remote command:

[DISPlay\[:WINDow<n>\]:MINFo\[:STATe\]](#) on page 157

# 7 How to configure phase noise measurements

## 7.1 Performing a basic phase noise measurement

1. In the Spectrum application, define the center frequency of the DUT.
2. Enter the "Phase Noise" application.  
The FSW-K40 starts the measurement with the default configuration. The default configuration defines most settings automatically.  
If you need any custom configuration, define them after entering the Phase Noise application.
3. Layout the display as required via the SmartGrid.
4. Open the "Overview" dialog box to configure the measurement.
5. Configure the frontend (frequency, level etc.) via the "Frontend" dialog box.
6. Define the measurement range via the "Phase Noise" dialog box.
7. Turn on frequency and level tracking via the "Control" dialog box.
8. Run a single sweep.
9. Turn on a marker and read out the results.
10. Read out the residual noise over the measurement range.
11. Customize a residual noise range and read out the results.
12. Freeze trace 1 and 2 (trace mode: View).
13. Turn on trace 3 and 4 (trace mode: Clear/Write).
14. Switch the measurement mode to "IQ FFT" in the "Phase Noise" dialog box.
15. Repeat the measurement.

## 7.2 Customizing the measurement range

The application provides several ways to customize. Each method features a different level of details you can define.

1. Open the "Phase Noise" configuration via the "Overview" dialog box or the "Meas Config" softkey menu.

2. Define the frequency offset range you would like to measure in the corresponding fields.
3. Select the "Sweep Type".
  - a) Select sweep types "Fast", "Normal" or "Averaged" for automatic measurement configuration.

For a custom configuration, proceed to set up each measurement parameter separately.
4. Define the "RBW", number of "Averages", sweep "Mode" and "I/Q Window" function.
  - a) Define the parameters globally for all (half) decades covered by the measurement range.
  - b) Define the parameters for each individual (half) decade covered by the measurement range in the "Half Decade Configuration Table".

## 8 Remote control commands for phase noise measurements

The following remote control commands are required to configure and perform phase noise measurements in a remote environment. The FSW must already be configured for remote operation in a network as described in the base unit manual.



### Universal functionality

Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the FSW user manual.

In particular, this includes:

- Managing settings and results, i.e. storing and loading settings and result data.
- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation.
- Using the common status registers (specific status registers for pulse measurements are not used).



### SCPI Recorder - automating tasks with remote command scripts

The R&S FSW Phase Noise Measurement application also supports the SCPI Recorder functionality.

Using the SCPI Recorder functions, you can create a SCPI script directly on the instrument and then export the script for use on the controller. You can also edit or write a script manually, using a suitable editor on the controller. For manual creation, the instrument supports you by showing the corresponding command syntax for the current setting value.

For details see the "Network and Remote Operation" chapter in the FSW User Manual.

• <a href="#">Common suffixes</a> .....	80
• <a href="#">Introduction</a> .....	80
• <a href="#">Controlling the phase noise measurement channel</a> .....	85
• <a href="#">Performing measurements</a> .....	89
• <a href="#">Configuring the result display</a> .....	93
• <a href="#">Configuring the frontend</a> .....	101
• <a href="#">Controlling the measurement</a> .....	104
• <a href="#">Configuring the measurement range</a> .....	108
• <a href="#">Using limit lines</a> .....	114
• <a href="#">Graphical display of phase noise results</a> .....	125
• <a href="#">Configure numerical result displays</a> .....	138
• <a href="#">Using markers</a> .....	152
• <a href="#">Configuring in- and outputs</a> .....	158
• <a href="#">Automatic measurement configuration</a> .....	160
• <a href="#">Using the status register</a> .....	161
• <a href="#">Remote control example scripts</a> .....	167

## 8.1 Common suffixes

In the R&S FSW Phase Noise Measurement application, the following common suffixes are used in remote commands:

*Table 8-1: Common suffixes used in remote commands in the R&S FSW Phase Noise Measurement application*

Suffix	Value range	Description
<m>	1 to 16	Marker
<n>	1 to 16	Window (in the currently selected channel)
<t>	1 to 4	Trace
<li>	1 to 8	Limit line

## 8.2 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the FSW.



### Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

### 8.2.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**  
If not specified otherwise, commands can be used both for setting and for querying parameters.



If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the FSW follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (\*RST)**

Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as **\*RST** values, if available.

- **Default unit**

The default unit is used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

## 8.2.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

**Example:**

`SENSe:FREQuency:CENTer` is the same as `SENS:FREQ:CENT`.

## 8.2.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you do not quote a suffix for keywords that support one, a 1 is assumed.

**Example:**

DISPlay[:WINDow<1...4>]:ZOOM:STATe enables the zoom in a particular measurement window, selected by the suffix at WINDow.

DISPlay:WINDow4:ZOOM:STATe ON refers to window 4.

## 8.2.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

**Example:**

Without a numeric suffix in the optional keyword:

[SENSe:]FREQuency:CENTer is the same as FREQuency:CENTer

With a numeric suffix in the optional keyword:

DISPlay[:WINDow<1...4>]:ZOOM:STATe

DISPlay:ZOOM:STATe ON enables the zoom in window 1 (no suffix).

DISPlay:WINDow4:ZOOM:STATe ON enables the zoom in window 4.

## 8.2.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

**Example:**

[SENSe:]BANDwidth|BWIDth[:RESolution]

In the short form without optional keywords, BAND 1MHZ would have the same effect as BWID 1MHZ.

## 8.2.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

**Example:**

LAYout:ADD:WINDow Spectrum,LEFT,MTABLE

Parameters can have different forms of values.

• <a href="#">Numeric values</a> .....	83
• <a href="#">Boolean</a> .....	84
• <a href="#">Character data</a> .....	84
• <a href="#">Character strings</a> .....	84
• <a href="#">Block data</a> .....	84

### 8.2.6.1 Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

#### Example:

With unit: `SENSe:FREQuency:CENTer 1GHZ`

Without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**  
Defines the minimum or maximum numeric value that is supported.
- **DEF**  
Defines the default value.
- **UP/DOWN**  
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

#### Querying numeric values

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

#### Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- **INF/NINF**  
Infinity or negative infinity. Represents the numeric values 9.9E37 or -9.9E37.
- **NAN**

Not a number. Represents the numeric value 9.91E37. NAN is returned if errors occur.

### 8.2.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by "ON" or the numeric value 1. The "off" state (logically untrue) is represented by "OFF" or the numeric value 0.

#### Querying Boolean parameters

When you query Boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

#### Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return 1

### 8.2.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 8.2.2, "Long and short form"](#), on page 81.

#### Querying text parameters

When you query text parameters, the system returns its short form.

#### Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMAL`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return NORM

### 8.2.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark ( ' ) or a double quotation mark ( " ).

#### Example:

`INSTRument:DELeTe 'Spectrum'`

### 8.2.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until

all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

## 8.3 Controlling the phase noise measurement channel

The following commands are necessary to control the measurement channel.

<code>INSTRument:CREate:DUPLicate</code> .....	85
<code>INSTRument:CREate[:NEW]</code> .....	85
<code>INSTRument:CREate:REPLace</code> .....	86
<code>INSTRument:DELeTe</code> .....	86
<code>INSTRument:LIST?</code> .....	86
<code>INSTRument:REName</code> .....	88
<code>INSTRument[:SELeCt]</code> .....	88
<code>SYSTem:PRESet:CHANnel[:EXEC]</code> .....	89

---

### `INSTRument:CREate:DUPLicate`

Duplicates the currently selected channel, i.e. creates a new channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

**Example:**

```
INST:SEL 'IQAnalyzer'
```

```
INST:CRE:DUPL
```

Duplicates the channel named 'IQAnalyzer' and creates a new channel named 'IQAnalyzer2'.

**Usage:** Event

---

### `INSTRument:CREate[:NEW] <ChannelType>, <ChannelName>`

Adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

**Parameters:**

`<ChannelType>` Channel type of the new channel.  
For a list of available channel types, see `INSTRument:LIST?` on page 86.

`<ChannelName>` String containing the name of the channel.  
Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

**Example:**

```
INST:CRE SAN, 'Spectrum 2'
```

Adds a spectrum display named "Spectrum 2".

---

**INSTRument:CREate:REPLace** <ChannelName1>, <ChannelType>,  
<ChannelName2>

Replaces a channel with another one.

**Setting parameters:**

<ChannelName1> String containing the name of the channel you want to replace.

<ChannelType> Channel type of the new channel.  
For a list of available channel types, see [INSTRument:LIST?](#) on page 86.

<ChannelName2> String containing the name of the new channel.  
**Note:** If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTRument:LIST?](#) on page 86).  
Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:** `INST:CRE:REPL 'IQAnalyzer2',IQ,'IQAnalyzer'`  
Replaces the channel named "IQAnalyzer2" by a new channel of type "IQ Analyzer" named "IQAnalyzer".

**Usage:** Setting only

---

**INSTRument:DELeTe** <ChannelName>

Deletes a channel.

If you delete the last channel, the default "Spectrum" channel is activated.

**Setting parameters:**

<ChannelName> String containing the name of the channel you want to delete.  
A channel must exist to delete it.

**Example:** `INST:DEL 'IQAnalyzer4'`  
Deletes the channel with the name 'IQAnalyzer4'.

**Usage:** Setting only

---

**INSTRument:LIST?**

Queries all active channels. The query is useful to obtain the names of the existing channels, which are required to replace or delete the channels.

**Return values:**

<ChannelType>,  
<ChannelName> For each channel, the command returns the channel type and channel name (see tables below).  
Tip: to change the channel name, use the [INSTRument:REName](#) command.

**Example:** `INST:LIST?`  
 Result for 3 channels:  
 'ADEM', 'Analog Demod', 'IQ', 'IQ  
 Analyzer', 'IQ', 'IQ Analyzer2'

**Usage:** Query only

**Table 8-2: Available channel types and default channel names in Signal and Spectrum Analyzer mode**

Application	<ChannelType> parameter	Default Channel name*)
Spectrum	SANALYZER	Spectrum
1xEV-DO BTS (FSW-K84)	BDO	1xEV-DO BTS
1xEV-DO MS (FSW-K85)	MDO	1xEV-DO MS
3GPP FDD BTS (FSW-K72)	BWCD	3G FDD BTS
3GPP FDD UE (FSW-K73)	MWCD	3G FDD UE
802.11ad (FSW-K95)	WIGIG	802.11ad
802.11ay (FSW-K97)	EDMG	802.11ay EDMG
Amplifier Measurements (FSW-K18)	AMPLifier	Amplifier
AM/FM/PM Modulation Analysis (FSW-K7)	ADEM	Analog Demod
Avionics (FSW-K15)	AVIonics	Avionics
Bluetooth (FSW-K8)	BTO	Bluetooth
cdma2000 BTS (FSW-K82)	BC2K	CDMA2000 BTS
cdma2000 MS (FSW-K83)	MC2K	CDMA2000 MS
DOCSIS 3.1 (FSW-K192/193)	DOCSis	DOCSIS 3.1
Fast Spur Search (FSW-K50)	SPUR	Spurious
GSM (FSW-K10)	GSM	GSM
HRP UWB (FSW-K149)	UWB	HRP UWB
I/Q Analyzer	IQ	IQ Analyzer
LTE (FSW-K10x)	LTE	LTE
Multi-Carrier "Group Delay" (FSW-K17)	MCGD	MC "Group Delay"
NB-IoT (FSW-K106)	NIOT	NB-IoT
Noise (FSW-K30)	NOISE	Noise
5G NR (FSW-K144)	NR5G	5G NR
OFDM VSA (FSW-K96)	OFDMVSA	OFDM VSA
OneWeb (FSW-K201)	OWEB	OneWeb
Phase Noise (FSW-K40)	PNOISE	Phase Noise
*) If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.		

Application	<ChannelType> parameter	Default Channel name*)
Pulse (FSW-K6)	PULSE	Pulse
"Real-Time Spectrum"	RTIM	"Real-Time Spectrum"
TD-SCDMA BTS (FSW-K76)	BTDS	TD-SCDMA BTS
TD-SCDMA UE (FSW-K77)	MTDS	TD-SCDMA UE
Transient Analysis (FSW-K60)	TA	Transient Analysis
Verizon 5GTF Measurement Application (V5GTF, FSW-K118)	V5GT	V5GT
VSA (FSW-K70)	DDEM	VSA
WLAN (FSW-K91)	WLAN	WLAN
*) If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.		

---

**INSTrument:REName** <ChannelName1>, <ChannelName2>

Renames a channel.

**Setting parameters:**

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.  
 Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.  
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:** `INST:REN 'IQAnalyzer2', 'IQAnalyzer3'`  
 Renames the channel with the name 'IQAnalyzer2' to 'IQAnalyzer3'.

**Usage:** Setting only

---

**INSTrument[:SElect]** <Application>

Selects the measurement application (channel type) for the current channel.

See also [INSTrument:CREate\[:NEW\]](#) on page 85.

For a list of available channel types see [INSTrument:LIST?](#) on page 86.

**Parameters:**

<Application> **PNOise**  
 Phase noise measurements, FSW-K40



**SYSTem:PRESet:CHANnel[:EXEC]**

Restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

**Example:**

```
INST:SEL 'Spectrum2'
```

Selects the channel for "Spectrum2".

```
SYST:PRES:CHAN:EXEC
```

Restores the factory default settings to the "Spectrum2" channel.

**Usage:**

Event

**Manual operation:** See "[Preset Channel](#)" on page 40

## 8.4 Performing measurements

The following commands are necessary to perform measurements.



You can also perform a sequence of measurements using the Sequencer (see "[Multiple Measurement Channels and Sequencer Function](#)" on page 11).

<a href="#">ABORT</a> .....	89
<a href="#">CONFigure:REFMeas</a> .....	90
<a href="#">INITiate&lt;n&gt;:CONMeas</a> .....	90
<a href="#">INITiate&lt;n&gt;:CONTinuous</a> .....	91
<a href="#">INITiate&lt;n&gt;[:IMMediate]</a> .....	91
<a href="#">INITiate:SEQuencer:ABORT</a> .....	91
<a href="#">INITiate:SEQuencer:IMMediate</a> .....	92
<a href="#">INITiate:SEQuencer:MODE</a> .....	92
<a href="#">[SENSe:]SWEep:FHDecade</a> .....	92
<a href="#">SYSTem:SEQuencer</a> .....	93

**ABORT**

Aborts the measurement in the current channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the `*OPC?` or `*WAI` command after `ABOR` and before the next command.

For details on overlapping execution see [Remote control via SCPI](#).

**Note on blocked remote control programs:**

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the FSW is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the FSW on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** `viClear()`
- **GPIB:** `ibclr()`
- **RSIB:** `RSDLLibclr()`

Now you can send the `ABORT` command on the remote channel performing the measurement.

**Example:** `ABOR; :INIT:IMM`  
Aborts the current measurement and immediately starts a new one.

**Example:** `ABOR; *WAI`  
`INIT:IMM`  
Aborts the current measurement and starts a new one once abortion has been completed.

**Usage:** Event

#### **CONFigure:REFMeas** <arg0>

Initiates a reference measurement that determines the inherent phase noise of the FSW.

**Parameters:**  
<arg0> ONCE

**Example:** `CONF:REFM ONCE`  
Initiates a reference measurement

**Manual operation:** See "[Reference Measurement](#)" on page 23

#### **INITiate<n>:CONMeas**

Restarts a (single) measurement that has been stopped (using `ABORT`) or finished in single sweep mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

As opposed to `INITiate<n>[:IMMEDIATE]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using maxhold or averaging functions.

**Suffix:**  
<n> irrelevant

**Usage:** Asynchronous command

**Manual operation:** See "[Continue Single Sweep](#)" on page 51

**INITiate<n>:CONTInuous <State>**

Controls the sweep mode for an individual channel.

Note that in single sweep mode, you can synchronize to the end of the measurement with \*OPC, \*OPC? or \*WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

For details on synchronization see [Remote control via SCPI](#).

**Suffix:**

<n> irrelevant

**Parameters:**

<State> ON | OFF | 0 | 1

**ON | 1**

Continuous sweep

**OFF | 0**

Single sweep

\*RST: 1 (some applications can differ)

**Example:**

INIT:CONT OFF

Switches the sweep mode to single sweep.

INIT:CONT ON

Switches the sweep mode to continuous sweep.

**Manual operation:** See "[Continuous Sweep / Run Cont](#)" on page 50

**INITiate<n>[:IMMEDIATE]**

Starts a (single) new measurement.

With sweep count or average count > 0, this means a restart of the corresponding number of measurements. With trace mode MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

You can synchronize to the end of the measurement with \*OPC, \*OPC? or \*WAI.

For details on synchronization see [Remote control via SCPI](#).

**Suffix:**

<n> irrelevant

**Usage:**

Asynchronous command

**Manual operation:** See "[Single Sweep / Run Single](#)" on page 51

**INITiate:SEQuencer:ABORt**

Stops the currently active sequence of measurements.

You can start a new sequence any time using [INITiate:SEQuencer:IMMEDIATE](#) on page 92.

**Usage:** Event

---

### INITiate:SEQuencer:IMMediate

Starts a new sequence of measurements by the Sequencer.

Its effect is similar to the `INITiate<n>[:IMMediate]` command used for a single measurement.

Before this command can be executed, the Sequencer must be activated (see `SYSTem:SEQuencer` on page 93).

**Example:**

```
SYST:SEQ ON
Activates the Sequencer.
INIT:SEQ:MODE SING
Sets single sequence mode so each active measurement is performed once.
INIT:SEQ:IMM
Starts the sequential measurements.
```

---

### INITiate:SEQuencer:MODE <Mode>

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

**Note:** To synchronize to the end of a measurement sequence using `*OPC`, `*OPC?` or `*WAI`, use `SINGLE` Sequencer mode.

**Parameters:**

<Mode>

**SINGLE**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

**CONTInuous**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

\*RST: CONTInuous

---

### [SENSe:]SWEep:FHDecade

Stops the measurement in the current half decade and continues measuring in the subsequent half decade.

**Example:** `SWE:FHD`  
Aborts the current measurement and continues in the next half decade.

**Manual operation:** See "[Finish Half Decade](#)" on page 52

### SYSTem:SEQuencer <State>

Turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the FSW User Manual.

#### Parameters:

<State> ON | OFF | 0 | 1

#### ON | 1

The Sequencer is activated and a sequential measurement is started immediately.

#### OFF | 0

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.

\*RST: 0

**Example:** `SYST:SEQ ON`  
Activates the Sequencer.  
`INIT:SEQ:MODE SING`  
Sets single Sequencer mode so each active measurement is performed once.  
`INIT:SEQ:IMM`  
Starts the sequential measurements.  
`SYST:SEQ OFF`

## 8.5 Configuring the result display

The commands required to configure the screen display in a remote environment are described here.

- [General window commands](#).....93
- [Working with windows in the display](#).....94

### 8.5.1 General window commands

The following commands are required to configure general window layout, independent of the application.

`DISPlay:FORMat`..... 94  
`DISPlay[:WINDow<n>]:SIZE`..... 94

**DISPlay:FORMat** <Format>

Determines which tab is displayed.

**Parameters:**

&lt;Format&gt;

**SPLit**

Displays the MultiView tab with an overview of all active channels

**SINGle**

Displays the measurement channel that was previously focused.

\*RST: SING

**Example:**

```
DISP:FORM SPL
```

**DISPlay[:WINDow<n>]:SIZE** <Size>

Maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the `LAY:SPL` command (see [LAYout:SPLitter](#) on page 98).

**Suffix:**

&lt;n&gt;

Window

**Parameters:**

&lt;Size&gt;

**LARGE**

Maximizes the selected window to full screen. Other windows are still active in the background.

**SMALI**

Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.

\*RST: SMALI

**Example:**

```
DISP:WIND2:SIZE LARG
```

## 8.5.2 Working with windows in the display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel.

Note that the suffix <n> always refers to the window *in the currently selected channel*.

<a href="#">LAYout:ADD[:WINDow]?</a> .....	95
<a href="#">LAYout:CATalog[:WINDow]?</a> .....	96
<a href="#">LAYout:IDENtify[:WINDow]?</a> .....	96
<a href="#">LAYout:MOVE[:WINDow]</a> .....	97
<a href="#">LAYout:REMove[:WINDow]</a> .....	97
<a href="#">LAYout:REPLace[:WINDow]</a> .....	97
<a href="#">LAYout:SPLitter</a> .....	98

LAYout:WINDow<n>:ADD?.....	99
LAYout:WINDow<n>:IDENtify?.....	100
LAYout:WINDow<n>:REMOve.....	100
LAYout:WINDow<n>:REPLace.....	100

---

### LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

Adds a window to the display in the active channel.

Is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

#### Query parameters:

<WindowName>	String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the <code>LAYout:CATalog[:WINDow]?</code> query.
<Direction>	LEFT   RIGHT   ABOVE   BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

#### Return values:

<NewWindowName>	When adding a new window, the command returns its name (by default the same as its number) as a result.
-----------------	---

#### Example:

```
LAY:ADD? '1', LEFT, MTAB
```

Result:

```
'2'
```

Adds a new window named '2' with a marker table to the left of window 1.

**Usage:** Query only

**Table 8-3: <WindowType> parameter values for Phase Noise application**

Parameter value	Window type
FDRift	Frequency drift
MTABle	Marker table
PNOise	Phase noise diagram
RNOise	Residual noise table
SNOise	Spot noise table
SPECtrum	Spectrum monitor
SPURs	Spur list

Parameter value	Window type
SREsults	Sweep result list
STABility	Frequency and level stability indicator

---

### LAYout:CATalog[:WINDow]?

Queries the name and index of all active windows in the active channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName\_1>,<WindowIndex\_1>..<WindowName\_n>,<WindowIndex\_n>

#### Return values:

<WindowName>      string  
Name of the window.  
In the default state, the name of the window is its index.

<WindowIndex>    **numeric value**  
Index of the window.

#### Example:

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

**Usage:**            Query only

---

### LAYout:IDENTify[:WINDow]? <WindowName>

Queries the **index** of a particular display window in the active channel.

**Note:** to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENTify?](#) query.

#### Query parameters:

<WindowName>      String containing the name of a window.

#### Return values:

<WindowIndex>    Index number of the window.

#### Example:

LAY:IDEN:WIND? '2'

Queries the index of the result display named '2'.

Response:

2

**Usage:**            Query only



---

**LAYout:MOVE[:WINDow]** <WindowName>, <WindowName>, <Direction>

**Setting parameters:**

<WindowName>	String containing the name of an existing window that is to be moved. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the <a href="#">LAYout:CATalog[:WINDow]?</a> query.
<WindowName>	String containing the name of an existing window the selected window is placed next to or replaces. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the <a href="#">LAYout:CATalog[:WINDow]?</a> query.
<Direction>	LEFT   RIGHT   ABOVE   BELOW   REPLACE Destination the selected window is moved to, relative to the reference window.

**Example:** `LAY:MOVE '4', '1', LEFT`  
Moves the window named '4' to the left of window 1.

**Example:** `LAY:MOVE '1', '3', REPL`  
Replaces the window named '3' by window 1. Window 3 is deleted.

**Usage:** Setting only

---

**LAYout:REMOve[:WINDow]** <WindowName>

Removes a window from the display in the active channel.

**Setting parameters:**

<WindowName>	String containing the name of the window. In the default state, the name of the window is its index.
--------------	--

**Example:** `LAY:REM '2'`  
Removes the result display in the window named '2'.

**Usage:** Setting only

---

**LAYout:REPLace[:WINDow]** <WindowName>, <WindowType>

Replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel while keeping its position, index and window name.

To add a new window, use the [LAYout:ADD\[:WINDow\]?](#) command.

**Setting parameters:**

<WindowName>	String containing the name of the existing window. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the <a href="#">LAYout:CATalog[:WINDow]?</a> query.
--------------	---

<WindowType> Type of result display you want to use in the existing window. See [LAYout:ADD\[:WINDow\]?](#) on page 95 for a list of available window types.

**Example:** LAY:REPL:WIND '1',MTAB  
Replaces the result display in window 1 with a marker table.

**Usage:** Setting only

### LAYout:SPLitter <Index1>, <Index2>, <Position>

Changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Compared to the [DISPlay\[:WINDow<n>\]:SIZE](#) on page 94 command, the [LAYout:SPLitter](#) changes the size of all windows to either side of the splitter permanently, it does not just maximize a single window temporarily.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

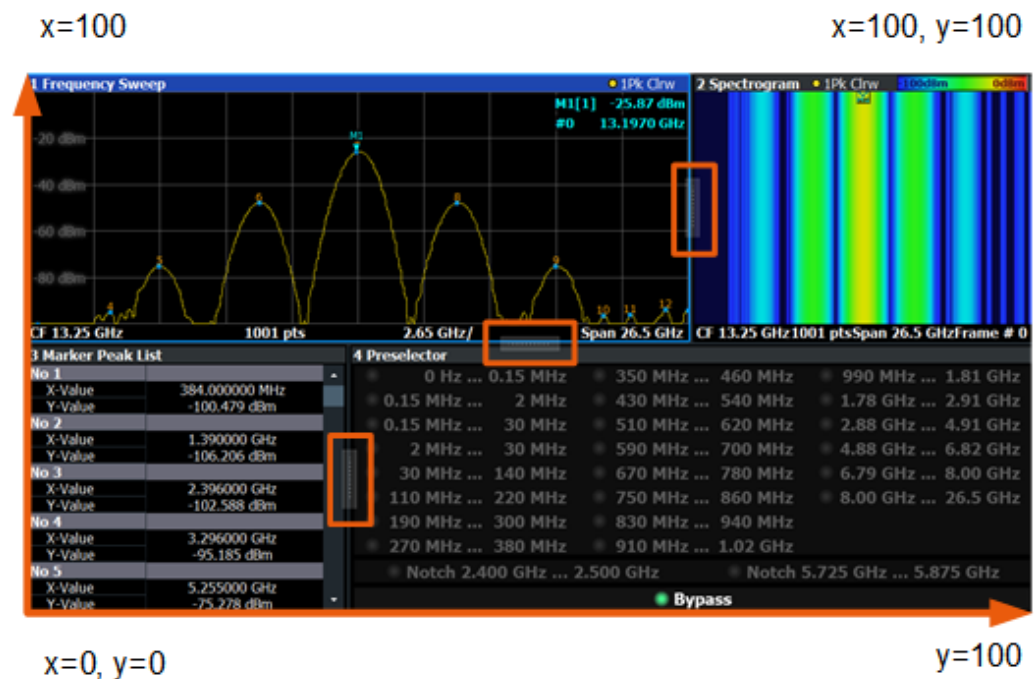


Figure 8-1: SmartGrid coordinates for remote control of the splitters

#### Setting parameters:

<Index1> The index of one window the splitter controls.  
<Index2> The index of a window on the other side of the splitter.

<b>&lt;Position&gt;</b>	<p>New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).</p> <p>The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right corner of the screen. (See <a href="#">Figure 8-1</a>.)</p> <p>The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.</p> <p>Range: 0 to 100</p>
<b>Example:</b>	<pre>LAY:SPL 1,3,50</pre> <p>Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Table') to the center (50%) of the screen, i.e. in the figure above, to the left.</p>
<b>Example:</b>	<pre>LAY:SPL 1,4,70</pre> <p>Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.</p> <pre>LAY:SPL 3,2,70 LAY:SPL 4,1,70 LAY:SPL 2,1,70</pre>
<b>Usage:</b>	Setting only

---

#### LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

Adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

Is always used as a query so that you immediately obtain the name of the new window as a result.

**Suffix:**

<n> [Window](#)

**Query parameters:**

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.  
See [LAYout:ADD\[:WINDow\]?](#) on page 95 for a list of available window types.

**Return values:**

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

**Example:** `LAY:WIND1:ADD? LEFT,MTAB`  
**Result:**  
 '2'  
 Adds a new window named '2' with a marker table to the left of window 1.

**Usage:** Query only

#### LAYout:WINDow<n>:IDENtify?

Queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel.

**Note:** to query the **index** of a particular window, use the `LAYout:IDENtify[:WINDow]?` command.

**Suffix:**  
 <n> [Window](#)

**Return values:**  
 <WindowName> String containing the name of a window.  
 In the default state, the name of the window is its index.

**Example:** `LAY:WIND2:IDEN?`  
 Queries the name of the result display in window 2.  
**Response:**  
 '2'

**Usage:** Query only

#### LAYout:WINDow<n>:REMOve

Removes the window specified by the suffix <n> from the display in the active channel.  
 The result of this command is identical to the `LAYout:REMOve[:WINDow]` command.

**Suffix:**  
 <n> [Window](#)

**Example:** `LAY:WIND2:REM`  
 Removes the result display in window 2.

**Usage:** Event

#### LAYout:WINDow<n>:REPLace <WindowType>

Changes the window type of an existing window (specified by the suffix <n>) in the active channel.

The effect of this command is identical to the `LAYout:REPLace[:WINDow]` command.

To add a new window, use the `LAYout:WINDow<n>:ADD?` command.

**Suffix:**<n> [Window](#)**Setting parameters:**

<WindowType> Type of measurement window you want to replace another one with.  
See [LAYout:ADD\[:WINDow\]?](#) on page 95 for a list of available window types.

**Example:**

LAY:WIND2:REPL MTAB

Replaces the result display in window 2 with a marker table.

**Usage:**

Setting only

## 8.6 Configuring the frontend

The following commands are necessary to configure the frontend settings.

<a href="#">[SENSe:]FREQUency:CENTer</a> .....	101
<a href="#">[SENSe:]POWer:RLEVel</a> .....	101
<a href="#">INPut:ATTenuation</a> .....	102
<a href="#">INPut:ATTenuation:AUTO</a> .....	102
<a href="#">INPut:EGAIN[:STATe]</a> .....	102
<a href="#">INPut:GAIN:STATe</a> .....	103
<a href="#">INPut:GAIN[:VALue]</a> .....	103

---

### **[SENSe:]FREQUency:CENTer** <Frequency>

Defines the nominal frequency.

**Parameters:**

<Frequency>      Range:      0 to f<sub>max</sub>  
                      \*RST:      f<sub>max</sub>/2  
                      Default unit: HZ  
                      f<sub>max</sub> is specified in the specifications document. min span is 10 Hz

**Example:**

FREQ:CENT 100 MHz

Defines a nominal frequency of 100 MHz.

**Manual operation:** See "[Nominal Frequency](#)" on page 41

---

### **[SENSe:]POWer:RLEVel** <Power>

Defines the nominal level.

**Parameters:**

<Power>            Range:      -200 to 200  
                      \*RST:      0  
                      Default unit: DBM

**Example:** `POW:RLEV -20`  
 Defines a nominal level of -20 dBm.

---

#### **INPut:ATTenuation** <Attenuation>

Defines the total attenuation for RF input.

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

#### **Parameters:**

<Attenuation>      Range:      see specifications document  
 Increment:      5 dB (with optional electr. attenuator: 1 dB)  
 \*RST:            10 dB (AUTO is set to ON)  
 Default unit: DB

**Example:** `INP:ATT 30dB`  
 Defines a 30 dB attenuation and decouples the attenuation from the reference level.

**Manual operation:** See "[Mechanical Attenuator / Value](#)" on page 41

---

#### **INPut:ATTenuation:AUTO** <State>

Couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the FSW determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

#### **Parameters:**

<State>            ON | OFF | 0 | 1  
 \*RST:            1

**Example:** `INP:ATT:AUTO ON`  
 Couples the attenuation to the reference level.

**Manual operation:** See "[Mechanical Attenuator / Value](#)" on page 41

---

#### **INPut:EGAIN[:STATe]** <State>

Before this command can be used, the external preamplifier must be connected to the FSW. See the preamplifier's documentation for details.

When activated, the FSW automatically compensates the magnitude and phase characteristics of the external preamplifier in the measurement results.

Note that when an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

For FSW85 models with two RF inputs, you must enable correction from the external preamplifier for each input individually. Correction cannot be enabled for both inputs at the same time.

When deactivated, no compensation is performed even if an external preamplifier remains connected.

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 No data correction is performed based on the external preamplifier  
**ON | 1**  
 Performs data corrections based on the external preamplifier  
 \*RST: 0

**Example:** INP:EGA ON

**Manual operation:** See "[Ext. PA Correction](#)" on page 42

**INPut:GAIN:STATE** <State>

Turns the internal preamplifier on and off. It requires the optional preamplifier hardware.

Note that if an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

If option R&S FSW-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSW-B24 is installed, the preamplifier is active for all frequencies.

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on  
 \*RST: 0

**Example:** INP:GAIN:STAT ON  
 INP:GAIN:VAL 15  
 Switches on 15 dB preamplification.

**Manual operation:** See "[Preamplifier](#)" on page 42

**INPut:GAIN[:VALue]** <Gain>

Selects the "gain" if the preamplifier is activated (INP:GAIN:STAT ON, see [INPut:GAIN:STATE](#) on page 103).

The command requires the additional preamplifier hardware option.

**Parameters:**

<Gain> For all FSW models except for FSW85, the following settings are available:  
 15 dB and 30 dB

All other values are rounded to the nearest of these two.

For FSW85 models:

FSW43 or higher:

30 dB

Default unit: DB

**Example:** INP:GAIN:STAT ON  
INP:GAIN:VAL 30  
Switches on 30 dB preamplification.

**Manual operation:** See "[Preamplifier](#)" on page 42

## 8.7 Controlling the measurement

The following commands are necessary to control the sequence of the phase noise measurement.

[SENSe:]FREQUENCY:TRACK.....	104
[SENSe:]FREQUENCY:VERIFY:TOLERANCE:ABSOLUTE.....	104
[SENSe:]FREQUENCY:VERIFY:TOLERANCE[:RELATIVE].....	105
[SENSe:]FREQUENCY:VERIFY[:STATE].....	105
[SENSe:]IQ:DECIMATION.....	105
[SENSe:]IQ:DPLL.....	106
[SENSe:]IQ:ONLINE.....	106
[SENSe:]IQ:TBW.....	106
[SENSe:]POWER:RLEVEL:VERIFY:TOLERANCE.....	107
[SENSe:]POWER:RLEVEL:VERIFY[:STATE].....	107
[SENSe:]POWER:TRACK.....	107
[SENSe:]REJECT:AM.....	107
[SENSe:]SWEep:SVFailed.....	107

---

### [SENSe:]FREQUENCY:TRACK <State>

Turns frequency tracking on and off.

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Example:** FREQ:TRAC OFF  
Turns off frequency tracking.

**Manual operation:** See "[Frequency Tracking](#)" on page 44

---

### [SENSe:]FREQUENCY:VERIFY:TOLERANCE:ABSOLUTE <Frequency>

Defines an absolute frequency tolerance for frequency verification.

If you define both an absolute and relative tolerance, the application uses the higher tolerance level.



**Parameters:**

<Frequency>            Numeric value in Hz.  
                               Default unit: HZ

**Example:**

FREQ:VER:TOL:ABS 100kHz  
 Defines a frequency tolerance range of 100 kHz.

**Manual operation:** See "[Verify Frequency](#)" on page 43

**[SENSe:]FREQuency:VERify:TOLerance[:RELative]** <Percentage>

Defines a relative frequency tolerance for frequency verification.

If you define both an absolute and relative tolerance, the application uses the higher tolerance level.

**Parameters:**

<Percentage>            Numeric value in %, relative to the current nominal frequency.  
                               Range:        1 to 100  
                               \*RST:        10  
                               Default unit: PCT

**Example:**

FREQ:VER:TOL:REL 12  
 Defines a frequency tolerance of 12% in relation to the nominal frequency.

**Manual operation:** See "[Verify Frequency](#)" on page 43

**[SENSe:]FREQuency:VERify[:STATe]** <State>

Turns frequency verification on and off.

**Parameters:**

<State>                    ON | OFF | 1 | 0  
                               \*RST:        1

**Example:**

FREQ:VER ON  
 Turns on frequency verification.

**Manual operation:** See "[Verify Frequency](#)" on page 43

**[SENSe:]IQ:DECimation** <State>

Turns decimation of results on and off.

**Parameters:**

<State>                    ON | OFF | 1 | 0  
                               \*RST:        1

**Example:**

IQ:DEC ON  
 Turns on decimation.

**Manual operation:** See "[Decimation](#)" on page 45

---

**[SENSe:]IQ:DPLL <State>**

Turns the digital PLL on and off.

**Parameters:**

<State> ON | OFF | 1 | 0

**Example:**

`IQ:DPLL ON`  
Turns the digital PLL on.

**Manual operation:** See "[Digital PLL](#)" on page 45

---

**[SENSe:]IQ:ONLine <State>**

Turns the I/Q online measurement mode on and off.

This mode is available for offset frequencies smaller than 30 kHz.

Note that you have to

- turn on decimation with [\[SENSe:\]IQ:DECimation](#)
- select the I/Q FFT mode for the affected half decades with [\[SENSe:\]LIST:BWIDth\[:RESolution\]:TYPE](#)
- turn off forward sweep with [\[SENSe:\]SWEep:FORward](#)

**Parameters:**

<State> ON | OFF | 1 | 0

**Example:**

`SWE:FORW OFF`  
`LIST:RANG9:FILT:TYPE IQFF`  
`LIST:RANG8:FILT:TYPE IQFF`  
`IQ:DEC ON`  
`IQ:ONL ON`  
Configures a online measurement for the half decades between 3 kHz and 10 kHz and 10 kHz and 30 kHz.

**Manual operation:** See "[Online I/Q](#)" on page 46

---

**[SENSe:]IQ:TBW <Bandwidth>**

Defines the maximum tracking bandwidth (sample rate) for all half decades.

**Parameters:**

<Bandwidth> Range: 60 mHz to 65.28 MHz  
Increment: 10 mHz  
\*RST: 60 mHz  
Default unit: HZ

**Example:**

`IQ:TBW 100HZ`  
Defines a tracking bandwidth of 100 Hz.

**Manual operation:** See "[Max Freq Drift](#)" on page 45

---

**[SENSe:]POWer:RLEVel:VERify:TOLerance <Level>**

Defines a relative level tolerance for level verification

**Parameters:**

<Level>                    Numeric value in dB, relative to the nominal level.  
                                  \*RST:            10 dB  
                                  Default unit: DB

**Example:**                POW:RLEV:TOL 5  
 Defines a level tolerance of 5 dB.

**Manual operation:**    See "[Verify Level](#)" on page 44

---

**[SENSe:]POWer:RLEVel:VERify[:STATe] <State>**

Turns level verification on and off.

**Parameters:**

<State>                    ON | OFF | 1 | 0  
                                  \*RST:            1

**Example:**                POW:RLEV:VER ON  
 Turns on level verification.

**Manual operation:**    See "[Nominal Level](#)" on page 41  
 See "[Verify Level](#)" on page 44  
 See "[Level Tracking](#)" on page 45

---

**[SENSe:]POWer:TRACk <State>****Parameters:**

<State>

---

**[SENSe:]REJect:AM <State>**

Turns the suppression of AM noise on and off.

**Parameters:**

<State>                    ON | OFF | 1 | 0

**Example:**                REJ:AM ON  
 Turns AM noise suppression on.

**Manual operation:**    See "[AM Rejection](#)" on page 45

---

**[SENSe:]SWEep:SVFailed <State>**

Turns repeated tries to start the measurement if signal verification fails on and off.

**Parameters:**

&lt;State&gt; ON | OFF | AUTO

If on, the application tries to verify the signal once and then aborts the measurement if verification has failed.

\*RST: 0

**Example:**

SWE:SVF ON

Stops the measurement if signal verification has failed.

**Manual operation:** See ["On Verify Failed"](#) on page 44

## 8.8 Configuring the measurement range

The following commands are necessary to configure the phase noise measurement range.

**Table 8-4: <range> suffix assignment**

Suffix	Half Decade
1	1 Hz ... 3 Hz
2	3 Hz ... 10 Hz
3	10 Hz ... 30 Hz
4	30 Hz ... 100 Hz
5	100 Hz ... 300 Hz
6	300 Hz ... 1 kHz
7	1 kHz ... 3 kHz
8	3 kHz ... 10 kHz
9	10 kHz ... 30 kHz
10	30 kHz ... 100 kHz
11	100 kHz ... 300 kHz
12	300 kHz ... 1 MHz
13	1 MHz ... 3 MHz
14	3 MHz ... 10 MHz
15	10 MHz ... 30 MHz
16	30 MHz ... 100 MHz
17	100 MHz ... 300 MHz
18	300 MHz ... 1 GHz
19	1 GHz ... 3 GHz
20	3 GHz ... 10 GHz

Suffix	Half Decade
21	10 GHz ... 30 GHz
22	30 GHz ... 100 GHz

[SENSe:]LIST:BWIDth[:RESolution]:RATio.....	109
[SENSe:]FREQuency:STARt.....	109
[SENSe:]FREQuency:STOP.....	110
[SENSe:]LIST:BWIDth[:RESolution]:TYPE.....	110
[SENSe:]LIST:RANGe<range>:BWIDth[:RESolution].....	110
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	111
[SENSe:]LIST:RANGe<range>:IQWindow:TYPE.....	111
[SENSe:]LIST:RANGe<range>:SWEep:COUNT.....	112
[SENSe:]LIST:SWEep:COUNT.....	112
[SENSe:]LIST:SWEep:COUNT:MUlTiplier.....	112
[SENSe:]LIST:SWEep:COUNT:MUlTiplier:STATe.....	112
[SENSe:]SWEep:FORWard.....	113
[SENSe:]SWEep:MODE.....	113
[SENSe:]SWEep:COUNT.....	113

---

### [SENSe:]LIST:BWIDth[:RESolution]:RATio <Ratio>

Defines the resolution bandwidth over all half decades.

#### Parameters:

<Ratio>

Numeric value in %.

The resulting RBW is the percentage of the start frequency of each half decade.

If the resulting RBW is not available, the application rounds to the next available bandwidth.

Range: 1 to 100

\*RST: 10

Default unit: PCT

#### Example:

LIST:BWID:RAT 20

Defines a RBW of 20% of the start frequency of the corresponding half decade.

---

### [SENSe:]FREQuency:STARt <Frequency>

Defines the start frequency of the measurement range.

#### Parameters:

<Frequency>

Offset frequencies in half decade steps.

Range: 1 Hz to 100 GHz

\*RST: 1 kHz

Default unit: HZ

#### Example:

FREQ:STAR 10kHz

Defines a start frequency of 10 kHz.

**Manual operation:** See ["Range Start / Stop"](#) on page 47

---

**[SENSe:]FREQuency:STOP** <Frequency>

Defines the stop frequency of the measurement range.

**Parameters:**

<Frequency>            Offset frequencies in half decade steps.  
                               Range:        3 Hz to 30 GHz  
                               \*RST:        1 MHz  
                               Default unit: HZ

**Example:**

FREQ:STOP 10MHz  
 Defines a stop frequency of 10 MHz.

**Manual operation:** See ["Range Start / Stop"](#) on page 47

---

**[SENSe:]LIST:BWIDth[:RESolution]:TYPE** <Mode>

Selects the sweep mode for all half decades.

**Parameters:**

<Mode>                    NORMAL | FFT | IQFFt  
**NORMAL**  
 Measurement based on spectrum analyzer data.  
**FFT**  
 Measurement based on spectrum analyzer data. Kept for compatibility to R&S FSV.  
 \*RST:                    Depends on half decade

**Example:**

LIST:BWID:RES:TYPE IQFF  
 Selects I/Q analysis mode for all half decades.

**Manual operation:** See ["Global Sweep Mode"](#) on page 49

---

**[SENSe:]LIST:RANGe<range>:BWIDth[:RESolution]** <RBW>

Defines the resolution bandwidth for a particular half decade.

**Suffix:**

<range>                    1..n  
 Selects the half decade.  
 For the suffix assignment see [Table 8-4](#).

**Parameters:**

<RBW>                    Note that each half decade has a limited range of available bandwidths.  
 \*RST:                    Depends on the half decade  
 Default unit: HZ

**Example:** `LIST:RANG9:BWID 100Hz`  
 Selects a RBW of 100 Hz for the half decade from 1 kHz to 3 kHz.

**Manual operation:** See ["Global RBW"](#) on page 48  
 See ["Half Decades Configuration Table"](#) on page 49

**[SENSe:]LIST:RANGe<range>:FILTer:TYPE <Mode>**

Selects the sweep mode for a particular half decade.

**Suffix:**  
 <range> 1..n  
 Selects the half decade.  
 For the suffix assignment see [Table 8-4](#).

**Parameters:**  
 <Mode> **NORMAL**  
 Measurement based on spectrum analyzer data.  
**FFT**  
 Measurement based on spectrum analyzer data. Kept for compatibility to R&S FSV.  
**IQFFt**  
 Measurement based on I/Q data.  
 \*RST: Depends on half decade

**Example:** `LIST:RANG9:FILT:TYPE FFT`  
 Selects FFT analysis for the ninth half decade.

**Manual operation:** See ["Half Decades Configuration Table"](#) on page 49

**[SENSe:]LIST:RANGe<range>:IQWindow:TYPE <WindowFunction>**

Selects the window function for a particular half decade.

Window functions are available for I/Q sweep mode.

**Suffix:**  
 <range> 1..n  
 Selects the half decade.  
 For the suffix assignment see [Table 8-4](#).

**Parameters:**  
 <WindowFunction> RECTangular | GAUSSian | CHEByshev | BHARris | SWEPT  
 \*RST: Depends on the half decade

**Example:** `LIST:RANG:IQW:TYPE BHAR`  
 Selects the Blackman Harris window function for the first half decade.

**Manual operation:** See ["Global I/Q Window"](#) on page 49  
 See ["Half Decades Configuration Table"](#) on page 49

---

**[SENSe:]LIST:RANGe<range>:SWEp:COUNT <Measurements>**

Defines the number of measurements included in the averaging for a half decade.

**Suffix:**

<range>                    1..n  
Selects the half decade.  
For the suffix assignment see [Table 8-4](#).

**Parameters:**

<Measurements>    Range:        1 to 10000  
                         \*RST:        Depends on the half decade

**Example:**

LIST:RANG9:SWE:COUN 15  
Includes 15 measurements in the averaging of the ninth half decade.

**Manual operation:** See "[Half Decades Configuration Table](#)" on page 49

---

**[SENSe:]LIST:SWEp:COUNT <Averages>**

Defines the number of measurements to be included in the averaging for each and all half decades.

**Parameters:**

<Averages>            Range:        1 to 10000  
                         \*RST:        Depends on the half decade.

**Example:**

LIST:SWE:COUN 20  
Defines 20 averages for all half decades.

**Manual operation:** See "[Global Average Count](#)" on page 48

---

**[SENSe:]LIST:SWEp:COUNT:MULTiplier <Multiplier>**

Defines a multiplier that is applied to the average count in each half decade.

Before you can use the command you have to turn on the multiplier with [\[SENSe:\]LIST:SWEp:COUNT:MULTiplier](#).

**Parameters:**

<Multiplier>

**Example:**

LIST:SWE:COUN:MULT:STAT ON  
LIST:SWE:COUN:MULT 5  
Turns on the multiplier and multiplies the averages by 5.

**Manual operation:** See "[Multiplier](#)" on page 48

---

**[SENSe:]LIST:SWEp:COUNT:MULTiplier:STATe <State>**

Turns a multiplier that is applied to the average count in each half decade on and off.



**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Example:**

See [SENSe:]LIST:SWEep:COUNT:MULTIplier:STATE on page 112.

**Manual operation:** See "Multiplier" on page 48

**[SENSe:]SWEep:FORWARD <State>**

Selects the measurement direction.

Specifies the sweep direction. When switched on the sweep direction is from the start frequency to the stop frequency. When switched off the sweep direction is reversed

**Parameters:**

<State> **ON | 1**  
 Measurements in forward direction.  
 The measurements starts at the smallest offset frequency.

**OFF | 0**  
 Measurement in reverse direction.  
 The measurement starts at the highest offset frequency.

\*RST: 0

**Example:**

SWE:FORW ON  
 Selects forward measurements.

**Manual operation:** See "Sweep Forward" on page 47

**[SENSe:]SWEep:MODE <Mode>**

Selects the type of measurement configuration.

**Parameters:**

<Mode> **AVERage**  
 Selects a measurement configuration optimized for quality results.

**FAST**  
 Selects a measurement configuration optimized for speed.

**NORMal**  
 Selects a balanced measurement configuration.

\*RST: NORMal

**Manual operation:** See "Presets" on page 48

**[SENSe:]SWEep:COUNT <SweepCount>**

Defines the number of sweeps that the application uses to average traces.

In continuous sweep mode, the application calculates the moving average over the average count.

In single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

**Parameters:**

<SweepCount> If you set a sweep count of 0 or 1, the FSW performs one single sweep.  
 Range: 0 to 200000  
 \*RST: 200

**Example:**

```
SWE:COUN 64
Sets the number of sweeps to 64.
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
```

**Manual operation:** See "[Sweep/Average Count](#)" on page 51

## 8.9 Using limit lines

The following commands are necessary to set up and configure limit lines.

- [Using phase noise limit lines](#)..... 114
- [Using standard limit lines](#)..... 117
- [Creating and editing standard limit lines](#)..... 122

### 8.9.1 Using phase noise limit lines

<a href="#">CALCulate&lt;n&gt;:PNLimit:COPY&lt;k&gt;</a> .....	114
<a href="#">CALCulate:PNLimit:FC1 &lt;Frequency&gt;</a> .....	115
<a href="#">CALCulate:PNLimit:FC2 &lt;Frequency&gt;</a> .....	115
<a href="#">CALCulate:PNLimit:FC3 &lt;Frequency&gt;</a> .....	115
<a href="#">CALCulate:PNLimit:FC4 &lt;Frequency&gt;</a> .....	115
<a href="#">CALCulate&lt;n&gt;:PNLimit:FC&lt;1 to 5&gt;</a> .....	115
<a href="#">CALCulate&lt;n&gt;:PNLimit:NOISe</a> .....	115
<a href="#">CALCulate&lt;n&gt;:PNLimit:TRACe</a> .....	115
<a href="#">CALCulate&lt;n&gt;:PNLimit:TYPE</a> .....	116
<a href="#">CALCulate&lt;n&gt;:PNLimit:FAIL?</a> .....	116
<a href="#">CALCulate&lt;n&gt;:PNLimit:SLOPe&lt;segment&gt;</a> .....	117

---

#### **CALCulate<n>:PNLimit:COPY<k>**

Creates a new user limit line from the data of a phase noise limit line.

**Suffix:**

&lt;n&gt; 1..n

Number of the limit line the phase noise limit line is copied to. An existing limit line in that slot is overwritten.

&lt;k&gt; 1..n

**Example:**

CALC:PNL:COPY2

Copies the phase noise limit line to limit line 3.

**Manual operation:** See ["Copy to User Limit Line"](#) on page 68

**CALCulate:PNLimit:FC1** <Frequency>**CALCulate:PNLimit:FC2** <Frequency>**CALCulate:PNLimit:FC3** <Frequency>**CALCulate:PNLimit:FC4** <Frequency>**CALCulate<n>:PNLimit:FC<1 to 5>** <CornerFrequency>

Sets the corner frequency of a phase noise limit line.

**Suffix:**

&lt;n&gt; 1..n

&lt;1 to 5&gt; 1 to 5

**Parameters:**

&lt;CornerFrequency&gt; Default unit: Hz

**Manual operation:** See ["Range x - Range y"](#) on page 68

**CALCulate<n>:PNLimit:NOISe** <NoiseLevel>

Defines the noise floor level of the DUT.

The noise floor level is necessary for the calculation of a phase noise limit line.

**Suffix:**

&lt;n&gt; 1..n

**Parameters:**

&lt;NoiseLevel&gt; Range: -200 to 200

\*RST: 0

Default unit: dBm/Hz

**Example:**

CALC:PNL:NOIS -150

Defines a noise floor level of 150 dBm/Hz.

**Manual operation:** See ["Noise Floor"](#) on page 68

**CALCulate<n>:PNLimit:TRACe** <Trace>...

Selects the trace to assign a phase noise limit line to.

**Suffix:**

&lt;n&gt; 1..n

**Parameters:**

<Trace>                   Range:     1 to 6  
 \*RST:                    -

**Example:**

CALC:PNL:TRAC 1  
 Assigns the phase noise limit line to trace 1.

**Manual operation:** See "[Selected Traces](#)" on page 67

**CALCulate<n>:PNLimit:TYPE <Shape>**

Selects the shape of a phase noise limit line.

**Suffix:**

<n>                        1..n

**Parameters:**

<Shape>                   NONE | FC1 | FC2 | FC3 | FC4 | FC5

**FC1**

Limit line defined by the noise floor and 1 corner frequency.

**FC2**

Limit line defined by the noise floor and 2 corner frequencies.

**FC3**

Limit line defined by the noise floor and 3 corner frequencies.

**FC4**

Limit line defined by the noise floor and 4 corner frequencies.

**FC5**

Limit line defined by the noise floor and 5 corner frequencies.

**NONE**

No limit line.

\*RST:                    NONE

**Example:**

CALC:PNL:TYPE FC2  
 Selects a limit line with 2 corner frequencies.

**Manual operation:** See "[Phase Noise Limit Line](#)" on page 67

**CALCulate<n>:PNLimit:FAIL?**

Queries the limit check results for phase noise limit lines.

**Suffix:**

<n>                        1..n

**Return values:**

<LimitCheck>            **1**  
 Limit check has passed.  
**0**  
 Limit check has failed.

**Example:** `CALC:PNL:FAIL?`  
Queries the limit check result.

**Usage:** Query only

**CALCulate<n>:PNLimit:SLOPe<segment> <Slope>**

Defines the slope for a phase noise limit line segment.

**Suffix:**

<n> 1..n

<segment> 1..n  
Selects the limit line segment.

**Parameters:**

<Slope> Level distance from the left border of the limit line segment to the previous one.

\*RST: 10

Default unit: dB

**Example:** `CALC:PNL:SLOP2 20`  
Defines a slope of 20 dB for the second limit line segment.

**Manual operation:** See "Range x - Range y" on page 68

## 8.9.2 Using standard limit lines

<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:ACTive?</code> .....	117
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:CLEar[:IMMediate]</code> .....	118
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:COPY</code> .....	118
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:DELeTe</code> .....	118
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:FAIL?</code> .....	119
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:NAME</code> .....	119
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:LOWer:STATe</code> .....	119
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:STATe</code> .....	120
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:TRACe&lt;t&gt;</code> .....	120
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:TRACe&lt;t&gt;:CHECK</code> .....	121
<code>CALCulate&lt;n&gt;:LIMit&lt;li&gt;:UPPer:STATe</code> .....	121

**CALCulate<n>:LIMit<li>:ACTive?**

Queries the names of *all* active limit lines.

**Suffix:**

<n> irrelevant

<li> irrelevant

**Return values:**

<LimitLines> String containing the names of all active limit lines in alphabetical order.

**Example:** `CALC:LIM:ACT?`  
Queries the names of all active limit lines.

**Usage:** Query only

**Manual operation:** See "[Visible](#)" on page 69

**CALCulate<n>:LIMit<li>:CLEar[:IMMEDIATE]**

Deletes the result of the current limit check.

The command works on *all* limit lines in *all* measurement windows at the same time.

**Suffix:**

<n> [Window](#)

<li> irrelevant

**Example:** `CALC:LIM:CLE`  
Deletes the result of the limit check.

**CALCulate<n>:LIMit<li>:COPY <Line>**

Copies a limit line.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Parameters:**

<Line> **1 to 8**  
number of the new limit line

**<name>**

String containing the name of the limit line.

**Example:** `CALC:LIM1:COPY 2`  
Copies limit line 1 to line 2.  
`CALC:LIM1:COPY 'FM2'`  
Copies limit line 1 to a new line named FM2.

**Manual operation:** See "[New / Edit / Copy To](#)" on page 70

**CALCulate<n>:LIMit<li>:DELeTe**

Deletes a limit line.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Manual operation:** See "[Delete](#)" on page 70

**CALCulate<n>:LIMit<li>:FAIL?**

Queries the result of a limit check in the specified window.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 91.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Return values:**

<Result>      **0**  
                   PASS  
                   **1**  
                   FAIL

**Example:**

```
INIT; *WAI
```

Starts a new sweep and waits for its end.

```
CALC2:LIM3:FAIL?
```

Queries the result of the check for limit line 3 in window 2.

**Usage:**

Query only

**Manual operation:** See ["Check Traces"](#) on page 70

**CALCulate<n>:LIMit<li>:NAME <Name>**

Selects a limit line that already exists or defines a name for a new limit line.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Parameters:**

<Name>           String containing the limit line name.  
                   \*RST:       REM1 to REM8 for lines 1 to 8

**Manual operation:** See ["New / Edit / Copy To"](#) on page 70  
 See ["Name"](#) on page 71

**CALCulate<n>:LIMit<li>:LOWer:STATe <State>**

Turns a lower limit line on and off.

Before you can use the command, you have to select a limit line with [CALCulate<n>:LIMit<li>:NAME](#) on page 119.

**Suffix:**

<n>               irrelevant

<li> [Limit line](#)

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Manual operation:** See "[Visible](#)" on page 69

**CALCulate<n>:LIMit<li>:STATe <State>**

Turns the limit check for a specific limit line on and off.

To query the limit check result, use [CALCulate<n>:LIMit<li>:FAIL?](#).

Note that a new command exists to activate the limit check and define the trace to be checked in one step (see [CALCulate<n>:LIMit<li>:TRACe<t>:CHECK](#) on page 121).

**Suffix:**

<n> irrelevant

<li> [Limit line](#)

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:** `CALC:LIM:STAT ON`  
 Switches on the limit check for limit line 1.

**Manual operation:** See "[Check Traces](#)" on page 70

**CALCulate<n>:LIMit<li>:TRACe<t> <TraceNumber>**

Links a limit line to one or more traces.

Note that this command is maintained for compatibility reasons only. Limit lines no longer need to be assigned to a trace explicitly. The trace to be checked can be defined directly (as a suffix) in the new command to activate the limit check (see [CALCulate<n>:LIMit<li>:TRACe<t>:CHECK](#) on page 121).

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

<t> irrelevant



**Example:** `CALC:LIM2:TRAC 3`  
Assigns limit line 2 to trace 3.

**Manual operation:** See "[Check Traces](#)" on page 70

### **CALCulate<n>:LIMit<li>:TRACe<t>:CHECK <State>**

Turns the limit check for a specific trace on and off.

To query the limit check result, use `CALCulate<n>:LIMit<li>:FAIL?`.

Note that this command replaces the two commands from previous signal and spectrum analyzers (which are still supported, however):

- `CALCulate<n>:LIMit<li>:TRACe<t>` on page 120
- `CALCulate<n>:LIMit<li>:STATe` on page 120

#### **Suffix:**

<n> [Window](#)

<li> [Limit line](#)

<t> [Trace](#)

#### **Parameters:**

<State> `ON | OFF | 0 | 1`  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on

**Example:** `CALC:LIM3:TRAC2:CHEC ON`  
Switches on the limit check for limit line 3 on trace 2.

### **CALCulate<n>:LIMit<li>:UPPer:STATe <State>**

Turns an upper limit line on and off.

Before you can use the command, you have to select a limit line with `CALCulate<n>:LIMit<li>:NAME` on page 119.

#### **Suffix:**

<n> irrelevant

<li> [Limit line](#)

#### **Parameters:**

<State> `ON | OFF | 0 | 1`  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on

**Manual operation:** See "[Visible](#)" on page 69

### 8.9.3 Creating and editing standard limit lines

CALCulate<n>:LIMit<li>:COMMeNt.....	122
CALCulate<n>:LIMit<li>:CONTRol[:DATA].....	122
CALCulate<n>:LIMit<li>:CONTRol:SHIFt.....	122
CALCulate<n>:LIMit<li>:LOWer[:DATA].....	123
CALCulate<n>:LIMit<li>:LOWer:MODE.....	123
CALCulate<n>:LIMit<li>:LOWer:SHIFt.....	124
CALCulate<n>:LIMit<li>:UPPer:MODE.....	124
CALCulate<n>:LIMit<li>:UPPer[:DATA].....	124
CALCulate<n>:LIMit<li>:UPPer:SHIFt.....	125

---

#### CALCulate<n>:LIMit<li>:COMMeNt <Comment>

Defines a comment for a limit line.

##### Suffix:

<n> irrelevant

<li> [Limit line](#)

##### Parameters:

<Comment> String containing the description of the limit line.

**Manual operation:** See "[Comment](#)" on page 72

---

#### CALCulate<n>:LIMit<li>:CONTRol[:DATA] <LimitLinePoints>...

Defines the horizontal definition points of a limit line.

##### Suffix:

<n> irrelevant

<li> [Limit line](#)

##### Parameters:

<LimitLinePoints> Variable number of x-axis values.  
 Note that the number of horizontal values has to be the same as the number of vertical values set with [CALCulate<n>:LIMit<li>:LOWer\[:DATA\]](#) or [CALCulate<n>:LIMit<li>:UPPer\[:DATA\]](#). If not, the FSW either adds missing values or ignores surplus values.  
 The unit is Hz.  
 \*RST: -  
 Default unit: HZ

**Manual operation:** See "[Data Points](#)" on page 72

---

#### CALCulate<n>:LIMit<li>:CONTRol:SHIFt <Distance>

Moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

**Suffix:**

<n> irrelevant

<li> [Limit line](#)

**Parameters:**

<Distance> Numeric value.  
The unit depends on the scale of the x-axis.  
Default unit: HZ

**Manual operation:** See "[Shift X](#)" on page 73

**CALCulate<n>:LIMit<li>:LOWer[:DATA] <LimitLinePoints>...**

Defines the vertical definition points of a lower limit line.

**Suffix:**

<n> irrelevant

<li> [Limit line](#)

**Parameters:**

<LimitLinePoints> Variable number of level values.  
Note that the number of vertical values has to be the same as the number of horizontal values set with [CALCulate<n>:LIMit<li>:CONTRol\[:DATA\]](#). If not, the FSW either adds missing values or ignores surplus values.  
\*RST: Limit line state is OFF  
Default unit: DBM

**Manual operation:** See "[Data Points](#)" on page 72

**CALCulate<n>:LIMit<li>:LOWer:MODE <Mode>**

Selects the vertical limit line scaling.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Parameters:**

<Mode> **ABSolute**  
Limit line is defined by absolute physical values.  
The unit is variable.  
**RELative**  
Limit line is defined by relative values related to the reference level (dB).  
\*RST: ABSolute

**Manual operation:** See "[X-Axis](#)" on page 72

---

**CALCulate<n>:LIMit<li>:LOWer:SHIFt <Distance>**

Moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Parameters:**

<Distance> Defines the distance that the limit line moves.  
Default unit: DB

**Manual operation:** See "[Shift Y](#)" on page 73

---

**CALCulate<n>:LIMit<li>:UPPer:MODE <Mode>**

Selects the vertical limit line scaling.

**Suffix:**

<n> [Window](#)

<li> [Limit line](#)

**Parameters:**

<Mode> **ABSolute**  
Limit line is defined by absolute physical values.  
The unit is variable.

**RELative**  
Limit line is defined by relative values related to the reference level (dB).

\*RST: ABSolute

**Manual operation:** See "[X-Axis](#)" on page 72

---

**CALCulate<n>:LIMit<li>:UPPer[:DATA] <LimitLinePoints>...**

Defines the vertical definition points of an upper limit line.

**Suffix:**

<n> irrelevant

<li> [Limit line](#)

**Parameters:**

<LimitLinePoints> Variable number of level values.  
 Note that the number of vertical values has to be the same as the number of horizontal values set with `CALCulate<n>:LIMit<li>:CONTRol[:DATA]`. If not, the FSW either adds missing values or ignores surplus values.  
 \*RST: Limit line state is OFF  
 Default unit: DBM

**Manual operation:** See "Data Points" on page 72

**CALCulate<n>:LIMit<li>:UPPer:SHIFt <Distance>**

Moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

**Suffix:**

<n> irrelevant  
 <li> Limit line

**Parameters:**

<Distance> Defines the distance that the limit line moves.

**Manual operation:** See "Shift Y" on page 73

## 8.10 Graphical display of phase noise results

The following commands are necessary to set up and configure the graphical phase noise result displays.

<code>CALCulate&lt;n&gt;:MATH&lt;t&gt;[:EXPRession][:DEFine]</code> .....	126
<code>CALCulate&lt;n&gt;:MATH&lt;t&gt;:STATe</code> .....	126
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWIndow&lt;w&gt;]:TRACe&lt;t&gt;:MODE</code> .....	127
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWIndow&lt;w&gt;]:TRACe&lt;t&gt;:SMOothing:APERture</code> .....	127
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWIndow&lt;w&gt;]:TRACe&lt;t&gt;:SMOothing[:STATe]</code> .....	128
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:SMOothing:TYPE</code> .....	128
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:SPURs:SUPPress</code> .....	128
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWIndow&lt;w&gt;]:TRACe&lt;t&gt;[:STATe]</code> .....	129
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:X[:SCALE]:HDECade</code> .....	129
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:X[:SCALE]:SCOPE</code> .....	130
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:X[:SCALE]:START</code> .....	130
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:X[:SCALE]:STOP</code> .....	131
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]</code> .....	131
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:AUTO</code> .....	132
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:MANual</code> .....	132
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:RLEVel</code> .....	133
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:RLEVel:LOWer</code> .....	133
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:RLEVel:OFFSet</code> .....	133

FORMat:DEXPort:DSEParator.....	134
FORMat:DEXPort:HEADer.....	134
FORMat:DEXPort:TRACes.....	134
FORMat:DIMPort:TRACes.....	135
FORMat:DEXPort:XDIStrib.....	135
MMEMory:LOAD<n>:TRACe.....	136
MMEMory:STORe<n>:TRACe.....	136
[SENSe:]SPURs:SUPPress.....	136
[SENSe:]SPURs:THReshold.....	137
TRACe<n>:COPY.....	137
TRACe<n>[:DATA].....	137
DISPlay[:WINDow<n>]:TRACe<t>:LABel[:STATe].....	137
DISPlay[:WINDow<n>]:TRACe<t>:LABel:TEXT.....	138

---

### CALCulate<n>:MATH<t>[:EXPRession][:DEFine] <Expression>

Selects the mathematical expression for trace mathematics.

Before you can use the command, you have to turn trace mathematics on.

#### Suffix:

<n>	Window
<t>	irrelevant

#### Parameters:

<Expression>	<b>(TRACE1-TRACE2)</b> Subtracts trace 2 from trace 1.
	<b>(TRACE1-TRACE3)</b> Subtracts trace 3 from trace 1.
	<b>(TRACE1-TRACE4)</b> Subtracts trace 4 from trace 1.

#### Example:

```
CALC:MATH:STAT ON
Turns trace mathematics on.
CALC:MATH:EXPR:DEF (TRACE1-TRACE3)
Subtracts trace 3 from trace 1.
```

**Manual operation:** See "[Trace Math Function](#)" on page 63

---

### CALCulate<n>:MATH<t>:STATe <State>

Turns the trace mathematics on and off.

#### Suffix:

<n>	Window
<t>	irrelevant

#### Parameters:

<State>	ON   OFF   0   1
	<b>OFF   0</b> Switches the function off

**ON | 1**

Switches the function on

**Example:**

CALC:MATH:STAT ON

Turns on trace mathematics.

**Manual operation:**See ["Trace Math Function"](#) on page 63See ["Trace Math Off"](#) on page 63**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE <Mode>**

Selects the trace mode. If necessary, the selected trace is also activated.

**Suffix:**<n> [Window](#)<w> subwindow  
Not supported by all applications<t> [Trace](#)**Example:**

INIT:CONT OFF

Switching to single sweep mode.

SWE:COUN 16

Sets the number of measurements to 16.

DISP:TRAC3:MODE WRIT

Selects clear/write mode for trace 3.

INIT;\*WAI

Starts the measurement and waits for the end of the measurement.

**Manual operation:**See ["Trace Mode"](#) on page 58**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture <Aperture>**Defines the degree (aperture) of the trace smoothing, if [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:SMOothing\[:STATE\]](#) TRUE.**Suffix:**<n> [Window](#)

&lt;w&gt; subwindow

<t> [Trace](#)**Parameters:**<Aperture> Range: 1 to 50  
\*RST: 2  
Default unit: PCT**Example:**

DISP3:TRAC2:SMO:APER 5

Defines an aperture of 5% for trace 2 in window 3

**Manual operation:**See ["Smoothing"](#) on page 58

---

**DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:SMOothing[:STATe] <State>**

Turns trace smoothing for a particular trace on and off.

If enabled, the trace is smoothed by the value specified using [DISPlay\[:WINDow<n>\]\[:SUBWIndow<w>\]:TRACe<t>:SMOothing:APERture](#) on page 127.

**Suffix:**

<n> [Window](#)

<w> subwindow

<t> [Trace](#)

**Parameters:**

<State> ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

DISP3:TRAC2:SMO ON

Turns on trace smoothing for trace 2 in window 3

**Manual operation:** See "[Smoothing](#)" on page 58

---

**DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:TYPE <Type>**

Selects the trace smoothing method.

**Suffix:**

<n> 1..n

<t> 1..n  
[Trace](#)

**Parameters:**

<Type> LINear | LOGarithmic | MEDian

**LINear**

Linear smoothing.

**LOGarithmic**

Logarithmic smoothing.

**MEDian**

Median smoothing.

\*RST: LIN

**Example:**

DISP:TRAC2:SMO:TYPE LIN

Selects linear smoothing for trace 2.

---

**DISPlay[:WINDow<n>]:TRACe<t>:SPURs:SUPPpress <State>**

Turns spur removal for a specific trace on and off.



**Suffix:**

<n> 1..n  
Window

<t> 1..n  
Trace

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: OFF

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe] <State>**

Turns a trace on and off.

The measurement continues in the background.

**Suffix:**

<n> Window

<w> subwindow  
Not supported by all applications

<t> Trace

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on

**Example:** DISP:TRAC3 ON

**Manual operation:** See "[Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6](#)" on page 57

**DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:HDECade <HalfDecade>**

Selects the half decade to be displayed.

Before you can use the command you have to select the half decade scope for the x-axis with `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:SCOPE`.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<HalfDecade> Start offset frequency of the half decade you want to display. Note that the half decade you want to display has to be part of the current measurement range.

Range: 1 Hz to 100 GHz

\*RST: Half decade display is off.

Default unit: HZ

**Example:**

```
DISP:TRAC:X:HDEC 1KHZ
```

Displays the half decade beginning with 1 kHz.

**Manual operation:** See "[Half Decade](#)" on page 56

**DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:SCOPE <Scope>**

Selects the way the application scales the horizontal axis.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Scope> MRANge | HDECades | MANual

**MRANge**

Shows the complete measurement range.

**HDECade**

Shows a particular half decade only.

You can select a particular half decade with .

**MANual**

Shows a custom part of the measurement range.

You can select the start and stop offsets with .

\*RST: MRANge

**Example:**

```
DISP:TRAC:X:SCOP MRAN
```

Shows the complete measurement range on the x-axis.

**Manual operation:** See "[X-Axis Scope](#)" on page 56

**DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:START <StartFrequency>**

Selects the start frequency of the display range.

Before you can use the command you have to select a manual display range for the x-axis with `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:SCOPE`.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<StartFrequency> Start offset frequency of a half decade.  
 Note that the start offset you want to display has to be part of the current measurement range.  
 Range: 100 mHz to 3 GHz  
 \*RST: Manual display range is OFF  
 Default unit: HZ

**Example:**

DISP:TRAC:X:STAR 100HZ  
 Defines 100 Hz as the start of the display range.

**Manual operation:** See "[X-Axis Start / Stop](#)" on page 56

**DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:STOP <StopFrequency>**

Selects the stop frequency of the display range.

Before you can use the command you have to select a manual display range for the x-axis with [DISPlay\[:WINDow<n>\]:TRACe<t>:X\[:SCALe\]:SCOPE](#).

**Suffix:**

<n> 1..n  
 <t> 1..n

**Parameters:**

<StopFrequency> Stop offset frequency of a half decade.  
 Note that the stop offset you want to display has to be part of the current measurement range.  
 Range: 300 mHz to 10 GHz  
 \*RST: Manual display range is OFF  
 Default unit: HZ

**Example:**

DISP:TRAC:X:STOP 3KHZ  
 Defines 3 kHz as the end of the display range.

**Manual operation:** See "[X-Axis Start / Stop](#)" on page 56

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>**

Defines the display range of the y-axis.

**Suffix:**

<n> 1..n  
[Window](#)  
 <t> irrelevant

**Parameters:**

<Range> Default unit: dBc / Hz

**Manual operation:** See "[Top / Range / Bottom](#)" on page 57

---

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO <Mode>**

Turns automatic scaling of the vertical axis on and off.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Mode>

**ON**

Automatic scaling is on.

**OFF**

Automatic scaling is off.

**ONCE**

Automatic scaling is performed once, then turned off again.

\*RST: ON

**Example:**

DISP:WIND2:TRAC:Y:SCAL:AUTO ONCE

Scales the vertical axis once.

**Manual operation:** See "Y Axis Scaling" on page 56

---

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MANual <Mode>**

Selects the type of manual scaling of the vertical axis.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Mode>

OFF | TBOTtom | TRANge | BRANge

**OFF**

Turns manual scaling of the y-axis off.

**TBOTtom**

Scaling based on the values on the bottom and top of the diagram.

**BRANge**

Scaling based on the value at the bottom of the diagram and the axis range.

**TRANge**

Scaling based on the value at the top of the diagram and the axis range.

\*RST: ON

**Example:**

DISP:WIND2:TRAC:Y:SCAL:MAN TRAN

Scaling of the vertical axis based on the top and the range of the axis.

**Manual operation:** See "Y Axis Scaling" on page 56

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <Reference>**

Defines the reference value or upper border of the diagram area.

Note that you have to select manual y-axis scaling before you can use the command.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Reference> Range: -200 to 0  
\*RST: -20  
Default unit: DBC/HZ

**Example:**

DISP:TRAC:Y:RLEV -50  
Defines a reference value of -50 dBc/Hz.

**Manual operation:** See "[Top / Range / Bottom](#)" on page 57

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:LOWer <LowerReference>**

Defines the reference value or upper border of the diagram area.

Note that you have to select manual y-axis scaling before you can use the command.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<LowerReference> Range: -400 to 1  
\*RST: -120  
Default unit: DBC/HZ

**Example:**

DISP:TRAC:Y:RLEV:LOW -100  
Sets the bottom of the diagram to .100 dBc/Hz.

**Manual operation:** See "[Top / Range / Bottom](#)" on page 57

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Offset>**

Defines the trace offset.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Offset> Range: -200 to 200  
\*RST: 0dB  
Default unit: DB

**Example:** `DISP:TRAC:Y:RLEV:OFFS -10`  
 Defines a trace offset of -10 dB.

**Manual operation:** See ["Trace Offset"](#) on page 57

#### **FORMat:DEXPort:DSEParator** <Separator>

Selects the decimal separator for data exported in ASCII format.

**Parameters:**

<Separator>            POINT | COMMa

**COMMa**

Uses a comma as decimal separator, e.g. *4,05*.

**POINT**

Uses a point as decimal separator, e.g. *4.05*.

\*RST:            \*RST has no effect on the decimal separator.  
 Default is POINT.

**Example:** `FORM:DEXP:DSEP POIN`  
 Sets the decimal point as separator.

**Manual operation:** See ["Decimal Separator"](#) on page 61

#### **FORMat:DEXPort:HEADer** <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

**Parameters:**

<State>            ON | OFF | 0 | 1

\*RST:            1

**Manual operation:** See ["Include Instrument & Measurement Settings"](#) on page 60

#### **FORMat:DEXPort:TRACes** <Selection>

Selects the data to be included in a data export file (see [MMEMory:STORe<n>:TRACe](#) on page 136).

**Parameters:**

<Selection>        SINGle | ALL

**SINGle**

Only a single trace is selected for export, namely the one specified by the [MMEMory:STORe<n>:TRACe](#) command.

**ALL**

Selects all active traces and result tables (e.g. "Result Summary", marker peak list etc.) in the current application for export to an ASCII file.

The <trace> parameter for the `MMEMoRY:STORe<n>:TRACe` command is ignored.

\*RST: SINGle

**Manual operation:** See "Export all Traces and all Table Results" on page 60

**FORMat:DIMPoRT:TRACes** <Selection>

Selects the data to be included in a data import file (see `MMEMoRY:LOAD<n>:TRACe` on page 136).

**Parameters:**

<Selection> SINGle | ALL

**SINGle**

Only a single trace is selected for import, namely the one specified by the `MMEMoRY:LOAD<n>:TRACe` on page 136 command.

**ALL**

Imports several traces at once, overwriting the existing trace data for any active trace in the result display with the same trace number. Data from the import file for currently not active traces is not imported.

The <trace> parameter for the `MMEMoRY:LOAD<n>:TRACe` on page 136 command is ignored.

\*RST: SINGle

**Manual operation:** See "Import All Traces/Import to Trace" on page 62  
See "Import ASCII File to Trace" on page 62

**FORMat:DEXPoRT:XDIStrib** <XDistribution>

Defines how the x-values of the trace are determined in the frequency domain.

**Parameters:**

<XDistribution> STARtstop | BINCentered

**BINCentered**

The full measurement span is divided by the number of sweep points to obtain *bins*. The x-value of the sweep point is defined as the x-value at the center of the bin (bin/2).

**STARtstop**

(Default): The x-value of the first sweep point corresponds to the starting point of the full measurement span. The x-value of the last sweep point corresponds to the end point of the full measurement span. All other sweep points are divided evenly between the first and last points.

**Example:**

FORM:DEXP:XDIS BINC

**Manual operation:** See ["X-Value Distribution"](#) on page 61

---

**MMEMory:LOAD<n>:TRACe** <Trace>, <FileName>

Imports trace data from the specified window to an ASCII file.

**Suffix:**

<n> [Window](#)

**Parameters:**

<Trace> Number of the trace to be stored  
(This parameter is ignored for [FORMat:DImport:TRACesALL](#)).

<FileName> String containing the path and name of the import file.

---

**MMEMory:STORe<n>:TRACe** <Trace>, <FileName>

Exports trace data from the specified window to an ASCII file.

**Secure User Mode**

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the FSW base unit user manual.

**Suffix:**

<n> [Window](#)

**Parameters:**

<Trace> Number of the trace to be stored

<FileName> String containing the path and name of the target file.

**Example:** `MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'`  
Stores trace 1 from window 1 in the file TEST.ASC.

**Manual operation:** See ["Export Trace to ASCII File"](#) on page 61

---

**[SENSe:]SPURs:SUPPRes** <State>

Turns spur removal for all traces and windows on and off.

**Parameters:**

<State> ON | OFF | 1 | 0

**Example:** `//Remove spurs`  
`SPUR:SUPP ON`

**Manual operation:** See ["Spur Removal / Spur Threshold"](#) on page 58



---

**[SENSe:]SPURs:THReshold** <Threshold>

Defines the level threshold for spur removal.

**Parameters:**

<Threshold>            Range:     0 to 50  
                           \*RST:     0  
                           Default unit: DB

**Example:**            SPUR:THR 10  
 Defines a spur threshold of 50 dB.

**Manual operation:** See "[Spur Removal / Spur Threshold](#)" on page 58

---

**TRACe<n>:COPY** <TraceNumber>, <TraceNumber>

Copies data from one trace to another.

**Suffix:**

<n>                      [Window](#)

**Parameters:**

<TraceNumber>        **TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6**  
 The first parameter is the destination trace, the second parameter is the source.  
 (Note the 'e' in the parameter is required!)

**Example:**            TRAC:COPY TRACE1,TRACE2  
 Copies the data from trace 2 to trace 1.

**Manual operation:** See "[Copy Trace](#)" on page 59

---

**TRACe<n>[:DATA]** <Trace>

Queries the results of the graphical result displays.

**Suffix:**

<n>                      [Window](#)

**Parameters:**

<Trace>                TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

**Example:**            TRAC? TRACE1  
 Queries the data of trace 1.

**Manual operation:** See "[Phase Noise Diagram](#)" on page 16  
 See "[Spectrum Monitor](#)" on page 21

---

**DISPlay[:WINDow<n>]:TRACe<t>:LABel[:STATe]** <State>

This command turns the display of the trace label for a specific trace on and off.

The command can only be applied to active traces.

<b>Suffix:</b>	
<n>	1..n Window
<t>	1..n Trace
<b>Parameters:</b>	
<State>	ON   OFF   1   0 *RST: OFF
<b>Example:</b>	//Turn on the label for trace 2 DISP:TRAC2:LAB ON

---

**DISPlay[:WINDow<n>]:TRACe<t>:LABel:TEXT <Label>**

This command defines the contents of a trace label.

<b>Suffix:</b>	
<n>	1..n Window
<t>	1..n Trace
<b>Parameters:</b>	
<Label>	String containing the trace label.
<b>Example:</b>	//Assign a label to trace 2. DISP:TRAC2:LAB:TEXT 'A YELLOW TRACE'

## 8.11 Configure numerical result displays

The following commands are necessary to configure the numerical phase noise result displays.

- [Configuring residual noise measurements](#)..... 138
- [Reading out residual noise results](#)..... 141
- [Configuring spot noise measurements](#)..... 144
- [Reading out the spur list](#)..... 147
- [Reading out measured values](#)..... 148
- [Reading out the sweep result list](#)..... 149

### 8.11.1 Configuring residual noise measurements

<a href="#">CALCulate&lt;n&gt;:EVALuation:START</a> .....	139
<a href="#">CALCulate&lt;n&gt;:EVALuation[:STATe]</a> .....	139
<a href="#">CALCulate&lt;n&gt;:EVALuation:STOP</a> .....	139

CALCulate<n>:EVALuation:USER<range>:START.....	140
CALCulate<n>:EVALuation:USER<range>:STOP.....	140
CALCulate<n>:EVALuation:USER<range>:TRACe.....	141

---

### CALCulate<n>:EVALuation:START <OffsetFrequency>

Defines the start point of the residual noise integration range.

Before you can use the command, you have to turn on the measurement range integration with `CALCulate<n>:EVALuation[:STATe]` on page 139.

#### Suffix:

<n>                      [Window](#)

<n>                      1..n

#### Parameters:

<OffsetFrequency>    The minimum offset is 1 Hz. The maximum offset depends on the hardware you are using.

\*RST:                  1 kHz

Default unit: HZ

#### Example:

`CALC:EVAL:STAR 1 kHz`

Defines an start point of 1 kHz for the residual noise range.

#### Manual operation:

See "[Meas Range](#)" on page 64

See "[User Range](#)" on page 65

---

### CALCulate<n>:EVALuation[:STATe] <State>

Turn integration of the measurement range for residual noise calculation on and off.

#### Suffix:

<n>                      [Window](#)

<n>                      1..n

#### Parameters:

<State>                      **OFF | 0**

Calculates the residual noise over the entire measurement range.

**ON | 1**

Calculates the residual noise over a customized range.

\*RST:                  0

#### Example:

`CALC:EVAL ON`

Uses a customized offset range for residual noise calculation.

#### Manual operation:

See "[Meas Range](#)" on page 64

---

### CALCulate<n>:EVALuation:STOP <OffsetFrequency>

Defines the end point of the residual noise integration range.

Before you can use the command, you have to turn on the measurement range integration with `CALCulate<n>:EVALuation[:STATe]` on page 139.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<OffsetFrequency> The minimum offset is 1 Hz. The maximum offset depends on the hardware you are using.

\*RST: 1 MHz

Default unit: HZ

**Example:**

`CALC:EVAL:STOP 1 MHz`

Defines an end point of 1 MHz for the residual noise range.

**CALCulate<n>:EVALuation:USER<range>:START <OffsetFrequency>****Suffix:**

<n> 1..n

<range> 1..n

**Parameters:**

<OffsetFrequency> Default unit: HZ

**CALCulate<n>:EVALuation:USER<range>:STOP <OffsetFrequency>**

Defines the end point of a custom residual noise calculation range.

Before you can use the command, you have to assign the user range to a trace with `CALCulate<n>:EVALuation:USER<range>:TRACe` on page 141.

**Suffix:**

<n> 1..n  
[Window](#)

<range> 1..n

**Parameters:**

<OffsetFrequency> The minimum offset is 1 Hz. The maximum offset depends on the hardware you are using.

\*RST: 1 MHz

Default unit: HZ

**Example:**

`CALC:EVAL:USER2:STOP 100kHz`

Defines an end point of 100 kHz for the second user range.

**Manual operation:**

See "[Meas Range](#)" on page 64

See "[User Range](#)" on page 65

**CALCulate<n>:EVALuation:USER<range>:TRACe <Trace>**

Selects the trace for a custom residual noise calculation range.

**Suffix:**

<n> 1..n  
Window

<range> 1..n  
Selects the user range.

**Parameters:**

<Trace> NONE | TRACe1 | TRACe2 | TRACe3 | TRACe4 | TRACe5 | TRACe6

**TRACE1 ... TRACE6**

Trace to assign the user range to.

**NONE**

Turns a user range off.

**Example:**

CALC:EVAL:USER2:TRAC TRACE2  
Assigns the second user range to trace 2.

**Manual operation:** See "User Range" on page 65

## 8.11.2 Reading out residual noise results

FETCh:PNOise<t>:IPN?.....	141
FETCh:PNOise<t>:RFM?.....	141
FETCh:PNOise<t>:RMS?.....	142
FETCh:PNOise<t>:RPM?.....	142
FETCh:PNOise<t>:USER<range>:IPN?.....	142
FETCh:PNOise<t>:USER<range>:RFM?.....	143
FETCh:PNOise<t>:USER<range>:RMS?.....	143
FETCh:PNOise<t>:USER<range>:RPM?.....	143

**FETCh:PNOise<t>:IPN?**

Queries the Integrated Phase Noise for the first trace.

**Suffix:**

<t> 1..n

**Example:**

FETC:PNO2:IPN?  
Queries the Integrated Phase Noise for the first trace in the diagram.

**Usage:** Query only

**FETCh:PNOise<t>:RFM?**

Queries the residual FM for the first trace.

**Suffix:**  
 <t> 1..n  
[Trace](#)

**Example:** FETC:PNO2:RFM?  
 Queries the residual FM for the first trace in the diagram.

**Usage:** Query only

---

**FETCh:PNOise<t>:RMS?**

Queries the residual RMS jitter for the first trace.

**Suffix:**  
 <t> 1..n  
[Trace](#)

**Example:** FETC:PNO2:RMS?  
 Queries the RMS jitter for the first trace in the diagram.

**Usage:** Query only

---

**FETCh:PNOise<t>:RPM?**

Queries the residual PM for a particular user range.

The trace that is queried depends on [CALCulate<n>:EVALuation:USER<range>:TRACe](#).

**Suffix:**  
 <t> 1..n  
[Trace](#)

<range> 1..3  
 Selects the user range.

**Example:** FETC:PNO:USER2:RPM?  
 Queries the residual PM for user range 2.

**Usage:** Query only

---

**FETCh:PNOise<t>:USER<range>:IPN?**

Queries the Integrated Phase Noise for a particular user range.

The trace that is queried depends on [CALCulate<n>:EVALuation:USER<range>:TRACe](#).

**Suffix:**  
 <t> 1..n  
[Trace](#)

<range> 1..n  
 Selects the user range.

**Example:** FETC:PNO:USER2:IPN?  
Queries the Integrated Phase Noise for user range 2.

**Usage:** Query only

#### FETCh:PNOise<t>:USER<range>:RFM?

Queries the residual FM for a particular user range.

The trace that is queried depends on [CALCulate<n>:EVALuation:USER<range>:TRACe](#).

**Suffix:**

<t> 1..n  
[Trace](#)

<range> 1..n  
Selects the user range.

**Example:** FETC:PNO:USER2:RFM?  
Queries the residual FM for user range 2.

**Usage:** Query only

**Manual operation:** See "[Residual Noise](#)" on page 17

#### FETCh:PNOise<t>:USER<range>:RMS?

Queries the residual RMS jitter for a particular user range.

The trace that is queried depends on [CALCulate<n>:EVALuation:USER<range>:TRACe](#).

**Suffix:**

<t> 1..n  
[Trace](#)

<range> 1..n  
Selects the user range.

**Example:** FETC:PNO:USER2:RMS?  
Queries the RMS jitter for user range 2.

**Usage:** Query only

**Manual operation:** See "[Residual Noise](#)" on page 17

#### FETCh:PNOise<t>:USER<range>:RPM?

Queries the residual PM for the first trace.

**Suffix:**

<t> 1..n  
[Trace](#)

<range> 1..n

<b>Example:</b>	FETC:PNO:RPM? Queries the residual PM for the first trace of the diagram.
<b>Usage:</b>	Query only
<b>Manual operation:</b>	See " <a href="#">Residual Noise</a> " on page 17

### 8.11.3 Configuring spot noise measurements

CALCulate<n>:SNOise<m>:AOFF.....	144
CALCulate<n>:SNOise<m>:DECades[:STATe].....	144
CALCulate<n>:SNOise<m>:DECades:X.....	145
CALCulate<n>:SNOise<m>:DECades:Y.....	145
CALCulate<n>:SNOise<m>[:STATe].....	145
CALCulate<n>:SNOise<m>:X.....	146
CALCulate<n>:SNOise<m>:Y.....	146
DISPlay[:WINDow<n>]:TRACe<t>:SELect.....	147

---

#### CALCulate<n>:SNOise<m>:AOFF

Turns all spot noise markers off (custom and 10<sup>x</sup> markers).

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n

**Example:** CALC:SNO:AOFF  
Turns all spot noise markers off.

**Manual operation:** See "[On User Defined Offsets / Offset Frequency](#)" on page 66

---

#### CALCulate<n>:SNOise<m>:DECades[:STATe] <State>

Turns the spot noise calculation on every 10<sup>x</sup> offset frequency on and off.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Example:** CALC:SNO:DEC ON  
Turns the spot noise calculation for each decade start on.

**Manual operation:** See "[On All Decade Edges](#)" on page 65  
See "[On User Defined Offsets / Offset Frequency](#)" on page 66



**CALCulate<n>:SNOise<m>:DECades:X**

Queries the horizontal position of the 10<sup>x</sup> offset frequency spot noise markers.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n

**Return values:**

<OffsetFrequency> List of offset frequencies, one for each 10<sup>x</sup> spot noise marker. The number of return values depends on the measurement range.

Default unit: Hz

**Example:**

CALC:SNO:DEC:X?

Return values, e.g.:

1000,10000,100000,1000000

**Manual operation:** See "[Spot Noise](#)" on page 18  
See "[On All Decade Edges](#)" on page 65

**CALCulate<n>:SNOise<m>:DECades:Y**

Queries the vertical position of the 10<sup>x</sup> offset frequency spot noise markers.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n

**Return values:**

<Level> List of level values, one for each 10<sup>x</sup> spot noise marker. The number of return values depends on the measurement range.

Default unit: dBc/Hz

**Example:**

CALC:SNO:DEC:Y?

Return values, e.g.:

-152.560974121094, -136.443389892578,  
-145.932891845703, -152.560974121094

**Manual operation:** See "[Spot Noise](#)" on page 18  
See "[On All Decade Edges](#)" on page 65

**CALCulate<n>:SNOise<m>[:STATe] <State>**

Turns a custom spot noise marker on and off.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n  
Selects the spot noise marker.

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: All 1

**Example:** CALC:SNO3:STATE ON  
Turns spot noise marker 3 on.

**CALCulate<n>:SNOise<m>:X <OffsetFrequency>**

Defines the horizontal position of a custom spot noise marker.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n  
Selects the spot noise marker.

**Parameters:**

<OffsetFrequency> The minimum offset is 1 Hz. The maximum offset depends on the hardware you are using.  
The default value varies for each of the five spot noise markers. For marker 1 it is 1 kHz, for marker 2 it is 10 kHz, for marker 3 it is 100 kHz, for marker 4 it is 1 MHz and for marker 5 it is 10 MHz  
Default unit: HZ

**Example:** CALC:SNO3:X 2MHz  
Positions the third custom spot noise marker to an offset frequency of 2 MHz.

**Manual operation:** See ["On User Defined Offsets / Offset Frequency"](#) on page 66

**CALCulate<n>:SNOise<m>:Y <Level>**

Queries the vertical position of a custom spot noise marker.

**Suffix:**

<n> 1..n  
[Window](#)

<m> 1..n  
Selects the spot noise marker

**Parameters:**

<Level> Phase noise level at the marker position.  
Default unit: dBc/Hz

**Example:** CALC:SNO3:Y?  
Queries the level of the third custom spot noise marker.

**Manual operation:** See "Spot Noise" on page 18  
See "On User Defined Offsets / Offset Frequency" on page 66

---

### DISPlay[:WINDow<n>]:TRACe<t>:SElect <Trace>

Selects the trace for which spot noise results are calculated.

A trace can only be selected if it has been turned on ("Trace Mode" ≠ Blank).

#### Suffix:

<n> 1..n  
irrelevant

<t> 1..n  
irrelevant

#### Parameters:

<Trace> Number of the trace you want to select.

Range: 1 to 6

\*RST: 1

**Example:** DISP:TRAC:SEL 2  
Selects trace number 2.

**Manual operation:** See "Spot Noise" on page 18

## 8.11.4 Reading out the spur list

FETCh:PNOise<t>:SPURs?.....	147
FETCh:PNOise<t>:SPURs:DISCReTe?.....	148
FETCh:PNOise<t>:SPURs:RANDOm?.....	148

---

### FETCh:PNOise<t>:SPURs?

Queries the location and level of all spurs that have been detected.

#### Suffix:

<t> 1..n

#### Return values:

<Spurs> Returns two values (frequency and level) for each each spur that has been detected.

**Example:** FETC:PNO:SPUR?  
would return, e.g.  
1999.232666,-0.639974,6494.312500,-0.760579,  
19992.324219,-0.639974

**Usage:** Query only

**Manual operation:** See "Spur List" on page 19

---

**FETCh:PNOise<t>:SPURs:DISCReTe?**

Queries the Discrete Jitter result.

**Suffix:**

<t> 1..n

**Return values:**

<Jitter>

**Example:**

FETC:PNO:SPUR:DISC?  
would return, e.g.  
2.3e-08

**Usage:** Query only

**Manual operation:** See "[Spur List](#)" on page 19

---

**FETCh:PNOise<t>:SPURs:RANDOm?****Suffix:**

<t> 1..n

**Return values:**

<Jitter>

**Usage:** Query only

**Manual operation:** See "[Spur List](#)" on page 19

---

### 8.11.5 Reading out measured values

[FETCh:PNOise<t>:MEASured:FREQUency?](#)..... 148

[FETCh:PNOise<t>:MEASured:LEVel?](#)..... 148

---

**FETCh:PNOise<t>:MEASured:FREQUency?**

Queries the carrier frequency that has been actually measured.

The measured frequency is shown in the channel bar.

**Suffix:**

<t> 1..n

**Return values:**

<Frequency> Frequency in Hz.

**Example:**

FETC:PNO:MEAS:FREQ?  
Queries the measured frequency.

**Usage:** Query only

---

**FETCh:PNOise<t>:MEASured:LEVel?**

Queries the level of the DUT that has been actually measured.

The measured level is shown in the channel bar.

**Suffix:**

<t> 1..n

**Return values:**

<Level> Level in dBm.

**Example:**

FETC:PNO:MEAS:LEV?  
Queries the measured level.

**Usage:**

Query only

### 8.11.6 Reading out the sweep result list

FETCh:PNOise<t>:SWEep:AVG?.....	149
FETCh:PNOise<t>:SWEep:FDRift?.....	149
FETCh:PNOise<t>:SWEep:LDRift?.....	150
FETCh:PNOise<t>:SWEep:MDRift?.....	150
FETCh:PNOise<t>:SWEep:SRATe?.....	151
FETCh:PNOise<t>:SWEep:STARt?.....	151
FETCh:PNOise<t>:SWEep:STOP?.....	151

---

#### FETCh:PNOise<t>:SWEep:AVG?

Queries the number of measurements that have been performed in each half decade.

**Suffix:**

<t> 1..n

**Return values:**

<Measurements> Number of measurements as displayed in the Sweep Result List.  
The command returns one value for each half decade as a comma separated list.

**Example:**

FETC:PNO:SWE:AVG?  
would return, e.g.:  
10,10,10,10,10

**Usage:**

Query only

**Manual operation:** See "[Sweep Result List](#)" on page 20

---

#### FETCh:PNOise<t>:SWEep:FDRift?

Queries the frequency drift in each half decade.

**Suffix:**

<t> 1..n

**Return values:**

<Frequency> Frequency drift as displayed in the Sweep Result List.  
The command returns one value for each half decade as a comma separated list.

Default unit: Hz

**Example:**

FETC:PNO:SWE:FDR?

would return, e.g.:

-203.565049124882, -198.254803592339,  
-179.608235809952, -126.506989398971,  
-95.0386250484735

**Usage:**

Query only

**Manual operation:** See "[Sweep Result List](#)" on page 20

**FETCh:PNOise<t>:SWEep:LDRift?**

Queries the level drift in each half decade.

**Suffix:**

<t> 1..n

**Return values:**

<Level> Level drift as displayed in the Sweep Result List.  
The command returns one value for each half decade as a comma separated list.

Default unit: dB

**Example:**

FETC:PNO:SWE:LDR?

would return, e.g.:

0.84823463324, 6.55278904401, 1.02393361087,  
2.10021296216, 5.28119567376

**Usage:**

Query only

**Manual operation:** See "[Sweep Result List](#)" on page 20

**FETCh:PNOise<t>:SWEep:MDRift?**

Queries the maximum frequency drift in each half decade.

**Suffix:**

<t> 1..n

**Return values:**

<Frequency> Frequency drift as displayed in the Sweep Result List.  
The command returns one value for each half decade as a comma separated list.

Default unit: Hz

**Example:**

FETC:PNO:SWE:MDR?

would return, e.g.:

2.17, 11.45, 105.11, 219.37, 553.48

**Usage:** Query only  
**Manual operation:** See "[Sweep Result List](#)" on page 20

**FETCh:PNOise<t>:SWEep:SRATe?**

Queries the sampling rate used in each half decade.

**Suffix:**  
 <t> 1..n

**Return values:**  
 <SamplingRate> Sampling rate as displayed in the Sweep Result List.  
 The command returns one value for each half decade as a comma separated list.  
 Default unit: Hz

**Example:** FETC:PNO:SWE:SRAT?  
 would return, e.g.:  
 25000,75000,250000,750000,2500000

**Usage:** Query only  
**Manual operation:** See "[Sweep Result List](#)" on page 20

**FETCh:PNOise<t>:SWEep:STARt?**

Queries the start frequency offset of each half decade.

**Suffix:**  
 <t> 1..n

**Return values:**  
 <Frequency> Frequency offset as displayed in the Sweep Result List.  
 The command returns one value for each half decade as a comma separated list.  
 Default unit: Hz

**Example:** FETC:PNO:SWE:STAR?  
 would return, e.g.:  
 1000,3000,10000,30000,100000

**Usage:** Query only  
**Manual operation:** See "[Sweep Result List](#)" on page 20

**FETCh:PNOise<t>:SWEep:STOP?**

Queries the stop frequency offset of each half decade.

**Suffix:**  
 <t> 1..n

<b>Return values:</b>	
<Measurements>	Frequency offset as displayed in the Sweep Result List. The command returns one value for each half decade as a comma separated list. Default unit: Hz
<b>Example:</b>	FEFC:PNO:SWE:STOP? would return, e.g.: 3000,10000,30000,100000,300000
<b>Usage:</b>	Query only
<b>Manual operation:</b>	See " <a href="#">Sweep Result List</a> " on page 20

## 8.12 Using markers

The following commands are necessary to control markers.

- [Using markers](#)..... 152
- [Using delta markers](#)..... 154
- [Configuring markers](#)..... 157
- [Using the marker zoom](#)..... 158

### 8.12.1 Using markers

<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:AOFF</a> .....	152
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;[:STATe]</a> .....	152
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:TRACe</a> .....	153
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:X</a> .....	153
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:Y</a> .....	154

---

#### **CALCulate<n>:MARKer<m>:AOFF**

Turns off all markers.

**Suffix:**

<n>                    [Window](#)

<m>                    [Marker](#)

**Example:**            CALC:MARK:AOFF  
Switches off all markers.

**Manual operation:** See "[All Markers Off](#)" on page 76

---

#### **CALCulate<n>:MARKer<m>[:STATe] <State>**

Turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.



**Suffix:**<n> [Window](#)<m> [Marker](#)**Parameters:**

&lt;State&gt; ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

CALC:MARK3 ON

Switches on marker 3.

**Manual operation:** See "[Marker 1 ... Marker x](#)" on page 74  
 See "[Marker Type](#)" on page 75

**CALCulate<n>:MARKer<m>:TRACe <Trace>**

Selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

**Suffix:**<n> [Window](#)<m> [Marker](#)**Parameters:**<Trace> **1 to 6**

Trace number the marker is assigned to.

**Example:**

//Assign marker to trace 1

CALC:MARK3:TRAC 2

**Manual operation:** See "[Assigning the Marker to a Trace](#)" on page 75

**CALCulate<n>:MARKer<m>:X <Position>**

Moves a marker to a particular coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

**Suffix:**<n> 1..n  
[Window](#)<m> 1..n  
[Marker](#)

**Parameters:**

<Position> Numeric value that defines the marker position on the x-axis.  
Default unit: HZ

**Example:**

CALC:MARK2:X 1.7MHz  
Positions marker 2 to frequency 1.7 MHz.

**CALCulate<n>:MARKer<m>:Y <Level>****Suffix:**

<n> 1..n

<m> 1..n

**Parameters:**

<Level>

**8.12.2 Using delta markers**

CALCulate<n>:DELTamarker<m>:AOFF.....	154
CALCulate<n>:DELTamarker<m>:MREFerence.....	154
CALCulate<n>:DELTamarker<m>[:STATe].....	155
CALCulate<n>:DELTamarker<m>:TRACe.....	155
CALCulate<n>:DELTamarker<m>:X.....	156
CALCulate<n>:DELTamarker<m>:Y.....	156

**CALCulate<n>:DELTamarker<m>:AOFF**

Turns off *all* delta markers.

**Suffix:**

<n> [Window](#)

<m> irrelevant

**Example:**

CALC:DELT:AOFF  
Turns off all delta markers.

**CALCulate<n>:DELTamarker<m>:MREFerence <Reference>**

Selects a reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Reference> **1 to 16**  
Selects markers 1 to 16 as the reference.

**FIXed**

Selects the fixed reference as the reference.

**Example:**

`CALC:DELT3:MREF 2`

Specifies that the values of delta marker 3 are relative to marker 2.

**Manual operation:** See ["Reference Marker"](#) on page 75

**CALCulate<n>:DELTamarker<m>[:STATe] <State>**

Turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTmarker turns on delta marker 1.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<State> ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

`CALC:DELT2 ON`

Turns on delta marker 2.

**Manual operation:** See ["Marker 1 ... Marker x"](#) on page 74  
See ["Marker Type"](#) on page 75

**CALCulate<n>:DELTamarker<m>:TRACe <Trace>**

Selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Trace> Trace number the marker is assigned to.

**Example:**

`CALC:DELT2:TRAC 2`

Positions delta marker 2 on trace 2.

**CALCulate<n>:DELTaMarker<m>:X <Position>**

Moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

**Suffix:**

<n> 1..n  
Window

<m> 1..n  
Marker

**Parameters:**

<Position> The position is relative to the reference marker.  
The unit is Hz (offset frequency).  
A query returns the absolute position of the delta marker.  
Range: The value range depends on the current measurement range.  
Default unit: HZ

**Example:**

CALC:DELT:X?  
Outputs the absolute frequency/time of delta marker 1.

**CALCulate<n>:DELTaMarker<m>:Y <Level>**

Queries the relative position of a delta marker on the y-axis.

If necessary, the command activates the delta marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 91.

**Suffix:**

<n> 1..n  
Window

<m> 1..n  
Marker

**Parameters:**

<Level> Phase noise level.  
Default unit: dBc/Hz

**Example:**

```
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2 ON
Switches on delta marker 2.
CALC:DELT2:Y?
Outputs measurement value of delta marker 2.
```

### 8.12.3 Configuring markers

<a href="#">DISPlay[:WINDow&lt;n&gt;]:MINFo[:STATe].....</a>	157
<a href="#">DISPlay[:WINDow&lt;n&gt;]:MTABLE.....</a>	157

---

#### DISPlay[:WINDow<n>]:MINFo[:STATe] <State>

Turns the marker information in all diagrams on and off.

**Suffix:**

<n> irrelevant

**Parameters:**

<State>

**ON | 1**  
Displays the marker information in the diagrams.

**OFF | 0**  
Hides the marker information in the diagrams.

\*RST: 1

**Example:**

```
DISP:MINF OFF
Hides the marker information.
```

**Manual operation:** See "[Marker Info](#)" on page 76

---

#### DISPlay[:WINDow<n>]:MTABLE <DisplayMode>

Turns the marker table on and off.

**Suffix:**

<n> irrelevant

**Parameters:**

<DisplayMode>

**ON | 1**  
Turns on the marker table.

**OFF | 0**  
Turns off the marker table.

**AUTO**  
Turns on the marker table if 3 or more markers are active.

\*RST: AUTO

**Example:**

```
DISP:MTAB ON
Activates the marker table.
```

**Manual operation:** See "Marker Table Display" on page 76

## 8.12.4 Using the marker zoom

CALCulate<n>:MARKer<m>:FUNction:ZOOM.....	158
DISPlay[:WINDow<n>]:ZOOM[:STATe].....	158

---

### CALCulate<n>:MARKer<m>:FUNction:ZOOM <ZoomFactor>

Defines the factor or magnitude of the marker zoom.

**Suffix:**

<n>	1..n
<m>	1..n

**Parameters:**

<ZoomFactor>	Range: 1 to 20
	*RST: Zoom OFF

**Example:** CALC:MARK:FUNC:ZOOM 12  
Zooms into the diagram with a factor of 10 around marker 1.

**Manual operation:** See "Marker Zoom" on page 75

---

### DISPlay[:WINDow<n>]:ZOOM[:STATe] <State>

Turns the marker zoom for marker 1 on and off.

**Suffix:**

<n>	1..n
-----	------

**Parameters:**

<State>	ON   OFF   1   0
	*RST: 0

**Example:** DISP:ZOOM ON  
Turns on the marker zoom.

**Manual operation:** See "Marker Zoom" on page 75

## 8.13 Configuring in- and outputs

The following commands are necessary to configure the frontend settings.

INPut:COUPling.....	159
INPut:DPATh.....	159
INPut:FILTer:YIG[:STATe].....	159
INPut:CONNector.....	159

---

**INPut:COUPling** <CouplingType>

Selects the coupling type of the RF input.

**Parameters:**

<CouplingType> AC | DC  
**AC**  
 AC coupling  
**DC**  
 DC coupling  
 \*RST: AC

**Example:** INP:COUP DC

**Manual operation:** See "[Coupling](#)" on page 42

---

**INPut:DPATH** <DirectPath>

Enables or disables the use of the direct path for frequencies close to 0 Hz.

**Parameters:**

<DirectPath> AUTO | OFF  
**AUTO | 1**  
 (Default) the direct path is used automatically for frequencies close to 0 Hz.  
**OFF | 0**  
 The analog mixer path is always used.

**Example:** INP:DPAT OFF

**Manual operation:** See "[Direct Path](#)" on page 52

---

**INPut:FILTer:YIG[:STATe]** <State>

Enables or disables the YIG filter.

**Parameters:**

<State> ON | OFF | 0 | 1

**Example:** INP:FILT:YIG OFF  
Deactivates the YIG-preselector.

**Manual operation:** See "[YIG-Preselector](#)" on page 53

---

**INPut:CONNector** <ConnType>

Determines which connector the input for the measurement is taken from.

**Parameters:**

<ConnType> **RF**  
 RF input connector

**RFProbe**

Active RF probe

**\*RST:** RF**Example:**

INP:CONN RF

Selects input from the RF input connector.

**Manual operation:**See "[Input Connector](#)" on page 53

## 8.14 Automatic measurement configuration

The following commands are necessary to determine measurement parameters automatically.

<a href="#">[SENSe:]ADJust:ALL</a> .....	160
<a href="#">[SENSe:]ADJust:FREQuency</a> .....	160
<a href="#">[SENSe:]ADJust:LEVel</a> .....	160

**[SENSe:]ADJust:ALL**

Initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Center frequency
- Reference level

**Example:**

ADJ:ALL

**Manual operation:**See "[Adjusting all Determinable Settings Automatically \(Auto All\)](#)" on page 54**[SENSe:]ADJust:FREQuency**

Sets the center frequency to the frequency with the highest signal level in the current frequency range.

**Example:**

ADJ:FREQ

**Manual operation:**See "[Adjusting the Center Frequency Automatically \(Auto Frequency\)](#)" on page 54**[SENSe:]ADJust:LEVel**

Initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. Thus, the settings of the RF attenuation and the reference level are optimized for the signal level. The FSW is not overloaded and the dynamic range is not limited by an S/N ratio that is too small.

**Example:**

ADJ:LEV



**Manual operation:** See "[Setting the Reference Level Automatically \(Auto Level\)](#)" on page 54

## 8.15 Using the status register

The status reporting system stores information about the current state of the FSW. This includes, for example, information about errors during operation or information about limit checks. The FSW stores this information in the status registers and in the error queue. You can query the status register and error queue via IEC bus.

The FSW-K40 features several status registers that are specific to phase noise measurements. Here is a description of those, including the corresponding remote commands.

- [Status registers for phase noise measurements](#)..... 161

### 8.15.1 Status registers for phase noise measurements

The figure below shows the status registers of the phase noise application.

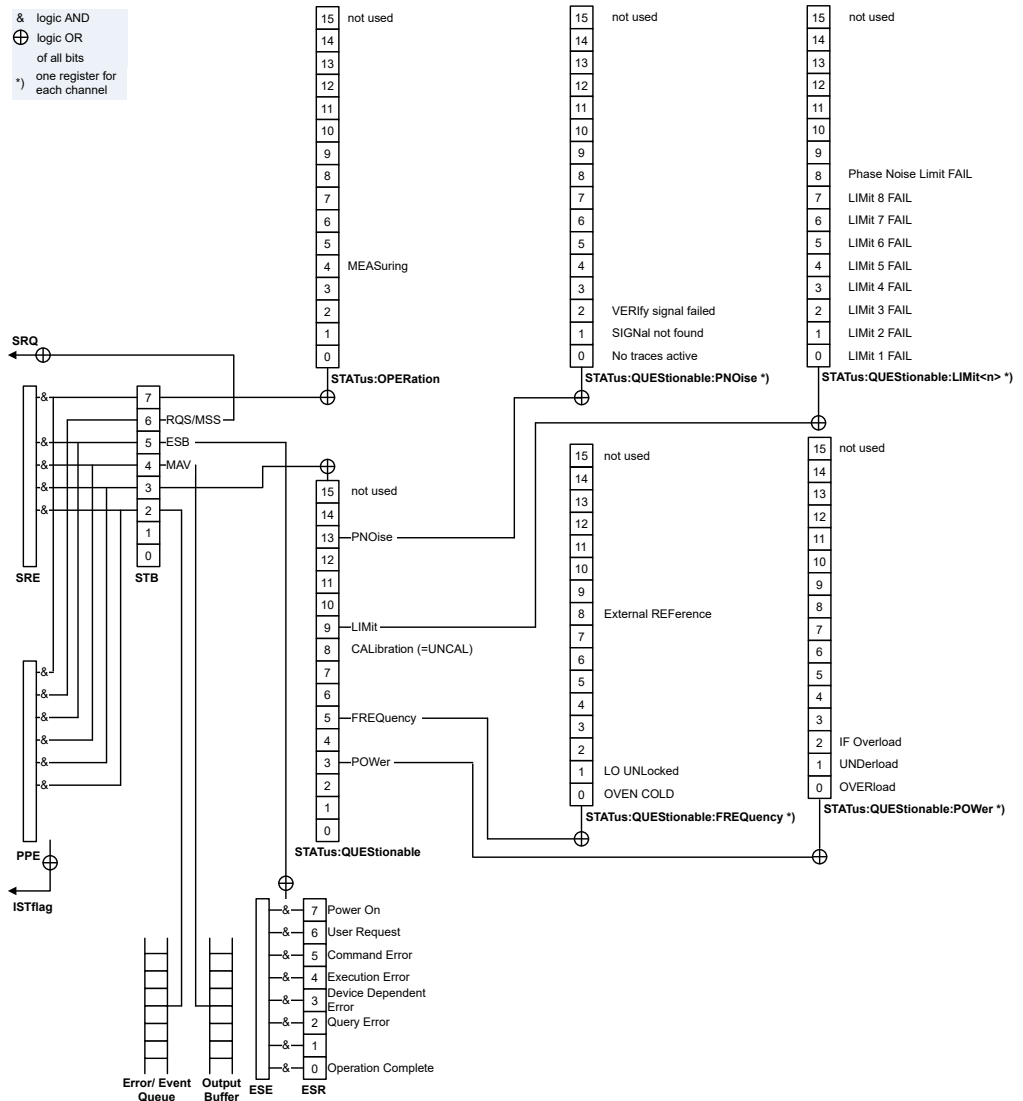


Figure 8-2: Status registers for phase noise measurements

The FSW structures the information hierarchically, with the Status Byte register (STB) and the Service Request Enable mask register (SRE) being on the highest level. The STB gets its information from the standard Event Status Register (ESR) and the Event Status Enable mask register (ESE). The STB and ESR are both defined by IEEE 488.2. In addition to the ESR, the STB also gets information from the STATUS:OPERation and STATUS:QUESTIONable registers. These are the link to the lower levels of the status register and are defined by SCPI. They contain information about the state of the instrument.

For a more comprehensive description of the status registers not mentioned here and status register functionality in general see the manual of the base unit.

- [STATus:QUEStionable register](#)..... 163
- [STATus:QUEStionable:POWer register](#)..... 163
- [STATus:QUEStionable:LIMit register](#)..... 164
- [STATus:QUEStionable:PNOise register](#)..... 164
- [Status register remote commands](#)..... 165

#### 8.15.1.1 STATus:QUEStionable register

The `STATus:QUEStionable` register contains information about indefinite states which may occur if the unit is operated without meeting the specifications.

Bit no	Meaning
0 to 2	Unavailable for phase noise measurements.
3	POWer This bit is set if a questionable power occurs.
5 to 7	Unavailable for phase noise measurements.
8	CALibration This bit is set if the FSW is not calibrated.
9	LIMit This bit is set if a limit line is violated.
10-12	Unavailable for phase noise measurements.
13	PNOise This bit is set if the phase noise measurement is questionable.
14	Unavailable for phase noise measurements.
15	This bit is always 0.

#### 8.15.1.2 STATus:QUEStionable:POWer register

The `STATus:QUEStionable:POWer` register contains information about possible overload situations that may occur during operation of the FSW.

Bit no	Meaning
0	OVERload This bit is set if an overload occurs at the RF input.
1	UNDerload This bit is set if an underload occurs at the RF input.
2	IF OVERload This bit is set if an overload occurs in the IF path.
3 to 14	Unavailable for phase noise measurements.
15	This bit is always 0.

### 8.15.1.3 STATUS:QUESTIONABLE:LIMIT register

The STATUS:QUESTIONABLE:LIMIT register contains information about limit lines and the results of a limit checks.

The number of LIMIT registers depends on the number of measurement windows available in any application.

Bit no	Meaning
0	LIMIT 1 FAIL This bit is set if limit line 1 is violated.
1	LIMIT 2 FAIL This bit is set if limit line 2 is violated.
2	LIMIT 3 FAIL This bit is set if limit line 3 is violated.
3	LIMIT 4 FAIL This bit is set if limit line 4 is violated.
4	LIMIT 5 FAIL This bit is set if limit line 5 is violated.
5	LIMIT 6 FAIL This bit is set if limit line 6 is violated.
6	LIMIT 7 FAIL This bit is set if limit line 7 is violated.
7	LIMIT 8 FAIL This bit is set if limit line 8 is violated.
8	Phase Noise LIMIT FAIL This bit is set if a limit of the phase noise limit line is violated.
9 to 14	Unavailable for phase noise measurements.
15	This bit is always 0.

### 8.15.1.4 STATUS:QUESTIONABLE:PNOISE register

The STATUS:QUESTIONABLE:PNOISE register contains information about the status of phase noise measurements.

Bit no	Meaning
0	No trace are active This bit is set if no trace is on.
1	SIGNAL not found This bit is set if no valid signal could be found.
2	VERIFY This bit is set if signal verification has failed.

Bit no	Meaning
3 to 14	Unavailable for phase noise measurements.
15	This bit is always 0.

### 8.15.1.5 Status register remote commands

STATus:OPERation[:EVENT]?.....	165
STATus:QUESTionable[:EVENT]?.....	165
STATus:QUESTionable:LIMit[:EVENT]?.....	165
STATus:QUESTionable:PNOise[:EVENT]?.....	165
STATus:QUESTionable:POWer[:EVENT]?.....	165
STATus:OPERation:CONDition?.....	166
STATus:QUESTionable:CONDition?.....	166
STATus:QUESTionable:LIMit:CONDition?.....	166
STATus:QUESTionable:PNOise:CONDition?.....	166
STATus:QUESTionable:POWer:CONDition?.....	166
STATus:OPERation:ENABLE.....	166
STATus:QUESTionable:ENABLE.....	166
STATus:QUESTionable:LIMit:ENABLE.....	166
STATus:QUESTionable:PNOise:ENABLE.....	166
STATus:QUESTionable:POWer:ENABLE.....	166
STATus:OPERation:NTRansition.....	166
STATus:QUESTionable:NTRansition.....	166
STATus:QUESTionable:LIMit:NTRansition.....	166
STATus:QUESTionable:PNOise:NTRansition.....	166
STATus:QUESTionable:POWer:NTRansition.....	166
STATus:OPERation:PTRansition.....	167
STATus:QUESTionable:PTRansition.....	167
STATus:QUESTionable:LIMit:PTRansition.....	167
STATus:QUESTionable:PNOise:PTRansition.....	167
STATus:QUESTionable:POWer:PTRansition.....	167

---

**STATus:OPERation[:EVENT]?**

**STATus:QUESTionable[:EVENT]?**

**STATus:QUESTionable:LIMit[:EVENT]? <ChannelName>**

**STATus:QUESTionable:PNOise[:EVENT]? <ChannelName>**

**STATus:QUESTionable:POWer[:EVENT]? <ChannelName>**

These commands read out the EVENT section of the status register.

The commands at the same time delete the contents of the EVENT section.

**Query parameters:**

<ChannelName> String containing the name of the channel.  
The parameter is optional. If you omit it, the command works for the currently active channel.

**Usage:** Query only

---

**STATus:OPERation:CONDition?**  
**STATus:QUESTionable:CONDition?**  
**STATus:QUESTionable:LIMit:CONDition?** <ChannelName>  
**STATus:QUESTionable:PNOise:CONDition?** <ChannelName>  
**STATus:QUESTionable:POWer:CONDition?** <ChannelName>

These commands read out the CONDition section of the status register.

The commands do not delete the contents of the EVENT section.

**Query parameters:**

<ChannelName> String containing the name of the channel.  
 The parameter is optional. If you omit it, the command works for the currently active channel.

**Usage:** Query only

---

**STATus:OPERation:ENABLE** <SumBit>,<ChannelName>  
**STATus:QUESTionable:ENABLE** <SumBit>,<ChannelName>  
**STATus:QUESTionable:LIMit:ENABLE** <SumBit>,<ChannelName>  
**STATus:QUESTionable:PNOise:ENABLE** <SumBit>,<ChannelName>  
**STATus:QUESTionable:POWer:ENABLE** <SumBit>,<ChannelName>

These commands control the ENABLE part of a register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

**Parameters:**

<SumBit> Range: 0 to 65535  
 <ChannelName> String containing the name of the channel.  
 The parameter is optional. If you omit it, the command works for the currently active channel.

---

**STATus:OPERation:NTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:NTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:LIMit:NTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:PNOise:NTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:POWer:NTRansition** <SumBit>,<ChannelName>

These commands control the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

**Parameters:**

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.  
The parameter is optional. If you omit it, the command works for the currently active channel.

---

**STATus:OPERation:PTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:PTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:LIMit:PTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:PNOise:PTRansition** <SumBit>,<ChannelName>  
**STATus:QUESTionable:POWer:PTRansition** <SumBit>,<ChannelName>

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

**Parameters:**

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.  
The parameter is optional. If you omit it, the command works for the currently active channel.

## 8.16 Remote control example scripts

This chapter contains a few remote control example scripts for particular phase noise measurement and configuration tasks.

The first chapter contains a short sequence of commands to perform a complete phase noise measurement. The subsequent chapters contain sequences of remote commands to perform special tasks for phase noise measurements like customizing the half decade configuration table.

All examples are based on a measurement range from 100 Hz to 1 MHz.

### 8.16.1 Performing a basic phase noise measurement

```
//Enter Phase Noise application
INST:SEL PNO
//Perform a preset of the channel
SYST:PRES:CHAN
//Customizing the screen layout.
//Add residual noise window:
LAY:ADD? '1',BEL,RNO
//Add spot noise window:
LAY:ADD? '2',RIGH,SNO
//Configure single sweep measurement.
INIT:CONT OFF
//Define the measurement range.
```

```

FREQ:STAR 100HZ
FREQ:STOP 1MHZ
//Select the sweep type.
SWE:MODE AVER
//Turn on frequency tracking.
FREQ:TRAC ON
//Turn on level tracking.
POW:TRAC ON
//Start the measurement with synchronization.
INIT;*WAI
//Set a marker on trace 1 and query its position.
CALC:MARK ON
CALC:MARK:X 1MHZ
CALC:MARK:Y?
//Query the residual noise results of trace 2 over the measurement range.
CALC:EVAL ON
//Residual FM:
FETC:PNO2:RFM?
//Residual PM:
FETC:PNO2:RPM?
//Residual RMS jitter:
FETC:PNO2:RMS?
//Freeze trace 1 and trace 2.
DISP:TRAC:MODE VIEW
DISP:TRAC2:MODE VIEW
//Activate trace 3 and trace 4.
DISP:TRAC3:MODE WRIT
DISP:TRAC4:MODE WRIT
//Activate linear trace smoothing for trace 4.
DISP:TRAC4:SMO ON
DISP:TRAC4:SMO:TYPE LIN
DISP:TRAC:SMO:APER 1
//Select IQ sweep mode.
SWE:MODE MAN
LIST:BWID:RES:TYPE IQFF
//Repeat the measurement.
INIT;*WAI

```

## 8.16.2 Configuring the measurement range

### Performing a customized IQ FFT measurement over the whole measurement range

```

//Define the measurement range.
FREQ:STAR 100HZ
FREQ:STOP 1MHZ
//Define the measurement settings for all half decades in the measurement range.
SWE:MODE MAN

```



```
//Measurement bandwidth (in per cent of the decade frequency):
LIST:BWID:RAT 20
//Averages:
LIST:SWE:COUN 20
//Mode:
LIST:BWID:RES:TYPE IQFF
//Window function:
LIST:IQW:TYPE GAUS
```

### Customizing a half decade configuration table

```
//Define the measurement range.
FREQ:STAR 100HZ
FREQ:STOP 1MHZ
//Define the contents of the table manually.
SWE:MODE MAN
//Customize the range from 100 Hz to 300 Hz.
//Measurement bandwidth:
LIST:RANG5:BWID 1HZ
//Sweep type:
LIST:RANG5:FILT:TYPE IQFF
//Window function:
LIST:RANG5:IQW:TYPE CHEB
//Averages:
LIST:RANG5:SWE:COUN 5
//Customize the range from 300 Hz to 1 kHz.
//Averages:
LIST:RANG6:SWE:COUN 5
```

## 8.16.3 Scaling the display

### Scaling the x-axis: displaying a half decade

```
//Select display of one half decade.
DISP:TRAC:X:SCOP HDEC
//Select the start frequency of the half decade.
DISP:TRAC:X:HDEC 1KHZ
//Display the full measurement range again.
DISP:TRAC:X:SCOP MRAN
```

### Scaling the x-axis: customizing the x-axis range

```
//Select manual x-axis scaling.
DISP:TRAC:X:SCOP MAN
//Define the start frequency of the display range.
DISP:TRAC:X:STAR 30KHZ
//Define the stop frequency of the display range.
DISP:TRAC:X:STOP 300KHZ
```

**Scaling the y-axis: scaling based on bottom value and range**

```
//Select manual y-axis scaling.
DISP:TRAC:Y:MAN BRAN
//Define the bottom value.
DISP:TRAC:Y:RLEV:LOW -160
//Define the range.
DISP:TRAC:Y 60
```

**Scaling the y-axis: scaling based on top value and range**

```
//Select manual y-axis scaling.
DISP:TRAC:Y:MAN TRAN
//Define the top value.
DISP:TRAC:Y:RLEV -100
//Define the range.
DISP:TRAC:Y 60
```

**Scaling the y-axis: scaling based on bottom and top value**

```
//Select manual y-axis scaling.
DISP:TRAC:Y:MAN TBOT
//Define the bottom value.
DISP:TRAC:Y:RLEV:LOW -160
//Define the top value.
DISP:TRAC:Y:RLEV -100
```

**8.16.4 Configuring numerical results****Defining a user range for residual noise results and query the results**

```
//Select the trace for integration.
CALC:EVAL:USER2:TRAC TRACE1
//Define the start and stop frequencies of the integration range.
CALC:EVAL:USER2:STAR 100KHZ
CALC:EVAL:USER2:STOP 1MHZ
//Query the results.
//Residual FM:
FETC:PNO:USER2:RFM?
//Residual PM:
FETC:PNO:USER2:RPM?
//Residual RMS jitter:
FETC:PNO:USER2:RMS?
```

**Working with spot noise results**

```
//Turn on spot noise markers on every decade edge.
CALC:SNO:DEC ON
//Turn on spot noise markers at two additional offset frequencies.
CALC:SNO1:STAT ON
```

```

CALC:SNO1:X 50KHZ
CALC:SNO2:STAT ON
CALC:SNO2:X 500KHZ
//Read out spot noise marker results.
//Read out the decade edges:
CALC:SNO:DEC:X?
//Read out the marker positions on the decade edges:
CALC:SNO:DEC:Y?
//Read out customized spot noise marker results:
//At 50 kHz:
CALC:SNO1:Y?
//At 500 kHz:
CALC:SNO2:Y?

```

### 8.16.5 Using limit lines

#### Programming a phase noise limit line with three segments

```

//Define the level of the DUT's noise floor.
CALC:PNL:NOIS -134
//Select the number of line segments.
CALC:PNL:TYPE FC3
//Define the characteristics of the line segments.
CALC:PNL:FC1 300KHZ
CALC:PNL:SLOP1 10
CALC:PNL:FC2 30KHZ
CALC:PNL:SLOP2 20
CALC:PNL:FC3 3KHZ
CALC:PNL:SLOP3 30
//Assign the limit line to trace 1 and 2.
CALC:PNL:TRAC 1,2
//Query limit check results.
CALC:PNL:FAIL?

```

#### Programming a standard limit line

```

//Select or create the limit line by name.
CALC:LIM:NAME 'Phase Noise'
//Comment on the limit line.
CALC:LIM:COMM 'Limit line to test phase noise measurement'
//Define the horizontal data points of the limit line.
CALC:LIM:CONT 100HZ,1kHZ
//Define the vertical data points of an (upper) limit line.
//The unit is fix for phase noise measurements.
CALC:LIM:UPP -160,-170
//Shift the limit line 5 dBc/Hz down.
CALC:LIM:UPP:SHIF -5
//Turn the limit line on.
CALC:LIM:UPP:STAT ON

```

```
//Select the trace to check.  
CALC:LIM:TRAC 3  
//Turn on the limit check.  
CALC:LIM:STAT ON  
//Query the limit check results.  
CALC:LIM:FAIL?
```

## 8.16.6 Using markers

### Using spot noise markers

See ["Working with spot noise results"](#) on page 170.

### Using normal and delta markers

```
//Activate and position a normal marker (marker 1).  
CALC:MARK ON  
CALC:MARK:X 1MHZ  
//Position marker 1 on trace 2.  
CALC:MARK:TRAC 2  
//Query the position of marker 1.  
CALC:MARK:Y?  
//Activate and position a delta marker (delta marker 1).  
CALC:DELT ON  
CALC:DELT:X -900KHZ  
//Position the delta marker on trace 2.  
CALC:DELT:TRAC 2  
//Query the position of the delta marker.  
CALC:DELT:Y?  
//Turning all markers off  
CALC:MARK:AOFF  
CALC:DELT:AOFF
```

## List of Commands (Phase Noise)

[SENSe:]ADJust:ALL.....	160
[SENSe:]ADJust:FREQuency.....	160
[SENSe:]ADJust:LEVel.....	160
[SENSe:]FREQuency:CENTer.....	101
[SENSe:]FREQuency:STARt.....	109
[SENSe:]FREQuency:STOP.....	110
[SENSe:]FREQuency:TRACk.....	104
[SENSe:]FREQuency:VERify:TOLerance:ABSolute.....	104
[SENSe:]FREQuency:VERify:TOLerance[:RELative].....	105
[SENSe:]FREQuency:VERify[:STATe].....	105
[SENSe:]IQ:DECimation.....	105
[SENSe:]IQ:DPLL.....	106
[SENSe:]IQ:ONLine.....	106
[SENSe:]IQ:TBW.....	106
[SENSe:]LIST:BWIDth[:RESolution]:RATio.....	109
[SENSe:]LIST:BWIDth[:RESolution]:TYPE.....	110
[SENSe:]LIST:RANGe<range>:BWIDth[:RESolution].....	110
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	111
[SENSe:]LIST:RANGe<range>:IQWindow:TYPE.....	111
[SENSe:]LIST:RANGe<range>:SWEep:COUNT.....	112
[SENSe:]LIST:SWEep:COUNT.....	112
[SENSe:]LIST:SWEep:COUNT:MULTIplier.....	112
[SENSe:]LIST:SWEep:COUNT:MULTIplier:STATe.....	112
[SENSe:]POWer:RLEVel.....	101
[SENSe:]POWer:RLEVel:VERify:TOLerance.....	107
[SENSe:]POWer:RLEVel:VERify[:STATe].....	107
[SENSe:]POWer:TRACk.....	107
[SENSe:]REJect:AM.....	107
[SENSe:]SPURs:SUPPress.....	136
[SENSe:]SPURs:THReshold.....	137
[SENSe:]SWEep:COUNT.....	113
[SENSe:]SWEep:FHDecade.....	92
[SENSe:]SWEep:FORWard.....	113
[SENSe:]SWEep:MODE.....	113
[SENSe:]SWEep:SVFailed.....	107
ABORT.....	89
CALCulate:PNLimit:FC1 <Frequency>.....	115
CALCulate:PNLimit:FC2 <Frequency>.....	115
CALCulate:PNLimit:FC3 <Frequency>.....	115
CALCulate:PNLimit:FC4 <Frequency>.....	115
CALCulate<n>:DELTaMarker<m>:AOFF.....	154
CALCulate<n>:DELTaMarker<m>:MREFerence.....	154
CALCulate<n>:DELTaMarker<m>:TRACe.....	155
CALCulate<n>:DELTaMarker<m>:X.....	156
CALCulate<n>:DELTaMarker<m>:Y.....	156
CALCulate<n>:DELTaMarker<m>[:STATe].....	155
CALCulate<n>:EVALuation:STARt.....	139

CALCulate<n>:EVALuation:STOP.....	139
CALCulate<n>:EVALuation:USER<range>:START.....	140
CALCulate<n>:EVALuation:USER<range>:STOP.....	140
CALCulate<n>:EVALuation:USER<range>:TRACe.....	141
CALCulate<n>:EVALuation[:STATe].....	139
CALCulate<n>:LIMit<li>:ACTive?.....	117
CALCulate<n>:LIMit<li>:CLEar[:IMMediate].....	118
CALCulate<n>:LIMit<li>:COMMeNt.....	122
CALCulate<n>:LIMit<li>:CONTRol:SHIFt.....	122
CALCulate<n>:LIMit<li>:CONTRol[:DATA].....	122
CALCulate<n>:LIMit<li>:COpy.....	118
CALCulate<n>:LIMit<li>:DELeTe.....	118
CALCulate<n>:LIMit<li>:FAIL?.....	119
CALCulate<n>:LIMit<li>:LOWer:MODE.....	123
CALCulate<n>:LIMit<li>:LOWer:SHIFt.....	124
CALCulate<n>:LIMit<li>:LOWer:STATe.....	119
CALCulate<n>:LIMit<li>:LOWer[:DATA].....	123
CALCulate<n>:LIMit<li>:NAME.....	119
CALCulate<n>:LIMit<li>:STATe.....	120
CALCulate<n>:LIMit<li>:TRACe<t>.....	120
CALCulate<n>:LIMit<li>:TRACe<t>:CHECK.....	121
CALCulate<n>:LIMit<li>:UPPer:MODE.....	124
CALCulate<n>:LIMit<li>:UPPer:SHIFt.....	125
CALCulate<n>:LIMit<li>:UPPer:STATe.....	121
CALCulate<n>:LIMit<li>:UPPer[:DATA].....	124
CALCulate<n>:MARKer<m>:AOFF.....	152
CALCulate<n>:MARKer<m>:FUNCTion:ZOOM.....	158
CALCulate<n>:MARKer<m>:TRACe.....	153
CALCulate<n>:MARKer<m>:X.....	153
CALCulate<n>:MARKer<m>:Y.....	154
CALCulate<n>:MARKer<m>[:STATe].....	152
CALCulate<n>:MATH<t>:STATe.....	126
CALCulate<n>:MATH<t>[:EXPRession][:DEFine].....	126
CALCulate<n>:PNLimit:COpy<k>.....	114
CALCulate<n>:PNLimit:FAIL?.....	116
CALCulate<n>:PNLimit:FC<1 to 5>.....	115
CALCulate<n>:PNLimit:NOISe.....	115
CALCulate<n>:PNLimit:SLOPe<segment>.....	117
CALCulate<n>:PNLimit:TRACe.....	115
CALCulate<n>:PNLimit:TYPE.....	116
CALCulate<n>:SNOise<m>:AOFF.....	144
CALCulate<n>:SNOise<m>:DECades:X.....	145
CALCulate<n>:SNOise<m>:DECades:Y.....	145
CALCulate<n>:SNOise<m>:DECades[:STATe].....	144
CALCulate<n>:SNOise<m>:X.....	146
CALCulate<n>:SNOise<m>:Y.....	146
CALCulate<n>:SNOise<m>[:STATe].....	145
CONFigure:REFMeas.....	90
DISPlay:FORMat.....	94
DISPlay[:WINDow<n>]:MINFO[:STATe].....	157

DISPlay[:WINDow<n>]:MTABLE.....	157
DISPlay[:WINDow<n>]:SIZE.....	94
DISPlay[:WINDow<n>]:TRACe<t>:LABel:TEXT.....	138
DISPlay[:WINDow<n>]:TRACe<t>:LABel[:STATe].....	137
DISPlay[:WINDow<n>]:TRACe<t>:SElect.....	147
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:TYPE.....	128
DISPlay[:WINDow<n>]:TRACe<t>:SPURs:SUPPRes.....	128
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:HDECade.....	129
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:SCOPE.....	130
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:START.....	130
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:STOP.....	131
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe].....	131
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO.....	132
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MANual.....	132
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	133
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:LOWer.....	133
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	133
DISPlay[:WINDow<n>]:ZOOM[:STATe].....	158
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE.....	127
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture.....	127
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing[:STATe].....	128
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe].....	129
FETCh:PNOise<t>:IPN?.....	141
FETCh:PNOise<t>:MEASured:FREQuency?.....	148
FETCh:PNOise<t>:MEASured:LEVel?.....	148
FETCh:PNOise<t>:RFM?.....	141
FETCh:PNOise<t>:RMS?.....	142
FETCh:PNOise<t>:RPM?.....	142
FETCh:PNOise<t>:SPURs:DISCrete?.....	148
FETCh:PNOise<t>:SPURs:RANDom?.....	148
FETCh:PNOise<t>:SPURs?.....	147
FETCh:PNOise<t>:SWEep:AVG?.....	149
FETCh:PNOise<t>:SWEep:FDRift?.....	149
FETCh:PNOise<t>:SWEep:LDRift?.....	150
FETCh:PNOise<t>:SWEep:MDRift?.....	150
FETCh:PNOise<t>:SWEep:SRATe?.....	151
FETCh:PNOise<t>:SWEep:START?.....	151
FETCh:PNOise<t>:SWEep:STOP?.....	151
FETCh:PNOise<t>:USER<range>:IPN?.....	142
FETCh:PNOise<t>:USER<range>:RFM?.....	143
FETCh:PNOise<t>:USER<range>:RMS?.....	143
FETCh:PNOise<t>:USER<range>:RPM?.....	143
FORMat:DEXPort:DSEParator.....	134
FORMat:DEXPort:HEADer.....	134
FORMat:DEXPort:TRACes.....	134
FORMat:DEXPort:XDIStrib.....	135
FORMat:DIMPort:TRACes.....	135
INITiate:SEQuencer:ABORt.....	91
INITiate:SEQuencer:IMMEdiate.....	92
INITiate:SEQuencer:MODE.....	92

INITiate<n>:CONMeas.....	90
INITiate<n>:CONTinuous.....	91
INITiate<n>[:IMMediate].....	91
INPut:ATTenuation.....	102
INPut:ATTenuation:AUTO.....	102
INPut:CONNector.....	159
INPut:COUPling.....	159
INPut:DPATH.....	159
INPut:EGain[:STATe].....	102
INPut:FILTer:YIG[:STATe].....	159
INPut:GAIN:STATe.....	103
INPut:GAIN[:VALue].....	103
INSTRument:CREate:DUPLicate.....	85
INSTRument:CREate:REPLace.....	86
INSTRument:CREate[:NEW].....	85
INSTRument:DELeTe.....	86
INSTRument:LIST?.....	86
INSTRument:REName.....	88
INSTRument[:SELeCt].....	88
LAYout:ADD[:WINDow]?.....	95
LAYout:CATalog[:WINDow]?.....	96
LAYout:IDENtify[:WINDow]?.....	96
LAYout:MOVE[:WINDow].....	97
LAYout:REMOve[:WINDow].....	97
LAYout:REPLace[:WINDow].....	97
LAYout:SPLitter.....	98
LAYout:WINDow<n>:ADD?.....	99
LAYout:WINDow<n>:IDENtify?.....	100
LAYout:WINDow<n>:REMOve.....	100
LAYout:WINDow<n>:REPLace.....	100
MMEMory:LOAD<n>:TRACe.....	136
MMEMory:STORe<n>:TRACe.....	136
STATus:OPERation:CONDition?.....	166
STATus:OPERation:ENABle.....	166
STATus:OPERation:NTRansition.....	166
STATus:OPERation:PTRansition.....	167
STATus:OPERation[:EVENT]?.....	165
STATus:QUEStionable:CONDition?.....	166
STATus:QUEStionable:ENABle.....	166
STATus:QUEStionable:LIMit:CONDition?.....	166
STATus:QUEStionable:LIMit:ENABle.....	166
STATus:QUEStionable:LIMit:NTRansition.....	166
STATus:QUEStionable:LIMit:PTRansition.....	167
STATus:QUEStionable:LIMit[:EVENT]?.....	165
STATus:QUEStionable:NTRansition.....	166
STATus:QUEStionable:PNOise:CONDition?.....	166
STATus:QUEStionable:PNOise:ENABle.....	166
STATus:QUEStionable:PNOise:NTRansition.....	166
STATus:QUEStionable:PNOise:PTRansition.....	167
STATus:QUEStionable:PNOise[:EVENT]?.....	165



STATus:QUESTionable:POWer:CONDition?.....	166
STATus:QUESTionable:POWer:ENABle.....	166
STATus:QUESTionable:POWer:NTRansition.....	166
STATus:QUESTionable:POWer:PTRansition.....	167
STATus:QUESTionable:POWer[:EVENT]?.....	165
STATus:QUESTionable:PTRansition.....	167
STATus:QUESTionable[:EVENT]?.....	165
SYSTem:PRESet:CHANnel[:EXEC].....	89
SYSTem:SEQuencer.....	93
TRACe<n>:COPY.....	137
TRACe<n>[:DATA].....	137

# Index

## A

Abort measurement (remote control) .....	89
Aborting	
Sweep .....	50, 51
Application cards .....	9
Application notes .....	9
Attenuation	
Mechanical .....	41
Mechanical (remote control) .....	101
Auto all .....	54
Auto frequency .....	54
Auto level	
Reference level .....	54
Softkey .....	54
Automatic	
Frequency detection (remote control) .....	160
Level detection (remote control) .....	160
Parameter detection (remote control) .....	160
Automatic scaling .....	57
Automatic scaling (remote control) .....	125
Average count .....	51
Averaging .....	48, 49
Averaging (remote control) .....	108

## B

Brochures .....	9
-----------------	---

## C

Center frequency	
Automatic configuration .....	54
Channel	
Creating (remote) .....	86
Deleting (remote) .....	86
Duplicating (remote) .....	85
Querying (remote) .....	86
Renaming (remote) .....	88
Replacing (remote) .....	86
Closing	
Channels (remote) .....	86
Windows (remote) .....	100
Continue single sweep	
Softkey .....	51
Continuous sweep	
Softkey .....	50
Conventions	
SCPI commands .....	80
Copy trace (remote control) .....	125
Copying	
Channel (remote) .....	85
Traces .....	59
Coupling .....	42, 52
Coupling (remote control) .....	101

## D

Data format	
Remote .....	134
Data sheets .....	9
Decimal separator	
Trace export .....	61

Delta markers .....	75
Defining .....	75
Delta markers (remote control) .....	152
Direct path	
Input configuration .....	52
Duplicating	
Channel (remote) .....	85

## E

Evaluation methods	
Remote .....	95
Exporting	
Measurement settings .....	60
Traces .....	59, 61

## F

FFT window .....	49
FFT window (remote control) .....	108
Filters	
YIG (remote) .....	159
Format	
Data (remote) .....	134
Frequency	
Nominal .....	41
Nominal (remote control) .....	101
Frequency tolerance .....	43
Frequency tolerance (remote control) .....	104
Frequency tracking .....	44
Frequency tracking (remote control) .....	104
Frequency verification .....	43
Frequency verification (remote control) .....	104

## G

Getting started .....	8
Group delay	
Smoothing .....	58

## H

Half decades configuration table .....	49
Hardware settings	
Displayed .....	14

## I

Initiate measurement (remote control) .....	89
Installation .....	11
Instrument security procedures .....	9

## J

Jitter (remote control) .....	138
-------------------------------	-----

## K

Keys	
RUN CONT .....	50
RUN SINGLE .....	51

**L**

Level	
nominal	41
Nominal (remote control)	101
Level tolerance	44
Level tolerance (remote control)	104
Level tracking	45
Level tracking (remote control)	104
Level verification	44
Level verification (remote control)	104
Limit lines	
Noise floor (remote control)	114
Phase noise (remote control)	114
Standard (remote control)	117
Limit lines (remote control)	114
LO feedthrough	52

**M**

Marker to Trace	75
Marker zoom (remote control)	158
Markers	37
Assigned trace	75
Deactivating	76
Delta markers	75
Table	76
Type	75
Markers (remote control)	154
Maximizing	
Windows (remote)	94
Measurement range	47
Measurement range (remote control)	108
Measurement time	49
Mechanical attenuation	41
Mechanical attenuation (remote control)	101
Multiple	
Measurement channels	11

**N**

Nominal frequency	41
Nominal frequency (remote control)	101
Nominal level	41
Nominal level (remote control)	101

**O**

Offset frequency	
Start	47
Start (remote control)	108
Stop	47
Stop (remote control)	108
Options	
Preamplifier	42
Overview	
Configuration	38

**P**

Preamplifier	
Setting	42
Softkey	42
Presetting	
Channels	40

**Q**

Quick Config	
Traces	59

**R**

Range Start/Stop	47
Range Start/Stop (remote control)	108
RBW	48, 49
RBW (remote control)	108
Reference level	
Auto level	54
Reference marker	75
Release notes	9
Remote commands	
Basics on syntax	80
Boolean values	84
Capitalization	81
Character data	84
Data blocks	84
Numeric values	83
Optional keywords	82
Parameters	82
Strings	84
Suffixes	81
Residual FM (remote control)	138
Residual noise	
Integration range	64
Integration Range	65
Integration Range (remote control)	138
Residual noise (remote control)	138
Residual PM (remote control)	138
Resolution bandwidth	48, 49
Resolution bandwidth (remote control)	108
Restoring	
Channel settings	40
Results	
Data format (remote)	134
Exporting	60
RUN CONT	
Key	50
RUN SINGLE	
Key	51

**S**

Safety instructions	9
Scaling	
X-axis	56
X-axis (remote control)	125
Y-axis	56
Y-axis (remote control)	125
Scope	
X-axis	56
X-axis (remote control)	125
Security procedures	9
Sequencer	11
Activating (remote)	92
Remote	91
Sequences	
Aborting (remote)	91
Mode (remote)	92
Service manual	8
Single sweep	
Softkey	51

Smoothing	
Traces	28
Traces (group delay)	58
Smoothing type (remote control)	125
Softkeys	
Auto All	54
Auto Freq	54
Auto Level	54
Continue Single Sweep	51
Continuous Sweep	50
Marker to Trace	75
Norm/Delta	75
Preamp	42
Single Sweep	51
Sweep Count	51
Trace Config	62
Specifications	9
Spot noise	
10_x Hz	65
10_x Hz (remote control)	138
user defined	66
user defined (remote control)	138
Spur removal	58
Spur removal (remote control)	125
Spur threshold	58
Spur threshold (remote control)	125
Stop On Verify Failed	44
Suffixes	
Common	80
Remote commands	81
Sweep	
Aborting	50, 51
Sweep Count	51
Sweep count (remote control)	89
Sweep direction	47
Sweep direction (remote control)	108
Sweep mode	49
Sweep mode (remote control)	108
Sweep type	48
Sweep type (remote control)	108
<b>T</b>	
Tolerance	
frequency	43
frequency (remote control)	104
level	44
level (remote control)	104
Trace configuration (remote control)	125
Trace copy (remote control)	125
Trace export (remote control)	125
Trace labels	63
Trace math	
Functions	63
Settings	62
Trace math (remote control)	125
Trace offset	57
Trace offset (remote control)	125
Trace smoothing	28
Trace smoothing (remote control)	125
Traces	
Configuration (Softkey)	62
Copying	59
Copying (remote control)	137
Export format	61
Exporting	59, 60, 61
Mode	58
Mode (remote)	127
Settings, predefined	59
Tracking	
frequency	44
frequency (remote control)	104
level	45
level (remote control)	104
<b>V</b>	
Verify frequency	43
Verify frequency (remote control)	104
Verify level	44
Verify level (remote control)	104
Videos	9
<b>W</b>	
White papers	9
Window function	49
Window function (remote control)	108
Window title bar information	15
Windows	
Adding (remote)	95
Closing (remote)	100
Layout (remote)	98
Maximizing (remote)	94
Querying (remote)	96
Replacing (remote)	97
Splitting (remote)	94
Types (remote)	95
<b>X</b>	
X-axis	
Half decade	56
Half decade (remote control)	125
scope	56
scope (remote control)	125
Start	56
Start (remote control)	125
Stop	56
Stop (remote control)	125
<b>Y</b>	
Y-axis	
Scaling	56
Scaling (remote control)	125
Scaling automatic (remote control)	125
Y-axis scaling	
Automatic	57
YIG-preselector	
Activating/Deactivating	53
Activating/Deactivating (remote)	159