

R&S® SMW200A

Vector Signal Generator

User Manual



1175663202
Version 37

ROHDE & SCHWARZ
Make ideas real



This document describes the R&S®SMW200A, stock no. 1412.0000.02 and its options:

- R&S®SMW-B9/-B10
- R&S®SMW-B13/-B13T/-B13XT
- R&S®SMW-B20/-B22
- R&S®SMW-B81/-B82/-B83/-B84
- R&S®SMW-B90/-B93
- R&S®SMW-B1003/-B1006/-B1007/-B1012/-B1020/-B1031/-B1040/-B1044/-B1056/-B1067
R&S®SMW-B1040N/-B1044N/-B1056N/-B1067N
R&S®SMW-B1044O/-B1056O/-B1067O
- R&S®SMW-B2003/-B2006/-B2007/-B2012/-B2020/-B2031/-B2044
R&S®SMW-B2044N
R&S®SMW-B2044O
- R&S®SMW-B103/-B106/-B107/-B112/-B120/-B131/-B140/-B144
R&S®SMW-B140N/-B144N
R&S®SMW-B203/-B206/-B207/-B212/-B220
- R&S®SMW-B709/-B710/-B711
R&S®SMW-B719/-B720/-B721
- R&S®SMW-K16/-K17/-K18/-K19
- R&S®SMW-K22/-K23/-K24
- R&S®SMW-K61/-K62
- R&S®SMW-K75/-K76
- R&S®SMW-K200
- R&S®SMW-K511/-K512/-K515/-K522/-K525/-K527
- R&S®SMW-K556
- R&S®SMW-K703/-K704/-K720/-K739
- R&S®SMW-K810/-K811
- R&S®SMW-K980

This manual describes firmware version FW 5.30.047.xx and later of the R&S®SMW200A.

© 2023 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks are the properties of their respective owners.

1175.6632.02 | Version 37 | R&S®SMW200A

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g., R&S®SMW200A is indicated as R&S SMW. Linux® is abbreviated as Linux.

Contents

1	Safety and regulatory information.....	19
1.1	Safety instructions.....	19
1.2	Labels on R&S SMW.....	22
1.3	Warning messages in the documentation.....	22
1.4	Where to find key documents on Rohde & Schwarz.....	22
1.5	Korea certification class B.....	23
2	Welcome to the R&S SMW.....	24
2.1	Key features.....	24
2.2	What's new.....	24
2.3	Documentation overview.....	25
2.3.1	Getting started manual.....	25
2.3.2	User manuals and help.....	25
2.3.3	Tutorials.....	26
2.3.4	Service manual.....	26
2.3.5	Instrument security procedures.....	26
2.3.6	Printed safety instructions.....	26
2.3.7	Data sheets and brochures.....	26
2.3.8	Release notes and open source acknowledgment (OSA).....	26
2.3.9	Application notes, application cards, white papers, etc.....	27
2.3.10	Videos.....	27
2.4	Scope and content.....	27
3	Getting started.....	29
3.1	Preparing for use.....	29
3.1.1	Lifting and carrying.....	29
3.1.2	Unpacking and checking.....	29
3.1.3	Choosing the operating site.....	29
3.1.4	Setting up the R&S SMW.....	30
3.1.5	Considerations for test setup.....	32
3.1.6	Connecting to power.....	33
3.1.7	Connecting to LAN.....	33
3.1.8	Connecting USB devices.....	34

3.1.9	Connecting to RF coaxial connectors.....	35
3.1.10	Connecting to RF A/RF B.....	36
3.1.11	Connecting to LO In/Out.....	37
3.1.12	Connecting to REF IN/REF OUT.....	37
3.1.13	Connecting to HS DIG I/Q.....	37
3.1.14	Switching on or off.....	38
3.2	Instrument tour.....	40
3.2.1	Front panel tour.....	40
3.2.2	Rear panel tour.....	47
3.3	Trying out the instrument.....	54
3.3.1	Generating an unmodulated carrier.....	55
3.3.2	Generating a digitally modulated signal.....	57
3.3.3	Triggering the instrument externally.....	59
3.3.4	Working with marker signals.....	65
3.3.5	Routing a baseband signal to the outputs.....	66
3.3.6	Verifying the generated signal.....	71
3.3.7	Saving and recalling settings.....	73
3.3.8	Generating an EUTRA/LTE signal.....	75
3.3.9	Enabling MIMO configuration.....	78
3.4	System overview.....	83
3.4.1	Brief introduction to the instrument's concept.....	83
3.4.2	Applications examples of the R&S SMW.....	88
3.5	Instrument control.....	91
3.5.1	Possible ways to operate the instrument.....	92
3.5.2	Means of manual interaction.....	92
3.5.3	Understanding the display information.....	93
3.5.4	Accessing the functionality.....	99
3.5.5	Entering data.....	100
3.5.6	Getting information and help.....	102
3.5.7	Remote control.....	107
3.5.8	Remote operation over VNC.....	107
4	Signal routing and system configuration.....	108
4.1	How the system configuration function supports you in your task.....	108

4.1.1	Finding out the system configuration for a current test case.....	108
4.1.2	From a test scenario to the required system configuration.....	110
4.2	Possible ways to configure the signal flow.....	112
4.2.1	Using the signal routing settings and the block diagram.....	113
4.2.2	Using the system configuration capabilities.....	113
4.3	Overview of the input and output signals and interfaces.....	116
4.3.1	Physical location of the input and output interfaces.....	116
4.3.2	Overview of the baseband signal sources.....	118
4.3.3	Overview of the baseband and RF output signals.....	120
4.3.4	Supported digital interfaces depending on the system configuration.....	121
4.3.5	Important signal parameters and interface's characteristics.....	121
4.4	System configuration settings.....	126
4.4.1	Fading and baseband configuration settings.....	127
4.4.2	I/Q stream mapper settings.....	135
4.4.3	External RF and I/Q settings.....	137
4.4.4	Overview.....	155
4.5	Signal routing settings.....	157
4.6	Digital baseband input settings.....	161
4.6.1	Baseband input settings in the standard baseband generator.....	162
4.6.2	Baseband input settings in the wideband baseband generator.....	169
4.7	I/Q digital output settings.....	175
4.7.1	General settings.....	178
4.7.2	Channels settings.....	181
4.7.3	Signal output settings.....	183
4.8	I/Q analog output settings.....	186
4.8.1	General analog I/Q output settings.....	189
4.9	How to connect external instruments and configure the signal flow.....	193
4.9.1	Finding out the suitable configuration for your test situation.....	194
4.9.2	How to find out where the input/output interface is located.....	194
4.9.3	How to define the MIMO scenario.....	195
4.9.4	How to route the I/Q streams to the output interfaces.....	198
4.9.5	How to cable the instruments in MIMO test setups.....	199
4.9.6	How to connect and configure external instruments.....	200

4.9.7	How to connect to HS DIG I/Q interfaces.....	209
4.9.8	How to generate a 2x8 MIMO signal for BS tests.....	214
4.9.9	How to generate a 8x8 MIMO signal with two R&S SMW.....	215
4.9.10	How to connect an R&S®CMW500 for fading applications.....	220
4.9.11	How to apply an external digital baseband signal.....	221
4.9.12	How to connect an R&S EX-IQ-BOX.....	224
5	Configuring the internal baseband source.....	226
5.1	Overview of the signal generation modes.....	226
5.2	Standard or wideband baseband generator.....	227
5.3	Accessing the functions in the baseband domain.....	229
5.4	Generating signals according to digital standards.....	230
5.5	Common functions and settings in the baseband domain.....	234
5.5.1	Basics on signals, modulation formats and filters.....	234
5.5.2	Common settings.....	261
5.5.3	Triggering with a common signal.....	271
5.5.4	Time-based triggering.....	273
5.6	Generating custom digital modulated signals.....	276
5.6.1	Required options.....	277
5.6.2	About the custom digital modulation.....	277
5.6.3	Custom digital modulation settings.....	277
5.6.4	How to create data and control lists.....	300
5.6.5	References.....	304
5.7	Using the arbitrary waveform generator (ARB).....	315
5.7.1	Required options.....	315
5.7.2	About ARB.....	316
5.7.3	ARB settings.....	320
5.7.4	Playing waveform files.....	331
5.7.5	Tags for waveforms, data and control lists.....	347
5.8	Generating notched signals.....	364
5.8.1	Required options.....	365
5.8.2	About the notch filters.....	365
5.8.3	Notch filter settings.....	366
5.8.4	AWGN test signal.....	369

5.9 Reducing the crest factor.....	371
5.10 Generating multi-segment waveform files.....	371
5.10.1 Required options.....	371
5.10.2 About the multi-segment waveforms.....	372
5.10.3 Multi-segment settings.....	377
5.10.4 How to create and work with multi-segment waveform files.....	393
5.10.5 Reference to triggering of multi-segment waveforms.....	398
5.11 Generating multi-carrier signals.....	401
5.11.1 Required options.....	402
5.11.2 About the multi-carrier waveforms.....	402
5.11.3 Multi-carrier settings.....	404
5.11.4 How to use the multi-carrier function.....	416
5.12 Generating multi-carrier continuous wave signal.....	418
5.12.1 Required options.....	419
5.12.2 About the MCCW.....	419
5.12.3 MCCW settings.....	419
5.12.4 How to use the multi-carrier continuous wave function.....	426
5.12.5 References.....	427
5.13 Generating a linear slope ramp waveform.....	428
5.14 Shifting and boosting the baseband signal.....	428
5.14.1 About baseband offsets.....	428
5.14.2 Baseband offsets settings.....	431
5.14.3 How to improve signal characteristics by shifting the baseband signal.....	433
6 Simulating fading, adding noise and predistortions, and impairing the signal.....	435
6.1 Simulating fading.....	435
6.2 Adding noise to the signal.....	435
6.2.1 Required options.....	435
6.2.2 About the AWGN generator.....	436
6.2.3 AWGN block.....	442
6.2.4 AWGN settings.....	442
6.2.5 How to configure the noise generator for receiver tests.....	451
6.3 Generating impulsive and phase noise.....	453

6.3.1	Required options.....	453
6.3.2	About the impulsive noise.....	453
6.3.3	About the phase noise.....	454
6.3.4	Impulsive noise settings.....	455
6.3.5	Phase noise settings.....	458
6.4	Impairing the signal.....	460
6.4.1	Required options.....	460
6.4.2	About the linear I/Q impairments.....	460
6.4.3	Analog and digital impairments settings.....	463
6.4.4	How to optimize the carrier leakage and sidebands suppression.....	467
6.5	Frequency response correction.....	468
6.6	Applying digital predistortion.....	468
7	Applying I/Q vector modulation.....	469
7.1	Required options.....	469
7.2	About the I/Q modulator.....	469
7.3	I/Q modulator settings.....	470
7.4	Optimizing I/Q modulation performance.....	476
8	Configuring the RF signal.....	479
8.1	Required options.....	480
8.2	How to access the RF settings.....	480
8.3	How to activate RF signal output.....	482
8.4	How to set the frequency and level.....	483
8.4.1	References.....	484
8.5	RF frequency settings.....	485
8.6	RF level settings.....	489
8.7	RF phase settings.....	494
8.8	Reference oscillator.....	495
8.8.1	Required options.....	495
8.8.2	Reference frequency settings.....	496
8.8.3	Reference output settings.....	499
8.8.4	Adjustment settings.....	500
8.8.5	Using the reference frequency for instruments synchronization.....	501
8.9	Local oscillator coupling.....	504

8.9.1	Required options.....	505
8.9.2	Phase coherence.....	506
8.9.3	LO coupling settings.....	507
8.9.4	How to configure cascaded instruments.....	509
8.10	Varying the RF signal in list or sweep mode.....	513
8.10.1	Signal generation and triggering in the sweep and list modes.....	515
8.10.2	About sweep mode.....	523
8.10.3	About list mode.....	526
8.10.4	Significant parameters and functions.....	528
8.10.5	Sweep mode settings.....	530
8.10.6	List mode settings.....	540
8.10.7	List editor.....	547
8.10.8	How to generate a signal in list or sweep mode.....	550
8.11	Analog modulations.....	552
8.11.1	Required options.....	554
8.11.2	Modulation signals.....	554
8.11.3	Activating analog modulations.....	562
8.11.4	Modulation settings.....	563
8.11.5	How to generate a modulated signal.....	584
8.12	Improving level performance.....	585
8.12.1	Attenuator.....	586
8.12.2	ALC - automatic level control.....	589
8.12.3	User correction.....	593
8.12.4	Using power sensors.....	605
8.12.5	To calibrate the power level with an R&S NRP power sensor.....	623
9	Monitoring signal characteristics.....	627
9.1	Displaying baseband signal characteristics in real-time.....	627
9.1.1	Required options.....	627
9.1.2	About the graphical signal display.....	627
9.1.3	Graphics configuration settings.....	635
9.1.4	Graphical signal display settings.....	638
9.1.5	How to verify the generated signal with the graphics display.....	641
9.2	Querying information on the baseband power levels.....	651

9.2.1	Required options.....	651
9.2.2	About leveling.....	651
9.2.3	Baseband powers settings.....	657
9.2.4	How to query information on the baseband power levels.....	660
10	Multi-instrument setups.....	669
10.1	Synchronizing instruments.....	669
10.2	Generating phase-coherent signals.....	669
10.3	Generating time-aligned baseband signals.....	670
10.3.1	Connecting multiple instruments in primary-secondary instrument mode.....	670
10.3.2	Triggering several instruments with a common trigger signal.....	678
10.4	Generating phase-coherent synchronous and aligned signals.....	679
10.4.1	Required options.....	680
10.4.2	RF ports alignment configuration and settings.....	680
10.5	Control and operation of external instruments.....	696
10.5.1	Prerequisites for control of external instruments from the R&S SMW.....	696
10.5.2	Test setups.....	696
10.5.3	Control of connected R&S SGT.....	697
10.5.4	Control of connected R&S SZU.....	697
10.5.5	Further information.....	697
11	File and data management.....	699
11.1	About the file system.....	699
11.2	Restoring the (default) instrument configuration.....	702
11.2.1	Preset, set to default and factory preset settings.....	704
11.2.2	How to identify parameters which are not in a preset state.....	705
11.2.3	How to recall user settings automatically after preset.....	706
11.2.4	Reference.....	706
11.3	Protecting data.....	708
11.4	Saving and recalling instrument settings.....	709
11.4.1	Save/recall settings.....	710
11.4.2	How to save and recall instrument settings.....	713
11.4.3	How to recall the settings of a firmware option.....	714
11.5	Accessing files with user data.....	715
11.5.1	File select settings.....	715

11.5.2	How to create and access data and control lists.....	718
11.6	Exporting and importing remote command lists.....	719
11.7	Loading, importing and exporting lists.....	719
11.8	Using the file manager.....	720
11.8.1	File manager settings.....	721
11.8.2	Map network share settings.....	722
11.8.3	How to display all saved files.....	724
11.8.4	How to map a network folder.....	724
11.9	How to transfer files from and to the instrument.....	726
11.9.1	Removing file system protection.....	727
11.9.2	Accessing the file system of the R&S SMW over FTP.....	728
11.9.3	Accessing the R&S SMW file system using SMB (Samba).....	729
11.9.4	Using a USB storage device for file transfer.....	731
11.9.5	Using a file server for test files exchange.....	731
11.10	Creating screenshots of current settings.....	732
11.10.1	Hardcopy settings.....	732
11.10.2	How to save a hardcopy of the display.....	736
12	General instrument functions.....	739
12.1	Customizing the user interface.....	739
12.1.1	Display and keyboard settings.....	740
12.1.2	Appearance settings.....	741
12.1.3	Display update settings.....	742
12.1.4	Defining the RF signal state on power on.....	742
12.1.5	How to set the initial instrument settings.....	743
12.2	Configuring local and global connectors.....	745
12.2.1	Required options.....	745
12.2.2	About local and global connectors.....	745
12.2.3	Trigger marker clock settings.....	751
12.2.4	RF connectors settings.....	754
12.2.5	Global connectors settings.....	755
12.2.6	Local connectors settings.....	760
12.2.7	Routing signals to local/global connectors.....	763
12.3	Checking parameters and dependencies.....	764

12.4	Organizing frequently used settings as favorites.....	765
12.4.1	User menu settings.....	767
12.4.2	How to use the user menu for fast adjustments.....	768
12.4.3	Define user key actions settings.....	770
12.4.4	How to assign actions to the [USER] key.....	771
12.5	Managing licenses and license keys.....	773
12.5.1	Manage license keys settings.....	775
12.5.2	Using the license server.....	782
12.5.3	How to occupy or extend a license.....	792
12.5.4	How to move a portable license.....	794
12.6	Managing extensions.....	796
12.6.1	Manage extension settings.....	796
12.6.2	How to install or deinstall an extension.....	796
12.7	Using the security settings.....	797
12.7.1	Protection level settings.....	798
12.7.2	Setting security parameters.....	799
12.7.3	Configuring LAN services.....	804
12.7.4	Password management.....	808
12.7.5	How to prevent unauthorized access.....	810
12.8	Undoing or restoring actions.....	813
12.9	Shutting down and rebooting the instrument.....	815
12.10	Reference.....	815
13	Network operation and remote control.....	819
13.1	Overview of remote access modes.....	820
13.2	Remote control interfaces and protocols.....	821
13.2.1	LAN interface.....	822
13.2.2	USB interface.....	824
13.2.3	GPIB interface (IEC/IEEE bus interface).....	825
13.2.4	LXI browser interface.....	826
13.3	Remote control programs and libraries.....	826
13.4	Status reporting system.....	829
13.4.1	Hierarchy of the status registers.....	829
13.4.2	Structure of a SCPI status register.....	831

13.4.3	Status byte (STB) and service request enable register (SRE).....	833
13.4.4	Event status register (ESR) and event status enable register (ESE).....	834
13.4.5	Questionable status register (STATus:QUEStionable).....	835
13.4.6	Operation status register (STATus:OPERation).....	835
13.4.7	Application of the status reporting system.....	836
13.4.8	Reset values of the status reporting system.....	837
13.5	Remote access settings.....	838
13.5.1	Network settings.....	840
13.5.2	VISA resource strings.....	843
13.5.3	GPIB address settings.....	845
13.5.4	RS232 settings.....	846
13.5.5	Instrument emulations settings.....	847
13.5.6	Remote connections settings.....	848
13.5.7	HUMS settings.....	850
13.5.8	HUMS enhanced settings.....	851
13.5.9	QR code.....	860
13.6	LXI settings.....	861
13.6.1	LXI status settings.....	861
13.6.2	LXI browser settings.....	862
13.7	To configure the instrument for remote access.....	869
13.7.1	To find the VISA resource string.....	869
13.7.2	To configure the acces over LAN.....	870
13.7.3	To configure the access over GPIB.....	874
13.8	To establish a remote control session over LAN.....	874
13.8.1	To establish the connection with the LXI web browser.....	875
13.8.2	To establish the connection using VXI-11 protocol.....	876
13.8.3	To establish the connection using socket communication.....	882
13.9	To establish a remote control session over GPIB.....	883
13.10	To establish a remote control session over USB.....	884
13.11	To trace messages with the LXI web browser interface.....	884
13.12	To return to manual operation.....	886
13.13	To automate tasks with remote command scripts.....	886
13.13.1	Show SCPI command.....	889

13.13.2	Displaying an SCPI list.....	889
13.13.3	SCPI recording export settings.....	890
13.13.4	How to record / create SCPI lists.....	891
13.13.5	How to convert and save SCPI lists.....	895
13.13.6	How to find out the SCPI commands for GUI functions.....	895
13.14	To operate the instrument using VNC.....	898
13.14.1	How to enable the VNC service.....	898
13.14.2	How to set up remote operation from a desktop system.....	899
13.14.3	How to set up remote operation from a smart device.....	901
13.15	References.....	904
13.15.1	LXI functionality.....	904
13.15.2	Code generator templates.....	905
13.15.3	Remote control states.....	907
14	Remote control commands.....	908
14.1	Conventions used in SCPI command descriptions.....	908
14.2	Backward compatibility with other Rohde & Schwarz signal generators.....	909
14.3	SCPI command aliases for advanced mode with multiple entities.....	909
14.4	Programming examples.....	911
14.5	Common commands.....	912
14.6	Preset commands.....	916
14.7	MMEMory subsystem.....	918
14.7.1	File naming conventions.....	919
14.7.2	Accessing files in the default or in a specified directory.....	919
14.7.3	Programming examples.....	921
14.7.4	Remote control commands.....	923
14.8	CALibration subsystem.....	931
14.9	CLOCK subsystem.....	936
14.10	DIAGnostic subsystem.....	937
14.11	HUMS remote control commands.....	940
14.12	DISPlay subsystem.....	947
14.13	FORMat subsystem.....	951
14.14	HCOPY subsystem.....	953
14.14.1	Hard copy settings.....	954

14.14.2	Automatic naming.....	955
14.15	KBOard subsystem.....	958
14.16	OUTPut subsystem.....	958
14.17	SENSe, READ, INITiate and SLISt subsystems.....	962
14.18	SCONfiguration subsystem.....	977
14.18.1	Multi-instrument configuration commands.....	987
14.18.2	Baseband and fading configuration commands.....	988
14.18.3	I/Q stream mapper commands.....	993
14.18.4	External RF and I/Q instruments commands.....	995
14.18.5	RF ports alignment commands.....	1009
14.19	SOURce subsystem.....	1018
14.19.1	Connector settings.....	1019
14.19.2	SOURce:BBIN subsystem.....	1028
14.19.3	Analog modulation subsystems.....	1039
14.19.4	SOURce:BB subsystem.....	1059
14.19.5	SOURce:CORRection subsystem.....	1195
14.19.6	SOURce:FREQuency subsystem.....	1205
14.19.7	SOURce:FREQuency:CONVerter subsystem.....	1215
14.19.8	SOURce:INPut subsystem.....	1217
14.19.9	SOURce:IQ subsystem.....	1218
14.19.10	SOURce:IQ:OUTPut subsystem.....	1220
14.19.11	SOURce:LFOutput subsystem.....	1235
14.19.12	SOURce:LIST subsystem.....	1248
14.19.13	SOURce:NOISe subsystem.....	1262
14.19.14	SOURce:OCCupy subsystem.....	1268
14.19.15	SOURce:PGEN subsystem.....	1270
14.19.16	SOURce:PHASe subsystem.....	1271
14.19.17	SOURce:POWer subsystem.....	1272
14.19.18	SOURce:ROSCillator subsystem.....	1288
14.19.19	RF ports alignment.....	1293
14.19.20	SOURce:SWEep subsystem.....	1295
14.20	SYSTem subsystem.....	1307
14.21	STATus subsystem.....	1338

14.22	TEST subsystem.....	1342
14.23	TRIGger subsystem.....	1349
14.24	UNIT subsystem.....	1352
15	Troubleshooting and notifications.....	1354
15.1	Notifications.....	1354
15.1.1	Volatile notifications.....	1354
15.1.2	Permanent notifications.....	1355
15.2	SCPI notifications.....	1355
15.3	Device-specific notifications.....	1355
15.4	Querying notifications.....	1357
15.5	Resolving network connection failures.....	1359
15.6	Resolving errors during internal adjustments.....	1360
15.7	Measuring USB cable quality.....	1361
15.8	Requesting instrument configuration and specifications.....	1361
15.8.1	Hardware configuration settings.....	1361
15.8.2	Versions/options settings.....	1363
15.8.3	How to query instrument configuration.....	1365
15.8.4	How to request the data sheet.....	1366
15.9	Collecting information for technical support.....	1366
15.10	Contacting customer support.....	1368
16	Transporting.....	1369
17	Maintenance, storage and disposal.....	1370
17.1	Cleaning.....	1370
17.2	Storage.....	1370
17.3	Performing maintenance tasks.....	1370
17.3.1	Date and time.....	1371
17.3.2	Check front panel.....	1373
17.3.3	Check display screen.....	1378
17.3.4	Internal adjustments.....	1379
17.3.5	Selftest.....	1384
17.3.6	FPGA/uC update settings.....	1388
17.3.7	Exchanging the RF adapter port.....	1389

17.4 Disposal.....	1389
Annex.....	1391
A RF hardware versions.....	1391
A.1 RF assemblies and options.....	1391
A.2 Affected parameters and settings.....	1392
B Concepts and basic terminology.....	1393
C Elements and controls of the graphical user interface.....	1396
C.1 Elements in the status bar.....	1396
C.2 Elements in the block diagram.....	1398
C.3 Elements in the task bar.....	1400
C.4 Status information displayed in the info line.....	1402
C.5 Elements displayed for interactions.....	1403
C.6 Naming conventions in the user interface.....	1411
C.7 Unit shortcuts.....	1413
D Reference information for remote control.....	1416
D.1 Telnet program examples.....	1416
D.2 Hardware interfaces.....	1421
D.2.1 GPIB-Bus interface.....	1421
E Extensions for user files.....	1423
F Available tutorial files.....	1426
Glossary: Terms and abbreviations.....	1427
Glossary: Publications and references.....	1434
List of commands and waveform tags.....	1436
Index.....	1462

1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following chapters.

Intended use

The product generates radio frequency (RF) signals for the development, production and verification of electronic components, modules or devices. The product is intended for industrial use, for example for production and conformance testing, maintenance and engineering laboratories.

Use the product only for its designated purpose. Any other use is considered improper use. Observe the operating conditions and performance limits stated in the data sheet.

Target audience

This document targets at all users, including technicians, operators, administrators and maintenance personnel. The required skills and experience of the users depend on the test setup and application of the product.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 19. The same information is provided in many languages as printed "Safety Instructions". The printed "Safety Instructions" are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the data sheet, manuals and the printed "Safety Instructions". If you are unsure about the appropriate use, contact Rohde & Schwarz customer service.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the data sheet. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer service at <https://www.rohde-schwarz.com/support>.

Lifting and carrying the product

The product is heavy. Do not move or carry the product by yourself. A single person can only carry a maximum of 18 kg safely depending on age, gender and physical condition. Look up the maximum weight in the data sheet. Use the product handles to move or carry the product. Do not lift by the accessories mounted on the product. Accessories are not designed to carry the weight of the product.

To move the product safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing. If Rohde & Schwarz provides accessories designed for your product, e.g. a carrying bag, you can use the product outdoors.

Unless otherwise specified, you can operate the product up to an altitude of 2000 m above sea level. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the data sheet.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting to power

The product is an overvoltage category II product. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such

as electric shock, fire, personal injury or even death. Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Take the following measures for your safety:






- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product warn against potential hazards.


	Potential hazard Read the product documentation to avoid personal injury or product damage.
	Heavy product Be careful when lifting, moving or carrying the product. Carrying the product requires a sufficient number of persons or transport equipment.
	Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.
	Hot surface Do not touch. Risk of skin burns. Risk of fire.
	Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.

1.2 Labels on R&S SMW

Labels on the casing inform about:

- Personal safety, see ["Connecting to power"](#) on page 20.
- Product and environment safety, see [Table 1-1](#).
- Identification of the product, see the serial number on the [rear panel](#).

Table 1-1: Labels regarding R&S SMW and environment safety

	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its service life. For more information, see Chapter 17.4, "Disposal" , on page 1389.
---	--

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.5 Korea certification class B



이 기기는 가정용(B급) 전자파 적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

2 Welcome to the R&S SMW

The is a new high-performance signal generator developed to meet demanding customer requirements. Offering excellent signal characteristics, wide signal bandwidth and straightforward and intuitive operation, the signal generator makes signal generation fast and easy.

2.1 Key features

Outstanding key features of the R&S SMW are:

- Frequency range from 100 kHz to 67 GHz
- Optional second RF path with variable frequency range
- Up to 2 GHz I/Q modulation bandwidth (in RF) with internal baseband
- Wideband baseband and vector signal generator in one box
- Support of all important digital standards such as LTE incl. eMTC/NB-IoT, 5G NR, WLAN IEEE 802.11a/b/g/n/j/p/ac/ax/be, GNSS, 3GPP FDD/HSPA/HSPA+
- Generating signals for radar module and receiver tests
- Versatile configuration: from single-path vector signal generator to multichannel MIMO receiver tester
- Optional integrated fading simulator with up to 200 MHz bandwidth
- Ideal for MIMO, MSR, 5G NR or LTE-Advanced applications thanks to up to eight signal sources and up to 64 fading channels
- Implementation of all key MIMO fading scenarios such as 2x2, 3x3, 4x4, 8x4, 4x8, and 2x4x4 using a single instrument
- Internal digital adding of baseband signals, with frequency and level offset
- Excellent signal quality for high accuracy in spectral and modulation measurements
- Intuitive operation via touchscreen with block diagram as key element
- Graphical signal monitoring at practically every point in the signal flow
- SCPI macro recorder and code generator for generating executable remote control code from manual operating steps (for MATLAB®, CVI, etc.)

For more information, see data sheet.

2.2 What's new

This manual describes firmware version FW 5.30.047.xx and later of the R&S®SMW200A.

Compared to the previous version, it provides the new features listed below:

- Time-based triggering, see "[Time Based Trigger](#)" on page 264 and [Chapter 5.5.4, "Time-based triggering](#)", on page 273.
- Customized digital I/Q input via QSFP+ interface (R&S SMW-K556), see "[Required Options](#)" on page 161 and "[Sample Rate](#)" on page 173.
- Test function to check the display screen added, see [Chapter 17.3.3, "Check display screen](#)", on page 1378.
- Glossary for publications and references added.

2.3 Documentation overview

This section provides an overview of the R&S SMW user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/smw200a

2.3.1 Getting started manual

Introduces the R&S SMW and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

2.3.2 User manuals and help

Separate manuals for the base unit and the software options are provided for download:

- Base unit manual
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Software option manual
Contains the description of the specific functions of an option. Basic information on operating the R&S SMW is not included.

The contents of the user manuals are available as help in the R&S SMW. The help offers quick, context-sensitive access to the complete information for the base unit and the software options.

All user manuals are also available for download or for immediate display on the Internet.

2.3.3 Tutorials

The R&S SMW provides interactive examples and demonstrations on operating the instrument in form of tutorials. A set of tutorials is available directly on the instrument.

2.3.4 Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

2.3.5 Instrument security procedures

Deals with security issues when working with the R&S SMW in secure areas. It is available for download on the internet.

2.3.6 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

2.3.7 Data sheets and brochures

The data sheet contains the technical specifications of the R&S SMW. It also lists the options and their order numbers and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/smw200a

2.3.8 Release notes and open source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The software makes use of several valuable open source software packages. An open-source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/smw200a

2.3.9 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/smw200a and www.rohde-schwarz.com/manual/smw200a

2.3.10 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>



On the menu bar, search for your product to find related videos.



Figure 2-1: Product search on YouTube

2.4 Scope and content

This description assumes an R&S SMW equipped with all available options. Depending on your model and the installed options, some of the functions cannot be available on your instrument.

Settings and descriptions related to the wideband baseband generator

This description assumes a fully equipped **Standard baseband** R&S SMW, so that we can explain all instrument concepts and show the possible configuration and settings. If a particular function requires a special option, this option is stated in the list of the required options. If your instrument is equipped with **Wideband baseband** generator, some sections of this description are not relevant.

The values ranges in the remote control commands correspond to a **Standard baseband** instrument.

Settings and descriptions related to RF hardware versions

To improve the signal performance of the R&S SMW, several hardware components in the RF domain have been replaced. New option numbers denote the hardware modifications.

Accordingly, the description in the user manual has been extended. It applies to all new options, as for example R&S SMW-B1006, but also comprises the former ones.

Differences to instruments with the former RF hardware are referred to as *earlier RF hardware versions*.

See [Appendix: RF Hardware Versions](#), on page 1391.

3 Getting started

3.1 Preparing for use

Here, you can find basic information about setting up the product for the first time.

3.1.1 Lifting and carrying

Use the handles at the side, for lifting and carrying the R&S SMW, see "[Lifting and carrying the product](#)" on page 20. Use the handles at the front, for mounting the R&S SMW in a rack.

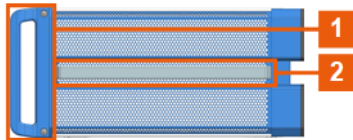


Figure 3-1: Instrument side view with front handles (1) and side handles (2)

3.1.2 Unpacking and checking

1. Unpack the R&S SMW carefully.
2. Retain the original packing material. Use it to protect the control elements and connectors when transporting or shipping the R&S SMW later.
See also [Chapter 16, "Transporting"](#), on page 1369.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the data sheet.

For safety information, see "[Choosing the operating site](#)" on page 20.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the data sheet.

- Class B equipment is suitable for use in:
 - Residential environments
 - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting up the R&S SMW

See also:

- ["Setting up the product"](#) on page 20
- ["Intended use"](#) on page 19

3.1.4.1 Placing the R&S SMW on a bench top

To place the product on a bench top


1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the data sheet.
2. **CAUTION!** Foldable feet can collapse. For safety information, see ["Setting up the product"](#) on page 20.

Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.

3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack.

Stack as follows:

- If the products have foldable feet, fold them in completely.
- It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
- Do not exceed the permissible total load placed on the product at the bottom of the stack:
 - 50 kg when stacking products of identical dimensions (left figure).
 - 25 kg when stacking smaller products on top (middle figure).

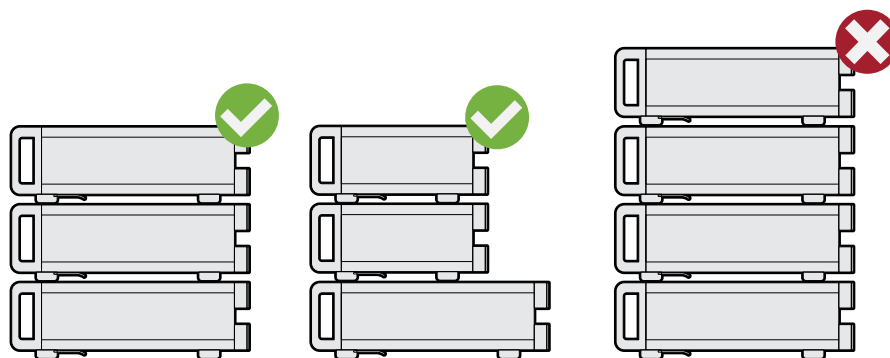

Left = Stacked correctly, same dimensions
 Middle = Stacked correctly, different dimensions
 Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
- Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the R&S SMW in a rack

To prepare the rack

1. Observe the requirements and instructions in "[Setting up the product](#)" on page 20.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.
Design and implement an efficient ventilation concept for the rack.

To mount the R&S SMW in a rack

1. Use an adapter kit that fits the dimensions of the R&S SMW to prepare the instrument for rack mounting.
 - a) Order the rack adapter kit designed for the R&S SMW. For the order number, see the data sheet.
 - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. **WARNING!** The R&S SMW is heavy. Lift the R&S SMW with a lifting equipment, see "[Lifting and carrying the product](#)" on page 20.
Lift the R&S SMW to shelf height.
3. Grab the handles at the front.
4. Push the R&S SMW onto the shelf until the rack brackets fit closely to the rack.

5. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the R&S SMW in the rack.

To unmount the R&S SMW from a rack

1. Loosen the screws at the rack brackets.
2. **WARNING!** The R&S SMW is heavy. Lift the R&S SMW with a lifting equipment, see ["Lifting and carrying the product"](#) on page 20.
Bring the lifting equipment to shelf height.
3. Remove the R&S SMW from the rack.
4. If placing the R&S SMW on a bench top again, unmount the adapter kit from the R&S SMW. Follow the instructions provided with the adapter kit.

3.1.5 Considerations for test setup

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, especially for the following connector types:
 - BNC
Double-shielded BNC cables.
How to: ["To connect to pluggable connectors"](#) on page 36
 - SMA
Double-shielded SMA cables.
How to: ["To connect to screwable connectors"](#) on page 35
 - USB
Double-shielded USB cables.
How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 34.
 - LAN
At least CAT6 STP cables.
How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 33
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.
- Use cables of the same type and equal length for connection to the I/Q and I/Q Bar interfaces of the instrument.
How to: See ["To connect instruments to the I/Q analog interface"](#) on page 201.
- Use the cable R&S SMU-Z6 for connection to the DIG I/Q interfaces of the instrument. The cable is available under order number 1415.0201.02.
How to: ["To connect instruments to the I/Q digital interface"](#) on page 203.
- Use the cable R&S DIGIQ-HS for connection to the HS DIG I/Q interfaces of the instrument. The cable is available under order number 3641.2948.03.
How to: [Chapter 3.1.13, "Connecting to HS DIG I/Q"](#), on page 37

Signal input and output levels

Information on signal levels is provided in the data sheet. Keep the signal levels within the specified ranges to avoid damage to the R&S SMW and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

3.1.6 Connecting to power

For safety information, see ["Connecting to power"](#) on page 20.

1. Plug the AC power cable into the AC power connector on the rear panel. Only use the AC power cable delivered with the R&S SMW.
2. Plug the AC power cable into a power outlet with ground contact.

The required ratings are listed next to the AC power connector and in the data sheet.

3.1.7 Connecting to LAN

Network environment

Before connecting the product to a local area network (LAN), consider the following:


- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect to LAN

- Connect the LAN socket on the rear panel via an RJ-45 cable to the LAN.

Using DHCP (dynamic host configuration protocol), the R&S SMW assigns the IP address automatically.

If connected to the LAN, the R&S SMW displays the IP address and the hostname at the left bottom of the block diagram.

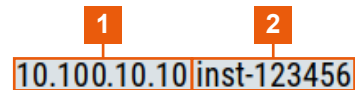

10.100.10.10 inst-123456

1 = IP address

2 = Hostname

If disconnected from the LAN, the R&S SMW displays the IP address 0.0.0.0.

See also [Chapter 13.7, "To configure the instrument for remote access"](#), on page 869.

3.1.8 Connecting USB devices

You can connect or disconnect all USB devices from the R&S SMW during operation.

To connect USB storage devices

USB storage devices, such as memory sticks, allow data transfer from or to the R&S SMW. You can also use them for firmware updates.

- Connect the USB storage device to any of the USB connectors.

To connect USB devices with external power supply

1. **NOTICE!** Connected devices with external power supply can feed back current into the 5 V power supply of the USB interface and thus damage the R&S SMW.
Ensure that there is no connection between the positive pole of the power supply and the +5 V power pin of the USB interface (VBUS).
2. Connect the USB storage device to any of the USB connectors on the front panel or rear panel.

To connect a keyboard

- Connect the keyboard to any of the USB connectors on the front panel or rear panel.

When connected, the R&S SMW detects the keyboard automatically. A detected keyboard has the default layout English – US.

To connect a mouse

- Connect the mouse to any of the USB connectors.

When connected, the R&S SMW detects the mouse automatically.

To connect power sensors

Connect power sensors of the R&S NRP families to any of the USB connectors on the front panel or rear panel.

See [Chapter 8.12.4, "Using power sensors"](#), on page 605.

3.1.9 Connecting to RF coaxial connectors

Here, you find information on how to prepare and to connect to RF coaxial connectors of the R&S SMW. Use these RF connectors, for example, for output of the RF signal or for input of an external reference signal.

To prepare for connecting

1. **NOTICE!** Damaged or not clean connections can lead to RF insertion loss and mismatch, and even premature wear of the connectors.
Before connecting to the port, inspect the RF connector visually. Check that it is clean, undamaged and mechanically compatible.
2. **NOTICE!** DC voltage at the RF connector can damage the instrument. Never apply DC voltage to the RF input connectors.
Make sure that the values are within the DC limits given in the data sheet.
3. If your test setup has a DC component at the RF input, insert a DC blocker.
4. Use a high-quality RF cable that matches the RF connector type.
See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 32.
5. You can connect to two kinds of connectors:
 - ["To connect to screwable connectors"](#) on page 35
 - ["To connect to pluggable connectors"](#) on page 36

To connect to screwable connectors

The R&S SMW provides screwable RF connectors as in [Table 3-1](#).

- **NOTICE!** Excessive tightening can damage the connectors.

To connect the cable with the connector, proceed as follows:

- a) Carefully align the connector of the cable and the connector along a common axis.
- b) Mate the connectors along the common axis until the male pin of the inner connector engages with the female socket of the outer connector.
- c) Turn the nut of the outer connector until the connectors are firmly coupled.

- d) Using a calibrated torque wrench torque the nut to the limit as in the table below. Hold the opposite connector part stationary with a spanner.

Table 3-1: Connector name, type, size, torque limit and nut opening

Connector		Torque limit		Nut opening	
Type	Name	lb-Inch	Nm	Inch	mm
N	RF A/RF B ^{*)}	13.3	1.5	3/4	20
SMA	LO IN LO OUT REF IN 1 GHz REF OUT 1 GHz	5	0.56	5/16	8
2.92 mm	RF A/RF B ^{*)}	8	0.9	5/16	8
1.85 mm	RF A/RF B ^{*)}	8	0.9	5/16	8

^{*)} maximum frequency f_{\max} depends on the connector type: $f_{\max}(\text{N}) \leq 7 \text{ GHz}$,
 $f_{\max}(2.92 \text{ mm}) \leq 40 \text{ GHz}$, $f_{\max}(1.85 \text{ mm}) \leq 67 \text{ GHz}$

To connect to pluggable connectors

The R&S SMW provides pluggable Bayonet Neill-Concelman (BNC) connectors.

- To connect the RF cable with the BNC connector, proceed as follows:
 - a) Carefully align the connector of the cable and the BNC connector along a common axis.
 - b) Mate the connectors along the common axis until the male pin of the connector of the cable engages with the female socket of the BNC connector.

For information on how to handle and maintain the RF port, to minimize measurement deviations and ensure its longevity, see the application note [1MA99](#).

If you want to mount test port adapters to your RF connector, see the application note [1MA100](#).

3.1.10 Connecting to RF A/RF B

To connect to "RF A/RF B"

1. Before connecting to the "RF A/RF B" connector on the front panel, proceed as follows:
 - a) Prepare the "RF A/RF B" connector. See ["To prepare for connecting"](#) on page 35.
 - b) If activated, deactivate the RF output. In the block diagram, select the block "RF" > "RF Level" > "RF On > Off".

If equipped with an option for rear panel connectors, prepare the "RF A/RF B" connector on the rear panel.

2. Connect to the "RF A/RF B" connector. See ["To connect to screwable connectors"](#) on page 35.

To prevent RF output switch-off

- **NOTICE!** If you set a too high output level without a load connected to the instrument, the reverse power can exceed a limit forcing the R&S SMW to switch off the RF output.

Connect a load with sufficient return loss as given in the data sheet.

3.1.11 Connecting to LO In/Out

1. Before connecting, prepare the "LO In/Out" connectors on the rear panel. See ["To prepare for connecting"](#) on page 35.
2. Connect to the "LO In/Out" connectors. See ["To connect to screwable connectors"](#) on page 35.

See also [Chapter 8.9, "Local oscillator coupling"](#), on page 504.

3.1.12 Connecting to REF IN/REF OUT


To connect to "REF IN"/"REF OUT"

For connection, the R&S SMW provides BNC connectors (reference signal frequency $f_{\text{ref}} < 1 \text{ GHz}$) or SMA connectors ($f_{\text{ref}} = 1 \text{ GHz}$).

1. Before connecting, prepare the REF IN/REF OUT connectors on the rear panel. See ["To prepare for connecting"](#) on page 35.
2. Connect to the "REF IN"/"REF OUT" connectors:
 - $f_{\text{ref}} < 1 \text{ GHz}$: ["To connect to pluggable connectors"](#) on page 36
 - $f_{\text{ref}} = 1 \text{ GHz}$: ["To connect to screwable connectors"](#) on page 35

3.1.13 Connecting to HS DIG I/Q

The HS DIG I/Q connector comprises a QSFP+ (Quad Small Form-factor Pluggable) socket that has two components: a QSFP+ cage and a QSFP+ connector. The QSFP+ cable is equipped with the QSFP+ plug.

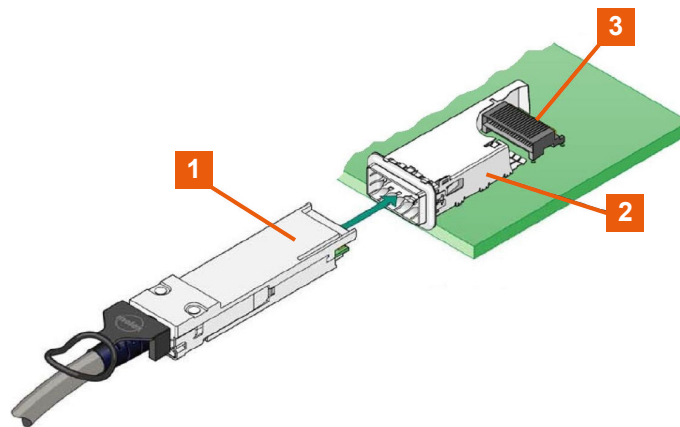

- 1 = QSFP+ plug
 2 = QSFP+ cage
 3 = QSFP+ connector

To connect to HS DIG I/Q interface

1. For connection, use the QSFP+ cable R&S DIGIQ-HS.
 See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 32.
2. Hold the QSFP+ plug of the cable by its panes.
3. Turn the QSFP+ cable, so that the release tab shows upwards.
4. Insert and push the QSFP+ plug into the QSFP+ cage.

To disconnect from HS DIG I/Q interface

1. **NOTICE!** If you pull the cable, you can damage the cable and the HS DIG I/Q connector.
 Pull the release tab.
2. Pull the QSFP+ plug out of the QSFP+ cage.

See also:

- [Chapter 4.6, "Digital baseband input settings"](#), on page 161.
- [Chapter 4.7, "I/Q digital output settings"](#), on page 175.
- [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135.

3.1.14 Switching on or off

The following table provides an overview of power states, LEDs and positions of the power switch.

Table 3-2: Overview of power states

State	LED	Position of power switch
Off	● gray	[0]
Standby	● yellow	[I]
Ready	● green	[I]

To switch on the R&S SMW

The R&S SMW is off but connected to power. See [Chapter 3.1.6, "Connecting to power"](#), on page 33.

1. Set the switch on the power supply to position [I] on the rear panel.
The LED of the [On/Standby] key on the front panel is yellow.
2. Wait until the oven-controlled oscillator (OCXO) warms up. For the warm-up time, see the data sheet.
3. Press the [On/Standby] key on the front panel.
The LED changes to green. The R&S SMW boots.

After booting, the R&S SMW starts up displaying the block diagram on the screen on the front panel.

To check start-up functions

When starting for the first time, the R&S SMW starts with the default settings. When restarting, the R&S SMW recalls the instrument configuration before shut-down.

See [Chapter 11.4, "Saving and recalling instrument settings"](#), on page 709.

When switched on, the R&S SMW automatically monitors main functions. You can query erroneous functions. In addition to automatic monitoring, you can perform maintenance tasks. See the following:

- [Chapter 15.4, "Querying notifications"](#), on page 1357
- [Chapter 17.3, "Performing maintenance tasks"](#), on page 1370

To shut down the product

The product is in the ready state.

- Press the [On/Standby] key.
The operating system shuts down. The LED changes to yellow.

In the standby state, the power switch circuits and the OCXO are active. To deactivate them, disconnect the instrument from the power supply.

To disconnect from power

The R&S SMW is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

Set the toggle switch on the power supply to position [0].

The LED of the [On/Standby] key is switched off.

2. Disconnect the R&S SMW from the power source.

3.2 Instrument tour

This chapter explains the control elements and the connectors of the R&S SMW. The views of the front panel and the rear panel help you to get familiar with the instrument and to perform first steps. For specifications of the interfaces, see the data sheet.

The meanings of the labels on the R&S SMW are described in [Chapter 1.2, "Labels on R&S SMW"](#), on page 22.

3.2.1 Front panel tour

This section provides an overview of the control elements and connectors on the front panel of the R&S SMW. On the [rear panel](#), you find all further connectors of the unit.

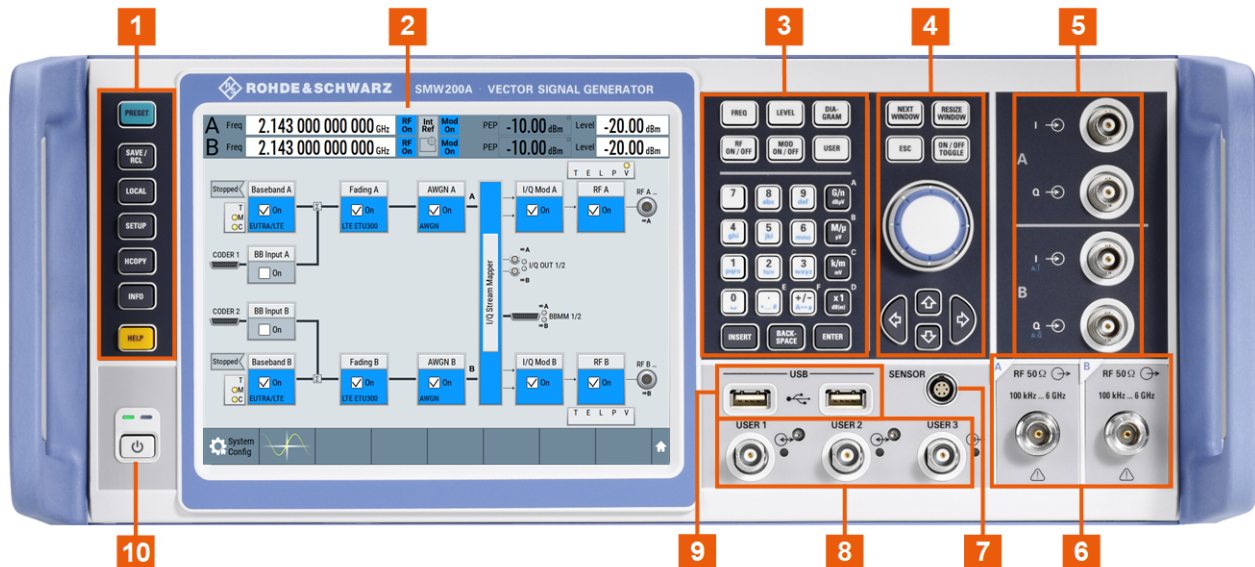


Figure 3-2: R&S SMW front panel controls and connectors

- 1 = Utility keys
- 2 = Touchscreen
- 3 = Function keys and Keypad
- 4 = Navigation controls

- 5 = I/Q, I/Q Bar
- 6 = RF A/RF B
- 7 = SENSOR
- 8 = USER x
- 9 = USB, page 45
- 10 = On/Standby, page 42

3.2.1.1 Touchscreen

The block diagram and the most important settings are displayed on the screen on the front panel. The screen display also provides status and setting information and allows you to quickly reconfigure the signal flow. The screen is touch-sensitive, offering an alternative means of user interaction for quick and easy handling of the instrument.

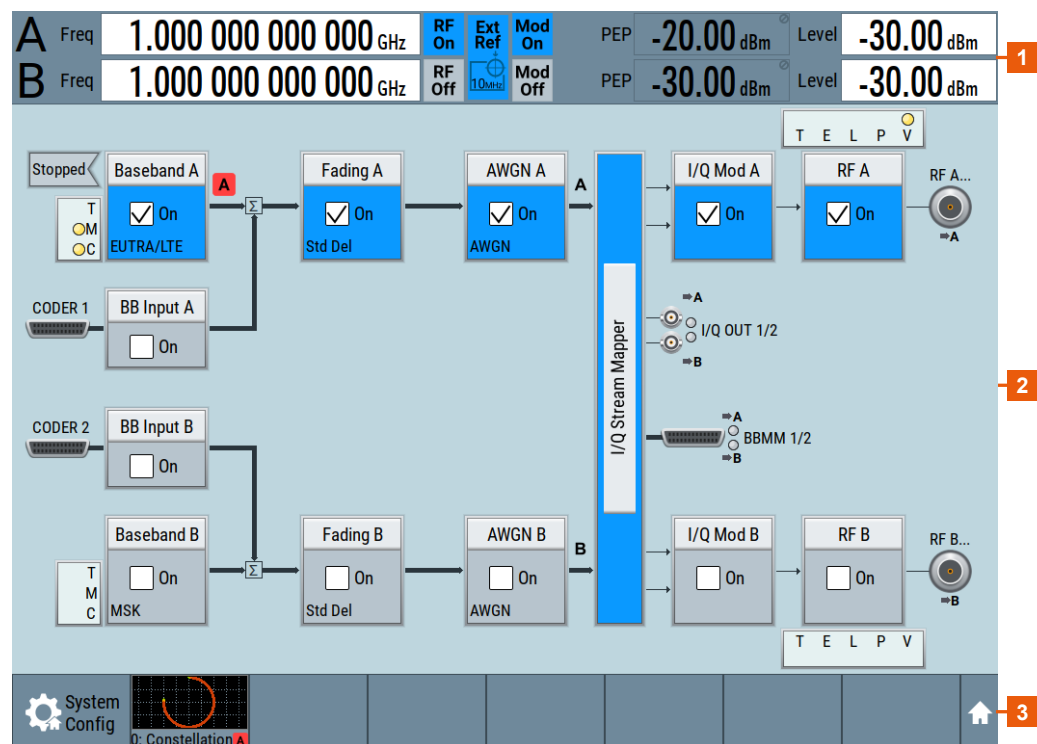


Figure 3-3: Touchscreen elements

- 1 = Status bar (frequency and level display)
- 2 = Block diagram
- 3 = Taskbar/softkey bar

Any user interface elements that react to a click by a mouse pointer also react to a tap on the screen, and vice versa. Using the touchscreen, you can perform the following tasks (among others) by the tap of your finger:

- Changing a setting
- Selecting new settings
- Scrolling through the list of parameters
- Saving or recalling settings

- Routing the signal flow
- Opening and closing dialogs

See also:

- [Chapter 3.5, "Instrument control"](#), on page 91, for operating the touchscreen.
- [Chapter 17.1, "Cleaning"](#), on page 1370, for instructions on cleaning the screen.

3.2.1.2 Keys

Utility keys

The utility keys cause the R&S SMW to return to a defined instrument state and provide information on the instrument and assistance.

For more information, refer to [Chapter 12, "General instrument functions"](#), on page 739.

Table 3-3: Utility keys

Utility key	Assigned functions
[PRESET]	Sets the instrument to a defined state
[SAVE/RCL]	Saves and loads instrument setting Accesses the file manager
[LOCAL]	Switches from remote control to local (manual) control
[SETUP]	Accesses the general instrument settings
[HCOPY]	Opens the "Hardcopy" dialog for storing the current display in a file
[INFO]	Displays status messages, error messages, and warnings
[HELP]	Displays context-sensitive help text

On/Standby

The [On/Standby] key switches the instrument from the standby to the ready state or vice versa.

The LED above the [On/Standby] key indicates the instrument state, see [Chapter 3.1.14, "Switching on or off"](#), on page 38.

Function keys

Function keys provide access to most common generator settings and functions.

A detailed description of the corresponding functions is provided in the user manual.

Table 3-4: Function keys

Function key	Assigned functions
[FREQ]	Activates frequency entry. ¹⁾
[LEVEL]	Activates level entry. ¹⁾
[Diagram]	Brings the block diagram to the foreground. Active dialogs are minimized.

Function key	Assigned functions
[RF ON/OFF]	Switches the RF output on and off. ²⁾
[MOD ON/OFF]	Switches the modulations on and off. ²⁾
[USER]	Key with a customizable function. You can define the action to be executed.
Function execution (in navigation controls area)	
[ON/OFF TOGGLE]	<ul style="list-style-type: none"> Switches highlighted elements or a function block on and off. Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.

¹⁾ The entry field that was active last is activated. Press the key again to activate the entry field of the other path.

²⁾ Status is displayed in the "Status bar". The key switches off all RF signals/modulations; press the key again to restore the last active status.

Keypad

The keypad is used to enter alphanumeric parameters, including the corresponding units. It contains the following keys:

Table 3-5: Keys on the keypad

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. For an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (G/n dBμV, M/μ μV, k/m mV and x1 dB(m))	<p>These keys add the selected unit to the entered numeric value and complete the entry.</p> <p>For level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [Enter] key.</p>
[INSERT] key	Toggles between insert and overwrite mode.
[ESC] key	<p>Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. Closes dialog boxes that contain a "Cancel" button.</p> <p>For "Edit" dialog boxes, the following applies:</p> <ul style="list-style-type: none"> If data entry has been started, it retains the original value and closes the dialog box. If data entry has not been started or has been completed, it closes the dialog box.

Type of key	Description
[Backspace] key	If an alphanumeric entry has already been started, this key deletes the character to the left of the cursor.
[Enter] key	Has the same effect as pressing the rotary knob. <ul style="list-style-type: none"> • Concludes the entry of dimensionless entries. The new value is accepted. • With other entries, this key can be used instead of the default unit key. • In a dialog box, selects the default or focused element. • Calls the next dialog level. • Confirms and closes open input windows.

Navigation controls

The navigation controls include a rotary knob, navigation keys, and the display keys. They allow you to navigate within the display or within dialog boxes.

Rotary knob

The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counterclockwise direction) numeric instrument parameters at a defined step width.
- Moves the selection, e.g. to a function block in the block diagram
- Shifts the selection bar within focused areas (e.g. lists).
- Acts like the [Enter] key, when it is pressed.

Navigation keys

The navigation keys can be used alternatively to the rotary knob to navigate through dialog boxes, diagrams, or tables.

Table 3-6: Navigation keys

Type of key	Description
[Up/Down] key	The [Up] and the [Down] key does the following: <ul style="list-style-type: none"> • In a numeric edit dialog box, increase or decrease the instrument parameter. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar vertically. • In windows or dialog boxes with vertical scrollbar, move the scrollbar.
[Left/Right] key	The [Left] and the [Right] key does the following: <ul style="list-style-type: none"> • In an alphanumeric edit dialog box, move the cursor. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar horizontally. • In windows or dialog boxes with horizontal scrollbar, move the scrollbar.

Display keys

The display keys arrange different windows on the display.

Table 3-7: Display keys

Display key	Assigned functions
[NEXT WINDOW]	Toggles between the active dialogs
[RESIZE WINDOW]	Adjusts the size of the active dialog to use the whole height of the display.
[ESC]	<p>Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. Equals selecting the "Cancel" button in dialogs, if provided.</p> <p>For "Edit" dialog boxes, the following applies:</p> <ul style="list-style-type: none"> • If data entry has been started, it retains the original value and closes the dialog box. • If data entry has not been started or has been completed, it closes the dialog box.

3.2.1.3 Connectors

The RF and I/Q connectors and various others interface connectors are on the front panel.

I/Q, I/Q Bar

BNC connectors for input of external I/Q signals for analog modulation. The signals are fed directly into the I/Q modulator.

One pair of I and Q inputs are available per installed RF path.

Use the connectors for connections as follows:

- I/Q connectors: Direct (single-ended) or positive differential input of analog I/Q signals
- I/Q Bar connectors: Negative differential input of analog I/Q signals

How to:

- ["To apply an external analog signal directly to the I/Q modulator"](#) on page 223
- ["To apply an external differential analog signal directly to the I/Q modulator"](#) on page 223

USB

Two female USB (universal serial bus) 2.0 connectors of type A (host USB). You can connect, for example, a keyboard, a mouse or a USB memory stick.

Further USB connectors of type A (host USB) and type B (USB Device) are available on the rear panel.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 34.

SENSOR

Connector for R&S NRP sensors.

A power sensor is connected to the R&S SMW by inserting the male connector. To disconnect, pull the connector by its sleeve. You cannot disconnect the sensor simply by pulling at the cable or the rear part of the connector.

The R&S SMW supports the use of R&S NRP power sensors in various ways including the use as a power viewer.

See also:

- [Chapter 8.12.4, "Using power sensors"](#), on page 605
- [Chapter 8.12.3, "User correction"](#), on page 593

USER x




BNC multipurpose connectors for defining input signals and output signals.

The [Table 3-8](#) lists the signals assigned to the USER x connectors in the default instrument state.

Table 3-8: Default configuration of the USER x connectors

USER connector	Direction	Default assigned signal
1	Output	"Baseband A Marker 1"
2	Output	"Baseband A Marker 2"
3	Input	"Global Trigger 1"

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

RF A/RF B

Female connector for output of the RF signal of path A and path B.

The connector type depends on the maximum frequency f_{\max} , see table below.

Table 3-9: Frequency options, connector types and frequency ranges

Frequency option	Connector type	Frequency range
RF A: R&S SMW-B1003/-B1006/-B1007 RF B: R&S SMW-B2003/-B2006/-B2007	N female	$f_{\max} \leq 7.5 \text{ GHz}$
RF A: • R&S SMW-B1012/-B1020/-B1031/-B1040 • R&S SMW-B1040N RF B: R&S SMW/-B2012/-B2020/-B2031	2.92 mm female Instrument equipped with interchangeable 2.92 mm test port adapter.	$f_{\max} \leq 40 \text{ GHz}$
RF A: • R&S SMW-B1044/-B1056/-B1067 • R&S SMW-B1044N/-B1056N/-B1067N • R&S SMW-B1044O/-B1056O/-B1067O RF B: • R&S SMW-B2044 • R&S SMW-B2044N • R&S SMW-B2044O	1.85 mm female Instrument equipped with 1.85 mm interchangeable female/female wear and tear adapter.	$f_{\max} \leq 67 \text{ GHz}$

Note: The PC 1.85 mm male connector for up to 67 GHz comes with a protective 1.85 mm female adapter to prevent the sensitive connector from damage. It is available as a spare part, and can be replaced if damaged. Contact your Rohde & Schwarz support center or www.rohde-schwarz.com/support for information.

How to: [Chapter 3.1.10, "Connecting to RF A/RF B"](#), on page 36

3.2.2 Rear panel tour

This section provides an overview of the connectors on the rear panel of the instrument. For technical data of the connectors, refer to the data sheet.

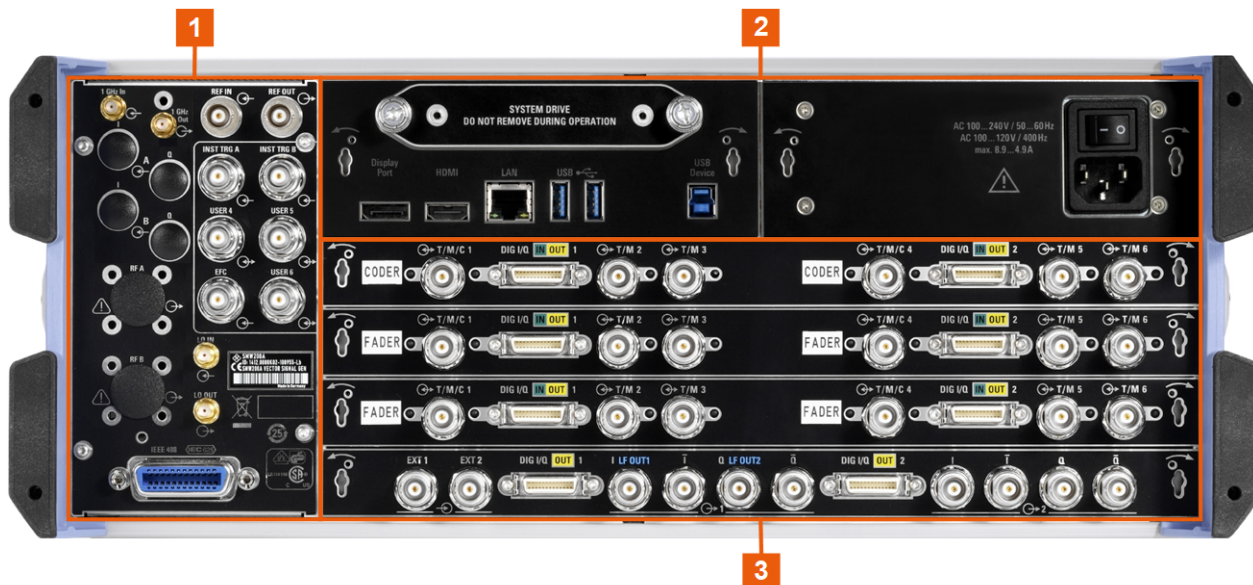


Figure 3-4: R&S SMW rear panel connectors (R&S SMW-B10/-B13T)

- 1 = Connectors for multi-purpose RF signals and remote control
- 2 = Processing board connectors and power supply
- 3 = Instrument boards R&S SMW-B10/-B13T/-B14 (standard baseband)
= Instrument boards R&S SMW-B9/-B13XT/-B15 (wideband baseband)

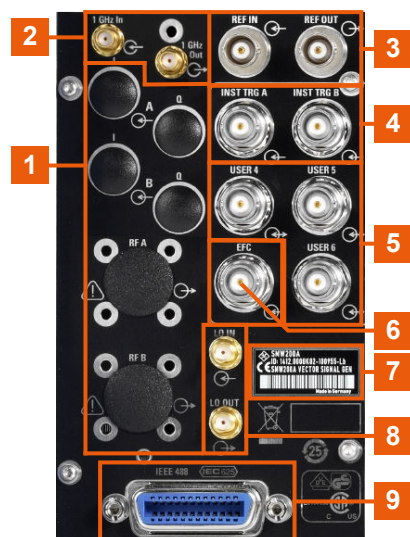


Figure 3-5: Connectors for multi-purpose RF signals and remote control

- 1 = Connectors for rack use: I/Q and RF A/RF B
- 2, 3 = REF IN/REF OUT
- 4 = INST TRIG x
- 5 = USER x

- 6 = EFC
 7 = Serial number (six digits in the string 1412.0000.02-<serial number>-<checksum>)
 8 = LO IN/LO OUT
 9 = IEC 625/IEEE 488



Figure 3-6: Processing board connectors and power supply

- 1 = System drive (HDD/SSD)
 2 = AC power supply connector and switch
 3 = USB/USB Device
 4 = LAN
 5, 6 = Display Port, HDMI

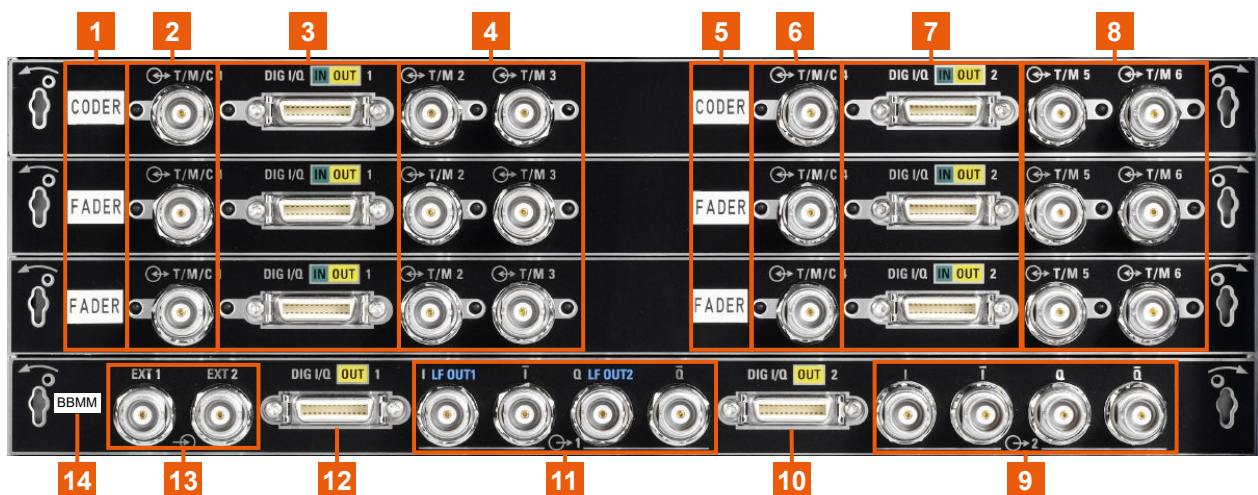


Figure 3-7: Instrument boards R&S SMW-B10/-B13T/-B14 (standard baseband)

- 1, 5, 14 = Board designation (CODER, FADER, BBMM)
 2, 4, 6, 8 = T/M/C
 3, 7, 10, 12 = DIG I/Q
 9, 11 = I/Q, I/Q Bar
 13 = EXT 1/2

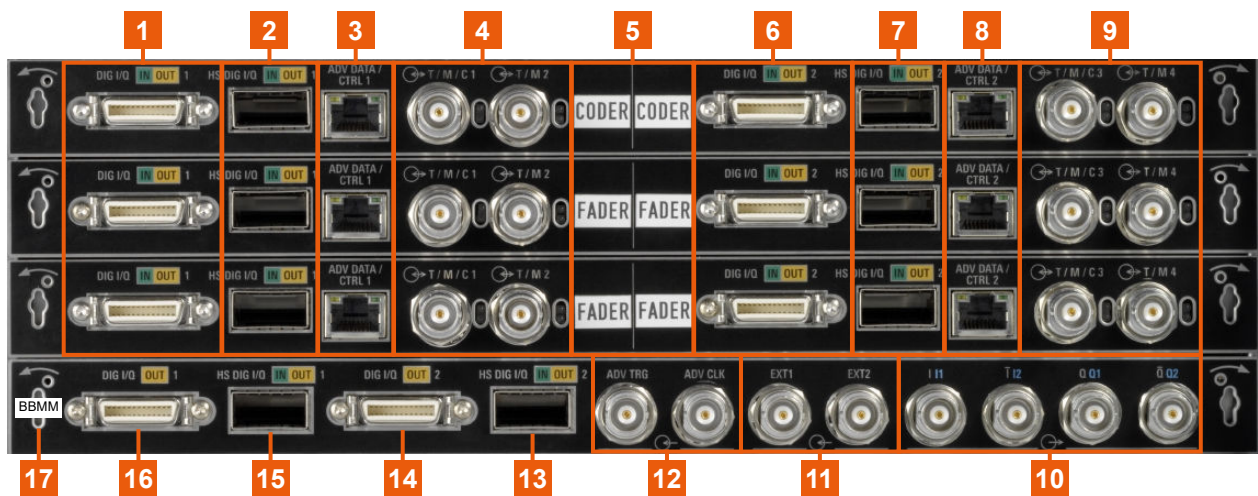


Figure 3-8: Instrument boards R&S SMW-B9/-B13XT/-B15 (wideband baseband)

- 1, 6, 14, 16 = DIG I/Q
- 2, 7, 13, 15 = HS DIG I/Q
- 3, 8 = ADV DATA/CTRL
- 4, 9 = T/M/C
- 5, 17 = Board designation (CODER, FADER, BBMM)
- 10 = I/Q, I/Q Bar
- 11 = EXT 1/2
- 12 = ADV TRG, ADV CLK

3.2.2.1 Connectors

I/Q

Rear panel I/Q input connectors, recommended for use of the instrument in a 19" rack. See "I/Q, I/Q Bar" on page 45.

How to:

- Chapter 3.1.4.2, "Mounting the R&S SMW in a rack", on page 31
- "To apply an external analog signal directly to the I/Q modulator" on page 223
- "To apply an external differential analog signal directly to the I/Q modulator" on page 223

RF A/RF B

Rear panel RF output connectors for the first RF path (option R&S SMW-B81/-B83) and the second RF path (option R&S SMW-B82/-B84). These options are recommended for use of the instrument in a 19" rack.

How to:

- Chapter 3.1.4.2, "Mounting the R&S SMW in a rack", on page 31
- Chapter 3.1.10, "Connecting to RF A/RF B", on page 36

REF IN/REF OUT

Input/output for external reference signal.

BNC connectors for reference signals from 1 MHz to 100 MHz.

SMA connectors for 1 GHz reference signals.

The external reference is used for both paths.

How to: [Chapter 3.1.12, "Connecting to REF IN/REF OUT"](#), on page 37

USER x




BNC multipurpose connectors for defining input signals and output signals.

[Table 3-10](#) lists the signals assigned to the USER x connectors in the default instrument state.

Table 3-10: Default configuration of the USER x connectors

Connector	Direction	Default assigned signal
"USER 4"	"Input"	"Global Trigger 2"
"USER 5"	"Output"	"Signal Valid A"
"USER 6"	"Not used"	"None"

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

EFC

BNC connector for input of an EFC (external frequency control) signal for electronic tuning of the internal reference frequency.

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

LO IN/LO OUT

Option: R&S SMW-B90

SMA connector for local oscillator input and output for phase-coherent RF signal:

- LO IN: Input of phase coherence signal
- LO OUT: Output of phase coherence signal

How to: [Chapter 3.1.11, "Connecting to LO In/Out"](#), on page 37

IEC 625/IEEE 488

General purpose interface bus (GPIB) interface for remote control of the instrument.

The interface is in compliance with the standards IEC 625, IEEE 488 and SCPI.

Use this interface to connect a computer for remote control of the R&S SMW. To set up the connection, use high-quality shielded cables. See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 32.

See also [Chapter D.2.1, "GPIB-Bus interface"](#), on page 1421 and [Chapter 13, "Network operation and remote control"](#), on page 819.

System drive (HDD/SSD)

Hard disk drive (HDD) or solid-state drive (SSD); the SSD requires option R&S SMW-B93.

For security reasons, the hard disk is bound to the specific R&S SMW. You can remove it from the instrument, but you cannot use it in other instruments.

See also ["Removing the system drive from the R&S SMW"](#) on page 709.

AC power supply connector and switch

Mains power switch for performing the following tasks:

- Connecting the internal power supply to the power source
- Disconnecting the internal power supply from the power source

How to: [Chapter 3.1.6, "Connecting to power"](#), on page 33.

USB/USB Device

- Two female USB (universal serial bus) 3.1 connectors of type A (host USB), to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors.
- Female USB 3.0 connector of type B (USB Device), for example, for remote control.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 34

LAN

RJ-45 connector to connect the R&S SMW to a LAN for remote control, remote operation, and data transfer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 33

Display Port, HDMI

Provided for future use.

T/M/C

BNC multipurpose input/output trigger/marker/clock connectors.

The number of connectors depends on the installed baseband options:

- Standard baseband generator (R&S SMW-B10):
One T/M/C and two T/M connectors per board.
- Wideband baseband generator (R&S SMW-B9):
One T/M/C and one T/M connectors per board

Define the input/output signal first. [Table 3-11](#) lists the configuration of the local connectors in the default instrument state.




Table 3-11: Default configuration of the T/M/C connectors (standard baseband)

T/M/C connector (Standard baseband)	Direction	Default assigned signal	Remark
1, 4	Output	Clock	Local clock signal for the particular baseband
2, 5	Input	Trigger	Local trigger signal for the particular baseband
3, 6	Output	Marker 3	Marker output signal from the particular baseband

Table 3-12: Default configuration of the T/M/C connectors (wideband baseband)

T/M/C connector	Direction	Default assigned signal
1	Output	Symbol clock
2	Input	External serial data

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

See also the chapters in the user manual:

- [Chapter 5.5.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 234
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745

DIG I/Q




Connectors for the input/output of a digital I/Q signal from and to a Rohde & Schwarz instrument, like a signal generator, signal analyzer, the R&S®IQW, or the R&S®CMW500.

The interfaces require the options listed in [Table 3-13](#) (for details see the data sheet).

Table 3-13: Overview of the DIG I/Q interfaces and the required options

Location	Designation	Required option
CODER boards	CODER 1/2 In	R&S SMW-B10, standard baseband generator R&S SMW-B9, wideband baseband generator, if "System Config > Mode = Advanced"
FADER boards	FADER 1/2/3/4 In/Out	R&S SMW-B14, fading simulator
BBMM board	BBMM 1/2 Out	R&S SMW-B13/-B13T and R&S SMW-K18, digital baseband output R&S SMW-B13XT and R&S SMW-K19, if "System Config > Mode = Advanced"

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

INST TRIG x

BNC connector for input of external trigger signals. The signals trigger sweeps and list mode.

See [Chapter 8.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 515.

EXT 1/2

BNC connectors for input of external analog modulation signals.

Any of the two inputs can be used for path A and path B.

See [Chapter 8.11, "Analog modulations"](#), on page 552.

LF OUT x

Option: R&S SMW-B13/-B13T

BNC connector for output of the internal LF generator signal.

Note: The output of the internal LF signal and the analog I/Q signal use the same physical connectors. Therefore, consider that you cannot assign both signals at the output simultaneously.

See the data sheet and in the user manual, section [Chapter 8.11, "Analog modulations"](#), on page 552.

I/Q, I/Q Bar

BNC connector for output of direct (single-ended) or differential analog I/Q signals.

Note: The R&S SMW also assigns the internal signal of the LF generator to the I output connector.

Therefore, consider that you cannot output the analog I/Q signal and the internal LF signal at the same physical connector simultaneously.

Use the connectors for connections as follows:

- I/Q connectors: Direct (single-ended) or positive differential output of analog I/Q signals
- I/Q Bar connectors: Negative differential output of analog I/Q signals

The number of connectors depends on the installed baseband options:

- Standard baseband (R&S SMW-B10 and R&S SMW-B13T)
Two single-ended analog and two differential outputs.
Output of differential signal requires option R&S SMW-K16.
- Wideband baseband (R&S SMW-B9 and R&S SMW-B13XT)
Two single-ended analog or one differential output. Differential and single-ended signals cannot be output at the same time.
Output of differential signal requires option R&S SMW-K17.

How to:

- ["To connect instruments to the I/Q analog interface"](#) on page 201
- ["To connect instruments to the I/Q digital interface"](#) on page 203

ADV DATA/CTRL

Option: R&S SMW-B9/-B13XT and R&S SMW-K503/-K504

Interface for exchanging of external data and control signals.

See user manual R&S SMW-K501/-K502/-K503/-K504 Extended and Real-Time Sequencing, Real-Time Control Interface.

ADV TRG, ADV CLK

Option: R&S SMW-B9/-B13XT

Input and output for synchronization signal in multi-instrument setups.

See also [Chapter 10, "Multi-instrument setups"](#), on page 669.

HS DIG I/Q

Option: R&S SMW-B9/-B13XT

Connectors for the input/output of high-speed digital I/Q signals, for example, from and to Rohde & Schwarz instruments.

The interfaces require the options listed in [Table 3-14](#).

For more information, see data sheet.

Table 3-14: Overview of HS DIG I/Q interfaces and required options

Location of the interface	Designation	Required option
CODER board	CODER 1/2 In	R&S SMW-B9, wideband baseband generator
BBMM board	BBMM 1/2 Out	R&S SMW-B13XT, wideband baseband main module R&S SMW-K19 for the output of digital signals

The interface is a QSFP+ (Quad Small Form-factor Pluggable) module. It supports max. bandwidth of up to 50 Gsample/s with optical active cables.

How to: [Chapter 3.1.13, "Connecting to HS DIG I/Q"](#), on page 37

3.3 Trying out the instrument

This chapter introduces the most important functions and settings of the R&S SMW step by step. The complete description of the functionality and its usage is given in the R&S SMW user manual. Basic instrument operation is described in [Chapter 3.5, "Instrument control"](#), on page 91.

You can perform the tasks described in this section step by step or run the build-in tutorials, see:

- ["To start a tutorial in an interactive step-by-step mode"](#) on page 104

Prerequisites

- The instrument is set up, connected to power and started up as described in [Chapter 3.1, "Preparing for use"](#), on page 29.
- Throughout this description, the term **base unit** describes a R&S SMW equipped with the options R&S SMW-B10, R&S SMW-B13, and R&S SMW-B1003.

You can check all supplied options and licenses of the instrument, see [Chapter 15.8, "Requesting instrument configuration and specifications"](#), on page 1361.

For the first signal generation tasks, you use the internal baseband and reference signal, so you do not need any additional signal source. More complex signal generation tasks, however, require an instrument equipped with additional options and/or external signals. Each task description lists its prerequisites.



The screenshots in this description show a fully equipped instrument. Consider that, the block diagram displayed on your particular instrument can differ from the one used in the example.

The instrument is manually operated via the touchscreen. Try out the following:


- [Generating an unmodulated carrier](#)..... 55
- [Generating a digitally modulated signal](#)..... 57
- [Triggering the instrument externally](#)..... 59

- Working with marker signals..... 65
- Routing a baseband signal to the outputs..... 66
- Verifying the generated signal..... 71
- Saving and recalling settings..... 73
- Generating an EUTRA/LTE signal..... 75
- Enabling MIMO configuration..... 78

3.3.1 Generating an unmodulated carrier


We start out by generating a simple unmodulated signal. The R&S SMW in this example can be a base unit in its minimal configuration.

1. On the R&S SMW front panel, press the [PRESET] key to start out of defined instrument configuration.
2. Set the frequency:
 - a) On the "Status Bar", tap the "A Freq" field.
 - b) On the on-screen keypad, enter 1.955 g.

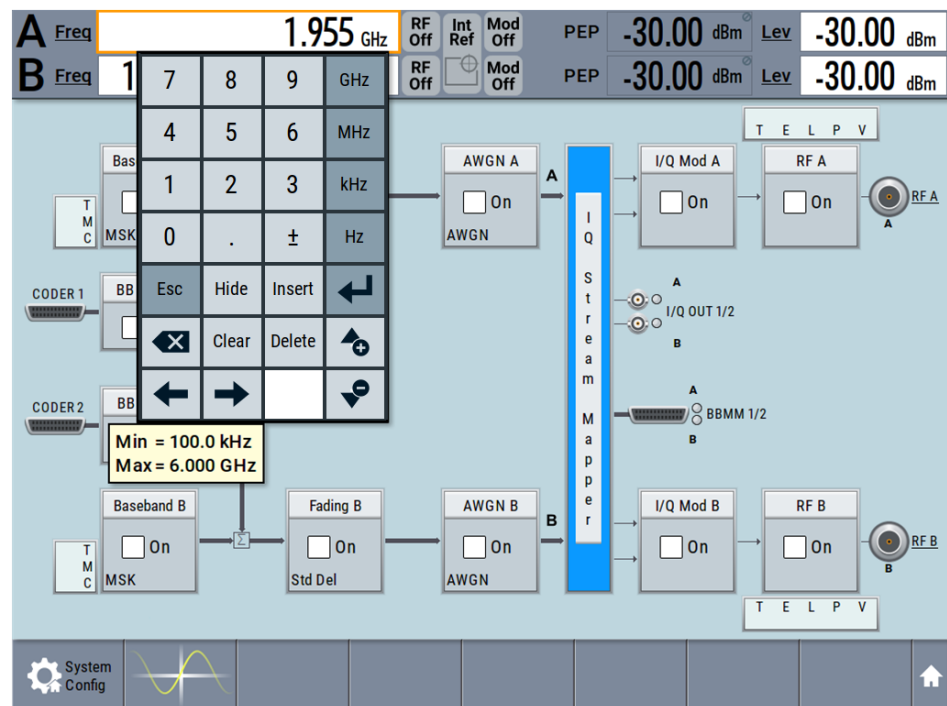

The on-screen key pad closes, the frequency is 1.955 GHz.

 3. On the "Status Bar", tap the "Lev" field and enter the level in the same way.



4. Select "Block Diagram > RF A Block > On" to enable the output of the generated unmodulated signal.

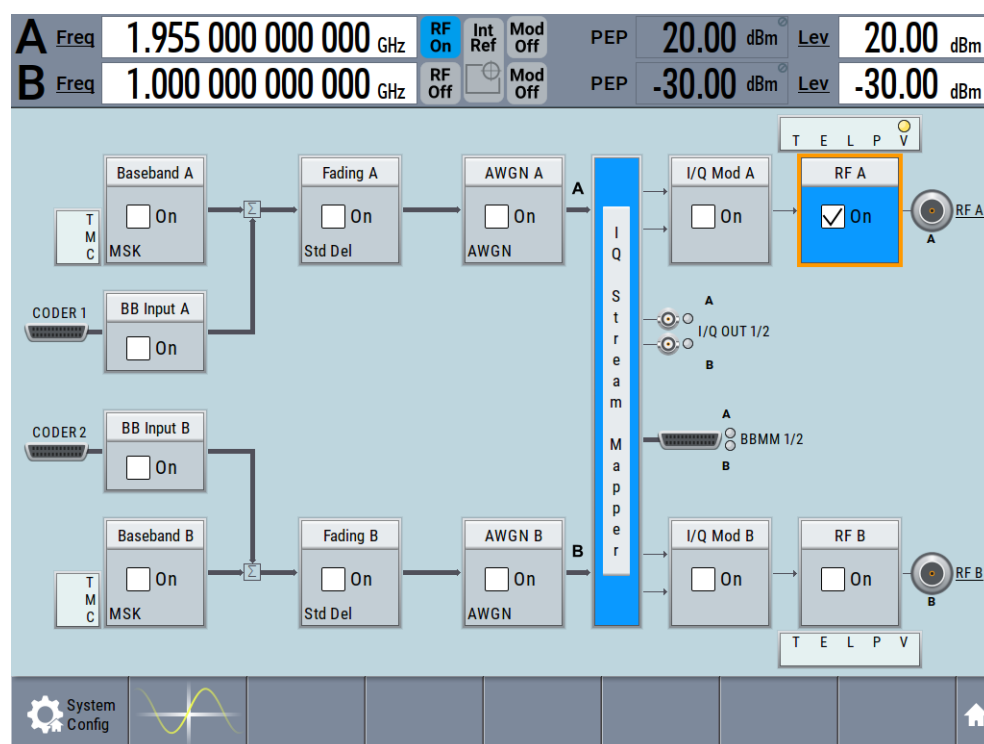


Figure 3-9: Block diagram: Generating an unmodulated signal

Tip: Alternative way to access the instrument functions. To fulfill the same task, you can use other hot spots in the block diagram, the provided functions under the "RF" block or the function front panel keys.

Try out the following:

- On the "Status Bar" and in the block diagram, tap the underlined labels Freq, Lev and RF A.
Or:
- Select "Block Diagram > RF A" block, navigate through the context menu, and use the settings provided in the "Frequency" and "Level" dialog.

RF Frequency	
<input checked="" type="checkbox"/>	RF On
Connectors...	
Frequency...	
Phase...	
Reference Frequency...	
LO Coupling...	
RF Level	

To enable signal generation, enable the "RF On".

Or:

- Use the [FREQ], [LEVEL], and [RF ON/OFF] key on the front panel.

See also [Chapter 3.5, "Instrument control"](#), on page 91.

The RF A connector on the front panel of the R&S SMW outputs the 1.955 GHz signal.



Connect RF A of the R&S SMW to a signal analyzer, for example R&S®FSW, to display the generated signal.

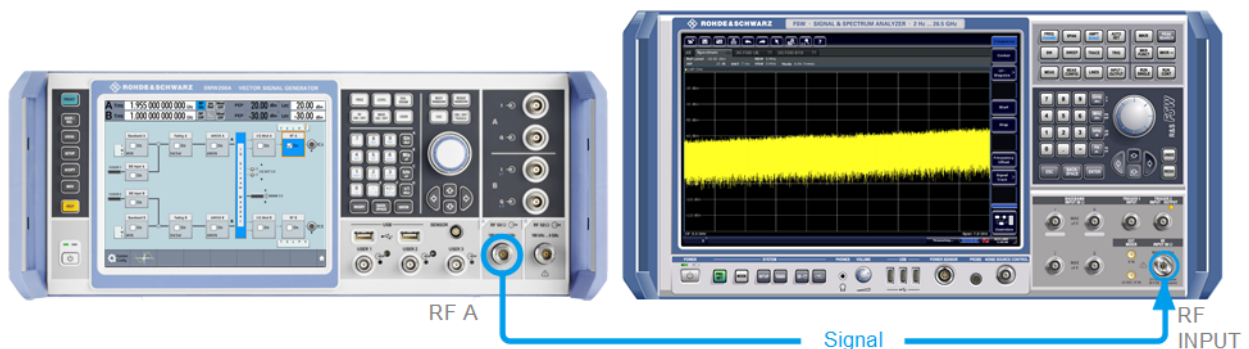


Figure 3-10: Simplified test setup


For the required settings of the signal analyzer, refer to its user manual or its online help.

3.3.2 Generating a digitally modulated signal

This example shows you how to generate a simple WCDMA-3GPP (QPSK 45° offset) signal with the help of the "Custom Digital Modulation" functionality. The minimum requirement for R&S SMW in this example is a base unit.


The initial situation is not the instrument's preset state but rather the configuration described in [Chapter 3.3.1, "Generating an unmodulated carrier"](#), on page 55.

1. In the block diagram, select "Baseband A" and navigate to the section "Misc > Custom Digital Mod...".

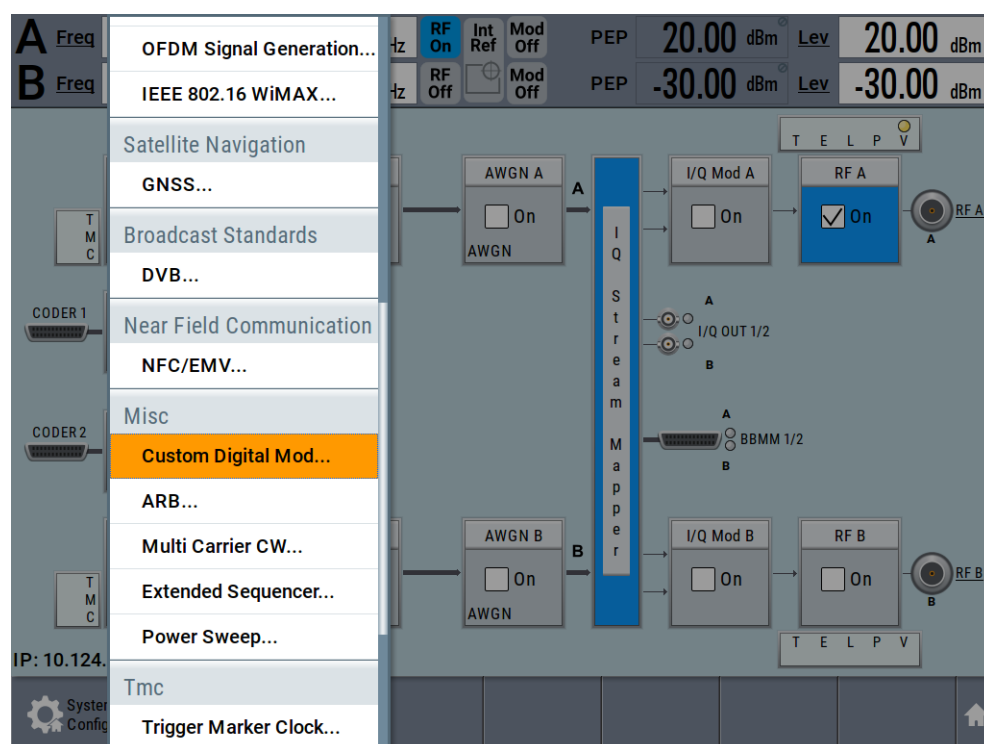

The "Custom Digital Modulation" dialog opens.

- In the "Custom Digital Modulation" dialog, select "General > Set acc to standard > WCDMA-3GPP".
- Select "General > State > On" to enable signal generation.

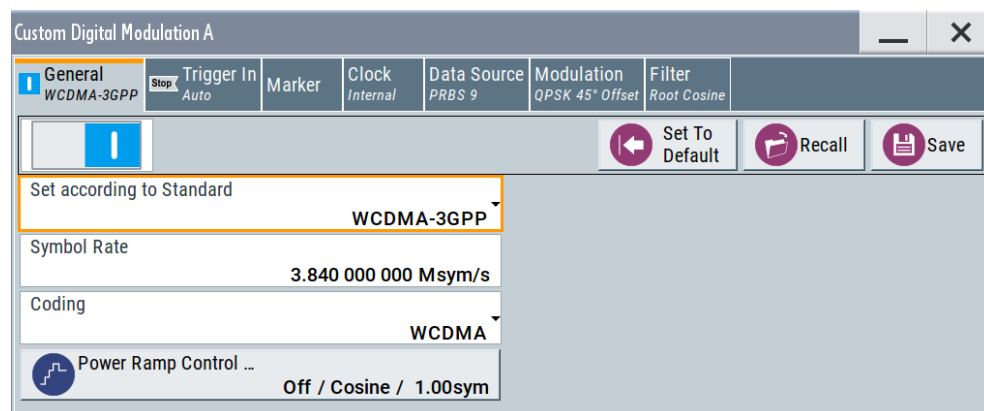

- Select the "Modulation" tab and observe the used "Modulation Type".

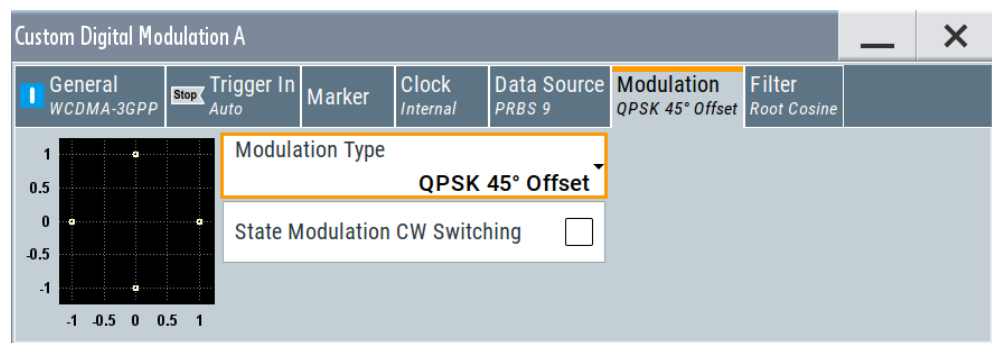


Figure 3-11: Display of the used modulation type

The instrument activates automatically "I/Q Mod A", uses the internal trigger and clock signals, and generates a WCDMA-3GPP signal, modulated with a QPSK 45° offset modulation.

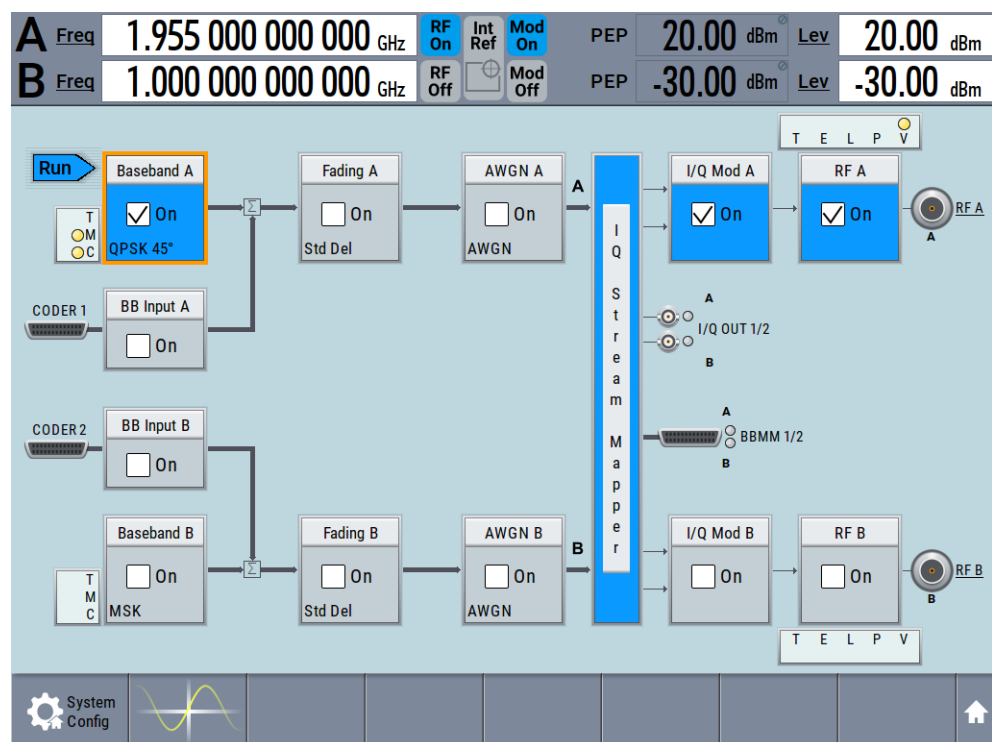


Figure 3-12: Block diagram: Generating a digitally modulated signal

3.3.3 Triggering the instrument externally

The example configurations are rather theoretical cases, because you rarely use the R&S SMW as a stand-alone instrument. Usually, the instrument would be connected to a device under test (DUT) and/or other measurement equipment. As a rule, whenever a test setup requires two or more devices, provide them with a common reference frequency. Some test setups require control of the signal generation start and an exact

generation start time. A defined trigger event starts signal generation, e.g. when triggering the instrument internally or externally from the DUT.

This example illustrates the general principle of external triggering and extends the configuration performed in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57 by the configuration of the required trigger signal and connector settings.



In this example, we use global USER connectors. Alternatively, you can achieve the same configuration goal with local [T/M/C](#) connectors.

This test setup requires one signal analyzer, like the R&S®FSW, as additional equipment.

To start the signal generation in Baseband A synchronous to an external global trigger signal

The configuration requires three main steps with the following goals:

1. Observe the current connector configuration and define an input connector for the external global trigger signal.
See ["To verify the current connector configuration"](#) on page 60
2. Configure Baseband A to use this external global trigger signal as trigger source.
See ["To reconfigure the trigger settings"](#) on page 63
3. Connect the instrument and the external trigger source.
See ["To connect the instrument and the external trigger source"](#) on page 63

To verify the current connector configuration

The R&S SMW is equipped with multi-purpose bi-directional local T/M/C connectors and global USER connectors. Because the signal direction, input or output, and the signal mapping are configurable, we recommend that you check the current configuration before cabling or further instrument's configurations.

1. To display *an overview* of the current mapping of the logical signals to the connectors, perform one of the following:

- In the block diagram, select the Trigger/Marker/Clock status LEDs on the left side of the "Baseband" block.



- Select "Baseband > Trigger Marker Clock".

Trigger Marker Clock

Baseband A

Baseband B

	Logical Signal	Connector	Show
Trigger Source	Internal		
Clock Source	Internal		
Clock Output		T/M/C 1	...
Marker 1	On/Off Ratio	User 1, T/M 2	...
Marker 2	On/Off Ratio	User 2, T/M 3	...
Marker 3	On/Off Ratio		

Diagram Legend
T =Trigger =Common to all Basebands
M=Marker
C =Clock
=Signal is available at Output Connector
=Signal Source is external

Local Connectors ...
 Global Connectors ...

The instrument uses its internal trigger and clock signals, and the default mapping of the marker signals to the connectors.

2. To access the related connector settings, perform one of the following:
 - Select "Global Connector Settings"
 - Tap the connector name, for example select the connector "User 1, T/M 2"

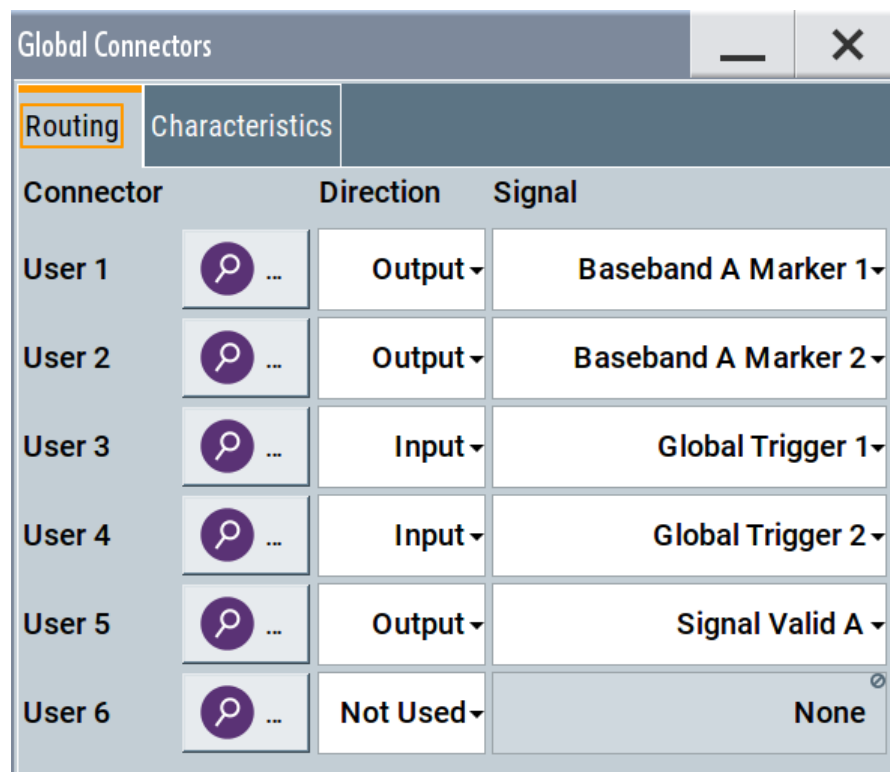


Figure 3-13: Signal mapping to the global connectors

The "Global Connectors" dialog displays the current connectors configuration. The settings are configurable, but in this example we use the default mapping.

- Alternatively, select "Block Diagram > Baseband > Misc > Custom Digital Mod", select the "> Trigger In" tab and select "Local Connector Settings" or "Global Connector Settings".

In the current mapping, the three global connectors **USER x** on the front panel are configured as follows:

- "Marker 1/2" are output at the USER 1/2 connectors
- The USER 3 connector is an input for the "Global Trigger 1" signal.

Check the front panel of the R&S SMW. The USER 1/2 LEDs are yellow; the USER 3 LED is green.




Find the physical location of each connector

Use the built-in "Trigger Marker Clock > Show" function to display the location of the selected connector. A blinking LED on the front/rear panel also indicates the selected connector.

To reconfigure the trigger settings


We assume that the instrument is configured as described in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57 and the default connector mapping is maintained (see [Figure 3-13](#)).

1. In the block diagram, select "Baseband > Misc > Custom Digital Mod > Trigger In".
2. Select the following settings:
 - a) "Mode > Armed Auto"
 - b) "Source > External Global Trigger 1".

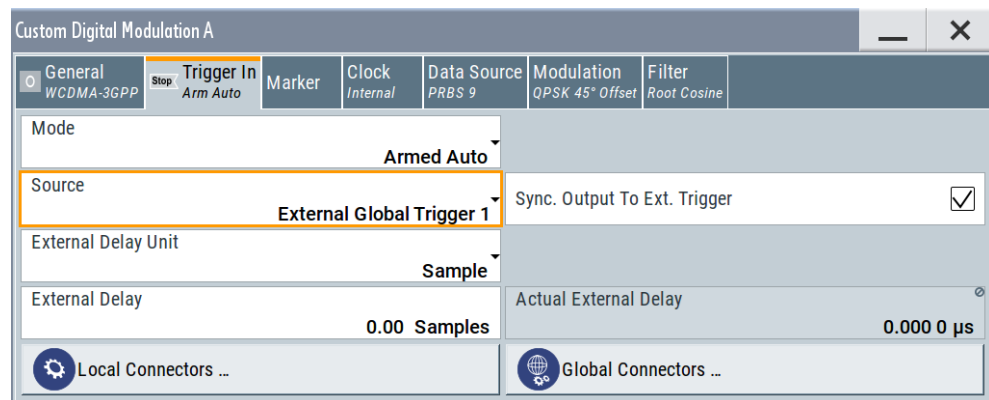

The instrument expects an external global trigger event. In this current configuration (see [Figure 3-13](#)), the "Global Trigger 1" signal has to be supplied at the input connector USER 3.

The Trigger/Marker/Clock status LEDs in the block diagram confirm that an external trigger signal is selected; the signal generation is however stopped.

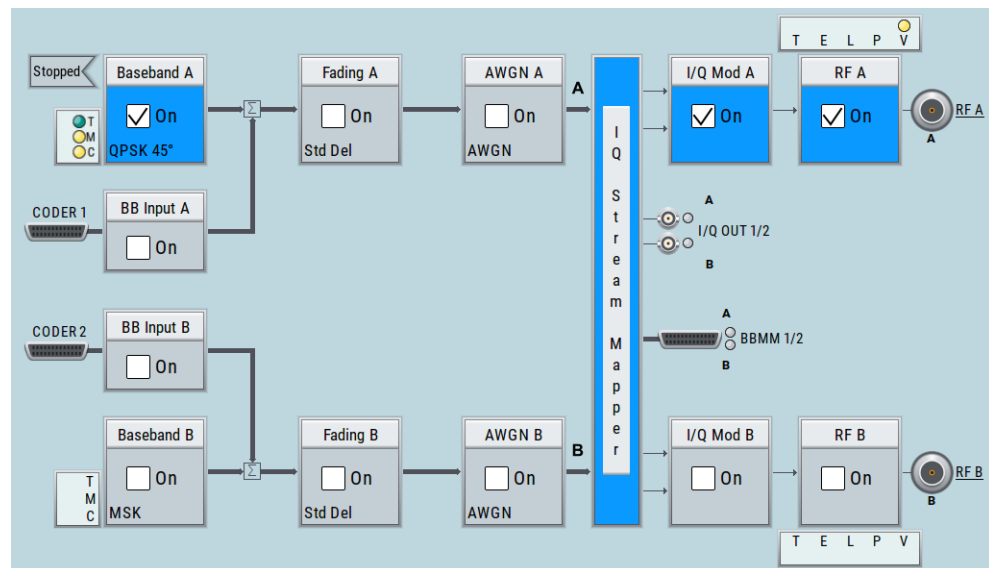

To connect the instrument and the external trigger source

1. Use a suitable cable to connect the external trigger source to the USER 3 connector of the R&S SMW, see [Figure 3-14](#).


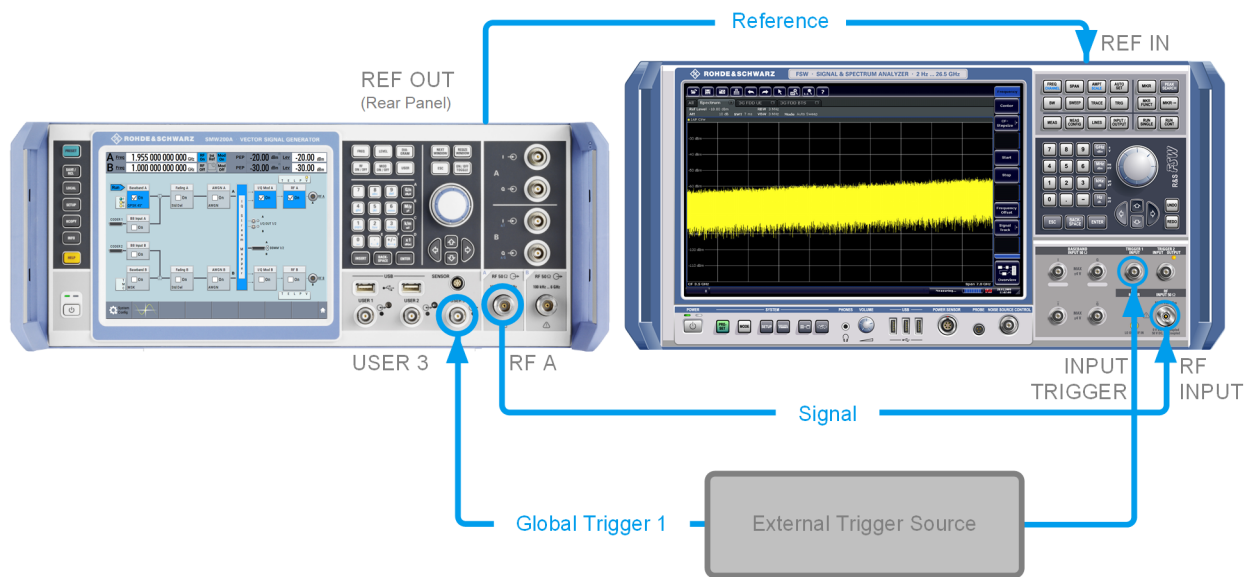


Figure 3-14: Simplified representation of a test setup**

** = The figure depicts the cabling as a general principle; a particular test setup does not require all connections at the same time.

The [Figure 3-14](#) depicts the location of the connectors and explains the connection as principle. In practice, you would rather "substitute" the analyzer by a DUT, like a base station (BS). Other than in the example, the DUT can be the source for the reference signal. Instead of an external trigger source, the DUT can send, e.g., a frame trigger signal to the R&S SMW. The R&S SMW acts still as the signal source.

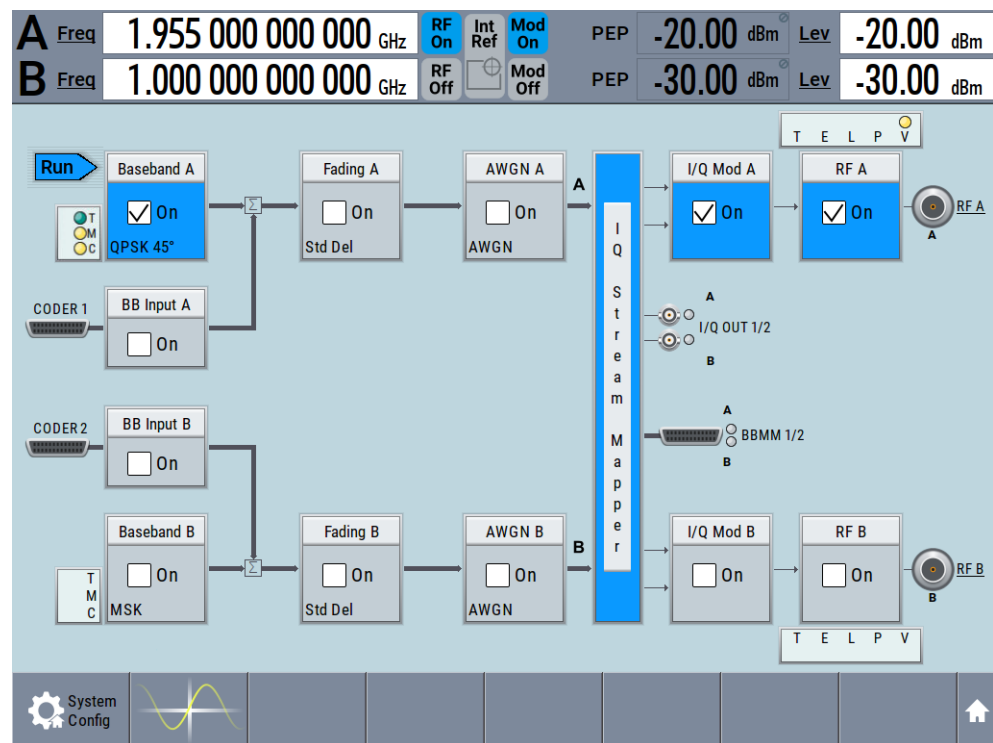

2. Use suitable cables to connect the **RF A/B** and **REF OUT** connectors of the R&S SMW to the signal analyzer or the DUT.

Upon the receiving of an external trigger event, the R&S SMW starts the signal generation and then generates a continuous signal. An "Arm" stops the signal generation. A subsequent trigger event causes a restart of the signal generation.



To learn more about this topic, refer to:

- [Chapter 5.5.1.3, "Baseband trigger signals"](#), on page 245
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745

3.3.4 Working with marker signals

Test setups often require that an external device is synchronized to the generated data stream. For this purpose, the R&S SMW can output marker signals (or markers) also to the generated signal. The R&S SMW provides several regular marker signals and marker signals specific to the firmware option. With suitable marker settings for instance, you can mark slot or frame boundaries or mark the start of a particular modulation symbol.

This example extends further the configurations performed in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57. We assume a default connector mapping (see [Figure 3-13](#)).



In this example, we use the global USER connectors. Alternatively, you can achieve the same configuration goal with the local **T/M/C** connectors.

This test setup requires one oscilloscope, like the R&S®RTO, as additional equipment.

1. In the block diagram, select "Block Diagram > Baseband > Misc > Custom Digital Mod > Marker" tab.

2. Select "Marker Mode > Marker 1 > Pulse" and "Divider = 32".

Generated is a periodic marker with marker frequency of 120 KHz. The signal is output at the USER 1 connector of the R&S SMW (see [Figure 3-13](#)).

3. Use a suitable cable to connect the USER 1 connector of the R&S SMW to the monitoring instrument, for example oscilloscope like R&S®RTO, see [Figure 3-15](#).



Figure 3-15: Simplified representation of a test setup for signal monitoring**

** = The figure depicts the cabling as a general principle

4. Use a suitable cable to connect the **I OUT** connector of the R&S SMW to the monitoring instrument.



To learn more about this topic, refer to [Chapter 5.5.1.2, "Regular marker output signals"](#), on page 241.

3.3.5 Routing a baseband signal to the outputs

This section emphasizes on the signal routing capabilities in the default state of the instrument (standard system configuration mode). The R&S SMW provides the "I/Q Stream Mapper" function to route and distribute each of the generated I/Q signals (streams) to any of the available output connectors.


In the provided example, you use the R&S SMW to generate two baseband signals, apply a baseband frequency shift, weight them and add them. You then route the gen-

erated stream and define the output connector. The initial situation is the configuration described in [Chapter 3.3.3, "Triggering the instrument externally"](#), on page 59.

The minimum requirement for the instrument in this example is an R&S SMW equipped with the options 2xR&S SMW-B10, R&S SMW-B13T, and R&S SMW-B1003/-B2003.

To configure a composed baseband signal

1. In the first baseband, generate a WCDMA-3GPP signal as described in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57.
2. To route the signal from "Baseband B" block to the first signal path, use one of the alternatives:
 - In the block diagram, select "Baseband B" block and drag&drop it to the first path ("Fading A" block or "AWGN A" block depending on the options installed on your instrument).

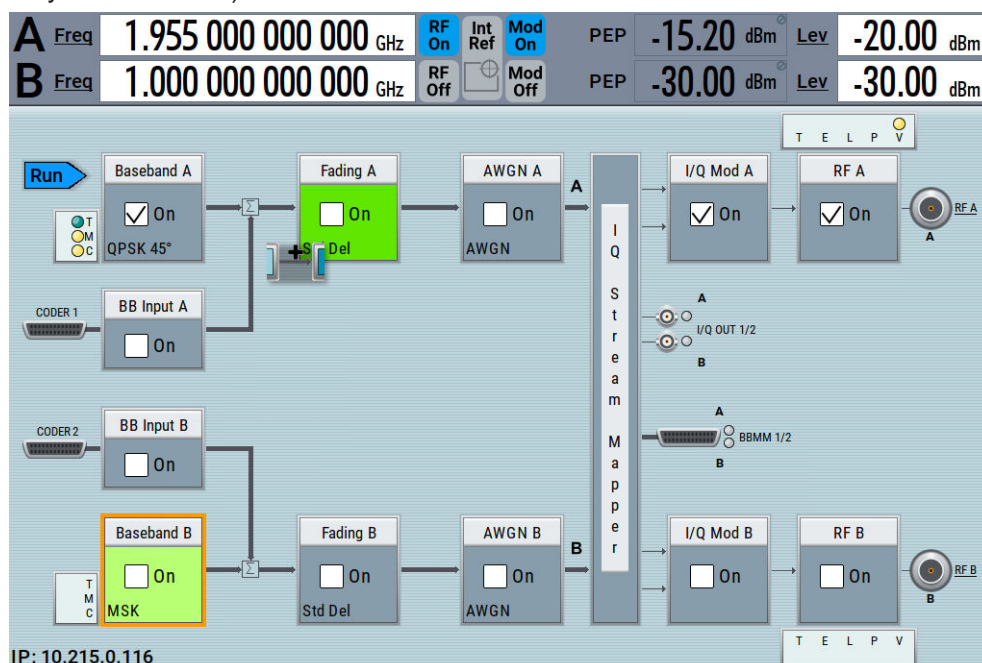


Select the "Fading B" block and drag&drop it to the "Baseband B" block.

- In the block diagram, select "Baseband B" block, navigate in the context menu, and select "Signal Routing > route to path A".


Signal Routing

- ☐ route to path B
- ☒ route to path A
- ☐ route to path A and B

The block diagram displays the routing.

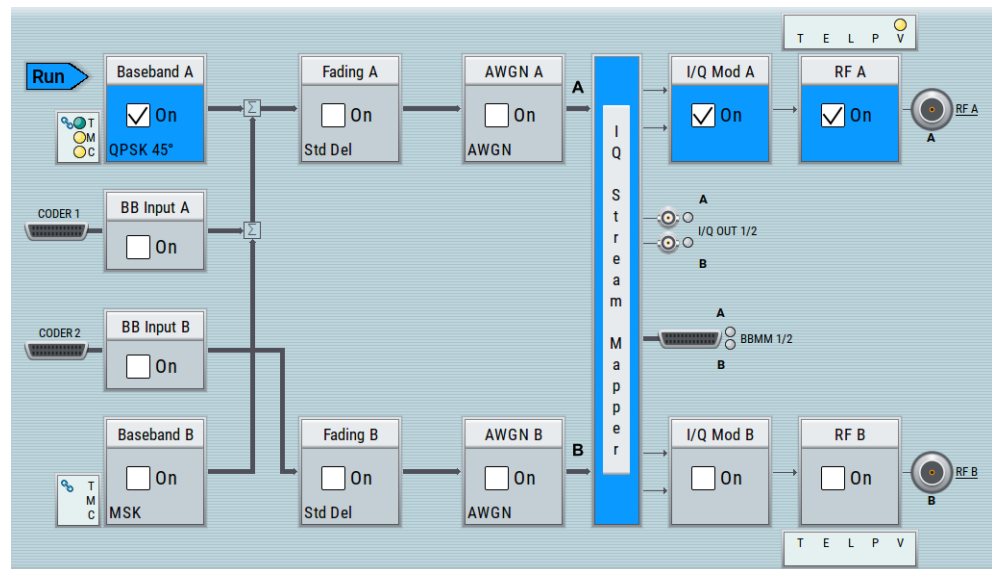

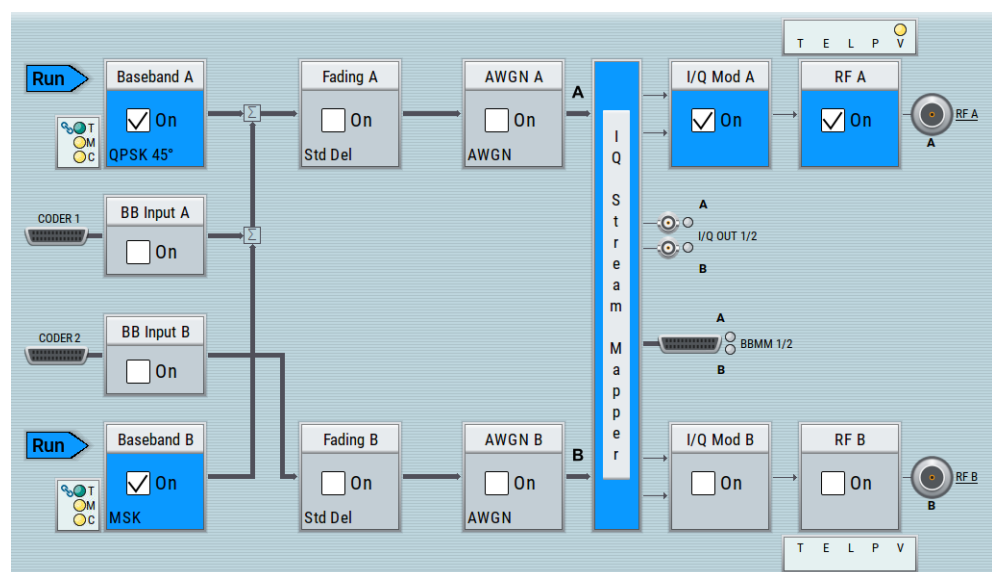

3. In the block diagram, select "Baseband B > Misc > Custom Digital Mod...", select "Set acc. to standard > 3GPP FDD" and enable "Custom Digital Modulation > State > On".



4. To apply frequency and power offsets to the signals, select "Baseband B > Baseband Offsets".
 - a) Enter "Baseband A > Frequency Offset > 5 MHz".
 - b) Enter "Baseband B > Frequency Offset > -5 MHz".
 - c) Enter "Baseband B > Path Gain > -30 dB".
 - d) Close the "Baseband Offsets" dialog.

Baseband Offsets			
	Frequency Offset /Hz	Phase Offset /°	Gain /dB
Baseband A	-5 000 000.00	0.00	0.000
BB Input A	0.00	0.00	0.000
BB Input B	0.00	0.00	0.000
Baseband B	5 000 000.00	0.00	-30.000

The symbols  and  in the block diagram confirm that the signals are added weighted with a frequency offset on both paths and a path gain on path B.

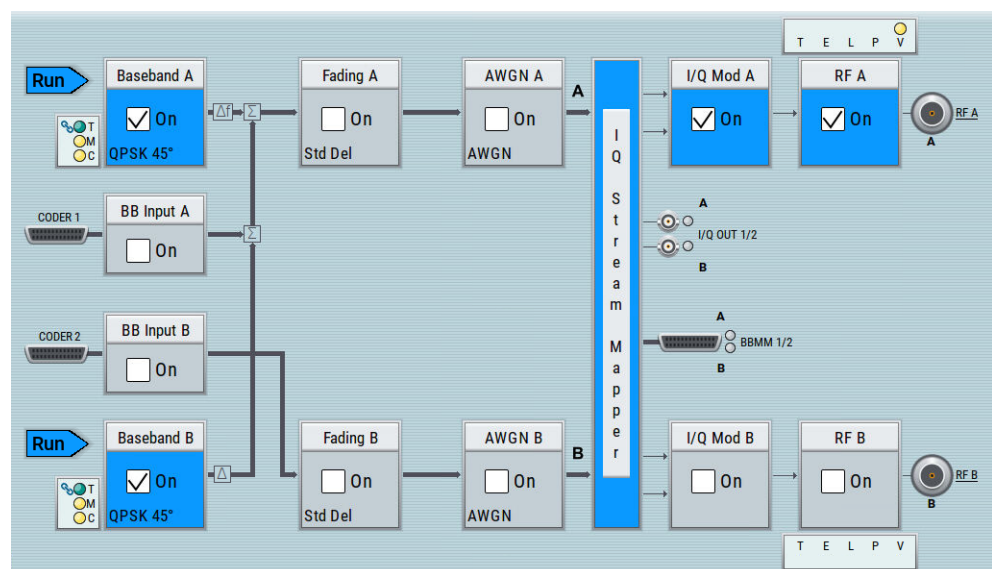



Figure 3-16: Block diagram: Generating a composed signal (stream A)

To enable simultaneous signal generation in both basebands, the R&S SMW couples the trigger settings in the available basebands. The trigger settings enabled in "Baseband A" apply automatically to the "Baseband B".

The symbol  confirms that common trigger settings are applied.

To map the I/Q stream and define the output connector

The term stream describes the signal at the input of the "I/Q Stream Mapper" up to the output connectors of the instrument.

1. In the block diagram, select the "I/Q Stream Mapper" block.

The "System Configuration > I/Q Stream Mapper" dialog displays the current (default) distribution and mapping of the I/Q streams to the output connectors as a mapping matrix.

System Configuration								
Multi Instrument	Fading/Baseband Config		I/Q Stream Mapper				External RF and I/Q	Overview
	Frequency Offs /Hz	Phase Offs /°	RF A	RF B	I/Q OUT 1	I/Q OUT 2	BBMM 1	BBMM 2
Stream A	0.00	0.00						
Stream B	0.00	0.00						
Combination			Single	Single	Single	Single	Single	Single

Stream A is routed to all the available output connectors: the analog RF A and I/Q ("I/Q OUT 1") connectors, and the digital I/Q output connectors DIG I/Q ("BBMM1").


- To reconfigure the mapping, tap a matrix entry, for example disable the output of stream A on the BBMM 1 interface.

With the "I/Q Stream Mapper", you route the streams; the outputs are, however, not necessarily activated.

Tip: How to access the settings of the input and output interfaces.

In the block diagram, the blocks related to the input and output interfaces can be folded for a better overview.

If the block diagram does not show the "I/Q Analog" block, tap the corresponding connector icon, i.e. "I/Q Out 1/2", to unfold the settings.

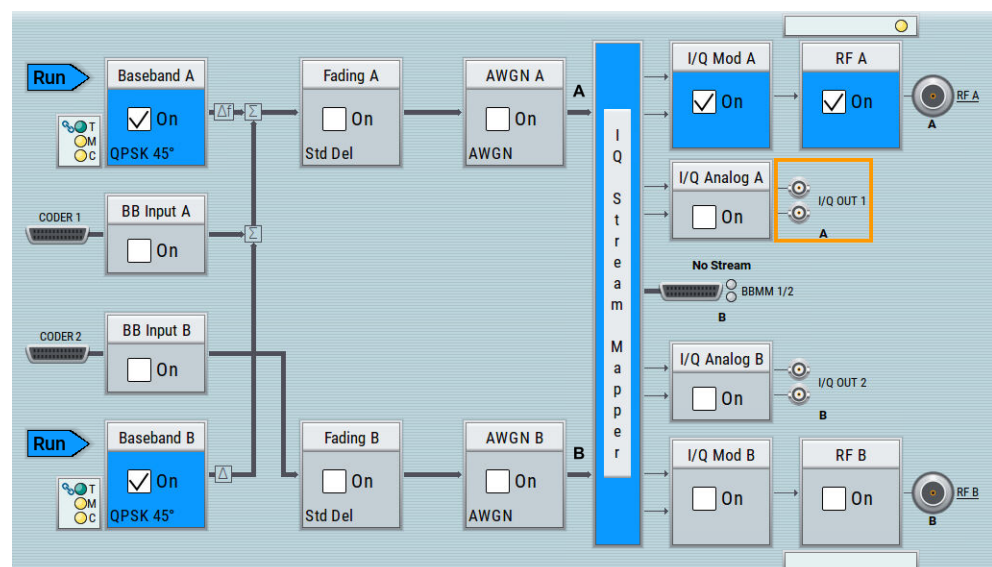

The generated composed signal (stream A) is output at the analog "RF A" connector and routed to the "I/Q Out 1" connector. The block diagram confirms this routing and displays the letter "A" next to the symbols of the output connectors. Consider however that the I/Q connectors are disabled.



To learn more and to explore the whole range of routing capability, refer to [Chapter 4, "Signal routing and system configuration"](#), on page 108.

3.3.6 Verifying the generated signal

It is often useful to check the spectra of the configured signals, before you enable the RF output of the instrument.

The R&S SMW provides a build-in function to represent the generated signal on a graphical signal display. We demonstrate this feature by showing the characteristics at one particular point of the signal processing chain. You can, however, display the signal characteristics at other different stages.


This example shows you how to use this graphical display to verify the generated signal. Use the signal generated in [Chapter 3.3.5, "Routing a baseband signal to the outputs"](#), on page 66.

To access the graphical signal display functionality

- Perform one of the following:
 - a) Select "Taskbar > System Configuration > Graphics"




- b) On the "Taskbar", tap the wave icon.

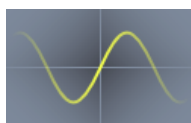

The "Graphics Configuration" dialog opens.

To visualize the sum signal

1. In the "Graphics Configuration" dialog, select "Mode > Power Spectrum".
2. Select "Source > A Stream".
3. Select "Add" to enable signal display.

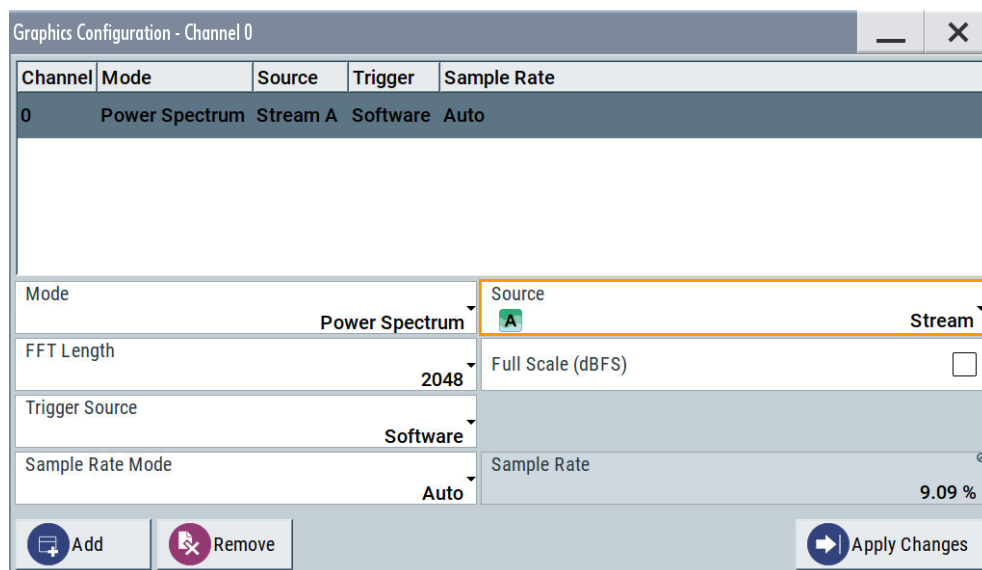


A new thumbnail (minimized view) indicating the active diagram appears in the "Taskbar".



- Press the thumbnail graphic.

The graphic enlarges and the diagram is displayed in a normal size.

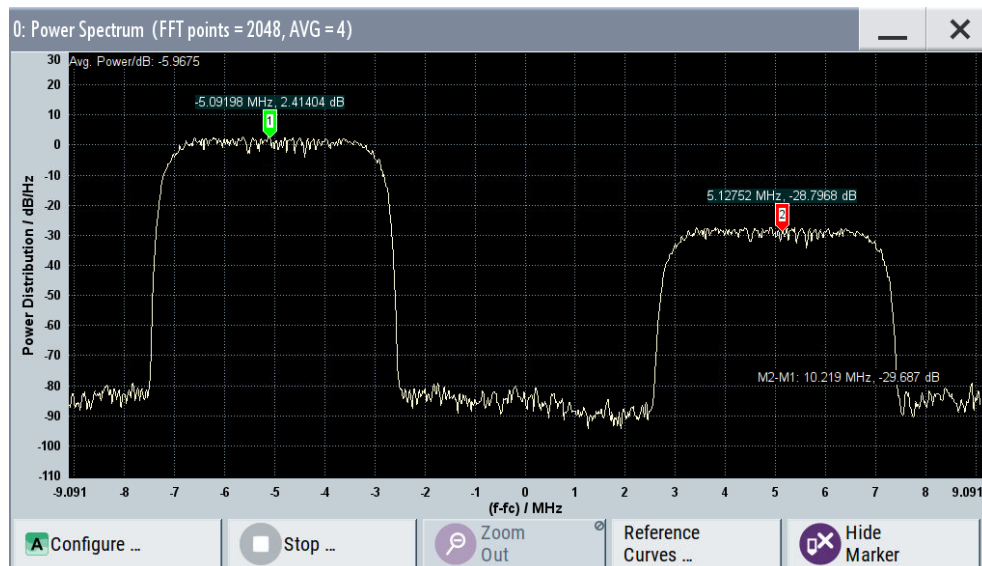


The "Power Spectrum" displays two signals, both 3GPP FDD signals are frequency shifted and the right one is also attenuated.

- To retrieve more information, zoom in the spectrum and select "Show Marker" to measure the distance between the two signals.
In principle, the zoom in function works like the two-finger pinching for magnifying images on your cell phone.

- In the "Power Spectrum" dialog, select "Configure" to return to the "Graphics Configuration" dialog.
Close the "Graphics Configuration" dialog.

This action has no effect on the configured graphics but on the dialog itself.

The block diagram displays the current signal routing. It indicates that frequency and power offsets are enabled and displays the acquisition points for the real-time diagrams minimized in the "Taskbar".

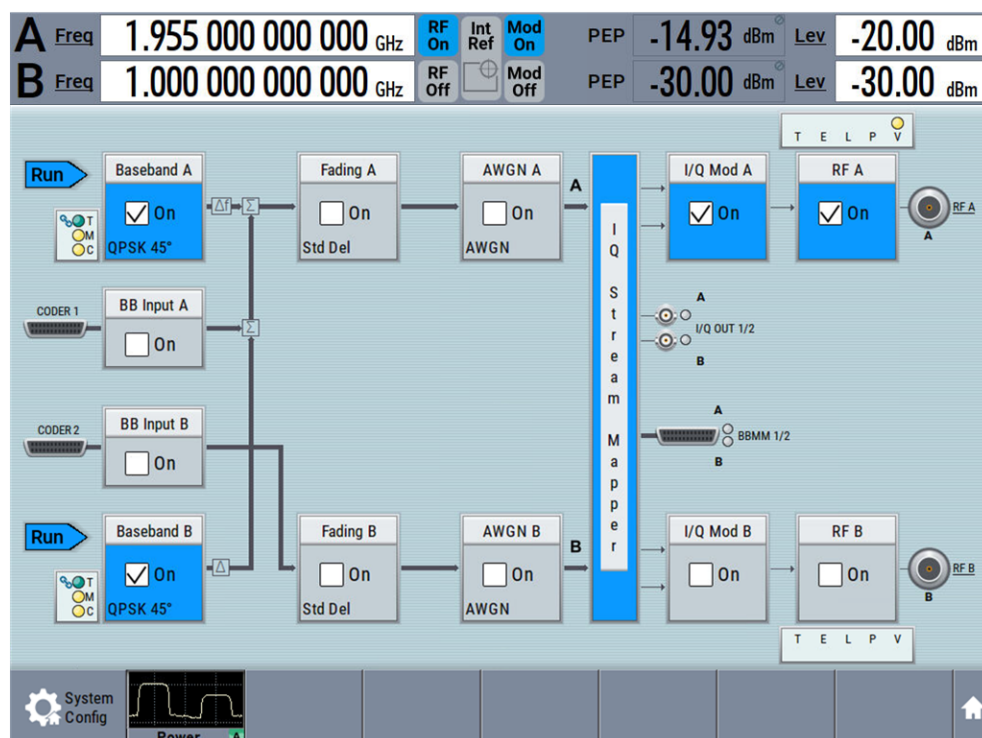

See also [Chapter 9, "Monitoring signal characteristics"](#), on page 627.


3.3.7 Saving and recalling settings

To restore the results of our measurements later, we saved the instrument settings to a file.

To save instrument settings to a file

We assume, a test configuration as described in [Chapter 3.3.5, "Routing a baseband signal to the outputs"](#), on page 66.

- Press the [SAVE/RCL] key on the front panel.
- In the "Save/Recall" dialog box, select "Operation Mode > Save".
Tap the "Filename", use the on-screen keyboard, and enter *MyTestSignal*.

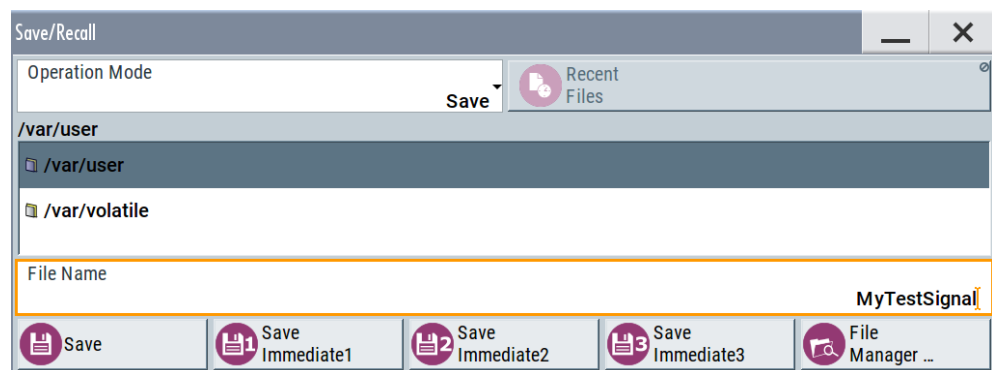


3. Tap the "Save" button.

The file `MyTestSignal.savrc1.txt` is saved in the default directory `/var/user`.

To load saved instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the [PRESET] button to restore the default instrument settings so you can check that the saved user settings are restored afterwards.
2. Press the [SAVE/RCL] key.
3. In the "Save/Recall" dialog, select "Recall" operation.
4. Navigate to the directory, in which you saved the file `MyTestSignal` and select it.

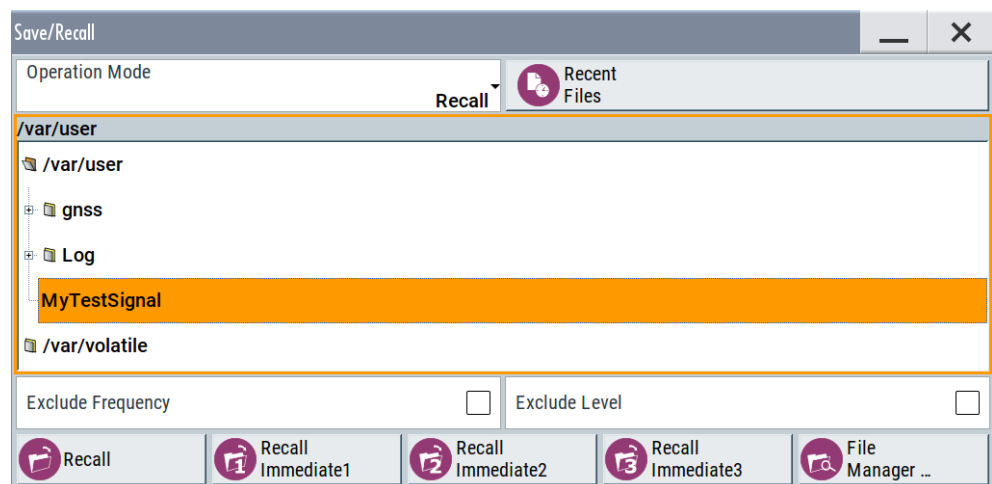

5. Tap the "Recall" button.

All instrument settings are restored and the display resembles [Figure 3-16](#), which shows the instrument display right before the settings were saved.




How to display variations from preset values


When you load a file to your instrument, you may do not have enough information on the changed settings. In such case, it is useful to visualize all parameters that have been changed from their default state.

Try out the following:

- Tap and hold on an empty space in the block diagram to access the context-sensitive menu.
- Select "Mark all parameters changed from preset".

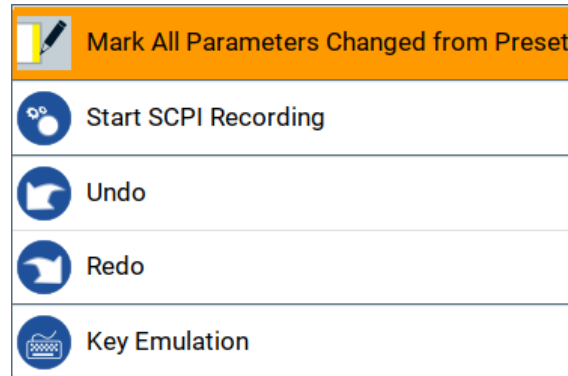

- All changed parameters are highlighted.

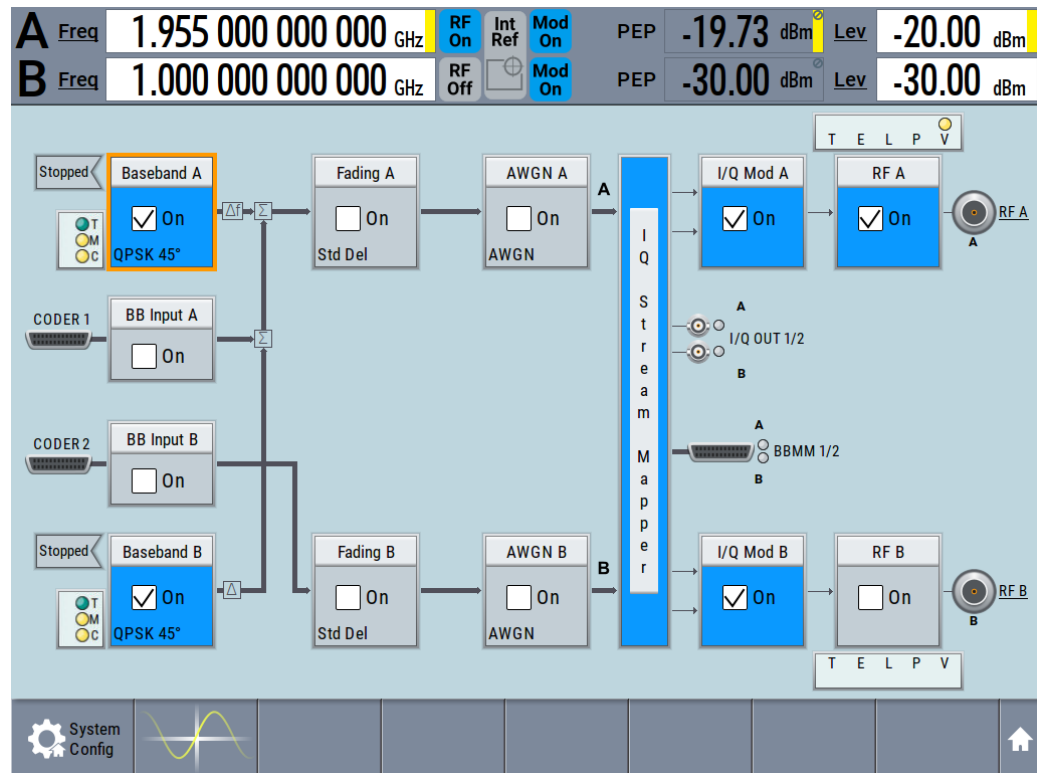

See also [Chapter 11, "File and data management"](#), on page 699.

3.3.8 Generating an EUTRA/LTE signal

The main application field of the R&S SMW is the generation of digital signals in accordance with several telecommunication and wireless standards, like WCDMA, EUTRA/LTE or WLAN, to name a few. This example uses the digital standard

EUTRA/LTE to introduce the way you can access and interact with the instrument and experience the advantages provided by the additional options.

The minimum requirement for R&S SMW in this example is a base unit equipped with the additional option R&S SMW-K55 EUTRA/LTE.


To generate a downlink test signal

The main focus of the following example is not on the R&S SMW capabilities and the features provided by the firmware option. The example aims rather to help you get familiar with the settings and configuration principle common for the digital standards.

We use one of the provided EUTRA test models (E-TM) to show how to generate a test signal upon a quick selection.

1. On the R&S SMW front panel, press the [PRESET] key to start out in a defined instrument configuration.
2. In the block diagram, select "Baseband > Beyond 3G Standards > EUTRA/LTE".

The EUTRA/LTE dialog appears and displays the general settings provided for the digital standard.

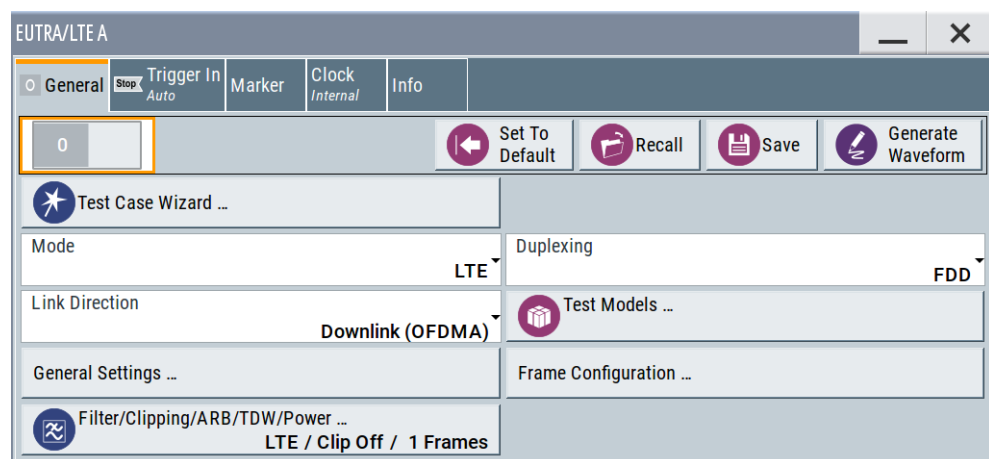


As in the user interfaces of all digital standards, the "EUTRA/LTE" dialog is divided into several tabs. The "General" tab comprises the primary settings of the standard, the functions for storing and recalling settings and provides access to further functions and dialogs, like the "Filter" settings. The "Trigger In", "Marker" and "Clock" tabs comprise the settings related to the corresponding function.

The more complex the digital standard itself is, the more comprehensive the further dialog and tab structure. The start dialog of each digital standard, however, follows a repeating dialog structure that comprises the tabs "General", "Trigger In", "Marker" and "Clock". (See also [Chapter 3.5.3.4, "Additional display characteristics"](#), on page 97).

Tip: To display the dialog in its maximal height, press the [RESIZE WINDOW] key on the front panel.

3. In the "EUTRA/LTE General" tab, select "Test Models".

The test models conform with various EUTRA test models (E-TM). A standard "File Select" function enables you to select from files with predefined settings.

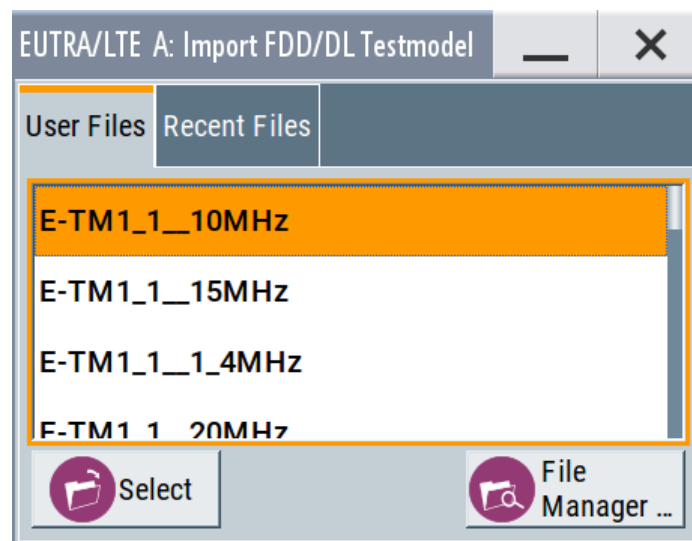


Tip: On the front panel, press the [HELP] key to retrieve detailed information on the current settings and on the contents of the predefined files.

4. Navigate to a file, for example to the E-TM1_1_10MHz (an E-TM1.1 test model with 10 MHz channel bandwidth) and confirm with "Select".

The dialog closes automatically and the user interface confirms the name of the selected file.


5. In the "EUTRA/LTE > General" tab, select "State > On".

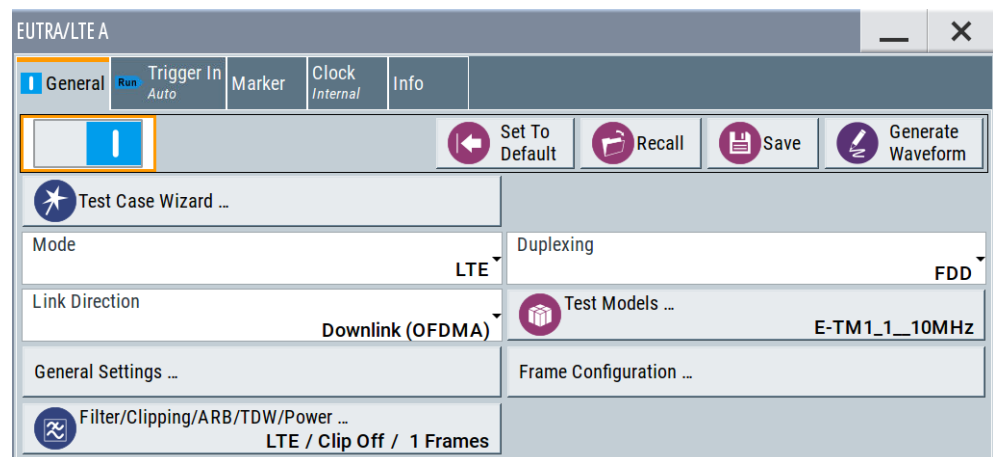

Close the dialog.

6. On the "Status Bar", tap the "Freq" and "Lev" fields and enter new values, for example 2.143 GHz and -20 dBm.

Select "RF A > On".

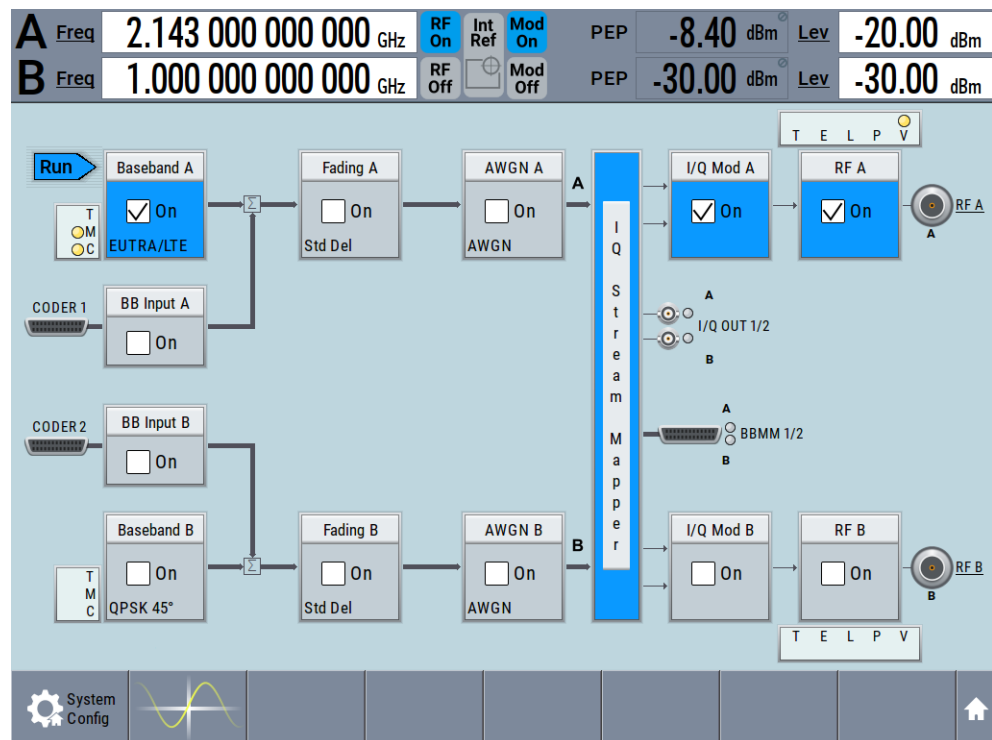

The instrument generates an EUTRA/LTE test signal with the selected channel bandwidth, frequency, and level.



With these first steps, you have gained an impression of the provided functionality.

For a comprehensive description of the full range of capabilities, refer to the user manual "EUTRA/LTE digital standard for R&S SMW".

3.3.9 Enabling MIMO configuration

The R&S SMW supports versatile MIMO configurations and provides comfortable functions to simplify the definition and signal routing for MIMO test setups and configuration involving several instruments. For complex routing scenarios, the "System Configuration" functionality is the start and central configuration point. Within one dialog, you can configure complex configurations with up to 8 Tx or Rx antennas or up to two standalone 2x2 MIMO systems, e.g. 8x2 MIMO or LTE-A carrier aggregation with 2x2 MIMO.

This example does not cover the whole range of the "System Configuration" capabilities but delivers an insight into the topic. The example shows how to use coupled baseband sources and select a suitable fading and baseband configuration to generate an EUTRA/LTE signal in 2x2 MIMO configuration.



To learn more and to explore the whole range of capability provided by the "System Configuration" function, in particular how to connect and configure external devices, refer to [Chapter 4, "Signal routing and system configuration"](#), on page 108.

The instrument in this example is a R&S SMW equipped with two signal paths:

- 2 options standard baseband generator R&S SMW-B10 and one R&S SMW-B13T
- 2 options fading simulator R&S SMW-B14 and one option fading MIMO R&S SMW-K74
- Frequency options (e.g. R&S SMW-B1003/-B2003)
- 2 options R&S SMW-K55 EUTRA/LTE


To access the "System Configuration"

1. Perform one of the following:

a) On the "Taskbar", select "System Config > System Configuration"



b) In the block diagram, select "Fading > MIMO > System Configuration"

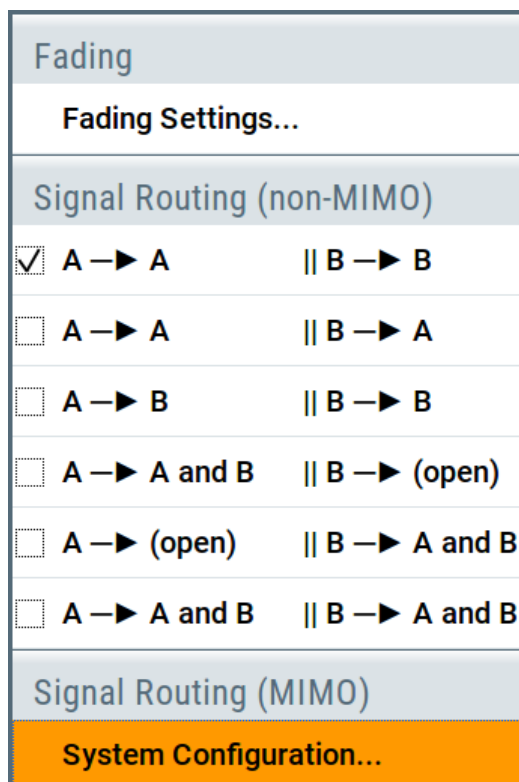

c) In the block diagram, select "I/Q Stream Mapper" and select the "Fading/Baseband Configuration" tab.

The "System Configuration > Fading/Baseband Configuration" dialog displays the current signal routing. The instrument works in the default "Standard" mode.

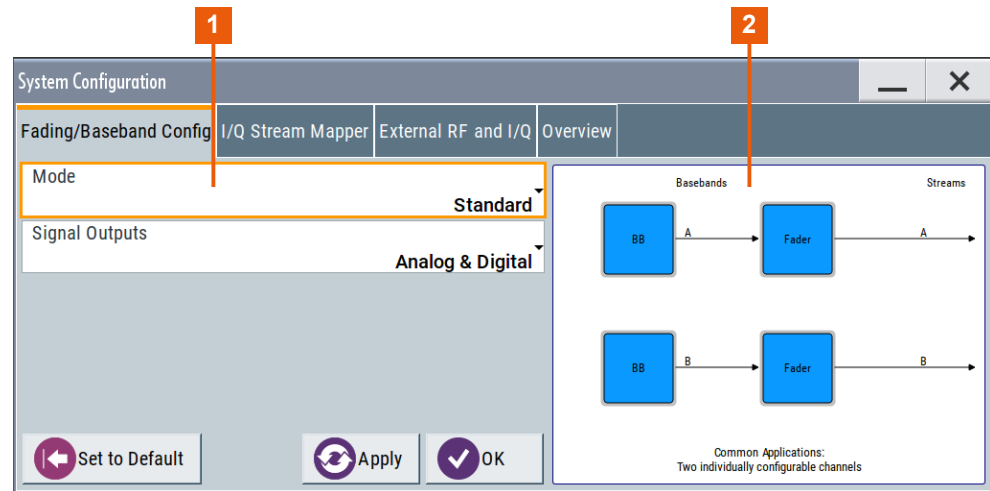


Figure 3-17: System Configuration in the default Standard Mode

- 1 = Standard or advanced mode; the last is required for configuration of complex LxMxN MIMO scenarios
- 2 = Simplified preview diagram with a description of the common application for the particular configuration

- Open "System Configuration > I/Q Stream Mapper" to obtain an overview of the current distribution and mapping of the I/Q streams to the output connectors, see also ["To map the I/Q stream and define the output connector"](#) on page 69.
- Open "System Configuration > External RF and I/Q Instruments" to gain information on the current setup.

The tab comprises the additional settings provided to simplify the configuration of connected instruments, like configuring the connectors, establishing a connection to the instruments, or controlling these instruments.

In this test setup, no further instruments are connected.

To enable a 2x2 MIMO configuration

- In the "System Configuration > Fading/Baseband Configuration" dialog, select "Mode > Advanced" and enable the following settings:
 - "Entities (Users, Cells) > 1", "Basebands (Tx Antennas) > 2", "Streams (Rx Antennas) > 2"
 - Select "BB Source Config > Coupled Sources"
 - Observe the signal routing displayed on the preview diagram. Does it match with the expected signal routing?
 - Select "Apply" to confirm the configuration.


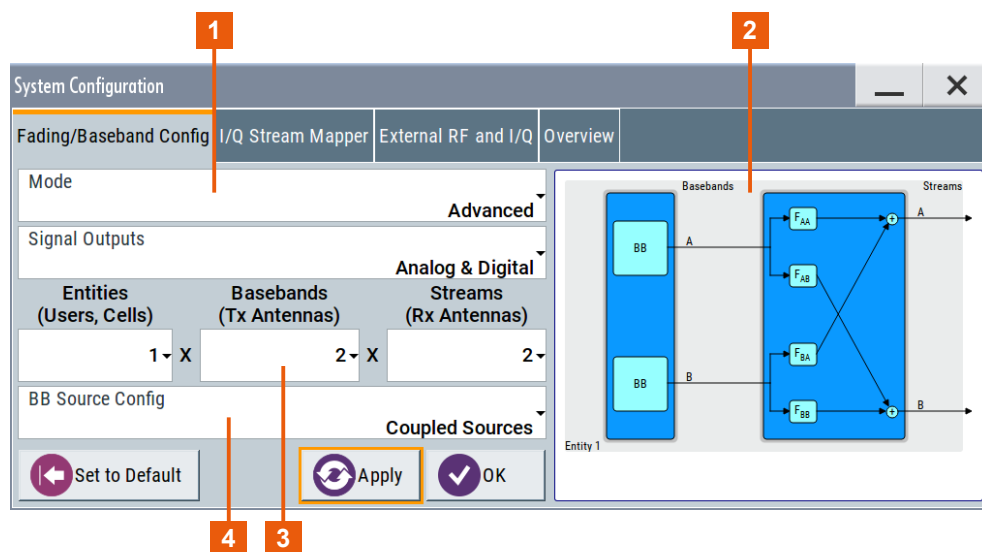


Figure 3-18: System Configuration in the Advanced Mode (1x2x2 configuration)

- 1 = Advanced mode, required for configuration of complex LxMxN MIMO scenarios
- 2 = Simplified preview diagram of the particular configuration
- 3 = Current signal routing; 2x2 MIMO configuration
- 4 = Separated and coupled baseband sources

2. Leave all further settings, i.e. the "I/Q Stream Mapper" settings, at their default values and close the "System Configuration" dialog.

The block diagram displays the selected configuration.

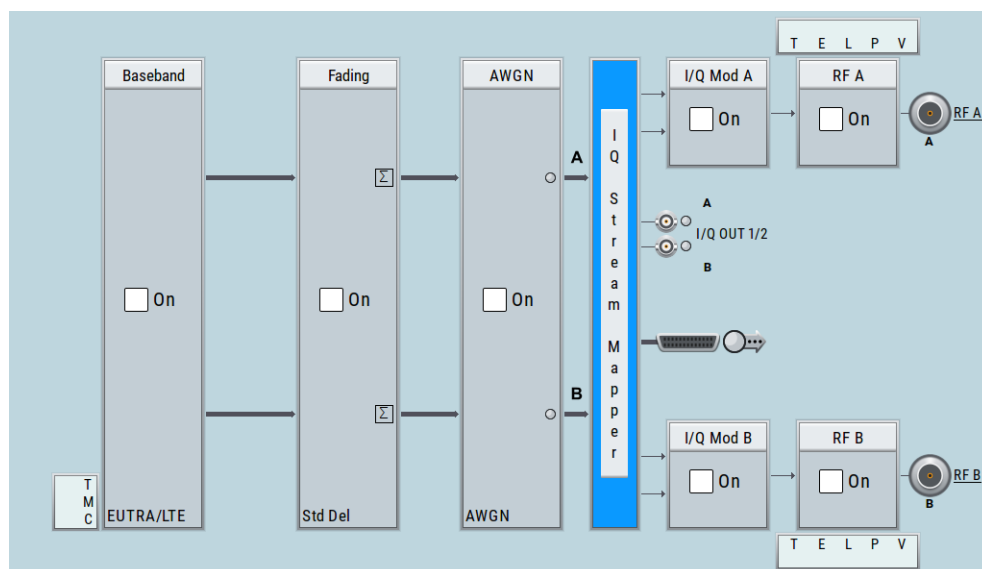


To generate a 2x2 MIMO EUTRA/LTE signal

1. In the block diagram, select "Baseband > EUTRA/LTE", select "State > On", and close the dialog.

In coupled baseband source mode, the R&S SMW takes over the baseband signal configuration. The instrument adjusts the settings in the basebands automatically, for example the mapping of the transmitting antennas to the basebands.

2. In the block diagram, select "Fading > On".
The default "Standard Delay" fading profile is applied.
3. On the "Status Bar", set the same frequency and level settings for both paths:
 - a) "A Freq = B Freq = 2.143 GHz"
 - b) "Lev (A) = Lev (B) = -20 dBm"
4. In the block diagram, select "RF A > On" and "RF B > On".

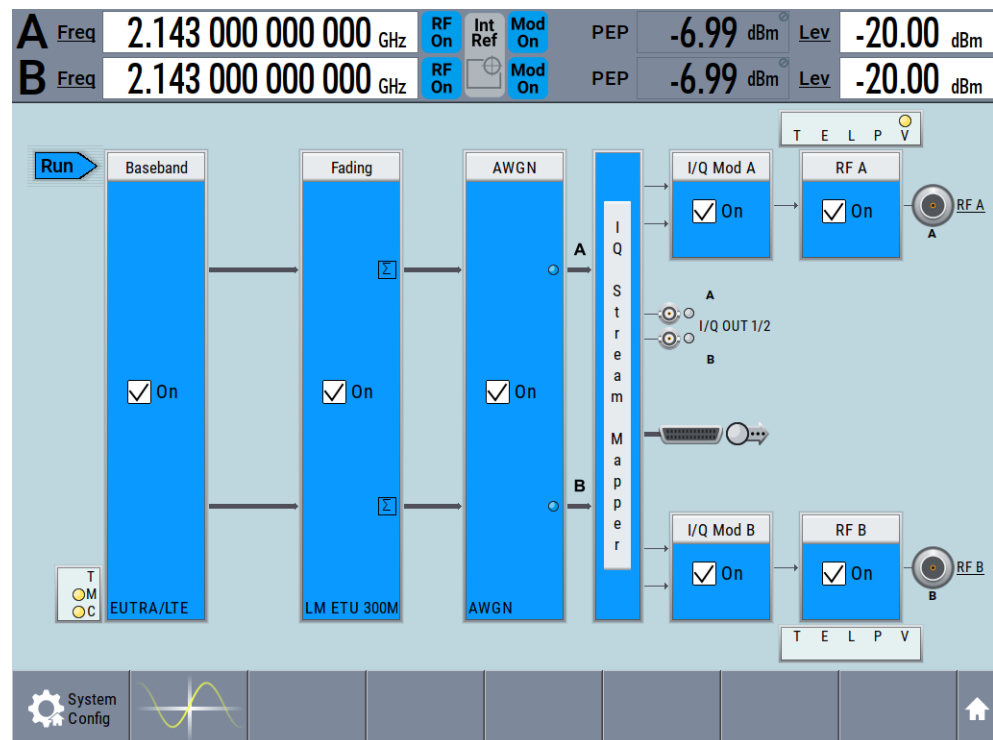

The R&S SMW generates a realistic EUTRA/LTE downlink signal with 10 MHz channel bandwidth, though without any scheduled data.



To enable the generation of scheduled data, further configurations are required; these configurations are, however, outside the scope of this description.

For further information, refer to the user manual "EUTRA/LTE Digital Standard for R&S SMW".

3.4 System overview

This section helps you to get familiar with the R&S SMW. It provides an introduction to the general concept of the instrument with a sample of the possible application fields. This section also introduces the main blocks in the signal generation flow.

For information on how to access functions and interact with the R&S SMW, refer to [Chapter 3.5, "Instrument control"](#), on page 91.

3.4.1 Brief introduction to the instrument's concept


The R&S SMW combines up to two independent signal generators in one instrument and offers unrivaled RF and baseband characteristics. Due to its *modular design*, the instrument can be optimally adapted to the requirements of different applications. Both RF paths can be equipped with one of the available frequency options with different upper frequency limit. The baseband section of the R&S SMW is fully digital. It contains the hardware for generating and processing I/Q signals in realtime or generating signals with an arbitrary waveform generator.

3.4.1.1 Signal flow at a glance

The R&S SMW is equipped with a large touchscreen, that displays a block diagram. The block diagram represents the signal flow and the general stages the signal generation goes through. Depending on the options the R&S SMW is equipped with, the appearance of the block diagram changes.

The following examples do not cover all possible cases but aim to introduce the way the block diagram depicts the installed options.

- An example of a base unit, equipped with one signal path (R&S SMW-B10, R&S SMW-B13, and R&S SMW-B1003)

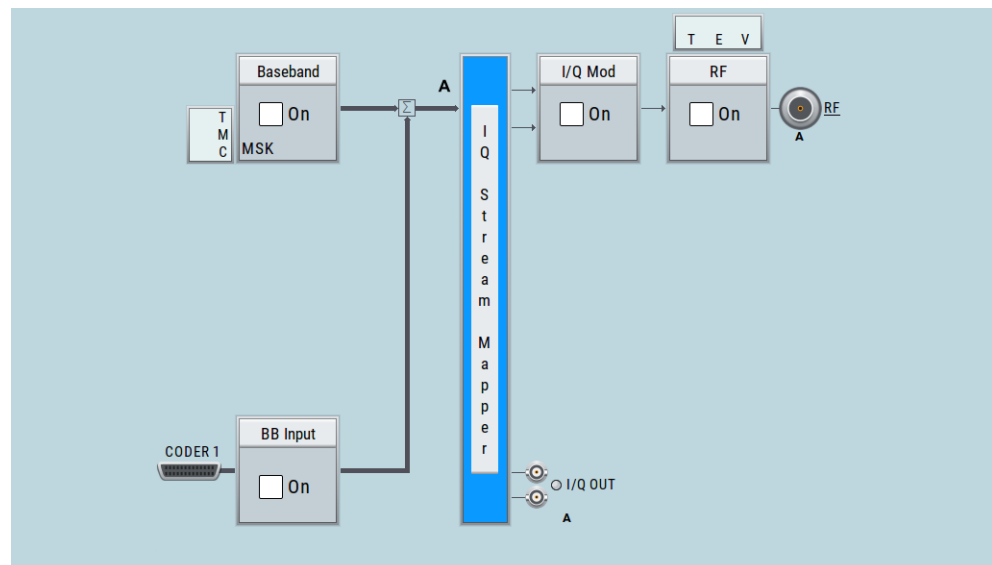

- Two examples of a **fully equipped (standard baseband) instrument**.

The first one shows the default instrument state and the second one - an advanced configuration with more abstract representation.

- In this "classic" representation, the block diagram displays all blocks for that the required hardware and software options are fitted. The block diagram shows the signal flow as it is.

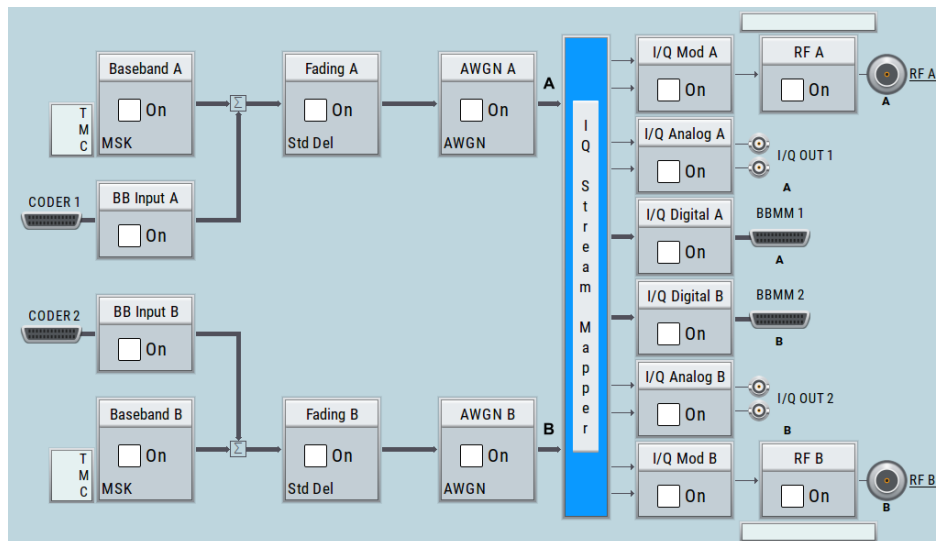


Figure 3-19: Block diagram of a fully equipped two path instrument (default)

- The block diagram depicting a 4x4 MIMO scenario with coupled baseband sources is a more abstract representation. Each stage of the signal generation is still represented by a functional block but the signal routing is displayed in a conceptual manner.

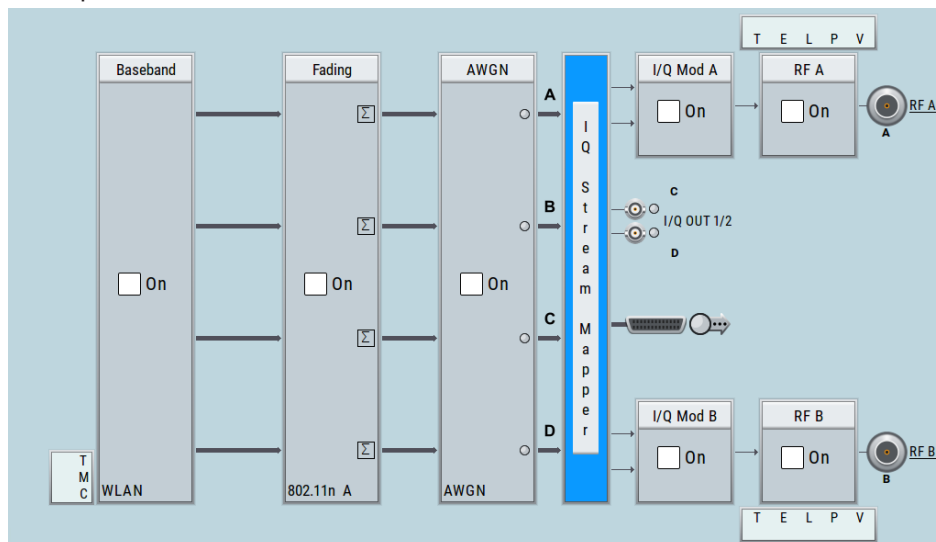


Figure 3-20: Block diagram of a fully equipped two path instrument (4x4 MIMO configuration)

For more examples, see also [Chapter 3.4.2, "Applications examples of the R&S SMW"](#), on page 88.

The cross-reference between the installed options and the displayed settings

The [Table 3-15](#) is an excerpt of the available options and lists only the options required to *display* a functional block in the block diagram. The information assumes R&S SMW equipped with standard baseband generator R&S SMW-B10 and R&S SMW-B13T.

For exact information on the available options, and on the minimum requirements and the interdependencies between the provided options, refer to the R&S SMW data sheet.

Table 3-15: Required options per functional block (excerpt)

Functional block	Required option
"Baseband A"	R&S SMW-B10
"Baseband B"	Second option R&S SMW-B10
"BB Input A"	Included in R&S SMW-B10
"BB Input B"	Included in second option R&S SMW-B10
"Fading A"	R&S SMW-B14
"Fading B"	Second option R&S SMW-B14
"AWGN A"/"AWGN B"	At least one option R&S SMW-K62
"I/Q Stream Mapper"	-
"I/Q Mod A"	e.g., R&S SMW-B1003
"I/Q Mod B"	e.g., R&S SMW-B2003
"I/Q Analog A"	R&S SMW-B13
"I/Q Analog B"	R&S SMW-B13T
"I/Q Digital A"	R&S SMW-K18
"I/Q Digital B"	Second option R&S SMW-K18
"RF A"	e.g., R&S SMW-B1003
"RF B"	e.g., R&S SMW-B2003

3.4.1.2 Internal baseband source ("Baseband" blocks)

The "Baseband" block represents the source of the baseband signals (basebands).

This functional block is the access point to:

- *The internal baseband generator*
The baseband generator contains modules for real time signal generation (custom digital modulation) and an arbitrary waveform generator (ARB).
One or two baseband generators can be fitted in an R&S SMW and operated separately.
- *The available digital standards*
Generation of digital signals in accordance with the supported standards requires additional software options. For example, option R&S SMW-K55 generates signals according to the EUTRA/LTE standard.

- *The signal routing (in the standard "classic" mode of a standard baseband generator)*
Signals from the baseband generators can be routed between the available paths, and added (possibly with frequency, phase and power offsets).

3.4.1.3 Digital baseband input and output ("BB input", "I/Q digital" blocks)

The "BB Input" and the "I/Q Digital" blocks are the access point to the settings of the digital interfaces.

The R&S SMW is - depending on SW and HW options - able to receive digital baseband signals and to output digital baseband signals. A fully equipped standard baseband instrument provides eight configurable digital interfaces. Depending on the configuration, the available digital interfaces may be used as up to six inputs or up to six outputs.

The digital baseband inputs and outputs can be used together with other Rohde&Schwarz instruments, like signal generators, signal analyzers, the digital interface module R&S®IQW, or the R&S®CMW500 Radio Communication Tester. A Rohde&Schwarz signal generator for instance may serve as digital signal source in test configuration requiring more than two baseband sources. A test setup with the R&S®CMW500 Radio Communication Tester is suitable for testing under fading conditions.

The "BB Input" block is the access point to the settings of:

- *The external digital I/Q signals*
The external digital I/Q signals are further processed in the baseband section (e.g. fading, addition of noise)
- *The signal routing (in the standard "classic" mode)*
The external and internal baseband signals can be routed and added (possibly with frequency, phase and power offsets).

The "I/Q Digital" block is the access point to the settings of:

- The digital I/Q output signals
- The digital I/Q impairments

3.4.1.4 Fading simulator ("Fading" blocks)

The "Fading" block is displayed only in instruments equipped with the option R&S SMW-B14/-B15, fading simulator. This block controls the fading module and, in standard mode, the signal routing at the output of this module.

The fading simulator functionality enables you to simulate real time fading effects on the baseband signal. Provided the instrument is equipped with the required options, up to 20 dynamic fading paths in a SISO mode (single input single output) and up to 20 paths per MIMO channel in MIMO mode can be created simultaneously. Fading extension options provide even more functionality.

3.4.1.5 Additional white gaussian noise ("AWGN" blocks)

The "AWGN" block is displayed only in instruments equipped with at least one option R&S SMW-K62. This block controls the additional white Gaussian noise generator (AWGN). An additive white noise is required for measurements of mobile radio base stations.

3.4.1.6 "I/Q stream mapper" block

As one of the access points to the system configuration settings, the "I/Q Stream Mapper" provides direct access for configuring the distribution and mapping of the generated I/Q streams to the available output connectors, to the analog RF and I/Q output and to the digital I/Q output connectors.

3.4.1.7 I/Q modulator ("I/Q mod" blocks)

The "I/Q Mod" blocks represent the I/Q modulators.

These functional blocks are the access point to:

- The I/Q modulation of the internal baseband signal
- The I/Q modulation of an external analog wideband signal (single ended or differential)
- The analog I/Q impairments

3.4.1.8 Analog I/Q output ("I/Q analog" blocks)

The "I/Q Output" block represents the analog I/Q output connectors.

This block is the access point to the settings of:

- The analog I/Q output signals
The generated signal can be output as single ended or differential analog signal.
- The analog I/Q impairments

3.4.1.9 RF and analog modulations ("RF" blocks)

The "RF" block represents the RF settings of the instrument.

This block is the access point to:

- RF frequency and level settings, the reference frequency, local oscillator, user correction, etc.
- The analog modulations
- The list and sweep modes

3.4.2 Applications examples of the R&S SMW


Due to its modular design, the R&S SMW can be optimally adapted to the requirements of different applications:

- Generation of digitally modulated signal
The main field of application of the R&S SMW is the generation of digitally modulated signals. The R&S SMW generates a digitally modulated signal in several ways: using the internal baseband generator, using the externally applied digital baseband signals or in an analog wideband I/Q operation.
- Generation of test signals for diversity tests and MIMO scenarios
The R&S SMW enables you to generate test signals in versatile MIMO configuration for which several signal generators were previously required.
- Generation of a wanted signal and an interfering signal for receiver tests
- Addition of real-time signals of different standards, for example EUTRA/LTE and 3GPP FDD
- Generation of signals with up to 2 GHz signal bandwidth, for example for WLAN IEEE 802.11ad signals
- Generation of fading scenarios, e.g for test setups involving R&S SMW and R&S®CMW

A few examples are given in the following.


3.4.2.1 Transmit diversity test (MISO scenario)

The block diagram in this example depicts the generation of a test signal using both internal baseband generators and 1 RF output (RF A).

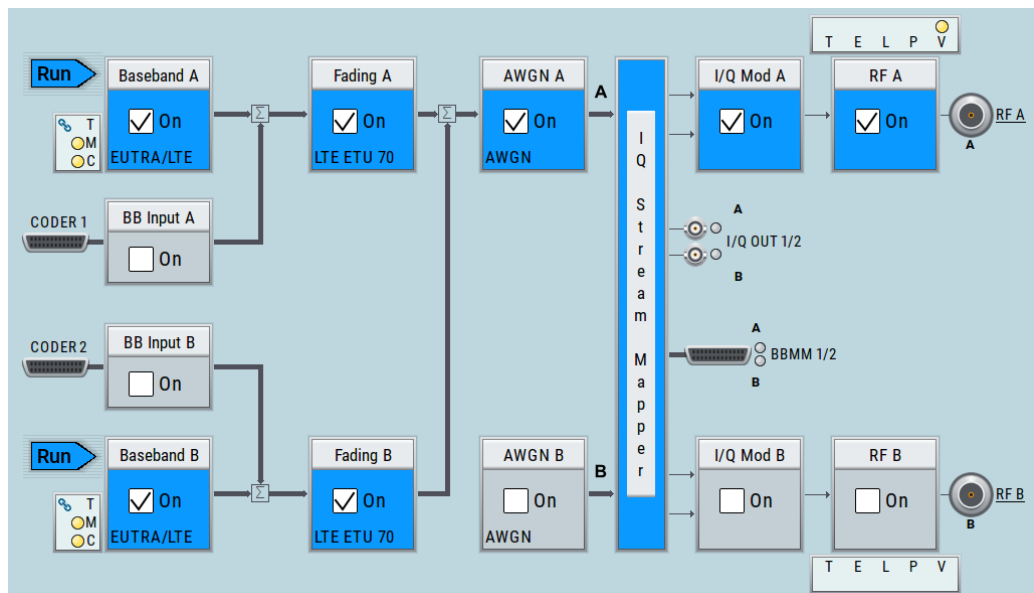


3.4.2.2 Receive diversity test (SIMO scenario)

The block diagram in this example depicts the generation of a test signal using one internal baseband generator ("Baseband A") and distributing the signal to both RF outputs.

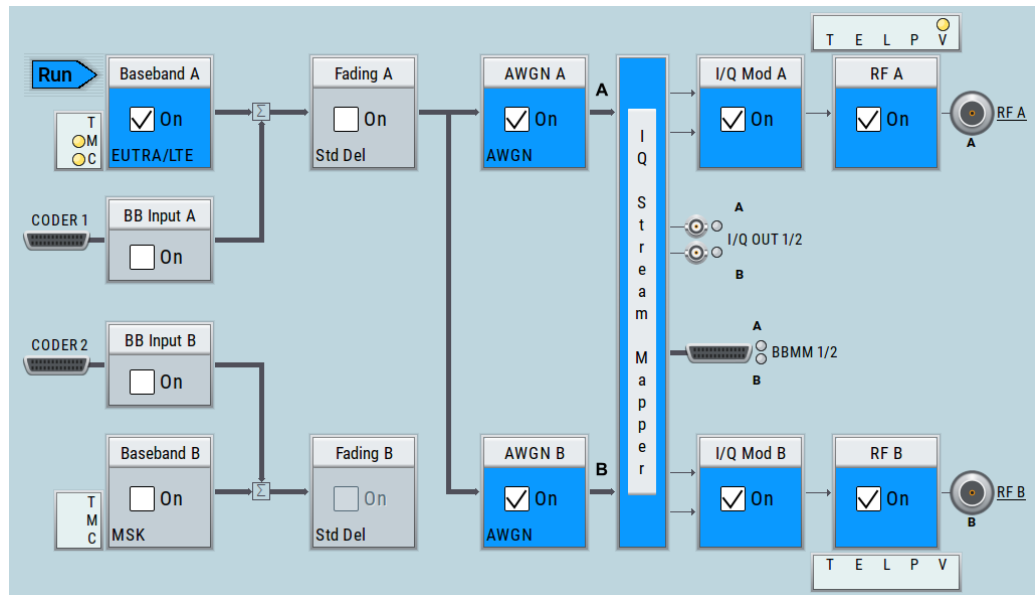


3.4.2.3 Generation of signals for testing of WCDMA handover (Two cells)

The block diagram in this example depicts the generation of a test signal using both internal baseband generators and both RF outputs, for example for handover tests. The R&S SMW acts as two independent generators in one instrument.

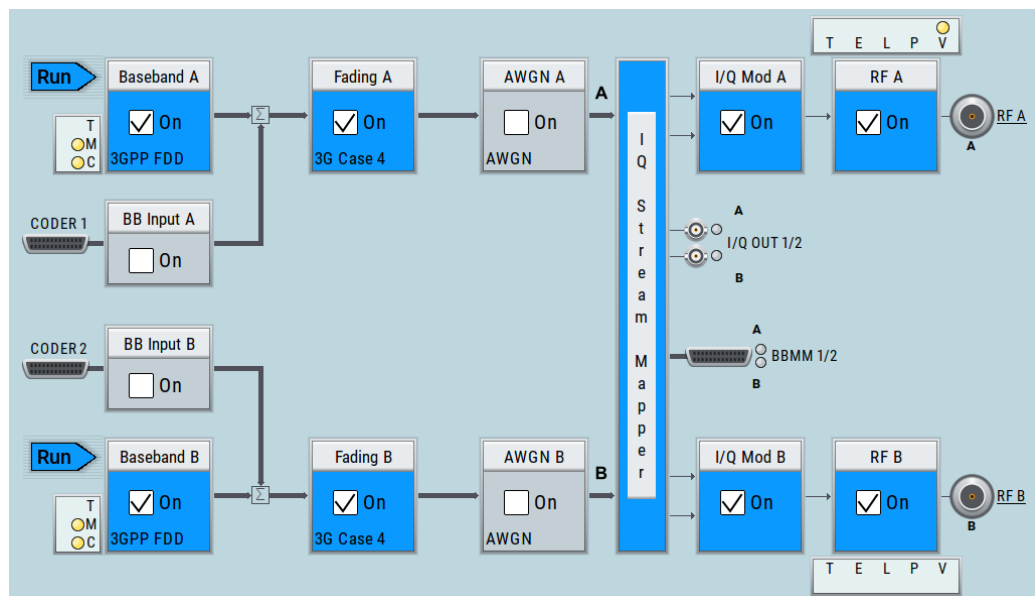


3.4.2.4 Generation of an EUTRA/LTE 8x2 MIMO signal for UE tests

The block diagram in this example depicts the generation of an EUTRA/LTE test signal in a 8x2 MIMO scenario, for example for UE tests. The instrument uses a coupled internal baseband source to generate all required baseband signals.

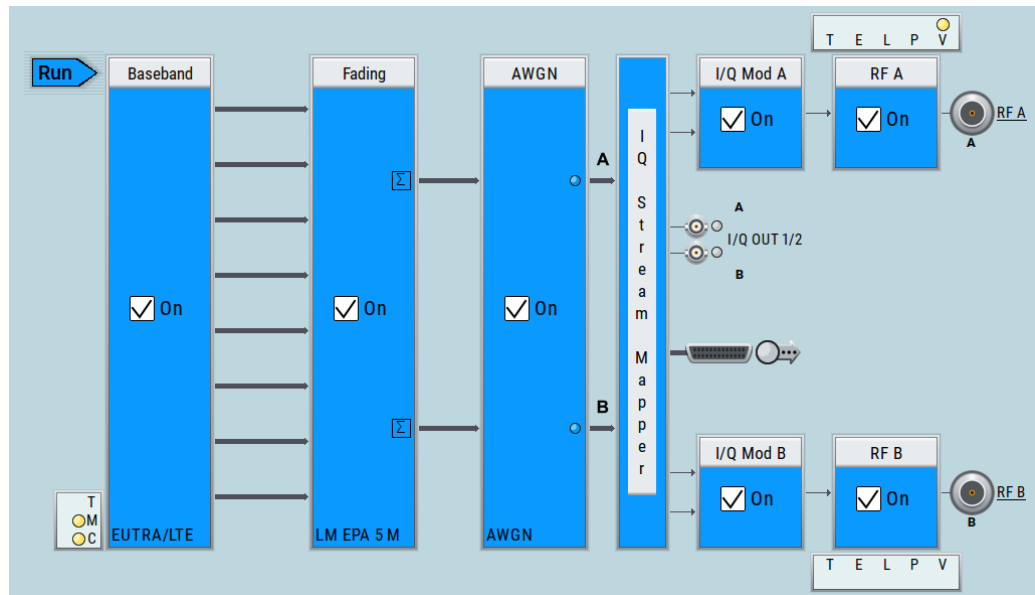


3.4.2.5 Generation of an LTE test signal with carrier aggregation and 2x2 MIMO each component carrier

The block diagram in this example depicts the generation of an EUTRA/LTE test signal with two component carriers (intra-band carrier aggregation) and 2x2 MIMO fading each, for example for UE tests. The instrument uses a coupled internal baseband source and both RF outputs.

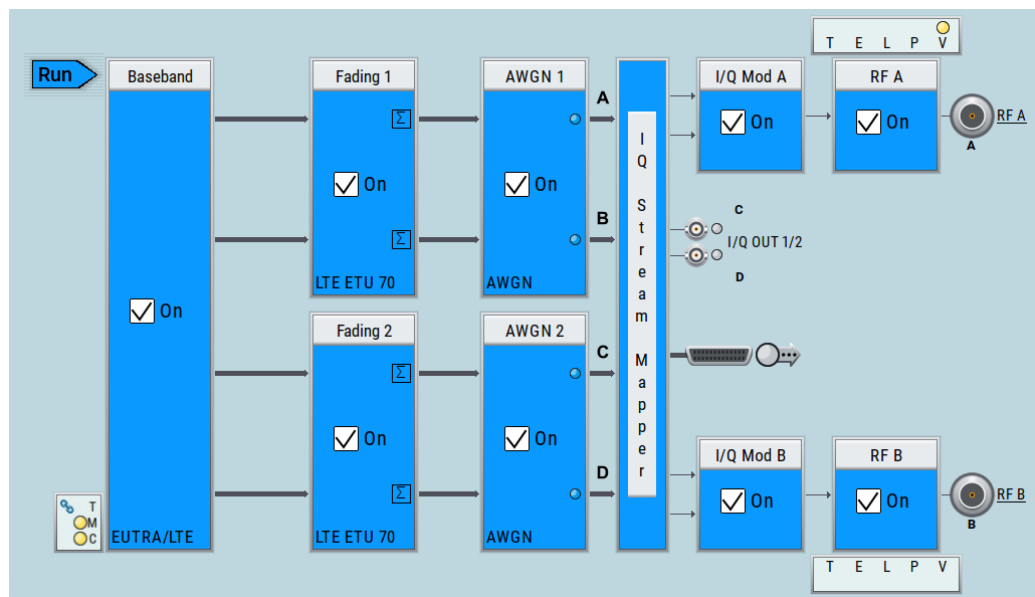

3.4.2.6 Generation of a WLAN 802.11ad signal with 1.76 GHz bandwidth

The block diagram in this example depicts the generation of a WLAN 802.11ad test signal with 1.76 GHz bandwidth. The instrument uses one internal wideband baseband generator with 2 GHz bandwidth and one RF output.

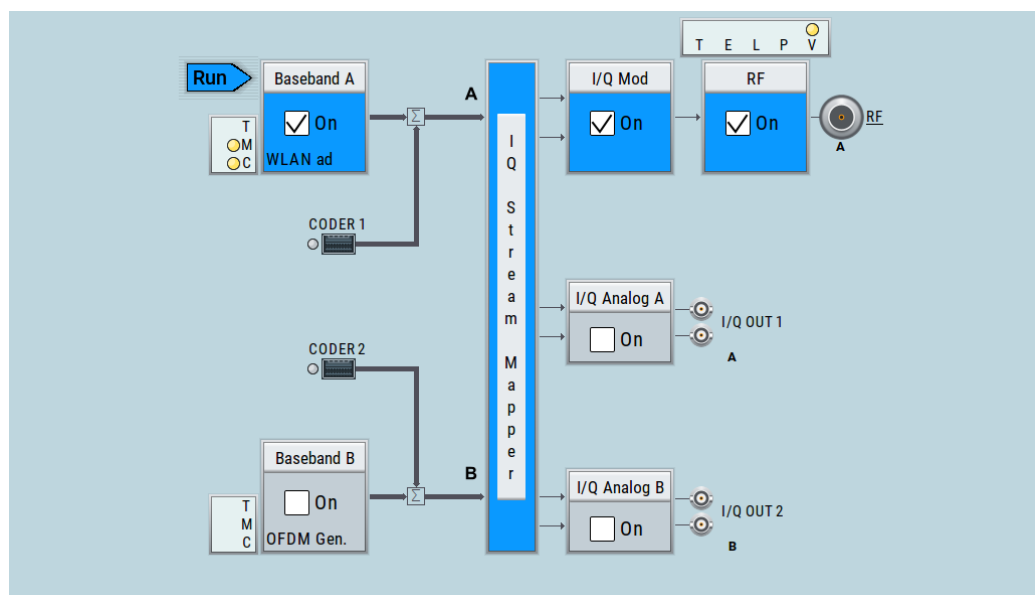

3.5 Instrument control

This chapter provides an overview on how to work with the R&S SMW.

It covers the following topics:

• Possible ways to operate the instrument.....	92
• Means of manual interaction.....	92
• Understanding the display information.....	93
• Accessing the functionality.....	99
• Entering data.....	100
• Getting information and help.....	102
• Remote control.....	107
• Remote operation over VNC.....	107

3.5.1 Possible ways to operate the instrument

There are three ways to operate the R&S SMW:

- **Manual operation:**
Use the touchscreen, hard keys and rotary knob, or an optional mouse and/or keyboard.
- **Remote control:**
Create programs to automatize repeating settings, tests and measurements. The instrument is connected to a computer running the program.
This way of operation is described in [Chapter 13, "Network operation and remote control"](#), on page 819.
- **Remote operation from a computer:**
Remote monitoring and control of the instrument from a connected computer is based on the common cross-platform technology VNC (Virtual Network Computing). On the remote computer, any standard web browser (supporting Java) or a dedicated VNC client (like Ultr@VNC) can be used. See also [Chapter 3.5.8, "Remote operation over VNC"](#), on page 107.

The following sections show how to operate the instrument manually.

3.5.2 Means of manual interaction

For the manual interaction with the R&S SMW, you have several methods that you can use as an alternative to perform a task:

- **Touchscreen:**
Touchscreen operation is the most direct way to interact. Almost all control elements and actions on the screen are based on the standard operating system concept. You can tap any user interface element to set parameters in dialog boxes, enter data, scroll within a dialog etc., as if you work with a mouse pointer.
Tapping the screen works like clicking mouse buttons:
 - Touch quickly = click: Selects a parameter or provokes an action.
 - Touch and hold = right-click: Opens a context-sensitive menu.
 - Touch and drag = drag&drop:
 - Moves a window (dialog or graphic) by dragging it to a new position on the screen, or
 - Routes a signal by selecting a block and dragging to the destination block, or

Resizes a window (dialog or graphic) by dragging an edge or a corner of a window to the destination size

- Touch and swipe = drag: Scrolls through the contents of a display element larger than the screen, e.g. a list or a table.
- Spread or pinch two fingers = zoom out, zoom in:
Increases or decreases the size of an area in a graphical display as it works on your cell phone
- Function keys and rotary knob:
The front panel provides nearly all functions and controls to operate the instrument in the classic way, without touchscreen.
- Optional mouse and/or keyboard:
These devices work like known from PCs. The navigation keys on the front panel correspond to the keys on the keyboard.

This manual describes the manual interaction with the instrument via the touchscreen. It mentions the alternative methods using the keys on the instrument or the on-screen keypads if it deviates from the standard operating procedures. The usage of the touchscreen and navigation keys is described in [Chapter 3.5.4, "Accessing the functionality"](#), on page 99.

Throughout the manual, the term "select" refers to any of the following methods:

- Using a finger on the touchscreen
- Using a mouse pointer in the display
- Using a key on the instrument or on a keyboard

3.5.3 Understanding the display information

The block diagram of the R&S SMW displays all main settings and generator states, divided into main operation areas.

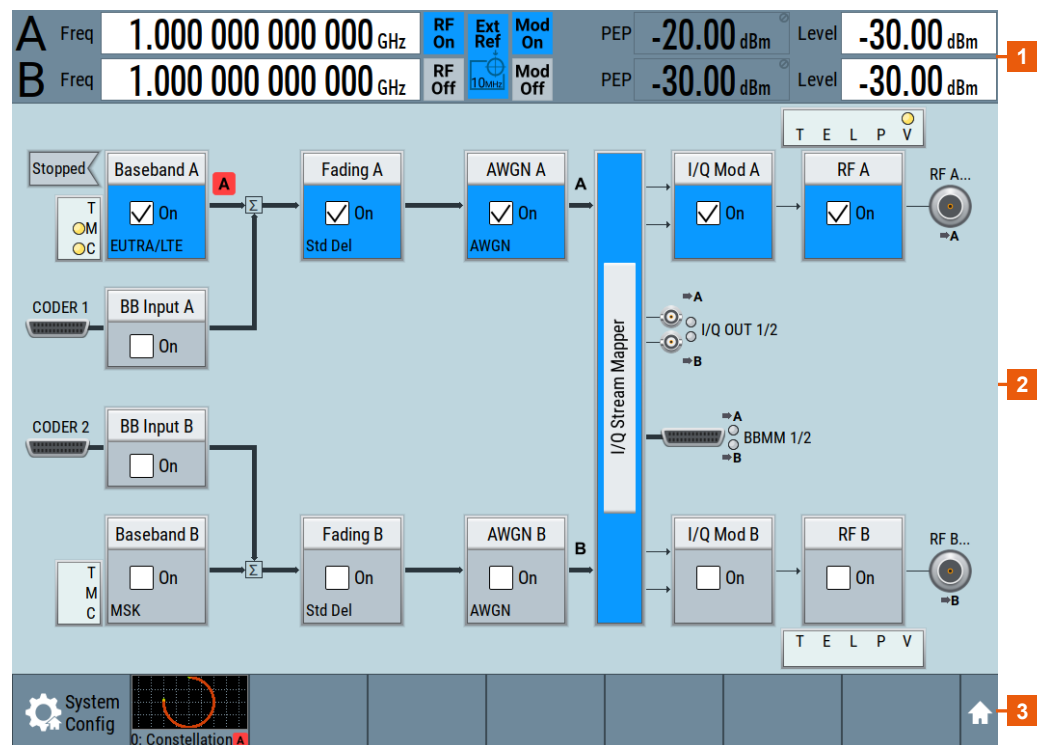



Figure 3-21: Block diagram

- 1 = Status bar
 2 = Block diagram
 3 = Taskbar/softkey bar

• Status bar.....	94
• Block diagram.....	95
• Taskbar.....	96
• Additional display characteristics.....	97

3.5.3.1 Status bar

The status bar at the top of the screen indicates the RF frequency and the level of the output signal provided to the DUT. You can set both parameters directly here.

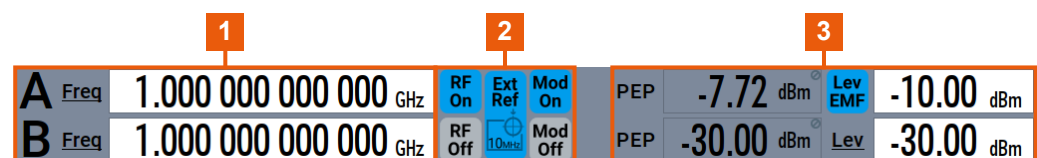

- 1 = Frequency display
 2 = Status buttons
 3 = Level display


The status buttons indicate key parameters that are set for the output signal. Most of the status buttons are virtual keys that you can use to open a corresponding menu or dialog.

For an overview of the status buttons and their functionality, see [Chapter C, "Elements and controls of the graphical user interface"](#), on page 1396.

3.5.3.2 Block diagram

The block diagram shows the current configuration and the signal flow in the generator with the aid of function blocks, connected by signal lines.

The following figure displays almost all the elements that can appear in the block diagram. However, it does not necessarily represent a useful configuration.

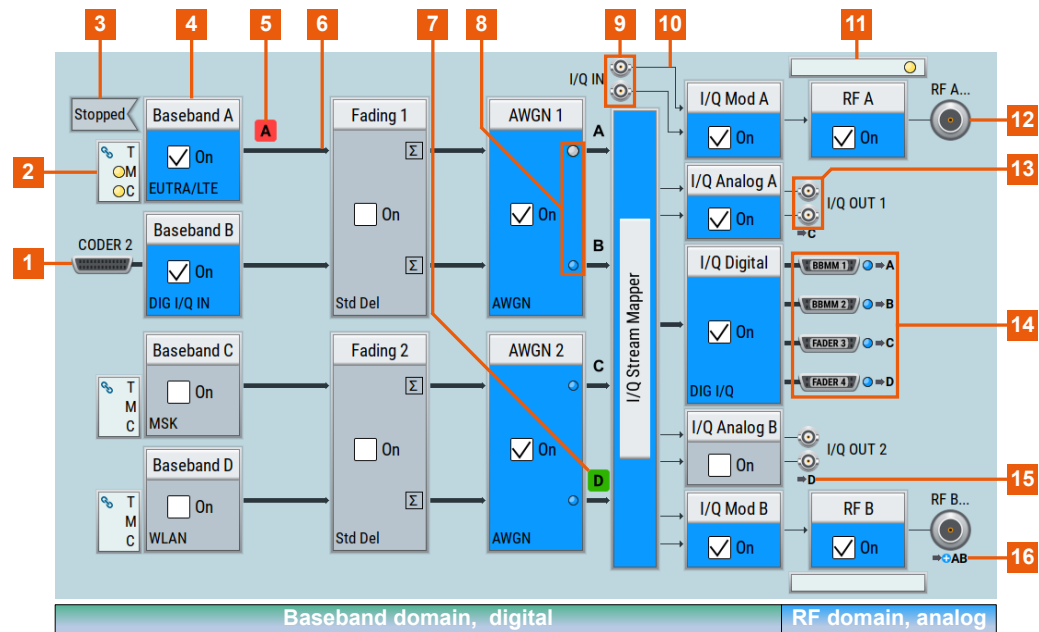

- 1, 9, 12, 13, 14 = Connector icons (RF, analog, digital)
- 2, 11 = Control signal block
- 3 = Status indicator
- 4 = Functional block
- 5, 7 = Graphics indicator
- 6 = Signal line (digital)
- 8 = Stream status indicator (On/Off)
- 10 = Signal line (analog)
- 15, 16 = Stream indicator (Single, Add)

Starting from left up to the "I/Q Stream Mapper", you can see the functional blocks provided in the baseband domain. After the stream mapper, the analog section contains the digital to analog conversion and modulation to RF.

Legend	Item	Description
1 9 12 13 14	Connector icons	Represent the interfaces for signal input and output: <ul style="list-style-type: none"> Digital I/Q signal connector input (1) Analog I/Q signal connector input (9) RF signal connector output (12) Icons vary depending on the frequency. <ul style="list-style-type: none"> Analog I/Q signal connector output (13) Digital I/Q signal connector output (14)
2 11	Control signal block	Indicates information on the control signals like signal content, input or output and provides quick access to the corresponding configuration dialog. A dedicated control block is displayed to the left of a baseband block (2) and above/below the RF block (11).
3	Status indicator	Indicates whether the signal is running or waiting for a trigger.
4	Functional block	Represents a basic task in signal generation. The push button provides access to any number of associated actions to accomplish the task. "On/Off" (checkbox) and the block label quickly activates the basic task.
5 7	Graphics indicator	Denotes that the signal is displayed graphically: Baseband signal (5), stream signal (7)
6 10	Signal line <ul style="list-style-type: none"> digital analog 	Shows the currently configured signal flow: <ul style="list-style-type: none"> Thick lines represent the digital I/Q streams (6). Thin lines represent the analog signals (10).
8	Stream status indicators	Show the status of a stream (On/Off)
15 16	Stream indicators <ul style="list-style-type: none"> Single Add 	Indicates the output streams that are routed to the corresponding connectors, and the way the streams are internally processed: <ul style="list-style-type: none"> Single: One stream mapped on the connector (15). Add: Multiple streams are routed to a connector (16).

3.5.3.3 Taskbar

The "Taskbar" contains labeled softkeys and minimized views (thumbnails) of active graphics and dialogs.

Initially, it shows the permanently assigned softkeys. The softkey with the sine wave denotes that no signal is activated for graphical representation.

 


Figure 3-22: Taskbar in default state

Whenever you open a settings or graphics dialog, it is automatically assigned to the "Taskbar". The softkeys shown in the following figure represent the variants.

 


Figure 3-23: Taskbar fully assigned

- 1 = System configuration
- 2 = Remote control connections
- 3 = R&S NRP power sensors
- 4 = Graphics
- 5 = Dialogs
- 6 = Diagram / more

1	System Config	Provides access to general system configurations like setup, display, or remote. The warning symbol signifies a permanent error message. It replaces the default symbol, as shown in Figure 3-22 .
2	Remote	Shows the established remote connections when the instrument is remotely controlled. Tip: An indicator in the status bar shows the current remote control status.
3	R&S NRP	Shows a connected external power sensor. If the sensor is active, the softkey background is blue.
4	Graphics	Shows that a signal is represented graphically.
5	Dialogs	Shows a dialog as a thumbnail, the dialog name, and the name of signal channel.
6	Diagram / more	The diagram icon as shown in Figure 3-22 minimizes all dialogs indicated on the screen. The block diagram is in the foreground. The "More" softkey indicates that more dialogs are open than can be displayed in the taskbar. Use this softkey to open a selection list with the remaining active dialogs, and the "Diagram" function.

 
3.5.3.4 Additional display characteristics

The following section provides a short insight on the indication of the screen in general, and significant elements that you see under specific operating modes, in dialogs or settings.

- **Appearance of active elements**
 - *Active* elements like On/Off switches, state buttons have a **blue** background.
 - *Selected* elements are framed or highlighted **orange**.
 - *Inactive* elements are **gray**.
- **On-Screen keypads**

As additional means of interacting with the instrument without having to connect an external keyboard, either a numerical or alphanumerical on-screen keypad appears when you activate an entry field (see [Chapter 3.5.5, "Entering data"](#), on page 100).
- **Info line**

The "Info line" shows brief status information and error messages. It appears when an event generates a message. If selected, the R&S SMW shows information on static errors and the error history.



- **Key parameters indicated in tab labels**

Most dialogs are divided into tabs with logically grouped parameters. The tab label expresses the content and can also contain status indicators or the set value of a key parameter.



1 = Status indicators
2 = Key parameter values

- **Scrollbar handle**


An arrow icon that appears when you touch a scrollbar helps you to scroll in a dialog or list.

- **Progress indicators**

A busy icon indicates a currently running process. If a process takes some time, a progress bar shows the current state.

- **Context-sensitive menus**

Within the entire screen display, including single parameters, you can access context-sensitive menus that provide some additional functions.

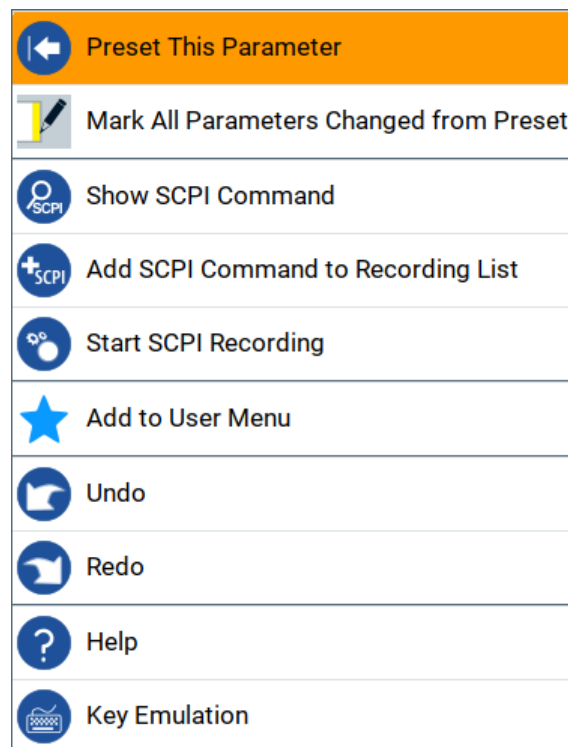

3.5.4 Accessing the functionality

All functionalities are provided in dialog boxes as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods.

The instrument's functions and settings can be accessed by selecting one of the following elements:

- System and function keys on the front panel of the instrument
- Taskbar/softkeys on the touchscreen
- Context-sensitive menus for specific elements on the touchscreen
- Elements on the status bar in the touchscreen
- Displayed setting on the touchscreen that means block diagram and all settings available in dialogs.

To open a dialog box

- ▶ Perform one of the following actions:
 - Tap the required block, and then the menu entry.
 - Tap the minimized view (thumbnail) on the taskbar.

Some of the utility keys access a dedicated dialog, too.

To minimize a dialog box

- ▶ Tap the "Minimize" icon in the upper right corner.

To close a dialog box

To close a dialog box, you have the same controls as you know from computers or devices with touchscreen.

- ▶ Perform one of the following actions:
 - Tap the "Close" icon in the upper right corner.
 - Press the [ESC] key on the front panel.
 - Drag and drop a minimized dialog from the taskbar to the block diagram.

To select an option in a dialog box

- ▶ Tap the required option.

To select an option in a list

If many options are available - for example, for the trigger mode - the options are provided in a list. The current selection is shown on the list button.

1. Tap in the list.
2. To navigate through the list, try out the following:
 - Using a mouse, scroll in the list to tap the required option.
 - Use the rotary knob.
 - Use [ON/OFF TOGGLE] key to select the succeeding option
 - Use the front panel keys:
 - a) Press the [Left/Right] arrow keys to navigate to the list button.
 - b) Press the [Enter] key to open the list.
 - c) Press the [Up/Down] keys to navigate to the required option in the list.
 - d) Press the [Enter] key to select the marked option.

3.5.5 Entering data

Some parameters have their own key on the front panel.

For data input in dialog boxes, the instrument provides on-screen keypads for entering numeric and alphanumeric values. Thus, you can always set the parameters via the touchscreen, the front panel, or an external keyboard.

To correct an entry

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
2. Press the [Backspace] key.
3. Deletes the entry to the left of the cursor.
4. Enter your correction.

To complete the entry

- ▶ Press the [Enter] key or the rotary knob.

To abort the entry

- ▶ Press the [ESC] key.
The dialog box closes without changing the settings.

3.5.5.1 Entering numeric parameters**To enter values with the on-screen keypad**

For numeric settings, the instrument displays the numeric keypad. The units specified correspond to the units of the parameter.

1. Enter the numeric value.

Tip: For quick entry, you can enter a value in exponential representation, e.g. *1e7* for *10000000*.

2. Tap the unit button to complete the entry.

The unit is added to the entry.

Tip: For quick unit change, you can enter shortcuts, e.g. for a frequency value *1e8h* for *100 MHz*.

For an overview of shortcuts supported by the R&S SMW, see [Chapter C.7, "Unit shortcuts"](#), on page 1413.

3. If the parameter does not require a unit, confirm the entered value by pressing "Enter".

To enter values by using the front panel controls

1. Change the currently used parameter value by using the rotary knob or the [Up/Down] keys.
2. If the parameter does not require a unit, confirm the entered value by pressing the [Enter] key or any of the unit keys.
The instrument highlights the editing line to confirm the entry.


If you edit numeric data in tables, the entry field must be in edit mode: Press [Enter], or the rotary knob to activate the edit mode.

3.5.5.2 Entering alphanumeric parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter letters and (special) characters.

3.5.5.3 Undo and redo actions

Accessed via the context-sensitive menus, "Undo" allows you to restore one or more actions on the instrument. Depending on the available memory, the "Undo" steps can restore all actions.

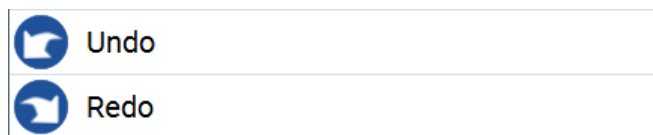

"Redo" restores a previously undone action.

3.5.6 Getting information and help

In some dialog boxes, graphics are included to explain the way a setting works.

For further information, you can use the following sources:

- Tooltips give the value range of the parameter.
- The context help provides functional description on a setting.
- The general help explains a dialog box, provides instructions, and general information.
- The tutorials are interactive examples and demonstrations on how to perform specific tasks.


To access the tutorials

- Follow the instructions in [Chapter 3.5.6.1, "Using the tutorials"](#), on page 104.

To display context help

- To access a help topic, perform one of the following:
 - a) Tap and hold the parameter for which you need information and tap "Help" in the context menu.
 - b) Tap the parameter and press the [HELP] key.

The "Help" dialog opens. You can browse the help for further information.

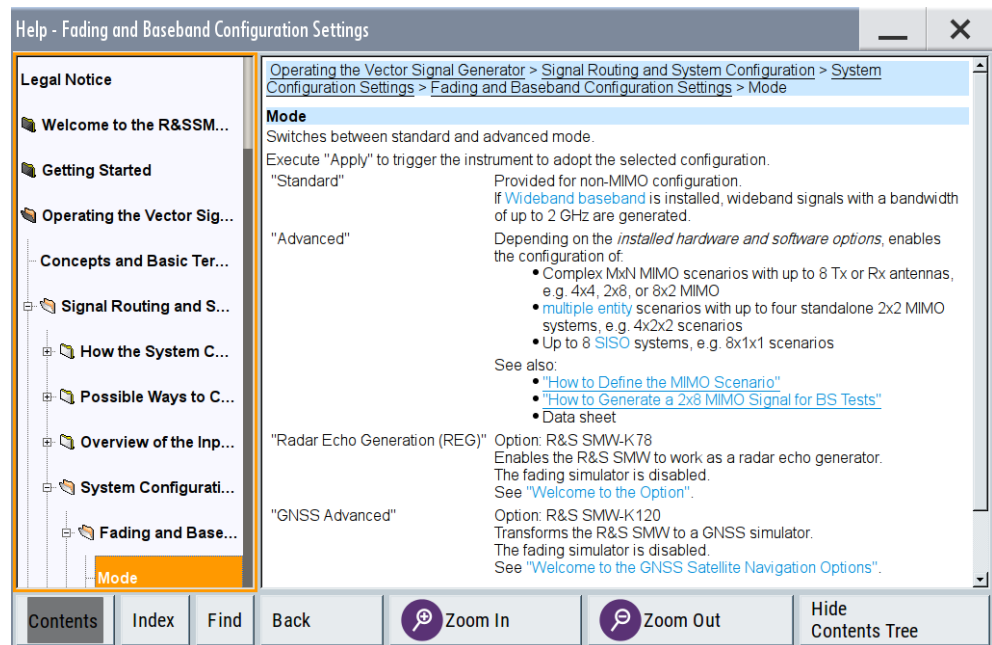

Contents of the help dialog box

The help dialog box covers two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system also provides an "Index" and a "Find" area, and "Zoom" functions that are accessed via the corresponding buttons.

To open general help

- Press the yellow [HELP] key on the front panel.

If a dialog box is opened, the help topic for the current tab is shown. Otherwise the "Contents" page appears.

Navigating in the table of contents and in the help topics

1. To move through the displayed contents entries, tap on an entry and scroll or use a connected mouse or the [Up/Down] keys.
Entries with a plus sign contain further entries.
2. To display a help topic, tap on the topic name or double-click the topic name or press the [Enter] key.
3. To follow a cross-reference, tap on the link text.
4. To return to the previous page, select "Back".
This function scrolls back all steps you have performed before.
5. Use the "scroll bars" to shift the visible section of content shown.

6. To maximize the "Topics" area, tap the "Hide Contents Tree" button to hide the contents tree.

Using the index


1. Select the "Index" button.
2. Enter the first characters of the topic you are interested in.
The entries starting with these characters are displayed.
3. Tap on the index entry.
The corresponding help topic is displayed.

3.5.6.1 Using the tutorials

A set of tutorials is embedded in the software. The tutorials are interactive examples and demonstrations on how to perform specific tasks.


To start a tutorial in an interactive step-by-step mode

1. Press the [SETUP] key on the front panel.
2. Scroll-down in the list, tap on the "Help" section to expand it and tap on "Tutorials".

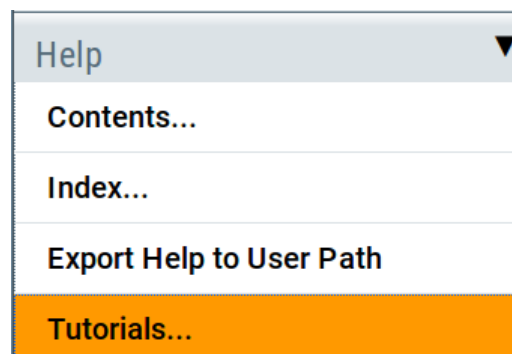


The "Tutorials" dialog opens.

3. Select "File > Load Predefined Tutorial".

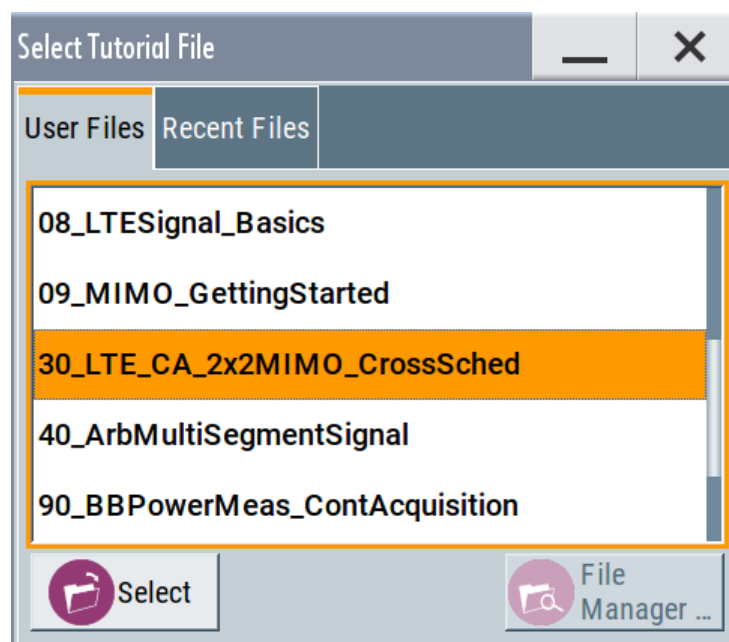


4. Tap on a tutorial from the list and confirm with "Select".

If the file contains a description, it is displayed.

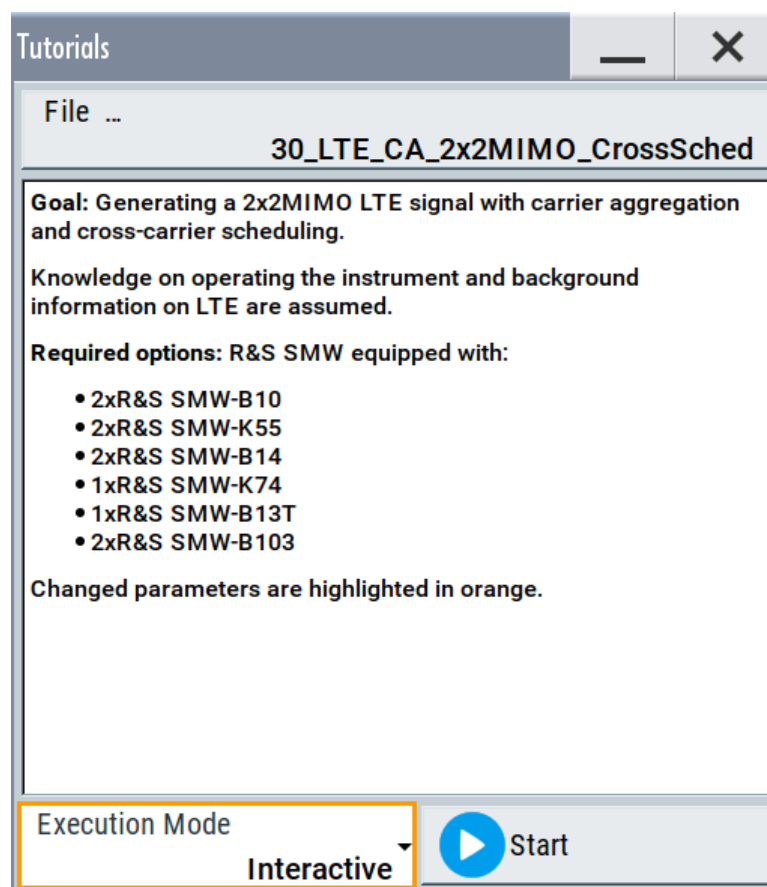

5. Use the default mode, that is "Execution Mode > Interactive".
6. Tap on the "Start" button.
7. Observe the information displayed in the "Info" line (bottom of the display).

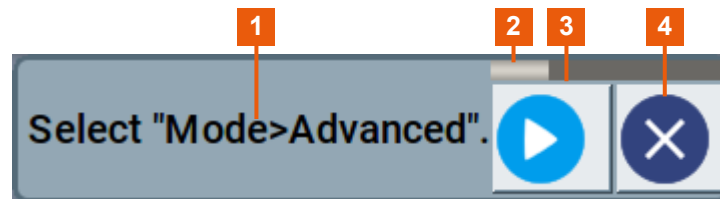

- 1 = Information on the performed action
- 2 = Progress bar
- 3 = "Next Step": confirms the execution of the step
- 4 = "Stop": terminates the tutorial

8. To execute a subsequent step, select the "Next Step" button.
A blinking cursor indicates the block or parameter affected by the step.



The instrument performs the configurations step-by-step and expects your confirmation. Dialogs are opened and closed; changed parameters are highlighted in orange.

 
Additional information is displayed in the "Info" line.

To stop the tutorial

The demonstration can be terminated at any time.

- Select the "Stop" button.

The demonstration stops.



You can reopen the "Tutorials" dialog and start another file or exit the tutorial mode.

To use the demonstration mode

1. Start the tutorials as described in ["To start a tutorial in an interactive step-by-step mode"](#) on page 104.
2. In the "Tutorials" dialog, select "Execution Mode > Auto (Looped) 3 sec".

The configurations are performed automatically; your interaction is not required. Dialogs are opened and closed; changed parameters are highlighted in orange. Additional information is displayed in the "Info" line.

See also:

- [Chapter F, "Available tutorial files"](#), on page 1426
- The application sheet "RS_SMW_CreatingTutorials_AppSheet", available for download from the R&S website, on the R&S SMW [product page](#).

3.5.7 Remote control

In addition to working with the R&S SMW interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC.

The R&S SMW supports various methods for remote control:

- Connecting the instrument to a LAN (see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33)
- Using the LXI browser interface in a LAN
- Connecting a PC via the IEC-bus (IEEE 488) interface
- Remote control via the USB interface



For remote control over LAN or USB, you can use the R&S VISA (Virtual Instrument Software Architecture) library provided for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to configure the remote control interfaces is described in [Chapter 13, "Network operation and remote control"](#), on page 819.

3.5.8 Remote operation over VNC

The VNC is an application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and VNC provides access to all applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.



Instrument control from a remote computer

To access the basic utility functions of the R&S SMW, perform a right mouse click the block diagram and select "Key Emulation".

A key panel to the right of the block diagram gives access to the utility functions provided by the front panel keys.

The VNC is an add-on program, included in operating system Linux/Unix, and available as a free-of-charge download on the internet.

See also [Chapter 13.14, "To operate the instrument using VNC"](#), on page 898.

4 Signal routing and system configuration

The R&S SMW provides multiple routing possibilities and simplifies the definition of versatile MIMO configurations.

Provided the instrument is equipped with the required options, R&S SMW can:

- Process the internally generated digital baseband signal
- Process an external digital signal
- Generate vector-modulated baseband signals, irrespectively of the signal source
- Impair, add noise, and apply fading to digital baseband signals.

Generally, the processing of the generated baseband signal involves a modulation on the selected radio frequency (RF) and output at the RF connectors. However, the digital baseband signal can also be output directly, or converted and output as an analog I/Q signal.

To support you in your configuration tasks, the R&S SMW provides the "System Configuration" dialog. The main focus of this section is the "System Configuration" settings. This section also introduces the concept of the signal routing possibilities and covers the settings provided for the adjustment of the input and output analog and digital signals.



The information in the following sections assumes a fully equipped R&S SMW.

4.1 How the system configuration function supports you in your task

The R&S SMW vector signal generator is an instrument with outstanding characteristics that can serve a wide range of test cases. Irrespective of your current use case, the decision process on how to fulfill the task with the R&S SMW and what kind of configurations are necessary, undergoes the same main phases.

The "System Configuration" settings and capabilities support the decision and the configurations in these main phases. It helps you, for instance, to define MIMO configurations, to route the signal through the instrument, and to connect and control external instruments.

4.1.1 Finding out the system configuration for a current test case

Prerequisites

The provided instrument settings help you to decide for your test case and support you to configure connected external instruments. Keep in mind the capability of your instru-

ment to evaluate type and number of additional instruments that are required in the current test setup.

General workflow

The general workflow comprises the main phases listed below. The "System Configuration" helps you in phase 3, 4 and 5.

1. Analyzing the use case/test case and deciding whether the test setup requires external instruments, either as a baseband source or as an RF frontend.
In general, a test setup that requires more than two Rx antennas requires additional instruments.
Tip: Compare your current test case with the example scenarios listed in [Table 4-1](#). The table provides information on the required fading and baseband configuration, the used baseband source, the required output interfaces, and a summary of required instruments.
2. Connecting and cabling the instruments.
Typically, all instruments use the same reference frequency signal. Connect these instruments via LAN or USB interfaces to the R&S SMW.
3. Configuring the signal flow by selecting the suitable fading and baseband configurations and deciding whether coupled or separate baseband sources are necessary.
The most powerful way is to rely on the [Fading and baseband configuration settings](#).
See also [Chapter 4.2, "Possible ways to configure the signal flow"](#), on page 112.
4. Distributing and mapping the I/Q streams to the required output interfaces.
See [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135.
5. Establishing connection to the external instruments.
See [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137
You can also manually configure the correct input and output interfaces the R&S SMW expects the signal from or outputs the signal at.
See [Chapter 4.3, "Overview of the input and output signals and interfaces"](#), on page 116.
6. Configuring the baseband signal, enabling fading, and defining the signal to noise ratio (SNR), if necessary.
Adjusting the RF frequency and further required settings.
7. Starting the signal generation.

For step-by-step descriptions, see [Chapter 4.9, "How to connect external instruments and configure the signal flow"](#), on page 193.

4.1.2 From a test scenario to the required system configuration

Short form representations of fading and baseband configurations

Throughout this description, the fading and baseband configurations are represented in a short form that follows the predefined structure

<#Entity>x<#Basebands>x<#Streams> (LxMxN). The last two blocks are identical with the standard convention used to describe a MxN MIMO system.

Example:

The abbreviation 1x8x2 is a representation of a one-entity 8x2 MIMO system; a 2x2x2 configuration is a scenario with two entities with a 2x2 MIMO system each.

The information in [Table 4-1](#) provides a cross-reference between a test scenario, the required system configuration at the R&S SMW and total number of required instruments including additional R&S SMW instruments, if needed. R&S SMW system configuration includes <#Entity>x<#Basebands>x<#Streams> (LxMxN), the baseband sources ("BB Source Config") and output signals of the R&S SMW.

The "Fading/Baseband Config" tab of the "System Configuration" dialog serves the opposite way. The tab provides a short description of the selected configuration including an example.

Table 4-1: Overview test scenarios and system configuration (R&S SMW-B10)

Test scenario	Description	LxMxN	Baseband sources	Output signals	All instruments
LTE 4x4 MIMO	User equipment (UE) or base station (BS) tests More	1x4x4	Coupled sources	<ul style="list-style-type: none"> RF A, RF B I/Q 1/2 or <ul style="list-style-type: none"> RF A, RF B BBMM 1/2 	<ul style="list-style-type: none"> 1x R&S SMW 2x R&S SGS or <ul style="list-style-type: none"> 1x R&S SMW 2x R&S SGT
LTE 2x8 MIMO beamforming	TD-LTE BS test, e.g. beam-forming tests More	1x2x8	Coupled sources	<ul style="list-style-type: none"> 2x RF A, 2x RF B 2x I/Q 1/2 or <ul style="list-style-type: none"> RF A, RF B BBMM 1/2 FADER 1/2/3/4 	<ul style="list-style-type: none"> 2x R&S SMW 4x R&S SGS or <ul style="list-style-type: none"> 1x R&S SMW 2x R&S SGT 4x R&S SGT
LTE 8x2 MIMO UE tests	TD-LTE UE tests	1x8x2	Coupled sources	RF A, RF B	1x R&S SMW
LTE 8x8 MIMO	LTE TM9 and TM10 tests with two component carriers and 8x8 MIMO each More	1x8x8	Coupled sources	<ul style="list-style-type: none"> 2x RF A, 2x RF B 2x I/Q 1/2 or <ul style="list-style-type: none"> 2x RF A, 2x RF B 2x BBMM 1/2 	<ul style="list-style-type: none"> 2x R&S SMW 4x R&S SGS or <ul style="list-style-type: none"> 2x R&S SMW 4x R&S SGT

Test scenario	Description	LxMxN	Baseband sources	Output signals	All instruments
LTE-A carrier aggregation with 2x2 MIMO	UE test with two component carriers (carrier aggregation) and 2x2 MIMO each	2x2x2	Coupled sources	Intra-band <ul style="list-style-type: none"> • RF A, RF B Inter-band 1 <ul style="list-style-type: none"> • RF A, RF B • I/Q 1/2 Inter-band 2 <ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 	Intra-band <ul style="list-style-type: none"> • 1x R&S SMW Inter-band 1 <ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGS Inter-band 2 <ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGT
LTE-A intra-band carrier aggregation with 2x2 MIMO	Test with four component carriers (carrier aggregation) and 2x2 MIMO each	4x2x2	Coupled sources	RF A, RF B	Intra-band <ul style="list-style-type: none"> • 1x R&S SMW Inter-band <ul style="list-style-type: none"> • 2x R&S SGT
LTE-A Rel. 11 fel-CIC	Further enhanced inter-cell interference coordination (fel-CIC) tests	3x2x2	Coupled sources per entity	RF A, RF B	1x R&S SMW
LTE intra-band carrier aggregation with 4x4 MIMO	Test with two component carriers and 4x4 MIMO each	2x4x4	Coupled sources/ coupled sources per entity	RF A, RF B	1x R&S SMW 2x R&S SGT
LTE multi-user	PUCCH test with 4 UEs according to TS 36.141	1x4x2	Separate sources	RF A, RF B	1x R&S SMW
WCDMA type 3i	One wanted cell and two interfering cells, each with Rx diversity according to TS 34.121	1x3x2	Separate sources	RF A, RF B	1x R&S SMW
DC-DB-HSDPA with 2x2 MIMO	Two WCDMA cells with 2x2 MIMO each	2x2x2	Separate sources	<ul style="list-style-type: none"> • RF A, RF B • I/Q 1/2 or <ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 	<ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGS or <ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGT
WLAN 802.11ac with 160 MHz	WLAN 802.11ac with 160 MHz and 4 Tx antennas (without dyn. fading)	4x1x1	Coupled sources	<ul style="list-style-type: none"> • RF A, RF B • I/Q 1/2 or <ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 	<ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGS or <ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGT
WLAN 802.11ac with 80 MHz	WLAN 802.11ac with 80 MHz and 3x3 MIMO	1x3x3	Coupled sources	<ul style="list-style-type: none"> • RF A, RF B • I/Q 1/2 or <ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 	<ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGS or <ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGT
WLAN 802.11ad/ay with 1.76 GHz	WLAN 802.11ad/ay at intermediate frequencies (8 GHz to 17 GHz) Requires R&S SMW-B9.	2x1x1	Separate sources	RF A (R&S SMW-B1012)	1x R&S SMW
WLAN 802.11ad/ay with 1.76 GHz	WLAN 802.11ad/ay at 58.3 GHz to 64.8 GHz Requires R&S SMW-B9 and R&S SMW-B1067.	2x1x1	Separate sources	RF A	1x R&S SMW

Test scenario	Description	LxMxN	Baseband sources	Output signals	All instruments
MSR (Multi-Standard Radio)	Multi-Standard Radio with 8 individual carriers (e.g. GSM, WCDMA, LTE, etc.) within one frequency band (without fading)	8x1x1	Coupled sources	RF A	1x R&S SMW
WCDMA UE tests	Tests with three WCDMA UEs	3x1x2	Separate sources	<ul style="list-style-type: none"> • RF A, RF B • BBMM Out x or <ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 • FADER 3/4 	<ul style="list-style-type: none"> • 1x R&S SMW • 4x R&S SGT or <ul style="list-style-type: none"> • 1x R&S SMW • 4x R&S SGT
WCDMA handover	Two WCDMA cells	2x1x1	Separate sources	RF A, RF B	1x R&S SMW
WCDMA/LTE mixed scenarios	BS/UE tests with LTE 2x2 MIMO and WCDMA 2x2 MIMO	2x2x2	Coupled sources per entity	<ul style="list-style-type: none"> • RF A, RF B • BBMM 1/2 	<ul style="list-style-type: none"> • 1x R&S SMW • 2x R&S SGT
GSM AM suppression tests	Multichannel BS tests	3x1x1	Separate sources	RF A, RF B	1x R&S SMW

For a step-by-step description of how to perform the different steps, refer to [Chapter 4.9, "How to connect external instruments and configure the signal flow"](#), on page 193.

The table [Table 4-2](#) lists examples of test scenarios that utilize the fading functionality of the instrument.

Table 4-2: Scenarios for signaling tests

Test scenario	Description	LxMxN	Baseband sources	Input/output signals	All instruments
LTE-A carrier aggregation with 2x2 MIMO and signaling	UE test with two component carriers (carrier aggregation) and 2x2 MIMO each more	2x2x2	Coupled sources	Input: CODER 1/2 Output: BBMM 1/2	1x R&S CMW 1x R&S SMW
LTE 4x4 MIMO with signaling	UE or BS tests with signaling Input signal from R&S CMW required	1x4x4	Coupled sources	Input: CODER 1/2 Output: BBMM 1/2	1x R&S CMW 1x R&S SMW
MIMO OTA tests	UE MIMO OTA tests	2x2	Separated sources	Input: CODER 1/2 Output: BBMM 1/2	1x R&S CMW 1x R&S SMW

4.2 Possible ways to configure the signal flow

The R&S SMW provides different possibilities for configuring the signal flow. This section gives an overview of the available alternatives, starting with the simple manual configuration, to the automatically assisted routing for complex signal scenarios. Select the routing method most fitting to your needs and workflow.

For complex routing scenarios, like MIMO configuration and especially configuration involving several instruments, use the "System Configuration" functionality as the start and central configuration point.

We assume a fully equipped R&S SMW with [Standard baseband](#).

4.2.1 Using the signal routing settings and the block diagram

The following methods are provided in [Standard mode](#) and are suitable for the configuration of non-MIMO signal routing tests scenarios.

Signal routing

This method is for a simple signal routing task involving routing and summing of the baseband signals up to the output of the "Fading" block. The signal routing possibilities are grouped in the "Signal Routing" sections of the corresponding block.

The signal routing influences:

- The signal flow of the baseband sources
- The routing of the output fading signal for the non-MIMO cases.

The provided settings are sufficient for standard test configurations with Tx or Rx diversity measurements with two antennas.

Refer to [Chapter 4.5, "Signal routing settings"](#), on page 157 for detailed description of the provided settings.

Drag&Drop blocks

Basically, this functionality achieves the same effect as the signal routing settings but extends it. It adds the possibility to route the generated streams to any of the digital and analog output connectors of the instrument. In other words, it covers the complete baseband domain including the functionality of the [I/Q stream mapper](#).

- To route the baseband signal, select the corresponding block ("Baseband A/B" or "BB Input A"). Drag it to the block of the signal, to that you want to route it through, e.g. "Fading A/B". Allowed routing possibilities are highlighted. The block diagram shows the resulting signal flow.
- To map a stream, select the "AWGN" block and drag it to the connector of the stream, at that you want output the signal, e.g. "BBMM 2". If the associated block is hidden, it unfolds.
Open the "I/Q Stream Mapper" to verify the routing.
- To break up the routing, perform the reverse operation, i.e. select the "Fading A/B" block and drop it to the corresponding "Baseband A/B" or "BB Input A" block.

4.2.2 Using the system configuration capabilities

Fading/Baseband configuration

Another way to configure the signal routing of the baseband signal and the fading block is to use the "System Configuration > Fading/Baseband Configuration" settings. The configuration settings are provided for two modes, for the standard non-MIMO configuration and for the advanced MIMO configuration respectively.

- The "Standard" fading and baseband configuration settings are a more detailed representation of the "Fading > Signal Routing" settings. The dialog provides some additional description, e.g. the common application of the current configuration.
- The "Advanced" fading and baseband configuration is required for the configuration of complex $LxMxN$ MIMO scenarios.

For any allowed system configuration, the R&S SMW configures the signal flow **automatically upon just four parameters:**

- Number of entities (users or cells)
- Number of Tx and Rx antennas
- The decision whether coupled or separated baseband sources are used
- Kind of generated signals, analog, digital, or multiplexed digital signals.

In this way, within one dialog you can configure complex configurations with:

- Up to 8 Tx or Rx antennas
- Up to four standalone 2x2 MIMO systems, e.g. 8x2 MIMO or LTE-A carrier aggregation with 2x2 MIMO
- Up to 8 SISO systems

See also [Table 4-1](#).

For any selected fading and baseband configuration, the dialog displays on-the-fly a simplified preview diagram of the signal routing. The selected configuration is applied after executing the "Apply" function; the configuration influences the signal flow up to the I/Q stream mapper.

Refer to [Chapter 4.4, "System configuration settings"](#), on page 126 for detailed description of the provided settings.

Coupled or separate baseband sources

To simplify the configuration of the baseband signal in some MIMO test scenarios, you can enable the R&S SMW to combine the available resources into a single baseband block. The R&S SMW then generates the required number of Tx antennas out of it. The configuration of the various Tx antennas is performed in a common dialog.

Depending on the selected baseband source, in particular when using coupled or coupled per entity basebands, not all digital standards are available. Coupled mode is supported by the "EUTRA/LTE" and "IEEE802.11 WLAN" digital standards, enabled in the "ARB" and with an external digital baseband signal.

- **Advantages of the coupled baseband sources**

Using coupled baseband sources is advantageous in complex test scenarios and enabled if a scenario requires the signal of more than one cell, Tx antenna or entity.

In coupled mode, the instrument takes over the baseband signal configuration, adjusts the settings of all required basebands/entities automatically, and applies suitable trigger settings.

Coupling external digital baseband signals accelerates the configuration and provides better overview by combining the settings within one central dialog.

- **Separate baseband sources**

Separate baseband sources are required for test scenarios involving the following:

- A mixture of internally generated and externally supplied baseband signals.
- A mixture of internally generated signals according to different digital standards.

I/Q stream mapper

Irrespective of the used signal routing method, it is possible to reconfigure the distribution and mapping of the I/Q streams to the output connectors.

Depending on the installed hardware options and the enabled "System Configuration > Fading/Baseband Configuration", up to *eight logical I/Q streams*, stream A to stream H, can be generated. The R&S SMW offers a flexible mapping functionality of these streams to the provided output connectors.

By default, the first two streams are mapped to the RF outputs. The stream mapping of all other streams depends on the current configuration, in particular the number of output streams, number of multiple entity systems, whether the fading simulator is bypassed or not. We recommend that you observe the stream mapping before performing further configurations.

Refer to [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135 for detailed description of the provided settings.

See also [Figure 4-1](#).

External RF and I/Q instruments

The MIMO test scenarios with more than two Rx antennas require the signal at both RF outputs and up to six additional RF signals. The instrument generates the required signal and routes it to the available output connectors as defined with one of the routing possibilities. Which logical information, i.e. which **stream**, is output at which connector is defined by the "IQ Stream Mapper" (see ["I/Q stream mapper"](#) on page 115).

The I/Q analog and digital output signal has to be processed by an additional instrument. The R&S SMW provides all settings required to configure the output connectors, to establish the connections to the connected RF instruments and to control them.

The R&S SMW acts as a **primary instrument** and controls setup-related parameters of **secondary instruments**. A secondary instrument constitutes any connected further processing external instrument. Examples are: R&S SGT, R&S SGS (also in combination with R&S SGU), R&S FSW.

Refer to:

- [Chapter 10.5, "Control and operation of external instruments"](#), on page 696
- [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137 for detailed description on the provided settings
- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200 for step-by-step description on how to connect and configure secondary instruments.

4.3 Overview of the input and output signals and interfaces

Designed as a signal generator with various application fields, the R&S SMW uses a hardware concept that enables you to define and customize most of the input and output signals and interfaces. Depending on the selected fading and baseband configuration, the digital interfaces can be used as input or output connectors. The different logical settings of the same physical interface are grouped in different dialogs.

Logical signals, streams and channels at the interfaces

This section provides **background information** and introduction to the topics. The description is divided in parts that follow the logical decision process when configuring the instrument. It supports the manual configuration for simple test scenarios.

The settings provided in the "System Configuration" dialog guide you throughout this decision process automatically. For complex routing scenarios, like MIMO configuration and especially configuration involving several instruments, we recommend that you use the ["System Configuration"](#) functionality as a start and central configuration point.

For an overview of the interfaces and their characteristics, refer to:

- [Chapter 4.3.2, "Overview of the baseband signal sources"](#), on page 118
- [Chapter 4.3.3, "Overview of the baseband and RF output signals"](#), on page 120
- [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121

4.3.1 Physical location of the input and output interfaces

This section focuses on the input and output interfaces of the instrument. For a detailed overview of all front and rear panel connectors, see [Chapter 3.2, "Instrument tour"](#), on page 40.

Naming conventions for the input and output interfaces and Show Connector function

The R&S SMW is a highly modular instrument that can be equipped with different combinations of hardware and software options. To increase the serviceability of the instrument, the design of the different hardware board is similar. However, this similarity together with the customizable connectors direction and user definable signals can cause cabling and configuration faults. To simplify the cabling and to minimize this error source, it is important to identify the interfaces in any possible hardware and system configuration.

The instrument provides the following two methods for identifying the connectors:

- A connector naming rule that follows the predefined structure
`<Board Name> <Number>[/<Hs Channel>][<Direction>]`
 For example, CODER 2 IN or BBMM 2 OUT.
 The `<Number>/<Hs Channel>` designation applies for the HS DIG I/Q connectors, for example BBMM 2/3.

Overview of the input and output signals and interfaces

- A built-in [Show connector](#) function that indicates the selected connector on the rear panel of the instrument with a blinking LED.



The short and long connector names (e.g. COD 2 IN and CODER 2 IN or "Coder 2 IN") are used interchangeably.

- The [Figure 4-1](#) shows the *digital interfaces* on the rear panel together with the associated GUI term (highlighted in orange color).



Figure 4-1: Location of the digital input and output interfaces (part view of the rear panel of a fully equipped instrument, standard baseband)



Figure 4-2: Location of the digital input and output interfaces (part view of the rear panel, wide-band baseband)

- The [Figure 4-3](#) shows the *analog output interfaces* on the rear panel together with the associated GUI term (highlighted in orange color).

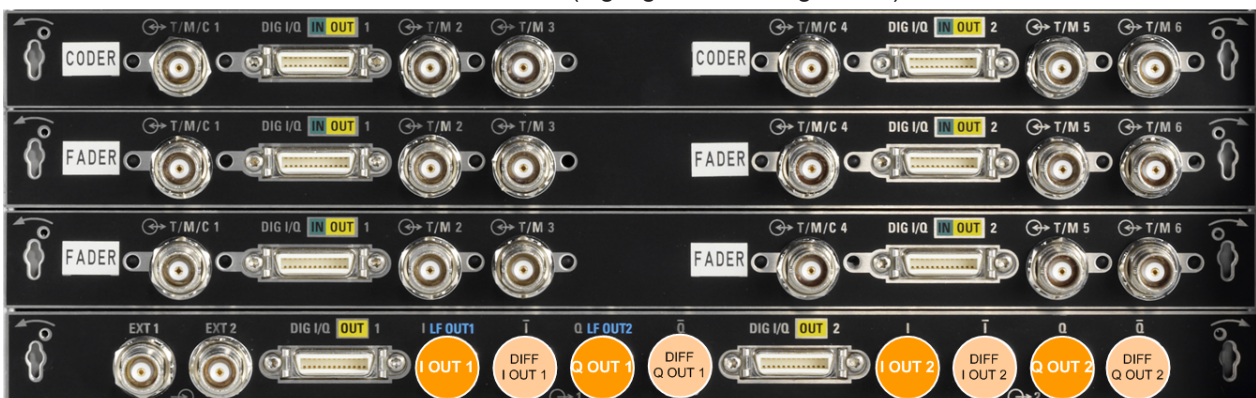


Figure 4-3: Location of the analog output interfaces (part view of the rear panel of a fully equipped instrument, standard baseband)



Figure 4-4: Location of the analog output interfaces (part view of the rear panel of a fully equipped instrument, wideband baseband)

Direction of the digital interface

The digital connectors FADER 1/2 serve as an input or an output connector. The selected fading and baseband configuration automatically predefines the direction of the required connectors (see ["System Configuration LxMxN"](#) on page 130).



If you change these predefined settings, cross-check the direction of the digital interface before you connect an external instrument.

See:

- ["To find out the correct connector"](#) on page 195 and ["Indication of the digital interface status"](#) on page 118
- ["To find out the connector's direction"](#) on page 195 (if you operate the instrument remotely)

Indication of the digital interface status

A dedicated LED indicates the connector status:

- ● green: an input connector
- ● yellow: an output connector
- ● no light / gray: the connector is not active

4.3.2 Overview of the baseband signal sources

The [Table 4-3](#) gives an overview of the possible input signals and the input connectors at the R&S SMW. Any one of the specified input signals can be processed by the I/Q modulator and output at the RF outputs.

Table 4-3: Physical input signals

Input Signal	Input connector DIG I/Q or HS DIG I/Q	GUI element	Refer to
Internal digital baseband signal	-	"Baseband"	Chapter 5, "Configuring the internal baseband source" , on page 226
External digital signal	CODER x FADER x HS CODER x	"BB Input"	Chapter 4.6, "Digital baseband input settings" , on page 161 See also Chapter 4.3.4, "Supported digital interfaces depending on the system configuration" , on page 121.
External analog <ul style="list-style-type: none"> Wideband Differential (in the first signal path) 	<ul style="list-style-type: none"> I/Q I/Q Bar 	"I/Q Mod"	Chapter 7, "Applying I/Q vector modulation" , on page 469

Input interface for the external digital baseband signal

The available interfaces depend on the installed options:

- **Standard baseband** (R&S SMW-B10)
As shown in [Table 4-3](#), the instrument is equipped with **up to four digital interfaces (DIG I/Q)**, the CODER x and the FADER x connectors that can be used as **input for digital signals**.
- **Wideband baseband** (R&S SMW-B9)
Provides two digital interfaces (DIG I/Q or CODER x) and two additional **high-speed digital interfaces (HS DIG I/Q or HS CODER x)**, that can be used in the same way.



Digital interface disabled in a particular system configuration (R&S SMW-B9)

The DIG I/Q and the HS DIG I/Q are physically available, but disabled in a particular system configuration. Refer to [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121 for information on whether and which of the digital interfaces can be used.

The DIG I/Q digital interfaces provide direct communication with other Rohde & Schwarz instruments, like:

- Signal generators
- R&S EX-IQ-BOX external digital signal interface module
- R&S FSW signal and spectrum analyzer in radar echo generation applications
- R&S IQW wideband I/Q data recorder
- R&S CMW500 radiocommunication tester in fading applications.

See also:

- [Chapter 4.9.12, "How to connect an R&S EX-IQ-BOX"](#), on page 224
- [Chapter 4.9.10, "How to connect an R&S®CMW500 for fading applications"](#), on page 220

Application examples of the externally supplied digital baseband signal

Provided the instrument is equipped with the required options, in particular with at least two coder boards, the externally applied signals can be used for and further processed as follows:

- Used as a standalone baseband source and processed separately, e.g. faded, detuned, or loaded with noise or directly applied to the I/Q modulator
- Used as a user-specific wanted signal or interference signals to the internally generated signals
- In [Standard baseband](#), routed to one or to all the signal paths, added to the internally generated baseband signal possibly also frequency shifted
- Used as a baseband source for digital signals in test setups requiring more than four baseband signals (Tx antennas) or entities

Input interface for the external analog signal

The R&S SMW provides also an input interface for an external analog (wideband or differential) I/Q signal; the external signal is fed directly to the I/Q modulator. For description of the related connectors and settings, see [Chapter 7, "Applying I/Q vector modulation"](#), on page 469 and [Table 7-1](#).

4.3.3 Overview of the baseband and RF output signals

Usually, the generated baseband signal is modulated on the RF frequency and output at the RF connectors. For MIMO configurations with more than two Rx antennas, however, the two RF output signals are not sufficient. For MIMO configurations, for test setups in which the R&S SMW acts as a baseband signal source or as a pure fading simulator, it provides also connectors to output the baseband signal. As shown in [Table 4-4](#), the R&S SMW outputs the digitally modulated signal directly or converted to an analog I/Q baseband output signal. The analog baseband signal can be output single ended or differential (non-inverted); an RF envelope signal can be generated, too.

The [Table 4-4](#) shows the possible output connectors with the corresponding kind of signal. Which logical information, i.e. which **stream**, is output at which connector is defined by the "I/Q Stream Mapper" (see [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135).

Table 4-4: Physical output signals

Type	Output Signal	Output connector	GUI element	Refer to
RF	RF signal	RF	"RF"	Chapter 8, "Configuring the RF signal" , on page 479
BB	Digital signal	BBMM x FADER x HS BBMM x	"I/Q Digital" (I/Q OUT / HS I/Q OUT)	Chapter 4.7, "I/Q digital output settings" , on page 175 See also Chapter 4.3.4, "Supported digital interfaces depending on the system configuration" , on page 121
	Analog signal <ul style="list-style-type: none"> • Single ended • Differential • RF Envelope 	<ul style="list-style-type: none"> • I/Q • I/Q Bar • I/I Bar 	"I/Q Analog"	Chapter 4.8, "I/Q analog output settings" , on page 186

4.3.4 Supported digital interfaces depending on the system configuration

As listed in [Table 4-3](#) and [Table 4-4](#), the available digital interfaces depend on the installed options. Also, the configured system configuration determines which interfaces you can use.

See table [Table 4-5](#) for overview. Also, the table lists the maximum clock frequency (sample rate) in each of the supported combinations.

Table 4-5: R&S SMW-B9: System configuration, digital interfaces and maximum sample rate

"System Config" > Mode	"System Config" > Signal Outputs	Digital CODER x	Inputs HS CODER x	Digital BBMM x	Outputs* HS BBMM x
Standard	Analog only	-	1.25 GHz	-	-
	Digital Only (HS)	-	-	-	1.25 GHz
Advanced	Analog & Digital	250 MHz	-	250 MHz	-
	Digital Only (HS)	-	-	-	250 MHz
	Analog & Digital (HS)	250 MHz	-	-	1 GHz

*) Requires R&S SMW-K19.

4.3.5 Important signal parameters and interface's characteristics

Correct signal processing of the externally supplied input signals in the instrument and correct processing of the output signal in the next connected instrument require information of signal parameters. These signal parameters are sampling rate, crest factor and signal level, expressed as peak or as RMS level value.

Sample rate

The sample rate of the digital input and output signal can be defined manually or automatically retrieved from the input and estimated for the output signal. The bandwidth

and thus the sample rate of the digital input signal is not limited by the installed sample rate options.

For more information, see data sheet.

Crest factor

According to its definition, the crest factor gives the difference in level between the peak level and RMS level value in dB (see [Figure 4-5](#)).

The R&S SMW uses the crest factor to calculate the power levels that is the instrument compensates the RMS levels of the externally supplied signal by the crest factor. For example, the crest factor of the external signal is important for the calculation of the RF output power.

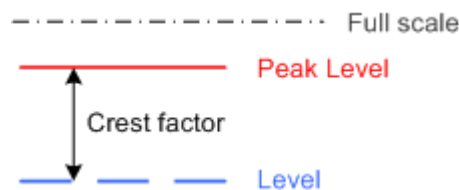


Figure 4-5: Relation between the level settings

Test setups often involve an up-converter connected to the I/Q connectors of the generator or feeding of external signal to the digital input of the R&S SMW. As a rule, whenever an I/Q signal is transferred between two instruments, *the crest factor and the peak levels of the two involved instruments have to be coordinated*.

To ensure proper signal settings and correct results, check if the peak level values and crest factor values are equal. Equal values hold for the I/Q outputs of the R&S SMW and the I/Q inputs of the up-converter are equal.

In the R&S SMW, level values are represented as relative to full-scale values (see [Figure 4-5](#)).



Where to find the necessary values

- Dialog "BB Input"
See [Chapter 4.6, "Digital baseband input settings"](#), on page 161
- Dialog "Digital I/Q Out"
See [Chapter 4.7, "I/Q digital output settings"](#), on page 175
- Dialog "Analog I/Q Out"
See [Chapter 4.8, "I/Q analog output settings"](#), on page 186
- Dialog "Setup > System > Baseband Powers", see [Chapter 9.2, "Querying information on the baseband power levels"](#), on page 651
- Dialog "Fading > Insertion Loss Config / Coupled Parameters > Insertion Loss"

See user manual R&S®SMW-B14/-K71/-K72/-K73/-K74/-K75/-K820/-K821/-K822/-K823 Fading Simulation.

Why the instrument monitors the signal internally and how to avoid overflow

Option: R&S SMW-B10

The R&S SMW constantly monitors the input and output digital signal and indicates an overflow status.

- Overflow of the **input signal** (crest factor and peak level) is indicated if the entered "Peak Level" (in dBFS) value does not correspond to the real value
Tip: The overflow status is indicated as long as the signal level is not reduced and the peak level value corrected. Trigger "Auto Level Set" to collect the required values and adjusts the settings automatically.
- Overflow of the **output signal** is indicated if the digital signal is clipped, i.e. if the level of the output signal, or the noise level (AWGN) are too high.

4.3.5.1 Specific characteristics of the digital I/Q interface

What is a "digital channel" and how are the channels distributed to the basebands

The external digital signals supplied at the DIG I/Q interfaces of the instrument can contain more than one, possibly even multiplexed, digital channels. The R&S SMW processes each of these digital channels as a separate signal.

The external digital signals supplied at the HS DIG I/Q interfaces of the instrument can contain more than one, possibly even multiplexed, digital channels. The R&S SMW processes each of these digital channels as a separate signal.

Over the settings provided at the user interface, you can route the available digital channels of each of the digital interface to one of the baseband blocks.



Do not mistake the term *channel* used here with the terms [Fading channel](#) or signal path.

For a description of the required settings, see [Connector](#).

Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal

The [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121 emphasizes why and which signal parameters are important for the correct internal signal processing of externally supplied signals in the R&S SMW. This section focuses on the way that these requirements are fulfilled and explains how the instrument deals with signals deviating from the expected values:

- **Crest factor, peak level and RMS level**

These values can be adjusted in one of the following ways:

- Adjusted manually
 If you have knowledge about these values, it is best to enter them directly (see ["Crest Factor"](#) on page 167).
- Estimated automatically by the internal measurement function

Use the function [Auto Level Set](#) to trigger the R&S SMW to measure the input signal, estimate the peak level and RMS level and calculate the crest factor out of them.

Tip: For a correct signal leveling:

- 1) Enable an appropriate measurement time.
- 2) Execute one measurement for each baseband source.
- 3) Set the measurement period to a time value that is long enough to capture several periods of the input signal.

- Determined automatically

The R&S SMW can receive the values from the connected transmitter.

If the external digital signal source is a second Rohde & Schwarz instrument, it signals the peak level and the RMS level of the signal over the digital input interface. To enable the R&S SMW to receive these values, enable the parameter ["DIG IQ Auto Setting"](#) on page 167.

In the second automatic way, the R&S SMW adjusts the corresponding input fields with the measured/received values. The internal gain control mechanism uses these received values to adjust the input signal gain to achieve an optimal dynamic range.

- **Sample rate**

External input signals with sample rates different than the system clock are resampled, as illustrated on [Figure 4-6](#).

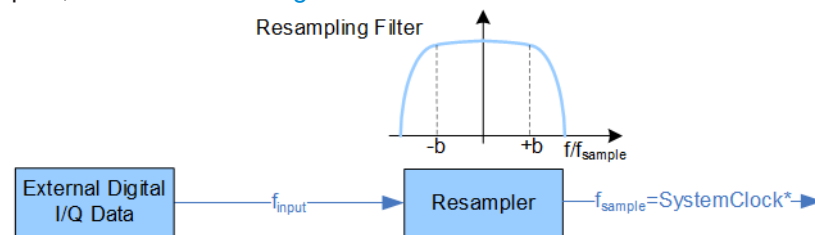


Figure 4-6: Resampling principle of external digital baseband signals

* = Max. sample rate depends on connected device

f_{input} = Max. sample rate

The max. sample rate depends on the installed options:

- The R&S SMW can process digital signals with sample rate $f_{\text{input}} = 400 \text{ Hz}$ to 200 MHz.
- The [Wideband baseband](#) version working in standard mode uses, can process wideband digital signals with $f_{\text{input}} \leq 2.4 \text{ GHz}$.

The internal signal processing in the [Standard baseband](#) is based on a sample rate with a maximum value ($f_{\text{sample, max}} = 200 \text{ MHz}$ or 100 MHz) that depends on the capabilities of the connected transmitting/receiving device.

- **Maximum modulation bandwidth**

A baseband signal with a sample rate $f_{\text{sample}} < f_{\text{sample, max}}$ (i.e. smaller than the used system clock) is interpolated, see [Figure 4-6](#). The resulting modulation bandwidth is calculated as *sample rate* * 0.8.

With a sample rate $f_{\text{sample, max}}$ of exactly 200 MHz, the modulation bandwidth in the [Standard baseband](#) is 160 MHz.



Estimating or defining the sample rate

The sample rate of the signal at the digital interface can be determined with one of the following methods:

- **Estimated sample rate**
Enable the instrument to evaluate the received I/Q data clock
- **User-defined sample rate**
Provide both the external signal source and the receiving instrument with a common external reference signal and set the sample rate value.

4.3.5.2 Specifics of the analog I/Q interfaces

The R&S SMW outputs the digitally modulated signal not only directly but also converted to an analog I/Q baseband output signal. The R&S SMW outputs the analog baseband signal single ended or differential (non-inverted); an RF envelope signal can be generated, too.

Differential output signal

The differential output provides symmetrical signals for differential inputs of DUTs without the need of additional external electric network. To achieve an optimal and balanced operating point of these inputs, ensure the correct adjustment of the used DC voltage ("Bias") and the offset ("Offset") between inverting and non-inverting output. Refer to the descriptions [Bias \(EMF\)](#) and [Offset \(EMF\)](#) for a description of the effect of these parameters.

Maximum overall output voltage

The voltage of the analog output signals is defined as a combination of output voltage of the I and Q signal components and an optional bias voltage. If the differential output is used, an additional offset can be set, too. The values of these parameters are interdependent so that the magnitude of the sum of output voltage and bias voltage must not exceed 4V.

The following applies:

- Single ended signal:
 $V_p + V_{bias} \leq 4 \text{ V}$
- Differential signal:
 $0.5 \cdot V_p + |V_{bias}| + 0.5 \cdot V_{offset} \leq 4 \text{ V}$

Where:

- V_p is the output voltage as set with the parameter [I/Q Level Vp EMF](#)
- V_{bias} is the bias voltage as set with the parameter [Bias \(EMF\)](#)
- V_{offset} is the offset between inverting and non-inverting output as set with the parameter [Offset \(EMF\)](#)

4.4 System configuration settings

The "System Configuration" dialog is the central point for the configuration of the signal flow. The provided settings assist you to fulfill your configuration tasks, like changing the selected MIMO mode or support you by connecting new devices to the baseband outputs.

The settings in this dialog comprise the fading configuration, the baseband source configuration, the mapping, and the processing of the generated I/Q streams. From this dialog, you can also control and configure the connections to instruments connected to the RF and I/Q connectors.

For a step-by-step description of how to use the provided settings, see [Chapter 4.9, "How to connect external instruments and configure the signal flow"](#), on page 193.

Required options

The equipment layout for the generation of **complex signals** ([Standard baseband](#)) includes:

- 2 options standard baseband generator (R&S SMW-B10)
(incl. digital interfaces CODER 1/2 per installed option)
- Option baseband main module, two I/Q paths to RF (R&S SMW-B13T)
- Up to four options fading simulator (R&S SMW-B14)
(incl. one digital interfaces FADER 1/2/3/4 per installed option)
- Option MIMO fading (R&S SMW-K74)
- Optional option higher-order MIMO (R&S SMW-K75)
- Optional option multiple entities (R&S SMW-K76)
- Optional option [Slow IQ](#) (R&S SMW-K551)
- Optional option steam extender (R&S SMW-K550)
- Optional option MIMO subsets (R&S SMW-K821)

The equipment layout for the output of **wideband digital I/Q signals** includes:

- 2 options wideband baseband generator (R&S SMW-B9)
(incl. digital interfaces CODER 1/2 and HS CODER 1/2 and per installed option)
- Option wideband baseband main module, two I/Q paths to RF (R&S SMW-B13XT)
- Up to four options fading simulator (R&S SMW-B15)
- Option wideband digital baseband outputs R&S SMW-K19

For description of the "Multi-Instrument" settings, see [Chapter 10.3.1.1, "Multi-instrument settings"](#), on page 671.

Settings:


- [Fading and baseband configuration settings](#)..... 127
- [I/Q stream mapper settings](#)..... 135
- [External RF and I/Q settings](#)..... 137
- [Overview](#)..... 155

4.4.1 Fading and baseband configuration settings

Access:

- Use one of the following:
 - Select "Taskbar > System Config > System Configuration > Fading/Baseband Config"
 - Select "Block Diagram > Fading > System Configuration > Fading/Baseband Config"
 - Select "Block Diagram > I/Q Stream Mapper > System Configuration > Fading/Baseband Config"
 - On the instrument front panel, press [SETUP].
Select "System Configuration > Fading/Baseband Config"

The dialog comprises the settings required to configure the signal routing up to the "I/Q Stream Mapper". A *preview diagram* shows a detailed view of the signal processing for the currently selected configuration, together with a short description of the possible application of this configuration.

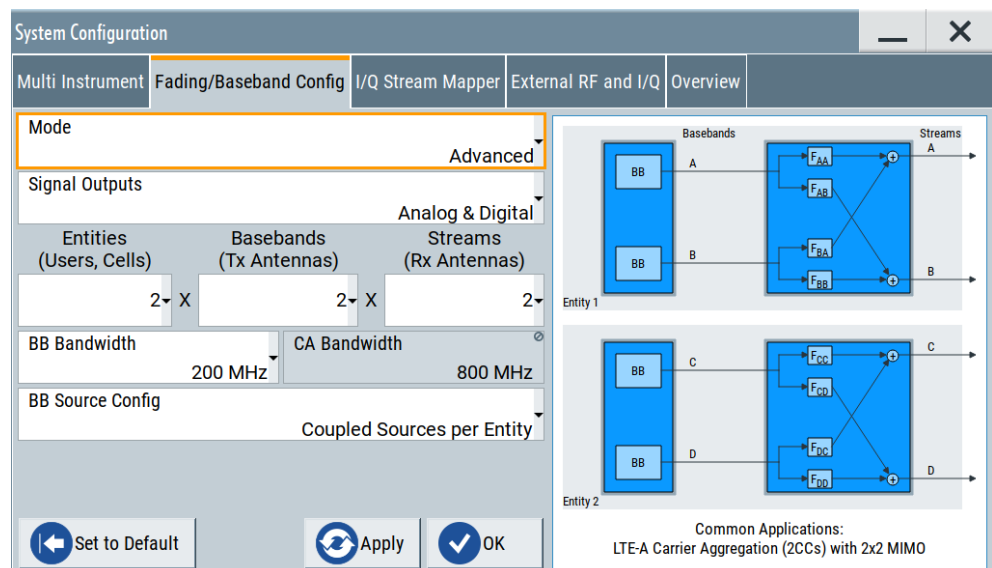

If you are familiar with other Rohde & Schwarz signal generators, like the R&S SMU, you expect that the block diagram displays the signal routing as it is done on the pre-view diagram. Consider, however, that if in "Fading/Baseband Configuration > Mode > Standard" this behavior is assured, for higher MIMO modes in "Mode > Advanced" the block diagram is an abstract representation of the configuration.



This section focuses on the settings available in the "System Configuration" dialog. For further details about the fading functionality, refer to the user manual "Fading Simulator".

For step-by-step description on how to use the provided settings, refer to [Chapter 4.9.3, "How to define the MIMO scenario"](#), on page 195.

Settings:

Mode.....	128
Signal Outputs.....	129
Signal Routing.....	130
System Configuration LxMxN.....	130
L Entities (Users, Cells).....	130
L BB Signals (Tx Antennas).....	131
L Streams (Rx Antennas).....	131
Subset.....	131
BB Bandwidth.....	132
CA Bandwidth.....	132
Baseband Source Config.....	132
Duplicate Streams.....	133
HS Channels per.....	133
Set to Default.....	134
Apply.....	134
Ok.....	134

Mode

Selects the system configuration modes.

Select "Apply" to apply settings that are specific to the selected system configuration mode.

- | | |
|-------------------------------|---|
| "Standard" | <p>Provided for non-MIMO configuration.</p> <p>If Wideband baseband is installed, wideband signals with a bandwidth of up to 2 GHz are generated.</p> |
| "Advanced" | <p>Depending on the <i>installed hardware and software options</i>, enables the configuration of:</p> <ul style="list-style-type: none"> • Complex MxN MIMO scenarios with up to 8 Tx or Rx antennas, e.g. 4x4, 2x8, or 8x2 MIMO • multiple entity scenarios with up to four standalone 2x2 MIMO systems, e.g. 4x2x2 scenarios • Up to 8 SISO systems, e.g. 8x1x1 scenarios <p>See also:</p> <ul style="list-style-type: none"> • Chapter 4.9.3, "How to define the MIMO scenario", on page 195 • Chapter 4.9.8, "How to generate a 2x8 MIMO signal for BS tests", on page 214 • Data sheet |
| "Radar Echo Generation (REG)" | <p>Requires R&S SMW-K78.</p> <p>Enables the R&S SMW to work as a radar echo generator. The fading simulator is disabled.</p> <p>See user manual R&S®SMW-K78 Radar Echo Generation.</p> |
| "GNSS Advanced" | <p>Option: R&S SMW-B9</p> <p>Transforms the R&S SMW to a GNSS simulator. The fading simulator is disabled.</p> <p>See user manual R&S®SMW Satellite Navigation.</p> |

"Extended Sequencer Advanced"

Requires R&S SMW-B15/-K315.

Enables the R&S SMW to work in an advanced extended sequencer mode. The fading simulator, the AWGN, the BB input and all baseband digital standards are disabled.

See user manual R&S SMW-K501/-K502/-K503/-K504/-K315 Extended and Real-Time Sequencing, Real-Time Control Interface, Extended Pulse Rate, Permanent Emitters.

"Bandwidth Extension"

Requires R&S SMW-B9 and R&S SMW-555.

Enables the R&S SMW to generate RF signals with extended bandwidth. These signals typically have bandwidths above 2.4 GHz.

See the user manual R&S SMW-K555 Bandwidth Extension.

Remote command:

:SCONfiguration:MODE on page 988

Signal Outputs

Defines whether an analog and digital or digital only signal is generated.

The keyword (HS) indicates that the signal is routed to the HS DIG I/Q connectors. If this keyword is missing, the signal is routed to the DIG I/Q connectors.

Baseband generator	Mode	Signal Outputs	Description	Options
R&S SMW-B10	Standard	"Analog&Digital"	The instrument generates signals with high data rate. Generated streams can be mapped to the analog connectors and to the DIG I/Q interfaces.	
	Advanced	"Digital Only"	Baseband signal can only be output as digital signal at the DIG I/Q interfaces. The baseband signal cannot be routed to the RF and I/Q analog output. Analog signal generation is possible with external analog I/Q signals. Alternatively, you can generate continuous wave signals, analog modulated signals or RF signals in sweep or list mode.	R&S SMW-K18
	Advanced	"Digital Only Multiplexed"	R&S SMW can process up to 4 multiplexed streams received over the same connector. With options R&S SMW-B10 and R&S SMW-K551, the R&S SMW can also generate digital signals with reduced speed, depending on the device connected to the digital I/Q interfaces. The multiplexed streams are then mapped to the digital I/Q interfaces BBMM 1/2; the mapping is fixed.	R&S SMW-K18
R&S SMW-B9	Standard	"Analog Only"	Disables the digital outputs.	
		"Digital Only (HS)"	Works like "Digital Only" in Standard baseband but the baseband signal is output at the HS DIG I/Q interface.	R&S SMW-K19
	Advanced	"Analog&Digital"	Generated streams can be mapped to the analog connectors and to the DIG I/Q interfaces.	

Baseband generator	Mode	Signal Outputs	Description	Options
		"Digital Only (HS)"	Works like "Digital Only" in Standard baseband but the baseband signal is output at the HS DIG I/Q interface.	R&S SMW-K19
		"Analog&Digital (HS)"	Generated streams can be mapped to the analog connectors and to the HS DIG I/Q interfaces.	R&S SMW-K19

See user manual R&S SMW-K551 Generation of Digital "Slow IQ" Signals.

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Remote command:

[:SCONfiguration:OUTPut:MODE](#) on page 989

Signal Routing

Option: R&S SMW-B10

Defines the signal routing in *non-MIMO Standard mode*. In a fully equipped [Standard baseband](#) instrument, the following configurations are available:

- "A->A, B->B"
- "A->A, B->A"
- "A->B, B->B"
- "A->A and B, A->A and B"
- "B->A and B, B-> (open)"
- "A-> (open), B->A and B"

The preview diagram displays the signal routing for the selected configuration.

Execute "Apply" to trigger the instrument to adopt the current configuration.

Remote command:

[:SCONfiguration:FADing](#) on page 990

System Configuration LxMxN

In [Advanced mode](#), the signal routing, i.e. the fading/baseband configuration LxMxN is determined by three parameters, "Entities", "BB Signals", and "Streams". The available configurations depend on the installed hardware and software options (see data sheet).

Note: The RF outputs are disabled, if you apply new [System Configuration LxMxN](#) and/or change the [Baseband Source Config](#).

Entities (Users, Cells) ← System Configuration LxMxN

Defines the number of entities to be generated.

An entity is a *self-contained independent system*, consisting of its own baseband part with possible fading simulator and noise generator and an RF part. An example of an entity is a user/mobile station or a cell/base station in one digital standard (e.g. 3GPP FDD, EUTRA/LTE, etc.). The R&S SMW can generate the signals of up to 8 entities.

The [Table 4-6](#) shows the interdependency between the number of entities (L), the number of baseband signals (M) and the number of streams (N).

Table 4-6: Available value ranges and allowed combinations

Number of entities (L)	Number of base-bands (Tx antennas) (M)	Number of streams (Rx antennas) (N)	Baseband Source Config
1	1 to 4	1 to 4	Separate, coupled
1	8	1, 2	Coupled
1	1, 2	8	Separate, coupled
1	8	8	Coupled
2	1, 2	1 to 4	Separate, Coupled/Coupled per entity
2	1 to 4	1, 2	Coupled/Coupled per entity
3 to 4	1, 2	1, 2	Coupled/Coupled per entity
5 to 8	1	1	Coupled

See also "To simulate complex MxN MIMO scenarios using the "Fading and Baseband Configuration" settings" on page 196.

Tip: Use the "System Configuration > Overview" tab to visualize the current stream mapping to the output interfaces.

Remote command:

See :SCONfiguration:FADing on page 990

BB Signals (Tx Antennas) ← System Configuration LxMxN

Defines the number of baseband signals or Tx antennas to be simulated per entity. If one entity is enabled, the R&S SMW can generate the signal of up to 8 Tx antennas simultaneously (see Table 4-6).

Configurations with "BB Signals (Tx Antennas) > 4" are enabled only with internal baseband signal.

Note: Error message: "The selected configuration is not fully supported by the current firmware".

Some baseband and fading configurations require that the R&S SMW is equipped with hardware and software options or the selected configuration is not yet fully supported.

For more information, refer to the instrument's data sheet.

Remote command:

See :SCONfiguration:FADing on page 990

Streams (Rx Antennas) ← System Configuration LxMxN

Defines the number of streams or Rx antennas to be generated per entity. If one entity is enabled, the R&S SMW can generate the signal of up to 8 Rx antennas simultaneously (see Table 4-6).

Remote command:

See :SCONfiguration:FADing on page 990

Subset

Available if 1x8x8 or 1x4x4 configuration is selected.

Depending on the installed options, an 1x8x8 MIMO configuration or a 1x4x4 MIMO configuration with wider fading bandwidth can be generated by two R&S SMW signal generators or by a single instrument.

- "1", "2" Option: R&S SMW-B14/B15 and R&S SMW-K74/K75 + R&S SMW-K821, in 1x4x4 MIMO case also R&S SMW-K822
In a MIMO configuration with two R&S SMW signal generators, each of the instruments generates a subset of fading channels. For example, in an 1x8x8 MIMO configuration, 32 out of the total 64 fading channels.
This parameter defines which fading channels from the MIMO matrix are calculated by the selected instrument. The "Subset" selected in each of the two connected instrument has to be different.
See also [Chapter 4.9.9, "How to generate a 8x8 MIMO signal with two R&S SMW"](#), on page 215.
- "All" Option: R&S SMW-B14/B15 and R&S SMW-K74/K75
An 1x8x8 MIMO configuration is generated with a single R&S SMW.

Remote command:

[:SCONfiguration:MIMO:SUBSet](#) on page 991

BB Bandwidth

Requires R&S SMW-B15/-K822/-K823.

Sets the baseband signal bandwidth that the fading simulator supports.

The value range and the maximum available bandwidth depend on the installed options and the selected MIMO configuration.

For example:

- In MIMO configurations with fewer than 8 channels, the max. baseband bandwidth is 400 MHz.
- In MIMO configurations with fewer than 4 channels, the max. baseband bandwidth is 800 MHz.

For more information, see data sheet.

Remote command:

[:SCONfiguration:BBW](#) on page 991

CA Bandwidth

Option: R&S SMW-B15/-K822/-K823

Indicates the resulting channel aggregation (CA) bandwidth, calculated based on the MIMO configuration and the "BB Bandwidth".

The "CA Bandwidth" represents the signal bandwidth at the stream mapper.

For more information, see data sheet.

Remote command:

[:SCONfiguration:CABW?](#) on page 992

Baseband Source Config

Determines whether coupled or separated baseband sources are used (see ["Coupled or separate baseband sources"](#) on page 114).

Note: The RF outputs are disabled, if you apply new [System Configuration LxMxN](#) and/or change the [Baseband Source Config](#).

- "Separated" The signal in each baseband can be and has to be configured separately.
- Separated baseband sources are required, whenever the test scenario involves:
- A mixture of internally generated and externally supplied baseband signals
 - A mixture of internally generated signals according to different digital standards
- "Coupled/Coupled per Entity"
- All required baseband signals are generated out of the same baseband source. This mode is supported by the "EUTRA/LTE" and "IEEE802.11 WLAN" digital standards, by the "ARB" and by applying external digital baseband signals.
- Using coupled baseband sources is advantageous in complex test scenarios. These modes are enabled if a [System Configuration LxMxN](#) with $L > 1$ and/or $M > 1$ is selected.
- In LxMxN configuration with $L > 1$, the baseband sources can also be coupled per entity.

Remote command:

[:SCONfiguration:BASEband:SOURce](#) on page 991

Duplicate Streams

Option: R&S SMW-K550

This parameter is enabled in the configurations 3x1x1 and 4x1x1.

In a 3x1x1 configuration, for example, there are 3 basebands and 3 streams per default. The first two basebands can generate signals with real-time data sources.

If "Duplicate Streams" > "On", created is a copy of each stream after baseband / fading block. Generated are 6 streams; 4 of them can use real-time data sources, for example to ensure non-truncated PN sequences.

The pair of streams created out of the same baseband are identical, in terms of content, power level and frequency. The streams are treated as individual streams in terms of adding AWGN and shifting within the available RF bandwidth.

This feature is useful, if your test setup requires a combination of max 4 signals with real-time data source and 4 ARB signals. For example, for performing GSM AM suppression tests according to 3GPP TS 51.021, chapter 8.

See user manual R&S SMW-K550 Stream Extender.

Remote command:

[:SCONfiguration:DUPLicate\[:STReam\]](#) on page 993

HS Channels per

Option: R&S SMW-B9

Sets the number of channels per digital interface, where the total number of enabled channels on all HS DIG I/Q interfaces must not exceed 8.

Remote command:

[:SCONfiguration:DIQ:BBMM1:CHANnels](#) on page 992

[:SCONfiguration:DIQ:BBMM2:CHANnels](#) on page 992

Set to Default

Presets the signal routing in the baseband section and the fading configuration to the default state.

Note: Changing the system configuration triggers an instrument preset.

Remote command:

[:SCONfiguration:PRESet](#) on page 988

Apply

Triggers the instrument to adopt the selected configuration.

Note: Changing the system configuration triggers an instrument preset.

Note: The RF outputs are disabled, if you apply new [System Configuration LxMxN](#) and/or change the [Baseband Source Config](#).

Remote command:

[:SCONfiguration:APPLY](#) on page 993

Ok

Applies the configuration and exits the dialog.

Note: Changing the system configuration triggers an instrument preset.

Remote command:

[:SCONfiguration:APPLY](#) on page 993

4.4.2 I/Q stream mapper settings

Access:

- In the block diagram, select "I/Q Stream Mapper".

System Configuration										
Fading/Baseband Config			I/Q Stream Mapper		External RF and I/Q			Overview		
	Frequency Offs /Hz	Phase Offs /°	RF A	RF B	I/Q OUT 1	I/Q OUT 2	BBMM 1	BBMM 2	FAD 3	FAD 4
Stream A	-20 000 000.00	0.00	I				I			
Stream B	0.00	0.00		I				I		
Stream C	-20 000 000.00	0.00			I		I		I	
Stream D	0.00	0.00				I		I		I
Combination			Single	Single	Single	Single	Add	Add	Single	Single

Figure 4-7: I/Q Stream Mapper settings in a LxMxN configuration with four streams (standard baseband)

The dialog provides the settings for routing of the signal streams to the available output connectors, the analog RF and I/Q output, and the digital I/Q output connectors.

Meaning of the background colors:

- **Yellow:** Streams mapped to the RF, I/Q and the BBMM connectors can be added, possibly also frequency and phase shifted. At the BBMM connectors, streams can also be output multiplexed.
- **Gray:** The stream mapping to the FADER connectors is fixed. Only single streams can be mapped; frequency offset cannot be applied. If connect and control external instruments by the R&S SMW, the configured frequency offset applies to the RF signal of these instruments.

The settings are displayed in form of a stream matrix, where:

- The number of rows is equal to the number of the generated streams ("System Configuration > Fading/Baseband Configuration > Advanced Mode" and selected [Entities \(Users, Cells\)*Streams \(Rx Antennas\)](#))
- The column display only the available digital output interfaces ("System Configuration > External RF and I/Q > Direction > Out").

Settings:

f_{offset}, MHz	136
Phase Offset	136
Map Stream X to Connector	136
Combination Mode	137

f_{offset} , MHz

Option: R&S SMW-B9 - available if "Signal Outputs = Analog Only"

Sets an absolute frequency offset; streams routed to the RF, I/Q and BBMM connectors are shifted in the frequency domain.

Frequency offset is also applied to R&S SMBV and R&S SGT instruments connected to the FADER outputs.

Tip: Use this parameter:

- To shift the used frequency band in the RF frequency section without modifying the RF settings
- To separate streams in the frequency domain, if these streams are added and routed to the same output connector.

Note: The parameters "Baseband Offset" and "Frequency Offset" have different impact.

Both parameters shift the signal in the frequency domain, but only the f_{offset} affects the calculation of the "Doppler Shift".

If the fading simulator is used, do not apply a "Baseband Offset" but do use the "Frequency Offset" instead.

The value range depends on the following:

- Installed options (e.g. baseband generator and baseband extensions)
 - "System Config > Fading/Baseband Config" > [Mode](#)
 - "System Config > Fading/Baseband Config" > [Signal Outputs](#)
- For more information, see data sheet.

See also:

- "Fading Simulation" user manual, description of the parameter "Dedicated Frequency".
- ["Combination Mode"](#) on page 137.

Remote command:

[:SCONfiguration:OUTPut:MAPPING:STReam<st>:FOFFset](#) on page 995

Phase Offset

Option: R&S SMW-B9 - available if "Signal Outputs = Analog Only"

Sets the phase offset of the corresponding stream.

Remote command:

[:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset](#) on page 995

Map Stream X to Connector

The mapping of the generated streams to the output connectors is represented as a stream matrix. A blue circle at a matrix element routes the selected stream to the corresponding connector.

To map more than one stream to an output connector, enable the [Combination Mode](#).

The stream mapping to the FADER connectors is fixed.

Remote command:

[:SCONfiguration:OUTPut:MAPPING:RF<ch>:STReam<st>:STATe](#) on page 994

[:SCONfiguration:OUTPut:MAPPING:IQOutput<ch>:STReam<st>:STATe](#) on page 994

[:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:STReam<st>:STATe](#)

on page 994

[:SCONfiguration:OUTPut:MAPPING:FADer<ch>:STReam<st>:STATe](#)

on page 994

[:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:CHANnel<di>:STReam<st>:STATe](#) on page 994

Combination Mode

Defines the way that the streams are internally processed if multiple streams are routed to the same physical connector.

Tip: Use the parameter [f_{offset}](#), [MHz](#) to shift the frequency bands of the streams in the frequency domain.

- | | |
|----------|---|
| "Single" | One stream can be routed to several connectors but only one stream can be mapped on each connector. |
| "Add" | If you route more than one stream to the same RF, I/Q or BBMM connector, they are added equally weighted. |
| "Mux" | <p>Option: R&S SMW-K18</p> <p>Enables stream multiplexing at the digital connectors. The exact parameters are defined in the "Digital I/Q Output" dialog.</p> <p>Tip: This mode is useful to output the generated signals of a higher-order MIMO configuration at less digital connectors. The connected instrument must support stream multiplexing.</p> <p>See Chapter 4.7, "I/Q digital output settings", on page 175</p> |

Remote command:

[:SCONfiguration:OUTPut:MAPPING:RF<ch>:MODE](#) on page 994

[:SCONfiguration:OUTPut:MAPPING:IQOutput<ch>:MODE](#) on page 994

[:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:MODE](#) on page 994

[:SCONfiguration:OUTPut:MAPPING:FADer<ch>:MODE](#) on page 994

4.4.3 External RF and I/Q settings

A fully equipped R&S SMW can deliver up to 8 independent I/Q streams but can modulate only two of them to the RF domain using the internal RF paths. The remaining streams can be output at the analog or digital I/Q interfaces and led to the connected external RF signal generators.

With the settings in the "External RF and I/Q" tab, you can control external devices and instruments from the R&S SMW, if all prerequisites are fulfilled. See ["Prerequisites for control of external instruments from the R&S SMW"](#) on page 138.



Prerequisites for control of external instruments from the R&S SMW

The following connections between the R&S SMW and the external instruments are required:

- **Physical remote control connection** over LAN or USB
The remote control connection to the external instruments must be in status **connected**, see [Remote Connection Status](#).
- **Physical signal connection** for the digital or analog I/Q signal
- For the most test setups, the instruments must use a **common reference frequency signal**.

Suitable reference frequency signal sources are:

- An external common reference source
- The distributed reference frequency of the R&S SMW.

Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q".

	Dir	External Instrument	I/Q Conn	Rem Conn	Instrument Name	RF Coup	RF Frequency /Hz	RF Level /dBm	RF State
CODER 1	In	Config...							
CODER 2	In	Config...							
BBMM 1	Out	Config...			smbv	On	Δ: 20 000 000.00	Δ: 0.00	Off
BBMM 2	Out	Config...			sgt	On	Δ: 0.00	Δ: 0.00	Off
I/Q OUT 1	Out	Config...	Single Ended		sgs	On	Δ: -20 000 000.00	Δ: 0.00	Off
I/Q OUT 2	Out	Config...	Single Ended						
RF A	Out	Config...							
RF B	Out	Config...							

The dialog provides an overview of all available I/Q input and output connectors and comprises the settings necessary to establish the connection to the external instruments. Displayed is an overview of the currently connected external instruments together with relevant information like the connection status and the RF level and frequency that these external instruments use.

The dialog provides access to some additional short information on each of the connected instruments. It also provides a show connector function for an easy localization of the selected connector on the instrument front or rear panel.

For step-by-step description on how to use the provided settings, refer to:

- [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199

- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200

Settings:

- [Connections configuration and connection status overview settings](#)..... 139
- [External instrument configuration settings](#)..... 145

4.4.3.1 Connections configuration and connection status overview settings

Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q".

Settings:

Display	139
Auto Connect	139
Connect/Disconnect All Remote	140
Preset behavior: Keep connections to external instruments	140
Connector Name	141
Direction	141
External Instrument	142
I/Q Connection	143
Remote Connection Status	143
Instrument Name	144
RF Couple	144
(Delta) RF Frequency/ RF Level	145
RF State	145

Display

Filters the displayed connectors upon one of the following criteria:

"All Connectors"

No filter is applied.

"Mapped Connectors"

Displayed are only the connectors to which a stream is mapped.
(see ["Map Stream X to Connector"](#) on page 136).

Note: To prevent faults, use this filter before you further configure the external instruments.

"Input Connectors/Output Connectors"

Filters the display according to connector direction.

Remote command:

[:SCONfiguration:EXTernal:DISPlay](#) on page 998

Auto Connect

With enabled auto connect function, the instrument automatically detects connected external instruments and establishes the required connection.

If the "Auto Connect > Off", however, after a R&S SMW startup you have to revise the test setup and perform the following:

- Check whether the necessary connections between the R&S SMW and the external instruments are still existing.
- Prove that the remote control of the particular instruments is required.
- Trigger the [Connect All Remote](#) function.

Remote command:

[:SCONfiguration:EXTernal:ACONnect](#) on page 998

Connect/Disconnect All Remote

Triggers the instrument to:

- Establish the remote connections to all configured [External Instruments](#).
- To terminate all existing remote connections.
The external instruments are not removed from the list of external instruments.
Only the remote connection status changes.

Remote connection status can be toggled with the parameter [Remote Connection Status](#).

Note: Disconnecting the remote connection to an R&S SZU presets several RF parameters of the R&S SMW to their default value.

This preset applies in particular to the RF frequency and RF level; the RF output is deactivated.

Note:

External instruments connected to the R&S SMW are preset ([:DEVice:PRESet](#)) whenever:

- The connection to the external instrument is established or terminated ("Connect/Disconnect All Remote" or "Rem. Conn > On/Off")
- The R&S SMW is preset ([PRESET]).

To ensure that the remote connections to the external instruments will be automatically established after instrument's start-up or a reboot, set [Auto Connect](#) > "On".

See also:

- [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199
- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200.

Remote command:

[:SCONfiguration:EXTernal:REMOte:CONNect\[:ALL\]](#) on page 998

[:SCONfiguration:EXTernal:REMOte:DISConnect\[:ALL\]](#) on page 998

Preset behavior: Keep connections to external instruments

Sets the effect of R&S SMW preset ([PRESET] or *RST) on the following:

- The connection status between the instrument and the connected external instruments.
- The R&S SMW itself and the preset values.
- The connected instruments.

"Preset behavior..."	Off	On
R&S SMW and preset values	Standard R&S SMW preset See Table 11-1 .	Depends on the connected external instrument: <ul style="list-style-type: none"> R&S SZU <ul style="list-style-type: none"> RF = 60 GHz RF level = -30 dB RF > Off Otherwise, standard R&S SMW preset. For example, RF = 1 GHz Excluded from preset: <ul style="list-style-type: none"> "I/Q Output Type" See also See also
Connection status	Terminated ("Disconnect All Remote")	Unchanged
Connected instruments	External instrument preset (:DEVICE:PRESet)	External instrument preset

Remote command:

[:SCONfiguration:EXternal:PBEHAVIOUR](#) on page 998

Connector Name

Displays the connector name.

The dialog lists the connectors, required for the current "Fading and Baseband Configuration".

See also:

- [Chapter 4.3.1, "Physical location of the input and output interfaces"](#), on page 116
- [Chapter 4.4.1, "Fading and baseband configuration settings"](#), on page 127
- [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121

Remote command:

Via keyword in the SCPI syntax, e.g. `IQOutput`



Direction










Displays the connector direction as a color coded field.

Where:

- The direction is determined by the selected "Fading and Baseband Configuration".
- The color is determined by the configuration in the "I/Q Stream Mapping" dialog.

The following table gives an overview of the possible combinations and explains the used designations.

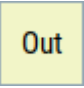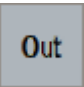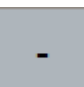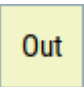Connector	Direction/ Color	Enabled in the "Fading and Baseband Configuration"	Enabled in the "I/Q Stream Mapping"
CODER		Yes	-
	Input Gray	Not used	-
FADER		Yes	-

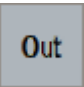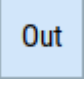Connector	Direction/ Color	Enabled in the "Fading and Base- band Configuration"	Enabled in the "I/Q Stream Mapping"
		Yes	Yes
		Yes	Not used
		Not used	Not used
BBMM		Yes	Yes
		Yes	Not used
I/Q		Yes	Yes
		Yes	Not used
RF		Not used	Yes
		Not used	Not used

Remote command:

`:SCONfiguration:EXtErnal:CODeR<ch>:DIRection?` on page 999

`:SCONfiguration:EXtErnal:FADeR<ch>:DIRection?` on page 999

`:SCONfiguration:EXtErnal:BBMM<ch>:DIRection?` on page 999

`:SCONfiguration:EXtErnal:IQOutput<ch>:DIRection?` on page 999

`:SCONfiguration:EXtErnal:RF<ch>:DIRection?` on page 999

External Instrument

Accesses a dialog with settings that help you to establish the connection to the external instruments, see [Chapter 4.4.3.2, "External instrument configuration settings"](#), on page 145.

Note:

Each external instrument must be connected via LAN or USB to the R&S SMW.

In most test setups, all instruments must use a common reference frequency signal, either from an external common reference source or using the distributed reference frequency of the R&S SMW.




See also:

- [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199
- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200.

I/Q Connection

Depends on the interface type.

- Analog I/Q interfaces:
Selects the type of the I/Q output signal
- Digital I/Q interfaces:
Indicates the status of the I/Q connection of the digital interfaces.
The indication includes a status LED and an icon, where the icon depends on the connector (DIG I/Q or HS DIG I/Q) used.

Indication	Designation
 green LED and an icon	The DIG I/Q/HS DIG I/Q interface is used as an input connector
 yellow LED and an icon	The DIG I/Q/HS DIG I/Q interface is used as an output connector
 icon without an LED	An external instrument is connected to the DIG I/Q interface, but no direction is specified
No icon displayed	No connection
"Single Ended"/"Differential"	Selects the type of the I/Q output signal at the I/Q output connector Works like the parameter " I/Q Output Type " on page 149.

Remote command:

[:SCONfiguration:EXternal:CODer<ch>:IQConnection:STATe?](#) on page 1000

[:SCONfiguration:EXternal:FADer<ch>:IQConnection:STATe?](#) on page 1000

[:SCONfiguration:EXternal:BBMM<ch>:IQConnection:STATe?](#) on page 1000

Remote Connection Status

Indicates the status of the remote connection. Click the status indicator to toggle the remote connection status.

To connect/disconnect all external instruments, use the functions [Connect/Disconnect All Remote](#).

Note:

External instruments connected to the R&S SMW are preset ([:DEvice:PRESet](#)) whenever:

- The connection to the external instrument is established or terminated ("Connect/Disconnect All Remote" or "Rem. Conn > On/Off")
- The R&S SMW is preset ([PRESET]).

Note: An active "Rem. Conn." and an "RF State > On" do not mean that an I/Q stream is mapped to this connector.

Use the "System Configuration > External Rf and I/Q > Display > Mapped Connectors" filter to list only the connectors with a mapped I/Q stream.

Remote command:

[:SCONfiguration:EXTernal:CODer<ch>:RCONnection:STATe? on page 1000](#)
[:SCONfiguration:EXTernal:CODer<ch>:REMote:DISConnect on page 1007](#)
[:SCONfiguration:EXTernal:CODer<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:FADer<ch>:RCONnection:STATe? on page 1000](#)
[:SCONfiguration:EXTernal:FADer<ch>:REMote:DISConnect on page 1007](#)
[:SCONfiguration:EXTernal:FADer<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:BBMM<ch>:RCONnection:STATe? on page 1000](#)
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:DISConnect on page 1007](#)
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:RCONnection:STATe? on page 1000](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:DISConnect on page 1007](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:INFO? on page 1007](#)
[:SCONfiguration:EXTernal:RF<ch>:RCONnection:STATe? on page 1000](#)
[:SCONfiguration:EXTernal:RF<ch>:REMote:DISConnect on page 1007](#)
[:SCONfiguration:EXTernal:RF<ch>:REMote:INFO? on page 1007](#)

Instrument Name

Displays useful information on the connected external instrument, like the instrument designation and the RF path the RF settings are coupled to.

Remote command:

[:SCONfiguration:EXTernal:CODer<ch>:INAME? on page 1000](#)
[:SCONfiguration:EXTernal:CODer<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:FADer<ch>:INAME? on page 1000](#)
[:SCONfiguration:EXTernal:FADer<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:BBMM<ch>:INAME? on page 1000](#)
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:INFO? on page 1006](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:INAME? on page 1000](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:INFO? on page 1007](#)
[:SCONfiguration:EXTernal:RF<ch>:INAME? on page 1000](#)
[:SCONfiguration:EXTernal:RF<ch>:REMote:INFO? on page 1007](#)

RF Couple

If enabled, this parameter couples all major RF setting (like the "RF Frequency", the "RF Level" and the "RF State") of the external instrument to the R&S SMW.

The R&S SMW acts as a primary instrument, i.e the external instruments synchronize their settings and the RF output state to the R&S SMW. You can apply delta frequency and level offset to the signal.

Remote command:

[:SCONfiguration:EXTernal:FADer<ch>:RF:COUpling on page 1001](#)
[:SCONfiguration:EXTernal:BBMM<ch>:RF:COUpling on page 1001](#)
[:SCONfiguration:EXTernal:IQOutput<ch>:RF:COUpling on page 1001](#)
[:SCONfiguration:EXTernal:RF<ch>:RF:COUpling on page 1001](#)

(Delta) RF Frequency/ RF Level

In uncoupled mode, sets the RF frequency and RF level of the external instrument.

With enabled "RF Coupled" parameter, applies a frequency and level offset. The RF frequency of the external instrument is calculated as follows:

$$RF_{ExtInstr} = RF_{Instrument} + \Delta_{Freq}$$

Both the RF frequency and the RF frequency offset are applied at the external instrument.

Remote command:

```
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQuency on page 1001
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQuency:OFFSet on page 1001
:SCONfiguration:EXTernal:FADer<ch>:RF:POWer on page 1002
:SCONfiguration:EXTernal:FADer<ch>:RF:POWer:OFFSet on page 1002
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQuency on page 1001
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQuency:OFFSet on page 1001
:SCONfiguration:EXTernal:BBMM<ch>:RF:POWer on page 1002
:SCONfiguration:EXTernal:BBMM<ch>:RF:POWer:OFFSet on page 1002
:SCONfiguration:EXTernal:IQOutput<ch>:RF:FREQuency on page 1001
:SCONfiguration:EXTernal:IQOutput<ch>:RF:FREQuency:OFFSet
on page 1001
:SCONfiguration:EXTernal:IQOutput<ch>:RF:POWer on page 1002
:SCONfiguration:EXTernal:IQOutput<ch>:RF:POWer:OFFSet on page 1002
:SCONfiguration:EXTernal:RF<ch>:RF:FREQuency on page 1001
:SCONfiguration:EXTernal:RF<ch>:RF:FREQuency:OFFSet on page 1001
:SCONfiguration:EXTernal:RF<ch>:RF:POWer on page 1002
:SCONfiguration:EXTernal:RF<ch>:RF:POWer:OFFSet on page 1002
```

RF State

With enabled "RF Coupled" parameter, displays the RF output state of the connected external instrument. The parameter is coupled to the state of the RF output of the R&S SMW.

In uncoupled mode, enables/disables the RF output in the external instrument.

Remote command:

```
:SCONfiguration:EXTernal:FADer<ch>:RF:STATe on page 1003
:SCONfiguration:EXTernal:BBMM<ch>:IQConnection:STATe? on page 1000
:SCONfiguration:EXTernal:IQOutput<ch>:RF:STATe on page 1003
:SCONfiguration:EXTernal:RF<ch>:RF:STATe on page 1003
```

4.4.3.2 External instrument configuration settings

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Navigate to the required connector.

Select "External Instruments > Config ...".

The "<Dig. Conn. Name>: External Instrument Configuration" dialog opens and displays the "External Instrument Configuration > Remote Config" settings.

The screenshot shows a software window titled "I/Q Out: External Instrument Configuration". It has three tabs: "Remote Config" (selected), "Remote Control", and "Show Connector". The "Remote Config" tab contains several sections. At the top, there are three buttons: "Scan" (with a circular arrow icon), "Clean Unused" (with an 'X' icon), and "Clean All" (with a left arrow icon). Below these is a section for "Instrument" configuration. It includes a dropdown menu for "External Instrument" (currently showing "New"), a text field for "Set Symbolic Name" (with a clear 'X' button), a dropdown for "Remote Channel" (set to "LAN"), and a dropdown for "RF Path" (set to "A"). Below this is a section for "Initialization Sequence ..." with a dropdown set to "None" and a clear button. At the bottom, there are two buttons: "Apply" (with a checkmark icon) and "Apply and Connect" (with a double arrow icon).

Settings:

Remote config settings.....	146
Remote control settings.....	151
Show connector.....	153
Check connections settings.....	154

Remote config settings

Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q > External Instruments > Config ...".

Settings:

Detect/Scan.....	147
Clean Unused/Clean All.....	147
External Instrument.....	148
Set Symbolic Name.....	148
Remote Channel.....	148
Hostname or IP Address.....	148
Device ID.....	149
RF Path.....	149
I/Q Output Type.....	149
Frontend Configuration.....	150
Initialization Sequence.....	150

Remove Initialization Sequence.....	150
Apply.....	150
Apply and Connect.....	151

Detect/Scan

If you connect an external instrument, you can fill in the required information in the "External Instrument Configuration" dialog manually or use one of the provided "Detect/Scan" functions. Both functions consider the connections via the supported interfaces, USB or LAN.

The parameter [External Instrument](#) lists the pool of available instruments.

Scans the network for connected supported instruments, like:

R&S SMW, R&S SMM, R&S SMBV100B, R&S SGS, R&S SGT, R&S SMBV, and R&S SZU

Note: The scan function searches throughout the entire network and can last several minutes.

Note: The first initialization of an instrument connected to a network can last several minutes. During their initialization, instruments are not detected by the detect/scan function.

"Detect" Searches for external instruments connected to this particular digital interface of the R&S SMW.

Remote command:

[:SCONfiguration:EXternal:CODer<ch>:REMOte:DETect?](#)

on page 1005

[:SCONfiguration:EXternal:FADer<ch>:REMOte:DETect?](#)

on page 1005

[:SCONfiguration:EXternal:BBMM<ch>:REMOte:DETect?](#)

on page 1005

"Scan" Scans the network for connected supported instruments, like:
R&S SMW, R&S SMM, R&S SMBV100B, R&S SGS, R&S SGT,
R&S SMBV, and R&S SZU

Note: The scan function searches throughout the entire network and can last several minutes.

Remote command:

[:SCONfiguration:EXternal:REMOte:SCAN](#) on page 1003

[:SCONfiguration:EXternal:REMOte:SCAN:STATe?](#)

on page 1003

Clean Unused/Clean All

Triggers the instrument to clean at once all unused LAN connections. This function allows you to retrieve a new pool of valid instruments.

The "Clean All" function removes all configured settings from the "External RF and I/Q". USB connections to external instruments are not affected.

Remote command:

[:SCONfiguration:EXternal:REMOte:PURGe](#) on page 1008

[:SCONfiguration:EXternal:REMOte:CLEan](#) on page 1008

External Instrument

Lists all available instruments, found by the [Detect/Scan](#) function.

To connect an external instrument, use one of the following:

- Enable "Select Instrument > New" and configure the settings manually
- Select "Select Instrument", navigate through the pool of available instruments, and select the required. The required settings are retrieved and updated automatically.

Select "None" to disable the connection.

Execute "Apply" to confirm the settings.

Remote command:

[:SCONfiguration:EXTernal:REMOte:LIST?](#) on page 1004
[:SCONfiguration:EXTernal:REMOte:ADD](#) on page 1004
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:FADer<ch>:REMOte:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:BBMM<ch>:REMOte:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:IQOutput<ch>:REMOte:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:RF<ch>:REMOte:ISElect](#) on page 1005

Set Symbolic Name

Sets the alias name of the instrument.

Remote command:

[:SCONfiguration:EXTernal:REMOte:ADD](#) on page 1004
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:FADer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:IQOutput<ch>:REMOte:INFO?](#) on page 1007
[:SCONfiguration:EXTernal:RF<ch>:REMOte:INFO?](#) on page 1007

Remote Channel

Selects the hardware channel (USB or LAN) used by the remote channel to the external instrument.

Remote command:

[:SCONfiguration:EXTernal:REMOte:ADD](#) on page 1004
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:FADer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:IQOutput<ch>:REMOte:INFO?](#) on page 1007
[:SCONfiguration:EXTernal:RF<ch>:REMOte:INFO?](#) on page 1007
[:SCONfiguration:EXTernal:RF<ch>:REMOte:INFO?](#) on page 1007

Hostname or IP Address

Displays/sets the hostname or IP address of the connected external instrument.

Remote command:

[:SCONfiguration:EXTernal:REMOte:ADD](#) on page 1004
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:FADer<ch>:REMOte:INFO?](#) on page 1006
[:SCONfiguration:EXTernal:CODer<ch>:REMOte:INFO?](#) on page 1006

[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:INFO?](#) on page 1007

[:SCONfiguration:EXTernal:RF<ch>:REMote:INFO?](#) on page 1007

Device ID

Sets/displays the device identifier that is a unique string with the following structure:

<frontend type>-<serial number>

For a defined "External Instrument", the information is read out automatically.

Remote command:

[:SCONfiguration:EXTernal:REMote:ADD](#) on page 1004

[:SCONfiguration:EXTernal:RF<ch>:REMote:INFO?](#) on page 1007

RF Path

In a two-path instrument, determines the RF output to be used.

Remote command:

[:SCONfiguration:EXTernal:REMote:ADD](#) on page 1004

[:SCONfiguration:EXTernal:CODer<ch>:REMote:INFO?](#) on page 1006

[:SCONfiguration:EXTernal:FADer<ch>:REMote:INFO?](#) on page 1006

[:SCONfiguration:EXTernal:CODer<ch>:REMote:INFO?](#) on page 1006

[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:INFO?](#) on page 1007

[:SCONfiguration:EXTernal:RF<ch>:REMote:INFO?](#) on page 1007

I/Q Output Type

Selects the type of output signal.

The provided parameters in the "I/Q Analog Outputs" dialog depend on the selected output mode.

- | | |
|----------------|---|
| "Single-Ended" | <ul style="list-style-type: none"> • If "RF Envelope > Off"
Single-ended output at the I/Q connectors.
Option: R&S SMW-B9: the signal from "I/Q Analog B" is output at the I Bar connectors.
See Figure 4-3 and Figure 4-4. • If "RF Envelope > On"
The envelope signal E is output at the I connectors.
You can define a bias between the output signal and ground. |
| "Differential" | <p>Option: R&S SMW-B10 and R&S SMW-K16
Or R&S SMW-B9 and R&S SMW-K17.</p> <ul style="list-style-type: none"> • If "RF Envelope > Off"
The analog I/Q signal components are output at the I/Q and I/Q Bar connectors.
See Figure 4-3 and Figure 4-4.
Option: R&S SMW-B9: the differential signal output can be activated in "I/Q Analog A" block only. Single-ended and differential signals cannot be output simultaneously. • If "RF Envelope > On"
The inverted envelope signal \bar{E} is output at the I Bar connectors. |

Remote command:

[\[:SOURce<hw>\]:IQ:OUTPut\[:ANALog\]:TYPE](#) on page 1223

Frontend Configuration

Requires R&S SMW-K553.

Accesses the "RF Frontend" dialog to configure settings of the connected external frontend.

For more information, see the document "R&S SMW-K553 Frontend Control User Manual".

Initialization Sequence

Accesses the standard "File Select" dialog for loading an existing initialization file (extension *.iec).

When you establish the connection to an external instrument, i.e. [Remote Connection Status](#) is active, the R&S SMW performs the following:

- Sends the command `:DEVIce:PRESet`
- Sends the content of the initialization sequence file to reconfigure the external instrument

If necessary, perform further settings and configuration of the external instruments.

Tip: Try out also the following:

- Send individual SCPI commands or a sequence of SCPI commands to the connected instruments or define your own initialization sequence and load the file
See ["To create a remote control sequence or modify the initialization sequence"](#) on page 205
- If you are configuring the R&S SMW remotely from a controller, try out to remote control the connected R&S SGS/R&S SGT via the R&S SMW.
See:
 - [Example"Controlling the R&S SMW and external RF instruments with the same application program"](#) on page 982
 - [Example"Connecting an external instrument and sending SCPI commands"](#) on page 985

Remote command:

`:SCONfiguration:EXTernal:REMOte:INITialization:CATalog?`

on page 1007

`:SCONfiguration:EXTernal:CODer<ch>:REMOte:INITialization:FILE`

on page 1008

`:SCONfiguration:EXTernal:FADer<ch>:REMOte:INITialization:FILE`

on page 1008

`:SCONfiguration:EXTernal:BBMM<ch>:REMOte:INITialization:FILE`

on page 1008

`:SCONfiguration:EXTernal:IQOutput<ch>:REMOte:INITialization:FILE`

on page 1008

`:SCONfiguration:EXTernal:RF<ch>:REMOte:INITialization:FILE`

on page 1008

Remove Initialization Sequence

Deletes the loaded sequence.

Apply

Confirms the settings and displays the external instrument in the "External RF and I/Q" dialog.

Remote command:

[:SCONfiguration:EXTernal:CODer<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:FADer<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:RF<ch>:REMote:ISElect](#) on page 1005

Apply and Connect

Confirms the settings and triggers the connection establishment. In the connected instruments, the status of this active remote connection is displayed by the "Remote" indication.

Remote command:


[:SCONfiguration:EXTernal:CODer<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:CODer<ch>:REMote:CONNECT](#) on page 1006
[:SCONfiguration:EXTernal:FADer<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:FADer<ch>:REMote:CONNECT](#) on page 1006
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:BBMM<ch>:REMote:CONNECT](#) on page 1006
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:CONNECT](#) on page 1006
[:SCONfiguration:EXTernal:RF<ch>:REMote:ISElect](#) on page 1005
[:SCONfiguration:EXTernal:RF<ch>:REMote:CONNECT](#) on page 1006

Remote control settings

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Navigate to the required connector.
Select "External Instruments > Config ...".

3. In the "<Dig. Conn. Name>: External Instrument Configuration" dialog, select "Remote Control".

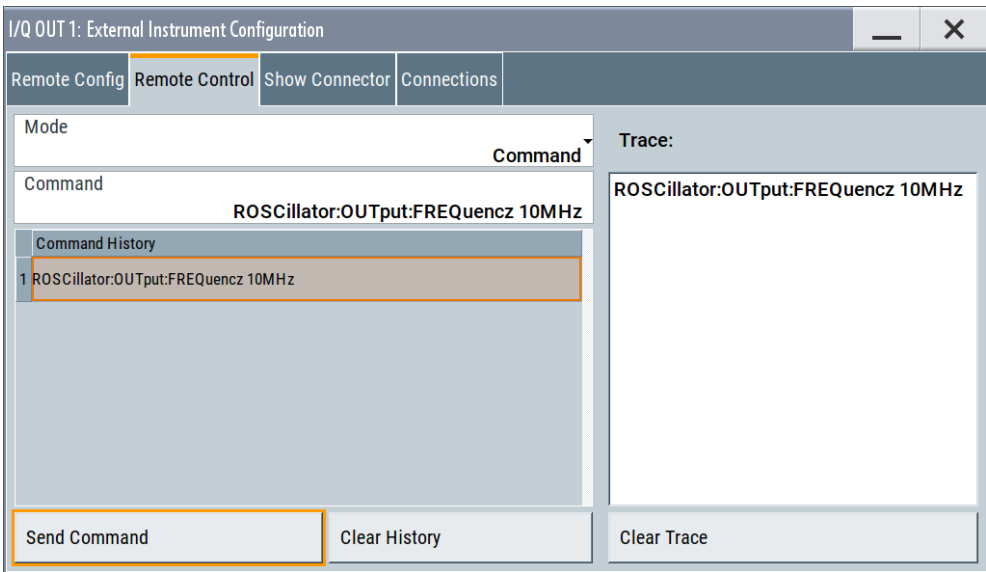

In this dialog, you can send individual SCPI commands or a sequence of SCPI commands to the connected instruments.

The sent commands and their results are displayed in the "Command Trace" field, as long as the trace is not deleted "Clear Trace". The sent commands are also listed in the "History" list. As long as this history list is not deleted ("Clear History"), you can select a command from the list and send it again.

See also:

- ["To create a remote control sequence or modify the initialization sequence"](#) on page 205
- [Example"Controlling the R&S SMW and external RF instruments with the same application program"](#) on page 982.

Settings:

Mode	152
Command, Send Command	152
File, Sequence, Send Sequence	153
History, Clear History	153
Commands Trace, Clear Trace	153

Mode

You can send a single command ("Command") or a command sequence ("Sequence") to the connected instrument.

Command, Send Command

Entry field for the SCPI commands.

You can enter a new command or select a previously sent command from the "History".

If the remote connection is active, select "Send Command" to execute the command.

Remote command:

[:SCONfiguration:EXTernal:CODer<ch>:REMote:SEND](#) on page 1008

[:SCONfiguration:EXTernal:BBMM<ch>:REMote:SEND](#) on page 1008

[:SCONfiguration:EXTernal:FADer<ch>:REMote:SEND](#) on page 1008

[:SCONfiguration:EXTernal:IQOutput<ch>:REMote:SEND](#) on page 1008

[:SCONfiguration:EXTernal:RF<ch>:REMote:SEND](#) on page 1008

File, Sequence, Send Sequence

Accesses the standard "File Select" dialog for loading of user-defined files with extension *.iec.

The provided navigation possibilities in the dialog are self-explanatory.

When a file is selected, its name and content are displayed, and the first command is selected. You can send the commands one by one ("Send Command") or send the entire sequence at once ("Send Sequence").

After a command is sent, the next command from the sequence is selected.

See also:

- ["To create a remote control sequence or modify the initialization sequence"](#) on page 205
- ["Initialization Sequence"](#) on page 150
- [Chapter 11.5.1, "File select settings"](#), on page 715.

History, Clear History

List of the sent commands.

As long as this history list is not cleared ("Clear History"), you can select a command from the list and send it again.

Commands Trace, Clear Trace

List of the sent commands and their results, where the results are displayed in blue color.

To delete the trace, select "Clear Trace".

Show connector

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Navigate to the required connector.
Select "External Instruments > Config ...".

3. In the "<Dig. Conn. Name>: External Instrument Configuration" dialog, select "Show Connector".



The dialog displays the location of the selected connector.

The "Show Connector" function triggers the instrument to identify the connector on the rear panel. The LED next to the selected connector blinks.

See also [Chapter 4.3.1, "Physical location of the input and output interfaces"](#), on page 116.


Check connections settings

This dialog is available if an R&S SZU is **configured and connected** to the R&S SMW, see ["To connect and configure an R&S SZU"](#) on page 206.

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Select "I/Q OUT x > External Instruments > Config ...".
3. In the "I/Q OUT x: External Instrument Configuration" dialog, select "Connections".

4. Select "Check Connection".

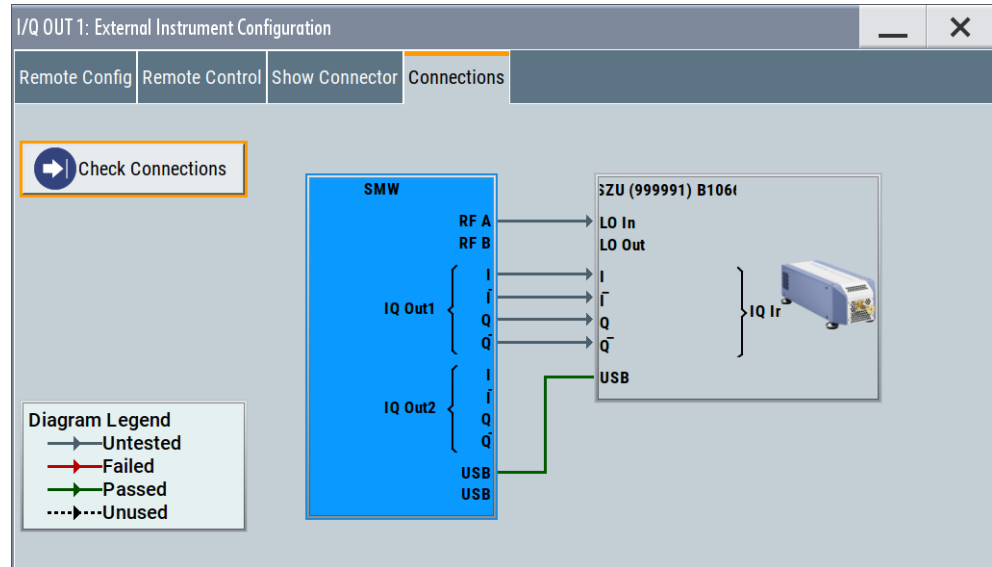

The dialog is a graphical representation of the required connections and their status. The connection status indication is color coded.

The dialog shows information on the following:

- Connection check status
- Signal connections status
- Remote control connections status

Remote command:

```
:SCONfiguration:EXTernal:IQOutput<ch>:CONNECTIONS:CHECK?
```

on page 1009


4.4.4 Overview

Access:

- To display an *interactive* overview diagram of the current configuration, select "System Configuration > Overview".

The overview tab shows information on the following:

- Current stream mapping to the output interfaces, see [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135.
- Connected controller (external PC).
- Connections for remote control of connected external I/Q and RF devices, see [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137
- Input and output signals, like:
 - LO coupling or used external reference frequency.
 - Connected external baseband source to the digital input interface.

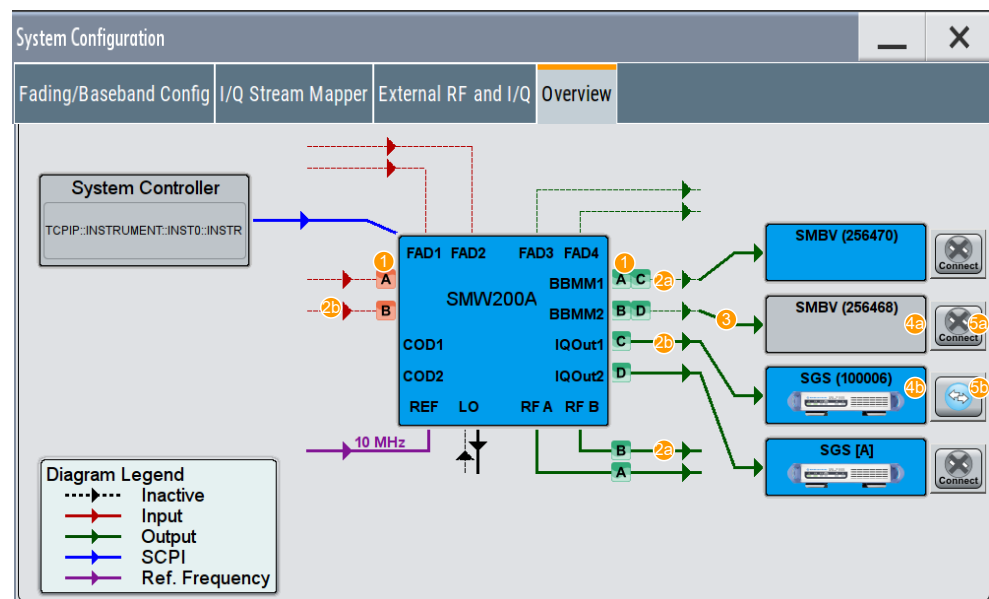

1 = I/Q streams mapped to the interfaces.

2a = State indication for the RF and digital/analog IQ outputs: active

2b = State indication for the RF and digital/analog IQ outputs: inactive

3 = External instrument configured in the "External RF and I/Q" dialog

4a = Gray background color: deactivated RF outputs of the external instrument

4b = Blue background color: activated RF outputs of the external instrument

5a = Remote connection state indicator: existing physical connection with disabled status

5b = Remote connection state indicator: external instrument connected to and operated from the R&S SMW

Compare the overview representation with the example configuration in [External RF and I/Q settings](#).

Hotspots for fast access to the required settings

Several of the displayed elements are hotspots. Select one of the elements listed in [Table 4-7](#) to access the related dialog.

Table 4-7: Hotspots in the Overview dialog

GUI element	Dialog	Refer to
"System Controller"	"Remote Access Settings"	See Chapter 13.5.6, "Remote connections settings" , on page 848
"COD 1/2" or the associated stream	"Baseband Input Settings"	See Chapter 4.6, "Digital baseband input settings" , on page 161
"IQ OUT1/2" or the associated stream	"I/Q Analog Outputs"	See Chapter 4.8, "I/Q analog output settings" , on page 186
"BBMM 1/2" "FAD 3/4" or the associated stream	"I/Q Digital Outputs"	See Chapter 4.7, "I/Q digital output settings" , on page 175

GUI element	Dialog	Refer to
"FAD 1/2" or the associated stream	Depends on the current configuration and whether the digital interface acts as input or as output: "Baseband Input Settings" "I/Q Digital Outputs"	See Chapter 4.6, "Digital baseband input settings" , on page 161 See Chapter 4.7, "I/Q digital output settings" , on page 175
"RF A/B" or the associated stream	"I/Q Modulator"	See Chapter 7.3, "I/Q modulator settings" , on page 470
Icon of a connected external instrument	"External Instrument Configuration"	See Chapter 4.4.3.2, "External instrument configuration settings" , on page 145
"REF"	"Ext. Reference"	See Chapter 8.8, "Reference oscillator" , on page 495.
"LO"	"LO Coupling"	See Chapter 8.9, "Local oscillator coupling" , on page 504

4.5 Signal routing settings

Required options

- 2 options Standard Baseband Generator (R&S SMW-B10)

Signal routing in standard mode

In [Standard mode](#), the signal routing settings are a routing possibility suitable for straightforward non-MIMO configurations. If you are familiar with other Rohde & Schwarz signal generators, e.g. the R&S SMU or R&S AMU, these settings provide a convenient way to configure the signal flow. Consider, however, that the number of the possible configurations is rather limited. To experience the whole routing performance of the instrument, use the more advanced configurations (see [Chapter 4.4, "System configuration settings"](#), on page 126).



Other possibilities to configure the signal flow

The "Signal Routing" settings are just one of several methods that you can use to configure the signal flow and route the signal throughout the instrument. Refer to [Chapter 4.2, "Possible ways to configure the signal flow"](#), on page 112 for an overview of all other ways and their common application fields.

In the default state of the instrument, i.e. in **"System Configuration > Mode = Standard"**, the baseband internal and external signals can be routed as defined in the [Table 4-8](#).

As shown in the table:

- The internal baseband signal can be introduced into path A, path B or both

- The external baseband signal of the first input module "BB Input A" can be fed into path A, path B or both
- The second baseband input module "BB Input B" is firmly connected to signal path B
- If internal signals from one or two paths are generated at the same time, all signals in each path are summed.

Table 4-8: Possible baseband signal routing combinations (default instrument state)

Block in the block diagram	To path A	To path B	To path A and B
"Baseband A"	X	X	X
"Baseband B"	X	X	X
"BB Input A"	X	X	X
"BB Input B"		X	



Interdependency between "Signal Routing" settings and "System Configuration" settings

The signal routing settings are enabled for the following configurations:

- "System Configuration > Mode = Standard"
- "System Configuration > Mode = Advanced" with maximum two "Separate Baseband Sources", e.g. in 1x2x2, 2x1x1 or 2x1x2 configurations
See also ["Short form representations of fading and baseband configurations"](#) on page 110.

For an overview of the signal routing possibilities of the faded baseband signal, refer to [Chapter 4.4.1, "Fading and baseband configuration settings"](#), on page 127.

Example: Baseband and fading signal routing in standard mode

The [Figure 4-8](#) shows an example of the signal flow for the following signal routing settings:

- "Baseband A > Signal Routing > route to path A and B"
- "Baseband B > Signal Routing > route to path A and B"
- "BB Input A > Signal Routing > route to path A and B"
- "BB Input B > Signal Routing > route to path B"
- "Fading > System Configuration > Mode = Standard > System Configuration > A to A and B, B to A and B"

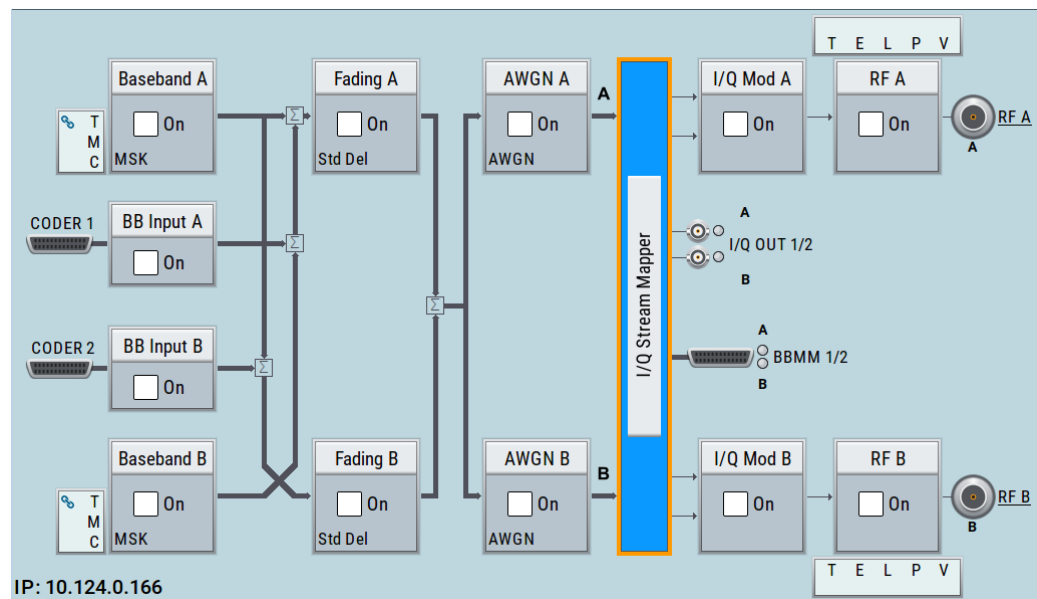


Figure 4-8: Example: Baseband and fading signal routing in standard mode

Example: Routing the signal of baseband A to the RF B output

The [Figure 4-9](#) shows an example of the signal flow for the following settings:

- "IQ Stream Mapper > Stream A to RF B"
- "Baseband A > State > On"
- "RF B > State On"

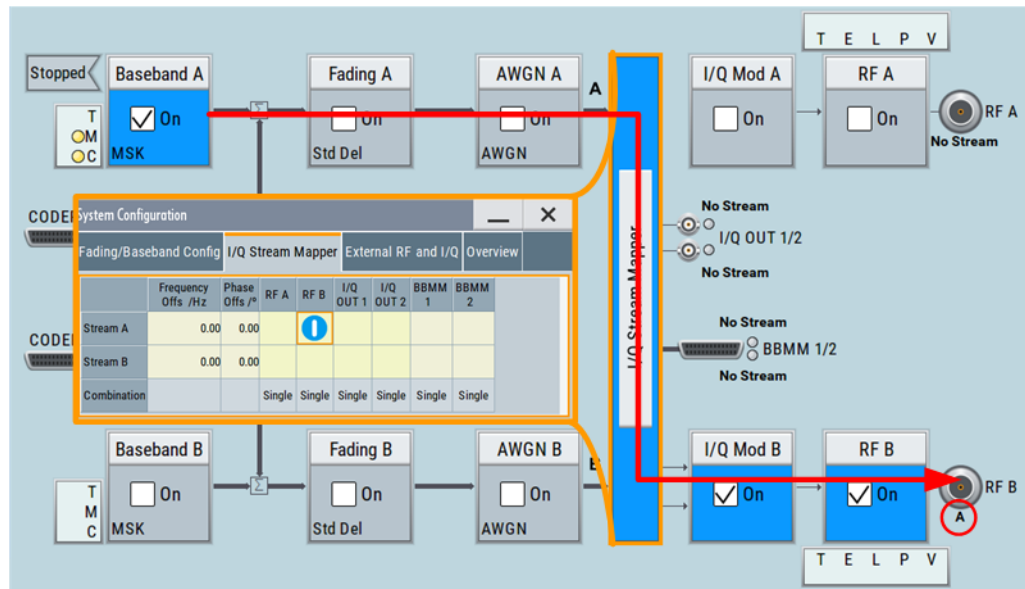


Figure 4-9: Example: Routing the signal of baseband A to the RF B output

Access:

- Use one of the following:
 - "Baseband A/B > Signal Routing"
 - "BB Input A/B > Signal Routing"
 - "Fading > Signal Routing"
 - "Taskbar > System Config > Mode = Standard > System Configuration"

Signal Routing	
<input checked="" type="checkbox"/> A → A	<input checked="" type="checkbox"/> B → B
<input type="checkbox"/> A → A	<input type="checkbox"/> B → A
<input type="checkbox"/> A → B	<input type="checkbox"/> B → B
<input type="checkbox"/> A → A and B	<input type="checkbox"/> B → A and B
<input type="checkbox"/> A → A and B	<input type="checkbox"/> B → (open)
<input type="checkbox"/> A → (open)	<input type="checkbox"/> B → A and B

Signal Routing

Requires R&S SMW-B10.

Defines the way the baseband signal (internally generated or externally provided) is routed in the instrument. When routing more than one signals to the same path, the signals are summed.

"Route to path A"

The internal or external baseband signal is routed to path A.

"Route to path B"

The internal or external baseband signal is routed to path B.

"Route to path A and B"

The internal or external baseband signal is routed to both paths.

Remote command:

`[:SOURce<hw>] :BB:ROUTe` on page 1061

`[:SOURce<hw>] :BBIN:ROUTe` on page 1061

4.6 Digital baseband input settings

The R&S SMW provides interfaces to feed an **external digital baseband signal** into the signal path.

Required Options

The equipment layout for applying an external baseband signal includes:

- Option standard or wideband baseband generator (R&S SMW-B10/-B9) per signal path (including one digital interface per installed option)
- Optional, option fading simulator (R&S SMW-B14) (including one digital interface per installed option)
- Optional, option customized digital input (R&S SMW-K556) per R&S SMW-B9 for input of wideband I/Q signals with configurable sample rate.

For more information, see data sheet.

The remote commands required to define these settings are described in [Chapter 14.19.2, "SOURce:BBIN subsystem"](#), on page 1028.

- [Baseband input settings in the standard baseband generator](#)..... 162
- [Baseband input settings in the wideband baseband generator](#)..... 169

4.6.1 Baseband input settings in the standard baseband generator

Option: R&S SMW-B10

To access and configure the "Baseband Input Settings" (Standard baseband instrument)

The **"BB Input"** block provides access to the settings for signal routing, frequency offset and path gain, and to the available configuration parameters of the external signal.

The digital baseband input interfaces **DIG I/Q** are located on the R&S SMW rear panel, see [Chapter 4.3.1, "Physical location of the input and output interfaces"](#), on page 116.

In the default instrument state, the block diagram displays the connector in an unfolded state. The digital input interfaces are inactive (gray LEDs).

1. To display the "BB Input" block, select the symbol "CODER 1/2".


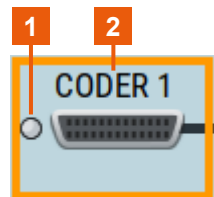


Figure 4-10: Representation of the digital baseband input interface DIG I/Q

1 = Digital input interface state: gray = inactive; blue = active
2 = Connector name

2. To access the routing settings, select "BB Input" > "Signal Routing".
See [Chapter 4, "Signal routing and system configuration"](#), on page 108.
3. To access the frequency offset and path gain settings, select "BB Input" > "Baseband Offsets".
See [Chapter 5.14, "Shifting and boosting the baseband signal"](#), on page 428.
4. To access the dialog box for configuring the external signal input depending on the current "System Configuration" > "Fading/Baseband Config", select "BB Input" > "Baseband Input Settings".

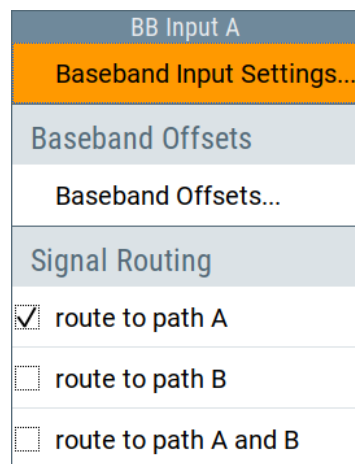

The "Baseband Input Settings" dialog provides settings necessary to define the used connector, and to adjust the signal parameters, like the sample rate and the baseband input level.

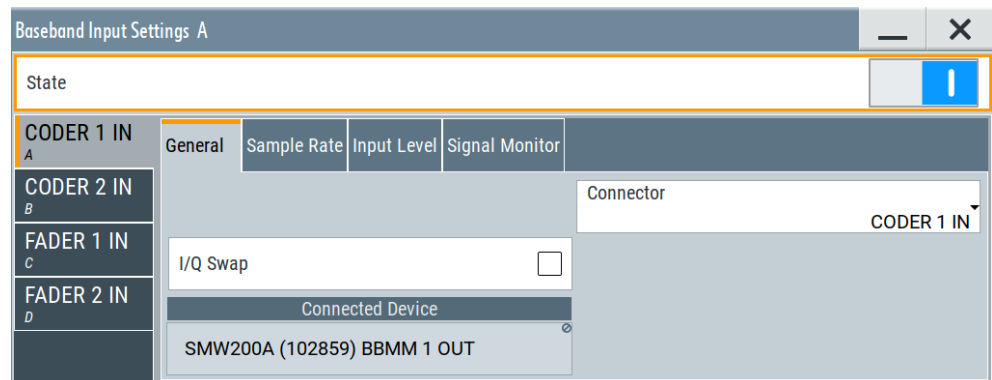


Figure 4-11: Example: Baseband Input Settings in 1x4x4 configuration (standard baseband)

If the current instrument configuration uses **Coupled sources**, the dialog consists of **up to four side tabs**, whereas the number of tabs corresponds to the number of selected **BB Signals (Tx Antennas)**. The tab name displays the baseband that the settings are related to and the connector the digital input signal is provided at.

- To enable the input signal, select "BB Input" > "On".

Settings:


- [General settings](#)..... 163
- [Sample rate settings](#)..... 165
- [Input level settings](#)..... 166
- [Signal monitoring settings](#)..... 168

4.6.1.1 General settings

Option: R&S SMW-B10

Access:

- Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings".

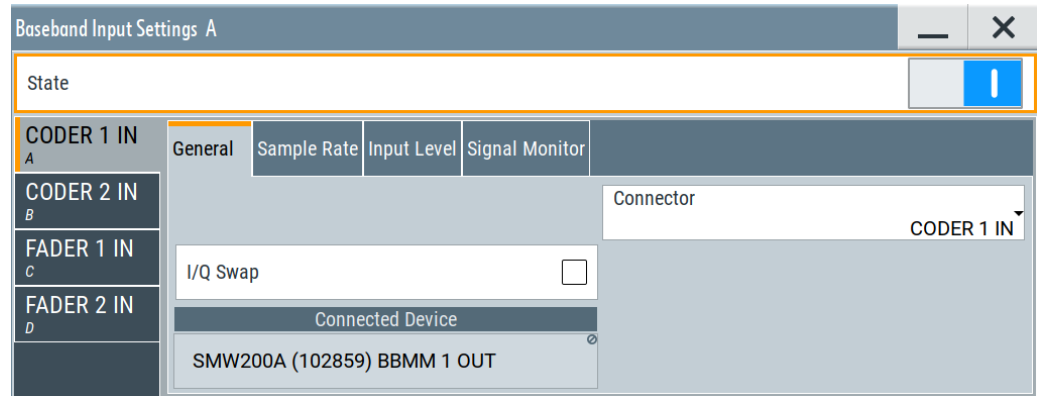

Settings:

State.....	164
Connector.....	164
I/Q Swap.....	164
Connected Device.....	165

State

Enables the feeding of the selected external digital signals into the baseband.

Remote command:

[:SOURce<hw>] :BBIN:STATe on page 1031

Connector

Defines the connector used as an external signal source.

Available are all digital input connectors, as defined with "System Configuration" > "External RF and I/Q" > "Direction" > "Input". See "Direction" on page 141.

"FADER 1 IN"/"FADER 2 IN"

Option: R&S SMW-B14

Remote command:

[:SOURce<hw>] :BBIN:DIGital:SOURce on page 1031

I/Q Swap

Option: R&S SMW-B10

Activates swapping of the I and Q signal components, see "I/Q Swap" on page 472.

Tip: The I/Q swap is required in test setups, like for example, if an external CDMA2000® or 1xEV-DO signal is added to an internally generated baseband signal.

See also:

- Description "CDMA2000® incl. EV-DV Digital Standard for R&S SMW"
- Description "1xEV-DO Rev. A, Rev. B Digital Standard for R&S SMW"

Remote command:

[:SOURce<hw>] :BBIN:IQSWap [:STATe] on page 1034

Connected Device

If the connection to the external device is properly established and signal transmission is active, this parameter displays information on the instrument connected to the DIG I/Q interface:

- Name, serial number and port of the connected instrument
- The transmitter sample rate, if supported by the transmitter

"None" indicates that no device is connected.


Remote command:
[:SOURce<hw>]:BBIN:CDEvice? on page 1032

4.6.1.2 Sample rate settings

Option: R&S SMW-B10

Access:

- Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings" > "Sample Rate".

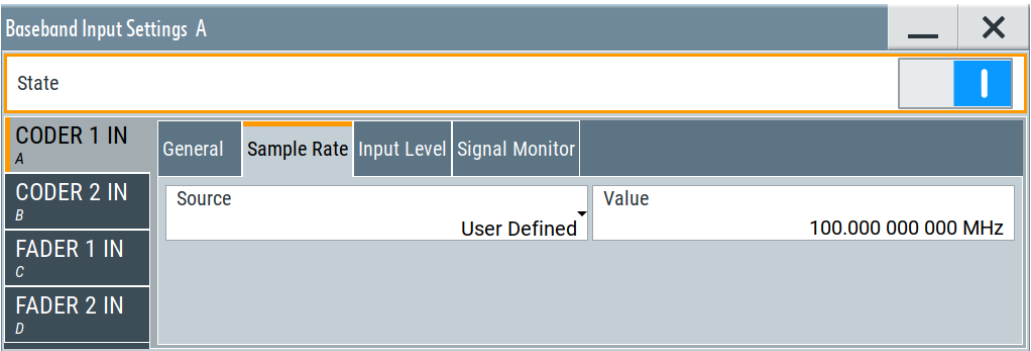

Settings:

Sample Rate Source.....	165
Sample Rate Value.....	166

Sample Rate Source

Selects whether the sample rate is estimated based on the digital input signal or is a manually entered value.

(See also [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121).

"Digital I/Q In"

For CODER connectors:
Estimates the sample rate based on the applied I/Q data clock and displays the resulting value in the value field. The I/Q data clock signal is fed via the DIG I/Q input.

Note: Estimation works best if the sample rate is close to the user-defined value.

"HS Digital I/Q In"

Option: R&S SMW-B9

Estimates the sample rate value based on the information transmitted by the transmitter.

Resulting value per channel is displayed by the parameter [Sample Rate](#).

"User Defined"

The sample rate is as defined the entry field value.

Note: An I/Q data clock is not necessary but the external signal source (typically a second Rohde & Schwarz Instrument). Also, the signal source instrument and the signal sink instrument receiving have to use common external reference signal.

Remote command:

[\[:SOURce<hw>\]:BBIN:SRATe:SOURce](#) on page 1034

Sample Rate Value

For DIG I/Q connectors, sets the sample rate of the external digital baseband input signal.

The max. sample rate depends on the connected transmitting device.

Remote command:


[\[:SOURce<hw>\]:BBIN:SRATe\[:ACTual\]](#) on page 1036

4.6.1.3 Input level settings

Option: R&S SMW-B10

Access:

- Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings" > "Input Level".

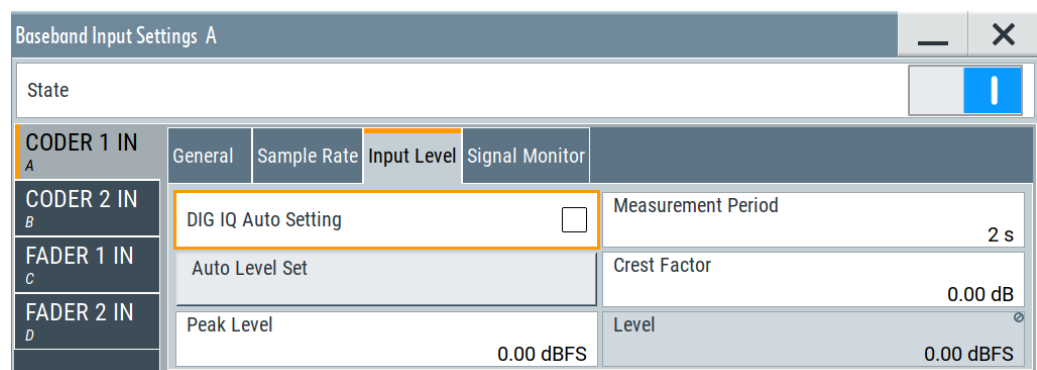**Settings:**

DIG IQ Auto Setting	167
Measurement Period	167
Auto Level Set	167

Crest Factor.....	167
Peak Level.....	167
Level.....	167

DIG IQ Auto Setting

Activates an automatic adjustment of the baseband input signal.

The R&S SMW receives peak level, level and crest factor values directly from the connected transmitter and recognizes changes automatically.

Remote command:

`[:SOURce<hw>] :BBIN:DIGital:ASETting:STATe` on page 1036

Measurement Period

For CODER connectors:

Sets the recording duration for measuring the baseband input signal by "Auto Level Set".

Note: For accurate level measurements, set the measurement period to a time value that is long enough to capture several periods of the input signal.

Remote command:

`[:SOURce<hw>] :BBIN:MPERiod` on page 1036

Auto Level Set

For CODER connectors:

Starts measuring the input signal for estimating the crest factor, the peak level, and the Level of the input signal.

See also ["Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal"](#) on page 123.

Remote command:

`[:SOURce<hw>] :BBIN:ALEvel:EXECute` on page 1037

Crest Factor

Indicates the crest factor of the external baseband signal.

See also [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121.

Remote command:

`[:SOURce<hw>] :BBIN:POWer:CFACTOR` on page 1037

Peak Level

Indicates the peak level of the external baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

See also [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121.

Remote command:

`[:SOURce<hw>] :BBIN:POWer:PEAK` on page 1037

Level


Indicates the estimated RMS level acquired with "Auto Level Set".

Remote command:
[:SOURce<hw>]:BBIN:POWer:RMS? on page 1038

4.6.1.4 Signal monitoring settings

Option: R&S SMW-B10

Access:
► Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings" > "Signal Monitor".

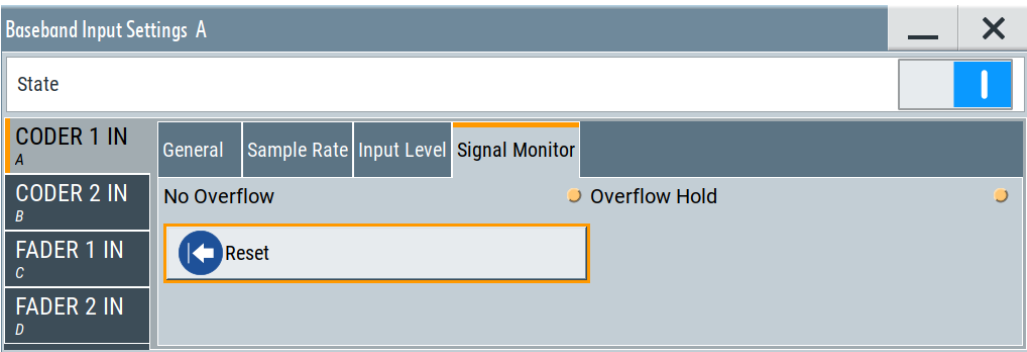

Settings:	
Signal Monitoring.....	168

Signal Monitoring

The R&S SMW monitors constantly the input signal (crest factor and peak level) and indicates an overflow status, if the selected "Peak Level" (in dB full scale) value does not correspond with the real value.

Note: The overflow status is indicated as long as the "Peak Level" value is not corrected.

To avoid overflow effects, enable automatic measurement with the "Auto Level Set" function.

"Overflow/No Overflow"

Indicates whether the input is overloaded or not. An additional indication is displayed in the block diagram close to the corresponding connector.

Remote command:
[:SOURce<hw>]:BBIN:OLOad:STATe? on page 1038

"Overflow Hold"

Indicates an overload since the last reset for evaluating the measurement.

To reset the state, use one of the following:

- Select "Reset"
- Start a new measurement with the "Auto Level Set" function
- Change the value of one of the monitored parameters.

Remote command:

`[:SOURce<hw>] :BBIN:OLOad:HOLD:STATe?` on page 1038

"Reset"

Resets the "Overload Hold" indication.

Remote command:

`[:SOURce<hw>] :BBIN:OLOad:HOLD:STATe?` on page 1038

4.6.2 Baseband input settings in the wideband baseband generator

Option: R&S SMW-B9

To access and configure the "Baseband Input" settings

The "BB Input" block provides access to the settings for frequency offset and path gain, and to the available configuration parameters of the external signal.

The digital baseband input interfaces **HS DIG I/Q** are located on the R&S SMW rear panel, see [Chapter 4.3.1, "Physical location of the input and output interfaces"](#), on page 116.

In the default instrument state, the block diagram displays the connector in an unfolded state. The digital input interfaces are inactive (gray LEDs).

1. To display the "BB Input" block, select the symbol "CODER 1"/"CODER 2".


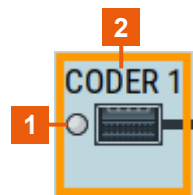


Figure 4-12: Representation of the digital baseband input interface HS DIG I/Q


1 = Digital input interface state: gray = inactive; blue = active

2 = Connector name

2. To access the dialog box for configuring the external signal input depending on the current "System Configuration" > "Fading/Baseband Config", select "BB Input" > "Baseband Input Settings".

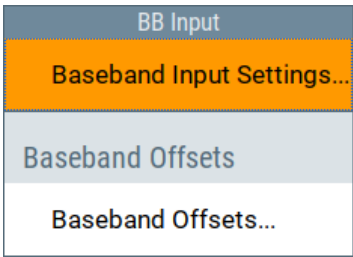

The dialog provides settings necessary to define the used connector, and to configure signal parameters, like the sample rate and the baseband input level.

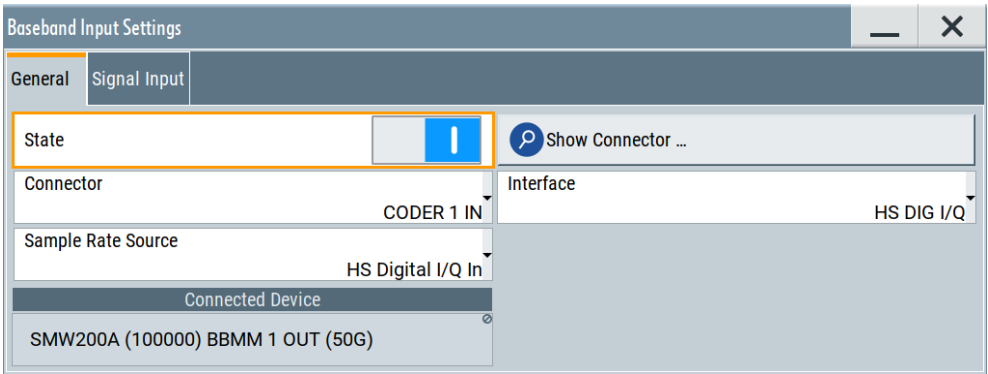

In this dialog, you access the **settings the HS DIG I/Q connector**. You recognize the type of connector that is active by the used **connector icon**.

3. To set the input connector, select "BB Input" > "Interface" > "HS DIG I/Q".
4. To enable the input signal, set "Baseband Input Settings" > "State" > "On".


Settings:

- [General settings](#)..... 170
 - [Signal input settings](#)..... 172

4.6.2.1 General settings

Access:

1. Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings".
2. Select "BB Input" > "Interface" > "HS DIG I/Q"

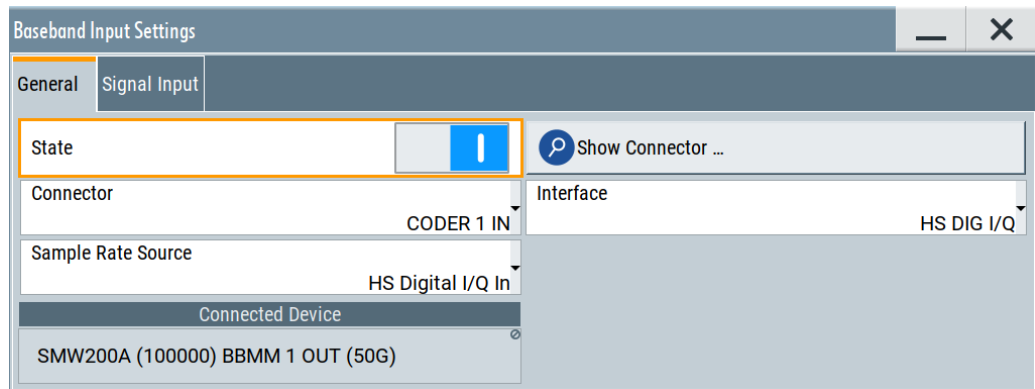**Settings:**

State.....	171
Connector.....	171
Interface.....	171
Sample Rate Source.....	171
Connected Device.....	172

State

Enables the feeding of the selected external digital signals into the baseband.

Remote command:

`[:SOURce<hw>] :BBIN:STATe` on page 1031

Connector

Defines the connector used as an external signal source.

Available are all digital input connectors, as defined with "System Configuration" > "External RF and I/Q" > "Direction" > "Input". See "[Direction](#)" on page 141.

"FADER 1 IN"/"FADER 2 IN"

Option: R&S SMW-B14

Remote command:

`[:SOURce<hw>] :BBIN:DIGital:SOURce` on page 1031

Interface

Option: R&S SMW-B9

Sets which of the digital interfaces is used, the DIG I/Q or the HS DIG I/Q.

Remote command:

`[:SOURce<hw>] :BBIN:DIGital:INTerface` on page 1031

Sample Rate Source

Selects whether the sample rate is estimated based on the digital input signal or is a manually entered value.

(See also [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121).

"Digital I/Q In"

For CODER connectors:

Estimates the sample rate based on the applied I/Q data clock and displays the resulting value in the value field. The I/Q data clock signal is fed via the DIG I/Q input.

Note: Estimation works best if the sample rate is close to the user-defined value.

"HS Digital I/Q In"

Option: R&S SMW-B9

Estimates the sample rate value based on the information transmitted by the transmitter.

Resulting value per channel is displayed by the parameter [Sample Rate](#).

"User Defined"

The sample rate is as defined the entry field value.

Note: An I/Q data clock is not necessary but the external signal source (typically a second Rohde & Schwarz Instrument). Also, the signal source instrument and the signal sink instrument receiving have to use common external reference signal.

Remote command:

[\[:SOURce<hw>\]:BBIN:SRATe:SOURce](#) on page 1034

Connected Device

If the connection to the external device is properly established and signal transmission is active, this parameter displays information on the instrument connected to the DIG I/Q interface:

- Name, serial number and port of the connected instrument
- The transmitter sample rate, if supported by the transmitter

"None" indicates that no device is connected.

Remote command:

[\[:SOURce<hw>\]:BBIN:CDEvice?](#) on page 1032

4.6.2.2 Signal input settings

Access:

1. Select "BB Input" > "Digital I/Q In" > "Baseband Input Settings".
2. Select "Interface" > "HS DIG I/Q".
3. Select "Signal Input".

Baseband Input Settings A

General **Signal Input**

	Name	Sample Rate / MHz	Crest Factor / dB	Peak Level / dBFS	Level / dBFS	BB
0	BBMM1_CH0	100.000 000 000	10.87	0.00	-10.87	
1	BBMM1_CH1	100.000 000 000	11.04	0.00	-11.04	
2	BBMM1_CH2	100.000 000 000	10.75	0.00	-10.75	
3	BBMM1_CH3	100.000 000 000	10.80	0.00	-10.80	

Aggregated Link Sample Rate (MHz): 100.00 / 1250.00

DIG IQ Auto Setting ☒

Measurement Period Auto Level Set

Figure 4-13: Signal Input settings in wideband baseband with separate BB sources

Settings:

Channel Table.....	173
L Number.....	173
L Name.....	173
L Sample Rate.....	173
L Crest Factor.....	174
L Peak Level.....	174
L Level.....	174
L BB.....	174
Aggregated Link Sample Rate.....	174
DIG IQ Auto Setting.....	174
Measurement Period.....	175
Auto Level Set.....	175

Channel Table

Displays information on the up to 8 digital channels per HS DIG I/Q interface:

Number ← Channel Table

Subsequent number.

Name ← Channel Table

Channel indication, set by the transmitter.

Remote command:

[:SOURce<hw>] :BBIN:CHANnel<ch0>:NAME on page 1032

Sample Rate ← Channel Table

Displays the used sample rate per channel.

Setting the sample rate requires R&S SMW-K556.

For information on the maximum sample rate and the aggregated link sample rate, see "Aggregated Link Sample Rate" on page 174.

Remote command:

`[:SOURce<hw>] :BBIN:CHANnel<ch0>:SRATe` on page 1033

Crest Factor ← Channel Table

If **DIG IQ Auto Setting** > "Off", sets the crest factor per channel.

Remote command:

`[:SOURce<hw>] :BBIN:CHANnel<ch0>:POWer:CFACtor` on page 1032

Peak Level ← Channel Table

If **DIG IQ Auto Setting** > "Off", sets the peak level per channel. The value is set as attenuation in digital baseband domain.

Remote command:

`[:SOURce<hw>] :BBIN:CHANnel<ch0>:POWer:PEAK` on page 1033

Level ← Channel Table

Indicates the level, set automatically depending on the selected peak level and crest factor.

Remote command:

`[:SOURce<hw>] :BBIN:CHANnel<ch0>:POWer:RMS` on page 1033

BB ← Channel Table

Activates the channel.

You can only activate one channel at a time. Toggle the state of the channel to test all channels one after another.

Remote command:

`[:SOURce<hw>] :BBIN:CHANnel<ch0>:BB:STATe` on page 1032

Aggregated Link Sample Rate

Indicates the aggregated sample rate and the maximum sample rate, where:

- The aggregated sample rate is the sum of the sample rates of all active channels. It cannot exceed the maximum sample rate.
- The R&S SMW supports two standard max. sample rate values. This parameter indicates the currently selected one, where the max. sample rate is selected depending on the capabilities of the transmitter/receiver.

For more information, see data sheet.

Remote command:

`[:SOURce<hw>] :BBIN:SRATe:SUM?` on page 1035

`[:SOURce<hw>] :BBIN:SRATe:MAX?` on page 1035

DIG IQ Auto Setting

Activates an automatic adjustment of the baseband input signal.

The R&S SMW receives peak level, level and crest factor values directly from the connected transmitter and recognizes changes automatically.

Remote command:

`[:SOURce<hw>] :BBIN:DIGital:ASETting:STATe` on page 1036

Measurement Period

For CODER connectors:

Sets the recording duration for measuring the baseband input signal by "Auto Level Set".

Note: For accurate level measurements, set the measurement period to a time value that is long enough to capture several periods of the input signal.

Remote command:

`[:SOURce<hw>] :BBIN:MPERiod` on page 1036

Auto Level Set

For CODER connectors:

Starts measuring the input signal for estimating the crest factor, the peak level, and the Revel of the input signal.

See also "[Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal](#)" on page 123.

Remote command:

`[:SOURce<hw>] :BBIN:ALEVel:EXECute` on page 1037

4.7 I/Q digital output settings

Required Options

The equipment layout for output of digital I/Q signal ([Standard baseband](#)) includes:

- Option standard baseband generator (R&S SMW-B10) per signal path (incl. one digital interface DIG I/Q per installed option) and option standard baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T)
- Up to two options digital baseband output (R&S SMW-K18) per required output
- Up to four options fading simulator (R&S SMW-B14) (incl. one digital interface DIG I/Q per installed option)

The equipment layout for the output of digital I/Q ([Wideband baseband](#)) includes:

- 2 options wideband baseband generator (R&S SMW-B9) (incl. digital interfaces DIG I/Q 1/2 and HS DIG I/Q 1/2 and per installed option)
- Option wideband baseband main module, two I/Q paths to RF (R&S SMW-B13XT)
- Up to four options fading simulator (R&S SMW-B15) (incl. one digital interface DIG I/Q per installed option)
- Up to two options wideband digital baseband outputs R&S SMW-K19

For more information, see data sheet.

To access and configure the "I/Q Digital Output" settings in "System Configuration > Mode > Standard"

The digital output connectors are located on the R&S SMW rear panel, see [Chapter 4.3.1, "Physical location of the input and output interfaces"](#), on page 116.

In the default instrument state ([Standard mode](#)), the block diagram displays the BBMM connectors in a folded state. The digital output interfaces are inactive (gray LEDs).

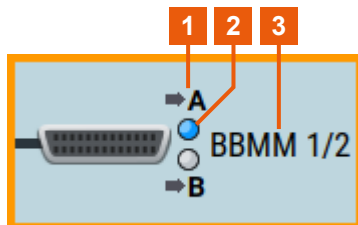


Figure 4-14: Representation of the digital output interface DIG I/Q in standard mode

- 1 = mapped I/Q stream
- 2 = digital output interface state: gray = inactive; blue = active
- 3 = digital output connector name

1. Select the "BBMM 1/2" symbol to unfold the "I/Q Digital" block.
2. In [Wideband baseband](#) instrument, you access the settings of both, the DIG I/Q and the HS DIG I/Q connectors in the same manner. You recognize the type of connector that is active by the used connector icon.
To change the output connector, select "System Config > Signal Outputs" = **"Analog & Digital (HS) or Digital Only (HS)"**.
3. To route or reroute the I/Q streams to the digital outputs, select the "I/Q Stream Mapper" block.
4. To enable the baseband signal at the digital outputs, select "Block Diagram > I/Q Digital A or B > I/Q Digital > On".
5. To access the dialog box for configuring the digital output signal, select "I/Q Digital > I/Q Digital Outputs".

To access and configure the "I/Q Digital Output" settings in "System Configuration > Mode > Advanced"

The digital output connectors are located on the R&S SMW rear panel, see [Figure 4-1](#).

In [Advanced mode](#), the block diagram displays all digital output interfaces as one common connector symbol in folded state. The digital output interfaces are inactive (gray LED).

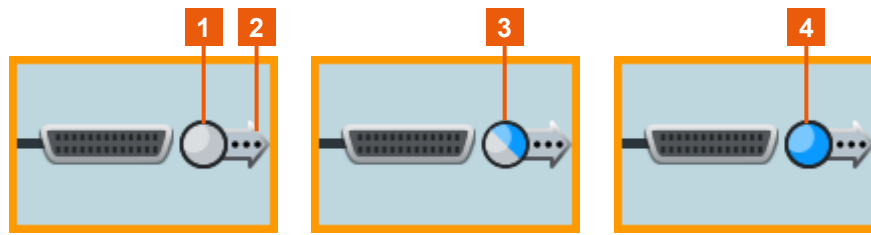


Figure 4-15: Folded view of digital output interface DIG I/Q in advanced mode

- 1 = digital output interface state: grey = all inactive
- 2 = more settings indication; select to unfold detailed information
- 3 = digital output interface state: half grey/blue = one interface active and one interface inactive
- 4 = digital output interface state: blue = all active

1. Select the connector icon to unfold the settings.

The unfolded view displays more information on mapped streams and configured connectors.

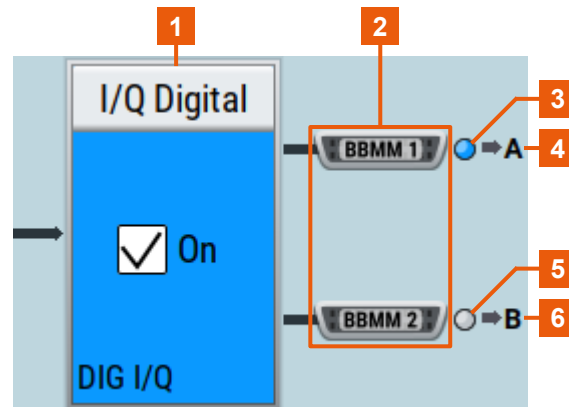


Figure 4-16: Unfolded view of digital output interface DIG I/Q in advanced mode

- 1 = I/Q digital output state: gray = inactive; blue = active
- 2 = digital connector name
- 3, 5 = digital output interface state: gray = inactive; blue = active
- 4, 6 = mapped I/Q streams

The indication and access to the settings of the HS DIG I/Q interfaces follow the same principle. Merely the connector indication changes.

Note: The number of the displayed digital output interfaces corresponds to the number of enabled [Streams \(Rx Antennas\)](#) in the "System Configuration > Fading/ Baseband Configuration" dialog.

2. To route or reroute the I/Q streams to the digital outputs, select the "I/Q Stream Mapper" block.
3. To enable the baseband signal at the digital outputs, select "Block Diagram > I/Q Digital > I/Q Digital > On".
4. To access the dialog box for configuring the digital output signal, select "I/Q Digital > I/Q Digital Outputs".

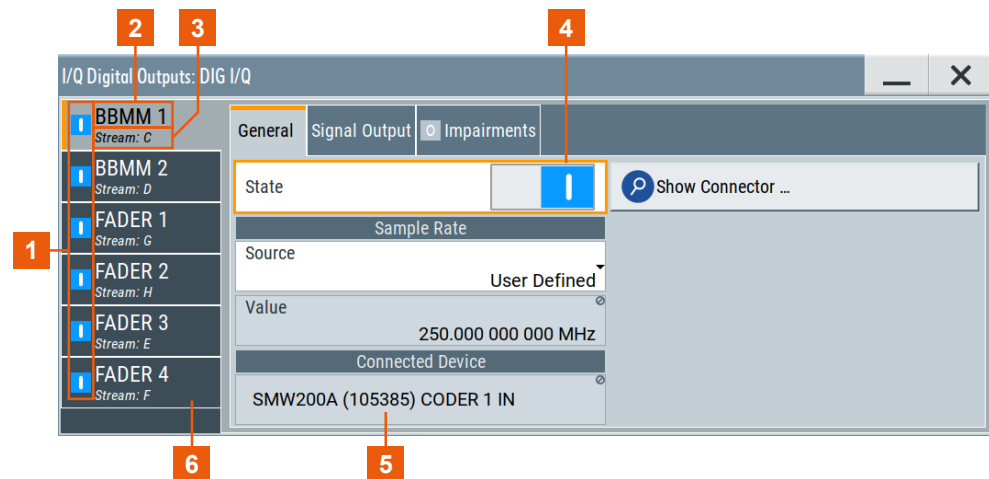


Figure 4-17: I/Q digital outputs: Understanding the displayed information (standard baseband)

- 1, 4 = State of the I/Q digital output
- 2 = Digital output interface name
- 3 = Mapped I/Q streams
- 5 = Indicates the connected instrument and digital output interface
- 6 = Side tabs: one tab per digital output

Using the "I/Q Stream Mapper" you defined which stream is routed to which output connector. The settings provided in the "I/Q Digital Outputs" dialog enable you to define how each stream is output at the digital output interface, for example digitally impaired or not.

If an R&S SGT is connected to the DIG I/Q digital interface, digital impairments like for example intended I/Q delays are applied in the connected instrument.

Refer to [Chapter 6.4, "Impairing the signal"](#), on page 460 for description of the impairments functionality.


In [Advanced mode](#), the dialog consists of more than one tabs on the side, whereas the number of tabs corresponds to the number of available digital output interfaces. The tab name displays the output interface the settings are related to and an overview information on the streams mapped to the particular connector.

5. To configure the connected external instruments, use the "System Config > System Configuration > External RF and I/Q" dialog.

4.7.1 General settings

Access:

- Select "I/Q Digital > I/Q Digital Outputs".

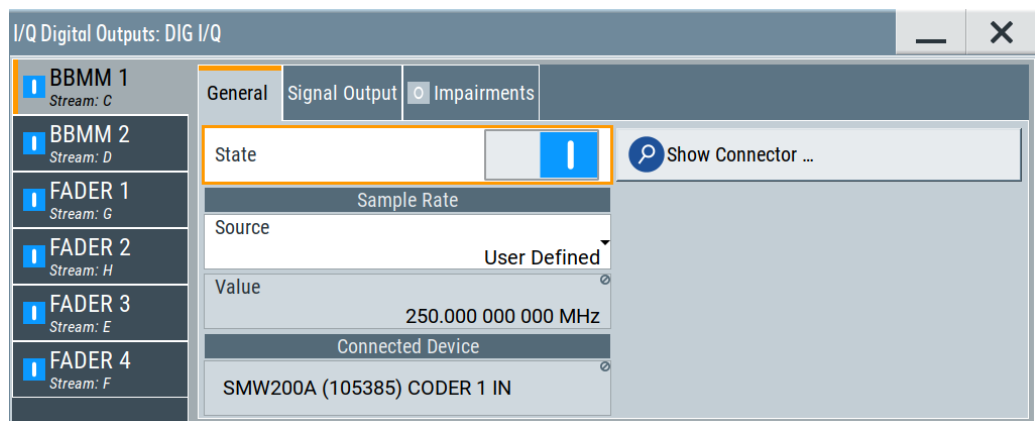

If an R&S SGT is connected to the DIG I/Q interface of the R&S SMW, several parameters set automatically.

Settings:

State.....	179
Show Connector.....	179
Sample Rate.....	179
L Slow IQ State.....	179
L Common to all Channels.....	180
L Source.....	180
L Value.....	180
Connected Device.....	180

State

Activates/deactivates the digital I/Q output.

Remote command:

[:SOURce] : IQ : OUTPut : DIGital : BBMM<ch> : STATE on page 1227

[:SOURce] : IQ : OUTPut : DIGital : FADer<ch> : STATE on page 1227



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Sample Rate

Comprises the sample rate parameters:

Slow IQ State ← Sample Rate

Option: R&S SMW-K551

If "Digital Only" or "Digital Only Multiplexed" signals are generated, this parameter shows whether a "Sample Clock Request" is enabled in the connected R&S EX-IQ-Box.

All digital outputs must work in the same mode, that is with "Slow IQ = On" or "Slow IQ = Off". You can change the state of any one of the outputs; the state of the other is set automatically.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:SLOW:STATe` on page 1228

Common to all Channels ← Sample Rate

Option: R&S SMW-B9/-K19

If enabled, the same sample rate value is applied to all channels, see [Chapter 4.7.2, "Channels settings"](#), on page 181.

Source ← Sample Rate

For DIG I/Q interfaces, selects whether the sample rate is estimated based on the digital signal or a manually entered value.

"User Defined" Enables you to define the sample rate in the entry field value. An I/Q data clock is not necessary.

"Digital I/Q Out"

Option: R&S SMW-B10

Estimates the sample rate based on the applied I/Q data clock and displays the resulting value in the "Value" field.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SOURce` on page 1228

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:SRATe:SOURce` on page 1228

Value ← Sample Rate

Sets/displays the sample rate of the digital I/Q output signal. The maximal sample rate depends on the connected receiving device.

If "Common to all Channels > On" is used, the same all digital channels are sampled with the same rate.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:SRATe` on page 1229

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:SRATe` on page 1229

Connected Device

If the connection to the external device is properly established and signal transmission is active, this parameter displays information on the instrument connected to the DIG I/Q interface:

- Name, serial number and port of the connected instrument
- The transmitter sample rate, if supported by the transmitter

"None" indicates that no device is connected.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:CDEvice?` on page 1230


`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:CDEvice?` on page 1230

4.7.2 Channels settings

Option: R&S SMW-B9/-K19

Access:

1. Select "System Config > Fading/Baseband Config > Signal Outputs" = **"Digital Only (HS)"**.
2. Set the number of channels per HS DIG I/Q interface, where the total number of channels on all interfaces cannot exceed eight.
For example, for "HS Channels per > BBMM1" set "Channels = 4".
3. Select "I/Q Digital > I/Q Digital Settings > Channels".

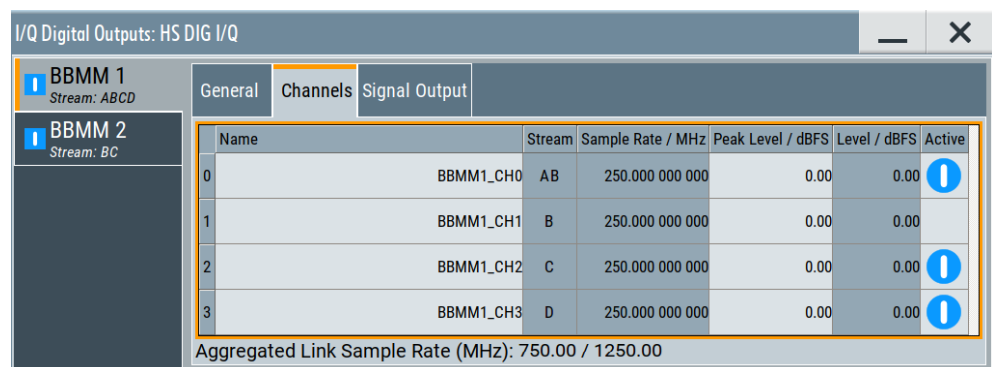

The dialog consists of two tabs on the side, of per digital output interface HS DIG I/Q. The tab name displays the output interface the settings are related to and an overview information on the streams mapped to the particular connector.

The channels are displayed in table form, where the number of rows corresponds to the number of channels per interface as set with the parameter **HS Channels per BBMMx**.

Number

Subsequent number.

Name

Sets the name of the channel of the used interface.

The default channels naming syntax is <interface name>_CH<channel number> but you can change it if necessary.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:NAME` on page 1233

Stream

Indicates the streams that are routed to the channel.

To change the routing, use the "I/Q Stream Mapper".

Sample Rate

Sets the sample rate per channel.

- If [Common to all Channels](#) > "Off", you can set the sample rate per channel individually.
- If [Common to all Channels](#) > "On", the value resembles the value set with the parameter [Value](#).

For information on the max. sample rate and the aggregated sample rate, depending on the number of active channels, observe the indication [Aggregated Link Sample Rate](#).

Tip: For tests at max. sample rate, set the sample rate per channel to the max. value and activate the channels one by one subsequently.

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Remote command:

[\[:SOURce\]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:SRATe](#)
on page 1234

Peak Level

Setting this parameter requires "Set Level Via > Peak Level".

Sets the peak level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Option: R&S SMW-B9/-K19

Parameter is read-only in the configuration "Mode > Advanced" and "Signal Outputs > Analog&Digital".

Remote command:

For the output signal at the DIG I/Q interfaces:

[\[:SOURce\]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:PEP](#) on page 1230

[\[:SOURce\]:IQ:OUTPut:DIGital:FADer<ch>:POWer:PEP](#) on page 1230

For the output signal of a channel of the HS DIG I/Q interfaces:

[\[:SOURce\]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP](#)
on page 1230

Level

Setting this parameter requires "Set Level Via > Level".

Sets the RMS level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Parameter is read-only in the following configurations:

- Option: R&S SMW-B10/-K18
"Signal Outputs > Digital Only Multiplexed"
- Option: R&S SMW-B9/-K19
"Mode > Advanced" and "Signal Outputs > Analog&Digital"

Remote command:

For the output signal at the DIG I/Q interfaces:

[\[:SOURce\]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:LEVel](#) on page 1231

[\[:SOURce\]:IQ:OUTPut:DIGital:FADer<ch>:POWer:LEVel](#) on page 1231

For the output signal of a channel of the HS DIG I/Q interfaces:

[\[:SOURce\]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel](#)
on page 1231

Active
 Activates the channel.
 Remote command:
 [:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:CHANnel<st0>:STATe
 on page 1235

Aggregated Link Sample Rate
 Indicates the aggregated sample rate and the maximum sample rate, where:

- The aggregated sample rate is the sum of the sample rates of all active channels. It cannot exceed the maximum sample rate.
- The R&S SMW supports two standard max. sample rate values.
 This parameter indicates the currently selected one, where the max. sample rate is selected depending on the capabilities of the transmitter/receiver.

 For more information, see data sheet.
 Remote command:
 [:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:SRATe:SUM? on page 1235
 [:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:SRATe:MAX? on page 1235


4.7.3 Signal output settings

Access:

▶ Select "I/Q Digital > I/Q Digital Settings > Signal Output".

 "User Variation" and "Group Delay Compensation" settings are not available, if:

- R&S SGT is connected to the DIG I/Q interface of the R&S SMW
- "Signal Outputs > Digital Only (HS)"

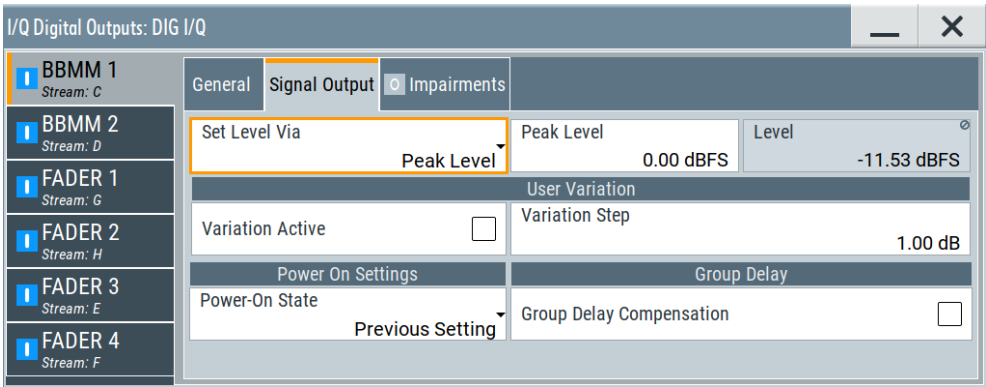

Settings:

Signal output level settings.....	184
L Set Level Via.....	184
L Peak Level.....	184
L Level.....	184
User Variation.....	185

Signal Monitoring.....	185
Power-On State.....	186
Group Delay Compensation.....	186

Signal output level settings

Comprises the level settings of the digital IQ output signal. The signal level is expressed as a peak or RMS level value.

If R&S SGT is connected to the DIG I/Q interface of the R&S SMW, the level parameters are set automatically.

Note: The "Level" display always refers to both signal components, i.e. $SQR(I^2+Q^2)$.

Set Level Via ← Signal output level settings

Selects whether the signal level is expressed as a peak or as RMS level value.

Parameter is read-only in the following configurations:

- Option: R&S SMW-B10/-K18
"Signal Outputs > Digital Only Multiplexed"
- Option: R&S SMW-B9/-K19
"Mode > Advanced" and "Signal Outputs > Analog&Digital"

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:POWer:VIA` on page 1230

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:POWer:VIA` on page 1230

Peak Level ← Signal output level settings

Setting this parameter requires "Set Level Via > Peak Level".

Sets the peak level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Option: R&S SMW-B9/-K19

Parameter is read-only in the configuration "Mode > Advanced" and "Signal Outputs > Analog&Digital".

Remote command:

For the output signal at the DIG I/Q interfaces:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:POWer:PEP` on page 1230

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:POWer:PEP` on page 1230

For the output signal of a channel of the HS DIG I/Q interfaces:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP`
on page 1230

Level ← Signal output level settings

Setting this parameter requires "Set Level Via > Level".

Sets the RMS level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Parameter is read-only in the following configurations:

- Option: R&S SMW-B10/-K18
"Signal Outputs > Digital Only Multiplexed"
- Option: R&S SMW-B9/-K19
"Mode > Advanced" and "Signal Outputs > Analog&Digital"

Remote command:

For the output signal at the DIG I/Q interfaces:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:POWer:LEVel` on page 1231

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:POWer:LEVel` on page 1231

For the output signal of a channel of the HS DIG I/Q interfaces:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel`
on page 1231

User Variation

If the rotary knob is used to adjust the level values, the step width can be defined. The configured step width applies with activated variation.

"User Variation" is disabled, if R&S SGT is connected to the DIG I/Q interface of the R&S SMW.

"Variation Active"

Enables the user-defined step width.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP:MODE` on page 1231

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP:MODE` on page 1231

"Variation Step"

Sets the user defined step width.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP[:INCRement]` on page 1232

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP[:INCRement]` on page 1232

Signal Monitoring

Option: R&S SMW-B10

If the digital interface is active ("General > State > On"), the R&S SMW monitors constantly the output signal and indicates overflow, if the digital signal is clipped. Overload can occur if the level of the output signal, or the noise level (AWGN) are too high.

"Overflow/No Overflow"

Indicates whether the I/Q output signal is clipped or not. An additional indication is displayed in the block diagram close to the corresponding connector.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:OFLow:STATe?`
on page 1232

`[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:OFLow:STATe?`
on page 1232

"Overflow Hold"

Indicates an overload since last reset for evaluating the measurement.

To reset the state, perform one of the following:

- Select "Reset".
- Start a new signal generation.
- Change the output level.

Remote command:

`[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:STATE?` on page 1233

`[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:STATE?` on page 1233

"Reset"

Resets the "Overload Hold" indication.

Remote command:

`[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:RESet` on page 1232

`[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:RESet` on page 1232

Power-On State

Selects the state which the I/Q digital output connectors DIG I/Q are to resume after the instrument is switched on.

"I/Q Out Off" On power-on, the output is deactivated.

"Previous Setting"

Resumes the state that was active before the last switch off.

Remote command:

`[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:PON` on page 1228

`[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:PON` on page 1228

Group Delay Compensation

(enabled for the BBMM connectors and connected R&S EX-IQ-BOX)

If you evaluate digital signals, enable this parameter so that the instrument compensates the group delay response of the internal digital filters.

Remote command:

`[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:GDElay:CState` on page 1232

4.8 I/Q analog output settings

Required Options

The equipment layout for output of analog I/Q signal includes:

- Option Standard Baseband Generator (R&S SMW-B10) per signal path and Option Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) Incl. output the baseband signal at the single-ended outputs

- Option Differential Analog I/Q Outputs (R&S SMW-K16) per signal path

Or

- Option Wideband Baseband Generator (R&S SMW-B9) per signal path and Option Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT) Incl. output the baseband signal at the single-ended outputs
- Option Wideband Differential Analog I/Q Outputs (R&S SMW-K17)
One differential output; differential and single-ended signals cannot be output at the same time.

Access

The analog output connectors I/Q x are located on the R&S SMW rear panel, see [Figure 4-3](#).

The block diagram displays the "I/Q OUT 1/2" connector in a folded state. The analog output connectors are inactive (gray LEDs).

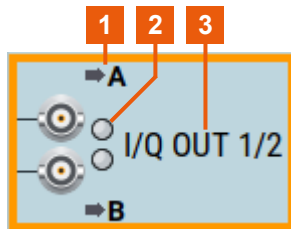


Figure 4-18: Representation of the analog output interface

1 = mapped I/Q stream

2 = analog output interface state: gray = inactive; blue = active

3 = analog output connector name

To access and configure the "I/Q Analog Output" settings

1. Select the "I/Q OUT 1/2" symbol to unfold the "I/Q Analog" block.
2. To (re) route the signal to the analog outputs, select the "I/Q Stream Mapper" block.
3. To enable the baseband signal at the analog outputs, select "Block Diagram > I/Q Analog A or B > I/Q Analog On".
4. To access the dialog box for configuring the analog output signal, select "I/Q Analog > I/Q Analog Settings > General".

I/Q Analog Outputs

General Digital Impairments

RF Envelope ☐

I/Q Output Type Differential

I/Q Level Vp (EMF) 2.000 0 V

Mode Fixed

I Settings

Bias (EMF) 0.0 mV

Offset (EMF) 0.0 mV

Q Settings

Bias (EMF) 0.0 mV

Offset (EMF) 0.0 mV

Set To Default Recall ... Save ...

Show Connector ...

The dialog comprises the settings for selecting the analog output signal type (single-ended or differential), enabling and generating an RF envelope signal, and adding digital impairments to the signal.

- To configure connected external instruments, use the "System Config > System Configuration > External RF and I/Q" dialog.

The parameters defining the voltage level of the output signal are interdependent. Consider the limits listed in ["Maximum overall output voltage"](#) on page 188.

Maximum overall output voltage

The voltage of the analog output signals is defined as a combination of output voltage of the I and Q signal components and an optional bias voltage. If the differential output is used, an additional offset can be set, too. The values of these parameters are interdependent so that the magnitude of the sum of output voltage and bias voltage must not exceed 4V.

The following applies:

- Single ended signal:

$$V_p + V_{\text{bias}} \leq 4 \text{ V}$$
- Differential signal:

$$0.5 \cdot V_p + |V_{\text{bias}}| + 0.5 \cdot V_{\text{offset}} \leq 4 \text{ V}$$

Where:

- V_p is the output voltage as set with the parameter [I/Q Level Vp EMF](#)
- V_{bias} is the bias voltage as set with the parameter [Bias \(EMF\)](#)
- V_{offset} is the offset between inverting and non-inverting output as set with the parameter [Offset \(EMF\)](#)

For more information, see data sheet.

Related settings

- See [Chapter 4.8.1, "General analog I/Q output settings"](#), on page 189
- See [Chapter 6.4, "Impairing the signal"](#), on page 460.

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

4.8.1 General analog I/Q output settings

Access:

- Select "I/Q Analog > I/Q Analog Outputs > General".

For description of the impairments settings, see [Chapter 6.4, "Impairing the signal"](#), on page 460

Settings:

State.....	189
Set to Default.....	189
Save/Recall.....	190
RF Envelope.....	190
Show Connector.....	190
I/Q Output Type.....	190
Mode.....	191
I/Q Level Vp EMF.....	191
Couple I/Q Bias.....	191
Bias (EMF).....	192
Offset (EMF).....	192

State

Enables/disables the analog I/Q output.

Note: By default, these output connectors are deactivated.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:ANALog:STATe` on page 1221

Set to Default

Calls the default settings. The values of the main parameters are listed in the following table.

Parameter	Value
"State"	Not affected by the "Set to Default"
"RF Envelope"	Off
"I/Q Output Type"	Depends on "System Configuration > External RF and I/Q > Preset behavior: Keep connections to external instruments": <ul style="list-style-type: none"> • "Off": Single Ended • "On": Not affected by the "Set to Default"
"I/Q Level Vp (EMF)"	1 V
"Bias (EMF)"	0 mV

Remote command:

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :PRESet` on page 1222

Save/Recall

Accesses the "Save/Recall" dialog, that is the standard instrument function for saving and recalling the complete dialog-related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The settings are saved in a file with predefined extension. You can define the filename and the directory, in that you want to save the file.

See also [Chapter 11, "File and data management"](#), on page 699.

Remote command:

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :SETTing:CATalog?` on page 1222

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :SETTing:STORe` on page 1222

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :SETTing:LOAD` on page 1222

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :SETTing:DELeTe` on page 1223

RF Envelope

In instruments equipped with option R&S SMW-K540, enables the output of a control signal that follows the RF envelope. This control signal is provided for power amplifiers envelope tracking testing. The signal is output at the I/I Bar connectors.

The envelope tracking (ET) is a method used by modern power amplifiers (PA) to improve their efficiency, especially when amplifying high crest factor RF signals. With envelope tracking, the PA estimates, i.e. "tracks", the RF signal and varies the supply voltage at the end-amplifying stage synchronous to the changes in the RF signal.

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

Remote command:

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :ENVELOpe:STATe`



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

I/Q Output Type

Selects the type of output signal.

The provided parameters in the "I/Q Analog Outputs" dialog depend on the selected output mode.

- "Single-Ended"
- If "RF Envelope > Off"
Single-ended output at the I/Q connectors.
Option: R&S SMW-B9: the signal from "I/Q Analog B" is output at the I Bar connectors.
See [Figure 4-3](#) and [Figure 4-4](#).
 - If "RF Envelope > On"
The envelope signal E is output at the I connectors.
You can define a bias between the output signal and ground.
- "Differential"
- Option: R&S SMW-B10 and R&S SMW-K16
Or R&S SMW-B9 and R&S SMW-K17.
- If "RF Envelope > Off"
The analog I/Q signal components are output at the I/Q and I/Q Bar connectors.
See [Figure 4-3](#) and [Figure 4-4](#).
Option: R&S SMW-B9: the differential signal output can be activated in "I/Q Analog A" block only. Single-ended and differential signals cannot be output simultaneously.
 - If "RF Envelope > On"
The inverted envelope signal \bar{E} is output at the I Bar connectors.

Remote command:

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :TYPE` on page 1223

Mode

Selects the mode for setting the outputs, independent or together.

Option: R&S SMW-B9: both paths use the same "Mode".

- "Fixed"
- The I/Q signal components settings are predefined fix values:
- "Bias (EMF)" = "Offset (EMF)" = 0V
 - "I/Q Level Vp (EMF)"
 - Single-ended mode: "I/Q Level Vp (EMF)" = 1 V
 - Differential mode: "I/Q Level Vp (EMF)" = 2 V
- "Variable"
- Option: R&S SMW-K16/-K17
Enables modification of the I/Q signal components settings.

Remote command:

`[:SOURce<hw>] : IQ:OUTPut [:ANALog] :MODE` on page 1223

I/Q Level Vp EMF

In "Mode > Variable", sets the output voltage for the I and Q signal components.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.

Remote command:

`[:SOURce<hw>] : IQ:OUTPut :LEVel` on page 1223

Couple I/Q Bias

In "Variable Mode", couples the bias setting of the I signal and the Q signal component. With activated coupling, the settings of the I signal component automatically apply to the Q signal component.


If R&S SMW-B9 is installed, the components are always coupled.

Remote command:
`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:COUPling [:STATe]` on page 1224

Bias (EMF)

If a bias is enabled, a DC voltage is superimposed upon the I or Q signal.

If R&S SMW-B9 is installed, both paths use the same "Bias" value.

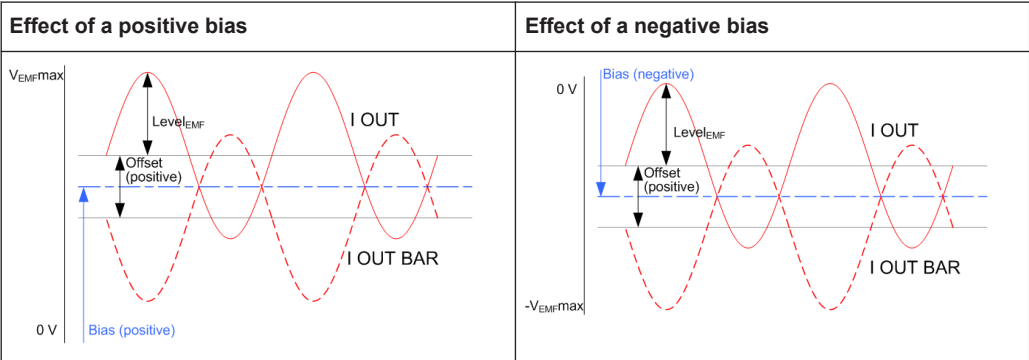

In "Single Ended" mode, this parameter defines the bias between the output signal and ground. It can be used to define the operating point of a DUT.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.


Remote command:
`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:I` on page 1224
`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:Q` on page 1224

Offset (EMF)

Sets an offset between the inverting and the non-inverting output.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.

The selected offset is set half in the positive and half in the negative direction.

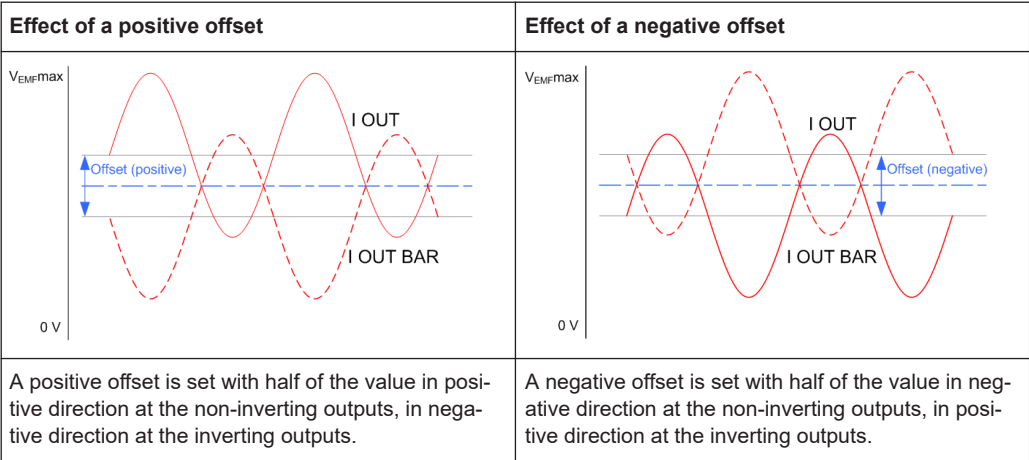

Example: Effect of a positive offset on the I signal component

"I Offset" = 100.0 mV

The offsets applied on the two output connectors as follows:

- +50.0 mV at the positive signal output
- -50.0 mV at the inverted signal output

Remote command:

[:SOURce<hw>] :IQ:OUTPut [:ANALog] :OFFSet:I on page 1224

[:SOURce<hw>] :IQ:OUTPut [:ANALog] :OFFSet:Q on page 1224

4.9 How to connect external instruments and configure the signal flow

This section gives examples on the following topics:

- How to select the required system configuration and to configure the signal flow through the instrument
- How to connect external instruments to the R&S SMW and how to configure them
- How to define the input and output signals.

General workflow

The general workflow described in "General workflow" on page 109. The [Figure 4-19](#) is a graphical representation of this workflow.

The graphic depicts the main phases for connecting and configuring the R&S SMW and the external instruments. This illustration is a simplified diagram that *highlights* the configuration stages performed in the "System Configuration" dialog.

For relevant information on the configuration of the baseband source signal or using the fading simulator and the AWGN generator, see:

- [Chapter 5, "Configuring the internal baseband source"](#), on page 226
- [Chapter 4.6, "Digital baseband input settings"](#), on page 161
- user manual "Fading Simulator"

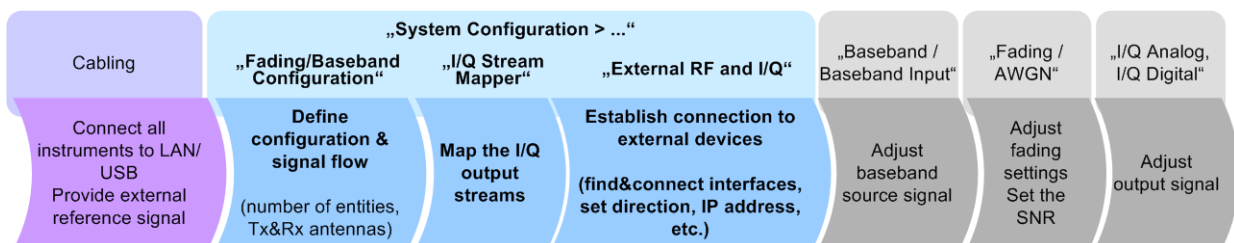


Figure 4-19: General configuration stages and the steps performed in the System Configuration dialog

The illustration depicts the steps in general and is intended to explain the configuration in principle.

For a step-by-step description of how to perform the different steps, see:

• Finding out the suitable configuration for your test situation	194
• How to find out where the input/output interface is located	194
• How to define the MIMO scenario	195
• How to route the I/Q streams to the output interfaces	198
• How to cable the instruments in MIMO test setups	199
• How to connect and configure external instruments	200
• How to connect to HS DIG I/Q interfaces	209
• How to generate a 2x8 MIMO signal for BS tests	214
• How to generate a 8x8 MIMO signal with two R&S SMW	215
• How to connect an R&S®CMW500 for fading applications	220
• How to apply an external digital baseband signal	221
• How to connect an R&S EX-IQ-BOX	224

4.9.1 Finding out the suitable configuration for your test situation

For conceptual information on the workflow, refer to ["General workflow"](#) on page 109.

1. Select a system configuration from the test cases listed in [Table 4-1](#).

The table provides a cross-reference between a test scenario and the required configuration.

2. Select "Taskbar > System Configuration > Fading/Baseband Settings":
 - Follow the instructions in ["To simulate complex MxN MIMO scenarios using the "Fading and Baseband Configuration" settings"](#) on page 196.
 - Observe the preview diagram in the "Fading/Baseband Settings" dialog.

This diagram provides a short description and an example of the common application or test scenario of the selected configuration.

For description of the further steps, see:

- [Chapter 4.9.3, "How to define the MIMO scenario"](#), on page 195
- [Chapter 4.9.4, "How to route the I/Q streams to the output interfaces"](#), on page 198

See also:

- [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199
- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200

4.9.2 How to find out where the input/output interface is located


See:

- ["To find out the correct connector"](#) on page 195
- ["To find out the connector's direction"](#) on page 195

To find out the correct connector

1. Select "Taskbar > System Configuration > External RF and I/Q".
2. In the overview table, navigate to the connector to that you want to connect an external instrument (e.g. "BBMM 1").
3. Select "External Instruments" > "Config".
4. In the "External Instrument Configuration" dialog, select "Show Connector".

A blinking LED on the rear of the instrument indicates the position of the connector.

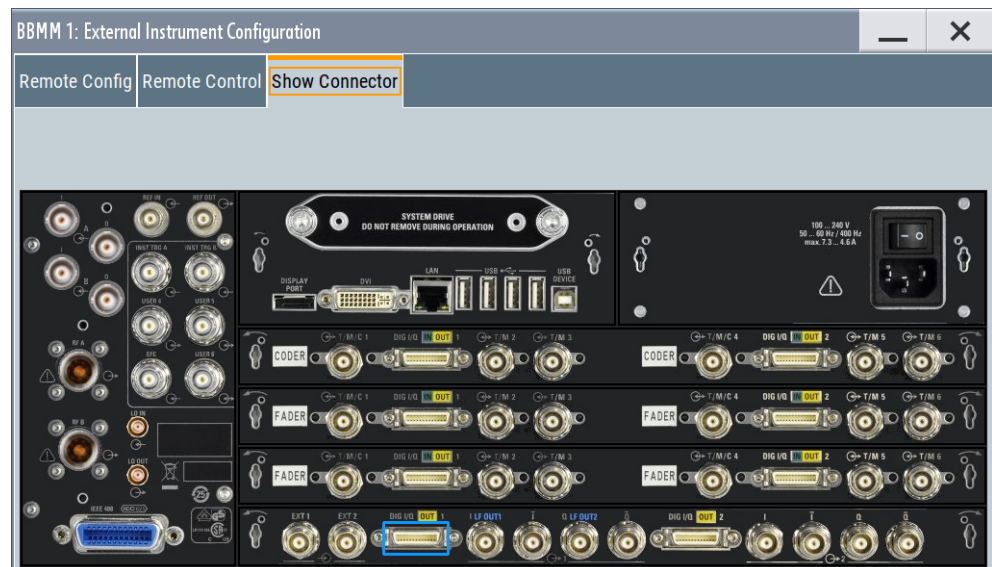

Tip: Cross-check whether this digital interface is defined as input or output, before you connect the external instrument.

To find out the connector's direction

The directions of the digital interfaces at the FADER boards are configurable parameter. Depending on the test setup, each of these connectors can serve as an input or an output connector but not at the same time.

To find out the currently selected connector's direction and the currently defined connectors, proceed as follows:

1. Select "Taskbar > System Configuration > External RF and I/Q".
2. In the overview table, navigate to the required connector.
Observe the value of the parameter "Direction".

4.9.3 How to define the MIMO scenario

See:

- ["To simulate complex MxN MIMO scenarios using the "Fading and Baseband Configuration" settings"](#) on page 196

- ["To define the baseband signal"](#) on page 197

To simulate complex MxN MIMO scenarios using the "Fading and Baseband Configuration" settings

The configuration of complex MIMO scenarios undergoes the same steps. We use the configuration of a 1x4x4 MIMO scenario with coupled sources as example to explain the principle.

See also [Chapter 4.9.1, "Finding out the suitable configuration for your test situation"](#), on page 194.

Proceed as follows:

1. To access the "Fading/Baseband Configuration" settings, use one of the following:
 - Select "Taskbar > System Config > System Configuration"
 - Select "Block Diagram > I/Q Stream Mapper > System Configuration > Fading/Baseband Configuration"
 - Select "Block Diagram > Fading > MIMO > System Configuration".

The "Fading/Baseband Configuration" settings are divided into two modes, the standard mode for more simple non-MIMO configurations and the advanced mode for complex MxN MIMO setups.

2. In the "Fading/Baseband Configuration" tab, enable "Mode > Advanced".
Set the required configuration.
 - a) Define the number of "Entities"
 - b) Define the number of "BB Signals (Tx Antennas)" and "Streams (Rx Antennas)"

Tip: Use the provided preview diagram and description to simplify the decision process.

3. If necessary, adjust the "Baseband Source Configuration".
For example, to enable the instrument to calculate the required signals and streams out of one baseband signal source, select "BB Source Config > Coupled Sources"

How to connect external instruments and configure the signal flow

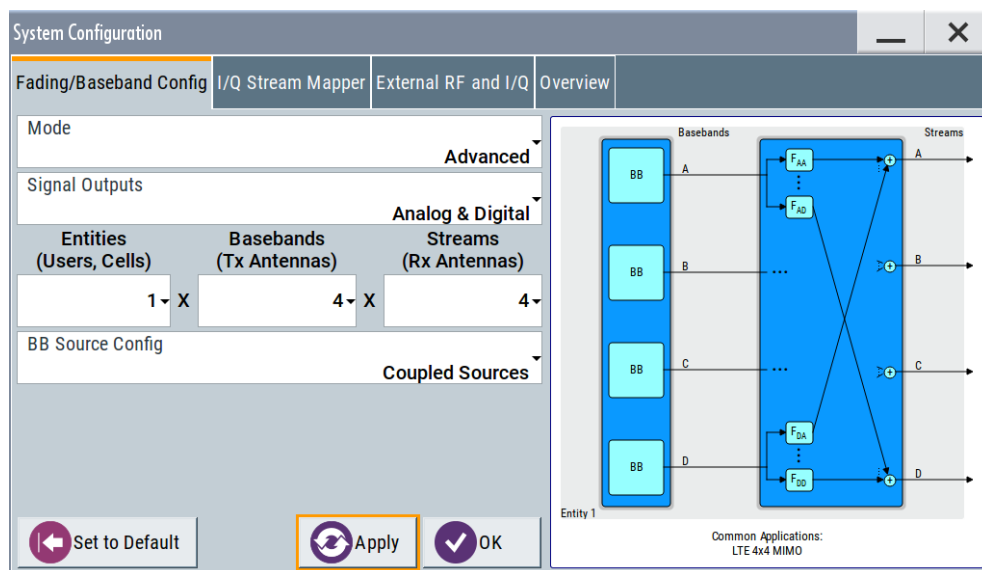


Figure 4-20: Configuration example (Fading and Baseband Configuration > 1x4x4 and Coupled Baseband Sources)

- Execute "Apply" to trigger the instrument to adopt the signal routing.

The block diagram displays the configured signal routing.

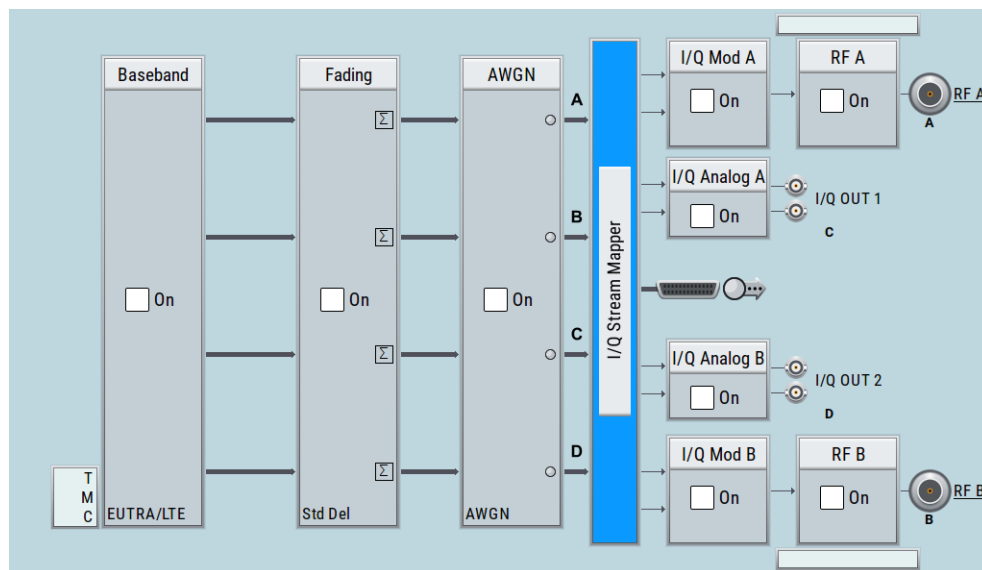


Figure 4-21: Signal routing example (Fading and Baseband Configuration > 1x4x4 and Coupled Baseband Sources)

To define the baseband signal

To generate an EUTRA/LTE signal, use the following general steps:


- Select "Baseband > EUTRA/LTE".
- Configure the settings as required.

How to connect external instruments and configure the signal flow

For example, enable "EUTRA/LTE > Link Direction > Downlink".

Select a "DL Test Model > E-TM1.1 5MHz"

3. Select "EUTRA/LTE > State > On" to enable signal generation.
4. In the status bar, select "Frequency A = Frequency B = 2.1432 GHz" and "Lev A = Lev B = -60 dBm".
5. Select "RF A > On" and "RF B > On".

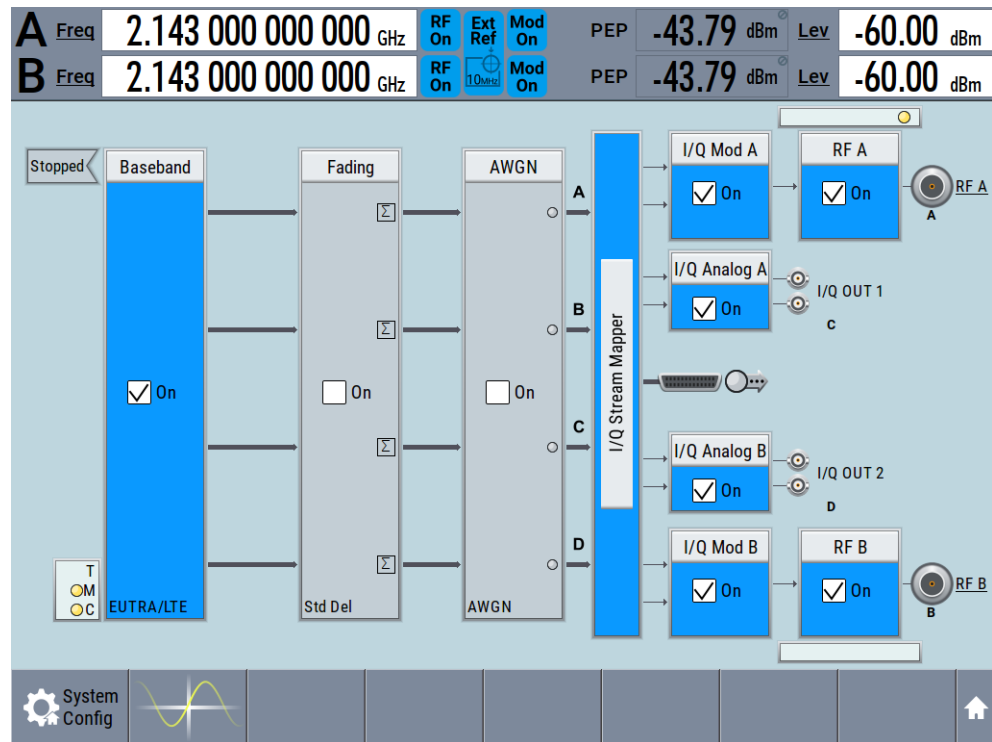

4.9.4 How to route the I/Q streams to the output interfaces

This example shows how to enable the instrument to output the EUTRA/LTE 1x4x4 MIMO signal at both RF outputs and both I/Q analog outputs.

1. Select "Block Diagram > I/Q Stream Mapper".
2. In the I/Q stream mapper matrix, tap on a crossing cell to enable the routing of the selected stream to the corresponding connector.
For example, enable "Stream A > RF A", "Stream B > RF B", "Stream C > I/Q OUT 1" and "Stream D > I/Q OUT 2".

Tip: To route more streams to one output connector, in the "I/Q Stream Mapper" dialog and for the particular connector, select "Combination> Add" and select the streams to be routed to it.

System Configuration										
Fading/Baseband Config		I/Q Stream Mapper		External RF and I/Q		Overview				
	Frequency Offs /Hz	Phase Offs /°	RF A	RF B	I/Q OUT 1	I/Q OUT 2	BBMM 1	BBMM 2	FAD 3	FAD 4
Stream A	-20 000 000.00	0.00								
Stream B	0.00	0.00								
Stream C	-20 000 000.00	0.00								
Stream D	0.00	0.00								
Combination			Single	Single	Single	Single	Add	Add	Single	Single

4.9.5 How to cable the instruments in MIMO test setups

The MxN MIMO test setups with more than two Rx antennas ($N > 2$) require the signal of at least three antennas. The R&S SMW generates the required signal and outputs two of the antennas signals at the RF outputs. The others signals can be routed to the provided analog and digital I/Q connectors and then processed by a connected instrument, like an RF frontend. Several RF frontend instruments can serve as extended RFs for the R&S SMW, for example R&S SGS, or R&S SGT.

The [Figure 4-22](#) shows a 1x4x4 MIMO test setup with two R&S SGS connected to the analog I/Q outputs of the R&S SMW.

For information on how to connect instruments to the DIG I/Q interfaces, see [Figure 4-24](#).

How to connect external instruments and configure the signal flow

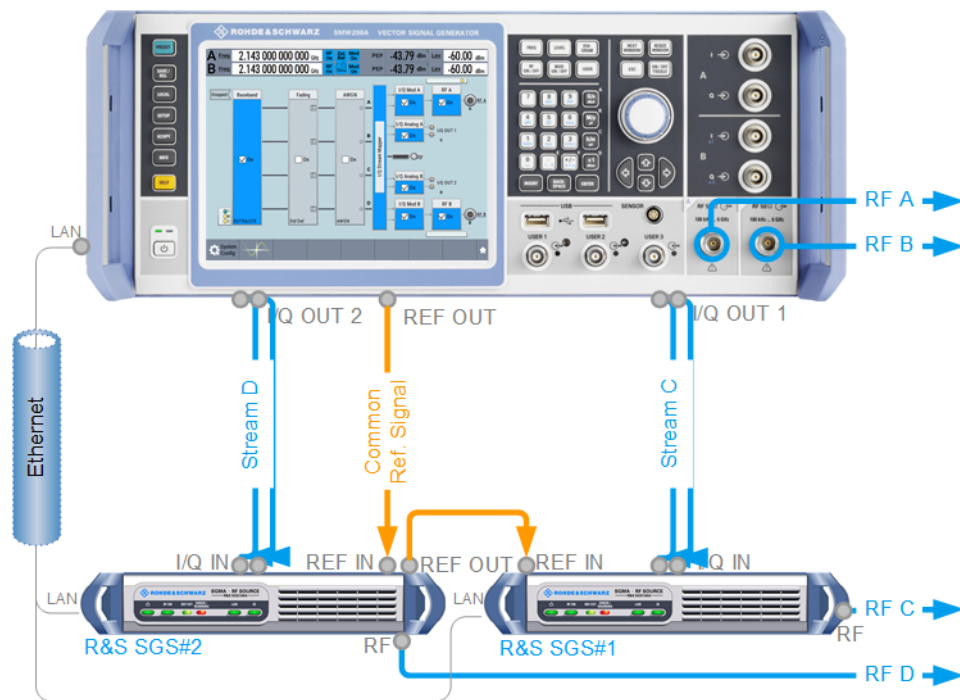


Figure 4-22: Example of test setup: 1x4x4 MIMO with R&S SMW and 2xR&S SGS connected to the I/Q OUT 1/2.

Blue circle = front panel connector
Gray circle = rear panel connector

Refer to "[To connect instruments to the I/Q analog interface](#)" on page 201 for a description of how to configure the R&S SMW.

4.9.6 How to connect and configure external instruments

See:

- "[To connect instruments to the I/Q analog interface](#)" on page 201
- "[To connect instruments to the I/Q digital interface](#)" on page 203
- "[To connect and configure an R&S SZU](#)" on page 206
- "[To create a remote control sequence or modify the initialization sequence](#)" on page 205

You have already selected a MIMO scenario and have mapped the I/Q stream to the output interfaces, see:

- "[To simulate complex MxN MIMO scenarios using the "Fading and Baseband Configuration" settings](#)" on page 196
- Chapter 4.9.4, "[How to route the I/Q streams to the output interfaces](#)", on page 198

To connect instruments to the I/Q analog interface


In this example, we assume a "Fading/Baseband Configuration > 1x4x4 MIMO" and the following stream mapping: Stream A and stream B are output at RF A and B; stream C and D at I/Q OUT x respectively.

The test setup uses the analog I/Q outputs and requires two additional instruments, 2xR&S SGS (see [Figure 4-22](#)). To connect and configure each of the R&S SGS to the I/Q output interfaces, proceed as follows:

1. Perform one of the following:
 - Connect the R&S SMW and the external instruments to the LAN
 - Connect the external instruments to the USB connector of the R&S SMW.
2. Supply all instruments with common frequency reference signal:
 - Use an external common frequency source.
 - Distribute the reference frequency of the R&S SMW to the external instruments.

See [Chapter 8.8, "Reference oscillator"](#), on page 495.
3. Connect the external instruments to the I/Q connectors of the R&S SMW with suitable cables.
See also ["To find out the correct connector"](#) on page 195.
4. Select "Block Diagram > I/Q OUT 1/2" to unfold the "I/Q Analog" block
Note:
Per default, the analog I/Q outputs are disabled.
5. Select "I/Q Analog > State > On", to enable the analog I/Q outputs with their default settings.
6. Open the "Taskbar > System Config > System Configuration > External RF und I/Q" dialog.
Select "I/Q OUT1 > External Instrument > Config".
7. In the "I/Q OUT 1: External Instrument Configuration" dialog, select "Detect".
The R&S SMW searches through the LAN and the USB connections and updates the dialogs with the retrieved information, like "IP Address", or "Instrument Name".


How to connect external instruments and configure the signal flow

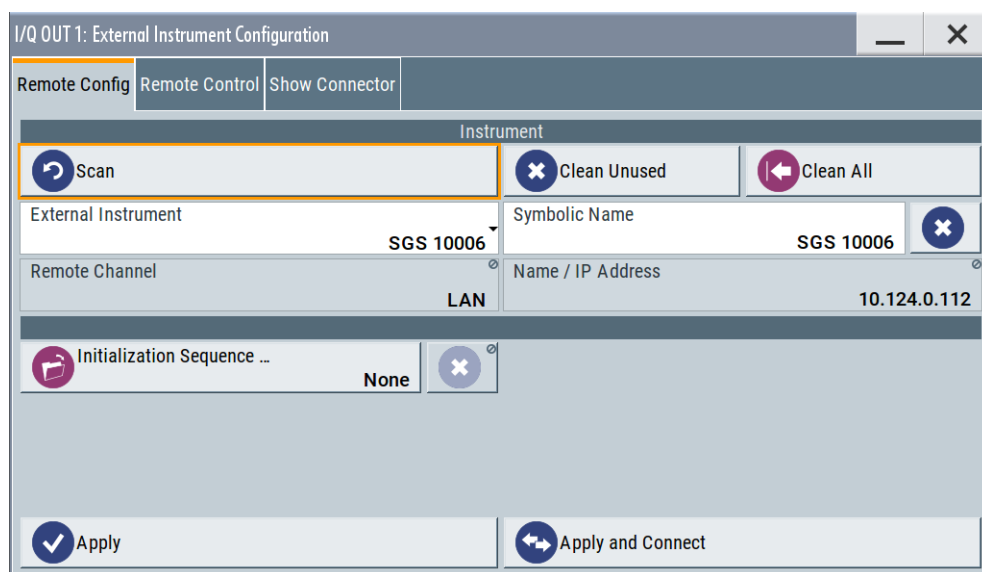

8. Select "Apply".

The "System Config > System Configuration > External RF und I/Q" dialog displays the settings of the connected external instrument.

9. You can disable "RF Couple" state and adjusts the RF settings manually.
In a MIMO setup however, it is useful to use the coupled settings, because a MIMO setup typically requires the same RF frequency at all antennas.
10. Perform the previous steps to connect and configure the second R&S SGS.
11. Select "I/Q OUT 1 > External Instrument > Config".
- Select "Remote Config > Initialization Sequence".
 - Load a file with file extension *.iec.

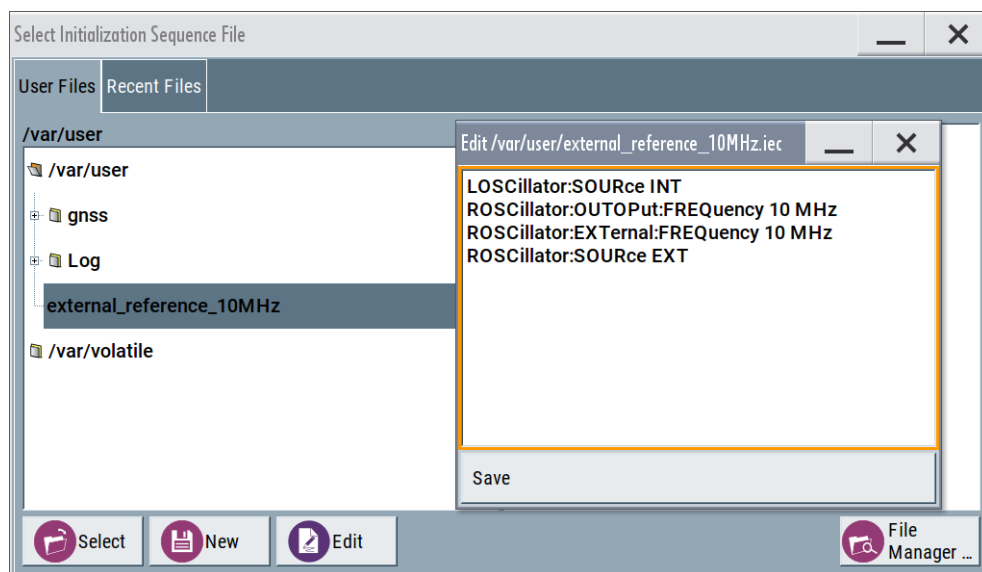

Tip: Try out also ["To create a remote control sequence or modify the initialization sequence"](#) on page 205.

12. In the "System Config > System Configuration > External RF and I/Q" dialog, select the "I/Q OUT 1 > Rem Conn" icon to toggle the state.
This action establishes the remote connection to the instrument.

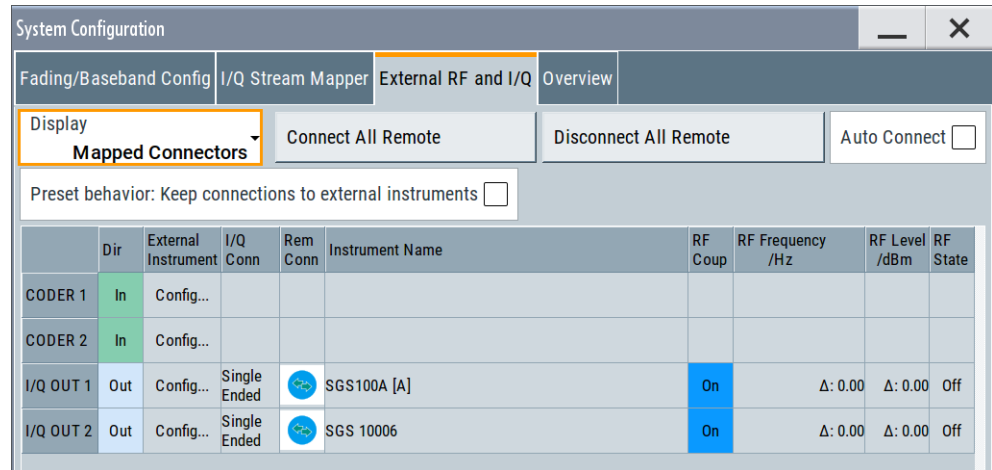


Figure 4-23: Example: Connecting external instruments to the I/Q OUT 1/2 of the R&S SMW (2xR&S SGS)

The R&S SMW:

- Sends a `:DEV:PRES` command to the connected external instrument
- Triggers the external instrument to execute the configuration defined in the initialization sequence file
- Adjusts the RF settings of the external instrument, e.g. applies the same RF frequency at both RF outputs and at the RF outputs of the external instruments.

To connect instruments to the I/Q digital interface

In this example, we assume a "Fading/Baseband Configuration > 1x4x4 MIMO" scenario and the following stream mapping: Stream A and stream B are output at RF A and B; stream C and D at the BBMM interfaces.

The test setup uses the digital I/Q outputs and requires two additional instruments, for example 2xR&S SGT.

1. Connect two R&S SGT to the BBMM interfaces.
See [Figure 4-24](#).

How to connect external instruments and configure the signal flow

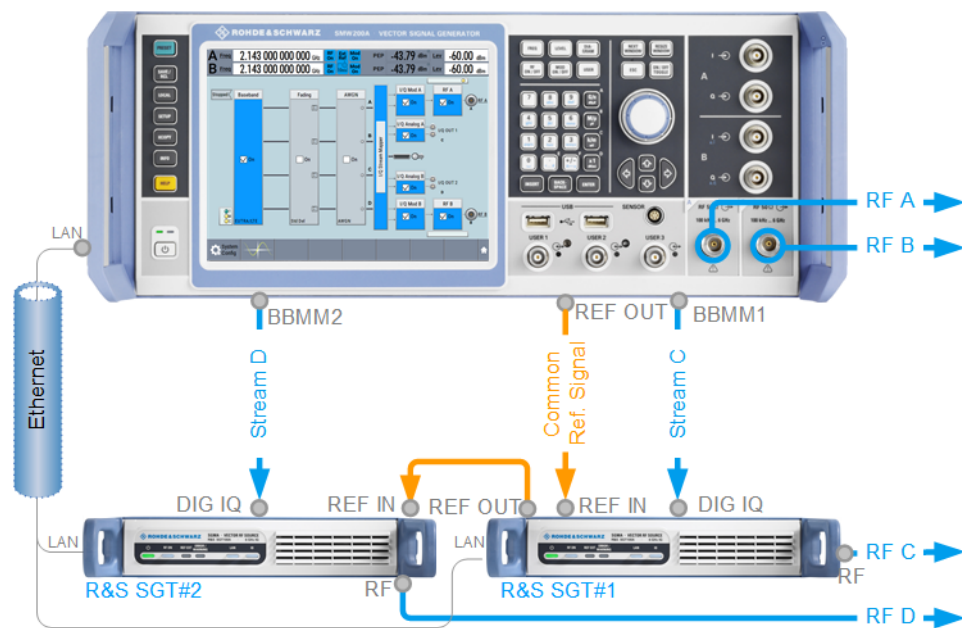


Figure 4-24: Example of test setup: 1x4x4 MIMO with R&S SMW and 2xR&S SGT connected to the BBMM1/2.

Blue circle = front panel connector
Gray circle = rear panel connector

2. Follow the steps described in ["To connect instruments to the I/Q analog interface"](#) on page 201.
 - a) In the "System Config > System Configuration > External RF und I/Q", enable "Auto Connect > On".
 - b) Use the example initialization file shown in ["To connect instruments to the I/Q analog interface"](#) on page 201.

The "System Configuration > External RF and I/Q" dialog confirms a correct and successful configuration by the active "Rem Conn" status and active "I/Q Conn" status indication.

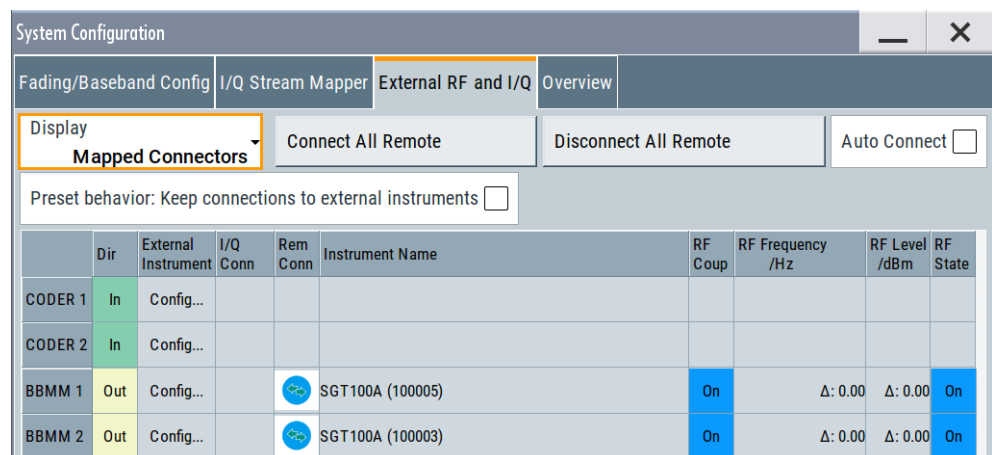


Figure 4-25: Example: Connecting external instruments to the BBMM 1/2 of the R&S SMW (2xR&S SGT)

3. In the block diagram, select "I/Q Digital".

The dialog confirms the selected configuration. The settings are retrieved and set to fit to the connected R&S SGT.

To create a remote control sequence or modify the initialization sequence

You have connected and configured external instruments to the R&S SMW as described in ["To connect instruments to the I/Q analog interface"](#) on page 201.

To create a SCPI sequence or your own initialization sequence and send it to an R&S SGS connected to the I/Q interface, proceed as follows:

1. On a remote computer, open the notepad or other similar tool.
Write a sequence of SCPI commands.
2. Store the SCPI sequence in a file with file extension *.iec.
3. Use one of the standard file transfer methods to transfer the file to the user directory /usb/ of the R&S SMW.
See [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.
4. Select "System Config > System Configuration > External RF und I/Q".
5. Select "I/Q OUT 1 > External Instrument > Config"
6. Select "External Instrument Configuration > Remote Control":
 - a) Select "Mode > Sequence".
 - b) Select "File".
 - c) In the user directory /usb/, select the *.iec file.
 - d) Select "Send Sequence".
7. Alternatives:
 - a) Select "External Instrument Configuration > Initialization Sequence".
 - b) Select "Initialization Sequence".
 - c) In the user directory /usb/, select the *.iec file.

See also:

- [Example "Controlling the R&S SMW and external RF instruments with the same application program"](#) on page 982
- [Example "Connecting an external instrument and sending SCPI commands"](#) on page 985

To connect and configure an R&S SZU

The following example assumes a differential I/Q connection between the R&S SZU and R&S SMW, equipped with wideband baseband generator (R&S SMW-B9). The R&S SZU is connected to RF A.

For more information on the R&S SZU, see the SZU100A Getting Started manual at www.rohde-schwarz.com/manual/szu100a.

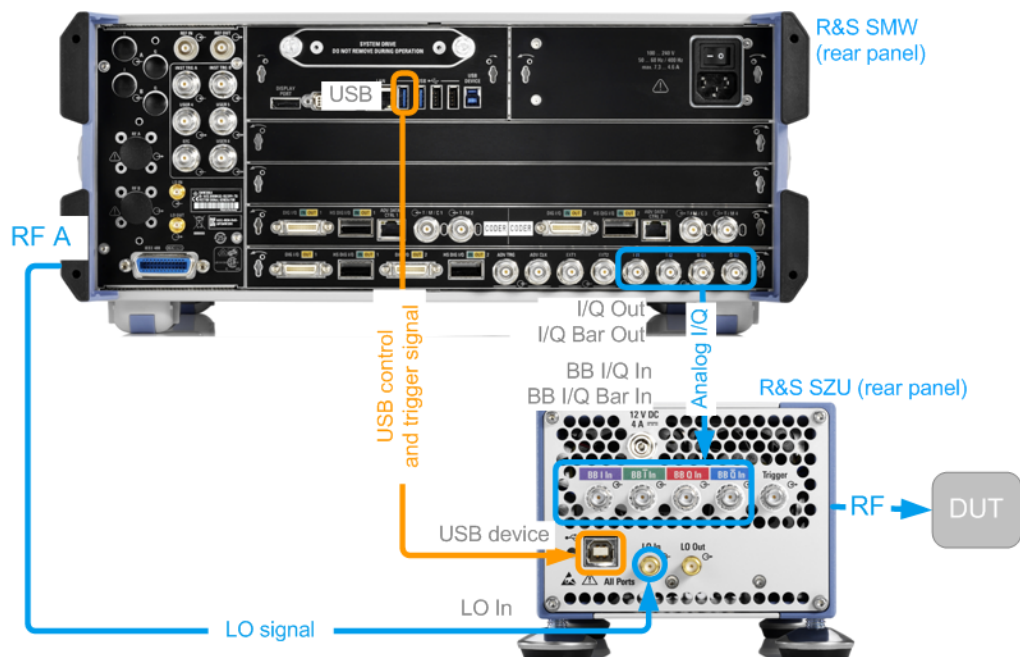



Figure 4-26: Test setup: 1xR&S SMW (R&S SMW-B9) and 1xR&S SZU connected (rear panels)

RF A	= R&S SMW front panel connector
RF	= RF signal at the R&S SZU output (front panel connector)
I/Q, I/Q Bar Out	= Differential analog I/Q outputs
BB I/Q, BB I/Q Bar In	= Differential analog I/Q inputs
USB	= USB control signal for the USB connector of the R&S SMW to the USB Device connector of R&S SZU

To connect and configure the R&S SZU to the R&S SMW, proceed as follows:


1. Use the cables supplied with the R&S SZU.
2. Connect the R&S SZU to the I/Q and I/Q Bar output connectors of the R&S SMW.
3. Connect the RF A output to the LO IN of the R&S SZU.
4. Connect a USB cable to the USB connector and the USB Device connector of R&S SZU.

5. Connect the R&S SZU to the power supply.
Note: Make sure that you keep the warm-up time.
6. At the R&S SMW, open the "Taskbar > System Config > System Configuration > External RF und I/Q" dialog.
7. Select "I/Q OUT1 > External Instrument > Config".
The R&S SMW detects the R&S SZU automatically.
8. In the "External Instrument Configuration" dialog, select "External Instrument > SZU (<Serial Number>)".
Set "I/Q Output Type > Differential".

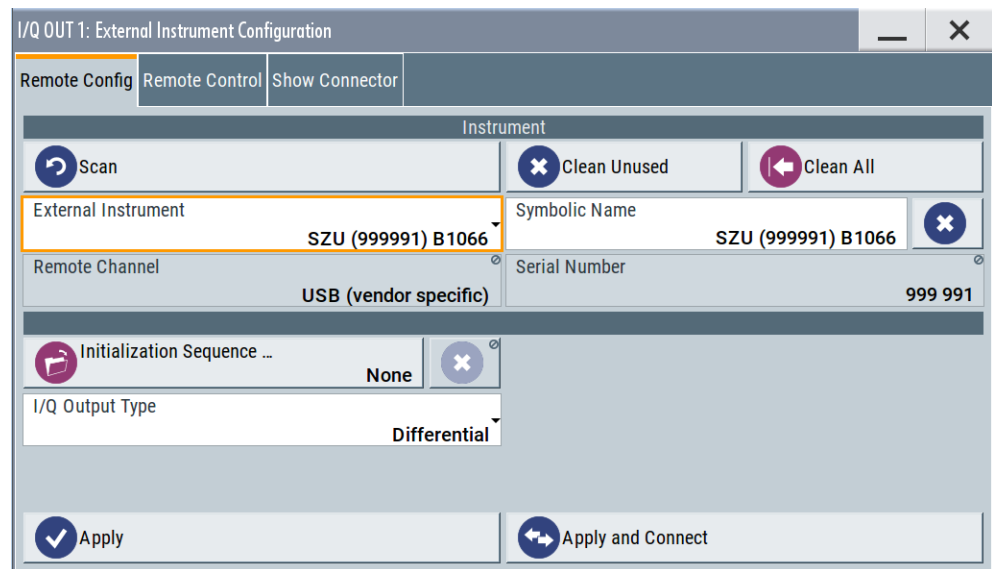

9. Select "Apply".
The "System Config > System Configuration > External RF und I/Q" dialog displays the settings of the connected external instrument.
10. In the "External RF und I/Q", select "Auto Connect > On".
Select "Preset behavior: Keep connections to external instruments > On".
11. Open the "External Instrument Configuration > Connections" dialog.
Select "Check Connections".
Observe the connection status indications.
The green color indicates that the required physical connections are in operation.
12. Before connecting the DUT, perform an internal adjustment.
 - a) In the block diagram, select "RF > On".
 - b) Proceed as described in the R&S SZU user manual, chapter "Running internal adjustments".

Note: You can skip the internal adjustments, if already done.
But if you change the "I/Q Output Type > Differential to Single Ended", or vice versa, the R&S SMW issues the following warning message:

(A)SZU settings conflict: At least one adjustment is done in another mode than the SZU is curr ...  Info

"SZU settings conflict: At least one adjustment is done in another mode than the SZU is currently set to (single-ended / differential). Accuracy may be affected!"

13. When internal adjustments finish, select "RF" > "Off".

14. Connect the R&S SZU to the DUT.

15. In the block diagram, select "RF" > "On".

The R&S SMW performs the following:

- Retrieves the R&S SZU calibration data.
- Indicates the connected R&S SZU in the block diagram.
- Sets the output signal level and frequency to the default values of the R&S SZU and indicates the value in the status bar.

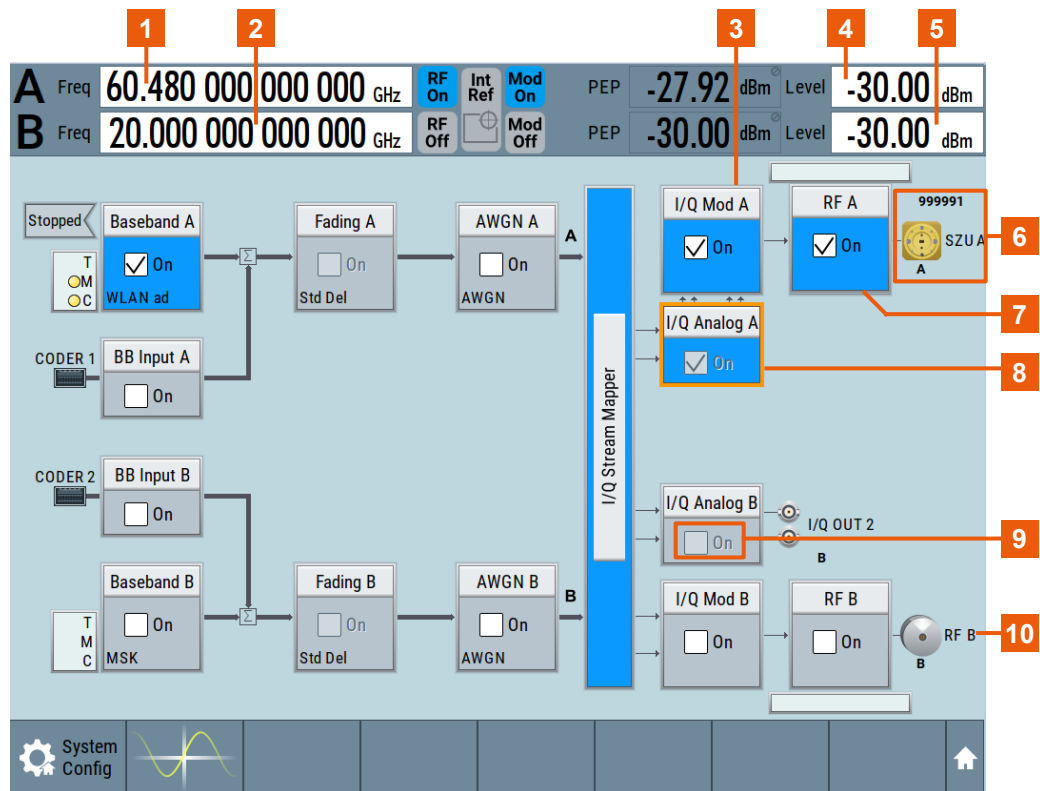


Figure 4-27: Block diagram of wideband baseband R&S SMW (R&S SMW-B9) with connected R&S SZU

- 1 = RF frequency at the R&S SZU RF output
- 2, 5 = RF frequency and level settings at the second R&S SMW RF output
- 3 = I/Q modulator of the R&S SZU
- 4 = RF level, nominal level at the R&S SZU RF output (regulated level)
- 6 = R&S SZU, indicated as waveguide port icon, label and the serial number
- 6, 7 = Access to the R&S SZU RF settings (RF block or icon)

- 8 = Active I/Q analog output, firmly routed to the R&S SZU; the example uses differential output signal
 9 = I/Q analog B is disabled, because the differential output of the first path is used
 10 = R&S SMW RF settings

4.9.7 How to connect to HS DIG I/Q interfaces


You can connect a secondary instrument to the HS DIG I/Q in a multi-instrument setup for performance testing, e.g. nx4 MIMO configuration of 5G NR and WiFi in the frequency band above 6 GHz.

Connecting to the R&S SMW200A

1. Connect all connections between the R&S SMW200A and the external instruments.

Table 4-9: Signals and connections for R&S SMCV100B as secondary instruments:


Signal	R&S SMW200A	R&S SMCV100B 1	R&S SMCV100B 2
I/Q 1	HS DIG I/Q 1 ("BBMM 1")	Dig. IQ HS 1	
I/Q 2	HS DIG I/Q 2 ("BBMM 2")		Dig. IQ HS 1
Sync/Trigger 1	ADV TRG	User 2	
Sync/Trigger 2	ADV TRG		User 2
Reference 1	REF OUT	Ref In	
Reference 1		Ref Out	Ref In
Control	LAN	LAN	LAN

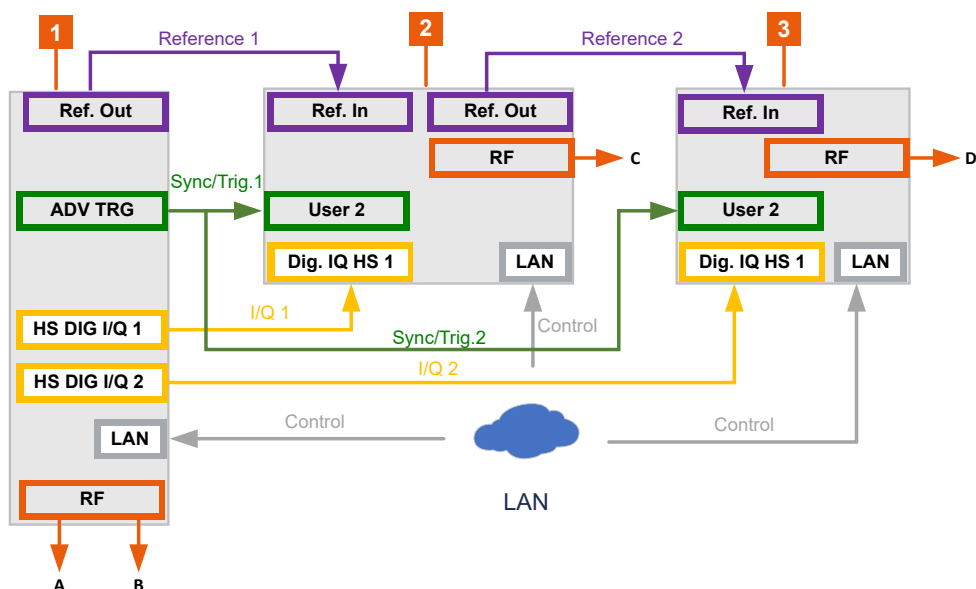

- 1 = R&S SMW200A (primary instrument)
 2 = R&S SMCV100B 1 (secondary instrument)
 3 = R&S SMCV100B 2 (secondary instrument)

Table 4-10: Signals and connections for R&S SMW200A / R&S SMM100A as secondary instruments:

Signal	R&S SMW200A	R&S SMW200A / R&S SMM100A 1	R&S SMW200A / R&S SMM100A 2
I/Q 1	HS DIG I/Q 1 ("BBMM 1")	HS DIG I/Q 1	
I/Q 2	HS DIG I/Q 2 ("BBMM 2")		HS DIG I/Q 1
Sync/Trigger 1	ADV TRG	ADV CLK	
Sync/Trigger 2	ADV TRG		ADV CLK
Reference 1	REF OUT	REF IN	
Reference 2		REF OUT	REF IN
Control	LAN	LAN	LAN

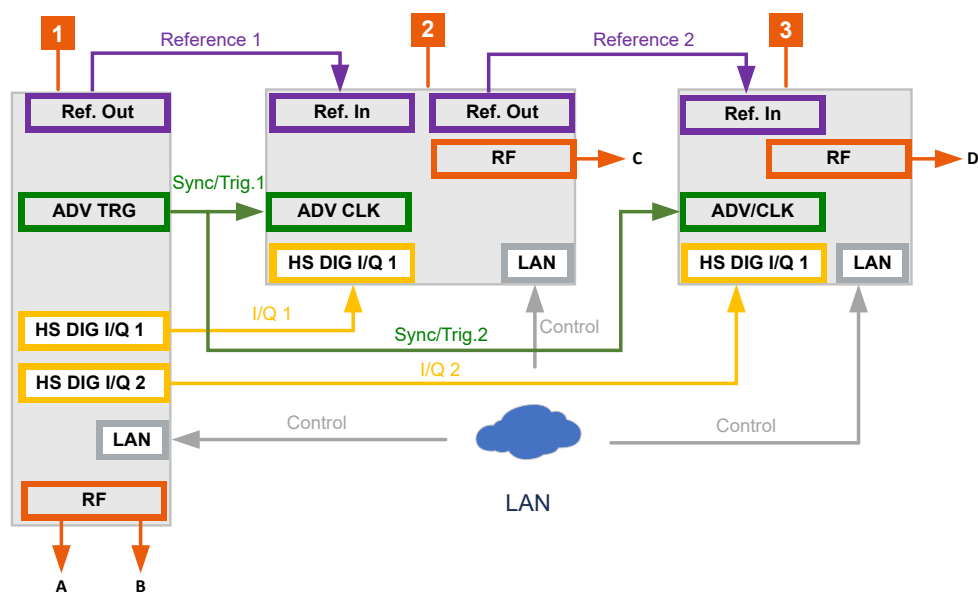

- 1 = R&S SMW200A (primary instrument)
 2 = R&S SMW200A 1/R&S SMM100A 1 (secondary instrument)
 3 = R&S SMW200A 2/R&S SMM100A 2 (secondary instrument)

Note: Avoid unnecessary cable length and branching points. Use cables of the same length and type for all connections between the primary instrument and the secondary instruments and between secondary instruments.

- Connect the R&S SMW200A and the external instruments to the same LAN. See also ["To find out the correct connector"](#) on page 195.
- Supply all instruments with common frequency reference signal:

- a) On the primary instrument R&S SMW200A, select "RF > Reference Frequency > Source > Internal".

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

- b) On the secondary instruments, select reference frequency "External".
For details on how to set the reference frequency of the secondary instrument, see the respective user manual.

4.9.7.1 Configuring the primary instrument

This chapter describes the configuration of the primary instrument exemplary for a setup with R&S SMCV100B as secondary instrument. When using other products as secondary instrument, the configuration of the primary instrument is analogous.

Configuring the signal mapping and multi-instrument setup

1. Select "System Configuration" > "Fading/Baseband Config":
 - a) Select "Mode > Advanced".
 - b) Select "Signal Outputs > Analog & Digital (HS)".
 - c) Click "Apply".
2. Select "System Configuration" > "I/Q Stream Mapper".
3. In the "I/Q Stream Mapper", route the I/Q streams to the output connectors:
 - "Stream A": "RF A"
 - "Stream B": "RF B"
 - "Stream C": "BBMM 1"
 - "Stream D": "BBMM 2"
4. Select "System Config > System Config > Multi Instrument".
5. Select "Common Trigger" > "Multi Instrument Trigger" > **"Primary"**.
6. Select "State > On".

See also [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670 and [Chapter 10.3.1.1, "Multi-instrument settings"](#), on page 671.

Configuring the remote connection

1. Select "System Config > System Config > External RF and I/Q".
 - a) Select "BBMM 1 > External Instrument > Config".
 - b) Select "External Instrument > SMCV100B".
 - c) If the external instrument is not listed, click "Scan". The list of external instruments will be updated.
 - d) Click "Apply and Connect".

Follow the same procedure for configuring the external instrument on "BBMM 2".
2. Check if all remote connections are established.

Multi Instrument	Fading/Baseband Config	I/Q Stream Mapper	External RF and I/Q	Overview					
Display Mapped Connectors		Connect All Remote	Disconnect All Remote	Auto Connect <input type="checkbox"/>					
Preset behavior: Keep connections to external instruments <input type="checkbox"/>									
	Dir	External Instrument	I/Q Conn	Rem Conn	Instrument Name	RF Coup	RF Frequency (Hz)	RF Level (dBm)	RF State
CODER 1	In	Config...							
BBMM 1	Out	Config...			SMCV100B (100004)	On	Δ: 0.00	Δ: 0.00	On
BBMM 2	Out	Config...							
I/Q OUT 1	Out	Config...		Single Ended					
I/Q OUT 2	Out	Config...		Single Ended					
RF	Out	Config...							

Configuring the baseband signal

Configure the baseband signal as required for the particular test setup, for example:

1. Select "Baseband > 5G NR/Sidelink".
2. Configure the trigger signal:
 - a) Select "Baseband > 5G NR/Sidelink > Trigger In".
 - b) Select "Trigger Mode > Armed Retrigger" and "Trigger Source > Internal".
 - c) Activate "Sync. Output to Ext. Trigger".

The trigger parameters of all basebands are coupled. Once the basebands are activated, they use common trigger signal.

Activating the output

- Activate "RF = On".

Activating the output of the primary instrument R&S SMW200A automatically activates the RF output of the secondary instruments R&S SMCV100B in the setup.


4.9.7.2 Checking the secondary instrument

The secondary instruments are controlled by the primary instrument. The primary instrument sets the configuration of the secondary instruments remotely.

Settings of the secondary instruments, exemplary for a setup with R&S SMCV100B:


1. The block diagram after finishing the configuration of the primary instrument:

How to connect external instruments and configure the signal flow

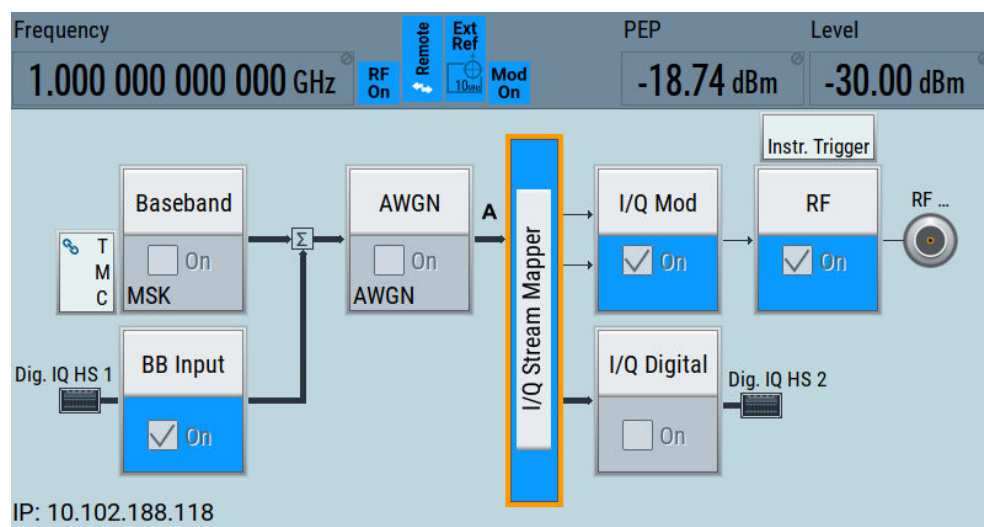


2. Select "BB Input > Baseband Input Settings".

The settings should be the following by default:

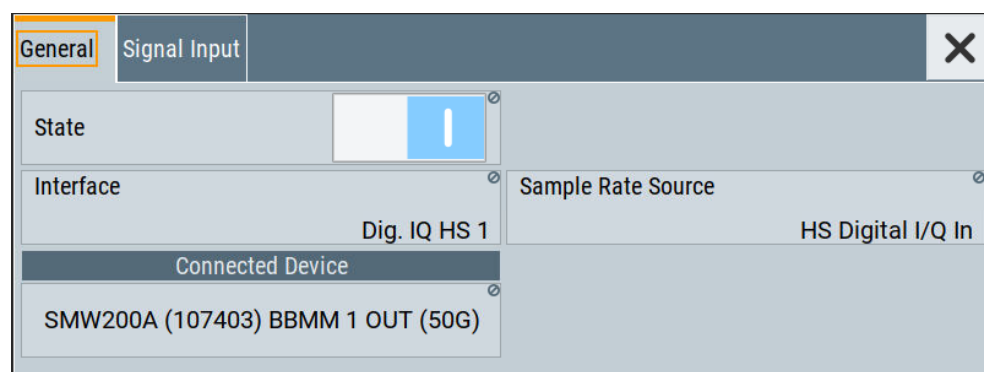

3. Select "Block Diagram > I/Q Stream Mapper > System Configuration > Multi Instrument".

The settings should be the following by default:

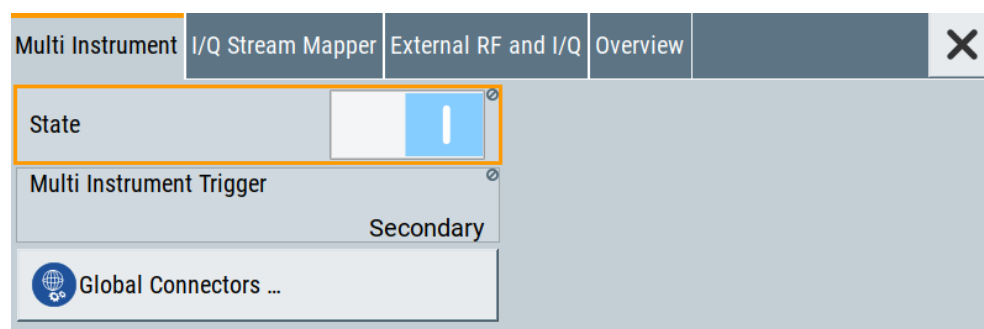

4. Select "Block Diagram > I/Q Stream Mapper > System Configuration > External RF and I/Q".

The settings should be the following by default:

How to connect external instruments and configure the signal flow

	Dir	External Instr	I/Q Conn	Rem Conn	Instrument Name	RF Coup	RF Frequency (Hz)	RF Level (dBm)	RF State
Dig. IQ HS 1	In	Config...			SMW200A (..				
Dig. IQ HS 2	Out	Config...							

4.9.8 How to generate a 2x8 MIMO signal for BS tests

Refer to [Table 4-1](#) to find out the suitable system configuration and the required additional instruments for this particular test.

There are two suitable test setups:

- A test setup with one R&S SMW and six R&S SGT
See ["Test setup with R&S SMW and 6xR&S SGT"](#) on page 214
- A test setup with multiplexed digital output signals

See user manual R&S SMW-K551 Generation of Digital "Slow IQ" Signals.


Test setup with R&S SMW and 6xR&S SGT

This test setup is a logical extension of the 1x4x4 test case.

Follow the instructions provided in the sections listed below but connect six R&S SGT instruments instead:

1. Connect all 8 instruments to a LAN.
2. Connect the six R&S SGT to the DIG I/Q interfaces of the R&S SMW (see [Figure 4-24](#) for explanation of the principle)
3. Distribute the *internal reference frequency* of R&S SMW to the other instruments. Connect the instruments in a daisy chain.
4. Perform the configurations described in:
 - [Chapter 4.9.3, "How to define the MIMO scenario"](#), on page 195
 - [Chapter 4.9.4, "How to route the I/Q streams to the output interfaces"](#), on page 198
 - ["To connect instruments to the I/Q digital interface"](#) on page 203

5. If the test setup requires a beamformed signal, **couple the local oscillators (LO) of all instruments**:
 - Activate the local oscillator of the R&S SMW.
 - Distribute the *LO signal* to the other instruments (instead of the reference frequency):
 - a) In the R&S SMW, select "RF > Reference Frequency/LO Coupling".
Select "LO Coupling Mode > A Internal& A->B Coupled".
Set "Out State > B On".

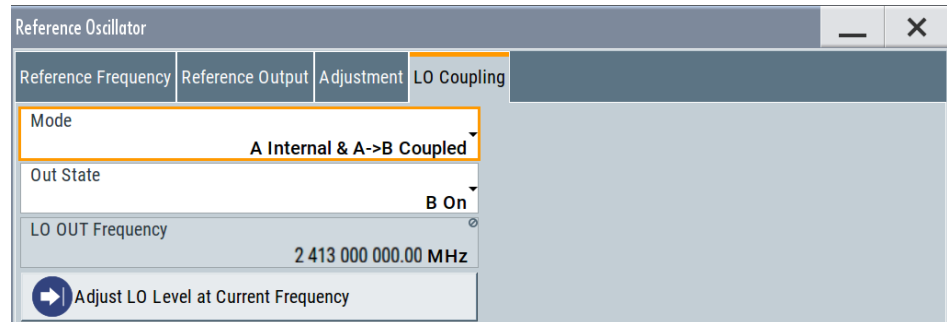

See also ["To configure LO coupling with cascaded instruments to achieve phase coherence"](#) on page 510.

- b) Disconnect the cable from the REF OUT connector.
Connect it to the LO OUT connector of the R&S SMW.

The connected instruments are reconfigured automatically so that they use the supplied local oscillator signal.

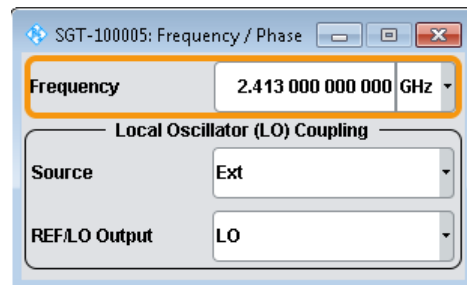


Figure 4-28: Example: Automatically configured settings in the connected external instrument

All connected instruments generate signals with the same RF frequency.

4.9.9 How to generate a 8x8 MIMO signal with two R&S SMW

Option: R&S SMW-K821

Refer to [Table 4-1](#) to find out the suitable system configuration and the required additional instruments for this particular test.

This test setup requires two R&S SMWs and four R&S SGS or four R&S SGT.

The 8x8 MIMO test setups require the signal of 8 Rx antennas and 64 fading channels. The R&S SMW calculates 32 fading channels but considers the correlation of all 64 channels. The instrument outputs four streams simultaneously. Two of the streams are output at the RF outputs. The other two streams can be routed to the analog and digital I/Q connectors and processed by a further processing instrument. (See [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199).

A second R&S SMW is required to generate the **second subset of fading channels and streams**. Logically, for the processing of two of the four streams, two additional further processing instruments are required, too.

Example of test setup

[Figure 4-29](#) shows an 8x8 MIMO test setup with two R&S SMW and four R&S SGT connected to the digital I/Q outputs of the R&S SMW. You can use four R&S SGS instead, too.

In this example, we distribute the trigger signal generated by R&S SMW#1 to **trigger both instruments simultaneously**. You can trigger both instruments also with a common external trigger signal. If the latter is the case, consider to adapt the trigger connections and settings.

How to connect external instruments and configure the signal flow

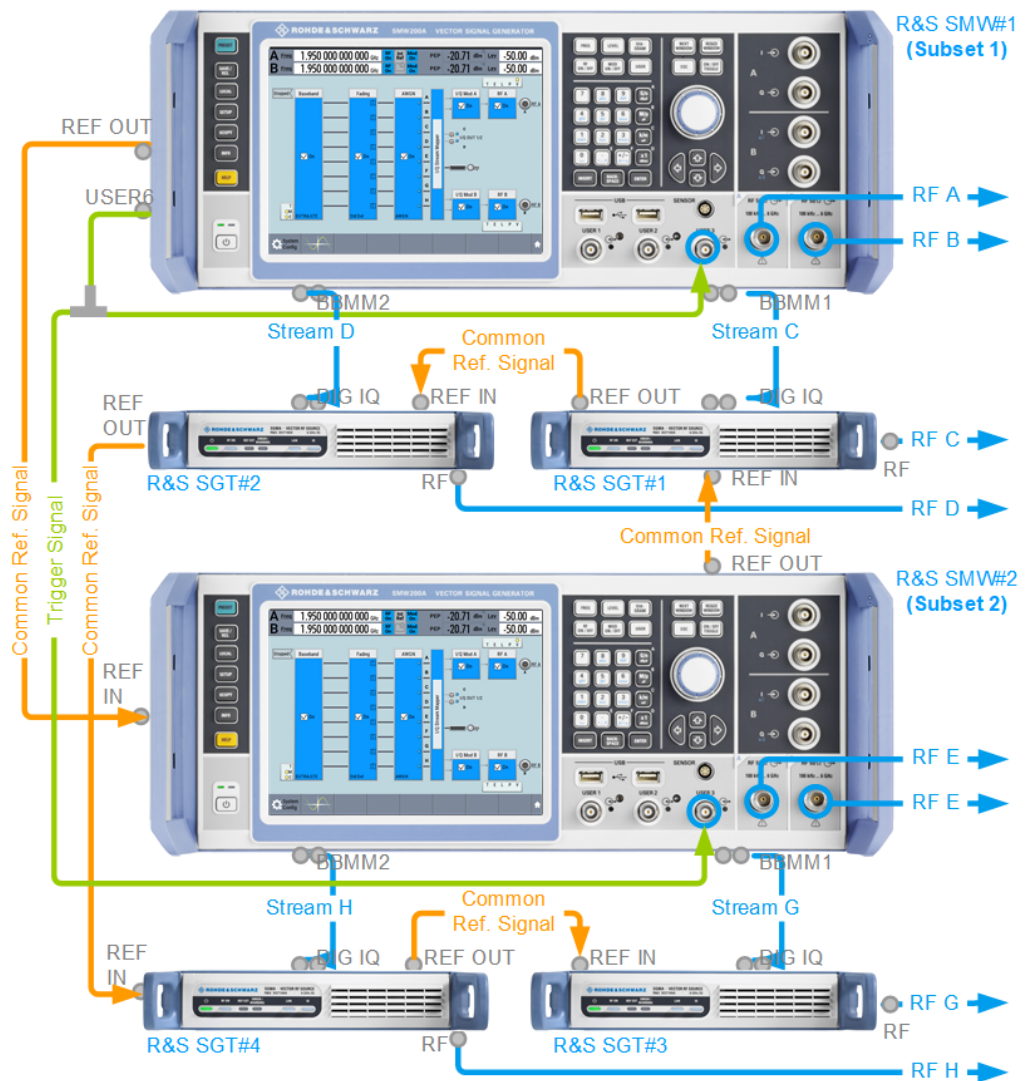


Figure 4-29: Example of test setup*: 8x8 MIMO with 2xR&S SMW and 4xR&S SGT

blue circle = front panel connector

gray circle = rear panel connector

* = To simplify the diagram, it does not show the LAN/USB connections between the instruments

Workflow overview

1. Cabling
See "To cable the instruments" on page 218.
2. Configuring the first R&S SMW
See "To configure the R&S SMW that simulates the first subset" on page 218.
3. Configuring the second R&S SMW
See "To configure the R&S SMW that simulates the second subset" on page 219.
4. Starting signal generation

See ["To start signal generation"](#) on page 220

To cable the instruments

Refer to [Figure 4-29](#) for illustration the required connections. The test setup does not show the LAN connections.

1. Connect all six instruments to a LAN.
2. Use suitable connecting cables.
The connecting cables must have the same length and type, applies for the following connections:
 - REF OUT to REF IN
 - BBMM1/2 to DIG IQ
 - USER6 to both USER3 connectors
 - RF outputs to DUT
3. Avoid unnecessary cable lengths and branching points.
4. Provide the instruments with common reference frequency signal.
In this test setup, the internal reference frequency of R&S SMW#1 is distributed to the other instruments. The instruments are connected in a daisy chain.
5. Use a T-connector to distribute the trigger signal generated by R&S SMW#1 and to trigger both instruments simultaneously:
 - a) Connect the instruments in a **star network**, concerning the trigger signal
 - b) Connect the USER 6 output of the R&S SMW#1 to the USER 3 input of R&S SMW#2 and the R&S SMW#1 itself.

In this test setup, the instruments are triggered by the trigger signal of the first one. For more information, see [Chapter 10.3.2, "Triggering several instruments with a common trigger signal"](#), on page 678.
6. Connect the external instruments to the digital I and Q connectors (BBMM 1 and 2) of the R&S SMW.

Tip: See also ["To find out the correct connector"](#) on page 195.

To configure the R&S SMW that simulates the first subset

1. Select "System Configuration".
2. Configure the following:
 - a) A 1x8x8 MIMO scenario with coupled sources.
See ["To simulate complex MxN MIMO scenarios using the "Fading and Base-band Configuration" settings"](#) on page 196.
 - b) **"Subset = 1"**
 - c) Map the I/Q streams to the output interfaces as follows: Stream A and B to RF A and B; stream C and D to BBMM 1/2 respectively.
See [Chapter 4.9.4, "How to route the I/Q streams to the output interfaces"](#), on page 198

3. Set "System Config. > Setup > Global Connectors" > **"User 6 > Direction = Output"**.
Set **"User 6 > Signal = Manual Trigger"**.
4. Define the baseband signal, for example an LTE 8x8 MIMO signal. Alternatively, load 8 waveforms in the ARB generator.
See also ["To define the baseband signal"](#) on page 197
5. For the selected baseband signal, configure the trigger settings:
 - a) Enable "Baseband > EUTRA/LTE > Trigger > Trigger Mode" > **"Armed Retrigger"**.
 - b) Select **"Trigger Source > Ext. Global Trigger 1"**.
 - c) Select "Sync Output to Ext. Trigger > On".

Per default, the "Ext. Global Trigger 1" signal is expected at **USER3**.
6. Select "Fading > Fading Settings":
 - a) Select "Restart" > **"Restart Mode > Baseband Trigger"**.
 - b) Configure the settings as required.
The 8x8 MIMO configuration generates 64 correlated channels. Predefined channel models do not exist.
 - c) Select "Fading > State > On".
7. Select "Frequency = 1.95 GHz" and "Level = -50 dBm"
8. Configure each of the R&S SGT as described in ["To connect instruments to the I/Q analog interface"](#) on page 201.
9. Press the [SAVE/RCL] key to save the instrument setup, for example as `8x8_subset1.savrc1txt` file.

The RF outputs are active, the fading simulator is enabled but not running, the baseband generator is not active. The whole system is triggered jointly, as described in ["To start signal generation"](#) on page 220.

To configure the R&S SMW that simulates the second subset

1. Transfer the save/recall file (`8x8_subset1.savrc1txt`) to R&S SMW#2.
2. At the R&S SMW#2, press the [SAVE/RCL] key to load the file.
See also:
 - [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726
 - Application sheet RS SMW Fast Data Alignment
(available on the R&S SMW product page at www.rohde-schwarz.com/manual/smw200a)
3. Select "System Configuration" > **"Subset = 2"**.
4. In the status bar, select the icon "Int. Ref".
5. Select "Reference Frequency" > "Source" > "External".
6. For the selected baseband signal, select "Baseband" > "EUTRA/LTE" > "Trigger".

7. Observe the settings.

We use the configuration from the first instrument, hence **"Trigger Source = External Global Trigger 1"** is selected. The R&S SMW expects the "Global Trigger 1" signal at the **USER3** connector.

8. Select "System Configuration" > "External RF and I/Q".
9. Select "Connect" for both external instruments.

The RF outputs are active, the fading simulator is enabled but not running, the baseband generator is not active. The whole system is triggered jointly, as described in ["To start signal generation"](#) on page 220.

To start signal generation

1. In **R&S SMW#2**, select "Baseband > On".
2. In the R&S SMW#1, select "Baseband > On".
3. To trigger the signal generation in both instruments from R&S SMW#1, select **"Global Connectors > Execute Trigger"**.

The baseband generators and the fading simulators in both instruments start simultaneously.

4.9.10 How to connect an R&S®CMW500 for fading applications

Option: R&S SMW-B10 and R&S SMW-B14

You can use R&S SMW to superimpose fading on the baseband signal generated by an R&S®CMW500. The R&S SMW must be connected to the digital I/Q interface of the R&S®CMW500.

The [Table 4-11](#) lists the stream mapping for this configuration; the table entries show the stream to interface mapping in the order the related boards are on the instrument's rear panel.

Table 4-11: Overview of the stream mapping

Digital interface	Direction	Stream	Digital interface	Direction	Stream
CODER1	Input	Stream to Baseband A	CODER2	Input	Stream to Baseband B
FADER 1	Input	Stream to Baseband C	FADER 2	Input	Stream to Baseband D
FADER 3	Output	Stream C	FADER 4	Output	Stream D
BBMM 1	Output	Stream A	BBMM 2	Output	Stream B

The [Figure 4-30](#) shows a 1x2x2 MIMO setup with two downlink paths using the connectors DIG IQ 1 to 4 of the R&S®CMW500. In this example, the R&S SMW is synchronized to a 10 MHz reference signal provided by the R&S®CMW500. The R&S®CMW500 also provides the R&S SMW with its trigger signal.

How to connect external instruments and configure the signal flow

All connections between R&S SMW and the R&S®CMW500 are established via the rear panels of the instruments.

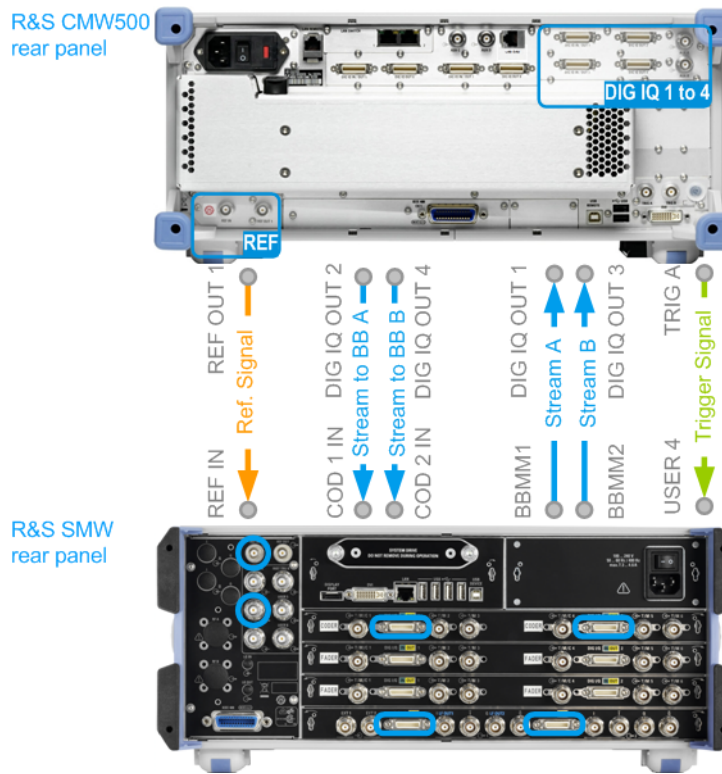


Figure 4-30: Example of test setup: 1x2x2 MIMO with 1xR&S SMW and 1xR&S CMW500 connected to the DIG I/Q interfaces

4.9.11 How to apply an external digital baseband signal

See:

- "To provide an external digital signal to the instrument" on page 221
- "To apply an external analog signal directly to the I/Q modulator" on page 223
- "To apply an external differential analog signal directly to the I/Q modulator" on page 223

To provide an external digital signal to the instrument

Option: R&S SMW-B10



A digital signal must be provided. The instrument displays an error message if no signal is applied at the digital input connector.

The external signal source, typically a second Rohde & Schwarz instrument, and the receiving instrument have to be synchronized, i.e. they have to use a common reference signal.

How to connect external instruments and configure the signal flow

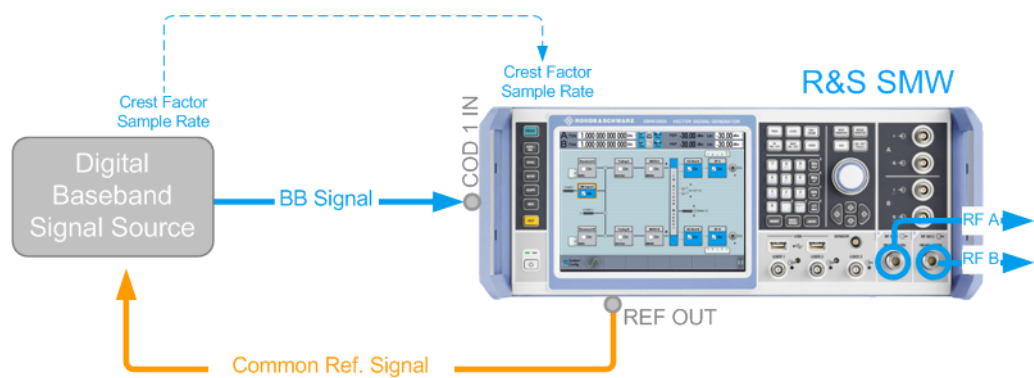


Figure 4-31: Example of test setup (simplified, standard baseband)

The procedure describes the configuration in the *default state of the instrument*, i.e. "System Config > Fading/Baseband Configuration > Mode > Standard".

1. Connect the external digital signal source to one of the digital input interfaces of the instrument, e.g. the CODER1.
2. If the "BB Input" block is not displayed in the block diagram, select the input symbol "CODER 1".
3. Select "BB Input > Signal Routing".
Adjust the required signal switching.
4. Select "BB Input > Baseband Offsets".
Adjust the frequency offset and the path gain settings, if necessary.
5. In the "Baseband Input Settings > Sample Rate" dialog, adjust the sample rate source and value.
6. In the "Baseband Input Settings > Input Level Settings" dialog adjust the "Crest Factor", "Peak Level" and "Level" values of the external input signal in one of the following ways:
 - a) Find out these values.
 - b) Enter them manually.
 - c) Set appropriate "Measurement Period" and trigger "Auto Level Set".
To ensure accurate level measurements, select a measurement period that is long enough to capture several periods of the input signal.
 - d) Enable "DIG IQ Auto Settings"
The R&S SMW receives peak level, level and crest factor values directly from the connected transmitter and recognizes changes automatically.

Based on these values, the internal gain control adjusts the input signal gain to achieve an optimal dynamic range.

Tip: Achieving correct signal leveling with external baseband signals requires one measurement per each baseband source with an appropriate measurement time. Perform the same steps in the other basebands, if an external digital signal is fed to the other digital input connectors.

7. In the "Baseband Input Settings" dialog, configure the other settings as required.

8. Select "Baseband Input Settings > General > State > On" to enable the processing of the external digital signal.
9. Open "Baseband Input Settings > Signal Monitoring" and monitor the signal over-flow status.

To apply an external analog signal directly to the I/Q modulator

Fed the external analog wideband signal at the I/Q input connectors (see [Table 4-3](#)). The signal is used as an input signal for the I/Q modulator.

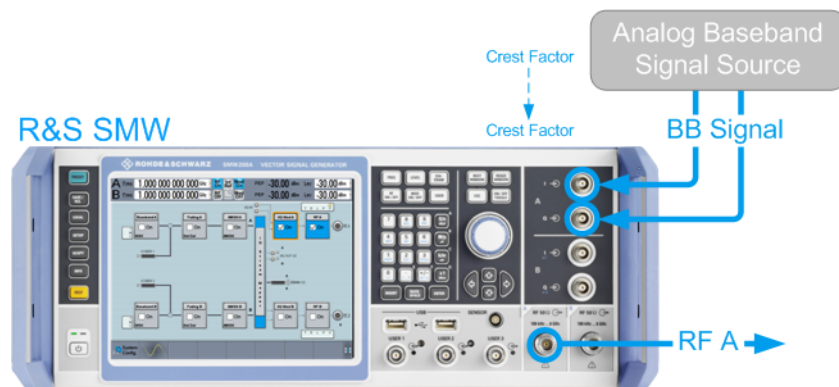


Figure 4-32: Example of test setup (simplified)

1. To configure the input signal source of the I/Q modulator, select "I/Q Mod > I/Q Mod In > Analog Wideband I/Q In".
2. To access the dialog box for configuring the I/Q modulator settings, select "I/Q Mod > I/Q Settings > I/Q Modulator".
Refer to [Chapter 7, "Applying I/Q vector modulation"](#), on page 469 for a description of the settings.
3. In the "I/Q Modulator" dialog, select "General > Analog Wideband I/Q Input > Crest Factor".
Adjust the crest factor and gain values.
4. To impair the analog signal, adjust the "I/Q Modulator > Impairments" settings (see also [Chapter 6.4, "Impairing the signal"](#), on page 460).
5. Select "I/Q Mod > On" or "I/Q Mod > I/Q Modulator > General > State > On" to enable the processing of the external analog signal.

To apply an external differential analog signal directly to the I/Q modulator

1. Select "I/Q Mod > I/Q Settings > Source > Differential Analog I/Q Input".
2. Follow the steps described in ["To apply an external analog signal directly to the I/Q modulator"](#) on page 223.

4.9.12 How to connect an R&S EX-IQ-BOX

Option: R&S SMW-B10

Transmission of digital I/Q signals to a DUT requires that the signals are adjusted to the type of interface, including its physical properties, and to the corresponding transmission protocol. While Rohde & Schwarz instruments generally communicate via a proprietary transmission protocol that is based on LVDS, many different interfaces and communication protocols have evolved in digital I/Q transmission.

To meet many of these variants in a convenient way, you can use the R&S EX-IQ-BOX as a downstream converter. The R&S EX-IQ-BOX is a configurable digital interface module, designed to convert digital I/Q signals of the Rohde & Schwarz instruments into *user defined* or *standardized* signal formats. The R&S EX-IQ-BOX uses breakout boards for signal conversion. These boards adjust the signal physically.

See:

- ["Basic test setup with the R&S EX-IQ-BOX"](#) on page 224
- ["To set up the R&S EX-IQ-BOX and R&S DigIConf"](#) on page 224
- ["To connect an R&S EX-IQ-BOX operating in transmitter mode to the instrument"](#) on page 225

Basic test setup with the R&S EX-IQ-BOX

The [Figure 4-33](#) shows the cabling of a basic test setup with the R&S SMW, a connected R&S EX-IQ-BOX and a DUT. The R&S EX-IQ-BOX is configured via USB by the digital interface configuration software R&S DigIConf, running on a PC. The R&S EX-IQ-BOX operates in transmitter mode from the R&S SMW to the DUT.

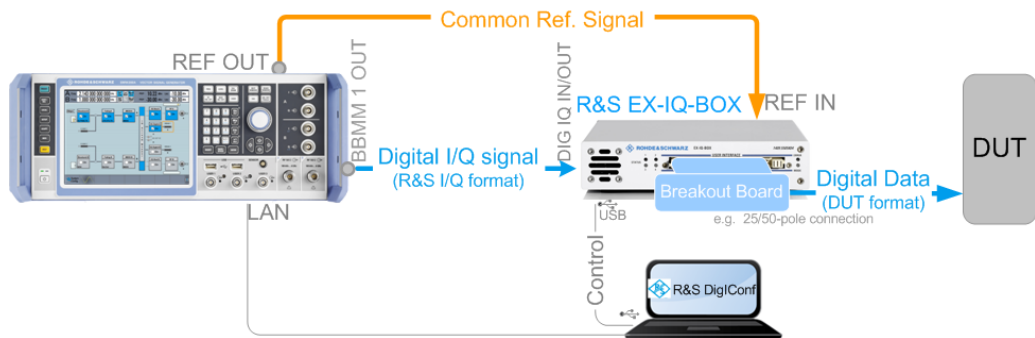


Figure 4-33: Basic test setup with R&S SMW and an R&S EX-IQ-BOX operating in transmitter mode



This section describes how to configure a basic setup with the R&S SMW and R&S EX-IQ-BOX, including the cabling, installing the configuration software, and connecting the instruments.

For more information, refer to the R&S EX-IQ-BOX Operating Manual.

To set up the R&S EX-IQ-BOX and R&S DigIConf

1. Disconnect all R&S EX-IQ-BOX instruments from controller PC.

2. Download the setup file `DigIConf_x.xx.xxx.exe` from the R&S website: <http://www.rohde-schwarz.com/product/EX-IQ-Box.html>
3. Install the configuration software R&S DigIConf on the controller PC.
4. Plug the required breakout board to the user interface of the R&S EX-IQ-BOX.
5. Connect the R&S EX-IQ-BOX to the AC supply.
6. Connect the USB cable between the USB IN of the R&S EX-IQ-BOX and the PC.
7. Start R&S DigIConf.

The application starts. The main view of R&S DigIConf shows the connected R&S EX-IQ-BOX.

To connect an R&S EX-IQ-BOX operating in transmitter mode to the instrument

1. Connect the required cable to the DIG I/Q IN connector of the R&S EX-IQ-BOX to the BBMM1 connector of the R&S SMW.

See [Figure 4-33](#).

The R&S SMW recognizes this external digital signal interface module automatically and indicates a labeled symbol of the R&S EX-IQ-BOX at the "Block Diagram > I/Q Digital" block.

R&S DigIConf also indicates a separate function block with information on the R&S SMW, the currently used interfaces, and the signal flow.

2. Select "Block Diagram > I/Q Digital > Sample Rate > Source > Digital IQ IN".
3. Adjust further required settings.
4. To access information on the recognized R&S EX-IQ-BOX components, select "Setup > Hardware Config > Baseband Assembly".

For more information, refer to the R&S EX-IQ-BOX Operating Manual.



See user manual R&S SMW-K551 Generation of Digital "Slow IQ" Signals.

5 Configuring the internal baseband source

The R&S SMW is a vector signal generator with internal signal generation and real-time functionality and with integrated arbitrary waveform generator.

The instrument enables you to generate various digital modulation signals in accordance with the definitions in the corresponding specifications or with user-definable characteristics. Signals are generated in realtime or played from a data store with external and internal data. The instrument provides an interface for the loading of externally computed modulation signals in form of waveform files.

5.1 Overview of the signal generation modes

The R&S SMW can generate the signal in the following ways:

- [Generating digital modulated signals according to various digital standards](#)
- [Generating a real-time signal](#)
- [Playing a waveform](#)

Generating digital modulated signals according to various digital standards

Provided the instrument is equipped with the required digital standard options, the instrument can generate digital standards in accordance with the corresponding specifications.

The required options are specified in the description of the respective digital standard (see the corresponding user manual).

See also [Chapter 5.4, "Generating signals according to digital standards"](#), on page 230.

Generating a real-time signal

- While utilizing the *internal* signal generator, the R&S SMW generates the digital modulation signals with user-definable characteristics in real time.
See also [Chapter 5.6, "Generating custom digital modulated signals"](#), on page 276.
- If the required options are installed, *externally supplied real-time* baseband signals can be added to the internally generated signals.
See also [Chapter 4.6, "Digital baseband input settings"](#), on page 161.

Playing a waveform

The R&S SMW is equipped with an arbitrary waveform generator (ARB) used to generate test signals and to process waveform files. Waveforms are files with settings provided for repeatable tests with the same test signal. Irrespectively of the way these waveform files are generated, they are always played from the instrument. That is, the signal calculation is performed in advance and the instrument reacts as a player.

- Externally computed waveform files can be loaded in the instrument over the LAN, USB, or the GPIB interface.

Create waveforms, for example, with the signal generation software R&S WinIQ-SIM2 or the R&S®Pulse Sequencer software.

- The instrument provides different functions to generate waveforms *internally*.
 - Some of the digital standards firmware options provide the possibility to store the current signal settings into a waveform file. These waveform files can be loaded in and processed as multi-carrier or multi-segment signal by the ARB generator.
See also [Chapter 5.7, "Using the arbitrary waveform generator \(ARB\)"](#), on page 315.
 - Multi-carrier waveforms consisting of carriers modulated by different baseband signals can be configured and created internally. Such multi-carrier waveform files are required to simulate complex multi-carrier scenarios with different baseband signals, e.g. CDMA2000, 3GPP FDD, or signals in accordance with the LTE-Advanced specifications.
See also [Chapter 5.11, "Generating multi-carrier signals"](#), on page 401.
 - Provided the instrument is equipped with the corresponding option, it is also possible to generate multi-carrier waveforms consisting of unmodulated carriers
See also [Chapter 5.12, "Generating multi-carrier continuous wave signal"](#), on page 418.

5.2 Standard or wideband baseband generator

The R&S SMW can be equipped with a standard or with a dedicated wideband baseband section.

- The term **standard baseband** instrument describes R&S SMW equipped with at least option Baseband Generator R&S SMW-B10 and baseband main module (R&S SMW-B13/B13T).
- The term **wideband baseband** instrument describes R&S SMW equipped with at least option Wideband Baseband Generator R&S SMW-B9 and Wideband baseband main module (R&S SMW-B13XT).

If fully equipped, the R&S SMW with standard baseband generates signals with up to 160 MHz bandwidth and modulates them on up to 40 GHz.

The fully equipped wideband baseband generator extends the internal RF modulation bandwidth to 2 GHz. With this option, the R&S SMW generates wideband vector modulated signals with up to 40 GHz carrier frequency using a single device.

Major differences between the standard and the wideband baseband generators

The R&S SMW can be equipped with a standard or with a wideband internal baseband generator. Regarding the RF performance, both generators offer similar characteristics.

The choice which baseband generator to use, depends merely on the application:

- The **standard baseband** generator is the best choice in applications that require multichannel, MIMO or MSR scenarios.

You find an insight of possible test scenarios in [Chapter 4.1.2, "From a test scenario to the required system configuration"](#), on page 110.

- The **wideband generator** offers an internal modulation bandwidth of 2 GHz. With its leading-edge baseband capabilities, it is designed for demanding wideband signal simulations.

See [Table 5-1](#) for an overview of the major characteristics of the R&S SMW.

Table 5-1: R&S SMW with standard or wideband generator: Overview of the main characteristics

Characteristics	Standard baseband	Wideband generator
Max signal bandwidth	160 MHz	2 GHz
Max RF frequency	40 GHz	40 GHz
Max baseband frequency offset	±80 MHz	±1 GHz
Signal generation mode	Real time and ARB mode (playback)	Real time and ARB mode (playback)
Max ARB waveform length	1 Gsample	2 Gsamples
Max clock rate	200 MHz	2.4 GHz
Internal modulation frequency response compensation	Yes	Yes
Multichannel and MIMO configurations	Yes	No

For exact information on the available options, and on the minimum requirements and the interdependencies between the provided options, refer to the R&S SMW data sheet.

Main application fields of R&S SMW equipped with standard generator

- Complex multichannel scenarios
- Versatile MIMO configurations
- MSR or LTE-Advanced applications
- Fading and noise simulation
- Wireless communications applications
- Radar and satellite applications
- Beamforming applications

Main application fields of R&S SMW equipped with wideband generator

- Wideband receiver testing
- Single box solution for coexistence testing with LTE
- Next generation of mobile communication signals, like 5G waveforms
- IEEE 802.11ad signals generation at IF frequency
- Aerospace and defense applications
- Advanced receiver testing of wideband radar modules
- Multicarrier signal with a bandwidth of up to 2 GHz

- Wideband signals also in the microwave range


Where to find related information

This description assumes a fully equipped [Standard baseband](#) R&S SMW, so that we can explain all instrument concepts and show the possible configuration and settings. If a particular function requires a special option, this option is stated in the list of the required options.


If your instrument is equipped with [Wideband baseband](#) generator, some sections of this description are not relevant. Refer to the list of required options in the corresponding section to check if the description applies in your case.

Note that the values ranges in the remote control commands correspond to a [Standard baseband](#) instrument.

5.3 Accessing the functions in the baseband domain

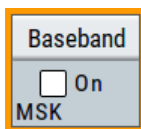

1. In the block diagram, select the "Baseband" block and navigate through the context menu.

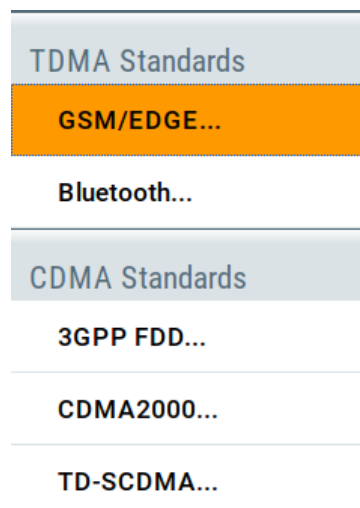

The "Baseband" block comprises all functions and settings concerning the baseband signal. The functions and settings include all generation modes as described in the [Chapter 5.1, "Overview of the signal generation modes"](#), on page 226.

2. By default, baseband signal generation is off.
To activate the baseband generator, in the block diagram, select the "Baseband" block and set "Baseband > On".

A short designation indicates the digital standard or modulation currently selected. The designation "Digital I/Q In" indicates that the instrument uses the external digital baseband signal, see [Chapter 4.6, "Digital baseband input settings"](#), on page 161.

For information, see:

- [Chapter 5.6, "Generating custom digital modulated signals"](#), on page 276
- [Chapter 5.7, "Using the arbitrary waveform generator \(ARB\)"](#), on page 315
- [Chapter 5.12, "Generating multi-carrier continuous wave signal"](#), on page 418
- The description of the digital standards
- [Chapter 5.14, "Shifting and boosting the baseband signal"](#), on page 428

5.4 Generating signals according to digital standards

The R&S SMW generates digital signals in accordance with the specifications of the main communication and radio standards only if the corresponding firmware options are installed.

This section lists the supported standard-compliant digital signals that run on the **standard baseband** or **wideband baseband** generator.

The following standards do not run on the **wideband baseband** generator (option R&S SMW-B9):

- ["IEEE 802.16 WiMAX™"](#) on page 233
- ["NFC/EMV"](#) on page 234

GSM/EDGE, EDGE Evolution

This digital standard requires an instrument equipped with the GSM/EDGE and EDGE Evolution options R&S SMW-K40/-K41.

The GSM/EDGE, EDGE Evolution options provide functionality to generate signals in accordance with the GSM/EDGE standard. GSM/EDGE signals comprise GMSK and 8PSK modulation and higher order modulations that are in accordance with the EDGE Evolution standard.

For details, see the R&S SMW GSM/EDGE user manual.

Bluetooth® Enhanced Data Rate/Bluetooth® 5.x

This digital standard requires an instrument equipped with options Bluetooth® Enhanced Data Rate (EDR) and Bluetooth® 5.x R&S SMW-K60/-K117.

The Bluetooth® options provide functionality to generate signals in accordance with the Bluetooth® core specification for Bluetooth® EDR and Bluetooth® 5.x. For the latest version of Bluetooth® 5.x, see the latest Bluetooth® core specification document.

For details, see the R&S SMW Bluetooth Enhanced Data Rate, Bluetooth 5.x user manual.

TETRA Release 2

This digital standard requires an instrument equipped with the TETRA Release 2 option R&S SMW-K68.

The TETRA Release 2 option provides functionality to generate signals in accordance with the standard Terrestrial Trunked Radio Release 2 (TETRA2).

For details, see the R&S SMW TETRA Release 2 user manual.

LoRa

This digital standard requires an instrument equipped with the LoRa option R&S SMW-K131.

The LoRa option provides functionality to generate signals in accordance with the Semtech Corporation, Camarillo California, USA proprietary standard.

For details, see the R&S SMW LoRa user manual.

3GPP FDD incl. enhanced MS/BS tests, HSPA, HSPA+

This digital standard requires an instrument equipped with the 3GPP FDD incl. enhanced MS/BS tests, HSPA, HSPA+ options R&S SMW-K42/-K83.

These options provide functionality to generate signals in accordance with the WCDMA standard 3GPP FDD.

For details, see the R&S SMW 3GPP FDD user manual.

CDMA2000®

This digital standard requires an instrument equipped with the CDMA2000 option R&S SMW-K46.

The CDMA2000 option provides functionality to generate signals in accordance with the CDMA2000 standard 3GPP2 C.S0002-C, version 1.0 (release C).

For details, see the R&S SMW CDMA2000 user manual.

TD-SCDMA and TD-SCDMA enhanced features

This digital standard requires an instrument equipped with the TD-SCDMA and TD-SCDMA enhanced features options R&S SMW-K50/-K51.

The TD-SCDMA options provide functionality to generate signals in accordance with the TD-SCDMA (3GPP TDD LCR) standard.

For details, see the R&S SMW TD-SCDMA user manual.

1xEV-DO Rev. A and Rev. B

This digital standard requires an instrument equipped with the 1xEV-DO Rev. A and Rev. B options R&S SMW-K47/-K87.

The 1xEV-DO options provide functionality to generate signals in accordance with the CDMA2000 1xEV-DO (Evolution-Data Optimized), Rev. A and Rev. B standard.

For details, see the R&S SMW 1xEV-DO Rev. A Rev. B user manual.

IEEE 802.11a/b/g/n, IEEE 802.11p/j, IEEE 802.11ac, IEEE 802.11ax, IEEE 802.11be

These digital standards require an instrument equipped with the WLAN options R&S SMW-K54/-K86/-K142/-K147.

These options provide functionality to generate signals in accordance with the wireless LAN standards IEEE 802.11a/b/g/n/ac/p/j/ax/be.

For details, see the R&S SMW IEEE 802.11 WLAN user manual.

IEEE 802.11ad, IEEE 802.1ay

These digital standards require an instrument equipped with a wideband baseband generator option R&S SMW-B9, IEEE 802.11ad option R&S SMW-K141 and the IEEE 802.11ay option R&S SMW-K177.

These options provide functionality to generate signals in accordance with the wireless LAN standards IEEE 802.11ad and IEEE 802.11ay.

For details, see the R&S SMW IEEE 802.11ad/ay user manual.

HRP UWB 802.15.4

This functionality requires an instrument equipped with the HRP UWB 802.15.4 option R&S SMW-K149.

This option provides functionality to generate signals in accordance with the HRP UWB standard.

For details, see the R&S SMW HRP UWB 802.15.4 user manual.

EUTRA/LTE Rel. 8, Rel. 9, Rel. 10, Rel. 11, Rel. 12, Rel. 13/14, Cellular IoT, incl. Enhancements

This digital standard requires an instrument equipped with the EUTRA/LTE options R&S SMW-K55/-K69/-K81/-K84/-K85/-K112/-K113/-K115/-K119/-K143.

These options provide functionality to generate signals in accordance with the 3GPP standard EUTRA/LTE Rel. 8, Rel. 9, Rel. 10, Rel. 11, Rel. 12 and Rel. 13/14.

For details, see the R&S SMW EUTRA/LTE user manual.

5G New Radio

This functionality requires an instrument equipped with the 5G New Radio option R&S SMW-K144.

This option provides functionality to generate signals in accordance with the 3GPP standard New Radio Rel. 15.

For details, see the R&S SMW 5G New Radio user manual.

Verizon 5GTF

This digital standard requires an instrument equipped with the Verizon 5GTF option R&S SMW-K118.

This option provides functionality to generate signals based on the Verizon 5G open trial specifications <http://5gtf.org/>.

For details, see the R&S SMW Verizon 5GTF user manual.

OFDM Signal Generation

This functionality requires an instrument equipped with the OFDM Signal Generation option R&S SMW-K114.

This option provides functionality to generate OFDM signals and signals according to predefined OFDM modulation schemes.

For details, see the R&S SMW OFDM Signal Generation user manual.

IEEE 802.16 WiMAX™

This digital standard requires an instrument equipped with the IEEE 802.16 WiMAX option R&S SMW-K49.

The IEEE 802.16 WiMAX option provides functionality to generate signals in accordance with the IEEE 802.16 standard WiMAX.

For details, see the R&S SMW WiMAX user manual.

OneWeb

This functionality generates signals based on the OneWeb specification.

For details, see the R&S SMW OneWeb user manual.

GNSS

These digital standards require an instrument equipped with the GNSS options R&S SMW-K44/-K66/-K94/-K97/-K98/-K106/-K107/-K108/-K109/-K132/-K134/-K135/-K136/-K137/-K138/-K139.

The GNSS options provide functionality to generate signals in accordance with satellite navigation standards and to turn the R&S SMW into a GNSS simulator.

For details, see the R&S SMW Satellite Navigation user manual.

GBAS

This digital standard requires an instrument equipped with the option R&S SMW-K111.

The GBAS option provides functionality to generate signals in accordance with the Ground-Based Augmentation System (GBAS) standard.

For details, see the R&S SMW GBAS user manual.

DVB-H/T, DVB-S2/S2X, DVB-RCS2

This digital standard requires an instrument equipped with the DVB options R&S SMW-K52/-K116/-K169/-K176.

The DVB options provide functionality to generate signals in accordance with the digital video broadcasting standards DVB-H, DVB-S2/S2X/S2X-E and DVB-RCS2.

For details, see the R&S SMW Digital Video Broadcasting Options user manual.

NFC/EMV

This digital standard requires an instrument equipped with the NFC/EMV option R&S SMW-K89.

The NFC/EVM option provides functionality to generate signals in accordance with the short-range wireless connectivity technology NFC-A/B/F and the EMV standard.

For details, see the R&S SMWNFC A/B/F user manual.

5.5 Common functions and settings in the baseband domain

This chapter describes common signal generation settings that are common to many generation tasks. These settings are independent from the selected baseband source or the selected digital standard.

For specific signal generation tasks, there can be specific settings that can deviate from common signal generation settings. For example, a specific signal generation task is to generate a signal according to a digital standard.

5.5.1 Basics on signals, modulation formats and filters

This section provides general information on common topics and basic principles.

• Data, clock and control signals and sources in the baseband	234
• Regular marker output signals	241
• Baseband trigger signals	245
• Supported modulation signals	255
• Supported coding schemes	256
• Supported baseband filters	257
• Methods for optimizing the crest factor	259

5.5.1.1 Data, clock and control signals and sources in the baseband

This section describes common characteristics of the signals used for generating the baseband signal for all standards. Common characteristics do not depend on the used generation mode.

The selection in the dialogs at any given time depends on the parameter and standard concerned. It is clear from the selection list offered in the dialog. Some parameters are therefore not available in certain cases.

Characteristics specific to particular standards are described in the corresponding user manual.

For the generation of modulation signals, the instrument uses the following input signals:

- [Internal modulation data](#)

- [External modulation data](#)
- [Clock signals](#)
- [Control signals](#)

Signal sources

The data, the clock and the trigger signals can be both internally generated and supplied from an external source. Control signals however are always generated internally.

Depending on the current configuration, the internally generated data and marker signals are output on one or several connectors. The output capabilities of the instrument and the required connectors are configurable.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

Internal modulation data

The R&S SMW uses the following internal modulation data sources:

- **Data lists**

Data lists are externally or internally created binary lists with modulation data. The instrument provides standard file select function for loading of existing data lists, creating internally new data lists or editing an existing one. Internally, data lists are created in the dedicated "Data List" editor (see [Chapter 5.6.3.7, "Data list editor"](#), on page 294). A separate file is created for each list and saved on the instrument's hard disk. The filename is user-defined; the file extension is *.dm_iqd.

The maximum length of a data list is determined by the size of the data list memory (see data sheet). There is no restriction on the number of lists that can be saved. Settings for file handling, like transferring external data lists to the instrument, or renaming of folders and files, are accessed via the standard "File Manger" function. (See also [Chapter 11, "File and data management"](#), on page 699).

- **Data patterns**

Simple data patterns such as binary 0 ("All 0") strings or 1 ("All 1") strings or variable bit strings with a maximum length of 64 bits can be used as internal modulation data.

- **PRBS data**

The PRBS generators deliver pseudo random binary sequences of differing length and duration. They are known as maximum length sequences. PRBS sequences are generated with the aid of ring shift registers with feedback points determined by the polynomial.

The pseudo-random sequence from a PRBS generator is uniquely defined by the register number and the feedback. The [Table 5-2](#) describes the available PRBS generators.

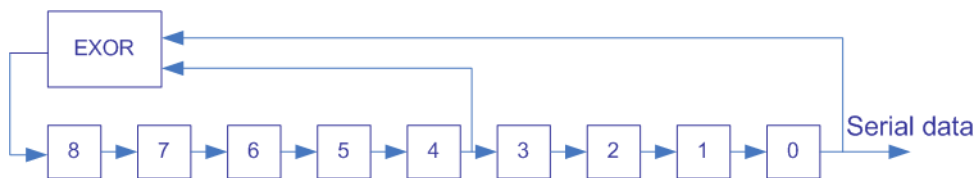
For PRBS15 and PRBS23, a CCITT V.52-compliant data inversion is performed in the feedback path automatically.

Table 5-2: Overview of PRBS generators

PRBS generator	Sequence length /bit	Feedback to	GUI selection
9-bit	$2^9 - 1 = 511$	Registers 4, 0	"PRBS 9"/"PN9"
11-bit	$2^{11} - 1 = 2047$	Registers 2, 0	"PRBS 11"/"PN11"
15-bit	$2^{15} - 1 = 32767$	Registers 1, 0	"PRBS 15"/"PN15"
16-bit	$2^{16} - 1 = 65535$	Registers 5, 3, 2, 0	"PRBS 16"/"PN16"
20-bit	$2^{20} - 1 = 1048575$	Registers 3, 0	"PRBS 20"/"PN20"
21-bit	$2^{21} - 1 = 2097151$	Registers 2, 0	"PRBS 21"/"PN21"
23-bit	$2^{23} - 1 = 8388607$	Registers 5, 0	"PRBS 23"/"PN23"

Example:

By way of example, the diagram on [A 9-bit PRBS generator](#) shows a 9-bit generator with feedback to registers 4 and 0 (output). The generated serial data is converted internally, e.g 2 Bit/Symbol if QPSK is used.

**Figure 5-1: A 9-bit PRBS generator**

Related settings:

- [Chapter 5.6.3.3, "Data source settings"](#), on page 281
- [Chapter 5.6.3.7, "Data list editor"](#), on page 294
- [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296
- "Data Source" selection in the dialogs of the firmware options

External modulation data

Option:

- R&S SMW-B10
- R&S SMW-B9, only in "System Config > Mode > Advanced".

The R&S SMW can generate a custom digitally modulated signal from an external serial data source.

For proper synchronization, the R&S SMW requires a reference (external) symbol clock signal to generate a bit clock out of it. The active edge of both, the symbol clock and the bit clock, is configurable. Positive and negative timing deviations between the clock and the data signals are indicated and automatically corrected.

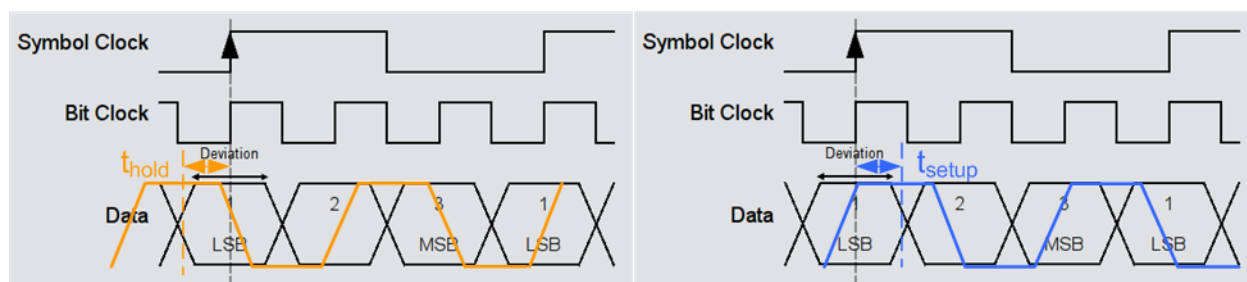


Figure 5-2: Timing deviations (t_{hold} and t_{setup}) between the clock and the data signals

t_{hold} = "Timing Deviation < 0": data signal is received ahead of the clock signal. Data is held and output synchronous to the clock signal.

t_{setup} = "Timing Deviation > 0": the clock signal is received ahead of the data signal; the processing is held until the data is received

See also ["Synchronizing data signals and clock signals"](#) on page 239.

Supply the external data signal and in R&S SMW equipped with standard baseband the external clock signal via the connectors listed in:

- [Table 5-3](#)
- R&S SMW-B10: [Table 5-5](#)

Table 5-3: Input connectors for the external serial data

Baseband generator	Connector	Location	GUI selection
Standard (R&S SMW-B10)	T/M 2 T/M 5	Local connector on the coder board	To configure the connector: <ul style="list-style-type: none"> • "Custom. Dig. Mod > Clock Settings > Local Connectors > Direction > Input" • "Custom. Dig. Mod > Clock Settings > Local Connectors > Signal > Data" To enable the data source: <ul style="list-style-type: none"> • "Custom. Dig. Mod > Data Source > Data Source > External Serial"
Wideband (R&S SMW-B9)	T/M 2	Local connector on the coder board	Connector configuration is not required. This signal is the default one, if "Custom. Dig. Mod > Data Source > Data Source > External Serial".

The instrument can process the external serial data in the least significant bit (LSB first) or in the most significant bit (MSB first) orders.

For information on the maximum data rate for serial data processing, see the data sheet.

Related settings: ["Settings for Data Source = External"](#) on page 284.

Clock signals

The instrument requires an internal or an external clock reference for generating the timing pulse:

- **Internal clock reference**
 The instrument uses its internal clock reference.
 The internally generated symbol clock signal can be output at the local T/M/C connectors. The [Table 5-4](#) gives an overview.

Table 5-4: Output connectors for the reference clock signal

Baseband generator	Connector	Location	GUI selection
Standard (R&S SMW-B10)	T/M/C	Local connectors on each board	<p>To configure the connector:</p> <ul style="list-style-type: none"> "Custom. Dig. Mod/Digital Standard > Clock Settings > Local Connectors > Direction > Output" "Custom. Dig. Mod/Digital Standard > Clock Settings > Local Connectors > Signal > Symbol Clock" <p>To enable the clock source:</p> <ul style="list-style-type: none"> "Custom. Dig. Mod/Digital Standard > Clock Settings > Clock Source > Internal"
Wideband (R&S SMW-B9)	T/M/C	Local connector on the coder board	<p>Connector configuration is not required.</p> <p>This signal is the default one, if "Custom. Dig. Mod > Data Source > Data Source > External Serial".</p>

- **External clock reference**

Supply the external clock via the connectors listed in [Table 5-5](#).

Table 5-5: Input connectors for the external reference clock signal

Connector	Location	GUI selection
T/M/C	Local connector on each coder board	<p>To configure the connector:</p> <ul style="list-style-type: none"> "Custom. Dig. Mod/Digital Standard > Clock Settings > Local Connectors > Direction > Input" "Custom. Dig. Mod/Digital Standard > Clock Settings > Local Connectors > Signal > Clock" <p>To enable the clock source:</p> <ul style="list-style-type: none"> "Custom. Dig. Mod/Digital Standard > Clock Settings > Clock Source > External Local Clock"



The signals provided at the global and local connector are configurable. However, there is a limitation on the number and the type of signals that are configured simultaneously, see [Chapter 12.2.2.5, "Internal resources for the trigger, marker, clock and control signals"](#), on page 750.

Internal and external clock synchronization

When the external clock reference is selected, the internal clock is synchronized to it. Internally, the instrument interprets the rising edge as the active edge. The active edge of the external clock signal is configurable ("Local Connector Settings > Clock Input Slope"). The active rising edge of the internal clock is synchronized with either the rising or the falling edge of the external clock reference.



Proper synchronization

The correct synchronization of the clock synthesizer requires that a special procedure is maintained. Refer to ["To apply an external clock signal"](#) on page 300 for a description of the required steps.

Synchronizing data signals and clock signals

When selecting data signals and clock signals, the following operating modes are possible:

- External clock and internal data
The modulation data is generated internally. The clock synchronization can be based on the rising edge or the falling edge according to the configuration. Refer to the data sheet for information about the maximum permissible multiple symbol clock.
See also ["Internal modulation data"](#) on page 235.
- Internal clock and internal data
The synchronization is always based on the positive edge of the clock.
- External or internal clock and external serial data
The clock synchronization can be based on the rising or falling edge of the internal clock, and of the external symbol clock.
From the externally supplied symbol clock, the instrument generates the bit clock. It uses the bit clock for reading the serial data. The active edge of the bit clock is configurable.
See also ["External modulation data"](#) on page 236.
If the internal clock is used, always connect the R&S SMW and the instrument acting as a data source to a common reference frequency.

Related settings:

- [Chapter 5.5.2.3, "Clock settings"](#), on page 269
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745
- Clock settings in the dialogs of the firmware options

Control signals

The following control signals are processed in the R&S SMW:

- "Burst Gate" for power ramping
- "Level Attenuation" for power ramping
- "CW/Mod" for controlling the CW (continuous wave) mode

A dedicated internal "Control Data Editor" is provided for defining the control signals. Refer to [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296 for a description on the provided settings.

Continuous wave mode

The "CW" signal turns off digital modulation. The signal is output in unmodulated form.

The CW/Mod control signal is generated internally and is output at one of the T/M connectors.

Power ramping and level attenuation

The R&S SMW uses the two control signals "Burst Gate" and "Lev_Att" to trigger the power ramping and level attenuation functions.

The instrument internally generates control signals as configured in [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296; the signals can be output on the T/M connectors.

- *Burst gate control signal*
The "Burst Gate" signal is a rectangular pulse signal with variable low and high periods. Signal generation is restricted to the gate high periods. If the power ramping function is enabled, each transition between two gate periods of the "Burst Gate" signal triggers the generation of a ramp. Further settings define the form and the steepness of this ramp, see ["Impact of the power ramping settings on the generated signal"](#) on page 240.
- *Level attenuation control signal*
The "Lev_Att" signal is a rectangular pulse signal with variable low and high periods. Level attenuation is applied, if the "Lev_Att" signal is high. If level attenuation is enabled, the modulation signal level is attenuated by a defined value.

Related settings:

- [Chapter 5.6.3.6, "Power ramp control settings"](#), on page 292



Possible applications

- Use the "Level Attenuation" function to simulate radio stations located at various distances.
- Use the "Power Ramp" function if it is necessary to control the RF output signal envelope synchronously, e.g. by the generation of TDMA signals.

Both the GSM/EDGE and the TD-SCDMA firmware options are equipped with embedded power ramping function. In the GSM/EDGE standard for example, a maximum of 7 different level attenuation values can be defined and allocated separately to the 8 slots independently of one another.

Impact of the power ramping settings on the generated signal

The [Figure 5-3](#) explains the power ramping function in principle. The "Burst Gate" signal defines the start of the rising and falling edges of the envelope of the output signal, and the "Lev Att" signal defines the start and end of level attenuation. The signal level during the attenuation period is a configurable value.

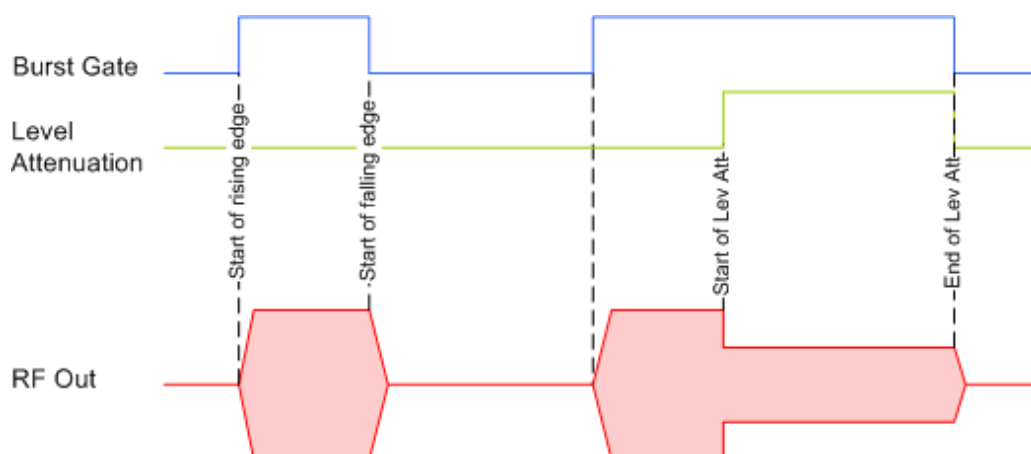


Figure 5-3: Signal behavior when power ramping and level attenuation are enabled

Several parameters are provided for precise definition of the form and the steepness of ramp. The Figure 5-4 depicts the impact of the provided settings.

- Ramp function: defines the shape of the rising and falling edges
- Ramp time: defines the duration of the rising and the falling ramp
- Rise/fall delay: offsets the falling edge of the envelope at the beginning/end of a burst

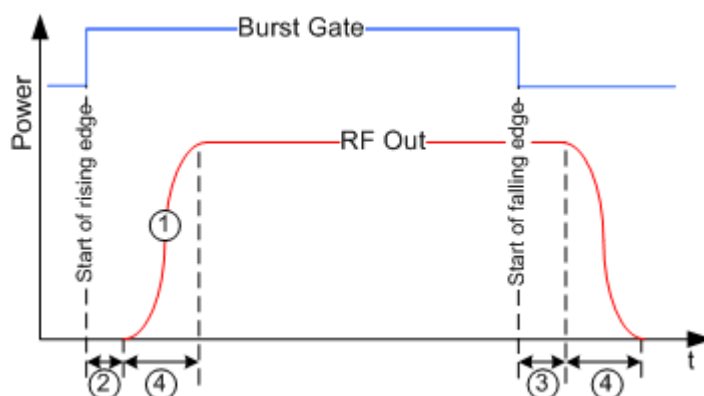


Figure 5-4: Impact of the ramp settings

- 1 = "Ramp Function"
 2, 3 = "Rise Delay", "Fall Delay"
 4 = "Ramp Time"

5.5.1.2 Regular marker output signals

The R&S SMW can add *additional signals* to the generated signal. Marker signals (or markers) are digital signals which can be used to synchronize external devices to the generated data stream. For example, with suitable marker settings, a slot clock or frame clock can be selected, or the start of a particular modulation symbol can be marked.



Three marker output signals are available in each baseband. All marker signals can be output at the provided connectors but not always at the same time (see [Chapter 12.2.2.5, "Internal resources for the trigger, marker, clock and control signals"](#), on page 750). The mapping of the marker output signal to the output connector is configurable.

Table 5-6: Mapping of the marker signals to the output connectors

Baseband generator	Baseband	Marker	Connector type	Connector name	Connector direction
Standard (R&S SMW-B10)	Baseband A/B/C/D	Marker 1, 2 and 3	Local connector	T/M	Output
			Global connectors	USER x	Output
Wideband (R&S SMW-B9)	Baseband A	Marker 1, 2	Local connector	T/M1/2	Output
	Baseband B	Marker 1, 2	Local connector	T/M1/2	Output
	Baseband A/B	Marker 1, 2 and 3	Global connectors	USER x	Output

Related settings:

- [Chapter 5.5.2.2, "Marker settings"](#), on page 268
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745
- Marker settings in the dialogs of the firmware options

Marker modes

The marker mode is a characteristic for the shape and the periodicity of the marker. The R&S SMW provides several different modes to define different marker signals. Most of them are specific for each of the firmware options. This section focuses only on the general commonly available marker signals.

The marker mode is a characteristic for the shape and the periodicity of the marker. The R&S SMW provides several different modes to define different marker signals, that are described in the following sections.

Generally, the marker signal can change from "On" (high) to "Off" (low) state or vice versa after some period of time. The instrument provides various ways to describe the marker signal. Use the method that best suits your needs.

Marker mode restart

The generated marker signal is a single "On" pulse. The rising edge of this pulse is generated at the signal generation start and at each subsequent signal restart time. This marker can be used to monitor the effects of the selected trigger, e.g. trigger causing restarts of the signal generation.

Marker mode pulse

Periodic marker with consecutive On and Off periods of equal length. The first On period starts at the beginning of the first generated sample/symbol. The marker frequency is defined by a "Divider". The frequency is derived as follows:


<Frequency> = "Symbol/Sample Rate" / "Divider", respectively

<Frequency> = "Sampling Frequency" / "Divider".

Example:

"Symbol Rate = 1 Msym/s", "Divider = 2"


The marker frequency is 500 kHz, corresponding to a marker period of 2 us. Each On and Off period has a length of 1 us, corresponding to one symbol period. With a divider of 4 (6, 8 ...), the length of each On and Off period is increased to 2 (3, 4, ...) symbol periods.

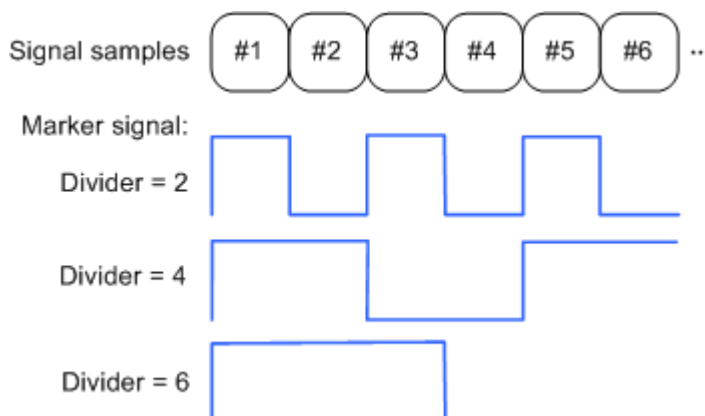**Marker mode pattern**

Periodic marker where each period is defined by a bit pattern with a maximum length of 64 bits. A "1" ("0") in the pattern denotes an On (Off) signal segment with a duration of one sample/symbol period.

Example:

In the following example, the marker signal is defined by a pattern 100100....

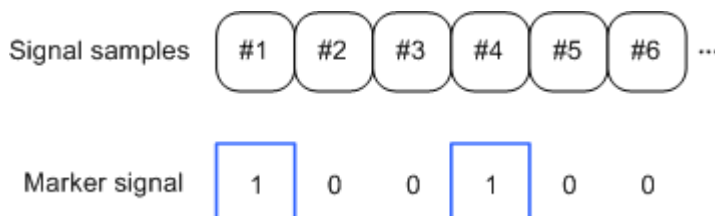**Marker mode On/Off ratio**

Similar to "Pulse" but with independent lengths of the On and Off periods. The length of the periods is entered as several symbols/sample periods.

Example:

In the following example, the marker signal is defined by an "On Time" = 1 and "Off Time" = 2.

**Marker mode CList**

The instrument generates a marker signal that is defined in the selected control list. The R&S SMW provides a graphical interface for convenient definition of control signals among others also for the marker signals.

Marker minimum duration

The period length of several marker signals is specified as several symbols/sample, in one of the two ways: directly or as mathematical function, where the marker period length is derived from other marker parameters. (See "[Marker modes](#)" on page 242)

Irrespectively of the way it is defined, if the [Wideband baseband](#) is used, the duration of the shortest marker period length is a value that depends on used sample or symbol rate. The possible sample or symbol rates in turn depend on the installed options, see [Table 5-7](#).

Table 5-7: Minimum marker duration at the T/M connectors, depending on the System Config > Mode

Sample rate or symbol rate	Minimum marker duration, Samples/symbols "System Config > Mode = Standard"	Minimum marker duration, Samples/symbols "System Config > Mode = Advanced"	Required options
≤ 400 MHz	1	1	R&S SMW-B9
> 400 MHz	8	1	R&S SMW-B9 and R&S SMW-K527

Table 5-8: Minimum marker duration at the USER x connectors, depending on the System Config > Mode

Sample rate or symbol rate	Minimum marker duration, Samples/symbols "System Config > Mode = Standard"	Minimum marker duration, Samples/symbols "System Config > Mode = Advanced"	Required options
≤ 300 MHz	1	1	R&S SMW-B9
300 MHz to 600 MHz	2	1	R&S SMW-B9
600 MHz to 1200 MHz	4	1	R&S SMW-B9 and R&S SMW-K527
1200 MHz to 2400 MHz	8	1	R&S SMW-B9 and R&S SMW-K527

The dependencies in [Table 5-7](#) apply to the following marker modes and in all firmware options:

- "Pattern"
- "On/Off Ratio"
- "Pulse"
- "Period"
- "User Defined"

Delaying marker signals

In all the examples listed in ["Marker modes"](#) on page 242, the marker starts at the beginning of the first generated sample/symbol (sample/symbol no. 1). It is possible though to delay the start of the marker by an integer number of symbols/sample periods.

5.5.1.3 Baseband trigger signals

The R&S SMW provides several trigger modes, different trigger sources, and some additional trigger settings to suppress or delay the trigger events. This section provides an overview of the provided baseband trigger settings and the impact of the trigger settings on the signal generation.

The current signal generation status ("Running" or "Stopped") is continuously displayed in the corresponding dialog, indicated in the header of the tab and in the block diagram of the instrument. This indication is important when an external trigger is applied.

For information on the trigger signals used in the RF domain, see [Chapter 8.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 515.

Trigger

The trigger signals are internally generated or externally supplied signals which start signal generation at a particular point in time. However, signal generation can also take place without triggering. In this case, the signal generation starts immediately after the modulation is enabled.

Trigger event

A trigger event is caused by the received trigger signal. Another possibility to provoke a trigger event is to execute trigger manually. The "Arm" function stops the signal generation until subsequent trigger event occurs.

- [Trigger sources](#)..... 246
- [Impact of the trigger modes on the signal generation](#)..... 247
- [Impact of the additional trigger settings](#)..... 250
- [Receiving and providing trigger signals](#)..... 253

Trigger sources

The provided trigger sources are divided into two main groups, internally generated or externally supplied trigger signals.

- Internal ("Internal" and "Internal Baseband A/B")
Internal trigger signals are generated by the instrument itself and can be used independently per baseband or routed from one to the other. This feature is useful, if the signal generation start in the basebands has to be synchronized.
- External ("External Global Trigger 1/2", "External Local Trigger", "External Local Clock")

External trigger signal is generated by an external trigger source.

- An external *local* trigger/clock signal is dedicated to the baseband board this signal is supplied at.
(That is, the board the local T/M/C connector is located at).
An external *local* trigger/clock signal can be internally routed and used for synchronous triggering of all other basebands.
- An external *global* trigger signal can be supplied to one or simultaneously to all the basebands. The latter possibility is the useful, if common triggering of all basebands and synchronous generation start are required.

The instrument expects the trigger signal at one of the T/M/C or USER x connectors. Refer to [Chapter 12.2, "Configuring local and global connectors"](#), on page 745 for information on how to configure the required settings; see also [Figure 12-1](#).

- External ("Baseband Sync In")
Option: R&S SMW-B9
In primary-secondary instrument mode, secondary instruments are triggered by the active edge of the synchronization signal.
This trigger source is selected automatically and cannot be changed.
See [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670.



The trigger mode setting, the selection of the trigger source and the setting of a delay and trigger suppression in the case of external triggering are carried out independently for each of the basebands or, if there is coupled trigger settings, jointly for all basebands.

However, the polarity and impedance characteristics of the external signals supplied at the USER connectors are identical for all basebands using this signal.

A signal which marks the trigger event can be output at the T/M/C connectors.

Related settings:

- [Chapter 5.5.2.1, "Trigger settings"](#), on page 262
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745
- Trigger settings in the dialogs of the firmware options

Impact of the trigger modes on the signal generation

A trigger event affects the signal generation in different way, depending on the selected trigger mode. The [Table 5-9](#) gives an overview of the provided trigger modes and their impact.

Table 5-9: Impact of the trigger events on the generated signal

"Trigger Mode"	Signal generation mode ¹⁾	1st Trigger event "Exec. Trigger" or "External" trigger signal	Subsequent trigger event "Exec. Trigger" or "External" trigger signal	Trigger event "Arm"
"Auto" See Figure 5-6	Continuous	-	-	-
"Retrigger" See Figure 5-7	Continuous	Initial start	Restart	-
"Armed_auto" See Figure 5-8	Continuous	Initial start	Restart (only after previous "Arm")	Stop
"Armed_retrigger" See Figure 5-9	Continuous	Initial start	Restart	Stop
"Single" See Figure 5-5	Single length determined by "Trigger Signal Duration"	Initial start	Restart	-

¹⁾ The instrument generates a continuous signal or a single signal.

- Single signal generation means that the signal generation stops after one cycle. That is, after the signal with signal length determined by the "Trigger Signal Duration" has been generated.
- Continuous transmission means that the signal is generated repeatedly without delay and until the data generation is stopped explicitly. However, any parameter change within the processing chain (baseband, fading simulator, or stream mapping) causes a signal generation restart.

The following is a list of the trigger modes together with their short description. An example of their impact on the generated signal is given. The provided examples are intended to show the triggering mechanism in principle. To simplify the description, an internal trigger event ("Execute Trigger") is used. An external trigger event has the same effect on the signal generation. In the examples on the figures bellow, the instrument's processing time is ignored.

- Single
The instrument starts the signal generation only when a trigger event occurs. The signal is generated once. Its signal length is set with the parameter "Trigger Signal Duration".
Every subsequent trigger event causes a restart.

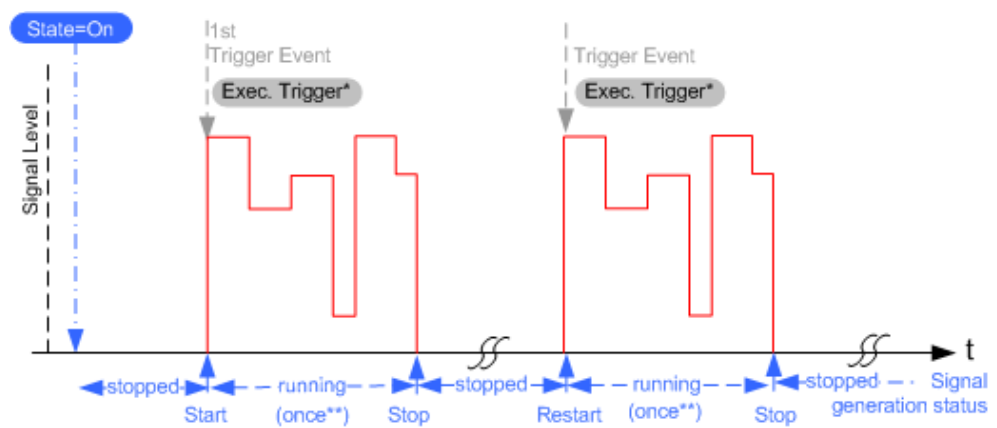


Figure 5-5: Trigger mode single

* = Internal trigger event (to simplify the description)

** = The signal is generated once to the length specified with "Trigger Signal Duration"

- Auto

In auto trigger mode, the instrument generates a continuous signal.

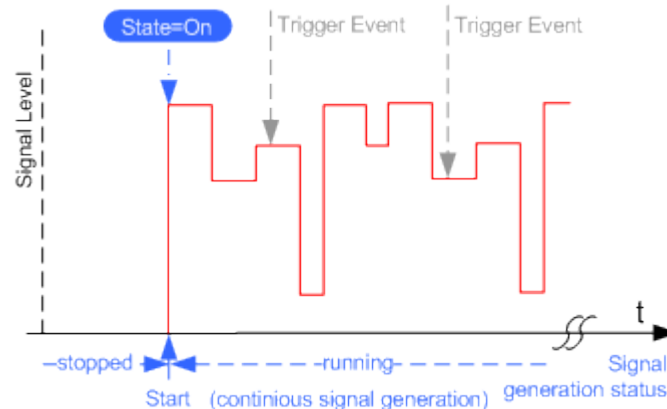


Figure 5-6: Trigger mode auto

- Retrigger

The instrument generates a continuous signal. With enabled retrigger, a new trigger event aborts the current generation cycle and restarts the signal generation from the beginning.

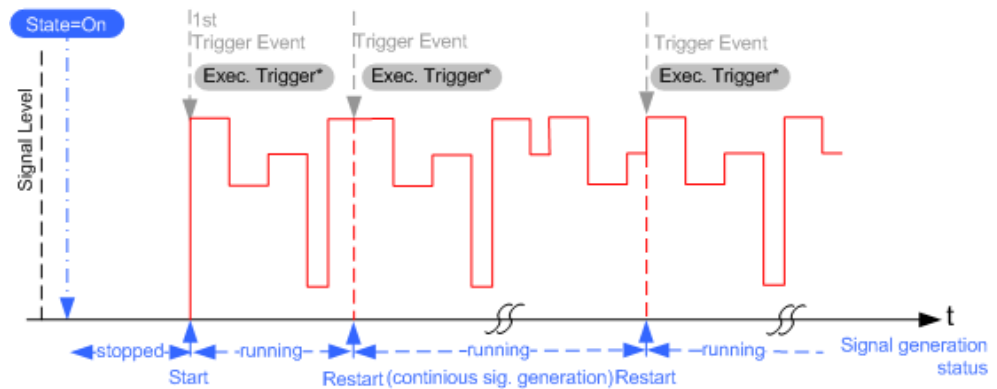


Figure 5-7: Trigger mode retrigger

* = Internal trigger event (to simplify the description)

Compare the shape and the length of the red curve in single mode and in retrigger mode. The first part of the curve in retrigger mode is shorter. The signal generation is interrupted due to the subsequent trigger event.

- **Armed auto**

The instrument starts the signal generation only when a trigger event occurs and then generates a continuous signal. An "Arm" stops signal generation. A subsequent trigger event causes a restart of the signal generation.

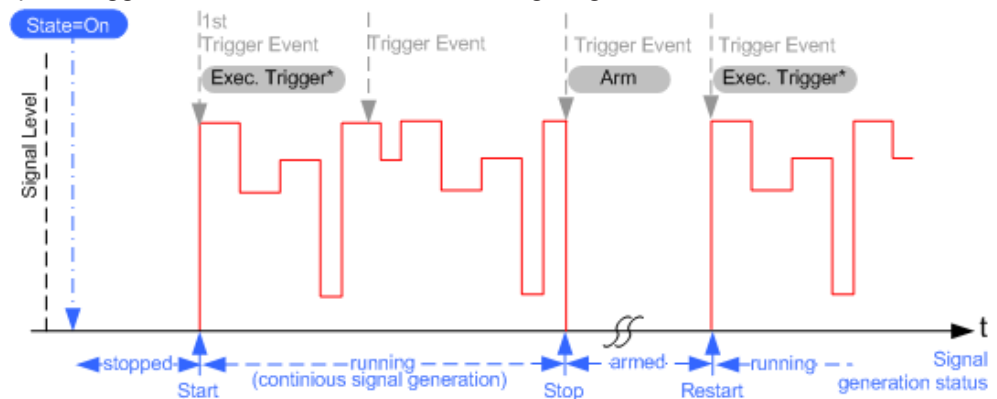


Figure 5-8: Trigger mode armed auto

* = Internal trigger event (to simplify the description)

- **Armed retrigger**

The instrument starts the signal generation only when a trigger event occurs and then generates a continuous signal. Every subsequent trigger event causes a restart of the signal generation.

An "Arm" stops the signal generation. A subsequent trigger event causes a restart.

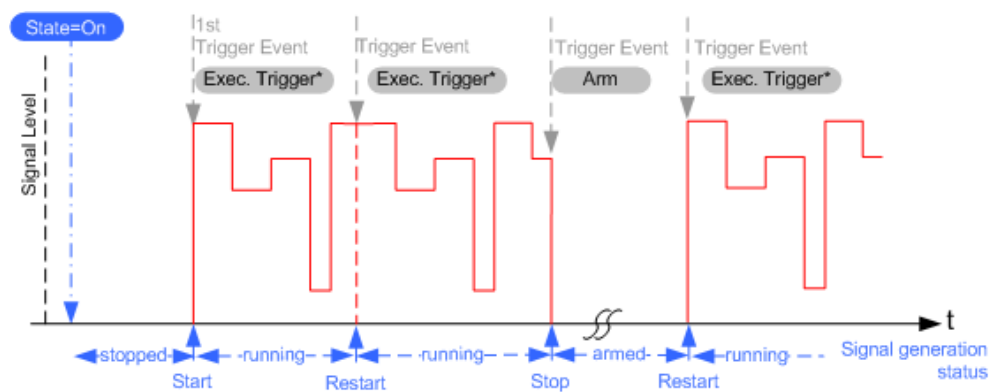


Figure 5-9: Trigger mode armed retrigger

* = Internal trigger event (to simplify the description)

Impact of the additional trigger settings

The R&S SMW provides a set of settings to configure the behavior upon receiving of a trigger signal. For example:

- Suppressing trigger events
- Delaying the instrument's response on trigger events
- Adjusting the signal calculation start time in relation to the trigger event.

Avoiding accidental trigger events

The following trigger settings enhance the flexibility of the trigger system and can help to avoid accidental trigger events.



- "Threshold Trigger Input"
Defines the voltage level of the trigger signal where the R&S SMW generates a trigger event. Trigger signals below the trigger threshold are ignored.
- "Trigger Input Slope"
Specifies the edge (rising or falling edge) of the trigger signal that is to provide the trigger event.
- "Impedance Trigger Input"
Specifies the input impedance of the trigger signal.

Starting the signal generation with the first sample

By default, the instrument starts the signal calculation simultaneously with the receiving of the external trigger event. Because of the signal propagation time and the instrument's processing time, the first samples are cut off and no signal is output.

This default behavior, however, can cause problems if short signal sequences are generated. To overcome this problem, the instrument provides the special parameter "Sync. Output to (External) Trigger". If this parameter is disabled, the signal output begins after elapsing of the processing time and starts with sample 0. That is, the complete signal is output (compare both figures in [Table 5-10](#)).

Table 5-10: Impact of the parameter Sync. Output to (External) Trigger

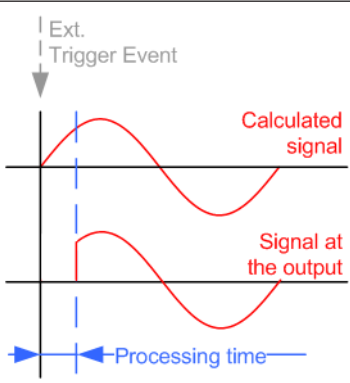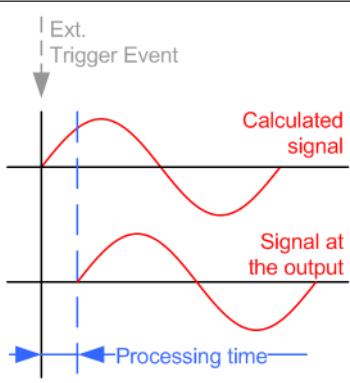"Sync. Output to (External) Trigger = On"	"Sync. Output to (External) Trigger = Off"
 <p>Suitable for long signal sequences</p> <p>The output signal is synchronous to the trigger event after elapsing of the internal processing time.</p> <p>In primary-secondary instrument mode, this setting ensures that once achieved, synchronization is not lost if the baseband signal sample rate changes.</p> <p>See also Chapter 10.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode", on page 673.</p>	 <p>Suitable for triggering of short signal sequences with signal duration comparable with the processing time of the instrument</p>

Suppressing and delaying trigger events

The main focus of the following features is the mobile communication standards.

- "(External) Trigger Delay"

You can apply a definable number of symbols to delay the **start** trigger event of an externally supplied or routed from the other path trigger signals

This feature is useful to:

 - Simulate the time delay between a base station signal and a user equipment signal, for example during base station tests
 - Compensate for known propagation delays or a timing offset in the test setups
 - Enable a time delay between the generated baseband signals
- "(External) Trigger Inhibit"

You can suppress the effect of a restarted trigger signal in the "Retrigger" trigger mode for a definable number of symbols.

During base station tests, for example, this feature enables the trigger suppression for a definable number of frames and yet the signal can still be generated synchronously. In each frame, the base station generates a trigger which would cause a signal generation restart every time but for the suppression.

Example:

A trigger delay of 1000 samples means that after a trigger event, any subsequent trigger signal is ignored for the space of 1000 samples.

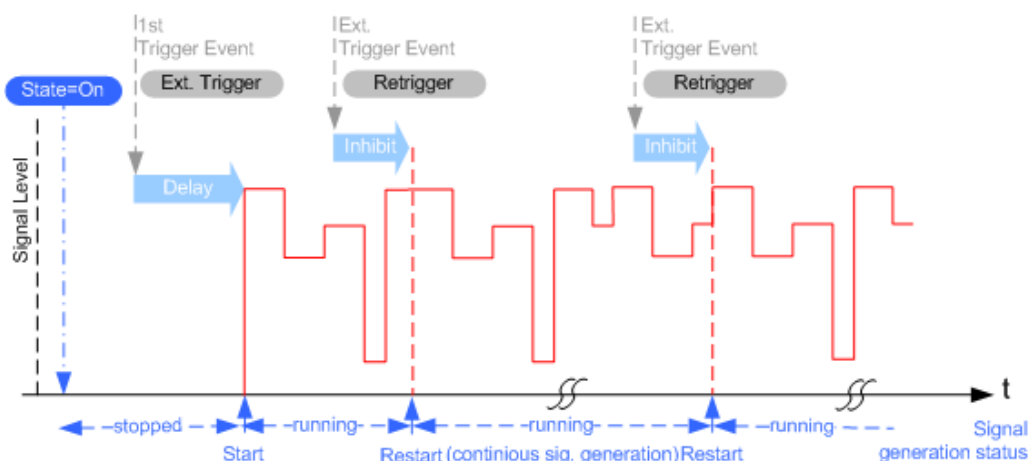


Figure 5-10: Trigger delay and trigger inhibit in trigger mode retrigger

Specifying delay and inhibit values

Trigger delay and inhibit values are expressed in the units of the generated signal, e.g. in samples or symbols. You can also define the exact delay or inhibit period as a time value, e.g. in seconds.

Trigger delay values t_{delay} depend on the instrument hardware. The table illustrates an exemplary instrument configuration and related t_{delay} values in samples (or symbols) and in seconds.

Option	Max. r_s / MHz	t_{delay} / samples	t_{delay} / s
R&S SMW-B10	200	0 to 2147483647	0 to depends on sample rate

For more information, see the data sheet.

Example: Trigger delay and ARB clock frequency

The example is based on an ARB signal with 1 MHz clock frequency ("Baseband > ARB > Clock Frequency = 1 MHz").

Step 1: Enable the following settings:

- "ARB > Trigger In > Mode > Armed Auto"
- "ARB > Trigger In > Source > External Global Trigger 1"
- "ARB > Trigger In > External Delay Unit > Samples"
- "ARB > Trigger In > External Delay = 100 Samples"

The parameter "Actual External Delay = 100 us" displays the time delay in seconds.

External Delay Unit	Sample	Processing Time	---
External Delay	100.00 Samples	Actual External Delay	100.000 0 μ s

Step 2: Enable the following settings:

- "ARB > Trigger In > External Delay Unit > Time"
- "ARB > Trigger In > Specified External Delay = 10 us"
Logically, the "Actual External Delay" changes to 10 us.

External Delay Unit	Time	Processing Time	---
Specified External Delay	100.000 0 µs	Actual External Delay	100.000 0 µs

Step 3:

- Switch to "ARB > Trigger In > External Delay Unit > Samples".

The value of "ARB > Trigger In > External Delay" is 10 samples.

External Delay Unit	Sample	Processing Time	---
External Delay	10.00 Samples	Actual External Delay	10.000 0 µs



This principle applies for any external triggering and triggering via the other paths.

Receiving and providing trigger signals

In test setups that combine the signal of two or more instruments and/or basebands it is often required that:

- The signal generation starts at a defined moment
- The signal generation starts simultaneously (or with an exactly defined delay) in:
 - All involved instruments
 - All basebands of the same R&S SMW

The generation of **simultaneous baseband signals** within the same instrument requires a **common trigger event** to define the signal generation start. This section explains how the R&S SMW supports you to achieve this requirement.

For information on **simultaneous signal generation start in multiple instruments**, see [Chapter 10.3, "Generating time-aligned baseband signals"](#), on page 670.

Simultaneous signal generation start in all basebands

The R&S SMW supports you to trigger all basebands simultaneous in the following cases:

- In system configuration with [Coupled sources](#)
See ["Coupled or separate baseband sources"](#) on page 114
- In configuration that involves signal routing with signal addition, like:
 - Any [MIMO](#) configuration
See [Chapter 4.2.2, "Using the system configuration capabilities"](#), on page 113
 - Routing and summing of [Baseband](#) and/or [Streams](#) signals before and after the "Fading" blocks

See [Chapter 4.2.1, "Using the signal routing settings and the block diagram"](#), on page 113

- Routing and summing of [Streams](#) in the "I/Q Stream Mapper"
See ["I/Q stream mapper"](#) on page 115
- In instruments equipped with 2xR&S SMW-B10, 1xR&S SMW-B14 and R&S SMW-B13T.
- In primary-secondary instrument mode
See [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670.

To enable simultaneous signal generation in all basebands in any of these cases, the R&S SMW couples automatically the trigger settings in all available basebands. It is sufficient to adjust the trigger settings, like trigger source and trigger mode **in one of the basebands**; the R&S SMW applies them automatically to all other. An arm or a restart trigger event applies to all basebands, too. You can still apply different delay to each of the triggers individually.

Example:

This example shows schematically the distribution of the trigger signal in instrument with the following configuration:

- "System Configuration > Entity = 1", 4x4 MIMO configuration (1x4x4) and "Baseband Source Config > Separate".
 - "Baseband A > ... > Trigger In > Trigger Source > Ext. Global Trigger 1"
- Each of the "Baseband B/C/D" adopts the same trigger source automatically.

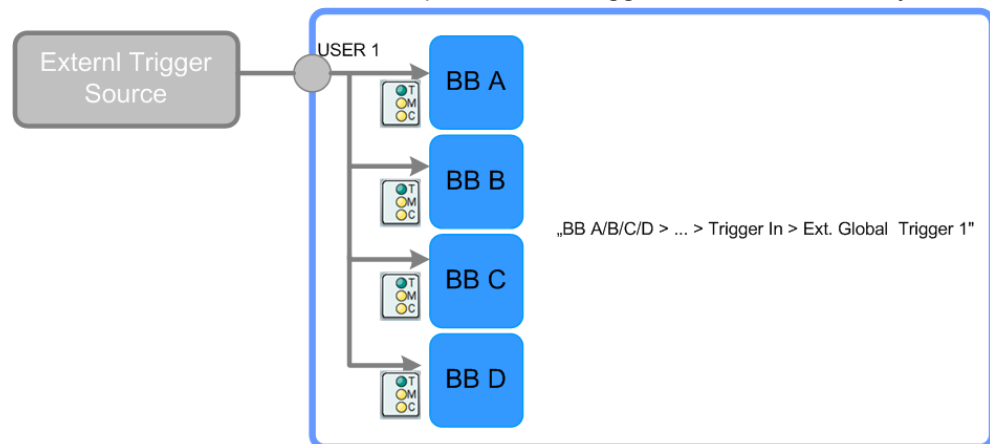


Figure 5-11: Distribution of the external trigger signal in the coupled trigger settings mode

- "Baseband A > ... > Trigger In > Trigger Mode > Retrigger"
The "Baseband B/C/D" adopt the same trigger mode automatically.

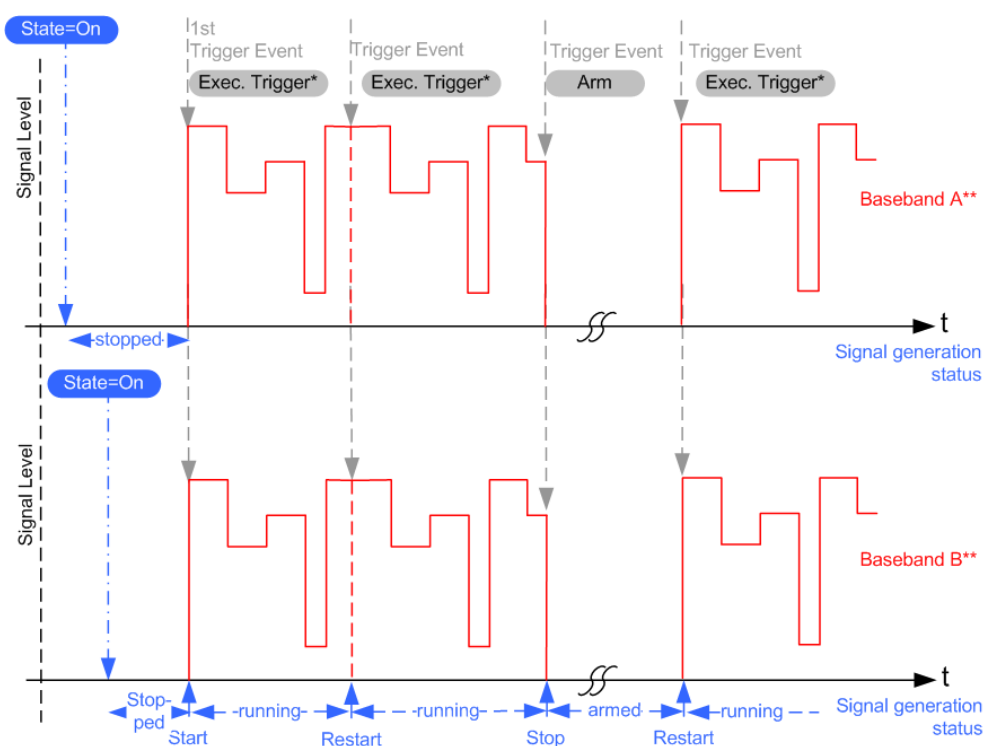


Figure 5-12: Simultaneous triggering of two basebands in coupled trigger settings mode

** = This example assumes identical basebands and shows only the first two of them

The signal generation starts simultaneous in all basebands but you can still delay the basebands compared to each other.

Some test setups require the signal of two or more baseband sources but do not have a coupled trigger setting. In this case, trigger the baseband sources from a common trigger source. Use, for example, an external trigger source or to distribute the internal trigger signal of one of the basebands to the other.

For a step-by-step description, see [Chapter 5.5.3, "Triggering with a common signal"](#), on page 271.

5.5.1.4 Supported modulation signals

The R&S SMW supports a range of predefined digital and analog modulation signals. This section focuses on the possibility to digitally modulate the baseband signal.

The analog modulation methods provided for shifting the frequency bandwidth of the RF signal are described in [Chapter 8.11, "Analog modulations"](#), on page 552.

In communication techniques, commonly used digital modulation schemes are based on keying. From the several existing keying techniques, this instrument supports ASK (amplitude shift keying), FSK (frequency shift keying), PSK (phase shift keying), and QAM (quadrature amplitude modulation).

The digital modulation procedure is described by mapping. That is, by the assignment of I and Q values (PSK and QAM) or frequency shifts (FSK) to every modulation sym-

bol. The resulting modulated signal is graphically represented by a constellation diagram, in that each possible symbol is represented by a discrete point on a complex plane. The number of used bits per symbol is a modulation parameter. The exact position of the symbols on the constellation diagram is determined by the used coding scheme. You can also change the symbol position by applying rotation.

Most of the provided modulation schemes are implemented according to a communication standard. The QAM procedures 16QAM, 32QAM, 64QAM, for instance, have been produced in accordance with ETSI standard ETS 300429 for digital video broadcasting (DVB). The QAM procedures 256QAM and 1024QAM are not specified in this standard, but have been produced according to the same basic principles.

For all FSK procedures you can set the symbol rate f_{SYMB} up to a maximum value, see data sheet. The frequency deviation (FSK deviation) of the MSK modulation is permanently set to $\frac{1}{4}$ of the symbol rate. Also a variable FSK modulation with definable deviation per symbol is available and for even greater flexibility. A user-defined modulation mapping can be applied, see ["User mapping"](#) on page 256.

User mapping

A user-defined modulation-mapping file can also be selected as modulation-mapping source. Valid files have the extension `*.vam` and can be created with the Rohde & Schwarz software tool-mapping wizard. The mapping wizard "mapwiz" is a tool from Rohde & Schwarz designed for editing modulation schemes (for example QPSK, 32QAM).

The main purpose of "mapwiz" is the assignment of logical symbol numbers to constellation points and the selection of modulation-specific parameters. Also, the tool supports the creation of nearly any arbitrarily chosen constellation diagram. The output of "mapwiz" is a mapping file (`*.vam`) that can be imported into a R&S SMW. The program was developed on a 32-bit Microsoft Windows platform under MATLAB.

For more information, see "Introduction to "mapwiz" Mapping Editor" at the Rohde & Schwarz webpage.

The remote commands required to define the modulation settings are described in [Chapter 14.19.4.2, "SOURce:BB:DM subsystem"](#), on page 1063.

Related settings:

- [Chapter 5.6.3.4, "Modulation settings"](#), on page 286

5.5.1.5 Supported coding schemes

Coding is a technique used to improve the signal properties and signal reception and is required only when using some types of modulation. In general, the coding schemes are applied before modulation. The modulation symbols are coded directly before I and Q values or frequency shifts are assigned. The applied coding is directly related to the selected modulation methods. The relation implies that coding schemes are not freely combinable with the modulation methods.

Refer to [Chapter 5.6.5.1, "Common coding algorithms"](#), on page 307 for overview on the available coding combinations. This section also defines the modulation formats for which the various coding procedures can be used.

Related settings:

- ["Coding"](#) on page 280

5.5.1.6 Supported baseband filters

In the wireless transmission technique, filters are applied to shape the baseband signal before it is modulated on the RF. The selected baseband filter type and shape affect the output stream, especially while generating broadband signals. If the filter is too narrow, it cuts the signal. If the filter is too wide, the signal could be distorted by some unwanted signals.

To fulfill wide range of requirements, the R&S SMW offers a wide selection of predefined baseband filters. The predefined filters are designed for the special spectrum characteristics of the different communication standards. However, depending on the selected filter form one or more filter parameters are provided for even more precise adjustment of the filter characteristic. You can select, for example, steeper edges or change the transition bandwidth. For more information on the provided settings, see ["Impact of the filter parameters"](#) on page 258.

The selection of user-defined filters offers even more flexibility. Use these filters if you need to filter with filters of complex or proprietary form are required. For more information, refer to ["User filter"](#) on page 257.

Predefined baseband filters

See [Chapter 5.6.5.2, "Predefined baseband filters"](#), on page 309 for an overview of available baseband filters.

User filter

The user filter file must have extension `*.vaf` and can be created with the Rohde & Schwarz software tool filter wizard.

The filter wizard (filtwiz) is a tool from Rohde & Schwarz designed for creating filter files that can be imported on a R&S SMW. Its main purpose is the conversion of user-defined finite impulse response (FIR) filters into the filter format (`*.vaf`). Beyond this filt wiz provides designs for standard filters, e.g. root raised cosine (RRC), Gaussian.

The program was developed on a 32-bit Microsoft Windows platform under MATLAB.

For more information, see "Introduction to "filtwiz" Filter Editor" at the Rohde & Schwarz webpage.

The remote commands required to define the filter settings are described in [Chapter 14.19.4.2, "SOURce:BB:DM subsystem"](#), on page 1063 and the corresponding section in the user manual of each firmware option.

Related settings:

- [Chapter 5.6.3.5, "Filter settings"](#), on page 289
- Filter settings in the dialogs of the firmware options

Impact of the filter parameters


The following is a simple description of the filter parameters and the way they affect the main filter characteristics. Changing filter parameters is an effective way to ensure that the entire bandwidth of the desired signal is allowed to pass and adjust the filter form to reach the spectrum mask requirements.

Cut Off Frequency

The cut-off frequency or corner frequency is a filter characteristic that defines the frequency at the 3 dB down point. This frequency is bound to the transition band; here the filter characteristic changes from the passband to the stopband, where the signal is suppressed.

Rolloff Factor

The rolloff factor is a measure for the excess bandwidth compared to the ideal bandwidth of a "brick like" filter. The roll off factor affects the steepness of the filter flanks. A "Rolloff Factor" = 0 would result in the steepest theoretically possible flanks ; values near to 1 make the flanks more flat.

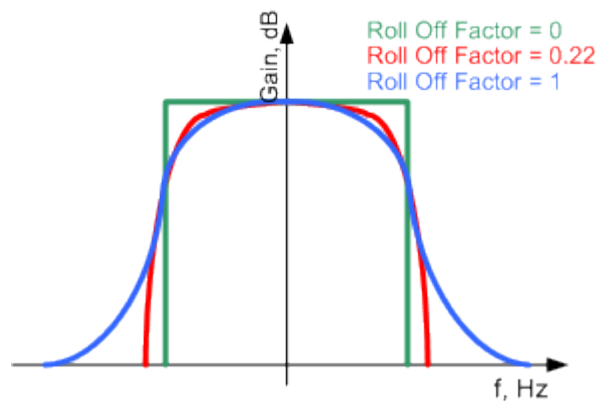

Passband


The passband describes the frequency span that the filter passes unchanged. The total passband of a filter is given as follows:

$$\text{Bandwidth} = (1 + \text{"Roll Off Factor"}) * \text{"Symbol Rate"}$$

Cut Off Frequency Shift

The "Cut Off Frequency Shift" affects the cut-off frequency in the way that the filter flanks are "moved" and the passband increases by "Cut Off Frequency Shift" * "Sample Rate":

$$\text{Cut Off Frequency} = (1 + \text{"Cut Off Frequency Shift"}) * \text{"Sample Rate"}$$

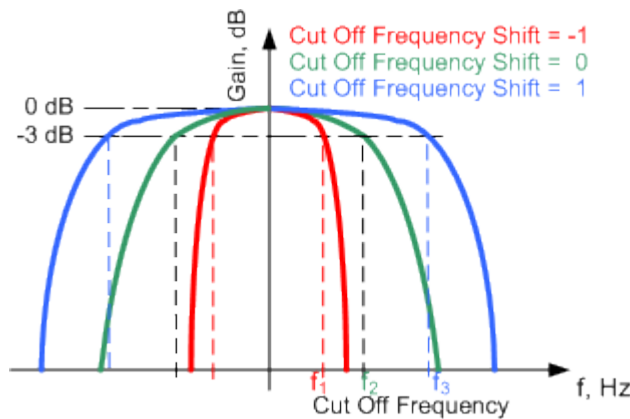

- A "Cut Off Frequency Shift" = -1 results in a very narrow-band filter
- Increasing the value up to 1 makes the filter more broad-band
- By "Cut Off Frequency Shift" = 0, the -3 dB point is at the frequency determined by the half of the selected "Sample Rate".

5.5.1.7 Methods for optimizing the crest factor

Communication standards utilizing higher order modulation techniques or using multiple carrier and complex signals consisting of the signals of more than one digital standard can feature a high crest factor. The signals of some digital standards can have high crest factors also particularly with many channels and long sequences.

The **crest factor** represents the ratio of the peak voltage value to the RMS voltage value, i.e. the peak to average ratio (**PAR**). The higher the crest factor and the resulting dynamics of a signal, the greater the requirement for a power amplifier fed by the signal to be linear. A high crest factor arises for instance, when in a multi carrier signal the carriers feature an identical start phase. This is based on the fact that the carriers are periodically superposed that leads to high peak voltages in relation to the RMS voltage values.

High crest factors entail two basic problems:

- The nonlinearity of the power amplifier (compression) causes intermodulation which expands the spectrum (spectral regrowth).
- Since the level of the D/A converter is relative to the maximum value, the average value is converted with a relatively low resolution. This leads to a high quantization noise.

Both effects increase the adjacent-channel power.

Direct approaches

At the individual signal generation stages, the R&S SMW offers different direct approaches aimed to reduce the crest factor. While the corresponding parameters are enabled, the implemented algorithms ensure minimizing the crest factor or achieving of predefined target crest factor by applying of automatic settings. Methods of reducing the crest factor differ regarding both the optimization achievable and the time required for computation.

The provided crest factor reduction methods include:

- Internal calculation of optimized carrier phases for the individual carriers in a multi carrier signal
- Automatic calculation of the carrier start phases in a multi-carrier continuous wave signal

Applying clipping and filtering

Another common and simple approach for achieving a lower PAR is the combination of clipping and filtering. In several of the firmware options, like 3GPP FDD or CDMA2000, the instrument provides the possibility to enable baseband clipping and to select the baseband filter and, when applicable, to adjust the filter characteristics.

- **Clipping** is a technique that applies a wanted distortion to the signal. The principle includes specifying a threshold, finding out the signal peaks once the defined limits are exceeded and clipping them off. The level limit is specified as a percentage of the highest peak value. Because clipping is done before filtering, the procedure does not influence the spectrum. The error vector magnitude (EVM) however increases.

The instrument offers two clipping modes:


- **Vector $|I + q|$**
The clipping limit is related to the amplitude $|I + q|$. The I and Q components are mapped together, the angle is retained.
- **Scalar $|I| + |q|$**
The clipping limit is related to the absolute maximum of all the I and Q values $|I| + |q|$. The I and Q components are mapped separately, the angle changes.

However, signal clipping not only changes the peak value but also the average value and the effect on the crest factor is unpredictable.


Example:

The following figures demonstrate the effect of the clipping on the crest factor for typical scenarios.

Enabled is clipping with vector mode ($|I+q|$), using a signal configuration with 2 active channels.

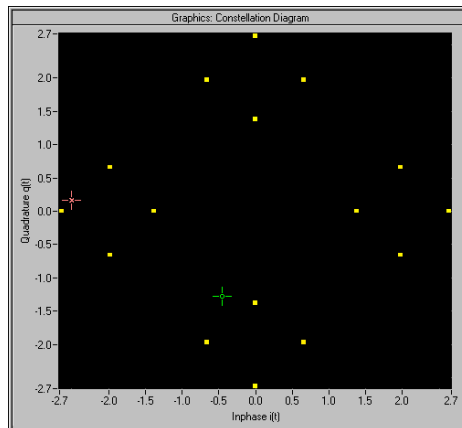

Constellation diagram of the signal without clipping, shows the level mapping

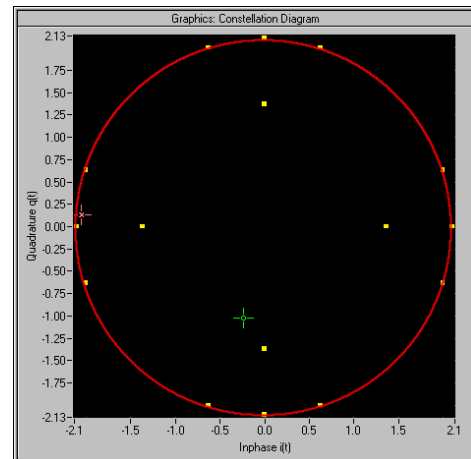

Constellation diagram with clipping level 80%, vector mode ($|I+q|$). The circle emphasizes the changed constellation points

- **Filtering** is applied subsequently. The used filters are specially designed so that they filter out the distortion.

5.5.2 Common settings

The main baseband dialog for a digital standard follows a repeating dialog structure including the tabs "General", "Trigger In", "Marker" and "Clock".

The "General" tab comprises the primary settings of the standard, the functions for storing and recalling settings. It also provides access to further functions and dialogs, like the "Filter" settings.

The "Trigger In", "Marker" and "Clock" tabs comprise the settings related to the corresponding function.

In the following, we use the "Custom Digital Mod" dialog to explain the provided common settings. The related remote control commands are listed in the order "Custom Digital Mod", "ARB", "Multi Carrier CW".

About trigger marker clock signals

For background information on these signals, refer to:

- [Chapter 5.5.1.3, "Baseband trigger signals"](#), on page 245.
- [Chapter 5.5.1.2, "Regular marker output signals"](#), on page 241
- ["Clock signals"](#) on page 237


Settings:

- [Trigger settings](#)..... 262
- [Marker settings](#)..... 268
- [Clock settings](#)..... 269
- [Local and global connectors settings](#)..... 271

5.5.2.1 Trigger settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Trigger In".

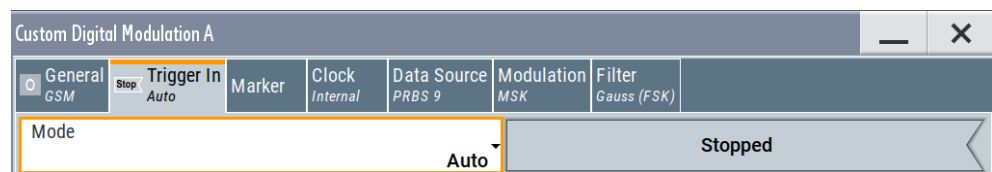

This tab provides settings to select and configure the trigger, like trigger source, trigger mode and trigger delays, and to arm or trigger an internal trigger manually. The header of the tab displays the status of the trigger signal and trigger mode. As in the tabs "Marker" and "Clock", this tab provides also access to the settings of the related connectors.

Routing and activating a trigger signal

1. Define the effect of a trigger event and the trigger signal source.
 - a) Select "Trigger In" > "Mode".
 - b) Select "Trigger In" > "Source".
2. For external trigger signals, define the connector for signal input. See [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271.
You can map trigger signals to one or more USER x or T/M connectors.
Local and global connectors settings allow you to configure the signal mapping, the polarity, the trigger threshold and the input impedance of the input connectors.
3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".
The R&S SMW starts baseband signal generation after the configured trigger event.

About baseband trigger signals

This section focuses on the available settings.


For information on how these settings affect the signal, refer to [Chapter 5.5.1, "Basics on signals, modulation formats and filters"](#), on page 234.

Settings:

Trigger settings common to all basebands.....	263
Mode.....	263
Running/Stopped.....	263
Time Based Trigger.....	264
Trigger Time.....	264
Arm.....	264
Execute Trigger.....	264
Source.....	265
Sync. Output to Ext. Trigger/Sync. Output to Trigger.....	265
External Inhibit/Trigger Inhibit.....	266
(External) Delay Unit.....	266
(Specified) External Delay/(Specified) Trigger Delay.....	266
Actual Trigger Delay/Actual External Delay.....	267
Signal Duration.....	267

Trigger settings common to all basebands

To enable simultaneous signal generation in all basebands, the R&S SMW couples the trigger settings in the available basebands in any instrument's configuration involving signal routing with signal addition. For example, in MIMO configuration, routing and summing of basebands or of streams.

The icon  indicates that common trigger settings are applied.

You can access and configure the common trigger source and trigger mode settings in any of the basebands. An arm or a restart trigger event applies to all basebands, too. You can still apply different delay to each of the triggers individually.

Mode

Selects a regular trigger signal: "Auto", "Retrigger", "Armed_Auto", "Armed_Retrigger", or "Single".

For a detailed description on trigger modes, see ["Impact of the trigger modes on the signal generation"](#) on page 247.

Remote command:

`[:SOURce<hw>] :BB:DM[:TRIGger]:SEquence` on page 1080

`[:SOURce<hw>] :BB:ARbitrary[:TRIGger]:SEquence` on page 1140

`[:SOURce<hw>] :BB:MCCW[:TRIGger]:SEquence` on page 1162

Running/Stopped

With enabled modulation, displays the status of signal generation for all trigger modes.

- "Running"
The signal is generated; a trigger was (internally or externally) initiated in triggered mode.
- "Stopped"
The signal is not generated and the instrument waits for a trigger event.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:RMODE?` on page 1081

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:RMODE?` on page 1141

`[:SOURce<hw>] :BB:MCCW:TRIGger:RMODE?` on page 1163

Time Based Trigger

Requires trigger "Mode" > "Armed Auto"/"Single".

Activates time-based triggering with a fixed time reference.

The R&S SMW triggers signal generation when its operating system time ("Current Time") matches a specified time trigger ("Trigger Time"). As trigger source, you can use an internal trigger or an external global trigger.

How to: [Chapter 5.5.4, "Time-based triggering"](#), on page 273

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME\[:STATe\]](#) on page 1082

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME\[:STATe\]](#) on page 1142

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME\[:STATe\]](#) on page 1164

Trigger Time

Requires trigger "Mode" > "Armed Auto"/"Single".

Sets date and time for a time-based trigger signal.

Set a trigger time that is later than the "Current Time". The current time is the operating system time of the R&S SMW. If you set an earlier trigger time than the current time, time-based triggering is not possible.

How to: [Chapter 5.5.4, "Time-based triggering"](#), on page 273

"Date" Sets the date of the time-based trigger in format YYYY-MM-DD.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME:DATE](#) on page 1081

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME:DATE](#)

on page 1141

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME:DATE](#) on page 1163

"Time" Sets the time of the time-based trigger in format hh:mm:ss.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME:TIME](#) on page 1082

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME:TIME](#)

on page 1141

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME:TIME](#) on page 1164

Arm

Stops the signal generation until subsequent trigger event occurs.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:ARM:EXECute](#) on page 1083

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:ARM:EXECute](#) on page 1143

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:ARM:EXECute](#) on page 1165

Execute Trigger

Requires trigger "Source" > "Internal"

Executes the trigger manually.

Remote command:

[:SOURce<hw>] :BB:DM:TRIGger:EXECute on page 1083

[:SOURce<hw>] :BB:ARBitrary:TRIGger:EXECute on page 1143

[:SOURce<hw>] :BB:MCCW:TRIGger:EXECute on page 1165

Source

The following sources of the trigger signal are available:

- "Internal"
The trigger event is executed manually by the "Execute Trigger".
- "Internal (Baseband A/B)"
The trigger event is provided by the trigger signal from the other basebands.
If common trigger settings are applied, this trigger source is disabled.
- "External Global Trigger"
The trigger event is the active edge of an external trigger signal provided and configured at the USER x connectors.
- "External Local Trigger"
The trigger event is the active edge of an external trigger signal provided and configured at the local T/M/C connector.
With coupled trigger settings, the signal has to be provided at the T/M/C1/2/3 connectors.
- "External Local Clock"
The trigger event is the active edge of an external local clock signal provided and configured at the local T/M/C connector.
With coupled trigger settings, the signal has to be provided at the T/M/C1 connector.
- "Baseband Sync In"
Option: R&S SMW-B9
In primary-secondary instrument mode, secondary instruments are triggered by the active edge of the synchronization signal.

"External Local Clock/Trigger" require R&S SMW-B10.

The polarity, the trigger threshold, and the input impedance of the input connectors can be configured in the "Local and global connectors settings" dialog.

See ["Trigger sources"](#) on page 246.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

Remote command:

[:SOURce<hw>] :BB:DM:TRIGger:SOURce on page 1080

[:SOURce<hw>] :BB:ARBitrary:TRIGger:SOURce on page 1140

[:SOURce<hw>] :BB:MCCW:TRIGger:SOURce on page 1163

Sync. Output to Ext. Trigger/Sync. Output to Trigger

Enables signal output synchronous to the trigger event.

For more information, see ["Impact of the additional trigger settings"](#) on page 250.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:EXtErnal:SYNChronize:OUTPut`

on page 1083

`[:SOURce<hw>] :BB:ARBitrary:TRIGger[:EXtErnal]:SYNChronize:OUTPut`

on page 1143

`[:SOURce<hw>] :BB:MCCW:TRIGger:EXtErnal:SYNChronize:OUTPut`

on page 1165

External Inhibit/Trigger Inhibit

Sets the duration with that any following trigger event is suppressed. In "Retrigger" mode for example, a new trigger event does not cause a restart of the signal generation until the specified inhibit duration does not expire.

Applies for:

- External trigger signal
- Trigger signal from the other path

For more information, see ["Impact of the additional trigger settings"](#) on page 250.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger[:EXtErnal]:INHibit` on page 1086

`[:SOURce<hw>] :BB:DM:TRIGger:OBASeband:INHibit` on page 1084

`[:SOURce<hw>] :BB:ARBitrary:TRIGger[:EXtErnal]:INHibit` on page 1147

`[:SOURce<hw>] :BB:ARBitrary:TRIGger:OBASeband:INHibit` on page 1145

`[:SOURce<hw>] :BB:MCCW:TRIGger[:EXtErnal<ch>]:INHibit` on page 1167

`[:SOURce<hw>] :BB:MCCW:TRIGger:OBASeband:INHibit` on page 1166

(External) Delay Unit

Determine whether the trigger delay is expressed in samples or directly defined as a time period (seconds).

To specify the delay, use [\(Specified\) External Delay/\(Specified\) Trigger Delay](#).

The parameter [Actual Trigger Delay/Actual External Delay](#) displays the delay converted in time.

See also ["Specifying delay and inhibit values"](#) on page 252.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:DELaY:UNIT` on page 1084

`[:SOURce<hw>] :BB:ARBitrary:TRIGger:DELaY:UNIT` on page 1145

(Specified) External Delay/(Specified) Trigger Delay

The name of the parameter and the units the delay is expressed in, changes depending on the parameter [\(External\) Delay Unit](#).

Delays the trigger event provided by:

- The external trigger source
- The other path
- The other basebands (internal trigger), if common trigger settings are used.
- Other instrument in primary-secondary instrument mode

Use the settings to:

- Synchronize the instrument with the device under test (DUT) or other external devices
- Postpone the signal generation start in the basebands compared to each other

- Compensate for signal delay and align the signals in time

For more information, see:

- ["Impact of the additional trigger settings"](#) on page 250
- ["Specifying delay and inhibit values"](#) on page 252

The parameter [Actual Trigger Delay/Actual External Delay](#) displays the delay converted in time.

Remote command:

```
[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :DELay on page 1085
[ :SOURce<hw> ] :BB:DM:TRIGger:OBASeband:DELay on page 1083
[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :TDELay on page 1085
[ :SOURce<hw> ] :BB:DM:TRIGger:OBASeband:TDELay on page 1084
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :DELay on page 1145
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:OBASeband:DELay on page 1144
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :TDELay on page 1146
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:OBASeband:TDELay on page 1145
[ :SOURce<hw> ] :BB:MCCW:TRIGger [ :EXternal<ch> ] :DELay on page 1166
[ :SOURce<hw> ] :BB:MCCW:TRIGger:OBASeband:DELay on page 1166
```

Actual Trigger Delay/Actual External Delay

Displays the delay time (in seconds) of an external trigger event or of a trigger event from the other signal path.

See also ["Specifying delay and inhibit values"](#) on page 252.

Remote command:

```
[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :RDELay? on page 1086
[ :SOURce<hw> ] :BB:DM:TRIGger:OBASeband:RDELay? on page 1084
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :RDELay? on page 1146
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:OBASeband:RDELay? on page 1144
```

Signal Duration

Requires trigger "Mode" > "Single".

Enters the length of the trigger signal sequence.

Use this parameter, for example, for the following applications:

- To output the trigger signal partly.
- To output a predefined sequence of the trigger signal.


Remote command:

```
[ :SOURce<hw> ] :BB:DM:TRIGger:SLENgth on page 1081
[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:SLUNit on page 1143
[ :SOURce<hw> ] :BB:MCCW:TRIGger:SLENgth on page 1165
```

5.5.2.2 Marker settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Marker".

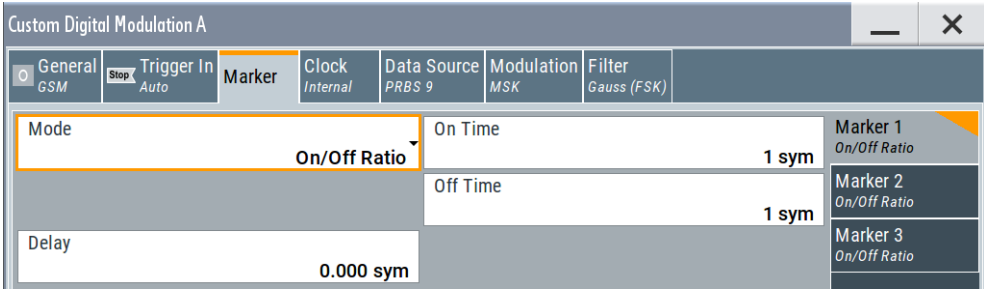

This tab provides settings to select and configure the marker output signal including marker mode and marker delay.

Routing and activating a marker signal

1. To define the signal shape of an individual marker signal "x", select "Marker" > "Marker x" > "Mode".
2. Optionally, define the connector for signal output. See [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271.
You can map marker signals to one or more USER x or T/M connectors.
3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".
The R&S SMW adds the marker signal to the baseband signal. Also, R&S SMW outputs this signal at the configured USER x connector.

About marker output signals

This section focuses on the available settings.

For information on how these settings affect the signal, refer to [Chapter 5.5.1, "Basics on signals, modulation formats and filters"](#), on page 234.

Settings:

Mode.....	268
Delay.....	269

Mode

Marker configuration for up to 3 markers. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode.

How to: ["Routing and activating a marker signal"](#) on page 268

"CList" A marker signal as defined in the selected control list.

Remote command:

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:MODE on page 1086

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider on page 1088

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?

on page 1088

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:PATtern on page 1087

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:OFFTime on page 1087

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:ONTime on page 1087

ARB: see "Marker Mode" on page 330

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:MODE on page 1167

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider on page 1168

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?

on page 1168

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PATtern on page 1168

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:ONTime on page 1167

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:OFFTime on page 1167

Delay

Delays the marker signal at the marker output relative to the signal generation start.

Variation of the parameter "Marker x" > "Delay" causes signal recalculation.

Remote command:

[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:DELay on page 1088


[:SOURce<hw>] :BB:ARBitary:TRIGger:OUTPut<ch>:DELay on page 1149

[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:DELay on page 1169

5.5.2.3 Clock settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Clock".

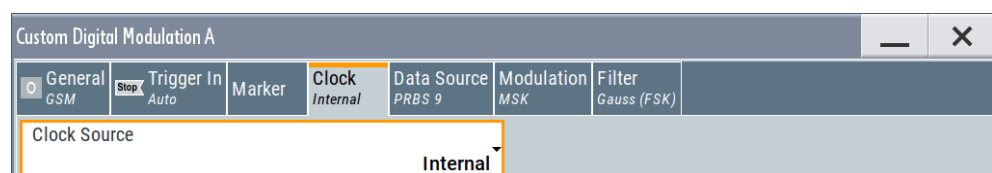

This tab provides settings to select and configure the clock signal, like the clock source and clock mode.

Defining the clock

1. Select "Clock" > "Source" to define the source of clock signal.
2. For external clock signals, define the connector for signal input. See [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271.
You can map clock signals to one or more USER x or T/M connectors.

Local and global connectors settings allow you to configure the signal mapping, the polarity, the trigger threshold and the input impedance of the input connectors.

3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".

The R&S SMW starts baseband signal generation with a symbol rate that equals the clock rate.

About clock signals

This section focuses on the available settings.

For information on how these settings affect the signal, refer to [Chapter 5.5.1, "Basics on signals, modulation formats and filters"](#), on page 234.

Settings:

Clock Source	270
Clock Mode	270
Measured External Clock	270

Clock Source

Selects the clock source.

- "Internal"
The instrument uses its internal clock reference.
- "External Local Clock"
Option: R&S SMW-B10
The instrument expects an external clock reference at the local T/M/C connector.

How to: ["Defining the clock"](#) on page 269

See also ["Clock signals"](#) on page 237.

Remote command:

[\[:SOURce<hw>\]:BB:DM:CLOCK:SOURce](#) on page 1089

[\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:SOURce](#) on page 1150

[\[:SOURce<hw>\]:BB:MCCW:CLOCK:SOURce](#) on page 1169

Clock Mode

Option: R&S SMW-B10

Sets the type of externally supplied clock.

Remote command:

[\[:SOURce<hw>\]:BB:DM:CLOCK:MODE](#) on page 1089

[\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:MODE](#) on page 1150

[\[:SOURce<hw>\]:BB:MCCW:CLOCK:MODE](#) on page 1169

Measured External Clock

Option: R&S SMW-B10

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

[:CLOCK:INPut:FREQuency?](#) on page 936

5.5.2.4 Local and global connectors settings

Accesses a dialog to configure local connectors or global connectors.

The button is available in the following dialogs or tabs:

- "Trigger / Marker / Clock" dialog that is accessible via the "TMC" block in the block diagram.
- "Trigger In", "Marker" and "Clock" tabs that are accessible via the "Baseband" block in the block diagram.



See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

5.5.3 Triggering with a common signal

In test setups that combine the signal of two or more instruments and/or basebands it is often required that:

- The signal generation starts at a defined moment
- The signal generation starts simultaneously (or with an exactly defined delay) in:
 - All involved instruments
 - All basebands of the same R&S SMW

This section explains how to fulfill the last requirement with the provided trigger settings. Use one of the following possibilities:


- ["To use the external global trigger signal of the instrument"](#) on page 271
- ["To use the internal trigger signal of the instrument"](#) on page 272
- ["To use the external local trigger signal of the instrument"](#) on page 272

See also:

- [Chapter 5.5.1.3, "Baseband trigger signals"](#), on page 245 for background information
- [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670 for information on simultaneous signal generation start in multiple instruments.

To use the external global trigger signal of the instrument

An external *global* trigger/clock signal can be supplied to one or simultaneously to all the basebands.

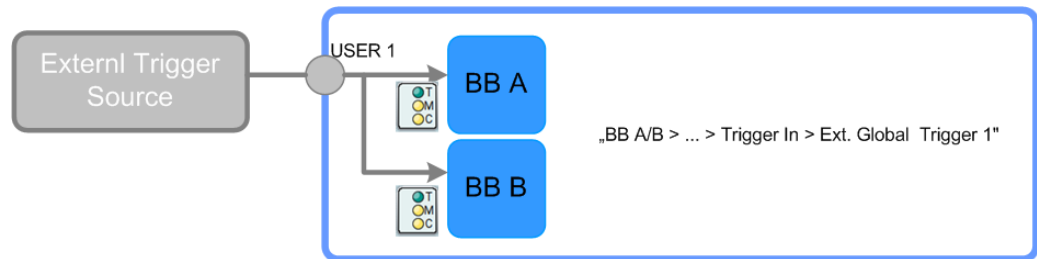


To trigger commonly all basebands and to assure a synchronous generation start with the global trigger/clock signal, proceed as follows:

- Enable the same trigger source for both basebands.
For example, select "Trigger In" > "Source" > "External Global Trigger 1".

The instrument uses the external trigger signal for both basebands.

To use the internal trigger signal of the instrument

Internal trigger signals are generated by the instrument self and can be used independently per baseband or routed from one to the other.

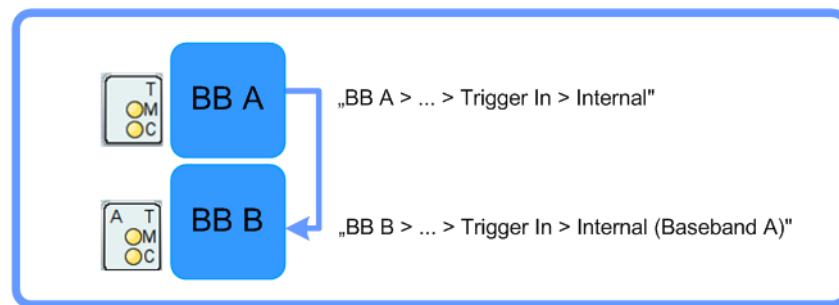


To use this feature to synchronize the signal generation start in the basebands, proceed as follows:

1. In the first baseband, proceed as follows:
 - a) Select "Baseband A" > "Cust Dig Mod" > "Trigger In" > "Mode" > "Armed Auto".
 - b) Select "Source" > "Internal".
2. In the second baseband, proceed as follows:
 - a) Select "Baseband B" > "Cust Dig Mod" > "Trigger In" > "Mode" > "Armed Auto".
 - b) Select "Source" > "Internal (Baseband A)".

To use the external local trigger signal of the instrument

An external *local* trigger/clock signal is dedicated to the baseband board at which this signal is supplied (i.e. the board the local T/M/C connector is located).

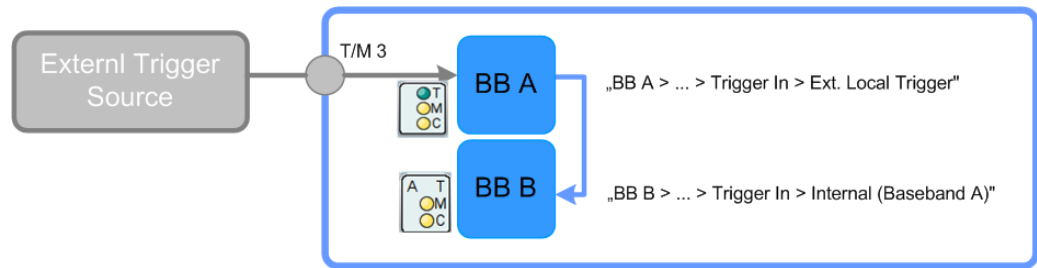

To route internally this signal and to use it for synchronous triggering of all other basebands, proceed as follows:

1. Configure one of the local T/M connectors as input for the external local trigger signal:
 - a) "Baseband" > "Cust Dig Mod" > "Trigger In" > "Local Connectors"
 - b) In the "Local Connectors" dialog, select "T/M 3" > "Direction" > "Input".
 - c) Select "Signal" > "Trigger".
2. In the first baseband, proceed as follows:
 - a) Select "Baseband A" > "Cust Dig Mod" > "Trigger In" > "Mode" > "Armed Auto".
 - b) Select "Source" > "External Local Trigger".
3. In the second baseband, proceed as follows:
 - a) Select "Baseband B" > "Cust Dig Mod" > "Trigger In" > "Mode" > "Armed Auto".
 - b) Select "Source" > "Internal (Baseband A)".
4. Use a suitable cable to connect the external trigger source to the T/M 3 connector of the R&S SMW.

See ["To find out the connector location"](#) on page 764.


The connector is at the rear of the instrument, on the left part of the topmost CODER board.

5.5.4 Time-based triggering

To synchronize signal generation of the R&S SMW to a common time reference, use the time-based trigger. Synchronization is useful for time-sensitive signal generation tasks.


These tasks meet, for example, the following requirements:

- Absolute time reference for radar signal generation
- Radar system synchronization to a common time
- GNSS simulation time synchronization to GPS time

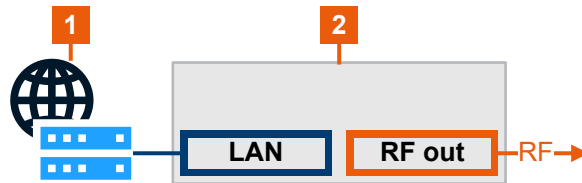Test setup for coarse external time reference

1 = NTP server

2 = R&S SMW

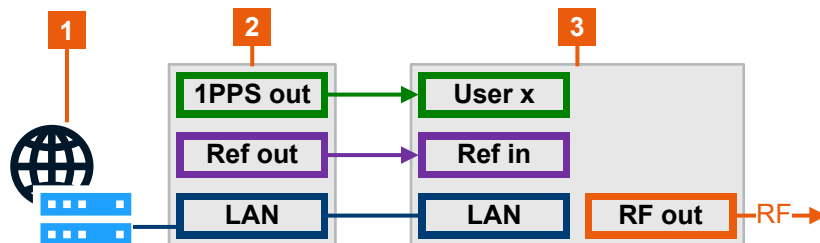Test setup for fine external time reference

1 = NTP server

2 = Time reference source

3 = R&S SMW


The following step-by-step instructions provide information on how to trigger signal generation to a specific time reference. These instructions use the ARB generator as baseband signal source. The configuration in other baseband configuration dialogs is analogous.

- ["To access time-based trigger settings"](#) on page 274
- ["To trigger to the internal time reference"](#) on page 275
- ["To trigger coarsely to an external time reference"](#) on page 275
- ["To trigger finely to an external time reference"](#) on page 276

To access time-based trigger settings

1. Select "Baseband" > "ARB" > "Trigger In".
2. Select "Mode" > "Single"/"Armed Auto".

For these trigger modes, the R&S SMW provides settings to trigger baseband signal generation at a defined time reference. You can configure external or internal trigger events. The configuration of these events is specific for each baseband signal.

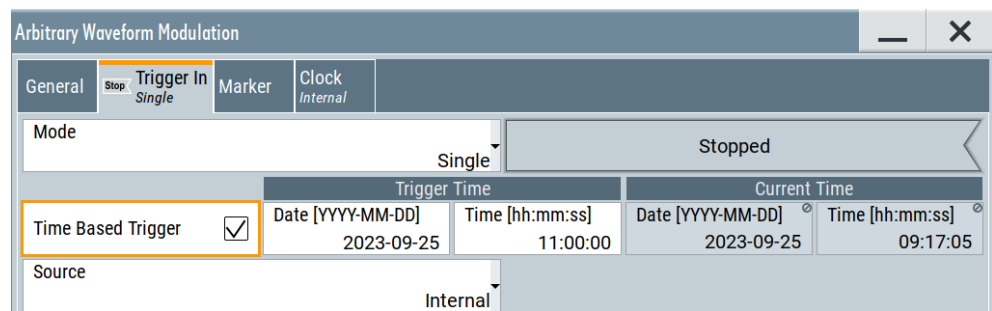

To trigger to the internal time reference

To trigger to the operating system time or an arbitrary internal time at the R&S SMW, proceed as follows:

1. Access time-based trigger settings of your digital baseband signal.
For example, see ["To access time-based trigger settings"](#) on page 274.
2. To specify "Trigger Time" settings, set "Time" and "Date", for example:
 - a) Set "Time" > "11:00:00".
 - b) Set "Date" > "2023-09-25".
3. Select "Source" > "Internal".
4. To activate signal generation at this specified time, select "Time Based Trigger" > "On".
5. Optionally, define an arbitrary internal time.
To edit the "Current Time" settings, unlock the operating system time:
 - a) Select "System Config" > "Setup" > "Security" > "Protection".
 - b) Enter protection level 1 password.
See ["Protection levels"](#) on page 797.
 - c) Set "Date" and "Time" of the "Current Time" settings as needed.
6. Set "Baseband" > "ARB" > "State" > "On".

The R&S SMW starts signal generation, if the "Current Time" matches the "Trigger Time". The accuracy of the trigger point is on the order of milliseconds.

If you need a higher accuracy on the order of microseconds, proceed with ["To trigger finely to an external time reference"](#) on page 276.

To trigger coarsely to an external time reference

1. Follow the instructions in ["To trigger to the internal time reference"](#) on page 275 until step (2).
2. Connect a suitable external time reference to the "LAN" connector.
This time reference provides time information from an NTP server.
3. Specify the NTP server address:
 - a) Select "System Config" > "Setup" > "Maintenance" > "Date / Time".
 - b) Select "Time Protocol" > "NTP".

c) Enter the address of the NTP server.

4. Set "Baseband" > "ARB" > "State" > "On".

The R&S SMW starts signal generation, if the "Current Time" matches the "Trigger Time" from the NTP server. The accuracy of the trigger point is on the order of milliseconds.

If you need a higher accuracy on the order of microseconds, proceed with ["To trigger finely to an external time reference"](#) on page 276.

To trigger finely to an external time reference

1. Follow the instructions in ["To trigger to the internal time reference"](#) on page 275 until step (2).
2. Connect a suitable external time reference that collects time information from an NTP server:

- a) For the reference signal, use the "REF IN" connector.
- b) For the trigger signal, use one of the "USER x" connectors, for example, "USER 1".

The R&S SMW expects a 10 MHz reference signal at the "REF IN" connector and a 1PPS trigger signal at the "USER x" connector.

3. Configure the R&S SMW for input of the external trigger signal:

- a) Select "Baseband" > "ARB" > "Trigger In".
- b) Select "Source" > "External Global Trigger 1".
- c) Select "Global Connectors" > "Routing".
- d) For "Connector" > "User 1", select "Direction" > "Input".
- e) Select "Signal" > "Global Trigger 1".

4. Configure the R&S SMW for input of the reference signal:

- a) In the status bar, select "Ext Ref" > "Reference Frequency".
- b) Select "Source" > "External".
- c) Select "External Reference Frequency" > "10 MHz".

5. Select "Baseband" > "ARB" > "Trigger In".

6. Select "Time Based Trigger" > "On".

7. Set "Baseband" > "ARB" > "State" > "On".

5.6 Generating custom digital modulated signals

The R&S SMW can generate digital modulation signals with user-definable characteristics. The baseband filtering and the symbol rate can be set within wide limits.

5.6.1 Required options

The equipment layout for generating the digital modulation signals includes:

- Option standard or wideband baseband generator (R&S SMW-B10/-B9) per signal path
- Option baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or Option wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)

5.6.2 About the custom digital modulation

An introduction to the supported filter, modulation, and coding schemes are provided in:

- [Chapter 5.5.1.6, "Supported baseband filters"](#), on page 257
- [Chapter 5.5.1.4, "Supported modulation signals"](#), on page 255
- [Chapter 5.5.1.5, "Supported coding schemes"](#), on page 256.

Interdependency between selected modulation type and coding scheme and handling of conflicting settings

The applied coding is directly related to the selected modulation methods. The available coding schemes listed in [Chapter 5.6.5.1, "Common coding algorithms"](#), on page 307 are not freely combinable with modulation methods.

Obviously, having selected a modulation procedure, not every combination of the further modulation parameters "Symbol Rate" and "Coding" is possible. These restrictions inevitably result in conflicting settings if you change a parameter and leads to a prohibited combination.

An inappropriate change of a parameter triggers a settings conflict, which is indicated by a message on the "Info" line in the display. Although the R&S SMW displays the selected settings, the generated modulation signal does not correspond to this display. The displayed message disappears when a conflict-free setting is selected.

Refer to [Chapter 15, "Troubleshooting and notifications"](#), on page 1354 for a list of the possible settings conflicts and messages in digital modulation.

5.6.3 Custom digital modulation settings

Access:

- Select "Baseband" > "Custom Digital Mod".

The "Custom Digital Modulation" dialog enables direct selection of the data source, standard, symbol rate, coding, modulation type and filter.

The dialog is divided into several tabs. In each case, the current setting is displayed in the tab name.

The remote commands required to define these settings are described in [Chapter 14.19.4.2, "SOURce:BB:DM subsystem"](#), on page 1063.


Settings:

• General settings	278
• Trigger, marker and clock settings	280
• Data source settings	281
• Modulation settings	286
• Filter settings	289
• Power ramp control settings	292
• Data list editor	294
• Control and marker lists editor	296

5.6.3.1 General settings

Access:

- Select "Baseband" > "Custom Digital Mod".

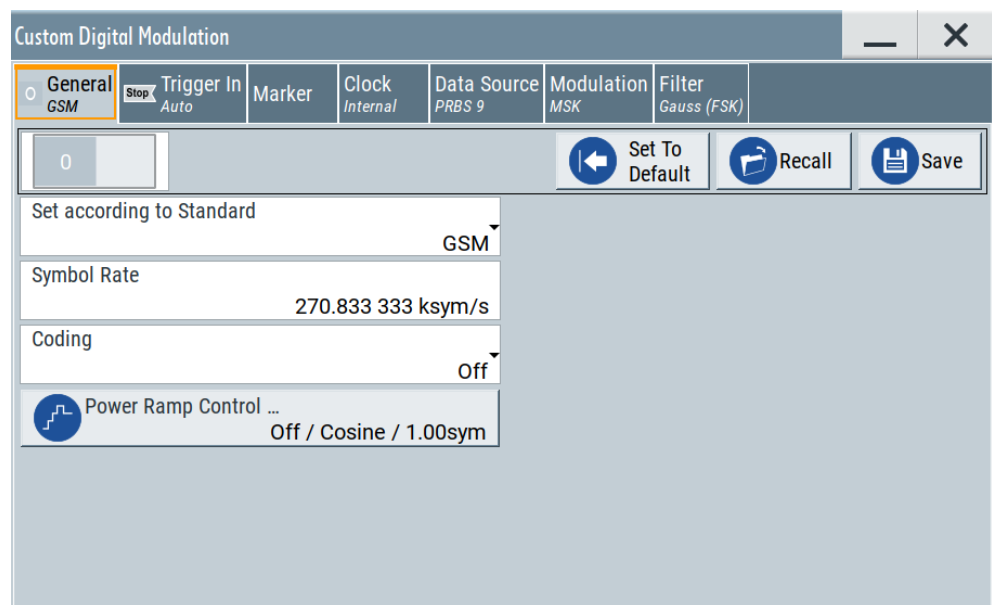

This tab provides access to the default and the save/recall settings, and to a quick selection of a digital modulation according to predefined communication standard.

Settings:

State	279
Set To Default	279
Save/Recall	279
Set according to Standard	279
Symbol Rate	280
Coding	280
Power Ramp Control	280

State

Enables/disables digital modulation. Switching on digital modulation turns off all other digital standards.

The digital modulation is generated in real time (no precalculated signal), and therefore while the digital modulation is enabled, all parameter changes directly affect the output signal.

Remote command:

`[:SOURce<hw>] :BB:DM:STATe` on page 1066

Set To Default

Calls default settings. The values are listed in [Table 5-11](#).

Remote command:

`[:SOURce<hw>] :BB:DM:PRESet` on page 1067

Save/Recall

Accesses the "Save/Recall" dialog, that is the standard instrument function for saving and recalling the complete dialog-related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The settings are saved in a file with predefined extension. You can define the filename and the directory, in that you want to save the file.

See also [Chapter 11, "File and data management"](#), on page 699.

Remote command:

`[:SOURce<hw>] :BB:DM:SETTing:CATalog?` on page 1070

`[:SOURce<hw>] :BB:DM:SETTing:DELeTe` on page 1071

`[:SOURce<hw>] :BB:DM:SETTing:LOAD` on page 1071

`[:SOURce<hw>] :BB:DM:SETTing:STORe` on page 1071

Set according to Standard

Selects a predefined communication standard.

Communication standard

Selects a predefined communication standard. If selected, the firmware automatically sets standard-compliant values for the following parameters: "Modulation Type", "Symbol Rate", "Filter" and "Coding".

For "Set according to Standard" > "Telemetry - SOQPSK-TG", the "Data Source" is "Data List" only. See [Chapter 5.6.3.3, "Data source settings"](#), on page 281.

See [Table 5-12](#) for an overview of the available standards and standard-compliant settings of the modulation parameters.

"User"

Set automatically, this value indicates a modification made on at least one of the parameters.

Use the "Save/Recall" function to save and recall customized settings.

"CW in Baseband"

Generates a continuous wave signal as a BPSK modulated signal with "Data Source = All 1".

This signal is useful for phase coherence applications, and a test signal for testing and debugging.

Note: The selection "CW in Baseband" changes also the data source to "All 1". Subsequent change to a communication standard maintains this data source.

Remote command:

[:SOURce<hw>] :BB:DM:STANdard on page 1067

Symbol Rate

Selects the symbol rate. The value range of this parameter depends on the selected modulation type; the range is automatically redefined.

An error message appears if the selected symbol rate is outside of the redefined range. The symbol rate is set automatically to the maximum allowed value for the new modulation.

Remote command:

[:SOURce<hw>] :BB:DM:SRATe on page 1067

Coding

Selects the coding (see [Chapter 5.5.1.5, "Supported coding schemes"](#), on page 256).

The dialog shows only the coding settings that are permissible for the selected modulation type and installed options (see [Table 5-14](#)). All other coding methods are grayed out.

A subsequent modification to a modulation type for which the selected coding is not available, automatically disables the coding ("Coding = Off").

Remote command:

[:SOURce<hw>] :BB:DM:CODing on page 1074

Power Ramp Control

Accesses the power ramp control dialog, see [Chapter 5.6.3.6, "Power ramp control settings"](#), on page 292.

5.6.3.2 Trigger, marker and clock settings

These tabs provide standard settings.

For detailed description, see:

- [Chapter 5.5.2.1, "Trigger settings"](#), on page 262
- [Chapter 5.5.2.2, "Marker settings"](#), on page 268
- [Chapter 5.5.2.3, "Clock settings"](#), on page 269
- [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271


5.6.3.3 Data source settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Data Source".

This tab provides access to the settings necessary to select and configure the data source, like access to data and list editors or direct selection of PRBS data.


For an overview of the supported data sources, refer to [Chapter 5.5.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 234.

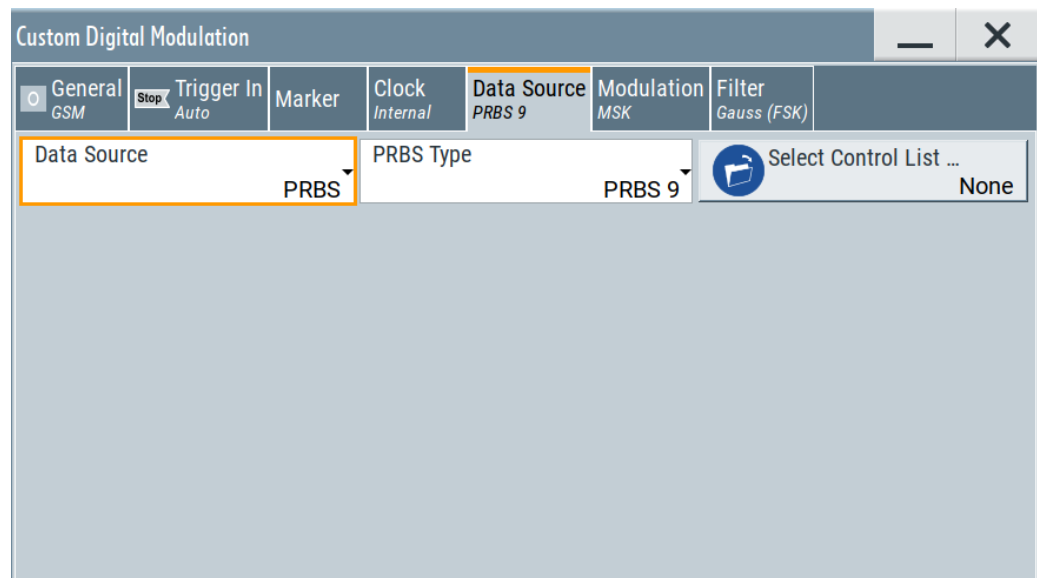

To access the external serial data settings

Provide the external serial data and clock signals at the connectors listed in [Table 5-3](#).

1. If you use a wideband baseband generator (R&S SMW-B9), select "System Config > Mode > Advanced".
2. In the "Custom Digital Modulation > Data Source" dialog, select "Data Source > External".

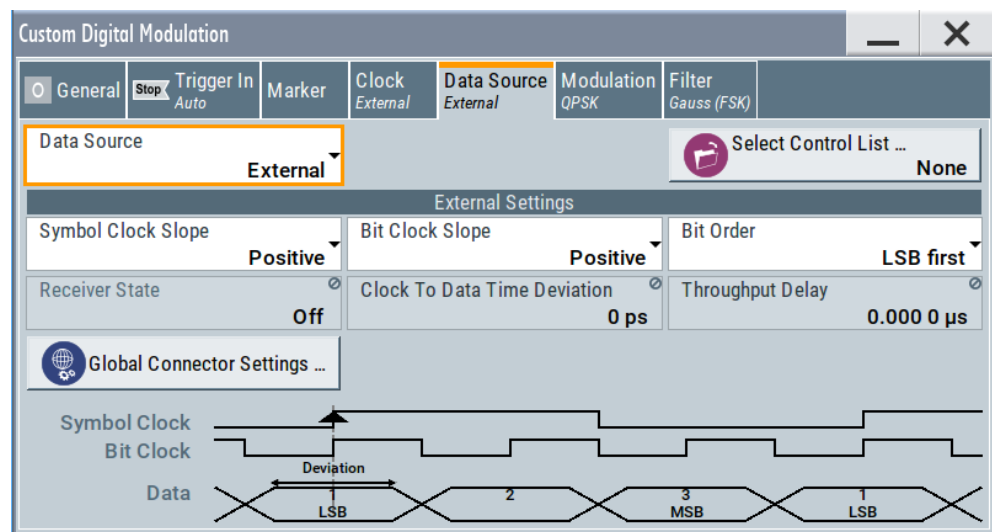

3. If your setup requires higher-order modulation, select for example "Modulation > Modulation Type > PSK > QPSK".

Settings:

Data Source.....	282
Select Data List.....	283
Select Control List.....	283
Settings for Data Source = External.....	284
L Receiver State.....	284
L Clock Input Slope.....	285
L Bit Clock Slope.....	285
L Bit Order.....	285
L Clock to Data Time Deviation.....	285
L Throughput Delay.....	285
L Graphical illustration of the timing ratios between the data and clock signals.....	286
Connector Settings.....	286

Data Source

Selects the data source (see [Chapter 5.5.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 234).

The following data sources are available:

"All 0, All 1" A sequence containing 0 data or 1 data is internally generated.

"PRBS, PRBS Type"

Selects internally generated PRBS data in accordance with the IUT-T. Use the parameter "PRBS Type" to define the length.

Remote command:

`[:SOURce<hw>] :BB:DM:PRBS [:LENGth]` on page 1068

- "Pattern" Use the "Pattern" box to define a bit pattern with a maximum length of 64 bits.
Remote command:
`[:SOURce<hw>] :BB:DM:PATtern` on page 1068
- "Data List" Binary data from data lists are used, see [Select Data List](#).
Remote command:
`[:SOURce<hw>] :BB:DM:DLIST:CATalog?` on page 1089
`[:SOURce<hw>] :BB:DM:DLIST:SElect` on page 1090
- "External" An externally supplied serial data is used, see ["External modulation data"](#) on page 236.
Data and clock signals are expected at the corresponding connectors.
Remote command:
`[:SOURce<hw>] :BB:DM:SOURce` on page 1068

Select Data List

Accesses the standard "Select List" dialog to select an existing data list or to create a one.

Data lists can be generated externally or internally in the data editor.

- Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
- Use the standard "File Manager" function to transfer external data lists to the instrument.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one, see [Chapter 5.6.3.7, "Data list editor"](#), on page 294.

See also [Chapter 5.6.4.2, "How to create and assign a data list"](#), on page 302.

Remote command:

`[:SOURce<hw>] :BB:DM:DLIST:CATalog?` on page 1089
`[:SOURce<hw>] :BB:DM:DLIST:SElect` on page 1090
`[:SOURce<hw>] :BB:DM:DLIST:COpy` on page 1093
`[:SOURce<hw>] :BB:DM:DLIST:DElete` on page 1091

Select Control List

Accesses the standard "Select List" dialog to select an existing control list or to create a one.

Control lists can be generated externally or internally in the "Control and Marker Lists" editor.

- Select the "Select Control List > navigate to the list file *.dm_iqc > Select" to select an existing control list.
- Use the standard "File Manager" function to transfer external lists to the instrument.
- Use the "New" and "Edit" functions to create internally new list or to edit an existing one, see [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296.

Irrespectively on the way they are created, control lists are not automatically used (see ["To assign and activate control signals from a control list"](#) on page 302).

Remote command:

[:SOURce<hw>] :BB:DM:CLISt:CATalog? on page 1089

[:SOURce<hw>] :BB:DM:CLISt:SElect on page 1090

[:SOURce<hw>] :BB:DM:CLISt:COpy on page 1093

[:SOURce<hw>] :BB:DM:CLISt:DElete on page 1090

Settings for Data Source = External

In a wideband baseband generator (R&S SMW-B9), select "System Config > Mode > Advanced".

Receiver State ← Settings for Data Source = External

Indicates the current state of the receiver of the external data. The displayed information is useful in erroneous situations.

"Off"	Indicates that the baseband is not active.
"Operational"	Indicates a normal operation; the data is received with the expected data rate.
"Overflow"	Data rate is too high for correct processing; symbols have been lost. This indication is displayed as long as the signal is not restarted.

Tip: Try out the following:

- Check the data rate of the input signal.
- Provide the data source and the R&S SMW with a common external reference signal.

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

- Provide an external clock signal to the R&S SMW.
See ["Clock Source"](#) on page 270.
- Avoid reflections on the data and clock lines.
The R&S SMW can interpret reflections on the data and clock lines as extra clock edges.

"Underflow"	Data rate is too low or data is missing; zero symbols have been inserted. This indication is displayed as long as the signal is not restarted.
-------------	--

Tip: Try out the following:

- Check that the data and clock cables are connected to R&S SMW.
- Check the data rate of the input signal.
- Provide the data source and the R&S SMW with a common external reference signal.

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

- Provide an external clock signal to the R&S SMW.
See ["Clock Source"](#) on page 270.
- Check the value of the parameter [Local Connector Settings > Threshold Clock](#).

If the configured threshold is higher than the signal's "high" voltage, the signal is not detected.

Remote command:

[:SOURce<hw>] :BB:DM:SMODulation:RCVState? on page 1070

Clock Input Slope ← Settings for Data Source = External

Sets the polarity of the active slope of an externally applied clock signal.

Custom digital modulation with **external serial data** ([Data Source](#) > "External"): A higher bit modulation external serial data requires a reference symbol clock signal to generate a bit clock out of it.

- This parameter sets the active edge of the symbol clock.
- To set the active edge of the bit clock, use the parameter [Bit Clock Slope](#).
- Observe the impact of this parameter on the preview graphic in the "Baseband > Custom Digital Mod > Data Source" dialog.

See also "[External modulation data](#)" on page 236.

Remote command:

[\[:SOURce<hw>\]:INPut:TM:CLOCK:SLOPe](#) on page 1028

Bit Clock Slope ← Settings for Data Source = External

Option: R&S SMW-B10

Sets the active edge of the bit clock.

Timing deviations between the clock and the data signals that are smaller than $\pm 1/16$ of the clock period, are:

- Automatically corrected
- Indicated with the parameter [Clock to Data Time Deviation](#)

Observe the impact of this parameter on the preview graphic.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SMODulation:CLOCK:SLOPe:BIT](#) on page 1069

Bit Order ← Settings for Data Source = External

Sets the bit order, [LSB](#) or [MSB](#) first, used to process the externally supplied higher bit modulation serial data.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SMODulation:BORDER](#) on page 1069

Clock to Data Time Deviation ← Settings for Data Source = External

Indicates timing deviations between the clock and the data signals. Timing deviations that are smaller than $\pm 1/16$ of the clock period are automatically corrected.

See also "[External modulation data](#)" on page 236.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SMODulation:CDTDeviation](#) on page 1069

Throughput Delay ← Settings for Data Source = External

Indicates the time delay between the active clock edge for the external data and the center of the modulation symbol (associated with this data item) on the RF connectors, see [Figure 5-13](#).

Example:

- "Data Source > External"
- Modulation with 3 bits per symbol
- "Symbol Clock Slope > Positive", i.e. the active edge of the symbol clock is the rising edge
- Clock active edge falls at the center of the first bit of each symbol

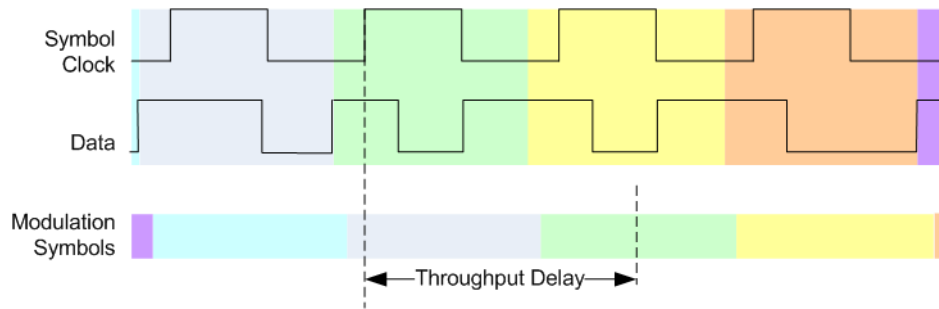


Figure 5-13: Throughput delay (symbols indicated by different colors)

The throughput delay is the time between center points: The center of the modulation symbol at the RF output and the center of the first bit in each symbol in the external data.

Remote command:

`[:SOURce<hw>] :BB:DM:SMODulation:THRoughput:DELay?` on page 1070

Graphical illustration of the timing ratios between the data and clock signals ← Settings for Data Source = External

A graph illustrates the timing relation, depending on the selected:

- Bit Clock Slope
- Clock Input Slope
- Bit Order

Connector Settings

Option: R&S SMW-B10

Accesses the connectors settings.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

5.6.3.4 Modulation settings


Access:

- Select "Baseband > Custom Digital Mod > Modulation".

This tab provides access to the modulation settings, e.g modulation type, FSK deviation, or modulation depth. The dialog shows the theoretical constellation diagram of the selected modulation.



This section focuses on the available settings. For background information on how the settings affect the signal and the filter characteristics, refer to [Chapter 5.5.1.4, "Supported modulation signals"](#), on page 255.

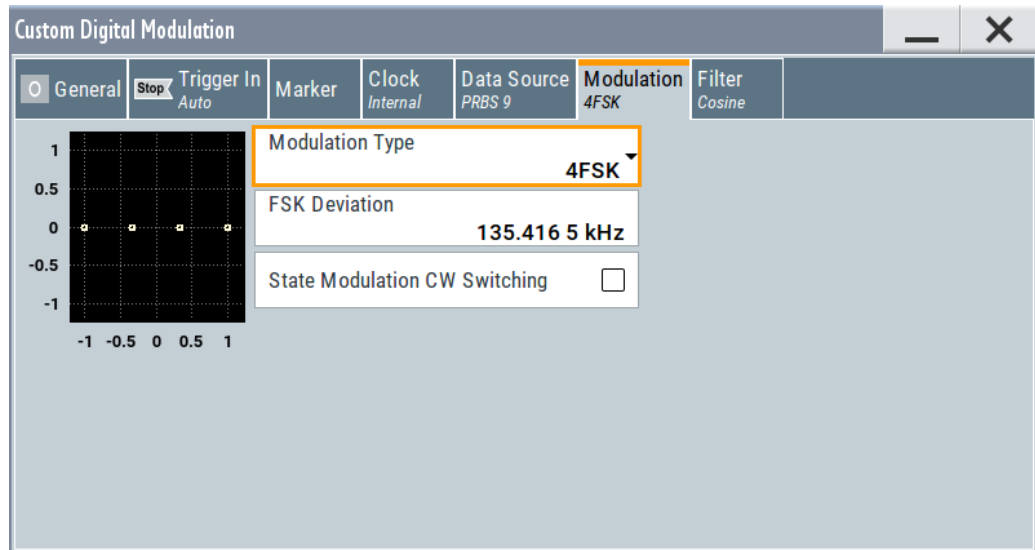

Settings:

Modulation Type.....	287
Load User Mapping.....	287
ASK Depth.....	288
FSK Deviation.....	288
Angle Alpha.....	288
FSK Type.....	288
Deviation xxxx.....	288
Gamma/Gamma 1.....	289
State Modulation CW Switching.....	289

Modulation Type

Selects a modulation type. The associated symbol mapping is displayed.

If the selected "Coding" is not allowed with the configured modulation type, the value of the parameter [Coding](#) is set to "Off".

Refer to [Table 5-13](#) for an overview of the allowed combinations.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FORMat](#) on page 1074

Load User Mapping

Accesses the "Select List File User Mapping" dialog to select the mapping table (see ["User mapping"](#) on page 256). The dialog provides all standard file management functions.

Remote command:

`[:SOURce<hw>] :BB:DM:MLIST:SElect` on page 1090

`[:SOURce<hw>] :BB:DM:MLIST:CATalog?` on page 1089

`[:SOURce<hw>] :BB:DM:MLIST:DElete` on page 1091

ASK Depth

Sets the modulation depth m for ASK modulation.

$$m = (Amplitude_{max} - Amplitude_{min}) / (Amplitude_{max} + Amplitude_{min})$$

Remote command:

`[:SOURce<hw>] :BB:DM:ASK:DEPT` on page 1075

FSK Deviation

Sets the frequency deviation for FSK modulation. The range of values depends on the selected [Symbol Rate](#) (see data sheet).


Whenever "MSK" is selected, the deviation corresponds to 1/4 of the symbol rate and cannot be changed.

Remote command:

`[:SOURce<hw>] :BB:DM:FSK:DEVIation` on page 1075

Angle Alpha

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

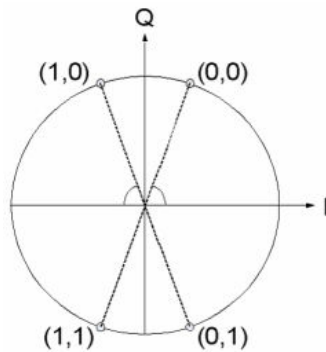

Remote command:

`[:SOURce<hw>] :BB:DM:AQPSk:ANGLE` on page 1074

FSK Type

For "Variable FSK", selects the FSK modulation type.

Available are 4FSK, 8FSK and 16FSK.

Remote command:

`[:SOURce<hw>] :BB:DM:FSK:VARiable:TYPE` on page 1076

Deviation xxxx

For "Variable FSK", sets the deviation of the associated symbol. The number of symbols depends on the selected modulation type. The value of each symbol is indicated in binary format, i.e. x can be 1 or 0.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FSK:VARiable:SYMBol<ch0>:DEViation](#) on page 1075

Gamma/Gamma 1

Selects the gamma function γ for the 16APSK and 32APSK modulations.

The values in brackets indicate the used code rate according to the DVB-S2 specification.

Remote command:

[\[:SOURce<hw>\]:BB:DM:APSK16:GAMMa](#) on page 1076

[\[:SOURce<hw>\]:BB:DM:APSK32:GAMMa](#) on page 1076

State Modulation CW Switching

Option: R&S SMW-B10 or R&S SMW-B9 with "System Config > Mode = Advanced"

Enables/disables switching between the digitally modulated and an unmodulated (CW) signal.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SWITching:STATe](#) on page 1077

5.6.3.5 Filter settings


Access:

- Select "Baseband" > "Custom Digital Mod" > "Filter".

This tab provides access to the filter settings, like filter type and if available further filter settings. A simplified diagram shows the filter characteristic of the selected filter.



This section focuses on the available settings. For background information on how the settings affect the signal and the filter characteristics, refer to [Chapter 5.5.1.6, "Supported baseband filters"](#), on page 257.

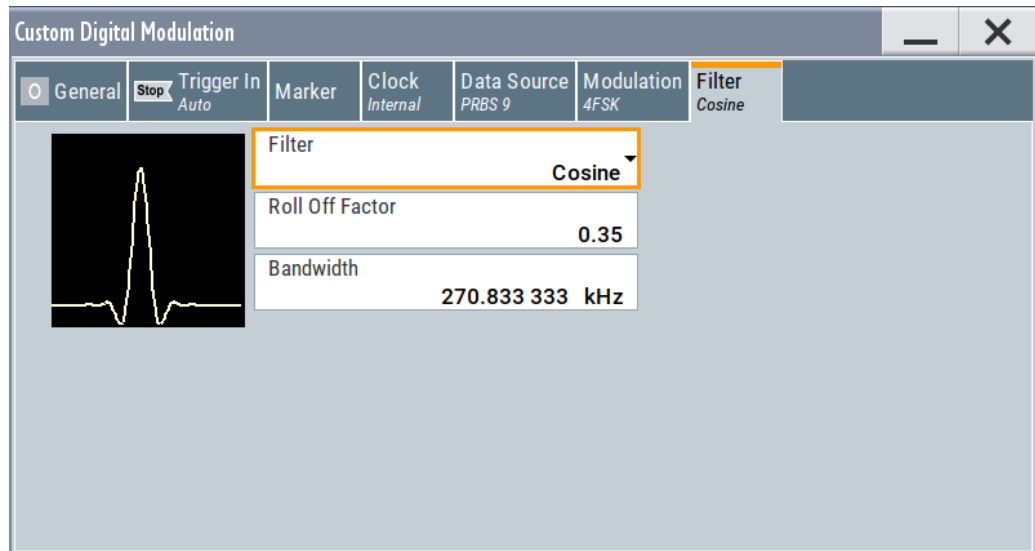**Settings:**

Filter.....	290
Filter Parameter.....	290
Cutoff Frequency Factor.....	290
Bandwidth.....	291
Load User Filter.....	291

Filter

Selects the baseband filter.

Refer to [Chapter 5.6.5.2, "Predefined baseband filters"](#), on page 309 for an overview of the available filter types, their filter shapes and filter parameters.

Remote command:

`[:SOURce<hw>] :BB:DM:FILTER:TYPE` on page 1072

Filter Parameter

Sets the corresponding filter parameter.

The filter parameter offered ("Rolloff Factor" or "BxT") depends on the currently selected filter type.

Remote command:

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:APCO25` on page 1072

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:COSine[:ROLLoff]` on page 1072

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:GAUSS` on page 1072

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:PGAuss` on page 1072

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:RCOSine` on page 1072

`[:SOURce<hw>] :BB:DM:FILTER:PARAMeter:SPHase` on page 1072

Cutoff Frequency Factor

(Available for filter parameter "Lowpass" and "APCO25 (LSM)".)

Sets the value of the cutoff frequency factor. The cutoff frequency of the filter can be adjusted to reach spectrum mask requirements.

Remote command:

[:SOURce<hw>] :BB:DM:FiLTeR:PARaMeter:LPASs on page 1072

[:SOURce<hw>] :BB:DM:FiLTeR:PARaMeter:LPASSEVM on page 1072

[:SOURce<hw>] :BB:DM:FiLTeR:PARaMeter:APCO25Lsm:GAUSS on page 1072

[:SOURce<hw>] :BB:DM:FiLTeR:PARaMeter:APCO25Lsm:LOWPass on page 1072

Bandwidth

Determines the bandwidth of the cosine filter, so that the function in $H(f) = 0$ is fulfilled for $f \geq (1 + \text{rolloff}) * \text{bandwidth} / 2$.

Remote command:

[:SOURce<hw>] :BB:DM:FiLTeR:PARaMeter:COSSine:BANDwidth on page 1072

Load User Filter

Calls the dialog "Select User Filter" for selecting a user-defined filter file with extension *.vaf (see "User filter" on page 257). The dialog provides access to the standard file management functions, like save, load, delete.

Remote command:

[:SOURce<hw>] :BB:DM:FLISt:SElect on page 1090

[:SOURce<hw>] :BB:DM:FLISt:CATalog? on page 1089

[:SOURce<hw>] :BB:DM:FLISt:DElete on page 1090


5.6.3.6 Power ramp control settings

- Access:
- Select "Baseband" > "Custom Digital Mod" > "General" > "Power Ramp Control".

State	0
Source	Internal
Ramp Function	Cosine
Ramp Time	1.00 sym
Rise Delay	0.00 sym
Fall Delay	0.00 sym
Attenuation	15.0 dB
Power Ramping / Level Attenuation	
In Baseband Only	<input type="checkbox"/>

The dialog comprises the settings used to configure the power ramping, like the source of the control signals, the form of the ramp function and the applied attenuation.

See also ["Power ramping and level attenuation"](#) on page 239.

 Power ramping is possible for symbol rates up to 5 MHz. A higher symbol rate disables the power ramping automatically and an error message is output.

Settings:

State.....	293
Source.....	293
Ramp Function.....	293
Ramp Time.....	293
Rise Delay.....	293
Fall Delay.....	293
Attenuation.....	294
In Baseband Only.....	294

State

Enables/disables power ramping.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp [:STATe] on page 1079

Source

Defines the source for the power ramp control signals.

"Internal" The control signals as defined in the internal control list are used for control purposes.

See also [Chapter 5.6.4.1, "How to create and assign a control list"](#), on page 300.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:SOURce on page 1077

Ramp Function

Selects the ramp function that describes the shape of the rising and falling edges during power ramp control, see [Figure 5-4](#).

"Linear" The transmitted power rises and falls linear fashion.

"Cosine" The transmitted power rises and falls with a cosine-shaped edge, resulting in a more favorable spectrum than the "Linear" setting.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:SHAPE on page 1077

Ramp Time

Enters the power ramping rise time and the fall time for a burst. The setting is expressed in symbols. See also [Figure 5-4](#).

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:TIME on page 1078

Rise Delay

Sets the offset in the rising edge of the envelope at the start of a burst, see [Figure 5-4](#).

A positive value delays (the envelope length decreases) and a negative value causes an advance (the envelope length increases). The setting is expressed in symbols.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:RDElay on page 1078

Fall Delay

Sets the offset in the falling edge of the envelope at the end of a burst, see [Figure 5-4](#).

A positive value delays (the envelope length increases) and a negative value causes an advance (the envelope length decreases). The setting is expressed in symbols.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:FDElay on page 1078

Attenuation

Determines the level by that the average signal level is attenuated during the signal attenuation period, during the time, that the "Lev_Att" signal is high. See also [Figure 5-3](#).

For information about the required control signal, refer to ["Power ramping and level attenuation"](#) on page 239.

Remote command:

[\[:SOURce<hw>\]:BB:DM:PRAMp:ATTenuation](#) on page 1078

In Baseband Only

Restricts power ramping to the baseband signal.

"Off" Level attenuation is affected via the attenuator stages in the RF section; only the remaining part is attenuated in the baseband. The signal is issued at the RF output with the defined level values.

"On" Level attenuation is affected in the baseband only.

Note:

This setting is mandatory in the following cases:

- When only the baseband signal is issued at the I/Q outputs
It is thus ensured that, with power ramping active, this signal is output with the defined level values.
- For two-path instruments, when one baseband signal is applied to two RF paths.

Remote command:

[\[:SOURce<hw>\]:BB:DM:PRAMp:BBONly\[:STATe\]](#) on page 1079

5.6.3.7 Data list editor


The R&S SMW provides the following ways to create a data list file:

- To use the dedicated "Data List Editor" and create a file with extension *.dm_iqd, see ["To create data lists manually"](#) on page 302
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 346.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 346.

Access:

1. Select "Baseband > Custom Digital Mod > Data Source > Data List".
2. Select "Select Data List".
3. Navigate to the required directory.
4. Select "New".
5. Enter a filename.

For example, in the directory `/var/user/`, enter "Filename" = `dl_3gpp`

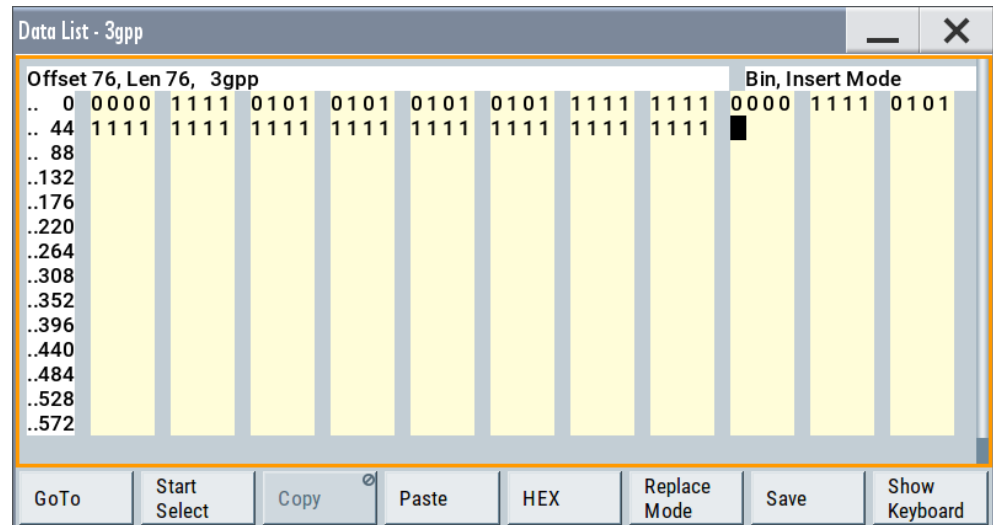

The "Data List Editor" is a list of binary values with a maximum length of 2^{31} bits.

This value corresponds to a file size of approx. 268 Mbyte.

To increase readability, the bits are displayed in groups of four (binary format) or two (hexadecimal format). Also, above the list are displayed: The current cursor position and the length of the list and the list filename are displayed above the list. The offset starts with the value 0 which corresponds to the bit position on the left side of the first row, i.e. the beginning of the list. On the left edge of the editor, the last three offset positions are specified at the beginning of the row.

An existing list can be edited in the insert or replace mode. The upper right corner shows the current mode.

SCPI command:

`[:SOURce<hw>] :BB:DM:DLIST:SElect` on page 1090

`[:SOURce<hw>] :BB:DM:DLIST:DATA` on page 1094

`[:SOURce<hw>] :BB:DM:DLIST:DATA:APPend` on page 1095

The buttons below the binary list simplify the editing.

Settings:

GoTo.....	295
Start Select/Undo Select.....	295
Copy, Cut, Paste.....	296
HEX/BIN.....	296
Replace/Insert Mode.....	296
Save.....	296

GoTo

Opens the entry window for the bit position. The cursor marks the bit at the selected position.

Start Select/Undo Select

Defines the current cursor position as the start position for the range to be selected. To define the stop position, select "GoTo > Go To Offset" and define the offset.

Selecting "Undo Select" deactivates the selected range.

Copy, Cut, Paste

Standard copy, cut, and paste functions.

HEX/BIN

Switches between hexadecimal and binary display.

Every 4-bit group is displayed as a hexadecimal value. To increase readability, the hexadecimal values in turn are displayed in pairs of two.

The hex functions are automatically assigned to the numeric keys at the front panel.

Replace/Insert Mode

Switches between replace and insert mode to enter new or replace old values.

Save

Saves the changes into the selected data list file.

5.6.3.8 Control and marker lists editor

The R&S SMW provides the following ways to create a file containing control signals:

- To use the tag-oriented format and create a control list file, see ["To create a control list with tag file format"](#) on page 344.
- To use SCPI commands and create a file in binary format, see ["To create a control list in binary format"](#) on page 345.
- To use the dedicated "Control Data Editor" and create a file in ASCII format and with extension *.dm_iqc.
The "Control Data Editor" is described in this section. Refer to ["To create a control list in ASCII format manually"](#) on page 301 for step-by-step instructions.

To access the "Control Data Editor":

1. Select "Baseband > Custom Digital Mod > Data Source".
2. Select "Select Control List".
3. Navigate to the required directory, for example `/var/user/`.
Select "New".
4. In the "Filename" field, enter the name of the new control list, for example `dl_3gpp`.

5. Select "Edit".



The dedicated internal "Control Data Editor" is an intuitive graphical interface provided for defining and managing of:

- Marker signals
- Control signals, like the CW, "Hop", "Burst Gate", and "Lev_Att" control signals
See also ["Control signals"](#) on page 239.

A separate file with the file extension `*.dm_iqc` is created for each defined control signal and held on the instrument's hard disk. Control lists created with the editor are files in an ASCII file format.

In the "Control Data Editor" dialog, the available marker and control signals are displayed color-coded. The "Select Ramp to Edit" is a graphical display of the signal characteristics. To define the ramp for the individual markers or control signals, tap on the desired position or use the provided support functions "<Signal> Table" and "Cursor Position". To simplify the settings, use the predefined preset ramp characteristics in the "<Signal> Preset Type" section. The scaling of the x-axis is always adapted to the overall length of the control list to provide constant overview of all defined ramps. For detailed representation, zoom the displayed area around the current cursor position.

In the "Configure Control Signal" section, a status checkbox indicates whether the individual marker or control signal is assigned or enabled (see [Chapter 5.6.4.1, "How to create and assign a control list"](#), on page 300).

SCPI command:

`[:SOURce<hw>] :BB:DM:CLIST:CATalog?` on page 1089

`[:SOURce<hw>] :BB:DM:CLIST:SElect` on page 1090

Settings:

Configure Control Signal	298
Select Ramp to Edit	298
Total List Length	298

Preset Type.....	298
Cursor Position.....	299
Positions Control Signal.....	299
Zoom/Visible.....	299
Save/Save As.....	300

Configure Control Signal

Displays the color the marker/control signal has been assigned.

The status checkbox indicates whether the individual marker or control signal is assigned or enabled (see [Chapter 5.6.4.1, "How to create and assign a control list"](#), on page 300).

Remote command:

n.a.

Select Ramp to Edit

Graphical representation for editing of the marker/control signals.

Refer to [Chapter 5.6.4.1, "How to create and assign a control list"](#), on page 300 for an overview of the editing capabilities of the display.

Remote command:

```
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
```

on page 355

[\[:SOURce<hw>\]:BB:DM:CLIST:DATA](#) on page 1093

Total List Length

Enters the length of the definition range of the control list in bits. The starting value is always bit 0. The entire definition range is displayed, i.e. the bit scale is adapted to the entry. If the definition range is decreased, the ramps outside the range are lost.

When used, the control list is always repeated over the length of the definition range if the length of the data list exceeds the length of the control list.

Tip: With long control lists, it is useful to zoom the displayed area around the current cursor position ("Zoom in").

Remote command:

[{CONTROL LENGTH: ControlLength}](#) on page 351

Preset Type

Triggered with "Preset", presets for the ramp characteristic of the selected control signal as defined with the "Preset Type".

"All Up, All Down"

Continuously high/low marker/control signal.

"Ramp Up, Ramp Down"

A ramp from low to high or from high to low is configured in the center of the displayed signal area; ramp position can be later shifted as required.

"Ramp Up/Down, Ramp Down/Up"

Created is a ramp sequence of low to high and high to low transitions, respectively high to low, and low to high transitions. The ramps are symmetrically distributed around the center of the displayed signal area but be later shifted as required.

Remote command:

n.a.

Cursor Position

Displays/enters the cursor position in the graphical display

If the entered value exceeds the selected length of the definition range, the length is adjusted automatically.


Remote command:

n.a.

Positions Control Signal

Select "Edit ..." to access a dialog with representation of the ramps of the selected signal in table form.

	Ramp Position	Ramp State
0	0	Low
1	82	High
2	284	Low
3	468	High
4	767	Low
5		

 Accept

The bit position is specified in the "Ramp Position" column, the high or low signal status in the "Ramp State" column. Use the last blank row to enter new ramps.

To apply the changes, press "Accept".

Remote command:

n.a.

Zoom/Visible

Zooms the displayed area of the control list. The designation of the button changes from "Zoom in" to "Zoom out".

With long control lists, it is helpful to display only a part of the control list. In such cases, set the "Visible/Bits Visible" to determine the number of symbols/bits to be displayed and select "Zoom" to focus the displayed area around the current "Cursor Position".

Ramps outside the displayed area are not lost by zooming.

Remote command:
n.a.

Save/Save As

Saves the changes in the selected control list file or in a new file.

Remote command:
n.a.

5.6.4 How to create data and control lists

This section provides step-by-step instructions on configuring and using the provided settings. For details on individual functions and settings, see [Chapter 5.6.3, "Custom digital modulation settings"](#), on page 277.

To generate a digitally modulated signal

- ▶ To generate a simple 3GPP digitally modulated signal, follow the instructions in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57.

To apply an external clock signal



Internal and external clock synchronization

The correct synchronization of the internal clock synthesizer requires that the following procedure is maintained.

1. Supply the instrument with the external clock, i.e. connect the external reference clock source to the suitable instrument's connector.
2. If necessary, adjust the corresponding connector settings.
3. Adjust the "Symbol Rate".
The selected symbol rate must not deviate from the symbol rate of the external signal by more than 2% (see also data sheet).
4. Enable "Clock Source External".

5.6.4.1 How to create and assign a control list

The R&S SMW provides the following ways to create a file containing control signals:

- To use the dedicated [Control and marker lists editor](#) and create a file in ASCII format and with extension *.dm_iqc, see ["To create a control list in ASCII format manually"](#) on page 301
- To use the tag-oriented format and create a control list file, see ["To create a control list with tag file format"](#) on page 344.
- To use SCPI commands and create a file in binary format, see ["To create a control list in binary format"](#) on page 345.

To create a control list in ASCII format manually

Use the intuitive build in [Control and marker lists editor](#) dialog:

1. To open the "Control Data Editor":
 - a) Select "Baseband" > "Custom Digital Mod" > "Data Source" > "Select Control List".
 - b) Select a file.
You can select an existing file or a "New".

If the selected file is an existing one, the dialog shows the used settings. If you create a file, the control list is empty.

2. Adjust the control signals as required.
 - a) In the graphic editor "Select Ramp to Edit", select the color-coded trace of the required signal.
 - b) Tap at a position which requires a ramp. The number of ramps per marker is unlimited.
 - c) To remove a ramp, place the cursor at the desired ramp position.
Press the [Backspace] key.
 - d) For faster marker and control signal definition, use the predefined ramp functions ("Preset Type"). Apply them with "Preset".
 - e) If necessary, readjust the ramps with the help of the "Edit Table" function.
 - f) Define the "Total List Length".
 - g) To display only a part of the control list, set the "Visible/Bits Visible" to determine the number of displayed symbols/bits.
Select "Zoom" to focus the displayed area around the current "Cursor Position".

Ramps outside the displayed area are not lost.



Figure 5-14: Example of control list settings

3. Select "Save" or "Save As" to save the used settings as a control list file.

The created file is an ASCII file with the extension *.dm_iqc.

Enable the instrument to use the control list, e.g. for the marker and/or other control signals.

Enabled control signals are indicated as active in the "Configure Control Signal" section.

To assign and activate control signals from a control list

Irrespectively on the way they are created, generated control lists are not automatically used.

To use a marker/control signal from a control list and to output this signal at the supported connector, perform the following:

1. Enable the R&S SMW to use the control list for marker output 2.
Output this signal at the T/M2 connector:
 - a) Select "Baseband" > "Custom Digital Mod" > "Marker".
 - b) Select "Marker 2" > "Mode" > "CList".
 - c) Select "Baseband" > "Custom Digital Mod" > "Marker" > "Local Connectors".
 - d) Select "Routing" > "T/M 2" > "Direction" > "Output".

The output signal is "Signal" > "Baseband A Marker 2".
2. To enable the R&S SMW to use the "Burst Gate" and "Level Attenuation" control signals as defined in a control list and output one of them at the T/M3 connector:
 - a) Select "Baseband" > "Custom Digital Mod" > "Power Ramp Control" > "Source" > "Internal".
 - b) Select "Baseband" > "Custom Digital Mod" > "Marker" > "Local Connectors".
 - c) Select "Routing" > "T/M 3" > "Direction" > "Output".

The output signal is "Signal" > "Lev Att A".

5.6.4.2 How to create and assign a data list

The R&S SMW provides the following ways to create a data list file:

- To use the dedicated [Data list editor](#) and create a file with extension *.dm_iqd, see ["To create data lists manually"](#) on page 302
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 346.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 346.

To create data lists manually

Use the intuitive build in [Data list editor](#) dialog:

1. To access the "Data List Editor":
 - a) Select "Baseband" > "Custom Digital Mod".
 - b) Select "Data Source" > "Data List".

- c) Select "Select Data List"
- d) Navigate to the required directory, for example, `/var/user/`.
- e) Select "New". Enter a filename, for example, `dl`.

The "Data List Editor" opens; the data list is empty.

2. Enter a sequence of 0 and 1, for example `01110101`.

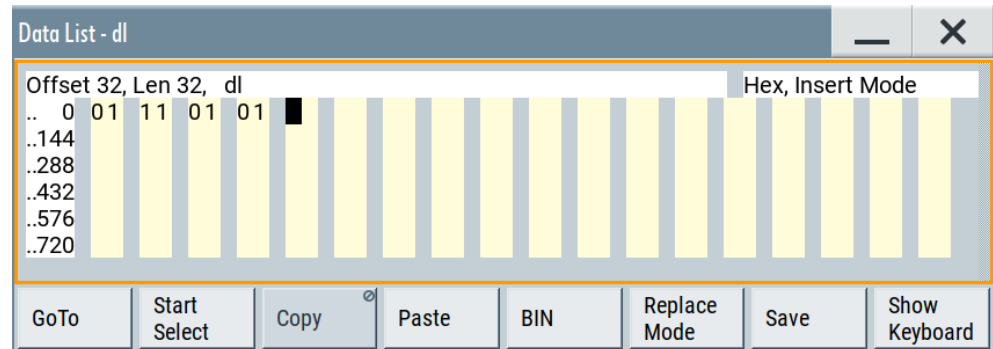


Figure 5-15: Example of data list

3. Select "Save" to save the used settings as a data list file.

The instrument saves the `dl.dm_iqd` file in the `/var/user/` directory.

How to assign and activate data lists

Irrespectively on the way they are created, generated data lists are not automatically used.

1. To enable the R&S SMW to use the data list as data source for the custom digital modulation:
 - a) Select "Baseband" > "Custom Digital Mod".
 - b) Select "Data Source" > "Data List".
 - c) Select "Select Data List"
 - d) Navigate through the file system.
 - e) To select the file, confirm with "Select".
2. To enable the R&S SMW to use the data list as data source for any of the digital standards:
 - a) Select the "Data List Name" in the individual dialog.
For example, for "Baseband" > "3GPP FDD" > "Basestations" > "BS1" > "Channel Table" > "P-CCPCH" > "Data" > "Data List".
 - b) Select "DList" > "None".
 - c) Select the file in the file system.

5.6.5 References

Table 5-11: Custom digital modulation default values

Parameter	Value
"State"	Not affected
"Data Source"	"PRBS 9"
"Standard"	"GSM"
"Symbol Rate"	"270.833 ksymb/s"
"Coding"	"GSM"
"Modulation Type"	"MSK"
"Filter"	"Gauss (FSK)"
Filter parameter "B*T"	"0.3"
Trigger	"Mode > Auto", "Source > Internal"
Clock	"Source > Internal"
"Power Ramp Control" settings:	
"Attenuation"	"15.0 dB"
"Ramp Time"	"1.00 sym"
"Ramp Function"	"Cosine"
"Rise Delay"	"0.00 sym"
"Fall Delay"	"0.00 sym"
"Source"	"Internal"
"State"	"Off"

Table 5-12: Predefined settings for communication standards

Standard	Modulation	Symbol rate	Filter	Coding	SCPI filter type
APCO Phase1 C4FM	4FSK $f_{\text{dev}} = 1.8 \text{ kHz}$	4.8 ksymb/s	APCO25 Roll off factor = 0.2	APCO25(FSK)	APCOPH1C4fm
APCO Phase1 CQPSK	pi/4-DQPSK	4.8 ksymb/s	Raised Cosine Roll off factor = 0.2 Bandwidth = 4.8 kHz	APCO25(PSK)	APCOPH1CQpsk
APCO Phase2 H- CPM	4FSK $f_{\text{dev}} = 3 \text{ kHz}$	6 ksymb/s	APCO25(H-CPM)	APCO25(FSK)	APCOPH2HCpm
APCO Phase2 H- DQPSK	pi/4-DQPSK	6 ksymb/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(PSK)	APCOPH2HDQpsk
APCO Phase2 H- D8PSK Wide	pi/8-D8PSK	4 ksymb/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(8PSK)	APCOPH2HD8PSKW

Standard	Modulation	Symbol rate	Filter	Coding	SCPI filter type
APCO Phase2 H-D8PSK Narrow	pi/8-D8PSK	4 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 5 kHz	APCO25(8PSK)	APCOPH2HD8PSKN
APCO Phase1 LSM	pi/4-DQPSK	4.8 ksym/s	APCO25(LSM) Gauss Cut Off Freq. = 2.04 kHz Lowpass Cut Off Freq. = 6.2 kHz	APCO25(PSK)	APCOPH1Lsm
APCO Phase1 WCQPSK	pi/4-DQPSK	4.8 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(PSK)	APCOPH1Wcqpsk
Bluetooth	2FSK $f_{dev} = 160$ kHz	1 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	BLUetooth
CDMA2000 Forward	QPSK	1.2288 Msym/s	cdmaOne + Equalizer	cdma2000	CFORward
CDMA2000 Reverse	Offset QPSK	1.2288 Msym/s	cdmaOne	cdma2000	CREVerse
CW in Baseband	BPSK	1 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	CWBPsK
DECT	2FSK $f_{dev} = 288$ kHz	1.152 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	DECT
ETC (ARIB STD T55)	ASK $m = 100$ %	1.024 Msym/s	Split Phase $B \cdot T = 2.0$	Off	ETC
GSM	MSK	270.833333 ksym/s	Gauss (FSK) $B \cdot T = 0.3$	GSM	GSM
GSM EDGE	8PSK EDGE (3pi/8 8PSK)	270.833333 ksym/s	Gauss Linearized	Off	GSMEdge
NADC	pi/4 DQPSK	24.3 ksym/s	Root Raised cosine Roll off factor = 0.35	NADC	NADC
PDC	pi/4 DQPSK	21 ksym/s	Root Raised cosine Roll off factor = 0.5	PDC	PDC
PHS	pi/4 DQPSK	192 ksym/s	Root Raised cosine Roll off factor = 0.5	PHS	PHS
TD-SCDMA	QPSK 45° Off-set	1.28 Msym/s	Root Raised cosine Roll off factor = 0.22	Off	TCSCdma
Telemetry SOQPSK-TG	2FSK $f_{dev} = 1.25$ MHz	5 Msym/s	SOQPSK	Off	SOQPSKTG
TETRA	pi/4 DQPSK	18 ksym/s	Root Raised cosine Roll off factor = 0.35	TETRA	TETRa
WCDMA 3GPP	QPSK 45° Off-set	3.84 Msym/s	Root Raised cosine Roll off factor = 0.22	WCDMA 3GPP	W3GPp

Standard	Modulation	Symbol rate	Filter	Coding	SCPI filter type
Worldspace	QPSK	1.84 Msym/s	Root Raised cosine Roll off factor = 0.4	Off	WORLdspace
TFTS	pi/4 DQPSK	22.1 ksym/s	Root Raised cosine Roll off factor = 0.4	TFTS/TETRA	TFTS

Table 5-13: Modulation type and coding combinations

Modulation	Coding	Modulation	Coding	Modulation	Coding
ASK	Off Differential Differential + Gray Gray	OQPSK	Off Differential Differential + Gray Gray	16QAM	Off Differential Phase Differential Differential + Gray Gray
BPSK	Off Differential Diff.+Gray Gray	8PSK_EDGE	Off	16QAM EDGE	Off
pi/2 DBPSK	Off Gray	Pi/8 D8PSK	Off Gray APCO25(8PSK)	32QAM	Off Differential Phase Differential Differential + Gray Gray
QPSK	Off Differential Differential + Gray Gray INMARSAT, ICO, WCDMA, CDMA2000	MSK	Off Differential Differential + Gray Gray GSM	32QAM EDGE	Off
QPSK EDGE	Off	2FSK	Off Differential Differential + Gray Gray GSM	64QAM	Off Differential Phase Differential Differential + Gray Gray
QPSK45° Offset	Off Differential Differential + Gray Gray	4FSK	Off Differential Differential + Gray Gray	128QAM	Off Differential Phase Differential Differential + Gray Gray

Modulation	Coding	Modulation	Coding	Modulation	Coding
Pi/4 QPSK	Off Differential Gray	8FSK	Off Differential Differential + Gray Gray	256QAM	Off Differential Phase Differential Differential + Gray Gray
Pi/4 DQPSK	Off Gray NADC, PDC, PHS, TETRA, APCO25(PSK), PWT TFTS/TETRA	16FSK	Off Differential Differential + Gray Gray	1024QAM	Off Differential Phase Differential Differential + Gray Gray
8PSK	Off Differential Differential + Gray Gray VDL	32FSK	Off	16APSK	Off
AQPSK	Off Differential Differential + Gray Gray	64FSK	Off	32APSK	Off

5.6.5.1 Common coding algorithms



In the notation used below, a_n denotes the n^{th} input symbol and b_n denotes the correspondingly coded output symbol. Individual bits in the symbols from the LSB (least significant bit) to the MSB (most significant bit) are denoted by a_{0n} , a_{1n} , etc. The same applies to the output symbols.

Common coding types are listed in [Table 5-14](#).

Table 5-14: Common coding algorithms

Coding	Coding algorithm	Applicable for K bit/symbol
"None"	$b_n = a_n$	$k = 1 \dots 8$
"Differential"	$b_n = (a_n + b_{n-1}) \text{ modulo } 2^k$	$k = 1 \dots 7$
"Differential + Gray"	Gray coding with additional differential coding	$k = 1 \dots 7$

Coding	Coding algorithm	Applicable for K bit/symbol
"GSM" ¹⁾	$d_n = \text{NOT } (d_n \text{ EXOR } d_{n-1})$	$k = 1$
"Phase Differential" ¹⁾	$b_{1n} = [\text{NOT } (a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{1n} \text{ EXOR } b_{1(n-1)})] \text{ OR } [(a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{1n} \text{ EXOR } b_{0(n-1)})]$ $b_{0n} = [\text{NOT } (a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{0n} \text{ EXOR } b_{0(n-1)})] \text{ OR } [(a_{1n} \text{ EXOR } a_{0(n-1)}) \text{ AND } (a_{0n} \text{ EXOR } b_{1(n-1)})]$	-

¹⁾ Requires R&S SMW-B10.

"Coding > Phase Differential/INMARSAT" correspond to system standards Inmarsat-M and DVB according to ETS 300 429. You can use INMARSAT coding for modulation types with 2 bits/symbol, such as QPSK.

Examples

The following examples illustrate how some of the different common coding schemes combined with a modulation method influence the signal.

Example: Differential coding for QPSK modulation with K = 2 bit/symbol

Decimal display; the value range for modulation symbols is $a_n = \{0, 1, 2, 3\}$.

According to [Table 5-14](#) and for $k = 2$, the recursive coding is defined as $b_n = (a_n + b_{n-1}) \text{ modulo } 4$.

Depending on the state of a preceding modulation symbol b_{n-1} , the coded modulation symbol b_n is obtained, for example, from modulation symbol, $a_n = 2$ as follows:

b_{n-1}	0	1	2	3
b_n	2	3	0	1

With differential coding, the assignment of modulation symbols a_n (binary indication: MSB, LSB) to the phase differences shown in the following table is generated:

Table 5-15: Phase difference for QPSK

Modulation symbol a_n	00	01	10	11
Phase difference	0°	90°	180°	270°

Example: Differential coding for modulation type pi/4DQPSK

With differential coding switched on at the same time, the obtained constellation diagram for pi/4DQPSK is similar to that of 8PSK. Phase shifts are however assigned to the individual modulation symbols. The [Table 5-16](#) shows the assignment of modulation symbols a_n (binary indication: MSB, LSB) to phase shifts of the I/Q vector in relation to the selected coding.

Table 5-16: Phase shifts for pi/4DQPSK

Modulation symbol a_n	00	01	10	11
"Coding = Off"	+ 45°	+ 135°	- 135°	- 45°
"Coding = NADC, PDC, PHS, TETRA, or APCO25 (PSK)"	+ 45°	+ 135°	- 45°	- 135°
"Coding = TFTS"	- 135°	+ 135°	- 45°	+ 45°

Example: Gray and differential coding for 8PSK modulation

When this coding scheme is used, the gray coding according to the gray code is performed before the differential coding. The latter uses the recursive coding algorithm quoted above (see [Table 5-14](#)). The assignment of modulation symbols a_n (binary indication: MSB, LSB) to the phase differences shown in the following table is generated:

Table 5-17: Differential coding according to VDL¹⁾





Modulation symbol d_n	000	001	010	011	100	101	110	111
Phase difference	0°	45°	135°	90°	270°	315°	225°	180°


¹⁾ "Differential coding according to VDL" can be used for modulation types with 3 bits/symbol, e.g. 8PSK.


5.6.5.2 Predefined baseband filters





The [Table 5-18](#) shows the filters that are available, together with their associated parameters. The filter characteristic is displayed in graphical form.


Table 5-18: Overview of the baseband filters

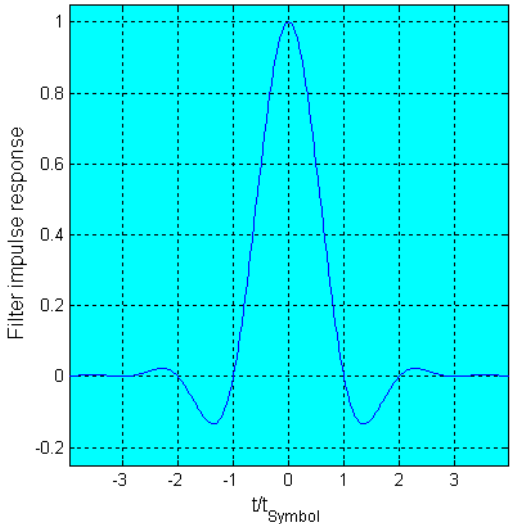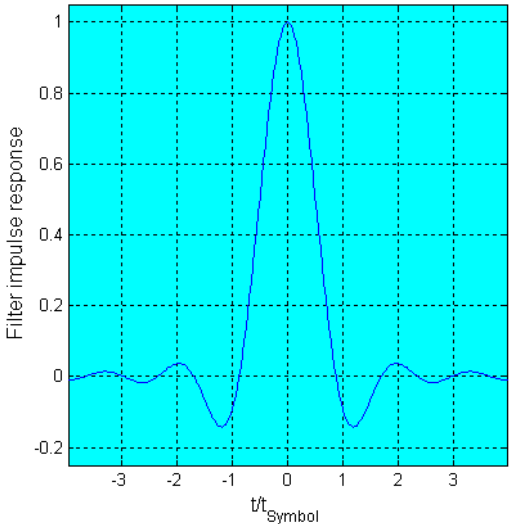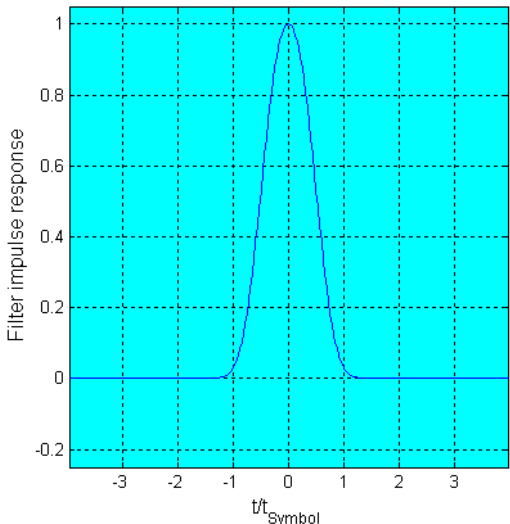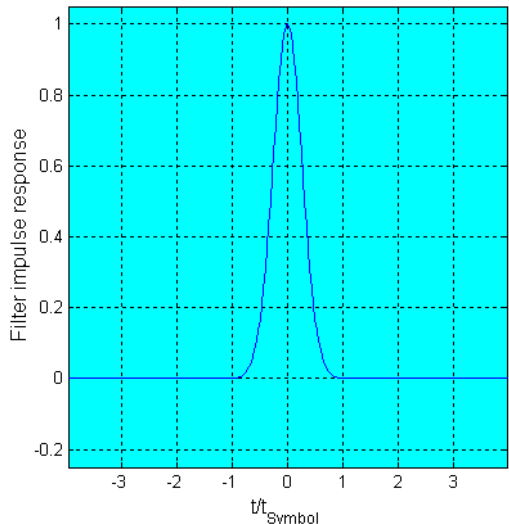
"Raised Cosine (RC)" "Roll Off Factor"	"Root Raised Cosine (RRC)" "Roll Off Factor"
<p>Raised Cosine $r=0.5$</p> 	<p>Root Raised Cosine $r=0.5$</p> 
"Gauss (FSK)" " $B \cdot T$ "	"Gauss (Pure)" " $B \cdot T$ "
<p>Gauss $BT=0.5$</p> 	<p>Gauss (Pure) $BT=0.5$</p> 
"Gauss Linearized"	"Edge Narrow Pulse Shape"

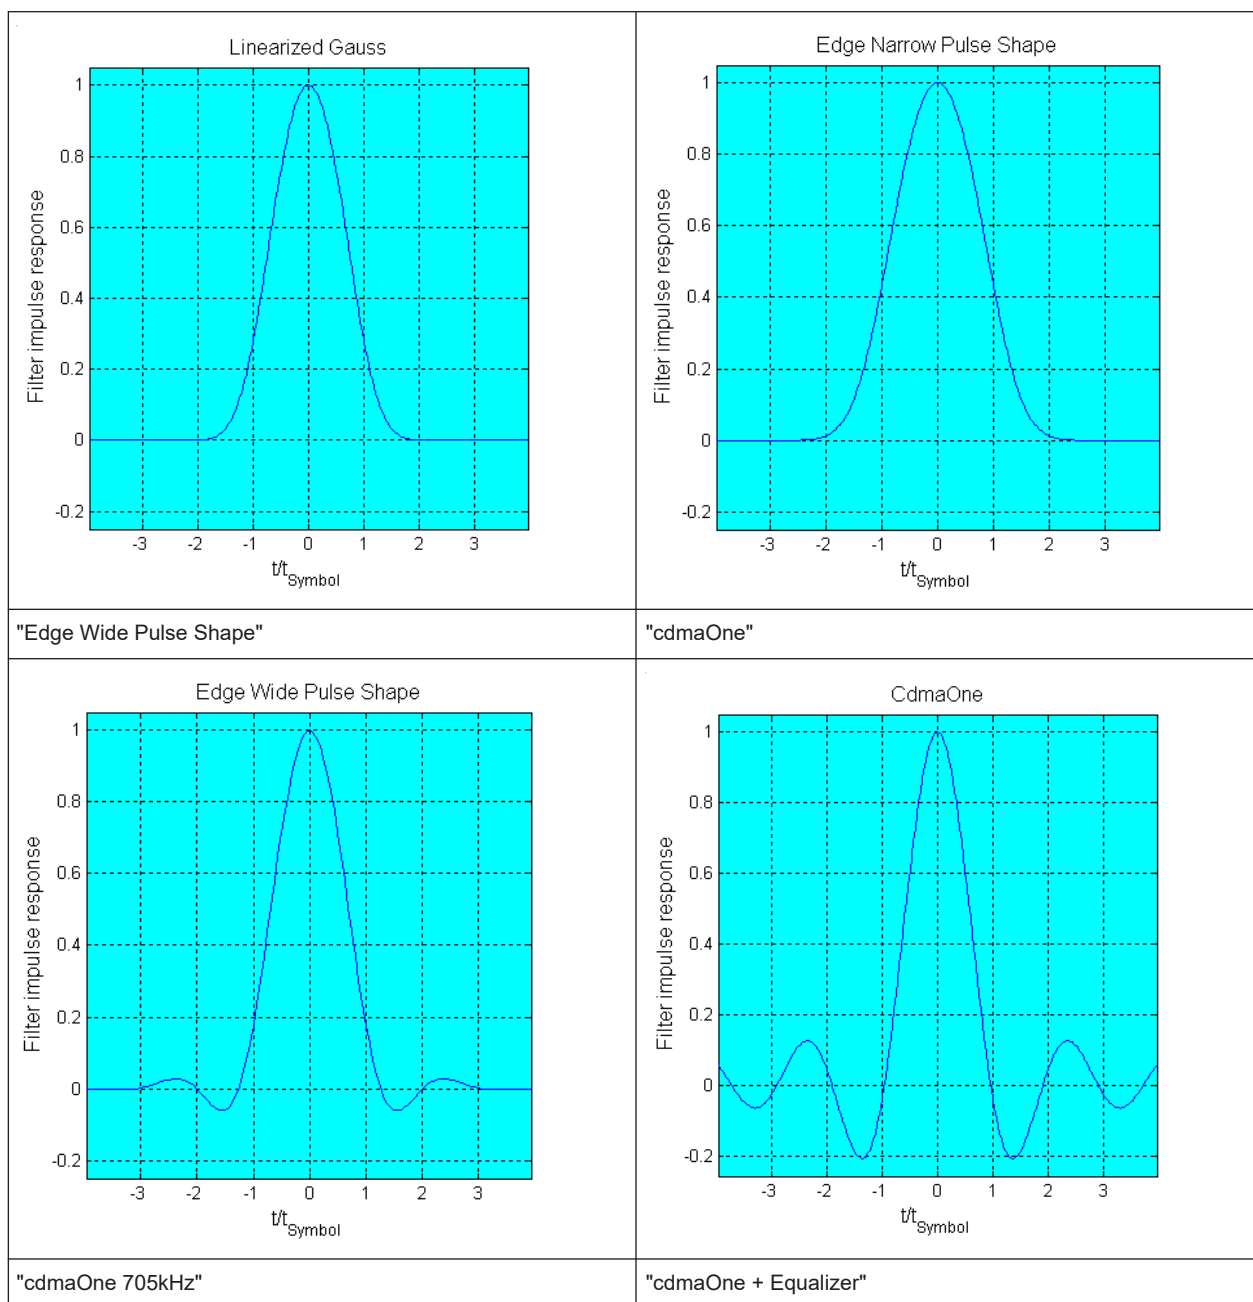

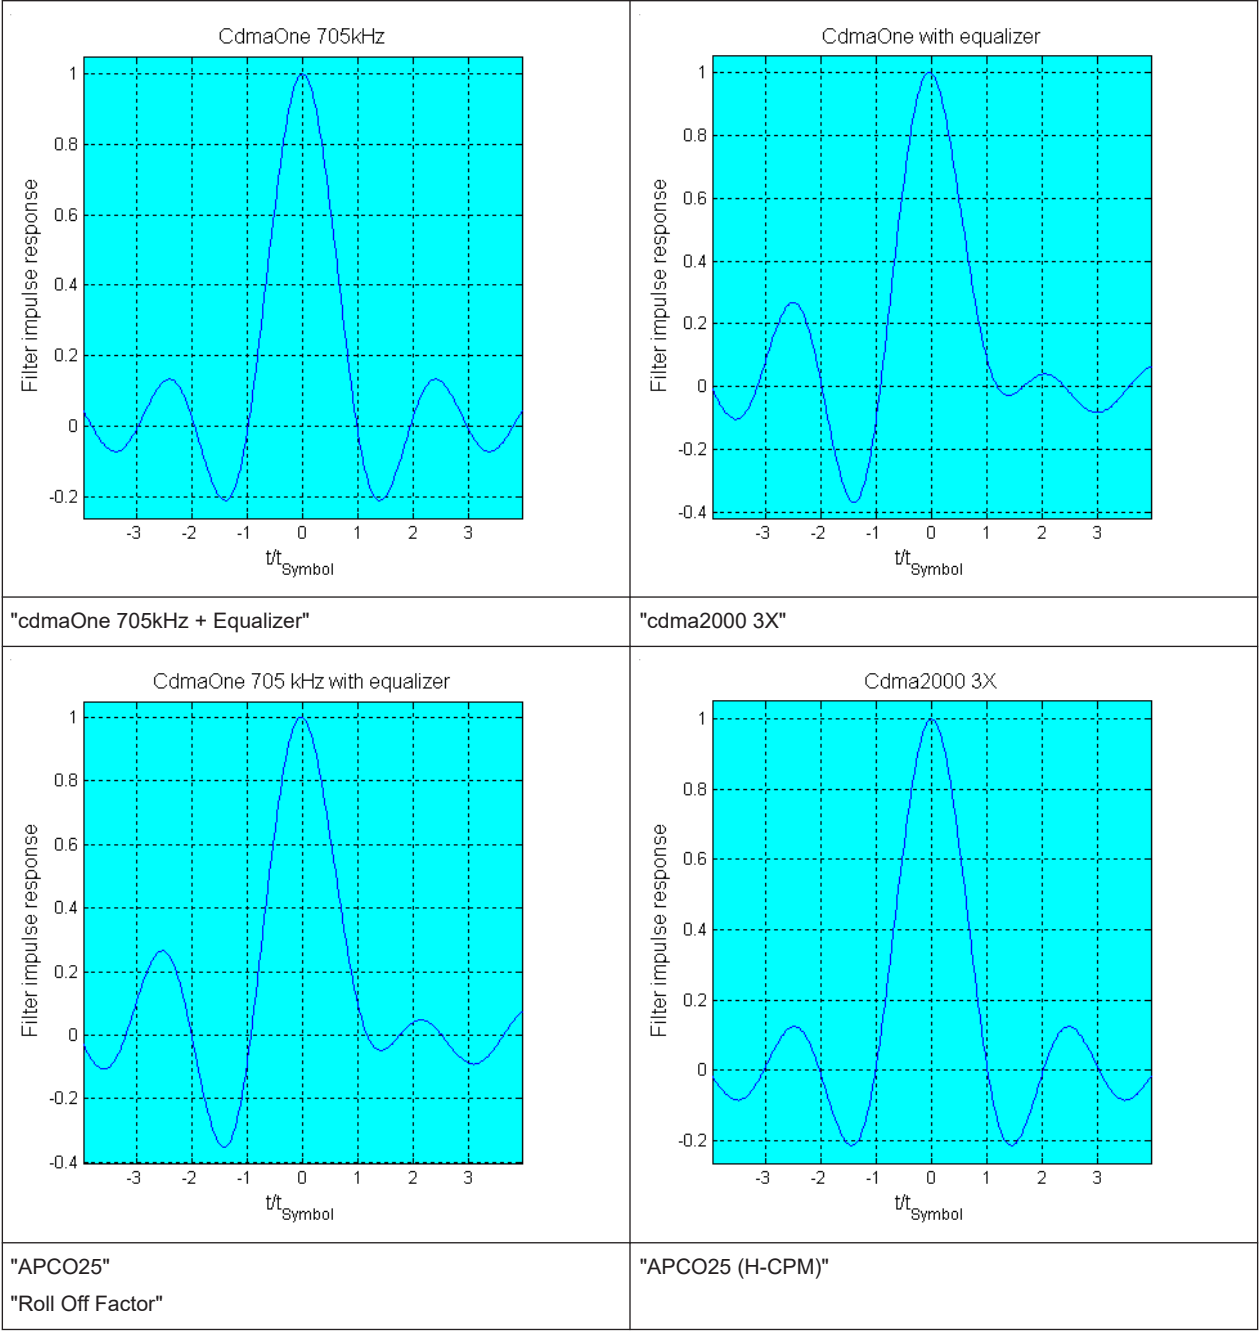
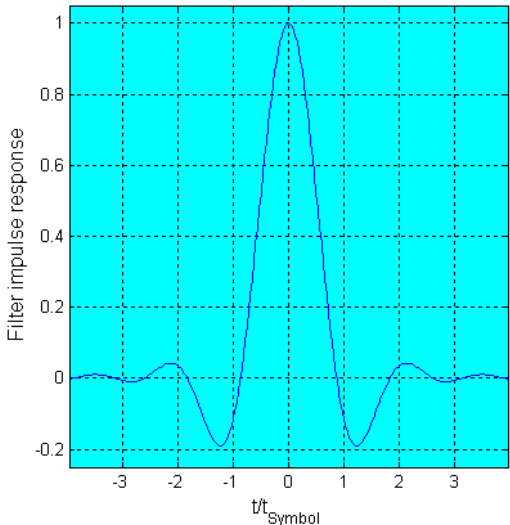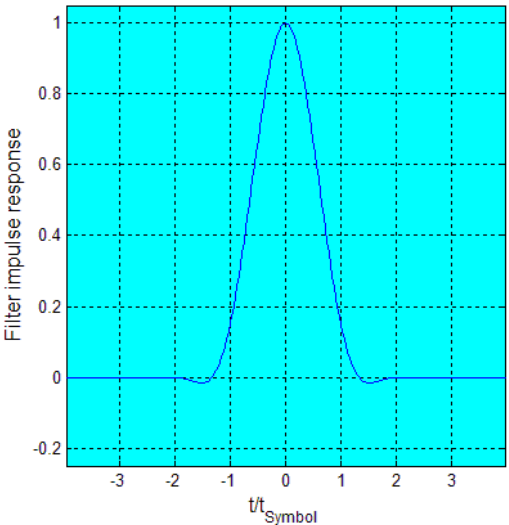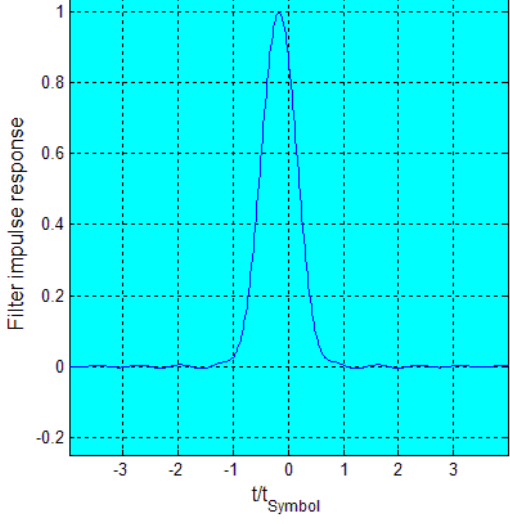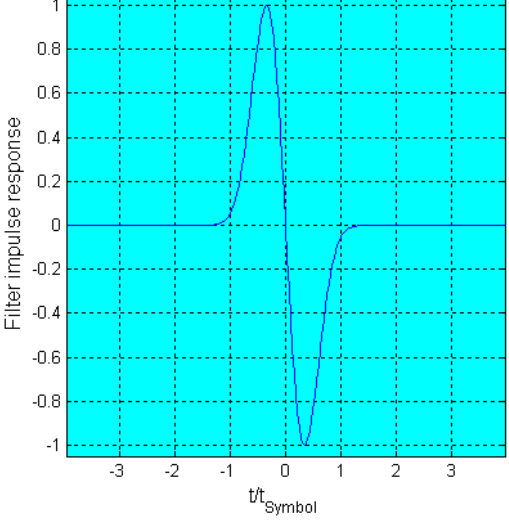
<p>APCO25 r=0.5</p> 	<p>APCO H-CPM</p> 
<p>"APCO25 (LSM)" "Gauss Cut Off Frequency" "Lowpass Cut Off Frequency"</p>	<p>"Split Phase" "B*T"</p>
<p>APCO LSM</p> 	<p>Splitphase BT=0.5</p> 
<p>"Rectangular"</p>	<p>"Dirac"</p>

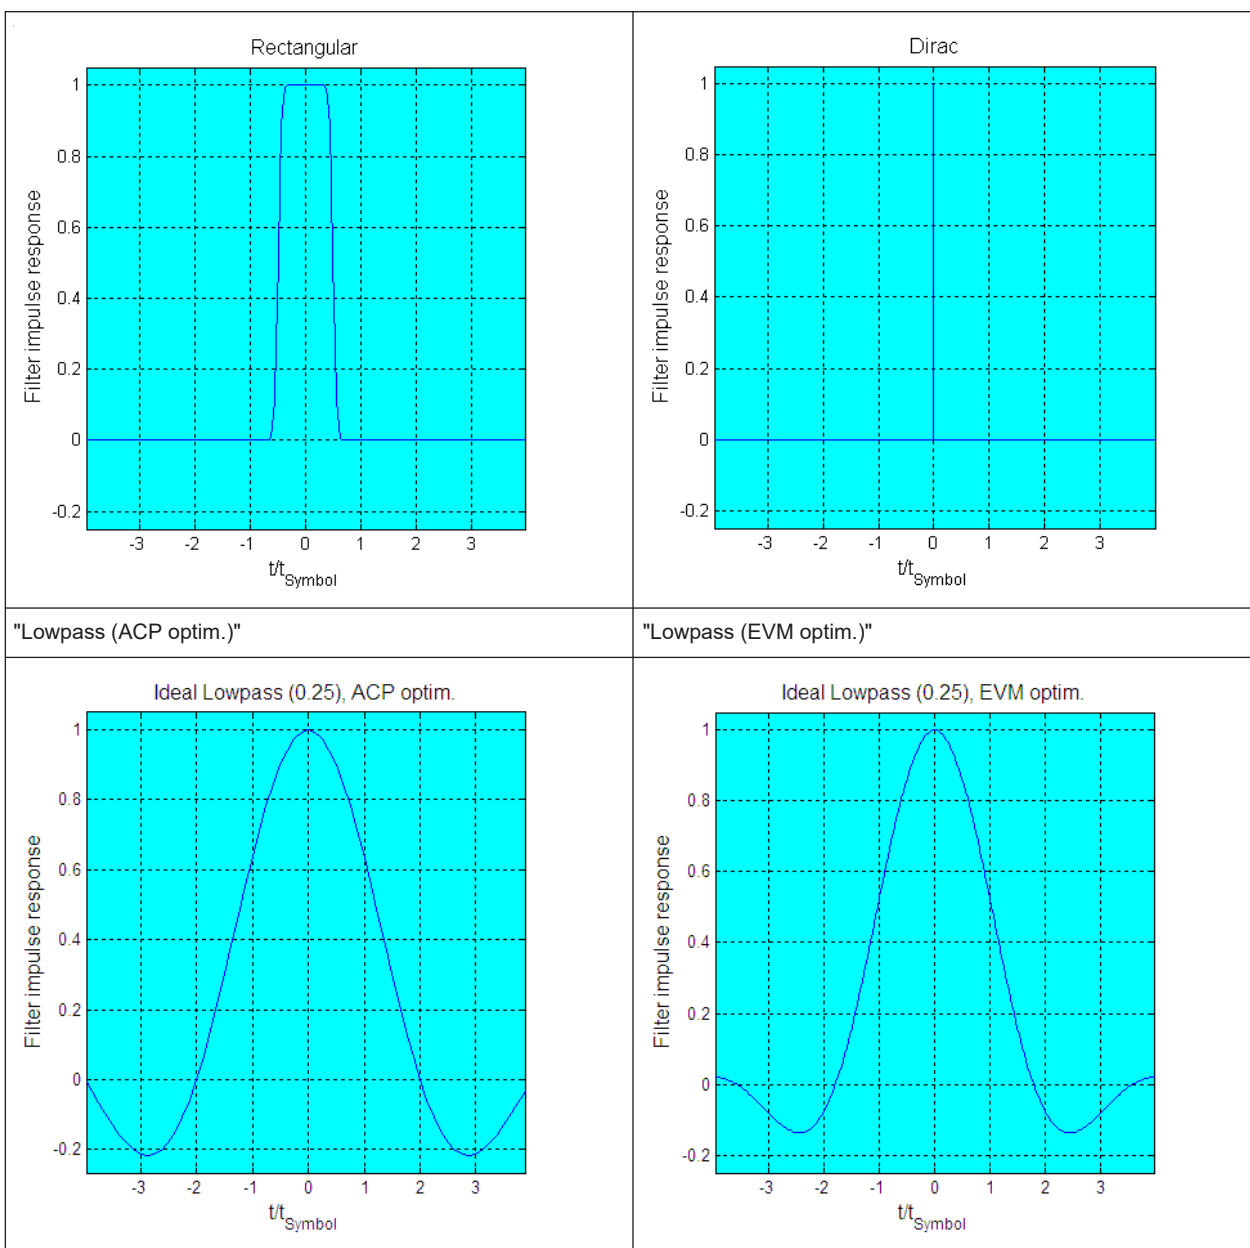

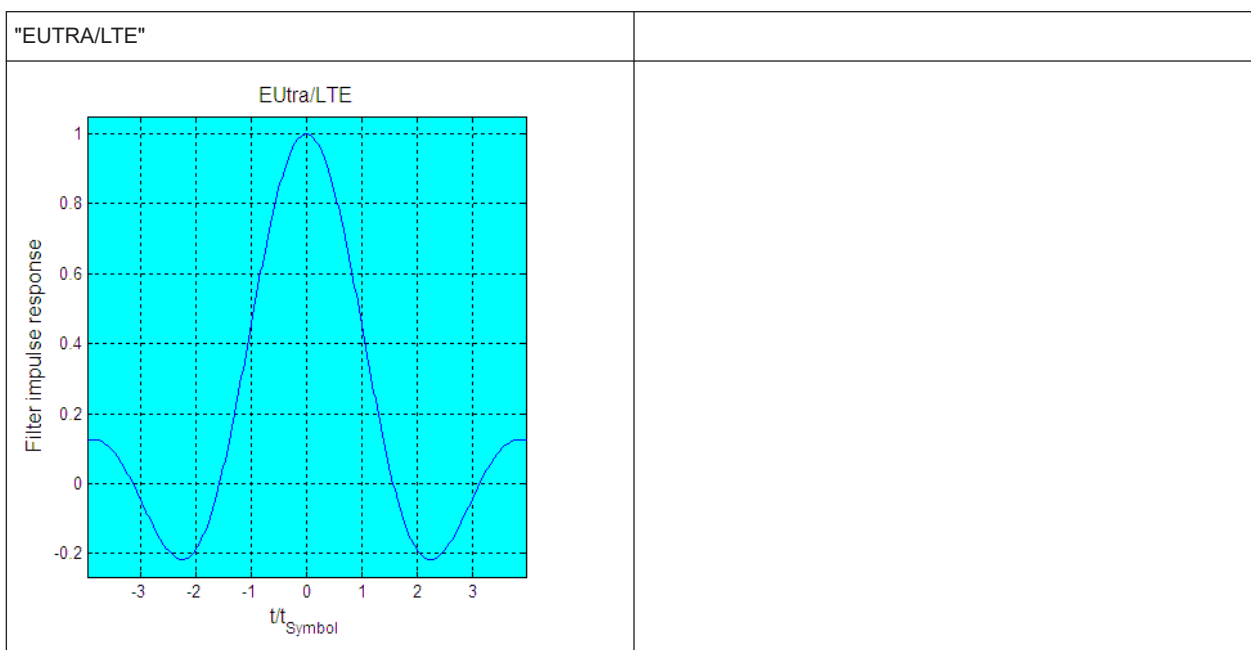

5.7 Using the arbitrary waveform generator (ARB)

The arbitrary waveform generator (ARB) is an I/Q modulation source of the R&S SMW. The ARB allows the playback and output of any externally calculated modulation signals in the form of waveform files. The ARB can also generate multi-carrier or multi-segment signals from the waveform files.

5.7.1 Required options

The equipment layout for processing of waveform files includes:

- Standard or wideband Baseband Generator (R&S SMW-B10/-B9) per signal path
Arbitrary waveform generator is incorporated in the baseband generator
- Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or
Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
- Corresponding Digital Standard option (R&S SMW-K2xx) per signal path
Required to process a waveform file generated by the signal generation software R&S WinIQSIM2.
For example, if you purchase option Digital Standard EUTRA/LTE R&S SMW-K255, you can process EUTRA/LTE waveform files created by R&S WinIQSIM2.
- Corresponding R&S®Pulse Sequencer option
- Optional, ARB memory extension (R&S SMW-K511/-K512)

You can output waveform signals at several connectors. Dedicated connector output requires the following options:

- Output at the RF connector: RF frequency option (for example R&S SMW-B1003)

- Output at the DIG I/Q connectors: option digital baseband output (R&S SMW-K18) per signal path
- Output at the HS DIG I/Q connectors: option digital baseband connectivity (R&S SMW-K19)

For more information, see data sheet.

5.7.2 About ARB

This section provides background information on the ARB functionality and the impact of the provided settings.

For a description of the multi-carrier, multi-segment and multi-carrier continuous wave functions, refer to:

- [Chapter 5.11, "Generating multi-carrier signals"](#), on page 401
- [Chapter 5.10, "Generating multi-segment waveform files"](#), on page 371
- [Chapter 5.12, "Generating multi-carrier continuous wave signal"](#), on page 418

5.7.2.1 Waveform files sources

In ARB mode, the R&S SMW uses ARB waveform files to obtain the digital I/Q data of the baseband signal. The R&S SMW can play back any waveform file saved on a network drive but it can also generate and play back simple waveforms for test purposes.

What is a waveform?

A waveform is a file with specified file format containing raw IQ samples. The IQ values are calculated in advance and saved in waveform files with a predefined extension
*.wv.

When waveforms are created by the R&S SMW, the instrument inserts a waveform header at the beginning of each created ARB file. The header of the generated I/Q data files consists of "tags" which are enclosed in braces { }.

For detailed description on all available tags and for information on how to query them or to create waveforms manually, refer to [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347.

Waveform file sources

Depending on whether the R&S SMW creates the waveform files itself or not, the following waveform file sources can be distinguished:

- **Internally generated waveforms**

The ARB generator enables the calculation and the generation of multi-segment and multi-carrier waveform files. The ARB generator provides also a built-in function to create a test waveform (for example a sine or rectangle signal) and keep it as a file or in the RAM.

Several digital standards provide the special function "Generate Waveform File". With this function, the calculated signals are saved as a waveform file that you can play back using the ARB generator.

- **Externally generated or created waveforms**

The ARB generator processes externally created waveform files, for example:

- The *waveform files generated* by the software R&S WinIQSIM2, the R&S ARB Toolbox, the R&S Pulse Sequencer
- *Signals calculated* using a mathematical program such as MATLAB.
See [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347.

Irrespective of the way they are created, you can load the externally generated waveform files into the instrument via one of the available interfaces, for example, USB or LAN. Usually, the waveform file is saved on one of the network drives which are accessible for the operating system.

Related settings

See:

- [Chapter 5.7.3, "ARB settings"](#), on page 320

Related step-by-step descriptions


See:

- [Chapter 5.7.4, "Playing waveform files"](#), on page 331
- [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343
- [Chapter 5.7.4.5, "Creating waveforms with tag file format"](#), on page 338
- [Chapter 5.7.4.7, "Creating control lists with tag file format"](#), on page 344
- [Chapter 5.7.4.8, "Creating data lists with tag file format"](#), on page 346
- [Chapter 5.7.4.9, "Editing waveform files, data and control lists"](#), on page 347

5.7.2.2 ARB test signals


The following test signals are available:

- **"Sine" test signal:** Two sinewave signals with a selectable (but equal) number of samples per period and equal frequencies. When the generation is triggered, the number of samples per period, together with the frequency of the test signal, determine the ARB clock frequency: "Clock Frequency" = "Frequency" * "Samples per Period".
Note: Because the resulting clock rate must not exceed the maximum ARB clock rate (see data sheet), the number of sample values is automatically restricted depending on the selected frequency.
The first sine signal is mapped on the I samples, the second on the Q samples. The two signals differ by a selectable phase offset. For a –90 deg offset, the result is a unit vector in the I/Q plane, rotating counter-clockwise and starting at I = 0, Q = –1. For a 0 deg offset, the I and Q samples are on the diagonal of a unit square (I(t) = Q(t)).

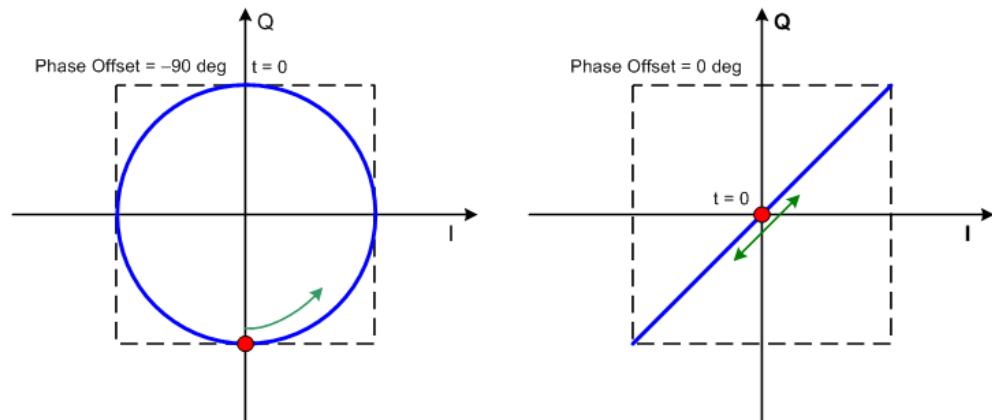

In general, the I/Q samples are located on a deformed circle which is confined to the dashed square in the upper diagrams.

- "Rect" test signal:** Rectangle signal with selectable but equal On and Off periods and amplitude. The period is defined by the selected frequency: $\text{<Period>} = 1 / \text{"Frequency"}$.
 The signal is mapped on both the I and Q samples. The mapping results in two distinct points in the I/Q plane. The "Offset DC" shifts both points along the diagonal $I(t) = Q(t)$.

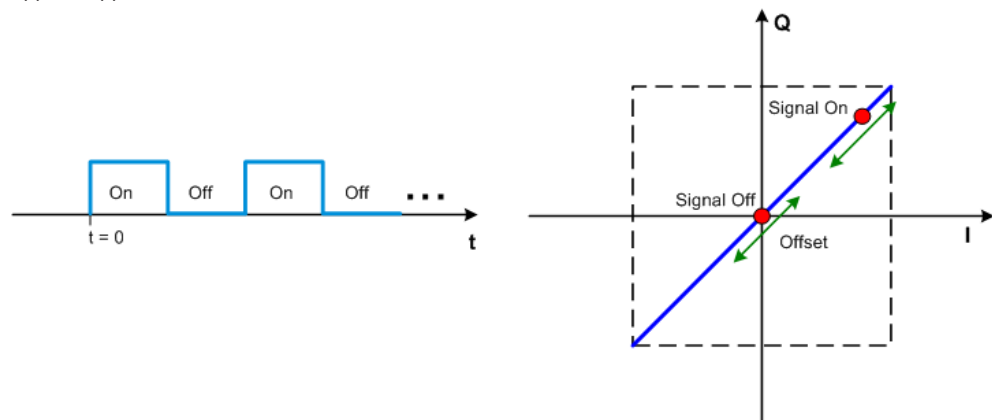

- "Const I/Q" test signal:** Continuous test signal with constant IQ and constant clock frequency of 10 kHz. The values for each I and Q components are selectable but constant. They are defined as a decimal number, which is decimal-to-binary converted internally. The signal is provided as a 16-bit wide digital signal for both I and Q channels.
 You can output the signal directly at the BNC connectors I and Q outputs of the instrument.
- "AWGN" test signal:** Requires option R&S SMW-K811. Test signal comprising a noise signal. The 3 dB noise bandwidth is about 0.96 times the clock frequency. See also [Chapter 5.8.4, "AWGN test signal"](#), on page 369.

5.7.2.3 Waveform sample rate

The Arbitrary Waveform Generator includes a resampling unit that interpolates the input samples to target a certain digital output I/Q sample rate. The input sample rate

f_{input} is retrieved from the waveform (the default sample rate tag) or is defined by the corresponding parameter in the ARB user interface.

The Figure 5-16 depicts the stages involved in the processing and resampling of a waveform in the ARB.

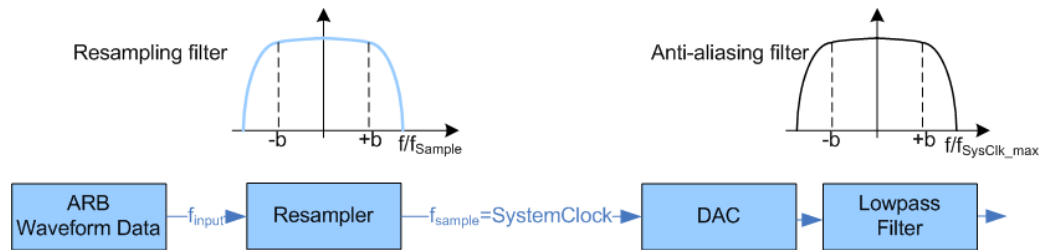


Figure 5-16: Processing of the waveform files in the ARB

f_{input} = Waveform sample rate
 b = Usable bandwidth factor
 f_{SysClk_max} = $SystemClock_{max}$ = $SampleRate_{max}$

Where:

- f_{SysClk_max} = $SystemClock_{max}$ = $SampleRate_{max}$ = 200 MHz (R&S SMW-B10/-K522) and 2.4 GHz (R&S SMW-B9/-K527)
- $b = 0.4$ (R&S SMW-B10) and $b = 0.4165$ (R&S SMW-B9)

Impact of the resampling filter

As illustrated in Figure 5-16, the filter in the resampling stage is distortion-free for signals with the following maximum baseband bandwidth:

$$Usable_Bandwidth_{max} [MHz] = b * f_{input}$$

Where b is the usable bandwidth factor and its value depends on the installed options:

- $b = 0.4$ (R&S SMW-B10)
- $b = 0.4165$ (R&S SMW-B9)

An externally created waveform file has to provide a sample rate f_{input} that is high enough for perfect signal reconstruction. For distortion-free resampling the lower bound of the required sample rate f_{input} is then calculated as follows:

$$f_{input} \geq Usable_Bandwidth / b$$

Thus, a modulation signal with a sample rate $f_{input} = 200$ MHz fed in the baseband generator ensures the $Usable_Bandwidth_{max}$. After the DAC, this signal features a $RF_Bandwidth_{max} = 2 * b * f_{input} = 2 * b * 200 \text{ MHz} = 160 \text{ MHz}$.

Impact of the oversampling factor

Waveforms generated by the R&S WinIQSIM2 software can be optimized by choosing a suitable integer oversampling factor.

Conventional ARB generators often assume oversampling factors of 4. The ARB generator of the R&S SMW requires low oversampling factors and still provides excellent signal quality in terms of EVM and ACP.

A reduced sample rate saves significantly the amount of memory or allows an increased signal cycle time, and vice versa.

5.7.2.4 Marker signals and waveform length

The R&S SMW provides the possibility to define marker signals that are sent to the marker outputs in synchronicity with the I/Q output signals. Marker signals can be either predefined or later defined.

The I/Q data and marker data are located in separate memory areas of the SDRAM and can be independently configured. Each marker signal requires 1 bit of the available memory size. Sometimes, it is useful to generate a modulation signal without extra marker signals to increase the maximum waveform length.

The following example explains the dependency between the number of enabled marker signals, the available memory size, and the resulting waveform length.

Example: Calculating the maximum waveform length

The calculation assumes a R&S SMW with an ARB memory of 64 Msample, see [Chapter 5.7.1, "Required options"](#), on page 315.

- Total memory size = 256 Mbyte
- Required memory size (per complex sample) = 32 bit + 3 bit = 35 bit = 4.375 byte, where:
 - The raw I/Q samples are 16-bit values. For the length of I/Q data that is:
 $2 \times 16 \text{ bit} = 32 \text{ bit}$ (16 bit per I/Q channel)
 - Each marker requires one bit. Three enabled markers require 3 bit.
- Maximum waveform length (with 3 markers) = 256 Mbyte / 4.375 byte = 58 Msample
- Theoretical maximum waveform length (no markers) = 256 Mbyte / 4 byte = 64 Msample

Hence, a memory size of 256 Mbyte yields a maximum waveform length of 58 Msample, if three markers are enabled. The maximum waveform length increases to 64 Msample, if the internal hardware markers are used, and the complete memory is available for I/Q data.

The minimum length of a waveform is 512 samples. A waveform shorter than this value is automatically repeated until it reaches the minimum length.

5.7.3 ARB settings

Access:

- Select "Baseband" > "ARB".

The "ARB" dialog enables direct selection of the waveform file to be processed, the selection of a test signal or access to the multi-segment and multi-carrier settings.

If the current instrument configuration uses [Coupled sources](#), you can assign waveforms to all available basebands.

The dialog is divided into several tabs. In each case, the current setting is displayed in the tab name.

The remote commands required to define these settings are described in [Chapter 14.19.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 1095.

Settings:

• ARB general settings	321
• Sine test signals	326
• Rectangular test signal	327
• Constant IQ test signal	329
• Trigger, marker and clock settings	330

5.7.3.1 ARB general settings


Access:

- Select "Baseband" > "ARB".

This tab provides access to the default ARB settings, selecting a waveform file and enabling the ARB generator.

Further settings depend on selected "System Configuration" and waveform type:

- If a single segment waveform is used, the tab provides also settings for configuring the test signal and access to the settings for calculating a multi-segment or a multi-carrier waveform.
- If a multi-segment waveform is loaded, the tab expands and displays the dedicated section "Multi Segment Waveform Options".

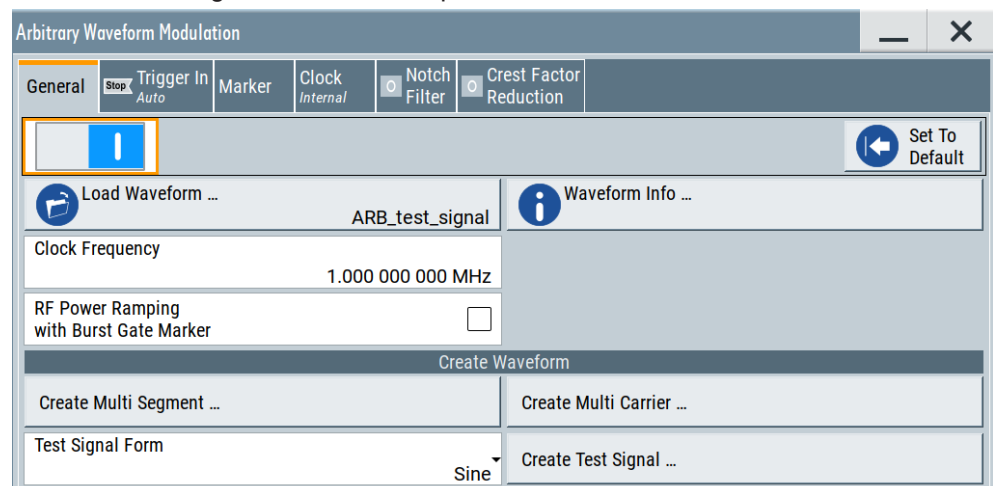

This section comprises the settings necessary to configure the segment to be output and adjust the trigger for the switch between the segments of the multi-segment waveform. The parameters displayed depend on the selected trigger source.

The provided parameters are identical with the parameters in the section "Next Segment Trigger In" in the "Trigger" tab; for information see [Chapter 5.10.3.5, "Multi-segment waveform trigger settings"](#), on page 389.

- If the current instrument configuration uses [Coupled sources](#), the dialog displays a table with up to 8 rows, where the number of rows corresponds to the number of selected [BB Signals \(Tx Antennas\)](#) or [Entities \(Users, Cells\)](#).

	Clock Frequency /MHz	Delay /µs	File	Info
BB A	8.666 666 667	0.000 0		/var/user/gsm.wv Info...
BB B	0.100 000 000	20.000 0		/var/user/interferer.wv Info...
BB C	30.720 000 000	0.000 0		/var/user/lte.wv Info...
BB D	11.520 000 000	0.000 0		/var/user/wcdma.wv Info...

Settings:

State.....	322
Set To Default.....	323
Use one Waveform for all basebands.....	323
Waveforms table.....	323
Load Waveform/File.....	324
Waveform Info.....	324
Clock Frequency.....	324
Delay.....	325
RF Power Ramping with Burst Marker.....	325
Create Multi Segment.....	325
Create Multi Carrier.....	325
Test Signal Form.....	325
Create Test Signal.....	325

State

Enables/disables ARB modulation. Switching on the ARB generator turns off all the other digital standards and digital modulation types in the same signal path.

The output is based on the waveform file that is loaded. The name of the waveform file is displayed next to "Load Waveform". When a multi-segment waveform is loaded, the display expands and lists more settings, grouped in the "Multi Segment Waveform Options" section.

Note: ARB generator cannot be activated.

You cannot activate the ARB generator in the following cases:

- **No or empty waveform file**

By default, no waveform file is loaded. The "Load Waveform" button displays "None".

Remedy: Select a waveform file, before activating the ARB generator.

- **Missing burst gate marker in the waveform**

The "RF Power Ramping with Burst Gate Marker" state is "On" and the loaded ARB waveform does not contain a control list or the burst gate marker is not defined. An error message indicates the message above.

Remedy: Define a burst gate marker in your waveform file.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:STATe` on page 1105

Set To Default

Calls default settings, see [Table 5-19](#).

Table 5-19: ARB default settings

Parameter	Value
State	Off
Clock Frequency	1 MHz
Trigger Mode	Auto
Trigger Source	Internal
Marker State	Off
Marker Mode	Unchanged
Clock Source	Internal

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:PRESet` on page 1105

Use one Waveform for all basebands

If the current instrument configuration uses [Coupled sources](#), you can:

- Assign different waveforms to the available basebands ("BB A to H")
- Use the same waveform for all basebands ("BB All");
the waveform selected for the first baseband ("BB A") is used.

To select the waveforms, use the parameter [File](#).

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:COUPled:STATe` on page 1114

Waveforms table

If the current instrument configuration uses [Coupled sources](#), the dialog displays a table with of up to 8 rows, where the number of rows corresponds to the number of selected [BB Signals \(Tx Antennas\)](#) or [Entities \(Users, Cells\)](#).

The waveforms table consists of one row only, if the parameter [Use one Waveform for all basebands](#) is enabled.

Following parameters are available per baseband:

- [Clock Frequency](#)
- [Delay](#)

- [File](#)
- [Waveform Info](#)

Load Waveform/File

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

The waveform files are files with predefined file extension *.wv. If you select a file, the dialog displays short information about the selected waveform.


Activate the ARB generator to trigger the instrument to load and process the selected waveform file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WAVEform:SElect` on page 1111

Waveform Info

Opens a dialog with detailed information about the currently selected waveform. The display depends on whether the selected waveform file is a multisegment one or not. All parameters are read-only.

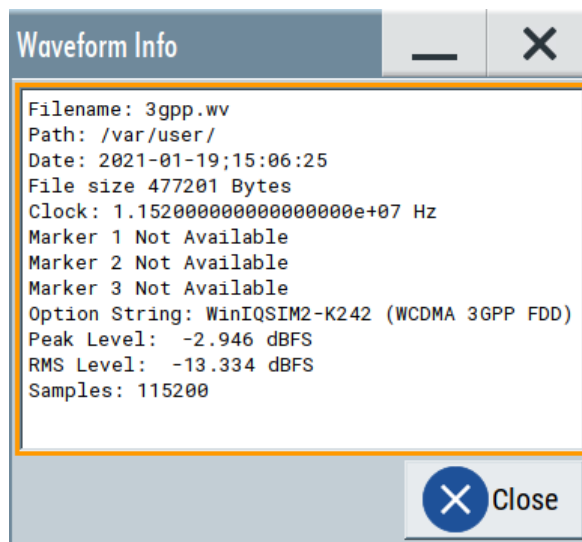

Remote command:

n.a.

For non-multi segment waveform files, use the `Tag` commands. See [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347.

Clock Frequency

Displays or sets the ARB output clock rate.

The value of this parameter is set to the clock rate defined in the loaded waveform file (`{CLOCK}` tag). The value can be changed afterwards.

Note: The clock frequency must match the value of the externally applied clock source.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:CLOCK` on page 1113

Delay

When [Coupled sources](#) are used, all basebands are triggered with a common trigger signal.

Enable a time delay to delay the waveform processing of a particular baseband.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:COUPled:TRIGger:DELay:OFFSet`
on page 1114

RF Power Ramping with Burst Marker

Option: R&S SMW-K22

If activated, the burst gate marker signal included in the ARB waveform file is used as marker signal for the pulse modulator.

If this parameter is activated, but the loaded ARB waveform does not contain control list or the burst gate marker is not defined, the ARB generator cannot be activated. An error message indicates this situation, too.

You can create the suitable waveform files including the required burst gate marker signals, for example, with the R&S Pulse Sequencer software.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:PRAMP [:STATe]` on page 1106

Create Multi Segment

Accesses the dialog for creating multi-segment waveforms (see [Chapter 5.10, "Generating multi-segment waveform files"](#), on page 371).

Create Multi Carrier

Accesses the dialog for creating multi-carrier waveforms (see [Chapter 5.11, "Generating multi-carrier signals"](#), on page 401).

Test Signal Form

Selects the form of the test signal. A choice between a sinusoidal, rectangular, AWGN or test signal with constant I/Q is provided.

To access further settings, select [Create Test Signal](#).

"AWGN" Requires R&S SMW-K811, see [Chapter 5.8.4, "AWGN test signal"](#), on page 369.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:SIGNAL:TYPE` on page 1106

Create Test Signal


Opens the dialog with further setting for the selected [Test Signal Form](#), see:

- [Chapter 5.7.3.2, "Sine test signals"](#), on page 326
- [Chapter 5.7.3.3, "Rectangular test signal"](#), on page 327
- [Chapter 5.7.3.4, "Constant IQ test signal"](#), on page 329
- [Chapter 5.8.4, "AWGN test signal"](#), on page 369

5.7.3.2 Sine test signals

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Sine".
3. Select "Create Test Signal".

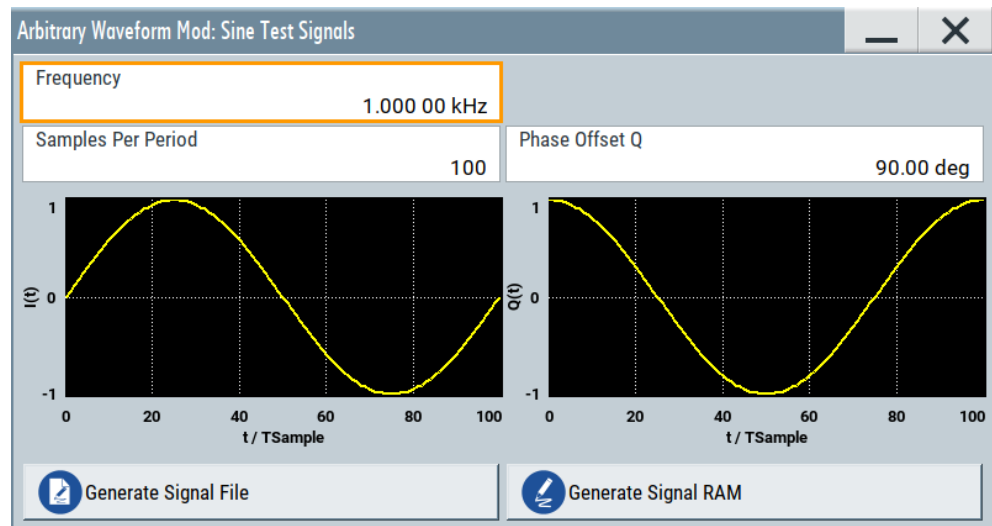

This dialog provides settings to configure a sinusoidal test signal. A sine wave is generated on the I path, and a sine wave of the same frequency but phase-shifted is generated on the Q path. For more information, refer to [Chapter 5.7.2.2, "ARB test signals"](#), on page 317.

The dialog displays the characteristic of the currently selected signal.

Settings:

Frequency.....	326
Samples per Period.....	326
Phase Offset Q.....	327
Generate Signal File.....	327
Generate Signal RAM.....	327

Frequency

Enters the frequency of the test signal.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGNAL:SINE:FREQUENCY` on page 1108

Samples per Period

Enters the number of sample values required from the sine wave per period.

The maximum allowed value is determined by the maximum ARB clock rate (see data sheet) and the selected frequency.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:TSIGnal:SINE:SAMPles` on page 1109

Phase Offset Q

Enters the phase offset of the sine-wave signal on the Q channel relative to the sine-wave signal on the I channel.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:TSIGnal:SINE:PHASE` on page 1108

Generate Signal File

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:TSIGnal:SINE:CREate:NAMed` on page 1109

Generate Signal RAM

Generates a signal and uses this signal as output straight away. The instrument saves the file using a predefined filename.


Remote command:

`[:SOURce<hw>] :BB:ARBitrary:TSIGnal:SINE:CREate` on page 1109

5.7.3.3 Rectangular test signal

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Rect".
3. Select "Create Test Signal".

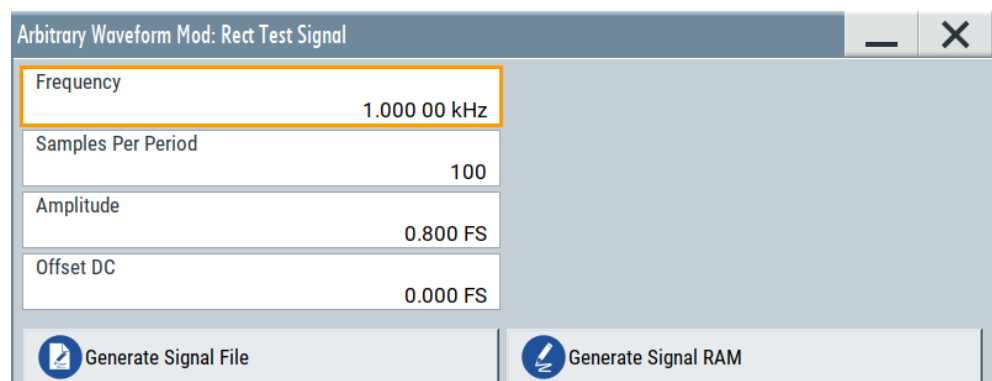

This dialog provides settings to configure a rectangular test signal. A rectangular test signal with a duty factor of 0.5 is created. Amplitude and offset are adjustable. Both paths, I and Q, use the same signal.

For more information, refer to [Chapter 5.7.2.2, "ARB test signals"](#), on page 317.

Settings:

Frequency.....	328
Samples per Period.....	328
Amplitude.....	328
Offset DC.....	328
Generate Signal File.....	328
Generate Signal RAM.....	328

Frequency

Enters the frequency of the test signal.

Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:RECTangle:FREQuency` on page 1107

Samples per Period

Enters the number of sample values required for the rectangular signal per period.

The maximum allowed value is determined by the maximum ARB clock rate (see data sheet) and the selected frequency.

Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:RECTangle:SAMPles` on page 1108

Amplitude

Enters the digital amplitude of the rectangular wave. The abbreviation FS means full-scale.

Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:RECTangle:AMPLitude` on page 1107

Offset DC

Enters a DC component.

Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:RECTangle:OFFSet` on page 1107

Generate Signal File

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:RECTangle:CREate:NAMed`
on page 1109

Generate Signal RAM

Generates a signal and uses it as outputs straight away. The instrument saves the file using a predefined filename.


Remote command:

`[:SOURce<hw>] :BB:ARBitary:TSIGnal:SINE:CREate` on page 1109

5.7.3.4 Constant IQ test signal

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Const IQ".
3. Select "Create Test Signal".

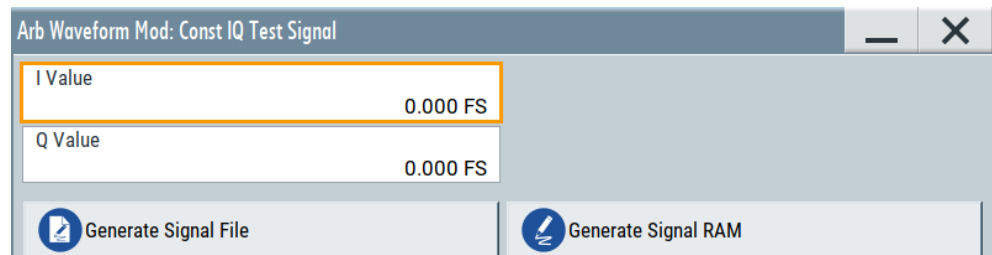

This dialog provides settings to configure a continuous test signal with constant IQ. The I and Q values for each path are adjustable but constant. For more information, refer to [Chapter 5.7.2.2, "ARB test signals"](#), on page 317.

If converted to an analog signal, the signal is output directly at the I and Q connectors of the instrument.

Settings:

I Value, Q Value.....	329
Generate Signal File.....	329
Generate Signal RAM.....	329

I Value, Q Value

Enters the value for the I respectively Q component of the test signal.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:I` on page 1107

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:Q` on page 1107

Generate Signal File

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed` on page 1109

Generate Signal RAM

Generates a signal and uses this signal as output straight away. The instrument saves the file using a predefined filename.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:CREate` on page 1109

5.7.3.5 Trigger, marker and clock settings

These tabs provide standard settings.

For detailed description, see:

- [Chapter 5.5.2.1, "Trigger settings"](#), on page 262
- [Chapter 5.5.2.2, "Marker settings"](#), on page 268
- [Chapter 5.5.2.3, "Clock settings"](#), on page 269
- [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271

The following settings are specific to the ARB dialog.

Processing Time	330
Marker Mode	330
Delay (Time)	331

Processing Time

Displays the internal processing time.

The processing time is the elapsed time between the input of the external trigger event and the output of the baseband signal. An additional delay applies to the RF signal with respect to the baseband signal depending on the RF frequency. For more information, see ["Starting the signal generation with the first sample"](#) on page 250.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:PTIME?](#) on page 1144

Marker Mode

Basic marker configuration for up to three marker channels. The contents of the dialog change with the selected marker mode.

Use the settings to define the shape and periodicity of the markers. See [Regular marker output signals](#) for description of the regular marker signals.

Note: The marker trace in the waveform file remains unchanged in any case. It is not overwritten, even if something else than Unchanged has been selected.

The instrument routes the generated marker signals to the selected output connectors.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

"Unchanged" The marker signal remains unchanged as defined in the waveform file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE](#) on page 1147

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider](#)
on page 1148

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?](#)
on page 1149

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATtern](#) on page 1148

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime](#) on page 1147

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime](#) on page 1147

Delay (Time)

Shows the [marker delay](#) time in microseconds, milliseconds or seconds depending on the set marker delay.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DINSec?](#) on page 1149

5.7.4 Playing waveform files

This section provides step-by-step instructions to create, generate and play waveform files on the R&S SMW. For details on individual functions and settings, see [Chapter 5.7.3, "ARB settings"](#), on page 320.

Some test cases do not require a real-time generation of signal according to a digital standard. For these test cases, the replay of a previously generated waveform is sufficient. In such cases, you can generate the required test waveform file in one of the following ways:

- Internally,
 - With the built-in "Generate Waveform File" function, see [Chapter 5.7.4.2, "Using the function Generate Waveform"](#), on page 332
 - With the "Create ARB Test Signal" function, see [Chapter 5.7.4.1, "Generating ARB test signals"](#), on page 332
- Externally, for example:
 - With the free of charge software R&S WinIQSIM2, see [Chapter 5.7.4.4, "Working with R&S WinIQSIM2"](#), on page 333
 - With the software R&S ARB Toolbox
 - With the R&S SMW-K300/-K301 Pulse Sequencer software
 - Calculated using a mathematical program such as MATLAB, see [Chapter 5.7.4.5, "Creating waveforms with tag file format"](#), on page 338.

Provided the R&S SMW is equipped with the required option, you can load this waveform file and subsequent process it with the instrument.

This section provides examples on the internal waveform file generation and on the external generation with the R&S WinIQSIM2.

• Generating ARB test signals	332
• Using the function Generate Waveform	332
• Loading and playing waveform files	333
• Working with R&S WinIQSIM2	333
• Creating waveforms with tag file format	338
• Defining periodically repeating traces	343
• Creating control lists with tag file format	344
• Creating data lists with tag file format	346
• Editing waveform files, data and control lists	347

5.7.4.1 Generating ARB test signals

If your test case requires a simple sine or square test file, consider to use the provided ARB test signals.

To generate a sine test signal

1. Select "Baseband" > "ARB"
2. Select "Create Test Signal" > "Sine".
3. Adjust the "Sine Test Signal" settings as required.
4. Select "Generate Signal File".

A standard file-select dialog opens.

- a) Navigate to the directory, in that you want to save the file, for example /var/user/.
- b) Enter a filename, for example `sine_waveform`.
- c) Click "Save".

The R&S SMW saves the generated waveform file and automatically loads it in the ARB.

 
5. Select "ARB" > "State" > "On".

The R&S SMW processes the waveform file.

To create an AWGN test signal, see [Chapter 5.8.4, "AWGN test signal"](#), on page 369.

5.7.4.2 Using the function Generate Waveform

The general settings dialog of several digital standards provides the built-in function "Generate Waveform".



This function enables the calculation of the signal and saves the information in a waveform file. After saving, you can load the waveform file in the ARB generator.

To generate an EUTRA/LTE waveform file

1. Select "Baseband" > "EUTRA/LTE/IoT".
2. Adjust the settings as required, for example:
 - a) Select "Link Direction" > "Downlink".
 - b) Select a predefined test model, for example, "Test Models" > "E-TM1_1__10MHz".
3. Select "State" > "On".
4. Select "Generate Waveform".
A standard file-select dialog opens.

- a) Navigate to the directory, in that you want to save the file, for example `/var/user/`.
- b) Enter a filename, for example `lte_waveform`.
- c) Click "Save".

The R&S SMW saves the generated waveform file `lte_waveform.wv` in the selected directory `/var/user/`.

To process the waveform file, load it in the ARB, see [Chapter 5.7.4.3, "Loading and playing waveform files"](#), on page 333.

5.7.4.3 Loading and playing waveform files

Irrespective on the way a waveform file is generated, you can transfer it to the instrument, load it in the ARB and play it.

To load and play a waveform file

1. Transfer an externally created waveform file to the instrument.
See [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.
2. Select "Baseband" > "ARB".
3. Select "Load Waveform".
A standard file-select dialog opens.
 - a) Navigate to the directory, that the waveform file contains.
 - b) Select the waveform file, for example, `/var/user/lte_waveform`.
 - c) Click "Select".The "ARB" dialog confirms that the waveform file is loaded.
4. Select "ARB" > "State" > "On".

The R&S SMW processes the waveform file.

5.7.4.4 Working with R&S WinIQSIM2

The following example illustrates how to use R&S WinIQSIM2 simulation software to generate an EUTRA/LTE waveform and load it in the ARB of the R&S SMW.

The workflow consists of three main steps, each described in a separate step-by-step instruction:

- Configuring the connection between the R&S WinIQSIM2 and the R&S SMW
- Generating of a waveform file with the required settings
- Transferring the waveform file to and playing it with the R&S SMW.



This section does not describe the R&S WinIQSIM2 simulation software but focuses on the task-related settings. For a description of the simulation software, see the R&S WinIQSIM2 user manual.

To define the R&S SMW as destination instrument

In this example, we assume that the R&S WinIQSIM2 is installed on a remote controller. This remote controller is connected over LAN to the R&S SMW.


The general instrument settings of the destination instrument affect various functions, like, the maximum size of the file the waveform is saved in. We recommend that you configure the destination instrument before you generate the waveform with the R&S WinIQSIM2.

1. In the R&S WinIQSIM2, select "File" > "New" to preset the software.
2. In the block diagram, select "Vector Sig Gen" > "Instruments".

The "Configure Instruments" dialog opens. The list of configured instruments is empty.


3. Select "Configure Instruments" > "Scan".

The software scans the network for connected and active instruments.

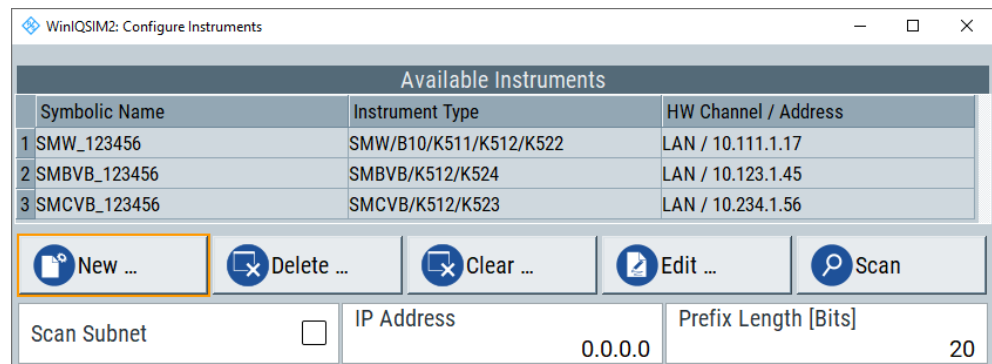


Alternatively, use the "New" function to add the R&S SMW manually to the list of instruments.

4. Close the dialog.
5. In the block diagram, select "Vector Sig Gen" block and select the R&S SMW from the list.

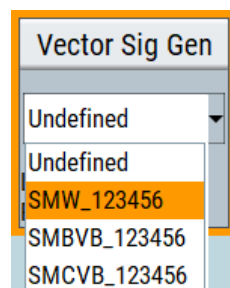


6. In the block diagram, select "ARB Sig Gen" block and select the R&S SMW from the list.

The two lines to the "Vector Sig Gen" and "ARB Sig Gen" blocks on the block diagram confirm that a remote connection to the R&S SMW is established.

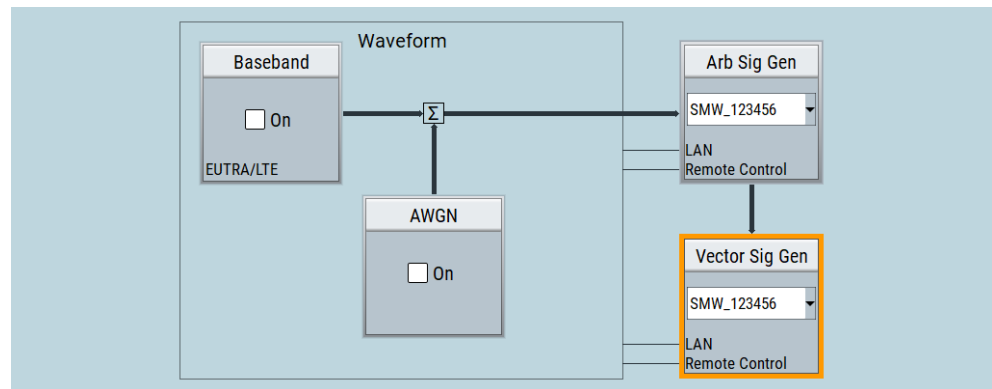


To generate a waveform file with R&S WinIQSIM2

1. In the block diagram of R&S WinIQSIM2, select "Baseband" > "EUTRA/LTE/IoT".
2. Adjust the settings as required, for example:
 - a) Select "Link Direction" > "Downlink (OFDMA)"
 - b) Select a predefined test model, for example, "Test Models" > "E-TM1_1__10MHz".
3. Select "EUTRA/LTE/IoT" > "State" > "On".

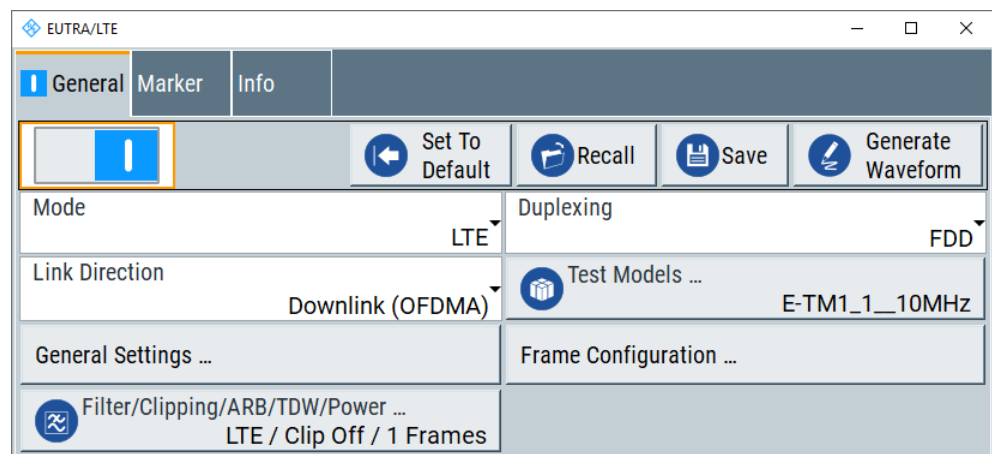


R&S WinIQSIM2 calculates the signal and displays important signal parameters, for example, number of samples "Samples" and "Sample Rate".

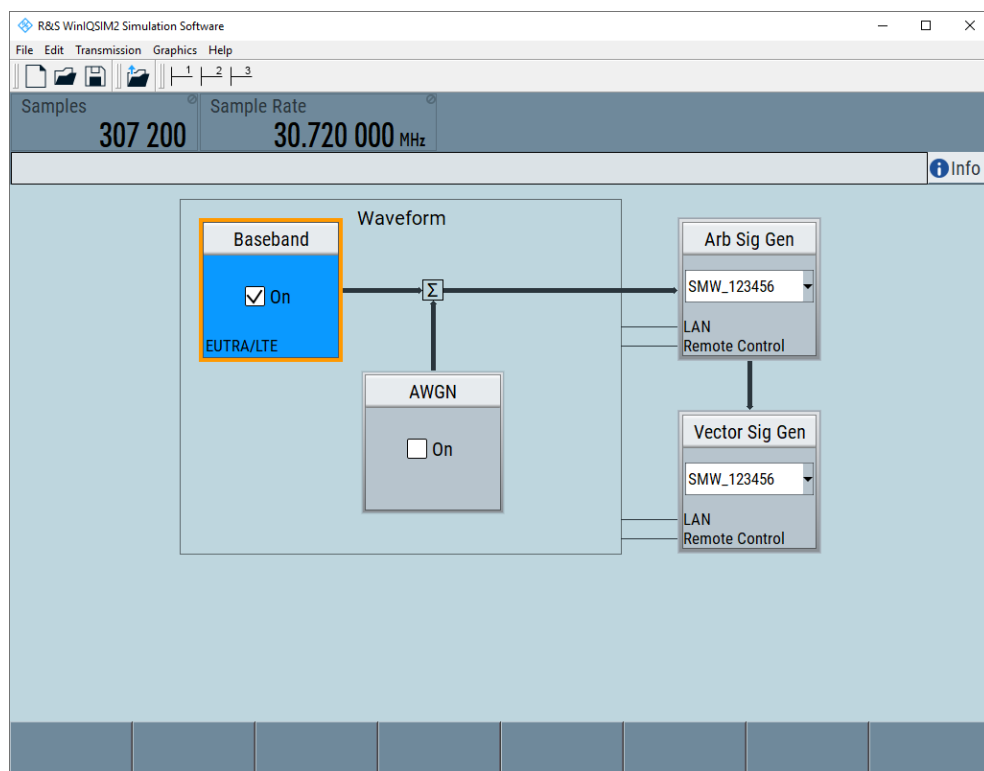




Select "Graphics" > "Graphic 1 (Complete)" to check for more information on the generated signal.

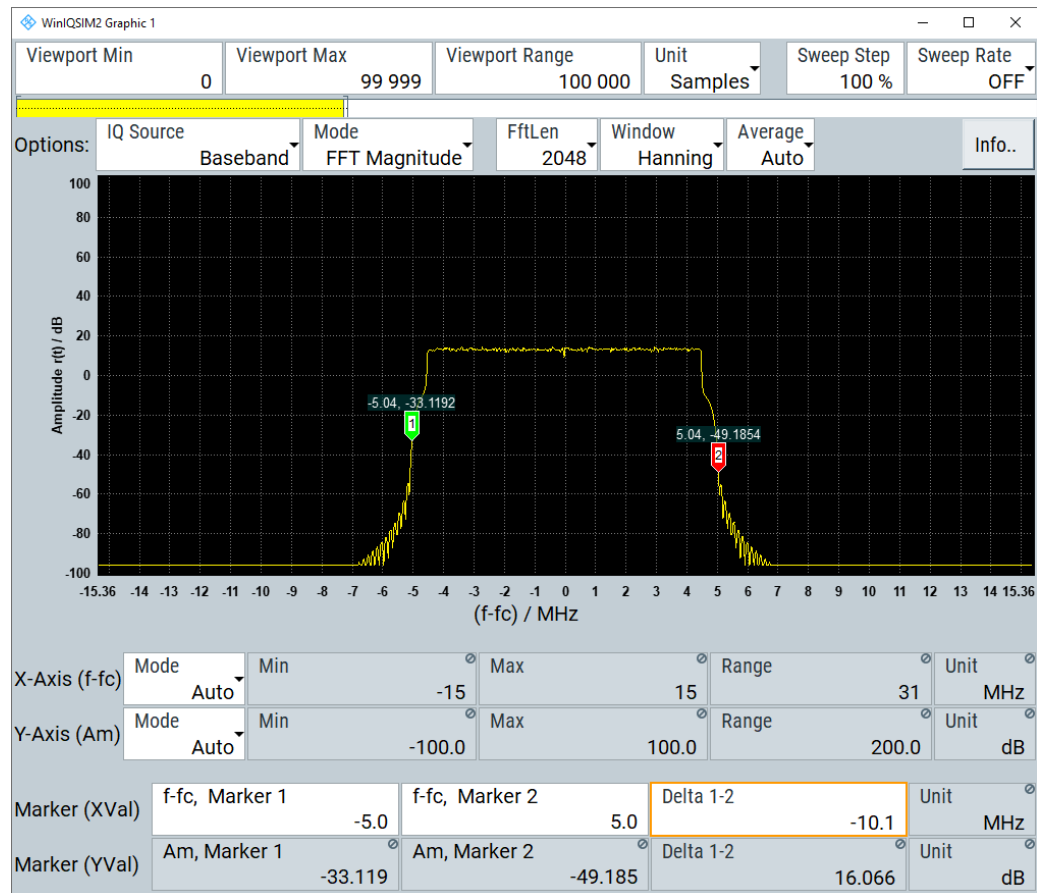

The display confirms the expected EUTRA/LTE 10 MHz spectrum.


To transfer the waveform file to the R&S SMW

1. At R&S WinIQSIM2, select "Transmission" > "Transmit".
2. In the "Waveform Transmission to Arbitrary Waveform Generator" dialog, proceed as follows:
 - a) "Transmit from" > "Internal (WinIQSIM2)".
 - b) "Transmit to" > "Instrument".
 - c) Select "File".
 - d) Define the filename of the transmitted file.
 - e) Activate "Automatically Load and Start Waveform".
 - f) Select the required baseband, for example, "Path A".
 - g) Add a comment to the waveform, for example, as follows:
"User Comment for File/Waveform" > "LTE_TM_1-10_WinIQSIM2_WV"
 - h) Select "Transmit".

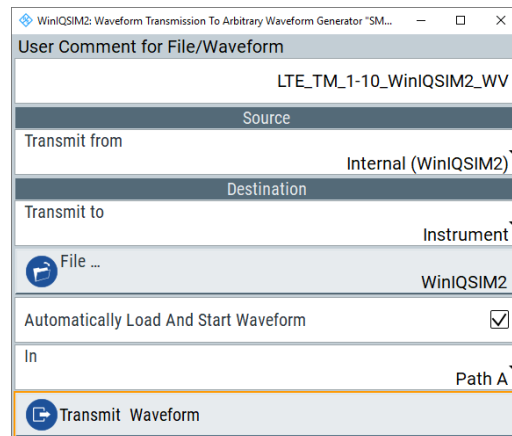

R&S WinIQSIM2 transmits the waveform to the default directory of the R&S SMW.

3. In the R&S SMW, select "Baseband" > "ARB".

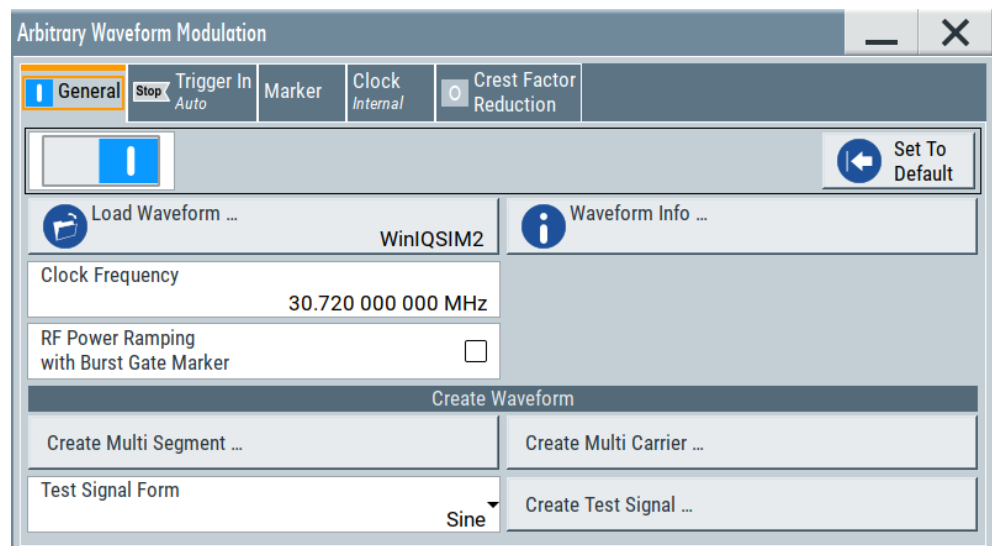

The dialog confirms that the ARB is active and plays the transmitted waveform.

5.7.4.5 Creating waveforms with tag file format

As described in [Chapter 5.7.2.1, "Waveform files sources"](#), on page 316, you can generate waveform files internally, with the built-in function, and externally. For description on how to generate waveform files internally, see [Chapter 5.7.4.2, "Using the function Generate Waveform"](#), on page 332. This section provides an example of how to create a waveform externally. The waveform file is created manually; the tag-oriented file format is used.

The provided example uses a sine function in the I channel and a cosine function in the Q channel, each with 20 points. The example uses a short program written in the programming language C to calculate the sine and cosine values (see [Example "C-program for creating a waveform file"](#) on page 341). They are saved in the file `SICO.txt`. The decimal values in `SICO.txt` are normalized such that they are between -1.0 and 1.0 .

+1.0. The data is converted into binary format. The appropriate mandatory tags are added and the data is packed into the `WAVEFORM` tag. As result, the waveform file `SICO.wv` is generated.

This example follows the general principle of creating of a waveform manually, using the tag file format. The [Figure 5-17](#) illustrates this general workflow.

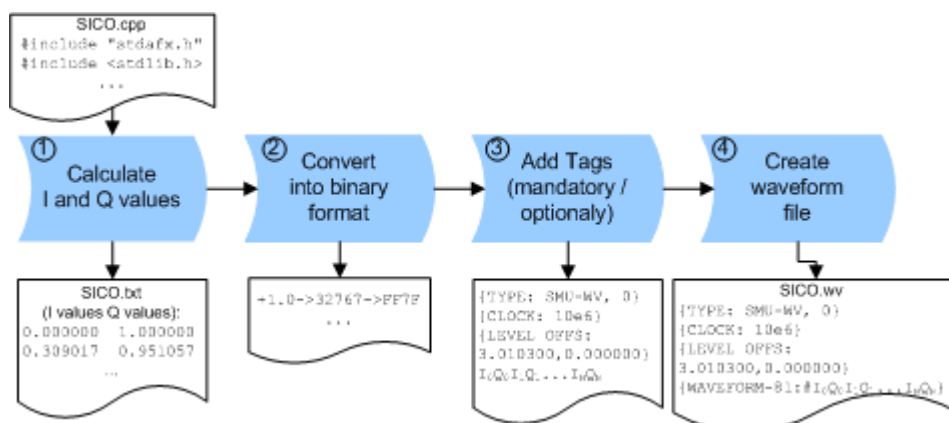


Figure 5-17: Principle of creating a waveform manually

The following steps outline how to create the waveform file `SICO.wv`:

1. Calculate the sine and cosine values. For example, use the `SICO.cpp` program.

The result is saved in the file `SICO.txt`.

```

0.000000 1.000000
0.309017 0.951057
0.587785 0.809017
0.809017 0.587785
0.951057 0.309017
1.000000 -0.000000
0.951057 -0.309017
0.809017 -0.587785
0.587785 -0.809017
0.309017 -0.951057
-0.000000 -1.000000
-0.309017 -0.951056
-0.587785 -0.809017
-0.809017 -0.587785
-0.951056 -0.309017
-1.000000 0.000000
-0.951056 0.309017
-0.809017 0.587785
-0.587785 0.809017
-0.309017 0.951057
  
```

Figure 5-18: Contents of `SICO.txt`: first column Sine (I), second column Cosine (Q)

- Convert the values from the file `SICO.txt` into binary format consisting of 16-bit signed integer numbers. The numeric range between -1.0 and $+1.0$ corresponds to the modulation range of the waveform 16-bit D/A converter of -32767 to $+32767$.

$+1.0 \rightarrow 32767 \rightarrow 0x7FFF$

$0.0 \rightarrow 0 \rightarrow 0x0000$

$-1.0 \rightarrow -32767 \rightarrow 0x8001$

The [Figure 5-19](#) shows the calculation and conversion steps. The highlighted columns contain the resulting I and Q values represented in Little endian format.

Sample n	deg $= 360^\circ/20 * n$	$I = \sin(\text{deg})$	$I_{\text{quant,dec}} = I * FS$ $= I * (2^{15}-1)$	$I_{\text{quant,hex}}$	$I_{\text{quant,hex}}$ (little-endian waveform file representation)	$Q = \cos(\text{deg})$	$Q_{\text{quant,dec}} = Q * FS$ $= Q * (2^{15}-1)$	$Q_{\text{quant,hex}}$	$Q_{\text{quant,hex}}$ (little-endian waveform file representation)
0	0	0.000000	0	0000	0000 I_0	1.000000	32767	7FFF	FF7F Q_0
1	18	0.309017	10126	278E	8E27	0.951057	31163	79BB	BB79
2	36	0.587785	19260	4B3C	3C4B	0.809017	26509	678D	8D67
3	54	0.809017	26509	678D	8D67	0.587785	19260	4B3C	3C4B
4	72	0.951057	31163	79BB	BB79	0.309017	10126	278E	8E27
5	90	1.000000	32767	7FFF	FF7F	0.000000	0	0000	0000
6	108	0.951057	31163	79BB	BB79	-0.309017	-10126	D872	72D8
7	126	0.809017	26509	678D	8D67	-0.587785	-19260	B4C4	C4B4
8	144	0.587785	19260	4B3C	3C4B	-0.809017	-26509	9873	7398
9	162	0.309017	10126	278E	8E27	-0.951057	-31163	8645	4586
10	180	0.000000	0	0000	0000	-1.000000	-32767	8001	0180
11	198	-0.309017	-10126	D872	72D8	-0.951057	-31163	8645	4586
12	216	-0.587785	-19260	B4C4	C4B4	-0.809017	-26509	9873	7398
13	234	-0.809017	-26509	9873	7398	-0.587785	-19260	B4C4	C4B4
14	252	-0.951057	-31163	8645	4586	-0.309017	-10126	D872	72D8
15	270	-1.000000	-32767	8001	0180	0.000000	0	0000	0000
16	288	-0.951057	-31163	8645	4586	0.309017	10126	278E	8E27
17	306	-0.809017	-26509	9873	7398	0.587785	19260	4B3C	3C4B
18	324	-0.587785	-19260	B4C4	C4B4	0.809017	26509	678D	8D67
19	342	-0.309017	-10126	D872	72D8	0.951057	31163	79BB	BB79

Figure 5-19: I and Q values calculation and conversion

- Use an ASCII editor which is able to handle binary data. Create and add the following mandatory tags before this binary data set can be further processed:
 - `TYPE`
 - `CLOCK`
 - `LEVEL OFFS`

An example of the `SICO.wv` file contents could be:

```
{TYPE: SMU-WV, 0}{CLOCK: 10e6}{LEVEL OFFS: 3.010300,0.000000}
0000FF7F8E27BB79 ... 72D8BB79
```

To simplify the example, the checksum is set to 0, i.e. the instrument does not evaluate a checksum.

Tip: The tags `TYPE`, `CLOCK`, `LEVEL OFFS` and `WAVEFORM` are mandatory for each waveform. All other tags are optional and can be inserted after the `TYPE` tag in arbitrary order.

- Pack the binary data into a `WAVEFORM` tag with the described structure.

```
{WAVEFORM-Length: #I0Q0I1Q1I2Q2 ... InQn}
```

- Calculate the `Length`


Length = Number of I/Q pairs * 4 + 1 = 20*4 + 1 = 81 bytes

- Place the string {WAVEFORM-81:# at the beginning of the data set
- Place the symbol } at the end of the data set

The contents of the waveform file SICO.wv for 20 I/Q pairs is now ready for operation and reads:

```
{TYPE: SMU-WV,0}
{CLOCK: 10e6}
{LEVEL OFFS: 3.010300,0.000000}
{WAVEFORM-81:#I0Q0I1Q1...InQn}
```

There is no readable representation for binary values in this document. This example uses the sequence I0Q0I1Q1...InQn to characterize the binary code. The following figure shows this waveform in a data editor.

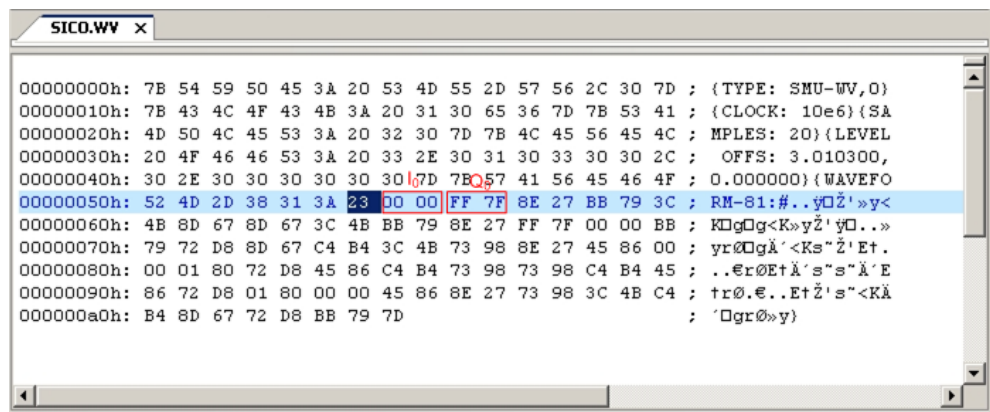

Example: C-program for creating a waveform file

C-program SICO.cpp for creating the file SICO.txt containing 20 sine and cosine pairs, converting them into binary data and creating the waveform file SICO.wv.

```
// SICO.cpp
// Defines the entry point for the console application

#include "stdafx.h"
#include <stdlib.h>
#include <stdio.h>
#include <math.h>

int _tmain(int argc, _TCHAR* argv[])
{
    const unsigned int samples = 20;
    const float pi = 3.141592654f;
    int i;

    // SICO.txt
    // Creating the file SICO.txt containing 20 sine and cosine pairs
    float grad, rad;
    FILE *fp;
    fp = fopen("SICO.txt", "w");
```

```

    if (fp == 0)
        return;
    for (i=0; i<samples; i++)
    {
        grad = (360.0f / (float)samples) * (float)i;
        rad = grad * (pi / 180.0f);
        fprintf(fp, "%f %f\n", sin(rad), cos(rad));
    }
    fclose(fp);

// SICO.wv
// Generating a binary data set from the I/Q pairs in the file SICO.txt
// and storing the result to file SICO.wv
FILE *fp_sour, *fp_dest;
float i_float, q_float;
unsigned short i_usint, q_usint;
fp_sour = fopen("SICO.TXT", "rt");
if (fp_sour == 0)
    return -1;
fp_dest = fopen("SICO.WV", "wb");
if (fp_dest == 0)
{
    fclose(fp_sour);
    return -1;
}
// Write required tags to waveform file
fprintf(fp_dest, "{TYPE: SMU-WV,0}");
fprintf(fp_dest, "{CLOCK: 10e6}");
fprintf(fp_dest, "{SAMPLES: %d}", samples);
// RMS, Peak
fprintf(fp_dest, "{LEVEL OFFS: %f,%f}", -1.0f * 20.0f * log10(1.0f/sqrt(2.0f)), 0.0f);
fprintf(fp_dest, "{WAVEFORM-%d:#", (samples * 4) + 1);
for (i=0; i<samples; i++)
{
    // Read I/Q pair from ASCII file
    if (fscanf(fp_sour, "%f %f", &i_float, &q_float) == EOF)
        break;
    // Convert I/Q pair to unsigned short
    i_usint = (unsigned short)floor((i_float * 32767.0) + 0.5);
    q_usint = (unsigned short)floor((q_float * 32767.0) + 0.5);
    // Write converted I/Q pair to waveform file
    fwrite(&i_usint, 2, 1, fp_dest);
    fwrite(&q_usint, 2, 1, fp_dest);
}
fprintf(fp_dest, "}");
fclose(fp_dest);
fclose(fp_sour);
return 0;
}

```


5.7.4.6 Defining periodically repeating traces

If your test setup requires marking an event, for example, each frame start, it is sufficient to define the trace once and repeat it over the length of a waveform. Repeating is useful for long waveforms with periodical marker signals.

The following examples use marker traces. You can use control lists analogously.

To define periodical marker trace

The waveform in the example below consists of three frames, each frame has a length of 100 samples. Waveform processing is continuous via "Trigger Mode" > "Auto".

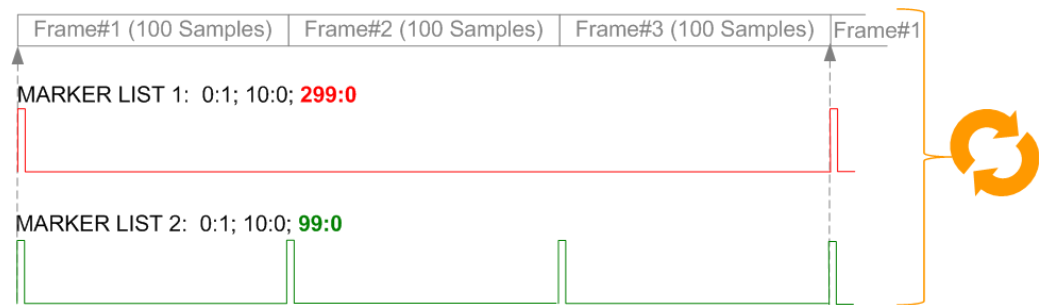


Figure 5-20: Example: Defining marker traces without **CONTROL LENGTH** tag

To define a restart marker and a frame start marker, use the following tags:

1. The waveform is 300 samples long, i.e. set `{SAMPLES: 300}`.
2. Set two `[TRACE] LIST` tags:
 - For Marker 1 that acts as a restart marker:
`{MARKER LIST 1: 0:1; 10:0; 299:0}`
 - For Marker 2 that marks each frame start:
`{MARKER LIST 2: 0:1; 10:0; 99:0}`
3. Do not use the `CONTROL LENGTH` tag.

The length of the repeated patterns is determined by the last sample number in the `[TRACE] LIST` that is the last `{Pos:State}`.

Example: CONTROL LENGTH tag and trace processing

In the example below, use the same marker traces and set the `CONTROL LENGTH` tag, for example `{CONTROL LENGTH: 150}`.

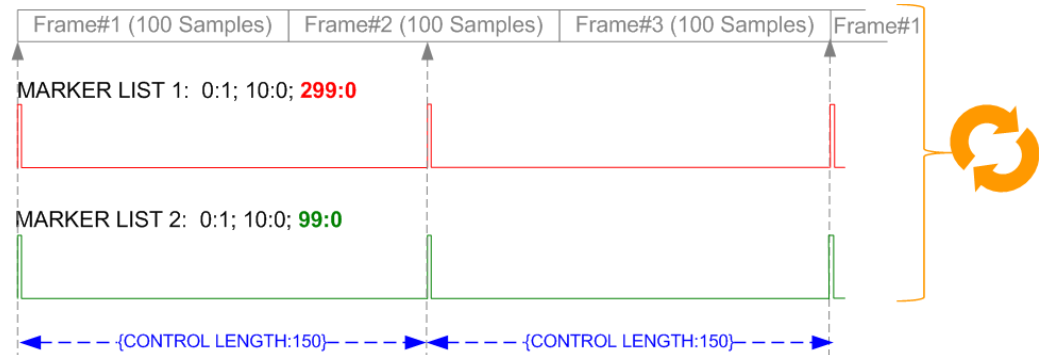


Figure 5-21: Example: Processing control signals with `CONTROL LENGTH` tag

The length of **all** control signals is determined by the `CONTROL LENGTH`. Observe how the marker traces are processed. In this example, both marker traces are repeated every 150 samples.

5.7.4.7 Creating control lists with tag file format

The R&S SMW provides the following ways to create a file containing control signals:

- To use the dedicated "Control Data Editor" and create a file in ASCII format and with extension `*.dm_iqc`, see ["To create a control list in ASCII format manually"](#) on page 301.
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 346.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 346.

To create a control list with tag file format

To create an ASCII control list file directly, use the provided tag commands.

1. Use a hex data editor.
2. Create the **mandatory** tags:
 - `TYPE`
 - `[TRACE] LIST`

The `[TRACE] LIST` tag defines the individual markers or control traces in a combined `{Pos:State}` way within the control list period (`CONTROL LENGTH`).

3. Create the **recommended** tag `CONTROL LENGTH`.
This tag defines the periodicity of the total control list.
4. Add required optional tags.

Insert these tags after the `TYPE` tag in arbitrary order.

For example, the control list file contains the following information:

```
{TYPE:SMU-CL}{COPYRIGHT:Rohde&Schwarz}
{DATE:2012-06-11;15:00:09}{HOP LIST:0:0;498:1;506:0}
{CW MODE LIST:0:0;380:1}{LEVATT LIST 3:0:0;464:1}
{BURST LIST:0:0;122:1;270:0;582:1;924:0}
{MARKER LIST 4:0:0;706:1;764:0}
{MARKER LIST 3:0:0;530:1;633:0}
{MARKER LIST 2:0:0;350:1;457:0}
{MARKER LIST 1:0:0;108:1;160:0}
{CONTROL LENGTH:1000}
```

The [Figure 5-14](#) shows the representation of the created control list in the "CList" data editor dialog.

Compare the displayed ramp values of "Marker 1" and the "Total List Length" with the values in the corresponding tags.

Note: In the provided example, the tags have been separated by line breaks for better reading.

See also [Example "To assign and activate control signals"](#) on page 345.

To create a control list in binary format

Generation of a control list in binary format is not necessary but possible.

- Use the commands `BB:DM:CLIST:...` to generate a control list in binary format (see ["Handling list files"](#) on page 1089 and the example in `[:SOURce<hw>] :BB:DM:CLIST:DATA` on page 1093).

See also [Example "To assign and activate control signals"](#) on page 345.

Example: To assign and activate control signals

Note: Irrespectively on the way they are created, generated control lists are not automatically used.

We assume, that a control list `clist.dm_iqc` containing information on marker 2, burst gate and level attenuation control signals is created and saved in the directory `/var/user/temp/`.

The following example shows how to enable the R&S SMW to:

- Use the control list for a particular marker output, e.g. the "Custom Digital Modulation > Marker 2".
- Use the Burst Gate and Level Attenuation control signals as defined in a control list.

```
MMEM:CDIRectory "/var/user/temp"
SOURce1:BB:DM:CLIST:CATalog?
// Response: clist
SOURce1:BB:DM:CLIST:SElect "clist"
SOURce1:BB:DM:TRIGger:OUTPut2:MODE CLIST
SOURce1:BB:DM:PRAMp:SOURce INTernal
```

5.7.4.8 Creating data lists with tag file format

The R&S SMW provides the following ways to create a data list file:

- To use the dedicated "Data List Editor" and create a file with extension *.dm_iqd, see ["To create data lists manually"](#) on page 302.
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 346.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 346.

To create a data list with tag file format

1. Use a hex data editor.
2. Create the mandatory tags: {TYPE}, {DATA BITLENGTH} and {DATA LIST}
3. Consider the tag syntax and rules.

The following is an example of the data list file content. The tags are separated by line breaks for better reading. The text in brackets is short explanation.

For details, see the tag description:

- TYPE
- {DATA BITLENGTH}
- {DATA LIST-Length}

```
{TYPE:SMU-DL}{COPYRIGHT:Rohde&Schwarz}
{DATE:201-06-11;15:00:09}
{DATA BITLENGTH: 8}
{DATA LIST-2: #d0d1...d7}
```

(1 byte containing 8 data bits d0 to d7 in binary format, where d0 is the MSB)

See also:

- [Figure 5-15](#) for representation of the created data list in the "Data List Editor".
- [Example "To assign and activate a data list"](#) on page 347

To create a data list in binary format

- Use the commands BB:DM:DLIST:....
See ["Handling list files"](#) on page 1089.

```
MME:CDIRectory "/var/user"
// Create a new data list file.
SOURCE1:BB:DM:DLIST:SElect "dl_new"
// Append data to the data list and query the content.
FORMat ASCii
SOURCE1:BB:DM:DLIST:DATA:APPend 0,1,1,1,0,1,0,1
SOURCE1:BB:DM:DLIST:DATA?
// Response: 0,1,1,1,0,1,0,1
```

See also [Example "To assign and activate a data list"](#) on page 347.

Example: To assign and activate a data list

We assume, that a created data list file `dl.dm_iqd` in the directory `/var/user/`. The following example shows how to use this data list as data source for the custom digital modulation.

```
MMEM:CDIRectory "/var/user"
SOURce1:BB:DM:DLISt:CATalog?
// Response: dl
SOURce1:BB:DM:DLISt:SElect "dl"
```

5.7.4.9 Editing waveform files, data and control lists

You can edit the internally and externally created waveform files, data and control lists. The waveform, data and control lists files contain binary and ASCII data.

Consider the following rules while editing files with binary data.

Rules for editing binary data

- **Use hex data editor**
Always use a hex data editor to edit files containing binary data. Editing of binary data file with a text editor, even if you only change the ASCII part of the file, corrupts the file.
- **Adapt the length information in the {EMPTYTAG}**
If you change the content of a waveform file, change also the {EMPTYTAG-Length} value.
For example, change this value, if you add a tag or add bytes to an existing tag. Reduce the value by the number of newly introduced bytes.

5.7.5 Tags for waveforms, data and control lists

The R&S SMW uses a simple tag-oriented format for externally or internally generated waveforms, data and control lists. Files with this format can be transmitted from an external computer to the instrument and vice versa. These files are transmitted as a binary data block, using SCPI command `[:SOURce<hw>] :BB:ARBitrary:WAVEform:DATA`, `[:SOURce<hw>] :BB:DM:DLISt:DATA`, and `[:SOURce<hw>] :BB:DM:CLISt:DATA`.

File can be transmitted via the GPIB interface of the instrument.

Tag general format

Tags are self-contained information units, enclosed in braces `{ }`. Their general format is `{Name: Data}` or `{Name-Length: Data}`. The colon separates the name part and the data part. The colon can be followed by a space for the sake of legibility.

- The **Name** identifies the tag. It is always expressed in capital letters.
- The **Data** is tag-specific, and usually it is in ASCII plain text.
- The **Length** specifies the number of bytes in a `WAVEFORM` tag, `DATA LIST` tag, or `EMPTYTAG`

Length is an ASCII integer value, defining the number of bytes from the colon : to the end brace }

Rules

Each waveform file must begin with the **TYPE** tag. The sequence of the remaining tags is arbitrary. For each tag, an indication shows whether it must be included in the file concerned (mandatory) or may be included (optional).

Unknown tags are not analyzed by the R&S SMW; they are left unchanged and saved without an error message for a possible further read back.

R&S SMU waveforms can also be loaded on the instrument, where they are converted internally into an R&S SMW waveform.



In all examples of file contents listed in this section, the tags have been separated by line breaks for better reading.

Tag description

This section describes the **mandatory TYPE tag** followed by description of all other tags, grouped per file type and listed in an alphabetical order. Some tags are valid for all three file types. If a tag is valid only for a single file type, e.g. only for a waveform, this fact is indicated in the description.

Related step-by-step descriptions

See:

- [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343
- [Chapter 5.7.4.5, "Creating waveforms with tag file format"](#), on page 338
- [Chapter 5.7.4.7, "Creating control lists with tag file format"](#), on page 344
- [Chapter 5.7.4.8, "Creating data lists with tag file format"](#), on page 346
- [Chapter 5.7.4.9, "Editing waveform files, data and control lists"](#), on page 347

Tags description

• Common tags	348
• Tags for single and multi-segment waveforms	350
• Tags for data lists	361
• Tags for control lists	362

5.7.5.1 Common tags

The following tags are common to all file types. For description of the dedicated tags, see

{TYPE: magic, xxxxxxxx}

(mandatory, must be the first tag in the file)

Identifies the file as a valid R&S SMW file. It must be present and must be the first in the waveform. If a file of the same name exists on the target medium, it is overwritten.

Setting parameters:

magic	Designates the file type and has the following values: SMU-WV A valid R&S SMW waveform. SMU-MWV A valid R&S SMW multi-segment waveform. SMU-DL A valid R&S SMW data list. SMU-CL A valid R&S SMW control list.
xxxxxxxx	Is an ASCII-coded checksum of the data part of the <code>WAVEFORM</code> tag in the file. This value is always 0 for data lists and control lists. The checksum for waveforms is used for detecting transmission errors. If the <code>TYPE</code> tag contains 0 or a non-numeric value for the checksum, it is ignored. It is calculated in accordance with the algorithm given below, where: <code>start</code> is a pointer to the first byte after the <code>#</code> character in the <code>WAVEFORM</code> tag <code>length</code> is the number of bytes between <code>start</code> and the closing curly bracket (excluding the latter; <code>length</code> must be divisible by 4 without a remainder). <pre> UINT32 checksum(void *start, UINT32 length) { UINT32 i, result = 0xA50F74FF; for(i=0; i < length/4; i++) result = result ^ ((UINT32 *)start)[i]; return(result); } </pre> The checksum is currently not verified when waveforms are loaded.
Example:	<pre> {TYPE: SMU-WV,106656} BB:ARB:WAV:TAG? 'TYPE' </pre> Queries the content of the <code>TYPE</code> tag. Response: <code>'SMU-WV,106656'</code> This is a valid waveform.

{COMMENT: string}

The tag contains a plain text ASCII string of arbitrary length. The string is not analyzed in the R&S SMW. It is used to describe the file. The string is allowed to contain all printable ASCII characters except the closing curly bracket.

Example: `{COMMENT: File with data for 3GPP enhanced channels}`
`BB:ARB:WAV:TAG? 'COMMENT'`
 Queries the content of the `COMMENT` tag of the selected waveform file.
 Response: 'File with data for 3GPP enhanced channels'
 The comment on the waveform reads "File with data for 3GPP enhanced channels".

Usage: Setting only

{COPYRIGHT: string}

The tag contains an ASCII string of arbitrary length. The string is not analyzed in the R&S SMW. It is used to save copyright information about the file content.

Example: `{COPYRIGHT: Rohde&Schwarz}`
`BB:ARB:WAV:TAG? 'COPYRIGHT'`
 Queries the content of the `COPYRIGHT` tag of the selected waveform file.
 Response: 'Rohde&Schwarz'
 Copyright resides with Rohde & Schwarz.

Usage: Setting only

{DATE: yyyy-mm-dd;hh:mm:ss}

(optional)

The tag contains the date and time at which the file was created. The year must be expressed as four digits. The instrument does not analyze this tag.

Example: `{DATE: 2009-04-02;14:32:12}`
`BB:ARB:WAV:TAG? 'DATE'`
 Queries the content of the `DATE` tag of the selected waveform file.
 Response: '2009-04-02;14:32:12'
 The waveform was created on April 2, 2009 at 14 hrs 32 min

Usage: Setting only

5.7.5.2 Tags for single and multi-segment waveforms

The following tags apply to waveforms and multi-segment waveforms, additionally to the tags listed in [Chapter 5.7.5.1, "Common tags"](#), on page 348.

{CLOCK: frequency}	351
{CONTROL LENGTH: ControlLength}	351
{EMPTYTAG-Length: #EmptySequence}	352
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}	353
{MARKER MODE [#]: GENERATOR}	354

{SAMPLES: Samples}.....	355
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	356
{MWV_SEGMENT_COUNT: NumOfSeg}.....	357
{MWV_SEGMENT_DURATION: SegDur0, SegDur1, ..., SegDurN-1}.....	357
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	357
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	358
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	358
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	358
{MWV_SEGMENT_LEVEL_MODE: Mode}.....	359
{MWV_SEGMENT_LEVEL_OFFSETS: RMSOffs_dBSg0, PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	359
{MWV_SEGMENT_SETTINGS_FILE: SegSettingFilePath}.....	360
{MWV_SEGMENT_FILES: "FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	360
{MWV_SEGMENTx_COMMENT: text}.....	360
{CONTROL LIST WIDTH4-Length: #m0m1...mx...mM-1}.....	360

{CLOCK: frequency}

(mandatory for waveforms)

The tag specifies the clock frequency at which the waveform has to be output, in Hz (on multi-segment waveforms this tag contains the maximal clock of all segments).

A query of `ARB:CLOCK?` after loading the waveform returns the value set using the `CLOCK` tag. This value can later be altered with the command `ARB:CLOCK?`.

Example:

```
{CLOCK: 54000000}
BB:ARB:WAV:TAG? 'CLOCK'
Queries the content of the CLOCK tag.
Response: 54000000
The clock frequency is set to 54 MHz.
```

Usage: Setting only

{CONTROL LENGTH: ControlLength}

(optional / recommended for marker and control lists)

The tag specifies the length of *all* control or marker list in ASCII format.

The control length influences the way the marker and control lists are processed, in particular the way traces are repeated; see [Figure 5-22](#).

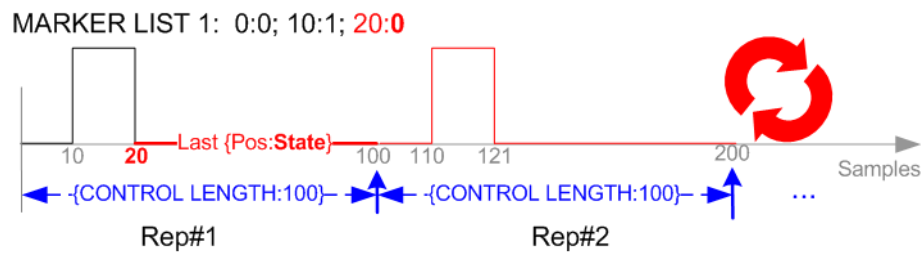


Figure 5-22: Example: Processing of MARKER TRACE if CONTROL LENGTH is specified

If the `CONTROL LENGTH` tag is not used, the marker and control list length are determined by the last position, that is the last `{Pos:State}` couple, defined in the particular `[TRACE] LIST` tag; see Figure 5-23.

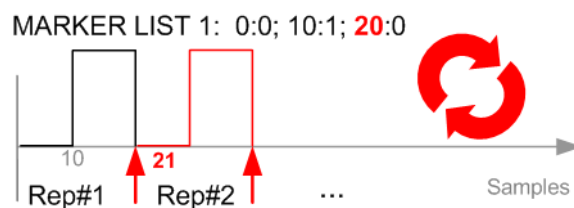


Figure 5-23: Example: Processing of MARKER TRACE if CONTROL LENGTH is not used

To maintain marker signals and waveform data synchronized, set the `CONTROL LENGTH` to be equal to the number of samples specified with the tag `SAMPLES`.

See also Chapter 5.7.4.6, "Defining periodically repeating traces", on page 343.

Example:

```
{CONTROL LENGTH: 500}
SOURce:BB:ARBitary:CLIST:TAG? 'CONTROL LENGTH'
Queries the length of the control list.
Response: 500
```

Manual operation: See "Total List Length" on page 298

{EMPTYTAG-Length: #EmptySequence}

(mandatory in automatically generated one and multi-segment waveforms)

This tag is empty, i.e. contains no data, and is used as placeholder.

Setting parameters:

Length An ASCII integer value that specifies the number of bytes in the `EMPTYTAG`, i.e. defines the number of bytes from the colon `:` to the end brace `}`

Note: If you change the content of a waveform file, change also the `{EMPTYTAG-Length}` value. For example, if you add a tag or add bytes to a tag, reduce the length by the number of newly introduced bytes.

EmptySequence An empty sequence containing blanks only. The number of used blanks is calculated as the difference between the hex addresses of the {WAVEFORM} tag and the hash sign # in the {EMPTYTAG}.

The {WAVEFORM} tag always starts at hex address #4000.

Example:

```
{TYPE:SMU-WV, 837236424}
{COPYRIGHT:2003 Rohde&Schwarz SMU}
{DATE:2012-07-11;14:38:01}
{SAMPLES:80000}
{CLOCK:8666666.666666666}
{VECTOR MAX:1.000000038569158}
{LEVEL OFFS:3.333553817875577e-07,0}
{MARKER LIST 1:0:1;1:0;1249:0}
{MARKER LIST 2:0:1;1:0;1249:0}
{MARKER LIST 3:0:1;1:0;1249:0}
{MARKER LIST 4:0:1;1:0;1249:0}
{EMPTYTAG-15947:# ...}
{WAVEFORM-320017:#IQIQIQ...}
```

The example waveform file contains 436 (0x1b4) bytes before the # sign in the EMPTYTAG; the hex address of the # sign is 0x1b5. The {WAVEFORM} starts at 0x4000. The EMPTYTAG contains 15946 blanks and has a length of (15946+1) bytes.

Usage: Setting only

{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}

(recommended for waveforms)

The tag determines the level of the ARB signal in the waveform file. The offset levels define the offset of RMS and peak value relative to the 16-bit full scale modulation (-32767 to + 32767) = 0 dB.

Setting parameters:

RMSOffset_dB Defines the RMS level offset of the signal relative to full scale ARB signal in the WAVEFORM tag. The offset is defined in ASCII float format. The value is always positive.
A 3 dB value indicates that the RMS level of the signal is 3 dBs below the full scale.
full scale = max. amplitude of vector of I/Q samples = $|S_{IQ}|_{\max} = \sqrt{I^2+Q^2}_{\max} = 0 \text{ dB}$

PeakOffset_dB Defines the peak level offset of the signal relative to full scale for the ARB signal in the WAVEFORM tag. The offset is defined in ASCII float format.
The value usually equals 0 dB as usually the I/Q samples (signed 16-bit integer values) are modulated to full scale: Full scale = 0 dB = max. amplitude of vector of I/Q samples = $|S_{IQ}|_{\max} = \sqrt{I^2+Q^2}_{\max} = (2^{15})-1 = 32767$.

A positive `PeakOffset_dB` value indicates that a headroom to full scale is provided when generating the waveform. A negative `PeakOffset_dB` value indicates that overrange is likely for some samples, i.e. clipping might occur.

The crest factor can be calculated from the two values as follows:

$$\text{Crest Factor} = |\text{PeakOffset_dB} - \text{RMSOffset_dB}|$$
Example:

```
{LEVEL OFFS: 3.45,2}
```

```
BB:ARB:WAV:TAG? 'LEVEL OFFS'
```

Queries the content of the `LEVEL OFFS` tag of the selected waveform file.

```
Response: 3.45,2
```

The level of the waveform is below full scale, clipping does not occur.

Usage:

Setting only

{MARKER MODE [#]: GENERATOR}**(Optional for waveforms)**

The tag defines how the marker signals are generated. The tag is included in the waveforms, created by the R&S WinIQSIM2 software.

- Tag not used

The marker signals defined with the tag `MARKER LIST` are converted into a separate binary control list. When the waveform is loaded into the ARB, this control list is also loaded automatically and processed synchronous with the waveform.

Note: This method reduces the maximum waveform length (given as number of samples). The number of available samples is limited, because each marker requires 4 bits per I/Q sample, additionally to the 32 bits required to describe an I/Q sample.

- Tag is used

The marker signals defined with the tag `MARKER LIST` are processed internally; additional control list is not created. If the tag is used for **all 3 markers**, the whole ARB memory is available for the I/Q samples.

Note: If this tag is used, the maximum number of marker states defined with the tag `MARKER LIST` is 64, i.e. `Pos63:State63`

Setting parameters:

[#] 1 to 3

Sets the marker number.

Example:

```
{MARKER MODE 1: GENERATOR}
```

```
{MARKER MODE 2: GENERATOR}
```

```
{MARKER MODE 3: GENERATOR}
```

Usage:

Setting only

{SAMPLES: Samples}**(recommended for waveforms)**

The tag contains the number of I/Q samples in the waveform in ASCII format.

On multi-segment waveforms, this tag contains the total I/Q samples of all segments.

Example:

```
{SAMPLES: 1000}
```

```
BB:ARB:WAV:TAG? 'SAMPLES'
```

Queries the content of the `SAMPLES` tag of the selected waveform file.

```
Response: 1000
```

The waveform contains 1000 I/Q samples.

Usage:

Setting only

See also [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343.

```
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
```

(mandatory for control lists / optional for waveforms)

The tag contains the data for the marker and control signals in the control list or the marker signals of ARB waveforms.

Traces are processed different, depending on the selected [CONTROL LENGTH](#). See for example [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343.

The processing of the marker traces (`MARKER LIST`) depends additionally on the presence of the tag [MARKER MODE](#).

Setting parameters:

{[TRACE]}	MARKER BURST LEVATT CW MODE HOP MAP Name of the marker or control signal. For ARB waveforms, it is only meaningful to define marker signals; in the ARB multi-segment waveforms these tags are ignored!
[#]	1 to 3 Sets the marker or control trace number; supported is only <code>LEVATT LIST 1</code> .
Pos	Specifies in ASCII format the position (i.e. sample number or data value), with effect from which the binary <code>State</code> of the marker or of the control signal changes. If the tag MARKER MODE is used, the maximum number of marker states is 64, i.e. <code>Pos₆₃:State₆₃</code> .

State 0 | 1

Specifies the binary state of the marker or of the control signal from Pos_N to Pos_{N+1} exclusive in ASCII format.

Example:

```
{MARKER LIST 1: 0:0;10:1;20:0;30:1}
```

```
BB:DM:CLIS:TAG? 'MARKER LIST 1'
```

Queries the content of the `MARKER LIST 1` tag of the selected control list file.

```
Response: '0:0;10:1;20:0;30:1'
```

The marker setting for samples 0 to 9 = 0 (low), for 10 to 19 = 1 (high) and for 20 to 29 = 0. From sample 30 onward the marker setting = 1.

Example:

```
{LEVATT LIST 1: 0:0;10:1;20:0;30:1}
```

```
BB:DM:CLIS:TAG? 'LEVATT LIST 1'
```

Queries the content of the `LEVATT LIST 1` tag of the selected control list file.

```
Response: '0:0;10:1;20:0;30:1'
```

Level attenuation applies to data values 10 to 19 (high) and from data value 30 onward.

Usage: Setting only

Manual operation: See ["Select Ramp to Edit"](#) on page 298

{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}

(mandatory for waveforms)

The tag contains the actual waveform data or multi-segment waveform data (I/Q stream). Refer to [Chapter 5.10, "Generating multi-segment waveform files"](#), on page 371 for background information description of the multi-segment waveform function.

Setting parameters:

Length Specifies the number of bytes in a `WAVEFORM` tag and is calculated as follows:

$Length = \text{Number of I/Q pairs} * 4 \text{ (2 bytes per I and 2 bytes per Q value)} + 1 \text{ byte (the length of the \#)}$

IxQx

`IxQx...` represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each component consists of 2 bytes in Little endian format representation, i.e. least significant byte (LSB) first.

The values of the 2 bytes in an I component and a Q component are in the range 0x0 to 0xFFFF (-32767 to +32767). This value is transferred to the D/A converter.

This tag is also used to store multi-segment waveforms. The I/Q streams of the individual waveforms are directly concatenated to one collectively waveform I/Q stream.

The number of segments and the start offset and length of the individual segments inside the total waveform I/Q stream is determined by the additional tags `MWV_SEGMENT_COUNT`, `MWV_SEGMENT_START`, and `MWV_SEGMENT_LENGTH`. Further `MWV_SEGMENT_...` tags are also available, for example for level and clock information.

Example: **One segment waveform**
`{WAVEFORM-401:#I0,Q0,I1,Q1,I2,Q2,...I99,Q99}`
 100 I/Q pairs with 4 bytes each are transmitted - none multi-segment

Example: **Multi-segment waveform**
`{WAVEFORM-1201:`
`#I0,Seg0,Q0,Seg0,I1,Seg0,Q1,Seg0,...I99,Seg0,Q99,Seg0,I0,Seg1,Q0,Seg1,I1,Seg1,`
`Q1,Seg1,... I199,Seg1,Q199,Seg1}`
 2 segments: segment 0 with 100 I/Q pairs; segment 1 with 200 I/Q pairs. Each I/Q pair consists of 2*16 bit = 4 bytes
 The data is transmitted using SCPI command [:
`SOURce<hw>]:BB:ARbitrary:WAVEform:DATA.`

Usage: Setting only

{MWV_SEGMENT_COUNT: NumOfSeg}

(mandatory for multi-segment waveforms)

The tag contains the number of segments in the multi-segment waveform in ASCII integer format.

Example: `{MWV_SEGMENT_COUNT: 2}`
 Multi-segment waveform with 2 segments

Usage: Setting only

{MWV_SEGMENT_DURATION: SegDur0, SegDur1, ..., SegDurN-1}

(optional for multi-segment waveforms)

The tag gives the time duration (in seconds) per segment.

Example: `{MWV_SEGMENT_DURATION: 1,0.5}`
 Multi-segment waveform with 2 segments, lasting 1 s and 0.5 s each.

Usage: Setting only

{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}

(mandatory for multi-segment waveforms)

The tag contains a list of I/Q sample lengths for every segment in the multi-segment waveform in ASCII integer format.

Example: {MWV_SEGMENT_LENGTH: 100,200}
2 segments: 100 samples in segment 0 and 200 samples in segment 1.

Usage: Setting only

{MWV_SEGMENT_START:
SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}

(mandatory for multi-segment waveforms)

The tag contains a list of I/Q sample start offsets for every segment in the multi-segment waveform in ASCII integer format.

Example: {MWV_SEGMENT_START: 0,100}
2 segments with 100 samples in segment 0 and 200 samples in segment 1.
The start offset of first segment is 0 samples, start offset of next segment 1 is the sample length of segment 0 = 100 samples.

Usage: Setting only

{MWV_SEGMENT_CLOCK_MODE: Mode}

(mandatory for multi-segment waveforms)

The tag contains a string in ASCII format which supplies the clock rate mode, that was used for calculation of the multi-segment output waveform (see also ["Clock"](#) on page 383).

The tag `CLOCK` contains always the highest clock rate of all segments. The tag `MWV_SEGMENT_CLOCK` contains the clock rates of the individual segments.

Setting parameters:

Mode	<p>UNCHANGED The segments may have different clock rates; each segment is output with the clock rate defined in its waveform file.</p> <p>HIGHEST All segments are output at the highest available clock rate.</p> <p>USER All segments are output at the clock rate defined by the user. Note: Only upsampling is allowed, no downsampling!</p>
-------------	--

Example: {MWV_SEGMENT_CLOCK_MODE: UNCHANGED}

Usage: Setting only

{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}

(mandatory for multi-segment waveforms)

The tag contains a list of clock frequencies for every segment in the multi-segment waveform in ASCII floating point format.

Example: `{MWV_SEGMENT_CLOCK: 100e6, 80e6}`
 2 segments: clock of segment 0 is 100 MHz, clock of segment 1 is 80 MHz.
Note: If the segments have different clock frequencies, there are some restrictions on signal output, i.e. seamless switching between segments is only possible, if all segments have the same clock frequency. Software resampling (upsampling) can be used to bring all segments to the same clock.

Usage: Setting only

{MWV_SEGMENT_LEVEL_MODE: Mode}

(optional for multi-segment waveforms)

The tag contains a string in ASCII format which supplies the clock rate mode, that was used for calculation of the multi-segment output waveform.

See also "[Level](#)" on page 383.

Setting parameters:

Mode	UNCHANGED Concerning the level settings, the segments are output exactly as defined in the individual files. The value displayed with the parameter "Task bar > Level" applies only to the segment with the highest RMS value. The remaining segments are output at a lower level than the displayed value. EQUALRMS Segments are output so that all segments have the same RMS value. The value displayed with the parameter "Task bar > Level" applies to all segments.
------	---

Example: `{MWV_SEGMENT_LEVEL_MODE: UNCHANGED}`

Usage: Setting only

{MWV_SEGMENT_LEVEL_OFFS:

RMSOffs_dBSg0, PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}

(mandatory for multi-segment waveforms)

The tag contains a list of level pairs in ASCII floating point format, one pair for every segment in the multi-segment waveform. The first value of a level pair defines the rms offset and the second value the peak offset relative to the 16-bit full scale modulation $(-32767; +32767) = 0$ dB. The meaning of one level value pair is the same as in the [LEVEL OFFS](#) tag for normal waveforms.

Example: `{MWV_SEGMENT_LEVEL_OFFS: 3.0, 0.0, 6.0, 0.0}`
 2 segments: RMS level of segment 0 is 3 dB below full scale;
 RMS level of segment 1 is 6dB below full scale.
 Peak level of both segments is 0 dB full scale.

Usage: Setting only

{MWV_SEGMENT_SETTINGS_FILE: SegSettingFilePath}

(optional for multi-segment waveforms)

The tag contains the file path and filename of the multi-segment file, used for the calculation of the multi-segment waveform.

Example: {MWV_SEGMENT_SETTINGS_FILE:
"/var/user/Settings.inf_mswv"}
Multi-segment file path and filename.

Usage: Setting only

{MWV_SEGMENT_FILES:

"FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}

(optional for multi-segment waveforms)

The tag contains a list of file names for every segment in the multi-segment waveform in ASCII format.

Example: {MWV_SEGMENT_FILES: "/var/user/temp/sine.wv",
"/var/user/temp/rect.wv"}

Usage: Setting only

{MWV_SEGMENTx_COMMENT: text}

(optional for multi-segment waveforms)

The tag contains a user comment for a specific segment $x = [0 \dots \text{NumOfSeg}-1]$ in the multi-segment waveform in ASCII format.

Example: {MWV_SEGMENT1_FILES: segment 1 contains a QPSK
signal.}

Usage: Setting only

{CONTROL_LIST_WIDTH4–Length: #m0m1...mx...mM-1}

(optional for waveforms and multi-segment waveforms)

The tag contains a binary marker element stream, which is output synchronously to the I/Q sample sequence. One marker element m_x consists of 4 bit, which are assigned to the 3 possible marker traces of the instrument (1 bit per marker trace). One 4-bit marker element is required for every I/Q sample in the WAVEFORM tag. Hence, the number of marker elements m should be equal to the number of I/Q samples. The CONTROL_LENGTH tag has to contain the number of all marker elements m .

MSB 7	Byte						LSB 1
Marker element m_x (synchronous to I/Q Sample x)				Marker element m_{x+1} (synchronous to I/Q Sample $x+1$)			
Marker 4	Marker 3	Marker 2	Marker 1	Marker 4	Marker 3	Marker 2	Marker 1

Figure 5-24: Marker element in 4-bit binary format bit order

For standard waveforms, the `MARKER LIST x` tags are a more compact way to define markers. In principle, however, the `CONTROL LIST WIDTH4` format can also be used instead of the `MARKER LIST x` tags.

For multi-segment waveforms, the `CONTROL LIST WIDTH4` format is required for marker definition. The binary marker streams of the individual segments are directly concatenated (without any gap) to one collectively marker stream.

Setting parameters:

Length	<p>Defines the number of bytes in the <code>CONTROL LIST WIDTH4</code> tag in ASCII Format and is calculated as follows:</p> <p>$Length = Size\ of\ \# (1\ byte) + Number\ of\ marker\ elements\ m_x * (4\ bit) / (8\ bits/byte)$</p> <p>The value is rounded up for byte alignment.</p>
m_x	Marker element in 4-bit binary format.
Example:	<p>{CONTROL LIST WIDTH4-51: #$m_0m_1...m_x...m_{99}$}</p> <p>100 marker elements, each marker element with 4 bits</p>
Usage:	Setting only

5.7.5.3 Tags for data lists

The following tags apply to data lists, additionally to the tags listed in [Chapter 5.7.5.1, "Common tags"](#), on page 348.

{DATA BITLENGTH: BitLength}.....	361
{DATA LIST-Length: #d0d1...dx...dN-1...}.....	362

{DATA BITLENGTH: BitLength}

(mandatory for data lists)

The tag defines the length of the data field in the `DATA LIST` tag in bits in ASCII format.

Example:

```
{DATA BITLENGTH: 444}
BB:DM:DLIS:SEL "/var/user/dl"
BB:DM:DLIS:TAG? "dl", "DATA BITLENGTH"
Queries the content of the DATA BITLENGTH tag of the
selected data list file.
Response: '444'
The data list is 444 bits long.
```

Usage: Setting only

{DATA LIST-Length: #d0d1...dx...dN-1...}

(mandatory for data lists)

The tag contains the actual bit sequence of the data list in binary format.

Setting parameters:

Length Defines the number of bytes in the DATA LIST tag in ASCII Format (see {WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...} for details).

dx Data bits in binary format (8-bit unsigned characters, MSB first).

Example: {DATA LIST-17: #d0d1...dx...d127}
16 bytes containing 128 data bits, first bit is the MS bit of the first byte.

Usage: Setting only

5.7.5.4 Tags for control lists

The following tags apply to control lists, additionally to the tags listed in [Chapter 5.7.5.1, "Common tags"](#), on page 348.

{CONTROL LENGTH: ControlLength}.....	362
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363

{CONTROL LENGTH: ControlLength}

(optional / recommended for marker and control lists)

The tag specifies the length of *all* control or marker list in ASCII format.

The control length influences the way the marker and control lists are processed, in particular the way traces are repeated; see [Figure 5-22](#).

MARKER LIST 1: 0:0; 10:1; 20:0

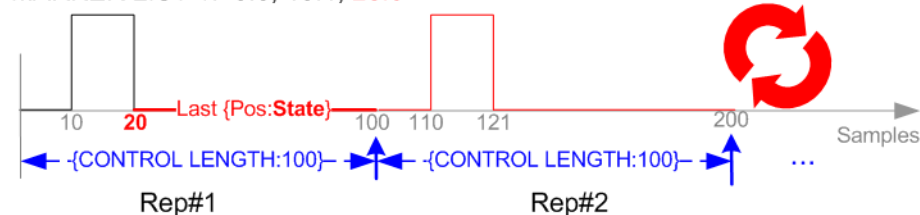


Figure 5-25: Example: Processing of MARKER TRACE if CONTROL LENGTH is specified

If the `CONTROL LENGTH` tag is not used, the marker and control list length are determined by the last position, that is the last `{Pos:State}` couple, defined in the particular `[TRACE] LIST` tag; see [Figure 5-23](#).

MARKER LIST 1: 0:0; 10:1; 20:0

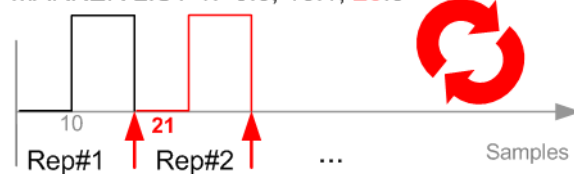


Figure 5-26: Example: Processing of MARKER TRACE if CONTROL LENGTH is not used

To maintain marker signals and waveform data synchronized, set the `CONTROL LENGTH` to be equal to the number of samples specified with the tag `SAMPLES`.

See also [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343.

Example:

```
{CONTROL LENGTH: 500}
SOURCE:BB:ARBITRARY:CLIST:TAG? 'CONTROL LENGTH'
Queries the length of the control list.
Response: 500
```

Manual operation: See ["Total List Length"](#) on page 298

```
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
```

(mandatory for control lists / optional for waveforms)

The tag contains the data for the marker and control signals in the control list or the marker signals of ARB waveforms.

Traces are processed different, depending on the selected `CONTROL LENGTH`. See for example [Chapter 5.7.4.6, "Defining periodically repeating traces"](#), on page 343.

The processing of the marker traces (`MARKER LIST`) depends additionally on the presence of the tag `MARKER MODE`.

Setting parameters:

`[TRACE]` MARKER | BURST | LEVATT | CW MODE | HOP | MAP
 Name of the marker or control signal.
 For ARB waveforms, it is only meaningful to define marker signals; in the ARB multi-segment waveforms these tags are ignored!

[#]	1 to 3 Sets the marker or control trace number; supported is only <code>LEVATT LIST 1</code> .
Pos	Specifies in ASCII format the position (i.e. sample number or data value), with effect from which the binary <code>State</code> of the marker or of the control signal changes. If the tag <code>MARKER MODE</code> is used, the maximum number of marker states is 64, i.e. <code>Pos₆₃:State₆₃</code> .
State	0 1 Specifies the binary state of the marker or of the control signal from <code>Pos_N</code> to <code>Pos_{N+1}</code> exclusive in ASCII format.
Example:	<pre>{MARKER LIST 1: 0:0;10:1;20:0;30:1}</pre> <pre>BB:DM:CLIS:TAG? 'MARKER LIST 1'</pre> <p>Queries the content of the <code>MARKER LIST 1</code> tag of the selected control list file.</p> <p>Response: '0:0;10:1;20:0;30:1'</p> <p>The marker setting for samples 0 to 9 = 0 (low), for 10 to 19 = 1 (high) and for 20 to 29 = 0. From sample 30 onward the marker setting = 1.</p>
Example:	<pre>{LEVATT LIST 1: 0:0;10:1;20:0;30:1}</pre> <pre>BB:DM:CLIS:TAG? 'LEVATT LIST 1'</pre> <p>Queries the content of the <code>LEVATT LIST 1</code> tag of the selected control list file.</p> <p>Response: '0:0;10:1;20:0;30:1'</p> <p>Level attenuation applies to data values 10 to 19 (high) and from data value 30 onward.</p>
Usage:	Setting only
Manual operation:	See " Select Ramp to Edit " on page 298

5.8 Generating notched signals

If your instrument is equipped with the R&S SMW-K811, you can apply notched filter.



In the following, the notched filter settings are described based on the ARB functionality. The described settings also apply for:

- EUTRA/LTE
- DVB-H/T, DVB-S2/S2X
- OFDM Signal Generation
- OneWeb

5.8.1 Required options

The basic equipment layout for the generation of notched signals includes the following options:

- Standard or wideband baseband generator (R&S SMW-B10/-B9)
- Baseband main module (R&S SMW-B13) or wideband baseband main module (R&S SMW-B13XT)

- Option Notched Signals (R&S SMW-K811), per signal path
Sufficient for the generation of notched signals with the ARB

For the generation of notched signals with one of the digital standards, also the corresponding option:

- Option EUTRA/LTE (R&S SMW-K55), per signal path
- Option DVB-H/T (R&S SMW-K52), per signal path
- Option OFDM Signal Generation (R&S SMW-K114), per signal path
- Option OneWeb User-Defined Signal Generation, OneWeb Reference Signals (R&S SMW-K130/-K355), per signal path

- Frequency option (e.g. R&S SMW-B1003)

For more information, see data sheet.

5.8.2 About the notch filters

The noise power ratio (NPR) measurement is a method for evaluating the linearity of wideband-amplifiers. The NPR measurement use notched filters that are applied on internally or externally created waveforms.

The R&S SMW equipped with the R&S SMW-K811 option allows you to define up to 25 notches. You can define the frequency offset and bandwidth of each notch individually. You can use frequency values with fixed resolution, where the resolution step depends on the used [Clock Frequency](#).

The notched filters settings are available for the ARB generator and four digital standards. The provided settings are identical, merely the access to the settings and the remote control commands are different.

This section describes the notched filter settings based on the ARB functionality. The described settings, however, also apply for:

- EUTRA/LTE
- DVB-H/T, DVB-S2/S2X
- OFDM Signal Generation
- OneWeb

5.8.3 Notch filter settings

Access:

1. Select "System Configuration" with separate sources.
Select "System Configuration > Fading/Baseband Config." > **"BB Source Config = Separated"**.
2. Select "Baseband > ARB > Notch Filter".
3. Observe the value of the parameter "ARB > General > Clock Frequency".
It indicates and defines the resolution of frequency offsets of the individual notches.
4. Set the number of notches, for example, "Number of Notches = e.g. 3"
5. Define notch settings, for example, for the first notch:
 - a) For notch#1, set "Frequency Offset = 0" and "Notch Bandwidth, MHz = 0.6".
 - b) For notch#1, set "State = On".
6. Select "Notch Filter > Apply" to trigger the instrument to adopt the notch filter settings.
7. Select "ARB > General > State > On".

	State	Frequency Offset /kHz	Notch Bandwidth /kHz	Notch Bandwidth /%
1	On	0.000 0	3.000 5	3.00
2	On	-25.000	1.999 5	0.20
3	On	25.000	0.500 5	0.50

Apply

Comprises the settings for enabling the notch filter and indicates the clock frequency for the waveform.

The remote commands required to define these settings are described in ["Notch filter commands"](#) on page 1135.

The notched filters settings are available for the ARB generator and four digital standards. The provided settings are identical, merely the access to the settings and the remote control commands are different.

This section describes the notched filter settings based on the ARB functionality. The described settings, however, also apply for:

- EUTRA/LTE
- DVB-H/T, DVB-S2/S2X

- OFDM Signal Generation
- OneWeb

Settings:

State.....	367
Clock Frequency.....	367
Number of Notches.....	367
Notch definition table.....	368
L State.....	368
L Frequency Offset /MHz.....	368
L Notch Bandwidth /MHz.....	368
L Notch Bandwidth /%.....	368
Apply.....	369

State

If enabled, the defined notch filter is applied to the baseband signal.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:NOTCh` on page 1136

etc. for the corresponding option:

`[:SOURce<hw>] :BB:DVB:NOTCh` on page 1135

`[:SOURce<hw>] :BB:EUTRa:NOTCh` on page 1135

`[:SOURce<hw>] :BB:OFDM:NOTCh` on page 1135

`[:SOURce<hw>] :BB:ONEWeb:NOTCh` on page 1136

Clock Frequency

Indicates the current clock frequency of the waveform signal.

The value equals the clock frequency of the ARB application: "ARB > General > Clock Frequency".

Notch Bandwidth /% is related to this value.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:NOTCh:CLOCK?` on page 1136

etc. for the corresponding option:

`[:SOURce<hw>] :BB:DVB:NOTCh:CLOCK?` on page 1136

`[:SOURce<hw>] :BB:EUTRa:NOTCh:CLOCK?` on page 1136

`[:SOURce<hw>] :BB:OFDM:NOTCh:CLOCK?` on page 1136

`[:SOURce<hw>] :BB:ONEWeb:NOTCh:CLOCK?` on page 1136

Number of Notches

Sets the number of notches.

Notches are defined individually; in the notch definition table, there is one line per notch.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:NOTCh:COUNt` on page 1136

etc. for the corresponding option:

`[:SOURce<hw>] :BB:DVB:NOTCh:COUNt` on page 1136

`[:SOURce<hw>] :BB:EUTRa:NOTCh:COUNt` on page 1136

[:SOURce<hw>] :BB:OFDM:NOTCh:COUNT on page 1136

[:SOURce<hw>] :BB:ONEWeb:NOTCh:COUNT on page 1136

Notch definition table

Comprises the setting used to define the notch filter.

The notch filter is defined as a sequence of notches. It is described in a table form, where each table line corresponds to one notch and the number of lines is set with the parameter [Number of Notches](#).

State ← Notch definition table

Enables the notch defined in this line of the table.

Remote command:

[:SOURce<hw>] :BB:ARbitrary:NOTCh<ch>:STATe on page 1137

etc. for the corresponding option:

[:SOURce<hw>] :BB:DVB:NOTCh<ch>:STATe on page 1136

[:SOURce<hw>] :BB:EUTRa:NOTCh<ch>:STATe on page 1136

[:SOURce<hw>] :BB:OFDM:NOTCh<ch>:STATe on page 1136

[:SOURce<hw>] :BB:ONEWeb:NOTCh<ch>:STATe on page 1137

Frequency Offset /MHz ← Notch definition table

Specifies the center frequency of the notch f_{offset} , where:

$$-\text{Clock Frequency}/2 < f_{\text{offset}} < + \text{Clock Frequency}/2$$

Remote command:

[:SOURce<hw>] :BB:ARbitrary:NOTCh<ch>:FREQuency:OFFSet on page 1137

etc. for the corresponding option:

[:SOURce<hw>] :BB:DVB:NOTCh<ch>:FREQuency:OFFSet on page 1137

[:SOURce<hw>] :BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet on page 1137

[:SOURce<hw>] :BB:OFDM:NOTCh<ch>:FREQuency:OFFSet on page 1137

[:SOURce<hw>] :BB:ONEWeb:NOTCh<ch>:FREQuency:OFFSet on page 1137

Notch Bandwidth /MHz ← Notch definition table

Sets the absolute notch bandwidth.

The selected value is adjusted to the internal frequency grid.

The maximum notch bandwidth is calculated as [Clock Frequency](#)/10.

Remote command:

[:SOURce<hw>] :BB:ARbitrary:NOTCh<ch>:BWIDth[:ABSolute] on page 1137

etc. for the corresponding option:

[:SOURce<hw>] :BB:DVB:NOTCh<ch>:BWIDth[:ABSolute] on page 1137

[:SOURce<hw>] :BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute] on page 1137

[:SOURce<hw>] :BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute] on page 1137

[:SOURce<hw>] :BB:ONEWeb:NOTCh<ch>:BWIDth[:ABSolute] on page 1137

Notch Bandwidth /% ← Notch definition table

Sets the notch bandwidth relative to [Clock Frequency](#).

Remote command:

[:SOURce<hw>] :BB:ARBitrary:NOTCh<ch>:BWIDth:RELative on page 1138

etc. for the corresponding option:

[:SOURce<hw>] :BB:DVB:NOTCh<ch>:BWIDth:RELative on page 1138

[:SOURce<hw>] :BB:EUTRa:NOTCh<ch>:BWIDth:RELative on page 1138

[:SOURce<hw>] :BB:OFDM:NOTCh<ch>:BWIDth:RELative on page 1138

[:SOURce<hw>] :BB:ONEWeb:NOTCh<ch>:BWIDth:RELative on page 1138

Apply

Select "Apply" to adopt the configured settings.

Remote command:

[:SOURce<hw>] :BB:ARBitrary:NOTCh:APPLy on page 1138

etc. for the corresponding option:

[:SOURce<hw>] :BB:DVB:NOTCh:APPLy on page 1138

[:SOURce<hw>] :BB:EUTRa:NOTCh:APPLy on page 1138

[:SOURce<hw>] :BB:OFDM:NOTCh:APPLy on page 1138

[:SOURce<hw>] :BB:ONEWeb:NOTCh:APPLy on page 1138

5.8.4 AWGN test signal

Option: R&S SMW-K811.

See also [Chapter 5.8.1, "Required options"](#), on page 365.

Access:

 
- Select "Baseband > ARB > General > Test Signal Form > AWGN".

The remote commands required to define these settings are described in [Chapter 14.19.4.3, "SOURce:BB:ARBitrary subsystem"](#), on page 1095.

To generate an AWGN test signal

1. Select "Test Signal Form > AWGN".
2. Click "Create Test Signal".

The dialog "AWGN Test Signal" opens. Optionally, adjust the number of samples of the test signal.




3. Click "Generate Signal RAM".

A test signal waveform file is created with the set number of samples.

4. Close the dialog.

The waveform file is loaded to the "ARB > General > Load Waveform" selection. By default, the filename is `awgn_test_signal_a` with file extension `*.vv`.

5. To monitor waveform properties, click "Waveform Info".

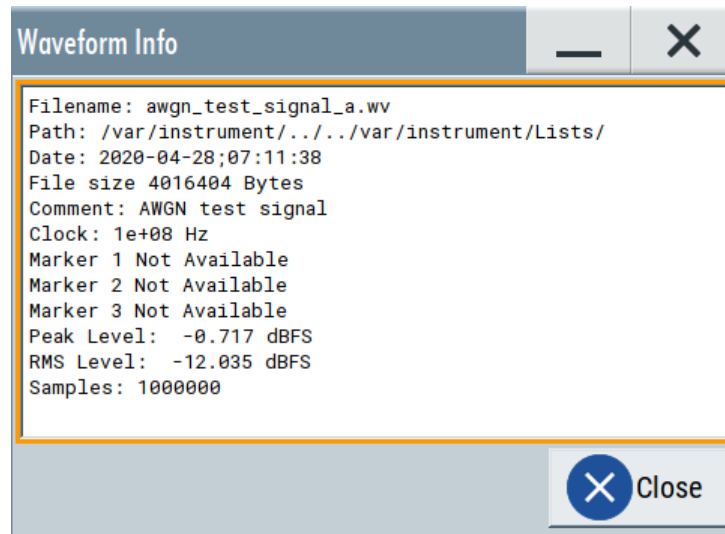


The clock frequency f_{clock} is 100 MHz per default. You can change it, see the next step.

6. Optionally, adjust the clock frequency f_{clock} . The bandwidth of the resulting noise signal is approximately $0.96 * f_{\text{clock}}$.

Example: A clock frequency f_{clock} of 100 MHz results in a noise signal bandwidth of about $0.96 * f_{\text{clock}} = 96$ MHz.

7. Select "ARB > State > On" and "RF > On".

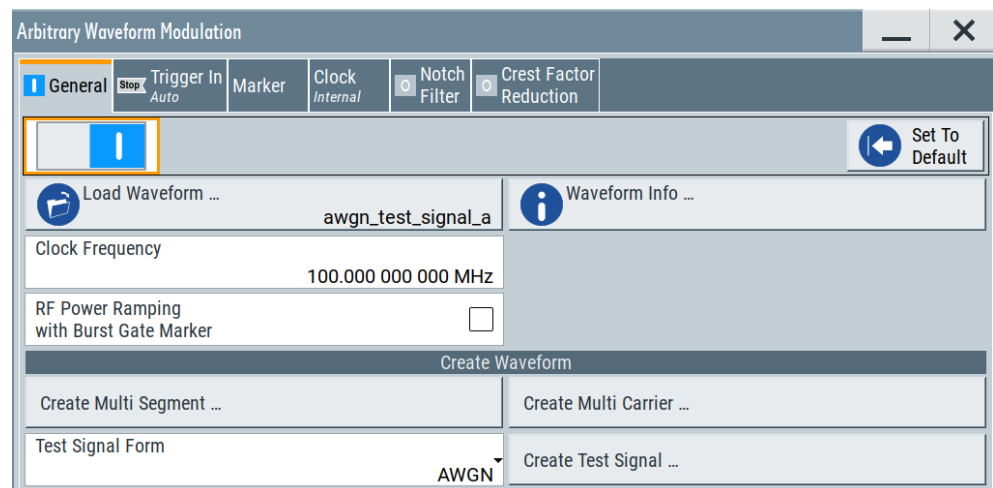

The R&S SMW processes the waveform file and generates an AWGN signal.

Settings:

Samples.....	371
Generate Signal RAM.....	371

Samples

Sets the number of samples generated for the AWGN waveform.

The maximum number of samples depends on the installed ARB options.

Remote command:

`[[:SOURCE<hw>]:BB:ARbitrary:TSIGnal:AWGN:SAMPles` on page 1109

Generate Signal RAM

Generates a signal and uses it as output straight away. The instrument saves the file with a predefined name.

Remote command:

`[[:SOURCE<hw>]:BB:ARbitrary:TSIGnal:AWGN:CREate` on page 1110

5.9 Reducing the crest factor

Reducing the crest factor of waveforms is a function that requires the additional option Crest Factor Reduction (R&S SMW-K548).

See user manual R&S SMW-K548 Crest Factor Reduction.

5.10 Generating multi-segment waveform files

Modern chip technologies implement several communication standards within one chip and rise special verification and test requirements. To fulfill the requirements of these test systems and to enable rapid alternation between different waveforms with differing test signals, the R&S SMW provides the functionality to generate multi-segment waveform files.

This section introduces the concept of the multi-segment waveform files, together with description of the provided settings and some typical configuration examples.

Generation of multi-segment waveform files is possible in configurations with separated baseband sources ("System Configuration > Fading/Baseband Config > BB Source Configuration > Separated").

5.10.1 Required options

See [Chapter 5.7.1, "Required options"](#), on page 315.

Multi-segment waveform files require the corresponding Digital Standard options (R&S SMW-K2xx) of all included standards.

5.10.2 About the multi-segment waveforms

A multi-segment waveform is a composed signal that contains several multiple independent waveforms called segments. Each segment is an independent waveform that can be output with its own marker and clock settings.

The [Figure 5-27](#) shows the principle of building a multi-segment waveform.

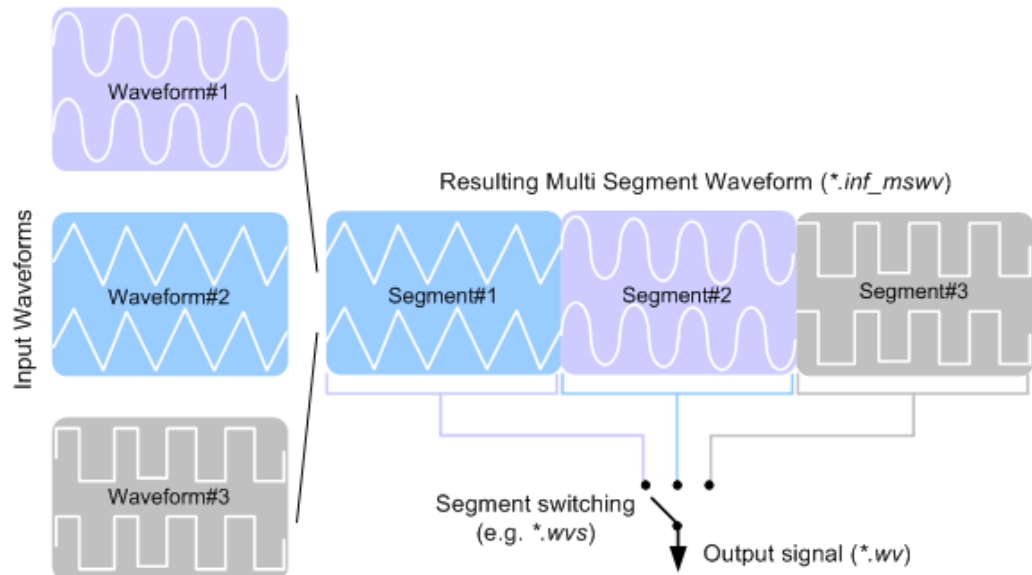


Figure 5-27: ARB Multi-Segment Waveform Concept

It is also possible to create and output a blank segment, i.e. segments containing a zero signal.

Typical applications for the multi-segment mode are described in section [Chapter 5.10.4, "How to create and work with multi-segment waveform files"](#), on page 393.

5.10.2.1 Multi-segment waveforms processing

Processing of the waveform is triggered by the "Create" or "Create and Load" function. To process the waveform, the instrument loads the entire multi-segment waveform into the memory. It is therefore possible to alternate between the individual waveforms without delay due to loading. You can define the output order of the segments, and the segment intended to be output at any given moment.

When the created waveform is loaded, the graphical interface displays information on clock rate, number of samples and creation day. You can also acquire information about the waveform in the dedicated "Waveform Info" dialog.

5.10.2.2 ARB sequencer mode

If high switch over speeds is required, the test signals can be continuously scrolled through with the aid of an external trigger or by applying a predefined "Play List". The R&S SMW provides the possibility to define a sequence of different segments and to

determine whether a segment is played once or repeated several times and to adjust the transition between the segments.

For the correct and fast processing and for seamless transition between the multiple waveforms, segments with a common sample rate are required. If the combined waveforms features different sample rates, they have to be adapted to a common sample rate by resampling. Another advantage of this procedure is the scaling of the instantaneous amplitude of the various waveforms to a common RMS level.

5.10.2.3 File concept

To provide flexible configuration, the building of a composed multi-segment waveform file involves different stages; by completing of each of them, the R&S SMW creates and stores a dedicated file. The following files are used:

- **Configuration list:** is a dedicated file with details on how a multi-segment waveform is made up from different waveforms, the level and the clock rate settings, and the filename. The file extension is `*.inf_mswv`.
You can create any number of configurations as a basis for defining further multi-segment waveforms.
- **Output file:** is the created output multi-segment waveform file. The R&S SMW stores it under a user definable name; as with the standard waveforms, the used file extension is `*.wv`. The instrument appends additional information to the header of the composed waveform file, e.g. user comments.
- **Sequencing list:** are files created in the "Multi Segment Waveform Sequencing" dialog, i.e. when the ARB sequencer mode is used (see [Chapter 5.10.2.2, "ARB sequencer mode"](#), on page 372).
The sequencing list file has an extension `*.wvs` and is automatically assigned to but independent from the multi-segment file. By default, both files have the same name and are located in the same file directory. You can create more than one sequencing list file per multi-segment waveform file.
The sequencing list file carries information only about the segment number, the corresponding waveform filenames are retrieved from the assigned multi-segment waveform file. That is, the same sequencing list file can be reused for different multi-segment waveform files with the same number of segments.
Changes and recalculations of a multi-segment waveform file cause a recheck whether the assigned sequencing list files are still valid. A message is displayed to inform about necessary corrections in the "play list".

5.10.2.4 Impact of the marker settings

The general purpose of the marker signal is the triggering of the DUT (device under test) and the synchronization with other measurement instruments.

For better flexibility, the instrument provides several possibilities to define marker signals:

- **Segment markers**
Because the multiple segments are standalone waveforms, they can already carry marker signals. You can define how the instrument processes these available

marker signals. The instrument can ignore them or use them in the composed multi-segment waveform.

- Additional segment restart and sequence restart markers
Additional marker signal can be defined to restart the multi-segment sequence or to restart each of the multiple segments. A marker output configured and defined for one of these purposes overwrites markers that use the same output connector and that are defined in the individual waveforms.

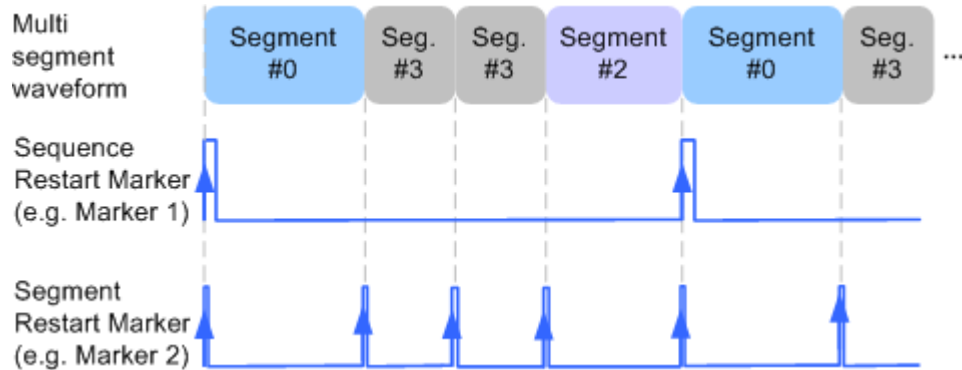


Figure 5-28: Example of marker signals

The segment begin is defined by the low-high slope of the marker, which applies for switching between two segments and if there is a segment replay.

- General marker signals for the composed multi-segment waveform
The "ARB" dialog provides also access to the standard marker settings. Settings other than "unchanged" overwrite existing marker in the waveforms or markers defined for the multi-segment waveform.

The Figure 5-29 shows schematically how the instrument evaluates the priorities of the different marker signals, if multiple marker signals are mapped to the same connector.

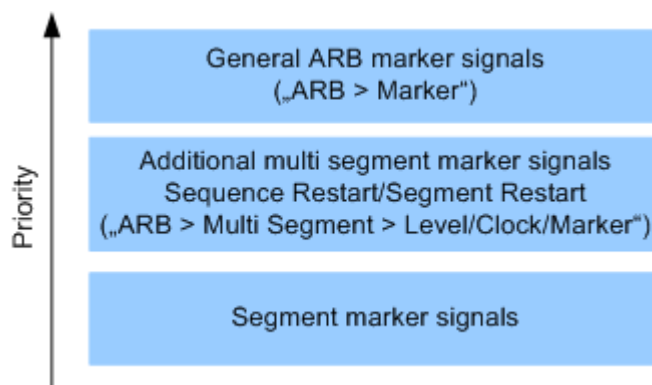


Figure 5-29: Marker priority used by assigning of marker signals to a hardware connector

5.10.2.5 Impact of the trigger settings and next segment settings

The ARB dialog is equipped with the standard (regular) trigger settings. These settings are provided for triggering of the composed multi-segment waveform as a **sequence**,

i.e. as one file. The functions provided in the "Trigger" tab and their effect are described in [Chapter 5.5.1.3, "Baseband trigger signals"](#), on page 245.

This section focuses on the additional settings provided for triggering of the individual segments building the composed multi-segment waveform. These settings are enabled and visible only if a multi-segment waveform is loaded for processing. The settings are grouped in the "Multi Segment Waveform Options/Next Segment Trigger In" section.

The [Figure 5-30](#) illustrates how trigger events affect the processing of the multi-segment waveforms.

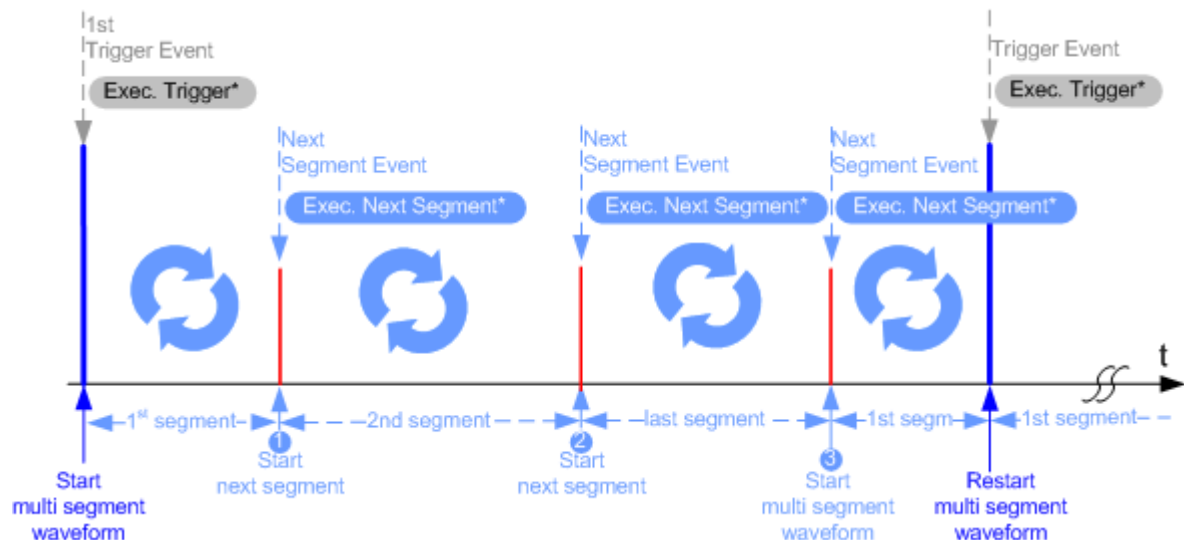


Figure 5-30: Principle of segment triggering

- * = To simplify the description, an internal next segment trigger event ("Exec. Next Segment") and an internal trigger event ("Execute Trigger") are used; an external trigger event has the same effect on the signal generation.
- 1, 2 = Any next segment trigger event (internal or external) causes a switch over to the subsequent available segment in the waveform. The currently output segment (segment filename and segment index) is indicated at "Current Segment".
- 3 = When the last segment of the multi-segment waveform is output, the sequence starts again with the output of the first segment after the subsequent trigger event. Hence, a sequence of external next segment trigger events can be used to cyclically output the segments in the multi-segment file.

Defining the Next Segment Source

As with the standard trigger system, provided are the following two sources for the next segment signal:

- **Internal:** the switch over to the subsequent segment is triggered manually with the "Execute Next Segment" function.
To trigger a switch over to any segment within the multi-segment waveform, change the value of the parameter "Segment".
- **External:** the instrument expects a trigger event ("Global Next Segment") on one of the two provided and configured USER connectors.

Defining the Subsequent Segment

By default, the instrument replays the segments in incremental order, e.g. Segment#1, Segment#2, etc. If other order is required, use one of the following possibilities to define the segment to be played next:

- **Next Segment:** defines the subsequent segment while triggering the segments manually, i.e. by "Next Segment Source > Internal"
- **Sequencing List:** the subsequent segment is defined in the selected play list.

Defining the Transition between the Segments

The R&S SMW provides the parameter "Next Segment Mode" to define the transition to the subsequent segment (see the graphics in [Transition examples](#)).


- **Next Segment:** by receiving a Next Segment Event, the ARB aborts immediately the playing of the current waveform and starts playing the next segment waveform (see [Table 5-20](#)).
- **Next Segment Seamless:** by receiving a Next Segment Event, the ARB completes the processing of the current waveform before starting the next segment waveform (see [Table 5-20](#)).

Use this setting to avoid signal gaps and wrap-around problems. Seamless transition requires segments with equal clock rates.

Another way to generate a multi-segment signal without signal gaps between the segments is to use the provided ARB sequencer mode (see [Chapter 5.10.3.4, "Multi-segment waveform sequencing"](#), on page 385).

The [Table 5-20](#) shows two examples of the transition from a sine-wave signal segment to a sawtooth segment (I channel, upper curve) in the case of next segment external triggering. The left graphic displays an abrupt transition; the right graphic, the **seamless** transition case.

Table 5-20: Transition examples

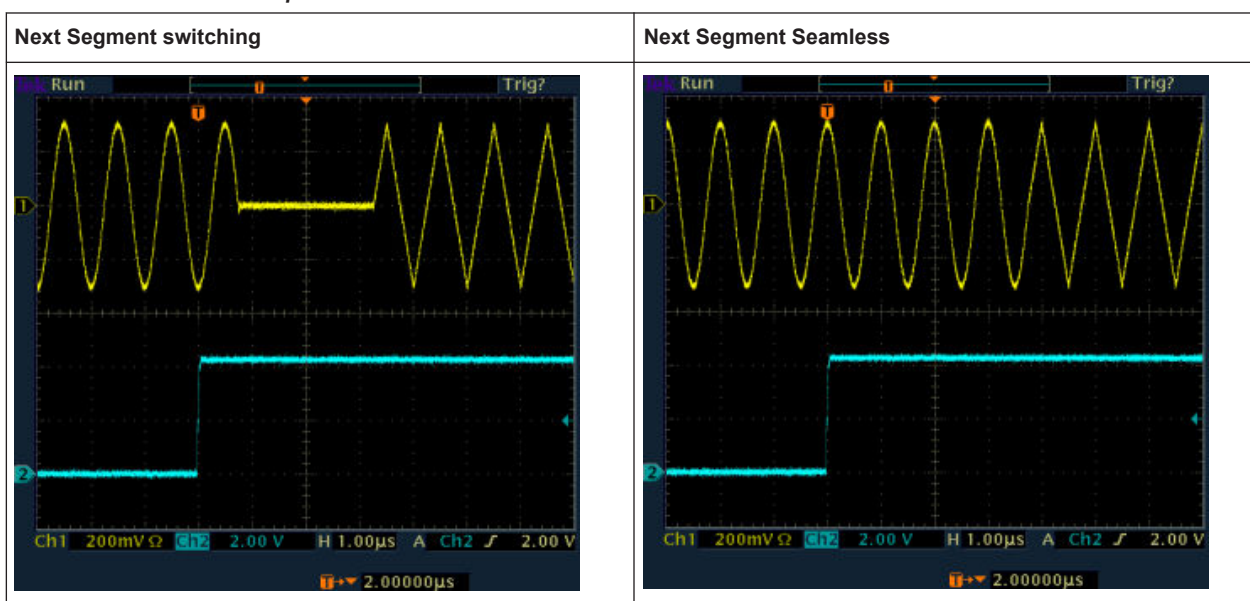

Understanding the Trigger Examples

A simplified diagram in the ARB dialog is intended to explain the effect of the triggering on the signal processing. The currently enabled settings for trigger and next segment mode are considered.



The curves plotted in the dialog are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and the next segment settings more clearly.

- The triangle on the top line denotes a trigger event. A filled triangle on the bottom line denotes a next segment event.
- A green sine wave (or other shape) over a full period indicates one replay cycle of a segment. A shorter example signal indicates a replay cycle which was interrupted, e.g. due to a next segment event (compare the two graphics in [Table 5-21](#)).

Table 5-21: Trigger examples in the ARB dialog


"Next Segment Mode = Next Segment"	"Next Segment Mode = Next Segment Seamless"

5.10.3 Multi-segment settings

Access:

1. Select "Baseband > ARB > General > Create Multi Segment".

The "ARB: Multi Segment" dialog enables direct assignment of waveforms to the multiple segments, adjusting the clock, level, and marker settings of the composed waveform and selecting the output file.

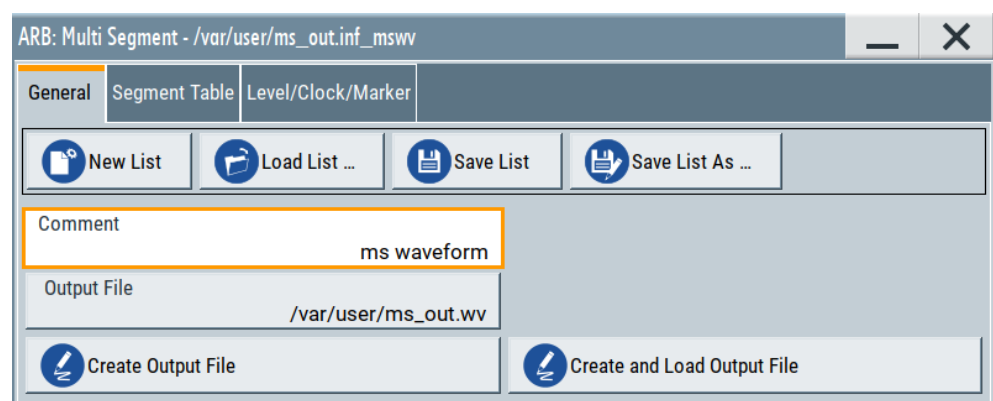

For description on the provided settings, refer to:

[Chapter 5.10.3.1, "Setting for handling the multi-segment files and output file settings"](#), on page 378,

[Chapter 5.10.3.2, "Segment table"](#), on page 380 and

[Chapter 5.10.3.3, "Level / clock / marker settings"](#), on page 383

2. Select "ARB: Multi Segment > General" > **"Create and Load Output File"** to store and load current multi-segment file.
3. Select "Multi Segment" > **"Sequencing List"** to access the settings for configuring a sequencing "Play List" for fast automatic processing of the multi-segment waveform.

For a description of the provided settings, refer to [Chapter 5.10.3.4, "Multi-segment waveform sequencing"](#), on page 385.

4. Select "Baseband > ARB > General".

The "Load Waveform" confirms that the current multi-segment file is loaded (file-name as defined with "Output File").

Note: The provided settings depend on the current waveform.

The "Sequencing List" function for instance requires that:

- Multi segment file is created, i.e. you have executed **"Create Output File/ Create and Load Output File"**.
- "Sequence Table" contains **more than one segment**.

5. Select "Baseband > ARB > Trigger In (MSW)".

For a description of the provided settings, refer to [Chapter 5.10.3.5, "Multi-segment waveform trigger settings"](#), on page 389.

6. Select "Baseband > ARB > General > State > On" to process the configured multi-segment waveform.

The remote commands required to define these settings are described in [Chapter 14.19.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 1095.

• Setting for handling the multi-segment files and output file settings	378
• Segment table	380
• Level / clock / marker settings	383
• Multi-segment waveform sequencing	385
• Multi-segment waveform trigger settings	389

5.10.3.1 Setting for handling the multi-segment files and output file settings

Access:

1. Select "Baseband > ARB > General > Create Multi Segment".

The "General" tab comprises standard functions for file handling, like selecting and loading of files, or determining the output filename.

2. Perform one of the following:

- Select "New List" to create a multi-segment waveform file
- Select "Load List" to load an existing one

3. Add a comment and select "Output File" to define the filename the multi-segment waveform is created at.

Note: The provided settings depend on the current waveform.

The "Sequencing List" function for instance requires that:

- Multi segment file is created, i.e. you have executed "**Create Output File/ Create and Load Output File**".
- "Sequence Table" contains **more than one segment**.

Settings:

New List.....	379
Load List.....	379
Save List/Save List As.....	379
Sequencing List.....	379
Comment.....	380
Output file.....	380
Create/Create and Load.....	380

New List

Accesses the standard "Create Multi Segment Waveform List" function to enter the name of the new file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:SElect` on page 1123

Load List

Accesses the standard "File Select" function to select the configuration file to be edited.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:CATalog?` on page 1120

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:SElect` on page 1123

Save List/Save List As...

Saves the current entries of the [Segment table](#) in a configuration list (file), including the level mode, clock mode, segment marker mode, and output filename settings.

See also [Chapter 5.10.2.3, "File concept"](#), on page 373.

Consider also the following remote control commands:

- To define the configuration file (* .inf_mswv) used by the calculation of the output file:
 - `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CREate`
 - `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CLOad`
- To define the filename of the output waveform file (* .wv):
 - `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:OFILe`

Remote command:

n.a.

Sequencing List

Accesses the dedicated dialog for configuring the associated play lists, see [Chapter 5.10.3.4, "Multi-segment waveform sequencing"](#), on page 385.

This function is enabled, if a multi segment file is created or created and loaded.

Remote command:
n.a.

Comment

Adds a comment to the composed multi-segment file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:COMMeNt` on page 1122

Output file

Accesses the standard "File Select" dialog function and requests the filename for the multi-segment waveform to be calculated.

An output filename is required for further processing of the multi-segment waveform:

- For the internal storage triggered by the "Save List" function
- For the calculation and creation of the multi-segment waveform, triggered by the "Create" or "Create and Load" function.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:OFILe` on page 1122

Create/Create and Load

- "Create"
Creates a multi-segment waveform using the current entries in the [Segment table](#).
- "Create and Load"
Creates a multi-segment waveform and loads it in the ARB generator.

The R&S SMW stores the multi-carrier waveform as file with filename as specified with parameter [Output file](#).

Depending on the configuration of the multi-carrier waveform, calculation takes some time. Use the "Abort" function, to interrupt the calculation.

Remote command:

To define the configuration file (*.inf_mswv) used by the calculation of the output file:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CREate`

Or `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CLoad`

To define the filename of the output waveform file (*.wv):


`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:OFILe`

5.10.3.2 Segment table

Access:

1. Select "Baseband > ARB > General > Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table".
4. Select "Append" to add *existing* waveform segments.

5. Select "Append Blank" to add a blank segment and configure the "Blank Segment Settings" as required.

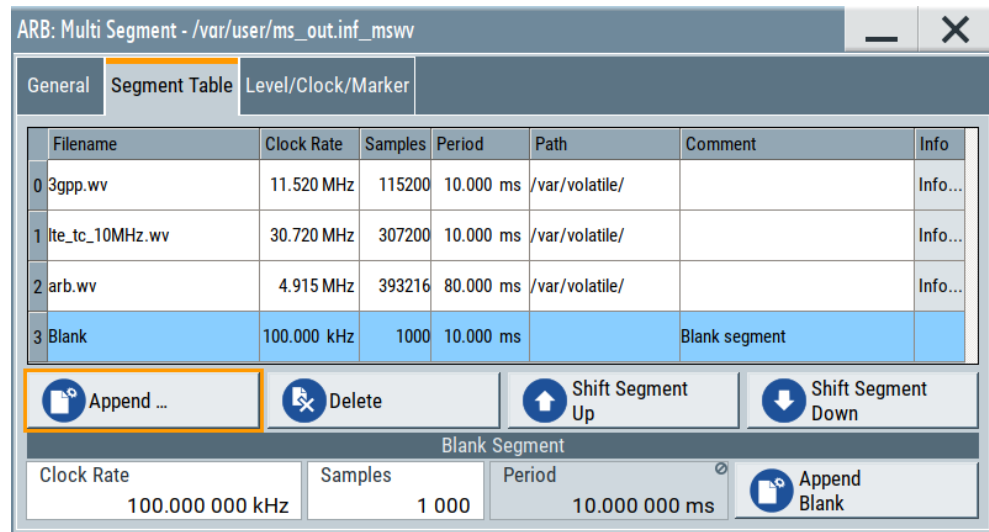

This section explains the settings, necessary to create and adjust the contents of the multi-segment file.

Settings:

Segment Table.....	381
Append/Delete/Shift Seg. Up/Down.....	382
Blank Segment.....	382

Segment Table

The table lists the individual waveforms (segments) of the selected multi-segment waveform. The information about the segments is retrieved from the tags of the corresponding waveform files.

"Segment#"	Indication of segment index. Within the manual and remote control configuration, this segment index indicates the segment explicitly. Tip: Use the segment index, for example, to define the subsequent sequence to be output in Next Segment Mode "Next Segment" or "Next Segment Seamless".
"Waveform"	Indication of the waveform filename of the segment.
"Clock Rate"	Indication of the clock rate of the selected waveform.
"Samples"	Indication of the number of samples in the segment.
"Period"	Indication of the segment duration.
"Path"	Indication of the location of the waveform file used for the corresponding segment.

"Comment"

Indication of the possible comment contained in the waveform.

"Info"

Indication of the possible comment contained in the waveform.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:SEGment:CATalog?`
on page 1117

Append/Delete/Shift Seg. Up/Down

Standard handling functions:

"Append"

Opens the standard "File Select" dialog for navigation to and selection of the waveform file to be added on the end of the existing list. Only non-multi segment waveforms can be loaded.

"Delete"

Removes the selected entry from the table. The waveform file itself is however not deleted.

"Shift Segment Up"/"Shift Segment Down"

Rearranges the segments, i.e. moves the selected segment up and down.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:SEGment:APPend`
on page 1122

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:DELeTe` on page 1122

Blank Segment

Comprises the settings of a blank segment. A blank segment is a zero signal with defined clock rate and number of samples.

"Clock Rate"

Selects the clock rate of the blank segment.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend` on page 1120

"Samples"

Selects the number of samples for the blank segment.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend` on page 1120

"Period"

Displays the resulting period for the blank segment.

"Append Blank"

Adds the blank segment to the multi-segment file.


Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend` on page 1120

5.10.3.3 Level / clock / marker settings

Access:

1. Select "Baseband > ARB > General > Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table" and configure the segments.
4. Select "ARB: Multi Segment > Level/Marker/Clock".

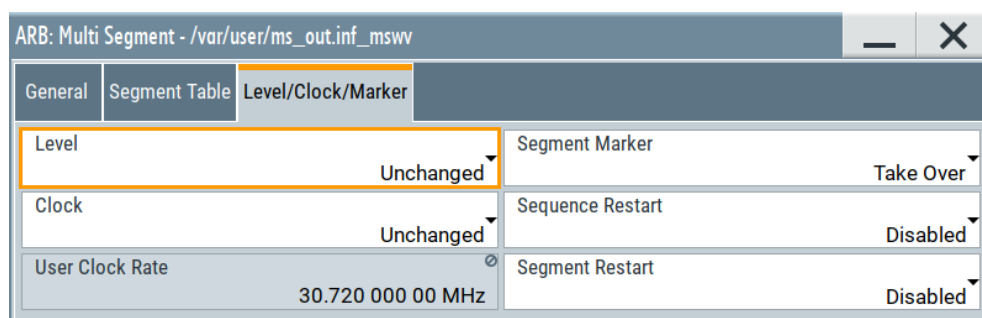

The "Level/Marker/Clock" tab provides the parameters necessary to adjust the level, marker and clock settings for the selected multi-segment waveform file.

Settings:

Level.....	383
Clock.....	383
User Clock Rate.....	384
Segment Marker.....	384
Sequence Restart.....	384
Segment Restart.....	385

Level

Defines the way the instrument determines the output level of each of the multiple waveforms.

- | | |
|-------------|--|
| "Unchanged" | Concerning the level settings, the segments are output exactly as defined in the individual files. The "Level" display applies only to the segment with the highest RMS value. Sometimes, the remaining segments are output at a lower level than the displayed value. |
| "Equal RMS" | Segments are output so that all segments have the same RMS value. The "Level" display applies to all segments. |

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:LEVel[:MODE]
```

on page 1121

Clock

Defines the way the instrument determines the clock rate of each of the multiple waveforms.

"Unchanged"	Each segment is output with the clock rate defined in its waveform file. Note: Segments with equal clock rates are required for "Next Segment Mode > Next Segment Seamless".
"Highest"	All segments are output at the highest available clock rate. Note: Trade-off between fast switch over and computing time. This mode provides short switch over times between segments. However, the computing time increases because the individual segments are resampled.
"User"	All segments are output at the clock rate defined by the parameter "User Clock". This mode is a trade-off between fast switch over and computing time, too.

Remote command:

`[:SOURCE<hw>] :BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE`
on page 1121

User Clock Rate

Defines the sample rate used for multi-segment waveform output, if "Clock Mode > User" is selected.

Remote command:

`[:SOURCE<hw>] :BB:ARbitrary:WSEgment:CONFigure:CLOCK` on page 1121

Segment Marker

Defines the way the marker information within the separate segments is processed, see also [Chapter 5.10.2.4, "Impact of the marker settings"](#), on page 373.

"Ignore"	The marker information carried in the individual segment waveform files is not considered.
"Take Over"	The output waveform file contains the marker information as configured in the individual waveform files.

Remote command:

`[:SOURCE<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE`
on page 1119

Sequence Restart

Enables/disables the generation of an extra restart marker in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered, see also [Chapter 5.10.2.4, "Impact of the marker settings"](#), on page 373.

"Disable"	No additional marker is generated.
"Marker 1, 2, 3"	Generates a restart marker signal at the beginning of the first segment of the complete multi-segment sequence.

Remote command:

`[:SOURCE<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment`
on page 1119

Segment Restart

Enables/disables the generation of an extra restart marker in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered, see also [Chapter 5.10.2.4, "Impact of the marker settings"](#), on page 373.

"Disable" No additional marker is generated.

"Marker 1, 2, 3"

Generates a restart marker signal at the beginning of each segment. The segment begin is defined by the low-high slope of the marker signal, which applies for switching between two segments and if there is a segment replay.


Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:ESegment`
on page 1119

5.10.3.4 Multi-segment waveform sequencing

Access:

1. Select "Baseband > ARB > General > Create Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table" and configure a waveform with more than one segment.
4. Select "ARB: Multi Segment > Level/Marker/Clock" and adjust the clock settings so that all segments use the same clock rate.
5. Select "ARB: Multi Segment > General" > **"Create Output File/Create and Load Output File"**.
6. Select "Sequencing List..."
7. Select "New" or "Load" to load a sequencing list file.

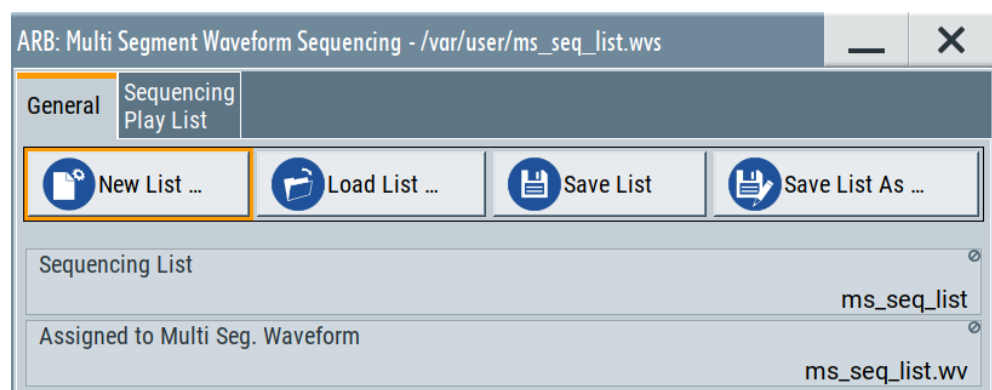


8. Select "ARB: Multi Segment Waveform Sequencing > Sequencing Play List" to create a "play list".

A new sequencing list contains no information.

9. Use the "Append/Delete" and "Up/Down" functions to configure the order the segments are processed.

The user interface shows the configured play list in form of a "Sequencing Graphic".

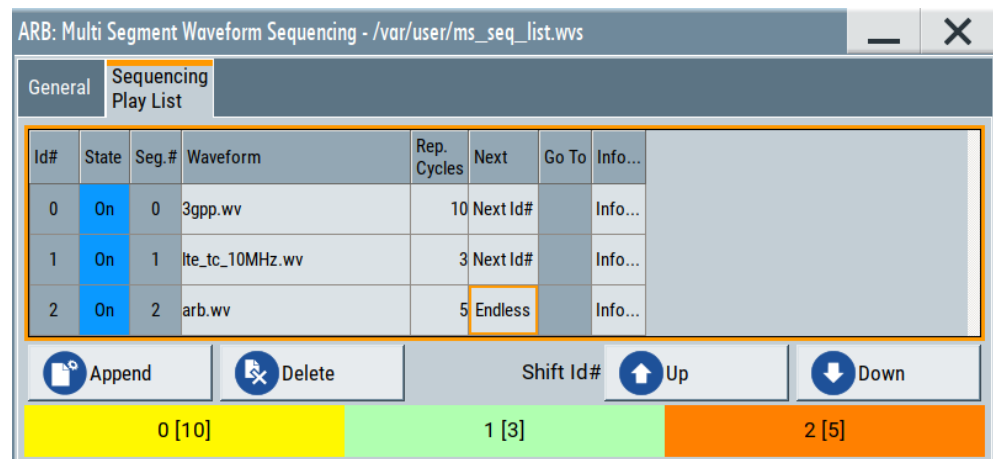

Refer to "[Sequencing play list settings](#)" on page 387 for description of the provided settings.

10. Select "ARB: Multi Segment Waveform Sequencing > General > Save" to store the "play list".
11. Select "ARB: Multi Segment > General > Create and Load Output File" to store and load current multi-segment file.
12. To enable the instrument to use the configured "play list", select "ARB > Next Segment Waveform Options > Next Segment Mode > Sequencer".



All segments in a "play list" must have the same clock rate.

Settings:

- [General settings](#).....386
- [Sequencing play list settings](#).....387

General settings

Access:

- Select "Baseband > ARB > General > Multi Segment > Sequencing List...".

Settings:

New/Load Sequencing List.....	387
Save List/Save List As.....	387
Sequencing List.....	387
Assigned to Multi Seg. Waveform.....	387

New/Load Sequencing List

Accesses the standard "Select Sequencing List" function to define the name of the new play list file or select of an existing one.

Remote command:

`[:SOURCE<hw>] :BB:ARbitrary:WSEgment:SEquence:SElect` on page 1117

Save List/Save List As

Saves the current entries of the table in a play list file. Play list files have the file extension *.wvs.

The default filename of the play list file is the same as the multi-segment waveform filename, but it can be changed.

Sequencing List

Displays the name of the selected sequencing list file, i.e. the file with the "play list" settings (see [Chapter 5.10.2.3, "File concept"](#), on page 373).

Remote command:

n.a.

Assigned to Multi Seg. Waveform

Displays the name of the multi-segment waveform file the current sequencing list file is assigned to.


Remote command:

n.a.

Sequencing play list settings

Access:

- Select "Baseband > ARB > General > Multi Segment > Sequencing List... > Sequencing Play List".

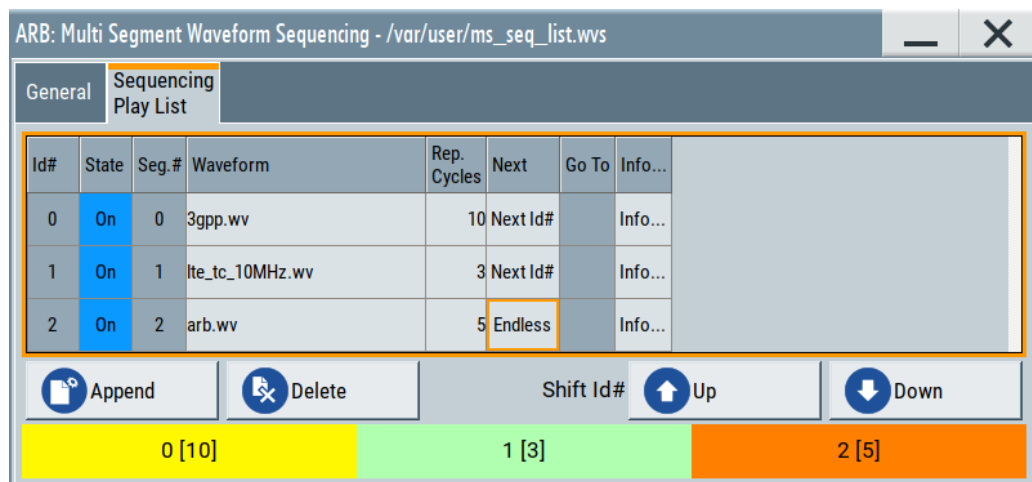**Settings:**

Sequencing Play List.....	388
L Next.....	389
L Append.....	389
L Delete.....	389
L Shift Id# Up/Down.....	389
Sequencing Graphic.....	389

Sequencing Play List

The "Sequencing Play List" table defines the sequence order the waveform file segments are processed and how many times each of them is repeated.

"Id#"	Indicates the row number.
"State"	Enables/disables the selected row. Only active segments are processed.
"Segment#"	Indicates the segment index. The sequencing list file carries information only about the segment index, the corresponding filenames are retrieved from the assigned multi-segment waveform file.
"Waveform"	Indicates the waveform file mapped to the corresponding segment. The filename is retrieved from the assigned multi-segment waveform file. Available are only waveform files from the pool of segments of the selected multi-segment waveform file.
"Repetition Cycles"	Sets the number of times the selected segment is cyclically repeated before the next segment in the sequence is processed.
"Info"	Opens a dialog with detailed information about the currently selected waveform.

Remote command:

See ["Append"](#) on page 389

Next ← Sequencing Play List

Determines the action after completing the current one, like for instance which segment is processed after the processing of the current one is finished.

"Next Id#"	The next active segment in the play list is processed.
"Blank"	After the processing of the current segment is completed, the signal output is stopped until a signal restart like a retrigger signal is received. A restart signal causes a complete restart of the sequencing play list.
"Endless"	The current segment is replayed until a signal restart like a retrigger signal is received and the complete sequencing play list is restarted. Only active segments are considered.
"Goto Id#"	Determines the row number of the segment to be processed next. This feature is limited to the first 32 rows.

Append ← Sequencing Play List

Inserts a new row at the end of the sequencing play list table.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:SElect](#) on page 1117

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:APPend](#) on page 1117

Delete ← Sequencing Play List

Deletes the selected row.

Shift Id# Up/Down ← Sequencing Play List

Rearranges the rows, i.e. moves the selected row up and down.

Sequencing Graphic

Displays the play list graph according to the current configuration.

The graph shows the segment sequence, the segment number, and the number of times, the segment is repeated; considered are only the active segments.


5.10.3.5 Multi-segment waveform trigger settings

The settings in the "Trigger In (MSW)" tab are visible, only if a multi-segment waveform is loaded into the ARB.

Access:

1. Enable and load a multi-segment waveform in the ARB, see [Chapter 5.10.3, "Multi-segment settings"](#), on page 377.

2. Select "Baseband > ARB > Trigger In (MSW)".

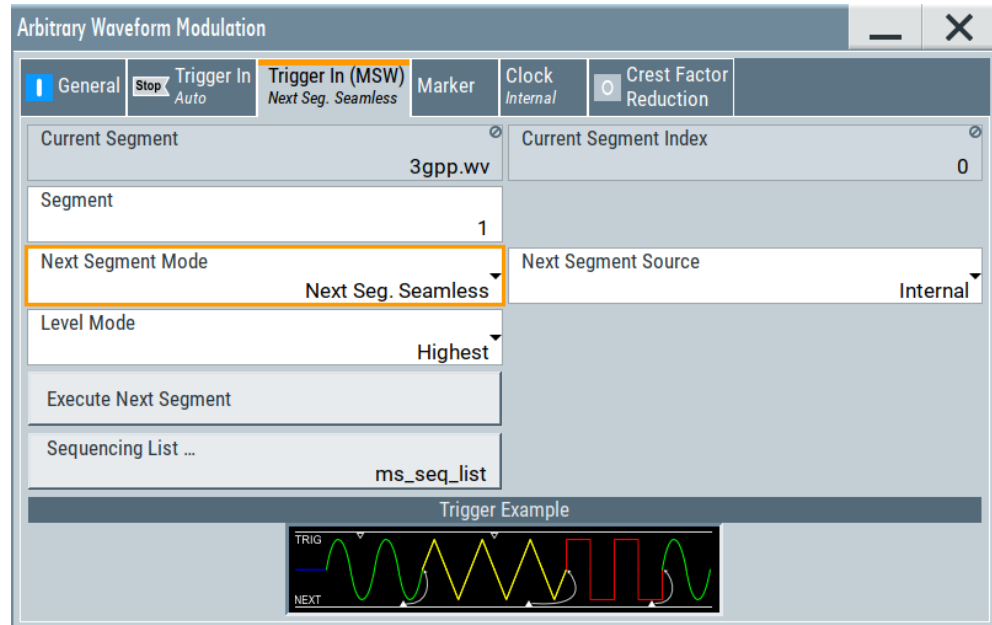

The "Next Segment Trigger In" section comprises the settings necessary to adjust the trigger for switching between the segments of a multi-segment waveform. The parameters displayed depend on the selected trigger source.

Settings:

Current Segment/Current Segment Index.....	390
Segment.....	390
Next Segment Mode.....	391
Next Segment Source.....	392
Level Mode.....	392
Execute Next Segment.....	392
Sequencing List.....	392
Trigger Example.....	392

Current Segment/Current Segment Index

Indicates the waveform segment (segment filename and index) that is output.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment?` on page 1115

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:NAME?` on page 1116

Segment

Selects the waveform segment to be output after the segment indicated as "Current Segment". This parameter determines the start segment when switching on the ARB and enables switching over to any other segment.

The following events cause a switch over:

- An external next segment trigger event
- An internal segment trigger, that is a change in the segment index in the "Segment" field

Use the parameter [Next Segment Mode](#) to define whether the new segment is generated immediately or only after the previous segment has been fully generated (wrap around). The subsequent trigger event after the last segment causes the first segment to be output again.

For more information, see [Chapter 5.10.2.5, "Impact of the trigger settings and next segment settings"](#), on page 374.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:NEXT](#) on page 1116

Next Segment Mode

Defines the way the **switch over between the segments** in a multi-segment waveform is executed.

The regular trigger mode for starting the waveform generation and **triggering the whole multi-segment sequence** is set with the parameters in the "ARB > Trigger" tab. The segment currently being output is displayed at "Current Segment". The "Trigger Example" graph displays schematically the waveform output, depending on the activated trigger and the next segment settings.

For background information, refer to [Chapter 5.10.2.5, "Impact of the trigger settings and next segment settings"](#), on page 374.

For detailed information on how the regular trigger signal affects the multi-segment waveform processing in combination with the different values for "Next Segment Mode", refer to [Chapter 5.10.5, "Reference to triggering of multi-segment waveforms"](#), on page 398.

Note: The seamless switch over and the sequencer mode require segments with equal sample rate.

"Same Segment"

The processing of the multi-segment waveform file is similar to the processing of a non-multi segment waveform, i.e. there is no switching to consecutive segment upon the receiving of a trigger event. To trigger switching between the segments, change the segment index in the "Segment" field.

"Next Segment"

The current segment ceases to be output when a trigger event for a new segment occurs, and the new segment starts to be output after a system-imposed signal gap.

"Next Segment Seamless"

If all segments have the same sample rate, the new segment is not output until the whole of the current segment has been output (wrap around), i.e. the signal transition is seamless.

"Sequencer"

The waveform files are processed according to the order and repetition cycles defined in the special sequencing list file (*.wvs) assigned to the multi-segment waveform file. This "play list" is defined in the [Multi-segment waveform sequencing](#) dialog.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:SMODE](#) on page 1119

Next Segment Source

Determines whether the next segment is switched upon receiving of an external trigger signal or upon executing of software next segment trigger (see [Figure 5-30](#)).

This parameter is disabled, if a sequencing play list is used.

"Internal" Switch over to any segment is triggered manually with the "Execute Next Segment" function.

"External Global Next Segment"

The trigger event for switching to the next segment is input as configured on one of the USER x connectors.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:NEXT:SOURce](#) on page 1116

Level Mode

Sets how the instrument levels the individual segments in a multi-segment signal. The parameter is important, if waveforms with different crest factors are used.

"Highest" All segments are output at the highest available crest factor.

"Unchanged" Each segment is output with the crest factor defined in its waveform file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:LMODe](#) on page 1117

Execute Next Segment

For "Next Segment Source = Internal", triggers manually switch over to the subsequent segment in the multi-segment file. The subsequent segment can be any segment within the multi-segment file and is defined by the parameter "Segment"

This parameter is disabled, if a sequencing play list is enabled.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:NEXT:EXECute](#) on page 1116

Sequencing List

Opens a dialog box for defining the "play lists", see [Chapter 5.10.3.4, "Multi-segment waveform sequencing"](#), on page 385.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:SElect](#) on page 1117

Trigger Example

Displays an example of a multi-segment waveform. The currently enabled trigger and next segment mode are considered. After the instrument is switched on, the graph of the last loaded waveform is displayed.

Note: The curves plotted in this dialog box are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and next segment settings more clearly.

Remote command:

n.a.

5.10.4 How to create and work with multi-segment waveform files

This section provides step-by-step instructions on how to configure and use the multi-segment settings. The [Figure 5-31](#) shows the essential stages of multi-segment waveform configuration, together with the corresponding user interface dialogs and if applicable, the corresponding file extensions. Perform the necessary settings, enable the signal generation, and provide trigger signal.

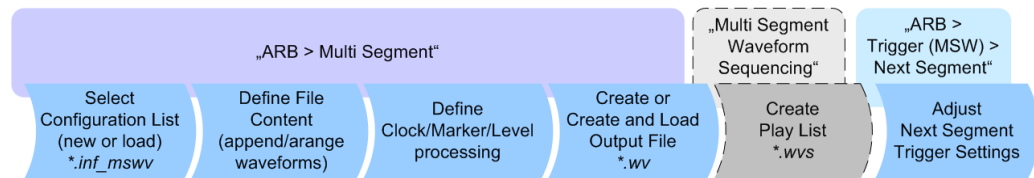


Figure 5-31: Basic workflow for generation of multi-segment waveforms

Generating a multi-segment waveform file (basic workflow)

1. In the "ARB > Create Multi Segment > General" dialog, select "New List" to create an empty list.
2. Use the "ARB: Multi Segment > Segment Table > Append" function to add two or more waveform files.
3. In the "ARB: Multi Segment > Level/Clock/Marker" dialog, adjust the "Level", "Clock", and "Segment Marker" settings.
4. Select the "ARB > Multi Segment > General > Output File" and enter filename.
5. Select "ARB > Multi Segment > General > Save List" to store the configuration file.
6. Select "ARB > Multi Segment > General > Create Output File" or "Create and Load Output File" to create and load the multi-segment waveform.
7. Select "ARB > Multi Segment > General > State > On".

Tip: Try out the built-in tutorial.



The following description emphasizes on the settings required to fulfill the particular task or achieve the desired performance; standard basic settings are not discussed.

All provided examples use the example segment sequence as shown on [Figure 5-32](#).

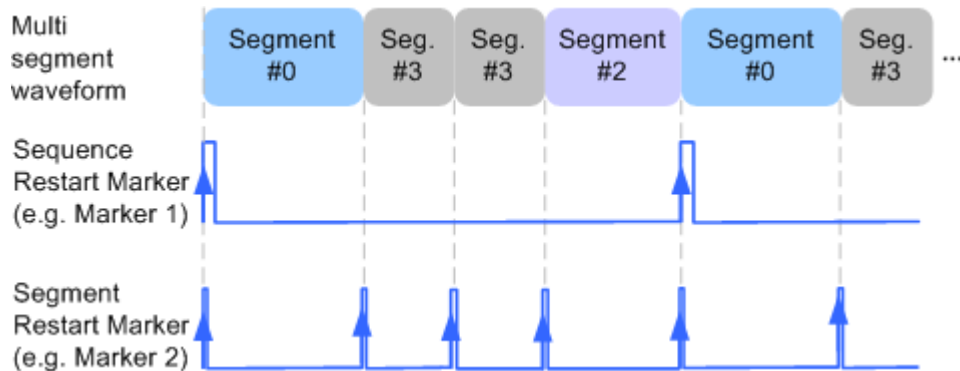


Figure 5-32: Example: multi-segment sequence with marker signals

See how to:

- ["To apply a manual segment switch to the output segments in the required order"](#) on page 394
- ["To generate a multi-segment signal without signal interruptions"](#) on page 395
- ["To enable an external triggering for high-speed switch over"](#) on page 396
- ["To configure a multi-segment sequence using the play list function"](#) on page 397
- ["To add marker signals"](#) on page 398

To apply a manual segment switch to the output segments in the required order

When testing DUTs using different test signals, it may be necessary to switch dynamically and flexibly between any of the test signals, for instance depending on the outcome of the previous test. The following settings enable flexible dynamic switch over between the segments in a multi-segment waveform.

We assume, that a multi-segment sequence composed of 4 segments (Seg#0, Seg#1, Seg#2 and Seg#3) is created and loaded in the ARB (see ["Generating a multi-segment waveform file \(basic workflow\)"](#) on page 393). The required output order of the segments is Seg#0, Seg#3 [2], Seg#2. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

1. Select "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment"
The transition between the segments is abrupt.
2. To enable manual next segment triggering, select "ARB > Trigger In (MSW) > Next Segment Source = Internal".
3. To enable manual triggering, select "ARB > Trigger In > Mode = Armed Auto".
Select "ARB > Trigger In > Source = Internal".
4. Execute "ARB > Trigger In > Execute Trigger" to trigger the signal generation.

The "ARB > Trigger In (MSW)" settings display the currently output segment: "Current Segment Name = Seg#0" and "Current Segment Index = 0". Seg#0 is output continuously.

5. Set "ARB > Trigger In (MSW) > Segment = 3" to output the second segment in the sequence order.

The parameter "ARB > Trigger In (MSW) > Current Segment Index" changes to segment index 3. Seg#3 is output continuously.

6. Execute "ARB > Trigger In > Execute Trigger" to restart Seg#3.
7. Set "ARB > Trigger In (MSW) > Segment = 2" to output the third segment in the sequence order.

Seg#2 is output continuously.

To switch over to Seg#0, change the "ARB > Trigger In (MSW) > Current Segment Index", etc.

Tip: The ARB sequencer mode provides the necessary settings to achieve the same goal in a more convenient way, see ["To configure a multi-segment sequence using the play list function"](#) on page 397



Faster flexible dynamic switch over

When using **remote control** via an external computer, the following settings enable switching times of approx. 20 ms for segments with the same sample rate and approx. 200 ms for segments with different sample rates:

- "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment"
- "ARB > Trigger In > Trigger Mode = Auto"
- "ARB > Trigger In > Trigger Source = Internal"

To generate a multi-segment signal without signal interruptions

Testing receivers requires a continuous output of different test signals without interrupting the signal. The test signals then produce a complex total signal with no signal gaps on switch over. Control procedures can use a simulated back channel of the receiver (trigger line or remote control).



Switching times depend on the length of the segment currently being output, because switch over to the next segment does not take place until the current segment ends.

To overcome wrap-around problems and generate multi-segment signals without signal gaps between the segments, consider the following settings:

1. Enable "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment Seamless"
2. Select "ARB > Trigger In > Trigger Mode = Auto"
3. Select "ARB > Trigger In > Trigger Source = Internal"

4. A segment ("Current Segment") is output continuously as long as the value of the parameter "Segment" is not changed. Change the value of the parameter "ARB > Trigger In (MSW) > Segment" to select the segment index processed after completing the current one.
5. The seamless transition between the segments requires waveforms with equal clock rate.
If the waveforms feature different sample rates, select "ARB > Multi Segment > Level/Clock/Marker > Clock Mode = Highest" or "Clock Mode = User" to resample the waveforms.

To enable an external triggering for high-speed switch over

To test DUTs/chips using different test signals at high throughput requires fast switch over (for instance when testing ATE devices during manufacture).

We assume, that the required multi-segment sequence is created and loaded in the ARB (see ["Generating a multi-segment waveform file \(basic workflow\)"](#) on page 393). The segments are *output in incremental order*. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on. An external global or local trigger source is connected to the instrument and the corresponding connectors are configured.

The following settings enable **switching times of approx. 5 us** and the test signals are scrolled through with the aid of an external trigger signal:

1. Select "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment".
2. Select "ARB > Trigger In (MSW) > Next Segment Source = External Global Next Segment 1".
3. Do not change the displayed segment index (parameter "ARB > Trigger In (MSW) > Segment").
4. Enable "ARB > Trigger > Trigger Mode = Auto"
5. Select "ARB > Trigger > Trigger Source = External Global/Local Trigger"
6. If the waveforms in the multi-segment file feature different sample rates, select "ARB > Multi Segment > Level/Clock/Marker > Clock Mode = Highest" or "Clock Mode = User" to resample the waveforms.

The switch over between the segments is triggered by receiving of an external trigger event. The segments are output in incremental order, i.e. Seg#0, Seg#1, etc. The currently processed segment ("Current Segment") is output continuously as long as a new trigger event is received. A new trigger event aborts the output of the current segment immediately and starts the processing of the next one in the sequence.

Tip: To output the segments in any order, use the ARB sequencer mode, see ["To configure a multi-segment sequence using the play list function"](#) on page 397.

For general description on the configuration of the trigger and connector settings: See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

To configure a multi-segment sequence using the play list function



The ARB Sequencer mode requires waveform files with equal clock rate!

We assume, that a multi-segment sequence composed of four segments (Seg#0, Seg#1, Seg#2 and Seg#3) is created and loaded in the ARB (see ["To apply a manual segment switch to the output segments in the required order"](#) on page 394). The required output order of the segments is Seg#0, Seg#3 [2], Seg#2. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

The following settings show an example of how to configure this segment output order with the help of the ARB sequencing function.

1. In the "ARB > Multi Segment" dialog, load the previously created list and execute "Create and Load".
2. Select "ARB > Multi Segment > General > Sequencing List".
The "Multi Segment Waveform Sequencing" dialog opens. A new play list is created and assigned to the current multi-segment waveform file.
3. Select "ARB: Multi Segment Waveform Sequencing > Sequencing Play List" and use the "Append" function to add new rows to the list and configure the settings as follows:
 - a) Id#0: Seg#0, "Rep. Cycles = 1", "Next = Next Id#"
 - b) Id#1: Seg#3, "Rep. Cycles = 2", "Next = Next Id#"
 - c) Id#2: Seg#2, "Rep. Cycles = 1", "Next =Goto Id", "Go To = 0" (creates a loop to the first segment in the sequence)

General		Sequencing Play List						
Id#	State	Seg.#	Waveform	Rep. Cycles	Next	Go To	Info...	
0	On	0	arb_sine.wv	1	Next Id#		Info...	
1	On	1	arb_constIQ.wv	2	Next Id#		Info...	
2	On	2	arb_rect.wv	1	Goto Id	0	Info...	

Append
Delete
Shift Id#
Up
Down

0 [1]
1 [2]
2 [1]
Goto Id#0

4. Select "ARB: Multi Segment Waveform Sequencing > General > Save List" to store the configured play list.
5. To enable the instrument to use this play list, select "ARB > Trigger (MSW) > Next Segment Mode > Sequencer".
6. Select "ARB > Trigger (MSW) > Trigger Mode = Armed Auto"

7. Select "ARB > Trigger (MSW) > Trigger Source = Internal"

The segments are played back (output) as defined in the sequencing list, i.e. the switch over to the next segment is performed automatically according to the rules and segment order defined in the "Sequencing Play List".

To add marker signals

We assume, that a multi-segment sequence composed of the segments Seg#0 [1], Seg#3 [2], Seg#2 [1] is created and loaded in the ARB (see ["To configure a multi-segment sequence using the play list function"](#) on page 397). The multi-segment sequence starts with Seg#0 and this segment is output once. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

To add marker signals at the beginning of each segment and at the beginning of the sequence (see [Figure 5-32](#)), two additional marker signals, "Marker 2" and "Marker 1", are enabled and inserted into the multi-segment waveform.

1. Select "ARB > Marker > Marker Mode > Marker 1/Marker2 = Unchanged" to enable taking over of the marker signals defined inside the multi-segment sequence. If necessary, adjust the marker delay settings.
2. Select the "Block Diagram > Trigger/Marker/Clock" and map the "Logical Signals > Marker 1/Marker 2" to the desired connectors ("Global Connectors > User x > Direction = Output" and "Signal = Baseband Marker 1/Baseband Marker 2")
3. In the "ARB > Multi Segment > Level/Clock/Marker" dialog, select "Segment Marker = Ignore"
4. Enable "Level/Clock/Marker > Sequence Restart = Marker 1"
5. Enable "Level/Clock/Marker > Segment Restart = Marker 2"

An extra restart marker signal is generated at the beginning of each segment and the beginning of the waveform. These restart markers *overwrite* the existing Marker 1 and Marker 2 trace signals defined in the waveforms of the individual segments.

5.10.5 Reference to triggering of multi-segment waveforms

Signal generation of multi-segment waveforms takes place differently according to the trigger selected in the "ARB > Trigger In" section. The sections provide a detailed explanation of the effect of a trigger event on the multi-segment waveform processing, depending on the enabled "Next Trigger Mode". Refer to [Chapter 5.10.2.5, "Impact of the trigger settings and next segment settings"](#), on page 374 for background information.

5.10.5.1 Triggering in "Next trigger mode = same segment"

Depending on the trigger setting, the currently selected segment is continuously output either immediately or after a trigger event.

Table 5-22: Waveform triggering: "Next Trigger Mode = Same Segment", "Trigger Source = Internal"

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously. Trigger events are ignored. If the segment is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. Further trigger events are ignored. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Retrigger"	Output starts at once and the segment is generated continuously, a trigger event causes a restart. If the segment is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Retrigger"	Output starts after the first trigger event. The segment is then generated continuously. Further trigger events cause a restart. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Single"	Output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart. If the segment is changed in "Segment", signal output is not stopped. The new segment is not output until a trigger occurs.

5.10.5.2 Triggering in "Next trigger mode = next segment"

Depending on the trigger setting, the segment selected under "Segment" is output either immediately or after a trigger event. If the segment index is changed in "Segment", the new segment is not output until a trigger occurs.

Table 5-23: Waveform triggering: "Next Trigger Mode = Next Segment", "Trigger Source = Internal"

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously. If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Single"	Output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart. If the segment index is changed in "Segment", the new segment is not output until a trigger occurs.

Table 5-24: Waveform triggering: "Next Trigger Mode = Next Segment", "Trigger Source = External"

"Trigger Mode"	Description
"Auto"	<p>Output starts at once and the segment is generated continuously.</p> <p>Further trigger events are ignored. Each next segment trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.</p> <p>If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>
"Armed_Auto"	<p>Output starts after the first trigger event. The segment is then generated continuously.</p> <p>Further trigger events are ignored. Each next segment trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.</p> <p>If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>
"Single"	<p>Output starts after the first trigger event. The segment is then generated once.</p> <p>Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment.</p> <p>If the segment is changed in "Segment", signal output is not stopped. The new segment is not output until a trigger occurs.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>

For description of the "Retrigger" and "Armed_Retrigger" trigger modes, see [Table 5-22](#).

5.10.5.3 Triggering in "Next trigger mode = next segment seamless"

The segment selected under "Segment" is output. This mode is only available if all segments have the same sample rate.

Table 5-25: Waveform triggering: "Next Trigger Mode = Next Segment Seamless", "Trigger Source = Internal"

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously. If the segment is changed in "Segment", the new segment is output seamlessly after the output of the current segment is complete.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Single"	Output starts at once and the segment is generated continuously. Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Segment", the new segment is output seamlessly after the output of the current segment is complete.

Table 5-26: Waveform triggering: "Next Trigger Mode = Next Segment Seamless", "Trigger Source = External"

"Trigger Mode"	Description
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.

For description of the "Retrigger" and "Armed_Retrigger" trigger modes, see [Table 5-22](#).

5.10.5.4 Triggering in "Next trigger mode = sequencer"

The waveform files are processed according to the order and repetition cycles defined in the special sequencing list file (*.wvs) assigned to the multi-segment waveform file.

5.11 Generating multi-carrier signals

To simulate complex multi-carrier scenarios with different baseband signals, the R&S SMW provides the possibility to generate multi-carrier waveforms. These waveforms can consist of up to 512 carriers, each modulated by the same or by different user-selectable baseband signal.

The multi-carrier waveform is a practical solution for the generation of a complex broadband signal, for example:

- Multi-carrier waveforms build from signals *of different* communication standards (e.g. CDMA2000 or 3GPP FDD)

- Multi-carrier waveforms composed of several signals from *the same* communication standard as in LTE Advanced.

Generation of multi-segment waveform files is possible in configurations with separated baseband sources. That is, "System Configuration > Fading/Baseband Config > BB Source Configuration > Separated".

5.11.1 Required options

See [Chapter 5.7.1, "Required options"](#), on page 315.

Multi-carrier waveform files require the corresponding digital standard options (R&S SMW-K2xx) of all included standards.

5.11.2 About the multi-carrier waveforms

This chapter provides background information on the ARB functionality for generating multicarrier signals and the impact of the provided settings. Refer to [Chapter 5.11.4, "How to use the multi-carrier function"](#), on page 416 for information on how to use the provided settings to configure a multicarrier signal.

The multi-carrier waveforms are convenient way to configure the broadband test signals required for transmitter or receiver tests. Even complex multi-carrier scenarios composed of signals from different digital standards can be created and used for these tests.

Because the multi-carrier files are processed by the ARB generator, the composed waveform file must be created before it is loaded to and played by the ARB. The R&S SMW saves the created multi-carrier waveform file under user definable name; as with the single carrier waveforms, the used file extension is *.wv. The instrument appends additional information to the header of the composed waveform file. When the created waveform is loaded, the graphical interface displays information on clock rate, number of samples and creation day.

Differences between multi-carrier waveform generation and multi-carrier continuous wave generation

By default, the ARB multi-carrier waveform application does not generate a multi-carrier continuous wave (CW) signals that are aligned to the center frequency. Signals generated by the digital standard "Multi Carrier CW" are aligned to the center frequency.

To generate a multi-carrier CW signal, create a constant DC input signal, see ["Create Test Signal"](#) on page 325. Select a signal period, that is matching the carrier frequency distances.

To reach a smooth transition between end and start signal, make sure that the actual carrier frequency offset is rounded: Select "Mode > Equidistant Carrier Spacing" to set a frequency resolution that is the inverse of the signal period of the output signal. See [Chapter 5.11.2.1, "Defining the carrier frequency"](#), on page 403.

General principle for composing the multi-carrier signal

The following is a list of the general steps used for composing the multicarrier signal:

- In the default mode, the up to 512 carriers are equally spaced and centered toward the RF frequency or the baseband DC line.
The carrier spacing is adjustable within the total available bandwidth. Make sure, that the total RF bandwidth of the composed multicarrier signal does not exceed the available RF bandwidth, see data sheet.
- Another possibility is to define the center frequency of each of the carrier individually, see also [Chapter 5.11.2.1, "Defining the carrier frequency"](#), on page 403.
- Each carrier can be separately defined in terms of power, phase and modulated input signal.
To define the leveling of the composed multicarrier signal, use the parameter [Power Reference](#)
- Optionally, crest factor optimization can be applied (see [Chapter 5.11.2.2, "Optimizing the crest factor"](#), on page 404).
- After all multi-carrier processing steps are completed, the instrument calculates the resulting peak and RMS power over the total signal. This value is then written in the waveform file.

5.11.2.1 Defining the carrier frequency

There are two ways to define the carrier frequency of the individual carriers in the multicarrier signal:

- Enabling the **arbitrary carrier frequency** distribution and specifying the carrier frequency of each carrier individually.
- Using the built-in **equidistant carrier spacing** distribution function.
That is, enabling the carriers to be equally spaced and centered toward the RF frequency. The carrier frequencies are automatically calculated depending on the selected number of carriers and the carrier spacing.
The maximum carrier spacing is a function of the available total bandwidth and the selected number of carriers. It is calculated as follows:
Max Carrier Spacing = Total bandwidth / (Number of Carriers - 1)
To avoid wrap-around problems, the effective applied carrier spacing can be slightly modified.

The value of the carrier spacing is rounded in that way that the carrier closest to the center RF frequency shows no phase jump. It is assumed that the carrier is unmodulated.

- For odd number of carriers:
*RoundedCarrierSpacing = 1/OutputSignalDuration*round(CarrierSpacing*OutputSignalDuration)*
- For even number of carriers:
*RoundedCarrierSpacing = 2/OutputSignalDuration*round(0.5*CarrierSpacing*OutputSignalDuration)*

The R&S SMW provides the parameter [Mode](#) for this purpose.

5.11.2.2 Optimizing the crest factor

An introduction to the topic is provided in [Chapter 5.5.1.7, "Methods for optimizing the crest factor"](#), on page 259. This section focuses on the settings provided for and related to the multicarrier signals.

The R&S SMW provides a crest factor reduction in form of an automatic optimization upon selected values for the following parameters:

- **Crest factor optimization mode:** determines whether the phase settings are selectable or internally calculated to fulfill a requirement for the crest factor value.
- **Clipping:** reduces the peak power of the resulting multicarrier signal according to the input parameter "Target Crest Factor"
The resulting clipped peak power is the sum of the RMS level of the unclipped multicarrier signal and the parameter "Target Crest Factor".
Because clipping reduces also the RMS level, the resulting crest factor of the clipped signal is slightly above the "Target Crest Factor".
- **Target crest factor:** determines the target crest factor. A value above the crest factor of the unclipped multicarrier signal has no effect.
- **Filter cut off frequency:** determines the filter parameter of the final lowpass filter. When the cutoff frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal. However, it can also increase the resulting crest factor.

5.11.3 Multi-carrier settings

Access:

- ▶ Select "Baseband > ARB > General > Create Multi Carrier".

The "ARB: Multi Carrier" dialog enables direct configuration of the carrier distribution around the center frequency and adjusting some parameters for improving the signal characteristics.

The dialog is divided into several tabs. In each case, the current setting is displayed in the tab name. The tab "Carrier Table" enables the selection of the waveform files to be processed. Use the "Carrier Graph" to visualize the configured signal.

The remote commands required to define these settings are described in [Chapter 14.19.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 1095.

Settings:


- [General settings](#).....405
- [Carrier table settings](#).....411
- [Carrier table assistant](#).....413
- [Carrier graph](#).....415

5.11.3.1 General settings

Access:

- Select "Baseband > ARB > General > Create Multi Carrier".

This tab comprises settings for selecting the output waveform file, enabling the generation, and the configuration of the carrier distribution.

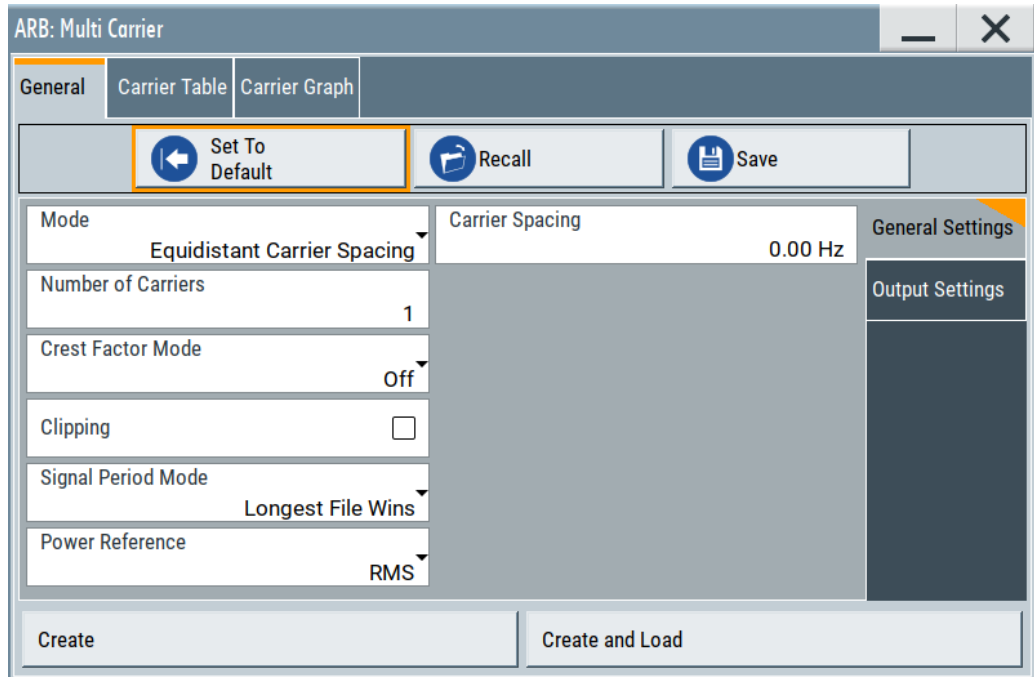

Settings:

Set to Default.....	406
Save/Recall Frame.....	406
Mode.....	406
Number of Carriers.....	406
Carrier Spacing.....	407
Crest Factor Mode.....	407
Clipping.....	407
Target Crest Factor.....	407
Filter Cutoff Frequency.....	407
Signal Period Mode.....	408
Signal Period.....	408
Power Reference.....	408
Output Settings.....	410
L Output File.....	410
L Clock Rate.....	410
L File Size.....	410
Create/Create and Load.....	410

Set to Default

Calls the default settings.

Parameter	Value
"Number of Carriers"	"1"
"Carrier Spacing"	"0 MHz"
"Crest Factor Mode"	"Off"
"Signal Period Mode"	"Longest file wins"

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:PRESet` on page 1124

Save/Recall Frame

Accesses the standard "Save/Recall" dialog, i.e. the standard instrument function for storing and recalling the complete dialog-related settings. Refer to [Chapter 11.4, "Saving and recalling instrument settings"](#), on page 709 for a detailed description.

The multi-carrier settings are saved as files with predefined file extension `*.arb_multcarr`. The filename and the directory are user-definable.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:SETTing:CATalog?` on page 1124

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:SETTing:LOAD` on page 1124

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:SETTing:STORe` on page 1125

Mode

Selects the way the carriers are distributed within the available bandwidth.

"Equidistant Carrier Spacing"

Sets an equidistant carrier spacing distribution, i.e. the carriers are equally spaced and centered toward the RF frequency. The carrier frequencies are automatically calculated depending on the selected number of carriers and the carrier spacing.

"Arbitrary Carrier Frequency"

Enables the specification of the carrier frequency of each carrier individually.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:MODE` on page 1125

Number of Carriers

Sets the number of carriers for the multi-carrier waveform. By default the multi-carrier table lists one carrier. A maximum of 512 carriers can be configured and activated.

When the number of carriers is increased, new lines are added at the end of the table. If these carriers already have been defined before, the settings are preset according to the former settings. Otherwise the parameters are preset with the default values.

See also [Chapter 5.11.2.1, "Defining the carrier frequency"](#), on page 403.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:COUNt` on page 1125

Carrier Spacing

Sets the frequency spacing between adjacent carriers of the multi-carrier waveform.

The carriers are arranged symmetrically around the RF carrier and the maximum carrier spacing is limited to:

$$\text{"Carrier Spacing"} = \text{Baseband bandwidth} / (\text{"Number of Carriers"} - 1).$$

The baseband bandwidth depends on the installed options (see the data sheet).

For more information, see [Chapter 5.11.2.1, "Defining the carrier frequency"](#), on page 403.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:SPACing` on page 1125

Crest Factor Mode

Selects the mode for optimizing the crest factor by calculating the carrier phases. For more information, refer to [Chapter 5.11.2.2, "Optimizing the crest factor"](#), on page 404.

The following modes are available:

"Off"	There is no automatic setting for minimizing or maximizing the crest factor. The "Phase" setting as defined in the carrier table is in use.
"Minimize"	The crest factor is minimized by internally calculating optimized carrier phases. The phase setting displayed in the carrier table is invalid.
"Maximize"	The crest factor is maximized by internally calculating optimized carrier phases. The phase setting displayed in the carrier table is invalid.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CFACTOR:MODE` on page 1126

Clipping

Switches the baseband clipping on and off.

Clipping reduces the peak power of the resulting multicarrier signal according to the input parameter "Target Crest Factor". For more information, refer to [Chapter 5.11.2.2, "Optimizing the crest factor"](#), on page 404.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLIPping[:STATe]` on page 1127

Target Crest Factor

Sets the value of the target crest factor, if baseband clipping is enabled.

A "Target Crest Factor" above the crest factor of the unclipped multicarrier signal has no effect. For more information, refer to [Chapter 5.11.2.2, "Optimizing the crest factor"](#), on page 404.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLIPping:CFACTOR` on page 1127

Filter Cutoff Frequency

Sets the cutoff frequency of the final lowpass filter, if baseband clipping is enabled.

When the cutoff frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal. This process can increase the resulting crest factor. See also [Chapter 5.11.2.2, "Optimizing the crest factor"](#), on page 404.

Remote command:

`[[:SOURCE<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUToff` on page 1127

Signal Period Mode

Defines the way the resulting signal period of the multi-carrier waveform is calculated. The resulting period is always calculated for all carriers in the carrier table irrespective of their state (ON/OFF). Use the "Carrier Table > Info" function to obtain information on the sample rate and file length data of each carrier.

Note: Wrap-around and timing problems can occur when I/Q signals of different length are used. Thus, demodulation of a carrier can be difficult or even impossible.

We recommend that you proceed as follows:

- Consider the timing when creating the input I/Q files.
- Adjust the signal duration to the carrier which is then demodulated.
(In this case, the other carriers are for interfering the signal only.)

These problems do not arise with signals of the same standard (e.g. 3GPP).

The following modes are available:

"Longest File Wins"

The longest I/Q file in the carrier table defines the resulting signal period. Shorter I/Q files are periodically repeated.

"Shortest File Wins"

The shortest I/Q file in the carrier table defines the resulting signal period. Only the first part of longer I/Q files is used.

"User"

The signal period is set manually ([Signal Period](#)). Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

"Least Common Multiple"

The output file duration is the least common multiple of all input file durations.

Remote command:

`[[:SOURCE<hw>]:BB:ARbitrary:MCARrier:TIME:MODE` on page 1128

Signal Period

Sets the signal period in signal duration mode "User". Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

Remote command:

`[[:SOURCE<hw>]:BB:ARbitrary:MCARrier:TIME` on page 1126

Power Reference

Defines the way the individual carriers in a composed multi carrier signal are leveled. The difference between the provided modes is especially important if signals with different crest factors are composed together into a multi carrier signal.

"RMS"

The individual carriers are leveled based on their RMS power and the configured "Carrier Gain".

Example:

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *RMS power* of the second carrier signal is 3 dB lower than the RMS power of the first carrier signal.

"Peak"

The individual carriers are leveled based on their peak power and the configured "Carrier Gain".

Example:

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *peak power* of the second carrier signal is 3 dB lower than the peak power of the first carrier signal.

Example: Multi carrier signal composed of waveforms with different crest factor


A multi carrier signal is composed from two waveform files with the following characteristics:

3GPP FDD signals with the same "Sample Rate" but *different "Crest Factors"*.

"Peak" = 0 dBFS

"Carrier Gain" = 0 dB

	State	Carrier Freq. Offs. / MHz	Gain / dB	Phase / deg	Delay / ns	File	Info	!!!
0	On	-5.000 000	0.00	0.00	0	/var/user/lte1	Info...	
1	On	5.000 000	0.00	0.00	0	/var/user/lte2	Info...	

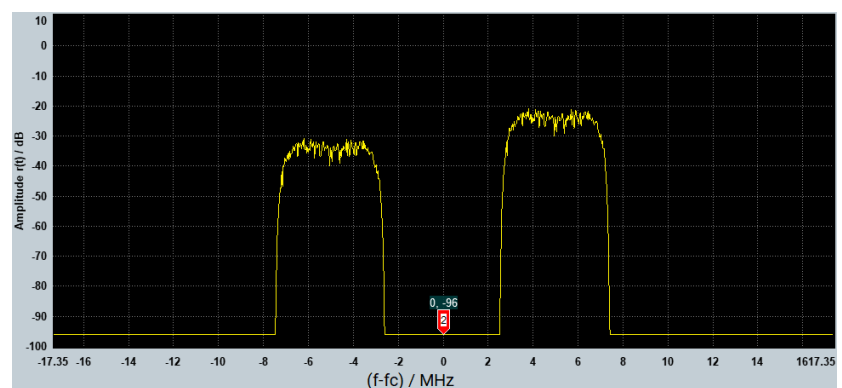

The Peak values of the carrier signals are equal, the RMS values are different.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:POWer:REFeRence` on page 1128

Output Settings

The output settings indicate the name, the file size, and the clock rate of the currently calculated multi-carrier output file.

Output File ← Output Settings

Accesses the standard "File Select" function to specify the output filename of the multi-carrier waveform to be calculated. As with normal waveforms, the file extension is `*.wv`.

To trigger the calculation and storage of this multi-carrier waveform, select "Create" or "Create and Load".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:OFILe` on page 1128

Clock Rate ← Output Settings

Displays the resulting sample rate at which the multi-carrier waveform is output by the ARB generator.

The output clock rate depends on the following:

- Number of carriers
- Carrier spacing
- Input sample rate of the leftmost or rightmost carriers.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLOCK?` on page 1129

File Size ← Output Settings

Displays the resulting number of samples of the multi-carrier waveform.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:SAMPles?` on page 1126

Create/Create and Load

Creates a multi-carrier waveform defined by the multi-carrier table and general setting entries.

If you start calculation with the "Create and Load" function, the instrument creates the waveform and loads it in the ARB generator.

This multi-carrier waveform is saved with filename specified in "Output File". Depending on the configuration of the multi-carrier waveform, calculation can take some time. To stop the calculation, use the "Abort" function.

Remote command:


`[:SOURCE<hw>] :BB:ARbitrary:MCARrier:CREate` on page 1129

`[:SOURCE<hw>] :BB:ARbitrary:MCARrier:CLoad` on page 1128

5.11.3.2 Carrier table settings

Access:

1. Select "Baseband > ARB > General > Multi Carrier".
2. Select "ARB: Multi Carrier > Carrier Table"

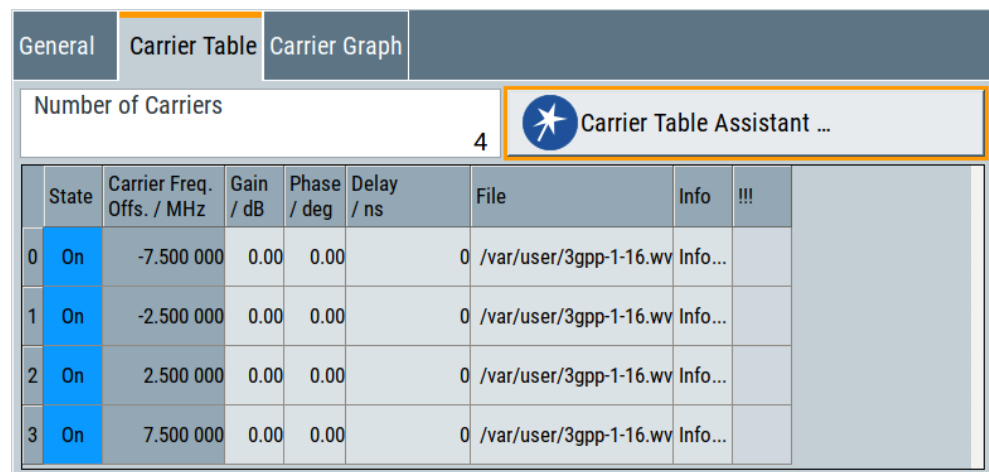

This tab comprises the settings of the individual carriers. A selectable carrier range can be set with the aid of the optional "Carrier Table Assistant".

The settings of all available carriers are displayed in table form. Previously applied assistant settings can be further refined. The number of lines corresponds to the number of carriers.



The "Phase / deg" settings are only valid if optimization of the crest factor is disabled ("Crest Factor Mode" = "Off").

Use the "Carrier Graph" tab to visualize the selected multi-carrier configuration.

Settings:

Number of Carriers.....	412
No.....	412
State.....	412
Carrier Freq [MHz].....	412
Gain.....	412
Phase.....	412

Delay.....	412
File.....	412
Info.....	413
!!!.....	413

Number of Carriers

Defines the number of carriers of the multi-carrier waveform.

This parameter is identical to the one in the "General Setting" section.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:COUNT` on page 1125

No

Indicates the carrier index ranging from 0 to (number of carriers -1).

Remote command:

Individual carriers are set by the index at the keyword `CARR`

State

Switches On/Off a carrier.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:STATe` on page 1129

Carrier Freq [MHz]

Sets the carrier frequency.

Note: The carrier frequency can only be set in "Arbitrary Carrier frequency" mode. For "Equidistant Carrier Spacing", the carrier spacing is determined automatically.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency`
on page 1130

Gain

Sets the gain of a carrier.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:POWER` on page 1130

Phase

Sets the starting phase of a carrier.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:PHASe` on page 1130

Delay

Sets the starting delay of a carrier.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:DELay` on page 1131

File

Accesses the standard "File Select" function for selecting the input file. The input file contains the I/Q signal that is modulated onto the carrier.

Remote command:

[:SOURCE<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:FILE on page 1131

Info

Indicates the sample rate, number of I/Q value pairs (number of samples), and the signal period of the selected file.

Remote command:

n.a.

!!!

Indicates an occurred conflict by means of a warning triangle. A conflict arises when the carriers overlap and is also indicated in the header of the "Carrier Table" tab.

Remote command:

[:SOURCE<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:CONFLICT? on page 1131

5.11.3.3 Carrier table assistant

Access:

1. Select "Baseband > ARB > General > Multi Carrier".
2. Select "ARB: Multi Carrier > Carrier Table > Carrier Table Assistant"

ARB Multi Carrier Table	
Number of Carriers	4
Carrier Start	0
Carrier Stop	3
Carrier State	<input checked="" type="checkbox"/>
Gain Start	0.00 dB
Gain Step	0.00 dB
Phase Start	0.00 deg
Phase Step	0.00 deg
Delay Start	0 ns
Delay Step	0 ns
Input Waveform File ...	
Apply Assistant Settings	
3gpp	

The "Carrier Table Assistant" dialog enables the configuration of a selectable subset of carrier. The provided settings are an optional way to create a multi-carrier scenario within a specified carrier range.

Settings:

Carrier State.....	414
Carrier Start/Start.....	414
Gain Start.....	414
Gain Step.....	414
Phase Start.....	414
Phase Step.....	415
Delay Start.....	415
Delay Step.....	415
Input Waveform File.....	415
Apply Assistant Settings.....	415

Carrier State

Switches the carriers in the range "Carrier Start" to "Carrier Stop" on/off.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:STATe` on page 1131

Carrier Start/Start

Defines the start/stop index of the carrier range to which the assistant settings are intended to apply.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:START` on page 1132

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:STOP` on page 1132

Gain Start

Sets the gain of the carrier marked by "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWER[:START]`

on page 1132

Gain Step

Sets the step width that is used to increment the gain.

The resulting carrier gain in the carrier table equals:

$$\text{Gain} = \text{"Gain Start"} + n * \text{"Gain Step"}.$$

n is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWER:STEP`

on page 1132

Phase Start

Sets the phase of the carrier marked by "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START]`

on page 1133

Phase Step

Sets the step width that is used to increment the phase.

The resulting phase in the carrier table equals:

$$\text{Phase} = \text{"Phase Start"} + n * \text{"Phase Step"}$$

n is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP`
on page 1132

Delay Start

Sets the delay of the carrier marked by "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELaY[:START]`
on page 1134

Delay Step

Sets the step width that is used to increment the delay.

The resulting delay in the carrier table equals:

$$\text{Delay} = \text{"Delay Start"} + n * \text{"Delay Step"},$$

n is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELaY:STEP`
on page 1133

Input Waveform File

Accesses the standard "File Select" function for selecting the input file. The input file contains the I/Q signal to be modulated onto *all carriers* of the selected carrier range.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:FILE` on page 1134

Apply Assistant Settings

Transfers the assistant settings to the carrier table.

Remote command:


`[:SOURce<hw>] :BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute`
on page 1134

5.11.3.4 Carrier graph

Access:

1. Select "Baseband > ARB > General > Multi Carrier".

2. Select "ARB: Multi Carrier > Carrier Graph"

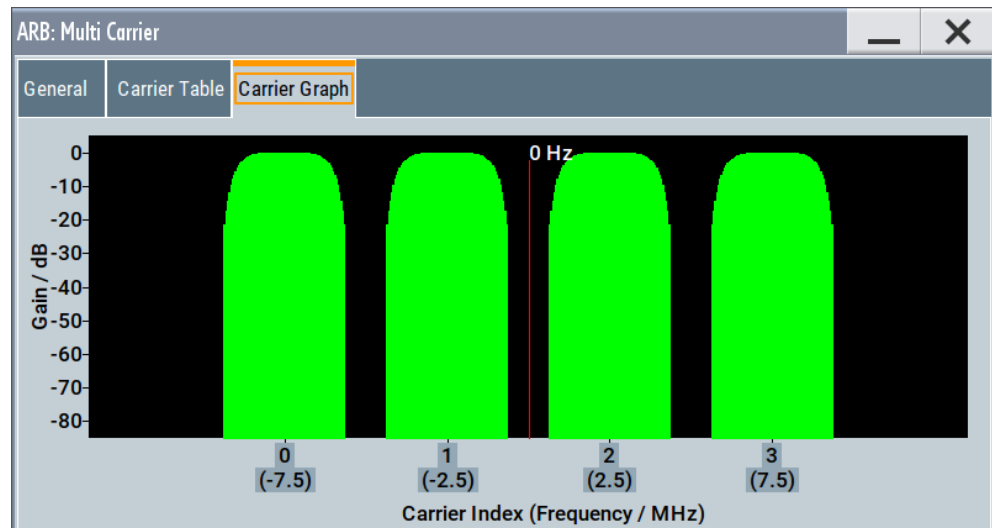

The carrier graph is a graphical representation of the current multi-carrier configuration in the frequency domain.

The height of the bars corresponds to the gain of each individual carrier. The bars width indicates the bandwidth of the carriers signals.

5.11.4 How to use the multi-carrier function

This section provides step-by-step instructions on how to configure and use the multi-carrier settings.

To create a multi-carrier waveform file (general workflow)

Perform the following general steps:

1. To configure the general settings, select "Baseband A/B > ARB > General"
2. To configure the carrier table select "ARB > Multi Carrier > Carrier Table"
3. To enter the filename of the multi-carrier waveform, select "ARB > Multi Carrier > Output File"
4. To save and load multi-carrier waveform, select "ARB > Multi Carrier > Create or Create and Load")

To generate a multi-carrier signal for standard transmitter test

High-power amplifiers of multi-carrier base stations face increased requirements in terms of linearity and acceptable intermodulation performance.

To set up a standard transmitter test, proceed as follows:

1. Open the "Baseband > 3GPP FDD" dialog. Perform the following:
 - a) select "3GPP FDD > Basestations > Test Setups/Models"
 - b) select "3GPP FDD: Downlink/Test Model > Test_Model_1_16channels".

- c) Confirm with "Select".
2. To enable signal generation, select "3GPP FDD > General > ON".
3. To create a 3GPP ARB file, select "3GPP FDD > Generate Waveform".
Enter the name of the waveform, that you want to generate, for example:
3gpp_1_16.
4. Confirm with "Save"
5. To set up a multi-carrier scenario with 4 carriers and a carrier spacing of 5 MHz, select "Baseband > ARB > Multi Carrier".
Perform the following:
 - a) In the "General" dialog, select "Number of Carriers = 4" and "Carrier Spacing = 5 MHz".
 - b) To load the generated waveform file to all 4 carriers, select "Carrier Table > Carrier Table Assistant". Select "Carrier Start = 0" and "Carrier Stop = 3".
 - c) To load the generated waveform file to all 4 carriers, select "ARB Multi Carrier Table > Input Waveform File". Select the generated waveform file 3gpp_1_16.
 - d) Select "ARB Multi Carrier Table > Carrier State > On".

ARB Multi Carrier Table	
Number of Carriers	4
Carrier Start	0
Carrier Stop	3
Carrier State	<input checked="" type="checkbox"/>
Gain Start	0.00 dB
Gain Step	0.00 dB
Phase Start	0.00 deg
Phase Step	0.00 deg
Delay Start	0 ns
Delay Step	0 ns
Input Waveform File ...	3gpp
<input checked="" type="checkbox"/> Apply Assistant Settings	

- e) Select "ARB Multi Carrier Table > Apply Assistant Settings". Close the dialog.
The "ARB: Multi Carrier > Carrier Table" dialog confirms the configuration.


General

Carrier Table

Carrier Graph


Number of Carriers

4


Carrier Table Assistant ...

	State	Carrier Freq. Offs. / MHz	Gain / dB	Phase / deg	Delay / ns	File	Info	!!!
0	On	-7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
1	On	-2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
2	On	2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
3	On	7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	

6. Select "ARB: Multi Carrier > Carrier Graph" to visualize the configuration.

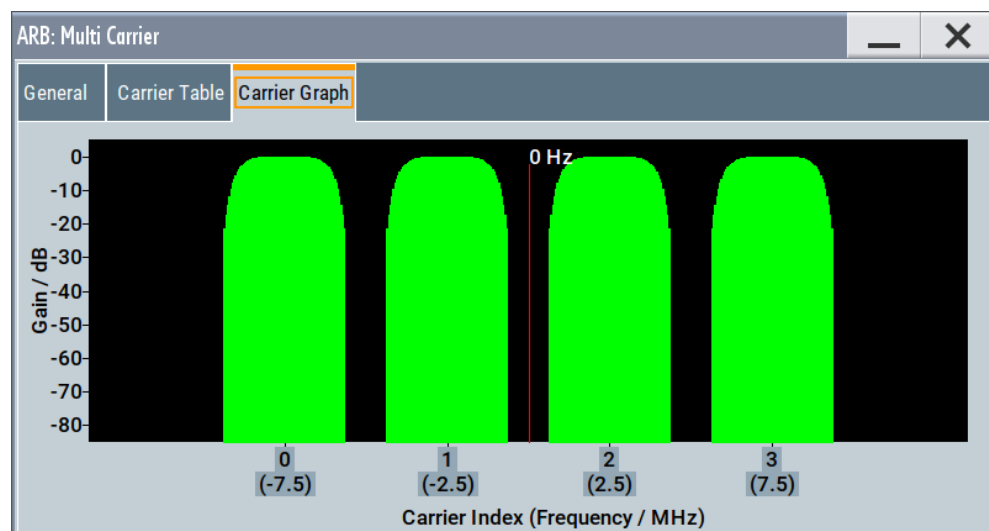

7. Select "ARB: Multi Carrier > General > Output Settings > Output File" and enter the name of the output file, for example `4x5MHz_3gpp_1_16`.
8. To trigger signal calculation and to load the waveform in the ARB generator, select "ARB: Multi Carrier > General > Create/Create and Load" function.
9. Select "ARB > General > Load Waveform".
Confirm that you loaded the generated multi-carrier waveform.
10. Select "ARB > State > On" to enable the ARB generator.

5.12 Generating multi-carrier continuous wave signal

The multi-carrier continuous wave (MCCW) is a firmware option that enables the R&S SMW to calculate up to 160001 continuous wave signals.

5.12.1 Required options

The equipment layout for processing of waveform files includes:

- Option standard or wideband baseband generator (R&S SMW-B10/-B9) per signal path
- Option baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or Option wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
- Option Multi-Carrier CW (R&S SMW-K61) per signal path

5.12.2 About the MCCW

The R&S SMW can calculate and generate a multi-carrier continuous wave signal build form up to 8192 unmodulated carriers. The carrier offset and the power level of the carriers are user-definable. The provided settings allow individual configuration of each carrier and the joint configuration of subset of carriers. Automatic start phase setting is provided to minimize the crest factor.

The multi carrier CW signals are not generated in real time but rather computed in arbitrary waveform mode. Changes in the carrier settings are not considered until the instrument is triggered to accept and apply them.


The common application fields of the multi carrier CW signals are the receiver tests with broadband test signals.

5.12.3 MCCW settings

Access:

- Select "Baseband" > "Multi Carrier CW".

The dialog enables direct carrier configuration, access to the carrier table and the graphical representation of the configured carriers.

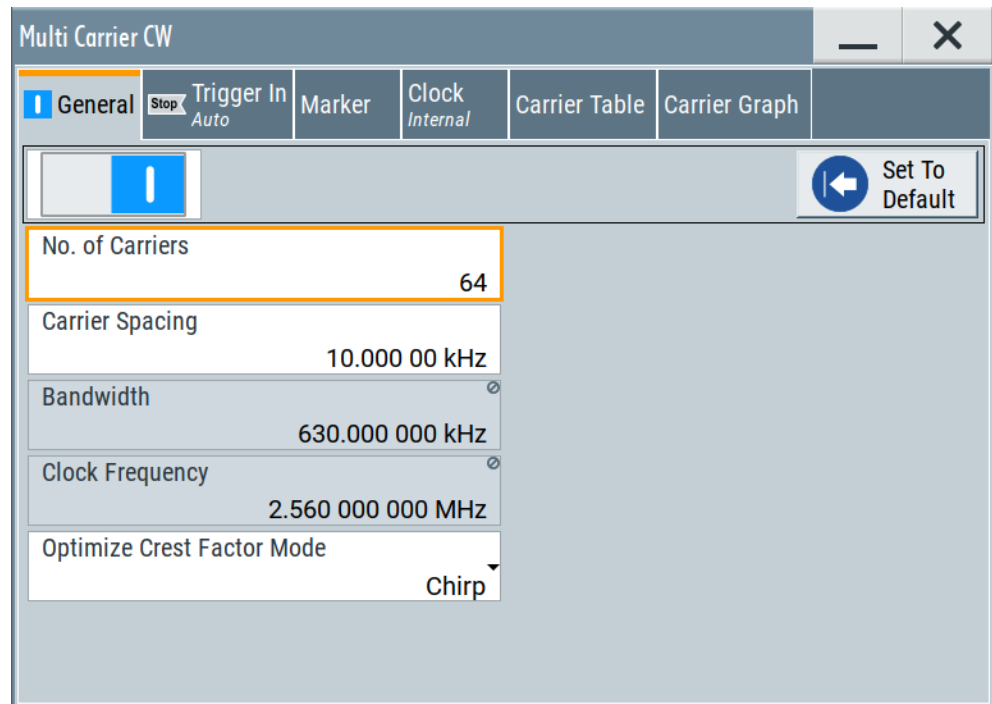

The remote commands required to define these settings are described in [Chapter 14.19.4.4, "SOURce1:BB:MCCW subsystem"](#), on page 1150.

Settings:

5.12.3.1 General carrier settings

Access:

- Select "Baseband" > "Multi Carrier CW".

Settings:

State.....	420
Set to Default.....	421
Number of Carriers.....	421
Carrier Spacing.....	421
Bandwidth.....	421
Clock Frequency.....	421
Optimize Crest Factor Mode.....	422
Desired Crest Factor.....	422

State

Enables the Multi Carrier CW.

Switching on this option, turns off all the other digital standards and digital modulation modes in the corresponding signal path.

Multi Carrier CW signals are computed in arbitrary waveform mode. To adopt the changes in the settings of individual carriers, select "Accept". This selection applies to the settings in the "Table Setup Assistant" section and the "Carrier Table" dialog.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:STATe](#) on page 1156

Set to Default

Calls the default settings, see [Table 5-27](#).

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:PRESet](#) on page 1155

Number of Carriers

Sets the number of carriers composing the multi carrier CW signal.

Note: Cross-reference between total bandwidth, carrier spacing, and number of carriers. The total bandwidth of the multi-carrier CW signal is calculated as follows:

Total Bandwidth = ("Number of Carriers" - 1) * "Carrier Spacing"

The result must not exceed the system bandwidth of the instrument (see data sheet).

If the total bandwidth is not respected, the value selected as "Carrier Spacing" is reduced. Hence, the selected number of carriers defines the maximum carrier spacing.

By default, the multi-carrier table lists 64 carriers that are preset to the settings: "State" = "On", "Power" = "0 dB", "Phase" = "0°".

If the selected number of carriers is less than the carriers in the table, the superfluous table rows are deleted. If the number of carriers exceeds the number of table rows, new rows are appended to the table.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CARRier:COUNT](#) on page 1156

Carrier Spacing

Sets the spacing between carriers for the multi-carrier CW signal. The carriers are arranged symmetrically around the HF carrier.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CARRier:SPACing](#) on page 1156

Bandwidth

Indicates the resulting occupied signal bandwidth, calculated from the selected [Number of Carriers](#) and [Carrier Spacing](#).

Clock Frequency

Displays the clock rate at which the multi-carrier CW signal is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers and the selected carrier offset.

The value indicates the resolution during the marker generation.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CLOCK?](#) on page 1157

Optimize Crest Factor Mode

Selects the mode for automatically minimizing the crest factor. The carrier start phases are automatically configured according to the selected mode.

Methods of reducing the crest factor differ regarding both the optimization achievable and the time required for computation. For more information, refer to [Chapter 5.5.1.7, "Methods for optimizing the crest factor"](#), on page 259.

"Off"	There are no automatic settings for minimizing the crest factor. Use the "Phase" parameter to set the start phase.
"Chirp"	<p>Rapid crest factor optimization regardless of the number of carriers. The minimal crest factor is 3 dB. This value is obtained, if the following prerequisites are fulfilled:</p> <ul style="list-style-type: none"> • All carriers in the multicarrier signal are switched on. • All carriers have identical power. <p>In a configuration which differs from these prerequisites, the achievable crest factor is worse.</p>
"Target Crest"	<p>Optimization of the crest factor to a desired value for all carrier configurations.</p> <p>The optimization time depends on the number of carriers and the desired crest factor. Computation time increases only when the number of carriers exceeds 256 and the crest factor is below 4 dB. The desired value can be entered in "Desired Crest Factor".</p> <p>Note: Optimization can be canceled at any time, and the current value being displayed at that moment is then used.</p>

Remote command:

`[:SOURce<hw>] :BB:MCCW:CFACTOR:MODE` on page 1157

Desired Crest Factor

For optimization "Target Crest", defines the desired crest factor.

Remote command:

`[:SOURce<hw>] :BB:MCCW:CFACTOR` on page 1157

5.12.3.2 Carrier table

Access:

- Select "Baseband" > "Multi Carrier CW" > "Carrier Table".

The provided settings enable the configuration of selectable range of carriers.

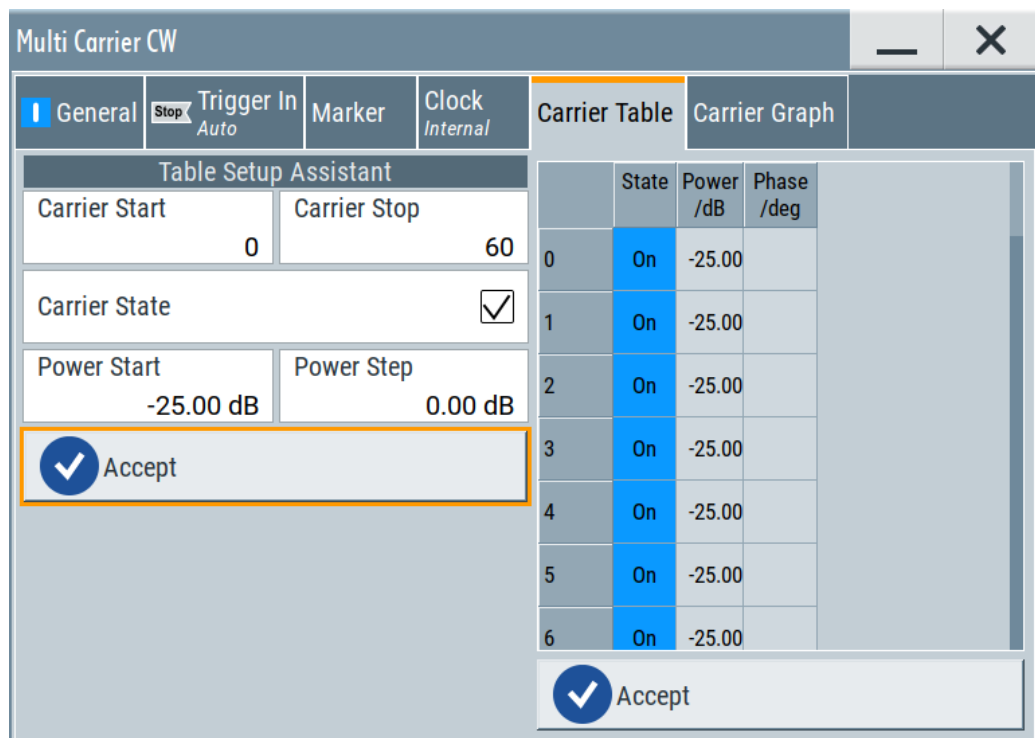
**Settings:**

Table Setup Assistant.....	423
L Carrier Start/Stop.....	423
L Carrier State.....	423
L Power Start.....	424
L Power Step.....	424
L Phase Start.....	424
L Phase Step.....	424
L Accept.....	424
Carrier Table.....	424

Table Setup Assistant

Enables joint configuration of selectable range of carriers.

Carrier Start/Stop ← Table Setup Assistant

Defines the start/stop index of the carrier range to which the following settings are intended to apply.

Remote command:

[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STARt on page 1161

[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STOP on page 1161

Carrier State ← Table Setup Assistant

Switches the carriers in the carrier range on/off.

Remote command:

[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STATe on page 1162

Power Start ← Table Setup Assistant

Sets the power of the starting carrier.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:POWer [:START]` on page 1160

Power Step ← Table Setup Assistant

Sets the width of the step with which the power is changed from carrier to carrier.

The individual power of each carrier ("Carrier Table" > "Carrier#" > "Power") is calculated as "Power Start" + n*"Power Step".

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:POWer:STEP` on page 1161

Phase Start ← Table Setup Assistant

If "Optimize Crest Factor Mode" > "Off", sets the phase of the starting carrier.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:PHASe [:START]` on page 1160

Phase Step ← Table Setup Assistant

If "Optimize Crest Factor Mode" > "Off", sets the width of the step with which the phase is changed from carrier to carrier.

The individual phase of each carrier ("Carrier Table" > "Carrier#" > "Power") is calculated as "Phase Start" + n*"Phase Step".

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:PHASe:STEP` on page 1161

Accept ← Table Setup Assistant

Adopts the carrier range setting into the "Carrier Table".

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:EXECute` on page 1162

Carrier Table

A table with settings for the configuration of the individual carriers.

The multi-carrier CW signal is only computed when the "Accept" function is triggered. Whenever the carrier table contains settings that have not yet been adopted with the "Accept" function, the background is yellow.

Note: The phase/deg settings are only valid if optimization of the crest factor is disabled ("Optimize Crest Factor" > "Off").

Tip: Use the [Carrier graph](#) function to display the current carrier configuration.

"No."	Carrier index.
"State"	Switches a carrier on/off.
"Power"	Sets the power of a carrier. If you use the Table Setup Assistant settings to fill the individual carrier powers, the power of a carrier is calculated as follows: "Power Start" + n*"Power Step".

"Phase" Sets the starting phase of a carrier.
If you use the [Table Setup Assistant](#) settings to fill the individual carrier phases, the phase of a carrier is calculated as follows:
"Phase Start" + n*"Phase Step".

"Accept" Transfers the settings in the carrier table into the instrument.

Remote command:

[:SOURce<hw>] :BB:MCCW:CARRier:LIST:STATe on page 1158

[:SOURce<hw>] :BB:MCCW:CARRier:STATe on page 1158

[:SOURce<hw>] :BB:MCCW:CARRier:LIST:POWer on page 1160

[:SOURce<hw>] :BB:MCCW:CARRier:POWer on page 1160

[:SOURce<hw>] :BB:MCCW:CARRier:LIST:PHASe on page 1159

[:SOURce<hw>] :BB:MCCW:CARRier:PHASe on page 1159


5.12.3.3 Carrier graph

Access:

- Select "Baseband" > "Multi Carrier CW" > "Carrier Graph".

The "Carrier Graph" tab is a graphical representation of the current carrier configuration.

The carriers are on the X-axis and the colored bars represent those carriers which are in the active state. Power is on the Y-axis, and the height of the bars corresponds to the chosen power of each individual carrier.

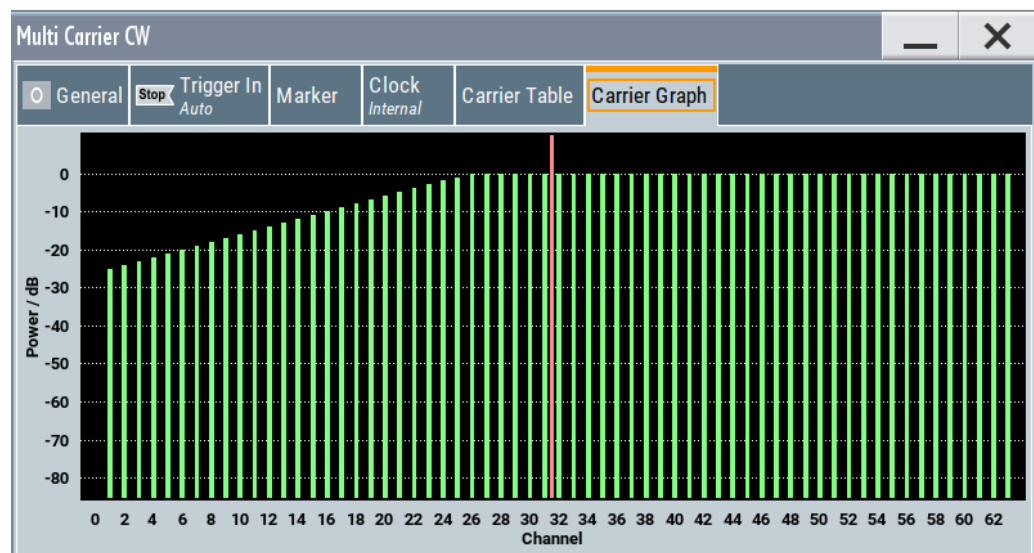

5.12.3.4 Trigger, marker and clock settings

These tabs provide standard settings.

For detailed description, see:

- [Chapter 5.5.2.1, "Trigger settings"](#), on page 262
- [Chapter 5.5.2.2, "Marker settings"](#), on page 268
- [Chapter 5.5.2.3, "Clock settings"](#), on page 269
- [Chapter 5.5.2.4, "Local and global connectors settings"](#), on page 271

5.12.4 How to use the multi-carrier continuous wave function

This section provides examples on how to use the multi-carrier continuous wave function in some general test cases.

To generate a signal to test the frequency response

If the test case requires a signal for DUT testing, like power amplifier or filter with a bandwidth of 80 MHz, proceed as follows:


1. Connect the DUT to the output connectors of the instrument.
2. Connect a suitable measurement equipment, like signal analyzer to the DUT.
3. Select "Baseband" > "Multi Carrier CW".
4. Adjust further settings, for example, trigger settings, as required.
5. Set "Multi Carrier CW" > "State" > "On".
6. Set "RF" > "On" to enable the signal output.
7. On the connected signal analyzer, execute the required measurement tasks. Measure the frequency response at the outputs of the DUT.

To generate a single sideband signal to test the image rejection

If a single sideband test signal for testing the image rejection capabilities of DUT is required, proceed as follows:

1. Connect the DUT to the output connectors of the instrument.
2. Connect a suitable measurement equipment, like signal analyzer to the DUT.
3. Select "Baseband" > "Multi Carrier CW" > "General":
 - a) Enable "No. of Carriers" = "81".
 - b) Set "Carrier Spacing" = "1 MHz".
4. Select "Multi Carrier CW" > "Carrier Table":
 - a) Set "Carrier Start" = "40".
 - b) Set "Carrier Stop" = "80".
 - c) Set "Carrier State" = "Off".
 - d) Confirm with "Accept".

Open the "Multi Carrier CW" > "Carrier Graph" to visualize the configured single sideband signal.

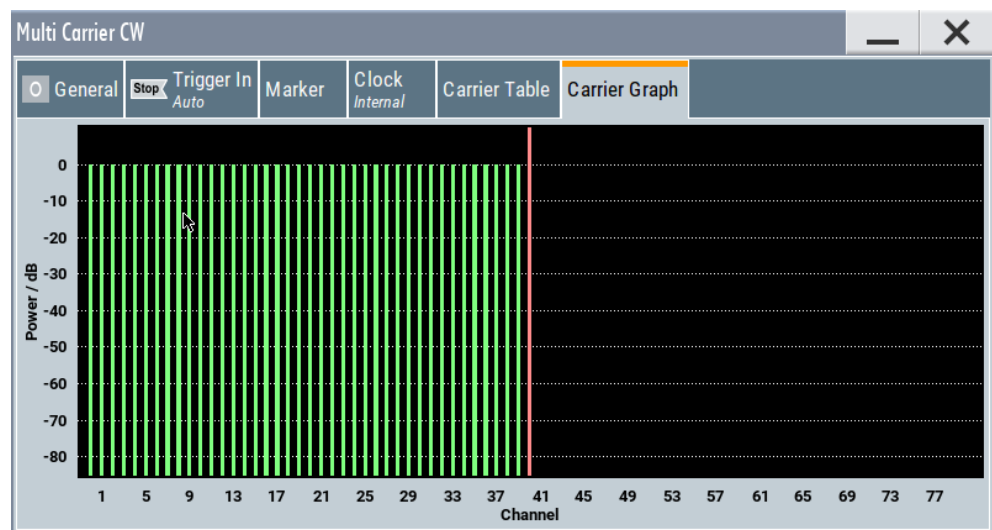

5. Adjust further settings, for example, trigger settings, as required.
6. Set "Multi Carrier CW" > "State" > "On".
7. Set "RF" > "On" to enable the signal output.
8. On the connected signal analyzer, execute the required measurement tasks. Measure the frequency response at the outputs of the DUT.

5.12.5 References

Table 5-27: MCCW default values

Parameter	Value
State	Not affected by "Set to Default"
Carrier Setup	
Number of Carriers	64
Carrier Spacing	10 kHz
Optimize Crest Factor	Chirp
Desired Crest Factor	3 dB
Trigger	
Mode	Auto
Source	Internal
Ext. Delay	0
Ext. Inhibit	0
Marker	
Channel 1...4	Restart
Clock	

Parameter	Value
Source	Internal
Multichannel Setup	
Start Carrier	0
Stop Carrier	0
State	on
Power	0 dB
Power Step	0 dB
Initial Phase	0°
Phase Step	0°
Channel Setup	
State	ON
Phase	0°
Power	0 dB

5.13 Generating a linear slope ramp waveform

Generating a linear slope ramp waveform with the baseband generator is a function that requires the additional option Baseband Power Sweep (R&S SMW-K542). The main application field of these signals is amplifier tests, e.g. to determine the 1 dB compression point of an amplifier.

See user manual R&S®SMW-K542 Baseband Power Sweep.

5.14 Shifting and boosting the baseband signal

The R&S SMW provides settings to frequency offset or power boost the baseband signals (internally generated and externally supplied) relative to the signals of the other baseband sources.

5.14.1 About baseband offsets

The applied baseband frequency and phase offset and path gain affect the signal on the output of the corresponding block, "Baseband" or "BB Input". The shifting of the central frequency of the baseband signal is one of the tasks of the resampler.

5.14.1.1 Impact of the frequency offset

For some applications, it is helpful to shift the baseband signal with a user-defined baseband frequency offset to a different center frequency to improve signal characteristics.

The frequency offset function shifts the center frequency of the wanted baseband signal. The function also provides a quick way to shift the used frequency band in the RF frequency domain without modifying the RF settings.

See [Chapter 5.14.3, "How to improve signal characteristics by shifting the baseband signal"](#), on page 433.

Limitations

The complex I/Q bandwidth of the shifted useful signal must not exceed the total available baseband bandwidth (see data sheet). The setting range of the frequency offset is then calculated as follows:

$$-(\text{TotalBasebandBandwidth}/2) + f_{\text{use}}/2 \leq f_{\text{offset}} \leq (\text{TotalBasebandBandwidth}/2) - f_{\text{use}}/2,$$

where

f_{use} is the complex useful bandwidth of the I/Q signal before the offset

f_{offset} is the frequency offset

The [Figure 5-33](#) illustrates the setting range of the frequency offset.

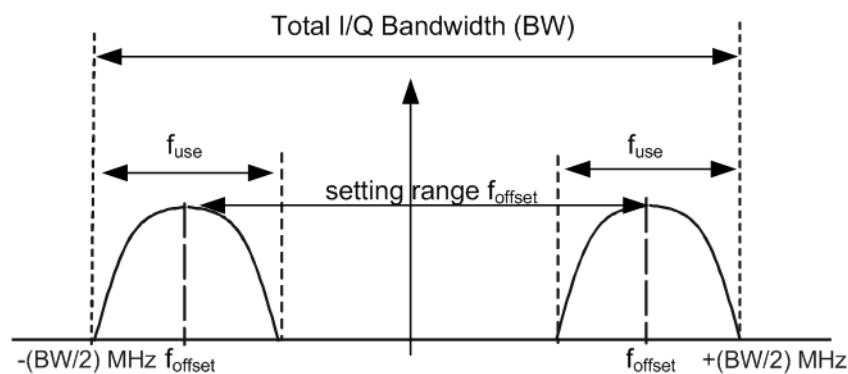


Figure 5-33: Setting range of frequency offset

Example: To calculate the maximum frequency offset

This example uses the following signal:

- Standard: "Baseband > Custom Digital Modulation"
- "Set according to Standard > WCDMA-3GPP"
- "Symbol Rate = 3.84 Msym/s" (3.84 MHz)
- "Filter > Root Cosine"
- "Roll Off Factor = 0.22"

The complex useful bandwidth of filtered signal is calculated as follows (see ["Impact of the filter parameters"](#) on page 258):

- $f_{use} = (1 + \text{"Roll Off Factor"}) * \text{"Symbol Rate"}$
- $f_{use} = (1 + 0.22) * 3.84 \text{ MHz} = 4.6848 \text{ MHz}$

For an instrument with a total available I/Q bandwidth of 160 MHz, the valid range of values for the frequency offset is then:

- $-160 \text{ MHz}/2 + 4.6848 \text{ MHz}/2 \leq f_{offset} \leq 160 \text{ MHz}/2 - 4.6848 \text{ MHz}/2$ or
- $-77.6576 \text{ MHz} \leq f_{offset} \leq 77.6576 \text{ MHz}$

To observe the effect of offsetting the frequency

Use the built-in real-time graphical display ("System Configuration > Graphics > Power Spectrum") and observe the power spectrum of the signal with and without frequency offset:

- See [Chapter 3.3.6, "Verifying the generated signal"](#), on page 71.
- See ["To set and verify a baseband frequency offset"](#) on page 643.

5.14.1.2 Impact of the phase offset

The "Phase Offset" determines the phase offset between the different baseband signals. A phase offset rotates each point of an I/Q constellation diagram by the specified phase offset.

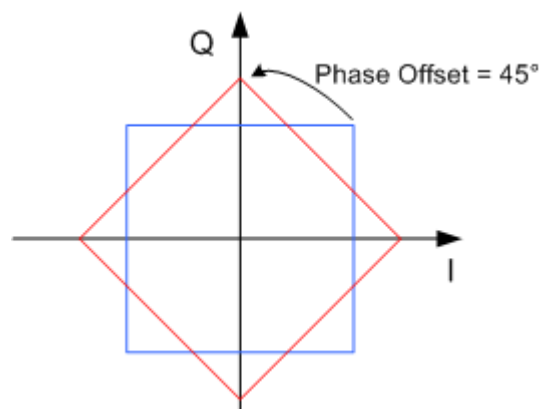


Figure 5-34: I/Q constellation diagram: Effect after offsetting the phase by an angle of 45 °

To observe the effect of offsetting the phase

Use the built-in real-time graphical display ("System Configuration > Graphics > Constellation") and observe that the points on the I/Q constellation diagram are turning counterclockwise.

See [Chapter 9.1, "Displaying baseband signal characteristics in real-time"](#), on page 627.

5.14.1.3 Impact of the gain

The "Gain" of the different baseband sources determine the relative gain of the associated signals relative to each other.



In "System Configuration > Standard Mode", you can fade the baseband signal and route it at the output of the fading simulator to superimpose the faded signals from the basebands.

The real gain of the superimposed signal is measured at the output of the "Fading" block and set with the fading parameter "Summation Ratio A/B".

See the user manual "Fading Simulator", section "Summation Ratio A/B").

The relative gain set with the parameter "Gain" in the "Baseband" block is ignored.

The real gain in a signal path depends on the following parameters along with the defined baseband gain:

- Signal characteristics, in particular the crest factor
- Number of baseband sources
- Overall RF output level.

To observe the effect of changing the gain

To verify and visualize the cumulative baseband signal, use:

- The "System Configuration > Graphics > Power Spectrum" view.
See ["To set and verify path gain and routing"](#) on page 645.
See also [Chapter 3.3.6, "Verifying the generated signal"](#), on page 71.
- The "Setup > Baseband Powers Simulation" dialog, see [Chapter 9.2, "Querying information on the baseband power levels"](#), on page 651.

5.14.2 Baseband offsets settings

Access:

- Select "Baseband > Baseband Offsets" or "BB Input > Baseband Offsets".

The "Baseband Offsets" dialog provides the settings necessary to add frequency and/or phase offset.

Moreover, you can add a path gain to the baseband signals relative to each other.

Baseband Offsets				—	×
	Frequency Offset /Hz	Phase Offset /°	Gain /dB		
Baseband A	1.00	0.00	0.000		
BB Input A	0.00	0.00	0.000		
BB Input B	0.00	0.00	0.000		
Baseband B	0.00	0.00	0.000		

The block diagram shows an icon Δf on the signal path to indicate an applied frequency offset.

Settings:

Frequency Offset.....	432
Phase Offset.....	432
Gain.....	433

Frequency Offset

Enters the frequency offset for the internal or external baseband signal and shifts the useful baseband signal in the center frequency.

Use function, for example, to shift the baseband signal relative to the AWGN signal.

See:

- [Chapter 5.14.1.1, "Impact of the frequency offset"](#), on page 429 for detailed information on the calculation of the frequency offset value range
- [Chapter 5.14.3, "How to improve signal characteristics by shifting the baseband signal"](#), on page 433

Note: A frequency offset cannot be applied to external or internal signals with sample rates of exactly 100 MHz. The digital signal is fed into the signal path directly and not routed to the resampler where the frequency offset is performed.

Remote command:

[:SOURce<hw>] :BB:FOFFset on page 1060

[:SOURce<hw>] :BBIN:FOFFset on page 1060

Phase Offset

Enters the phase offset for the baseband signal of the selected baseband block compared to the other baseband signals (see [Chapter 5.14.1.2, "Impact of the phase offset"](#), on page 430).

The phase offset affects the signal on the "Baseband block" output.

Use this parameter, for example, to change the start phase of the baseband signal.

Remote command:

[:SOURce<hw>] :BB:POFFset on page 1061

[:SOURce<hw>] :BBIN:POFFset on page 1060

Gain

Enters the relative gain for the external or internal baseband signal compared with the signals of the other baseband sources, if the signals are added.

The gain affects the signal on the output of the "BB Input" block.

Refer to [Chapter 5.14.1.3, "Impact of the gain"](#), on page 431 for detailed information.

Remote command:


`[:SOURce<hw>] :BB:PGain` on page 1061

`[:SOURce<hw>] :BBIN:PGain` on page 1061

5.14.3 How to improve signal characteristics by shifting the baseband signal

Shifting of the generated baseband signal is useful in the following cases:


- You analyze the generated signal with a signal analyzer and the displayed signal spectrum indicates a carrier leakage (a signal drop) at the current RF frequency.

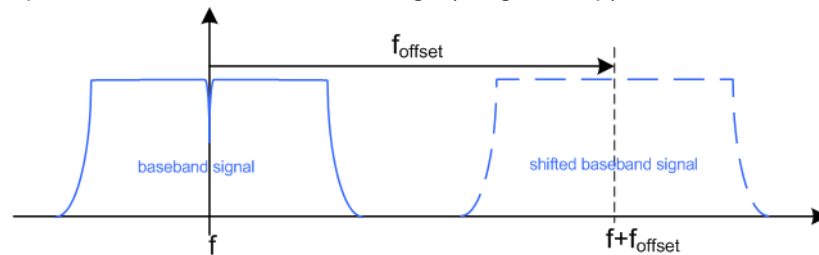

Shifting the baseband signal to a different center frequency can eliminate the carrier leakage problem.

Alternatively, apply an I and/or Q offset and vary the settings until the observed signal drop disappears, see ["To optimize the carrier leakage suppression"](#) on page 467.

- You generate a test signal as a sum of two baseband signals with overlapping spectra. The two signals can originate, for example from internal baseband signals (baseband A and baseband B) or an internal and an externally supplied baseband signal. You route the sum signal to the same RF output with the same RF frequency.

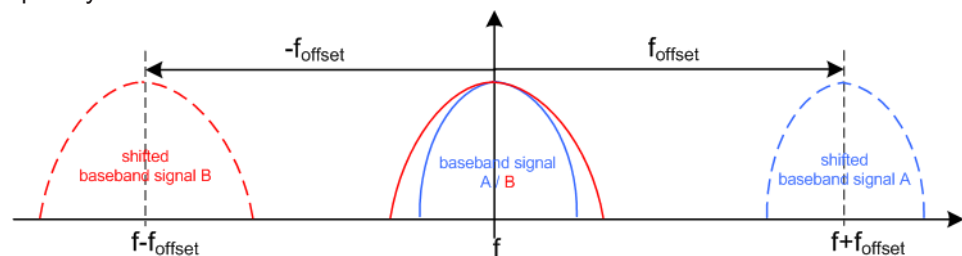

- Shifting one of the basebands allows you to analyze them both
- Shifting both baseband signals with the same frequency offset results in a signal with carrier frequency in the center of the RF bandwidth

In the following examples, we assume that:

- The R&S SMW generates a baseband signal
- A spectrum analyzer is connected to the R&S SMW, the analyzer is configured and measures the required signal characteristics.

To shift the generated baseband signal

- ▶ Select "Baseband > Baseband Offsets > Frequency Offset" and apply an offset to the generated baseband signal.

To verify characteristics of the generated signal

- ▶ Use the built-in real-time graphical display.
See [Chapter 3.3.6, "Verifying the generated signal"](#), on page 71.

To observe the effect of applied frequency offset and gain

- ▶ Use the built-in real-time graphical display.
See [Chapter 3.3.6, "Verifying the generated signal"](#), on page 71.

6 Simulating fading, adding noise and predistortions, and impairing the signal

The test case scenarios in accordance with the specifications often require a not "clean" signal but rather a signal that is impaired or interfered. To fulfill such requirements, the R&S SMW is equipped with a fading simulator and noise generator and provides the possibility to impair and predistort the digital I/Q signal.

This section describes the following functions:

• Simulating fading	435
• Adding noise to the signal	435
• Generating impulsive and phase noise	453
• Impairing the signal	460
• Frequency response correction	468
• Applying digital predistortion	468

6.1 Simulating fading

A wireless signal transmitted over the air is subject to noise interference and fading. Fading can impair the transmitted signal significantly and hence strongly influence the performance of a communication system. Fading can cause decreased signal-to-noise ratio or can introduce intersymbol interference.

To simulate real-world conditions, the R&S SMW is equipped with an integrated real-time fading simulator. With the provided functions, you can simulate repeatable fading conditions for receiver tests.

For a description of the fading simulator, refer to the user manual "Fading Simulator".

6.2 Adding noise to the signal

This section introduces the concept of the AWGN generator (Additive White Gaussian Noise). The section also describes the settings for generation of noise, sine wave interferer, and adding noise to the generated signal.

6.2.1 Required options

The equipment layout for generating an AWGN signal includes:

- Option Standard or Wideband Baseband Generator (R&S SMW-B10/-B9) per signal path and
- Option Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or Option Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
- Option Noise Generator (R&S SMW-K62) per signal path

6.2.2 About the AWGN generator

Provided the required options are installed, the R&S SMW allows you to superimpose noise on the generated signal. The built-in internal noise generator generates an AWGN signal (Additive White Gaussian Noise) with selectable bandwidth and adds it to the digital baseband signal. The main characteristic of this kind of noise signal is the Gaussian distribution of the noise power density and uniform frequency distribution.

Generation of the AWGN signal


The Gaussian noise is generated with a feedback shift register with subsequent probability transformation. The switching configuration is such that ideal statistical characteristics are achieved:

- I and Q paths are decorrelated from each other.
- Small probabilities are ensured via the crest factor of ~15 dB
- The period of the noise signal is relatively long and depends on the selected system bandwidth.
- Scalable lowpass filters are used to produce a noise level with both a broad dynamic range and a broad bandwidth range.

AWGN modes

The AWGN generator generates signal in one of the following different modes:

- **"Additive Noise"**: the generated noise signal superimposes the interference-free useful signal

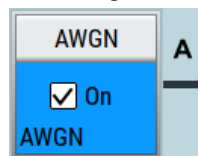

- **"Noise Only"**: a pure noise signal is generated and modulated to the carrier; the connection to the baseband is interrupted.


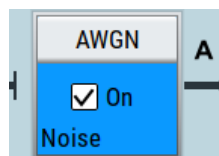


Figure 6-1: Representation of an AWGN > Mode > Noise Only in the block diagram

- **"CW Interferer"**: a sinusoidal signal with an adjustable frequency offset and carrier-to-interferer (C/I) power ratio is added to the baseband signal.

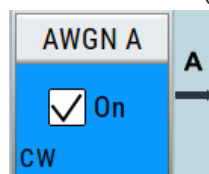

Signal and noise parameters

The [Figure 6-2](#) illustrates the relation between the signal and noise parameters.

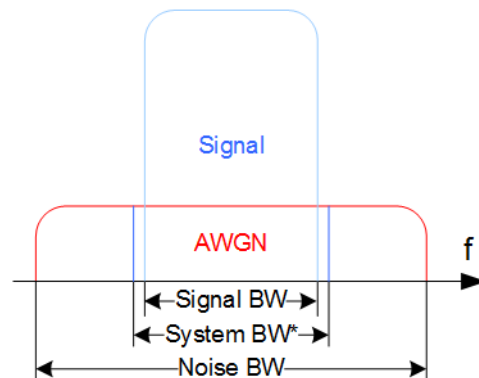


Figure 6-2: Graphical representation of the relation between system bandwidth and noise bandwidth (Minimum Noise/System BW = 2)

System BW* = Occupied BW

The **system bandwidth** is a measure for the transmitted RF bandwidth. The selected value is usually the occupied bandwidth and is therefore a value greater than the pure signal bandwidth.

In the most test cases, the signal and the noise power are not defined directly but with the target signal-to-noise ratio (SNR) or **carrier/noise ratio**.

The **carrier power** is a measure for the *signal without the noise distribution*. This indication corresponds to the "Level" value in the "Status bar" (see [Figure 6-3](#)).


To ensure flat noise within the selected system bandwidth, the **noise bandwidth** has to be larger than the system bandwidth. The minimum noise bandwidth is sometimes part of the specifications and is calculated as follows:

"Noise Bandwidth" = "System Bandwidth" x "Minimum Noise/System Bandwidth Ratio"

Logically, the calculated noise bandwidth does not exceed the total available bandwidth of the instrument, as specified in the data sheet.

By default, the **noise power** within the system bandwidth is not defined directly but calculated depending on the selected system bandwidth and the desired SNR. The noise power over the noise bandwidth is calculated respectively.

The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth, which means that the total measurable noise power usually exceeds the displayed value "Noise Power".

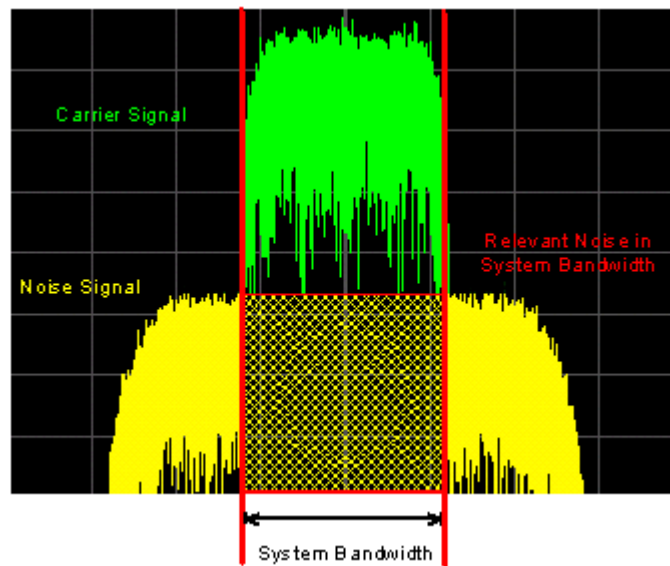

For a correct measurement of the noise power within the system bandwidth, we recommend that you measure the channel power with a signal analyzer.

In the "Additive Noise" mode, the output signal is the *signal with the noise distribution*. Hence, the power level at the RF output corresponds to the **carrier+noise power** (see [Figure 6-3](#)).

The noise power of digitally modulated signal is characterized by the parameter E_b/N_0 indicating the ratio of bit energy to noise power density. The correlation to the SNR is as follows:

C/N or $S/N = (E_b/N_0) * (f_{bit}/B_{sys})$, where B_{sys} is the system bandwidth.

Bit Rate f_{bit} = "Symbol Rate" * Modulation Value



Where the bit rate value is retrieved from?

The parameter "AWGN > Noise Power / Output Results > Bit Rate" indicates the value used by the C/N or E_b/N_0 calculation. The value is retrieved automatically depending on the configured baseband signal:

- For signals generated by the "Custom Digital Mod", the bit rate is determined by the selected standard (see parameter "Custom Dig Mod > General" > "Symbol Rate" and "Custom Dig Mod > Modulation Type").
- For signals generated in accordance to a digital standard, the bit rate is often a standalone parameter. Some test cases however, for example the 3GPP base station tests (TS 25.141), specify the E/N settings that apply to channel-coded data or block segments. Set the parameter "Bit Rate" to the required value, e.g. the bit rate before or after channel coding.

Understanding the displayed information

The following example explains the impact of the AWGN settings on the signal and noise parameters.

See [Figure 6-3](#) for an example of an AWGN generation with the following configuration:

- Default "System Configuration"
 - "Mode = Standard"
 - "Signal Routing = A -> A ,B ->B"Perform the following in the first path:
- "Baseband"
 - "Custom Digital Modulation > Set acc. to standard > WCDMA-3GPP"
 - "State > On".
 - "Symbol Rate = 3.840 Msym/s"
- "AWGN"
 - "General > Mode > Additive Noise"
 - "General > Min Noise/System Bandwidth Ratio = 3"
 - "General > State > On"
 - "Noise Power / Output Results > Show Results for Output > RF"
 - "Noise Power / Output Results > Reference Mode > Carrier"
 - "Noise Power / Output Results > Carrier/Noise Ratio = 10 dB"
- "RF > On"

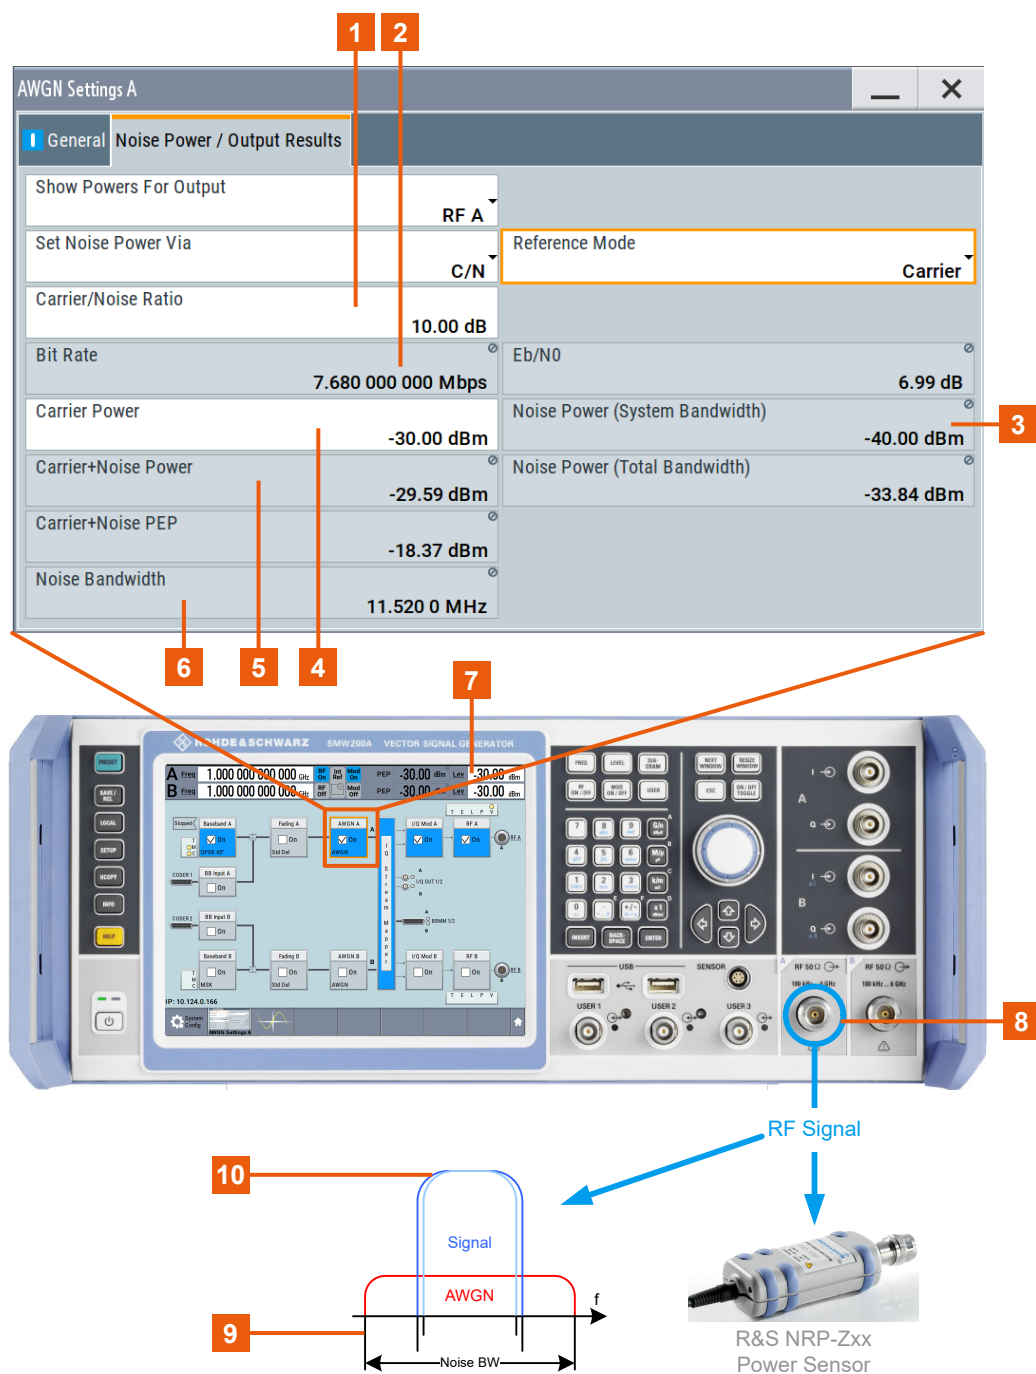


Figure 6-3: AWGN: Understanding the displayed information

- 1 = Bit Rate derived from the selected "Symbol Rate = 3.840 Msym/s"
- 2 = Selected Carrier/Noise Ratio
- 3 = Noise Power calculated from the "Carrier Power" and the "Carrier/Noise Ratio" = -30 dBm - 10 dB = -40 dBm

- 4, 7, 10 = **Carrier Power** = Status bar > Level = -30 dBm
 5, 8 = **Carrier+Noise Power** = power at the RF A output; i.e. the power a connected power meter would measure
 6, 9 = **Noise Bandwidth** = **System Bandwidth*****Minimum Noise/System Bandwidth Ratio** = 3.840 MHz*3 = 11.520 MHz



Use the built-in graphical signal monitoring function of the instrument to display the signal characteristics in real-time, see ["To observe the effect of enabled additive noise \(AWGN\)"](#) on page 649.

Joint configuration of all streams

In **Advanced mode**, the instrument can generate the signal of one or more streams. In the AWGN, with the parameter **Coupled Mode** you define how this streams are configured; coupled, i.e. the same settings apply to all streams, or independently.

We recommend that you configure the AWGN settings in the default coupled mode. When you disable the coupled mode, the instrument does not apply the current settings to all streams. The settings of the individual streams are in the state they were before the coupled mode was enabled.

If you prefer to configure the streams independently, consider the interdependencies listed in [Table 6-1](#).

Table 6-1: State settings coupled and individual modes


	AWGN > Coupled Mode > On	AWGN > Coupled Mode > Off
Effect of the parameters "AWGN > AWGN Settings > General > State" and "AWGN > State"	The states of all streams are coupled; the parameters "AWGN > AWGN Settings > General > State" and "AWGN > State" have the same effect. Hence, enabling/disabling the AWGN block ("AWGN > On/Off") activates/deactivates all streams.	The parameter "AWGN > AWGN Settings > General > (Stream) State" enables/disables each stream individually. The "AWGN > State > Off" deactivates all streams. The "AWGN > State > On" activates all streams for that the "AWGN > AWGN Settings > (Stream) State > On"

Application fields


Typically, the noise generator is required for the following tests:

- In receiver sensibility tests with predefined SNR of the receiver, see ["To configure the AWGN for receiver sensibility tests"](#) on page 451
- In bit-error or block-error measurements, depending on the set signal-to-noise ratio (SNR)
- Whenever a pure noise signal is required

6.2.3 AWGN block

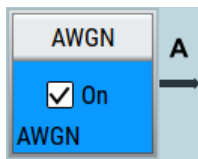

The "AWGN" block provides access to the settings for the **AWGN generator**, see [Chapter 6.2.4, "AWGN settings"](#), on page 442. The label in the AWGN block indicates the AWGN mode that is activated. The quickest way to activate or deactivate the AWGN generator is the "On/Off" switch in the AWGN block.


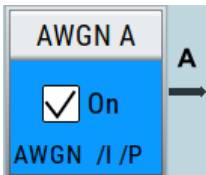


If option R&S SMW-K810 is installed, you can also access **impulsive and phase noise** settings from the AWGN block you also access the settings, see [Chapter 6.3, "Generating impulsive and phase noise"](#), on page 453. You can activate one or more noise generators. The label in the AWGN block changes to reflect the active noise generators, too. The "On/Off" switch in the AWGN block toggles the state of the noise generator that was previously active.

6.2.4 AWGN settings

Access:

1. Option: R&S SMW-B9, enable one of the following:
 - a) "System Config > Fading/Baseband Config > Mode = Standard" with "Signal Outputs = Analog Only".
 - b) "System Config > Fading/Baseband Config > Mode = Advanced".
2. Select "Block Diagram > AWGN".

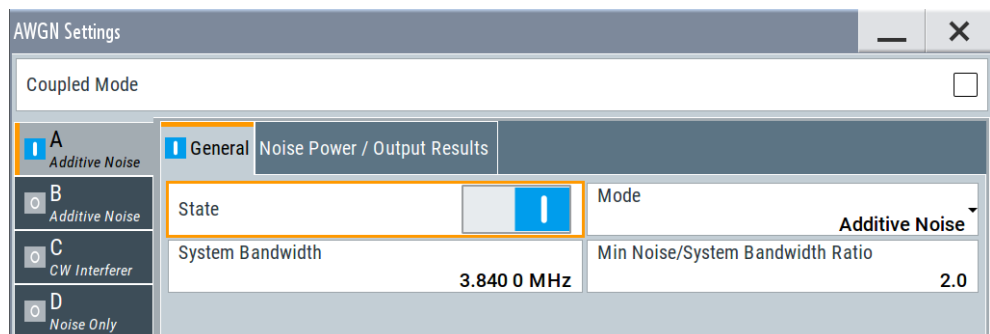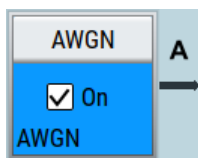

The dialog contains the settings for noise level configuration and CW interfering parameters.

If the instrument is configured to work in **Advanced mode** ("System Configuration > Fading/Baseband Configuration > Mode > Advanced") and **Coupled Mode** is disabled, the dialog consists of more than one side tabs, whereas the number of tabs corresponds to the number of selected **BB Signals (Tx Antennas)**. The tab name displays the baseband that the settings are related to and the mode the noise is generated at.

3. To activate the AWGN generator, select "Block Diagram > AWGN > AWGN > General > State > On"

In **Advanced mode**, a dedicated LED indicates the state of each stream.

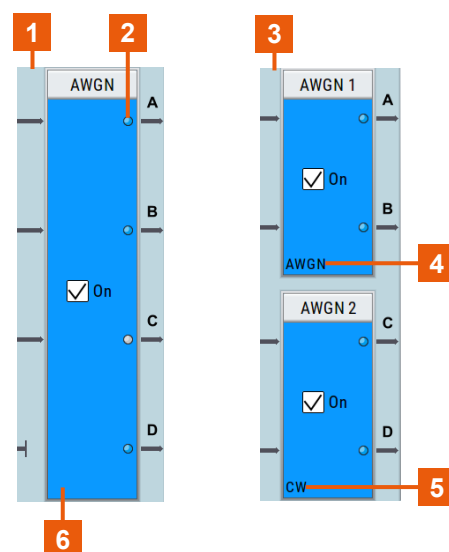


Figure 6-4: Representation of the AWGN blocks in System Configuration > Advanced Mode"

- 1 = Example of an 1x4x4 configuration
- 2 = Dedicated LEDs indicate the state of each stream.
- 3 = Example of a 2x2x2 configuration
- 4, 5 = AWGN mode indication: AWGN indicates "AWGN Mode > Additive Noise/Noise Only", CW - "AWGN Mode > CW Interferer".
- 6 = No AWGN mode indication in mixed AWGN streams configuration

The remote commands required to define these settings are described in [Chapter 14.19.4.5, "SOURCE:AWGN subsystem"](#), on page 1170.

Settings:

6.2.4.1 General settings

Access:

- Select "Block Diagram > AWGN".

Settings:

State.....	443
Coupled Mode.....	444
Mode.....	444
System Bandwidth.....	444
Minimum Noise/System Bandwidth Ratio.....	445
Center Frequency Offset.....	445
Target CW Frequency Offset.....	445

State

Activates/deactivates the generation of an AWGN signal. The interferer (AWGN or CW interferer, depending on the selected mode) is generated after the generator is activated.

Option: R&S SMW-B9, enabled in:

- "System Config > Fading/Baseband Config > Mode = Standard" with "Signal Outputs = Analog Only"
- "System Config > Fading/Baseband Config > Mode = Advanced".

Remote command:

`[:SOURce<hw>] :AWGN:STATe` on page 1173

Coupled Mode

Couples the configuration of all streams.

Note: In the default state of the AWGN, this parameter is enabled. We recommend that you configure the AWGN settings in coupled mode.

When you disable the coupled mode, the instrument does not apply the current settings to all streams. The settings of the individual streams are in the state they were before the coupled mode was enabled.

See also "[Joint configuration of all streams](#)" on page 441.

Remote command:

`[:SOURce<hw>] :AWGN:CMODE [:STATe]` on page 1173

Mode

Activates/deactivates the generation of an AWGN signal. The interferer (AWGN or CW interferer, depending on the selected mode) is generated after the generator is activated.

"Additive Noise"

The AWGN noise signal with selectable system bandwidth is added to the baseband signal.

"Noise Only"

The pure AWGN noise signal with selectable system bandwidth is modulated to the carrier. The connection to the baseband is interrupted.

"CW Interferer"

A sine with a defined frequency offset is added to the baseband signal.

This mode is disabled in "System Configuration" with more than 4 input streams.

Remote command:

`[:SOURce<hw>] :AWGN:MODE` on page 1174

System Bandwidth

For "Additive Noise" and "Noise Only" modes, sets the RF bandwidth to which the set carrier/noise ratio relates.

Within this frequency range, the signal is superimposed with a noise signal which level corresponds exactly to the set C/N or S/N ratio.

For more information, refer to the description of [Figure 6-2](#).

Remote command:

`[:SOURce<hw>] :AWGN:BWIDTh` on page 1174

Minimum Noise/System Bandwidth Ratio

For "Additive Noise" and "Noise Only" modes, sets the ratio of minimum noise bandwidth to system bandwidth, as required by some standards.

"Noise Bandwidth" = "System BW" x "Minimum Noise/System BW Ratio"

The parameter [Noise Bandwidth](#) displays the resulting noise bandwidth. Because the noise power density is a constant value, increasing the noise/system bandwidth ratio increases the noise bandwidth.

The calculation of level from the selected C/N or S/N ratio in relation to system bandwidth is not influenced.

Remote command:

[\[:SOURce<hw>\]:AWGN:BWIDth:RATio](#) on page 1174

Center Frequency Offset

Option: R&S SMW-B9

Requires "Mode > Additive Noise/Noise Only".

Defines the frequency offset of the noise signal relative to the carrier center frequency. Use the setting to shift noise signals relative to the output RF signal.

Remote command:

[\[:SOURce<hw>\]:AWGN:FREQuency:CENTer:OFFSet](#) on page 1178

Target CW Frequency Offset

In "CW Interferer" mode, sets the desired frequency of the sine wave.

Remote command:

[\[:SOURce<hw>\]:AWGN:FREQuency:TARGet](#) on page 1178

6.2.4.2 Noise power/output results settings

Access:

- Select "AWGN > Noise Power/Output Results".

The screenshot shows the 'AWGN Settings' dialog box with the 'Noise Power / Output Results' tab selected. The settings are as follows:

Parameter	Value
Show Powers For Output	RF
Set Noise Power Via	C/N
Reference Mode	Carrier
Bit Rate	7.680 000 000 Mbps
Carrier/Noise Ratio	10.00 dB
E _b /N ₀	6.99 dB
Carrier Power	-30.00 dBm
Noise Power (System Bandwidth)	-40.00 dBm
Noise Power (Total Bandwidth)	-40.00 dBm
Carrier+Noise Power	-30.00 dBm
Carrier+Noise PEP	-23.98 dBm
Noise Bandwidth	0.0 kHz

The available settings depend on the selected [Mode](#).

Settings:

Show Powers For Output.....	446
Set Noise Power Via.....	447
Reference Mode.....	447
Bit Rate.....	447
Carrier/Noise Ratio, Signal/Noise Ratio.....	448
E _b /N ₀	448
Carrier Power, Signal Power.....	448
Noise Power (System Bandwidth), Interferer Power.....	449
Noise Power (Total Bandwidth).....	450
Carrier + Noise Power, Signal + Noise Power (System Bandwidth), Carrier + Interferer Power, Signal + Interferer Power.....	450
Carrier + Noise PEP, Signal + Noise PEP (Total Bandwidth), Carrier + Interferer PEP, Signal + Interferer PEP.....	450
Noise Bandwidth.....	451
Resulting CW Frequency Offset.....	451

Show Powers For Output

Sets the output to which the displayed settings are related to.

The available outputs depend on the current signal flow configuration, in particular on the current stream mapping (see [Chapter 4.4, "System configuration settings"](#), on page 126).

This setting also influences:

- The way the interfering parameters are displayed, e.g. if the SNR value is defined as C/N or as S/N.
- The value units:
 - The values related to the RF outputs are displayed in dBm
 - The values related to the baseband outputs - in dB

Tip: For better overview of the power values, use the build-in "Baseband Powers" function whenever you:

- Add baseband signals with different signal bandwidth
- Add streams in the "Stream Mapper".

For a description, see [Chapter 9.2, "Querying information on the baseband power levels"](#), on page 651.

Remote command:

`[:SOURce<hw>] :AWGN:DISP:MODE` on page 1175

Set Noise Power Via

In "Additive Noise" mode, selects the way the noise power is determined.

The following correlation applies:

$"C/N \text{ or } S/N" = ("E_b/N_0") * (f_{bit}/B_{sys})$, where:

- "C/N or S/N" is the carrier/noise ratio
- " E_b/N_0 " is the ratio of bit energy to noise power density
- "Bit Rate" f_{bit} = "Symbol Rate" x Modulation Value
- B_{sys} is the system bandwidth.

See also [Chapter 6.2.2, "About the AWGN generator"](#), on page 436.

Remote command:

`[:SOURce<hw>] :AWGN:POWer:MODE` on page 1175

Reference Mode

Selects whether the carrier or the noise power is kept constant if the C/N or E_b/N_0 ratio is changed.

In the common case, the instrument keeps the carrier power and adjusts the noise power accordingly. Some test cases however, for example the 3GPP base station tests (TS 25.141), specify explicitly the noise power. These test cases require that the noise power is permanently set as a function of the base station power class, whereas the carrier power is variable.

Remote command:

`[:SOURce<hw>] :AWGN:POWer:RMODE` on page 1176

Bit Rate

In "Additive Noise" mode, indicates the bit rate used for converting C/N or S/N to E_b/N_0 .

Tip: For digitally modulated signals, select the bit rate before or after channel coding, as required.

See also [Chapter 6.2.2, "About the AWGN generator"](#), on page 436.

Remote command:

`[:SOURce<hw>] :AWGN:BRATe` on page 1176

Carrier/Noise Ratio, Signal/Noise Ratio

In "Additive Noise" and "CW Interferer" mode, sets the carrier/noise, signal/noise or signal/interferer ratio.

Whether a configuration of C/N or S/N is enabled, depend on the selected output [Show Powers For Output](#).

- In "Reference Mode > Carrier": sets the noise power. It does not affect the power of the useful signal, i.e. the carrier power remains constant.
Thus the power of the carrier + noise signal or the *power of the output signal* changes.
- In "Reference Mode > Noise", sets the *power of the useful signal*, i.e. the carrier power.
The power of the output signal remains constant.
- The power of the noise signal is derived from the entered C/N or S/N value and displayed with the parameter "Noise Power" in the units of the useful signal.
- The power of the useful signal is displayed with the parameter "Carrier Power" and can also be changed there. This indication corresponds to the "Level" value in the "Status bar".
- The power of the output signal is displayed as "Carrier + Noise Power".

See also [Figure 6-3](#).

Remote command:

[\[:SOURce<hw>\]:AWGN:CNRatio](#) on page 1176

 E_b/N_0

In "Additive Noise" mode, sets the ratio of bit energy to noise power density.

- In "Reference Mode > Carrier": sets the *noise power* and hence the power of the output signal, i.e. the carrier + noise signal.
It does not affect the power of the useful signal, i.e. the carrier power is kept constant.
- In "Reference Mode > Noise": sets the *power of the useful signal*, i.e. the carrier power.
The noise power is kept constant.
- The power of the noise signal is derived from the selected E_b/N_0 and displayed with the parameter "Noise Power" in the units of the useful signal.
- The power of the useful signal is displayed with the parameter "Carrier Power".
This indication corresponds to the "Level" value in the "Status bar".
- The power of the output signal is displayed as "Carrier + Noise Power".

See also [Figure 6-3](#).

Remote command:

[\[:SOURce<hw>\]:AWGN:ENRatio](#) on page 1176

Carrier Power, Signal Power

("Additive Noise" and "CW Interferer")

The name of this parameter depends on the selected output [Show Powers For Output](#).

- In "Reference Mode > Carrier": sets the carrier power. This indication corresponds to the "Level" value in the "Status bar".
The power of the noise signal is derived from the selected C/N or S/N value and displayed with the parameter "Noise Power" in the units of the useful signal.

- In "Reference Mode > Noise", indicates the carrier power as derived from the entered C/N or S/N value. This indication corresponds to the "Level" value in the "Status bar".

The noise power can be set with the parameter "Noise Power".

Note: The peak envelope power (PEP) displayed in the "Status bar" corresponds to the PEP value of the carrier. The parameter "Carrier+Noise (PEP)" indicates the PEP value of the overall signal.

See also [Figure 6-3](#).

Remote command:


`[:SOURce<hw>] :AWGN:POWer:CARRier` on page 1177

Noise Power (System Bandwidth), Interferer Power

Displays the power of the noise signal in the system respectively the total bandwidth in "Noise Only" and "Additive Noise" mode.

- "Noise Only" mode
 - Sets the power of the noise signal. This indication corresponds to the "Level" value in the "Status bar".
- "Additive Noise" mode
 - "Reference Mode > Noise"
 - Sets the power of the noise signal. The power of the carrier is derived from the entered C/N or S/N or Eb/N0 value.
 - "Reference Mode > Carrier"
 - Displays the power of the noise signal in the system bandwidth. The power of the noise signal is derived from the entered C/N or S/N or Eb/N0 value.
 - The carrier power is selected with "Carrier Power"; respectively the signal power is displayed by "Signal Power".
- "CW Interferer" mode
 - "Reference Mode > Noise"
 - Sets the power of the interfering signal. The power of the carrier is derived from the entered C/I value.
 - "Reference Mode > Carrier"
 - Displays the power of the interfering signal. The power of the interfering signal is derived from the entered C/N or S/N value. The carrier power is entered under "Carrier Power".

Note: The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth. The occurrence means that the total measurable noise power usually exceeds the value displayed here. For correct measurement of the noise power within the system bandwidth, we recommend that you measure the channel power with a signal analyzer.

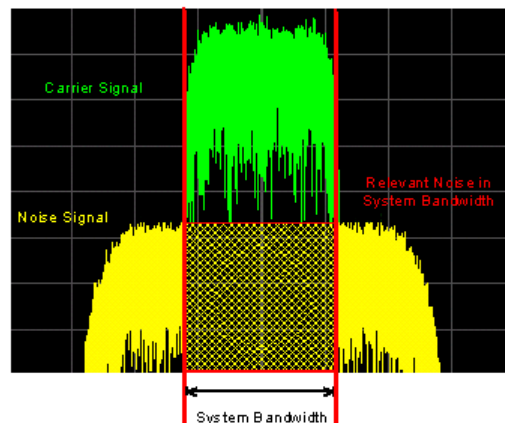

See also [Figure 6-3](#).

Remote command:

`[:SOURce<hw>] :AWGN:POWer:NOISe` on page 1177

Noise Power (Total Bandwidth)

Displays the power of the noise signal in the total bandwidth in "Noise Only" and "Additive Noise" mode.

See also [Figure 6-3](#).

Remote command:

`[:SOURce<hw>] :AWGN:POWer:NOISe:TOTal?` on page 1177

Carrier + Noise Power, Signal + Noise Power (System Bandwidth), Carrier + Interferer Power, Signal + Interferer Power

In "Additive Noise" and "CW Interferer" mode, displays the overall power of the noise/interferer signal plus useful signal.

The output selected with the parameter [Show Powers For Output](#) determines:

- The name of this parameter
- The units the overall power is measured in, dBm or dB (full-scale)

See also [Figure 6-3](#).

Remote command:

`[:SOURce<hw>] :AWGN:POWer:SUM?` on page 1177

Carrier + Noise PEP, Signal + Noise PEP (Total Bandwidth), Carrier + Interferer PEP, Signal + Interferer PEP

In "Additive Noise" and "CW Interferer" mode, displays the peak envelope power (PEP) of the overall signal comprised of noise signal plus useful signal.

The output selected with the parameter [Show Powers For Output](#) determines:

- The name of this parameter
- The units the overall power is measured in, dBm or dB (full-scale)

Note: The peak envelope power ("PEP") displayed in the "Status bar" corresponds to the PEP value of the carrier.

Remote command:

`[:SOURce<hw>] :AWGN:POWer:SUM:PEP?` on page 1178

Noise Bandwidth

For "Additive Noise" and "Noise Only" modes and with activated AWGN generator, indicates the real noise bandwidth.

See also [Figure 6-2](#).

Remote command:

`[:SOURce<hw>] :AWGN:BWIDth:NOISe?` on page 1175

Resulting CW Frequency Offset

In "CW Interferer" mode, indicates the resulting frequency offset of the sine wave.

Remote command:

`[:SOURce<hw>] :AWGN:FREQuency:RESult?` on page 1179

6.2.5 How to configure the noise generator for receiver tests

This section shows you how to configure the noise generator for receiver tests, for example the tests specified in the 3GPP test specification TS 36.141, chapter 7.

For the following example, we assume that the R&S SMW generates an uplink EUTRA/LTE signal with following characteristics:

- "EUTRA/LTE > Duplexing = FDD", "Link Direction = Uplink"
- "EUTRA/LTE > General Uplink Setting > Channel Bandwidth = 5 MHz" and "Occupied Bandwidth = 4.5 MHz"
- "EUTRA/LTE > Frame Configuration > UE1 > FRC > FRC State = On" and "FRC = TS 36.141: A2-3"
- "EUTRA/LTE > State = On"
- "Status bar > Frequency = 1.95 GHz" and "Level = -69.9 dBm"
- "RF State > On"

To configure the AWGN for receiver sensibility tests

We assume that an AWGN interfering signal with the following characteristics is required:

The mean power of the interfering signal is -82.5 dBm/BW and C/N = 12.6 dB.

1. Select "AWGN".
2. Set AWGN general settings:
 - "Mode > Additive Noise"
 - "System Bandwidth = 4.5 MHz"

The definition of the interfering signal mean power is dBm/BW, where BW is the system bandwidth. The system bandwidth of the LTE signal is the occupied bandwidth.

See also [Figure 6-2](#).
 - "Min Noise/System Bandwidth Ratio = 1.5"
3. Select "Noise Power/Output Results".
4. Set AWGN noise power settings:

- "Set Noise Power Via = C/N"
- "Reference Mode = Carrier"
- "Carrier/Noise Ratio = 12.6 dB"

AWGN Settings	
<div> <div>General</div> <div>Noise Power / Output Results</div> </div>	
Show Powers For Output	RF
Set Noise Power Via	C/N
Carrier/Noise Ratio	12.60 dB
Reference Mode	Carrier
Bit Rate	100.000 000 kbps
Carrier Power	-69.90 dBm
Carrier+Noise Power	-69.90 dBm
Carrier+Noise PEP	-63.88 dBm
Noise Bandwidth	0.0 kHz
Eb/N0	29.13 dB
Noise Power (System Bandwidth)	-82.50 dBm
Noise Power (Total Bandwidth)	-82.50 dBm

The dialog confirms the required mean power of the interfering signal "Noise Power (System Bandwidth) = -82.5 dBm".

5. Select "AWGN > General > State > On".

To generate a CW interfering signal

For the following example, we assume that two interfering signals are required, a 5 MHz uplink LTE signal and a CW signal. The signals are transmitted at -52 dBm; the LTE signal at 1.96 GHz and the CW signal 10 MHz below it. Signals with equal (or similar) RF levels and at frequencies spaced within the max. RF bandwidth can be generated by the same path.

To configure the instrument:

1. Enable the required LTE signal:
 - a) Select "EUTRA/LTE > General Uplink Setting > Channel Bandwidth = 5 MHz" and "EUTRA/LTE > State = On"
 - b) Select "Status bar > Frequency = 1.96 GHz" and "Level = -52 dBm"
2. Enable the required interfering signal:
 - a) Select "AWGN > General > Mode > CW Interferer"
 - b) Select "Target CW Frequency Offset = 10 MHz"
 - c) Select "Noise Power/Output Results > Reference Mode = Noise"
 - d) Select "Interferer Power = -52 dB"
 - e) Select "AWGN > General > State > On".
3. Select "RF > State > On"

6.3 Generating impulsive and phase noise

Additionally to superimposing an AWGN signal (Additive White Gaussian Noise) with selectable bandwidth on the generated digital baseband signal, you can also generate impulsive noise and phase noise (R&S SMW-K810).

The R&S SMW-K810 key features

- Pulsed addition of an AWGN signal to the useful signal with settable number of pulses per frame and within settable limits of randomly distributed pulse intervals.
- Addition of phase noise with predefined or user settable phase noise characteristic.

6.3.1 Required options

The basic equipment layout for the enhanced noise generation includes the options:

- Standard or wideband baseband generator (R&S SMW-B10/-B9)
- Baseband main module (R&S SMW-B13/-B13T) or wideband baseband main module (R&S SMW-B13XT)
- Option Noise Generator (R&S SMW-K62) per signal path
- Option Enhanced Noise Generation (R&S SMW-K810), per signal path
- Frequency option (e.g. R&S SMW-B1003)

For more information, see data sheet.

6.3.2 About the impulsive noise

Impulsive noise can be used to disturb the wanted signal with independent and bursted white Gaussian noise signals.

For characteristics of the digitally generated signal:

See R&S SMW user manual, section "Adding Noise to the Signal".

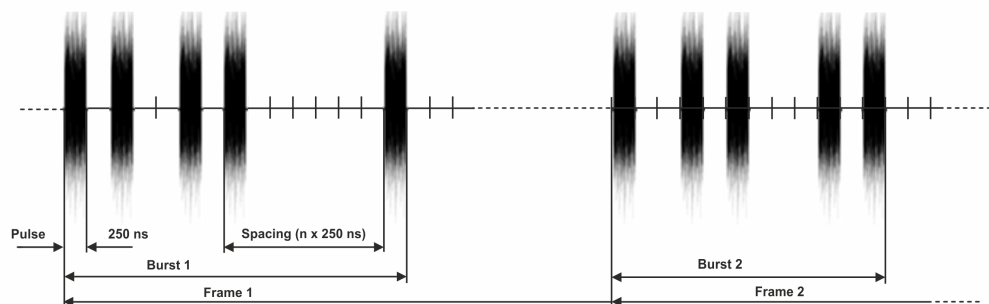


Figure 6-5: Impulsive noise pattern

The R&S SMW delivers pulses with a duration of 0.250 μ s. The amplitudes of the pulses have Gaussian distribution. Their probability distribution function corresponds to an

even distribution within a burst. The burst duration is determined by the number of pulses in a burst ([Pulses per Burst](#)) and the limits for the spacing ([Pulse Spacing Minimum/Pulse Spacing Maximum](#)). The interval between two bursts is determined by the frame duration ([Frame Duration](#)).

6.3.3 About the phase noise

The wanted signal of each path can be degraded by a phase noise signal with user-defined characteristics. For this purpose, a Gaussian noise signal is arbitrarily filtered and applied to the phase component of the wanted signal.

You have the following options to generate phase noise:

- Configure the phase noise signal manually, by changing the settings in the "Phase Noise" table.
The single sideband (SSB) shape profile is defined as a sequence of 5 points, each describing a frequency/phase noise pair.
See [Chapter 6.3.5, "Phase noise settings"](#), on page 458.
- Load a user-defined or a predefined single sideband shape profile file.
See:
 - ["About the single sideband shape profiles"](#) on page 454
 - ["Predefined SSB profiles"](#) on page 455

For any of the two ways, the graph on the left indicates the resulting phase noise.

About the single sideband shape profiles

Phase noise profiles describe the single-sided band frequency response of the phase noise. When a file is loaded, the amplitude at 100Hz is held to the previously set value; all other amplitudes are calculated according to the profile. To change the amplitude of the complete profile, set the amplitude at $f = 100\text{Hz}$.

Phase noise profile files are files with predefined extension ($*.fcf$) and defined file content.

The file content is as follows:

- Any number of comment lines, each starting with the symbol %
- The keyword `SOS matrix:`
- Two lines, each with the following six coefficients:
 $b_0 \ b_1 \ b_2 \ a_0 \ a_1 \ a_2$

Where:

- Coefficients are separated by spaces
- Each line corresponds to a second-order section (filter element with two zeros and two poles)

As a result, you obtain the following filter function for each line:

$$\underline{H} = a_0 \cdot \frac{b_0 + b_1 \cdot \underline{z}^{-1} + b_2 \cdot \underline{z}^{-2}}{1 + a_1 \cdot \underline{z}^{-1} + a_2 \cdot \underline{z}^{-2}}$$

The two lines in turn form a cascade connection, which corresponds to multiplying the two functions. The total characteristic of the SSB noise is hence calculated as follows:

$$\text{SSB}(f)_{\text{lin}} = N_0 |H_1(z) \cdot H_2(z)|$$

Where:

- $N_0 = -68.3 \text{ dBc/Hz}$
- $z = e^{-j 2\pi f/10 \text{ MHz}} = \cos(2\pi f/10 \text{ MHz}) - j \sin(2\pi f/10 \text{ MHz})$

Predefined SSB profiles

The following predefined SSB profiles are provided:

- ATSC_A74.fcf
- crystal1.fcf
- crystal2.fcf
- crystal3.fcf
- crystal4.fcf
- crystal5.fcf
- DVB-S2 A1.fcf
- DVB-S2 A2.fcf
- DVB-S2 D1.fcf
- DVB-S2 P1.fcf
- DVB-S2 P2.fcf
- pll1.fcf
- pll2.fcf

6.3.4 Impulsive noise settings


You can generate impulsive noise in the following configurations:

- Option: R&S SMW-B10
 - "System Config > Fading/Baseband Config > Mode = Standard"
 - "System Config > Fading/Baseband Config > Mode = Advanced" with up to 4 streams
- Option: R&S SMW-B9
 - "System Config > Fading/Baseband Config > Mode = Standard" with "Signal Outputs = Analog Only"
 - "System Config > Fading/Baseband Config > Mode = Advanced".


For more information, see data sheet.

Access:

1. Select "AWGN > Config > Impulsive Noise".
2. To start impulsive noise generation with the default settings, select "State > On".

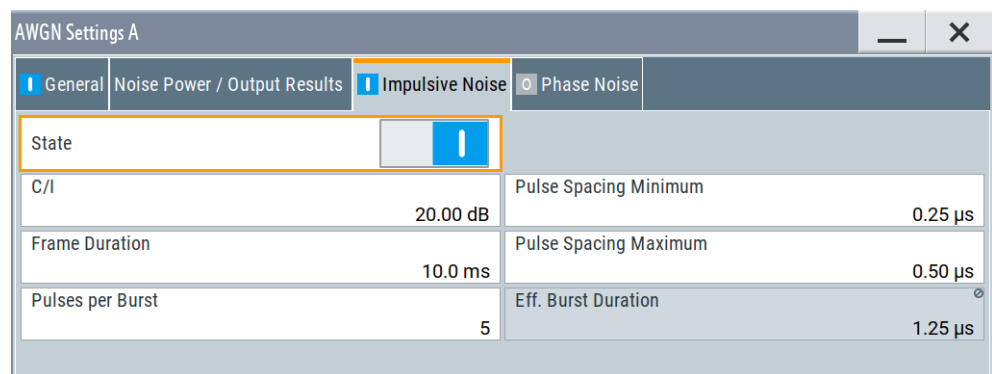

3. Close the dialog and observe the incitation on the block diagram.

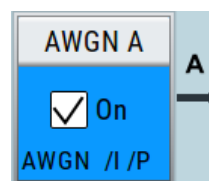

The label in the AWGN block ("Ipls" or "I") changes to reflect that the impulsive noise generation is activated.

The remote commands required to define these settings are described in [Chapter 14.19.13.2, "Impulsive noise commands"](#), on page 1264.

Settings:

State.....	456
C/I.....	456
Frame Duration.....	457
Pulses per Burst.....	457
Pulse Spacing Minimum.....	457
Pulse Spacing Maximum.....	457
Eff. Burst Duration.....	457

State

Enables or disables the impulsive noise generator.

If enabled, an AWGN signal using a pulse generator is applied.

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive[:STATe]` on page 1265

C/I

Specifies the ratio of the wanted signal (C) to the impulsive noise signal (I).

Works like the "AWGN > Noise Power/Output Powers > Carrier/Noise Ratio" parameter but only the noise power of an active pulse is considered. The applied noise power is, however, lower. It corresponds to the number of pulses in a burst and the frame duration.

Note: If the AWGN generator and the impulsive noise generator are enabled simultaneously, the noise powers of the two sources are superimposed during the pulses.

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive:CI` on page 1265

Frame Duration

Sets the time intervals at which the bursts occur.

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive:FRAME` on page 1265

Pulses per Burst

Sets the number of noise pulses per burst, where the maximum number of pulses is calculated as `Frame Duration/0.25 µs`.

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive:PULSe` on page 1265

Pulse Spacing Minimum

If more than 1 pulse per burst is enabled (`Pulses per Burst > 1`), this parameter sets the minimum spacing between 2 pulses within a burst.

If `Pulse Spacing Minimum = Pulse Spacing Maximum = 250 ns`, the pulses directly follow each other. You can set spacing with a resolution of 250 ns.

The minimum burst length that can be obtained is therefore as follows:

$$\text{BurstLength}_{\min} = \text{Pulse Spacing Minimum} * \text{Pulses per Burst} * 250 \text{ ns}$$

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive:MINSpace` on page 1266

Pulse Spacing Maximum

If more than 1 pulse per burst is enabled (`Pulses per Burst > 1`), this parameter sets the maximum spacing between 2 pulses within a burst.

The max pulse spacing depends on the number of pulses per burst and is calculated as follows:

$$\text{Pulse Spacing Maximum} \leq \text{Frame Duration} / (\text{Pulses per Burst} - 1)$$

Thus, a burst can maximally take the length of a frame.

The maximum burst length that can be obtained is therefore as follows:

$$\text{BurstLength}_{\max} = \text{Pulse Spacing Maximum} * \text{Pulses per Burst} * 250 \text{ ns}$$

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive:MAXSpace` on page 1266

Eff. Burst Duration

Displays the time during which the noise generator is active in a frame. The duration is the product of the number of pulses per burst and the pulse duration of 250 ns. An equivalent C/N_e can thus be calculated as follows:

$$C/N_e = C/I * (\text{Eff. Burst Duration} / \text{Frame Duration})$$

Remote command:

`[:SOURce<hw>] :NOISe:IMPulsive[:BURSt]:DURation?` on page 1266

6.3.5 Phase noise settings

You can generate impulsive noise in the following configurations:


- Option: R&S SMW-B10
"System Config > Fading/Baseband Config > Mode = Standard"
- Option: R&S SMW-B9
 - "System Config > Fading/Baseband Config > Mode = Standard" with "Signal Outputs = Analog Only"
 - "System Config > Fading/Baseband Config > Mode = Advanced".

For more information, see data sheet.

Access:

1. Select "AWGN > Config > Phase Noise".
2. Select "Phase Noise > State > On".
3. To use one of the predefined single-sideband shape profile, select "Load Profile > Predefined Files".
For description of the file format, see ["About the single sideband shape profiles"](#) on page 454.
4. In the "Phase Noise" table, set the phase noise characteristics.
5. Select "Save Profile".
Opens the standard "Save" dialog.
6. Select "File Name", enter the name of file and select "Save".
The generated file is saved as *.fcf file.


For description of the file format, see ["About the single sideband shape profiles"](#) on page 454.

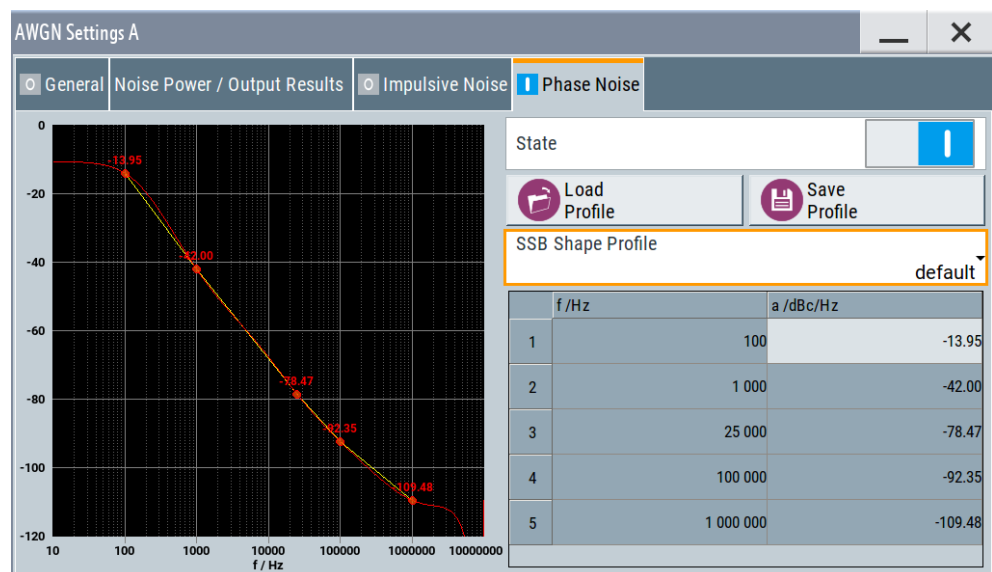

The graph on the left displays two color-coded curves:

- Yellow: the current profile, as set with the frequency/phase values.
- Red: the calculated filter shape incl. the amplitude values at the frequency points.

Close the dialog and observe the incitation on the block diagram.

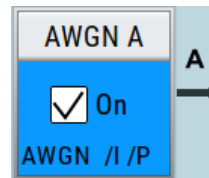

The label in the AWGN block ("Phase" or "P") changes to reflect that the phase noise generation is activated.

The remote commands required to define these settings are described in [Chapter 14.19.13.3, "Phase noise commands"](#), on page 1266.

Settings:

State.....	459
Load Profile, Save Profile.....	459
SSB Shape Profile.....	459
Phase Noise Table.....	460

State

Enables or disables the phase noise generator.

If enabled, the null phase angle of the carrier is varied. A noise component with a defined frequency response is added.

Remote command:

`[:SOURce<hw>] :NOISe:PHASnoise [:STATe]` on page 1266

Load Profile, Save Profile

Opens the standard "File Select" dialog with standard file handling functions.

The single-sideband (SSB) spectrum of the signal carrier or, for multicarrier methods, of all single carriers follows the filter curve characteristics of the profile file.

Note: If the generation of the profile fails, as it happens for some wanted signal shapes, we recommend that you measure the generated phase noise to ensure that it is equal to the expected phase noise.

For description of the file format, see ["About the single sideband shape profiles"](#) on page 454.

Remote command:

`[:SOURce<hw>] :NOISe:PHASnoise:SHAPE:STORe` on page 1267

`[:SOURce<hw>] :NOISe:PHASnoise:SHAPE:SELeCt` on page 1267

`[:SOURce<hw>] :NOISe:PHASnoise:SHAPE:PREDeFined:CATalog?`
on page 1267

SSB Shape Profile

Indicates the name of the currently used single-sideband (SSB) profile file.

"SSB Shape Profile = User" indicates that no profile is loaded.

Phase Noise Table

Defines a single-sideband (SSB) shape profile.

The shape profile is defined as a sequence of 5 points, each describing a frequency/phase noise pair.

The graph on the left displays two color-coded curves:

- Yellow: the current profile, as set with the frequency/phase values.
- Red: the calculated filter shape incl. the amplitude values at the frequency points.

If the values are extracted from a file, you can change the amplitude value for the first point only. The values of the remaining four points are calculated automatically as sum of the value defined in the profile and the delta used for the first point.

Remote command:

`[:SOURCE<hw>] :NOISE:PHASnoise:LEVel<ch>` on page 1267

`[:SOURCE<hw>] :NOISE:PHASnoise:FREQuency<ch>` on page 1268

6.4 Impairing the signal

In the R&S SMW, *analog and digital linear impairments* such as I/Q imbalance and quadrature error can be added to the generated signal.

The instrument can also simulate the effect of non-linear memoryless effects like AM/AM and AM/PM conversion.

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

6.4.1 Required options

The equipment layout for impairing I/Q signals includes the following:

- Option Standard or Wideband Baseband Generator (R&S SMW-B10/-B9) per signal path
- Option Baseband main module, one or two I/Q paths to RF (R&S SMW-B13/-B13T) or
Option Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)

6.4.2 About the linear I/Q impairments

I/Q signal impairments are well-defined arithmetic modifications of the data. Every data sample is modified in the same way.

Adding linear impairments to the data stream is provided for the following purpose:

- To simulate frequent sources of distortions in a real signal-processing chain as, it is required for tests with dirty transmitter conditions (receiver tests)
- To compensate the faults of the I/Q demodulator in the receiver

See [Chapter 6.4.4, "How to optimize the carrier leakage and sidebands suppression"](#), on page 467.

The R&S SMW offers functions to impair an internal or external I/Q signal linearly:

- Impair I/Q samples for each I/Q stream.
- Add analog I/Q impairments to an analog I/Q input signal, before it is passed to in the I/Q modulator.
 See ["Defining the input signal of the I/Q modulator"](#) on page 469.
- Impair analog and digital I/Q signals twice.
 If you apply both impairments, they superimpose each other at the impaired signal.

Also, you can correct impairments at the I/Q modulator automatically, see ["Adjust I/Q Modulator Current Frequency"](#) on page 475.

See also [Chapter 17.3.4.3, "How to use the internal adjustments"](#), on page 1383.

• Gain and gain imbalance	461
• I and Q offset	462
• Quadrature offset	462

6.4.2.1 **Gain and gain imbalance**

An I/Q gain is a multiplication of all I/Q amplitudes by a common factor. The effect is equivalent to two identical I and Q gain factors. The effect of an increased gain factor in the I/Q constellation diagram is shown on [Figure 6-6](#).

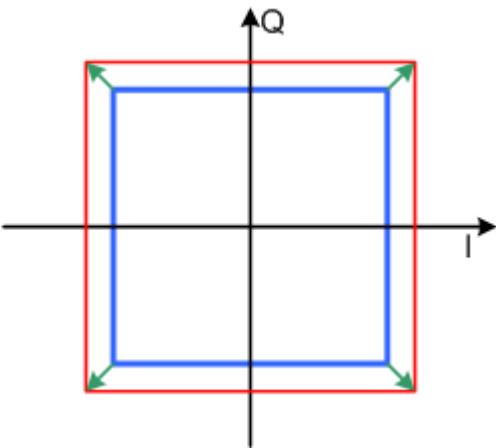


Figure 6-6: Effect of an increased amplitude in the I/Q constellation diagram

An I gain multiplies the I amplitudes by a factor, leaving the Q amplitudes unchanged. A Q gain has the opposite effect. Different I and Q gain factors result in an I/Q imbalance, which is due to different gains of the amplifiers in the I and Q channels of the I/Q modulator. The effect of a positive and negative gain imbalance is shown on [Figure 6-7](#).

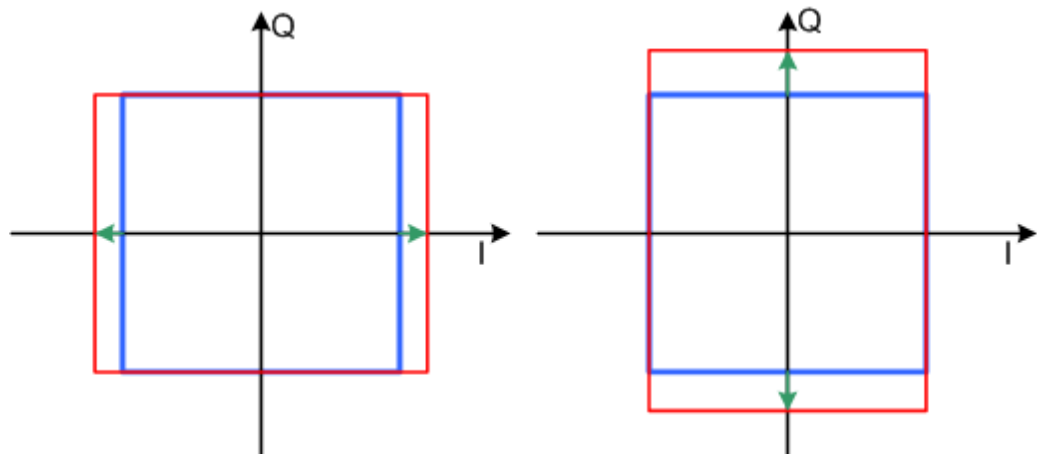


Figure 6-7: Negative gain imbalance (left) and positive gain imbalance (right) in the I/Q constellation diagram

6.4.2.2 I and Q offset

An I offset adds a constant value to all I amplitudes, leaving the Q amplitudes unchanged. A Q offset has the opposite effect. A combination of I and Q values results in an I/Q offset, which is due to carrier feedthrough in the I/Q modulator. Possible reasons are interfering signals at the RF carrier frequency, e.g. an unsuppressed RF carrier subchannel. The effect of a positive I and Q offset in the I/Q constellation diagram is shown on [Figure 6-8](#).

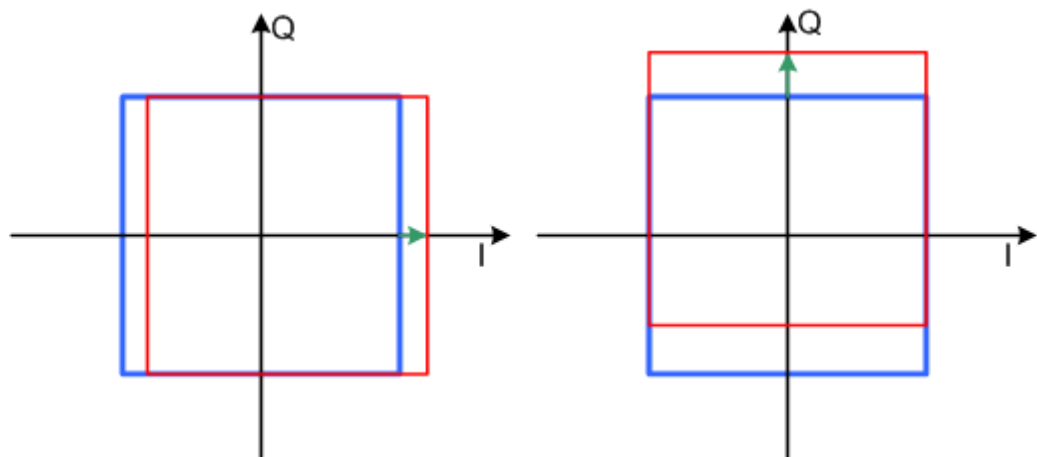


Figure 6-8: I offset (left) and Q offset (right) in the I/Q constellation diagram

6.4.2.3 Quadrature offset

Changes the phase angle between the I and the Q vectors from the ideal 90 degrees, while the amplitudes are maintained. A positive quadrature offset results in a phase angle greater than 90 degrees. The effect of a positive quadrature offset in the I/Q constellation diagram is shown on [Figure 6-9](#).

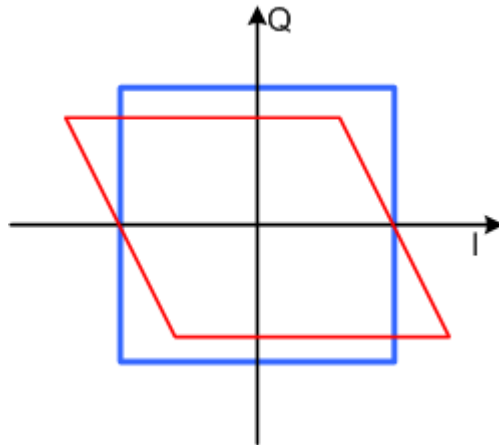


Figure 6-9: Positive quadrature offset in the I/Q constellation diagram


6.4.3 Analog and digital impairments settings

You can add digital impairments to each internal generated I/Q stream and analog impairments to internal generated or external supplied analog I/Q signals.

See also [Chapter 6.4.2, "About the linear I/Q impairments"](#), on page 460.

Accessing analog impairments settings

- Select "I/Q Mod" > "I/Q Analog Impairments".

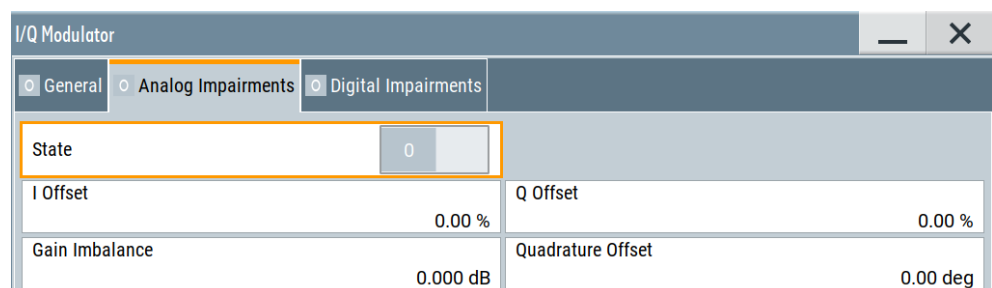

The dialog provides settings to configure I/Q analog impairments, like carrier leakage, imbalance and quadrature offset.

Accessing digital impairments settings

1. Select "I/Q Mod" > "I/Q Digital Impairments" for digital impairing I/Q signals at the I/Q modulator to the RF output.
2. For add digital impairment to the other I/Q streams, access these settings as follows:
 - For analog I/Q outputs, select "I/Q Analog" > "I/Q Digital Impairments".

- For digital I/Q outputs, Select "I/Q Digital" > "I/Q Digital Impairments".

I/Q Modulator	
<input checked="" type="radio"/> General <input type="radio"/> Analog Impairments <input checked="" type="radio"/> Digital Impairments	
State	0
I Offset	0.00 %
Q Offset	0.00 %
Gain Imbalance	0.000 dB
Quadrature Offset	0.00 deg
Skew	0 ps
IQ Delay	0 ps
Phase Offset	0.00 deg

The dialog provides settings to configure I/Q digital impairments, like carrier leakage, imbalance, quadrature offset and I/Q delays.

If you connect an R&S SGT to one of the digital interfaces, the R&S SMW applies digital impairments at this R&S SGT. See also [Figure 4-17](#).

The remote commands required to define these settings are described in:

- [Chapter 14.19.4.6, "SOURce:BB:IMPairment subsystem"](#), on page 1179.
- [Chapter 14.19.9, "SOURce:IQ subsystem"](#), on page 1218.

The instrument can also simulate the effect of non-linear effects like AM/AM and AM/PM conversion.

See the R&S SMW Envelope Tracking and AM/AM, AM/PM Predistortion user manual.

Settings:

State.....	464
I Offset/Q Offset.....	465
Gain Imbalance.....	465
Quadrature Offset.....	465
Skew.....	466
IQ Delay.....	466
Phase Offset.....	466

State

Activates the impairment of the I/Q signal.

If activated, the R&S SMW applies the settings for I/Q offset, gain imbalance and quadrature offset.

Remote command:

For analog impairments: `[:SOURce<hw>] :IQ:IMPairment [:STATe]` on page 1183

For digital impairments:

`[:SOURce] :BB:IMPairment:BBMM<ch>:STATe` on page 1183

`[:SOURce] :BB:IMPairment:FADer<ch>:STATe` on page 1183

`[:SOURce] :BB:IMPairment:IQOutput<ch>:STATe` on page 1183

`[:SOURce] :BB:IMPairment:RF<ch>:STATe` on page 1183

I Offset/Q Offset

Sets a carrier offset (in percent) of the amplitudes (scaled to the peak envelope power (PEP)) for the I and/or Q signal component. An ideal I/Q modulator suppresses the carrier offset completely (offset = 0 percent).

For more information, see:

- [Chapter 6.4.2.2, "I and Q offset"](#), on page 462
- ["To optimize the carrier leakage suppression"](#) on page 467

Remote command:

For analog impairments:

`[:SOURce<hw>] :IQ:IMPairment:LEAKage:I` on page 1181

`[:SOURce<hw>] :IQ:IMPairment:LEAKage:Q` on page 1181

For digital impairments:

`[:SOURce] :BB:IMPairment:BBMM<ch>:LEAKage:I` on page 1181

`[:SOURce] :BB:IMPairment:BBMM<ch>:LEAKage:Q` on page 1181

`[:SOURce] :BB:IMPairment:FADer<ch>:LEAKage:I` on page 1182

`[:SOURce] :BB:IMPairment:FADer<ch>:LEAKage:Q` on page 1182

`[:SOURce] :BB:IMPairment:IQOutput<ch>:LEAKage:I` on page 1182

`[:SOURce] :BB:IMPairment:IQOutput<ch>:LEAKage:Q` on page 1182

`[:SOURce] :BB:IMPairment:RF<ch>:LEAKage:I` on page 1182

`[:SOURce] :BB:IMPairment:RF<ch>:LEAKage:Q` on page 1182

Gain Imbalance

Sets the imbalance of the I and Q vector.

The entry is made in dB (default) or %, where 1 dB offset is roughly 12% according to the following:

$$\text{Imbalance [dB]} = 20 \log (| \text{GainQ} | / | \text{GainI} |)$$

Positive values mean that the Q vector is amplified more than the I vector by the corresponding percentage. Negative values have the opposite effect.

For more information, see:

- [Chapter 6.4.2.1, "Gain and gain imbalance"](#), on page 461
- ["To optimize sideband suppression"](#) on page 467

Remote command:

For analog impairments: `[:SOURce<hw>] :IQ:IMPairment:IQRatio[:MAGNitude]` on page 1181

For digital impairments:

`[:SOURce] :BB:IMPairment:BBMM<ch>:IQRatio[:MAGNitude]` on page 1181

`[:SOURce] :BB:IMPairment:FADer<ch>:IQRatio[:MAGNitude]` on page 1181

`[:SOURce] :BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude]`

on page 1181

`[:SOURce] :BB:IMPairment:RF<ch>:IQRatio[:MAGNitude]` on page 1181

Quadrature Offset

Sets the quadrature offset.

For more information, see:

- [Chapter 6.4.2.3, "Quadrature offset"](#), on page 462
- ["To optimize sideband suppression"](#) on page 467

Remote command:

For analog impairments: `[:SOURce<hw>] :IQ:IMPairment:QUADrature [:ANGLE]` on page 1182

For digital impairments:

`[:SOURce] :BB:IMPairment:BBMM<ch>:QUADrature [:ANGLE]` on page 1182

`[:SOURce] :BB:IMPairment:FADer<ch>:QUADrature [:ANGLE]` on page 1182

`[:SOURce] :BB:IMPairment:IQOutput<ch>:QUADrature [:ANGLE]`

on page 1182

`[:SOURce] :BB:IMPairment:RF<ch>:QUADrature [:ANGLE]` on page 1182

Skew

Sets or displays the delay between the Q vector and the I vector of the corresponding stream.

Setting this delay is possible for I/Q samples in the I/Q modulator ("I/Q Mod" > "I/Q Digital Impairments") and at the I/Q analog output interfaces ("I/Q Analog" > "I/Q Digital Impairments" dialog).

You cannot set a delay at the I/Q digital output interfaces.

See [Figure 4-17](#).

Remote command:

`[:SOURce] :BB:IMPairment:BBMM<ch>:SKEW` on page 1182

`[:SOURce] :BB:IMPairment:FADer<ch>:SKEW` on page 1182

`[:SOURce] :BB:IMPairment:IQOutput<ch>:SKEW` on page 1183

`[:SOURce] :BB:IMPairment:RF<ch>:SKEW` on page 1183

IQ Delay

Sets or display time delay of both I and Q vectors relative to the selected trigger and marker. A positive value means that the I and Q vectors delay relative to the marker or trigger. A negative delay implies the other way around.

Setting this time delay is possible for I/Q samples in the I/Q modulator ("I/Q Mod" > "I/Q Digital Impairments") and at the I/Q analog output interfaces ("I/Q Analog" > "I/Q Digital Impairments").

You cannot set a delay at the I/Q digital output interfaces.

See also [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670.

Remote command:

`[:SOURce] :BB:IMPairment:BBMM<ch>:DELaY` on page 1180

`[:SOURce] :BB:IMPairment:FADer<ch>:DELaY` on page 1180

`[:SOURce] :BB:IMPairment:IQOutput<ch>:DELaY` on page 1180

`[:SOURce] :BB:IMPairment:RF<ch>:DELaY` on page 1180

Phase Offset

Adds a phase offset after the stream mapper.

You can shift the phase at the different stages in the signal generation flow, see:

- "Baseband Offsets" > [Phase Offset](#).
- "I/Q Stream Mapper" > [Phase Offset](#).

Remote command:

[:SOURce]:BB:IMPairment:BBMM<ch>:POFFset on page 1183

[:SOURce]:BB:IMPairment:FADer<ch>:POFFset on page 1183

[:SOURce]:BB:IMPairment:IQOutput<ch>:POFFset on page 1183

[:SOURce]:BB:IMPairment:RF<ch>:POFFset on page 1183

6.4.4 How to optimize the carrier leakage and sidebands suppression

Applying linear I/Q impairments helps to improve signal quality in the following cases:

- To suppress a carrier leakage at the current RF frequency
- To improve the attenuation of the unwanted sidebands

In the following examples, we assume that:

- The R&S SMW generates a baseband signal
- A spectrum analyzer is connected to the R&S SMW, the analyzed is configured, and measures the required signal characteristics.

To optimize sideband suppression

For a given baseband signal, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod" > "I/Q Digital Impairments".
2. Set the values of the parameters "Gain Imbalance" and "Quadrature Offset" to adjust the relative amplitude and phase relationship of the baseband signal.
3. Select "State" > "On".
4. On a connected signal analyzer, monitor the power spectrum.
5. Vary the values of the parameters "Gain Imbalance" and "Quadrature Offset" until the maximal sideband suppression is achieved.

To optimize the carrier leakage suppression

For a given baseband signal, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod" > "I/Q Digital Impairments".
2. Set the parameters "I Offset" and "Q Offset".
3. Select "State" > "On".
4. On a connected signal analyzer, monitor the power spectrum.
5. Vary the I/Q offset until the maximal carrier leakage suppression is achieved.

Adjusting the I and Q offsets is one of the possible ways to control carrier leakage.

See also [Chapter 5.14.3, "How to improve signal characteristics by shifting the baseband signal"](#), on page 433.

6.5 Frequency response correction

Frequency response correction is a method, used to compensate the frequency response influence of the test setup, for example of the cables, power combiners, switches or mixers. In the R&S SMW, you can load user-defined scattering parameters (S-parameters) files and frequency response files and pre-process the internally generated baseband signal with them.

See user manual R&S SMW-K544 User-Defined Frequency Response Correction.

6.6 Applying digital predistortion

Digital predistortion (DPD) is one of the methods, used to improve the efficiency of RF power amplifiers. In the R&S SMW, the generated digital signal can be deliberately AM/AM and AM/PM predistorted.

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

7 Applying I/Q vector modulation

The R&S SMW offers I/Q modulation with an external analog I/Q signals, external digital signals, and the internally generated digital signal.

For a description on the signal impairment functionality and settings for applying non-linear effects, see:

- [Chapter 6.4, "Impairing the signal"](#), on page 460

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

See user manual R&S SMW-K544 User-Defined Frequency Response Correction.

7.1 Required options

The equipment layout for I/Q modulation includes:

- Frequency option (e.g. R&S SMW-B1003)
Sufficient for I/Q modulation with external analog signal
- Option Standard or Wideband Baseband Generator (R&S SMW-B10/-B9) per signal path and
 - Option Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T)
Sufficient for I/Q modulation with internal and external digital signal
 - Or option Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
(I/Q modulation with internal digital signal)
- Option Differential I/Q Inputs (R&S SMW-K739), for RF path A
Required for I/Q modulation with external differential analog signal

7.2 About the I/Q modulator

The R&S SMW offers I/Q modulation with the internally generated digital signal, the external digital signals (when separately processed), and an external analog I/Q signal. The maximum available RF bandwidth of externally applied wideband analog signal is higher than the bandwidths of the internal or external digital signal. For exact values, refer to the instrument specification (data sheet).

Analog I/Q input signals are directly applied to the analog I/Q modulation circuit, and are not routed through the baseband section of the R&S SMW.

Defining the input signal of the I/Q modulator

The [Table 7-1](#) gives an overview of the possible input signals and the connectors they are supplied at. Any of the specified input signals is processed by the I/Q modulator and output at the RF output.

Which logical information, i.e. which **stream**, is output at which connector is defined by the "IQ Stream Mapper".

For additional information, refer to [Chapter 4.3, "Overview of the input and output signals and interfaces"](#), on page 116 and [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135.

Table 7-1: Physical input signals of the I/Q modulator

Input signal	Input connector	GUI parameter
Internal digital baseband signal	-	"I/Q Mod. > I/Q Mod. In > Internal Baseband I/Q In" and "Baseband > On"
<ul style="list-style-type: none"> External analog wideband External differential analog (in the first signal path) 	<ul style="list-style-type: none"> I/Q I/Q Bar 	<ul style="list-style-type: none"> "I/Q Mod. > I/Q Mod. In > Analog Wideband I/Q In" "I/Q Mod > I/Q Settings > Source > Differential Analog I/Q Input"
External digital signal	CODER	"I/Q Mod. > I/Q Modulator Input > Internal Baseband" and "BB Input > On"




Interdependencies

An I/Q modulation with an **external analog** signal cannot be used simultaneously in the same signal path with the following:


- AM, digital modulation, digital standards
- Fading, noise
- External digital baseband input signal, arbitrary waveform generation, and multi-carrier CW.

7.3 I/Q modulator settings

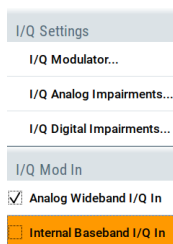

Access:

1. To configure the input signal source of the I/Q modulator, select "I/Q Mod > I/Q Mod In" and enable an internal baseband or an analog wideband input signal.
2. Select "I/Q Mod > I/Q Settings > I/Q Modulator".

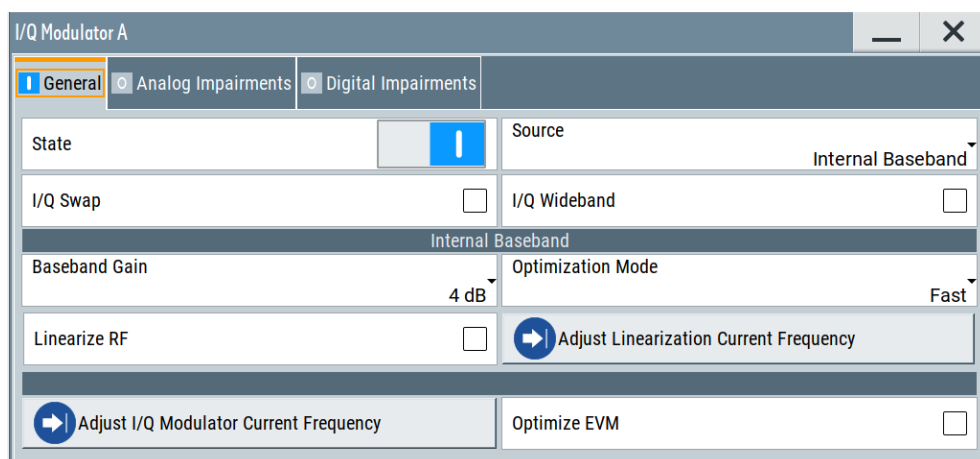

3. To define the external analog signal, select "Source > Differential Analog I/Q Input".

The dialog comprises the I/Q modulator settings, the optimized settings for wideband modulation and settings for enabling the analog and/or digital impairments. The dialog comprises the I/Q modulator settings and settings for enabling digital impairments.

The remote commands required to define these settings are described in [Chapter 14.19.9, "SOURce:IQ subsystem"](#), on page 1218.

For a description on the signal impairment functionality and settings for applying non-linear effects, see:

- [Chapter 6.4, "Impairing the signal"](#), on page 460

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

See user manual R&S SMW-K544 User-Defined Frequency Response Correction.



System error correction of the I/Q modulator permits precise and repeatable measurements.

If a temperature fluctuation of several degrees occurs, trigger the correction routine using the following:

- Select "I/Q Mod > I/Q Modulator > Adjust I/Q Modulator Current Frequency"
- Or select "System Config > Setup > General > Internal Adjustment > Adjust I/Q Modulator Current Frequency".

See also [Chapter 17.3.4.3, "How to use the internal adjustments"](#), on page 1383.

Settings:

State	472
Source	472
I/Q Swap	472
I/Q Wideband	473
Crest Factor	473
Baseband Gain	474
Optimization Mode	474
Linearize RF	475

Adjust Linearization Current Frequency.....	475
Adjust I/Q Modulator Current Frequency.....	475
Optimize EVM.....	476

State

Activates/deactivates I/Q modulation.

Note: Interdependency. If "Source > Internal Baseband", the I/Q modulator is always activated automatically when signal generation is activated ("Baseband > State > On"). I/Q modulation can, however, be deactivated later, e.g. if the relevant signal is the baseband signal and it is directly routed to the I/Q outputs.

Remote command:

[:SOURce<hw>] :IQ:STATe on page 1218

Source

Selects the input signal for the I/Q modulator. Refer to [Table 7-1](#) for an overview of the possible input signals and the connectors they are supplied at.

"Internal Baseband"

Selects the internal baseband signal.

"Analog Wideband I/Q Input"

Selects an external analog signal.

See also ["To apply an external analog signal directly to the I/Q modulator"](#) on page 223.

"Differential Analog I/Q Input"


Option: R&S SMW-K739, for RF path A.

Selects an external differential analog signal.

If the instrument is equipped with one of the [High frequency options](#) and a "Freq > 19.5 GHz" is selected, the "Analog Wideband I/Q Input" is automatically selected.

Remote command:

[:SOURce<hw>] :IQ:SOURce on page 1218

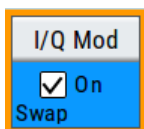

I/Q Swap

Selects normal or swapped I/Q control for the generated signal.

The I/Q modulator defined in the IS2000 standard differs from the definition in this implementation. The definition on which the implementation is based is used by virtually all digital communication standards, except IS95 and IS2000.

In the final step, the filtered IQ signal is modulated to the desired RF in a different way in the I/Q modulator:

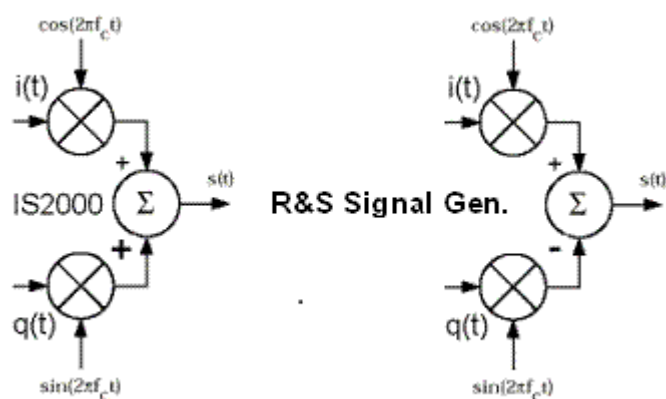


Figure 7-1: Definition of I/Q modulator in IS2000 and the R&S SMW

IS2000 = The RF signal $s(t)$ is derived from the baseband I/Q signal as $s(t) = i(t)\cos(2\pi f_c t) + q(t)\sin(2\pi f_c t)$

R&S SMW = The RF signal $s(t)$ is based on the definition $s(t) = i(t)\cos(2\pi f_c t) - q(t)\sin(2\pi f_c t)$

See also:

- Description "CDMA2000® incl. EV-DV Digital Standard for R&S SMW"
- Description "1xEV-DO Rev. A, Rev. B Digital Standard for R&S SMW"

"Off" I/Q control is normal.

"On" The modulation sidebands are inverted by swapping the I and Q signals (the Q-part of the signal is inverted).
The generated baseband signal is according to standards CDMA2000 and 1xEV-DO.
An I/Q modulator defined according to these standards can cope with the RF signal generated by the R&S SMW.

Remote command:

`[:SOURce<hw>] :IQ:SWAP [:STATe]` on page 1219

I/Q Wideband

Activates/deactivates optimization for wideband modulation signals (higher I/Q modulation bandwidth).

The modulation frequency response of the R&S SMW in the useful bandwidth is improved at the expense of poorer harmonic suppression. This improvement is achieved by shifting the switching frequencies of the lowpass filters in the output section.

Remote command:

`[:SOURce<hw>] :IQ:WBState` on page 1220

Crest Factor

If "Source = Analog Wideband I/Q Input", sets the crest factor of the *externally supplied analog signal*.

The crest factor gives the difference in level between the peak envelope power (PEP) and the average power value (RMS) in dB. The R&S SMW uses this value for the calculation of the RF output power. For more information, refer to [Chapter 4.3.5, "Important signal parameters and interface's characteristics"](#), on page 121

Note:

To set the crest factor of an *externally supplied digital signal*, use the parameter:

- "BB Input > Input Level" > [Crest Factor](#).
- "BB Input > Input Level" > [Crest Factor](#).

See also ["To apply an external analog signal directly to the I/Q modulator"](#) on page 223.

Remote command:

[\[:SOURce<hw>\]:IQ:CREStfactor](#) on page 1219

Baseband Gain

Optimizes the modulation of the I/Q modulator for a subset of measurement requirement. Provided is a dynamic range of 16 dB divided into 2 dB steps. The optimization is a trade-off between signal distortion and signal-to-noise ratio (SNR).

In instruments equipped with one of the [High frequency options](#) and for "Freq > 19.5 GHz", this parameter is disabled.

See also [Chapter 7.4, "Optimizing I/Q modulation performance"](#), on page 476.

"-4 dB/- 2 dB (Low Distortion)"

Activates -4 dB or -2 dB gain.

Baseband signal is internally attenuated to minimize signal distortions; the intermodulation characteristics of signal are optimized, the SNR however decreases.

"0 dB"

No changes on the baseband signal; optimization is not applied.

"+2 dB/ +4 dB/ + 6 dB/ + 8 dB (Low Noise)"

Activates a 2 dB, 4 dB, 6 dB or 8 dB gain

Baseband signal is internally boosted to maximize the SNR; signal noise is minimized, the signal distortions however increase.

These values are suitable for 3GPP signals with high adjacent channel power ratio (ACPR).

"Auto"

The gain value is retrieved from the connected R&S SZU. The I/Q modulator is configured automatically.

Remote command:

For analog I/Q signal:

[\[:SOURce<hw>\]:IQ:GAIN](#) on page 1219

For digital I/Q signal:

[\[:SOURce<hw>\]:BB:IQGain](#) on page 1219

Optimization Mode

Selects the optimization mode. For information on the I/Q modulation performance in any of the modes, see the data sheet.

The selected optimization mode applies for the I/Q modulation performance and for user-defined frequency response corrections.

How to: [Chapter 7.4, "Optimizing I/Q modulation performance"](#), on page 476

"Fast"

Fast optimization by compensating for I/Q skew.

This mode is suitable in time sensitive environments and for narrow-band signals.

"High Quality Table"

This mode further improves the frequency response while maintaining setting time. There is no signal interruption.

Select this mode if repeatable settings together with high-quality optimization. Select it also, if wideband signals are required. The "High Quality Table" mode is useful in the following cases:

- In setups to generate phase-coherent signals
- The R&S SZU is connected to the R&S SMW and the connection is active.
- In DPD setups

See user manual R&S SMW-K540, R&S SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

"High Quality"

With "Source > Internal Baseband", activates optimization by compensating for I/Q skew and frequency response correction.

This mode generates flat signal over large bandwidth but requires longer setting time and leads to signal interruption.

Note:

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

Remote command:

`[:SOURce<hw>] :BB:IMPairment:OPTimization:MODE` on page 1184

Linearize RF

Option: R&S SMW-K541

Enables an automatic AM/AM predistortion of the non-linear RF chain.

During RF linearization, disables "Digital Predistortions AM/AM and AM/PM" settings.

Remote command:

`[:SOURce<hw>] :IQ:DPD:LRF:STATe`

See user manual R&S®SMW-K540, R&S®SMW-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

Adjust Linearization Current Frequency

Calculates the correction data for the currently selected frequency.

During RF linearization, disables "Digital Predistortions AM/AM and AM/PM" settings.

Remote command:

`[:SOURce<hw>] :IQ:DPD:LRF:ADJust`

See user manual Envelope Tracking and AM/AM, AM/PM Predistortion.

Adjust I/Q Modulator Current Frequency

Starts the adjustment for the I/Q modulator for the currently set frequency and base-band gain. The I/Q modulator is adjusted regarding carrier leakage, I/Q imbalance and quadrature.

See also ["To trigger the internal correction routine of the I/Q modulator"](#) on page 477.

Remote command:

`:CALibration<hw>:IQModulator:LOCal?` on page 935

Optimize EVM

Activates further optimization of preexisting excellent EVM performance of I/Q modulated RF signals.

Activate EVM optimization, if your test setup requires lowest EVM values. For example, if you need to generate 5G NR signals, LTE signals or IEEE 802.11 signals that require optimal EVM performance.

If activated, the frequency section of the status bar displays that EVM optimization is active. [Figure 7-2](#) illustrates active EVM optimization for signal path "A".

 


Figure 7-2: EVM optimization state active

Note that when "Optimize EVM" is active, the RF signal requires a longer adjustment time, for example, when changing frequency and level of the RF signal. The signal generation interrupts during adjustment, the R&S SMW displays "Busy" in the status bar indicating a running adjustment process. When the "Busy" state disappears the adjustment finishes and signal generation continues.

Remote command:

`[:SOURce<hw>] :CORRection:OPTimize:EVM` on page 1200

7.4 Optimizing I/Q modulation performance

With its default settings, the I/Q Modulator provides vector modulated signal that is optimized for time sensitive measurements and lower noise.

Adjusting the settings helps to improve signal quality in the following cases:

- To optimize the intermodulation characteristics of the signal
- To optimize the signal-to-noise ratio (SNR) of the signal
- To improve the flatness of the RF signal

In the following examples, we assume that:

- The R&S SMW generates a baseband signal
- A spectrum analyzer is connected to the R&S SMW, the analyzer is configured, and measures the required signal characteristics.

To improve signal flatness

For a given baseband signal and RF frequency, perform the following:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".

The I/Q modulator is enabled. Modulated is the internal baseband signal.

This mode generates flat signal but requires longer settling time and leads to signal interruption.

2. Select "Optimization Mode > High Quality"

Note:

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

3. On a connected signal analyzer, monitor the signal characteristics.

To optimize the intermodulation characteristics of signal

For a given baseband signal and RF frequency, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".
The I/Q modulator is enabled. Modulated is the internal baseband signal.
2. If activated, disable the "I/Q Wideband > Off".
3. Select "Baseband Gain = - 2 dB".
4. On a connected signal analyzer, monitor the signal distortion characteristics.
5. Vary the value of the parameter "Baseband Gain" until the maximal suppression of the intermodulation products is achieved.

To optimize the characteristics of signals with high adjacent channel power ratio (ACPR)

For a given baseband signal (e.g. a 3GPP signal) and RF frequency, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".
The I/Q modulator is enabled. Modulated is the internal baseband signal.
2. Select "Baseband Gain = 6 dB".
3. On a connected signal analyzer, monitor the signal characteristics.
4. Vary the value of the parameter "Baseband Gain" until the maximal signal-to-noise ratio (SNR) is achieved.

To trigger the internal correction routine of the I/Q modulator

System error correction of the I/Q modulator permits precise and repeatable measurements.

If a temperature fluctuation of several degrees occurs, trigger the correction routine using the following:

1. Select "I/Q Mod > I/Q Modulator > Adjust I/Q Modulator Current Frequency"

2. Or select [SETUP] > "System > Internal Adjustments > Adjust I/Q Modulator Current Frequency".
See also [Chapter 17.3.4.3, "How to use the internal adjustments"](#), on page 1383.

To generate a wideband modulation signal

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".
The I/Q modulator is enabled. Modulated is the internal baseband signal.
2. Select "I/Q Wideband > On".

The R&S SMW shifts the switching frequencies of the lowpass filters in the output section and generates signal with higher I/Q modulation bandwidth.
The harmonic suppression, however, degrades.

8 Configuring the RF signal

The vector signal generator R&S SMW generates RF signals with outstanding spectral purity within the frequency range from 100 kHz up to 67 GHz and with adjustable signal level over a wide range.

In addition to these real-time CW signals, you can generate RF signals from predefined lists and sweep signals that vary according to the frequency or amplitude curves.

You can also apply versatile analog modulation types with definable characteristics.

The variably adjustable output level due to the built-in attenuator, allows you to vary the RF signal level over the full level range. There are different methods to improve signal performance and to optimize the signal quality for the particular application, or to increase the accuracy and reliability of the generated RF signal.

The R&S SMW supports R&S NRP power sensors, e.g. to monitor the output level of the generator or to determine the level correction values for user correction lists.

Signal modes and characteristics

The R&S SMW generates unmodulated or analog modulated RF signals. You can output the signal in fixed mode or as a signal having periodically varying frequencies or amplitudes.

Signal modes for RF signal generation:

- Unmodulated signal
Generates an unmodulated continuous wave (CW) of constant frequency and amplitude.
For information on the signal frequency and level settings and example on how to configure a simple CW signal, see:
 - [Chapter 8.5, "RF frequency settings"](#), on page 485
 - [Chapter 8.6, "RF level settings"](#), on page 489
 - [Chapter 8.7, "RF phase settings"](#), on page 494
 - [Chapter 3.3.1, "Generating an unmodulated carrier"](#), on page 55
- Analog modulated signal
Modulates the signal with an analog signal and generates amplitude, phase, frequency and pulse modulation.

See [Chapter 8.11, "Analog modulations"](#), on page 552.

- Vector modulated signal
Generates an I/Q vector modulated signal
See [Chapter 7, "Applying I/Q vector modulation"](#), on page 469.

The R&S SMW allows you to provide the RF signal with constant or varying frequencies and/or amplitudes at the output:

- Constant frequency and level (CW/Fixed mode)
The RF output signal has the set frequency and level.
- Varying frequency and/or level
 - Sweep mode

An RF or LF frequency and RF level sweep signal, processed continuously, step-by-step or individually and with selectable trigger modes. You can only run one sweep at a time.

- List mode

The RF signal is based on a list of predefined frequency and level values pairs and step widths.

See [Chapter 8.10, "Varying the RF signal in list or sweep mode"](#), on page 513.

8.1 Required options



To improve the signal performance of the R&S SMW, several hardware components in the RF domain have been replaced. New option numbers denote the hardware modifications.


Accordingly, the description in the user manual has been extended. It applies to all new options, as for example R&S SMW-B1006, but also comprises the former ones.

Differences to instruments with the former RF hardware are referred to as *earlier RF hardware versions*.

The equipment layout for generating the RF signal includes:

- Option frequency (e.g. R&S SMW-B1003) for signal path A
- Option frequency (e.g. R&S SMW-B2003) for signal path B
- Option baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or Option wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
Option R&S SMW-B13T/-B13XT is required for simultaneously vector and an analog frequency or phase modulation in the same path

8.2 How to access the RF settings

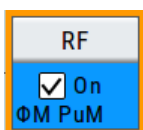

Access:

1. In the block diagram, select the block "RF > RF".
2. Select the required function from the list.

The RF block covers all functions and settings concerning the RF signal. The settings include the RF frequency and level settings, enhanced functions for improving the signal characteristics, analog modulations, list and sweep mode settings and connector assignments and measurement functions of the RF signal.

The following overview shows all functions of the RF block and leads you to the corresponding descriptions.

Table 8-1: RF block menu

Menu item	Content	Described in ...
RF Frequency		
RF On	Activates RF signal output.	Chapter 8.3, "How to activate RF signal output" , on page 482
Connectors	The instrument's customizable input and output interfaces: <ul style="list-style-type: none"> • Global connectors • Local connectors 	Chapter 12.2, "Configuring local and global connectors" , on page 745
Frequency / Phase	<ul style="list-style-type: none"> • RF signal frequency and phase settings • The various possibilities for accessing the frequency settings • Impact of a downstream instrument to the frequency display 	Chapter 8.4, "How to set the frequency and level" , on page 483
Reference Frequency / LO Coupling	<ul style="list-style-type: none"> • Internal and external reference frequency • Local oscillator (LO) • LO coupling 	Chapter 8.8, "Reference oscillator" , on page 495 and Chapter 8.9, "Local oscillator coupling" , on page 504
RF Level		
Level	<ul style="list-style-type: none"> • RF signal level settings • The various possibilities for setting the level • Impact of a downstream instrument to the level display 	Chapter 8.4, "How to set the frequency and level" , on page 483
Attenuator	The electronic step attenuator settings.	Chapter 8.12.1, "Attenuator" , on page 586
Power on / EMF	<ul style="list-style-type: none"> • Determine the state of the RF signal output at power-on • Voltage level display in the status bar (no-load voltage) 	Chapter 12.1.4, "Defining the RF signal state on power on" , on page 742
Automatic Level Control	The automatic adaptive control system to stabilize the RF output level.	Chapter 8.12.2, "ALC - automatic level control" , on page 589
User Correction	The level correction function for compensating external losses.	Chapter 8.12.3, "User correction" , on page 593
RF Measurement		Chapter 8.12.4, "Using power sensors" , on page 605
Power Viewer	Function for monitoring and measuring the RF output power.	Chapter 8.12.4.2, "NRP power viewer" , on page 608
Power Control	Function to achieve a precise and constant output level with a downstream closed loop power control circuit.	Chapter 8.12.4.3, "NRP power control" , on page 610
Sensor Configuration	Settings for connected R&S NRP power sensors.	Chapter 8.12.4.4, "NRP sensor configuration" , on page 616

Menu item	Content	Described in ...
Sensor Mapping	Function for assigning R&S NRP power sensors to the four sensor channels.	Chapter 8.12.4.5, "NRP sensor mapping" , on page 621
Analog Modulation	All settings for analog modulations, including the LF signal and some typical examples.	Chapter 8.11, "Analog modulations" , on page 552
Amplitude / Frequency / Phase Modulation	AM, FM and PhiM settings.	Chapter 8.11.4, "Modulation settings" , on page 563
Pulse Modulation	Pulse modulation settings: <ul style="list-style-type: none"> • General settings • Pulse generator settings • Graphical display of the pulse signal 	Chapter 8.11.4.1, "Pulse modulation settings" , on page 563
Modulation Source	Signal sources for the LF signal: <ul style="list-style-type: none"> • Internal signal generators • Externally applied LF signal • LF signal shapes 	Chapter 8.11.2, "Modulation signals" , on page 554 and Chapter 8.11.2.4, "Modulation signal waveforms" , on page 560
LF Output	Configures the LF signal for output.	Chapter 8.11.4.6, "Output settings" , on page 580
Sweep / List	Information on configuring an RF signal with varying frequencies or amplitudes, either in Sweep or List Mode.	Chapter 8.10, "Varying the RF signal in list or sweep mode" , on page 513
RF Frequency / RF Level Sweep / LF Frequency Sweep	Sweep mode settings.	Chapter 8.10.5, "Sweep mode settings" , on page 530
List Mode	List mode settings.	Chapter 8.10.6, "List mode settings" , on page 540

8.3 How to activate RF signal output

By default, the RF output signal is disabled. When you activate the RF output, the instrument restores the previously set signal configuration

To activate the RF output

1. Configure the RF signal as required.
Set, for example, the frequency and level values.
2. Enable the RF output in one of the following ways:
 - a) In the status bar, select the "RF On" icon and enable RF.
 - b) In the block diagram, select the "On" checkbox of the RF block.
 - c) In the RF level settings menu, select "Level > RF ON > On"
 - d) At the front panel, press the [RF ON/OFF] key.

The blue color of the "RF On" icon and the RF block indicate that the RF signal output is enabled.

RF State/RF ON.....	483
PEP.....	483
RF output impedance.....	483

RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF ON/OFF] key.

Remote command:

`:OUTPut<hw>[:STATe]` on page 959

`:OUTPut:ALL[:STATe]` on page 959

PEP

Displays the PEP (Peak Envelope Power) in the status bar. This value corresponds to the level specification of a digital modulation or of a digital standard signal at the RF output.

Remote command:

`[:SOURce<hw>]:POWer:PEP?` on page 1280

RF output impedance

You can query the impedance of the RF output.

Remote command:

`:OUTPut<hw>:IMPedance?` on page 960

8.4 How to set the frequency and level

The simplest form of the RF signal is a continuous wave (CW) of constant frequency and amplitude. The RF signal is defined by its frequency, level and phase.

To access the frequency, level and phase settings

► Use one of the following:

- "Status bar > Frequency and Level"
- "Status bar > RF Off/On > RF Frequency > Frequency"
- "RF block > RF > RF Frequency > Frequency"
- "RF block > RF > RF Level > Level"
- "RF block > RF > RF Frequency > Phase"
- "Block diagram" > RF connector label "RF > RF Frequency > Frequency", etc.
- At the front panel, press the [FREQ] or the [LEVEL] key.

The frequency and level values are indicated in the "Status bar" so that you can see them at a glance. Values displayed in the status bar and in the "Frequency/Level" dialogs can deviate from each other.

8.4.1 References

This section shows how the R&S SMW includes the factors of a downstream instrument to provide an optimal RF signal for the DUT.

8.4.1.1 Displayed RF frequency and level values with downstream instruments

If you are working with a downstream instrument, like a mixer, a frequency multiplier, an amplifier or an attenuator, you can enter the parameter (offset, multiplier, amplitude) of the downstream instrument in the frequency or level settings dialog of the R&S SMW.

The generator includes these parameters and displays the result in the "Freq" and "Lev" fields in the status bar, as if the downstream instrument and the generator were one unit. Thus, the displayed value corresponds to the value at the RF output of the downstream instrument.

The R&S SMW generates the signal without the downstream parameters, but considers all additional features concerning the RF level, like digital attenuation, user correction, etc.

RF frequency and level display with a downstream instrument


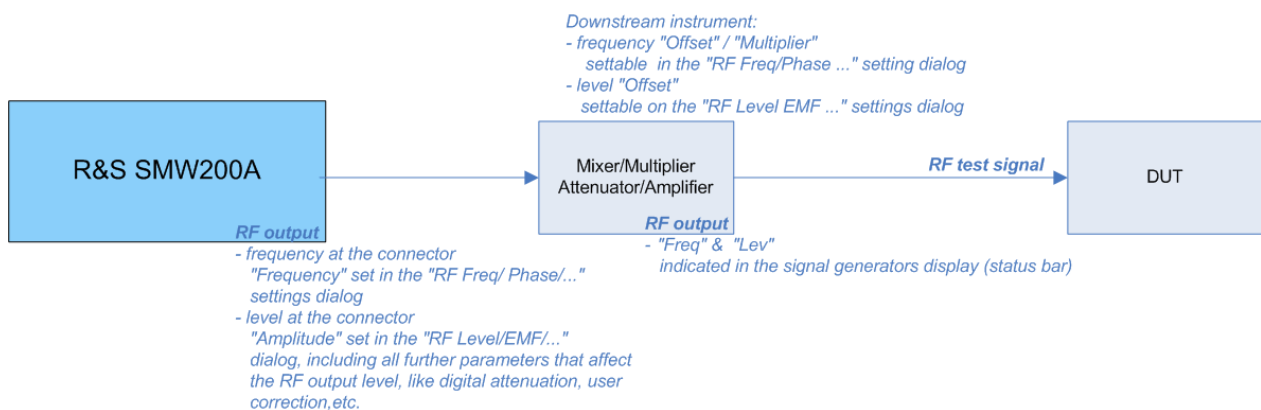


Figure 8-1: RF frequency & level display vs. RF output frequency

As shown on [Figure 8-1](#), there are further parameters in addition to the frequency and amplitude, which affect the RF signal for the DUT, e.g. impacts of subsequent instruments. To include these impacts already in the configuration, you can set the associated parameters directly in the dialogs (see [RF frequency settings](#), or [RF level settings](#)).

In the "Freq" and "Lev" fields of the status bar, the R&S SMW shows the results of the following correlations:

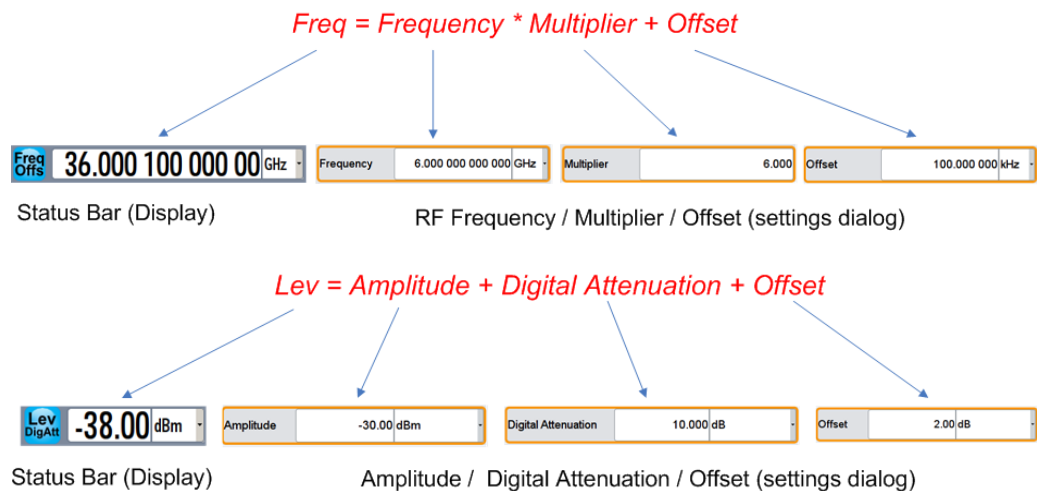

The level displayed in the status bar includes "Amplitude", "Offset" and "Digital Attenuation".

"Offset" represents a level value that impacts the RF signal outside the R&S SMW. In contrast, the "Digital attenuation" directly affects the level value at the RF output.

Further settings that affect the level at the RF output, like user correction, are indicated by an icon in the status bar.

8.5 RF frequency settings

Access:

- Select "RF" > "RF Frequency" > "Frequency".

In the "RF Frequency" dialog, you can configure:

- RF frequency, incl. an offset or multiplication factor of a downstream instrument
- The step size for varying the frequency with the rotary knob.
- The frequency overrange, If an R&S SZU is connected, see ["Frequency Over-range"](#) on page 488.

The remote commands required to define the settings are described in [Chapter 14.19.6, "SOURce:FREQuency subsystem"](#), on page 1205.

Settings

Frequency.....	486
Offset.....	486
Multiplier.....	487
Converter Mode.....	487
Frequency Overrange.....	488
L Frequency Overrange Active.....	488
L Minimal Frequency.....	488
L Maximal Frequency.....	489
User Variation.....	489
L Variation Active.....	489
L Variation Step.....	489

Frequency

Sets the RF frequency.

This frequency is output at the RF A/RF B connector. It does not consider an [Offset](#) or multiplication factor ([Multiplier](#)).

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Note: Suppressed values in the status bar

 
For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- *********

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)



The display is disabled when:

- List mode is running, see [Chapter 8.10, "Varying the RF signal in list or sweep mode"](#), on page 513.
- Digital only signals are generated, see the user manual "R&S SMW-K551 Generation of Digital "Slow IQ" Signals"

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]](#) on page 1210

Offset

Sets the frequency offset.

This value represents the frequency shift of a downstream instrument, like for example a mixer.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMW RF output is not changed.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Remote command:

`[:SOURce<hw>] :FREQuency:OFFSet` on page 1212

Multiplier

Sets the multiplication factor for the RF frequency.

This value represents the multiplication factor of a downstream instrument, as for example a multiplier. You can also assign a negative multiplication factor, for example -1.0 to support frequency converters working in the reverse frequency position.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMW RF output is not changed.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Remote command:

`[:SOURce<hw>] :FREQuency:MULTiplier` on page 1212

Converter Mode

Selects the mode for calculating the output frequency of a downstream converter.

Example: Functionality of the converter mode

As the R&S SMW is a 2 path signal generator, it optimally supports external frequency converters. For convenient operation, this functionality calculates the resulting system frequency.

The converter mixes an I/Q modulated RF signal of the first path with an unmodulated, multiplied signal generated in the second path of the R&S SMW.

To configure the converter frequency:

- Set the frequency of the modulation carrier and the multiplication factor in the first path.
- Select the mixing frequency in the second path.
According to the selected converter mode, the R&S SMW shows the resulting frequency in the status bar.

The modes selectable show the basis of the calculation. Due to the interaction of the two paths, active converter modes are mutually exclusive. Depending on the band to be used, select the appropriate mode:

"OFF" No converter considered.

"Multiplier * RFB + RFA" / "Multiplier * RFA + RFB"
Uses the upper sideband.

"Multiplier * RFB - RFA" / "Multiplier * RFA - RFB"
Uses the lower sideband.

Remote command:

n.a.

Frequency Overrange

This section applies to an R&S SZU100A IQ Upconverter connected to the corresponding path.

An R&S SZU can support a wider frequency range than the range given in the data sheet due to component and manufacturing tolerances. To benefit from the extended range, the R&S SMW provides accessing this overrange, e.g. if required for certain test setups.

The R&S SMW obtains the calibration data of the R&S SZU when you establish the connection, see ["To connect and configure an R&S SZU"](#) on page 206. If the calibration data confirm an extended range, the R&S SMW displays the expanded frequency range, and you can enable the overrange for use.

Frequency Overrange	
Frequency Overrange Active	<input checked="" type="checkbox"/>
Minimal Frequency	Maximal Frequency
56.940 000 000 0 GHz	66.180 000 000 0 GHz

The remote commands required to define these settings are described in [Chapter 14.19.7, "SOURce:FREQuency:CONVerter subsystem"](#), on page 1215.

Frequency Overrange Active ← Frequency Overrange

Activates the overrange operation.

The [Minimal Frequency](#) and [Maximal Frequency](#) parameters show the actual frequency range the specific R&S SZU100A provides.

Note: The performance in the extended range can deviate from the specified values given in the data sheet of the R&S SZU100A.

Note: Preset behavior.

The impact of an instrument preset depends on the "Preset behavior: keep connections to external instruments" setting in the connection configuration:

- Enabled
The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.
- Disabled
The instrument preset also deactivates the frequency overrange.

See [Chapter 4.4.3.1, "Connections configuration and connection status overview settings"](#), on page 139

Remote command:

`[:SOURce<hw>] :FREQuency:CONVerter:EXTernal:OVERrange [:STATe]`

on page 1216

Minimal Frequency ← Frequency Overrange

Displays the minimum frequency value of the connected R&S SZU100A.

Remote command:

`[:SOURce<hw>] :FREQuency:CONVerter:EXTernal:OVERrange:FREQuency:MIN?` on page 1216

Maximal Frequency ← Frequency Overrange

Displays the upper frequency value of the connected R&S SZU100A.

Remote command:

`[:SOURce<hw>] :FREQuency:CONVerter:EXTeRnal:OVERrange:FREQuency:MAX?` on page 1216

User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

Variation Active ← User Variation

Activates the set user-defined step width.

Remote command:

`[:SOURce<hw>] :FREQuency:STEP:MODE` on page 1214

`[:SOURce<hw>] :POWeR:STEP:MODE` on page 1284

Variation Step ← User Variation

Sets the user-defined step width.

Remote command:


`[:SOURce<hw>] :FREQuency:STEP [:INCRe ment]` on page 1214

`[:SOURce<hw>] :POWeR:STEP [:INCRe ment]` on page 1285

8.6 RF level settings


Access:

1. Select "RF" > "RF Level" > "Level".

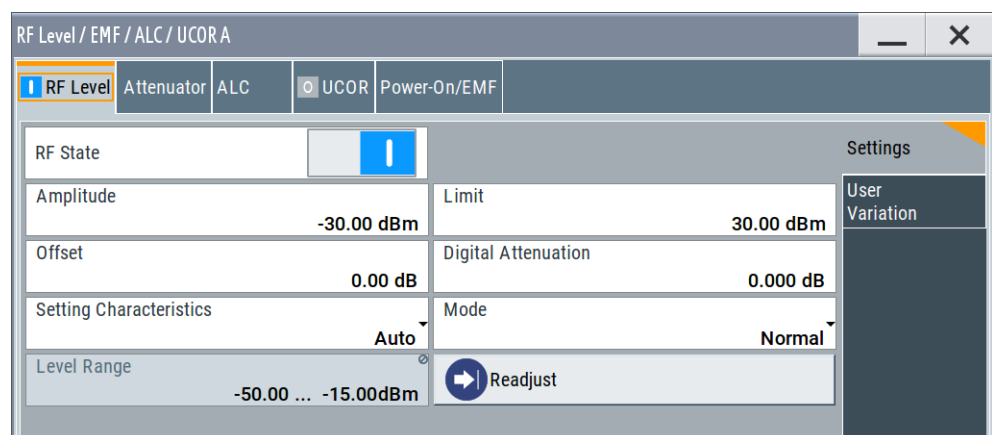

In the "RF Level" dialog, you can configure the offset-free level, the level limit, and the step width for varying the level with the rotary knob.

2. Select "User Variation" to set the step width to be used when setting the RF level using the rotary knob.

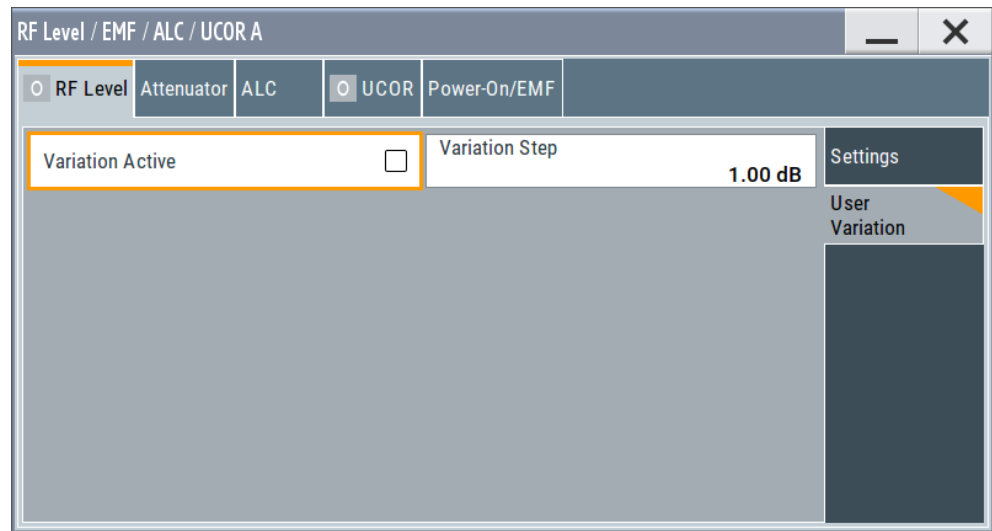

The remote commands required to define the settings are described in [Chapter 14.19.17, "SOURce:POWer subsystem"](#), on page 1272.

Settings

RF State/RF ON.....	490
Amplitude.....	490
Digital Attenuation.....	491
Mode.....	491
Setting Characteristics.....	492
Level Range.....	493
Readjust.....	493
Limit.....	493
Offset.....	493
User Variation.....	494
L Variation Active.....	494
L Variation Step.....	494

RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF ON/OFF] key.

Remote command:

`:OUTPut<hw>[:STATe]` on page 959

`:OUTPut:ALL[:STATe]` on page 959

Amplitude

Sets the level of the RF signal.

The value is offset-free and corresponds to the level at the RF A/RF B connector.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Note: Suppressed values in the status bar

For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- *********

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)



The display is disabled when:

- List mode is running, see [Chapter 8.10, "Varying the RF signal in list or sweep mode"](#), on page 513.
- Digital only signals are generated, see the user manual "R&S SMW-K551 Generation of Digital "Slow IQ" Signals"

Remote command:

`[:SOURce<hw>] :POWer:POWer` on page 1281

Note: The SCPI command `[:SOURce<hw>] :POWer[:LEVel] [:IMMediate] [:AMPLitude]` sets the level of the "Level" display.

This means, the level containing offset.

Digital Attenuation

Attenuates or raises the level of the internal, digitally modulated I/Q baseband signals, and thus the level of the RF signal accordingly.

The function allows fast level changes of the internal I/Q signals. You can determine an attenuation value between -3 dB and +80 dB. The instrument calculates the digital attenuation to the $Level_{PEP}$ and the $Level_{rms}$ as follows:

$$Level_{PEP(RF\ output)} = Level_{PEP} - \text{Digital Attenuation}$$

$$Level_{rms(RF\ output)} = Level_{rms} - \text{Digital Attenuation}$$

The level range changes accordingly.

Note: The digital attenuation has no effect on the RF output level when you work in CW mode or with externally applied I/Q signals, i.e. with unmodulated signals. If the digital attenuation effects the RF level, the R&S SMW indicates the resulting level in the "Status bar". It is also denoted by an icon next to the level indicator.

See ["Level Offset & Level EMF Offset & Level Ucor & Level Digital Attenuation"](#) on page 1397.

Note also that several other parameters affect the displayed RF level value.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Remote command:

`[:SOURce<hw>] :POWer:ATTenuation:DIGital` on page 1277

Mode

Allows you to optimize the RF output signal for applications, where improved harmonic distortion or improved wideband noise is required.

- "Normal" Generates an RF output signal with high signal to noise ratio as well as low distortion, according to the data sheet.
- "Low Noise" Optimizes the signal to noise ratio.
- "Low Distortion" Reduces distortion (harmonics) of the RF signal to a minimum.

Remote command:

[:SOURce<hw>] :POWer:LMODE on page 1279

Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

- "Auto" Sets the RF output level automatically according to the selected mode.
In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.
The RF signal is shortly blanked when the step attenuator is switching.
- "Uninterrupted" Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.
This mode reduces the dynamic range of the instrument. The step attenuator is fixed.
- Note:**
Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".
The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.
- "Strictly Monotone" Executes signal level changes monotonically increasing or decreasing.
The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.
All electronic switches, which can affect the monotonicity are fixed.
The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.
- "Constant-VSWR" Suppresses output impedance variations at the RF A/RF B output connector, due to changed level settings.
- "Continuous-Phase" Suppresses phase discontinuities.
This mode reduces the dynamic range of the instrument and the step attenuator is fixed (equates to "Strictly Monotone").

"Constant-Phase"

This mode keeps the phase constant by coupling the digital attenuation directly to the level setting.

Note: The coupling is only active when the I/Q modulator is in operation.

Pressing **Readjust** adds the value of the digital attenuation to the level setting, and sets the **Digital Attenuation = 0**. In total, the level value remains constant.

"User"

Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

`[:SOURce<hw>] :POWer:LBEHaviour` on page 1278

Level Range

Shows the interruption-free range of the level that you can use in the selected mode.

Remote command:

`:OUTPut<hw>:AFIXed:RANGe:LOWer?` on page 961

`:OUTPut<hw>:AFIXed:RANGe:UPPer?` on page 961

Readjust

Recalculates and adjusts the internal switch positions of the RF chain according to the current level.

In "Sample & Hold" or "Sample & On" mode, the function also triggers a new sample process. During the recalculation, the output level is blanked briefly.

Remote command:

`[:SOURce<hw>] :POWer:ALC:SONCe` on page 1276

Limit

Sets an upper limit for the output power.

The parameter "RF level" > "Limit" is identical with "NRP power control" > "RF Amplitude Limit", see

- [Chapter 8.6, "RF level settings"](#), on page 489
- ["NRP power control settings"](#) on page 611

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce<hw>] :POWer:LIMit [:AMPLitude]` on page 1279

Offset

Sets a level offset.

This value represents the level shift of a downstream instrument, like, for example, an attenuator or an amplifier.

The "Level" value displayed in the status bar is the resulting level, as it is at the output of the downstream instrument. The level at the R&S SMW RF output is not changed.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Remote command:

`[:SOURce<hw>] :POWER [:LEVel] [:IMMediate] :OFFSet` on page 1285

User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

Variation Active ← User Variation

Activates the set user-defined step width.

Remote command:

`[:SOURce<hw>] :FREQuency :STEP :MODE` on page 1214

`[:SOURce<hw>] :POWER :STEP :MODE` on page 1284

Variation Step ← User Variation

Sets the user-defined step width.

Remote command:

`[:SOURce<hw>] :FREQuency :STEP [:INCRe ment]` on page 1214


`[:SOURce<hw>] :POWER :STEP [:INCRe ment]` on page 1285

8.7 RF phase settings

The phase in sinusoidal signals defines the initial angle at its origin.

Access:

- Select "RF" > "RF Frequency" > "Phase".

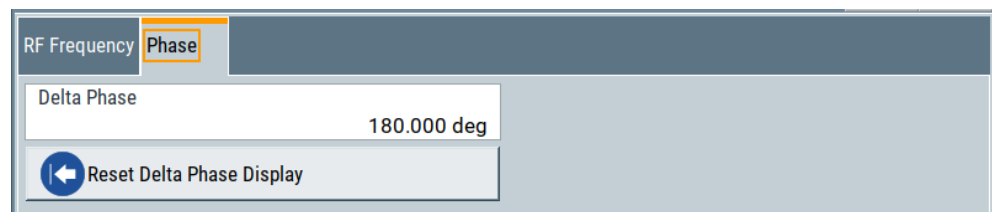

In the "RF Phase" tab, you can determine the delta phase value and reset the phase to this reference.

The remote commands required to define the settings are described in [Chapter 14.19.16, "SOURce:PHASe subsystem"](#), on page 1271.

Settings

Delta Phase	495
Reset Delta Phase Display	495

Delta Phase

Sets the phase of the RF signal.

The current phase of the signal is used as the reference.

Note: Achieving long-term stable phase-locked coupling. We recommend that you use the LO coupling feature, if you try to synchronize the output signal with the phase of a second signal generator for example.

See [Chapter 8.9, "Local oscillator coupling"](#), on page 504.

Remote command:

[\[:SOURce<hw>\]:PHASe](#) on page 1272

Reset Delta Phase Display

Adopts the selected "Delta Phase" value as the current value, and resets delta phase to 0 degrees.

Remote command:

[\[:SOURce<hw>\]:PHASe:REFeRence](#) on page 1272

8.8 Reference oscillator

The R&S SMW is equipped with an internal reference oscillator that generates a reference frequency of 10 MHz. It is used as internal reference source for the synthesizer.

Alternatively, you can apply an external reference signal. If equipped with the required options, the R&S SMW can process external reference frequency in the range 1 MHz to 100 MHz and the 1 GHz reference frequency.

Regardless of the used reference source (internal or external), the R&S SMW always provides the configured reference frequency at the output. You can use it, for example to synchronize several interconnected instruments, see [Chapter 8.8.5, "Using the reference frequency for instruments synchronization"](#), on page 501, for an overview of typical test situations.



The reference oscillator settings are not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. They are reset only by factory preset.

8.8.1 Required options

R&S SMW base unit equipped with the following options:

- 100 MHz, 1 GHz ultra low noise reference input and output (R&S SMW-K703)
- 1 MHz to 100 MHz flexible reference input (R&S SMW-K704)

For more information, see data sheet.

8.8.2 Reference frequency settings

Access:

1. Select "RF" > "RF Frequency" > "Reference Frequency".

In the "Reference Frequency" tab, you can select the reference frequency signal source and the frequency and synchronization bandwidth mode of an external reference signal.

2. Observe the information in the status bar of the block diagram.

The status bar indicates the current oscillator configuration.



The remote commands required to define these settings are described in [Chapter 14.19.18, "SOURCE:ROSCillator subsystem"](#), on page 1288.



Dependencies on RF hardware versions

The supported external reference frequencies depend on the versions of the RF hardware components, the R&S SMW is equipped with.

See:

- ["Checking the installed hardware options"](#) on page 1365
- ["Checking the RF hardware assembly"](#) on page 1365
- [Appendix: RF Hardware Versions](#), on page 1391

Settings:

Source	497
Show Connector	497
Deactivate RF Output (if external reference is missing)	497
External Reference Frequency	497
Variable Reference Frequency	498

Synchronization Bandwidth.....	498
Nominal Synchronization Bandwidth.....	498
Minimum Locking Range.....	499


Source

Selects the reference frequency source.

"Internal" Uses the internal reference oscillator, either with calibrated or a user-defined [Adjustment Value](#).

Note: The internal reference frequency automatically uses [Synchronization Bandwidth > Narrow](#). Thus, if you preset this parameter, or set the reference source from "External" to "Internal" manually, the R&S SMW sets the bandwidth to "Narrow".

"External" Uses an external reference signal.

Note: If the external reference is missing, the R&S SMW issues a warning message and indicates the icon  (external reference missing).

To set the frequency of the external reference, see ["External Reference Frequency"](#) on page 497.

Remote command:

[\[:SOURce\]:ROSCillator:SOURce](#) on page 1290



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Deactivate RF Output (if external reference is missing)

Turns off the RF output when the external reference signal is selected, but no signal is supplied.

This function prevents that no improper RF signal due to the missing external reference signal is used for measurements. A message indicates that the RF output is deactivated.

Remote command:

[\[:SOURce\]:ROSCillator:EXTeRnal:RFOFf\[:STATe\]](#) on page 1290

External Reference Frequency

Selects the frequency of the external reference signal.

Set the reference output frequency with the parameters in the [Reference output settings](#) dialog.

The settings depend on the versions of the RF hardware, see [Appendix: RF Hardware Versions, on page 1391](#).

"10 MHz" Selects 10 MHz for the external reference frequency signal.

"100 MHz, 1 GHz"

Option: R&S SMW-K703

Selects the external reference frequency.

"Variable" Option: R&S SMW-K704
The external reference signal has an arbitrary frequency, within the permissible range from 1 MHz to 100 MHz.

"5 MHz, 10 MHz, 13 MHz"
Option: none (*earlier RF hardware versions*)
Selects the frequency corresponding to the signal at the reference input.

Remote command:

`[:SOURce] :ROSCillator:EXTernal:FREQuency` on page 1290

Variable Reference Frequency

Option: R&S SMW-K704

Sets the variably settable external reference frequency.

The settings depend on the versions of the RF hardware, see [Appendix: RF Hardware Versions, on page 1391](#).

Remote command:

`[:SOURce] :ROSCillator:EXTernal:FREQuency:VARiable` on page 1290

Synchronization Bandwidth

Selects the synchronization bandwidth for an external reference signal, set with [Source > External](#).

The resulting bandwidth is indicated by the parameter [Nominal Synchronization Bandwidth](#).

Note: If you preset or set the reference source from "External" to "Internal", the synchronization bandwidth is reset to "Narrow".

"Narrow" The internal reference oscillator is synchronized to the external signal with narrow bandwidth.
This setting is recommended if the phase noise of the external signal is worse than the phase noise of the internal OCXO.

"Wide" Synchronizes the internal oscillator to the external signal with the maximum possible bandwidth.
This mode is the recommended standard mode and for precise reference sources of high spectral purity.

Note: If the frequency of the external reference signal is outside the locking range of the internal reference oscillator, spurs due to the difference of the internal and external reference frequency are generated in the reference PLL.

The R&S SMW issues an error message.

For more information, see data sheet.

Remote command:

`[:SOURce] :ROSCillator:EXTernal:SBANDwidth` on page 1291

Nominal Synchronization Bandwidth

Indicates the nominal synchronization bandwidth for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).

The settings depend on the versions of the RF hardware, see [Appendix: RF Hardware Versions, on page 1391](#).

Remote command:
`[:SOURce] :ROSCillator:EXTernal:NSBandwidth?` on page 1292

Minimum Locking Range



Indicates the minimum locking range for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).

The settings depend on the versions of the RF hardware, see [Appendix: RF Hardware Versions, on page 1391](#).

Remote command:
`[:SOURce] :ROSCillator:EXTernal:MLRange?` on page 1291

8.8.3 Reference output settings

- Access:
1. Select "RF" > "RF Frequency" > "Reference Frequency".
 2. Select "Reference Output".

Reference Output	10 MHz	 Show Connector ...
Reference Output 1GHz	Off	 Show Connector ...

In the "Reference Output" tab, you can set the reference frequency value at the output connectors.

As a result of parameter dependencies, "Preset This Parameter" sometimes does not affect output dialogs.

The remote commands required to define these settings are described in [Chapter 14.19.18, "SOURce:ROSCillator subsystem"](#), on page 1288.

Settings:

Reference Output/1 GHz Reference Output	499
Show Connector	500

Reference Output/1 GHz Reference Output

Selects frequency reference output signal for downstream instruments.

The settings depend on the versions of the RF hardware, see [Appendix: RF Hardware Versions, on page 1391](#).

- | | |
|----------|---|
| "Off" | Deactivates the reference signal output. |
| "10 MHz" | Derives a signal with 10 MHz frequency from the internal reference oscillator and provides this signal at the output. |

- "100 MHz" Option: R&S SMW-K703
Provides the 100 MHz reference frequency signal at the output.
- "1 GHz" Option: R&S SMW-K703
Provides the 1 GHz reference frequency signal at the output.
- "Input Signal (loop through)"
Option: R&S SMW-K703/-K704
Passes the external reference frequency to the output directly.
- "Same As Reference Input"
(earlier RF hardware versions)
Passes the assigned reference frequency to the output directly.
- "10 MHz Derived From Ref. Output"
(earlier RF hardware versions)
Derives a signal with 10 MHz frequency from the reference input and forwards this signal to the output.

Remote command:

`[:SOURce] :ROScillator :OUTPut :FREQuency :MODE` on page 1292



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

8.8.4 Adjustment settings

Access:

1. Select "RF" > "RF Frequency" > "Reference Frequency".
2. Select "Adjustment".

Adjustment Active <input checked="" type="checkbox"/>	Adjustment Value	0
---	------------------	---

Settings:

[Adjustment Active](#)..... 500
[Adjustment Value](#)..... 501

Adjustment Active

Selects the adjustment mode.

- "Off" Uses the calibrated internal reference frequency.
- "On" Allows you to apply a deviation to the internal reference frequency, according to your requirements.
Enter the value in the [Adjustment Value](#) field.

Remote command:

`[:SOURce] :ROSCillator [:INTernal] :ADJust [:STATe]` on page 1292

Adjustment Value

Sets a user-defined adjustment value for the internal reference frequency. This value takes effect when it is activated with [Adjustment Active](#).

- "0" represents the calibrated state.
- The setting range depends on the reference oscillator type and its factory calibration value.

Note:

The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce] :ROSCillator [:INTernal] :ADJust :VALue` on page 1292

8.8.5 Using the reference frequency for instruments synchronization

Test setups with two or more instruments often require that the instruments use a common reference frequency. Depending on the availability of external reference frequency source and its quality, the instruments are connected and configured in different ways.

This section gives an overview of the possible test setups and the related settings. The following situations are considered:

- External reference source is not available or the **built-in reference oscillator** is of better quality than the external source
(see ["Distributing the internal 10 MHz reference signal to further instruments"](#) on page 502)
- **Clean external reference source** with quality exceeding the quality of the built-in reference oscillator
(see ["Using external reference source"](#) on page 503)
- **Interfered or noisy external reference signal**
(see ["Deriving 10 MHz from the external reference frequency"](#) on page 503)
- **1 GHz reference coupling** for phase coherence of the RF signals with enhanced long-term phase stability
(see ["Sharing the 1 GHz reference frequency to obtain phase-coherent signals"](#) on page 502)

Connectors overview

Use the "Show Connector" function to indicate the connector on the front/real panel:

- ["REF IN/REF OUT"](#) on page 49
- 1GHz ["REF IN/REF OUT"](#) on page 49
- ["EFC"](#) on page 50

Distributing the internal 10 MHz reference signal to further instruments

The internal reference oscillator provides the reference frequency:

- Internal $f_{\text{ref}} = 10 \text{ MHz}$ (10 MHz at connector REF OUT)
- **Source** = "Internal"
- **Reference Output/1 GHz Reference Output** = "10 MHz"

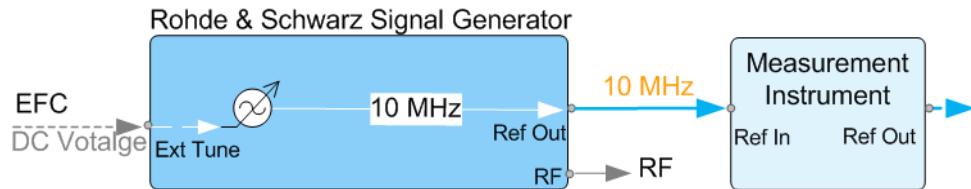


Figure 8-2: Synchronizing instruments using the internal 10 MHz reference signal of the R&S SMW

EFC = External frequency control
EFC, REF IN, REF OUT = Connectors

In phase noise measurement systems, for example, you can also use the EFC (external frequency control) function and shift the frequency. EFC is a function that transforms an external tuning voltage into frequency shift, where the value range of the resulting frequency is a technical characteristic listed in the data sheet. See the data sheet also for information on the sensitivity, input voltage range, impedance and maximum bandwidth for external tuning signal.

Consider the following interdependency:

- EFC in combination with an external PLL
If the EFC is applied in combination with an external PLL (phase locked loop), the PLL bandwidth must be smaller than the bandwidth of the external tuning signal.
- FM-DC mode
If the measurement requires higher PLL bandwidth, we recommend that you use the external FM modulation (DC coupling) in low noise mode.
The FM-DC mode yields a fixed tuning sensitivity that is independent of the RF output frequency and corresponds to the selected FM deviation.

Sharing the 1 GHz reference frequency to obtain phase-coherent signals

Compared to 10 MHz, a 1 GHz reference signal significantly improves the achievable phase stability between two signal sources. Because the synchronization frequency increases by a factor of 100, the relative phase fluctuations between the sources can be reduced.

1 GHz at connector REF IN 1GHz and 1 GHz at REF OUT 1GHz

- External $f_{\text{Ref}} = 1 \text{ GHz}$
- **Source** = "External"
- **External Reference Frequency** = "1 GHz"
- **1GHz Reference Output** = "1 GHz"

Using external reference source

If you have a clean external reference signal with 10 MHz or 100 MHz frequency, for example, you can **directly pass it to the output**. The signal quality remains the same.

10 MHz, 100 MHz at connector REF OUT and REF IN

- External f_{Ref} = 10 MHz or 100 MHz
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- **Source** = "External"
- **Reference Output** = "10 MHz, 100 MHz" or "Input Signal (loop through)"
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- Set the synchronization bandwidth according to the requirements of the application.

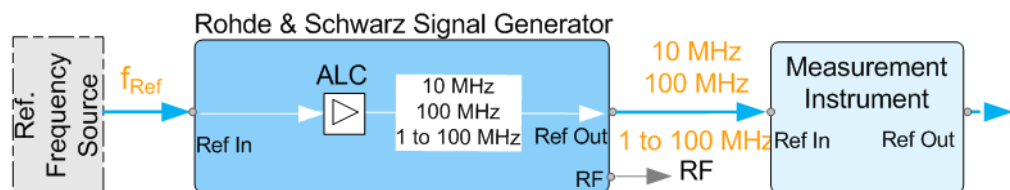


Figure 8-3: Synchronizing instruments with a 10 MHz external reference signal

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

f_{Ref} = 10 MHz, 100 MHz, 1 MHz to 100 MHz external reference frequency

REF IN, REF OUT = Connectors

You can forward reference frequency between 1 MHz and 100 MHz directly to the output in the same way.

- External f_{Ref} = 1 MHz to 100 MHz
(**1 MHz to 100 MHz at connector REF IN and REF OUT**)
- **Source** = "External"
- **Variable Reference Frequency** = "Variable"
- **External Reference Frequency** = current external frequency
- **Reference Output** = "Input Signal (loop through)" or specify the reference frequency the synchronized instrument supports
- Set the synchronization bandwidth according to the requirements of the application.

Deriving 10 MHz from the external reference frequency

10 MHz reference frequency can be derived from the following external reference signals:

- 10 MHz from internal oscillator locked to external input
- 100 MHz and 1 GHz external reference signals
- External reference signal between 1 MHz and 100 MHz
- If the external reference signal is interfered (noisy)

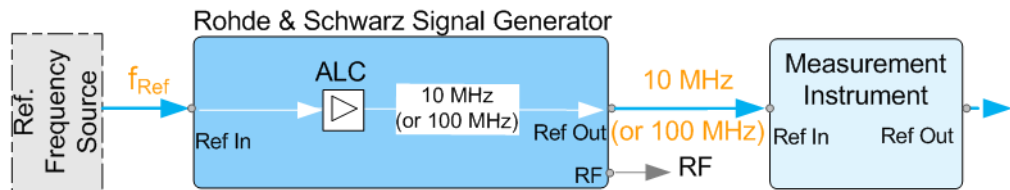


Figure 8-4: Synchronizing instruments with 10 MHz (derived from an external reference frequency)

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

f_{Ref} = 10 MHz, 100 MHz, 1 MHz to 100 MHz, 1 GHz** external reference frequency

** = 1 GHz uses REF IN 1 GHz connector

REF IN, REF OUT = Connectors

1 GHz, 1 MHz to 100 MHz at connector REF IN 1 GHz/REF IN and 10 MHz at REF OUT

- E.g., external Ref. $f_{\text{ref}} = 100 \text{ MHz}$
- **Source** = "External"
- **External Reference Frequency** = "100 MHz"
- **Reference Output/1 GHz Reference Output** = "10 MHz"
- **Synchronization Bandwidth** = "Narrow"

8.9 Local oscillator coupling

The "LO Coupling" function allows a distribution of the local oscillator signal in a way that multiple RF signals can be derived from the same LO signal. This is mandatory for minimizing the phase fluctuations between these RF signals.

The R&S SMW uses either the internal oscillator frequency for the LO signal, that is the output signal of the internal synthesizer, or an external frequency source. You can select the internal or external LO signal of path A, and optionally couple it with path B. Uncoupled, B uses its internal signal. When the LO signal is coupled, the R&S SMW indicates the connection line in the block diagram.

Connectors

- The internal LO signal is output at the LO OUT connector.
- An external signal is fed in at the LO IN connector.

See also ["To find the physical Location of the LO In/Out connectors"](#) on page 509.

LO coupling possibilities

You can couple the LO signal as follows:

- **"A Internal & A -> B Coupled"**
The R&S SMW uses the internal oscillator signal of path A also in path B. The reference frequency settings in path B have no effect and are thus disabled for editing.
- **"A External & A -> B Coupled"**

The R&S SMW receives an external oscillator signal and uses this signal in both paths.

The reference frequency settings in both paths have no effect and are thus disabled for editing.

Similarly, you can couple the signals of cascaded instruments as shown in "[To configure LO coupling with cascaded instruments to achieve phase coherence](#)" on page 510.



The instrument cannot verify the frequency of the oscillator signal that is fed in. We recommend that you feed in signal with exactly the same frequency as shown in the settings dialog, see [LO OUT Frequency](#).

Level adjustment

The level range of the LO input and LO output signal is 10 dBm \pm 3 dB, as specified in the data sheet of the R&S SMW.

The instrument uses the default settings to adjust its internal level, which is sufficiently accurate for most applications.

But consider that the oscillator signal level at LO IN should be stable, with minimized phase noise and interferences. The fed in signal is directly used in the instrument, and thus affects the instrument performance. We recommend that you keep the (sub-)harmonics below -20 dBc, and the level stable within \pm 0.1 dB over time and temperature.

However, if you need optimum performance, or if you have long interconnections between LO OUT and LO IN, we recommend that you adjust the LO level at the current frequency. Using this function, the instrument readjusts the internal signal levels to optimum.

The adjustment may take a few milli seconds.



Keep the order when performing LO Level adjustments for subsequent instruments

When you perform LO level adjustments in several interconnected signal generators, always start with the first Rohde & Schwarz signal generator, and continue in the order of the following Rohde & Schwarz signal generators. This sequence is necessary, because the second instrument adjusts its internal gain as long as the levels are accurate and then keeps this adjustment untouched. If you now would change the predecessor, the level of the second would change accordingly and its adjustment would no longer be correct.


8.9.1 Required options

The equipment layout for using the LO Coupling function is included in:

- Option Phase Coherence (R&S SMW-B90)

8.9.2 Phase coherence

Phase coherence of RF signals designates a defined, constant delta phase between two or more RF carrier signals with the same frequency or a multiple of the frequency.

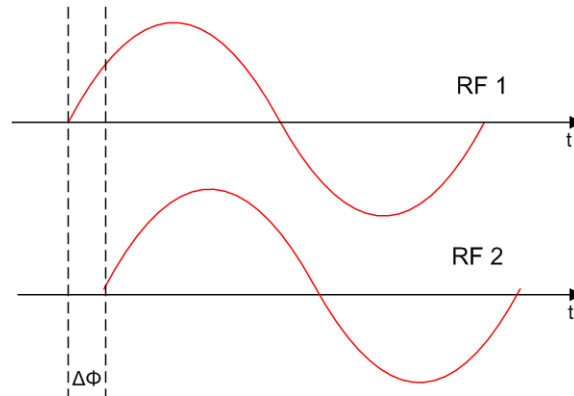

If two signal generators are coupled via their 10 MHz reference, they are generating the same frequency but only from the long term perspective. Having a closer look into the instantaneous differential phase (“delta phase”) of these two RF signals, the following are possible causes for instabilities:


- Phase noise of the two synthesizers
- *Weak* coupling at 10 MHz and a long synthesis chain up to the RF domain
- Temperature differences which cause a change of the effective electrical length of some synthesizer components

Most critical for a stable delta phase is the thermal RF phase fluctuation between multiple RF synthesizers. These fluctuations can be minimized by using a common synthesizer, that means a common local oscillator (LO) signal for all RF carrier. The LO signal is internally used for upconverting the baseband signal to the RF. Only if the LO signal is the same for all carriers, you can achieve a stable phase relationship between the RF signals.

8.9.3 LO coupling settings

Access:

- Select "RF > LO Coupling".

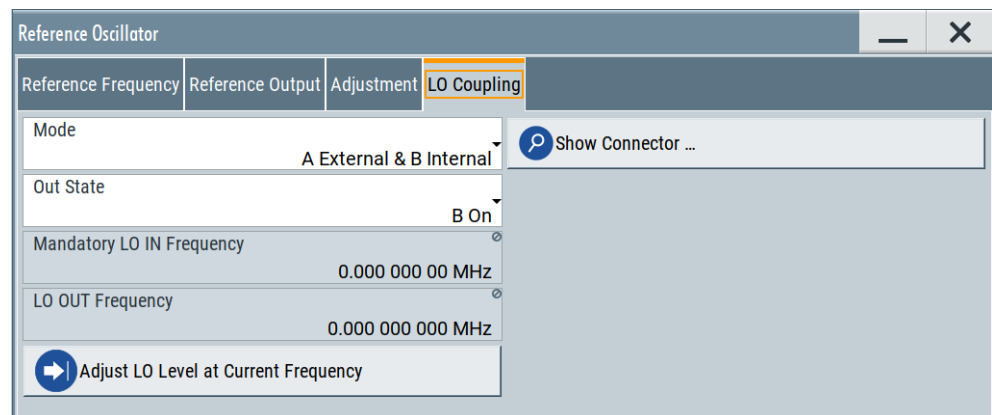

The "LO Coupling" settings enable you to define the coupling of the local oscillator signal in the RF signal paths.

The related remote commands are described in [Chapter 14.19.6, "SOURce:FRE-Quency subsystem"](#), on page 1205.

Mode

Selects the coupling mode of the LO signals in path A and B.

If you work with a one path instrument, the distinction between A & B as well as coupling are not relevant. You can select between "Internal" and "External".

See some of typical test setups in [Chapter 8.9.4, "How to configure cascaded instruments"](#), on page 509.

Note: Working with an **external** oscillator signal disables all setting parameters of "RF Frequency / Phase / Ext. Reference" in the corresponding path.

"A&B Internal" Uses the internal local oscillator signal in each path.

"A External & B Internal"

Uses an external signal in path A, and the internal signal of path B.

"A Internal & A -> B Coupled"

Uses the internal oscillator signal of path A in both paths.

"A External & A -> B Coupled"

Uses an external signal in both paths.

"A Internal & B RF Off"

If the selected RF frequency exceeds the maximum frequency of path B (see the installed frequency options), this setting uses the internal local oscillator signal of path A. In addition, it enables you to route this LO signal to the LO OUT connector. Thus you can use it as input for a downstream instrument.

The RF OUT of path B is switched off in this case.

"A External & B RF Off"

If the selected RF frequency exceeds the maximum frequency of path B, this setting uses the LO input signal for path A. You can route the signal to the LO OUT connector and use it as input for a downstream instrument.

The RF output of path B is switched off in this case.

"A RF Off & B External"

If the selected RF frequency exceeds the maximum frequency of path A, this setting uses the LO input signal for path B. You can route the signal to the LO OUT connector use it as LO input for a downstream instrument.

The RF output of path A is switched off in this case.

"Internal"

Uses the internal signal. This selection parameter applies to one path instruments.

"External"

Uses an externally supplied signal. This selection parameter applies to one path instruments.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:MODE](#) on page 1208

Out State

Activates or deactivates the LO output.

"B On / On"

Note: Selection "B On" applies to two-path instruments, and "On" to one-path instruments, respectively.

For coupling two instruments, the internal local oscillator signal is also available at the LO OUT connector.

"Off"

The LO output signal is switched off.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:OUTPut:STAtE](#) on page 1209

Mandatory LO IN Frequency

Displays the frequency that must be applied as external LO frequency.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:INPut:FREQuency?](#) on page 1207

LO OUT Frequency

Displays the current LO frequency at the LO OUT connector.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:OUTPut:FREQuency?](#) on page 1209

Adjust LO Level at Current Frequency

Adjusts the level of the oscillator signal to optimum, if an external LO signal is applied.

See ["To adjust the LO level to current frequency"](#) on page 509.

The function is enabled in the following cases:

- An external "LO Coupling Mode" is selected.
- "Out State" is on ("B On" or "On").

Note: If your test setup consists of several cascaded Rohde & Schwarz instruments, always use an external oscillator signal and start the LO level adjustment with the first instrument. Continue in the order up to the last.

Remote command:

`:CALibration<hw>:LOSCillator:COUPling:LOCAl?` on page 936

8.9.4 How to configure cascaded instruments

This section describes how you can find out the location of the LO signal connectors (LO In/Out). You can also find instructions for configuring the LO signals of several disconnected signal generators.

To adjust the LO level to current frequency

If you are working with an external LO signal, we recommend that you adjust the internal LO level to the optimum value.

To adjust the internal signal level, proceed as follows:

1. In the "LO Coupling" tab, select one of the following:
 - "Mode" > "A External & B Internal"
 - "Mode" > "A External & A-> B Coupled"
 - "Mode" > "External" if you are working with a one path instrument
 - "Mode" > "A External & B RF Off"
 - "Mode" > "A RF OFF & B External"
2. Apply the oscillator signal, with a level of 10 dBm \pm 3 dB at the corresponding LO IN connector.
See [Chapter 12.2.4, "RF connectors settings"](#), on page 754.
3. Check if the external oscillator signal has the required frequency, as shown in the dialog under "LO OUT Frequency".
4. Set "Out State > B On".
5. Execute "Adjust LO Level Current Frequency".

The R&S SMW automatically adjusts the internal LO signal level at the I/Q modulator and the LO OUT connector.

To find the physical Location of the LO In/Out connectors

The LO IN and LO OUT connectors are located on the rear panel. To find out the exact position, proceed as follows:

1. In the block diagram, select the "T/E/P/L/V" status indication field above the "RF" block.
2. Select "LO IN" > "Show".
3. Observe the connectors's position on the "Rear" panel.

See also [Chapter 12.2.4, "RF connectors settings"](#), on page 754.

To configure LO coupling with cascaded instruments to achieve phase coherence

The LO Coupling function can be used to generate beamforming signals.

The test setups in the following examples represent possible applications and provide information about the coupling modes set in the signal generators. For the configuration via remote control, see the examples in [Chapter 14.19.6, "SOURce:FREQuency subsystem"](#), on page 1205.


**Known restrictions**

If you cascade instruments or channels at frequencies below 200 MHz, that is in coupled or external mode, make sure that:

- All channels are equipped equally regarding option R&S SMW-B22, that means each channel is equipped with or without the option.
- The connection between the REF OUT of the first instrument and REF IN of the subsequent instrument is established, see [Chapter 8.8, "Reference oscillator"](#), on page 495.

Frequencies below 200 MHz are generated using downconversion. Therefore the coherence of the cascaded channels in this frequency range is not as good as at higher frequencies.

The first test setup example represents all variants of the coupling modes, and describes step-by-step how to configure each of the Rohde & Schwarz signal generators. The following examples show further conceivable test setups. To configure these test setups, proceed similarly as shown in the first example.

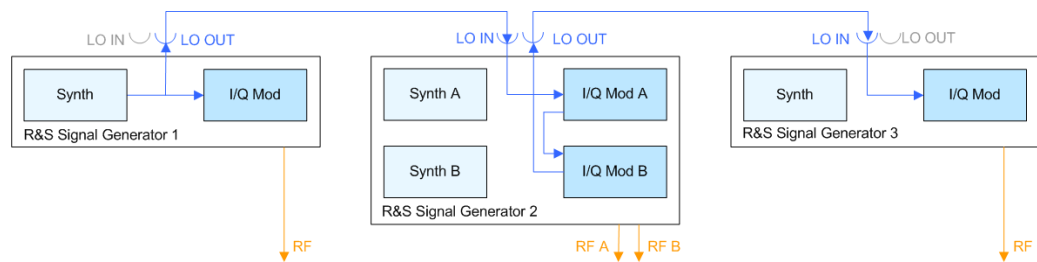Example: Cascading three Rohde & Schwarz Signal Generators**Figure 8-5: Set up of LO coupling with three Rohde & Schwarz Signal Generators**

Generator 1 = "Internal"; "LO OUT > Off"

Generator 2 = "A External & A->B Coupled"; "LO OUT > On"

Generator 3 = "External"; "LO OUT > Off"

A frequency of 5 GHz is assumed.

- Signal Generator 1 is a one-path instrument, for example R&S SMW and uses its internal oscillator signal.
- Signal Generator 2 is a two-paths instrument, for example a R&S SMW200A. It receives the LO signal from the first instrument and assigns it to both paths.
- Signal Generator 3 is a one-path instrument, for example R&S SMW, R&S SGT100A, or R&S SMBV100A. It receives the LO signal from the second instrument.

To configure the application, proceed as follows:

1. Connect the first signal generator REF OUT with LO IN of the second instrument, and similarly the LO OUT of the second signal generator with LO IN of the third.
2. Configure **Signal Generator 1**.
Select "Freq = 5 GHz".
 - a) Select "RF > LO Coupling > Mode > Internal".
 - b) Set "Out State > On".
3. Configure **Signal Generator 2**.
 - a) Set "Freq => 5 GHz".
 - b) Check if both paths are able to deal with the desired RF frequency.
 - If both paths can handle the RF frequency, select "RF > LO Coupling > Mode > A External & A->B Coupled"
 - If path A is not sufficiently equipped, select "RF > LO Coupling > Mode > A RF Off & B External"
 - If path B is not able to handle the frequency, select "RF > LO Coupling > Mode > A External & B RF Off"
 - c) Set "Out State > On".

- d) If the attenuation between the interconnection LO OUT and LO IN is more than 1 dB at the oscillator frequency, we recommend that you execute "Adjust LO Level Current Frequency".

Note: Complete the adjustment procedure before you perform the adjustment on a subsequent instrument.

The signal generator automatically adjusts the internal LO signal level at the I/Q modulator and LO OUT connector.

4. Configure **Signal Generator 3**.


- a) Set "Freq = 5 GHz".
- b) Select "RF > LO Coupling > Mode > External".
- c) Set "Out State > Off".
- d) If the attenuation between the interconnection LO OUT and LO IN is greater than 1 dB at the oscillator frequency, we recommend that you perform level adjustment:
 - Check if the "Adjust LO Level Current Frequency" procedure of the previous instrument is completed.
 - Execute "Adjust LO Level Current Frequency".

The signal generator automatically adjusts the internal LO signal level at the I/Q modulator and LO OUT connector.

All instruments generate the RF signals in phase, as they use the same oscillator signal looped through all instruments.

Example: Generating a beamformed signal with two one path Rohde & Schwarz Signal Generators

This example shows a test setup with two generators, each equipped with one path.

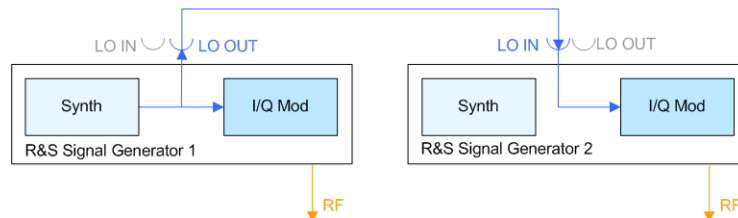

Generator 1 = "Internal"; "LO OUT > On"

Generator 2 = "External"; "LO OUT > Off"

The *Signal Generator 1* uses its internal oscillator signal. *Signal Generator 2* receives the LO signal from the first instrument. The frequency is assumed to be 2 GHz.

Example: Generating a beamformed signal with two Rohde & Schwarz Signal Generators

This example shows a test setup with two generators, each equipped with two paths, like for example the R&S SMW or the R&S SMU200A.

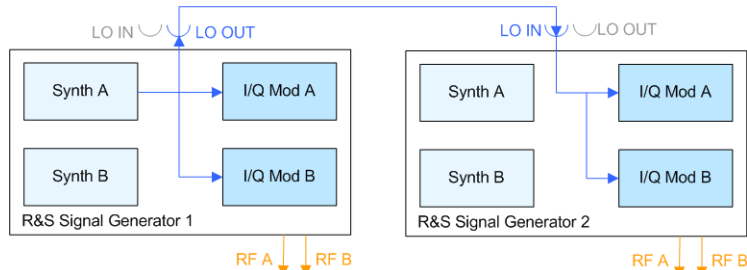


Figure 8-6: Set up of LO coupling with two Rohde & Schwarz Signal Generators

Generator 1 = "A Internal & A->B Coupled": "LO OUT > On"

Generator 2 = "A External & A->B Coupled": "LO OUT > Off"


The signal generator 1 uses the internal oscillator signal of path A also in path B. The signal generator 2 receives the LO signal from the first instrument and assigns it to both paths. The frequency is assumed to be 2 GHz.



Depending on the required RF frequency, your instrument may not be adequately equipped in one of the paths.

If so, you can adjust the LO coupling mode accordingly to use the LO signal from the other path. Proceed as described in [Configure Signal Generator 2 in the example "Cascading three Rohde & Schwarz Signal Generators"](#).

Example: Generating a beamformed signal with one R&S SMW

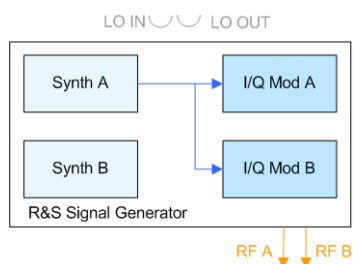

Generator = "A Internal & A->B Coupled"; "LO OUT > Off"

The R&S SMW uses its internal oscillator signal in both paths and outputs the signal at the LO OUT connector. The frequency is assumed to be 5 GHz.

8.10 Varying the RF signal in list or sweep mode

The operating modes "List" and "Sweep" allow you to generate an RF signal having periodically varying frequencies or amplitudes.

A signal generated with varying parameters scans a certain range of varying values of a parameter, with defined start and end points, and can be repeated cyclically.

The R&S SMW supports two basic methods:

- **Sweep** mode

The instrument generates an RF signal which varies its frequency or level values in discrete steps between the start and end values. The values change according to a specific shape like sawtooth or triangle. The spacing is linear or logarithmic.

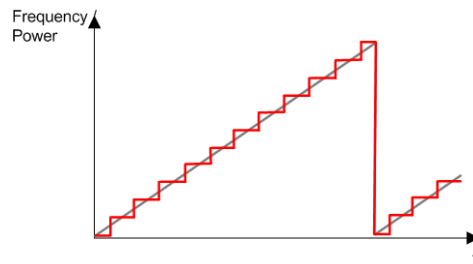


Figure 8-7: Schematic representation of a signal generated in sweep mode

The main application field of the "Sweep" mode is to determine the frequency response of a DUT.

- **List** mode

The instrument generates a varying output signal, based on a previously saved list with frequency, amplitude and step width values. While in sweep mode the frequency **or** the level values change, in list mode you can vary **both parameters simultaneously**. The frequency and level values do not need to have ascending or descending order, they can vary arbitrarily.

You can use a global dwell time, which means that the time interval is constant for all steps of the list, or different dwell times for each value pair.

[Figure 8-8](#) represents the frequency and power value pairs, in this case with the dwell time set the same for all steps (global dwell time).

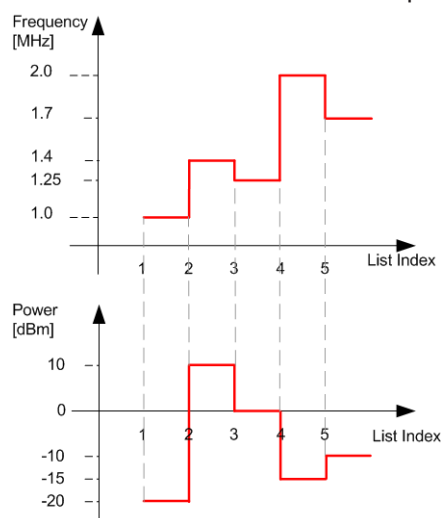


Figure 8-8: Schematic representation of a signal generated in list mode (global dwell time)

The list mode is especially useful in high-speed measurements with fast changing frequency and level settings.



Note that the shown diagrams represent the behaviour in theory. In real signal generation, the instruments usually have a blank time when the frequency or level changes.

Interactions and characteristics of list and sweep mode

- Activating the list mode automatically deactivates all RF and LF sweeps and vice versa.
- In list processing mode, the frequency and level display in the status bar is disabled.
- The sweep modes only work with a *global* dwell time, that means the time intervals are constant during signal generation.
- If you want to hold a running sweep at a specific frequency or level value, enter the value in the status bar. The sweep stops immediately.
- We recommend that you switch off the display update for optimum sweep performance, especially with short dwell times
See [Chapter 12.1.3, "Display update settings"](#), on page 742.



I/Q modulation and list mode in path B depends on frequency options

If the instrument is equipped with one of the frequency options R&S SMW-B2012 or higher frequency options (R&S SMW-B212/-B220 for earlier RF hardware versions) in path B, and you are generating an I/Q modulated signal, the list processing mode is blocked in this path.

8.10.1 Signal generation and triggering in the sweep and list modes

In both operating modes "List" and "Sweep", triggering and signal generation follow the same principle. The instrument generates the signal continuously (that means triggered automatically) or in individual steps (controlled manually by an internal or external trigger signal).

The instrument expects the trigger signal at the INST TRIG x connector.



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMW signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long. The instrument displays corresponding error messages.

The figures in this section give an overview on the signal generation in the sweep and list modes and the appropriate triggering. The figures show the signal state after activating the mode and the generation of the signal when a trigger event occurs. For each mode, the relevant parameters and settings are briefly explained.

Each "Sweep" and "List" mode dialog provides also a "Reset" function that sets the signal to the initial value or the beginning of the list. Depending on the selected trigger mode, the signal generation proceeds accordingly.



The naming of the selection parameters in manual control (GUI) sometimes deviates from the naming in the remote-control commands. In addition, the value names of the selection parameters used in the signal generator partly differ from the SCPI syntax. The instrument accepts all value names.

The correlation between the manual control and the corresponding remote control commands, including the SCPI conform syntax are explained for each mode (see the cross-reference tables).

See also the following programming examples on the sweep and list modes in remote control:

- [Example "Setup an RF frequency or power sweep"](#) on page 1296
- [Example "Setup an LF sweep"](#) on page 1235
- [Example "Create an RF list and activate the list mode"](#) on page 1248

Auto mode (Sweep/List)

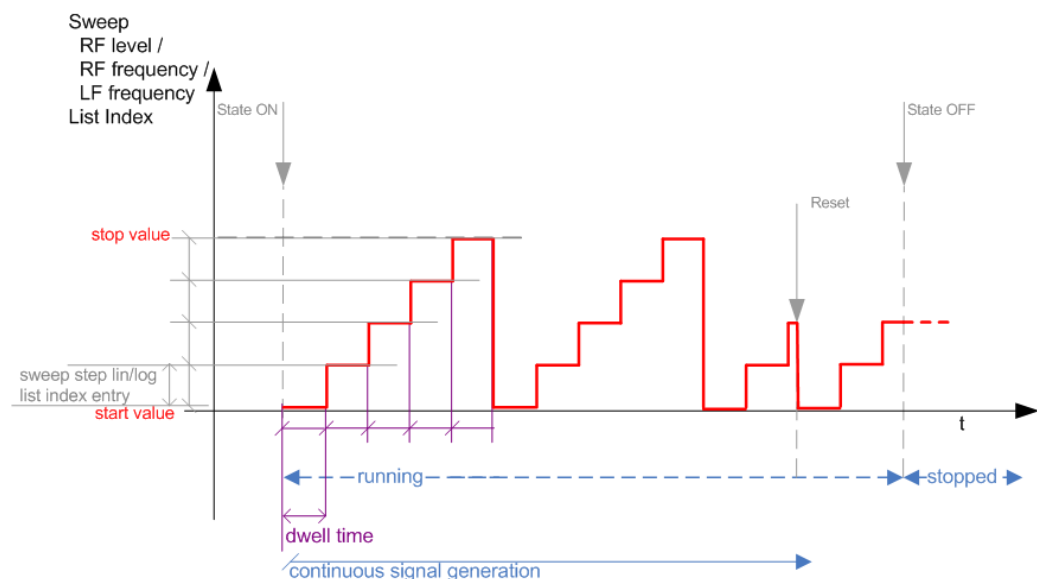


Figure 8-9: Auto mode (Sweep/List)

- The instrument generates the signal continuously.
- Trigger mode "Auto" is prerequisite (default). It causes the continuous generation of the sweep signal.
- Starts signal generation immediately with "State = On".
- Switches automatically to the next step when the [Dwell time](#) has elapsed.
- Stops signal generation with "State = Off".

Table 8-2: Cross-reference between manual and remote control in Auto mode (Sweep/List)

Manual control mode: "Auto"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:MODE AUTO :SOURce<hw>:LIST:TRIGger:SOURce AUTO

Single / Extern Single mode (Sweep/List)

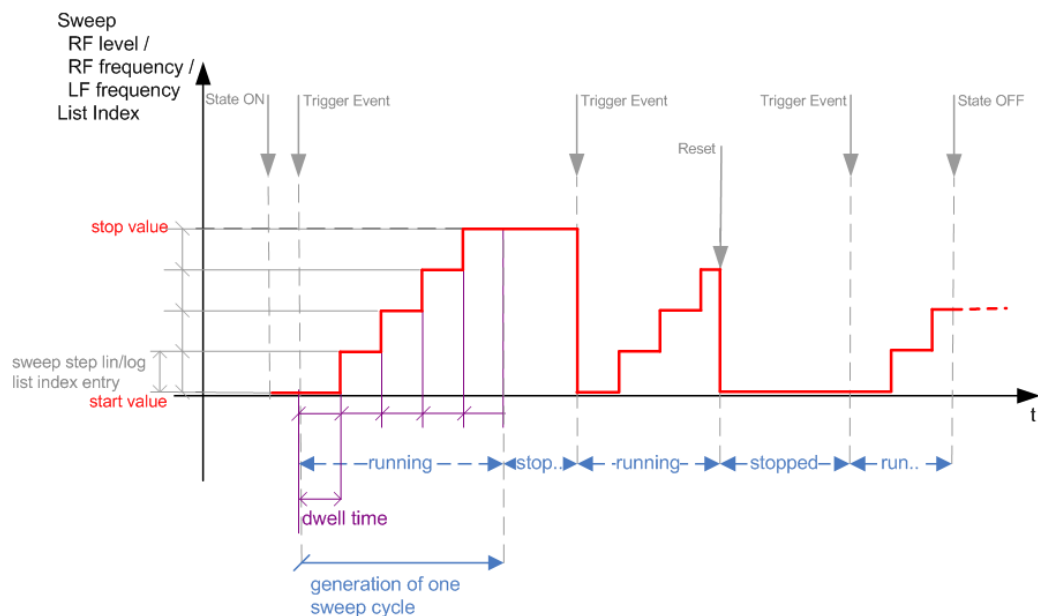


Figure 8-10: Single / Extern Single mode (sweep / list)



In single mode, you can specify, that the signal returns to the start value when a sweep cycle has been completed.


See ["The Retrace function"](#) on page 522 for details.

- The instrument generates a single sweep cycle.
- Trigger mode "Manual". A trigger event initiates one sweep from the start value to the end value.
- "State = On" sets the signal to the start value: the sweep start frequency, the sweep start power or the frequency-power value pair of the selected index in the list.
- Starts signal generation with a trigger event.

- Switches automatically to the next step when the **Dwell time** has elapsed.
- Stops signal generation at the set end value and waits for the subsequent trigger event.
- Trigger sources:
 - The corresponding remote control command.
 - An externally applied trigger signal.
- "State = Off" stops the signal generation in sweep or list mode.

Table 8-3: Cross-reference between manual and remote control in Single / Extern Single modes (Sweep/List)

Manual control mode: "Single / Extern Single"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGle [BUS] "Single" or :TRIGger<hw>:FSweep:SOURce EXTernal [EXTernal] "Extern Single" :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGle [BUS] for "Single" or :TRIGger<hw>:PSweep:SOURce EXTernal [EXTernal] for "Extern Single" :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGle [BUS] "Single" or :TRIGger<hw>:LFFSweep:SOURce EXTernal [EXTernal] "Extern Single" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGle "Single" or :SOURce<hw>:LIST:TRIGger:SOURce EXTernal "Extern Single" :SOURce<hw>:LIST:MODE AUTO

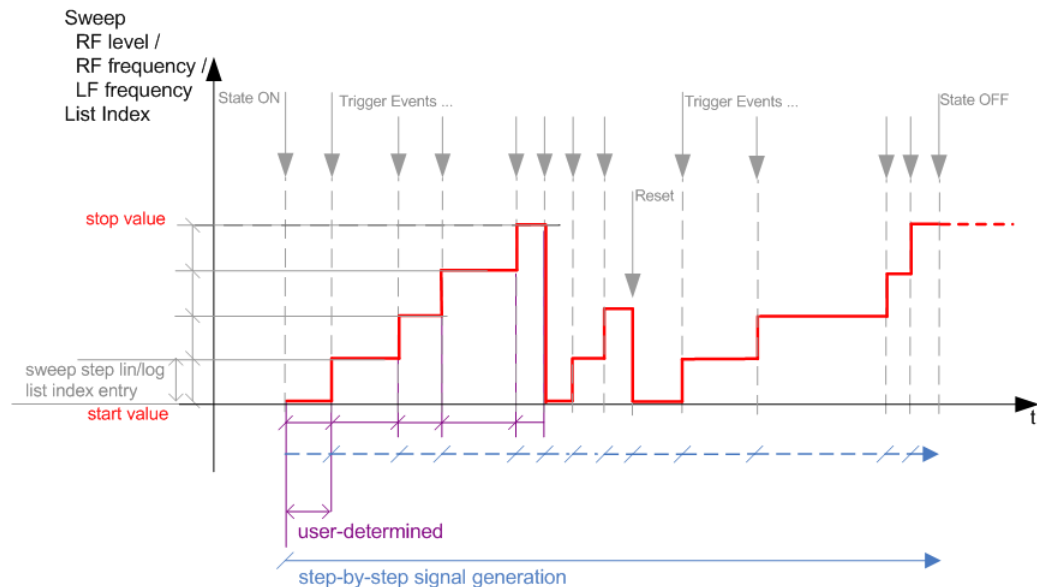Step / Extern Step mode (Sweep/List)**Figure 8-11: Step / Extern Step mode (sweep / list)**

- The instrument generates the signal step-by-step.
- Starts signal generation with "State = On".
- Switches to the next step with a manual action.
If the end value is reached, signal generation starts again from the beginning.
- Stops signal generation with "State = Off".
- Trigger sources:
 - The rotary knob at the front panel.
 - The [Arrow] keys at the front panel.
 - The corresponding remote control commands.
 - An externally applied trigger signal.

To step through the sweep frequencies or levels:


- In manual mode:
 - Set the **Current Frequency** or **Current Level** values
 - Use the [Up] and [Down] keys or the rotary knob
- In remote control mode:
 - Use the commands `[:SOURce<hw>] :FREQuency:MANual` or `[:SOURce<hw>] :POWer:MANual` with the UP or DOWN parameter



Steps that would exceed the sweep range are ignored.

Table 8-4: Cross-reference between manual and remote control in Step / Extern Step modes (Sweep/List)

Manual control mode: "Step / Extern Step"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:FSWEEP:SOURce EXTERNAL [EXTERNAL] for "Extern Step" :SOURce<hw>:SWEep:FREQuency:MODE STEP
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:PSWEEP:SOURce EXTERNAL [EXTERNAL] "Extern Step" :SOURce<hw>:SWEep:POWer:MODE STEP
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:LFFSWEEP:SOURce EXTERNAL [EXTERNAL] "Extern Step" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE STEP
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Step" or :SOURce<hw>:LIST:TRIGger:SOURce EXTERNAL "Extern Step" :SOURce<hw>:LIST:MODE STEP

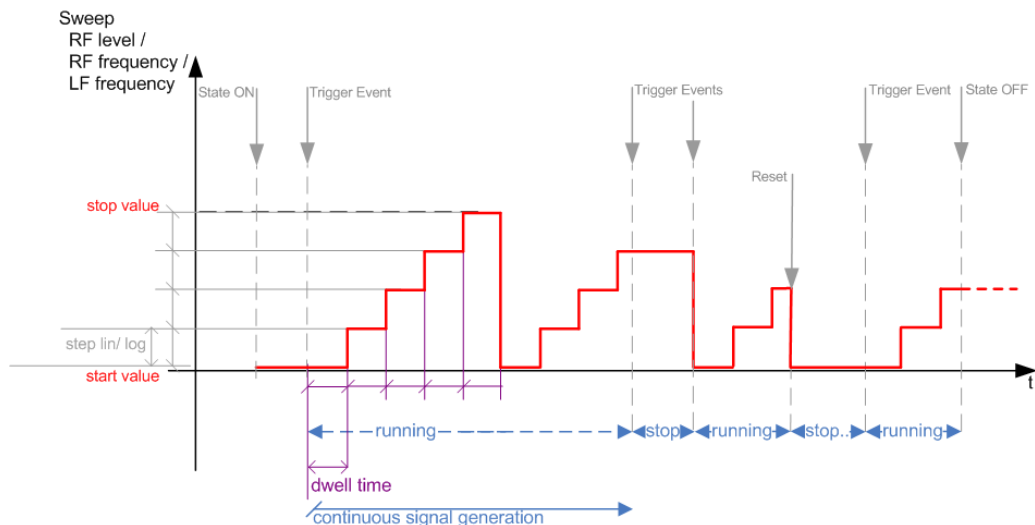Extern Start/Stop mode (sweep)**Figure 8-12: Extern Start/Stop mode (sweep)**

- The instrument generates the signal continuously.
- Trigger mode "Auto" and "Sweep > State = On" are prerequisite.
- State "On" sets the signal to the start value, that is one of the following:
 - Sweep start frequency
 - Sweep start power
 - Frequency-power value pair of the selected index in the list
- Starts signal generation with a trigger event.

- Switches automatically to the next sweep step when the **Dwell time** has elapsed. If the end value is reached, signal generation continues with the next sweep cycle.
- Stops signal generation with the next external trigger event.
- Starts the signal generation again with the next trigger event, beginning at the start value.
- "State = Off" stops the signal generation in sweep or list mode.
- Trigger source: An externally applied trigger signal.

Table 8-5: Cross-reference between manual and remote control in Extern Start/Stop modes (sweep)

Manual control mode: "Extern Start/Stop"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce EAUTO [-] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce EAUTO [-] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce EAUTO [-] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO

Manual mode (Sweep/List)



The **manual** mode only applies to remote control. It is not visible in the graphical user interface of the instrument and is described here for completeness.

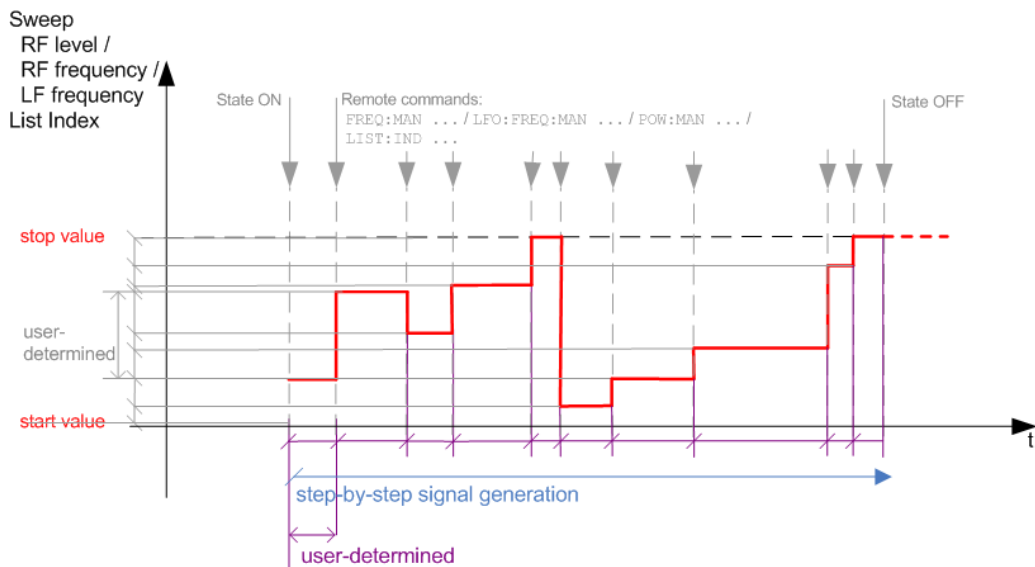


Figure 8-13: Manual mode in remote control (sweep / list)

- The instrument generates the signal in steps.
- Starts signal generation with "State = On".
- Switches to the next step with a user defined setting via remote control.


You can arbitrarily select a value within the range of the start and stop values by setting the frequency, power or index using the corresponding remote control command. There is no ascending or descending order.

- Stops signal generation with "State = Off".

Table 8-6: Remote control commands in manual mode (Sweep/List)

Remote control mode:	Remote commands
Manual	Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:SOURce<hw>:FREQuency:MANUal <Manual>
RF level sweep	:SOURce<hw>:POWer:MANUal <Manual>
LF frequency sweep	:SOURce<hw>:LFOUtpuT:FREQuency:MANUal <Manual>
List	:SOURce<hw>:LIST:INDex <Index>

The Retrace function

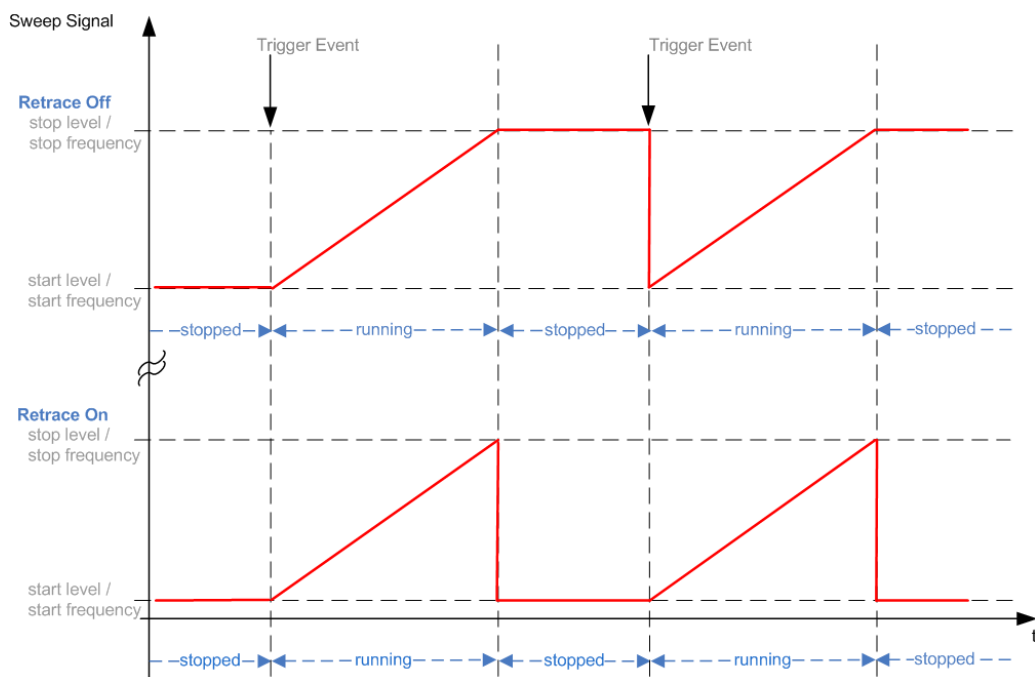

Retrace is a function especially designed for "Single" sweep modes, when the sweep signal follows a sawtooth shape. Working in this mode, the instrument performs a single sweep cycle when a trigger event occurs. The signal generation stops at the set end point (stop frequency or stop level), and waits for the next trigger event.

In this state, the upper value of the signal remains at the output until the next cycle starts. In particular, if you generate a level sweep signal, the high amplitude of the signal is output for a certain time. To protect the DUT from overload, the retrace function immediately resets the signal value to the start value at the end of a sweep cycle. It returns to the start level or start frequency until the next trigger is applied.

You can use the "Retrace" function if "Sweep > Mode = Single/External Single" and "Shape = Sawtooth", see:

- "Shape" on page 534
- "Mode" on page 533

8.10.2 About sweep mode

In sweep mode, the signal generator scans the sweep range gradually from one point to another, using a defined step size and following a triangle or sawtooth shape. This mode also enables you to change direction, that means, it is possible to step backwards.

See [Chapter 8.10.2.2, "Sweep signal shapes"](#), on page 525.

Configuration and operation of sweep mode signals

- The R&S SMW generates a sweep signal by varying the following parameters: either the *RF frequency*, the *RF level* or both, the *RF frequency* and the *RF level* in combined RF sweep mode, or the *LF frequency*.
- In all sweep modes, you can perform a complete sweep cycle once, repeat the cycle continuously or step through it gradually.
- The instrument generates the sweep signal according to the sweep settings.
- The "Reset Sweep" function, provided in the sweep settings dialogs enables you to reset the sweep to its initial value and restart it.



Impact of changing the sweep mode during performance

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

Combined RF frequency / level sweep processing mode

The combined RF sweep functionality processes the signal similar to the Live list mode. The R&S SMW sets the frequency and level values simultaneously in the hardware. The difference to the list mode is that the values are not taken from a previously created list, but are calculated using the selected frequency and level ranges, the dwell time and the number of steps.

8.10.2.1 Correlating parameters in sweep mode

A sweep signal is a periodic signal that changes its frequency or level, or both, from a starting value to an ending value in a defined time.

The R&S SMW provides various possibilities to configure a sweep signal. For example, you can determine the sweep range by the start and end values, or based on the start value and span. In any case, related parameters are adjusted accordingly.

The formulas below show how the sweep parameters correlate and the corresponding calculation basis, by the frequency and offset settings. Apart from "Center Frequency", "Span" and "Step_lin", the values apply accordingly to the level settings.

Table 8-7: Variables that are used in the following formulas

Variable	Description
Sweep range	Defined frequency or level value range
f_{CENTer}	Defined center frequency
f_{SPAN}	Defined extend of the sweep range
f_{OFFSet}	Frequency offset
f_{START}	Start frequency of the sweep range
f_{STOP}	End frequency of the sweep range
f_1	Current sweep frequency
f_2	Next, subsequent sweep frequency
step_lin	Step size in linear scaling
step_log	Step size in logarithmic scaling
POINTS	Number of steps within the sweep range

Sweep range

The sweep range is defined by a start and an end value. How the remaining parameters correlate is shown below.

Offset = 0

Sweep Range = f_{START} to f_{STOP}

$$f_{\text{CENTer}} = (f_{\text{START}} + f_{\text{STOP}})/2$$

$$f_{\text{SPAN}} = (f_{\text{STOP}} - f_{\text{START}})$$

Where:

$$f_{\text{START}} = f_{\text{CENTer}} - (f_{\text{SPAN}}/2)$$

$$f_{\text{STOP}} = f_{\text{CENTer}} + (f_{\text{SPAN}}/2)$$

Offset≠0

A defined offset also affects the sweep range and the center frequency. Therefore, the set frequencies are only absolute values, if the Offset = 0. Offset ≠ 0 shifts the frequencies with the offset value:

$$\text{Sweep Range} = f_{\text{START}} + f_{\text{OFFSet}} \text{ to } f_{\text{STOP}} + f_{\text{OFFSet}}$$

$$f_{\text{CENTer}} = f_{\text{CENTer}} + f_{\text{OFFSet}}$$

$$f_{\text{SPAN}} = f_{\text{SPAN}} + f_{\text{OFFSet}}$$

The value range of the instrument is calculated as follows:

$$RF_{\text{min}} + f_{\text{OFFSet}} \text{ to } RF_{\text{max}} + f_{\text{OFFSet}}$$



It is possible to set $f_{\text{START}} > f_{\text{STOP}}$ and $f_{\text{START}} < f_{\text{STOP}}$, so that even a negative value is permitted for the "Span".

If you change the start and/or stop frequency, the span and center frequency change accordingly, and vice versa.

Sweep steps

In the following, you see how the sweep steps are calculated depending on the defined spacing mode. The formulas show a frequency sweep, but apply to the level settings in the same way.

The step size is added to the current value, to get the subsequent sweep step.

With **linear** scaling, the next frequency is calculated according to:

$$f_2 = f_1 + \text{step_lin}$$

In the **logarithmic** scaling, the step size is determined in per cent, as a constant fraction of the current frequency.

Successive frequencies are calculated as follows:

- For $f_{\text{START}} < f_{\text{STOP}}$
 $f_2 = f_1 * (1 + \text{step_log}/100)$
 If $f_2 > f_{\text{STOP}}$, then $f_2 = f_{\text{STOP}}$
- For $f_{\text{START}} > f_{\text{STOP}}$
 $f_2 = f_1 / (1 + \text{step_log}/100)$
 If $f_2 < f_{\text{STOP}}$, then $f_2 = f_{\text{STOP}}$

With "Shape = Triangle", the frequency values on the slope from f_{STOP} to f_{START} are the same as on the slope from f_{START} to f_{STOP} .

If you specify the number of steps within the sweep range, the step size is adjusted according to the following correlation:

- For **linear** sweeps and $f_{\text{START}} < f_{\text{STOP}}$
 $\text{POINTS}_{\text{frequency}} = ((f_{\text{START}} - f_{\text{STOP}})/\text{step_lin}) + 1 = (f_{\text{SPAN}}/\text{step_lin}) + 1$
- For **logarithmic** sweeps and $f_{\text{START}} < f_{\text{STOP}}$
 $\text{POINTS}_{\text{frequency}} = ((\log f_{\text{STOP}} - \log f_{\text{START}})/\log \text{step_log}) + 1$

If step_log changes, the value of POINTs is adjusted. The f_{START} and f_{STOP} values are retained.

8.10.2.2 Sweep signal shapes

The R&S SMW supports the following sweep shapes:

- **Sawtooth**
 The sweep sequence resembles a sawtooth. One sweep runs from start to stop frequency, or level value respectively. Each subsequent sweep starts again at the start value.

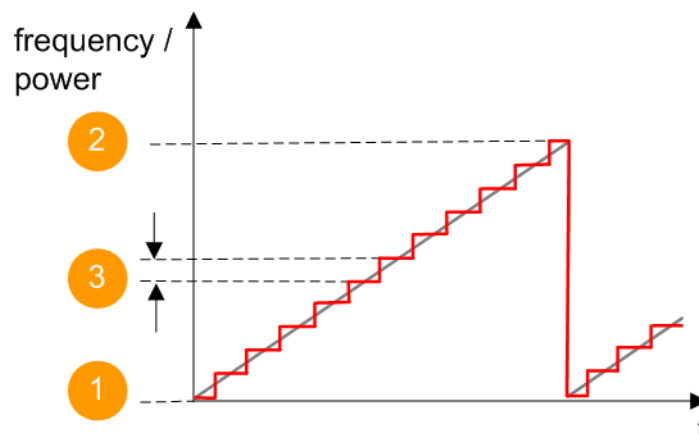


Figure 8-14: Sweep signal sawtooth shape

1 = Start value
2 = Stop value
3 = Step size

- Triangle
The sweep sequence resembles a triangle. One sweep runs from start to stop value frequency and back. Each subsequent sweep starts at the start value.

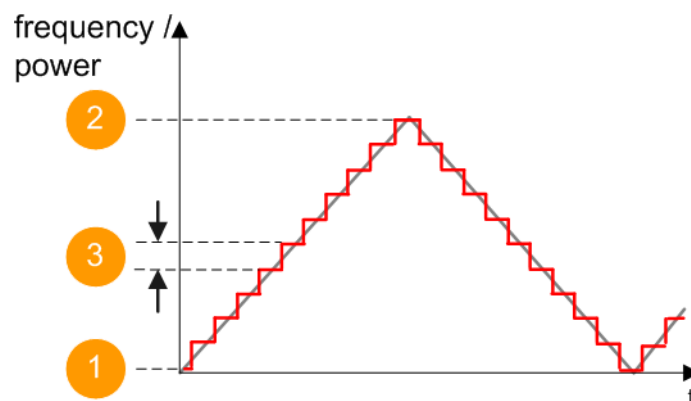


Figure 8-15: Sweep signal triangle shape

1 = Start value
2 = Stop value
3 = Step size

The current frequency or level of an RF frequency, level or LF frequency sweep is determined by the shape (e.g. sawtooth or triangle) and the spacing (linear or logarithmic), and the step size.

8.10.3 About list mode

The list mode is used to generate the RF signal based on a set of predefined frequency and amplitude value pairs, with individual step times. You can define the values arbitrarily, in any order and varying step sizes, within the entire configurable value range of the instrument.

Configuration and operation of list mode signals

The parameters configuring the RF signal are defined in a list (table) and stored in a file.

Creating and handling lists

List files can be created in the following ways:

- **Internally**
Use the build-in table editor with columns for the frequency-level values pairs and the dwell time.
Define the values manually (row by row) or automatically, based on value range and step size.
(See [Chapter 8.10.7, "List editor"](#), on page 547)
Lists are saved as files with user-definable filename and the predefined file extension *.lsw. To load a saved file, use the "File Manager".
(See [Chapter 11.8, "Using the file manager"](#), on page 720)
- Lists can be exported, too. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- **Externally**
Create a list file as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

Dwell time mode

You can choose whether you want to use different dwell times or a fixed value for all steps in the list mode:

- "From List"
This mode uses the values from the data table.
See [Edit List Mode Data](#)
- "Global"
This mode processes the list with a fixed time interval you can set with [Global Dwell Time](#).

List processing mode

The R&S SMW generates signals from list files in two modes, "Live" and "Learned (Frozen RF Settings)". These modes differ in terms of signal quality, signal processing and switching time.

For details, see:

- ["Learn List Mode Data list processing mode"](#) on page 529
- ["Live list processing mode"](#) on page 530

8.10.4 Significant parameters and functions

This section provides some basic parameters, settings and functions that affect the operating modes CW, list and sweep, that means at all frequency and level transitions of the RF signal.

Dwell time

Dwell time is the length of time that elapses from the beginning until the end of a step in list or sweep mode.

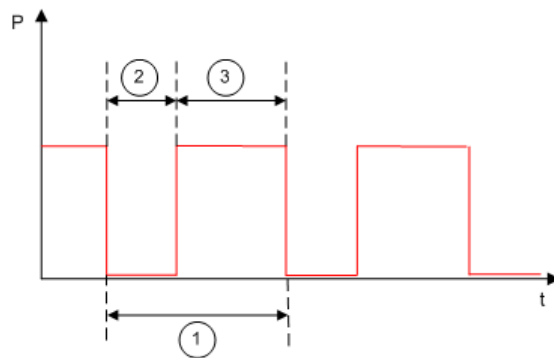


Figure 8-16: Dwell Time vs. settling time

1 = "Dwell Time" (as set with the parameter)

2 = Settling time

3 = Dwell time (effective)

However, the time the instrument requires for the signal to settle reduces the set dwell time:

$$t_{\text{dwell(effective)}} = t_{\text{dwell}} - t_{\text{settling}}$$



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMW signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long. The instrument displays corresponding error messages.

Hardware adjustments

The first time a list (new or modified) is processed, the instrument automatically calculates the necessary hardware settings. It can be performed during list processing, but delays the first cycle, especially with short dwell times.

With long dwell times, you can perform this calculation while the list is being processed; the entered dwell times are observed. With short dwell times, calculation of the hardware settings increases the dwell time for the initial processing cycle; the entered value is only observed from the second processing cycle onwards. In this case, a message indicates that there is a deviation between the current and set dwell times. After the first cycle, you do not need to perform additional calculations. The current dwell times do not deviate from the set dwell times.

Blanking

The instrument applies *blanking*, which temporarily turns off the RF signal when the frequency or level changes, until the signal has settled to a stable state.

If you disable this blanking, the signal is not turned off during transition, but a temporary loss of power still occurs while the instrument adjusts the hardware. The power level immediately increases and can exceed the set level value before the hardware controls take effect. However, the time until the signal is stable and automatically level controlled is shorter than the time of the blanking interval.

Temporary blanking applies to all operating modes.

Learn List Mode Data list processing mode

Before signal generation starts, the instrument reads the values of the data list in sequence and determines the corresponding hardware settings for each value pair. Along with the current RF state and the modulation settings, the function stores the list data in the temporary memory.

Once the entire table is processed, the R&S SMW starts signal generation by replaying the stored values from the list. Thus, it achieves fast switching of the RF signal with high accuracy.

This mode provides optimized switching times, and is particularly useful if dwell times of less than 2 ms are required.

However, consider that R&S SMW generates the signal from the saved data, thus reflecting the state of the instrument at the time of recording. Modifications of settings during list processing are ignored. If you turn off the instrument, the list file remains saved on the internal memory, but not the learned data in the temporary memory.

Consider also, that processing learned list mode data is not available when options R&S SMW-B711/-B721 are installed. In this configuration, the R&S SMW automatically switches to "[Live list processing mode](#)" on page 530.



When to use the "Learn List Mode Data" function

The instrument performs the learning process in the following situations:

- RF state is on (prerequisite)
- You deliberately activate this function, provided a list is loaded and RF is on.
- You switch list mode on in "Learned" run mode and no data is available in the memory
- You change the list data file

Perform the list mode learning in the following situations:

- Always when:
 - You change any value in the list.
 - Any hardware setting changes.
Especially if you have fluctuating environmental conditions, the hardware settings need to be adjusted.
- We recommend that you learn the list before activating the list mode, even if the list has been learned previously.

Live list processing mode

The R&S SMW generates the signal directly from the value pairs in the database, and adjusts the hardware settings accordingly. The current instrument state and thus any change during the signal generation directly affects the RF signal. The temporary memory is not used.

You can conveniently modify parameters like modulation settings during run-time. Learning list mode data is not required. Impacts like temperature drift are also considered immediately.

This mode is optimized for **maximum signal quality**, and is useful if dwell times higher than 2 ms are sufficient.

8.10.5 Sweep mode settings

This section lists the settings of **all** available sweep modes.

Access:

1. Select "RF" > "Sweep/List" > "RF Frequency Sweep"
2. Select "RF" > "Sweep/List" > "RF Level Sweep"
3. Select "RF" > "Sweep/List" > "RF Combined Sweep"
4. Select "RF" > "Sweep/List" > "LF Frequency Sweep"

The sweep modes use the similar parameters to be configured. Thus, the description comprises the settings of the three dialogs, "RF Frequency Sweep", "RF Level Sweep" and "LF Frequency Sweep". If parameters relate to only particular modes, they are pointed out.

The remote commands required to define these settings are described in:

- Chapter 14.19.6, "SOURce:FREQuency subsystem", on page 1205
- Chapter 14.19.17, "SOURce:POWer subsystem", on page 1272
- Chapter 14.19.20, "SOURce:SWEep subsystem", on page 1295
- Chapter 14.19.11, "SOURce:LFOutput subsystem", on page 1235

Settings



- General sweep settings.....531
- Frequency range settings.....536
- Level range settings.....537

8.10.5.1 General sweep settings

Access:

- Select, for example, "RF" > "Sweep/List" > "RF Frequency Sweep".

Table 8-8: General settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs
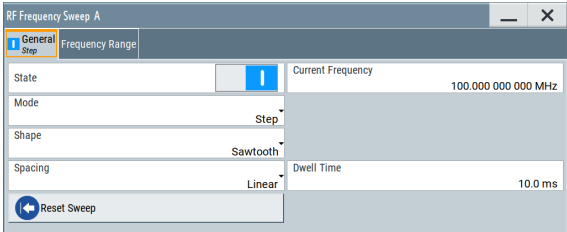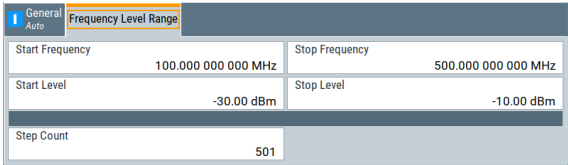
> "RF Frequency Sweep"	> "RF Combined Sweep"
	

Settings

- State (RF frequency sweep)..... 531
- State (RF level sweep).....532
- State (RF frequency / level sweep).....532
- State (LF frequency sweep).....532
- Current Frequency..... 532
- Current Level.....532
- Mode..... 533
- Retrace.....533
- Shape.....534
- Spacing.....534
- Dwell Time.....534
- Trigger Slope.....535
- Execute Single Sweep..... 535
- Show Connector.....535
- Reset Sweep.....535

State (RF frequency sweep)

Activates RF frequency sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[:SOURce<hw>] :FREQuency:MODE` on page 1209

State (RF level sweep)

Activates RF level sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[:SOURce<hw>] :POWer:MODE` on page 1280

State (RF frequency / level sweep)

Activates the RF frequency / level sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[:SOURce<hw>] :FREQuency:MODE` on page 1209

`[:SOURce<hw>] :POWer:MODE` on page 1280

State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[:SOURce<hw>] :LFOutput:FREQuency:MODE` on page 1239

Current Frequency

Displays the current frequency sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next frequency setting manually.

Remote command:

`[:SOURce<hw>] :FREQuency:MANual` on page 1211

`[:SOURce<hw>] :LFOutput:FREQuency:MANual` on page 1239

Current Level

Displays the current level sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next level setting manually.

Remote command:

`[:SOURce<hw>] :POWer:MANual` on page 1279

Mode

Selects the sweep mode.

See [Chapter 8.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 515.

"Auto" Generates a continuously repeating sweep signal directly after activating the sweep mode.
The sweep steps are performed automatically, controlled by the dwell time.

"Single / Extern Single" Generates a single sweep cycle after a trigger event.
The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

"Step / Extern Step" Generates the sweep signal step-by-step, manually triggered.

"Extern Start/Stop" Generates a continuously repeating sweep signal that is started, stopped, and restarted by subsequent external trigger events.
The sweep steps are performed automatically, controlled by the dwell time.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :MODE` on page 1300
`:TRIGger<hw>:FSWep:SOURce` on page 1349

RF level sweep:

`[:SOURce<hw>] :SWEep:POWer:MODE` on page 1299
`:TRIGger<hw>:PSWep:SOURce` on page 1349

RF combined sweep:

`[:SOURce<hw>] :SWEep:COMBined:MODE` on page 1306
`:TRIGger<hw>:FPSWep:SOURce` on page 1351

LF frequency sweep:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :MODE` on page 1245
`:TRIGger<hw>:LFFSWep:SOURce` on page 1349

Retrace

For "Shape = Sawtooth" and "Mode = Single/External Single", enables changing the signal to the start value while it is waiting for the next trigger event. It returns to the start level or start frequency until the next trigger is applied.

See ["The Retrace function"](#) on page 522.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :RETRace` on page 1302

RF level sweep:

`[:SOURce<hw>] :SWEep:POWer:RETRace` on page 1302

RF combined sweep:

`[:SOURce<hw>] :SWEep:COMBined:RETRace` on page 1306

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:RETRace](#) on page 1246

Shape

Selects the waveform shape of the sweep signal.

See also [Chapter 8.10.2.2, "Sweep signal shapes"](#), on page 525.

- | | |
|------------|--|
| "Sawtooth" | The sweep runs from start to stop frequency. The subsequent sweep starts at the start value, i.e. the shape of the sweep sequence resembles a sawtooth. |
| "Triangle" | The sweep runs from start to stop value and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency. |

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SHApe](#) on page 1302

RF level sweep:

[\[:SOURce<hw>\]:SWEep:POWer:SHApe](#) on page 1302

RF combined sweep:

[\[:SOURce<hw>\]:SWEep:COMBined:SHApe](#) on page 1306

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:SHApe](#) on page 1247

Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

- | | |
|---------------|--|
| "Linear" | Takes the frequency value entered as absolute value in Hz. |
| "Logarithmic" | Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %. |

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing](#) on page 1301

RF combined sweep: n.a.

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:SPACing](#) on page 1247

Dwell Time

Defines the duration of the individual sweep steps.

Note: In case of considerable overrun conditions, the R&S SMW turns off the sweep mode.

See also [Chapter 8.10.4, "Significant parameters and functions"](#), on page 528.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :DWELl` on page 1300

RF level sweep:

`[:SOURce<hw>] :SWEep :POWer :DWELl` on page 1298

RF combined sweep:

`[:SOURce<hw>] :SWEep :COMBined :DWELl` on page 1305

LF frequency sweep:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :DWELl` on page 1245

Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the INST TRIG x connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

`[:SOURce<hw>] :INPut :TRIGger :SLOPe` on page 1217

Execute Single Sweep

In "Mode = Single", starts a sweep manually.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :EXECute` on page 1302

`:TRIGger<hw> :FSweep [:IMMediate]` on page 1351

RF level sweep:

`[:SOURce<hw>] :SWEep :POWer :EXECute` on page 1302

`:TRIGger<hw> :PSweep [:IMMediate]` on page 1351

RF combined sweep:

`[:SOURce<hw>] :SWEep :COMBined :EXECute` on page 1305

LF frequency sweep:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :EXECute` on page 1245

`:TRIGger<hw> :LFFSweep :IMMediate` on page 1351

General:

`:TRIGger<hw> [:SWEep] [:IMMediate]` on page 1351



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Reset Sweep

Resets a sweep.

With the next trigger event, the sweep starts at the initial value.

Remote command:



`[:SOURce<hw>] :SWEep :RESet [:ALL]` on page 1307

8.10.5.2 Frequency range settings

Access:

1. Select for example "RF" > "Sweep/List" > "RF Frequency Sweep"
2. Select for example "Frequency Range".

Table 8-9: Range settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs
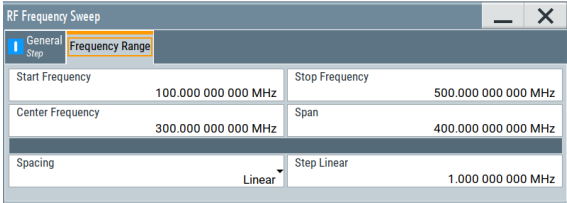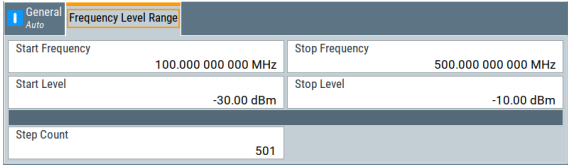
> "Frequency Range"	> "Frequency / Level Range"
	

Settings

Start Frequency/Stop Frequency.....	536
Center Frequency.....	536
Span.....	536
Spacing.....	537
Step Linear/Step Logarithmic.....	537

Start Frequency/Stop Frequency

Defines the frequency sweep range by setting the start and end values.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Remote command:

RF frequency sweep:

[:SOURce<hw>] :FREQuency:START on page 1213

[:SOURce<hw>] :FREQuency:STOP on page 1214

RF combined sweep:

[:SOURce<hw>] :COMBined:FREQuency:START on page 1303

[:SOURce<hw>] :COMBined:FREQuency:STOP on page 1304

LF frequency sweep:

[:SOURce<hw>] :LFOutput:FREQuency:START on page 1240

[:SOURce<hw>] :LFOutput:FREQuency:STOP on page 1240

Center Frequency

In "RF Frequency Sweep" mode, sets the RF center frequency.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Remote command:

[:SOURce<hw>] :FREQuency:CENTER on page 1213

Span

In "RF Frequency Sweep" mode, sets the span of the frequency sweep range.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Remote command:

[\[:SOURce<hw>\]:FREQuency:SPAN](#) on page 1213

Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing](#) on page 1301

RF combined sweep: n.a.

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:SPACing](#) on page 1247

Step Linear/Step Logarithmic

In "RF/LF Frequency Sweep" mode, sets the step width for the individual frequency sweep steps. The value is added at each sweep step to the current frequency.

Depending on the current [Spacing](#), you can enter either an absolute or logarithmic step width.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

"Step Linear" The step width is a constant value in Hz.

"Step Logarithmic"

The step width is determined logarithmically in %, i.e. as a constant fraction of the current frequency.

Remote command:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:STEP\[:LINear\]](#)
on page 1303

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:STEP:LOGarithmic](#)
on page 1303

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:STEP\[:LINear\]](#) on page 1247

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:STEP:LOGarithmic](#) on page 1247



8.10.5.3 Level range settings

Access:

1. Select "RF" > "Sweep/List" > "RF Level Sweep"

2. Select for example "Level Range".

Table 8-10: Range settings dialog: Examples of RF Level and RF Combined Sweep dialogs
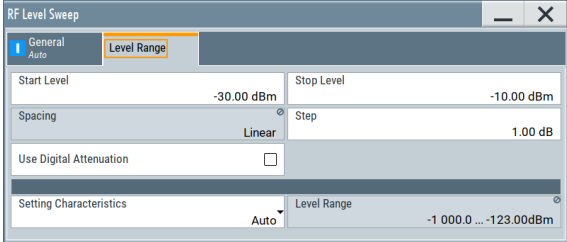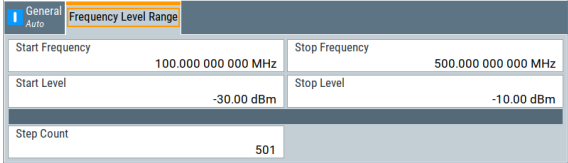
> "Level Range"	> "Frequency / Level Range"
	

Settings

Start Level / Stop Level.....	538
Step Count.....	538
Spacing.....	538
Step.....	539
Setting Characteristics.....	539
Level Range.....	540

Start Level / Stop Level

Defines the RF level sweep range by setting the start and end values.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Remote command:

RF level sweep:

`[:SOURce<hw>] :POWer:START` on page 1281

`[:SOURce<hw>] :POWer:STOP` on page 1281

RF combined sweep:

`[:SOURce<hw>] :COMBined:POWer:START` on page 1304

`[:SOURce<hw>] :COMBined:POWer:STOP` on page 1304

Step Count

In "RF Combined Mode", defines the number of sweeps to be executed in [Mode > Single](#).

To start the sweep cycles, select [Execute Single](#).

Remote command:

`[:SOURce<hw>] :SWEep:COMBined:COUNt` on page 1305

Spacing

Indicates that the instrument distributes the level steps linearly (straight proportional), i.e. the level steps have the same size.

To determine the step size, use the parameter [Step](#).

Remote command:

n.a.

Step

Sets the step width for the RF level sweep in dB.

The "RF level sweep" mode increases or decreases the level value linearly by the set value.

Remote command:

`[:SOURce<hw>] :SWEep:POWer:STEP[:LOGarithmic]` on page 1300

Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto" Sets the RF output level automatically according to the selected mode.
In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.
The RF signal is shortly blanked when the step attenuator is switching.

"Uninterrupted" Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.
This mode reduces the dynamic range of the instrument. The step attenuator is fixed.

Note:

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

"Strictly Monotone" Executes signal level changes monotonically increasing or decreasing.
The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.
All electronic switches, which can affect the monotonicity are fixed.
The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.

"Constant-VSWR" Suppresses output impedance variations at the RF A/RF B output connector, due to changed level settings.

"Continuous-Phase" Suppresses phase discontinuities.
This mode reduces the dynamic range of the instrument and the step attenuator is fixed (equates to "Strictly Monotone").

"Constant-Phase"

This mode keeps the phase constant by coupling the digital attenuation directly to the level setting.

Note: The coupling is only active when the I/Q modulator is in operation.

Pressing **Readjust** adds the value of the digital attenuation to the level setting, and sets the **Digital Attenuation = 0**. In total, the level value remains constant.

"User"

Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

`[:SOURce<hw>] :POWer:LBEHaviour` on page 1278

Level Range

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

`[:SOURce<hw>] :POWer:RANGe:LOWer?` on page 1287

`[:SOURce<hw>] :POWer:RANGe:UPPer?` on page 1287

8.10.6 List mode settings

The "List Mode" dialog contains all the functions and settings for creating and handling lists with RF frequency/level pairs for generating the RF signal based on these values.

Access:

- Select "RF" > "Sweep/List" > "List mode".

The dialog contains parameters for configuring the list mode processing, entering list mode data and transferring data files from or to the instrument.


The remote commands required to define these settings are described in [Chapter 14.19.12, "SOURce:LIST subsystem"](#), on page 1248.

- [General settings](#).....540
- [List mode data settings](#).....544
- [Import/export settings](#).....545

8.10.6.1 General settings

Access:

- Select "RF" > "Sweep/List" > "List mode > General".

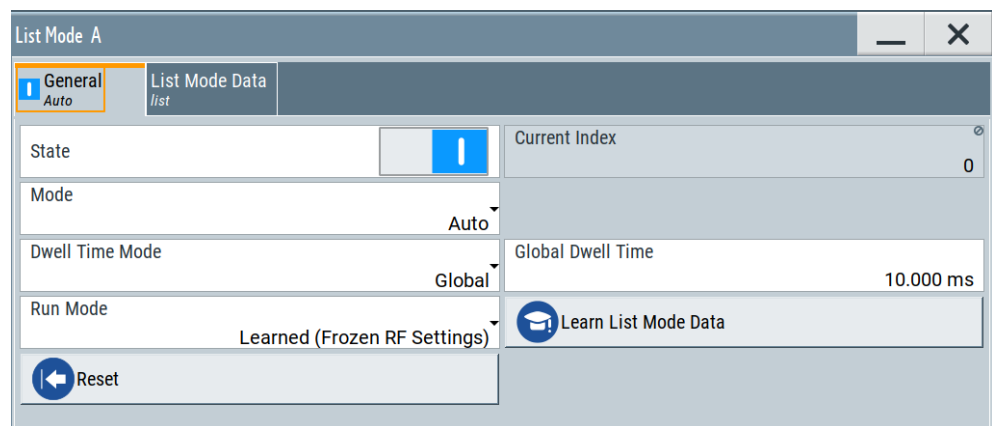

In the "General" tab, you can configure the trigger and dwell time modes for list processing and activate signal generation.

Settings

State.....	541
Current Index.....	541
Mode.....	541
Dwell Time Mode.....	542
Global Dwell Time.....	542
Run Mode.....	543
Learn List Mode Data.....	543
Trigger Slope.....	543
Show Connector.....	543
Reset.....	543
Execute Single.....	543

State

Activates the list mode and processes the currently selected list.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[:SOURce<hw>] :FREQuency:MODE on page 1209

Current Index

Sets the list index for list processing in "Step" mode. In the other modes, the index indicates the current step.

Remote command:

[:SOURce<hw>] :LIST:INDex on page 1254

Mode

Selects the mode for list processing.

See [Chapter 8.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 515.

- "Auto" Generates the signal by processing the frequency/level value pairs of the list from the beginning to the end.
The list steps are performed automatically, controlled by the dwell time. If you switch from any mode to "Auto", signal generation always starts at the top of the list.
- "Single / Extern Single" Generates the signal by processing the frequency/level value pairs of the list once from the beginning to the end after a trigger event.
The list steps are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.
- "Step / Extern Step" Generates the signal by processing the frequency/level value pairs of the list step-by-step, manually triggered.
- "Extern PDW Index" Option: R&S SMW-K503/-K504
Requires
 - "I/Q Mod > I/Q Settings > I/Q Modulator" > "Internal baseband > Optimization Mode > Fast"
 - "RF > RF Level > Automatic Level Control" > "State > Off (Table)".
 Generates the signal by processing the frequency/level value pair triggered by the list index in the time control descriptor word (TCDW).

Remote command:

`[:SOURce<hw>] :LIST:TRIGger:SOURce` on page 1257

`[:SOURce<hw>] :LIST:MODE` on page 1255

Dwell Time Mode

Selects either variable dwell times or a fixed dwell time to perform signal generation in list mode.

- "Global" Uses the same dwell time for all lists steps, set with [Global Dwell Time](#).
- "From List" Uses the dwell times from the list.
You can define the dwell time for each frequency/level value pair individually, see [Chapter 8.10.7, "List editor"](#), on page 547.

Remote command:

`[:SOURce<hw>] :LIST:DWELL:MODE` on page 1252

Global Dwell Time

Sets the dwell time for [Dwell Time Mode](#) > "Global".

Note: In case of considerable overrun conditions, the R&S SMW turns off the list mode.

See also ["Dwell time"](#) on page 528.

Remote command:

`[:SOURce<hw>] :LIST:DWELL` on page 1252

Run Mode

Selects whether the instrument generates the signal by processing the list directly, or by learning and replaying the data.

"Learned (Frozen RF Settings)"

Generates the signal with the previously learned and stored data from the temporary memory.

See ["Learn List Mode Data list processing mode"](#) on page 529.

"Live"

Generates the signal directly from the database.

The instrument reads the pairs of values from the list, calculates the hardware settings and generates the signal immediately.

See ["Live list processing mode"](#) on page 530.

Remote command:

[\[:SOURce<hw>\]:LIST:RMODe](#) on page 1255

Learn List Mode Data

Reads the settings from the list data table and calculates the associated hardware settings. The learned data is stored in the temporary memory.

See also ["When to use the "Learn List Mode Data" function"](#) on page 530.

Remote command:

[\[:SOURce<hw>\]:LIST:LEARn](#) on page 1255

Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the INST TRIG x connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

[\[:SOURce<hw>\]:INPut:TRIGger:SLOPe](#) on page 1217

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Reset

Resets the list to the starting point.

Remote command:

[\[:SOURce<hw>\]:LIST:RESet](#) on page 1259

Execute Single

Manually starts list processing in "Single" mode.


Remote command:

[\[:SOURce<hw>\]:LIST:TRIGger:EXECute](#) on page 1257

8.10.6.2 List mode data settings

Access:

1. Select "RF" > "Sweep/List" > "List mode".
2. Select "List Mode Data".

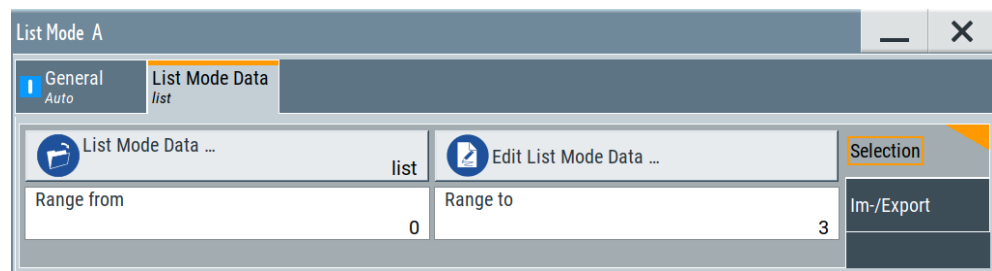

This dialog contains the parameters required for creating and editing lists, activating the learning function and selecting the list processing mode.

Settings

List Mode Data.....	544
Edit List Mode Data.....	544
List Range from/to.....	544

List Mode Data

Accesses the standard "Select List" dialog for selecting, creating and editing a list file. The currently loaded file is indicated.

You can create data lists with the internal editor or import externally created files, see ["Creating and handling lists"](#) on page 527.

Remote command:

[:SOURce<hw>] :LIST:CATalog? on page 1258
 [:SOURce<hw>] :LIST:SElect on page 1260
 [:SOURce<hw>] :LIST:DElete on page 1258
 [:SOURce<hw>] :LIST:DElete:ALL on page 1259

Edit List Mode Data

Opens the editor to insert and save data lists with RF frequency, power and dwell time values, see [Chapter 8.10.7, "List editor"](#), on page 547.

You find this function also in standard file select dialog, accessed via [List Mode Data](#).

List Range from/to

Defines an index range in the current list by setting the start and stop index.

The instrument generates the signal with the values of the selected index range and ignores all other list entries.


Remote command:

[:SOURce<hw>] :LIST:INdex:STARt on page 1254
 [:SOURce<hw>] :LIST:INdex:STOP on page 1254

8.10.6.3 Import/export settings

Access:

1. Select "RF" > "Sweep/List" > "List Mode".
2. Select "List Mode Data" > "Im-/Export".

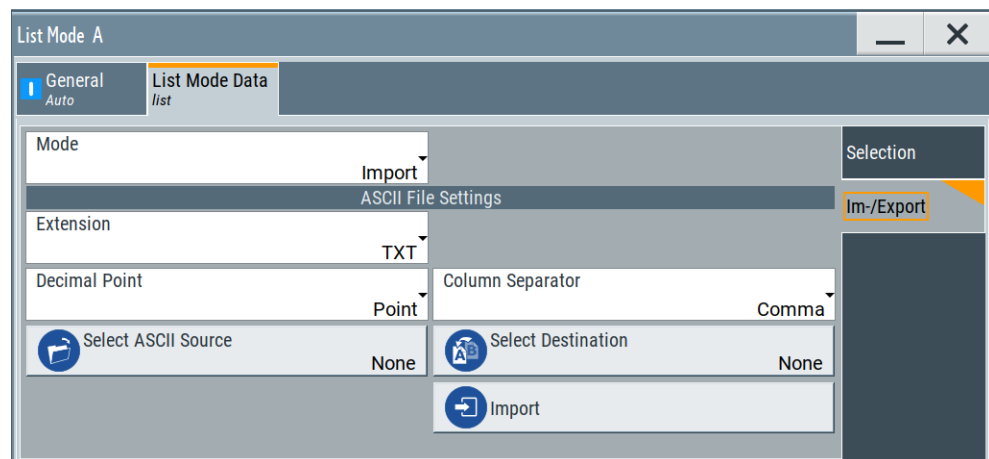

The "Im-/Export" dialog provides the parameters for importing or exporting files with user data in standard ASCII *.txt or *.csv file format.

The table separators and the decimal floating point numbers are customizable.



Since you need to determine the same parameters for all standard ASCII file formats, the settings of these dialogs are similar to the settings of user correction, for example. Therefore, [Chapter 8.12.3.4, "Import/export list files"](#), on page 603 describes the settings in general.

Settings

Mode.....	545
ASCII File Settings.....	545
Select (ASCII) Source/Select (ASCII) Destination.....	546
Select Source/Select ASCII Destination.....	546
Import / Export.....	546

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[:SOURce<hw>] :LIST:DEXChange:MODE on page 1262

[:SOURce<hw>] :CORRection:DEXChange:MODE on page 1202

ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension"	Selects *.csv or *.txt format.
"Decimal Point"	Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.
"Column Separator"	Sets the separator between the columns in an ASCII table. Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[:SOURce<hw>] :LIST:DEXChange:AFILe:EXTension on page 1261
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:DECimal on page 1261
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:COLumn on page 1261
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:EXTension on page 1201
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SEParator:DECimal
 on page 1202
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SEParator:COLumn
 on page 1202

Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[:SOURce<hw>] :LIST:DEXChange:AFILe:CATalog? on page 1260
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SElect on page 1261
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:CATalog? on page 1201
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SElect on page 1201

Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[:SOURce<hw>] :LIST:DEXChange:SElect on page 1262
 [:SOURce<hw>] :CORRection:DEXChange:SElect on page 1203

Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[:SOURce<hw>] :LIST:DEXChange:EXECute on page 1260
 [:SOURce<hw>] :CORRection:DEXChange:EXECute on page 1202

8.10.7 List editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- "RF" > "Sweep/List" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 14.19.12, "SOURce:LIST subsystem"](#), on page 1248.

Access to "Edit User Correction Data":

- "RF" > "RF Level" > "User Correction" > "Edit User Cor. Data"

	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 14.19.5, "SOURCE:CORRection subsystem"](#), on page 1195.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mdoe Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

Settings

Edit List Mode Data	548
Data handling keys	549
L Go To	549
L Edit	549
L Fill with Sensor	549
L Save As/Save	549
Fill	549

Edit List Mode Data

Table with values for list or user correction processing.

Note: Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency /Hz"

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 1253

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)
on page 1197

"Power /dBm" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 1256

"Correction Value /dBm" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 1198

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL:LIST](#) on page 1253

Data handling keys

Standard functions for file and data handling.

**Go To ← Data handling keys**

Selects a row for editing.

Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see ["Fill..."](#) on page 549.

Fill with Sensor ← Data handling keys

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 8.12.3.3, "Fill with sensor"](#), on page 602

Save As/Save ← Data handling keys

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

Fill...

Provides parameters for filling a table automatically with user-defined values.

From	0	Range	4
Column To Fill	Frequency /Hz		
Start Value	2.000 000 000 000 GHz	End Value	2.600 000 000 000 GHz
Increment Value	200.000 000 000 MHz		
<input checked="" type="checkbox"/> Fill			

To fill the table, select "Fill".

Note: Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

8.10.8 How to generate a signal in list or sweep mode

This section shows you how to configure a varying RF output signal for both, the list and sweep modes.

To configure the frequency sweep signal

1. In the status bar, enter "Freq = 6 GHz" and "Lev = -25 dBm".
2. Select "RF" > "Sweep/List" > "RF Frequency Sweep"
3. Select "Mode > Auto".
4. Select "Spacing > Linear".
5. Set "Dwell Time > 15.0 ms".

6. In the "Frequency Range" tab, set "Start Freq > 200 MHz" and "Stop Freq > 600 MHz".
(Alternatively you can set "Center Freq > 400 MHz" and "Span > 400 MHz".)
7. Set the step width "Step Lin > 10 MHz" and "Dwell Time > 10.0 ms".
8. In the "Advanced" tab, trigger the sweep "Auto".
9. In the "General" tab, select "State > On".

Example: Fast changing frequency and level settings in list mode

The following example shows you how to generate an amplitude modulated RF signal based on list mode data.

General workflow

Since any change of the hardware settings or list entries can affect the RF signal characteristics directly, we recommend that you proceed as follows:

1. Configure the modulation settings.
Activate the RF signal.
2. Wait until the hardware settings have settled.
3. Create a list file.
4. Configure the list mode.
5. Execute "Learn List Mode Data" if necessary.
6. Activate list mode.

To configure amplitude modulation and switch RF on

1. Press [PRESET] to start from an initial state.
2. Select "RF" > "Analog Modulation" > "Amplitude Modulation > On".
3. Select "RF > On" to activate RF signal generation.

To create list mode data

1. Select "RF" > "Sweep/List" > "List Mode".
2. In the "List Mode Data" tab, select "List Mode Data > New"
3. Enter the filename `ListMode_Test` for the data list and confirm with "Ok".
The instrument creates a file and stores it in the `/var/user/` directory.
4. Select "Edit List Mode Data".
5. Enter the first values "Frequency > 2", "Power > 0" and "Dwell > 2".
6. Enter further frequency, power and dwell time values in the same way.
7. Select "Save" and close the dialog.

To configure the list mode and start signal generation

1. In the "General" tab, select "List Mode > Auto".
2. Select "Dwell Time Mode > From List".
3. Select "List Mode Data > Learn List Mode Data".
4. Switch state to "On".
5. Select "Run Mode > Learned (Frozen RF Settings)".
6. Select "General > State > On".

The instrument continuously generates an amplitude-modulated RF signal whose frequency and level values change according to the dwell times, as defined in the list.

With active list mode, the generator displays no frequency and level values in the status bar, but you can check the following parameters.

- In the list mode dialog, the current index indicates the steps of the signal generation.
- In remote control mode, you can query:
 - The current state with `[:SOURce<hw>] :LIST:RUNning?`
 - Current parameters with the commands `FREQ?`, `POW?` and `LIST:DWEL?`.

8.11 Analog modulations

Analog modulation is a method used to transmit information of an LF (Low Frequency) signal in accordance with a second signal, typically one of a higher frequency. This is done by varying one or more properties of a high frequency waveform, called the modulation or carrier signal, with the modulating signal that contains the information to be transmitted.

The three key parameters of the modulation signal are the:

- Amplitude
- Phase
- Frequency

These parameters are modified in accordance with the low frequency signal to obtain the modulated RF signal.

The R&S SMW supports AM (Amplitude Modulation), FM (Frequency Modulation), Φ M (Phase Modulation (PhiM)), and also PULM (Pulse Modulation).

It generates LF modulation signals as sine, triangle, trapezoidal or square (pulse) waveform, that can be output for use in a downstream instrument. You can also create various interference signals such as white noise with selectable bandwidth and level distribution.

A monitor function allows you to synchronize the LF output signal with the amplitude, frequency or phase modulation signal.

The instrument provides the following internal **modulation signal sources**:

- An LF generator
- A multifunction generator and a noise generator
- A high performance pulse generator

The R&S SMW generates both the carrier (LF) and RF frequencies, provides sine or square waves, waveforms with rising and falling edges (triangle, sawtooth and trapezoid), and various noise signals, such as a white noise with selectable bandwidth and level distribution.

To configure and perform a modulation, you need to select the LF modulation signal source, configure the LF signal, and determine the settings of the modulation.

See the following sections for detailed information:

- [Modulation signals](#) describes the characteristics of the available modulation signal sources, and provides access to the [RF connectors settings](#).
- [Modulation signal waveforms](#) shows the waveform shapes and their respective parameters graphically.
- [Modulation settings](#) contains the settings for the AM, FM, PhiM and Pulse modulation.
- [Output settings](#) enables you to select the signal for output, and to specify the amplitude and an offset.



Interactions and characteristics

- Some modulations exclude each other and cannot be performed simultaneously.
- For instruments equipped with R&S SMW-B2031/-B2044(N), amplitude modulation, frequency modulation and phase modulation are only possible in RF path A. When activating frequency or phase modulation in RF path A, the R&S SMW turns off signal generation in RF path B.
- For pulse modulated signals, you can select between fast or smoothed transitions, see ["Transition Type"](#) on page 564.
This setting is available over the entire frequency range for all instruments with frequency options up to 6 GHz. For higher frequency options, the frequency range for the smoothed setting is limited.

For more information, see data sheet.

- The settings of the modulation signal affect all analog modulations that use an internal modulation source.
- In sweep mode, LF frequency sweep is possible.
- You can feed an external LF signal in each of the two paths.
- An activated analog modulation automatically turns off:
 - I/Q modulation
 - Arbitrary waveform generation
 - Digital modulation
 - Digital standards

8.11.1 Required options

The equipment layout for generating the analog modulation signals includes per signal path:

- Option frequency (e.g. R&S SMW-B1003)
- Option baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or option wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)
To perform for example I/Q modulation and an analog frequency or phase modulation in one path simultaneously, option R&S SMW-B13T/B13XT must be installed.
- Option pulse modulator (R&S SMW-K22)
- Option high performance pulse generator (R&S SMW-K23)
- Option multi-function generator (R&S SMW-K24)
- Option AM/FM/PhiM (R&S SMW-K720)
- *earlier RF hardware versions:*
 - Option FM/PhiM modulator (R&S SMW-B20) or
 - Option FM/PhiM modulator and low phase noise (R&S SMW-B22)

8.11.2 Modulation signals

The signal sources for the modulation signal are two internal generators, LF and Noise, and a pulse generator, but you can also use an externally supplied signal, see [External signal sources](#).

You can perform the AM, FM and PhiM with the signal of any of the provided sources. Even more, you can merge two modulation signals, for example, to generate a two-tone signal. Similarly, you can forward the used modulation signal to the output.

8.11.2.1 Internal signal sources

Fully equipped, the R&S SMW provides the following internal modulation sources:

- **LF Generator**
Supplies sinusoidal and square waves in the frequency range 0.1 Hz to 1 MHz and selectable shapes.
To obtain a triangle, trapezoid or square wave, a pulse signal, the R&S SMW converts the sinusoidal signal internally to the respective shape.
- **Multifunction generator**
A further LF generator for use as a second modulation source. It features an extended frequency range of 0.1 Hz to 10 MHz and selectable signal shapes. Alternatively, you can use it to generate a noise modulation signal.
- **Noise generator**
Supplies white noise with selectable bandwidth and level distribution.
- **High performance pulse generator**
Allows you to generate either single or double pulse signals.

8.11.2.2 External signal sources

For the input of an external amplitude, frequency or phase modulation signal, you can assign the signal at the EXT connectors.

External pulse modulation signals are fed via the global connectors, assigned in the "Global Connector Settings" dialog, see [Chapter 12.2.5, "Global connectors settings"](#), on page 755.



The external modulation signal at the input must have a voltage of $U_S = 1 \text{ V}$ ($U_{\text{EFF}} = 0.707 \text{ V}$, in case of sine signals) to achieve the displayed modulation depth and range. The input voltage should not exceed 1.1 V, otherwise modulation distortions might occur. With external pulse modulation, the switching point is max. 2.4 V and the voltage at the input should not exceed 5 V. The maximum modulation frequency is 10 MHz for frequency and phase modulation.

8.11.2.3 Assigning the LF signal to the output

The R&S SMW can also act as the source for modulations in downstream equipment. Regardless of the used signal source, which can be the internally generated or an externally fed LF modulation signal, you can optionally select the signal for output. The LF signal is output at the LF OUT x connectors.



Note that the output of the internal LF signal and the analog I/Q signal use the same physical connectors (LF OUT x and I/Q out x), that means these signals cannot be output simultaneously. If both, the I/Q and the LF signal output are switched on, the I/Q signal is suppressed and the instrument provides the LF signal.

You can freely assign the LF signals from both paths (A or B) to the outputs. To perform the assignment, use the "LF Output" tab. It is available both in the "Modulation" dialog of path A and path B, but the functionality applies to both paths the same way. Therefore, the instrument adjusts your settings always in parallel. The "Overview" tab shows the current configuration graphically, and allows you to modify the assignments there directly. The assignment of the shown LF output is of course in both paths the same.

Since there are two LF output connectors, but the R&S SMW can process multiple LF signals simultaneously, there are some configurations that exclude each other.

See the following examples to the overview tab, the versatile options for configuring the modulation signals and the graphical representation of the signal flow.

Example: Introduction to the "Overview" tab

This example briefly explains the view and the elements of the "Overview" tab of the two paths (A and B). The tab shows the two common LF output signal connectors, which are the same in both paths, and the specific modulation settings of the respective path. Active signals are indicated by a blue output box.

The following modulations are configured:

- Path A (first image)
Amplitude modulation that is performed with an internally generated trapezoid wave signal and a superposed external signal.
- Path B (second image)
Amplitude modulation, performed with the sine signal of the LF Generator 2 and a superposed noise signal.
Simultaneously, the instrument performs frequency modulation with an LF signal that is composed of a sine wave (LF Generator 1, path B) and an external signal.
- LF OUT x (the same in both images)
The LF signal of the LF generator 1 in path A is routed to the first LF output, and the signal of second LF generator - to the second LF output.
This assignment is not mandatory. It has been chosen randomly and can be changed arbitrarily.

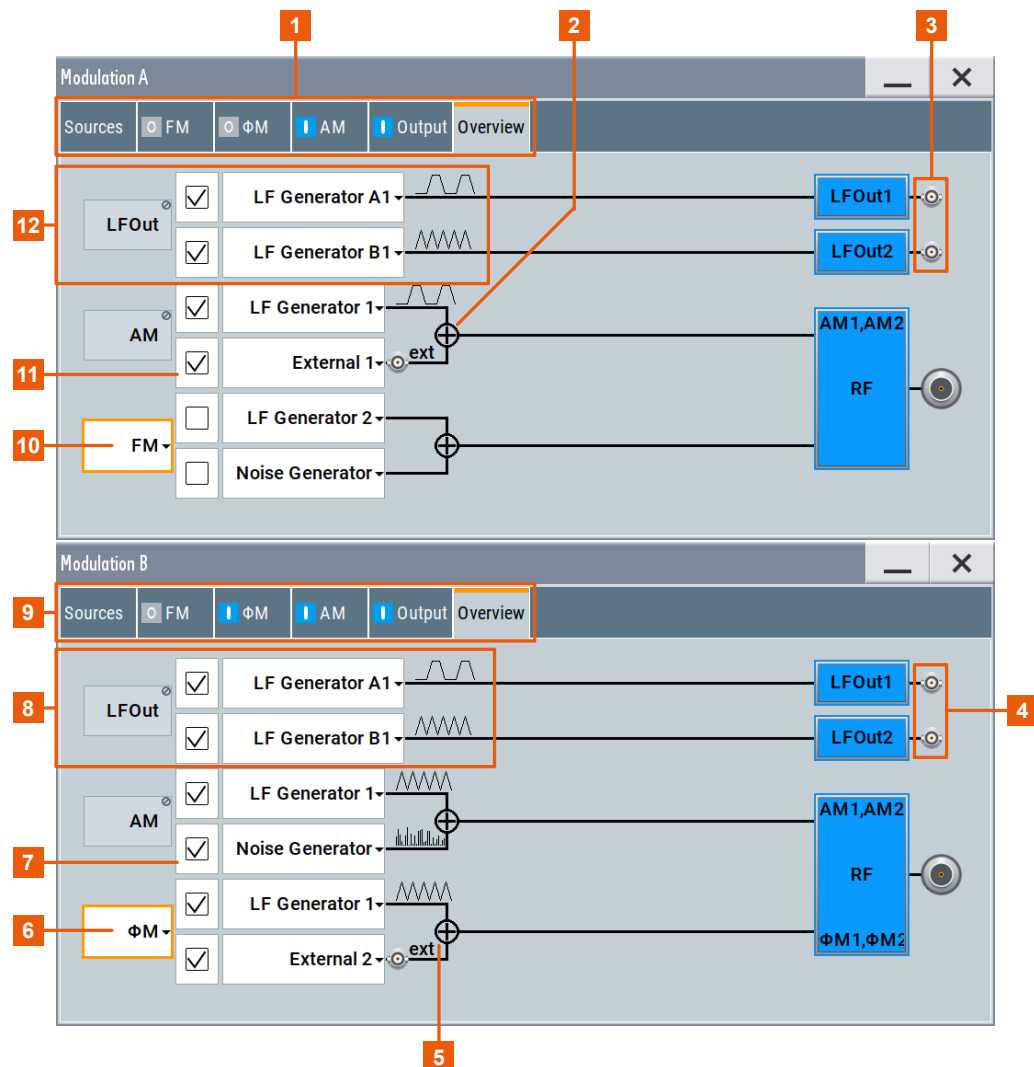


Figure 8-17: Example: Elements in the analog modulations "Overview" tab

- 1, 9 = Modulation dialogs of path A, and path B
- 2, 5 = external input connectors 1 and 2
- 3, 4 = LF output connectors 1 and 2
- 6, 10 = Selection between FM and ϕ M
- 7, 11 = modulation signal sources used in path A, and path B
- 8, 12 = assigned modulation signals to the LF outputs 1 and 2


This tab reflects the signal sources of the analog modulations AM, FM and ϕ M as in the corresponding settings dialogs. Therefore, you can also select the signal source as well as turn a modulation on or off in this tab. Corresponding to the activated modulation, the used signal sources are displayed. Furthermore, the overview also shows the signals that are routed to one of the LF output connectors.

Example: Assigning a composite modulation signal to the LF output

This example shows two different configurations for analog modulations in path A.

The following modulations are configured:

- **Analog modulation (first image)**
Amplitude modulation performed with an internally generated trapezoid wave signal and a superposed external signal. This composite LF signal is assigned to the output LF OUT x 1.
Simultaneously, the instrument performs phase modulation with an LF signal that is composed of an external signal and a sine wave, provided by the "LF Generator 2". This signal is used for the modulation and does not affect the LF output.
- **Path B**
Phase modulation performed with two internally generated trapezoid wave signals that are combined and routed to the output LF OUT x 1.

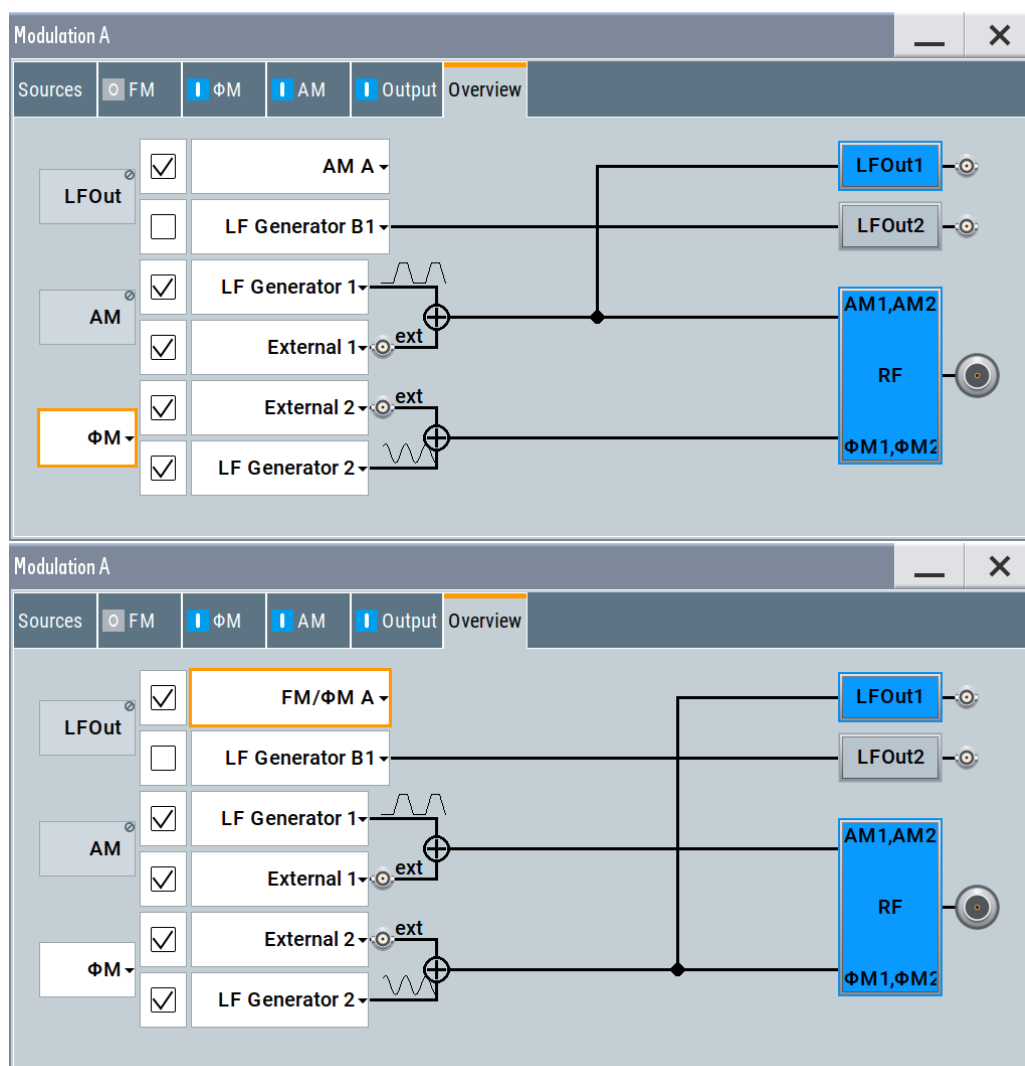


In the first image, both signals selected for the amplitude modulation in path A are combined. The instrument performs the amplitude modulation with this signal and also provides it at the LF output.

The second image shows the similar configuration set up for the phase modulation.

Example: Assigning two independent composite modulation signals to the LF outputs

This example shows the following configuration:

- Path A
Amplitude modulation performed with an internally generated square wave signal and a superposed external signal. This composite LF signal is also assigned to the output LF OUT x 2.
Simultaneously, the instrument performs frequency modulation with an LF signal that is composed of the internally generated sine wave, superposed with noise. This signal is used for the modulation and does not affect the LF output.
- Path B
Phase modulation performed with two internally generated trapezoid wave signals that are combined and routed to the output LF OUT x 1.

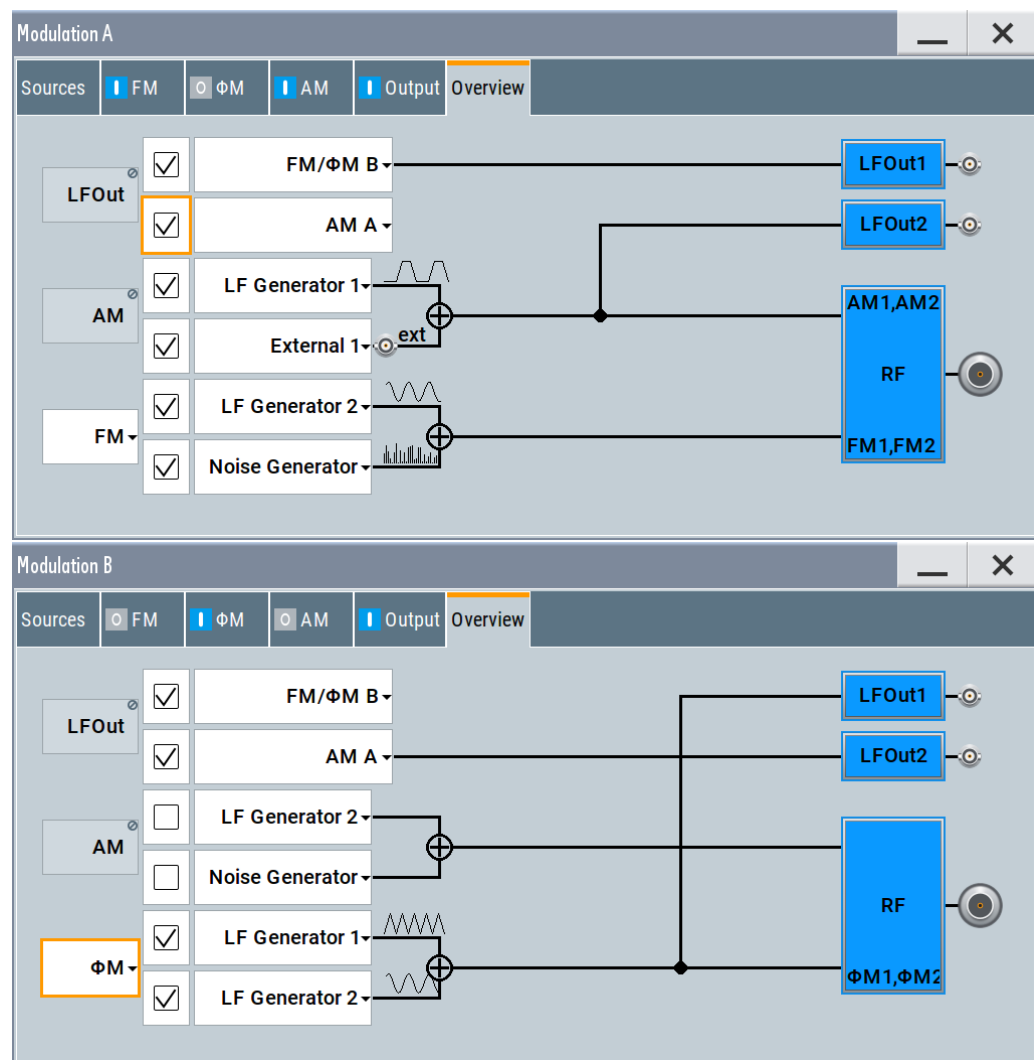

The two images illustrate how the same configuration is displayed in the "Overview" tabs of the two paths.

In the tab of path A (see the first image), you can see the settings of the modulations in path A. The signal coming from B is only displayed. Vice versa, the tab in the path B (second image) shows the configuration of the modulations of this path, but also the signal coming from A.


8.11.2.4 Modulation signal waveforms

The following graphs show the modulation signal waveforms of the R&S SMW.

LF Generator


The LF and multifunction generators support the following signal shapes:

Sine

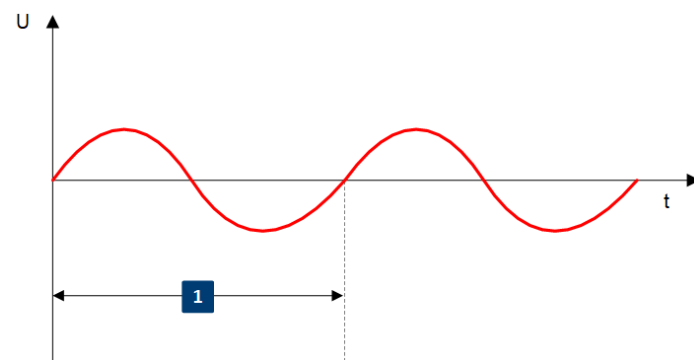


1 = Period


Pulse

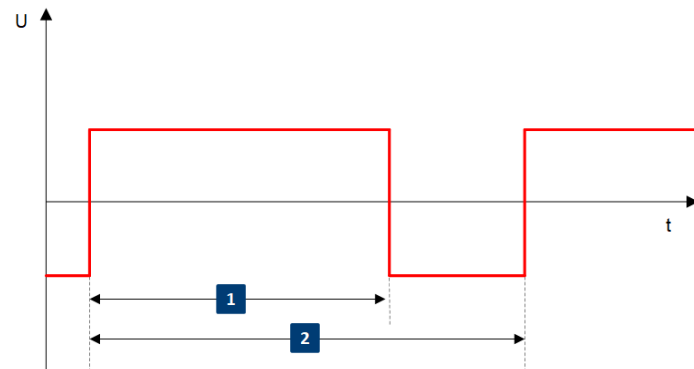

1 = Pulse width 2 = Pulse period

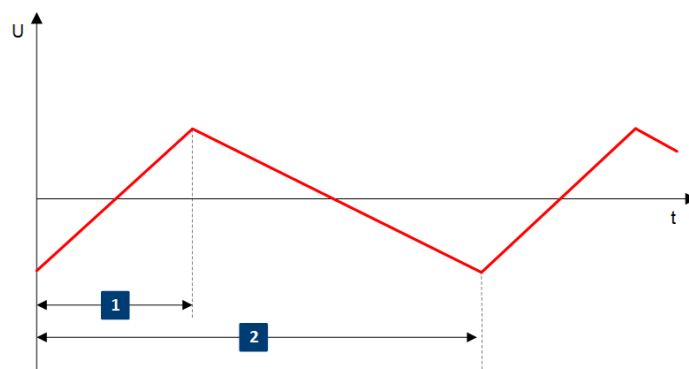Triangle

1 = Triangle rise 2 = Triangle period

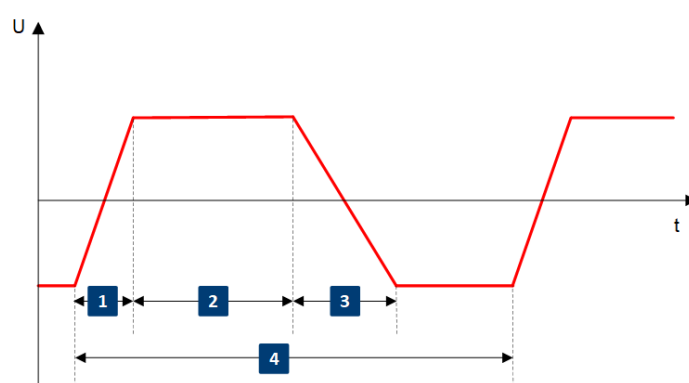Trapezoid

1 = Trapezoid rise 2 = Trapezoid high


3 = Trapezoid fall 4 = Trapezoid period

To configure the associated parameters of a signal shape, see ["Shape"](#) on page 577.

Pulse Generator


The high performance pulse generator enables you to generate single or double pulse signals.

Single

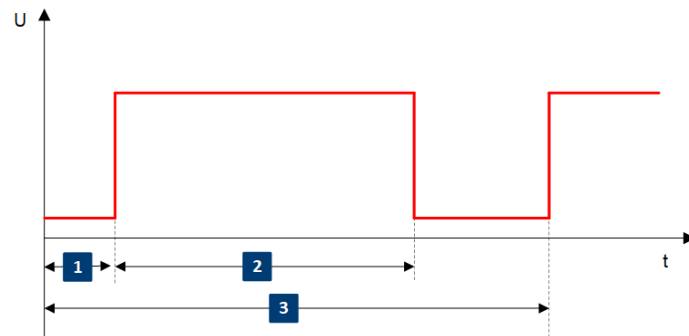

1 = Pulse delay 2 = Pulse width 2 = Pulse Period

Double

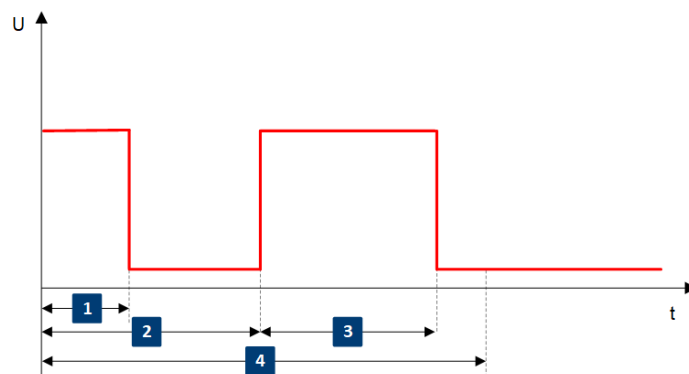

1 = Pulse width 2 = Double pulse delay
3 = Double pulse width 4 = Pulse period

8.11.3 Activating analog modulations

1. Option: R&S SMW-B9
Select "System Config > Fading/Baseband Config > Mode = Standard".
2. Option: R&S SMW-B10
Use one of the following:
 - Select "RF > Amplitude Modulation/Frequency Modulation/Phase Modulation > State > ON".
 - Select "Mod Off > Modulation On".
 - Press the [MOD ON/OFF] key.

[MOD ON/OFF]

Activate one or more analog modulations and press the [MOD ON/OFF] key to toggle the state of them all.

Pressing the key again restores the status that was active before the last switch-off.

Remote command:

`[:SOURce<hw>] :MODulation [:ALL] [:STATe]` on page 1039

8.11.4 Modulation settings

Access:

- Select "RF > Analog Modulation".

The "Modulation" dialog contains all functions and settings to configure the analog modulations, the LF signal sources for performing a modulation, and the LF signal output.

The remote commands required to define these settings are described in:



- [Chapter 14.19.3.2, "SOURce:AM subsystem"](#), on page 1039
- [Chapter 14.19.3.3, "SOURce:FM subsystem"](#), on page 1044
- [Chapter 14.19.3.4, "SOURce:PM subsystem"](#), on page 1049
- [Chapter 14.19.3.5, "SOURce:PULM subsystem"](#), on page 1053
- [Chapter 14.19.11, "SOURce:LFOutput subsystem"](#), on page 1235

8.11.4.1 Pulse modulation settings

Access:

- Select "RF > Analog Modulation > Pulse Modulation".

Table 8-11: Pulse Modulation

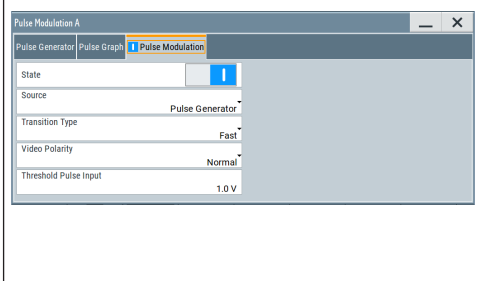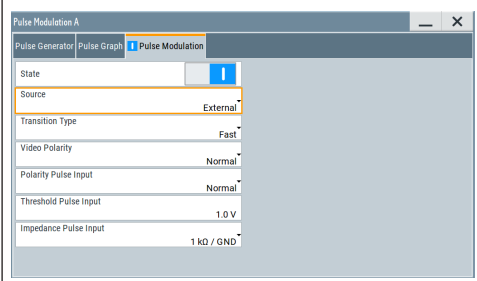	
"Signal Source > Pulse Generator" (internal)	"Signal Source > External"

The "Pulse Modulation" dialog contains all parameters required to configure pulse modulation and pulse signal generation.

It also displays the pulse signal graphically.

The remote commands required to define these settings are described in [Chapter 14.19.3.5, "SOURce:PULM subsystem"](#), on page 1053.

Settings:

State	564
Source	564
Transition Type	564
Video Polarity	564
Polarity Pulse Input	564
Threshold USER4-6 Input/Threshold Pulse Input	565
Impedance Pulse Input	565

State

Option: R&S SMW-B9 - enabled in "System Config > Mode = Standard".

Option: R&S SMW-B10 - enabled in "System Config > Mode = Standard/Advanced".

Activates pulse modulation.

Remote command:

`[:SOURce<hw>] :PULM:STATe` on page 1057

Source

Selects between the internal "Pulse Generator" or an "External" pulse signal for the modulation.

"Pulse Generator"

Selects the internal generator.

See [Pulse generator settings](#).

"External"

Modulation source is fed to the input connector.

See [Chapter 8.11.2.2, "External signal sources"](#), on page 555.

Remote command:

`[:SOURce<hw>] :PULM:SOURce` on page 1057

Transition Type

Selects between "Fast" or "Smoothed" slew rate (slope).

"Fast"

Enables fast transitions with shortest rise and fall times.

"Smoothed"

Flattens the slew rate, resulting in longer rise / fall times. Use this mode if you are working with devices that are sensitive to steep slopes.

Note: The R&S SMW supports this functionality up to a certain frequency, depending on the installed frequency options, see also ["Interactions and characteristics"](#) on page 553.

For more information, see data sheet.

Remote command:

`[:SOURce<hw>] :PULM:TTYPe` on page 1058

Video Polarity

Sets the polarity of the internally generated pulse video (modulating) signal, related to the RF (modulated) signal.

This signal synchronizes the pulse generator signal and the RF signal.

"Normal"

The video signal level follows the RF signal, that means it is high and low simultaneously with the RF signal.

"Inverse"

Inverts the polarity between the video and the RF signal, that means it is high, when RF is low, and vice versa.

Remote command:

`[:SOURce<hw>] :PULM:OUTPut:VIDeo:POLarity` on page 1058

Polarity Pulse Input

Sets the polarity of the active slope of a pulse input signal, that is the external pulse modulation signal.

Remote command:

[:SOURce<hw>] :PULM:POLarity on page 1058

Threshold USER4-6 Input/Threshold Pulse Input

Sets the high/low threshold in volts for the signal at the USER4-6 connectors.

The input signal is defined with the parameter [Signal](#). The same threshold applies for all 3 connectors and any input signal (e.g. external pulse modulation or trigger signal).

Remote command:

[:SOURce] :INPut:USER:PULM:LEVel on page 1026

Impedance Pulse Input

Selects the input impedance for an external pulse modulation signal.

Remote command:

[:SOURce<hw>] :PULM:IMPedance on page 1059

8.11.4.2 AM, FM and PhiM modulation settings

Access:

- Select "RF" > "Amplitude Modulation/Frequency Modulation/Phase Modulation".

The screenshot shows the 'Modulation' window with tabs for Sources, FM, ΦM, AM, Output, and Overview. The 'FM' tab is selected. The window is divided into two columns: Path 1 and Path 2. Path 1 settings include State (set to 1), Source (External 1), Deviation (1.000 00 kHz), Deviation Mode (Uncoupled), and Mode (Normal). Path 2 settings include State (set to 0), Source (LF Generator 2), and Deviation (1.000 00 kHz).

The "FM", "Φ" and "AM" tabs contain the parameters per modulation type.

Since you need to determine an LF signal source for all modulations, "Source" and "State" are described in general. These parameters apply to the modulation modes AM, FM and ΦM. The following description explains the specific settings for the appropriate modulation modes.

State

Option: R&S SMW-B9 - enabled in "System Config > Mode = Standard".

Option: R&S SMW-B10 - enabled in "System Config > Mode = Standard/Advanced".

Activates a modulation.

Note: Some modulations exclude each other and cannot be performed simultaneously. For more information, see data sheet.

Remote command:

[:SOURce<hw>] :AM<ch> :STATe on page 1042

[:SOURce<hw>] :FM<ch> :STATe on page 1046

[:SOURce<hw>] :PM<ch> :STATe on page 1051

Source

Selects the LF signal source.

You can vary the signal sources for each of the modulations.

"LF Generator 1/2"

Selects one or both of the internally generated LF signals.

"External 1/2"

Selects an externally supplied LF signal.

"Noise Generator"

Selects the internally generated noise signal.

"Internal Baseband"

Option: R&S SMW-B9

The I component of the internal baseband signal is used as modulation signal source for the frequency (FM) or phase (PhiM) modulations.

Consider the following interdependency:

- The I/Q modulator in the same signal path cannot be used simultaneously and is thus disabled.
- The FM and the PhiM cannot be used as source for the LF output.
- The FM and PhiM sources in the second path are disabled, too.
- The second path is disabled and cannot be activated.

Remote command:

[:SOURce<hw>] :AM<ch> :SOURce on page 1042

[:SOURce<hw>] :FM<ch> :SOURce on page 1046

[:SOURce<hw>] :PM<ch> :SOURce on page 1051

FM settings

The following settings are dedicated to FM.

Deviation ← FM settings

Sets the frequency modulation deviation in Hz.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

[:SOURce<hw>] :FM<ch> [:DEViation] on page 1046

Deviation Mode ← FM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The total deviation is the sum of both paths. When the sum is exceeded, the R&S SMW reports a settings conflict, but does not change the settings.

- | | |
|---------------|--|
| "Uncoupled" | Enables you to adjust the deviation for each path independently. |
| "Fixed Total" | Couples the deviation of both paths in per Hz. If you change the deviation of any path, the R&S SMW automatically adjusts the value of the other path. The sum always results in the set Total Deviation . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMW adjusts the value of the other path. |

Remote command:

[\[:SOURce<hw>\]:FM:DEVIation:MODE](#) on page 1047

Total Deviation ← FM settings

Sets the sum of the signal deviation for path 1 and path 2 in Hz when using combined sources in [Deviation Mode > Fixed Total](#).

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviation of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

[\[:SOURce<hw>\]:FM:DEVIation:SUM](#) on page 1048

Ratio Path2/Path1 ← FM settings

Sets the deviation ratio (path2 to path1) in percent.

Example:

If the deviation in path1 is 10 kHz and the ratio is 50%, the deviation in path 2 is automatically set to 5 kHz.

Remote command:

[\[:SOURce<hw>\]:FM:RATio](#) on page 1048

Mode ← FM settings

Selects the mode of the frequency modulation.

- | | |
|-------------|---|
| "Normal" | The maximum range for modulation bandwidth is available. |
| "Low Noise" | Phase modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet). |

Remote command:

[\[:SOURce<hw>\]:FM:MODE](#) on page 1048

PhiM settings

The following settings are dedicated to PhiM ("ΦM").

Deviation ← PhiM settings

Sets the phase modulation deviation in radians or degrees.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

`[:SOURce] :PM<ch> [:DEViation]` on page 1053

Deviation Mode ← PhiM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum 2 rad at a maximum. When the sum is exceeded, the R&S SMW adjusts the settings automatically.

"Uncoupled"	Enables you to adjust the deviation for each path independently.
"Fixed Total"	Couples the deviation of both paths. If you change the deviation of any path, the R&S SMW automatically adjusts the value of the other path. The sum always results in the set Total Deviation .
"Fixed Ratio"	Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMW adjusts the value of the other path.

Remote command:

`[:SOURce<hw>] :PM:DEViation:MODE` on page 1052

Total Deviation ← PhiM settings

In [Deviation Mode = Fixed Total](#), sets the sum of the signal deviation for path 1 and path 2.

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviations of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

`[:SOURce<hw>] :PM:DEViation:SUM` on page 1052

Ratio Path2/Path1 ← PhiM settings

Sets the deviation ratio (path2 to path1) in per cent.

Example:

If the deviation in path1 is 10 rad and the ratio is 50%, the deviation in path 2 is automatically set to 5 rad.

Remote command:

`[:SOURce<hw>] :PM:RATio` on page 1053

Mode ← PhiM settings

Selects the mode of the phase modulation.

"High Bandwidth"

The maximum range for modulation bandwidth and PhiM deviation is available.

However, phase noise increases at low frequencies, and the range of PhiM deviation is limited. This mode is suitable if you process high frequencies.

"High Deviation"

The maximum range for PhiM deviation is available.

Phase noise is improved for low frequencies compared to the default mode. The range for modulation frequency is limited (see data sheet). This mode is suitable for low modulation frequencies and/or high PhiM deviation.

"Low Noise"

Frequency modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

Remote command:

`[:SOURce<hw>] :PM:MODE` on page 1052

AM settings

Provides the settings for amplitude modulation.

Depth ← AM settings

Determines the depth of the modulation signal in percent.

The depth is limited by the maximum peak envelope power (PEP).

Remote command:

`[:SOURce<hw>] :AM<ch> [:DEPTTh]` on page 1042

Sensitivity ← AM settings

Sets the input sensitivity of the external modulation signal.

Remote command:

`[:SOURce<hw>] :AM<ch>:SENSitivity` on page 1044

Deviation Mode ← AM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum of both paths is 100% in total. When the sum is exceeded, the R&S SMW reports a settings conflict, but does not change the settings.

"Uncoupled"

Enables you to adjust the deviation depth for each path independently.

"Fixed Total"

Couples the deviation depth of both paths in per cent. If you change the depth of any path, the R&S SMW automatically adjusts the value of the other path. The sum always results in the set [Total Depth](#).

"Fixed Ratio"

Couples the deviation ratio of both paths. If you change the depth of any path, the R&S SMW adjusts the value of the other path.

Remote command:

`[:SOURce<hw>] :AM:DEVIation:MODE` on page 1043

Total Depth ← AM settings

Sets the sum of the signal [Depth](#) for path 1 and path 2 in per cent when using combined sources and [Deviation Mode > Fixed Total](#).

Provided both signal paths are turned on, the depth of both paths always sum up to the value of the total depth.

Behavior when changing any depth settings:

- Changing the total depth adjusts the depths of both paths proportionally.
- Changing the depth of one path adjusts the depth of the other path. The sum always results in the set total depth.

Remote command:

`[:SOURce<hw>] :AM:DEPTH:SUM` on page 1043

Ratio Path2/Path1 ← AM settings

Sets the deviation ratio of the signal depth for path 2 to path 1 in per cent when using combined sources.


Remote command:

`[:SOURce<hw>] :AM:RATio` on page 1043

8.11.4.3 Pulse generator settings

Access:

- Select "RF > Analog Modulation > Pulse Generator".

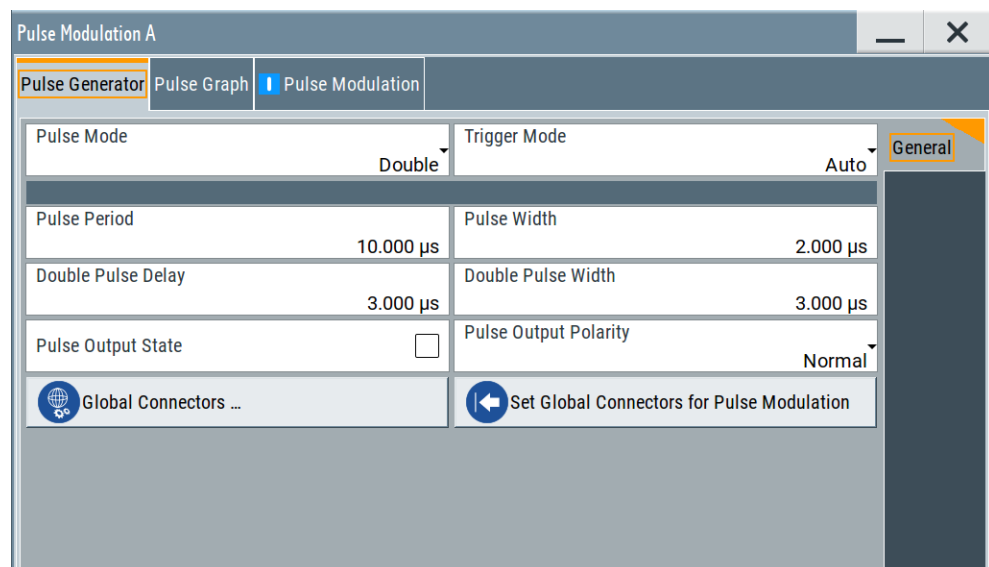

The "Pulse Generator" tab contains the settings for creating the pulse modulation signal internally.

Pulse generator > general settings

Access:

- Select "RF" > "Analog Modulation" > "Pulse Generator".

Settings

Pulse Mode.....	571
Trigger Mode.....	571
Pulse Period.....	573
Pulse Width.....	573
Double Pulse Width.....	573
Pulse Delay.....	574
Double Pulse Delay.....	574
Pulse Output State.....	574
Pulse Output Polarity.....	574
Set Global Connector for Pulse Modulation.....	574

Pulse Mode

Sets the operating mode of the pulse generator. Depending on the selection, the instrument displays the associated parameters.

- "Single" Generates a single pulse in one pulse period.
- "Double" Generates two pulses in one pulse period.

Remote command:

[:SOURce<hw>] :PULM:MODE on page 1055


Trigger Mode

Selects between continuous triggering or triggering initiated by a trigger event from an external signal.

- "Auto" Generates the internal modulation signal continuously.
- "Ext Single" Generates a single pulse signal, triggered by an external signal.

"Ext Triggered" Generates the pulse signal each time an external trigger event occurs.


Example: Generation of double pulse signal ("Pulse Mode = Double") using "Trigger Mode = Ext Triggered"

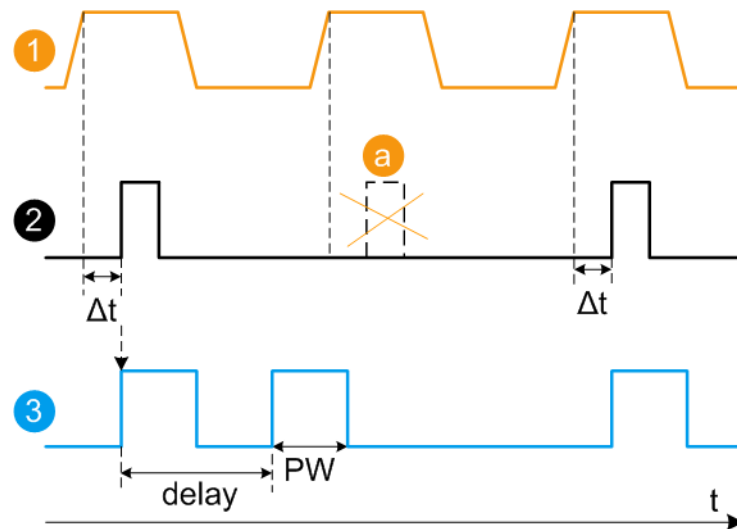

- 1 = External trigger signal input with "Trigger Input Polarity = Normal" (the positive slope is active)
- 2 = Sync signal
- 3 = Pulse signal
- a = Trigger signal during double pulse generation is without effect
- Δt = Trigger delay between the trigger and the sync signal start; see data sheet
- delay = "Double Pulse Delay = 200 ns"; the first pulse starts without a delay
- PW = "Double Pulse Width = 100 ns"

"Ext Gated" Generates the signal triggered by an external gate signal.

Example: Generation of single pulse signal ("Pulse Mode = Single") using "Trigger Mode = Ext Gated"

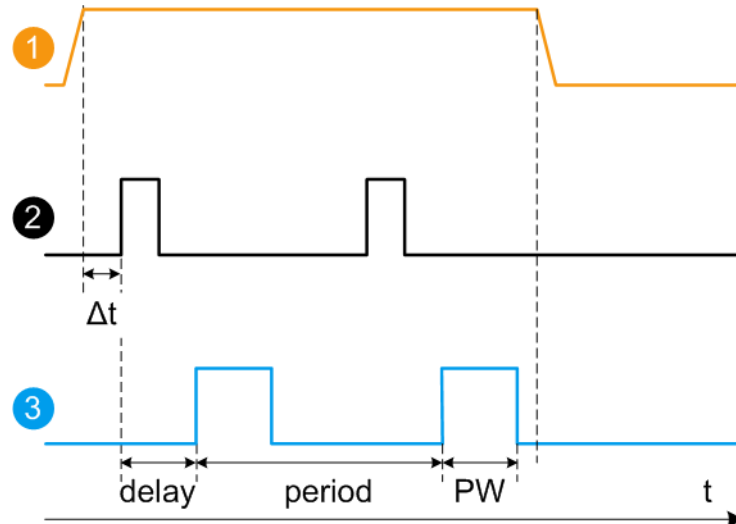

- 1 = External trigger signal input with "Trigger Input Polarity = Normal" (the positive slope is active)
- 2 = Sync signal
- 3 = Pulse signal
- Δt = Trigger delay between the trigger and the sync signal start; see data sheet
- delay = "Pulse Delay = 100 ns"
- PW = "Pulse Width = 100 ns"
- period = "Pulse Period = 300 ns" (time between the pulse start of two consecutive pulses)
- a = Gate active duration (pulses are generated during the gate active part)

Remote command:

`[:SOURce<hw>] :PULM:TRIGger:MODE` on page 1055

Pulse Period

Sets the repetition rate of the generated pulse signal.

Remote command:

`[:SOURce<hw>] :PULM:PERiod` on page 1056

Pulse Width

Sets the pulse duration of the generated pulse signal.

Note: The pulse width must be at least 20 ns less than the set pulse period.

Remote command:

`[:SOURce<hw>] :PULM:WIDTh` on page 1056

Double Pulse Width

Sets the width of the second pulse.

Remote command:

`[:SOURce<hw>] :PULM:DOUBle:WIDTh` on page 1057

Pulse Delay

Sets the pulse delay. The pulse delay determines the time that elapses after a trigger event before pulse modulation starts. The pulse delay is not effective for double pulse generation.

Remote command:

`[:SOURce<hw>] :PULM:DELaY` on page 1056

Double Pulse Delay

Sets the delay from the start of the first pulse to the start of the second pulse.

Remote command:

`[:SOURce<hw>] :PULM:DOUBle:DELaY` on page 1056

Pulse Output State

Activates the output of the pulse modulation signal.

Remote command:

`[:SOURce<hw>] :PGENerator:OUTPut [:STATe]` on page 1271

Pulse Output Polarity

Sets the polarity of the pulse output signal.

Remote command:

`[:SOURce<hw>] :PGENerator:OUTPut:POLarity` on page 1270

Set Global Connector for Pulse Modulation

Routes the pulse input signal by default to the global user connector USER4 ("Pulse In A/B"), and correspondingly the pulse output signal to USER5 ("Pulse Out A/B").


See also [Table 12-1](#) in [Chapter 12.2.2.1, "Global connectors"](#), on page 746.

8.11.4.4 Pulse graph

Access:

- Select "RF" > "Analog Modulation" > "Pulse Modulation" > "Pulse Graph".

The pulse graph is the graphical representation of the current pulse signal.

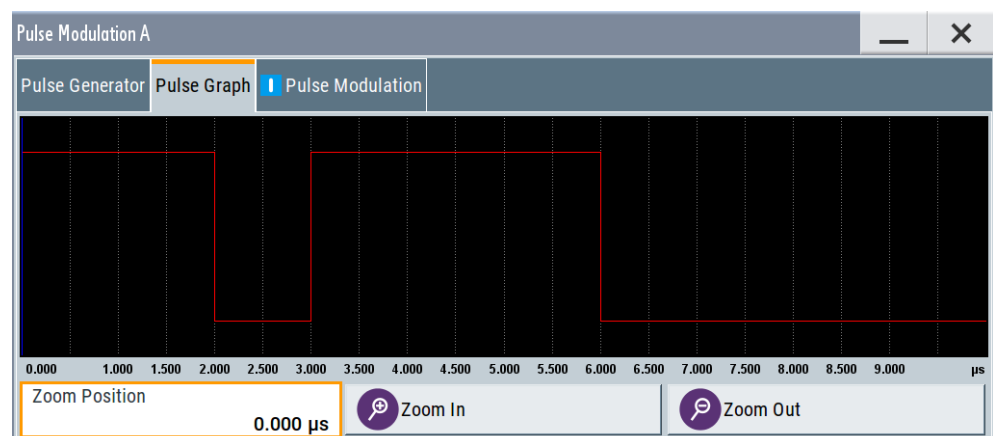

The height of the bars corresponds to the selected amplitude of the pulse signal.

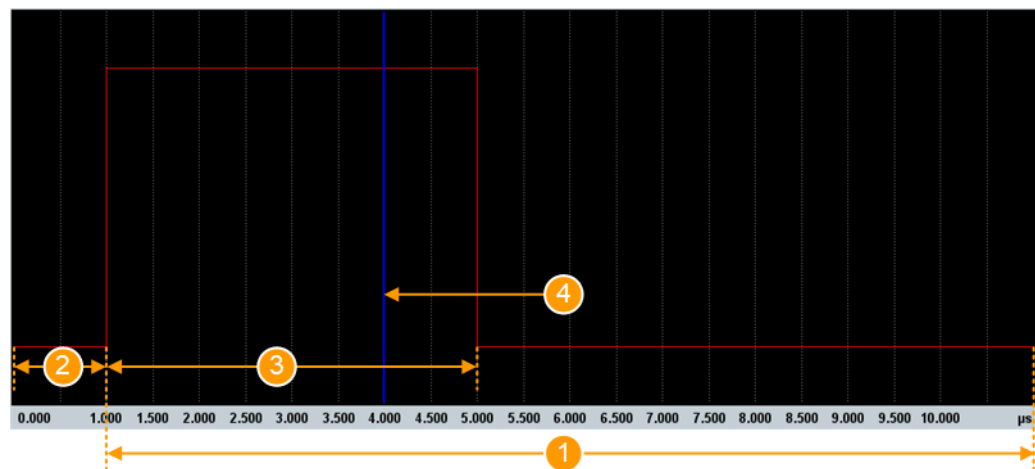


Figure 8-18: Pulse Graph - single pulse

- 1 = Pulse Period
- 2 = Pulse Delay
- 3 = Pulse Width
- 4 = Pulse Zoom Position

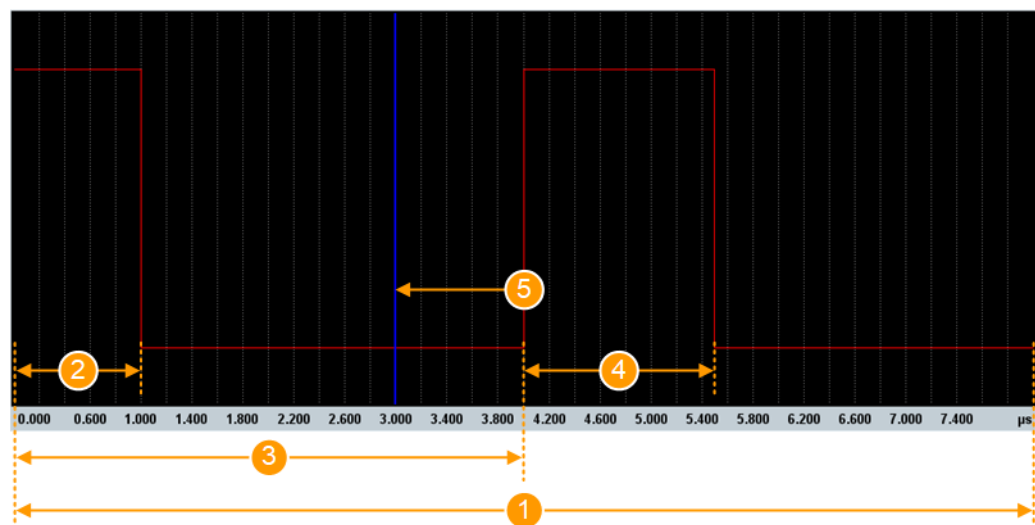


Figure 8-19: Pulse Graph - double pulse

- 1 = Pulse Period
- 2 = Pulse Width
- 3 = Double Pulse Delay
- 4 = Double Pulse Width
- 5 = Pulse Zoom Position

Zooming

You can zoom into the diagram to visualize the graph in more detail:


- "Zoom Position": Sets the focus on the time axis where to enlarge the graph.
- "Zoom In": Enlarges the graph at the selected position.

- "Zoom Out" for the reverse operation.

8.11.4.5 AM, FM and PhiM modulation sources

Access:

- Select "RF > Analog Modulation > Modulation Source...".

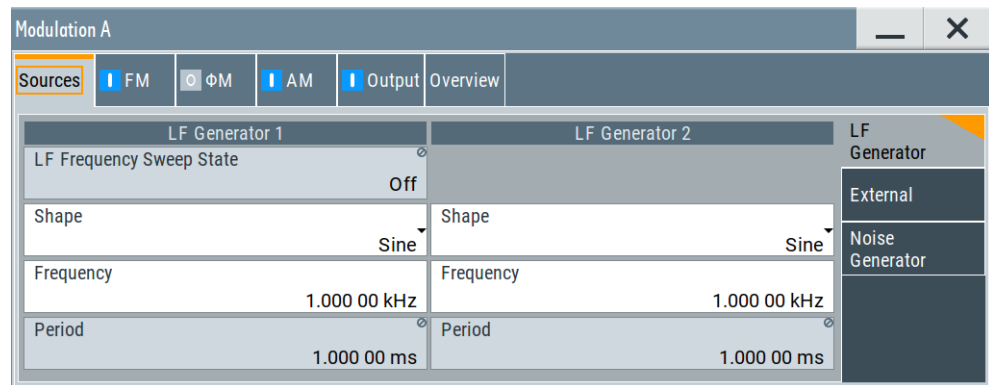

In the "Sources" tab, you can configure an LF modulation signal for performing analog modulations. It includes the setting parameters of the internal LF- and multi-function generators, the noise generator, and an external signal source.


To select an external signal, you can directly access the settings of the [Connectors](#) dialog.

The remote commands required to define these settings are described in [Chapter 14.19.11, "SOURCE:LFOutput subsystem"](#), on page 1235.

Source > LF generator settings

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > LF Generator".

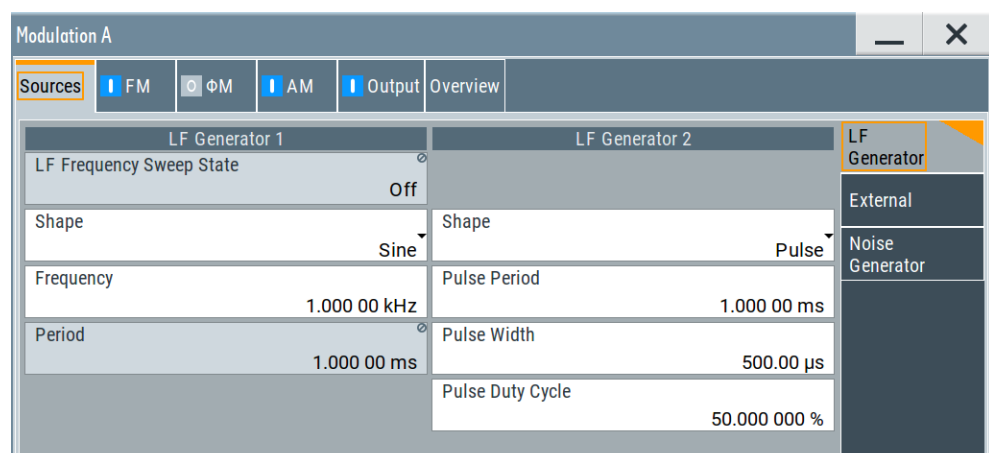

You can use the internal LF signal as modulation signal source for any of the analog modulations. The LF signal applies to all modulations which use the internal modulation signal. Therefore, any modification of the LF signal influences immediately all currently active modulations.

Settings

State (LF frequency sweep).....	577
Shape.....	577
Frequency.....	577
Period.....	577
Pulse Width.....	578
Pulse Duty Cycle.....	578
Triangle Rise.....	578
Trapezoid Rise / Fall.....	578
Trapezoid High.....	578

State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[\[:SOURce<hw>\]:LFOutput:FREQuency:MODE](#) on page 1239

Shape

Option: R&S SMW-K24.

Selects the waveform shape of the LF generator signal.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE](#) on page 1242

Frequency

Sets the frequency of the LF generator for sine signals.

Set the signal shape with the parameter [Shape](#).

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:FREQuency](#) on page 1238

Period

Sets the repetition rate of the generated LF signal for triangle, trapezoid or pulse shapes, see [Shape](#).

The period of sine signals is calculated from the selected [Frequency](#)

Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRAPeZe:PERiod` on page 1243

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRIangle:PERiod` on page 1244

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:PULSe:PERiod` on page 1242

Pulse Width

Sets the pulse duration of the generated pulse signal.

Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:PULSe:WIDTh` on page 1242

Pulse Duty Cycle

Sets the ratio between the pulse duration and the pulse period in percent.

Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:PULSe:DCYCLe` on page 1242

Triangle Rise

Sets the time required for the triangle signal to change from low level to high level.

See also [Modulation signal waveforms](#).

Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRIangle:RISE` on page 1244

Trapezoid Rise / Fall

Sets the time required for the trapezoid signal to change from low level to high level, and vice versa.

See [Modulation signal waveforms](#).

Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRAPeZe:RISE` on page 1243

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRAPeZe:FALL` on page 1243

Trapezoid High

Sets how long the trapezoid signal is at high level.


Remote command:

`[:SOURce<hw>] :LFOutput<ch>:SHAPE:TRAPeZe:HIGH` on page 1243

Source > external settings

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > External".

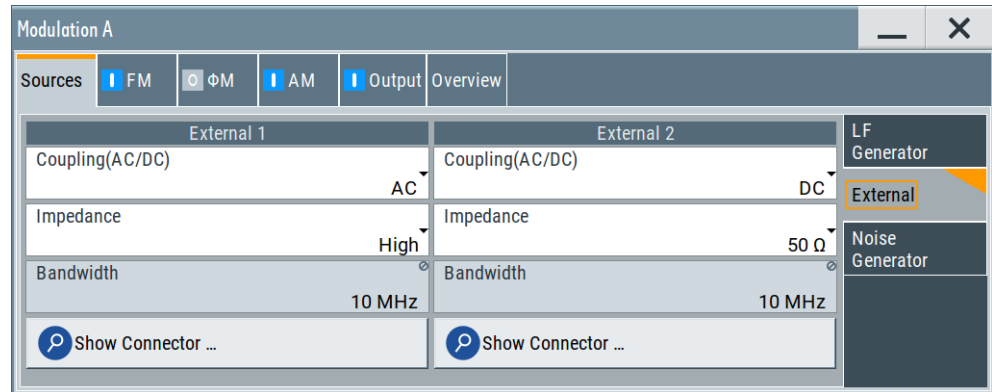

The "External" settings section contains all parameters required to configure the signal of an externally supplied LF signal.

Settings

Coupling (AC/DC)	579
Impedance	579
Bandwidth	579
Show Connector	579

Coupling (AC/DC)

Selects the coupling mode (AC or DC) for the external signal.

Note: You can set the coupling of the external modulation signal for AM, FM and ΦM separately.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:COUPling<ch>](#) on page 1217

Impedance

Sets the impedance for the externally supplied signal.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:IMPedance<ch>](#) on page 1217

Bandwidth

Displays the maximum bandwidth of the external LF signal.

Remote command:

[\[:SOURce\]:LFOutput<ch>:BANDwidth?](#) on page 1238

**Show Connector**


Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Source > noise generator settings

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > Noise Generator".

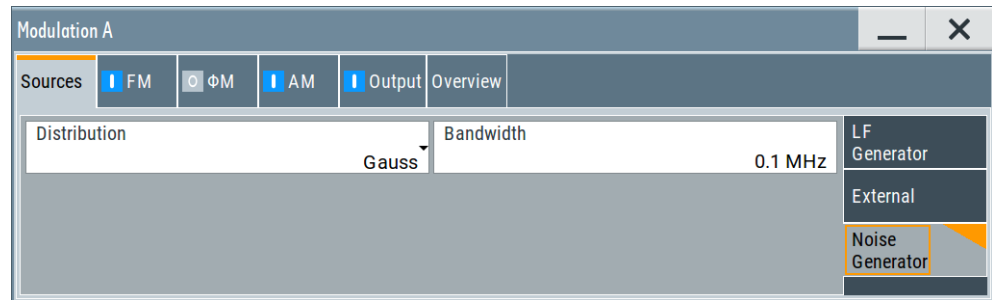

The "Noise Generator" settings contain all parameters to configure the signal of the internal noise generator.

Settings

Distribution	580
Bandwidth	580

Distribution

Selects the distribution of the noise power density.

"Gauss" Generates the noise power according to a Gaussian distribution.

"Equal" Generates an evenly distributed noise.

Remote command:

`[:SOURce<hw>] :NOISe:DISTriBution` on page 1264

Bandwidth

Sets the noise bandwidth as distinct value.

You can set the bandwidth between 100 kHz and 10 MHz in 100 KHz steps.

The noise signal is generated within the set frequency bandwidth. The noise level in the frequency band is defined by "Noise Level (System Bandwidth)".

Remote command:

`[:SOURce<hw>] :NOISe:BANDwidth|BWIDth` on page 1263

8.11.4.6 Output settings

Access:


- Select "RF > Output".

In the "Output" tab, you can configure the signal at the LF output, determine the output voltage or add a DC offset.

LF output settings

Access:

- Select "RF > Output > LF Output".

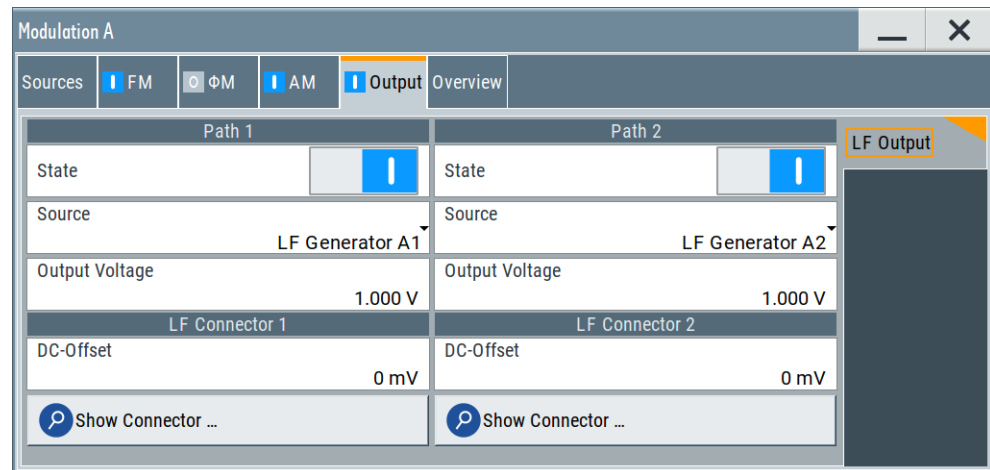

Settings:

State.....	581
Source.....	581
Output Voltage.....	582
DC-Offset.....	582
Show Connector.....	582

State

Activates the output of the LF signal.

Remote command:

[:SOURce] :LFOutput<ch> [:STATe] on page 1240

Source

Determines the LF signal to be synchronized of the corresponding path.

"LF Generator A1/2, B1/2"

Selects one of internally generated LF signals.

"AM A/B"

Selects the AM signal.

"FM/ΦM A/B"

Selects the signal also used by the frequency or phase modulations.

"Noise Generator A/B"

Selects the internally generated noise signal.

"External 1/2"

Selects an externally supplied LF signal

Remote command:

[:SOURce] :LFOutput<ch> :SOURce on page 1241

Output Voltage

Sets the peak to peak voltage of the selected LF output source.

This value, e.g. +1 V to -1 V refers to 50 Ohm at the RF output with high termination impedance at the LF output.

Remote command:

[\[:SOURce\]:LFOutput<ch>:VOLTage](#) on page 1241

DC-Offset

Adds a DC offset to the LF output signal.

Remote command:

[\[:SOURce\]:LFOutput<ch>:OFFSet](#) on page 1240

**Show Connector**


Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Noise level settings

Access:

1. Select "RF > Output > LF Output".
2. Set "Source > Noise Generator".
3. Select "Output > Noise Level".

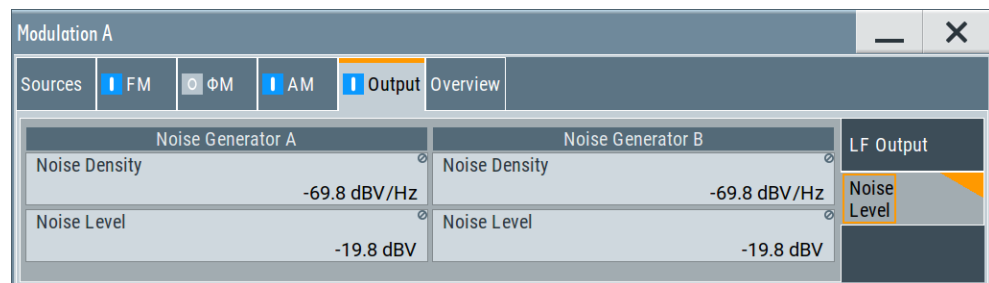**Settings:**

Noise Density	582
Noise Level	582

Noise Density

Indicates the level of the noise signal for a bandwidth of 1 Hz (relative).

Remote command:

[\[:SOURce<hw>\]:NOISe:LEVel<ch>:RELative?](#) on page 1264

Noise Level

Indicates the level of the noise signal per Hz within the total bandwidth (absolute).


Remote command:

`[:SOURce<hw>] :NOISe:LEVel<ch> [:ABSolute] ?` on page 1264

8.11.4.7 Overview

Access:

- Select "RF" > "Analog Modulation" > "Modulations > Overview".

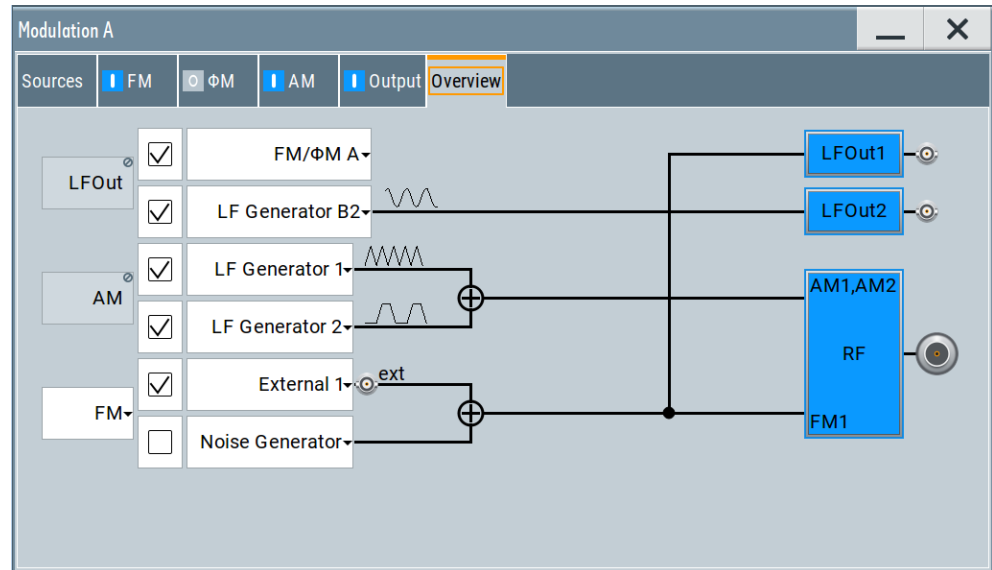

Blue color = Active output signal (AM and FM)

Gray color = Inactive output signal (LF Out)

Miniature graph = Indicates an active source

Connectors = Indicate a connector (e.g. external signal) is involved in the path of the signal

The "Overview" tab is an interactive diagram that indicates the active modulations and the signal being output.

Here you can:

- Select the output signal ("LF Out") per path; the setting acts as the parameter "LF Output Source"
- Select the source for each modulation and modulation path; the setting acts as the parameter "Source"
- Activate modulation per path; the setting acts as the parameter "State"
To generate a two-tone signal composed form the two paths of the same modulation type, activate both paths.
- Activate "FM" or "PhiM"; the two modulations are mutually exclusive.

See:

- [Chapter 8.11.2.3, "Assigning the LF signal to the output"](#), on page 555 for details
- [Chapter 8.11.4, "Modulation settings"](#), on page 563 for description of the related settings

LFOut

Label for the LF output settings in the overview.

Remote command:

n.a.

AM

Label for the amplitude modulation settings in the overview.

Remote command:

n.a.

FM/PhiM

Selects the modulation signal to be assigned to the output. You can assign the frequency or phase modulated signal.

Remote command:

n.a.

8.11.5 How to generate a modulated signal

8.11.5.1 How to generate an amplitude modulated signal

The following examples use the internal LF generator.

To set the frequency and level of the RF signal

1. Press [PRESET] to start from a defined state.
2. In the status bar, set "Frequency = 2 GHz".
3. Set "Level = -20 dBm".

To configure the modulation signal (LF generator)

1. Select "RF" > "Analog Modulation" > "Modulation Source".
2. In the "Sources" tab, select "Shape > Sine".
3. Set "Frequency = 20 kHz".

The period is calculated automatically and indicates "Period = 50.00 µs".

To configure the amplitude modulation settings

1. In "Modulation" dialog, select the "AM" tab.
2. Set "Source = LF Generator1"
3. Set "Depth = 30%"
4. Select "State = I" to activate the modulation.
5. Set "RF > On" to enable signal output.

8.11.5.2 How to generate a pulse modulated signal

The following example uses the internal pulse generator.

To set the frequency and level of the RF signal

1. Press [PRESET].
2. In the status bar, set "Frequency = 4 GHz".
3. Set "Level = -25 dBm".

To configure the pulse generator

1. Select "RF" > "Analog Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Double".
3. Set "Pulse Period = 10 us".
4. Set "Pulse Width = 2 us".
5. Set "Double Pulse Width = 1.2 us".
6. Set "Double Pulse Delay = 4.5 us".
7. Activate "Pulse Output State".
8. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

To enable pulse modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I" to activate pulse modulation.
3. Set "RF > On" to enable signal output.

8.12 Improving level performance

To adjust the RF output signal to specific needs in your application optimally, the R&S SMW provides different functions:

- **Attenuator**

The R&S SMW is equipped with a step attenuator that enables you to vary the amplitude of the RF signal in a wide range. It is characterized by low VSWR (voltage standing wave ratio) over the full level and frequency range, and provides highest level accuracy and noise suppression.

See [Chapter 8.12.1, "Attenuator"](#), on page 586.

- **Automatic Level Control (ALC)**

The automatic level control system ensures stable RF signals with highest absolute level accuracy over temperature and time.

See [Chapter 8.12.2, "ALC - automatic level control"](#), on page 589.

- **User correction (UCOR)**

The user correction function allows you to compensate frequency responses of external setups (e.g. losses of cables) and achieve a stable input signal over frequency directly at the DUT.

See [Chapter 8.12.3, "User correction"](#), on page 593.

- **Power sensors**

The R&S NRP power sensors support RF signal level optimization by determining the attenuation characteristics of downstream devices or cables, or by monitoring the RF signal level at the output directly. The R&S SMW uses the readings of a sensor for compensation of losses and thus improving the accuracy of the RF signal level.

You can configure the measurement parameters of a power sensor directly in the R&S SMW and monitor its readings, including calibration.

See:

- [Chapter 8.12.4, "Using power sensors"](#), on page 605
- [Chapter 8.12.5, "To calibrate the power level with an R&S NRP power sensor"](#), on page 623
- [Chapter 8.12.4.2, "NRP power viewer"](#), on page 608
- [Chapter 8.12.4.3, "NRP power control"](#), on page 610
- [Chapter 8.12.4.4, "NRP sensor configuration"](#), on page 616
- [Chapter 8.12.4.5, "NRP sensor mapping"](#), on page 621

8.12.1 Attenuator

About the attenuator

The step attenuator is either an electronic or mechanical device. Instruments with frequency options up to 13 GHz use an electronic step attenuator, providing fast and wear free level settings. Instruments capable to generate higher frequency signals use mechanical step attenuators.

According to the requirements of your application, you can select different attenuator characteristics.

The following are examples of test requirements and the corresponding configuration:

- **Automatic configuration**
Select standard operation mode ("Auto"), in which the generator adjusts the attenuation of the RF output signal automatically.
- **DUT tests under low signal to noise conditions**
Low output power is suitable to test the behavior of a DUT under low signal to noise conditions.
- **Uninterrupted level settings with constant VSWR**
A fix attenuation value is required for obtaining uninterrupted level settings with constant VSWR.
The configuration "RF Off Mode > Unchanged" ensures that constant VSWR is maintained if you turn the signal off and on again.

- Highest level accuracy
Enter the target level value in "Fixed" mode and activate ALC (automatic level control).
In this operating mode, the generator adjusts the output level whenever the frequency or level setting changes.
- Noise sensitive applications
The parameter "RF OFF Mode > Full Attenuation" sets maximum attenuation and thus suppresses noise when you turn off the RF signal.



Interactions and characteristics

- The spectral purity of the RF output signal decreases with high attenuation.
- Fixed mode is effective when automatic level control is activated ([ALC State = On](#)).
- The setting of the [RF OFF Mode > Full Attenuation](#) has priority over the RF level [Mode > Fixed or Manual](#), regardless of the selected settings characteristics.

8.12.1.1 Attenuator settings

Access:

- Select "RF" > "RF Level" > "Level > Attenuator".

In the "Attenuator" dialog, you can select the operating mode of the step attenuator, the instrument is equipped with.

The remote commands required to define these settings are described in [Chapter 14.16, "OUTPut subsystem"](#), on page 958 and [Chapter 14.19.17, "SOURce:POWer subsystem"](#), on page 1272.

Settings

Mode	588
Attenuation	588
Attenuation Active	588
Level Range	588
RF OFF Mode	588

Mode

Determines the operating mode of the step attenuator.

Note: [RF OFF Mode > Full Attenuation](#) has higher priority than "Fixed" or "Manual".

"Auto"	Adjusts the attenuator settings automatically.
"Fixed"	Fixes the attenuator and amplifier paths for the current RF level and provides signal output with constant output VSWR. The resulting level range is indicated under "Level Range" on page 493. This mode is coupled with ALC, and therefore only effective when ALC is enabled.
"Manual"	Allows you to set the Attenuation . The user-specified nominal attenuation is useful for instruments equipped with a mechanical step attenuator. Similar to "Fixed" mode, relays and amplifier stages keep the specified value, providing interruption-free signal output level.

Remote command:

[:OUTPut<hw>:AMODE](#) on page 960

Attenuation

Sets the nominal attenuation of the RF signal in [Mode > Manual](#).

Remote command:

[\[:SOURce<hw>\]:POWER:ATTenuation](#) on page 1277

Attenuation Active

Displays the current level attenuation value in [Mode > Auto | Fixed](#).

Remote command:

[\[:SOURce<hw>\]:POWER:AATTenuation?](#) on page 1276

Level Range

Shows the interruption-free range of the level that you can use in the selected mode.

Remote command:

[:OUTPut<hw>:AFIXed:RANGe:LOWer?](#) on page 961

[:OUTPut<hw>:AFIXed:RANGe:UPPer?](#) on page 961

RF OFF Mode

Determines the state of the step attenuator, when the RF signal is switched off.

The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

"Unchanged"	Freezes the setting of the step attenuator. Use this mode if a constant VSWR (Voltage Standing Wave Ratio) is required.
"Full Attenuation"	Switches to the maximum attenuation. Use this mode for applications that require a high level of noise suppression. Note: "Full Attenuation" has higher priority than the RF level modes Mode > Fixed or Manual .

Remote command:

`[:SOURce<hw>] :POWer:ATTenuation:RFOFF:MODE` on page 1278

8.12.1.2 Reverse power protection

The R&S SMW is equipped with a reverse power protection circuit.

The reverse power protection is tripped when the power of signals reflected from the load or external signals applied to the RF output get too high. A relay opens and interrupts the internal connection to the RF output. This condition is indicated in the status bar by the "Overload" status message.

Overload

If an "Overload" status message is indicated in the status bar, perform the following:

- Remove the cause for the overload
- Press the [RF ON/OFF] key to reset the overload protection

The RF input is activated when the overload protection is reset.

Remote command:

`:OUTPut<hw>:PROTection:TRIPped?` on page 962

`:OUTPut<hw>:PROTection:CLEar` on page 961

`:OUTPut<hw>:PROTection:STATe` on page 961

8.12.2 ALC - automatic level control

The R&S SMW is equipped with an automatic level control (ALC) unit to obtain best RF level accuracy.

About ALC

ALC is an adaptive control system to stabilize the RF output level. It continuously monitors the current level and adjusts it to keep a steady state over temperature and time.

ALC is active in almost all applications by default. It is not active for frequencies below 200 kHz and if the optimization mode (IQ modulation) is different than "FAST".

Also note that ALC can detect incorrect values in **multi-transmitter** test setups. If multiple generators are coupled, reverse power can affect the ALC readings, which leads to an incorrect RF output power.

ALC states and their effects

The following description basically explains the ALC states and their principle of operation:

- "Auto"
Adjusts the output level to the operating conditions automatically. ALC is active in almost all operating modes.
- "On"
Activates the internal level control permanently, regardless of the operating conditions.

If you also set "Attenuator Mode > Fixed", the instrument recalibrates every level and frequency setting, resulting in high-level accuracy.

Note: This mode is not useful for pulse modulation with narrow pulses and low repetition rates, since the automatic level control cannot settle in time. Set ALC "Table & On" instead.

- "Off (Sample & Hold)"
Deactivates ALC, but still allows you to maintain a constant output level.
The R&S SMW switches briefly in the CW mode and enables ALC to adjust the level to the set target value. The instrument freezes this setting, turns off ALC again, and switches back to the operating mode.
- "Sample & On"
Initially the level control circuit uses a sample process to settle to the current level. When settled, it continues level control with highest level accuracy.
- "Off (Table)"
Deactivates internal level control loop. The instrument calculates every level setting using the attenuation values from the internal (ALC) table. Level attenuation between two table values is done with linear interpolation. This mode enables you to perform a fast and strictly monotonic, but not quite as precise level adjustment. This mode achieves fastest setting times, since the output signal is not interrupted by the measurement, and also not disturbed.
- "Table & On"
Starts with the associated value of the internal level table and then activates the automatic level control. This mode achieves maximum level accuracy and fast setting times.

The R&S SMW displays the level control setting as a status message in the info line.

How to: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

8.12.2.1 Required options


The equipment layout for automatic level control includes:

- Option frequency (e.g. R&S SMW-B1003/-B2003)

8.12.2.2 ALC settings

Access:

- ▶ Select "RF" > "RF Level" > "Automatic Level Control".

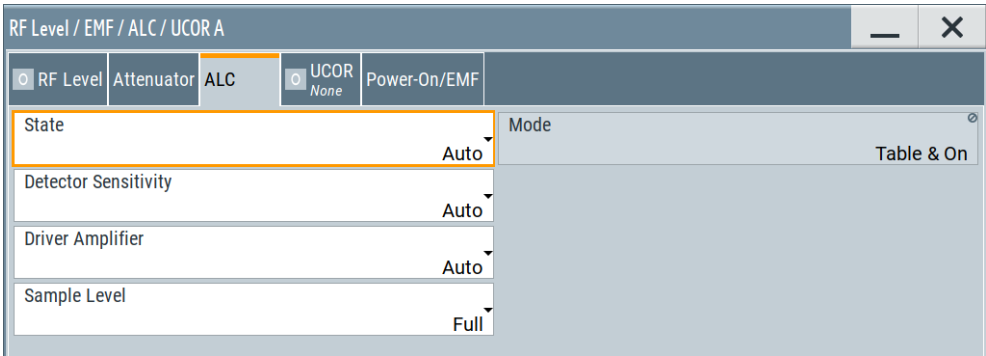

In the "ALC" dialog, you can configure the settings for the automatic level control of the RF signal to achieve optimal accuracy.

The remote commands required to define these settings are described in [Chapter 14.19.17, "SOURCE:POWER subsystem"](#), on page 1272.

How to: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

Settings

State.....	591
Mode.....	592
Detector Sensitivity.....	592
Driver Amplifier.....	592
Sample Level.....	593

State

Selects the internal level control mode.

"Auto"	Selects the most appropriate ALC mode automatically.
"On"	Activates ALC permanently.
"Off (Sample & Hold)"	Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.
"Sample & On"	Enables automatic level control after a short sample pulse.
"Off (Table)"	Controls the level using the attenuation values of the internal ALC table.

"Table & On"

Starts with the attenuation setting from the internal ALC table and continues with automatic level control.

For further details on the individual settings, an overview of the functionality and details on what is to be considered, see ["ALC states and their effects"](#) on page 589.

Note:

The ALC modes "Off (Sample & Hold)" and "Sample & On" use a short sample pulse to set the level control. To adjust the level of this sample pulse, see ["Sample Level"](#) on page 593 in the ALC dialog. It does not consider any signal headroom, e.g. applied to a user defined ARB waveform.

How to: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

Remote command:

[\[:SOURce<hw>\]:POWer:ALC\[:STATe\]](#) on page 1274

Mode

In [ALC > State AUTO](#), the R&S SMW indicates the currently active ALC mode that is set automatically.

Remote command:

[\[:SOURce<hw>\]:POWer:ALC:MODE?](#) on page 1274

Detector Sensitivity

Determines the path of the internal level detector.

The level detector of the ALC has multiple paths distinguished by their sensitivity.

"Auto"	Selects the detector path automatically, according to the given level. This mode is the recommended operation mode.
"Low"	Selects the detector path with low sensitivity. This setting is intended for signals with high internal electronic levels.
"Med"	Selects the path with medium sensitivity. This setting corresponds to normal mode. It is intended for signals with medium internal electronic levels.
"High"	Selects the detector path with high sensitivity, intended for signals with low internal electronic levels.
"Fix"	Fixes the last set sensitivity setting.

Remote command:

[\[:SOURce<hw>\]:POWer:ALC:DSensitivity](#) on page 1276

Driver Amplifier

Selects the switching state of the driver amplifier, that means the switchable amplifier or step attenuator at the output.

"Auto"	Switches the step attenuator automatically.
"On/Off"	The driver amplifier is switched on, or off respectively.

"On (maximum Gain)"

The driver amplifier is switched on.

The R&S SMW supplies the maximum level at the output within the frequency range 6 GHz to 10 GHz.

Note: In this mode, the harmonics increase.

"Fix"

Fixes the last setting.

The **Readjust** button switches the driver amplifier state first to auto-automatic, calculates all level settings and then resets to fix.

Remote command:

`[:SOURce<hw>] :POWer:ALC:DAMPlifier` on page 1275

Sample Level

Determines the level at the output of the instrument during the sample process.

How to: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

"Full"

Attenuates the sample level by the crest factor of the used I/Q modulation signal or 9 dB, whichever is lower. Additionally, an internal headroom of the signal is considered.

"Attenuated"

Sets an additional attenuation of 40 dB.

"Minimum"

Sets the attenuation to maximum.

Remote command:

`[:SOURce<hw>] :POWer:ALC:SLEVel` on page 1276

8.12.2.3 How to enable the ALC

1. Select "RF" > "RF Level" > "Automatic Level Control".
2. **NOTICE!** Risk of DUT damage due to high input power. The ALC modes "State" > "Off (Sample & Hold)" and "State" > "Sample & On" use a short sample pulse to set the level control. With the setting "Sample Level" > "Full", this sample pulse results in a CW RF pulse. Usually, the RMS value of this CW pulse equals the configured RMS level value of the signal, but it can also rise up to the PEP level.
To protect the DUT from damage due to high input power, use the following setting combinations for the sampling states "Off (Sample & Hold)" or "Sample & On":
 - Set "Sample Level" > "Attenuated" or
 - Set "Sample Level" > "Minimum".
3. Set "RF" > "State" > "On".

8.12.3 User correction

The R&S SMW supports a correction function to compensate external losses, caused, for example, by the RF cable, to achieve a precise target input level at the DUT.

The signal at the RF outputs of the R&S SMW is flat. However, the DUT is usually not connected directly to the outputs of the instrument but rather via connecting cables.

Components like cables, power combiners, switches or mixers can affect the signal flatness at the DUT input.

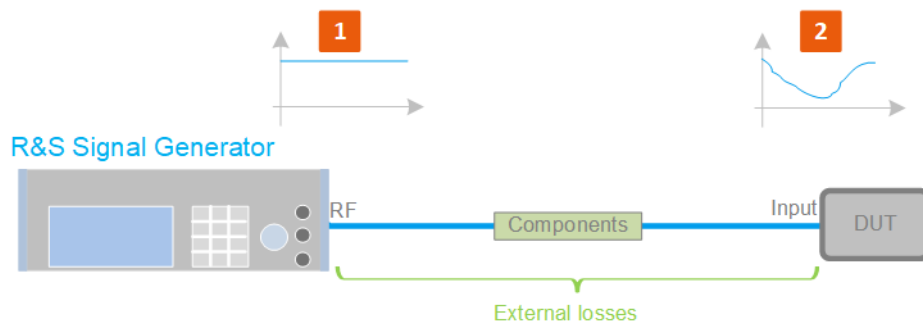


Figure 8-20: Effect of external losses on the signal flatness at the DUT input

- DUT = Device under test
 Components = Designation of all components between the measurement equipment and the DUT, e.g. cables
 1 = Flat signal at the outputs of the R&S SMW
 2 = Signal received at the DUT, incl. the external losses

About UCOR

User correction (UCOR) is a method that determines the external level loss over a frequency range in advance, see [Figure 8-21](#).

The difference between the generator output level and the level at the DUT determines the correction value at the respective frequency. Alternatively, the attenuation characteristics over a certain frequency range of, for example, RF cables are also specified in the associated data sheet.

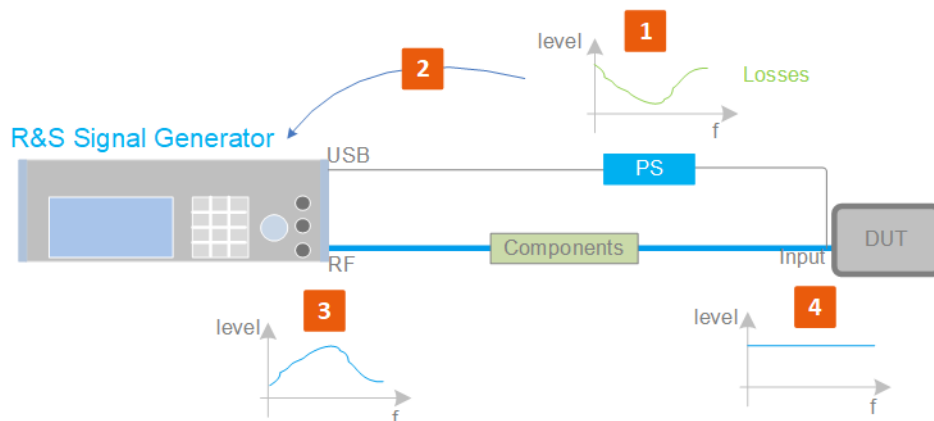


Figure 8-21: Understanding the principle of user correction

- DUT = Device under test
 Components = Designation of all components between the measurement equipment and the DUT, e.g. cables
 PS = Power sensor, e.g. R&S NRP, connected at the DUT's input and the USB connector of the R&S SMW
 1 = Power sensor measures the level over a frequency range, where the collected values correspond to the losses caused by the components between the R&S SMW and the DUT

- 2 = Obtain the correction data by inverting the collected data; load the correction parameters in the R&S SMW
- 3 = In the R&S SMW, the RF signal is pre-processed with the correction values so that the signal at the outputs is the inverted version of the external losses
- 4 = Received at the DUT input, the pre-processed signal if flat

With active **UCOR**, the generator adds the correction value internally and thus increases the output level by exactly the amount of the loss between its output and the DUT. For frequencies which are not contained in the list, the level correction is calculated by interpolation of the closest correction values.

Possible ways for configuring the user correction values

You can configure correction values in the following ways:

- **Internally**

- Use the built-in table editor in the "UCOR > Edit User Correction Data" dialog. Once defined, user correction values can be saved in a file. Files with correction data can be exported, for example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- Using the corresponding remote-control commands. Note that you have to create a user correction file first.

- **Externally**

Create a file with correction values as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

UCOR file format

Files containing correction data are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is *.ucor.

The file contains a list of correction values, one row per frequency and correction value pair; a new line indicator separates the correction values.

For file handling, use the standard functions in the "File Manager", see [Chapter 11.8, "Using the file manager"](#), on page 720.

Collecting correction data

To fill the frequency and power values in the correction table, use one of the following options:

- **Manually**, row by row.
- Fill the table **automatically** with linearly interpolated values, calculated from value range and step size.
- Acquire the real frequency response characteristics of the used component with the **R&S NRP power sensor**, see [Understanding the principle of user correction](#).

Using a power sensor for frequency response measurements

Consider the following when using R&S NRP power sensors to measure the correction values:

- Measure the level directly at the input of the DUT.
- Use the internal correction functions of an R&S NRP power sensor to increase the measurement accuracy.
- Use S-parameter to consider the impact of any two-port device like an adapter between the signal generator and the sensor input.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note [1GP141](#).



Interactions and characteristics

Activated user correction is effective in all operating modes.

However, user correction cannot be activated simultaneously with absolute level compensation based on user-defined frequency response values. These functions exclude each other; only one of them can be used at a time.

See user manual R&S SMW-K544 User-Defined Frequency Response Correction.

The RF output level (Level_{RF}) is the sum of the level value and the correction for the particular frequency:

$$\text{Level}_{\text{RF}} = \text{"Status bar > Level"} + \text{"UCOR"}$$


Activated user correction is indicated by the status indication "UCOR" in the status bar.

8.12.3.1 User correction settings

Access:

1. Select "RF" > "RF Level" > "User Correction".
2. If you already have created a file with user correction data:
 - a) Select "UCOR Data" > navigate to the file "*.uco" > "Select".
 - b) Proceed with [step 4](#).
3. If you need to create a file:
 - a) Select "UCOR Data" > "New".
 - b) Enter the filename `UCOR_Data` and confirm with "Ok".
 - c) Choose the file and confirm with "Select".
 - d) Select "Edit UCOR Data".
 - e) To fill the user correction data table, proceed as described in [Chapter 8.10.7, "List editor"](#), on page 547.
4. Select "UCOR" > "State" > "On".

5. Select block diagram > RF A > "On".

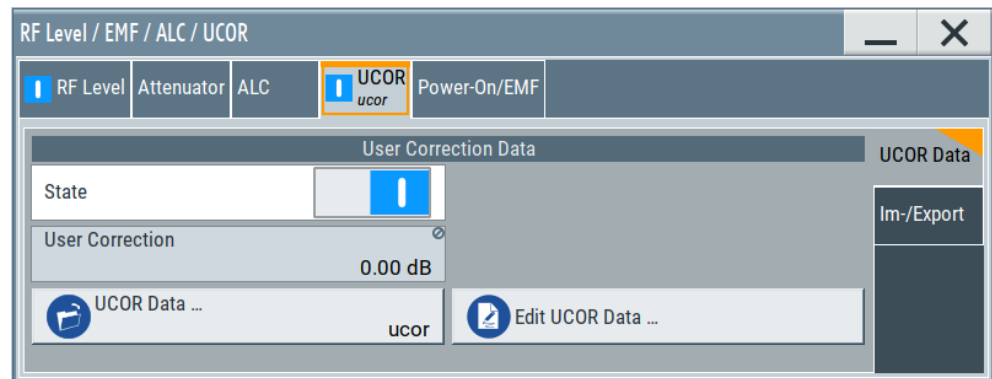

The "UCOR" dialog contains all settings for creating and handling files with user-defined level correction values.

The remote commands required to define these settings are described in [Chapter 14.19.5, "SOURCE:CORRection subsystem"](#), on page 1195.

Settings

State.....	597
User Correction.....	597
UCOR Data	597
Edit UCOR Data	598
UCOR Info	598

State

Activates user correction.

The R&S SMW displays the status icon "Lev Ucor" in the status bar.

User correction cannot be activated simultaneously with absolute level compensation based on user-defined frequency response values. These functions exclude each other; you can use only one of them at a time.

See user manual R&S SMW-K544 User-Defined Frequency Response Correction.

Remote command:

`[:SOURCE<hw>] :CORRection[:STATe]` on page 1200

User Correction

Indicates the corrected level value for a specific frequency point.

Remote command:

`[:SOURCE<hw>] :CORRection:VALue?` on page 1199

UCOR Data ...

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Files with user correction values are files with predefined file extension *.uco. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file *.uco > Select"
- Use the general editor function to create internally new file or to edit an existing one.
- Use the standard file manager function to load externally created files to the instrument.

Remote command:

`[:SOURce] :CORRection:CSET:CATalog?` on page 1200

`[:SOURce<hw>] :CORRection:CSET[:SElect]` on page 1199

`[:SOURce] :CORRection:CSET:DElete` on page 1200

Edit UCOR Data ...

Opens the build-in table editor to define a new correction table or edit an existing one.

See also:

- [Chapter 8.10.7, "List editor"](#), on page 547
- ["Fill..."](#) on page 549
- [Chapter 8.12.3.3, "Fill with sensor"](#), on page 602

UCOR Info ...

Opens a window information on the user correction file.

The window shows the metadata of the file and the output level parameters that are relevant for user correction.

Remote command:

n.a.

8.12.3.2 List editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- "RF" > "Sweep/List" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

Edit List Mode Data: rf_list			
	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 14.19.12, "SOURce:LIST subsystem"](#), on page 1248.

Access to "Edit User Correction Data":

- "RF" > "RF Level" > "User Correction" > "Edit User Cor. Data"

Edit User Correction Data : ucor		
	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 14.19.5, "SOURce:CORRection subsystem"](#), on page 1195.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mdoe Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

Settings

Edit List Mode Data.....	600
Data handling keys.....	600
L Go To.....	600
L Edit.....	601
L Fill with Sensor.....	601
L Save As/Save.....	601
Fill.....	601

Edit List Mode Data

Table with values for list or user correction processing.

Note: Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency /Hz"

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 1253

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)
on page 1197

"Power /dBm" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 1256

"Correction Value /dBm" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 1198

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELl:LIST](#) on page 1253

Data handling keys

Standard functions for file and data handling.



Go To ← Data handling keys

Selects a row for editing.

Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see "Fill..." on page 549.

Fill with Sensor ← Data handling keys

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 8.12.3.3, "Fill with sensor"](#), on page 602

Save As/Save ← Data handling keys

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

Fill...

Provides parameters for filling a table automatically with user-defined values.

From	0	Range	4
Column To Fill	Frequency /Hz		
Start Value	2.000 000 000 000 GHz	End Value	2.600 000 000 000 GHz
Increment Value	200.000 000 000 MHz		
<input checked="" type="checkbox"/> Fill			

To fill the table, select "Fill".

Note: Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

8.12.3.3 Fill with sensor

Access:

1. Select "RF" > "RF Level" > "User Correction".
2. Select "User Cor. Data > navigate to the file *.ucor > Select"
3. Select "Edit User Cor. Data > Fill With Sensor..."

Fill User Correction Data with Sensor

List To Fill: ucor

Sensor: 3: NRP33-SN-V 999006

Include Zeroing: ☒

Execute

Generator Settings used for Measurement

Modulation	Off (CW)	Amplitude	-30.00 dBm
Offset	0.00 dB	UCOR Reference Level	-30.00 dBm

This dialog contains parameters for filling a table automatically with sensor readings.



To fill the table, select "Execute".

For information on power sensors and how to use them, see [Chapter 8.12.5, "To calibrate the power level with an R&S NRP power sensor"](#), on page 623.

Settings:

Fill User Correction Data with Sensor	602
Generator Settings used for Measurement	603

Fill User Correction Data with Sensor

- "Sensor"
Displays connected sensors for selection.
- "List To Fill"
Indicates the used list.
- "Config"

Leads you to the sensor configuration dialog to set the parameters for the selected power sensor.

- "Include Zeroing"

Performs a zeroing procedure before acquiring the user correction data to improve precision.

No signal is applied to the sensor during zeroing. RF output is temporarily switched off during that time.

When unchecked, the zeroing procedure is skipped. However, the RF signal level can be blanked shortly. This setting is useful if blanking of RF is undesirable or the absence of power at the sensor cannot be guaranteed.

- "Execute"

The "Execute" button is only enabled if a sensor is detected and the user correction list contains at least one frequency value.

Remote command:

`[:SOURce<hw>] :CORRection:ZERoing:STATe` on page 1199

`[:SOURce<hw>] :CORRection:CSET:DATA [:SENSor<ch>] [:POWER] :SONCe` on page 1198

Generator Settings used for Measurement

Displays the settings relevant for the measurement.

"Modulation" Indicates the modulation state

"Amplitude" Displays the currently set level.

Remote command:

`[:SOURce<hw>] :POWER:POWER` on page 1281

"Offset" Displays the level offset, set with "Offset" on page 493.

Remote command:

`[:SOURce<hw>] :POWER [:LEVel] [:IMMediate] :OFFSet` on page 1285

"UCOR Reference Level" Displays the reference value for user correction.

The user correction reference level is the set [Amplitude](#) plus the set [Offset](#).

Remote command:

`[:SOURce<hw>] :POWER [:LEVel] [:IMMediate] :REFLevel` on page 1287

8.12.3.4 Import/export list files

Access:

1. Select one of the following:

- "RF" > "Sweep/List" > "List mode".
- "RF" > "RF Level" > "User Correction".

2. Select "Import/Export".

Figure 8-22: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats *.txt (ASCII), or *.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

Settings

Mode.....	604
ASCII File Settings.....	604
Select (ASCII) Source/Select (ASCII) Destination.....	605
Select Source/Select ASCII Destination.....	605
Import / Export.....	605

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[:SOURce<hw>] :LIST:DEXChange:MODE on page 1262

[:SOURce<hw>] :CORRection:DEXChange:MODE on page 1202

ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension" Selects *.csv or *.txt format.

"Decimal Point" Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.

"Column Separator" Sets the separator between the columns in an ASCII table.
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[:SOURce<hw>] :LIST:DEXChange:AFILe:EXTension on page 1261

[:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:DECimal on page 1261

[:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:COLumn on page 1261

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:EXTeNsion](#) on page 1201

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:DECimal](#)
on page 1202

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:COLumn](#)
on page 1202

Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:CATalog?](#) on page 1260

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SElect](#) on page 1261

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:CATalog?](#) on page 1201

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SElect](#) on page 1201

Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:SElect](#) on page 1262

[\[:SOURce<hw>\]:CORRection:DEXChange:SElect](#) on page 1203

Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:EXECute](#) on page 1260

[\[:SOURce<hw>\]:CORRection:DEXChange:EXECute](#) on page 1202

8.12.4 Using power sensors

The R&S SMW works with any of the R&S NRP power sensors and thus supports various application tasks. Using power sensors, you can for example determine attenuation characteristics of downstream equipment or cables. You can use the measured values to compensate the losses with internal control functions or with an external control circuit in real time.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note [1GP141](#).

R&S NRP power sensors are highly accurate standalone measuring devices, suitable for a wide range of applications. The power sensors communicate directly with the signal generator, calculate the average or peak power internally, include S-parameter correction and return the measurement results to the generator.

The R&S SMW supports up to four power sensors, allowing up to four power measurements simultaneously.



Check the firmware version of the R&S NRP sensors regularly. Update the firmware, if necessary.

For updates, see the Rohde & Schwarz website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters".

For more information on working with power sensors, see the following topics:

- [Chapter 8.12.4.1, "Connecting R&S NRP power sensors to the R&S SMW"](#), on page 606
Overview on the supported connectors, connection options and the required accessories.
- [Chapter 8.12.4.2, "NRP power viewer"](#), on page 608
A function for measuring and monitoring the RF output power or a user-defined signal source.
- [Chapter 8.12.4.3, "NRP power control"](#), on page 610
Controls a downstream closed loop power control circuit, to compensate frequency response characteristics.
- [Chapter 8.12.4.4, "NRP sensor configuration"](#), on page 616
Parameter settings of the specific R&S NRP power sensor.
- [Chapter 8.12.4.5, "NRP sensor mapping"](#), on page 621
Shows all R&S NRP sensors connected to the instrument, or in the LAN.

8.12.4.1 Connecting R&S NRP power sensors to the R&S SMW

R&S NRP sensors are connected to the R&S SMW in the following ways:

- Connection to the SENSOR connector
 - R&S NRP-ZK6 (six-pole interface cable) for R&S NRPxx power sensors
 - No additional cable for R&S NRP-Zxx power sensors (cable is fixed on the sensor)
- Connection to the USB connector
Requires the following cables, depending on the used sensor type:
 - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
 - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via R&S NRP-Z5 sensor hub
The R&S NRP-Z5 USB sensor hub (high-speed USB 2.0) can host up to 4 R&S NRP sensors.

Requires additional cables, depending on the used output connector of the hub.
Choose one of the following:

- Short extension cable R&S NRP-Z2 for connection to the sensor connector.
This six-pole connection provides the external trigger capability.
- Standard USB cable (USB type A to USB type B) to any USB type A connector of the R&S SMW. This connection does not support external triggering.
- Connection via USB hub with external power supply unit
Requires the following cables, depending on the used sensor type:
 - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
 - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via LAN for R&S NRPxxxSN/xxxTN/xxxAN power sensors
Using the Ethernet interface requires PoE (Power over Ethernet) to provide the electrical power.
To establish the connection, you can use:
 - A PoE Ethernet switch, e.g. R&S NRP-ZAP1 and an RJ-45 Ethernet cable.
 - A PoE injector and an RJ-45 Ethernet cable.

For details, see the description R&S®NRP Power Sensors getting started.

Detection and mapping

The R&S SMW either detects a R&S NRP power sensor automatically or you can scan for available power sensors manually. The "NRP Sensor Mapping" dialog lists all detected R&S NRP power sensors, see [Chapter 8.12.4.5, "NRP sensor mapping"](#), on page 621. The dialog enables you to add, remove and map the sensors manually.

Depending on the connection interface, the R&S SMW detects and maps connected R&S NRP power sensors differently:

- SENSOR socket
Detects a sensor automatically and maps it with index "1" by default.
If no sensor is connected to this socket, index "1" remains unassigned.
- USB interface
Detects a sensor automatically and maps it with index "2" to index "4" according to the sequence of connection.
- LAN interface
To detect sensors that are connected in the LAN, the instrument provides a scan function. When you start the function, scan searches in the LAN for available R&S NRP power sensors and adds all detected sensors to list. Assigning a mapping index activates the sensor for the measurement.



On connection, the R&S SMW immediately starts the measurement of the R&S NRP power sensor. If you preset the instrument ([PRESET] key or *RST), the R&S SMW stops the measurement. The connection and the mapping of the power sensors remain.

8.12.4.2 NRP power viewer

The R&S SMW features the power viewer function for measuring or monitoring signals with R&S NRP power sensors.

About

The R&S SMW can perform up to four power measurements simultaneously.

The measured signals can be the RF output power or other selected signal sources.

Depending on the signal characteristic (CW, AM, pulsed, etc.) or the parameter to be measured (average, peak, etc.) a suitable R&S power sensor must be used.

About the measuring principle, averaging filter, filter length, and achieving stable results

A sensor measures the average or peak RF power of the source continuously. The measurement results are displayed in the "NRP Power Viewer" dialog.

The power viewer function uses **averaging filters** for getting a stable readout.

Measurement results could be interfered, for instance, by too much noise in your setup, by a bad suppression of harmonics or non-harmonics or when you reach the sensitivity level of your power sensor.

Measurements are continuously repeated in a predefined time window. The measurement result is obtained by averaging the measured values for the last $2N$ time windows. This approach is referred as a **two-step averaging process**.

The factor of 2 in the formula arises because the output signals from the microwave detector are chopped at the same rate as the time windows to suppress low-frequency noise. An independent measured value can only be obtained from two consecutive values.

The variable N in the formula indicates the **filter length**. The filter length then directly influences the measurement time. The filter length can be selected automatically or it can be manually set to a fixed value.

Depending on the R&S NRP power sensor type, the manual setting of the filter length varies in resolution:

- Resolution = 1 for the R&S NRPxx power sensor family
- Resolution = 2^n for R&S NRP-Zxx power sensors, with $n = 1$ to 16

Follow the following general recommendation to find out the **optimum filter length**:

- Always start a measurement in auto mode ("Filter > Auto").
Check if the measurement results are sufficient.
- If the power is not constant, select the filter length manually ("Filter > User").
Trigger the "Auto Once" function to search for the optimum filter length for the current measurement conditions.
The estimated value is indicated as filter length.
- If the target measurement accuracy value is known, select "Filter > Fixed Noise".
The averaging factor is selected automatically and so that the sensor's intrinsic noise (two standard deviations) does not exceed the specified noise content.

- Different sensor types achieve the same filtering result with different filter and time window lengths.

The time window length depends on the sensor type:

- For most sensors, it is fixed to 20 ms.
- For the R&S NRP-Z81 sensor, it is 10 μ s.

The R&S NRP-Z81 uses filter length that is 1000 times larger than the filter length for other sensors.

About zeroing

Activates the auto zero function.

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor. If a Rohde & Schwarz power sensor receives an input power during the zeroing process, it aborts zeroing and generates an error message. Zeroing takes a few seconds, depending on the sensor model. Refer to the documentation of your power sensor for more information.

Tips for zeroing

When to perform zeroing:

- During warm up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.
- Switch off the RF power source for zeroing, but do not disconnect it from the power sensor. This proceeding keeps the thermal equilibrium, and the zeroing process also compensates the noise that superimposes the measured signal (e.g. from a broadband amplifier).

Related settings and functions

- Measurements-related settings, like results, filter, filter length:
[Chapter 8.12.4.4, "NRP sensor configuration"](#), on page 616
- Closed loop power control of the output level:
[Chapter 8.12.4.3, "NRP power control"](#), on page 610.
- Software version of the connected power sensor:
`:SENSe<ch>[:POWER]:TYPE?` on page 976
- Assignment of the external signals and the output connectors:
[Chapter 12.2.4, "RF connectors settings"](#), on page 754
- Acquisition of level correction data:
[Chapter 8.12.3, "User correction"](#), on page 593.

Additional information

See the Rohde & Schwarz website <http://www.rohde-schwarz.com>, section "Power Meters & Voltmeters" for:

- R&S NRP power sensor manual.
- Information on the R&S NRP-Z5 sensor hub and the available accessories.
- Sensor software updates.

NRP power viewer settings

Access:

- Select "RF" > "RF Measurement" > "NRP Power Viewer".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping	
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...
2: NRP18SN 101748	Average	-1.03	dBm	Config ...
3: NRP67TN 101015	Average	-38.20	dBm	Config ...
4: NRP33SN-V 900011	Average	-7.96	dBm	Config ...

The "Power Viewer" tab lists the mapped R&S NRP power sensors with the measured parameter mode and the current readings. The "Config" button leads you to the configuration dialog to set the parameters for each sensor.


[Config](#).....610

Config

Accesses the [Chapter 8.12.4.4, "NRP sensor configuration"](#), on page 616 dialog.

8.12.4.3 NRP power control

The NRP power control function enables you to apply stable and accurate RF power to the DUT. For example, you can set up a downstream closed loop power control circuit to compensate spurious effects or losses caused by power amplifiers or cables.

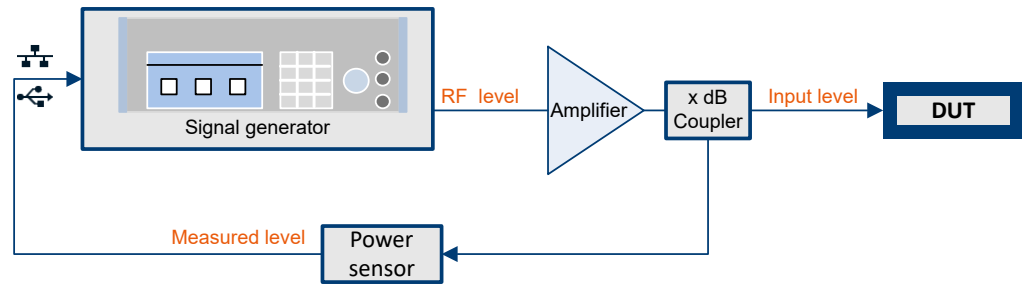Example: How to set up a closed loop power control**Figure 8-23: Example of a test setup with NRP power control**

The signal generator applies the RF output signal to an amplifier and to the DUT. An intermediately connected coupler derives the output power from the output signal and forwards it to the power sensor. Thus, the power sensor measures a proportional power in defined time intervals, and returns the results to the signal generator. If supported, the power sensor also includes given S-parameters. The signal generator compares the measured power with the set level value and adjusts the level of the output signal accordingly.

This closed loop power control enables you to control the external signal level continuously and reliably achieve a constant input power at the DUT in real time.

**Impact of NRP power control and operating modes**

Since the frequency and level of the RF output signal are continuously adjusted during "NRP Power Control", this operating mode interferes signal generation modes with varying frequency and level values. In addition, the setting time increases. The reason is the interaction between the signal generator and the R&S NRP power sensor in the control loop.

The operating modes impact each other as follows:

- Enabling the RF frequency sweep, RF level sweep or the list mode disables a running "NRP Power Control".
- A running list or RF sweep mode blocks "NRP Power Control".
- Modulated signals can deviate from the CW signal in mean power and peak power, and thus affect the "NRP Power Control".

NRP power control settings

Access:

- Select "RF" > "RF Measurement" > "NRP Power Control".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping
<div>State <input type="checkbox"/></div>		<div>RF A</div>	
<div>Sensor</div> <div>2: NRP18SN 101748</div>		<div>Average</div> <div>-1.02 dBm</div> <div>Config ...</div>	
<div>Target Level</div> <div>-1.02 dBm</div>		<div>Take Measurement as Target Level</div>	
<div>Mode</div> <div>Auto</div>			
<div>Catch Range +/-</div> <div>30.00 dB</div>		<div>Delay Time</div> <div>20 ms</div>	
<div>RF Amplitude Limit</div> <div>20.00 dBm</div>		<div>RF Setting Characteristics</div> <div>Auto</div>	

In this dialog you can configure the parameters of the power control setup for the selected power sensor.

The side tabs enable you to configure the settings for each path separately.

The remote commands required to define these settings are described in [Chapter 14.19.17, "SOURce:POWer subsystem"](#), on page 1272.

Settings

State.....	612
Sensor.....	612
Measured Level.....	613
Target Level.....	613
Take Measurement as Target Level.....	613
Mode.....	613
Execute Single.....	613
Catch Range +/-.....	613
Delay Time.....	614
Limit.....	614
Setting Characteristics.....	614

State

Enables power control with the selected sensor.

The control loop periodically adjusts the generator output. After switching off, the running loop is completed.

Note: If you want to use another sensor, you must disable power control before. It is not possible to switch between sensors when power control is active.

Remote command:

`[:SOURce<hw>] :POWer:SPC:STATe` on page 1284

Sensor

Indicates the R&S NRP power sensor that is selected for power control.

To configure the power sensor parameters, see [Chapter 8.12.4.4, "NRP sensor configuration"](#), on page 616.

Remote command:

`[:SOURce<hw>] :POWer:SPC:SElect` on page 1283

Measured Level

Indicates the current reading of the selected power sensor.

Remote command:

`:READ<ch> [:POWer] ?` on page 968

`:SENSe<ch>:UNIT [:POWer]` on page 969

Target Level

Specifies the nominal level expected at the input of the sensor. The signal generator adjusts the output power accordingly, to meet the target value at the sensor input, and thus the power required at the DUT.

Remote command:

`[:SOURce<hw>] :POWer:SPC:TARGet` on page 1284

Take Measurement as Target Level

Uses the currently measured level as reference and applies the value as target level, see "[Target Level](#)" on page 613.

This feature simplifies setting up the control loop after manual adjustment of the measurement configuration. To assign the measured level as reference level, you must switch off "NRP Power Control". It is not possible when the control loop is running.

Remote command:

`[:SOURce<hw>] :POWer:SPC:MEASure` on page 1282

Mode

Selects the measurement mode for acquiring the power values measured by the sensor.

"Auto"	Immediately starts and measures the power continuously.
"Single"	Starts when you manually select Execute Single , and executes one power measurement cycle. Note, that you can achieve the expected target power level at the DUT only with linear test setups. Non-linear test setups, for example, setups including an amplifier do not work.

Remote command:

`[:SOURce<hw>] :POWer:SPC:MODE` on page 1283

Execute Single

In mode "Single", starts one measurement cycle manually.

Remote command:

`[:SOURce<hw>] :POWer:SPC:SINGLE` on page 1283

Catch Range +/-

Sets the capture range of the control system.

Within the range:

Target Level +/- Catch Range

the power control locks and tries to achieve the target level. Readings outside the range are not considered.

Remote command:

`[:SOURce<hw>] :POWer:SPC:CRANge` on page 1282

Delay Time

Sets a waiting period between the level adjustment of the generator and the next measurement of the power sensor.

With this parameter, you can bypass idle times in the controlled system.

Remote command:

`[:SOURce<hw>] :POWer:SPC:DELay` on page 1282

Limit

Sets an upper limit for the output power.

The parameter "RF level" > "Limit" is identical with "NRP power control" > "RF Amplitude Limit", see

- [Chapter 8.6, "RF level settings"](#), on page 489
- ["NRP power control settings"](#) on page 611

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce<hw>] :POWer:LIMit [:AMPLitude]` on page 1279

Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto"	<p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p>
--------	--

"Uninterrupted"

Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.

This mode reduces the dynamic range of the instrument. The step attenuator is fixed.

Note:

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

"Strictly Monotone"

Executes signal level changes monotonically increasing or decreasing.

The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.

All electronic switches, which can affect the monotonicity are fixed. The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.

"Constant-VSWR"

Suppresses output impedance variations at the RF A/RF B output connector, due to changed level settings.

"Continuous-Phase"

Suppresses phase discontinuities.

This mode reduces the dynamic range of the instrument and the step attenuator is fixed (equates to "Strictly Monotone").

"Constant-Phase"

This mode keeps the phase constant by coupling the digital attenuation directly to the level setting.

Note: The coupling is only active when the I/Q modulator is in operation.

Pressing [Readjust](#) adds the value of the digital attenuation to the level setting, and sets the [Digital Attenuation](#) = 0. In total, the level value remains constant.

"User"

Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

[\[:SOURce<hw>\]:POWER:LBEHaviour](#) on page 1278

8.12.4.4 NRP sensor configuration

Access:

- Select "RF" > "RF Measurement" > "NRP Sensor Configuration".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping
Average		-1.02 dBm	
State		Zero	
Display Permanent	<input checked="" type="checkbox"/>	Display Average	
Use Frequency Of	RF		
Level Offset State	Off	Level Offset 0.000 dB	
Filter	Auto	Filter Length 376	
		Timeout 2.00 s	
Default Aperture Time	<input checked="" type="checkbox"/>	Aperture Time 5.0 ms	
S-Parameter	Unused	Enable Logging <input type="checkbox"/>	

1: NRP-Z81 900008
 2: NRP18SN 101748
 4: NRP33SN-V 900011

In this dialog you can configure the parameters for each mapped R&S NRP power sensor in separate tabs.

The remote commands required to define these settings are described in [Chapter 14.17, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 962, including the triggering of the measurement and the retrieval of measurement results.

Settings:

Sensor type and serial number.....	617
Level (Peak) / Level (Average).....	617
State.....	617
Zero.....	617
Display.....	617
L Permanent.....	617
L Display.....	618
Use Frequency Of.....	618
Frequency.....	618
Level Offset State,Level Offset.....	618
Filter.....	618
Filter Length.....	619
Auto Once.....	619
Noise/Signal Ratio.....	619
Timeout.....	619
Default Aperture Time.....	620

Aperture Time.....	620
S-Parameter.....	620
Enable Logging.....	620

Sensor type and serial number

The side tab label indicates type and serial number of an R&S NRP power sensor and its mapping index.

The **Level (Peak) / Level (Average)** values display the current readings of the sensor.

Remote command:

`:SENSe<ch>[:POWER]:TYPE?` on page 976

`:SENSe<ch>[:POWER]:SNUMber?` on page 975

Level (Peak) / Level (Average)

Indicates the measured peak or average level value.

You can also change the unit for the results display: Watt, dBm or dBμV.

Note: Peak level measurements are provided if the power sensor supports this feature.

Remote command:

`:READ<ch>[:POWER]?` on page 968

`:SENSe<ch>:UNIT[:POWER]` on page 969

State

Enables level measurement of the R&S NRP power sensor.

Remote command:

`:INITiate<hw>[:POWER]:CONTinuous` on page 968

To query the availability of a sensor at a given connector, use the command :

`SENSe<ch>[:POWER]:STATus[:DEVIce]?` on page 975.

Zero

Activates the auto zeroing.

For details, see ["About zeroing"](#) on page 609.

Remote command:

`:SENSe<ch>[:POWER]:ZERO` on page 976

Display

Sets the display mode for power readings.

Permanent ← Display

Enables the display of the power sensor with the currently measured value in the task bar.

The task bar label shows the measurement result, the channel, the sensor is mapped to and its serial number. Optionally, "(Offset,Peak)" appear when you have set these parameters.

You can activate the permanent display for several sensors.

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:STATe` on page 971

Display ← Display

Sets the display of results on mean or peak power.

Remote command:

[:SENSe<ch>\[:POWer\]:DISPlay:PERManent:PRIority](#) on page 970

Use Frequency Of

Selects the source for measurement.

- | | |
|--------|---|
| "RF" | Assigns one of the RF signals of the R&S SMW.
The R&S SMW transfers the RF frequency and level settings to the R&S power sensor automatically. Thus you achieve power readings of high accuracy, irrespective from the connected sensor type.
You can also allocate two sensors in one path, for example to measure the power before and after the DUT. |
| "User" | Sets a user defined frequency. |

Example:

If you have a frequency converting device between the generator and the DUT. If the frequency converter doubles the frequency, you can set twice the frequency in the R&S SMW. The R&S power sensor considers this RF frequency setting.

Set the parameter [Frequency](#) to the measurement's frequency.

Remote command:

[:SENSe<ch>\[:POWer\]:SOURce](#) on page 975

Frequency

Defines the frequency value if "Source > User" is used.

Remote command:

[:SENSe<ch>\[:POWer\]:FREQuency](#) on page 974

Level Offset State,Level Offset

Activates and defines a level offset which is considered in the power measurement result. The level offset value is always expressed in dB, irrespective of the display of the measurement result.

This function allows you to consider, for example, an attenuator in the signal path.

Remote command:

[:SENSe<ch>\[:POWer\]:OFFSet](#) on page 974

[:SENSe<ch>\[:POWer\]:OFFSet:STATe](#) on page 974

Filter

Selects the way the length of the used filter is defined.

See also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 608.

"Auto"	<p>Selects the filter length automatically and adjusts it to the measured value. The value is indicated with the parameter Filter Length.</p> <p>When high output power is applied, the filter length and therefore the measurement time can be short.</p> <p>When low output power is applied, the filter length and therefore the measurement time is increased which reduces the considered noise content in your measurement.</p>
"User"	<p>The filter length is defined manually, with the parameter Filter Length.</p> <p>As the filter length works as a multiplier for the time window, constant filter length results in a constant measurement time.</p> <p>Values 1 and 2N are allowed.</p>
"Fixed Noise"	<p>The averaging factor is taken automatically in accordance to the value Noise/Signal Ratio. Thus, the sensor's intrinsic noise (2 standard deviations) does not exceed the specified noise content.</p> <p>To avoid long measurement times when the power is too low, set a Timeout.</p> <p>Timeout is the maximum acceptable measurement time which limits the averaging factor and therefore leads to a more unstable readout.</p>

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:TYPE](#) on page 973

Filter Length

Sets or indicates the filter length, depending on the selected filter mode.

- "Filter > Auto" indicates the automatically adjusted filter length.
- "Filter > User" enables you to set the filter length manually.
- "Filter > Fixed Noise" hides the setting parameter.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:LENGTH:AUTO?](#) on page 971

[:SENSe<ch>\[:POWER\]:FILTer:LENGTH\[:USER\]](#) on page 971

Auto Once

Searches the optimum filter length for the current measurement conditions. The result is indicated with the parameter [Filter Length](#).

See also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 608.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:SONCe](#) on page 973

Noise/Signal Ratio

For [Filter > Fixed Noise](#), sets the noise content.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:NSRatio](#) on page 972

Timeout

Sets a time limit for the averaging process.

The setting is bound to the timeout of the connected sensor.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME` on page 972

Default Aperture Time

The sensor default setting is sufficient. Disable this parameter to specify a user-defined aperture time per sensor, if, for example, the readings vary.

To obtain stable readings, set the [Aperture Time](#) exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:DEFAult:STATe` on page 969

Aperture Time

If "Use Default Aperture Time > Off", defines the acquisition time per sensor.

For example, to obtain a sufficient low average value, set the aperture time exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:TIME` on page 969

S-Parameter

Activates the use of the S-Parameter correction data of the connected power sensor. For sensors with attenuator, this function is automatically activated.

S-Parameter correction is used to mathematically shift the reference plane to the DUT by considering the S-parameters for any components connected upstream of the sensor.

The S-Parameter table can be changed with the S-Parameters tool, provided as part of the free R&S NRP Toolkit software. For more information, refer to the manual of the connected R&S NRP power sensor.

Remote command:

`:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe` on page 970

`:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?` on page 970

`:SENSe<ch>[:POWer]:CORRection:SPDevice:SElect` on page 970

Enable Logging

Activates recording of R&S NRP power sensor readings in a log file.

There is 1 log file per sensor. The log files are created automatically and filled in continuously. They are text files with predefined filename `SensLog<n>.txt`, where `<n>` indicates the connected sensor. Log files are stored on the internal memory, in the directory `/var/user/SensorLogging`.

Each log file contains the measured value (2 readings when you work with peak sensors), the sensor type, and the measurement time (timestamp). Logged data is not overwritten. When a new measurement is started, the collected logging data is appended in the log file.

Check the used disc space regularly and remove log files to maintain storage capacity.

Note: The logging function is intended for measurements with long time intervals. It is suitable source for data reconstructions if the connection to the sensor was interrupted.

Remote command:

`:SENSe<ch>[:POWer]:LOGGing:STATe` on page 974

8.12.4.5 NRP sensor mapping

The "NRP Sensor Mapping" lists the sensors detected by the instrument.

Any R&S NRP sensor that supports the USB legacy protocol and is connected to one of the USB interfaces, is detected automatically and added to the list. When you disconnect a power sensor, the R&S SMW removes it from the list accordingly.

R&S NRP sensors that are connected in the LAN or use the USBTMC protocol are only detected by the scan search function.

Access:

- Select "RF" > "RF Measurement" > "NRP Sensor Mapping".

NRP Sensors						
Power Viewer	Power Control	Sensor Configuration	Sensor Mapping			
		Sensor	Peak	Revision	Protocol	Connector Mapping
1		NRP-Z11 900003	<input type="checkbox"/>	04.16	Legacy	1
2		NRP18SN 101699	<input checked="" type="checkbox"/>	02.40.22081101	Visa	3
3		NRP18SN 101748	<input checked="" type="checkbox"/>	02.40.22081101	Legacy	2
4		NRP18SN 101748	<input checked="" type="checkbox"/>	02.40.22081101	Visa	
5		NRP18TN 100952	<input type="checkbox"/>	03.00.23050801.beta	Visa	
6		NRP67TN 101015	<input type="checkbox"/>	02.30.21062301	Visa	
7		NRP67TN 101016	<input type="checkbox"/>	02.30.21062301	Visa	
8		NRP6AN 101118	<input checked="" type="checkbox"/>	17.11.27.03	Visa	

Scan Start Clear Add Sensor ...

The dialog lists all detected R&S NRP sensors for selection and mapping. You can also browse the network for sensors.

The list informs on the sensor type with serial number, specific features and the revision of the sensor firmware.

For each sensor, you find the used protocol and the connector icon of the interface. In the "Mapping" column, you can assign a mapping index to enable the sensor for use. The list can contain several entries but the R&S SMW can only use up to four sensors simultaneously.

The remote commands required to define these settings are described in [Chapter 14.17, "SENSe, READ, INITiate and SLIS subsystems"](#), on page 962.

Settings

Sensor Mapping List.....	622
Scan.....	622
Clear.....	622
Add Sensor/Hide 'Add Sensor'.....	622

Add Sensor settings.....	622
L Add LAN Sensor settings.....	622
L Add USB Sensor settings.....	623

Sensor Mapping List

Shows the sensors that are connected to the R&S SMW.

The table informs on the sensor type, specific features and the installed sensor firm-ware. It also shows the interface the sensor is connected to, including the communication protocol and the mapping index.

Remote command:

`:SLIST[:LIST]?` on page 965

`:SLIST:ELEMent<ch>:MAPPING` on page 967

`:SLIST:SENSor:MAP` on page 967

Scan

Scans the network and the USB connections for sensors connected using the VISA communication protocol, i.e. sensors that are addressed over LAN or USBTMC.

The instrument detects sensors communicating over the USB legacy protocol automatically.

Remote command:

`:SLIST:SCAN[:STATe]` on page 965

Clear

Removes the selected sensor from the sensor mapping list.

Remote command:

`:SLIST:CLEar:LAN` on page 966

`:SLIST:CLEar:USB` on page 967

`:SLIST:CLEar[:ALL]` on page 967

Add Sensor/Hide 'Add Sensor'

Shows or hides the "Add Sensor" settings.

Add Sensor	
IP Address or Host Name NRQ6-101624	Add LAN Sensor
Device ID or Sensor Name NRQ6	Serial Number 101624
	Add USBTMC Sensor

Add Sensor settings

Configures settings to add sensors connected to the R&S SMW over USB or LAN.

Add LAN Sensor settings ← Add Sensor settings

Configures settings to add sensors connected to the R&S SMW over LAN.

"IP Address or Host Name"

Displays the host name or the IP address of a R&S NRP power sensor.

If the R&S SMW does not detect a connected R&S NRP sensor, you can assign the address information manually.

"Add LAN Sensor"

Adds a detected R&S NRP sensor connected in the LAN to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:LSensor` on page 966

Add USB Sensor settings ← Add Sensor settings

Configures settings to add sensors connected to the R&S SMW via USB.

"Device ID or Sensor Name"

Displays the device identifier or the name of the R&S NRP power sensor.

If the R&S SMW does not detect a connected R&S NRP sensor, you can assign the ID or name manually.

"Serial Number"

Displays the serial number of the R&S NRP power sensor.

If the R&S SMW does not detect a connected R&S NRP sensor, you can assign the serial number manually.

"Add USBTMC Sensor"

Adds a detected R&S NRP sensor connected at the USB interface to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:USENsensor` on page 966

8.12.5 To calibrate the power level with an R&S NRP power sensor

Using a R&S NRP power sensor and the user correction function of the instrument, you can compensate external frequency responses. The R&S SMW utilizes the readings of the power sensor and creates a correction value table for controlling the output level during operation.

To connect the R&S NRP to the R&S SMW

1. Connect the power sensor.
See [Chapter 8.12.4.1, "Connecting R&S NRP power sensors to the R&S SMW"](#), on page 606.

2. Select "RF" > "RF Measurement" > "NRP Sensor Mapping".

3. If the sensor is not detected automatically, select "Scan > Start".

The instrument scans the network and the USB connections for connected sensors and lists all detected R&S NRP sensors in the mapping table.

4. In the "Mapping" column, assign the sensor to a sensor channel, see [Chapter 8.12.4.5, "NRP sensor mapping"](#), on page 621.
5. Close the dialog.

To configure and calibrate the R&S NRP in the R&S SMW

Provided the power sensor is connected to the R&S SMW and is assigned to a sensor channel, we recommend that you calibrate and configure the power sensor.

1. In the block diagram > RF A, turn off the RF output signal.
2. Select "RF" > "RF Measurement" > "NRP Power Viewer".


Power Viewer	Power Control	Sensor Configuration	Sensor Mapping	
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...
2: NRP18SN 101748	Average	-1.03	dBm	Config ...
3: NRP67TN 101015	Average	-38.20	dBm	Config ...
4: NRP33SN-V 900011	Average	-7.96	dBm	Config ...

3. To configure the sensor, select "Config".
4. Select "Zero" to start zeroing of the sensor.
Note: Always turn the RF power off or disconnect the sensor from RF before zeroing, since the function calibrates the power sensor at zero signal power.
 The zeroing process takes a few seconds, depending on the power sensor type.
5. Configure additional parameters for the selected sensor as required.
6. Select "State > On".
7. Close the dialog.

To create user correction data with an R&S NRP and the R&S SMW

We assume, that the power sensor is connected, assigned and ready for operation.

1. Select "RF" > "RF Level" > "User Correction".

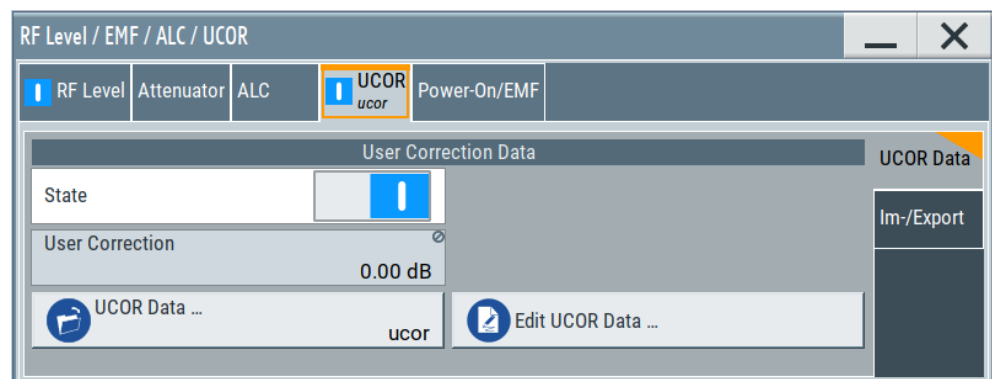

2. Select "UCOR Data" > "UCOR Data...."
3. Create a file: "New" > Filename and confirm with "OK".
4. Select the new file with "Select".
5. Select "Edit UCOR Data...".
6. In the "Edit User Correction Data A ucor", select "Edit" > "Fill".
The "Fill Table" dialog enables you to fill in the values of the columns automatically.
7. To fill in the frequency column:

From	0	Range	15
Column To Fill	Frequency / Hz		
Start Value	1.560 000 000 00 GHz	End Value	1.574 000 000 00 GHz
Increment Value	1.000 000 00 MHz		
<input checked="" type="checkbox"/> Fill			

- a) Select "Select Column To Fill > Frequency / Hz".
- b) Select "Range > e.g. 15" to determine the number of values.
- c) Select "Start Value > e.g. 1.56 GHz".
- d) Select "Increment Value > e.g. 1 MHz", to determine the frequency steps.
- e) Select "Fill", to insert the frequency values.


The "Fill" function also fills the column of the "Correction Value / dB" values with a predefined value, since empty cells lead to the data loss of the entire line. If you need different values, you can change them manually, or you can use the automatic function "Fill with Sensor" as described in the next steps.

8. Select "Fill with Sensor".

The "Fill User Correction Data With Sensor" dialog provides an overview of the sensor configuration.

9. Select "Execute".

The R&S SMW successively sets each frequency point, reads the measured power of the sensor and fills in the value in the correction table.

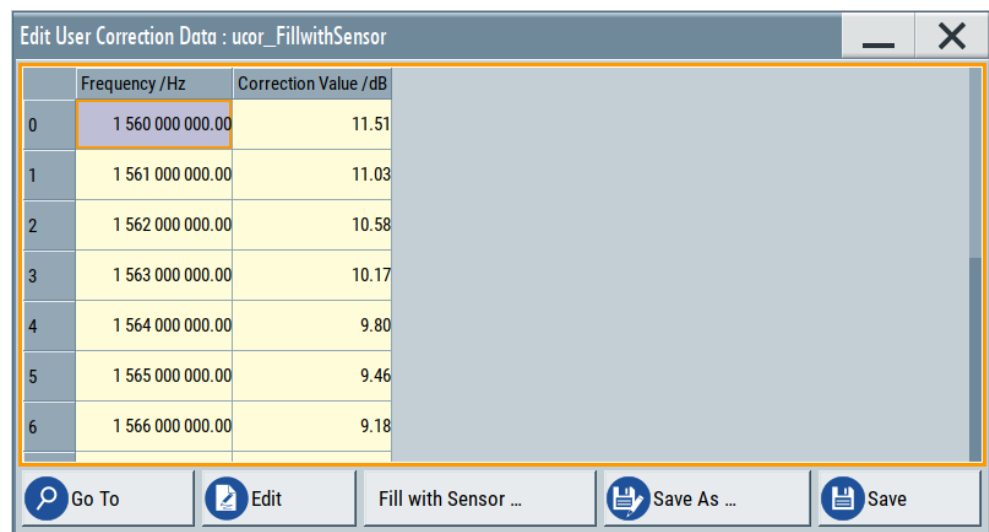

10. Select "Save" to save the data in the file.

11. Close the dialog.

To perform power leveling calibration with user correction data

We assume that a user correction file is available in the user directory of the R&S SMW or on a memory stick or in a shared directory.

If you have created and saved the file immediately before this step, the file is loaded in the "User Correction" dialog automatically. Otherwise you can load a previously saved file.

1. Select "RF" > "RF Level" > "User Correction".
2. Select "UCOR Data" > "UCOR Data...", if there is no file loaded already.
3. Select the directory and file you want to use.
4. Load the file with "Select".
5. To view the file content, select "Edit UCOR Data...".
6. Select "UCOR Data" > "State" > "On" to apply the user correction values.

When you activate the RF output, the R&S SMW considers the user correction data and adjusts the signal level accordingly to compensate external frequency responses.

9 Monitoring signal characteristics

The R&S SMW is a highly configurable signal generator with versatile routing possibilities and level settings distributed over several dialogs. To optimize the signal generation process and to help monitoring the variation of the signal parameters through the instrument, the R&S SMW is equipped with a real time graphical signal display and a power level surveillance function.

This section explains the provided functions for monitoring of the signal characteristics in real time. Here you can find out how to visualize the generated signal with measurement diagrams and how to enable measurements on the baseband power levels.

9.1 Displaying baseband signal characteristics in real-time

In test setups, you usually use signal and spectrum analyzers or an oscilloscope to display and analyze the characteristics of the generated signal. In the R&S SMW, you can also use the built-in graphical signal display function and visualize a subset of signal characteristics.

9.1.1 Required options

The minimum equipment layout for using this function includes

- Option Standard or Wideband Baseband Generator (R&S SMW-B10/-B9) per signal path
- Option Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T) or Option Wideband baseband main module two I/Q paths to RF (R&S SMW-B13XT)

9.1.2 About the graphical signal display

To ease the setting and routing of baseband signals, R&S SMW is able to capture these signals and display them graphically in different ways: as I/Q, vector, eye or constellation diagram, as power spectrum or as statistical evaluations.

In the digital domain, the measurements are based on recorded I/Q samples. The sources of these samples are selectable points (acquisition points) in the signal flow. You can configure and display the signal characteristics simultaneously in up to diagrams.

9.1.2.1 Available diagrams

This section focuses on graphical signal displays, their content and application. See [Table 9-1](#) for an overview of the signal characteristics you can monitor.

Table 9-1: Graphics modes overview

Graphics modes	Domain	Measurement is known from this instrument
I/Q diagram	Time	Oscilloscope (standard mode)
Vector diagram	Time	Oscilloscope (XY mode)
Constellation diagram	Time	Oscilloscope (XY mode)
Eye diagram	Time	Oscilloscope (triggered to symbol clock and showing repetitive traces)
CCDF display	Statistical representation of peaks	Peak Power Analyzer
Power spectrum	Frequency	Spectrum Analyzer

I/Q diagram

The I/Q diagram displays the inphase component ($i[t]$) and quadrature component ($q[t]$) of the I/Q signal over time.

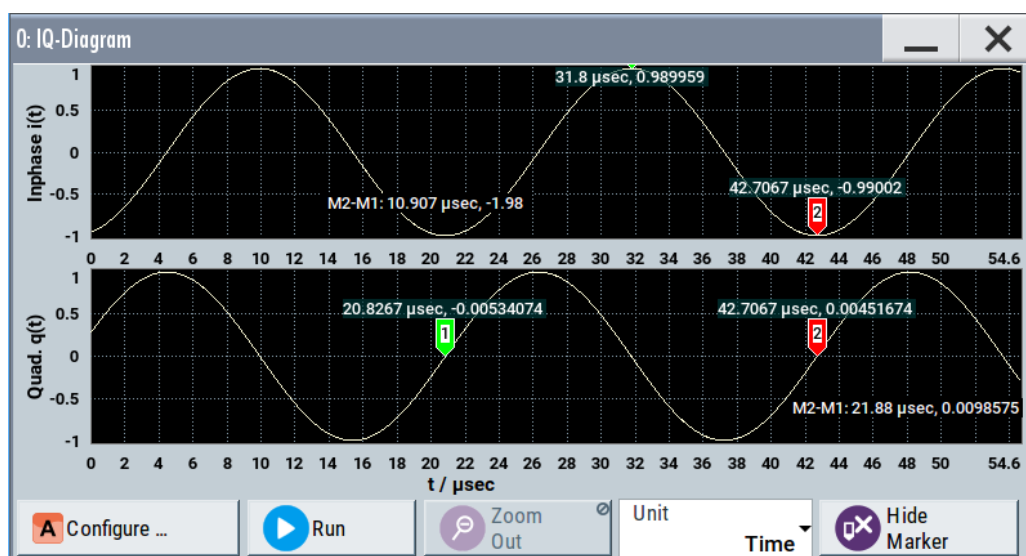


Figure 9-1: I/Q diagram with markers

= window with two separate coordinate systems with identical X and Y axes

X-axis = time represented as number of symbols, chips, or samples depending on the signal

Y-axis = amplitude, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

Application: To analyze impairments, fading, added noise and added signals (e.g. from external baseband input) or from second path in the time domain. This mode shows the signal like an oscilloscope.

Signal acquisition points: See Table 9-2.

Vector diagram

The vector diagram displays the Q component over the I component. All points in the complex domain are connected by lines.

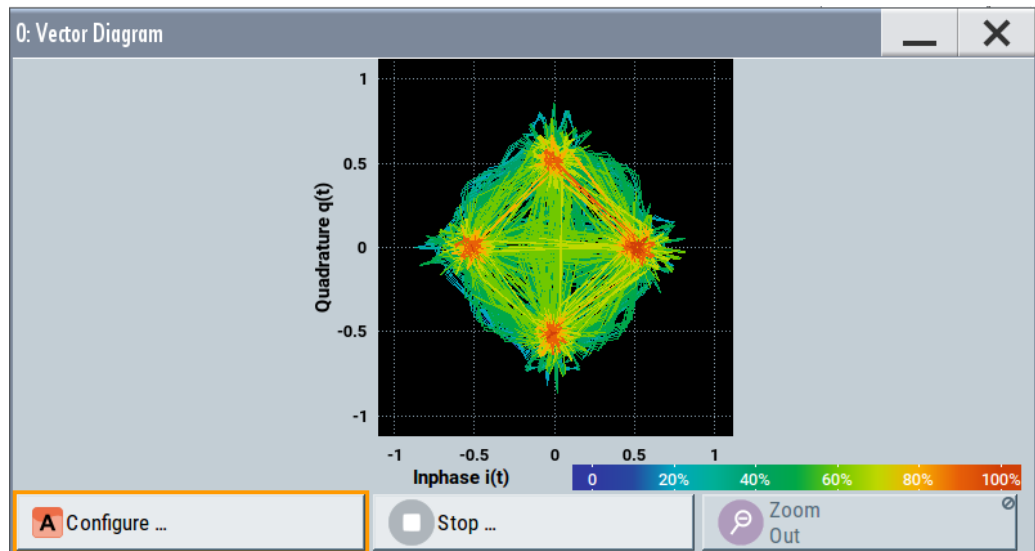


Figure 9-2: Vector diagram (64 QAM)

X-axis, Y-axis = amplitudes of the signal components, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

Application: To analyze the transition between the various states of modulation mapping, especially with linear modulations like MSK, QPSK or QAM. This mode shows the signal like an oscilloscope (X/Y-mode).

Signal acquisition points: See [Table 9-2](#).

Constellation diagram

Constellation diagrams display the modulation symbols as discrete points in the I/Q plane. Unlike the vector diagram, the constellation diagram displays only one sample per symbol. This sample represents the symbol.

Constellation diagrams are helpful when generating signals using the "Custom Digital Modulation" settings. Compare the displayed constellation diagram with the diagram displayed in the "Custom Digital Modulation > Modulation" dialog.

Displaying baseband signal characteristics in real-time

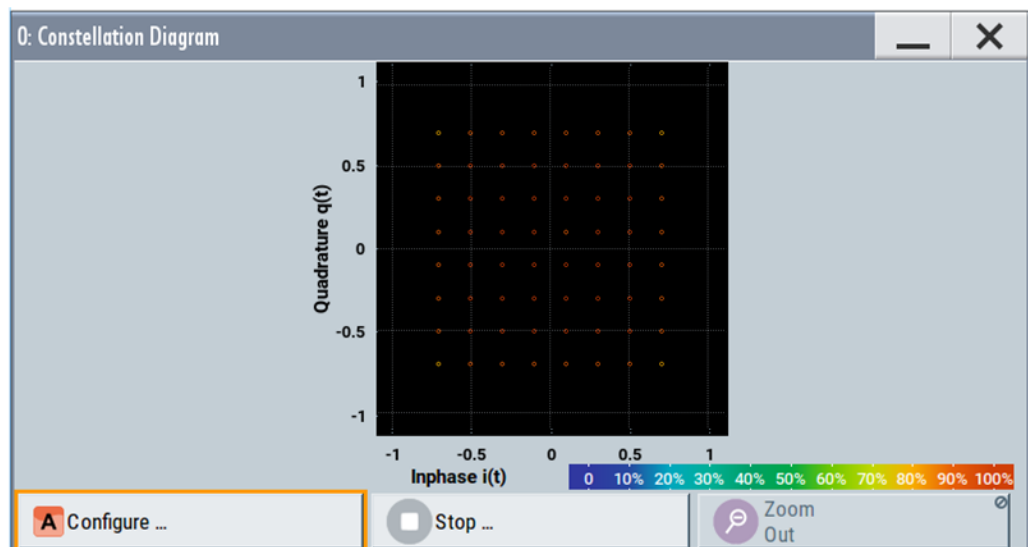


Figure 9-3: Constellation diagram (64 QAM)

X-axis, Y-axis = amplitudes of the signal components, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

Application: To classify modulation.

Signal acquisition points: See [Table 9-2](#).

Eye diagram

The eye diagram displays synchronized and superimposed sections of either the in-phase or the quadrature components of the signal.

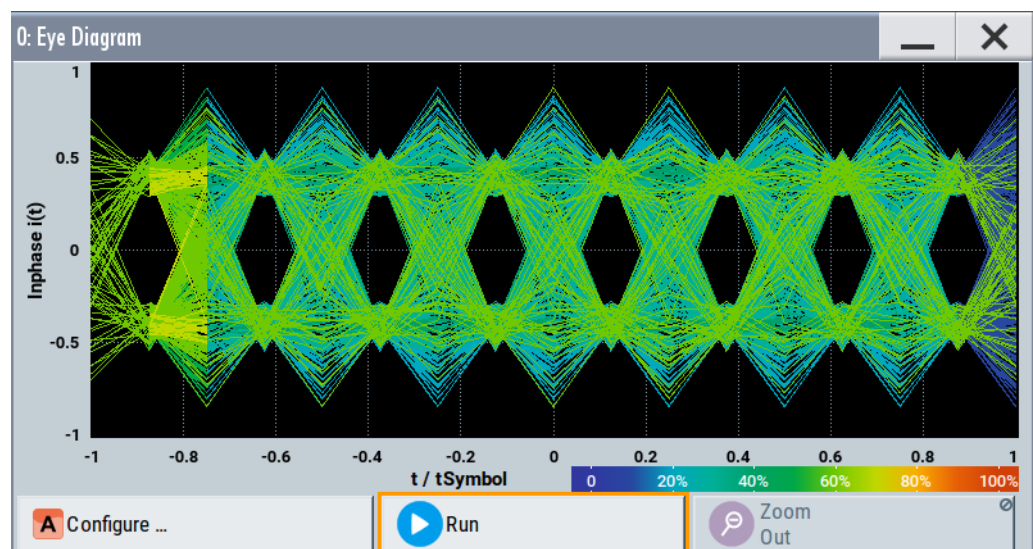


Figure 9-4: Eye diagram with partially closed eye (QPSK)

X-axis = time in the range of ± 1 symbol

Y-axis = amplitude, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

The display width is normalized for 2 symbols. It uses one-symbol "eye opening" in the center of the display and 1/2-symbols to the left and right of the center eye for capturing time transitions. Several hundreds curve segments are superimposed. The beginning of the recording is synchronous to the symbol and chip clock pulse.

Application: To analyze amplitude and time distortion elements (e.g. jitter) at high-speed digital data systems. A high quality, unimpaired signal shows a clearly open eye (horizontally and vertically).

Signal acquisition points: See [Table 9-2](#).

CCDF display

The complementary cumulative distribution function (CCDF) displays the probability with which the output signal exceeds the average power.

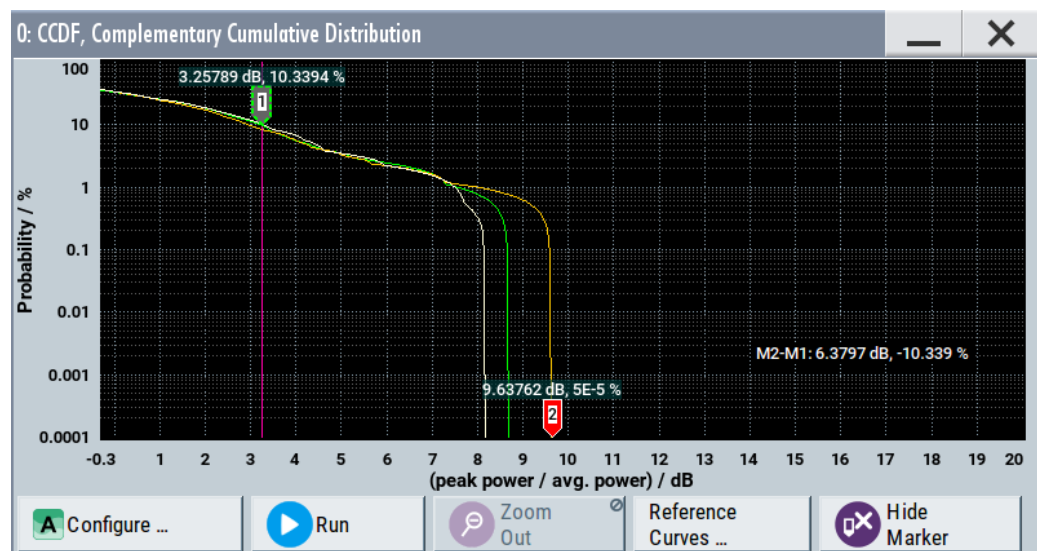


Figure 9-5: CCDF diagram of a 5 MHz LTE Signal (Level -30 dBm) and two reference curves

- X-axis = Level over the average signal power, where the average power (RMS) corresponds to the origin
 Y-axis = Probability of exceeding the average power, that is the percentage of time the signal spends at or above the power level specified by the X-axis
 Marker 1 = Interpolation: 10.3% of the samples exceed 3.3 dB above average; similarly 1% of the samples exceed 7.5 dB above average (not shown with a marker)
 Marker 2 = The point where the trace crosses the x-axis; indicates the highest peak that is found in the sample block and is 9.6 dB higher than average.

The CCDF diagram is calculated over 8 KSamples and corresponds to a signal with the following characteristics:

- "Baseband > LTE" and "Test Model > E-TM1_1__5 MHz"
- "Status bar > Level = - 30 dBm" and "Status bar > PEP = - 18.43 dBm"
 The difference between the level and the PEP results in the peak to average ratio. If the measurement is long enough, the displayed highest peak would correspond to the calculated crest factor.
 The PEP value does not indicate how often the peak level is reached. The CCDF shows the probability for reaching a dedicated instantaneous power.

Signal acquisition points: See [Table 9-2](#).

Power spectrum

The power spectrum displays the signal spectrum which is calculated from the I/Q signal with fast Fourier transform (FFT). The power density over frequency is displayed.

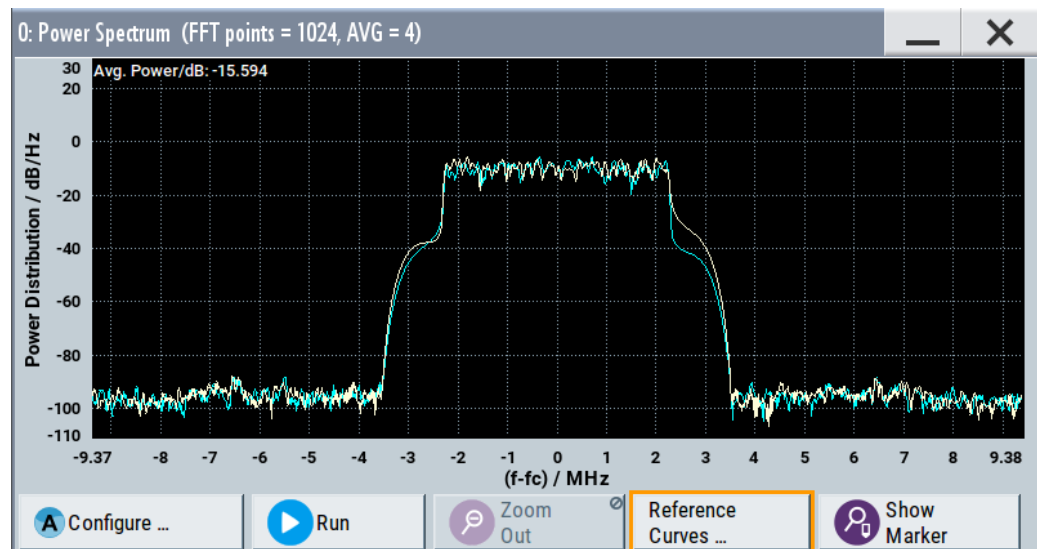


Figure 9-6: Power spectrum diagram of a 5 MHz LTE signal with enabled reference curve (blue)

"FFT points" = indicates the number of I/Q value pairs that are used for calculating a (part-)FFT
 "AVG" = indicates the number of subspectra used for averaging
 X-axis = frequency plotted symmetrically (- Sampling Rate/2 to +Sampling Rate/2)
 Y-axis = power density

Signal acquisition points: See [Table 9-2](#).

9.1.2.2 Signal acquisition points

Signal characteristics can be displayed using different methods and different acquisition points, also at the same time. [Table 9-2](#) shows which signal acquisition point is suitable for which kind of graphics mode. Also, it provides associated graphics sources and the designation of the access points in the block diagram.

Table 9-2: Signal acquisition points, modes and sources

Signal acquisition points	Graphics modes	Graphics source	Designation
Baseband signals	Constellation diagram, eye diagram	"Baseband"	A , B
		"BB Input"	A' , B'
Input streams	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"Stream"	A , B

Displaying baseband signal characteristics in real-time

Signal acquisition points	Graphics modes	Graphics source	Designation
Analog outputs	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"IQ Out" "RF"	1 1, 2 A, B
Digital output streams	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"BBMM"	1, 2

Figure 9-7 shows an example for locations of signal acquisition points.

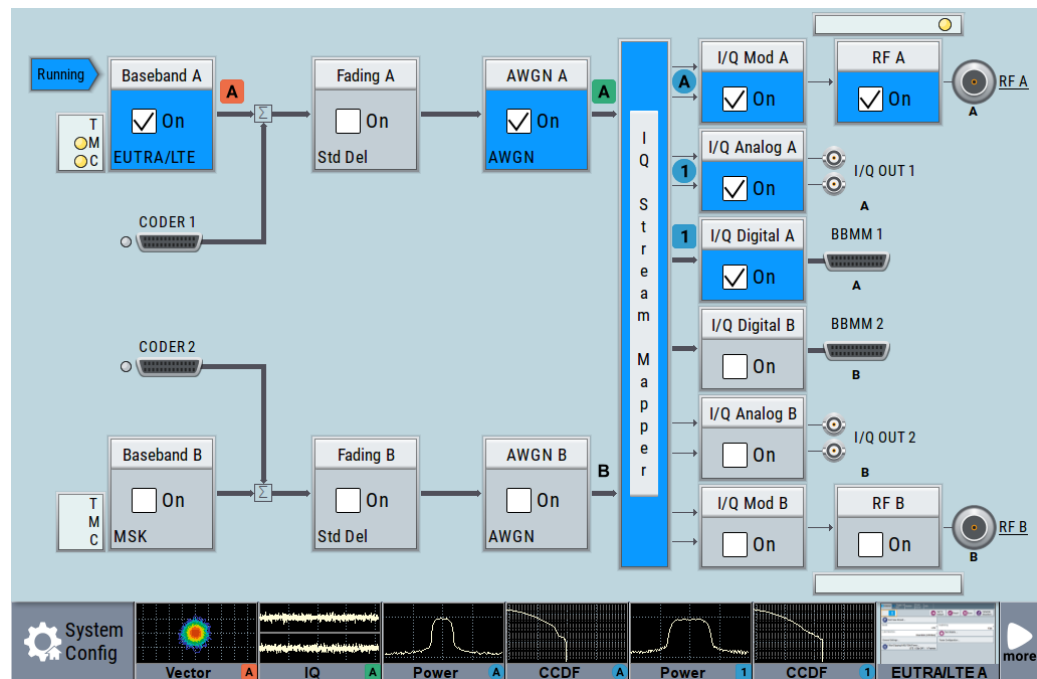


Figure 9-7: Block diagram with graphical signal display and signal acquisition points

The available signal acquisition points depend on the selected configuration (signal routing), see [Chapter 4, "Signal routing and system configuration"](#), on page 108.

9.1.2.3 Display functions

The graphical display provides general display functions known from other measurement instruments and offers zoom and markers.

Zooming

You can zoom into the diagram to visualize the measurement results in greater detail. Using the touchscreen or a mouse pointer you can easily define the area to be enlarged.

Zooming is merely a visual tool, it does not change the number of samples used for the calculation. You can increase the number of samples before zooming.



See also ["To zoom into a diagram"](#) on page 647.

Using markers

Markers are tools for numerical readout of measured data in diagrams. They help you analyze the displayed signal characteristics by determining particular values in the diagram.

Often you can use markers to measure the frequency distance of two peaks or to measure the power decrease of an oscillator at a given frequency offset, dBc value. Note that markers in the diagram are not related to the markers in the digital standards.

In the graphical display, the markers and their values (for example time or frequency) are displayed as usual.

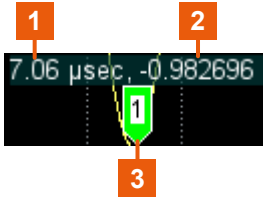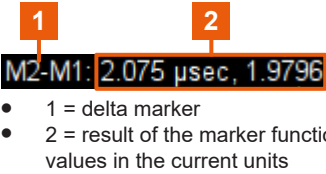Single marker indication	Delta marker indication
 <ul style="list-style-type: none"> 1 = marker position on the x-axis in the current units 2 = marker value on the y-axis 3 = marker number 	 <ul style="list-style-type: none"> 1 = delta marker 2 = result of the marker function, i.e. the delta values in the current units

See also ["To enable markers to readout exact measured data"](#) on page 648.

Persistence and color maps

In addition to the standard representation, the vector, the constellation, and the power spectrum diagrams use a color map.

The color encodes the relative amplitude (in percent) of the probability distribution of the data points in the diagram. A detailed breakdown of the colors is below diagrams the colors are relevant for. Data points in areas with high probability are marked in red, data points in areas with low probability in blue. Thus, for example, you can observe not only the "level versus frequency" trace but also a third dimension, the probability of the power level.


Reference trace

Reference traces help you analyze a displayed characteristic, as do the markers. Reference traces are used to define amplitude curves or spectral distribution boundaries in the result diagram which are not to be exceeded. They indicate, for example, the upper power limits which are allowed from a device under test (DUT).

The R&S SMW supports up to five reference traces. You can load reference traces and activate them simultaneously.

9.1.3 Graphics configuration settings

This section focuses on the graphics configuration dialog, which determines the number and kind of the graphical signal displays.

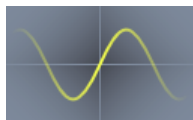

Access:

1. Select "Taskbar > System Config > Graphics" or use the wave icon.

The "Graphics Configuration" dialog opens.

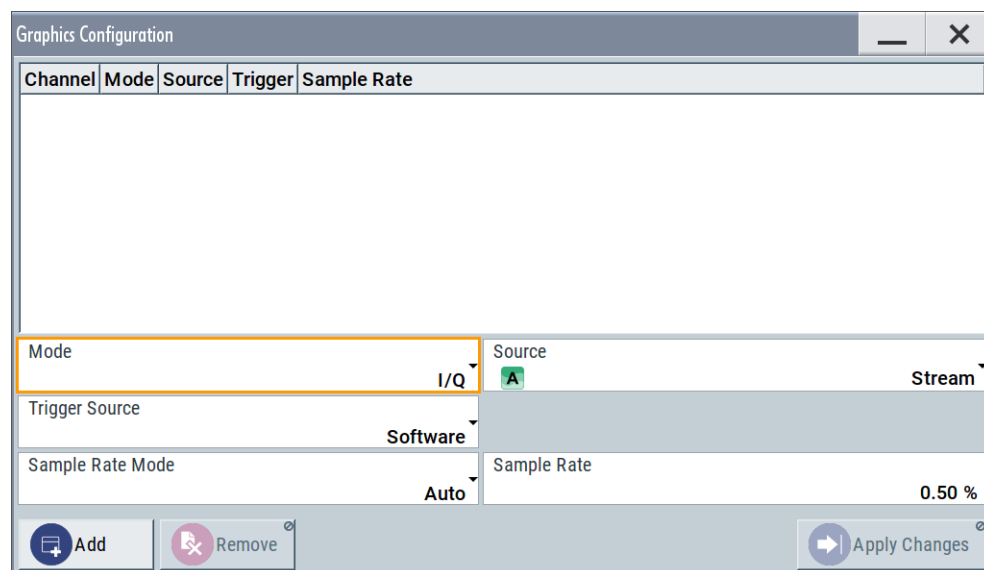


Figure 9-8: Graphics configuration dialog

2. To determine the kind of signal display, use the parameter "Mode".
3. To select suitable signal acquisition points, use the parameter "Source".
4. To enable the graphical signal display, select "Add".

A thumbnail of the graphical signal display is shown in the taskbar.

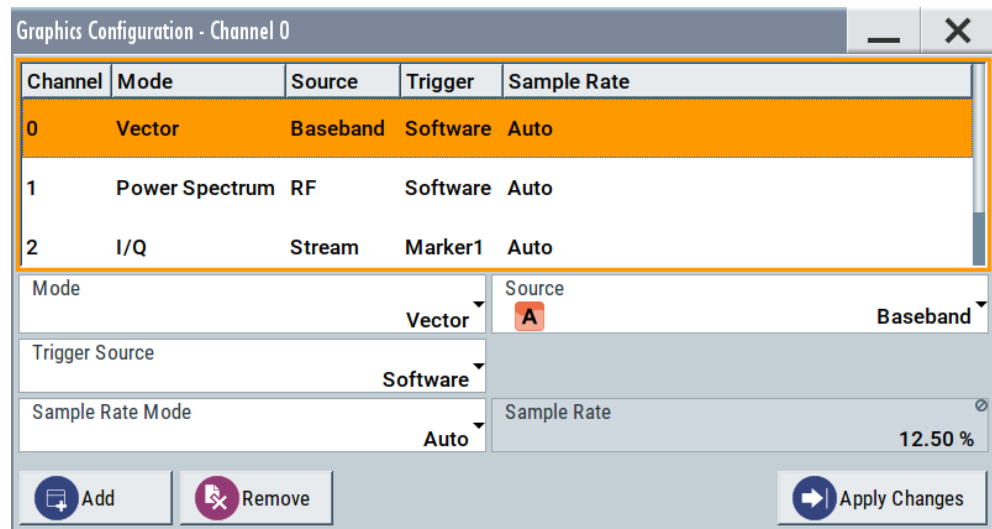


Figure 9-9: Graphics configuration dialog with active graphical signal displays

- To enlarge the thumbnail, select it.

Settings:

Graphical Diagrams Table	636
Mode	636
Source	636
Mux Stream	637
FFT Length	637
Full Scale (dBFS)	637
Trigger Source	637
Sample Rate Mode	638
Sample Rate	638
Add	638
Apply Changes	638
Remove	638

Graphical Diagrams Table

The active graphical signal displays are listed in the table at the top of the dialog.

Mode

Determines the graphics mode, see [Chapter 9.1, "Displaying baseband signal characteristics in real-time"](#), on page 627.

Remote command:

`[:SOURCE<hw>] :BB:GRAPHics:MODE` on page 1184

Source

Defines the signal acquisition point, see [Chapter 9.1.2.2, "Signal acquisition points"](#), on page 632.

External digital baseband signals fed via the [FADER] connectors cannot be monitored.

Remote command:

`[:SOURce] :BB:GRAPhics:SOURce` on page 1186

Mux Stream

In "System Configuration > Signal Outputs > Digital Only Multiplexed" mode, selects which of the multiplexed streams is monitored and displayed.

Remote command:

`[:SOURce] :BB:GRAPhics:SOURce:MUX` on page 1186

FFT Length

In "Mode > Power Sepectrum", selects the number of samples to be included in the graph of the power spectrum.

Remote command:

`[:SOURce] :BB:GRAPhics:FFTLen` on page 1187

Full Scale (dBFS)

In "Mode > Power Spectrum", determines the normalization of the power values in the diagram.

Observe the change in the units on the y-axis.

"On"	The maximal digital power $ I = Q =\max$ is mapped to 0 dB in the power spectrum diagram. The y-axis shows the normalized power in dBFS.
"Off"	The frequency average of the displayed power (frequency domain) agrees with the average power in the time domain. The y-axis shows the power distribution in dB/Hz.

Remote command:

`[:SOURce] :BB:GRAPhics:FFTFscale` on page 1187

Trigger Source

Defines the trigger for signal recording.

"Software"	Recording of signals starts automatically in predefined intervals. This asynchronous method is suitable if a representative display of the complete signal is required.
"Marker 1"	The starting point for recording of signals is determined by the marker 1 setting of the activated digital standard ("Trigger/Marker" dialog). This synchronous method is suitable if specific signal segments are to be shown in greater detail. With periodic signals, a static image is obtained by selecting a period length of marker 1 that is equal to the signal period. The displayed signal segment can be shifted by entering a marker delay in the "Trigger/Marker" dialog of the activated digital standard.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:TRIGger:SOURce` on page 1187

Sample Rate Mode

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a display covering the entire signal bandwidth. The higher the resolution, the shorter the length of the displayed signal segment.

"Auto"	The resolution is set to an optimum value in terms of signal and display type.
"Full Bandwidth"	The resolution is set so that the display covers the entire signal bandwidth.
"User"	Activates the "Sample Rate" input field, where you can manually set the resolution.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:SRATe:MODE` on page 1185

Sample Rate

- If "Sample Rate Mode = Auto/Full Bandwidth"
Displays the percentage of the entire signal bandwidth which is used for the graphical signal display.
- If "Sample Rate Mode = User"
Input for the percentage of signal bandwidth which is used for the graphical signal display.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:SRATe:USER` on page 1185

Add

Adds a graphical signal display (as set in the "Graphics Configuration" dialog) to the taskbar/graphical diagrams table.

Remote command:

`[:SOURce] :BB:GRAPhics:ADD` on page 1186

Apply Changes

Enables the current settings for the selected graphical signal display.

Remove

Removes the selected graphical signal display from the taskbar/graphical diagrams table.

Remote command:

`[:SOURce] :BB:GRAPhics:CLOSe` on page 1185.

Note, that this command closes all graphical signal displays.

9.1.4 Graphical signal display settings

Access:

1. Select "Taskbar > System Config > Graphics > Add".

2. Double click the thumbnail in the taskbar.

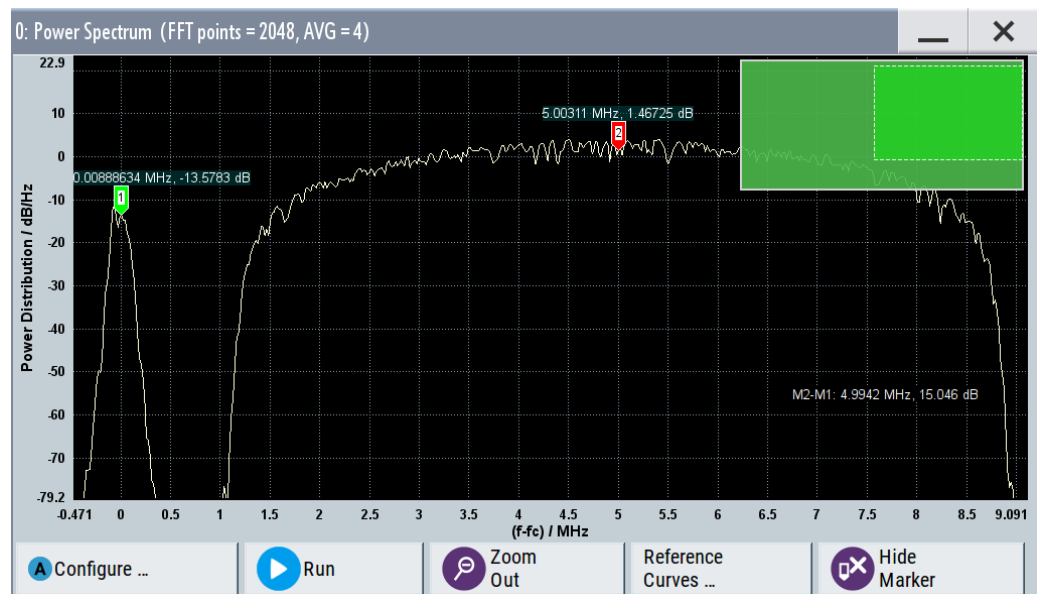


Figure 9-10: Graphical signal display of a power spectrum with markers

This section focuses on the functions of the enlarged graphical signal displays.

Settings:

Configure.....	639
Stop / Run.....	639
Zoom Out.....	639
Reference Curves.....	640
Display Units.....	640
Show / Hide marker.....	640
Reference Curve.....	640

Configure

Opens the "Graphics Configuration" dialog, see [Chapter 9.1.3, "Graphics configuration settings"](#), on page 635.

Note: This function is available for enlarged graphical signal displays and in the context menus of the thumbnails.

Stop / Run

Stops the processing of the displayed signal and freezes it.

"Run" continues a stopped displayed signal.

Zoom Out

Resets a previous zoom, see also ["To zoom into a diagram"](#) on page 647.

Reference Curves

Accesses the dialog for defining reference curves, see ["Reference Curve"](#) on page 640.

Display Units

Changes the units of the X-axis. The available values depend on the generated signal.

Show / Hide marker


Sets two markers to the displayed signal or hides them.

See also:

- ["Using markers"](#) on page 634
- ["To enable markers to readout exact measured data"](#) on page 648

Reference Curve

Enable the indication of up to five configurable reference curves (traces).

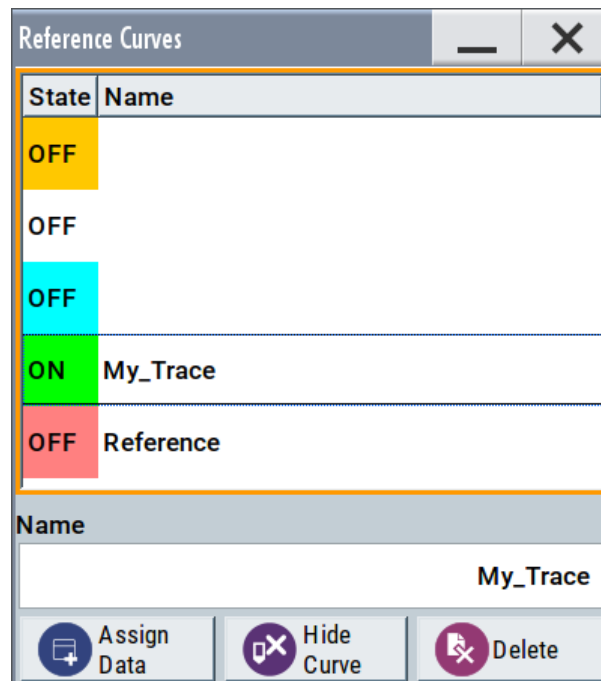

See ["Reference trace"](#) on page 634.

"Reference Curves Table"

Lists the configured reference curves and their current state.
To change a curve, select it.

"Name" Enters the name of a new reference curve

"Assign Data" Accesses the standard "File Select" function to load a file describing a reference curve

"Show Curve" Toggles the show/hide state of the selected curve

"Delete" Removes the curve

9.1.5 How to verify the generated signal with the graphics display

This section shows you how to use the different graphic modes to visualize the signal characteristics of the generated signal. It shows also how to observe the effect of standard settings, like applied filter, an enabled fading or AWGN. The examples use a simple custom digital modulated signal.

To generate a simple WCDMA-3GPP (QPSK 45° offset) signal

- Use the custom digital modulation. Enable a predefined WCDMA-3GPP signal. For more information, see [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 57.


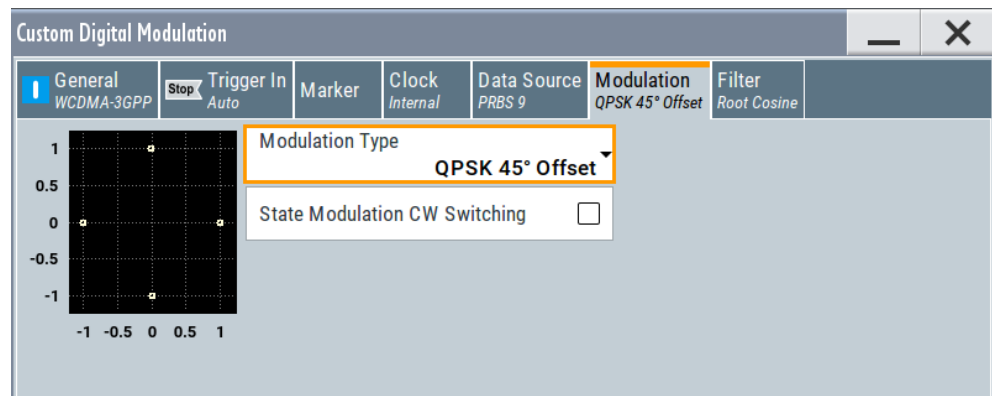



Figure 9-11: Used modulation type

Configure the graphical signal display


1. Select the wave icon:

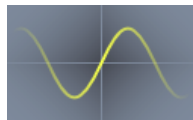

The "Graphics Configuration" dialog opens.

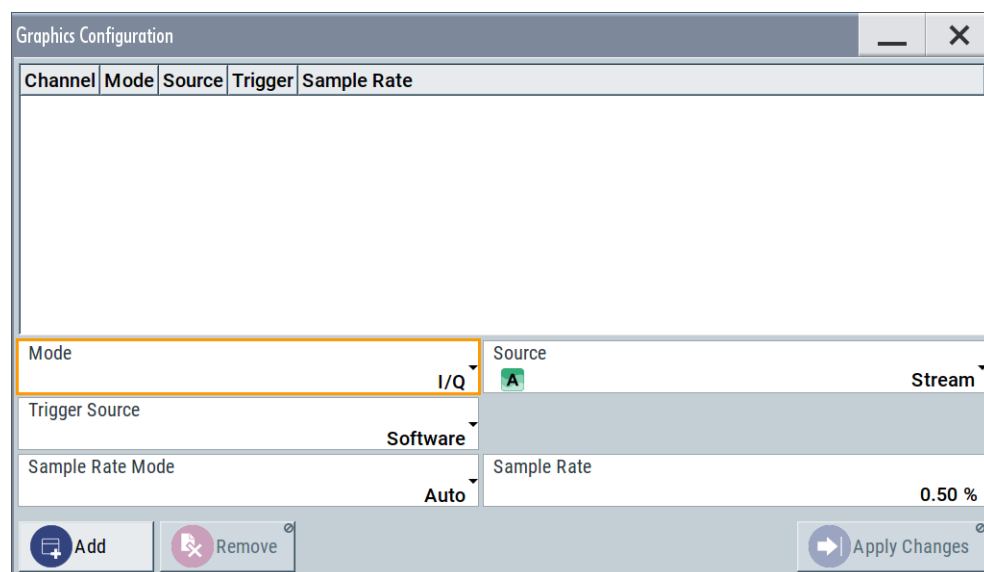

2. Select "Mode > Constellation".
3. Select "Source > Baseband".
4. To view the signal, select "Add".

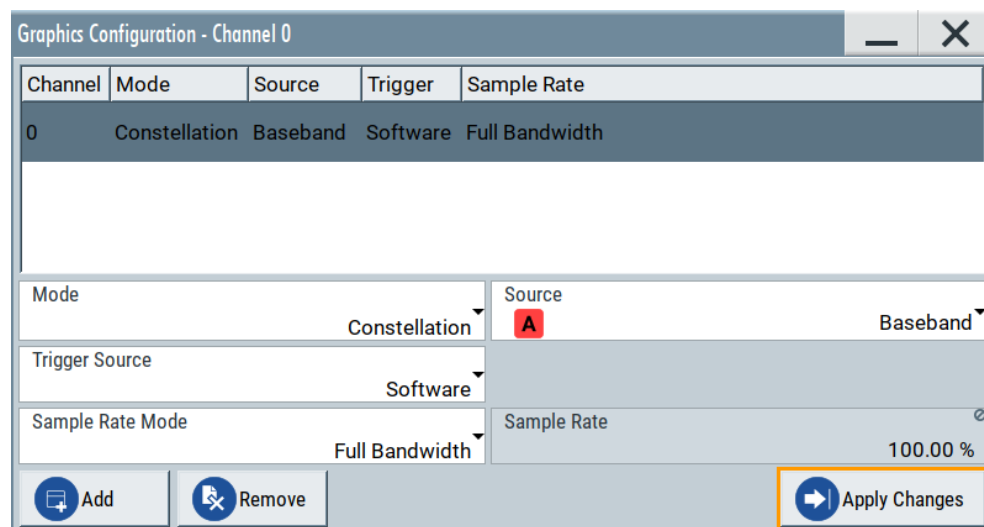

A new thumbnail (minimized view) indicating the constellation diagram appears in the "Taskbar".

5. To enlarge the constellation diagram, select it.

The displayed constellation diagram confirms the used modulation type, see [Figure 9-11](#).

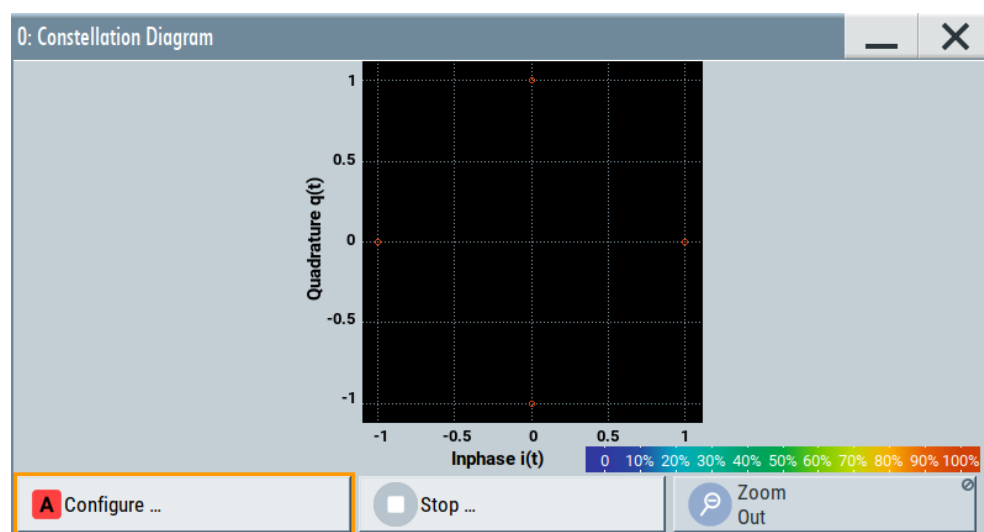


Figure 9-12: Constellation diagram of a WCDMA-3GPP (QPSK 45° offset) signal

To set and verify a baseband frequency offset

1. In "Baseband > Baseband Offsets", set "Baseband > Frequency Offset = 1 Hz"

Baseband Offsets			
	Frequency Offset /Hz	Phase Offset /°	Gain /dB
Baseband A	1.00	0.00	0.000
BB Input A	0.00	0.00	0.000
BB Input B	0.00	0.00	0.000
Baseband B	0.00	0.00	0.000

2. In the "Constellation Diagram", select "Configure".
The "Graphics Configuration" dialog opens.
3. Add a vector diagram with signal acquisition point "Stream" and enlarge it.
The vector diagram rotates with 1 Hz.

Displaying baseband signal characteristics in real-time


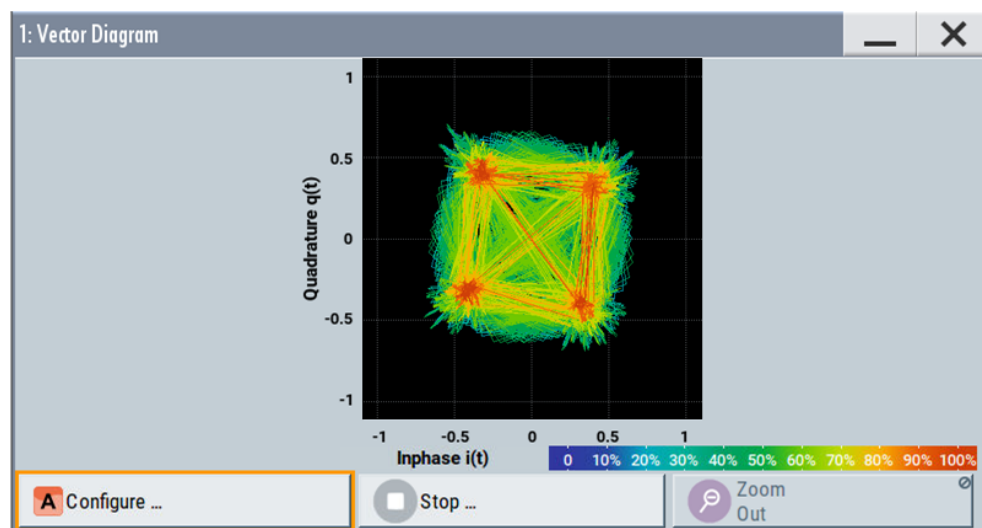


Figure 9-13: Rotating vector diagram

- Reset the baseband frequency offset to 0 Hz.
The vector diagram does not rotate any more.


To visualize the effect of the filter parameters on the generated signal

- Select "Baseband > Custom Digital Mod... > Filter > Roll Off Factor = 0.99"

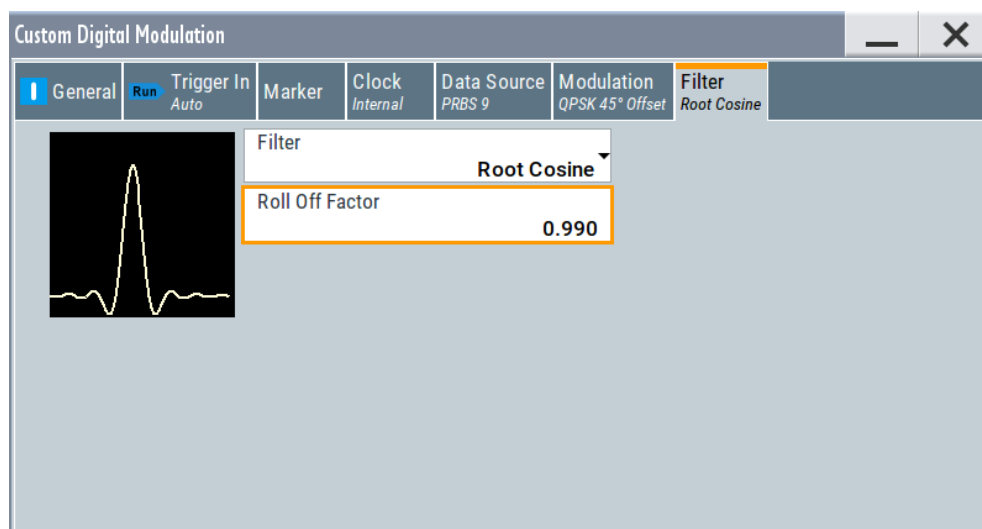

The vector diagram changes.

Displaying baseband signal characteristics in real-time

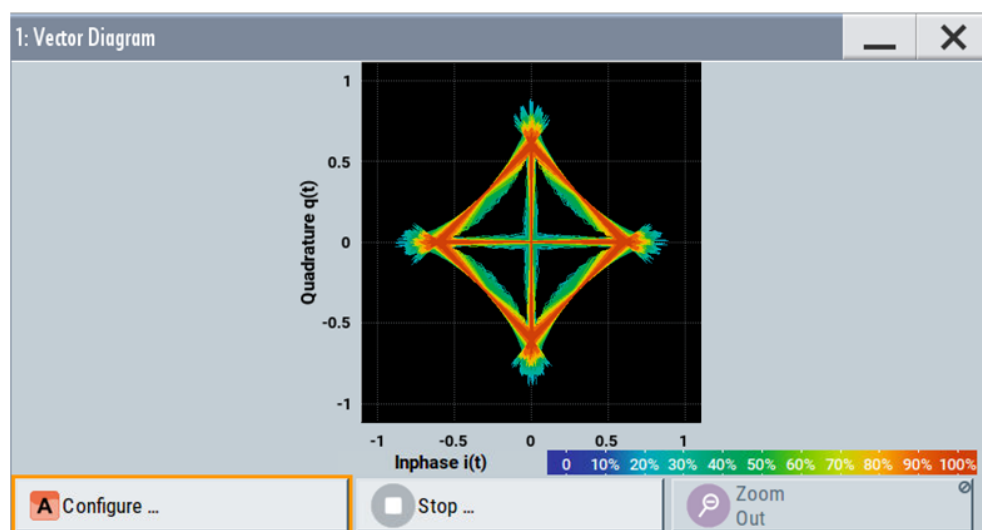


2. Select "Roll Off Factor", open the context menu, and select "Preset this parameter".

To set and verify path gain and routing

The power spectrum diagram is a suitable representation of the effect of these settings.

1. In the vector diagram, select "Graphics... > Mode > Power Spectrum", "Source > RF" and "Apply Changes".

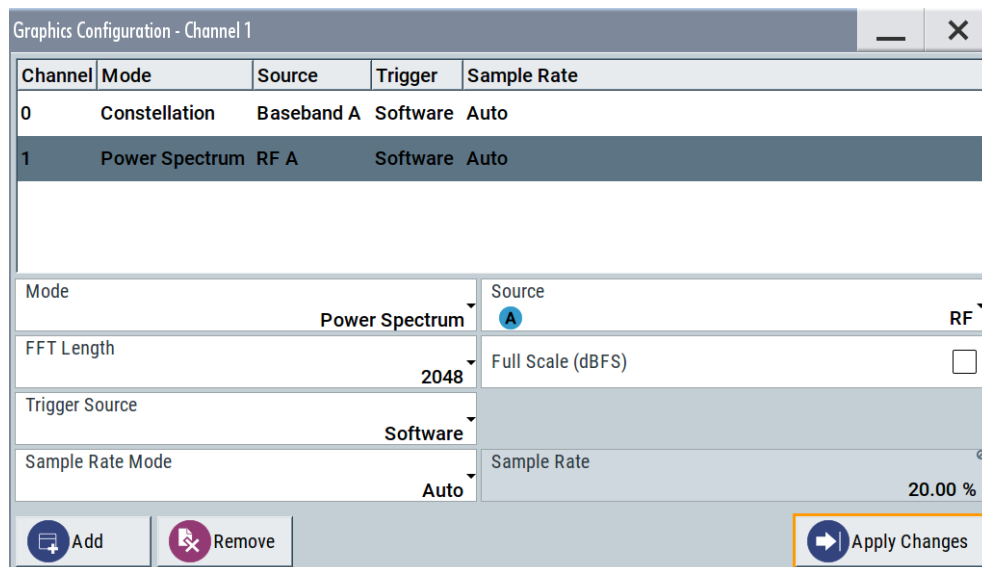

2. Select "Baseband > Baseband Offsets > Baseband > Frequency Offset = 5 MHz".
The power spectrum confirms the shifted WCDMA-3GPP signal.

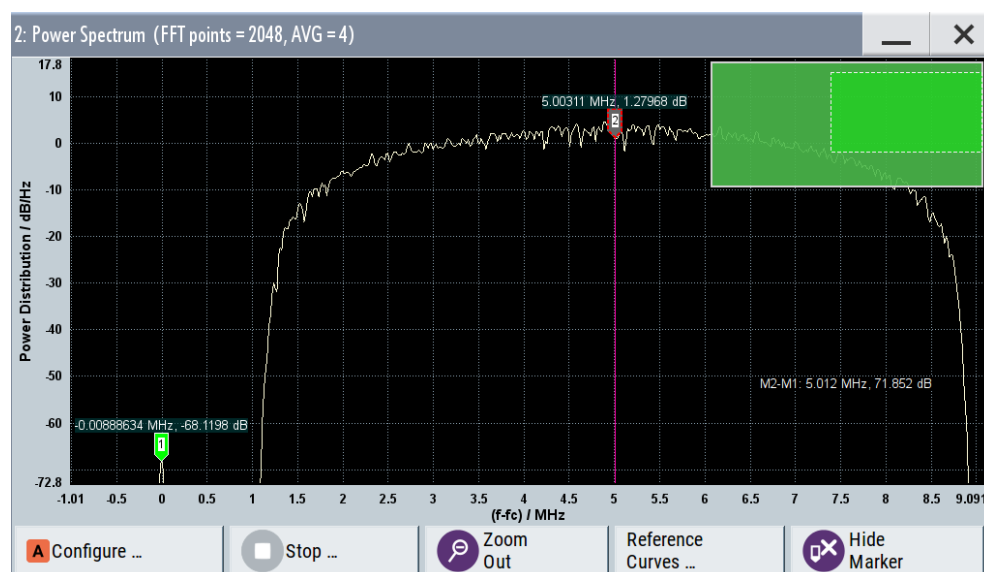


Figure 9-14: Power spectrum with shifted WCDMA-3GPP signal and marker for measuring the offset

3. Select "Baseband B > Custom Digital Modulation > State On" to enable a custom digital modulation with the default GSM signal.
4. Select "Baseband B > Route to path A and B" to route both signals to the first path
5. Select "Baseband B > Baseband Offsets > Baseband B > Path Gain = -30" to attenuate the signal.

Baseband Offsets			
	Frequency Offset /Hz	Phase Offset /°	Gain /dB
Baseband A	5 000 000.00	0.00	0.000
BB Input A	0.00	0.00	0.000
BB Input B	0.00	0.00	0.000
Baseband B	0.00	0.00	-30.000

The power spectrum diagram displays two signals, an attenuated GSM signal and the shifted WCDMA signal.

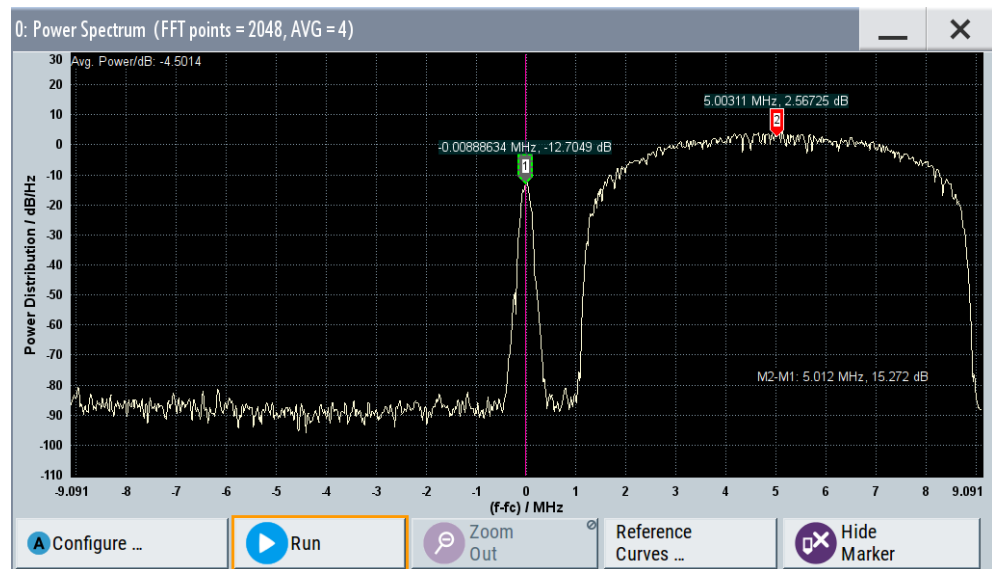


Figure 9-15: Power spectrum with attenuated GSM signal and shifted WCDMA signal

At the RF output, the GSM signal appears attenuated with 15 dB only because the power level is measured with large bandwidth.

For details, see [Chapter 9.2, "Querying information on the baseband power levels"](#), on page 651.

6. Zoom in the relevant area of the diagram.
See ["To zoom into a diagram"](#) on page 647.
7. Enable markers to readout the measured data, for example the frequency offset or the power level of the signals.
See ["To enable markers to readout exact measured data"](#) on page 648.
8. Select "Baseband > Baseband Offsets > Baseband = 0" to disable the frequency offset.
9. Select "Baseband B > State > Off" to disable the GSM signal

To zoom into a diagram

In an enlarged diagram:

1. Use the one-finger zoom to zoom with a fixed zoom factor.
2. Use the two-finger zoom to do a custom zoom.
This zoom works like the two-finger pinching for magnifying images on your cell phone.
If the diagram is zoomed, an overview window appears.
3. Move the visible area in the graphics or in the overview window.
4. For the reverse operation, select "Zoom out".

To enable markers to readout exact measured data

In an enlarged diagram:

1. Select "Show Marker".

Two markers appear, one over the other.

2. To position the markers, select and shift them.

"M2-M1" indicates the distance of marker 1 and marker 2 on the x-axis (left value) and on the y-axis (right value).


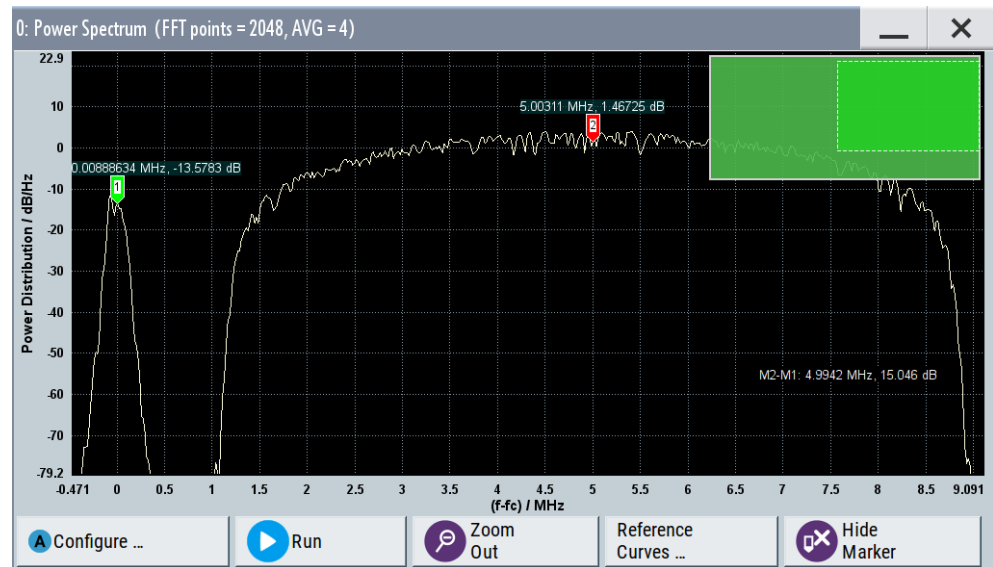


Figure 9-16: Power spectrum with GSM and WCDMA signal and markers

3. To hide the markers, select "Hide Marker".


To observe the effect of fading

We assume that a WCDMA-3GPP signal is generated and you observe the power spectrum diagram. The display confirms the WCDMA-3GPP spectrum with a maximum level at around -30 dBm.

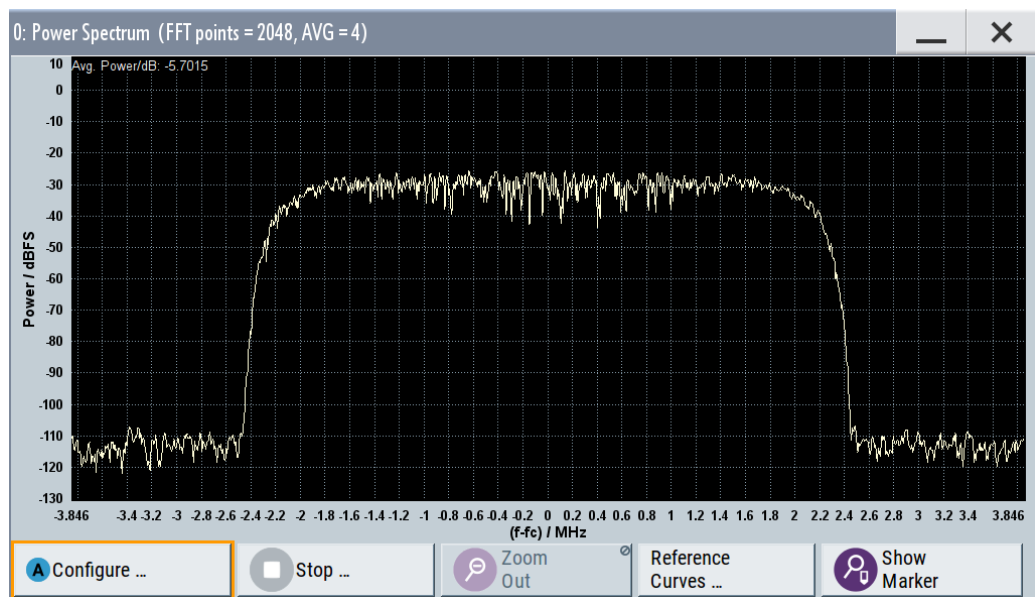

- Select "Fading A > On" to enable the fading simulator.

The power spectrum diagram shows the same shape, but the level changes dynamically.

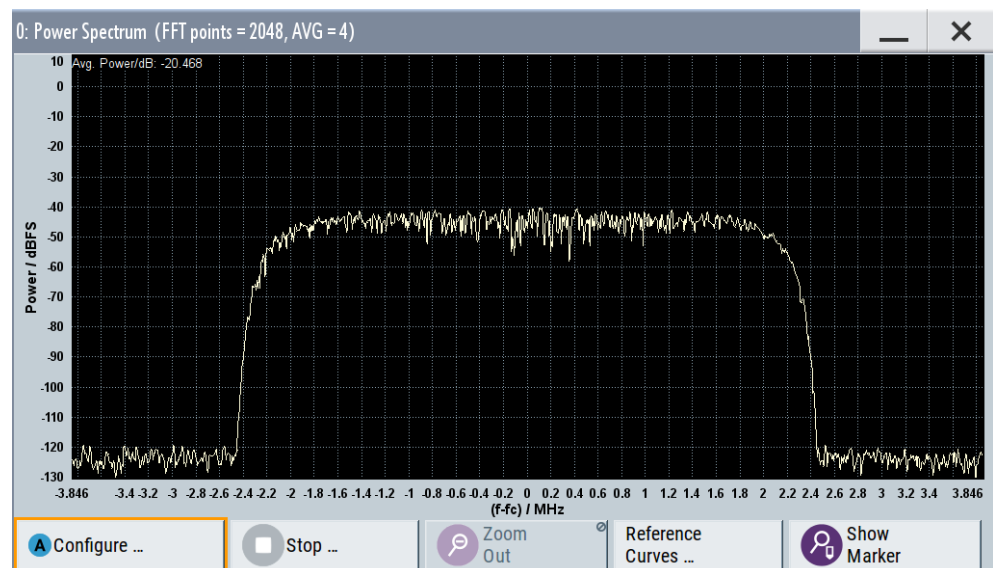

To observe the effect of enabled additive noise (AWGN)


1. Select "AWGN > General > Mode > Additive Noise".
2. Select "AWGN > General > Min Noise/System Bandwidth Ratio = 3".
3. Select "Noise Power / Output Results > Carrier/Noise Ratio = 30 dB".

Displaying baseband signal characteristics in real-time

AWGN Settings	
<div> <div>General</div> <div>Noise Power / Output Results</div> </div>	
Show Powers For Output	RF
Set Noise Power Via	C/N
Carrier/Noise Ratio	30.00 dB
Reference Mode	Carrier
Bit Rate	7.680 000 000 Mbps
Eb/N0	26.99 dB
Carrier Power	-30.00 dBm
Noise Power (System Bandwidth)	-60.00 dBm
Carrier+Noise Power	-30.00 dBm
Noise Power (Total Bandwidth)	-53.87 dBm
Carrier+Noise PEP	-25.07 dBm
Noise Bandwidth	11.520 0 MHz

4. Select "AWGN > State > On"
5. Observe the power spectrum display.

In addition to the changing level from fading, the power spectrum shows a noise floor with constant level and the spectrum of the digitally modulated signal (in this case the WCDMA signal with a bandwidth of 3.84 MHz).

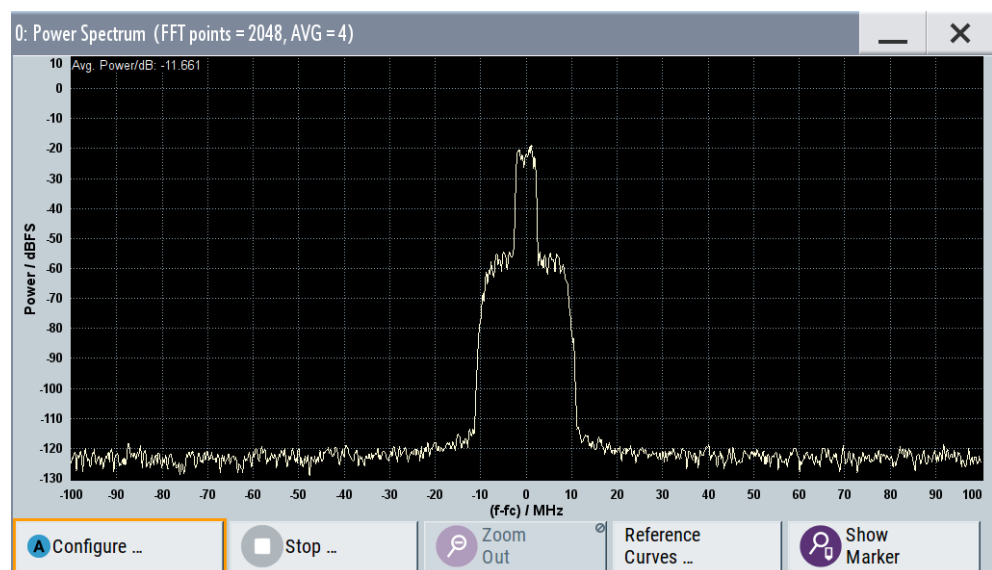

To print current power spectrum

1. Press HCOPI.
2. Use the default settings and select "Save".

The instrument creates a screenshot of the current screen and stores it in a file with a predefined filename in the default user directory `/var/user/`.

See [Chapter 11.10, "Creating screenshots of current settings"](#), on page 732.

3. Use one of the standard file transfer methods to access the user directory of the instrument. Transfer the file to a PC.

See [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.

4. Print the file content.

9.2 Querying information on the baseband power levels

The R&S SMW fulfills the requirements for a flexible configuration of signal power at different processing points of the signal flow. This great flexibility, however, leads to a variety of interdependent parameters grouped in different dialog boxes. This section focuses on the "Baseband Powers" measurement functionality provided for retrieving the power and peak power of the digital baseband signal at configurable acquisition points. E.g., at the input or the output of the fading block, the I/Q output connectors, etc. The provided measurement results are based on signal measurement with different acquisition methods.

The [Chapter 9.2.2, "About leveling"](#), on page 651 provides general information on leveling as well as a background information on the leveling principle used in the instrument. Understanding of this principle is a prerequisite for the correct interpretation of the displayed measurement results.

Refer to [Chapter 9.2.4, "How to query information on the baseband power levels"](#), on page 660 for examples on using the baseband power measurements.

9.2.1 Required options

The minimum equipment layout for using this function includes

- Option Standard Baseband Generator (R&S SMW-B10) per signal path
- Option Baseband main module, one/two I/Q paths to RF (R&S SMW-B13/-B13T)

9.2.2 About leveling

The instrument provides different signal routing possibilities, involving also signal summing and enabling of power offsets.

This section does not focus on all possible alternatives but rather on the principle of signal leveling. For detailed description refer to:

- [Chapter 4.2, "Possible ways to configure the signal flow"](#), on page 112
- [Chapter 4.5, "Signal routing settings"](#), on page 157
- [Chapter 4.2.2, "Using the system configuration capabilities"](#), on page 113
- [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135
- [Chapter 5.14, "Shifting and boosting the baseband signal"](#), on page 428
- [Chapter 6.2, "Adding noise to the signal"](#), on page 435

Baseband leveling principle

In the R&S SMW, signal routing is performed in the digital domain, i.e. before the I/Q modulation and the RF upconversion. This implementation ensures a lossless signal addition with high precision. In the digital domain however, real RF levels do not exist. To let you define baseband signals with different average levels, the R&S SMW introduces the concept of baseband leveling. This principle bases on a *relative leveling of the baseband signals in the digital domain*.

By default, when two identical baseband signals are added, they are output at the RF output with the equal average levels. To set a relative level between the baseband signals, use one of the possible alternatives, e.g:

- Enable "Baseband > Baseband Offsets > Gain".
- In MIMO configurations, select "Fading > Fading Settings" and adjust the MIMO correlation matrix.
- In non-MIMO configurations, enable "Fading > Summation Ratio A/B".

9.2.2.1 Why is a power level surveillance important

When routing the signal to the I/Q output connectors of the instrument, adding signals from several baseband sources and/or applying baseband power offsets or fading the signal, the signal power is an important parameter.

For example, when measuring the power after fading the peak and RMS power values can fluctuate significant due to the varying channel state information (CSI) of the fading process. The retrieving of correct measurement results for the faded signal requires not only a suitable acquisition point but also a sufficient (long enough) measurement time to allow the power results to converge reliable values for the long channel state information. Similar situation and requirements apply when measuring the carrier power and the carrier+noise power before and after an AWGN block.

Use the observed information for an evaluation and verification of the correct signal processing throughout the instrument and for a correct adjustment of the power settings at the connected device.



The power values observed in the "Baseband Power Simulation" dialog are suitable as control mechanism. The values cannot be modified to influence the power and level control in the instrument.

9.2.2.2 Defining suitable acquisition points

The [Figure 9-17](#) shows an overview of the possible signal acquisition points.

Querying information on the baseband power levels

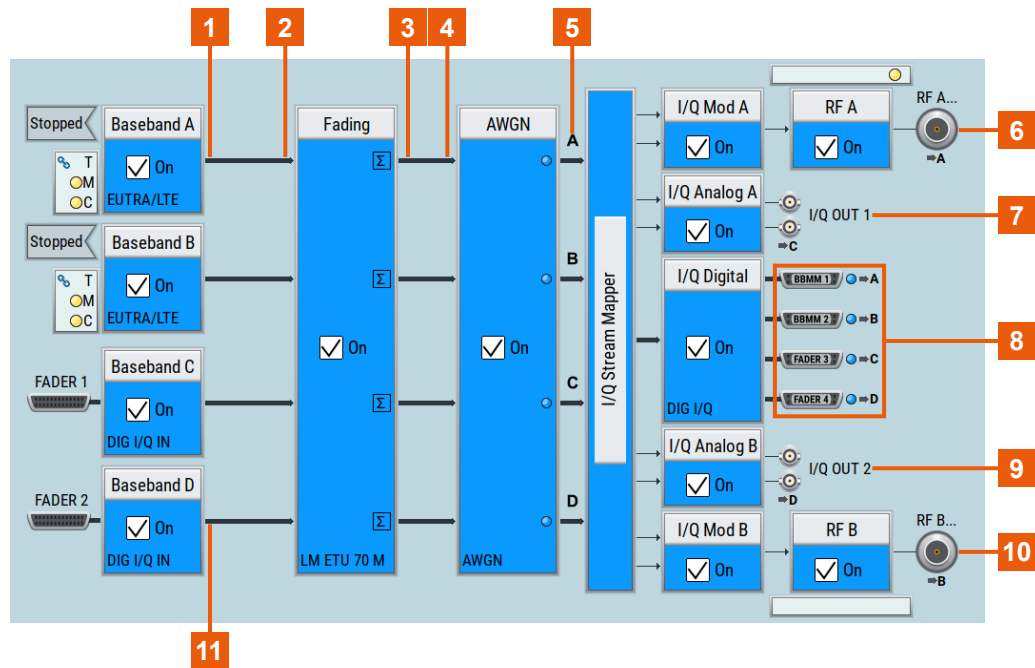


Figure 9-17: Overview of the acquisition points (source) and output points

- 1 = Baseband A/B/C/D
- 2 = Fading Input A/B/C/D
- 3 = Fading Output A/B/C/D
- 4 = AWGN Input A/B/C/D
- 5 = Stream A/B/C/D
- 6, 10 = output: RF A/B (A/B)
- 7, 9 = output: I/Q Out 1/2 (C/D)
- 8 = output: Dig I/Q Out BBMM 1/2 (A/B), FADER 3/4 (C/D)
- 11 = BB Input C/D

- Depending on the current routing, the signal at the input of the fading blocks (2) can be:
 - One of the basebands (1)
 - The sum product of the corresponding internal baseband and externally applied digital baseband signal (11).
 Enabled power offsets are considered.
- The signal at the fading output (4) is the faded signal if fading is enabled or the sum product of the input signals if summation after the fading is performed. Enabled power offset is considered.
- The signal measured at the acquisition points "Stream A/B/C/D" (5) is the signal after the AWGN block (3). Depending on the AWGN settings, performed are measurement on interference-free digital I/Q baseband signal or the signal superimposed by the noise generator AWGN.
- The points (6) to (10) represent the possible outputs for the corresponding analog, digital or RF output. The measured values are displayed in the current units of the corresponding output.

Enabled power offsets are considered (see also [Chapter 9.2.2.4, "Understanding the displayed measurement results"](#), on page 655).

9.2.2.3 Selecting a suitable acquisition method

The provided measurement results are based on signal measurement with different acquisition methods. Select the acquisition method most fitting to your current task.

Depending on whether the displayed power values are pre-calculated or measured, there are two acquisition approaches:

- Static results
In "Nominal" acquisition mode, the displayed power and peak values are statistical *theoretical* values as calculated by the instrument.
- Measured results
 - "Continuous"
The displayed power values are determined upon analysis of the complete signal. The sweep time of the performed measurement is selectable, see ["Sweep Time/Duration"](#) on page 658.
This acquisition method is suitable for measurements of continuous signals, the sum product of correlated signals, and time varying signals
 - "Gated"
The displayed single RMS and peak values are determined upon evaluation of a specific signal segment; the values are the result of one measurement of signal segments at which a selected marker signal is high. Any of the "Marker 1/2/3" can be used, where the marker signals always relate to the current baseband signal source.
 - "Multi Gated"
In this acquisition mode, the instrument initiates a set of submeasurements and displays the measurement results separately on different lines.
The measurement function uses the two used-defined marker signals, the "Marker 2/3", as they are enabled for the current baseband signal source. The signal "Marker 2" serves as an "init. marker signal" signal that determines the repetition window; the signal "Marker 3" is a user defined marker signal and defines different gates in this repetition window. The term gate describes the time from a rising edge to a subsequent falling edge of the marker signal. For example, the "Marker 3" signal illustrated on [Figure 9-18](#) defines three gates.



Figure 9-18: Marker signals used in multi-gated acquisition measurement

Marker 2 = init. marker signal

Marker 3 = user-defined marker signal

In multi-gated acquisition mode, the measured values of different gates are displayed as separate submeasurements, i.e. not combined in one result as in the gated mode. However, the submeasurement results for the same gate index performed in consecutive repetition windows are combined to smoothen RMS and peak power depending on measurement duration / sweep time.

Note: We recommend that you configure up to 32 submeasurements per measurement, i.e. 32 gates in a repetition window. The repetition window is defined by marker 2 and has to be longer than 100 ms.

This acquisition method is suitable for power measurements on burst signals or pulse signals with different duty cycles. Like, for example, measurement on a periodic signal composed of a preamble, sounding channel and data, where each of these three fields is transmitted with different power.



The displayed power values are suitable as control mechanism. The values cannot be modified to influence the power and level control in the instrument.

A combination of different measurements acquisition methods can be enabled at each acquisition point. The measurement results are displayed simultaneously in a list.

Refer to [Chapter 9.2.4, "How to query information on the baseband power levels"](#), on page 660 for examples on using the provided acquisition methods and their application fields.

9.2.2.4 Understanding the displayed measurement results

The following rules apply by the calculation and display of the measurement results:

- The displayed power values refer to the selected [Output](#)
- As a reference value serves the 0dBfs level.
- The results are displayed in the current units of the corresponding [Output](#)
For example, if an R&S SGT is connected to one of the DIG I/Q Out interfaces, the results are displayed in dBm; the instrument name is also indicated.

Example: Results calculation and interpretation at the analog I/Q Out

Enable the following settings in the "I/Q Analog > Analog I/Q Output Settings" dialog:

I/Q Analog Outputs A

General | Digital Impairments

☒ RF Envelope

I/Q Output Type: **Single Ended** | Mode: **Variable**

I/Q Level Vp (EMF): **1.200 0 V** | Couple I/Q Bias: ☐

I Settings	Q Settings
Bias (EMF): 0.0 mV	Bias (EMF): 0.0 mV

Buttons: Set To Default, Recall, Save

In the "Setup > General > Baseband Powers Simulation" dialog, enable a power measurement with the following properties:

- "Source > Baseband A"
- "Output > I/Q Out 1"
- "Acquisition > Nominal"
- "I/Q level Vp (EMF) = 1.2 V"

A full scale value before the IQ modulation corresponds to 1.2 V. A -6 dBFS value for RMS or peak would then correspond to 0.6 V.

Example: Results calculation at the RF output

The reference value for the power calculation at the RF outputs is the "Level" value, as displayed in the status bar. A configured power offset, for example "RF > RF Level > Offset" are considered.

Set the "RF Level = 5 dBm"

In the "Setup > Baseband Powers Simulation" dialog, enable a power measurement with the following properties:

- "Source > Baseband A"
- "Output > RF A"
- "Acquisition > Nominal"

The display shows "PEP = 15 dBm", "Level = 5 dBm"

9.2.3 Baseband powers settings

Access:

- Select "Taskbar > System Config > Setup > General > Baseband Powers".

Source	Output	Acquisition	Gate	Sweep Time / s	Progress / %	PEP	Level
Baseband A	RF A	Continuous	None	1	0.00	-22.08 dBm	-33.02 dBm
Baseband B	RF A	Continuous	None	1	0.00	-25.08 dBm	-36.02 dBm
Fading Out A	RF A	Continuous	None	1	0.00	-20.45 dBm	-31.40 dBm
Baseband A	I/Q Out 1	Continuous	None	1	0.00	0.707 V	0.201 V

Source: Baseband A, Output: RF A, Acquisition: Continuous, Gate Source: None, Sweep Time: 1.000 s

Buttons: Add, Change, Remove, Run Mode: Auto, Abort, Running

The dialog provides a summarized information on the important baseband level parameters, like power level and peak power (PEP) of selectable acquisition points.

The remote commands required to define these settings are described in [Chapter 14.19.4.8, "SOURce:BB:MEASurement subsystem"](#), on page 1188.

Settings:

BB Powers Summary List	657
Source/Output	658
Acquisition	658
Gate Source	658
Sweep Time/Duration	658
Level/PEP	659
Run Mode	659
Add, Change, Remove, Start, Abort	659
Running/Stopped	660

BB Powers Summary List

Displays the measurement results of all currently enabled measurements.

You can configure and enable up to 8 measurements simultaneously. To enable a new measurement or to change the settings of an existing one, use the [Add](#), [Change](#), [Remove](#), [Start](#), [Abort](#) functions.

"Progress %" Indicates the status of an initiated measurement.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:PROGress?](#) on page 1192

Source/Output

Determines the start and end point for the power measurement, i.e. determines the influence of which source signal is measured at which output point. Available are measurements at all input and output interfaces of each block belonging to the baseband domain.

The available acquisition points depend on the current "System Configuration > Fading/Baseband Configuration".

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:SOURce](#) on page 1189

[\[:SOURce\]:BB:MEASurement:POWer:OUTPut](#) on page 1189

Acquisition

Determines the used acquisition method, see [Chapter 9.2.2.3, "Selecting a suitable acquisition method"](#), on page 654.

Refer to [Chapter 9.2.4, "How to query information on the baseband power levels"](#), on page 660 for examples on using the provided acquisition methods and their application fields.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:ACQuisition](#) on page 1190

Gate Source

In gated and multi-gated measurements, sets/displays the signal used to determine the signal part to be measured.

With "Acquisition > Gated", the starting point of the signal measurement is determined by one of the marker signals "Marker 1/2/3", as enabled for the current baseband signal source.

With "Acquisition > Multi Gated", the instrument uses the "Marker 2" and "Marker 3" signals, see [Figure 9-18](#).

See also [Chapter 9.2.4, "How to query information on the baseband power levels"](#), on page 660.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:GSOURCE](#) on page 1190

Sweep Time/Duration

Depending on the selected [Run Mode](#), determines the measurement duration/sweep time of the performed measurement.

Note:

Especially if a fading is enabled, it is important to trigger the measurement with an appropriate duration. To ensure correct obtained average values:

- Enable a "Run Mode > Single"
- Select a measurement period that is long enough to average the fading signal and the channel state information.

In "Acquisition > Gated", the value of the parameter "Sweep Time/Duration" relates to the effective time during that the signal is measured; the duration is determined by the corresponding marker/markers signal (high values) and not to as an absolute duration/sweep time.

Example:

A measurement with the following settings:

- "Acquisition > Gated"
- Duty cycle of the marker signal used as gate source = 1%
- "Duration/Sweep Time = 1 s"

This measurement lasts effectively 100 s.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:DURation](#) on page 1192

Level/PEP

Indicates the measured power level and peak power (PEP) retrieved according to the selected acquisition method and at the selected acquisition point.

The power units depend on the selected output measurement point:

- Measurements at the digital output interfaces (for example [BBMM1]) are represented in dBfs, as relative to full scale of 0.5 V
- Measurements at the analog interfaces [I/Q] in mV respectively
- All other measurement results are represented in dBm.

Possible internal gains and attenuations are compensated.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:PEAK?](#) on page 1191

[\[:SOURce\]:BB:MEASurement:POWer:RMS?](#) on page 1191

Run Mode

Determines whether the measurements are performed continuously with the selected "Sweep Time" ("Auto") or are executed once ("Single").

"Auto" This mode is suitable for measurements with short "Sweep Time" and if several measurements are running simultaneously.

The measurement results are retrieved and updated continuously.

"Single" This mode is suitable for measurements with longer measurement time ("Duration").

See also [Chapter 9.2.4, "How to query information on the baseband power levels"](#), on page 660.

Remote command:

[\[:SOURce\]:BB:MEASurement:POWer:RMODe](#) on page 1190

Add, Change, Remove, Start, Abort

Standard function for measurements handling, like enabling a new measurement, changing an existing one or starting/stopping current measurement. You can configure and enable up to 8 measurements simultaneously, each with up to 32 submeasurements.

To retrieve information on the status of an initiated measurement, observe the "Progress" indication in the [BB Powers Summary List](#) and the [Running/Stopped](#) indication.

Remote command:

[:SOURce] :BB:MEASurement:POWer:ADD on page 1191
 [:SOURce] :BB:MEASurement:POWer:INDEX on page 1192
 [:SOURce] :BB:MEASurement:POWer:CHANGE on page 1193
 [:SOURce] :BB:MEASurement:POWer:DELeTe on page 1193
 [:SOURce] :BB:MEASurement:POWer:EXECute on page 1193
 [:SOURce] :BB:MEASurement:POWer:ABORt on page 1193

Running/Stopped

Displays the status (running/stopped) of the current measurement.

Remote command:

[:SOURce] :BB:MEASurement:POWer:RState? on page 1191

9.2.4 How to query information on the baseband power levels


The examples in this section explain how to enable the baseband power measurements with different acquisition methods to measure different kind of signals. The measurements require a baseband signal. In these examples, we use a base unit equipped with the firmware option R&S SMW-K54 IEEE 802.11a/b/g/n and generate a WLAN signal with suitable frame and marker configuration.

The following tasks do not require special knowledge on the WLAN IEEE 802.11 standard; a basic understanding on working with the option is however a prerequisite.


To perform baseband power measurements using the continuous acquisition

The baseband power measurements using continuous acquisition analyze the complete signal. Perform the following settings to generate a non-burst WLAN 802.11n signal in "Baseband A", "Baseband B", route, and sum both signals and measure the influence of the baseband signals on the generated signal in all these cases.

1. Press the PRESET key.
2. In the block diagram, select "Baseband A > IEEE 802.11" and perform the following:
 - a) Select "IEEE 802.11 WLAN > Frame Blocks > Idle Time = 0"
 - b) Select "IEEE 802.11 WLAN > General > State > On"

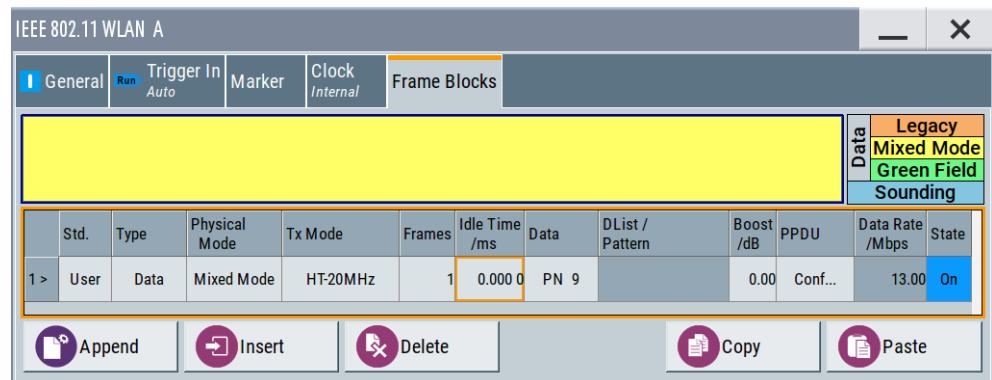

3. In the task bar, select "System Config > Setup > Baseband Powers" and perform the following:
 - a) "Source > Baseband A"
 - b) "Output > RF A"
 - c) "Acquisition > Continuous"
 - d) "Sweep Time = 1 s"
 - e) "Run Mode > Auto"
 - f) Select "Add"
 - g) Select "Start" to trigger the measurement.

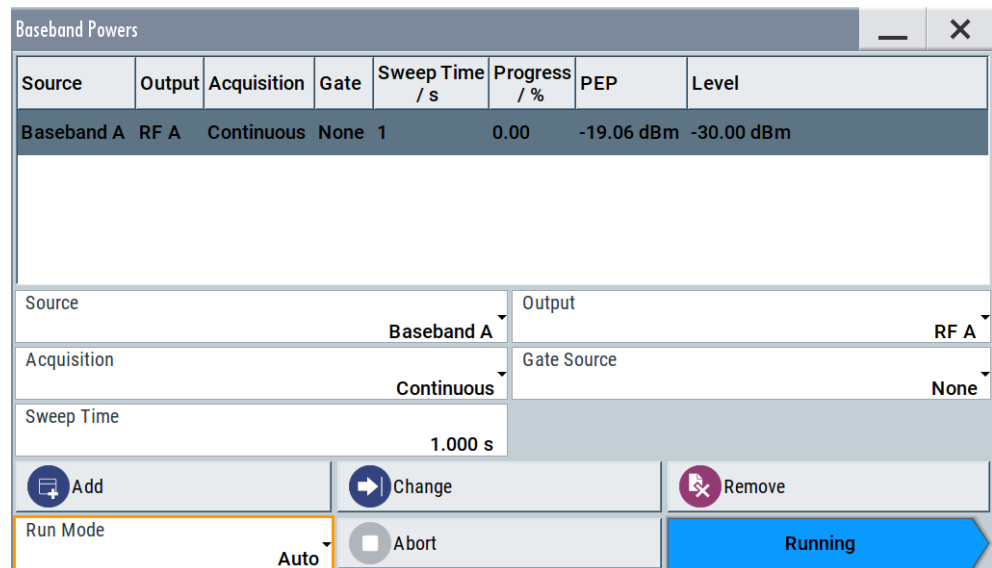

The measurement is running automatically with sweep time of 1 s.

The dialog displays the measured values in the units of the RF output signal: "Level = -30 dBm" and "PEP = -19.06 dBm". These values are identical to the "Level" and "PEP" values displayed in the status bar.

4. In the block diagram, select "Baseband B > IEEE 802.11" and enable the same settings as in the first baseband.
5. Select "Baseband B > Signal Routing > Route to Path A and Path B".

The signals of "Baseband A" and "Baseband B" are summed and routed to the RF A output.

6. In the task bar, select "System Config > Setup > Baseband Powers", enable a second analogical measurement with "Source > Baseband B" and select "Start".

Source	Output	Acquisition	Gate	Sweep Time / s	Progress / %	PEP	Level
Baseband A	RF A	Continuous	None	1	0.00	-22.07 dBm	-33.01 dBm
Baseband B	RF A	Continuous	None	1	0.00	-22.07 dBm	-33.01 dBm

Source: Baseband B, Output: RF A, Acquisition: Continuous, Gate Source: None, Sweep Time: 1.000 s

Buttons: Add, Change, Remove, Run Mode (Auto), Abort, Running

Two simultaneous measurements are running.

The dialog displays identical measured values "Level = -33.01 dBm" and "PEP = -22.07 dBm" for both measurements.

In the R&S SMW, when two identical baseband signals are added, they are output at the RF output with equal average levels. The parameter "Status bar > Level = -30 dBm" determines the level of the sum signal at the RF output; logically, the measured level values for each of the baseband signals are 3.01 dB lower than this sum level.

7. In the block diagram, select "Baseband B > Baseband Offsets" and enable "Baseband B > Gain > -3 dB".

	Frequency Offset /Hz	Phase Offset /°	Gain /dB
Baseband A	0.00	0.00	0.000
BB Input A	0.00	0.00	0.000
BB Input B	0.00	0.00	0.000
Baseband B	0.00	0.00	-3.000

Both baseband signals are summed but the signal of "Baseband A" is 3 dB higher than "Baseband B" in the second path.

- Open the "Baseband Powers" dialog, select "Start", and compare the measurement results.

Source	Output	Acquisition	Gate	Sweep Time / s	Progress / %	PEP	Level
Baseband A	RF A	Continuous	None	1	0.00	-20.82 dBm	-31.76 dBm
Baseband B	RF A	Continuous	None	1	0.00	-23.82 dBm	-34.76 dBm

Source: Baseband B, Output: RF A, Acquisition: Continuous, Gate Source: None, Sweep Time: 1.000 s

Buttons: Add, Change, Remove, Run Mode (Auto), Abort, Running

The influence of both signals on the output RF signal is different; the measured values confirm that the signal of "Baseband B" is 3 dB lower than the signal of the "Baseband A". The level of the sum signal is still $-31.76 \text{ dBm} + -34.76 \text{ dBm} = -30 \text{ dBm}$.

The measurements are performed once ("Run Mode > Single"); the measurement time is determined by the selected "Duration".

The displayed measured values are accurate and differ from the theoretical nominal values.

The baseband power measurements consider enabled power offsets and signal routing. With suitable acquisition points and method, you can measure the influence of an enabled fading simulator or detect the configured signal-to-noise value in the AWGN generator.


To perform baseband power measurements on bursted signals using the gated acquisition

The baseband power measurements using gated acquisition use marker signals to determine the particular part of the signal to be analyzed. Perform the following settings to generate a bursted WLAN 802.11n signal consisting of two frame blocks with idle periods between them.


- Press the PRESET key.
- In the block diagram, select "Baseband A > IEEE 802.11" and perform the following:

Querying information on the baseband power levels


- a) Select "IEEE 802.11 WLAN > Frame Blocks > Append", configure "Frame Block#2 > Boost = -5 dB" and "Frame Block#2 > State = On"
- b) Select "IEEE 802.11 WLAN > General > State > On".

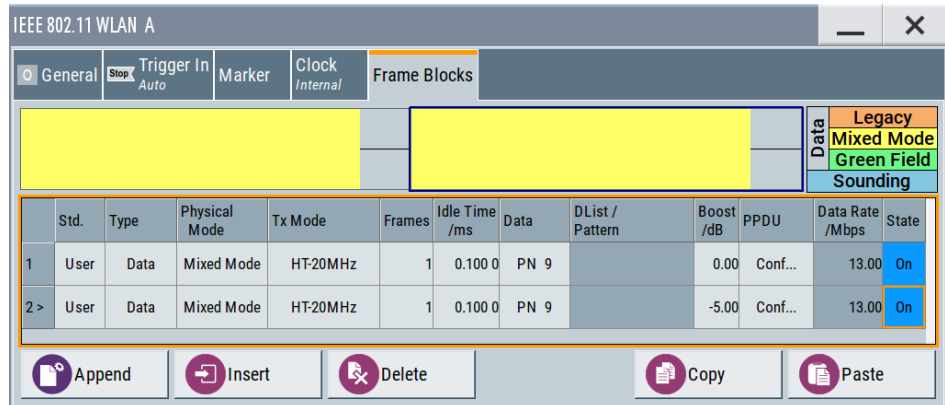

- c) Select "IEEE 802.11 WLAN > Marker" and enable two marker signals, each one indicating of the PPDU part of the frame block:
 - "Marker Mode > Marker 1 > Frame Active Part", "Frame Block Index = 1", "Frame Index = 1"

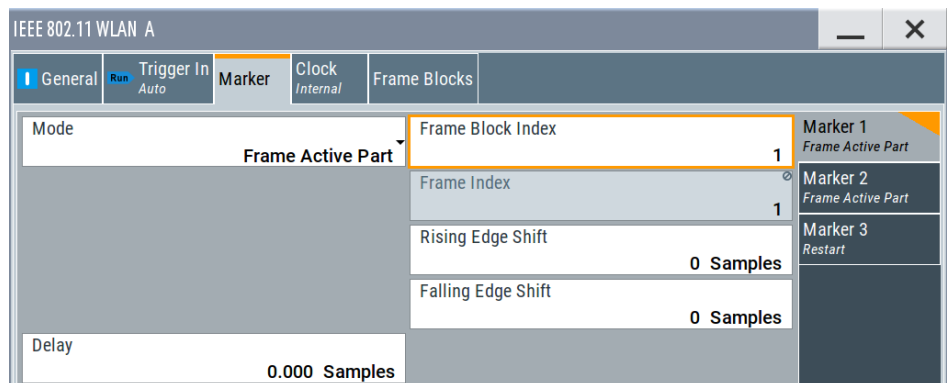

- "Marker Mode > Marker 2 > Frame Active Part", "Frame Block Index = 2", "Frame Index = 1"

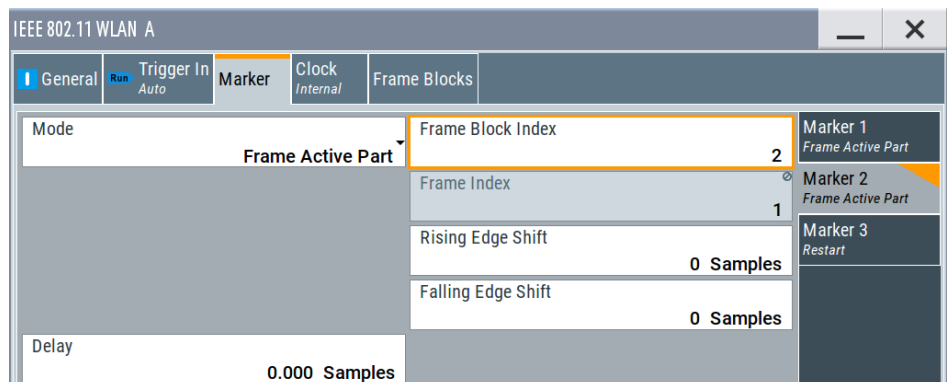

3. In the task bar, select "System Config > Setup > Baseband Powers" and perform the following:
 - a) "Source > Baseband A" and "Output > RF A"

- b) "Acquisition > Gated" and "Gate Source > Marker 1"
- c) "Duration = 1 s" and "Run Mode > Single"
- d) Select "Add" and "Start" to trigger the measurement.

Source	Output	Acquisition	Gate	Duration / s	Progress / %	PEP	Level
Baseband A	RF A	Gated	Marker 1	1	100.00	-19.06 dBm	-30.00 dBm

Source	Baseband A	Output	RF A
Acquisition	Gated	Gate Source	Marker 1
Duration	1.000 s		

Add	Change	Remove
Run Mode	Single	Start
		Stopped

Performed is one single measurement. The signal "Marker 1" indicates the active part of the first frame block. The measured result confirms the expected level of -30 dBm ("Frame Block#1 > Boost = 0 dB").

4. Select "Gate Source > Marker 2", select "Change", and trigger the measurement with "Start".

Source	Output	Acquisition	Gate	Duration / s	Progress / %	PEP	Level
Baseband A	RF A	Gated	Marker 2	1	100.00	-19.06 dBm	-35.00 dBm

Source	Baseband A	Output	RF A
Acquisition	Gated	Gate Source	Marker 2
Duration	1.000 s		

Add	Change	Remove
Run Mode	Single	Start
		Stopped


Performed is one single measurement. The signal "Marker 2" indicates the active part of the second frame block. The measured result confirms the expected level of -35 dBm ("Frame Block#2 > Boost = -5 dB").

To perform baseband power measurements on bursted signals using the multi-gated acquisition

The baseband power measurements using multi-gated acquisition use marker signals, "Marker 2" and "Marker 3", to determine the measurement period and the particular part of the signal to be analyzed. Perform the following settings to generate a bursted WLAN 802.11n signal consisting of three frame blocks with short active part and different long idle periods between them.

This example is based on the predefined marker signals. The goal is to capture and measure the short active frame parts to explain the measurement in principle. In your particular case, you would rather measure some exact signal parts or even frame parts and you may have to define one or more customized marker signals.

1. Press the PRESET key.
2. In the block diagram, select "Baseband A > IEEE 802.11" and perform the settings shown on the following figure:

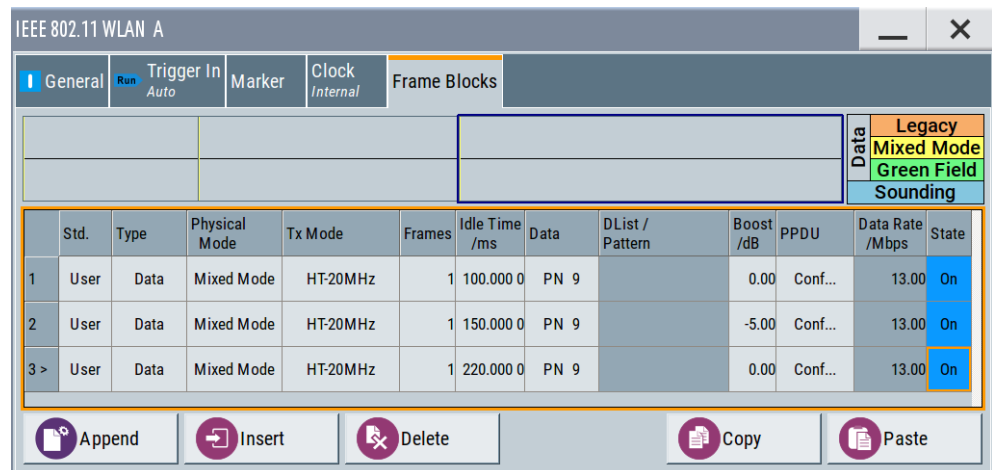

The baseband signal is a bursted signal with different and short duty cycles of around 1%.

3. Select "IEEE 802.11 WLAN > Marker" and enable the two required marker signals. The Figure 9-19 shows an example of a possible marker configuration for measuring the baseband power of the second frame block.

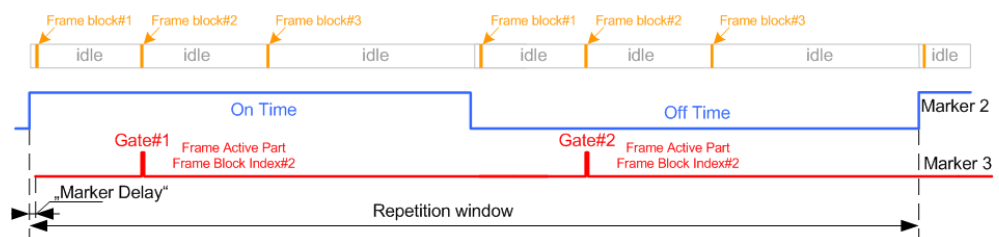


Figure 9-19: Example: Marker configuration for multi-gated baseband power measurements.

Perform, for example, the following:

- a) Select "Marker > Marker 2 > On/Off Ratio", "On Time = 16 MSamples", "Off Time = 16 MSamples".

IEEE 802.11 WLAN A			
General	Run	Trigger In Auto	Marker
Mode		On/Off Ratio	
		On Time	16 000 000 Samples
		Off Time	16 000 000 Samples
Delay			0.000 Samples
		Marker 1	Frame Active Part
		Marker 2	On/Off Ratio
		Marker 3	Frame Active Part

The signal "Marker 2" determines the repetition window; the selected "On Time" is long enough so that the measurement captures several gates defined by the "Marker 3" signal.

- b) Select "Marker Mode > Marker 3 > Frame Active Part" and "Frame Block Index = 2".
- c) Select "Marker Delay > Marker 3 > 5 Samples" to make sure that this marker signal is within the measurement period.

IEEE 802.11 WLAN A			
General	Run	Trigger In Auto	Marker
Mode		Frame Active Part	
		Frame Block Index	2
		Frame Index	1
		Rising Edge Shift	0 Samples
		Falling Edge Shift	0 Samples
Delay			5.000 Samples
		Marker 1	Frame Active Part
		Marker 2	On/Off Ratio
		Marker 3	Frame Active Part

4. Select "IEEE 802.11 WLAN > General > State > On".

5. In the task bar, select "System Config > Setup > Baseband Powers", enable the settings shown on the following figure, and select "Start" to trigger the measurement.

Source	Output	Acquisition	Gate	Duration / s	Progress / %	PEP	Level
Baseband A	RF A	Multi Gated	Multi Gated	0.1	100.00	-24.06 dBm	-35.00 dBm
						-24.06 dBm	-35.00 dBm
						-24.06 dBm	-35.00 dBm
						-24.06 dBm	-35.00 dBm

Source	Baseband A	Output	RF A
Acquisition	Multi Gated	Gate Source	Multi Gated
Duration	0.100 s		

Add	Change	Remove
Run Mode	Single	Start Stopped

The single measurement is started and lasts a given measurement time. Observe the progress indication for information on the current progress status. The delivered measurement results of the submeasurements confirm the expected level value of -35 dBm for the second frame block. All submeasurements retrieve equal values because the selected repetition window is large and the measurement captures two gates (two frame active parts of the frame block 2).

10 Multi-instrument setups

R&S SMW is rarely used as a standalone instrument. Usually, the instrument is connected to a device under test (DUT) or other measurement equipment.

Test setups have different requirements, for example:

- Test setups comprising two or more instruments often require a common reference frequency.
- Generation of beamforming signals requires phase coherent signals.
- Some test setups also require control of the signal generation start and an exact generation start time, for example determined by a defined trigger event.
- In other cases, you would need time-aligned simultaneous signals within the instrument or possibly also between multiple instruments.
- MIMO test scenarios can require more than two RF signals, generated by processing the I/Q output signals of the R&S SMW by external instruments like the R&S SGT or the R&S SGS.
- Radar echo generation requires a connected R&S FSW.
- etc.

R&S SMW provides several settings that help fulfilling these requirements. This section explains main principles and gives an overview of the related settings and step-by-step instructions.

• Synchronizing instruments	669
• Generating phase-coherent signals	669
• Generating time-aligned baseband signals	670
• Generating phase-coherent synchronous and aligned signals	679
• Control and operation of external instruments	696

10.1 Synchronizing instruments

For information on the possible scenarios concerning the distribution of reference frequency, test setups and the related settings:

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

10.2 Generating phase-coherent signals

The R&S SMW provides a build-in function that allows a distribution of the local oscillator signal in a way that multiple RF signals can be derived from the same LO signal. LO coupling is mandatory for minimizing the phase fluctuations between these RF signals, as it is, for example, required for the generation of beamformed signals.

For information on the possible scenarios, test setups and the related settings:

See [Chapter 8.9, "Local oscillator coupling"](#), on page 504.

10.3 Generating time-aligned baseband signals

In test setups that combine the signal of two or more instruments and/or basebands it is often required that:

- The signal generation starts at a defined moment
- The signal generation starts simultaneously (or with an exactly defined delay) in:
 - All involved instruments
 - All basebands of the same R&S SMW

One possible way to achieve quasi-simultaneous signal start is to trigger the instruments by the same trigger event, for example from a **common trigger source**.

Because of the trigger signal propagation time and the signal processing time, however, this method does not achieve precise time aligned signals.

To generate **synchronous and time aligned signals** with multiple instruments, use the primary-secondary instrument mode.

This section explains how to use the provided settings to define the signal generation start in the basebands of **multiple instruments**.

For information on simultaneous signal generation in the basebands of the same R&S SMW, see ["Simultaneous signal generation start in all basebands"](#) on page 253.

- [Connecting multiple instruments in primary-secondary instrument mode](#).....670
- [Triggering several instruments with a common trigger signal](#)..... 678

10.3.1 Connecting multiple instruments in primary-secondary instrument mode

About the primary-secondary instrument mode

When connected in primary-secondary instrument mode, two or more R&S SMW or one R&S SMW and several other signal generators such as R&S SGT or R&S SMBV can generate synchronous and time aligned signals.

In this mode, the primary instrument generates and outputs a dedicated synchronization signal (Sync Out), that has to be fed into the secondary instrument. The secondary instrument detects and demodulates the signal, and retrieves both the baseband clock and the trigger signal from it. Secondary instruments can forward the received synchronization signal (Sync In) and output it to trigger further secondary instruments.

Synchronization signal

The synchronization signal is a 50 MHz signal that carries the trigger pulse modulated on it. Hence, it provides **joint triggering** and **baseband clock synchronization** at the same time.

Final time alignment can require adding I/Q or trigger delay. However, once synchronization is achieved, the primary-secondary instrument mode ensures reproducibility of triggering, if the used waveform, sample rate and cabling are not changed.

Test setup

Regarding the **synchronization signal**, the instruments can be connected (cascaded) in a daisy chain (see [Figure 10-1](#)).

Used connectors depending on the installed hardware

Depending on the installed hardware, your R&S SMW provides and expects the synchronization signal at different connectors. Moreover, there are different requirements regarding the reference frequency.


Option:	DACW board	Common reference frequency	Sync Out connector	Sync In connector
R&S SMW-B10	-	Required ¹⁾	USER 6	USER 5
R&S SMW-B9	Revision < 5	Required ¹⁾	USER 6	USER 5
R&S SMW-B9	Revision ≥ 6	Not required	ADV TRG	ADV CLK

¹⁾ All instruments in the setup have to use the **same reference frequency**. You can distribute the internal reference frequency of one of the instruments. Distribution is independent for primary or secondary instruments. Alternatively, supply all instruments with an external reference frequency source.

10.3.1.1 Multi-instrument settings

Access:

- Use one of the following:
 - Select "Taskbar > System Config > System Configuration > Multi Instrument"
 - Select "Block Diagram > Fading > System Configuration > Multi Instrument"
 - Select "Block Diagram > I/Q Stream Mapper > System Configuration > Multi Instrument"
 - On the instrument front panel, press [SETUP].
Select "System Configuration > Multi Instrument".

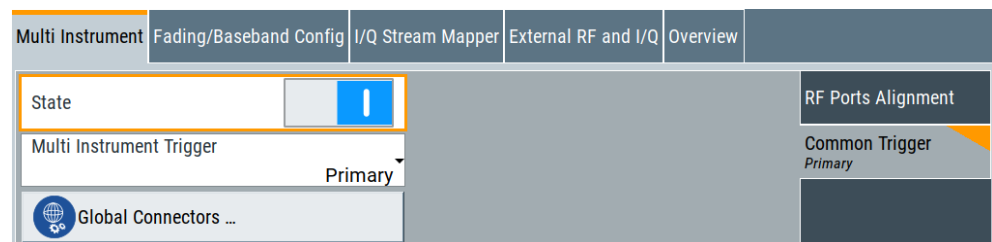

The displayed settings depend on the installed hardware, see ["Connect the instruments and distribute the synchronization signal \(R&S SMW-B9, DACW revision ≥ 6\)"](#) on page 676.

For step-by-step description, see [Chapter 10.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 673.

Settings

State	672
Multi Instrument Trigger	672
Synchronisation State	672
Global Connector Settings	673
Show Connector Baseband Sync In/Out	673

State

Activates the configuration.

With "State = Off", the instrument works in a standalone mode.

Remote command:

[:SCONfiguration:MULTiinstrument:STATE](#) on page 987

Multi Instrument Trigger

Sets the mode in that the instrument works.

To activate the mode, set "Multi Instrument > State = On".

"Primary"	Provides its trigger signal to the secondary instruments.
"Secondary"	Synchronizes to the supplied trigger signal from the primary instrument. Observe the "Synchronisation State" indication for information if the synchronization signal is found and synchronization is achieved.

Remote command:

[:SCONfiguration:MULTiinstrument:MODE](#) on page 987

Synchronisation State

If "Multi Instrument Trigger = Secondary", indicates if synchronization is achieved.

"Sync"	Instrument is in sync. It receives and decodes the synchronization and the trigger signal from the primary instrument.
"No Sync"	Synchronization is not achieved, because: <ul style="list-style-type: none"> • The baseband generators in the secondary instruments or in the primary instruments are not activated, see "To start signal generation" on page 677. • There is no physical connection (the synchronization signal is not connected as required). For details, see Chapter 10.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode", on page 673. • The secondary instrument does not detect the synchronization signal.

Remote command:

[:SCONfiguration:MULTiinstrument:TRIGger:SYNChronization?](#)

on page 987

Global Connector Settings

Option: R&S SMW-B10 or R&S SMW-B9 with DACW board with revision < 5.

Provides a quick access to the related global connector settings.

With "State = On", the synchronization signal is assigned per default as follows:

- "Multi Instrument Trigger > Primary"
"Connector = USER 6": "Direction = Output", "Signal = Baseband Sync Out"
- "Multi Instrument Trigger > Secondary"
"Connector = USER 6": "Direction = Output", "Signal = Baseband Sync Out"
"Connector = USER 5": "Direction = Input", "Signal = Baseband Sync In"

See also:

- [Chapter 10.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 673.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

Show Connector Baseband Sync In/Out

Option: R&S SMW-B9 with DACW board with revision ≥ 6 .

Displays the physical location of the connectors on the rear panel of the instrument.

The connectors are fixed and cannot be changed. The following connectors are used:

- Sync Out connector: ADV TRG
- Sync In connector: ADV CLK.

See also:

- [Chapter 10.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 673
- ["Connect the instruments and distribute the synchronization signal \(R&S SMW-B9, DACW revision \$\geq 6\$ \)"](#) on page 676.

10.3.1.2 How to connect and configure instruments in primary-secondary instrument mode

R&S SMW-B9



Different connectors and setup depending on the installed hardware (R&S SMW-B9)

Starting from DACW board revision 6, the R&S SMW outputs and expects the synchronization signal at the ADV TRG and ADV CLK connectors.

Synchronization signal routing via the USER x connectors is not supported.

Check the installed hardware

1. Select [SETUP] > "Instrument Assembly > Hardware Config > Baseband Assembly".

2. Observe the revision of the installed DACW board.
3. For **DACW revision < 5**, follow the instructions:
 - Connect the instruments and distribute the synchronization signal and the reference frequency
 - Configure the primary instrument (R&S SMW)
 - Configure the secondary instrument (R&S SMW)
 - To start signal generation
 - To compensate signal mis-alignment:
4. For **DACW revision ≥ 6**, follow the instructions:
 - Connect the instruments and distribute the synchronization signal (R&S SMW-B9, DACW revision ≥ 6)
 - Configure the primary and secondary instruments R&S SMW (R&S SMW-B9, DACW revision ≥ 6)
 - To start signal generation
 - To compensate signal mis-alignment:

R&S SMW-B10

Proceed as follows:

- Connect the instruments and distribute the synchronization signal and the reference frequency
- Configure the primary instrument (R&S SMW)
- Configure the secondary instrument (R&S SMW)
- To compensate signal mis-alignment:

Connect the instruments and distribute the synchronization signal and the reference frequency

1. With the default connector settings of the R&S SMW, connect the instruments in a daisy chain:

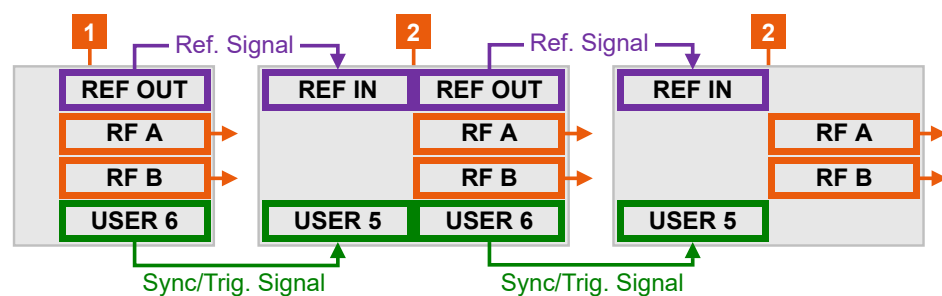


Figure 10-1: Example: Daisy chain connection for distributing the synchronization signal (simplified)*

* = I/Q, LAN etc. connections are not shown

1 = Primary instrument acting as synchronization and trigger signal source

2 = Secondary instruments: One or more cascaded instruments, receiving (and forwarding) the synchronization and trigger signal

REF OUT, REF IN = Reference frequency connectors
 USER x = Synchronization and trigger signal connectors
 RF = RF signal output connector

- Connect **USER 6** connector of the primary instrument R&S SMW to **USER 5** connector of the first secondary instrument.
- Connect USER 6 connector of the first secondary instrument to the USER 5 connector of the second secondary instrument, etc.

Note: Avoid unnecessary cable length and branching points.

Use cables of the same length and type for all connections between the primary instrument and the secondary instruments and between secondary instruments.

2. To distribute the internal reference signal of one of the instruments (in this example the primary instrument), connect the instruments in a daisy chain **concerning the reference frequency**.

That is, connect REF OUT of the primary instrument R&S SMW to the REF IN of the first of the secondary instrument group, etc.

See [Chapter 8.8, "Reference oscillator"](#), on page 495.

Configure the primary instrument (R&S SMW)

1. Select "RF > Reference Frequency > Source > Internal".
2. Select "System Config > System Config > Multi Instruments".
3. Select "Multi Instrument Trigger" > **"Primary"**.
4. Select "State > On".
5. In the "Global Connector Settings" dialog, and observe current signal assignment.
Per default, the synchronization signal ("Baseband Sync Out") is output at the **USER 6**.
6. Configure the baseband signal as required for the particular test setup.
Configure the trigger signal, for example, as follows:
 - a) Select "Baseband > EUTRA/LTE > Trigger In"
 - b) Select "Trigger Mode > Armed Retrigger" and "Trigger Source > Internal"
 - c) Set "Sync. Out to Trigger > On".

The trigger parameters of all basebands are coupled. Once the basebands are activated, they use common trigger signal.

See also ["Starting the signal generation with the first sample"](#) on page 250.

Configure the secondary instrument (R&S SMW)

1. Select "RF > Reference Frequency > Source > External".
Use the default reference frequency settings.
2. Select "System Config > System Config > Multi Instruments > Multi Instrument Trigger" > **"Secondary"**.
3. Select "State > On".

4. Observe current synchronization status.

The parameter indicates that the instruments are not synchronized.

Synchronization is achieved at the moment the basebands in the secondary instruments and in the primary instrument are activated.

5. Configure the baseband signal.

- Select the same trigger mode as in the primary instrument.
- Set "Sync. Out to Trigger > On".
- Observe the automatically selected **"Trigger Source = Baseband Sync In"**

Once the baseband is activated, the secondary instruments are triggered by the synchronization signal.

If the secondary instrument is R&S SMW, the trigger parameters of all basebands are coupled and all basebands use common trigger signal.

Connect the instruments and distribute the synchronization signal (R&S SMW-B9, DACW revision ≥ 6)

- With the default connector settings of the R&S SMW, connect the instruments in a daisy chain:

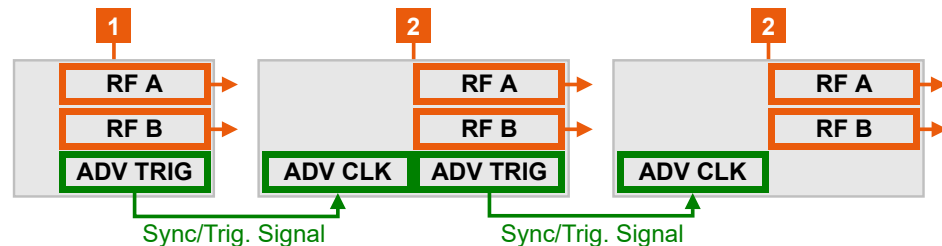


Figure 10-2: Example: Daisy chain connection for distributing the synchronization signal (simplified)*

* = I/Q, LAN etc. connections are not shown

1 = Primary instrument acting as synchronization and trigger signal source

2 = Secondary instruments: One or more cascaded instruments, receiving (and forwarding) the synchronization and trigger signal

ADV TRG, ADV = Synchronization and trigger signal connectors

CLK

RF A/RF B = RF signal output connector

- Connect **ADV TRG** connector of the primary instrument R&S SMW to **ADV CLK** connector of the first of the secondary instrument group.
- Connect **ADV TRG** connector of the first of the secondary instrument group to the **ADV CLK** connector of the second of the secondary instrument group, etc.

Note: Avoid unnecessary cable length and branching points.

Use cables of the same length and type for all connections between the primary instrument and the secondary instruments and between secondary instruments.

Configure the primary and secondary instruments R&S SMW (R&S SMW-B9, DACW revision ≥ 6)

- Select "System Config > System Config > Multi Instruments".

2. Select "Multi Instrument Trigger" > **"Primary"**.
3. Select "State > On".
4. Configure the baseband signal as required for the particular test setup.
Configure the trigger signal, for example, as follows:
 - a) Select "Baseband > EUTRA/LTE > Trigger In"
 - b) Select "Trigger Mode > Armed Retrigger" and "Trigger Source > Internal"
 - c) Set "Sync. Out to Trigger > On".

The trigger parameters of all basebands are coupled. Once the basebands are activated, they use common trigger signal.
See also ["Starting the signal generation with the first sample"](#) on page 250.
5. Select "System Config > System Config > Multi Instruments > Multi Instrument Trigger" > **"Secondary"**.
6. Select "State > On".
7. Observe current synchronization status.
The parameter indicates that the instruments are not synchronized.
Synchronization is achieved at the moment the basebands in the secondary instruments and in the primary instrument are activated.
8. Configure the baseband signal.
 - a) Select the same trigger mode as in the primary instrument.
 - b) Set "Sync. Out to Trigger > On".
 - c) Observe the automatically selected **"Trigger Source = Baseband Sync In"**

Once the baseband is activated, the secondary instruments are triggered by the synchronization signal.
If the secondary instrument is R&S SMW, the trigger parameters of all basebands are coupled and all basebands use common trigger signal.

To start signal generation

1. In the secondary instruments, start signal generation.
That is, activate the baseband generator.
2. In the primary instrument, activate the baseband generator.
3. In the secondary instruments, observe the value of the parameter "System Config > Multi Instruments > Synchronization State"
The instruments are synchronized if:
 - The physical connection is established
 - The synchronization signal is routed properly
 - The baseband generators in all generators are active.

To compensate signal mis-alignment:

1. Connect an oscilloscopes or network analyzer.
Observe the generated signals.

2. Compare the signal start in the instruments.
3. To compensate signal delay, select "I/Q Modulator > I/Q Digital Impairments"
4. Vary the value of the parameter "**I/Q Delay**" to achieve time aligned signals.
5. If the value range is insufficient, enable also or alternatively a trigger delay.
Select "Baseband > <Dig Standard> > Trigger In" > "**Delay**".
6. Vary the values until the signals align in time.

10.3.1.3 Further information

See:

- Trigger settings of the used baseband source, for example [Chapter 5.5.2.1, "Trigger settings"](#), on page 262.

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

10.3.2 Triggering several instruments with a common trigger signal

The configuration described in this section is useful, in the following cases:

- R&S SMW is equipped with [Standard baseband](#) generator
- Or primary-secondary instrument mode is not used or possible

Using the same trigger event on several instruments is useful to synchronize the transmitted and received signals. Some test cases also require that you control the signal generation start and determine the exact generation start time by a defined trigger event. The signal generation start can be controlled, for example, by triggering the instrument internally or externally from the DUT.

To share common trigger signal:

- Let one R&S SMW generate a dedicated signal that triggers all R&S SMW instruments.
See [Example "Triggering several R&S SMW instruments simultaneously"](#) on page 678.
- Connect all instruments to a common external trigger source.

See [Chapter 3.3.4, "Working with marker signals"](#), on page 65.

Example: Triggering several R&S SMW instruments simultaneously


This example shows you how to connect several R&S SMW, distribute the trigger signal generated by the first one (R&S SMW#1) and trigger the instruments simultaneously.

Required cabling and connections:

- Connect the instruments in a star network, concerning the trigger signal.
That is, connect the USER 6 output of the R&S SMW#1 to the USER 3 input of all other R&S SMW and the R&S SMW#1 itself.
- Always use cables of the same length.

Generating phase-coherent synchronous and aligned signals

Use as short as possible cables.

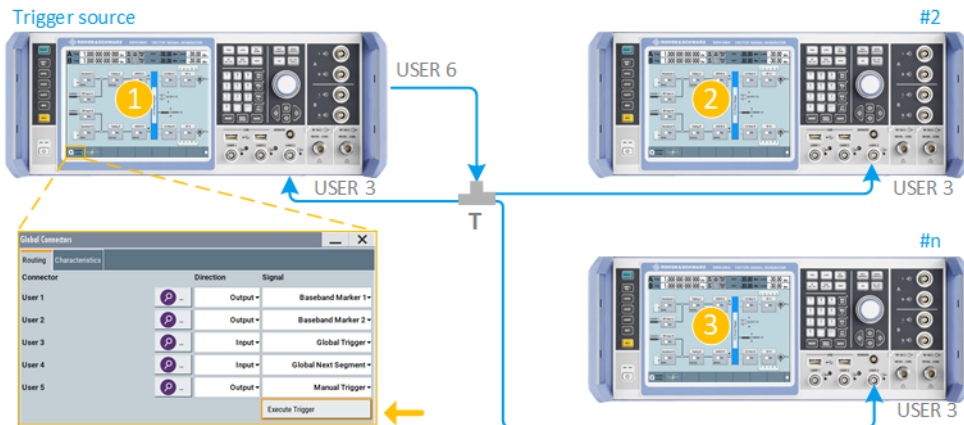

- T = T-connector
 1 = Trigger source (R&S SMW#1)
 2, 3 = N number of instruments (R&S SMW#2 to R&S SMW#n)
 USER x = Connectors
 <- = Executes trigger manually

Required configurations:

- In **all** R&S SMW:
 - Use the default settings "User 3 > Direction = Input" and "Signal = Global Trigger 1".
 - Select "Baseband > ... > Trigger In > Trigger Source > Ext. Global Trigger 1".
- In R&S SMW#1, set "System Config. > Setup > Global Connectors">"**User 6**">"Direction = Output".
 Set "User 6 > Signal = Manual Trigger".

To trigger the signal generation from R&S SMW#1, select "Global Connectors > Execute Trigger".

Alternatively, send the remote control command `:OUTPut:USER<ch>:TRIGger[:IMMediate]`.

R&S SMW#1 generates a short high signal and outputs it at the USER connector. The signal acts as a common external trigger signal for all R&S SMW and all basebands.

10.4 Generating phase-coherent synchronous and aligned signals

Option: R&S SMW-B9 and R&S SMW-K545

Test setups often comprise several instruments, like, for example, multiple Rohde & Schwarz signal generators that generate RF signals.

If your test setup requires **coherent RF signals that are aligned concerning time, phase and power level**, you can use R&S NRP power sensors to calibrate the abso-

lute power levels. You can also follow the instructions listed in the other sections of this chapter or use the possibility of option R&S SMW-K544 to compensate for all effects. However, calibrating the phase difference, time delay difference and amplitude difference between the channels at the RF carrier is a troublesome and time-consuming task.

You can use the R&S®RFPAL software to collect required correction data and calibrate the setup. For interplay with R&S®RFPAL and for applying the correction data afterwards, the option R&S SMW-K545 is required on the signal generators. When applying correction data at the signal generators during signal generation, the resulting RF signals are coherent and aligned in terms of power level, phase difference and the time delay.

R&S®RFPAL is documented separately, see the document "R&S®SMW-K545 RF Ports Alignment User Manual".

10.4.1 Required options

- R&S SMW-K545 (on each signal generator): RF ports alignment
- R&S SMW-K544 (per signal path): User-defined frequency response correction
- R&S SMW-K61 (per signal path): Multi-carrier continuous wave
- R&S SMW-B9 (per signal path): Wideband baseband generator
- R&S SMW-B13XT: Wideband baseband main module two I/Q paths to RF
- R&S SMW-B90: Phase coherence
- R&S SMW-B1003 (for example): RF frequency from 100 kHz to 3 GHz

If only standard baseband signals are required, you can use R&S SMW-B10 and R&S SMW-B13T instead of R&S SMW-B9 and R&S SMW-B13XT.

For more information, see data sheet.

10.4.2 RF ports alignment configuration and settings

Access:

- Select "System Configuration > Multi Instrument > RF Ports Alignment".

The remote commands required to define these settings are described in [Chapter 14.18.5, "RF ports alignment commands"](#), on page 1009.

Settings:

• General settings	681
• RF ports setup info	684
• RF ports setup file settings	692
• Additional S-Parameter files settings	694

10.4.2.1 General settings

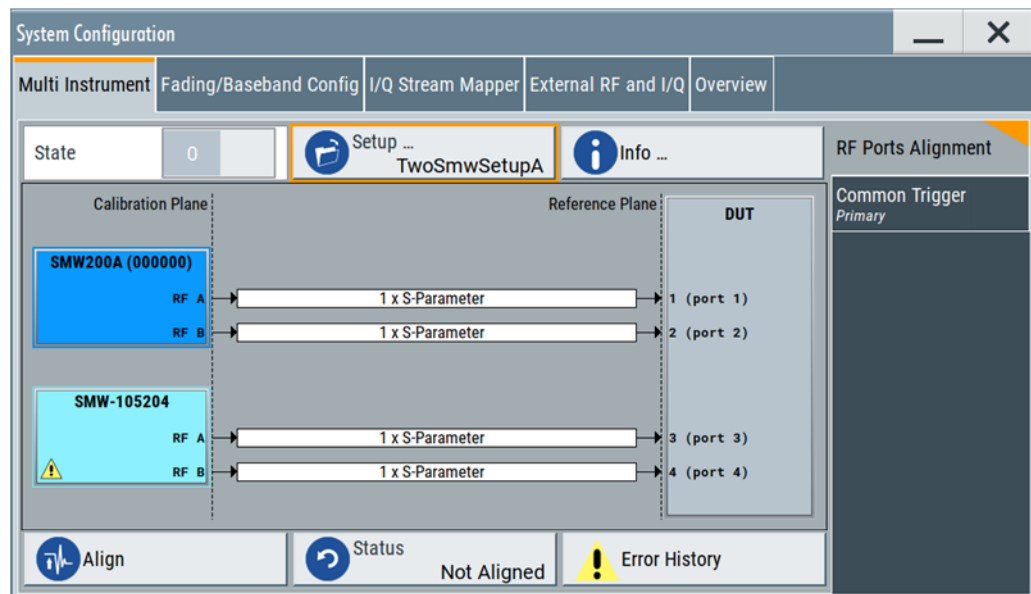


Figure 10-3: Multi Instrument > RF Ports Alignment

State.....	681
Setup.....	682
Info.....	682
Test Setup.....	682
Align.....	683
Status.....	684
Error History.....	684

State

Activates the RF ports alignment function. Setup files with correction data are transferred to the secondary instruments. The following configurations are automatically set. Correction data is applied during signal generation using these configurations.

- "RF":
 - "Attenuator > Mode = Auto"
 - "ALC > Mode = Off (Table)" and "ALC > Driver Amplifier = Auto"
 - "UCOR > State = Off"
 - "LO Coupling > Mode" = "Internal" or "A Internal & A->B Coupled"
 - "LO Coupling > Out State = B On"; otherwise "Out State = Off"
- "I/Q Mod > Frequency Response":
 - "General > Optimization Mode = High Quality Table"
 - "General > Optimization Bandwidth = Auto"
 - "User Defined Corrections > State = On"
- "System Configuration > Multi Instrument > Common Trigger":
 - "State = On"
 - "Multi Instrument Trigger = Primary" on the primary instrument,
 - "Multi Instrument Trigger = Secondary" on the secondary instruments

- "System Configuration > Multi Instrument > RF Ports Alignment > RF Ports Setup Info":
 - "Calibration > LO Coupling = Active"
 - "Setup Overview > REF Configuration > Signal Source" = "Primary" or "External"
 - "Setup Overview > LO Configuration > Signal Source" = "Primary" or "External"
 - "Setup Overview > Wiring Constellation" = "Daisy Chain" or "Star"

Remote command:

`:SCONfiguration:RFAlignment:STATe` on page 1013

Setup

Accesses the "Setup File" dialog, that is the standard instrument function for saving and loading setup files. The provided navigation possibilities in the dialog are self-explanatory.

The filename and the directory in which the settings are saved are user-definable; the file extension is predefined.

The setup file (*.rfsa) is an archive file containing setup description file (*.xml), the RF port correction files (*.rfcor), the frequency response correction files (*.rfresp) and the S-parameter files (*.snp). It is **created automatically** during calibration by RFPAL and can be **loaded only in the primary instrument**. Do not create or modify setup files manually.

On recall, the instrument checks if the current instrument is the reference instrument used during calibration with RFPAL. The dialog also displays the wiring diagram of the selected setup. If the setup file is loaded in a different instrument, a setting conflict appears.

The setup files in the secondary instruments are distributed by the primary instrument and loaded in the secondaries automatically.

Remote command:

`:SCONfiguration:RFAlignment:SETup:PREDefined:CATalog?` on page 1011

`:SCONfiguration:RFAlignment:SETup:FILE:PREDefined` on page 1011

`:SCONfiguration:RFAlignment:SETup:CATalog?` on page 1012

`:SCONfiguration:RFAlignment:SETup:FILE` on page 1012

Info

Accesses the "RF Ports Setup Info" dialog that displays summary information on the configured settings, see [Chapter 10.4.2.2, "RF ports setup info"](#), on page 684.

Test Setup

Displays the cabling diagram for the current setup.

The diagram is interactive. Click an element to access further settings.

Indicated are:

Generating phase-coherent synchronous and aligned signals

Primary instrument

The primary instrument, incl. alias name, serial number and number of RF outputs.

The primary instrument is the uppermost instrument displayed in dark blue color. Click the block to open a dialog with its "Hostname / IP Address" and for quick access to the [RF Port Setup File Editor](#) dialog ("Edit Setup").

Secondary instrument(s)

The secondary instruments, incl. their remote connection status, alias name, serial number and number of RF outputs.

Click the block to open a dialog with information on the "Hostname / IP Address", "Remote Status" and for quick access to the [RF Port Setup File Editor](#) dialog ("Edit Setup").

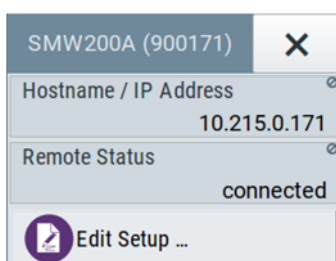


Figure 10-4: Secondary instrument dialog

S-parameter files

Indicates if and how many S-parameter files are loaded.

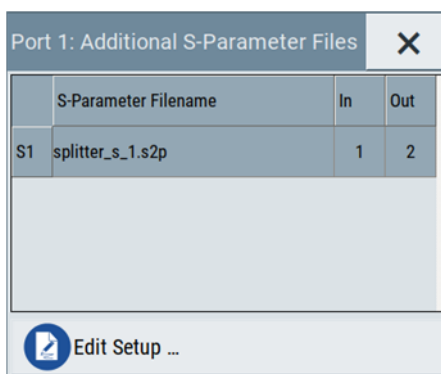


Figure 10-5: Additional S-Parameter Files dialog

DUT

DUT, incl. the RF ports designation, as configured in the [RF Port Setup File Editor](#) dialog.

Align

Sends the multi-instrument trigger signal to all instruments to synchronize the base-bands of the instruments if a valid setup is loaded ("RF Ports Alignment > Setup") and the "RF Ports Alignment > State" is "On".

Remote command:

:SCONfiguration:RFAlignment:ALIGN on page 1013

Status

Retrieves and displays information on the internal compensation status and the connected secondary instruments.

"No Setup"	A setup file has not been loaded.
"Invalid Setup"	Possible causes: <ul style="list-style-type: none"> • The loaded setup file has been removed. • The setup file is invalid (RF ports are not configured). • Mismatch between the setup and the physical instrument (the setup is loaded in an instrument that is not the primary instrument).
"Not Active"	The setup file is loaded but "RF Ports Alignment > State = Off".
"Not Aligned"	Indicates one of the following situations: <ul style="list-style-type: none"> • Setup is loaded and "RF Ports Alignment > State = On", system is not triggered Execute "Align" to send the multi-instrument trigger signal to all instruments to synchronize the basebands of the instruments. • Setup is loaded and active but frequency value is changed (in primary or in the secondary instrument). The instrument with changed frequency value waits for trigger event.
"Aligned"	The setup is aligned and ready for operation.
"Error"	Settings conflict or missing connection to secondary instruments.
"Warning"	Indicates the following situations: <ul style="list-style-type: none"> • Selected frequency or PEP value outside of the calibrated range. • Temperature deviation (Temperature Offset to Last Calibration is greater than +/- 3K) • Internal adjustment was performed since last calibration. • "LO Coupling = On" but the secondary instrument cannot be synchronized.

A warning icon in the task bar indicates the erroneous situation.

Remote command:

[:SCONfiguration:RFAlignment:SETup:STATus?](#) on page 1012

Error History

Indicates the status of the alignment process.

10.4.2.2 RF ports setup info

Access:

1. Select "System Configuration > Multi Instrument > RF Ports Alignment".
2. Select "Setup > User files > <... .rfsa > > Select".
3. Select "RF Ports Alignment" > "Info".

- [Calibration settings](#).....685
- [Current corrections settings](#)..... 688
- [Setup overview](#).....690

Calibration settings

Access:

- Select "RF Ports Alignment > Info" > "**Calibration**".

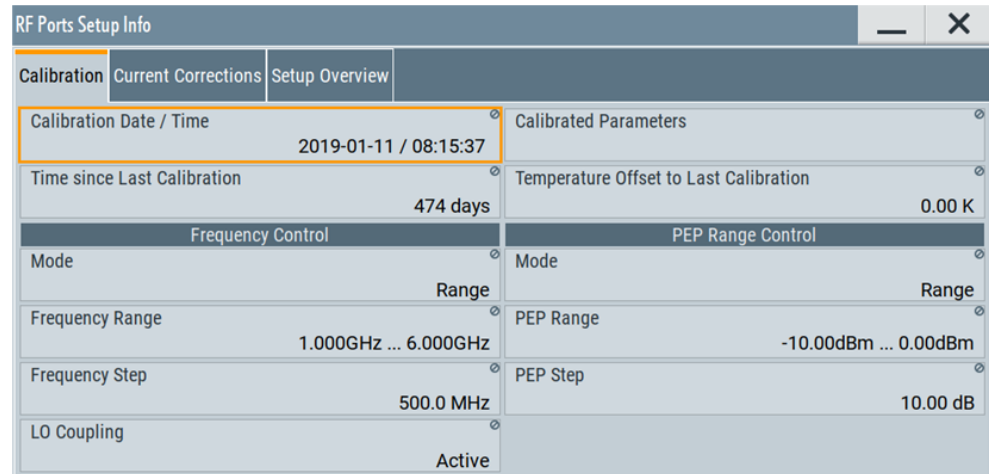


Figure 10-6: RF Ports Setup Info > Calibration

This dialog displays summary information on the calibration data as retrieved from the setup file.

Settings:

- [Calibration Date/Time](#).....685
- [Calibrated Parameters](#)..... 686
- [Time since Last Calibration](#)..... 686
- [Temperature Offset to Last Calibration](#)..... 686
- [Frequency/PEP Control](#)..... 686
 - └ [Mode](#)..... 686
 - └ [Frequency Range/PEP Range](#)..... 686
 - └ [Frequency Step/PEP Step](#)..... 687
 - └ [Frequency Values/PEP Values](#)..... 687
 - └ [LO Coupling](#)..... 687

Calibration Date/Time

Indicates the date and time the calibration described in the loaded setup file is performed.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:DATE?`

on page 1013

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:TIME?`

on page 1014

Calibrated Parameters

Summary information on the major calibrated parameters.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:PARameters?`

on page 1014

Time since Last Calibration

Indicates the elapsed time since the moment the calibration described in the loaded setup file is performed.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:AGE?`

on page 1014

Temperature Offset to Last Calibration

Indicates the difference in temperature since the moment the calibration described in the loaded setup file is performed.

The indication is color coded; if the temperature deviation exceeds +/- 3K, the value is displayed in red.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:TEMPerature:OFFSet?` on page 1014

Frequency/PEP Control

Comprises the frequency and PEP-related settings.

The displayed values resemble the values you have set during the calibration process.

Mode ← Frequency/PEP Control

Indicates the method used to define the calibrated frequency and PEP ranges.

"Range" By the min and max values of the range.

"List" As a sequence of discrete frequency values.

See [Frequency Values/PEP Values](#).

Consider that greater number of calibration points leads to longer calibration time.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:FREQuency:`

`MODE?` on page 1015

`:SCONfiguration:RFAlignment:SETup:INFO:CALibration:POWer:MODE?`

on page 1015

Frequency Range/PEP Range ← Frequency/PEP Control

Indicates the frequency and PEP ranges the calibrated values apply for.

This value is displayed if "Mode = Range" is used during the calibration, where the range is defined by the min and max values.

Remote command:

```
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:FREQuency:
RANGE:LOWer? on page 1016
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:FREQuency:
RANGE:UPPer? on page 1016
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:POWer:RANGE:
LOWer? on page 1016
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:POWer:RANGE:
UPPer? on page 1016
```

Frequency Step/PEP Step ← Frequency/PEP Control

This value is displayed if "Mode = Range" is used during the calibration. It indicates the frequency/PEP step size that is used to define the frequency and level values to be calibrated with the range, defined with the min and max values.

Remote command:

```
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:FREQuency:
STEP? on page 1016
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:POWer:STEP?
on page 1016
```

Frequency Values/PEP Values ← Frequency/PEP Control

This value is displayed if "Mode = List" is used during the calibration.

It indicates the calibrated values, that are defined as a sequence of comma-separated discrete values in the required units.

Remote command:

```
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:FREQuency:
LIST:VALues? on page 1015
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:POWer:LIST:
VALues? on page 1015
```

LO Coupling ← Frequency/PEP Control

Indicates whether the instruments use a common local oscillator (LO) signal or not.

"Active"

All instruments are connected to the same LO reference frequency.

"Inactive"

Each instrument uses its own local oscillator.

Remote command:

```
:SCONfiguration:RFAlignment:SETup:INFO:CALibration:LOCoupling?
on page 1017
```

Current corrections settings

Access:

- Select "RF Ports Alignment > Info" > **"Current Corrections"**.

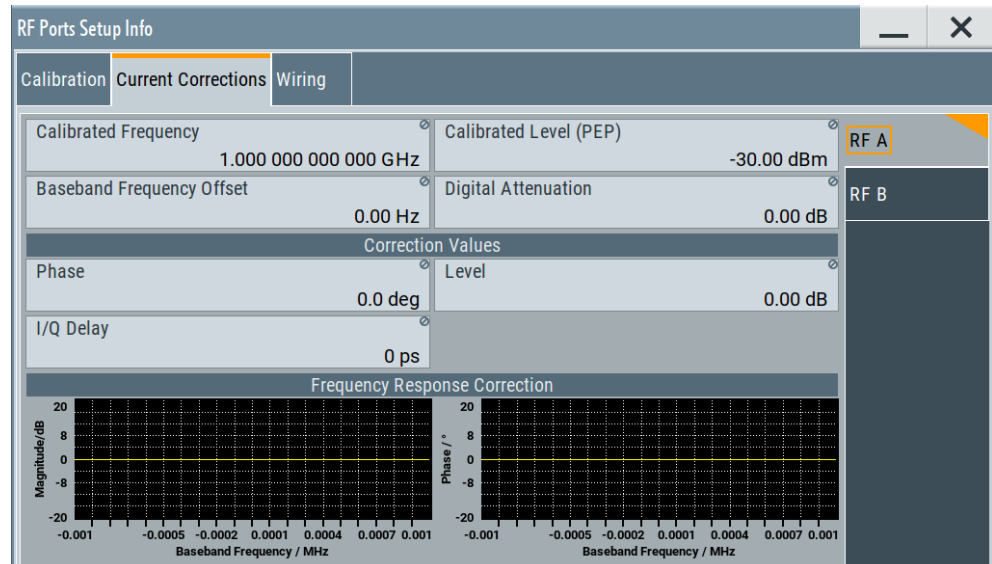


Figure 10-7: RF Ports Setup Info > Current Corrections

This dialog displays summary information on the current correction values per RF path.

Settings:

Calibrated Frequency.....	688
Calibrated Level (PEP).....	688
Baseband Frequency Offset.....	689
Digital Attenuation.....	689
Correction Values.....	689
L Phase.....	689
L Level.....	689
L I/Q Delay.....	689
Frequency Response Correction.....	689

Calibrated Frequency

Indicates the frequency f_{Cal} the calibration data is valid for.

This is the value you have set as RF frequency during the calibration process.

Remote command:

`:SOURce<hw>:RFAlignment:CALibrated:FREQuency?` on page 1293

Calibrated Level (PEP)

Indicates the level P_{Cal} the calibration data is valid for.

Remote command:

`:SOURce<hw>:RFAlignment:CALibrated:POWer:PEP?` on page 1293

Baseband Frequency Offset

Indicates the applied baseband frequency offset $f_{\text{BB Offset}}$, calculated as the difference between the current frequency $f_{\text{RF Out}}$ ("Status bar > Freq") and the calibrated frequency f_{Cal} ("Calibrated Frequency").

Remote command:

`:SOURce<hw>:RFAlignment:FOFFset?` on page 1294

Digital Attenuation

Indicates the applied digital attenuation $P_{\text{Dig Att}}$, calculated as the difference between the current level $P_{\text{RF Out}}$ ("Status bar > Level") and the calibrated level P_{Cal} ("Calibrated Level").

Remote command:

`:SOURce<hw>:RFAlignment:DATTenuation?` on page 1294

Correction Values

Displays the correction values retrieved from the S-parameter files and used for compensation of the complex frequency response of the signal.

Phase ← Correction Values

Indicates the delta phase applied for compensation of the frequency response of the signal.

The value is retrieved from the S-parameter files.

Remote command:

`:SOURce<hw>:RFAlignment:CORRection:PHASe?` on page 1294

Level ← Correction Values

Indicates the level correction applied to the signal of the selected path.

A level correction is required if a mismatch between the PEP values in the paths are detected.

The value is retrieved from the S-parameter files.

Remote command:

`:SOURce<hw>:RFAlignment:CORRection:LEVel?` on page 1294

I/Q Delay ← Correction Values

Indicates the I/Q delay applied for compensation of the frequency response of the signal.

The value is retrieved from the S-parameter files.

Remote command:

`:SOURce<hw>:RFAlignment:CORRection:IQDelay?` on page 1295

Frequency Response Correction

Graphical representation of magnitude and phase variations of the currently used compensation filter over the available baseband bandwidth.

Setup overview

Access:

- Select "RF Ports Alignment > Info" > **"Setup Overview"**.

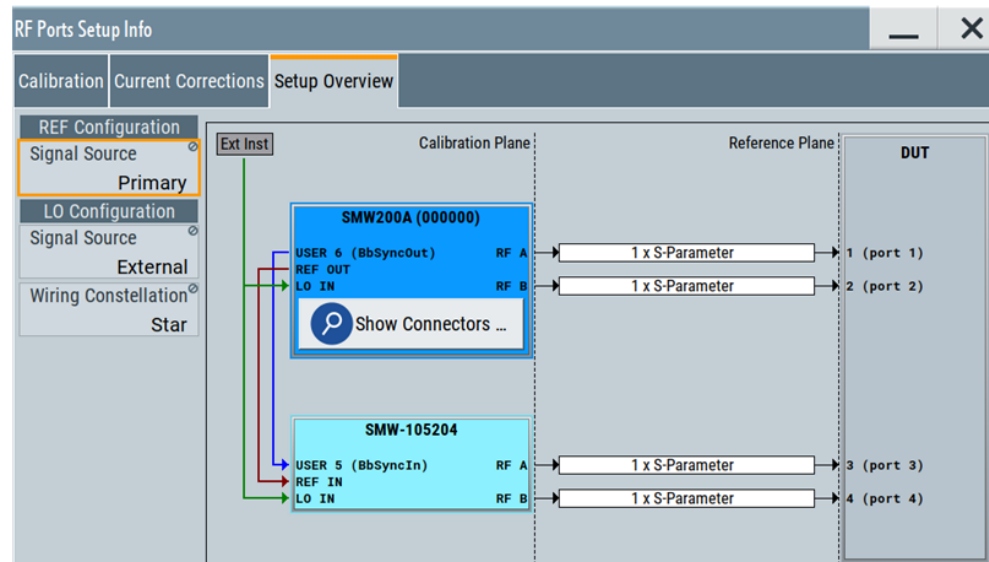


Figure 10-8: RF Ports Setup Info > Setup Overview

This dialog displays the wiring diagram of the setup. The displayed information resembles the setup displayed in the "RF Ports Alignment" dialog. See "Test Setup" on page 682.

Ref Configuration > Signal Source.....	690
LO Configuration > Signal Source.....	690
LO Configuration > Wiring Constellation.....	691
Test Setup.....	691

Ref Configuration > Signal Source

Indicates if the current instrument uses its own or an external reference signal.

- "Primary" The instrument uses its reference signal and provides it to the other instruments.
- "External" The instrument uses an external reference frequency source, for example from other R&S SMW (the one with "Ref Configuration" > "Signal Source = Primary") or from R&S®SMA100B.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:WIRing:REF:SOURce?`

on page 1018

LO Configuration > Signal Source

Indicates if the current instrument uses its own or an external LO signal.

Generating phase-coherent synchronous and aligned signals

"Intern (Primary Instrument)"

The instrument uses its own LO frequency.

In a two-path instruments, the LOs of the two signal paths are coupled, where the LO signal of the first path is fed to the LO of the second one.

The block diagram indicates this connection, too.

"External Instrument"

The instrument acts as a secondary one regarding the LO frequency. It receives the LO frequency from the instrument that acts as an LO source in the setup.

The external LO signal is fed at the first signal path.

In a two-path instruments, the LOs of the two signal paths are coupled, where the LO signal of the first path is fed to the LO of the second one.

The block diagram indicates this connection, too.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:WIRing:LO:SOURce?`

on page 1017

LO Configuration > Wiring Constellation

Indicates the connection method used to distribute the LO frequency signal.

"Daisy Chain" A connection scheme in which instruments are connected together in sequence, i.e. an output of the first one is connected to an input of the second one, etc.

"Star" A connection scheme for several instruments that consists of one primary instrument and several secondary instruments, all connected to the primary one.

The LO signal of the primary instrument or from an external LO source is split with a power combiner or splitter and fed to the secondary instruments.

Remote command:

`:SCONfiguration:RFAlignment:SETup:INFO:WIRing:LO:CONStellation?`

on page 1017

Test Setup

Displays the cabling diagram for the current setup.

The diagram is interactive. Click an element to access further settings.

Indicated are:

Primary instrument

The primary instrument, incl. alias name, serial number and number of RF outputs.

The primary instrument is the uppermost instrument displayed in dark blue color. Click the block to open a dialog with its "Hostname / IP Address" and for quick access to the [RF Port Setup File Editor](#) dialog ("Edit Setup").

Secondary instrument(s)

The secondary instruments, incl. their remote connection status, alias name, serial number and number of RF outputs.

Click the block to open a dialog with information on the "Hostname / IP Address", "Remote Status" and for quick access to the [RF Port Setup File Editor](#) dialog ("Edit Setup").

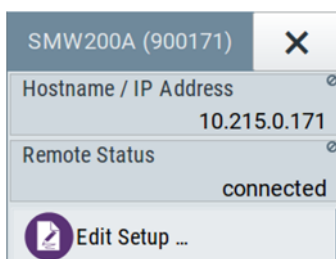


Figure 10-9: Secondary instrument dialog

S-parameter files

Indicates if and how many S-parameter files are loaded.

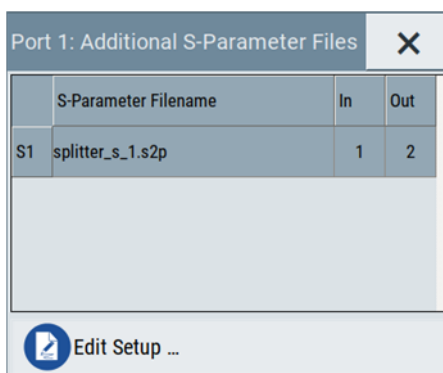


Figure 10-10: Additional S-Parameter Files dialog

DUT

DUT, incl. the RF ports designation, as configured in the [RF Port Setup File Editor](#) dialog.

10.4.2.3 RF ports setup file settings

Access:

1. Select "System Configuration > Multi Instrument > RF Ports Alignment" > **"Setup"**.
2. Select a setup file and select "Edit".

The setup file (*.rfsa) is an archive file containing setup description file (*.xml), the RF port correction files (*.rfcor), the frequency response correction files (*.rfresp) and the S-parameter files (*.snp). Setup files are created automatically during the calibration process.

Do not create or edit setup files manually.

The "RF Ports Setup File Editor" dialog opens.

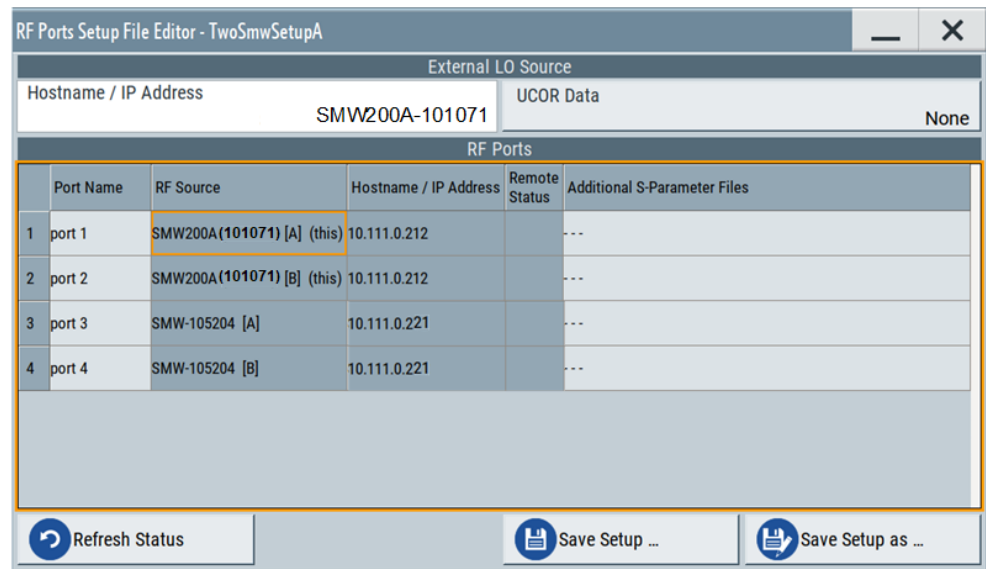


Figure 10-11: RF Ports Setup File Editor

The dialog displays an overview information on the following:

- Configured ports including user-defined port names
- The physical instruments on that the ports are located
- The filename of the files with calibration data
- If S-Parameter files are used during the calibration or loaded afterwards, the filenames of these files.

The "RF Ports Setup File Editor" dialog is the central point to reconfigure and control your setup. Here, you can rename ports, add, remove or exchange S-parameter files, retrieve information on connected external instruments, and save your settings in a loadable setup file.

RF port table.....	693
L Port Name.....	693
L RF Source.....	693
L Hostname / IP Address.....	693
L Remote Status.....	694
L Additional S-Parameters Files.....	694
Save Setup .../Save Setup as	694

RF port table

Represents the RF ports configuration; there is one table row per RF port.

Port Name ← RF port table

Add an alias name for the RF port.

RF Source ← RF port table

Indicates the physical instrument which the RF port belongs to.

Hostname / IP Address ← RF port table

Displays/sets the IP address or hostname of the connected external instrument.

Remote Status ← RF port table


Indicates the remote connection status.



The RF port belongs to a secondary instrument; the remote connection to the secondary instrument can be established.

The remote connection is active during the time the correction files are transferred to the secondary instruments.

The term **secondary** instrument describes a signal generator connected in a primary-secondary mode and receiving the multi-instrument trigger from the primary instrument (see "System Configuration > Multi Instrument > Common Trigger > Multi Instrument Trigger = Secondary")

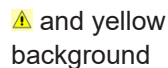

At least one of the secondary instruments cannot be reached, that is the remote connection to it cannot be established.

Check the "Hostname / IP Address" of the secondary instrument and select "Refresh" to check the status.

Additional S-Parameters Files ← RF port table

Indicates the filename of the S-Parameter files used during the calibration process or the S-Parameter files loaded subsequently.

During calibration, you may load S-Parameter files which describe the cables between the signal generator and the network analyzer. In this case, the correction data for the setup is calculated so that it excludes the correction values listed in the S-Parameter files. This allows you to exchange the S-Parameter files subsequently if you, for example, use different cables to connect the DUT to the outputs of the signal generator.

Click the filename to retrieve details on the loaded files or to select a different file, see [Chapter 10.4.2.4, "Additional S-Parameter files settings"](#), on page 694.

Save Setup .../Save Setup as ...

Saves the setup configuration in a file.

The "*" symbol behind the filename in the dialog header indicates unsaved settings. It appears whenever you change any of the settings in the dialog.

To overwrite the current file, select "Save Setup ...".


To retain the setup file content, select "Save Setup as ...".

10.4.2.4 Additional S-Parameter files settings

Access:

1. Select "System Configuration > Multi Instrument > RF Ports Alignment" > **"Setup"**.
2. Select a setup file and select "Edit".

3. Select "RF Ports / Instruments > RF ports table" > **"Additional S-Parameter Files"**.

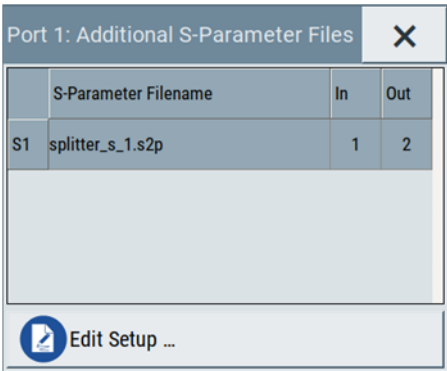

In this dialog, you can load S-parameter files to compensate for exchanged cables or other components.

Settings:

Add S-Parameter File.....	695
S-Parameter Filename.....	695
In/Out.....	695
Delete.....	695

Add S-Parameter File

Appends a row in the table with S-parameter files.

S-Parameter Filename

Indicates the filename of the loaded file.

Select the filed to open the standard "File Select" dialog for selecting and loading S-parameters (Touchstone) files. S-parameters files are files with predefined extension (*.s<n>p) and file format.

Use the standard "File Manager" function to transfer external data lists to the instru-
ment.

In/Out

Sets the origin and destination ports, i.e. the port number from that the signal is coming and the port to that it is going. Use this parameter to change the orientation of the sig-
nal chain.

Delete

Removes the selected table row and the S-parameter file.

10.5 Control and operation of external instruments

In test scenarios that require more than two RF signals, the I/Q analog and digital output signal can be routed to and processed by external instruments. Typically, the generated I/Q streams are further processed by R&S SGT or R&S SGS.

Other applications like the radar echo generation or the generation of WLAN 802.11ad signals at 58.3 GHz require connected R&S FSW or R&S SZU.

The R&S SMW provides all settings required to configure the output connectors, to establish the connections to the connected RF instruments and to control them. The settings are grouped in the "System configuration" > [External RF and I/Q](#) dialog. In this dialog, you find an overview of all available I/Q input and output connectors and configure the connection to the external instruments.

Once the connection is established, the R&S SMW acts as a primary instrument and controls the setup-related parameters of any connected further processing external instrument.

10.5.1 Prerequisites for control of external instruments from the R&S SMW

Required are the following connections between the R&S SMW and the external instruments:

- Physical remote control connection over LAN or USB
The remote control connection to the external instruments must be in status connected.
See [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137.
- Physical signal connection for the digital or analog I/Q signal
- For the most test setups, the instruments must use a common reference frequency signal.

Suitable reference frequency signal sources are:

- An external common reference source
- The distributed reference frequency of the R&S SMW.

10.5.2 Test setups

The test setup depends on the external instrument and the used I/Q output signal (digital, analog single-ended or analog differential).

See for example [Figure 4-22](#), [Figure 4-24](#), [Figure 4-26](#) and [Figure 4-33](#).

See also [Chapter 4.1.2, "From a test scenario to the required system configuration"](#), on page 110.

10.5.3 Control of connected R&S SGT

Up to 6 R&S SGT instruments can be connected to the R&S SMW. As with all external instruments, you find R&S SGT-related information like the connection status and the used RF level and frequency values in the [External RF and I/Q](#) dialog. This dialog provides also additional short information on each of the connected instruments.

Settings related to the output signal are grouped in the [I/Q Digital](#) dialog.

10.5.4 Control of connected R&S SZU

If you connect an R&S SZU to the R&S SMW, the R&S SMW block diagram changes and resembles the signal routing. The R&S SMW routes the analog I/Q output signal into the R&S SZU. The I/Q modulator block visualizes the I/Q modulator of the R&S SZU. The routing is fixed. You can only swap the streams (A and B) at the RF outputs of use the differential I/Q outputs instead of the default single-ended output.

See also ["To connect and configure an R&S SZU"](#) on page 206.

The R&S SMW controls the R&S SZU as it is its embedded unit. You access the R&S SZU settings directly from the R&S SMW block diagram. The access is identical to the access of the R&S SMW RF settings but the list shows only the supported settings.

For example:

- To access the R&S SZU RF settings, select the R&S SZU icon.
- To access the I/Q modulator settings of the R&S SZU, select the "I/Q Mod" block.

The R&S SMW RF settings are dedicated to the R&S SZU. The corresponding RF output cannot be used for other application, like, for example, LO coupling.

As with other downstream instruments, the frequency and level indications in the R&S SMW status bar show the R&S SZU values. Parameters like the frequency and level offset, level limits, delta phase or RF output state affect the RF output of the R&S SZU.

The remote commands required to define the R&S SZU settings are the same as the R&S SMW commands, so that you can reuse your SCPI scripts. Note the changes in the value ranges and the commands usage listed in chapter "Remote Control" in the description SZU100A Getting Started.

For step-by-step description, see:

- [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200

10.5.5 Further information

For information on the possible scenarios and test setups, see:

- [Chapter 4.1.2, "From a test scenario to the required system configuration"](#), on page 110

For description of the settings related to connection establishment, see:

- [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137

- [Chapter 4.4.2, "I/Q stream mapper settings"](#), on page 135

For information on the manual and remote control operation of the external instruments, see the documentation of the particular instrument:

- For R&S SZU, see the SZU100A Getting Started
- For R&S SGT, see the SGT100A User Manual

11 File and data management

The R&S SMW uses files to save all instrument data. The instrument allows you to save and to load instrument settings, and to import and to export user data for processing in another instrument or later. Finally, you can create a screenshot of the current settings displayed on the screen and save it as a file.

The main save and recall function for managing of the instrument settings is available via the SAVE/RCL key. Dedicated save/recall functions are available in the settings dialogs of the digital standards or accessible whenever user files are used.

This section focuses on the functions provided for managing of user data files and covers the topics listed below.

For information on the related remote control commands, refer to [Chapter 14.7, "Memory subsystem"](#), on page 918.

For information on how to save the displayed setting in a file, refer to [Chapter 11.10, "Creating screenshots of current settings"](#), on page 732.

• About the file system	699
• Restoring the (default) instrument configuration	702
• Protecting data	708
• Saving and recalling instrument settings	709
• Accessing files with user data	715
• Exporting and importing remote command lists	719
• Loading, importing and exporting lists	719
• Using the file manager	720
• How to transfer files from and to the instrument	726
• Creating screenshots of current settings	732

11.1 About the file system

Depending on the contained information, two file groups can be distinguished: system and user files.



Due to security reasons, system files and the system directory are protected and therefore not accessible.

The scope of this section is only the files with user data.

This section is an overview of the R&S SMW file system and covers the following topics:

- ["Types of user data"](#) on page 700
- ["File storage location"](#) on page 700
- ["File handling"](#) on page 701
- ["File naming conventions"](#) on page 701
- ["File extensions"](#) on page 702

- ["File contents"](#) on page 702

Types of user data

The **user data** includes saved instrument settings, data for the different digital standards, lists for the list mode and the user correction, and the waveforms for the arbitrary waveform generator.

You can also save the settings in the form of command sequences, e.g. in SCPI or other languages.

Depending on the **content**, the **user data** can be roughly divided into the following data types:

- *Settings*, e.g. the frame setting of the GSM/EDGE standard or the current instrument settings, can be saved and loaded later or in the other instrument path.
See [Chapter 11.4, "Saving and recalling instrument settings"](#), on page 709
- *SCPI scripts*, a series of commands that can be run to perform a task.
See [Chapter 11.6, "Exporting and importing remote command lists"](#), on page 719
- Externally or internally generated *lists*, e.g. user correction lists, or data lists can be loaded in the instrument.
See [Chapter 11.7, "Loading, importing and exporting lists"](#), on page 719 and [Chapter 11.5, "Accessing files with user data"](#), on page 715
- Externally or internally generated *complex modulation and control data* can be loaded in the instrument.
See [Chapter 11.5, "Accessing files with user data"](#), on page 715
- Externally generated *waveforms* can be loaded in the "Arbitrary Waveform Generation" dialog.
See [Chapter 5.7, "Using the arbitrary waveform generator \(ARB\)"](#), on page 315

Depending on the **data storage method**, user data can be:

- *Persistent*, i.e. user files that are recorded on the data storage.
Data is preserved when instrument is powered off and can be accessed and modified subsequently.
- *Temporary*, i.e. volatile data that the instrument retains while it is powered on.
Volatile data is immediately lost when the R&S SMW is switched off.

File storage location

Without any additional measures, the R&S SMW stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

Default storage location

The R&S SMW stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 11.8, "Using the file manager"](#), on page 720. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

File handling

To *access files* and the file system of the instrument or to use the general file management functions such as copying and moving data, use the standard "File Manager" dialog.

See [Chapter 11.8, "Using the file manager"](#), on page 720.

To *transfer files* from and to the instruments or to exchange files, use one of the following alternatives:

- Connect a memory stick to one of the USB interfaces.
The instrument recognizes automatically a connected memory stick and assigns the `/usb/` drive to it.
- Connect the instrument to a LAN.
An instrument connected to a LAN supports two standard file transfer methods from a remote client:
 - FTP (file transfer protocol)
 - File sharing according to the SAMBA/SMB (server message block) protocol.
 Both file transfer methods access the folder `/user`, that is the `/var/user/` folder on the instrument.
For step-by-step description, see [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.
- Map a network folder or a computer to an instrument connected to a LAN.
A mapped network folder is indicated as `/shares/<"Local Folder">`.
For step-by-step description, see [Chapter 11.8.4, "How to map a network folder"](#), on page 724.

File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: `CLOCK$`, `CON`, `COM1` to `COM4`, `LPT1` to `LPT3`, `NUL` or `PRN`
They are reserved by the operating system.

File extensions

The R&S SMW distinguishes the files according to their extensions; each type of file is assigned a specific file content and also a specific file extension. The extension is usually of no consequence to you since access to the files occurs in the individual dialogs where only the relevant type of file is available. For example, files with user correction data can only be saved and loaded in the "UCOR" dialog.

See [Chapter E, "Extensions for user files"](#), on page 1423 for an overview of the supported file extensions.

File contents

To maintain the file size and to accelerate the loading and processing times, not all instrument settings but rather the settings in state different than the preset one are saved. Considered is also configuration data for the operating elements and lists with user data, e.g. dialog positions and a list of user correction data. However, if a list data is part of the instrument settings, a reference to this list is saved, not the list itself.

This approach ensures that the created files contain only relevant information and allows you to transfer instrument settings even between different equipped signal generators. During the recall process, the instrument interprets only the relevant settings; all non-referenced parameters are set to their preset values. Error messages indicate the settings which cannot be implemented, like referencing non-existing lists or the attempt to activate settings which are not supported by the instrument.



Network settings and remote settings cannot be saved and restored.

11.2 Restoring the (default) instrument configuration

The R&S SMW has various options to set default settings. You can preset the R&S SMW to an initial state at any time as a known starting point for configurations. It is often useful as a first step in troubleshooting when unusual results arise.

The graph on [Figure 11-1](#) shows the impact of the particular reset functions.

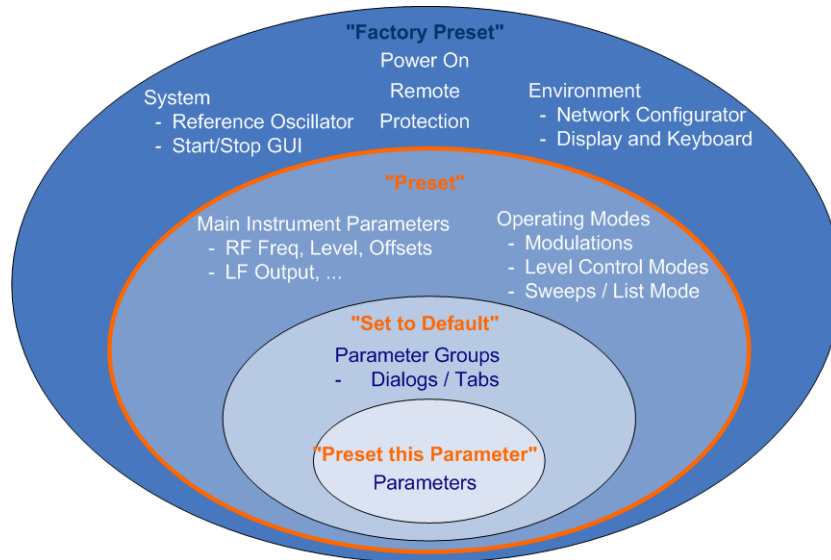


Figure 11-1: Parameter and operating modes, reset by the respective preset functions

Overview of the characteristics of the preset functions

Select the preset option that most fits to your particular application:



 
- [PRESET]
It is the most frequently used function.
A **Preset** executes a defined instrument setup to provide an initial instrument state as a basis for a new configuration. It resets all parameters and switching states, including also the states of inactive operating modes.
Network, remote access or system settings are retained.

► To execute a preset, press the [PRESET] key at the front panel.




- "Set to Default"
Set To Default relates to individual dialogs or tabs and resets the associated settings of the corresponding dialog. All other settings are retained.
For example, you can use it to reset all digital modulation settings in the "Custom Digital Mod" dialog.

► To reset the grouped settings, click "Set To Default".



- "Preset this parameter"
Sets a single parameter to its default value.

 - ▶ To reset an individual parameter: Open its context-sensitive menu and select "Pre-set this parameter...".



- "Factory Preset"
A factory preset is the most profound preset function that resets almost all instrument settings, including reference oscillator, network and remote access settings. Retained are the following settings:
 - Security, password, and settings protected by these passwords
 - User-defined data, like setups or data lists
 - Settings that relate to an integration of the instrument in a measurement setup.

- ▶ To restore the factory defaults, select [System Config > Setup > Settings > Factory Preset](#).

Note: Perform a "Factory Preset" only if it is necessary. After a "Factory Preset", the network connection to the instrument no longer exists.

Presetting the instrument to a user-defined instrument state

The reset functions set the parameters and operating modes to default values predefined by the factory. Alternatively to these default settings, you can:

- Define user-specific recall settings to be restored after a preset (see [Chapter 11.2.3, "How to recall user settings automatically after preset"](#), on page 706)
- Store and reload user-defined instrument states (see [Chapter 11.4.2, "How to save and recall instrument settings"](#), on page 713)

Mark / Do not mark parameters changed from preset

To survey the current state of the settings concerning default values, the R&S SMW offers a feature that visually identifies deviations from the default values.

For more information, see [Chapter 11.2.2, "How to identify parameters which are not in a preset state"](#), on page 705.

11.2.1 Preset, set to default and factory preset settings

Preset	704
Set To Default	705
Preset this Parameter	705
Execute Factory Preset	705

Preset

Resets all parameters and switching states, and closes all opened dialogs.

External instruments connected to the R&S SMW are also preset, see [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137.

Note:

In contrast to the [PRESET] key, the SCPI commands `*RST` and `:SYSTem:PRESet` do not close open dialogs in the GUI.

Consider also the following possibilities:

- You can define the settings that are restored when you preset the instrument (see [Chapter 11.2.3, "How to recall user settings automatically after preset"](#), on page 706)
- In remote control, you can preset the settings of the two instrument paths separately (see [Chapter 14.6, "Preset commands"](#), on page 916)
- You can reset the instrument to the factory state (see ["Execute Factory Preset"](#) on page 705)

See also [Table 11-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`*RST` on page 915

Set To Default

Resets the associated settings of the corresponding dialog or tab.

Remote command:

For example, `[:SOURce<hw>] :BB :<Digital Standard> :PRESet`

Preset this Parameter

Restores the default value of a single parameter.

Execute Factory Preset

Resets the instrument to its factory settings.

Note: "Factory Preset" retains all security settings and does not delete any user files like setups or user data.

See also [Table 11-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`:SYSTem:FPReset` on page 918

 
11.2.2 How to identify parameters which are not in a preset state

To recognize the current state of the settings related to their default values at the first glance, enable a function that visually identifies parameters in states different than preset.

To activate this display:

1. Open the context-sensitive menu (touch and hold the screen anywhere in the GUI of the R&S SMW).

2. Select "Mark all parameters changed from preset".



If enabled, the corresponding settings are marked.

Example:

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

Figure 11-2: Labeled parameters show that the value deviates from its default

Frequency = changed (default = 1 GHz)
 Offset = changed (default = 0 kHz)
 Multiplier = unchanged
 Variation active = changed (default = disabled)
 Variation step = unchanged

11.2.3 How to recall user settings automatically after preset

 
You can define the settings that are restored when you preset the instrument.

1. Configure the settings as required. Save them as described in [Chapter 11.4.2, "How to save and recall instrument settings"](#), on page 713.
2. Save the settings as a file with the predefined filename `UserPreset.savrc1.txt`. Save this file in the directory `/var/user/`.

The filename `UserPreset.savrc1.txt` and the directory `/var/user/` are mandatory.

Now when you press the [PRESET] key or send the `*RST` command to the instrument, the defined settings are restored.

An "Info" message appears and confirms, that a file with user-defined preset setting is loaded.



11.2.4 Reference

See [Table 11-1](#) for an overview of the main generator settings that are affected by the corresponding preset functions. While the regular [PRESET] key primarily resets the

signal relevant parameters of the instrument, the "Factory Preset" affects almost all instrument settings.

For information on the default values of further parameters, refer to the description of the corresponding remote commands.

Table 11-1: Key parameters affected by preset and factory preset

Parameter	Preset value	Preset	Factory Preset
RF frequency	1 GHz	x	x
RF level (RF output)	off	x	x
RF OFF mode	-	-	x
Offsets	0	x	x
Modulation state	off	x	x
Uninterrupted level settings	off	x	x
Level attenuator mode	auto	x	x
Level ALC (internal level control)	auto	x	x
Level UCOR (user correction)	off	x	x
LF output state	off	x	x
Sweep state	off	x	x
List mode state	off	x	x
Reference frequency settings (reference oscillator)	-	-	x
Power on settings (Level/EMF)	-	-	x
Network settings	-	-	x
Hostname ¹⁾	-	-	x
GPIB address	-	-	x
Start/Stop display update	-	-	x
Display and keyboard settings	-	-	x
Preset behavior: Keep connections to external instruments	off	-	x
Password and settings protected by passwords (e.g. disabled LAN or USB)	-	-	-
Security settings	-	-	-
User files (setups ²⁾ , data lists, etc.)	-	-	-
HUMS > State	off	-	x
HUMS protocol > SNMP	v1/v2c	-	x
HUMS protocol > REST	on	-	x

Parameter	Preset value	Preset	Factory Preset
HUMS protocol > Access	Read & Write	-	x
HUMS protocol > Community	<serial number>	-	x

- 1) Hostname syntax `rs<inst><Serial Number>` has changed to `<INST>-<Serial Number>` (FW 3.20.200.xx and later)
- 2) `UserPreset.savrcltxt` is renamed as `UserPresetInactive.savrcltxt`; an existing file with the same name is overwritten.



If the default values in the "Remote Access" dialog had been changed, a factory preset via remote control (`:SYSTem:FPReset`) terminates the connection to the instrument. Security settings are never reset.

Resets all parameters and switching states, and closes all opened dialogs.



A [PRESET] resets also external instruments connected to the R&S SMW. See [Chapter 4.4.3, "External RF and I/Q settings"](#), on page 137.

11.3 Protecting data

During operation, the R&S SMW saves user data permanently in the user directory, see ["File storage location"](#) on page 700.

To protect any classified data and to avoid saving any sensitive data on the R&S SMW permanently, you have the following options:

- Activate the **volatile mode**. This mode redirects user data to the volatile memory, see ["Volatile Mode"](#) on page 801.
The internal memory is write-protected.
Once you power off the instrument for at least five minutes, all volatile memory modules lose their contents.
Instead, you can redirect the user data to an **external memory device**, as, e.g., a USB stick.
See also:
 - ["Default storage location"](#) on page 700
 - ["Volatile Mode"](#) on page 801
 - [Chapter 11.9.4, "Using a USB storage device for file transfer"](#), on page 731
- Save user files **temporarily in the `/var/volatile` directory**, which remains available only until the instrument is turned off.
You can access data in the volatile memory just as data that is saved permanently in the `/var/user/`.
See also [Chapter 11.8.3, "How to display all saved files"](#), on page 724.

Removing the system drive from the R&S SMW

1. **NOTICE!** You can damage the instrument and loose data, when removing the system drive during operation.

Switch off the R&S SMW, see ["To shut down the product"](#) on page 39.

2. Remove the system drive from the instrument.



For detailed information on how to protect the instrument and sensitive data from unauthorized access, see the Instrument Security Document on the product website.

11.4 Saving and recalling instrument settings

Possibly you would like to restore or repeat a signal generation you performed under specific conditions on the instrument. Or, in a test setup with more than one signal generator, you want to transfer the used settings to another R&S SMW. Some test setups also require similar settings in all instrument paths. In these cases, you can save and recall instrument and user settings, and possibly other related data.

In each of these cases, you can create a file with the complete instrument settings or you can choose to save only the settings belonging to a particular digital standard. The instrument uses a similar save/recall principle; both ways are scope of this section.

Save/Recall the complete instrument settings

Two different methods are available for managing *complete instrument settings*:

- Immediate (quick) Save/Recall
A defined set of instrument settings are saved or recalled quickly in just one step, without defining a filename or storage location. This function enables a fast switching between different instrument settings.
- Save/Recall in files with user-defined names
The defined set of instrument settings are saved to a definable storage location. The file extension is `*.savrc1txt`.
Settings files created in this way are visible in the file system and accessible with the supported methods for file handling.

In the general case, a recall process replaces the instruments settings with the saved values. An exception is the frequency and level settings. During recall of the instrument settings, it is possible to retain the current settings or to overwrite them with the saved values.

Save/Recall the settings belonging to a firmware option

Each of the firmware option provides a special "Save/Recall" function to manage directly the settings associated to the corresponding digital standard, e.g. all settings in the "3GPP FDD" dialog.


The "Save/Recall" function creates files with user-defined names, predefined file extension and on a definable storage location. The files are accessible with the supported methods for file handling.

11.4.1 Save/recall settings

To access the dialog for saving and loading the complete instrument settings

1. Press the [SAVE/RCL] key.
2. Select "Operation Mode > Save or Recall" to access the corresponding settings.


The provided settings for both operations are similar and closely related.

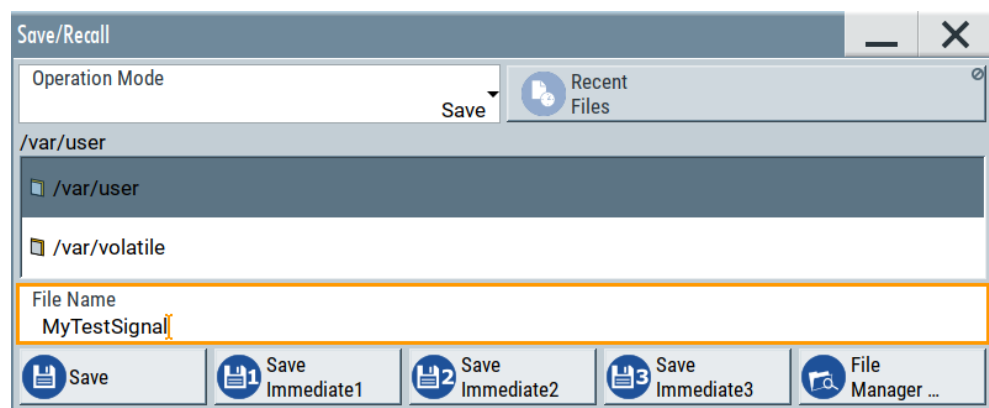

To access the dialog for saving and loading the settings of a firmware option

- In the general dialog of the corresponding digital standard, select the "Save" or "Recall" function.
For example, select "Block Diagram > Baseband > EUTRA/LTE > General > Save".

The name of the dialog is context-sensitive and differs depending on the particular digital standard. The provided functions are similar.

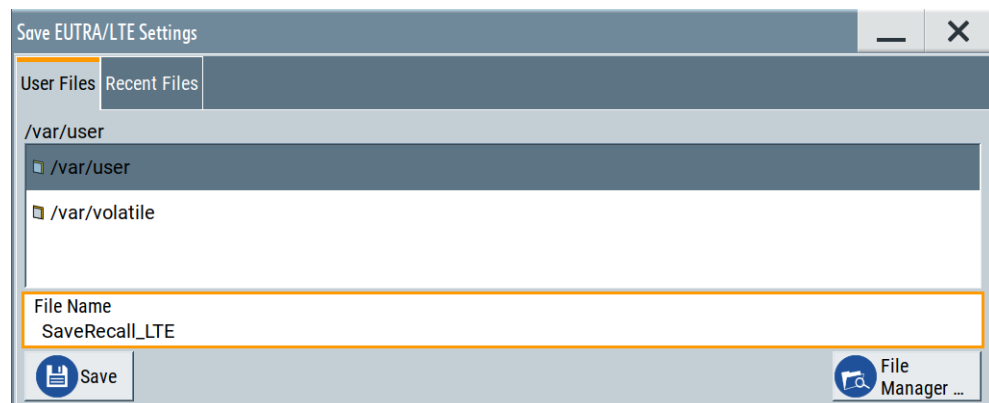

Settings:

Operation Mode.....	711
Directory, File List and Filename.....	711
Recent files.....	712
Show SCPI List.....	712
SCPI List.....	712
Save.....	712
Save Immediate x.....	712
Exclude Frequency.....	712
Exclude Level.....	712
Recall.....	712
Recall Immediate x.....	713
File Manager.....	713

Operation Mode

Accesses the settings for storing ("Save") and loading ("Recall") of the instrument settings. Also, you can import SCPI-Files ("SCPI-Import") or export SCPI files ("SCPI-Export").

See [Chapter 11.6, "Exporting and importing remote command lists"](#), on page 719.

Directory, File List and Filename**Note:**

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions ["New"](#), ["Select"](#), ["Save"](#), and ["Recent files"](#).
- To access the general data list editor, use the ["Edit"](#) button (see also [Chapter 8.10.7, "List editor"](#), on page 547).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 11.8, "Using the file manager"](#), on page 720).

Remote command:

To list all files in a directory:

[:MMEMory:CDIRectory](#) on page 924

[:MMEMory:CATalog?](#) on page 923

Refer to the description of firmware options for the syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:CATalog](#)

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 1200

To list files with user data:

[\[:SOURce<hw>\]:BB:DM:DLISt:CATalog?](#) on page 1089

[\[:SOURce<hw>\]:BB:DM:CLISt:CATalog?](#) on page 1089

Recent files

Displays the files last used.

Show SCPI List

Opens the "SCPI List", which lists the current settings of the R&S SMW as SCPI commands.

The R&S SMW provides this function for [Operation Mode > SCPI-Export](#).

SCPI List

Contains a list of all SCPI commands corresponding to the current instrument settings.

See also "[How to create a SCPI list with the current instrument settings in one step](#)" on page 893

Save

Saves the current instrument settings or the settings belonging to a digital standard under the defined filename.

Remote command:

[:MMEMory:STORe:STATe](#) on page 930

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI commands:

```
[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:STORe
[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:DELeTe
```

Save Immediate x

Stores the current instrument setting in one of the intermediate memories.

These instrument settings are retained until a different instrument setting is stored in the intermediate memory. When the instrument is switched off, the contents of the intermediate memories are retained.

Remote command:

[*SAV](#) on page 915

Exclude Frequency

The current frequency is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw> \] :FREQuency \[:CW|FIXed \] :RCL](#) on page 1211

Exclude Level

The current level is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw> \] :POWer \[:LEVel \] \[:IMMediate \] :RCL](#) on page 1286

Recall

Restores the selected configuration.

During recall, the instrument considers all related settings, for example sweeps in active state or lists. An error message indicates the settings which cannot be implemented.

Remote command:

[:MMEMory:LOAD:STATe](#) on page 928

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command:

`[:SOURce<hw>] :BB:<Digital Standard> :SETTing:LOAD`

Recall Immediate x

Loads the selected configuration from one of the intermediate memories. A message appears if no instrument configuration is stored in this memory.

Remote command:

[*RCL](#) on page 914

File Manager

Accesses the "File Manager" dialog, see [Chapter 11.8, "Using the file manager"](#), on page 720.

11.4.2 How to save and recall instrument settings

Instrument settings can be saved to a file and loaded again later, so that you can repeat the tests with the same settings.

To access and recall instrument setups quickly

- Assign the appropriate action to the [USER] key.
See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

To save and recall instrument settings

1. Select SAVE/RCL > "Operation Mode > Save".
2. Select "Save Immediate 1".
The instrument saves its settings in the intermediate memory 1. The filename and the storage location cannot be changed.
3. Adapt the instrument settings as required. Select "Save Immediate 2"
4. To restore the settings, select the "Operation Mode > Recall"
5. Select "Recall Immediate 1"
The instrument is restored to the previous state.
6. Select "Recall Immediate 2" to switch to the settings saved in the second file.

To save complete instrument settings

1. Select SAVE/RCL > "Operation Mode > Save".
2. In the file selection dialog, select a filename and storage location for the settings file.

3. Select "Save".

A file with the defined name and path and the extension *.savrc1.txt is created.

To restore instrument's configuration

Save the configuration as described in ["To save complete instrument settings"](#) on page 713.

1. To restore settings, select SAVE/RCL > "Operation Mode > Recall".
2. To retain the current frequency and level settings, enable "Save/Recall > Exclude Frequency/Level".
3. In the file selection dialog, select the filename and storage location of the settings file.

The settings are restored, but the frequency and level settings are retained; you can repeat the signal generation with the same settings.

See also [Chapter 11.2.3, "How to recall user settings automatically after preset"](#), on page 706.

11.4.3 How to recall the settings of a firmware option

Some test setups, e.g. for MIMO tests, require that two or more instruments generate baseband signal with similar settings. One easy way to speed up the configuration is to use the dedicated save/recall function to transfer the configuration data from one instrument to the other.

To use the "Save/Recall" function to transfer settings related to a digital standard to another instrument

1. In the first instrument, select "Baseband > Digital Standard, e.g. 3GPP FDD".
Adjust the settings as required.
2. In the "3GPP FDD > General" tab, select "Save".
In the file selection dialog, select a filename and storage location for the settings file.
A file with the defined name and path and a predefined extension (*.3g) is created.
3. Connect both instrument to a LAN.
Alternatively, use a USB flash drive to transfer the created *.3g file to the second instrument.
4. In the second instrument, select "Baseband > 3GPP FDD > General > Recall" to load the saved file.

5. Navigate in the file selection dialog. Select the filename and storage location of the settings file.

The settings are loaded in the second instrument. If the corresponding settings are left unchanged, the second instrument generates a signal with identical baseband settings.

11.5 Accessing files with user data

By the calculation of signals according to the different digital standards or by the generation of custom digitally modulated signals, the R&S SMW uses the data from different data sources (see also [Chapter 5.5.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 234). To simulate the signal of one UE for instance, the instrument modulates and codes the provided data for each channel. It further processes the signal as described in the corresponding standard.

Whenever a data list file is enabled as a data source, the instrument provides direct access to the standard "File Select" function. This function enables you to select, create and edit the data list files.


11.5.1 File select settings

The "File Select" dialog opens automatically each time you select a data list file as data source or you select a control list.

To access a loadable data list file


1. Select the "Data List Name" in the individual dialog.
For "Baseband > 3GPP FDD > Base Stations > BS1 > Channel Table > P-CCPCH > Data = Data List", for example, select "DList Patt = None".

A file select dialog for loading, creating and modifying a file opens.

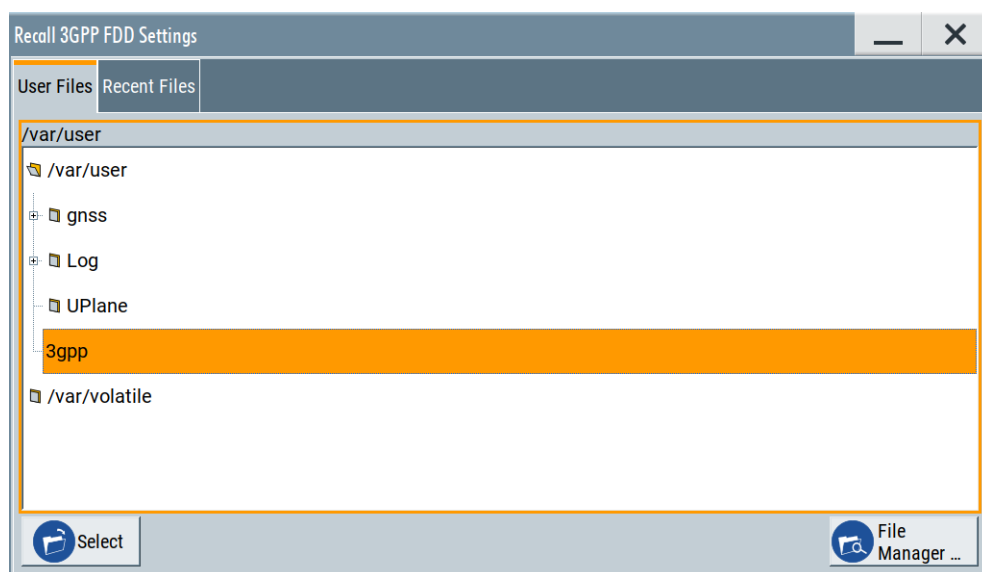

Tip: The name of the dialog is context-sensitive and differs depending on the particular function this dialog is from. However, the provided functions are similar.

2. To load an existing file:
Navigate through the file system.
Select the file and confirm with "Select".
3. To create a file, for example if there is no data list file specified:
Navigate through the file system.
Select "New" and specify the filename.
A new empty file is created and saved in the selected folder.
4. To edit an existing or newly created file:
Navigate through the file system.
Select the file and select "Edit".
The standard "Data List Editor" dialog opens
See [Chapter 5.6.3.7, "Data list editor"](#), on page 294.

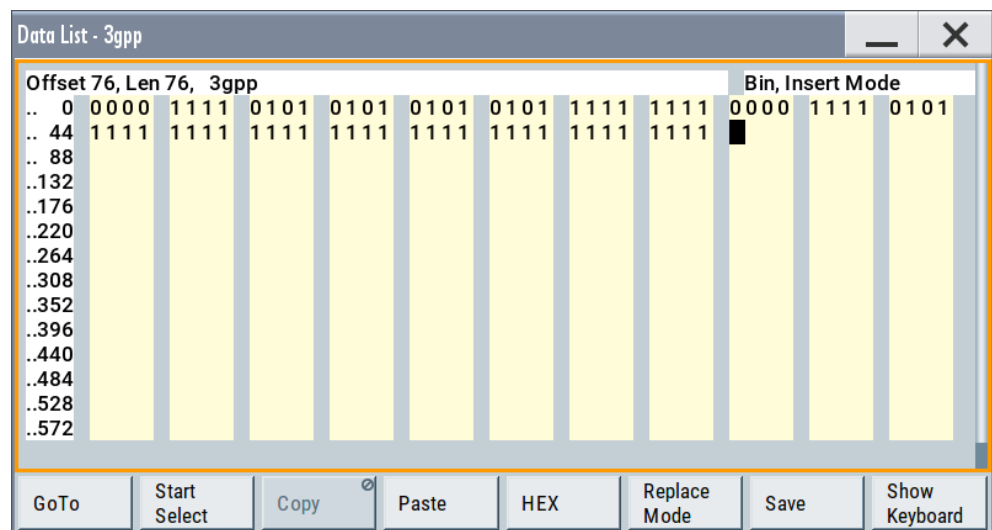

5. Edit the file content.
Confirm with "Save".

Settings:

Directory, File List and Filename.....	717
Functions for handling of data lists.....	718
Functions for handling of control lists.....	718
Recent files.....	718
File Manager.....	718

Directory, File List and Filename

Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions "New", "Select", Save, and Recent files.
- To access the general data list editor, use the "Edit" button (see also [Chapter 8.10.7, "List editor"](#), on page 547).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 11.8, "Using the file manager"](#), on page 720).

Remote command:

To list all files in a directory:

:MMEMory:CDIRectory on page 924

:MMEMory:CATalog? on page 923

Refer to the description of firmware options for the syntax of the corresponding SCPI command:

`[:SOURce<hw>] :BB:<Digital Standard> :SETTing:CATalog`

[\[:SOURce \] :CORRection:CSET:CATalog?](#) on page 1200

To list files with user data:

`[:SOURce<hw>] :BB:DM:DLISt:CATalog?` on page 1089

`[:SOURce<hw>] :BB:DM:CLISt:CATalog?` on page 1089

Functions for handling of data lists

Provided are the following standard functions for file handling:

"Select"	<p>Select and load the file.</p> <p>Remote command: [:SOURce<hw>] :BB:DM:DLISt:SElect on page 1090</p> <p>Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command: <code>[:SOURce<hw>] :BB:<Digital Standard> :...:DATA DLISt</code> <code>[:SOURce<hw>] :BB:<Digital Standard> :...:DSElect</code></p>
"New"	<p>Creates file with the specified "Filename".</p> <p>To confirm, select "OK"; use "Cancel" to undo the operation.</p> <p>To edit the file content, select "File Select > Edit".</p>
"Edit"	<p>Accesses the "Data List Editor" and loads the selected file for editing</p> <p>See Chapter 5.6.3.7, "Data list editor", on page 294.</p>

Functions for handling of control lists

Provided are the following standard functions for file handling:

"Select"	<p>Select and load the file.</p> <p>Remote command: [:SOURce<hw>] :BB:DM:CLISt:SElect on page 1090</p>
"New"	<p>Creates file with the specified name. To edit the file content, select "File Select > Edit".</p>
"Edit"	<p>Access the "Control List Editor" and loads the selected file for editing, see Control and marker lists editor.</p>

Recent files

Displays the files last used.

File Manager

Accesses the "File Manager" dialog, see [Chapter 11.8, "Using the file manager"](#), on page 720.

11.5.2 How to create and access data and control lists

The general principle for accessing files with user data is described in ["To access a loadable data list file"](#) on page 715. Detailed and further information on how to create

and access files with user data like data lists and control lists is provided in the following sections:

- [Chapter 5.6.4.2, "How to create and assign a data list"](#), on page 302
Overview of the possible ways and detailed description on how to create data lists.
- [Chapter 5.6.4.1, "How to create and assign a control list"](#), on page 300
Overview of the possible ways and detailed description on how to create control lists.
- [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919
Information on accessing files in a remote environment

11.6 Exporting and importing remote command lists

To set specific instrument settings or perform tasks automatically, you can create scripts or import scripts that contain the settings in the form of remote control command sequences.

The R&S SMW also offers a SCPI macro recorder with code generator that is used to record manual settings and create an executable script, see [Chapter 13.13.4, "How to record / create SCPI lists"](#), on page 891.

Completed scripts are saved in files and possibly converted to different formats, depending on the used language of the source code.

The R&S SMW supports the following commonly used languages:

- Plain SCPI: *.txt
- MATLAB: *.m
- NICVI: *.c
- Python: *.py

It is also possible to convert the SCPI command list to a user-specific language, see [Chapter 13.13.5, "How to convert and save SCPI lists"](#), on page 895.

11.7 Loading, importing and exporting lists

The R&S SMW provides built-in editors for creating list files, for example for the list mode or lists with user correction data. You can also create or evaluate them with an external application. The instrument provides interfaces with the following functionality:

- Import and export list files in a standard ASCII format file
- Load files with modulation and control information
- Load of internally or externally generated waveform file

Lists are saved and loaded in the corresponding dialogs. For example, the user correction data list is created and saved in the "User Correction" dialog.

Waveform files are created with the signal generation software R&S WinIQSIM2 or in the dialogs of some of the digital standards.

For more information, refer to:

- [Chapter 11.5.2, "How to create and access data and control lists"](#), on page 718
- [Chapter 8.12.3.4, "Import/export list files"](#), on page 603

11.8 Using the file manager

The "File Manager" is a tool similar to a standard Windows Explorer. It helps you manage mass storage media and files saved on the R&S SMW.


You can perform the following tasks:

- Copying multiple files from disk to other media
See [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726
- Copying files into another directory
See [Cut, Copy&Paste and Delete](#)
- Renaming and deleting files
- Creating directories
See [Create New Directory](#)
- Mapping shared network folders
See [Chapter 11.8.4, "How to map a network folder"](#), on page 724
- Displaying saved files
See [Chapter 11.8.3, "How to display all saved files"](#), on page 724

Access:

- Select SAVE/RCL > "File Manager".

Tip: Each "Save/Recall" dialog and each "File Select" dialog provides a quick access to the "File Manager", i.e. whenever you select data lists or files with user data.

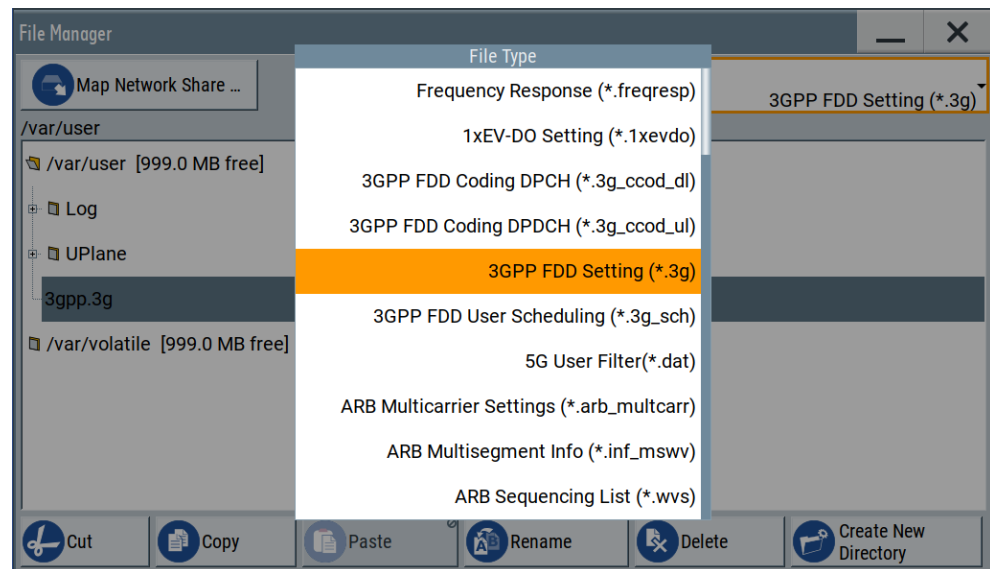

The "File Manager" dialog provides all standard functions required for file management. It displays the contents of the selected folder on the R&S SMW and provides functions to rename, delete, copy, or move individual files.

11.8.1 File manager settings

Access:

- Select SAVE/RCL > "File Manager".

Settings:

Map Network Share.....	721
File Type.....	721
Directory and Filename.....	722
Cut, Copy&Paste and Delete.....	722
Rename.....	722
Create New Directory.....	722

Map Network Share

Accesses the [Map network share settings](#) dialog where you can map one or more network folders.

See also [Chapter 11.8.4, "How to map a network folder"](#), on page 724.

File Type

Selects the file type to be listed. If a file type with a specific file extension is selected, only files with this extension are listed.

See [Chapter E, "Extensions for user files"](#), on page 1423 for an overview of the supported file extensions.

Directory and Filename

Selects the directory in which the file to be deleted or copied is located. The dialog lists all files in this directory. Selected files are highlighted. The path is indicated above the directory tree.

Unlike the "Save/Recall" and "File Select" dialogs, the "File Manager" displays the full filenames including extensions.

Remote command:

[:MMEMory:CDIRectory](#) on page 924

Cut, Copy&Paste and Delete

Standard file management functions.

Before a file is deleted, you have to confirm the delete operation.

Remote command:

[:MMEMory:DELeTe](#) on page 928

[:MMEMory:COpy](#) on page 925

Rename

Renames the selected file or directory.

Remote command:

[:MMEMory:MOVE](#) on page 929

Create New Directory

Creates a folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[:MMEMory:MDIRectory](#) on page 929


11.8.2 Map network share settings

Access:

- ▶ Select SAVE/RCL > "File Manager > Map Network Share".

The "Map Network Share" dialog provides settings that are similar to the standard Windows Explorer function "Map network drive". These settings help you to create up to 10 "shortcuts" to shared folders or computers in the network.

The dialog displays a list of current mapped network folders. The directory tree of the "File Manager", "Save/Recall", and "File Select" dialogs indicate a mapped network folder as `/shares/<"Local Folder">`.

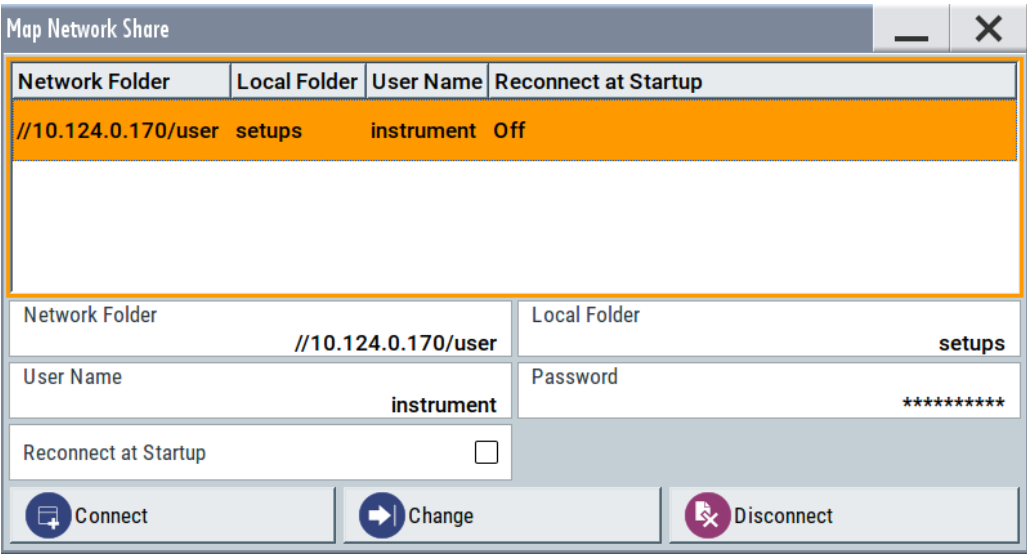

See also [Chapter 11.8.4, "How to map a network folder"](#), on page 724.

Settings:

Network Folder	723
Local Folder	723
User Name	723
Password	723
Reconnect at Startup	723
Connect	724
Change	724
Disconnect	724

Network Folder

Enter the path of the folder or computer, e.g. `//<IP Address>/user` or `//<server name>/user`.

Local Folder

Enter a letter or an alias name to describe the folder.

In the directory tree, a mapped network folder is indicated as `/shares/`
`<"Local Folder">`.

User Name

Enter a user name of a user that has the permission to access the selected network folder.

Password

Enter the password of the selected user.

Reconnect at Startup

Enables reconnecting every time you start up the instrument.

Connect

Triggers the instrument to prove the credential and to map (i.e. connect) the selected network folder or computer to the instrument.

You can map up to 10 network folders.

Change

Applies the changes.

Disconnect

Disconnects the network drive.

11.8.3 How to display all saved files

To display all files on the internal memory

1. Select SAVE/RCL > "File Manager".
2. Navigate to `/var/user/`.

To display all files on a connected USB flash drive

1. Select SAVE/RCL > "File Manager".
2. Navigate to `/usb/`.

To display all files in the volatile memory

1. Select SAVE/RCL > "File Manager".
2. Navigate to `/var/volatile/`.

11.8.4 How to map a network folder

Possibly you would like to transfer instrument or user settings to another R&S SMW, distribute waveform files to several instruments or you have to access frequently the same network drive. In these cases, on a R&S SMW connected to a LAN you can create a shortcut to this network folder or this computer.


How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

To map a network folder, proceed as follows:

1. On the computer or the network folder you want to map, enable remote access.
You can specify a list of users allowed for remote access.
The remote access settings depend on the operating system the remote computer is using. For step-by-step instructions, refer to the documentation of the particular operating system.
2. On the R&S SMW, [enable file transfer via SMB \(samba\)](#).




3. Select "System Config > Setup > Remote Access > Network".
Select:
 - a) "Address Mode > Auto (DHCP)"
 - b) Check that the "DNS Suffix" and "DNS Server" are correct.
4. Press the [SAVE/RCL] key.
5. In the "Save/Recall" dialog, select "File Manager > Map Network Share".
6. In the "Map Network Share" dialog, select:
 - a) In the "Network Folder" field, enter `//<IP Address>/user` or `//<Server Name>/user`.
For example, `//10.124.0.170/user`.
 - b) In the "Local Folder" field, enter an alias name, e.g. `setups`.
 - c) Enter the "User Name" and "Password" of a user with a remote access permission to the selected network folder.
 - d) If necessary, enable "Reconnect at Startup".
 - e) Select "Connect".

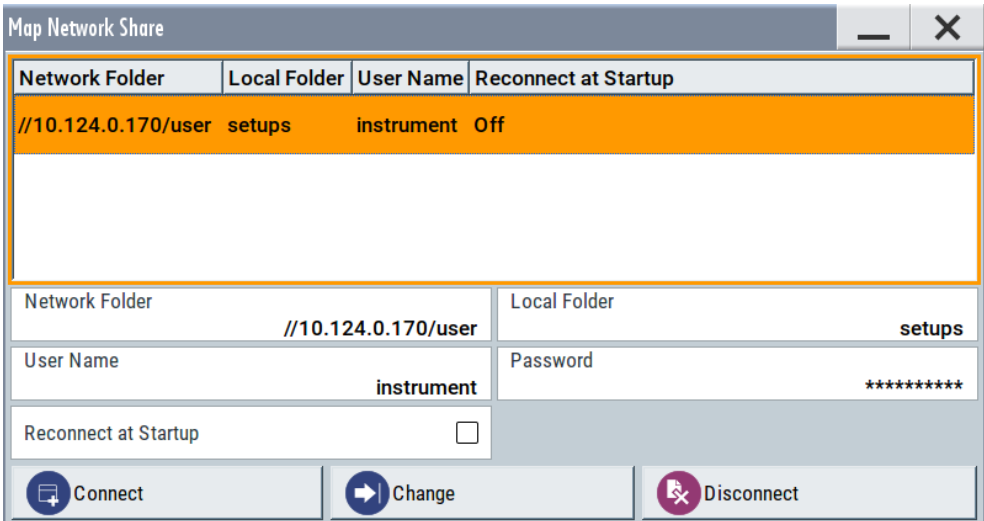The selected network folder is mapped to your instrument. The list of mapped network folders is updated.




Network Folder	Local Folder	User Name	Reconnect at Startup
//10.124.0.170/user	setups	instrument	Off

Network Folder	//10.124.0.170/user	Local Folder	setups
User Name	instrument	Password	*****
Reconnect at Startup	<input type="checkbox"/>		

 Connect
  Change
  Disconnect

7. Close the "Map Network Share" dialog.

The navigation tree in the "File Manager" dialog displays the mapped network folder as `/shares/Setups`.

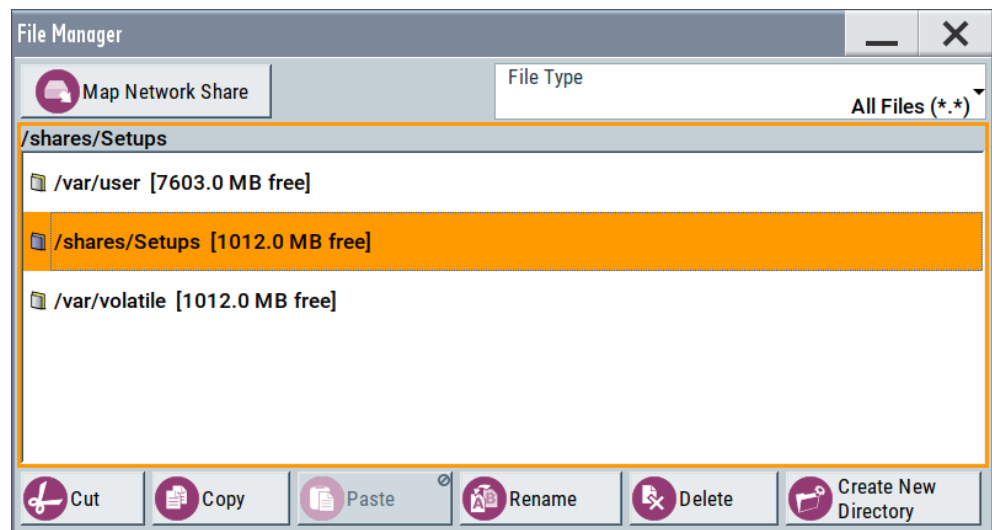

If the connection does not succeed, consider to check the following:

- Is the network folder or computer you try to map turned on?
- Is the network folder or computer enabled for remote access?
- Does the selected user name have the necessary permissions?

See also [Chapter 11.9.5, "Using a file server for test files exchange"](#), on page 731.

11.9 How to transfer files from and to the instrument

As explained in ["File handling"](#) on page 701, you access the file system of the R&S SMW via one of the following ways:

- Via the built-in "File Manager"
See [Chapter 11.8, "Using the file manager"](#), on page 720.
- On an instrument connected to a LAN:
 - Via one of the standard functions FTP or SMB (samba)
See [Chapter 11.9.2, "Accessing the file system of the R&S SMW over FTP"](#), on page 728 and
[Chapter 11.9.3, "Accessing the R&S SMW file system using SMB \(Samba\)"](#), on page 729
 - Via mapped network drives
See [Chapter 11.8.4, "How to map a network folder"](#), on page 724.
- Via a connected USB storage device
See [Chapter 11.9.4, "Using a USB storage device for file transfer"](#), on page 731

Mainly because of security reasons, the access to the file system of your R&S SMW can be denied, because one or all these access methods are deliberately disabled. Access to the file system via LAN and/or USB requires that the corresponding service is enabled and a write access to the file system is enabled. Refer to [Chapter 11.9.1, "Removing file system protection"](#), on page 727 for description of the required steps.

This section provides an introduction to the topic. For comprehensive information, refer to the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

- [Removing file system protection](#)..... 727
- [Accessing the file system of the R&S SMW over FTP](#)..... 728
- [Accessing the R&S SMW file system using SMB \(Samba\)](#)..... 729
- [Using a USB storage device for file transfer](#)..... 731
- [Using a file server for test files exchange](#)..... 731

11.9.1 Removing file system protection

Before you try to access the file system via FTP, SMB (samba) or USB, fulfill the following:

- Disable write protection on the file system
- Enable the corresponding service or interface

To enable write permission on the file system

1. Select "System Config > Setup > Security > Security > General".
2. Select "Disk & Memory".
3. Enable "Volatile Mode".
4. Enter the "Security Password".
The default password is 123456. For more information, see [Chapter 12.7, "Using the security settings"](#), on page 797.
The R&S SMW requests a reboot.
5. Confirm the request.
The system reboots. The enabled settings are active.

To enable file transfer over FTP

1. Select "System Config > Setup > Security > Security > LAN Services".
2. In the "Common Services" tab, enable "LAN Interface"
3. Enable "FTP"
4. Enter the "Security Password".
The default password is 123456. For more information, refer to [Chapter 12.7, "Using the security settings"](#), on page 797.
5. Select "Accept".

To enable file transfer over SMB (samba)

1. Select "System Config > Setup > Security > Security > LAN Services"
2. Enable "LAN Interface"
3. Select "Samba Services".

4. Enable the "SMB 1.0/2.0 Client".
5. Enable the "SMB 1.0/2.0 Server".
6. Enter the "Security Password".
The default password is *123456*. For more information, refer to [Chapter 12.7, "Using the security settings"](#), on page 797.
7. Select "Accept".

To enable file transfer over USB

1. Select "System Config > Setup > Security > Security > General"
2. Select "Disk & Memory".
3. Enable "USB Storage"
4. Enter the "Security Password".
The default password is *123456*. For more information, refer to [Chapter 12.7, "Using the security settings"](#), on page 797.
5. Select "Accept".

11.9.2 Accessing the file system of the R&S SMW over FTP

If the R&S SMW is connected to a LAN, you can use file transfer protocol (FTP) to access the file system and to transfer files from and to the instrument.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

To access the file system over FTP

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `ftp://<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

Tip: The R&S SMW indicates its IP address on the block diagram.

A log-on dialog opens and requests a password.

The default user name and password is *instrument*.

Tip:


Default password

The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 12.7.4, "Password management"](#), on page 808.

5. Enter the password to access the `user` directory.
The `user` directory corresponds to the `/var/user/` directory of the instrument.

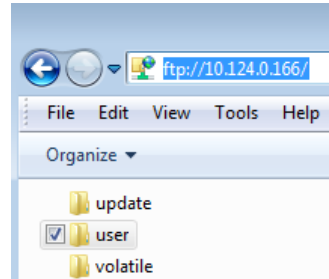


There, you can perform standard functions like creating directory, or saving files.

6. In the `user` directory, create a directory, e.g. `test ftp`.
7. Select SAVE/RCL.

Open the `/var/user/` directory.

The dialog displays the `/var/user/test ftp` directory.

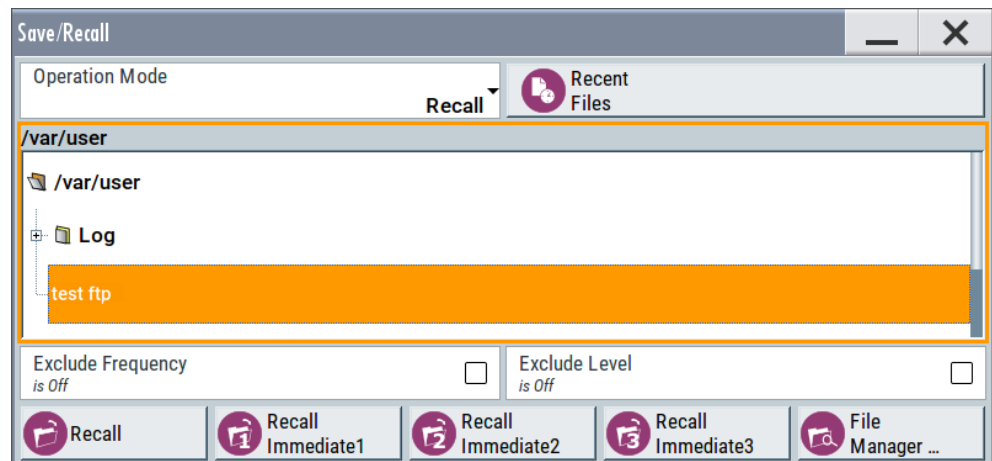

11.9.3 Accessing the R&S SMW file system using SMB (Samba)

The SMB (Samba) protocol is an alternative way to access the file system of the instrument from a remote PC. This protocol works if both the instrument and the PC are connected to a LAN.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.


To access the file system over SMB

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)
2. [Enable write permission on the file system](#)

3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `\\<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

Tip: The R&S SMW indicates its IP address on the block diagram.

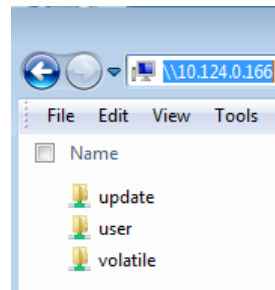

The `user` directory corresponds to the `/var/user/` directory of the instrument; the `volatile` directory - to the `/var/volatile` directory.

To map the R&S SMW as a network drive to the remote PC

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via SMB \(Samba\)](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
Open the "Map Network Drive" dialog.
 - a) Select a valid "Drive", e.g. *W*.
 - b) In the "Folder" field, enter `\\<"IP Address" of the Instrument>/user` or `\\<"Hostname" of the Instrument>/user`
For example: `\\10.124.0.166/user` or `\\SMW200A-102030/user`.
Tip: The R&S SMW indicates its IP address on the screen.
 - c) Select "Finish".

A log-on dialog opens and requests a user name and a password.

Tip:

Default password


The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 12.7.4, "Password management"](#), on page 808.

4. Enter the user name and the password of your instrument.

The `/var/user/` directory of the instrument is mapped to and displayed as a network drive of the remote PC.

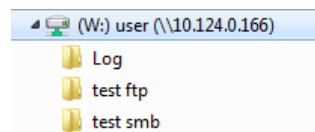

You can access the files in the `/var/user/` directory, perform standard function like creating directory, or saving files.

11.9.4 Using a USB storage device for file transfer

Alternatively to the file transfer possibility via LAN, you can use a USB storage device for direct file transfer from and to the instrument.

We recommend that you transfer files with user data (like lists or instrument setup files) to the instrument, rather than load and play them from a connected USB storage device.

To transfer a file with user data to the instrument

1. Connect a USB storage device, for example a USB memory stick to one of the USB interfaces of the instrument.

The R&S SMW recognizes the connected USB storage device automatically.

2. [Enable file transfer via USB](#)
3. [Enable write permission on the file system](#)
4. Select SAVE/RCL.


The dialog displays the `/var/user/` directory and the `/usb/` drive.

5. In the "Save/Recall" dialog, select "File Manager".
6. In the directory tree, navigate to the `/usb/` drive.
Select the required file with user data.
7. Select "Copy".
8. In the directory tree, navigate to the `/var/user/` directory.
Select "Paste".

The file with user data is transferred to the instrument.

11.9.5 Using a file server for test files exchange

You can use a central file storage location like a file server in your company network to save setup files, SCPI scripts, application programs, or waveform files on it. Usually, you would like to distribute the files to several instruments. If the R&S SMWs are connected to a LAN, you can create a shortcut on the instruments to the file server.

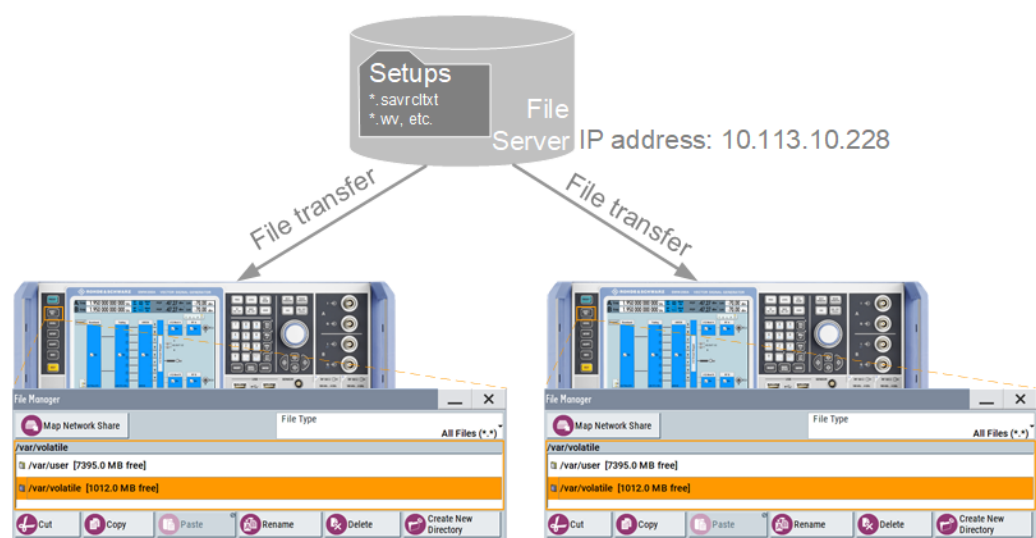

To access the file server

1. On each R&S SMW, map the required directory of the file server to the instrument. Perform the steps described in [Chapter 11.8.4, "How to map a network folder"](#), on page 724.
2. On each R&S SMW, use the same alias name for the directory of the file server, i.e. enter the same "Local Folder" (in this example `Setups`).

On any of the R&S SMW, you access the file server directly from the "File Manager" and under the same name, e.g. `/shares/Setups`.
An extra advantage in remote control is that the same application program would control the instruments.
For example, use the remote control command `MMEemory:CDIRECTORY "/shares/Setups"` to set the default directory for mass storage.

11.10 Creating screenshots of current settings


The save/recall function enables you to save current settings in a file. To document the most important settings for a performed signal generation, you can also save a hard-copy of the current display.

- [Hardcopy settings](#)..... 732
- [How to save a hardcopy of the display](#)..... 736

11.10.1 Hardcopy settings

Access:

- Press the HCOPY key.

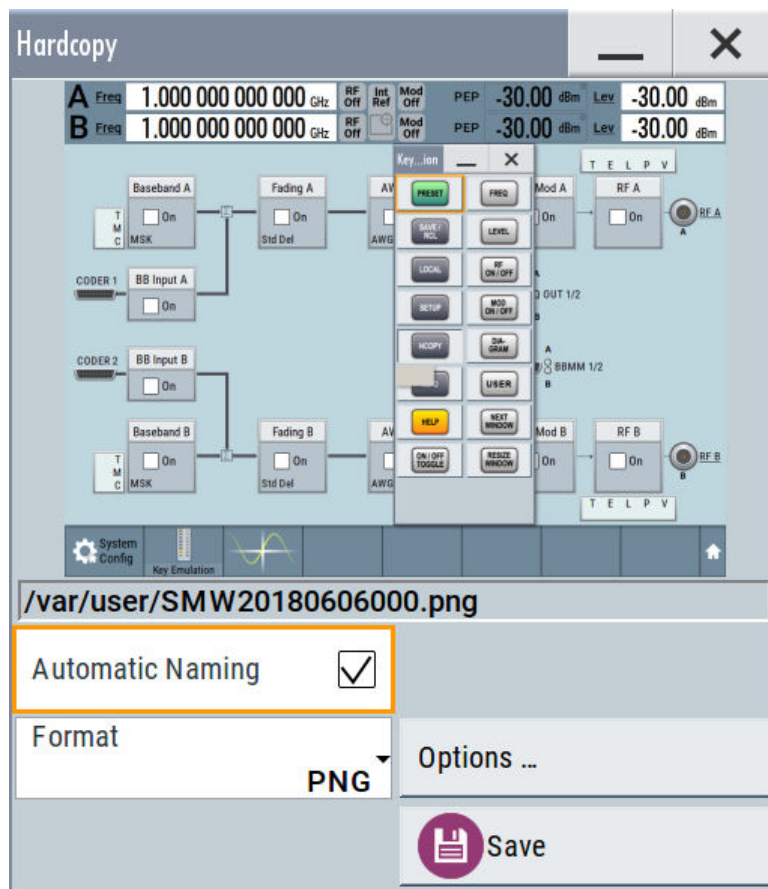

The remote commands required to define these settings are described in [Chapter 14.14, "HCOPY subsystem"](#), on page 953.

Settings:

Automatic Naming.....	733
File.....	734
Format.....	734
Options.....	734
Save.....	734
Hardcopy Options > Common.....	734
L Automatic Naming.....	734
L Format.....	734
L Region.....	735
Hardcopy Options > Automatic Naming.....	735
L Path.....	735
L Clear Path.....	735
L Prefix, Year, Month, Day.....	735
L Current Auto Number.....	736

Automatic Naming

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:STATE` on page 957

File...

In "Automatic Naming > Off" mode, accesses the standard file select dialog for selecting the filename and folder the hardcopy is stored in.

If you have enabled "Automatic Naming", the instrument displays the automatically generated filename.

Remote command:

`:HCOPY:FILE[:NAME]` on page 955

Format

Selects the output file format, for example *.bmp, *.jpg*.xpm and *.png.

Remote command:

`:HCOPY:IMAGE:FORMAT` on page 954

`:HCOPY:DEVICE:LANGUAGE` on page 954

Options...

Accesses [Hardcopy Options](#) dialog.

Save

Saves a hardcopy of the current display as a file.


Remote command:

`:HCOPY[:EXECute]` on page 955

Hardcopy Options > Common

Access: select "Hardcopy > Options... > Common".

With the provided settings, you can customize the file format and the syntax of the automatically assigned filename.

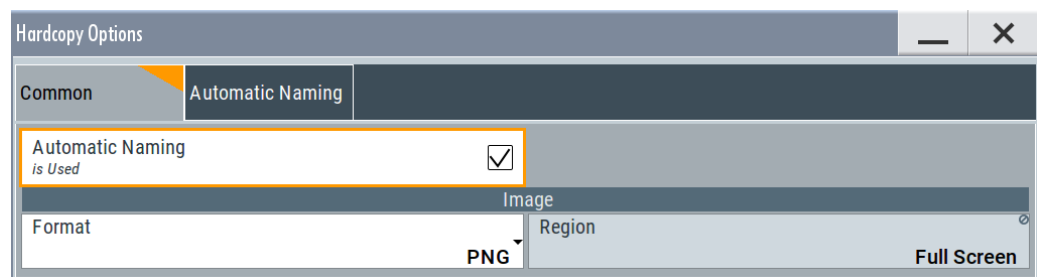

Automatic Naming ← Hardcopy Options > Common

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:STATE` on page 957

Format ← Hardcopy Options > Common

Selects the output file format, for example *.bmp, *.jpg*.xpm and *.png.

Remote command:

[:HCOPY:IMAGe:FORMat](#) on page 954

[:HCOPY:DEVIce:LANGUage](#) on page 954

Region ← Hardcopy Options > Common

Displays the snapshot area.

Remote command:

[:HCOPY:REGion](#) on page 955

Hardcopy Options > Automatic Naming

Access: select "Hardcopy > Options... > Automatic Naming".

Provided are the following settings:

Path... ← Hardcopy Options > Automatic Naming

Selects the directory.

Note: To select the destination path, specify also a filename. Otherwise an error message is displayed and selection is canceled.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:DIRectory](#) on page 956

Clear Path ← Hardcopy Options > Automatic Naming

Deletes all image files with extensions *.bmp, *.jpg, *.png and *.xmp in the directory set for automatic naming.

Before the command is executed, a warning message prompts you to confirm the deletion of the files.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:DIRectory:CLEar](#) on page 956

Prefix, Year, Month, Day ← Hardcopy Options > Automatic Naming

Determines the rules for "Automatic Naming".

Per default, the automatically generated filename is composed of:

<Path>/<Prefix><YYYY><MM><DD><Number>.<Format>, where Y, M and D mean year, month, Day; Number is the [Current Auto Number](#).

You can activate or deactivate each component separately.

The "Resulting filename" indicates the current filename syntax.

Remote command:

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX on page 958

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATE on page 958

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATE on page 957

:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATE on page 957

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATE on page 957

Current Auto Number ← Hardcopy Options > Automatic Naming

Indicates the number which is used in the automatically generated filename.


Note: When initially switching on the instrument, the number is reset to the lowest possible value. Starting with number 0 the output directory is scanned for existing files. As long as files with the same name are existing, the number is increased by 1. The number is automatically set so that the resulting filename is unique within the selected path. The current number is not in the save/recall file but is temporarily stored within the database. At the following save operation, the number is increased.

Remote command:

:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBER? on page 957

11.10.2 How to save a hardcopy of the display

1. Press the [HCOPY] key.

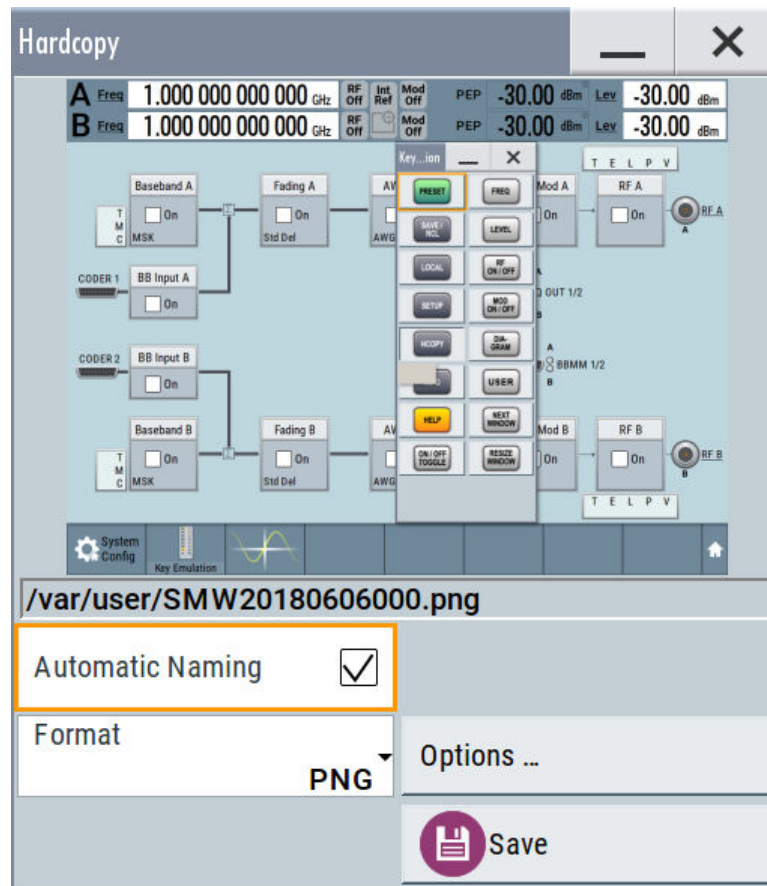

2. To define the output format, select "Format > JPG".
3. To enable the instrument to create output filenames, select "Automatic Naming > On".
4. Select "Options...".
5. In the "Hardcopy Options" dialog:
 - a) To change the default directory the file is saved in, select "Automatic Naming Settings > Path" and define a path and a filename. For example, select the default directory `/var/user`.
 - b) If necessary, disable or change some of the parameters in the "Automatic Naming Settings".
 - c) Close the "Hardcopy Options" dialog.
6. In the "Hardcopy" dialog, select "Save".
The instrument saves a hardcopy of the current instrument display as a `*.jpg` file. The filename is automatically created.
7. To print the hardcopy, connect the instrument to a LAN and:
 - a) Transfer the file to a remote computer as described in [Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.
 - b) On the remote computer, navigate through the file system.

- c) Print the selected file.
For more information, refer to the online help of the operating system.

12 General instrument functions

The general instrument functions include basic instrument settings, regardless of the selected operating mode and measurement. Some of these settings like screen display and peripherals are initially configured at the setup of the instrument, according to personal preferences and requirements. However, you can individually adjust the settings at any time, for example, for specific applications.

The following special functions help you in service and basic system configuration:

- [Chapter 12.1, "Customizing the user interface"](#), on page 739
Allows you to adjust the display and keyboard language settings.
- [Chapter 12.2, "Configuring local and global connectors"](#), on page 745
Allows you to map internal or external signals to the multipurpose connectors.
- [Chapter 12.3, "Checking parameters and dependencies"](#), on page 764
Allows you to check for interdependencies between parameters and settings.
- [Chapter 12.4, "Organizing frequently used settings as favorites"](#), on page 765
Enables you to group user-defined settings in a favorites list or to assign actions to the [USER] as quick access for later retrieval.
- [Chapter 12.5, "Managing licenses and license keys"](#), on page 773
If you have purchased an additional option for the R&S SMW, you can enable it using a license key.
- [Chapter 11.2, "Restoring the \(default\) instrument configuration"](#), on page 702
At any time, you can restore a default configuration to start a measurement at a defined instrument state, or set the instrument to factory preset.
- [Chapter 17.3, "Performing maintenance tasks"](#), on page 1370
Special functions like calibration routines and selftests put your instrument to an initial state.
- [Chapter 12.7, "Using the security settings"](#), on page 797
Special security and protection functions protect your instrument from unauthorized use or activate specific test routines.

12.1 Customizing the user interface

The R&S SMW provides basic alignments of instrument settings regarding the user interface, that means the touch panel (screen), the appearance of the displayed dialogs and graphics, and an external keyboard.

Dialog snapshots

The R&S SMW enables you to disable the snapshots of dialogs in the taskbar and replaces dialogs with test. For information on how to deactivate the snapshot preview, see [Chapter 12.1.2, "Appearance settings"](#), on page 741.

Start / stop display update

The operating system of the R&S SMW refreshes the displayed settings by default in almost real-time, to keep the display updated with the internally used values. However, you can turn off this function to reduce settling times when the instrument is remote controlled.



We recommend that you switch off the display update for optimum sweep performance with short dwell times and for fast settling times.

Consider that in this case the displayed values can differ from the operated values.


In detail described in the following paragraphs, you can:

- Set display and keyboard language, see [Chapter 12.1.1, "Display and keyboard settings"](#), on page 740
- Customize the GUI appearance, see:
 - [Dialog snapshots](#)
 - [Chapter 12.1.2, "Appearance settings"](#), on page 741
- Set date and time for the system clock, see [Chapter 17.3.1, "Date and time"](#), on page 1371
- Configure and activate a [Screen Saver](#)
- Deactivate display update to improve performance, see [Chapter 12.1.3, "Display update settings"](#), on page 742
- Determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMW, see [Chapter 12.1.4, "Defining the RF signal state on power on"](#), on page 742.


12.1.1 Display and keyboard settings

Access:

1. Select "System Config > Setup > User Interface > Display/Keyboard > Display".

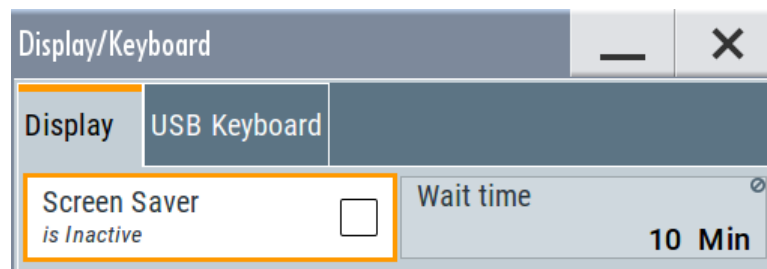

2. Select "Display/Keyboard > USB Keyboard".

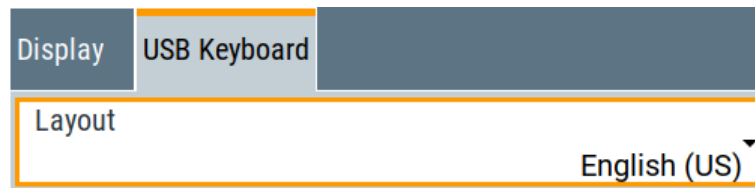

In the "Display/Keyboard" dialog, you can change regional and language options for the GUI and an external keyboard, and define the screen saver settings.

The remote commands required to configure the display and keyboard are described in [Chapter 14.12, "DISPlay subsystem"](#), on page 947 and [Chapter 14.15, "KBOard subsystem"](#), on page 958.

Screen Saver	741
Wait Time	741
USB Keyboard > Layout	741

Screen Saver

Activates the screensaver.

If activated, the display including backlight is switched off after the selected [Wait Time](#) elapses and if no entries via touch panel, front panel, external mouse, or external keyboard are made

Remote command:

[:DISPlay:PSAVe\[:STATe\]](#) on page 948

Wait Time

Enters the idle time that must elapse before the display lamp is shut off when no entries are made.

Remote command:

[:DISPlay:PSAVe:HOLDoff](#) on page 948

USB Keyboard > Layout

Selects the language of an externally connected keyboard via USB. The function assigns the corresponding keys automatically.


Remote command:

[:KBOard:LAYout](#) on page 958

12.1.2 Appearance settings

Access:

- Select "System Config > Setup > User Interface > Appearance".

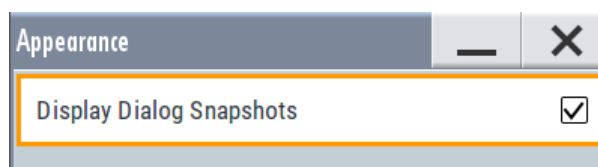

In this dialog, you can set inactive dialog opaque and enable the display of dialog snapshots.

[Display Dialog Snapshots](#)..... 742


Display Dialog Snapshots

Displays thumbnails of open dialogs in the task bar.

12.1.3 Display update settings

Access:

- Select "System Config > Setup > User Interface > Start/Stop Display Update".

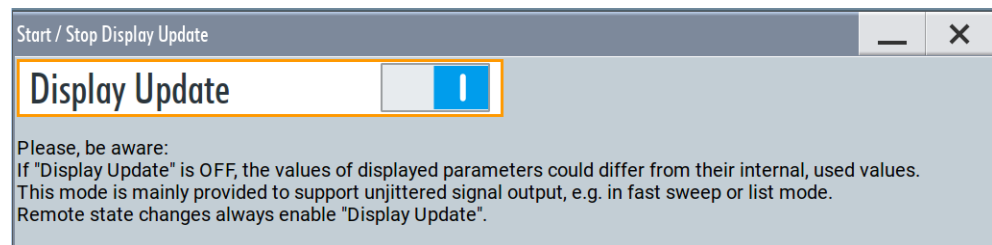

This dialog enables you, to deactivate updating the display.

The remote command to switch off the display update is described in [Chapter 14.12, "DISPlay subsystem"](#), on page 947.

Display Update is

Disables the automatic refreshing of the displayed values.

Remote command:

`:DISPlay:UPDate[:STATe]` on page 949


12.1.4 Defining the RF signal state on power on

As additional functions for the level settings, you can determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMW.

Power-On/EMF settings

Access:

- Select "RF" > "RF Level" > "Power-On / EMF".

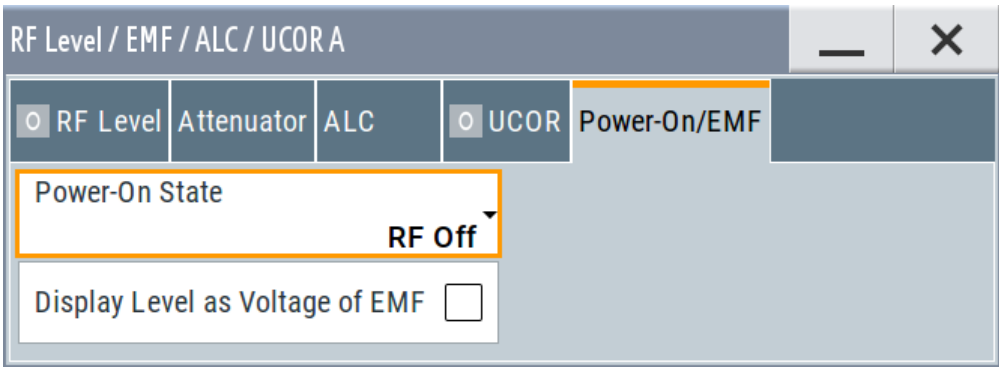

The "Power-On/EMF" dialog contains all settings for configuring the power-on behavior and the level display.

Settings:

Power-On State.....	743
Display Level as Voltage of EMF.....	743

Power-On State

Determines the RF signal output state when the instrument is switched on.
You can disable the RF output signal in general, or start it in the same state as it had been when it was switched off.

Remote command:
`:OUTPut<hw>[:STATe]:PON` on page 959

Display Level as Voltage of EMF

Activates display of the signal level as voltage of the EMF (no-load voltage).
If disabled, the level is displayed as a voltage over a 50 Ohm load.

Note:
The setting is not affected by an instrument preset ([PRESET] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.
Remote command:
`[:SOURce<hw>]:POWer:EMF:STATe` on page 1278

12.1.5 How to set the initial instrument settings

This section describes how to set up the R&S SMW initially.


12.1.5.1 Setting the keyboard language

You can select the language of the external keyboard connected to the instrument.

To adjust the keyboard settings

1. Press the [SETUP] key.

2. Select "User Interface > Keyboard".

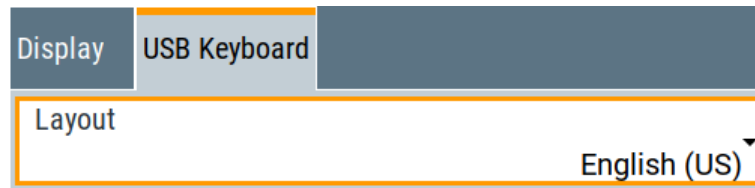

3. Select the "Layout".


The dialog closes and the changes take effect immediately.

12.1.5.2 Setting the screen saver

You can enable a screen saver that automatically turns off the display after a user-defined period of time. The screen saver is activated if no settings are made on the touch screen, or via keys or the rotary knob during the selected wait time.

To activate the screen saver

1. Press the [SETUP] key.
2. Select "User Interface > Display"
3. Activate the "Screen Saver".

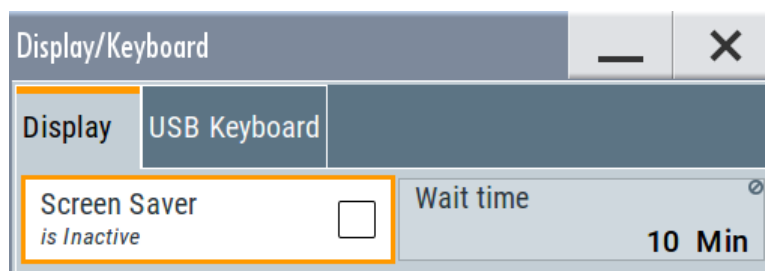

4. Define the "Wait Time" in minutes.
The instrument turns off the display after the defined period of time.
5. To reactivate the display, tap the screen or press any key on the front panel.

To deactivate the screen saver

1. Press the [SETUP] key.
2. Select "User Interface > Display"
3. Disable the "Screen Saver" state.

12.1.5.3 Adjusting appearance of the user interface

You can disable the snapshot preview of dialog in the taskbar .

1. Press the [SETUP] key.

2. Select "User Interface > Appearance".
3. If necessary, enable "Display Dialog Snapshots".

The changes take effect immediately.

12.2 Configuring local and global connectors

The R&S SMW provides six "USER" connectors that you can use for input or output of multi-purpose baseband signals or RF signals.

Grouped according to their impact, the R&S SMW provides the following connector types:

- [Chapter 12.2.2.1, "Global connectors"](#), on page 746
- [Chapter 12.2.2.2, "Baseband local connectors"](#), on page 747

Grouped according to their impact on the baseband or on the RF signal, the same connectors are divided into:

- [Chapter 12.2.3, "Trigger marker clock settings"](#), on page 751
- [Chapter 12.2.4, "RF connectors settings"](#), on page 754
- [Required options](#)..... 745
- [About local and global connectors](#)..... 745
- [Trigger marker clock settings](#)..... 751
- [RF connectors settings](#)..... 754
- [Global connectors settings](#)..... 755
- [Local connectors settings](#)..... 760
- [Routing signals to local/global connectors](#)..... 763

12.2.1 Required options

The R&S SMW always provides six "USER" interfaces with the standard or wideband baseband generator (R&S SMW-B10/-B9). These interfaces do not require additional options.

Required for the support and configuration of the local T/M/C connectors, 6 with R&S SMW-B10 and 4 with R&S SMW-B9.

12.2.2 About local and global connectors

Signal to connector mapping

As described in [Chapter 5.5.1, "Basics on signals, modulation formats and filters"](#), on page 234, the R&S SMW uses several internally generated and externally supplied signals. To handle these signals and more than two baseband signals, the R&S SMW introduces the concept of signal to connector mapping. The available signals are not

dedicated to a particular connector but can be mapped to one or more globally shared USER or local T/M/C connectors.

The signal mapping and the polarity, the trigger threshold, and the input impedance of the input connectors are configurable parameters. The connectors settings are grouped in the [Global connectors settings](#) and [Local connectors settings](#) dialogs.



For an overview of the required configuration steps, refer to ["To map the signal to a connector"](#) on page 763.

12.2.2.1 Global connectors

The R&S SMW is equipped with USER x interfaces which can be freely assigned a selection of signals and which can be configured as both inputs and outputs.

A common threshold and input impedance is effective for all trigger and clock signal inputs provided at the USER connectors. The settings influence the custom digital modulations, the generation of waveforms or multicarrier signals, and all digital standards.

Also, the R&S SMW is equipped with two INST TRIG x connectors. The instrument trigger setting influences all sweeps and is effective in the List mode.

See [Chapter 8.10, "Varying the RF signal in list or sweep mode"](#), on page 513.

The [Table 12-1](#) gives an overview of the signals that can be applied to and output at the USER connector.

Table 12-1: Mapping control signals to the USER x connectors

Connector	Direction	Assigned Signal	Remark
USER 1, 2, 3	Input	"Global Trigger 1/2" "Global Clock 1/2" "Global Next Segment 1/2" ¹⁾	¹⁾ Requires R&S SMW-B10
	Output	"Baseband <BB> Marker 1/2/3" ²⁾ "Always 0/1"	Standard baseband ²⁾ <BB> represents basebands: <ul style="list-style-type: none"> • <BB> = A/B/C/D In "System Configuration > Baseband Source > Separate" • <BB> is omitted In "System Configuration > Baseband Source > Coupled" • <BB> = 1/2/3/4 In "System Configuration > Baseband Source > Coupled per Entity" Wideband baseband ²⁾ <BB> represents basebands: <ul style="list-style-type: none"> • <BB> = A/B In 2x1x1 configuration with "System Configuration > Baseband Source > Separate" and <BB> = A in all other configuration • <BB> is omitted In "System Configuration > Baseband Source > Coupled" • <BB> = 1 In "System Configuration > Baseband Source > Coupled per Entity"
USER 4, 5, 6	Input	"Global Trigger 1/2" "Global Clock 1/2" "Global Next Segment 1/2" ¹⁾ "Pulse In A/B" ³⁾	³⁾ In an instrument equipped with 1 RF path, the name of the signal is "Pulse In"
	Output	"Baseband <BB> Marker 1/2/3" ²⁾ "Signal Valid A/B" ⁴⁾ "Signal Valid A/B Neg" ⁴⁾ "Pulse Out A/B" ⁴⁾ "Pulse Sync A/B" ⁴⁾ "Pulse Video A/B" ⁴⁾ "Always 0/1"	⁴⁾ In an instrument equipped with 1 RF path, the names of the signals are "Signal Valid", "Pulse Gen" and "Pulse Sync"
USER 4, 5	Output	"REG Trigger A/B"	Requires "System Configuration > Mode > Radar Echo Generation (REG)".
USER 6	Input	"Feedback"	-
	Output	"Manual Trigger"	-

12.2.2.2 Baseband local connectors

Apart from the multipurpose global USER connectors, each baseband coder board is equipped with local T/M/C connectors.

The [Table 12-4](#) gives an overview of the signals that can be applied and output at the T/M/C connectors.

Option: R&S SMW-B9

Table 12-2: Control signals mapped to T/M/C connectors (System Configuration > BB Sources = Separate/Coupled per Entity)

Connector shared between "Baseband A/C"	Connector shared between "Baseband B/D"	Direction	Assigned Signal
T/M/C 1	T/M/C 3	Output	"Symbol Clock <BB>" ¹⁾ "Baseband <BB> Marker 1/2"
T/M 2	T/M 4	Output	"Baseband <BB> Marker 1/2" ¹⁾ <BB> represents basebands: <ul style="list-style-type: none"> <BB> = A or B in "System Configuration > Baseband Source > Separate" <BB> = 1 or 2 in "System Configuration > Baseband Source > Coupled per Entity"
T/M 2	T/M 4	Input	"Feedback"

Table 12-3: Control signals mapped to T/M/C connectors (System Configuration > BB Sources = Coupled)

Connector	Direction	Assigned Signal
T/M/C 1	Output	"Symbol Clock" "Baseband Marker 1"
T/M 2	Output	"Baseband Marker 2"
T/M 2	Input	"Feedback"
T/M/C 3	Output	"Symbol Clock"
T/M 4	Input	"Feedback"

Option: R&S SMW-B10

Table 12-4: Mapping control signals to the local T/M/C connectors (System Configuration > BB Sources = Separate/Coupled per Entity)

Connector shared between "Baseband A/C"	Connector shared between "Baseband B/D"	Direction	Assigned Signal
T/M/C 1	T/M/C 4	Input	"Trigger" "Clock"
T/M 2	T/M 5	Input	"Data"
T/M 2, 3	T/M 5, 6	Input	"Trigger"

Connector shared between "Baseband A/C"	Connector shared between "Baseband B/D"	Direction	Assigned Signal
T/M 3	T/M 6	Input	"Feedback"
T/M/(C) 1, 2, 3	T/M/(C) 4, 5, 6	Output	"Baseband <BB> Marker 1/2/3" ¹⁾ "Symbol Clock <BB>" ¹⁾ "Lev Att <BB>" ¹⁾ "Burst Gate <BB>" ¹⁾ "Hop <BB>" ¹⁾ "CW/Mod <BB>" ¹⁾ "Triggered <BB>" ¹⁾ ¹⁾ <BB> represents basebands: <ul style="list-style-type: none"> <BB> = A/C or B/D in "System Configuration > Baseband Source > Separate" <BB> = 1/3 or 2/4 in "System Configuration > Baseband Source > Coupled per Entity"

Table 12-5: Mapping control signals to the local T/M/C connectors (System Configuration > BB Sources = Coupled)

Connector	Direction	Assigned Signal
T/M/(C) 1, 2, 3	Same selection as for "BB Sources = Separate/Coupled per Entity", see Table 12-4 .	-
T/M/(C) 4, 5	Output	"Symbol Clock"
T/M 6	Input	"Feedback"

12.2.2.3 Trigger marker clock and RF connectors

The [Trigger marker clock settings](#) and [RF connectors settings](#) dialogs provide an overview of the current mapping of the logical signals to the corresponding connectors. The dialogs are summary representation of related settings, as configured with the [Global connectors settings](#) and [Local connectors settings](#) settings.

12.2.2.4 Status indicators

Connector status LEDs

A dedicated LED indicates the connector status:

- ● green: an input connector
- ● yellow: an output connector
- ● no light / gray: the connector is not active


T/M/C status LEDs



 
For quick overview of the source (internal/external) of the used trigger, marker and clock signals, the block diagram displays *T/M/C status LEDs* on the left side of the "Baseband" block.

If the baseband generator is active, a dedicated LED indicates the status:

- ● green: an external signal is used.
- ● yellow: the signal is available at the output connector.

The display of the letter "A" or "B" indicates that the internal signal of other baseband source is used. The icon  indicates that common trigger settings are applied.

T/E/L/P/V status LEDs



For quick overview of the source (internal/external) of the control signals, the block diagram displays *T/E/L/P/V status LEDs* on the top/bottom of the "RF" blocks.

If the RF block is active, a dedicated LED indicates the signal status:

- ● green: an external signal is used.
- ● yellow: the signal is available at the output connector.

The signal valid (V) and the pulse signal (P) indications are displayed if the corresponding function is enabled ("RF > On" and "Pulse Modulator > State > On").

12.2.2.5 Internal resources for the trigger, marker, clock and control signals

Apparently, not all trigger, marker, clock and control signals can be output or input at the same time. The [Figure 12-1](#) is a graphical representation of the available internal resources concerning the trigger, marker, clock and control signals. The diagram focuses on the internal signals routing rather than showing the exact input and output signals.

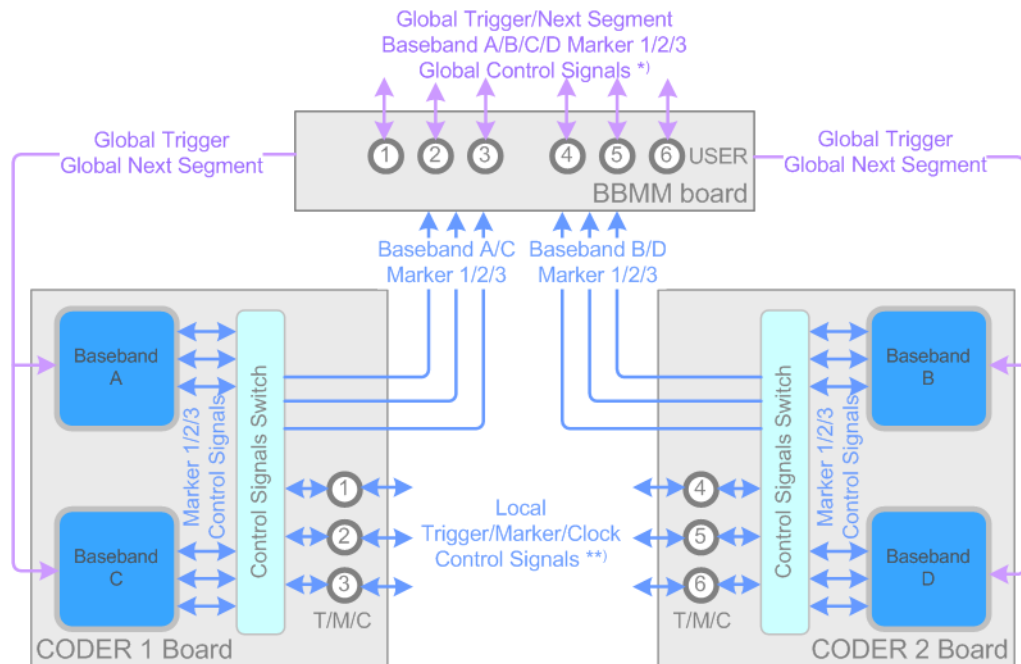


Figure 12-1: Internal resources for the marker and trigger signals

* = Pulse In/Out A/B, Sync A/B, Signal Valid A/B

** = Lev Att, Burst Gate, CW/Mod, Hop, Triggered

The baseband couple A/C is implemented on the same hardware, CODER board, and hence share the T/M/C1/2/3 connectors. The baseband B/D couple share the T/M/C4/5/6 connectors.


12.2.3 Trigger marker clock settings

Access:

1. Select one of the following:
 - In the "Block Diagram", select the [T/M/C status LEDs](#) on the left side of the "Baseband" blocks.
 - Select "Baseband" > "Trigger Marker Clock".


The "Trigger Marker Clock" gives an overview of the current mapping of the logical signals to the connectors, as configured in the [Global Connectors](#) and [Local Connectors](#) dialogs. Clicking the connector name directly accesses the related connector settings.

The dialog consists of several tabs, each tab corresponds to one of the available basebands.

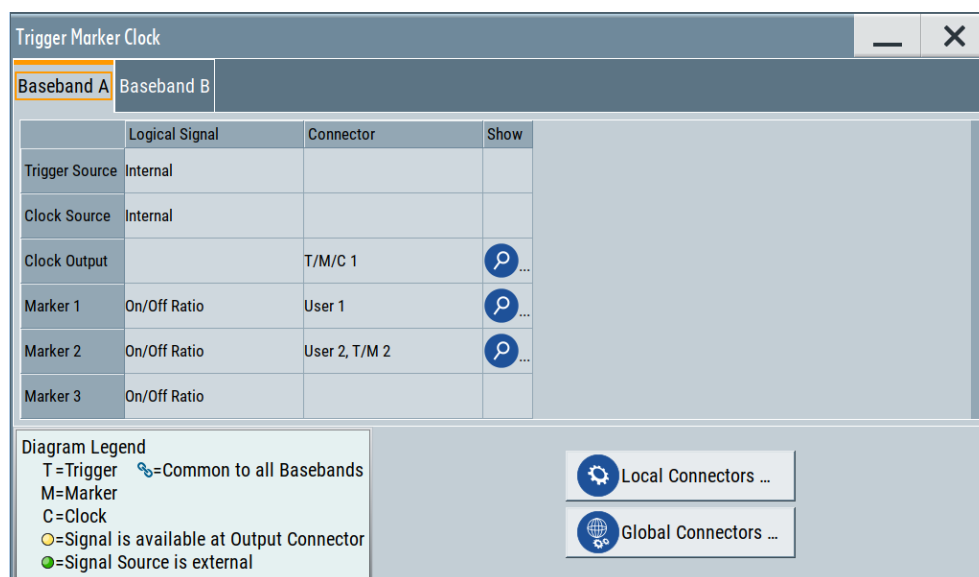

2. Use the built-in **Show Connector** function to display the physical location of the selected connector.

A blinking LED on the front/rear panel indicates the selected connector, too.

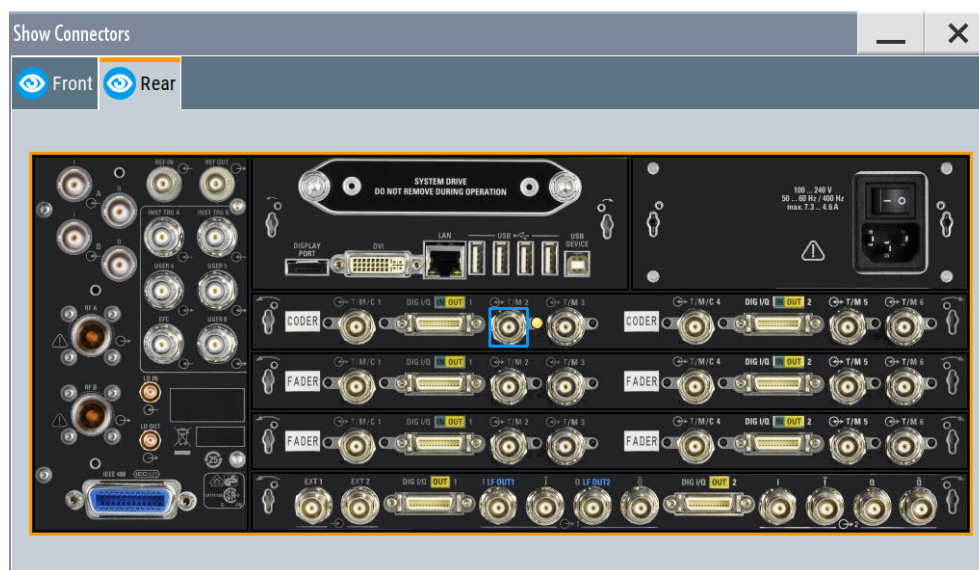


The eye icon in the tab header indicates the panel (front, rear or both) the selected connector is at.

12.2.3.1 Overview table

Common to All Basebands

To enable simultaneous signal generation in all basebands, the R&S SMW couples the trigger settings in the available basebands in any instrument's configuration involving signal routing with signal addition. For example, in MIMO configuration, routing and summing of basebands or of streams.

The icon  indicates that common trigger settings are applied.

You can access and configure the common trigger source and trigger mode settings in any of the basebands. An arm or a restart trigger event applies to all basebands, too. You can still apply different delay to each of the triggers individually.

Logical Signal

Displays the logical signal, as configured in the tabs "Trigger In", "Marker" or "Clock" of the corresponding digital standard, see for example [Chapter 5.5.2.1, "Trigger settings"](#), on page 262.

Connector

Displays the assigned connector:

- As selected in the [Global Connectors](#) dialog.
- As selected in the [Local Connectors](#) dialog.
- Dedicated RF connectors, like "LO In/Out", "INST TRIG x".



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

12.2.3.2 Local and global connectors settings

Accesses a dialog to configure local connectors or global connectors.

The button is available in the following dialogs or tabs:

- "Trigger / Marker / Clock" dialog that is accessible via the "TMC" block in the block diagram.
- "Trigger In", "Marker" and "Clock" tabs that are accessible via the "Baseband" block in the block diagram.



See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

12.2.4 RF connectors settings


Access:

1. Perform one of the following:
 - In the "RF" block, select "RF" > "RF Frequency" > "RF Connectors".
 - In the control signal block next to the "RF" block, select [T/E/L/P/V status LEDs](#).
 - Select "System Config" > "Setup" > "RF Connectors".

The "RF Connectors" dialog gives an overview of the mapping of the logical signals to the connectors; the displayed connectors depend on the installed options. The signal assignment to the dedicated RF connectors, for example LO In/Out or INST TRIG x, is fixed.


The dialog has a separate tab for each of the RF blocks. You can change the signal to connector mapping of the global connectors in the [Global connectors settings](#) dialog.


Selecting a connector name accesses directly the related connector settings.

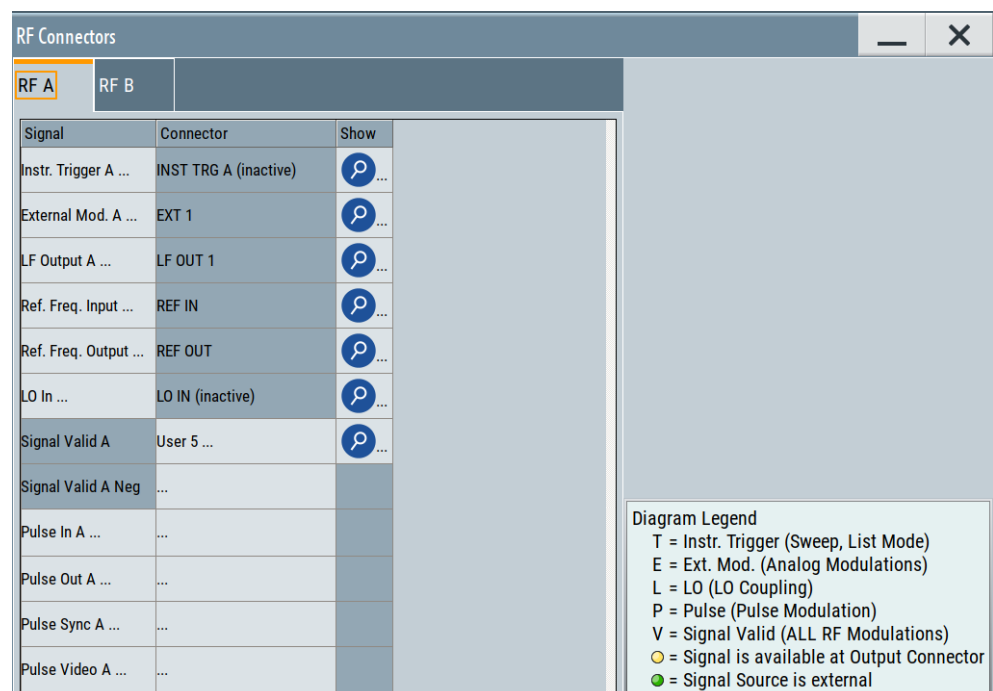

2. Select the "Signal" name to access the dialog with respective settings.
3. Use the built-in [Show Connector](#) function to display the physical location of the selected connector.

A blinking LED on the front/rear panel indicates the selected connector, too.

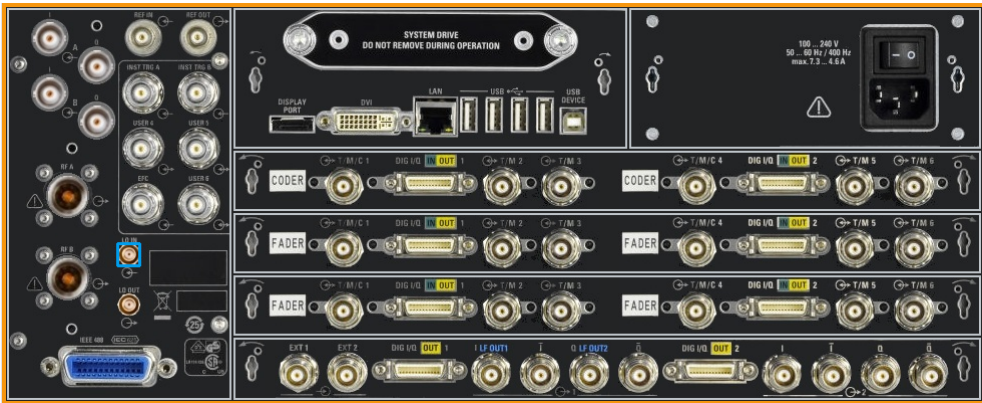

The eye icon  in the tab header indicates the panel (front, rear or both) the selected connector is located at.

Settings:

Signal.....	755
Connector.....	755
Show Connector.....	755

Signal
Opens the dialog with the corresponding settings.

Connector
Displays the assigned connector:

- As selected in the [Global Connectors](#) dialog.
- As selected in the [Local Connectors](#) dialog.
- Dedicated RF connectors, like "LO In/Out", "INST TRIG x".





Show Connector
Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

12.2.5 Global connectors settings

- Access:
1. To access global connector settings via the signal control blocks of the block diagram, select the [T/M/C status LEDs](#).
 2. In the opening dialogs, try one of the following:
 - Select "Connector" > "USER x" to select a global connector "USER x".
 - Select "Global Connectors".

3. To access global connector settings via the baseband block of the block diagram, select one of the following:
 - Select "Baseband" > "ARB"/"Custom Digital Modulation" > "Trigger In" > "Global Connectors".
 - Select the tabs "Trigger In", "Marker" or "Clock" of the corresponding digital standard.
4.
 - Select "Baseband > Custom Digital Modulation > Trigger In > Global Connector Settings" or respectively the "Trigger In", "Marker" or "Clock" tab of the corresponding digital standard.
 - In the "Block Diagram", select the "T/E/P/V" status LEDs to access the "RF Connectors" dialog. Select a global connector "USER x".

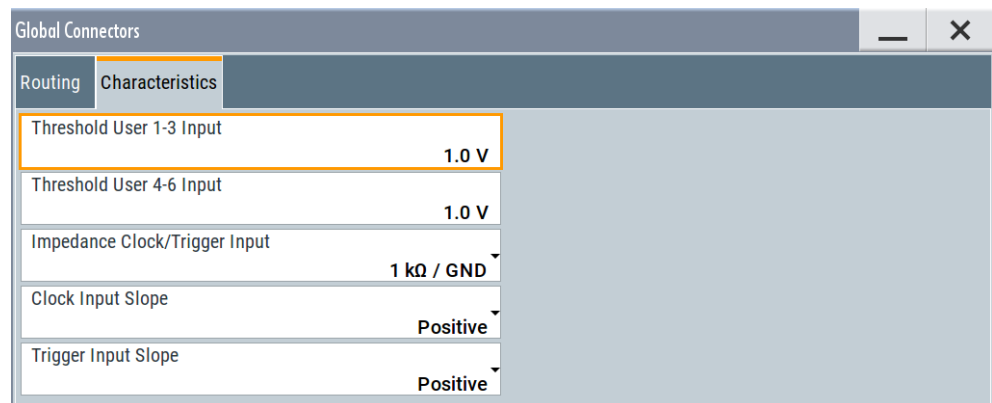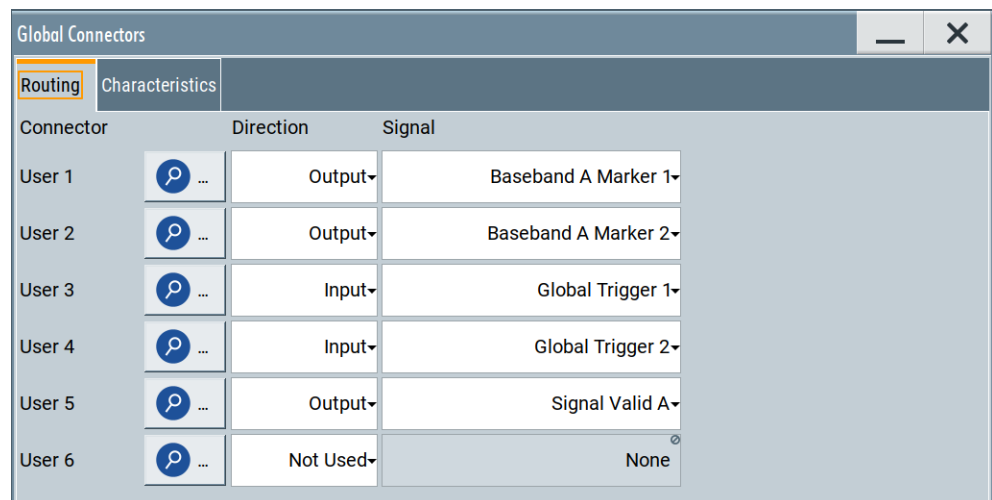

The "Global Connectors" dialog provides settings to configure the signal to connector routing and the physical characteristics of the input connectors for trigger, clock and control signals.

5. Select "Show Connector" to display the physical location of the selected connector. If active, the LED next to connector is green or yellow. See also ["Connector status LEDs"](#) on page 749.

Settings:

Show Connector.....	757
Direction.....	757
Signal.....	757
Execute Trigger.....	759
Threshold USER1-3 Input.....	759
Threshold USER4-6 Input/Threshold Pulse Input.....	759
Impedance Clock/Trigger Input.....	760
Clock Input Slope.....	760
Trigger Input Slope.....	760

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Direction

Sets the direction of the signal at the connector that can be input or an output.

If you do not use the connector, select "Not Used".

Remote command:

[:SOURce] :INPut:USER<ch>:DIRection on page 1021

:OUTPut:USER<ch>:DIRection on page 1021

Signal

Determines the control signal that is input or output at the selected connector. Whether the connector is used as an input or an output is selected by the parameter [Direction](#).

The [Table 12-1](#) lists the available control signals.

"Global Trigger 1/2"

Input for triggering custom digital modulations, digital standards and ARB. A trigger event affects the signal generation in all basebands for which the "Global Trigger" signal is enabled.

"Global Clock 1/2"

Input for external clock signal for synchronizing the internal clocks in all basebands to an externally applied clock signal. The active edge can be configured.

"Global Next Segment 1/2"

Input next segment for triggering of multi-segment waveform files (see [Chapter 5.10, "Generating multi-segment waveform files"](#), on page 371).

"Baseband <BB> Marker 1/2/3"

Marker signal output for triggering and control of external devices with user-definable marker signals.

Where <BB> (A/B/C/D or 1/2/3/4) indicates the baseband that the signal is related to.

Available marker signals depend on the system configuration, see [Table 12-1](#).

"Feedback"	Input for global feedback signal, required for 3GPP HSUPA HARQ Feedback, 3GPP Dynamic Power Control or EUTRA/LTE Closed Loop BS tests.
"Pulse In A/B"	Input of external pulse signal or input of external trigger/gate signal for internal pulse generator (see Chapter 8.11.4.3, "Pulse generator settings" , on page 570).
"Pulse Out A/B"	Output of the internal pulse signal generated by the internal pulse generator (see Chapter 8.11.4.3, "Pulse generator settings" , on page 570).
"Signal Valid A/B"	Automatically generated output signal that marks the valid signal times (valid level and frequency) for all analog modulations. The signal is indicated by the "T/E/P/V" status LEDs near to the "RF" block. See also Chapter 8.11.4, "Modulation settings" , on page 563.
"Signal Valid A/B Neg"	Inverted version "Signal Valid A/B"; the output signal is low during the valid signal times.
"Sync A/B"	Output for internal Sync signals for pulse modulation. Sync signals are generated at the beginning of a list or a sweep and used for synchronization to other instruments. See also Chapter 8.10, "Varying the RF signal in list or sweep mode" , on page 513).
"Video A/B"	Output of the external or internal pulse modulation signal (video signal). See also Chapter 8.11.4.1, "Pulse modulation settings" , on page 563.
"REG trigger A/B"	Automatically generated output signal used for latency calibration in the Radar Echo Generation (REG) mode. See user manual R&S SMW-K78 Radar Echo Generation.
"Baseband Sync Out/Baseband Sync In"	<ul style="list-style-type: none"> "Baseband Sync Out" One or more outputs of a dedicated synchronization (and trigger) signal that has to be fed into the secondary instruments. "Baseband Sync In" In the secondary instruments, at most one input for the synchronization (and trigger) signal. Can be assigned to any global connector. See also Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode" , on page 670.
"Always 0"/"Always 1"	Control signal with low or high level.

"Manual Trigger"

Output of a short pulse signal that can serve as a common external trigger signal for triggering of several R&S SMW.

See [Example "Triggering several R&S SMW instruments simultaneously"](#) on page 678.

"BER Data"/"BER Clock"/"BER Data Enable"/"BER Restart"

Option: R&S SMW-K80

Input signals for BERT/BLER testing.

See user manual R&S SMW-K80 Bit Error Rate Tester.

"BER TestGen Data"/"BER TestGen Clock"/"BER TestGen Data Enable"/"BER TestGen Restart"

Option: R&S SMW-K80

Output signals for BERT/BLER testing.

See user manual R&S SMW-K80 Bit Error Rate Tester.

"External Restart REG Trigger A/B"

Option: R&S SMW-K78

External restart trigger signals for radar echo generator (REG).

See user manual R&S SMW-K78 Radar Echo Generation.

"None"

No signal is assigned to the connector.

Remote command:

[\[:SOURce\]:INPut:USER<ch>:SIGNal](#) on page 1023

[:OUTPut:USER<ch>:SIGNal](#) on page 1024

Execute Trigger

If "User 6" > "Direction" > "Output" and "Signal" > "Manual Trigger", generates a short pulse signal and outputs it at the USER 6 connector.

The signal can serve as a common external trigger signal for triggering of several R&S SMW, see [Example "Triggering several R&S SMW instruments simultaneously"](#) on page 678.

Remote command:

[:OUTPut:USER<ch>:TRIGger\[:IMMediate\]](#) on page 1025

Threshold USER1-3 Input

Sets the high/low threshold in volts for the signal at the USER1-3 connectors.

The input signal is defined with the parameter [Signal](#). The same threshold applies for all 3 connectors and any input signal.

Remote command:

[\[:SOURce\]:INPut:USER:TRIGger:LEVel](#) on page 1025

[\[:SOURce\]:INPut:USER:CLOCK:LEVel](#) on page 1025

Threshold USER4-6 Input/Threshold Pulse Input

Sets the high/low threshold in volts for the signal at the USER4-6 connectors.

The input signal is defined with the parameter [Signal](#). The same threshold applies for all 3 connectors and any input signal (e.g. external pulse modulation or trigger signal).

Remote command:

[\[:SOURce\]:INPut:USER:PULM:LEVel](#) on page 1026

Impedance Clock/Trigger Input

Selects the input impedance for the external trigger/clock inputs.

Set the value to 1 k Ω /GND for high clock rates.

Remote command:

[\[:SOURce\]:INPut:USER:TRIGger:IMPedance](#) on page 1026

[\[:SOURce\]:INPut:USER:CLOCK:IMPedance](#) on page 1026

Clock Input Slope

Sets the polarity of the active slope of an externally applied clock signal.

Remote command:

[\[:SOURce\]:INPut:USER:CLOCK:SLOPe](#) on page 1026

Trigger Input Slope

Sets the polarity of the active slope of an applied instrument trigger.

Remote command:


[\[:SOURce\]:INPut:USER:TRIGger:SLOPe](#) on page 1027

12.2.6 Local connectors settings

Access:

1. You have several options to access the settings:

- In the block diagram, select the "T"/"M"/"C" status LEDs. See ["T/M/C status LEDs"](#) on page 749.
 - Select a local T/M/C connector or
 - Select "Local Connector Settings".
- Select "Baseband > Custom Digital Modulation > Trigger In > Local Connector Settings" or respectively the "Trigger In", "Marker" or "Clock" tab of the corresponding digital standard.

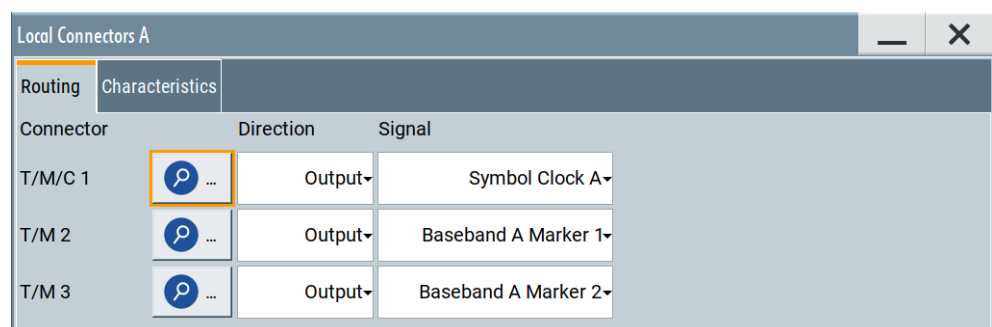

The "Local Connectors" dialog provides settings to route the signals to the local connectors and to determine the physical characteristics of the input connectors for trigger, clock and marker signals.

If you use coupled sources ("System Configuration" > "BB Sources" > "Coupled Sources"), the dialog displays the settings of all T/M/C connectors.

2. Select "Show Connector" to display the physical location of the selected connector.

If active, the LED next to connector is green or yellow. See also "[Connector status LEDs](#)" on page 749.

Settings:

Connector	761
Show Connector	761
Direction	761
Signal	761
Threshold Clock/Trigger Input	762
Impedance Clock/Trigger Input	763
Clock Input Slope	763
Trigger Input Slope	763

Connector

Displays the name of the global connector.

Remote command:

Via suffix `TM<ch>`



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 12.2.2.4, "Status indicators"](#), on page 749).

Direction

Determines whether the connector is used as an input or an output.

Remote command:

`[:SOURce<hw>] :INPut:TM<ch>:DIRection` on page 1021

`:OUTPut<hw>:TM<ch>:DIRection` on page 1021

Signal

Determines the control signal that is input or output at the selected connector. Whether the connector is used as an input or an output is selected by the parameter [Direction](#).

Refer to [Table 12-4](#) for an overview of the available control signals.

The indication <BB> (A/C or B/D; 1/3 or 2/4) in each signal name indicates the baseband that the signal is related to.

Note: The T/M/(C) 1/2/3 connectors are shared between the baseband A and C; the T/M/(C) 4/5/6 connectors, between basebands B and D.

"Trigger"	Marks the trigger event caused by the selected trigger signal (internally or externally). To define the trigger, use the respective "Trigger In" tab of the corresponding digital standard.
"Clock"	Input for external clock signal
"Data"	Input for external serial data signal

"Baseband <BB> Marker 1/2/3"

A broad selection of suitable marker signals is offered in the "Marker" tab of the corresponding digital standard.

"Symbol Clock <BB>"

Output of the internal clock signal used for digital modulations. The signal is generated automatically when the standard is switched on.

"Lev Att <BB>"

Output signal that determines whether the signal level is attenuated, if envelope curve control is active.

The internal "Lev Att <BB>" control signal is defined in a control list and activated in the "Baseband > Custom Digital Modulation > Power Ramp Control" dialog.

See also [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296.

"Burst Gate <BB>"

Output for control signal for envelope curve control.

This control signal is defined in a control list and activated in the "Baseband > Custom Digital Modulation > Power Ramp Control" dialog. See also [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296.

"HOP <BB>"

Marks the hop trigger for frequency hopping in the List mode for "Custom Digital Modulation". The hop signal is defined in a control list and activated by loading the control list, see [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296.

"CW/Mod <BB>"

Output signal to indicate the output of RF signal in unmodulated form (digital modulation is deactivated).

This control signal is defined in a control list, see [Chapter 5.6.3.8, "Control and marker lists editor"](#), on page 296.

"Triggered <BB>"

A pulse like marker signal, generated on received internal or external trigger signal in the corresponding Baseband.

"Feedback"

Input for local feedback signal, required for 3GPP HSUPA HARQ Feedback, 3GPP Dynamic Power Control or EUTRA/LTE Closed Loop BS tests.

Remote command:

[\[:SOURce<hw>\]:INPut:TM<ch>:SIGNal](#) on page 1022

[\[:OUTPut<hw>:TM<ch>:SIGNal](#) on page 1022

Threshold Clock/Trigger Input

Sets the high/low threshold in volts for the trigger and clock signal inputs of the baseband section.

Remote command:

[\[:SOURce<hw>\]:INPut:TM:CLOCK:LEVel](#) on page 1027

[\[:SOURce<hw>\]:INPut:TM:TRIGger:LEVel](#) on page 1027

Impedance Clock/Trigger Input

Selects the input impedance for the external trigger/clock inputs.

Remote command:

`[:SOURce<hw>] :INPut:TM:CLOCK:IMPedance` on page 1027

`[:SOURce<hw>] :INPut:TM:TRIGger:IMPedance` on page 1027

Clock Input Slope

Sets the polarity of the active slope of an externally applied clock signal.

Custom digital modulation with **external serial data** ([Data Source](#) > "External"): A higher bit modulation external serial data requires a reference symbol clock signal to generate a bit clock out of it.

- This parameter sets the active edge of the symbol clock.
- To set the active edge of the bit clock, use the parameter [Bit Clock Slope](#).
- Observe the impact of this parameter on the preview graphic in the "Baseband > Custom Digital Mod > Data Source" dialog.
See also "[External modulation data](#)" on page 236.

Remote command:

`[:SOURce<hw>] :INPut:TM:CLOCK:SLOPe` on page 1028

Trigger Input Slope

Sets the polarity of the active slope of an externally applied trigger signal.

Remote command:

`[:SOURce<hw>] :INPut:TM:TRIGger:SLOPe` on page 1028

12.2.7 Routing signals to local/global connectors

This section introduces the general principle of connector configuration.

To map the signal to a connector

The [Figure 12-2](#) shows the main configuration stages, together with the corresponding user interface dialogs.

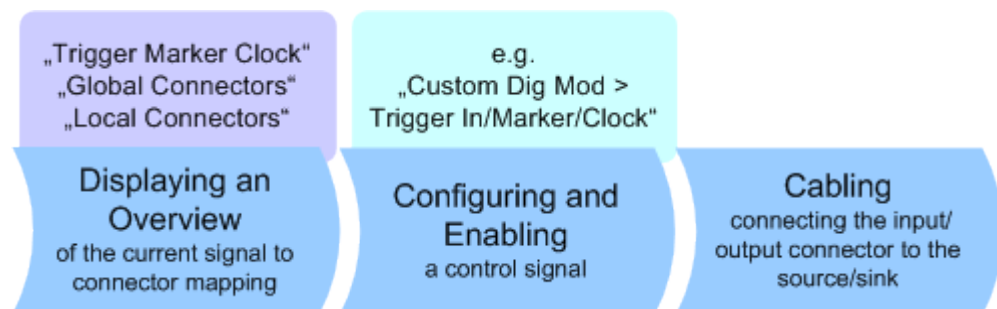


Figure 12-2: General workflow: signal to connector mapping

To map the signal to the connector mapping, perform the following:

1. Verify the current connector configuration and mapping and if necessary (re)define it.

2. Configure and enable the required signal, e.g. trigger, marker, clock signal.
3. Connect the configured connector, e.g. to the external instrument or device.

For a step-by-step description:

See [Chapter 3.3.4, "Working with marker signals"](#), on page 65.

To find out the connector location

Proceed as follows:

1. Select [T/M/C status LEDs](#) or [T/E/L/P/V status LEDs](#) to open the "Trigger Marker Clock" and the "RF Connectors" dialog.
2. For the corresponding connector, select the "Find" icon.


The "Show Connectors" dialog opens and displays the location of the selected connector on the front panel or rear panel of the instrument.

If active, the LED next to connector is green or yellow. See also ["Connector status LEDs"](#) on page 749.

12.3 Checking parameters and dependencies


You can check settings on a parameter-level for incoming dependencies. These dependencies include R&S SMW configurations that affect properties of the parameter. Properties are, for example, selectable values, ranges, minimum or maximum value depending on the parameter type. After the dependency check, a dialog displays R&S SMW configurations that include a list of dependent parameters or dependent settings that affect the parameter.

1. Select the parameter that you want to check.
2. Right-click the parameter, to open the context menu.
3. Select "Show Incoming Dependencies".

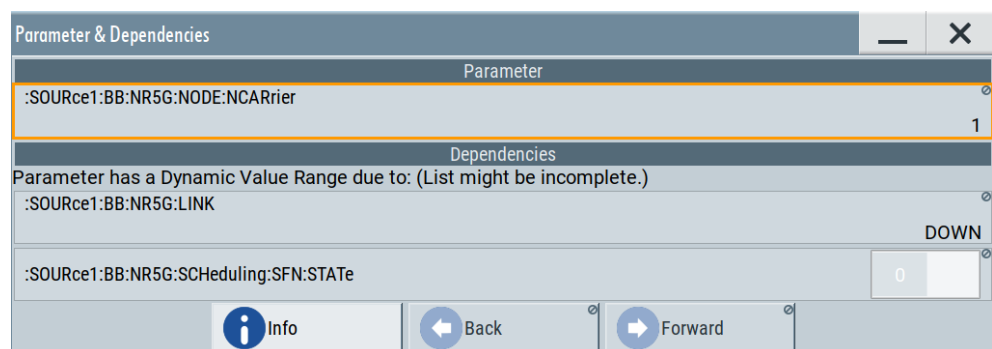


The "Parameter & Dependencies" dialog opens. The "Parameter" panel of this dialog displays the SCPI command including its setting or query parameters. The "Dependencies" panel displays dependent parameters and their settings that affect the setting of the parameter, that you want to check initially (2).

4. In the "Dependencies" panel, you can further check for dependencies within the dependent parameters.
 - a) Select the parameter that you want to check from the list in the "Dependencies" panel, e.g.:
:SOURce1:BB:NR5G:LINK DOWN for the "Link Direction" > "Downlink".

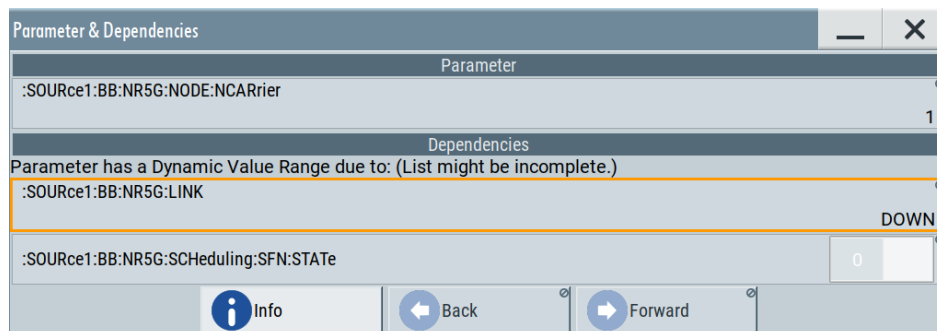

- b) Select "Show Incoming Dependencies".

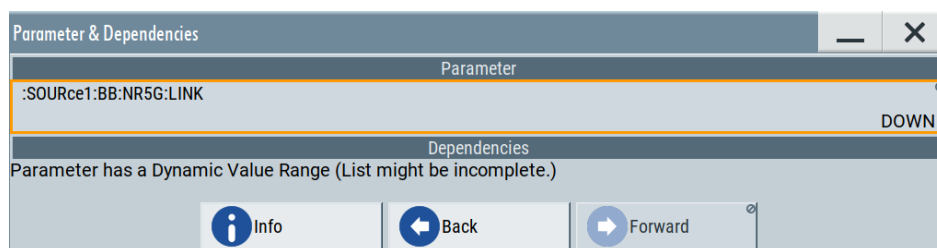

The list in the "Dependencies" panel is empty. I.e., the "Link Direction" setting does not depend on any further parameters or settings.

5. Optionally, navigate via "Back" and "Forward" to move up or down the dependency tree for parameters with dynamic value range.

Settings:

Info

Accesses the help of the selected parameter, see [Chapter 12.3, "Checking parameters and dependencies"](#), on page 764.

Back/Forward

Toggles between parameter dependencies for dependent parameters.

If you select "Show Incoming Dependencies" for parameters or settings from the "Dependencies" panel, you can move back or move forward through the dependency tree-like structure.

12.4 Organizing frequently used settings as favorites

The R&S SMW provides two possibilities to define frequently used settings and procedures for later retrieval individually.

User menu and [USER] key

These two functions work similar to the favorites function of a browser or other programs. They allow you to create a list of frequently used actions or to group frequently used settings in one dialog.

You can collect the parameters of your configuration in a favorites list, i.e. in the "User Menu", or define settings and actions with the [USER] key:

- "User Menu" to group settings of specific tasks.
Similar to a favorites function, you can use this menu for:
 - Grouping the settings required for a task in one dialog.
 - Saving and recalling the settings of a task.
 - Transferring the settings for use on multiple instruments.
- [USER] key, with customizable function.
You can perform the following steps using this key:
 - Open the "User Menu" (default functionality).
 - Add or remove settings and functions.
 - Execute actions and access functions.

Possible applications

The USER key and the "User Menu" are useful for the following situations:

- There are functions or tasks you have to perform in a defined order but the setting parameters are distributed across several dialogs.
- There are functions or tasks you have to perform frequently but they are not accessible via the front panel keys.
- The required functions are grouped in a dialog that is not directly accessible from the block diagram.
- Your task involves the frequently loading and executing of certain SCPI scripts. Refer to [Chapter 13.13.4, "How to record / create SCPI lists"](#), on page 891 for information on how to create an SCPI script.
- A quick access to saved setups is required.
- There are functions and tasks you have to perform on several instruments.

Dialog identification

To identify each dialog, the instrument uses a dedicated dialog ID. The dialog ID contains the dialog position on the display and the current active tab. The action that triggers the instrument to open a dialog uses this identification.

Save/Recall vs. recall setup

If you need to restore a specific signal generation setup and perform further configurations based on this particular instrument state, the R&S SMW provides two options:

- "Save/Recall" function
For a detailed description, refer to [Chapter 11.4, "Saving and recalling instrument settings"](#), on page 709.
- "Recall Setup" function

If the "Recall Setup" is the only user action assigned to the [USER] key, pressing this key triggers the R&S SMW to load the user-defined preset file immediately.



Recalling a user-defined preset file using the [USER] key is even faster than the immediate recall function provided by the [SAVE/RCL] key.

12.4.1 User menu settings

The "User Menu" dialog contains function keys to organize, save and load a favorites list. You can also modify, add or delete list entries directly in the dialog.

Clear User Menu

Removes all entries from the "User Menu" at once.

Save User Menu

Saves the current "User Menu" under the defined filename.

Recall User Menu

Loads the selected "User Menu" file.

This function enables you to use the user specific favorites file on another instrument. However, if functions or parameters are not provided due to varying configuration of the instrument, the settings of these particular parameters take no effect.


12.4.2 How to use the user menu for fast adjustments

Access:



1. Press the [USER] key.

The "User Menu" dialog opens.

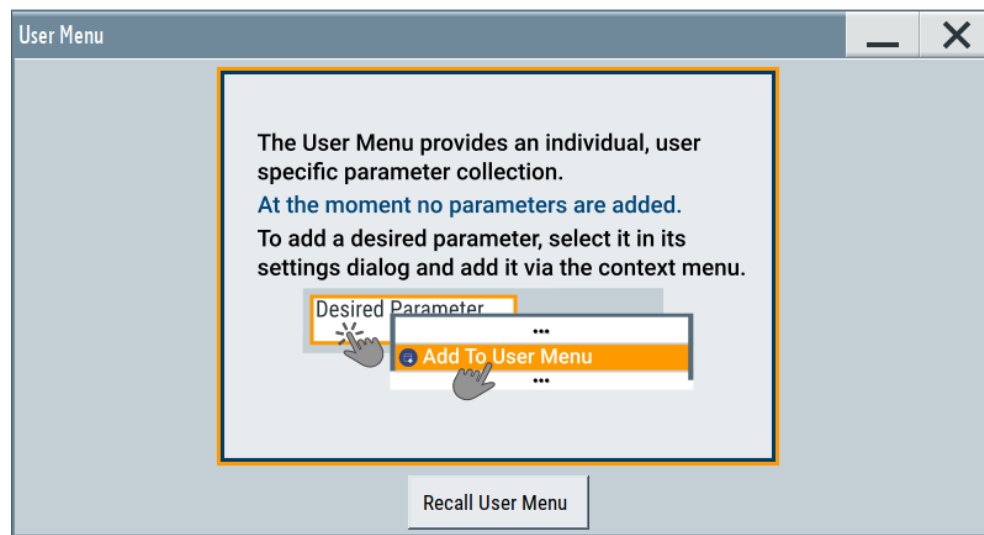


If you execute this action for the first time, the dialog displays instructions on how to use the "User Menu".

2. If you already have a saved user menu file on the instrument, you can load with "Recall User Menu".


Creating a user menu

To create your own user dialog with settings:

 1. Open a dialog with settings you frequently use.
2. Select a parameter.
3. Open the context menu and select "Add to User Menu".



 
A favorites icon ★ indicates that the parameter is used in the "User Menu".



The "User Menu" button in the taskbar confirms that you have created a "User Menu" with at least one entry.

4. Press the [USER] key.

The "User Menu" dialog shows all parameters that you have added to the list.

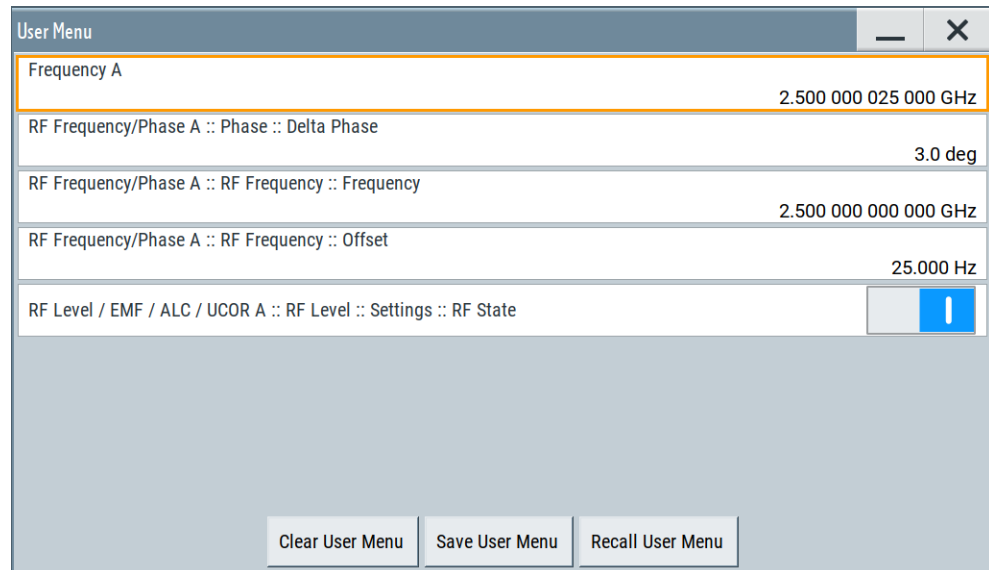

You can modify the parameter settings directly in this dialog, e.g. change a state or set values, as you do in the particular dialog the parameter originally belongs to.

5. To remove an entry, select the parameter either in the "User Menu" or in the dialog where it originally belongs to.
 - a) Open the context menu and select "Remove from User Menu".



6. To remove all entries at once, select "Clear User Menu".
7. To save your individual favorites list, select "Save User Menu", and follow the file managing instructions.
The file system automatically assigns the file extension *.user_menu.
8. To recall a previously saved user menu, select "Recall User Menu" and proceed accordingly.

Providing a user menu favorites list for several instruments

To transfer files from or to an instrument:


1. Create the favorites list, as described in ["Creating a user menu"](#) on page 768.
2. Save the favorites list.

3. To transfer a file from or to an instrument, the R&S SMW provides several options, see ["File handling"](#) on page 701.

12.4.3 Define user key actions settings

Access:

- Select "System Configuration > Setup > User Interface > Define User Key".

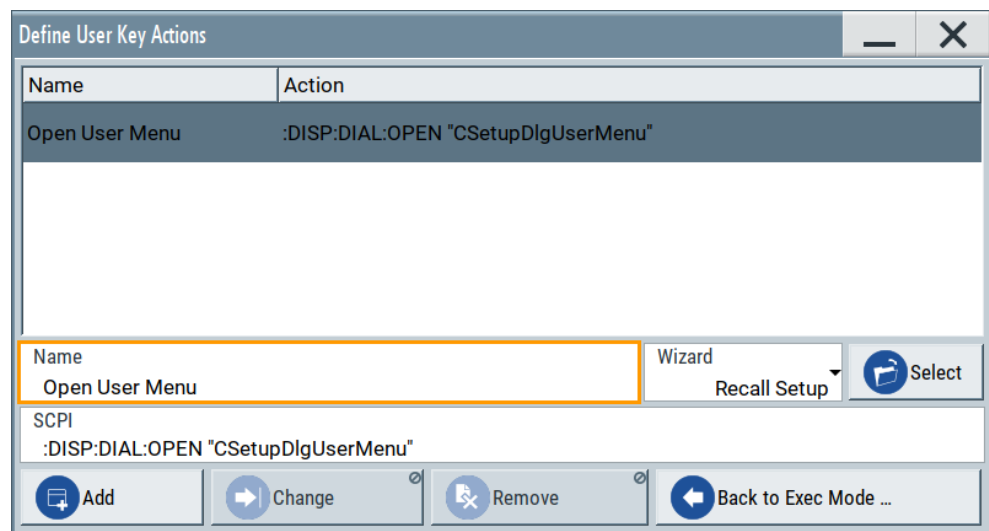

The dialog displays a list of the currently enabled actions and provides functions to define new, edit or remove existing actions. If no actions have been defined, the list is empty.

See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

See also the application sheet RS_SMW_FastDataAlignment_AppSheet, available for download at www.rohde-schwarz.com/manual/smw200a.

The remote commands required to define these settings are described in [Chapter 14.12, "DISPlay subsystem"](#), on page 947.

Name

Enters a user-defined name for the action.

Wizard

Defines the action to be executed.

"Load SCPI Script"

Selecting the action load and executes the SCPI script.

"Recall Setup"

Load a setup for quick access to the user-defined settings.

"Open Dialog, with Position and Size/append to SCPI"

Quick access to the selected dialog.

Use the "Open Dialog, append to SCPI" function to define a sequence of several dialogs to be opened simultaneously or one after the other.

Tip: Use the command `:SYSTem:WAIT` to add a delay between the subsequent commands.

Select

Depending on the selected "Wizard", provides access to:

- The standard "File Select" function for loading of an SCPI script or setup file
- A list of the dialog IDs of all currently opened dialogs. The dialog ID is used for dialog identification in the remote control.

See [SCPI](#).

SCPI

For the currently selected action, displays the corresponding SCPI command with the associated parameter for dialog identification (dialog ID). The automatically displayed SCPIs are enabled for subsequent modification.

Remote command:

`:DISPlay:DIALog:OPEN` on page 950

See also `:DISPlay:DIALog:ID?` on page 950


Add, Change, Remove

Standard functions for managing of the actions.

Back to Execute Mode

Opens the "Select Action to Execute" dialog. Select an Action from the list to execute it.

To return to the "Define User Key Actions" dialogs, select [Select Action to Execute > Define Actions](#).

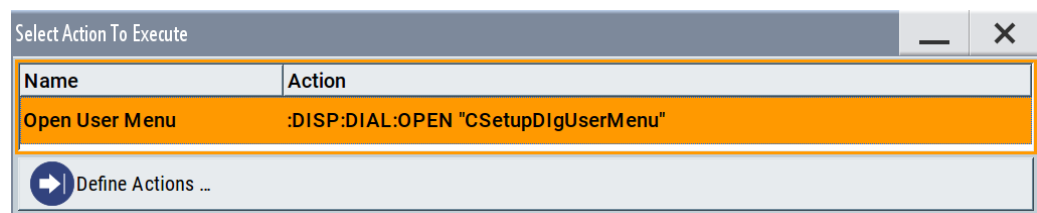Select Action to Execute > Define Actions

Accesses the "Define User Key Actions" dialog.

12.4.4 How to assign actions to the [USER] key


The customizable [USER] key has no predefined function assigned. You can individually define actions to be executed or functions to be accessed when pressing this key.

To assign a frequently used dialog to the [USER] key:


1. Open the dialog you want to quickly access.
For example, select "Baseband > EUTRA/LTE > DL Frame Configuration > Time Plan > Detach Time Plan".
2. Select "System Configuration > Setup > User Interface > Define User Key".
3. To create an action:
 - a) Specify the "Name".
E.g. *LTE_ShowTimePlanDL*.
 - b) Select "Wizard > Open Dialog"
 - c) Select "Select" and select the dialog ID from the list

The corresponding SCPI command is automatically displayed and can be later modified.

4. Select "Add" to store the new action in the list of user key actions.

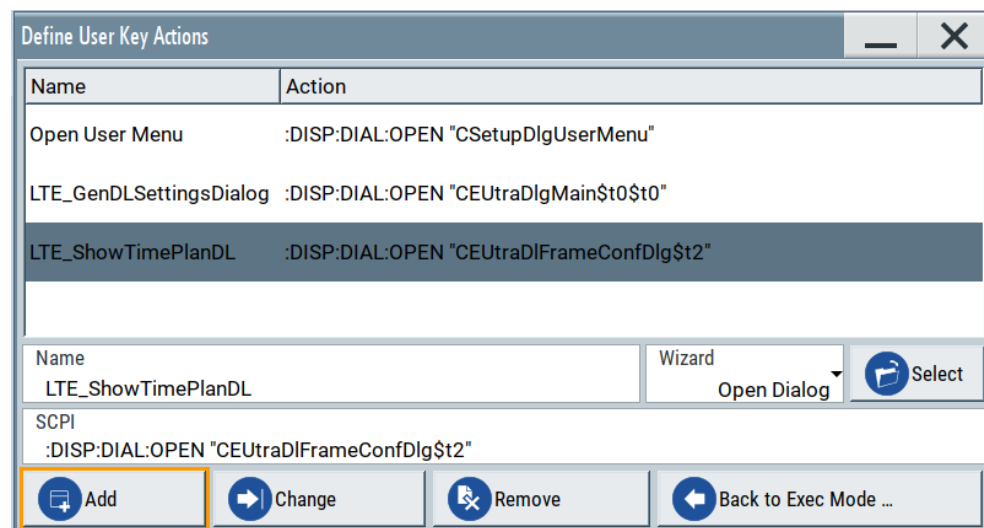

5. To execute the created action, press USER.
In the list of actions ("Select Action to Execute" dialog), navigate to the required action.
In this example, this is "LTE_ShowTimePlanDL".

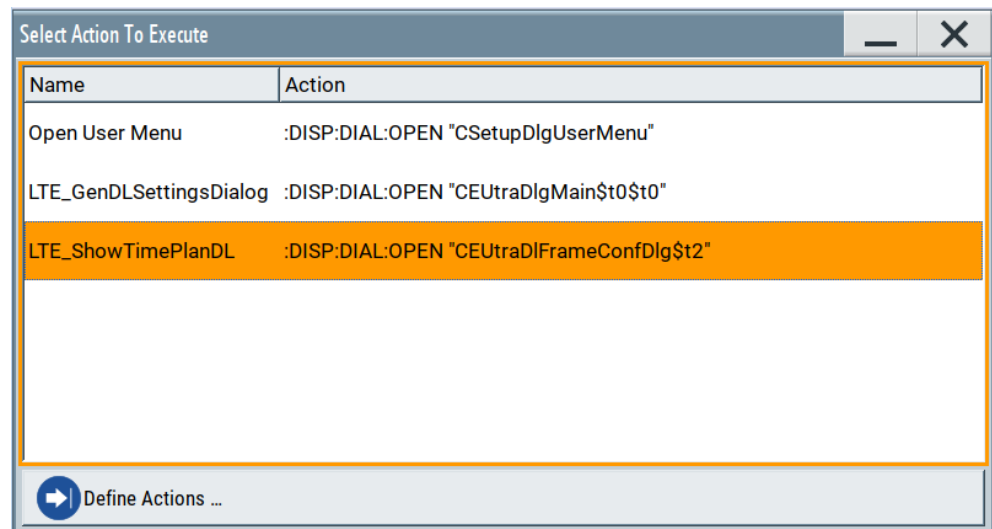

The R&S SMW executes the action and opens the dialog.

12.5 Managing licenses and license keys

The R&S SMW provides options for all required applications, as, e.g., for digital standards, you can purchase and activate.

Various license types enable you to manage licenses for options as follows:

- Activate an option locally on an instrument.
- Share an option with other instruments.
- Activate an option for a certain period of time as needed.

An option is ready to operate after it is enabled with a license keycode supplied with the option. The license key is delivered as a file or on paper. Unregistered licenses must be registered for a particular instrument before the corresponding option can be enabled for operation.



 
For reliable operation, a software option usually requires the latest firmware version. The required version is specified in the delivery. If your instrument works with a former firmware version, update the firmware before enabling the software option.

The firmware update is described in the release notes provided on the product page of the R&S SMW.

Trial license

The trial license (option R&S SMW-T0) allows you to use additional applications that normally require a separate license for each. The option is pre-installed at the factory on request. If enabled, you can use the included applications for a limited period of time (90 days from factory installation).

A special tag indicates applications that are enabled as trial license, e.g.:



Currently, the R&S SMW-T0 trial license includes the options:

- R&S SMW-K17, Wideband differential analog I/Q outputs, see [Chapter 4.8, "I/Q analog output settings"](#), on page 186.
- R&S SMW-K22, Pulse modulator, R&S SMW-K23, High performance pulse generator, R&S SMW-K24, Multifunction generator and R&S SMW-K720, AM/FM/PhiM, see [Chapter 8.11, "Analog modulations"](#), on page 552.
- R&S SMW-K44/-K66/-K94/-K107, GNSS, Galileo, Glonass, BeiDou, see the user manual "R&S SMW Satellite Navigation", provided on the R&S SMW product page.
- R&S SMW-K61, Multi carrier CW signal generation, see [Chapter 5.11, "Generating multi-carrier signals"](#), on page 401.
- R&S SMW-K62, Additive white gaussian noise (AWGN), see [Chapter 6.2, "Adding noise to the signal"](#), on page 435.
- R&S SMW-K540/-K541, Envelope tracking, AM/AM, AM/PM digital predistortion, see the user manual "R&S SMW200A Envelope Tracking" on the R&S SMW product page.
- R&S SMW-K542, Baseband power sweep, see the user manual "R&S SMW200A Baseband Power Sweep" on the R&S SMW product page.
- R&S SMW-K544, User-defined frequency response correction, see the user manual "R&S SMW200A Frequency Response Correction" on the R&S SMW product page.
- R&S SMW-K548, Crest factor reduction, see the user manual "R&S SMW200A Crest Factor Reduction" on the R&S SMW product page.
- R&S SMW-K703, 100 MHz, 1 GHz ultra low noise reference input/output, and R&S SMW-K704, Flexible reference input (1 MHz to 100 MHz), see [Chapter 8.8, "Reference oscillator"](#), on page 495.
- R&S SMW-K739, Differential analog I/Q inputs for RF path A, see [Chapter 7, "Applying I/Q vector modulation"](#), on page 469.
- R&S SMW-K810, Enhanced noise generation, see [Chapter 6.3, "Generating impulsive and phase noise"](#), on page 453.
- R&S SMW-K811, Notched signals, see [Chapter 5.8, "Generating notched signals"](#), on page 364.

If the trial option has expired, the R&S SMW displays a message box and blocks further use of the options.

To continue using the optional applications, you must acquire a permanent license and enable it as described in [Chapter 12.5.1, "Manage license keys settings"](#), on page 775.



Occupied Licenses

A license server allows you to use one or more options with floating license for a specified period of time.

Provided the R&S SMW is connected one or more license servers, it shows the currently unoccupied, i.e. available options. You can borrow the license for one or more options and specify the required time period.

The maximum number of options you can occupy is determined by the minimum number of available options on the server, and the maximum number of options you can install on the instrument, including the permanently installed options.

Once you have occupied an option, the instrument saves the license locally, and blocks it for other instruments. During the occupied period, you do not necessarily need permanent access to the license server. If you need the option for a longer time than you have occupied, you can extend the requested occupation period up to 7 days.

When the occupation period elapses, the license expires automatically. After 1 hour follow up time, the option is available again on the license server.



You cannot return or disable the license of an option manually before the occupation period has elapsed.

If the R&S SMW has no connection to the license server, it displays a warning message.

12.5.1 Manage license keys settings

The "Manage License Keys" dialog provides all information on the available licenses. Instrument-related steps guide you through the process of registering or deactivating licenses.

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > New License".

In this tab, you can activate licenses for newly purchased or newly registered options.

2. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

New License Installed License Keys Trial License Occupy Licenses					
Show Inactive <input type="checkbox"/>		Show Deactivated <input type="checkbox"/>		Open License Server	
Export License Key To File		Option	License Count	License Type	Registrations
1 ...		<InstName>-Opt> 1	1	Permanent	
2 ...		<InstName>-Opt> 2	2	Portable	
7 ...		<InstName>-Opt> 1	1	Timed (2160 h left)	
8 ...		<InstName>-Opt> 5	5	Floating	
9 ...		<InstName>-Opt> 50	50	Quantified (free 49)	Manage..

This tab lists all active options, with information on the available number of an option, the license type and registration. You can query inactive or disabled options also.

3. Select "Open License Server".
4. Select "Manage Waveform Packages".

Manage Waveform Packages		
Number of Licenses/Waveforms		
Total: 38	Used: 11	Free: 27
Select Waveform ...		
None		
Register Selected Waveform		
Waveform	Registration Date	Used License(s)
1 drive:/path/MultiSegmentFilename_38969276.wv	2017-12-10 17:14:37	5
2 drive:/path/MultiSegmentFilename_663074699.wv	2018-09-17 05:57:18	6

This tab enables you to select and register purchased waveform packages.

5. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Trial License".

Manage License Keys		
New License	Installed License Keys	Trial License Occupy Licenses
Trial Period		Remaining Days 90 days left
Trial Licenses		
Option	Designation	Expiration Date
SMW-K17	Wideband Differential analog I/Q outputs	2022-02-15 12:30
SMW-K44	GPS	2022-02-15 12:30
SMW-K61	Multi Carrier CW Signal Generation	2022-02-15 12:30
SMW-K62	Additive White Gaussian Noise	2022-02-15 12:30
SMW-K66	Galileo	2022-02-15 12:30
SMW-K94	Glomass	2022-02-15 12:30
SMW-K107	BeiDou	2022-02-15 12:30
SMW-K300	Pulse Sequencing	2022-02-15 12:30
SMW-K301	Enhanced Pulse Sequencing	2022-02-15 12:30
SMW-K302	Radar platforms	2022-02-15 12:30
SMW-K304	Moving Emitters	2022-02-15 12:30
SMW-K306	Multiple Emitters	2022-02-15 12:30
SMW-K307	Extends interleaved emitters for Pulse Sequencer to 512	2022-02-15 12:30
SMW-K309	2D map import	2022-02-15 12:30
SMW-K502	Wideband extended sequencing	2022-02-15 12:30
SMW-K540	Envelope Tracking	2022-02-15 12:30
SMW-K541	AM/AM, AM/PM Predistortion	2022-02-15 12:30
SMW-K542	Baseband Power Sweep	2022-02-15 12:30


This tab lists all installed and activated time-limited licenses with information on the expiration date.

6. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

Manage License Keys

New License

Installed License Keys

 Trial License

Occupy Licenses

	Occupy Option	Designation	All Licenses from Server	Occupied by Device	Occupation Period(s)
0	SMW-K55 ...	LTE Release 8	17	2	6d, 3d
1	SMW-K62 ...	Additive White Gaussian Noise	2	2	7d, 23h
2	SMW-K71 ...	Dynamic Fading	2	1	4d
3	SMW-K72 ...	Enhanced Fading Models	2	0	

The tab lists all options available on the license server, the number of options already occupied by the R&S SMW and the state of their occupation period. The occupation period indicates the remaining time you can use the option. How to occupy a license or to extend the occupation period, see [Chapter 12.5.3, "How to occupy or extend a license"](#), on page 792.

The "Manage License Keys" dialog covers all required parameters for activating or deactivating newly purchased or newly registered options, and provides access to the onboard license server, see [Chapter 12.5.2, "Using the license server"](#), on page 782.

Settings

Device ID.....	778
Enter License Key.....	778
Import License Key from File.....	778
Export Deactivation Response to File.....	778
License Installation Info.....	779
Installed License Keys.....	779
L Show Inactive.....	779
L Show Deactivated.....	779
L Installed License Keys Table.....	779
Open License Server.....	779
Manage Waveform Packages.....	779
L Number of Licenses/Waveforms.....	780
L Select Waveform.....	780
L Register Selected Waveform.....	780
L License Table.....	780
Trial License.....	780
L Trial Period.....	780
L Remaining Days.....	780
L Trial License Table.....	781
Occupy Licenses.....	781
L License Info.....	781
L Select Free Licenses.....	782
L Occupation Period.....	782
L Occupy.....	782
L License <no>: Extend Occupation Period to.....	782
L Renew.....	782

Device ID

Displays the instrument-specific identification number. The device ID is a unique string with the following structure:

```
<stock number>-<serial number>-<checksum>
```

Enter License Key

Type here the license key provided with the option.

For license keys delivered as a file, use [Import License Key from File...](#)

Import License Key from File...

Opens a dialog for selecting the file with the license key.

Use this function also to import the deactivation key file generated by the R&S License Manager online tool (see [How to move a portable license](#)).

Export Deactivation Response to File...

Exports the generated deactivation response key to a file and opens a file management dialog to save the file.

This key is required during the unregistration process, e.g. when you want to deinstall an option or have a portable option, which you want to register later on another instrument (see [How to move a portable license](#)).

License Installation Info

Indicates status information on the performed actions.

Installed License Keys

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

Comprises information on the installed options.

Show Inactive ← Installed License Keys

Enables the display of the inactive (expired) licenses in the [Installed License Keys Table](#).

Show Deactivated ← Installed License Keys

Enables the display of the deactivated licenses in the [Installed License Keys Table](#).

See [How to move a portable license](#) for information on how to activate deactivated licenses.

Installed License Keys Table ← Installed License Keys

Shows information on the currently installed options.

"Export License Key to File"

Opens a dialog to save the generated license key file. This file is required during the unregistration process.
If you have a portable unregistered option, you can register it later on another instrument (see [How to move a portable license](#)).

"Option"

Displays the option short designation.

Tip: Open the [Hardware Options/Software Options](#) dialog to retrieve more information about the installed options.

"License Count"

Displays the number of the licenses for the selected option key.

"License Type"

Displays the type of license.

A license type determines the common qualification application duration and the portability of a license. The following license types are provided: evaluation, permanent, portable, quantified, time-controlled with a duration of 1, 3, 6 or 12 months. A license can also be deactivated or expired.

For time limited licenses, the left time of applicability is displayed too.

"Registrations" (reserved for future use)**Open License Server**

Opens the R&S License Server of the R&S SMW, see [Chapter 12.5.2, "Using the license server"](#), on page 782.

Manage Waveform Packages

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys > Manage Waveform Packages".

Opens the "Manages Waveform Packages" dialog that enables you to register waveform files.

With a waveform packages license, the R&S SMW can play a waveform file generated with the R&S WinIQSIM2 software, even if it is not equipped with the corresponding digital standard option for using R&S WinIQSIM2 (R&S SMW-K2xy/K4xy).

Note: One waveform packages license per waveform is required, and for multisegment waveforms, you need a license per segment.

Once registered license cannot be moved to another instrument.

A waveform packages license does not allow R&S SMW to play waveforms of options R&S SMW-K256/-K352/-K353/-K354.

Number of Licenses/Waveforms ← Manage Waveform Packages

Displays the number of the available and used R&S SMW-K200 licenses.

Select Waveform ← Manage Waveform Packages

Opens a standard dialog to select the waveform to be registered.

Register Selected Waveform ← Manage Waveform Packages

Executes the registration.

License Table ← Manage Waveform Packages

Gives an overview of the registered waveforms, the registration date and the number of used licenses.

"Waveform" Displays the directory, path and file name of the waveform file.

"Registration Date"
Displays date and time of registration.

"Used License(s)"
Shows the number of licenses the waveform file requires.

Trial License

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Trial License".

Option: R&S SMW-T0

A trial license determines a series of applications you can include and enable for a limited period of 90 days. Within this period, you can deactivate and activate the license as often as needed using the [Trial Period](#) function.

Trial Period ← Trial License

Activates the options specified in the trial license.

See [Trial License Table](#) for the included options.

Remote command:

`:SYSTem:OPTion:TRial[:STATe]` on page 1333

Remaining Days ← Trial License

Displays the remaining validity period of the time limited trial license.

Remote command:

n.a.

Trial License Table ← Trial License

Shows information on the options included in the trial license.

- "Option" Displays the short designation of an option.
Tip: Open the [Hardware Options/Software Options](#) dialog to retrieve more information about the installed options.
- "Designation" Displays the option name.
- "Expiration Date" Displays the end date of the time limited trial license.

Remote command:

:SYSTem:OPTion:TRial:LIST? on page 1333

Occupy Licenses

The license server allows you to borrow one or more options with floating licenses for a specified time. You can retrieve a non-occupied license and save it locally for up to 7 days.

Access:

Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

The table lists all options that are available on the license server. It covers the short and long name, the number of available options on the server, the number of already occupied options and the remaining time periods for their use.

To occupy or renew a license, select "Occupy Option".

Occupy / Renew License: SMW-K55

SMW-K55 (LTE Release 8) All from Server: 17 / Occupied: 2 / Free: 2

Occupy Free Licenses	
Select Free Licenses	Occupation Period
1	3 days
+ Occupy	
Renew Occupation Period	
1. License: Extend Occupation Period to	7 days
2. License: Extend Occupation Period to	4 days
	Renew
	Renew

Remote command:

[:SOURce] :OCCupy:OPTion:CATalog? on page 1269

License Info ← Occupy Licenses

Displays the current occupancy state of the selected option.

- "<instrument>-<option>"
 Short name of the option.
- "(<designation>)"
 Long name of the option.
- "All from Server: <no>"
 Number of options available on all connected license servers.

"Occupied: <no>"

Number of options occupied by the instrument.

"Free: <no>"

Remaining number of options that can be occupied on the instrument.

Select Free Licenses ← Occupy Licenses

Sets the number of licenses to occupy.

Occupation Period ← Occupy Licenses

Sets the occupation period for the selected option in days.

Occupy ← Occupy Licenses

Executes the occupation process.

The R&S SMW saves the selected options locally and removes the licenses from the list of available options on the license servers.

Remote command:

`[:SOURCE] :OCCupy:OPTion` on page 1269

License <no>: Extend Occupation Period to ← Occupy Licenses

Extends the occupancy duration set before to the required length.

Note: You can only extend an already set occupation period.

Reset or return an occupied period before the time has elapsed is not possible.

Renew ← Occupy Licenses

Executes the extension of the occupation period.

The R&S SMW saves the selected options locally and removes the licenses from the list of available options on the license servers.

Remote command:

`[:SOURCE] :OCCupy:OPTion:RENew<ch>` on page 1270

12.5.2 Using the license server

The R&S SMW now supports handling of software licenses using the license server from Rohde & Schwarz.

As a browser application you can access the R&S License Server either in a browser and also directly in the R&S SMW. The onboard license server integrated in the instrument firmware has connection to a *local smartcard* memory. The local smartcard holds local licenses, i.e. licenses that are intended for use on this specific instrument.

As opposed to local licenses, the application also manages licenses referred to as *floating licenses*.

For managing floating licenses, the same license server application runs on a PC at customer's site. In this context referred to as *remote license server*, with connection to the customers memory, the *remote smart card*. The remote smartcard holds floating licenses, i.e. licenses you can use on instruments everywhere without restrictions on the location.

When you need a specific application, you can obtain a license from the server. When you no longer need the license, return it to the server.



The license server releases a returned floating license for use in another instrument only after a follow-up time of 10 minutes.

At startup, the license server checks the available floating licenses. During this check, it returns the licenses immediately.




The floating license server application is part of the configuration at purchase. Included in delivery, you get an installation package that consists of a smart card dongle with the software and the corresponding user documentation.

To open the license server

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

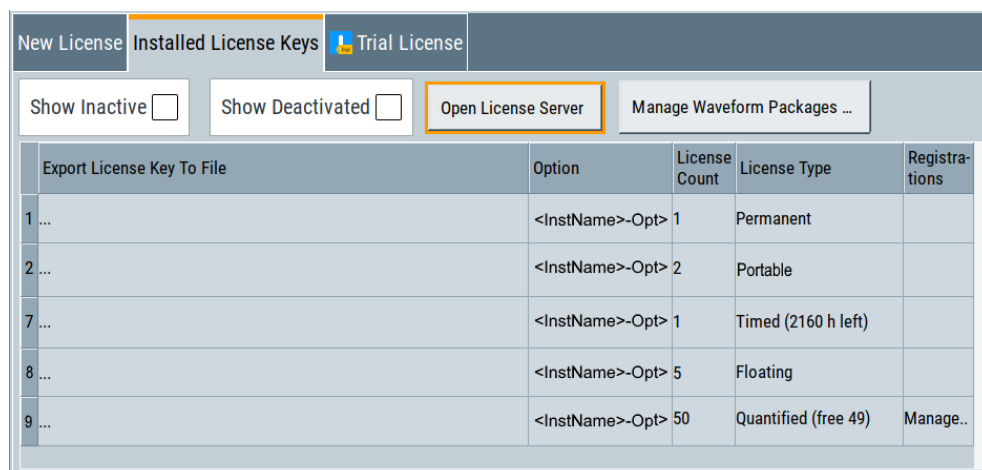

2. Select "Open License Server".

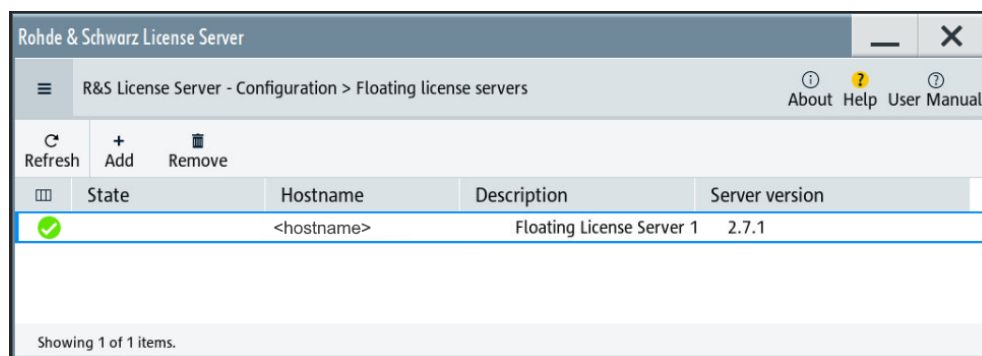


Figure 12-3: R&S license server dialog

The license server opens in a browser window and starts initially in the "Configuration" view for configuring floating license servers. It lists already configured floating license servers, with information on the host address, designation and state. You can add or remove a floating license server configuration and customize the information to be displayed. The control elements in the upper area enable you to access the "Analytics" or "Licenses" views.

The icons at the upper right lead you to information on the license server:


- "About": shows the software version.
- "User Manual": opens the embedded license server user manual.
- "Help": provides the functional description on a specific dialog and its settings.



For security reasons, the license server of the R&S SMW enables you to restrict the access to the floating licenses from an external instrument.

For information on how to restrict the access to the connections, see ["To restrict remote connection access"](#) on page 789. To release a restriction, see ["To enable remote connection access"](#) on page 791.

For more information, see the user manual of the license server.

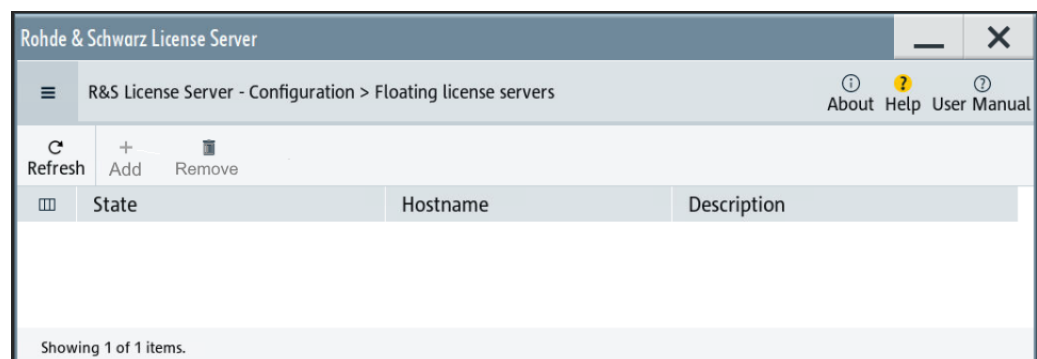

Short glance at the main views

The section provides a brief insight into the main windows of the license server. For details and handling of the application, refer to the embedded user documentation.



1. To access a view, select the menu button.
2. Select "Configuration".

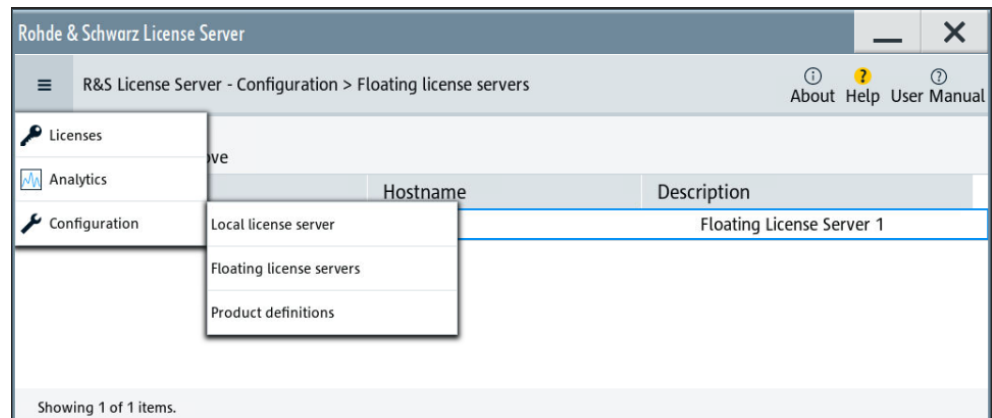


Figure 12-4: Configuration menu

Accesses the configured license servers, access lists and installed product definitions.

a) Select "Local license server".

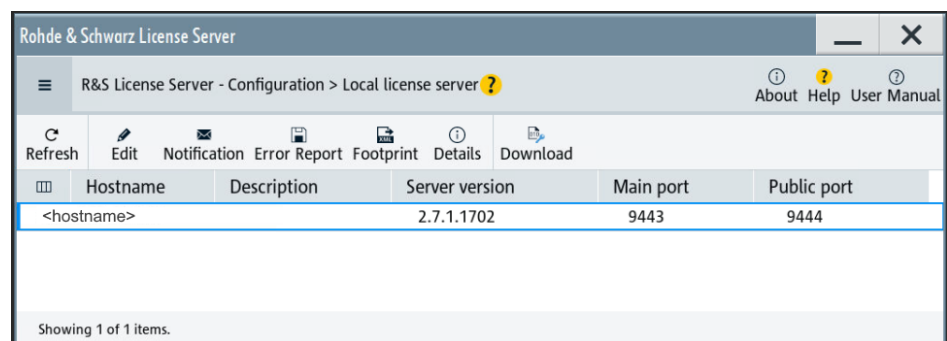


Figure 12-5: Example of a local license server view

Shows the onboard license server of the instrument. With the column selection, you can indicate or unhide characteristics of the available server. The task bar buttons provide access to the corresponding functions and access lists.

- b) Select "Floating license server".

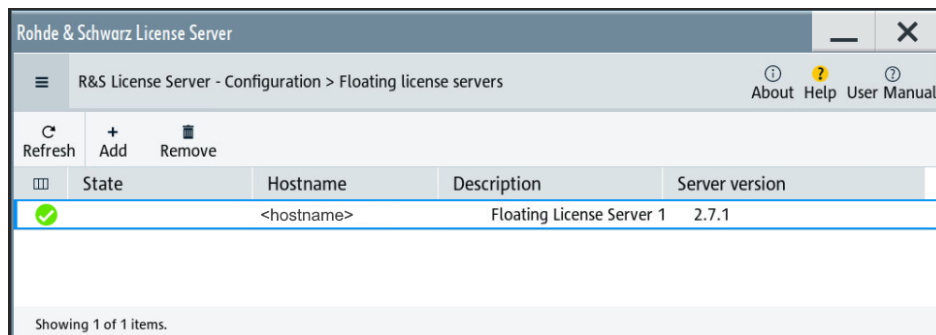


Figure 12-6: Example of a floating license server view

To add the connection to a floating license server, see ["To add a remote connection to an external license server"](#) on page 792.

- c) Select "Product definitions".

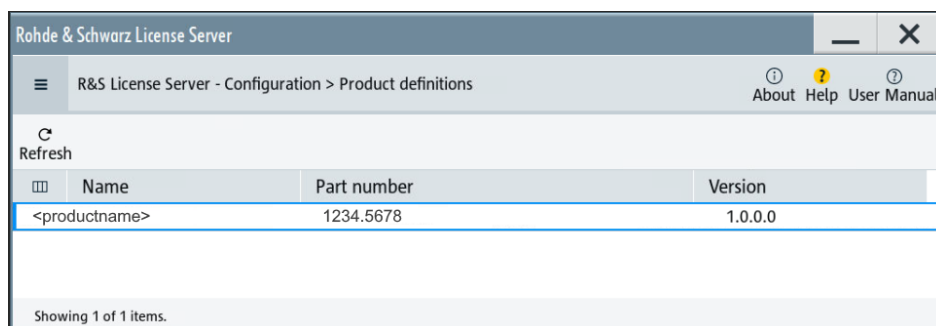


Figure 12-7: Example of a product definition view

Shows installed product definitions. To view the available characteristics, use the column selection.

3. Select "Licenses".


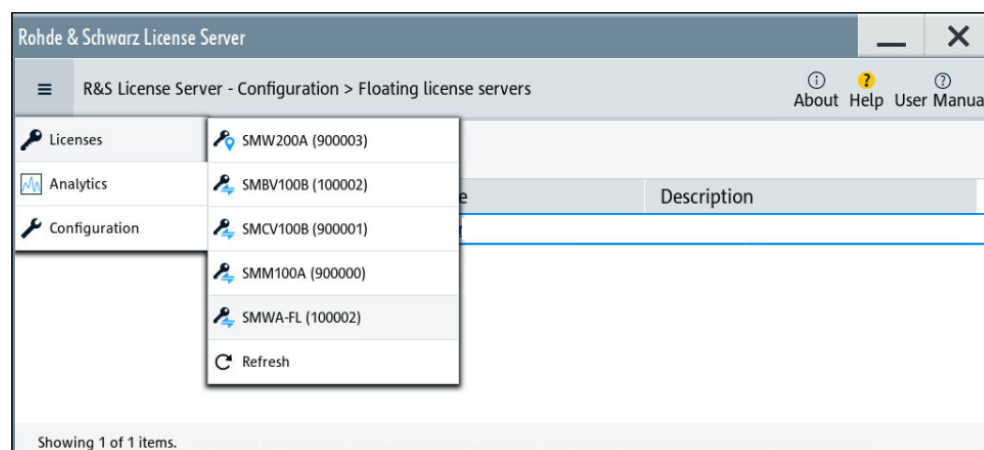


Figure 12-8: Licenses menu

Provides access to the available license servers.

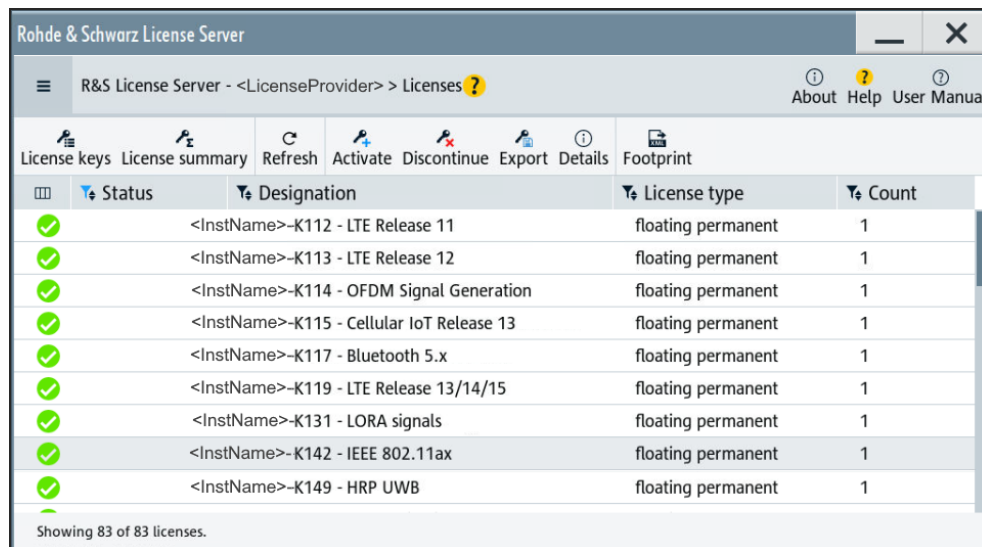

Status	Designation	License type	Count
✓	<InstName>-K112 - LTE Release 11	floating permanent	1
✓	<InstName>-K113 - LTE Release 12	floating permanent	1
✓	<InstName>-K114 - OFDM Signal Generation	floating permanent	1
✓	<InstName>-K115 - Cellular IoT Release 13	floating permanent	1
✓	<InstName>-K117 - Bluetooth 5.x	floating permanent	1
✓	<InstName>-K119 - LTE Release 13/14/15	floating permanent	1
✓	<InstName>-K131 - LORA signals	floating permanent	1
✓	<InstName>-K142 - IEEE 802.11ax	floating permanent	1
✓	<InstName>-K149 - HRP UWB	floating permanent	1

Showing 83 of 83 licenses.

Figure 12-9: Example of a license keys view

The "License keys" view lists the license key options that are available on the selected server. To show additional information, use the column selection. The task bar functions enable you to activate or deactivate a license, to get details on an option and export license keys or information on the selected product.

4. Select "Analytics".

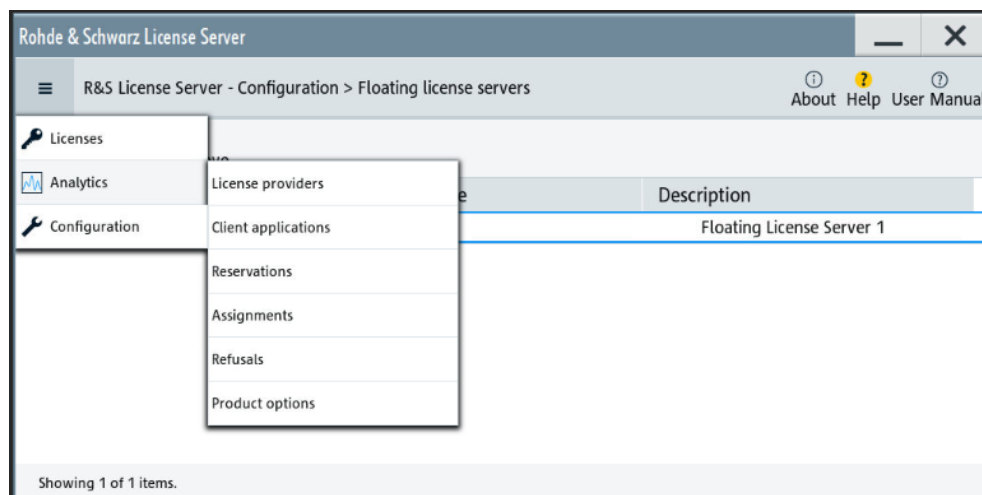


Figure 12-10: Analytics menu

Provides access to the license providers, client applications and enables you to export statistics data for evaluation in external applications.

Status	Product	Storage	Provider type	Situated at	Device ID/Part numb...	Remarks
In Use	<hostname>	Local	<provider>		1412.0000K02-90C...	
In Use		Floating	<LicenseServerAddress>	1412.0000		
In Use	<hostname>	Floating	<LicenseServerAddress>	1412.0000k91		
Disconnected		Floating	<LicenseServerAddress>	1423.1003k91		
Disconnected		Floating	<LicenseServerAddress>	1440.8002k92		
Disconnected		Floating	<LicenseServerAddress>	1432.7000k92		

Showing 7 of 7 items.

Figure 12-11: Example of the license providers view

Shows information on configured client applications, license providers and license types. To show additional information, use the column selection.

To manage licenses on the R&S SMW

To request or return a license, proceed as follows:

1. Access: see ["To open the license server"](#) on page 783.
The browser application opens.
2. Select "Licenses"
3. Select a license server in the menu list, e.g. "R&S SMW".
The "License keys" view lists the enabled options available on the selected server.
4. Select "Status" > "Select all" to list also options that are currently deactivated.
The "Licenses" view shows all active, inactive and time limited options.
5. To get detailed information on a specific option:
 - a) Select the option in the list.

- b) In the task bar, select "Details".


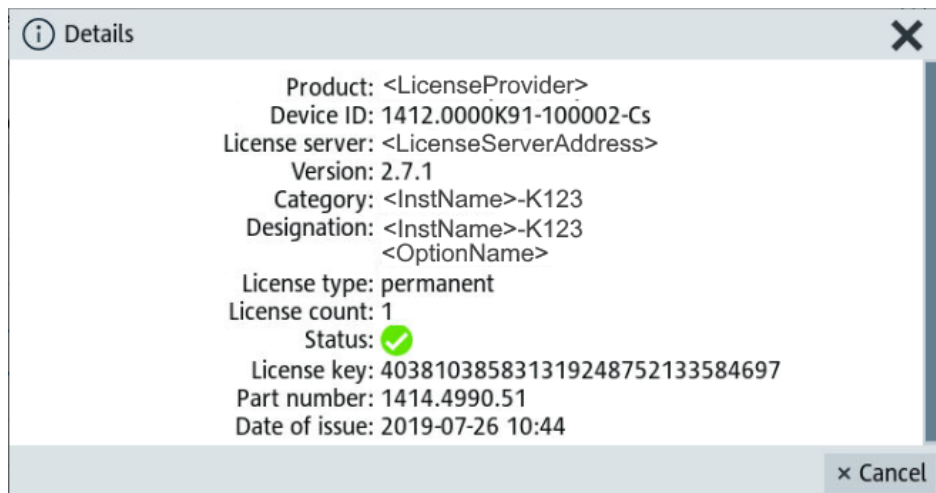


Figure 12-12: Example of the license characteristics of an option

6. To enable a discontinued license: , select in the taskbar.

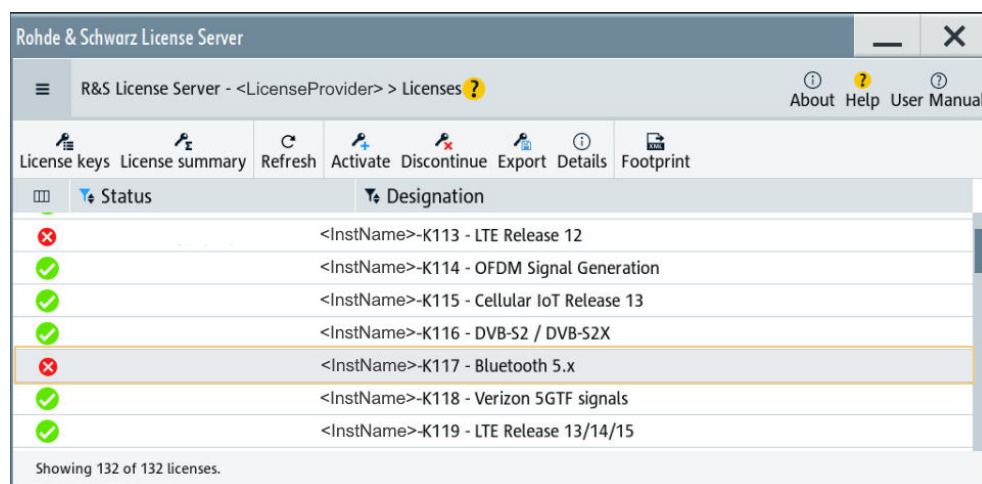

- Select the license you want to activate.
 - In the task bar, select .
7. To return a license, proceed the same way:
- Select the license.
 - Deactivate the license with .
8. Follow the instructions on the screen.


To restrict remote connection access

If you want to restrict the remote connection to the floating license server of the R&S SMW, you can configure specific levels to prevent unauthorized access:


- Open the license server as described in ["To open the license server"](#) on page 783.

The onboard license server browser opens.

2. Select "Configuration" > "Local license server".
3. In the task bar, select "Edit".
4. Select the "Access options" tab.
5. Under "Remote Connection Restriction" restrict the access according to your requirements.

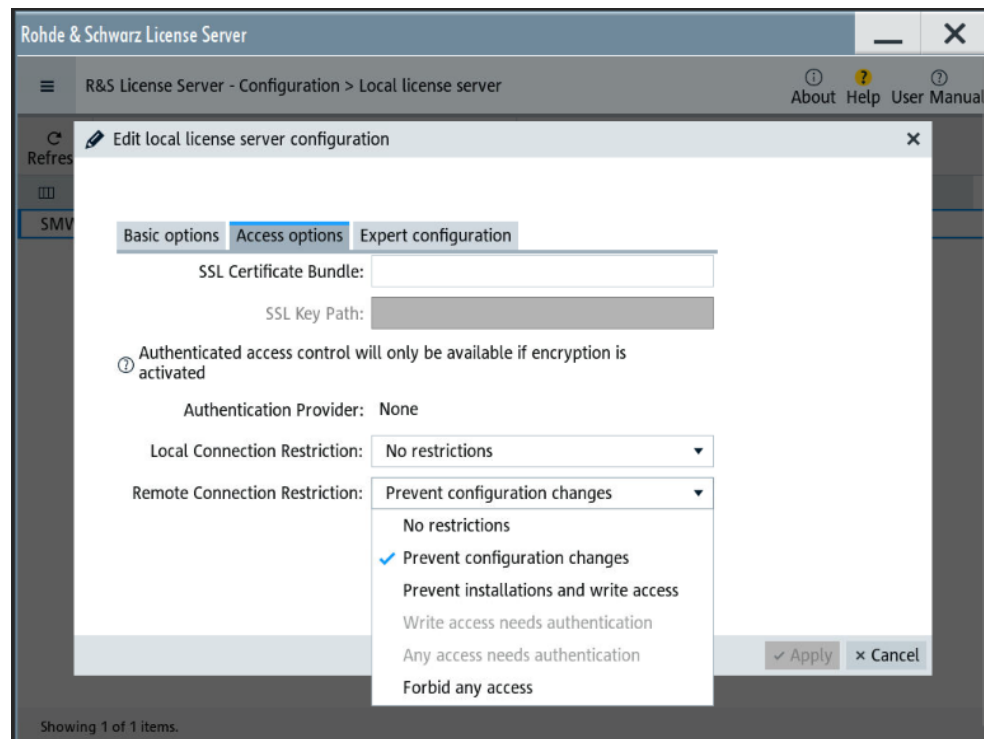

6. Confirm with "Apply" and close the dialog.

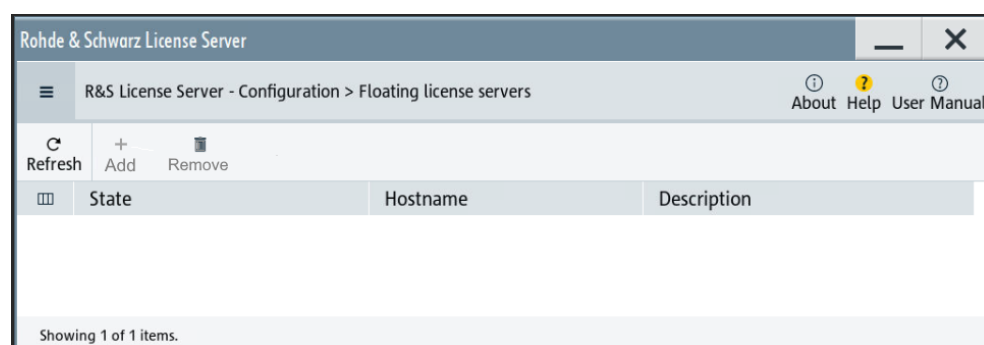


The R&S SMW blocks the remote connection of an external floating license server. The "Add" and "Remove" buttons are disabled (grayed out). The restriction also disables the remote access to the "Edit" mode of the local server. You can release the restricted access only directly on the instrument.


To enable remote connection access

If the remote connection to the floating license server is blocked, you can release the restriction or configure specific levels to prevent unauthorized access:

1. Open the license server as described in ["To open the license server"](#) on page 783. The onboard license server browser opens.
2. Select "Configuration" > "Local license server".
3. In the task bar, select "Edit".
4. Select the "Access options" tab.
5. Under "Remote Connection Restriction" release the access according to your requirements.

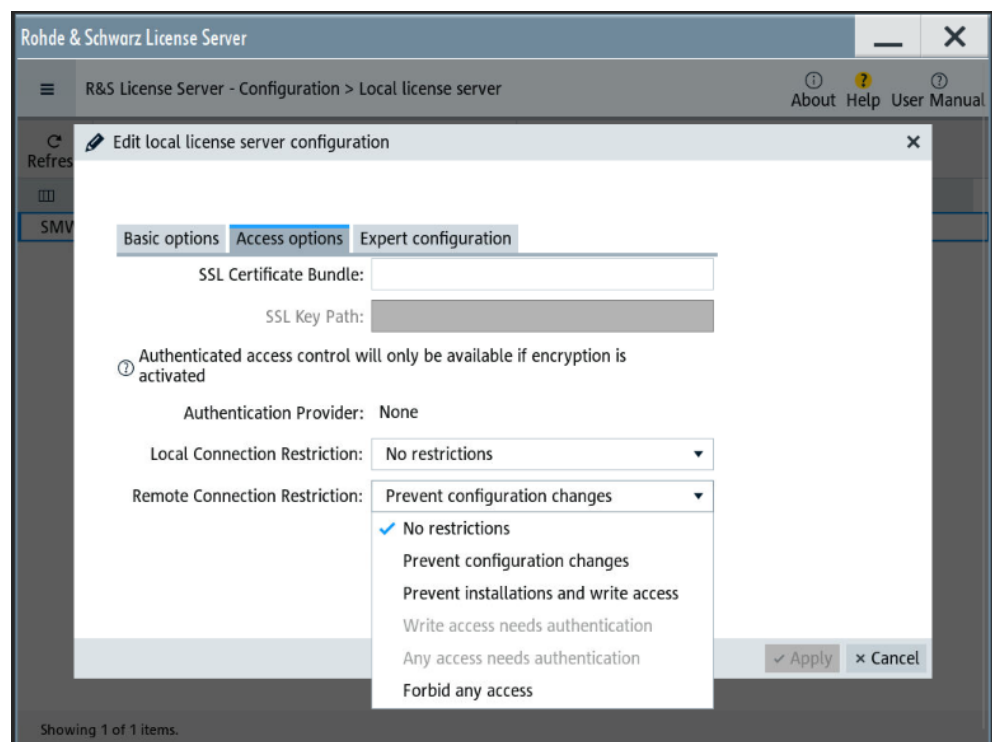


6. Confirm with "Apply" and close the dialog.
If your selection no longer restricts the access, you can assign a floating license server.
7. Select "Configuration" > "Floating license server".

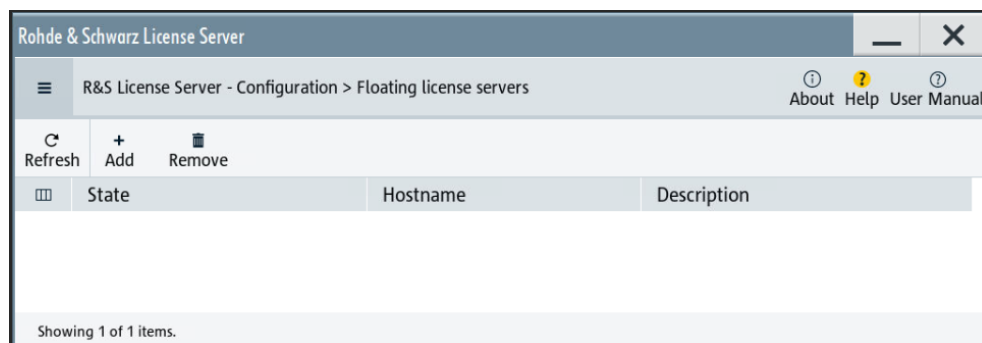

The "Add" and "Remove" buttons in the task bar are no longer blocked.

To add a remote connection to an external license server

1. Open the license server as described in ["To open the license server"](#) on page 783. The onboard license server browser opens.
2. Select "Configuration" > "Floating license server".
3. Select "Add".
4. Enter hostname and port of the license server you want to use.
5. Confirm with "Add".

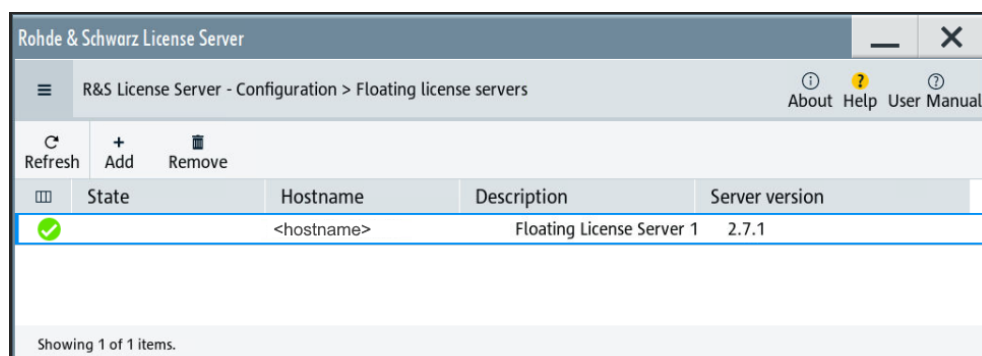

The access to the server is established.

12.5.3 How to occupy or extend a license

The R&S SMW also supports the use of currently non-occupied software licenses provided by license servers of Rohde & Schwarz. When connected to one or more license servers, you can retrieve licenses for temporary installation and use directly on the instrument.

The following description shows how to assign and handle occupied licenses.

To occupy an option

The example shows how to occupy an LTE option for use in the instrument.



If all licenses are occupied, the license management of the instrument blocks the settings under "Occupy Free Licenses". But you can still extend the period of already occupied licenses, the instrument lists under "Renew Occupation Period", see ["To extend the occupation period for an option in use"](#) on page 794.

1. Access:

Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

Manage License Keys					
New License	Installed License Keys	Trial License	Occupy Licenses		
Occupy Option	Designation	All Licenses from Server	Occupied by Device	Occupation Period(s)	
0 SMW-K55 ...	LTE Release 8	17	0		
1 SMW-K62 ...	Additive White Gaussian Noise	2	2	7d, 23h	
2 SMW-K71 ...	Dynamic Fading	2	1	4d	
3 SMW-K72 ...	Enhanced Fading Models	2	0		

The table displays one row per option, even if more than one license is available. Column "All Licenses from Server" shows the number of free licenses.

2. To access the configuration dialog, select "Occupy Option" in the corresponding row.

The subdialog for configuring the occupancy opens.

Occupy / Renew License: SMW-K55	
SMW-K55 (LTE Release 8)	
All from Server: 17 / Occupied: 0 / Free: 2	
Occupy Free Licenses	
Select Free Licenses	Occupation Period
2	3 days
Occupy	
Renew Occupation Period	

In the information field of the dialog, you can see the number of available licenses for the selected option. It is not yet installed on the instrument ("Occupied: 0"), and you can occupy options up to the number of free licenses.

- In the "Select Free Licences" field, set "1".
- In the "Occupation Period" field, select e.g. "3 days".
- Confirm and assign the selection with "Occupy".

Now you can use the option on the instrument. The number of available licenses on the servers is reduced by 2 for the set occupation period.

To extend the occupation period for an option in use

If an option is already occupied, the R&S SMW lists each option under "Renew Occupation Period".

1. Access: Navigate to the "Occupy / Renew License: ..." dialog, as described in "To occupy an option" on page 792.
2. To extend the occupation time, select the option in section "Renew Occupation Period".
3. Set the required time, e.g. "4 days".

The maximum period is 7 days.

12.5.4 How to move a portable license

This example is intended to explain how to perform the required steps at the instrument.


Use a USB flash drive to transfer the license key files between the instruments and the browser.



We assume knowledge about the handling of the R&S License Manager online tool and the description of the whole process.

1. Open your browser. Enter <https://extranet.rohde-schwarz.com/service>. Select "Manage Licenses > Move Portable License".
The first step requires the Device IDs of the source and target instruments.
2. To find out the Device IDs, proceed as follows:

- a) On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Device ID".

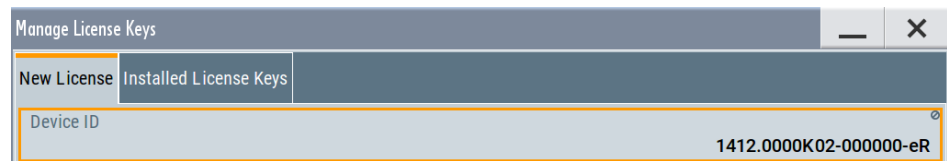

- b) On the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys".
 - c) In the "New License" tab, select "Device ID".
 - d) In the browser, select "Manage Licenses > Move Portable License > Select Devices".
 - e) Enter the Device IDs.
3. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys > License Keys Table".
 - a) Navigate to the portable license that you want to move.
 - b) Select the "Export License to File" column.
 A standard file manager dialog opens.
 4. Enter a filename.
 5. Save the exported license key, e.g. `k123_portable_key_to_move.xml`.
 6. In the browser, select "Manage Licenses > Move Portable License > Select License (from file)":
 - a) Select the exported license key.
 - b) Check the selection.
 - c) Create the deactivation key.
 - d) Save it to file.
 7. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".
Select the transferred deactivation key.
 8. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New Licence > Export Deactivation Response to File".
 9. In the browser, go to "Manage Licenses > Move Portable License > Install Deactivation Key (from file)".
 10. Enter the deactivation response of the instrument.
The license is deactivated for the source instrument.
 11. In the "Manage Licenses > Move Portable License", go to step "Create License" to generate a license key for this portable option and the selected target instrument.
 - a) Download the license key as a file.
 - b) Transfer it to the target instrument.

12. In the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".

13. Select the created license key file.

The portable option is installed on the target instrument.

12.6 Managing extensions

This function enables you to install firmware extensions.

You get an extension file from Rohde & Schwarz for import, with the following naming convention:

`<name>_V<xx.yy>.rsux`

12.6.1 Manage extension settings

This dialog enables you to install or remove extensions. A list of installed extensions provides a quick overview.

Access:

- Select "System Config > Setup > Instrument Assembly > Manage Extensions..."

"Install Extension" and "Remove Extension" leads you to a file manager dialog to import or erase extension files.

12.6.2 How to install or deinstall an extension

This example explains how to perform the required steps at the instrument.

Use a USB flash drive to provide the extension files at one of the USB interfaces of the instrument.

To load and install an extension

1. Select "System Config > Setup > Instrument Assembly > Manage Extensions..."
2. Select "Install Extension".
3. In the "Select Extensions Directory", select the file from the USB flash drive.
4. Select "Install".

The R&S SMW embeds the extension files in the instrument.

Note: If the file is not complete, or the filename is not correct, the R&S SMW aborts the import and displays a warning.

5. In the "Manage Extensions" dialog, select "Reboot" to restart the R&S SMW.

After the reboot, the R&S SMW provides the loaded extension in the baseband block.

To deinstall an extension

1. Select "System Config > Setup > Instrument Assembly > Manage Extensions...".
2. Select "Remove Extension".
3. In the "Select Extensions Directory", select the file.
4. Select "Remove".

The R&S SMW removes the corresponding files from the instrument.

Note: If you have installed a permanent option, the instrument displays a warning message that you cannot remove this option.

5. Reboot the R&S SMW.

The extension is deleted.

12.7 Using the security settings

The protection function of the R&S SMW offers several levels to activate particular functions like self-test or tests for service purposes specifically.

Protection

The five protection levels are automatically active on startup that means all protected functions are locked.

To unlock a protection level:

- ▶ In the "System Config > Setup > Security > Protection" dialog, enter the correct password.

To lock a protection level:

- ▶ Clear the corresponding checkbox.

Protection levels

The following functions are protected in the respective levels:

- Protection level 1
Protects against accidental changes, like, for example, the clock and date, several internal adjustments functions and the self-test, as well as network settings or the instrument hostname.
You can access this level with the password 123456.
- Protection level 2

Unlocks protected service functions. It is accessible to authorized personnel of Rohde & Schwarz service department only.

- Protection level 3 to 5
Are reserved for internal use.

Security

The security concept of the R&S SMW helps you to protect your instrument against uncontrolled access and changes. All provided security services require that you enter the security password.

Provided security services are:

- **General** security parameters, such as:
 - **USB storage** that secures controlled access to the mass memory of the instrument
 - **Volatile mode** that prevents information to be written to the internal memory permanently.
 - **Sanitizing** that prevents the instrument from leaving a secure environment with stored user information.
 - **Annotation** frequency and amplitude prevent reading the display.
 - **Secure Update Policy** check that verifies the integrity and origin of the firmware package to be installed.
To access the settings of these topics, see [Setting security parameters](#) > "Secure Update Policy" on page 800.
- **Password** management secures controlled user access to the instrument
With the two-step password concept, you can assign a user-defined password for the operating system, and a security password for accessing the mass storage of the instrument.
See [Chapter 12.7.4, "Password management"](#), on page 808.
- **LAN services** secure controlled network access
You can individually lock and unlock supported LAN interface services, including the SMB client and SMB server that use versions 1.0 and 2.0 of the SMB protocol. Remote control over LAN requires you have enabled the interface, but you can disable not needed LAN services individually.
Note: Disabling LAN services needed for remote control over LAN locks the instrument access persistently. You cannot address the instrument any longer.
See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.
- **User interface** prevents front panel operation and/or reading the display.

For more information, see the document R&S SMW Instrument Security Procedures.

12.7.1 Protection level settings

Access:

- ▶ Select "System Config > Setup > Security > Protection".

Protection Level 1	<input checked="" type="checkbox"/>	Password	*****
Protection Level 2	<input checked="" type="checkbox"/>	Password	*****
Protection Level 3	<input checked="" type="checkbox"/>	Password	*****
Protection Level 4	<input checked="" type="checkbox"/>	Password	*****
Protection Level 5	<input checked="" type="checkbox"/>	Password	*****

The "Protection" dialog provides access to the unlocking of different protection levels.

Several functions in the instrument are password-protected to prevent for example accidental changes, "[Protection](#)" on page 797.

The remote commands required to unlock a protected stage are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Protection Level/Password

Unlocks the selected level of protection, if you enter the correct password.

The default protection level 1 password is 123456.

To lock the protection level again, clear the checkbox.


Remote command:

`:SYSTem:PROTect<ch>[:STATe]` on page 1318

12.7.2 Setting security parameters

Access:

- Select "System Config > Setup > Security > Security > General".

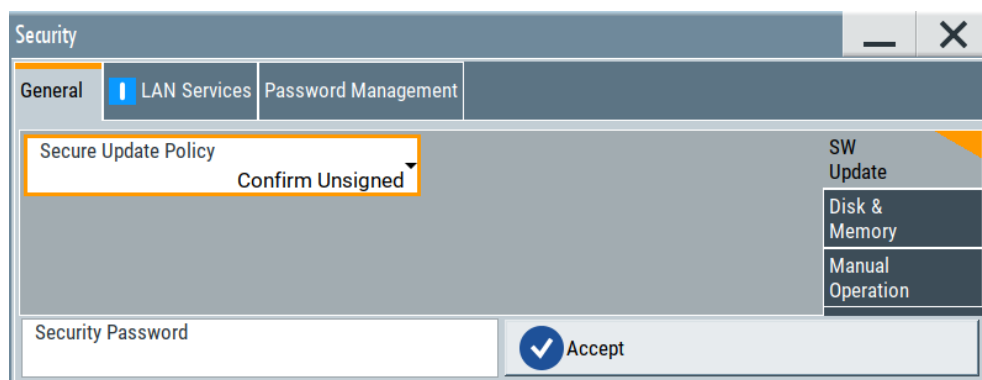

In the "General" tab, you can determine the security level for firmware updates, and configure the security settings for the mass memory and manual operation.




All modified settings in this dialog are not applied until you enter the [Security Password](#) and confirm with [Accept](#).

12.7.2.1 Update policy security settings

Access:

- Select "System Config > Setup > Security > Security > General > SW Update".

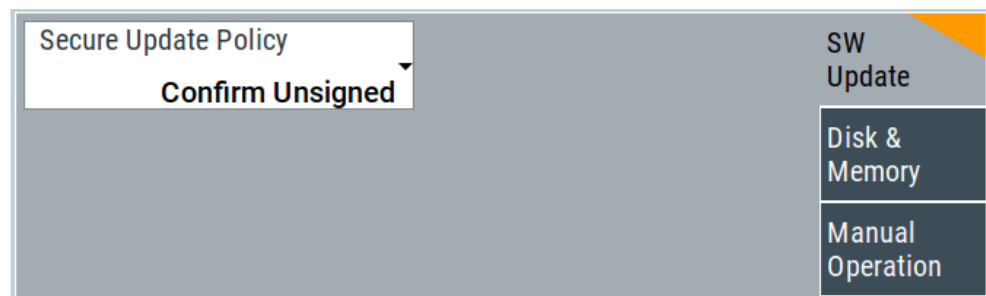

The SW Update tab enables you to select the security mode for firmware updates.

The remote commands available to control security settings are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Secure Update Policy

Allows you to configure the automatic signature verification for firmware installation.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also:

- [Chapter 12.7, "Using the security settings"](#), on page 797 for more information on the security concept.
- The release notes for details on signature verification when installing new or former firmware versions, available at www.rohde-schwarz.com/firmware/smw200a.

"Confirm Unsigned"

Performs the signature verification.

If the check detects any discrepancies, the instrument issues a warning message. You can still update the firmware or reject updating.

This setting also enables you to downgrade the firmware version.

"All Packages" Accepts all packages without signature verification.

"R&S Signed Packages"

Performs the signature check.

If the check detects any discrepancies, the instrument issues a warning message and locks the update to this firmware.


Remote command:

[:SYSTem:SECurity:SUPolicy](#) on page 1330

12.7.2.2 Disk & memory security settings

Access:

- Select "System Config > Setup > Security > Security > General > Disk & Memory".

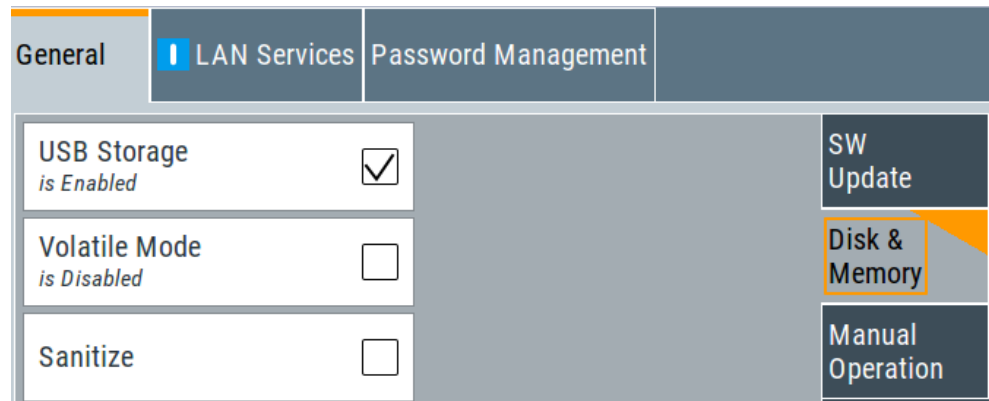

The "Disk & Memory" tab secures controlled access to the mass memory and prevents information from leaving a secure environment.

The remote commands available to control security settings are described in [Chapter 14.20, "SYSTEM subsystem"](#), on page 1307.

USB Storage

Activates the access to external USB storage media.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also [Chapter 11.9.4, "Using a USB storage device for file transfer"](#), on page 731.

Note: Remove all USB memory devices before disabling the USB storage. If any USB memory device remains connected, disabling is blocked, and the instrument returns a warning message.


Volatile Mode

Activates volatile mode, so that no user data can be written on the internal memory permanently.

In volatile mode:

- Data that the instrument normally stores on the internal memory is redirected to volatile memory.
- The user directory is mapped to the volatile memory. You access the temporary data just as data stored in the `/var/user/`, see [Chapter 11.3, "Protecting data"](#), on page 708.
- Data on the internal memory cannot be changed. It is protected against modification or erasure.
- You can only save data:
 - Temporarily in the volatile memory
 - On a connected external storage device, such as a memory stick

To activate volatile mode: enter the security password, confirm with "Accept" and reboot the instrument. Otherwise the change has no effect.

Activated volatile mode is indicated by the icon .

Remote command:

`:SYSTem:SECurity:VOLMode[:STATe]` on page 1330

Sanitize

Executes the erase procedure that sanitizes the internal memory.

The sanitizing function makes sure that no user information is stored on the instrument when it leaves the secure environment.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

Note: If the instrument is subject to high security, and you have disabled volatile mode, the internal memory holds user-data, and thus poses a security risk.

See also [Chapter 12.7, "Using the security settings"](#), on page 797 for more information on the security concept.


Remote command:

`:SYSTem:SECurity:SANitize[:STATe]` on page 1329

12.7.2.3 Manual operation security settings

Access:

- Select "System Config > Setup > Security > Security > General > Manual Operation".

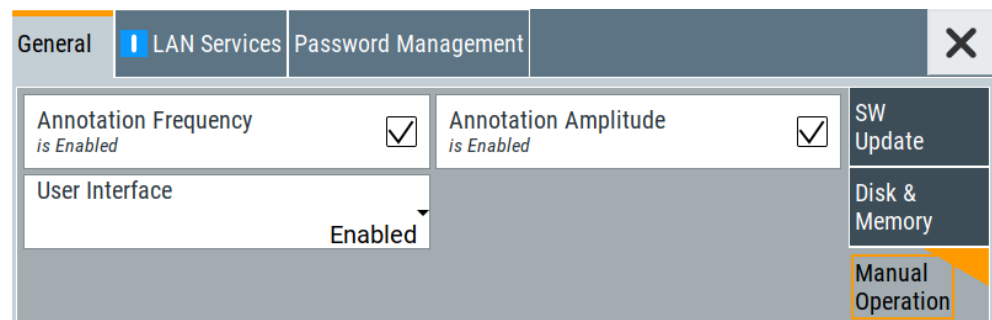

The "SW Update" tab enables you to lock front panel operation and/or reading the display.

The remote commands available to control security settings are described in:

- [Chapter 14.12, "DISPlay subsystem"](#), on page 947
- [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Annotation Frequency

Enables the display of the currently used frequency in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 812.

Remote command:

`:DISPlay:ANNotation:FREQuency` on page 949

Annotation Amplitude

Enables the display of the currently selected level in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 812.

Remote command:

`:DISPlay:ANNotation:AMPLitude` on page 949

User Interface

Allows you to lock the controls for manual operation and the display individually.

How to: see ["Deactivating the user interface"](#) on page 813.

See also [Chapter 12.7, "Using the security settings"](#), on page 797.

"Enabled" Enables the display and all controls for the manual operation of the instrument.

"Touchscreen Off"

Locks the touch sensitivity of the screen.

This security feature protects the instrument against unintentional change of settings by accidentally touching of the screen.

Still available controls for manual operation are:

- The keys at the front panel, including the rotary knob
- The external mouse and keyboard
- Remote operation over VNC

The instrument indicates the locked touchscreen by an icon .

Unlocking is possible via VNC, external controls or remote control.



"VNC Only"

Locks the keys at the front panel, the touchscreen and externally connected keyboard and mouse.

The display on the screen remains and shows the current settings and changes.

The instrument indicates the activated "VNC only" feature by the icon .

Unlocking is possible via VNC or turning off and on again.

- "Display Only" Locks the manual operation of the instrument. The display on the screen remains and shows the current settings and changes. This security feature protects the instrument against unauthorized access, but still shows the current settings and processes, for example when you operate the instrument via remote control.
- The function disables:
- The touchscreen functionality of the display
 - The keys at the front panel of the instrument
 - The external mouse and keyboard
- The instrument indicates the locked controls by a padlock  softkey. How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 813.
- "Disabled" Locks the display and all controls for the manual operation of the instrument. This security feature protects the instrument against unauthorized reading and access, for example when you operate the instrument via remote control.
- The function disables:
- The display
 - The touchscreen
 - The keys at the front panel of the instrument
 - The external mouse and keyboard
- The screen shuts off and displays a padlock symbol  instead. How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 813.

Remote command:

:SYSTem:ULOCK on page 1316

:SYSTem:DLOCK on page 1315

:SYSTem:KLOCK on page 1315

Enabling a locked user interface for manual operation

Follow the instructions listed in ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 813.

Remote command:

:SYSTem:ULOCK on page 1316

:SYSTem:DLOCK on page 1315

:SYSTem:KLOCK on page 1315

12.7.3 Configuring LAN services

Access:

1. Select "System Config > Setup > Security > Security > LAN Services > Common Services".

2. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.

Do not disable the LAN interface or LAN services needed for remote control while you operate the instrument remotely.

Proceed with step [step 4](#) for troubleshooting disabled services.

LAN Services			Common Services
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Enabled</i>	<input checked="" type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Enabled</i>	<input checked="" type="checkbox"/>
HTTP <i>is Enabled</i>	<input checked="" type="checkbox"/>	Remote Support <i>is Disabled</i>	<input type="checkbox"/>
		Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>
		Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>

Security Password

In the "Common Services" side tab, you can individually disable the supported services of the LAN interface.

3. Disable LAN services as needed.
- Disable the service.
 - To confirm disabling, enter the security password.
 - Select "Accept".
4. If you have locked the access accidentally, you have the following options:
- Update the instrument firmware using ISO image (`<instrument>_<version-number>.iso`).
Note: A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data. Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.
 - Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without loosing user-specific settings and data.
See <http://www.services.rohde-schwarz.com>.
5. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".

Samba Services		Common Services
SMB 1.0/2.0 Client <i>is Disabled</i>	<input type="checkbox"/>	SMB 1.0/2.0 Server <i>is Disabled</i>

In the "Samba Services" side tab, you can activate former versions of the SMB client and SMB server.

The remote commands available to control security settings are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

How to:

- ["Disabling the LAN interface"](#) on page 811
- ["Disabling LAN services"](#) on page 812
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 812

Common Services.....	806
L LAN.....	806
L LAN Services.....	806
Samba Services.....	807
L SMB 1.0/2.0 Client.....	807
L SMB 1.0/2.0 Server.....	807
Security Password.....	808
Accept.....	808

Common Services

Enables the LAN interface and supported LAN interface services.

LAN ← Common Services

Enables the LAN interface in general, and thus provides remote access over all unlocked services.

Remote command:

[:SYSTem:SECurity:NETWork\[:STATe\]](#) on page 1329

LAN Services ← Common Services

Enables the supported LAN interface services individually.

"SCPI over LAN"

Access over LAN to control the instrument remotely, by using SCPI (Standard Commands for Programmable Instruments) commands. See also ["To start remote control with R&S VISA"](#) on page 879.

Remote command:

[:SYSTem:SECurity:NETWork:SOE\[:STATe\]](#) on page 1328

"VNC"

Access over VNC (Virtual Network Computing) interface, a graphical desktop sharing system that uses RFB protocol to control the instrument remotely.

See also [Chapter 13.14, "To operate the instrument using VNC"](#), on page 898.

Remote command:

[:SYSTem:SECurity:NETWork:VNC\[:STATe\]](#) on page 1329

"SSH (SCP)"

Access over SSH (Secure Shell), a network protocol for secure data communication.

Remote command:

[:SYSTem:SECurity:NETWork:SSH\[:STATe\]](#) on page 1328

"Remote Support"

Remote support over SSH (SCP).

The service provides communication for service purposes only.

Remote command:

`:SYSTem:SECurity:NETWork:REMSupport[:STATe]`

on page 1327

"HTTP"

Access with HTTP (Hyper Text Transfer Protocol), the application protocol for hypermedia information systems.

Remote command:

`:SYSTem:SECurity:NETWork:HTTP[:STATe]` on page 1327

"FTP"

Access with FTP (File Transfer Protocol), used to transfer files from a host to the instrument and vice versa.

See also [Chapter 11.9.2, "Accessing the file system of the R&S SMW over FTP"](#), on page 728.

Remote command:

`:SYSTem:SECurity:NETWork:FTP[:STATe]` on page 1326

"SMB (Samba)"

Access to SMB (Server Message Block), used for providing shared access to files, printers and serial ports of a network.

See also [Chapter 11.9.3, "Accessing the R&S SMW file system using SMB \(Samba\)"](#), on page 729.

Remote command:

`:SYSTem:SECurity:NETWork:SMB[:STATe]` on page 1328

"Avahi (Zeroconf)"

Avahi, a service for automatic configuration of the instrument in a network environment.

Remote command:

`:SYSTem:SECurity:NETWork:AVAHi[:STATe]` on page 1326

"Software Update"

Allows updating the software.

Remote command:

`:SYSTem:SECurity:NETWork:SWUPdate[:STATe]`

on page 1329

Samba Services

Enables support of SMB client and SMB server version 1.0 and 2.0 of the SMB protocol.

Support of version 1.0 and 2.0 is additional to the current SMB protocol version supported in the firmware. This firmware supports SMB protocol up to version 3.1.1.

SMB 1.0/2.0 Client ← Samba Services

Enables support of the SMB client compatible with SMB protocol versions 1.0 and 2.0.

SMB 1.0/2.0 Server ← Samba Services

Enables support of the SMB server compatible with SMB protocol versions 1.0 and 2.0.

Security Password

Enters the password that is required to enable or to disable the settings protected by a security password. Default is 123456.

How to: ["Changing the default security password"](#) on page 811

Accept

Applies the modified settings, provided the security password is entered and correct.

12.7.4 Password management


Access:

1. Select "System Config > Setup > Security > Security > Password Management > User Password".

The screenshot displays the 'Password Management' section of the instrument's web interface. The top navigation bar includes 'General', 'LAN Services' (selected), and 'Password Management'. Below this, a sub-header indicates the settings are 'Valid for VNC, FTP and SMB (Samba) access'. The main form area contains four input fields: 'User Name' (with the value 'instrument'), 'Old Password', 'New Password', and 'Confirm Password'. A 'Change Password' button with a key icon is located at the bottom right of the form. To the right of the form, there are two tabs: 'User Password' (active) and 'Security Password'.

In this tab, you can assign the security and a user-defined password.

2. Select "System Config > Setup > Security > Security > Password Management > Security Password".

General	LAN Services	Password Management	
Old Password		User Password	
New Password		Security Password	
Confirm Password			
		 Change Password	

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

User Name

Indicates the user name used for access to the Linux operating system and valid for VNC, FTP and SMB (Samba) access.

User Password

Access: select "System Config > Setup > Security > Security > Password Management > User Password".

Allows you to change and confirm the user password.

Old Password ← User Password

Enters the current user password. The default password is "instrument".

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

Note: Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 15.10, "Contacting customer support"](#), on page 1368.

New Password ← User Password

Enters the new user password.

The security password can contain decimal characters only.

Confirm Password ← User Password

Confirms the new user password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.

- ["Changing the default security password"](#) on page 811.

Change Password ← User Password

Changes the user password accordingly.

Security Password

Access: select "System Config > Setup > Security > Security > Password Management > Security Password".

Enables you to change and confirm the security password.

Old Password ← Security Password

Enters the currently used security password. The default password is '123456'.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

The security password is required when changing the status of the USB and LAN interface or other security settings.

Note: Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 15.10, "Contacting customer support"](#), on page 1368.

New Password ← Security Password

Enters the new security password.

The security password can contain decimal characters only.

Confirm Password ← Security Password

Confirms the new security password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

Change Password ← Security Password

Changes the password accordingly.

12.7.5 How to prevent unauthorized access

The default computer name and user password are *instrument*. The user password is the password required for VNC, FTP and SMB (samba) connections. If for example, the VNC service or FTP are enabled, anyone in the network who knows the computer name and user password of the instrument can access it.

The default security password is 123456. The security password is required when changing the status of the USB and LAN interfaces.

To prevent unauthorized access, use the following configurations exclusively or complementary:

- ["Changing the default user password of the instrument"](#) on page 811
- ["Changing the default security password"](#) on page 811
- ["Disabling the LAN interface"](#) on page 811
- ["Disabling LAN services"](#) on page 812
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 812
- ["Disabling the frequency and level indication in the status bar"](#) on page 812
- ["Deactivating the user interface"](#) on page 813

If security is a concern, see the document instrument security procedures for comprehensive description.

Changing the default user password of the instrument

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
 - ["Changing the default security password"](#) on page 811.
- a) Select "System Config > Setup > Security > Security > Password Management > User Password".
 - b) Enter the current password in the "Old Password" field.
 - c) Enter the new password in the "New Password" and "Confirm Password" fields.
 - d) Select "Change Password".

The user password is changed; the user name is displayed ("Security > Password Management > User Password > User Name").

Changing the default security password

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
 - ["Changing the default security password"](#) on page 811.
- a) Select "System Config > Setup > Security > Security > Password Management > Security Password".
 - b) Enter the current password in the "Old Password" field.
The default password is 123456.
 - c) Enter the new password in the "New Password" and "Confirm Password" fields.
 - d) Select "Change Password".

Disabling the LAN interface

1. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or certain services lock the remote access to the instrument.

The following services lock the remote access when disabled: "LAN", "SCPI over LAN", "VNC" and "HTTP".

If you have locked the access accidentally, you have the following options:

- Update the instrument firmware using ISO image (`<instrument>_<version-number>.iso`).
Note: A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data. Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.
- Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without losing user-specific settings and data.
 See <http://www.services.rohde-schwarz.com>.

2. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
3. Select "LAN > Off".

All LAN connections and hence all LAN services are disabled.

Disabling LAN services

1. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
2. Select, for example, "FTP > Off" or "VNC > Off".
3. Enter the [Security Password](#).
4. Select "Accept".

Activating SMB version 1.0/2.0 client and server

By default, support of SMB client and SMB server of the SMB protocol versions 1.0 and 2.0 is deactivated.

Activate support only, if needed:

1. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".
2. Select "SMB 1.0/2.0 Client > On" and "SMB 1.0/2.0 Server > On".
3. Enter the [Security Password](#).
4. Select "Accept".

Disabling the frequency and level indication in the status bar

These settings are useful to prevent unauthorized personnel from reading the display, when you remotely control the instrument from a different location.

1. Select "System Config > Setup > Security > General > Manual Operation".

2. Select "Annotation Frequency > Off" or "Annotation Amplitude > Off".
3. Enter the [Security Password](#).
4. Select "Accept".

Deactivating the user interface


1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "User Interface > Disabled".
3. Enter the [Security Password](#).
4. Select "Accept".

The screen shuts off and displays a padlock symbol  instead.

There are further possible configurations. For details, see ["User Interface"](#) on page 803.

Unlocking (reactivating) the user interface for manual operation

1. In manual operation:
 - a) On the instrument's keypad or external keyboard, press any key.
The instrument prompts you to enter the security password for unlocking.

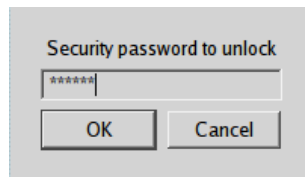

If you press the character of the first key, the input field accepts the character immediately.

- b) Delete the entry before inserting the password.
Enter the security password **123456**.
2. In remote control mode:
 - a) Send the command `SYST:ULOC ENABled` to release all locks at once.
 - b) Send the command `SYST:KLOC OFF` to unlock the keyboard and touchscreen.
 - c) Send the command `SYST:DLOC OFF` to release all locks.

Via remote control, there is no password required.

12.8 Undoing or restoring actions

"Undo" is a function that removes the effect of the last action on the instrument and reverts it to an older state. Conversely, "Redo" restores a previously undone action.

You can "Undo/Redo" actions according to two criteria:


- Step by step

Gradually undo/redo the actions in reverse order as previously performed. Depending on the available memory the "Undo/Redo" steps may restore all actions.

- Multiple steps at once
Select any specific action in the history list to "Undo/Redo" multiple actions in a single step.
Note: This mode requires a system restoration file on the instrument.

Access:

- Select "Setup > Settings > Undo/Redo".

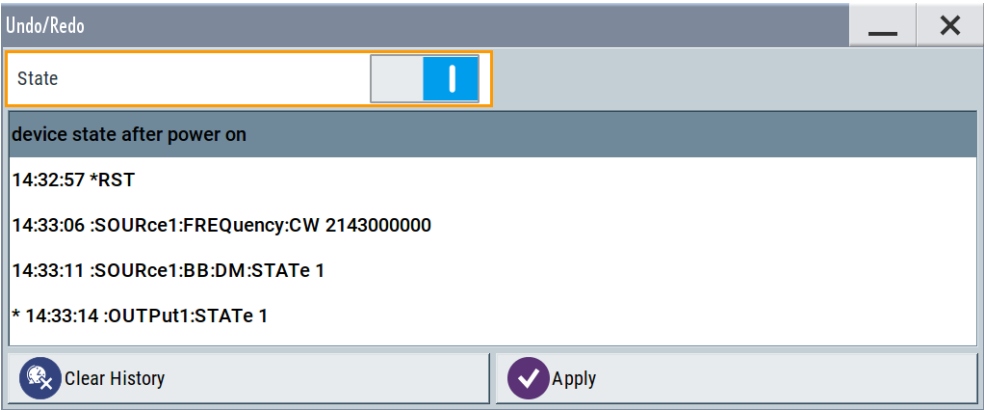

The dialog contains all functions for enabling the "Undo/Redo" functionality.

Settings:

State.....	814
History List.....	814
Clear History.....	814
Apply.....	814

State

Enables the recording of the performed actions.

History List

Lists the performed actions, provided "Undo/Redo" state is "On".

Clear History

Deletes the recorded list of the performed steps.

Apply

Performs the "Undo/Redo".

If you select a previously performed action of the list, all subsequent actions are undone. The list entries remain.

If you select a subsequently executed action, you can restore all the actions undone up to this state.

12.9 Shutting down and rebooting the instrument

On the front panel, the [On/Standby] key switches the instrument from the standby to the ready state or vice versa. In remote operation from a remote computer or in manual control, there is another possibility to shut down the instrument or to reboot the system.

Access:

- Select "System Config > Setup > Maintenance > Shut down".



Remote control commands:

- `:SYSTem:REBoot` on page 1337
- `:SYSTem:SHUTdown` on page 1337

12.10 Reference

This section provides reference information on where to find the descriptions of all functions accessed via the SETUP key. This reference information is provided in successive order, i.e sorted in the order the corresponding function appears in the "Setup" dialog.

This cross-reference information is useful, if you are familiar with the documentation of other Rohde & Schwarz signal generators, like the R&S SMU.

Table 12-6: Setup menu

Menu item	Content	Described in ...
General		
System Configuration	Introduces you to the various configuration options.	Chapter 4, "Signal routing and system configuration" , on page 108
Global Connectors	Explains the possible, assignable global connector interfaces.	Chapter 12.2, "Configuring local and global connectors" , on page 745
Reference Freq / LO Coupling	Describes the parameters for setting the internal reference frequency.	Chapter 8.8, "Reference oscillator" , on page 495
Internal Adjustments	Describes how you can calibrate your unit or individual components.	Chapter 17.3.4.1, "Internal adjustment settings" , on page 1380
Baseband Powers	Explains how you can retrieve the power and peak power of the generated signal at configurable acquisition points.	Chapter 9.2, "Querying information on the baseband power levels" , on page 651

Menu item	Content	Described in ...
Bit/Block Error Rate	Enables you to evaluate the bit error rate of a signal. It also includes a block error rate measurement to verify the feedback signal by calculating the CRC checksum.	See the corresponding user manual of the Bit Error Rate Tester option.
Remote Access		
GPIO	Enables you to set the GPIO address of the instrument.	Chapter 13.5.3, "GPIO address settings" , on page 845
Network	Contains all relevant information for the remote control of the R&S SMW.	Chapter 13.5.1, "Network settings" , on page 840
Visa Resource Strings	Shows the VISA resource strings provided for remote control via the various interfaces.	Chapter 13.5, "Remote access settings" , on page 838
Instrument Emulations	Enables you to emulate a remote control command set of another Rohde & Schwarz signal generator.	Chapter 13.5.5, "Instrument emulations settings" , on page 847
LXI Status	Indicates the LAN - LXI connection parameters.	Chapter 13.6, "LXI settings" , on page 861
Instrument Assembly		
Hardware Config	Provides an overview of all installed hardware assemblies.	Chapter 15.8, "Requesting instrument configuration and specifications" , on page 1361
Versions / Options	Contains a list of all installed software assemblies, and versions of the data sheet, specification.	Chapter 15.8, "Requesting instrument configuration and specifications" , on page 1361
Manage License Keys	Explains how to enable an option for the R&S SMW.	Chapter 12.5, "Managing licenses and license keys" , on page 773
Manage Extensions	Enables you to install firmware extensions.	Chapter 12.6, "Managing extensions" , on page 796
User Interface		
Graphics	Describes the different ways of graphical signal display, the content, and the application of the various graphs and the available signal sources.	Chapter 9.1, "Displaying base-band signal characteristics in real-time" , on page 627
Display	Sets the GUI language.	Chapter 12.1.1, "Display and keyboard settings" , on page 740
Start/Stop Display Update	Enables you to deactivate the update function of the GUI.	Chapter 12.1.3, "Display update settings" , on page 742
Appearance	Disable the display of snapshot dialogs in the taskbar.	Chapter 12.1.2, "Appearance settings" , on page 741
Keyboard	Sets the keyboard layout.	"USB Keyboard > Layout" on page 741

Menu item	Content	Described in ...
Define User Key	Describes how to assign a function to the user key.	Chapter 12.4.4, "How to assign actions to the [USER] key", on page 771
Hardcopy	Creates a screenshot from the current screen.	Chapter 11.10, "Creating screenshots of current settings", on page 732
Security		
Security	Contains security functions to protect the instrument against uncontrolled access.	Chapter 12.7.2, "Setting security parameters", on page 799
Protection	Provides different levels of protection for certain features specifically unlock. Provides incremental protection levels to unlock test functions, for example for service purposes.	Chapter 12.7.1, "Protection level settings", on page 798
Maintenance		Chapter 17.3, "Performing maintenance tasks", on page 1370
Shut down	Enables you to shut down or reboot the instrument without using the [On/Standby] front panel key.	Chapter 12.9, "Shutting down and rebooting the instrument", on page 815
Date / Time	Contains the date and time settings of the operating system.	Chapter 17.3.1, "Date and time", on page 1371
Selftest	Enables you to test the baseband functions and connections. Enhanced settings for testing the baseband connections, and testing the IQ signal source are provided when protection level 1 is unlocked.	Chapter 17.3.5.1, "Selftest connections settings", on page 1385 Chapter 17.3.5.2, "Selftest baseband settings", on page 1386 Chapter 17.3.5.3, "Selftest test generator settings (DAC)", on page 1387
Check Front Panel	Enables you to test the function of the front panel keys.	Chapter 17.3.2, "Check front panel", on page 1373
PCI-FPGA Update	Provides updating the PCI-FPGA.	Chapter 17.3.6, "FPGA/uC update settings", on page 1388
Create R&S Support Information	Creates a support file with service-related information.	Chapter 15.9, "Collecting information for technical support", on page 1366
Settings		
Save/Recall	Contains the main save and recall function for managing of the instrument settings.	Chapter 11.4, "Saving and recalling instrument settings", on page 709
Factory Preset	Resets the instrument to its factory settings.	Chapter 11.2, "Restoring the (default) instrument configuration", on page 702
Undo/Redo	Restores previously performed actions, or restores an undone action.	Chapter 12.8, "Undoing or restoring actions", on page 813

Menu item	Content	Described in ...
Help		
Contents Index	Accesses the embedded help system.	Chapter 3.5.6, "Getting information and help" , on page 102
Export Help To User Path	Copies the online help system to the instrument's user directory/ <code>var/user/</code> .	
Tutorials	Accesses the embedded tutorials.	Chapter 3.5.6.1, "Using the tutorials" , on page 104

13 Network operation and remote control

As an alternative to the interactive operation directly at the instrument, you can operate the R&S SMW also from a remote location.

The various interfaces provide flexible access to the instrument, such as *remote control*, *remote operation* or *remote file access*. These remote access modes are fundamentally different, although they are often considered interchangeable, as described in [Overview of remote access modes](#).

Figure 13-1 shows the possibilities of the physical connection (interfaces) for remote access.



The following descriptions provide information required for operating the R&S SMW remotely. The information applies to all applications and operating modes supported by the instrument. Definitions specified in the SCPI standard are not provided.

For basic knowledge on remote control operation and additional information, see the following documents, available on the Rohde & Schwarz website:

- [Remote control via SCPI](#)
- [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#)
- [1MA208: Fast Remote Instrument Control with HiSLIP](#)

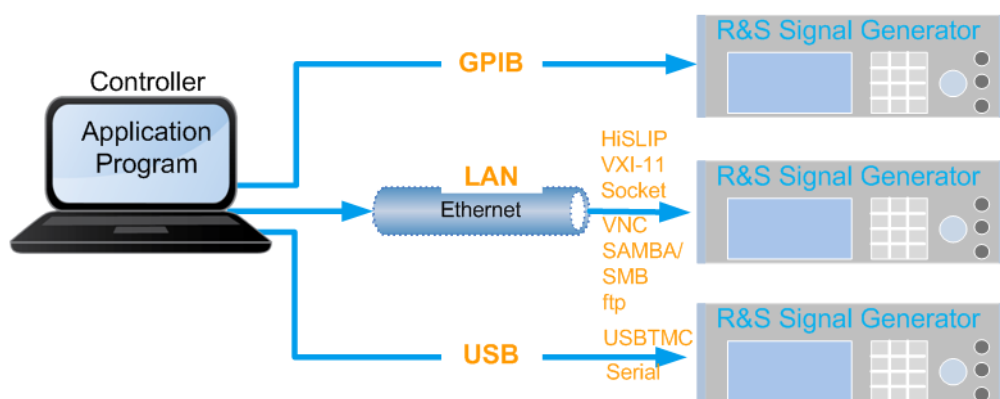


Figure 13-1: Supported remote connections

• Overview of remote access modes	820
• Remote control interfaces and protocols	821
• Remote control programs and libraries	826
• Status reporting system	829
• Remote access settings	838
• LXI settings	861
• To configure the instrument for remote access	869
• To establish a remote control session over LAN	874
• To establish a remote control session over GPIB	883
• To establish a remote control session over USB	884
• To trace messages with the LXI web browser interface	884

• To return to manual operation.....	886
• To automate tasks with remote command scripts.....	886
• To operate the instrument using VNC.....	898
• References.....	904

13.1 Overview of remote access modes

This section outlines the possible access modes and their major characteristics.

Remote control (SCPI)

- A remote PC controls the instrument, usually via VISA (Virtual Instrument Software Architecture) interfaces.
- Remote control disables the manual operation of the instrument; you can set different lock states.
- The GUI is not visible.
- Remote control commands (SCPI) perform the settings, either individually or in sequences (SCPI programs).
- Using SCPI programs is faster than the manual operation, since they automate repeating applications.

Remote operation (VNC)

- A remote device accesses the instrument via the common platform technology VNC (Virtual Network Computing).
- The protocol allows simultaneous operation from several remote devices and the instrument nevertheless remains locally operable.
- The GUI is visible.
- To perform the settings, you can operate the instrument as with the manual control.
- During remote operation via VNC, the direct control of the instrument is not disabled.
You can control the instrument from the front panel and via the remote computer alternately.
- Clients supporting remote operation depend on the used remote device, see [Table 13-1](#).
- How to: see [Chapter 13.14, "To operate the instrument using VNC"](#), on page 898.

Table 13-1: Supported VNC operation modes

Remote device	VNC client	Requirements	Characteristics
Desktop (Windows, Linux, Mac™OS)	<ul style="list-style-type: none"> • Ultr@VNC • Other dedicated client software 	<i>Ultr@VNC or Client Software</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> • Any web browser 	<i>Java Runtime</i> must be installed and activated in the browser settings.	Fast and convenient - only the instrument address required. Java runtime is sometimes considered as security concern.

Remote device	VNC client	Requirements	Characteristics
	<ul style="list-style-type: none"> Web browser with HTML5 	Web sockets must be supported.	Slower than the other modes. No additional installation or activation required. No security concern.
Smart device (Tablet/ smartphone)	<ul style="list-style-type: none"> Dedicated client App 	App must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> Web browser with HTML5 	Web sockets must be supported.	Support of QR code scanning Slower than a dedicated App.

Remote file access (FTP, SAMBA/SMB)

- A remote client accesses the instrument's file system, using the protocols FTP (file transfer protocol) and SAMBA/SMB (server message block).
- The protocols enable you to transfer files from or to the instrument and to get direct access to its file sharing directory `share`.

How to:

[Chapter 11.9, "How to transfer files from and to the instrument"](#), on page 726.

["Activating SMB version 1.0/2.0 client and server"](#) on page 812

13.2 Remote control interfaces and protocols

The instrument supports various interfaces for remote control. [Table 13-2](#) gives an overview on the connectivity:

Table 13-2: Remote control interfaces and protocols

Interface	Protocols, VISA ¹⁾ address string and library	Remarks
Local area network (LAN)	<ul style="list-style-type: none"> HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCP/IP::host address::hislip0[::INSTR] VISA VXI-11 TCP/IP::host address[:: LAN device name][::INSTR] VISA Socket communication (Raw Ethernet, simple Telnet) TCP/IP::host address[:: LAN device name]::<port>::SOCKET VISA or socket controller 	The LAN connector is at the rear panel of the instrument. The interface is based on TCP/IP, see Chapter 13.2.1, "LAN interface" , on page 822 for details on the address information.
USB	<ul style="list-style-type: none"> USBTMC USB::<vendor ID>::<product ID>:: <serial number>[::INSTR] VISA 	The USB Device connector is at the rear panel of the instrument. For a description of the interface, see Chapter 13.2.2, "USB interface" , on page 824

Interface	Protocols, VISA ^{*)} address string and library	Remarks
GPIB (IEC/IEEE Bus Interface)	<ul style="list-style-type: none"> VISA^{*)} address string: GPIB::<address>[::INSTR] (no secondary address) VISA (optional) 	<p>The optional GPIB bus interface according to standard IEC 625.1/IEEE 488.1 is at the rear panel of the instrument.</p> <p>For a description of the interface, see Chapter 13.2.3, "GPIB interface (IEC/IEEE bus interface)", on page 825.</p>
<p>^{*)} VISA (Virtual Instrument Software Architecture) is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control over LAN (when using VXI-11 or HiSLIP protocol), USB and serial interface. When using socket communication or the GPIB interface, VISA installation is optional. For basic information, see Remote control via SCPI.</p>		



<http://www.rohde-schwarz.com/rsvisa> provides the standardized I/O software library R&S VISA for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to: [Chapter 13.8, "To establish a remote control session over LAN"](#), on page 874 describes how to configure the remote control interfaces.

- [LAN interface](#)..... 822
- [USB interface](#)..... 824
- [GPIB interface \(IEC/IEEE bus interface\)](#)..... 825
- [LXI browser interface](#)..... 826

13.2.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols.

For remote control, the PC and the instrument must be connected over the LAN interfaces to a common network with TCP/IP network protocol. The instruments are connected using a commercial RJ45 cable (shielded or unshielded twisted-pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and, if necessary, the VISA program library must be installed on the controller.



Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by the resource string.

13.2.1.1 VISA resource strings

The VISA resource string is required to establish a communication session between the controller and the instrument in the LAN. The resource string is a unique identifier, composed of the specific IP address of the instrument and some network and VISA-specific keywords.

TCPIP::**<host address>**::<LAN device name>>::INSTR]

TCPIP = designates the network protocol
 host address = designates the IP address or hostname of the instrument
 [::LAN device name] = defines the protocol and the instance number of a subinstrument
 [::INSTR] = indicates the instrument resource class (optional)

The **IP address** (host address/computer name) is used by the programs to identify and control the instrument. It is automatically assigned by the DHCP server the first time the device is registered in the network. Optionally, you can also assign its **LAN device name**.

If assigned, the IP address is displayed in the block diagram. You can adjust it manually with the parameter the "System Config > Remote Access > Network" > [IP Address Enabling a locked user interface for manual operation](#).

The following section lists the characteristics of the VISA resource strings for the corresponding interface protocols. The emphasized characters determine the protocol.



For description of the interface protocols, control commands and messages, refer to [Remote control via SCPI](#).

HiSLIP

TCPIP::**<host address>**::hislip0>::INSTR]

hislip0 = HiSLIP device name, designates that the interface protocol HiSLIP is used (mandatory)

hislip0 is composed of [::**HiSLIP** device name[,HiSLIP port]] and must be assigned.

Example:

TCPIP::**192.1.2.3**::hislip0

VXI-11

TCPIP::**<host address>**::inst0>::INSTR]

[::inst0] = LAN device name, indicates that the VXI-11 protocol is used (optional)

inst0 currently selects the VXI-11 protocol by default and can be omitted.

Example:

TCPIP::**192.1.2.3**::INSTR

Socket communication

TCPIP::**<host address>**::<port>::SOCKET

port = determines the used port number
 SOCKET = indicates the raw network socket resource class

Socket communication requires the specification of the port (commonly referred to as port number) and of "SOCKET" to complete the resource string.

Basically, instruments from Rohde & Schwarz use port number 5025 for socket communication.

Example:

TCPIP::192.1.2.3::5025::SOCKET

13.2.2 USB interface

For remote control using USB, the controller PC and the instrument must be connected over the USB type B interface. Software for instrument control and the VISA program library must be installed on the controller.

The serial interface "RS232" enables you to connect the instrument over serial interface. You can connect to the interface by using the external USB/serial-adapter R&S TS1-USB (see recommended extras in the data sheet) and a serial crossover (null modem) cable.

VISA detects and configures the Rohde & Schwarz instrument automatically when the USB connection is established. You do not have to install a separate driver.

USBTMC (USB Test & Measurement Class Specification) is a protocol that is built on top of USB for communication with USB devices. It defines class code information of the instrument, that identifies its functionality to load the respective device driver. Using VISA library, the protocol supports service request, trigger, and other specific operations.

13.2.2.1 USB resource string

The resource string represents an addressing scheme that is used to establish a communication session with the instrument. It is based on the instrument address and some instrument- and vendor-specific information.

The USB resource string syntax is as follows:

USB::<vendor ID>::<product ID>::<serial number>[:INSTR]

USB = denotes the used interface
 <vendor ID> = is the manufacturer ID for Rohde & Schwarz
 <product ID> = is the product identification of the instrument
 <serial number> = is the individual serial number at the rear of the instrument
 [:INSTR] = indicates the instrument resource class (optional)

To set the USB resource string, see [Remote access settings](#).

Example:

```
USB::0x0AAD::0x0092::100001::INSTR
```

0x0AAD is the vendor ID for Rohde & Schwarz.

0x0092 is the product ID for the R&S SMW

100001 is the serial number of the particular instrument.

13.2.2.2 RS232 resource string

The RS232 resource string represents the addressing scheme for a device connected to the serial interface of the instrument.

The USB resource string syntax is as follows:

```
ASRL<port number>[:INSTR]
```

ASRL is the name of the serial interface

<port number> is the number of the serial interface

Example:

```
ASRL1::INSTR
```

13.2.3 GPIB interface (IEC/IEEE bus interface)

To control the R&S SMW over the GPIB bus, the instrument and the controller PC must be connected with a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the used programming language must be installed on the controller.



For description of the characteristics, control commands and messages of the GPIB interface, refer to [Remote control via SCPI](#).

GPIB address

The controller PC addresses the instrument with the GPIB bus channel, see [Chapter 13.5.3, "GPIB address settings"](#), on page 845. GPIB provides channel addresses from 0 to 30.

The GPIB resource string syntax is as follows:

```
GPIB::<channel>[:INSTR]
```

GPIB = denotes the used interface

<channel address> = the used channel

[:INSTR] = indicates the instrument resource class (optional)

Note: If the VISA implementation supports the GPIB interface, you can optionally define the VISA Instrument Control Resource (INSTR). It is used to define the basic operations and attributes for a device, such as reading, writing, or triggering.

Example:

```
GPIB::28::INSTR
```

28 is the selected GPIB bus channel

13.2.4 LXI browser interface

The LXI browser interface allows easy configuration of the LAN and remote control of the R&S SMW without additional installation requirements. The instrument's LXI browser interface works correctly with all W3C compliant browsers.

See [Chapter 13.15.1, "LXI functionality"](#), on page 904 for more about LXI.

The LAN settings are configured using the instrument's LXI browser interface described in [Chapter 13.6.2.1, "LAN configuration"](#), on page 864.

13.3 Remote control programs and libraries

This section shows how the remote-control programs access the instrument, and the libraries they require for the corresponding interface protocols.

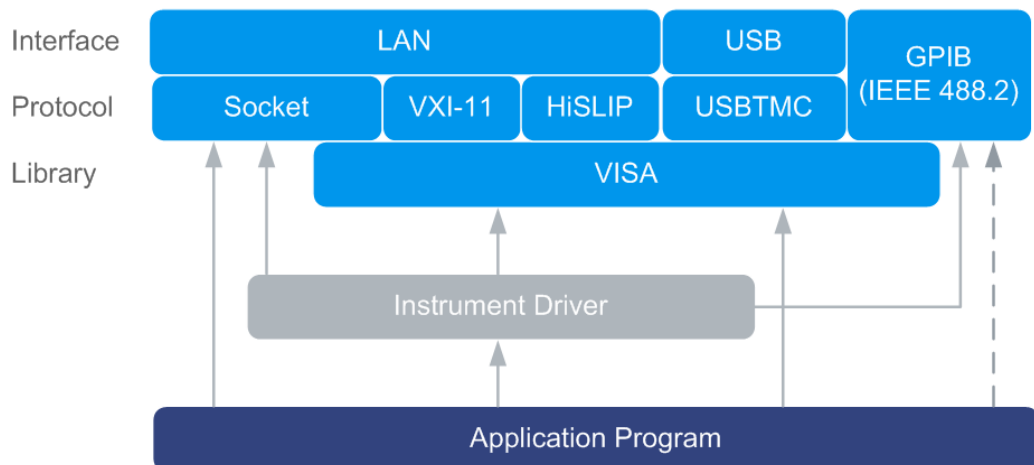


Figure 13-2: Overview of remote control interfaces, protocols and libraries

Possible setups and access functions

The following examples give an overview of dependencies between the available libraries, the possible interfaces and protocols, and whether an instrument driver is provided. For detailed information, see the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).



Hostname syntax changed

The remote control program examples in this section address an instrument using its hostname. It affects all commands using ..., "TCPIP:<hostname>::...", (...).

From FW version 3.20.200.xx, the syntax of the hostname changed to SMW200A-<serial number>, in contrast to the former syntax rssmw200a<serial number>.

Example: Remote control (application) program using VISA

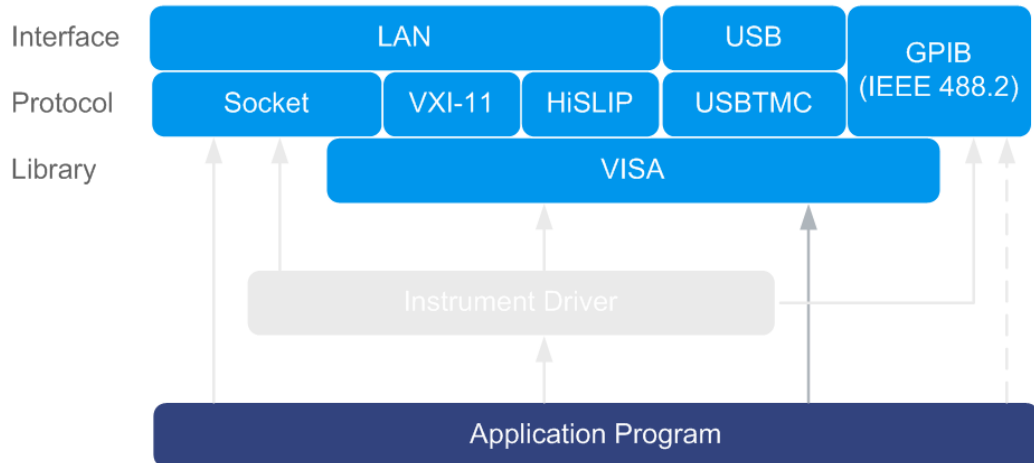
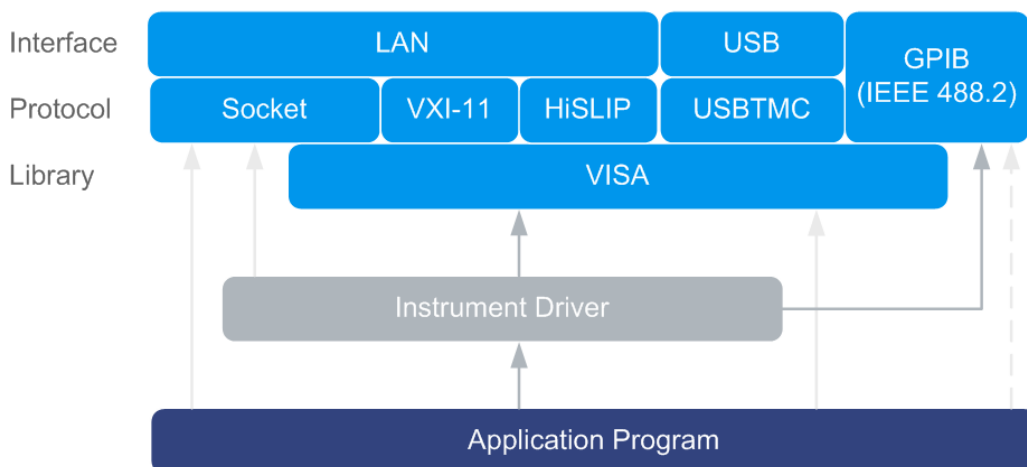


Figure 13-3: Application program using VISA

Protocol	Remote control program
Socket	<pre>viOpen (... , "TCPIP:SMW200A-102030::5025::SOCKET", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
VXI-11	<pre>viOpen (... , "TCPIP:SMW200A-102030::inst0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
HiSLIP	<pre>viOpen (... , "TCPIP:SMW200A-102030::hislip0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
USBTMC	<pre>viOpen (... , "USB::0x0AAD::0x0092::100001::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
GPIB	<pre>viOpen (... , "GPIB::28::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>

Example: Remote control program using instrument driver (VISA available)**Figure 13-4: Application using instrument driver (VISA available)**

Protocol	Remote control program
Socket	<pre>rssmw_init ("TCPIP:SMW200A-102030::5025::SOCKET", ...) rssmw_SetFrequency (... , 2e9)</pre>
VXI-11	<pre>rssmw_init ("TCPIP:SMW200A-102030::inst0::INSTR", ...) rssmw_SetFrequency (... , 2e9)</pre>
HiSLIP	<pre>rssmw_init ("TCPIP:SMW200A-102030::hislip0::INSTR", ...) rssmw_SetFrequency (... , 2e9)</pre>
USBTMC	<pre>rssmw_init ("USB::0x0AAD::0x0092::100001::INSTR", ...) rssmw_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmw_init ("GPIB::28::INSTR", ...) rssmw_SetFrequency (... , 2e9)</pre>

Example: Remote control program using instrument driver (VISA not available)

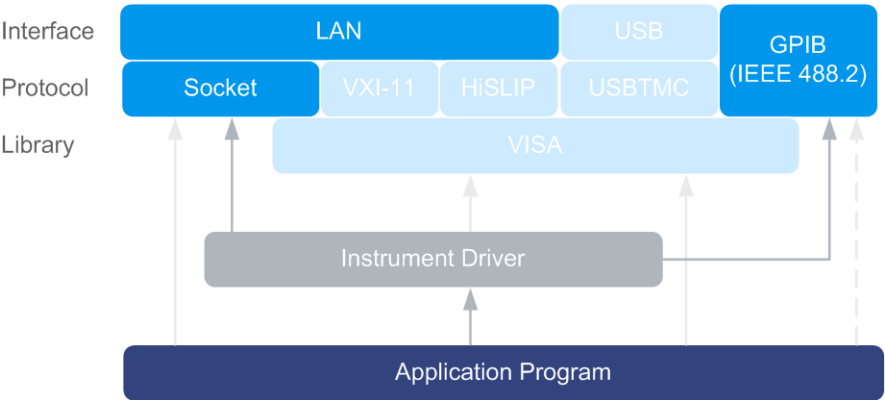


Figure 13-5: Remote control program using instrument driver (VISA not available)

Protocol	Remote control program
Socket	<code>rssmw_init ("TCPIP:SMW200A-102030::5025::SOCKET", ...)</code> <code>rssmw_SetFrequency (... , 2e9)</code>
GPIB	<code>rssmw_init ("GPIB::28::INSTR", ...)</code> <code>rssmw_SetFrequency (... , 2e9)</code>

13.4 Status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue.

You can query both with the commands of the [STATus subsystem](#).

13.4.1 Hierarchy of the status registers

The [Figure 13-6](#) shows the hierarchical structure of information in the status registers (ascending from left to right).

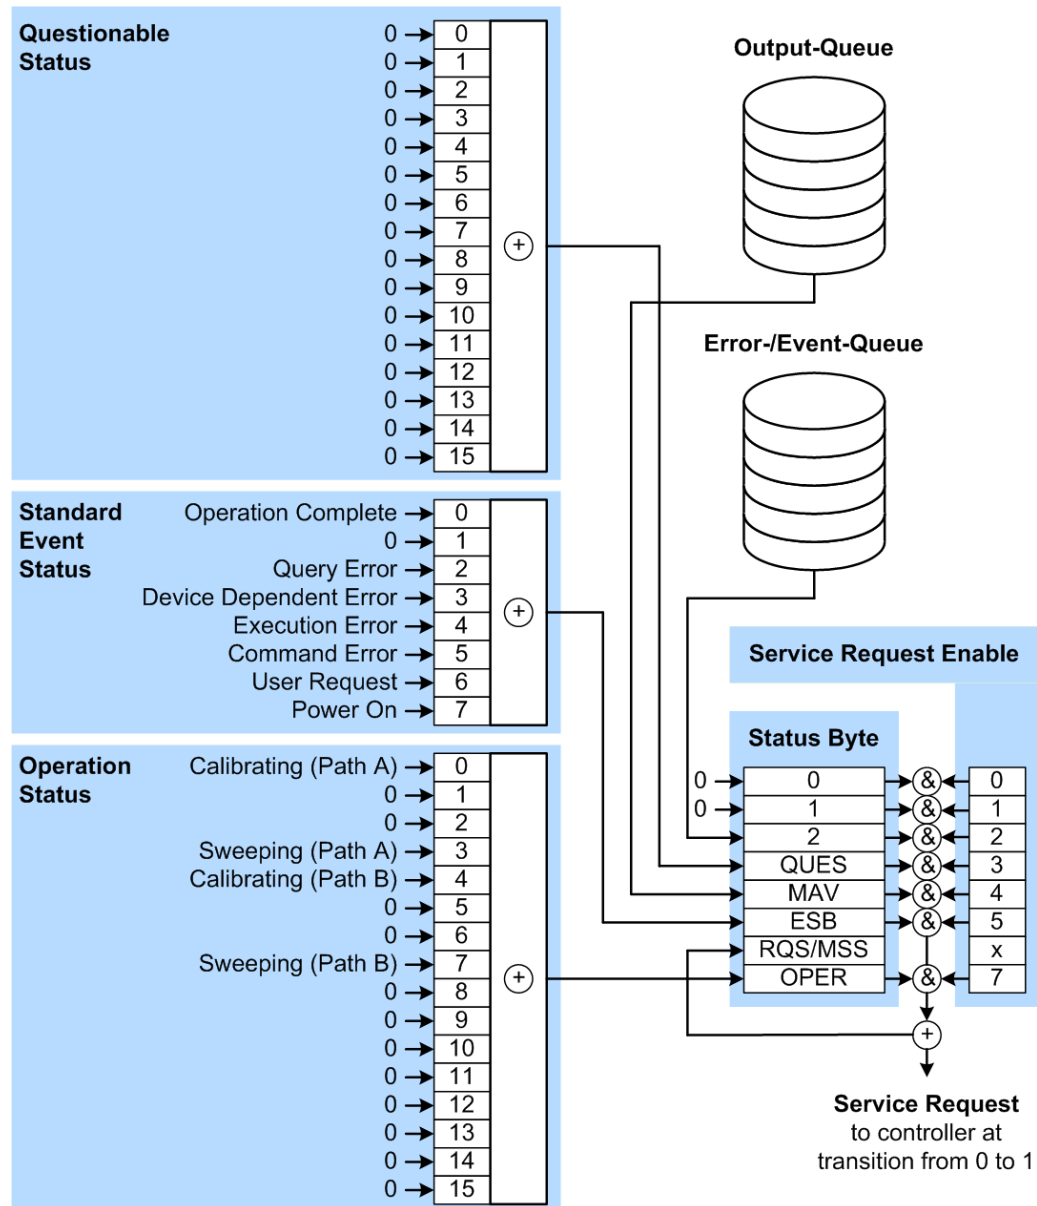


Figure 13-6: Graphical overview of the status registers hierarchy

OPER = Operation Status Summary Bit
 RQS/MSS = Service Request Generation
 ESB = Standard Event Status Summary Bit
 MAV = Message Available in Output Queue
 QUES = Questionable Status Summary Bit
 2 = Error- /Event-Queue
 1, 0 = not used

Note: This legend explains the abbreviations to the Status Byte Register.

The R&S SMW uses the following status registers:

- **Status Byte (STB)** and **Service Request Enable (SRE)**, see [Chapter 13.4.3, "Status byte \(STB\) and service request enable register \(SRE\)"](#), on page 833.

- **Standard Event Status**, i.e. the Event status Register (ESR) and the Event Status Enable (ESE), see [Chapter 13.4.4, "Event status register \(ESR\) and event status enable register \(ESE\)"](#), on page 834.
- **Questionable Status and Operation Status**, the (SCPI status registers, see [Chapter 13.4.2, "Structure of a SCPI status register"](#), on page 831, [Chapter 13.4.5, "Questionable status register \(STATus:QUESTionable\)"](#), on page 835 and [Chapter 13.4.6, "Operation status register \(STATus:OPERation\)"](#), on page 835.
- **Output-Queue**
The output queue contains the messages that the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.
- **Error-/Event-Queue**
The error-/event-queue contains all errors and events that have occurred in the past. When reading the queue, the instrument starts with the first occurred error/event.

All status registers have the same internal structure.



SRE, ESE

The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR command.

13.4.2 Structure of a SCPI status register

Each SCPI status register consists of five parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.

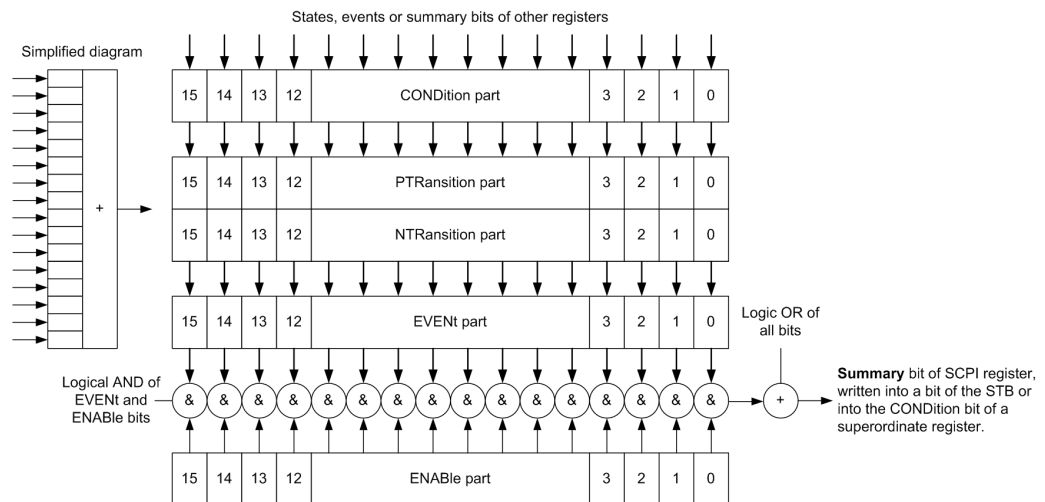


Figure 13-7: The status-register model

Description of the five status register parts

The five parts of a SCPI status register have different properties and functions:

- **CONDition**

The **CONDition** part is written directly by the hardware or it mirrors the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

- **PTRansition / NTRansition**

The two transition register parts define which state transition of the **CONDition** part (none, 0 to 1, 1 to 0 or both) is stored in the **EVENT** part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the **CONDition** part is changed from 0 to 1, the associated **PTR** bit decides whether the **EVENT** bit is set to 1.

- **PTR** bit =1: the **EVENT** bit is set.
- **PTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the **CONDition** part is changed from 1 to 0, the associated **NTR** bit decides whether the **EVENT** bit is set to 1.

- **NTR** bit =1: the **EVENT** bit is set.
- **NTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The **EVENT** part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be

read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The **ENABLE** part determines whether the associated **EVENT** bit contributes to the sum bit (see below). Each bit of the **EVENT** part is "ANDed" with the associated **ENABLE** bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

ENABLE bit = 0: the associated **EVENT** bit does not contribute to the sum bit

ENABLE bit = 1: if the associated **EVENT** bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the **EVENT** and **ENABLE** part for each register. The result is then entered into a bit of the **CONDition** part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

13.4.3 Status byte (STB) and service request enable register (SRE)

The **STatus Byte** (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB is read using the command ***STB?** or a serial poll.

The **STatus Byte** (STB) is linked to the **Service Request Enable** (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command ***SRE** and read using the command ***SRE?**.

Table 13-3: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTionable status register summary bit The bit is set if an EVENT bit is set in the QUESTionable status register and the associated ENABLE bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the STatus:QUESTionable status register.

Bit No.	Meaning
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STaTus:OPERation status register summary bit The bit is set if an EVEnt bit is set in the OPERation status register and the associated ENABle bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the STaTus:OPERation status register.

13.4.4 Event status register (ESR) and event status enable register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVEnt part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the ENABle part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set. The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

Table 13-4: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.

Bit No.	Meaning
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User Request This bit is set when the instrument is switched over to manual control.
7	Power On (supply voltage on) This bit is set on switching on the instrument.

13.4.5 Questionable status register (STATus:QUESTionable)

This register contains information on questionable instrument states. Such states can occur when the instrument is not operated in compliance with its specifications.

To read the register, use the query commands `STAT:QUEST:COND?` or `STAT:QUEST[:EVEN]?`.

Table 13-5: Meaning of the bits used in the questionable status register

Bit No.	Meaning
0–15	Not used

13.4.6 Operation status register (STATus:OPERation)

This condition part contains information on the actions that the instrument currently executes. The event part contains information on the actions that the instrument executed since the last readout of the register.

To read the register, use the query commands `STAT:OPER:COND?` or `STAT:OPER[:EVEN]?`.

Table 13-6: Meaning of the bits used in the operation status register

Bit No.	Meaning
0	Calibrating
4	The bit is set during the calibration phase.
1–2	Not used
5–6	
3	Sweeping
7	This bit is set during a sweep in automatic or single mode.
8–15	Not used

13.4.7 Application of the status reporting system

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. For correct operation, the controller receives and evaluates the information of all devices. The status reporting system uses the following standard methods:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller to find out who sent an SRQ and why
- Query of a **specific instrument status** by commands
- Query of the **error queue**

13.4.7.1 Service request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. An SRQ is always initiated if one or several of bits 2, 4 or 5 of the status byte are set and enabled in the SRE. Each of these bits combines the information of the error queue or the output buffer. To use the possibilities of the service request effectively, set all bits to "1" in the enable registers SRE and ESE.

Example:

Use command `*OPC` to generate an SRQ.

`*ESE 1` - set bit 0 of ESE (Operation Complete)

`*SRE 32` - set bit 5 of SRE (ESB).

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program sets the instrument and initiates a service request if malfunctions occur. The program reacts appropriately to the service request.

13.4.7.2 Serial poll

In a serial poll, just as with command `*STB`, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

13.4.7.3 Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.
- The commands of the `STATus` system query the SCPI registers (`STATus:QUESTionable...`)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

13.4.7.4 Error queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTEM:ERROR[:NEXT]?`. Each call of `SYSTEM:ERROR[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

13.4.8 Reset values of the status reporting system

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except for `*RST` and `SYSTEM:PRESet` affect the functional instrument settings. In particular, `DCL` does not change the instrument settings.

Table 13-7: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTEM:PRESet	STATus:PRESet	*CLS
Effect	0	1				
Clear STB, ESR	-	Yes	-	-	-	Yes
Clear SRE, ESE	-	Yes	-	-	-	-
Clear PPE	-	Yes	-	-	-	-
Clear error queue	Yes	Yes	-	-	-	Yes

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTem: PRESet	STATus: PRESet	*CLS
Effect	0	1				
Clear output buffer	Yes	Yes	Yes	1)	1)	1)
Clear command processing and input buffer	Yes	Yes	Yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						

13.5 Remote access settings

This section outlines the settings required for accessing and configuring the provided remote control interfaces. It includes network settings, access addresses, emulation settings for using the command sets of other generators, and the access with smart devices.

About instrument emulations

You can remotely control the R&S SMW using the command set of another signal generator. With this function you can, for example, replace a signal generator with an R&S SMW in an automated test setup, without adjusting the command scripts used.



The R&S SMW also covers command sets of Rohde & Schwarz signal generators. To achieve optimal compatibility when replacing an instrument, we recommend that you select the emulation command set for the corresponding signal generator.

You find the remote control command sets supported by the R&S SMW in a selection list.

For more information, see the application note:

[1GP110: Remote Emulation with the R&S SMW200A Vector Signal Generator.](#)

The selected instrument also defines the identification string that is retrieved with query `*IDN?`. If necessary, use the parameter `Mode` and `IDN String` to change this string.

As any other parameter, the remote control command set can also be changed remotely by the command `:SYSTem:LANGuage`.

While working in an emulation mode, the R&S SMW specific command set is disabled and the SCPI command `:SYSTem:LANGuage` is discarded.

To return to the SCPI command set of the R&S SMW, use the appropriate command of the selected command set.

If for example an HP generator is emulated, the HP command `EX` returns to the instrument-specific GPIB command set.

About health and utilization monitoring system (HUMS)

The R&S SMW comes with a health and utilization monitoring system (HUMS) providing information about the R&S SMW. Aim is to increase the overall utilization, to avoid downtime and to increase the overall security level of a fleet of instruments.

HUMS provides, for example, information about:

- Instrument identification, hardware components, software packages, licenses
- Usage of remote control, usage via keyboard / mouse, usage of test applications
- Hardware utilization and status, including S.M.A.R.T. data of the system drive
- User-defined static information, for example, an inventory code

Interfaces and protocols

The HUMS installation on the R&S SMW includes an SNMP agent and a REST service with HTTP endpoints. So you can access the health and usage information via LAN, using the SNMP protocol or the REST protocol. Accessing the data does not interfere with remote control via SCPI commands or with measurement execution.

Reference information for both protocols is available on the R&S SMW at the address <http://<instrument>/api/hums/v1/documents?name=<interface>>.

For *<instrument>*, enter the hostname (e.g. *SMW200A-102030*) or the IP address (e.g. *10.121.0.34*) of your instrument, as for access to the GUI.

For *<interface>* = *snmp*, you get a `.zip` file containing the MIB files for SNMP. For *<interface>* = *rest*, you get a web page with the OpenAPI specification of the REST API.

Address example: <http://SMW200A-102030/api/hums/v1/documents?name=snmp>.

The following table lists the REST endpoints and the SNMP MIB file names.

REST endpoint <i>/api/hums/v1/...</i>	SNMP MIB	Description	Typical data
documents	---	developer information	SNMP MIB files, swagger specification of HUMS REST endpoints
greetings	RS-GREETINGS-MIB	identity information	manufacturer, model, serial number, version
equipment/bios	RS-BIOS-INFO-MIB	BIOS information	BIOS manufacturer, version and release date
date-time	RS-TIME-DATE-MIB	time and date information	UTC and local time, timezone, dst (daylight savings time)
device-history	RS-DEVICE-HISTORY-MIB	history events	instrument-specific event information and notifications
device-tags	RS-DEVICE-TAGS-MIB	customer information	user-definable key information, associated with the instrument, e.g. asset number, owner, location
equipment	RS-EQUIPMENT-MIB	footprint information	hardware and software configuration, licenses

REST endpoint /api/hums/v1/...	SNMP MIB	Description	Typical data
hums-info	RS-HUMS-INFO-MIB	basic information on the HUMS service	HUMS version, counter of SNMP and REST requests, amount of collected data, HUMS database size
storage	RS-STORAGE-MIB	S.M.A.R.T. data of drive	system drive temperature, drive health
system-info	RS-SYSTEM-INFO-MIB	a system overview	OS and BIOS version, IP address, locale
system-status	RS-SYSTEM-STATUS-MIB	system status information	global system status, static notifications
utilization	RS-UTILIZATION-MIB	utilization information	instrument activity, e.g., power on time, RF on time, option utilization, remote interface traffic

For detailed information about HUMS and its applications, refer to:

- The R&S®HUMS Health and Utilization Monitoring Service user manual, available on the Rohde & Schwarz website.
- The application note [GFM336: Instrument Health and Utilization Monitoring](#)

13.5.1 Network settings

Access:

- Select "System Config" > "Remote Access" > "Network".

In the "Network" dialog, you can configure the settings of the general network environment and specific identification parameters of the instrument in the network.

The remote commands required to configure the network remotely are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

Settings:

Network Status.....	841
Restart Network.....	841
Hostname.....	841
Workgroup.....	842
Address Mode.....	842
IP Address.....	842
Subnet Mask.....	842
Default Gateway.....	843
DNS Suffix.....	843
DNS Server.....	843
MAC Address.....	843

Network Status

Indicates that the instrument is connected to the network.

Remote command:

`:SYSTem:COMMunicate:NETWork:STATus?` on page 1321

Restart Network

Terminates the network connection of the instrument and sets it up again. You can use this function to fix network problems.

Note: This function restarts only the connection of the instrument to the network. It does not impact the network itself.

Remote command:

`:SYSTem:COMMunicate:NETWork:REStart` on page 1321

Hostname

Displays the hostname.

Each instrument is delivered with an assigned hostname, a logical name which can be used instead of the IP address. With the default network settings, the IP address is allocated by the DHCP server. This address can change each time the instrument is reconnected. Unlike the IP address, the hostname name does not change.

Note:

This function is password-protected. Unlock the protection level 1 to access it.

- We recommend that you do not change the default network settings or the hostname to avoid problems with the network connection.
If you change the hostname, be sure to use a unique name.
- Note also, that from **FW version 3.20.200.xxx and later** the syntax of the hostname (computer name) has changed, according to recent conventions of Rohde & Schwarz.

The modification affects:

- Instruments supplied with this FW
- Performed factory preset on an instrument with updated FW

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTName` on page 1321

Workgroup

Sets the individual windows workgroup name of the R&S SMW. This parameter is required in case the instrument is integrated in a windows network.

This function is password-protected. Unlock the protection level 1 to access it.

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup` on page 1322

Address Mode

Selects the mode for assigning the IP address.

How to: [Chapter 13.7.2.1, "How to assign the IP address"](#), on page 870

"Auto (DHCP)"

Assigns the IP address automatically, provided the network supports DHCP (Dynamic Host Configuration Protocol).

"Static"

Enables you to assign the IP address manually.

Remote command:

`:SYSTem:COMMunicate:NETWork:IPAdDress:MODE` on page 1320

IP Address

Displays the IP address of the instrument in the network.

By default, the R&S SMW is configured to use dynamic TCP/IP configuration and to obtain the address information automatically. Setting [Address Mode](#) > "AUTO (DHCP)" denotes that the DHCP server is available. The instrument displays the assigned IP address read-only.

If the network does not support DHCP or there is no DHCP server available, the instrument tries to obtain the IP address using [Zeroconf \(Avahi\)](#) protocol. This feature enables the instrument to self-configure an IP address and subnet mask. Zeroconf (Avahi) IP addresses start with the number blocks 169.254.*.*, with the subnet mask of 255.255.

Note: An IP address that is assigned with the Zeroconf protocol although the network requires an IP address assigned from the DHCP server can cause network connection failures.

See [Chapter 15.5, "Resolving network connection failures"](#), on page 1359.

If both services fail to connect, you can configure the address manually.

How to: ["To assign the IP address manually on the instrument"](#) on page 870

Remote command:

`:SYSTem:COMMunicate:NETWork:IPAdDress` on page 1320

Subnet Mask

Displays the bit group of the subnet in the host identifier.

The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available [Address Mode A AUTO \(DHCP\)](#), the setting is read-only. The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address).

To assign the subnet mask manually, select [Address Mode](#) > [Static](#).

Note: When assigning the subnet mask manually, make sure that the address matches with the subnet mask of the controlling host interface.

How to: ["To assign the IP address manually on the instrument"](#) on page 870.

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAddress]:SUBNet:MASK` on page 1322

Default Gateway

Displays the gateway address.

This address identifies the router on the same network as the instrument that is used to forward traffic to destinations beyond the local network.

To assign the gateway address manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAddress]:GATeway` on page 1322

DNS Suffix

Displays the primary DNS (Domain Name System) suffix, that means the DNS name without the hostname part.

The DNS system uses the suffix for registration and name resolution for unique identification of the instrument in the entire network.

To assign the DNS suffix manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain` on page 1321

DNS Server

Determines the preferred server for name resolution. The DNS server contains the underlying numerical values that are required for name resolution of the hostname as part of the IP address.

To select the DNS server manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAddress]:DNS` on page 1322

MAC Address

Indicates the MAC (Media Access Control) address, a unique identifier of the network adapter in the R&S SMW.


Remote command:

`:SYSTem:COMMunicate:NETWork:MACaddress` on page 1320

13.5.2 VISA resource strings

Access:

- Select "System Config > Remote Access > Visa Resource Strings".

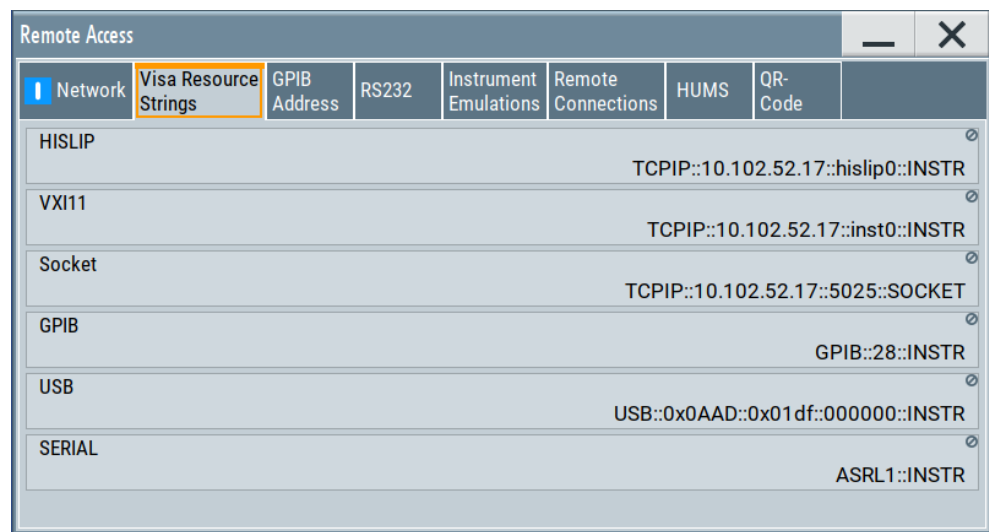

The "Visa Resource String" dialog displays the VISA resource strings provided for remote control over the different interfaces.

The remote commands required to query the address information remotely are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Settings:

HISLIP	844
VXI11	844
Socket	844
GPIB	845
USB	845
SERIAL	845

HISLIP

Displays the visa resource string for remote control with HiSLIP protocol.

See also [Chapter 13.2.1, "LAN interface"](#), on page 822

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 1319

VXI11

Displays the visa resource string for remote control over LAN.

See also [Chapter 13.2.1, "LAN interface"](#), on page 822

Remote command:

`:SYSTem:COMMunicate:NETWork:RESource?` on page 1320

Socket

Displays the visa resource string for remote control over LAN, using the socket communication protocol.

See also [Chapter 13.2.1, "LAN interface"](#), on page 822

Remote command:
:SYSTem:COMMunicate:SOCKet:RESource? on page 1323

GPIB
Displays the visa resource string for remote control over the GPIB interface.
See also [Chapter 13.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 825.
Remote command:
:SYSTem:COMMunicate:HISLip:RESource? on page 1319


USB
Displays the visa resource string for remote control over the USB interface.
See also [Chapter 13.2.2, "USB interface"](#), on page 824
Remote command:
:SYSTem:COMMunicate:USB:RESource? on page 1324

SERIAL
Displays the visa resource string for remote control over the serial interface.
See also [Chapter 13.2.2, "USB interface"](#), on page 824
Remote command:
:SYSTem:COMMunicate:SERial:RESource? on page 1323

13.5.3 GPIB address settings

Access:

- Select "System Config > Remote Access > GPIB Address".

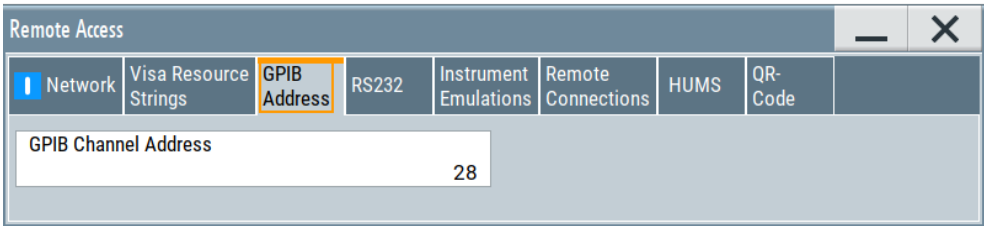

The "GPIB Address" enables you to select the channel for remote control over the IEC/IEE bus interface.

The remote command to configure the setting remotely is described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Settings

GPIB Channel Address	845
--	-----

GPIB Channel Address
Sets the GPIB (IEC/IEEE bus) channel address for the connected instrument.


Remote command:

`:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes` on page 1319

13.5.4 RS232 settings

Access:

- Select "System Config > Remote Access > RS232".

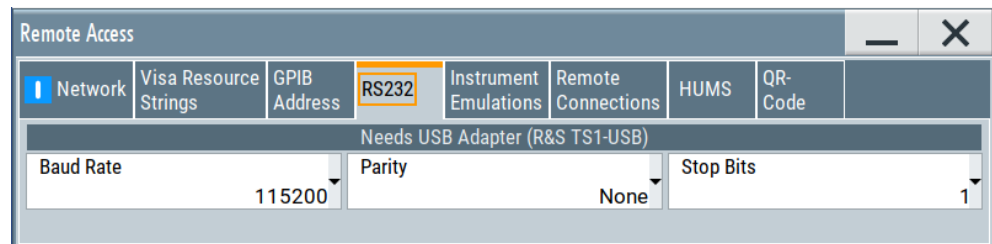

The "RS232" dialog enables you to control the instrument over a serial interface using a USB adapter. The controller and the instrument must be connected with the external USB/serial-adapter R&S TS1-USB (see recommended extras in the data sheet) and a serial crossover (null modem) cable. The USB connection requires the Visa library to be installed on the controller. Visa detects and configures the R&S SMW automatically when the USB connection is established.

The remote commands required to configure the parameters remotely are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Settings

Baud Rate

Sets the baudrate for the serial remote control interface.

Remote command:

`:SYSTem:COMMunicate:SERial:BAUD` on page 1323

Parity

Sets the parity for the serial remote control interface.

Remote command:

`:SYSTem:COMMunicate:SERial:PARity` on page 1323

Stop Bits

Sets the number of stop bits for the serial remote control interface.


Remote command:

`:SYSTem:COMMunicate:SERial:SBITs` on page 1323

13.5.5 Instrument emulations settings

Access:

- Select "System Config > Remote Access > Instrument Emulations".

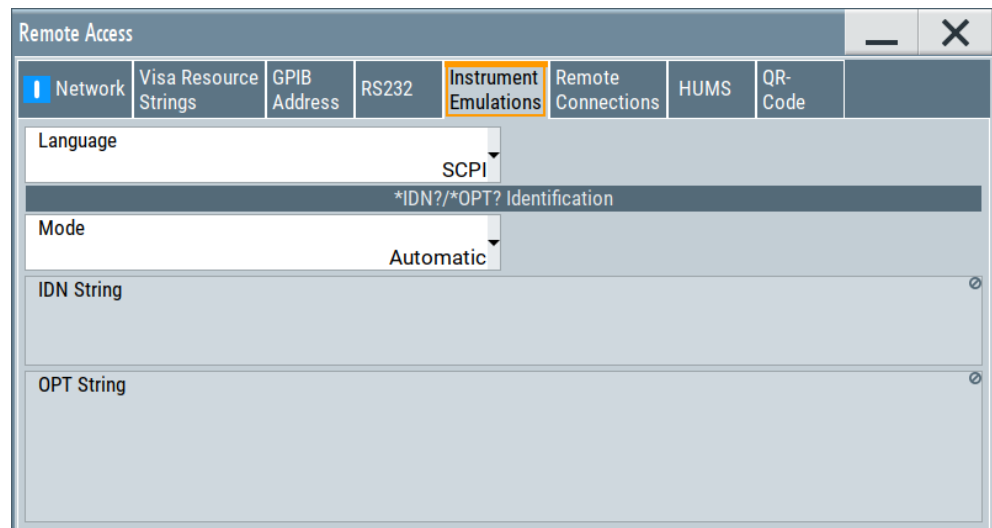

The "Instrument Emulations" dialog enables you to emulate a remote control command set of another signal generator.

The remote commands required to configure the emulation settings remotely are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Settings

Language

Selects the instrument whose remote command set is emulated by the R&S SMW.

Remote command:

[:SYSTem:LANGuage](#) on page 1326

Mode

Selects the way the instrument identification is performed.

"Automatic" Sets the "IDN String" and the "OPT String" automatically for the instrument selected with the parameter [Language](#).

"User Defined" Enables you to define the "IDN String" and the "OPT String".

Remote command:

[:SYSTem:IDENTification](#) on page 1324

Set to Default

In "Mode > User Defined", resets the *IDN and *OPT strings.

Remote command:

[:SYSTem:IDENTification:PRESet](#) on page 1325

IDN String

Indicates the identification string of the instrument when queried with the common command `*IDN?`.

In addition to the preset values, you can define your own identification string so that each generator uses an individual identification, like `My_SigGen` for instance, see [Mode](#).

Remote command:

`*IDN?` on page 913

`:SYSTem:IRESpense` on page 1325

OPT String

Indicates the option string of the instrument as queried with common command `*OPT?`.

In [Mode](#) > "User Defined", you can define your own option string. A query responds with this option string instead of the automatically created option string.

Remote command:

`*OPT?` on page 914

`:SYSTem:ORESpense` on page 1325


13.5.6 Remote connections settings

The "Remote Connections" dialog covers the active SCPI and TCP/IP connections, and a history list of the connections that have accessed the instrument before.

13.5.6.1 Active connections

Access:

- Select "System Config > Remote Access > Remote Connections > Active".

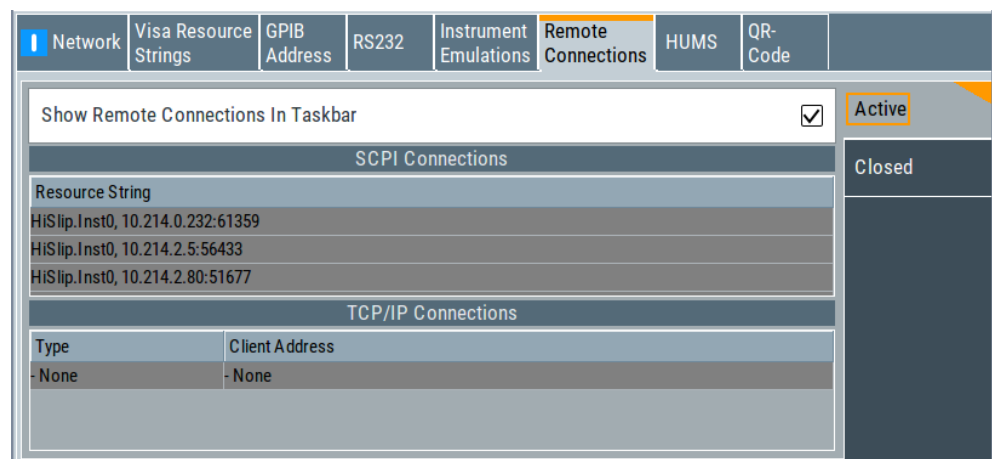

The "Active" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

Settings

Show Remote Connections in Taskbar.....	849
SCPI Connections.....	849
TCP/IP Connections.....	849

Show Remote Connections in Taskbar

Displays the currently active connections in the taskbar.

SCPI Connections

Displays the VISA resources strings of the remote connections currently controlling the instrument via the LAN interface.

Remote command:
n.a.

TCP/IP Connections


Displays the types and client addresses of the remote connections currently controlling the instrument via the LAN interface.

Remote command:
n.a.

13.5.6.2 Closed connections

Access:

- Select "System Config > Remote Access > Remote Connections > Closed".

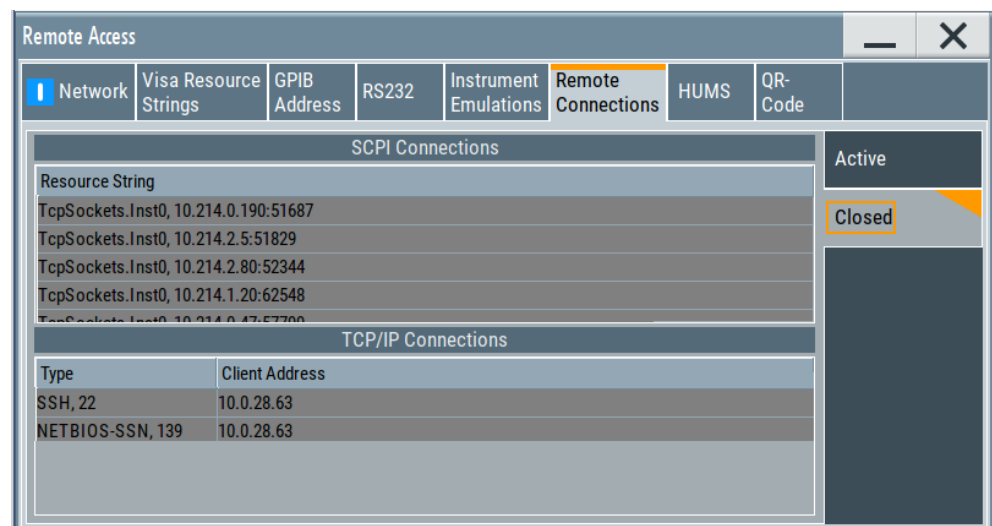

The "Closed" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

Settings

SCPI Connections.....	850
TCP/IP Connections.....	850

SCPI Connections
Lists the VISA resource strings of the last remote connections that have accessed the instrument via the LAN interface before.
Remote command:
n.a.


TCP/IP Connections
Lists the types and client addresses of the last remote connections that had accessed the instrument via the LAN interface before.
Remote command:
n.a.

13.5.7 HUMS settings

Requires R&S SMW-K980.

Access:

▶ Select "System Config > Remote Access > HUMS".

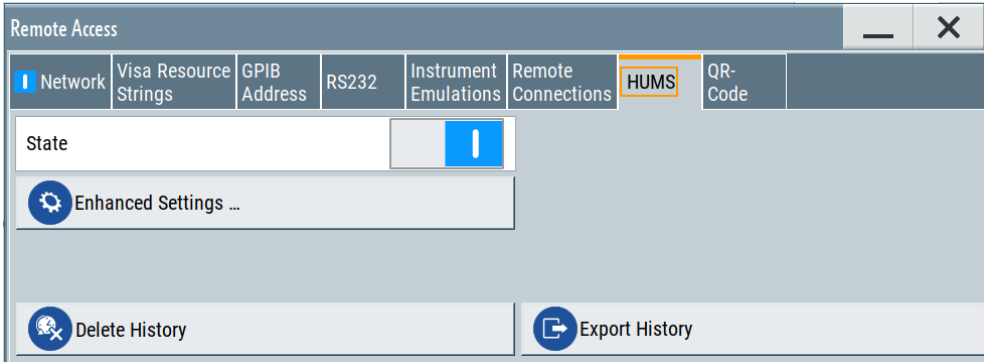

The dialog provides settings to configure the health and utilization monitoring system (HUMS) of the R&S SMW.

The remote commands required to define these settings are described in [Chapter 14.11, "HUMS remote control commands"](#), on page 940.

Settings

State.....	851
Enhanced Settings.....	851
Delete History.....	851
Export History.....	851

State

Activates HUMS.

Data is only recorded, if HUMS is enabled. If disabled, already recorded data can still be retrieved.

The setting is reset by a factory preset to "off".

Remote command:

[DIAGnostic:HUMS:STATe](#) on page 942

Enhanced Settings

Opens a dialog for configuring enhanced protocol settings, see [Chapter 13.5.8, "HUMS enhanced settings"](#), on page 851.

Access is only available, when HUMS is enabled, see [State](#).

Delete History

Deletes all information from the HUMS service including the device history.

Note: Regarding the instrument security, the sanitization procedure also deletes the history of the HUMS service, see [Chapter 12.7.2.2, "Disk & memory security settings"](#), on page 801.

Remote command:

[DIAGnostic:HUMS:DEVIce:HISTory:DELeTe:ALL](#) on page 941

Export History

Triggers an export of the logged data of the HUMS service into a *.zip file.

A standard file dialog opens, to save the log file. By default, the file is saved to the directory /var/user/.

Remote command:


[DIAGnostic:HUMS:DEVIce:HISTory?](#) on page 941

[DIAGnostic:HUMS:SAVE](#) on page 942

13.5.8 HUMS enhanced settings

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".

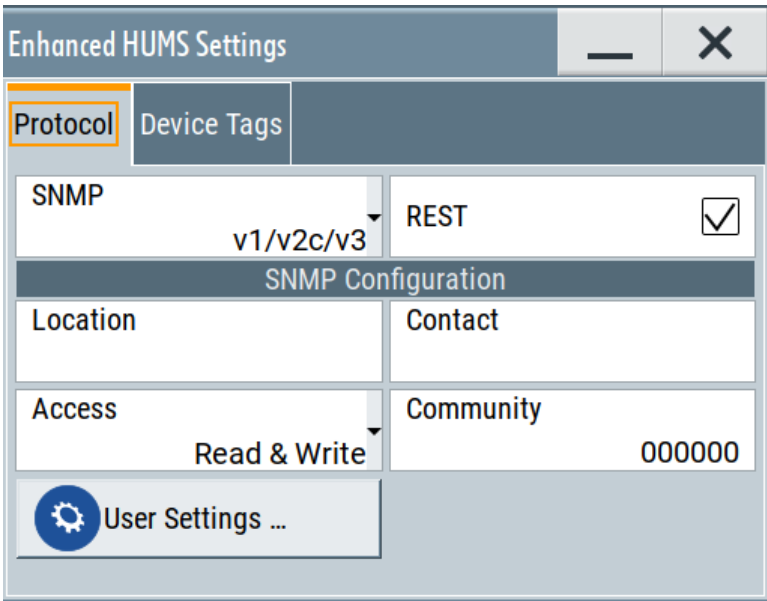

The dialog provides enhanced settings for configuring protocol settings and device tags.

The remote commands required to define these settings are described in [Chapter 14.11, "HUMS remote control commands"](#), on page 940.

• Protocol settings	852
• SNMP user settings	854
• Device tag settings	858

13.5.8.1 Protocol settings

The "Protocol" tab of the "Enhanced HUMS Settings" dialog provides protocol settings for SNMP or REST protocol.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. Select "Protocol".

The dialog provides enhanced settings for configuring protocol settings and device tags.

Settings

SNMP	853
REST	853
SNMP Configuration	853
L Location	853

L Contact	853
L Access	853
L Community	854
User Settings	854

SNMP

Enables the SNMP agent and selects the supported SNMP version to communicate with the service.

The setting is reset by a factory preset to "v1/v2c".

"Off"	The SNMP agent is disabled.
"v1/v2c"	Selects SNMP version 2, which also enables version v1.
"v1/v2c/v3"	Selects all SNMP version v1, v2c and v3.
"v3"	Selects SNMP version v3.

Remote command:

[SYSTem:COMMUnicate:SNMP:VERSion](#) on page 947

REST

Enables the REST API protocol.

The setting is reset by a factory preset to "On".

Remote command:

[SYSTem:COMMUnicate:REST:ENABLe](#) on page 944

SNMP Configuration

For SNMPv1 and SNMPv2c authentication, you can define "Access" and "Community".
For SNMPv3 authentication, you can define "User" profiles.

Location ← SNMP Configuration

Defines the SNMP location information. This information complies with the server's physical location and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMUnicate:SNMP:LOCation](#) on page 945

Contact ← SNMP Configuration

Sets the SNMP contact information. This information complies with the person who manages the SNMP server and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMUnicate:SNMP:CONtact](#) on page 945

Access ← SNMP Configuration

Defines the access type for SNMP community string.

For read access, you can use "Read" or "Read & Write". For write access, use "Read & Write".

The setting is reset by a factory preset to "Read & Write".

Remote command:

`SYSTem:COMMunicate:SNMP:COMMunity:RO` on page 944

`SYSTem:COMMunicate:SNMP:COMMunity:RW` on page 944

Community ← SNMP Configuration

Defines the SNMP community string that can be a group of instruments with SNMP version v2 support.

The setting is reset by a factory preset to the "<serial number>" of the instrument.

User Settings


Accesses the "Configure SNMP Users for HUMS" dialog.

13.5.8.2 SNMP user settings

For SNMPv3 authentication, you can define user profiles.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. In the protocol tab, select SNMP communication with SNMPv3, e.g. "SNMP > v1/v2c/v3".
5. Select "User Settings".

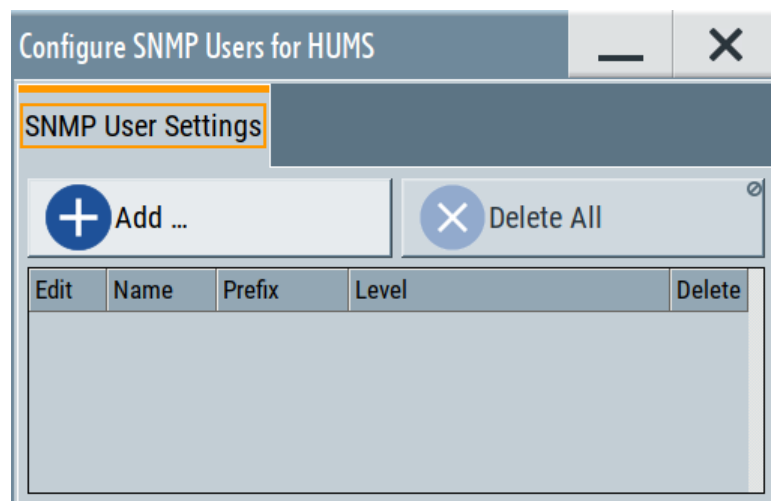

The "Configure SNMP User for HUMS" dialog provides an overview of all defined SNMP users and their profiles. With the "Add" and "Delete All" controls, you can add or remove users.

Settings

Add	855
Delete All	855
User table	855
L Edit	856
L Name	856
L Prefix	856
L Level	856
L Delete	856
Add SNMP User for HUMS	857
L SNMP User Name	857
L SNMP User Prefix	857
L SNMP User Level	857
L SNMP User Public Passphrase	858
L SNMP User Encrypted Passphrase	858
L Add / Update	858

Add

Accesses the "Add SNMP User for HUMS" dialog.

In this dialog, you can define a user and its profile, see ["Add SNMP User for HUMS"](#) on page 857.

Delete All


Removes all users from the list.

Remote command:

[SYSTem:COMMUnicate:SNMP:USM:USER:DELeTe:ALL](#) on page 946

User table

Lists all defined SNMP users.

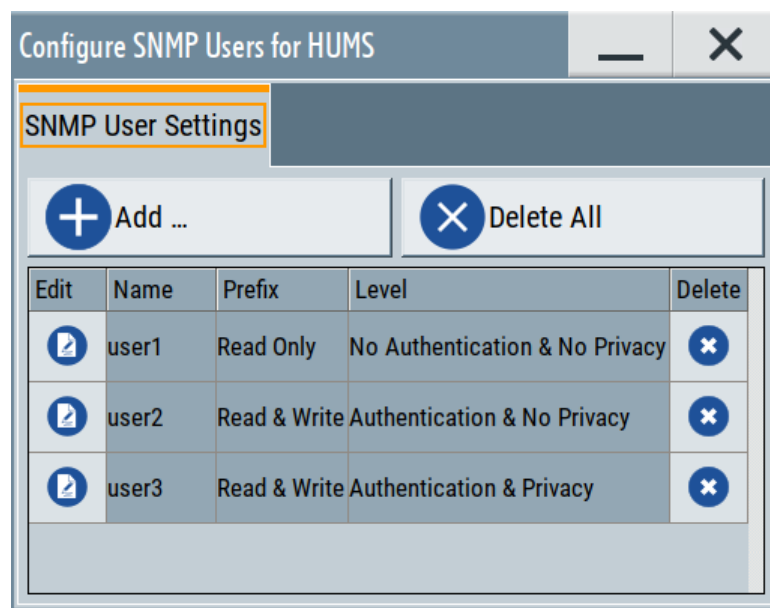

The table informs on the user name and its specified user profile.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:ALL?](#) on page 946

Edit ← User table

Accesses the "Edit SNMP Users for HUMS" dialog, where you can modify an already defined user profile.

For description on the entry fields, see [Add SNMP User for HUMS](#).

Name ← User table

Shows the user name of the user who should have specific user rights.

Prefix ← User table

Shows the access right of the selected user.

Level ← User table

Shows the security level of the selected user.

Delete ← User table

Removes the selected user from the list.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:DELeTe](#) on page 946

Add SNMP User for HUMS

Configuration dialog for defining SNMP users and their profiles.

Remote command:

[SYSTEM:COMMunicate:SNMP:USM:USER](#) on page 945

SNMP User Name ← Add SNMP User for HUMS

Defines the name of the user for assigning specific user rights. Entering a user name is mandatory.

SNMP User Prefix ← Add SNMP User for HUMS

Defines the access right for a user.

"Read Only" Allows the user to only read information.

"Read & Write" Allows the user to read and modify information.

SNMP User Level ← Add SNMP User for HUMS

Defines the security level of the SNMP user. Depending on the security level, the service requests user name and passphrases for authentication and encryption.

"No Authentication & No Privacy"

Low security level. Using this level, the service queries the user name only. Password authentication and password for encrypted data transfer is not requested.

See ["SNMP User Public Passphrase"](#) on page 858 and ["SNMP User Encrypted Passphrase"](#) on page 858 for data transfer is not requested.

"Authentication & No Privacy"

Medium security level: Requests the user name and password authentication, but no data transfer encryption.

"Authentication & Privacy"

High security level: Requests the user name, and both, the password authentication and the password for data transfer encryption.

SNMP User Public Passphrase ← Add SNMP User for HUMS

Defines the password for authentication. The password must have of 8 to 12 characters with any combination of ASCII characters.

SNMP User Encrypted Passphrase ← Add SNMP User for HUMS

Defines the password for encryption. This password must have at least 8 characters with any combination of ASCII characters. When encryption is defined, the R&S SMW supports the DES (directed enhanced services) protocol.

Add / Update ← Add SNMP User for HUMS

Assigns the defined user with its profile to the list.

If you change an already defined user profile, the instrument provides the "Update" button to apply the modifications.

13.5.8.3 Device tag settings

The "Device Tags" tab of the "Enhanced HUMS Settings" dialogs displays the defined device tags. You can also add or delete device tags here.

A device tag is a label to assign to your instrument. You can create any device tag for your instrument and define it by a specific key and value.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".

Enhanced HUMS Settings

Protocol

Device Tags

ID	Key	Value	Delete
0			
1			
2			

Add

Delete All

Configures device tags for tagging user-defined information of the instrument in a table. You can define up to 32 device tags, e.g., for HUMS history evaluation. To add a device tag, define "Key" and "Value" of the device tag in the table. Click "Add" to add all device tags of the table to the HUMS history.

Settings

ID	859
Key	859
Value	859
Delete	859
Add	860
Delete All	860

ID
Identification count of a device tag entry.

Key
Sets the identification key of a device tag.

Remote command:
`DIAGnostic:HUMS:TAGS[:VALue]` on page 943

Value
Sets the value of the identification key of a device tag.

Remote command:
`DIAGnostic:HUMS:TAGS[:VALue]` on page 943

Delete
Deletes the selected device tag from the HUMS history.

Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe](#) on page 943

Add

Adds a new device tag to the HUMS service.

Remote command:

[DIAGnostic:HUMS:TAGS\[:VALue\]](#) on page 943

[DIAGnostic:HUMS:TAGS:ALL?](#) on page 942

Delete All

Removes all device tags from the HUMS history.

Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe:ALL](#) on page 943

13.5.9 QR code

Access:

- Select "System Config > Remote Access > QR Code".



The "QR Code" dialog shows the current instrument address (IP address) in quick response (QR) format.

This functionality provides fast access to the instrument via VNC with, for example, a smartphone or a tablet.

See [Chapter 13.14.3, "How to set up remote operation from a smart device"](#), on page 901.

13.6 LXI settings


On the R&S SMW, an LXI functionality is already installed and enabled, see [LXI status settings](#). Thus, you can access the instrument using any web browser to perform the following tasks:

- Modifying network configurations, see [Chapter 13.6.2.1, "LAN configuration"](#), on page 864.
- Accessing the instrument remotely
- Monitoring the use and status of the instrument
This service requires option R&S SMW-K980 "Health and utilization monitoring service (HUMS)".
- Analyzing SCPI remote diagnostics

13.6.1 LXI status settings

Access:

- Select "System Config > Setup > Remote Access > LXI Status".

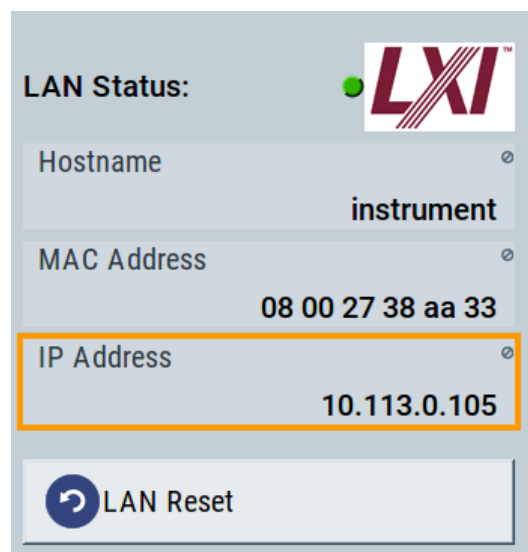

The LXI "LAN Status" dialog shows the parameters of the LAN connection.

Alternatively, you can change the LAN settings using the LXI web browser interface, see [Chapter 13.6.2.1, "LAN configuration"](#), on page 864.

LAN Status

The LED indicates the LXI status.

"green"	Normal operation
"green (flashing)"	Device identification
"red"	LAN fault

Hostname / MAC Address / IP Address

See "Hostname" on page 841.

LAN Reset

Initiates the network configuration reset mechanism for the instrument and resets the hostname, MAC address, and IP address.

According to the LXI standard, a LAN reset must set the following network parameters to a default state:

Parameter	Value
TCP/IP mode	DHCP + Auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN reset also resets the following parameters for the R&S SMW:

Parameter	
Hostname	Instrument-specific hostname
Description	Vector signal generator
Negotiation	Auto detect
VXI-11 discovery	Enabled

13.6.2 LXI browser settings


The LXI browser functionality enables you to control the instrument remotely over a web browser.

Access:

- In the address field of the browser, enter the URL address, composed of the instrument's IP address or host name, for example *http://10.113.1.151*.

Note: Do not add the missing zeros in the IP address, while opening the instrument homepage.

The instrument homepage (welcome page) opens.

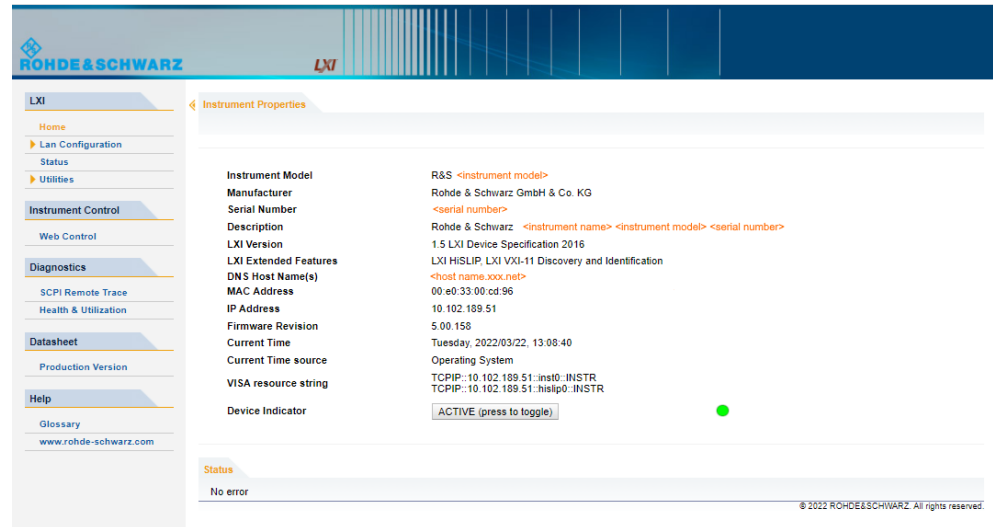

The navigation pane of the browser interface contains the following elements:

- "LXI"
 - "Home" opens the instrument homepage.
The homepage displays the device information required by the LXI standard, including the VISA resource string in read-only format.
 - "Device Indicator" activates or deactivates the LXI status indication.
When activated, the LXI LED flashes. A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.
 - "Lan Configuration" allows you to configure LAN parameters and to initiate a ping, see ["Ping client"](#) on page 866.
 - "Status" displays information about the LXI status of the instrument.
 - "Utilities" provides access to the LXI event logging functionality required by the LXI standard.
- "Instrument Control"
 - "Web Control" provides remote access to the instrument, see ["To start remote control with the LXI web browser"](#) on page 875.
- "Diagnostics"
 - "SCPI Remote Trace" records messages exchanged via the remote control interface, see [Chapter 13.6.2.2, "SCPI remote trace"](#), on page 866.
 - "Health & Utilization" (option: R&S SMW-K980) enables you to monitor the use and status of an instrument, see [Chapter 13.6.2.3, "Health and utilization"](#), on page 868.
- "Datasheet"
 - Provides the data sheet with the specification data of the instrument at the time of delivery, see [Chapter 13.6.2.4, "Datasheet"](#), on page 868.
- "Help"
 - "Glossary" explains terms related to the LXI standard.
 - www.rohde-schwarz.com opens the Rohde & Schwarz homepage.

13.6.2.1 LAN configuration

The "LAN Configuration" web page displays all mandatory LAN parameters and allows their modification.

It comprises the following navigation entries.

- [IP configuration](#).....864
- [Advanced config](#).....865
- [Ping client](#).....866

IP configuration

The "IP configuration" web page displays all mandatory LAN parameters and allows their modification.

The screenshot shows the 'LAN Parameters' configuration page. The left sidebar contains navigation links: Home, Lan Configuration (selected), IP Configuration, Advanced Config, Ping Client, Status, Utilities, Instrument Control, Web Control, Diagnostics, SCPI Remote Trace, Health & Utilization, Datasheet, Production Version, and Help. The main content area has the following fields:

- Hostname: <host name>
- DNS Hostname(s): <host name.xxx.net>
- Domain: rsint.net
- Description: <instrument>
- IP Address Mode: DHCP + Auto IP Address (dropdown)
- IP Address: 10.102.189.51
- Subnet Mask: 255.255.252.0
- Default Gateway: 10.102.188.1
- Obtain DNS Server Address automatically: ☒
- DNS Server(s): 10.0.2.166 (with a secondary field 10.0.23.159)
- Register Device at DNS Server dynamically: ☐
- HiSLIP Port: 4880

A 'Submit' button is located below the HiSLIP Port field. A note on the right states: 'Attention! Changing the hostname reboots the device!'. At the bottom, a status bar shows 'No error' and a copyright notice: '© 2012 ROHDE&SCHWARZ All rights reserved.'.

The "IP Address Mode" selects a configuration mode for the IP address of the instrument. With static configuration, the entered IP address, subnet mask, and default gateway are used. With dynamic configuration, DHCP or dynamic link local addressing (automatic IP) is used to obtain the instrument IP address.



Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

See [Chapter 12.7.4, "Password management"](#), on page 808.

Advanced config

The "Advanced Config" web page provides LAN settings that are not declared mandatory by the LXI standard.

The following advanced parameters are available:

- "mDNS and DNS-SD": The additional protocols "multicast DNS" and "DNS service discovery" are used for device communication in zero configuration networks, working without DNS and DHCP.
- "ICMP Ping": Must be enabled to use the ping utility.
If you disable this setting, the instrument does not answer ping requests. The setting does not affect the LXI ping client. You can ping other hosts from the instrument, even if the setting is disabled.
- "VXI-11 Discovery": Must be enabled to detect the instrument in the LAN.
If you disable this setting, the instrument cannot be detected by the VXI-11 discovery protocol mechanism. The setting does not affect other detection mechanisms. Setting up a VXI-11 connection via the IP address or the host name is independent of this setting.



Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 811.
- ["Changing the default security password"](#) on page 811.

See [Chapter 12.7.4, "Password management"](#), on page 808.

Ping client

The "Ping Client" page provides the ping utility to verify the connection between the LXI-compliant instrument and another device.

The ping is initiated from the instrument. Using the `ICMP` echo request and echo reply packets, this function checks whether the communication with a device via LAN is working. Ping is useful for the diagnosis of IP network or router failures.

To initiate a ping at the instrument:

1. On the "Ping Client" page, enter the IP address of the host in the "Destination Address" field (for example 10.113.1.151).
2. Select "Submit".

The screenshot displays the LXI web interface for the Ping Client. The left sidebar contains navigation links: LXI, Home, Lan Configuration (with sub-links for IP Configuration, Advanced Config, and Ping Client), Status, Utilities, Instrument Control (with sub-links for Web Control), Diagnostics, SCPI Remote Trace, Health & Utilization, Datasheet, Production Version, and Help (with sub-links for Glossary and www.rohde-schwarz.com). The main content area is titled 'Ping Parameter' and features a 'Destination Address' input field with 'Clear' and 'Submit' buttons. Below this, the 'Result' section displays the following text:

```
PING <host name> (10.102.189.51): 56 data bytes
64 bytes from 10.102.189.51: seq=0 ttl=64 time=0.040 ms

--- <host name> ping statistics ---
1 packets transmitted, 1 packets received, 0% packet loss
round-trip min/avg/max = 0.040/0.040/0.040 ms
```


At the bottom, the 'Status' section shows 'No error'. A copyright notice '© 2022 ROHDE & SCHWARZ. All rights reserved.' is visible in the footer.

13.6.2.2 SCPI remote trace

The remote trace functionality allows you to trace input and output strings at the remote control interface of the R&S SMW, see [Chapter 13.11, "To trace messages with the LXI web browser interface"](#), on page 884.


A recorded trace (message log) can be evaluated directly in the dialog. Use the highlighting and navigation functions provided by the lower toolbar to locate error messages and messages containing arbitrary search strings. You can also export the message log to a `*.CSV` file and evaluate the file using a suitable program.

To trace and display messages, switch on "logging" and "live mode" in the toolbar.

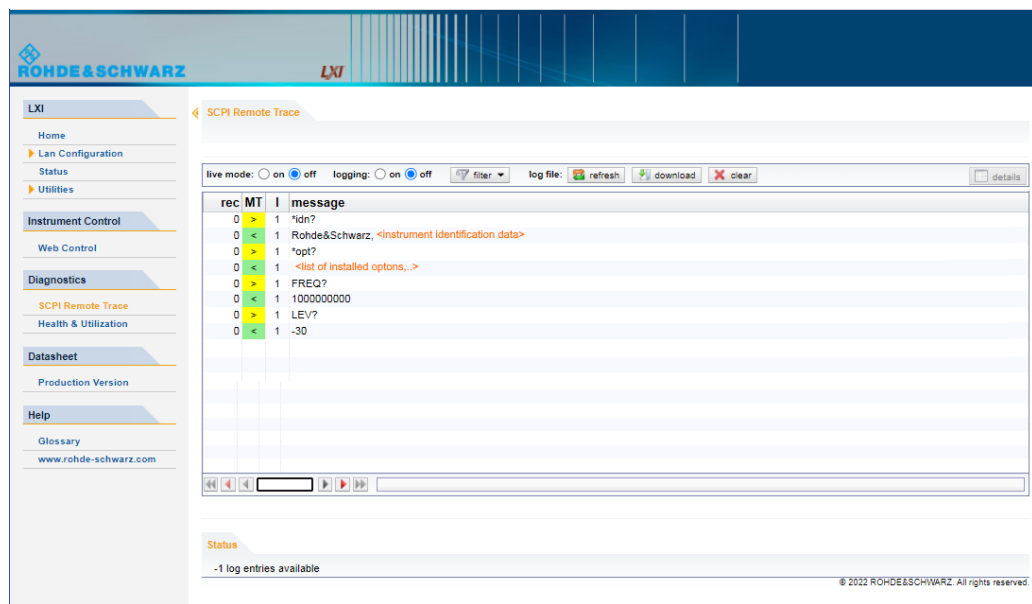

Toolbars

 The toolbar at the top of the dialog provides basic settings and functions.



- "Live mode" / "logging": If logging is switched on, messages are traced. They are stored in an internal database and can be displayed upon request, using the refresh button (live mode off) or they can be displayed automatically (live mode on).
- "Filter": applies a filter to columns and/or rows when working (live mode off)
- "Refresh": reads the message log from the internal database and displays it
- "Download": stores the SCPI trace log to a *.CSV file
- "Clear": deletes all message log entries in the database and at the screen
- "Details": displays details of the selected message, for example an SCPI command in hex format (also possible by double-clicking a message)

Columns

The following columns are available if no column filter is applied:

- "Rec": record number of the message within the message log
- "I": number of the subinstrument
- "MT": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, highlighted by red color
 - T = execution time, i.e. time required by the instrument to process the command internally.

- "message": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, denoted in red
 - T = execution time, i.e. time required by the instrument to process the command internally

13.6.2.3 Health and utilization

Option: R&S SMW-K980

The health and utilization monitoring service allows you to monitor the usage and status of the instrument, its options, including S.M.A.R.T. data of the system drive. You can retrieve information on remote accesses over SCPI commands, web browsers or protocols, as for example SNMP or REST.


For detailed information on R&S HUMS, see the following documents, available on the Rohde & Schwarz website:

- User manual "R&S Health and Utilization Monitoring Service" , describing how to access and use the service.
- Application note [GFM336: Instrument Health & Utilization Monitoring](#), providing information on the SNMP and REST API, including a list of all SNMP variables and REST endpoints.

13.6.2.4 Datasheet

The data sheet functionality allows you to retrieve the specification data of the instrument at the time of delivery.

The document contains all specified value ranges and information of the data sheet, for example important as reference values for recalibration.

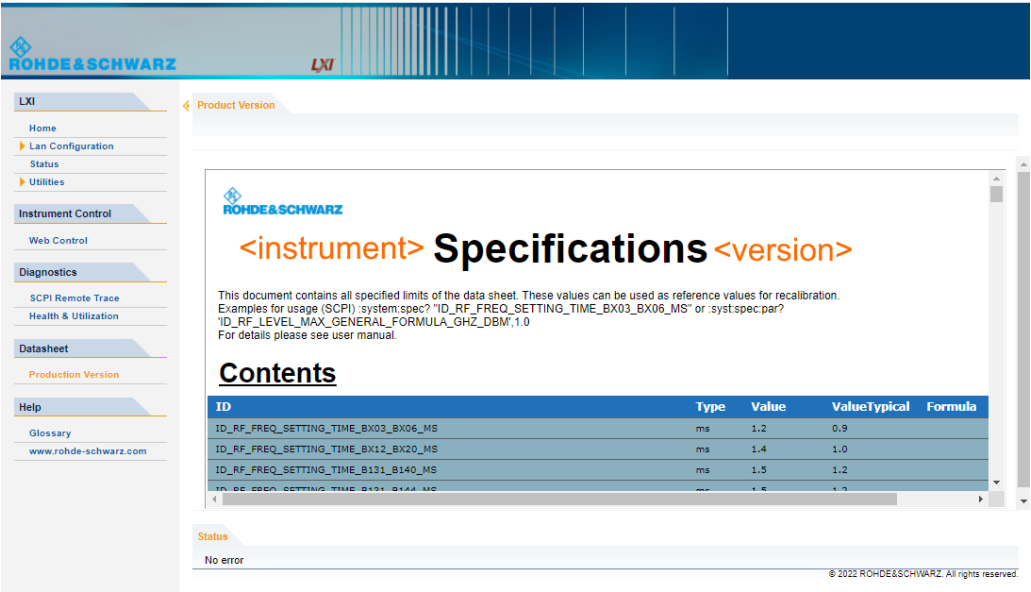

13.7 To configure the instrument for remote access

The R&S SMW is equipped with a network interface and can be connected to an Ethernet LAN (local area network).

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

For identification in the network, all devices require an IP address.


How to:

- [To find the VISA resource string](#).....869
- [To configure the acces over LAN](#)..... 870
- [To configure the access over GPIB](#).....874

13.7.1 To find the VISA resource string

- Select "System Config > Remote Access > VISA Resource Strings".

To configure the instrument for remote access

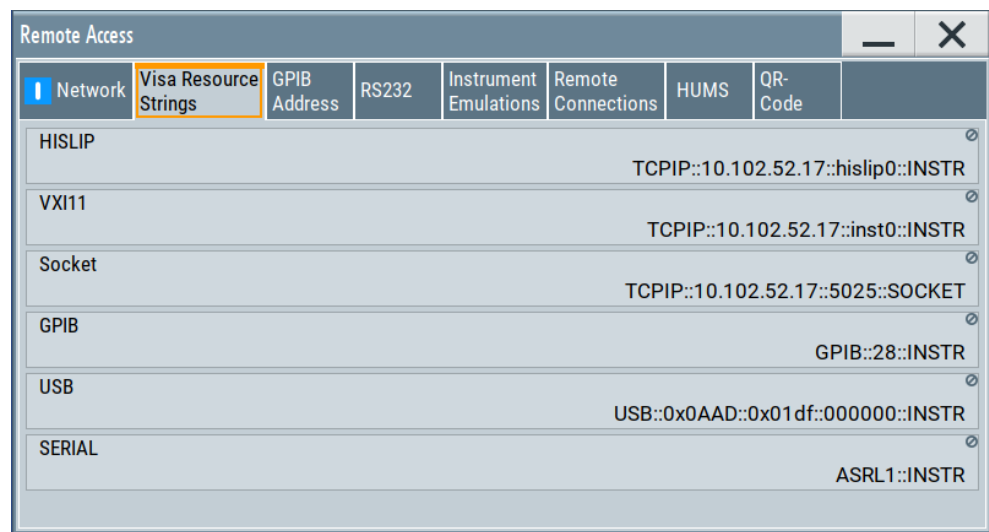

The dialog shows all specified resource strings of the supported remote control interfaces.

Note: Using the RS232 serial interface via USB requires the USB serial adapter R&S TS-USB1.

13.7.2 To configure the acces over LAN

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the [DHCP](#) protocol, this service assigns all address information automatically.
- If the network does not support DHCP, the instrument tries to obtain the IP address by using the Zeroconf (Avahi) protocol.

The automatic address configuration assigns the address information automatically. Thus it is safe to establish a physical connection to the LAN without any previous instrument configuration.



If the dynamic TCP/IP configuration does not succeed, or if the instrument is expected to use alternate TCP/IP configuration, you must set the address information manually.

13.7.2.1 How to assign the IP address

If necessary, you can assign the IP address manually. It is assumed that you have connected controller PC and the instrument.

To assign the IP address manually on the instrument

1. Obtain the IP address and subnet mask for the R&S SMW and the IP address for the local default gateway from your network administrator. If necessary, also obtain

the name of your DNS domain and the IP addresses of the DNS server on your network.

2. On the instrument, select "System Config > Remote Access > Network".
3. Select "Address Mode > Static".
4. Select the "IP Address".
5. Enter the IP address, for example *192.168.0.1*.

The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum.

6. Select the "Subnet Mask" and enter the subnet mask, for example *255.255.255.0*.

The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum.

Note: The subnet mask must be the same for both, the R&S SMW and the host interface, the instrument is connected to.

To assign the IP address manually on the computer

- Obtain the necessary information from your network administrator. If you use more than one LAN connector, you need separate address information for each connector.

For information on how to configure the address information, see the documentation of the operating system the computer uses.

13.7.2.2 How to use the hostname

In a LAN that uses a [DNS](#) server, each computer or instrument connected in the LAN can be addressed with an unambiguous [Hostname](#) (also referred to as computer name) instead of the IP address. The DNS server translates the hostname to the IP address.



Using the hostname is useful in networks with dynamic TCP/IP and DHCP protocol services, that assign the address information automatically. Thus, it can be that the services assign a new IP address each time the instruments restarts, but they do not change the hostname.



Changes in hostname syntax

From FW version 3.20.200.xxx and later, the hostname syntax is changed.

- Current hostname syntax: `<INST>-<Serial Number>`
- Former syntax: `rs<inst><Serial Number>`

Note, that a "Factory Preset" resets the hostname. Depending on the installed firmware version, the hostname of your instrument can change compared to the past.

Each instrument is delivered with an assigned hostname, that remains constant as long as it is not explicitly changed.

This function is password-protected. Unlock the protection level 1 to access it.

The default *hostname* name follows the syntax <INST>-<Serial Number>, where:

- <INST> is the short name of your instrument, as stated on the front panel.
- <Serial Number> is the individual serial number of the instrument.
You can find the serial number at the rear panel of instrument. It is the third part of the device ID printed on the barcode sticker.



Example:

The default hostname of an R&S SMW with a serial number 102030 is SMW200A-102030.

To query and change the hostname

1. Select "System Config > Remote Access > Network".
Section "Instrument Name" displays the assigned "Hostname".
Note: This function is password-protected. Unlock the protection level 1 to access it.
2. Select "System Config > Setup > Security > Protection".
3. Enable the "Protection Level 1".
The default protection level 1 password is *123456*.
The parameter "Hostname" in the "Network" tab is now enabled for configuration.
4. Change the "Hostname".

13.7.2.3 How to configure LAN interface access and services

By default, the LAN interface and the supported LAN interface services are enabled.

For security reasons, for example to protect the instrument against unauthorized access, you can block either the LAN services individually, or the access over LAN in general.

To disable LAN access in general

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".

To configure the instrument for remote access

4. Disable "LAN" state.
5. Enter the [Security Password](#).
6. Select "Accept".

When disabled, communication over the LAN connection is not possible.

To disable LAN services individually

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".
4. Enable "LAN" state.
5. In the "Common Services" side tab, uncheck all services you want to block.

General	LAN Services	Password Management	
<div>LAN I</div>		<div>Common Services</div>	
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Disabled</i>	<input type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Disabled</i>	<input type="checkbox"/>
HTTP <i>is Disabled</i>	<input type="checkbox"/>	Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>
		VNC <i>is Disabled</i>	<input type="checkbox"/>
		Remote Support <i>is Disabled</i>	<input type="checkbox"/>
		Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>
Security Password		<input checked="" type="radio"/> Accept	

6. Select the "Samba Services" sidetab.

General	LAN Services	Password Management	
<div>LAN I</div>		<div>Samba Services</div>	
SMB 1.0/2.0 Client <i>is Enabled</i>	<input checked="" type="checkbox"/>	SMB 1.0/2.0 Server <i>is Disabled</i>	<input type="checkbox"/>
Security Password		<input checked="" type="radio"/> Accept	

7. For example, uncheck "SMB 1.0/2.0 Server" to block the access for the SMB Samba server.
8. Enter the [Security Password](#).
9. Select "Accept".

13.7.3 To configure the access over GPIB

To control the instrument remotely over the GPIB bus, it must be addressed using the GPIB address. The remote control address is factory-set to 28, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

How to change the GPIB address

1. Select "System Config > Remote Access > GPIB Address".
2. Select "GPIB Channel Address" and enter a value between 0 and 30.



Risk of losing remote connection

If the remote access and network settings had been configured to values different to the default, executing a factory preset via remote control terminates the connection to the instrument.

13.8 To establish a remote control session over LAN

This section shows you how to establish remote control connections over the available interfaces.

The following general prerequisites must be fulfilled:

- The instrument and the controller have to be connected over the corresponding interface with the suitable cable.
- The instrument and the controller must be switched on.
- To operate the instrument remotely, it must be addressed using the defined interface address.

See:

- [Chapter 13.2.1, "LAN interface"](#), on page 822
- [Chapter 13.2.2, "USB interface"](#), on page 824
- [Chapter 13.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 825
- A remote control program must open a connection to the instrument, before it can send commands to and receive device responses from the instrument.



If security is a concern, see:

- Document Instrument Security Procedures.
- [Chapter 12.7.5, "How to prevent unauthorized access"](#), on page 810.
- [To establish the connection with the LXI web browser](#)..... 875
- [To establish the connection using VXI-11 protocol](#).....876
- [To establish the connection using socket communication](#)..... 882


13.8.1 To establish the connection with the LXI web browser

Using the LXI browser interface you can access and control the R&S SMW instrument remotely from another PC without additional installation. File upload and download between the instrument and the remote PC is also available.

To start remote control with the LXI web browser

1. On the instrument, make sure the LAN interface is enabled. Enable the LAN interface on the instrument, if necessary.
See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.
2. Connect the remote PC and the instrument in the same network.
See [Chapter 3.1.7, "Connecting to LAN"](#), on page 33 .
3. On the remote PC, start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMW in the browser's address bar.
The R&S SMW's welcome page is displayed.
5. In the navigation pane, select "Instrument Control" > "Web Control".
Remote access to the instrument requires the password. The default password is *instrument*.
6. Enter the password and confirm with the [Enter] key.
After the connection is established, the current screen of the R&S SMW is displayed in the browser window.

To establish a remote control session over LAN

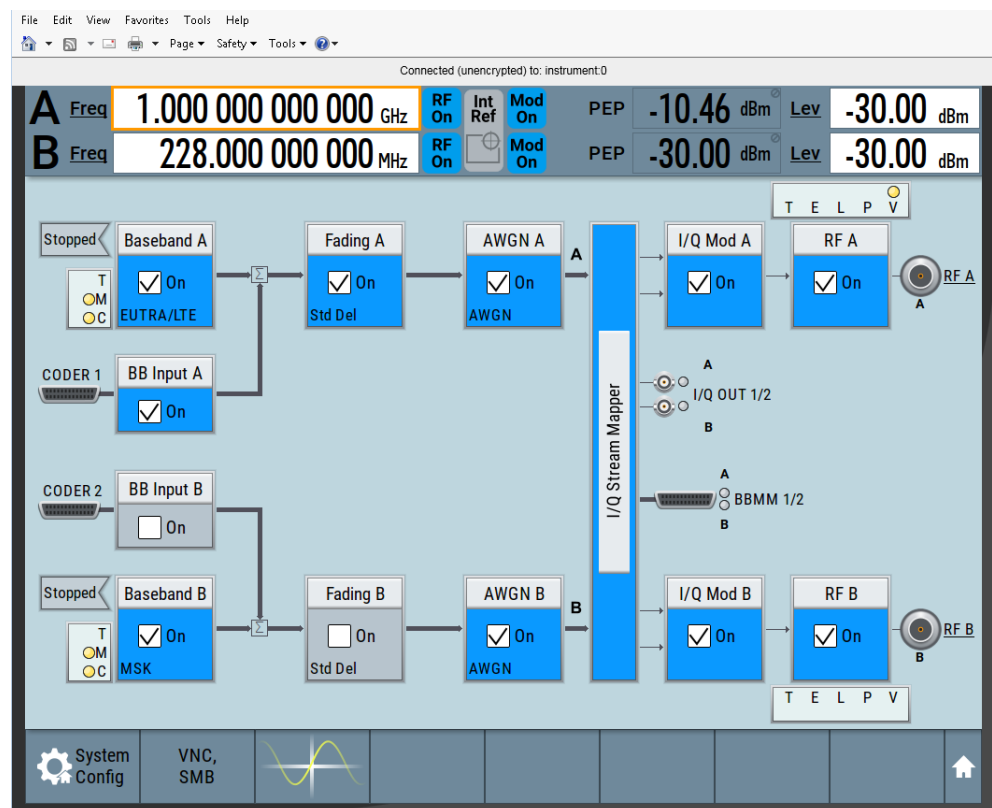

7. Use the mouse cursor and keyboard to access the functionality of the instrument as you would directly perform on the instruments touchscreen and front panel.

13.8.2 To establish the connection using VXI-11 protocol

In this example, the I/O software library R&S VISA from Rohde & Schwarz is used to set up a LAN remote control link and remotely control the R&S SMW. R&S VISA is running on a controller PC with Windows operating system. When the connection is set up, you can send commands to the instrument and receive the responses.

The remote control connection requires a VISA installation but no additional hardware on the controller PC. The LAN I/O channel is selected at initialization time using the VISA resource string (also referred to as "address string"). A VISA alias (short name) is used to replace the complete resource string. The host address is the R&S SMW's hostname or its IP address.

See also [Chapter 13.2.1, "LAN interface"](#), on page 822.

To set up the controller with R&S VISA

To remote control the R&S SMW, we use the R&S VISA Tester application. The application communicates via TCP/IP protocol.

To establish a remote control session over LAN



The instrument is preconfigured for networks using DHCP (dynamic host configuration protocol). If this configuration is used, enter the computer name in the position of the IP address.

1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.

See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.


2. On the controller (remote PC), install the R&S VISA program.

See <http://www.rohde-schwarz.com/rsvisa> > "RS VISA Release Notes".


3. Connect the controller and the instrument in the same network (network cable). Switch them on.

See also [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

4. On the controller, start "R&S VISA > Tester 32bit" or "R&S VISA > Tester 64bit".

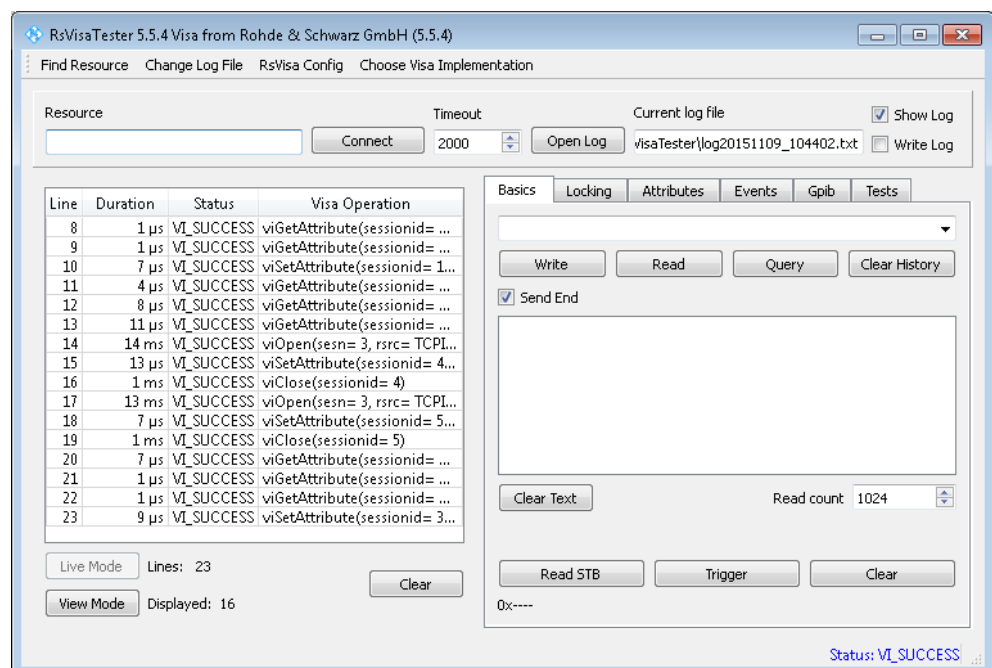


5. In the menu bar, select "Choose VISA Implementation > Rohde & Schwarz Visa" and confirm with "OK".

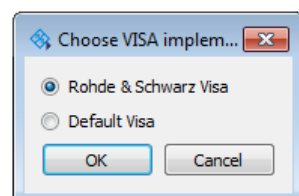

6. In the menu bar, select "Find Resource" to search for the instrument in the LAN.

To establish a remote control session over LAN

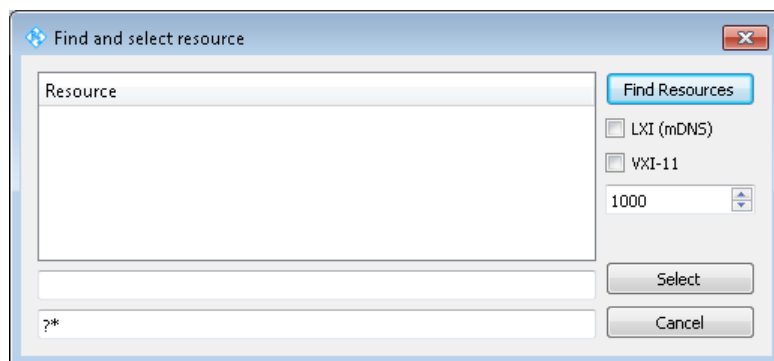


7. Select "VXI-11" and "Find Resources".

R&S VISA scans the network for connected instruments and lists all detected instruments in the "Resource" list.


Note: The search may take some time, particularly in large networks.

8. Select the required instrument and confirm with "Select".

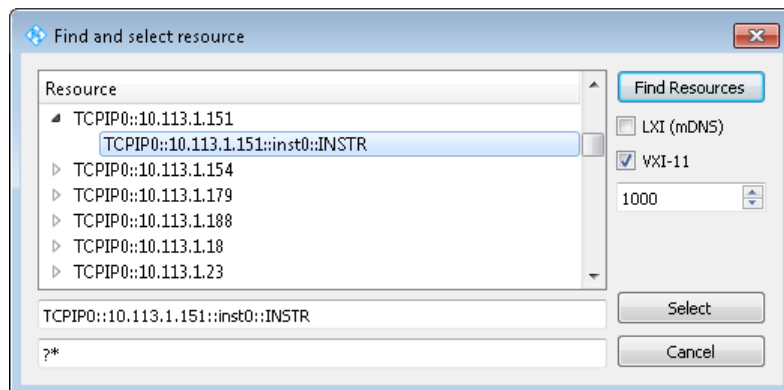

The "Find and select resource" dialog closes and R&S VISA indicates the IP address in the "Resource" field of the main application window.


9. As an alternative to the IP address, you can assign an alias name to the R&S SMW:
 - a) In the menu bar, select "RsVisaConfig".

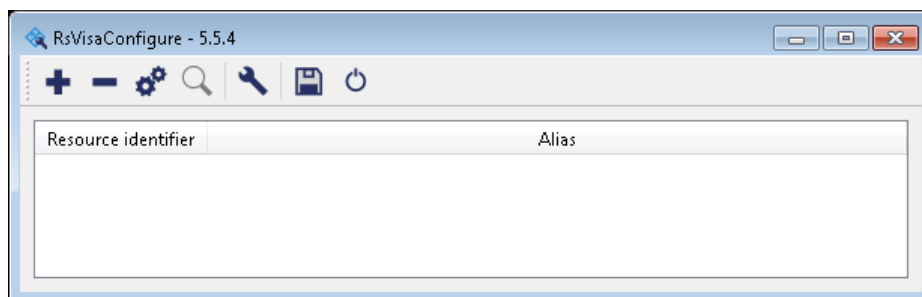


- b) In the toolbar, select "+" to access the "VISA Resource String Composer".

To establish a remote control session over LAN

- c) Fill in the "Alias" name, the "VISA Resource String" and the "Device IP Address or hostname" as shown in the figure, and confirm with "OK".

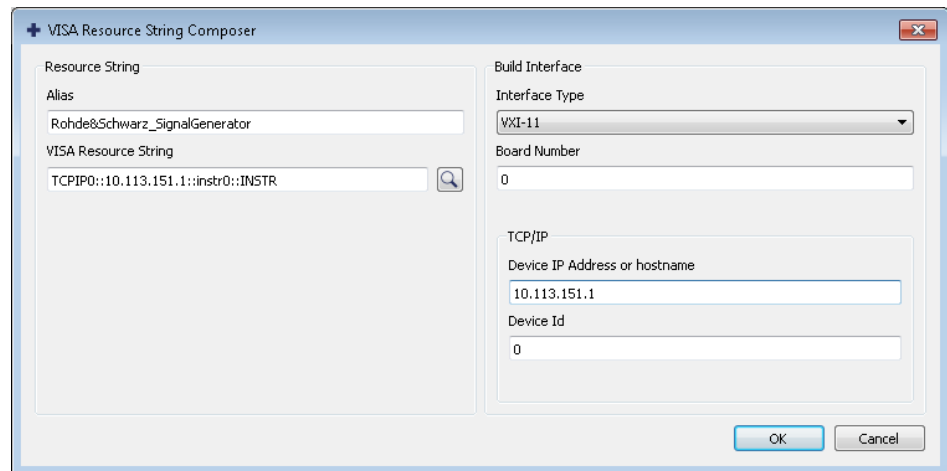

The "Alias" name is assigned.

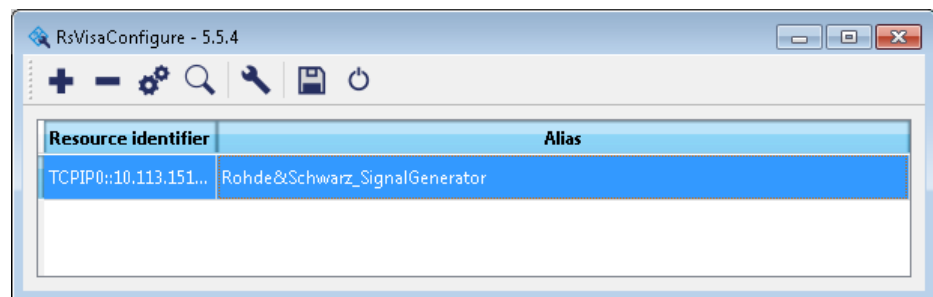

- d) Close the dialog.
The R&S SMW is registered in the program. It can be addressed via the resource string or alias name.

10. In the main window, select "Connect".

R&S VISA establishes the connection to the R&S SMW.

You can send settings to configure the instrument and receive its responses.

Note: If the connection cannot be set up, R&S VISA displays an error in the log view.

See also [Chapter 15.5, "Resolving network connection failures"](#), on page 1359.

For further information on the functions to read and write to an open session, and the utility applications the software provides, see the R&S VISA user manual.

To start remote control with R&S VISA

To set the instrument to remote control, you can use the addressed command `>R` or send any command from the controller.


1. Start the R&S VISA Tester.
Establish the connection to the R&S SMW.
See ["To set up the controller with R&S VISA"](#) on page 876.

To establish a remote control session over LAN

- In the R&S VISA "Basics" tab, enter a SCPI command, e.g. "*IDN?". Confirm with "Query".

The instrument is switched to remote control when it receives a command from the controller.


- Select "Read" to obtain the instrument response.

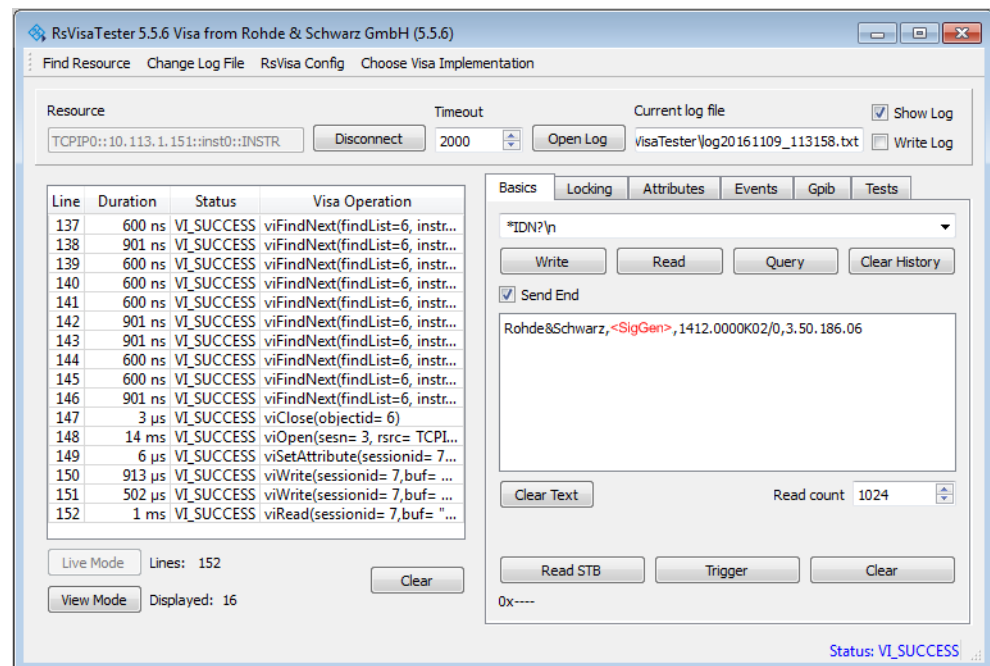

Tip: If the "Show Log" checkbox is checked, R&S VISA displays each VISA function call in the log-view on the left. If you check the "Write Log" checkbox, the log-view entry is written to the log file as well. You can operate the log-view in two modes: the "Live Mode" shows only the most recent messages whereas the "View Mode" allows you to scroll the history.

- To set, e.g. the frequency, enter `SOUR1:FREQ 4 GHz` and select "Write". To check the performed setting, `SOUR1:FREQ?` and select "Query". The instrument response is `40000000000`. The value corresponds to the frequency in Hz.

To establish a remote control session over LAN

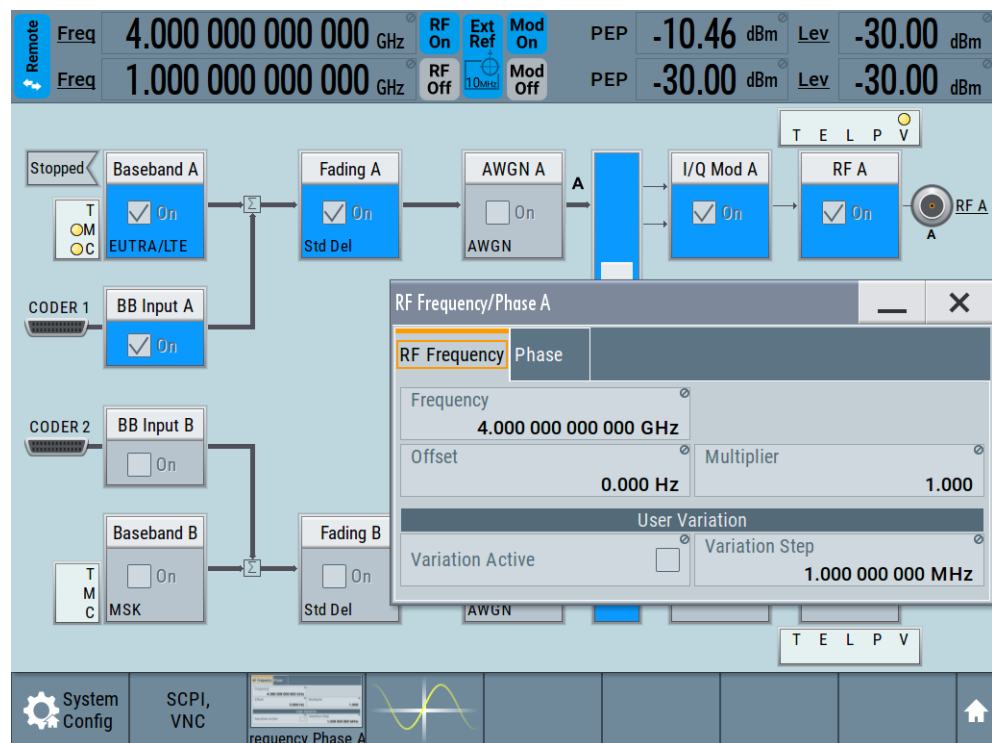

While remote control is active, the "Remote" icon in the status bar indicates that the instrument is in remote control mode. Currently ongoing communication (data transfer) is indicated by green colored arrows in the icon.

Also, the "Connections" softkey in the taskbar shows the currently established remote connections.

Operating via the front and touch panel or via mouse and keyboard are locked, allowing a remote control program to be performed without interruption. On the display, keys and entry fields are grayed out and cannot be activated or modified, but you can still open dialogs, for example to verify settings.

5. To disable the access to the dialogs, use the command `SYST:KLOC ON`.
6. To prevent unintentional return to manual operation, use the command `&LLO`.
See [Remote control via SCPI](#), section "LAN interface messages".
The instrument switches to "Remote LLO" state.
The [SETUP] key is disabled.
7. To enable the [SETUP] key, use the command `>R`.
8. To return to manual operation, see [Chapter 13.12, "To return to manual operation"](#), on page 886.

Tip: Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

13.8.3 To establish the connection using socket communication

This section provides an example on how to establish a remote control connection over Telnet client and a simple sockets-based program example that can be further developed.

See also [Chapter D.1, "Telnet program examples"](#), on page 1416.



The telnet client transmits information unencrypted. Therefore, for sensitive information we recommend that you use a client which supports secure protocols, like SSH.

In the following example, we assume basic knowledge of programming and operation of the controller. You can find information on the interface commands in the corresponding manuals.

To set up a Telnet connection

To control the software, only a Telnet program is required. The Telnet program is part of every operating system.

1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.

See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.

2. Connect the remote PC and the instrument in the same network.


See [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.

3. On the remote PC, start the Telnet program.

Enter the socket address.


The socket address is a combination of the IP address or the hostname of the R&S SMW and the number of the port configured for remote-control via Telnet.

Tip: The R&S SMW uses the port number 5025 for remote connection via Telnet.

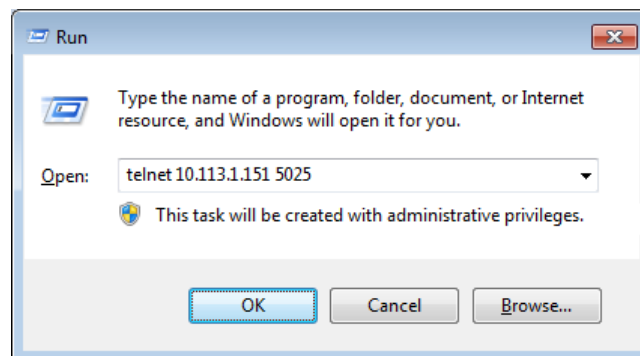


The connection to the instrument is set up and you can send remote-control commands.

To establish a remote control session over GPIB

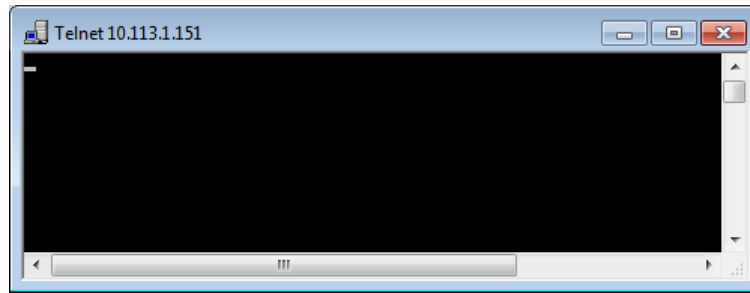

4. Telnet does not reflect your first entry.
Insert a command, e.g. *IDN and confirm with "Enter".
5. Observe the screen.
A response on the query confirms that the connection is working. The client displays all subsequent inputs and responses.
6. Even if the cursor is not visible on the screen, blindly enter a remote-control command. Confirm with Enter.

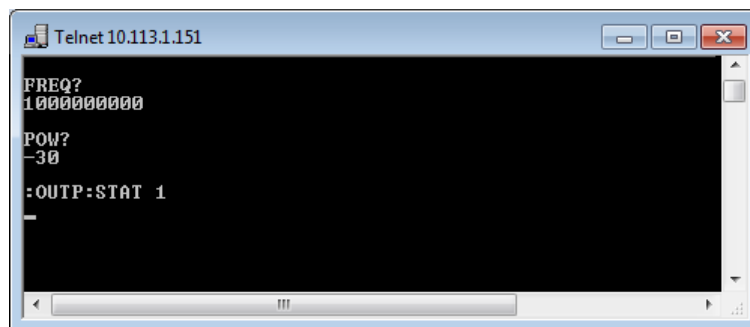

13.9 To establish a remote control session over GPIB

The program example in this section is written in VISUAL BASIC. A condition for programming in VISUAL BASIC is that the modules NIGLOBAL (Niglobal.bas) and VBIB32 (Vbib_32.bas) are added to the projects.



Drivers for instrument, for example IVI-COM and LabVIEW drivers, are available for download area on the product page at:

<https://www.rohde-schwarz.com/driver/smw200a/>

To start remote control over GPIB

1. Connect instrument and controller using a GPIB cable.
Switch them on.
2. Select "System Config > Remote Access > GPIB Address" > **"GPIB Channel Address = 28"**.
The GPIB address of the instrument must be the default value of 28.

To trace messages with the LXI web browser interface

3. Execute the following commands on the controller:

- a) Open the port to the instrument.
`CALL IBFIND("DEV1", generator%)`
- b) Inform the controller about instrument address.
`CALL IBPAD(generator%, 28)`
- c) Reset the instrument.
`CALL IBWRT(generator%, "*RST;*CLS")`
- d) Set the instrument to new address.
`CALL IBWRT(generator%, "SYST:COMM:PIB:ADDR 18")`
- e) Inform the controller about new address.
`CALL IBPAD(generator%, 18)`

The GPIB address of the instrument is changed.

4. To return to manual operation, press the LOCAL key at the front panel.

13.10 To establish a remote control session over USB

For remote control, the PC and the instrument must be connected over the USB type B interface. A USB connection requires the VISA library to be installed. VISA detects and configures the R&S instrument automatically when the USB connection is established. You do not have to enter an address string or install a separate driver.

To start remote control over USB

1. Connect instrument and controller using USB cable. Switch them on.
2. Execute the following commands on the controller:
 - a) Open the port to the instrument.
`viOpen (... , "USB::0x0AAD::0x0092::100001::INSTR", ...)`
 - b) Reset the instrument.
`viRST (generator%, "*RST;*CLS")`
 - c) Set 2 GHz frequency
`viPrintf (... , "SOUR:FREQ 2GHz\n")`
 - d) Set 20 dBm output level
`viPrintf (... , "SOUR:POW -20dBm\n")`

The RF frequency and signal level of the instrument are changed.

3. To return to manual operation, press the [LOCAL] key.

13.11 To trace messages with the LXI web browser interface

The remote trace functionality allows you to trace commands and messages exchanged via a remote control interface of the R&S SMW.

To trace messages with the LXI web browser interface

To activate SCPI remote trace

1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.
See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.
2. Connect the remote PC and the instrument in the same network.
See also [Chapter 3.1.7, "Connecting to LAN"](#), on page 33.
3. Start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMW in the browser's address bar.
The welcome page is displayed.
5. In the navigation pane, select "Diagnostics > SCPI Remote Trace".
6. In the toolbar bar of the "SCPI Remote Trace" page, select "live mode > on" and "logging > on".
"live mode > on" displays all commands and responses, and "logging > on" also traces messages.

If you now control the R&S SMW with SCPI commands, using an appropriate tool, the LXI function records the information sent and received.

The screenshot shows the LXI web browser interface for the SCPI Remote Trace page. The left sidebar contains a navigation menu with the following items: LXI, Home, Lan Configuration, Status, Utilities, Instrument Control, Web Control, Diagnostics, SCPI Remote Trace (highlighted), Help, Glossary, www.rohde-schwarz.com, Datasheet, and Production Version. The main content area is titled "SCPI Remote Trace" and features a toolbar with "live mode" (set to on), "logging" (set to on), a "filter" dropdown, a "log file" section with "refresh", "download", and "clear" buttons, and a "details" link. Below the toolbar is a table with columns "rec", "MT", and "message". The table contains several rows of data, including commands like "idn?", "opt?", "FREQ?", "LEV?", and responses like "Rohde&Schwarz, SMW200A, 1412.000K02/0.3.1.19.15-3.50.166.10". At the bottom, a "Status" section indicates "10 live records received". A copyright notice "© 2016 ROHDE&SCHWARZ. All rights reserved." is visible in the bottom right corner.

The function records all sent commands, received responses and messages, and saves them in an internal database. If "live mode" is disabled, you can display the recent traces upon request, using the "refresh" button. You can also save the log in a file.

Note: The diagnostics functionality is extended in later releases, e.g. to download or upload SCPI command files from / to the instrument.

13.12 To return to manual operation



Before returning to manual control, command processing must be completed. Otherwise, the instrument switches back to remote control immediately.

1. To return from "Remote" state to manual state, perform one of the following:
 - On the controller, use the command `>L`

Note: If `&NREN` has been set before `>L` is locked. Use `>R` instead.
 - In the status bar, select the "Remote" icon.
 - On the front panel, press the [LOCAL] key.
 - In the block diagram, select "Context sensitive menu > Key Emulation > Local"
2. **Note:** In the local lockout state, the command `>L` and the [LOCAL] key are locked. You can unlock this state only over remote control.
 To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:
 To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:
 - On the controller, use the command `&LOCS`.
 This command switches directly to manual operation.
 - Send the command `&REMS`.
 This command changes the remote control state from "Remote LLO" to "Remote".
 - Use the Visual Basic command `CALL IBLOC (generator%)`.
 The command switches directly to manual operation.
 - VISA function `viGpibControlREN()`
 This function switches directly to manual operation.

13.13 To automate tasks with remote command scripts

To achieve fast configuration, make complex test setups or repeating measurements reproducible, you can automate the required settings with scripts. A script contains a series of SCPI commands corresponding to the settings. When completed, it is converted to an executable format, saved in a file and can be run whenever needed.



If you frequently need to load and run a script, assign the script to the [USER], and you can quickly and easily perform the task.

See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

In contrast to "Recall Setup" via the [USER] key, an assigned script execution does not close active dialogs and windows. On the contrary, even active window control (open / close) is possible.

To automate tasks with remote command scripts

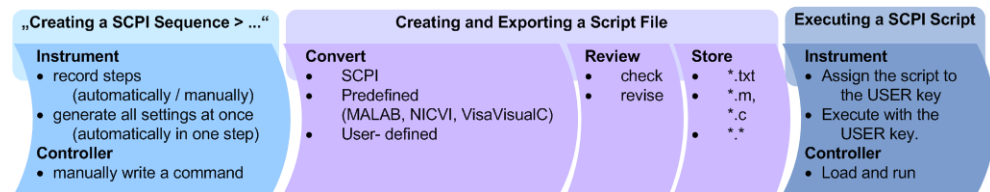


Figure 13-8: Steps for performing SCPI Scripts

In the graph, you can see the main steps required to work with a SCPI script.

Creating a SCPI list

With the SCPI record functions, you can create a SCPI command list directly in the instrument and then export the list to the controller. If you want to edit or write a script manually, use a suitable editor on the controller. Even for manually creating, the instrument supports you by showing the corresponding command syntax and the current settings value.

Directly in the instrument, you can create a SCPI list at any time of operation, in the following ways:

- **Recording steps**
Both, automatic and manual SCPI recording of settings is possible. You can start, stop and resume automatic recording, and also record individual commands manually.
 - **Manually record the steps selectively**
In manual recording mode, you can deliberately record a SCPI command with the "Add CPI Command to Recording List" function, see [How to record SCPI lists manually](#).
 - **Automatically record all performed steps**
The instrument records the SCPI command and settings value of each step you perform, and then writes the commands to the file system, see [How to record SCPI lists automatically](#).
You can also add a SCPI command manually to the recording list during automatic SCPI recording.
- **Generating all settings at once**
Generates the SCPI commands of the current instrument settings in one step, and writes the command list in a temporary list, see [How to create a SCPI list with the current instrument settings in one step](#).
Note: This function lists all commands in alphabetical order, in contrast to the recording or manual creation, which consider the order the settings are configured. Using this function can slow down the runtime or cause errors during execution. Therefore, always check and revise a script if necessary, see ["How to check a SCPI list"](#) on page 894.
- **Manually create a command script with "Copy" and paste**
Enables you to copy the SCPI command and the current setting, see [Chapter 13.13.1, "Show SCPI command"](#), on page 889.



Some parameters cannot be set by a SCPI command.

If so, *no SCPI command found* is entered instead of a command when you record or generate all settings at once.

The difference between Show SCPI Command and the provided cross-reference

If you want to enter your settings in a script, or use a remote control program, you must know the corresponding SCPI command and the exact syntax.

If you need to look up the SCPI command, the instrument offers two ways to figure it out quickly.

- "Show SCPI command" (context-sensitive menu)
Displays the SCPI command syntax of a selected parameter including the current setting value, see ["Finding out the SCPI command with the "Show SCPI Command" function"](#) on page 895.
The "Copy" function enables you to write a SCPI script conveniently by hand.
- Instrument help ([HELP] key)
Opens a help topic that describes the selected parameter or instrument function, including a cross-reference to the corresponding SCPI command. The reference leads you to the description of the SCPI command comprising the complete SCPI syntax, all available setting values, value ranges, etc.
See ["Finding out the SCPI command using the online help"](#) on page 896.

Creating and exporting a script file

When the script list is completed, a code generator translates the SCPI commands into the source code of a proprietary programming language, using a code template. Therefore, each language requires an appropriate code template. When converted, you can save the script in a file with an extension corresponding to the programming language.

The R&S SMW provides the following predefined code templates by default:

- Plain SCPI
Represents SCPI base format, that is ASCII format, saved as text file (*.txt).
- MATLAB
A programming environment, frequently used in signal processing and test and measurement applications (*.m).
You can directly use this format with MATLAB(c) Toolkit. For comprehensive information on this topic, refer to the application note [1GP60: MATLAB Toolkit for R&S Signal Generators](#).
- NICVI
An ANSI C programming environment designed for measurements and tests (*.c).
You can directly use this format with National Instruments LabWindows CVI.
- Python3
A general-purpose and high-level programming language (*.py).

You can also convert a script to a user-specific format. In this case, you need a code template with the extension *.expcodetmpl.

For information on how to select the code template and save the script in a file, see [Chapter 13.13.3, "SCPI recording export settings"](#), on page 890.

Executing a SCPI script

A SCPI script primarily runs on the controller PC. In addition, you can execute a script directly on the instrument, by assigning the script to the [USER] key.

See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

13.13.1 Show SCPI command

Access:

1. Select the parameter.
2. Open the context-sensitive menu (tap and hold).
3. Select "Show SCPI Command".

This function provides the syntax of the remote command with the current setting.

Copy

Copies the command and the current setting.

Close


Exits the "SCPI Command" dialog.

13.13.2 Displaying an SCPI list

The instrument displays a recorded SCPI list and thus provides viewing the recorded results before exporting.

- ▶ Depending on the starting point, you can access the "SCPI Recording List" dialog as follows:
 - During recording
Select "Show SCPI Recording List" in the context-sensitive menu.
 - At any time outside recording
Select "Show SCPI Recording List" in the context-sensitive menu.
This function assumes that at least one recording has been executed after power-on.
 - At the end of the recording
Select "Stop automatic SCPI recording". The dialog opens automatically.
 - After you have exported the script to a file.
Select "SCPI Recording Export > Show file content"

See [Chapter 13.13.3, "SCPI recording export settings"](#), on page 890.

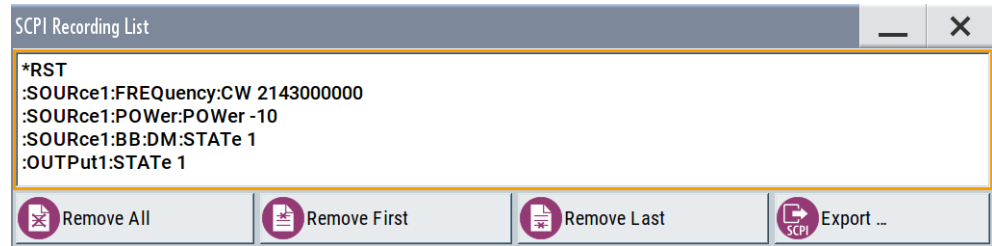

The "SCPI Recording List" shows the last recorded and exported commands.

SCPI Recording List

Lists the automatically or manually recorded recorded SCPI commands.

Export

Opens the [SCPI Recording Export](#) dialog for configuring the file parameters for export.

Remove All, Remove First, Remove Last

Deletes either the first, the last or all recorded SCPI commands.

To remove several recorded commands, repeat the removing.

For post processing, export the SCPI command list in a file, see [Chapter 13.13.5, "How to convert and save SCPI lists"](#), on page 895.

13.13.3 SCPI recording export settings


Scripts are configured and saved in the "SCPI Recording Export" dialog. This dialog opens automatically, when you stop recording.

Access:

1. Select "Show SCPI Recording List" in the context-sensitive menu.

The "SCPI Recording List" dialog opens.

2. Select "Export".

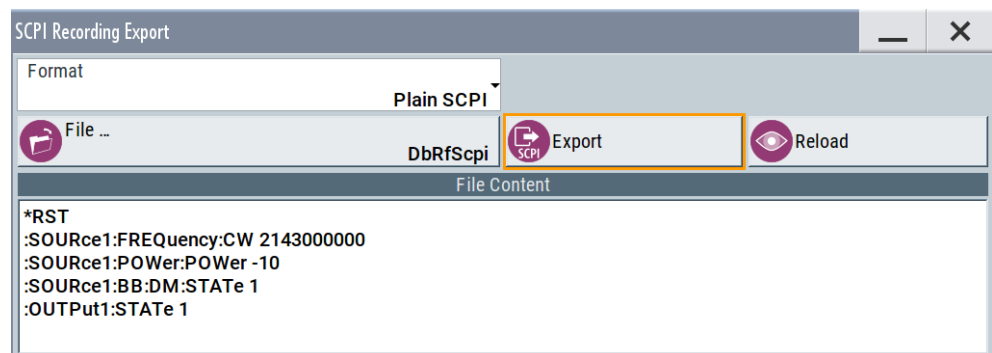

The "SCPI Recording Export" dialog contains all functions required for export of command lists to a file. It enables you to select the source code format, assign an individual filename and display the file content.

Format

Selects the source code format for the command list.

"Plain SCPI" Uses SCPI syntax.

"Predefined Code Generator"

Accesses the predefined templates for common source code generators that convert the recorded settings in the programming languages MATLAB or NICVI or Python.

"User Code Generator"

Use this setting to convert a script by a user-specific code generator.

Select Code Template

Opens the standard "File Select" dialog and lists the predefined or user-defined code templates.

See [Chapter 11.5.1, "File select settings"](#), on page 715.

File

Opens the standard file select dialog "Select Output File", see [Chapter 11.5.1, "File select settings"](#), on page 715.

Export

Executes data export.

The SCPI list is saved in as file with the selected filename and in the selected directory, see [File](#).

Reload

Reloads a SCPI list from a file.

You can export recorded SCPI lists to files (see [File](#) and [Export](#)), that can be modified.

File content

Displays the content of the script in the selected format and code template.

13.13.4 How to record / create SCPI lists

How to record SCPI lists automatically

The following example briefly explains how to proceed when you want to record SCPI lists.

For comprehensive description, see [1GP98: SCPI Recorder Test Automation on a Fingertip](#).

1. On the screen, open the context-sensitive menu (touch and hold, or right mouse click) and select "Start SCPI recording".



Start SCPI Recording

Starting from now, all steps you perform are recorded.

2. To stop SCPI recording, select "context-sensitive menu > Stop SCPI recording".



Stop SCPI Recording

The "SCPI Recording List" dialog opens automatically.

3. Proceed with [How to check a SCPI list](#).

How to record SCPI lists manually

1. To retrace your settings, open the context-sensitive menu and select "Mark all Parameters Changed from Preset".



Mark All Parameters Changed from Preset

This function identifies and highlights all settings you have changed, both in the block diagram, and in the dialogs.

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

2. For selectively recording your steps:
 - a) Set the parameter.
 - b) Open the context-sensitive menu.
 - c) Select "Add SCPI Command to Recording List"



Add SCPI Command to Recording List

 
Tip: You cannot see "Add SCPI ..." in the menu?

A possible reason is opening the menu outside of a dialog or input field, for example in a block diagram. Open the context-sensitive menu within the corresponding dialog or input field, and the feature is available.

- d) Continue with the next setting, and repeat steps *a to b* whenever needed.

Each time you select "Add SCPI ...", the SCPI command is appended to a temporary list.

3. To check the progress of the recording, select "Context-Sensitive > Show SCPI Recording List".



The "SCPI Recording List" dialog opens, displaying all recorded settings so far.


4. Proceed with [How to check a SCPI list](#).

How to create a SCPI list with the current instrument settings in one step

You can also generate a SCPI list from a manually created instrument state at any time, in only one step.

To generate a SCPI list with commands for all settings performed:

1. Select "Save/Recall > SCPI Export".

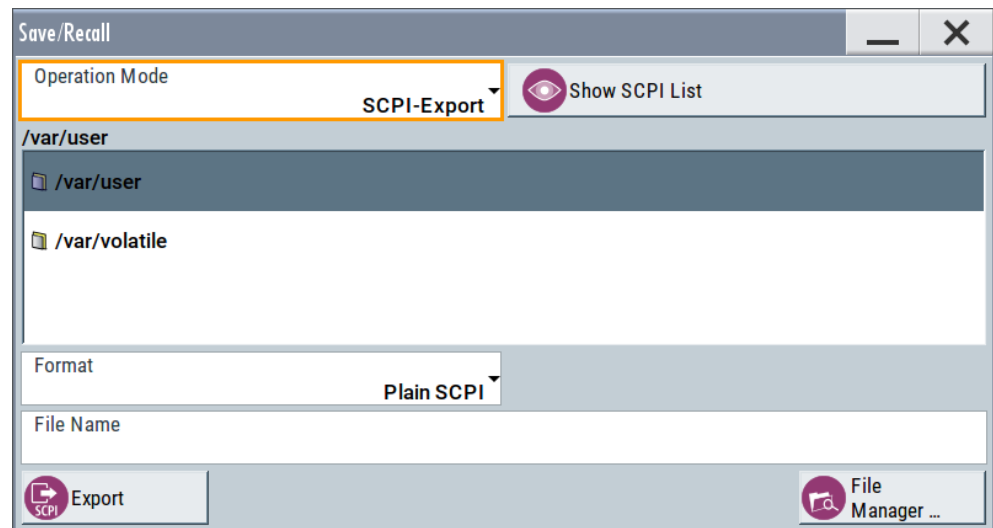

The instrument opens the standard file select dialog, see [Chapter 11.4.1, "Save/recall settings"](#), on page 710.

2. In the "Format" entry field, select the source code.
3. Depending on the selected format, convert the script as described in [Chapter 13.13.5, "How to convert and save SCPI lists"](#), on page 895
4. Enter a filename.
5. Select "Export".
The instrument writes all SCPI commands of the key parameters and the modified settings in the file. Also assigns the file extension automatically according to the source code format.
6. To preview the content of the SCPI list:
 - a) Select SAVE/RCL.
 - b) Select "Operation Mode > SCPI-Export".

- c) In the `/var/user/` directory, select a previously saved file.
- d) Select "Show SCPI List".



```

SCPI List
*RST
:SOURce1:FREQuency:CW 2143000000
:SOURce1:POWer:POWer -10
:SOURce1:BB:DM:STATe 1
:OUTPut1:STATe 1
  
```

The list of all SCPI commands is displayed, for example, for a final check.



Exporting the SCPI list of the instrument state in one step is a fast and convenient method. Nevertheless, it usually requires postprocessing on an external PC.

How to check a SCPI list

The easiest way to check a list, is to execute it. The generator returns a warning if a setting could not be performed.

However, we recommend that you check the list and possibly rework. It can be that ...

- A parameter has not assigned a SCPI command or an element of the user interface has not an assigned parameter. In these cases, `:SYST:INF:SCPI 'SCPI command not available'` is entered in the list instead. Such entries are also detected during execution. The instrument recognizes these incomplete commands and displays an error message.
- A preset has been executed, but several standards then perform some internal settings that are also assigned to the list with "SCPI Export".
- After a preset still some settings are defined, which are then written to the list generated with "SCPI Export."

Some suggestions on how you can check and revise a list:

1. Search and remove missing command entries.
2. Remove unnecessary content written after a preset.
3. Rearrange the commands to a reasonable order. If you, for example, set a `STATe` command to the last position of a list, you can avoid intermediate calculations of the signal.
4. Preview the list for completeness by comparing it with the modified settings in the manual mode.
 - a) To retrace your settings in manual operation, open the context-sensitive menu and select "Mark all parameters changed from preset". The function identifies all settings you have changed, both in the block diagram, and in the dialogs. They appear orange.
 - b) Check whether there is a command in the list for all modified settings.

5. To perform modifications, export the list to a PC, using for example a USB flash drive.

13.13.5 How to convert and save SCPI lists

After completing the recording, the "SCPI Recording Export" dialog opens.

1. Select the "Format" for the command syntax in which you want to save the list.
2. "Select Code Template"

Depending on the selected format, proceed accordingly:

Note: Select the code template **before** exporting.

 - a) Plain SCPI

Continue with the next step.
 - b) Predefined code generator

The "SCPI Recording Export - Select Predefined Code Template" dialog opens. Select one of the predefined code templates.
 - c) User code generator

A file system ("SCPI Recording Export - Select User Code Template") dialog opens. Select your user-defined code template. The code template must have file extension *.expcodetmpl.
3. Select "File..."

The "SCPI Recording Export - Select Output File" dialog opens.
4. Select "New" and assign a filename for saving the recorded list.
5. In the "SCPI Recording Export" dialog, select "Export".

Saves the recorded data either in ASCII format (plain SCPI), or in the corresponding format of the used code template, and shows the SCPI list in the "File Content" section.

13.13.6 How to find out the SCPI commands for GUI functions


Finding out the SCPI command with the "Show SCPI Command" function

1. To find out the SCPI command of a parameter in manual operation, select the parameter.
2. Open the context-sensitive menu and select "Show SCPI command"



You get the detailed command syntax, including the currently set value.

To automate tasks with remote command scripts

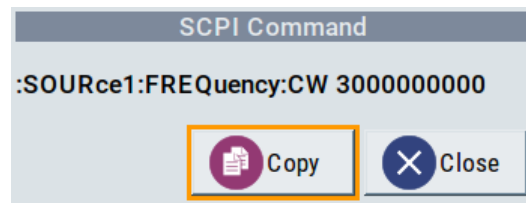

With the "Copy" function, you can conveniently paste the command including the current setting, e.g., in a command script.

Finding out the SCPI command using the online help


If you are looking for the remote command to a function in manual operation, you find it in the description of the online help.

1. To find out the SCPI command of a parameter in manual operation, select the respective parameter.
2. To open the corresponding help topic, select one of the following:
 - In the display, select "context-sensitive menu > Help".



- On the front panel, press the [HELP] key.

The help topic opens. Apart from the function description, it contains the SCPI command in detailed syntax.

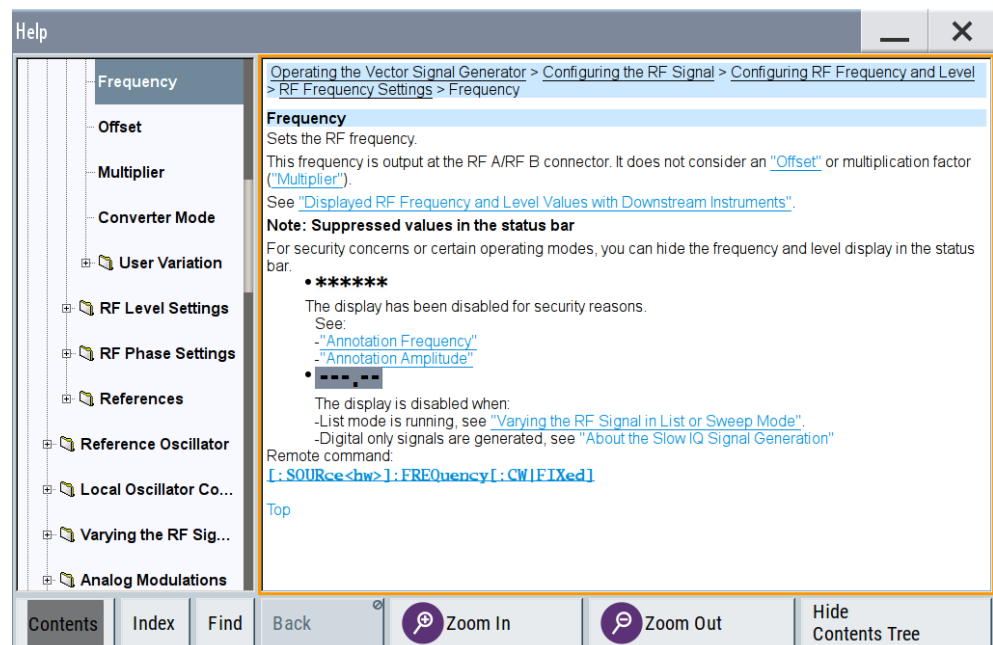


How to find the corresponding GUI function to a command

Conversely, if you are looking for a function in the GUI, which belongs to a SCPI, you find it via a cross-reference in the online help and in the user manual.

Finding out a function in manual operation corresponding to a SCPI command

If you are searching for the associated function to a remote command in the manual operation (GUI), proceed as follows:

1. Point of origin is the description of a remote control command in the user manual, in the following example the "Trigger Mode" of the digital modulation dialog:

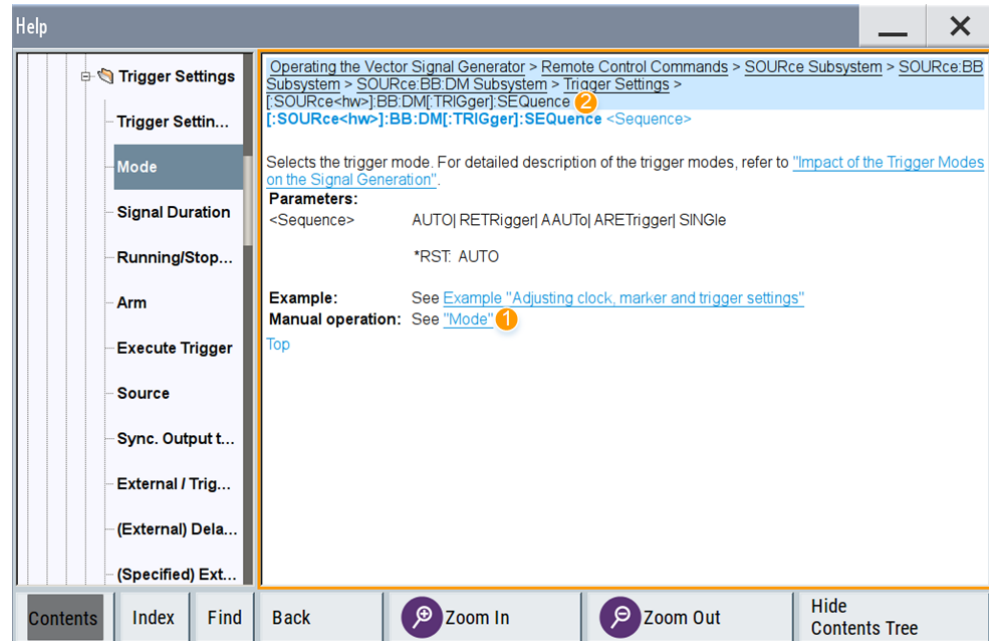


1 = Path for tracing with location of the current topic (breadcrumbs navigation)

2 = Cross-reference to corresponding topic in manual control

2. To find the corresponding function in manual control, select the cross-reference.

In the description of the manual control, you find additional information on the parameter. You can follow the link in the breadcrumbs navigation area (2) and find out to which dialog and functional block the parameter belongs.

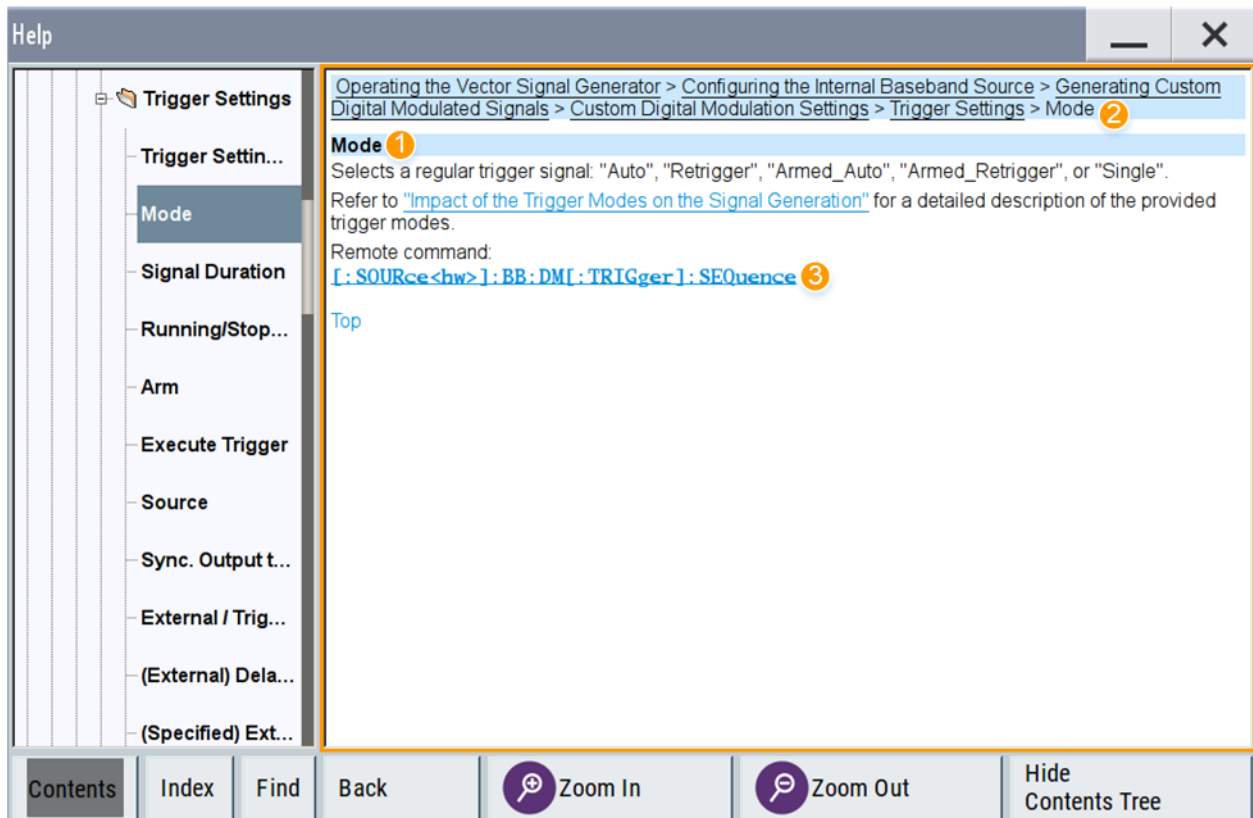

1 = Path for tracing (breadcrumbs navigation)

2 = Description of the function in manual control

3 = Cross-reference to return back to the SCPI command

13.14 To operate the instrument using VNC

This section shows you some examples of the various possibilities to set up remote operation.

- Using a desktop system
 - [Chapter 13.14.2.1, "Using a web browser"](#), on page 899
 - [Chapter 13.14.2.2, "Using a VNC client software"](#), on page 899
- Using a smart device
 - [Chapter 13.14.3.1, "Using a VNC app"](#), on page 902
 - [Chapter 13.14.3.2, "Using a web browser with HTML5"](#), on page 903
 - [Chapter 13.14.3.3, "Special mode QR code"](#), on page 903

13.14.1 How to enable the VNC service

1. **NOTICE!** Enabled VNC service can lead to unauthorized access.

Change the computer name and password of the instrument.

See [Chapter 12.7.5, "How to prevent unauthorized access"](#), on page 810.

2. Select "System Config > Setup > Security > Security > LAN Services".
3. Select "VNC > On".
4. Enter the [Security Password](#).
5. Select "Accept".

13.14.2 How to set up remote operation from a desktop system

13.14.2.1 Using a web browser

The R&S SMW supports remote operation via VNC with any web browser, like Windows Internet Explorer or Mozilla Firefox for instance, or alternatively, an HTML5 web browser.

To operate the instrument via a web browser remotely:

1. Install the *JRE (Java Runtime Environment)* on the remote computer.
Note: Skip this step if you are working with an HTML5 web browser.
2. Type the instruments' IP address in the address field of the web browser on your PC, e.g. *http://10.113.1.151*

The VNC authentication screen appears.

3. Enter the password and confirm with "OK".
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

13.14.2.2 Using a VNC client software

A VNC client software is an application which can be used to access and control the instrument from a remote computer through a LAN connection.

The VNC client software for setting up the connection is included in the operating system Linux/Unix per default. For Windows operating systems, a VNC client software must be installed manually.

Various free-of charge programs such as Ultr@VNC or similar VNC client programs are available for download on the Internet.

Setting up the VNC connection on a Linux/Unix desktop client

1. Start a web browser on the remote computer. Enter the IP address of the instrument.


To operate the instrument using VNC

2. Enter the following address:
`vnc://<IP-address of the instrument>`, for example `vnc://10.113.1.151`.
 A dialog opens requesting the password for the remote VNC connection.
3. Enter the password and confirm with "OK".
 The default password is *instrument*.


After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

Setting up the VNC connection on a Windows desktop client

1. Install the VNC viewer program component on the remote computer.
 - a) On the Internet, select a VNC client program and download it onto your PC.
 For example the free of charge software Ultr@VNC (`vncviewer.exe` is available, see <http://www.uvnc.com/download/index.html>).
 - b) Execute the VNC client installation.
 - c) Select the VNC viewer program component and follow the installation instructions.
2. Start VNC viewer program component on the PC.

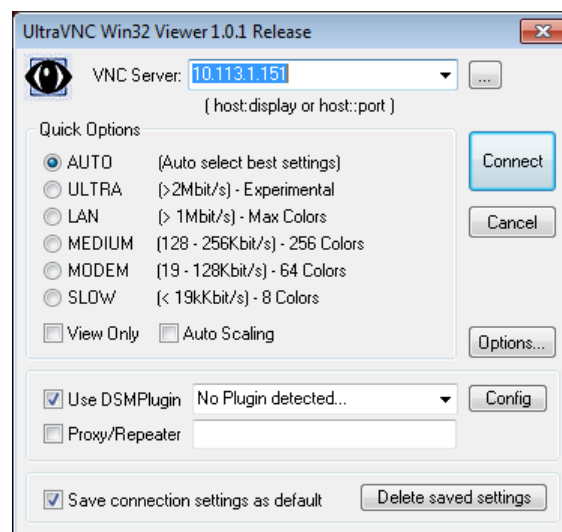

3. Select "VNC Server" and enter the IP address of the instrument.
4. To initialize the connection, select "Connect".
 A dialog opens requesting the password.

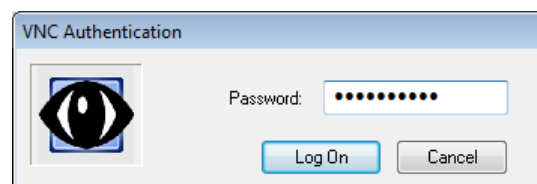

5. Enter the password and confirm with "OK".

The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

Terminating VNC connection

- Perform one of the following:
 - a) On an external Unix/Linux PC, close the Internet browser or the signal generator window.
 - b) On an external Windows PC, close the VNC viewer program.

The connection is terminated but not disabled. It can be established again anytime. In the "Active Connections" tab, the displayed TCP/IP connection disappears. See [Chapter 12.7.5, "How to prevent unauthorized access"](#), on page 810.

13.14.3 How to set up remote operation from a smart device

The R&S SMW supports remote operation via VNC from a smart device (remote client), like a tablet (tablet computer) or a smartphone. The smart device accesses the instrument via WLAN, either by a suitable App, or an HTML5 web browser, that means with embedded *javascript*.

There are several possibilities to establish a WLAN connection between the smart device and the R&S SMW. This section gives an example of how a network environment can be built up, and some essential configuration steps.

For more information, see:

- [1MA216: Remote Operation of Windows Based Instruments with Apple iPad](#)
- [7BM82: Apple iPad Remote Control of Broadcasting T&M Instruments](#)

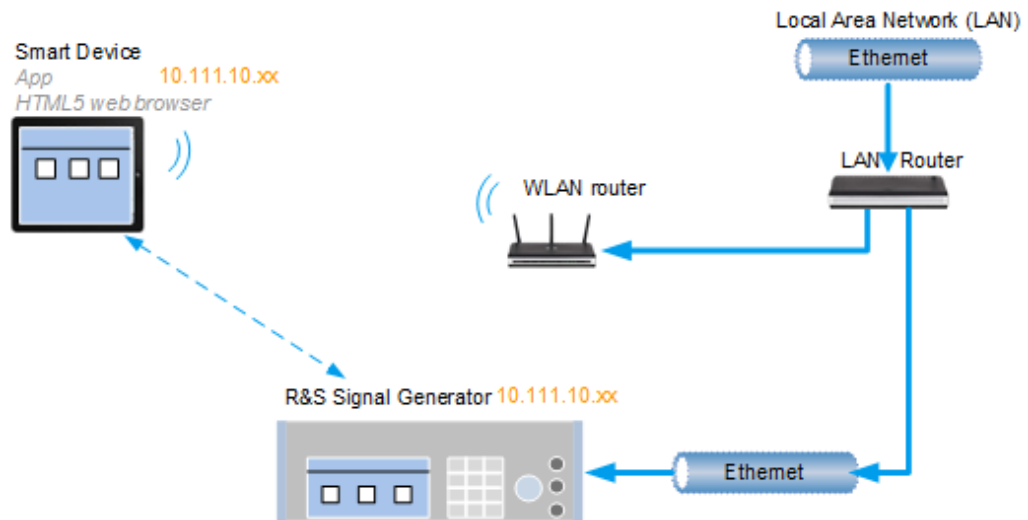
Example:

Figure 13-9: Example of a network configuration for remote operation with a smart device

As shown in the figure, the R&S SMW and the WLAN router are connected to the LAN router. The smart device accesses the Rohde & Schwarz instrument via the WLAN router.

Prerequisites

For this network configuration, the following prerequisites must be met:

- The required equipment is:
 - A LAN router
 - A WLAN router (hot spot)
Required for accessing the R&S SMW
- The smart device must be known and accepted in the network of the R&S SMW.
- The App or web browser implements the VNC functionality on the smart device for remote operation.

It is recommended that all components in the network use DHCP, which automatically assigns the relevant address information.



With the configuration in the example, you can reach the instrument from a great distance, since the WLAN router acts as an additional access point.

13.14.3.1 Using a VNC app

Using a VNC App enables the smart device to access the R&S SMW via WLAN.

The VNC Apps are available from various manufacturers of the smart devices.

The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website to find out whether a VNC App is available for your device, and how it is installed.
2. In the network, establish the connection of the WLAN router to the LAN router. We assume the connection of the LAN router and the R&S SMW and their configuration in the LAN.
3. Configure the WLAN router according to the manufacturer's instructions.
4. Install the required *VNC App* on your smart device.
5. On the smart device, start the *VNC App*.

6. In the address field, enter the IP address of the instrument.

A log-on dialog opens and requests the password for the VNC connection.

7. Enter the password to establish the remote access.

The default user name and password is *instrument*.

See [Chapter 12.7.5, "How to prevent unauthorized access"](#), on page 810.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

13.14.3.2 Using a web browser with HTML5

The R&S SMW supports remote operation from a smart device via VNC with any HTML5 compliant web browser, like Internet Explorer, Firefox, Google Chrome, or Safari for instance.

To operate the instrument remotely via a web browser, proceed as follows:

1. In the web browser enter the IP address of the instrument, e.g. *http://10.113.1.151*.
2. Type the instrument IP address in the address field of the web browser on your PC, e.g. *http://10.113.1.151*

The VNC authentication screen appears.

3. Enter the password and confirm with "OK".

The default password is *instrument*.

See [Chapter 12.7.5, "How to prevent unauthorized access"](#), on page 810.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

13.14.3.3 Special mode QR code

If your smart device is equipped with a camera and a QR code reader, you can scan the instrument's IP address or access the instrument with the Safari web browser.

QR code readers are available from various manufacturers of the smart devices.

The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website of your smart device to find out whether a reader is available for your device, and how it is installed.
2. Install the required QR code reader software on your device.
3. Start the reader.
4. On the R&S SMW, select "System Config > Remote Access".
5. In the "Remote Access" dialog, select the "QR-Code" tab.
6. Scan the QR code of the instrument with your smart device.
7. On the device, decode the scanned QR code and pass it to the web browser.
A dialog opens requesting the password for the VNC connection.
8. Enter the password and confirm with "OK".
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

13.15 References

13.15.1 LXI functionality

LAN Extensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology.

LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. Like GPIB, LXI determines and standardizes the way the instrument behaves in a LAN.

The LXI implementation in the R&S SMW allows you to change certain LAN settings, to reset the LAN connection, and to identify the instrument.



For information about the LXI standard, refer to the LXI website at <http://www.lxistandard.org>.

See also "News from Rohde & Schwarz, article 2006/II - 190".

The LXI functionality in the R&S SMW is characterized by a common LAN implementation, including an ICMP ping responder for diagnostics. Using a web browser, you can configure the instrument. A LAN Configuration Initialize (LCI) mechanism resets the LAN configuration. The instrument also supports automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.

In addition, the R&S SMW provides the following LXI-related functionality:

- Integrated "LXI Status" dialog for LXI status indication and reset of the LAN configuration, see [Chapter 13.6.1, "LXI status settings"](#), on page 861.
- "LXI Browser Interface", as described in [Chapter 13.6.2.1, "LAN configuration"](#), on page 864.
- "SCPI Remote Trace" utility, see [Chapter 13.6.2.2, "SCPI remote trace"](#), on page 866.



Firmware update

To enable the full LXI functionality after a firmware update, shut down and restart the instrument.

13.15.2 Code generator templates

This section describes the main structure of the code generator templates, and shows the method with the NICVI template.

The code generation is controlled by templates with the following blocks:

Command	Function
#EXTENSION_START #EXTENSION_END	Defines the output file extension.
#INIT_CODE_START #INIT_CODE_END	Contains initial entries, such as included files and libraries, buffer size, commands for synchronization, or creating a VISA session. All entries between start and end are written once at the beginning of the output file.
#COMMAND_CODE_START #COMMAND_CODE_END	Frame for a SCPI command. A command is accessed with %COMMAND.
#NO_COMMAND_CODE_START #NO_COMMAND_CODE_END	Frame for a parameter with no SCPI command available. A parameter is accessed with %PARAMETER.
#EXIT_CODE_START #EXIT_CODE_END	Closes the visa session. All entries between start and end are written once at the end of the output file.

Templates are created in ASCII format with file extension *.expcodetempl.

Example:

Example to the code generator template NICVI.expcodetmpl:

```
#EXTENSION_START
.c
#EXTENSION_END

#INIT_CODE_START
```

```

#include <ansi_c.h>
#include <visa.h>
#include <cvirte.h>

#define MAX_BUFFER_SIZE 200
static ViStatus status;
static ViSession defaultRM, handle;

static void write_command(char *command)
{
    char writeBuffer[MAX_BUFFER_SIZE];
    char readBuffer[MAX_BUFFER_SIZE];
    int length;
    int readCount;

    strcpy(writeBuffer, command);
    //append "*OPC?" to sync
    strcat(writeBuffer, "*OPC?");
    length = strlen (writeBuffer);
    writeBuffer[length]='\n';
    length = length+1;
    viWrite (handle, writeBuffer, length, VI_NULL);
    //read result
    viRead(handle, readBuffer, 100, &readCount);
}

int main (int argc, char *argv[])
{
    if (InitCVIRTE (0, argv, 0) == 0)
        return -1;    /* out of memory */
        //create a VISA session and return a handle to it
    viOpenDefaultRM (&defaultRM);
        //create a VISA session to the serial port and return a handle to it
    viOpen (defaultRM, (ViRsrc)"TCPIP::localhost::INSTR", VI_NULL, VI_NULL,
&handle);
#INIT_CODE_END

#COMMAND_CODE_START
    write_command("%COMMAND");
#COMMAND_CODE_END

#NO_COMMAND_CODE_START
    //no SCPI command available for parameter %PARAMETER !
#NO_COMMAND_CODE_END

#EXIT_CODE_START
    viClose (handle);
    viClose (defaultRM);
    return 0;
}

 
```

```
}
#EXIT_CODE_END
```

13.15.3 Remote control states

How to recognize if there is an active remote connection to the instrument

- Observe the indication on the taskbar.



A softkey in the taskbar indicates if and what kind of remote connections are currently set up.

See also [Chapter 13.5.6, "Remote connections settings"](#), on page 848.

The following table shows the different remote control states and the associated commands or actions to return to manual control.

Table 13-8: Remote control status icons

GUI symbol	Transition to remote control state...	Transition to manual operation...(local state)
	>R (controller) Remote control, but usable front panel keys. The parameters are in read-only mode.	<ul style="list-style-type: none"> • &GTL (controller) • Tap the "Remote" icon (display) • [LOCAL] (front panel or key emulation)
		A currently performed setting is indicated by the green arrows. The setting must be completed (white arrows), otherwise the instrument remains in remote state.
	&LLO (controller) Remote control with locked front panel keys to prevent user interaction. The parameters are in read-only mode. You can unlock LLO, and thus return to manual operation only via remote control.	<ul style="list-style-type: none"> • &LOCS (controller) • CALL IBLOC (generator%) (controller) Note: The command &REMS returns to "Remote" state.

14 Remote control commands

In the following, all remote-control commands are presented in detail with their parameters and the ranges of numerical values.

For an introduction to remote control and the status registers, see [Chapter 13, "Network operation and remote control"](#), on page 819.

14.1 Conventions used in SCPI command descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**
If not specified otherwise, commands can be used both for setting and for querying parameters.
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**
If not specified otherwise, a parameter can be used to set a value and it is the result of a query.
Parameters required only for setting are indicated as **Setting parameters**.
Parameters required only to refine a query are indicated as **Query parameters**.
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**
Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S SMW follow the SCPI syntax rules.
- **Asynchronous commands**
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (*RST)**
Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as ***RST** values, if available.
- **Factory preset values**
Default parameter values that are reset only by factory preset.
- **Default unit**
The default unit is used for numeric values if no other unit is provided with the parameter.
- **Manual operation**
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

14.2 Backward compatibility with other Rohde & Schwarz signal generators

To allow you to use your existing scripts, the R&S SMW accepts also a defined subset of SCPI parameter values of other Rohde & Schwarz signal generators, like the R&S SMU. The R&S SMW accepts these values and maps them automatically to the corresponding newly introduced parameters.



Handling of parameters provided for backward compatibility with other Rohde & Schwarz signal generators

The parameter values provided for backwards compatibility are "setting only" values; the query commands return the corresponding new value.

Example:

```
SOURcel:BB:ARbitrary:TRIGger:SOURce EXTernal
```

The backwards compatibility parameter value `EXTernal` is accepted

```
SOURcel:BB:ARbitrary:TRIGger:SOURce?
```

Response: `EGT1`

The query returns the correct new value

14.3 SCPI command aliases for advanced mode with multiple entities

When working in [Advanced mode](#), the R&S SMW can generate the signal of several entities. An entity is a *self-contained independent system*, consisting of a baseband source, a fading simulator, a noise generator (AWGN), and an RF part.

Additional *baseband*, *fading*, and *AWGN* SCPI commands are provided to allow consistent addressing of the entities in remote control. All these commands start with the mnemonic (keyword) **ENTity**.

The additional SCPI commands are not listed in this description because their syntax is straightforward: the mnemonic **ENTity** is prepended to the existing SCPI header.

Addressing entities in remote control

You can address entities in remote control via keywords **ENTity** and **Source**. Consider the interdependency in the suffix ranges. Note also, that the meaning of the keyword `SOURce<hw>` changes.

The figures [Figure 14-1](#) and [Figure 14-2](#) highlight the differences. The figures illustrate the same LxMxN configuration but address the entities in the following two ways:

- By using the SCPI commands starting with the keyword **SOURce**.

SCPI command aliases for advanced mode with multiple entities

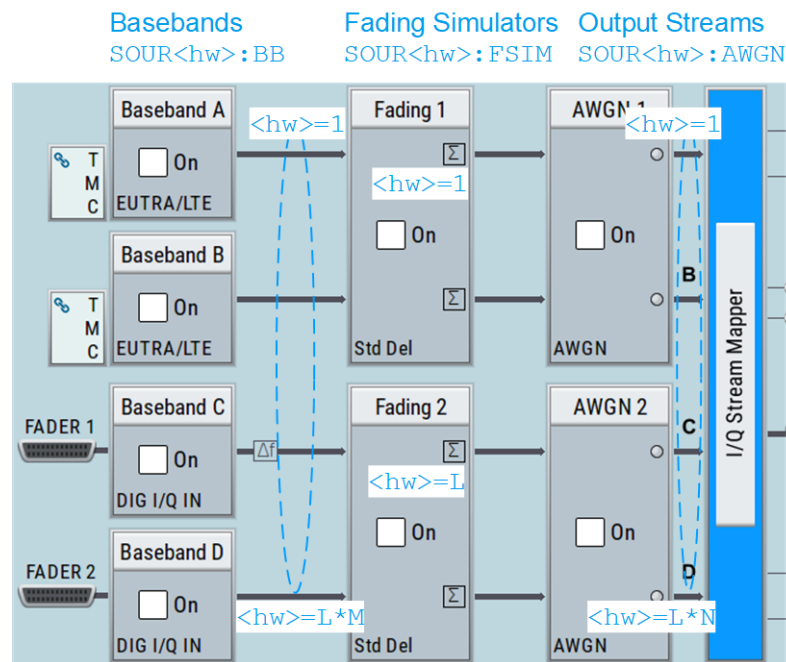


Figure 14-1: Source<hw> only representation

- By using the alias commands that start with the keyword ENTity.

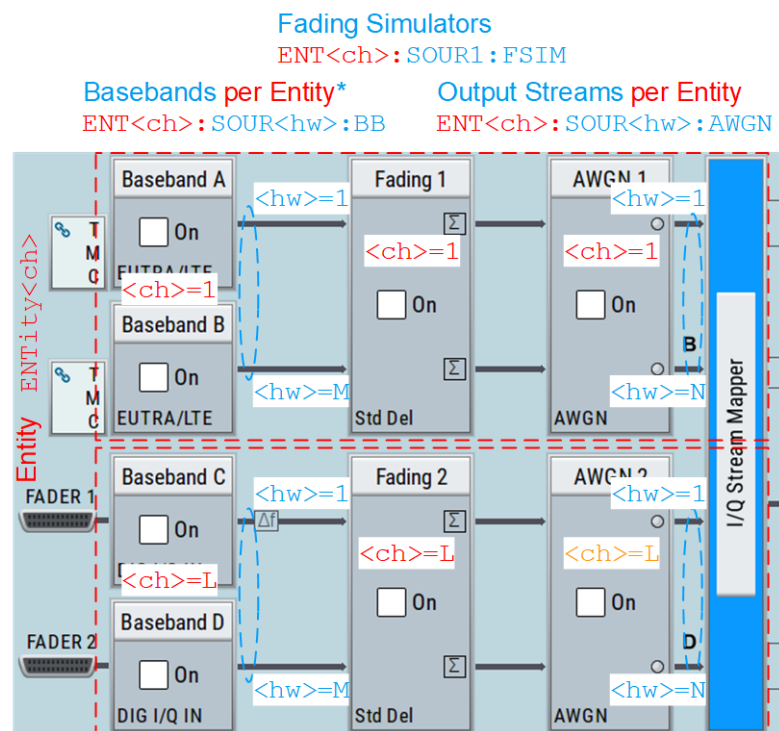


Figure 14-2: ENTity<ch>:SOURce<hw> combination

*) applies for:

— SOUR:BB:FOFF | POFF | PGA

- SOUR:BBIN:...
- SOUR:BB:..., if separate baseband sources are used

LxMxN is the short form of the used system configuration, where:

- L represents the [Entity](#)
- M the [Baseband](#)
- N the [Stream](#)

Example:

- "System Configuration > Mode > Advanced"
- "Entities = 2", "Basebands = 2", "Streams = 2"
- "BB Source Config > Separate Source"

The command `ENTity2:SOURce1:BB:EUTRa:STATe 1` enables the generation of an EUTRA/LTE signal in the first baseband within the second entity.

It is equivalent to `:SOURce3:BB:EUTRa:STATe 1`.

Logically, also the following command pairs are equivalent to each other:

- `ENTity2:SOURce1:FSIMulator:STATe` and `SOURce2:FSIMulator:STATe`
- `ENTity2:SOURce1:AWGN:STATe` and `SOURce3:AWGN:STATe`
- `ENTity2:SOURce1:BB:FOFF` and `SOURce3:BB:FOFF`
- `ENTity2:SOURce1:BBIN:DIG:SOUR` and `SOURce3:BBIN:DIG:SOUR`



You can find the corresponding commands also with the "Show SCPI command" functions in the context menu of parameters.

See ["Finding out the SCPI command with the 'Show SCPI Command' function"](#) on page 895.

14.4 Programming examples

The corresponding sections of the same title provide simple programming examples for the R&S SMW. The purpose of the examples is to present **all** commands for a given task. In real applications, one would rather reduce the examples to an appropriate subset of commands.

The programming examples have been tested with a software tool which provides an environment for the development and execution of remote tests. To keep the examples as simple as possible, only the "clean" SCPI syntax elements are reported. Non-executable command lines (for example comments) start with two // characters.

At the beginning of the most remote control program, an instrument (p)reset is recommended to set the R&S SMW to a definite state. The commands `*RST` and `SYSTem:PRESet` are equivalent for this purpose. `*CLS` also resets the status registers and clears the output buffer.

In all the examples we assume that:

- A remote PC is connected to the instrument
- The remote PC and the instrument are switched on
- A connection between them is established
- The security setting "System Config > Setup > Security > SCPI over LAN" is enabled.

14.5 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CLS.....	912
*ESE.....	912
*ESR?.....	913
*IDN?.....	913
*IST?.....	913
*OPC.....	913
*OPT?.....	914
*PRE.....	914
*PSC.....	914
*RCL.....	914
*RST.....	915
*SAV.....	915
*SRE.....	915
*STB?.....	915
*TRG.....	916
*TST?.....	916
*WAI.....	916

*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONable` and the `OPERation` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***ESR?**

Event status read

Returns the contents of the event status register in decimal form and then sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: Rohde&Schwarz, SMW200A,
1412.0000K02/102030, 4.00.023

Usage: Query only

Manual operation: See ["IDN String"](#) on page 848
See ["Hardware Options/Software Options"](#) on page 1364

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

*OPT?

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the data sheet.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

Manual operation: See ["OPT String"](#) on page 848
 See ["Hardware Options/Software Options"](#) on page 1364

*PRE <Value>

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*PSC <Action>

Power on status clear

Determines whether the contents of the `ENABLE` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1
 0
 The contents of the status registers are preserved.
 1
 Resets the status registers.

*RCL <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command [*SAV](#) with the associated number.

It also activates the instrument settings which are stored in a file and loaded using the `MMEMory:LOAD <number>, <file_name.extension>` command.

Manual operation: See ["Recall Immediate x"](#) on page 713

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

Manual operation: See ["Preset"](#) on page 704

***SAV <Number>**

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command [*RCL](#) with the associated number.

To transfer the stored instrument settings in a file, use the command `:MMEMory:STORe:STATe`.

Manual operation: See ["Save Immediate x"](#) on page 712

***SRE <Contents>**

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents>	Contents of the service request enable register in decimal form. Bit 6 (MSS mask bit) is always 0.
Range:	0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

*TRG corresponds to the INITiate:IMMediate command.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

Return values:

<ErrorCode>	integer > 0 (in decimal format) An error occurred. (For details, see the Service Manual supplied with the instrument).
	0 No errors occurred.

Usage: Query only

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

14.6 Preset commands

The preset commands are not bundled in one subsystem. Therefore, they are listed separately in this section.

In addition, a specific preset command is provided for each digital standard. These specific commands are described in the associated subsystems.

Four presetting actions are available:

- Activating the default state of all internal instrument functions (*RST on page 915). Functions that concern the integration of the instrument into a measurement setup are not changed, e.g. reference oscillator source settings.

- Activating the preset state of the parameters related to the selected signal path (`:SOURce<hw>:PRESet` on page 917)
- Activating the preset state of all parameters that are not related to the signal path (`:DEVice:PRESet` on page 917)
- Activating the original state of delivery (factory reset, `:SYSTem:FPRreset` on page 918). Only functions that are protected by a password remain unchanged as well as the passwords themselves.



When resetting, the following deviation between remote and manual control exists:

In contrast to the [PRESET] key, the SCPI commands `*RST` and `:SYSTem:PRESet` do not close open dialogs in the GUI.

<code>:DEVice:PRESet</code>	917
<code>:SOURce<hw>:PRESet</code>	917
<code>:SYSTem:PRESet</code>	917
<code>:SYSTem:FPRreset</code>	918

`:DEVice:PRESet`

Presets all parameters which are not related to the signal path, including the LF generator.

Example: `DEV: PRES`
 Presets all instruments settings that are not related to the signal path.

Usage: Event

`:SOURce<hw>:PRESet`

Supported in 2x1x1 configurations:

- `:SCONfiguration:MODESTANdard`
- `:SCONfiguration:MODEADVanced` with
`:SCONfiguration:FADIngFAAFBB`

Presets all parameters which are related to the selected signal path.

Fading simulator (if available) and the transient recorder are only preset by the command `*RST`.

Example: `SOUR: PRES`
 Presets all settings that are related to signal path

Usage: Event

`:SYSTem:PRESet`

Triggers an instrument reset. It has the same effect as:

- The [PRESET] key.

However, the command does not close open GUI dialogs like the key does.

- The `*RST` command

For an overview of the settings affected by the preset function, see [Table 11-1](#)

Example: `SYST:PRES`
All instrument settings (also the settings that are not currently active) are reset to their default values.

Usage: Setting only

:SYSTem:FPRreset

Triggers an instrument reset to the original state of delivery.

Example: `SYST:FPR`
All instrument settings (also the settings that are not currently active) are reset to the factory values.

Usage: Event

Manual operation: See ["Execute Factory Preset"](#) on page 705

14.7 MMEMory subsystem

The `MMEMory` subsystem (Mass MEMory) contains the commands for managing files and directories as well as for loading and saving complete instrument settings in files.

Mass storage location

Without any additional measures, the R&S SMW stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

Default storage location

The R&S SMW stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 11.8, "Using the file manager"](#), on page 720. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

14.7.1 File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: CLOCK\$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN
They are reserved by the operating system.

File extension

The file and the optional file *extension* are separated by a period sign. The R&S SMW distinguishes the files according to their extensions; each type of file is assigned a specific file content and hence a specific file extension. Refer to [Chapter E, "Extensions for user files"](#), on page 1423 for an overview of the supported file extensions.

Wildcards

The two characters "*" and "?" function as "wildcards", i.e. they are used for selecting several files. The "?" character represents exactly one character, while the "*" character represents all characters up to the end of the filename. "*.*" therefore represents all files in a directory.

Filename and file path

When used in remote control commands, the parameter <filename> is specified as a string parameter with quotation marks. It can contain either the complete path including the root user directory /var/user and filename, or only the filename. The filename must include the file extension. The same applies for the directory /var/volatile and for the parameters <directory_name> and <path>.

Depending on how much information is provided, the values specified in the parameter or with the command MMEM:CDIR are used for the path and drive setting in the commands.

14.7.2 Accessing files in the default or in a specified directory

For better overview and easy file handling, you may not save all user files in the user directory /var/user but rather organize them into subdirectories.

The command syntax defines two general ways to access files with user data in a *specific* directory:

- **Change the current default directory** for mass memory storage and then directly access the files in this default directory, like saved list files, files with user data or save/recall files.
(See [Example"Save the user settings in a file in a specific directory"](#) on page 920).
The subsequent commands for file handling (select, delete, read out files in the directory, etc.) require only specification of the filename. File extension can be omitted; after syntax evaluation of the used command, the R&S SMW filters out the relevant files.
- Define the **complete file path**, including the user directory `/var/user`, created subdirectories and filename (see [Example"Load file with user data from a specific directory"](#) on page 920).
As a rule, whenever an complete file path is determined, it overwrites a previously specified default directory.

The following example explains this rule as a principle. Exceptions of this general rule are stated in the description of the corresponding command. The [Chapter 14.7.3, "Programming examples"](#), on page 921 explains the general working principle with the commands for mass memory storage.

The same rule applies to the `/var/volatile` directory, see [Example"Working with files in the volatile memory"](#) on page 923.

Example: Save the user settings in a file in a specific directory

This example uses the commands for saving and loading files with custom digital modulation settings. We assume that the directory `/var/user/DigMod` is existing and contains the files `SaveRecallTest.dm` and `dmSavRcl.dm`.

```
// Set the default directory first
MMEMory:CDIRectory "/var/user/DigMod"
SOURCE1:BB:DM:SETting:CATalog?
// "SaveRecallTest","dmSavRcl"

// Specify only the file name; the extension *.dm is assigned automatically
SOURCE1:BB:DM:SETting:STORe "dmSettings"
SOURCE1:BB:DM:SETting:DELeTe "dmSavRcl"
SOURCE1:BB:DM:SETting:LOAD "SaveRecallTest"
SOURCE1:BB:DM:SETting:CATalog?
// "SaveRecallTest","dmSettings"
```

Working with the files of other subsystems or files containing the settings of a particular digital standard (e.g. `SOURCE1:BB:EUTRa:SETting:...`), is analogical.

Example: Load file with user data from a specific directory

This example shows how to use the custom digital modulation commands to set the data source and select a data list. We assume that the directory `/var/user/lists` is existing and contains the files `dlist1.dm_iqd` and `myDList.dm_iqd`.

```
// Select a data list file as data source
SOURCE1:BB:DM:SOURCE DLIST

// Query the data list files (*.dm_iqd) in the default directory
MMEMory:CDIRECTory "/var/user/lists"
SOURCE1:BB:DM:DLIST:CATALOG?
// "dlist1","myDList"

// Specify the complete path to select a data list file (*.dm_iqd)
// in the specific directory
MMEMory:CDIRECTory
SOURCE1:BB:DM:DLIST:SELECT "/var/user/lists/myDList"
SOURCE1:BB:DM:DLIST:DELETE "/var/user/lists/dlist1"
```

Working with other list files, like control lists (...:CLIST:...) or lists with modulation data (...:MLIST:...), and the handling of data list files of other subsystems or of a particular digital standard (like SOURCE1:BB:EUTRa:...:DSELECT), is analogical.

14.7.3 Programming examples

Example: Saving and loading current settings

This example shows two ways of how to save the current instrument setting in the file `settings.savrc1.txt` in the directory `/var/user/savrc1`.



Before the instrument settings can be saved in a file, they have to be saved in an intermediate memory using common command `*SAV <number>`. The specified number is then used in the `:MMEMory:STORE:STATE` command.

Also, after loading a file with instrument settings with command `:MMEMory:LOAD:STATE`, these settings have to be activated with the common command `*RCL <number>`.

```
// Save the current settings in an intermediate memory with number 4
*SAV 4

// save the settings in a file in a specific directory;
// the complete path has to be specified
MMEMory:STORE:STATE 4,"/var/user/savrc1/settings.savrc1.txt"

// save the settings in a file in the default directory;
// set the default directory; specify only the file name
MMEMory:CDIRECTory "/var/user/savrc1"
*SAV 4
MMEMory:STORE:STATE 4,"settings.savrc1.txt"

// Load the saved settings in the intermediate memory 4 and activate them
MMEMory:LOAD:STATE 4,"/var/user/settings.savrc1.txt"
*RCL 4
```

Example: Working with files and directories

This example shows how to list files in a directory, list the subdirectories, query the number of files in a directory, create directory, rename and delete files.

```
// Query the current default directory for mass storage,
// change the directory to the default user directory "/var/user"
// and read out the files in it
MMEMory:CDIRectory?
// "/var/user/temp"
MMEMory:CDIRectory
MMEMory:CDIRectory?
// "/var/user/"
MMEMory:CATalog?
// 1282630,8102817792,".",DIR,4096","..,DIR,4096","Log,DIR,4096",
// "settings.savrcrltxt,BIN,16949","temp,DIR,4096","test,DIR,4096",
// "list.lsw,BIN,1245201"
// the directory "/var/user" contains the predefined directory "Log",
// the subdirectories "test" and "temp"
// as well as the files "settings.savrcrltxt" and "list.lsw"

// query only the subdirectories of the current or specified directory
MMEMory:DCATalog? "/var/user"
// "","", "Log", "temp", "test"

// query only number of subdirectories in the current or specified directory
MMEMory:DCATalog:LENGth? "/var/user"
// 5

// query number of files in the current or specified directory
MMEMory:CATalog:LENGth? "/var/user"
// 7

// Create a new directory for mass memory storage in the specified directory
MMEMory:MDIRectory "/var/user/new"

// Copy the file "settings.savrcrltxt" into the new directory
MMEMory:COPY "/var/user/settings.savrcrltxt","/var/user/new/settings.savrcrltxt"

// Rename the file "settings.savrcrltxt" into the new directory
// and read out the files in this specific directory
MMEMory:CDIRectory "/var/user/new"
MMEMory:MOVE "settings.savrcrltxt","settings_new.savrcrltxt"
MMEMory:CATalog? "/var/user/new"
// 25141,8102789120,".",DIR,4096","..,DIR,4096","settings_new.savrcrltxt,BIN,16949"

// Delete an empty directory, e.g. the "test" directory
MMEMory:RDIRectory "/var/user/test"
// Delete the entire directory, including files and subdirectories
:MMEMory:RDIRectory:REcursive "var/user/test"
```

Example: Working with files in the volatile memory

This example shows how to work with files in the `/var/volatile` directory.

```
// Change the default directory for mass storage,
// read out the files, load and play a file with the ARB
MMEMory:CDIRectory "/var/volatile"
MMEMory:CDIRectory?
// "/var/volatile"
MMEMory:CATalog?
//13928,525352960,".,DIR,60","..,DIR,4096","list.lst,BIN,9772"

SOURCEl:LIST:SElect "/var/volatile/list"
SOURCEl:FREQuency:MODE LIST
OUTPut1:STATe 1
```

14.7.4 Remote control commands

:MMEMory:CATalog?	923
:MMEMory:CATalog:LENGth?	924
:MMEMory:CDIRectory	924
:MMEMory:COPY	925
:MMEMory:DATA	925
:MMEMory:DATA:UNPRotected	926
:MMEMory:DCATalog?	927
:MMEMory:DCATalog:LENGth?	928
:MMEMory:DELeTe	928
:MMEMory:LOAD:STATe	928
:MMEMory:MDIRectory	929
:MMEMory:MOVE	929
:MMEMory:MSIS	929
:MMEMory:RDIRectory	930
:MMEMory:RDIRectory:RECursive	930
:MMEMory:STORe:STATe	930
:MEMory:HFRee?	931

:MMEMory:CATalog? <path>

Returns the content of a particular directory.

Query parameters:

<path> string
 String parameter to specify the directory.
 If you leave out the path, the command returns the contents of
 the directory selected with `:MMEMory:CDIRectory`.
 The path may be relative or absolute.

Return values:

<UsedDiskSpace> Byte size of all files in the directory.

<FreeDiskSpace>	Remaining disk space in bytes.
<FileInfo>	<NameFileN>,<SuffixFileN>,<SizeFileN> List of files, separated by commas <NameFileN> Name of the file. <SuffixFileN> Type of the file. Possible suffixes are: ASCii, BINary, DIRectory <SizeFileN> Size of the file in bytes.
Example:	See Example"Working with files and directories" on page 922.
Usage:	Query only
Manual operation:	See "Directory, File List and Filename" on page 711

:MMEMory:CATalog:LENGth? <Path>

Returns the number of files in the current or in the specified directory.

Query parameters:

<Path>	string
	String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with :MMEMory:CDIRectory command.

Return values:

<FileCount>	integer
	Number of files.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Query only

:MMEMory:CDIRectory <Directory>

Changes the default directory for mass memory storage. The directory is used for all subsequent [MMEM](#) commands if no path is specified with them.

Parameters:

<Directory>	<directory_name>
	String containing the path to another directory. The path can be relative or absolute.
	To change to a higher directory, use two dots '..'.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: SCPI confirmed

Manual operation: See ["Directory, File List and Filename"](#) on page 711
 See ["Directory and Filename"](#) on page 722

:MMEMory:COPY <SourceFile>[,<DestinationFile>]

Copies an existing file to a new file. Instead of just a file, this command can also be used to copy a complete directory together with all its files.

Setting parameters:

<SourceFile> string
 String containing the path and file name of the source file

<DestinationFile> string
 String containing the path and name of the target file. The path can be relative or absolute.
 If <DestinationFile> is not specified, the <SourceFile> is copied to the current directory, queried with the **:MMEMory:CDIRectory** command.
Note: Existing files with the same name in the destination directory are overwritten without an error message.

Example: See [Example "Working with files and directories"](#) on page 922.

Usage: Setting only
 SCPI confirmed

Manual operation: See ["Cut, Copy&Paste and Delete"](#) on page 722

:MMEMory:DATA <Filename>, <BinaryBlock>

:MMEMory:DATA? <Filename>

The setting command writes the block data <BinaryBlock> to the file identified by <Filename>.

Set the GPIB-bus terminator to **EOI** to ensure correct data transfer.

The query command transfers the specified file from the instrument to the GPIB-bus and then on to the controller. It is important to ensure that the intermediate memory on the controller is large enough to take the file. The setting for the GPIB-bus terminator is irrelevant.

Tip: Use this command to read/transfer stored instrument settings or waveforms directly from/to the instrument.

Parameters:

<BinaryBlock> #<number><length_entry><data>
 #: Hash sign; always comes first in the binary block
 <number>: the first digit indicates how many digits the subsequent length entry has
 <length_entry>: indicates the number of subsequent bytes
 <data>: binary block data for the specified length.
 For files with a size with more than nine digits (gigabytes), the instrument allows the syntax # (<Length>), where <Length> is the file size in decimal format.

Parameters for setting and query:

<Filename> string
 String parameter to specify the name of the file.

Example:

```
MMEMory:DATA '/var/user/test.txt',#15hallo
Writes the block data to the file test.txt.
The digit 1 indicates a length entry of one digit; the digit 5 indicate a length of the binary data (hallo) in bytes.
MMEMory:DATA? '/var/user/test.txt'
Sends the data of the file test.txt from the instrument to the controller in the form of a binary block.
Response: #15hallo
```

Usage: SCPI confirmed

:MMEMory:DATA:UNPRotected <Msus>, <Data>

The **setting** command sends the I/Q data and the marker data to the file defined with the <Msus> parameter. The required tags are created automatically so that the file content follows the waveform file format.

The **query** reads out the I/Q data part or the marker information of the specified file.

Waveform files can also be created with the command `[:SOURce<hw>] :BB: ARBitrary:WAVEform:DATA`. In this case, the *complete content* of the waveform file must be specified, i.e. not only the I/Q or marker data but all required tags.

(see [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347).

Parameters:

<Msus> <Identifier>:<file name>
 Mass Storage Unit Specifier
 A string that specifies whether I/Q data (NVWFM) or marker data (NVMKR) is transferred and the file name the data is stored in.
 If the file with the specified name does not exist, a file is created.
 Any existing content in the file is *overwritten*.
 Complete file path and file extension can also be specified. If omitted, files are stored in the default directory and the extension *.wv is assigned to the file name.

Setting parameters:

<Data> block data
 I/Q data or marker binary data, where the number of marker elements has to be equal to the number of I/Q samples
 Binary block data follows the syntax:
 #<Digits><Length><IOQ0...IxQx...IN-1QN-1> or
 #<Digits><Length><MOM1...Mx...MN-1>
 #
 Indicates the start of the data block

<Digits>

Decimal value

Gives the number of decimal digits used for the <Length> value

<Length>

Decimal value

Number of bytes the follow in the <Binary data> part

I0Q0...IxQx...IN-1QN-1*Binary data* in ASCII format

IxQx represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each I and Q component consists of 2 bytes in MSB format (most significant byte first).

The values of the 2 bytes in an I component and a Q component are in the range: -32767 to +32767.

M0M1...Mx...MN-1*Binary data* in ASCII format

Mx represents one marker byte, where only the 4 least significant bits are used. These 4 bits are assigned to the 4 possible markers of the instrument, 1 bit per marker: Bit₀ = Marker 1 to Bit₃ = Marker 4.

One 4-bit marker element is required for every I/Q sample.

Example:

```
:MMEM:DATA:UNPR "NVWFM:/var/user/wave.wv",#220<I0Q0..IxQx>
// the binary data <I0Q0..IxQx> is added to a file named wave.wv
// and saved in the selected directory
// <I0Q0..IxQx> contains of 20 bytes, i.e. 5 I/Q samples,
// 2 bytes for each I and Q component
// <I0Q0..IxQx> is a placeholder;
// the actual ASCII values are not printable
```

```
MMEMory:DATA:UNPRotected? "NVWFM:/var/user/wave.wv"
MMEMory:DATA:UNPRotected "NVMKR:/var/user/wave.wv",#15<M0M1...M5>
// the specified marker data is added to a file named wave.wv
// in the specified directory
// used are printable values;
// used are only the 4 least significant bits of a byte
MMEMory:DATA:UNPRotected? "NVMKR:/var/user/wave.wv"
// note that, the query returns binary values
SOURcel:BB:ARBitrary:WAVeform:CLOCK "/var/user/wave.wv",1.1E6
SOURcel:BB:ARBitrary:WAVeform:CLOCK? "/var/user/wave.wv"
```

:MMEMory:DCATalog? <path>

Returns the subdirectories of a particular directory.

Query parameters:

<path> String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with `:MMEMory:CDIRectory` command.

Return values:

<Catalog> <file_entry>
Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Query only

:MMEMory:DCATalog:LENGth? [<Path>]

Returns the number of subdirectories in the current or specified directory.

Query parameters:

<Path> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with `:MMEMory:CDIRectory` command.

Return values:

<DirectoryCount> integer
Number of parent and subdirectories.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Query only

:MMEMory:DELeTe <Filename>

Removes a file from the specified directory.

Setting parameters:

<Filename> string
String parameter to specify the name and directory of the file to be removed.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Event
SCPI confirmed

Manual operation: See ["Cut, Copy&Paste and Delete"](#) on page 722

:MMEMory:LOAD:STATe <SavRclStateNumb>, <file_name>

Loads the specified file stored under the specified name in an internal memory.

After the file has been loaded, the instrument setting must be activated using an `*RCL` command.

Setting parameters:

<SavRclStateNumb> Determines to the specific <number> to be used with the *RCL command, e.g. *RCL 4.

<file_name> String parameter to specify the file name with extension *.savrc1txt.

Example: See [Example"Saving and loading current settings"](#) on page 921.

Usage: Setting only

Manual operation: See ["Recall"](#) on page 712

:MMEMory:MDIRectory <Directory>

Creates a subdirectory for mass memory storage in the specified directory. If no directory is specified, a subdirectory is created in the default directory. This command can also be used to create a directory tree.

Setting parameters:

<Directory> string
String parameter to specify the new directory.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Event

Manual operation: See ["Create New Directory"](#) on page 722

:MMEMory:MOVE <SourceFile>, <DestinationFile>

Moves an existing file to a new location or, if no path is specified, renames an existing file.

Setting parameters:

<SourceFile> string
String parameter to specify the name of the file to be moved.

<DestinationFile> string
String parameters to specify the name of the new file.

Example: See [Example"Working with files and directories"](#) on page 922.

Usage: Event
SCPI confirmed

Manual operation: See ["Rename"](#) on page 722

:MMEMory:MSIS <Msis>

Defines the drive or network resource (in the case of networks) for instruments with windows operating system, using `msis` (MSIS = Mass Storage Identification String).

Note: Instruments with Linux operating system ignore this command, since Linux does not use drive letter assignment.

Usage: SCPI confirmed

:MMEMory:RDIRECTory <Directory>

Removes an empty directory from the mass memory storage system. If no directory is specified, the subdirectory with the specified name is deleted in the default directory.

To remove a directory with contents, use command **:MMEMory:RDIRECTory:RECURSive** on page 930.

Setting parameters:

<Directory> string
String parameter to specify the directory to be deleted.

Example: See [Example "Working with files and directories"](#) on page 922.

Usage: Event

:MMEMory:RDIRECTory:RECURSive <Directory>

Removes the specified directory, including files and subdirectories from the mass memory storage system. If no directory is specified, the command removes the subdirectories of the default directory.

The command the entire directory without further prompt or notification.

Setting parameters:

<Directory> string
String parameter to specify the directory to be deleted.

Example: See [Example "Working with files and directories"](#) on page 922.

Usage: Setting only

:MMEMory:STORE:STATe <savrcl_state_nr>, <file_name>

Stores the current instrument setting in the specified file.

The instrument setting must first be stored in an internal memory with the same number using the common command ***SAV**.

Setting parameters:

<savrcl_state_nr> Corresponds to the specific <number> defined with the ***SAV** command, e.g. ***SAV 4**.

<file_name> String parameter to specify the file name with extension ***.savrcltxt**.

Example: See [Example "Saving and loading current settings"](#) on page 921.

Usage: Event

Manual operation: See "Save" on page 712

:MEMory:HFRee?

Returns the used and available memory in Kb.

Return values:

<TotalPhysMemKb>	integer	Total physical memory.
<ApplicMemKb>	integer	Application memory.
<HeapUsedKb>	integer	Used heap memory.
<HeapAvailableKb>	integer	Available heap memory.

Usage: Query only

14.8 CALibration subsystem

The CALibration subsystem contains the commands needed for performing internal adjustments. This procedure is triggered by the query commands.

Common suffixes

The following common suffixes are used in the remote commands:

Suffix	Value range	Description
CALibration<hw>	[1] to 2	<ul style="list-style-type: none"> CALibration[1] = Path A (optional suffix) CALibration2 = Path B (mandatory suffix)

Understanding the query response

- 0: error-free execution of the adjustments
- 1: indicates that an error occurred; the process has been canceled

:CALibration:ALL[:MEASure]?	932
:CALibration<hw>:ALL:DATE?	932
:CALibration<hw>:ALL:INformation?	932
:CALibration<hw>:ALL:TEMP?	933
:CALibration<hw>:ALL:TIME?	933
:CALibration<hw>:CONTinueonerror	933
:CALibration:DATA:EXPort	934
:CALibration:DATA:FACTory:DATE?	934
:CALibration:DELay:MINutes	934

:CALibration:DElay:SHUTdown[:STATe].....	934
:CALibration:DElay[:MEASure]?.....	935
:CALibration<hw>:DEBug.....	935
:CALibration<hw>:IQModulator:LOCal?.....	935
:CALibration<hw>:FREquency:CONVerter:EXTernal?.....	936
:CALibration<hw>:LOSCillator:COUPling:LOCAl?.....	936

:CALibration:ALL[:MEASure]? [<Force>]

Starts all internal adjustments that do not need external measuring equipment.

Note: If an external frequency converter R&S SZU is connected, the internal adjustments are blocked, and the R&S SMW generates an error message.

Query parameters:

<Force> string

Return values:

<Measure> 1 | ON | 0 | OFF

Example:

```
CAL:ALL:MEAS?
// Response: "0"
// Executes the adjustments of all instrument functions.
// When completed, it indicates that the adjustment
// has been performed successfully.
```

Usage: Query only

Manual operation: See "[Adjust All](#)" on page 1380

:CALibration<hw>:ALL:DATE?

Queries the date of the most recently executed full adjustment.

Return values:

<Date> string

Example:

```
CAL:ALL:DATE?
// "2016-01-01"
```

Usage: Query only

Manual operation: See "[Last Full Adjustment](#)" on page 1380

:CALibration<hw>:ALL:INFormation?

Queries the current state of the internal adjustment.

Return values:

<CallInfoText> string

Example: `CAL:ALL:INF?`
 "Instrument is calibrated, no adjustment required."
 "UNCAL, instrument is warming up."
 "UNCAL, Please perform full adjustment after warming up."
 "UNCAL, Please perform full adjustment."

Usage: Query only

Manual operation: See ["Information"](#) on page 1381

:CALibration<hw>:ALL:TEMP?

Queries the temperature deviation compared to the calibration temperature.

Return values:

<Temperature> string

Example: `CALibration:ALL:TEMP?`
 // "+12.00 K"

Usage: Query only

Manual operation: See ["Temperature Offset"](#) on page 1381

:CALibration<hw>:ALL:TIME?

Queries the time elapsed since the last full adjustment.

Return values:

<Time> string

Example: `CAL:ALL:TIME?`
 // "22 days"

Usage: Query only

Manual operation: See ["Time"](#) on page 1381

:CALibration<hw>:CONTinueonerror <State>

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: n.a. (factory preset: 0)

Example: `CAL:CONT ON`
 // Continues calibration after an error

Manual operation: See ["Continue Adjustment on Error"](#) on page 1382

:CALibration:DATA:EXPort

Collects the internal adjustment data and provides the data for export in a zip file. You can export the data for service and evaluation purposes.

Example: `:CALibration:DATA:EXPort`

Usage: Event

:CALibration:DATA:FACTory:DATE?

Queries the date of the last factory calibration.

Return values:

<Date> string

Example: `CAL:DATA:FACT:DATE?`
`// "2016-01-01"`

Usage: Query only

Manual operation: See ["Last Factory Calibration"](#) on page 1363

:CALibration:DELAy:MINutes <Minutes>

Sets the warm-up time to wait before internal adjustment starts automatically.

Automatic execution starts only, if you have enabled the calibration with command :
[CALibration:DELAy\[:MEASure\]? ON](#).

Parameters:

<Minutes> integer

Range: 30 to 120

*RST: n.a. (no preset. default: 60)

Example: `:CALibration:DELAy:MINutes 30`
`// sets the time delay for warm-up of the instrument.`

Manual operation: See ["Warm Up Time"](#) on page 1383

:CALibration:DELAy:SHUTdown[:STATe] <Shutdown>

Enables the instrument to shut down automatically after calibration.

Parameters:

<Shutdown> 1 | ON | 0 | OFF

*RST: 0

Example: `:CALibration:DELAy:SHUTdown[:STATe] ON|1`
`// inititates that the instrument shuts down when the adjustments are com`

Manual operation: See ["Shutdown After Adjustment"](#) on page 1383

:CALibration:DElay[:MEASure]?

Starts the delayed adjustment process. When the warm-up time has elapsed (see :
:CALibration:DElay:MINutes, it executes the internal adjustments.

If you have enabled automatic shutdown, :CALibration:DElay:SHUTdown[:
STATe] ON, the instrument shuts down when the adjustments are completed.

Return values:

<Error> 1 | ON | 0 | OFF
*RST: n.a. (no preset. default: 0)

Example:

```
:CALibration:DElay[:MEASure] ON|1
// enables the adjustment processs to start after the warm-up time automa
```

Usage: Query only

Manual operation: See "Adjust All Delayed" on page 1382

:CALibration<hw>:DEBug <State>

Activates logging of the internal adjustments.

Setting parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

```
CALibration:DEBug 1
```

Usage: Setting only

Manual operation: See "Log Debug Info" on page 1382

:CALibration<hw>:IQModulator:LOCal?

Starts adjustment of the I/Q modulator for the currently set frequency and baseband gain. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.

Return values:

<Local> 1 | ON | 0 | OFF
*RST: 0

Example:

```
// Start adjustment for the I/Q modulator
// for the currently set frequency
CALibration:IQModulator:LOCal?
// 0
// Adjustments are performed successfully
```

Usage: Query only

Manual operation: See "Adjust I/Q Modulator Current Frequency" on page 475

:CALibration<hw>:FREQuency:CONVerter:EXTernal?

Queries the calibration state of the connected external instrument.

External instrument can be for example an external frontend.

Return values:

<Success> 1 | ON | 0 | OFF
*RST: 0

Example:

```
// Query calibration state of a connected external frontend.
CAL1:FREQ:CONV:EXT?
// 1
// The external frontend connected in path A is calibrated.
```

Usage: Query only

Manual operation: See ["Adjust External Frequency Converter"](#) on page 1381

:CALibration<hw>:LOSCillator:COUPling:LOCal?

Adjusts the internal LO level at the I/Q modulator automatically, when an external LO signal is fed.

Return values:

<CouplingLevel> 1 | ON | 0 | OFF
*RST: 1

Example:

```
CALibration:LOSCillator:COUPling:LOCal 1
```

Usage: Query only

Manual operation: See ["Adjust LO Level at Current Frequency"](#) on page 508

14.9 CLOCK subsystem

The CLOCK subsystem contains the commands for configuration of the signals at the clock input and output connectors.

:CLOCK:INPut:FREQuency?

Returns the measured frequency of the external clock signal.

Return values:

<Frequency> float
Range: 0 to max
Increment: 0.001
*RST: 0

Example:

```
:CLOCK:INPut:FREQuency?
```

Usage: Query only

Options: R&S SMW-B10

Manual operation: See ["Measured External Clock"](#) on page 270

14.10 DIAGnostic subsystem

The `DIAGnostic` subsystem contains the commands used for instrument diagnosis and servicing. SCPI does not define any `DIAGnostic` commands; the commands listed here are all device-specific. All `DIAGnostic` commands are query commands which are not affected by `*RST`.



The test functions are intended for services purposes.

They are thus password-protected functions. Unlock the corresponding protection level to access them, see `:SYSTem:PROTect<ch>[:STATe]`.

For more information, see R&S SMW Service Manual.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
<code>DIAGnostic<hw></code>	[1] 2	Signal path

Example: Programming example

The example lists the commands required to query assemblies and test points for diagnosis purposes.

```
// Query the modules available in the instrument
// and variant and revision state of a certain assembly
DIAGnostic1:BGInfo:CATalog?

// IEC_BOARD, BNC_BOARD, BBMB, FPNL, SSYN, SYNEX, RFMB, ...
DIAGnostic1:BGInfo? "SSYN"
// SSYN 1412.6667.02 05.02 100000

// Query the test points available in the instrument
// and trigger the measurement in a selected test point
DIAGnostic1:POINt:CATalog?
// ASATT6HP_M5V7, ASATT6HP_OFFSET, ...
DIAGnostic1:MEASure:POINt? "BBB_CODER_BBB_US"
// -1.000000V/°C

// Query the operating hours and number of power-on so far.
DIAGnostic:INFO:OTIME?
// 112 h
DIAGnostic:INFO:POCount?
// 14
```

Commands

:DIAGnostic<hw>:BGINfo:CATalog?	938
:DIAGnostic<hw>:BGINfo?	938
:DIAGnostic:INFO:OTIMe?	938
:DIAGnostic:INFO:POCount?	939
:DIAGnostic<hw>:POINT:CATalog?	939
:DIAGnostic<hw>[:MEASure]:POINT?	939

:DIAGnostic<hw>:BGINfo:CATalog?

Queries the names of the assemblies available in the instrument.

Return values:

<Catalog> string
 List of all assemblies; the values are separated by commas
 The length of the list is variable and depends on the instrument equipment configuration.

Example: See [Example "Programming example"](#) on page 937.

Usage: Query only

:DIAGnostic<hw>:BGINfo? [<Board>]

Queries information on the modules available in the instrument, using the variant and revision state.

Query parameters:

<Board> string
 Module name, as queried with the command :
[DIAGnostic<hw>:BGINfo:CATalog?](#)
 To retrieve a complete list of all modules, omit the parameter.
 The length of the list is variable and depends on the instrument equipment configuration.

Return values:

<BgInfo> <Module name> <Module stock number incl. variant> <Module revision> <Module serial number>
 List of comma-separated entries, one entry per module.
 Each entry for one module consists of four parts that are separated by space characters.

Example: See [Example "Programming example"](#) on page 937.

Usage: Query only

Manual operation: See ["Assembly"](#) on page 1362

:DIAGnostic:INFO:OTIMe?

Queries the operating hours of the instrument so far.

Return values:

<OperationTime> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Programming example"](#) on page 937.

Usage: Query only

Manual operation: See ["Operation Time / h"](#) on page 1362

:DIAGnostic:INFO:POCount?

Queries how often the instrument has been turned on so far.

Return values:

<PowerOnCount> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Programming example"](#) on page 937.

Usage: Query only

Manual operation: See ["Power On Count"](#) on page 1362

:DIAGnostic<hw>:POINT:CATalog?

Queries the test points available in the instrument.

For more information, see R&S SMW Service Manual.

Return values:

<Catalog> string
 List of comma-separated values, each representing a test point

Example: See [Example"Programming example"](#) on page 937.

Usage: Query only

:DIAGnostic<hw>[:MEASure]:POINT? <Name>

Triggers the voltage measurement at the specified test point and returns the measured voltage.

For more information, see R&S SMW Service Manual.

Query parameters:

<Name> <test point identifier>
 Test point name, as queried with the command :
[DIAGnostic<hw>:POINT:CATalog?](#)

Return values:

<Value> <value><unit>

Example: See [Example"Programming example"](#) on page 937.

Usage: Query only

14.11 HUMS remote control commands

The remote control commands for the health and utilizations monitoring system (HUMS) comprise commands of the `DIAGnostic` subsystem and the commands of the `SYSTem:COMMunicate:REST` and `SYSTem:COMMunicate:REST` subsystems.

For all HUMS-related remote control commands, see refer to the "R&S®HUMS Health and Utilization Monitoring Service" User Manual on the Internet.

Commands

<code>DIAGnostic:HUMS:DELeTe:ALL</code>	940
<code>DIAGnostic:HUMS:DEViCe:HISTory?</code>	941
<code>DIAGnostic:HUMS:DEViCe:HISTory:DELeTe:ALL</code>	941
<code>DIAGnostic:HUMS:FORMat</code>	942
<code>DIAGnostic:HUMS:SAVE</code>	942
<code>DIAGnostic:HUMS:STATe</code>	942
<code>DIAGnostic:HUMS:TAgS:ALL?</code>	942
<code>DIAGnostic:HUMS:TAgS:DELeTe</code>	943
<code>DIAGnostic:HUMS:TAgS:DELeTe:ALL</code>	943
<code>DIAGnostic:HUMS:TAgS[:VALue]</code>	943
<code>SYSTem:COMMunicate:REST:ENABle</code>	944
<code>SYSTem:COMMunicate:SNMP:COMMunity:RO</code>	944
<code>SYSTem:COMMunicate:SNMP:COMMunity:RW</code>	944
<code>SYSTem:COMMunicate:SNMP:CONtAct</code>	945
<code>SYSTem:COMMunicate:SNMP:LOCation</code>	945
<code>SYSTem:COMMunicate:SNMP:USM:USER</code>	945
<code>SYSTem:COMMunicate:SNMP:USM:USER:ALL?</code>	946
<code>SYSTem:COMMunicate:SNMP:USM:USER:DELeTe</code>	946
<code>SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL</code>	946
<code>SYSTem:COMMunicate:SNMP:VERSion</code>	947

`DIAGnostic:HUMS:DELeTe:ALL`

Deletes the complete HUMS data. This includes device history, device tags, SCPI connections, utilization history and utilizations.

Example: `//Delete HUMS data`
 `DIAG:HUMS:DEL:ALL`

Usage: Event

DIAGnostic:HUMS:DEvIce:HISTory?

Queries the device history information of the connected instrument. Depending on the set data format, the queried data is either displayed in XML or JSON format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 942.

Return values:

<HistoryInfo> **<block_data>**
 Device history information of the connected instrument as block data in a comma-separated list:
`#blockdata[{event1},{event2},{event3}...]`
 With the following parameters:
`<eventID>,<eventTimestamp>,<eventMessage>,<eventDetails>,<eventSeverity>`
 Binary block data with the following syntax:
`#<Digits><Length><Binarydata>`
#
 Indicates the start of the binary block
<Digits>
 Decimal value
 Gives the number of decimal digits used for the `<Length>` value
<Length>
 Decimal value
 Number of bytes the follow in the `<Binary data>` part
<Binary data>
 Binary data in ASCII format

Example:

```
//Return device history
DIAG:HUMS:DEV:HIST?
Returns for example:
#44715[{"eventId":32,"eventTimestamp":
"2021-02-02T17:25:39Z","eventMessage":
"Deviation from Self Alignment Temperature",
"eventDetails":
"Deviations resolved","eventSeverity":0}
```

Usage: Query only

Manual operation: See ["Export History"](#) on page 851

DIAGnostic:HUMS:DEvIce:HISTory:DELeTe:ALL

Deletes the complete device history information of the connected instrument.

Example: //Delete complete device history
`DIAG:HUMS:DEV:HIST:DEL:ALL`

Usage: Event

Manual operation: See ["Delete History"](#) on page 851

DIAGnostic:HUMS:FORMat <DataFormat>

Selects the format for the queried HUMS data. You can query the HUMS data either in `JSON` format or `XML` format.

The defined format affects all other commands that return block data.

Parameters:

`<DataFormat>` `JSON | XML`

JSON
Returns the HUMS data in `JSON` format.

XML
Returns the HUMS data in `XML` format.

***RST:** `JSON`

Example:

```
//Return data in JSON format
DIAG:HUMS:FORM JSON
```

DIAGnostic:HUMS:SAVE <path>

Saves the HUMS history as a `ZIP` file to your preferred path.

Setting parameters:

`<path>`

Example:

```
//Save HUMS history data
DIAG:HUMS:SAVE 'C:\HUMS\hums_2021.zip'
```

Usage:

Setting only

Manual operation: See ["Export History"](#) on page 851

DIAGnostic:HUMS:STATe <State>

Turns the HUMS service and data collection on and off.

Parameters:

`<State>` `ON | OFF | 1 | 0`

***RST:** `ON`

Example:

```
//Turn on HUMS service
DIAG:HUMS:STAT ON
```

Manual operation: See ["State"](#) on page 851

DIAGnostic:HUMS:TAGS:ALL?

Queries all key-value tags that you have assigned to the instrument. Depending on the set data format, the queried data is either displayed in `XML` or `JSON` format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 942.

Return values:

<ID>	ID number of the defined tag.
<Key>	String containing key name of the defined tag.
<Value>	String containing value of the defined tag.

Example:

```
//Return all tags
DIAG:HUMS:TAGS:ALL?
1,"location","building_11",2,"time zone","CET"
```

Usage:

Query only

Manual operation:See ["Add"](#) on page 860**DIAGnostic:HUMS:TAGS:DELeTe <ID>**

Deletes a certain tag you assigned to your instrument, including its key and value.

Setting parameters:

<ID>	ID number of the tag you want to delete. To identify the ID number, query all device tags from the system first. For more information, see DIAGnostic:HUMS:TAGS:ALL? on page 942.
------	--

Example:

```
//Delete tag
DIAG:HUMS:TAGS:DEL 0
```

Usage:

Setting only

Manual operation:See ["Delete"](#) on page 859**DIAGnostic:HUMS:TAGS:DELeTe:ALL**

Deletes all key-value tags you have assigned to the instrument.

Example:

```
//Delete all tags
DIAG:HUMS:TAGS:DEL:ALL
```

Usage:

Event

Manual operation:See ["Delete All"](#) on page 860**DIAGnostic:HUMS:TAGS[:VALue] <ID>, <Key>, <Value>****DIAGnostic:HUMS:TAGS[:VALue]? <ID>**

Adds or modifies a key-value pair (device tag).

The query returns the key-value pair for a given ID or an empty string if the ID is unknown.

Parameters:

<Key>	String containing key name of the queried tag.
<Value>	String containing value of the queried tag.

Parameters for setting and query:

<ID> 0 - 31
 ID number of the tag you want to modify or query.
 To identify the ID number, query all device tags from the system first. For more information, read here [DIAGnostic:HUMS:TAGS:ALL?](#) on page 942.

Example: //Add or modify a tag (tag 1)
 DIAG:HUMS:TAGS 1, 'location', 'building_11'

Manual operation: See "[Key](#)" on page 859
 See "[Value](#)" on page 859
 See "[Add](#)" on page 860

SYSTem:COMMunicate:REST:ENABLE <RestState>

Turns communication via the REST API on and off.

Parameters:

<RestState> ON | OFF | 0 | 1

Example: //Return REST state
 SYST:COMM:REST:ENAB?

Manual operation: See "[REST](#)" on page 853

SYSTem:COMMunicate:SNMP:COMMunity:RO <CommunityString>

Defines the SNMP community string for read-only access.

Prerequisites for this command:

- Select an SNMP version that supports communities ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 947).

Setting parameters:

<CommunityString> String containing the community name.

Example: //Set community name
 SYST:COMM:SNMP:VERS V12
 SYST:COMM:SNMP:COMM:RO 'ABC'

Usage: Setting only

Manual operation: See "[Access](#)" on page 853

SYSTem:COMMunicate:SNMP:COMMunity:RW <CommunityString>

Defines the SNMP community string for read-write access.

Prerequisites for this command:

- Select an SNMP version that supports communities ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 947).

Setting parameters:

<CommunityString> String containing the community name.

Example: //Set read-write access
 SYST:COMM:SNMP:VERS V12
 SYST:COMM:SNMP:COMM:RW 'ABC'

Usage: Setting only

Manual operation: See ["Access"](#) on page 853

SYSTem:COMMunicate:SNMP:CONtact <SnmpContact>

Defines the SNMP contact information for the administrator.

You can also set the contact information via SNMP if you do not set it via SCPI.

Parameters for setting and query:

<SnmpContact> String containing SNMP contact.
 *RST: "" (empty string)

Example: //Set SNMP contact
 SYST:COMM:SNMP:CONT 'ABC'

Manual operation: See ["Contact"](#) on page 853

SYSTem:COMMunicate:SNMP:LOCation <SnmpLocation>

Defines the SNMP location information for the administrator.

You can also set the location information via SNMP if you do not set it via SCPI.

Parameters for setting and query:

<SnmpLocation> String containing SNMP location.
 *RST: "" (empty string)

Example: //Return SNMP location
 SYST:COMM:SNMP:LOC?

Manual operation: See ["Location"](#) on page 853

SYSTem:COMMunicate:SNMP:USM:USER <Name>, <Access>, <Level>[, <Auth_pwd>[, <Priv_pwd>]]

Defines an SNMP user profile.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 947).

Setting parameters:

<Name> String containing name of the user.

<Access> RO | RW
 Defines the access right a user can have.

<Level>	NOAuth AUTH PRIVacy Defines the security level.
<Auth_pwd>	String containing the authentication password.
<Priv_pwd>	String containing the privacy password.
Example:	//Create user profile SYST:COMM:SNMP:VERS V123 SYST:COMM:SNMP:USM:USER 'Peter','RO','PRIV', '1234','XYZ'
Usage:	Setting only
Manual operation:	See "Add SNMP User for HUMS" on page 857

SYSTem:COMMunicate:SNMP:USM:USER:ALL?

Queries the number of users and a list of all SNMP users for SNMPv3.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 947).

Return values:

<Count>	Total number of registered SNMP users.
<Name>	List of all user names as a comma-separated list.

Example: //Return all SNMP users
SYST:COMM:SNMP:USM:USER:ALL?

Usage: Query only

Manual operation: See ["User table"](#) on page 855

SYSTem:COMMunicate:SNMP:USM:USER:DELeTe <UserName>

Deletes a specific SNMP user profile.

Setting parameters:

<UserName>	String containing name of SNMP user profile to be deleted.
------------	--

Example: //Delete SNMP user profile
SYST:COMM:SNMP:USM:USER:DEL "Peter"

Usage: Setting only

Manual operation: See ["Delete"](#) on page 856

SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL

Deletes all SNMP user profiles.

Example: //Delete all SNMP user profiles
SYST:COMM:SNMP:USM:USER:DEL:ALL

Usage: Event

Manual operation: See ["Delete All"](#) on page 855

SYSTem:COMMunicate:SNMP:VERSion <SnmVersion>

Selects the SNMP version.

Parameters for setting and query:

<SnmVersion> OFF | V12 | V123 | V3 | DEFault

OFF

SNMP communication is off.

V12

SNMP communication with SNMPv2 or lower.

V123

SNMP communication with SNMPv2 and SNMPv3.

V3

SNMP communication with SNMPv3.

*RST: V123

Example: //Select the SNMP version
SYST:COMM:SNMP:VERS V12

Manual operation: See ["SNMP"](#) on page 853

14.12 DISPlay subsystem

The DISPlay system contains the commands to set the power-save mode of the instrument.

Programming Examples

Example: Activating screen saver mode and display update

Use the following commands to switch on the screen saver of your instrument or to automatic display. These settings are particularly useful when you control the instrument remotely.

```
// Set the wait time interval and activate the screen saver
DISPlay:PSAVe:HOLDoff 10
DISPlay:PSAVe:STATe ON

// Disable the display of the current frequency and level values in remote control
DISPlay:ANNotation:ALL ON
// DISPlay:ANNotation:FREQuency ON
// DISPlay:ANNotation:AMPLitude ON

// Enable automatic update of the display at defined time intervals
DISPlay:UPDate[:STATe] ON
```

Example: Querying the dialog IDs, opening and closing dialogs

Use the following commands to query the dialog IDs of all currently open dialogs. The dialog ID is a prerequisite for opening and closing dialogs via the remote control.



The dialog ID is also required to define user key actions.

See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

```
// Query the dialog IDs of all open dialogs
DISPlay:DIALog:ID?
// CEUltraDLGenSetDlg,_, $A DlgKeyRf_Rosc

// Open and close dialogs via remote control
DISPlay:DIALog:OPEN "CEUltraDLGenSetDlg,_, $A"
DISPlay:DIALog:OPEN "DlgKeyRf_Rosc"
DISPlay:DIALog:CLOSe "DlgKeyRf_Rosc"
DISPlay:DIALog:CLOSe:ALL

:DISPlay:PSAVe:HOLDoff..... 948
:DISPlay:PSAVe[:STATe]..... 948
:DISPlay:UPDate[:STATe]..... 949
:DISPlay:ANNotation:AMPLitude..... 949
:DISPlay:ANNotation:FREQuency..... 949
:DISPlay:ANNotation[:ALL]..... 949
:DISPlay:DIALog:ID?..... 950
:DISPlay:DIALog:OPEN..... 950
:DISPlay:DIALog:CLOSe..... 951
:DISPlay:DIALog:CLOSe:ALL..... 951
```

:DISPlay:PSAVe:HOLDoff <HoldoffTimeMin>

Sets the wait time for the screen saver mode of the display.

Parameters:

<HoldoffTimeMin> integer
 Range: 1 to 60
 *RST: n.a. (factory preset: 10)
 Default unit: minute

Example: see [Example "Activating screen saver mode and display update"](#)
 on page 947

Manual operation: See ["Wait Time"](#) on page 741

:DISPlay:PSAVe[:STATe] <State>

Activates the screen saver mode of the display.

We recommend that you use this mode to protect the display, if you operate the instrument in remote control.

To define the wait time, use the command `:DISPlay:PSAVe:HOLDoff`.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 0)

Example: See [Example"Activating screen saver mode and display update"](#) on page 947

Manual operation: See ["Screen Saver"](#) on page 741

:DISPlay:UPDate[:STATE] <Update>

Activates the refresh mode of the display.

Parameters:

<Update> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 1)

Example: See [Example"Activating screen saver mode and display update"](#) on page 947

Manual operation: See ["Display Update is"](#) on page 742

:DISPlay:ANNotation:AMPLitude <State>

Indicates asterisks instead of the level values in the status bar.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 1)

Example: See [Example"Activating screen saver mode and display update"](#) on page 947

Manual operation: See ["Annotation Amplitude"](#) on page 803

:DISPlay:ANNotation:FREQuency <State>

Indicates asterisks instead of the frequency values in the status bar.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 1)

Example: See [Example"Activating screen saver mode and display update"](#) on page 947

Manual operation: See ["Annotation Frequency"](#) on page 802

:DISPlay:ANNotation[:ALL] <State>

Displays asterisks instead of the level and frequency values in the status bar of the instrument.

We recommend that you use this mode if you operate the instrument in remote control.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 1

Example: See [Example"Activating screen saver mode and display update"](#) on page 947

:DISPlay:DIALog:ID?

Returns the dialog identifiers of the open dialogs in a string separated by blanks.

Return values:

<DialogIdList> <DialogID#1>< ><DialogID#2>< > ... < ><DialogID#n>
Dialog identifiers are string without blanks. Blanks are represented as \$\$.
Dialog identifiers <DialogID> are composed of two main parts:
<DialogName>[<OptionalParts>]
<DialogName>
Meaningful information, mandatory input parameter for the commands:
[:DISPlay:DIALog:OPEN](#) on page 950
[:DISPlay:DIALog:CLOSe](#) on page 951
<Optional parts>
String of \$<X> values, where <X> is a character, interpreted as follows:
\$q<DialogQualifier>: optional dialog qualifier, usually the letter A or B, as displayed in the dialog title.
\$i<Instances>: comma-separated list of instance indexes, given in the order h, c, s, d, g, u, 0. Default is zero; the terminating ", 0" can be omitted.
\$t<TabIds>: comma-separated indexes or tab names; required, if a dialog is composed of several tabs.
\$x<Left>\$y<Top>\$h<Left>\$w<Top>: position and size; superfluous information.

Example: See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 948

Usage: Query only

Manual operation: See ["SCPI"](#) on page 771

:DISPlay:DIALog:OPEN <DialogId>

Opens the specified dialog.

Setting parameters:**<DialogId>** string

To find out the dialog identifier, use the query `:DISPlay:DIALog:ID?`.

The `<DialogName>` part of the query result is mandatory.

Example:

See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 948

Usage:

Setting only

Manual operation: See ["SCPI"](#) on page 771

:DISPlay:DIALog:CLOSe <DialogId>

Closes the specified dialog.

Setting parameters:**<DialogId>** string

To find out the dialog identifier, use the query `:DISPlay:DIALog:ID?`.

The `<DialogName>` part of the query result is sufficient.

Example:

See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 948

Usage:

Setting only

:DISPlay:DIALog:CLOSe:ALL

Closes all open dialogs.

Example:

See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 948

Usage:

Event

14.13 FORMat subsystem

The commands in the FORMat subsystem determine the format of data returned by the R&S SMW to the controller. This affects all query commands that return a list of numerical data or block data, noted in the descriptions of the commands. The set data format applies to both paths.

<code>:FORMat:BORDer</code>	952
<code>:FORMat:SREGister</code>	952
<code>:FORMat[:DATA]</code>	952

:FORMat:BORDER <Border>

Determines the sequence of bytes within a binary block. This only affects blocks which use the IEEE754 format internally.

Parameters:

<Border> NORMal | SWAPped

NORMal

Expects/sends the *least* significant byte of each IEEE754 floating-point number first and the *most* significant byte last.

SWAPped

Expects/sends the *most* significant byte of each IEEE754 floating-point number first and the *least* significant byte last.

*RST: NORMal

Example:

:FORM:BORD SWAP

transfers the data with the most significant bit first.

:FORMat:SREGister <Format>

Determines the numeric format for responses of the status register.

Parameters:

<Format> ASCii | BINary | HEXadecimal | OCTal

ASCii

Returns the register content as a decimal number.

BINary|HEXadecimal|OCTal

Returns the register content either as a binary, hexadecimal or octal number. According to the selected format, the number starts with #B (binary), #H (hexadecimal) or #O (octal).

*RST: ASCii

Example:

:FORM:SREG HEX

returns the register content as a hexadecimal number.

:FORMat[:DATA] <Data>

Determines the data format the instrument uses to return data via the IEC/IEEE bus.

The instrument automatically detects the data format used by the controller, and assigns it accordingly. Data format determined by this SCPI command is in this case irrelevant.

Parameters:

<Data> ASCii | PACKed

ASCii

Transfers numerical data as plain text separated by commas.

PACKed

Transfers numerical data as binary block data.

The format within the binary data depends on the command.

The various binary data formats are explained in the description of the parameter types.

*RST: ASCii

Example:

:FORM ASC

transfers the data as ASCII data.

14.14 HCOPy subsystem

The HCOPy subsystem contains the commands to generate and save a hard copy of the display.



To access a stored hard copy file, use the commands of the MEMM subsystem.

Example: Store a hard copy of the display

The following example lists commands to configure and execute a hard copy to an automatic named file.

```
:HCOPy:DEVIce:LANGUage PNG
:HCOPy:FILE:NAME:AUTO:STATe 1
// defines the output format
// sets the instrument to automatically create output file names

// *****
// Configure hard copy options, set automatic naming rules
// An automatically generated file name consists of:
// <Prefix><YYYY><MM><DD><Number>.<Format>
// *****
:HCOPy:DEVIce:LANGUage BMP
// defines output format *.bmp
:HCOPy:REGion DIALog
// selects the region to be copied
:HCOPy:FILE:AUTO:DIR "/usb/HCopy"
// sets destination directory of automatic named file
:HCOPy:FILE:NAME:AUTO:FILE:PREFix:STATe 1
:HCOPy:FILE:NAME:AUTO:FILE:PREFix:"hardcopy"
:HCOPy:FILE:NAME:AUTO:FILE:YEAR:STATe 1
:HCOPy:FILE:NAME:AUTO:FILE:MONTH:STATe 1
// uses automatic naming prefix
// sets automatic naming prefix to "hardcopy"
// uses automatic naming date parameters year and month

// *****
```

```
// Execute and transfer the hard copy
// *****
:HCOPY:EXECute
:HCOPY:DATA
// generates a hard copy
// transfers the hard copy to the remote client
:HCOPY:FILE:AUTO:FILE?
// queries the automatic file name
// "hardcopy1607001.bmp"
:HCOPY:FILE:AUTO:NUMBer?
// queries the number in the automatic file name
// "001"
:HCOPY:FILE:AUTO?
// queries the path and file name of the automatically generated file
// "/usb/HCopy/hardcopy1607001.bmp"
```

14.14.1 Hard copy settings

With the following commands, you can configure the settings of a hard copy.

:HCOPY:DATA?	954
:HCOPY:IMAGe:FORMat	954
:HCOPY:DEVIce:LANGuage	954
:HCOPY:REGion	955
:HCOPY:FILE[:NAME]	955
:HCOPY[:EXECute]	955

:HCOPY:DATA?

Transfers the hard copy data directly as a NByte stream to the remote client.

Return values:	
<Data>	block data
Example:	See Example"Store a hard copy of the display" on page 953
Usage:	Query only

:HCOPY:IMAGe:FORMat <Format>
:HCOPY:DEVIce:LANGuage <Language>

Selects the graphic format for the hard copy. You can use both commands alternatively.

Parameters:	
<Language>	BMP JPG XPM PNG
*RST:	PNG
Example:	See Example"Store a hard copy of the display" on page 953
Manual operation:	See "Format" on page 734

:HCOPY:REGion <Region>

Selects the area to be copied.

You can create a snapshot of the screen or an active dialog.

Parameters:

<Region> ALL | DIALog
*RST: ALL

Example: See [Example"Store a hard copy of the display"](#) on page 953

Manual operation: See ["Region"](#) on page 735

:HCOPY:FILE[:NAME] <Name>

Determines the file name and path to save the hard copy, provided automatic naming is disabled.

Note: If you have enabled automatic naming, the instrument automatically generates the file name and directory, see [Chapter 14.14.2, "Automatic naming"](#), on page 955.

Parameters:

<Name> string

Example: See [Example"Store a hard copy of the display"](#) on page 953

Manual operation: See ["File..."](#) on page 734

:HCOPY[:EXECute]

Generates a hard copy of the current display. The output destination is a file.

Example: See [Example"Store a hard copy of the display"](#) on page 953

Usage: Event

Manual operation: See ["Save"](#) on page 734

14.14.2 Automatic naming

Use the following commands to automatically assign a file name.

:HCOPY:FILE[:NAME]:AUTO?	956
:HCOPY:FILE[:NAME]:AUTO:DIRectory	956
:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar	956
:HCOPY:FILE[:NAME]:AUTO:FILE?	956
:HCOPY:FILE[:NAME]:AUTO:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix	958
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe	958

:HCOPY:FILE[:NAME]:AUTO?

Queries path and file name of the hardcopy file, if you have enabled *Automatic Naming*.

Return values:

<Auto> string

Example: See [Example"Store a hard copy of the display"](#) on page 953

Usage: Query only

:HCOPY:FILE[:NAME]:AUTO:DIRectory <Directory>

Determines the path to save the hard copy, if you have enabled *Automatic Naming*.

If the directory does not yet exist, the instrument automatically creates a new directory, using the instrument name and `/var/user/` by default.

Parameters:

<Directory> string
 *RST: /var/user/

Example: See [Example"Store a hard copy of the display"](#) on page 953

Manual operation: See ["Path..."](#) on page 735

:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar

Deletes all files with extensions `*.bmp`, `*.jpg`, `*.png` and `*.xpm` in the directory set for automatic naming.

Example: See [Example"Store a hard copy of the display"](#) on page 953

Usage: Event

Manual operation: See ["Clear Path"](#) on page 735

:HCOPY:FILE[:NAME]:AUTO:FILE?

Queries the name of the automatically named hard copy file.

An automatically generated file name consists of:

<Prefix><YYYY><MM><DD><Number>.<Format>.

You can activate each component separately, to individually design the file name.

Return values:

<File> string

Example: See [Example"Store a hard copy of the display"](#) on page 953.

Usage: Query only

:HCOPY:FILE[:NAME]:AUTO:STATe <State>

Activates automatic naming of the hard copy files.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example"Store a hard copy of the display"](#) on page 953

Manual operation: See ["Automatic Naming"](#) on page 733

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe <State>

:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe <State>

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe <State>

Uses the date parameters (year, month or day) for the automatic naming. You can activate each of the date parameters separately.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example"Store a hard copy of the display"](#) on page 953

Manual operation: See ["Prefix, Year, Month, Day"](#) on page 735

:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?

Queries the number that is used as part of the file name for the next hard copy in automatic mode.

At the beginning, the count starts at 0. The R&S SMW searches the specified output directory for the highest number in the stored files. It increases this number by one to achieve a unique name for the new file.

The resulting auto number is appended to the resulting file name with at least three digits.

Return values:

<Number> integer
 Range: 0 to 999999
 *RST: 0

Example: See [Example"Store a hard copy of the display"](#) on page 953

Usage: Query only

Manual operation: See ["Current Auto Number"](#) on page 736

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX <Prefix>

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATe <State>

Uses the prefix for the automatic generation of the file name, provided `PREF:STAT` is activated.

Parameters:

<State> 1 | ON | 0 | OFF
***RST:** 1

Example: See [Example "Store a hard copy of the display"](#) on page 953

Manual operation: See ["Prefix, Year, Month, Day"](#) on page 735

14.15 KBOard subsystem

The `KBOard` subsystem contains the commands to set a connected keyboard.

[:KBOard:LAYout](#).....958

:KBOard:LAYout <Layout>

Selects the language for an external keyboard and assigns the keys accordingly.

Parameters:

<Layout> CHINEse | DANish | DUTCh | DUTBe | ENGLish | ENGUK |
 FINNish | FRENch | FREBe | FRECa | GERMan | ITALian |
 JAPANese | KORean | NORWegian | PORTuguese | RUSSian |
 SPANish | SWEDish | ENGUS
***RST:** n.a. (factory preset: ENGLish)

Example: `:KBOard:LAYout US`
`// activates American keyboard`

Manual operation: See ["USB Keyboard > Layout"](#) on page 741

14.16 OUTPut subsystem

In the `OUTPut` subsystem, you can configure the output signals.

The LF output signal is defined with the commands of the [Chapter 14.19.11, "SOURce:LFOutput subsystem"](#), on page 1235 system.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
OUTPut<hw>	[1] 2	Signal path

:OUTPut:ALL[:STATe].....	959
:OUTPut<hw>[:STATe].....	959
:OUTPut<hw>[:STATe]:PON.....	959
:OUTPut<hw>:AMODe.....	960
:OUTPut<hw>:BLANK:LIST:STATe.....	960
:OUTPut<hw>:IMPedance?.....	960
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	961
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	961
:OUTPut<hw>:PROTection:CLEar.....	961
:OUTPut<hw>:PROTection:STATe.....	961
:OUTPut<hw>:PROTection:TRIPped?.....	962

:OUTPut:ALL[:STATe] <State>

Activates all RF output signals of the instrument.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 0)

Example: :OUTPut:ALL:STATe 0
 Switches off all RF output signals.

Manual operation: See "RF State/RF ON" on page 483

:OUTPut<hw>[:STATe] <State>

Activates the RF output signal.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: :OUTPut1 ON
 Activates the RF output.

Manual operation: See "RF State/RF ON" on page 483

:OUTPut<hw>[:STATe]:PON <Pon>

Defines the state of the RF output signal when the instrument is switched on.

Parameters:

<Pon> OFF | UNCHanged
 *RST: n.a. (factory preset: UNCHanged)

Example: `:OUTPut1:PON OFF`
 The RF output is deactivated when the instrument is switched on.

Manual operation: See ["Power-On State"](#) on page 743

:OUTPut<hw>:AMODE <AMode>

Sets the step attenuator mode at the RF output.

Note: The setting `[:SOURce<hw>] :POWer:ATTenuation:RFOff:MODE` **FATTenuation** has higher priority than the attenuator modes **FIXed** and **MANual**.

Parameters:

<AMode> `FIXed | MANual | AUTO`

AUTO

The step attenuator adjusts the level settings automatically, within the full variation range.

FIXed

The step attenuator and amplifier stages are fixed at the current position, providing level settings with constant output VSWR. The resulting variation range is calculated according to the position.

To use this mode, activate the ALC (see `[:SOURce<hw>] :POWer:ALC [:STATe]`).

MANual

You can set the level manually, in 10 dB steps.

*RST: `AUTO`

Example: `:SOURce1:POWer:ALC:STATe 1`
`:OUTPut1:AMODE FIXed`

Manual operation: See ["Mode"](#) on page 588

:OUTPut<hw>:BLANK:LIST:STATe <State>

Activates RF output blanking.

Parameters:

<State> `1 | ON | 0 | OFF`

*RST: `1`

Example: `:OUTPut1:BLAN:LIST:STAT ON`
 Activates the RF output blanking.

:OUTPut<hw>:IMPedance?

Queries the impedance of the RF outputs.

Return values:

<Impedance> G1K | G50 | G10K
 *RST: G50

Example:

:OUTPut1:IMP?
 queries the impedance of RF output.
 Response: 50
 the impedance is 50 ohms

Usage:

Query only

Manual operation: See ["RF output impedance"](#) on page 483

:OUTPut<hw>:AFIXed:RANGe:LOWer?

:OUTPut<hw>:AFIXed:RANGe:UPPer?

Queries the settable minimum/maximum value in mode :OUTPut:AMODE FIXed, i.e. when the attenuator is not being adjusted.

See :OUTPut<hw>:AMODE on page 960

Return values:

<Upper> float
 Increment: 0.01
 Default unit: dBm

Example:

```
:OUTPut1:AMODE FIXed
:OUTPut1:AFIXed:RANGe:UPPer?
// -27
:OUTPut1:AFIXed:RANGe:LOW?
// -50
```

Usage:

Query only

Manual operation: See ["Level Range"](#) on page 493

:OUTPut<hw>:PROTection:CLEar

Resets the protective circuit after it has been tripped.

To define the output state, use the command :OUTPut<hw>[:STATE].

Example:

```
:OUTPut1:PROT:CLE
Resets the protective circuit of the RF output.
```

Usage:

Event

Manual operation: See ["Overload"](#) on page 589

:OUTPut<hw>:PROTection:STATE <State>

Attenuates the RF output signal for about 40 dB to protect external devices against internal signals.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

:OUTPut1:PROT:STAT ON
 Attenuates the RF Output signal for about 40 dB.

Manual operation: See "Overload" on page 589

:OUTPut<hw>:PROTection:TRIPped?

Queries the state of the protective circuit.

Return values:

<Tripped> 1 | ON | 0 | OFF
 *RST: 0

Example:

:OUTPut1:PROT:TRIP
 queries the state of the protective circuit of the RF output.
 Response: 0
 the protective circuit has not tripped.

Usage: Query only

Manual operation: See "Overload" on page 589

14.17 SENSe, READ, INITiate and SLISt subsystems

These subsystems contain the commands for configuring the power measurements with R&S NRP power sensor connected to the R&S SMW.



The local state is set with the `INIT` command. Switching off the local state enhances the measurement performance. Measurements results can be retrieved in local state on or off.

Sensor parameters are set with the `SENSe` commands.

To start the measurement and retrieve the result, use the `:READ<ch>[:POWER]?` command.

Suffix	Value range	Description
SENSe<ch>	[1] to 4	Indicates the sensor Sensor mapping: <ul style="list-style-type: none"> • <code>SENSe[1]</code> - default mapping for sensors connected to the [SENSOR] connector • <code>SENSe2</code> - sensor connected to a [USB] connector • <code>SENSe3 4</code> - further connected sensors to [USB] connectors, in the connection order Use the <code>:SLISt</code> commands to change the sensor mapping
READ<ch>	[1] to 4	Sensor assignment

Suffix	Value range	Description
INITiate<hw>	[1] to 4	Sensor assignment
ELEMent<ch>	[1] to 25	Sensor-mapping list

Programming examples

Example: Detecting and assigning a power sensor

```
SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy"
// Lists all automatically detected sensors.

SLISt:SCAN:STATe 1
// Searches for sensors connected in the LAN or via the USBTMC protocol.

SLISt:SCAN:LENSor 'NRQ6',101624 // sensor name, serial number
SLISt:SCAN:LENSor 11.123.1.123, 101624 // IP address, serial number
// Adds sensors to the list, that are connected to LAN.

SLISt:SCAN:USENSor 'NRQ6',101624 //sensor name, serial number
SLISt:SCAN:USENSor #H15b,101624 //device ID (hexadecimal), serial number
SLISt:SCAN:USENSor 347,101624 //device ID (decimal), serial number
// Adds a sensor to the list, that is connected to the USB interface.

SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy",
// "NRP33SN-V-900005-USBTMC","NRP33SN-V-900011-LAN"
// Lists all automatically detected sensors.

SLISt:ELEMent3:MAPPing SENS1
// Maps the third sensor from the list to the first sensor channel.

SLISt:SENSor:MAP "NRPS18S-100654-USB Legacy", SENS3
// Maps the sensor to channel 3.

SLISt:CLEar[ALL]
// Remove all sensors from the list.
SLISt:CLEar:LAN
// Remove all sensors from the list, that are connected over LAN.
SLISt:CLEar:USB
// Remove all sensors from the list, that are connected over USB.
```

Example: Performing a simple power measurement

Prerequisite: The sensor is connected to the instrument and mapped to the first sensor channel.

```
INITiate1:CONTinuous ON
// Switches the continuous power measurement on.

READ1?
// Triggers the measurement and displays the results.
```

Example: Performing a power measurement with a fixed filter

Prerequisite: The sensor is connected to the instrument and mapped to the first sensor channel.

```
SENSe1:SOURce RF
// Sensor measures the power of the RF signal.

SENSe1:FILTer:TYPE NSRatio
// Selects fixed noise filter mode.

SENSe1:FILTer:NSRatio 0.02 DB
// Sets the maximum noise component in the result to 0.02 DB.

SENSe1:FILTer:NSRatio:MTIME 10
//Limits the settling time to 10 seconds.

SENSe1:APERture:DEFault:STATe 0
// Deactivates the default aperture time of the sensor.

SENSe1:APERture:TIME 10e-6
// Sets the aperture time to 10 us.

SENSe1:UNIT DBM
// Selects unit dBm for the measured value.

INITiate:CONTinuous ON
// Switches the continuous power measurement on.

READ?
// Triggers the measurement and displays the results.
```

:SLISt[:LIST]?	965
:SLISt:SCAN[:STATe]	965
:SLISt:SCAN:LENSor	966
:SLISt:SCAN:USENSor	966
:SLISt:CLEAr:LAN	966
:SLISt:CLEAr:USB	967
:SLISt:CLEAr[:ALL]	967
:SLISt:ELEMent<ch>:MAPPing	967
:SLISt:SENSor:MAP	967
:INITiate<hw>[:POWER]:CONTinuous	968

SENSe, READ, INITiate and SLISt subsystems

:READ<ch>[:POWer]?	968
:SENSe<ch>:UNIT[:POWer]	969
:SENSe<ch>[:POWer]:APERTure:DEFault:STATe	969
:SENSe<ch>[:POWer]:APERTure:TIME	969
:SENSe<ch>[:POWer]:CORRection:SPDevice:SELEct	970
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe	970
:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?	970
:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority	970
:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe	971
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?	971
:SENSe<ch>[:POWer]:FILTer:LENGth[:USER]	971
:SENSe<ch>[:POWer]:FILTer:NSRatio	972
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME	972
:SENSe<ch>[:POWer]:FILTer:SONCe	973
:SENSe<ch>[:POWer]:FILTer:TYPE	973
:SENSe<ch>[:POWer]:FREQuency	974
:SENSe<ch>[:POWer]:LOGGing:STATe	974
:SENSe<ch>[:POWer]:OFFSet	974
:SENSe<ch>[:POWer]:OFFSet:STATe	974
:SENSe<ch>[:POWer]:SNUMber?	975
:SENSe<ch>[:POWer]:SOURce	975
:SENSe<ch>[:POWer]:STATus[:DEVice]?	975
:SENSe<ch>[:POWer]:SVERsion?	976
:SENSe<ch>[:POWer]:TYPE?	976
:SENSe<ch>[:POWer]:ZERO	976

:SLISt[:LIST]?

Returns a list of all detected sensors in a comma-separated string.

Return values:

<SensorList> String of comma-separated entries
 Each entry contains information on the sensor type, serial number and interface.
 The order of the entries does not correspond to the order the sensors are displayed in the "NRP Sensor Mapping" dialog.

Example: See [Example "Detecting and assigning a power sensor"](#) on page 963.

Usage: Query only

Manual operation: See ["Sensor Mapping List"](#) on page 622

:SLISt:SCAN[:STATe] <State>

Starts the search for R&S NRP power sensors, connected in the LAN or via the USBTMC protocol.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example](#) "Detecting and assigning a power sensor" on page 963.

Manual operation: See ["Scan"](#) on page 622

:SLISt:SCAN:LENSor <IP>

Scans for R&S NRP power sensors connected in the LAN.

Setting parameters:

<IP> string
 *RST: 0

Example: See [Example](#) "Detecting and assigning a power sensor" on page 963.

Usage: Setting only

Manual operation: See ["Add LAN Sensor settings"](#) on page 622

:SLISt:SCAN:USENSor <DeviceID>, <Serial>

Scans for R&S NRP power sensors connected over a USB interface.

Parameters:

<Serial> integer
 Range: 0 to 999999

Setting parameters:

<DeviceID> String or Integer
 Range: 0 to 999999
 *RST: 0

Example: See [Example](#) "Detecting and assigning a power sensor" on page 963.

Usage: Setting only

Manual operation: See ["Add USB Sensor settings"](#) on page 623

:SLISt:CLEAr:LAN

Removes all R&S NRP power sensors connected in the LAN from the list.

Example: See [Example](#) "Detecting and assigning a power sensor" on page 963.

Usage: Event

Manual operation: See ["Clear"](#) on page 622

:SLISt:CLEAr:USB

Removes all R&S NRP power sensors connected over USB from the list.

Example: See [Example "Detecting and assigning a power sensor"](#) on page 963.

Usage: Event

Manual operation: See ["Clear"](#) on page 622

:SLISt:CLEAr[:ALL]

Removes all R&S NRP power sensors from the list.

Example: See [Example "Detecting and assigning a power sensor"](#) on page 963.

Usage: Event

Manual operation: See ["Clear"](#) on page 622

:SLISt:ELEMent<ch>:MAPPING <Mapping>

Assigns an entry from the [:SLISt\[:LIST\]?](#) to one of the four sensor channels.

Parameters:

<Mapping> SENS1 | SENSor1 | SENS2 | SENSor2 | SENS3 | SENSor3 |
SENS4 | SENSor4 | UNMapped
Sensor channel.
*RST: UNMapped

Example: See [Example "Detecting and assigning a power sensor"](#) on page 963.

Manual operation: See ["Sensor Mapping List"](#) on page 622

:SLISt:SENSor:MAP <SensorId>, <Mapping>

Assigns a sensor directly to one of the sensor channels, using the sensor name and serial number.

To find out the the sensor name and ID, you can get it from the label of the R&S NRP, or using the command [:SLISt:SCAN\[:STATe\]](#). This command detects all R&S NRP power sensors connected in the LAN or via 'USBTMC protocol.

Setting parameters:

<SensorId> string
<Mapping> enum

Example: See [Example "Detecting and assigning a power sensor"](#) on page 963.

Usage: Setting only

Manual operation: See "Sensor Mapping List" on page 622

:INITiate<hw>[:POWER]:CONTinuous <Continuous>

Switches the local state of the continuous power measurement by R&S NRP power sensors on and off. Switching off local state enhances the measurement performance during remote control.

The remote measurement is triggered with **:READ<ch>[:POWER]?**. This command also returns the measurement results. The local state is not affected, measurement results can be retrieved with local state on or off.

Parameters:

<Continuous> 1 | ON | 0 | OFF
*RST: 0

Example:

INIT1:CONT ON
Switches on the local state of continuous power measurement.

Manual operation: See "State" on page 617

:READ<ch>[:POWER]?

Triggers power measurement and displays the results.

Note: This command does not affect the local state, i.e. you can get results with local state on or off. For long measurement times, we recommend that you use an SRQ for command synchronization (MAV bit).

Suffix:

<ch> 1 to 3

Return values:

<Power> float or float,float

The sensor returns the result in the unit set with command **:SENSe<ch>:UNIT[:POWER]**

Certain power sensors, such as the R&S NRP-Z81, return two

values, first the value of the average level and - separated by a comma - the peak value.

Example:

:SENS1:UNIT DBM
Selects unit dBm for presentation of measurement result.
:READ1?
Queries the measurement result of the sensor.
-45.6246576745440230
-45.6 dBm were measured at the given frequency.

Example:

R&S NRP-Z81
:READ1?
-55.62403263352178, -22.419472478812476
-55.6 dBm is the measured average level, -22.4 dBm is the measured peak level at the given frequency.

Usage: Query only

Manual operation: See ["Measured Level"](#) on page 613
See ["Level \(Peak\) / Level \(Average\)"](#) on page 617

:SENSe<ch>:UNIT[:POWER] <Power>

Selects the unit (Watt, dBm or dBμV) of measurement result display, queried with [:READ<ch>\[:POWER\]?](#).

Parameters:

<Power> DBM | DBUV | WATT
*RST: DBM

Example: [:SENS2:UNIT DBM](#)
Selects dBm as unit for the measured value returned by command [READ](#).
[:READ2?](#)
Response: 7.34
7.34 dBm are measured by sensor 2.

Manual operation: See ["Measured Level"](#) on page 613
See ["Level \(Peak\) / Level \(Average\)"](#) on page 617

:SENSe<ch>[:POWER]:APERTure:DEFault:STATe <UseDefAp>

Deactivates the default aperture time of the respective sensor.

To specify a user-defined value, use the command [:SENSe<ch>\[:POWER\]:APERTure:TIME](#) on page 969.

Parameters:

<UseDefAp> 1 | ON | 0 | OFF
*RST: 1

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Default Aperture Time"](#) on page 620

:SENSe<ch>[:POWER]:APERTure:TIME <ApTime>

Defines the aperture time (size of the acquisition interval) for the corresponding sensor.

Parameters:

<ApTime> float
Range: depends on connected power sensor
Increment: 1E-9
*RST: depends on connected power sensor

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Aperture Time"](#) on page 620

:SENSe<ch>[:POWer]:CORRection:SPDevice:SELEct <Select>

Several S-parameter tables can be stored in a sensor. The command selects a loaded data set for S-parameter correction for the corresponding sensor.

Parameters:

<Select> float
*RST: 0

Manual operation: See ["S-Parameter"](#) on page 620

:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe <State>

Activates the use of the S-parameter correction data.

Note: If you use power sensors with attenuator, the instrument automatically activates the use of S-parameter data.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: :SENSe1:POWer:CORRection:SPDevice:STATe 1
Activates the use of the S-parameters correction data.

Manual operation: See ["S-Parameter"](#) on page 620

:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?

Queries the list of the S-parameter data sets that have been loaded to the power sensor.

Return values:

<List> string list
*RST: 0

Usage: Query only

Manual operation: See ["S-Parameter"](#) on page 620

:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority <Priority>

Selects average or peak power for permanent display.

Parameters:

<Priority> AVERAge | PEAK
*RST: AVERAge

Example: :SENS1:DISP:PERM:STAT ON
Turns on the permanent view.
 :SENS1:DISP:PERM:PRI AVER
Sets the average power for display.

Manual operation: See ["Display"](#) on page 618

:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe <State>

Activates the permanent display of the measured power level results. The instrument also indicates the sensor type, the connection, the measurement source and the offset if set.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: :SENS1:POW:DISP:PERM:STAT ON
Turns on the permanent view.

Manual operation: See ["Permanent"](#) on page 617

:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?

Queries the current filter length in filter mode AUTO (:SENSe<ch>[:POWer]:FILTer:TYPE)

Return values:

<Auto> float
Range: 1 to 65536

Example: :SENS1:FILT:TYPE AUTO
Selects auto filter.
 :SENS1:FILT:LENG:AUTO?
Queries the automatically set filter length.
Response: 1024

Usage: Query only

Manual operation: See ["Filter Length"](#) on page 619

:SENSe<ch>[:POWer]:FILTer:LENGth[:USER] <User>

Selects the filter length for SENS:POW:FILT:TYPE USER. As the filter length works as a multiplier for the time window, a constant filter length results in a constant measurement time (see also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 608).

The R&S NRP power sensors provide different resolutions for setting the filter length, depending on the used sensor type:

- Resolution = 1 for R&S NRPxx power sensors
- Resolution = 2^n for sensors of the R&S NRP-Zxx family, with $n = 1$ to 16

Parameters:

<User> float
 Range: 1 to 65536
 *RST: 1

Example:

```
:SENS1:FILT:TYPE USER
Selects user filter mode.
:SENS1:FILT:LENG 16
Sets a filter length of 16. E.g. using a sensor with 20 ms time
window, the resulting measurement time is 640 ms (2x16x20
ms)
```

Manual operation: See ["Filter Length"](#) on page 619

:SENSe<ch>[:POWer]:FILTer:NSRatio <NSRatio>

Sets an upper limit for the relative noise content in fixed noise filter mode (: [SENSe<ch>\[:POWer\]:FILTer:TYPE](#)). This value determines the proportion of intrinsic noise in the measurement results.

Parameters:

<NSRatio> float
 Range: 0.001 to 1
 Increment: 0.001
 *RST: 0.01

Example:

See [Example"Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Noise/Signal Ratio"](#) on page 619

:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME <MTime>

Sets an upper limit for the settling time of the auto-averaging filter and thus limits the length of the filter.

Parameters:

<MTime> float
 Range: 1 to 999.99
 Increment: 0.01
 *RST: 4

Example:

See [Example"Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Timeout"](#) on page 619

:SENSe<ch>[:POWer]:FILTer:SONCe

Starts searching the optimum filter length for the current measurement conditions. You can check the result with command `:SENS1:POW:FILT:LENG:USER?` in filter mode USER (`:SENSe<ch>[:POWer]:FILTer:TYPE`).

Example:

```
SENS1:FILT:TYPE USER
```

Selects user filter mode.

```
:SENS1:FILT:SONC
```

Activates the search for the optimum filter length.

```
:SENS1:FILT:LENG?
```

Returns the found optimum filter length.

```
Response: 128
```

Usage: Event

Manual operation: See ["Auto Once"](#) on page 619

:SENSe<ch>[:POWer]:FILTer:TYPE <Type>

Selects the filter mode. The filter length is the multiplier for the time window and thus directly affects the measurement time.

Parameters:

<Type>

AUTO | USER | NSRatio

AUTO

Automatically selects the filter length, depending on the measured value. The higher the power, the shorter the filter length, and vice versa.

Note: To avoid long settling times when the power is low, you can limit the averaging factor limited with the "timeout" parameter (`:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME`).

USER

Allows you to set the filter length manually. As the filter-length takes effect as a multiplier of the measurement time, you can achieve constant measurement times.

NSRatio

Selects the filter length (averaging factor) according to the criterion that the intrinsic noise of the sensor (2 standard deviations) does not exceed the specified noise content. You can define the noise content with command `:SENSe<ch>[:POWer]:FILTer:NSRatio`.

```
*RST: AUTO
```

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Filter"](#) on page 618

:SENSe<ch>[:POWer]:FREQuency <Frequency>

Sets the RF frequency of the signal, if signal source :SENSe<ch>[:POWer]:SOURce USER is selected.

Parameters:

<Frequency> float
*RST: 1 GHz

Example:

:SENS1:SOUR USER
Selects user-defined source.
:SENS1:FREQ 2.44GHz
Sets the RF frequency of the source which is 2.44 GHz.

Manual operation: See ["Frequency"](#) on page 618

:SENSe<ch>[:POWer]:LOGGing:STATe <State>

Activates the recording of the power values, measured by a connected R&S NRP power sensor.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example:

:SENS:LOGG:STAT ON
Activates recording of the power measurement of the first sensor.

Manual operation: See ["Enable Logging"](#) on page 620

:SENSe<ch>[:POWer]:OFFSet <Offset>

Sets a level offset which is added to the measured level value after activation with command :SENSe<ch>[:POWer]:OFFSet:STATe. The level offset allows, e.g. to consider an attenuator in the signal path.

Parameters:

<Offset> float
Range: -100.0 to 100.0
*RST: 0
Default unit: dB

Example:

:SENS1:POW:OFFS 10.0
Sets a level offset of 10 dB

Manual operation: See ["Level Offset State, Level Offset"](#) on page 618

:SENSe<ch>[:POWer]:OFFSet:STATe <State>

Activates the addition of the level offset to the measured value. The level offset value is set with command :SENSe<ch>[:POWer]:OFFSet.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

:SENS1:POW:OFFS 0.4dB
 Sets a level offset of 0.4 dB
 :SENS1:POW:OFFS:STAT ON
 A level offset of 0.4 dB is added to the measured value.

Manual operation: See ["Level Offset State, Level Offset"](#) on page 618

:SENSe<ch>[:POWer]:SNUMber?

Queries the serial number of the sensor.

Return values:

<SNumber> string

Example:

:SENS1:SNUM?
 Queries the serial number.

Usage:

Query only

Manual operation: See ["Sensor type and serial number"](#) on page 617

:SENSe<ch>[:POWer]:SOURce <Source>

Determines the signal to be measured.

Note: When measuring the RF signal, the sensor considers the corresponding correction factor at that frequency, and uses the level setting of the instrument as reference level.

Parameters:

<Source> A | USER | RF | B
 *RST: A

Example:

See [Example "Performing a power measurement with a fixed filter"](#) on page 964.

Manual operation: See ["Use Frequency Of"](#) on page 618

:SENSe<ch>[:POWer]:STATus[:DEVice]?

Queries if a sensor is connected to the instrument.

Return values:

<Status> 1 | ON | 0 | OFF
 *RST: 0

Example:

:SENS1:STAT?
 Response: 1
 A sensor is connected.

Usage: Query only
Manual operation: See ["State"](#) on page 617

:SENSe<ch>[:POWer]:SVERsion?

Queries the software version of the connected R&S NRP power sensor.

Return values:

<SVersion> string

Example: :SENS1:POW:SVER?
 Queries the software version of the power sensor.

Usage: Query only

:SENSe<ch>[:POWer]:TYPE?

Queries the sensor type. The type is automatically detected.

Return values:

<Type> string

Example: :SENS1:TYPE?
 Queries the type of sensor.
 Response: NRP-Z21
 The R&S NRP-Z21 sensor is used.

Usage: Query only

Manual operation: See ["Sensor type and serial number"](#) on page 617

:SENSe<ch>[:POWer]:ZERO

Performs zeroing of the sensor.

Zeroing is required after warm-up, i.e. after connecting the sensor.

Note: Switch off or disconnect the RF power source from the sensor before zeroing.

We recommend that you zero in regular intervals (at least once a day), if:

- The temperature has varied more than about 5 °C.
- The sensor has been replaced.
- You want to measure very low power.

Example: :SENS1:ZERO
 Executes zeroing.

Usage: Event

Manual operation: See ["Zero"](#) on page 617

14.18 SCONfiguration subsystem

The SCONfiguration subsystem contains the commands to define the system configuration, stream mapping and baseband configuration.

Required options

See ["Required options"](#) on page 126.

Common suffixes

The commands in this chapter use the following common suffixes:

Suffix	Suffix range	Description	Required options
BBMM<ch>	1 to 2	HS DIG I/Q input or output connectors	R&S SMW-B13XT R&S SMW-B9 + R&S SMW-K19 per connector
CHANnel<ch0>	0 to 7	Channel number, up to 8 channels per HS DIG I/Q interface and maximum 8 channels for both interfaces.	R&S SMW-K19
CODer<ch>	1 to 2	DIG I/Q input connectors	R&S SMW-B10 per connector
FADer<ch>	1 to 4	DIG I/Q input or output connectors HS DIG I/Q input or output connectors	R&S SMW-B10 + R&S SMW-B14 R&S SMW-B9 + R&S SMW-B15
IQOutput<ch>	1 to 2	DIG I/Q output connectors	R&S SMW-B13/-B13T R&S SMW-B10 + R&S SMW-K19 per connector
RF<ch>	1 to 2	RF A/RF B connectors	Frequency option per path, for example, R&S SMW-B1003 + R&S SMW-B2003
STReam<st>	1 to 8	IQ streams	-

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Example: Distributing the I/Q streams to the output connectors

The following example lists the commands necessary to fulfill this task.

```
// *****
// Reset system configuration and enable 1x4x4 MIMO fading configuration.
// *****
SCONfiguration:PRESet
SCONfiguration:MODE ADVanced
SCONfiguration:FADing MIMO4X4
```

```

SCONfiguration:BASEband:SOURce COUPled
SCONfiguration:APPLY

// *****
// Map the I/Q streams to the output connectors.
// *****
SCONfiguration:OUTPut:MAPPING:RF1:STReam1:STATe ON
SCONfiguration:OUTPut:MAPPING:IQOutput1:STReam3:STATe ON

SCONfiguration:OUTPut:MAPPING:STReam1:FOFFset 20E6
SCONfiguration:OUTPut:MAPPING:STReam1:POFFset 0
SCONfiguration:OUTPut:MAPPING:RF2:STReam2:STATe ON
SCONfiguration:OUTPut:MAPPING:IQOutput2:STReam4:STATe ON
// The digital I/Q outputs are not used.
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam1:STATe OFF
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam2:STATe OFF
SCONfiguration:OUTPut:MAPPING:FADer3:STReam3:STATe OFF
SCONfiguration:OUTPut:MAPPING:FADer4:STReam4:STATe OFF

// *****
// Alternatively, add stream A&C and B&D and output the signal at the digital IQ
// outputs BBMM1 and BBMM2.
SCONfiguration:OUTPut:MAPPING:BBMM1:MODE ADD
SCONfiguration:OUTPut:MAPPING:BBMM2:MODE ADD
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam1:STATe ON
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam2:STATe ON
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam3:STATe ON
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam4:STATe ON

```

Example: Connecting and configuring external instruments

The following example lists the commands necessary to fulfill this task.

```

// *****
// Scan interfaces and your network for connected instruments.
// *****
SCONfiguration:EXTErnal:DISPlay ALL
SCONfiguration:EXTErnal:REMOte:CLEan
SCONfiguration:EXTErnal:REMOte:SCAN
SCONfiguration:EXTErnal:REMOte:SCAN:STATe?
// Response: "0"
// The scanning procedure is finished.

// *****
// Specify characteristics at the input and output interfaces.
// *****
SCONfiguration:EXTErnal:CODer1:DIRection?
// Response: "IN"
SCONfiguration:EXTErnal:BBMM1:DIRection?
// Response: "OUT"
SCONfiguration:EXTErnal:IQOutput1:DIRection?

```

```

// Query the IQ connection state.
SCONfiguration:EXtErnal:CODeR1:IQConnection:STATe?
// Response: 1
SCONfiguration:EXtErnal:BBMM1:IQConnection:STATe?
// Response: 1

// *****
// Manage external instruments.
// *****
SCONfiguration:EXtErnal:REMOte:LIST?
// Response: "SMBV100B,SGS_2,SGT100A,SMBVB_1,SMBVB_2,SMW200A (100010)"
// Add instruments to selection.
SCONfiguration:EXtErnal:REMOte:ADD "SGS_1","USB","100007"
SCONfiguration:EXtErnal:REMOte:ADD "SMW200A (100001)","LAN","10.112.11.125","2"
SCONfiguration:EXtErnal:REMOte:LIST?
// Response: "SMBV100B,SGS_2,SGT100A,SMBVB_1,SMBVB_2,SMW200A (100010),SGS_1,
// SMW200A (100001)"
SCONfiguration:EXtErnal:REMOte:REName "SGS_2","SGS (102030)"
SCONfiguration:EXtErnal:REMOte:LIST?
// Response: "SMBV100B,SGS (102030),SGT100A,SMBVB_1,SMBVB_2,SMW200A (100010),SGS_1,
// SMW200A (100001)"

// *****
// Detect external instruments and connect them to the R&S SMW.
// *****
SCONfiguration:EXtErnal:BBMM1:REMOte:DETeCt?
// Response: "SGT100A"
SCONfiguration:EXtErnal:BBMM1:REMOte:ISELeCt?
// Response: "SGT100A","A"
SCONfiguration:EXtErnal:BBMM1:REMOte:CONNeCt
// Alternatively, combine instrument select and connect.
SCONfiguration:EXtErnal:BBMM1:REMOte:ICONNeCt "SGT100A","A"
SCONfiguration:EXtErnal:IQOutput1:REMOte:ISELeCt "SGS_1","A"
SCONfiguration:EXtErnal:IQOutput1:REMOte:CONNeCt
// Alternatively, combine instrument select and connect.
SCONfiguration:EXtErnal:IQOutput1:REMOte:ICONNeCt "SGS_1","A"
// Query the connection state.
SCONfiguration:EXtErnal:IQOutput1:RCONNeCtion:STATe?
// Response: 1
SCONfiguration:EXtErnal:BBMM1:RCONNeCtion:STATe?
// Response: 1
// Query instrument names.
SCONfiguration:EXtErnal:CODeR1:INAMe?
SCONfiguration:EXtErnal:BBMM1:INAMe?
// Response: "SGT100A [A]"
SCONfiguration:EXtErnal:IQOutput1:INAMe?
// Response: "SGS_1 [A]"

// *****
// Specify characteristics of the IQ output signal.

```

```

// *****
SCONfiguration:EXtErnal:BBMM1:RF:COUPling ON
SCONfiguration:EXtErnal:BBMM1:RF:FREQuency:OFFSet 0
SCONfiguration:EXtErnal:BBMM1:RF:POWer:OFFSet -10
OUTPut1:STATe ON
SCONfiguration:EXtErnal:BBMM1:RF:STATe?
// Response: 1
SCONfiguration:EXtErnal:IQOutput1:RF:COUPling OFF
SCONfiguration:EXtErnal:IQOutput1:RF:FREQuency 2143000000
SCONfiguration:EXtErnal:IQOutput1:RF:POWer -20
SCONfiguration:EXtErnal:IQOutput1:RF:STATe ON

// *****
// Specify the initialization sequence with a user-defined initialization file.
// *****
MMEMory:CDIRectory "/var/user/RcExtInstr"
SCONfiguration:EXtErnal:REMOte:INITialization:CATalog?
// Response: "init_seq_sgs"
SCONfiguration:EXtErnal:IQOutput1:REMOte:INITialization:FILE "init_seq_sgs.iec"

SCONfiguration:EXtErnal:ACONnect 1
*RST
SCONfiguration:EXtErnal:BBMM1:INAMe?
// Response: timeout
SCONfiguration:EXtErnal:REMOte:PURGe
// Disconnect and disable remote control of the external instruments.
SCONfiguration:EXtErnal:REMOte:DISConnect[:ALL]

```

Example: Configuring primary-secondary mode

```
// For the primary instrument:
SOURCE1:ROSCillator:SOURce INT
SCONfiguration:MULTiinstrument:MODE PRIMary
SCONfiguration:MULTiinstrument:STATe 1
SCONfiguration:APPLY

SOURCE1:INPut:USER6:DIRection OUTP
OUTPut1:USER6:SIGNAL INSinc

SOURCE1:INPut:USER5:DIRection OUTP
OUTPut1:USER5:SIGNAL INSinc

// For the secondary instrument:
SOURCE1:ROSCillator:SOURce EXT
SOURCE1:ROSCillator:EXternal:FREQuency 10MHZ
SCONfiguration:MULTiinstrument:MODE SECondary
SCONfiguration:MULTiinstrument:STATe 1

SOURCE1:INPut:USER5:DIRection INP
SOURCE1:INPut:USER5:SIGNAL OUTSinc
SOURCE1:INPut:USER6:DIRection OUTP
OUTPut1:USER6:SIGNAL INSinc
SCONfiguration:MULTiinstrument:TRIGger:SYNChronization?
// SYNC
```

Example: Generating digital signals

```
SCONfiguration:PRESet
SCONfiguration:MODE ADVanced
SCONfiguration:OUTPut:MODE HSAL
SCONfiguration:FADing FAAFBB
SCONfiguration:BASEband:SOURce SEP
// Set six channels at the HS DIG I/Q
SCONfiguration:DIQ:BBMM1:CHANnels CH6
SCONfiguration:DIQ:BBMM2:CHANnels CH4
SCONfiguration:DIQ:BBMM1:CHANnels?
// Response: "CH4"
// Number of channels adapted so that the total number of channels is 8.
SCONfiguration:APPLY
```

See also [Example "Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Example: Generating digital multiplexed signals

The following is a general example. Not all required settings are considered.

```
// *****
// Reset the system configuration and enable a 1x2x8 MIMO fading config
SCONfiguration:PRESet
SCONfiguration:MODE ADVanced
SCONfiguration:FADing MIMO2X8
```

```
// Enable the generation of digital multiplexed signals
SCONfiguration:OUTPut:MODE DIGM
SCONfiguration:APPLy

// *****
// Verify the I/Q stream mapping
SCONfiguration:OUTPut:MAPPING:BBMM1:MODE?
// Response:  MULT
SCONfiguration:OUTPut:MAPPING:BBMM2:MODE?
// Response:  MULT
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam1:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam3:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam5:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM1:STReam7:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam2:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam4:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam6:STATe?
// Response:  1
SCONfiguration:OUTPut:MAPPING:BBMM2:STReam8:STATe?
// Response:  1
```

Example: Controlling the R&S SMW and external RF instruments with the same application program

If you have to remote control a test setup with R&S SMW and other instruments from a remote computer (external controller), you have to synchronize remote commands (SCPI commands) you send to the different instruments (see [Figure 14-3](#)).

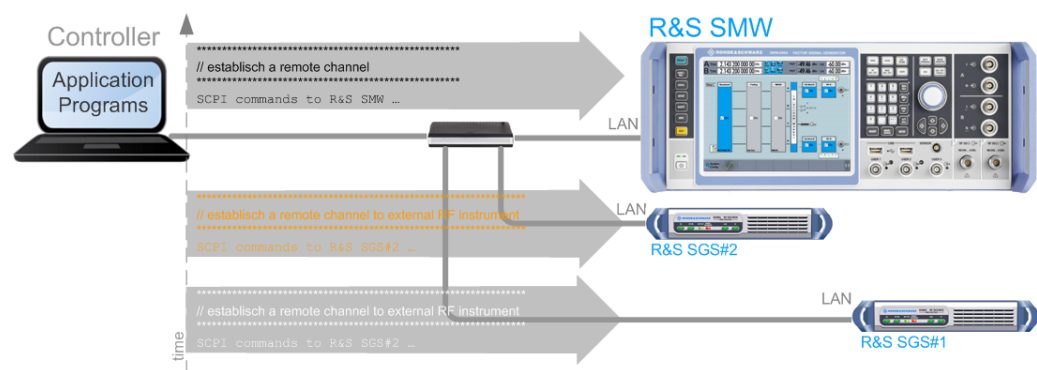


Figure 14-3: Conventional way to remote control the R&S SMW and external RF instruments

This example shows you how to use the same application program to control the external RF instruments via the R&S SMW, without opening remote sessions to these instruments.

Overview of the possible solutions

If the required remote control connections (LAN or USB) to the external instruments are established additionally to the I/Q connections, you can control these external devices from the R&S SMW in one of the following ways:

- In manual operation:
 - Use the "System Configuration > External RF and I/Q" settings and the "External Instruments > Config > External Instrument Configuration" settings. You can for example set the frequency and level of the connected instruments, as well as activate or deactivate their RF outputs. See [Chapter 4.9.6, "How to connect and configure external instruments"](#), on page 200
 - Use the "External Instrument Configuration > Remote Control" settings to send individual SCPI commands or a sequence of SCPI commands to the connected external instruments.
- In remote operation:
 - Use the `SCONfiguration: . . . remote control commands` that correspond to settings in manual operation. See [Example "Connecting and configuring external instruments"](#) on page 978
 - Use the `SCONfiguration:EXTernal:<Connector>:REMOte:SEND` commands to control the connected RF instruments. See ["Your R&S SMW as a controller of external instruments"](#) on page 983.

The [Figure 14-4](#) shows the extent of the particular solution.

„System Config > External RF and I/Q > External Instruments Configuration > Remote Control“

:SCONfiguration:EXTernal:<Connector>:REMOte:SEND „remote control commands“

e.g:

```

SCONfiguration:EXTernal:IQOUT1:REMOte:SEND „SOURCE:IQ:IMPAirment:LEAKage:I -1”
SCONfiguration:EXTernal:IQOUT1:REMOte:SEND „SOURCE:IQ:IMPAirment:IQRatio:MAGNitude?”
  
```


„System Config > External RF and I/Q > External Instruments Configuration > Initialization Sequence“

Subset of setting stored as an initialization file (*.iec)

„System Config > External RF and I/Q“

Major instrument setting:

Instrument Name	RF Coupl	RF Frequency /Hz	RF Level /dBm	RF State
SGS [A]	<input type="checkbox"/>	12 750 000 000.0	-30.00	On
SGS2 [A]	<input type="checkbox"/>	12 750 000 000.0	-30.00	On

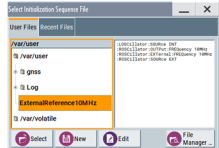

Any setting of the connected external instrument

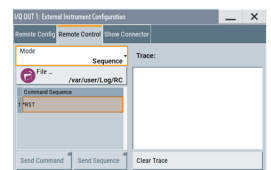


Figure 14-4: Extent and impact of the provided solutions

Your R&S SMW as a controller of external instruments

The [Figure 14-5](#) shows a simplified version of the test setup on [Figure 4-24](#). The figure shows a configuration example of two R&S SGS, directly controlled by an R&S SMW. The figure illustrates the principle and does not show all connections.

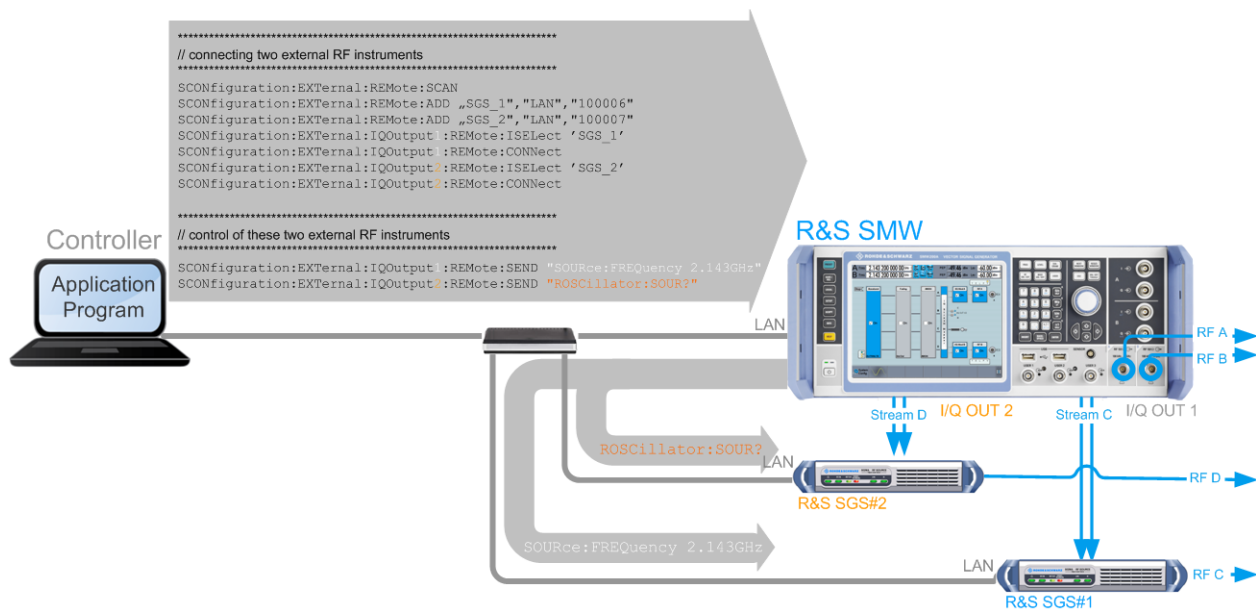


Figure 14-5: Remote control of external RF instruments via the R&S SMW

In this setup, a controller does not need to access the external instruments directly. Instead, the R&S SMW acts as a controller to these instruments.

We assume that:

- You control the R&S SMW from a remote controller
- The instruments are connected to a LAN and there is no active remote channel from the controller to the external instruments
- External RF instruments are connected to the R&S SMW, for example two R&S SGS.

To control an external instrument from the R&S SMW remotely

Perform the following general steps:

1. Connect the external RF instruments to the R&S SMW.

See:

- [Chapter 4.9.5, "How to cable the instruments in MIMO test setups"](#), on page 199
- ["To connect instruments to the I/Q analog interface"](#) on page 201

2. Connect a controller and establish a remote control connection to the R&S SMW, see [Chapter 13.8, "To establish a remote control session over LAN"](#), on page 874.

3. Write an application program and use the `SCONfiguration:EXtErnal:<Connector>:REmote:SEND` commands to control the connected RF instruments.

See also [Example "Connecting an external instrument and sending SCPI commands"](#) on page 985.

Example: Connecting an external instrument and sending SCPI commands

The following example lists the commands necessary to fulfill this task. This example uses the configuration made in [Example "Connecting and configuring external instruments"](#) on page 978.

We assume that an external instrument (R&S SGT) is connected to the BBMM1 connector.

```
SCONfiguration:EXternal:DISPlay ALL
SCONfiguration:EXternal:REMOte:CLEan
SCONfiguration:EXternal:REMOte:SCAN

SCONfiguration:EXternal:BBMM1:IQConnection:STATe?
// Response: 1

SCONfiguration:EXternal:REMOte:LIST?
// Response: SMBV100A,SGS_2,SGT100A,SMBV_1,SMBV_2,SMU200A (100010),SGS_1,SMU200A (100001)

// Detecting a connected external instrument and connecting it
SCONfiguration:EXternal:BBMM1:REMOte:DETEct?
// Response: "SGT100A"
SCONfiguration:EXternal:BBMM1:REMOte:ISElect?
// Response: "SGT100A","A"
SCONfiguration:EXternal:BBMM1:REMOte:CONNEct

SCONfiguration:EXternal:BBMM1:RCONNECTION:STATe?
// Response: 1

SCONfiguration:EXternal:BBMM1:INAME?
// Response: "SGT100A [A]"

// Sending SCPI commands directly to the connected external instrument
SCONfiguration:EXternal:BBMM1:REMOte:SEND ":SOURce1:FREQuency 2.1GHz"
SCONfiguration:EXternal:BBMM1:REMOte:SEND ":SOURce1:FREQuency?"
```

Example: Enabling signal with 400 MHz fading bandwidth

The following is a simple example on how to configure the settings.

```
SCONfiguration:MODE ADV
SCONfiguration:FADing MIMO2x2x2
SCONfiguration:BBBW BB400
SCONfiguration:CABW?
// BB800
SCONfiguration:APPLY
SCONfiguration:FADing MIMO2x2x4
SCONfiguration:BBBW?
// BB200
SCONfiguration:CABW?
// BB800
```

Example: Enabling an 1x8x8 MIMO configuration with two R&S SMW

In the following, we assume that the two R&S SMW are connected and configured as required.

The example uses R&S SGS as RF extensions and the internal baseband signal of the first R&S SMW as trigger source for both instruments. If you use common external trigger source, consider to adapt the proposed configuration.

```
*RST
// Select 8x8 MIMO and set MIMO subset.
SCONfiguration:MODE ADV
SCONfiguration:FADing MIMO8X8
SCONfiguration:MIMO:SUBSet SET1

SCONfiguration:APPLY
// The instrument generates streams A to D.
// Configure connectors for synchronous baseband triggering.
// Alternatively, use an external common trigger source.
SOURcel:INPut:USER6:DIRection OUTP
OUTPut1:USER6:SIGNAL MTR

// Configure the fading simulator.
// Enable synchronization of the fading process to the baseband trigger.
SOURcel:FSIMulator:REStart:MODE BBTR
SOURcel:FSIMulator:STATe 1

// Configure the baseband signal incl. trigger settings.
// Synchronize baseband triggering for an external common trigger source.
// Adapt configuration.
SOURcel:BB:EUTRa:TRIGger:SEQuence ARET
SOURcel:BB:EUTRa:TRIGger:SOURce EGT1
SOURcel:BB:EUTRa:STATe 1

// Set frequency and level of the RF signal.
SOURcel:FREQuency:CW 1950000000
SOURce2:FREQuency:CW 1950000000
SOURcel:POWer:POWer -50
SOURce2:POWer:POWer -50
// Connect and configure the RF extensions, for example, R&S SGS.
SOURcel:IQ:OUTPut:ANALog:STATe 1
SOURce2:IQ:OUTPut:ANALog:STATe 1

// Activate the IQ and RF outputs.
SOURce2:IQ:STATe 1
SOURcel:IQ:STATe 1
OUTPut2:STATe 1
OUTPut1:STATe 1

// Save the configuration.
*SAV 1
MMEMoRY:STORe:STATe 1,"/var/user/8x8_MIMO_Subset1.savrc1.txt"

// Transfer to file to the second instrument
// Load the configuration and change the subset.
```

```
SCONfiguration:MIMO:SUBSet SET2
```

```
// Trigger the baseband signal generation and hence the fading process.
```

```
OUTPut1:USER6:TRIGger:IMMediate
```

• Multi-instrument configuration commands	987
• Baseband and fading configuration commands	988
• I/Q stream mapper commands	993
• External RF and I/Q instruments commands	995
• RF ports alignment commands	1009

14.18.1 Multi-instrument configuration commands

Option: R&S SMW-B9.

The following commands configure multi-instrument settings.

Commands:

:SCONfiguration:MULTIinstrument:MODE	987
:SCONfiguration:MULTIinstrument:STATe	987
:SCONfiguration:MULTIinstrument:TRIGger:SYNChronization?	987

:SCONfiguration:MULTIinstrument:MODE <MSMode>

Sets if the instrument works as a primary or as a secondary instrument.

Parameters:

<MSMode> PRIMary | SECondary
 *RST: PRIMary

Example: See [Example"Configuring primary-secondary mode"](#)
 on page 981.

Manual operation: See ["Multi Instrument Trigger"](#) on page 672

:SCONfiguration:MULTIinstrument:STATe <TriggerState>

Activates the selected mode.

Parameters:

<TriggerState> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Configuring primary-secondary mode"](#)
 on page 981.

Manual operation: See ["State"](#) on page 672

:SCONfiguration:MULTIinstrument:TRIGger:SYNChronization?

Queries if synchronization is achieved.

Return values:

<SyncState> SYNC | NOSync
 *RST: NOSync

Example: See [Example"Configuring primary-secondary mode"](#) on page 981.

Usage: Query only

Manual operation: See ["Synchronisation State"](#) on page 672

14.18.2 Baseband and fading configuration commands

:SCONfiguration:PRESet.....	988
:SCONfiguration:MODE.....	988
:SCONfiguration:OUTPut:MODE.....	989
:SCONfiguration:FADing.....	990
:SCONfiguration:MIMO:SUBSet.....	991
:SCONfiguration:BASeband:SOURce.....	991
:SCONfiguration:BBBW.....	991
:SCONfiguration:CABW?.....	992
:SCONfiguration:DIQ:BBMM1:CHANnels.....	992
:SCONfiguration:DIQ:BBMM2:CHANnels.....	992
:SCONfiguration:DUPLicate[:STReam].....	993
:SCONfiguration:APPLy.....	993

:SCONfiguration:PRESet

Presets the signal routing in the baseband section and the fading configuration to the default state.

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Usage: Event

Manual operation: See ["Set to Default"](#) on page 134

:SCONfiguration:MODE <Mode>

Switches between the operating modes.

Parameters:

<Mode> ADVanced | STANdard | REGenerator | GNSS | ESEQuencer | BWEXtension

ADVanced|STANdard

Switches between the [Standard mode](#) and [Advanced mode](#).

REGenerator

Enables the R&S SMW to work as a radar echo generator. The fading simulator is disabled.

See the user manual R&S SMW-K78 Radar Echo Generation.

GNSS

Enables the R&S SMW to work in GNSS advanced mode. The fading simulator is disabled.

See the user manual R&S SMW Satellite Navigation.

ESEQuencer

Enables the R&S SMW to work in an advanced extended sequencer mode.

The fading simulator, the AWGN, the BB input and all baseband digital standards are disabled.

See user manual R&S SMW-K501/-K502/-K503/-K504/-K315 Extended and Real-Time Sequencing, Real-Time Control Interface, Extended Pulse Rate, Permanent Emitters.

BEXTension

Enables the R&S SMW to generate RF signals with extended bandwidth. These signals typically have bandwidths above 2.4 GHz.

See the user manual R&S SMW-K555 Bandwidth Extension.

*RST: STANdard

Example: See [Example "Distributing the I/Q streams to the output connectors"](#) on page 977.

Options: REGenerator requires option R&S SMW-K78.
 GNSS requires option R&S SMW-B9.
 ESEQuencer requires options R&S SMW-B15/-K315.
 BEXTension requires options R&S SMW-B9 and R&S SMW-K555.

Manual operation: See ["Mode"](#) on page 128

:SCONfiguration:OUTPut:MODE <Mode>

Defines what kind of signal is generated and which output interfaces are enabled.

Parameters:

<Mode>

DIGMux | DIGital | ALL | ANALog | HSDigital | HSALI

ALL

Output at the analog (RF and I/Q) and the digital DIG I/Q interfaces.

DIGital | DIGMux

Signal is output as single stream or multiplexed digital signal at the DIG I/Q interfaces.

ANALog

Output at the analog (RF and I/Q) interfaces.

HSDigital

Output at the interfaces HS DIG I/Q interfaces.

HSALI

Output at the analog (RF and I/Q) and the digital HS DIG I/Q interfaces.

*RST: ALL

Example: SCONfiguration:OUTPut:MODE ALL

Options: DIGMux requires R&S SMW-K551
DIGital requires R&S SMW-K18/-K19
ANALog|HSDigital|HSAI require R&S SMW-B9 and R&S SMW-K19

Manual operation: See ["Signal Outputs"](#) on page 129

:SCONfiguration:FADing <FadConfig>

Defines the signal routing.

:SCONfiguration:MODE	<FadConfig>
STANdard	FAAFBNone FANFBB FAAFBB FAAFBA FABFBB FAABFBN FANFBAB FAABFBAB
ADVanced	MIMO1X2 MIMO2X2 MIMO2X3 MIMO2X4 MIMO3X2 MIMO3X3 MIMO3X4 MIMO4X2 MIMO4X3 MIMO4X4 MIMO1X8 MIMO8X1 MIMO2X8 MIMO8X2 MIMO2X1 MIMO2X1X2 MIMO2X2X1 MIMO2X1X3 MIMO2X1X4 MIMO2X2X2 MIMO1X3 MIMO3X1 MIMO1X4 MIMO4X1 MIMO3X1X2 MIMO3X2X1 MIMO4X1X2 MIMO3X2X2 MIMO4X2X2 MIMO4X2X1 SISO2X1X1 SISO3X1X1 SISO4X1X1 SISO5X1X1 SISO6X1X1 SISO7X1X1 SISO8X1X1 MIMO2X2X4 MIMO2X4X2 MIMO2X2X3 MIMO2X3X1 MIMO2X3X2 MIMO2X4X1 MIMO4X8 MIMO8X4 MIMO2X4X4 MIMO2X3X3 MIMO2X3X4 MIMO2X4X3 MIMO8X8

Parameters:

<FadConfig>

FAAFBNone | FANFBB | FAAFBB | SISO2X1X1 | FAAFBA | FABFBB | FAABFBN | FANFBAB | FAABFBAB | MIMO1X2 | MIMO2X2 | MIMO2X3 | MIMO2X4 | MIMO3X2 | MIMO3X3 | MIMO3X4 | MIMO4X2 | MIMO4X3 | MIMO4X4 | MIMO1X8 | MIMO8X1 | MIMO2X8 | MIMO8X2 | MIMO2X1 | MIMO2X1X2 | MIMO2X2X1 | MIMO2X2X2 | MIMO1X3 | MIMO3X1 | MIMO1X4 | MIMO4X1 | MIMO3X1X2 | MIMO3X2X1 | MIMO4X1X2 | MIMO3X2X2 | MIMO4X2X2 | MIMO4X2X1 | SISO3X1X1 | SISO4X1X1 | SISO5X1X1 | SISO6X1X1 | SISO7X1X1 | SISO8X1X1 | MIMO2X2X4 | MIMO2X4X2 | MIMO4X8 | MIMO8X4 | MIMO2X1X3 | MIMO2X1X4 | MIMO2X2X3 | MIMO2X3X1 | MIMO2X3X2 | MIMO2X4X1 | MIMO2X4X4 | MIMO2X3X3 | MIMO2X3X4 | MIMO2X4X3 | MIMO8X8

*RST: FAAFBB

Example: See [Example" Distributing the I/Q streams to the output connectors"](#) on page 977.

Options: See data sheet.

Manual operation: See ["Signal Routing"](#) on page 130
 See ["Entities \(Users, Cells\)"](#) on page 130
 See ["BB Signals \(Tx Antennas\)"](#) on page 131
 See ["Streams \(Rx Antennas\)"](#) on page 131

:SCONfiguration:MIMO:SUBSet <Subset>

Sets the MIMO subset.

While simulating 8x8 or 4x4 MIMO mode with wider fading bandwidth and two R&S SMW, the MIMO subset defines which fading channels from the MIMO matrix are calculated by the selected instrument. The MIMO subset selected in each of the two connected instrument has to be different.

Parameters:

<Subset> SET2 | SET1 | ALL
 *RST: SET1 (R&S SMW-B10)/ALL(R&S SMW-B9)

Example: See [Example"Enabling an 1x8x8 MIMO configuration with two R&S SMW"](#) on page 986.

Options: ALL requires R&S SMW-B9
 SET2|SET1 requires R&S SMW-K821/K822.

Manual operation: See ["Subset"](#) on page 131

:SCONfiguration:BASEband:SOURce <SourConfig>

Determines whether coupled or separated baseband sources are used.

Parameters:

<SourConfig> SEParate | COUPled | CPENtity
SEParate
 Enabled in LxMxN configurations with $L \leq 2$ and $M < 4$
COUPled|CPENtity
 Enabled in LxMxN configurations with $L > 2$
 CPENtity enabled in LxMxN configurations with $L > 1$ and $M > 1$.
 *RST: SEParate

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Manual operation: See ["Baseband Source Config"](#) on page 132

:SCONfiguration:BBBW <Bandwidth>

Sets the bandwidth of the baseband signal at the inputs of the fading simulator.

The available values depend on the selected MIMO configuration.

For example:

- In MIMO configurations with fewer than 8 channels, the max. baseband bandwidth is 400 MHz.
- In MIMO configurations with fewer than 4 channels, the max. baseband bandwidth is 800 MHz.

Parameters:

<Bandwidth> BB040 | BB050 | BB080 | BB100 | BB160 | BB200 | BB800 | BB400 | BB500 | BB1G | BB2G | BB120 | BBOUTDEF | BB240
BB040|BB050 ...
 Bandwidth in MHz, e.g. 40 MHz.
BB1G|BB2G
 1 GHz, 2 GHz bandwidth.
 Available in SISO configurations.
BBOUTDEF
 Bandwidth determined by the signal at the HS DIG I/Q.

Example: See [Example"Enbaling signal with 400 MHz fading bandwidth"](#) on page 985.

Options: R&S SMW-K822
 BB800 requires R&S SMW-K823

Manual operation: See ["BB Bandwidth"](#) on page 132

:SCONfiguration:CABW?

Queries the resulting channel aggregation bandwidth, i.e. the signal bandwidth at the outputs of the stream mapper.

The value is calculated automatically and depends on the selected configuration, the installed options and the selected baseband bandwidth ([:SCONfiguration:BBW](#)).

Return values:

<Bandwidth> BB800 | BB200
 *RST: depends on options

Example: See [Example"Enbaling signal with 400 MHz fading bandwidth"](#) on page 985.

Usage: Query only

Options: R&S SMW-K822/K823

Manual operation: See ["CA Bandwidth"](#) on page 132

:SCONfiguration:DIQ:BBMM1:CHANnels <DigIqHsBBMM1cha>

:SCONfiguration:DIQ:BBMM2:CHANnels <DigIqHsBBMM2Cha>

In [:SCONfiguration:OUTPut:MODE](#)HSDigital|HSAL, sets the number of digital channels on the HS DIG I/Q interface.

The total number of enabled channels on all HS DIG I/Q interface must not exceed 8.

Parameters:

<DigIqHsBBMM2Cha>CH0 | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8

Example: See [Example "Generating digital signals"](#) on page 981.**Options:** R&S SMW-K19**Manual operation:** See ["HS Channels per"](#) on page 133**:SCONfiguration:DUPLicate[:STReam] <DuplicateStream>**

In a 3x1x1 or 4x1x1 configuration, creates a copy of each stream. Generates are a total number of 6 or 8 streams, where 4 of them can be signals with real-time data source.

Parameters:

<DuplicateStream> 1 | ON | 0 | OFF

*RST: 0

Example:

```
:SCONfiguration:APPLy
:SCONfiguration:MODE ADV
:SCONfiguration:FADing SIS03X1X1
:SCONfiguration:DUPLicate:STReam 1
:SCONfiguration:APPLy
```

Options: R&S SMW-K550**Manual operation:** See ["Duplicate Streams"](#) on page 133**:SCONfiguration:APPLy**

Assigns and confirms the settings.

Example: See [Example "Distributing the I/Q streams to the output connectors"](#) on page 977.**Usage:** Event

Manual operation: See ["Apply"](#) on page 134
See ["Ok"](#) on page 134

14.18.3 I/Q stream mapper commands

Option: R&S SMW-B10 for commands with the keyword `FADer<ch>`.

The following commands configure the I/Q stream mapper.

```
:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:CHANnel<di>:STReam<st>:STATe..... 994
:SCONfiguration:OUTPut:MAPPing:FADer<ch>:STReam<st>:STATe..... 994
:SCONfiguration:OUTPut:MAPPing:RF<ch>:STReam<st>:STATe..... 994
:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:STReam<st>:STATe..... 994
:SCONfiguration:OUTPut:MAPPing:IQOutput<ch>:STReam<st>:STATe..... 994
:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:CHANnel<di>:MODE..... 994
:SCONfiguration:OUTPut:MAPPing:FADer<ch>:MODE..... 994
```

:SCONfiguration:OUTPut:MAPPING:RF<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPING:IQOutput<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPING:STReam<st>:FOFFset.....	995
:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset.....	995

:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:CHANnel<di>:STReam<st>:STATE <State>

:SCONfiguration:OUTPut:MAPPING:FADer<ch>:STReam<st>:STATE <State>

:SCONfiguration:OUTPut:MAPPING:RF<ch>:STReam<st>:STATE <State>

:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:STReam<st>:STATE <State>

:SCONfiguration:OUTPut:MAPPING:IQOutput<ch>:STReam<st>:STATE <State>

Maps the I/Q output streams to the output connectors.

The stream mapping to the FADER connectors is fixed.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Manual operation: See ["Map Stream X to Connector"](#) on page 136

:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:CHANnel<di>:MODE <Mode>

:SCONfiguration:OUTPut:MAPPING:FADer<ch>:MODE <Mode>

:SCONfiguration:OUTPut:MAPPING:RF<ch>:MODE <Mode>

:SCONfiguration:OUTPut:MAPPING:IQOutput<ch>:MODE <Mode>

:SCONfiguration:OUTPut:MAPPING:BBMM<ch>:MODE <Mode>

Enables routing of multiple streams to the same output physical connector and defines the way the streams are internally processed.

Parameters:

<Mode> SINGle | ADD | MULTiplex
 ADD enabled for the RF, I/Q OUT and BBMM outputs
 MULTiplex enabled for the BBMM outputs and
 :SCONfiguration:OUTPut:MODEDIGMux
 *RST: SINGle

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.
 See [Example"Generating digital multiplexed signals"](#) on page 981.

Options: ADD requires R&S SMW-B10
 MULTiplex requires R&S SMW-K551

Manual operation: See ["Combination Mode"](#) on page 137

:SCONfiguration:OUTPut:MAPPING:STReam<st>:FOFFset <SmFreqOffset>

Option:R&S SMW-B9 - supported if "Signal Outputs = Analog Only"

Sets an absolute frequency offset.

Thus, the streams routed to the RF, I/Q Out and BBMM connectors are shifted in the frequency domain.

Parameters:

<SmFreqOffset>	float
Range:	depends on the installed options, e.g. -60E6 to +60E6 (base unit)
Increment:	0.01
*RST:	0

Value range depends also on the system configuration mode and signal outputs. For details, see data sheet.

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Manual operation: See "[f_{offset}, MHz](#)" on page 136

:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset <SmPhasOffset>

Option:R&S SMW-B9 - supported if "Signal Outputs = Analog Only"

Sets the phase offset of the corresponding stream.

Parameters:

<SmPhasOffset>	float
Range:	-999.99 to 999.99
Increment:	0.01
*RST:	0

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Manual operation: See "[Phase Offset](#)" on page 136

14.18.4 External RF and I/Q instruments commands

The following commands configure external RF and I/Q instruments.



Available SCPI commands depending on the installed options and system configuration

- Option: R&S SMW-B10
Required for commands with the keyword `FADer<ch>`
- Option: R&S SMW-B9
See [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121 for information if the commands with keywords `BBMM<ch>` and `CODer<ch>` are supported in the current system configuration.

Commands:

<code>:SCONfiguration:EXternal:DISPlay</code>	998
<code>:SCONfiguration:EXternal:ACONnect</code>	998
<code>:SCONfiguration:EXternal:REMOte:CONNeCT[:ALL]</code>	998
<code>:SCONfiguration:EXternal:REMOte:DISConnect[:ALL]</code>	998
<code>:SCONfiguration:EXternal:PBEHaviour</code>	998
<code>:SCONfiguration:EXternal:CODer<ch>:DIRection?</code>	999
<code>:SCONfiguration:EXternal:FADer<ch>:DIRection?</code>	999
<code>:SCONfiguration:EXternal:BBMM<ch>:DIRection?</code>	999
<code>:SCONfiguration:EXternal:RF<ch>:DIRection?</code>	999
<code>:SCONfiguration:EXternal:IQOutput<ch>:DIRection?</code>	999
<code>:SCONfiguration:EXternal:CODer<ch>:IQConnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:FADer<ch>:IQConnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:BBMM<ch>:IQConnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:CODer<ch>:RCONnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:FADer<ch>:RCONnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:BBMM<ch>:RCONnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:RF<ch>:RCONnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:IQOutput<ch>:RCONnection:STATe?</code>	1000
<code>:SCONfiguration:EXternal:CODer<ch>:INAMe?</code>	1000
<code>:SCONfiguration:EXternal:FADer<ch>:INAMe?</code>	1000
<code>:SCONfiguration:EXternal:BBMM<ch>:INAMe?</code>	1000
<code>:SCONfiguration:EXternal:RF<ch>:INAMe?</code>	1000
<code>:SCONfiguration:EXternal:IQOutput<ch>:INAMe?</code>	1000
<code>:SCONfiguration:EXternal:FADer<ch>:RF:COUPling</code>	1001
<code>:SCONfiguration:EXternal:BBMM<ch>:RF:COUPling</code>	1001
<code>:SCONfiguration:EXternal:RF<ch>:RF:COUPling</code>	1001
<code>:SCONfiguration:EXternal:IQOutput<ch>:RF:COUPling</code>	1001
<code>:SCONfiguration:EXternal:FADer<ch>:RF:FREQuency</code>	1001
<code>:SCONfiguration:EXternal:BBMM<ch>:RF:FREQuency</code>	1001
<code>:SCONfiguration:EXternal:RF<ch>:RF:FREQuency</code>	1001
<code>:SCONfiguration:EXternal:IQOutput<ch>:RF:FREQuency</code>	1001
<code>:SCONfiguration:EXternal:FADer<ch>:RF:FREQuency:OFFSet</code>	1001
<code>:SCONfiguration:EXternal:BBMM<ch>:RF:FREQuency:OFFSet</code>	1001
<code>:SCONfiguration:EXternal:RF<ch>:RF:FREQuency:OFFSet</code>	1001
<code>:SCONfiguration:EXternal:IQOutput<ch>:RF:FREQuency:OFFSet</code>	1001
<code>:SCONfiguration:EXternal:FADer<ch>:RF:POWer</code>	1002
<code>:SCONfiguration:EXternal:BBMM<ch>:RF:POWer</code>	1002
<code>:SCONfiguration:EXternal:RF<ch>:RF:POWer</code>	1002

SCONfiguration subsystem

:SCONfiguration:EXternal:IQOutput<ch>:RF:POWer.....	1002
:SCONfiguration:EXternal:FADer<ch>:RF:POWer:OFFSet.....	1002
:SCONfiguration:EXternal:BBMM<ch>:RF:POWer:OFFSet.....	1002
:SCONfiguration:EXternal:RF<ch>:RF:POWer:OFFSet.....	1002
:SCONfiguration:EXternal:IQOutput<ch>:RF:POWer:OFFSet.....	1002
:SCONfiguration:EXternal:FADer<ch>:RF:STATe.....	1003
:SCONfiguration:EXternal:BBMM<ch>:RF:STATe.....	1003
:SCONfiguration:EXternal:RF<ch>:RF:STATe.....	1003
:SCONfiguration:EXternal:IQOutput<ch>:RF:STATe.....	1003
:SCONfiguration:EXternal:REMOte:SCAN.....	1003
:SCONfiguration:EXternal:REMOte:SCAN:STATe?.....	1003
:SCONfiguration:EXternal:REMOte:LIST?.....	1004
:SCONfiguration:EXternal:REMOte:ADD.....	1004
:SCONfiguration:EXternal:REMOte:REName.....	1005
:SCONfiguration:EXternal:CODeR<ch>:REMOte:DETeCt?.....	1005
:SCONfiguration:EXternal:FADer<ch>:REMOte:DETeCt?.....	1005
:SCONfiguration:EXternal:BBMM<ch>:REMOte:DETeCt?.....	1005
:SCONfiguration:EXternal:CODeR<ch>:REMOte:ISELect.....	1005
:SCONfiguration:EXternal:FADer<ch>:REMOte:ISELect.....	1005
:SCONfiguration:EXternal:BBMM<ch>:REMOte:ISELect.....	1005
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:ISELect.....	1005
:SCONfiguration:EXternal:RF<ch>:REMOte:ISELect.....	1005
:SCONfiguration:EXternal:CODeR<ch>:REMOte:CONNeCt.....	1006
:SCONfiguration:EXternal:FADer<ch>:REMOte:CONNeCt.....	1006
:SCONfiguration:EXternal:BBMM<ch>:REMOte:CONNeCt.....	1006
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:CONNeCt.....	1006
:SCONfiguration:EXternal:RF<ch>:REMOte:CONNeCt.....	1006
:SCONfiguration:EXternal:CODeR<ch>:REMOte:ICONNeCt.....	1006
:SCONfiguration:EXternal:FADer<ch>:REMOte:ICONNeCt.....	1006
:SCONfiguration:EXternal:BBMM<ch>:REMOte:ICONNeCt.....	1006
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:ICONNeCt.....	1006
:SCONfiguration:EXternal:RF<ch>:REMOte:ICONNeCt.....	1006
:SCONfiguration:EXternal:CODeR<ch>:REMOte:INFO?.....	1006
:SCONfiguration:EXternal:FADer<ch>:REMOte:INFO?.....	1006
:SCONfiguration:EXternal:BBMM<ch>:REMOte:INFO?.....	1006
:SCONfiguration:EXternal:RF<ch>:REMOte:INFO?.....	1007
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:INFO?.....	1007
:SCONfiguration:EXternal:CODeR<ch>:REMOte:DISConNeCt.....	1007
:SCONfiguration:EXternal:FADer<ch>:REMOte:DISConNeCt.....	1007
:SCONfiguration:EXternal:BBMM<ch>:REMOte:DISConNeCt.....	1007
:SCONfiguration:EXternal:RF<ch>:REMOte:DISConNeCt.....	1007
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:DISConNeCt.....	1007
:SCONfiguration:EXternal:REMOte:INITIaLization:CATaLog?.....	1007
:SCONfiguration:EXternal:CODeR<ch>:REMOte:INITIaLization:FILE.....	1008
:SCONfiguration:EXternal:FADer<ch>:REMOte:INITIaLization:FILE.....	1008
:SCONfiguration:EXternal:BBMM<ch>:REMOte:INITIaLization:FILE.....	1008
:SCONfiguration:EXternal:RF<ch>:REMOte:INITIaLization:FILE.....	1008
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:INITIaLization:FILE.....	1008
:SCONfiguration:EXternal:REMOte:PURGe.....	1008
:SCONfiguration:EXternal:REMOte:CLEan.....	1008

:SCONfiguration:EXternal:CODer<ch>:REMOte:SEND.....	1008
:SCONfiguration:EXternal:FADer<ch>:REMOte:SEND.....	1008
:SCONfiguration:EXternal:BBMM<ch>:REMOte:SEND.....	1008
:SCONfiguration:EXternal:RF<ch>:REMOte:SEND.....	1008
:SCONfiguration:EXternal:IQOutput<ch>:REMOte:SEND.....	1008
:SCONfiguration:EXternal:IQOutput<ch>:CONNections:CHECK?.....	1009

:SCONfiguration:EXternal:DISPlay <DisplayMode>

Filters the displayed connectors upon the selected criteria.

Parameters:

<DisplayMode> ALL | MAPPEd | INPut | OUTPut
 *RST: MAPPEd

Example: See [Example"Connecting and configuring external instruments"](#) on page 978.

Manual operation: See ["Display"](#) on page 139

:SCONfiguration:EXternal:ACONnect <State>

Enables automatic detection and connection setup of connected external instruments.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Distributing the I/Q streams to the output connectors"](#) on page 977.

Manual operation: See ["Auto Connect"](#) on page 139

:SCONfiguration:EXternal:REMOte:CONNeCt[:ALL]
:SCONfiguration:EXternal:REMOte:DISConnect[:ALL]

Triggers the instrument to establish the connections to all configured external instruments or to disconnect all existing connections.

Example: See [Example"Connecting and configuring external instruments"](#) on page 978.

Usage: Event

Manual operation: See ["Connect/Disconnect All Remote"](#) on page 140

:SCONfiguration:EXternal:PBEHaviour <State>

If enabled, the connection to the external instruments is retained after preset (*RST) of the instrument.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: n.a. (factory preset: 0)

Example:

```

SCONfiguration:EXtErnal:IQOutput1:INAME?
// "SZU (999991) B1066"

SCONfiguration:EXtErnal:IQOutput1:RCONnection:STATe?
// 1
SOURce:FREQuency:CW?
// 60000000000
SOURce1:IQ:OUTPup:ANALog:TYPE DIFFerential

SCONfiguration:EXtErnal:PBEHaviour 1
*RST
SOURce:FREQuency:CW?
// 60000000000
SCONfiguration:EXtErnal:IQOutput1:RCONnection:STATe?
// 1
SOURce1:IQ:OUTPup:ANALog:TYPE?
// DIFF

SCONfiguration:EXtErnal:PBEHaviour 0
*RST
SOURce:FREQuency:CW?
// 10000000000
SCONfiguration:EXtErnal:IQOutput1:RCONnection:STATe?
// 0
SOURce1:IQ:OUTPut:ANALog:TYPE?
// SING

```

Manual operation: See ["Preset behavior: Keep connections to external instruments"](#) on page 140

```

:SCONfiguration:EXtErnal:CODer<ch>:DIRection?
:SCONfiguration:EXtErnal:FADer<ch>:DIRection?
:SCONfiguration:EXtErnal:BBMM<ch>:DIRection?
:SCONfiguration:EXtErnal:RF<ch>:DIRection?
:SCONfiguration:EXtErnal:IQOutput<ch>:DIRection?

```

Queries the connector direction.

Return values:

<Direction> NONE | IN | OUT

*RST: IN

Example:

See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage:

Query only

Manual operation:See ["Direction"](#) on page 141

```
:SCONfiguration:EXTernal:CODer<ch>:IQConnection:STATe?
:SCONfiguration:EXTernal:FADer<ch>:IQConnection:STATe?
:SCONfiguration:EXTernal:BBMM<ch>:IQConnection:STATe?
```

Queries the status of the I/Q connection of the digital interfaces.

Return values:

<IQConnState> 1 | ON | 0 | OFF

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Query only

Manual operation: See ["I/Q Connection"](#) on page 143
See ["RF State"](#) on page 145

```
:SCONfiguration:EXTernal:CODer<ch>:RCONnection:STATe?
:SCONfiguration:EXTernal:FADer<ch>:RCONnection:STATe?
:SCONfiguration:EXTernal:BBMM<ch>:RCONnection:STATe?
:SCONfiguration:EXTernal:RF<ch>:RCONnection:STATe?
:SCONfiguration:EXTernal:IQOutput<ch>:RCONnection:STATe?
```

Queries the status of the remote connection.

Return values:

<State> 1 | ON | 0 | OFF

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Query only

Manual operation: See ["Remote Connection Status"](#) on page 143

```
:SCONfiguration:EXTernal:CODer<ch>:INAMe?
:SCONfiguration:EXTernal:FADer<ch>:INAMe?
:SCONfiguration:EXTernal:BBMM<ch>:INAMe?
:SCONfiguration:EXTernal:RF<ch>:INAMe?
:SCONfiguration:EXTernal:IQOutput<ch>:INAMe?
```

Queries the name of the connected external instrument.

Return values:

<InstrName> string

Returns the name of the connected external instrument.

<InstrmentName> (SerialNumber) <Path>

the instrument name, as retrieved via the DIG I/Q interface

<InstrmentName>[, <RfPath>] or <InstrmentName> (Serial-Number)

the instrument name, as defined in with the "Remote Config" settings or as defined by the command `:SCONfiguration:`

`EXTernal:REMOte:ADD`

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Query only

Manual operation: See ["Instrument Name"](#) on page 144

```
:SCONfiguration:EXTernal:FADer<ch>:RF:COUPling <RfCouplingState>
:SCONfiguration:EXTernal:BBMM<ch>:RF:COUPling <RfCouplingState>
:SCONfiguration:EXTernal:RF<ch>:RF:COUPling <RfCouplingState>
:SCONfiguration:EXTernal:IQOutput<ch>:RF:COUPling <RfCouplingState>
```

Enables/disables coupling all major RF setting (like the frequency, level and RF state) of the external instrument to the R&S SMW.

Parameters:

<RfCouplingState> 1 | ON | 0 | OFF
*RST: 1

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Manual operation: See ["RF Couple"](#) on page 144

```
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQuency <Frequency>
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQuency <Frequency>
:SCONfiguration:EXTernal:RF<ch>:RF:FREQuency <Frequency>
:SCONfiguration:EXTernal:IQOutput<ch>:RF:FREQuency <Frequency>
```

In uncoupled mode, sets the RF frequency of the external instrument.

Parameters:

<Frequency> float
Range: 100E3 to 3E9
Increment: 0.01
*RST: 1E9

Example:

```
SCONfiguration:EXTernal:IQOutput1:RF:COUPling OFF
SCONfiguration:EXTernal:IQOutput1:RF:FREQuency 2143E6
// RF frequency of the external instrument is RF = 2.143 GHz
```

Manual operation: See ["\(Delta\) RF Frequency/ RF Level"](#) on page 145

```
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQuency:OFFSet <FreqOffset>
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQuency:OFFSet <FreqOffset>
:SCONfiguration:EXTernal:RF<ch>:RF:FREQuency:OFFSet <FreqOffset>
:SCONfiguration:EXTernal:IQOutput<ch>:RF:FREQuency:OFFSet <FreqOffset>
```

In coupled mode, offsets the RF frequency of the external instrument with the selected delta value.

Parameters:

<FreqOffset> float
 Range: -3E9 to 3E9
 Increment: 0.01
 *RST: 0

Example:

```
SOURce1:FREQuency:CW 2143E6
SCONfiguration:EXTErnal:IQOutput1:RF:COUPling ON
SCONfiguration:EXTErnal:IQOutput1:RF:FREQuency:OFFSet 20E6
// The resulting RF frequency of the external instrument is
// RF = 2143E6 + 20E6 = 2.163 GHz
// Where both the RF frequency and the frequency offset
// are applied at the external instrument
```

Manual operation: See "(Delta) RF Frequency/ RF Level" on page 145

```
:SCONfiguration:EXTErnal:FADer<ch>:RF:POWer <Power>
:SCONfiguration:EXTErnal:BBMM<ch>:RF:POWer <Power>
:SCONfiguration:EXTErnal:RF<ch>:RF:POWer <Power>
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:POWer <Power>
```

In uncoupled mode, sets the RF level of the external instrument.

Parameters:

<Power> float
 Range: -130 to 20
 Increment: 0.01
 *RST: -30

Example:

```
SOURce1:POWer:LEVel:IMMediate:AMPLitude -30
SCONfiguration:EXTErnal:IQOutput1:RF:COUPling OFF
SCONfiguration:EXTErnal:IQOutput1:RF:POWer -20
// RF level of the external instrument is -20 dB
```

Manual operation: See "(Delta) RF Frequency/ RF Level" on page 145

```
:SCONfiguration:EXTErnal:FADer<ch>:RF:POWer:OFFSet <PowerOffset>
:SCONfiguration:EXTErnal:BBMM<ch>:RF:POWer:OFFSet <PowerOffset>
:SCONfiguration:EXTErnal:RF<ch>:RF:POWer:OFFSet <PowerOffset>
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:POWer:OFFSet <PowerOffset>
```

In coupled mode, offsets the RF level of the external instrument with the selected delta value.

Parameters:

<PowerOffset> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0

Example:

```
SOURcel:POWer:LEVel:IMMediate:AMPLitude -30
SCONfiguration:EXTErnal:IQOutput1:RF:COUPling ON
SCONfiguration:EXTErnal:IQOutput1:RF:POWer:OFFSet -20
// RF level of the external instrument is -50 dB
// Where both the RF level and the level offset
// are applied at the external instrument
```

Manual operation: See ["\(Delta\) RF Frequency/ RF Level"](#) on page 145

```
:SCONfiguration:EXTErnal:FADer<ch>:RF:STATe <RemConnState>
:SCONfiguration:EXTErnal:BBMM<ch>:RF:STATe <RemConnState>
:SCONfiguration:EXTErnal:RF<ch>:RF:STATe <RemConnState>
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:STATe <RemConnState>
```

Sets the RF output state of the connected external instrument.

Parameters:

<RemConnState> 1 | ON | 0 | OFF

Example:

```
SCONfiguration:EXTErnal:IQOutput1:RF:COUPling ON
OUTput1:STATe ON
SCONfiguration:EXTErnal:IQOutput1:RF:STATe?
// Response: "1"
```

Example:

```
SCONfiguration:EXTErnal:BBMM1:RF:COUPling OFF
SCONfiguration:EXTErnal:BBMM1:RF:STATe ON
```

Example:

See [Example"Connecting and configuring external instruments"](#) on page 978.

Manual operation: See ["RF State"](#) on page 145

:SCONfiguration:EXTErnal:REMOte:SCAN

Scans the network for connected instruments.

Example:

See [Example"Connecting and configuring external instruments"](#) on page 978.

Usage:

Event

Manual operation:

See ["Detect/Scan"](#) on page 147

:SCONfiguration:EXTErnal:REMOte:SCAN:STATe?

Queries if scanning is performed or not.

To start the scanning process, use the command `:SCONfiguration:EXTErnal:REMOte:SCAN` on page 1003.

Return values:

<ScanState> 1 | ON | 0 | OFF
1
Scanning process running

0

Not scanning

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Query only

Manual operation: See ["Detect/Scan"](#) on page 147

:SCONfiguration:EXternal:REMOte:LIST?

Lists all available instruments.

Instruments found, e.g. by the `:SCONfiguration:EXternal:REMOte:SCAN` command.

Return values:

<InstrNames> String
String with symbolic names and/or alias names

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Query only

Manual operation: See ["External Instrument"](#) on page 148

:SCONfiguration:EXternal:REMOte:ADD <InstrName>, <HwChan>, <TcpIpOrUsbAddr>[, <RfPathNumber>]

Adds manually an external instrument to the list of available instruments.

Parameters:

<HwChan> String
Hardware channel (USB or LAN) used by the remote channel to the external instrument
Range: "LAN" to "USB"
*RST: "LAN"

<TcpIpOrUsbAddr> String
IP address or hostname of the connected external instrument

<RfPathNumber> String
Determines the number of RF paths the external instrument is equipped with
Range: "1" to "2"
*RST: "1"

Setting parameters:

<InstrName> String
Alias name of the instrument

Example:	See Example "Connecting and configuring external instruments" on page 978.
Usage:	Setting only
Manual operation:	See "External Instrument" on page 148 See "Set Symbolic Name" on page 148 See "Remote Channel" on page 148 See "Hostname or IP Address" on page 148 See "Device ID" on page 149 See "RF Path" on page 149

:SCONfiguration:EXtErnal:REMOte:REName

Changes the symbolic name of the instrument.

Example:	See Example "Connecting and configuring external instruments" on page 978.
Usage:	Setting only

:SCONfiguration:EXtErnal:CODeR<ch>:REMOte:DETeCt?
:SCONfiguration:EXtErnal:FADeR<ch>:REMOte:DETeCt?
:SCONfiguration:EXtErnal:BBMM<ch>:REMOte:DETeCt?

Searches for external instruments connected to the particular digital interfaces.

Return values:

<DetectedInstr>	string
	If the detection fails, the query returns "None".

Example:	See Example "Connecting and configuring external instruments" on page 978.
Usage:	Query only
Manual operation:	See "Detect/Scan" on page 147

:SCONfiguration:EXtErnal:CODeR<ch>:REMOte:ISELeCt <InstrName>[, <RfPath>]
:SCONfiguration:EXtErnal:FADeR<ch>:REMOte:ISELeCt <InstrName>[, <RfPath>]
:SCONfiguration:EXtErnal:BBMM<ch>:REMOte:ISELeCt <InstrName>[, <RfPath>]
:SCONfiguration:EXtErnal:IQOutput<ch>:REMOte:ISELeCt <InstrName>[, <RfPath>]
:SCONfiguration:EXtErnal:RF<ch>:REMOte:ISELeCt <InstrName>[, <RfPath>]

Selects an external instrument for the selected connector.

Parameters:

<InstrName>	String
	Instrument alias name, as retrieved with the command : SCONfiguration:EXtErnal:REMOte:LIST? . The name can also be defined with the command : SCONfiguration:EXtErnal:REMOte:ADD .

<RfPath> String
Determines the used RF output of the external instrument.

Manual operation: See ["External Instrument"](#) on page 148
See ["Apply"](#) on page 150
See ["Apply and Connect"](#) on page 151

```
:SCONfiguration:EXTErnal:CODer<ch>:REMOte:CONNEct
:SCONfiguration:EXTErnal:FADer<ch>:REMOte:CONNEct
:SCONfiguration:EXTErnal:BBMM<ch>:REMOte:CONNEct
:SCONfiguration:EXTErnal:IQOutput<ch>:REMOte:CONNEct
:SCONfiguration:EXTErnal:RF<ch>:REMOte:CONNEct
```

Triggers the connection to the external instrument at the selected connector.

Example: See [Example"Connecting and configuring external instruments"](#) on page 978.

Usage: Event

Manual operation: See ["Apply and Connect"](#) on page 151

```
:SCONfiguration:EXTErnal:CODer<ch>:REMOte:ICONNEct <InstrName>, <RfPath>
:SCONfiguration:EXTErnal:FADer<ch>:REMOte:ICONNEct <InstrName>, <RfPath>
:SCONfiguration:EXTErnal:BBMM<ch>:REMOte:ICONNEct <InstrName>, <RfPath>
:SCONfiguration:EXTErnal:IQOutput<ch>:REMOte:ICONNEct <InstrName>,
    <RfPath>
:SCONfiguration:EXTErnal:RF<ch>:REMOte:ICONNEct <InstrName>, <RfPath>
```

Selects an external instrument for the selected connector and triggers connection.

Parameters:

<InstrName> string
Instrument alias name, as retrieved with the command :
[SCONfiguration:EXTErnal:REMOte:LIST?](#).
The name can also be defined with the command :
[SCONfiguration:EXTErnal:REMOte:ADD](#).

<RfPath> string
Determines the used RF output of the external instrument.

Example: See [Example"Connecting and configuring external instruments"](#) on page 978.

Usage: Setting only

```
:SCONfiguration:EXTErnal:CODer<ch>:REMOte:INFO?
:SCONfiguration:EXTErnal:FADer<ch>:REMOte:INFO?
:SCONfiguration:EXTErnal:BBMM<ch>:REMOte:INFO?
```


:SCONfiguration:EXTErnal:RF<ch>:REMote:INFO?

:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:INFO?

Queries information on the external instrument.

Example:

```
SCONfiguration:EXTErnal:BBMM1:REMote:INFO?
"SGT (101676)", "LAN", "rssgt100a101676", "A",
"Rohde&Schwarz,SGT100A,1419.4501k02/101676,3.1.19.4-3.18.251.99"
```

Example:

See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage:

Query only

Manual operation:

See ["Remote Connection Status"](#) on page 143
 See ["Instrument Name"](#) on page 144
 See ["Set Symbolic Name"](#) on page 148
 See ["Remote Channel"](#) on page 148
 See ["Hostname or IP Address"](#) on page 148
 See ["RF Path"](#) on page 149

:SCONfiguration:EXTErnal:CODer<ch>:REMote:DISConnect

:SCONfiguration:EXTErnal:FADer<ch>:REMote:DISConnect

:SCONfiguration:EXTErnal:BBMM<ch>:REMote:DISConnect

:SCONfiguration:EXTErnal:RF<ch>:REMote:DISConnect

:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:DISConnect

Disconnects the selected remote connection.

To disconnect all remote connections at once, use the command `:SCONfiguration:EXTErnal:REMote:DISConnect[:ALL]`.

Example:

See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage:

Event

Manual operation:

See ["Remote Connection Status"](#) on page 143

:SCONfiguration:EXTErnal:REMote:INITialization:CATalog?

Queries the names of the existing initialization files in the default directory.

Per default, the instrument saves user-defined files in the `/var/user/` directory. Use the command `:MMEM:CDIRectory` to change the default directory to the currently used one.

Only files with extension `*.iec` are listed.

Example:

See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage:

Query only

Manual operation:

See ["Initialization Sequence"](#) on page 150

```
:SCONfiguration:EXtErnal:CODeR<ch>:REMOte:INITialization:FILE <Filename>
:SCONfiguration:EXtErnal:FADeR<ch>:REMOte:INITialization:FILE <Filename>
:SCONfiguration:EXtErnal:BBMM<ch>:REMOte:INITialization:FILE <Filename>
:SCONfiguration:EXtErnal:RF<ch>:REMOte:INITialization:FILE <Filename>
:SCONfiguration:EXtErnal:IQOutput<ch>:REMOte:INITialization:FILE <Filename>
```

Queries the currently selected initialization file.

Parameters:

<Filename> string
 filename with file extension (*.iec)

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Manual operation: See ["Initialization Sequence"](#) on page 150

:SCONfiguration:EXtErnal:REMOte:PURGe

Removes unused instruments from the pool of external instruments.

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Event

Manual operation: See ["Clean Unused/Clean All"](#) on page 147

:SCONfiguration:EXtErnal:REMOte:CLEan

Removes all instruments from the pool of external instruments.

Example: See [Example "Connecting and configuring external instruments"](#) on page 978.

Usage: Event

Manual operation: See ["Clean Unused/Clean All"](#) on page 147

```
:SCONfiguration:EXtErnal:CODeR<ch>:REMOte:SEND <SendScpiCommand>
:SCONfiguration:EXtErnal:FADeR<ch>:REMOte:SEND <SendScpiCommand>
:SCONfiguration:EXtErnal:BBMM<ch>:REMOte:SEND <SendScpiCommand>
:SCONfiguration:EXtErnal:RF<ch>:REMOte:SEND <SendScpiCommand>
:SCONfiguration:EXtErnal:IQOutput<ch>:REMOte:SEND <SendScpiCommand>
```

Allows you to send SCPI commands to the RF instruments connected to the R&S SMW.

Setting parameters:

<SendScpiCommand>"<SCPI syntax>"
 String containing an SCPI command (query or setting)

Example: See [Chapter 14.18, "SCONfiguration subsystem"](#), on page 977.

Usage: Setting only

Manual operation: See ["Command, Send Command"](#) on page 152

:SCONfiguration:EXTErnal:IQOutput<ch>:CONNEctions:CHECK?

Queries the status of the required connections between the R&S SMW and the R&S SZU.

R&S SZU is connected to the R&S SMW via USB.

Example:

```
SCONfiguration:EXTErnal:IQOutput1:REMOte:ISElect "SZU (999991) B1066"
SOURCE1:IQ:OUTPut:ANALog:TYPE SING
SCONfiguration:EXTErnal:IQOutput1:REMOte:CONNECT
SCONfiguration:EXTErnal:ACONnect 1
SCONfiguration:EXTErnal:PBEHaviour 1

SCONfiguration:EXTErnal:IQOutput1:REMOte:INFO?
// "SZU (999991) B1066","USB (vendor specific)","999991","A"

SOURCE1:FREQuency:CONVerter:EXTErnal:CHECK:CONNEctions?
// Passed,Failed,Unused,Failed,Unused,Passed
// The R&S SZU is connected to the R&S SMW
// The USB and the RF A to LO In connections are correct
// There is a failure in the single-ended I/Q connection
// (between the I/Q OUT and the I/Q IN connectors)
```

Usage: Query only

Manual operation: ["Check connections settings"](#) on page 154

14.18.5 RF ports alignment commands

Option: R&S SMW-B9 and R&S SMW-K545

Commands:

Example: Loading and activating setup files

This example uses the predefined demo setup file.

```
// SCONfiguration:RFAlignment:SETup:CATalog?
// SCONfiguration:RFAlignment:SETup:FILE "/var/user/RfPortsSetup/setup"

SCONfiguration:RFAlignment:SETup:PREDefined:CATalog?
// demo
SCONfiguration:RFAlignment:SETup:FILE:PREDefined "demo"
SCONfiguration:RFAlignment:SETup:STATUS?
// NALign
SCONfiguration:RFAlignment:ALIGN
SCONfiguration:RFAlignment:SETup:STATUS?
// ALIGNED
SCONfiguration:RFAlignment:STATE 1
```

Example: Retrieving details on the calibrated values

This example uses the predefined demo setup file.

```

SCONfiguration:RFALignment:SETup:PREDefined:CATalog?
// demo
SCONfiguration:RFALignment:SETup:FILE:PREDefined "demo"

SCONfiguration:RFALignment:SETup:INFO:CALibration:DATE?
// "2019-01-11"
SCONfiguration:RFALignment:SETup:INFO:CALibration:TIME?
// "08:15:37 "
SCONfiguration:RFALignment:SETup:INFO:CALibration:PARAMeters?
// "Level,Phase,Time"
SCONfiguration:RFALignment:SETup:INFO:CALibration:AGE?
// 52
SCONfiguration:RFALignment:SETup:INFO:CALibration:TEMPerature:OFFSet?
// 0
SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:SOURce?
// PRIM
SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:CONStellation?
// DCH
SCONfiguration:RFALignment:SETup:INFO:WIRing:REF:SOURce?
// PRIM

SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:MODE?
// RANG
SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGE:LOWer?
// 1000000000
SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGE:UPPer?
// 6000000000
SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:STEP?
// 500000000
SCONfiguration:RFALignment:SETup:INFO:CALibration:LOCoupling?
// ACT

SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:MODE?
// RANG
SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:RANGE:LOWer?
// -10
SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:RANGE:UPPer?
// 0
SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:STEP?
// 10

SOURcel:RFALignment:CALibrated:FREQuency?
// 1000000000
SOURcel:RFALignment:CALibrated:POWer:PEP?
// -30
SOURcel:RFALignment:DATTenuation?
// 0
SOURcel:RFALignment:FOFFset

```

```
// 0
SOURCE1:RFALignment:CORRection:IQDelay?
// 0
SOURCE1:RFALignment:CORRection:LEVel?
// 0
SOURCE1:RFALignment:CORRection:PHASe?
// 0
```

See also [Chapter 14.19.19, "RF ports alignment"](#), on page 1293.

:SCONfiguration:RFALignment:SETup:PREDefined:CATalog?	1011
:SCONfiguration:RFALignment:SETup:FILE:PREDefined	1011
:SCONfiguration:RFALignment:SETup:CATalog?	1012
:SCONfiguration:RFALignment:SETup:FILE	1012
:SCONfiguration:RFALignment:SETup:STATus?	1012
:SCONfiguration:RFALignment:ALIGn	1013
:SCONfiguration:RFALignment:STATe	1013
:SCONfiguration:RFALignment:SETup:INFO:CALibration:DATE?	1013
:SCONfiguration:RFALignment:SETup:INFO:CALibration:TIME?	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:AGE?	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:TEMPerature:OFFSet?	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:PARAmeters?	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:MODE?	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWEr:MODE?	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:LIST:VALues?	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWEr:LIST:VALues?	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:LOWer?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:UPPer?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWEr:RANGe:LOWer?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWEr:RANGe:UPPer?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:STEP?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWEr:STEP?	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:LOCoupling?	1017
:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:CONStellation?	1017
:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:SOURce?	1017
:SCONfiguration:RFALignment:SETup:INFO:WIRing:REF:SOURce?	1018

:SCONfiguration:RFALignment:SETup:PREDefined:CATalog?

Queries the names of the existing predefined setup files.

Only files with extension *.rfsa are listed.

Example: See [Example "Loading and activating setup files"](#) on page 1009.

Usage: Query only

Manual operation: See ["Setup"](#) on page 682

:SCONfiguration:RFALignment:SETup:FILE:PREDefined <Filename>

Loads the selected predefined file.

Setting parameters:

<Filename> "<filename>"
 File extension can be omitted.
 Query the filenames of predefined setup files with the command `:SCONfiguration:RFALignment:SETup:PREDefined:CATalog?`.

Example: See [Example "Loading and activating setup files"](#) on page 1009.

Usage: Setting only

Manual operation: See ["Setup"](#) on page 682

:SCONfiguration:RFALignment:SETup:CATalog?

Queries the names of the existing setup files in the default directory.

Per default, the instrument saves user-defined files in the `/var/user/` directory. Use the command `:MMEM:CDIRectory` to change the default directory to the currently used one.

Only files with extension `*.rfsa` are listed.

Example: See [Example "Loading and activating setup files"](#) on page 1009.

Usage: Query only

Manual operation: See ["Setup"](#) on page 682

:SCONfiguration:RFALignment:SETup:FILE <SetupFile>

Loads the selected file from the default or the specified directory. Loaded are files with extension `*.rfsa`.

Parameters:

<SetupFile> "<filename>"
 Filename or complete file path; file extension can be omitted.
 Query the filenames of existing setup files with the command `:SCONfiguration:RFALignment:SETup:CATalog?`.

Example: See [Example "Loading and activating setup files"](#) on page 1009.

Manual operation: See ["Setup"](#) on page 682

:SCONfiguration:RFALignment:SETup:STATus?

Queries information on the internal compensation status and the connected secondary instruments.

Return values:

<SetupStatus> NALign | ALIGned | ERRor | WARNing | INACtive | NOSetup | INValid
 NOSetup = Setup is not loaded

INValid = Loaded setup does not match the current setup
 INActive = Setup loaded but RF port alignment not enabled
 NALign = Setup is loaded but aligned not triggered
 ALIGned | ERRor | WARNing = Setup is aligned, error, warning
 *RST: n.a. (factory preset)

Example: See [Example"Loading and activating setup files"](#) on page 1009.

Usage: Query only

Manual operation: See ["Status"](#) on page 684

:SCONfiguration:RFALignment:ALIGN

If a valid setup is loaded and RF ports alignment is enabled, sends the multi instrument trigger signal to all instruments to synchronize the basebands of the instruments.

Example: See [Example"Loading and activating setup files"](#) on page 1009.

Usage: Event

Manual operation: See ["Align"](#) on page 683

:SCONfiguration:RFALignment:STAtE <State>

If a valid setup file is selected, applies the specified correction data.

Load the setup file with the command `:SCONfiguration:RFALignment:SEtUp:FILE`.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: n.a. (factory preset: 0)

Example: See [Example"Loading and activating setup files"](#) on page 1009.

Manual operation: See ["State"](#) on page 681

:SCONfiguration:RFALignment:SEtUp:INfO:CALibration:DATE?

Queries the time the calibration described in the loaded setup file is performed.

Return values:

<Date> string

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Calibration Date/Time"](#) on page 685

:SCONfiguration:RFALignment:SETup:INFO:CALibration:TIME?

The date and time the calibration described in the loaded setup file is performed.

Return values:

<Time> string

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Calibration Date/Time"](#) on page 685

:SCONfiguration:RFALignment:SETup:INFO:CALibration:AGE?

Queries how many days are passed since the moment the calibration described in the loaded setup file is performed.

Return values:

<Days> integer
Time since calibration in days

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Time since Last Calibration"](#) on page 686

:SCONfiguration:RFALignment:SETup:INFO:CALibration:TEMPerature:OFFSet?

Queries the difference in temperature since the moment the calibration described in the loaded setup file is performed.

Return values:

<TempOffset> float
Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Temperature Offset to Last Calibration"](#) on page 686

:SCONfiguration:RFALignment:SETup:INFO:CALibration:PARAmeters?

Queries information on the major calibrated parameters.

Return values:

<CalibratedParam> string

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Calibrated Parameters"](#) on page 686

:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:MODE?
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:MODE?

Queries the method used to be defined the calibrated frequency and PEP ranges.

Return values:

<Mode> RANGE | LIST

RANGE

Range, see:

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:FREQuency:RANGe:LOWer? on page 1016

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:FREQuency:RANGe:UPPer? on page 1016

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:FREQuency:STEP? on page 1016

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:POWer:RANGe:LOWer? on page 1016

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:POWer:RANGe:UPPer? on page 1016

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:POWer:STEP? on page 1016

LIST

List, see:

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:FREQuency:LIST:VALues? on page 1015

:SCONfiguration:RFALignment:SETup:INFO:
 CALibration:POWer:LIST:VALues? on page 1015

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Mode"](#) on page 686

**:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:LIST:
 VALues?**

:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWer:LIST:VALues?

Return values:

<ListOfValues> string

Example:

```
SCONfiguration:RFALignment:SETup:INFO:CALibration:LOCoupling?
// NACTive
SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:MODE?
// LIST
SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:LIST:VALues?
// -21,-15,-10
```

Usage: Query only

Manual operation: See ["Frequency Values/PEP Values"](#) on page 687

:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:LOWER?

:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:UPPer?

:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:RANGe:LOWER?

:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:RANGe:UPPer?

Queries the min and max frequency and PEP values that define the calibrated range.

Return values:

<PEPmax> float
Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Frequency Range/PEP Range"](#) on page 686

:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:STEP?

:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:STEP?

Queries the frequency/PEP step size with that the calibration values are selected from the defined value range.

Return values:

<PEPstep> float
Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Frequency Step/PEP Step"](#) on page 687

:SCONfiguration:RFALignment:SETup:INFO:CALibration:LOCoupling?

Queries whether the instruments use a common local oscillator (LO) signal or not.

Return values:

<State> ACTive | NACTive

ACTive

All instruments are connected to the same LO reference frequency.

NACTive

Each instrument uses its own local oscillator.

*RST: n.a. (factory preset)

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See "[LO Coupling](#)" on page 687

:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:CONStellation?

Queries the connection method used to distribute the LO frequency signal.

Return values:

<Constellation> DCHain | STAR

DCHain

Daisy chain

STAR

Star

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See "[LO Configuration > Wiring Constellation](#)" on page 691

:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:SOURce?

Queries if the current instrument uses its own or an external LO signal.

Return values:

<Source> PRIMary | EXTernal

PRIMary

The instrument uses its LO signal and provides it to the other instruments.

EXTernal

The instrument uses an external LO signal, for example from other R&S SMW (the one with `SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:SOURce PRIMary`).

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["LO Configuration > Signal Source"](#) on page 690

:SCONfiguration:RFALignment:SETup:INFO:WIRing:REF:SOURce?

Queries if the current instrument uses its own or an external reference signal.

Return values:

<Source> PRIMary | EXTernal

PRIMary

The instrument uses its reference signal and provides it to the other instruments.

EXTernal

The instrument uses an external reference frequency source, for example from other R&S SMW (the one with SCONfiguration:RFALignment:SETup:INFO:WIRing:REF:SOURce PRIMary) or from R&S®SMA100B.

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Ref Configuration > Signal Source"](#) on page 690

14.19 SOURce subsystem

The SOURce subsystem contains the commands for configuring signals.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
ENTity<ch>	1 to 4	Entity in a multiple entity configuration
SOURce<hw>	[1] to 8	Baseband signals/paths <ul style="list-style-type: none"> SOURce[1] = Path A/Baseband A (optional keyword and suffix) SOURce2 = Path B/Baseband B (mandatory keyword and suffix) LF output = SOURce:LFOutput (SOURce is optional keyword)
OUTPut<ch>	[1] to 3	Available markers

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

• Connector settings	1019
• SOURce:BBIN subsystem	1028
• Analog modulation subsystems	1039
• SOURce:BB subsystem	1059
• SOURce:CORRection subsystem	1195
• SOURce:FREQuency subsystem	1205
• SOURce:FREQuency:CONVerter subsystem	1215
• SOURce:INPut subsystem	1217
• SOURce:IQ subsystem	1218
• SOURce:IQ:OUTPut subsystem	1220
• SOURce:LFOutput subsystem	1235
• SOURce:LIST subsystem	1248
• SOURce:NOISe subsystem	1262
• SOURce:OCCupy subsystem	1268
• SOURce:PGEN subsystem	1270
• SOURce:PHASe subsystem	1271
• SOURce:POWer subsystem	1272
• SOURce:ROSCillator subsystem	1288
• RF ports alignment	1293
• SOURce:SWEep subsystem	1295

14.19.1 Connector settings

This section summarizes the commands of the `OUTPut` and `INPut` subsystems, necessary to configure the connectors settings. Listed are the commands for configuring the output signals and the inputs for trigger, data, and control signals.

The `...:USER<ch>:...` commands determine the global trigger threshold and input impedance values, that affect all trigger and control signal inputs. The connector settings concern to all digital modulations, the generation of waveforms or multi carrier signals, and all digital standards.

The settings affect both paths.

Refer to [Chapter 14.19.8, "SOURce:INPut subsystem"](#), on page 1217 for description of the commands for configuring the inputs for external modulation signals.

Required options

See also [Chapter 12.2, "Configuring local and global connectors"](#), on page 745.

Example: Global connectors settings configuration

```

SOURce1:INPut:USER1:DIRection INP
SOURce1:INPut:USER1:SIGNa1 TRIG1
SOURce1:INPut:USER3:DIRection INP
SOURce1:INPut:USER3:SIGNa1 NSEGM1

SOURce1:INPut:USER4:DIRection INP
SOURce1:INPut:USER4:SIGNa1 IPULSA

SOURce1:INPut:USER5:DIRection INP
SOURce1:INPut:USER5:SIGNa1 TRIG2
SOURce1:INPut:USER:TRIGger:LEVel 1.5
SOURce1:INPut:USER:PULM:LEVel 2

// the signal threshold at USER 1-3 is 1.5 V
// this applies to all input signal, i.e. TRIG1 and NSEGM1
// the signal threshold at USER 4-6 is 2 V
// this applies to all input signal, i.e. IPULSA and TRIG2

SOURce1:INPut:USER1:TRIGger:IMPedance G1K
SOURce1:INPut:USER1:TRIGger:SLOPe POS

SOURce1:INPut:USER2:DIRection OUTP
OUTPut1:USER2:SIGNa1 MARKA2

SOURce1:INPut:USER6:DIRection OUTP
OUTPut1:USER6:SIGNa1 MTR
OUTPut1:USER6:TRIGger:IMMediate

SOURce1:INPut:USER5:DIRection OUTP
OUTPut1:USER5:SIGNa1 MTR
OUTPut1:USER5:TRIGger:IMMediate

[:SOURce<hw>]:INPut:TM<ch>:DIRection..... 1021
:OUTPut<hw>:TM<ch>:DIRection..... 1021
[:SOURce]:INPut:USER<ch>:DIRection..... 1021
:OUTPut:USER<ch>:DIRection..... 1021
[:SOURce<hw>]:INPut:TM<ch>:SIGNa1..... 1022
:OUTPut<hw>:TM<ch>:SIGNa1..... 1022
[:SOURce]:INPut:USER<ch>:SIGNa1..... 1023
:OUTPut:USER<ch>:SIGNa1..... 1024
:OUTPut:USER<ch>:TRIGger[:IMMediate]..... 1025
[:SOURce]:INPut:USER:CLOCK:LEVel..... 1025
[:SOURce]:INPut:USER:TRIGger:LEVel..... 1025
[:SOURce]:INPut:USER:PULM:LEVel..... 1026
[:SOURce]:INPut:USER:CLOCK:IMPedance..... 1026
[:SOURce]:INPut:USER:TRIGger:IMPedance..... 1026
[:SOURce]:INPut:USER:CLOCK:SLOPe..... 1026
[:SOURce]:INPut:USER:TRIGger:SLOPe..... 1027
[:SOURce<hw>]:INPut:TM:CLOCK:LEVel..... 1027
[:SOURce<hw>]:INPut:TM:TRIGger:LEVel..... 1027
[:SOURce<hw>]:INPut:TM:CLOCK:IMPedance..... 1027

```

[:SOURce<hw>]:INPut:TM:TRIGger:IMPedance.....	1027
[:SOURce<hw>]:INPut:TM:CLOCK:SLOPe.....	1028
[:SOURce<hw>]:INPut:TM:TRIGger:SLOPe.....	1028

`[:SOURce<hw>]:INPut:TM<ch>:DIRection <Direction>`
`:OUTPut<hw>:TM<ch>:DIRection <Direction>`

Determines whether the connector is used as an input or an output.

Suffix:

`OUTPut<hw> |` 1 | 2
`SOURce<hw>` Determines the baseband the connectors belong to, where:
`OUTPut1 | SOURce1 = Baseband A/C and`
`OUTPut2 | SOURce2 = Baseband B/D`

`TM<ch>` 1|2|3
Determines the local connector, where:
Option:R&S SMW-B10
`OUTPut1:TM1 | 2 | 3 and SOURce1:INPut:TM1 | 2 | 3 define`
TMC1/2/3 of Baseband A/C and
`OUTPut2:TM1 | 2 | 3 and SOURce2:INPut:TM1 | 2 | 3 define`
TMC4/5/6 of Baseband B/D
Option:R&S SMW-B9
`OUTPut1:TM1 | 2 and SOURce1:INPut:TM2 = TMC1/2 of`
Baseband A/C and
`OUTPut2:TM1 | 2 and SOURce2:INPut:TM2 = TMC3/4 of`
Baseband B/D

Parameters:

`<Direction>` INPut | OUTPut
*`RST:` OUTPut

Manual operation: See "[Direction](#)" on page 761

`[:SOURce]:INPut:USER<ch>:DIRection <Direction>`
`:OUTPut:USER<ch>:DIRection <Direction>`

Sets the direction of the signal at the connector that can be input or an output.

Suffix:

`USER<ch>` 1 to 6

Parameters:

`<Direction>` INPut | OUTPut | UNUSed
INPut|OUTPut
Input signal or output signal
UNUSed
No signal present at the connector.

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Manual operation: See "[Direction](#)" on page 757

[:SOURce<hw>] :INPut:TM<ch>:SIGNal <Signal>

Determines the control signal that is input at the selected connector.

To define the connector direction, use the command `[:SOURce<hw>] :INPut:TM<ch>:DIRection`.

Suffix:

SOURce<hw>

1 | 2

Determines the baseband the connectors belong to, where:

SOURce1 = Baseband A/C and

SOURce2 = Baseband B/D

TM<ch>

1|2|3

Determines the local connector, where:

Option: R&S SMW-B10

SOURce1: INPut: TM1 | 2 | 3 = TMC1/2/3 of Baseband A/C and

SOURce2: INPut: TM1 | 2 | 3 = TMC4/5/6 of Baseband B/D

Option: R&S SMW-B9

SOURce1: INPut: TM1 | 2 = TMC1/2 of Baseband A/C and

SOURce2: INPut: TM1 | 2 = TMC3/4 of Baseband B/D

Parameters:

<Signal>

TRIGger | CLOCk | FEEDback | DATA

CLOCk is available only for TM1

DATA is available only for TM2

(default if custom digital modulation with external serial data is used)

FEEDback is available only for TM3 (R&S SMW-B10)/TM2 (R&S SMW-B9)

Options:

TM3, TRIGger|CLOCK requires R&S SMW-B10

Manual operation: See "Signal" on page 761

:OUTPut<hw>:TM<ch>:SIGNal <Signal>

Determines the control signal that is output at the selected connector.

To define the connector direction, use the command `:OUTPut<hw>:TM<ch>:DIRection`.

Suffix:

OUTPut<hw>

1 | 2

Determines the baseband the connectors belong to, where:

OUTPut1 = Baseband A/C or Baseband 1/3

OUTPut2 = Baseband B/D or Baseband 2/4

TM<ch>

1|2|3

Determines the local connector, where:

Option:R&S SMW-B10

OUTPut1:TM1|2|3 = TMC1/2/3 of Baseband A/C or 1/3 and

OUTPut2:TM1|2|3 = TMC4/5/6 of Baseband B/D or 2/4

Option:R&S SMW-B9

OUTPut1:TM1|2 = TMC1/2 of Baseband A/C and

OUTPut2:TM1 = TMC3 of Baseband B/D

Parameters:

<Signal>

MARKA1 | MARKA2 | MARKA3 | SCLA | LATTA | BGATA |
 HOPA | CWMODA | TRIGA | MARKB1 | MARKB2 | MARKB3 |
 SCLB | LATTB | BGATB | HOPB | CWMODB | TRIGB |
 MARKC1 | MARKC2 | MARKC3 | SCLC | LATTC | BGATC |
 HOPC | CWMODC | TRIGC | MARKD1 | MARKD2 | MARKD3 |
 SCLD | LATTD | BGATD | HOPD | CWMODD | TRIGD

MARKA1 | MARKC1 | MARKA2 | MARKC2 | (MARKA3 | MARKC3) =

Baseband A/C Marker 1/2/(3)

SCLA | SCLB | SCLC | SCLD = Symbol Clock A/B/C/D

Option:R&S SMW-B10

LATTA | LATTB | LATTC | LATTD = Lev Att A/B/C/D

BGATA | BGATB | BGATC | BGATD = Burst Gate A/B/C/D

HOPA | HOPB | HOPC | HOPD = HOP A/B/C/D

CWMODA | CWMODB | CWMODC | CWMODD = CW/Mod A/B/C/D

TRIGA | TRIGB | TRIGC | TRIGD = Triggered A

The character A/B/C/D in the parameter value indicates the
 baseband the signal is related to.

*RST: depends on TM suffix

Example:

```
:SOURce1:INPut:TM2:DIRection OUTPut
:OUTPut1:TM2:DIRection?
// OUTPut
:OUTPut1:TM2:SIGNAL MARKA2
```

Options:

TMC4/5/6, LATTA|LATTB|LATTC|LATTD| BGATA|BGATB|
 BGATC|BGATD| HOPA|HOPB|HOPC|HOPD| CWMODA|
 CWMODB|CWMODC|CWMODD| TRIGA|TRIGB|TRIGC|TRIGD
 require R&S SMW-B10

Manual operation: See "Signal" on page 761**[:SOURce]:INPut:USER<ch>:SIGNal <Signal>**

Determines the control signal that is input at the selected connector.

To define the connector direction, use the command [:SOURce]:INPut:USER<ch>:
 DIRection.

Suffix:

USER<ch> 1 to 6

Parameters:<Signal> TRIG1 | TRIG2 | CLOCK1 | CLOCK2 | NSEGM1 | NSEGM2 |
NONE | FEEDback | IPULSA | IPULSB | ERRTA | ERRTB |
BERDATIN | BERCLKIN | BERDATENIN | BERRESTIN |
SYNCIN

TRIG1 | TRIG2 = Global Trigger 1/2

CLOCK1 | CLOCK2 = Global Clock 1/2

NSEGM1 | NSEGM2 = Global Next Segment 1/2

IPULSA | IPULSB = Pulse In A/B, available for USER4 | 5 | 6

FEEDback = Baseband Feedback, available for USER6

SYNCIN = Baseband Sync In

BERDATIN | BERCLKIN | BERDATENIN | BERRESTIN = BER
Data, Clock, Data Enable and Restart

ERRTA | ERRTB = External restart trigger signals for REG

Example:See [Example "Global connectors settings configuration"](#)
on page 1020.**Options:**

SYNCIN requires R&S SMW-B9

BERDATIN | BERCLKIN | BERDATENIN | BERRESTIN require
R&S SMW-K80

ERRTA | ERRTB require R&S SMW-K78

Manual operation: See ["Signal"](#) on page 757

:OUTPut:USER<ch>:SIGNal <Signal>

Sets the control signal that is output at the selected connector.

To define the connector direction, use the command [:OUTPut:USER<ch>:
DIRection](#).**Suffix:**

USER<ch> 1 to 6

Parameters:<Signal> MARKA1 | MARKA2 | MARKA3 | MARKB1 | MARKB2 |
MARKB3 | MARKC1 | MARKC2 | MARKC3 | MARKD1 |
MARKD2 | MARKD3 | SVALA | SVALB | OPULSA | OPULSB |
SYNCA | VIDEOA | VIDEOB | SYNCB | NONE | RTRIGA |
RTRIGB | SVALANegated | SVALBNegated | LOW | HIGH |
MTRigger | SYNCOUT | BERRESTOUT | BERDATENOUT |
BERCLKOUT | BERDATOUTMARK<A | B | C | D><1 | 2 | 3> = Baseband <BB> Marker 1/2/3
(available marker signals depend on the system configuration,
see [Table 12-1](#))

SVALA | SVALB = Signal Valid A/B, available for USER4 | 5 | 6

SVALANegated | SVALBNegated = Signal Valid A/B (negative),
available for USER4 | 5 | 6

OPULSA|OPULSB = Pulse Out A/B, available for USER4|5|6
 SYNCA|SYNCB = Pulse Sync A/B, available for USER4|5|6
 VIDEOA|VIDEOB = Pulse Video A/B, available for USER4|5|6
 MTRigger = Manual Trigger, available for USER6
 RTRIGA|RTRIGB = REG trigger A/B, available for USER4|5
 BERRESTOUT|BERDATENOUT|BERCLKOUT|BERDATOUT =
 BERT TestGen Data, Clock, Data Enable and Restart
 SYNCOUT = Baseband Sync Out
 LOW|HIGH = Always 0/1
 NONE = none
 *RST: MARKA1

Example: See [Example"Global connectors settings configuration"](#) on page 1020

Options: SYNCOUT requires R&S SMW-B9
 BERRESTOUT|BERDATENOUT|BERCLKOUT|BERDATOUT
 require R&S SMW-K80
 RTRIGA|RTRIGB require R&S SMW-K78

Manual operation: See ["Signal"](#) on page 757

:OUTPut:USER<ch>:TRIGger[:IMMediate]

Generates a short pulse signal and outputs it at the USER connector.

This signal can serve as a common external trigger signal for triggering of several R&S SMW, see [Example"Triggering several R&S SMW instruments simultaneously"](#) on page 678.

Suffix:
 USER<ch> 6

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 759

[:SOURce]:INPut:USER:CLOCK:LEVel <Level>
 [:SOURce]:INPut:USER:TRIGger:LEVel <Level>

Sets the threshold for any input signal at the USER1-3 connectors.

Parameters:
 <Level> float
 Range: 0.1 to 2
 Increment: 0.1
 *RST: 1

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Manual operation: See ["Threshold USER1-3 Input"](#) on page 759

[[:SOURce]:INPut:USER:PULM:LEVel <Level>

Sets the threshold for any input signal at the USER4-6 connectors.

Parameters:

<Level> float
 Range: 0.1 to 2
 Increment: 0.1
 *RST: 1
 Default unit: V

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Manual operation: See ["Threshold USER4-6 Input/Threshold Pulse Input"](#) on page 565

[[:SOURce]:INPut:USER:CLOCK:IMPedance <Impedance>

[[:SOURce]:INPut:USER:TRIGger:IMPedance <Impedance>

Selects the input impedance for the external trigger inputs.

Parameters:

<Impedance> G50 | G1K
G50
 50 Ω per ground
G1K
 1 kΩ per ground
 *RST: G1K

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Manual operation: See ["Impedance Clock/Trigger Input"](#) on page 760

[[:SOURce]:INPut:USER:CLOCK:SLOPe <Slope>

Sets the polarity of the active slope of an externally applied clock signal.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example: See [Example"Global connectors settings configuration"](#) on page 1020.

Manual operation: See ["Clock Input Slope"](#) on page 760

[[:SOURce]:INPut:USER:TRIGger:SLOPe <Slope>

Sets the polarity of the active slope of an applied instrument trigger.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example: See [Example "Global connectors settings configuration"](#)
 on page 1020

Manual operation: See ["Trigger Input Slope"](#) on page 760

[[:SOURce<hw>]:INPut:TM:CLOCK:LEVel <Level>

[[:SOURce<hw>]:INPut:TM:TRIGger:LEVel <Level>

Sets the high/low threshold in volts for the trigger and clock signal inputs of the baseband section.

Suffix:

SOURce<hw> 1 | 2
 Determines the baseband the connectors belong to, where:
 SOURce1 = Baseband A/C and
 SOURce2 = Baseband B/D

Parameters:

<Level> float
 Range: 0.3 to 2
 Increment: 0.1
 *RST: 1

Manual operation: See ["Threshold Clock/Trigger Input"](#) on page 762

[[:SOURce<hw>]:INPut:TM:CLOCK:IMPedance <Impedance>

[[:SOURce<hw>]:INPut:TM:TRIGger:IMPedance <Impedance>

Selects the input impedance for the external trigger/clock inputs.

Suffix:

SOURce<hw> 1 | 2
 Determines the baseband the connectors belong to, where:
 SOURce1 = Baseband A/C and
 SOURce2 = Baseband B/D

Parameters:

<Impedance> G50 | G1K
 G50
 50 Ω per ground
 G1K
 1 kΩ per ground

G10K

For backward compatibility with other Rohde & Schwarz signal generators. The R&S SMW maps this value to G1K.

*RST: G1K

Manual operation: See ["Impedance Clock/Trigger Input"](#) on page 763

[SOURce<hw>]:INPut:TM:CLOCK:SLOPe <Slope>

Sets the polarity of the active slope of an externally applied clock signal.

Suffix:

SOURce<hw> 1 | 2

Determines the baseband the connectors belong to, where:

SOURce1 = Baseband A/C and

SOURce2 = Baseband B/D

Parameters:

<Slope> NEGative | POSitive

*RST: POSitive

Manual operation: See ["Clock Input Slope"](#) on page 285

[SOURce<hw>]:INPut:TM:TRIGger:SLOPe <Slope>

Sets the polarity of the active slope of an externally applied trigger signal.

Suffix:

SOURce<hw> 1 | 2

Determines the baseband the connectors belong to, where:

SOURce1 = Baseband A/C and

SOURce2 = Baseband B/D

Parameters:

<Slope> NEGative | POSitive

*RST: POSitive

Manual operation: See ["Trigger Input Slope"](#) on page 763

14.19.2 SOURce:BBIN subsystem

The SOURce:BBIN subsystem contains the commands for setting the external digital baseband signal.

In [Standard mode](#), the external baseband signal A can be routed to path A, path B, or both paths. The external baseband signal B can be routed to path B only.

Suffixes in the keywords ENTity<ch> and SOURce<hw>

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

Table 14-1: Value ranges of the suffixes ENTity<ch> and SOURce<hw> in advanced configuration with multiple entities

SCPI Syntax	ENTity<ch>	SOURce<hw>
SOURce<hw>:BBIN:...	-	1 to 4
ENTity<ch>:SOURce<hw>:BBIN:...	1 to 4	1 to 4



See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

Suffix	Value range	Description
CHANnel<ch0>	0 to 7	Channel number Up to 8 channels per HS DIG I/Q interface and max. 8 channels for both interfaces.

Required options

See ["Required Options"](#) on page 161

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Example: Applying an external digital baseband signal (DIG I/Q)

An external digital signal must be applied at the DIG I/Q connectors.

```
// Use the external signal supplied at the CODER 1 interface.
SOURce1:BBIN:DIGital:SOURce CODER1

// SOURce1:BBIN:DIGital:IQSWap:STATe 1

// Set the sample rate source and query the value.
SOURce1:BBIN:SRATe:SOURce DIN
SOURce1:BBIN:SRATe:ACTual? 100000000
SOURce1:BBIN:STATe ON

// enable automatic adjustment of the baseband input signal
SOURce1:BBIN:DIGital:ASETting:STATe ON
SOURce1:BBIN:MPERiod 10s
SOURce1:BBIN:ALEVel:EXECute
SOURce1:BBIN:CFACTOR?
SOURce1:BBIN:POWer:PEAK?
SOURce1:BBIN:POWer:RMS?

// monitor the signal
SOURce1:BBIN:OLOad:STATe?
// 0, i.e. no overflow detected
SOURce1:BBIN:OLOad:HOLD:RESet
SOURce1:BBIN:OLOad:HOLD:STATe?
```

Example: Applying an external digital baseband signal (HS DIG I/Q)

An external digital signal must be applied at the HS DIG I/Q connectors.

```

SOURcel:BBIN:DIGital:SOURce CODER1
SOURcel:BBIN:DIGital:INTerface HSD

SOURcel:BBIN:STATE 1

SOURcel:BBIN:DIGital:INTerface HSD
SOURcel:BBIN:SRATE:SOURce? HSD
SOURcel:BBIN:CHANnel0:NAME?
SOURcel:BBIN:CHANnel0:SRATE?
// 100000000
SOURcel:BBIN:CHANnel0:POWer:CFACtor 0.5
SOURcel:BBIN:CHANnel0:POWer:PEAK 3
SOURcel:BBIN:CHANnel0:POWer:RMS?
// 2.5
SOURcel:BBIN:CHANnel0:BB:STATE 1
SOURcel:BBIN:SRATE:SUM?
// 100000000
SOURcel:BBIN:SRATE:MAX?
// 1250000000

// Set the sample rate per channel.
SOURcel:BBIN:SRATE:SOURce USER
SOURcel:BBIN:CHANnel0:SRATE 500000000
SOURcel:BBIN:SRATE:SUM?
// 500000000

SOURcel:BBIN:MPERiod 2
SOURcel:BBIN:ALEVel:EXECute

```

[SOURce<hw>]:BBIN:STATE.....	1031
[SOURce<hw>]:BBIN:DIGital:SOURce.....	1031
[SOURce<hw>]:BBIN:DIGital:INTerface.....	1031
[SOURce<hw>]:BBIN:CDEvice?.....	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATE.....	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:NAME.....	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:CFACtor.....	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:PEAK.....	1033
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:RMS.....	1033
[SOURce<hw>]:BBIN:CHANnel<ch0>:SRATE.....	1033
[SOURce<hw>]:BBIN:IQSWap[:STATE].....	1034
[SOURce<hw>]:BBIN:MODE.....	1034
[SOURce<hw>]:BBIN:SRATE:SOURce.....	1034
[SOURce<hw>]:BBIN:SRATE:SUM?.....	1035
[SOURce<hw>]:BBIN:SRATE:MAX?.....	1035
[SOURce<hw>]:BBIN:SRATE[:ACTual].....	1036
[SOURce<hw>]:BBIN:DIGital:ASETting:STATE.....	1036
[SOURce<hw>]:BBIN:MPERiod.....	1036

[:SOURce<hw>]:BBIN:ALEVel:EXECute.....	1037
[:SOURce<hw>]:BBIN:POWer:CFACtor.....	1037
[:SOURce<hw>]:BBIN:POWer:PEAK.....	1037
[:SOURce<hw>]:BBIN:POWer:RMS?.....	1038
[:SOURce<hw>]:BBIN:OLOad:STATe?.....	1038
[:SOURce<hw>]:BBIN:OLOad:HOLD:STATe?.....	1038
[:SOURce<hw>]:BBIN:OLOad:HOLD:RESet.....	1038

`[:SOURce<hw>]:BBIN:STATe <State>`

Enables feeding of an external digital signal into the signal path.

Parameters:

`<State>` 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["State"](#) on page 164

`[:SOURce<hw>]:BBIN:DIGital:SOURce <DigInpSource>`

Defines the connector used as an external signal source.

Parameters:

`<DigInpSource>` CODER1 | FADER1 | FADER2 | CODER2
 *RST: CODER1

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Options: FADER1|FADER2 require R&S SMW-B14

Manual operation: See ["Connector"](#) on page 164

`[:SOURce<hw>]:BBIN:DIGital:INTERface <BBinDigInterfac>`

Selects the input connector at that the signal is fed.

Parameters:

`<BBinDigInterfac>` DIGital | HSDin | DIGital | HSDin
DIN
 DIG I/Q
HSDin
 HS DIG I/Q
 *RST: HSDin

Example: See [Example"Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["Interface"](#) on page 171

[[:SOURce<hw>]:BBIN:CDEvice?

Indicates the ID of an externally connected Rohde & Schwarz Instrument or Rohde & Schwarz device.

Return values:

<CDevice> string
 "None" - no device is connected.

Example: SOURce:BBIN:CDEvice?
 Queries the connected device ID.

Usage: Query only

Manual operation: See ["Connected Device"](#) on page 165

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATe <BbinIqHsChanSta>

Activates the channel.

Parameters:

<BbinIqHsChanSta> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["BB"](#) on page 174

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:NAME <BbinIqHsChanNam>

Queries the channel name.

Parameters:

<BbinIqHsChanNam> string

Example: See [Example"Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["Name"](#) on page 173

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:CFACTOR <BbinIqHsChCrFac>

Sets the crest factor of the individual channels.

Parameters:

<BbinIqHsChCrFac> float
 Range: 0 to 30
 Increment: 0.01
 *RST: 0

Example: See [Example "Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["Crest Factor"](#) on page 174

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:PEAK <BbinHsChPoPeak>

Sets the peak level per channel.

Parameters:

<BbinHsChPoPeak> float
 Range: -60 to 3.02
 Increment: 0.01
 *RST: 0

Example: See [Example "Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["Peak Level"](#) on page 174

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:RMS <BbinIqHsChPoRms>

Queries the estimated RMS level.

Parameters:

<BbinIqHsChPoRms> float
 Range: -100 to 10
 Increment: 0.01
 *RST: 0

Example: See [Example "Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options: R&S SMW-B9

Manual operation: See ["Level"](#) on page 174

[[:SOURce<hw>]:BBIN:CHANnel<ch0>:SRATe <BbinIqHsChSaRat>

Queries the sample rate per channel.

Parameters:

<BbinIqHsChSaRat> float

Range: 400 to 250E6 ("System Config > Mode = Advanced")/1250E6 ("System Config > Mode = Standard")

Increment: 0.001

*RST: 100E6

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Example:

See [Example "Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Options:

R&S SMW-B9

Setting the sample rate requires R&S SMW-K556.

Manual operation: See ["Sample Rate"](#) on page 173

[:SOURce<hw>]:BBIN:IQSWap[:STATe] <State>

If activated, swaps the I and Q channel.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: 0

Example:

See [Example "Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["I/Q Swap"](#) on page 164

[:SOURce<hw>]:BBIN:MODE <Mode>

Defines that a digital external signal is applied.

Parameters:

<Mode> DIGital

*RST: DIGital

Example:

See [Example "Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

[:SOURce<hw>]:BBIN:SRATe:SOURce <Source>

Selects whether the sample rate is estimated based on the digital input signal or is a user-defined value.

Parameters:

<Source> DIN | HSDin | USER

USER

Enabled for [:SOURce<hw>]:BBIN:DIGital:INTerface
DIN.

Set the value with [:SOURce<hw>]:BBIN:SRATe[:ACTual].

DIN

Enabled for [:SOURce<hw>]:BBIN:DIGital:SOURce
CODER1|CODER2.

Estimates the sample rate based on the digital input signal.

HSDin

Enabled for [:SOURce<hw>]:BBIN:DIGital:INTerface
HSDin.

*RST: HSDin

*RST: USER (R&S SMW-B10)/HSDin (R&S SMW-B9)

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Options: HSDin requires R&S SMW-B9

Manual operation: See ["Sample Rate Source"](#) on page 165

[:SOURce<hw>]:BBIN:SRATe:SUM?

Queries the sum of the sample rates of all active channels.

Return values:

<DigIqHsOutSRSum> integer

Range: 0 to depends on settings

*RST: 0

Example: See [Example"Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Usage: Query only

Options: R&S SMW-B9

Manual operation: See ["Aggregated Link Sample Rate"](#) on page 174

[:SOURce<hw>]:BBIN:SRATe:MAX?

Queries the maximum sample rate.

Return values:

<DigIqHsOutSRMax> integer

Range: 1050E6 to 1250E6

*RST: 1050E6

Example: See [Example"Applying an external digital baseband signal \(HS DIG I/Q\)"](#) on page 1030.

Usage: Query only

Options: R&S SMW-B9

Manual operation: See ["Aggregated Link Sample Rate"](#) on page 174

[:SOURce<hw>]:BBIN:SRATe[:ACTual] <Actual>

Sets the sample rate of the external digital baseband signal.

Parameters:

<Actual> float
 Range: 25E6 to max (depends on the installed options)
 Increment: 5E6
 *RST: 100E6
 max = 200E6 (R&S SMW-B10)
 max = 250E6 (R&S SMW-B9)
 max = 100E6|200E6 (for [:SOURce<hw>]:BBIN:DIGital:
 SOURceFADER1 | FADER2)
 See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Example: See [Example "Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["Sample Rate Value"](#) on page 166

[:SOURce<hw>]:BBIN:DIGital:ASETting:STATe <State>

Activates automatic adjustment of the baseband input signal.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example "Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["DIG IQ Auto Setting"](#) on page 167

[:SOURce<hw>]:BBIN:MPERiod <MPeriod>

For [:SOURce<hw>]:BBIN:DIGital:SOURce CODER1 | CODER2

Sets the recording duration for measuring the baseband input signal by executed [:
 SOURce<hw>]:BBIN:ALEVel:EXECute.

Parameters:

<MPeriod> integer
 Range: 1 to 32
 *RST: 2
 Default unit: s

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["Measurement Period"](#) on page 167

[:SOURce<hw>]:BBIN:ALEVel:EXECute

For [:SOURce<hw>]:BBIN:DIGital:SOURce CODER1 | CODER2

Starts measuring the input signal. The measurement estimates the crest factor, peak and RMS level.

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Usage: Event

Manual operation: See ["Auto Level Set"](#) on page 167

[:SOURce<hw>]:BBIN:POWER:CFACTOR <CFactor>

Sets the crest factor of the external baseband signal.

Parameters:

<CFactor> float
 Range: 0 to 30
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Manual operation: See ["Crest Factor"](#) on page 167

[:SOURce<hw>]:BBIN:POWER:PEAK <Peak>

Peak level of the external baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

Parameters:

<Peak> float
 Range: -60 to 3.02
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029

Manual operation: See ["Peak Level"](#) on page 167

[:SOURce<hw>]:BBIN:POWER:RMS?

Queries the RMS level of the external digital baseband signal.

Return values:

<Rms> float
 Range: -100 to 10
 Increment: 0.01
 *RST: 0

Example: See [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029.

Usage: Query only

Manual operation: See ["Level"](#) on page 167

[:SOURce<hw>]:BBIN:OLOad:STATe?

Queries the current overflow state.

Return values:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: see [Example"Applying an external digital baseband signal \(DIG I/Q\)"](#) on page 1029

Usage: Query only

Manual operation: See ["Signal Monitoring"](#) on page 168

[:SOURce<hw>]:BBIN:OLOad:HOLD:STATe?

Queries an overload since the last reset for evaluating the measurement.

Return values:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [\[:SOURce<hw>\]:BBIN:OLOad:STATe?](#) on page 1038

Usage: Query only

Manual operation: See ["Signal Monitoring"](#) on page 168

[:SOURce<hw>]:BBIN:OLOad:HOLD:RESet

Reset of the Overload Hold indication.

Example: see [\[:SOURce<hw>\]:BBIN:OLOad:STATe?](#) on page 1038

Usage: Event

14.19.3 Analog modulation subsystems

The subsystems in this section describe all commands for analog modulation of the RF signal. Divided in separate sections, you can configure amplitude modulation (AM), frequency modulation (FM), phase modulation (PhiM) and pulse modulation (PULM).

You can perform each of the modulations either with an internally generated modulation signal or with an externally applied signal.

To configure the internal signal, use the commands listed in [Chapter 14.19.11, "SOURce:LFOOutput subsystem"](#), on page 1235.

For more information:

See [Chapter 8.11, "Analog modulations"](#), on page 552.

14.19.3.1 SOURce:MODulation subsystem

The command in this subsystem allows you to disable all active modulations at once, and, vice versa, to restore the last active ones.

[[:SOURce<hw>]:MODulation[:ALL][:STATe] <State>

Activates all modulations that were active before the last switching off.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

```
SOURce1:AM1:DEPT 30
SOURce1:AM1:SOURce LF1
SOURce1:AM1:STATe 1
SOURce1:FM1:DEVIation 1000
SOURce1:FM1:STATe 1
// disable both modulation
SOURce1:MODulation:ALL:STATe 0
SOURce1:AM1:STATe?
// 0
SOURce1:FM1:STATe?
// 0
// enable both modulation
SOURce1:MODulation:ALL:STATe 1
SOURce1:AM1:STATe?
// 1
SOURce1:FM1:STATe?
// 1
```

Manual operation: See ["\[MOD ON/OFF\]"](#) on page 562

14.19.3.2 SOURce:AM subsystem

Option: R&S SMW-K720

The AM subsystem contains the commands for setting the amplitude modulation and also the broadband amplitude modulation.



Activation of amplitude modulation deactivates ARB, I/Q modulation, digital modulation and all digital standards.

The following examples show some variants for generating AM signals.

Example: Creating an amplitude modulated RF signal

Using the internal LF generator, the following command sequence configures an amplitude modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHAPE SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the amplitude modulation settings and switch AM on
SOURce1:AM1:SOURce LF1
SOURce1:AM1:DEPTTh 30
SOURce1:AM:RATio 40
SOURce1:AM1:DEVIation:MODE UNC
SOURce1:AM1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an amplitude modulated signal with determined deviations depths.

```
// Configure the AM modulation settings with combined LF signal sources
SOURce1:AM1:SOURce LF1
SOURce1:AM1:DEPTTh 32
// Select the modulation signal source for the second path
SOURce1:AM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURce1:AM1:DEVIation:MODE TOT
SOURce1:AM1:DEPTTh:SUM 60

// Query the deviation depth of modulation signal in the second path
SOURce1:AM2:DEPTTh?
// Response: 28

// Combine the signals of both paths with fixed ratio
SOURce1:AM1:DEVIation:MODE RAT
```

```

SOURce1:AM1:RATio 100
SOURce1:AM2:DEPTh 25

// Query the deviation depth of modulation signal in the first path
SOURce1:AM1:DEPTh?
// Response: 25

SOURce1:AM1:STATe 1
SOURce1:AM2:STATe 1

```

Example: Using an external signal source

Using an external signal source, you can additionally determine whether you want to use only the AC component of the external modulation signal.

```

// Reset the instrument to start from a defined state
*RST

// Set frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the amplitude modulation settings and turn on AM
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:DEPTh 40

// Query the input sensitivity at the external modulation input
SOURce1:AM1:SENSitivity?
// Response: 40
// Since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 50%/V.
// This value is assigned to the voltage value for full
// modulation of the input.

// Select the coupling mode AC for external amplitude modulation
SOURce1:INPut:MODext:COUPling1 AC

// Switch on AM and RF signal output
SOURce1:AM1:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

[:SOURce<hw>]:AM<ch>:STATe	1042
[:SOURce<hw>]:AM<ch>:SOURce	1042
[:SOURce<hw>]:AM<ch>[:DEPTh]	1042
[:SOURce<hw>]:AM:DEPTh:SUM	1043
[:SOURce<hw>]:AM:DEViation:MODE	1043
[:SOURce<hw>]:AM:RATio	1043
[:SOURce<hw>]:AM<ch>:SENSitivity	1044

[[:SOURce<hw>]:AM<ch>:STATe <State>

Activates amplitude modulation.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 1040.

Manual operation: See ["State"](#) on page 565

[[:SOURce<hw>]:AM<ch>:SOURce <Source>

Selects the modulation source for amplitude modulation.

Parameters:

<Source> LF1 | LF2 | NOISe | EXT1 | EXT2 | EXTeRnal | INTeRnal

LF1|LF2

Uses an internally generated LF signal.

EXT1|EXT2

Uses an externally supplied LF signal.

NOISe

Uses the internally generated noise signal.

INTeRnal

Uses the internally generated signal of LF1.

EXTeRnal

Uses an external LF signal (EXT1).

*RST: LF1 <AM1>; LF2 <AM2>

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 1040.

Manual operation: See ["Source"](#) on page 566

[[:SOURce<hw>]:AM<ch>[:DEPT] <Depth>

Sets the depth of the amplitude modulation in percent.

Suffix:

<ch> 1..2
 Modulation signal channel

Parameters:

<Depth> float
 Range: 0 to 100

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 1040.

Manual operation: See ["Depth"](#) on page 569

[:SOURce<hw>]:AM:DEPT h:SUM <AmDepthSum>

Sets the total depth of the LF signal when using combined signal sources in amplitude modulation.

Parameters:

<AmDepthSum> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 30

Example: See [Example"Using combined LF signals"](#) on page 1040.

Manual operation: See ["Total Depth"](#) on page 570

[:SOURce<hw>]:AM:DEVIation:MODE <AmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total depth.

Parameters:

<AmDevMode> UNCOupled | TOTal | RATio
UNCOupled
 Does not couple the LF signals.
 The deviation depth values of both paths are independent.
TOTal
 Couples the deviation depth of both paths.
RATio
 Couples the deviation depth ratio of both paths
 *RST: UNCOupled

Example: See [Example"Using combined LF signals"](#) on page 1040.

Manual operation: See ["Deviation Mode"](#) on page 569

[:SOURce<hw>]:AM:RATio <Ratio>

Sets the deviation ratio (path#2 to path#1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 1040.

Manual operation: See ["Ratio Path2/Path1"](#) on page 570

[:SOURce<hw>]:AM<ch>:SENSitivity <Sensitivity>

Sets the sensitivity of the external signal source for amplitude modulation in %/V.

Parameters:

<Sensitivity>	float
Range:	0 to 100
Increment:	0.1
*RST:	30

Example: See [Example "Using an external signal source"](#) on page 1041.

Manual operation: See ["Sensitivity"](#) on page 569

14.19.3.3 SOURce:FM subsystem

Option: R&S SMW-K720

The FM subsystem contains the commands for setting the frequency modulation.

Example: Creating a frequency modulated RF signal

Using the internal LF generator, the following command sequence configures a frequency modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHApe SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
SOURce1:FM:RATio 40
SOURce1:FM:MODe LNOise
SOURce1:FM1:STATe 1

// Switch on LF and RF signal output
SOURce1:LFOutput1:STATe 1
OUTPut1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure a frequency modulated signal with determined deviations.

```

// Configure the FM modulation settings with combined LF signal sources
SOURcel:FM1:SOURce LF1
SOURcel:FM1:DEVIation 1000
// Select the modulation signal source for the second path
SOURcel:FM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:FM1:DEVIation:MODE TOT
SOURcel:FM1:DEVIation:SUM 5000

// Query the deviation depth of modulation signal in the second path
SOURcel:FM2:DEVIation?
// Response: 4000

// Combine the signals of both paths with fixed ratio
SOURcel:FM1:DEVIation:MODE RAT
SOURcel:FM1:RATio 100
SOURcel:FM2:DEVIation 10000

// Query the deviation depth of modulation signal in the first path
SOURcel:FM1:DEVIation?
// Response: 1000

SOURcel:FM1:STATe 1
SOURcel:FM2:STATe 1

```

Example: Using an external signal source

Alternatively configure the frequency modulation settings with an external modulation signal.

```

// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURcel:FREQuency:CW 6000000000
SOURcel:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the frequency modulation settings and switch FM on
SOURcel:FM1:SOURce EXT1
SOURcel:FM1:DEVIation 5000

// Query the input sensitivity at the external modulation input
:SOURcel:FM1:SENSitivity?
// Response: 1000
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 5000 Hz/V.

// Switch on FM and RF signal output
SOURcel:FM1:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

[:SOURce<hw>]:FM<ch>:STATe	1046
[:SOURce<hw>]:FM<ch>[:DEViation]	1046
[:SOURce<hw>]:FM<ch>:SOURce	1046
[:SOURce<hw>]:FM:DEViation:MODE	1047
[:SOURce<hw>]:FM:DEViation:SUM	1048
[:SOURce<hw>]:FM:RATio	1048
[:SOURce<hw>]:FM:MODE	1048
[:SOURce<hw>]:FM:SENSitivity?	1049

[\[:SOURce<hw>\]:FM<ch>:STATe](#) <State>

Activates frequency modulation.

Suffix:

FM<ch> 1..2
determines the modulation signal channel.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Creating a frequency modulated RF signal"](#)
on page 1044.

Manual operation: See ["State"](#) on page 565

[\[:SOURce<hw>\]:FM<ch>\[:DEViation\]](#) <Deviation>

Sets the modulation deviation of the frequency modulation in Hz.

Suffix:

FM<ch> 1|2
Modulation signal channel

Parameters:

<Deviation> float
The maximum deviation depends on the RF frequency and the
selected modulation mode (see data sheet).
Range: 0 to max
Increment: 0.01
*RST: 1E3

Example: See [Example"Creating a frequency modulated RF signal"](#)
on page 1044.

Manual operation: See ["Deviation"](#) on page 566

[\[:SOURce<hw>\]:FM<ch>:SOURce](#) <Source>

Selects the modulation source for frequency modulation.

Suffix:

FM<ch> 1|2
Modulation signal channel.

Parameters:

<Source> INTernal | EXTernal | LF1 | LF2 | NOISe | EXT1 | EXT2 | INTB
LF1|LF2
 Uses an internally generated LF signal.
INTernal = LF1
 Works like LF1
EXTernal
 Works like EXT1
EXT1|EXT2
 Uses an externally supplied LF signal.
NOISe
 Uses the internally generated noise signal.
INTB
 Uses the internal baseband signal.
 *RST: LF1 <FM1>; LF2 <FM2>

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 1044.

Options: INTB requires R&S SMW-B9

Manual operation: See ["Source"](#) on page 566

[[:SOURce<hw>]:FM:DEVIation:MODE <FmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

Parameters:

<FmDevMode> UNCoupled | TOTal | RATio
UNCoupled
 Does not couple the LF signals.
 The deviation values of both paths are independent.
TOTal
 Couples the deviation of both paths.
RATio
 Couples the deviation ratio of both paths
 *RST: UNCoupled

Example: See [Example"Using combined LF signals"](#) on page 1044.

Manual operation: See ["Deviation Mode"](#) on page 567

[[:SOURce<hw>]:FM:DEVIation:SUM <FmDevSum>

Sets the total deviation of the LF signal when using combined signal sources in frequency modulation.

Parameters:

<FmDevSum> float
 Range: 0 to 40E6
 Increment: 0.01
 *RST: 1E3

Example: See [Example"Using combined LF signals"](#) on page 1044.

Manual operation: See ["Total Deviation"](#) on page 567

[[:SOURce<hw>]:FM:RATio <Ratio>

Sets the deviation ratio (path2 to path1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 1044.

Manual operation: See ["Ratio Path2/Path1"](#) on page 567

[[:SOURce<hw>]:FM:MODE <Mode>

Selects the mode for the frequency modulation.

Parameters:

<Mode> NORMal | LNOise

NORMal

The maximum range for modulation bandwidth and FM deviation is available.

LNOise

Frequency modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

*RST: NORMal

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 1044.

Manual operation: See ["Mode"](#) on page 567

[SOURce<hw>]:FM:SENSitivity?

Queries the sensitivity of the externally supplied signal for frequency modulation. The sensitivity depends on the set modulation deviation.

Return values:

<Sensitivity> float
 Sensitivity in Hz/V.
 It is assigned to the voltage value for full modulation of the input.
 Range: 0 to max
 Increment: 0.01

Example: See [Example "Using an external signal source"](#) on page 1045.

Usage: Query only

14.19.3.4 SOURce:PM subsystem

Option: R&S SMW-K720

The PM subsystem contains the commands for setting the phase modulation. You can configure the internal modulation source (LF generator) with the commands listed in [Chapter 14.19.11, "SOURce:LFOutput subsystem"](#), on page 1235 .

For information about the required options, see [Chapter 8.11.1, "Required options"](#), on page 554.

Example: Performing phase modulation

The following example shows a command sequence to perform phase modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the phase modulation settings
SOURce1:LFOutput1:SHApe SINE
SOURce1:LFOutput1:FREQuency 1000

// Select the LF signal generated by the internal modulation generator
// or the internally generated noise signal
SOURce1:PM1:DEVIation 1
SOURce1:PM1:SOURce LF1
// SOURce1:PM1:SOURce INTERNAL
// SOURce1:PM1:SOURce NOISE
SOURce1:PM1:RATio 40
SOURce1:PM1:MODE HBAN

// Alternatively configure the phase modulation settings for an
```

```
// external modulation source and query the input sensitivity.
SOURce1:PM1:SOURce EXT1
// SOURce1:PM1:SOURce EXTERNAL
SOURce1:PM1:DEVIation 1
SOURce1:PM1:SENSitivity?
// Response: 1
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 1RAD/V.

// Activate the signal output
SOURce1:PM1:STATe 1
OUTPut1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an phase modulated signal with determined deviations.

```
// Configure the Phase modulation settings with combined LF signal sources
SOURce1:PM1:SOURce LF1
SOURce1:PM1:DEVIation 1.5
// Select the modulation signal source for the second path
SOURce1:PM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURce1:PM1:DEVIation:MODE TOT
SOURce1:PM1:DEVIation:SUM 2

// Query the deviation depth of the modulation signal in the second path
SOURce1:PM2:DEVIation?
// Response: 0.5

// Combine the signals of both paths with fixed ratio
SOURce1:PM1:DEVIation:MODE RAT
SOURce1:PM1:RATio 80
SOURce1:PM2:DEVIation?
// Response: 1.2

// Query the deviation depth of modulation signal in the first path
SOURce1:PM1:DEVIation?
// Response: 1.5

SOURce1:FM1:STATe 1
SOURce1:FM2:STATe 1
```

The following commands are available:

[:SOURce<hw>]:PM<ch>:STATe	1051
[:SOURce<hw>]:PM<ch>:SOURce	1051
[:SOURce<hw>]:PM:MODE	1052
[:SOURce<hw>]:PM:DEVIation:MODE	1052
[:SOURce<hw>]:PM:DEVIation:SUM	1052

[:SOURce<hw>]:PM:RATio.....	1053
[:SOURce<hw>]:PM:SENSitivity?.....	1053
[:SOURce]:PM<ch>[:DEViation].....	1053

`[:SOURce<hw>]:PM<ch>:STATe <State>`

Activates phase modulation.

Activation of phase modulation deactivates frequency modulation.

Suffix:

PM<ch> 1|2
Sets the modulation signal channel.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Performing phase modulation"](#) on page 1049.

Manual operation: See ["State"](#) on page 565

`[:SOURce<hw>]:PM<ch>:SOURce <Source>`

Selects the modulation source for phase modulation signal.

Suffix:

PM<ch> 1|2
Sets the modulation signal channel.

Parameters:

<Source> INTernal | EXTernal | LF1 | LF2 | NOISe | EXT1 | EXT2 | INTB
LF1|LF2
Uses an internally generated LF signal.
EXT1|EXT2
Uses an externally supplied LF signal.
NOISe
Uses the internally generated noise signal.
INTernal
Uses the internally generated signal of LF1.
EXTernal
Uses an external LF signal (EXT1).
INTB
Uses the internal baseband signal.
*RST: LF1 <PM1>; LF2 <PM2>

Example: See [Example"Performing phase modulation"](#) on page 1049.

Options: INTB requires R&S SMW-B9

Manual operation: See ["Source"](#) on page 566

[SOURce<hw>]:PM:MODE <Mode>

Selects the mode for the phase modulation.

Parameters:

<Mode> HBANdwidth | HDEViation | LNOise

HBANdwidth

Sets the maximum available bandwidth.

HDEViation

Sets the maximum range for Φ M deviation.

LNOise

Selects a phase modulation mode with phase noise and spurious characteristics close to CW mode.

*RST: HBANdwidth

Example: See [Example"Performing phase modulation"](#) on page 1049.

Manual operation: See ["Mode"](#) on page 569

[SOURce<hw>]:PM:DEViation:MODE <PmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

Parameters:

<PmDevMode> UNCoupled | TOTal | RATio

UNCoupled

Does not couple the LF signals.

The deviation values of both paths are independent.

TOTal

Couples the deviation of both paths.

RATio

Couples the deviation ratio of both paths

*RST: UNCoupled

Example: See [Example"Using combined LF signals"](#) on page 1050

Manual operation: See ["Deviation Mode"](#) on page 568

[SOURce<hw>]:PM:DEViation:SUM <PmDevSum>

Sets the total deviation of the LF signal when using combined signal sources in phase modulation.

Parameters:

<PmDevSum> float
Range: 0 to max
Increment: 1E-6
*RST: 1

Example: See [Example"Using combined LF signals"](#) on page 1050

Manual operation: See ["Total Deviation"](#) on page 568

[SOURce<hw>]:PM:RATio <Ratio>

Sets the deviation ratio (path2 to path1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 100

Example: See [Example"Performing phase modulation"](#) on page 1049.

Manual operation: See ["Ratio Path2/Path1"](#) on page 568

[SOURce<hw>]:PM:SENSitivity?

Queries the sensitivity of the externally applied signal for phase modulation.

The returned value reports the sensitivity in RAD/V. It is assigned to the voltage value for full modulation of the input.

Return values:

<Sensitivity> float

Example: See [Example"Performing phase modulation"](#) on page 1049.

Usage: Query only

[SOURce]:PM<ch>[:DEViation] <Deviation>

Sets the modulation deviation of the phase modulation in RAD.

Parameters:

<Deviation> float
 The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).
 Range: 0 to max
 Increment: 1
 *RST: 1
 Default unit: RAD

Example: See [Example"Performing phase modulation"](#) on page 1049.

Manual operation: See ["Deviation"](#) on page 568

14.19.3.5 SOURce:PULM subsystem

Option: see [Chapter 8.11.1, "Required options"](#), on page 554.

The PULM subsystem contains the commands for setting the pulse modulation.

- [Pulse modulation settings](#)..... 1054

Pulse modulation settings

With the commands described in this section, you can configure the settings for pulse modulation, select the trigger mode and determine delay times for the pulse modulation signal.

Example: Perform pulse modulation

The example shows a command sequence to perform pulse modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the pulse modulation settings
// Select the internal modulation generator,
// set trigger mode, select pulse mode, transition type

// and select the polarity of the internally generated pulse video output

SOURce:PULM:SOURce INT
SOURce:PULM:TRIGger:MODE SING
SOURce:PULM:MODE DOUB
SOURce:PULM:TTYPe SMO

SOURce:PULM:OUTPut:VIDeo:POLarity INVerted

// Alternatively configure the pulse modulation settings for
// external modulation source
// Select the source, set the polarity of the external signal,
// select the impedance for the external pulse modulation input/
// for the external pulse modulation trigger input
SOURce:PULM:SOURce EXT
SOURce:PULM:POLarity NORMal
SOURce:PULM:IMPedance G1K

SOURce:PULM:TRIGger:EXTErnal:IMPedance G10K

// Configure the pulse generator settings
// Set pulse period, width, and delay
SOURce:PULM:PERiod 10 us
SOURce:PULM:WIDth 8 us
SOURce:PULM:DOUBle:WIDTh 0.0000012
SOURce:PULM:DOUBle:DELay 0.0000045

// Activate the signal output
SOURce:PGENERator:OUTPut:STATe 1
```


SOURce:PULM:STATe 1

OUTPut1:STATe 1

The following commands are available:

[SOURce<hw>]:PULM:MODE.....	1055
[SOURce<hw>]:PULM:TRIGger:MODE.....	1055
[SOURce<hw>]:PULM:PERiod.....	1056
[SOURce<hw>]:PULM:WIDTh.....	1056
[SOURce<hw>]:PULM:DELay.....	1056
[SOURce<hw>]:PULM:DOUBle:DELay.....	1056
[SOURce<hw>]:PULM:DOUBle:WIDTh.....	1057
[SOURce<hw>]:PULM:DOUBle:STATe.....	1057
[SOURce<hw>]:PULM:STATe.....	1057
[SOURce<hw>]:PULM:SOURce.....	1057
[SOURce<hw>]:PULM:TTYPe.....	1058
[SOURce<hw>]:PULM:OUTPut:VIDeo:POLarity.....	1058
[SOURce<hw>]:PULM:POLarity.....	1058
[SOURce<hw>]:PULM:IMPedance.....	1059
[SOURce<hw>]:PULM:TRIGger:EXternal:IMPedance.....	1059

[SOURce<hw>]:PULM:MODE <Mode>

Selects the mode for the pulse modulation.

Parameters:

<Mode>	SINGle DOUBle
	SINGle
	Generates a single pulse.
	DOUBle
	Generates two pulses within one pulse period.
*RST:	SINGle

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Pulse Mode"](#) on page 571

[SOURce<hw>]:PULM:TRIGger:MODE <Mode>

Selects a trigger mode - auto, external, external single or external gated - for generating the modulation signal.

Parameters:

<Mode>	AUTO EXTernal EGATe ESINGle
*RST:	AUTO

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Trigger Mode"](#) on page 571

[SOURce<hw>]:PULM:PERiod <Period>

Sets the period of the generated pulse, that means the repetition frequency of the internally generated modulation signal.

Parameters:

<Period> float
 The minimum value depends on the installed options
 R&S SMW-K22 or R&S SMW-K23
 Range: 20E-9 to 100
 Increment: 5E-9
 *RST: 10E-6

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Pulse Period"](#) on page 573

[SOURce<hw>]:PULM:WIDTH <Width>

Sets the width of the generated pulse, that means the pulse length. It must be at least 20ns less than the set pulse period.

Parameters:

<Width> float
 Range: 20E-9 to 100
 Increment: 10E-9
 *RST: 2E-6

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Pulse Width"](#) on page 573

[SOURce<hw>]:PULM:DELay <Delay>

Sets the pulse delay.

Parameters:

<Delay> float
 *RST: 1ms

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Pulse Delay"](#) on page 574

[SOURce<hw>]:PULM:DOUBLE:DELay <Delay>

Sets the delay from the start of the first pulse to the start of the second pulse.

Parameters:

<Delay> float
 *RST: 1E-6

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Double Pulse Delay"](#) on page 574

[:SOURce<hw>]:PULM:DOUBLE:WIDTH <Width>

Sets the width of the second pulse.

Parameters:

<Width> float
Increment: 5E-9

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Double Pulse Width"](#) on page 573

[:SOURce<hw>]:PULM:DOUBLE:STATe <State>

Provided for backward compatibility with former Rohde & Schwarz signal generators.

Works like the command [\[:SOURce<hw> \] :PULM:MODEDOUBLE](#).

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

[:SOURce<hw>]:PULM:STATe <State>

Activates pulse modulation.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["State"](#) on page 564

[:SOURce<hw>]:PULM:SOURce <Source>

Selects between the internal (pulse generator) or an external pulse signal for the modulation.

Parameters:

<Source> INTernal | EXTernal
*RST: INTernal

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Source"](#) on page 564

[[:SOURce<hw>]:PULM:TTYPe <Source>

Sets the transition mode for the pulse signal.

Parameters:

<Source> SMOothed | FAST

SMOothed

flattens the slew rate, resulting in longer rise/fall times.

FAST

enables fast transitions with shortest rise and fall times.

*RST: FAST

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Transition Type"](#) on page 564

[[:SOURce<hw>]:PULM:OUTPut:VIDeo:POLarity <Polarity>

Sets the polarity of the pulse video (modulating) signal, related to the RF (modulated) signal.

Parameters:

<Polarity> NORMal | INVerted

NORMal

the video signal follows the RF signal, that means it is high when RF signal is high and vice versa.

INVerted

the video signal follows in inverted mode.

*RST: NORMal

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Video Polarity"](#) on page 564

[[:SOURce<hw>]:PULM:POLarity <Polarity>

Sets the polarity of the externally applied modulation signal.

Parameters:

<Polarity> NORMal | INVerted

NORMal

Suppresses the RF signal during the pulse pause.

INVerted

Suppresses the RF signal during the pulse.

*RST: NORMal

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Polarity Pulse Input"](#) on page 564

[[:SOURce<hw>]:PULM:IMPedance <Impedance>

Sets the impedance for the external pulse modulation input.

Parameters:

<Impedance> G50 | G1K
 *RST: G1K

Example: See [Example"Perform pulse modulation"](#) on page 1054.

Manual operation: See ["Impedance Pulse Input"](#) on page 565

[[:SOURce<hw>]:PULM:TRIGger:EXTernal:IMPedance <Impedance>

Sets the impedance for the external pulse trigger.

Parameters:

<Impedance> G50 | G10K
 *RST: G50

Example: See [Example"Perform pulse modulation"](#) on page 1054.

14.19.4 SOURce:BB subsystem

This subsystem contains all commands for digital signal generation. It is divided into several subsystems which are described separately.

- [SOURce:BB subsystem general commands](#)..... 1059
- [SOURce:BB:DM subsystem](#)..... 1063
- [SOURce:BB:ARbitrary subsystem](#)..... 1095
- [SOURce1:BB:MCCW subsystem](#)..... 1150
- [SOURce:AWGN subsystem](#)..... 1170
- [SOURce:BB:IMPairment subsystem](#)..... 1179
- [SOURce:BB:GRAPhics subsystem](#)..... 1184
- [SOURce:BB:MEASurement subsystem](#)..... 1188
- [SOURce:BB:PROGress subsystem general commands](#)..... 1193

14.19.4.1 SOURce:BB subsystem general commands

The following section describes the commands for setting the frequency shift and the phase offset for the signal at the output of the "Baseband" and "BB Input" blocks.

Suffixes in the keywords ENTity<ch> and SOURce<hw>

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

Table 14-2: Value ranges of the suffixes ENTity<ch> and SOURce<hw> in advanced configuration with multiple entities

SCPI Syntax	ENTity<ch>	SOURce<hw>
SOURce<hw>:BB:...	-	1 to 8
ENTity<ch>:SOURce<hw>:BB:...	1 to 8	1 to 4



See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

The following commands are available:

[:SOURce<hw>]:BBIN:FOFFset	1060
[:SOURce<hw>]:BB:FOFFset	1060
[:SOURce<hw>]:BBIN:POFFset	1060
[:SOURce<hw>]:BB:POFFset	1061
[:SOURce<hw>]:BB:PGAin	1061
[:SOURce<hw>]:BBIN:PGAin	1061
[:SOURce<hw>]:BB:ROUTe	1061
[:SOURce<hw>]:BBIN:ROUTe	1061
[:SOURce<hw>]:BB:CODer:MODE	1062
[:SOURce<hw>]:BB:POWer:PEAK?	1062
[:SOURce<hw>]:BB:CFACTOR?	1062
[:SOURce<hw>]:BB:POWer:RMS?	1063

[\[:SOURce<hw>\]:BBIN:FOFFset <FOffset>](#)

[\[:SOURce<hw>\]:BB:FOFFset <FOffset>](#)

Sets a frequency offset for the internal/external baseband signal. The offset affects the generated baseband signal.

Parameters:

<FOffset> float
 Range: depends on the installed options
 Increment: 0.01
 *RST: 0
 Default unit: Hz
 E.g. -60 MHz to +60 MHz (R&S SMW-B10)

Example: SOURce1:BB:FOFFset 2MHZ

Options: BBIN:FOFFset requires R&S SMW-B10

Manual operation: See ["Frequency Offset"](#) on page 432

[\[:SOURce<hw>\]:BBIN:POFFset <POffset>](#)

Sets the relative phase offset for the external baseband signal.

Parameters:

<POffset> float
 Range: -999.99 to 999.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: SOURce1:BBIN:POFFset 0.5

Manual operation: See ["Phase Offset"](#) on page 432

[SOURce<hw>]:BB:POFFset <POffset>

Sets the relative phase offset for the selected baseband signal.

The latter applies for the other paths or the external baseband.

Parameters:

<POffset> float
 Range: 0 to 359.9
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: SOURce1:BB:POFFset 0.5DEG

Manual operation: See ["Phase Offset"](#) on page 432

[SOURce<hw>]:BB:PGAin <PGain>

[SOURce<hw>]:BBIN:PGAin <PGain>

Sets the relative gain for the internal or external baseband signal compared with the signals of the other baseband sources.

Parameters:

<PGain> float
 Range: -50 to 50
 Increment: 1E-3
 *RST: 0
 Default unit: dB

Example: BBIN:PGA 3dB
 Sets the relative gain of 3 dB for the external baseband signal.

Manual operation: See ["Gain"](#) on page 433

[SOURce<hw>]:BB:ROUTe <Route>

[SOURce<hw>]:BBIN:ROUTe <Route>

Selects the signal route for the internal/external baseband signal.

The internal and external signals are summed, if necessary.

Parameters:

<Route> A | B | AB

Example:

SOURce1:BBIN:ROUTE A

// the external baseband signal is added to path A

Options:

R&S SMW-B10

Manual operation: See ["Signal Routing"](#) on page 161**[[:SOURce<hw>]:BB:CODer:MODE <Mode>**

Defines the source of the baseband generator.

Parameters:

<Mode> CODer | BBIN

CODer

Internal baseband generator

BBIN

An external digital baseband signal provided at the digital interface

*RST: CODer

Example:

SOURce1:BB:CODer:MODE BBIN

[[:SOURce<hw>]:BB:POWER:PEAK?

Queries the peak level of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

Return values:

<Peak> float

Range: -145 to 30

Increment: 0.01

*RST: 0

Default unit: dBfs

Example:

BB:POW:PEAK

Queries the peak level of the baseband signal.

Usage:

Query only

[[:SOURce<hw>]:BB:CFACTOR?

Queries the crest factor of the baseband signal.

Return values:

<CFactor> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example:

SOURce1:BB:CFACTOR?
 Queries the crest factor of the baseband signal.

Usage:

Query only

[SOURce<hw>]:BB:POWER:RMS?

Queries the RMS level of the baseband signal relative to full scale of 0.5V (in terms of dB full scale).

Return values:

<Rms> float
 Range: -145 to 30
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example:

BB:POWER:RMS?
 Queries the rms level of the baseband signal.

Usage:

Query only

14.19.4.2 SOURce:BB:DM subsystem

This section lists the commands of the SOURce:BB:DM subsystem. The commands are divided into sections, where the last one describes how to use lists for digital modulation in remote control, and all other sections describe the configuration of the digital modulation.

Suffixes in the keywords ENTity<ch> and SOURce<hw>

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

Table 14-3: Value ranges of the suffixes ENTity<ch> and SOURce<hw> in advanced configuration with multiple entities

SCPI Syntax	ENTity<ch>	SOURce<hw>
SOURce<hw>:BB:...	-	1 to 4
ENTity<ch>:SOURce<hw>:BB:...	1 to 4	1 to 4



See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

Required options

See [Chapter 5.6.1, "Required options"](#), on page 277

The commands are grouped in the following sections:

• Programming examples	1064
• General commands	1066
• Save/recall commands	1070
• Filter commands	1072
• Modulation and coding commands	1074
• Power ramping	1077
• Trigger commands	1079
• Marker commands	1086
• Clock commands	1088
• Handling list files	1089

Programming examples

Example: Performing general tasks

This example shows how to enable custom digital modulation with predefined settings as basis for further customization (e.g. adjusting the data source); intermediate results and configuration are stored with the save/recall function.

```
// *****
// Reset instrument first
// *****

*RST; *CLS

SOURce1:BB:DM:PRESet
SOURce1:BB:DM:STANDARD W3GPP
SOURce1:BB:DM:SRate?
// 3840000
SOURce1:BB:DM:CODing?
// WCDMA
SOURce1:BB:DM:FORMat?
// QPSK45
SOURce1:BB:DM:STate ON
SOURce1:BB:DM:SETting:STORe "/var/user/ digMod/CustDM3GPP"

// *****
// Recall settings
// *****

MMEM:CDIR "/var/user/digMod"
SOURce1:BB:DM:SETting:CATalog?
// CusDigMod, cdm3gpp, CustDM3GPP
SOURce1:BB:DM:SETting:DELeTe "cdm3gpp"
SOURce1:BB:DM:SETting:LOAD "CusDigMod"

// *****
// Change the data source
// *****
```

```

SOURce1:BB:DM:SOURce?
// PRBS
SOURce1:BB:DM:PRBS:LENGth?
// 9
SOURce1:BB:DM:SOURce DLISt
// Set the default directory and query the existing data lists
MMEM:CDIR "/var/user/DLists"
SOURce1:BB:DM:DLISt:CATalog?
// "DList1","DList2"
// delete a list and create a new data list
SOURce1:BB:DM:DLISt:DELeTe "DList1"
SOURce1:BB:DM:DLISt:SELeCt "DList2"
// copy the content of an existing data list to the new data list
SOURce1:BB:DM:DLISt:COpy "DList3"
// query the content of the new data list and modify it (append data to it)
FORM ASCI
SOURce1:BB:DM:DLISt:DATA? 2048,1024
// 1,1,0,0,0, ...
SOURce1:BB:DM:DLISt:DATA:APPend 1,1,1,0,0,0,1,1,0,1...
SOURce1:BB:DM:DLISt:SELeCt "DList3"
// query the free memory and number of bits to be utilized
SOURce1:BB:DM:DLISt:FREE?
SOURce1:BB:DM:DLISt:POINts?

```

Example: Adjusting clock, marker and trigger settings

The following example lists the provided commands

```

// *****
// Clock settings
// *****
SOURce1:BB:DM:CLOCK:SOURce INTernal

// *****
// Configure and enable standard marker signals
// *****
SOURce1:BB:DM:TRIGger:OUTPut2:MODE PULSe
SOURce1:BB:DM:TRIGger:OUTPut2:PULSe:DIVider 5
SOURce1:BB:DM:TRIGger:OUTPut2:PULSe:FREQuency?
SOURce1:BB:DM:TRIGger:OUTPut3:MODE PATtern
SOURce1:BB:DM:TRIGger:OUTPut3:PATtern #HE0F52,20
SOURce1:BB:DM:TRIGger:OUTPut1:MODE RATio
SOURce1:BB:DM:TRIGger:OUTPut1:ONTime 40
SOURce1:BB:DM:TRIGger:OUTPut1:OFFTime 20

SOURce1:BB:DM:TRIGger:OUTPut2:DELaY 16

// *****
// Configure and enable signal generation
// *****
SOURce1:BB:DM:TRIGger:SEQuence SINGle
SOURce1:BB:DM:TRIGger:SLENGth 200

```

```
// the first 200 samples will be output after the next trigger event
SOURcel:BB:DM:TRIGger:SEQuence ARETrigger
SOURcel:BB:DM:TRIGger:SOURce EGT1
// external trigger signal must be provided at the connector
// configured for the external global trigger 1 signal
SOURcel:BB:DM:TRIGger:EXTErnal:SYNChronize:OUTPut ON
SOURcel:BB:DM:TRIGger:EXTErnal:DELaY 200
SOURcel:BB:DM:TRIGger:EXTErnal:INHibit 100

// with internal trigger source
SOURcel:BB:DM:TRIGger:SEQuence AAUTO
SOURcel:BB:DM:TRIGger:SOURce INTernal
SOURcel:BB:DM:STAT ON
SOURcel:BB:DM:TRIGger:EXEC

// SOURcel:BB:DM:TRIGger:SOURce INTB
// the internal trigger signal from the other path must be used
// SOURcel:BB:DM:TRIGger:OBASeband:DELaY 25
// SOURcel:BB:DM:TRIGger:OBASeband:INHibit 10
```

Example: Enable power ramping

The following example lists the provided commands

```
SOURcel:BB:DM:PRAMp:SOURce INTernal
SOURcel:BB:DM:PRAM:SHAP COS
SOURcel:BB:DM:PRAMp:TIME 5
SOURcel:BB:DM:PRAMp:RDELaY 0
SOURcel:BB:DM:PRAMp:FDELaY -1
SOURcel:BB:DM:PRAMp:ATTenuation 10
SOURcel:BB:DM:PRAMp:BBONLY:STATe ON
SOURcel:BB:DM:PRAMp:STATe ON
```

General commands

[SOURce<hw>]:BB:DM:STATe.....	1066
[SOURce<hw>]:BB:DM:PRESet.....	1067
[SOURce<hw>]:BB:DM:SRATe.....	1067
[SOURce<hw>]:BB:DM:STANdard.....	1067
[SOURce<hw>]:BB:DM:SOURce.....	1068
[SOURce<hw>]:BB:DM:PATTErn.....	1068
[SOURce<hw>]:BB:DM:PRBS[:LENGth].....	1068
[SOURce<hw>]:BB:DM:SMODulation:BORDEr.....	1069
[SOURce<hw>]:BB:DM:SMODulation:CDTDeviation.....	1069
[SOURce<hw>]:BB:DM:SMODulation:CLOCK:SLOPe:BIT.....	1069
[SOURce<hw>]:BB:DM:SMODulation:THROughput:DELaY?.....	1070
[SOURce<hw>]:BB:DM:SMODulation:RCVState?.....	1070

[SOURce<hw>]:BB:DM:STATe <State>

Enables/disables digital modulation. Switching on digital modulation turns off all the other digital standards in the same signal path.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Performing general tasks"](#) on page 1064

Manual operation: See ["State"](#) on page 279

[[:SOURce<hw>]:BB:DM:PRESet

Sets the default settings for digital modulation (*RST values specified for the commands).

Not affected is the state set with the command `SOURce<hw>:BB:DM:STaTe`

Example: See [Example"Performing general tasks"](#) on page 1064

Usage: Event

Manual operation: See ["Set To Default"](#) on page 279

[[:SOURce<hw>]:BB:DM:SRaTe <SRate>

Sets the symbol rate in Hz/kHz/MHz or sym/s, ksym/s and Msym/s.

Parameters:

<SRate> float
 Range: 50 to depends on the installed options
 Increment: 1E-3
 *RST: 270833.333
 Default unit: Hz or sym/s

Example: See [Example"Performing general tasks"](#) on page 1064

Manual operation: See ["Symbol Rate"](#) on page 280

[[:SOURce<hw>]:BB:DM:STANdard <Standard>

Selects predefined set of settings according to the selected standard, see [Table 5-12](#).

Parameters:

<Standard> USER | BLUetooth | DECT | ETC | GSM | GSMEdge | NADC |
 PDC | PHS | TETRa | W3GPp | TDSCdma | CFORward |
 CREVerse | WORLdspace | TFTS | APCOPH1C4fm |
 APCOPH1CQpsk | APCOPH2HCpm | APCOPH2HDQpsk |
 APCOPH2HD8PSKW | APCOPH2HD8PSKN | APCOPH1Lsm |
 APCOPH1Wcqpsk | CWBPsk | SOQPSKTG
 A query returns the value `USER` if settings deviate from standard-compliant settings.
 *RST: GSM

Example: See [Example"Performing general tasks"](#) on page 1064.

Options: GSM requires R&S SMW-B10.

Manual operation: See ["Set according to Standard"](#) on page 279

[:SOURce<hw>]:BB:DM:SOURce <Source>

Selects the data source.

Parameters:

<Source> ZERO | ONE | PRBS | PATtern | DLISt | SERial
A sequence of 0 or 1, a pseudo-random sequence with different length, a pattern, a data list, or external serial data.
*RST: PRBS

Example: See [Example"Performing general tasks"](#) on page 1064

Manual operation: See ["Data Source"](#) on page 282

[:SOURce<hw>]:BB:DM:PATtern <Pattern>, <BitCount>

Selects the data pattern for the internal data source.

Parameters:

<Pattern> numeric
*RST: #H0

<BitCount> integer
Range: 1 to 64
*RST: 1

Example: SOURce:BB:DM:SOURce PATT
SOURce:BB:DM:PATtern #B01110111010101010,17
Generates the user-defined sequence of 0/1 data.

Manual operation: See ["Data Source"](#) on page 282

[:SOURce<hw>]:BB:DM:PRBS[:LENGTH] <Length>

Defines the length of the pseudo-random sequence in accordance with the following equation:

$$\text{Length} = (2^{\text{Length}}) - 1$$

Parameters:

<Length> 9 | 11 | 15 | 16 | 20 | 21 | 23 | PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23
*RST: 9

Example: See [Example"Performing general tasks"](#) on page 1064

Manual operation: See ["Data Source"](#) on page 282

[[:SOURce<hw>]:BB:DM:SMODulation:BORDER <BitOrder>

Sets the bit order for processing extern serial data.

Parameters:

<BitOrder> LSBit | MSBit
 *RST: LSBit

Example:

```
SOURce1:INPut:TM1:DIRection INP
SOURce1:INPut:TM1:SIGNaL CLOCK
SOURce1:INPut:TM2:DIRection INP
SOURce1:INPut:TM2:SIGNaL DATA

SOURce1:BB:DM:SOURce SERIAL
SOURce1:BB:DM:SMODulation:BORDER LSBit
SOURce1:BB:DM:SMODulation:CDTDeviation?
SOURce1:BB:DM:SMODulation:CLOCK:SLOPe:BIT POSitive
SOURce1:BB:DM:SMODulation:THROUGHput:DELay?
SOURce1:BB:DM:SMODulation:RCVState?
// Response: OPERational
```

Manual operation: See ["Bit Order"](#) on page 285

[[:SOURce<hw>]:BB:DM:SMODulation:CDTDeviation <Deviation>

Queries the timing deviations (time offset) between the clock and the data signals.

Parameters:

<Deviation> float
 Range: -5E-3 to 5E-3
 Increment: 1E-12
 *RST: 0

Example: See [\[:SOURce<hw>\]:BB:DM:SMODulation:BORDER](#) on page 1069.

Manual operation: See ["Clock to Data Time Deviation"](#) on page 285

[[:SOURce<hw>]:BB:DM:SMODulation:CLOCK:SLOPe:BIT <Slope>

Sets the active edge of the bit clock.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example: See [\[:SOURce<hw>\]:BB:DM:SMODulation:BORDER](#) on page 1069

Options: R&S SMW-B10

Manual operation: See ["Bit Clock Slope"](#) on page 285

[:SOURce<hw>]:BB:DM:SMODulation:THRoughput:DELay?

Queries the throughput delay from the data input to the RF output in the case of external modulation.

Return values:

<Delay> integer
 Range: -100 to 100
 Increment: 250E-12
 *RST: 0

Example: See [\[:SOURce<hw>\]:BB:DM:SMODulation:BORDER](#) on page 1069.

Usage: Query only

Manual operation: See ["Throughput Delay"](#) on page 285

[:SOURce<hw>]:BB:DM:SMODulation:RCVState? <RcvState>

Queries the current state of the receiver of the external data.

Parameters:

<RcvState> OFF | OPERational | UFlow | OFLow
 *RST: OFF

Example: See [\[:SOURce<hw>\]:BB:DM:SMODulation:BORDER](#) on page 1069.

Usage: Query only

Manual operation: See ["Receiver State"](#) on page 284

Save/recall commands

[:SOURce<hw>]:BB:DM:STANdard:ULISt:CATalog?	1070
[:SOURce<hw>]:BB:DM:SETTing:CATalog?	1070
[:SOURce<hw>]:BB:DM:STANdard:ULISt:STORe	1071
[:SOURce<hw>]:BB:DM:SETTing:STORe	1071
[:SOURce<hw>]:BB:DM:STANdard:ULISt:LOAD	1071
[:SOURce<hw>]:BB:DM:SETTing:LOAD	1071
[:SOURce<hw>]:BB:DM:STANdard:ULISt:DELeTe	1071
[:SOURce<hw>]:BB:DM:SETTing:DELeTe	1071

[:SOURce<hw>]:BB:DM:STANdard:ULISt:CATalog?**[:SOURce<hw>]:BB:DM:SETTing:CATalog?**

Queries the files with digital modulation respectively user standard settings in the default directory. Listed are files with the file extension *.dm and *.dm_stu.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Return values:

<Catalog> "<filename1>,<filename2>,..."
Returns a string of file names separated by commas.

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Query only

Manual operation: See ["Save/Recall"](#) on page 279

[:SOURce<hw>]:BB:DM:STANdard:ULIST:STORE <Filename>

[:SOURce<hw>]:BB:DM:SETTing:STORE <Filename>

Stores the current settings into the selected file; the file extension (* .dm respectively * .dm_stu) is assigned automatically.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 279

[:SOURce<hw>]:BB:DM:STANdard:ULIST:LOAD <Filename>

[:SOURce<hw>]:BB:DM:SETTing:LOAD <Filename>

Loads the selected file from the default or the specified directory. Loaded are files with extension * .dm respectively * .dm_stu.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 279

[:SOURce<hw>]:BB:DM:STANdard:ULIST:DELeTe <Filename>

[:SOURce<hw>]:BB:DM:SETTing:DELeTe <Filename>

Deletes the selected file from the default or specified directory. Deleted are files with the file extension * .dm respectively * .dm_stu.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 279

Filter commands

[:SOURce<hw>]:BB:DM:FILTER:TYPE <Type>

Selects the filter type.

If you select a standard (:BB:DM:STAN), the firmware automatically sets the standard-compliant filter type and filter parameter.

Parameters:

<Type> RCOSine | COSine | GAUSSs | LGAuss | CONE | COF705 |
COEQUALizer | COFEQUALizer | C2K3x | APCO25 | SPHase |
RECTangle | USER | PGAuss | LPASs | DIRac | ENPSHape |
EWPSHape | LTEFilter | LPASSEVM | APCO25Hcpm |
APCO25Lsm | HRP | SOQPSK
*RST: GAUSSs

Example: See [\[:SOURce<hw>\]:BB:DM:FILTER:PARAMeter:SPHase](#) on page 1072.

Manual operation: See ["Filter"](#) on page 290

[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25 <Apco25>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25Lsm:GAUSSs <Gauss>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25Lsm:LOWPass <FiltParm>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:COSine:BANDwidth <Bandwidth>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:COSine[:ROLLoff] <Cosine>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:GAUSSs <Gauss>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:LPASs <LPass>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:LPASSEVM <LPassEvm>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:PGAuss <PGAuss>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:RCOSine <RCosine>
[:SOURce<hw>]:BB:DM:FILTER:PARAMeter:SPHase <SPHase>

Sets the filter parameter.

Filter Type	Parameter	Parameter Name	Min	Max	Increment	Default
APCO25	Roll-off factor	<Apco25>	0.05	0.99	0.01	0.2
APCO25Lsm	Cut off frequency for the lowpass/gauss filter (:LOWPass/:GAUSS)	<Cosine>	400	25E6	1E-3	270833.333
COSine	Bandwidth	<FiltParm>	400	depends on the installed options ^{*)}	1E-3	270833.333
COSine	Roll-off factor	<Cosine>	0.05	1	0.01	0.35
GAUSS	Roll-off factor	<Gauss>	0.15	100000	0.01	0.3
LPASS	Cut-off frequency	<LPass>	0.05	2	0.01	0.5
LPASSEVM	Cut-off frequency	<LPassEvm>	0.05	2	0.01	0.5
PGAuss	Roll-off factor	<PGAuss>	0.15	2.5	0.01	0.3
RCOSine	Roll-off factor	<RCosine>	0.05	1	0.001	0.35
SPHase	B x T	<SPHase>	0.15	2.5	0.01	2

^{*)}100E6 (R&S SMW-B10) / 600E6 (R&S SMW-B9)

Parameters:

<SPHase> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 2

Example:

SOURce:BB:DM:FILTER:TYPE SPHase
 SOURce:BB:DM:FILTER:PARAMeter:SPHase 0.5

Manual operation: See "Filter Parameter" on page 290

[:SOURce<hw>]:DM:FILTER:PARAMeter <Parameter>

Sets the filter parameter of the currently selected filter type.

To set the filter type, use command [:SOURce<hw>]:BB:DM:FILTER:TYPE on page 1072.

Parameters:

<Parameter> float
 Range: 0.05 to 2.5
 Increment: 0.01
 *RST: 0.35

Example:

See [:SOURce<hw>]:BB:DM:FILTER:PARAMeter:SPHase on page 1072

Modulation and coding commands

[:SOURce<hw>]:BB:DM:CODing <Coding>

Selects the modulation coding.

Parameters:

<Coding> OFF | DIFF | DPHS | DGRay | GRAY | GSM | NADC | PDC | PHS | TETRa | APCO25 | PWT | TFTS | INMarsat | VDL | EDGE | APCO25FSK | ICO | CDMA2000 | WCDMA | APCO258PSK

OFF

The coding is automatically disabled if the selected modulation type is not possible with the coding that has been set

DPHS

Phase Difference

DGRay

Difference + Gray

*RST: GSM

Example: See [Example"Performing general tasks"](#) on page 1064

Options: DPHS|GSM|INMarsat require R&S SMW-B10

Manual operation: See ["Coding"](#) on page 280

[:SOURce<hw>]:BB:DM:FORMat <Format>

Sets the modulation type.

When a standard is selected ([\[:SOURce<hw>\]:BB:DM:STANdard](#)), the modulation type is set to the default value.

Parameters:

<Format> ASK | BPSK | P2DBpsk | QPSK | QPSK45 | OQPSk | P4QPsk | P4DQpsk | PSK8 | P8D8psk | P8EDge | QAM16 | QAM32 | QAM64 | QAM256 | QAM1024 | MSK | FSK2 | FSK4 | USER | FSKVar | QAM128 | QEDGe | QAM16EDge | QAM32EDge | AQPSk | QAM4096 | APSK16 | APSK32 | FSK32 | FSK64 | FSK8 | FSK16 | QAM512 | QAM2048

*RST: MSK

Example: See [Example"Performing general tasks"](#) on page 1064

Manual operation: See ["Modulation Type"](#) on page 287

[:SOURce<hw>]:BB:DM:AQPSk:ANGLE <Angle>

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

Parameters:

<Angle> float
 Range: 0 to 180
 Increment: 0.01
 *RST: 0
 Default unit: Deg

Example:

BB:DM:FORM AQPS
 BB:DM:AQPS:ANGL 45

Manual operation: See ["Angle Alpha"](#) on page 288

[[:SOURce<hw>]:BB:DM:ASK:DEPT<Depth>

Sets the ASK modulation depth for modulation type ASK.

Parameters:

<Depth> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100
 Default unit: PCT

Example:

BB:DM:FORM ASK
 BB:DM:ASK:DEPT 50 PCT

Manual operation: See ["ASK Depth"](#) on page 288

[[:SOURce<hw>]:BB:DM:FSK:DEVIation <Deviation>

Sets the frequency deviation when FSK modulation is selected.

Parameters:

<Deviation> float
 The value range depends on the symbol rate.
 Range: 1 to 40E6
 Increment: 0.5
 *RST: 135416.5

Example:

SOURce:BB:DM:FORMat FSK4
 SOURce:BB:DM:FSK:DEVIation 1MHZ

Manual operation: See ["FSK Deviation"](#) on page 288

[[:SOURce<hw>]:BB:DM:FSK:VARiable:SYMBol<ch0>:DEVIation <Deviation>

Sets the deviation of the selected symbol for variable FSK modulation mode.

Parameters:

<Deviation>

float

The value range depends on the selected symbol rate (see data sheet).

Range: -40E6 to 40E6

Increment: 0.5

Default unit: Hz

Example:

SOURce:BB:DM:FORMat FSKVar

SOURce:BB:DM:FSK:VARiable:TYPE FSK4

SOURce:BB:DM:FSK:VARiable:SYMBOL0:DEVIation 135000

Manual operation: See ["Deviation xxxx"](#) on page 288**[:SOURce<hw>]:BB:DM:FSK:VARiable:TYPE <Type>**

The command selects the modulation type for Variable FSK.

Parameters:

<Type>

FSK4 | FSK8 | FSK16

*RST: FSK4

Example:

See [\[:SOURce<hw>\]:BB:DM:FSK:VARiable:SYMBOL<ch0>:DEVIation](#) on page 1075

Manual operation: See ["FSK Type"](#) on page 288**[:SOURce<hw>]:BB:DM:APSK16:GAMMa <Gamma>**

Sets the gamma function γ for the 16APSK modulation.

Parameters:

<Gamma>

G2D3 | G3D4 | G4D5 | G5D6 | G8D9 | G9D10

GxDy: G = Gamma function, x_y = code rate

*RST: G2D3

Example:

SOURce1:BB:DM:FORMat APSK16

SOURce1:BB:DM:APSK16:GAMMa G9D10

Manual operation: See ["Gamma/Gamma 1"](#) on page 289**[:SOURce<hw>]:BB:DM:APSK32:GAMMa <Gamma>**

Sets the gamma function γ for the 32APSK modulation.

Parameters:

<Gamma>

G3D4 | G4D5 | G5D6 | G8D9 | G9D10

GxDy: G = Gamma function, x_y = code rate

*RST: G3D4

Example: SOURce1:BB:DM:FORMat APSK32
SOURce1:BB:DM:APSK32:GAMMa G9D10

Manual operation: See ["Gamma/Gamma 1"](#) on page 289

[SOURce<hw>]:BB:DM:SWITching:STATe <State>

Enables switching between a modulated and an unmodulated signal.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: SCONfiguration:MODE ADV
SCONfiguration:APPLy
SOURce1:BB:DM:SWITching:STATe ON

Manual operation: See ["State Modulation CW Switching"](#) on page 289

Power ramping

[:SOURce<hw>]:BB:DM:PRAMp:SOURce	1077
[:SOURce<hw>]:BB:DM:PRAMp:SHAPE	1077
[:SOURce<hw>]:BB:DM:PRAMp:TIME	1078
[:SOURce<hw>]:BB:DM:PRAMp:FDElay	1078
[:SOURce<hw>]:BB:DM:PRAMp:RDElay	1078
[:SOURce<hw>]:BB:DM:PRAMp:ATTenuation	1078
[:SOURce<hw>]:BB:DM:PRAMp:BBONLY[:STATe]	1079
[:SOURce<hw>]:BB:DM:PRAMp[:STATe]	1079

[SOURce<hw>]:BB:DM:PRAMp:SOURce <Source>

Sets the source for the power ramp control signals.

Parameters:

<Source> INTernal
*RST: INTernal

Example: See [Example"Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["Source"](#) on page 293

[SOURce<hw>]:BB:DM:PRAMp:SHAPE <Shape>

Sets the edge shape of the ramp envelope.

Parameters:

<Shape> LINear | COSine
*RST: COSine

Example: See [Example"Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["Ramp Function"](#) on page 293

[[:SOURce<hw>]:BB:DM:PRAMP:TIME <Time>

Sets the power ramping rise time and fall time for a burst.

Parameters:

<Time> float
 Range: 0.25 to 16
 Increment: 0.01
 *RST: 1
 Default unit: symbol

Example: See [Example"Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["Ramp Time"](#) on page 293

[[:SOURce<hw>]:BB:DM:PRAMP:FDElay <FDElay>

[[:SOURce<hw>]:BB:DM:PRAMP:RDElay <RDElay>

Sets the delay in the rising edge.

Parameters:

<RDElay> float
 Range: 0 to 4
 Increment: 0.01
 *RST: 0
 Default unit: symbol

Example: See [Example"Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["Rise Delay"](#) on page 293

[[:SOURce<hw>]:BB:DM:PRAMP:ATTenuation <Attenuation>

Sets the level attenuation for signal ranges that are flagged with level attribute *attenuated* by the control signal.

Parameters:

<Attenuation> float
 Range: 0 to 50
 Increment: 0.1
 *RST: 15
 Default unit: dB

Example: See [Example"Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["Attenuation"](#) on page 294

[[:SOURce<hw>]:BB:DM:PRAMP:BBONLY[:STATe] <State>

Enables power ramping in the baseband only or mixed power ramping in the baseband and the RF section.

The ON setting is mandatory if, with power ramping active, only the baseband signal is output (I/Q outputs).

In case of two-path instruments, the ON setting is also mandatory if a baseband signal is applied to both paths.

Only then can a signal with a defined, predictable level be output.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Enable power ramping"](#) on page 1066.

Options: R&S SMW-B10

Manual operation: See ["In Baseband Only"](#) on page 294

[[:SOURce<hw>]:BB:DM:PRAMP[:STATe] <State>

Enables or disables power ramping.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Enable power ramping"](#) on page 1066

Options: R&S SMW-B10

Manual operation: See ["State"](#) on page 293

Trigger commands

[:SOURce<hw>]:BB:DM[:TRIGger]:SEQuence	1080
[:SOURce<hw>]:BB:DM:TRIGger:SOURce	1080
[:SOURce<hw>]:BB:DM:TRIGger:SLENgth	1081
[:SOURce<hw>]:BB:DM:TRIGger:RMODE?	1081
[:SOURce<hw>]:BB:DM:TRIGger:TIME:DATE	1081
[:SOURce<hw>]:BB:DM:TRIGger:TIME:TIME	1082
[:SOURce<hw>]:BB:DM:TRIGger:TIME[:STATe]	1082
[:SOURce<hw>]:BB:DM:TRIGger:EXTErnal:SYNChronize:OUTPut	1083
[:SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute	1083
[:SOURce<hw>]:BB:DM:TRIGger:EXECute	1083
[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:DELaY	1083
[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:RDELaY?	1084
[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:TDELaY	1084

[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:INHibit.....	1084
[:SOURce<hw>]:BB:DM:TRIGger:DELay:UNIT.....	1084
[:SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:DELay.....	1085
[:SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:TDELay.....	1085
[:SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:RDELay?.....	1086
[:SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:INHibit.....	1086

[:SOURce<hw>]:BB:DM[:TRIGger]:SEQUence <Sequence>

Selects the trigger mode. For detailed description of the trigger modes, refer to ["Impact of the trigger modes on the signal generation"](#) on page 247.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETRigger | SINGLE
 *RST: AUTO

Example: See [Example"Adjusting clock, marker and trigger settings"](#)
 on page 1065

Manual operation: See ["Mode"](#) on page 263

[:SOURce<hw>]:BB:DM:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTeRnal)
- External trigger signal via one of the local or global connectors
 - EGT1 | EGT2: External global trigger
 - EGC1 | EGC2: External global clock
 - ELTRigger: External local trigger
 - ELClock: External local clock
- Internal triggering by a signal from the other basebands (INTA | INTB)
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- OBASeband | BEXTeRnal | EXTeRnal: Setting only
 Provided only for backward compatibility with other Rohde & Schwarz signal generators.
 The R&S SMW accepts these values and maps them automatically as follows:
 EXTeRnal = EGT1, BEXTeRnal = EGT2, OBASeband = INTA or INTB
 (depending on the current baseband)

Parameters:

<Source> INTB|INTeRnal|OBASeband|EGT1|EGT2|EGC1|EGC2|ELTRig-
 ger|INTA|ELClock|BEXTeRnal|EXTeRnal | BBSY
 *RST: INTeRnal

Example: See [Example"Adjusting clock, marker and trigger settings"](#)
 on page 1065

Options: ELTRigger|ELCLock require R&S SMW-B10
BBSY require R&S SMW-B9

Manual operation: See ["Source"](#) on page 265

[SOURce<hw>]:BB:DM:TRIGger:SLENgth <SLength>

Defines the length of the signal sequence to be output in the SINGLE trigger mode.

Parameters:

<SLength> integer
Range: 1 to 4294967295
*RST: 1000
Default unit: symbol

Example: See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["Signal Duration"](#) on page 267

[SOURce<hw>]:BB:DM:TRIGger:RMODe?

Queries the status of signal generation.

Return values:

<RMode> STOP | RUN

Example: SOURce1:BB:DM:TRIGger:SOURce ELTRigger
SOURce1:BB:DM:TRIGger:SEQuence ARETrigger
SOURce1:BB:DM:TRIGger:RMODe?
Response: RUN

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 263

[SOURce<hw>]:BB:DM:TRIGger:TIME:DATE <Year>, <Month>, <Day>

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Year> integer
Range: 1980 to 9999

<Month> integer
Range: 1 to 12

<Day> integer
Range: 1 to 31

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[SOURce<hw>]:BB:DM:TRIGger:TIME:TIME <Hour>, <Minute>, <Second>

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Hour> integer
Range: 0 to 23

<Minute> integer
Range: 0 to 59

<Second> integer
Range: 0 to 59

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[SOURce<hw>]:BB:DM:TRIGger:TIME[:STATe] <TimeTrigState>

Activates time-based triggering with a fixed time reference. If activated, the R&S SMW triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<TimeTrigState> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Time Based Trigger"](#) on page 264

[SOURce<hw>]:BB:DM:TRIGger:EXTErnal:SYNChronize:OUTPut <Output>

Enables signal output synchronous to the trigger event.

Parameters:

<Output> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 265

[SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute

Stops signal generation; a subsequent internal or external trigger event restart signal generation.

Example: See also [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Usage: Event

Manual operation: See ["Arm"](#) on page 264

[SOURce<hw>]:BB:DM:TRIGger:EXECute

Executes a trigger.

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 264

[SOURce<hw>]:BB:DM:TRIGger:OBASeband:DELay <Delay>

Specifies the trigger delay (expressed as a number of symbols) for triggering by the trigger signal from the other path.

Parameters:

<Delay> float
 Range: 0 to 2147483647
 Increment: 0.01
 *RST: 0

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:RDElay?

Queries the time a trigger event from the other path is delayed.

Return values:

<ObResTimeDelSec> float

Range: 0 to 688

Increment: 0.25E-9

*RST: 0

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Usage: Query only

Manual operation: See ["Actual Trigger Delay/Actual External Delay"](#) on page 267

[[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:TDElay <ObasTimeDelay>

Specifies the trigger delay for triggering by the signal from the other path.

Parameters:

<ObasTimeDelay> float

Range: 0 to 7929.170398682

Increment: 250E-12

*RST: 0

Default unit: s

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099.

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:DM:TRIGger:OBASeband:INHibit <Inhibit>

Specifies the number of symbols by which a restart is inhibited. This command applies only for triggering by the second path.

Parameters:

<Inhibit> integer

Range: 0 to 67108863

*RST: 0

Default unit: symbol

Example: See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

[[:SOURce<hw>]:BB:DM:TRIGger:DElay:UNIT <TrigDelUnit>

Determines the units the trigger delay is expressed in.

Parameters:

<TrigDelUnit> SAMPlE | TIME
 *RST: SAMPlE

Example: See [Example](#) "To specify delay and inhibit values in time units" on page 1099

Manual operation: See ["\(External\) Delay Unit"](#) on page 266

[:SOURce<hw>]:BB:DM:TRIGger[:EXTErnal]:DELay <Delay>

Specifies the trigger delay in symbols.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Delay> float
 Range: 0 to depends on the symbol rate
 Increment: 0.01
 *RST: 0
 Default unit: symbol
 E.g. 0 to 2147483647 symbols (R&S SMW-B10)

Example: See [Example](#) "Adjusting clock, marker and trigger settings" on page 1065.

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[:SOURce<hw>]:BB:DM:TRIGger[:EXTErnal]:TDELay <ExtTimeDelay>

Specifies the trigger delay for external triggering. The value affects all external trigger signals.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<ExtTimeDelay> float
 Range: 0 to 7929.170398682
 Increment: 0.25E-9
 *RST: 0
 Default unit: s

Example: See [Example](#) "To specify delay and inhibit values in time units" on page 1099.

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:RDELay?

Queries the time (in seconds) an external trigger event is delayed for.

Return values:

<ResTimeDelaySec> float

Range: 0 to 688

Increment: 0.25E-9

*RST: 0

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Usage: Query only

Manual operation: See ["Actual Trigger Delay/Actual External Delay"](#) on page 267

[[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:INHibit <Inhibit>

Specifies the number of symbols, by which a restart is inhibited.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Inhibit> integer

Range: 0 to 21.47 * (symbol rate)

*RST: 0

Default unit: symbol

E.g. 0 to 2147483647 symbols (R&S SMW-B10)

Example: See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065.

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

Marker commands

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE	1086
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime	1087
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime	1087
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATtern	1087
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider	1088
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?	1088
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay	1088

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

For detailed description of the regular marker modes, refer to ["Marker modes"](#) on page 242.

Parameters:

<Mode> CLISt | PULSe | PATtern | RATio

CLISt

A marker signal that is defined in the selected control list is generated.

*RST: RATio

Example:

See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime <OnTime>

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of symbols in a period (ON time + OFF time) for marker RATio.

*) If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<OffTime> integer

Range: 1 (R&S SMW-B10) / 1* (R&S SMW-B9) to 16777215

*RST: 1

Default unit: symbol

Example:

See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATtern <Pattern>, <BitCount>

Defines the bit pattern used to generate the marker signal.

Parameters:

<Pattern> numeric

*RST: #H2

<BitCount>

integer

0 = marker off, 1 = marker on

Range: 1 to 64

*RST: 2

Example:

See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065.

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

Sets the divider for pulse marker mode (PULSe).

*) If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<Divider> integer
 Range: 2 (R&S SMW-B10) / 2* (R&S SMW-B9) to 1024
 *RST: 2

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?

Queries the pulse frequency of the pulsed marker signal PULSe.

Return values:

<Frequency> float

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065

Usage: Query only

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signal, expressed in terms of symbols.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 0.001
 *RST: 0

Example: See [Example"Adjusting clock, marker and trigger settings"](#) on page 1065.

Manual operation: See ["Delay"](#) on page 269

Clock commands

[\[:SOURce<hw>\]:BB:DM:CLOCK:MODE.....](#) 1089
[\[:SOURce<hw>\]:BB:DM:CLOCK:SOURce.....](#) 1089

[[:SOURce<hw>]:BB:DM:CLOCK:MODE <Mode>

Sets the type of externally supplied clock.

Parameters:

<Mode> SYMBol
 *RST: SYMBol

Example: See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065.

Options: R&S SMW-B10

Manual operation: See ["Clock Mode"](#) on page 270

[[:SOURce<hw>]:BB:DM:CLOCK:SOURce <Source>

Selects the clock source:

- INTernal: Internal clock reference
- ELClock: External local clock
- EXTernal = ELClock: Setting only
 Provided for backward compatibility with other Rohde & Schwarz signal generators

Parameters:

<Source> INTernal|ELClock|EXTernal
 *RST: INTernal

Example: See [Example "Adjusting clock, marker and trigger settings"](#) on page 1065.

Options: ELClock requires R&S SMW-B10

Manual operation: See ["Clock Source"](#) on page 270

Handling list files

[[:SOURce<hw>]:BB:DM:CLIST:CATalog?

[[:SOURce<hw>]:BB:DM:FLIST:CATalog?

[[:SOURce<hw>]:BB:DM:MLIST:CATalog?

[[:SOURce<hw>]:BB:DM:DLIST:CATalog?

Reads out the list files present in the default directory (see [:MMEMory:CDIRectory](#)).

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Return values:

<Catalog> "<filename1>,<filename2>,..."
Returns a string of file names separated by commas.

Example: See [Example "Performing general tasks"](#) on page 1064.

Usage: Query only

Manual operation: See ["Data Source"](#) on page 282
See ["Select Data List"](#) on page 283
See ["Directory, File List and Filename"](#) on page 711

```
[ :SOURce<hw>]:BB:DM:CLIST:SElect <Filename>
[:SOURce<hw>]:BB:DM:FLIST:SElect <Filename>
[:SOURce<hw>]:BB:DM:MLIST:SElect <Filename>
[:SOURce<hw>]:BB:DM:DLIST:SElect <Select>
```

Selects the specified list file from the default directory (see [:MMEMory:CDIRectory](#)) or in the directory specified with the complete file path.

If a list with the specified name does not yet exist, it is created. The file extension can be omitted.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User standard	...:ULIST...	*.dm_stu
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

Parameters:

<Select> <list name>

Example: See [Example "Performing general tasks"](#) on page 1064

Manual operation: See ["Data Source"](#) on page 282
See ["Select Data List"](#) on page 283
See ["Functions for handling of data lists"](#) on page 718

```
[ :SOURce<hw>]:BB:DM:CLIST:DElete <Filename>
[:SOURce<hw>]:BB:DM:FLIST:DElete <Filename>
```

[:SOURce<hw>]:BB:DM:MLIST:DELeTe <Filename>

[:SOURce<hw>]:BB:DM:DLIST:DELeTe <Filename>

Deletes the specified list from the default directory (see [:MMEMory:CDIRectory](#)) or from the directory specified with the complete file path.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User standard	...:ULIST...	*.dm_stu
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

Manual operation: See ["Select Data List"](#) on page 283

[:SOURce<hw>]:BB:DM:CLIST:FREE?

[:SOURce<hw>]:BB:DM:FLIST:FREE?

[:SOURce<hw>]:BB:DM:MLIST:FREE?

[:SOURce<hw>]:BB:DM:DLIST:FREE?

Queries the list free memory.

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

Return values:

<Free> integer

Range: 0 to INT_MAX

*RST: 0

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Query only

[SOURce<hw>]:BB:DM:CLIST:POINTS?

Queries the number of lines (2 bytes) in the currently selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

```
SOURce:BB:DM:CLIST:SElect "c_list"
SOURce:BB:DM:CLIST:POINTS?
// 20
// the control list consists of 20 lines
```

Usage: Query only

Options: R&S SMW-B10

[SOURce<hw>]:BB:DM:DLIST:POINTS <Points>

Defines the number of bits in the selected data list to be utilized. When a list is being filled with block data, this data is only ever sent in multiples of 8 bits. However the exact number of bits to be exploited can be set to a different figure. The superfluous bits in the list are then ignored.

Parameters:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

```
SOURce:BB:DM:DLIST:POINTS 234
Defines the number of bits in the data list to be utilized as 234
bits. If the list was filled with block data, at least the last 6 bits
are ignored.
```

[SOURce<hw>]:BB:DM:FLIST:POINTS?**[SOURce<hw>]:BB:DM:MLIST:POINTS?**

Queries the user modulation mapping/user filter list length.

Return values:

<Points> integer
 Range: max
 *RST: 0

Example:

```
BB:DM:FORM USER
BB:DM:MLIS:POIN?
```

Usage: Query only

[[:SOURce<hw>]:BB:DM:CLIST:COPY <Filename>

[[:SOURce<hw>]:BB:DM:DLIST:COPY <Filename>

Copies the selected data list (*.dm_iqd)/ control list (*.dm_iqc) as a new list with name specified by <Filename>. If a list with the specified name exists, it is overwritten. If it does not yet exist, it is created.

The source file has to be available in the default directory (see :MMEMory:CDIRectory).

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and a specific directory.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

Manual operation: See ["Select Data List"](#) on page 283

[[:SOURce<hw>]:BB:DM:CLIST:DATA <Data>

Sends the data to the currently selected control list. If the list already contains data, it is *overwritten*. This command only writes data into the data section of the file.

The values for the control signals are sent, arranged in an 8-bit value as defined in [Table 14-4](#).

Table 14-4: Contents of a control lists

Signal	Order	Decimal value of bits
Marker 1	LSB	1
Marker 2		2
Marker 3		4
Burst	LSB	16
LevAtt1	LSB	32
CWMod	LSB	64
Hop	MSB	128

The data can also be sent as a binary block, each binary block being a 2-byte value in which the 16 bits represent the binary values (16-bit unsigned integer, 2 bytes, LSB first).

When binary data transmission is in use, use the command :SYSTem:COMMunicate:GPIB:LTERminator EOI to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command ...LTER STAN resets the mode.

According to the specifications, the byte sequence is defined as 'most significant byte first'.

Tip: Control lists are created in binary format. You may however need the control list in an ASCII format, e.g for creating a waveform file with R&S WinIQSIM2. Refer to the examples in [Chapter 5.7.4.7, "Creating control lists with tag file format"](#), on page 344 for description on how to create a control list file in ASCII format manually.

*RST has no effect on data lists.

Setting parameters:

<Data> string

Example:

```
:MMEMory:CDirectory "/var/user/clists"
:SOURce1:BB:DM:CLIST:SElect "clist_marker3"
:SOURce1:BB:DM:CLIST:DATA 0,0,0,0,4,4,4,0,0,0,0...
// Enters the control values in the selected list.
// In the example, only ramps for Marker 3 are set.
```

Usage: Setting only

Options: R&S SMW-B10

Manual operation: See ["Select Ramp to Edit"](#) on page 298

[:SOURce<hw>]:BB:DM:DLIST:DATA <Data>

[:SOURce<hw>]:BB:DM:DLIST:DATA? [<Start>[, <Count>]]

The **Setting** command sends the bit data to the selected data list. Any existing content in the list is *overwritten*. This command only writes data into the data section of the file.

Data can be sent as block data in binary or packet format (:FORMat ASCii | PACKed), each byte being interpreted as 8 data bits.

When binary data transmission is in use, use the command :SYSTem:COMMunicate:GPIB:LTERminator EOI to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command ...LTER STAN resets the mode.

According to the specifications, the byte sequence is defined as 'most significant byte first'.

The **query** reads out the data part of the list file. If the query is expanded by using the two parameters <Start> and <Count>, the list is read out in smaller sections. Without the parameters the total length is always read out starting from address 1.

*RST has no effect on data lists.

Parameters:

<Data> integer
bit data

Query parameters:

<Start>	integer
	Range: 1 to 2147483647
<Count>	integer
	Range: 1 to 2147483647

Example: See [Example "Performing general tasks"](#) on page 1064

[:SOURce<hw>]:BB:DM:DLIST:DATA:APPend <Bits>

Appends the bit data onto the end of the existing data in the selected data list. Existing content in the data list is not overwritten. Hence, you can create long data lists piece-meal.

The command cannot be used with an empty data list, like for example data lists that has just been created. Use the command `[:SOURce<hw>]:BB:DM:DLIST:DATA` first and enter modulation data in the list.

*RST has no effect on data lists.

Setting parameters:

<Bits> 0 | 1 {0 | 1} | block data

Example: See [Example "Performing general tasks"](#) on page 1064

Usage: Setting only

[:SOURce<hw>]:BB:DM:CLIST:TAG?**[:SOURce<hw>]:BB:DM:DLIST:TAG?**

Queries the content of the specified tag in the selected file.

Return values:

<Tag> <control list>,<tag name>
Refer to [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347 for description of the available tag formats.

Example: `SOURce1:BB:DM:DLIST:TAG? "D_list","date"`
Queries the Date tag in list D_list.

Usage: Query only

14.19.4.3 SOURce:BB:ARbitrary subsystem

This section list the commands of the SOURce:BB:ARbitrary subsystem.

Suffixes in the keywords ENTity<ch> and SOURce<hw>

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

Table 14-5: Suffix ranges for ENTity<ch> and SOURce<hw> with multiple entities

SCPI syntax	ENTity<ch>	SOURce<hw>
SOURce<hw>:BB:...	-	1 to 8
ENTity<ch>:SOURce<hw>:BB:...	1	1 to 8
	2 to 4	1 to 4

See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

Required options

See [Chapter 5.7.1, "Required options"](#), on page 315.

The commands are grouped in the following sections:

• Programming examples	1096
• General commands	1105
• Test signal commands	1106
• Waveform commands	1110
• Multi-segment commands	1115
• Multi-segment sequencing commands	1120
• Multicarrier commands	1123
• Notch filter commands	1135
• Trigger commands	1139
• Marker commands	1147
• Clock commands	1150

Programming examples

Example: Creating test signals

The following example lists commands necessary to configure the different test signals.

```
// *****
// Reset instrument first
// *****
*RST; *CLS
SOURce1:BB:ARbitrary:PRESet

// *****
// Create test signals
// *****
SOURce1:BB:ARbitrary:SIGNAL:TYPE CIQ
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:I -0.5
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:Q -0.33
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:CREate

SOURce1:BB:ARbitrary:TSIGNAL:SINE:FREQuency 1MHz
SOURce1:BB:ARbitrary:TSIGNAL:SINE:SAMPLEs 100
```

```

SOURcel:BB:ARbitrary:TSIGnal:SINE:PHASe -90
SOURcel:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed "/var/user/ARBtestSignals/sineTest"

SOURcel:BB:ARbitrary:TSIGnal:RECTangle:FREQuency 100KHz
SOURcel:BB:ARbitrary:TSIGnal:RECTangle:SAMPles 1000
SOURcel:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude 0.5
SOURcel:BB:ARbitrary:TSIGnal:RECTangle:OFFSet -0.3
SOURcel:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed "/var/user/ARBtestSignals/rectTest"

SOURcel:BB:ARbitrary:STATe ON

```

Example: Managing waveform files

The following example lists the commands provided for handling of waveform files.

```

// *****
// Reset instrument first
// *****
*RST; *CLS
SOURcel:BB:ARbitrary:PRESet

// *****
// Set the default directory and list the available waveform files
// *****
MME:CDIR "/var/user/ARBtestSigs"
SOURcel:BB:ARbitrary:WAVEform:CATalog?
// sineTest,rectTest,ciqTestSignal,waveformTest,test2
SOURcel:BB:ARbitrary:WAVEform:CATalog:LENGth?
// Response is the number of files: "5"
// Optionally query free disk space.
SOURcel:BB:ARbitrary:WAVEform:FREE?

// *****
// Select a waveform and query information
// *****
SOURcel:BB:ARbitrary:WAVEform:DELeTe "/var/user/ARBtestSigs/test2"
SOURcel:BB:ARbitrary:WAVEform:SELeCt "/var/user/ARBtestSigs/wvTest"
SOURcel:BB:ARbitrary:WAVEform:POINts?
// 100
SOURcel:BB:ARbitrary:WAVEform:TAG? "TYPE"
// "SMU-WV"
SOURcel:BB:ARbitrary:WAVEform:TAG? "COMMENT"
// "Waveform for test purposes"
// alternatively: query the comment tag of the current waveform file
SOURcel:BB:ARbitrary:WAVEform:DATA?
// Response is the comment: "Waveform for test purposes"
// Query the date tag of a specific waveform file.
SOURcel:BB:ARbitrary:WAVEform:DATA? "/var/user/ARBtestSigs/waveformTest","date"
// Response: #2192014-04-15;16:19:30

// *****
// Clock settings

```

```

// *****
SOURcel:BB:ARbitrary:CLOCK:SOURce Internal
SOURcel:BB:ARbitrary:CLOCK?
// Response in Hz: "100000000"
// Or alternatively use the following tag:
SOURcel:BB:ARbitrary:WAVEform:TAG? "CLOCK"

// *****
// Configure and enable standard marker signals
// *****
// Configure marker 1.
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:MODE REStart
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:MODE RATio
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:ONTime 40
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:OFFTime 20
// Configure marker 2.
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:MODE PULSe
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PULSe:DIVider 5
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PULSe:FREQuency?
// Response in Hz: "20000000"
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:DELay 16
// Specify a pattern for marker 2.
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:MODE PATtern
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PATtern #HE0F52,20

// *****
// Configure and enable signal triggering
// *****
SOURcel:BB:ARbitrary:TRIGger:SEQuence SINGLE
SOURcel:BB:ARbitrary:TRIGger:SLENgth 200
// the first 200 samples of the current waveform will be output after
// the next trigger event
// SOURcel:BB:ARbitrary:TRIGger:SEQuence ARETrigger
// SOURcel:BB:ARbitrary:TRIGger:SOURce EGT1
// external trigger signal must be provided at the USER connector
SOURcel:BB:ARbitrary:TRIGger:EXTErnal:SYNChronize:OUTPut ON
SOURcel:BB:ARbitrary:TRIGger:EXTErnal:DELay 200
SOURcel:BB:ARbitrary:TRIGger:EXTErnal:INHibit 100
// with internal trigger source
SOURcel:BB:ARbitrary:TRIGger:SEQuence AAUTo
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STAT ON
SOURcel:BB:ARbitrary:TRIGger:EXEC

SOURcel:BB:ARbitrary:TRIGger:SOURce INTB
// the internal trigger signal from the other path must be used
SOURcel:BB:ARbitrary:TRIGger:OBASeband:DELay 25
SOURcel:BB:ARbitrary:TRIGger:OBASeband:INHibit 10

```

Example: To specify delay and inhibit values in time units

The following example lists the commands necessary to configure the instrument as described in ["Specifying delay and inhibit values"](#) on page 252.

```
SOURcel:BB:ARbitrary:CLOCK 1000000
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUT
SOURcel:BB:ARbitrary:TRIGger:SOURce EGT1
SOURcel:BB:ARbitrary:TRIGger:DElay:UNIT SAMP
SOURcel:BB:ARbitrary:TRIGger:EXternal:DElay 100
SOURcel:BB:ARbitrary:TRIGger:EXternal:RDElay?
// Response: 100
SOURcel:BB:ARbitrary:TRIGger:DElay:UNIT TIME
SOURcel:BB:ARbitrary:TRIGger:EXternal:TDElay 0.00001
SOURcel:BB:ARbitrary:TRIGger:EXternal:RDElay?
// Response: 0.00001
SOURcel:BB:ARbitrary:TRIGger:DElay:UNIT SAMP
SOURcel:BB:ARbitrary:TRIGger:EXternal:DElay 10
```

Example: Creating a multi-segment waveform

The following example lists the commands necessary to create a multi-segment waveform.

```
// *****
// Reset instrument first
// *****
*RST; *CLS
// SOURcel:BB:ARbitrary:PRESet

// *****
// Set the default directory and list the available waveform files
// *****
MMEM:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARbitrary:WAVEform:CATalog:LENGth?
// 4
SOURcel:BB:ARbitrary:WAVEform:CATalog?
// Seg_0, Seg_1, Seg_2, Seg_3
// *****
// List the available configuration files and select/create file
// *****
SOURcel:BB:ARbitrary:WSEGment:CONFigure:CATalog?
// multi_segment,ms_waveform
// the directory contains the configuration files multi_segment.inf_mswv
// and ms_waveform.inf_mswv
SOURcel:BB:ARbitrary:WSEGment:CONFigure:DElete "ms_waveform.inf_mswv"
SOURcel:BB:ARbitrary:WSEGment:CONFigure:SElect
"/var/user/ARB/multi_segment/config.inf_mswv"
// Creates an empty configuration file "config.inf_mswv".

// *****
// Append waveforms to the multi segment sequence
// *****
```

```

SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_0"
// Waveform Seg_0.wv will be the first segment of a
// multi segment waveform created with configuration file config.inf_mswv
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_1"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_2"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_3"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:BLANK:APPend 1000,100000000
// adds a blank segment with 1000 samples and 100 MHz clock rate
SOURcel:BB:ARbitrary:WSEgment:CONFigure:LEVel:MODE ERMS
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE HIGHest
// SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE USER
// SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK 30000000
SOURcel:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE TAKE
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect
"/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:COMment "Multi Segment File"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFile "ms_0to3"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:CATalog?
// /var/user/ARB/multi_segment/Seg_0.wv, /var/user/ARB/multi_segment/Seg_1.wv,
// /var/user/ARB/multi_segment/Seg_2.wv, /var/user/ARB/multi_segment/Seg_3.wv

// *****
// Create and load the multi segment waveforms
// *****
// The first segment is output depending on the trigger settings.
SOURcel:BB:ARbitrary:WSEgment:CREate "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUTO
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STAT ON
SOURcel:BB:ARbitrary:TRIGger:EXEC

```

Example: Configuring the output order of the segments

The following example lists the commands necessary to trigger the output of the segments in desired playback order. The example lists only the relevant commands.

We assume, that the multi-segment sequence `ms_0to3` composed of four segments, `Seg_0`, `Seg_1`, `Seg_2` and `Seg_3` is created and loaded in the ARB (see [Example "Creating a multi-segment waveform"](#) on page 1099). The required output order of the segments is `Seg_0`, `Seg_3` [2], `Seg_2`.

```

// *****
// Select a multi segment waveform
// *****
MME:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CATalog?
// config
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFile?
// "/var/user/ARB/multi_segment/ms_0to3"
SOURcel:BB:ARbitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"

```

```
// *****
// Adjust trigger settings and enable the ARB
// *****
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUTO
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STATe ON

// *****
// Select the next segment trigger mode and source
// *****
SOURcel:BB:ARbitrary:TRIGger:SMODE NEXT
// SOURcel:BB:ARbitrary:TRIGger:SMODE NSEam
SOURcel:BB:ARbitrary:WSEgment:NEXT:SOURce INTernal
SOURcel:BB:ARbitrary:WSEgment?
// 0
SOURcel:BB:ARbitrary:WSEgment:NAME?
// "/var/user/ARB/multi_segment/Seg_0.wv"
// Seg_0 is output continuously

// *****
// Trigger a switch over to the next segment
// *****
SOURcel:BB:ARbitrary:WSEgment:NEXT 3
// stops Seg_0 and starts immediatly Seg_3; Seg_3 is output continuously
SOURcel:BB:ARbitrary:TRIGger:EXECute
//restarts Seg_3
SOURcel:BB:ARbitrary:WSEgment:NEXT 2
SOURcel:BB:ARbitrary:WSEgment:NEXT 0

// *****
// Scrolling trough the segments, i.e. shwitch over in incremental order
// *****
SOURcel:BB:ARbitrary:WSEgment:NEXT:EXECute
SOURcel:BB:ARbitrary:WSEgment?
// 1
SOURcel:BB:ARbitrary:WSEgment:NEXT:EXECute
SOURcel:BB:ARbitrary:WSEgment?
// 2
```



Refer to ["To apply a manual segment switch to the output segments in the required order"](#) on page 394 for description of the steps necessary to achieve a similar task via manual operation of the instrument.

Example: Using the ARB sequencer

The following example lists the commands necessary to configure a play list. The example lists only the relevant commands.

We assume, that the multi-segment sequence `ms_0to3` composed of four segments, `Seg_0`, `Seg_1`, `Seg_2` and `Seg_3` is created and loaded in the ARB (see [Example "Creating a multi-segment waveform"](#) on page 1099). The required output order of the segments is `Seg_0`, `Seg_3` [2], `Seg_2`.



The ARB sequencer mode requires waveform files with equal clock rate.

```
// *****
// Select a multi segment waveform composed from waveforms with equal clock rates
// *****
MME:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARBitrary:WSEgment:CONFigure:CATalog?
// config
SOURcel:BB:ARBitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARBitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARBitrary:WSEgment:CONFigure:OFILe?
// "/var/user/ARB/multi_segment/ms_0to3.wv"

// *****
// Select a sequencing list (*.wvs)
// *****
SOURcel:BB:ARBitrary:WSEgment:SEquence:SElect "play_list"
SOURcel:BB:ARBitrary:WSEgment:SEquence:APPend ON,0,1,NEXT
// adds the segment number 0 as a new (first) segment in the sequencing list
// this segment is activ and will be repeated once followed by the next segment
SOURcel:BB:ARBitrary:WSEgment:SEquence:APPend ON,3,2,NEXT
SOURcel:BB:ARBitrary:WSEgment:SEquence:APPend ON,2,1,SEG0

SOURcel:BB:ARBitrary:TRIGger:SMODE SEquencer
SOURcel:BB:ARBitrary:TRIGger:SEquence AAUTo
SOURcel:BB:ARBitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARBitrary:STAT ON
SOURcel:BB:ARBitrary:TRIGger:EXEC
```



Refer to ["To apply a manual segment switch to the output segments in the required order"](#) on page 394 for description of the steps necessary to achieve a similar task via manual operation of the instrument.

Example: Adding extra marker signals

The following example lists the commands necessary to add two marker signals, a sequence restart marker and a segment restart marker, to the multi-segment sequence. The example lists only the relevant commands.

```
// *****
// Select the multi segment file and the corresponding configuration list
// *****
MME:CDIR "/var/lists/ARB/multi_segment"
SOURcel:BB:ARBitrary:WSEgment:CONFigure:CATalog?
// Response: "config"
SOURcel:BB:ARBitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARBitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"
```



```

SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFile?
// "/var/user/ARB/multi_segment/ms_0to3.wv"

// *****
// Enable restart markers on marker trace 1 and 2
// *****
SOURcel:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE Ignore
SOURcel:BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment MRK1
SOURcel:BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment MRK2

SOURcel:BB:ARbitrary:TRIGger:OUTPut1:MODE UNCHanged
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:MODE UNCHanged

```

Example: Generating a multicarrier signal

The following example lists the commands necessary to generate a multicarrier signal.

```

// *****
// Generating a multi carrier signal
// *****
// Load a standardized 3GPP downlink test model, e.g. "Test Model 1 16 Channels"
SOURcel:BB:W3Gpp:SETTing:TModel:BSTation "Test_Model_1_16channels"
// Confirm that the standardized 3GPP downlink test model is currently selected
SOURcel:BB:W3Gpp:SETTing:TModel:BSTation?
// "Test_Model_1_16channels"
// Enable the generation of 3GPP FDD signal
SOURcel:BB:W3Gpp:STATe ON
// Generate a 3GPP FDD ARB waveform file with name "3gpp_arb"
// store the waveform in the default directory ("/var/user")
SOURcel:BB:W3Gpp:WAVEform:CREate "3gpp_arb"

// *****
// Configure a multi carrier scenario with 4 carriers
// and carrier spacing of 5 MHz
// Activate the carriers
// *****
SOURcel:BB:ARbitrary:MCARrier:CARRier:COUNT 4
SOURcel:BB:ARbitrary:MCARrier:CARRier:SPACing 5 MHz
SOURcel:BB:ARbitrary:MCARrier:CARRier1:STATe ON
SOURcel:BB:ARbitrary:MCARrier:CARRier2:STATe ON
SOURcel:BB:ARbitrary:MCARrier:CARRier3:STATe ON
SOURcel:BB:ARbitrary:MCARrier:CARRier4:STATe ON

// *****
// Select and load the waveform file "3gpp_arb" to all 4 carriers
// (the file "3gpp_arb" is in default directory)
// *****
SOURcel:BB:ARbitrary:MCARrier:CARRier1:FILE "3gpp_arb"
SOURcel:BB:ARbitrary:MCARrier:CARRier2:FILE "3gpp_arb"
SOURcel:BB:ARbitrary:MCARrier:CARRier3:FILE "3gpp_arb"
SOURcel:BB:ARbitrary:MCARrier:CARRier4:FILE "3gpp_arb"

```

```
// *****
// Trigger the signal caulation and load the waveform in the ARB generator
// *****
// Define the file name of the multi carrier output file, e.g. "3gpp_mc"
SOURcel:BB:ARbitrary:MCARrier:OFIle "3gpp_mc"
// Create and load the multi carrier waveform file in the ARB generator
SOURcel:BB:ARbitrary:MCARrier:CLOad
// Alternatively: create the multi carrier waveform and
// load it subsequently in the ARB generator
// SOURcel:BB:ARbitrary:MCARrier:CREate
// SOURcel:BB:ARbitrary:WAVEform:SElect"3gpp_mc"

// Activate the ARB generator
SOURcel:BB:ARbitrary:STATe ON

// *****
// Use the save/recall function.
// *****
// Query available settings files in a specified directory
MMEM:CDIR "/var/user/waveform"
SOURcel:BB:ARbitrary:MCARrier:SETTing:CATalog?
// mcar1, mcar2
// the directory contains the settings files mcar1.arb_multcarr and mcar2.arb_multcarr
SOURcel:BB:ARbitrary:MCARrier:SETTing:STORe "3gpp_mc"
```

Example: Generating AWGN test signal

```
SOURcel:BB:ARbitrary:SIGNAL:TYPE AWGN
SOURcel:BB:ARbitrary:TSIGNAL:AWGN:SAMPles 10000000
SOURcel:BB:ARbitrary:TSIGNAL:AWGN:CREate

SOURcel:BB:ARbitrary:STATe 1
```

Example: Creating notch filter

```

SOURCE1:BB:ARbitrary:CLOCK 1000000
SOURCE1:BB:ARbitrary:NOTCh:CLOCK?
// 1000000
SOURCE1:BB:ARbitrary:NOTCh1:COUNT 3

SOURCE1:BB:ARbitrary:NOTCh1:STATE 1
SOURCE1:BB:ARbitrary:NOTCh1:FREQuency:OFFSet 0
SOURCE1:BB:ARbitrary:NOTCh1:BWIDth:RELative 3
SOURCE1:BB:ARbitrary:NOTCh1:BWIDth:ABSolute?
// 30000

SOURCE1:BB:ARbitrary:NOTCh2:FREQuency:OFFSet -25000000
SOURCE1:BB:ARbitrary:NOTCh2:BWIDth:ABSolute 20000
SOURCE1:BB:ARbitrary:NOTCh2:BWIDth:RELative?
// 2

SOURCE1:BB:ARbitrary:NOTCh3:FREQuency:OFFSet 25000000
SOURCE1:BB:ARbitrary:NOTCh3:BWIDth:ABSolute 5000
SOURCE1:BB:ARbitrary:NOTCh3:BWIDth:RELative 0.5

SOURCE1:BB:ARbitrary:NOTCh1:APPLY
SOURCE1:BB:ARbitrary:NOTCh 1
SOURCE1:BB:ARbitrary:STATE 1

```

General commands**[[:SOURCE<hw>]:BB:ARbitrary:PRESet**

Sets all ARB generator parameters to their default values.

Example: See ["Programming examples"](#) on page 1096

Usage: Event

Manual operation: See ["Set To Default"](#) on page 323

[[:SOURCE<hw>]:BB:ARbitrary:STATE <State>

Enables the ARB generator.

A waveform must be selected before the ARB generator is activated.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See ["Programming examples"](#) on page 1096

Manual operation: See ["State"](#) on page 322

[[:SOURce<hw>]:BB:ARbitrary:PRAMP[:STATe] <ArbPramState>

If activated, the burst gate marker signal included in the ARB waveform file is used as marker signal for the pulse modulator.

Parameters:

<ArbPramState> 1 | ON | 0 | OFF
 *RST: 0

Example:

```
SOURce1:BB:ARbitrary:WAVEform:SElect "/var/user/Pulse_PMod_Burst"
SOURce1:BB:ARbitrary:PRAMP:STATe 1
SOURce1:BB:ARbitrary:STATe 1
```

Options: R&S SMW-K22

Manual operation: See ["RF Power Ramping with Burst Marker"](#) on page 325

Test signal commands

[:SOURce<hw>]:BB:ARbitrary:SIGNAL:TYPE	1106
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:CIQ:I	1107
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:CIQ:Q	1107
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:AMPLitude	1107
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:FREQuency	1107
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:OFFSet	1107
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:SAMPles	1108
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:SINE:FREQuency	1108
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:SINE:PHASe	1108
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:SINE:SAMPles	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:CIQ:CREate:NAMed	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:CREate:NAMed	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:SINE:CREate:NAMed	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:CIQ:CREate	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:RECTangle:CREate	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:SINE:CREate	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:AWGN:SAMPles	1109
[:SOURce<hw>]:BB:ARbitrary:TSIGNAL:AWGN:CREate	1110

[[:SOURce<hw>]:BB:ARbitrary:SIGNAL:TYPE <ArbSignalType>

Selects the type of test signal.

Parameters:

<ArbSignalType> SINE | RECT | CIQ | AWGN
 *RST: SINE

Example: See [Example "Creating test signals"](#) on page 1096.

Options: AWGN requires R&S SMW-K811

Manual operation: See ["Test Signal Form"](#) on page 325

```
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:I <I>
```

```
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:Q <TSig>
```

Sets the value for the I and Q component of the test signal

Parameters:

<TSig> float
 Range: -1 to 1
 Increment: 0.001
 *RST: 0
 Default unit: FS

Example: See [Example"Creating test signals"](#) on page 1096

Manual operation: See ["I Value, Q Value"](#) on page 329

```
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude <Amplitude>
```

Sets the digital amplitude of the rectangular wave.

Parameters:

<Amplitude> float
 Range: 0 to 1
 Increment: 0.001
 *RST: 0.800
 Default unit: FS

Example: see [Example"Creating test signals"](#) on page 1096

Manual operation: See ["Amplitude"](#) on page 328

```
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:FREQuency <Frequency>
```

Sets the frequency of the test signal.

Parameters:

<Frequency> float
 Range: 100 to depends on the installed options
 Increment: 0.01
 *RST: 1000
 Default unit: Hz

Example: See [Example"Creating test signals"](#) on page 1096.

Manual operation: See ["Frequency"](#) on page 328

```
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:OFFSet <Offset>
```

Sets the DC component.

Parameters:

<Offset> float
 Range: -1 to 1
 Increment: 0.001
 *RST: 0
 Default unit: FS

Example: see [Example"Creating test signals"](#) on page 1096

Manual operation: See ["Offset DC"](#) on page 328

[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles <Samples>

Sets the number of sample values required for the rectangular signal per period.

Parameters:

<Samples> integer
 Range: 4 to 1000
 *RST: 100

Example: See [Example"Creating test signals"](#) on page 1096

Manual operation: See ["Samples per Period"](#) on page 328

[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:FREQuency <Frequency>

Sets the frequency of the simple sinusoidal test signal.

Parameters:

<Frequency> float
 Range: 100 to depends on the installed options
 Increment: 0.01
 *RST: 1000
 Default unit: Hz

Example: See [Example"Creating test signals"](#) on page 1096.

Manual operation: See ["Frequency"](#) on page 326

[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:PHASe <Phase>

Sets the phase offset of the sine wave on the Q channel relative to the sine wave on the I channel.

Parameters:

<Phase> float
 Range: -180 to 180
 Increment: 0.01
 *RST: 90
 Default unit: DEG

Example: see [Example"Creating test signals"](#) on page 1096

Manual operation: See ["Phase Offset Q"](#) on page 327

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:SAMPles <Samples>

Sets the sample rate for the sine signal in samples per period.

The resulting clock rate must not exceed the maximum ARB clock rate (see data sheet).

The maximum value is automatically restricted by reference to the set frequency and has to fulfill the rule *Frequency * Samples ≤ ARB clock rate*.

Parameters:

<Samples> integer
 Range: 4 to 1000
 *RST: 100

Example: see [Example"Creating test signals"](#) on page 1096

Manual operation: See ["Samples per Period"](#) on page 326

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed <Filename>

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed <Filename>

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed <Filename>

Generates a signal and saves it to a waveform file.

Setting parameters:

<Filename> string

Example: See [Example"Creating test signals"](#) on page 1096

Usage: Setting only

Manual operation: See ["Generate Signal File"](#) on page 327

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate

Generates a signal and uses it as output straight away.

Example: see [Example"Creating test signals"](#) on page 1096

Usage: Event

Manual operation: See ["Generate Signal RAM"](#) on page 327
 See ["Generate Signal RAM"](#) on page 328

[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:SAMPles <ParAwgnSamp>

Sets the number of samples generated for the AWGN waveform.

Parameters:

<ParAwgnSamp> integer
 Range: 1E6 to 1E9
 *RST: 1E8

Example: See [Example "Generating AWGN test signal"](#) on page 1104.

Options: R&S SMW-K811

Manual operation: See ["Samples"](#) on page 371

[SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:CREate

Generates a signal and uses it as output straight away.

Example: See [Example "Generating AWGN test signal"](#) on page 1104.

Usage: Event

Options: R&S SMW-K811

Manual operation: See ["Generate Signal RAM"](#) on page 371

Waveform commands

The following rule applies for all commands described in this section.

By default, the waveform files are saved in the default directory of the instrument that is the `/var/user/` directory or the directory specified with the command `:MMEMory:CDIRectory`. To access the waveform files in this default directory, only the filename is required, without the path and the file extension (`*.wv`).

However, to access waveform files located in a directory different to the default one, the complete file path and filename are required.

[SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog?	1110
[SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog:LENGth?	1111
[SOURce<hw>]:BB:ARbitrary:WAVeform:SElect	1111
[SOURce<hw>]:BB:ARbitrary:WAVeform:DELeTe	1111
[SOURce<hw>]:BB:ARbitrary:WAVeform:FREE?	1111
[SOURce<hw>]:BB:ARbitrary:WAVeform:POINts?	1112
[SOURce<hw>]:BB:ARbitrary:WAVeform:DATA	1112
[SOURce<hw>]:BB:ARbitrary:WAVeform:TAG?	1113
[SOURce<hw>]:BB:ARbitrary:CLOCK	1113
[SOURce<hw>]:BB:ARbitrary:COUPled:STATe	1114
[SOURce<hw>]:BB:ARbitrary:COUPled:TRIGger:DELay:OFFSet	1114
[SOURce<hw>]:BB:ARbitrary:WAVeform:CLOCK	1115

[SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog?

Reads out the files extension `*.wv` in the default directory.

Return values:

<Catalog> string
Returns a list of the file names separated by commas

Example: see [Example "Managing waveform files"](#) on page 1097

Usage: Query only

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:CATalog:LENGth?

Reads out the files with extension *.wv in the default directory and returns the number of waveform files in this directory. The default directory is set using command MMEM:CDIRECTory.

Return values:

<Length> integer
Number of waveform files in default directory
Range: 0 to INT_MAX
*RST: 0

Example: see [Example "Managing waveform files"](#) on page 1097

Usage: Query only

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:SElect <Filename>

Selects an existing waveform file, i.e. file with extension *.wv.

Parameters:

<Filename> string

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Load Waveform/File"](#) on page 324

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:DElete <Filename>

Deletes the specified waveform file. If the file is not on the default path, the path must be specified at the same time. The file extension may be omitted. Only files with the file extension *.wv are deleted.

Setting parameters:

<Filename> string

Example: See [Example "Managing waveform files"](#) on page 1097

Usage: Setting only

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:FREE?

Queries the free disk space on the default path of the instrument's hard disk.

Return values:

<Free> integer
 Range: 0 to INT_MAX
 *RST: 1

Example: See [Example "Managing waveform files"](#) on page 1097

Usage: Query only

[:SOURce<hw>]:BB:ARbitrary:WAVEform:POINTS?

Queries the number of samples (the number of I/Q values pairs) in the selected waveform file.

Return values:

<Points> <waveform filename>
 Range: 0 to 1000
 *RST: 1

Example: see [Example "Managing waveform files"](#) on page 1097

Usage: Query only

[:SOURce<hw>]:BB:ARbitrary:WAVEform:DATA <Filename>, <Data>**[:SOURce<hw>]:BB:ARbitrary:WAVEform:DATA? <Tag>**

The **setting** command writes the binary block data <data> to the file identified by <filename>. The *complete content* of the waveform file (i.e. including all tags) must be specified; the complete content is transmitted as binary data block.

I/Q data and the marker data can also be written to a file with the command :
[MMEMory:DATA:UNPRotected](#).

Tip: To ensure trouble-free data transmission, set the GPIB delimiter to EOI.

The **query** command retrieves the content of the specified tag of the currently selected waveform file or the waveform file specified with the <filename>.

See also [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347.

Parameters:

<Filename> string
 Specifies the name of the waveform file in that the binary data is copied

Setting parameters:

<Data> block data
 Binary block data with the following syntax:
 #<Digits><Length><Binary data>
 #
 Indicates the start of the binary block

<Digits>

Decimal value

Gives the number of decimal digits used for the <Length> value

<Length>

Decimal value

Number of bytes the follow in the <Binary data> part

<Binary data>

Binary data in ASCII format

Query parameters:

<Tag> 'comment' | 'copyright' | 'date' | 'lacfilter' | 'marker name' | 'poweroffset'

Example:**Query**See [Example "Managing waveform files"](#) on page 1097**Example:****Setting**

```
SOURce:BB:ARB:WAVEform:DATA "/var/user/test1.wv",#220<binary data>
// Writes the binary block data <binary data> to file test1.wv
// <binary data> contains 20 bytes
// <binary data> is a placeholder;
// the actual ASCII values are not printable
```

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:TAG?

Queries the content of the specified tag of the selected waveform file (see also [Chapter 5.7.5, "Tags for waveforms, data and control lists"](#), on page 347).

Return values:

<Tag> 'comment' | 'copyright' | 'date' | 'lacfilter' | 'marker name' | 'poweroffset' | 'samples'

Example:see [Example "Managing waveform files"](#) on page 1097**Usage:**

Query only

[[:SOURce<hw>]:BB:ARbitrary:CLOCK <Clock>

Sets the clock frequency.

If you load a waveform, the clock rate is determined as defined with the waveform tag {CLOCK: frequency}. This command subsequently changes the clock rate; see data sheet for value range.

In the case of an external clock source, the clock of the external source must be specified with this command.

Parameters:

<Clock> float
 Range: depends on the installed options
 Increment: 0.001
 *RST: 1E6
 Default unit: Hz
 E.g. 400 Hz to 200 MHz (R&S SMW-B10)

Example: See [Example "Managing waveform files"](#) on page 1097.

Manual operation: See ["Clock Frequency"](#) on page 324

[[:SOURce<hw>]:BB:ARbitrary:COUPled:STATe <State>

In an instrument configuration with [Coupled sources](#), selects that all basebands use the same waveform.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

```
SCONfiguration:PRESet
SCONfiguration:MODE ADV
SCONfiguration:FADing SISO4X1X1
SCONfiguration:BASEband:SOURce COUP
SCONfiguration:APPLY

ENTity1:SOURce1:BB:ARbitrary:COUPled:STATe 0
ENTity1:SOURce1:BB:ARbitrary:WAVEform:SElect "/var/user/lte"
ENTity1:SOURce2:BB:ARbitrary:WAVEform:SElect "/var/user/lte"
ENTity1:SOURce3:BB:ARbitrary:WAVEform:SElect "/var/user/3gpp"
ENTity1:SOURce4:BB:ARbitrary:WAVEform:SElect "/var/user/gsm"
ENTity1:SOURce4:BB:ARbitrary:COUPled:TRIGger:DELay:OFFSet 100
SOURce1:BB:ARbitrary:STATe 1
```

Manual operation: See ["Use one Waveform for all basebands"](#) on page 323

[[:SOURce<hw>]:BB:ARbitrary:COUPled:TRIGger:DELay:OFFSet <Offset>

Sets a time delay to delay the waveform processing of a particular baseband.

Parameters:

<Offset> float
 Range: 0 to 2147483647/clockrate
 Increment: 250E-12
 *RST: 0

Example: See [\[:SOURce<hw>\]:BB:ARbitrary:COUPled:STATe](#) on page 1114.

Manual operation: See ["Delay"](#) on page 325

[:SOURce<hw>]:BB:ARbitrary:WAVEform:CLOCK <Filename>, <Clock>

Appends information on the ARB clock rate to specified waveform file. This file must contain I/Q or marker data.

Use the following command to create the data:

[:MMEMory:DATA:UNPRotected](#) on page 926

Parameters:

<Filename> string
Complete file path and file name with file extension (* .wv).
If the file is in the default directory, the file path can be omitted.

Setting parameters:

<Clock> float
Range: 400 to 100E6
Increment: 1E-3
*RST: 1E6

Example: see [:MMEMory:DATA:UNPRotected](#) on page 926

Multi-segment commands

Required options

See [Chapter 5.10.1, "Required options"](#), on page 371.

[:SOURce<hw>]:BB:ARbitrary:WSEGment?	1115
[:SOURce<hw>]:BB:ARbitrary:WSEGment:NAME?	1116
[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT	1116
[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:EXECute	1116
[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:SOURce	1116
[:SOURce<hw>]:BB:ARbitrary:WSEGment:LMODe	1117
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SEGment:CATalog?	1117
[:SOURce<hw>]:BB:ARbitrary:WSEGment:SEQuence:SElect	1117
[:SOURce<hw>]:BB:ARbitrary:WSEGment:SEQuence:APPend	1117
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CREate	1118
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CLOad	1118
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:MODE	1119
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:ESEGment	1119
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:FSEGment	1119
[:SOURce<hw>]:BB:ARbitrary:TRIGger:SMODE	1119

[:SOURce<hw>]:BB:ARbitrary:WSEGment?

Queries the index of the currently processed segment.

Return values:

<WSegment> integer
Range: 0 to 1023
*RST: 0

Example: see [Example"Configuring the output order of the segments"](#) on page 1100

Usage: Query only

Manual operation: See ["Current Segment/Current Segment Index"](#) on page 390

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NAME?

Queries the name of the waveform of the currently output segment of the multi-segment waveform.

Return values:

<Name> string

Example: See [Example"Configuring the output order of the segments"](#) on page 1100

Usage: Query only

Manual operation: See ["Current Segment/Current Segment Index"](#) on page 390

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT <Next>

Selects the segment to be output.

Parameters:

<Next> integer
 Range: 0 to 1023
 *RST: 0

Example: see [Example"Configuring the output order of the segments"](#) on page 1100

Manual operation: See ["Segment"](#) on page 390

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:EXECute

Triggers manually switchover to the subsequent segment in the multi-segment file.

This command is disabled, if a sequencing play list is enabled.

Example: See [Example"Configuring the output order of the segments"](#) on page 1100

Usage: Event

Manual operation: See ["Execute Next Segment"](#) on page 392

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:SOURce <Source>

Selects the next segment source.

Parameters:

<Source> INTERNAL | NSEGM1 | INTERNAL | NSEGM1 | NSEGM2
 *RST: INTERNAL

Example: See [Example"Configuring the output order of the segments"](#) on page 1100.

Manual operation: See ["Next Segment Source"](#) on page 392

[:SOURce<hw>]:BB:ARbitrary:WSEgment:LMODe <LevelMode>

Sets how the segments are leveled.

Parameters:

<LevelMode> HIGHEst | UNCHanged
 *RST: HIGHEst

Example: :SOURce1:BB:ARbitrary:WSEgment:LMODe HIGHEst

Manual operation: See ["Level Mode"](#) on page 392

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SEGMENT:CATalog?

Queries the segments of the currently selected configuration file.

Return values:

<Catalog> string

Example: See [Example"Creating a multi-segment waveform"](#) on page 1099.

Usage: Query only

Manual operation: See ["Segment Table"](#) on page 381

[:SOURce<hw>]:BB:ARbitrary:WSEgment:SEQuence:SElect <Filename>

Selects the sequencing list (files with extension *.wvs)

Parameters:

<Filename> string

Example: see [Example"Using the ARB sequencer"](#) on page 1101

Manual operation: See ["New/Load Sequencing List"](#) on page 387
 See ["Append"](#) on page 389
 See ["Sequencing List"](#) on page 392

[:SOURce<hw>]:BB:ARbitrary:WSEgment:SEQuence:APPend <State>, <Segment>, <Count>, <Next>

Appends a new segment to the selected sequencing play list.

Setting parameters:

<State>	ON OFF Activates/deactivates the appended segment *RST: ON
<Segment>	integer Indicates the number of the segment as in the multi-segment waveform file Range: 0 to SegmentCount - 1
<Count>	integer Defines how many times this segment is repeated Range: 1 to 1048575
<Next>	NEXT BLANK ENDLess SEG0 SEG1 ... SEG31 0...maxSegment Determines the action after completing the current segment, like for instance which segment is processed after the processing of the current one is finished.

Example: See [Example"Using the ARB sequencer"](#) on page 1101

Usage: Setting only

Manual operation: See ["Append"](#) on page 389

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CREate <FilenameInput>

Creates a multi-segment waveform (*.wv) using the current settings of the specified *configuration file* (*.inf_mswv).

Setting parameters:

<FilenameInput>	Complete file path, file name of the configuration file and file extension (*.inf_mswv)
-----------------	---

Example: See [Example"Creating a multi-segment waveform"](#) on page 1099

Usage: Setting only

Manual operation: See ["Create/Create and Load"](#) on page 380

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CLOad <FilenameInput>

Creates a multi-segment waveform using the current entries of the specified *configuration file* (*.inf_mswv).

The ARB generator is activated, the new multi-segment waveform (*.wv) is loaded and the first segment is output in accordance to the trigger settings.

Setting parameters:

<FilenameInput> string
Complete file path, file name of the configuration file and file extension (*.inf_mswv)

Example: See [Example"Creating a multi-segment waveform"](#) on page 1099

Usage: Setting only

Manual operation: See ["Create/Create and Load"](#) on page 380

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE <Mode>

Defines the way the marker information within the separate segments is processed.

Parameters:

<Mode> IGNore | TAKE
*RST: TAKE

Example: see [Example"Adding extra marker signals"](#) on page 1102

Manual operation: See ["Segment Marker"](#) on page 384

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment
<Mode>**

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment
<Mode>**

Enables/disables the generation of an additional marker restart signal at the beginning of the first segment (FSEgment) or at the beginning of each segment (ESEgment).

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

Parameters:

<Mode> OFF | MRK1 | MRK2 | MRK3 | MRK4
*RST: OFF

Example: see [Example"Adding extra marker signals"](#) on page 1102

Manual operation: See ["Sequence Restart"](#) on page 384

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SMODE <SMODE>

Selects the extended trigger mode for multi segment waveforms.

Parameters:

<SMODE> SAME | NEXT | SEQuencer | NSEam
NSEam = Next Segment Seamless
*RST: NEXT

Example: See [Example](#) "Configuring the output order of the segments" on page 1100.

Manual operation: See ["Next Segment Mode"](#) on page 391

Multi-segment sequencing commands

Required options

See [Chapter 5.10.1, "Required options"](#), on page 371.

[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:BLANk:APPend	1120
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CATalog?	1120
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CLOCK	1121
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CLOCK:MODE	1121
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:LEVel[:MODE]	1121
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:COMMeNt	1122
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:DELeTe	1122
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:OFILe	1122
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SEGMeNt:APPend	1122
[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SELeCt	1123

[\[:SOURce<hw>\]:BB:ARbitrary:WSEGment:CONFigure:BLANk:APPend](#)
 <SampCount>, <Frequency>

Adds a blank segment to the multi-segment file.

Setting parameters:

<SampCount>	float
	Specifies the number of samples.
	Range: 512 to 1E7
	Increment: 1
	*RST: 1000
<Frequency>	float
	Determines the clock rate.
	Range: 400 Hz to depends on the installed options
	Increment: 0.001
	*RST: 1E8

Example: See [Example](#) "Creating a multi-segment waveform" on page 1099

Usage: Setting only

Manual operation: See ["Blank Segment"](#) on page 382

[\[:SOURce<hw>\]:BB:ARbitrary:WSEGment:CONFigure:CATalog?](#)

Queries the available configuration files in the default directory. See also [Chapter 5.10.2.3, "File concept"](#), on page 373.

Return values:

<Catalog> string

Example: see [Example "Creating a multi-segment waveform"](#) on page 1099**Usage:** Query only**Manual operation:** See ["Load List"](#) on page 379**[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK <Clock>**

Defines the clock rate used for multi-segment waveform output, if the clock mode is USER.

Parameters:

<Clock> float
 Increment: 1E-3
 *RST: maximum sample rate

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099**Manual operation:** See ["User Clock Rate"](#) on page 384**[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE <Mode>**Selects the clock rate mode for the multi segment waveform. Use the command [\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:CONFigure:CLOCK](#) to define the clock in clock mode user.**Parameters:**

<Mode> UNCHanged | HIGHest | USER
 *RST: UNCHanged

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099.**Manual operation:** See ["Clock"](#) on page 383**[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:LEVel[:MODE] <Mode>**

Selects the level mode, unchanged or equal RMS, for the multi-segment waveform.

Parameters:

<Mode> UNCHanged | ERMS
 *RST: UNCHanged

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099.**Manual operation:** See ["Level"](#) on page 383

[[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:COMMeNt <Comment>

Enters a comment for the selected configuration file.

Parameters:

<Comment> string

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099

Manual operation: See ["Comment"](#) on page 380

[[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:DELeTe <Filename>

Deletes the selected configuration file.

Setting parameters:

<Filename> string

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099.

Usage: Setting only

Manual operation: See ["Append/Delete/Shift Seg. Up/Down"](#) on page 382

[[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:OFILe <OFile>

Defines the file name of the output multi-segment waveform.

Parameters:

<OFile> string

Example: See [Example "Creating a multi-segment waveform"](#) on page 1099

Manual operation: See ["Output file"](#) on page 380
See ["Create/Create and Load"](#) on page 380

**[[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:SEGMeNt:APPend
 <Waveform>**

Appends the specified waveform to the configuration file.

Setting parameters:

<Waveform> string

Example: see [Example "Creating a multi-segment waveform"](#) on page 1099

Usage: Setting only

Manual operation: See ["Append/Delete/Shift Seg. Up/Down"](#) on page 382

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SElect <Filename>

Selects a configuration file from the default directory. If a configuration file with the specified name does not yet exist, it is created. The file extension *.inf_mswv may be omitted.

Parameters:

<Filename> string

Example: see [Example "Creating a multi-segment waveform"](#)
on page 1099

Manual operation: See ["New List"](#) on page 379
See ["Load List"](#) on page 379

Multicarrier commands

Required options

See [Chapter 5.11.1, "Required options"](#), on page 402.

Suffixes

Suffix	Value range
CARRier<ch>	1 to 512

[:SOURce<hw>]:BB:ARbitrary:MCARrier:PRESet	1124
[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:CATalog?	1124
[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:LOAD	1124
[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:STORE	1125
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:COUNT	1125
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:MODE	1125
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:SPACing	1125
[:SOURce<hw>]:BB:ARbitrary:MCARrier:SAMPles?	1126
[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME	1126
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CFACTOR:MODE	1126
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CFACTOR	1127
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUToff	1127
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[STATE]	1127
[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE	1128
[:SOURce<hw>]:BB:ARbitrary:MCARrier:POWER:REFERENCE	1128
[:SOURce<hw>]:BB:ARbitrary:MCARrier:OFILe	1128
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOAd	1128
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOCK?	1129
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CREate	1129
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:STATe	1129
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency	1130
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:PHASe	1130
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:POWer	1130
[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay	1131

<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FILE</code>	1131
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:CONFLICT?</code>	1131
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STATe</code>	1131
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:START</code>	1132
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STOP</code>	1132
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP</code>	1132
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer[:START]</code>	1132
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe:STEP</code>	1133
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START]</code>	1133
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP</code>	1133
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay[:START]</code>	1134
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:FILE</code>	1134
<code>[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute</code>	1134

`[SOURce<hw>]:BB:ARbitrary:MCARrier:PRESet`

Sets all the multi-carrier parameters to their default values.

Example: `SOURce1:BB:ARbitrary:MCARrier:PRESet`

Usage: Event

Manual operation: See ["Set to Default"](#) on page 406

`[SOURce<hw>]:BB:ARbitrary:MCARrier:SETTING:CATalog?`

Queries the available settings files in the specified default directory. Only files with the file extension `*.arb_multcarr` are listed.

Return values:

<Catalog> string

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Usage: Query only

Manual operation: See ["Save/Recall Frame"](#) on page 406

`[SOURce<hw>]:BB:ARbitrary:MCARrier:SETTING:LOAD <Filename>`

Loads the selected file from the default or the specified directory. Loaded are files with extension `*.arb_multcarr`.

Setting parameters:

<Filename> "<filename>"

Filename or complete file path; file extension can be omitted

Example: See [Example "Generating a multicarrier signal"](#) on page 1103.

Usage: Setting only

Manual operation: See ["Save/Recall Frame"](#) on page 406

[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:STORe <Filename>

Stores the current settings into the selected file; the file extension (*.arb_multcarr) is assigned automatically.

Setting parameters:

<Filename> string
 Filename or complete file path

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Usage: Setting only

Manual operation: See ["Save/Recall Frame"](#) on page 406

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:COUNT <Count>

Sets the number of carriers in the ARB multi-carrier waveform.

Parameters:

<Count> integer
 Range: 1 to 512
 *RST: 1

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Manual operation: See ["Number of Carriers"](#) on page 406
 See ["Number of Carriers"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:MODE <Mode>

The command sets the carrier frequency mode.

Parameters:

<Mode> EQUidistant | ARBitary
 *RST: EQUidistant

Example: BB:ARB:MCAR:CARR:MODE EQU
 Sets an equidistant carrier spacing. The carrier frequency cannot be set.

Manual operation: See ["Mode"](#) on page 406

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:SPACing <Spacing>

Sets the frequency spacing between adjacent carriers of the multi-carrier waveform (see [Chapter 5.11.2.1, "Defining the carrier frequency"](#), on page 403).

Parameters:

<Spacing> float
 Range: 0.0 to depends on the installed options, e.g. 120E6 (R&S SMW-B10)
 Increment: 0.01
 *RST: 0
 Default unit: Hz

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Manual operation: See ["Carrier Spacing"](#) on page 407

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:SAMPles?

Queries the resulting file size.

Return values:

<Samples> integer
 Range: 0 to INT_MAX
 *RST: 0
 Default unit: samples

Example: SOURce1:BB:ARbitrary:MCARrier:SAMPles?
 Queries the file size of the currently calculated multi-carrier waveform.

Usage: Query only

Manual operation: See ["File Size"](#) on page 410

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME <Time>

Sets the user-defined signal period.

Parameters:

<Time> float
 Range: 0 to 1E9
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example: SOURce1:BB:ARbitrary:MCARrier:MODE USER
 Selects signal period mode user.
 SOURce1:BB:ARbitrary:MCARrier:TIME 10
 Sets a signal period of 10 seconds

Manual operation: See ["Signal Period"](#) on page 408

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CFACTOR:MODE <Mode>

Sets the mode for optimizing the crest factor by calculating the carrier phases.

Parameters:

<Mode> OFF | MIN | MAX
 *RST: OFF

Example:

SOURce1:BB:ARbitrary:MCARrier:CFACTOR:MODE OFF
 Switches off automatic crest factor optimization.

Manual operation: See ["Crest Factor Mode"](#) on page 407

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CFACTOR <CFactor>

Sets the value of the desired crest factor, if baseband clipping is enabled.

A target crest factor above the crest factor of the unclipped multicarrier signal has no effect.

Parameters:

<CFactor> float
 Range: -50 to 50
 Increment: 0.01
 *RST: 50
 Default unit: dB

Example:

See [\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:CLIPping\[:STATe\]](#) on page 1127.

Manual operation: See ["Target Crest Factor"](#) on page 407

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUTOFF <Cutoff>

Sets the cutoff frequency of the final low pass filter, if baseband clipping is enabled.

Parameters:

<Cutoff> float
 Range: 0 to 50E6
 Increment: 0.01
 *RST: 50E6

Example:

See [\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:CLIPping\[:STATe\]](#) on page 1127.

Manual operation: See ["Filter Cutoff Frequency"](#) on page 407

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe] <State>

Switches baseband clipping on and off.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

```
SOURce1:BB:ARbitrary:MCARrier:CLIPping:STATE ON
SOURce1:BB:ARbitrary:MCARrier:CLIPping:CFACTOR 37
SOURce1:BB:ARbitrary:MCARrier:CLIPping:CUTOFF 50
```

Manual operation: See ["Clipping"](#) on page 407

[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE <Mode>

Selects the mode for calculating the resulting signal period of the multi-carrier waveform. The resulting period is always calculated for all carriers in the carrier table irrespective of their state (ON/OFF).

Parameters:

<Mode> USER | LONG | SHORT | LCM
*RST: LONG

Example: BB:ARB:MCAR:TIME:MODE LONG
The resulting signal period is defined by the longest I/Q file in the carrier table. Shorter I/Q files are periodically repeated.

Manual operation: See ["Signal Period Mode"](#) on page 408

[:SOURce<hw>]:BB:ARbitrary:MCARrier:POWER:REFERENCE <Reference>

Defines the way the individual carriers in a composed multi carrier signal are leveled.

Parameters:

<Reference> RMS | PEAK
*RST: RMS

Manual operation: See ["Power Reference"](#) on page 408

[:SOURce<hw>]:BB:ARbitrary:MCARrier:OFILE <OFile>

Defines the output file name for the multi-carrier waveform (file extension *.wv).

This file name is required to calculate the waveform with the commands [:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOAD or [:SOURce<hw>]:BB:ARbitrary:MCARrier:CREATE.

Parameters:

<OFile> string

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Manual operation: See ["Output File"](#) on page 410

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOAD

Creates a multi-carrier waveform using the current entries of the carrier table and activates the ARB generator.

Use the command `[:SOURce<hw>] :BB:ARbitrary:MCARrier:OFILe` to define the multi-carrier waveform file name. The file extension is `*.wv`.

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Usage: Event

Manual operation: See ["Create/Create and Load"](#) on page 410

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLOCK?`

Queries the resulting sample rate at which the multi-carrier waveform is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers, carrier spacing, and input sample rate of the leftmost or rightmost carriers.

Return values:

<Clock> float
Range: 400 to Max
Increment: 1E-3

Example: `BB:ARB:MCAR:CLOC?`
Queries the ARB multi-carrier output clock rate.

Usage: Query only

Manual operation: See ["Clock Rate"](#) on page 410

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CREate`

Creates a multi-carrier waveform using the current settings of the carrier table.

Use the command `[:SOURce<hw>] :BB:ARbitrary:MCARrier:OFILe` to define the multi-carrier waveform file name. The file extension is `*.wv`.

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Usage: Event

Manual operation: See ["Create/Create and Load"](#) on page 410

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier<ch>:STATe <State>`

Enables/diasbled the selected carrier.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Manual operation: See ["State"](#) on page 412

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency <Frequency>

Sets or indicates the carrier frequency, depending on the selected carrier frequency mode.

Parameters:

<Frequency> integer
 Range: depends on the installed options
 *RST: 0
 E.g. -60 MHz to +60 MHz (R&S SMW-B10)

Example: SOURce1:BB:ARbitrary:MCARrier:CARRier:MODE ARB
 SOURce1:BB:ARbitrary:MCARrier:CARRier1:
 FREQuency 5.0
 Sets 5.0 MHz carrier frequency.

Manual operation: See ["Carrier Freq \[MHz\]"](#) on page 412

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:PHASe <Phase>

Sets the start phase of the selected carrier.

Parameters:

<Phase> float
 Range: 0 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: SOURce1:BB:ARbitrary:MCARrier:CARRier19:PHASe
 90
 Sets a start phase.

Manual operation: See ["Phase"](#) on page 412

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:POWER <Power>

Sets the gain of the selected carrier.

Parameters:

<Power> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: SOURce1:BB:ARbitrary:MCARrier:CARRier15:POWER
 -50
 Sets the power of carrier 15 to -50 dB.

Manual operation: See ["Gain"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay <Delay>

Sets the start delay of the selected carrier.

Parameters:

<Delay> float
 Range: 0 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example: BB:ARB:MCAR:CARR15:DEL 5us
 sets a start delay of 50 us for carrier 15.

Manual operation: See ["Delay"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FILE <File>

Selects the file with I/Q data to be modulated onto the selected carrier.

Parameters:

<File> <file name>

Example: See [Example "Generating a multicarrier signal"](#) on page 1103

Manual operation: See ["File"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:CONFLICT?

Queries carrier conflicts. A conflict arises when the carriers overlap.

Return values:

<Conflict> 1 | ON | 0 | OFF
 0
 No conflict
 *RST: 0

Example: BB:ARB:MCAR:CARR:CONF?

Usage: Query only

Manual operation: See ["!!!"](#) on page 413

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STATe <State>

Switches all the carriers in the selected carrier range on or off.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: BB:ARB:MCAR:EDIT:CARR:STAT ON
 Sets all the carriers in the carrier range to ON.

Manual operation: See ["Carrier State"](#) on page 414

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:START <Start>
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STOP <Stop>
```

Selects the last carrier in the carrier range to which the settings shall apply.

Parameters:

<Stop> integer
 Range: 0 to 511
 *RST: 0

Example: BB:ARB:MCAR:EDIT:CARR:STOP 4
 The carrier range stops at carrier 4.

Manual operation: See ["Carrier Start/Start"](#) on page 414

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWER:STEP <Step>
```

Sets the step width by which the starting power of the carriers in the defined carrier range is incremented.

Parameters:

<Step> float
 Range: -80 to 80
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: BB:ARB:MCAR:EDIT:CARR:POW -80dB
 Sets a power of -80 dB for the carriers in the carrier range.
 BB:ARB:MCAR:EDIT:CARR:POW:STEP 1 dB
 The power is incremented by 1dB for each carrier.
 That is, the first carrier has -80 dB, the second -79 dB, and so on.

Manual operation: See ["Gain Step"](#) on page 414
 See ["Phase Step"](#) on page 415

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWER[:START] <Start>
```

Sets the power for the individual carriers in the defined carrier range.

Parameters:

<Start> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: BB:ARB:MCAR:EDIT:CARR:POW -50 dB
 sets the power of the carriers in the carrier range to -50 dB.

Manual operation: See ["Gain Start"](#) on page 414

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe:STEP <Step>

Sets the step width by which the start phases of the carriers in the defined carrier range is incremented.

Parameters:

<Step> float
 Range: -359.99 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example:

BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG

Sets a start phase of 90° for the carriers in the carrier range.

BB:ARB:MCAR:EDIT:CARR:PHAS:STEP 1 DEG

The start phase is incremented by 1° for each carrier. That is, the first carrier has a start phase of 90°, the second a start phase of 91°, and so on.

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START] <Start>

Sets the start phase for the individual carriers in the defined carrier range.

Parameters:

<Start> float
 Range: 0 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example:

BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG

sets a start phase of 90° for the carriers in the carrier range.

Manual operation: See ["Phase Start"](#) on page 414

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP <Step>

Sets the step width by which the start delays of the carriers in the defined carrier range is incremented.

Parameters:

<Step> float
 Range: -1 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

```
BB:ARB:MCAR:EDIT:CARR:DEL 5 us
```

Sets a start delay of 5 us for the carriers in the carrier range.

```
BB:ARB:MCAR:EDIT:CARR:DEL:STEP 1 us
```

The start delay is incremented by 1us for each carrier. That is, the first carrier has a start delay of 5 us, the second a start delay of 6 us, and so on.

Manual operation: See ["Delay Step"](#) on page 415

```
[[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay[:START] <Start>
```

Sets the start delay for the individual carriers in the defined carrier range.

Parameters:

<Start> float
 Range: 0 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

```
BB:ARB:MCAR:EDIT:CARR:DEL 5us
```

Sets a start delay of 5 us for the carriers in the carrier range.

Manual operation: See ["Delay Start"](#) on page 415

```
[[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:FILE <File>
```

Selects the input file. The data of the file are modulated onto the carriers in the defined carrier range.

Parameters:

<File> string

Example:

```
BB:ARB:MCAR:EDIT:CARR:FILE  
"/var/user/temp/IQ_wcdma"  
selects input file IQ_wcdma.
```

Manual operation: See ["Input Waveform File"](#) on page 415

```
[[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:EXECute
```

Adopts the settings for the selected carrier range.

Example:

```
BB:ARB:MCAR:EDIT:CARR:STAR 4  
BB:ARB:MCAR:EDIT:CARR:STOP 20  
BB:ARB:MCAR:EDIT:CARR:STAT ON  
BB:ARB:MCAR:EDIT:CARR:EXEC
```

Usage: Event

Manual operation: See ["Apply Assistant Settings"](#) on page 415

Notch filter commands

Option: R&S SMW-K811.

See also [Chapter 5.8.1, "Required options"](#), on page 365.

<code>[SOURce<hw>]:BB:DVB:NOTCh</code>	1135
<code>[SOURce<hw>]:BB:EUTRa:NOTCh</code>	1135
<code>[SOURce<hw>]:BB:OFDM:NOTCh</code>	1135
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh</code>	1136
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh</code>	1136
<code>[SOURce<hw>]:BB:DVB:NOTCh:CLOCK?</code>	1136
<code>[SOURce<hw>]:BB:EUTRa:NOTCh:CLOCK?</code>	1136
<code>[SOURce<hw>]:BB:OFDM:NOTCh:CLOCK?</code>	1136
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh:CLOCK?</code>	1136
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh:CLOCK?</code>	1136
<code>[SOURce<hw>]:BB:DVB:NOTCh:COUNt</code>	1136
<code>[SOURce<hw>]:BB:EUTRa:NOTCh:COUNt</code>	1136
<code>[SOURce<hw>]:BB:OFDM:NOTCh:COUNt</code>	1136
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh:COUNt</code>	1136
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh:COUNt</code>	1136
<code>[SOURce<hw>]:BB:DVB:NOTCh<ch>:STATe</code>	1136
<code>[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:STATe</code>	1136
<code>[SOURce<hw>]:BB:OFDM:NOTCh<ch>:STATe</code>	1136
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:STATe</code>	1137
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh<ch>:STATe</code>	1137
<code>[SOURce<hw>]:BB:DVB:NOTCh<ch>:FREQuency:OFFSet</code>	1137
<code>[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet</code>	1137
<code>[SOURce<hw>]:BB:OFDM:NOTCh<ch>:FREQuency:OFFSet</code>	1137
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:FREQuency:OFFSet</code>	1137
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh<ch>:FREQuency:OFFSet</code>	1137
<code>[SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth[:ABSolute]</code>	1137
<code>[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute]</code>	1137
<code>[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute]</code>	1137
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth[:ABSolute]</code>	1137
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh<ch>:BWIDth[:ABSolute]</code>	1137
<code>[SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth:RELative</code>	1138
<code>[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth:RELative</code>	1138
<code>[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth:RELative</code>	1138
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth:RELative</code>	1138
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh<ch>:BWIDth:RELative</code>	1138
<code>[SOURce<hw>]:BB:DVB:NOTCh:APPLy</code>	1138
<code>[SOURce<hw>]:BB:EUTRa:NOTCh:APPLy</code>	1138
<code>[SOURce<hw>]:BB:OFDM:NOTCh:APPLy</code>	1138
<code>[SOURce<hw>]:BB:ONEWeb:NOTCh:APPLy</code>	1138
<code>[SOURce<hw>]:BB:ARbitrary:NOTCh:APPLy</code>	1138

`[SOURce<hw>]:BB:DVB:NOTCh <NotchState>`

`[SOURce<hw>]:BB:EUTRa:NOTCh <NotchState>`

`[SOURce<hw>]:BB:OFDM:NOTCh <NotchState>`

[:SOURce<hw>]:BB:ONEWeb:NOTCh <NotchState>

[:SOURce<hw>]:BB:ARBitrary:NOTCh <NotchState>

Enables or disables the notch filter.

Parameters:

<NotchState> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Creating notch filter"](#) on page 1105.

Manual operation: See ["State"](#) on page 367

[:SOURce<hw>]:BB:DVB:NOTCh:CLOCK?

[:SOURce<hw>]:BB:EUTRa:NOTCh:CLOCK?

[:SOURce<hw>]:BB:OFDM:NOTCh:CLOCK?

[:SOURce<hw>]:BB:ONEWeb:NOTCh:CLOCK?

[:SOURce<hw>]:BB:ARBitrary:NOTCh:CLOCK?

Queries the current clock frequency of the waveform signal.

Works like the command [\[:SOURce<hw>\]:BB:ARBitrary:CLOCK](#).

Return values:

<ChBw> integer
 Range: 400 to 2000E6
 *RST: 1E6

Example: See [Example"Creating notch filter"](#) on page 1105.

Usage: Query only

Manual operation: See ["Clock Frequency"](#) on page 367

[:SOURce<hw>]:BB:DVB:NOTCh:COUNT <NumOfNotch>

[:SOURce<hw>]:BB:EUTRa:NOTCh:COUNT <NumOfNotch>

[:SOURce<hw>]:BB:OFDM:NOTCh:COUNT <NumOfNotch>

[:SOURce<hw>]:BB:ONEWeb:NOTCh:COUNT <NumOfNotch>

[:SOURce<hw>]:BB:ARBitrary:NOTCh:COUNT <IdPDbNotchedNum>

Sets the number of notches.

Parameters:

<IdPDbNotchedNum> integer
 Range: 1 to 25
 *RST: 1

Example: See [Example"Creating notch filter"](#) on page 1105.

Manual operation: See ["Number of Notches"](#) on page 367

[:SOURce<hw>]:BB:DVB:NOTCh<ch>:STATe <ValEnable>

[:SOURce<hw>]:BB:EUTRa:NOTCh<ch>:STATe <NotchState>

[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:STATe <NotchValEnable>

[:SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:STATe <ValEnable>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:STATe <ValEnable>

Enables the particular notch.

Parameters:

<ValEnable> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Creating notch filter"](#) on page 1105.

Manual operation: See ["State"](#) on page 368

[:SOURce<hw>]:BB:DVB:NOTCh<ch>:FREQuency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:FREQuency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:FREQuency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:FREQuency:OFFSet <ChBw>

Specifies the center frequency of the notch

Parameters:

<ChBw> integer
 Range: -2000E6 to 2000E6
 Increment: dynamic
 *RST: 0

Example: See [Example"Creating notch filter"](#) on page 1105.

Manual operation: See ["Frequency Offset /MHz"](#) on page 368

[:SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth[:ABSolute] <NoBw>

Sets the absolute notch bandwidth.

The value is interdependent with the relative bandwidth value, set with the command
[\[:SOURce<hw>\]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative](#).

That is, you can set the notch bandwidth in either way.

Parameters:

<NoBw> float
 Range: 0 to dynamic
 Increment: dynamic
 *RST: dynamic

Example: See [Example"Creating notch filter"](#) on page 1105.

Manual operation: See ["Notch Bandwidth /MHz"](#) on page 368

```
[ :SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative <NoBwRel>
```

Sets the notch bandwidth relative to current clock frequency ([\[:SOURce<hw>\]:BB:ARBitrary:NOTCh:CLOCK?](#)).

The value is interdependent with the absolute bandwidth value, set with the command [\[:SOURce<hw>\]:BB:ARBitrary:NOTCh<ch>:BWIDth\[:ABSolute\]](#).

That is, you can set the notch bandwidth in either way.

Parameters:

<NoBwRel>	float
Range:	0 to 10
Increment:	0.01
*RST:	5

Example: See [Example "Creating notch filter"](#) on page 1105.

Manual operation: See ["Notch Bandwidth /%"](#) on page 368

```
[ :SOURce<hw>]:BB:DVB:NOTCh:APPLY
[ :SOURce<hw>]:BB:EUTRa:NOTCh:APPLY
[ :SOURce<hw>]:BB:OFDM:NOTCh:APPLY
[ :SOURce<hw>]:BB:ONEWeb:NOTCh:APPLY
[ :SOURce<hw>]:BB:ARBitrary:NOTCh:APPLY
```

Adopt the configured settings.

Example: See [Example "Creating notch filter"](#) on page 1105.

Usage: Event

Manual operation: See ["Apply"](#) on page 369

Trigger commands

Example: Configure a time-based trigger signal

Configuring a time-based trigger is analogous for all digital standards that support this feature. This example illustrates time-based triggering for the arbitrary waveform generator.

You can use the configuration for other digital standards by replacing the `ARBitrary` mnemonic, for example, replace it with `NR5G` for 5G NR digital standard.

```
// *****
Configure an internal time-based trigger signal.
// *****

SOURcel:BB:ARBitrary:TRIGger:SEQuence SINGLE
SOURcel:BB:ARBitrary:TRIGger:MODE INTernal
// Configure time-based trigger settings.
SOURcel:BB:ARBitrary:TRIGger:TIME:DATE 2023,10,1
// Time-based trigger signal date is 2023-10-01 in format YYYY-MM-DD.
SOURcel:BB:ARBitrary:TRIGger:TIME:TIME 11,0,0
// Time-based trigger signal time is 11 a.m. in format hh:mm:ss.
SOURcel:BB:ARBitrary:TRIGger:TIME:STATe 1
// Activates time-based triggering. That means, trigger signal generation, if
// the operating system time matches date and time of the time-based trigger.
SOURcel:BB:ARBitrary:STATe 1

// Query the operating system date and time of your R&S SMW.
SYSTem:DATE?
// Response: "2023,10,1"
// The date matches the date of the time-based trigger.
SYSTem:TIME?
// Response 10,59,50.
// The system time is 10 seconds before the time of the time-based trigger.
// Query if the trigger is active.
SOURcel:BB:ARBitrary:TRIGger:RMODe?
// Response: "STOP"
// Query system time again.
SYSTem:TIME?
// Response 11,0,50.
// The system time equals the time of the time-based trigger.
// Query if the trigger is active.
SOURcel:BB:ARBitrary:TRIGger:RMODe?
// Response: "RUN"
```

Commands:

[:SOURce<hw>]:BB:ARBitrary[:TRIGger]:SEQuence	1140
[:SOURce<hw>]:BB:ARBitrary:TRIGger:SOURce	1140
[:SOURce<hw>]:BB:ARBitrary:TRIGger:RMODe?	1141
[:SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:DATE	1141
[:SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:TIME	1141
[:SOURce<hw>]:BB:ARBitrary:TRIGger:TIME[:STATe]	1142

[SOURce<hw>]:BB:ARbitrary:TRIGger:SLENgth.....	1142
[SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit.....	1143
[SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute.....	1143
[SOURce<hw>]:BB:ARbitrary:TRIGger:EXECute.....	1143
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:SYNChronize:OUTPut.....	1143
[SOURce<hw>]:BB:ARbitrary:TRIGger:PTIME?.....	1144
[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:DELay.....	1144
[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:RDELay?.....	1144
[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:TDELay.....	1145
[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:INHibit.....	1145
[SOURce<hw>]:BB:ARbitrary:TRIGger:DELay:UNIT.....	1145
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:DELay.....	1145
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:TDELay.....	1146
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:RDELay?.....	1146
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:INHibit.....	1147

[SOURce<hw>]:BB:ARbitrary[:TRIGger]:SEquence <Sequence>

The command selects the trigger mode.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGLE
 *RST: AUTO

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Mode"](#) on page 263

[SOURce<hw>]:BB:ARbitrary:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTeRnal)
- External trigger signal via one of the local or global connectors
 - EGT1 | EGT2: External global trigger
 - EGC1 | EGC2: External global clock
 - ELTRigger: External local trigger
 - ELClock: External local clock
- Internal triggering by a signal from the other basebands (INTA | INTB)
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- OBASeband | BEXTeRnal | EXTeRnal: Setting only
 Provided only for backward compatibility with other Rohde & Schwarz signal generators.
 The R&S SMW accepts these values and maps them automatically as follows:
 EXTeRnal = EGT1, BEXTeRnal = EGT2, OBASeband = INTA or INTB
 (depending on the current baseband)

Parameters:

<Source> INTB|INTernal|OBASeband|EGT1|EGT2|EGC1|EGC2|ELTRigger|INTA|ELCLock|BEXternal|EXternal | BBSY
 *RST: INTERNAL

Example: See [Example"Managing waveform files"](#) on page 1097

Options: ELTRigger|ELCLock require R&S SMW-B10
 BBSY require R&S SMW-B9

Manual operation: See ["Source"](#) on page 265

[:SOURce<hw>]:BB:ARbitrary:TRIGger:RMODe?

Queries the status of waveform output.

Return values:

<RMode> STOP | RUN

Example: see [Example"Managing waveform files"](#) on page 1097

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 263

[:SOURce<hw>]:BB:ARbitrary:TRIGger:TIME:DATE <Year>, <Month>, <Day>

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATE

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Year> integer
 Range: 1980 to 9999
 <Month> integer
 Range: 1 to 12
 <Day> integer
 Range: 1 to 31

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[:SOURce<hw>]:BB:ARbitrary:TRIGger:TIME:TIME <Hour>, <Minute>, <Second>

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Hour>	integer
	Range: 0 to 23
<Minute>	integer
	Range: 0 to 59
<Second>	integer
	Range: 0 to 59

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME[:STATe] <State>

Activates time-based triggering with a fixed time reference. If activated, the R&S SMW triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<State>	1 ON 0 OFF
*RST:	0

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Time Based Trigger"](#) on page 264

[SOURce<hw>]:BB:ARBitrary:TRIGger:SLENgth <SLength>

Defines the length of the signal sequence that is output in the SINGLE trigger mode.

Parameters:

<SLength> integer
 Maximum value depends on the selected units [:
[SOURce<hw>\]:BB:ARbitrary:TRIGger:SLUnit](#) as follows:
 SAMPLE: Max = $2^{32}-1$
 SEQUENCE: Max = 1000
 Range: 1 to dynamic
 *RST: 1

Example: See [Example "Managing waveform files"](#) on page 1097

[:SOURce<hw>]:BB:ARbitrary:TRIGger:SLUnit <SLUnit>

Defines the unit for the entry of the length of the signal sequence to be output in the Single trigger mode.

Parameters:

<SLUnit> SEQUENCE | SAMPLE
 *RST: SEQUENCE

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Signal Duration"](#) on page 267

[:SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute

Stops (arms) waveform output.

Example: See [Example "Managing waveform files"](#) on page 1097

Usage: Event

Manual operation: See ["Arm"](#) on page 264

[:SOURce<hw>]:BB:ARbitrary:TRIGger:EXECute

Executes an internal trigger event.

Example: See [Example "Managing waveform files"](#) on page 1097

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 264

**[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:SYNChronize:OUTPut
<Output>**

Enables signal output synchronous to the trigger event.

Parameters:

<Output> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 265

[SOURce<hw>]:BB:ARbitrary:TRIGger:PTIME?

Queries the internal processing time.

The processing time is the elapsed time between the input of the external trigger event and the output of the baseband signal.

Return values:

<ArbTrigProcTime> string

Example: SOURce1:BB:ARbitrary:TRIGger:PTIME?
 // Response: "210 µs"
 The processing time is 210 µs.

Usage: Query only

Manual operation: See ["Processing Time"](#) on page 330

[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:DELAY <Delay>

Delays the trigger event compared to the trigger event in the other basebands.

Parameters:

<Delay> float
 Range: 0 to 2147483647
 Increment: 0.01
 *RST: 0

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:RDELay?

Queries the time a trigger event from the other path is delayed.

Return values:

<ResTimeDelaySec> float
 Range: 0 to 688
 Increment: 0.25E-9
 *RST: 0
 Default unit: s

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Usage: Query only

Manual operation: See ["Actual Trigger Delay/Actual External Delay"](#) on page 267

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:TDElay <ObasTimeDelay>

Specifies the trigger delay for triggering by the signal from the other path.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<ObasTimeDelay> float
 Range: 0 to depends on the symbol rate
 Increment: 0.25E-9
 *RST: 0
 Default unit: s

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OBASeband:INHibit <Inhibit>

For triggering via the other path, specifies the number of samples by which a restart is inhibited.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0
 Default unit: sample

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:DElay:UNIT <TrigDelUnit>

Sets the units the trigger delay is expressed in.

Parameters:

<TrigDelUnit> SAMPlE | TIME
 *RST: SAMPlE

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Manual operation: See ["\(External\) Delay Unit"](#) on page 266

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTErnal]:DElay <Delay>

Specifies the trigger delay in samples.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Delay> float
 Range: 0 to depends on the sample rate
 Increment: 0.01
 *RST: 0
 Default unit: sample
 E.g. 0 to 2147483647 samples (R&S SMW-B10)

Example: see [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:TDElay <ExtTimeDelay>

Specifies the trigger delay for external triggering. The value affects all external trigger signals.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<ExtTimeDelay> float
 Range: 0 to 2147483647 / (clock frequency)
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099.

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:RDElay?

Queries the time (in seconds) an external trigger event is delayed for.

Return values:

<ResTimeDelaySec> float
 Range: 0 to 688
 Increment: 0.25E-9
 *RST: 0

Example: See [Example "To specify delay and inhibit values in time units"](#) on page 1099

Usage: Query only

Manual operation: See ["Actual Trigger Delay/Actual External Delay"](#) on page 267

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:INHibit <Inhibit>

Specifies the number of samples, by which a restart is inhibited.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Inhibit> integer
 Range: 0 to 21.47 * (clock frequency)
 *RST: 0
 Default unit: samples
 E.g. 0 to 2147483647 samples (R&S SMW-B10)

Example: See [Example "Managing waveform files"](#) on page 1097.

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

Marker commands

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE	1147
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime	1147
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime	1147
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATtern	1148
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider	1148
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?	1149
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay	1149
[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DINSec?	1149

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

For detailed description of the regular marker modes, refer to ["Marker modes"](#) on page 242.

Parameters:

<Mode> UNCHanged | RESTart | PULSe | PATtern | RATio
UNCHanged
 A marker signal as defined in the waveform file (tag 'marker mode x') is generated.
 *RST: UNCHanged

Example: See [Example "Managing waveform files"](#) on page 1097.

Manual operation: See ["Marker Mode"](#) on page 330

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime <OnTime>

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of samples in the ON and OFF periods.

^{*)} If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<OffTime> integer
 Range: 1 (R&S SMW-B10) / 1* (R&S SMW-B9) to 14913079
 *RST: 1

Example: see [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Marker Mode"](#) on page 330

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATTern <Pattern>, <BitCount>

Defines the bit pattern used to generate the marker signal.

Parameters:

<Pattern> numeric
 *RST: #H2
 <BitCount> integer
 0 = marker off, 1 = marker on
 Range: 1 to 64
 *RST: 2

Example: See [Example "Managing waveform files"](#) on page 1097.

Manual operation: See ["Marker Mode"](#) on page 330

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

Sets the divider for the pulsed marker signal.

^{*)} If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<Divider> integer
 Range: 2 (R&S SMW-B10) / 2* (R&S SMW-B9) to 1024
 *RST: 2

Example: See [Example "Managing waveform files"](#) on page 1097

Manual operation: See ["Marker Mode"](#) on page 330

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?

Queries the pulse frequency of the pulsed marker signal. The pulse frequency is derived by dividing the symbol rate by the divider.

Return values:

<Frequency> float
 Increment: 0.001

Example: see [Example "Managing waveform files"](#) on page 1097

Usage: Query only

Manual operation: See ["Marker Mode"](#) on page 330

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signals.

Parameters:

<Delay> integer
 Range: 0 to depends on other values
 Increment: 0.001
 *RST: 0
 Default unit: Symbol

Example: See [Example "Managing waveform files"](#) on page 1097.

Manual operation: See ["Delay"](#) on page 269

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DINSec?

Queries the marker delay in microseconds.

You can define a marker delay in samples with [\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay](#).

Return values:

<DelayInS> float
 Range: 0 to 16777215
 Increment: 1E-3
 *RST: 0

Usage: Query only

Manual operation: See ["Delay \(Time\)"](#) on page 331

Clock commands

[SOURce<hw>]:BB:ARbitrary:CLOCK:SOURce <Source>

Selects the clock source:

- **INTernal**: Internal clock reference
- **ELCLock**: External local clock
- **EXTernal** = **ELCLock**: Setting only
Provided for backward compatibility with other Rohde & Schwarz signal generators

Parameters:

<Source> INTernal|ELCLock|EXTernal
*RST: INTernal

Example: See [Example "Managing waveform files"](#) on page 1097.

Options: ELCLock requires R&S SMW-B10

Manual operation: See ["Clock Source"](#) on page 270

[SOURce<hw>]:BB:ARbitrary:CLOCK:MODE <Mode>

Enters the type of externally supplied clock.

Parameters:

<Mode> SAMPlE
*RST: SAMPlE

Example: See [Example "Managing waveform files"](#) on page 1097

Options: R&S SMW-B10

Manual operation: See ["Clock Mode"](#) on page 270

14.19.4.4 SOURce1:BB:MCCW subsystem

This subsystem contains the commands for setting the Multi-Carrier CW signals.



The generation of multi-carrier CW signals requires an instrument equipped with the software options R&S SMW-K61.

Common Suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
ENTity<ch>	1 to 4	Entity in a multiple entity configuration
SOURce<ch>	[1] to 4	Available baseband signals
OUTPut<ch>	1 to 3	Available markers

You can address multiple entities configurations by using the SCPI commands starting with the keyword `SOURce` or the alias commands starting with the keyword `ENTity`.

See also [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

Required options

See [Chapter 5.12.1, "Required options"](#), on page 419

Programming examples

The following examples illustrate how to generate multi-carrier signals for dedicated applications.

Example: Testing the frequency response of a DUT

```
// *****
// Reset the instrument first
// *****
*RST; *CLS

// *****
// Configuring and enabling the multi-carrier signal
// *****
SOURce1:BB:MCCW:CARRier:COUNT 81
SOURce1:BB:MCCW:CARRier:SPACing 1E6
// Set the number of carriers and their distance
// Further settings stay in default state, for example, trigger settings.
SOURce1:BB:MCCW:STATe ON
// Enable signal generation
OUTPut ON
// Enable the signal output

// *****
// Saving the current settings
// *****
MMEMory:MDIR '/var/user/savrcl'
// Create a new directory "savrcl"
*SAV 4
MMEMory:STORe:STATe 4, "/var/user/savrcl/mccw_SSB.savrcltxt"
// Save the current settings in an intermediate memory with number 4.
// Save the settings file in the specified directory, also specify the complete
// path and filename.
```

To visualize the configured signal as in [Example "Testing the frequency response of a DUT"](#) on page 1151, proceed as follows:

1. Switch to local mode with the following command:
`&NREN`
2. To monitor the single carriers, select "Multi-carrier Continuous Wave" > "Carrier Graph".

Example: Testing the image rejection of an SSB filter

This example generates a multi-carrier single sideband signal as shown in [Figure 14-6](#).

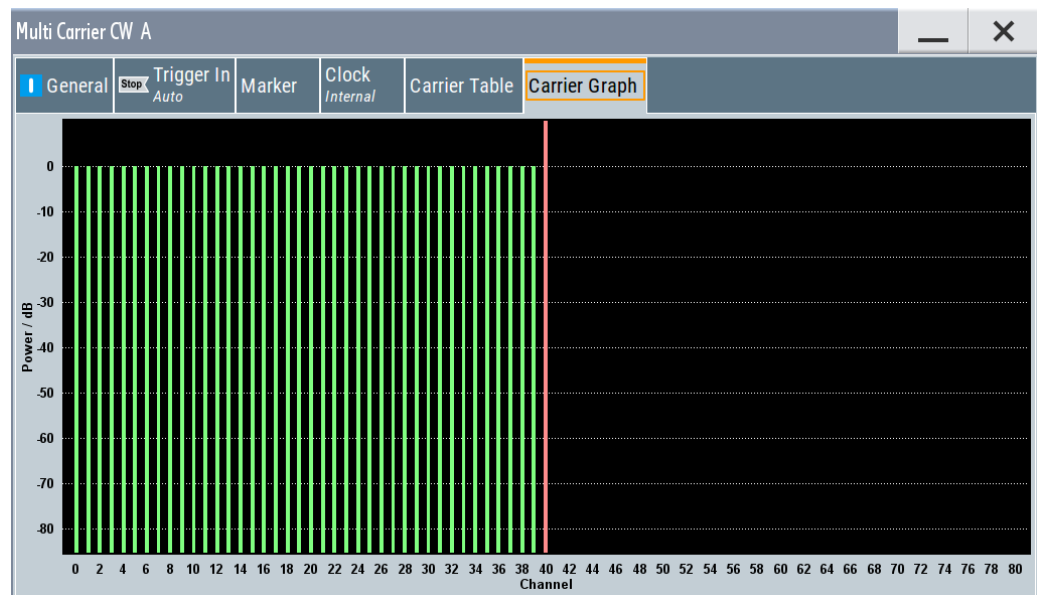


Figure 14-6: Multi-carrier signal to test the image rejection of an SSB filter

```
// *****
// Reset the instrument first
// *****
*RST; *CLS

// *****
// Configuring and enabling the multi-carrier signal
// *****
SOURcel:BB:MCCW:CARRier:COUNT 81
SOURcel:BB:MCCW:CARRier:SPACing 1E6
// Set the number of carriers and their distance
// Further settings stay in default state, for example, trigger settings.
SOURcel:BB:MCCW:EDIT:CARRier:START 40
SOURcel:BB:MCCW:EDIT:CARRier:STOP 80
SOURcel:BB:MCCW:EDIT:CARRier:STATE OFF
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Configure the carrier table for the single sideband signal:
// Set the carriers no. 40 to 80 to "OFF"
SOURcel:BB:MCCW:STATE ON
// Enable signal generation
OUTPut ON
// Enable signal output.
```

Example: Generating a composed multi-carrier signal

This example generates a multi-carrier signal as shown in [Figure 14-7](#).



Figure 14-7: Composed multi-carrier signal

```
// *****
// Reset the instrument first
// *****
*RST; *CLS

// *****
// Configure the multi-carrier signal
// *****
SOURcel:BB:MCCW:CARRier:COUNT 100
SOURcel:BB:MCCW:CARRier:SPACing 500000
// Setup 100 carriers with a spacing of 500kHz
SOURcel:BB:MCCW:CLOCK?
// Return value 128000000
SOURcel:BB:MCCW:CFACTOR:MODE SLOW
SOURcel:BB:MCCW:CFACTOR 3
SOURcel:BB:MCCW:CFACTOR:ACTual?
// Response: "3"

// *****
// Adjust the settings of a group of carriers
// *****
SOURcel:BB:MCCW:CARRier:LIST:POWER -6,-12,-18,-12,-6,0
// Set the power levels for carriers no. 0 to 5 to -10dB,-15dB,-20dB,-15dB,-10dB,0dB
SOURcel:BB:MCCW:CARRier:LIST:STATE ON,ON,ON,ON,ON,ON,OFF,ON
// Set the state of the carriers no. 0 to 7
SOURcel:BB:MCCW:EDIT:CARRier:START 15
SOURcel:BB:MCCW:EDIT:CARRier:STOP 35
SOURcel:BB:MCCW:EDIT:CARRier:STATE ON
SOURcel:BB:MCCW:EDIT:CARRier:POWER:STAR -10
SOURcel:BB:MCCW:EDIT:CARRier:POWER:STEP 0.5
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
```

```

// Activates the carriers no. 15 to 35
// Increase the power in 0.5dB steps starting with a power level of -10dB
// Apply the settings
SOURcel:BB:MCCW:CARRier:POWer 38,0
SOURcel:BB:MCCW:CARRier:STATe 38,1
// Set a power level of 0dB for carrier no. 38 and activates it
SOURcel:BB:MCCW:EDIT:CARRier:STARt 41
SOURcel:BB:MCCW:EDIT:CARRier:STOP 61
SOURcel:BB:MCCW:EDIT:CARRier:STATe ON
SOURcel:BB:MCCW:EDIT:CARRier:POWer:STARt 0
SOURcel:BB:MCCW:EDIT:CARRier:POWer:STEP -0.5
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Activates the carriers no. 41 to 61
// Decrease the power in 0.5dB steps starting with a power level of 0dB
// Apply the settings.
SOURcel:BB:MCCW:EDIT:CARRier:STARt 70
SOURcel:BB:MCCW:EDIT:CARRier:STOP 85
SOURcel:BB:MCCW:EDIT:CARRier:STATe ON
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Activates the carriers no. 70 to 85.
// Apply the settings.

// *****
// Configuring the clock settings
// *****
SOURcel:BB:MCCW:CLOCK:SOURce INTernal

// *****
// Configuring and enabling marker signals
// *****
SOURcel:BB:MCCW:TRIGger:OUTPut1:MODE REStart
SOURcel:BB:MCCW:TRIGger:OUTPut2:MODE PULSe
SOURcel:BB:MCCW:TRIGger:OUTPut2:PULSe:DIVider 5
SOURcel:BB:MCCW:TRIGger:OUTPut2:PULSe:FREQuency?
SOURcel:BB:MCCW:TRIGger:OUTPut3:MODE PATtern
SOURcel:BB:MCCW:TRIGger:OUTPut3:PATtern #HE0F52,20
// SOURcel:BB:MCCW:TRIGger:OUTPut1:MODE RATio
// SOURcel:BB:MCCW:TRIGger:OUTPut1:ONTime 40
// SOURcel:BB:MCCW:TRIGger:OUTPut1:OFFTime 20
SOURcel:BB:MCCW:TRIGger:OUTPut2:DELay 16

// *****
// Configuring and enabling signal triggering
// *****
SOURcel:BB:MCCW:TRIGger:SEQuence SINGLE
SOURcel:BB:MCCW:TRIGger:SLENgth 200
// The first 200 samples of the current waveform will be output after the next
// trigger event.
SOURcel:BB:MCCW:TRIGger:SEQuence ARETrigger
SOURcel:BB:MCCW:TRIGger:SOURce INTernal
// SOURcel:BB:MCCW:TRIGger:SOURce EGT1

```

```
// Provide an external global trigger signal at the connector that expects
// an external global trigger signal.
// SOURce1:BB:MCCW:TRIGger:EXTeRnal:SYNChronize:OUTPut ON
// SOURce1:BB:MCCW:TRIGger:EXTeRnal:DELaY 200
// SOURce1:BB:MCCW:TRIGger:EXTeRnal:INHibit 100

// SOURce1:BB:MCCW:TRIGger:SOURce OBASeband
// The internal trigger signal from the other path must be used
// SOURce1:BB:MCCW:TRIGger:OBASeband:DELaY 25
// SOURce1:BB:MCCW:TRIGger:OBASeband:INHibit 10

// *****
// Applying the settings and enabling signal generation
// *****

*TRG
SOURce1:BB:MCCW:STATe ON
// Stop the internal trigger manually.
SOURce1:BB:MCCW:TRIGger:ARM:EXECute
// Execute manual internal trigger, i.e. restarting signal generation
SOURce1:BB:MCCW:TRIGger:EXECute
SOURce1:BB:MCCW:TRIGger:RMODe?
// Response: "RUN"
```

General commands

[SOURce<hw>]:BB:MCCW:PRESet.....	1155
[SOURce<hw>]:BB:MCCW:STATe.....	1156
[SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	1156
[SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	1156
[SOURce<hw>]:BB:MCCW:CLOCK?.....	1157
[SOURce<hw>]:BB:MCCW:CFACTOR:MODE.....	1157
[SOURce<hw>]:BB:MCCW:CFACTOR.....	1157
[SOURce<hw>]:BB:MCCW:CFACTOR:ACTual?.....	1157
[SOURce<hw>]:BB:MCCW:CARRier:STATe.....	1158
[SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe.....	1158
[SOURce<hw>]:BB:MCCW:CARRier:PHASe.....	1159
[SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe.....	1159
[SOURce<hw>]:BB:MCCW:CARRier:POWer.....	1160
[SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer.....	1160
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START].....	1160
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START].....	1160
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:START.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe.....	1162
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute.....	1162

[SOURce<hw>]:BB:MCCW:PRESet

Sets all multi carrier signal parameters to their default values.

Example: See ["Programming examples"](#) on page 1151

Usage: Event

Manual operation: See ["Set to Default"](#) on page 421

[:SOURce<hw>]:BB:MCCW:STATe <State>

Enables/disables the multi carrier CW signal.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["State"](#) on page 420

[:SOURce<hw>]:BB:MCCW:CARRier:COUNT <Count>

Sets the number of carriers in the multi carrier CW signal.

Parameters:

<Count> integer

Range: 1 to 160001

*RST: 64

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Number of Carriers"](#) on page 421

[:SOURce<hw>]:BB:MCCW:CARRier:SPACing <Spacing>

Sets the carrier spacing.

Parameters:

<Spacing> float

Value range depends on the available bandwidth and the number of carriers, see ["Cross-reference between total bandwidth, carrier spacing, and number of carriers"](#) on page 421.

Range: 0 to depends on the installed options, e.g. 120E6 (R&S SMW-B10)

Increment: 0.01

*RST: 10E3

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Spacing"](#) on page 421

[[:SOURce<hw>]:BB:MCCW:CLOCK?

Queries the output clock rate. The output clock rate depends on the number of carriers and on the selected carrier spacing.

Return values:

<Clock> float
 Range: 0 to Max
 Increment: 1E-3
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Usage: Query only

Manual operation: See ["Clock Frequency"](#) on page 421

[[:SOURce<hw>]:BB:MCCW:CFACtor:MODE <Mode>

Sets the mode by which automatic settings minimize the crest factor or hold it at a chosen value.

Parameters:

<Mode> OFF | CHIRp | SLOW
 SLOW
 corresponds to the manual control "Target Crest"
 *RST: CHIRp

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Optimize Crest Factor Mode"](#) on page 422

[[:SOURce<hw>]:BB:MCCW:CFACtor <CFactor>

Sets the desired crest factor, if the optimization mode target crest factor is used.

Parameters:

<CFactor> float
 Range: 0 to 30
 Increment: 0.01
 *RST: 3

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Desired Crest Factor"](#) on page 422

[[:SOURce<hw>]:BB:MCCW:CFACtor:ACTual?

Queries the actual Crest Factor for optimization mode target crest.

Return values:

<Actual> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 3

Example: See ["Programming examples"](#) on page 1151

Usage: Query only

[:SOURce<hw>]:BB:MCCW:CARRier:STATe <CarrierIndex>, <State>

Switches the selected carrier on or off.

Parameters:

<CarrierIndex> integer
 Range: 0 to lastCarrier
 <State> 1 | ON | 0 | OFF
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe <Stat0[,Stat1..]>

[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe? <Start>, <Count>

Switches the carrier on or off with the aid of a value list.

The first value in the list is assigned to the carrier with index 0, the second value to the carrier with index 1, etc. The maximum length corresponds to the maximum number of multi carriers. There is no need to enter all the values every time. Values not set by the value list are set with the default values provided they have already been explicitly set by a previous command. If this is the case, the values continue to apply until overwritten.

Setting parameters:

<Stat0[,Stat1..]> ON | OFF

Query parameters:

<Start> integer
 start carrier index
 Range: 0 to lastCarrier
 <Count> integer
 number of carriers in the carrier range, starting from the
 <Start> carrier
 Range: 1 to lastCarrier

Return values:

<State[,State..]> select

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

[:SOURce<hw>]:BB:MCCW:CARRier:PHASe <CarrierIndex>, <Phase>

For disabled optimization of the crest factor, sets the start phase of the selected carrier.

Parameters:

<CarrierIndex> integer
 Range: 0 to lastCarrier

<Phase> float
 Range: 0 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe <Phas0[,Phas1..]>

[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe? [<Start>[, <Count>]]

Sets the start phase of the carrier with the aid of a value list.

Setting parameters:

<Phas0[,Phas1..]> float
 Range: 0 to 360
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Query parameters:

<Start> integer
 start carrier index
 Range: 0 to lastCarrier

<Count> integer
 number of carriers in the carrier range, starting from the
 <Start> carrier
 Range: 1 to max

Return values:

<Phas[,Phas..]> float

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

```
[ :SOURce<hw>]:BB:MCCW:CARRier:POWer <CarrierIndex>, <Power>
```

Sets the power of the selected carrier.

Parameters:

<CarrierIndex>	integer
	Range: 0 to lastCarrier
<Power>	float
	Range: -80 to 0
	Increment: 0.01
	*RST: 0

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

```
[ :SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer <Pow0[,Pow1..]>]
[ :SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer? <Start>, <Count>
```

Sets the power of the carrier with the aid of a value list.

Setting parameters:

<Pow0[,Pow1..]>	float
	Increment: 0.01
	*RST: 0 dB

Query parameters:

<Start>	integer
	start carrier index
	Range: 0 to lastCarrier
<Count>	integer
	number of carriers in the carrier range, starting from the <Start> carrier
	Range: 1 to lastCarrier

Return values:

<Pow[,Pow..]>	float
---------------	-------

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Table"](#) on page 424

```
[ :SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START] <Start>
[ :SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START] <Start>
```

Sets the power/pahse for the starting carrier. The power of the remaining carriers is stepped up or down by the power specified with the [\[:SOURce<hw>\]:BB:MCCW:EDIT:CARRier:POWer:STEP](#) command.

Parameters:

<Start> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Power Start"](#) on page 424

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:PHASE:STEP <Step>

For disabled optimization of the crest factor, sets the step width by which the start phase of the carriers in the defined carrier range is incremented.

Parameters:

<Step> float
 Range: -359.99 to 359.99
 Increment: 0.01
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Phase Step"](#) on page 424

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:POWER:STEP <Step>

Sets the step width by which the starting power of the carriers in the defined carrier range is incremented.

Parameters:

<Step> float
 Range: -80 to 80
 Increment: 0.01
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Power Step"](#) on page 424

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:START <Start>**[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:STOP <Stop>**

Defines the first/last carrier in the carrier range to which joint configuration applies.

Parameters:

<Stop> integer
 Range: 0 to 8191
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier Start/Stop"](#) on page 423

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe <State>

Switches all the carriers in the selected carrier range on or off.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Carrier State"](#) on page 423

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute

Adopts the settings for the carrier range.

Example: See ["Programming examples"](#) on page 1151

Usage: Event

Manual operation: See ["Accept"](#) on page 424

Trigger commands

[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence	1162
[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce	1163
[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?	1163
[:SOURce<hw>]:BB:MCCW:TRIGger:TIME:DATE	1163
[:SOURce<hw>]:BB:MCCW:TRIGger:TIME:TIME	1164
[:SOURce<hw>]:BB:MCCW:TRIGger:TIME[:STATe]	1164
[:SOURce<hw>]:BB:MCCW:TRIGger:SLENgth	1165
[:SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute	1165
[:SOURce<hw>]:BB:MCCW:TRIGger:EXECute	1165
[:SOURce<hw>]:BB:MCCW:TRIGger:EXTErnal:SYNChronize:OUTPut	1165
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DELaY	1166
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit	1166
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTErnal<ch>]:DELaY	1166
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTErnal<ch>]:INHibit	1167

[[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence <Sequence>

Selects the trigger mode. For detailed description of the trigger modes, refer to ["Impact of the trigger modes on the signal generation"](#) on page 247.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGLE
 *RST: AUTO

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Mode"](#) on page 263

[[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTernal)
- External trigger signal via one of the local or global connectors
 - EGT1 | EGT2: External global trigger
 - EGC1 | EGC2: External global clock
 - ELTRigger: External local trigger
 - ELClock: External local clock
- Internal triggering by a signal from the other basebands (INTA | INTB)
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- OBASeband | BEXTernal | EXTernal: Setting only
 Provided only for backward compatibility with other Rohde & Schwarz signal generators.
 The R&S SMW accepts these values and maps them automatically as follows:
 EXTernal = EGT1, BEXTernal = EGT2, OBASeband = INTA or INTB
 (depending on the current baseband)

Parameters:

<Source> INTB|INTernal|OBASeband|EGT1|EGT2|EGC1|EGC2|ELTRigger|INTA|ELClock|BEXTernal|EXTernal | BBSY
 *RST: INTernal

Example: See ["Programming examples"](#) on page 1151

Options: ELTRigger|ELClock require R&S SMW-B10
 BBSY require R&S SMW-B9

Manual operation: See ["Source"](#) on page 265

[[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?

Queries the status of signal generation for all trigger mode, if multi-carrier CW generation is on.

Return values:

<RMode> STOP | RUN

Example: See ["Programming examples"](#) on page 1151

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 263

[[:SOURce<hw>]:BB:MCCW:TRIGger:TIME:DATE <Year>, <Month>, <Day>

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Year>	integer
	Range: 1980 to 9999
<Month>	integer
	Range: 1 to 12
<Day>	integer
	Range: 1 to 31

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[SOURce<hw>]:BB:MCCW:TRIGger:TIME:TIME <Hour>, <Minute>, <Second>

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<Hour>	integer
	Range: 0 to 23
<Minute>	integer
	Range: 0 to 59
<Second>	integer
	Range: 0 to 59

Example: See [Example"Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Trigger Time"](#) on page 264

[SOURce<hw>]:BB:MCCW:TRIGger:TIME[:STATe] <State>

Activates time-based triggering with a fixed time reference. If activated, the R&S SMW triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example "Configure a time-based trigger signal"](#) on page 1139.

Manual operation: See ["Time Based Trigger"](#) on page 264

[[:SOURce<hw>]:BB:MCCW:TRIGger:SLENGth <SLength>

Defines the length of the signal sequence to be output in the "Single" trigger mode.

Parameters:

<SLength> integer
 Range: 1 to 1000
 *RST: 1
 Default unit: samples

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Signal Duration"](#) on page 267

[[:SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute

Stops signal generation.

Example: See ["Programming examples"](#) on page 1151

Usage: Event

Manual operation: See ["Arm"](#) on page 264

[[:SOURce<hw>]:BB:MCCW:TRIGger:EXECute

Executes a trigger.

Example: See ["Programming examples"](#) on page 1151

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 264

[[:SOURce<hw>]:BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut <Output>

Enables signal output synchronous to the trigger event.

Parameters:

<Output> 1 | ON | 0 | OFF
 *RST: 1

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 265

[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DELay <Delay>

Specifies the trigger delay for external triggering.

Parameters:

<Delay> float
 Range: 0 to 2147483647
 Increment: 0.01
 *RST: 0
 Default unit: samples

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit <Inhibit>

Specifies the number of samples by which a restart is inhibited following a trigger event from the other path.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:DELay <Delay>

Specifies the trigger delay in samples.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Delay> float
 Range: 0 to 2147483647
 Increment: 0.01
 *RST: 0
 Default unit: samples
 E.g. 0 to 2147483647 samples (R&S SMW-B10)

Example: See ["Programming examples"](#) on page 1151.

Manual operation: See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 266

[[:SOURce<hw>]:BB:MCCW:TRIGger[:EXternal<ch>]:INHibit <Inhibit>

Specifies the number of samples, by which a restart is inhibited following an external trigger event.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 252.

Parameters:

<Inhibit> integer
 Range: 0 to 21.47 * (clock frequency)
 *RST: 0
 Default unit: sample
 E.g. 0 to 2147483647 samples (R&S SMW-B10)

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["External Inhibit/Trigger Inhibit"](#) on page 266

Marker commands

[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE	1167
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime	1167
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime	1167
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATtern	1168
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider	1168
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?	1168
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DElay	1169

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output. For detailed description of the regular marker modes, refer to ["Marker modes"](#) on page 242.

Parameters:

<Mode> REStart | PULSe | PATtern | RATio
 *RST: REStart

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Mode"](#) on page 268

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime <OnTime>
[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of samples in the off period of the corresponding marker signal.

^{*)} If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<OffTime> integer
 Range: 1 (R&S SMW-B10) / 1* (R&S SMW-B9) to 16777215
 *RST: 1

Example: see ["Programming examples"](#) on page 1151

Manual operation: See ["Mode"](#) on page 268

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATtern <Pattern>, <BitCount>

Defines the bit pattern used to generate the marker signal.

Parameters:

<Pattern> numeric
 *RST: #H2
 <BitCount> integer
 0 = marker off, 1 = marker on
 Range: 1 to 64
 *RST: 2

Example: See ["Programming examples"](#) on page 1151.

Manual operation: See ["Mode"](#) on page 268

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

Sets the divider for pulse marker mode.

*) If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See ["Marker minimum duration"](#) on page 244.

Parameters:

<Divider> integer
 Range: 2 (R&S SMW-B10) / 2* (R&S SMW-B9) to 1024
 *RST: 2

Example: See ["Programming examples"](#) on page 1151

Manual operation: See ["Mode"](#) on page 268

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?

Queries the pulse frequency of the pulsed marker signal.

Return values:

<Frequency> float
Increment: 1E-3

Example: see ["Programming examples"](#) on page 1151

Usage: Query only

Manual operation: See ["Mode"](#) on page 268

[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signals, expressed as number of samples.

Parameters:

<Delay> float
Range: 0 to 16777215
Increment: 0.001
*RST: 0

Example: See ["Programming examples"](#) on page 1151.

Manual operation: See ["Delay"](#) on page 269

Clock commands

[\[:SOURce<hw>\]:BB:MCCW:CLOCK:SOURce.....](#) 1169
[\[:SOURce<hw>\]:BB:MCCW:CLOCK:MODE.....](#) 1169

[:SOURce<hw>]:BB:MCCW:CLOCK:SOURce <Source>

Selects the clock source:

- `INTernal`: Internal clock reference
- `ELCLock`: External local clock
- `EXTernal` = `ELCLock`: Setting only
Provided for backward compatibility with other Rohde & Schwarz signal generators

Parameters:

<Source> INTernal|ELCLock|EXTernal
*RST: INTernal

Example: See ["Programming examples"](#) on page 1151.

Options: ELCLock requires R&S SMW-B10

Manual operation: See ["Clock Source"](#) on page 270

[:SOURce<hw>]:BB:MCCW:CLOCK:MODE <Mode>

Sets the type of externally supplied clock.

Parameters:

<Mode> SAMPLE
 *RST: SAMPLE

Example: See ["Programming examples"](#) on page 1151.

Options: R&S SMW-B10

Manual operation: See ["Clock Mode"](#) on page 270

14.19.4.5 SOURce:AWGN subsystem

The SOURce:AWGN subsystem contains the commands for setting the noise generator.

Suffixes in the keywords ENTity<ch> and SOURce<hw>

You can address multiple entities configurations by using the SCPI commands starting with the keyword SOURce or the alias commands starting with the keyword ENTity.

Table 14-6: Value ranges of the suffixes ENTity<ch> and SOURce<hw> in advanced configuration with multiple entities

SCPI Syntax	ENTity<ch>	SOURce<hw>
SOURce<hw>:AWGN:...	-	1 to 8
ENTity<ch>:SOURce<hw>:AWGN:...	1 to 8	1 to 4

The meaning of the numeric suffix to SOURce depends on:

- The presence of the keyword ENTity
- The selected :SCONfiguration:MODE
- The enabled MIMO configuration (:SCONfiguration:FADing)
- The state of the [:SOURce<hw>]:AWGN:CMODE[:STATE]



See the example in [Chapter 14.3, "SCPI command aliases for advanced mode with multiple entities"](#), on page 909.

Required options

See [Chapter 6.2.1, "Required options"](#), on page 435.

Programming Examples

Example: Enabling/disabling the AWGN generator and the streams

The following example shows the difference between working with coupled and uncoupled streams.

```
SCONfiguration:MODE ADVanced
SCONfiguration:FADing MIMO4X4
```

```
// coupled mode; the AWGN generator and all four streams are enabled
```

```

SOURce1:AWGN:CMODE:STATE ON
SOURce1:AWGN:STATE ON

// uncoupled mode; the streams are configured individually
SOURce1:AWGN:CMODE:STATE OFF
SOURce1:AWGN:STATE?
// Response: 1
SOURce2:AWGN:STATE?
// Response: 0
SOURce3:AWGN:STATE?
// Response: 0
SOURce4:AWGN:STATE?
// Response: 0
// stream B, C and D are disabled
SOURce4:AWGN:STATE ON

```

Example: Generating a pure noise signal

The following example generates a pure noise signal with specified bandwidth and noise level.

```

SCONfiguration:MODE STANdard

SOURce1:AWGN:MODE ONLY
SOURce1:AWGN:BWIDth 3840000
SOURce1:AWGN:BWIDth:RATio 2
SOURce1:AWGN:STATE ON
SOURce1:AWGN:BWIDth:NOISe?
// Response: 7680000
SOURce1:AWGN:FREQuency:CENTer:OFFSet 1000000
// Shifts the noise signal by 1 MHz relative to the carrier frequency.
SOURce1:AWGN:DISP:MODE RFA
SOURce1:AWGN:POWer:NOISe -80
// SOURce1:POWer:LEVel:IMMediate:AMPlitude?
// Response: -80
SOURce1:AWGN:POWer:NOISe:TOTal?

```

Example: Generating a CW interferer signal

The following example generates a CW interferer signal with specified target frequency and level.

```

SCONfiguration:MODE ADVanced
SCONfiguration:FADing MIMO2X2
SOURce:AWGN:CMODE:STATE OFF

SOURce2:AWGN:MODE CW
SOURce2:AWGN:FREQuency:TARGet 20000000
SOURce2:AWGN:STATE ON
SOURce2:AWGN:FREQuency:RESult?

```

```

SOURce2:AWGN:POWer:RMODe CARRier
SOURce2:AWGN:CNRatio 10
SOURce2:AWGN:POWer:CARRier -80
// the Level display indicates the PEP of the carrier
// SOURce2:POWer:LEVel:IMMediate:AMPlitude?
// Response: -80
// Query the power of the interfering signal
SOURce2:AWGN:POWer:NOISe?
// Response: -90
SOURce2:AWGN:POWer:SUM?
// Response: -79.5860731484178
SOURce2:AWGN:POWer:SUM:PEP?
// Response: -80

```

Example: Generating an additive noise signal

The following example shows how to adjust the AWGN settings to generate a signal with the following characteristics:

- The carrier signal is an uplink EUTRA/LTE signal with:
 - "Channel Bandwidth = 1.4 GHz", i.e. "Occupied Bandwidth = 1.080 MHz"
 - "RF Frequency = 1.950 GHz"
 - "RF Level = -76 dBm"
- Required is an SNR of 12.7 dB

```

SCONfiguration:MODE STANDARD

SOURcel:FREQuency:CW 1950000000
SOURcel:POWer:LEVel:IMMediate:AMPlitude -76

SOURcel:AWGN:MODE ADD
// set the system bandwidht to the occupied bandwidth
SOURcel:AWGN:BWIDth 1080000
SOURcel:AWGN:BWIDth:RATio 1.5
SOURcel:AWGN:STATe ON
SOURcel:AWGN:BWIDth:NOISe?
// Response: 1620000

SOURcel:AWGN:DISP:MODE RFA
SOURcel:AWGN:POWer:MODE CN
SOURcel:AWGN:POWer:RMODe CARRier
SOURcel:AWGN:BRATe?
// Response: 100000
SOURcel:AWGN:CNRatio 12.7
SOURcel:AWGN:ENRatio?
// Response: 23.0342375548695
SOURcel:AWGN:POWer:CARRier?
// Response: -76
// the Level display indicates the PEP of the carrier

```

```
// Query the resulting noise power, in the system and total bandwidth
SOURce1:AWGN:POWer:NOISe?
// Response: -88.7
SOURce1:AWGN:POWer:NOISe:TOTal?
// Response: -88.7
// Query the carrier+noise power and PEP
SOURce1:AWGN:POWer:SUM?
// Response: -75.7728170942726
SOURce1:AWGN:POWer:SUM:PEP?
// Response: -76
```

General commands

[:SOURce<hw>]:AWGN:CMODE[:STATe]	1173
[:SOURce<hw>]:AWGN:STATe	1173
[:SOURce<hw>]:AWGN:MODE	1174
[:SOURce<hw>]:AWGN:BWIDth	1174
[:SOURce<hw>]:AWGN:BWIDth:RATio	1174
[:SOURce<hw>]:AWGN:BWIDth:NOISe?	1175
[:SOURce<hw>]:AWGN:DISP:MODE	1175
[:SOURce<hw>]:AWGN:POWer:MODE	1175
[:SOURce<hw>]:AWGN:POWer:RMODE	1176
[:SOURce<hw>]:AWGN:BRATe	1176
[:SOURce<hw>]:AWGN:CNRatio	1176
[:SOURce<hw>]:AWGN:ENRatio	1176
[:SOURce<hw>]:AWGN:POWer:CARRier	1177
[:SOURce<hw>]:AWGN:POWer:NOISe	1177
[:SOURce<hw>]:AWGN:POWer:NOISe:TOTal?	1177
[:SOURce<hw>]:AWGN:POWer:SUM?	1177
[:SOURce<hw>]:AWGN:POWer:SUM:PEP?	1178
[:SOURce<hw>]:AWGN:FREQuency:CENTer:OFFSet	1178
[:SOURce<hw>]:AWGN:FREQuency:TARGet	1178
[:SOURce<hw>]:AWGN:FREQuency:RESult?	1179

[\[:SOURce<hw>\]:AWGN:CMODE\[:STATe\]](#) <State>

Couples the configuration of all streams.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 1

Example: See [Example "Enabling/disabling the AWGN generator and the streams"](#) on page 1170

Manual operation: See ["Coupled Mode"](#) on page 444

[\[:SOURce<hw>\]:AWGN:STATe](#) <State>

Activates or deactivates the AWGN generator or the corresponding stream.

See also ["Suffixes in the keywords ENTity<ch> and SOURce<hw>"](#) on page 1170.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Enabling/disabling the AWGN generator and the streams"](#) on page 1170.s

Manual operation: See ["State"](#) on page 443

[:SOURce<hw>]:AWGN:MODE <Mode>

Determines how the interfering signal is generated.

Parameters:

<Mode> ONLY | ADD | CW

ADD

The AWGN noise signal is added to the baseband signal.

ONLY

The pure AWGN noise signal is modulated to the carrier. The connection to the baseband is interrupted

CW

The sine interfering signal is added to the baseband signal.

*RST: ADD

Example: See [Example"Generating an additive noise signal"](#) on page 1172

Manual operation: See ["Mode"](#) on page 444

[:SOURce<hw>]:AWGN:BWIDth <BWidth>

Sets the system bandwidth.

Parameters:

<BWidth> float
 Range: 1000 to 80E6
 Increment: 100
 *RST: 3.84E6

Example: See [Example"Generating an additive noise signal"](#) on page 1172.

Manual operation: See ["System Bandwidth"](#) on page 444

[:SOURce<hw>]:AWGN:BWIDth:RATio <Ratio>

Sets the ratio of minimum real noise bandwidth to system bandwidth, see also ["Signal and noise parameters"](#) on page 437.

Parameters:

<Ratio> float
 Range: 1 to Max
 Increment: 0.1
 *RST: 1

Example: see [Example"Generating an additive noise signal"](#) on page 1172.

Manual operation: See ["Minimum Noise/System Bandwidth Ratio"](#) on page 445

[SOURce<hw>]:AWGN:BWIDth:NOISe?

Queries the real noise bandwidth.

Return values:

<Noise> float
 Range: 0 to 200E6
 Increment: 100
 *RST: 0

Example: See [Example"Generating an additive noise signal"](#) on page 1172.

Usage: Query only

Manual operation: See ["Noise Bandwidth"](#) on page 451

[SOURce<hw>]:AWGN:DISP:MODE <Mode>

Sets the output to that the AWGN settings are related.

Parameters:

<Mode> RFA | RFB | IQOUT1 | IQOUT2 | BBMM1 | BBMM2 | FADER1 |
 FADER2 | FADER3 | FADER4
 *RST: RF

Example: See [Example"Generating an additive noise signal"](#) on page 1172.

Manual operation: See ["Show Powers For Output"](#) on page 446

[SOURce<hw>]:AWGN:POWer:MODE <Mode>

Selects the mode for setting the noise level.

Parameters:

<Mode> CN | SN | EN
 *RST: SN

Example: see [Example"Generating an additive noise signal"](#) on page 1172

Manual operation: See ["Set Noise Power Via"](#) on page 447

[[:SOURce<hw>]:AWGN:POWer:RMODE <RMode>

Determines whether the carrier or the noise level is kept constant when the C/N value or Eb/N0 value is changed.

Parameters:

<RMode> CARRier | NOISe
*RST: CARRier

Example: See [Example "Generating an additive noise signal"](#) on page 1172

Manual operation: See ["Reference Mode"](#) on page 447

[[:SOURce<hw>]:AWGN:BRATe <BRate>

Sets the bit rate used for calculation of bit energy to noise power ratio.

Valid units are bps, kbps and mabps as well as b/s, kb/s and mab/s.

Parameters:

<BRate> float
Range: 400 to depends on the installed options
Increment: 0.001
*RST: 100000

Example: see [Example "Generating an additive noise signal"](#) on page 1172

Manual operation: See ["Bit Rate"](#) on page 447

[[:SOURce<hw>]:AWGN:CNRatio <CnRatio>

Sets the carrier/interferer ratio.

Parameters:

<CnRatio> float
Range: -50 to 45
Increment: 0.01
*RST: 0

Example: See [Example "Generating an additive noise signal"](#) on page 1172

Manual operation: See ["Carrier/Noise Ratio, Signal/Noise Ratio"](#) on page 448

[[:SOURce<hw>]:AWGN:ENRatio <EnRatio>

Sets the ratio of bit energy to noise power density.

Parameters:

<EnRatio> float
Range: -50 to depends on the installed options
Increment: 0.01
*RST: 15.84
Default unit: dB

Example: See [Example"Generating an additive noise signal"](#) on page 1172

Manual operation: See "[E_b/N₀](#)" on page 448

[[:SOURce<hw>]:AWGN:POWer:CARRier <Carrier>

Sets the carrier power.

Parameters:

<Carrier> float
Increment: 0.01
*RST: 0

Example: see [Example"Generating an additive noise signal"](#) on page 1172

Manual operation: See "[Carrier Power, Signal Power](#)" on page 448

[[:SOURce<hw>]:AWGN:POWer:NOISe <Noise>

Sets the power of the noise signal in the system respectively total bandwidth.

Parameters:

<Noise> float
Increment: 0.01

Example: see [Example"Generating an additive noise signal"](#) on page 1172

Manual operation: See "[Noise Power \(System Bandwidth\), Interferer Power](#)" on page 449

[[:SOURce<hw>]:AWGN:POWer:NOISe:TOTal?

Queries the noise level in the total bandwidth.

Return values:

<Total> float
Range: -145 to 20
Increment: 0.01
*RST: -30

Example: see [Example"Generating an additive noise signal"](#) on page 1172

Usage: Query only

Manual operation: See "[Noise Power \(Total Bandwidth\)](#)" on page 450

[[:SOURce<hw>]:AWGN:POWer:SUM?

Queries the overall power of the noise/interferer signal plus useful signal

Return values:

<Sum> float
 Range: -145 to 20
 Increment: 0.01
 *RST: 0

Example: see [Example "Generating an additive noise signal"](#) on page 1172

Usage: Query only

Manual operation: See ["Carrier + Noise Power, Signal + Noise Power \(System Bandwidth\), Carrier + Interferer Power, Signal + Interferer Power"](#) on page 450

[SOURce<hw>]:AWGN:POWer:SUM:PEP?

Queries the peak envelope power of the overall signal comprised of noise signal plus useful signal.

Return values:

<Pep> float
 Range: -145 to 20
 Increment: 0.01
 *RST: 0

Example: see [Example "Generating an additive noise signal"](#) on page 1172

Usage: Query only

Manual operation: See ["Carrier + Noise PEP, Signal + Noise PEP \(Total Bandwidth\), Carrier + Interferer PEP, Signal + Interferer PEP"](#) on page 450

[SOURce<hw>]:AWGN:FREQuency:CENTer:OFFSet <CenterFreqOffs>

Defines the frequency offset of the noise signal relative to the carrier center frequency.

Parameters:

<CenterFreqOffs> float
 Range: -40E6 to 40E6
 Increment: 0.01
 *RST: 0

Example: See [Example "Generating a pure noise signal"](#) on page 1171.

Manual operation: See ["Center Frequency Offset"](#) on page 445

[SOURce<hw>]:AWGN:FREQuency:TARGet <Target>

Sets the desired frequency of the sine wave.

Parameters:

<Target> float
 Range: -40E6 to 40E6
 Increment: 0.01
 *RST: 0

Example: see [Example "Generating a CW interferer signal"](#) on page 1171

Manual operation: See ["Target CW Frequency Offset"](#) on page 445

[SOURce<hw>]:AWGN:FREQuency:RESult?

Queries the actual frequency of the sine wave.

Return values:

<Result> float
 Range: -40E6 to 40E6
 Increment: 0.01
 *RST: 0

Example: see [Example "Generating a CW interferer signal"](#) on page 1171

Usage: Query only

Manual operation: See ["Resulting CW Frequency Offset"](#) on page 451

14.19.4.6 SOURce:BB:IMPairment subsystem

This subsystem contains the commands for the analog and digital I/Q impairments.

Suffixes

Suffix	Value range	Description
RF<ch>	1 to 2	Digital impairments for RF connector
IQOutput<ch>	1 to 2	IQ connector
BBMM<ch>	1 to 2	DIG IQ connector
FADer<ch>	1 to 4	DIG IQ connector

Required options

See [Chapter 6.4.1, "Required options"](#), on page 460.

Commands:

[SOURce]:BB:IMPairment:BBMM<ch>:DELaY..... 1180
 [SOURce]:BB:IMPairment:FADer<ch>:DELaY..... 1180
 [SOURce]:BB:IMPairment:IQOutput<ch>:DELaY..... 1180
 [SOURce]:BB:IMPairment:RF<ch>:DELaY..... 1180
 [SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude]..... 1181
 [SOURce]:BB:IMPairment:BBMM<ch>:IQRatio[:MAGNitude]..... 1181

[SOURce]:BB:IMPairment:FADer<ch>:IQRatio[:MAGNitude]	1181
[SOURce]:BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude]	1181
[SOURce]:BB:IMPairment:RF<ch>:IQRatio[:MAGNitude]	1181
[SOURce<hw>]:IQ:IMPairment:LEAKage:I	1181
[SOURce<hw>]:IQ:IMPairment:LEAKage:Q	1181
[SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:I	1181
[SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:Q	1181
[SOURce]:BB:IMPairment:FADer<ch>:LEAKage:I	1182
[SOURce]:BB:IMPairment:FADer<ch>:LEAKage:Q	1182
[SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:I	1182
[SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:Q	1182
[SOURce]:BB:IMPairment:RF<ch>:LEAKage:I	1182
[SOURce]:BB:IMPairment:RF<ch>:LEAKage:Q	1182
[SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLE]	1182
[SOURce]:BB:IMPairment:BBMM<ch>:QUADrature[:ANGLE]	1182
[SOURce]:BB:IMPairment:FADer<ch>:QUADrature[:ANGLE]	1182
[SOURce]:BB:IMPairment:IQOutput<ch>:QUADrature[:ANGLE]	1182
[SOURce]:BB:IMPairment:RF<ch>:QUADrature[:ANGLE]	1182
[SOURce]:BB:IMPairment:BBMM<ch>:SKEW	1182
[SOURce]:BB:IMPairment:FADer<ch>:SKEW	1182
[SOURce]:BB:IMPairment:IQOutput<ch>:SKEW	1183
[SOURce]:BB:IMPairment:RF<ch>:SKEW	1183
[SOURce<hw>]:IQ:IMPairment[:STATE]	1183
[SOURce]:BB:IMPairment:BBMM<ch>:STATE	1183
[SOURce]:BB:IMPairment:FADer<ch>:STATE	1183
[SOURce]:BB:IMPairment:IQOutput<ch>:STATE	1183
[SOURce]:BB:IMPairment:RF<ch>:STATE	1183
[SOURce]:BB:IMPairment:BBMM<ch>:POFFset	1183
[SOURce]:BB:IMPairment:FADer<ch>:POFFset	1183
[SOURce]:BB:IMPairment:IQOutput<ch>:POFFset	1183
[SOURce]:BB:IMPairment:RF<ch>:POFFset	1183
[SOURce<hw>]:BB:IMPairment:OPTimization:MODE	1184

[SOURce]:BB:IMPairment:BBMM<ch>:DELay <Delay>

[SOURce]:BB:IMPairment:FADer<ch>:DELay <Delay>

[SOURce]:BB:IMPairment:IQOutput<ch>:DELay <Delay>

[SOURce]:BB:IMPairment:RF<ch>:DELay <Delay>

Defines the time delay of both I and Q vectors between the marker signal at the marker outputs relative to the signal generation start.

A positive value means that the I and Q vectors delay relative to the marker/trigger and vice versa.

Table 14-7: Value range

Output	Min /s	Max /s	Increment
RF<ch>	0	10E-6	1E-12
FADer<ch>	0	500E-9	1E-12

Output	Min /s	Max /s	Increment
IQOutput<ch>	-500E-9	500E-9	1E-12
BBMM<ch>	-500E-9	500E-9	1E-12

Parameters:

<Delay> float
 Range: 0 to 10E-6
 Increment: 1E-12
 *RST: 0

Example: SOURce1:BB:IMPairment:RF1:DElay 32.0E-9

Manual operation: See ["IQ Delay"](#) on page 466

```
[:SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude] <Magnitude>
[:SOURce]:BB:IMPairment:BBMM<ch>:IQRatio[:MAGNitude] <IqRatio>
[:SOURce]:BB:IMPairment:FADer<ch>:IQRatio[:MAGNitude] <IqRatio>
[:SOURce]:BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude] <IqRatio>
[:SOURce]:BB:IMPairment:RF<ch>:IQRatio[:MAGNitude] <IqRatio>
```

Sets the ratio of I modulation to Q modulation (amplification imbalance) of the corresponding digital channel.

Table 14-8: Value range

Impairments	Min /dB	Max /dB	Increment
Digital	-4	4	0.0001
Analog	-1	1	0.0001

Parameters:

<IqRatio> float
 The setting value can be either in dB or %. An input in percent is rounded to the closest valid value in dB.
 Range: -4 to 4
 Increment: 1E-4
 *RST: 0
 Default unit: dB | PCT (setting command) / dB (result value)

Example:

```
SOURce:BB:IMPairment:RF1:IQRatio:MAGNitude 10 PCT
SOURce:BB:IMPairment:RF1:IQRatio:MAGNitude?
// 0.848
// the value is returned in dB
```

Manual operation: See ["Gain Imbalance"](#) on page 465

```
[:SOURce<hw>]:IQ:IMPairment:LEAKage:I <I>
[:SOURce<hw>]:IQ:IMPairment:LEAKage:Q <Q>
[:SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:I <I>
[:SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:Q <Q>
```

```
[ :SOURce]:BB:IMPairment:FADer<ch>:LEAKage:I <I>
[ :SOURce]:BB:IMPairment:FADer<ch>:LEAKage:Q <Q>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:I <I>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:Q <Q>
[ :SOURce]:BB:IMPairment:RF<ch>:LEAKage:I <I>
[ :SOURce]:BB:IMPairment:RF<ch>:LEAKage:Q <Q>
```

Determines the leakage amplitude of the I or Q signal component of the corresponding stream

Parameters:

<Q> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0

Example: SOURce:BB:IMPairment:RF1:LEAKage:Q 4 PCT
 Sets the leakage for the Q-component to 4 percent.

Manual operation: See "[I Offset/Q Offset](#)" on page 465

```
[ :SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLE] <Angle>
[ :SOURce]:BB:IMPairment:BBMM<ch>:QUADrature[:ANGLE] <Angle>
[ :SOURce]:BB:IMPairment:FADer<ch>:QUADrature[:ANGLE] <Angle>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:QUADrature[:ANGLE] <Angle>
[ :SOURce]:BB:IMPairment:RF<ch>:QUADrature[:ANGLE] <Angle>
```

Sets a quadrature offset (phase angle) between the I and Q vectors deviating from the ideal 90 degrees.

A positive quadrature offset results in a phase angle greater than 90 degrees.

Table 14-9: Value range

Impairments	Min /dB	Max /dB	Increment
Digital	-30	30	0.01
Analog	-10	10	0.01

Parameters:

<Angle> float
 Range: -30 to 30
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: SOURce:BB:IMPairment:RF1:QUADrature:ANGLE -5
 Sets the quadrature offset to -5 degrees.

Manual operation: See "[Quadrature Offset](#)" on page 465

```
[ :SOURce]:BB:IMPairment:BBMM<ch>:SKEW <Skew>
[ :SOURce]:BB:IMPairment:FADer<ch>:SKEW <Skew>
```


[[:SOURce]:BB:IMPairment:IQOutput<ch>:SKEW <Skew>
[[:SOURce]:BB:IMPairment:RF<ch>:SKEW <Skew>

Sets a delay between the Q vector and the I vector of the corresponding stream.

Parameters:

<Skew> float
 Range: -500E-9 to 500E-9
 Increment: 1E-12
 *RST: 0

Manual operation: See "[Skew](#)" on page 466

[[:SOURce<hw>]:IQ:IMPairment[:STATe] <State>
[[:SOURce]:BB:IMPairment:BBMM<ch>:STATe <State>
[[:SOURce]:BB:IMPairment:FADer<ch>:STATe <State>
[[:SOURce]:BB:IMPairment:IQOutput<ch>:STATe <State>
[[:SOURce]:BB:IMPairment:RF<ch>:STATe <State>

Activates the impairment or correction values LEAKage, QUADrature and IQRatio for the corresponding stream.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: SOURce1:BB:IMPairment:RF1:STATe ON
 Activates digital impairment.

Manual operation: See "[State](#)" on page 464

[[:SOURce]:BB:IMPairment:BBMM<ch>:POFFset <PhaseOffset>
[[:SOURce]:BB:IMPairment:FADer<ch>:POFFset <PhaseOffset>
[[:SOURce]:BB:IMPairment:IQOutput<ch>:POFFset <PhaseOffset>
[[:SOURce]:BB:IMPairment:RF<ch>:POFFset <PhaseOffset>

Adds an additional phase offset after the stream mapper.

You can shift the phase at the different stages in the signal generation flow, see:

- [\[:SOURce<hw>\]:BB:POFFset](#) on page 1061
- [:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset](#) on page 995

Parameters:

<PhaseOffset> float
 Range: -999.99 to 999.99
 Increment: 0.01
 *RST: 0

Example: SOURce:BB:IMPairment:RF1:POFFset 0

Manual operation: See "[Phase Offset](#)" on page 466

[:SOURce<hw>]:BB:IMPairment:OPTimization:MODE <Mode>

Sets the optimization mode.

Parameters:

<Mode>

FAST | QHIGH | QHTable

FAST

Optimization by compensation for I/Q skew.

QHTable

Improved optimization by maintained speed.

QHIGH

Optimization by compensation for I/Q skew and frequency response correction.

This mode interrupts the RF signal. Do not use it in combination with the uninterrupted level settings and strictly monotone modes RF level modes.

(See [:SOURce<hw>]:POWER:LBEHaviour on page 1278.)

*RST: FAST

*RST: FAST (R&S SMW-B10) / QHIGH (R&S SMW-B9) / QHTable (if R&S SZU connected to R&S SMW and the connection is active)

Example:

:SOURce1:IQ:SOURce BASEband

:SOURce1:BB:IMPairment:OPTimization:MODE FAST

Manual operation: See "Optimization Mode" on page 474

14.19.4.7 SOURce:BB:GRAPhics subsystem

This subsystem contains the commands used to setup the graphical display.

Required options

See Chapter 9.1.1, "Required options", on page 627.

[:SOURce<hw>]:BB:GRAPhics:MODE.....	1184
[:SOURce<hw>]:BB:GRAPhics:SRATe:MODE.....	1185
[:SOURce<hw>]:BB:GRAPhics:SRATe:USER.....	1185
[:SOURce]:BB:GRAPhics:CLOSE.....	1185
[:SOURce]:BB:GRAPhics:ADD.....	1186
[:SOURce]:BB:GRAPhics:SOURce.....	1186
[:SOURce]:BB:GRAPhics:SOURce:MUX.....	1186
[:SOURce]:BB:GRAPhics:FFTLen.....	1187
[:SOURce]:BB:GRAPhics:FFTFscale.....	1187
[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce.....	1187

[:SOURce<hw>]:BB:GRAPhics:MODE <Mode>

Selects the graphics mode of the graphical signal display.

Parameters:

<Mode> IQ | VECTor | CCDF | PSpectrum | CONSTellation | EYEI | EYEQ
 *RST: IQ

Example:

BB:GRAP:MODE VECT
 Selects the vector diagram graphics mode.

Manual operation: See "Mode" on page 636

[[:SOURce<hw>]:BB:GRAPHics:SRATe:MODE <Mode>

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a diagram covering the entire signal bandwidth. The higher the resolution is, the shorter the length of the displayed signal segment will be for the specified recording depth.

Parameters:

<Mode> AUTO | FULL | USER
 *RST: AUTO

Example:

BB:GRAP:SRAT:MODE FULL
 Sets the sample rate mode.

Manual operation: See "Sample Rate Mode" on page 638

[[:SOURce<hw>]:BB:GRAPHics:SRATe:USER <User>

(Enabled for BB:GRAPH:SRAT:MODE USER)

Selects the signal bandwidth for the diagram. The setting range moves between the minimum and maximum bandwidth which is possible for the selected graphical signal display. The selection is made graphically by moving the pointer.

Parameters:

<User> float
 Range: 0.01 to 100
 Increment: 0.01
 *RST: 10
 Default unit: PCT

Example:

BB:GRAP:SRAT:USER 20
 sets the sample rate factor.

Example:

BB:GRAP:SRAT:MODE USER
 sets the sample rate mode.

Manual operation: See "Sample Rate" on page 638

[[:SOURce]:BB:GRAPHics:CLOSe

Closes all graphical signal displays.

Usage: Event

Manual operation: See ["Remove"](#) on page 638

[[:SOURce]:BB:GRAPhics:ADD <Size>

Adds a graphical signal display (according to the current **MODE**, **SOURce**, **SRATe**: * and **TRIGger**: * settings).

Setting parameters:

<Size> MAXimized | MINimized

Usage: Setting only

Manual operation: See ["Add"](#) on page 638

[[:SOURce]:BB:GRAPhics:SOURce <Source>

Defines the signal acquisition point, that is the location in the signal flow where the displayed signal is tapped from.

The available acquisition points depend on the selected system configuration.

Parameters:

<Source> | STRA | STRB | STRC | STRD | STRE | STRF | STRG | STRH |
BBA | BBB | BBC | BBD | BBE | BBF | BBG | BBH | RFA | RFB |
RFC | RFD | IQO1 | IQO2 | DO1 | DO2

STRA|STRB|STRC|STRD|STRE|STRF|STRG|STRH

Streams (A to H); input stream of the "IQ Stream Mapper"

BBA|BBB|BBC|BBD|BBE|BBF|BBG|BBH

Baseband signals (A to H)

BBIA|BBIB

Digital baseband input signals

RFA|RFB|RFC|RFD

RF signals (A to D)

IQO1|IQO2

Analog I/Q output signals

DO1|DO2

Digital I/Q output signals; outputs of the "IQ Stream Mapper"

*RST: STRA

Manual operation: See ["Source"](#) on page 636

Location and use of the source types is shown in [Chapter 9.1.2.2, "Signal acquisition points"](#), on page 632.

[[:SOURce]:BB:GRAPhics:SOURce:MUX <Mode>

In **:SCONfiguration:OUTPut:MODE DIGMux** mode, select which of the multiplexed streams is displayed.

Parameters:

<Mode> STRA | STRB | STRC | STRD | STRE | STRF | STRG | STRH
 *RST: STRA

Example:

```
SCONfiguration:OUTPut:MODE DIGM
SCONfiguration:APPLY
SOURce1:BB:GRAPhics:MODE PSP
SOURce1:BB:GRAPhics:FFTLen LEN2048
SOURce1:BB:GRAPhics:SOURce DO1
SOURce1:BB:GRAPhics:SOURce:MUX STRA
SOURce1:BB:GRAPhics:TRIGger:SOURce SOFT
SOURce1:BB:GRAPhics:SRATe:MODE AUTO
SOURce1:BB:GRAPhics:ADD MIN
```

Manual operation: See ["Mux Stream"](#) on page 637

[[:SOURce]:BB:GRAPhics:FFTLen <Mode>

Sets the FFT size.

Parameters:

<Mode> LEN256 | LEN512 | LEN1024 | LEN2048 | LEN4096 | LEN8192
 *RST: LEN2048

Example: SOURce:BB:GRAPhics:FFTLen LEN2048

Manual operation: See ["FFT Length"](#) on page 637

[[:SOURce]:BB:GRAPhics:FFTFscale <State>

Defines the normalization of the power values in the power spectrum diagram.

Parameters:

<State> 1 | ON | 0 | OFF
1
 Normalized power in dBFS
0
 Shows power distribution in dB/Hz
 *RST: 0

Example:

```
SOURce:BB:GRAPhics:FFTFscale PSpectrum
SOURce:BB:GRAPhics:FFTFscale 1
// the power spectrum shows the normalized power in dBFS
```

Manual operation: See ["Full Scale \(dBFS\)"](#) on page 637

[[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce <Source>

Defines the trigger for the starting time of the graphic recording.

Parameters:

<Source> SOFTware | MARKer
 *RST: SOFTware

Example:

SOURce1:BB:GRAPHics:TRIGger:SOURce MARKer
 Sets the trigger source.

Manual operation: See ["Trigger Source"](#) on page 637

14.19.4.8 SOURce:BB:MEASurement subsystem

This subsystem contains the commands for measuring the power values of the digital baseband signal.

Required options

See [Chapter 9.2.1, "Required options"](#), on page 651

Example: Querying information on burst baseband signals using the multi-gated acquisition

The following example lists the commands necessary to start baseband power measurements and retrieve measurements results. We assume, that the instrument is configured as described in ["To perform baseband power measurements on bursted signals using the multi-gated acquisition"](#) on page 665.

```
// configure and enable baseband power measurements
:SOURce:BB:MEASurement:POWer:SOURce BBA
:SOURce:BB:MEASurement:POWer:OUTPut RFA
:SOURce:BB:MEASurement:POWer:ACQuisition MGATed
:SOURce:BB:MEASurement:POWer:GSource MGATed
:SOURce:BB:MEASurement:POWer:DURation 0.1
:SOURce:BB:MEASurement:POWer:RMODe SINGLE
:SOURce:BB:MEASurement:POWer:ADD
:SOURce:BB:MEASurement:POWer:EXECute

// query status information on the initiated measurement
:SOURce:BB:MEASurement:POWer:PROGress?
// Response: 23
// the initiated measurement is in progress
:SOURce:BB:MEASurement:POWer:RState?
// Response: 1
:SOURce:BB:MEASurement:POWer:PROGress?
// Response: 100
:SOURce:BB:MEASurement:POWer:RState?
// Response: 0
// performed is one single measurment

// query baseband power values
:SOURce:BB:MEASurement:POWer:PEAK?
// Response: -24.0601192007,-24.0601192007,-24.0601192007,-24.0601192007
```

```
:SOURce:BB:MEASurement:POWer:RMS?
// Response: -35.0006514336062,-35.0006514336062,-35.0006514336062,-35.0006514336062
// performed are four sub-measurements
```

```
// stop and remove the measurement
:SOURce:BB:MEASurement:POWer:INDeX 1
:SOURce:BB:MEASurement:POWer:ABORt
:SOURce:BB:MEASurement:POWer:DELeTe
```

[:SOURce]:BB:MEASurement:POWer:SOURce	1189
[:SOURce]:BB:MEASurement:POWer:OUTPut	1189
[:SOURce]:BB:MEASurement:POWer:ACQuisition	1190
[:SOURce]:BB:MEASurement:POWer:GSource	1190
[:SOURce]:BB:MEASurement:POWer:RMODE	1190
[:SOURce]:BB:MEASurement:POWer:ADD	1191
[:SOURce]:BB:MEASurement:POWer:PEAK?	1191
[:SOURce]:BB:MEASurement:POWer:RMS?	1191
[:SOURce]:BB:MEASurement:POWer:RSate?	1191
[:SOURce]:BB:MEASurement:POWer:PROGress?	1192
[:SOURce]:BB:MEASurement:POWer:DURation	1192
[:SOURce]:BB:MEASurement:POWer:INDeX	1192
[:SOURce]:BB:MEASurement:POWer:CHANGe	1193
[:SOURce]:BB:MEASurement:POWer:EXECute	1193
[:SOURce]:BB:MEASurement:POWer:ABORt	1193
[:SOURce]:BB:MEASurement:POWer:DELeTe	1193

[\[:SOURce\]:BB:MEASurement:POWer:SOURce](#) <Source>

Defines the measurement signal source.

Parameters:

<Source> BBA | BBB | BBC | BBD | BBINA | BBINB | FADINPA |
 FADINPB | FADINPC | FADINPD | FADOUTA | FADOUTB |
 FADOUTC | FADOUTD | AWGNA | AWGNB | AWGNC |
 AWGND | STREAMA | STREAMB | STREAMC | STREAMD
 *RST: BBA

Example: See [Example "Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Source/Output"](#) on page 658

[\[:SOURce\]:BB:MEASurement:POWer:OUTPut](#) <Output>

Defines the output point the measurement are performed at.

Parameters:

<Output> RFA | RFB | IQOUT1 | IQOUT2 | BBMM1 | BBMM2
 *RST: RFA

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Source/Output"](#) on page 658

[:SOURce]:BB:MEASurement:POWER:ACQuisition <Acquisition>

Sets the acquisition method.

Parameters:

<Acquisition> NOMinal | CONTInuous | GATed | MGATed
 *RST: CONTInuous

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Acquisition"](#) on page 658

[:SOURce]:BB:MEASurement:POWER:GSource <GateSource>

Determines the marker signal defining the signal part to be evaluated. The available values depend on the selected acquisition ([\[:SOURce\]:BB:MEASurement:POWER:ACQuisition](#)).

Parameters:

<GateSource> NONE | MARK1 | MARK2 | MARK3 | MGATed
NONE
 Default value for nominal and continuous acquisition.
MARK1|MARK2|MARK3
 Marker signal as defined in the baseband
MGATed
 Reserved for multi gated acquisition
 *RST: NONE

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Gate Source"](#) on page 658

[:SOURce]:BB:MEASurement:POWER:RMODe <RunMode>

Determines whether a single or a continuous measurement is executed.

Parameters:

<RunMode> SINGle | AUTO
 *RST: AUTO

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Run Mode"](#) on page 659

[:SOURce]:BB:MEASurement:POWer:ADD

Adds a measurement.

Example: See [Example "Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Event

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

[:SOURce]:BB:MEASurement:POWer:PEAK?

Queries the peak power of the baseband signal at the measurement point determined with the command `[:SOURce]:BB:MEASurement:POWer:OUTPut`.

Return values:

<PeakPower> <Peak_SubMes#1>,<Peak_SubMes#2>,...

Returns the peak power of the measured signal or if a multi-gated acquisition is used, a string of measured values with one value per performed submeasurement

Range: -145 to 30

Example: See [Example "Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Query only

Manual operation: See ["Level/PEP"](#) on page 659

[:SOURce]:BB:MEASurement:POWer:RMS?

Queries the RMS power of the baseband signal at the measurement point determined with the command `[:SOURce]:BB:MEASurement:POWer:OUTPut`.

Return values:

<RmsPower> <Power_SubMes#1>,<Level_SubMes#2>,...

Returns the power of the measured signal or if a multi-gated acquisition is used, a string of measured values with one value per performed submeasurement

Range: -145 to 30

Example: See [Example "Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Query only

Manual operation: See ["Level/PEP"](#) on page 659

[:SOURce]:BB:MEASurement:POWer:RState?

Queries the state (running/stopped) of the current measurement.

Return values:

<RunState> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 660

[[:SOURce]:BB:MEASurement:POWER:PROGress?

Queries the status of the initiated measurement. The query returns a value that indicates the task progress in percent.

Return values:

<Progress> float
 Range: 0 to 100
 *RST: 0

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Query only

Manual operation: See ["BB Powers Summary List"](#) on page 657

[[:SOURce]:BB:MEASurement:POWER:DURation <Duration>

Sets the measurement's time of a single measurement.

Parameters:

<Duration> float
 Range: 1E-3 to 5400
 Increment: 1E-3
 *RST: 1

Example: see [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Sweep Time/Duration"](#) on page 658

[[:SOURce]:BB:MEASurement:POWER:INDEX <MeasIndex>

Selects the measurement index the subsequent settings apply to, for example changing, starting or removing from the list of measurements.

Parameters:

<MeasIndex> integer
 Range: 1 to dynamic
 *RST: 1

Example: see [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

[SOURce]:BB:MEASurement:POWER:CHANge

Triggers the instrument to adopt the changed measurement configuration.

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Event

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

[SOURce]:BB:MEASurement:POWER:EXECute

Example: Triggers the instrument to perform the configured measurement.

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Event

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

[SOURce]:BB:MEASurement:POWER:ABORt

Stops the current measurement.

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Event

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

[SOURce]:BB:MEASurement:POWER:DELeTe

Removes the selected measurement from the list.

Example: See [Example"Querying information on burst baseband signals using the multi-gated acquisition"](#) on page 1188

Usage: Event

Manual operation: See ["Add, Change, Remove, Start, Abort"](#) on page 659

14.19.4.9 SOURce:BB:PROGress subsystem general commands

In the R&S SMW, some calculation processes take longer time. While operating the instrument manually, you can observe the status of an initiated process by the busy indicator. The following commands fulfill the same task in the remote control operation.

Example: Querying the status of the Create Waveform file process

The following is an example on how to use these commands to retrieve information about how many percent of the initiated process are completed.

```
:SCONfiguration:MODE ADVanced
:SCONfiguration:FADing MIMO4x4
:SCONfiguration:BASeband:SOURce COUPled
:SCONfiguration:APPLy
:SOURcel:BB:EUTRa:SETTing:TMOD:DL "E-TM1_1__15MHz"
:SOURcel:BB:EUTRa:SLENgth 100
:SOURcel:BB:PROGress:MCODer?
// 100 (task compleated)
:SOURcel:BB:EUTRa:STATe ON
:BB:PROGress:MCODer?
// 67 (task in progress)
:SOURcel:BB:EUTRa:WAVEform:CREate
:SOURcel:BB:PROGress:MCODer?
// 25 (task in progress)
// :SOURcel:BB:PROGress:MCODer:DM:FILTer?
// 100
```

```
[[:SOURce<hw>]:BB:PROGress:MCODer?..... 1194
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?..... 1194
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEGment?..... 1194
[:SOURce<hw>]:BB:PROGress:MCODer:DM:FILTer?..... 1194
```

[[:SOURce<hw>]:BB:PROGress:MCODer?

[[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?

[[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEGment?

Queries the status of an initiated process, like for example the calculation of a signal in accordance to a digital standard, or the calculation of a multi-carrier or multi-segment waveform file.

Return values:

<WSegment>	integer
	Indicates the task progress in percent
Range:	0 to 100
*RST:	100

Example: See [Example"Querying the status of the Create Waveform file process"](#) on page 1194

Usage: Query only

[[:SOURce<hw>]:BB:PROGress:MCODer:DM:FILTer?

Queries the status of an applied offline filtering, like for example during the calculation of a waveform and a multi carrier waveform file.

Return values:

<Filter> integer
 Indicates the task progress in percent
 Range: 0 to 100
 *RST: 100

Example: see [Example "Querying the status of the Create Waveform file process"](#) on page 1194

Usage: Query only

14.19.5 SOURce:CORRection subsystem

The SOURce:CORRection subsystem contains the commands for defining correction values for external test assemblies.

You can acquire the correction values anytime, regardless of the modulation settings of the generator. The correction is performed by adding the correction values to the output level of the respective RF frequency.

Determine the correction values in one of the following ways:

- Measure the RF output level at several frequency points and enter the value pairs manually in a table
- Connect an R&S NRP to the generator output signal and send the command [:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWER]:SONce to fill the table automatically.

Correction values can be stored in files with the predefined file extension *.uco.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and in a specific directory.

Programming example

The examples in this section assume that:

- The files are stored in the default directory.
- The same tables are accessed for both paths. File operations such as creating, deleting and querying files are therefore path-independent.
 In this case, the suffix in the keyword SOURce **must** be omitted. An error message is displayed if the suffix is specified.
- *RST does not affect data lists.

Example: Create a table with user-defined correction values for the RF level

The following example shows a command sequence to create and activate a list for assigning level correction values to arbitrary RF frequencies. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available user correction list files in the default directory
```

```

// Select a file or create a new one
// *****
*RST; *CLS
SOURCE:CORRection:CSET:CATalog?
// Response: shows the name of available user correction files (if applicable)
// Select a file
SOURCE:CORRection:CSET:SElect "/var/user/ucor1"
// Create a new file (if not existing)
SOURCE:CORRection:CSET:SElect "/var/user/ucor2"

// Enter the frequency/level value pairs in the table;
// existing data is overwritten
// Query the number of frequency/power entries in the selected list
SOURCE:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURCE:CORRection:CSET:DATA:POWer -10,-7.5,-5.0,-2.5,0,2.5
SOURCE:CORRection:CSET:DATA:FREQuency:POINts?
// 6
SOURCE:CORRection:CSET:DATA:POWer:POINts?
// 6

// Enable user correction mode and RF output
SOURCE:CORRection:STATe 1
OUTPut1:STATe ON

// Query the currently used correction value
SOURCE:CORRection:VALue?
// -2.5

// Delete a user correction file
SOURCE:CORRection:CSET:DELEte "/var/user/ucor1.uco"

```

Example: Fill user correction data with sensor

The following example shows a command sequence to fill a user correction list automatically supported by a connected R&S NRP.

```

// Fill a user correction list with the level values
// measured by an R&S NRP,
// store the data in a file and enable user correction.

*RST; *CLS

SOURCE:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURCE:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURCE:CORRection:ZERoing:STATe 1
SOURCE:CORRection:CSET:DATA:SENSor1:POWer:SONCe
// Query the number of automatically filled correction level values
SOURCE:CORRection:CSET:DATA:POWer:POINts?
// 6
SOURCE:CORRection:STATe 1

```

```
// Query the correction value at a certain frequency
FREQ 120000000
SOURcel:CORRection:VALue?
// -52.13
```

Example: User correction data exchange

The following example shows a command sequence to export a user correction list (here the list created with the example before) into an ASCII file. Further hardware settings are not considered.

```
// Select a user correction file for exporting to file in ASCII format
// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOURcel:CORRection:DEXChange:AFILe:CATalog?
// my_ucor
SOURcel:CORRection:CSET:CATalog?
// ucor1,Ucor1_AutoFill
SOURcel:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURcel:CORRection:DEXChange:AFILe:EXTension CSV
SOURcel:CORRection:DEXChange:AFILe:SEParator:DECimal DOT
SOURcel:CORRection:DEXChange:AFILe:SEParator:COLumn COMMa

// Select source and destination
SOURcel:CORRection:DEXChange:AFILe:SElect "/var/user/ucor2ASCII"

// Export the user correction data into the ASCII file
SOURcel:CORRection:DEXChange:MODE EXPort
SOURcel:CORRection:DEXChange:EXECute

// Query the available ASCII files with extension .csv
SOURcel:CORRection:DEXChange:AFILe:CATalog?
// ucor2ASCII,my_ucor

// Import a user correction ASCII file
SOURcel:CORRection:DEXChange:MODE IMPort
SOURcel:CORRection:DEXChange:AFILe:SElect "/var/user/my_ucor"
SOURcel:CORRection:DEXChange:EXECute
```

• Correction settings	1197
• Correction data exchange	1201
• Frequency response commands	1203

14.19.5.1 Correction settings

[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency <Frequency>

Enters the frequency value in the table selected with **[:SOURce<hw>]:CORRection:CSET [:SElect]**.

Parameters:

<Frequency> Frequency#1[, Frequency#2, ...]
 String of values with default unit Hz.

Example:

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Manual operation: See ["Edit List Mode Data"](#) on page 548

[:SOURce<hw>]:CORRection:CSET:DATA:POWer <Power>

Enters the level values to the table selected with [\[:SOURce<hw>\]:CORRection:CSET\[:SELection\]](#).

Parameters:

<Power> Power#1[, Power#2, ...]
 String of values with default unit dB.
 *RST: 0

Example:

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Manual operation: See ["Edit List Mode Data"](#) on page 548

[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?

[:SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?

Queries the number of frequency/level values in the selected table.

Return values:

<Points> integer
 Range: 0 to 10000
 *RST: 0

Example:

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Usage: Query only

[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe

Fills the selected user correction table with the level values measured by the power sensor for the given frequencies.

To select the used power sensor set the suffix in key word `SENSe`.

Example:

See [Example"Fill user correction data with sensor"](#) on page 1196.

Usage:

Event

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 602

[[:SOURce<hw>]:CORRection:CSET[:SElect] <Filename>

Selects or creates a file for the user correction data.

If the file with the selected name does not exist, a new file is created.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Manual operation: See ["UCOR Data ..."](#) on page 597

[[:SOURce<hw>]:CORRection:VALue?

Queries the current value for user correction.

Return values:

<Value> float
Range: -100 to 100
Increment: 0.01
*RST: 0

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Usage: Query only

Manual operation: See ["User Correction"](#) on page 597

[[:SOURce<hw>]:CORRection:ZERoing:STATe <State>

Activates the zeroing procedure before filling the user correction data acquired by a sensor.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 1

Example: See [Example"Fill user correction data with sensor"](#) on page 1196.

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 602

[[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWER]:SONCe

Fills the selected user correction list with the level values measured by the power sensor for the given frequencies.

Suffix:

SENSor<ch> Defines the used power sensor, i.e. the sensor whose values are used.

Example: See [Example"Fill user correction data with sensor"](#) on page 1196.

Usage: Event

[[:SOURce<hw>]:CORRection[:STATe] <State>

Activates user correction with the currently selected table.

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Manual operation: See ["State"](#) on page 597

[[:SOURce]:CORRection:CSET:CATalog?

Queries a list of available user correction tables.

Return values:

<Catalog> string
List of list filenames, separated by commas

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Usage: Query only

Manual operation: See ["UCOR Data ..."](#) on page 597
See ["Directory, File List and Filename"](#) on page 711

[[:SOURce]:CORRection:CSET:DELeTe <Filename>

Deletes the specified user correction list file.

Setting parameters:

<Filename> string
Filename or complete file path; file extension is optional.

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Usage: Setting only

Manual operation: See ["UCOR Data ..."](#) on page 597

[[:SOURce<hw>]:CORRection:OPTimize:EVM <OptimizeEvm>

Activates further optimization of preexisting excellent EVM performance of I/Q modulated RF signals.

Activate EVM optimization, if your test setup requires lowest EVM values. For example, if you need to generate 5G NR signals, LTE signals or IEEE 802.11 signals that require optimal EVM performance.

Parameters:

<OptimizeEvm> 1 | ON | 0 | OFF
 *RST: 0

Example:

```
SOURce1:CORRection:OPTimize:EVM?
// Response: "0"
SOURce1:CORRection:OPTimize:EVM 1
Activates EVM optimization for the selected path.
```

Manual operation: See ["Optimize EVM"](#) on page 476

14.19.5.2 Correction data exchange

With the following commands, you can configure user correction lists and export or import them accordingly.

[SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?

Queries the available ASCII files for export or import of user correction data in the current or specified directory.

Return values:

<Catalog> string
 List of ASCII files *.txt or *.csv, separated by commas.

Example:

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 1195 .

Usage:

Query only

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 546

[SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII files for file import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
 *RST: TXT

Example:

See [Example"User correction data exchange"](#) on page 1197 .

Manual operation: See ["ASCII File Settings"](#) on page 545

[SOURce<hw>]:CORRection:DEXChange:AFILe:SElect <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example"User correction data exchange"](#) on page 1197 .

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 546

[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
 *RST: COMMa

Example: See [Example"User correction data exchange"](#) on page 1197 .

Manual operation: See ["ASCII File Settings"](#) on page 545

[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
 *RST: DOT

Example: See [Example"User correction data exchange"](#) on page 1197 .

Manual operation: See ["ASCII File Settings"](#) on page 545

[:SOURce<hw>]:CORRection:DEXChange:EXECute

Executes the import or export of the selected correction list, according to the previously set transfer direction with command [\[:SOURce<hw>\]:CORRection:DEXChange:MODE](#).

Example: See [Example"User correction data exchange"](#) on page 1197 .

Usage: Event

Manual operation: See ["Import / Export"](#) on page 546

[:SOURce<hw>]:CORRection:DEXChange:MODE <Mode>

Determines import or export of a user correction list.

Specify the source or destination file with the command [\[:SOURce<hw>\]:CORRection:DEXChange:SElect](#).

Parameters:

<Mode> IMPort | EXPort
 *RST: IMPort

Example: See [Example "User correction data exchange"](#) on page 1197 .

Manual operation: See ["Mode"](#) on page 545

[[:SOURce<hw>]:CORRection:DEXChange:SElect <Filename>

Selects the ASCII file for import or export, containing a user correction list.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example "User correction data exchange"](#) on page 1197 .

Manual operation: See ["Select Source/Select ASCII Destination"](#) on page 546

14.19.5.3 Frequency response commands

This section lists the frequency response commands related to the I/Q modulator.

Example: Enabling high-quality optimization

```
SOURce1:CORRection:FRESponse:RF:OPTimization:MODE QHIG
SOURce1:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE AUTO
SOURce1:CORRection:FRESponse:RF:OPTimization:BANDwidth:VALue?
// 160000000
SOURce1:CORRection:FRESponse:RF:OPTimization:LOCal
SOURce1:CORRection:FRESponse:RF:OPTimization:HOLD:STATe 1
```

[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE.....	1203
[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE.....	1204
[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue].....	1204
[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe].....	1205
[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:LOCal.....	1205

**[[:SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE
 <FreqRespOptMode>**

Sets the optimization mode.

The value selected here is used also as optimization mode in the I/Q modulator, and vice versa.

For details, see R&S SMW User Manual.

Parameters:

<FreqRespOptMode> FAST | QHIGh | QHTable

FAST

Optimization by compensation for I/Q skew.

QHTable

Enabled if R&S SZU is connected to the R&S SMW and the connection is active.

Improved optimization by maintained speed.

QHIGh

Optimization by compensation for I/Q skew and frequency response correction.

This mode interrupts the RF signal. Do not use it in combination with the uninterrupted level settings and strictly monotone modes RF level modes. These RF level modes can be set with the following command:

```
[ :SOURce<hw> ] :POWER:LBEHaviour
```

*RST: FAST

*RST: QHIGh / QHTable (if R&S SZU connected to R&S SMW and the connection is active)

Example: See [Example"Enabling high-quality optimization"](#) on page 1203.

```
[ :SOURce<hw> ] :CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE  
<FreqRespOptBwMo>
```

For `[:SOURce<hw>] :CORRection:FRESponse:RF:OPTimization:MODE QHIG|QHT`, sets how the signal bandwidth is estimated: automatically or manually with the command `[:SOURce<hw>] :CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue]`.

Parameters:

<FreqRespOptBwMo>AUTO | MANual

*RST: AUTO

Example: See [Example"Enabling high-quality optimization"](#) on page 1203.

```
[ :SOURce<hw> ] :CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue]  
<FreqRespOptBwVa>
```

Sets the signal compensation bandwidth for `[:SOURce<hw>] :CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE MAN`.

Parameters:

<FreqRespOptBwVa> integer

Range: depends on installed baseband extension option

*RST: = max. bandwidth (depending on installed options)

* e.g. 8E6 to 120E6 (R&S SMW-B10); min value also depends on the system configuration (R&S SMW-B9)

For more information, see data sheet.

Example: See [Example"Enabling high-quality optimization"](#) on page 1203.

```
[ :SOURCE<hw>]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe]
<FreqRespHoldSta>
```

For [:SOURCE<hw>]:CORRection:FRESponse:RF:OPTimization:MODE QHIG|QHT, retains the last calculated correction values as long as one of the following is performed:

- SOURce1:CORRection:FRESponse:RF:OPTimization:HOLD:STATe 0
- [:SOURCE<hw>]:CORRection:FRESponse:RF:OPTimization:LOCal

Parameters:

```
<FreqRespHoldSta> 1 | ON | 0 | OFF
*RST: 0
```

Example: See [Example"Enabling high-quality optimization"](#) on page 1203.

```
[ :SOURCE<hw>]:CORRection:FRESponse:RF:OPTimization:LOCal
```

For [:SOURCE<hw>]:CORRection:FRESponse:RF:OPTimization:MODEQHIG, triggers optimization for the current settings.

Example: See [Example"Enabling high-quality optimization"](#) on page 1203.

Usage: Event

14.19.6 SOURCE:FREQUENCY subsystem

The SOURCE:FREQUENCY subsystem contains the commands used to define the frequency settings for the RF sources and sweeps.

Example: Frequency configuration

```
SOURce1:FREQuency:MODE CW
SOURce1:FREQuency:CW 6000000000
SOURce1:FREQuency:OFFSet 2000000000
SOURce1:FREQuency:MULTiplier 1.5
SOURce1:FREQuency:CW?
// 11000000000

// SOURce1:FREQuency:STEP:MODE USER
// SOURce1:FREQuency:STEP:INCRe ment 1000000
// SOURce1:FREQuency:CW UP

SOURce1:PHASe 2
SOURce1:PHASe:REFerence
```

Example: Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators

This example shows the command sequences for coupling the oscillator signal of three signal generators connected according to the setup on [Figure 14-8](#).

Connect the instruments in a daisy-chain regarding the LO signal:

- Connect the LO OUT of the first generator with LO IN of the second
- Connect the LO OUT of the second generator with LO IN of the third.

The frequency is assumed to be 5 GHz.

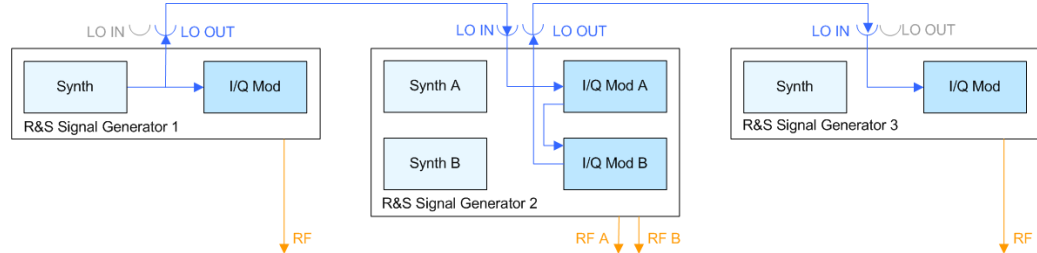


Figure 14-8: Set up of LO coupling with three Rohde & Schwarz signal generators

Signal generator#1 = One-path instrument, uses its internal oscillator signal.

Signal generator#1 = Two-paths instrument; receives the LO signal from the first instrument and assigns it to both paths

Signal generator#3 = One-path instrument; receives the LO signal from the second instrument

```
// *****
// Address and reset the first instrument
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the first instrument
// *****
SOURce:FREQuency 5 GHz
SOURce:FREQuency:LOSCillator:MODE Internal
SOURce:FREQuency:LOSCillator:OUTPut:STATE ON
SOURce:FREQuency:LOSCillator:OUTPut:FREQuency?
// Response: 1000000000

// *****
// Address and reset the second instrument, e.g. a R&S SMW
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the second instrument
// *****
SOURce1:FREQuency 5 GHz
SOURce1:FREQuency:LOSCillator:MODE ECoupled
SOURce1:FREQuency:LOSCillator:OUTPut:STATE ON
```



```
// *****
// If the attenuation between the interconnection LO OUT and LO IN is
// greater than 1 dB at the oscillator frequency,
// we recommend that you perform the LO level adjustment
// *****
:CALibration:LOSCillator:Coupling:LOCAL?

// *****
// Address and reset the third instrument
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the third next instrument
// *****
SOURce:FREQuency 5 GHz
SOURce:FREQuency:LOSCillator:MODE EXTernal
SOURce:FREQuency:LOSCillator:OUTPut:STATe OFF

// *****
// If the attenuation between the interconnection LO OUT and LO IN is
// greater than 1 dB at the oscillator frequency,
// we recommend that you perform the LO level adjustment
// *****
:CALibration:LOSCillator:Coupling:LOCAL?
```

See also:

- ["To configure LO coupling with cascaded instruments to achieve phase coherence"](#) on page 510
- ["To adjust the LO level to current frequency"](#) on page 509

[:SOURce<hw>]:FREQuency:LOSCillator:INPut:FREQuency?	1207
[:SOURce<hw>]:FREQuency:LOSCillator:MODE.....	1208
[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:FREQuency?.....	1209
[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe.....	1209
[:SOURce<hw>]:FREQuency:MODE.....	1209
[:SOURce<hw>]:FREQuency[:CW FIXed].....	1210
[:SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	1211
[:SOURce<hw>]:FREQuency:MANual.....	1211
[:SOURce<hw>]:FREQuency:MULTIplier.....	1212
[:SOURce<hw>]:FREQuency:OFFSet.....	1212
[:SOURce<hw>]:FREQuency:CENTer.....	1213
[:SOURce<hw>]:FREQuency:SPAN.....	1213
[:SOURce<hw>]:FREQuency:STARt.....	1213
[:SOURce<hw>]:FREQuency:STOP.....	1214
[:SOURce<hw>]:FREQuency:STEP:MODE.....	1214
[:SOURce<hw>]:FREQuency:STEP[:INCRement].....	1214

[\[:SOURce<hw>\]:FREQuency:LOSCillator:INPut:FREQuency?](#)

Queries the required external reference frequency.

Return values:

<Frequency> float
 Range: 100E3 to 20E9
 Increment: 0.01
 *RST: 0

Example: See [Example"Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 1206.

Usage: Query only

Manual operation: See ["Mandatory LO IN Frequency"](#) on page 508

[SOURce<hw>]:FREQUENCY:LOSCillator:MODE <Mode>

Selects the mode of the local oscillator coupling.

Table 14-10: Cross-reference between <Mode> and the manual operation

<Mode>	Parameter in manual operation	Description
INTernal	A&B Internal / Internal (one path instrument)	Uses the internal oscillator signal in both paths.
EXTernal	A External & B Internal (one path instrument)	Uses an external signal in path A. B uses its internal signal.
COUPled	A Internal & A->B Coupled	Assigns the internal oscillator signal of path A also to path B.
ECOUpled	A External & A->B Coupled	Assigns an externally supplied signal to both paths.
BOFF	A Internal & B RF Off	Uses the internal local oscillator signal of path A, if the selected frequency exceeds the maximum frequency of path B.
EBOff	A External & B RF Off	Uses the LO IN signal for path A, if the selected RF frequency exceeds the maximum frequency of path B.
AOFF	A RF Off & B External	Uses the LO IN signal for path B, if the selected RF frequency exceeds the maximum frequency of path A.

Parameters:

<Mode> INTernal | EXTernal | COUPled | ECOUped | BOFF | AOFF
 See [Table 14-10](#)
 *RST: INTernal

Example: See [Example"Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 1206.

Manual operation: See ["Mode"](#) on page 507

[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:FREQuency?

Queries the current frequency of the local oscillator at the [LO OUT] connector.

Return values:

<Frequency>	float
Range:	100E3 to 20E9
Increment:	0.01
*RST:	0

Example: See [Example "Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 1206.

Usage: Query only

Manual operation: See ["LO OUT Frequency"](#) on page 508

[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe <State>

Activates the LO output in the second path.

Parameters:

<State>	1 ON 0 OFF
*RST:	0

Example: See [Example "Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 1206.

Manual operation: See ["Out State"](#) on page 508

[:SOURce<hw>]:FREQuency:MODE <Mode>

Sets the frequency mode for generating the RF output signal. The selected mode determines the parameters to be used for further frequency settings.

Parameters:

<Mode>	CW FIXed SWEep LIST COMBined
--------	--------------------------------------

CW|FIXed

Sets the fixed frequency mode. CW and FIXed are synonyms. The instrument operates at a defined frequency, set with command [\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]](#).

SWEep

Sets sweep mode.

The instrument processes frequency (and level) settings in defined sweep steps.

Set the range and current frequency with the commands:

[\[:SOURce<hw>\]:FREQuency:START](#) on page 1213 and [\[:SOURce<hw>\]:FREQuency:STOP](#) on page 1214,
[\[:SOURce<hw>\]:FREQuency:CENTer](#) on page 1213,
[\[:SOURce<hw>\]:FREQuency:SPAN](#) on page 1213,
[\[:SOURce<hw>\]:FREQuency:MANual](#) on page 1211

LIST

Sets list mode.

The instrument processes frequency and level settings by means of values loaded from a list.

To configure list mode settings, use the commands of the [Chapter 14.19.12, "SOURce:LIST subsystem"](#), on page 1248.

COMBined

Sets the combined RF frequency / level sweep mode.

The instrument processes frequency and level settings in defined sweep steps.

Set the range and current frequency with the commands:

[\[:SOURce<hw>\]:COMBined:FREQuency:START](#)

on page 1303 and [\[:SOURce<hw>\]:COMBined:FREQuency:STOP](#) on page 1304,

[\[:SOURce<hw>\]:COMBined:POWer:START](#) on page 1304

and [\[:SOURce<hw>\]:COMBined:POWer:STOP](#) on page 1304

*RST: CW

Example:

See [Example "Frequency configuration"](#) on page 1205, and [Example "Setup an RF frequency or power sweep"](#) on page 1296

Manual operation:

See ["State \(RF frequency sweep\)"](#) on page 531

See ["State \(RF frequency / level sweep\)"](#) on page 532

See ["State"](#) on page 541

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\] <Fixed>](#)

Sets the frequency of the RF output signal in the selected path.

The effect depends on the selected mode:

- In CW mode ([FREQ:MODE CW](#) | [FIXed](#)), the instrument operates at a fixed frequency.
- In sweep mode ([FREQ:MODE SWE](#)), the value applies to the sweep frequency. The instrument processes the frequency settings in defined sweep steps.
- In user mode ([FREQ:STEP:MODE USER](#)), you can vary the current frequency step by step.

Parameters:

<Fixed>

float

The following settings influence the value range:

An offset set with the command [\[:SOURce<hw>\]:FREQuency:OFFSet](#)

Numerical value

Sets the frequency in CW and sweep mode

UP|DOWN

Varies the frequency step by step in user mode.

The frequency is increased or decreased by the value set with the command `[:SOURce<hw>] :FREQuency:STEP [:INCRement]`.

Range: (RFmin + OFFSet) to (RFmax + OFFSet)

*RST: 100 MHz

Example: See [Example"Frequency configuration"](#) on page 1205

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296

Options: RFmax depends on the installed options, for example 3 GHz with R&S SMW-B1003

Manual operation: See ["Frequency"](#) on page 486

[:SOURce<hw>] :FREQuency [:CW|FIXed] :RCL <Rcl>

Set whether the RF frequency value is retained or taken from a loaded instrument configuration, when you recall instrument settings with command `*RCL`.

The selected mode applies to both RF paths, i.e. a specified suffix is ignored.

Parameters:

<Rcl> INCLUDE | EXCLUDE

INCLUDE

Takes the frequency value of the loaded settings.

EXCLUDE

Retains the current frequency when an instrument configuration is loaded.

*RST: INCLUDE

Example: `SOURce1:FREQuency:CW:RCL INCLUDE`

Manual operation: See ["Exclude Frequency"](#) on page 712

[:SOURce<hw>] :FREQuency:MANual <Manual>

Sets the frequency and triggers a sweep step manually if `SWEep:MODE MAN`.

Parameters:

<Manual> float

You can select any frequency within the setting range, where:

START is set with `[:SOURce<hw>] :FREQuency:START`

STOP is set with `[:SOURce<hw>] :FREQuency:STOP`

OFFSet is set with `[:SOURce<hw>] :FREQuency:OFFSet`

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01Hz

*RST: 100 MHz

Default unit: Hz

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Current Frequency"](#) on page 532

[[:SOURce<hw>]:FREQuency:MULTiplier <Multiplier>

Sets the multiplication factor $N_{\text{FREQ:MULT}}$ of a subsequent downstream instrument.

The parameters offset $f_{\text{FREQ:OFFSer}}$ and multiplier $N_{\text{FREQ:MULT}}$ affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSer}}$$

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Parameters:

<Multiplier>	float
Range:	-10000 to 10000
Increment:	0.001
*RST:	1

Example: See [Example"Frequency configuration"](#) on page 1205

Manual operation: See ["Multiplier"](#) on page 487

[[:SOURce<hw>]:FREQuency:OFFSet <Offset>

Sets the frequency offset $f_{\text{FREQ:OFFSer}}$ of a downstream instrument.

The parameters offset $f_{\text{FREQ:OFFSer}}$ and multiplier $N_{\text{FREQ:MULT}}$ affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSer}}$$

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Note: The offset also affects RF frequency sweep.

Parameters:

<Offset>	float
Increment:	0.01
*RST:	0

Example: See [Example"Frequency configuration"](#) on page 1205

Manual operation: See ["Offset"](#) on page 486

[SOURce<hw>]:FREQUENCY:CENTer <Center>

Sets the center frequency of the sweep.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Center>	float
Range:	300 kHz to RFmax
Increment:	0.01 Hz
*RST:	300E6
Default unit:	Hz

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Center Frequency"](#) on page 536

**[SOURce<hw>]:FREQUENCY:SPAN **

Sets the span of the frequency sweep range.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

	float
	Full frequency range
Increment:	0.01
*RST:	400E6

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Span"](#) on page 536

[SOURce<hw>]:FREQUENCY:START <Start>

Sets the start frequency for the RF sweep.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Start>	float
Range:	300kHz to RFmax
Increment:	0.01Hz
*RST:	100 MHz

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 536

[[:SOURce<hw>]:FREQUENCY:STOP <Stop>

Sets the stop frequency range for the RF sweep.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Stop>	float
Range:	300kHz to RFmax
Increment:	0.01Hz
*RST:	500 MHz
Default unit:	Hz

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 536

[[:SOURce<hw>]:FREQUENCY:STEP:MODE <Mode>

Defines the type of step size to vary the RF frequency at discrete steps with the commands [FREQ UP](#) or [FREQ DOWN](#).

You can define the step mode for each path separately.

Parameters:

<Mode>	DECimal USER
DECimal	Increases or decreases the level in steps of ten.
USER	Increases or decreases the level in increments, set with the command FREQ:STEP[:INCR] .
*RST:	DECimal

Example:

```
// increasing the RF frequency with a step size of 50 KHz
SOURce1:FREQUENCY:STEP 50E3
SOURce1:FREQUENCY:STEP:MODE USER
SOURce1:FREQUENCY:CW UP
```

Manual operation: See ["Variation Active"](#) on page 489

[[:SOURce<hw>]:FREQUENCY:STEP[:INCRement] <Increment>

Sets the step width.

You can use this value to vary the RF frequency with command [FREQ UP](#) or [FREQ DOWN](#), if you have activated [FREQ:STEP:MODE USER](#).

Note: This value also applies to the step width of the rotary knob on the instrument and, in user-defined step mode, increases or decreases the frequency.

Parameters:

<Increment> float
 Range: 0 Hz to RFmax - 100 kHz
 Increment: 0.01 Hz
 *RST: 1E6

Example: See [Example "Frequency configuration"](#) on page 1205

Manual operation: See ["Variation Step"](#) on page 489

14.19.7 SOURce:FREQuency:CONVerter subsystem

The SOURce:FREQuency:CONVerter subsystem contains the commands used to define and query the frequency overrange parameters of the specific R&S SZU100A IQ Upconverter.

Example: Querying the frequency overrange provided by an R&S SZU100A IQ Upconverter

```
// Query the information whether the connected R&S SZU
// provides an extended frequency range
// Enable the frequency overrange and query the frequency overrange limits
SOURce1:FREQuency:CONVerter:EXternal:OVERrange:ALLowed?
SOURce1:FREQuency:CONVerter:EXternal:OVERrange 1
SOURce1:FREQuency:CONVerter:EXternal:OVERrange:FREQuency:MIN?
SOURce1:FREQuency:CONVerter:EXternal:OVERrange:FREQuency:MAX?
```

```
[SOURce<hw>]:FREQuency:CONVerter:EXternal:OVERrange:ALLowed[:STATe]?..... 1215
[SOURce<hw>]:FREQuency:CONVerter:EXternal:OVERrange:FREQuency:MAX?..... 1216
[SOURce<hw>]:FREQuency:CONVerter:EXternal:OVERrange:FREQuency:MIN?..... 1216
[SOURce<hw>]:FREQuency:CONVerter:EXternal:OVERrange[:STATe]?..... 1216
```

[SOURce<hw>]:FREQuency:CONVerter:EXternal:OVERrange:ALLowed[:STATe]?

Queries if the connected external instrument provides the extended frequency range.

If confirmed, the R&S SMW indicates the corresponding parameters in the "RF Frequency" dialog, see ["Frequency Overrange"](#) on page 488.

Return values:

<OverrangAllowed> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example "Querying the frequency overrange provided by an R&S SZU100A IQ Upconverter"](#) on page 1215

Usage: Query only

[:SOURce<hw>]:FREQuency:CONVerter:EXTernal:OVERrange:FREQuency:MAX?

Indicates the minimum and maximum frequency range values of the connected external instrument.

The frequency overrange is based on the calibration data of the specific device.

Return values:

<OverrangFreqMax> float

Range: OverrangeMin to OverrangeMax

Increment: 0.01

*RST: OverrangeMax

Usage: Query only

Manual operation: See ["Maximal Frequency"](#) on page 489

[:SOURce<hw>]:FREQuency:CONVerter:EXTernal:OVERrange:FREQuency:MIN?

Indicates the minimum frequency value of the connected external instrument.

The frequency overrange is based on the calibration data of the specific device.

Return values:

<OverrangMinFreq> float

Range: OverrangeMin to OverrangeMax

Increment: 0.01

*RST: OverrangeMin

Example: See [Example"Querying the frequency overrange provided by an R&S SZU100A IQ Upconverter"](#) on page 1215

Usage: Query only

Manual operation: See ["Minimal Frequency"](#) on page 488

**[:SOURce<hw>]:FREQuency:CONVerter:EXTernal:OVERrange[:STATe]
<OverrangState>**

Enables the extended frequency range of a connected external instrument.

Parameters:

<OverrangState> 1 | ON | 0 | OFF

*RST: 0

Example: See [Example"Querying the frequency overrange provided by an R&S SZU100A IQ Upconverter"](#) on page 1215

Manual operation: See ["Frequency Overrange Active"](#) on page 488

14.19.8 SOURce:INPut subsystem

The `SOURce:INPut` subsystem contains the commands for configuring the inputs for external modulation signals. The instrument trigger setting influences all sweeps and is effective in the List mode (Instrument Trigger).

<code>[SOURce<hw>]:INPut:MODext:COUPling<ch></code>	1217
<code>[SOURce<hw>]:INPut:MODext:IMPedance<ch></code>	1217
<code>[SOURce<hw>]:INPut:TRIGger:SLOPe</code>	1217

`[SOURce<hw>]:INPut:MODext:COUPling<ch>` <Coupling>

Selects the coupling mode for an externally applied modulation signal.

Parameters:

<Coupling>	AC DC
AC	Passes the AC signal component of the modulation signal.
DC	Passes the modulation signal with both components, AC and DC.
*RST:	AC

Example:

`INP:MOD:COUP AC`
Selects the coupling mode AC for an externally applied modulation signal.

Manual operation: See "[Coupling \(AC/DC\)](#)" on page 579

`[SOURce<hw>]:INPut:MODext:IMPedance<ch>` <Impedance>

Sets the impedance (50 kOhm or High = 100 kOhm to ground) for the externally supplied modulation signal.

Parameters:

<Impedance>	G50 HIGH
*RST:	HIGH

Example:

`INP:MOD:IMP 50`
sets 50 kOhm to ground.

Manual operation: See "[Impedance](#)" on page 579

`[SOURce<hw>]:INPut:TRIGger:SLOPe` <Slope>

Sets the polarity of the active slope of an applied instrument trigger.

Parameters:

<Slope>	NEGative POSitive
*RST:	POSitive

Manual operation: See "[Trigger Slope](#)" on page 535

14.19.9 SOURce:IQ subsystem

The SOURce:IQ subsystem contains the commands for configuring the I/Q modulation.

Required options

See [Chapter 7.1, "Required options"](#), on page 469.

[:SOURce<hw>]:IQ:SOURce	1218
[:SOURce<hw>]:IQ:STATe	1218
[:SOURce<hw>]:IQ:GAIN	1219
[:SOURce<hw>]:BB:IQGain	1219
[:SOURce<hw>]:IQ:CRESTfactor	1219
[:SOURce<hw>]:IQ:SWAP[:STATe]	1219
[:SOURce<hw>]:IQ:WBSTate	1220

[\[:SOURce<hw>\]:IQ:SOURce](#) <Source>

Selects the input signal source for the I/Q modulator.

Parameters:

<Source> BASEband | ANALog | DIFFerential
 External signals disable the amplitude modulation, an enabled custom digital modulation, any configured digital standard or an applied digital baseband input signal.
 *RST: BASEband

Example:

SOURce1:IQ:SOURce ANALog
 Selects an external analog signal as the input signal. The signal must be applied at the I and Q inputs.

Options: DIFFerential requires R&S SMW-K739

Manual operation: See ["Source"](#) on page 472

[\[:SOURce<hw>\]:IQ:STATe](#) <State>

Enables/disables the I/Q modulation.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

IQ:STAT ON
 Activates I/Q modulation.

Manual operation: See ["State"](#) on page 472

[[:SOURce<hw>]:IQ:GAIN <Gain>

[[:SOURce<hw>]:BB:IQGain <IqGain>

Optimizes the modulation of the I/Q modulator for a subset of measurement requirement.

Parameters:

<IqGain>

DBM4 | DBM2 | DB0 | DB2 | DB4 | DB8 | DB6 | DBM3 | DB3 |
AUTO

Dynamic range of 16 dB divided into 2 dB steps.

DB0|DB2|DB4|DB6|DB8

Activates the specified gain of 0 dB, +2 dB, +4 dB, +6 dB, +8 dB

DBM2|DBM4

Activates the specified gain of -2 dB, -4 dB

DBM3|DB3

(setting only)

Provided only for backward compatibility with other Rohde & Schwarz signal generators.

The R&S SMW accepts these values and maps them automatically as follows:

DBM3 = DBM2, DB3 = DB2

AUTO

The gain value is retrieved from the connected R&S SZU. The I/Q modulator is configured automatically.

*RST: DB4

Example:

SOURce1:BB:IQGain DB2
SOURce1:IQGain DB2

Manual operation: See ["Baseband Gain"](#) on page 474

[[:SOURce<hw>]:IQ:CREStfactor <CrestFactor>

Specifies the crest factor for the external analog signal.

Parameters:

<CrestFactor>

float

Range: 0 to 35

Increment: 0.01

*RST: 0

Default unit: dB

Example:

IQ:CRES 10
specifies 10 dB crest factor for the external analog signal.

Manual operation: See ["Crest Factor"](#) on page 473

[[:SOURce<hw>]:IQ:SWAP[:STATe] <State>

Swaps the I and Q channel.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

IQ:SWAP ON
 swaps the I and Q channel.

Manual operation: See "[I/Q Swap](#)" on page 472

[SOURce<hw>]:IQ:WBSTate <WbState>

Activates I/Q wideband mode.

Activation automatically optimizes the settings for wideband modulation signals with a bandwidth that is higher than 5 MHz.

Parameters:

<WbState> 1 | ON | 0 | OFF
 *RST:
 *RST: 0 (R&S SMW-B10) / 1 (R&S SMW-B9)

Example:

:SOURce1:IQ:WBST 1
 Activates I/Q wideband mode.

Manual operation: See "[I/Q Wideband](#)" on page 473

14.19.10 SOURce:IQ:OUTPut subsystem

The SOURce:IQ:OUTPut subsystem contains the commands for configuring analog and digital I/Q output signals.

For information about the required options, see:

- [Chapter 4.7, "I/Q digital output settings"](#), on page 175
- [Chapter 4.8, "I/Q analog output settings"](#), on page 186

For information on the analog and digital IQ connectors and interfaces, see:

[Table 4-4.](#)

14.19.10.1 SOURce:IQ:OUTPut:ANALog commands

This section describes the commands of the output of an analog I/Q signal.

Example: Enabling and configuring the analog output

```
SCONfiguration:OUTPut:MAPping:IQOutput1:STReam1:STATe 1
```

```
SOURce1:IQ:OUTPut:ANALog:PRESet
SOURce1:IQ:OUTPut:ANALog:TYPE DIFF
SOURce1:IQ:OUTPut:ANALog:MODE VAR
SOURce1:IQ:OUTPut:LEVel 2
SOURce1:IQ:OUTPut:ANALog:BIAS:COUPling:STATe 1
SOURce1:IQ:OUTPut:ANALog:BIAS:I 1
SOURce1:IQ:OUTPut:ANALog:BIAS:Q?
// 1
SOURce1:IQ:OUTPut:ANALog:OFFSet:I 2
SOURce1:IQ:OUTPut:ANALog:OFFSet:Q 2.5
SOURce1:IQ:OUTPut:ANALog:STATe 1
```

[SOURce<hw>]:IQ:OUTPut:ANALog:STATe.....	1221
[SOURce<hw>]:IQ:OUTPut[:ANALog]:PRESet.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:CATalog?.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:STORE.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:LOAD.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:DELeTe.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE.....	1223
[SOURce<hw>]:IQ:OUTPut:LEVel.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe].....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q.....	1224

[SOURce<hw>]:IQ:OUTPut:ANALog:STATe <State>

Activates the specified analog I/Q output.

Note: By default, the output connectors [I/Q Out x] are deactivated.

Suffix:

:SOURce<hw> 1|2
Selects the [I/Q Out] connectors

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example:

SOURce:IQ:OUTPut:ANALog:STATe ON
Activates the output of the analog I/Q signal on the [I/Q Out 1] connectors.

Manual operation: See "State" on page 189

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:PRESet

Sets the default settings (*RST values specified for the commands).

Not affected are:

- The state set with the command `[:SOURce<hw>]:IQ:OUTPut:ANALog:STATe`.
- If `SCONfiguration:EXternal:PBEHaviour 1`, the I/Q output type set with the command `[:SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE`.

Example: See [Example "Enabling and configuring the analog output"](#) on page 1221.

Usage: Event

Manual operation: See ["Set to Default"](#) on page 189

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:CATalog?

Queries the files with I/Q output settings in the default directory. Listed are files with the file extension `*.iqout`.

Return values:

<Catalog> string

Usage: Query only

Manual operation: See ["Save/Recall"](#) on page 190

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:STORe <Filename>

Stores the current settings into the selected file; the file extension (`*.iqout`) is assigned automatically.

Setting parameters:

<Filename> "<filename>"
Filename or complete file path

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 190

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:LOAD <Filename>

Loads the selected file from the default or the specified directory. Loaded are files with extension `*.iqout`.

Setting parameters:

<Filename> "<filename>"
Filename or complete file path

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 190

[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETting:DELeTe <Filename>

Deletes the selected file from the default or specified directory. Deleted are files with the file extension *.iqout.

Setting parameters:

<Filename> "<filename>"
 Filename or complete file path

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 190

[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE <Type>

Sets the type of the analog signal.

Example: SOURce1:IQ:OUTPut:ANALog:TYPE DIFFerential

Options: DIFFerential requires R&S SMW-K16

Manual operation: See ["I/Q Output Type"](#) on page 149

[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE <Mode>

Determines the mode for setting the output parameters.

Parameters:

<Mode> FIXed | VARiable
 FIXed
 Locks the I/Q output settings
 VARiable
 Unlocks the settings
 *RST: FIXed

Example: See [Example"Enabling and configuring the analog output"](#) on page 1221.

Manual operation: See ["Mode"](#) on page 191

[[:SOURce<hw>]:IQ:OUTPut:LEVel <Level>

Sets the off-load voltage V_p of the analog I/Q signal output.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.

Also, the value range depends on the installed options, see the data sheet.

Parameters:

<Level> float
 Range: depends on options to 4
 Increment: 1E-4
 *RST: 1
 Default unit: V

Example: See [Example "Enabling and configuring the analog output"](#) on page 1221.

Options: B10

Manual operation: See ["I/Q Level Vp EMF"](#) on page 191

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe] <State>

Couples the bias setting of the I and Q signal components.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example "Enabling and configuring the analog output"](#) on page 1221.

Manual operation: See ["Couple I/Q Bias"](#) on page 191

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I <I>

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q <Q>

Specifies the amplifier bias V_{bias} of the respective I or Q component.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.

Parameters:

<Q> float
 Range: $(-4+V_p/2+V_{offset}/2), V$ to $(4-V_p/2-V_{offset}/2), V$
 (R&S SMW-B10) / -0.2V to 2.5V (R&S SMW-B9)
 Increment: 1E-4
 *RST: 0
 Default unit: V

Example: See [Example "Enabling and configuring the analog output"](#) on page 1221.

Manual operation: See ["Bias \(EMF\)"](#) on page 192

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I <I>

[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q <Q>

Sets an offset V_{offset} between the inverting and non-inverting input of the differential analog I/Q output signal.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 188.

Parameters:

<Q> float
 Range: $(-4+V_p/2+V_{bias}/2),V$ to $(4-V_p/2-V_{bias}/2),V$ (R&S SMW-B10) / $(-2+V_p),V$ to $(2-V_p),V$ (R&S SMW-B9)
 Increment: 1E-4
 *RST: 0
 Default unit: V

Example: See [Example "Enabling and configuring the analog output"](#) on page 1221.

Manual operation: See ["Offset \(EMF\)"](#) on page 192

14.19.10.2 SOURce:IQ:OUTPut:DIGital commands

This section describes the commands of the output of a digital I/Q signal.

Common suffixes

The following suffixes are used:

Suffix	Value range	Description
BBMM<ch>	1 to 2	DIG I/Q connector Option: R&S SMW-B9/-K19: HS DIG I/Q connector See also Chapter 4.3.4, "Supported digital interfaces depending on the system configuration" , on page 121.
FADer<ch>	1 to 4 ^{*)}	Option: R&S SMW-B10 DIG I/Q connector ^{*)} The number of the available DIG I/Q connectors on the FADER boards depends on the selected configuration (see also :SCONfiguration:FADing).
CHANnel<ch0>	0 to 7	Option: R&S SMW-B9/-K19 Channel number Up to 8 channels per HS DIG I/Q interface and max. 8 channels for both interfaces.

Example: Enabling and configuring the HS DIG I/Q digital outputs

Option: R&S SMW-B9/-K19

```
SCONfiguration:MODE ADV
SCONfiguration:OUTPut:MODE HSD
SCONfiguration:FADing SISO4X1X1
SCONfiguration:BASEband:SOURce SEP
SCONfiguration:DIQ:BBMM1:CHANnels CH4
```

```
SCONfiguration:DIQ:BBMM2:CHANnels CH2
SCONfiguration:APPLy
```

```
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel0:MODE ADD
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel0:STReam2:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel1:STReam2:STATe 0
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel1:STReam2:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel1:STReam2:STATe 0
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel0:MODE ADD
SCONfiguration:OUTPut:MAPPING:BBMM1:CHANnel1:STReam2:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel0:STReam1:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel0:STReam2:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel0:STReam3:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel0:STReam4:STATe 1
SCONfiguration:OUTPut:MAPPING:BBMM2:CHANnel1:STReam4:STATe 1
```

```
SOURcel:IQ:OUTPut:DIGital:BBMM1:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:COMMon:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:SRATe 100000000
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel0:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel0:NAME "BBMM1_CH0"
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel0:SRATe?
// Respons in Hz: "100000000"
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel1:STATe 0
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel2:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:CHANnel3:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:SRATe:SUM?
// Respons in Hz: "300000000"
SOURcel:IQ:OUTPut:DIGital:BBMM1:SRATe:MAX?
// Respons in Hz: "125000000000"
SOURcel:IQ:OUTPut:DIGital:BBMM2:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM2:COMMon:STATe 0
SOURcel:IQ:OUTPut:DIGital:BBMM2:CHANnel0:SRATe 250000000
SOURcel:IQ:OUTPut:DIGital:BBMM2:CHANnel0:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM2:CHANnel1:SRATe 100000000
SOURcel:IQ:OUTPut:DIGital:BBMM2:CHANnel1:STATe 1
SOURcel:IQ:OUTPut:DIGital:BBMM1:SRATe:SUM?
// Respons in Hz: "350000000"
SOURcel:IQ:OUTPut:DIGital:BBMM1:SRATe:MAX?
// Respons in Hz: "125000000000"
```

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:STATe..... 1227
[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:STATe..... 1227
[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:INTerface..... 1228
[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:INTerface..... 1228
[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SLOW:STATe..... 1228
[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:PON..... 1228
[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:PON..... 1228
[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SOURce..... 1228
```

[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe:SOURce.....	1228
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe.....	1229
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe.....	1229
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CDEvice?.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:CDEvice?.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:VIA.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:VIA.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP:MODE.....	1231
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP:MODE.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP[:INCRement].....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP[:INCRement].....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:GDElay:CStAt.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:StAt?.....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:StAt?.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:RESet.....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:RESet.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:StAt?.....	1233
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:StAt?.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:COMMon:StAt.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:NAME.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:SRATe.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:StAt.....	1235
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SUM?.....	1235
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:MAX?.....	1235

[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:StAt <State>

[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:StAt <State>

Activates the digital I/Q signal output.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example:

SOURce:IQ:OUTPut:DIGital:BBMM2:StAt ON
 Activates the [BBMM 2] output connector.

Manual operation: See "State" on page 179

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:INTerface <BboutInterfMode>
```

```
[[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:INTerface <BboutInterfMode>
```

Selects the connector for output of the digital IQ signal.

Parameters:

<BboutInterfMode> DIGital | HSDin

DIGital

DIG I/Q

HSDin

HS DIG I/Q

*RST: DIN

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SLOW:STATe <SlowIqState>
```

Enables/disables slow IQ mode.

See user manual R&S SMW-K551 Generation of Digital "Slow IQ" Signals.

Parameters:

<SlowIqState> 1 | ON | 0 | OFF

*RST: 0

Options: R&S SMW-K551

Manual operation: See "[Slow IQ State](#)" on page 179

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:PON <Pon>
```

```
[[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:PON <Pon>
```

Sets the power-on state of the selected digital I/Q output.

Parameters:

<Pon> OFF | UNCHanged

*RST: UNCHanged

Example:

```
:SOURce:IQ:OUTPut:DIGital:BBMM2:PON OFF
```

Deactivates the [BBMM 2] output connector when the instrument is switched on.

Manual operation: See "[Power-On State](#)" on page 186

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SOURce <Source>
```

```
[[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe:SOURce <Source>
```

Selects whether the sample rate is estimated based on the digital signal or is a user-defined value.

Parameters:

<Source>

USER | DOUT

DOUT

Enabled for BBMM1|BBMM2 connectors

*RST: USER

Example::SOURce:IQ:OUTPut:DIGital:BBMM2:SRATe:SOURce
DOUT

Sample rate estimation based on the applied I/Q data clock

:SOURce:IQ:OUTPut:DIGital:BBMM2:SRATe?

Manual operation: See ["Source"](#) on page 180**[:SOURce] :IQ:OUTPut:DIGital:BBMM<ch>:SRATe <SRate>**

Sets the sample rate of the digital I/Q output signal.

Parameters:

<SRate>

float

Range: 400 to depends on options

Increment: 0.001

*RST: 100E6

Default unit: Hz

The maximum value depends on the installed options as follows:
R&S SMW-B10: max = 200E6 and depends on the connected
receiving deviceR&S SMW-B9: system clock depending on the system configuration
and fader configurationSee also [Chapter 4.3.4, "Supported digital interfaces depending
on the system configuration"](#), on page 121.**Example:**See [\[:SOURce \] :IQ:OUTPut:DIGital:FADer<ch>:SRATe:
SOURce](#) on page 1228.**Manual operation:** See ["Value"](#) on page 180**[:SOURce] :IQ:OUTPut:DIGital:FADer<ch>:SRATe <SRate>**

Sets/queries the sample rate of the digital I/Q output signal.

Parameters:**<SRate>** float

Range: 0.5E6 to depends on options

Increment: 0.5E6

*RST: 100E6

Default unit: Hz

The maximum value depends on the installed options as follows:

R&S SMW-B10: max = 200E6 and depends on the connected receiving device

R&S SMW-B9: max = 250E6

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.**Example:**See `[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe:SOURce` on page 1228.**Manual operation:** See ["Value"](#) on page 180**[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CDEvice?****[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:CDEvice?**

Queries information on the connected device.

Return values:**<CDevice>** string**Example:**`:SOURce:IQ:OUTPut:DIGital:BBMM2:CDEvice?`**Usage:**

Query only

Manual operation: See ["Connected Device"](#) on page 180**[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWER:VIA <Via>****[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWER:VIA <Via>**

Selects the respective level entry field for the I/Q output.

Parameters:**<Via>** PEP | LEVel

*RST: PEP

Manual operation: See ["Set Level Via"](#) on page 184**[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWER:PEP****<BboutPepHs>****[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWER:PEP <Pep>****[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWER:PEP <Pep>**

Enters the peak level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Parameters:

<Pep> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example: :SOURce:IQ:OUTPut:DIGital:BBMM2:POWer:PEP -10

Manual operation: See "[Peak Level](#)" on page 182

[:SOURce] : IQ : OUTPut : DIGital : BBMM <ch> : CHANnel <st0> : POWer : LEVel
 <BboutHsLevel>

[:SOURce] : IQ : OUTPut : DIGital : BBMM <ch> : POWer : LEVel <Level>

[:SOURce] : IQ : OUTPut : DIGital : FADer <ch> : POWer : LEVel <Level>

Enters the RMS level of the output signal.

Parameters:

<Level> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example: SOURce:IQ:OUTPut:DIGital:BBMM2:POWer:LEVel -10

Manual operation: See "[Level](#)" on page 182

[:SOURce] : IQ : OUTPut : DIGital : BBMM <ch> : POWer : STEP : MODE <Mode>

[:SOURce] : IQ : OUTPut : DIGital : FADer <ch> : POWer : STEP : MODE <Mode>

Defines the type of step size to vary the digital output power step-by-step.

Parameters:

<Mode> DECimal | USER

DECimal

increases or decreases the level in steps of ten.

USER

increases or decreases the level in increments, determined with the command `[:SOURce] : IQ : OUTPut : DIGital : FADer <ch> : POWer : STEP [: INCRement]`.

*RST: DECimal

Example: :SOURce:IQ:OUTPut:DIGital:BBMM2:POWer:STEP:MODE
 USER

:SOURce:IQ:OUTPut:DIGital:BBMM2:POWer:STEP 5 dB

Activates the step width for level variation in 5 dB steps

Manual operation: See "[User Variation](#)" on page 185

[[:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:POWer:STEP[:INCRement]
 <Increment>

[[:SOURce]:IQ:OUTPut:DiGital:FADer<ch>:POWer:STEP[:INCRement] <Increment>

Sets the step width. Use this value to vary the digital I/Q output level step-by-step.

Parameters:

<Increment> float
 Range: 0 to 80
 Increment: 0.01
 *RST: 1

Example: See `[[:SOURce]:IQ:OUTPut:DiGital:FADer<ch>:POWer:STEP:MODE` on page 1231

Manual operation: See ["User Variation"](#) on page 185

[[:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:GDElay:CState <CompState>

Enables/disables group delay compensation.

Parameters:

<CompState> 1 | ON | 0 | OFF
 *RST: 0

Example: `SOURce:IQ:OUTPut:DiGital:BBMM1:GDElay:CState 1`

Manual operation: See ["Group Delay Compensation"](#) on page 186

[[:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:OFLow:StAtE?

[[:SOURce]:IQ:OUTPut:DiGital:FADer<ch>:OFLow:StAtE?

Queries whether the I/Q output signal is clipped or not.

Return values:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: `SOURce:IQ:OUTPut:DiGital:BBMM2:OFLow:StAtE?`
 `// 0`
 `// no overflow`

Usage: Query only

Options: R&S SMW-B10

Manual operation: See ["Signal Monitoring"](#) on page 185

[[:SOURce]:IQ:OUTPut:DiGital:BBMM<ch>:OFLow:HOLD:RESet

[[:SOURce]:IQ:OUTPut:DiGital:FADer<ch>:OFLow:HOLD:RESet

Resets the overflow hold state and LED.

Example: `SOURce:IQ:OUTPut:DiGital:BBMM2:OFLow:HOLD:RESet`

Usage: Event

Options: R&S SMW-B10

Manual operation: See ["Signal Monitoring"](#) on page 185

**[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:STATe?
[:SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:STATe?**

Queries an overload since last reset for evaluating the measurement.

Return values:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: SOURce:IQ:OUTPut:DIGital:BBMM2:OFLow:HOLD:STATe?

Usage: Query only

Options: R&S SMW-B10

Manual operation: See ["Signal Monitoring"](#) on page 185

**[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:COMMon:STATe
<DigIqHsComState>**

If enabled, the same sample rate value is applied to all channels.

Parameters:

<DigIqHsComState> 1 | ON | 0 | OFF

Example: See [Example"Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Options: R&S SMW-K19

**[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:NAME
<DigIqHsCHName>**

Sets the channel name.

Parameters:

<DigIqHsCHName> string

Example: See [Example"Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Options: R&S SMW-K19

Manual operation: See ["Name"](#) on page 181

```
[ :SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:SRATe
<DiglqHsSratChan>
```

Sets the sample rate per channel.

Parameters:

<DiglqHsSratChan> float

Range: 400 to max*

Increment: 0.001

*RST: 100E6

*) max = 250E6 ("System Config > Mode = Advanced")/ max = 1250E6 ("System Config > Mode = Standard")

See also [Chapter 4.3.4, "Supported digital interfaces depending on the system configuration"](#), on page 121.

Example: See [Example "Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Options: R&S SMW-K19

Manual operation: See ["Sample Rate"](#) on page 181

```
[ :SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWER:PEP
<BboutPepHs>
```

The level is relative to full scale of 0.5 V (in terms of dB full scale).

Parameters:

<BboutPepHs> float

Range: -80 to 0

Increment: 0.01

*RST: 0

Example: See [Example "Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Manual operation: See ["Peak Level"](#) on page 182

```
[ :SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWER:LEVeI
<BboutHsLevel>
```

The level is relative to full scale of 0.5 V (in terms of dB full scale).

Parameters:

<BboutHsLevel> float

Range: -80 to 0

Increment: 0.01

*RST: 0

Example: See [Example "Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Manual operation: See ["Level"](#) on page 182

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:STATe
<DiglqHsOutChSta>
```

Enables the channel.

Parameters:

```
<DiglqHsOutChSta> 1 | ON | 0 | OFF
*RST: 1
```

Example: See [Example"Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Options: R&S SMW-K19

Manual operation: See ["Active"](#) on page 183

```
[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SUM?
[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:MAX?
```

Queries the maximum supported sample rate.

Return values:

```
<DiglqHsInSRMax> integer
Range: 1050E6 to 1250E6
*RST: 1050E6
```

Example: See [Example"Enabling and configuring the HS DIG I/Q digital outputs"](#) on page 1225.

Usage: Query only

Options: R&S SMW-K19

Manual operation: See ["Aggregated Link Sample Rate"](#) on page 183

14.19.11 SOURce:LFOutput subsystem

The SOURce:LFOutput subsystem contains the commands for setting the LF signal source in CW and Sweep mode and for analog modulation.

Example: Setup an LF sweep

The following example shows a command sequence to set up an LF sweep.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the trigger mode, the sweep mode and the sweep range
TRIGger1:LFFSweep:SOURce SINGLE
SOURce1:LFOutput1:SWEep:FREQuency:MODE AUTO
SOURce1:LFOutput1:FREQuency:START 1 kHz
SOURce1:LFOutput1:FREQuency:STOP 7 kHz
```

```

// Select linear spacing
// Select the waveform shape for the frequency sweep cycle
// Set the step width and the dwell time.
SOURCE1:LFOOutput1:SWEep:FREQuency:SPACing LINear
SOURCE1:LFOOutput1:SWEep:FREQuency:SHApe SAWtooth
SOURCE1:LFOOutput1:SWEep:FREQuency:STEP:LINear 100 Hz
SOURCE1:LFOOutput1:SWEep:FREQuency:DWELL 150 ms
// Alternatively to the step width set the number of steps
SOURCE1:LFOOutput1:SWEep:FREQuency:POINts 61

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
SOURCE1:LFOOutput:SWEep:FREQuency:RETRace 1

// Activate the LF frequency sweep
SOURCE1:LFOOutput:FREQuency:MODE SWE

// Trigger the sweep (depending on the set mode) and query the status
// Perform a one-off LF sweep
SOURCE1:LFOOutput1:SWEep:FREQuency:EXECute
SOURCE1:LFOOutput1:SWEep:FREQuency:RUNning?
// 1
// the sweep is running

// *****
// For manual step LF sweep use the following commands
*RST; *CLS
SOURCE1:LFOOutput:SWEep:FREQuency:MODE MANual
// Activate the LF frequency sweep
SOURCE1:LFOOutput:FREQuency:MODE SWEep
// Activate LF Output1.
SOURCE1:LFOOutput1:STATe 1
// Input the frequency manually for each step
SOURCE1:LFOOutput1:FREQuency:MANual 2 kHz
SOURCE1:LFOOutput1:FREQuency:MANual 2.1 kHz
// Alternatively use UP or DOWN parameter with set step width.
SOURCE1:LFOOutput1:SWEep:FREQuency:STEP:LINear 500 Hz
SOURCE1:LFOOutput1:FREQuency:MANual UP

```

Example: Configuring the LF generator

The following is a simple example on how to configure the LF generator and output the generated signal.

```

// configure the signal of the LF1 generator
SOURCE1:LFOOutput1:SHApe SQU
SOURCE1:LFOOutput1:SHApe:PULSe:PERiod 0.001
SOURCE1:LFOOutput1:SHApe:PULSe:WIDTh 0.0005
SOURCE1:LFOOutput1:SHApe:PULSe:DCYCle 0.5
// configure the signal of the LF1 generator
SOURCE1:LFOOutput2:SHApe SINE

```

```

SOURce1:LFOutput2:FREQuency 1000000
SOURce1:LFOutput2:PERiod?
// 0.000001

// changing the LF signal shape
// SOURce1:LFOutput2:SHApe TRAP
// SOURce1:LFOutput2:SHApe:PULSe:PERiod 0.2
// SOURce1:LFOutput2:SHApe:TRAPeZe:RISE 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:HIGh 0.0005
// SOURce1:LFOutput2:SHApe TRI
// SOURce1:LFOutput2:SHApe:PULSe:PERiod 0.1
// SOURce1:LFOutput2:SHApe:TRIangle:RISE 0.0001

// activate the LF output and select the LF1 as signal source
// configure the LF output signal
SOURce1:LFOutput1:FREQuency:MODE CW
SOURce1:LFOutput1:STATe 1
SOURce1:LFOutput1:SOURce LF1
SOURce1:LFOutput1:INTernal:VOLTage 1
SOURce1:LFOutput1:OFFSet 0.001

```

- [LF generator settings](#)..... 1237
- [LF sweep settings](#)..... 1244

14.19.11.1 LF generator settings

With the commands described in this section, you can configure the LF signal source.

[:SOURce]:LFOutput<ch>:BANDwidth?	1238
[:SOURce<hw>]:LFOutput<ch>:FREQuency	1238
[:SOURce<hw>]:LFOutput<ch>:PERiod?	1238
[:SOURce<hw>]:LFOutput:FREQuency:MANual	1239
[:SOURce<hw>]:LFOutput:FREQuency:MODE	1239
[:SOURce<hw>]:LFOutput:FREQuency:STOP	1240
[:SOURce<hw>]:LFOutput:FREQuency:START	1240
[:SOURce]:LFOutput<ch>[:STATe]	1240
[:SOURce]:LFOutput<ch>:OFFSet	1240
[:SOURce]:LFOutput<ch>:SOURce	1241
[:SOURce]:LFOutput<ch>:SOURce:PATH	1241
[:SOURce]:LFOutput<ch>:VOLTage	1241
[:SOURce<hw>]:LFOutput<ch>:SHApe	1242
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYCLE	1242
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod	1242
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTh	1242
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:FALL	1243
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:HIGh	1243
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:PERiod	1243

[.SOURce<hw>].LFOutput<ch>:SHAPE:TRAPeZe:RISE.....	1243
[.SOURce<hw>].LFOutput<ch>:SHAPE:TRlangle:PERiod.....	1244
[.SOURce<hw>].LFOutput<ch>:SHAPE:TRlangle:RISE.....	1244

[:SOURce]:LFOutput<ch>:BANDwidth?

Queries the bandwidth of the external LF signal.

Return values:

<Bandwidth> BW0M2 | BW10m
*RST: BW10m

Example:

```
LFO:BAND?  
// BW10m  
// the bandwidth of the externally supplied LF signal is 10 MHz
```

Usage: Query only

Manual operation: See "[Bandwidth](#)" on page 579

[:SOURce]:LFOutput:FREQuency

Sets the frequency of the LF signal in [:SOURCE

Note:

- If the LF generator is used as a signal source, the instrument performs the analog modulations (AM/FM/PM/PM) with this frequency.
- In sweep mode (`[[:SOURCE<hw>]:LFOutput:FREQUENCY:MODE SWE]`), the frequency is coupled with the sweep frequency.

Parameters:

<Frequency>	float
Range:	0.1 to depends on the installed options (R&S SMW-K24)
Increment:	0.01
*RST:	1000
Default unit:	Hz

Example: See [Example "Configuring the LF generator"](#) on page 1236.

Manual operation: See "Frequency" on page 577

[:SOURce]:LFOutput:PERiod?

Queries the repetition frequency of the sine signal.

Return values:

<LfSinePeriod> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 0.001
 Default unit: s

Example: See [Example "Configuring the LF generator"](#) on page 1236.

Usage: Query only

[:SOURce<hw>]:LFOutput:FREQuency:MANual <Manual>

Sets the frequency of the subsequent sweep step if [LFO:SWE:MODE MAN](#).

Use a separate command for each sweep step.

Parameters:

<Manual> float
 You can select any value within the setting range, where:
 START is set with [\[:SOURce<hw>\]:LFOutput:FREQuency:START](#)
 STOP is set with [\[:SOURce<hw>\]:LFOutput:FREQuency:STOP](#)
 Range: START to STOP
 Increment: 0.1
 *RST: 1000

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Current Frequency"](#) on page 532

[:SOURce<hw>]:LFOutput:FREQuency:MODE <Mode>

Sets the mode for the output of the LF generator frequency, and determines the commands to be used for frequency settings.

Parameters:

<Mode> CW | FIXed | SWEep
CW|FIXed
 Sets the fixed-frequency mode. CW and FIXed are synonyms.
 To set the output frequency, use command [\[:SOURce<hw>\]:LFOutput<ch>:FREQuency](#)
SWEep
 Sets sweep mode.
 To set the frequency, use the commands:
[\[:SOURce<hw>\]:LFOutput:FREQuency:START](#) and [\[:SOURce<hw>\]:LFOutput:FREQuency:STOP](#)
 Or [\[:SOURce<hw>\]:LFOutput:FREQuency:MANual](#)
 *RST: CW

Example: See [Example"Setup an LF sweep"](#) on page 1235.

Manual operation: See ["State \(LF frequency sweep\)"](#) on page 532

[:SOURce<hw>]:LFOutput:FREQuency:STOP <Stop>

[:SOURce<hw>]:LFOutput:FREQuency:START <Start>

Sets the start/stop frequency for [\[:SOURce<hw>\]:LFOutput:FREQuency:MODE](#) SWEEP.

Parameters:

<Start> float
 Range: 0.1 Hz to 1 MHz
 Increment: 0.1
 *RST: 1 KHz

Example: See [Example"Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 536

[:SOURce]:LFOutput<ch>[:STATe] <State>

Activates LF signal output.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["State"](#) on page 581

[:SOURce]:LFOutput<ch>:OFFSet <Offset>

Sets a DC offset at the selected LF Output.

Parameters:

<Offset> float
 Range: -3.6 to 3.6
 Increment: 2E-3
 *RST: 0
 Default unit: V

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["DC-Offset"](#) on page 582

[[:SOURce]:LFOutput<ch>:SOURce <Source>

Determines the LF signal to be synchronized, when monitoring is enabled.

Parameters:

<Source>

LF1 | LF2 | NOISe | AM | FMPM | EXT1 | | EXT2 | LF1B | LF2B |
AMB | NOISB | FMPMB | LF1A | LF2A | NOISA | FMPMA | AMA

LF1|LF2|LF1A|LF2A|LF1B|LF2B

Selects an internally generated LF signal.

NOISe|NOISA|NOISB

Selects an internally generated noise signal.

EXT1|EXT2

Selects an externally supplied LF signal

AM|AMA|AMB

Selects the AM signal.

FMPM|FMPMA|FMPMB

Selects the signal also used by the frequency or phase modulations.

*RST: LF1

Example: See [Example "Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Source"](#) on page 581

[[:SOURce]:LFOutput<ch>:SOURce:PATH <SourPath>

Determines the path of the LF output source.

Parameters:

<SourPath>

A | B

*RST: A

Example: LFO:SOUR:PATH?
Queries the currently set path for the LF output signal source.

[[:SOURce]:LFOutput<ch>:VOLTage <Voltage>

Sets the output voltage of the selected LF output.

You can use this parameter when you have two LF generators activated.

Parameters:

<Voltage>

float

Range: dynamic (see data sheet)

Increment: 0.001

*RST: 1

Default unit: V

Example: SOURce:LFOutput1:VOLTage 1.5

Manual operation: See ["Output Voltage"](#) on page 582

[[:SOURce<hw>]:LFOutput<ch>:SHAPE <Shape>

Selects the waveform shape of the LF signal.

Parameters:

<Shape> SINE | SQUARE | PULSE | TRIangle | TRAPeZe
*RST: SINE

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Options: R&S SMW-K24

Manual operation: See ["Shape"](#) on page 577

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:DCYCLE <DCycle>

Sets the duty cycle for the shape pulse.

Parameters:

<DCycle> float
Range: 1E-6 to 100
Increment: 1E-6
*RST: 50
Default unit: PCT

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Pulse Duty Cycle"](#) on page 578

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:PERIOD <Period>

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

Parameters:

<Period> float
Range: 1E-6 to 100
Increment: 1E-8
*RST: 1E-3

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Period"](#) on page 577

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:WIDTH <Width>

Sets the pulse width of the generated pulse.

Parameters:

<Width> float
Range: 1E-6 to 100
Increment: 1E-8
*RST: 5E-4

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Pulse Width"](#) on page 578

[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:FALL <Fall>

Selects the fall time for the trapezoid shape of the LF generator.

Parameters:

<Fall>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	250E-6

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Trapezoid Rise / Fall"](#) on page 578

[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:HIGh <High>

Sets the high time for the trapezoid signal of the LF generator.

Parameters:

<High>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	250E-6

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Trapezoid High"](#) on page 578

[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod <Period>

Sets the period of the generated trapezoid shape. The period determines the repetition frequency of the internal signal.

Parameters:

<Period>	float
Range:	1E-6 to 100
Increment:	1E-8
*RST:	1E-3

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Period"](#) on page 577

[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:RISE <Rise>

Selects the rise time for the trapezoid shape of the LF generator.

Parameters:

<Rise> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 250E-6

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Trapezoid Rise / Fall"](#) on page 578

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRiangle:PERiod <Period>

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

Parameters:

<Period> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 0.001

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Period"](#) on page 577

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRiangle:RISE <Rise>

Selects the rise time for the triangle single of the LF generator.

Parameters:

<Rise> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 0.5E-3

Example: See [Example"Configuring the LF generator"](#) on page 1236.

Manual operation: See ["Triangle Rise"](#) on page 578

14.19.11.2 LF sweep settings

With the commands described in this section, you can configure the sweep of the LF signal.

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWEll	1245
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute	1245
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE	1245
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts	1246
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace	1246
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNING?	1246
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE	1247

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	1247
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	1247
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear].....	1247

`[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELl <Dwell>`

Sets the dwell time for each frequency step of the sweep.

Parameters:

<code><Dwell></code>	float
Range:	0.001 to 100
Increment:	100E-6
*RST:	0.01
Default unit:	s

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Dwell Time"](#) on page 534

`[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute`

Immediately starts an LF sweep.

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:MODE](#) determines which sweep is executed, e.g. `SOURce:LFOutput:SWEep:FREQuency:MODE STEP`.

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 535

`[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE <Mode>`

Sets the cycle mode of the LF sweep.

Parameters:

<code><Mode></code>	AUTO MANual STEP
---------------------------	----------------------

AUTO

Performs a complete sweep cycle from the start to the end value when a trigger event occurs.

The dwell time determines the time period until the signal switches to the next step.

MANual

Performs a single sweep step when a manual trigger event occurs.

The trigger system is not active. To trigger each frequency step of the sweep individually, use the command [\[:SOURce<hw>\]:LFOutput:FREQuency:MANual](#) on page 1239.

STEP

Each trigger command triggers one sweep step only.

The frequency increases by the value set with the commands:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :STEP [:LINear]` (linear spacing)

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :STEP :LOGarithmic` (logarithmic spacing)

*RST: AUTO

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Mode"](#) on page 533

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :POINTs <Points>

Sets the number of steps in an LF sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523

Parameters:

<Points> integer
Range: 2 to POINTs
*RST: 50

Example: See [Example "Setup an LF sweep"](#) on page 1235.

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :RETRace <State>

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Manual operation: See ["Retrace"](#) on page 533

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :RUNNING?

Queries the current status of the LF frequency sweep mode.

Return values:

<State> 1 | ON | 0 | OFF

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Usage: Query only

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE <Shape>

Sets the cycle mode for a sweep sequence (shape).

Parameters:

<Shape> SAWTooth | TRIangle
 *RST: SAWTooth

Example: See [Example"Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Shape"](#) on page 534

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing <Spacing>

Selects linear or logarithmic sweep spacing.

Parameters:

<Spacing> LINear | LOGarithmic
 *RST: LINear

Example: See [Example"Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Spacing"](#) on page 534

**[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic
 <Logarithmic>**

Sets the step width factor for logarithmic sweeps to calculate the frequencies of the steps.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523

Parameters:

<Logarithmic> float
 The unit is mandatory
 Range: 0.01 to 100
 Increment: 0.01
 *RST: 1
 Default unit: PCT

Example: See [Example"Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 537

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear] <Linear>

Sets the step width for the linear sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523

Parameters:

<Linear> float
 Range: 0.1 to STOP-START
 Increment: 0.1
 *RST: 1000

Example: See [Example "Setup an LF sweep"](#) on page 1235.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 537

14.19.12 SOURce:LIST subsystem

The SOURce:LIST subsystem contains all commands for defining lists and for handling of list files.

List files have the predefined file extension *.lsw.

Refer to [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919 for general information on file handling in the default and in a specific directory.



- You can use the same lists for both paths.
File operations such as creating, deleting and querying lists are therefore path-independent. In this case, the suffix <HW> under SOURce **must** be omitted. An error message is displayed if the suffix is specified.
- *RST does not affect data lists.
- SCPI refers to the individual lists as segments.

Example: Create an RF list and activate the list mode

The following example shows a command sequence to create an RF list and to activate the list mode. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available list files in the default
// directory /var/user
// Select the list file or create it (if not existing)
*RST; *CLS
SOUR1:LIST:CAT?
// Response:- shows the name of available list files (if applicable)
SOUR1:LIST:SEL "/var/user/list1.lsw"

// Write the frequency/level/dwell time values in the selected list file
// existing data is overwritten
// Query the number of frequency/power/dwell time entries in the selected list
// Query the amount of free memory (in bytes) for list mode lists
SOUR1:LIST:FREQ 58 MHz, 61 MHz, 73 MHz, 86 MHz, 91 MHz, 92 MHz, 98 MHz
SOUR1:LIST:POW 13 dBm, 12 dBm, 5 dBm, 3 dBm, 0 dBm, 4 dBm, 6 dBm
SOUR1:LIST:DWEL:LIST 10000, 100000, 200000, 19000, 10000, 150000, 220000
SOUR1:LIST:FREQ:POIN?
```

```
// 7
SOUR1:LIST:POW:POINT?
// 7
SOUR1:LIST:DWEL:LIST:POIN?
// 7
SOUR1:LIST:FREE?
// 2147483647 (bytes of free memory)

// Use dwell times from list
// Configure the list mode parameters
// Enable RF output
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:MODE "LIST"

// Learn list mode data
SOUR1:LIST:LEAR

OUTP1:STAT ON

// Use global dwell time
// Set only a part of the list (value pairs 3 to 5) to be processed
// Configure the list mode parameters using global dwell time
// Learn list mode data
// Enable RF output
SOUR1:LIST:IND:START 2
SOUR1:LIST:IND:STOP 4
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:LIST 500 ms
SOUR1:LIST:LEAR
OUTP1:STAT ON
SOUR1:LIST:RMOD LEAR

// Enable the list mode
// Trigger the list (depending on the mode, not needed with trigger
// mode AUTO); query the current index
// Reset the list to the starting point
SOUR1:FREQ:MODE LIST
SOUR1:LIST:TRIG:EXEC
SOUR1:LIST:RUNN?
SOUR1:LIST:IND?
// 3
// value changes when the value is queried again
SOUR1:LIST:RES

// For list mode STEP use the following commands
*RST; *CLS
// Change list mode to STEP
SOUR1:LIST:MODE STEP
// Activate RF Output1
```

```

OUTP1:STAT 1
// Activate the list mode
SOUR1:FREQ:MODE LIST
// For each step: select frequency/powerlevel pair as index from the list
SOUR1:LIST:IND 2
SOUR1:LIST:IND 3
SOUR1:LIST:IND 4

// Use the selected list for path B (with List Mode B default settings)
SOUR2:LIST:SEL "/var/user/list1.lsw"
OUTP2:STAT ON
SOUR2:FREQ:MODE LIST
SOUR2:LIST:IND?
// 2
// value changes when the value is queried again

// Deactivate the list mode
SOUR1:FREQ:MODE CW

// Use global dwell time
// Set only a part of the list (value pairs 3 to 5) to be processed
// Configure the list mode parameters using global dwell time
// Enable RF output
SOUR1:LIST:IND:START 2
SOUR1:LIST:IND:STOP 4
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:LIST 500 ms
OUTP1:STAT ON

// Enable the list mode
// Trigger the list (depending on the mode, not needed with trigger
// mode AUTO); query the current index
// Reset the list to the starting point
SOUR1:FREQ:MODE LIST
SOUR1:LIST:TRIG:EXEC
SOUR1:LIST:RUNN?
SOUR1:LIST:IND?
// 3
// value changes when the value is queried again
SOUR1:LIST:RES

// For list mode STEP use the following commands
*RST; *CLS
// Change list mode to STEP
SOUR1:LIST:MODE STEP
// Activate RF Output1
OUTP1:STAT 1
// Activate the list mode
SOUR1:FREQ:MODE LIST

```

```
// For each step: select frequency/powerlevel pair as index from the list
SOUR1:LIST:IND 2
SOUR1:LIST:IND 3
SOUR1:LIST:IND 4

// Use the selected list for path B (with List Mode B default settings)
SOUR2:LIST:SEL "/var/user/list1.lsw"
OUTP2:STAT ON
SOUR2:FREQ:MODE LIST
SOUR2:LIST:IND?
// 2
// value changes when the value is queried again

// Deactivate the list mode
SOUR1:FREQ:MODE CW
```

Example: List mode data exchange

The following example shows a command sequence to export a list (here the RF list created with the example before) into an ASCII file. Further hardware settings are not considered.

```
*RST; *CLS
LIST:DEXC:MODE EXP

// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOUR1:LIST:DEXC:AFIL:EXT CSV
SOUR1:LIST:DEXC:AFIL:SEP:DEC DOT
SOUR1:LIST:DEXC:AFIL:SEP:COL COMM

// Select source and destination path/directory
// Query available listfiles in default directory "/var/user"
SOUR1:LIST:CAT?
// list1
SOUR1:LIST:DEXC:AFIL:SEL "/var/user/list1ASCII"
SOUR1:LIST:DEXC:SEL "/var/user/list1"

// Export the list file data into the ASCII file
SOUR1:LIST:DEXC:EXEC

// Query the available ASCII files with extension .csv
SOUR1:LIST:DEXC:AFIL:CAT?
// Response: "list1ASCII"

// Deactivate the list mode
SOUR1:FREQ:MODE CW
```

- [List mode settings](#)..... 1252
- [List mode file operation](#)..... 1258
- [List mode data exchange](#)..... 1260

14.19.12.1 List mode settings

With the following commands, you can create list mode data, select the trigger mode and determine the dwell time.

[:SOURce<hw>]:LIST:DWELL	1252
[:SOURce<hw>]:LIST:DWELL:MODE	1252
[:SOURce<hw>]:LIST:DWELL:LIST	1253
[:SOURce<hw>]:LIST:DWELL:LIST:POINts?	1253
[:SOURce<hw>]:LIST:FREQuency	1253
[:SOURce<hw>]:LIST:FREQuency:POINts?	1254
[:SOURce<hw>]:LIST:INDeX	1254
[:SOURce<hw>]:LIST:INDeX:STARt	1254
[:SOURce<hw>]:LIST:INDeX:STOP	1254
[:SOURce<hw>]:LIST:RMODE	1255
[:SOURce<hw>]:LIST:LEARn	1255
[:SOURce<hw>]:LIST:MODE	1255
[:SOURce<hw>]:LIST:POWEr	1256
[:SOURce<hw>]:LIST:POWEr:POINts?	1256
[:SOURce<hw>]:LIST:TRIGger:EXECute	1257
[:SOURce<hw>]:LIST:TRIGger:SOURce	1257
[:SOURce<hw>]:LIST:RUNNing?	1258

[\[:SOURce<hw>\]:LIST:DWELL](#) <Dwell>

Sets the global dwell time. The instrument generates the signal with the frequency / power value pairs of each list entry for that particular period.

See also [Significant parameters and functions](#).

Parameters:

<Dwell>	float
	Range: 0.5E-3 to 100
	Increment: 1E-6
	*RST: 0.01

Example: See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Global Dwell Time"](#) on page 542

[\[:SOURce<hw>\]:LIST:DWELL:MODE](#) <DwellMode>

Selects the dwell time mode.

Parameters:

<DwellMode>	LIST GLOBal
-------------	---------------

LIST

Uses the dwell time, specified in the data table for each value pair individually.

GLOBal

Uses a constant dwell time, set with command [:

[SOURce<hw>\]:LIST:DWELL](#).

*RST: GLOBal

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Dwell Time Mode"](#) on page 542

[:SOURce<hw>]:LIST:DWELL:LIST <Dwell>

Enters the dwell time values in the selected list in µs.

Parameters:

<Dwell> <Dwell#1>{, <Dwell#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data. The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy. See also :

[FORMat \[:DATA\]](#) on page 952 for more details.

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Edit List Mode Data"](#) on page 548

[:SOURce<hw>]:LIST:DWELL:LIST:POINTS?

Queries the number (points) of dwell time entries in the selected list.

Return values:

<Points> integer

Range: 0 to INT_MAX

*RST: 0

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Usage: Query only

[:SOURce<hw>]:LIST:FREQUENCY <Frequency>

Enters the frequency values in the selected list.

Parameters:

<Frequency> <Frequency#1>{, <Frequency#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data.

The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also :[FORMat](#) [:[DATA](#)] .

Range: 300 kHz to RFmax (depends on the installed options)

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Manual operation: See ["Edit List Mode Data"](#) on page 548

[:SOURce<hw>]:LIST:FREQuency:POINts?

Queries the number (points) of frequency entries in the selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Usage: Query only

[:SOURce<hw>]:LIST:INDEx <Index>

Sets the list index in [LIST:MODE STEP](#).

After the trigger signal, the instrument processes the frequency and level settings of the selected index.

Parameters:

<Index> integer
 *RST: 0

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Manual operation: See ["Current Index"](#) on page 541

[:SOURce<hw>]:LIST:INDEx:STARt <Start>

[:SOURce<hw>]:LIST:INDEx:STOP <Stop>

Sets the start and stop index of the index range which defines a subgroup of frequency/level value pairs in the current list.

Parameters:

<Stop> integer
 Index range
 Only values inside this range are processed in list mode
 Range: 0 to list length
 *RST: 0

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["List Range from/to"](#) on page 544

[[:SOURce<hw>]:LIST:RMODE <RMode>

Selects the run mode for processing the list.

Parameters:

<RMode> LEARNed | LIVE
LEARNed
 Generates the signal by replaying the previously learned and saved data from the temporary memory.
LIVE
 Generates the signal by processing the list directly.
 *RST: LIVE

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Run Mode"](#) on page 543

[[:SOURce<hw>]:LIST:LEARN

Learns the selected list to determine the hardware setting for all list entries. The results are saved with the list.

See also ["Learn List Mode Data list processing mode"](#) on page 529.

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Usage: Event

Manual operation: See ["Learn List Mode Data"](#) on page 543

[[:SOURce<hw>]:LIST:MODE <Mode>

Sets the list mode.

The instrument processes the list according to the selected mode and trigger source. See [LIST:TRIG:SOUR AUTO](#), [SING](#) or [EXT](#) for the description of the trigger source settings.

Parameters:

<Mode> AUTO | STEP

AUTO

Each trigger event triggers a complete list cycle.

STEP

Each trigger event triggers only one step in the list processing cycle. The list is processed in ascending order.

INDEX

The trigger event triggers the entry of the selected index in the list.

*RST: AUTO

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Mode"](#) on page 541

[:SOURce<hw>]:LIST:POWer <Power>

Enters the level values in the selected list. The number of level values must correspond to the number of frequency values. Existing data is overwritten.

Parameters:

<Power> <Power#1>{, <Power#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data.

The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also [:FORMat \[:DATA \]](#).

Range: depends on the installed options

Default unit: dBm

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["Edit List Mode Data"](#) on page 548

[:SOURce<hw>]:LIST:POWer:POINts?

Queries the number (points) of level entries in the selected list.

Return values:

<Points> integer

Range: 0 to INT_MAX

*RST: 0

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Usage: Query only

[:SOURce<hw>] :LIST:TRIGger:EXECute

Starts the processing of a list in list mode.

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Usage: Event

Manual operation: See ["Execute Single"](#) on page 543

[:SOURce<hw>] :LIST:TRIGger:SOURce <Source>

Selects the trigger source for processing lists.

The designation of the parameters correspond to those in sweep mode. SCPI standard uses other designations for the parameters, which are also accepted by the instrument. The SCPI designation should be used if compatibility is an important consideration. For an overview, see the following table:

Rohde & Schwarz parameter	SCPI parameter	Applies to the list mode parameters:
AUTO	IMMediate	[:SOURce<hw>] :LIST:MODE AUTO
SINGLe	BUS	[:SOURce<hw>] :LIST:MODE AUTO or [:SOURce<hw>] :LIST:MODE STEP
EXTErnal	EXTErnal	[:SOURce<hw>] :LIST:MODE AUTO or [:SOURce<hw>] :LIST:MODE STEP

Parameters:

<Source>

AUTO | IMMediate | SINGLe | BUS | EXTErnal

AUTO|IMMediate

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. The selected list is restarted as soon as it is finished.

SINGLe|BUS

The list is triggered by the command [:SOURce<hw>] :LIST:TRIGger:EXECute. The list is executed once.

EXTErnal

The list is triggered externally and executed once.

*RST: AUTO

Example: See [Example](#) "Create an RF list and activate the list mode" on page 1248.

Manual operation: See ["Mode"](#) on page 541

[[:SOURce<hw>]:LIST:RUNNING?

Queries the current state of the list mode.

Return values:

<State> 1 | ON | 0 | OFF
 1
 Signal generation based on the list mode is active.

Example: See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Usage: Query only

14.19.12.2 List mode file operation

The following section covers basic commands to file handling in list mode.

[:SOURce<hw>]:LIST:CATalog?	1258
[:SOURce<hw>]:LIST:DELeTe	1258
[:SOURce<hw>]:LIST:DELeTe:ALL	1259
[:SOURce<hw>]:LIST:FREE?	1259
[:SOURce<hw>]:LIST:RESet	1259
[:SOURce<hw>]:LIST:SElect	1260

[[:SOURce<hw>]:LIST:CATalog?

Queries the available list files in the specified directory.

Return values:

<Catalog> string
 List of list filenames, separated by commas

Example: See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Usage: Query only

Manual operation: See ["List Mode Data"](#) on page 544

[[:SOURce<hw>]:LIST:DELeTe <Filename>

Deletes the specified list.

Setting parameters:

<Filename> string
 Filename or complete file path; file extension is optional.

Example: See [\[:SOURce<hw>\]:LIST:DELeTe:ALL](#) on page 1259.

Usage: Setting only

Manual operation: See ["List Mode Data"](#) on page 544

[[:SOURce<hw>]:LIST:DELeTe:ALL

Deletes all lists in the set directory.

This command can only be executed, if:

- No list file is selected.
- List mode is disabled.

Example:

```
SOUR1:LIST:CAT?
// list,my_list
SOUR1:LIST:DEL "/var/user/list1"
SOUR1:LIST:CAT?
// my_list
SOUR1:FREQ:MODE?
// LIST
SOUR1:LIST:SEL?
// /var/user/my_list.lsw
//deactivate list mode
SOUR1:FREQ:MODE CW
SOUR1:LIST:DELeTe:ALL
SOUR1:LIST:CAT?
// -
// all list files are deleted
```

Usage: Event

Manual operation: See ["List Mode Data"](#) on page 544

[[:SOURce<hw>]:LIST:FREE?

Queries the amount of free memory (in bytes) for list mode lists.

Return values:

<Free> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Usage: Query only

[[:SOURce<hw>]:LIST:RESet

Jumps to the beginning of the list.

Example: See [Example"Create an RF list and activate the list mode"](#) on page 1248.

Usage: Event

Manual operation: See ["Reset"](#) on page 543

[:SOURce<hw>]:LIST:SElect <Filename>

Selects or creates a data list in list mode.

If the list with the selected name does not exist, a new list is created.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See [Example "Create an RF list and activate the list mode"](#) on page 1248.

Manual operation: See ["List Mode Data"](#) on page 544

14.19.12.3 List mode data exchange

With the following commands, you can configure lists in ASCII format and export or import them accordingly.

[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?	1260
[:SOURce<hw>]:LIST:DEXChange:EXECute	1260
[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension	1261
[:SOURce<hw>]:LIST:DEXChange:AFILe:SElect	1261
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn	1261
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal	1261
[:SOURce<hw>]:LIST:DEXChange:MODE	1262
[:SOURce<hw>]:LIST:DEXChange:SElect	1262

[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?

Queries the available ASCII files for export or import of list mode data in the current or specified directory.

Return values:

<Catalog> string
List of ASCII files *.txt or *.csv, separated by commas.

Example: See [Example "List mode data exchange"](#) on page 1251.

Usage: Query only

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 546

[:SOURce<hw>]:LIST:DEXChange:EXECute

Executes the import or export of the selected list file, according to the previously set transfer direction with command [\[:SOURce<hw>\]:LIST:DEXChange:MODE](#)

Example: See [Example "List mode data exchange"](#) on page 1251.

Usage: Event

Manual operation: See ["Import / Export"](#) on page 546

[SOURce<hw>]:LIST:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII file for import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
 *RST: TXT

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See ["ASCII File Settings"](#) on page 545

[SOURce<hw>]:LIST:DEXChange:AFILe:SElect <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 546

[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
 *RST: COMMa

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See ["ASCII File Settings"](#) on page 545

[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
 *RST: DOT

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See ["ASCII File Settings"](#) on page 545

```
[ :SOURce<hw>]:LIST:DEXChange:MODE <Mode>
```

Determines the import or export of a list.

Specify the source or destination file with the command `[:SOURCE<hw>] :LIST:`
`DEXChange:SElect.`

Parameters:

```
<Mode>      IMPort | EXPort
              *RST:      IMPort
```

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See "Mode" on page 545

```
[ :SOURce<hw> ] :LIST:DEXChange:SElect <Filename>
```

Selects the ASCII file for import or export, containing a list.

Parameters:

<Filename>	string
	Filename or complete file path; file extension can be omitted.

Example: See [Example"List mode data exchange"](#) on page 1251.

Manual operation: See ["Select Source/Select ASCII Destination"](#) on page 546

14.19.13 SOURce:NOISe subsystem

The SOURCE:NOISE subsystem contains the commands for:

- Setting the noise modulation signal. The noise generator is optional.
 - Generating impulsive and phase noise.
- R&S SMW-K810

Example: Configuring the noise generator

SOURCE1:NOISE:DISTRIBUTION GAUSS
SOURCE1:NOISE:BANDWIDTH 10000000

SOURce1:LFOutput1:SOURce NOIS
SOURce1:LFOutput1:STATe 1

SOURCE1:NOISE:LEVEL1:RELATIVE?
SOURCE1:NOISE:LEVEL1:ABSOLUTE?

Example: Generating impulsive noise

```

SOURce1:NOISe:IMPulsive:CI 20
SOURce1:NOISe:IMPulsive:FRAMe 0.01
SOURce1:NOISe:IMPulsive:PULSe 5
SOURce1:NOISe:IMPulsive:MINSpace 0.00000025
SOURce1:NOISe:IMPulsive:MAXSpace 0.0000005
SOURce1:NOISe:IMPulsive:BURSt:DURation?
// 0.00000125
SOURce1:NOISe:IMPulsive:STATe 1

```

Example: Generating phase noise

```

SOURce1:NOISe:PHASnoise:FREQuency1 100
SOURce1:NOISe:PHASnoise:LEVel1 -40
SOURce1:NOISe:PHASnoise:FREQuency2 1000
SOURce1:NOISe:PHASnoise:LEVel2 -30
SOURce1:NOISe:PHASnoise:FREQuency3 10000
SOURce1:NOISe:PHASnoise:LEVel3 -60
SOURce1:NOISe:PHASnoise:FREQuency4 100000
SOURce1:NOISe:PHASnoise:LEVel4 -50
SOURce1:NOISe:PHASnoise:FREQuency5 1000000
SOURce1:NOISe:PHASnoise:LEVel5 -80
SOURce1:NOISe:PHASnoise:STATe 1

SOURce1:NOISe:PHASnoise:SHAPE:STORe "/var/user/phasenoise.fcf"
SOURce1:NOISe:PHASnoise:SHAPE:PREDefined:CATalog?
// ATSC_A74,crystal1,crystal2,crystal3,crystal4,crystal5,DVB-S2 A1,DVB-S2 A2,DVB-S2 D1,DVB-S2
// DVB-S2 P2,pll1,pll2
SOURce1:NOISe:PHASnoise:SHAPE:SElect "crystal1"

```

- [Noise generator](#).....1263
- [Impulsive noise commands](#).....1264
- [Phase noise commands](#).....1266

14.19.13.1 Noise generator

[:SOURce<hw>]:NOISe:BANDwidth BWiDth	1263
[:SOURce<hw>]:NOISe:DISTriBution	1264
[:SOURce<hw>]:NOISe:LEVel<ch>:RELative?	1264
[:SOURce<hw>]:NOISe:LEVel<ch>[:ABSolute]?	1264

[:SOURce<hw>]:NOISe:BANDwidth|BWiDth <BWidth>

Sets the noise level in the system bandwidth when bandwidth limitation is enabled.

Parameters:

<BWidth>	float
Range:	100E3 to 10E6
Increment:	100E3
*RST:	100E3

Example: See [Example"Configuring the noise generator"](#) on page 1262.

Manual operation: See ["Bandwidth"](#) on page 580

[[:SOURce<hw>]:NOISe:DISTRibution <Distribution>

Sets the distribution of the noise power density.

Parameters:

<Distribution> GAUSs | EQUal
*RST: GAUSs

Example: See [Example"Configuring the noise generator"](#) on page 1262.

Manual operation: See ["Distribution"](#) on page 580

[[:SOURce<hw>]:NOISe:LEVel<ch>:RELative?

Queries the level of the noise signal per Hz in the total bandwidth.

Return values:

<Relative> float
Range: -149.18 to -52.67
Increment: 0.1
*RST: -69.84

Example: See [Example"Configuring the noise generator"](#) on page 1262.

Usage: Query only

Manual operation: See ["Noise Density"](#) on page 582

[[:SOURce<hw>]:NOISe:LEVel<ch>[:ABSolute]?

Queries the level of the noise signal in the system bandwidth within the enabled bandwidth limitation.

Return values:

<Absolute> float
*RST: 3.84 MHz

Example: See [Example"Configuring the noise generator"](#) on page 1262.

Usage: Query only

Manual operation: See ["Noise Level"](#) on page 582

14.19.13.2 Impulsive noise commands

Option: R&S SMW-K810.

[\[:SOURce<hw>\]:NOISe:IMPulsive\[:STATe\]](#)..... 1265
[\[:SOURce<hw>\]:NOISe:IMPulsive:CI](#)..... 1265
[\[:SOURce<hw>\]:NOISe:IMPulsive:FRAME](#)..... 1265

[:SOURce<hw>]:NOISe:IMPulsive:PULSe.....	1265
[:SOURce<hw>]:NOISe:IMPulsive:MINSpace.....	1266
[:SOURce<hw>]:NOISe:IMPulsive:MAXSpace.....	1266
[:SOURce<hw>]:NOISe:IMPulsive[:BURSt]:DURation?.....	1266

`[:SOURce<hw>]:NOISe:IMPulsive[:STATe] <ImpulsiveState>`

Enables or disables the impulsive noise generator.

Parameters:

`<ImpulsiveState>` 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Generating impulsive noise"](#) on page 1263.

Manual operation: See ["State"](#) on page 456

`[:SOURce<hw>]:NOISe:IMPulsive:CI <IplsCI>`

Specifies the ratio of the wanted signal (C) to the impulsive noise signal (I).

Parameters:

`<IplsCI>` float
 Range: -35 to 60
 Increment: 0.01
 *RST: 20

Example: See [Example"Generating impulsive noise"](#) on page 1263.

Manual operation: See ["C/I"](#) on page 456

`[:SOURce<hw>]:NOISe:IMPulsive:FRAME <IplsFrameDur>`

Sets the time intervals at which the bursts occur.

Parameters:

`<IplsFrameDur>` float
 Range: 0.1E-3 to 1
 Increment: 0.1E-3
 *RST: 0.01

Example: See [Example"Generating impulsive noise"](#) on page 1263.

Manual operation: See ["Frame Duration"](#) on page 457

`[:SOURce<hw>]:NOISe:IMPulsive:PULSe <IplsPulse>`

Sets the number of noise pulses per burst.

Parameters:

`<IplsPulse>` integer
 Range: 1 to 65535
 *RST: 1

Example: See [Example "Generating impulsive noise"](#) on page 1263.

Manual operation: See ["Pulses per Burst"](#) on page 457

[SOURce<hw>]:NOISe:IMPulsive:MINSpace <IplsMinSpace>

[SOURce<hw>]:NOISe:IMPulsive:MAXSpace <IplsSpaceMax>

If more than 1 pulse per burst are enabled ([\[:SOURce<hw>\]:NOISe:IMPulsive:PULSe.g. 2](#)), sets the minimum/maximum spacing between 2 pulses within a burst.

Parameters:

<IplsSpaceMax> float
 Range: 0.25E-6 to 0.01
 Increment: 0.01E-6
 *RST: 0.25E-6

Example: See [Example "Generating impulsive noise"](#) on page 1263.

Manual operation: See ["Pulse Spacing Maximum"](#) on page 457

[SOURce<hw>]:NOISe:IMPulsive[:BURSt]:DURation?

Queries the time during which the noise generator is active in a frame.

Return values:

<IplsBurstDur> float
 Range: 0.01E-6 to 1
 Increment: 0.01E-6
 *RST: n.a. (no preset. default: 0.01)

Example: See [Example "Generating impulsive noise"](#) on page 1263.

Usage: Query only

Manual operation: See ["Eff. Burst Duration"](#) on page 457

14.19.13.3 Phase noise commands

Option: R&S SMW-K810.

[:SOURce<hw>]:NOISe:PHASenoiSe[:STATe]	1266
[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:PREDefined:CATalog?	1267
[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:SElect	1267
[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:STORe	1267
[:SOURce<hw>]:NOISe:PHASenoiSe:LEVel<ch>	1267
[:SOURce<hw>]:NOISe:PHASenoiSe:FREQuency<ch>	1268

[SOURce<hw>]:NOISe:PHASenoiSe[:STATe] <PhaseNoiseState>

Enables or disables the phase noise generator.

Parameters:

<PhaseNoiseState> 1 | ON | 0 | OFF
 *RST: 0

Example: See [Example"Generating phase noise"](#) on page 1263.

Manual operation: See ["State"](#) on page 459

[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:PREDeFined:CATalog?

Queries the files with predefined settings. Listed are files with the file extension *.fcf.

Example: See [Example"Generating phase noise"](#) on page 1263.

Usage: Query only

Manual operation: See ["Load Profile, Save Profile"](#) on page 459

[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:SElect <PhaseNoiseSel>

Loads the selected file from the default or the specified directory. Loaded are files with extension *.fcf.

Query the name of the predefined files with the command [\[:SOURce<hw>\]:NOISe:PHASenoiSe:SHAPE:PREDeFined:CATalog?](#) on page 1267.

Parameters:

<PhaseNoiseSel> "<filename>"
 Filename or complete file path; file extension can be omitted

Example: See [Example"Generating phase noise"](#) on page 1263.

Manual operation: See ["Load Profile, Save Profile"](#) on page 459

[:SOURce<hw>]:NOISe:PHASenoiSe:SHAPE:STORe <PhaseNoiseStore>

Saves the current SSB profile settings into the selected file; the file extension (*.fcf) is assigned automatically.

Parameters:

<PhaseNoiseStore> "<filename>"
 Filename or complete file path

Example: See [Example"Generating phase noise"](#) on page 1263.

Manual operation: See ["Load Profile, Save Profile"](#) on page 459

[:SOURce<hw>]:NOISe:PHASenoiSe:LEVel<ch> <PhaseNoiseLevel>

Sets the level value of the points, where the points are designated by the suffix <ch>.

Suffix:

<ch> 1 to 5
Defines the frequency/noise point number

Parameters:

<PhaseNoiseLevel> float
Range: -199.99 to 0
Increment: 0.01
*RST: 0

Example: See [Example "Generating phase noise"](#) on page 1263.

Manual operation: See ["Phase Noise Table"](#) on page 460

[[:SOURce<hw>]:NOISe:PHASenoise:FREQuency<ch> <PhaseNoiseFreq>

Sets the frequency value of the points, where the points are designated by the suffix <ch>.

Suffix:

<ch> 1 to 5
Defines the frequency/noise point number

Parameters:

<PhaseNoiseFreq> integer
Range: 10 to 10E6
*RST: 0

Example: See [Example "Generating phase noise"](#) on page 1263.

Manual operation: See ["Phase Noise Table"](#) on page 460

14.19.14 SOURce:OCCupy subsystem

The OCCupy subsystem contains the commands for selecting licenses and setting the occupation period.

Example: Occupying a license and extend the occupation period

```
// query options available on the connected license servers
[:SOURce]:OCCupy:OPTion:CATalog?

// query the number of occupied options and the time periods
[:SOURce]:OCCupy:OPTion:CATalog?
//Response:
"SMW-K55;LTE Release 8;6d, 3d
SMW-K62;Additive White Gaussian Noise;7d, 23h
SMW-K71;Dynamic Fading;4d
SMW-K72;Enhanced Fading Models"

// query the number of occupied licences for option K55
[:SOURce]:OCCupy:OPTion:CATalog? "SMW-K55"
// Response:
"SMW-K55;LTE Release 8;6d, 3d"

// occupy two licenses of option K55 for 3 days
[:SOURce]:OCCupy:OPTion "R&S SMW-K55",3,2

// extend the occupation period for the first license to 5 days
[:SOURce]:OCCupy:OPTion:RENew<1> "R&S SMW-K55",5
```

[:SOURce]:OCCupy:OPTion	1269
[:SOURce]:OCCupy:OPTion:CATalog?	1269
[:SOURce]:OCCupy:OPTion:RENew<ch>	1270

[\[:SOURce\]:OCCupy:OPTion](#)

Occupies the selected option.

You can determine the option string, the time period and the number of licenses for the occupancy.

Example: See [Example"Occupying a license and extend the occupation period"](#) on page 1269.

Usage: Event

Manual operation: See ["Occupy"](#) on page 782

[\[:SOURce\]:OCCupy:OPTion:CATalog?](#)

Queries the availability of borrowable licenses on all license servers accessible for the R&S SMW.

Return values:

<OccLicensesCat> string
Comma-separated list of strings for available options.

Example: See [Example"Occupying a license and extend the occupation period"](#) on page 1269.

Usage: Query only

Manual operation: See ["Occupy Licenses"](#) on page 781

[SOURce]:OCCupy:OPTion:RENew<ch>

Extends the occupation period of the selected license.

Example: See [Example"Occupying a license and extend the occupation period"](#) on page 1269.

Usage: Event

Manual operation: See ["Renew"](#) on page 782

14.19.15 SOURce:PGEN subsystem

The PGEN subsystem contains the commands for setting output of the pulse modulation signal.

Example: Using pulse generator as source for pulse modulation

```
// select pulse generator as source for pulse modulation
// enable pulse modulation
SOURce1:PULM:SOURce INT
SOURce1:PULM:STATe 1
// pulse generator and signal output are also activated
SOURce1:PGENerator:STATe?
// 1
SOURce1:PGENerator:OUTPut:STATe?
// 1
PGENerator:OUTPut:POLarity NORMal
// to disable pulse generator
SOURce1:PGENerator:STATe 0
// activate the pulse modulation of the RF carrier
SOURce1:PULM:STATe 1
```

[:SOURce<hw>]:PGENerator:OUTPut:POLarity	1270
[:SOURce<hw>]:PGENerator:OUTPut[:STATe]	1271
[:SOURce<hw>]:PGENerator:STATe	1271

[SOURce<hw>]:PGENerator:OUTPut:POLarity <Polarity>

Sets the polarity of the pulse output signal.

Parameters:

<Polarity> NORMal | INVerted

NORMal

Outputs the pulse signal during the pulse width, that means during the high state.

INVerted

Inverts the pulse output signal polarity. The pulse output signal is suppressed during the pulse width, but provided during the low state.

*RST: NORMal

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 1270.

Manual operation: See ["Pulse Output Polarity"](#) on page 574

[[:SOURce<hw>]:PGENerator:OUTPut[:STATe] <State>

Activates the output of the pulse modulation signal.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: 0

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 1270.

Manual operation: See ["Pulse Output State"](#) on page 574

[[:SOURce<hw>]:PGENerator:STATe <State>

Enables the output of the video/sync signal.

If the pulse generator is the current modulation source, activating the pulse modulation automatically activates the signal output and the pulse generator.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: 0

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 1270.

14.19.16 SOURce:PHASe subsystem

This subsystem contains the commands for adjusting the phase of the RF output signal relative to a reference signal of the same frequency.

Example: Programming Example

```
// change the phase relative to the current phase
SOURce1:PHASe 2 DEG
// adopt the setting as the current phase
SOURce1:PHASe:REFeRence
```

The following commands are available:

[:SOURce<hw>]:PHASe.....	1272
[:SOURce<hw>]:PHASe:REfERENCE.....	1272

[\[:SOURce<hw>\]:PHASe <Phase>](#)

Sets the phase variation relative to the current phase.

Parameters:

<Phase>	float
Range:	-720 to 720
Increment:	0.1
*RST:	0
Default unit:	DEG

Example: See [Example"Programming Example"](#) on page 1271.

Manual operation: See ["Delta Phase"](#) on page 495

[\[:SOURce<hw>\]:PHASe:REfERENCE](#)

Assigns the value set with command [\[:SOURce<hw>\]:PHASe](#) as the reference phase.

Example: See [Example"Programming Example"](#) on page 1271.

Usage: Event

Manual operation: See ["Reset Delta Phase Display"](#) on page 495

14.19.17 SOURce:POWer subsystem

The `SOURce:POWer` subsystem contains the commands for setting the output level, level control and level correction of the RF signal.

The default units are dBm. To change the units, perform one of the following:

- Enter the unit after the numerical value
Example: `:POW 0.5V`
- Set the unit with the command `:UNIT:POWer`.

Example: Configure the settings for NRP power control

The example shows a command sequence to configure the parameters for a closed loop power control setup. It is assumed that you have set up the measurement with the amplifier, external coupler, the power sensor and the R&S SMW as described in [Chapter 8.12.4.3, "NRP power control"](#), on page 610.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Select the sensor used for nrp power control
```

```
// that is e.g., connected to a second USB interface
```

```
SOURcel:POWer:SPC:SELEct SENS2
```

```
// Configure the nrp power control settings
// use the measured peak power for power control
// set the unit dBm for the target level value
// set the target level, e.g. - 10 dBmM
// use the measured target level as reference level
// select single measurement mode to acquire one level value
// set the capture range for the control loop, e.g. +/- 15 dB
// set a time delay between the sensor readings, e.g. 2 ms
```

```
SOURcel:POWer:SPC:PEAK ON
SENSE1:UNIT:POWer DMB
SOURcel:POWer:SPC:TARGet -10
SOURcel:POWer:SPC:MEASure
SOURcel:POWer:SPC:MODE SINGLE
SOURcel:POWer:SPC:CRANge 15
SOURcel:POWer:SPC:DELay 2 ms
```

```
// Enable NRP power control measurement
// switch on RF output
// start the single measurement manually
```

```
Output1:STATe 1
SOURcel:POWer:SPC:STATe ON
SOURcel:POWer:SPC:SINGLE
```

```
// Query if the power control works properly
:SOURcel:POWer:SPC:WARning?
// Response: 1 -> power control doew not work as expected
```

[SOURce<hw>]:POWer:ALC:MODE?	1274
[SOURce<hw>]:POWer:ALC[:STATe]	1274
[SOURce<hw>]:POWer:ALC:DAMPliFier	1275
[SOURce<hw>]:POWer:ALC:DSensitivity	1276
[SOURce<hw>]:POWer:ALC:SONCe	1276
[SOURce<hw>]:POWer:ALC:SLEVel	1276
[SOURce<hw>]:POWer:AATTenuation?	1276
[SOURce<hw>]:POWer:ATTenuation	1277
[SOURce<hw>]:POWer:ATTenuation:INActive:INDices	1277
[SOURce<hw>]:POWer:ATTenuation:DIGital	1277
[SOURce<hw>]:POWer:ATTenuation:RFOff:MODE	1278
[SOURce<hw>]:POWer:EMF:STATe	1278
[SOURce<hw>]:POWer:LBEHaviour	1278
[SOURce<hw>]:POWer:LIMit[:AMPLitude]	1279
[SOURce<hw>]:POWer:LMODE	1279
[SOURce<hw>]:POWer:MANual	1279
[SOURce<hw>]:POWer:MODE	1280

[:SOURce<hw>]:POWer:PEP?	1280
[:SOURce<hw>]:POWer:POWer	1281
[:SOURce<hw>]:POWer:STARt	1281
[:SOURce<hw>]:POWer:STOP	1281
[:SOURce<hw>]:POWer:SPC:CRANge	1282
[:SOURce<hw>]:POWer:SPC:DELAy	1282
[:SOURce<hw>]:POWer:SPC:MEASure	1282
[:SOURce<hw>]:POWer:SPC:MODE	1283
[:SOURce<hw>]:POWer:SPC:PEAK	1283
[:SOURce<hw>]:POWer:SPC:SELEct	1283
[:SOURce<hw>]:POWer:SPC:SINGLe	1283
[:SOURce<hw>]:POWer:SPC:STATe	1284
[:SOURce<hw>]:POWer:SPC:TARGeT	1284
[:SOURce<hw>]:POWer:SPC:WARNIing?	1284
[:SOURce<hw>]:POWer:STEP:MODE	1284
[:SOURce<hw>]:POWer:STEP[:INCRement]	1285
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet	1285
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL	1286
[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]	1286
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:REFLevel	1287
[:SOURce<hw>]:POWer:RANGE:LOWer?	1287
[:SOURce<hw>]:POWer:RANGE:UPPer?	1287

[\[:SOURce<hw>\]:POWer:ALC:MODE?](#)

Queries the currently set ALC mode.

See [\[:SOURce<hw>\]:POWer:ALC\[:STATe\]](#) on page 1274.

Return values:

<PowAlcMode> 0 | AUTO | 1 | PRESet | OFFTable | ON | OFF | ONSample | ONTable

Example:

POW:ALC:MODE?

Response: ONTable"Table and On" is set automatically.

Usage:

Query only

Manual operation: See ["Mode"](#) on page 592

[\[:SOURce<hw>\]:POWer:ALC\[:STATe\]](#) <State>

Activates automatic level control in the selected mode.

How to: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

Parameters:

<State> AUTO | OFFTable | ON | ONSample | ONTable | OFF

AUTO

Adjusts the output level to the operating conditions automatically.

OFFTable

Controls the level with the attenuation values of the internal ALC table.

ON

Activates internal level control permanently.

OFF

Deactivates internal level control, "Sample & Hold" mode is active.

ONSample

Starts the internal level control with the first change.

ONTable

Starts with the attenuation setting from the table and continues with automatic level control.

*RST: AUTO

For more details on the individual settings, an overview of the functionality and details on what is to be considered, see "[ALC states and their effects](#)" on page 589.

Example:

POW:ALC ON

Activates internal level control.

Manual operation: See "[State](#)" on page 591

[[:SOURce<hw>]:POWER:ALC:DAMP]lifier <Amplifier>

Selects the driver amplifier switching state.

Parameters:

<Amplifier>

OFF | ON | AUTO | FIX | ONMG

AUTO

Switches the attenuator automatically.

ON|OFF

Switches on or off the driver amplifier.

FIXed

Fixes the last setting.

ONMG

Supplies maximum level at the output.

*RST: AUTO

Example:

POW:ALC:DAMP AUTO

Provides automatic switching of the attenuator.

Manual operation: See "[Driver Amplifier](#)" on page 592

[[:SOURce<hw>]:POWER:ALC:DSENSitivity <Sensitivity>

Sets the sensitivity of the ALC detector.

Parameters:

<Sensitivity> AUTO | FIXed | LOW | MEDium | HIGH

AUTO
Selects the optimum sensitivity automatically.

LOW|MEDium|HIGH
Sets either low, medium or high sensitivity.

FIXed
Fixes the internal level detector.

*RST: AUTO

Example: POW:ALC:DSEN FIX

Manual operation: See "[Detector Sensitivity](#)" on page 592

[[:SOURce<hw>]:POWER:ALC:SONCe

Activates level control for correction purposes temporarily.

Example: POW:ALC OFF
Deactivates automatic level control at the RF output.

POW:ALC:SONC
Executes level control (once).

Usage: Event

Manual operation: See "[Readjust](#)" on page 493

[[:SOURce<hw>]:POWER:ALC:SLEVel <SampLevel>

Sets the sample level of automatic level control (ALC).

How To: See [Chapter 8.12.2.3, "How to enable the ALC"](#), on page 593.

Parameters:

<SampLevel> FULL | MINimum | ATTenuated

*RST: FULL

Example: POW:ALC:SLEV MIN
Sets the maximum attenuation.

Manual operation: See "[Sample Level](#)" on page 593

[[:SOURce<hw>]:POWER:AATTenuation?

Queries the currently active level attenuation.

Return values:

<ActiveAtt> float
 Range: 0 to 110
 Increment: 10
 *RST: 0

Example:

```
SOURce1:POWer:ATTenuation?  

// Response: 100
```

Usage:

Query only

Manual operation: See ["Attenuation Active"](#) on page 588

[[:SOURce<hw>]:POWer:ATTenuation <Attenuation>

Sets the attenuation value of the RF signal in manual mode, set with command :
[OUTPut<hw>:AMODE](#).

Parameters:

<Attenuation> integer
 Range: depends on the installed options
 Increment: 4|5|6
 *RST: 0

Example:

```
SOURce1:POWer:ATTenuation 20dB
```

Manual operation: See ["Attenuation"](#) on page 588

[[:SOURce<hw>]:POWer:ATTenuation:INActive:INDices <InactiveIndices>

Queries inactive attenuations.

Queries inactive attenuations. The response of the query returns the indices of the attenuations.

Parameters:

<InactiveIndices>

Example:

```
SOURce1:POWer:ATTenuation:INActive:INDices?
```

[[:SOURce<hw>]:POWer:ATTenuation:DIGital <AttDigital>

Sets a relative attenuation value for the baseband signal.

Parameters:

<AttDigital> float
 Range: -3.522 to 80
 Increment: 1E-3
 *RST: 0

Manual operation: See ["Digital Attenuation"](#) on page 491

[[:SOURce<hw>]:POWER:ATTenuation:RFOff:MODE <Mode>

Selects the state the attenuator is to assume if the RF signal is switched off.

Parameters:

<Mode>

UNCHanged | FATTenuation

FATTenuation

The step attenuator switches to maximum attenuation when RF is off.

Note: This setting overrides the RF level modes :

[OUTPut<hw>:AMODEFIXed](#) | [MANual](#).

UNCHanged

Freezes the current setting to keep the output impedance constant during RF off.

*RST: n.a. (preset & factory preset depends on option)
RFmax ≤ 12.75 GHz: FATTenuation,
RFmax > 12.75 GHz: UNCHanged

Example:

SOUR:POW:ATT:RFOF:MODE FATT

uses maximum attenuation when the RF output is turned off.

Manual operation: See ["RF OFF Mode"](#) on page 588

[[:SOURce<hw>]:POWER:EMF:STATE <State>

Displays the signal level as voltage of the EMF. The displayed value represents the voltage over a 50 Ohm load.

Parameters:

<State>

1 | ON | 0 | OFF

*RST: n.a. (factory preset: 0)

Example:

POW:EMF:STAT 1

Activates voltage level display.

Manual operation: See ["Display Level as Voltage of EMF"](#) on page 743

[[:SOURce<hw>]:POWER:LBEHaviour <Behaviour>

Selects the level behavior at the RF output over time.

Parameters:

<Behaviour>

AUTO | UNINterrupted | MONotone | CVSWr | CPHase

UNINterrupted|MONotone

Do not use the uninterrupted level settings and strictly monotone modes in combination with the high-quality optimization mode (see [\[:SOURce<hw>\]:BB:IMPairment:OPTimization:MODE](#) on page 1184)

CVSWr

Constant VSWR

CPHase

Continuous phase

CONStant

Constant phase

***RST:** AUTO**Example:** SOURce1:POWer:LBEHaviour AUTO**Manual operation:** See ["Setting Characteristics"](#) on page 492**[SOURce<hw>]:POWer:LIMit[:AMPLitude] <Amplitude>**

Limits the maximum RF output level in CW and sweep mode.

It does not influence the "Level" display or the response to the query `[: SOURce<hw>] : POWer [: LEVel] [: IMMEDIATE] [: AMPLitude]`.**Parameters:**

<Amplitude> float

Range: depends on the installed options

Increment: 0.01

***RST:** n.a. (factory preset: 30)

Example: SOURce1:POWer:LIMit:AMPLitude 10**Manual operation:** See ["Limit"](#) on page 493**[SOURce<hw>]:POWer:LMODe <LevMode>**

Sets the RF level mode.

Parameters:

<LevMode> NORMal | LOWNoise | LOWDistortion

NORMal
Supplies the RF signal with the standard power level of the instrument.

LOWNoise
Supplies a very low noise sinewave signal.

LOWDistortion
Supplies a very pure sinewave signal.

***RST:** NORMal

Example: SOURce1:POWer:LMODe LOWD
Sets low distortion mode. The instrument reduces distortions of the RF signal to a minimum.

Manual operation: See ["Mode"](#) on page 491**[SOURce<hw>]:POWer:MANual <Manual>**Sets the level for the subsequent sweep step if `SWE:POW:MODE MAN`.

Use a separate command for each sweep step.

Parameters:

<Manual> float

You can select any level within the setting range, where:

START is set with [:SOURce<hw>]:POWER:START

STOP is set with [:SOURce<hw>]:POWER:STOP

OFFSet is set with [:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSet

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01

Default unit: dBm

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Current Level"](#) on page 532

[:SOURce<hw>]:POWER:MODE <Mode>

Selects the operating mode of the instrument to set the output level.

Parameters:

<Mode> CW | FIXed | SWEep

CW|FIXed

Operates at a constant level.

CW and FIXed are synonyms.

To set the output level value, use the command [:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude].

SWEep

Sets sweep mode.

Set the range and current level with the commands:

[:SOURce<hw>]:POWER:START and [:SOURce<hw>]:POWER:STOP,
[:SOURce<hw>]:POWER:MANual.

*RST: CW

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["State \(RF level sweep\)"](#) on page 532
See ["State \(RF frequency / level sweep\)"](#) on page 532

[:SOURce<hw>]:POWER:PEP?

Queries the PEP "Peak Envelope Power) of digital modulation or digital standards at the RF output. This value corresponds to the level specification, displayed in the status bar (header).

Return values:

<Pep> float

Example:

POW:PEP?

Response: "4"

The PEP value of digital modulation is 4 dBm at the RF output.

Usage:

Query only

Manual operation: See ["PEP"](#) on page 483**[:SOURce<hw>]:POWER:POWER <Power>**Sets the level **at the RF output** connector.

This value does not consider a specified offset.

The command `[:SOURce<hw>]:POWER[:LEVEL][:IMMEDIATE][:AMPLITUDE]` sets the level of the "Level" display, that means the level containing offset.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Parameters:

<Power> float
 Level at the RF output, without level offset
 Range: See data sheet
 Increment: 0.01
 Default unit: dBm

Example:

SOURce1:POWER:POWER 15

Sets the level at RF output

Manual operation: See ["Amplitude"](#) on page 490
 See ["Generator Settings used for Measurement"](#) on page 603

[:SOURce<hw>]:POWER:START <Start>**[:SOURce<hw>]:POWER:STOP <Stop>**

Sets the RF start/stop level in sweep mode.

Parameters:

<Stop> float
 Sets the setting range calculated as follows:
 $(Level_min + OFFSET) \text{ to } (Level_max + OFFSET)$
 Where the values are set with the commands:
`[:SOURce<hw>]:POWER[:LEVEL][:IMMEDIATE]:OFFSET`
`[:SOURce<hw>]:POWER:START`
`[:SOURce<hw>]:POWER:STOP`
 Range: Minimum level to maximum level
 *RST: -30 (Start)/ -10 (Stop)
 Default unit: dBm

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296

Manual operation: See ["Start Level / Stop Level"](#) on page 538

[SOURce<hw>]:POWER:SPC:CRANge <PowCntrlCRange>

Defines the capture range of the power control system.

Within the range:

Target Level +/- Catch Range

the power control locks and tries to achieve the target level. Readings outside the range are not considered.

Parameters:

<PowCntrlCRange> float
 Range: 0 to 50
 Increment: 0.01
 *RST: 30

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["Catch Range +/-"](#) on page 613

[SOURce<hw>]:POWER:SPC:DELay <PowCntrlDelay>

Sets a waiting time for the generator to adjust the output level. After the delay time has elapsed, the power sensor measures the next value.

Parameters:

<PowCntrlDelay> integer
 Range: 0 to 1000
 *RST: 0

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["Delay Time"](#) on page 614

[SOURce<hw>]:POWER:SPC:MEASure

Sets the measured power value as reference level.

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Usage: Event

Manual operation: See ["Take Measurement as Target Level"](#) on page 613

[:SOURce<hw>]:POWER:SPC:MODE <ControlMode>

Selects the measurement mode for the power sensor.

Parameters:

<ControlMode> AUTO | SINGLE

AUTO

Measures the level values continuously.

SINGLE

Executes one measurement, triggered by the command [:SOURce<hw>]:POWER:SPC:SINGLE on page 1283.

*RST: AUTO

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["Mode"](#) on page 613

[:SOURce<hw>]:POWER:SPC:PEAK <PowCntrlPeak>

Activates power control by means of the peak power values, provided the power sensor supports this function.

Parameters:

<PowCntrlPeak> 1 | ON | 0 | OFF

*RST: 0

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

[:SOURce<hw>]:POWER:SPC:SElect <PowCntrlSelect>

Selects the power sensor used for power control.

Parameters:

<PowCntrlSelect> SENS1 | SENS2 | SENS3 | SENS4 | SENSor1 | SENSor2 | SENSor3 | SENSor4

*RST: SENS1

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["Sensor"](#) on page 612

[:SOURce<hw>]:POWER:SPC:SINGLE

Triggers the power sensor to measure the power value once.

Usage: Event

Manual operation: See ["Execute Single"](#) on page 613

[[:SOURce<hw>]:POWER:SPC:STATe <PowCntrlState>

Starts power control using the selected sensor. The control loop periodically adjusts the output level of the signal generator. After switching off, the running loop is completed.

Parameters:

<PowCntrlState> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["State"](#) on page 612

[[:SOURce<hw>]:POWER:SPC:TARGET <PowCntrlTarget>

Sets the target level required at the DUT. To define the unit of the power value, use command [:UNIT:POWer](#) on page 1352.

Parameters:

<PowCntrlTarget> float
Range: -50 to 30
Increment: 0.01
*RST: -10

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272

Manual operation: See ["Target Level"](#) on page 613

[[:SOURce<hw>]:POWER:SPC:WARNing?

Queries if the activated power control works properly.

If the power control does not work, the query returns warning state 1. On the screen, the R&S SMW indicates a warning icon.

Return values:

<WarningState> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Configure the settings for NRP power control"](#) on page 1272.

Usage: Query only

[[:SOURce<hw>]:POWER:STEP:MODE <Mode>

Defines the type of step width to vary the RF output power step-by-step with the commands [POW UP](#) or [POW DOWN](#).

You can define the step mode for each path separately.

Parameters:

<Mode> DECimal | USER

DECimal
Increases or decreases the level in steps of ten.

USER
Increases or decreases the level in increments, determined with the command `[:SOURce<hw>] :POWer:STEP [:INCRe ment]`.

*RST: DECimal

Example:

```
SOURce1:POWer:STEP:INCRe ment 2
SOURce1:POWer:STEP:MODE USER
SOURce1:POWer:LEVel:IMMediate:AMPLitude UP
Increasing the RF level with a step size of 2 dB
```

Manual operation: See "[Variation Active](#)" on page 489

[:SOURce<hw>] :POWer:STEP [:INCRe ment] <Increment>

Specifies the step width in the appropriate path for `POW:STEP:MODE USER`.

To adjust the level step-by-step with this increment value, use the command `POW UP`, or `POW DOWN`.

Note: The command also sets "Variation Step" in the manual control, that means the user-defined step width for setting the level with the rotary knob or the [Up/Down] arrow keys.

Parameters:

<Increment> float

Range: 0 to 200

Increment: 0.01

*RST: 1

Default unit: dB

Example: See `[:SOURce<hw>] :POWer:STEP:MODE` on page 1284.

Manual operation: See "[Variation Step](#)" on page 489

[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet <Offset>

Sets the level offset of a downstream instrument.

The level at the RF output is not changed.

To query the resulting level, as it is at the output of the downstream instrument, use the command `[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] [:AMPLitude]`.

See [Chapter 8.4.1.1, "Displayed RF frequency and level values with downstream instruments"](#), on page 484.

Note: The level offset also affects the RF level sweep.

Parameters:

<Offset> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0
 Default unit: dB
 Level offset is always expreced in dB; linear units (V, W, etc.) are not supported

Example:

POWer:OFFSet 10
 Sets the RF level offset to 10 dB

Manual operation:

See "Offset" on page 493
 See "Generator Settings used for Measurement" on page 603

[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL <Rcl>

Determines whether the current level is retained or if the stored level setting is adopted when an instrument configuration is loaded.

The setting is valid for both paths. If a suffix is specified, it is ignored.

Parameters:

<Rcl> INCLude | EXCLude
INCLude
 Takes the current level when an instrument configuration is loaded.
EXCLude
 Retains the current level when an instrument configuration is loaded.
 *RST: INCLude

Example:

POW:RCL INCL
 Takes the level value from an instrument configuration loaded with command *RCL.

Manual operation:

See "Exclude Level" on page 712

[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:AMPLitude] <Amplitude>

Sets the RF level applied to the DUT.

To activate the RF output use command :OUTPut<hw>[:STATe] ("RF On"/"RF Off").

The following applies $POWER = RF\ output\ level + OFFSET$, where:

- POWER is the values set with [:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]
- RF output level is set with [:SOURce<hw>]:POWer:POWer

- OFFSet is set with `[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet`

Parameters:

<Amplitude>

float

The following settings influence the value range:

OFFSet set with the command `[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet`**Numerical value**

Sets the level

UP|DOWN

Varies the level step by step.

The level is increased or decreased by the value set with the command `[:SOURce<hw>] :POWer :STEP [:INCRement]`.

Range: (Level_min + OFFSet) to (Level_max + OFFSet)

*RST: -30

Default unit: dBm

Example:`POWer -30`

Sets the RF level

Example:See also `[:SOURce<hw>] :POWer :STEP :MODE` on page 1284.**Manual operation:** See "Amplitude" on page 490**`[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :REFLevel` <ReferenceLevel>**

Queries the reference level of the user correction.

The reference level is the sum of the amplitude and the level offset, set with the commands `[:SOURce<hw>] :POWer :POWer [:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet`.**Parameters:**

<ReferenceLevel>

float

Range: -245 to 120

Increment: 0.01

*RST: -30

Manual operation: See "Generator Settings used for Measurement" on page 603**`[:SOURce<hw>] :POWer :RANGe :LOWer?`****`[:SOURce<hw>] :POWer :RANGe :UPPer?`**

Queries the current interruption-free range of the level.

Return values:

<Upper>

float

Increment: 0.01

Default unit: dBm

Example:

```
SOURce1:POWer:RANGe:UPPer?  
// -15  
SOURce1:POWer:RANGe:LOW?  
// -50
```

Usage: Query only

Manual operation: See "[Level Range](#)" on page 540

14.19.18 SOURce:ROSCillator subsystem

The SOURce:ROSCillator subsystem contains the commands for setting the external and internal reference frequency.



The commands of this subsystem are not affected by an instrument reset ([*RST](#) on page 915).

Example: Configuring the reference oscillator

```
// Using 100 MHz external reference source
SOURce:ROSCillator:PRESet
SOURce:ROSCillator:SOURce EXT
SOURce:ROSCillator:EXTErnal:RFOff:STATe 1
SOURce:ROSCillator:EXTErnal:FREQuency 100MHZ
SOURce:ROSCillator:EXTErnal:SBANDwidth WIDE
// 100 MHz (loop through) and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE LOOP
SOURce:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE DER1G
SOURce:ROSCillator:INTErnal:ADJust:STATe 0

// Variable external reference frequency
// SOURce:ROSCillator:EXTErnal:FREQuency VAR
// SOURce:ROSCillator:EXTErnal:FREQuency:VARIABLE 100000000

// Using the internal reference frequency
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTErnal:TUNing:STATe 1
SOURce:ROSCillator:INTErnal:TUNing:SLOPe LOW
// 10 MHz and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE DER10M
SOURce:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE DER1G

// Using 10 MHz external reference source
SOURce:ROSCillator:SOURce EXT
SOURce:ROSCillator:EXTErnal:RFOff:STATe 1
SOURce:ROSCillator:EXTErnal:FREQuency?
// Response: 10MHZ
SOURce:ROSCillator:EXTErnal:SBANDwidth WIDE
SOURce:ROSCillator:INTErnal:ADJust:STATe 0

// Query calibration value
CALibration:ROSCillator?
// 32767
// Set an internal source
// Activate user-defined adjustment value of 1000
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTErnal:ADJust:STATe 1
SOURce:ROSCillator:INTErnal:ADJust:VALue 1000

// to resume calibrated state
SOURce:ROSCillator:INTErnal:ADJust:VALue 0
SOURce:ROSCillator:INTErnal:ADJust:STATe 0
// or
// SYSTem:FPReSt
```

[SOURce]:ROSCillator:SOURce.....	1290
[SOURce]:ROSCillator:EXTErnal:RFOff[:STATe].....	1290
[SOURce]:ROSCillator:EXTErnal:FREQuency.....	1290
[SOURce]:ROSCillator:EXTErnal:FREQuency:VARIABLE.....	1290

[:SOURce]:ROSCillator:EXTeRnal:SBANdwidth.....	1291
[:SOURce]:ROSCillator:EXTeRnal:MLRange?.....	1291
[:SOURce]:ROSCillator:EXTeRnal:NSBAndwidth?.....	1292
[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	1292
[:SOURce]:ROSCillator[:INTeRnal]:ADJust:VALue.....	1292
[:SOURce]:ROSCillator[:INTeRnal]:ADJust[:STATe].....	1292

`[:SOURce]:ROSCillator:SOURce <Source>`

Selects between internal or external reference frequency.

Parameters:

<Source> INTeRnal | EXTeRnal
 *RST: n.a. (factory preset: INTeRnal)

Example: See [Example"Configuring the reference oscillator"](#)
 on page 1289.

Manual operation: See ["Source"](#) on page 497

`[:SOURce]:ROSCillator:EXTeRnal:RFOFF[:STATe] <State>`

Determines that the RF output is turned off when the external reference signal is selected, but missing.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 0)

Example: See [Example"Configuring the reference oscillator"](#)
 on page 1289.

Manual operation: See ["Deactivate RF Output \(if external reference is missing\)"](#)
 on page 497

`[:SOURce]:ROSCillator:EXTeRnal:FREQuency <Frequency>`

Sets the frequency of the external reference.

Parameters:

<Frequency> 10MHZ | VARiable | 5MHZ | 13MHZ
 *RST: n.a. (factory preset: 10MHZ)

Example: See [Example"Configuring the reference oscillator"](#)
 on page 1289.

Manual operation: See ["External Reference Frequency"](#) on page 497

`[:SOURce]:ROSCillator:EXTeRnal:FREQuency:VARiable <Frequency>`

Specifies the user-defined external reference frequency.

Parameters:

<Frequency> float
 Range: 1E6 to 100E6
 Increment: 0.1
 *RST: n.a. (factory preset: 1E7)
 Default unit: Hz

Example: See [Example "Configuring the reference oscillator"](#) on page 1289.

Options: R&S SMW-K704

Manual operation: See ["Variable Reference Frequency"](#) on page 498

[[:SOURce]:ROSCillator:EXTernal:SBANDwidth <SBandwidth>

Selects the synchronization bandwidth for the external reference signal.

See [\[:SOURce\]:ROSCillator:SOURce > External](#).

Depending on the RF hardware version, and the installed options, the synchronization bandwidth varies.

For more information, see data sheet.

Parameters:

<SBandwidth> WIDE | NARRow
NARRow
 The synchronization bandwidth is smaller than 1 Hz.
WIDE
 Uses the widest possible synchronization bandwidth.
 *RST: n.a. (factory preset: WIDE)

Example: See [Example "Configuring the reference oscillator"](#) on page 1289.

Manual operation: See ["Synchronization Bandwidth"](#) on page 498

[[:SOURce]:ROSCillator:EXTernal:MLRange?

Queries the minimum locking range for the selected external reference frequency.

Depending on the RF hardware version, and the installed options, the minimum locking range varies.

For more information, see data sheet.

Return values:

<MinLockRange> string

Example: SOUR:ROSC:EXT:MLR?

Usage: Query only

Manual operation: See ["Minimum Locking Range"](#) on page 499

[[:SOURce]:ROSCillator:EXTernal:NSBandwidth?

Queries the nominal synchronization bandwidth for the selected external reference frequency and synchronization bandwidth.

Return values:

<NomBandwidth> string

Example: SOUR:ROSC:EXT:NSB?

Usage: Query only

Manual operation: See ["Nominal Synchronization Bandwidth"](#) on page 498

[[:SOURce]:ROSCillator:OUTPut:FREquency:MODE <OutpFreqMode>

Selects the mode for the determination and output of the reference frequency.

Parameters:

<OutpFreqMode> DER10M | SAME

*RST: n.a. (factory preset: DER10M)

Example: See [Example "Configuring the reference oscillator"](#) on page 1289.

Manual operation: See ["Reference Output/1 GHz Reference Output"](#) on page 499

[[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue <Value>

Specifies the frequency correction value (adjustment value).

Parameters:

<Value> integer

*RST: 0

Example: See [\[:SOURce\]:ROSCillator\[:INTernal\]:ADJust\[:STATe\]](#) on page 1292

Manual operation: See ["Adjustment Value"](#) on page 501

[[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe] <State>

Determines whether the calibrated (off) or a user-defined (on) **adjustment value** is used for fine adjustment of the frequency.

Parameters:

<State> 1 | ON | 0 | OFF

0

Fine adjustment with the calibrated frequency value

1

User-defined adjustment value.

The instrument is no longer in the calibrated state.

The calibration value is, however, not changed. The instrument resumes the calibrated state if you send

`SOURce:ROSCillator:INTernal:ADJust:STATe 0.`

*RST: n.a. (factory preset: 0)

Example: See [Example"Configuring the reference oscillator"](#) on page 1289.

Manual operation: See ["Adjustment Active"](#) on page 500

14.19.19 RF ports alignment

Option: R&S SMW-B9 and R&S SMW-K545

See also [Chapter 14.18.5, "RF ports alignment commands"](#), on page 1009.

:SOURce<hw>:RFALignment:CALibrated:FREQuency?	1293
:SOURce<hw>:RFALignment:CALibrated:POWer:PEP?	1293
:SOURce<hw>:RFALignment:FOFFset?	1294
:SOURce<hw>:RFALignment:DATTenuation?	1294
:SOURce<hw>:RFALignment:CORRection:PHASe?	1294
:SOURce<hw>:RFALignment:CORRection:LEVel?	1294
:SOURce<hw>:RFALignment:CORRection:IQDelay?	1295

:SOURce<hw>:RFALignment:CALibrated:FREQuency?

Queries the frequency for that the calibration data is valid.

Return values:

<CalibratedFreq> float
Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Calibrated Frequency"](#) on page 688

:SOURce<hw>:RFALignment:CALibrated:POWer:PEP?

Queries the PEP for that the calibration data is valid.

Return values:

<PEP> float
Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only
Manual operation: See ["Calibrated Level \(PEP\)"](#) on page 688

:SOURce<hw>:RFALignment:FOFFset?

Queries the applied baseband frequency offset.

Return values:

<BbFreqOffset> float
 Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only
Manual operation: See ["Baseband Frequency Offset"](#) on page 689

:SOURce<hw>:RFALignment:DATTenuation?

Queries the applied digital attenuation.

Return values:

<Attenuation> float
 Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only
Manual operation: See ["Digital Attenuation"](#) on page 689

:SOURce<hw>:RFALignment:CORRection:PHASe?

queries the delta phase applied for compensation of the frequency response of the signal.

Return values:

<Phase> float
 Increment: 0.01

Example: See [Example"Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only
Manual operation: See ["Phase"](#) on page 689

:SOURce<hw>:RFALignment:CORRection:LEVel?

Queries the level correction applied to the signal of the selected path.

Return values:

<Level> float
Increment: 0.01

Example: See [Example "Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["Level"](#) on page 689

:SOURce<hw>:RFAlignment:CORRection:IQDelay?

Queries the I/Q delay applied for compensation of the frequency response of the signal.

Return values:

<IQdelay> float
Increment: 1E-12

Example: See [Example "Retrieving details on the calibrated values"](#) on page 1010.

Usage: Query only

Manual operation: See ["I/Q Delay"](#) on page 689

14.19.20 SOURce:SWEep subsystem

The SOURce:SWEep subsystem contains the commands for configuring RF sweep signals.



- The keyword [:FREQuency] can be omitted, then the commands are SCPI-compliant.
- To activate an RF sweep mode, use the following commands:
 - RF frequency sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
 - RF level sweep: SOURce:POWEr:MODE SWEep (SOURce:POWEr:MODE CW (off))
 - RF combined sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
- All sweeps, including the LF sweep, can be set independently of each other.
- All sweeps can be set independently of each other.

See [Chapter 8.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 515.

Example: Setup an RF frequency or power sweep

The following example shows a command sequence to set up an RF frequency sweep, triggered by the execute command. For an RF power sweep, replace `FREQuency` in the `SWEep` commands with `POWEr`.

Exceptions are the power spacing (defined with `LINEar` only) and the power step width (defined with `LOGarithmic` only).

```
// Reset the instrument to start from an initial state
// Switch off display update to improve performance
// (especially with short dwell times)
// Set the sweep mode (first two commands) and the sweep range
// Select linear spacing
// Select the waveform shape for the frequency sweep
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURce1:SWEep:FREQuency:MODE AUTO
SOURce1:FREQuency:SPAN 300 MHz
SOURce1:FREQuency:CENTer 200 MHz
// Alternatively use
// SOURce1:FREQuency:STARt 50 MHz
// SOURce1:FREQuency:STOP 350 MHz
SOURce1:SWEep:FREQuency:SPACing LINEar
SOURce1:SWEep:FREQuency:SHAPE SAWTooth

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
SOURce1:SWEep:FREQuency:RETRace 1
// Alternatively reset all sweeps to their initial value
SOURce1:SWEep:RESet:ALL

// Set the step width and dwell time
SOURce1:SWEep:FREQuency:STEP:LINEar 1 MHz
// Alternatively set the number of steps, then the sweep step width is
// set automatically
SOURce1:SWEep:FREQuency:POINts 301
SOURce1:SWEep:FREQuency:DWEll 500 ms
// With logarithmic spacing select the step width as follows
// (steps of 10 percent of the previous frequency in each instance)
SOURce1:SWEep:FREQuency:SPACing LOG
SOURce1:SWEep:FREQuency:STEP:LOGarithmic 10PCT

// Activate the sweep
// Trigger the sweep (depending on the set mode) and query the status
SOURce1:FREQuency:MODE SWEep
// Perform a one-off RF frequency sweep
SOURce1:SWEep:FREQuency:EXECute
SOURce1:SWEep:FREQuency:RUNning?
// 1
```

```

// the frequency sweep is running

// For manual step RF sweep use the following commands
*RST; *CLS
// Activate manual step RF sweep
SOURcel:SWEep:FREQuency:MODE MANual
// Activate the RF frequency sweep.
SOURcel:FREQuency:MODE SWEep
// Activate RF Output1.
Output1:STATe 1
// Input the frequency manually for each step
SOURcel:FREQuency:MANual 200 MHz
SOURcel:FREQuency:MANual 201 MHz
// Alternatively use the UP or DOWN commands with the set step width.
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
SOURcel:FREQuency:MANual UP

// Activate a combined RF frequency / level sweep
*RST; *CLS
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURcel:SWEep:COMBined:MODE AUTO
SOURcel:SWEep:COMBined:COUNT 200
SOURcel:FREQuency:START 1000000000 Hz
SOURcel:FREQuency:STOP 5000000000 Hz
SOURcel:POWer:START -30 dBm
SOURcel:POWer:STOP -10 dBm
SOURcel:SWEep:COMBined:RETRace 1
SOURcel:SWEep:COMBined:SHAPE SAWT
SOURcel:SWEep:COMBined:DWELL 0.01
// Activate combined RF frequency/level sweep
SOURcel:FREQuency:MODE COMB
// Activate RF Output1.
Output1:STATe 1
// Execute combined frequency / level sweep
SOURcel:SWEep:COMBined:EXECute

```

[SOURce<hw>]:SWEep:POWer:AMODE.....	1298
[SOURce<hw>]:SWEep:POWer:DWELL.....	1298
[SOURce<hw>]:SWEep:POWer:MODE.....	1299
[SOURce<hw>]:SWEep:POWer:POINTS.....	1299
[SOURce<hw>]:SWEep:POWer:SPACing:MODE?.....	1299
[SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic].....	1300
[SOURce<hw>]:SWEep[:FREQuency]:DWELL.....	1300
[SOURce<hw>]:SWEep[:FREQuency]:MODE.....	1300
[SOURce<hw>]:SWEep[:FREQuency]:POINTS.....	1301
[SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	1301
[SOURce<hw>]:SWEep:POWer:SHAPE.....	1302
[SOURce<hw>]:SWEep[:FREQuency]:SHAPE.....	1302
[SOURce<hw>]:SWEep:POWer:EXECute.....	1302

[SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	1302
[SOURce<hw>]:SWEep:POWer:RETRace.....	1302
[SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	1302
[SOURce<hw>]:SWEep:POWer:RUNNing?.....	1303
[SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	1303
[SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	1303
[SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	1303
[SOURce<hw>]:COMBined:FREQuency:START.....	1303
[SOURce<hw>]:COMBined:FREQuency:STOP.....	1304
[SOURce<hw>]:COMBined:POWer:START.....	1304
[SOURce<hw>]:COMBined:POWer:STOP.....	1304
[SOURce<hw>]:SWEep:COMBined:COUNt.....	1305
[SOURce<hw>]:SWEep:COMBined:DWELI.....	1305
[SOURce<hw>]:SWEep:COMBined:EXECute.....	1305
[SOURce<hw>]:SWEep:COMBined:MODE.....	1306
[SOURce<hw>]:SWEep:COMBined:RETRace.....	1306
[SOURce<hw>]:SWEep:COMBined:SHApe.....	1306
[SOURce<hw>]:SWEep:RESet[:ALL].....	1307

[SOURce<hw>]:SWEep:POWer:AMODE <AMode>

Selects the power attenuator mode for the level sweep.

Parameters:

<AMode> NORMal | HPOWer

NORMal

Performs the level settings in the range of the built-in attenuator.

HPOWer

Performs the level settings in the high level range.

*RST: NORMal(HighPower)|AUTO

Example:

SWE:POW:AMOD HPOW

Selects the high level ranges for level sweep.

[SOURce<hw>]:SWEep:POWer:DWELI <Dwell>

Sets the dwell time for a level sweep step.

Parameters:

<Dwell> float

Range: 0.001 to 100

Increment: 100E-6

*RST: 0.01

Example:

See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Dwell Time"](#) on page 534

[:SOURce<hw>]:SWEep:POWer:MODE <Mode>

Sets the cycle mode for the level sweep.

Parameters:

<Mode> AUTO | MANual | STEP

AUTO

Each trigger triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually with the command `[:SOURce<hw>]:POWer:MANual`.

The level value increases at each step by the value that you define with `[:SOURce<hw>]:POWer:STEP[:INCRement]`.

Values directly entered with the command `[:SOURce<hw>]:POWer:MANual` are not taken into account.

STEP

Each trigger triggers one sweep step only. The level increases by the value entered with `[:SOURce<hw>]:POWer:STEP[:INCRement]`.

*RST: AUTO

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Mode"](#) on page 533

[:SOURce<hw>]:SWEep:POWer:POINts <Points>

Sets the number of steps within the RF level sweep range.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Points> integer
Range: 2 to Max

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

[:SOURce<hw>]:SWEep:POWer:SPACing:MODE?

Queries the level sweep spacing. The sweep spacing for level sweeps is always linear.

Return values:

<Mode> LINear
*RST: LINear

Example: `SWE:POW:SPAC:MODE?`
queries the sweep spacing for a level sweep at RF output.
Result: "LIN"
linear spacing

Usage: Query only

[[:SOURce<hw>]:SWEep:POWER:STEP[:LOGarithmic] <Logarithmic>

Sets a logarithmically determined step size for the RF level sweep. The level is increased by a logarithmically calculated fraction of the current level.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Logarithmic> float
 The unit dB is mandatory.
 Range: 0.01 to 139 dB
 Increment: 0.01
 *RST: 1
 Default unit: dB

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Step"](#) on page 539

[[:SOURce<hw>]:SWEep[:FREQuency]:DWEll <Dwell>

Sets the dwell time for a frequency sweep step.

Parameters:

<Dwell> float
 Range: 0.001 to 100
 Increment: 100E-6
 *RST: 0.01

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Dwell Time"](#) on page 534

[[:SOURce<hw>]:SWEep[:FREQuency]:MODE <Mode>

Sets the cycle mode for the frequency sweep.

Parameters:

<Mode> AUTO | MANual | STEP

AUTO

Each trigger event triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually by input of the frequencies with the command [:

[SOURce<hw>\]:FREQuency:MANual.](#)

STEP

Each trigger event triggers one sweep step. The frequency increases by the value entered with `[:SOURce<hw>] :SWEep[:FREQuency] :STEP[:LINear]` (linear spacing) or `[:SOURce<hw>] :SWEep[:FREQuency] :STEP:LOGarithmic` (logarithmic spacing).

*RST: AUTO

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Mode"](#) on page 533

[:SOURce<hw>] :SWEep[:FREQuency] :POINTs <Points>

Sets the number of steps within the RF frequency sweep range.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Two separate POINTs values are used for linear or logarithmic sweep spacing (`[:SOURce<hw>] :SWEep[:FREQuency] :SPACing LIN | LOG`). The command always affects the currently set sweep spacing.

Parameters:

<Points> integer
Range: 2 to Max

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

[:SOURce<hw>] :SWEep[:FREQuency] :SPACing <Spacing>

Selects the mode for the calculation of the frequency intervals, with which the current frequency at each step is increased or decreased.

The keyword `[:FREQuency]` can be omitted; then the command is SCPI-compliant.

Parameters:

<Spacing> LINear | LOGarithmic

LINear

Sets a fixed frequency value as step width and adds it to the current frequency.

The linear step width is entered in Hz, see `[:SOURce<hw>] :SWEep[:FREQuency] :STEP[:LINear]`.

LOGarithmic

Sets a constant fraction of the current frequency as step width and adds it to the current frequency.

The logarithmic step width is entered in %, see `[:SOURce<hw>] :SWEep[:FREQuency] :STEP:LOGarithmic`.

*RST: LINear

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Spacing"](#) on page 534

```
[ :SOURce<hw>]:SWEep:POWer:SHAPE <Shape>
[ :SOURce<hw>]:SWEep[:FREQuency]:SHAPE <Shape>
```

Determines the waveform shape for a frequency sweep sequence.

Parameters:

<Shape> SAWTooth | TRlangle
*RST: SAWTooth

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Shape"](#) on page 534

```
[ :SOURce<hw>]:SWEep:POWer:EXECute
[ :SOURce<hw>]:SWEep[:FREQuency]:EXECute
```

Executes an RF frequency sweep.

The command performs a single sweep and is therefore only effective in manual sweep mode.

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 535

```
[ :SOURce<hw>]:SWEep:POWer:RETRace <State>
[ :SOURce<hw>]:SWEep[:FREQuency]:RETRace <State>
```

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Retrace"](#) on page 533

**[[:SOURce<hw>]:SWEep:POWer:RUNNing?
[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?**

Queries the current sweep state.

Return values:

<State> 1 | ON | 0 | OFF

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Usage: Query only

[[:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic <Logarithmic>

Sets a logarithmically determined step width for the RF frequency sweep. The value is added at each sweep step to the current frequency.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<Logarithmic> float
The unit is mandatory.
Range: 0.01 to 100
Increment: 1E-3
*RST: 1
Default unit: PCT

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 537

[[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear] <Linear>

Sets the step width for linear sweeps.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Omit the optional keywords so that the command is SCPI-compliant.

Parameters:

<Linear> float
Range: 0.001 Hz to (STOP - START)
Increment: 0.01

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 537

[[:SOURce<hw>]:COMBined:FREQuency:START <CombFreqStart>

Sets the start frequency of the combined RF frequency / level sweep.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<CombFreqStart> float
 Range: -59999E5 to 12E9
 Increment: 0.01
 *RST: 100E6

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 536

[[:SOURce<hw>]:COMBined:FREQuency:STOP <CombFreqStop>

Sets the end frequency of the combined RF frequency / level sweep.

Parameters:

<CombFreqStop> float
 Range: -59999E5 to 12E9
 Increment: 0.01
 *RST: 500E6

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 536

[[:SOURce<hw>]:COMBined:POWer:STARt <CombPowStart>

Sets the start level value of the combined RF frequency / level sweep.

See [Chapter 8.10.2.1, "Correlating parameters in sweep mode"](#), on page 523.

Parameters:

<CombPowStart> float
 Range: -245 to 120
 Increment: 0.01
 *RST: -30

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Start Level / Stop Level"](#) on page 538

[[:SOURce<hw>]:COMBined:POWer:STOP <CombPowStop>

Sets the stop level value of the combined RF frequency / level sweep.

Parameters:

<CombPowStop> float
 Range: -245 to 120
 Increment: 0.01
 *RST: -10

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Start Level / Stop Level"](#) on page 538

[:SOURce<hw>] :SWEep:COMBined:COUNT <StepCount>

Defines the number of sweeps you want to execute.

This parameter applies to `[:SOURce<hw>] :SWEep:COMBined:MODE > SINGLE`. To start the sweep signal generation, use the command `[:SOURce<hw>] :SWEep:COMBined:EXECute` on page 1305.

Parameters:

<StepCount> integer
 Range: 1 to SeMAX_INT_STEP-1
 *RST: 501

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Step Count"](#) on page 538

[:SOURce<hw>] :SWEep:COMBined:DWELL <Dwell>

Sets the dwell time for the combined frequency / level sweep.

Parameters:

<Dwell> float
 Range: 0.01 to 100
 Increment: 100E-6
 *RST: 0.01

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Dwell Time"](#) on page 534

[:SOURce<hw>] :SWEep:COMBined:EXECute

Executes an RF frequency / level sweep cycle.

The command triggers one single sweep manually. Therefore, you can use it in manual sweep mode, selected with the command `[:SOURce<hw>] :SWEep:COMBined:MODE > MANual`.

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 535

[:SOURce<hw>]:SWEep:COMBined:MODE <SweepCombMode>

Sets the cycle mode for the combined frequency / level sweep.

Parameters:

<SweepCombMode> AUTO | MANual | STEP

AUTO

Each trigger event triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually by input of the frequencies with the commands [:SOURce<hw>]:FREQuency:MANual and [:SOURce<hw>]:POWer:MANual.

STEP

Each trigger event triggers one sweep step.

*RST: AUTO

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Mode"](#) on page 533

[:SOURce<hw>]:SWEep:COMBined:RETRace <RetraceState>

Activates that the signal changes to the start level value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<RetraceState> 1 | ON | 0 | OFF

*RST: 0

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Retrace"](#) on page 533

[:SOURce<hw>]:SWEep:COMBined:SHAPE <Shape>

Selects the waveform shape for the combined frequency / level sweep sequence.

Parameters:

<Shape> SAWTooth | TRlangle
 *RST: SAWTooth

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 1296.

Manual operation: See ["Shape"](#) on page 534

[:SOURce<hw>] :SWEep:RESet[:ALL]

Resets all active sweeps to the starting point.

Usage: Event

Manual operation: See ["Reset Sweep"](#) on page 535

14.20 SYSTem subsystem

The SYSTem subsystem contains a series of commands for general functions which do not directly affect signal generation.

Example: Retrieving instrument specification

Note: The following values are merely an example.

```
// Retrieve information on data sheet versions.
// Query all data sheet versions saved on the instrument:
SYSTem:SPECification:VERSion:CATalog?
"04.03,04.02,04.01,04.00,03.04,03.03,03.02,03.01,03.00,02.96,02.95,02.94,
02.02,02.01,02.00,01.03,01.02,01.01,01.00"

// Query the initial data sheet version on delivery
SYSTem:SPECification:VERSion:FACTory?
// Response: "04.00"

// Select a specific data sheet version:
SYSTem:SPECification:VERSion "04.01"

// Retrieve information on parameters that belong to a particular data sheet.
// Query the IDs of all parameters listed in the selected version:
SYSTem:SPECification:VERSion "04.03"
SYSTem:SPECification:IDEntification:CATalog?
"ID_RF_FREQ_SETTING_TIME_ALC_ON_MS,ID_RF_FREQ_SETTING_TIME_MS,..."

// Query data sheet information on a specific parameter by its ID.
SYSTem:SPECification? "ID_RF_FREQ_SETTING_TIME_ALC_ON_MS"
// Returns the specified value of the parameter.
```

Example: Retrieving information on network-related settings

```
SYSTem:COMMunicate:NETWork:STATus?
// 1
SYSTem:PROTection1:STATe 0,123456

SYSTem:COMMunicate:NETWork:IPAdDress:MODE STAT
SYSTem:COMMunicate:NETWork:IPAdDress "10.113.0.104"
SYSTem:COMMunicate:NETWork:IPAdDress:DNS "10.0.2.166"
SYSTem:COMMunicate:NETWork:COMMon:HOSTname?
// "SMW200A-102030"
SYSTem:COMMunicate:NETWork:COMMon:WORKgroup "instrument"
SYSTem:COMMunicate:NETWork:COMMon:DOMain "rsint.net"
SYSTem:COMMunicate:NETWork:IPAdDress:GATeway "10.113.0.1"
SYSTem:COMMunicate:NETWork:IPAdDress:SUBNet:MASK "255.255.252.0"
SYSTem:COMMunicate:NETWork:MACAdDress "08 00 27 a3 a1 70"
SYSTem:PROTection1:STATe 1
```

Example: Restarting the network

```
SYSTem:COMMunicate:NETWork:REStArt
// terminates the network connection and sets it up again
```

Example: Finding out VISA resource strings

```
SYSTem:COMMunicate:NETWork:RESource?
// Response: "TCPIP::10.113.0.104::inst0::INSTR"

SYSTem:COMMunicate:HISLip:RESource?
// Response: "TCPIP::10.113.0.104::hislip0::INSTR"

SYSTem:COMMunicate:SOCKeT:RESource?
// Response: "TCPIP::10.113.0.104::5025::SOCKET"

SYSTem:COMMunicate:USB:RESource?
// "USB::0x0AAD::0x0092::100001::INSTR"

SYSTem:COMMunicate:GPIB:RESource?
// Response: "GPIB::28::INSTR"
SYSTem:COMMunicate:GPIB:SELf:ADDRes?
// Response: 28
SYSTem:COMMunicate:GPIB:LTERminator?
// Response: STAN

SYSTem:COMMunicate:SERial:RESource?
// Response: "ASRL1::INSTR"
SYSTem:COMMunicate:SERial:SBITs?
// Response: 1
SYSTem:COMMunicate:SERial:BAUD?
// Response: 115200
SYSTem:COMMunicate:SERial:PARity?
// Response: NONE
```

Disabling LAN services

- **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "LAN", "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.

Use the commands in [Example "To disable the LAN interface and LAN services"](#) on page 1309 to disable or enable the LAN interface and LAN interface services individually.

- a) For the first parameter of the command, enter the security password of your instrument.

The default password is 123456.

- b) For the second parameter of the command, enter the state: 1 (ON), 0 (OFF)

Example: To disable the LAN interface and LAN services

```
// *****
// Disable the LAN interface.
// *****
SYSTem:SECurity:NETWork:STATe "<password>", 0

// *****
// Disable the LAN services individually.
// *****
SYSTem:SECurity:NETWork:RAW:STATe "<password>", 0
// Disables remote access over raw socket.
SYSTem:SECurity:NETWork:SOE:STATe "<password>", 0
// Disables SCPI over Ethernet/LAN communication.
SYSTem:SECurity:NETWork:VNC:STATe "<password>", 0
// Disables remote access over VNC.
SYSTem:SECurity:NETWork:HTTP:STATe "<password>", 0
// Disables remote access over HTTP.
SYSTem:SECurity:NETWork:RPC:STATe "<password>", 0
// Disables remote access over remote procedure call (RPC).
SYSTem:SECurity:NETWork:SSH:STATe "<password>", 0
// Disables SSH network protocol that is used for service purposes.
SYSTem:SECurity:NETWork:FTP:STATe "<password>", 0
// Disables FTP for file transfer.
SYSTem:SECurity:NETWork:SMB:STATe "<password>", 0
// Disables shared access over SMB.
SYSTem:SECurity:NETWork:AVAHi:STATe "<password>", 0
// Disables Avahi service for automatic instrument configuration in the network.
SYSTem:SECurity:NETWork:SWUpdate:STATe "<password>", 0
// Disables software updates over LAN.
```

Example: Using the trial license

```
// Enable the trial license, and thus all options included
SYSTem:OPTion:TRial[:STATe] 1
// Query the included options
SYSTem:OPTion:TRial:LIST?
"SMW-K17, SMW-K44, SMW-K61, SMW-K62, SMW-K66, SMW-K94, SMW-K107, SMW-K540, SMW-K541, SMW-K544, SMW-K810,
```

Example: Querying the error queue

```
SYSTem:ERRor:STATic?
// Response: -221,"Settings conflict", 153,"Input voltage out of range", ...
// Returns all static errors that are collected in the error queue.
```

```
SYSTem:ERRor:HISTory:CLear
// Deletes the history entries.
```

Example: Configuring date and time

```
// Query the date and time setting of the instrument
// Query the current timezone and setting
SYSTem:DATE?
// Response: 2023,1,16;1
SYSTem:TIME?
// Response: 18,15,17;1
SYSTem:TIME:ZONE?
// Response: "";1 //default UTC setting
SYSTem:TIME:PROTOcol?
// Response: "OFF";1 // no protocol selected
SYSTem:NTP:STATe?
// Response: 0;1 // NTP is disabled

// Setting the timezone and NTP time protocol
SYSTem:TIME:ZONE:CATalog?
// Response: "UTC,leap-seconds.list,leapseconds,Africa/Abidjan,..."
SYSTem:TIME:ZONE "Europe/Berlin"
SYSTem:NTP:HOST "timesource.net" // sets the NTP server address
SYSTem:NTP:STATe?
// Response: 1 // the NTP time server is enabled
```

Commands

:SYSTem:ERRor:ALL?	1312
:SYSTem:ERRor:CODE:ALL?	1313
:SYSTem:ERRor:CODE[:NEXT]?	1313
:SYSTem:ERRor:COUNT?	1313
:SYSTem:ERRor[:NEXT]?	1314
:SYSTem:ERRor:GNEXt?	1314
:SYSTem:ERRor:HISTory:CLear	1315
:SYSTem:ERRor:STATic?	1315
:SYSTem:DLOCK	1315
:SYSTem:KLOCK	1315
:SYSTem:NINFormation?	1316
:SYSTem:ULOCK	1316
:SYSTem:LOCK:OWNer?	1317
:SYSTem:LOCK:RELease:ALL	1317
:SYSTem:LOCK:REQuest[:EXCLusive]?	1317
:SYSTem:SAV	1317
:SYSTem:RCL	1318

:SYSTem:PROTect<ch>[:STATe].....	1318
:SYSTem:COMMunicate:GPIB:LTERminator.....	1319
:SYSTem:COMMunicate:GPIB:RESource?.....	1319
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess.....	1319
:SYSTem:COMMunicate:HISLip:RESource?.....	1319
:SYSTem:COMMunicate:NETWork:IPADdress.....	1320
:SYSTem:COMMunicate:NETWork:IPADdress:MODE.....	1320
:SYSTem:COMMunicate:NETWork:MACaddress.....	1320
:SYSTem:COMMunicate:NETWork:RESource?.....	1320
:SYSTem:COMMunicate:NETWork:REStart.....	1321
:SYSTem:COMMunicate:NETWork:STATus?.....	1321
:SYSTem:COMMunicate:NETWork[:COMMon]:DOMain.....	1321
:SYSTem:COMMunicate:NETWork[:COMMon]:HOSTname.....	1321
:SYSTem:COMMunicate:NETWork[:COMMon]:WORKgroup.....	1322
:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS.....	1322
:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway.....	1322
:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK.....	1322
:SYSTem:COMMunicate:SERial:BAUD.....	1323
:SYSTem:COMMunicate:SERial:PARity.....	1323
:SYSTem:COMMunicate:SERial:RESource?.....	1323
:SYSTem:COMMunicate:SERial:SBITs.....	1323
:SYSTem:COMMunicate:SOCKet:RESource?.....	1323
:SYSTem:COMMunicate:USB:RESource?.....	1324
:SYSTem:HELP:EXPort.....	1324
:SYSTem:IDENtification.....	1324
:SYSTem:IDENtification:PRESet.....	1325
:SYSTem:IRESponse.....	1325
:SYSTem:ORESponse.....	1325
:SYSTem:LANGuage.....	1326
:SYSTem:INFormation:SCPI.....	1326
:SYSTem:SECurity:NETWork:AVAHI[:STATe].....	1326
:SYSTem:SECurity:NETWork:FTP[:STATe].....	1326
:SYSTem:SECurity:NETWork:HTTP[:STATe].....	1327
:SYSTem:SECurity:NETWork:RAW[:STATe].....	1327
:SYSTem:SECurity:NETWork:REMSupport[:STATe].....	1327
:SYSTem:SECurity:NETWork:RPC[:STATe].....	1327
:SYSTem:SECurity:NETWork:SMB[:STATe].....	1328
:SYSTem:SECurity:NETWork:SOE[:STATe].....	1328
:SYSTem:SECurity:NETWork:SSH[:STATe].....	1328
:SYSTem:SECurity:NETWork:SWUPdate[:STATe].....	1329
:SYSTem:SECurity:NETWork:VNC[:STATe].....	1329
:SYSTem:SECurity:NETWork[:STATe].....	1329
:SYSTem:SECurity:SANitize[:STATe].....	1329
:SYSTem:SECurity:SUPolicy.....	1330
:SYSTem:SECurity:VOLMode[:STATe].....	1330
:SYSTem:SPECification?.....	1330
:SYSTem:SPECification:VERSion.....	1331
:SYSTem:SPECification:IDENtification:CATalog?.....	1331
:SYSTem:SPECification:PARAmeter?.....	1331
:SYSTem:SPECification:VERSion:CATalog?.....	1332

:SYSTem:SPECification:VERSion:FACTory?	1332
:SYSTem:SRData?	1332
:SYSTem:STARtup:COMPLete?	1333
:SYSTem:OPTion:TRIAL:LIST?	1333
:SYSTem:OPTion:TRIAL[:STATe]	1333
:SYSTem:DATE	1333
:SYSTem:NTP:HOSTName	1334
:SYSTem:NTP:STATe	1334
:SYSTem:TIME	1334
:SYSTem:TIME:ZONE	1335
:SYSTem:TIME:ZONE:CATalog?	1335
:SYSTem:TIME:PROTocol	1335
:SYSTem:UPTime?	1336
:SYSTem:BIOS:VERSion?	1336
:SYSTem:VERSion?	1336
:SYSTem:OSYStem?	1336
:SYSTem:MMEMory:PATH:USER?	1336
:SYSTem:DFPR?	1337
:SYSTem:REBoot	1337
:SYSTem:REStart	1337
:SYSTem:SHUTdown	1337
:SYSTem:WAIT	1337

:SYSTem:ERRor:ALL?

Queries the error/event queue for all unread items and removes them from the queue.

Return values:

<All> string
 Error/event_number,"Error/event_description>[;Device-depend-
 ent info]"
 A comma separated list of error number and a short description
 of the error in FIFO order.
 If the queue is empty, the response is 0, "No error"
 Positive error numbers are instrument-dependent. Negative
 error numbers are reserved by the SCPI standard.
 Volatile errors are reported once, at the time they appear. Identical
 errors are reported repeatedly only if the original error has
 already been retrieved from (and hence not any more present in)
 the error queue.

Example:

```
SYSTem:ERRor:ALL?
// queries all entries in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.
```

Usage: Query only

Manual operation: See "[Clear History](#)" on page 1358

:SYSTem:ERRor:CODE:ALL?

Queries the error numbers of all entries in the error queue and then deletes them.

Return values:

<All> string
Returns the error numbers. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

0
"No error", i.e. the error queue is empty

Positive value
Positive error numbers denote device-specific errors

Negative value
Negative error numbers denote error messages defined by SCPI.

Example:

```
SYSTem:ERRor:CODE:ALL?
// queries all entries in the error queue.
Response: 0
// no errors have occurred since the error queue was last read out.
```

Usage: Query only

:SYSTem:ERRor:CODE[:NEXT]?

Queries the error number of the oldest entry in the error queue and then deletes it.

Return values:

<Next> string
Returns the error number. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

0
"No error", i.e. the error queue is empty

Positive value
Positive error numbers denote device-specific errors

Negative value
Negative error numbers denote error messages defined by SCPI.

Example:

```
SYSTem:ERRor:CODE:NEXT?
// queries the oldest entry in the error queue.
Response: 0
// no errors have occurred since the error queue was last read out.
```

Usage: Query only

:SYSTem:ERRor:COUnT?

Queries the number of entries in the error queue.

Return values:

<Count> integer
0
 The error queue is empty.

Example:

```
SYSTem:ERRor:COUNT?
// queries the number of entries in the error queue.
Response: 1
// one error has occurred since the error queue was last read out.
```

Usage: Query only

:SYSTem:ERRor[:NEXT]?

Queries the error/event queue for the oldest item and removes it from the queue.

Return values:

<Next> string
 Error/event_number,"Error/event_description>[;Device-dependent info]"
 Error number and a short description of the error.
 If the queue is empty, the response is 0, "No error"
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.
 Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

Example:

```
SYSTem:ERRor:NEXT?
// queries the oldest entry in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.
```

Usage: Query only

Manual operation: See "[Static Notifications/History](#)" on page 1358

:SYSTem:ERRor:GNEXT?

Similar to :SYSTem:ERRor[:NEXT]?, but queries the next entry from the global persistent error/event queue.

Return values:

<NextGlobalError> string
 Error/event number, "Error/event description> [;Device dependent info]"
 An error number and a short description of the error.
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Example: `SYSTem:ERRor:GNEXt?`
 // queries the next error message from the global error queue.

Usage: Query only

:SYSTem:ERRor:HISTory:CLEar

Clears the error history.

Example: See [Example "Querying the error queue"](#) on page 1310

Usage: Event

Manual operation: See ["Clear History"](#) on page 1358

:SYSTem:ERRor:STATic?

Returns a list of all errors existing at the time when the query is started. This list corresponds to the display on the info page under manual control.

Return values:

<StaticErrors> string

Example: See [Example "Querying the error queue"](#) on page 1310

Usage: Query only

Manual operation: See ["Static Notifications/History"](#) on page 1358

:SYSTem:DLOCK <DispLockStat>

Disables the manual operation over the display, including the front panel keyboard of the instrument.

Parameters:

<DispLockStat> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 0)

Example: `SYST:DLOC ON`
 Activates the display lock. The instrument cannot be operated via the display until it has been enabled with `SYST:DLOC OFF`.

Manual operation: See ["User Interface"](#) on page 803
 See ["Enabling a locked user interface for manual operation"](#) on page 804

:SYSTem:KLOCK <State>

Disables the front panel keyboard of the instrument.

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 0)

- Example:** `SYST:KLOC ON`
 Locks the front panel and external controls.
 To enable the controls, send `SYST:KLOC OFF`.
- Manual operation:** See ["User Interface"](#) on page 803
 See ["Enabling a locked user interface for manual operation"](#) on page 804

:SYSTem:NINFormation?

Queries the oldest information message ("Error History > Level > Info") in the error/event queue.

Return values:

<NextInfo> string

Example:

`:SYSTem:NINFormation?`

Queries the oldest entry in the info message queue.

Response: 90,"Info;=== Instrument startup...
 ==="

Information message containing error number 90, that states, that the instrument startup is complete.

Usage: Query only

:SYSTem:ULOCK <Mode>

Locks or unlocks the user interface of the instrument.

Parameters:

<Mode> ENABLEd | DONLy | DISabled | TOFF | VNConly

ENABLEd

Unlocks the display, the touchscreen and all controls for the manual operation.

DONLy

Locks the touchscreen and controls for the manual operation of the instrument. The display shows the current settings.

VNConly

Locks the touchscreen and controls for the manual operation, and enables remote operation over VNC. The display shows the current settings.

TOFF

Locks the touchscreen for the manual operation of the instrument. The display shows the current settings.

DISabled

Locks the display, the touchscreen and all controls for the manual operation.

*RST: n.a. (factory preset: ENABLEd)

Example: `:SYST:ULOC DIS`
 Activates the user interface lock, including display and controls.

Manual operation: See ["User Interface"](#) on page 803
 See ["Enabling a locked user interface for manual operation"](#) on page 804

:SYSTem:LOCK:OWNer?

Queries the sessions that have locked the instrument currently.

If an exclusive lock is set, the query returns the owner of this exclusive lock, otherwise it returns `NONE`.

Return values:

<Owner> string

Example: `SYST:LOCK:OWN?`
 Returns the owner of locking.
Response: `NONE`
 The instrument is not locked.

Usage: Query only

:SYSTem:LOCK:RELease:ALL

Revokes the exclusive access to the instrument.

Usage: Setting only

:SYSTem:LOCK:REQuest[:EXCLusive]?

Queries whether a lock for exclusive access to the instrument via ethernet exists. If successful, the query returns a 1, otherwise 0.

Return values:

<Success> integer

Example: `SYST:LOCK:REQ?`
 Queries the state of exclusive locking.
Response: `1`
 The exclusive locking is active.

Usage: Query only

:SYSTem:SAV <Pathname>

Saves the current R&S SMW settings in a file. To determine the file name and storage location, enter the directory and file name with the command. According to the file type, the R&S SMW assigns the extension (`*.savrc1.txt`) automatically.

Setting parameters:

<Pathname> string

Example: `SYSTem:SAV "/var/user/temp/Test"`
 // saves the file "Test.savrc1txt" in the directory /var/user/temp/.

Usage: Setting only

:SYSTem:RCL <Pathname>

Selects and uploads a *.savrc1txt file with previously saved R&S SMW settings from the default or a specified directory.

Setting parameters:

<Pathname> string

Example: `SYSTem:RCL "/var/user/temp/Test"`
 // loads the "Test.savrc1txt" file from the directory /var/user/temp/.

Usage: Setting only

:SYSTem:PROTect<ch>[:STATe] <State>[, <Key>]

Activates and deactivates the specified protection level.

Suffix:

<ch> Indicates the protection level.
 See also ["Protection"](#) on page 797

Parameters:

<State> 1 | ON | 0 | OFF
 *RST: n.a. (factory preset: 1)

Setting parameters:

<Key> integer
 The respective functions are disabled when the protection level is activated. No password is required for activation of a level. A password must be entered to deactivate the protection level. The default password for the first level is 123456. This protection level is required to unlock internal adjustments for example.

Example: To activate protection level:
 `SYSTem:PROTect1:STATe 1`
 Internal adjustments or hostname cannot be changed.
 To unlock protection level 1:
 `SYSTem:PROTect1:STATe 0,123456`
 Internal adjustments are accessible.

Manual operation: See ["Protection Level/Password"](#) on page 799

:SYSTem:COMMunicate:GPIB:LTERminator <LTerminator>

Sets the terminator recognition for remote control via GPIB interface.

Parameters:

<LTerminator> STANdard | EOI

EOI

Recognizes an LF (Line Feed) as the terminator only when it is sent with the line message EOI (End of Line). This setting is recommended particularly for binary block transmissions, as binary blocks may coincidentally contain a character with value LF (Line Feed), although it is not determined as a terminator.

STANdard

Recognizes an LF (Line Feed) as the terminator regardless of whether it is sent with or without EOI.

*RST: n.a. (factory preset: STANdard)

Example: See [Example"Finding out VISA resource strings"](#) on page 1308.

:SYSTem:COMMunicate:GPIB:RESource?

Queries the visa resource string for remote control via the GPIB interface.

To change the GPIB address, use the command `:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes`.

Return values:

<Resource> string

Example: See [Example"Finding out VISA resource strings"](#) on page 1308.

Usage: Query only

:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes <Address>

Sets the GPIB address.

Parameters:

<Address> integer

Range: 0 to 30

*RST: n.a. (factory preset: 28)

Example: See [Example"Finding out VISA resource strings"](#) on page 1308.

Manual operation: See ["GPIB Channel Address"](#) on page 845

:SYSTem:COMMunicate:HISLip:RESource?

Queries the VISA resource string. This string is used for remote control of the instrument with HiSLIP protocol.

Return values:

<Resource> string

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.

Usage: Query only

Manual operation: See ["HISLIP"](#) on page 844
See ["GPIB"](#) on page 845

:SYSTem:COMMunicate:NETWork:IPADdress <IpAddress>

Sets the IP address.

Parameters:

<IpAddress> string
Range: 0.0.0.0. to ff.ff.ff.ff

Example: See [Example "Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["IP Address"](#) on page 842

:SYSTem:COMMunicate:NETWork:IPADdress:MODE <Mode>

Selects manual or automatic setting of the IP address.

Parameters:

<Mode> AUTO | STATic
*RST: n.a. (factory preset: AUTO)

Example: See [Example "Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["Address Mode"](#) on page 842

:SYSTem:COMMunicate:NETWork:MACaddress <MacAddress>

Queries the MAC address of the network adapter.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<MacAddress> string

Example: See [Example "Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["MAC Address"](#) on page 843

:SYSTem:COMMunicate:NETWork:RESource?

Queries the visa resource string for Ethernet instruments.

Return values:

<Resource> string

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.**Usage:** Query only**Manual operation:** See ["VXI11"](#) on page 844**:SYSTem:COMMunicate:NETWork:REStart**

Restarts the network.

Example: See [Example "Restarting the network"](#) on page 1308.**Usage:** Event**Manual operation:** See ["Restart Network"](#) on page 841**:SYSTem:COMMunicate:NETWork:STATus?**

Queries the network configuration state.

Return values:

<State> 1 | ON | 0 | OFF

Example: See [Example "Retrieving information on network-related settings"](#) on page 1308.**Usage:** Query only**Manual operation:** See ["Network Status"](#) on page 841**:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain <Domain>**

Determines the primary suffix of the network domain.

Parameters:

<Domain> string

Example: See [Example "Retrieving information on network-related settings"](#) on page 1308.**Manual operation:** See ["DNS Suffix"](#) on page 843**:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTname <Hostname>**

Sets an individual hostname for the R&S SMW.

Note: We recommend that you do not change the hostname to avoid problems with the network connection. If you change the hostname, be sure to use a unique name.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Hostname> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["Hostname"](#) on page 841

:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup <Workgroup>

Sets an individual workgroup name for the instrument.

Parameters:

<Workgroup> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["Workgroup"](#) on page 842

:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS <DNS>

Determines or queries the network DNS server to resolve the name.

Parameters:

<DNS> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["DNS Server"](#) on page 843

:SYSTem:COMMunicate:NETWork[:IPAdDress]:GATeway <Gateway>

Sets the IP address of the default gateway.

Parameters:

<Gateway> string
Range: 0.0.0.0 to ff.ff.ff.ff

Example: See [Example"Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["Default Gateway"](#) on page 843

:SYSTem:COMMunicate:NETWork[:IPAdDress]:SUBNet:MASK <Mask>

Sets the subnet mask.

Parameters:

<Mask> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 1308.

Manual operation: See ["Subnet Mask"](#) on page 842

:SYSTem:COMMunicate:SERial:BAUD <Baud>

Defines the baudrate for the serial remote control interface.

Parameters:

<Baud> 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200
*RST: n.a. (factory preset: 115200)

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.

Manual operation: See ["Baud Rate"](#) on page 846

:SYSTem:COMMunicate:SERial:PARity <Parity>

Enters the parity for the serial remote control interface.

Parameters:

<Parity> NONE | ODD | EVEN
*RST: n.a. (factory preset: NONE)

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.

Manual operation: See ["Parity"](#) on page 846

:SYSTem:COMMunicate:SERial:RESource?

Queries the visa resource string for the serial remote control interface. This string is used for remote control of the instrument.

Return values:

<Resource> string

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.

Usage: Query only

Manual operation: See ["SERIAL"](#) on page 845

:SYSTem:COMMunicate:SERial:SBITs <SBits>

Defines the number of stop bits for the serial remote control interface.

Parameters:

<SBits> 1 | 2
*RST: n.a. (factory preset: 1)

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.

Manual operation: See ["Stop Bits"](#) on page 846

:SYSTem:COMMunicate:SOCKet:RESource?

Queries the visa resource string for remote control via LAN interface, using TCP/IP socket protocol.

Return values:

<Resource> string

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.**Usage:** Query only**Manual operation:** See ["Socket"](#) on page 844**:SYSTem:COMMunicate:USB:RESource?**

Queries the visa resource string for remote control via the USB interface.

Return values:

<Resource> string

Example: See [Example "Finding out VISA resource strings"](#) on page 1308.**Usage:** Query only**Manual operation:** See ["USB"](#) on page 845**:SYSTem:HELP:EXPort**

Saves the online help as zip archive in the user directory.

Example:

```
:SYSTem:HELP:EXPort
MMEM:CDIR?
// "/var/user"
MMEM:CAT?
// .., "Log,DIR,4096", "help.tgz,BIN,69836600"
// confirms that help zip archive is saved.
```

Usage: Event**Manual operation::** "Setup > Help > Export Help to User Path"**:SYSTem:IDENtification <Identification>**Selects the mode to determine the "IDN String" and the "OPT String" for the instrument, selected with command [:SYSTem:LANGuage](#).**Note:** While working in an emulation mode, the R&S SMW specific command set is disabled, that is, the SCPI command `SYST:IDEN` is discarded.**Parameters:**

<Identification>

AUTO | USER

AUTO

Automatically determines the strings.

USER

User-defined strings can be selected.

***RST:** n.a. (factory preset: AUTO)

Example: `SYST:IDEN AUTO`
Automatically assigns the OPT and IDN strings according to the selected instrument language.

Manual operation: See ["Mode"](#) on page 847

:SYSTem:IDENtification:PRESet

Sets the *IDN and *OPT strings in user defined mode to default values.

Example: `SYST:IDEN USER`
`SYST:IDEN:PRES`

Usage: Event

Manual operation: See ["Set to Default"](#) on page 847

:SYSTem:IRESpone <IdnResponse>

Defines the user defined identification string for *IDN.

Note: While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command `SYST:IRES` is discarded.

Parameters:

<IdnResponse> string

Example: `SYST:IDEN USER`
`// Selects a user-defined identification`
`SYST:IRES "Test Device"`
`// Defines identification string 'test device'`
`*IDN?`
`// Response: 'test device'`

Manual operation: See ["IDN String"](#) on page 848

:SYSTem:ORESpone <OResponse>

Defines the user defined response string for *OPT.

Note: While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command `SYST:ORES` is discarded.

Parameters:

<OResponse> string

Example: `SYST:IDEN USER`
`// Selects a user-defined identification`
`SYST:ORES "Test Option"`
`// Defines the OPT string 'test option'`
`*OPT?`
`// Response: 'test option'`

Manual operation: See ["OPT String"](#) on page 848

:SYSTem:LANGuage <Language>

Sets the remote control command set.

Parameters:

<Language> string

Example:

```
SYSTem:LANGuage "SCPI"  
// selects SCPI command set
```

Manual operation: See ["Language"](#) on page 847

:SYSTem:INFormation:SCPI <InfoString>

Inserts system information in recorded SCPI command lists, for example information on a missing command.

Parameters:

<InfoString> string

Example:

```
SYST:INF:SCPI "missing command"  
enters the information into a recorded SCPI command list.
```

:SYSTem:SECurity:NETWork:AVAHI[:STATE] <SecPassWord>, <AvahiState>

Disables the Avahi service for automatic configuration of the instrument in a network.

Parameters:

<AvahiState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:FTP[:STATE] <SecPassWord>, <FtpState>

Disables FTP protocol for file transfer between the instrument and host.

Parameters:

<FtpState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:HTTP[:STATe] <SecPassWord>, <HttpState>

Disables control of the instrument over HTTP, the protocol for hypermedia information systems.

Parameters:

<HttpState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:RAW[:STATe] <SecPassWord>, <RawState>

Disables the LAN interface for remote control of the instrument over raw socket port.

Parameters:

<RawState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

:SYSTem:SECurity:NETWork:REMSupport[:STATe] <NetRemSupport>

Disables communication over SSH (SCP) for service purposes.

Parameters:

<NetRemSupport> 1 | ON | 0 | OFF
*RST: n.a. (factory preset: 1)

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:RPC[:STATe] <SecPassWord>, <RpcState>

Enables the LAN interface for remote control of the instrument via remote procedure calls (RPC).

Parameters:

<RpcState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

:SYSTem:SECurity:NETWork:SMB[:STATe] <SecPassWord>, <SmbState>

Disables access to the file system, printers and serial ports in a network over SMB.

Parameters:

<SmbState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:SOE[:STATe] <SecPassWord>, <SoeState>

Disables control of the instrument over LAN using SCPI commands.

Parameters:

<SoeState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

:SYSTem:SECurity:NETWork:SSH[:STATe] <SecPassWord>, <SshState>

Disables control of the instrument over LAN using the SSH network protocol.

Parameters:

<SshState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

```
:SYSTem:SECurity:NETWork:SWUPdate[:STATe] <SecPassWord>,
    <SwUpdateState>
```

Disables software update over LAN.

Parameters:

<SwUpdateState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

```
:SYSTem:SECurity:NETWork:VNC[:STATe] <SecPassWord>, <VncState>
```

Disables the VNC interface for remote control of the instrument.

Parameters:

<VncState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309.

Manual operation: See ["LAN Services"](#) on page 806

```
:SYSTem:SECurity:NETWork[:STATe] <SecPassWord>, <LanStorState>
```

Disables the LAN interface in general, including all services.

Parameters:

<LanStorState> 1 | ON | 0 | OFF

Setting parameters:

<SecPassWord> string
Current security password.
The default password is 123456.

Example: See [Example "To disable the LAN interface and LAN services"](#) on page 1309

Manual operation: See ["LAN"](#) on page 806

```
:SYSTem:SECurity:SANitize[:STATe] <SecPassWord>, <MmemProtState>
```

Sanitizes the internal memory.

Parameters:

<MmemProtState> 0 | 1 | OFF | ON
 *RST: 0

Setting parameters:

<SecPassWord> string

Example:

SYSTem:SECurity:SANitize[:STATe] 1

Manual operation: See "[Sanitize](#)" on page 802

:SYSTem:SECurity:SUPolicy <SecPassWord>, <UpdatePolicy>

Configures the automatic signature verification for firmware installation.

Parameters:

<UpdatePolicy> STRict | CONFirm | IGNore
 *RST: n.a. (factory preset: CONFirm)

Setting parameters:

<SecPassWord> string

Manual operation: See "[Secure Update Policy](#)" on page 800

:SYSTem:SECurity:VOLMode[:STATe] <SecPassWord>, <MmemProtState>

Activates volatile mode, so that no user data can be written to the internal memory permanently.

To enable volatile mode, reboot the instrument. Otherwise the change has no effect.

Parameters:

<MmemProtState> 0 | 1 | OFF | ON
 *RST: 0

Setting parameters:

<SecPassWord> string
 Current security password
 The default password is 123456.

Example:

SYSTem:SECurity:VOLMode:STATe "123456", 1
 SYSTem:REBoot

Manual operation: See "[Volatile Mode](#)" on page 801

:SYSTem:SPECification? <Id>

Retrieves data sheet information for a specific parameter.

Setting parameters:

<Id> string
 Identifies the name of the entry in the data sheet, as queried with the command `:SYSTem:SPECification:IDENTification:CATalog?` on page 1331

Return values:

<ValList> float
 Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet. See also [Chapter 13.6.2.4, "Datasheet"](#), on page 868.

Example: See [Example "Retrieving instrument specification"](#) on page 1307.

Usage: Query only

:SYSTem:SPECification:VERSion <Version>

Selects a data sheet version from the data sheets saved on the instrument.

Further queries regarding the data sheet parameters (**<Id>**) and their values refer to the selected data sheet.

To query the list of data sheet versions, use the command `:SYSTem:SPECification:VERSion:CATalog?` on page 1332.

Parameters:

<Version> string

Example: See `:SYSTem:SPECification?` on page 1330.

:SYSTem:SPECification:IDENTification:CATalog?

Queries the parameter identifiers (**<Id>**) available in the data sheet.

Return values:

<IdList> string
 Comma-separated string of the parameter identifiers (**<Id>**)

Example: See `:SYSTem:SPECification?` on page 1330.

Usage: Query only

:SYSTem:SPECification:PARAmeter? <Id>[, <Parameter>]

Retrieves data sheet information for a specific parameter.

Setting parameters:

<Id> string
 Identifies the name of the entry in the data sheet.
 Query the data sheet parameters with the command `:SYSTem:SPECification:IDENTification:CATalog?`.

<Parameter>	float
	An additional value the result (ValList) depends on.
Return values:	
<ValList>	float
	Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet.
Example:	<p>Note: The following values are merely an example. Your instrument may not support the same parameters.</p> <p>SYST:SPEC:PAR? "ID_RF_FREQ_SETTING_TIME_MS",0.1</p> <p>SYST:SPEC:PAR? "ID_RF_LEVEL_MAX_GENERAL_DBM",0.1</p>
Usage:	Query only

:SYSTem:SPECification:VERSion:CATalog?

Queries all data sheet versions stored in the instrument.

Return values:

<VersCatalog> string

Example: See [:SYSTem:SPECification?](#) on page 1330.

Usage: Query only

:SYSTem:SPECification:VERSion:FACTory?

Queries the data sheet version of the factory setting.

Return values:

<Version> string

Example: See [:SYSTem:SPECification?](#) on page 1330.

Usage: Query only

Manual operation: See ["Versions"](#) on page 1364

:SYSTem:SRData?

Queries the SCPI recording data from the internal file.

This feature enables you to transfer an instrument configuration to other test environments, as e.g. laboratory virtual instruments.

Return values:

<FileData> block data

Example:

```
SYSTem:SRData?
// #3118:SOURce1:ROSCillator:SOURce EXT
// :SOURce1:FREQuency:CW 4000000000
// :SOURce1:FREQuency:OFFSet 1000000
// :SOURce1:AM1:STATe 1
// :OUTPut1:STATe 1
```

Usage: Query only

:SYSTem:STARtup:COMPlete?

Queries if the startup of the instrument is completed.

Return values:

<Complete> 1 | ON | 0 | OFF
*RST: 0

Example:

```
SYSTem:STARtup:COMPlete?
Response: 1
// the instrument has started and is ready for operation.
```

Usage: Query only

:SYSTem:OPTion:TRial:LIST?

Queries the options included in the trial license. For a list of all available options and their description, refer to the data sheet.

Return values:

<TrialOptList> string

Example: see [Example "Using the trial license"](#) on page 1309

Usage: Query only

Manual operation: See ["Trial License Table"](#) on page 781

:SYSTem:OPTion:TRial[:STATe] <TrialOptState>

Activates the trial license.

Parameters:

<TrialOptState> 1 | ON | 0 | OFF
*RST: n.a. (factory preset: 0)

Example: see [Example "Using the trial license"](#) on page 1309

Manual operation: See ["Trial Period"](#) on page 780

:SYSTem:DATE <Year>, <Month>, <Day>

Queries or sets the date for the instrument-internal calendar.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Year>	integer
<Month>	integer
	Range: 1 to 12
<Day>	integer
	Range: 1 to 31

Example: See [Example"Configuring date and time"](#) on page 1310.

Manual operation: See ["Date"](#) on page 1372

:SYSTem:NTP:HOSTname <NTPName>

Sets the address of the NTP server. You can enter the IP address, or the hostname of the time server, or even set up an own vendor zone. See the Internet for more information on NTP.

Parameters:

<NTPName>	string
-----------	--------

Manual operation: See ["NTP Address"](#) on page 1372

:SYSTem:NTP:STATe <UseNtpState>

Activates clock synchronization via NTP.

Parameters:

<UseNtpState>	1 ON 0 OFF
*RST:	n.a. (factory preset: 0)

Example: See [Example"Configuring date and time"](#) on page 1310.

Manual operation: See ["NTP Address"](#) on page 1372

:SYSTem:TIME <Hour>, <Minute>, <Second>

Queries or sets the time for the instrument-internal clock.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Hour>	integer
	Range: 0 to 23
<Minute>	integer
	Range: 0 to 59
<Second>	integer
	Range: 0 to 59

Example: See [Example"Configuring date and time"](#) on page 1310.

Manual operation: See ["Time"](#) on page 1372

:SYSTem:TIME:ZONE <TimeZone>

Sets the timezone. You can query the list of the available timezones with [:SYSTem:TIME:ZONE:CATalog?](#).

Parameters:

<TimeZone> string

Example: See [Example"Configuring date and time"](#) on page 1310.

Manual operation: See ["Timezone"](#) on page 1372

:SYSTem:TIME:ZONE:CATalog?

Queries the list of available timezones.

Return values:

<Catalog>

Example: See [Example"Configuring date and time"](#) on page 1310.

Usage: Query only

Manual operation: See ["Timezone"](#) on page 1372

:SYSTem:TIME:PROTocol <TimeProtocol>

Sets the date and time of the operating system.

Parameters:

<TimeProtocol> OFF | NONE | 0 | NTP | ON | 1

NONE

Sets the date and time according to the selected timezone, see [:SYSTem:TIME:ZONE:CATalog?](#) on page 1335 and [:SYSTem:TIME:ZONE](#) on page 1335.

NTP

Sets the date and time derived from the network time protocol. To select the NTP time server, use the commands [:SYSTem:NTP:HOSTname](#) on page 1334 and [:SYSTem:NTP:STATe](#) on page 1334.

*RST: n.a. (factory preset: NONE)

Example: See [Example"Configuring date and time"](#) on page 1310.

Manual operation: See ["Time Protocol"](#) on page 1372

:SYSTem:UPTime?

Queries the up time of the operating system.

Return values:

<UpTime> "<ddd.hh:mm:ss>"

Example:

SYSTem:UPTime?

Response: "0.08:11:00"

Usage:

Query only

:SYSTem:BIOS:VERSIon?

Queries the BIOS version of the instrument.

Return values:

<Version> string

Example:

SYST:BIOS:VERS?

queries the BIOS version.

Response: 123456

Usage:

Query only

:SYSTem:VERSIon?

Queries the SCPI version the instrument's command set complies with.

Return values:

<Version> string

Example:

SYSTem:VERSIon

// queries the SCPI version.

Response: "1996"

// the instrument complies with the SCPI version from 1996.

Usage:

Query only

:SYSTem:OSYSstem?

Queries the operating system of the instrument.

Return values:

<OperSystem> string

Example:

SYSTem:OSYSstem?

Response: "Linux"

Usage:

Query only

:SYSTem:MMEMory:PATH:USER?

Queries the user directory, that means the directory the R&S SMW stores user files on.

Return values:**<PathUser>** string**Example:**

SYSTem:MMEMory:PATH:USER?

Response: "'/var/user/'"

Usage:

Query only

:SYSTem:DFPR?

Queries the device footprint of the instrument. The retrieved information is in machine-readable form suitable for automatic further processing.

If you are obtaining technical support as described in [Chapter 15.9, "Collecting information for technical support"](#), on page 1366, this information is automatically retrieved and is part of the created *.tar.gz support file.

Return values:**<DeviceFootprint>** string

Information on the instrument type, device identification and details on the installed FW version, hardware and software options.

Example:

:SYSTem:DFPR?

Usage:

Query only

:SYSTem:REBoot

Reboots the instrument including the operating system.

Usage:

Event

:SYSTem:REStart

Restarts the instrument without restarting the operating system.

Usage:

Event

:SYSTem:SHUTdown

Shuts down the instrument.

Usage:

Event

:SYSTem:WAIT <TimeMs>

Delays the execution of the subsequent remote command by the specified time.

This function is useful, for example to execute an SCPI sequence automatically but with a defined time delay between some commands.

See [Chapter 12.4.4, "How to assign actions to the \[USER\] key"](#), on page 771.

Setting parameters:

<TimeMs> integer
 Wait time in ms
 Range: 0 to 10000
 *RST: 0

Example:

```
SYSTem:WAIT 10000
// Waits 10s before resetting the instrument.
*RST
```

Usage: Setting only

14.21 STATus subsystem

This system contains the commands for the status reporting system. See also [Chapter 13.4, "Status reporting system"](#), on page 829 for detailed information.

*RST on page 915 has no effect on the status registers.

Value ranges

- Queries return the current value of the respective register, which permits a check of the device status.
 Return values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)
- The configuration commands set the respective register thus determining which status changes of the R&S SMW cause the status registers to be changed.
 Setting values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)

:STATus:OPERation:CONDition?	1338
:STATus:OPERation:ENABle	1339
:STATus:OPERation[:EVENT]	1339
:STATus:OPERation:NTRansition	1339
:STATus:OPERation:PTRansition	1339
:STATus:PRESet	1340
:STATus:QUEStionable:CONDition	1340
:STATus:QUEStionable:ENABle	1340
:STATus:QUEStionable[:EVENT]	1341
:STATus:QUEStionable:NTRansition	1341
:STATus:QUEStionable:PTRansition	1341
:STATus:QUEue[:NEXT]?	1341

:STATus:OPERation:CONDition?

Queries the content of the CONDition part of the STATus:OPERation register.

This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out because it indicates the current hardware status.

Return values:

<Condition> string

Example:

:STATus:OPERation:CONDition?

Usage:

Query only

:STATus:OPERation:ENABLE <Enable>

Sets the bits of the ENABLE part of the STATus:OPERation register. This setting determines which events of the Status-Event part are forwarded to the sum bit in the status byte. These events can be used for a service request.

Parameters:

<Enable> string

Example:

:STAT:OPER:ENAB 32767

all events are forwarded to the sum bit of the status byte.

:STATus:OPERation[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:OPERation register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example:

:STAT:OPER:EVEN?

queries the STATus:OPERation:EVENT register.

:STATus:OPERation:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:OPERation register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register. The disappearance of an event in the hardware is thus registered, for example the end of an adjustment.

Parameters:

<Ntransition> string

Example:

:STAT:OPER:NTR 0

a transition from 1 to 0 in the condition part of the Status:Operation register does not cause an entry to be made in the EVENT part.

:STATus:OPERation:PTRansition <Ptransition>

Sets the bits of the PTRansition part of the STATus:OPERation register. If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the EVENT part of the register. A new event in the hardware is thus registered, for example the start of an adjustment.

Parameters:**<Ptransition>** string**Example:**`:STAT:OPER:PTR 32767`

all transitions from 0 to 1 in the condition part of the Status:Operation register cause an entry to be made in the EVENT part.

:STATus:PRESet <Preset>

Resets the status registers. All PTRansition parts are set to FFFFh (32767), i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE parts of STATus:OPERation and STATus:QUEStionable are set to 0, i.e. all events in these registers are not passed on.

Parameters:**<Preset>** string**Example:**`STAT:PRES`

resets the status registers.

:STATus:QUEStionable:CONDition <Condition>

Queries the content of the CONDition part of the STATus:QUEStionable register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out since it indicates the current hardware status.

Parameters:**<Condition>** string**Example:**`:STATus:QUEStionable:CONDition?`

queries the Status:Questionable:Condition register.

:STATus:QUEStionable:ENABle <Enable>

Sets the bits of the ENABle part of the STATus:QUEStionable register. The enable part determines which events of the STATus:EVENT part are enabled for the summary bit in the status byte. These events can be used for a service request.

If a bit in the ENABle part is 1, and the corresponding EVENT bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

Parameters:**<Enable>** string**Example:**`STAT:QUES:ENAB 1`

Problems when performing an adjustment cause an entry to be made in the sum bit.

:STATus:QUESTionable[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:QUESTionable register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example:

STAT:QUES:EVEN?

queries the Status:Questionable:Event register.

:STATus:QUESTionable:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<Ntransition> string

Example:

STAT:QUES:NTR 0

a transition from 1 to 0 in the condition part of the STATus:QUESTionable register does not cause an entry to be made in the EVENT part

:STATus:QUESTionable:PTRansition <PTransition>

Sets the bits of the PTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<PTransition> string

Example:

STAT:QUES:PTR 32767

all transitions from 0 to 1 in the condition part of the STATus:QUESTionable register cause an entry to be made in the EVENT part

:STATus:QUEue[:NEXT]?

Queries the oldest entry in the error queue and then deletes it. Positive error numbers denote device-specific errors, and negative error numbers denote error messages defined by SCPI. If the error queue is empty, 0 ("No error") is returned.

The command is identical to :SYSTem:ERRor[:NEXT]? on page 1314.

Return values:

<Next> string

Example: :STATus:QUEue?
 queries the oldest entry in the error queue.
 Response: 0, 'no error'
 no errors have occurred since the error queue was last read out

Usage: Query only

14.22 TEST subsystem

The TEST subsystem contains the commands for performing test routines directly at the hardware assemblies.

The selftest responses with a 0 if the test is performed successfully, otherwise a value other than 0 is returned. None of the commands of this system has a *RST value.

Example: Testing the screen display

```
// show the check screen
:TEST:PIXel:WINDow 1
// select the color for the display, e.g. blue
TEST:PIXel:COLor BLUE
// select the sequence for changing the color automatically
TEST:PIXel:COLor AUTO //(~3s per color)
// select a specific RGB color, e.g. black
TEST:PIXel:RGBA 0,0,0,255
// turn on the gradient
TEST:PIXel:GRADient 1
// switch to text mode
:TEST:PIXel:TEXT 1
// set the point size of the text
:TEST:PIXel:POINTsize 600
// exit the check screen
:TEST:PIXel:WINDow 0
```

:TEST:BASeband?	1343
:TEST:BASeband:LOG?	1343
:TEST:BB:BNC:CONNection?	1343
:TEST:BB:BNC:DESTination	1344
:TEST:BB:BNC:LOG?	1344
:TEST:BB:BNC:SOURce	1344
:TEST:BB:GENerator:ARBitrary	1345
:TEST:BB:GENerator:FREQuency<ch>	1345
:TEST:BB:GENerator:GAIN	1345
:TEST:BB:GENerator:SOURce	1346
:TEST:BB:GENerator:STATe	1346
:TEST<hw>:DIRect:BLOCK:READ?	1346
:TEST<hw>:DIRect:BLOCK:WRITe	1347
:TEST<hw>:ALL:START	1347

:TEST<hw>:ALL:RESult?	1347
:TEST:PIXel:COLor	1347
:TEST:PIXel:GRADient	1348
:TEST:PIXel:POINtsize	1348
:TEST:PIXel:RGBA	1348
:TEST:PIXel:TEXT	1348
:TEST:PIXel:WINDow	1348

:TEST:BASEband?

Queries the result of the baseband selftest.

Return values:

<TestBbError> 0 | 1 | RUNning | STOPped

Example:

```
:TEST:BASEband?
// 0
// the test succeeded
```

Usage: Query only

Manual operation: See "[Execute Baseband Selftest](#)" on page 1386

:TEST:BASEband:LOG?

Queries the log message reported during the baseband test.

This is a password-protected function. Unlock the protection level 1 to access it.

Return values:

<TestBasebandLog> string

Example:

```
SYSTem:PROTect1 0,123456
TEST:BB:BASEband:LOG?
// queries the reported message
```

Usage: Query only

Manual operation: See "[Log Message](#)" on page 1387

:TEST:BB:BNC:CONNection?

Queries the BNC connection test result.

This is a password-protected function. Unlock the protection level 1 to access it.

Return values:

<TestStatus> 0 | 1 | RUNning | STOPped

Example:

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:CONNection?
// RUN
// test is running
```

Usage: Query only

Manual operation: See "Execute BNC Connection Test" on page 1386

:TEST:BB:BNC:DESTination <BncDestination>

Selects the BNC connection test destination.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

```
<BncDestination>  AUTO | USER1 | USER2 | USER3 | USER4 | USER5 | USER6 |
                   TRGA | TRGB | C1TMC1 | C1TM2 | C1TM3 | C2TMC4 |
                   C2TM5 | C2TM6 | F1TMC1 | F1TM2 | F1TM3 | F2TMC4 |
                   F2TM5 | F2TM6 | F3TMC1 | F3TM2 | F3TM3 | F4TMC4 |
                   F4TM5 | F4TM6
                   *RST:      USER2
```

Example:

```

SYSTem:PROTect1 0,123456
TEST:BB:BNC:DESTination TRGA
// tests the instrument trigger connector of path A

```

Manual operation: See "Destination" on page 1386

:TEST:BB:BNC:LOG?

Queries the log message reported during the BNC connector test.

This is a password-protected function. Unlock the protection level 1 to access it.

Return values:

<Log>	string
-------	--------

Example:

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:LOG?
// queries the reported message
```

Usage: Query only

Manual operation: See ["Log Message"](#) on page 1386

:TEST:BB:BNC:SOURce <BncSource>

Selects the BNC connection test source.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

```
<BncSource>      AUTO | USER1 | USER2 | USER3 | USER4 | USER5 | USER6 |
                  TRGA | TRGB | C1TMC1 | C1TM2 | C1TM3 | C2TMC4 |
                  C2TM5 | C2TM6 | F1TMC1 | F1TM2 | F1TM3 | F2TMC4 |
                  F2TM5 | F2TM6 | F3TMC1 | F3TM2 | F3TM3 | F4TMC4 |
                  F4TM5 | F4TM6
                  *RST:      USER1
```

Example:

```

SYSTEM:PROTECT1 0,123456
TEST:BB:BNC:SOURCE AUTO
// detects the connectors at that signal is assigned
// and performs the connecton test

```

Manual operation: See ["Source"](#) on page 1385

:TEST:BB:GENerator:ARBitrary <Filename>

Selects the ARB waveform to be tested.

Parameters:

<Filename> string

Example:

```

TEST:BB:GENerator:ARBitrary "3gpp.wv"
// Tests the loaded waveform, generating a 3GPP signal

```

Manual operation: See ["Select ARB File"](#) on page 1388

:TEST:BB:GENerator:FREQuency<ch> <Frequency>

Sets the frequency of the test sine or constant I/Q test signal.

Parameters:

<Frequency> float

Range: -250E6 to 250E6

Increment: 1E-3

*RST: 1E6

Example:

```

TEST:BB:GENerator:FREQuency 50 MHz

```

Manual operation: See ["Frequency"](#) on page 1388

:TEST:BB:GENerator:GAIN <Gain>

Sets the gain for a sine or constant I/Q test signal.

Parameters:

<Gain> float

Range: -1 to 1

Increment: 1E-6

*RST: 1

Example:

```

TEST:BB:GENerator:GAIN 0.5
// amplifies the test signal by a factor of 0.5

```

Manual operation: See ["Gain"](#) on page 1388

:TEST:BB:GENerator:SOURce <IqSource>

Selects the test signal source.

Parameters:

<IqSource> SINE | CONStant | ARB | TTONE

SINE

Generates a sine waveform. To determine the frequency, use command **:TEST:BB:GENerator:FREQuency<ch>** on page 1345.

CONStant

Uses a constant I/Q test signal.

ARB

Selects a signal generated generated by the ARB.

*RST: SINE

Example: `:TEST:BB:GENerator:SOURce SINE`

Manual operation: See "IQ Source" on page 1387

:TEST:BB:GENerator:STATe <State>

Starts the test generator.

Parameters:

<State> 1 | ON | 0 | OFF

*RST: 0

Example: `TEST:BB:GENerator:STATe ON`
 // activates the test generator

Manual operation: See "State" on page 1387

:TEST<hw>:DIRect:BLOCK:READ? <Board>, <SubAddr>, <Addr>[, <Len>]

Direct mode for querying the blocks of the hardware assemblies directly.

The respective hardware assembly responds directly to the command; any safety mechanisms are bypassed. This function is only available via remote control.

Query parameters:

<Board> string

<SubAddr> integer

<Addr> integer

<Len> integer

Return values:

<DataBlock> string

Example: `TEST:DIR:BLOC:READ? 'TEST_SCPI',0,0,8`

Usage: Query only

:TEST<hw>:DIReCt:BLock:WRITe <BoardName>, <SubAddress>, <StartAddress>, <DataBlock>

Direct mode for programming the blocks of the hardware assemblies directly.

The respective hardware assembly responds directly to the command; any safety mechanisms are bypassed. This function is only available via remote control.

Setting parameters:

<BoardName> string
 <Board>, <SubAddr>, <Addr>, <Data>

<SubAddress> integer

<StartAddress> integer

<DataBlock> string

Example: TEST:DIR:BLOC:WRIT 'TEST_SCPI',0,0,#1812345678

Usage: Setting only

:TEST<hw>:ALL:START

Usage: Event

Starts the selftest. Use the command [:TEST<hw>:ALL:RESult?](#) to query the result.

:TEST<hw>:ALL:RESult?

Queries the result of the performed selftest. Start the selftest with [:TEST<hw>:ALL:START](#).

Return values:

<Result> 0 | 1 | RUNning | STOPped
 *RST: STOPped

Usage: Query only

:TEST:PIXel:COLor <PixTestColor>

Selects the color of the screen.

"AUTO" switches from one color to the next in time intervals of approximately 3 s per color.

Setting parameters:

<PixTestColor> RED | BLUE | WHITe | GREen | AUTO | GR25 | GR50 | GR75 | BLACK
 *RST: RED

Example: See [Example "Testing the screen display"](#) on page 1342.

Usage: Setting only

:TEST:PIXel:GRADient <PixTestGradStat>

Activates the gradient for display screen test.

Parameters:

<PixTestGradStat> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Testing the screen display"](#) on page 1342.

:TEST:PIXel:POINTsize <PixTestGradStat>

Sets the point size of the test text.

Parameters:

<PixTestGradStat> integer
Range: 0 to 999
*RST: n.a. (no preset. default: 0)

Example: See [Example "Testing the screen display"](#) on page 1342.

:TEST:PIXel:RGBA

Sets a specific RGBA color for the screen.

Example: See [Example "Testing the screen display"](#) on page 1342.

:TEST:PIXel:TEXT <PixTestGradStat>

Activats the test text mode.

Parameters:

<PixTestGradStat> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Testing the screen display"](#) on page 1342.

:TEST:PIXel:WINDow <PixTestWindow>

Activates the check display screen.

Setting parameters:

<PixTestWindow> 1 | ON | 0 | OFF
*RST: 0

Example: See [Example "Testing the screen display"](#) on page 1342.

Usage: Setting only

14.23 TRIGger subsystem

The TRIGger system contains the commands for selecting the trigger source for the RF and LF sweep.

You can work with an internal or with an externally applied trigger signal. In this case, use the commands in the `SOURCE:INPUT` subsystem to configure the signal.

The trigger system of the R&S SMW is a simplified implementation of the SCPI trigger system. The TRIGger system differs from the SCPI system as follows:

- No `INITiate` command; the instrument behaves as if `INITiate:CONTinuous ON` were set.
- Under TRIGger several sweep subsystems exist.
- The trigger source names correspond directly to the various settings of manual control. SCPI uses different names which are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

In addition to these commands, see more trigger-related commands in the modulation and RF signal subsystems.

Table 14-11: Cross-reference between the manual and remote control

R&S proprietary value name	SCPI conform value name	Parameter in manual control
AUTO	IMMediate	"Auto" mode
SINGLE	BUS	"Single" mode.
EXTernal	EXTernal	"Ext Single" and "Ext Step" mode. Use command <code>LFO:SWEep:MODE</code> to select between the two sweep modes.
EAUTO	-	"Ext Start/Stop" mode.

<code>:TRIGger<hw>:FSWeep:SOURce</code>	1349
<code>:TRIGger<hw>:LFFSweep:SOURce</code>	1349
<code>:TRIGger<hw>:PSWeep:SOURce</code>	1349
<code>:TRIGger<hw>[:SWEep]:SOURce</code>	1349
<code>:TRIGger<hw>:FPSWeep:SOURce</code>	1351
<code>:TRIGger<hw>:FSWeep[:IMMediate]</code>	1351
<code>:TRIGger<hw>:LFFSweep:IMMediate</code>	1351
<code>:TRIGger<hw>:PSWeep[:IMMediate]</code>	1351
<code>:TRIGger<hw>[:SWEep][:IMMediate]</code>	1351
<code>:TRIGger<hw>:LFFSweep</code>	1352

`:TRIGger<hw>:FSWeep:SOURce <Source>`
`:TRIGger<hw>:LFFSweep:SOURce <Source>`
`:TRIGger<hw>:PSWeep:SOURce <Source>`
`:TRIGger<hw>[:SWEep]:SOURce <Source>`

Selects the trigger source for the corresponding sweeps:

- `FSWeep` - RF frequency

- LFFSweep - LF frequency
- PSweep - RF level
- SWEEP - all sweeps

The source names of the parameters correspond to the values provided in manual control of the instrument. They differ from the SCPI-compliant names, but the instrument accepts both variants.

Use the SCPI name, if compatibility is an important issue. Find the corresponding SCPI-compliant commands in [Cross-reference between the manual and remote control](#).

Setting parameters:

<Source>

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO [IMMEDIATE]

Executes a sweep automatically.

In this free-running mode, the trigger condition is met continuously. I.e. when a sweep is completed, the next one starts immediately.

SINGLE [BUS]

Executes one complete sweep cycle.

The following commands initiate a trigger event:

*TRG on page 916

`[:SOURCE<hw>] :SWEep:POWer:EXECute`

`[:SOURCE<hw>] :SWEep [:FREQuency] :EXECute`

`:TRIGger<hw> [:SWEep [:IMMEDIATE], :TRIGger<hw> :`

`PSweep [:IMMEDIATE] and :TRIGger<hw>:FSweep [:`

`IMMEDIATE]`.

Set the sweep mode with the commands:

`[:SOURCE<hw>] :SWEep:POWer:MODEAUTO | STEP`

`[:SOURCE<hw>] :SWEep [:FREQuency] :MODEAUTO | STEP`

`[:SOURCE<hw>] :LFOutput:SWEep [:FREQuency] :MODE
AUTO | STEP`

In step mode (STEP), the instrument executes only one step.

EXTERNAL

An external signal triggers the sweep.

EAUTO

An external signal triggers the sweep. When one sweep is finished, the next sweep starts.

A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

*RST: AUTO

Example:

See [Example"Setup an LF sweep"](#) on page 1235

Usage:

Setting only

:TRIGger<hw>:FPSweep:SOURce <FpTrigSource>

Selects the trigger source for the combined RF frequency / level sweep.

The parameter names correspond to the manual control. If needed, see table [Table 14-11](#) for selecting the trigger source with SCPI compliant parameter names.

Parameters:

<FpTrigSource>

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO|IMMEDIATE

Executes the combined RF sweep automatically. In this free-running mode, the trigger condition is met continuously. I.e. as soon as a sweep is completed, the next one starts immediately.

SINGLE|BUS

Executes one complete sweep cycle triggered by the GPIB commands `[:SOURce<hw>] :SWEep:COMBined:EXECute` or `*TRG`. The mode has to be set to `[:SOURce<hw>] :SWEep:COMBined:MODE > AUTO`.

EXTERNAL

An external signal triggers the sweep.

EAUTO

An external signal triggers the sweep. As soon as one sweep is finished, the next sweep starts. A second trigger event stops the sweep at the current frequency and level value pairs, a third trigger event starts the trigger at the start values, and so on.

*RST: No enum range assigned!

Manual operation: See ["Mode"](#) on page 533

:TRIGger<hw>:FSweep[:IMMEDIATE]

:TRIGger<hw>:LFFSweep:IMMEDIATE

:TRIGger<hw>:PSweep[:IMMEDIATE]

:TRIGger<hw>[:SWEep]:IMMEDIATE

Performs a single sweep and immediately starts the activated, corresponding sweep:

- FSWep - RF frequency
- PSweep - RF level
- LFFSweep - LF frequency
- SWEep - all sweeps

Effective in the following configuration:

- TRIG:FSW|LFFS|PSW|[:SWE]:SOUR **SING**
- SOUR:SWE:FREQ|POW:MODE **AUTO** or SOUR:LFO:SWE:[FREQ:]MODE **AUTO**

Alternatively, you can use the IMMEDIATE command instead of the respective SWEep : [FREQ:] | POW:EXECute command.

Example:

TRIG

Starts all active sweeps.

Usage: Event

Manual operation: See "Execute Single Sweep" on page 535

:TRIGger<hw>:LFFSweep

Executes an LF frequency sweep in the following configuration:

- TRIG:LFFS:SOUR SING
- LFO:SWE:MODE AUTO

Example:

```
LFO:SWE:MODE AUTO
TRIG:LFFS:SOUR SING
TRIG:LFFSweep
```

Usage: Event

14.24 UNIT subsystem

The UNIT subsystem is used to set default units for parameters if no unit is indicated in a command. These settings are valid for the entire instrument.

Example: Setting default units for remote control

```
UNIT:POW V
UNIT:ANGL DEG
UNIT:VEL KMH
```

Sets V (volts) as unit of all power parameters, DEG (degrees) for the phase modulation angle and KMH for the speed.

:UNIT:ANGLE.....	1352
:UNIT:POWer.....	1352
:UNIT:VELocity.....	1353

:UNIT:ANGLE <Angle>

Sets the default unit for phase modulation angle. The command affects no other parameters, such as RF phase, or the manual control or display.

Parameters:

<Angle> DEGree | DEGRee | RADian
 *RST: RADian

:UNIT:POWer <Power>

Sets the default unit for all power parameters. This setting affects the GUI, as well as all remote control commands that determine power values.

Parameters:

<Power> V | DBUV | DBM
 *RST: DBM

:UNIT:VELOCITY <Velocity>

Sets the default unit for the velocity of the wave.

Parameters:

<Velocity> MPS | KMH | MPH | NMPH
 *RST: MPS

15 Troubleshooting and notifications

Handling R&S SMW start-up issues

If the product does not start, a blown fuse in the power supply can be the cause. Contact the Rohde & Schwarz customer service to confirm the fault symptoms. If the power supply has a blown fuse, you must return the product to the Rohde & Schwarz customer service to have the power supply replaced. Follow the instructions from the Rohde & Schwarz customer service.

If you need to transport or ship the instrument, see [Chapter 16, "Transporting"](#), on page 1369.

Understanding R&S SMW notifications

The R&S SMW distinguishes between various notifications caused by events or functions. It displays a notification in the "Info" line on the screen temporarily, and saves all notifications in a history list. In addition, an event initiates an entry in the event/error queue of the status reporting system.

See:

- [Chapter 13.4, "Status reporting system"](#), on page 829
- [Chapter 15.4, "Querying notifications"](#), on page 1357

15.1 Notifications

Notifications inform about operation states of the instrument, and point out deviations, deficiencies or imperfection of functions that initiate an event in the instrument. The instrument distinguishes the notifications according to the significance of the events by different icons.



Some events require that you eliminate the deviation to make sure that the instrument operates correctly.

To access the notifications and history list dialog, see [Chapter 15.4, "Querying notifications"](#), on page 1357. In remote control mode, you can query the notifications using the command `:SYSTem:ERRor:ALL?` on page 1312.

15.1.1 Volatile notifications

Volatile notifications report automatic settings in the instrument (e.g. switching off incompatible types of modulation) or on entries that are not accepted by the instrument (e.g. range violations).

Volatile notifications do not normally demand user actions and disappear automatically after a short period of time. They are saved in the history list, however.

Remote command:

```
:SYSTem:ERRor:ALL? or  
:SYSTem:ERRor:CODE[:NEXT]?
```

15.1.2 Permanent notifications

Permanent notifications are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signaled by a permanent notification must be eliminated before correct instrument operation can be continued.

The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

Remote command:

```
:SYSTem:ERRor:STATic?
```

15.2 SCPI notifications

The SCPI notifications are similar for all SCPI instruments. Detailed information and an overview of all notifications as defined in SCPI standard can be found in the corresponding documentation.

SCPI notifications have negative codes (numbers). The error text being entered into the error/event queue or being displayed is printed in bold face on the left together with the error code. Below the error text, there is an explanation to the respective error.

15.3 Device-specific notifications

The following table contains all error messages specific for the instrument, marked by positive error codes in numerical order and an explanation of the error situation.

The device-specific error messages set bit 3 in the ESR register.



The index provides a list of the error messages sorted according to their error codes.

Error code	Error	Description	Remedy
50	Extern reference out of range or disconnected	External reference is selected but no external signal is applied or the signal is out of range.	<ul style="list-style-type: none"> Check the selected reference signal source (internal or external) in the "Setup > Reference Oscillator" dialog. Change setting to 'internal' if no appropriate external source is available.
140	This modulation forces other modulations off	<p>A modulation has been switched on which cannot be used at the same time as an already active modulation. The previous modulation has been switched off.</p> <p>Example: Enabling modulation GSM/EDGE switches off any active digital modulation.</p>	
180	Adjustment failed	Adjustment could not be executed.	Generate the adjustment data and load it into the device
182	Adjustment data missing	Adjustment data is missing.	Generate the adjustment data and load it into the device
183	Adjustment data invalid	Adjustment data is invalid and must be restored.	Generate the adjustment data and load it into the device
200	Cannot access hardware	The data transmission to a module was unsuccessful.	The module is not installed, not properly installed or missing.
201	Hardware revision out of date	A later version of certain parts of the instrument is necessary to execute the function selected.	The driver does not support the installed version of a module.
202	Cannot access the EEPROM	An error occurs when writing or reading a EEPROM.	The EEPROM is possibly defect. Replace it.
203	Invalid EEPROM data	Reading a EEPROM is possible, however the data are inconsistent.	
204	Driver initialization failed	Initialization of a driver fails when booting the instrument firmware.	The driver is not compatible with the hardware or software configuration of the instrument.
241	No current list	There is no list selected. To execute the required operation, a list has to be selected in the related dialog. If no list is available, a new list must be created.	
242	Unknown list type specified	<p>The list type selected is not valid for the required operation.</p> <p>For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when selecting a list.</p>	Check the selected list type.
261	Waveform protected	The selected waveform file cannot be transferred to a controller. The waveform is produced with simulation software R&S WinIQSIM2 and is protected.	
460	Cannot open the file	The selected file cannot be opened.	Check the path and file name.
461	Cannot write file	The file cannot be written.	Check if the file is read-only.

Error code	Error	Description	Remedy
462	Cannot read file	The file cannot be read.	Check if the file contents are compatible with the file type.
463	Filename missing	The required operation cannot be executed because the file name is not specified.	Enter file name when creating list.
464	Invalid filename extension	The file extension is not valid for the required operation.	Check the file extension. For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when storing a list.
465	File contains invalid data	The selected file contains data that is not valid for the file type. The file extension determines the data that is valid for this file type. If the file extension is changed, the lists are no longer recognized and the data is therefore invalid. Example: the extension of a waveform file (= *.wv) was changed to *.txt	Check the file extension.

15.4 Querying notifications


The R&S SMW monitors the functions performed and automatically detects irregularities. The instrument displays corresponding notifications in the "Info" line and collects all notifications in a history with a detailed description.

Find details to the system notifications in [Chapter 15, "Troubleshooting and notifications"](#), on page 1354.

To display information on static notifications and history

- Perform one of the following:
 - On the front panel, press the [INFO] key.
 - In the taskbar, select the "System Config > Info/Notifications".
- For some notifications, the information line appears briefly on the block diagram.


Selecting the info line also opens the dialog.

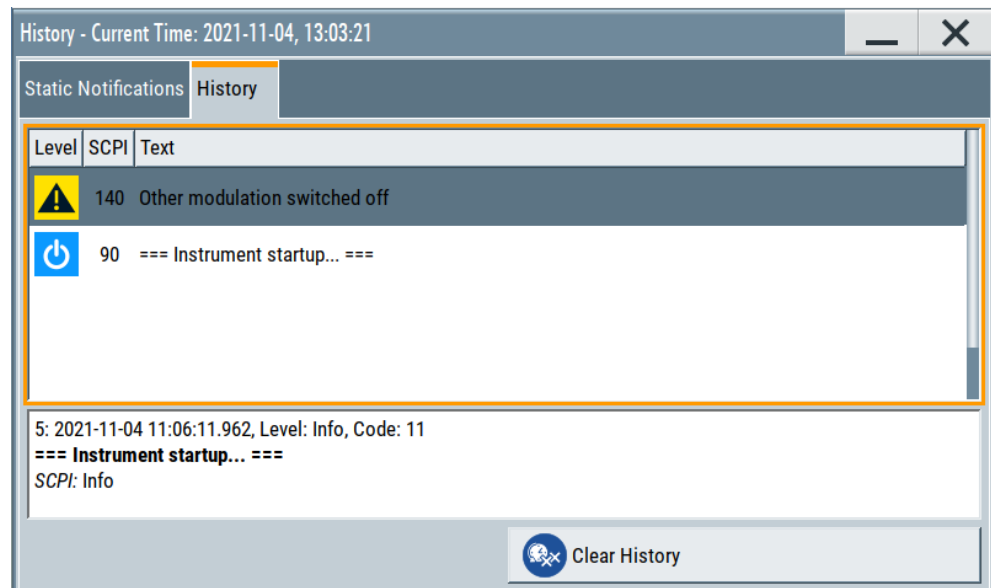

- The "Static Notifications" dialog lists the recently monitored notifications chronologically and displays additional information on the highlighted message.
- The "History" dialog lists the accumulated messages with a short description. Volatile notifications are reported once. If identical errors occur subsequently, they are not reported repeatedly.
In the "Info" line, identical errors are displayed repeatedly only if the original error has already disappeared from the display. If queried by SCPI command, identical errors are only reported if the original error has already been retrieved from (and hence not any more present in) the error queue.



Indication and handling of permanent notifications

If any critical error occurs, the R&S SMW automatically shows the  icon in the task-bar. Select the icon to obtain information on the error and the number of occurrences.

The icon is assigned to permanent notifications. The notification and icon are displayed until the error is eliminated.

Static Notifications/History

Toggles between "Static Notifications" and the "History" tab in the info dialog.

Remote command:

`:SYSTem:ERRor[:NEXT]?` on page 1314

Each time a `:SYST:ERR:NEXT?` query is sent, the eldest entry in the error queue is returned and at the same time cleared in the list.

`:SYSTem:ERRor:STATic?` on page 1315

Queries the list of all errors.

Clear History

Clears all messages in the "History" tab.

Remote command:

[:SYSTem:ERRor:ALL?](#) on page 1312

Each time a `SYST:ERR:ALL?` query is sent, the error queue is returned and at the same time cleared.

[:SYSTem:ERRor:HISTory:CLEar](#) on page 1315

Clears the messages in the "History" view.

15.5 Resolving network connection failures

Several issues may cause failures in the network connection to the instrument. This section lists the most likely reasons and the recommended solutions.

Common reasons for network connection failures

- Network connecting cables and cable connectors of poor quality
- Incompatibility between the network interface of the R&S SMW and certain switches or routers available on the market
- An invalid IP address assigned to the instrument

Possible solutions to network connection failures

1. **NOTICE!** Risk of network failure. Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Try out the following to resolve network connection failures:

- Check the network infrastructure. Exchange connecting cables, if obvious damage is visible.
See also ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 32.
- Observe the link status LED on the R&S SMW or the connected network device. The link status LED is located next to the LAN connector.
If a link failure is detected, connect the instrument to a different device port or to a different network device.
- Check whether the LAN interface and the required LAN services are enabled.
See [Chapter 12.7.3, "Configuring LAN services"](#), on page 804.
- If the IP address is set manually (no DHCP) or obtained with the Zeroconf (Avahi) protocol:
 - Check whether the IP address of the instrument is within the network's address range.
 - Check whether the IP address is valid.

See also ["IP Address"](#) on page 842.

15.6 Resolving errors during internal adjustments

Internal adjustments can fail for various reasons, e.g. if the adjustment data is invalid or missing, or if any error causes process to abort.

To resolve a failed adjustment process, you have the following options:

- Abort on error (default setting), see ["To resolve aborted internal adjustments"](#) on page 1360
- Continue on error, see ["To continue internal adjustments on error"](#) on page 1360
- Record the adjustment process in a log file and request technical support, see ["To record failed adjustments and request technical support"](#) on page 1360

To resolve aborted internal adjustments

If an error occurs, the R&S SMW displays a notification in the "Information" field and saves the notification in the history list.

1. Select "System Config > Info / Notifications".
2. Look up the error code of the notification in the overview of device-specific notifications, see [Chapter 15.3, "Device-specific notifications"](#), on page 1355.

The overview provides a brief explanation of all notifications and information on how to fix an error.

3. To resolve an adjustment failure, generate adjustment data and load it into the instrument.
4. Restart internal adjustments as described in ["Running internal adjustments"](#) on page 1383

If the error persists:

Contact the Rohde & Schwarz customer support, see [Chapter 15.9, "Collecting information for technical support"](#), on page 1366.

To continue internal adjustments on error

If the failed internal adjustments has no significant effect on your application, you can skip it and continue the calibration despite the error message. This function is password-protected.

1. Select "System Config > Setup > Security > Protection".
2. Unlock protection level 1, see ["Protection Level/Password"](#) on page 799.
3. Select "System Config > Setup > Internal Adjustment > Configuration > Continue Adjustment on Error > On".
4. Proceed as described in ["Running internal adjustments"](#) on page 1383.

To record failed adjustments and request technical support

Logging the internal adjustment process is password-protected.

1. Select "System Config > Setup > Security > Protection".

2. Unlock protection level 1, see "[Protection Level/Password](#)" on page 799.
3. To enable recording, select "System Config > Setup > Internal Adjustment > Adjustment Configuration" > [Log Debug Info](#) > "On".
4. Send the report to the Rohde & Schwarz customer support for an initial check.
See [Chapter 15.9, "Collecting information for technical support"](#), on page 1366.

15.7 Measuring USB cable quality

To check the quality of the USB cable, see the service manual of the R&S SMW.

15.8 Requesting instrument configuration and specifications

The R&S SMW is equipped with various hardware and software components. To get an overview of what your instrument is equipped with, you can request the assemblies, hardware and software options, and the firmware version. The components are structured according to the hardware configuration, software options, including the license management, and externally used Rohde & Schwarz equipment, like R&S NRP power sensors.



Software options purchased at a later stage can be activated with a keycode. The activation code is supplied with the software option. How to install options is described in chapter 4 of the R&S SMW service manual.

The installation of hardware options purchased at a later stage is also described in chapter 4 of the service manual. Most of the hardware options have to be installed at an authorized Rohde & Schwarz service center.

15.8.1 Hardware configuration settings

Access:

- ▶ Select "System Config > Setup > Instrument Assembly > Hardware Config".

Hardware Config					
General	RF Assembly	Baseband Assembly	External Instruments	Counter	
Assembly	Part Number	Serial Number	Revision	Slot	
SMW200A	1412.0000k02	0			
IEC_BOARD	1412.3616.02	100000	03.00		
BNC_BOARD	1412.5048.02	100000	03.00		
BBMB	1412.3200.02	100000	06.01		
FPNL	1412.3000.02	100000	01.00		
IPC	1206.0169.02	100000	01.00		
BIOS VERSION					

The "Hardware Config" dialog lists all installed assemblies and externally connected instruments with information on their part and serial numbers, and revision states. The BIOS version is also listed; firmware updates do not update the BIOS version.

The dialog is divided in tabs, according to the hardware components of the signal domains. The "Counter" tab provides information on the operation time and number of times the instrument was powered on.

The remote commands required to query the hardware configuration are described in [Chapter 14.10, "DIAGnostic subsystem"](#), on page 937.

Assembly

The tables in the tabs show characteristics of the installed assemblies.

Connected external instruments are also shown.

"Path" Shows the path to that the assembly belongs.

"Assembly" Assembly designation.

"Part Number" Part number of the assembly.

"Serial Number"

Serial number of the assembly.

"Revision" Revision state of the assembly.

"Slot" Indicates whether the assembly is connected to the serial bus or PCI bus.

Remote command:

`:DIAGnostic<hw>:BGInfo?` on page 938

Counter

Displays information on the operation times of the R&S SMW.

Operation Time / h ← Counter

Displays the operation time in hours so far.

Remote command:

`:DIAGnostic:INFO:OTIME?` on page 938

Power On Count ← Counter

Displays the number the instrument has been turned on.

Remote command:

:DIAGnostic:INFO:POCount? on page 939

Last Factory Calibration ← Counter

Displays the date of the last factory calibration.

Remote command:

:CALibration:DATA:FACTory:DATE? on page 934

15.8.2 Versions/options settings

Access:

- Select "System Config > Setup > Instrument Assembly > Versions / Options".

Firmware	Hardware Options	Software Options	Versions	Conan Packages
Package	Version			
FW	5.00.113			
Service Pack	not installed			
BIOS Version	VirtualBox			
Downgrade Info				
Package	Version			
Factory Version	5.00.113			
Min. Version	4.30.005.26			
The Min. Version is the first version supporting all hardware modules installed in this instrument. Please read release notes carefully before downgrading, some software options and features may get lost.				
Show Open Source Acknowledgments		LucasFonts RSCorpid EULA		

The "Versions/Options" dialog shows the version of the installed instrument firmware, the hardware and software options, the data sheet and the software components of the firmware. The BIOS version is also listed; firmware updates do not update the BIOS version.

The remote commands required to query the hardware configuration are described in [Chapter 14.10, "DIAGnostic subsystem"](#), on page 937.

Firmware

Shows the firmware version and the version of the software platform.

Note: Your instrument is delivered with the latest firmware version available.

You can download firmware updates and the "Release Notes" that describe the modifications and the firmware update procedure.

See www.rohde-schwarz.com/firmware/smw200a

Remote command:

n.a.

Downgrade Info

Shows downgrade information, like factory firmware version and minimum firmware version to that the instrument can be downgraded.

Remote command:

n.a.

Show Open Source Acknowledgments

Accesses the list of the used open-source software packages and the corresponding verbatim license texts.

LucasFonts RSCorpid EULA

Accesses copyright information on LucasFonts font type RSCorpid EULA.

Hardware Options/Software Options

The tables in the "Hardware" and "Software" tabs list the installed hardware and software options.

"Option" Short name of option

"Designation" Name of option

"Licenses" (optional)

Number of licenses.

The licenses for the software options are floating licenses, i.e. for two-path instruments, just one license is required to use the option for either of the two paths. Using the option in both paths simultaneously, you must purchase two licenses.

"Expiration Date"

For regular options, "Permanent" is indicated in this column.

For trial or floating license options, the expiration date indicates, how long the option is enabled on the instrument. When the time has elapsed, the R&S SMW blocks further use of the option.

Remote command:

*[OPT?](#) on page 914

*[IDN?](#) on page 913

Versions

The "Versions" tab shows the versions of the technical specification of the R&S SMW and of the software components that comprise the firmware.

"Package" Name of the component.

"Version" Current issue of the component.

E.g. the data sheet covers the technical data of the hardware components of the factory settings.

See also [Chapter 13.6.2.4, "Datasheet"](#), on page 868.

Remote command:

:[SYSTEM:SPECification:VERSION:FACTory?](#) on page 1332


15.8.3 How to query instrument configuration

To get information on the components and installed options of the R&S SMW, proceed as described in the following examples.

Checking the installed hardware options

To find out the installed options:

1. Select "System Config > Setup > Instrument Assembly > Versions/Options".
2. Select "Hardware Options".

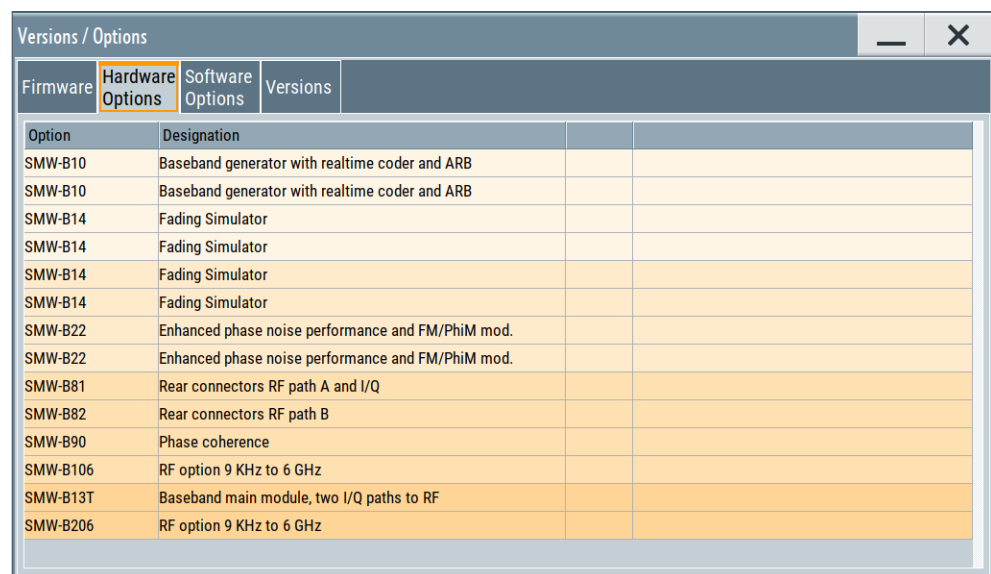

Versions / Options			
Firmware	Hardware Options	Software Options	Versions
Option	Designation		
SMW-B10	Baseband generator with realtime coder and ARB		
SMW-B10	Baseband generator with realtime coder and ARB		
SMW-B14	Fading Simulator		
SMW-B14	Fading Simulator		
SMW-B14	Fading Simulator		
SMW-B14	Fading Simulator		
SMW-B22	Enhanced phase noise performance and FM/PhiM mod.		
SMW-B22	Enhanced phase noise performance and FM/PhiM mod.		
SMW-B81	Rear connectors RF path A and I/Q		
SMW-B82	Rear connectors RF path B		
SMW-B90	Phase coherence		
SMW-B106	RF option 9 KHz to 6 GHz		
SMW-B13T	Baseband main module, two I/Q paths to RF		
SMW-B206	RF option 9 KHz to 6 GHz		

The dialog lists all hardware options that are installed on the R&S SMW.


Proceed the same way to get information for instance on the firmware, or the installed software options in the corresponding tab.

Checking the RF hardware assembly

To find out the installed RF hardware:

1. Select "System Config > Setup > Instrument Assembly > Hardware Config".

2. Select "RF Assembly".

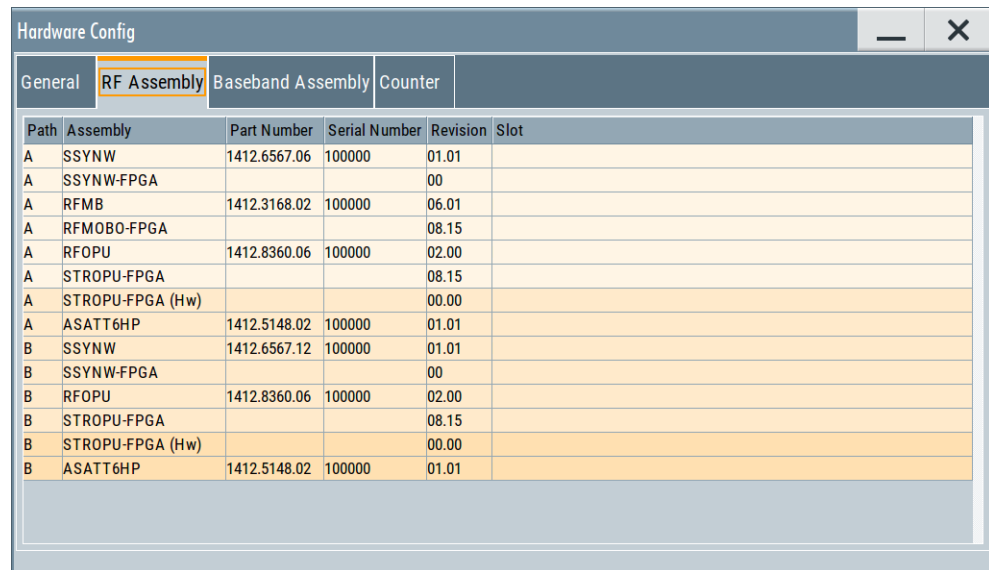

Hardware Config					
General RF Assembly Baseband Assembly Counter					
Path	Assembly	Part Number	Serial Number	Revision	Slot
A	SSYNW	1412.6567.06	100000	01.01	
A	SSYNW-FPGA			00	
A	RFMB	1412.3168.02	100000	06.01	
A	RFMOBO-FPGA			08.15	
A	RFOPU	1412.8360.06	100000	02.00	
A	STROPU-FPGA			08.15	
A	STROPU-FPGA (Hw)			00.00	
A	ASATT6HP	1412.5148.02	100000	01.01	
B	SSYNW	1412.6567.12	100000	01.01	
B	SSYNW-FPGA			00	
B	RFOPU	1412.8360.06	100000	02.00	
B	STROPU-FPGA			08.15	
B	STROPU-FPGA (Hw)			00.00	
B	ASATT6HP	1412.5148.02	100000	01.01	

The dialog lists the RF hardware components that are installed on the R&S SMW.

Proceed the same way to get information for instance on general or baseband hardware modules, or on the operating times of the R&S SMW in the corresponding tab.

15.8.4 How to request the data sheet

You can access data sheet-related information via the LXI web browser, see [Chapter 13.6.2.4, "Datasheet"](#), on page 868.

15.9 Collecting information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center at www.rohde-schwarz.com/support. Our support center staff is optimally trained to assist you in solving problems.

The support center finds solutions more quickly and efficiently if you provide them with information on the instrument and an error description.

- The following dialog boxes in the "Setup > Instrument Assembly" menu provide useful information:
 - **Hardware Configuration:** hardware assemblies
 - **Software and Options:** the status of all software and hardware options installed on your instrument
- **System Messages:** displayed in the "Info" line and provide information on any errors that have occurred
- **Support file:** a special file (*.tar.gz file) with important support information that can be created automatically.


The support *.tar.gz file has a user-definable name and contains the following files and information:

- SgErrors.txt: chronological record of errors
- SystemRestaurationSMW.savrc1.txt: instrument settings at the last correct shutdown of the instrument
- UndoHistSuppInfo.xml: list of the last user interactions
- DeviceFootprint_<SerialNumber>_<Date>_<Time>.xml: service-related information on the instrument's configuration.
- crashlog.txt, coredump: Postmortem debug info
- Several files with information on the last performed adjustment and self-test.

See also the description of error messages [Chapter 15.1, "Notifications"](#), on page 1354.

To collect error information in a support file

1. Connect a USB device to the R&S SMW.
2. Select "System Config > Setup > Maintenance > Create R&S Support Information".
3. In the "Create R&S Support Information" dialog, navigate to the /usb directory. Enter the support filename, for example RSSupport_DeviceInfo.

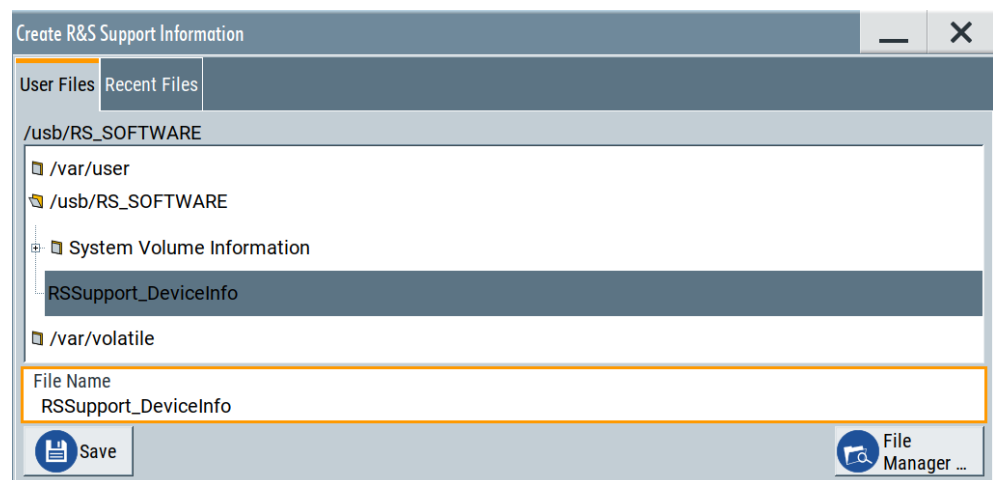

The error information and further required data are collected automatically.

The support file RSSupport_DeviceInfo.tar.gz is created and stored in the /usb directory.

Collect the error information and attach it to an email in which you describe the problem. Send the email to the customer support address as listed on the Internet (www.rohde-schwarz.com/support).

To remove sensitive data

- For information on how to handle or remove the sensitive data from your instrument, refer to the description "R&S SMW Instrument Security Procedures".

To pack and transport the instrument

- If you need to transport or ship the instrument, see [Chapter 16, "Transporting"](#), on page 1369.

15.10 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 15-1: QR code to the Rohde & Schwarz support page

16 Transporting

Lifting and carrying

See:

- ["Lifting and carrying the product"](#) on page 20
- [Chapter 3.1.1, "Lifting and carrying"](#), on page 29

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the R&S SMW in a vehicle or using transporting equipment, make sure that the R&S SMW is properly secured. Only use items intended for securing objects.

Transport altitude

The maximum transport altitude without pressure compensation is specified in the data sheet.

17 Maintenance, storage and disposal

The product does not require regular maintenance. It only requires occasional cleaning. It is however advisable to check the nominal data from time to time.

17.1 Cleaning

How to clean the product is described in "[Cleaning the product](#)" on page 21.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

17.2 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the data sheet.

17.3 Performing maintenance tasks

The R&S SMW is accurate due to integrated adjustment procedures and the following additional capabilities that assure correct functioning:

- Internal adjustments
Internal adjustments are integrated self-calibration routines, which you can execute directly on the instrument.
How to: See [Chapter 17.3.4.3, "How to use the internal adjustments"](#), on page 1383.
Self-calibration routines that require additional equipment are performed at an authorized Rohde & Schwarz service center. For description, see the R&S SMW service manual.
- Self-test
A self-test is provided for service purposes.
We recommend that you perform a selftest, if the instrument does not respond as expected.
How to: See [Chapter 17.3.5.4, "How to set up the R&S SMW for BNC connections tests"](#), on page 1388.
- Test points
If necessary for service purposes, internal test points can be queried. For description, see the R&S SMW service manual.
- [Date and time](#)..... 1371
- [Check front panel](#)..... 1373
- [Check display screen](#)..... 1378
- [Internal adjustments](#)..... 1379

- [Selftest](#)..... 1384
- [FPGA/uC update settings](#)..... 1388
- [Exchanging the RF adapter port](#)..... 1389

17.3.1 Date and time

The R&S SMW uses an internal real-time clock to determine the date and time. It adjusts the time and date to the timezone of your location automatically, by providing a selection list of continents and cities.

The instrument records the time whenever you create or modify files on your instrument or you use timed licenses. By default, the instrument is set to the UTC timezone, but you can select the timezone according to your location.

Moreover, the instrument supports [NTP](#) protocol for synchronizing all connected instruments and computer systems to minimize time delays in the network.

17.3.1.1 Date and time settings

Access:

- Select "System Config > Setup > Maintenance > Date / Time".

The "Date / Time" dialog contains the time and data settings of the operating system.

This function is password-protected. Unlock the protection level 1 to access it.

You can also set the time zone for your location, and select a time protocol controlled by a time server for synchronization.

The required remote commands are described in [Chapter 14.20, "SYSTem subsystem"](#), on page 1307.

Settings:

Date.....	1372
Time.....	1372
Timezone.....	1372
Time Protocol.....	1372
NTP Address.....	1372

Date

Displays the date set in the operating system in the format [yyyy.mm.dd].

Remote command:

:SYSTem:DATE on page 1333

Time

Displays the time set in the operating system in the format [hh.mm.ss].

The time setting corresponds to the selected [Timezone](#).

Remote command:

:SYSTem:TIME on page 1334

Timezone

Selects the timezone in the date and time settings of the operating system.

You can select the timezone according to the major cities on the respective continents.

Tip: By typing the first letter, you can quickly navigate through the lists to find the desired destination.

Remote command:

:SYSTem:TIME:ZONE on page 1335

:SYSTem:TIME:ZONE:CATalog? on page 1335

Time Protocol

Enables the instrument to refer to a network time protocol.

A network time protocol synchronizes the system clocks of all participating devices in a computer network (Ethernet). A time server in the network provides the time base for the connected devices that refer to this time to synchronize events.

You can select a high-precision time protocol to achieve high clock accuracy and thus reduce the impact of varying network delays.

"None" Refers to the selected timezone, see [Timezone](#).

"NTP" Uses the network time protocol (NTP).

Remote command:

:SYSTem:TIME:PROTOcol on page 1335

NTP Address

Sets the IP address or host name of the NTP server.

When the server is detected and verified, the instrument enables the connection automatically.

Remote command:

:SYSTem:NTP:HOSTname on page 1334

:SYSTem:NTP:STATe on page 1334

17.3.1.2 How to set date and time

To select the timezone

1. Press the [SETUP] key.
2. Select "Maintenance > Date /Time > Timezone".
3. Select continent and city of your location.
Tip: By typing the first letter, you can quickly navigate through the lists to find the desired destination.
4. Close the dialogs.

The instrument adjusts the time according to the selected location.

To set the date and time

1. **NOTICE!**
This function is password-protected. Unlock the protection level 1 to access it.
Since the date and time settings affect time-based options, changing the date and time can therefore lead to loss of access to the function of the options. We recommend that you only change the system time in urgent cases.
If the time is not displayed correctly, the internal CMOS battery can be discharged. To change the battery, contact your Rohde & Schwarz support center at www.rohde-schwarz.com/support.
Press the [SETUP] key.
2. Select "Security > Protection".
3. Enable the "Protection Level 1".
The default password is 123456.
4. Select "Setup > Maintenance > Date / Time".
5. Adjust the settings.
6. Close the dialogs.

The instrument sets the new date and time.

17.3.2 Check front panel


Within this dialog, you can verify the functionality of the control keys.

How To: See [Chapter 17.3.2.2, "How to test the front panel"](#), on page 1374

17.3.2.1 Check front panel settings

Access:

- Select "System Config > Setup > Maintenance > Check Front Panel".

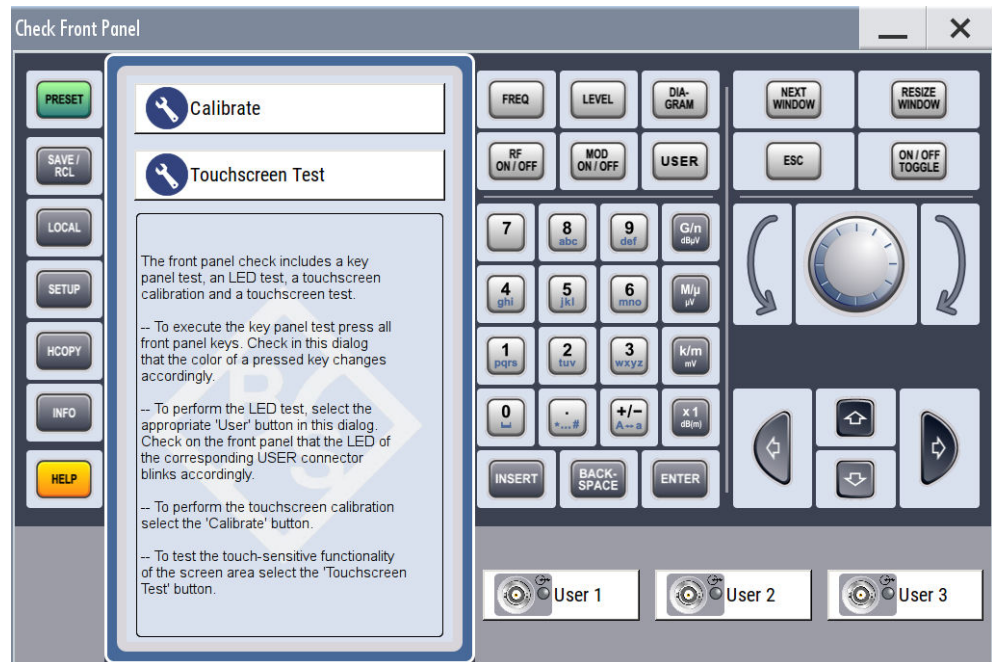

Reflecting the front panel, the "Check Front Panel" dialog contains all functions to test the operating elements of the instrument.

In addition, you can check the touch-sensitive functionality by dragging one or more lines across the screen with your finger.

Calibrate

Executes the touchscreen calibration.

See ["Calibrating the touchscreen"](#) on page 1375.

Touchscreen Test

Enables you to perform a touchscreen test. This test checks whether the touchscreen area has gaps in the response.

See ["Testing the touchscreen"](#) on page 1377

17.3.2.2 How to test the front panel

See:

- ["Calibrating the touchscreen"](#) on page 1375
- ["Testing the key panel"](#) on page 1375
- ["Testing the LEDs"](#) on page 1376
- ["Testing the touchscreen"](#) on page 1377


- ["Terminating the test"](#) on page 1378
- ["Debugging"](#) on page 1378

Calibrating the touchscreen

The screen responds to the touch of your finger, that means you can select or activate an item by tapping it. Due to the design of the touchscreen, the capture area is firmly set to a certain size and you do not need to define a range. If the instrument does not respond correctly to the touch, we recommend that you calibrate the touchscreen.

1. Press the [SETUP] key.
2. Select the "Maintenance > Check Front Panel"

The "Check Front Panel" opens.

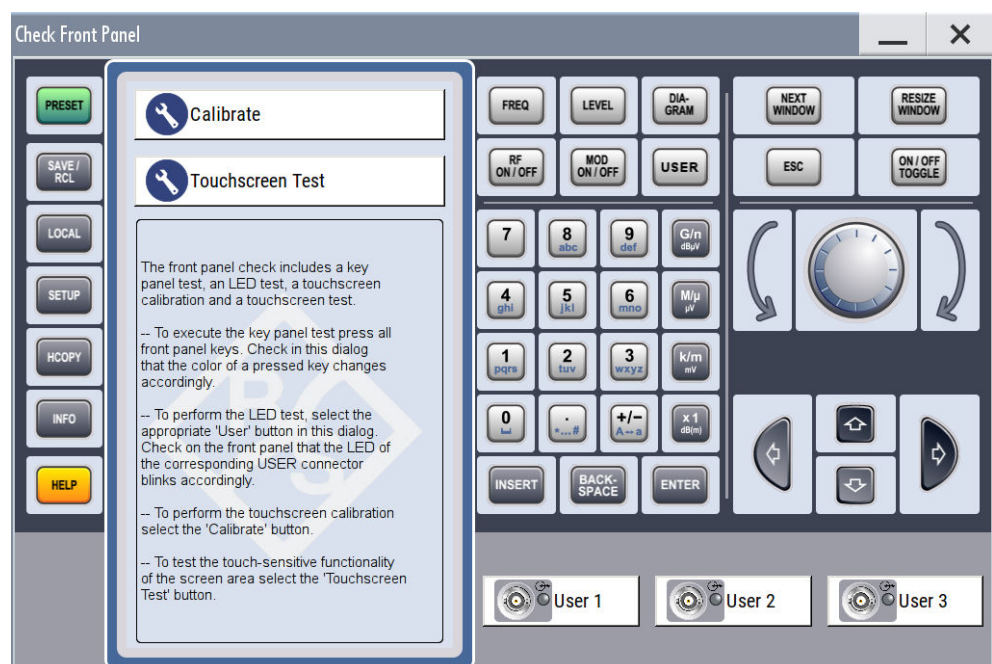

3. Select "Calibrate".
4. Tap the calibration points.

The instrument completes the calibration process automatically and returns to the "Check Front Panel" dialog.

Testing the key panel


To perform the key panel test, you operate the keys at the front panel, and check the response of the instrument in the "Check Front Panel" dialog. To perform this test properly, check each key of the front panel. The test is only completed, when you have verified all keys.

During the test, the actual functions of the keys are disabled.

1. Press the [SETUP] key.

2. Select "Maintenance > Check Front Panel"
The "Check Front Panel" dialog opens.
3. Press a key on the front panel.
Check if the corresponding key in the "Check Front Panel" dialog turns green.
4. Press the same key a second time.
Check that the key in the dialog turns red.
Note: Pressing the same key again has no further effect, except for the [ESC] key. Pressing this key a third time, terminates the test procedure.
5. Continue with the next key on the front panel and repeat [step 3](#) to [step 5](#) until all keys are tested.

The test is completed, when each key is verified successfully, confirmed by a "Test passed" message.

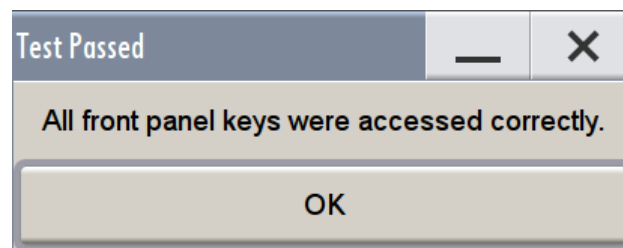

Testing the LEDs

To perform the LED test, you operate the corresponding "USER" buttons in the "Check Front Panel" dialog, and check the response of the connector LEDs on the front panel. To perform this test properly, check each USER connector. The test is only completed, when you have verified [SETUP] the functionality of all connector LEDs.

Proceed as follows:

1. Press the key.
2. Select "Maintenance > Check Front Panel"
The "Check Front Panel" dialog opens.
3. Select a "USER" button in the dialog.
The associated LED in the dialog changes its color.
Check that the LED of the corresponding USER connector on the front blinks in the same color.
4. Repeat [step 3](#) until all possible colors were displayed once. With the last step, the associated LED in the dialog changes to gray and the "USER" button turns green.
Check that the LED of the corresponding USER connector on the front panel stops blinking.
Note: Selecting the same user connector again has no further effect.
5. Repeat [step 3](#) and [step 3](#) for the remaining "USER" buttons, until all connector LEDs are tested.

The test is completed, when each LED functionality is verified successfully.




When you have completed the test and close the dialog, the LEDs switch back to the state they had before the test, according to the current settings of the USER connector.

Expected responses:

- Selecting the "USER" button three times (the LED at the front panel is blinking green, yellow, red)
- Selecting the "USER" key once more, the LED turns off.
- After testing all LEDs, a "Test passed" message confirms the success.

Testing the touchscreen


1. Press the [SETUP] key.
2. Select "Maintenance > Check Front Panel"
The "Check Front Panel" dialog opens.
3. Select "Touchscreen Test" to access the "Finger Paint" test window.

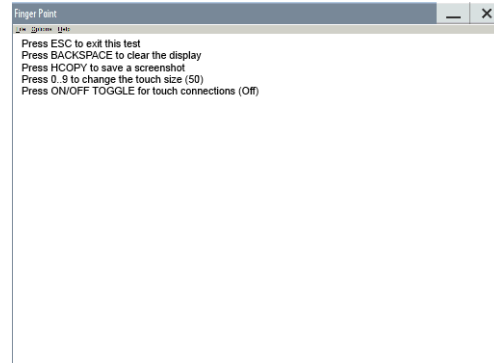


4. Drag with your finger one or more lines, for example diagonally across the screen.
The test traces the movements of your finger on the screen.

The following results are expected:

- If the lines are uninterrupted, the touchscreen works properly.

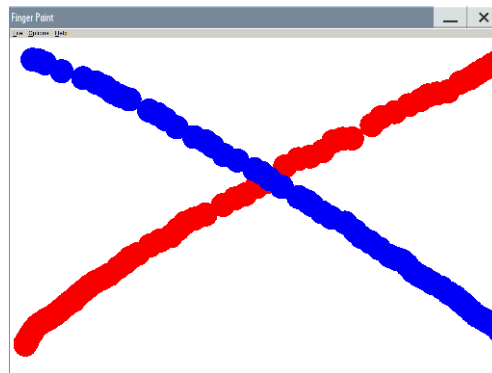

- If there are any gaps, the touch-sensitive functionality is damaged.

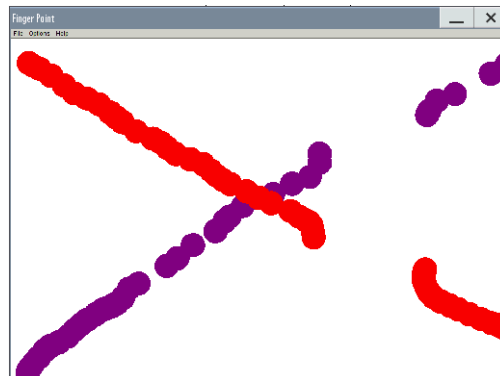

- To return to the "Check Front Panel" dialog, press [ESC].

Terminating the test

- Press the [ESC] key.
Exits the "Check Front Panel" dialog.

Debugging

1. If you detect a malfunction, for example, when you press the front panel key for the first time, and the color of the button in the dialog turns red (instead of green), the front panel key has probably stuck.
2. Contact the Rohde & Schwarz customer support, see [Chapter 15.9, "Collecting information for technical support"](#), on page 1366.

17.3.3 Check display screen

Using this function, you can verify the color depth and gradient, pixels and the text display of the screen.


Access:

- Select "System Config > Setup > Maintenance > Check Display Screen".
The R&S SMW fades out the current display and indicates the screen in red. Short instructions on the screen explain how to execute the test.

The remote commands required to define these settings are described in [Chapter 14.22, "TEST subsystem"](#), on page 1342.

Testing the display screen

1. Press the [SETUP] key.
2. Select "Maintenance > Check Display Screen"
The "Check Display Screen" window opens.
3. Test the color and gradient of the display screen:

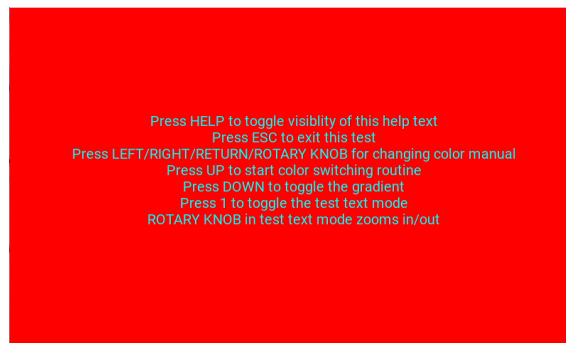

- a) Use the [HELP] key to hide the indicated text.
 - b) To toggle between the provided colors manually, use the navigation controls [Left/Right] or the rotary knob.
The R&S SMW provides the colors red, green, blue, white, three levels of gray shades and black.
 - c) To switch between the screen colors automatically, use the [Up] key.
 - d) To toggle the gradient, use the [Down] key.
4. Check if the R&S SMW indicates the text correctly:
 - a) Press [1] on the numeric keypad.
The R&S SMW displays a test text over the entire screen.
 - b) To inspect the text in detail, you can use the rotary knob to zoom it out.
 5. To exit the test, press the [ESC] key.

17.3.4 Internal adjustments

Using the integrated adjustment procedures, you can start the calibration directly on the instrument.

17.3.4.1 Internal adjustment settings

Access:

- Select "System Config > Setup > General > Internal Adjustments".

In this dialog, you can perform internal calibration routines, and get information on the last performed calibration.

The "Temperature Offset" indicates the deviation of the current temperature of the instrument, compared to the temperature of the last adjustment.

The remote commands required to define these settings are described in [Chapter 14.8, "CALibration subsystem"](#), on page 931.

How to: See [Chapter 17.3.4.3, "How to use the internal adjustments"](#), on page 1383.

Settings

Adjust All

Executes all available internal calibration routines in each path of the instrument.

Note: "Adjust All" is disabled when an R&S SZU IQ Upconverter is connected. In this configuration, the R&S SMW provides the adjustment of the R&S SZU, see [Adjust External Frequency Converter](#).

Note: Before you start the internal adjustment, make sure that you have connected a termination resistor, if necessary.

Remote command:

`:CALibration:ALL[:MEASure]?` on page 932

Last Full Adjustment

Displays the date of the last fully performed adjustment.

Remote command:

[:CALibration<hw>:ALL:DATE?](#) on page 932

Time

Displays the elapsed time since the last full adjustment.

If the last adjustment has been performed more than 100 days ago, the background color of the parameter turns red.

Remote command:

[:CALibration<hw>:ALL:TIME?](#) on page 933

Temperature Offset

Displays the temperature difference, comparing the temperature of the last adjustment to the current instrument temperature.

A green checkmark indicates that the offset is within the permitted range. If the temperature deviates more than ± 5 K, the instrument indicates a warning icon.

Remote command:

[:CALibration<hw>:ALL:TEMP?](#) on page 933

Information

Displays information to the current adjustment state.

Remote command:

[:CALibration<hw>:ALL:INformation?](#) on page 932

Adjust I/Q Modulator Current Frequency

Starts the adjustment for the I/Q modulator for the currently set frequency and base-band gain. The I/Q modulator is adjusted regarding carrier leakage, I/Q imbalance and quadrature.

See also ["To trigger the internal correction routine of the I/Q modulator"](#) on page 477.

Remote command:

[:CALibration<hw>:IQModulator:LOCal?](#) on page 935

Adjust LO Level at Current Frequency

Adjusts the level of the oscillator signal to optimum, if an external LO signal is applied.

See ["To adjust the LO level to current frequency"](#) on page 509.

The function is enabled in the following cases:

- An external "LO Coupling Mode" is selected.
- "Out State" is on ("B On" or "On").

Note: If your test setup consists of several cascaded Rohde & Schwarz instruments, always use an external oscillator signal and start the LO level adjustment with the first instrument. Continue in the order up to the last.

Remote command:

[:CALibration<hw>:LOSCillator:COUpling:LOCal?](#) on page 936

Adjust External Frequency Converter

Calibrates the parameters of an externally connected R&S SZU IQ Upconverter.

The function is available when an R&S SZU is connected and activated.

Remote command:
:CALibration<hw>:FREQuency:CONVerter:EXTernal? on page 936

Continue Adjustment on Error
Continues the calibration even though an error was detected. By default adjustments are aborted on error.
This function is password-protected. Unlock the protection level 1 to access it.


Remote command:
:CALibration<hw>:CONTinueonerror on page 933

Log Debug Info
Activates logging of the internal adjustments.
This function is password-protected. Unlock the protection level 1 to access it.
Remote command:
:CALibration<hw>:DEBug on page 935

17.3.4.2 Delayed adjustment settings

Access:

- ▶ Select "System Config > Setup > General > Delayed Adjustment".

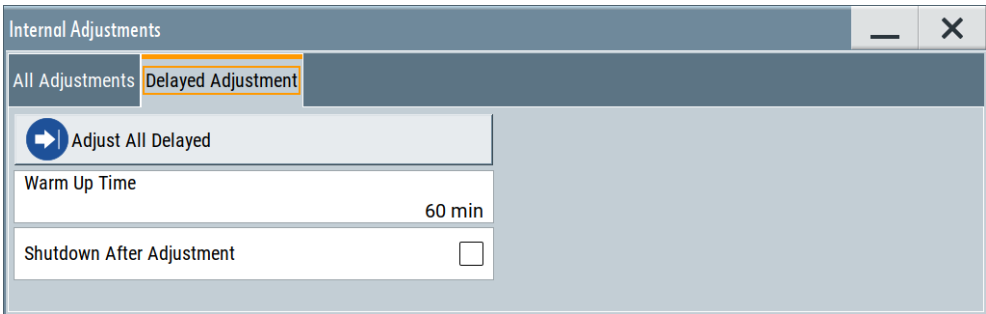

In this dialog, you can set the internal adjustments to start automatically after the selected warm up time and to switch off the instrument after calibration.

The remote commands required to define these settings are described in [Chapter 14.8, "CALibration subsystem"](#), on page 931.

Settings	
Adjust All Delayed	1382
Warm Up Time	1383
Shutdown After Adjustment	1383

Adjust All Delayed
Performs all available internal calibration routines of the instrument, considering all installed paths.

Note: "Adjust All" is disabled when an R&S SZU IQ Upconverter is connected. In this configuration, the R&S SMW provides the adjustment of the R&S SZU, see [Adjust External Frequency Converter](#).

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay[:MEASure]?` on page 935

Warm Up Time

Sets the time for warming up the instrument before the calibration starts automatically.

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay:MINutes` on page 934

Shutdown After Adjustment

Enables the automatic shutdown after internal adjustments.

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay:SHUTdown[:STATe]` on page 934

17.3.4.3 How to use the internal adjustments

Deciding whether to run internal adjustments

1. Select "System Config > Setup > Internal Adjustment".
2. Check the status and color indication in the section "Since Last Full Adjustment".
Green: internal adjustments are not required.
Red: internal adjustments are required. Observe also the indication in the "Information" field.
3. We recommend that you run internal adjustments in the following cases:
 - Before starting any application that requires a maximum of level accuracy.
 - When a long period of time has passed since the last adjustments.
 - If the ambient temperature of the instrument significantly differs from the one of the last adjustments.
4. Proceed as described in ["Running internal adjustments"](#) on page 1383.

Running internal adjustments

1. After switching on, the R&S SMW requires up to 30 minutes to warm up.
Wait until the instrument has reached operating temperature to achieve accurate adjustments.
2. Select "System Config > Setup > Internal Adjustment > Adjust All".
In two-path instruments, you can adjust each path separately.
3. Confirm with "Ok".

The adjustment process starts.

The adjustment process takes some time depending on the equipment of the instrument.

A status dialog shows progress of the current adjustment step. If necessary, you can stop the adjustments after a completed step.

If any error occurs, the process aborts. To resolve adjustment issues, see [Chapter 15.6, "Resolving errors during internal adjustments"](#), on page 1360.

Starting internal adjustments automatically

The delayed adjustment function executes the adjustments automatically. You can set the warm-up time and shut down after the adjustment process finishes. Using this function, you can execute adjustments without being on-site and start measurements directly when back.

1. If necessary, terminate the RF A/RF B output. See ["Running internal adjustments"](#) on page 1383.
2. Select "System Config > Setup > General > Internal Adjustment".
3. Select "Delayed Adjustment".
4. Set the "Warm Up Time", e.g. *40 min*.

The R&S SMW requires a warm-up time of at least 30 min.

5. Enable "Shut Down After Adjustment"
6. Select "Adjust All Delayed".

The process starts with warming up the instrument, indicating the progress in a status dialog. In this dialog, you can abort the process again, if necessary.

After warming up, the R&S SMW executes the internal adjustments and shuts down when finished.

17.3.5 Selftest

Self-test is provided for service purposes.

17.3.5.1 Selftest connections settings

- Access:
- ▶ Select "System Config > Setup > Maintenance > Selftest > Connections".

ConnectionsBasebandDAC

Execute Baseband Connections Test

BNC Connections Test

Source

USER 1 (Front)

Destination

USER 2 (Front)

Execute BNC Connections Test

Log Message:

The "Connections" dialog contains the parameters for testing the signal flow at the connectors.

The remote commands required to define these settings are described in [Chapter 14.22, "TEST subsystem"](#), on page 1342.

Execute Baseband Connections Test.....	1385
BNC Connections Test.....	1385
L Source.....	1385
L Destination.....	1386
L Execute BNC Connection Test.....	1386
L Log Message.....	1386

Execute Baseband Connections Test

Performs a connection test on each of the internal digital baseband links.

The test implies to all installed options as baseband inputs, motherboard, universal coding generators, fading simulators, and baseband outputs.

The result (succeeded or failed) is displayed in the status field on the right.

Remote command:

n.a.

BNC Connections Test

This function is password-protected. Unlock the protection level 1 to access it.

Source ← BNC Connections Test

Selects the BNC connector source to be tested.

Remote command:

:TEST:BB:BNC:SOURce on page 1344

Destination ← BNC Connections Test

Selects the BNC connector destination to be tested.

Remote command:

s:TEST:BB:BNC:DESTination on page 1344

Execute BNC Connection Test ← BNC Connections Test

Performs the BNC connection test at the selected connectors.

Remote command:

:TEST:BB:BNC:CONNECTION? on page 1343

Log Message ← BNC Connections Test

Displays the log message reported during the BNC connections test.


Remote command:

:TEST:BB:BNC:LOG? on page 1344

17.3.5.2 Selftest baseband settings

Access:

- Select "System Config > Setup > Maintenance > Selftest > Baseband".

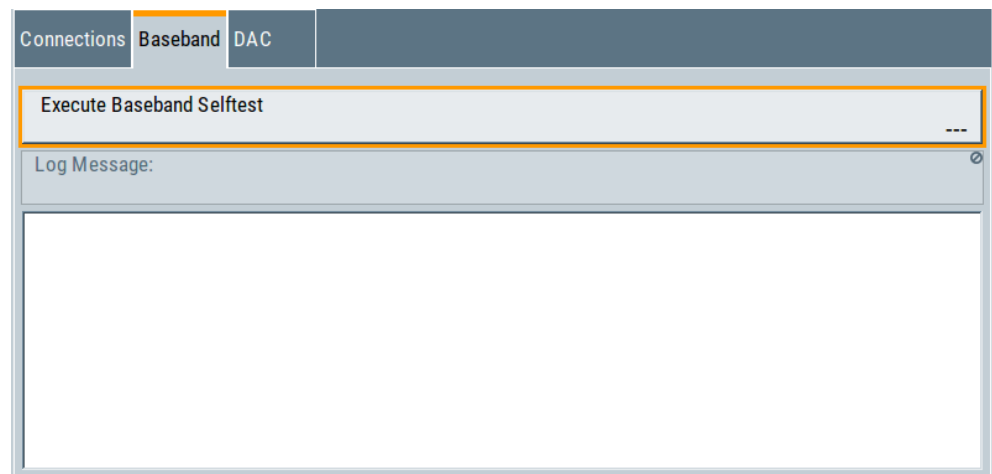

In the "Baseband" dialog you can execute the baseband selftest.

The remote command required to start the test is described in [Chapter 14.22, "TEST subsystem"](#), on page 1342.

Execute Baseband Selftest

Performs a baseband selftest.

The result (succeeded or failed) is displayed in the status field on the right.

Remote command:

:TEST:BASeband? on page 1343

Log Message

Displays the log message reported during the baseband test.

Remote command:
:TEST:BASeband:LOG? on page 1343

17.3.5.3 Selftest test generator settings (DAC)

Access:

- 1. This function is password-protected. Unlock the protection level 1 to access it.
- 2. Select "System Config > Setup > Maintenance > Selftest > DAC".

Connections	Baseband	DAC
Test Generator		
State		
On		
IQ Source		Sine
Gain		1.000 000
Frequency		1.000 000 000 MHz

The "DAC" dialog contains the parameters for testing the IQ signal source.

The remote commands required to define these settings are described in [Chapter 14.22, "TEST subsystem"](#), on page 1342.

State.....	1387
IQ Source.....	1387
Gain.....	1388
Frequency.....	1388
Select ARB File.....	1388

State

Starts the test generator.

Remote command:
:TEST:BB:GENerator:STATe on page 1346

IQ Source

Selects the test signal source.

- "Sine" Generates a sine waveform with frequency as set with the parameter [Frequency](#).
- "Constant I/Q" Uses a constant I/Q test signal.
For more details, see [Chapter 5.7.3.4, "Constant IQ test signal"](#), on page 329.
- "ARB" Selects a signal generated by the ARB. Select the waveform file with the parameter [Select ARB File](#).

Remote command:

`:TEST:BB:GENerator:SOURce` on page 1346

Gain

Sets the gain for a sine or a constant I/Q test signal.

Remote command:

`:TEST:BB:GENerator:GAIN` on page 1345

Frequency

If "IQ Source = Sine", sets the frequency of the test signal.

Remote command:

`:TEST:BB:GENerator:FREQuency<ch>` on page 1345

Select ARB File

Provides access to the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

See also, chapter "File and Data Management" in the R&S SMW User Manual.

Remote command:

`:TEST:BB:GENerator:ARBitrary` on page 1345


17.3.5.4 How to set up the R&S SMW for BNC connections tests

1. This function is password-protected. Unlock the protection level 1 to access it.
2. Select "System Config > Setup > Maintenance > Selftest > Connections".
3. Select the BNC **Source** (signal output).
4. Select the BNC **Destination** (signal input).
5. On the instrument, connect the selected "Source" connector with the "Destination" connector.
The selection list in the dialog shows you where to find the associated connector on the instrument.
6. Select "Execute BNC Connections Test".

17.3.6 FPGA/uC update settings

Access:

- Select "System Config > Setup > Maintenance > FPGA/uC Update".

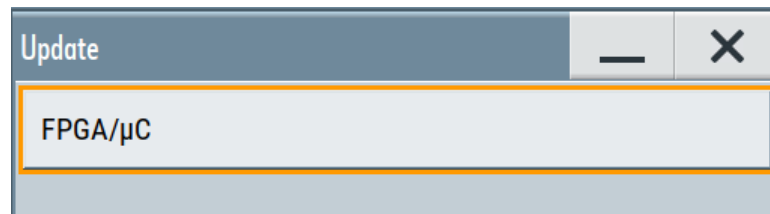

This dialog enables you to check for internal assembly updates and perform updates.

Settings:

FPGA/μC..... 1389

FPGA/μC

Performs an update of the FPGA/μC.

Remote command:

n.a.

17.3.7 Exchanging the RF adapter port

It is important, that you take care that the RF connectors applied to the port are clean, mechanically compatible and not damaged. Although the 1.85 mm adapter is designed to withstand several hundred mating cycles, it can reach the end of life or be damaged. Therefore, the adapter port is exchangeable, and you can replace it.

For the corresponding instructions on how to proceed, see the R&S SMW Service Manual provided on the global Rohde & Schwarz information system under <https://gloris.rohde-schwarz.com>.

17.4 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 17-1: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

Annex

A RF hardware versions

The functions and settings in the RF domain depend on the versions of the installed hardware assemblies, since several hardware components have been replaced by improved modules.

Basically, the description in the manual refers to the latest versions of the hardware assemblies, but points out settings that apply to earlier RF hardware versions.

The following sections however show the main changes in brief, with the current components listed first, followed in descending order by the corresponding configuration of earlier RF hardware versions.

For more information, see data sheet.

A.1 RF assemblies and options

The main focus of new RF hardware components is the synthesizer and RF frequency components. In addition, new phase noise options and their impact on the signal attenuation have also been improved.

The following table shows the differences. Options that are available for instruments with the new RF hardware components and the earlier RF hardware versions are not mentioned.



Remarks on high frequency options of RF path B:

- Option R&S SMW-K720 (AM/FM/φM) is not available for R&S SMW-B2031/-B2044(N).
An instrument equipped with these frequency options, turns off the signal generation in path B when you activate an analog modulation in path A.
- Options R&S SMW-B2012/-B2031/-B2044(N) require a deeper housing of the R&S SMW (R&S SMW-B94L), configured in the factory. Therefore, these options are not retrofittable.

Synthesizer	RF frequency options	Reference frequency	Phase noise performance options	Analog modulation options
SSYNW 1412.6567.02	R&S SMW <ul style="list-style-type: none"> -B1003/-B1006/... (path A) -B2003/...(path B) 	R&S SMW <ul style="list-style-type: none"> -K703 (1 GHz reference) -K703 (100 MHz reference, low noise) -K704 (1 MHz to 100 MHz variable reference) 	R&S SMW <ul style="list-style-type: none"> -B709/-B710/... (path A) -B719/-B720/... (path B) 	<ul style="list-style-type: none"> R&S SMW-K720 AM/FM/PhiM (not available for R&S SMW-B2031/-B2044(N))
SSYN 1412.6667.02	R&S SMW- <ul style="list-style-type: none"> -B103/-B106/... (path A) -B203/... (path A) 	---	R&S SMW-B22 enhanced phase noise & FM/PhiM modulator	R&S SMW <ul style="list-style-type: none"> -B20 FM/PhiM modulator R&S SMW-B22 enhanced phase noise & FM/PhiM modulator
SSYN 1141.4220.02				

See the data sheet for information on all RF frequency and RF enhancement options, the provided path combinations and the corresponding RF characteristics.

A.2 Affected parameters and settings

The following table shows the impact of the new RF hardware components on the setting parameters, denoted by the synthesizer versions.

For more information, see data sheet.

Table A-1: Reference oscillator settings

Synthesizer	External RF reference frequency	Minimum frequency locking range	Reference frequency output
SSYNW 1412.6567.02	<ul style="list-style-type: none"> 10 MHz, 100 MHz, 1 GHz 100 MHz low noise 1 MHz to 100 MHz Variable 	Depends on the synchronization bandwidth setting (narrow/wide) and the installed phase noise options R&S SMW-B709/-B710/-B711.	<ul style="list-style-type: none"> 10 MHz, 100 MHz, 1 GHz 100 MHz low noise Input signal (loop through)
SSYN 1412.6667.02	<ul style="list-style-type: none"> 10 MHz 1 MHz to 100 MHz variable 	Depends on the synchronization bandwidth setting (narrow / wide) and the installed phase noise option R&S SMW-B22.	<ul style="list-style-type: none"> Same as reference input 10 MHz derived from Ref. output
SSYN 1141.4220.02	5 MHz, 10 MHz or 13 MHz		

B Concepts and basic terminology

This section introduces the signal generation concept and explains the basic terminology used throughout this documentation.

Signal Flow

The R&S SMW is equipped with a large touchscreen that displays the block diagram, indicates the current state of the functional blocks, and allows you to monitor and revise the signal flow. The signal processing flow follows the logical left-to-right direction, where the active functional blocks influence the generated signal.

Signal Path

The [Figure B-1](#) illustrates the term signal path.

In the default instrument state ([Standard mode](#)), the block diagram of a fully equipped R&S SMW displays two signal paths. A signal path describes the chain of functional blocks from the baseband block to the RF output, for example the blocks "Baseband A", "Fading A", "AWGN A", "I/Q Mod A" and "RF A". Throughout this documentation, the upper processing chain is denoted as first signal path or as path A.

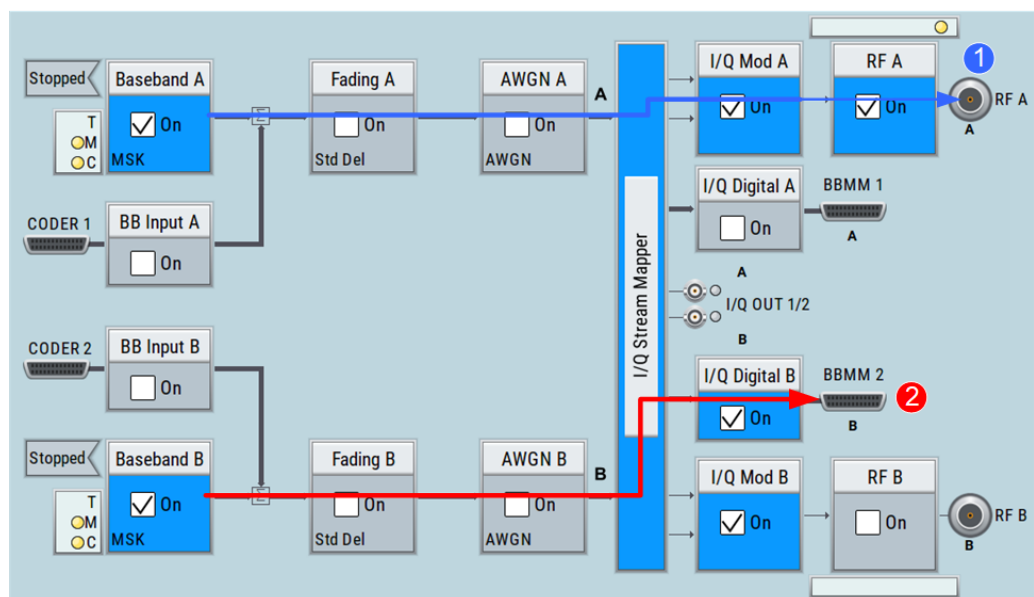


Figure B-1: Explanation of the terms "signal path"

- 1 (blue) = first signal path; analog output signal
- 2 (red) = second signal path; digital output signal

Compare the signal processing in both paths on [Figure B-1](#). In the first path, the output signal is an analog signal modulated on a radio frequency (RF). The second signal path is digital one. The digital baseband signal is routed to the digital output interface; the output signal is not modulated on an RF.

In [Advanced mode](#), however, the block diagram represents the signal flow more abstract; not all functional blocks are dedicated to a signal path (see also [Figure B-3](#)).

The Baseband and RF Domains

The processing blocks from the baseband source up to the I/Q modulator build the baseband domain. The signal in the baseband domain is fully digital and is converted to analog in the RF section of the instrument or if an analog output of the baseband signal is required. On the block diagram, you can recognize the signal by the used line weight: the digital signal is indicated with thick lines, whereas the analog signal is represented by thin lines.

The [Figure B-2](#) illustrates the baseband and the RF domains.

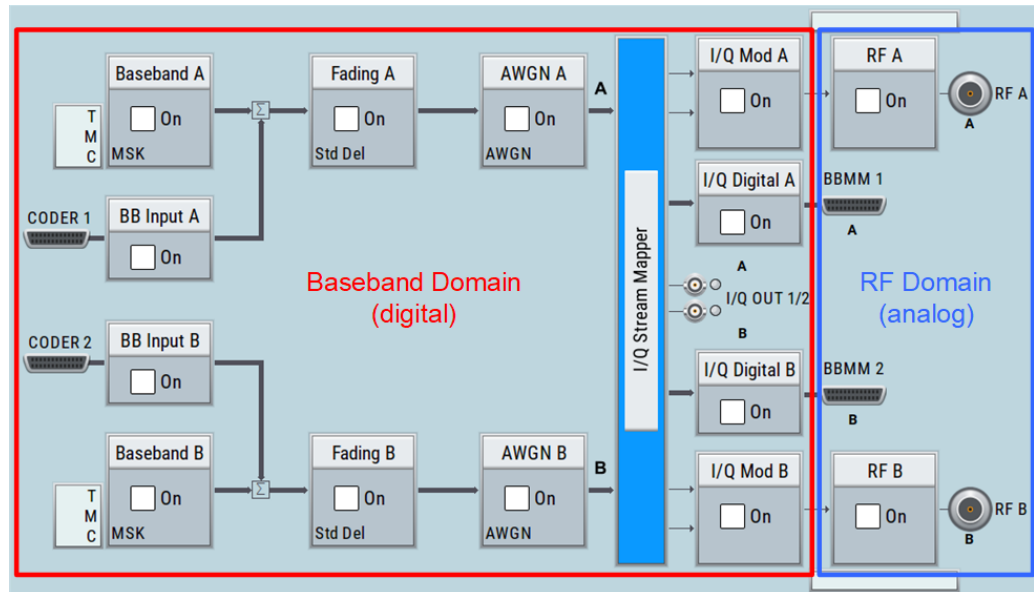


Figure B-2: The "borders" of baseband and RF domains

Baseband Signal (Basebands), I/Q Streams, RF Signal

The [Figure B-3](#) depicts the main terms used to denote the signal at the different processing stages. The output signals of the "Baseband" blocks are referred as "baseband signals" or "basebands". The signals at the end of the baseband domain are called "streams" (input and output signals of the "I/Q Stream Mapper"). The RF modulated output signal is denoted as RF signal.

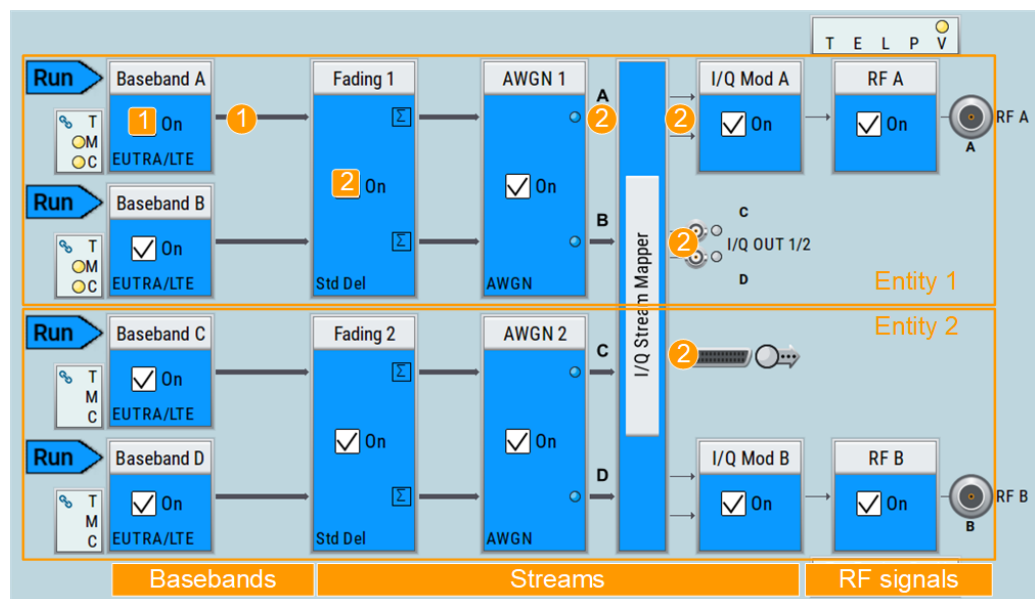


Figure B-3: Explanation of the terms "baseband signal", "stream" and "entity"

- 1 (square) = baseband signal source
- 2 (square) = fading simulator; the representation is highly abstract and does not depict the actual signal processing and signal flow
- 1 (circle) = Baseband signals or basebands
- 2 (circle) = Streams
- Entity 1/2 = two self-contained independent systems, consisting of their own baseband part with possible fading simulator and noise generator and an RF part

The Figure B-3 is an example of an **Advanced mode** configuration with two entities, **Entity 1** and **Entity 2**, and also shows the functional blocks belonging to each of them.

C Elements and controls of the graphical user interface


To get familiar with the display of the instrument, you find a summary description in the guide [Chapter 3.5.3, "Understanding the display information"](#), on page 93.

This overview in addition lists almost all functional elements of the user interface, and briefly explains the behavior when they are interactive. I.e. most of the elements are virtual keys you can use to open a corresponding menu or dialog.

C.1 Elements in the status bar

Various status buttons in the status bar of the graphical user interface indicate the status of the RF output signals.

The following is an overview of the status buttons. They are shown in active and inactive state. When active, they change color and possibly the label. When inactive, some of the buttons are hidden.

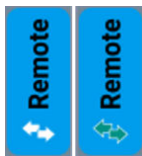

Remote

Indicates that the instrument is in remote control mode. The arrows are green, as long as a setting is performed. When completed, they are white.

Hotspot Return to manual control, as with the [LOCAL] key, see also [Chapter 13.15.3, "Remote control states"](#), on page 907.



Remote LLO

Indicates remote control state with local lockout enabled. The arrows are green, as long as a setting is performed. When completed, they are white.

This icon and the [LOCAL] key are locked, see also [Chapter 13.15.3, "Remote control states"](#), on page 907.



Freq

Label of the frequency entry filed of the corresponding RF path.

Hotspot Access to the "RF Freq / Phase..." dialog.



Frequency Offset

A frequency offset is set for the RF signal. The icon appears instead of [Freq](#).

Hotspot Access to the "RF Frequency / Phase ..." dialog.



<RF frequency>

Entry field for directly setting the RF frequency.



RF Signal

Indicates the activity of the RF signal in the corresponding path.

Hotspot Access to the "RF On" entry in "RF Mod" block menu.



Overload

The power of the external signal applied to the RF output is too high. The overload protection has tripped and the connection between the RF output and attenuator interrupted.

To activate RF input, reset the overload protection with the [RF ON/OFF] key.



External Reference Frequency

Indicates a used external reference signal and the frequency of the signal.



Hotspot Access to the "Ext. Ref.\LO Coupling" tab in the "RF Frequency / Phase ..." dialog.



Modulation

Indicates that the RF signal is modulated.



Hotspot Access to the "I/Q Modulator" and "Analog Modulation" dialogs.



Sweep

Indicates that either the RF or LF signal is generated in sweep mode.

Hotspot Access to the "Sweep" settings.



Busy

Indicates a running process, that means, settings or calculations are currently executed. If a process takes some time, the button displays the progress as a percentage.



Recording

Indicates that recording is running.

Hotspot Access to the "SCPI Sequence" dialog.



Lev

Label of the level entry filed of the corresponding RF path.

Hotspot Access to the "RF Level..." dialog.



Level Offset & Level EMF Offset & Level Ucor & Level Digital Attenuation

This icon is displayed when you use functions or parameters that affect the RF output level. The icon appears instead of [Lev](#).



The label varies according to:

- A specified level offset ("Offs")
- The level displayed as voltage of EMF ("EMF")
- An activated user correction ("Ucor")
- A specified digital attenuation ("DigAtt")



If several settings are enabled, the symbol label combines the appropriate information according to the order and relevance.

Hotspot Access to the "RF Level / EMF ..." dialog.

-30.00 dBm


<RF level>

Entry field for directly setting the RF level.

C.2 Elements in the block diagram

Functional blocks, signal lines, and status indicators in the graphical user interface show the currently set configuration of signal generation in the baseband and in the RF domain.


The following is an overview of the elements in the block diagram status, where they appear and what they indicate. The elements are listed in the active state. When inactive, they change color and possibly the label, or they are not displayed.

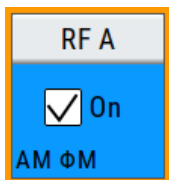**Functional Block**

Represents a basic task in signal generation. A block contains an on/off switch and a push button to access the associated settings dialogs.

Hotspot "RF x" opens the RF block menu.

Hotspot "Block" & "On" activate/deactivate the RF signal (toggle mode).

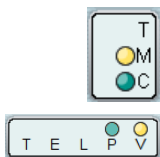**Control Signal Blocks**

Represent the control signals in the baseband domain (see first icon), and in the RF domain (2nd icon). A control block shows the signal content with letters and LEDs that indicate signal input or output.

The LEDs indicate:

- that the signal is available at the output connector.
- that the signal source is internal.

Hotspot Access to the corresponding connector dialogs.

**Signal Lines**

Connecting lines between the blocks and connectors show the currently configured signal flow. Thick lines represent the digital I/Q streams and the thin lines the analog signals.

**Frequency Offset**

A frequency offset is set for the baseband signal.

Hotspot Access to the "Baseband Offsets" dialog.

**Phase Offset**

A phase offset is set for the baseband signal.

Hotspot Access to the "Baseband Offsets" dialog.

**Path Gain**

A path gain is set for the baseband signal.

Hotspot Access to the "Baseband Offsets" dialog.

**Routing**

Denotes merged baseband signals.



Access to the "Baseband Offsets" dialog

**Graphics indicator**

Indicates that the corresponding signal is graphically shown.



The symbol covers the identifier of the signal source and is assigned to the corresponding signal line. Digital signals are highlighted green, and the analog signals are blue.

Connectors

Connector icons represent the interfaces for signal input and output. The symbols correspond to the hardware connectors on the instrument.



The connectors are always bound by a function block and labeled with the respective signal name. When you select a connector icon, you can fold the block and the icon, or unfold (toggle mode). In the unfolded state, small LEDs show you whether the signal is active or not.

Table C-1: Indication of connectors

Connector icon	Denotes	Folded view
	Digital I/Q signal input (CODER board)	
	Digital I/Q output (DAC board)	
	Analog I/Q input	-
	Analog I/Q output	
	RF output	-

The LEDs indicate:







- that a signal is active at the corresponding connector.
- that a signal source is not active.

Trigger State

Indicates the state of the trigger signal in the baseband domain.

The trigger can be in the following states:

Table C-2: Indication of trigger signal activities in the different views

Block diagram	Trigger settings dialogs	Tab label (settings dialog)
		
		

Hotspot Access to the "Trigger" tab in the "Trigger Marker Clock" dialog.

**Touchscreen Off**

Indicates that the security function "Touchscreen Off" is set.

This function locks the manual control on the screen. You can operate the instrument over VNC, and the front panel keys or external keyboard and mouse. The R&S SMW displays the icon in the upper left corner of the block diagram.

Hotspot Access to the "Security" dialog.

**VNC Only**

Indicates that the security function "VNC Only" is set.

This function locks the front panel keys and the external keyboard and mouse. You can operate the instrument over VNC, or the touchscreen. The R&S SMW displays the icon in the upper left corner of the block diagram.

Hotspot Access to the "Security" dialog.

**Disabled**

Indicates that the security function "Disabled" is set.

This function locks all controls for manual operation of the instrument. You can operate the instrument via remote control only. The symbol covers the entire screen.

C.3 Elements in the task bar

 
The task bar contains labeled softkeys and minimized views (thumbnails) of active graphics and dialogs.



In general, you can access all functions that are assigned to a softkey directly. Apart from "System Config" and "Current Dialogs", the first two firmly assigned softkeys, a further permanent softkey is displayed, denoting that the instrument is in remote control mode.

In addition, you can permanently indicate externally connected devices as, e.g., an R&S NRP-Z power sensor.

The remaining softkeys are dynamically assigned to open graphics and dialogs, following the order shown in the figure:


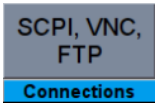
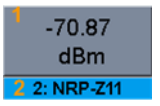
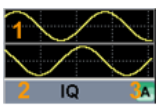



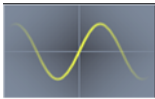



The task bar screen holds up to 10 softkeys. If the number is exceeded, the settings dialogs are shifted to the background according to the FIFO (First In First Out) principle, but remain in the list of current dialogs.

- Pressing the softkey leads you to the corresponding settings dialog.

Taskbar

The softkeys in the taskbar show active dialogs and graphics. The following table is an overview of the different types of softkeys.

Softkey	Description
	<p>Provides access to general system configurations like setup, graphics, remote, etc.</p> <p>Hotspot Access to general system configurations like setup, graphics, remote, etc.</p>
	<p>Shows the currently active remote connections.</p> <p>Hotspot Access to "Remote Access > Active Connections" dialog.</p> <p>Tip: In this tab, you can show or hide this display of the softkey in the task bar, see Chapter 13.5.6, "Remote connections settings", on page 848.</p>
 <p>1 = measurement result 2 = sensor name</p>	<p>Shows a connected external instrument, in this case an R&S NRP-Zxx power sensor.</p> <p>The blue background indicates an active state.</p>
 <p>1 = Signal graph (thumbnail) 2 = signal name 3 = signal source</p>	<p>A graphics softkey is labeled with the signal name and the source, and shows the thumbnail of the graph.</p> <p>You can activate at a maximum five graphics simultaneously. They are all shown in the taskbar while open dialogs are shifted to the next.</p> <p>Tip: The symbol with the identifier of the signal source (3) is also assigned to the corresponding signal line in the block diagram. Digital signals are highlighted green, and the analog signals are blue.</p> <p>Hotspot Access to the corresponding diagram.</p>
 <p>1 = dialog (thumbnail) 2 = dialog name</p>	<p>Shows the dialog as a thumbnail, the dialog name, and the name of signal channel.</p> <p>Hotspot Access to the corresponding dialog</p>

Softkey	Description
	Denotes that no signal is graphically represented. Hotspot Access to the "Graphics Configuration" dialog.
	Denotes that more dialogs are currently opened. Hotspot Access to the list of current dialogs, if more than the maximum number of softkeys in the taskbar are opened.
	Represents the block diagram. Hotspot Toggles between the active dialogs and the block diagram view.
	Indicates that the security feature "Display Only" is set. This function locks all manual controls except of the display.

The softkeys are interactive. When selected, they open the corresponding settings dialogs.

C.4 Status information displayed in the info line

The info line shows system messages as, e.g., status information on the operating status of the instrument, but also error messages and warnings. It appears when an event message is generated. Some of the messages are permanently displayed, and the less important only temporarily, as volatile information.

The following section contains the distinctive messages concerning the operating status of the instrument. For information on the error messages and warnings, refer to [Chapter 15, "Troubleshooting and notifications"](#), on page 1354.

You can also access an info window with detailed information about all messages in a history list. For details, see [Chapter 15.4, "Querying notifications"](#), on page 1357

ALC On / Auto / S&H

The status of the automatic level control is indicated:

- ON
Automatic level control permanently on
- Auto
Automatic level control is automatically adapted to the operating states
- S&H
Automatic level control off, recalibration of the level whenever the level or frequency is set (sample and hold mode)

ListMode

List mode is active.

The values of the frequency/level pairs in the selected list are set for the chosen dwell time.

AttFixed

Attenuator fixed mode is active.

The uninterrupted level settings are made in a fixed range without attenuator switching. The variation range is set automatically when this mode is activated. The range is displayed under "Attenuator Fixed Range" in the "Level" dialog.

UCorr

User correction is active.

The level is corrected by the given values in the selected user correction list. Correction is performed by the user-defined list values being added to the output level for the respective RF frequency. With frequencies which are not contained in the list, the level correction is determined by interpolation of the closest correction values.

OvenCold

The reference oscillator has not yet reached its nominal frequency.

When switching on from the STANDBY mode, the specified frequency accuracy is reached immediately. If the power switch was switched off, the reference oscillator needs some warm-up time to reach its nominal frequency. During this period of time, the output frequency does not yet reach its final value either.

C.5 Elements displayed for interactions


The signal generator is primarily configured by settings dialogs, but also by active elements in the block diagram and the status bar. Additional interactive elements such as tooltips or on-screen keypads simplify configuring the settings.

Dialogs

It is distinguished between settings dialogs and diagrams.

Basically, a dialog has a parent name corresponding to its content.

"Settings dialog"

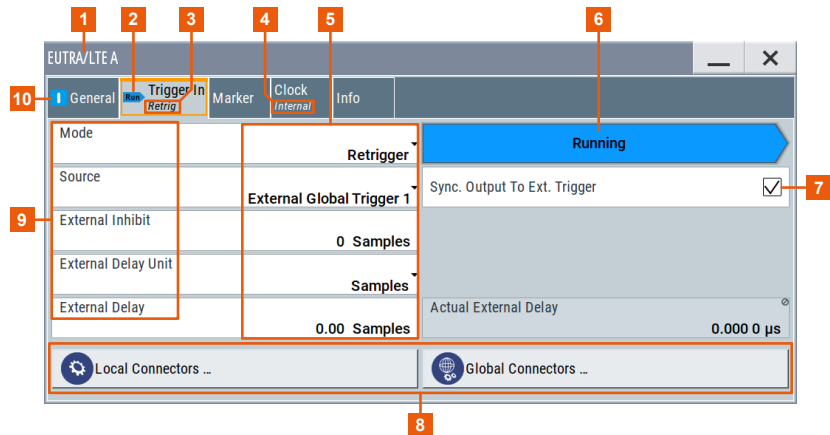

- 1 = Dialog name
- 2, 10 = Status indicators
- 3, 4 = Key parameter setting
- 5 = Parameter entry field
- 6 = Status indicator
- 7 = Checkbox
- 8 = Access keys for further settings dialogs
- 9 = Parameters

The name(1) of a settings dialog is displayed in the header. It is a generic term that refers to the functionality covered in the dialog. Dialog names are, for example, a digital standard (EUTRA/LTE).

The header of a settings dialog contains the well known buttons to minimize or close the dialog, and a parent name which is composed of:


- Parent name
- Generic term of the function

A settings dialog is mostly divided into tabs with logically grouped parameters. The tab name expresses the content and can contain status indicators or the set value of a key parameter.

See [Chapter C.6, "Naming conventions in the user interface"](#), on page 1411

"Diagram dialogs"

The graphical representation of a diagram dialog contains the graph and functional keys.

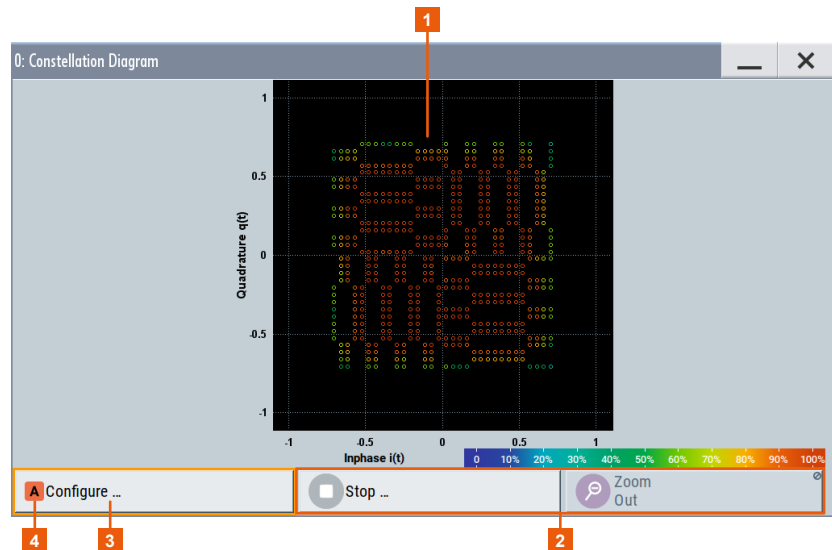

- 1 = Graph
- 2 = Functional keys
- 3 = Access keys for further settings dialogs
- 4 = Signal source identifier

**On/Off Switch**

Indicates the current state of a function.

The icon is interactive and you can select it to turn on and off.

On-Screen Keypads


The on-screen keyboards are further means of interacting with the instrument without having to connect an external keyboard. Once you activate an entry field, either the numerical or the alphanumeric keypad appears accordingly. When a keypad is open, the corresponding input field is in variation mode, that means you can vary the digits individually.

"Numerical"

If you select a numerical entry field, the numerical keypad appears automatically.



**"Alphanumeric"**

When you select an alphanumeric input field, the instrument displays a keypad with numeric and alphanumeric keys.

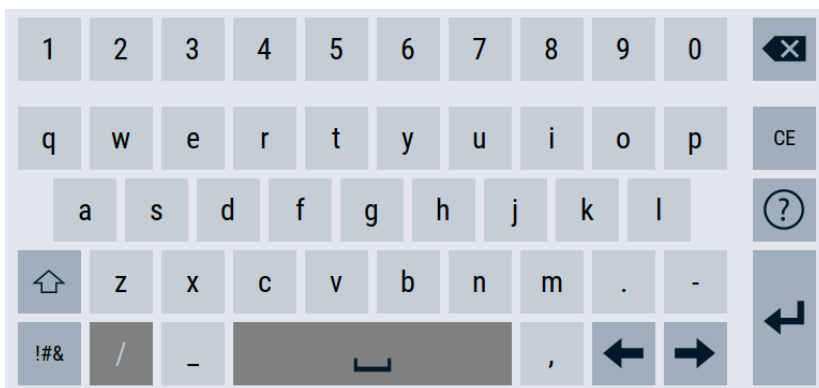

"Pattern"

Certain data is determined as binary patterns, as, for example, the "Data Source" of the "Customer Digital Modulation". For these entries, the instrument supports you with the matching binary keypad.

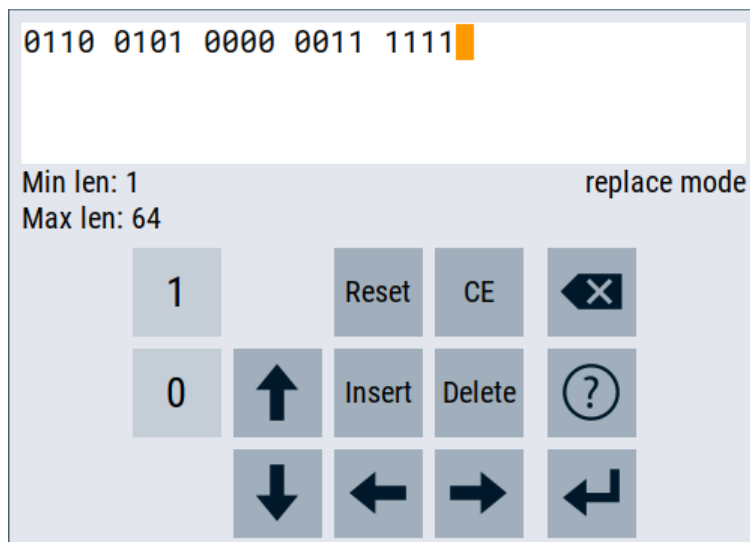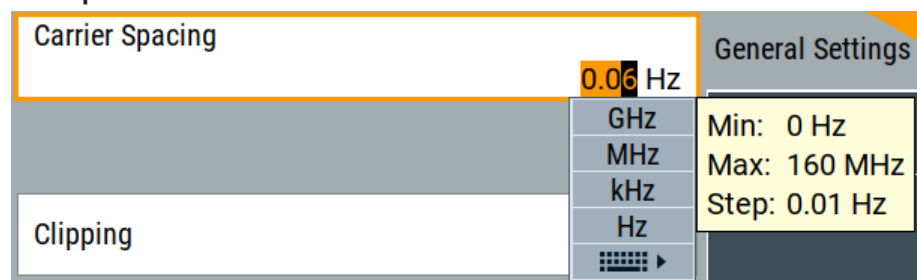**Tooltip**

In edit mode, the tooltip indicates the possible value range of a parameter.

Scroll bar handle


The arrow appears, if you touch a scroll bar. It provides a larger touch-sensitive area to grasp and drag the scroll bar easier.

**Context-sensitive menus**

Context-sensitive menus provide direct access to further features.

If you access a menu, the instrument automatically displays the appropriate functions. The menus vary in the block diagram, the taskbar, the parameters or in certain dialogs:


"Status Bar and Block diagram"

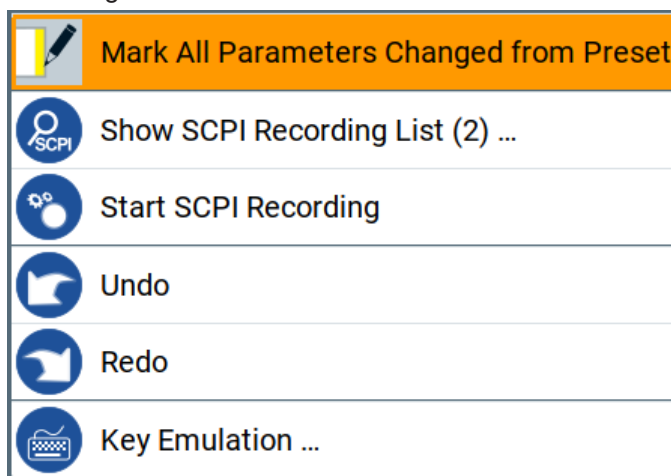

In this menu, you can access the SCPI recording functions, enable the display of all modified parameters, and simulate the buttons of the front panel. Use the menu, for example, to execute these functions via the touchscreen.


In addition, you can undo changes and actions, and restore a previously undone action.

"Parameter"

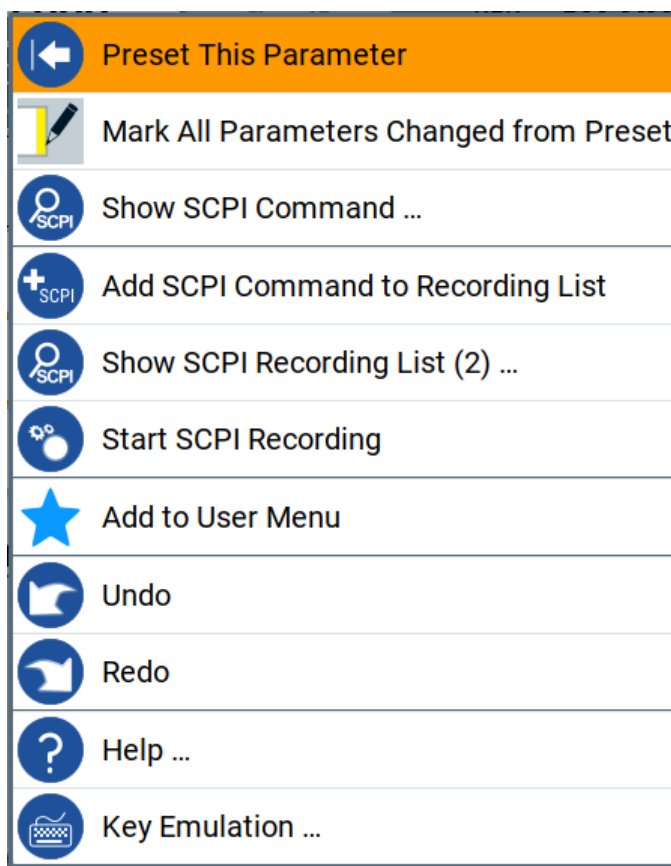


In the context-sensitive menu of a parameter, you can directly preset the parameter, display the associated remote control command, and retrieve the functional description in the online help.

"Remote control connections (taskbar)"

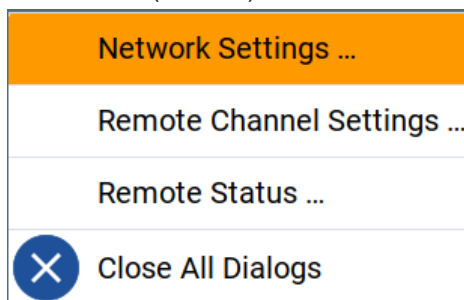


This menu provides access to the corresponding network settings dialogs.

"Dialog (taskbar)"

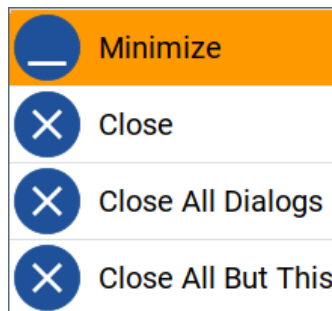


Expands the dialog to its original size, or closes dialogs.

"Graphic (taskbar)"

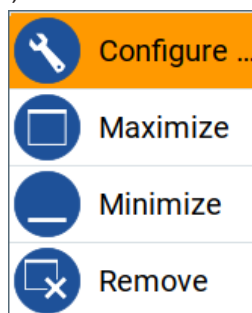

With these functions, you can quickly open the settings dialog of the graphic, expand or minimize the diagram, or disable the graphic.

"File Manager Dialog"

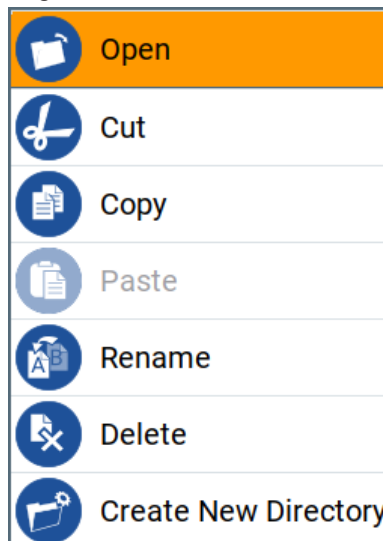

The context-sensitive menu in the "File Manager Dialog" provides the standard functions for file handling.

C.6 Naming conventions in the user interface

The naming convention in the user interface follows a rule that enables you to recognize to which **Stream**, path, or **Entity** the corresponding dialog and/or functional block is related.

Consider the following naming conventions:

- **Standard mode**

In this mode, the functional blocks are dedicated to a stream/baseband, i.e. one functional block provides the configuration settings for one stream/baseband. The name of the stream/baseband is appended to the name of the equivalent functional block/dialog:

"<Functional block> + <Stream> = <Functional block/Dialog>"

Example: Naming conventions in standard mode

The name of the "AWGN" functional block and the name of the "AWGN Settings" dialog (see [Figure C-1](#)) is formed as follows:

"<AWGN> + <Stream A >= <AWGN A>"

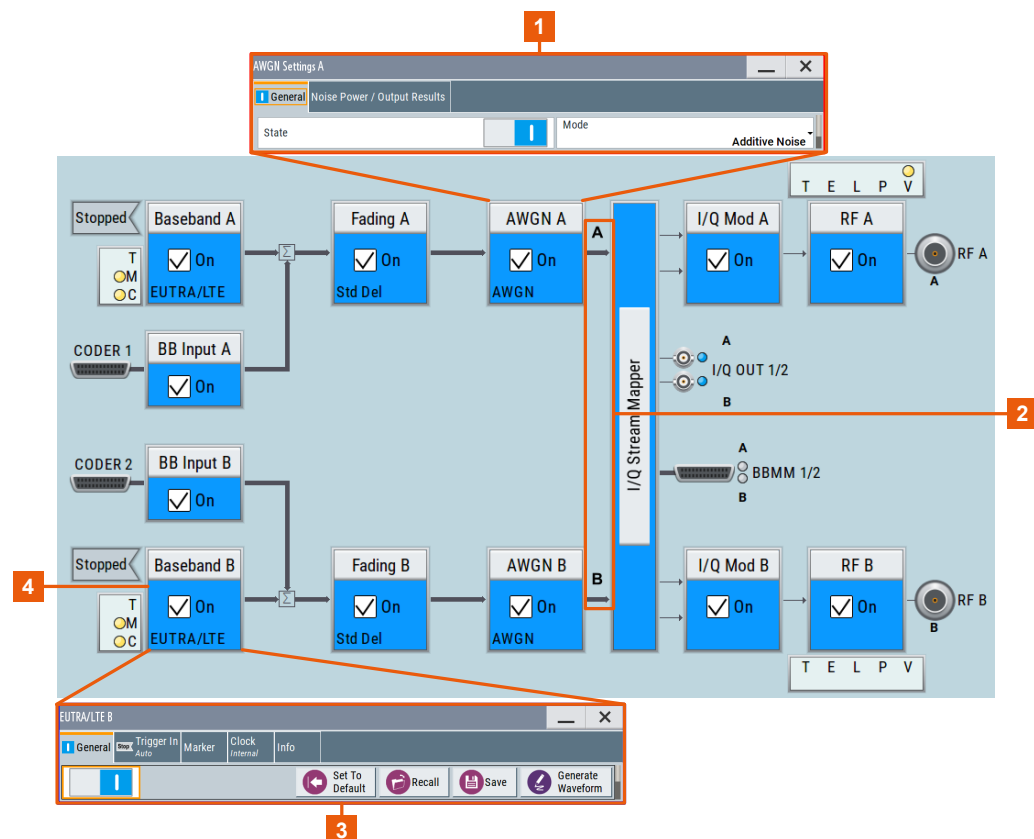


Figure C-1: Explanation of the naming convention for standard mode

1, 2 = Dialog and functional blocks refer to "Stream A"/"Stream B".
3, 4 = Dialog refers to "Baseband B".

- **Advanced mode**

In **Advanced mode**, the functional blocks are not always dedicated to a stream/baseband. The applied naming rule depends on further settings, like the selected baseband source and number of entities.

- While using **Coupled sources**, there is only one functional block that provides specific configuration settings for all streams/basebands. Hence, there is no special attachment to the name of the functional block/dialogs:
"<Functional block> = <Functional block/Dialog>"
- In multiple entity mode, one functional block controls the settings of several streams. The number of the entity is appended to the name of the dialog:
"<Functional block> + <Entity number> = <Functional block/Dialog>"

Example: Naming conventions in advanced mode and coupled sources

There are no attachments to the name of the "AWGN" functional block or to the name of the "AWGN Settings" dialog (see [Figure C-2](#)).

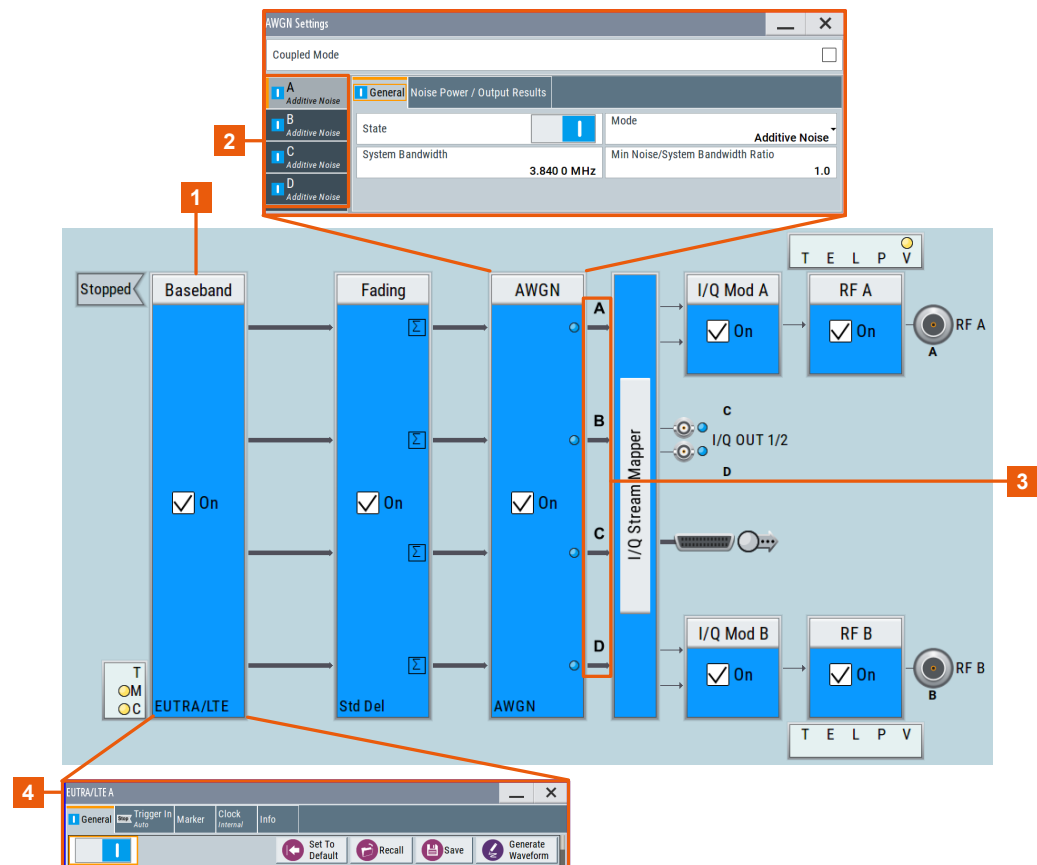


Figure C-2: Explanation of the naming convention for coupled sources

- 1, 4 = No appending to the name of the baseband
2, 3 = Configuration of all streams in one dialog

Example: Naming conventions in multi-entity advanced mode

The name of the "AWGN" functional block and the name of the "AWGN Settings" dialog (see [Figure C-3](#)) is formed as follows:

"<AWGN> + <Entity 1> = <AWGN 1>"

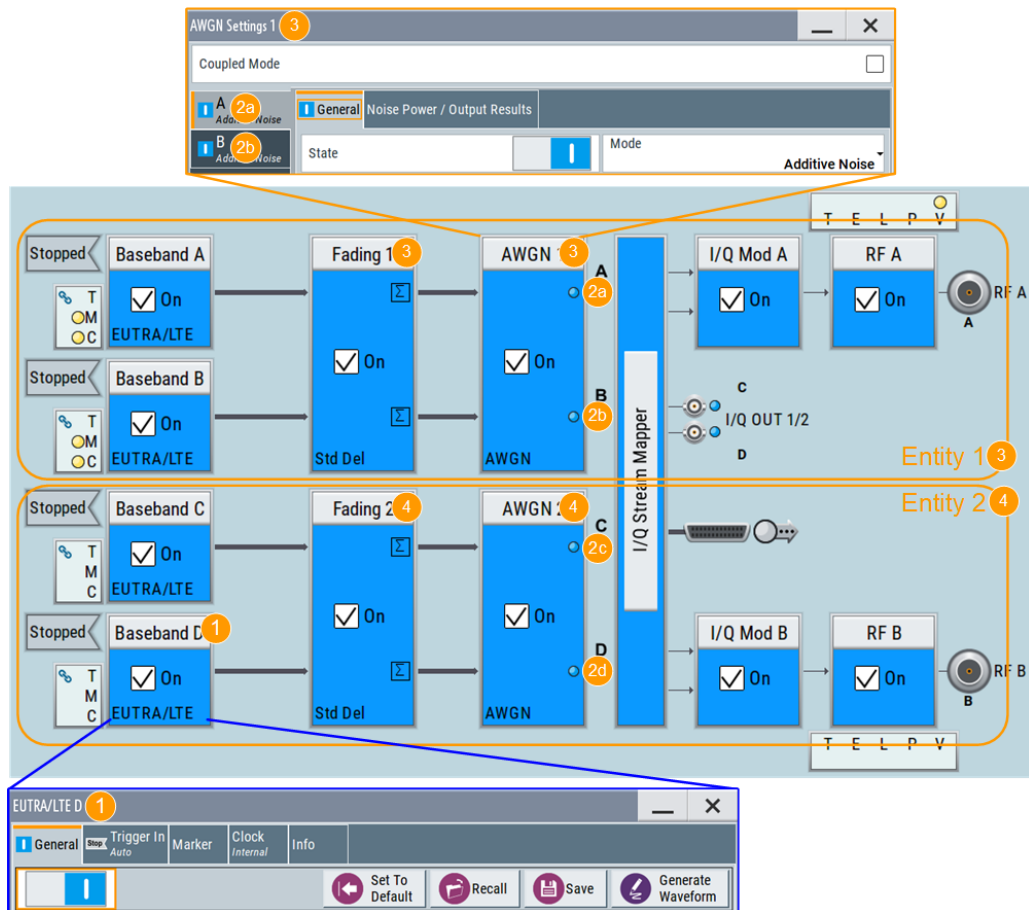


Figure C-3: Explanation of the naming convention for a multi-entity mode

- 1 = Dialog refers to "Baseband D".
- 2a-2d = Confirms the configuration of the streams corresponding to the same baseband in one dialog.
- 3 = Functional blocks and dialog refer to "Entity 1".
- 4 = Functional blocks refer to "Entity 2".

Refer to [Chapter C, "Elements and controls of the graphical user interface"](#), on page 1396 for comprehensive description on the way the R&S SMW displays information on its screen.

C.7 Unit shortcuts

When specifying units or quantities during data entry, the R&S SMW provides the following shortcuts for simplified input.

Shortcut	Designation	Context	Unit
a, A	ampere	Current	A
	atto-	Area, surface	am ²
c, C	centi-	Distance, length	cm
d, D	deci-	Distance, length	dm
		Level, power	dB, dBFS, dBm, dBU, dBW
	degree	Phase, polar/spherical coordinates	deg
e, E	exa-	Area, surface	em ²
f, F	femto-	Area, surface	fm ²
g, G	giga-	Area, surface	Gm ²
		Data rate, sample rate, symbol rate	Gbit/s, Gsample/s, Gsymbol/s, Gchip/s
		Frequency	GHz
		Impedance, resistance	GΩ
h, H	hertz	Frequency	Hz
k, K	kilo-	Area, surface	km ²
		Data rate, sample rate, symbol rate	kbit/s, ksample/s, ksymbol/s, kchip/s
		Distance, length	km
		Frequency	kHz
		Impedance, resistance	kΩ
		Velocity	km/h
m, M	milli-	Area, surface	mm ²
		Current	mA
		Distance, length	mm
		Electromagnetic force, level	mV
		Power	mW
		Time, period, etc.	ms
	mega-	Area, surface	Mm ²
		Data rate, sample rate, symbol rate	Mbit/s, Msample/s, Msym/s, Mchip/s
		Frequency	MHz
		Impedance, resistance	MΩ
n, N	nano-	Area, surface	nm ²
		Current	nA
		Distance, length	nm
		Electromagnetic force, level	nV

Shortcut	Designation	Context	Unit
		Power	nW
		Time, period, etc.	ns
o, O	ohm	Impedance, resistance	Ω
p, P	peta-	Area, surface	pm^2
	percent	Level, ratio	%
	pico-	Area, surface Current Electromagnetic force, level Power Time, period, etc.	pm^2 pA pV pW ps
r, R	radiant	Phase, polar/spherical coordinates	rad
s, S	second	Time, period, etc.	s
t, T	terra-	Area, surface Data rate, sample rate, symbol rate Frequency Impedance, resistance	Tm^2 Tbit/s, Tsample/s, Tsym/s, Tchip/s THz T Ω
u, U	micro-	Current Distance, length Electromagnetic force, level Power Time, period, etc.	μA μm μV μW μs
v, V	volt	Level, voltage	V
w, W	watt	Level, power	W

D Reference information for remote control

D.1 Telnet program examples

The following program example shows a simple `TcpClient` class that is intended to explain on how to get started with programming of sockets.

The example sets up a socket communication to R&S SMW and opens a simple user interface, very similar to the telnet, which allows input of commands. To enable real automation, further development of the program is required.

TcpClient.h

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent      HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};
```

TcpClient.cpp

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent      HostInfoStruct;
```

```

class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};

#include <netdb.h>
#include <netinet/in.h>
#include <unistd.h>
#include "TcpClient.h"
TcpClient::TcpClient()
: currentHostName( "" )
, currentPort( 0 )
, currentSocketDescr( 0 )
, serverAddress ( )
, currentHostInfo( NULL )
, clientIsConnected( false )
, receiveBufferSize( 1024 )
{
}
TcpClient::~TcpClient()
{
    currentHostInfo = NULL;
}

void TcpClient::connectToServer( string &hostname, int port )
{
    currentHostInfo = gethostbyname( hostname.c_str( ) );
    if( currentHostInfo == NULL )
    {
        currentHostName = "";
        currentPort      = 0;
        currentHostInfo  = NULL;
        clientIsConnected = false;
        printf("error connecting host\n" );
    }
}

```

```

    }
    currentHostName = hostname;
    currentPort      = port;
    currentSocketDescr = socket(AF_INET, SOCK_STREAM, 0);
    if( currentSocketDescr == 0 )
    {
        currentHostName = "";
        currentPort      = 0;
        currentHostInfo  = NULL;
        clientIsConnected = false;
        printf("can't create socket\n" );
    }
    serverAddress.sin_family = currentHostInfo->h_addrtype;
    serverAddress.sin_port   = htons( currentPort );
    memcpy( (char *) &serverAddress.sin_addr.s_addr,
        currentHostInfo->h_addr_list[0], currentHostInfo->h_length );
    if( connect( currentSocketDescr, ( struct sockaddr *) &serverAddress,
        sizeof( serverAddress ) ) < 0 )
    {
        throw string("can't connect server\n" );
    }
    clientIsConnected = true;
}
void TcpClient::disconnect( )
{
    if( clientIsConnected )
    {
        close( currentSocketDescr );
    }
    currentSocketDescr = 0;
    currentHostName    = "";
    currentPort        = 0;
    currentHostInfo    = NULL;
    clientIsConnected  = false;
}
void TcpClient::transmit( string &txString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be sent\n");
    }
    char * transmitBuffer = new char[txString.length() + 1];
    memcpy( transmitBuffer, txString.c_str(), txString.length() );
    transmitBuffer[txString.length()] = '\n'; //newline is needed!
    if( send( currentSocketDescr, transmitBuffer, txString.length() + 1, 0 ) < 0 )
    {
        throw string("can't transmit data\n");
    }
    delete [] transmitBuffer;
}

```

```

void TcpClient::receive( string &rxString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be received\n");
    }
    char * receiveBuffer = new char[receiveBufferSize];
    memset( receiveBuffer, 0, receiveBufferSize );
    bool receiving = true;
    while( receiving )
    {
        int receivedByteCount = recv( currentSocketDescr,
            receiveBuffer, receiveBufferSize, 0 );
        if( receivedByteCount < 0 )
        {
            throw string("error while receiving data\n");
        }
        rxString += string( receiveBuffer );
        receiving = ( receivedByteCount == receiveBufferSize );
    }
    delete [] receiveBuffer;
}

string TcpClient::getCurrentHostName( ) const
{
    return currentHostName;
}

int TcpClient::getCurrentPort( ) const
{
    return currentPort;
}

```

TelnetClient.cpp

```

#include <iostream>
#include "TcpClient.h"
void printUsage()
{
    cout<<"usage: EthernetRawCommand <server-ip> [scpi-command]"<<endl;
}

int main( int argc, char *argv[] )
{
    int errorCode          = 0; //no error
    bool useSingleCommand = false;
    string singleCommand   = "";
    string hostname        = "";
    int    port            = 5025;
    string input           = "";
    TcpClient client;
    switch( argc )
    {

```

```
case 3:
    useSingleCommand = true;
    singleCommand     = argv[2];
case 2:
    hostname           = argv[1];
    break;
default:
    printUsage();
    return(-1);
}
try
{
    client.connectToServer( hostname, port );
    bool terminate = false;
    while( !terminate )
    {
        char buffer[1024];
        if( useSingleCommand )
        {
            input = singleCommand; //send string
        }
        else
        {
            cin.getline( buffer, 1024 );
            input = buffer;
            if( input == "end" )
            {
                terminate = true;
            }
        }
        if( !terminate)
        {
            client.transmit( input ); //send string
            int qPos = input.find( "?", 0 );
            //receive string only when needed
            if( qPos > 0 )
            {
                string rcStr = "";
                client.receive( rcStr );
                cout << rcStr << endl;
            }
        }
        if( useSingleCommand )
        {
            terminate = true;
        }
    }
}
catch( const string errorString )
{
    cout<<errorString<<endl;
```

```

    }
    client.disconnect( );
    return errorCode;
}

```

D.2 Hardware interfaces

This section covers hardware-related topics, like pin assignment of the IEC 625/IEEE 488 interface.

The remote control interfaces are described in details in [Chapter 13, "Network operation and remote control"](#), on page 819.

All other interfaces are described in [Chapter 3.2, "Instrument tour"](#), on page 40

For more information, see data sheet.

D.2.1 GPIB-Bus interface

Pin assignment

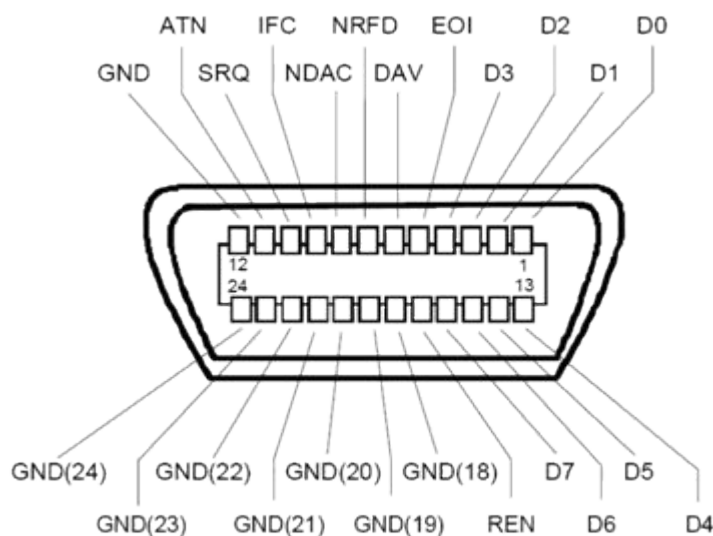


Figure D-1: Pin assignment of GPIB-bus (IEEE 488) interface

Bus lines

- Data bus with 8 lines D0 to D7:
The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.
- Control bus with five lines:

IFC (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.

ATN (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.

SRQ (Service Request): active LOW enables the connected device to send a service request to the controller.

REN (Remote Enable): active LOW permits switchover to remote control.

EOI (End or Identify): has two functions in connection with ATN:

- ATN=HIGH active LOW marks the end of data transmission.
- ATN=LOW active LOW triggers a parallel poll.

- Handshake bus with three lines:

DAV (Data Valid): active LOW signals a valid data byte on the data bus.

NRFD (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

NDAC (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

Interface functions

Instruments which can be controlled via GPIB-bus interface can be equipped with different interface functions. [Table D-1](#) lists the interface functions for the R&S SMW.

Table D-1: GPIB-bus interface functions

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, deaddressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability

E Extensions for user files

The [Table E-1](#) lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

Table E-1: List of the automatically assigned file extensions in the instrument

Function	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrc1txt
User Menu	Settings	User-defined favorite settings	*.user_menu
License Key		License Key	*.xml
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw
Response File	Settings	Response file	*.txt
"NRP Settings"	Settings	R&S NRP Settings	*.nrp, *.rsu
SCPI command list	List	Export file containing list of SCPIs	*.iee
SCPI command script		SCPI script file formats: Plain SCPI, MATLAB, NICVI, Python3	*.txt, *.m, *.c, *.py
R&S Support Info Archive	Support File	Automatically collected support information	*.tar.gz
Tutorials	Tutorial files	Lists containing SCPIs and explanations	*.tut
Extension	Extension files	Import file for extensions	*rsux
	Waveform	ARB waveforms ARB multi-segment waveforms	*.wv
	Waveform	ARB multi-carrier settings	*.arb_multcarr
	Configuration data	Configuration file for creation of multisegment ARB waveforms	*.inf_mswv
	Play List	ARB Sequencing List	*.wvs
	Data List	Digital modulation data	*.dm_iqd *.tdm
	Control List	Data to control digital modulation	*.dm_iqc
	Settings	Digital modulation settings	*.dm
	User Standard	Digital modulation user standard	*.dm_stu
	User Mapping	Digital modulation user mapping	*.vam
	User Filter	Digital modulation user filter	*.vaf
	Setting	Envelope shaping function (shaping table)	*.iq_lut *.iq_lutpv
	Settings	Envelope shaping function (polynomial coefficients)	*.iq_poly

Function	List type	Contents	File suffix
	Settings	DPD Settings	*.dpd
	Setting	Predistortion function (AM/AM and AM/PM shaping table)	*.dpd_magn *.dpd_phase
	Settings	Predistortion function (polynomial coefficients)	*.dpd_poly
	Settings	Fading data	*.fad
	Settings	Vehicle description file	*.xvd
	Settings	Trajectory description file	*.xtd
	Settings	User defined dynamic	*.fad_udyn
	Settings	Antenna pattern	*.ant_pat
	Settings	Complete setting of the REG dialog	*.reg
	Settings	REG Object settings	*.reg_obj
	Settings	Complete settings of the GSM/EDGE dialog	*.gsm
	Slot	User-defined slot data	*.gsm_slu
	Frame	User-defined frame data	*.gsm_fu
	Slot	Higher symbol rate slot	*.gsm_hslu
	Frame	Higher symbol rate frame	*.gsm_hfu
	Bluetooth Settings	Complete setting of the Bluetooth dialog	*.bto
	TETRA Settings	Complete setting of the TETRA dialog	*.tetra
	Settings	Complete setting of the 3GPP FDD dialog	*.3g
	Settings	Channel coding enhanced DPCH channels (downlink)	*.3g_ccod_dl
	Settings	Channel coding enhanced DPDCH channels (uplink)	*.3g_ccod_ul
	Settings	User scheduling	*.3g_sch
	Settings	Complete setting of the CDMA2000 dialog	*.cdma2k
	Settings	Complete setting of the TD-SCDMA2000 dialog	*.tdscdma
	Settings	Test Model for TD-SCDMA2000	*.tdtmd
	Settings	Complete setting of the 1xEV-DO dialog	*.1xevdo
	Settings	Complete setting of the IEEE 802.11 WLAN dialog	*.wlann
	Settings	Beamforming data	*.bmf
	Settings	Complete setting of the IEEE 802.16 WiMAX dialog	*.wimax
	Settings	Complete setting of the EUTRA/LTE dialog	*.eutra *.lte

Function	List type	Contents	File suffix
	Settings	TDD Settings	*.lte_tdd
	Settings	User-defined IQ-File	*.iqw
	Settings	Complete setting of the 5G dialog	*.c5g
	Settings	User Filter	*.dat
	Settings	Complete setting of the DVB dialog	*.dvb
	Settings	DVB Transport Stream	*.gts *.ts *.trp
	Settings	Complete setting of the NFC dialog	*.nfc
	Settings	Complete setting of the BB Power Ramp dialog	*.pwr_ramp

F Available tutorial files

The R&S SMW provides a set of tutorials embedded in the software. The tutorials are interactive examples and demonstrations on how to perform specific tasks.

This section lists the tutorial files supplied with the R&S SMW.

For information on how to access, start and work with the tutorials, follow the instructions listed in [Chapter 3.5.6.1, "Using the tutorials"](#), on page 104.

Tutorial Type	Tutorial Name	Goal
First steps with the R&S SMW	01_UnmodulatedSignal	Generating a simple unmodulated signal
	02_DigitallyModulatedSignal	Generating a simple WCDMA-3GPP (QPSK 45°Offset) signal with the help of the "Custom Digital Modulation" functionality
	03_ExternalTriggerSignal	Understanding the general principle of external triggering
	04_MarkerSignal	Understanding the principle of marker signal generation
	05_SignalRouting	Get started with signal routing
	06_VisualizeSignal	Verifying the generated signal with the graphics display
	07_SaveRecallSettings	Storing instrument configuration to restore measurements results later
	08_LTESignal_Basics	Generating a simple LTE signal to get familiar with the settings and configuration principle common for the digital standards
	09_MIMO_GettingStarted	Shows how to use coupled baseband sources and select a suitable fading and baseband configuration to generate an EUTRA/LTE signal in 2x2 MIMO configuration
Get started with baseband power measurements	90_BBPowerMeas_ContAcquisition	Using the continuous acquisition mode to analyze a continuous WLAN 802.11 signal
	91_BBPowerMeas_GatedAcquisition	Using the gated acquisition mode to analyze a particular part of a burst WLAN 802.11 signal
	92_BBPowerMeas_MultiGatedAcquisition	Using the multi-gated acquisition mode to analyze a particular part of a burst WLAN 802.11 signal
Advanced Configuration Tasks	30_LTE_CA_2x2MIMO_CrossSched	Generating an 2x2x2 LTE-A signal with two component carriers (intra-band carrier aggregation with cross-carrier scheduling) and 2x2 MIMO each carrier
	40_ArbMultiSegmentSignal	Create a multi-segment waveform.
	99_DefineUserKeyActions	Assigning action to the [USER] key

Glossary: Terms and abbreviations

A

Advanced mode: This term is used as an abbreviation of the "System Configuration" > "Mode" > "Advanced". This mode is available in instruments equipped with some required hardware and software options, like up to 4xR&S SMW-B14 and the R&S SMW-K74.

The advanced mode extends the [Standard mode](#) with MIMO configurations like 2x2 MIMO, higher-order MIMO modes (e.g. 4x4, 2x8 and 8x2 MIMO), or multiple entity modes (e.g. 2x2x2 or 8x1x1 configurations).

Avahi: A licensed [Zeroconf](#) networking feature, including DNS service. The feature enables a device to self-configure an IP address and subnet mask automatically, when a [DHCP](#) server in the LAN is not available.

B

Base unit: This term describes a R&S SMW equipped with the options R&S SMW-B10, R&S SMW-B13 and R&S SMW-B1003.

Baseband: The baseband signal, i.e. the I/Q stream at the output of the "Baseband" block.

In rear cases, the term Baseband is used as abbreviation of a "Baseband" block itself.

Baseband domain: A common term for signal processing up to the I/Q modulation. The signal in the baseband domain of the R&S SMW is digital.

Baseband signal: [Baseband](#)

BBMM: Short designation of the Baseband Main Module (the bottommost board on the rear panel of the R&S SMW).

Beamforming: Steering a beam in the direction of the receiver, e.g. UE

BS: Basestation

C

Channel (Digital Input, Digital Output): The signal provided at a digital interface connector or the output stream at the digital output interface can consist of several multiplexed channels. Do not mistake the term *channel* used here with the terms [Fading channel](#) or signal path.

A digital channel is a part of an I/Q stream.

Clock: A mandatory internal or an external reference clock signal for generating the timing pulse in the instrument.

Complete file path: The complete file path specifies the root directory and all subdirectories that contain a file or folder.

Synonyms to this expression are "full file path" and "absolute file path".

See also [Chapter 14.7.2, "Accessing files in the default or in a specified directory"](#), on page 919.

Computer name: [Hostname](#)

Continuous Wave Mode: [CW/Mod](#)

Coupled sources: This term is used as an abbreviation of the "System Configuration" > "BB Source Config" > "Coupled Sources"/"Coupled Sources per Entity".

With coupled sources, all required baseband signals are generated out of the same baseband source.

Coupled trigger settings: To enable simultaneous signal generation in all basebands, the R&S SMW couples the trigger settings in the available basebands in any instrument's configuration that involves signal routing with signal addition. For example, in configurations like MIMO configuration, routing and summing of basebands and/or streams.

CW/Mod: An internally generated control signal that turns off/on digital modulation, i.e. the signal is generated in unmodulated form.

D

Daisy chain: A connection scheme in which instruments are connected together in sequence, i.e. an output of the first one is connected to an input of the second one, etc.

DHCP: Dynamic Host Configuration Protocol

DNS: Domain Name System server

E

e.g.: For example

Earlier RF hardware versions: Refers to instruments equipped with former hardware assemblies.

To improve the signal performance of the R&S SMW, several hardware components in the RF domain have been replaced. New option numbers denote the hardware modifications, as for example R&S SMW-B1006. This term denotes the differences to previous versions of the hardware assemblies and the corresponding option numbers.

See [Chapter A, "RF hardware versions"](#), on page 1391.

Entity: An entity is a *self-contained independent system*, consisting of a baseband source, a fading simulator, a noise generator, and an RF part. An entity describes the desired signal, modulated on a common carrier frequency. An example of an entity is a

user/mobile station or a cell/base station in one digital standard (e.g. 3GPP FDD, EUTRA/LTE, etc.).

The R&S SMW can generate the signals of up to 4 entities with a 2x2 [MIMO](#) each or up to 8 [SISO](#) systems.

F

Fading channel: In a 2x2 MIMO fading configuration, there are four fading channels between the transmit (Tx) and the receive (Rx) antennas. In this description, each fading channel is represented as a block with name following the naming convention "F_{<Tx><Rx>}", where Tx and Rx are the antennas (e.g. A and B in a 2x2 MIMO configuration)

Do not mistake the terms fading channel and [Fading path](#).

Fading path: Each [Fading channel](#) consists of several fading paths. The number of the paths depends on the fading configuration.

File transfer: The transmission of files from or to the instrument by a remote client. The instrument supports the standard methods File Transfer Protocol (FTP) and file sharing according to Server Message Protocol (SAMBAs/SMB).

G

Glossary: List of the often used terms and abbreviations

GUI: Graphical User Interface

H

HDD: Hard disk drive, see [System drive](#)

High frequency options: This term is used as a joint abbreviation of the frequency options R&S SMW-B1031/-B1040/-B1040N. Throughout this description, the designation R&S SMW-B1040 includes the features of both options R&S SMW-B1040/-B1040N.

Hostname: An unambiguous indication of the instrument in a LAN that uses a [DNS](#) server.

The default hostname follows the syntax `SMW-<serial number>`, e.g. `SMW200A-102030`.

See [Serial number](#).

Synonym: [Computer name](#)

HUMS: Health and utilization monitoring system.

I

i.e.: Short for "that is".

I/Q Stream: [Stream](#)

L

Level: In the Baseband domain, a term describing the signal level of the independent I and Q signals during signal processing (e.g. baseband signal leveling, modulation, etc.).

LSB: Least significant bit

LxMxN: Short form of the used system configuration, where L represents the [Entity](#), M the [Baseband](#) and N the [Stream](#).
See also [MxN](#)

M

Marker: User-defined digital signal for synchronizing external devices to the generated data stream.

Do not mistake the term *marker (signal)* used here with the term [Marker \(graphical signal display\)](#).

Marker (graphical signal display): Markers are tools for numerical readout of measured data in diagrams.

Marker signal: [Marker](#)

MIMO: Multiple Input Multiple Output

MSB: Most significant bit

Multi entity: multiple entity

Multiple entities: Term describing a [LxMxN](#) system configuration with [Entity](#) L > 1.

MxN: Representation of a [MIMO](#) system, where M is the number of the transmitting Tx antennas and N the number of the receiving Rx antennas.

N

non-MIMO mode: This term is used interchangeably to the term [Standard mode](#).

NTP: A networking protocol for highly accurate clock synchronization between computer systems and instruments in local area networks, or over the public internet.

P

PC: Personal computer

PN sequence: [PRBS generator](#)

Power: A term describing the signal level in the RF domain or defining the length of the I/Q vector in the baseband domain.

PRBS generator: Delivers pseudo-random binary sequences of differing length and duration. They are known as maximum length sequences, and are generated with the aid of ring shift registers with feedback points determined by the polynomial.

Primary-secondary instrument mode: Setup with two or more R&S SMW or one R&S SMW and several other signal generators such as R&S SGT or R&S SMBV that generates synchronous and time aligned signals.

The primary instrument generates and outputs a dedicated synchronization signal (Sync Out), that has to be fed into the secondary instruments.

See [Chapter 10.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 670.

Product page: A designation of the R&S SMW product page <https://www.rohde-schwarz.com/product/SMW200A.html>

R

Remote access: [Remote operation](#)

Remote control: The operation of the R&S SMW by remote control commands or programs to perform automated tests. The instrument is connected to a system controller via LAN/VXI-11, GPIB or USB using Virtual Instrument Software Architecture (VISA). The instrument is controlled either directly, or supported by instrument drivers.

Remote device: External device controls the R&S SMW in remote operation mode, see [Remote operation](#).

Synonyms: External controller, Client device

Remote operation: Allows you to operate the R&S SMW from a remote device via VNC.

Both the R&S SMW and the remote device are connected in a LAN.

Synonym: Remote access

RF: Radio Frequency

S

Separate sources: Trough this documentation this term is used as an abbreviation of the "System Configuration" > "Baseband Source Config" > "Separate Sources".

With separated baseband sources, the signal in each baseband can be and has to be configured separately.

Serial number: Unique instrument identification, provided on the rear panel of the instrument and required to build the [Computer name](#).

The serial number are the last 6 digits in the string <stock no.>-<serial number>, e.g. SMW200A-102030.

See [Figure 3-5](#).

SISO: Single Input Single Output

Slow IQ: Generation of signals with an artificially reduced speed, e.g. for testing of FPGA-based hardware emulators.

Smart device: A mobile, cordless device, such as a smart phone or tablet, capable of internet browsing.

Synonyms: Smart phone, tablet

SSD: Solid-state drive, see [System drive](#)

Standard baseband: Short designation of R&S SMW equipped with the options **Baseband Generator R&S SMW-B10** and Signal Routing and Main Module **R&S SMW-B13/B13T**.

Standard mode: This term refers to the "System Configuration" > "Mode" > "Standard" setting and is used as an abbreviation/synonym of it throughout this documentation. This mode corresponds to the former Rohde & Schwarz signal generators capabilities, like this of an R&S SMU or R&S AMU base instrument, without the MIMO Fading option R&S SMU/AMU-K74. The representation of the block diagram is "classic", as it is in the former instruments. The block diagram displays all blocks for that the required hardware and software options are installed and shows the signal flow as it is. Compare with [Advanced mode](#).

Star configuration: A connection scheme for several instruments that consists of one central instrument and several other instruments, all connected to the central one.

Stream: An I/Q stream describes the signal at the input of the "I/Q Stream Mapper" up to the output connectors of the instrument.

Symbol Clock: Represents the frequency and exact timing of the transmission of the individual symbols.

Symbol Rate: Calculated as follows:

"Symbol Rate" = "Bit Rate" / Number of bits transmitted with each symbol

Sync signal: In primary-secondary instrument mode, this term describes the signal generated by the primary instrument and fed to the secondary instruments. The synchronization signal is a precise signal that facilitates the time alignment between the instruments and acts as trigger signal.

System drive: The system drive holds the operating system, the firmware, and the stored data. It can be a hard disk drive (HDD) or a solid-state drive (SSD). Throughout this description, the system drive is referred as an internal memory, because the SSD is optional hardware.

T

Trigger: Internally generated or externally supplied signal which starts signal generation at a particular point in time.

Trigger event: A trigger event is caused by the received trigger signal or executed manual trigger.

U

UE: User Equipment

USBTMC: (USB Test & Measurement Class)

A protocol built on top of USB for communication with USB devices. Using VISA library, it supports service request, triggers, and other specific operations, similar to GPIB.

User directory: Describes the default file storage location for user data.

In the file system, user directory is always indicated as **/var/user**.

It is physically located on the [System drive](#).

W

Waveform: A file with settings provided for repeatable tests with the same test signal.

Wideband baseband: Short designation of R&S SMW equipped with the options Wideband Baseband Generator **R&S SMW-B9** and Wideband Main Module **R&S SMW-B13XT**.

Z

Zeroconf: Zero-configuration, see [Avahi](#).

Glossary: Publications and references

Symbols

1DC02: Rohde & Schwarz application note [1DC02](#) "R&S®VISA"

1EF85: Rohde & Schwarz application note [1EF85](#) "Recording and Converting of R&S I/Q Data Files"

1EF90: Rohde & Schwarz application note [1EF90](#) "Speeding up Spectrum Analyzer Measurements"

1EF108: Rohde & Schwarz application note [1EF108](#) "NPR Measurements on Satellite Signals"

1GP53: Rohde & Schwarz application note [1GP53](#) "Arbitrary Waveform Sequencing with Rohde & Schwarz Vector Signal Generators"

1GP60: Rohde & Schwarz application note [1GP60](#) "MATLAB Toolkit for R&S® Signal Generators"

1GP72: Rohde & Schwarz application note [1GP72](#) "Connectivity of Rohde & Schwarz Signal Generators"

1GP88: Rohde & Schwarz application note [1GP88](#) "R&S®ARB Toolbox PC Software User Manual"

1GP96: Rohde & Schwarz application note [1GP96](#) "CDM-Toolbox Digital Modulation in a simple way"

1GP98: Rohde & Schwarz application note [1GP98](#) "SCPI-Recorder Test Automation at Your Fingertips"

1GP103: Rohde & Schwarz application note [1GP103](#) "Connecting and Interfacing with SGMA Instruments"

1GP108: Rohde & Schwarz application note [1GP108](#) "Generating Multiple Phase Coherent Signals – Aligned in Phase and Time"

1GP110: Rohde & Schwarz application note [1GP110](#) "Remote Emulation with the R&S®SMW200A Vector Signal Generator"

1GP112: Rohde & Schwarz white paper [1GP112](#) "Malware Protection"

1GP141: Rohde & Schwarz application note [1GP141](#) "Using R&S® Power Sensors with R&S®Signal Generators"

1MA028: Rohde & Schwarz application note [1MA028](#) "IQWizard IQ-Signal Measurement & Conversion"

1MA074: Rohde & Schwarz application note [1MA074](#) "RSCommander"

1MA99: Rohde & Schwarz application note [1MA99](#) "Guidance on Selecting and Handling Coaxial RF Connectors used with Rohde & Schwarz Test Equipment"

1MA100: Rohde & Schwarz application note [1MA100](#) "Test Port Adapter, R&S Interchangeable Port Connector"

1MA196: Rohde & Schwarz application note [1MA196](#) "R&S®Forum Application for Remote Control of Rohde & Schwarz Instruments"

1MA208: Rohde & Schwarz application note [1MA208](#) "Fast Remote Instrument Control with HiSLIP"

List of commands and waveform tags

:CALibration:ALL[:MEASure]?	932
:CALibration:DATA:EXPort	934
:CALibration:DATA:FACTory:DATE?	934
:CALibration:DElay:MINutes	934
:CALibration:DElay:SHUTdown[:STATe]	934
:CALibration:DElay[:MEASure]?	935
:CALibration<hw>:ALL:DATE?	932
:CALibration<hw>:ALL:INformation?	932
:CALibration<hw>:ALL:TEMP?	933
:CALibration<hw>:ALL:TIME?	933
:CALibration<hw>:CONTinueonerror	933
:CALibration<hw>:DEBUg	935
:CALibration<hw>:FREquency:CONVerter:EXternal?	936
:CALibration<hw>:IQModulator:LOCAl?	935
:CALibration<hw>:LOSCillator:COUPling:LOCAl?	936
:CLOCK:INPut:FREquency?	936
:DEvice:PRESet	917
:DIAGnostic:INFO:OTIME?	938
:DIAGnostic:INFO:POCounT?	939
:DIAGnostic<hw>:BGInfo:CATalog?	938
:DIAGnostic<hw>:BGInfo?	938
:DIAGnostic<hw>:POINt:CATalog?	939
:DIAGnostic<hw>[:MEASure]:POINt?	939
:DISPlay:ANNotation:AMPLitude	949
:DISPlay:ANNotation:FREquency	949
:DISPlay:ANNotation[:ALL]	949
:DISPlay:DIALog:CLOSe	951
:DISPlay:DIALog:CLOSe:ALL	951
:DISPlay:DIALog:ID?	950
:DISPlay:DIALog:OPEN	950
:DISPlay:PSAVe:HOLDoff	948
:DISPlay:PSAVe[:STATe]	948
:DISPlay:UPDate[:STATe]	949
:FORMat:BORDER	952
:FORMat:SREGister	952
:FORMat[:DATA]	952
:HCOPY:DATA?	954
:HCOPY:DEvice:LANGuage	954
:HCOPY:FILE[:NAME]	955
:HCOPY:FILE[:NAME]:AUTO:DIRectory	956
:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar	956
:HCOPY:FILE[:NAME]:AUTO:FILE?	956
:HCOPY:FILE[:NAME]:AUTO:STATe	957
:HCOPY:FILE[:NAME]:AUTO?	956
:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	957
:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?	957

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX.....	958
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATe.....	958
:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe.....	957
:HCOPY:IMAGe:FORMat.....	954
:HCOPY:REGion.....	955
:HCOPY[:EXECute].....	955
:INITiate<hw>[:POWER]:CONTinuous.....	968
:KBOard:LAYout.....	958
:MEMory:HFRee?.....	931
:MMEMory:CATalog:LENGth?.....	924
:MMEMory:CATalog?.....	923
:MMEMory:CDIRectory.....	924
:MMEMory:COPY.....	925
:MMEMory:DATA.....	925
:MMEMory:DATA:UNPRotected.....	926
:MMEMory:DCATalog:LENGth?.....	928
:MMEMory:DCATalog?.....	927
:MMEMory:DELeTe.....	928
:MMEMory:LOAD:STATe.....	928
:MMEMory:MDIRectory.....	929
:MMEMory:MOVE.....	929
:MMEMory:MSIS.....	929
:MMEMory:RDIRectory.....	930
:MMEMory:RDIRectory:RECURSive.....	930
:MMEMory:STORe:STATe.....	930
:OUTPut:ALL[:STATe].....	959
:OUTPut:USER<ch>:DIRectioN.....	1021
:OUTPut:USER<ch>:SIGNal.....	1024
:OUTPut:USER<ch>:TRIGger[:IMMediate].....	1025
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	961
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	961
:OUTPut<hw>:AMODE.....	960
:OUTPut<hw>:BLANK:LIST:STATe.....	960
:OUTPut<hw>:IMPedance?.....	960
:OUTPut<hw>:PROTection:CLear.....	961
:OUTPut<hw>:PROTection:STATe.....	961
:OUTPut<hw>:PROTection:TRIPped?.....	962
:OUTPut<hw>:TM<ch>:DIRectioN.....	1021
:OUTPut<hw>:TM<ch>:SIGNal.....	1022
:OUTPut<hw>[:STATe].....	959
:OUTPut<hw>[:STATe]:PON.....	959
:READ<ch>[:POWER]?.....	968
:SCONfiguration:APPLY.....	993
:SCONfiguration:BASEband:SOURce.....	991
:SCONfiguration:BBBW.....	991
:SCONfiguration:CABW?.....	992
:SCONfiguration:DIQ:BBMM1:CHANnels.....	992
:SCONfiguration:DIQ:BBMM2:CHANnels.....	992
:SCONfiguration:DUPLicate[:STReam].....	993
:SCONfiguration:EXternal:ACONnect.....	998

:SCONfiguration:EXTernal:BBMM<ch>:DIRection?	999
:SCONfiguration:EXTernal:BBMM<ch>:INAME?	1000
:SCONfiguration:EXTernal:BBMM<ch>:IQConnection:STATe?	1000
:SCONfiguration:EXTernal:BBMM<ch>:RCONnection:STATe?	1000
:SCONfiguration:EXTernal:BBMM<ch>:REMote:CONNect	1006
:SCONfiguration:EXTernal:BBMM<ch>:REMote:DETeT?	1005
:SCONfiguration:EXTernal:BBMM<ch>:REMote:DISConnect	1007
:SCONfiguration:EXTernal:BBMM<ch>:REMote:ICONnect	1006
:SCONfiguration:EXTernal:BBMM<ch>:REMote:INFO?	1006
:SCONfiguration:EXTernal:BBMM<ch>:REMote:INITialization:FILE	1008
:SCONfiguration:EXTernal:BBMM<ch>:REMote:ISElect	1005
:SCONfiguration:EXTernal:BBMM<ch>:REMote:SEND	1008
:SCONfiguration:EXTernal:BBMM<ch>:RF:COUPLing	1001
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQUency	1001
:SCONfiguration:EXTernal:BBMM<ch>:RF:FREQUency:OFFSet	1001
:SCONfiguration:EXTernal:BBMM<ch>:RF:POWer	1002
:SCONfiguration:EXTernal:BBMM<ch>:RF:POWer:OFFSet	1002
:SCONfiguration:EXTernal:BBMM<ch>:RF:STATe	1003
:SCONfiguration:EXTernal:CODer<ch>:DIRection?	999
:SCONfiguration:EXTernal:CODer<ch>:INAME?	1000
:SCONfiguration:EXTernal:CODer<ch>:IQConnection:STATe?	1000
:SCONfiguration:EXTernal:CODer<ch>:RCONnection:STATe?	1000
:SCONfiguration:EXTernal:CODer<ch>:REMote:CONNect	1006
:SCONfiguration:EXTernal:CODer<ch>:REMote:DETeT?	1005
:SCONfiguration:EXTernal:CODer<ch>:REMote:DISConnect	1007
:SCONfiguration:EXTernal:CODer<ch>:REMote:ICONnect	1006
:SCONfiguration:EXTernal:CODer<ch>:REMote:INFO?	1006
:SCONfiguration:EXTernal:CODer<ch>:REMote:INITialization:FILE	1008
:SCONfiguration:EXTernal:CODer<ch>:REMote:ISElect	1005
:SCONfiguration:EXTernal:CODer<ch>:REMote:SEND	1008
:SCONfiguration:EXTernal:DISPlay	998
:SCONfiguration:EXTernal:FADer<ch>:DIRection?	999
:SCONfiguration:EXTernal:FADer<ch>:INAME?	1000
:SCONfiguration:EXTernal:FADer<ch>:IQConnection:STATe?	1000
:SCONfiguration:EXTernal:FADer<ch>:RCONnection:STATe?	1000
:SCONfiguration:EXTernal:FADer<ch>:REMote:CONNect	1006
:SCONfiguration:EXTernal:FADer<ch>:REMote:DETeT?	1005
:SCONfiguration:EXTernal:FADer<ch>:REMote:DISConnect	1007
:SCONfiguration:EXTernal:FADer<ch>:REMote:ICONnect	1006
:SCONfiguration:EXTernal:FADer<ch>:REMote:INFO?	1006
:SCONfiguration:EXTernal:FADer<ch>:REMote:INITialization:FILE	1008
:SCONfiguration:EXTernal:FADer<ch>:REMote:ISElect	1005
:SCONfiguration:EXTernal:FADer<ch>:REMote:SEND	1008
:SCONfiguration:EXTernal:FADer<ch>:RF:COUPLing	1001
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQUency	1001
:SCONfiguration:EXTernal:FADer<ch>:RF:FREQUency:OFFSet	1001
:SCONfiguration:EXTernal:FADer<ch>:RF:POWer	1002
:SCONfiguration:EXTernal:FADer<ch>:RF:POWer:OFFSet	1002
:SCONfiguration:EXTernal:FADer<ch>:RF:STATe	1003
:SCONfiguration:EXTernal:IQOutput<ch>:CONNectiOns:CHECK?	1009

:SCONfiguration:EXTErnal:IQOutput<ch>:DIRection?	999
:SCONfiguration:EXTErnal:IQOutput<ch>:INAMe?	1000
:SCONfiguration:EXTErnal:IQOutput<ch>:RCONnection:STATe?	1000
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:CONNect	1006
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:DISConnect	1007
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:ICONnect	1006
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:INFO?	1007
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:INITialization:FILE	1008
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:ISElect	1005
:SCONfiguration:EXTErnal:IQOutput<ch>:REMote:SEND	1008
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:COUPLing	1001
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:FREQuency	1001
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:FREQuency:OFFSet	1001
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:POWEr	1002
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:POWEr:OFFSet	1002
:SCONfiguration:EXTErnal:IQOutput<ch>:RF:STATe	1003
:SCONfiguration:EXTErnal:PBEHaviour	998
:SCONfiguration:EXTErnal:REMote:ADD	1004
:SCONfiguration:EXTErnal:REMote:CLEan	1008
:SCONfiguration:EXTErnal:REMote:CONNect[:ALL]	998
:SCONfiguration:EXTErnal:REMote:DISConnect[:ALL]	998
:SCONfiguration:EXTErnal:REMote:INITialization:CATalog?	1007
:SCONfiguration:EXTErnal:REMote:LIST?	1004
:SCONfiguration:EXTErnal:REMote:PURGe	1008
:SCONfiguration:EXTErnal:REMote:REName	1005
:SCONfiguration:EXTErnal:REMote:SCAN	1003
:SCONfiguration:EXTErnal:REMote:SCAN:STATe?	1003
:SCONfiguration:EXTErnal:RF<ch>:DIRection?	999
:SCONfiguration:EXTErnal:RF<ch>:INAMe?	1000
:SCONfiguration:EXTErnal:RF<ch>:RCONnection:STATe?	1000
:SCONfiguration:EXTErnal:RF<ch>:REMote:CONNect	1006
:SCONfiguration:EXTErnal:RF<ch>:REMote:DISConnect	1007
:SCONfiguration:EXTErnal:RF<ch>:REMote:ICONnect	1006
:SCONfiguration:EXTErnal:RF<ch>:REMote:INFO?	1007
:SCONfiguration:EXTErnal:RF<ch>:REMote:INITialization:FILE	1008
:SCONfiguration:EXTErnal:RF<ch>:REMote:ISElect	1005
:SCONfiguration:EXTErnal:RF<ch>:REMote:SEND	1008
:SCONfiguration:EXTErnal:RF<ch>:RF:COUPLing	1001
:SCONfiguration:EXTErnal:RF<ch>:RF:FREQuency	1001
:SCONfiguration:EXTErnal:RF<ch>:RF:FREQuency:OFFSet	1001
:SCONfiguration:EXTErnal:RF<ch>:RF:POWEr	1002
:SCONfiguration:EXTErnal:RF<ch>:RF:POWEr:OFFSet	1002
:SCONfiguration:EXTErnal:RF<ch>:RF:STATe	1003
:SCONfiguration:FADing	990
:SCONfiguration:MIMO:SUBSet	991
:SCONfiguration:MODE	988
:SCONfiguration:MULTIinstrument:MODE	987
:SCONfiguration:MULTIinstrument:STATe	987
:SCONfiguration:MULTIinstrument:TRIGger:SYNChronization?	987
:SCONfiguration:OUTPut:MAPping:BBMM<ch>:CHANnel<di>:MODE	994

:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:CHANnel<di>:STReam<st>:STATe.....	994
:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPing:BBMM<ch>:STReam<st>:STATe.....	994
:SCONfiguration:OUTPut:MAPPing:FADer<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPing:FADer<ch>:STReam<st>:STATe.....	994
:SCONfiguration:OUTPut:MAPPing:IQOutput<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPing:IQOutput<ch>:STReam<st>:STATe.....	994
:SCONfiguration:OUTPut:MAPPing:RF<ch>:MODE.....	994
:SCONfiguration:OUTPut:MAPPing:RF<ch>:STReam<st>:STATe.....	994
:SCONfiguration:OUTPut:MAPPing:STReam<st>:FOFFset.....	995
:SCONfiguration:OUTPut:MAPPing:STReam<st>:POFFset.....	995
:SCONfiguration:OUTPut:MODE.....	989
:SCONfiguration:PRESet.....	988
:SCONfiguration:RFALignment:ALIGN.....	1013
:SCONfiguration:RFALignment:SETup:CATalog?.....	1012
:SCONfiguration:RFALignment:SETup:FILE.....	1012
:SCONfiguration:RFALignment:SETup:FILE:PREDefined.....	1011
:SCONfiguration:RFALignment:SETup:INFO:CALibration:AGE?.....	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:DATE?.....	1013
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:LIST:VALues?.....	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:MODE?.....	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:LOWer?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:RANGe:UPPer?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:FREQuency:STEP?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:LOCoupling?.....	1017
:SCONfiguration:RFALignment:SETup:INFO:CALibration:PARAMeters?.....	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:LIST:VALues?.....	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:MODE?.....	1015
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:RANGe:LOWer?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:RANGe:UPPer?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:POWER:STEP?.....	1016
:SCONfiguration:RFALignment:SETup:INFO:CALibration:TEMPerature:OFFSet?.....	1014
:SCONfiguration:RFALignment:SETup:INFO:CALibration:TIME?.....	1014
:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:CONStellation?.....	1017
:SCONfiguration:RFALignment:SETup:INFO:WIRing:LO:SOURce?.....	1017
:SCONfiguration:RFALignment:SETup:INFO:WIRing:REF:SOURce?.....	1018
:SCONfiguration:RFALignment:SETup:PREDefined:CATalog?.....	1011
:SCONfiguration:RFALignment:SETup:STATus?.....	1012
:SCONfiguration:RFALignment:STATe.....	1013
:SENSe<ch>[:POWER]:UNIT[:POWER].....	969
:SENSe<ch>[:POWER]:APERTure:DEFault:STATe.....	969
:SENSe<ch>[:POWER]:APERTure:TIME.....	969
:SENSe<ch>[:POWER]:CORRection:SPDevice:LIST?.....	970
:SENSe<ch>[:POWER]:CORRection:SPDevice:SElect.....	970
:SENSe<ch>[:POWER]:CORRection:SPDevice:STATe.....	970
:SENSe<ch>[:POWER]:DISPlay:PERManent:PRiority.....	970
:SENSe<ch>[:POWER]:DISPlay:PERManent:STATe.....	971
:SENSe<ch>[:POWER]:FILTer:LENGth:AUTO?.....	971
:SENSe<ch>[:POWER]:FILTer:LENGth[:USER].....	971
:SENSe<ch>[:POWER]:FILTer:NSRatio.....	972

:SENSe<ch>[:POWER]:FILTer:NSRatio:MTIME.....	972
:SENSe<ch>[:POWER]:FILTer:SONCe.....	973
:SENSe<ch>[:POWER]:FILTer:TYPE.....	973
:SENSe<ch>[:POWER]:FREQuency.....	974
:SENSe<ch>[:POWER]:LOGGing:STATe.....	974
:SENSe<ch>[:POWER]:OFFSet.....	974
:SENSe<ch>[:POWER]:OFFSet:STATe.....	974
:SENSe<ch>[:POWER]:SNUMber?.....	975
:SENSe<ch>[:POWER]:SOURce.....	975
:SENSe<ch>[:POWER]:STATus[:DEVice]?.....	975
:SENSe<ch>[:POWER]:SVERsion?.....	976
:SENSe<ch>[:POWER]:TYPE?.....	976
:SENSe<ch>[:POWER]:ZERO.....	976
:SLISt:CLEAr:LAN.....	966
:SLISt:CLEAr:USB.....	967
:SLISt:CLEAr[:ALL].....	967
:SLISt:ELEMent<ch>:MAPPing.....	967
:SLISt:SCAN:LSENSor.....	966
:SLISt:SCAN:USENSor.....	966
:SLISt:SCAN[:STATe].....	965
:SLISt:SENSor:MAP.....	967
:SLISt[:LIST]?.....	965
:SOURce<hw>:PRESet.....	917
:SOURce<hw>:RFALignment:CALibrated:FREQuency?.....	1293
:SOURce<hw>:RFALignment:CALibrated:POWER:PEP?.....	1293
:SOURce<hw>:RFALignment:CORRection:IQDelay?.....	1295
:SOURce<hw>:RFALignment:CORRection:LEVel?.....	1294
:SOURce<hw>:RFALignment:CORRection:PHASe?.....	1294
:SOURce<hw>:RFALignment:DATTenuation?.....	1294
:SOURce<hw>:RFALignment:FOFFset?.....	1294
:STATus:OPERation:CONDition?.....	1338
:STATus:OPERation:ENABle.....	1339
:STATus:OPERation:NTRansition.....	1339
:STATus:OPERation:PTRansition.....	1339
:STATus:OPERation[:EVENT].....	1339
:STATus:PRESet.....	1340
:STATus:QUEStionable:CONDition.....	1340
:STATus:QUEStionable:ENABle.....	1340
:STATus:QUEStionable:NTRansition.....	1341
:STATus:QUEStionable:PTRansition.....	1341
:STATus:QUEStionable[:EVENT].....	1341
:STATus:QUEue[:NEXT]?.....	1341
:SYSTem:BIOS:VERsion?.....	1336
:SYSTem:COMMunicate:GPIB:LTERminator.....	1319
:SYSTem:COMMunicate:GPIB:RESource?.....	1319
:SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS.....	1319
:SYSTem:COMMunicate:HISLip:RESource?.....	1319
:SYSTem:COMMunicate:NETWork:IPAdDress.....	1320
:SYSTem:COMMunicate:NETWork:IPAdDress:MODE.....	1320
:SYSTem:COMMunicate:NETWork:MACAdDress.....	1320

:SYSTem:COMMunicate:NETWork:RESource?	1320
:SYSTem:COMMunicate:NETWork:REStart	1321
:SYSTem:COMMunicate:NETWork:STATus?	1321
:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain	1321
:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTname	1321
:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup	1322
:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS	1322
:SYSTem:COMMunicate:NETWork[:IPAdDress]:GATeway	1322
:SYSTem:COMMunicate:NETWork[:IPAdDress]:SUBNet:MASK	1322
:SYSTem:COMMunicate:SERial:BAUD	1323
:SYSTem:COMMunicate:SERial:PARity	1323
:SYSTem:COMMunicate:SERial:RESource?	1323
:SYSTem:COMMunicate:SERial:SBITs	1323
:SYSTem:COMMunicate:SOCKet:RESource?	1323
:SYSTem:COMMunicate:USB:RESource?	1324
:SYSTem:DATE	1333
:SYSTem:DFPR?	1337
:SYSTem:DLOCK	1315
:SYSTem:ERRor:ALL?	1312
:SYSTem:ERRor:CODE:ALL?	1313
:SYSTem:ERRor:CODE[:NEXT]?	1313
:SYSTem:ERRor:COUNT?	1313
:SYSTem:ERRor:GNEXt?	1314
:SYSTem:ERRor:HISTory:CLEar	1315
:SYSTem:ERRor:STATic?	1315
:SYSTem:ERRor[:NEXT]?	1314
:SYSTem:FPRreset	918
:SYSTem:HELP:EXPort	1324
:SYSTem:IDENtification	1324
:SYSTem:IDENtification:PRESet	1325
:SYSTem:INFormation:SCPI	1326
:SYSTem:IRESPonse	1325
:SYSTem:KLOCK	1315
:SYSTem:LANGuage	1326
:SYSTem:LOCK:OWNer?	1317
:SYSTem:LOCK:RELease:ALL	1317
:SYSTem:LOCK:REQuest[:EXCLusive]?	1317
:SYSTem:MMEMory:PATH:USER?	1336
:SYSTem:NINFormation?	1316
:SYSTem:NTP:HOSTname	1334
:SYSTem:NTP:STATe	1334
:SYSTem:OPTion:TRIG:LIST?	1333
:SYSTem:OPTion:TRIG[:STATe]	1333
:SYSTem:ORESPonse	1325
:SYSTem:OSYStem?	1336
:SYSTem:PRESet	917
:SYSTem:PROTect<ch>[:STATe]	1318
:SYSTem:RCL	1318
:SYSTem:REBoot	1337
:SYSTem:REStart	1337

:SYSTem:SAV.....	1317
:SYSTem:SECurity:NETWork:AVAHi[:STATe].....	1326
:SYSTem:SECurity:NETWork:FTP[:STATe].....	1326
:SYSTem:SECurity:NETWork:HTTP[:STATe].....	1327
:SYSTem:SECurity:NETWork:RAW[:STATe].....	1327
:SYSTem:SECurity:NETWork:REMSupport[:STATe].....	1327
:SYSTem:SECurity:NETWork:RPC[:STATe].....	1327
:SYSTem:SECurity:NETWork:SMB[:STATe].....	1328
:SYSTem:SECurity:NETWork:SOE[:STATe].....	1328
:SYSTem:SECurity:NETWork:SSH[:STATe].....	1328
:SYSTem:SECurity:NETWork:SWUPdate[:STATe].....	1329
:SYSTem:SECurity:NETWork:VNC[:STATe].....	1329
:SYSTem:SECurity:NETWork[:STATe].....	1329
:SYSTem:SECurity:SANitize[:STATe].....	1329
:SYSTem:SECurity:SUPolicy.....	1330
:SYSTem:SECurity:VOLMode[:STATe].....	1330
:SYSTem:SHUTdown.....	1337
:SYSTem:SPECification:IDENtification:CATalog?.....	1331
:SYSTem:SPECification:PARAmeter?.....	1331
:SYSTem:SPECification:VERSion.....	1331
:SYSTem:SPECification:VERSion:CATalog?.....	1332
:SYSTem:SPECification:VERSion:FACTory?.....	1332
:SYSTem:SPECification?.....	1330
:SYSTem:SRData?.....	1332
:SYSTem:STARtup:COMPLete?.....	1333
:SYSTem:TIME.....	1334
:SYSTem:TIME:PROToCol.....	1335
:SYSTem:TIME:ZONE.....	1335
:SYSTem:TIME:ZONE:CATalog?.....	1335
:SYSTem:ULOCK.....	1316
:SYSTem:UPTime?.....	1336
:SYSTem:VERSion?.....	1336
:SYSTem:WAIT.....	1337
:TEST:BASEband:LOG?.....	1343
:TEST:BASEband?.....	1343
:TEST:BB:BNC:CONNection?.....	1343
:TEST:BB:BNC:DESTination.....	1344
:TEST:BB:BNC:LOG?.....	1344
:TEST:BB:BNC:SOURce.....	1344
:TEST:BB:GENerator:ARBitrary.....	1345
:TEST:BB:GENerator:FREQuency<ch>.....	1345
:TEST:BB:GENerator:GAIN.....	1345
:TEST:BB:GENerator:SOURce.....	1346
:TEST:BB:GENerator:STATe.....	1346
:TEST:PIXel:COLor.....	1347
:TEST:PIXel:GRADient.....	1348
:TEST:PIXel:POINtsize.....	1348
:TEST:PIXel:RGBA.....	1348
:TEST:PIXel:TEXT.....	1348
:TEST:PIXel:WINDow.....	1348

:TEST<hw>:ALL:RESult?	1347
:TEST<hw>:ALL:START	1347
:TEST<hw>:DIReCt:BLOCK:READ?	1346
:TEST<hw>:DIReCt:BLOCK:WRITe	1347
:TRIGger<hw>:FPSWeep:SOURce	1351
:TRIGger<hw>:FSWeep:SOURce	1349
:TRIGger<hw>:FSWeep[:IMMediate]	1351
:TRIGger<hw>:LFFSweep	1352
:TRIGger<hw>:LFFSweep:IMMediate	1351
:TRIGger<hw>:LFFSweep:SOURce	1349
:TRIGger<hw>:PSWeep:SOURce	1349
:TRIGger<hw>:PSWeep[:IMMediate]	1351
:TRIGger<hw>[:SWEep]:SOURce	1349
:TRIGger<hw>[:SWEep][:IMMediate]	1351
:UNIT:ANGLE	1352
:UNIT:POWer	1352
:UNIT:VELOCITY	1353
[:SOURce]:BB:GRAPhics:ADD	1186
[:SOURce]:BB:GRAPhics:CLOSe	1185
[:SOURce]:BB:GRAPhics:FFTFscale	1187
[:SOURce]:BB:GRAPhics:FFTLen	1187
[:SOURce]:BB:GRAPhics:SOURce	1186
[:SOURce]:BB:GRAPhics:SOURce:MUX	1186
[:SOURce]:BB:IMPairment:BBMM<ch>:DELay	1180
[:SOURce]:BB:IMPairment:BBMM<ch>:IQRatio[:MAGNitude]	1181
[:SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:I	1181
[:SOURce]:BB:IMPairment:BBMM<ch>:LEAKage:Q	1181
[:SOURce]:BB:IMPairment:BBMM<ch>:POFFset	1183
[:SOURce]:BB:IMPairment:BBMM<ch>:QUADrature[:ANGLE]	1182
[:SOURce]:BB:IMPairment:BBMM<ch>:SKEW	1182
[:SOURce]:BB:IMPairment:BBMM<ch>:STATe	1183
[:SOURce]:BB:IMPairment:FADer<ch>:DELay	1180
[:SOURce]:BB:IMPairment:FADer<ch>:IQRatio[:MAGNitude]	1181
[:SOURce]:BB:IMPairment:FADer<ch>:LEAKage:I	1182
[:SOURce]:BB:IMPairment:FADer<ch>:LEAKage:Q	1182
[:SOURce]:BB:IMPairment:FADer<ch>:POFFset	1183
[:SOURce]:BB:IMPairment:FADer<ch>:QUADrature[:ANGLE]	1182
[:SOURce]:BB:IMPairment:FADer<ch>:SKEW	1182
[:SOURce]:BB:IMPairment:FADer<ch>:STATe	1183
[:SOURce]:BB:IMPairment:IQOutput<ch>:DELay	1180
[:SOURce]:BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude]	1181
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:I	1182
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:Q	1182
[:SOURce]:BB:IMPairment:IQOutput<ch>:POFFset	1183
[:SOURce]:BB:IMPairment:IQOutput<ch>:QUADrature[:ANGLE]	1182
[:SOURce]:BB:IMPairment:IQOutput<ch>:SKEW	1183
[:SOURce]:BB:IMPairment:IQOutput<ch>:STATe	1183
[:SOURce]:BB:IMPairment:RF<ch>:DELay	1180
[:SOURce]:BB:IMPairment:RF<ch>:IQRatio[:MAGNitude]	1181
[:SOURce]:BB:IMPairment:RF<ch>:LEAKage:I	1182

[SOURce]:BB:IMPAirment:RF<ch>:LEAKage:Q.....	1182
[SOURce]:BB:IMPAirment:RF<ch>:POFFset.....	1183
[SOURce]:BB:IMPAirment:RF<ch>:QUADrature[ANGLE].....	1182
[SOURce]:BB:IMPAirment:RF<ch>:SKEW.....	1183
[SOURce]:BB:IMPAirment:RF<ch>:STATe.....	1183
[SOURce]:BB:MEASurement:POWer:ABORt.....	1193
[SOURce]:BB:MEASurement:POWer:ACQuisition.....	1190
[SOURce]:BB:MEASurement:POWer:ADD.....	1191
[SOURce]:BB:MEASurement:POWer:CHANGe.....	1193
[SOURce]:BB:MEASurement:POWer:DELeTe.....	1193
[SOURce]:BB:MEASurement:POWer:DURation.....	1192
[SOURce]:BB:MEASurement:POWer:EXECute.....	1193
[SOURce]:BB:MEASurement:POWer:GSource.....	1190
[SOURce]:BB:MEASurement:POWer:INDex.....	1192
[SOURce]:BB:MEASurement:POWer:OUTPut.....	1189
[SOURce]:BB:MEASurement:POWer:PEAK?.....	1191
[SOURce]:BB:MEASurement:POWer:PROGress?.....	1192
[SOURce]:BB:MEASurement:POWer:RMODE.....	1190
[SOURce]:BB:MEASurement:POWer:RMS?.....	1191
[SOURce]:BB:MEASurement:POWer:RSTate?.....	1191
[SOURce]:BB:MEASurement:POWer:SOURce.....	1189
[SOURce]:CORRection:CSET:CATalog?.....	1200
[SOURce]:CORRection:CSET:DELeTe.....	1200
[SOURce]:INPut:USER:CLOCK:IMPedance.....	1026
[SOURce]:INPut:USER:CLOCK:LEVel.....	1025
[SOURce]:INPut:USER:CLOCK:SLOPe.....	1026
[SOURce]:INPut:USER:PULM:LEVel.....	1026
[SOURce]:INPut:USER:TRIGger:IMPedance.....	1026
[SOURce]:INPut:USER:TRIGger:LEVel.....	1025
[SOURce]:INPut:USER:TRIGger:SLOPe.....	1027
[SOURce]:INPut:USER<ch>:DIRection.....	1021
[SOURce]:INPut:USER<ch>:SIGNal.....	1023
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CDEvice?.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:NAME.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:SRATe.....	1234
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:STATe.....	1235
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:GDElay:CSTate.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:INTerface.....	1228
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:RESet.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:HOLD:STATe?.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:OFLow:STATe?.....	1232
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:PON.....	1228
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP:MODE.....	1231
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:STEP[INCRement].....	1232

[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:POWer:VIA.....	1230
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SLOW:STATe.....	1228
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe.....	1229
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:COMMon:STATe.....	1233
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:MAX?.....	1235
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SOURce.....	1228
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:SRATe:SUM?.....	1235
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:STATe.....	1227
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:CDEvice?.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:INTerface.....	1228
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:RESet.....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:HOLD:STATe?.....	1233
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:OFLow:STATe?.....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:PON.....	1228
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:LEVel.....	1231
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:PEP.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP:MODE.....	1231
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:STEP[:INCRement].....	1232
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:POWer:VIA.....	1230
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe.....	1229
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:SRATe:SOURce.....	1228
[SOURce]:IQ:OUTPut:DIGital:FADer<ch>:STATe.....	1227
[SOURce]:LFOutput<ch>:BANDwidth?.....	1238
[SOURce]:LFOutput<ch>:OFFSet.....	1240
[SOURce]:LFOutput<ch>:SOURce.....	1241
[SOURce]:LFOutput<ch>:SOURce:PATH.....	1241
[SOURce]:LFOutput<ch>:VOLTage.....	1241
[SOURce]:LFOutput<ch>[:STATe].....	1240
[SOURce]:OCCupy:OPTion.....	1269
[SOURce]:OCCupy:OPTion:CATalog?.....	1269
[SOURce]:OCCupy:OPTion:RENew<ch>.....	1270
[SOURce]:PM<ch>[:DEViation].....	1053
[SOURce]:ROSCillator:EXTernal:FREQuency.....	1290
[SOURce]:ROSCillator:EXTernal:FREQuency:VARiable.....	1290
[SOURce]:ROSCillator:EXTernal:MLRange?.....	1291
[SOURce]:ROSCillator:EXTernal:NSBandwidth?.....	1292
[SOURce]:ROSCillator:EXTernal:RFOF[:STATe].....	1290
[SOURce]:ROSCillator:EXTernal:SBANDwidth.....	1291
[SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	1292
[SOURce]:ROSCillator:SOURce.....	1290
[SOURce]:ROSCillator[:INTernal]:ADJust:VALue.....	1292
[SOURce]:ROSCillator[:INTernal]:ADJust[:STATe].....	1292
[SOURce<hw>]:AM:DEPTh:SUM.....	1043
[SOURce<hw>]:AM:DEViation:MODE.....	1043
[SOURce<hw>]:AM:RATio.....	1043
[SOURce<hw>]:AM<ch>:SENSitivity.....	1044
[SOURce<hw>]:AM<ch>:SOURce.....	1042
[SOURce<hw>]:AM<ch>:STATe.....	1042
[SOURce<hw>]:AM<ch>[:DEPTh].....	1042
[SOURce<hw>]:AWGN:BRATe.....	1176

[SOURce<hw>]:AWGN:BWIDth.....	1174
[SOURce<hw>]:AWGN:BWIDth:NOISe?.....	1175
[SOURce<hw>]:AWGN:BWIDth:RATio.....	1174
[SOURce<hw>]:AWGN:CMODE[:STATe].....	1173
[SOURce<hw>]:AWGN:CNRatio.....	1176
[SOURce<hw>]:AWGN:DISP:MODE.....	1175
[SOURce<hw>]:AWGN:ENRatio.....	1176
[SOURce<hw>]:AWGN:FREQuency:CENTer:OFFSet.....	1178
[SOURce<hw>]:AWGN:FREQuency:RESult?.....	1179
[SOURce<hw>]:AWGN:FREQuency:TARGet.....	1178
[SOURce<hw>]:AWGN:MODE.....	1174
[SOURce<hw>]:AWGN:POWer:CARRier.....	1177
[SOURce<hw>]:AWGN:POWer:MODE.....	1175
[SOURce<hw>]:AWGN:POWer:NOISe.....	1177
[SOURce<hw>]:AWGN:POWer:NOISe:TOTal?.....	1177
[SOURce<hw>]:AWGN:POWer:RMODE.....	1176
[SOURce<hw>]:AWGN:POWer:SUM:PEP?.....	1178
[SOURce<hw>]:AWGN:POWer:SUM?.....	1177
[SOURce<hw>]:AWGN:STATe.....	1173
[SOURce<hw>]:BB:ARBitrary:CLOCK.....	1113
[SOURce<hw>]:BB:ARBitrary:CLOCK:MODE.....	1150
[SOURce<hw>]:BB:ARBitrary:CLOCK:SOURce.....	1150
[SOURce<hw>]:BB:ARBitrary:COUPled:STATe.....	1114
[SOURce<hw>]:BB:ARBitrary:COUPled:TRIGger:DELay:OFFSet.....	1114
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:COUNT.....	1125
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:MODE.....	1125
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:SPACing.....	1125
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:CONFLICT?.....	1131
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:DELay.....	1131
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FILE.....	1131
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FREQuency.....	1130
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:PHASe.....	1130
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:POWer.....	1130
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:STATe.....	1129
[SOURce<hw>]:BB:ARBitrary:MCARrier:CFACTOR:MODE.....	1126
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CFACTOR.....	1127
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CUTOFF.....	1127
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping[:STATe].....	1127
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOAD.....	1128
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOCK?.....	1129
[SOURce<hw>]:BB:ARBitrary:MCARrier:CREate.....	1129
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay:STEP.....	1133
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay[:START].....	1134
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:EXECute.....	1134
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:FILE.....	1134
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe:STEP.....	1133
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe[:START].....	1133
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWer:STEP.....	1132
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWer[:START].....	1132
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:START.....	1132

[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STATe.....	1131
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STOP.....	1132
[SOURce<hw>]:BB:ARBitrary:MCARrier:OFILe.....	1128
[SOURce<hw>]:BB:ARBitrary:MCARrier:POWEr:REFeRence.....	1128
[SOURce<hw>]:BB:ARBitrary:MCARrier:PRESet.....	1124
[SOURce<hw>]:BB:ARBitrary:MCARrier:SAMPles?.....	1126
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:CATalog?.....	1124
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:LOAD.....	1124
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE.....	1125
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME.....	1126
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME:MODE.....	1128
[SOURce<hw>]:BB:ARBitrary:NOTCh.....	1136
[SOURce<hw>]:BB:ARBitrary:NOTCh:APPLy.....	1138
[SOURce<hw>]:BB:ARBitrary:NOTCh:CLOCK?.....	1136
[SOURce<hw>]:BB:ARBitrary:NOTCh:COUNt.....	1136
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative.....	1138
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth[:ABSolute].....	1137
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:FREQuency:OFFSet.....	1137
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:STATe.....	1137
[SOURce<hw>]:BB:ARBitrary:PRAMP[:STATe].....	1106
[SOURce<hw>]:BB:ARBitrary:PRESet.....	1105
[SOURce<hw>]:BB:ARBitrary:SIGNAL:TYPE.....	1106
[SOURce<hw>]:BB:ARBitrary:STATe.....	1105
[SOURce<hw>]:BB:ARBitrary:TRIGger:ARM:EXECute.....	1143
[SOURce<hw>]:BB:ARBitrary:TRIGger:DELAy:UNIT.....	1145
[SOURce<hw>]:BB:ARBitrary:TRIGger:EXECute.....	1143
[SOURce<hw>]:BB:ARBitrary:TRIGger:OBASeband:DELAy.....	1144
[SOURce<hw>]:BB:ARBitrary:TRIGger:OBASeband:INHibit.....	1145
[SOURce<hw>]:BB:ARBitrary:TRIGger:OBASeband:RDELAy?.....	1144
[SOURce<hw>]:BB:ARBitrary:TRIGger:OBASeband:TDELAy.....	1145
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DELAy.....	1149
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DINSec?.....	1149
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:MODE.....	1147
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:OFFTime.....	1147
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:ONTIME.....	1147
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PATtern.....	1148
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:DIVider.....	1148
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	1149
[SOURce<hw>]:BB:ARBitrary:TRIGger:PTIME?.....	1144
[SOURce<hw>]:BB:ARBitrary:TRIGger:RMODE?.....	1141
[SOURce<hw>]:BB:ARBitrary:TRIGger:SLENGth.....	1142
[SOURce<hw>]:BB:ARBitrary:TRIGger:SLUNit.....	1143
[SOURce<hw>]:BB:ARBitrary:TRIGger:SMODE.....	1119
[SOURce<hw>]:BB:ARBitrary:TRIGger:SOURce.....	1140
[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:DATE.....	1141
[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:TIME.....	1141
[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME[:STATe].....	1142
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTeRnal]:DELAy.....	1145
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTeRnal]:INHibit.....	1147
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTeRnal]:RDELAy?.....	1146

[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal]:SYNChronize:OUTPut.....	1143
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal]:TDElay.....	1146
[SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:CREate.....	1110
[SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:SAMPles.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:I.....	1107
[SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:Q.....	1107
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude.....	1107
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:FREQuency.....	1107
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:OFFSet.....	1107
[SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles.....	1108
[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed.....	1109
[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:FREQuency.....	1108
[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:PHASe.....	1108
[SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:SAMPles.....	1109
[SOURce<hw>]:BB:ARbitrary:WAVEform:CATalog:LENGth?.....	1111
[SOURce<hw>]:BB:ARbitrary:WAVEform:CATalog?.....	1110
[SOURce<hw>]:BB:ARbitrary:WAVEform:CLOCK.....	1115
[SOURce<hw>]:BB:ARbitrary:WAVEform:DATA.....	1112
[SOURce<hw>]:BB:ARbitrary:WAVEform:DELeTe.....	1111
[SOURce<hw>]:BB:ARbitrary:WAVEform:FREE?.....	1111
[SOURce<hw>]:BB:ARbitrary:WAVEform:POINts?.....	1112
[SOURce<hw>]:BB:ARbitrary:WAVEform:SELeCt.....	1111
[SOURce<hw>]:BB:ARbitrary:WAVEform:TAG?.....	1113
[SOURce<hw>]:BB:ARbitrary:WSEGment:CLOAd.....	1118
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:BLANK:APPend.....	1120
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:CATalog?.....	1120
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:CLOCK.....	1121
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:CLOCK:MODE.....	1121
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:COMMeNt.....	1122
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:DELeTe.....	1122
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:LEVel[:MODE].....	1121
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:MARKer:ESEGment.....	1119
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:MARKer:FSEGment.....	1119
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:MARKer:MODE.....	1119
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:OFILe.....	1122
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:SEGMeNt:APPend.....	1122
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:SEGMeNt:CATalog?.....	1117
[SOURce<hw>]:BB:ARbitrary:WSEGment:CONFIgure:SELeCt.....	1123
[SOURce<hw>]:BB:ARbitrary:WSEGment:CREate.....	1118
[SOURce<hw>]:BB:ARbitrary:WSEGment:LMODe.....	1117
[SOURce<hw>]:BB:ARbitrary:WSEGment:NAME?.....	1116
[SOURce<hw>]:BB:ARbitrary:WSEGment:NEXt.....	1116
[SOURce<hw>]:BB:ARbitrary:WSEGment:NEXt:EXECute.....	1116
[SOURce<hw>]:BB:ARbitrary:WSEGment:NEXt:SOURce.....	1116
[SOURce<hw>]:BB:ARbitrary:WSEGment:SEQuence:APPend.....	1117

[SOURce<hw>]:BB:ARbitrary:WSEgment:SElect.....	1117
[SOURce<hw>]:BB:ARbitrary:WSEgment?.....	1115
[SOURce<hw>]:BB:ARbitrary:TRIGger:SEquence.....	1140
[SOURce<hw>]:BB:CFACTOR?.....	1062
[SOURce<hw>]:BB:CODer:MODE.....	1062
[SOURce<hw>]:BB:DM:APSK16:GAMMa.....	1076
[SOURce<hw>]:BB:DM:APSK32:GAMMa.....	1076
[SOURce<hw>]:BB:DM:AQPSk:ANGLE.....	1074
[SOURce<hw>]:BB:DM:ASK:DEPTh.....	1075
[SOURce<hw>]:BB:DM:CLISt:CATalog?.....	1089
[SOURce<hw>]:BB:DM:CLISt:COPI.....	1093
[SOURce<hw>]:BB:DM:CLISt:DATA.....	1093
[SOURce<hw>]:BB:DM:CLISt:DELe.....	1090
[SOURce<hw>]:BB:DM:CLISt:FREE?.....	1091
[SOURce<hw>]:BB:DM:CLISt:POINts?.....	1092
[SOURce<hw>]:BB:DM:CLISt:SElect.....	1090
[SOURce<hw>]:BB:DM:CLISt:TAG?.....	1095
[SOURce<hw>]:BB:DM:CLOCK:MODE.....	1089
[SOURce<hw>]:BB:DM:CLOCK:SOURce.....	1089
[SOURce<hw>]:BB:DM:CODing.....	1074
[SOURce<hw>]:BB:DM:DLISt:CATalog?.....	1089
[SOURce<hw>]:BB:DM:DLISt:COPI.....	1093
[SOURce<hw>]:BB:DM:DLISt:DATA.....	1094
[SOURce<hw>]:BB:DM:DLISt:DATA:APPend.....	1095
[SOURce<hw>]:BB:DM:DLISt:DELe.....	1091
[SOURce<hw>]:BB:DM:DLISt:FREE?.....	1091
[SOURce<hw>]:BB:DM:DLISt:POINts.....	1092
[SOURce<hw>]:BB:DM:DLISt:SElect.....	1090
[SOURce<hw>]:BB:DM:DLISt:TAG?.....	1095
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:GAUSS.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:LOWPass.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:COSSine:BANDwidth.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:COSSine[ROLLoff].....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:GAUSS.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASS.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASSEVM.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:PGAuss.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:RCOSSine.....	1072
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:SPHase.....	1072
[SOURce<hw>]:BB:DM:FILTer:TYPE.....	1072
[SOURce<hw>]:BB:DM:FLISt:CATalog?.....	1089
[SOURce<hw>]:BB:DM:FLISt:DELe.....	1090
[SOURce<hw>]:BB:DM:FLISt:FREE?.....	1091
[SOURce<hw>]:BB:DM:FLISt:POINts?.....	1092
[SOURce<hw>]:BB:DM:FLISt:SElect.....	1090
[SOURce<hw>]:BB:DM:FORMat.....	1074
[SOURce<hw>]:BB:DM:FSK:DEViation.....	1075
[SOURce<hw>]:BB:DM:FSK:VARiable:SYMBOL<ch0>:DEViation.....	1075
[SOURce<hw>]:BB:DM:FSK:VARiable:TYPE.....	1076

[SOURce<hw>]:BB:DM:MLIST:CATalog?	1089
[SOURce<hw>]:BB:DM:MLIST:DELeTe	1091
[SOURce<hw>]:BB:DM:MLIST:FREE?	1091
[SOURce<hw>]:BB:DM:MLIST:POINts?	1092
[SOURce<hw>]:BB:DM:MLIST:SELeCt	1090
[SOURce<hw>]:BB:DM:PATTeRn	1068
[SOURce<hw>]:BB:DM:PRAMp:ATTenuation	1078
[SOURce<hw>]:BB:DM:PRAMp:BBONLY[:STATe]	1079
[SOURce<hw>]:BB:DM:PRAMp:FDELaY	1078
[SOURce<hw>]:BB:DM:PRAMp:RDELaY	1078
[SOURce<hw>]:BB:DM:PRAMp:SHApe	1077
[SOURce<hw>]:BB:DM:PRAMp:SOURce	1077
[SOURce<hw>]:BB:DM:PRAMp:TIME	1078
[SOURce<hw>]:BB:DM:PRAMp[:STATe]	1079
[SOURce<hw>]:BB:DM:PRBS[:LENGth]	1068
[SOURce<hw>]:BB:DM:PRESet	1067
[SOURce<hw>]:BB:DM:SETTing:CATalog?	1070
[SOURce<hw>]:BB:DM:SETTing:DELeTe	1071
[SOURce<hw>]:BB:DM:SETTing:LOAD	1071
[SOURce<hw>]:BB:DM:SETTing:STORe	1071
[SOURce<hw>]:BB:DM:SMODulation:BORDeR	1069
[SOURce<hw>]:BB:DM:SMODulation:CDTDeViation	1069
[SOURce<hw>]:BB:DM:SMODulation:CLOCK:SLOPe:BIT	1069
[SOURce<hw>]:BB:DM:SMODulation:RCVStaTe?	1070
[SOURce<hw>]:BB:DM:SMODulation:THROughput:DELaY?	1070
[SOURce<hw>]:BB:DM:SOURce	1068
[SOURce<hw>]:BB:DM:SRATe	1067
[SOURce<hw>]:BB:DM:STANdard	1067
[SOURce<hw>]:BB:DM:STANdard:ULIST:CATalog?	1070
[SOURce<hw>]:BB:DM:STANdard:ULIST:DELeTe	1071
[SOURce<hw>]:BB:DM:STANdard:ULIST:LOAD	1071
[SOURce<hw>]:BB:DM:STANdard:ULIST:STORe	1071
[SOURce<hw>]:BB:DM:STATe	1066
[SOURce<hw>]:BB:DM:SWITChing:STATe	1077
[SOURce<hw>]:BB:DM:TRIGGer:ARM:EXECute	1083
[SOURce<hw>]:BB:DM:TRIGGer:DELaY:UNIT	1084
[SOURce<hw>]:BB:DM:TRIGGer:EXECute	1083
[SOURce<hw>]:BB:DM:TRIGGer:EXTeRnal:SYNChRize:OUTPut	1083
[SOURce<hw>]:BB:DM:TRIGGer:OBASeBand:DELaY	1083
[SOURce<hw>]:BB:DM:TRIGGer:OBASeBand:INHibit	1084
[SOURce<hw>]:BB:DM:TRIGGer:OBASeBand:RDELaY?	1084
[SOURce<hw>]:BB:DM:TRIGGer:OBASeBand:TDELaY	1084
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:DELaY	1088
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:MODE	1086
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:OFFTime	1087
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:ONTime	1087
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:PATTeRn	1087
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:PULSe:DIVider	1088
[SOURce<hw>]:BB:DM:TRIGGer:OUTPut<ch>:PULSe:FREQuency?	1088
[SOURce<hw>]:BB:DM:TRIGGer:RMODE?	1081

[SOURce<hw>]:BB:DM:TRIGger:SEnGth.....	1081
[SOURce<hw>]:BB:DM:TRIGger:SOURce.....	1080
[SOURce<hw>]:BB:DM:TRIGger:TIME:DATE.....	1081
[SOURce<hw>]:BB:DM:TRIGger:TIME:TIME.....	1082
[SOURce<hw>]:BB:DM:TRIGger:TIME[:STATe].....	1082
[SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:DELay.....	1085
[SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:INHibit.....	1086
[SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:RDELay?.....	1086
[SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:TDELay.....	1085
[SOURce<hw>]:BB:DM[:TRIGger]:SEquence.....	1080
[SOURce<hw>]:BB:DVB:NOTCh.....	1135
[SOURce<hw>]:BB:DVB:NOTCh:APPLy.....	1138
[SOURce<hw>]:BB:DVB:NOTCh:CLOCK?.....	1136
[SOURce<hw>]:BB:DVB:NOTCh:COUNT.....	1136
[SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth:RELative.....	1138
[SOURce<hw>]:BB:DVB:NOTCh<ch>:BWIDth[:ABSolute].....	1137
[SOURce<hw>]:BB:DVB:NOTCh<ch>:FREQuency:OFFSet.....	1137
[SOURce<hw>]:BB:DVB:NOTCh<ch>:STATe.....	1136
[SOURce<hw>]:BB:EUTRa:NOTCh.....	1135
[SOURce<hw>]:BB:EUTRa:NOTCh:APPLy.....	1138
[SOURce<hw>]:BB:EUTRa:NOTCh:CLOCK?.....	1136
[SOURce<hw>]:BB:EUTRa:NOTCh:COUNT.....	1136
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth:RELative.....	1138
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute].....	1137
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet.....	1137
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:STATe.....	1136
[SOURce<hw>]:BB:FOFFset.....	1060
[SOURce<hw>]:BB:GRAPhics:MODE.....	1184
[SOURce<hw>]:BB:GRAPhics:SRATe:MODE.....	1185
[SOURce<hw>]:BB:GRAPhics:SRATe:USER.....	1185
[SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce.....	1187
[SOURce<hw>]:BB:IMPairment:OPTimization:MODE.....	1184
[SOURce<hw>]:BB:IQGain.....	1219
[SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	1156
[SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe.....	1159
[SOURce<hw>]:BB:MCCW:CARRier:LIST:POWeR.....	1160
[SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe.....	1158
[SOURce<hw>]:BB:MCCW:CARRier:PHASe.....	1159
[SOURce<hw>]:BB:MCCW:CARRier:POWeR.....	1160
[SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	1156
[SOURce<hw>]:BB:MCCW:CARRier:STATe.....	1158
[SOURce<hw>]:BB:MCCW:CFACTor.....	1157
[SOURce<hw>]:BB:MCCW:CFACTor:ACTual?.....	1157
[SOURce<hw>]:BB:MCCW:CFACTor:MODE.....	1157
[SOURce<hw>]:BB:MCCW:CLOCK:MODE.....	1169
[SOURce<hw>]:BB:MCCW:CLOCK:SOURce.....	1169
[SOURce<hw>]:BB:MCCW:CLOCK?.....	1157
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute.....	1162
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START].....	1160

[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START]	1160
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:START.....	1161
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe.....	1162
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP.....	1161
[SOURce<hw>]:BB:MCCW:PRESet.....	1155
[SOURce<hw>]:BB:MCCW:STATe.....	1156
[SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute.....	1165
[SOURce<hw>]:BB:MCCW:TRIGger:EXECute.....	1165
[SOURce<hw>]:BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut.....	1165
[SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DELay.....	1166
[SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit.....	1166
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay.....	1169
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE.....	1167
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime.....	1167
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime.....	1167
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATtern.....	1168
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider.....	1168
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?	1168
[SOURce<hw>]:BB:MCCW:TRIGger:RMODE?	1163
[SOURce<hw>]:BB:MCCW:TRIGger:SLENgth.....	1165
[SOURce<hw>]:BB:MCCW:TRIGger:SOURce.....	1163
[SOURce<hw>]:BB:MCCW:TRIGger:TIME:DATE.....	1163
[SOURce<hw>]:BB:MCCW:TRIGger:TIME:TIME.....	1164
[SOURce<hw>]:BB:MCCW:TRIGger:TIME[:STATe].....	1164
[SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:DELay.....	1166
[SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:INHibit.....	1167
[SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence.....	1162
[SOURce<hw>]:BB:OFDM:NOTCh.....	1135
[SOURce<hw>]:BB:OFDM:NOTCh:APPLy.....	1138
[SOURce<hw>]:BB:OFDM:NOTCh:CLOCK?	1136
[SOURce<hw>]:BB:OFDM:NOTCh:COUNt.....	1136
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth:RELative.....	1138
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute].....	1137
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:FREQuency:OFFSet.....	1137
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:STATe.....	1136
[SOURce<hw>]:BB:ONEWeb:NOTCh.....	1136
[SOURce<hw>]:BB:ONEWeb:NOTCh:APPLy.....	1138
[SOURce<hw>]:BB:ONEWeb:NOTCh:CLOCK?	1136
[SOURce<hw>]:BB:ONEWeb:NOTCh:COUNt.....	1136
[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth:RELative.....	1138
[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:BWIDth[:ABSolute].....	1137
[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:FREQuency:OFFSet.....	1137
[SOURce<hw>]:BB:ONEWeb:NOTCh<ch>:STATe.....	1137
[SOURce<hw>]:BB:PGAin.....	1061
[SOURce<hw>]:BB:POFFset.....	1061
[SOURce<hw>]:BB:POWer:PEAK?	1062
[SOURce<hw>]:BB:POWer:RMS?	1063
[SOURce<hw>]:BB:PROGress:MCODer:ARBItrary:MCARrier?	1194
[SOURce<hw>]:BB:PROGress:MCODer:ARBItrary:WSEGment?	1194

[SOURce<hw>]:BB:PROGress:MCODer:DM:FiLTeR?	1194
[SOURce<hw>]:BB:PROGress:MCODer?	1194
[SOURce<hw>]:BB:ROUte	1061
[SOURce<hw>]:BBIN:ALEVel:EXECute	1037
[SOURce<hw>]:BBIN:CDEViCe?	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATe	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:NAME	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:CFACtor	1032
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:PEAK	1033
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:RMS	1033
[SOURce<hw>]:BBIN:CHANnel<ch0>:SRATe	1033
[SOURce<hw>]:BBIN:DIGital:ASETting:STATe	1036
[SOURce<hw>]:BBIN:DIGital:INTerface	1031
[SOURce<hw>]:BBIN:DIGital:SOURce	1031
[SOURce<hw>]:BBIN:FOFFset	1060
[SOURce<hw>]:BBIN:IQSWap[:STATe]	1034
[SOURce<hw>]:BBIN:MODE	1034
[SOURce<hw>]:BBIN:MPERiod	1036
[SOURce<hw>]:BBIN:OLOad:HOLD:RESet	1038
[SOURce<hw>]:BBIN:OLOad:HOLD:STATe?	1038
[SOURce<hw>]:BBIN:OLOad:STATe?	1038
[SOURce<hw>]:BBIN:PGAin	1061
[SOURce<hw>]:BBIN:POFFset	1060
[SOURce<hw>]:BBIN:POWer:CFACtor	1037
[SOURce<hw>]:BBIN:POWer:PEAK	1037
[SOURce<hw>]:BBIN:POWer:RMS?	1038
[SOURce<hw>]:BBIN:ROUte	1061
[SOURce<hw>]:BBIN:SRATe:MAX?	1035
[SOURce<hw>]:BBIN:SRATe:SOURce	1034
[SOURce<hw>]:BBIN:SRATe:SUM?	1035
[SOURce<hw>]:BBIN:SRATe[:ACTual]	1036
[SOURce<hw>]:BBIN:STATe	1031
[SOURce<hw>]:COMBined:FREQuency:START	1303
[SOURce<hw>]:COMBined:FREQuency:STOP	1304
[SOURce<hw>]:COMBined:POWer:START	1304
[SOURce<hw>]:COMBined:POWer:STOP	1304
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency	1197
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?	1198
[SOURce<hw>]:CORRection:CSET:DATA:POWer	1198
[SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?	1198
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe	1198
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe	1199
[SOURce<hw>]:CORRection:CSET[:SELeCt]	1199
[SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?	1201
[SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension	1201
[SOURce<hw>]:CORRection:DEXChange:AFILe:SELeCt	1201
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn	1202
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal	1202
[SOURce<hw>]:CORRection:DEXChange:EXECute	1202
[SOURce<hw>]:CORRection:DEXChange:MODE	1202

[SOURce<hw>]:CORRection:DEXChange:SElect.....	1203
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE.....	1204
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue].....	1204
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe].....	1205
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:LOCAl.....	1205
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE.....	1203
[SOURce<hw>]:CORRection:OPTimize:EVM.....	1200
[SOURce<hw>]:CORRection:VALue?.....	1199
[SOURce<hw>]:CORRection:ZERoing:STATe.....	1199
[SOURce<hw>]:CORRection[:STATe].....	1200
[SOURce<hw>]:DM:FILTer:PARAmeter.....	1073
[SOURce<hw>]:FM:DEViation:MODE.....	1047
[SOURce<hw>]:FM:DEViation:SUM.....	1048
[SOURce<hw>]:FM:MODE.....	1048
[SOURce<hw>]:FM:RATIo.....	1048
[SOURce<hw>]:FM:SENSitivity?.....	1049
[SOURce<hw>]:FM<ch>:SOURce.....	1046
[SOURce<hw>]:FM<ch>:STATe.....	1046
[SOURce<hw>]:FM<ch>[:DEViation].....	1046
[SOURce<hw>]:FREQuency:CENTer.....	1213
[SOURce<hw>]:FREQuency:CONVerter:EXTerMal:OVERrange:ALLowed[:STATe]?.....	1215
[SOURce<hw>]:FREQuency:CONVerter:EXTerMal:OVERrange:FREQuency:MAX?.....	1216
[SOURce<hw>]:FREQuency:CONVerter:EXTerMal:OVERrange:FREQuency:MIN?.....	1216
[SOURce<hw>]:FREQuency:CONVerter:EXTerMal:OVERrange[:STATe].....	1216
[SOURce<hw>]:FREQuency:LOSCillator:INPut:FREQuency?.....	1207
[SOURce<hw>]:FREQuency:LOSCillator:MODE.....	1208
[SOURce<hw>]:FREQuency:LOSCillator:OUTPut:FREQuency?.....	1209
[SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe.....	1209
[SOURce<hw>]:FREQuency:MANual.....	1211
[SOURce<hw>]:FREQuency:MODE.....	1209
[SOURce<hw>]:FREQuency:MULTiplier.....	1212
[SOURce<hw>]:FREQuency:OFFSet.....	1212
[SOURce<hw>]:FREQuency:SPAN.....	1213
[SOURce<hw>]:FREQuency:START.....	1213
[SOURce<hw>]:FREQuency:STEP:MODE.....	1214
[SOURce<hw>]:FREQuency:STEP[:INCRement].....	1214
[SOURce<hw>]:FREQuency:STOP.....	1214
[SOURce<hw>]:FREQuency[:CW FIXed].....	1210
[SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	1211
[SOURce<hw>]:INPut:MODext:COUPling<ch>.....	1217
[SOURce<hw>]:INPut:MODext:IMPedance<ch>.....	1217
[SOURce<hw>]:INPut:TM:CLOCK:IMPedance.....	1027
[SOURce<hw>]:INPut:TM:CLOCK:LEVel.....	1027
[SOURce<hw>]:INPut:TM:CLOCK:SLOPe.....	1028
[SOURce<hw>]:INPut:TM:TRIGger:IMPedance.....	1027
[SOURce<hw>]:INPut:TM:TRIGger:LEVel.....	1027
[SOURce<hw>]:INPut:TM:TRIGger:SLOPe.....	1028
[SOURce<hw>]:INPut:TM<ch>:DIRection.....	1021
[SOURce<hw>]:INPut:TM<ch>:SIGNal.....	1022
[SOURce<hw>]:INPut:TRIGger:SLOPe.....	1217

[SOURce<hw>]:IQ:CRESTfactor.....	1219
[SOURce<hw>]:IQ:GAIN.....	1219
[SOURce<hw>]:IQ:IMPAirment:IQRatio[:MAGNitude].....	1181
[SOURce<hw>]:IQ:IMPAirment:LEAKage:I.....	1181
[SOURce<hw>]:IQ:IMPAirment:LEAKage:Q.....	1181
[SOURce<hw>]:IQ:IMPAirment:QUADrature[:ANGLE].....	1182
[SOURce<hw>]:IQ:IMPAirment[:STATE].....	1183
[SOURce<hw>]:IQ:OUTPut:ANALog:STATe.....	1221
[SOURce<hw>]:IQ:OUTPut:LEVel.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATE].....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q.....	1224
[SOURce<hw>]:IQ:OUTPut[:ANALog]:PRESet.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:CATalog?.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:DELeTe.....	1223
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:LOAD.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:STORE.....	1222
[SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE.....	1223
[SOURce<hw>]:IQ:SOURce.....	1218
[SOURce<hw>]:IQ:STATe.....	1218
[SOURce<hw>]:IQ:SWAP[:STATE].....	1219
[SOURce<hw>]:IQ:WBSTate.....	1220
[SOURce<hw>]:LFOutput:FREQuency:MANual.....	1239
[SOURce<hw>]:LFOutput:FREQuency:MODE.....	1239
[SOURce<hw>]:LFOutput:FREQuency:START.....	1240
[SOURce<hw>]:LFOutput:FREQuency:STOP.....	1240
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELL.....	1245
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute.....	1245
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE.....	1245
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts.....	1246
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace.....	1246
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNing?.....	1246
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHApe.....	1247
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	1247
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	1247
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[LINear].....	1247
[SOURce<hw>]:LFOutput<ch>:FREQuency.....	1238
[SOURce<hw>]:LFOutput<ch>:PERiod?.....	1238
[SOURce<hw>]:LFOutput<ch>:SHApe.....	1242
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYClE.....	1242
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod.....	1242
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTh.....	1242
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:FALL.....	1243
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:HIGH.....	1243
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:PERiod.....	1243
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:RISE.....	1243
[SOURce<hw>]:LFOutput<ch>:SHApe:TRIangle:PERiod.....	1244

[SOURce<hw>]:LFOutput<ch>:SHApe:TRlangle:RISE.....	1244
[SOURce<hw>]:LIST:CATalog?.....	1258
[SOURce<hw>]:LIST:DELeTe.....	1258
[SOURce<hw>]:LIST:DELeTe:ALL.....	1259
[SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?.....	1260
[SOURce<hw>]:LIST:DEXChange:AFILe:EXTension.....	1261
[SOURce<hw>]:LIST:DEXChange:AFILe:SELeCt.....	1261
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn.....	1261
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal.....	1261
[SOURce<hw>]:LIST:DEXChange:EXECute.....	1260
[SOURce<hw>]:LIST:DEXChange:MODE.....	1262
[SOURce<hw>]:LIST:DEXChange:SELeCt.....	1262
[SOURce<hw>]:LIST:DWELI.....	1252
[SOURce<hw>]:LIST:DWELI:LIST.....	1253
[SOURce<hw>]:LIST:DWELI:LIST:POINts?.....	1253
[SOURce<hw>]:LIST:DWELI:MODE.....	1252
[SOURce<hw>]:LIST:FREE?.....	1259
[SOURce<hw>]:LIST:FREQuency.....	1253
[SOURce<hw>]:LIST:FREQuency:POINts?.....	1254
[SOURce<hw>]:LIST:INDEx.....	1254
[SOURce<hw>]:LIST:INDEx:STARt.....	1254
[SOURce<hw>]:LIST:INDEx:STOP.....	1254
[SOURce<hw>]:LIST:LEARn.....	1255
[SOURce<hw>]:LIST:MODE.....	1255
[SOURce<hw>]:LIST:POWeR.....	1256
[SOURce<hw>]:LIST:POWeR:POINts?.....	1256
[SOURce<hw>]:LIST:RESEt.....	1259
[SOURce<hw>]:LIST:RMODE.....	1255
[SOURce<hw>]:LIST:RUNNing?.....	1258
[SOURce<hw>]:LIST:SELeCt.....	1260
[SOURce<hw>]:LIST:TRIGger:EXECute.....	1257
[SOURce<hw>]:LIST:TRIGger:SOURce.....	1257
[SOURce<hw>]:MODulation[:ALL][:STATe].....	1039
[SOURce<hw>]:NOISe:BANDwidth BWIDth.....	1263
[SOURce<hw>]:NOISe:DISTRibution.....	1264
[SOURce<hw>]:NOISe:IMPulsive:CL.....	1265
[SOURce<hw>]:NOISe:IMPulsive:FRAMe.....	1265
[SOURce<hw>]:NOISe:IMPulsive:MAXSpace.....	1266
[SOURce<hw>]:NOISe:IMPulsive:MINSpace.....	1266
[SOURce<hw>]:NOISe:IMPulsive:PULSe.....	1265
[SOURce<hw>]:NOISe:IMPulsive[:BURSt]:DURation?.....	1266
[SOURce<hw>]:NOISe:IMPulsive[:STATe].....	1265
[SOURce<hw>]:NOISe:LEVel<ch>:RELative?.....	1264
[SOURce<hw>]:NOISe:LEVel<ch>[:ABSolute]?.....	1264
[SOURce<hw>]:NOISe:PHASenoise:FREQuency<ch>.....	1268
[SOURce<hw>]:NOISe:PHASenoise:LEVel<ch>.....	1267
[SOURce<hw>]:NOISe:PHASenoise:SHApe:PREDeFined:CATalog?.....	1267
[SOURce<hw>]:NOISe:PHASenoise:SHApe:SELeCt.....	1267
[SOURce<hw>]:NOISe:PHASenoise:SHApe:STORE.....	1267
[SOURce<hw>]:NOISe:PHASenoise[:STATe].....	1266

[SOURce<hw>]:PGENerator:OUTPut:POLarity.....	1270
[SOURce<hw>]:PGENerator:OUTPut[:STATe].....	1271
[SOURce<hw>]:PGENerator:STATe.....	1271
[SOURce<hw>]:PHASe.....	1272
[SOURce<hw>]:PHASe:REFerence.....	1272
[SOURce<hw>]:PM:DEViation:MODE.....	1052
[SOURce<hw>]:PM:DEViation:SUM.....	1052
[SOURce<hw>]:PM:MODE.....	1052
[SOURce<hw>]:PM:RATio.....	1053
[SOURce<hw>]:PM:SENSitivity?.....	1053
[SOURce<hw>]:PM<ch>:SOURce.....	1051
[SOURce<hw>]:PM<ch>:STATe.....	1051
[SOURce<hw>]:POWer:AATTenuation?.....	1276
[SOURce<hw>]:POWer:ALC:DAMPLifier.....	1275
[SOURce<hw>]:POWer:ALC:DSensitivity.....	1276
[SOURce<hw>]:POWer:ALC:MODE?.....	1274
[SOURce<hw>]:POWer:ALC:SLEVel.....	1276
[SOURce<hw>]:POWer:ALC:SONCe.....	1276
[SOURce<hw>]:POWer:ALC[:STATe].....	1274
[SOURce<hw>]:POWer:ATTenuation.....	1277
[SOURce<hw>]:POWer:ATTenuation:DIGital.....	1277
[SOURce<hw>]:POWer:ATTenuation:INACTive:INDices.....	1277
[SOURce<hw>]:POWer:ATTenuation:RFOff:MODE.....	1278
[SOURce<hw>]:POWer:EMF:STATe.....	1278
[SOURce<hw>]:POWer:LBEHaviour.....	1278
[SOURce<hw>]:POWer:LIMit[:AMPLitude].....	1279
[SOURce<hw>]:POWer:LMODe.....	1279
[SOURce<hw>]:POWer:MANual.....	1279
[SOURce<hw>]:POWer:MODE.....	1280
[SOURce<hw>]:POWer:PEP?.....	1280
[SOURce<hw>]:POWer:POWer.....	1281
[SOURce<hw>]:POWer:RANGe:LOWer?.....	1287
[SOURce<hw>]:POWer:RANGe:UPPer?.....	1287
[SOURce<hw>]:POWer:SPC:CRANGe.....	1282
[SOURce<hw>]:POWer:SPC:DELay.....	1282
[SOURce<hw>]:POWer:SPC:MEASure.....	1282
[SOURce<hw>]:POWer:SPC:MODE.....	1283
[SOURce<hw>]:POWer:SPC:PEAK.....	1283
[SOURce<hw>]:POWer:SPC:SElect.....	1283
[SOURce<hw>]:POWer:SPC:SINGLE.....	1283
[SOURce<hw>]:POWer:SPC:STATe.....	1284
[SOURce<hw>]:POWer:SPC:TARGet.....	1284
[SOURce<hw>]:POWer:SPC:WARNIing?.....	1284
[SOURce<hw>]:POWer:STARt.....	1281
[SOURce<hw>]:POWer:STEP:MODE.....	1284
[SOURce<hw>]:POWer:STEP[:INCRement].....	1285
[SOURce<hw>]:POWer:STOP.....	1281
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet.....	1285
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL.....	1286
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:REFLeVel.....	1287

[SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude].....	1286
[SOURce<hw>]:PULM:DELAy.....	1056
[SOURce<hw>]:PULM:DOUBle:DELAy.....	1056
[SOURce<hw>]:PULM:DOUBle:STATe.....	1057
[SOURce<hw>]:PULM:DOUBle:WIDTh.....	1057
[SOURce<hw>]:PULM:IMPedance.....	1059
[SOURce<hw>]:PULM:MODE.....	1055
[SOURce<hw>]:PULM:OUTPut:VIDeo:POLarity.....	1058
[SOURce<hw>]:PULM:PERiod.....	1056
[SOURce<hw>]:PULM:POLarity.....	1058
[SOURce<hw>]:PULM:SOURce.....	1057
[SOURce<hw>]:PULM:STATe.....	1057
[SOURce<hw>]:PULM:TRIGger:EXTerNaL:IMPedance.....	1059
[SOURce<hw>]:PULM:TRIGger:MODE.....	1055
[SOURce<hw>]:PULM:TTPe.....	1058
[SOURce<hw>]:PULM:WIDTh.....	1056
[SOURce<hw>]:SWEep:COMBined:COUNT.....	1305
[SOURce<hw>]:SWEep:COMBined:DWELl.....	1305
[SOURce<hw>]:SWEep:COMBined:EXECute.....	1305
[SOURce<hw>]:SWEep:COMBined:MODE.....	1306
[SOURce<hw>]:SWEep:COMBined:RETRace.....	1306
[SOURce<hw>]:SWEep:COMBined:SHAPE.....	1306
[SOURce<hw>]:SWEep:POWER:AMODE.....	1298
[SOURce<hw>]:SWEep:POWER:DWELl.....	1298
[SOURce<hw>]:SWEep:POWER:EXECute.....	1302
[SOURce<hw>]:SWEep:POWER:MODE.....	1299
[SOURce<hw>]:SWEep:POWER:POINts.....	1299
[SOURce<hw>]:SWEep:POWER:RETRace.....	1302
[SOURce<hw>]:SWEep:POWER:RUNNing?.....	1303
[SOURce<hw>]:SWEep:POWER:SHAPE.....	1302
[SOURce<hw>]:SWEep:POWER:SPACing:MODE?.....	1299
[SOURce<hw>]:SWEep:POWER:STEP[:LOGarithmic].....	1300
[SOURce<hw>]:SWEep:RESet[:ALL].....	1307
[SOURce<hw>]:SWEep[:FREQuency]:DWELl.....	1300
[SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	1302
[SOURce<hw>]:SWEep[:FREQuency]:MODE.....	1300
[SOURce<hw>]:SWEep[:FREQuency]:POINts.....	1301
[SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	1302
[SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	1303
[SOURce<hw>]:SWEep[:FREQuency]:SHAPE.....	1302
[SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	1301
[SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	1303
[SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	1303
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{CLOCK: frequency}.....	351
{COMMENT: string}.....	349
{CONTROL LENGTH: ControlLength}.....	351

{CONTROL LENGTH: ControllLength}.....	362
{CONTROL LIST WIDTH4-Length: #m0m1...mx...mM-1}.....	360
{COPYRIGHT: string}.....	350
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{DATA BITLENGTH: BitLength}.....	361
{DATA LIST-Length: #d0d1...dx...dN-1...}.....	362
{DATE: yyyy-mm-dd;hh:mm:ss}.....	350
{EMPTYTAG-Length: #EmptySequence}.....	352
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}.....	353
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	355
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	363
{MARKER MODE [#]: GENERATOR}.....	354
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	358
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	358
{MWV_SEGMENT_COUNT: NumOfSeg}.....	357
{MWV_SEGMENT_DURATION: SegDur0, SegDur1, ..., SegDurN-1}.....	357
{MWV_SEGMENT_FILES: "FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	360
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	357
{MWV_SEGMENT_LEVEL_MODE: Mode}.....	359
{MWV_SEGMENT_LEVEL_OFFS: RMSOffs_dBSg0,PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	359
{MWV_SEGMENT_SETTINGS_FILE: SegSettingFilePath}.....	360
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	358
{MWV_SEGMENTx_COMMENT: text}.....	360
{SAMPLES: Samples}.....	355
{TYPE: magic, xxxxxxxx}.....	348
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	356
*CLS.....	912
*ESE.....	912
*ESR?.....	913
*IDN?.....	913
*IST?.....	913
*OPC.....	913
*OPT?.....	914
*PRE.....	914
*PSC.....	914
*RCL.....	914
*RST.....	915
*SAV.....	915
*SRE.....	915
*STB?.....	915
*TRG.....	916

*TST?	916
*WAI	916
DIAGnostic:HUMS:DELeTe:ALL	940
DIAGnostic:HUMS:DEvice:HISTory:DELeTe:ALL	941
DIAGnostic:HUMS:DEvice:HISTory?	941
DIAGnostic:HUMS:FORMat	942
DIAGnostic:HUMS:SAVe	942
DIAGnostic:HUMS:STATe	942
DIAGnostic:HUMS:TAgS:ALL?	942
DIAGnostic:HUMS:TAgS:DELeTe	943
DIAGnostic:HUMS:TAgS:DELeTe:ALL	943
DIAGnostic:HUMS:TAgS[:VALue]	943
SYSTem:COMMunicate:REST:ENABle	944
SYSTem:COMMunicate:SNMP:COMMunity:RO	944
SYSTem:COMMunicate:SNMP:COMMunity:RW	944
SYSTem:COMMunicate:SNMP:CONtact	945
SYSTem:COMMunicate:SNMP:LOCation	945
SYSTem:COMMunicate:SNMP:USM:USER	945
SYSTem:COMMunicate:SNMP:USM:USER:ALL?	946
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe	946
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL	946
SYSTem:COMMunicate:SNMP:VERSIon	947

Index

Symbols

/var/user directory	918
/var/volatile directory	918
>L	886
&LLO	886
&NREN	886
1x8x2	
Abbreviation meaning	110
1xEV-DO	231
3GPP FDD	231
8x8 MIMO	
Connecting	215
How to	215
Test setup	215
50 - Extern reference out of range or disconnected	1356
140 - This modulation forces other modulations off	1356
180 - Adjustment failed	1356
182 - Adjustment data missing	1356
183 - Adjustment data invalid	1356
200 - Cannot access hardware	1356
201 - Hardware revision out of date	1356
202 - Cannot access the EEPROM	1356
203 - Invalid EEPROM data	1356
204 - river initialization failed	1356
241 - No current list	1356
242 - Unknown list type specified	1356
261 - Waveform Protected	1356
460 - Cannot open the file	1356
461 - Cannot write file	1356
462 - Cannot read file	1357
463 - Filename missing	1357
464 - Invalid filename extension	1357
465 - File contains invalid data	1357

A

Abort	
Tutorial	106
About	
ALC states and their effects	589
Attenuator	586
Local oscillator	504
Power-On/EMF	742
Reference oscillator	495
UCOR	593, 594
Accept	
MCCW	424
Security settings	808
Accept carrier table	424
Access configuration menu	
Graphics	639
Accidental trigger	
Avoiding	250
Accurate level measurement	
Measurement period	123
Active connections	
Remote access	848
Active elements	97
Add LAN sensor	
NRP sensor mapping	622
Add sensor	
NRP sensor mapping	622

Add USBTMC sensor	
NRP sensor mapping	623
Add, change, delete	
User key action	771
Additive noise	444
Address	
GPIB interface	845
Adjust	
BB input signal	167, 174
Display and keyboard	740
Display settings	739
External frequency converter	1381
I/Q modulator	475, 1381
Keyboard settings	739
Adjustment frequency	
Reference oscillator	501
Adjustments	
All	1380
All delayed	1382
Continue	1382
Delay settings	1382
Information	1381
Last full adjustment	1380
Log debug info	1382
Settings	1380
Shutdown	1383
Warm up time	1383
Advanced configuration	
LXI	865
ALC	
About	589
Detector sensitivity	592
Driver amplifier	592
Mode	592
Requirements	590
Sample level	593
Settings	591
State	591
ALC auto	1402
ALC on	1402
ALC S&H	1402
ALC states and their effects	589
ALC Table	1402
All packages	
Secure update policy	800
Alphanumeric parameters	101
AM	
Deviation mode	569
Overview	584
Ratio	570
Subsystem	1039
Total deviation	570
Amplitude modulation	563, 569
Depth	569
Deviation mode	569
Ratio	570
Sensitivity	569
State	565
Subsystem	1039
Analog modulation	
Options	554
Overview	583
RF signal	552

Signal shape	560
Signal source	554
Signal sources (external)	555
Signal sources (internal)	554
Analog wideband I/Q input	472
Angle alpha	
AQPSK	288
Annotation	
Disable amplitude display	803
Disable frequency display	802
Disable level	803
Aperture time	
Power sensors	620
Appearance	
Settings	741
Setup	739
Append	
Blank segment	382
Sequencing play list	389
Waveform	381, 382
Appendix	
RF hardware versions	1391
Application	
External digital signal	120
Application cards	27
Application notes	27
Apply	
Assistant settings	415
External analog signal	120, 223
External digital baseband signal	221
External digital signal	119
Fading and baseband configuration	134
Settings of external RF and I/Q instrument	150
Apply and connect	
Settings of external RF and I/Q instrument	151
APSK	
Code rate	289
Gamma	289
ARB	85
Play list	372
Sequencer mode	372
Subsystem	1095
Test generator selftest file	1388
ARB multi-carrier	
Conflict	413
Mode	406
ARB sequencer mode	372, 385
ARbitrary waveform generator	315
Arm trigger	
DM	264
Armed_Auto	
Common settings	263
DM	263
Armed_Retrigger	
Common settings	263
DM	263
Arrow keys	44
ASK depth	288
ATN	1421
Attention	1421
Attenuation	294
Attenuator settings	588
Attenuation active	
Attenuator settings	588

Attenuator	
About	586
RF signal	586
Settings	587
Attenuator settings	
Attenuation	588
Attenuation active	588
Level range	493, 588
Mode	588
RF OFF mode	588
AttFixed	1403
Auto	
Common settings	263
DM	263
Auto level set	167, 175
Auto once	
Power sensors	619
Power viewer	619
Automatic level control	
Detector sensitivity	592
Driver amplifier	592
Mode	592
Readjust internal switch position	493
RF signal	589
Sample level	593
Settings	591
State	591
Automation	819
Autonegotiation	
Failed	1359
Avahi	
LAN services	806
Average level	
Power viewer	617
Avoiding signal gaps	376
Avoiding wrap-around	376
AWGN	
Additive white Gaussian noise	435
Coupled streams	441
Subsystem	1170
AWGN mode	444
AWGN test signal	317

B

B x T	
DM	290
Bandwidth	
Cosine filter	291
Modulation input	579
Noise generator	580
Baseband	
Channel	174
Input	86
Output	86
Selftest	1386
Baseband connection selftest	1385
Baseband gain (I/Q)	
I/Q modulation	474
Baseband generator	85
Baseband I/Q signal	
Level	657
Baseband Input	
See BB Input	161
Baseband level	
Info	657

- Baseband only
 - Mandatory setting 294
- Baseband power levels
 - Retrieving 651
 - Surveillance 652
- Baseband power measurement
 - Burst signal 663, 665
 - Different duty cycles 665
 - Non-burst signal 660
- Baseband selftest 1386
- Baseband signal
 - Shifting quickly in RF domain 433
- Baseband source configuration
 - Settings 132
- Basebands
 - Common triggering 246
- Basic workflow
 - Multi-segment waveform 393
- Basics
 - Editor 549, 600
 - Export list files 603
 - Fill with sensor list files 602
 - Import list files 603
- Baud rate
 - RS232 interface 846
- BB input 86
- BB output 86
- BB signals 131
- BBIN 161
- BBMM
 - External RF and I/Q settings 141
- Beamforming
 - How to 214
- Bench top, placing 30
- Bias
 - I/Q OUT 192
- Binary data
 - Edit, rules 347
- Bit clock
 - For serial data 236
- Bit energy to noise power density 448
- Bit rate 447
- Block 1398
- Block diagram
 - Control signal block 1398
 - Display 95
 - Functional block 1398
- Blue LED
 - State indication (active) 176
- Bluetooth®
 - 5.x 230
 - EDR 230
- Board and connector number 141
- Broadcast standards 233
- Brochures 26
- Browser settings
 - LXI 862
- Burst gate 239
- Busy 1397
- Bytes order
 - Definition 952
- C**
- C-List
 - See control list 296, 300, 344
- Calibrate
 - Touchscreen 1374
- Calibrate RF output level with power sensor 623
- CALibration subsystem 931
- Carrier
 - Delay 412
 - Frequency 412
 - Gain 412
 - Index 412
 - State 412
 - State start/stop 414
- Carrier + Interferer
 - PEP 450
- Carrier + Noise
 - PEP 450
- Carrier graph 415, 425
- Carrier leakage 462
 - Impairments 465
- Carrier power 448
- Carrier range 423
- Carrier spacing 407, 421
- Carrier table 424
- Carrier table assistant
 - Carrier range 423
 - First carrier 423
- Carrier/Noise ratio 448
- Carrying the instrument 29
- Cascading
 - LO 669
 - Reference frequency 669
- Catch range
 - NRP power control 613
- CCDF diagram 631
- CCDF display 631
- CDMA2000 231
- Center frequency
 - Changing without adjusting the RF 433
- Center frequency offset 445
- Central storage
 - Accessing 731
- Change
 - GPIO address 874, 883
- Change password
 - Setup (security) 810
- Change user password
 - Setup (security) 810
- Channel
 - Name 173, 181
 - Number per HS DIG I/Q 133
 - State 183
 - Stream 181
- Channel aggregation bandwidth 132
- Check display screen
 - Display screen test 1379
- Check front panel
 - Key panel test 1375
 - LED test 1376
 - Performing 1374
 - Settings 1374
 - Touchscreen calibration 1375
- Check touch panel
 - Touchscreen test 1377
- Checking the instrument 29
- Clean
 - List of external RF and I/Q instrument 147
- Cleaning 1370

- Clear
 - NRP sensor mapping 622
 - RF output protection 589
 - User menu 767
- Clear history
 - Undo/Redo 814
- Clear status
 - Remote 912
- Clipping 407
- CList
 - See control list 300, 344
- Clock
 - Connectors 237
 - Frequency 324
 - Rate 324
- Clock local connector
 - see T/M/(C) 748
- Clock mode
 - DM 270
- Clock rate
 - Blank segment 382
- Clock rate mode
 - Multi-segment waveform 383
- Clock signal
 - External 237
 - Internal 237
- Clock source 270
 - External 237
 - Internal 237
- CLOCK subsystem 936
- Clock to data
 - Deviation 285
- Clock, but
 - Extern serial data 285
- Close
 - Show SCPI command 889
- CODER
 - External RF and I/Q settings 141
- Coding
 - DM 280
- Combination mode 137
- Combined RF frequency / level sweep
 - Step count 538
- Combined sweep
 - Spacing 534, 537
- Command sequence
 - Remote 916
- Commands of all settings
 - SCPI list 712
- Comment 380
- Common trigger settings 263, 753
- Common triggering
 - 2xSISO with 1xFading simulator 253
 - Basebands 253
- Compensation
 - Group delay, filter effect 186
- Complementary cumulative distribution function 631
- Computer name
 - see hostname 871
- CONDition 832
- Configuration
 - Restoring 713
 - Restoring instrument settings 709
- Configuration list
 - Multi-segment waveform 373
- Configuration task
 - Support 126
- Configure
 - Control signal 298
- Configuring
 - GUI appearance 741
- Configuring LAN services 804
- Confirm unsigned
 - Secure update policy 800
- Confirm user password
 - Setup (security) 809, 810
- Conflict 413
- Connect
 - External RF and I/Q instrument 151
 - R&S EX-IQ-BOX 225
- Connect all remote 140
- Connect remote instruments
 - Keep connection on preset 140
 - On start-up 139
- Connected device 165, 172, 180
- Connecting
 - Keyboard 34
 - LAN 33
 - Memory stick 34
 - Mouse 34
 - Power 33
 - To HS DIG I/Q 37
 - To LO IN/LO OUT 37
 - To REF IN/REF OUT 37
 - To RF 36
 - To RF coaxial connectors 35
 - USB devices 34
- Connecting external instruments
 - Overview 108
- Connecting to RF coaxial connectors
 - To connect to pluggable connectors 36
 - To connect to screwable connectors 35
 - To prepare for connecting 35
- Connection fault
 - 169.254.*.* 1359
- Connector
 - AC power supply 51
 - ADV CLK 53
 - ADV TRG 53
 - Baseband 747
 - CLOCK 51
 - Control signal 53
 - Data 53
 - DIFF I/Q 53
 - Differential output 53
 - Digital IQ 52
 - Direction 195, 757, 761
 - Display 51
 - DVI 51
 - EFC 50
 - EXT 52
 - Find 153
 - Find out 116, 195
 - Global 746, 757
 - GPIO 50
 - High-speed digital IQ 53
 - I 45, 49, 53
 - I Bar 53
 - Identify 116, 153
 - Identify (how to) 195
 - IEC/IEEE 50
 - INST TRIG x 52
 - LAN 51
 - LED 116

- LF OUT x 53
 - LO IN 50
 - LO OUT 50
 - Local 747, 761
 - Localize 195
 - Mapping 745
 - MARKER 51
 - Q 45, 49, 53
 - Q Bar 53
 - REF IN 49
 - REF OUT 49
 - RF A/RF B 46, 49
 - SENSOR 45
 - Shared 746
 - Show 116, 153, 195
 - Signal 757, 761
 - Single-ended output 53
 - Synchronization 53
 - T/M 51
 - T/M/C 51, 761
 - TRIGGER 51
 - USB 45, 51
 - USB Device 51
 - User 746, 757
 - USER 46, 50
 - Connector direction
 - Find out 195
 - Settings 141
 - Connector local, global
 - Signal, how to define 763
 - Connectors 47
 - Sharing 748
 - Constant I/Q test signal 317
 - Settings 329
 - Constellation diagram 629
 - Context-sensitive menu 97
 - Display 1407
 - Continue
 - Internal adjustments 1382
 - Continue on error
 - Failed internal adjustments 1360
 - Continuous measurements 660
 - Control bus 1421
 - Control list
 - ASCII format 301, 344
 - Binary format 345
 - Edit, rules 347
 - How to assign 302, 345
 - Manually (Control data editor) 301
 - Select 283
 - Select, edit, new 718
 - Tags 344
 - Control signal 239
 - Control signal block 1398
 - Copy
 - Instrument settings 722
 - Several files 720, 728, 729
 - Show SCPI command 889
 - Correction data
 - Current 688
 - Counter 1362
 - Couple I/Q bias 191
 - Coupled baseband sources
 - Advantages 114
 - Basics 114
 - Coupled mode
 - Representation of stream state on the block diagram 441
 - Coupled trigger settings 263, 753
 - Simultaneous signal generation start 253
 - Coupling
 - Local oscillator 507
 - Coupling mode
 - AM, FM, PhiM 579
 - External modulation input 579
 - Create 380, 410
 - Multi-carrier waveforms 401
 - New directory 722
 - Create and load 380, 410
 - Crest factor
 - BB Input 167
 - Channel 174
 - Desired value 422
 - External analog signal 473
 - Match 121
 - Optimize (MCCW) 422
 - Where to find the value 122
 - Crest factor mode 407
 - Current frequency
 - Adjust 475, 1381
 - Sweep 532
 - Current index
 - List mode 541
 - Current level
 - Sweep 532
 - Current segment 390
 - Custom digital modulation 85
 - Customer support 1368
 - Cut
 - Instrument settings 722
 - Cut off frequency factor 290
 - CW
 - Frequency 486
 - CW (continuous wave) 239
 - CW frequency 445, 451
 - CW interferer 444
 - CW mode
 - Output level 490
 - CW signal
 - Generate in baseband 279
 - Settings 483
 - CW/Mod 239
- ## D
- D-List
 - See data list 346
 - Data entry 100
 - Data format
 - Definition 952
 - Data list 282
 - Access 715
 - Binary format 346
 - Edit, rules 347
 - Editor 294
 - How to access 919
 - How to assign 303, 347
 - How to create 302, 718
 - Manually (data list editor) 302
 - Select 283
 - Select, edit, new 718

- Standard modulation data source 235
- Tags 346
- Data sheets 26
- Data source
 - Data list 235
 - DM 282
 - Extern serial 236
 - Extern serial data 282
 - Pattern 235
 - PRBS generator 235
 - Serial data 236
- Data valid 1421
- Datasheet
 - LXI 868
- Date 1372
- DAV 1421
- DC carrier leakage
 - Eliminating 433
 - How to shift baseband signal 433
- Deactivate RF output 497
- Deactivated licenses 779
- Declassification 802
- Default
 - Stream mapping 115
- Default directory
 - Mass memory 918
 - User data 700, 918
- Default settings 406
 - ARB 323
 - DM 279
 - I/Q output analog 189
 - MCCW 421
- Default values
 - Remote 915
- Define
 - User key action 771
- Defining the level setting with the rotary knob 185
- Delay
 - Basebands 325
 - Double pulse (PULM) 574
 - Falling edge of ramp envelope 293
 - Marker 269
 - PULM 574
 - Rising edge of ramp envelope 293
 - Trigger 266
 - Waveform 325
- Delay start 415
- Delay step 415
- Delay time
 - NRP power control 614
- Delete
 - Instrument settings 722
 - List mode file 544
 - Sequencing list 389
 - Waveform 381, 382
- Delete instrument settings 928
- Delta frequency
 - External RF and I/Q instrument 145
- Delta phase
 - RF frequency 495
- Demo
 - How to start 102
- Destination
 - Connection selftest (BNC) 1386
- Detect
 - External RF and I/Q instrument 147
- Detector sensitivity
 - Automatic level control 592
- Deviation
 - External data 285
 - Fixed total deviation 567, 568
 - FSK modulation 288
 - PhiM 568
 - Variable FSK 288
- Deviation mode
 - AM 569
 - Amplitude modulation 569
 - FM 567
 - Frequency modulation 567
 - Phase modulation 568
 - PhiM 568
- Device ID 778, 1337
 - NRP sensor mapping 623
- Device reset 917
- Device-specific notifications 1355
- DHCP 870
- Dialog
 - Snapshots 742
- Dialog boxes 99
- DIFF I/Q IN
 - see I/Q BAR 470
- Differential coding
 - DM 280
- DIG IQ auto setting 167, 174
- Digital attenuation
 - RF level 491
- Digital I/Q
 - Input 161
- Digital inputs
 - Connector type 171
 - Switching 164, 171
- Digital modulation
 - See DM 276
- Digital only signals
 - Settings 129
- Digital output
 - State 176
- Digital standard 85
 - Supported 230
- Direction
 - Connector 141
- Directory
 - Temporary data 918
 - User data 918
- Disable
 - Frequency display 802
 - Level display 803
- Disconnect all remote 140
- Display
 - Active elements 97
 - Block diagram 95
 - Context-sensitive menu 97, 1407
 - Info line 97, 1402
 - Information 93
 - Keyboard layout 741
 - Lock 803
 - Mapped connectors 139
 - On-screen keypad 97, 1405
 - Power sensors 617
 - SCPI list 889
 - Screen saver 741
 - Scroll bar handle 1407
 - Settings 740

Setup	740
Status bar	94
Tab labels	97
Taskbar	96
Wait time (screen saver)	741
Display correction file data	
UCOR	598
Display correction value	
UCOR	597
Display information	1396
Display port	
Connector (for future use)	51
Display screen	
Checking	1378
Display screen test	
Perform	1379
DISPlay subsystem	947
Display unit	640
Disposal	1370
Distortion-free range	
Max bandwidth	319
Resampling	319
Distribution	
Noise generator	580
Diversity	
Rx	89
Tx	88
DList	
See data list	346
DNS server	843
DNS suffix	843
Documentation overview	25
Domain	
Baseband	1394
RF	1394
Double pulse delay	
PULM	574
Double pulse width	
PULM	573
Downgrade information	1364
Factory version	1364
Min. version	1364
Drag&Drop blocks	
How to	113
Driver amplifier	
ALC	592
Automatic level control	592
Duplicate streams	
Fading and baseband configuration	133
Duration	
Measurement period external digital signal	123
DVB-H/T	233
DVB-RCS2	233
DVB-S2/S2X/S2X-E	233
DVI	
Connector (for future use)	51
Dwell time	
Sweep	534
Dwell time mode	
List mode	542

E

EDGE Evolution	230
Edge form of ramp envelope	293
Edge slope of ramp envelope	293

Edit	
Binary data	347
Data list	294
Editor	549, 601
List mode data	544
Ramp in control list	298
UCOR data	598
Editor	
Basics	549, 600
Edit	549, 601
Fill with sensor	549, 601
Goto	549, 600
Save	549, 601
Save as	549, 601
EMF display	
RF level	743
Emulating front panel keys	107
Emulation	
IDN string	848
Language	847
Mode	847
Set IDN and OPT to default	847
EMV	234
Enable	
LAN interface	806
ENABle	832
Enable registers	
Remote	914
Enhanced features TD-SCDMA	231
Enter license key	778
Enter password	
Setup (security)	808
Entity	130
ENTity	
Meaning	909
Envelope tracking power amplifiers tests	190
EOI	1421
Error log	1366
Error message	
Missing burst gate marker in waveform file, please dis-	
able RF power ramping.	322
No or empty waveform file	322
Error messages	1357
Adjustment data invalid (183)	1356
Adjustment data missing (182)	1356
Adjustment failed (180)	1356
Cannot access hardware (200)	1356
Cannot access the EEPROM (202)	1356
Cannot open file (460)	1356
Cannot read file (462)	1357
Cannot write file (461)	1356
Driver initialization failed (204)	1356
Extern reference out of range or disconnected (50)	
.....	1356
File contains invalid data (465)	1357
Filename missing (463)	1357
Hardware revision out of date (201)	1356
Invalid EEPROM data (203)	1356
Invalid filename extension (464)	1357
No current list (241)	1356
SCPI	1355
See notifications	1354
This modulation forces other modulations off (140)	
.....	1356
Unknown list type specified (242)	1356
Waveform Protected (261)	1356
Error queue	833
ESE (event status enable register)	834

ESR	830
ESR (event status register)	834
EUTRA/LTE	232
EVENT	832
Event status enable register (ESE)	834
Remote	912
Event status register (ESR)	834
Remote	913
EVM	
Optimize	476
Exchanging RF port	1389
Exclude frequency	712
Exclude level	712
Execute	
Baseband selftest	1386
Next segment	392
Occupation	782
Single sweep	535
Trigger (list mode)	543
Execute single	
NRP power control	613
Expiration date of option	1364
Export	
Execute	546, 605
SCPI	719
SCPI export	891
SCPI list	890
SCPI settings	890
Export deactivation response	778
Export license key	779
Export list files	
Basics	603
Express level in	
Volts	1272
Extended RF	199
Extern serial data	
Bit clock slope	285
Bit order	285
Deviation, clock to data	285
Graphical illustration	286
t_hold	237
t_setup	237
External	
Clock reference	237
Signal sources (analog modulation)	555
External analog signal	
Apply	120
Apply (how to)	223
Feed to the instrument	120
External clock	
Monitoring	270
External digital signal	
Application fields	120
Apply	119, 161
Apply (how to)	221
Baseband input	161
Feed to the instrument	119
Input	164, 171
Interface type	171
Possible applications	120
Required if	120
Source	164, 171
External fading	220
External frequency	
Reference oscillator	497
External frequency converter	
Adjust	1381
External instrument	
Settings	142, 145
External RF and I/Q	
Alias name	148
Connecting, analog interface	201
Connecting, digital interface	203
Connecting, hs dig i/q interface	209
Connecting, R&S SZU	206
How to	200
Settings	137
External RF and I/Q instruments	
Basics	115
Control	115, 696
External trigger	
Common source	678
Configuring	678
Providing the instrument with	678
External Trigger Delay	
DM	266
Eye diagram	630
F	
Factory	
Preset	705
Factory preset	
Change GPIB address	874
GPIB address	883
Factory version	
Firmware	1364
FADER	
External RF and I/Q settings	141
Fading	
MIMO	86
MIMO	126
See also user manual "Fading Simulator"	112
Fading and baseband configuration	
How to	195
Settings	127
Fading application	220
Fading bandwidth	132
Fading configuration	126
Settings	130
Fading/Baseband configuration	
Overview	113
Fall delay	293
Feedback	
Connector	757, 761
Signal	757, 761
Feeding	
External analog signal	120
External digital signal	119, 161
File	
Multi-carrier table	412
SCPI export	891
Waveform	324
File catalog	
List mode	544
File contents	
Multi-segment waveform	380
File handling	701
File list	923
File manager	720
File name	734
File select	
Dialog	715
File server	
Data exchange	731

- File sharing 726
 - File storage location 918
 - File system 699
 - Accessing 726
 - File transfer 701
 - From file server 731
 - FTP/SAMBA 819
 - How to 726
 - File type selection 721
 - Files
 - User data 699
 - Fill
 - User correction data 549, 601
 - Fill table
 - Automatically 549, 601
 - UCOR 598
 - Fill with sensor
 - Basics 602
 - Editor 549, 601
 - Filter
 - DM 290
 - Power sensors 618
 - Filter cut off frequency 407
 - Filter effects
 - Compensation 186
 - Filter length
 - Auto 619
 - User-defiend 619
 - Filter parameter
 - B x T 290
 - Cut off frequency factor 290
 - Impact 258
 - Roll off factor 290
 - Finding out the default directory 700, 918
 - Firmware
 - Factory version 1364
 - Min. version 1364
 - Version 1363
 - Firmware options
 - see software options 85
 - Fixed
 - Frequency 486
 - Fixed mode
 - I/Q Out 191
 - Flexible dynamic switch over 394, 395
 - Without signal interruptions 395
 - Floating
 - License server 782
 - Floating licenses 1364
 - FM
 - Deviation 566
 - Deviation mode 567
 - Mode 567
 - Ratio 567
 - Subsystem 1044
 - Total deviation 567
 - Format
 - SCPI Export 891
 - FOrMat subsystem 951
 - FPGA/μC
 - Update 1389
 - Frequency 1396
 - Annotation disable 802
 - CW, fixed 486
 - LF generator 577
 - LF sweep 577
 - Multiplier 487
 - Offset 486
 - Overrange active 488
 - Overrange of R&S SZU 488
 - Power sensors 618
 - RF signal 485
 - Test generator selftest 1388
 - Test signal ARB 326
 - UCOR 598
 - Frequency modulation 563, 566
 - Deviation mode 567
 - Mode 567
 - Ratio 567
 - State 565
 - Subsystem 1044
 - Frequency offset
 - Between the I/Q streams 136
 - External signal 432
 - Internal signal 432
 - Frequency range
 - Overrange 488, 489
 - Frequency, internal
 - AM 577
 - FM 577
 - Front panel
 - Checking 1373
 - Front panel test
 - Performing 1374
 - FSK deviation 288
 - FSK type
 - Variable FSK 288
 - FTP
 - How to access the instrument 726
 - LAN services 806
 - Function keys
 - Overview 42
- ## G
- Gain
 - External signal 433
 - Impairment 461
 - Internal signal 433
 - Test generator selftest 1388
 - Gain Imbalance 461
 - Gain start 414
 - Gain step 414
 - Gated measurements 663
 - Gateway 843
 - General configuration of instrument 739
 - General instrument functions
 - Checking parameters and dependencies 764
 - User key 765
 - User menu 765
 - General instrument settings 739
 - General workflow
 - Multi-segment waveform 393
 - Generate test signal
 - HD 327, 328, 329
 - RAM 327, 328, 329
 - Generating
 - LTE 2x8 MIMO signal 214
 - LTE 4x4 MIMO signal 200
 - Time aligned signals 673
 - Generating an unmodulated signal 483
 - Generating LTE with 4x4 MIMO signal 196, 198, 199
 - Generating short sequences 250
 - Getting started 25

Global connectors	
Set connector default settings	574
Global dwell time	
List mode	542
GLONASS	233
GNSS	233
Goto	
Editor	549, 600
GPIB	
Address	845
Change address	874, 883
Channel address	845
Characteristics	825
Interface	825
Set up remote control	883
Visa resource string	845
GPIB address	
Factory preset	883
GPS	233
Graphical signal monitoring	627
Graphics	
Number of samples	637
Grey LED	
State indication (inactive)	176
Group delay	
Compensation	186
GSM AM suppression test	
Settings	133
GSM/EDGE	230
GUI	
Setting	743
GUI update	
Setup	739
H	
Hard copy	
Create, how to	736
File format	734
Print, how to	736
Hard disk drive	50
Hardcopy	732
Options	734
Hardware channel	
External RF and I/Q	148
Head panel	
See Status bar	41
Header	
See Status bar	41
Health and utilization	
LXI	868
Help	25, 102
High-speed switch over	
How to	396
Higher bit modulation	
Bit order	285
Higher MIMO modes	90
Higher-order MIMO testing	90
HiSlip	
Visa resource string	844
HiSLIP	
Resource string	822
History	
Undo/Redo	814
Host name	
NRP sensor mapping	622
see hostname	871

Hostname	841
Changing	871
External RF and I/Q	148
LXI	862
RF ports setup	693
Syntax	871
Use instead of IP address	871
Hotspot	96
Analog modulations	1397
Checkbox	1398
External reference frequency	1397
Frequency	1396
Frequency offset	1396
Functional block	1398
I/Q modulator	1397
Level	1397
Modulation	1397
Push button	1398
Recording	1397
Remote	1396
RF Level	1397
RF Level offset	1397
RF Level offset (EMF)	1397
RF on	1396
How to	
Accessing RF settings	480
Activate RF signal output	482
Calibrate RF output level with power sensor	623
Change the default directory	919
Internal adjustments	1383
Query hardware options	1365
Query RF assembly	1365
Resolve adjustments errors	1360
Run delayed adjustments	1384
Set RF frequency and level	483
Use an complete file path	919
Use the hostname instead of IP address	871
User key	771
User menu	768
HRP UWB 802.15.4	232
HSPA	231
HSPA+	231
HTTP	
LAN services	806
HUMS	850
About	839
Add device tags	860
Delete device tag entry	859
Delete device tags	860
Delete history	851
Device ID	859
Device tag key	859
Device tag value	859
Device tags	858
Enhanced settings	851
Export history	851
LXI	868
Protocol settings	852
REST	853
SNMP protocol	853
SNMPv2 access	853
SNMPv2 community	854
SNMPv2 configuration	853
SNMPv3 user	854
State	851

I

- I offset 462
- I/Q
 - External RF and I/Q settings 141
- I/Q connection
 - Status 143
- I/Q delay
 - Impairments, digital 466
- I/Q diagram 628
- I/Q Impairments
 - Linear 460
- I/Q mod
 - Input signal 472
- I/Q modulation 469, 470
 - Gain 474
 - Performance optimization 474
- I/Q OUT
 - Enabling 201
- I/Q output
 - RF envelope 190
- I/Q output analog
 - Settings 186
- I/Q output digital
 - Settings 175
- I/Q output stream mapper
 - Overview 112
- I/Q output type
 - Differential 149, 190
 - Envelope, E 149, 190
 - Inverted envelope, E BAR 149, 190
 - Single ended 149, 190
- I/Q skew
 - Impairments, digital 466
- I/Q stream mapper
 - Basics 115
 - How to 198
 - Settings 135
- I/Q streams
 - Add 137
- I/Q swap 472
- I/Q Swap 164
- I/Q wideband 473
- Identification
 - Emulation mode 847
 - Remote 913
- Identify
 - Connector 153
- Identify connector
 - Setting 153
- IDN string
 - Emulation mode 848
- IEC/IEEE bus interface
 - Channel address 845
- IEEE 802.11a/b/g/n 231
- IEEE 802.11ac 231
- IEEE 802.11ad 232
- IEEE 802.11ax 231
- IEEE 802.11ay 232
- IEEE 802.11be 231
- IEEE 802.11p/j 231
- IEEE 802.16 WiMAX 233
- IFC 1421
- Image rejection
 - Test signal 426
- Imbalance
 - Impairments 465
- Impairment
 - Analog 460
 - Digital 460
 - Linear 460
- Impairments
 - Analog 463
 - Digital 463
- Impedance
 - External modulation source 579
 - Pulse modulation 565
- Import
 - Execute 546, 605
 - SCPI 719
- Import license key 778
- Import list files
 - Basics 603
- Import/Export
 - Lists 545
 - Select file 546, 605
- Inactive licenses 779
- Index
 - List mode 541
- Info line 97, 1357
 - Display 1402
- Information
 - Internal adjustments 1381
- Inhibit trigger 251
- Input
 - Clock slope 285, 760, 763
 - Impedance Clock/Trigger 760, 763
 - Impedance external modulations 579
 - Pulse impedance 565
 - Pulse polarity 564
 - Pulse threshold 565, 759
 - Threshold Clock/Trigger 759, 762
 - Trigger slope 760, 763
- Input connector 45, 46, 49, 50, 52, 53
- Input waveform file 415
- Input/output signals and interfaces
 - Overview 116
- Installed assembly 1362
- Installing
 - R&S DigiConf 224
- Instrument
 - Carrying 29
 - Checking 29
 - Lifting 29
 - Operating site 29, 30
 - Unpacking 29
- Instrument configuration
 - External 145
- Instrument control 91
- Instrument emulations 838, 847
- Instrument help 25
- Instrument name
 - External RF and I/Q instrument 144
- Instrument security procedures 26
- Instrument settings
 - Recall 914, 928
 - Save 915, 930
- Interface
 - functions (GPIB bus) 1422
 - GPIB 825
- Interface clear 1421
- Interfaces
 - GPIB 825
 - Physical location 116

RS232	824
USB	824
Interferer	
CW, generation	435
Interfering signal	
Use an external digital signal	120
Internal	
Clock reference	237
Signal sources (analog modulation)	554
Internal adjustments	
How to	1383
Internal adjustment	
Continue on error	1360
Obtain technical support on error	1360
Internal adjustments	
Abort on error	1360
About	1370
Troubleshooting	1360
Interrupt	836
IoT	
eMTC	232
NB-IoT	232
IP address	822
Changing	870
Dynamic	842
External RF and I/Q	148
LXI	862
Not recognized	1359
NRP sensor mapping	622
RF ports setup	693
Zeroconf	842
IP address mode	842
IP configuration	
LXI	864
IQ subsystem	1218
IST	830
IST flag	
Remote	913

J

Joint carrier configuration	423
-----------------------------------	-----

K

Key

Access on a remote computer	107
Backspace	43
Diagram	42
Down	44
Emulation	107
Enter	43
ESC	43, 45
FREQ	42
HCOPY	42
HELP	42
INFO	42, 1357
INSERT	43
Left	44
LEVEL	42
LOCAL	42
MOD ON/OFF	42, 562
NEXT WINDOW	45
ON/OFF TOGGLE	42
On/Standby	42
PRESET	42
RESIZE WINDOW	45

RF ON/OFF	42
Right	44
SAVE/RCL	42, 709, 710
SETUP	42
Up	44
USER	42
Key panel test	
Check front panel	1375
Keyboard	
On-screen	100
Setting	743
Settings	740
Setup	740
Subsystem	958
Usage	92
Keypad	
On-screen	100
Overview	43
Keyword	
ENTITY	909

L

LAN

Connecting	33
Environment	33
Interface	822
IP address	822
Main services	806
Reset	862
Samba services	807
Services	804
LAN configuration	869
LXI	864
LAN interface	
Avahi	806
Enable	806
FTP	806
HTTP	806
LAN over SCPI	806
SMB (Samba)	806
SSH	806
VNC	806
LAN status	
LXI	861
Language	
Emulation	847
Last factory calibration	1363
Last full adjustment	
Internal adjustments	1380
Layout	
Keyboard	741
Learn	
List mode	543
Learn list mode data	
List mode	543
LED test	
Check front panel	1376
Length	
Control list	298
Lev Att	
see Level attenuation	239
LEV_ATT	294
Level	1397
Annotation disable	803
BB Input	167
Behavior (RF)	492, 539, 614

I/Q output signal	191
Noise generator	582
RF	1397
Level attenuation	239
DM	294
Level default unit	
Change	1272
Level in SCPI in V	1272
Level limit	493, 614
Level mode	
Multi-segment waveform	383
Level offset	
Power sensors	618
RF level	493
State (power sensors)	618
Level range	
Attenuator settings	493, 588
Level settings	
On start-up	742
LF frequency sweep	
State	532, 577
LF generator	
Shape	577
LF out	
Connector	53
LF Out	
Overview	584
LF OUT x	
R&S SMW-B13/-B13T	53
LF output	
Offset	582
Period	577
Pulse duty cycle	578
Pulse width	578
Shape	577
Source	581, 584
Sweep reset	535
Trapezoid high	578
Trapezoid rise, fall	578
Triangle rise	578
Voltage	582
LF Output	580
LF signal	
Shape	560
LF sweep	
Frequency	577
License	
Keys	773
License for software option	1364
Infos	1364
License info	
Occupy / renew license	781
License server	
Add remote connection	792
Enable connection restrictions	791
Restrict remote connection	789
Licenses	773
Server	782
Settings	775
Trial	773
Lifting the instrument	29
Limit	
RF level	493, 614
Linearize RF	
Activate	475
Adjust current frequency	475

List	
Define	544
Range	544
State	541
Values, defining	548, 600
List file	
Catalog	544
List mode	
Create list automatically	549, 601
Current index	541
Dwell time mode	542
Edit	544
Execute trigger	543
Export user data	546, 605
File settings, import/export	545, 604
Global dwell time	542
Import/export	545, 604
Learn list mode data	543
Load from file	546, 605
Load user data	545
Reset	543
Select file	544
Settings	540
State	541
Trigger execute	543
Trigger source	541
ListMode	1403
LO	
Settings	507
LO level	
Adjust	508, 1381
LO OUT Frequency	
Display	508
Load	
See recall	710
User filter	291
Waveform	324
Load instrument settings	914, 928
Load list	379
Load user mapping	287
Loading	
Trying out	74
Local connector	
T/M/(C)	747
Local oscillator	504
About	504
Adjust LO level	508, 1381
Mandatory LO in frequency	508
Mode	507
Options	505
Out state	508
Settings	507
Local to remote switch over	886
Lock	
Display	803
Log debug info	
Internal adjustments	1382
LSB/MSB order	
Definition	952
LTE 2x8 MIMO	
How to	214
LTE 4x4 MIMO	
How to	200
LTE advanced	232
LTE Rel. 8/Rel. 9/Rel. 10/Rel. 11/Rel. 12/Rel. 13/Rel. 14	
.....	232
LTE-A	232

LucasFonts	
RSCorpid EULA	1364
LVD-M transporting MAN altitude TEMPLATE	1369
LXI	
Advanced configuration	865
Browser settings	862
Configuration	904
Datasheet	868
Health and utilization	868
Hostname	862
IP address	862
IP configuration	864
LAN configuration	864
LAN status	861
MAC address	862
Ping	866
Remote trace (SCPI)	866
Reset (LXI)	862
Status settings	861
Tracing	884
LXI settings	861
LxMxN	
Settings	130
M	
Mac address	843
MAC address	
LXI	862
Maintenance	1370
PCI-FPGA update	1389
Managing license keys	773
Managing licenses	773
Mandatory LO in frequency	
Local oscillator	508
Manual interaction	92
Map network share	
Settings	721, 722
Map stream X to connector	
Settings	136
Mapping I/Q streams	
How to	198
Mapping multiple streams	137
Mapping network drives/folders	
How to	724
Marker	242
Marker Delay	269
MARKER LIST	355, 363
Marker local connector	
see T/M/(C) and T/M	748
Marker output signals	241
Marker positions	299
Marker trace	
Periodical	351, 362
Mass storage location	918
Matching	
Crest factor	121
Maximal deviation	
Frequency modulation	566
PhiM	568
Maximal frequency	
Overrange	489
Maximum overall output voltage	125, 188
Meaning of	
LxMxN	110
Measured external clock	270

Measured level	
NRP level control	613
Measurement	
Acquisition	658
Duration	658
Gate source	658
Level value	659
Peak power	659
PEP	659
Power value	659
Progress	657
Run mode	659
Run status	660
Signal source	658
Sweep time	658
Measurement period	167, 175
How long	123
MIMO	90
Complex scenario	114
Generate MxN scenario	196
MIMO scenario	
Finding out the required settings	194
How to set the system configuration	195
Min. version	
Firmware	1364
Minimal frequency	
Overrange	488, 489
Minimum locking range	499
MISO scenario	88
Mode	
Attenuator settings	588
Automatic level control	592
Emulation	847
Fading and baseband configuration	128
FM	567
Frequency modulation	567
Graphics	636
I/Q Out	191
IP address	842
List	541
LO Coupling	507
Local oscillator	507
NRP power control	613
PhiM	569
PULM	571
Pulse modulation	571
RF level	491
Sweep	533
User variation	489, 494
Modulation	1397
AM	563
Amplitude	563
Analog	552
Bandwidth, external input	579
External coupling	579
FM	563
Frequency	563
Input impedance	579
Overview	583
Phase	563
PhiM	563
PM	563
Pulse	563
Source	566
State (AM, FM, PhiM)	565

Modulation data	
Source external	236
Source internal	235
Modulation depth	
AM	569
Modulation sensitivity	
AM	569
Modulation type	287
Modulations state	
Toggle	562
Monitoring	
Level	657
Signal parameter	627
Mount network drive	
How to	724
Mounting, in a rack	31
Mouse	
Usage	92
MSR	
8 SISO	112
Multi carrier signal	
General principle	403
Multi-carrier CW	418
Subsystem	1150
Multi-carrier waveforms	401
Multi-entity mode	90
Multi-gated measurements	665
Multi-instrument setup	
Simultaneous signal generation start	673
Synchronous signals	673
Time aligned signals	673
Multi-segment	
Crest factor	392
Multi-segment table	381
Multi-segment waveform	
File contents	380
Multi-segment waveform sequencing	372
Multi-Standard Radio	112
Multiple entities	
SCPI alias	909
Multiple files	
Copy	720, 728, 729
Multiplexed digital streams	
Settings	129
Multiplier	
Frequency	487
MxN MIMO	196

N

Naming contentions	1411
Naming conventions	
Allowed file names	699
Navigation keys	44
NDAC	1421
Near field communication	234
Network	
Connection fails	1359
Environment	33
Settings	840
Network share	
Mapping	722
Mapping, how to	724
Network status	841
New list	379
New password	
Setup (security)	810
New user password	
Setup (security)	809
Next segment	390
Mode	391
Source	392
NFC A/B/F	234
Noise	
Additive, generation	435
Distribution	580
Pure, generation	435
Noise bandwidth	
3 dB noise bandwidth	369
AWGN	451
To generate an AWGN test signal	369
Noise bandwidth limitation	
System bandwidth	580
Noise generator	
Bandwidth	580
Noise level	
Absolute system bandwidth	582
Relative system bandwidth	582
Noise only	444
Noise power	
System bandwidth	449
Total bandwidth	450
Noise ratio	
Power sensors	619
Non-dedicated connectors	745
Notifications	1354, 1357
Device-specific	1355
NR Rel. 15	232
NRFD	1421
NRP level control	
Measured level	613
NRP power control	610
Catch range	613
Delay time	614
Execute single	613
Mode	613
Reference level	613
Remote command sequence	1272
Select sensor	612
Settings	611
State	612
Take measured level as reference	613
Target level	613
NRP power viewer	608
Settings	610
Use S-Parameter	620
NRP sensor configuration	616
NRP sensor mapping	621
Add LAN sensor	622
Add sensor	622
Add USBTMC sensor	623
Clear	622
Connector	622
Device ID	623
Host name	622
IP address	622
Protocol	622
Scan	622
Sensor name	622, 623
Serial number	623
Settings	621
NTP	
Address	1372
NTRansition	832

Number of carriers	406, 421
Number of licenses	1364
Numeric data entry	100
Numeric parameters	101

O

Obtain technical support	
Failed internal adjustments	1360
Occupation	
Execute	782
Free licenses	782
Period	782
Renew	782
Occupy	
License info	781
Occupy license	
Subsystem	1268
OFDM	233
Offset	
Envelope, E	192
Frequency	486, 1396
I/Q OUT	192
Inverted envelope, E BAR	192
RF Level	1397
Offset EMF	
RF Level	1397
Offset I/Q	
Impairments	465
Old password	
Setup (security)	810
Old user password	
Setup	809
On-screen keyboard	101
On-screen keypad	97
Display	1405
On/Off ratio marker	243
Open source acknowledgment (OSA)	26
Open-source acknowledgments	1364
Operating site	
Choosing	29
Setting up the instrument	30
Operation	
Manual	92
Operation complete	
Remote	913
Operation hours	1362
Operation mode	710
Optimization mode	474
I/Q	474
RF	474
Optimize crest factor	
Multi-carrier	407
Optimize EVM	
I/Q modulator	476
Option	
Expiration date	1364
R&S SMW-B13XT	53
R&S SMW-B14	52
R&S SMW-K16	53
R&S SMW-K17	53
R&S SMW-K18	52
R&S SMW-K19	53
Option: expiration date	1364
Options	
ALC	590
Analog modulation	554
Identification (remote)	914
Local oscillator	505
see user manual	85
Oscillator	
Adjust LO level	508, 1381
Local	504
Mandatory LO in frequency	508
mode (local)	507
Reference	495
Output	
Baseband power	658
SCPI list (select file)	891
Source (LF output)	581, 584
State (LO coupling)	508
Video polarity (PULM)	564
Video polarity (pulse modulation)	564
OUTPut	
Subsystem	958
Output connector	46, 49, 50, 52, 53
Output connectors	
RF A/RF B	46
Output file	380, 410
Multi-segment waveform	373
Output queue	830
Output signal	
Digital only	129
Output voltage, max	
I/Q OUT	125, 188
Output, LF	
Offset	582
Voltage	582
OvenCold	1403
Overflow	
Avoid	123, 168
Digital I/Q out	185
External data, remedy	284
External signal	123, 168
Hold	168, 185
Received external data	284
Reset	185
Overflow status	
Reset	168
OVERLOAD	1397
Overrange	
Frequency range	488, 489
Overrange active	
Frequency	488
Oversampling factor	319
Overview	
AM	584
External RF and I/Q	155
LF Out	584
Modulation	583
P	
Parallel poll register enable	
Remote	914
Parameters	
Entering	101
Parity	
RS232 interface	846
Password	
Change (security password)	810
Change (user password (security))	810
Confirm (security password)	810
Confirm (user password (security))	809

- Enter (security password) 808
- New (security password) 810
- New (user password (security)) 809
- Old (security password) 810
- Old user password 809
- Protection level 799
- Password management
 - Security 808
- Paste
 - Instrument settings 722
- Pattern
 - Data source 282
 - Standard modulation data source 235
- PCI bus 1362
- Peak power
 - BB Input 167
 - Channel 174
 - Digital output 182, 184
- PEP
 - Carrier + Noise 450
- Percentage of signal bandwidth
 - Graphics 638
- Performance
 - I/Q modulation 474
- Period
 - Blank segment 382
- Periodical
 - Marker trace 351, 362
- Periodical markers 343
- Phase
 - First carrier 424
 - RF signal 494
 - Subsystem 1271
- Phase fluctuations between RF signals
 - How to minimize 669
- Phase modulation 563, 567
 - Deviation 568
 - Deviation mode 568
 - Mode 569
 - Ratio 568
 - State 565
 - Subsystem 1049
- Phase offset 432
 - Between the I/Q streams 136
- Phase reference 495
- Phase start 414
- Phase step 415, 424
- Phase-aligned RF signals
 - How to 669
- Phase-coherent RF signals
 - How to 669
- PhiM 567
 - Deviation mode 568
 - Mode 569
 - Ratio 568
 - see PhiM 567
 - Total deviation 568
- Ping
 - LXI 866
- Placing, on a bench top 30
- Plausibility check 688
- Play list 373, 379, 387, 392
- Play list file
 - Sequencing list file 373
- Playlist
 - See play list 373
- PM
 - Subsystem 1049
- PN sequence
 - See PRBS 235
- Polarity
 - Pulse generator output 574
 - Pulse modulation 564
- Position
 - Connector 195
 - Cursor in graphical display 299
- Power
 - Carrier + Interferer 450
 - Carrier + Noise 450
 - Connecting the instrument 33
 - First carrier 424
 - Signal + Interferer 450
 - Signal + Noise 450
 - UCOR 598
- Power amplifiers testing
 - Envelope 190
- Power of starting carrier 414
- Power on
 - Key 42
- Power ramp
 - Restrict to baseband 294
- Power ramping 239, 293
- Power reference 408
- Power sensors
 - Activation 617
 - Aperture time 620
 - Auto once 619
 - Filter 618
 - Filter length 619
 - Frequency 618
 - Level (average) 617
 - Level (peak) 617
 - Level offset 618
 - Noise ratio 619
 - NRP power control 610
 - Serial number 617
 - Source 618
 - State 617
 - State (level offset) 618
 - Timeout 619
 - Unit 617
 - Update 610
 - Use default aperture time 620
 - Zero 617
- Power Sensors
 - Display 617
- Power spectrum 632
- Power step 424
- Power supply
 - Connector 51
- Power viewer
 - Auto once 619
- Power-On
 - Settings 742
- Power-On count 1362
- Power-On state
 - I/Q digital output 186
 - RF level 743
- Power-On/EMF
 - About 742
 - RF signal 742
- PPE 830

- PRBS generator
 - Standard modulation data source 235
 - PRBS type 282
 - Prefix, year, month, Day 735
 - Preparing for use 29
 - Preset
 - Factory preset 705
 - Fading configuration 988
 - Ramp 298
 - System configuration 988
 - Preview diagram 127
 - Primary-secondary
 - Sync signal state 672
 - Primary-secondary instrument mode
 - Assign signal 673
 - Mode 672
 - State 672
 - Print
 - Hard copy 736
 - Processing time 250
 - ARB 330
 - Protection
 - Settings 798
 - Setup 797
 - Protection level
 - 1 797
 - 2 797
 - 3, 4, 5 798
 - Adjustments 797
 - Calibration 797
 - Factory only 798
 - Protection level 799
 - Service department 797
 - PTRansition 832
 - PULM
 - Delay 574
 - Double pulse delay 574
 - Double pulse width 573
 - Impedance (pulse input) 565
 - Mode 571
 - Output video polarity 564
 - Period 573
 - Pulse polarity (input) 564
 - Source 564
 - State 564
 - Subsystem 1053
 - Threshold (pulse input) 565, 759
 - Transition type 564
 - Width 573
 - Pulse
 - Duty cycle 578
 - Length (PULM) 573
 - LF signal 560
 - Period 577
 - Width 578
 - Width (PULM) 573
 - Pulse divider marker 243
 - Pulse frequency marker 243
 - Pulse generator
 - Delay 574
 - Output polarity 574
 - Output state 574
 - Subsystem 1270
 - Width 573
 - Pulse graph
 - Zoom In/Out 575
 - Zoom position 575
 - Zooming 575
 - Pulse modulation 563
 - Double pulse delay 574
 - Double pulse width 573
 - Mode 571
 - Output video polarity 564
 - Period 573
 - Pulse input impedance 565
 - Pulse input threshold 565, 759
 - Pulse polarity (input) 564
 - Repetition frequency 573
 - Source 564
 - State 564
 - Subsystem 1053
 - Trigger mode 571
 - Purge
 - List of external RF and I/Q instrument 147
- ## Q
- Q offset 462
 - QR code 860
 - Quadrature offset
 - Impairments 465
 - Quadrature Offset 462
 - Quantified Licenses 779
 - Queries
 - Status 837
 - Querying
 - Baseband power levels 651
 - Questionable status register 835
 - Quick shift of the baseband signal
 - How to 433
- ## R
- R&S DigiConf
 - Installing 224
 - R&S EX-IQ-BOX
 - Connect 225
 - Set up 224
 - R&S signed packages
 - Secure update policy 800
 - R&S SMW-K200 779
 - Rack installation 49
 - Rack, mounting 31
 - Ramp
 - All up or all down 298
 - Low to high and vice versa 298
 - Ramp function 293
 - Ramp time 293
 - Ratio
 - AM 570
 - Amplitude modulation 570
 - FM 567
 - Frequency modulation 567
 - Phase modulation 568
 - PhiM 568
 - Ratio noise/system bandwidth
 - Minimum 445
 - Readjust
 - Automatic level control 493

- Recall
 - Instrument settings 712
 - User menu 767
- Recall instrument settings 914, 928
- Recall intermediate 713, 914
- Recorded SCPI commands
 - SCPI list 890
- Recording 1397
- Rectangular test signal 317
- Rectangular test signals
 - Settings 327
- Redo 813
 - Clear history 814
 - History 814
 - Settings 814
 - State 814
- Reference curve
 - Show, hide, assign 640
- Reference frequency 1397
- Reference frequency output
 - 1 GHz 499
 - 10 MHz, 100 MHz 499
 - Loop through 499
- Reference oscillator 495
 - Adjustment 500
 - Adjustment frequency 501
 - External frequency 497
 - Output frequency 499
 - Reference frequency, variable 498
 - RF off state 497
 - Source 497
 - Synchronization bandwidth 498
- Registers 830
- Release notes 26
- Reload
 - SCPI list 891
- Remaining days 780
- Remote 1396
 - LLO 1396
- Remote access 819
 - Active connections 848
 - DNS server 843
 - DNS suffix 843
 - GPIO address 845
 - GPIO resource (VISA resource string) 845
 - HISLIP resource (VISA resource string) 844
 - HUMS 850
 - Identification 847
 - IDN string 848
 - IEC/ IEEE bus address 845
 - Instrument emulations 847
 - IP address mode 842
 - Language 847
 - Network gateway 843
 - Network hostname 841
 - Network IP address 842
 - Network Mac address 843
 - Network resource (Ethernet resource string) 844
 - Network settings 840
 - Network status 841
 - OPT string 848
 - QR code 860
 - RS232 846
 - see Remote operation from a computer 92
 - Serial resource (VISA resource string) 845
 - Set IDN and OPT to default 847
 - Settings 838
 - Socket resource (VISA resource string) 844
 - Subnet mask 842
 - USB resource (VISA resource string) 845
 - Visa resource strings 843
 - VXI11 resource (VISA resource string) 844
 - Workgroup name 842
- Remote connection
 - Add floating license server 792
 - Configure license server restrictions 789, 791
 - Status 143
- Remote control 107
 - Access modes 820
 - Command 152
 - Command sequence 153
 - External instrument 205
 - GPIO 883
 - GPIO interface 825
 - History 153
 - IQ analog 1220
 - IQ digital 1220
 - Mode 152
 - Programming examples 911
 - RF envelope 1220
 - SCPI 819
 - Source subsystem 1018
 - Trace 153
- Remote operation 107
 - VNC 819
- Remote trace
 - LXI 866
- Removing sensitive data 1366
- REN 1421
- Rename
 - File 929
 - Instrument settings 722
- Renew
 - Occupation 782
- Reopen
 - Tutorial 106
- Required system configuration
 - Basics 110
- Resampling
 - External baseband signal 123
- Reset
 - List mode 543
 - RF frequency (delta phase) 495
 - Sweep 535
- Reset device parameters 917
- Reset values
 - Remote 915
- Resolution
 - Graphics 638
- Resolving internal adjustment failures 1360
- Resource string
 - RS232 825
 - USB 824
 - VISA 822
- Restart marker 384, 385
- Restoring configuration 704
- Result
 - Connection selftest (BNC) 1386
- Resulting file name 735
- Retrace
 - Sweep 533
- Retrigger
 - Common settings 263
 - DM 263

Rev. A / Rev. B 1xEV-DO	231
RF	
Signal	479
RF A/Rf B	
External RF and I/Q settings	141
RF A/Rf B connector	46
RF adapter port	1389
RF combined sweep	
State	532
RF couple	
External RF and I/Q instrument	144
RF envelope	190
RF frequency	
Configuring	483
External RF and I/Q instrument	145
RF frequency sweep	
State	531
RF frontend	199
RF hardware versions	
Appendix	1391
RF level	
Configuring	483
Digital attenuation	491
EMF display	743
External RF and I/Q instrument	145
Mode	491
Offset	493
PEP	483
Power-On state	743
Setting characteristics	492, 539, 614
Settings	489
RF Level	1397
RF level sweep	
State	532
RF OFF mode	
Attenuator settings	588
RF off state	
Reference oscillator	497
RF on	1396
RF ON, RF OFF, RF ON/OFF	482
RF output	
Amplitude	490
Impedance	482
PEP	483
Protection	589
State	482
RF Output	
Level range	540
RF output signal	
Phase	495
Phase reference	495
RF path	
External RF and I/Q	149
RF phase	
Configuring	483
RF ports alignment	679
RF signal	
Analog modulation	552
Attenuator	586
Automatic level control	589
Frequency	485
Phase	494
Power-On/EMF	742
User correction	593
RF state	
External RF and I/Q instrument	145
Rise delay	293

RMS	
Digital output	182, 184
RMS power	
BB Input	167
Channel	174
Roll off factor	
DM	290
Rotary knob	44
User variation	489, 494
Route to path A/B	161
RS232	
Baud rate	846
Interfaces	824
Parity	846
Remote access	846
Resource string	825
Serial (VISA resource string)	845
Stop bits	846
Rx antennas	
Fading and baseband configuration	131

S

S-Parameter	
Activate corrections	620
S-parameter file	
Ports	695
S-Parameter file	
Exchange	694
Safety instructions	19, 26
Samba services	
SMB client	807
SMB server	807
SAMBA/SMB	
How to access the instrument	726
Sample level	
ALC	593
Automatic level control	593
Sample rate	
Aggregated	174, 183
Channel	173, 180, 181
Link	174, 183
Source	165, 171, 180
Value	166
Where to find the value	122
Samples	
Blank segment	382
Samples per period	326
Sanitize	802
save	
Save	710
Save	
Control list	300
Editor	549, 601
Instrument settings	712
Sequencing list	387
User menu	767
Save and load	709
Save as	
Editor	549, 601
Save hard copy as	
bmp, jpg, png	734
Save immediate	712
Save instrument settings	915, 930
Save intermediate	915
Save list	379

- Save/Recall 406, 709
 - Dialog 710
 - Digital standard 710
 - DM 279
 - Firmware option settings 710
 - How to 713
 - I/Q output analog 190
 - SCPI-Export 893
- Saving
 - Trying out 73
- Saving files 919
- SBAS 233
- Scan
 - NRP sensor mapping 622
- Scan for
 - External RF and I/Q instrument 147
- Scenario
 - 1x4x4 MIMO 196
 - Single entity with 4x4 MIMO 196
- SCONfiguration subsystem 977
- SCPI
 - Error messages 1355
 - Export 719
 - Export settings 890
 - Import 719
 - LAN services 806
 - Output file 891
- SCPI export 891
 - Select file 891
 - Show file content 891
- SCPI Export
 - Format 891
- SCPI list
 - Commands of all settings 712
 - Display 889
 - Export 890
 - Recorded SCPI commands 890
 - Show all commands 712
- SCPI remote trace
 - LXI 866
- SCPI script
 - Select 771
- SCPI sequence
 - Send to external instrument 205
- SCPI-Export
 - Save/Recall 893
- Screen saver
 - Activate 744
 - State 741
 - Wait time 741
- Scroll bar handle
 - Display 1407
- Secure update policy
 - All packages 800
 - Confirm unsigned 800
 - R&S signed packages 800
- Security
 - Accept settings 808
 - Change password (setup) 810
 - Change user password (setup) 810
 - Confirm password (setup) 810
 - Confirm user password (setup) 809
 - Display lock 803
 - Enter password (setup) 808
 - New password (setup) 810
 - New user password (setup) 809
 - Old password (setup) 810
 - Old user password 809
 - Password management 808
 - Sanitize 802
 - Secure update policy 800
 - Security password 810
 - Settings 799
 - Setup 797
 - USB storage (setup) 801
 - User name (setup) 809
 - User password 809
 - Volatile memory 801
- Security password
 - Security 810
 - Setup 810
- Security procedures 26
- Security settings 797
- Segment # 381
- Segment down 381, 382, 389
- Segment marker 384
- Segment up 381, 382, 389
- Select
 - List mode data file 544
 - Setup file 771
 - User correction data file 597
- Select file 718
- Select free licenses
 - Occupation 782
- Select instrument
 - External RF and I/Q 148
- Select period
 - Occupation 782
- Self-calibration routines
 - About 1370
- Self-test
 - About 1370
 - Remote 916
- Selftest
 - ARB file (test generator) 1388
 - Connection selftest (BNC) 1385
 - Destination 1386
 - Execute (baseband) 1386
 - Frequency (test generator) 1388
 - Gain (test generator) 1388
 - Result 1386
 - Source 1385
 - Source (test generator) 1387
 - State (test generator) 1387
- Sensitive information
 - Protecting 700, 708
- Sensor
 - NRP power control 612
- Sensor name
 - NRP sensor mapping 623
- Sequencing graph 389
- Sequencing list 379, 387, 392
 - Load 387
 - New 387
- Serial
 - Visa resource string 845
- Serial bus 1362
- Serial data
 - External 236
 - Modulation data source 236
- Serial data, extern
 - LSB 285
 - MSB 285

Serial number	872	Display lock	803
NRP sensor mapping	623	Enter password (security)	808
Power sensors	617	GUI update	739
Service manual	26	Keyboard settings	740
Service request (SRQ)	833, 836	Layout (keyboard)	741
Service request enable register (SRE)	833	Load file	682
Remote	915	New password	809
Services		New password (security)	810
LAN	804	Old password (security)	810
Set according to	279	Password (protection)	799
Set connector default settings		Performing the front panel test	1374
Global connectors	574	Protection level	799
Set IDN and OPT to default		Screen saver	741
Emulation mode	847	Secure update policy	800
Set level via		Security password	810
Digital output	184	Test (touchscreen)	1374
Set noise level via	447	USB storage (security)	801
Set to default	406	User name (security)	809
ARB	323	User password	809
DM	279	Wait time	741
Fading and baseband configuration	134	Setup control	
MCCW	421	External instrument	205
Set up		Setup description	
R&S EX-IQ-BOX	224	Where to find information	815
Set up remote control		Setup files	
GPIB	883	Data exchange	731
Settings		SETUP key	739
Active connections	848	Shape	
Appearance	741	Analog modulation	560
Attenuator	587	LF generator	577
Automatic level control	591	LF output	577
Check front panel	1374	Period	577
Delayed adjustment	1382	Pulse duty cycle	578
Display	740	Pulse width	578
FM	566	Sweep	534
Instrument emulations	847	Trapeze high	578
Internal adjustments	1380	Trapezoid rise, fall	578
Keyboard	740	Triangle rise	578
Licenses	775	Shared connectors	
List mode	540	Global connectors	746
Local oscillator	507	Shifting the baseband signal	429
Managing	699	Shortcut to a network drives	
NRP power control	611	How to	724
NRP power viewer	610	Show	
NRP sensor mapping	621	SCPI list	712
On power-on	742	Show file content	
Protection	798	SCPI export	891
Remote access	838	Show powers for output	
RF level	489	AWGN	446
SCPI export	890	Show SCPI command	889
Security	799	Close	889
UCOR	596	Copy	889
Undo/Redo	814	Signal	
User key	770	Analog	1394
Setup		Digital	1394
Accept security settings	808	Signal + Interferer	
Adjusting display	739	PEP	450
Adjusting keyboard	739	Signal + Noise	
Annotation frequency	802	PEP	450
Annotation level	803	Signal duration	408
Appearance settings	741	Signal generation status	263
Calibrate (touchscreen)	1374	Signal monitoring	
Change password	810	Graphical display	627
Change password (security)	810	Signal output	
Confirm password	809	LF	580
Confirm password (security)	810	Signal outputs	
Dialog overview	815	Fading and baseband configuration	129

- Signal period mode 408
- Signal power 448
- Signal routing
 - Baseband 158, 161
 - Fading 159
 - Fading and baseband configuration 130
 - Settings 157
 - Standard mode only 159
- Signal routing setting
 - Overview of the possible ways 113
- Signal routing settings
 - Baseband 112
 - Fading 112
 - Overview and basics 112
- Signal shape
 - Analog modulation 560
 - Pulse 560
 - Trapezoid 560
 - Triangle 560
- Signal source
 - Analog modulation 554
 - External (analog modulation) 555
 - Internal (analog modulation) 554
- Signal to connector mapping
 - How to 763
- Signal/Noise ratio 448
- Signals
 - Trigger/Marker/Clock 748
- Simultaneous baseband signals
 - Inside the R&S SMW 271
- Simultaneous signal generation start
 - Coupled trigger settings 253
 - In all basebands 253
 - Several instruments 673
- Sine test signal 317
- Sine test signals
 - Settings 326
- Single
 - Common settings 263
 - DM 263
 - Execute (list mode) 543
- Single sideband signal
 - Generation 426
- Slow IQ signals
 - Settings 129
- SMB (Samba)
 - LAN services 806
- Snapshots
 - Dialog 742
- Socket
 - Visa resource string 844
- Softkey bar
 - See Taskbar 96
- Software options 85
- Solid-state drive 50
- Source
 - AM, FM, Φ M 566
 - Analog modulation 554
 - Baseband power 658
 - Connection selftest (BNC) 1385
 - External digital signal 164, 171
 - Graphics 636
 - LF output 581, 584
 - Power ramp control 293
 - Power sensors 618
 - Pulse modulation 564
 - Reference oscillator 497
 - Sweep trigger 533
 - Test generator selftest 1387
- Source points for graphic display 632
- Source subsystem
 - Remote control commands 1018
- Source, multiplexed
 - Graphics 637
- Spacing
 - Frequency sweep 534, 537
 - RF frequency / level sweep 534, 537
 - RF level sweep 538
- Span
 - Frequency sweep 536
- Specified trigger delay 266
- Spectrum display 632
- SRE 830
- SRE (service request enable register) 833
- SRQ 1421
- SRQ (service request) 833, 836
- SSB
 - Generation 426
- SSH
 - LAN services 806
- Standard 279
- Standard settings 406, 421
- DM 279
- Standard-compliant signals 230
- Standby
 - Key 42
- Start
 - Frequency sweep 536
 - RF level sweep 538
- Start delay 415
- Start phase 414
- Start/stop carrier index 414
- Starting gain 414
- Starting the signal generation with the first sample 250
- State 681
 - Adjustment (reference oscillator) 500
 - AM, FM, Φ iM 565
 - ARB 322
 - Automatic level control 591
 - AWGN 443
 - BB Input 164, 171
 - Carrier (MCCW) 423
 - DM 279
 - I/Q digital output 179
 - I/Q modulation 472
 - Impairments 464
 - LF frequency sweep 532, 577
 - List mode 541
 - MCCW 420
 - NRP power control 612
 - Power sensors 617
 - PULM 564
 - Pulse generator output 574
 - Pulse modulation 564
 - RF frequency / level sweep 532
 - RF frequency sweep 531
 - RF level sweep 532
 - RF output 482
 - RF output protection 589
 - Screen saver 741
 - Test generator selftest 1387
 - UCOR 597
 - Undo/Redo 814

- Status
 - Queries 837
 - Remote connection to external RF and I/Q 143
- Status bar
 - Display 94
- Status byte
 - Remote 912, 915
- Status byte (STB) 833
- Status information 779
- Status messages 1396
 - ALC on 1402
 - AttFixed 1403
 - Auto 1402
 - Busy 1397
 - Frequency 1396
 - Frequency offset 1396
 - Level 1397
 - ListMode 1403
 - Modulation 1397
 - OvenCold 1403
 - OVERLOAD 1397
 - Recording 1397
 - Reference frequency 1397
 - Remote LLO 1396
 - RF level 1397
 - RF Level offset 1397
 - RF Level offset EMF 1397
 - RF off 1396
 - RF on 1396
 - S&H 1402
 - Sweep 1397
 - Table 1402
 - UCorr 1403
- Status register
 - Response format deinition 952
- Status registers 830
 - CONDition 832
 - ENABLE 832
 - EVENT 832
 - Model 832
 - NTRansition 832
 - Parts 832
 - PTRansition 832
- Status reporting system 829
 - Application 836
 - Common commands 912
- Status settings
 - LXI 861
- STB 830
- Step
 - Frequency sweep 537
 - Linear (frequency sweep) 537
 - Logarithmic (frequency sweep) 537
 - RF level sweep 539
- Step count
 - Combined RF frequency / level sweep 538
- Step width
 - User variation 489, 494
- Stop
 - Frequency sweep 536
 - RF level sweep 538
 - Tutorial 106
- Stop bits
 - RS232 interface 846
- Storage 1370
- Storage location
 - /usb/ 699
 - /var/user 699
 - /var/volatile 699
 - Mass memory 918
- Stream
 - Coupling 441
 - Number of 131
- Stream distributing
 - Settings 136
- Stream extender 133
- Stream mapping
 - Default 115
 - Rule 115
 - Settings 136
- Subnet mask 842
- Subset 131
- Subsystem
 - AM 1039
 - FM 1044
 - Keyboard 958
 - Occupy license 1268
 - OUTPut 1019
 - Phase 1271
 - PM 1049
 - Power 1272
 - PULM 1053
 - Pulse generator 1270
 - SOURce:INPut 1019
- Sum signal
 - How to shift basebands 433
- Support 1366
- Suppressing
 - Carrier leakage 433
- Surveillance
 - Signal generation 627
- Swap
 - Digital input signals 164, 171
- Sweep 1397
 - Center frequency 536
 - Current frequency 532
 - Current level 532
 - Dwell time 534
 - Execute single 535
 - Frequency span 536
 - Mode 533
 - Reset 535
 - Retrace 533
 - Shape 534
 - Spacing 534, 537, 538
 - Start/stop frequency 536
 - Start/stop level 538
 - State (LF frequency) 532, 577
 - State (RF combined) 532
 - State (RF frequency) 531
 - State (RF level) 532
 - Step 537, 539
 - Trigger manually 535
- Switch over
 - Flexible 395
 - High speed 396
- Switching
 - Modulation to CW 289
 - On or off 38
- Symbol clock
 - For serial data 236

Symbol rate	
DM	280
Symbolic name	
External RF and I/Q	148
Sync. Output to external trigger	265
Sync. Output to trigger	265
Synchronization	
Assign signal	673
Mode	672
State	672
Sync signal state	672
Synchronization bandwidth	
Reference oscillator	498
Synchronize	
External RF and I/Q instrument	144
Synchronizing	
Several instruments	670
Signal generation	678
Synchronizing instruments	
How to	669
Synchronous generation start	
External global trigger/clock	246
System	
Factory preset	705
System bandwidth	
AWGN	444
Noise level (absolute)	582
Noise level (relative)	582
System configuration	
Advantages	114
Basics	113
General workflow	108
MxN MIMO	114
Preset	988
System drive	
Hard disk, HDD	50
Solid state, SSD	50

T

t_hold	
Extern serial data	237
t_setup	
Extern serial data	237
T/M connector	
Trigger/Marker	748
T/M/(C) connector	
Trigger/Marker/(Clock)	748
Tab labels	97
Tag type	358
Clock	351
Comment	349
Control length	351, 362
Control list width4	360
Copyright	350
Data bit length	361
Data list	362
Date	350
Emptytag length	352
Level offset	353
Magic	348
Marker mode	354
Samples	355
Segment clock mode	358
Segment comment	360
Segment count	357
Segment duration	357
Segment files	360
Segment length	357
Segment level mode	359
Segment level offset	359
Segment start	358
Settings file	360
Trace list	355, 363
Waveform length	356
Take measured level as reference	
NRP power control	613
Tapping points	632
Target crest factor	407
Target level	
NRP power control	613
TD-LTE	110
TD-SCDMA	231
Temperature offset	
Internal adjustments	1381
Temporary files	700, 708
Test	
Check front panel	1374
Test case	
Finding out the required settings	194
How to set the system configuration	194
Test signal	
Amplitude of test signal	328
ARB generator	317
Frequency	326, 328
Offset DC	328
Phase offset Q	327
Samples per period	326, 328
Value I, Q	329
Testing	
High-power amplifiers	416
TETRA Release 2	230
Text entry	100
Threshold	
Pulse modulation	565, 759
Throughput delay	
Extern serial data	285
Time	
UTC	1372
Time protocol	
Settings	1372
Time-based trigger	
State	264
Timeout	
Filter (power sensors)	619
Timing	
External data	286
Tooltips	
Show	102
Touch panel	
see Touchscreen	1375
Touch screen	
see Touchscreen	1375
Touchscreen	
Adjusting	1375
Alignment	1375
Calibrate	1374
Calibration	1375
Compared with mouse	92
Overview	41
Test	1374
Usage	92
Touchscreen calibration	
Check front panel	1375

Touchscreen test	
Perform	1377
Trace	
Enable in graphic	640
Tracing	
Messages	884
SCPI commands	884
Tracking	
Signal parameter	627
Transition	
PULM	564
Pulse modulation	564
Transmitter test	
Generating multi carrier signal	416
Trapezoid	
High (LF generator)	578
LF signal	560
Rise, fall	578
Trial license table	781
Trial licenses	773
Trial period	780
Triangle	
LF signal	560
Rise	578
Trigger	
Event (remote)	916
Execute	759
Execute (list mode)	543
Generate signal manually	757
Manually	757
Sweep, manually	535
Trigger box	679
Trigger delay	
Actual	267
Expressed in seconds	266
Expressed in time	266
Resulting	267
Unit	266
Trigger Delay	
DM	266
Trigger event	245
Delay	251
Suppress	251
Trigger example	392
Trigger local connector	
see T/M/(C) and T/M	748
Trigger Mode	
Common settings	263
DM	263
Trigger settings	
Common to all basebands	753
Trigger signal duration	267
Trigger signals	
Baseband	245
Trigger source	
Graphics	637
List mode	541
Sweep	533
Trigger Source	
DM	265
Trigger, accidental	
Avoiding	250
Triggering	
All basebands	271
Basebands simultaneous	253
Multi-segment waveform	374

Segment	374
Time-based	273
Triggering synchronous	679
Triggering synchronous the basebands	246
Tripped	
RF output protection	589
Tutorial	102
Tutorials	26
How to open	104
Tx antennas	
Fading and baseband configuration	131

U

UCOR	
About	594
Calibrate RF output level with power sensor	623
Data	597
Display correction file data	598
Display correction value	597
Edit data	598
Export user data	546, 605
File catalog	597
File settings, import/export	545, 604
Fill with sensor	602
Import/export	545, 604
Load from file	546, 605
RF signal	593
Select file	597
Settings	596
State	597
Values, defining	548, 600
UCorr	1403
Underflow	
External data, remedy	284
Undo	813
Clear history	814
History	814
Settings	814
State	814
Units X-axis	
Change	640
Unmodulated signal	239
Unpacking the instrument	29
Up-conversion	
Important parameters	121
USB	
Interfaces	824
Resource string	824
Storage (security)	801
Visa resource string	845
Use default aperture time	
Power sensors	620
User clock	384
User correction	
see UCOR	593
User data	
Access	715
Load from a specific directory	920
User files	699
User filter	
Catalog	291
Delete	291
User interface	
Lock	803

User key	765
Action name	770
Add, change, delete action	771
Assign actions	771
Define action	770, 771
SCPI command	771
Select dialog ID	771
Settings	770
Toggle between define and execute mode	771
User manual	25
User mapping	
Catalog	287
Delete	287
User menu	765
Access	768
Clear	767
Create	768
Recall	767
Save	767
Settings	767
User name	
Setup (security)	809
User password	
Security	809
Setup	809
User preset	704
User variation	
Activating	489, 494
Digital I/Q out	185
Level	489, 494
RF	489, 494
User-definable preset	
Recall	766
Utility keys	
Overview	42
V	
Value	
Sample rate	180
Variable FSK	
Deviation	288
Selecting	288
Variable reference frequency	498
Varying	
RF frequency and level	489, 494
Vector diagram	628
Vector modulation	469, 470
Verifying	
Signal parameter	627
Version	
Firmware	1363
Video polarity	
Pulse modulation	564
Videos	27
VISA	822
Resource string	822
Visa resource string	
Ethernet	844
GPIB	845
HISLIP	844
Serial	845
Socket	844
USB	845
VXI11	844
Visa resource strings	843

VNC	
LAN services	806
Using in a LAN	107
Volatile memory	700, 708
Volatile mode	
Activate	801
VXI11	
Visa resource string	844

W

Wait	
Remote	916
Wait time	
Screen saver	741
Wanted signal	
Use an external digital signal	120
Warnings	1354, 1357
Waveform	
Common for all basebands	323
Edit, rules	347
Info	324, 381
Load file	324
Maximum length	320
Optimizing	319
Per baseband	323
Waveform file	
Corrupted, reasons	347
What's new	24
White papers	27
Wi-Fi	
WLAN	901
Width	
Double pulse (PULM)	573
PULM	573
Pulse modulation	573
Wireless connectivity standards	232
Wireless LAN standards	231
WLAN standards	231, 232
Workflow	
Connecting external instruments	108
Multi-segment waveform	393
System configuration	108
Workgroup name	842
Wrap-around	
Avoiding problems	403
Overcome problem	395

Z

Zero	
Power Sensors	617
Zeroconf	
IP address	1359
Zeroconf (Avahi) protocol	870
Zoom	
Control list display	299
Zoom In/Out	
Pulse graph	575
Zoom position	
Pulse graph	575
Zooming	
Pulse graph	575