

MXO 4 Series Oscilloscope User Manual



1335533702
Version 09

ROHDE & SCHWARZ
Make ideas real



This manual describes the following MXO 4 series models with firmware version 2.2.x.x:

- MXO 4 (1335.5050K04)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

TEKTRONIX, TEK, and TEKPROBE are registered trademarks of Tektronix, Inc.

All other trademarks are the properties of their respective owners.

1335.5337.02 | Version 09 | MXO 4 Series

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol.

Contents

1	Safety and regulatory information.....	17
1.1	Safety instructions.....	17
1.2	Labels on the product.....	22
1.3	Warning messages in the documentation.....	23
1.4	Where to find key documents on Rohde & Schwarz.....	23
1.5	Korea certification class A.....	24
2	Preface.....	25
2.1	Key features.....	25
2.2	Documentation overview.....	25
2.2.1	Manuals and instrument help.....	26
2.2.2	Specifications and product brochure.....	26
2.2.3	Calibration certificate.....	27
2.2.4	Release notes, open source acknowledgment.....	27
2.2.5	Application notes, application cards, videos.....	27
2.3	Options described in this document.....	27
3	Getting Started.....	29
3.1	Preparing for use.....	29
3.1.1	Lifting and carrying.....	29
3.1.2	Unpacking and checking.....	29
3.1.3	Choosing the operating site.....	29
3.1.4	Setting up the product.....	30
3.1.5	Considerations for test setup.....	31
3.1.6	Connecting to power.....	32
3.1.7	Connecting to LAN.....	33
3.1.8	Connecting external devices.....	33
3.1.9	Switching on or off.....	34
3.2	Instrument tour.....	35
3.2.1	Front view.....	35
3.2.2	Side view.....	38
3.2.3	Rear view.....	38
3.2.4	Keys and controls.....	40

3.2.5	Checking the functionality.....	48
4	Operating the instrument.....	50
4.1	Means of manual interaction.....	50
4.2	Touchscreen display.....	51
4.2.1	Information on the display.....	51
4.2.2	Control elements on the GUI.....	54
4.3	Applications.....	56
4.4	Working with waveforms.....	57
4.5	Rohde & Schwarz SmartGrid.....	59
4.6	Toolbar.....	61
4.6.1	Using the toolbar.....	61
4.6.2	Configuring the toolbar.....	61
4.6.3	Toolbar functions.....	62
4.7	Using the selection menu.....	65
4.8	Using dialogs.....	66
4.9	Entering data.....	67
4.10	Displaying results.....	69
4.11	Adding annotations.....	70
4.12	Information and notifications.....	72
4.13	Getting user assistance.....	74
4.13.1	Displaying help.....	74
4.13.2	Using help.....	74
5	Instrument setup.....	76
5.1	System settings.....	77
5.1.1	About settings.....	77
5.1.2	Network settings.....	77
5.1.3	Remote settings.....	79
5.1.4	Localization settings.....	80
5.1.5	Date and time settings.....	81
5.2	Option settings.....	82
5.2.1	Software options settings.....	82
5.3	Appearance settings.....	85
5.3.1	Colors.....	85

5.3.2	Grid.....	87
5.3.3	Dialogs.....	88
5.3.4	Peak list.....	89
5.3.5	Miscellaneous.....	90
5.4	Display settings.....	91
5.4.1	Persistence settings.....	91
5.4.2	Signal settings.....	92
5.4.3	Backlight settings.....	93
5.5	Front panel settings.....	93
5.5.1	Hardkeys: function assignment.....	93
5.5.2	Knobs.....	94
5.5.3	LED.....	95
5.6	Preset setup.....	95
5.6.1	Preset settings.....	95
5.6.2	Factory preset.....	97
5.6.3	Secure erase.....	97
5.6.4	Restoring settings.....	98
5.7	Maintenance settings.....	99
5.7.1	Firmware update.....	99
5.7.2	Alignment.....	99
5.7.3	Power management.....	102
5.7.4	Service.....	102
5.8	Save / recall.....	103
5.8.1	Autonaming.....	103
5.8.2	CSV export.....	105
6	Acquisition and waveform setup.....	107
6.1	Horizontal setup.....	107
6.1.1	About the horizontal system.....	107
6.1.2	Horizontal Setup settings.....	108
6.1.3	Zoom settings.....	109
6.1.4	Roll mode.....	109
6.1.5	Reference clock.....	111
6.2	Acquisition.....	112

6.2.1	About the acquisition system.....	112
6.2.2	Acquisition Setup settings.....	113
6.2.3	Segmentation settings.....	118
6.2.4	High definition mode.....	120
6.2.5	History settings.....	121
6.2.6	Speed.....	121
6.3	Vertical setup.....	122
6.3.1	About the vertical system.....	122
6.3.2	Vertical Setup settings.....	123
6.3.3	Bandwidth settings.....	126
6.3.4	Probe settings.....	127
6.3.5	Other vertical settings.....	127
6.4	Probes.....	128
6.4.1	Common probe settings.....	128
6.4.2	Setup for passive probes.....	131
6.4.3	Setup for active voltage probes.....	132
6.4.4	Setup for current probes.....	138
6.4.5	Modular probes.....	140
6.4.6	Setup for optical isolated probe systems.....	144
6.4.7	Probe adapter R&S RT-Z2T.....	147
6.4.8	Probe info.....	148
6.4.9	Adjusting passive probes.....	149
7	Trigger.....	151
7.1	Basics of triggering.....	151
7.1.1	Trigger information.....	152
7.2	Common trigger settings.....	153
7.3	Trigger sequence.....	155
7.3.1	Sequence setup.....	156
7.4	Trigger types.....	157
7.4.1	Edge trigger.....	157
7.4.2	Edge trigger on external trigger source.....	158
7.4.3	Glitch trigger.....	160
7.4.4	Width trigger.....	162

7.4.5	Runt trigger.....	163
7.4.6	Window trigger.....	165
7.4.7	Timeout trigger.....	167
7.4.8	Interval trigger.....	168
7.4.9	Slew rate trigger.....	170
7.4.10	Setup & Hold.....	172
7.4.11	State trigger.....	174
7.4.12	Pattern trigger.....	175
7.4.13	Line trigger.....	180
7.5	Trigger mode / holdoff.....	180
7.6	Hysteresis.....	182
7.7	Channel filter.....	184
7.8	Actions on trigger.....	185
7.9	Zone trigger.....	187
7.9.1	Creating trigger zones and areas.....	192
7.9.2	Zone trigger setup settings.....	193
7.9.3	Logic operator settings.....	195
7.9.4	History settings.....	197
8	Waveform analysis.....	198
8.1	Zoom.....	198
8.1.1	Zoom settings.....	198
8.1.2	Zooming for details.....	201
8.2	Mathematics.....	202
8.2.1	Creating math waveforms.....	203
8.2.2	General math waveforms settings.....	203
8.2.3	Operator settings.....	205
8.2.4	Filter settings.....	206
8.2.5	Equations.....	207
8.2.6	Scale settings for math waveforms.....	212
8.3	History.....	213
8.3.1	About history.....	213
8.3.2	History setup.....	214
8.3.3	Quick access history dialog.....	217

8.3.4	Using history.....	218
8.4	Reference waveforms.....	219
8.4.1	Working with reference waveforms.....	219
8.4.2	Settings for reference waveforms.....	221
9	Measurements.....	228
9.1	Cursor measurements.....	228
9.1.1	Cursors and results of cursor measurements.....	228
9.1.2	Using cursors.....	229
9.1.3	Settings for cursor measurements.....	231
9.2	Automatic measurements.....	238
9.2.1	Measurement results.....	241
9.2.2	Gate settings for measurements.....	242
9.2.3	Reference level.....	244
9.2.4	Measurement types.....	247
9.2.5	Settings for measurements.....	251
9.2.6	Statistics.....	257
9.2.7	Track.....	258
10	Spectrum analysis.....	264
10.1	Fundamentals of spectrum analysis.....	264
10.2	Configuring spectrum waveforms.....	266
10.3	Spectrum setup.....	268
10.4	Spectrum scale.....	271
10.5	Spectrum gate.....	272
10.6	Spectrum peak list.....	273
11	Applications.....	278
11.1	Frequency response analysis (option R&S MXO4-K36).....	278
11.1.1	About the frequency response analysis plot.....	279
11.1.2	Using a frequency response analysis.....	281
11.1.3	Settings for frequency response analysis.....	281
11.1.4	FRA saving results.....	291
11.1.5	Dependencies of the measurement setup.....	292
11.2	Power analysis (option R&S MXO4-K31).....	293

11.2.1	Power measurement selection.....	293
11.2.2	Power measurements.....	295
11.2.3	Reference level.....	311
11.2.4	Deskew.....	313
11.2.5	Offset compensation.....	315
11.3	Digital voltmeter.....	315
11.3.1	Using the digital voltmeter.....	316
11.3.2	Settings of the digital voltmeter.....	317
12	Data and file management.....	319
12.1	Save and recall user settings.....	320
12.1.1	Using savesets.....	321
12.1.2	Waveform generator saveset.....	322
12.2	Save and recall waveform data.....	324
12.2.1	Waveform settings.....	324
12.2.2	Saving waveforms.....	326
12.2.3	Waveform export files.....	328
12.3	Saving results.....	333
12.4	Screenshots.....	335
12.4.1	Screenshot settings.....	335
12.4.2	Configuring and saving screenshots.....	338
12.5	File browser dialog.....	338
13	Protocol analysis.....	340
13.1	Basics of protocol analysis.....	340
13.1.1	Setup - general settings.....	341
13.1.2	Thresholds.....	342
13.1.3	Advanced.....	343
13.1.4	Display.....	343
13.1.5	Filter.....	345
13.1.6	Trigger.....	346
13.1.7	Export protocol results.....	346
13.1.8	Bit pattern editor.....	348
13.2	SPI bus (option R&S MXO4-K510).....	349
13.2.1	About the SPI protocol.....	349

13.2.2	SPI configuration.....	350
13.2.3	SPI filter.....	353
13.2.4	SPI trigger.....	356
13.2.5	SPI decode results.....	358
13.2.6	Performing SPI decoding.....	359
13.3	QUAD-SPI bus (option R&S MXO4-K510).....	363
13.3.1	Basics.....	363
13.3.2	QUAD-SPI configuration.....	364
13.3.3	QUAD SPI filter.....	368
13.3.4	QUAD-SPI decode results.....	371
13.3.5	Performing QUAD-SPI decoding.....	373
13.4	I²C (option R&S MXO4-K510).....	374
13.4.1	About the I ² C protocol.....	375
13.4.2	I ² C configuration.....	377
13.4.3	I ² C filter.....	380
13.4.4	I ² C trigger settings.....	383
13.4.5	I ² C decode results.....	387
13.4.6	Performing I2C decoding.....	389
13.5	UART (option R&S MXO4-K510).....	393
13.5.1	About the UART / RS-232 interface.....	393
13.5.2	UART configuration.....	394
13.5.3	UART filter.....	398
13.5.4	UART trigger.....	401
13.5.5	UART decode results.....	402
13.5.6	Performing UART decoding.....	404
13.6	CAN (option R&S MXO4-K520).....	407
13.6.1	CAN configuration.....	408
13.6.2	CAN filter.....	414
13.6.3	CAN trigger settings.....	416
13.6.4	CAN decode results.....	425
13.6.5	Performing CAN decoding.....	427
13.7	LIN (option R&S MXO4-K520).....	432
13.7.1	LIN configuration.....	433

13.7.2	LIN trigger settings.....	435
13.7.3	LIN filter.....	437
13.7.4	LIN decode results.....	440
13.7.5	Performing LIN decoding.....	442
13.8	SPMI (option R&S MXO4-K550).....	445
13.8.1	SPMI configuration.....	445
13.8.2	SPMI filter.....	448
13.8.3	SPMI decode results.....	450
13.8.4	Performing SPMI decoding.....	452
13.9	10BASE-T1S (option R&S MXO4-K560).....	453
13.9.1	10BASE-T1S configuration.....	453
13.9.2	10BASE-T1S filter.....	455
13.9.3	10BASE-T1S decode results.....	457
13.9.4	Performing 10BASE-T1S decoding.....	459
13.10	ARINC 429 (option R&S MXO4-K530).....	460
13.10.1	ARINC 429 basics.....	460
13.10.2	ARINC 429 configuration.....	461
13.10.3	ARINC 429 filter.....	464
13.10.4	ARINC 429 decode results.....	467
14	Mixed signal option (MSO, R&S MXO4-B1).....	470
14.1	Logic configuration.....	470
14.1.1	Setup.....	470
14.1.2	Bus.....	473
14.1.3	Label settings.....	474
14.1.4	Skew settings.....	475
14.2	Display.....	476
14.2.1	Logic bus - decode table.....	477
15	Waveform generator (option R&S MXO4-B6).....	478
15.1	Setup of the waveform generator.....	478
15.1.1	General settings.....	478
15.1.2	Modulation settings.....	486
15.1.3	Sweep settings.....	489
15.1.4	Arbitrary waveforms.....	490

15.2 Synchronize settings.....	494
15.3 Configuring the waveform generator.....	495
15.3.1 Configuring a function waveform.....	495
15.3.2 Configuring a modulation waveform.....	495
15.3.3 Configuring a sine sweep waveform.....	497
15.3.4 Configuring an arbitrary waveform.....	497
16 Network operation and remote control.....	499
16.1 Connecting the instrument to the network (LAN).....	499
16.1.1 Connecting the instrument to the network.....	500
16.1.2 Assigning the IP address.....	500
16.1.3 Using host names.....	500
16.2 Web interface.....	501
16.2.1 Settings on the MXO 4.....	501
16.2.2 Web browser.....	502
16.3 Remote operation with VNC client.....	507
16.4 Remote control.....	507
16.4.1 Remote control interfaces and protocols.....	507
16.4.2 Starting and stopping remote control.....	509
16.5 Remote control - status reporting system.....	510
16.5.1 Hierarchy of status registers.....	510
16.5.2 Structure of a SCPI status register.....	512
16.5.3 Contents of the status registers.....	513
16.5.4 Error queue.....	518
16.5.5 Reset values of the status reporting system.....	518
17 Remote control commands.....	520
17.1 Conventions used in remote command description.....	520
17.2 Finding the appropriate command.....	521
17.3 Frequently used parameters and suffixes.....	521
17.3.1 Waveform parameter.....	521
17.3.2 Slope parameter.....	522
17.3.3 Polarity parameter.....	522
17.4 Programming examples.....	522
17.4.1 SmartGrid layout with zoom.....	522

17.4.2	Saving screenshots to file.....	526
17.4.3	Data transfer in roll mode.....	527
17.5	Common commands.....	527
17.6	General remote settings.....	531
17.7	Instrument setup.....	533
17.7.1	System.....	533
17.7.2	SmartGrid.....	535
17.7.3	Toolbar.....	541
17.7.4	Annotations.....	541
17.7.5	Appearance.....	553
17.7.6	Display.....	557
17.7.7	Preset.....	563
17.7.8	Maintenance.....	564
17.8	Acquisition and setup.....	565
17.8.1	Starting and stopping acquisition.....	565
17.8.2	Horizontal setup.....	566
17.8.3	Roll mode.....	568
17.8.4	Vertical setup.....	569
17.8.5	Waveform data export.....	574
17.8.6	Acquisition setup.....	576
17.8.7	Fast segmentation.....	581
17.8.8	Probes.....	581
17.8.9	High definition mode.....	603
17.8.10	Reference clock.....	604
17.9	Trigger.....	604
17.9.1	Common trigger settings.....	605
17.9.2	Trigger sequence.....	607
17.9.3	Edge trigger.....	609
17.9.4	Glitch trigger.....	611
17.9.5	Width trigger.....	612
17.9.6	Runt trigger.....	614
17.9.7	Window trigger.....	616
17.9.8	Timeout trigger.....	619

17.9.9	Interval trigger.....	620
17.9.10	Slew rate trigger.....	622
17.9.11	Setup & Hold.....	624
17.9.12	State trigger.....	626
17.9.13	Pattern trigger.....	628
17.9.14	Trigger mode, holdoff.....	630
17.9.15	Hysteresis.....	633
17.9.16	Channel filter.....	635
17.9.17	Actions on trigger.....	636
17.9.18	Zone trigger.....	638
17.10	Waveform analysis.....	644
17.10.1	Zoom.....	644
17.10.2	Mathematics.....	653
17.10.3	History.....	658
17.10.4	Reference waveforms.....	661
17.11	Data management.....	670
17.11.1	Instrument settings.....	670
17.11.2	Saveset.....	677
17.11.3	Gen saveset.....	677
17.11.4	Waveform export to file.....	677
17.11.5	Results.....	680
17.11.6	Screenshots.....	681
17.12	Automatic measurements.....	684
17.12.1	General settings.....	685
17.12.2	Measurement-specific settings.....	687
17.12.3	Results.....	690
17.12.4	Statistics.....	693
17.12.5	Gate.....	695
17.12.6	Reference levels.....	698
17.12.7	Tracks.....	702
17.13	Cursor measurements.....	704
17.13.1	Cursor setup.....	705
17.13.2	Cursor results.....	712

17.13.3	Peak search using cursors.....	714
17.13.4	Cursor appearance.....	716
17.14	Spectrum analysis.....	717
17.14.1	Spectrum setup.....	717
17.14.2	Spectrum gate.....	725
17.14.3	Peak list.....	726
17.14.4	Data export of spectrum waveforms.....	730
17.15	Applications.....	732
17.15.1	Frequency response analysis (option R&S MXO4-K36).....	732
17.15.2	Power analysis (option R&S MXO4-K31).....	747
17.15.3	Digital voltmeter.....	773
17.16	Protocols.....	775
17.16.1	Configuration settings for all serial protocols.....	776
17.16.2	SPI (option R&S MXO4-K510).....	780
17.16.3	Quad SPI (option R&S MXO4-K510).....	799
17.16.4	I ² C (option R&S MXO4-K510).....	819
17.16.5	UART / RS-232 (option R&S MXO4-K510).....	839
17.16.6	CAN (option R&S MXO4-K520).....	855
17.16.7	LIN (option R&S MXO4-K520).....	888
17.16.8	SPMI (option R&S MXO4-K550).....	905
17.16.9	10BASE-T1S (option R&S MXO4-K560).....	920
17.16.10	ARINC 429 (option R&S MXO4-K530).....	936
17.17	Mixed signal option (option R&S MXO4-B1).....	949
17.17.1	Digital channels.....	949
17.17.2	Logic configuration.....	952
17.17.3	MSO data.....	960
17.18	Waveform generator (option R&S MXO4-B6).....	962
17.18.1	Waveform generator setup.....	963
17.18.2	Synchronize settings.....	980
17.19	Status reporting.....	981
17.19.1	General commands.....	982
17.19.2	STATus:OPERation register.....	982
17.19.3	STATus:QUEStionable registers.....	983

17.19.4	Reading out the CONDition part.....	985
17.19.5	Reading out the EVENT part.....	986
17.19.6	Controlling the ENABLE part.....	986
17.19.7	Controlling the negative transition part.....	987
17.19.8	Controlling the positive transition part.....	988
17.19.9	Programming tips and examples.....	989
17.20	Deprecated commands.....	991
17.20.1	Base instrument.....	991
17.20.2	Options.....	991
18	Maintenance and support.....	993
18.1	Cleaning.....	993
18.2	Changing fuses.....	993
18.3	Contacting customer support.....	993
18.4	Information for technical support.....	994
18.5	Data security.....	994
18.6	Transporting.....	995
18.7	Storage.....	995
18.8	Disposal.....	995
	List of commands.....	997
	Index.....	1030

1 Safety and regulatory information

The product documentation helps you to use the product safely and efficiently.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 17. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Oscilloscopes and Accessories" are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

Intended use

The MXO 4 oscilloscope is designed for measurements on circuits that are only indirectly connected to the mains or not connected at all. It is not rated for any measurement category.

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the data sheet.

Target audience

The target audience of this document includes developers and technicians, administrators and maintenance personnel using oscilloscopes and probes. The required skills and experience of the users depend on the test setup and application of the product.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at <https://www.rohde-schwarz.com/support>.

In these safety instructions, the term "product" covers instruments (oscilloscopes), probes and their accessories.

Lifting and carrying the instrument

Check the specifications document for the maximum weight of the instrument. A single person can only carry a maximum of 18 kg safely depending on age, gender and physical condition. If your instrument is heavier than 18 kg, do not move or carry it by yourself.

Use the instrument handles to move or carry the instrument. Do not use the mounted accessories instead of the handles. Accessories are not designed to carry the weight of the instrument.

To move the instrument safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces and measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power and grounding

The mains power supply input of the instrument complies with overvoltage category II. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death.

Take the following measures for your safety:

- Do not use an isolating transformer to connect the instrument to the mains power supply.
- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- If a product has an exchangeable fuse, its type and characteristics are indicated next to the fuse holder. Before changing the fuse, switch off the product and disconnect it from the power source. How to change the fuse is described in the product documentation.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.
- Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Performing measurements

Take the following measures for your safety:

- To ascertain a voltage-free state, use an appropriate voltage tester. Any measurement setup including an oscilloscope is not suitable for this purpose.
- The maximum input voltage on channel inputs and the external trigger input must not exceed the value specified in the specifications document.
- Observe all voltage and current ratings of the instrument, the probes, and the accessories. Exceeding the allowed voltages can lead to an electric shock. Limits and ratings are marked on the products and listed in the specifications documents.
Consider that the rated voltage depends on the frequency. The voltage limitation curves or values are provided in the specifications document.
- Never cause any short circuits when measuring sources with high output currents.
- Use only probes and accessories that comply with the measurement category (CAT) of your measurement task. If the product is rated for any measurement category, the permitted category is indicated on the product and in the specifications document. If you use other than Rohde & Schwarz accessories, make sure that they are suitable for the instrument and the measurement task.
- Set the correct attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.
- When working with high voltages and current probes, observe the additional operating conditions specified in these safety instructions.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries. When transporting the accessories, always use the box supplied with the probe.
- Prevent the probe from receiving mechanical shock. Avoid putting excessive strain on the probe cable or exposing it to sharp bends. Touching a broken cable during measurements can cause injuries.
- Set up all probe connections to the instrument before applying power.

Working with hazardous voltages

Voltages higher than 30 V RMS, or 42 V peak, or 60 V DC are regarded as hazardous contact voltages. Direct contact with them can cause serious injuries.

Make sure that only electrically skilled persons use the products for measurements on hazardous contact voltages. These working conditions require special education and experience to perceive risks and to avoid hazards which electricity can create.

When working with hazardous contact voltages, use protective measures to preclude direct contact with the measurement setup:

- Do not touch exposed connections and components when power is applied.
- Switch off the test circuit while connecting and disconnecting probe leads.
- Use only insulated voltage probes, test leads and adapters.
- Make sure that the input leads fulfill the safety requirements for your measurement.

The delivered input leads might have a jacket wear indicator that indicates a worn jacket by different jacket color. In this case, do not use the input lead. Replace it with a new one.

- When connecting to the DUT, keep your fingers behind finger guard. Remove jewelry, watches, and other metallic objects. Only use 4 mm safety banana plugs.

Working with current probes


When working with current probes, you can measure high-frequency currents or currents that contain high-frequency components.

- Switch off the test circuit while connecting the probe.
- Do not attach the clamp to bare unisolated conductors. To avoid injury from a short circuit, measure at a location on an insulated wire where the insulation is sufficient for the circuit voltage.
- Connect the probe only to the secondary side of a breaker. With this measure, you can avoid injury if a short circuit occurs.
- The following effects can cause burns and fire or damage to the measurement site:
 - Eddy current loss can cause heating of the sensor head.
 - Dielectric heating can cause heating of cord insulation and other materials.
- When measuring current that includes a high-frequency component, consider the derating characteristics of the probe. Do not measure any current that exceeds the rated current.
- Using the probes with high frequencies or strong magnetic fields may cause the device to become abnormally hot, resulting in fire, equipment damage, or burns.

Measurement categories

IEC 61010-2-030 defines measurement categories that rate instruments on their ability to resist short transient overvoltages that occur in addition to the working voltage. Use the measurement setup only in electrical environments for which they are rated.

- 0 - Instruments without rated measurement category
For measurements performed on circuits not directly connected to mains, for example, electronics, circuits powered by batteries, and specially protected secondary circuits. This measurement category is also known as CAT I.
- CAT II:
For measurements performed on circuits directly connected to the low-voltage installation by a standard socket outlet, for example, household appliances and portable tools.
- CAT III:
For measurements performed in the building installation, such as junction boxes, circuit breakers, distribution boards, and equipment with permanent connection to the fixed installation.
- CAT IV:
For measurements performed at the source of the low-voltage installation, such as electricity meters and primary overcurrent protection devices.

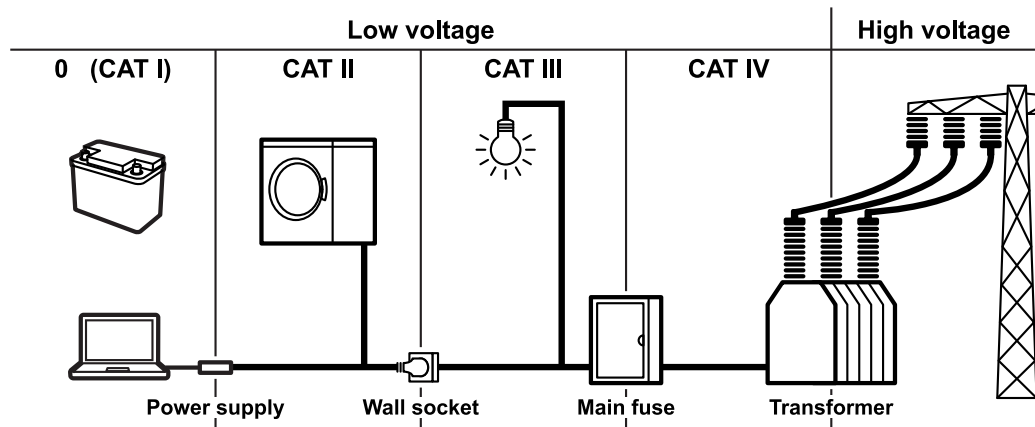

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product warn against potential hazards.




	<p>Potential hazard Read the product documentation to avoid personal injury or product damage.</p>
	<p>Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.</p>
	<p>Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.</p>

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see ["Meaning of safety labels"](#) on page 22
- Product and environment safety, see [Table 1-1](#)
- Identification of the product

Table 1-1: Labels regarding product and environment safety

	Chassis grounding terminal
	Take care when handling electrostatic sensitive devices.
	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life. For more information, see " Disposing of electrical and electronic equipment " on page 995.

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.5 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기
바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Preface

2.1 Key features

The MXO 4 series oscilloscope is the first of a new generation of oscilloscopes with next generation technology.

Using the MXO 4, you can:

- Acquire, process and display signals with unrivaled speed.
- Detect signal details, faults and anomalies instantly.
- Increase your statistical confidence.

The MXO 4 series oscilloscopes utilize advanced technologies:

- Fastest update rate of up to 4.5 million waveforms/s thanks to MXO-EP ASIC
- 12 bit ADC at all sample rates, and 18 bit vertical resolution in HD mode
- Deep standard memory: 400 Mpoints per channel
- High-precision digital trigger with best-in-class trigger jitter, also available in HD mode
- Nearly zero blind time: up to 99% real-time signal activity capture
- Lowest measurement noise
- Eco-friendly design: low power consumption, automatic power-up capability, scarcely audible

Features and applications help achieve fast and accurate results, for example:

- Segmented memory & history mode to analyze previous acquisitions
- Superior spectrum analysis with 45 000 FFT/s, which allows capture of spurious spectrum events
- Integrated arbitrary waveform generator
- Logic analysis with 16 digital channels
- Dual-path serial protocol analysis
- Frequency response analysis (Bode plots)
- Large high-resolution touchscreen, R&S SmartGrid, configurable toolbar, intuitive navigation
- Wide selection of compatible probes

2.2 Documentation overview

This section provides an overview of the MXO 4 user documentation.

2.2.1 Manuals and instrument help

You find the manuals on the product page at:

www.rohde-schwarz.com/manual/mxo4

Getting started manual

Introduces the MXO 4 and describes how to set up the product. A printed English version is included in the delivery.

User manual and help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance and instrument interfaces. Includes the contents of the getting started manual.

The contents of the user manual are available as help in the MXO 4. The help offers quick, context-sensitive access to the complete information on the instrument and its firmware.

The user manual is available for download or immediate display on the internet.

Safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

Instrument security procedures manual

Deals with security issues when working with the MXO 4 in secure areas. It is available for download on the internet.

Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, adjustments, installing options and maintenance. The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, <https://gloris.rohde-schwarz.com>).

2.2.2 Specifications and product brochure

The specifications document, also known as the data sheet, contains the technical specifications of the MXO 4. It also lists the firmware applications and their order numbers, and optional accessories. The product brochure provides an overview of the instrument and deals with the specific characteristics.

www.rohde-schwarz.com/brochure-datasheet/mxo4

2.2.3 Calibration certificate

The document is available on <https://gloris.rohde-schwarz.com/calcert>. You need the device ID of your instrument, which you can find on a label on the rear panel.

2.2.4 Release notes, open source acknowledgment

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation. The open source acknowledgment document provides verbatim license texts of the used open source software. It can also be read directly on the instrument.

www.rohde-schwarz.com/firmware/mxo4

2.2.5 Application notes, application cards, videos

These documents deal with special applications or background information on particular topics.

[R&S@MXO 4 - Mediacenter](#)

2.3 Options described in this document

In addition to the base unit, the following options are described in this documentation:

Type	Designation	Order No.
R&S MXO4-B1	MSO	1335.4130.02
R&S MXO4-B6	Waveform and pattern generator	1335.4147.02
R&S MXO4-K31	Power analysis	1335.5566.02
R&S MXO4-K36	Frequency response analysis	1335.5572.02
R&S MXO4-K510	Triggering and decoding low speed serial buses: I2C, SPI, UART/RS-232/RS-422/ RS-485, QUAD-SPI	1335.5195.02
R&S MXO4-K520	Triggering and decoding automotive protocols: LIN, CAN, CAN FD, CAN XL	1335.5550.02
R&S MXO4-K530	Decoding aerospace protocols: ARINC 429	1335.5208.02

Options described in this document

Type	Designation	Order No.
R&S MXO4-K550	Decoding MIPI low speed protocols: SPMI	1335.5214.02
R&S MXO4-K560	Decoding automotive Ethernet: 10BASE-T1S	1335.5943.02

3 Getting Started

3.1 Preparing for use

Here, you can find basic information about setting up the instrument for the first time or when changing the operating site.

3.1.1 Lifting and carrying

See: "[Lifting and carrying the instrument](#)" on page 18.

3.1.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see "[Choosing the operating site](#)" on page 18.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
 - Residential environments
 - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments.

If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting up the product

When setting up the instrument, follow the safety instructions:

- "Setting up the product" on page 18
- "Intended use" on page 17


3.1.4.1 Placing the product on a bench top

For standalone operation, place the instrument on a horizontal bench with even, flat surface. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

To place the product on a bench top

1. Place the product on a stable, flat and level surface.
2. **CAUTION!** The top surface of the product is too small for stacking. If you stack another product on top of the product, the stack can fall over and cause injury.

If you want to save space, mount several products in a rack.

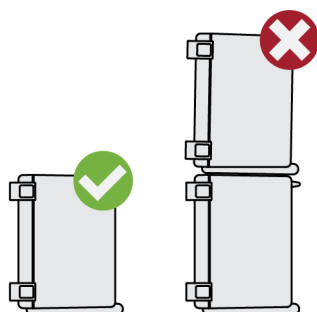

3. **CAUTION!** Foldable feet can collapse. For safety information, see "Setting up the product" on page 18.

Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath.

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
- Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the product on a monitor arm

You can mount the oscilloscope to a monitor arm with VESA mount.

- ▶ **NOTICE!** Only use a VESA mount compatible with standard 100 mm × 100 mm pattern.

Mount the VESA mount of the monitor arm to the VESA mounting holes on the rear panel of the oscilloscope.

3.1.4.3 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in "[Setting up the product](#)" on page 18.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product. Design and implement an efficient ventilation concept for the rack.

To mount the oscilloscope in a rack

1. Use a rackmount kit to prepare the instrument for rack mounting.
 - a) Order the rackmount kit designed for your oscilloscope. For the order number, see specifications document.
 - b) Mount the rackmount kit. Follow the assembly instructions provided with the rackmount kit.
2. Lift the product to shelf height. If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the product at the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. Remove the product from the rack.
3. If placing the product on a bench top again, unmount the rackmount kit from the product. Follow the instructions provided with the rackmount kit.

3.1.5 Considerations for test setup

Observe safety instructions, see "[Performing measurements](#)" on page 20.

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Measuring accessories

Use only probes and measuring accessories that comply with IEC 61010-031.

Signal input and output levels

Information on signal levels is provided in the specifications document. Keep the signal levels within the specified ranges to avoid damage to the product and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- ▶ **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

During operation, if the firmware observes a serious unexpected disturbance (e.g. due to ESD), it resets some hardware components and initiates a new alignment to ensure proper instrument functioning. Then it restores the user settings to the state before the disturbance.

3.1.6 Connecting to power

For safety information, see "[Connecting to power and grounding](#)" on page 19.

The MXO 4 can be used with different AC power voltages and adapts itself automatically to it.

The nominal ranges are indicated on a label near the power connector on the instrument and in the specifications document.

1. Plug the AC power cable into the AC power connector on the rear panel of the product. Only use the AC power cable that is delivered with the product.
2. Plug the AC power cable into a power outlet with ground contact.

3.1.7 Connecting to LAN

For remote operation of the instrument using a computer, you need a local area network (LAN) connection.

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect a LAN cable

- ▶ Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

By default, the MXO 4 is configured to use DHCP. Configuration of a static IP address is not required.

3.1.8 Connecting external devices

3.1.8.1 Connecting USB devices

You can use USB connectors on the front panel and on the side or rear panel to connect various devices:

- Connect a keyboard and a mouse for operation and data entry, alternatively or in addition to the touchscreen functionality.
 - Connect USB flash drives to save screenshots, and to transfer files to and from the instrument without a network connection.
- ▶ Connect the USB device to any of the USB connectors.

You can connect or disconnect USB devices during operation of the instrument.

3.1.8.2 Connecting external monitors

Using the HDMI connector on the rear panel, you can connect an external monitor or projector to the oscilloscope.

1. **NOTICE!** Missing ground contact can damage the oscilloscope.

Ensure that the monitor and the oscilloscope are connected to a ground contact. See also: [Chapter 3.1.6, "Connecting to power"](#), on page 32.

2. **NOTICE!** Use only standard-compliant monitor cables.

Connect the monitor or projector to a display connector.

The oscilloscope recognizes the external monitor. During the running session, you can disconnect the monitor and connect it again.

If the monitor provides touch functionality, an additional connection can be required, e.g. a USB connection. Refer to the documentation of your monitor.

The oscilloscope outputs a Full HD image with 1920x1080 pixel. The instrument's display is duplicated. If the screen resolution of the monitor is set higher than the instrument's resolution, the application window uses a 1920x1080 area of the monitor display. For full screen display, adjust the monitor's screen resolution.

3.1.9 Switching on or off

The instrument is switched on or off with the power switch and the [Power] key. The [Power] key is located in the bottom left corner of the front panel. The power switch is located at the rear panel of the instrument.

Table 3-1: Overview of power states

Status	LED	Power switch
Off	● (unlighted)	[0] (off)
Standby	● yellow	[1] (on)
Ready	● green	[1] (on)

To switch on the product

The product is off but connected to power.

1. Set the switch on the power supply to position [1].

The power key on the front panel lights up.

2. Press the [Power] key on the front panel.

The instrument performs a system check, boots the operating system, and then starts the MXO 4 firmware.

The [Power] key turns green and the illuminated keys on the front panel light up. If the previous session was terminated regularly, the oscilloscope uses the last settings.


Before you start measurements, be sure to comply with the warm-up phase specified in the specifications document.

To shut down the product

The product is in the ready state.

- ▶ Press the [Power] key.

All current settings are saved, and the software shuts down. The [Power] key turns yellow. The standby power supplies only the power switch circuits.

The  "Power" icon in the "Menu" shuts down only the firmware application. To shut down the instrument completely, use the [Power] key.

Remote command for firmware shutdown: [SYSTem:EXIT](#) on page 534.

To disconnect from power

The product is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.
Set the switch on the power supply to position [0].
The LED of the [Power] key is switched off.
2. Disconnect the product from the power source.

3.2 Instrument tour

This section describes the front, rear and side view of the instrument including all function keys and connectors.

3.2.1 Front view

This section provides an overview of the MXO 4 front panel.

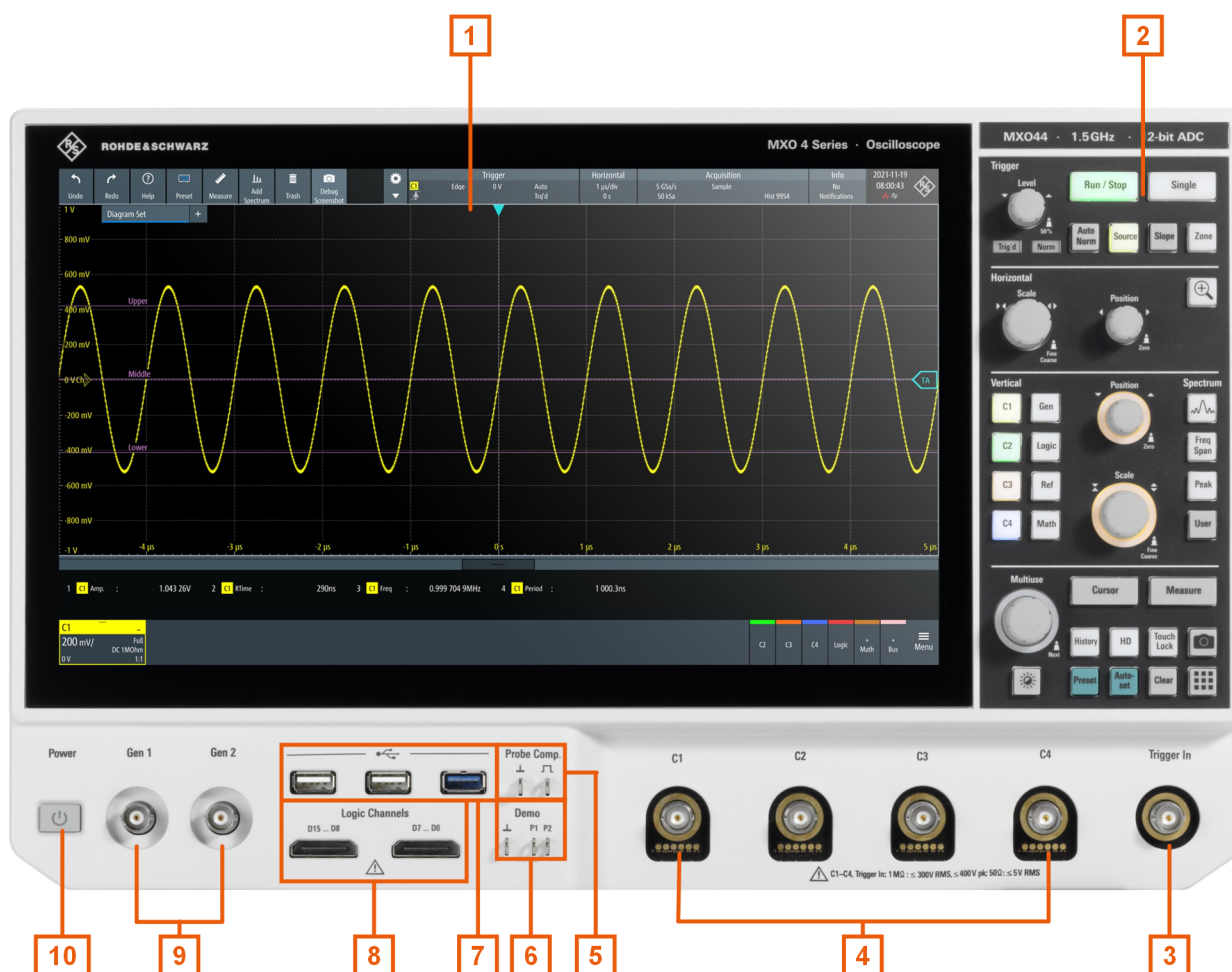


Figure 3-1: Front panel of MXO 4

- 1 = Display
- 2 = Keys and controls
- 3 = BNC connector for external trigger input
- 4 = Analog input channels
- 5 = Connectors for probe compensation
- 6 = Connectors for demo signal output
- 7 = USB connectors
- 8 = Connectors for logic probe (R&S MXO4-B1 Mixed Signal Option)
- 9 = BNC connector for optional function generator output (R&S MXO4-B6 arbitrary waveform generator option)
- 10 = [Power] key

3.2.1.1 Input connectors

Analog channel inputs

The MXO 4 has 4 channel inputs to connect the input signals.

You can connect probes with Rohde & Schwarz probe interface or BNC connectors. The input impedance is selectable, the values are 50 Ω and 1 MΩ.

The maximum input voltage on channel inputs is:

- 400 V (V_p) and 300 V (RMS) at 1 M Ω input impedance
- 30 V (V_p) and 5 V (RMS) at 50 Ω input impedance


Trigger In

The external trigger input is a BNC connector that is used to control the measurement by an external signal. The trigger level can be set from -5 V to 5 V.

For the external trigger input, the maximum input voltage is 400 V (V_p) and 300 V (RMS) at 1 M Ω input impedance.

Transient overvoltages on all input connectors must not exceed 400 V (V_p).

3.2.1.2 Other connectors on the front panel

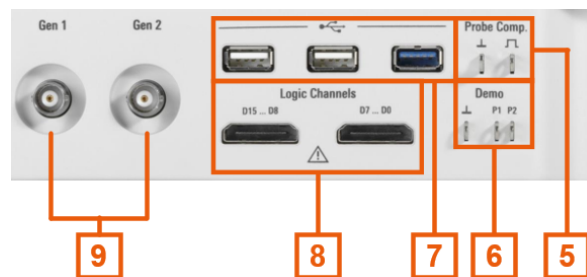

Gen1, Gen2: Function generator

BNC output of the function generator, requires option R&S MXO4-B6.

Logic Channels

Two connectors for logical probes with 8 digital channels each (D0 to D7 and D8 to D15). Using logic channels requires the Mixed Signal Option R&S MXO4-B1.

The maximum input voltage is 40 V (V_p) at 100 k Ω input impedance. The maximum input frequency for a signal with the minimum input voltage swing and medium hysteresis of 800 mV (V_{pp}) is 400 MHz.

USB



Two USB 3.1 gen1 and one USB 2.0 high-speed interfaces type A. They are used to connect a mouse or keyboard, a USB flash drive for storing and reloading instrument settings and measurement data, and to update the firmware.

Demo

The pins are intended for demonstration purposes.

Probe Comp.

Probe compensation terminal to adjust passive probes to the input channel.

-  Square wave signal for probe compensation.
-  Ground connector for probes.

3.2.2 Side view



Figure 3-2: Side view of MXO 4

1 = Grounding terminal

Grounding terminal ⚡

4 mm banana jack to connect ground of DUT and test fixtures, and wrist strap.

3.2.3 Rear view

On the rear panel of the MXO 4, you find more connectors and the power supply switch.

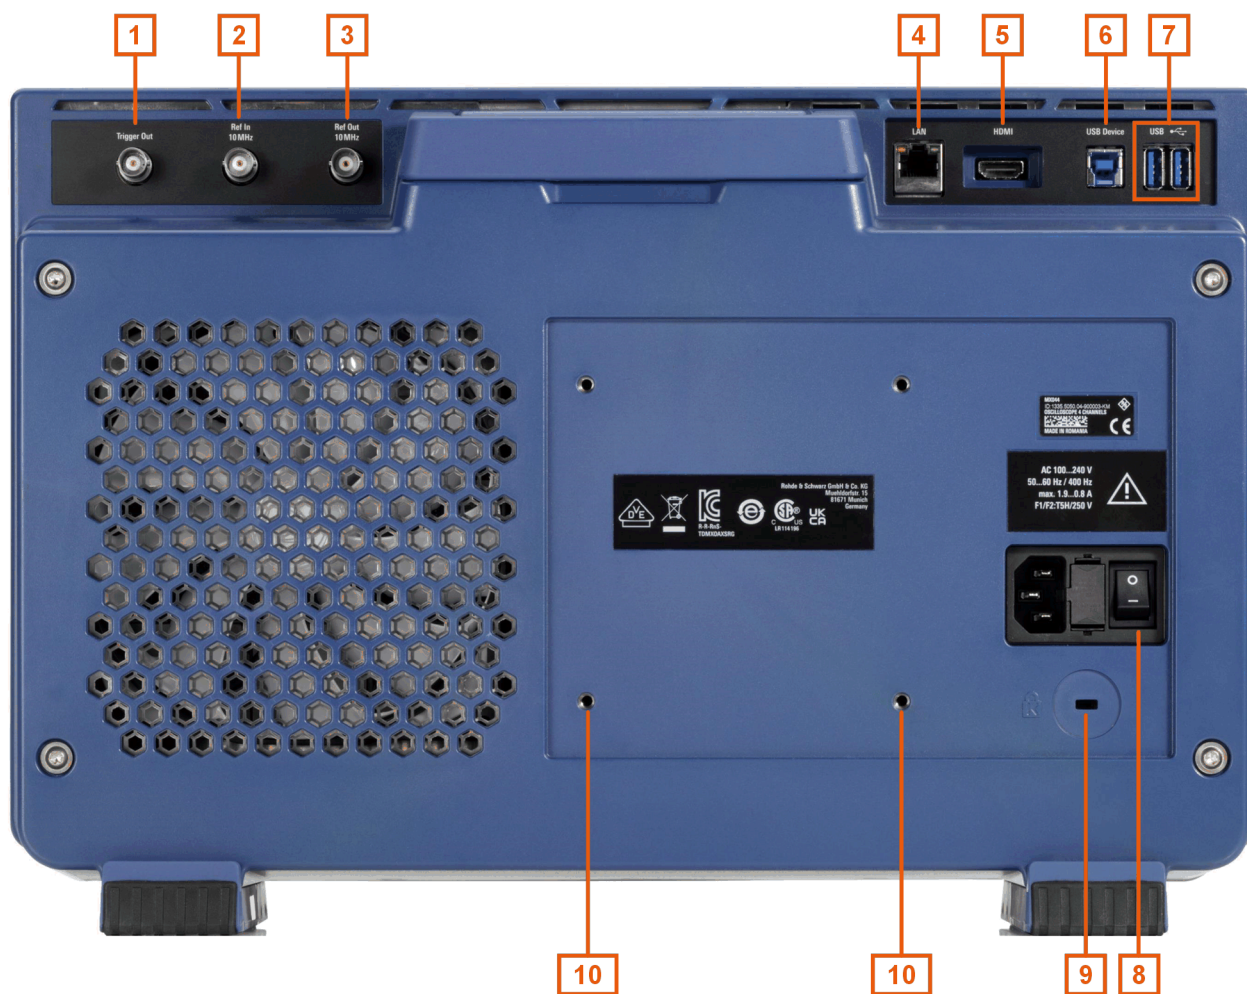


Figure 3-3: Rear panel view of MXO 4

- 1 = Trigger Out connector
- 2 = Ref. In 10MHz
- 3 = Ref. Out
- 4 = LAN connector
- 5 = HDMI display output
- 6 = USB B connector, type B
- 7 = USB connector
- 8 = AC power supply connector and main power switch
- 9 = Kensington lock slot to secure the instrument against theft
- 10 = VESA mounting holes to mount the instrument on a monitor arm

Trigger Out

BNC output that can function as pass/fail output or trigger output.

Ref. In 10MHz

BNC input connector for 10 MHz reference frequency signals.

Ref. Out

BNC output for 10 MHz frequency reference. Can be switched between internal and external reference.

See also: "Menu" > "Horizontal" > "Setup" tab > "Ref Clock"

LAN

8-pin connector RJ-45 used to connect the instrument to a Local Area Network (LAN). It supports up to 1 Gbit/s.

HDMI

HDMI Version 2.0 connector for an external monitor or projector. The monitor shows the complete content of the instrument's screen.

USB B

USB 3.1 gen1 interface of type B (device USB), to be used for remote control of the instrument.

USB

Two USB 3.1 gen1 interfaces of type A.

AC power supply connector and mains power switch

The instrument supports a wide range power supply. It automatically adjusts to the correct range for the applied voltage. There is no line voltage selector.

The AC mains power switch disconnects the instrument from the AC power line.

When you power up the instrument, be sure to comply with the warm-up phase specified in the specifications document before you start measurements.

3.2.4 Keys and controls

For an overview of the front panel keys, see [Figure 3-1](#).

3.2.4.1 Power key


The [Power] key is located on the lower left corner of the front panel. It starts up and shuts down the instrument's software.

The light of the key shows the instrument state, see [Chapter 3.1.9, "Switching on or off"](#), on page 34.

Remote command: `SYSTem:SHUTdown` on page 535.

3.2.4.2 Trigger controls

The keys and knob in the Trigger functional block adjust the trigger and start or stop acquisition.

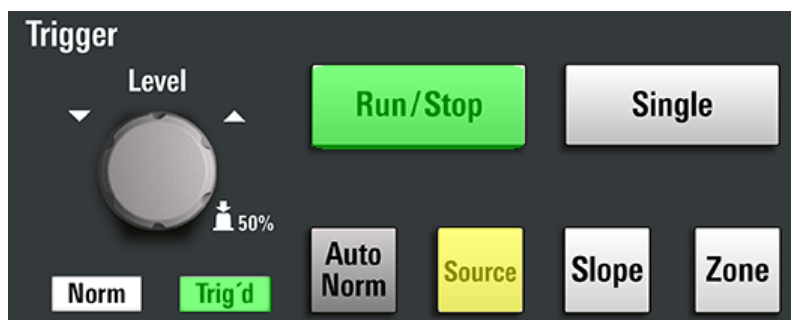**[Level]**

The rotary knob sets the trigger level for all trigger types that require one level. For trigger types with two levels, the knob sets the lower level. Turn clockwise to move up the trigger level. Press the knob to set the trigger level to 50% of the signal amplitude.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

[Run / Stop]

Starts and stops the continuous acquisition. The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Remote command:

[RUN](#) on page 565

[STOP](#) on page 566

[Single]

Starts a defined number of acquisitions. The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Press the key again to stop a running acquisition. To set the number of acquisitions, select "Menu" > "Acquisition", and set "N-single/Avg count".

Remote command:

[SINGle](#) on page 565

[Auto Norm]

Toggles the trigger mode between "Auto" and "Normal". The current setting is shown on the trigger label.

Auto The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the timebase.

Norm The instrument acquires a waveform only if a trigger occurs. The "Norm" indicator above the key turns green.

Remote command:

[TRIGger:MODE](#) on page 630

[Source]

Toggles the trigger source: C1, C2, C3, etc. The key lights up in the color of the selected channel.

Remote command:

[TRIGger:EVENT<ev>:SOURce](#) on page 606

[Slope]

Toggles the trigger slope or trigger polarity, dependent on the trigger type. The current setting is shown on the trigger label.

[Zone]

Opens the configuration for the zone trigger. A zone trigger combines the trigger condition with the intersection or non-intersection of one or more zones or masks.

Remote command:

[TRIGger:ZONE:EXPRession\[:DEFine\]](#) on page 638

3.2.4.3 Horizontal controls

The rotary knobs in the Horizontal functional block adjust the horizontal parameters. These settings are effective for all channel waveforms. In addition, a [Zoom] key is available.



[Position]

The rotary knob changes the horizontal position of the waveforms. Turn clockwise to move the waveforms to the right. To set the value to zero, press the knob. The current value is shown in the "Horizontal" label above the diagram.

The horizontal position defines the zero point of the diagram. It is the time distance to the reference point, which marks the rescaling center of the time scale.

In a spectrum diagram, the knob changes the center frequency.

Remote command:

[TIMebase:HORIZontal:POSition](#) on page 567

[CALCulate:SPECTrum<sp>:FREQuency:CENTer](#) on page 718

[Scale]

The rotary knob adjusts the time scale for all signals. The time scale is also known as timebase.

Turn clockwise to stretch the waveforms. Doing so, the scale value *time/div* decreases. Press the knob to toggle between coarse and fine scale adjustment.

In a spectrum diagram, the knob changes the span.

Remote command:

[TIMEbase:SCALE](#) on page 566

[CALCulate:SPECTrum<sp>:FREQuency:SPAN](#) on page 719


[Zoom]

Activates a zoom and supports the zoom setup.

If no zoom is on, the first press opens a zoom diagram for the active diagram. If at least one zoom is shown, the keypress opens the "Zoom" dialog. If only one zoom is defined, the next press closes the dialog and removes the zoom. If several zooms are defined and the dialog is open, the key toggles the zooms.

3.2.4.4 Vertical controls

The keys and knobs in the Vertical functional block select a signal and adjust the vertical scale and position of the selected signal.

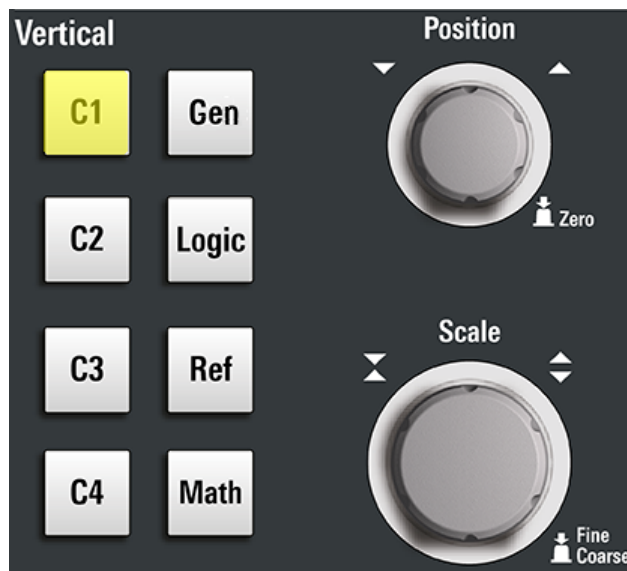

[C<n>]

Turns on and selects a channel. If the channel is active, the key lights up in the corresponding channel color.

The effect of the keypress depends on state of the channel:

- If channel is off: turns on the channel and selects it.
- If the channel is on and in focus (selected): opens the corresponding channel dialog.
- If the channel is on, but not in focus (not selected): selects the channel waveform.
- If the channel is selected, and the dialog is open: turns off the channel, and closes the dialog.

The vertical rotary knobs are focused on the selected waveform. They are illuminated in the color of the selected waveform.

Remote command:

[CHANnel<ch>:STATe](#) on page 569

[Position]

The vertical [Position] knob changes the vertical offset or the position of the selected waveform. The horizontal axis and the selected waveform are moved vertically. You can select whether the knob changes the offset or the position in the "Menu" > "Settings" > "Frontpanel" > "Knobs" dialog.

- Position indicates the vertical location in divisions.
- Offset moves the vertical center of the selected channel to the offset value.

If the selected waveform is a math or reference waveform, serial bus, or logic channel, the knob changes its vertical position.

The knob lights up in the color of the selected waveform. Turn clockwise to move up the waveform. To set the value to zero, press the knob.

The current offset value is shown in the channel icon.

Remote command:

[CHANnel<ch>:POSition](#) on page 571

[CHANnel<ch>:OFFSet](#) on page 570

[Scale]

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The [Scale] knob lights up in the color of the selected waveform.

Turn the knob clockwise to stretch the waveform. Doing so, the scale value V/div decreases. Press the knob to toggle between fine and coarse adjustment. For analog waveforms, the scale value is shown in the signal icon.

To get the maximum resolution of the waveform amplitude, make sure that the waveforms cover most of the diagram's height.

Remote command:

[CHANnel<ch>:SCALE](#) on page 570

[CALCulate:MATH<m>:VERTical:SCALE\[:VALue\]](#) on page 655

[REFCurve<rc>:SCALE](#) on page 664

[Gen]

Opens the "Waveform Generator" dialog, if option R&S MXO4-B6 is installed.

The waveform generator can generate various function and arbitrary waveforms, sweeps, and parallel patterns. For detailed characteristics, refer to the specifications document.

[Logic]

Opens the "Logic" dialog to configure and enable the logic buses L1 to L4. A logic bus (or parallel bus) has up to 16 logic (digital) channels. If logic buses are active, pressing the key toggles these buses.

The key lights up if at least one logic bus is enabled.

[Ref]

Opens the "Reference" dialog box, where you can configure and display reference waveforms. Press the key repeatedly to switch the reference waveform.

If a reference waveform is selected, the vertical rotary knobs are illuminated in white or light gray (default colors), depending on the selected waveform.

[Math]

Opens the "Math" dialog, where you can configure the calculation of mathematical waveforms using various mathematic operations on other waveforms. Press the key repeatedly to toggle the selected math waveform. If no math waveform is active, the key closes the dialog.

If a math waveform is selected, the vertical rotary knobs are illuminated in blue (default color).

3.2.4.5 Spectrum keys



[Spectrum]

Available only for MXO 4 with 4 input channels.

Opens and closes the "Spectrum" dialog. The key lights up if a spectrum is active.

[Freq Span]

Opens and closes the overlay menu to configure the spectrum settings.

[Peak]

Opens the overlay menu to identify the peaks and to create a peak list of a spectrum. If the "Spectrum" dialog is open, the keypress opens and closes the peak list.

[User]



Performs the action that is assigned to the key in "Settings" > "Front Panel" > "Hard-keys". You can assign one of the following functions to the key:

- Force trigger (default)
- Save a saveset with instrument settings
- Load a saveset with instrument settings

3.2.4.6 Analysis keys

The controls in the bottom functional block have various functions.



[Multiuse]

The multiuse knob changes the element that is in focus. It lights up when a function is active on the knob.

- If a numeric entry field in a dialog has the focus: turn to increase or decrease the value. Press the knob to toggle fine and coarse increment.
- If a cursor set has the focus: press to toggle the cursor line, and turn to adjust its position.
- If a zoom has the focus: press to toggle the edges of the zoom, and turn to adjust its position.
- If a gate has the focus: press to toggle the complete gate and the edges of the gate, and turn to adjust its position.
- To change the intensity, press the [Intensity] key and turn the knob.

[Intensity]

Adjusts the intensity of the waveforms on the screen: Press the [Intensity] key and turn the [Multiuse] knob. The current value is shown in the input box in the upper right corner of the screen.

[Cursor]

Starts a cursor measurement: sets vertical and horizontal cursors in the active diagram, and displays results of the cursor measurement. If cursors are already set, the keypress opens the "Cursor" dialog, where you can adjust the settings. The next keypress closes the dialog.

Cursors are markers which are placed at points of interest on a waveform. The instrument measures the cursor positions and delta values between parallel cursors.

If cursors are already set but not in focus, pressing the key sets the focus on the cursor set. You can adjust the cursor lines using the [Multiuse] knob.

If a cursor set has the focus, the key opens the "Cursor" dialog. If one cursor set is "On", the next press closes the dialog. If several cursors are "On", pressing the key toggles the cursor sets.

[Measure]

Opens the "Measurement" dialog, where you can set up various measurements. If the dialog is open, pressing the key closes the dialog.

[History]

Activates the history and opens the history player. The next keypress closes the player. The history shows stored acquisitions that were acquired before the current one. The key is illuminated as long as the history is active.

[HD]

Activates the high definition mode and opens the "HD Mode" dialog box.

If the dialog is open, pressing the key closes the dialog. If the dialog is closed, the key disables the high definition mode. The key is illuminated as long as the HD mode is active.

[Touch Lock]

Locks the touchscreen to prevent unintended use. When the touchscreen is off, the key is illuminated. Press again to unlock the touchscreen.

Camera 

Performs the action that is assigned to the key in "Settings" > "Front Panel" > "Hard-keys". By default, the key saves a screenshot of the waveform display.

[Preset]

Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled. You can define preset configurations and save them to a file. The [Preset] key can be configured to set either factory defaults or a user-defined preset configuration.

[Autoset]

The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

In particular, the horizontal scale is set to a common value for all active channels, record length and sample rate are set to automatic detection. Vertical scale and offset are set for each channel individually. Probe settings, channel coupling and impedance remain unchanged. The trigger source is set to the signal with the lowest frequency, and the trigger type to positive edge. The trigger level is adjusted, and the trigger position is set to the reference point. Measurements, math and spectrum waveforms are kept. Undo and redo of an autoset is possible.

[Clear]



Deletes all measurement results including long-term measurement and statistics, all waveforms, and the history.


Apps 

Opens the "Apps" dialog, where you can start an application, serial protocol or another analysis function.

3.2.5 Checking the functionality


To check if the instrument works correctly, you can use the probe compensation signal and check the displayed signal.

1. Perform a self-alignment of the instrument:
 - a) Warm up the instrument. The minimum warm-up time is indicated in the specifications document.
 - b) Remove all probes from the input connectors.
 - c) Open the "Menu", and select "Settings" > "Maintenance" > "Alignment".
 - d) Tap "Start Alignment". Wait until the alignment has finished successfully.
2. Connect the probe's ground connector to the ground pin , and the tip to the square wave pin .
3. Press the [Preset] key.
4. Connect the probe to the input connector [C1].
The instrument recognizes the probe, and a signal is displayed in the diagram.
5. Tap the signal icon of C1 to open the vertical settings.
6. In the "Vertical" > "Setup" dialog, adjust the following:
 - "Vertical scale" = 600 mV/div
 - "Offset" = 900 mV

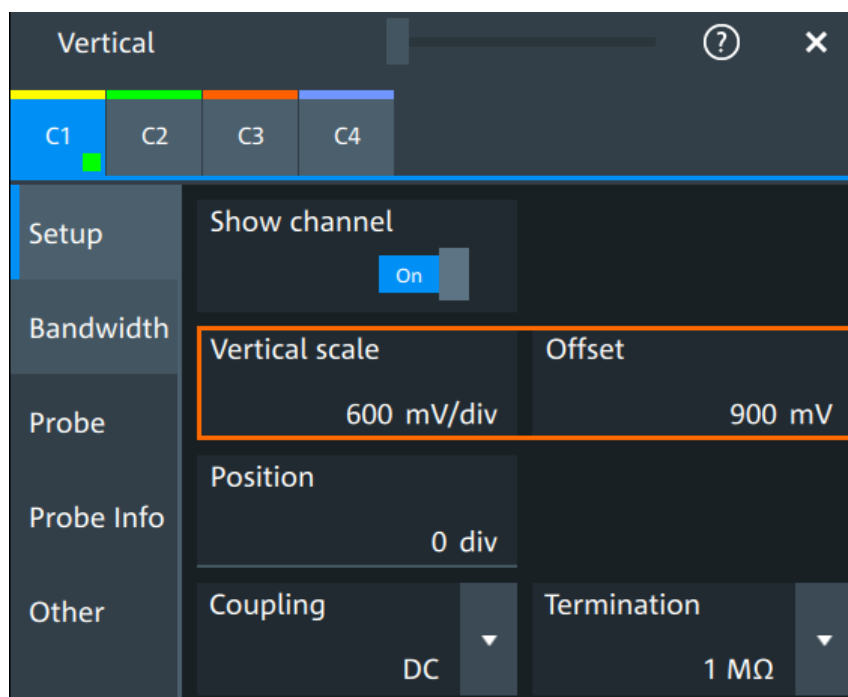

7. Turn the horizontal [Scale] knob to set the horizontal scale to 1 ms/div.
8. Press the [Source] key to set the trigger source to C1. The color of the key indicates the selected channel.

9. Turn the [Level] knob to set the trigger level to 300 mV.
10. Check the rectangle signal on the screen. The displayed signal should have an amplitude of about 3.3 V, which covers 5.5 divisions.

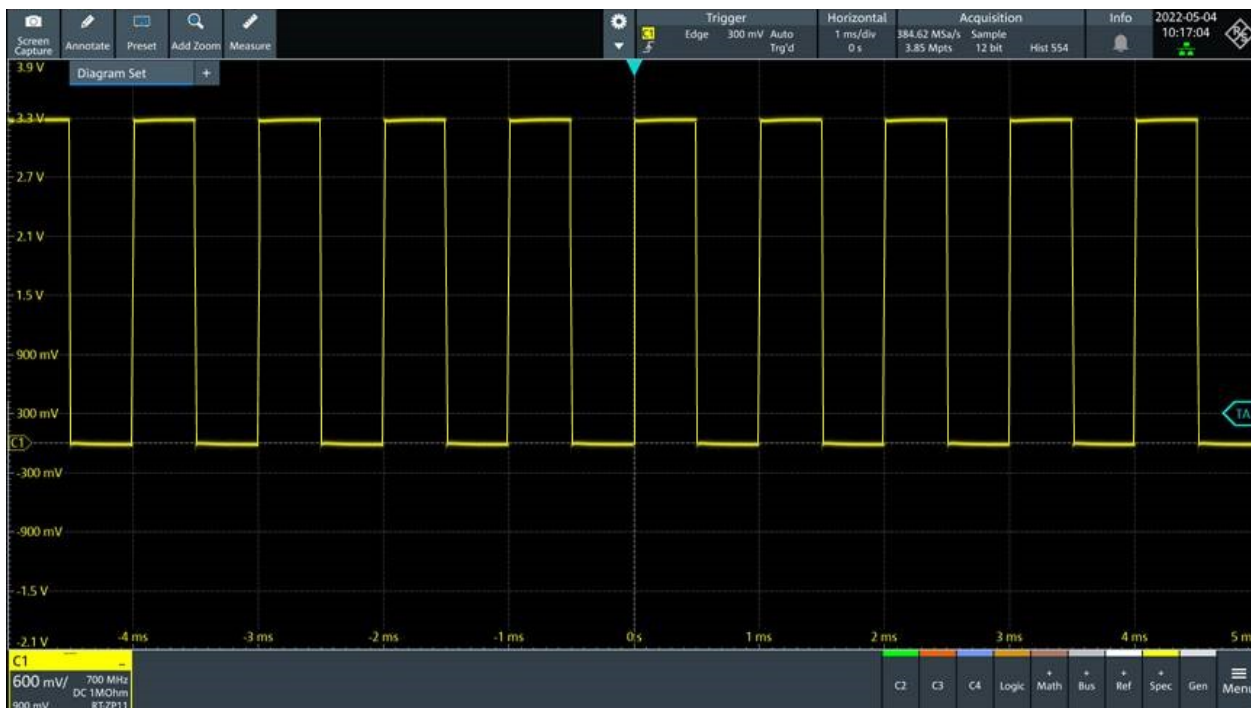

11. Repeat steps 4 to 10 for all other channels. Make sure to adjust the vertical settings for the connected channel, and also to set the trigger source to the connected channel.

4 Operating the instrument

There are three ways to operate the MXO 4.

Manual operation

Use the touchscreen, keys and rotary knobs, or an optional mouse and/or keyboard. The principles of manual operation are explained in this section.

Remote control

Create programs to automatize repeating settings, tests, and measurements. The instrument is connected to a computer that runs the program.

This way of operation is described in: [Chapter 17, "Remote control commands"](#), on page 520.

Remote operation

For remote monitoring and operation of the instrument, a VNC server is installed on the MXO 4. You need a LAN connection to the computer, and a VNC client or web browser to connect to the instrument.

For details, refer to [Chapter 16, "Network operation and remote control"](#), on page 499.

4.1 Means of manual interaction

The MXO 4 provides the following means of manual interaction, which you can use alternatively or complementary:

- **Touchscreen:**
Using the touchscreen allows for direct interaction with the instrument. Use your finger to place waveforms on the screen, mark areas for zoom, set parameters in dialogs, enter data, and much more. The control elements and actions on the screen are based on common concepts, and you easily become familiar with the user interface.
Tapping the screen works like clicking mouse buttons:
 - Tap = click: Selects a waveform or parameter, or provokes an action.
 - Double-tap = double-click: Has the same effect as touch and hold, it opens the on-screen keyboard or keypad, or a specific editor if available.
- **Function keys and rotary knobs:**
The front panel provides frequently used functions and controls to operate the instrument. Use knobs to set levels and scales, and keys to initiate actions and to open dialogs.
- **Optional mouse and/or keyboard**
These devices work in the normal manner.

4.2 Touchscreen display

4.2.1 Information on the display

The GUI of the instrument shows the waveforms and measurement results, and also information and everything that you need to control the instrument. All waveform-related GUI elements are shown in [Figure 4-1](#). An overview of control elements - like dialog, toolbar - is given in [Chapter 4.2.2, "Control elements on the GUI"](#), on page 54.

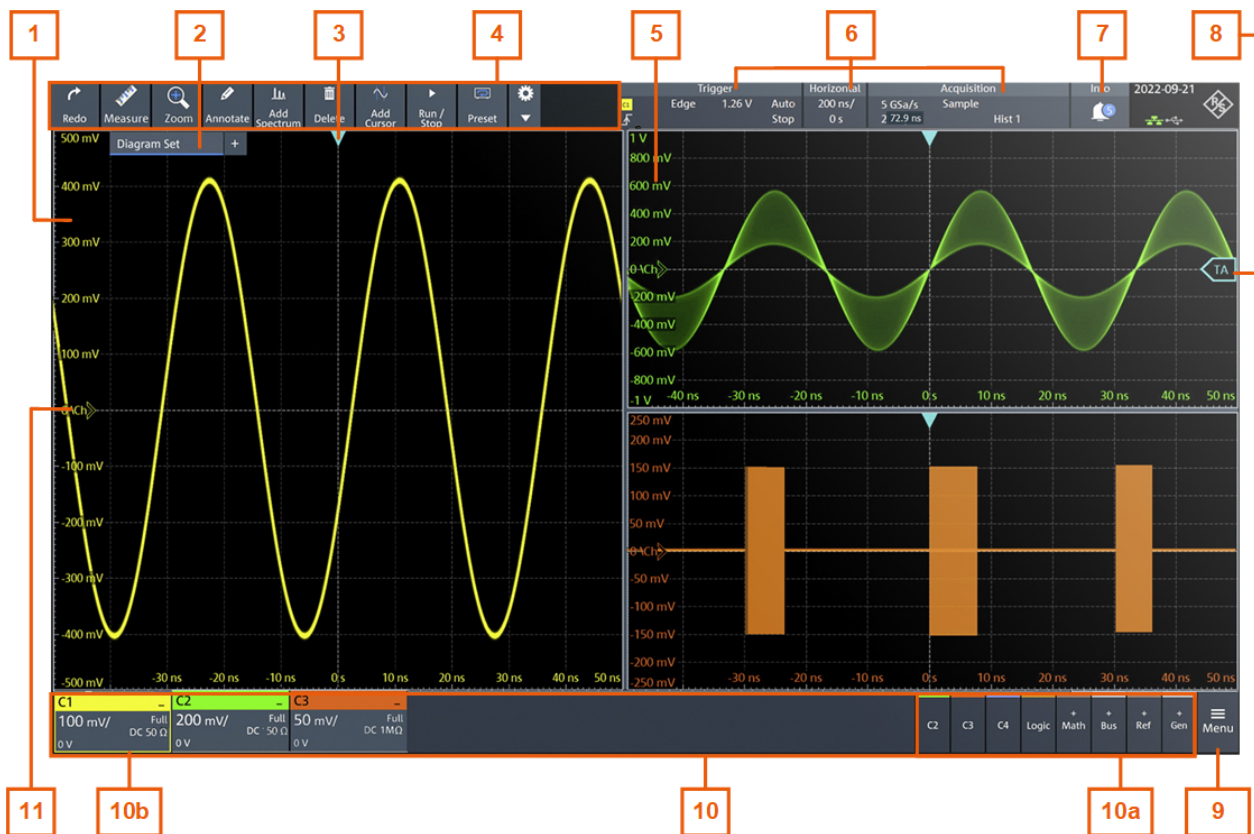


Figure 4-1: Information in the graphical user interface

- 1 = Diagram
- 2 = Layout
- 3 = Trigger position
- 4 = Toolbar
- 5 = Grid
- 6 = Trigger, horizontal and acquisition label
- 7 = Info
- 8 = Trigger level
- 9 = Menu
- 10 = Signal bar with signal activators (10a), and active waveforms (10b)
- 11 = Channel markers indicate the ground levels

Diagram

A diagram shows one or more waveforms: analog and digital channels, reference and math waveforms, track, and serial buses. Zoom details, spectrum and other special waveforms are shown in separate diagrams. One diagram can hold up to 16 analog waveforms, i.e. analog channels, reference and math waveforms, and tracks.

To arrange the diagrams on the screen, the Rohde & Schwarz SmartGrid function helps you to find the target place simply and quickly. For details, see [Chapter 4.5, "Rohde & Schwarz SmartGrid"](#), on page 59. You can also adjust the diagram size by dragging the diagram border.

Layout

A layout shows a set of diagrams and result tables. You can configure up to four layouts using the SmartGrid functionality. For details, see [Chapter 4.5, "Rohde & Schwarz SmartGrid"](#), on page 59.

Grid

The grid shows the vertical and horizontal divisions. The division lines are labeled with the correspondent values. The grid labels have the color of the waveform to which they belong. If several waveforms are shown in one diagram, the grid has the color of the selected waveform.

Trigger position and trigger level

The blue markers show the horizontal position of the trigger and the vertical trigger level. You can touch and move the trigger markers in the diagram to set the positions. The trigger point is the zero point of the diagram.

The trigger position can be moved outside the diagram.

Trigger

The "Trigger" label shows the main trigger settings. If you tap the label, the corresponding dialog opens.

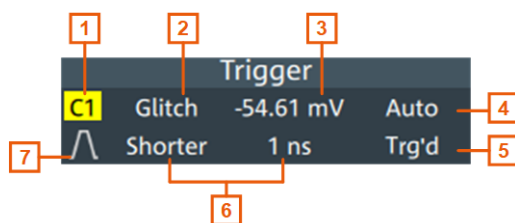


Figure 4-2: Trigger label

- 1 = Trigger source
- 2 = Trigger type
- 3 = Trigger level
- 4 = Trigger mode
- 5 = Trigger state
- 6 = Trigger type specific settings
- 7 = Trigger slope

See also: [Chapter 7.1.1, "Trigger information"](#), on page 152.

Horizontal

The "Horizontal" label shows the main timebase settings. If you tap the label, the corresponding dialog opens.

 


Figure 4-3: Horizontal label

- 1 = Time scale
- 2 = Horizontal position

Acquisition

The "Acquisition" label shows the main acquisition settings, and the progress of long acquisitions. If you tap the label, the corresponding dialog opens.

 


Figure 4-4: Acquisition label

- 1 = Sample rate
- 2 = Record length. A yellow warning icon indicates insufficient memory.
- 3 = Acquisition mode
- 4 = Number of acquired waveforms
- 5 = Resolution. Active high definition mode is indicated by "HD".

See also: ["Progress information"](#) on page 73.

Info

The "Info" button on the toolbar points to the status messages of the instrument. To open the message box, tap the button. See also: [Chapter 4.12, "Information and notifications"](#), on page 72.

Signal bar

The signal bar is the control center for all waveforms. All enabled waveforms are shown on the left side of the signal bar. On the right side of the signal bar, you see the signal activators of inactive waveforms. Tap a signal activator to enable the waveform.

Each waveform is represented by a signal icon. If the waveform is shown in a diagram, the signal icon displays its main vertical and probe settings. If you tap a signal icon, the dialog with vertical settings for this waveform opens. If you tap the "Minimize" icon on the signal icon, the waveform switches from the diagram area to the signal icon: the icon is grayed out. See [Chapter 4.4, "Working with waveforms"](#), on page 57 for a detailed description.

In [Figure 4-1](#), the signal icons C1, C2 and C3 show the main settings, and the waveforms are displayed in diagrams.

 


Figure 4-5: Signal label

- 1 = Vertical scale
- 2 = Offset
- 3 = Bandwidth
- 4 = Coupling and termination

If many waveforms are active, then waveforms of the same type are grouped in one signal icon. Tap the group icon to open the individual signal icons.

4.2.2 Control elements on the GUI

The GUI provides everything that you need to control the instrument, to analyze waveforms, and to get measurement results. Figure 4-6 shows the control elements at a glance.



Figure 4-6: Control elements on the graphical user interface

- 1 = Toolbar
- 2 = Tab in a dialog
- 3 = Dialog
- 4 = Result table
- 5 = Signal bar
- 6 = Menu

Toolbar (1)

The icons on the toolbar provide quick and easy access to the most important functionality. For a detailed description, refer to [Chapter 4.6, "Toolbar"](#), on page 61.

If you adjust the settings of an analyzing function, e.g., cursor measurement, the overlay menu is shown instead of the icons. The overlay menu provides the most important settings of the current action. If you need more settings, "Setup" opens the corresponding dialog.

Dialog (2, 3)

The tabs of the dialogs contain all task-oriented settings and operations, and buttons for calling related tabs. The usage of dialogs is described in [Chapter 4.8, "Using dialogs"](#), on page 66.

Result table (4)

If you perform cursor or automatic measurements, the result table shows the results of the action below the diagrams. You can move the result tables to the left or right of the diagrams.

See also: [Chapter 4.10, "Displaying results"](#), on page 69.


Signal bar (5)

The signal bar summarizes all waveforms as described in ["Signal bar"](#) on page 53.

Menu (6)


The menu provides access to the complete functionality of the MXO 4.


At the top of the menu, you can find a search field for a quick access to any parameter you need. A list of all found results is shown on the left side of the menu. Tap the result entry and the dialog containing this parameter opens.

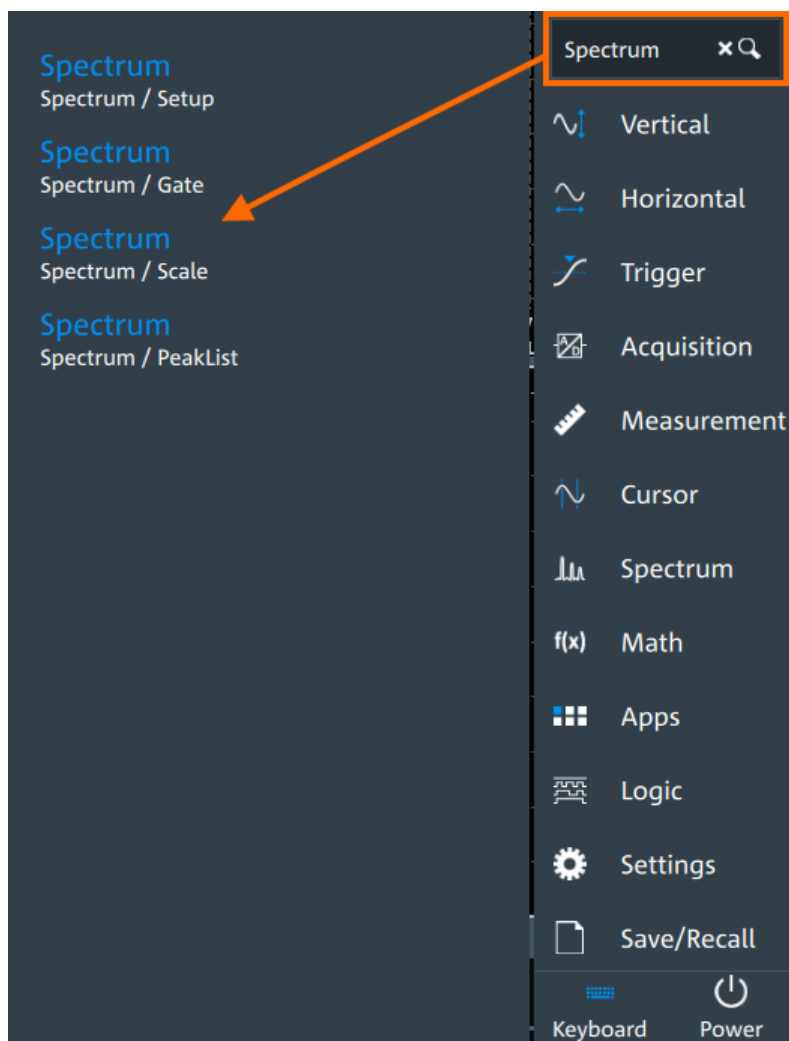

4.3 Applications

The "Apps" dialog provides fast access to all available applications, for example, to serial protocols, frequency response analysis or file browser.

- ▶ To open the "Apps" dialog:
 - Open "Menu" > "Apps".
 - Press the  [Apps] key on the front panel.

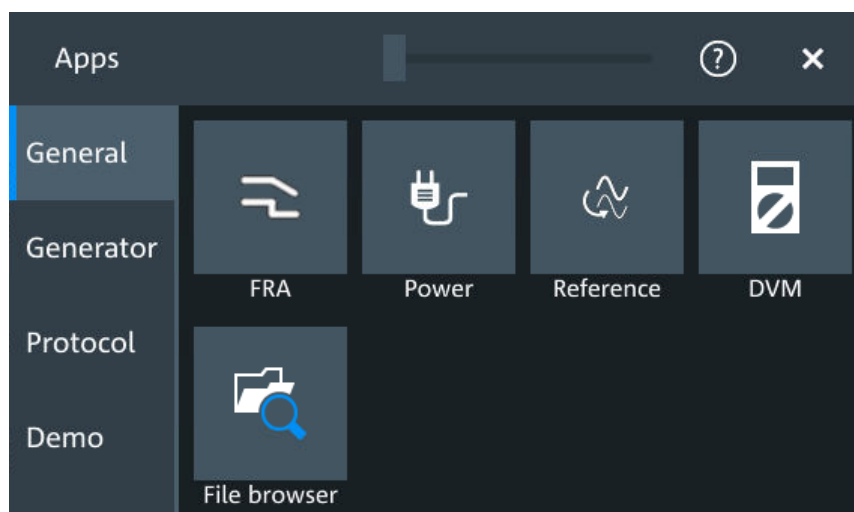

4.4 Working with waveforms

The MXO 4 can create and display many waveform types. The most important are:

- Channel waveforms:
For each input channel, one channel waveform is shown.
- Reference waveforms:
Four waveforms can be used as reference for comparison and analysis.
- Math waveforms:
Five mathematic waveforms can be created with mathematic operations performed on channel, reference, and other math waveforms.
- Zoom waveforms:
Show the details of waveforms.
- Digital waveforms:
The Mixed Signal Option R&S MXO4-B1 provides 16 digital channels grouped in two logic probes (pods) with 8 channels each.

Waveform handling

The MXO 4 can show and analyze many waveforms. To handle this multitude while keeping track of it, the MXO 4 provides intelligent support:

- The color system helps to distinguish the waveforms. The color of the vertical rotary knobs indicates the signal that is focused (selected). The color of each waveform can be changed, the color of its signal icon and of the illuminated keys is adjusted to the new color. Alternatively, a color table can be assigned to a waveform.
Settings: "Menu" > "Settings" > "Appearance" > "Colors" tab.
- You can arrange the waveforms in one diagram, or in separate diagrams. The Rohde & Schwarz SmartGrid function helps to arrange the waveforms.
See also: "[Diagram](#)" on page 52.

Waveform states

Depending on its place on the screen and the effect of settings, a waveform has one of the following states:

- Off
- Active:
The waveform is shown in a diagram
- Selected:
One of the active waveforms that has the focus. In each diagram, one of the assigned waveforms is selected – it appears "on top" in the diagram, and the grid labels have the color of the selected waveform.
The vertical [Position] and the [Scale] knobs are illuminated with the color of the selected waveform.
- Minimized:
The waveform signal icon is greyed out, and the waveform is removed from the diagram.

To switch a waveform on

A channel waveform is activated when you connect the probe. You can switch it on and off according to your needs.

- ▶ Choose one of the following ways:
 - Press the channel key.
 - In the "Vertical" dialog box, select the channel. Tap "Show channel" > "On".The waveform is now active, selected, and is shown in the diagram.

Remote command: [CHANnel<ch>:STATe](#) on page 569

To select a waveform

- ▶ Choose one of the following ways:
 - Tap the waveform in the waveform diagram.
 - Tap the signal icon.
 - To select a channel, reference, or math waveform, press the corresponding key.

Note: Zoom waveforms in zoom diagrams cannot be selected.

To minimize a waveform

- ▶ Tap the "Minimize" icon in the upper right corner of the waveform's signal icon in the signal bar.

The waveform disappears from the diagram and the signal icon turns lighter gray.

To arrange a waveform using the SmartGrid

See [Chapter 4.5, "Rohde & Schwarz SmartGrid"](#), on page 59.

To switch off a waveform

- ▶ Do one of the following:
 - Tap the "Delete" icon in the toolbar, and then signal icon of the waveform. You can also tap the waveform directly. If several waveforms overlap or lie close together, a selection list is shown.
 - To switch off a minimized waveform, tap the "Close" icon in the upper right corner of the signal icon.
 - If the waveform is an input channel:
 - Disable "Show channel" in the "Vertical" > "Setup" tab.
 - Select the channel. Then press its channel key twice.

Remote command: `CHANnel<ch>:STATe` on page 569

4.5 Rohde & Schwarz SmartGrid

The Rohde & Schwarz SmartGrid helps to create and arrange the diagrams on the screen with drag&drop. The diagram layout depends on the position where you drop the signal icon, in relation to an existing diagram.

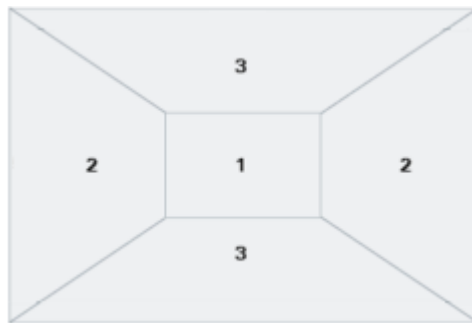



Figure 4-7: SmartGrid positions

- 1 = In the existing diagram, overlay of signal
- 2 = New diagram on the left or right
- 3 = New diagram above or below

The diagram configuration is deleted when you use [Preset] or *RST.

Working with layouts

A SmartGrid configuration of one or more diagrams is called "tab" or "layout". You can define several layouts and switch between them.

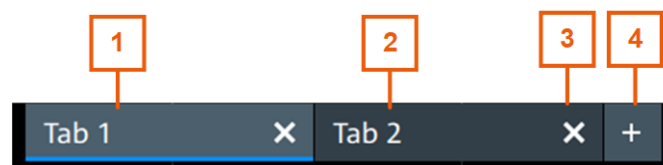

- 1 = Tab 1 (layout 1, blue underline indicates that the set is currently displayed)
- 2 = Tab 2 (layout 2)
- 3 = Tap to remove a layout
- 4 = Tap to add a layout

You can add up to four layouts at the upper left corner of the screen:

1. Tap on the **+** icon next to the layout.
A new layout is created.
2. To change the layout name, touch and hold the tab name. The on-screen keyboard opens to enter the new name. Names must be unique.
3. To remove the layout, tap on the **×** next to the layouts title.

To arrange a waveform using the SmartGrid

1. Select the layout that you want to rearrange.
2. Drag the signal icon to the diagram area, and move it around.
The Rohde & Schwarz SmartGrid appears and a blue or highlighted area shows where the waveform will be placed.

 


3. Drop the waveform in the target area.
The waveform appears in an existing or in a new diagram, and it is selected for further actions.
4. To change the size of a diagram, touch the border between two diagram frames and drag it to the required position.
5. If a diagram is empty, you see a trash can icon in the diagram center. Use the icon to delete the diagram, or drag waveform icons into the diagram.

Remote commands: see [Chapter 17.7.2, "SmartGrid"](#), on page 535

4.6 Toolbar

The toolbar provides direct access to important control and measurement functions.



By default, the toolbar shows the most frequently used functions. You can configure the content of the toolbar, see [Chapter 4.6.2, "Configuring the toolbar"](#), on page 61.

4.6.1 Using the toolbar

Using the toolbar is easy and straightforward.

Some of the toolbar functions are one-click actions. These actions are performed immediately when you tap the icon.

Other toolbar functions are analyzing functions. These actions are interactive actions.

To use analyzing functions (interactive actions)

1. Tap the icon of the function in the toolbar.
2. Check and adjust the settings in the overlay menu.
3. Select the source waveform if needed. For zoom, drag a rectangle, or tap the diagram to define the zoom area.
4. If the overlay menu does not close automatically, tap the icon.

4.6.2 Configuring the toolbar

You can configure the content of the toolbar so that only the required functions are displayed. The toolbar configuration is part of the user preferences. It is retained when you switch off and on the instrument, and you can save it in the user preferences and user-defined preset.

1. To open the toolbar configuration, tap the icon in the toolbar:



2. Select the required toolbar functions:
 - a) In the "Show/Hide tools" section, disable all functions that you do not need.
 - b) In the "Show/Hide tools" section, enable the functions that you want to add to the toolbar.
 - c) In the "Drag to rearrange tools" section, move the icons to arrange them as required.
3. To empty the toolbar, select "Deslect all".

- To get the factory configuration of the toolbar, select "Restore default".


A detailed description of the toolbar functions is given in [Chapter 4.6.3, "Toolbar functions"](#), on page 62.

Remote commands:

- `DISPlay:TOOLbar:COUNT?` on page 541
- `DISPlay:TOOLbar:DESelect` on page 541
- `DISPlay:TOOLbar:RESTore` on page 541

4.6.3 Toolbar functions

This section describes all toolbar functions in detail.

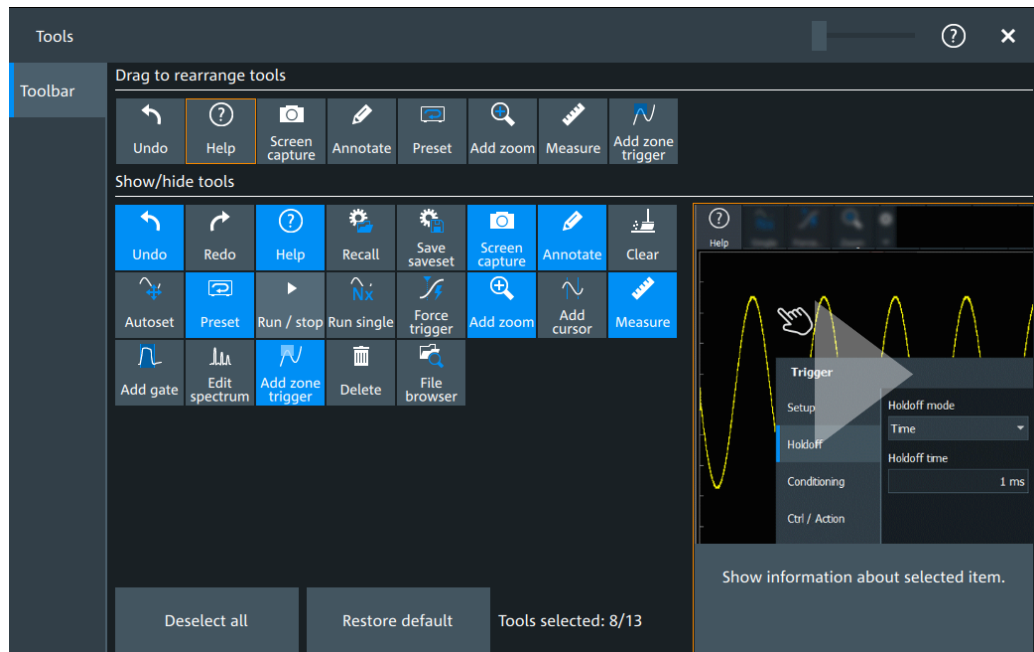

You can configure the content of the toolbar, see [Chapter 4.6.2, "Configuring the toolbar"](#), on page 61.

The following list describes at first the default toolbar functions and then the additional functions.

Undo	63
Redo	63
Help	63
Recall	63
Save saveset	63
Screen capture	63
Annotate	63
Clear	63

Autoset and Preset.....	64
Run / stop and Run single.....	64
Force trigger.....	64
Add zoom.....	64
Add cursor.....	64
Measure.....	64
Add gate.....	64
Edit spectrum.....	64
Add zone trigger.....	64
Delete.....	64
File browser.....	65

**Undo**

Undoes the last setting actions step by step. Some actions cannot be revoked: locking the touchscreen with [Touch Lock], and saving data.

**Redo**

Recovers the undo steps in reverse order.

**Help**

Enables the context help display. The help window opens when you tap a parameter.

See also: ["To display the context help"](#) on page 74.

**Recall**

Opens a window to select and load instrument settings that were previously stored in a saveset.

**Save saveset**

Saves the current instrument settings in a saveset.

You can reload the saveset using the "Recall" toolbar icon, or using "Menu" > "Save/Recall" > "Recall" tab > "Saveset".

The filename is created according to the autonaming pattern, defined in "Menu" > "Settings" > "Save / Recall" > "Autonaming" tab.

**Screen capture**

Saves a screenshot of the current display using the settings defined in "Menu" > "Save/Recall" > "Save" tab > "Screenshot".

**Annotate**

Displays drawing tools for marking areas on the diagram, and for adding text. You can also select the color.

See also: [Chapter 4.11, "Adding annotations"](#), on page 70.

**Clear**

Deletes all measurement results including all waveforms and statistics.

Remote command:

`DISPlay:CLR` on page 560

**Autoset and Preset**

Performs an autoset, or a preset to a default state. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you operate the instrument remotely.

**Run / stop and Run single**

Starts and stops the continuous acquisition, or starts a defined number of acquisition cycles. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you operate the instrument remotely.

**Force trigger**

Starts an immediate single acquisition. If the acquisition is running in normal mode and no valid trigger occurs, use "Force trigger" to confirm that a signal is available. Then you can use the displayed waveform to determine how to trigger on it.

**Add zoom**

Adds a zoom diagram, an area of the acquired waveform which is visually enlarged. Click a diagram to create a zoom or draw a rectangle to define the range of the zoom.

**Add cursor**

Adds a cursor set. Select the cursor type and the source to be measured.

See also: [Chapter 9.1, "Cursor measurements"](#), on page 228.

**Measure**

Adds one or more measurements to the waveform.

Tap the icon, and select the category and the measurements in the overlay menu. Select the waveform to be measured, and close the overlay menu.

**Add gate**

Creates a new gate.

Tap the icon, and then tap the diagram or draw a rectangle to define the limits of the gate. The "Gate" dialog opens, where you can adjust the gate settings and add measurements to use the gate.

**Edit spectrum**

Edit the existing spectrum settings in the overlay menu.

**Add zone trigger**

Defines a zone trigger, which combines the trigger condition with the intersection or non-intersection of one or more zones.

See also: [Chapter 7.9, "Zone trigger"](#), on page 187.

**Delete**

Removes waveforms, diagrams, zooms, trigger zones and other elements from the display.

Tap the "Delete" icon. A recycle bin icon marks all objects that can be deleted. Tap this icon to remove an object. Tap the "Delete" icon again to disable the function.



File browser

Opens the file browser dialog.


See also: [Chapter 12.5, "File browser dialog"](#), on page 338.

4.7 Using the selection menu


The selection menu, or comb menu, helps select objects on the screen if several objects are close beside. These objects are, for example, waveforms, zoom edges, gate limits, and cursor lines. When you tap or click a point in a diagram, the instrument determines the objects around the point and provides an appropriate menu. Each found object is represented by a comb. If more than 6 objects are detected, related objects are grouped to submenus. The selection menu is created and arranged anew at each finger tap, there are no predefined positions for the objects.

1. Tap the screen at the point of interest.

The selection menu provides all objects that were found around the point. In the image below, the objects of "Cursor Cu1" and "Zoom Z1" are grouped in submenu. The right arrow indicates that a submenu is available.

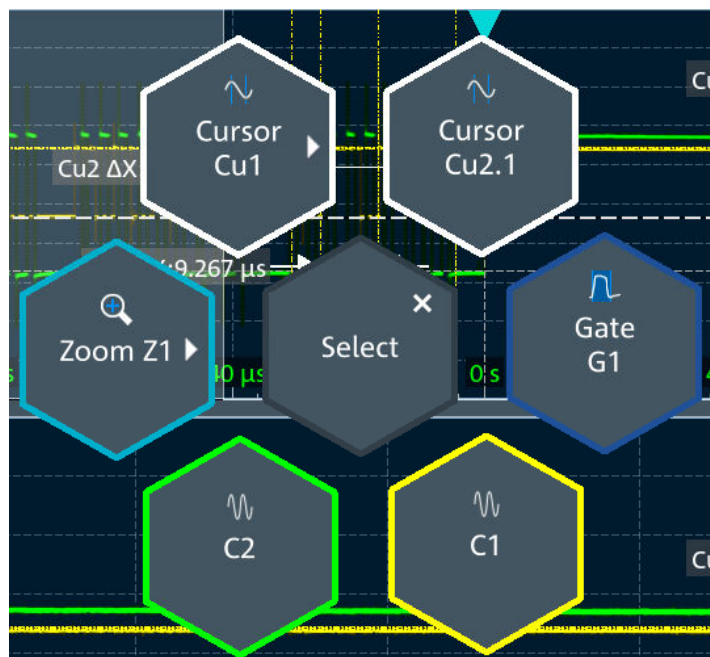

2. Select the comb of the needed object, or object group.
3. If you have selected an object, the object gets the focus. Change its position directly on the screen or with the [Multiuse] knob, or perform other actions depending on the selected object.
4. If you have selected an object group, the submenu opens.
The image shows the submenu of "Zoom Z1".

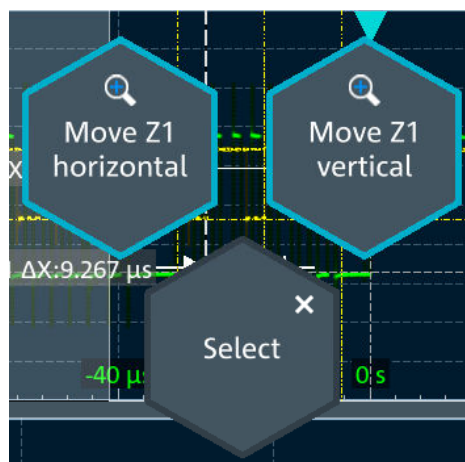




5. In the submenu, select the comb of the needed object.
6. Modify the selected object as required.

4.8 Using dialogs

All functionality is provided in dialogs as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods and describes how to use the dialogs.

Each dialog has three icons in the upper right corner:

	Closes the dialog.
	Opens the help window for the dialog.
	Shift sideways to change the transparency of the dialog.



For direct access to important control and measurement functions, use the toolbar, see [Chapter 4.6, "Toolbar"](#), on page 61.

To open a dialog

- ▶ Perform one of the following actions:
 - Open the "Menu", and select the menu entry.
 - Press the function key on the front panel.
 - Double-tap a result to open the corresponding settings dialog.
 - To open the "Vertical" dialog of a waveform, tap the signal icon.
 - Tap the "Horizontal", "Acquisition" or "Trigger" label to open the corresponding dialog.

To close a dialog

- ▶ Tap the "Close" icon in the upper right corner.

4.9 Entering data

To set parameter values and enter other data, you use the various knobs and the on-screen keypad or keyboard.

Using scale, position and level knobs


The instrument has dedicated rotary knobs to set vertical and horizontal positions and scale, and the trigger level.

1. Turn the knob to change the value.
2. Press the knob:
 - [Scale]: to toggle the increment.
 - [Position]: to set to zero.
 - [Level]: to set the trigger level to 50% of the signal.


To enter values with the on-screen keypad

For data input in dialog boxes, the touchscreen provides an on-screen keypad to enter numeric values and units. For text input, the on-screen keyboard with English key layout is used.


1. Double-tap the entry field. The on-screen keypad opens.

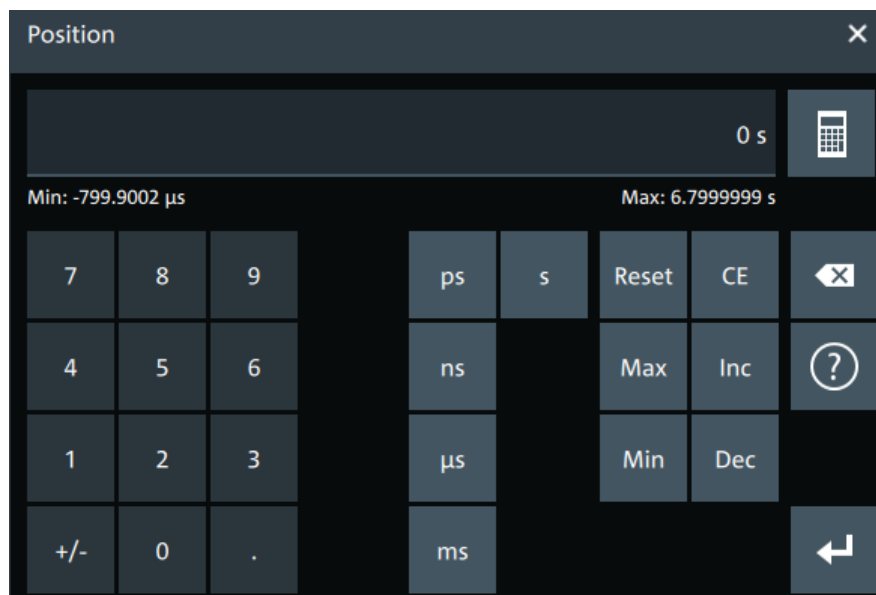

2. Enter a numeric value using the following methods:
 - To use the default value, tap "Reset" (if available).
 - To get the value that was used before the keypad was displayed, tap "CE".


- To use the minimum or maximum value, tap "Min" or "Max", respectively.
- To increase the displayed value in fixed steps, tap "Inc".
To decrease the value in fixed steps, tap "Dec".
- To enter a user-defined value, tap the numbers and complete the entry by tapping the unit button.
 - "±" changes the sign of the value.
- To calculate a value, tap the calculator  to display the arithmetic operators. Use the displayed fields to calculate your values.



3. To activate caps lock when you enter a text value, double-tap the shift key (up arrow key).
4. Tap  to complete the entry.

To enable the on-screen keyboard

1. Tap "Menu".
2. Tap on "Keyboard" to enable the on-screen keyboard.

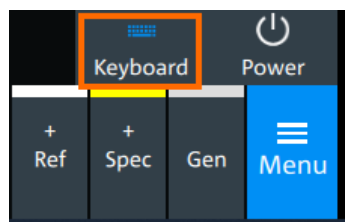





If the on-screen keyboard is enabled, the keyboard icon is colored blue. If it is disabled, the color is white.

To enter data with the on-screen keyboard

1. Double-tap the entry field to open the on-screen keyboard.

Report|




2. Enter the text as you would on a normal keyboard.
 - To change the language, tap . The current language is shown on the blank key.
 - To display numbers and signs, tap .
3. Tap  to complete the entry or  to minimize the keyboard.

4.10 Displaying results


The results of measurements, protocol decoding and others are displayed immediately. The font size can be adjusted.

To arrange the results on the display

1. Touch and hold the "....." field on top of the results table.

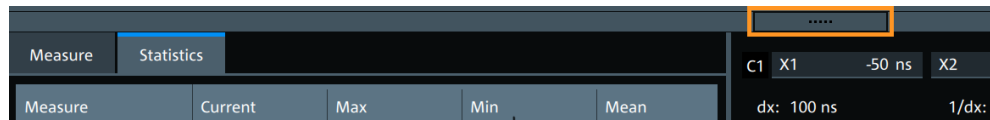

2. Drag on the screen. The SmartGrid indicates where the result table can be placed. Drop the box on one of the buttons. The results are shown at the left the right, or below the diagrams.

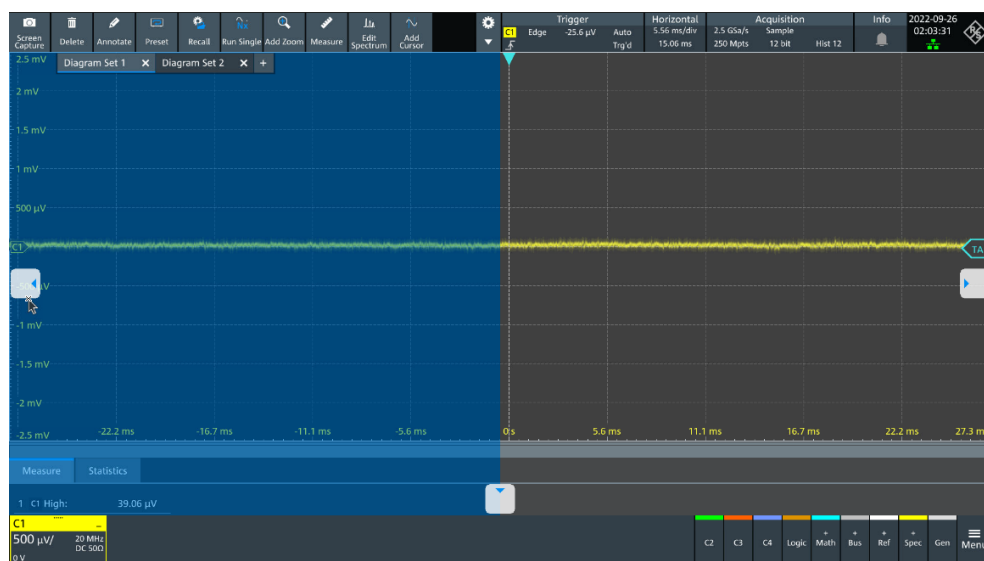

To open the corresponding settings

- ▶ Double-tap one of the result values.
The corresponding dialog opens.

To adjust the font size of results

 
1. Open the "Menu" > "Settings" > "Appearance" dialog.
2. Select the "Dialogs" tab.
3. Set the "Result dialog" > "Font size".

4.11 Adding annotations


The MXO 4 provides an easy way to add annotations to the screen. With the toolbar "Annotate" you can add text, forms or even draw.

To add an annotation


1. On the toolbar, tap on the "Annotate" icon.



The annotation overlay menu opens.

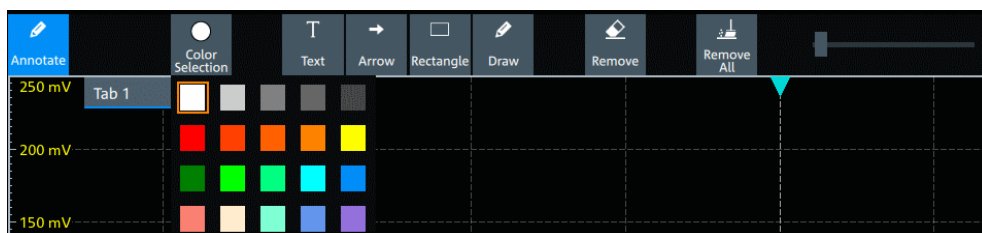

2. Tap "Color selections" and select the color that you want to use for your annotations.
3. Add one or more of the following:
 - One of the predefined forms: "Arrow" or "Rectangle"
 - "Text": adds a text element to the screen and opens on-screen keyboard. You can change the text later, by tapping on an existing annotation and typing in the new text.
 - "Draw": you can draw any form on the screen.

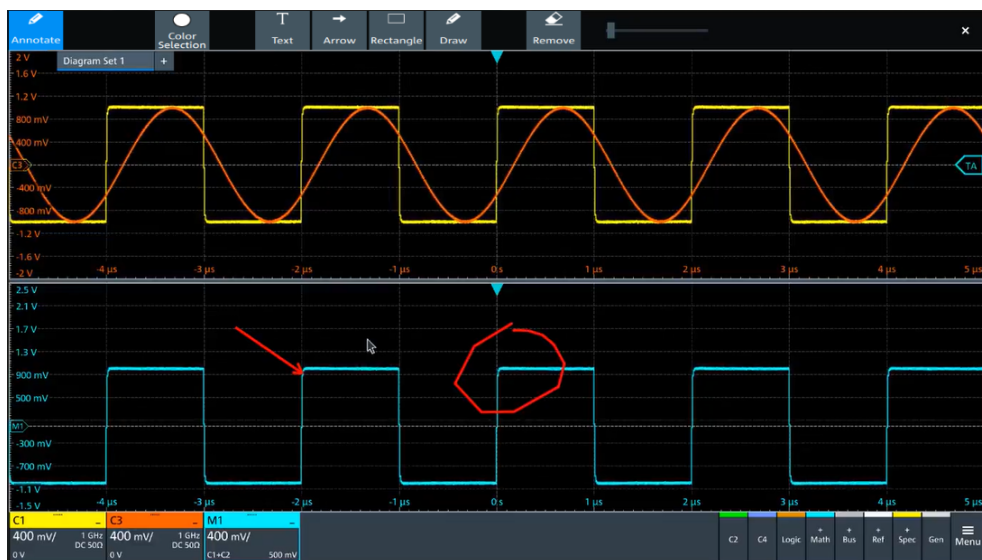

4. To move one of the annotations, tap on it and drag it to the required position.

To remove an annotation

1. In the "Annotate" overlay menu, tap on "Remove".
2. Tap on any existing "Arrow", "Rectangle" or "Text" annotation to remove it.
3. The "Remove" function, acts as an eraser on drawings: it enables you to erase only certain parts of your drawing. Drag your finger over any part of your drawing to erase it.
4. To remove all annotations from the screen, tap on "Remove All".

Remote commands: see [Chapter 17.7.4, "Annotations"](#), on page 541.

4.12 Information and notifications

The oscilloscope provides various information:


- Instrument information, e.g. connection status, firmware version
- Notifications, e.g. status messages, incompatible settings, insufficient memory
- Progress information, e.g. for long acquisitions, data saving

Instrument information

In the upper right corner of the screen, you see the Rohde & Schwarz logo, date and time, the symbolic information on LAN connection and the notifications status.

- ▶ To see the instrument information, select the Rohde & Schwarz logo.

You can find information about the instrument model, bandwidth, network settings, firmware version and operating time.

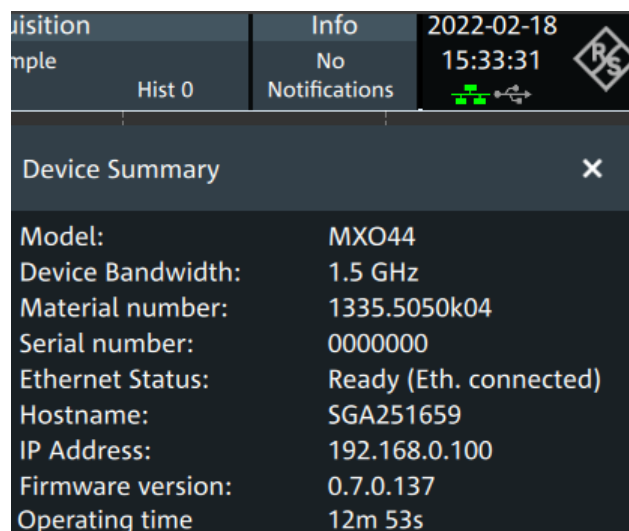


- ▶ To hide the date and time or change the display format, select the date/time display.

Notifications

Notifications are status messages, information on mismatching settings, insufficient memory and similar information. They are displayed for a few seconds and saved.

- ▶ To read the notifications, select "Notification".

You can save or delete the list of notifications.

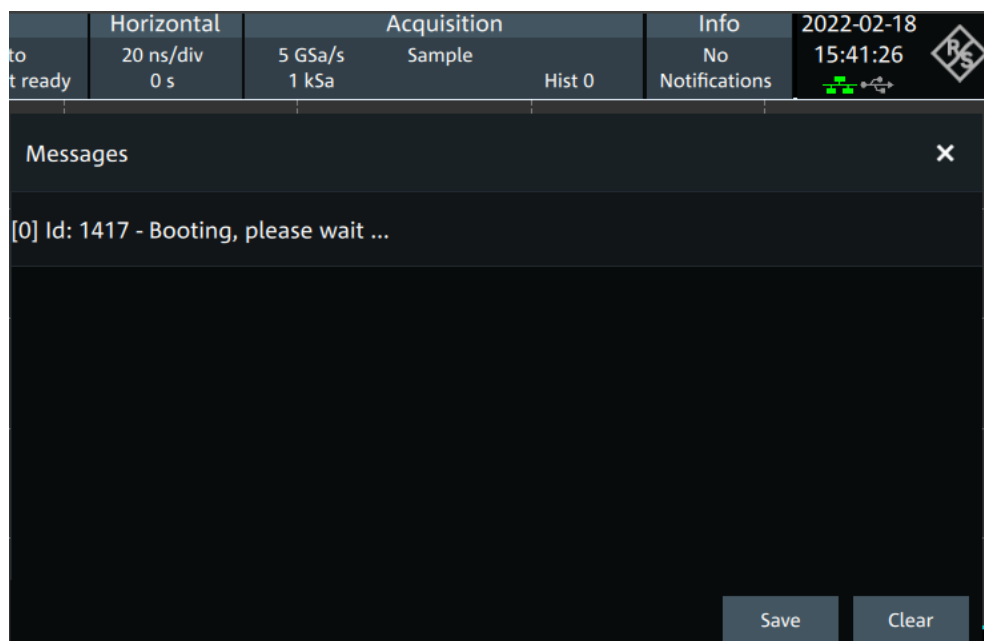

Progress information

If an acquisition, operation or process takes more time until results are displayed, a progress bar or symbol indicates that a process is running.

The progress of saving operations and update or creation of a reference waveform is shown in a progress bar. You can cancel the process. A notification informs about the result.



Figure 4-8: Progress bar for saving waveform data

The progress of running acquisitions is shown in the acquisition label. A circle indicates the state of the current, incomplete acquisition. Progress in roll mode, average mode and single acquisition with N > 1 is indicated by a progress bar and counter.



Figure 4-9: Progress of incomplete long acquisition in average mode, Run Single = 5, first acquisition is finished

 
4.13 Getting user assistance

If you need information on the instrument's functionality, you can use the instrument help. It provides contextual information on a setting or dialog. If the help window is open, you can browse and search for further information using links, table of contents, and search.

4.13.1 Displaying help

To display the context help

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

The "Help" window opens and displays the comprehensive description and the corresponding remote command. You can browse the help for further information.

To open a dialog help

1. Open a dialog.
2. Tap the ⓘ "Help" icon in the dialog header.
3. Tap a subtab or menu item.

The help window opens with the dialog help page, where you can select the topics.


4.13.2 Using help

You can find a specific information and navigate the contents by following means:

- Table of contents
- Buttons in the help window title:



- "Home": Go to the start page
- "Back", "Forward": Browse the pages that you visited before
- Search with filter:

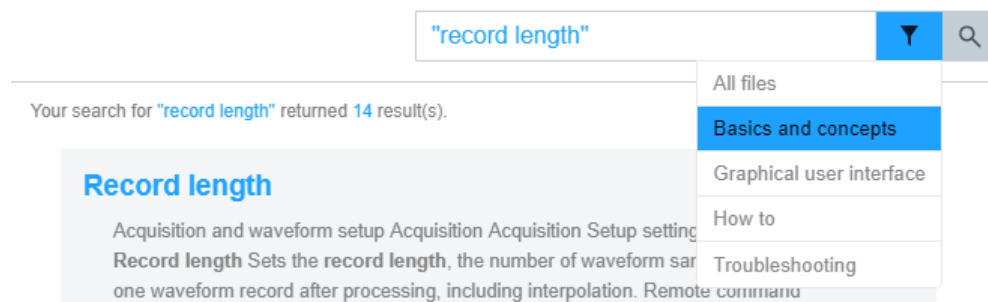


- Enter the word to be found, or a phrase in quotes.
- Tap the filter icon and select the information type.

5 Instrument setup

Access: "Menu" > "Settings".

In the "Settings" dialog, you can adapt various instrument settings to your requirements, such as language, display appearance, and assign functions to some keys.

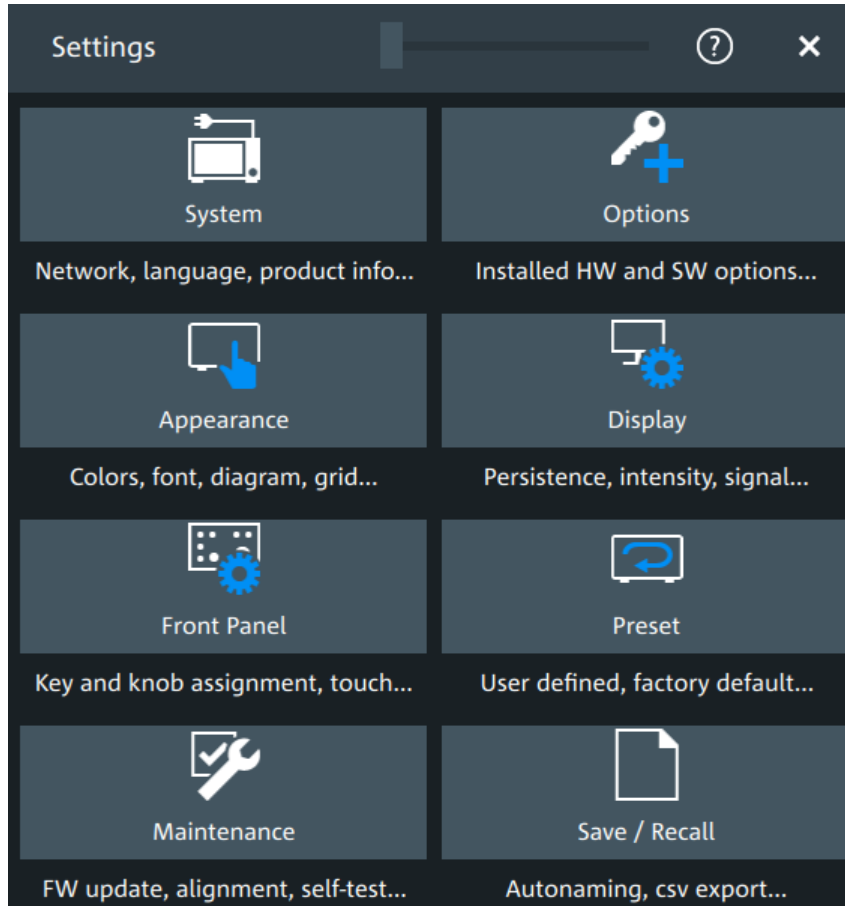

The following settings and procedures are described in the current section:


• System settings	77
• Option settings	82
• Appearance settings	85
• Display settings	91
• Front panel settings	93
• Preset setup	95
• Maintenance settings	99
• Save / recall	103

5.1 System settings

In the "Settings" > "System" dialog box, you find all instrument, firmware and network-related information. Here you can also set the language that is used in the dialogs.

5.1.1 About settings

Access: "Menu" > "Settings" > "System" > "About".

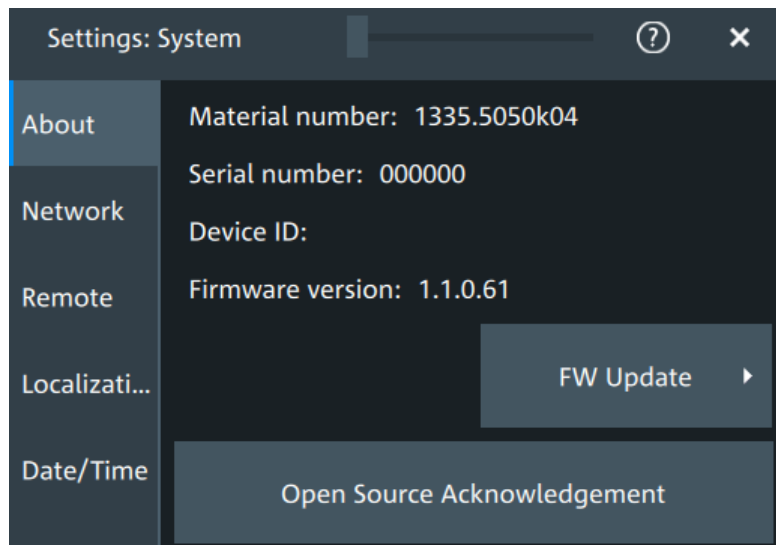

Instrument

Displays general information about the instrument, including:

- "Material number"
- "Serial number"
- "Device ID"
- "Firmware version"

Remote command:

[*IDN?](#) on page 528

FW update


Opens the "FW update" dialog box. See [Chapter 5.7.1, "Firmware update"](#), on page 99.

Open source acknowledgment

Displays the "Open Source Acknowledgment" document.

5.1.2 Network settings

Access: "Menu" > "Settings" > "System" > "Network".

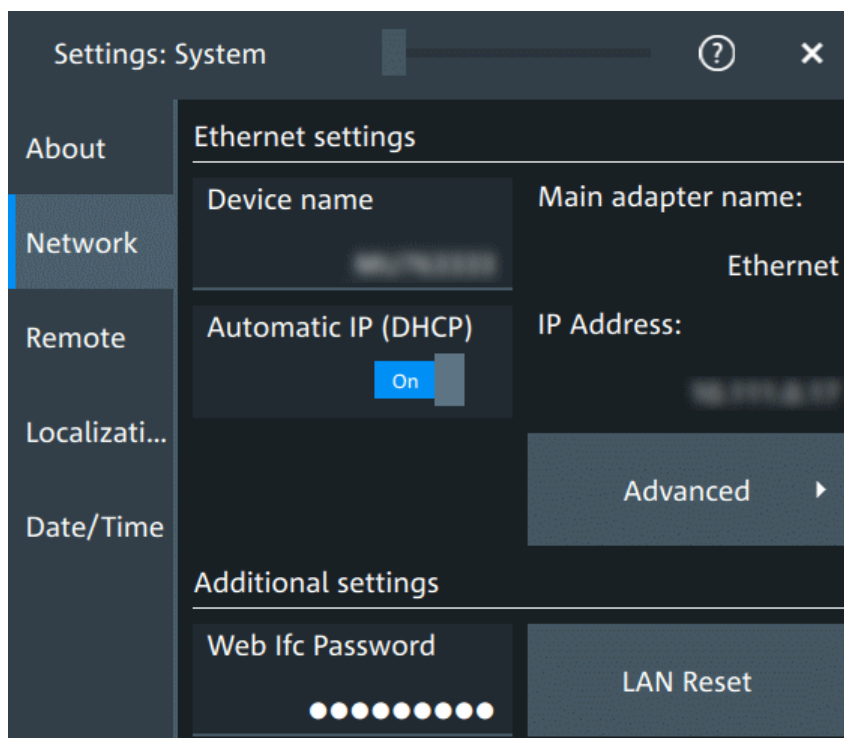

Device name

Indicates the currently defined host name. This value is required to configure the instrument for work in a network.

You can change the host name here. After changing the host name, you have to reboot the instrument.

NOTICE! Risk of network problems. Incorrect configuration of the host name can create network problems. Consult your network administrator before changing the name.

Remote command:

`SYSTem:COMMunicate:NET[:HOSTname]` on page 533

Automatic IP (DHCP)

If enabled, the IP address of the oscilloscope is obtained automatically.

IP address

Shows the current IP address of the instrument. If "Automatic IP (DHCP)" is "Off", you can change the IP address here. For complete manual configuration, select "Advanced". See also: [Chapter 16.1, "Connecting the instrument to the network \(LAN\)"](#), on page 499.

Web Ifc Password

Password for LAN configuration. The default password is *LxiWebIfc*.

LAN reset

Resets the LAN configuration to its default settings using the network configuration reset mechanism (LCI) for the instrument.

The LAN settings are configured in the "Advanced" dialog, or using the instrument's web browser (see [Chapter 16.2, "Web interface"](#), on page 501).

Advanced

Opens a dialog box to configure the network connection.




You need these settings to configure the LAN connection manually, without DHCP.

NOTICE! Connection errors can affect the entire network. Make sure to assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address and other connection data.

See also: [Chapter 16.1, "Connecting the instrument to the network \(LAN\)"](#), on page 499.

5.1.3 Remote settings

Access: "Menu" > "Settings" > "System" > "Remote".

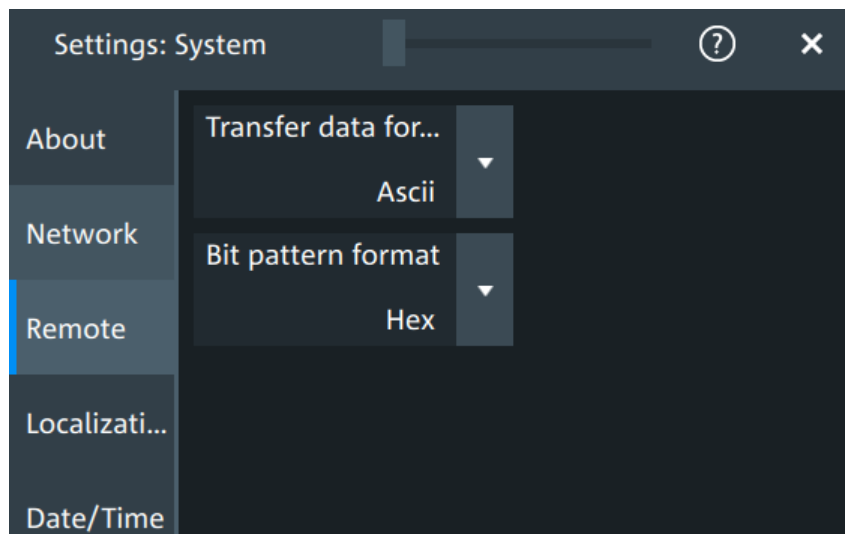

The following settings are required for remote control of the instrument via a connected computer.

Transfer data format

Selects the data format that is used for transmission of waveform data from the instrument to the controlling computer.

Waveform data can be retrieved using the following commands:

- `DIGital<m>:DATA[:VALues]?`

"Ascii" Data values are returned in ASCII format as a list of comma-separated values in floating point format.

"FLOAT" Binary format. Up to 7 significant digits are stored. If there are more than 7 digits, the number is rounded off.

"DOUBLE" Binary format. Up to 15 significant digits of the numbers are stored.

"INT8/16/32" Signed integer data with length 8/16/ 32 bit.

Remote command:

`FORMat[:DATA]` on page 531

Bit pattern format


Sets the format for all bit pattern queries.

Remote command:

`FORMat:BPATtern` on page 532

5.1.4 Localization settings

Access: "Menu" > "Settings" > "System" > "Localization".

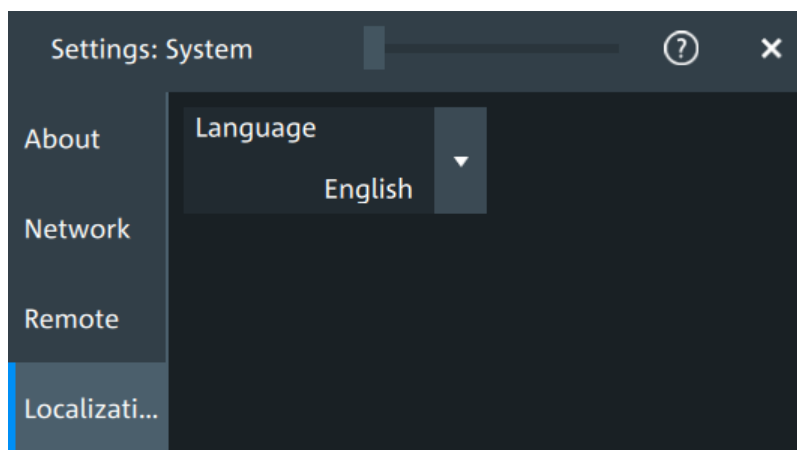


Language

Selects the language in which the dialog boxes, result boxes and other screen information is displayed. You can change the instrument language while the instrument is running.

Available languages are, for example, English, German, French, Japanese. For a complete list of supported languages, refer to the specifications document.

5.1.5 Date and time settings

Access: "Menu" > "Settings" > "System" > "Date/time".

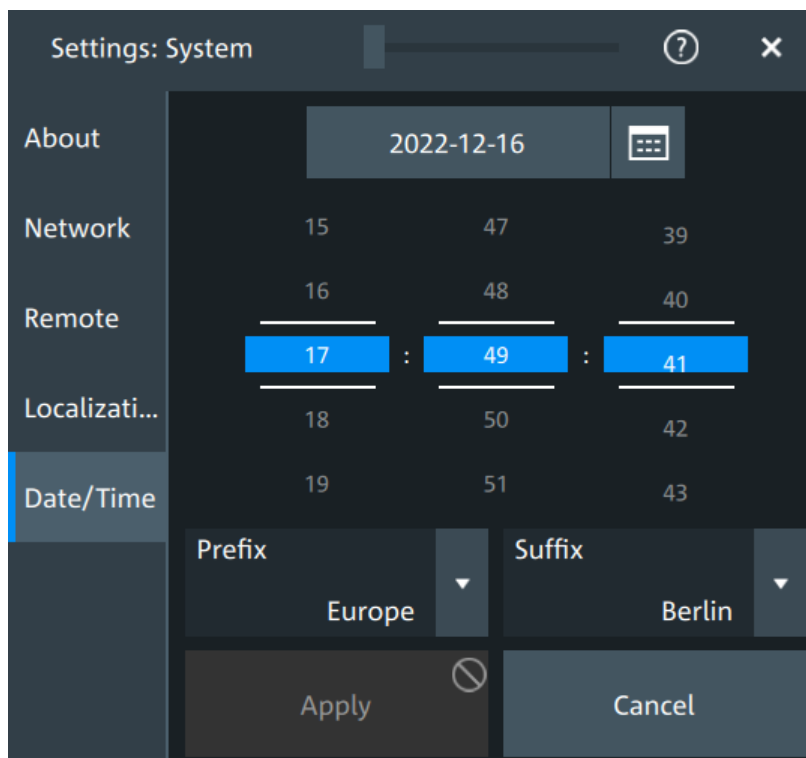

The instrument uses the system time of the operating system, but you can change date and time for the MXO 4 firmware.

1. To change the date:
 - a) Tap the date button.
 - b) Select the date in the calendar.
 - c) Tap the blue calendar icon to close the calendar.
2. To change the time, move the hour, minute and second sliders to the required values.
3. Adjust the "Prefix" and "Suffix" to indicate your location.
4. Tap "Apply".

Remote command:

- `SYSTem:DATE` on page 534
- `SYSTem:TIME` on page 535

5.2 Option settings

Additional options for the MXO 4 are enabled using a license key. To obtain the license key, consult your sales representative.

You can obtain registered or unregistered licenses.




Unregistered licenses

Unregistered licenses are not assigned to a particular instrument. The instrument accepts only registered licenses. If your license is delivered unregistered, use the online tool R&S License Manager to register the license for your instrument. The registration of a permanent license is irreversible, so ensure that you register it for the correct instrument. The address of the tool is <https://extranet.rohde-schwarz.com/service>. For registration, you need the device ID of the instrument on which the option will be installed.

5.2.1 Software options settings


Access: "Settings" > "Options" > "Software"

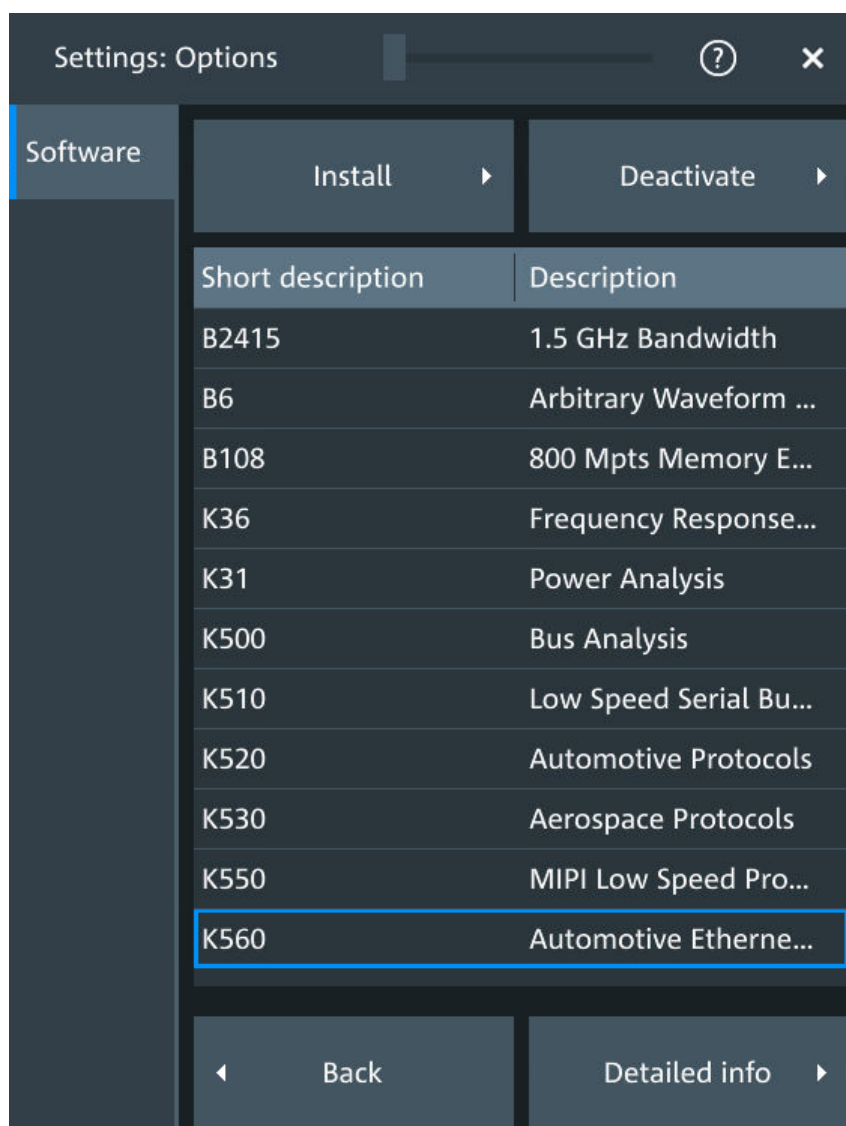

In this dialog, you can access settings for installing and deactivating options. In the "Detailed Info" dialog, you can get an overview of all options installed on your MXO 4.

5.2.1.1 Install options

Access: "Settings" > "Options" > "Software" > "Install"

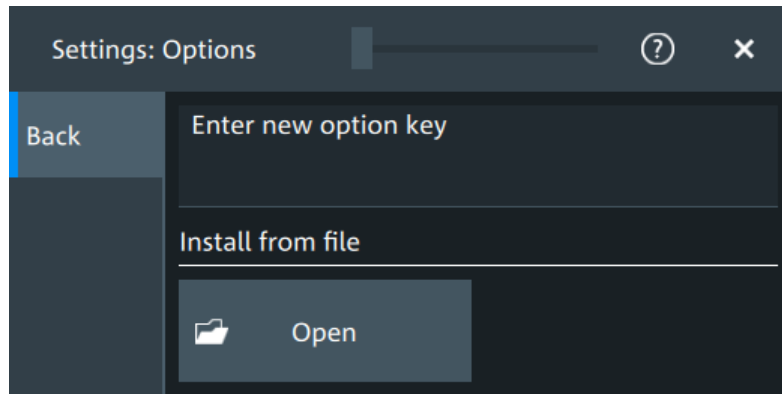

In the "Install" tab, you can install new options using license keys.

Enter new option key

Enter the license key here to activate the option. For license keys delivered as a file, use "Install from file" on page 84.

Install from file

If you got a license file, install the license here.

Tap "Open" to open the file selection dialog, or enter the complete path and filename.

5.2.1.2 Deactivate options

Access: "Settings" > "Options" > "Software" > "Deactivate"

When you deactivate an option, you might need to note the response key, or to save the response to a file. This is done in the "Deactivate" dialog.

Active	Short desc.	Description	State	Privilege	Valid from	Valid to	Expires ...
Deactivat...	B2415	1.5 GHz Ba...	Official	Customer order	P..		
	B6	Arbitrary W...	Official	Customer order	P..		
	B108	800 Mpts ...	Official	Customer order	P..		
	K36	Frequency ...	Official	Customer order	P..		
	K31	Power Anal...	Official	Customer order	P..		
	K500	Bus Analysis	Official	Customer order	P..		
	K510	Low Speed ...	Official	Customer order	P..		
	K520	Automotive...	Official	Customer order	P..		
	K530	Aerospace ...	Official	Customer order	P..		
	K550	MIPI Low S...	Official	Customer order	P..		
	K560	Automotive...	Official	Customer order	P..		

5.3 Appearance settings


In the "Settings" > "Appearance" dialog box, you define the look and feel of the display element, e.g. waveform colors, result position, or grid behavior.

Appearance settings are not included in user-defined presets. To reset all appearance settings at once, use the factory preset.

5.3.1 Colors

Access: "Settings" > "Appearance" > "Colors"

By default, various colors are assigned to the different waveform types for better visibility and distinguishability. You can change the color assignment and assign another color or a color table to waveforms.

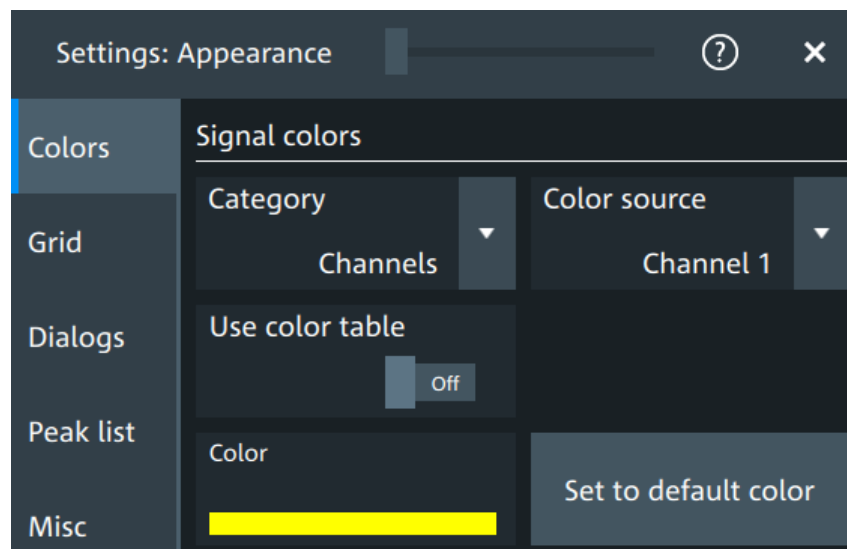

Category

Selects the category of the waveform, e.g. "Channels", "Math", "Reference".

You can then select one of the waveforms of the selected category with "Color source".

Color source

Selects the waveform to which the color or the color table is assigned.

Use color table

If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

Remote command:

[DISPlay:COLor:SIGNal:USE](#) on page 554

Assigned color table

Assigns a color table to the source waveform instead of a dedicated color. Color tables define the color of the waveform pixels depending on the cumulative occurrence of the associated values.

The following color tables are provided:

- "False colors": color changes gradually in a wide color spectrum.
- "Single Event": single events and very seldom events appear yellow, a higher cumulative occurrence is shown with blue color. This view helps to identify specific events.
- "Spectrum": colors display the wavelengths of the light. Low cumulative occurrence is displayed blue like high wavelength.
- "Temperature": color changes gradually from blue (low temperature) to red (high temperature) with increasing cumulative occurrence.


Remote command:

[DISPlay:COLor:SIGNal:ASSign](#) on page 554

Color

Shows the current color of the selected waveform. To change the color, tap the button to open the "Color" dialog.

In the dialog, you can pick from a list of basic colors, or define a color with the color picker.

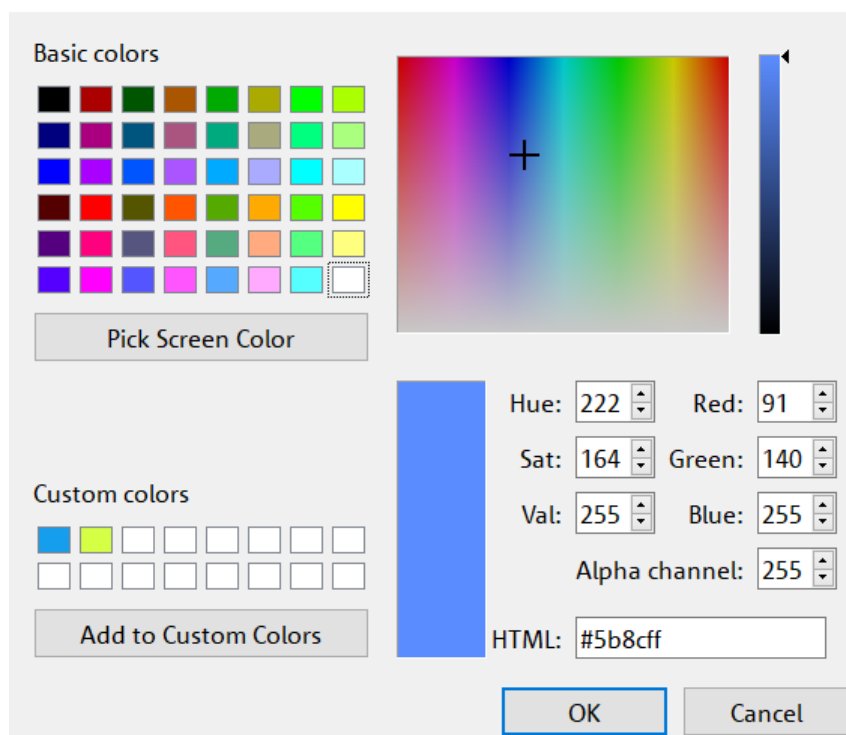Color

The color of the waveform, its signal icon, and of the illuminated keys is adjusted to the new color. If the waveform is a spectrum, the knobs for vertical scale and position retain the color of the spectrum's source.

Remote command:

[DISPlay:COLor:SIGNal:COLor](#) on page 553

Set to default color


Resets the color of the selected waveform to the factory default.

Remote command:

[DISPlay:COLor:SIGNal:COLor <Signal>,DEF](#)

5.3.2 Grid

Access: "Settings" > "Appearance" > "Grid"

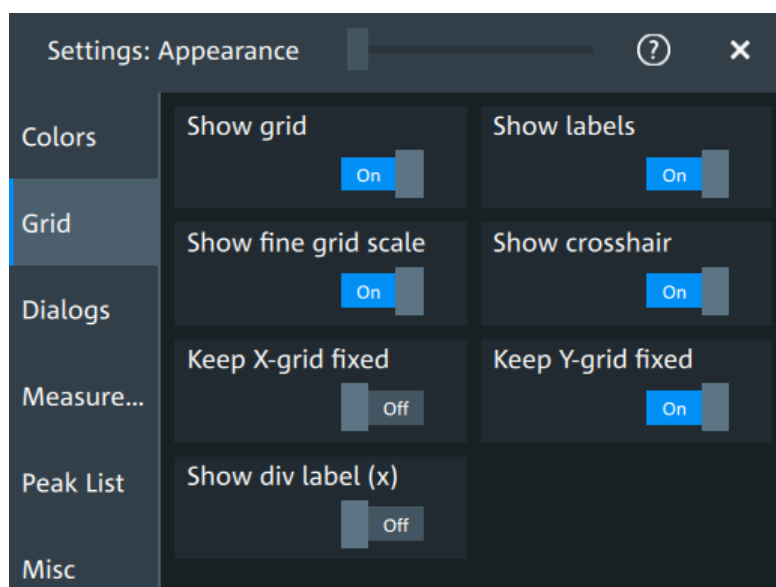

Show grid

If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Remote command:

[DISPlay:DIAGram:GRID](#) on page 555

Show labels


If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Remote command:

[DISPlay:DIAGram:LABels](#) on page 555

Show fine grid scale

If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

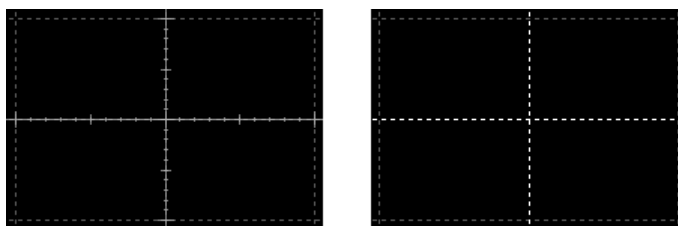

Remote command:

[DISPlay:DIAGram:FINegrid](#) on page 555

Show crosshair

If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Remote command:

[DISPlay:DIAGram:CROSShair](#) on page 554

Keep X-grid fixed

If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Remote command:

[DISPlay:DIAGram:XFIXed](#) on page 555

Keep Y-grid fixed

If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Remote command:


[DISPlay:DIAGram:YFIXed](#) on page 556

Show div label (x)

If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

5.3.3 Dialogs

Access: "Settings" > "Appearance" > "Dialogs"

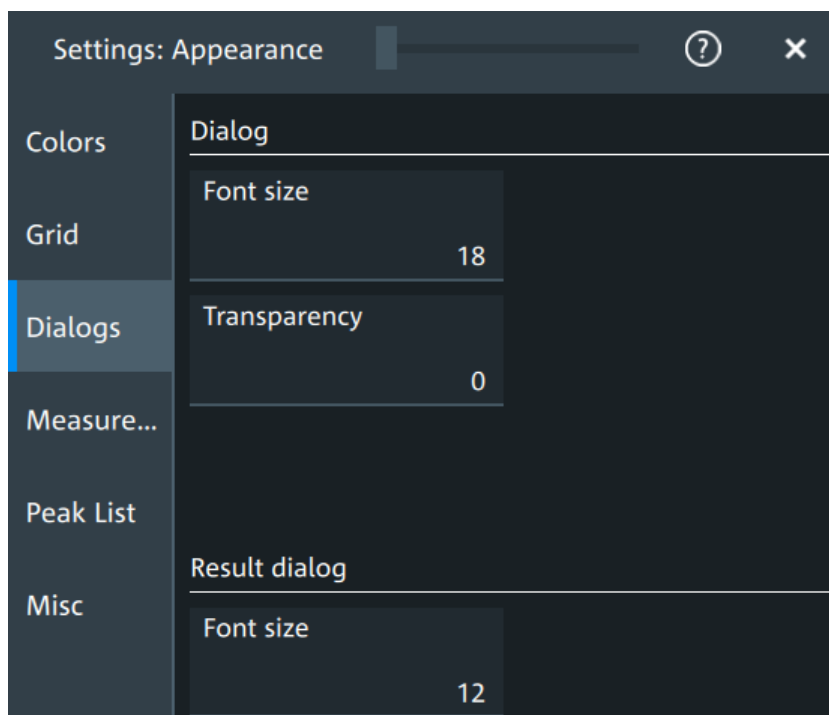**Font size (Dialog)**

Sets the font size of the text in dialog boxes.

Remote command:

[DISPlay:DIALog:FONTsize](#) on page 556

Transparency (Dialog)

Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

You can also set the dialog transparency by moving the transparency bar at the top of the dialog.



Remote command:

[DISPlay:DIALog:TRANsparency](#) on page 556

Font size (Result dialog)


Sets the font size of the text in result tables.

Remote command:

[DISPlay:RESult:FONTsize](#) on page 557

5.3.4 Peak list

Access: "Settings" > "Appearance" > "Peak list"

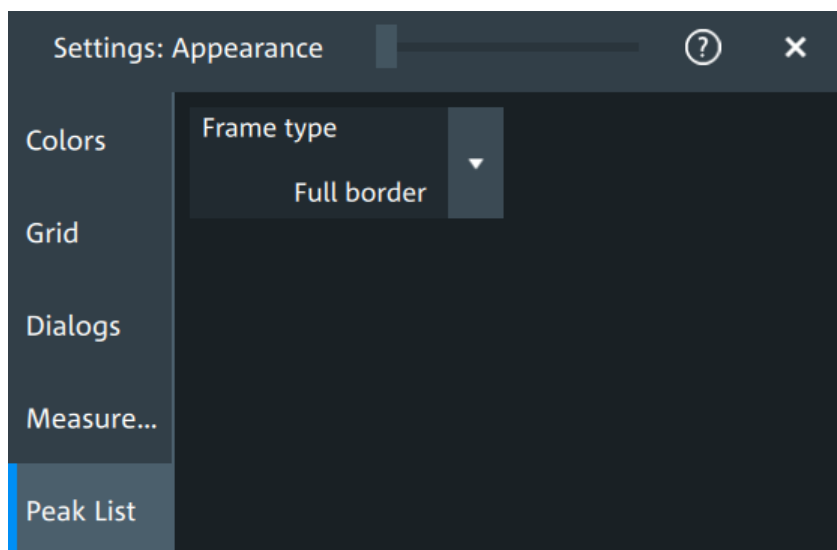

Peak list settings apply to peak list measurements. They are visible when the peak list for spectrum measurements is enabled.

Frame type


Defines the layout of the labels, full border or none.

Remote command:

[CALCulate:SPECTrum<sp>:PLIST:LABel:BORDer](#) on page 557


5.3.5 Miscellaneous

Access: "Settings" > "Appearance" > "Misc"

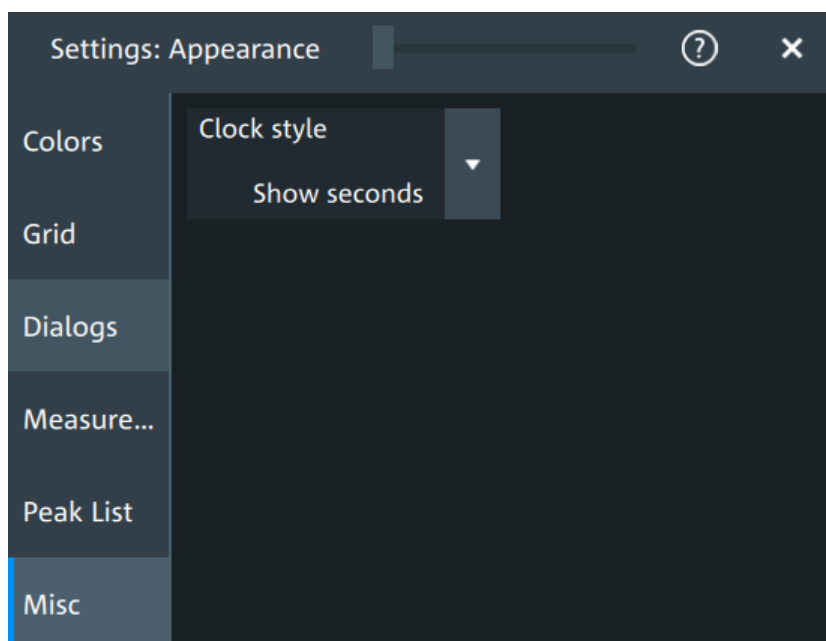

Clock style

Select how the clock in the upper right corner of the screen is displayed:

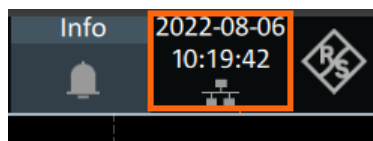


- "Show seconds": format is hh:mm:ss
- "Hide seconds": format is hh:mm
- "Hide clock": no time is shown

5.4 Display settings

In the "Settings" > "Display" dialog, you can define the display settings like brightness and signal intensity.

5.4.1 Persistence settings

Access: "Menu" > "Settings" > "Display" > "Persistence".

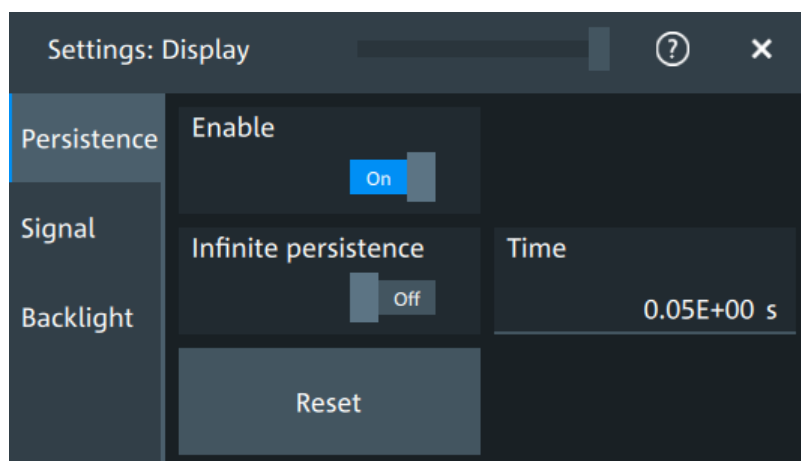**Enable**

If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using **Time**, or as long as **Infinite persistence** is enabled.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:

`DISPlay:PERSiStence[:STATe]` on page 558

Infinite persistence

If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Remote command:

[DISPlay:PERSistence:INFinite](#) on page 558

Time

Sets a time factor that controls how long the waveform points fade away from the display. Thus, the MXO 4 emulates the persistence of analog phosphor screens.

Remote command:

[DISPlay:PERSistence:TIME](#) on page 558

Reset


Resets the display, removing persistent all waveform points.

Remote command:

[DISPlay:PERSistence:RESet](#) on page 558

5.4.2 Signal settings

Access: "Menu" > "Settings" > "Display" > "Signal".

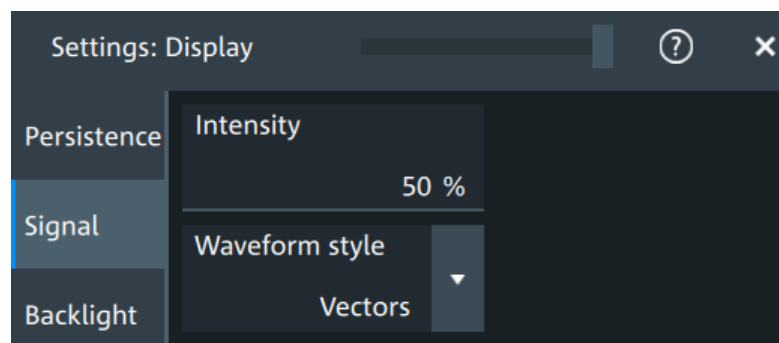

Intensity

The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

You can also use the [Intensity] knob to adjust the waveform intensity directly.

Remote command:

[DISPlay:INTensity](#) on page 559

Waveform style

Selects the style in which the waveform is displayed.


- "Vectors" The individual waveform points are connected by a line. Define the strength of the line using the [Intensity] knob.
- "Dots" Only the individual waveform points are displayed. To see the dots of one waveform, perform one acquisition with [Single] and N=1 ([N-single/Avg count](#)). During continuous acquisition, or a [Single] acquisition with N > 1, the dots of multiple subsequent waveforms are displayed on the screen, and the waveform looks like a line.

Remote command:

[DISPlay:DIAGram:STYLE](#) on page 559

5.4.3 Backlight settings

Access: "Menu" > "Settings" > "Display" > "Backlight".

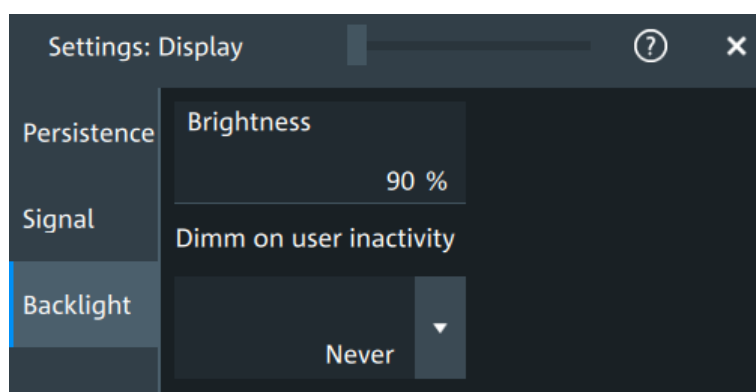

Brightness

Sets the background luminosity of the touchscreen.

Remote command:

[DISPlay:BACKlight\[:BRIGtness\]](#) on page 559

Dimm on user inactivity

Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.

Remote command:


[DISPlay:BACKlight:DIMMING](#) on page 560

5.5 Front panel settings

In the "Front Panel" dialog box, you can assign functions to keys and knobs and adjust the brightness of the keys.

5.5.1 Hardkeys: function assignment

Access: "Settings" > "Front Panel" > "Hardkeys"

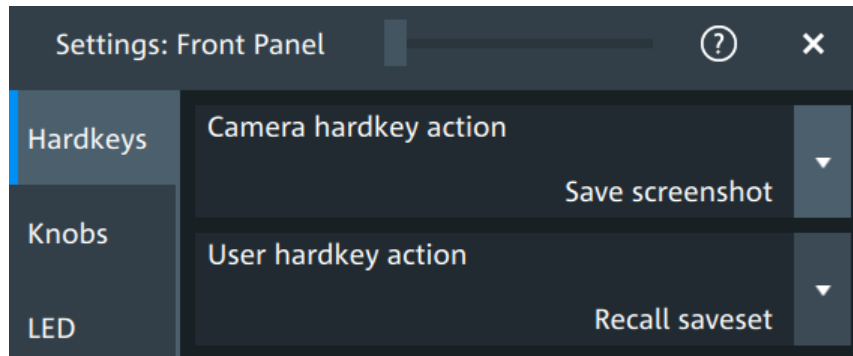

Camera hardkey action

The Camera key on the bottom right is a shortcut key that initiates an associated action.

You can assign one of the following actions:

- Save screenshot
- Open screenshot setup

Configure the settings for the selected action.

- Screenshots: "Save/Recall" key > "Save" tab > "Screenshot", see [Chapter 12.4, "Screenshots"](#), on page 335.

User hardkey action

The [User] key below the spectrum keys is a shortcut key that initiates an associated action.


You can assign one of the following actions:

- Force trigger
- Save saveset
- Recall saveset

For details of saveset configuration, see [Chapter 12.1, "Save and recall user settings"](#), on page 320.

5.5.2 Knobs

Access: "Settings" > "Front Panel" > "Knobs"

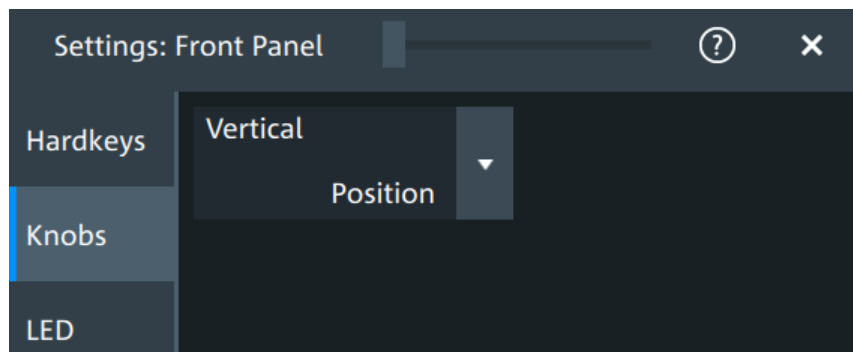


Vertical

The vertical Position knob can change the waveform position or the offset of the selected waveform. Select the action that you want to perform.

See also: "[Position]" on page 44.

5.5.3 LED

Access: "Settings" > "Front Panel" > "LED".

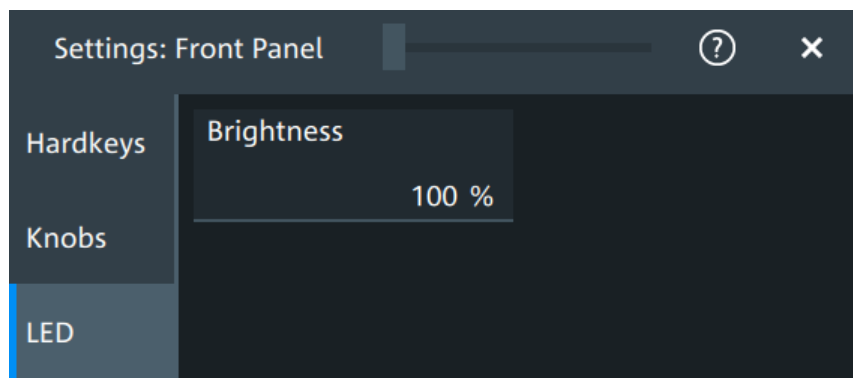

Brightness

Defines the luminosity of illuminated front panel keys and knobs.


5.6 Preset setup

The preset sets the instrument to a default configuration, or to a user-defined configuration. A user-defined preset file is one of the saveset files, which are stored on the instrument. It contains the measurement setup, while the user's display settings are not included. You can save the current configuration to a preset file, and enable saved preset file to be applied with the [Preset] key.

See also: [Chapter 12.1, "Save and recall user settings"](#), on page 320.

5.6.1 Preset settings

Access: "Menu" > "Settings" > "Preset" > "Settings".

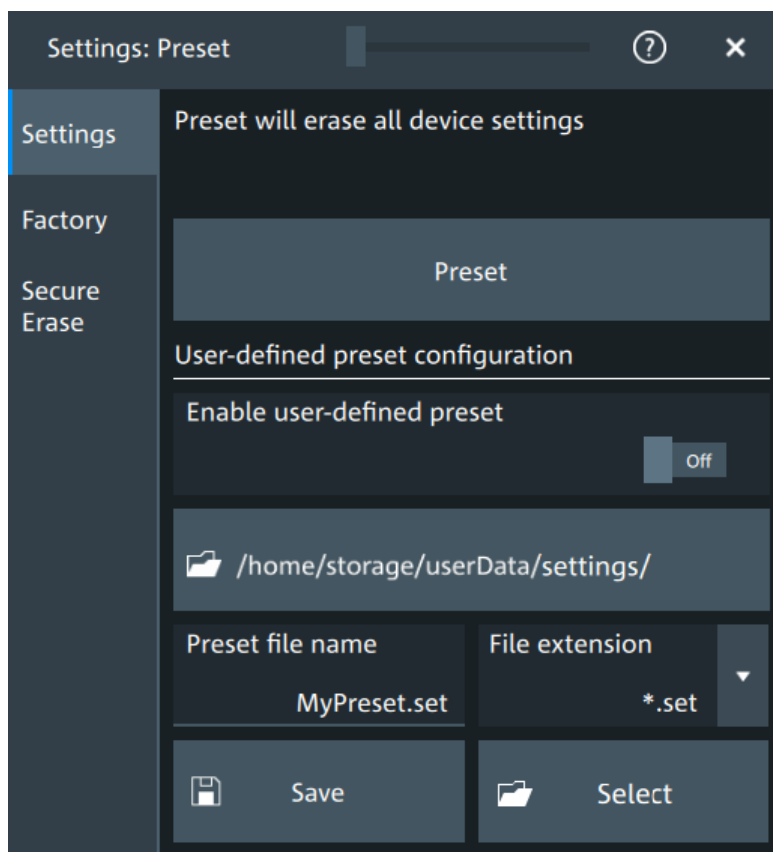

Preset

Set the instrument to a default configuration, or to a user-defined configuration.

Enable user-defined preset

If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

Remote command:

[USERdefined:PRESet\[:ENABLE\]](#) on page 563

Preset file selection

Select the saveset file that contains the required settings.

<Directory> Shows the currently used directory. To change the directory, tap the button and select the correct directory in the file dialog.

"Preset file name" Enter the filename of the preset file. This file is loaded on user-defined preset. The filename is also used when you save a preset file with "Save".

"File extension" The file extension is `.set`.

Remote command:

[USERdefined:PRESet:NAME](#) on page 563

[USERdefined:PRESet:OPEN](#) on page 563

Select, Save


"Select" opens the file selection dialog, where you can select the directory and enter the filename of the preset file. "Save" saves the current settings immediately to the file that is named in "Preset file name" in the current directory.

Remote command:

[USERdefined:PRESet:SAVE](#) on page 563

5.6.2 Factory preset

Access: "Menu" > "Settings" > "Preset" > "Factory".

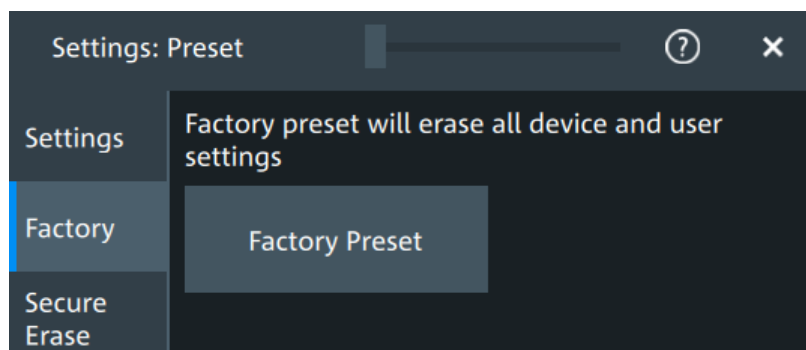**Factory preset**

Resets the instrument to the factory default settings, to the initial state. Factory settings comprise all instrument settings, including display, intensity and transparency settings.

Remote command:

[SYSTEM:PRESet](#) on page 534


5.6.3 Secure erase

Access: "Menu" > "Settings" > "Preset" > "Secure erase"

To purge all non-volatile memory, a special delete function is available. This function erases all user data, including instrument setups and reference waveforms. Calibration data is retained on the instrument. The instrument reboots after erasing the data.

The procedure is required if user data must not leave the test area with the instrument, e.g. when working in highly secured environments.

For more information, refer also to "MXO 4 Instrument Security Procedures". It is available for download on the Rohde & Schwarz webpage.

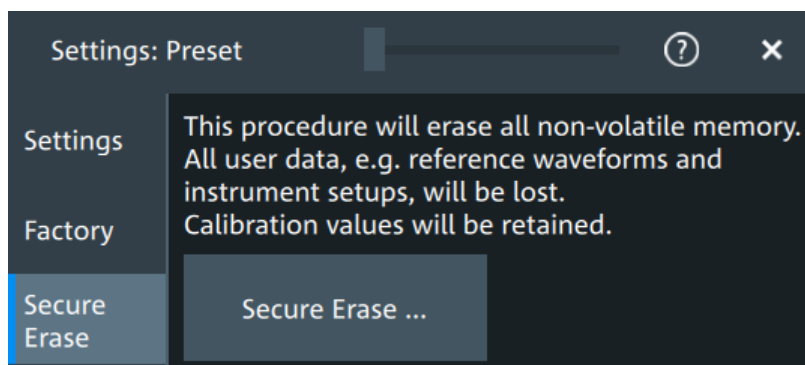

5.6.4 Restoring settings

When you have changed many settings on the instrument, and you are not sure which settings are causing which effect, you can restore the default settings and start anew. The following methods are available:

- Saving instrument settings as a user-defined preset and restoring the instrument settings to user-defined default values
- Restoring all settings on the MXO 4 to the factory-defined values
- Restoring settings from a file

To save a user-defined preset

1. Open the "Menu" > "Settings" > "Preset" tab.
2. Enter a name for the preset file. Select the file format.
3. Tap "Save preset file".

Note: If you want to store the file in another directory than the displayed one, select "Save as". See also: [Chapter 12.5, "File browser dialog"](#), on page 338.

To restore the instrument settings to user-defined default values

1. Open the "Menu" > "Settings" > "Preset" > "Settings" tab.
2. In "Preset file name", enter the name of the file that contains the required settings.
3. To use these settings as preset values, select "Enable user-defined preset".
4. Press the [Preset] key.

To restore all settings to the factory defaults

1. Open the "Menu" > "Settings" > "Preset" > "Factory" tab.
2. Tap the "Factory preset" button.

All settings on the MXO 4 are reset to their factory-defined values.

As long as no user-defined preset file is loaded and "Enable user-defined preset" is disabled, the [Preset] key also resets the instrument settings to factory defaults.

5.7 Maintenance settings

In the "Settings" > "Maintenance" dialog box, you can update the firmware, perform self-alignment.

5.7.1 Firmware update

Access: "Menu" > "Settings" > "Maintenance" > "FW update".

Your instrument is delivered with the latest firmware version. Firmware updates are provided on the internet at:

www.rohde-schwarz.com/firmware/mxo4.

The "Release Notes" describe the improvements and modifications of all firmware versions. They also explain how to update the firmware. They are available along with the firmware on the same web page.

Remote commands:


- `SYSTem:FW:FILEpath` on page 534
- `SYSTem:FW:START` on page 535

5.7.2 Alignment

When data from several input channels is displayed at the same time, it can be necessary to align the data. Alignment is done vertically or horizontally to synchronize the time bases or amplitudes and positions. Perform an alignment, for example, when strong temperature changes occur ($> 5^\circ$).

5.7.2.1 Alignment settings

Access: "Menu" > "Settings" > "Maintenance" > "Alignment"

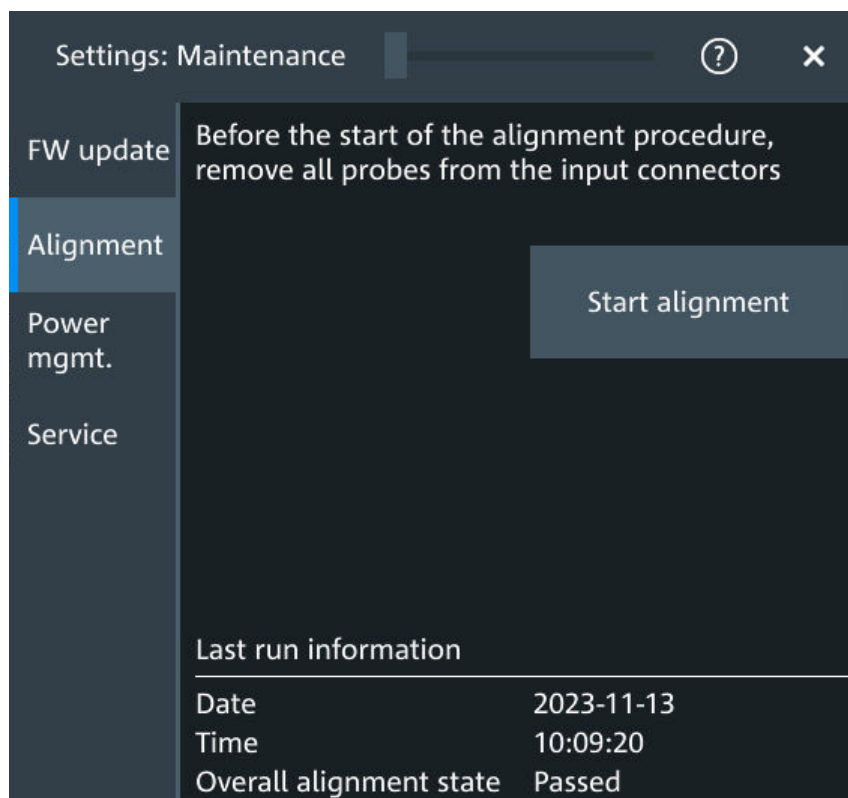**Start alignment**

Starts the self-alignment procedure for all channels.

Date, Time, Overall alignment state

Show the date, time and the summary result of the self-alignment process: not aligned, passed or failed. Detailed results are provided on the "Alignment results" tab.

Remote command:

[CALibration:DATE?](#) on page 564


[CALibration:TIME?](#) on page 564

[CALibration:RESult?](#) on page 564

Show results

Opens a dialog to display the alignment results.

For each channel, the results of the individual alignment steps are shown for all technical channel component. In case you require support, you may be asked to provide this information.

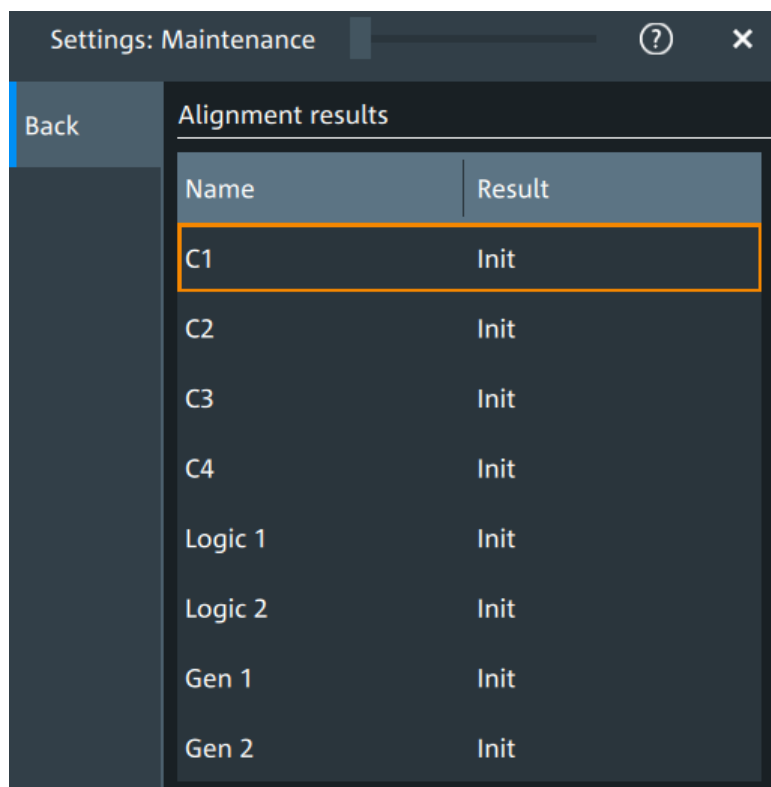

The screenshot shows a mobile application window titled "Settings: Maintenance". On the left is a "Back" button. The main content area is titled "Alignment results" and contains a table with two columns: "Name" and "Result". The table lists several channels, with the first row "C1" highlighted by an orange border. All listed channels show a result of "Init".

Name	Result
C1	Init
C2	Init
C3	Init
C4	Init
Logic 1	Init
Logic 2	Init
Gen 1	Init
Gen 2	Init

5.7.2.2 Performing a self-alignment

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions. The self-alignment process includes a basic hardware check.


Recommendation on performing the self-alignment:

- When putting the instrument into operation for the first time
 - After a firmware update
 - Once a week
 - When major temperature changes occur ($> 5^{\circ}$)
1. Warm up the instrument before you start the self-alignment. The minimum warm-up time is indicated in the specifications document.
 2. Remove the probes from the input connectors.
 3. Open "Menu" > "Settings" > "Maintenance".
 4. In the "Alignment" tab, tap "Start alignment".

The alignment is performed, the process can take several minutes. A message box informs you about the running process, wait until this message box closes. The overall pass/fail result is shown in the "Overall alignment state" field.

5.7.3 Power management

Access: "Menu" > "Settings" > "Maintenance" > "Power mgmt."

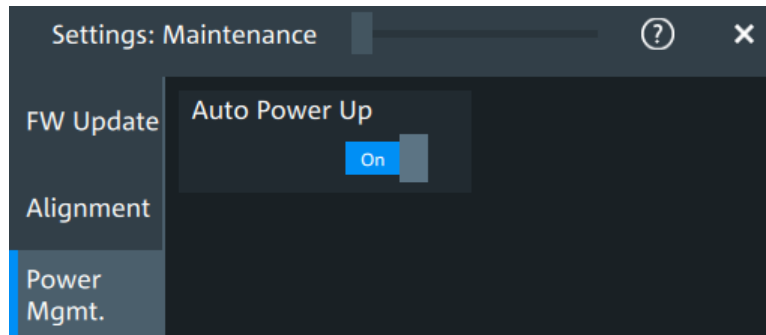

Auto power up


If enabled, the instrument powers up automatically when it is connected to the mains voltage, and after a power outage. If disabled, the instrument also powers up after a power outage if it was running when the power outage occurred.

Remote command:

[SYSTem:APUP](#) on page 565

5.7.4 Service

Access: "Menu" > "Settings" > "Maintenance" > "Service"

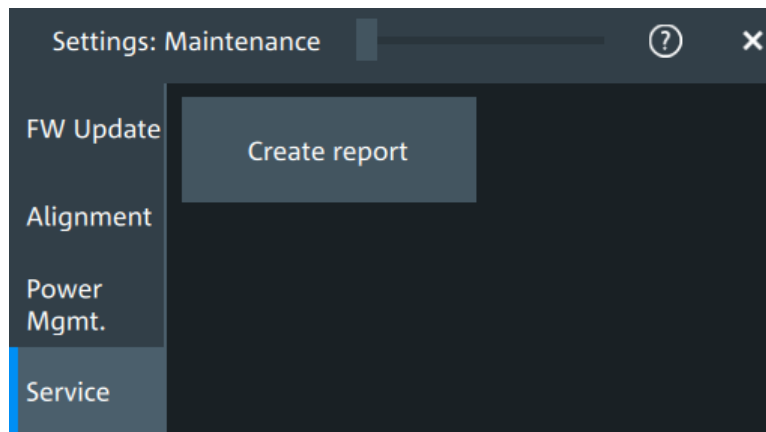

Create report

Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.

See also: [Chapter 18.4, "Information for technical support"](#), on page 994.


Remote command:
[SERvice:REPort](#) on page 564

5.8 Save / recall

5.8.1 Autonaming

Access:"Menu" > "Settings" key > "Save/Recall" > "Autonaming" tab.

5.8.1.1 Autonaming settings

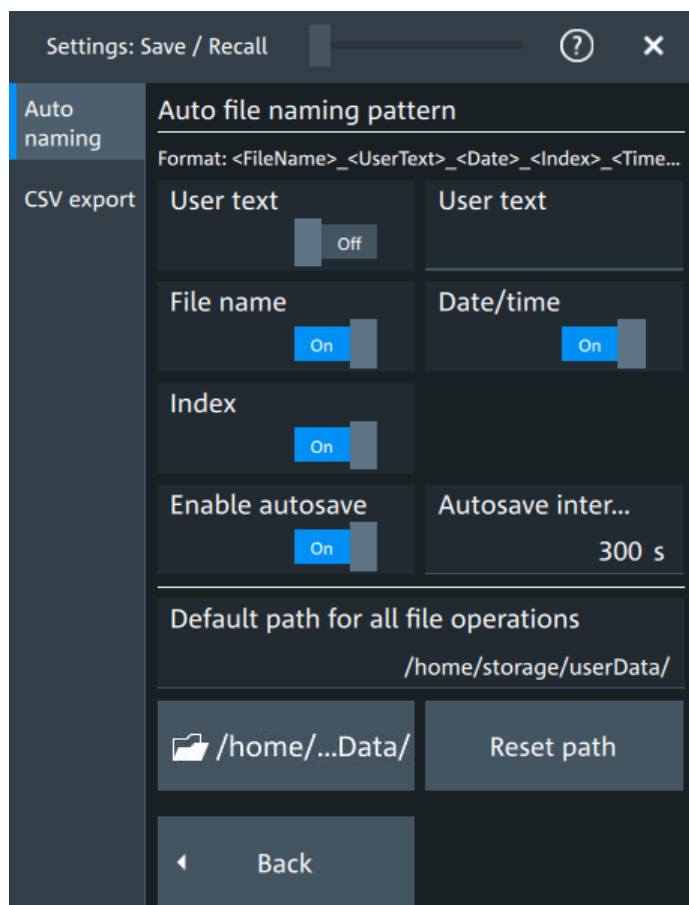

In the "Autonaming" tab, you can define the pattern for automatic file name generation. This name is used as the default file name. The default path is the storage location for all saved files and their subdirectories. The directory for user data on the instrument is `/home/storage/userData`, the path to a USB storage device is `/run/media/usb/`.

User text

If enabled, inserts the specified user text after the prefix.

Remote command:

[MMEMory:AUTonaming:USERtext](#) on page 561

[MMEMory:AUTonaming:TEXT](#) on page 562

File name

If enabled, inserts the default file name. The file name indicates the type of data that is saved, for example, RefCurve, Settings.

Remote command:

[MMEMory:AUTonaming:PREFix](#) on page 560

Date/time

If enabled, the current date and time are inserted in the filename pattern.

Remote command:

[MMEMory:AUTonaming:TIME](#) on page 560

Index

If enabled, inserts an index.

Remote command:

[MMEMory:AUTonaming:INDEX](#) on page 560

Enable autosave

Enables the automatic saving of the waveform. With "Autosave interval", you can define the time interval for the automatic saving.

Remote command:

[MMEMory:AUSave:ENABLE](#) on page 561

[MMEMory:AUSave:INTERval](#) on page 561

Default path for all file operations

Defines the path that is displayed in the file selection dialog box for loading and storing operations. On the instrument, all user data is written to `/home/storage/userData`. You can create subfolders in this folder. The path to a USB storage device is `/run/media/usb/`.

To switch the directory quickly, double-tap the path button. Use the symbols on the left of the file explorer box to change the directory.

Remote command:

[MMEMory:AUTonaming:DEFAULTpath](#) on page 562

Reset path

Resets the default file path to the factory default.

Remote command:

[MMEMory:AUTonaming:RESPath](#) on page 562

[MMEMory:AUTonaming:RESAll](#) on page 562

5.8.1.2 Defining default file paths and names

When a save or load operation is performed, a default file name and path is provided. You can configure which path is used and how the file name is generated. In the file selection dialog box, you can change the folder and name as desired.

To define the default file path

1. Tap "Menu" > "Settings".
2. Select the "Save/Recall" tab.
3. Select the "Autonaming" tab.
4. Double-tap the path button.
The directory selection dialog box is opened.
5. Select the folder in which the data is stored by default. Use the symbols on the left of the file explorer box to switch to often used directories.
Alternatively, you can tap the "Default path for all file operations" field and type the path.
6. To restore the factory-set default path, tap "Reset" next to the path field.

To define the automatic file name pattern

The automatic file name pattern can consist of the following elements:

<FileName>_<UserText>_<Date>_<Index>_<Time>

The prefix depends on the data type to be stored and cannot be changed by the user. The other elements can be enabled or disabled as required.


1. Tap "Menu" > "Settings".
2. Select the "Save/Recall" tab.
3. Select the "Autonaming" tab.
4. If you want to exclude the "File name", "Date/time" or an "Index" (serial number), disable the corresponding option.
5. To insert a user-defined text after the prefix, enable "User text". Enter the text in the edit field.

The specified elements are used to generate the default file name for the next storage operation.

5.8.2 CSV export

Access:"Menu" > "Settings" key > "Save/Recall" > "CSV export" tab.

In this dialog, you can define the format of your CSV file.

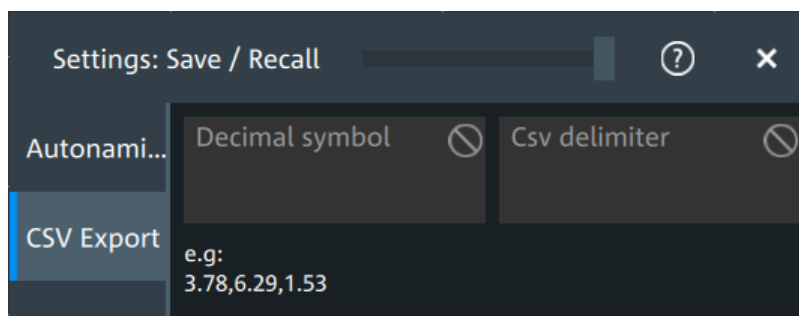**Decimal symbol**

Selects if point or comma is used as a decimal symbol in the exported CSV file.

CSV delimiter

Selects the list separator symbol from a list. Available are semicolon, comma, space, tab and colon.

Remote command:

[EXPort:RESult:DELimiter](#) on page 562

6 Acquisition and waveform setup

6.1 Horizontal setup


The "Horizontal" dialog provides the time base configuration for channel and spectrum waveforms.

6.1.1 About the horizontal system

Horizontal settings, also known as timebase settings, adjust the waveforms in horizontal direction.

Typically, the trigger is the determining point of the waveform record. In many scenarios, you want to analyze the waveform some time before or after the trigger. To adjust the horizontal acquisition window to the waveform section of interest, you can use the following parameters:

- The **horizontal position** defines the time distance of the trigger point (the zero point of the diagram) to the reference point. Changing the horizontal position, you can move the trigger point, even outside the screen.
- The **reference point** is the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

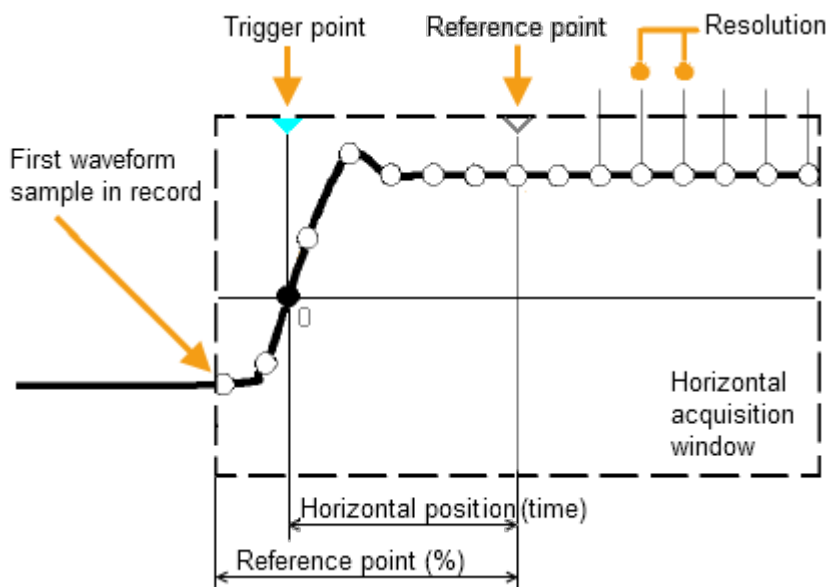

Unlike vertical settings, which are waveform-specific, the horizontal settings apply to all active waveforms.


Timebase settings are interdependent:

$$\text{Timebase range} = \text{Time scale} * \text{Number of divisions}$$

The number of divisions is 10, which is the only constant parameter.

6.1.2 Horizontal Setup settings

Access: "Menu" > "Horizontal" > "Setup" tab, or tap the "Horizontal" label above the diagram.

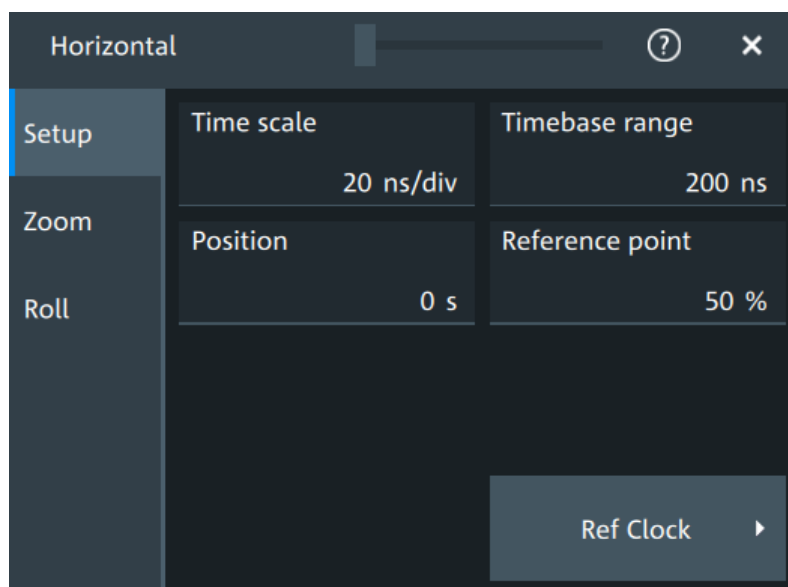

Time scale

Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Increase the scale to see a longer time interval of the waveform. Decrease the scale to see it in more detail. The scale has a point that remains fixed on the screen when the scale value is changing: the reference point.

Remote command:

[TIMEbase:SCALE](#) on page 566

Timebase range

Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions*.

Changing the acquisition time changes the time scale, too.

For long timebases, the acquisition progress is shown in the acquisition label, see "[Progress information](#)" on page 73.

Remote command:

[TIMEbase:RANGe](#) on page 566

Position

Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

If you want to see a section of the waveform some time before or after the trigger, enter this time as horizontal position. The requested waveform section is shown around the reference point. Use positive values to see waveform sections after the trigger - the waveform and the diagram origin move to the left.

Remote command:

[TIMEbase:HORizontal:POSition](#) on page 567

Reference point

Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

The reference point marks the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point. If the "Position" is 0, the trigger point is on the reference point.

The reference point is not marked in the diagram.

Remote command:


[TIMEbase:REFerence](#) on page 567

6.1.3 Zoom settings

The zoom settings are described in [Chapter 8.1, "Zoom"](#), on page 198.

6.1.4 Roll mode

Access: "Menu" > "Horizontal" > "Roll" tab.

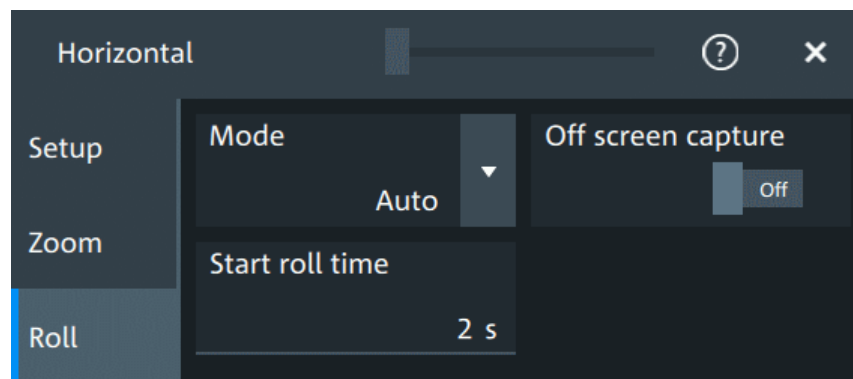

In this dialog, you can define the behavior of the roll mode.

Roll mode and acquisition setup

 
The settings "SR mode" and "RL mode" can affect the display of the waveform display in roll mode if these settings are set to "Manual". The resulting acquisition time is centered around the screen center.

If the acquisition time (*record length / sample rate*) is longer than the timebase range, the roll mode starts invisibly, outside the right screen edge. The data appears with some delay.

If the acquisition time is shorter than the timebase range, there is a gap from the right screen edge to the beginning of the data. If "SR mode" and "RL mode" are set to "Auto", the instrument optimizes the acquisition settings.

Progress bar

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled. The bar turns green when all samples are acquired, and the record is filled.



Left = incomplete roll waveform

Middle = roll completed with "Off screen capture" = Off

Right = roll completed with "Off screen capture" = On

Mode

Selects, if the roll mode is set automatically by the instrument or if it is turned off.

In roll mode, the instrument shows the waveforms immediately, without waiting for the complete acquisition of the waveform record. If the timebase is slow - at long time scale values - the roll mode saves waiting for the waveform display. The instrument displays the newly acquired waveform points at the right edge of the display and moves the waveform to the left.

The roll mode has the following restrictions:

- Roll mode disables persistence
- Event actions are not possible

The instrument activates the roll mode automatically if the following conditions are fulfilled:

- "Timebase range" exceeds the defined "Start roll time"
- The "Acquisition mode" is set to "Sample" or "Peak detect"
- "N-single/Avg count" = 1
- Fast segmentation is disabled
- Event actions are disabled
- All serial buses are disabled

Measurement statistics evaluate the currently displayed waveform. Therefore, "Measure all events" is enabled automatically in roll mode.

See also: ["Roll mode and acquisition setup"](#) on page 109.

Remote command:

`TIMEbase:ROLL:ENABLE` on page 568

`TIMEbase:ROLL:STATE?` on page 569

Start roll time

Sets the minimum acquisition time for automatic start of the roll mode.

The instrument activates the roll mode automatically if the "Timebase range" exceeds the value of the "Start roll time".

Remote command:

[TIMEbase:ROLL:MTIME](#) on page 568

Off screen capture

If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the invisible area on the left.

If "Off screen capture" = Off, the analyzable record length is the value that is set in the "Acquisition" > "Setup" tab. The record length determines the length of the displayed waveform.

If "Off screen capture" = On, the whole acquisition memory can be used. After the defined record length is filled, more data is recorded at the left of the completed record length until you stop the acquisition or the acquisition memory is filled. The current number of recorded data points is shown in the progress bar when the bar is green, or returned by the remote command [ACquire:ROLLmode:POINTs?](#). See also: "[Roll mode and acquisition setup](#)" on page 109.

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled, see "[Progress bar](#)" on page 110.

After stopping the acquisition, you can analyze the complete roll waveform, including the invisible part:

- Increase the "Time scale" to see a longer part of the waveform.
- Scroll the waveform: tap and drag the waveform to the right.

If you want to save the waveform, disable "Off screen capture". When the needed data is displayed, save the waveform. Thus, one record length is saved. With active "Off screen capture", the amount of data cannot be limited.

Remote command:

[ACquire:ROLLmode:OSCapture](#) on page 568

[ACquire:ROLLmode:POINTs?](#) on page 569

6.1.5 Reference clock

Access: "Menu" > "Horizontal" > "Setup" tab > "Ref Clock"

The oven-controlled crystal oscillator (OCXO) produces a 10 MHz internal reference signal with precise and stable frequency. You can output this clock signal for synchronization of other instruments. Conversely, you can also use an external 10 MHz reference signal. The input and output connectors for reference signals are on the rear panel of the instrument.

Use external ref. clock

Enables the use of an external 10 MHz reference signal instead of the internal reference clock.

Remote command:

[SENSe\[:ROSCillator\]:SOURce](#) on page 604

Output 10 MHz ref. signal

Sends the internal reference clock signal to the Ref. Out connector.

If "Use external ref. clock" is enabled, the external reference signal is output instead of the internal clock.

Remote command:

[SENSe\[:ROSCillator\]:OUTPut\[:ENABLE\]](#) on page 604

6.2 Acquisition


Access: "Menu" > "Acquisition".

Acquisition settings define the processing of the captured samples in the instrument.

6.2.1 About the acquisition system

Sampling and processing

The A/D converter samples the continuous signal under test at specific points in time and captures digital values. The converter is working at a constant rate specified in GHz.

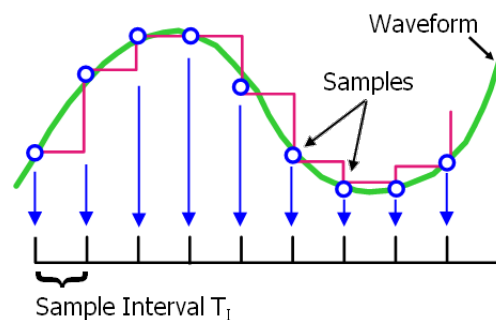

The captured values are processed according to the acquisition settings. The result is a waveform record that contains **waveform samples** and is stored in the **waveform memory**. The waveform samples are displayed on the screen and build up the waveform.

The number of waveform samples in one waveform record is called **record length**. The rate of recording waveform samples - the number of waveform samples per second - is the **sample rate**. The higher the sample rate, the better the resolution is and the more details of the waveform are visible.

$$\text{Sample rate} = 1 / \text{Resolution}$$

The sample rate can be the same as the constant rate of the A/D converter, or higher, or lower. To get a higher sample rate, interpolation is used. Several interpolation methods are available. Other processing methods reduce the sample rate, or build the resulting waveform from several consecutive acquisitions of the signal. These methods are called acquisition modes.

Minimum sample rate and aliasing

A sufficient resolution is essential for correct reconstruction of the waveform. If the signal is undersampled, aliasing occurs - a false waveform is displayed. To avoid aliasing and accurately reconstruct a signal, the sample rate must be at least 3 to 5 times the fastest frequency component of the signal. A higher sample rate increases signal fidelity, increases the chance to capture glitches and other signal anomalies, and improves the zoom-in capabilities.

Interleaving

The MXO 4 achieves its highest sample rate of 5 Gsample/s by interleaving two channels: channels 1 and 2 are interleaved, and also channel 3 and 4. Interleaving assumes that only one of the paired channels is used - either channel 1 or channel 2, and either channel 3 or 4. If the second channel of a pair is used (on display, or as trigger source, math source, or measurement source), the interleaving mode is disabled. Without interleaving, the channels work with 2.5 Gsample/s and reduced bandwidth.

6.2.2 Acquisition Setup settings

Access: "Menu" > "Acquisition" > "Setup" tab.

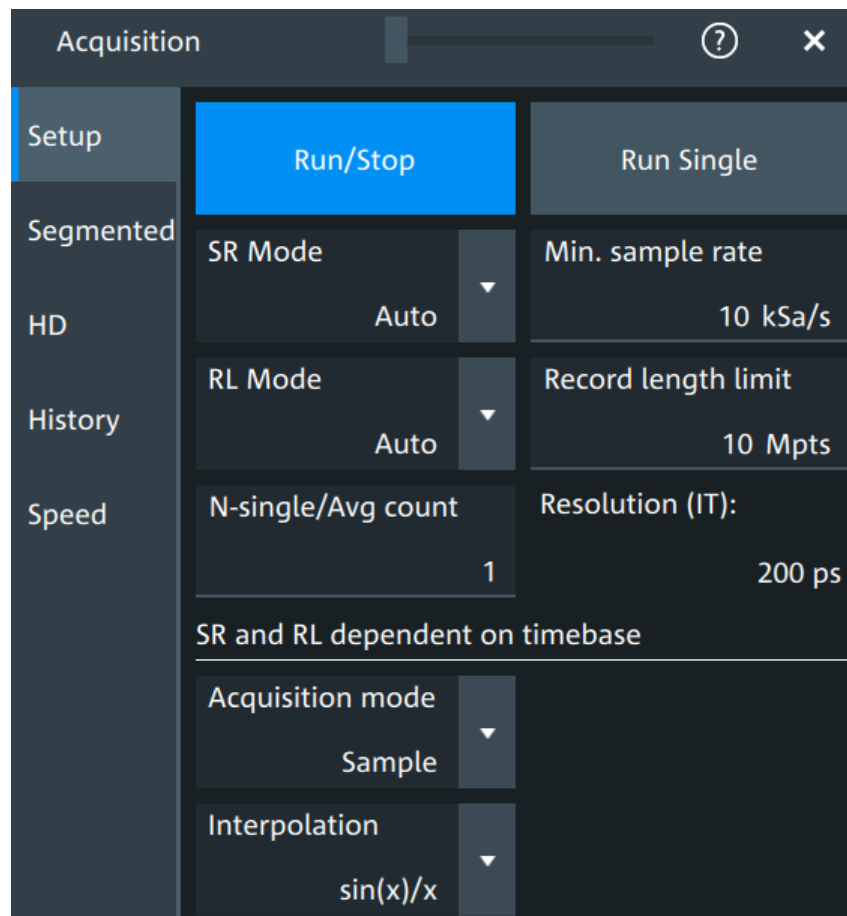


Figure 6-1: Acquisition settings: automatic sample rate and record length

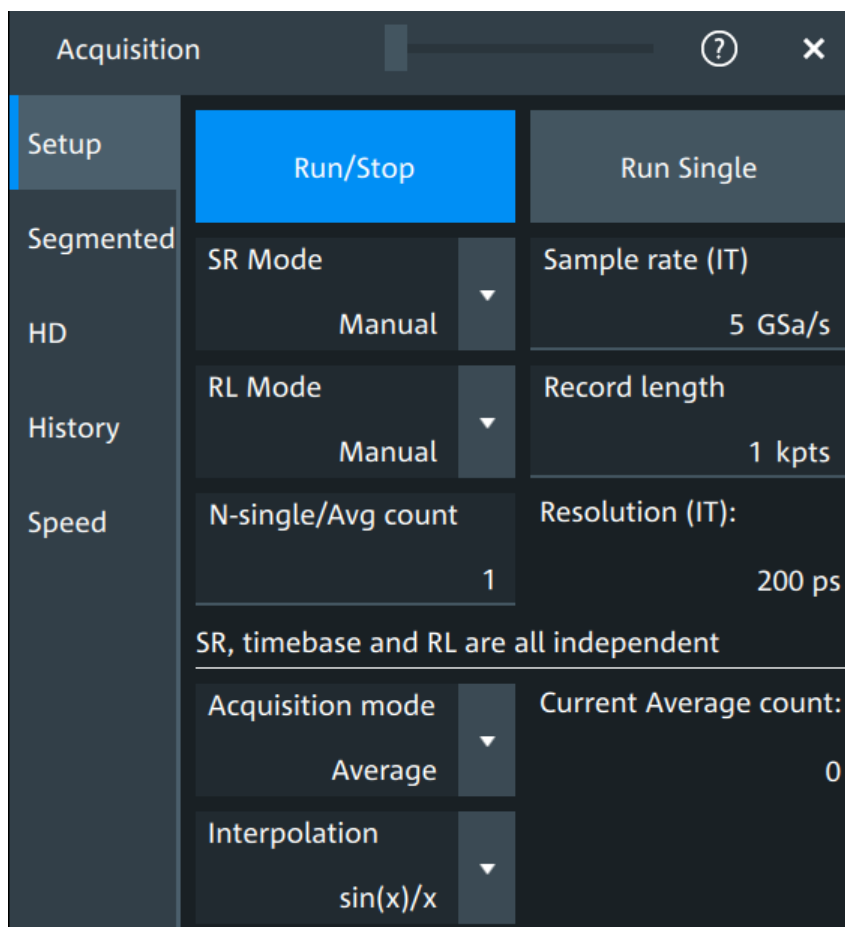


Figure 6-2: Acquisition settings: manual sample rate and record length

Run/Stop

Starts and stops the continuous acquisition. The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Remote command:

[RUN](#) on page 565

[STOP](#) on page 566

Run Single

Starts a defined number of acquisitions. The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

To set the number of acquisitions, set "N-single/Avg count" in the "Acquisition" setup. The acquisition progress is shown in the acquisition label, see "[Progress information](#)" on page 73.

Remote command:

[SINGLE](#) on page 565

SR mode

Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

"Auto" Sample rate is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a minimum sample rate with [Min. sample rate](#).

"Manual" The sample rate is manually defined with [Sample rate](#).

Remote command:

[ACQUIRE:SRATE:MODE](#) on page 580

Min. sample rate

Sets the minimum value of the sample rate for calculation in automatic sample rate mode.

Remote command:

[ACQUIRE:SRATE:MINIMUM](#) on page 579

Sample rate

Sets the number of waveform points per second in manual sample rate mode.

Remote command:

[ACQUIRE:SRATE\[:VALUE\]](#) on page 579

RL mode

Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

"Auto" Record length is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a maximum record length with [Record length limit](#).

"Manual" The waveform record length is manually defined with [Record length](#).

Remote command:

[ACQUIRE:POINTS:MODE](#) on page 578

Record length limit

Sets the maximum value of the record length for calculation in automatic record length mode.

Remote command:

[ACQUIRE:POINTS:MAXIMUM](#) on page 578

Record length

Sets the record length in manual record length mode.

Remote command:

[ACQUIRE:POINTS\[:VALUE\]](#) on page 578

N-single/Avg count

The acquisition and average count has several effects:

- It sets the number of waveforms acquired with [Single].

- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.
- It sets the number of acquisitions to be acquired in a fast segmentation acquisition series, and in the history.

The setting is read-only if "Segmented" > "Acquire maximum" is "On". See also ["Acquire maximum"](#) on page 119.

Remote command:

[ACquire:COUNT](#) on page 577

Resolution

Defines the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record.

The resolution is the reciprocal of the sample rate.

Remote command:

[ACquire:RESolution](#) on page 579

Acquisition mode

Sets how the waveform is built from the captured samples.

- | | |
|---------------|--|
| "Sample" | Usually, most signals are displayed optimally with this acquisition mode but very short glitches can remain undiscovered by this method. |
| "Peak detect" | The minimum and the maximum of n samples are recorded as waveform points, the other samples are discarded. Thus the instrument can detect fast signal peaks at slow time scale settings that would be missed with other acquisition modes. |
| "Envelope" | Each acquisition is done in peak detection mode, and the minimum and maximum values in a sample interval over some consecutive acquisitions build the envelope. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof). |
| "Average" | <p>The average is calculated from the data of the current acquisition and a specific number of consecutive acquisitions before. The method reduces random noise. It requires a stable, triggered and repetitive signal.</p> <p>The number of acquisitions for average calculation is defined with N-single/Avg count.</p> <p>If the waveform is clipped, the instrument shows a distorted average waveform to indicate the clipping. Adjust the vertical scale to avoid the clipping. The acquisition progress is shown in the acquisition label, see "Progress information" on page 73.</p> |

Remote command:

[ACquire:TYPE](#) on page 580

Current Average count

Shows the current number of acquired waveforms that contribute to the average, for [Acquisition mode](#) = "Average".

Remote command:

[ACQUIRE:AVERage?](#) on page 576

Interpolation

Selects the interpolation method.

If the defined sample rate ("Sample rate") is higher than the ADC sample rate, interpolation adds points between the captured samples of the waveform by various mathematical methods. The selected interpolation method is also used for zooming.

- | | |
|---------------|--|
| "Linear" | Two adjacent ADC sample points are connected by a straight line, the interpolated points are located on the line. You see a polygonal waveform similar to the real signal, and also the ADC sample points as vertexes. |
| "sin (x)/x" | Two adjacent ADC sample points are connected by a $\sin(x)/x$ curve, and also the adjoining sample points are considered by this curve. The interpolated points are located on the resulting curve. This interpolation method is precise and shows the best signal curve. |
| "Sample/Hold" | The ADC sample points are displayed like a histogram. For each sample interval, the voltage is taken from the sample point and considered as constant, and the intervals are connected with vertical lines. Thus, you see the discrete values of the ADC - the measured samples. |


Remote command:

[ACQUIRE:INTerpolate](#) on page 577

6.2.3 Segmentation settings

Access: "Menu" > "Acquisition" > "Segmented" tab.

You can acquire a limited number of segments, or the maximum number.

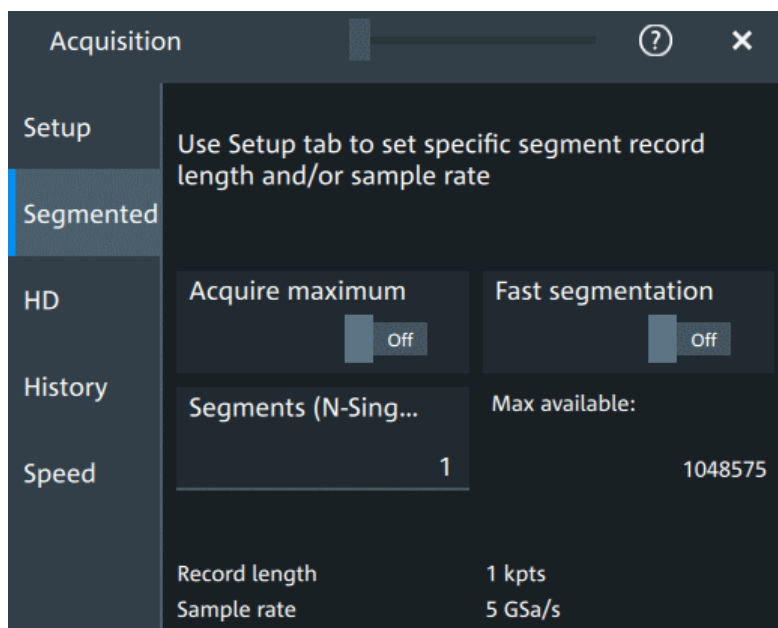

Acquire maximum

The setting takes effect for N-single acquisitions ([Single]). During continuous acquisition ([Run / Stop]), the history is used completely.

If "On", "Segments (N-Single)" is set to the maximum number of available segments, which is shown in "Max available". Thus, the history is filled completely with an N-single acquisition. "Segments (N-Single)" is read-only, you cannot change the value.

If "Off", set the number of segments in "Segments (N-Single)", which is the same setting as "N-single/Avg count" on the "Setup" tab. Thus you can acquire a fast segmentation acquisition series and history of defined length with [Single].

You can stop the running acquisition before the series is completed.

The number of acquired waveforms is shown in the "History" dialog, when the history is active.

Remote command:

[ACQUIRE:SEGMENTED:MAX](#) on page 581

Fast segmentation

If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Remote command:

[ACQUIRE:SEGMENTED:STATE](#) on page 581

Segments (N-Single)

See "N-single/Avg count" on page 116.

Max available

Shows the maximum number of segments that can be captured with current sample rate and record length settings.

6.2.4 High definition mode


The high definition mode increases the numeric resolution of the waveform signal by using digital filtering, leading to reduced noise. The higher vertical resolution reduces quantization noise and acquires waveforms of higher accuracy with finer details of the signal to be seen. The high definition is also applied to the digital trigger, thus the MXO 4 can trigger with the same high resolution with which they can display signals.

The maximum numeric resolution in high definition mode is 18 bit. The actual value depends on the selected bandwidth. Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to the MXO 4 specifications.

The number of vertical resolution bits defines the number of vertical levels that the acquisition samples are mapped to (quantization). For example, 16 bits of resolution represent 65536 voltage quantization levels, while 8 bits of resolution represent only 256 voltage levels. The waveform values are recorded with a word length of 16 bit, except for peak detect decimation.

6.2.4.1 High definition settings

Access: [HD]

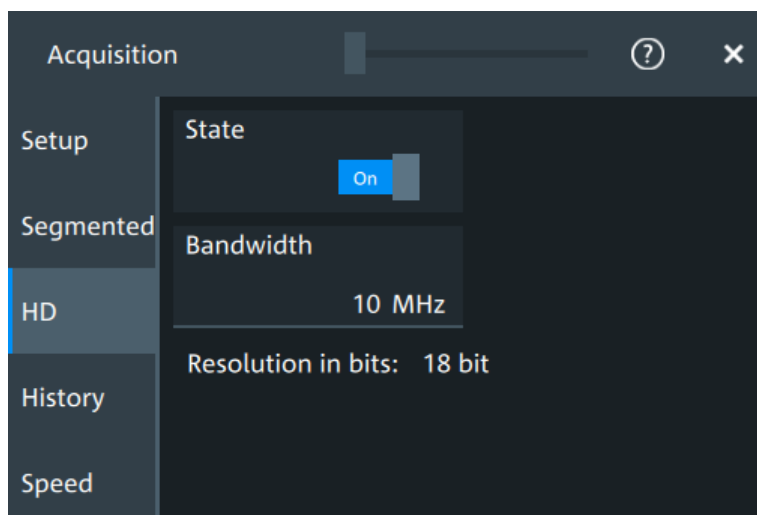

High definition is a special acquisition mode of the oscilloscope. This mode has only one setting - the filter bandwidth.

State

Enables high definition mode, which increases the numeric resolution of the waveform signal.

Remote command:

`HDEFinition:STATE` on page 603

Bandwidth

Sets the filter bandwidth for the high definition mode.

Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to MXO 4 specifications.

Remote command:

`HDEFinition:BWIDth` on page 603

Resolution in bits

Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Remote command:


`HDEFinition:RESolution?` on page 603

6.2.5 History settings

The history settings are described in [Chapter 8.3.2, "History setup"](#), on page 214.

6.2.6 Speed

Access: "Menu" > "Acquisition" > "Speed" tab.

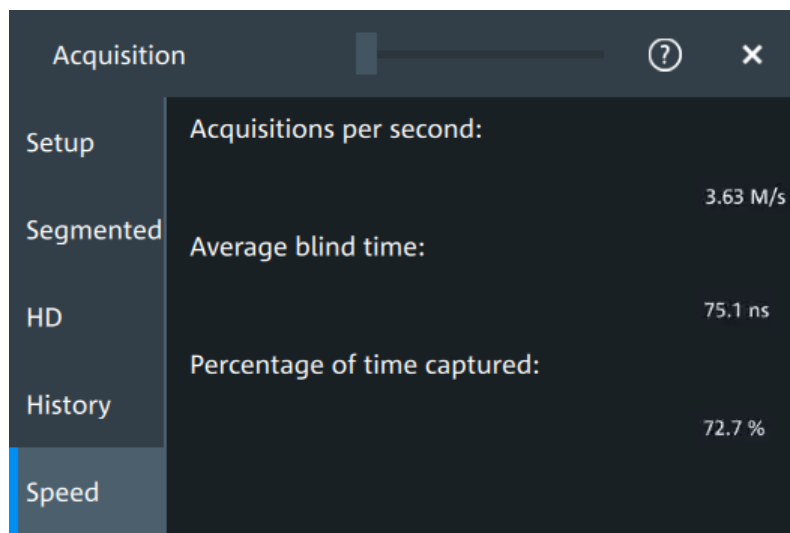

The "Speed" dialog shows information on the current acquisition performance values of the MXO 4.

You can see the number of "Acquisitions per second", "Average blind time" and the "Percentage of time captured".

6.3 Vertical setup

The controls and parameters of the vertical system adjust the vertical scale and position of the waveform, and the waveform display. The probe settings also belong to the vertical setup.

The signal icons at the bottom of the display show the most important actual settings for each channel. The signal icon also indicates if the incoming data is clipped before processing, i.e. the input range of the ADC is exceeded.

There are several ways to adjust vertical settings:

- Use the keys and knobs in the Vertical functional block of the front panel to select the channel, to scale the waveform, and to set the position or offset. See [Chapter 3.2.4.4, "Vertical controls"](#), on page 43.
- Drag one finger vertically on the screen to change the position of the selected channel waveform.
- Spread or pinch two fingers in vertical direction to change the vertical scale of the selected waveform.
- Use the "Vertical" dialog to adjust all vertical settings. See:
 - [Chapter 6.3.2, "Vertical Setup settings"](#), on page 123
 - [Chapter 6.3.3, "Bandwidth settings"](#), on page 126
 - [Chapter 6.4, "Probes"](#), on page 128
 - [Chapter 6.3.5, "Other vertical settings"](#), on page 127

6.3.1 About the vertical system

The controls and parameters of the vertical system are used to scale and position the waveform vertically.

Vertical scale and resolution

Vertical scale and vertical position directly affect the resolution of the waveform amplitude. The vertical scale corresponds to the ADC input range. To get the full resolution of the ADC, set up the waveforms to cover most of the height of the diagram.

With an MXO 4, you work with multiple diagrams, and each diagram obtains the full vertical resolution, no matter where the diagram is placed. Therefore, use a separate diagram for each waveform instead of the traditional setup that arranges the waveforms side by side in one diagram.

Bandwidth

For analog applications, the highest signal frequency determines the required oscilloscope bandwidth. The oscilloscope bandwidth should be higher than the maximum frequency included in the analog test signal to measure the amplitude with very little measurement error. To avoid aliasing, the oscilloscope bandwidth should be at least 3 times higher than the maximum frequency included in the signal.


Most test signals are more complex than a simple sine wave and include several spectral components. A digital signal, for example, is built up of several odd harmonics. For digital signals, the oscilloscope bandwidth should be at least 5 times higher than the clock frequency to be measured.

The oscilloscope is not a stand-alone system. You need a probe to measure the signal of interest, and the probe has a limited bandwidth, too. The combination of oscilloscope and probe creates a system bandwidth. To reduce the effect of the probe on the system bandwidth, the probe bandwidth should exceed the bandwidth of the oscilloscope, the recommended factor is 1.5 x oscilloscope bandwidth.

6.3.2 Vertical Setup settings

Access: "Menu" > "Vertical" > "Setup" tab

The "Setup" tab provides all basic vertical settings. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

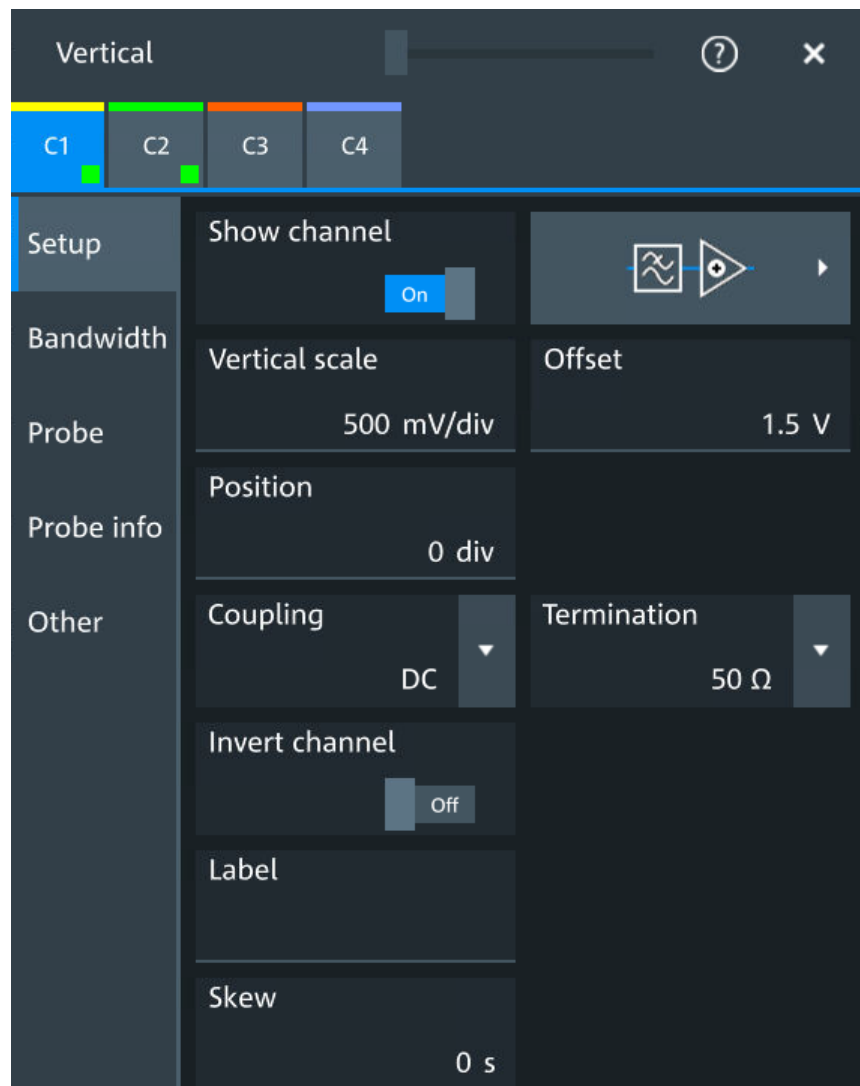

Show channel

Switches the selected channel signal on or off.

The signal icon opens on the signal bar. The waveform of the last acquisition is displayed in the diagram.

Remote command:

[CHANnel<ch>:STATe](#) on page 569

Signal flow (graphical button)

Opens a dialog that shows the signal flow as currently configured. In addition, the main settings are shown for information.

Vertical scale

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit depends on the connected probe.

The current value is shown in the signal icon. Vertical scale directly affects the resolution of the waveform amplitude. To get the best resolution of the ADC, set the waveforms to cover most of the height of the diagram.

Remote command:

[CHANnel<ch>:SCALE](#) on page 570

Offset

Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram.

To set the offset automatically, use [Autoset]. The current value is shown in the signal icon.

Use the offset to measure small AC voltages that are overlaid by higher DC voltages. Unlike AC coupling, the DC part of the signal is not lost with offset setting.

If an active probe is connected, the offset limit is defined by the probe. Refer to the documentation of the probe for allowed values.

If a Rohde & Schwarz differential probe is connected, set the common-mode offset to compensate for a common DC voltage applied to both input sockets (referenced to the ground socket). Thus, you can measure on differential signals with high common mode levels. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:

[CHANnel<ch>:OFFSet](#) on page 570

Position

Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions. The visual effect is the same as for offset.

Remote command:

[CHANnel<ch>:POSition](#) on page 571

Coupling

Sets the filter for the input signal. The coupling determines what part of the signal is used for waveform analysis and triggering.

The selected coupling is shown in the signal icon.

"DC"	Passes both DC and AC components of the signal.
"AC"	Connection through DC capacitor, removes DC and very low-frequency components. AC coupling is useful if the DC component of a signal is of no interest. The waveform is centered on zero volts. If AC coupling is set, the attenuation of passive probes has no effect, and voltage is applied to the instrument with factor 1:1. Observe the voltage limits, otherwise you can damage the instrument.

Remote command:

[CHANnel<ch>:COUPling](#) on page 571

Termination

Selects the input impedance of the channel input according to the connected probe.

Connection with 50 Ω termination is used to connect, for example, active probes. Connection with 1 M Ω termination is used to connect standard passive probes.

Remote command:

[CHANnel<ch>:COUPling](#) on page 571

Invert channel

Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Inversion is indicated in the signal icon by line above the channel name.

Remote command:

[CHANnel<ch>:INVert](#) on page 572

Label

Defines a label text. The label is shown at the waveform on the right edge of the display.

Remote command:

[DISPlay:SIGNal:LABel](#) on page 572

Skew

Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Delay differences between channels are caused by the different length of cables, probes, and other sources. Correct deskew values are important for accurate triggering. Signals that are routed over lines with different lengths have a different propagation delay. This delay can lead to a non-synchronous waveform display.


Remote command:

[CHANnel<ch>:SKEW:TIME](#) on page 572

6.3.3 Bandwidth settings

Access: "Menu" > "Vertical" > "Bandwidth" tab

The "Bandwidth" tab provides all settings that affect the bandwidth of the measurement system. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

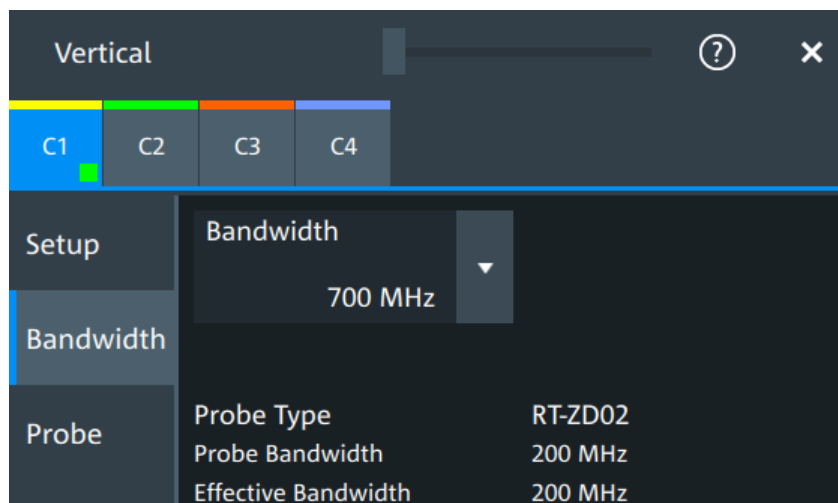

Bandwidth

Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

The selected bandwidth is shown on the signal icon.

For basic information, see also: ["Bandwidth"](#) on page 122.

"Full" At full bandwidth, all frequencies in the instrument's frequency range are acquired and displayed. Full bandwidth is used for most applications. However, at full bandwidth, the displayed bandwidth can be less than the instrument bandwidth depending on the number of active channels and other settings.

"xx MHz" Frequencies above the selected limit are removed to reduce noise.

Remote command:

`CHANnel<ch>:BANDwidth` on page 573

Probe type, Probe bandwidth

Shows the type of the connected probe and its bandwidth. The probe is recognized automatically, or selected in the "Probe" tab. See [Chapter 6.4.1, "Common probe settings"](#), on page 128.

Effective bandwidth


Shows the effective bandwidth of probe and oscilloscope system.

6.3.4 Probe settings

See [Chapter 6.4, "Probes"](#), on page 128.

6.3.5 Other vertical settings

Access: "Menu" > "Vertical" > "Other" tab

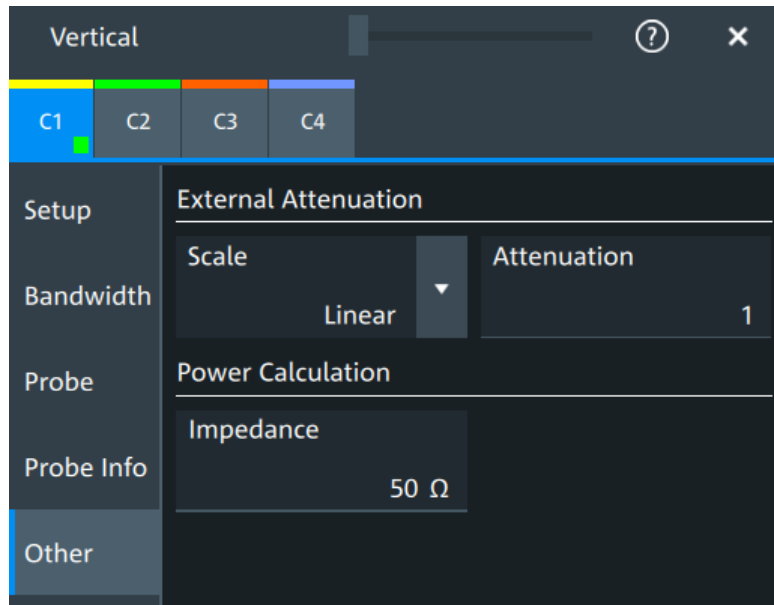

External Attenuation: Scale, Attenuation

Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

"Scale" Select linear or logarithmic attenuation scale.

"Attenuation" Enter the attenuation of the voltage divider according to the selected scale. The conversion from linear to logarithmic values depends on the "Vertical unit" of the probe:

For voltage-based unit (V and A):

$$\text{attenuation (dB)} = 20 * \log_{10}(\text{attenuation factor})$$

For power-based unit (W):

$$\text{attenuation (dB)} = 10 * \log_{10}(\text{attenuation factor})$$

Remote command:

[CHANnel<ch>:EATScale](#) on page 573

[CHANnel<ch>:EATTenuation](#) on page 573

Impedance

Sets the impedance of the connected probe for power calculations and measurements.

The value is used, for example, for scale calculation in the spectrum diagram.

Remote command:

[CHANnel<ch>:IMPedance](#) on page 574

6.4 Probes

With MXO 4 oscilloscopes, you can use various probe types. Mostly these probes are passive and active voltage probes. The instrument can detect many probes and read out the probe-specific parameters, for example, bandwidth and attenuation.


You find all settings that are relevant for the connected probe in the "Vertical" > "Probe" tab. The settings on the "Probe" tab change according to the type of the attached probe. Probes with Rohde & Schwarz probe interface (probe box), and also many other passive voltage probes, are recognized by the instrument. The MXO 4 reads out the main characteristics of the probe and displays them. Other probes cannot be detected, but their characteristics are known to the instrument. These known probes are called "Predefined probes". Probes that are not recognized automatically and not predefined are unknown probes, they require manual setting of measurement unit and attenuation.

The complete characteristic of the connected probe is shown on the "Vertical" > "Probe Info" tab.

6.4.1 Common probe settings

Access: "Menu" > "Vertical" > "Probe" tab

Most the settings in the "Probe" tab are available for all probes. For some probe types, additional settings are needed. These settings are described in the sections for the individual probe types.

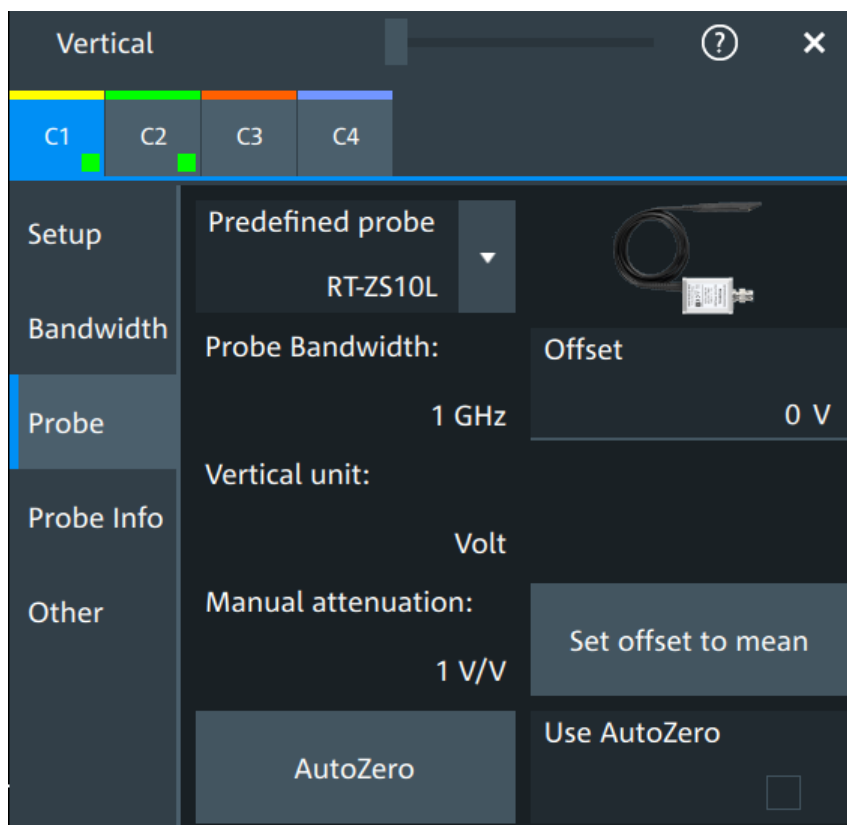

An external attenuation can be set on the "Other" tab, see [Chapter 6.3.5, "Other vertical settings"](#), on page 127.

The common probe settings are:

Predefined probe, name and type of the probe	129
Probe bandwidth	130
Offset	130
Vertical unit	130
Attenuation	130
Set offset to mean	130
AutoZero, Use AutoZero	131

Predefined probe, name and type of the probe

The model name and type of a detected probe are shown in the dialog.

If the instrument cannot recognize the probe, "None" is indicated in the "Predefined probe" list. Select the used probe on the list. The corresponding bandwidth, and attenuation or gain are shown.

If the probe is not detected and not listed as predefined probe, it is an unknown probe. To configure these probes, set "Predefined probe" to "User-Defined". Then adjust the [Vertical unit](#) and [Attenuation](#).

Remote command:

`PROBe<ch>:SETup:NAME?` on page 584

`PROBe<ch>:SETup:TYPE?` on page 585

[PROBe<ch>:SETup:STATe?](#) on page 585

[PROBe<ch>:SETup:ATTenuation:DEFProbe](#) on page 582

Probe bandwidth

Shows the bandwidth of the connected probe. For probes that are not detected or predefined, set the bandwidth manually.

Remote command:

[PROBe<ch>:SETup:BANDwidth?](#) on page 583

Offset

Channel offset that is also set on "Vertical" > "Setup" tab. See "Offset" on page 124.

Vertical unit

Shows the unit of the connected probe if the probe is detected or predefined. For unknown probes, select the unit that the probe can measure.

Remote command:

[PROBe<ch>:SETup:ATTenuation:UNIT](#) on page 583

Attenuation

Shows the attenuation of the connected probe if the probe is detected or predefined. If the probe is unknown to the instrument, set the correct attenuation of the probe in "Manual attenuation".

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.

Remote command:

[PROBe<ch>:SETup:ATTenuation\[:AUTO\]?](#) on page 582

[PROBe<ch>:SETup:ATTenuation:MANual](#) on page 582

Set offset to mean

Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

The result is shown in "Offset". The function is probe-independent and supports quick and convenient measurements of input signals with different DC offsets. It detects offset values even when the signal is out of the current measurement range. It also sets the zero level to the determined DC offset in the middle of the screen and thus prevents clipping of the waveform.

Remote command:

[PROBe<ch>:SETup:OFFSet:TOMean](#) on page 584

AutoZero, Use AutoZero

Differences in DUT and oscilloscope ground levels can cause larger zero errors, which affect the waveform. If the DUT is ground-referenced, the AutoZero function corrects the zero error of the probe to optimize measurement results at small signal levels. The validation limit depends on the probe attenuation because probes with high attenuation often have to compensate high offsets. AutoZero detects offset values even when the signal is out of the current measurement range.

To correct the zero error of voltage probes, short the signal pin and the ground pin together and connect them to the ground of the DUT. Then tap "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To include the measured offset in measurement results, enable "Use AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:

[PROBe<ch>:SETup:OFFSet:AZERo](#) on page 584

[PROBe<ch>:SETup:OFFSet:USEautozero](#) on page 584

6.4.2 Setup for passive probes

Passive probes are the most widely used probes for voltage measurements with oscilloscopes. If a passive probe is connected, the probe attenuation is read out and shown in the "Probe" tab.

Passive probes require compensation, see [Chapter 6.4.9, "Adjusting passive probes"](#), on page 149.

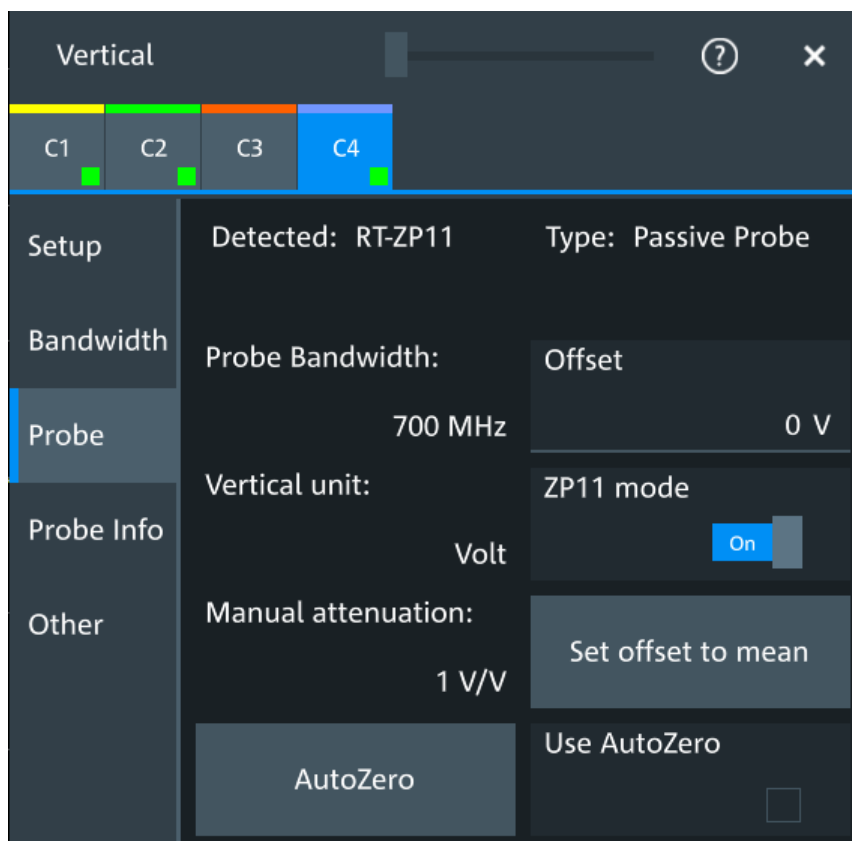


Figure 6-3: Passive probe R&S RT-ZP11, detected by the oscilloscope

The settings for passive probes are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of the settings.

For R&S RT-ZP11, a special setting is available.

ZP11 mode

Enable if R&S RT-ZP11 is connected to adjust the probe bandwidth to 700 MHz.

If you use 500 MHz passive probe, e.g. R&S RT-ZP10, disable the setting.

6.4.3 Setup for active voltage probes

Active voltage probes with Rohde & Schwarz probe interface have an integrated data memory that contains identification data and individual probe correction parameters. The MXO 4 can detect these probes and read out the data. Furthermore, the Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

Active voltage probes that are offered by Rohde & Schwarz but not equipped with a Rohde & Schwarz probe interface are known to the MXO 4 as predefined probes.

6.4.3.1 Settings for the Rohde & Schwarz probe interface

The Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

MicroButton

The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection. Select the action that you want to start from the probe.

"Run continuous"	Starts or stops the acquisition (same as Run / Stop key).
"Run single"	Starts a defined number of acquisitions (same as [Single] key).
"Autoset"	Starts the autoset procedure (same as Autoset key).
"Auto zero"	Starts an auto zero measurement.
"Offset to mean"	Performs an automatic compensation for a DC component of the input signal using the result of a background mean measurement.
"Save image to file"	Saves the current display as image according to the image settings.
"No action"	Select this option to prevent unwanted actions due to unintended usage of the micro button.
"Find trigger level"	Sets the trigger level automatically to $0.5 * (MaxPeak - MinPeak)$.
"Probe mode"	Only available if a R&S RT-ZM modular probe is connected. Sets the measurement mode of the modular probe.
"Probe setup"	Opens the probe setup on the screen.

Remote command:

[PROBe<ch>:SETup:MODE](#) on page 586

ProbeMeter

Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

The R&S ProbeMeter is a voltmeter. It measures DC voltages between the probe tip and ground connection or between the probe tips with very high precision. The measurement runs continuously and in parallel to the measurements of the oscilloscope.

If a single-ended or power rail probe is connected, the ProbeMeter measures DC voltages between the probe tip and ground connection and enables ground-referenced measurements of voltages.

If a differential probe is connected, you can select if the ProbeMeter measures differential and common mode voltages, or single-ended voltages. See ["Display"](#) on page 135.

Remote command:

[PROBe<ch>:PMETer:STATe](#) on page 588

[PROBe<ch>:PMETer:RESults:SINGLE?](#) on page 589

[PROBe<ch>:PMETer:RESults:COMMON?](#) on page 589

[PROBe<ch>:PMETer:RESults:DIFFerential?](#) on page 589

[PROBe<ch>:PMETer:RESults:NEGative?](#) on page 590

[PROBe<ch>:PMETer:RESults:POSitive?](#) on page 590

6.4.3.2 Setup for R&S RT-ZD differential probes

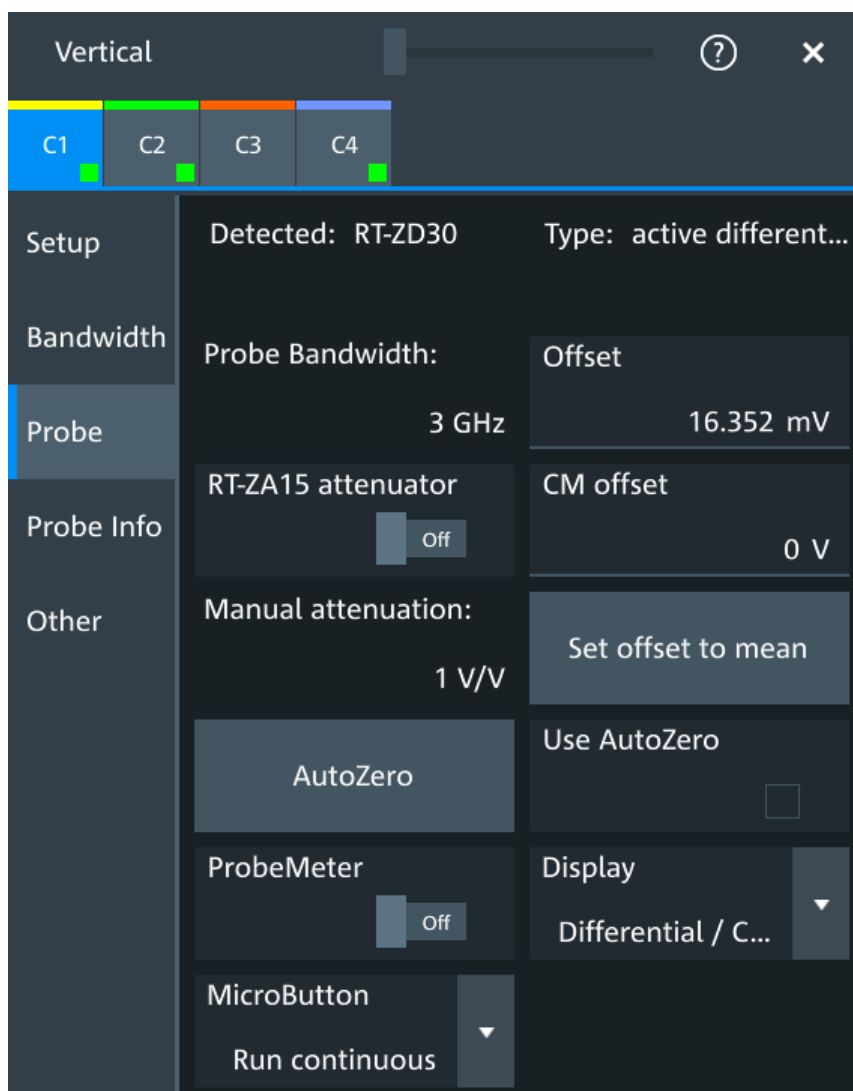


Figure 6-4: Probe setup for active differential probe R&S RT-ZD30

Most settings are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of these settings.

R&S RT-ZD differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see [Chapter 6.4.3.1, "Settings for the Rohde & Schwarz probe interface"](#), on page 133.

The "Offset" is the differential offset, see ["Offset"](#) on page 124.

Specific settings for R&S RT-ZD probes are the following:

CM offset

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Offset compensation is particularly helpful for measurements on differential signals with high common mode levels, for example, current measurements using a shunt resistor. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:

`PROBe<ch>:SETup:CMOffset` on page 587

RT-ZA15 attenuator

If you use the external attenuator R&S RT-ZA15 together with one of the differential active probes R&S RT-ZD10/20/30, enable "RT-ZA15 attenuator" to include the external attenuation in the measurements.

Remote command:

`PROBe<ch>:SETup:ZAXV` on page 588

Display

Selects the voltage to be measured by the ProbeMeter of differential active probes:

- "Differential / Common Mode":
Differential voltage is the voltage between the positive and negative signal sockets. Common mode voltage is the mean voltage between the signal sockets and the ground socket. It measures the voltage level relative to ground, for example, to check the operating voltage window.
- "Single Ended Pos/Neg":
Measures the voltage between the positive/negative signal socket and the ground. The ProbeMeter always measures the common mode and differential voltages. Single-ended voltages are calculated values:
$$V_p = V_{cm} + 0.5 * V_{in} \text{ and } V_n = V_{cm} - 0.5 * V_{in}$$

Remote command:

`PROBe<ch>:SETup:DISPlaydiff` on page 587

6.4.3.3 Setup for R&S RT-ZPR power rail probes

R&S RT-ZPR power rail probes are designed for power integrity measurements. They can measure small signals in the millivolt range with large DC-offset components.

R&S RT-ZPR power rail probes have the Rohde & Schwarz probe interface and support the ProbeMeter, but not the micro button. For details, see [Chapter 6.4.3.1, "Settings for the Rohde & Schwarz probe interface"](#), on page 133.

R&S RT-ZPR probes require 50 Ω input termination.

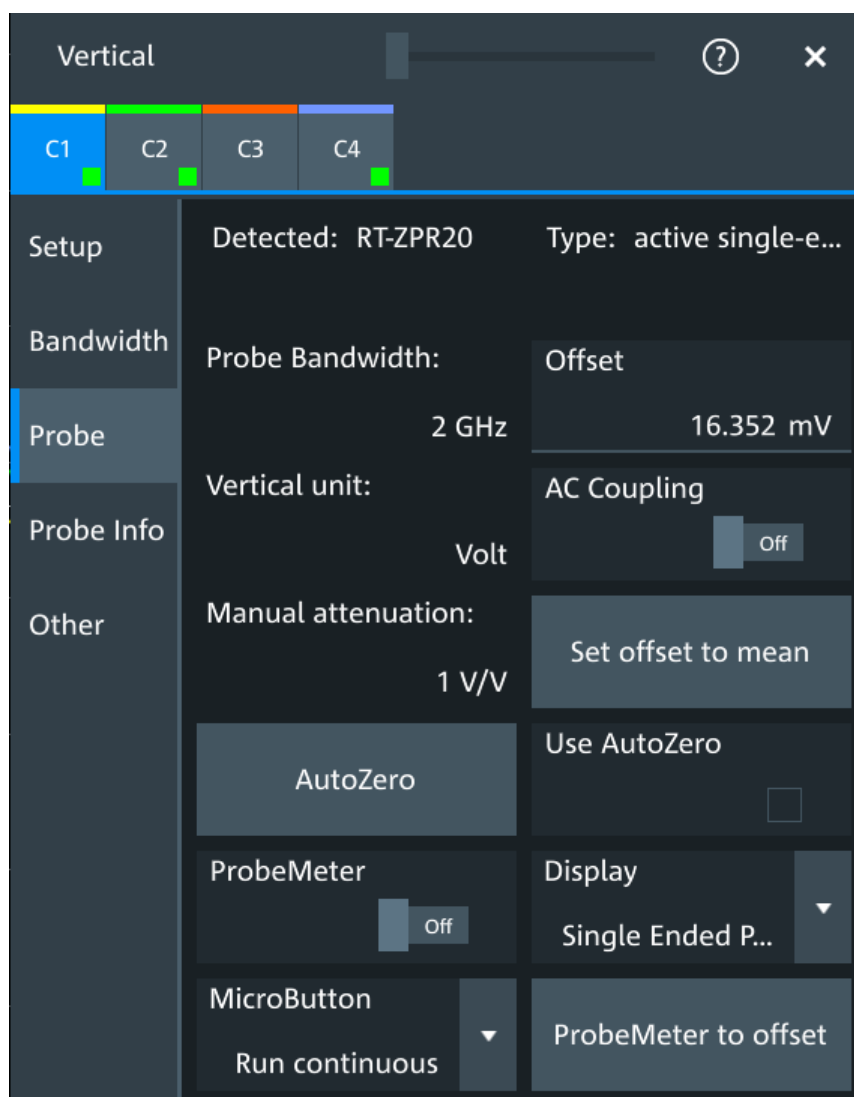


Figure 6-5: Probe setup for power rail probe R&S RT-ZPR20

Most settings are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of these settings.

The "Offset" is the channel offset, see ["Offset"](#) on page 124.

Specific settings for R&S RT-ZPR probe are the following:

AC Coupling

Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Remote command:

`PROBe<ch>:SETup:ACCoupling` on page 587

ProbeMeter to offset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Remote command:

`PROBe<ch>:SETup:OFFSet:TOPMeter` on page 597

6.4.3.4 Setup for R&S RT-ZHD high-voltage differential probes

R&S RT-ZHD high-voltage differential probes are designed to measure safely high-voltage floating circuits using a grounded oscilloscope. They extend the measurement capability of oscilloscopes to measure electronic power converters, inverters, motor speed controls, switch mode power supplies and many other applications.

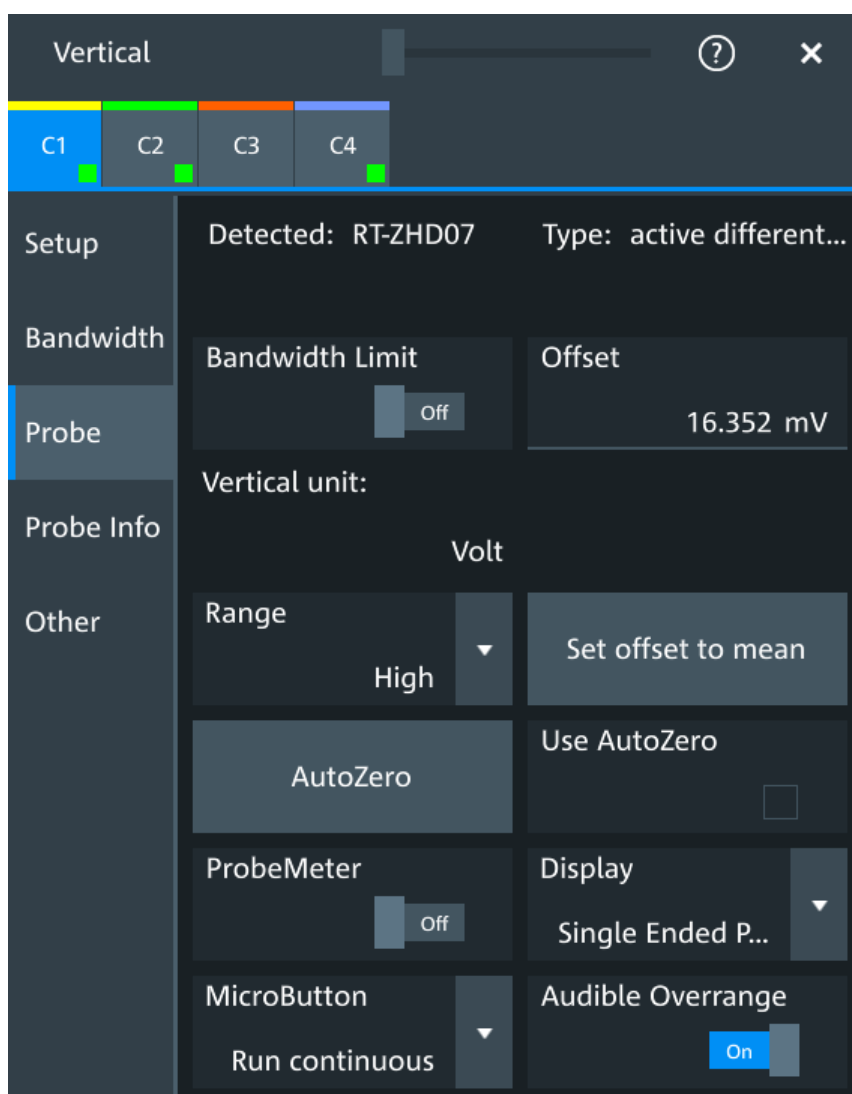


Figure 6-6: Setup for high-voltage differential probe R&S RT-ZHD07

Most settings are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of these settings.

Bandwidth and attenuation values are indicated on the probe control box. The "Offset" is the differential offset, see ["Offset"](#) on page 124.

R&S RT-ZHD high-voltage differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see [Chapter 6.4.3.1, "Settings for the Rohde & Schwarz probe interface"](#), on page 133.

Specific settings for R&S RT-ZHD probes are the following:

Bandwidth limit

Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

You can set the filter on the probe control box or at the oscilloscope.

Remote command:

[PROBe<ch>:SETup:ADVanced:FILTer](#) on page 591

Range

Sets the voltage range of an R&S RT-ZHD probe. You can set the range on the probe control box or at the oscilloscope.

"Auto"	The voltage range is set only at the oscilloscope with "Vertical scale".
"Low"	Sets the lower voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.
"High"	Sets the higher voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.

Remote command:

[PROBe<ch>:SETup:ADVanced:RANGe](#) on page 591

Audible overrange

Activates the acoustic overrange warning in the probe control box. You can also activate the sound directly on the probe control box.

Remote command:

[PROBe<ch>:SETup:ADVanced:AUDioverload](#) on page 590

6.4.4 Setup for current probes

The setup and adjustment of current probes depends on the output connector of the probe: BNC or Rohde & Schwarz probe box.

Current probes R&S RT-ZCxx

The current probes **R&S RT-ZCxx** have BNC connectors. They are known to the MXO 4 as predefined probes, see ["Predefined probe, name and type of the probe"](#) on page 129. Demagnetizing and zero adjustment is done on the probe, see the probe's User Manual for details. Make sure to demagnetize and adjust the probe before taking measurements.

Current probes R&S RT-ZCxxB

Current probes **R&S RT-ZCxxB** have a Rohde & Schwarz probe interface; they are powered and remotely controlled by the oscilloscope.

When the probe is connected, demagnetization is performed automatically.

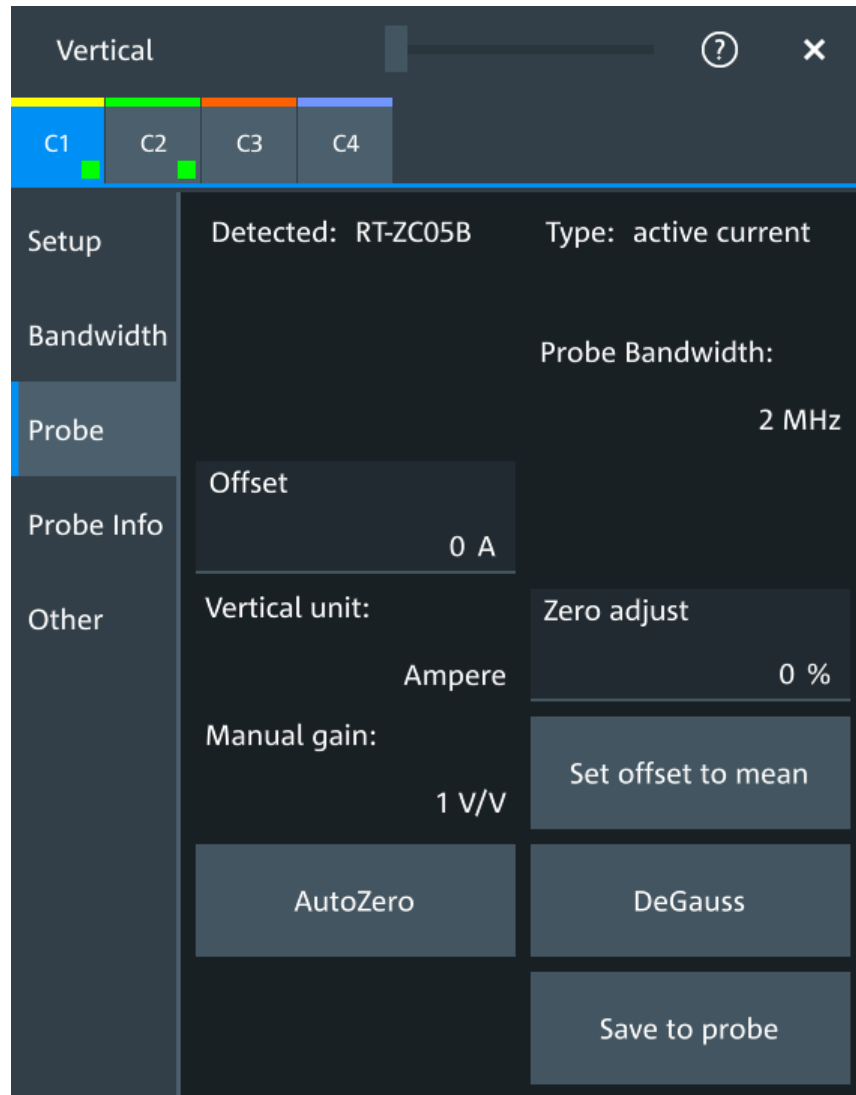


Figure 6-7: Setup for current probe R&S RT-ZC05B

Most settings are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of these settings.

Current probes are adjusted by the following functions.

Gain, Manual gain

Shows the gain of the connected probe if the probe is detected or predefined. For unknown current probes, set the correct gain of the probe.

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Remote command:

[PROBe<ch>:SETup:GAIN:AUTO?](#) on page 595

[PROBe<ch>:SETup:GAIN:MANual](#) on page 596

DeGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

The demagnetizing process takes about one second. During demagnetizing, a demagnetizing waveform is displayed.

Demagnetizing is done automatically when R&S RT-ZCxxB is connected to the oscilloscope, or when "AutoZero" is performed.

Remote command:

[PROBe<ch>:SETup:DEGauss](#) on page 596

Zero adjust

Zero adjust corrects the effect of an offset caused by temperature drift, and compensates for the remanence. The setting is only available if DC coupling is set.

To set the waveform to zero level by the instrument, use "AutoZero". The detected value is displayed.

Alternatively, you can adjust the value manually until the waveform is set to zero level. Make sure to demagnetize the probe before zero adjustment.

The value is given in percent of the maximum range, which is internally defined. The actual setup range depends on the temperature drift, the measured current and other variables, and it can change over time. If you measure high currents, the probe core magnetizes, which impairs the measurement results. Therefore, repeat "AutoZero" before the measurement.

Remote command:

[PROBe<ch>:SETup:OFFSet:ZADJust](#) on page 596

Save to probe

Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Remote command:

[PROBe<ch>:SETup:OFFSet:STPRobe](#) on page 596

6.4.5 Modular probes


The probes of the R&S RT-ZM family are modular probes. They have a probe head and a probe amplifier connected by a cable, and various probe tip modules and tip cables for different applications. R&S RT-ZM probes are equipped with Rohde & Schwarz probe interface, and provide special features: R&S ProbeMeter, micro button, and a wide offset compensation range.

The following common probe settings are available:

- "Probe bandwidth" on page 130
- "Vertical unit" on page 130
- "Attenuation" on page 130
- "AutoZero, Use AutoZero" on page 131

The R&S RT-ZM probes support the following features of the Rohde & Schwarz probe interface:

- "MicroButton" on page 133
- "ProbeMeter" on page 133

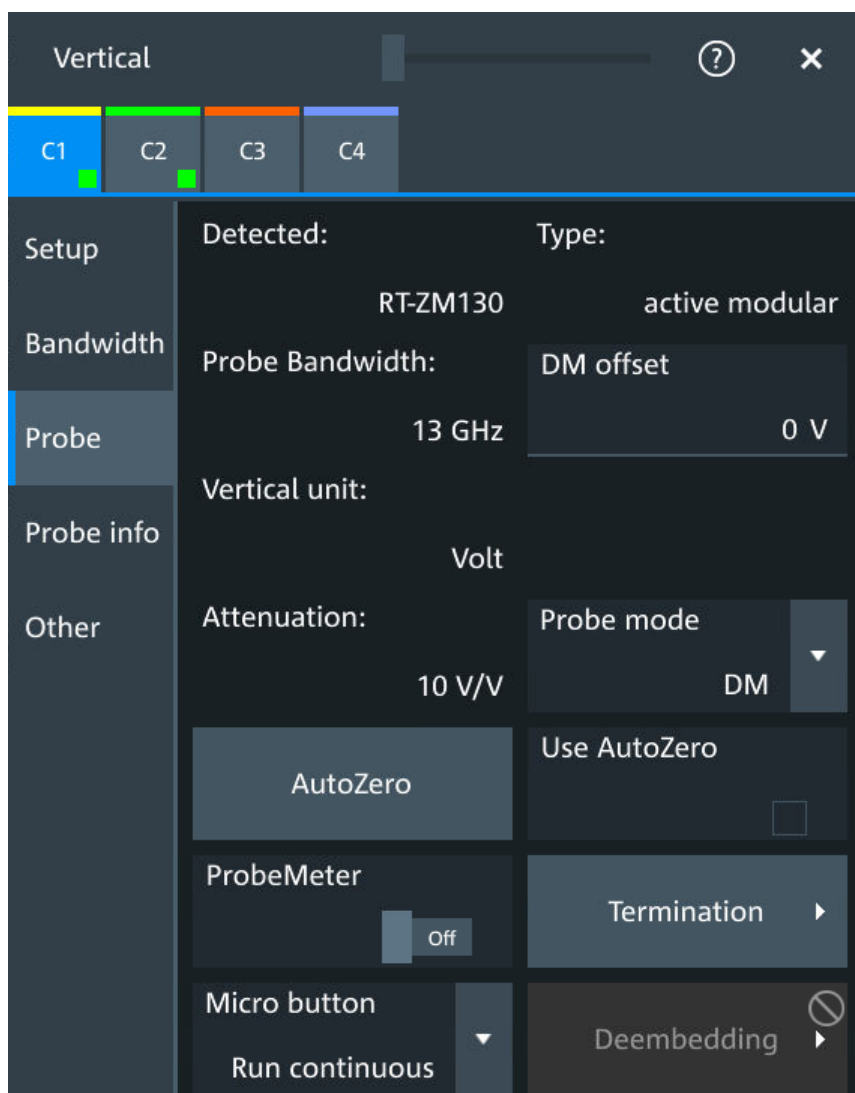

The specific functions of modular probes are described in the following sections:

- [Setup parameters of modular probes](#)..... 142
- [Termination voltage with R&S RT-ZMA40 SMA module](#)..... 143

6.4.5.1 Setup parameters of modular probes

Access: "Menu" > "Vertical" > "Probe" tab, and R&S RT-ZM probe is connected to the channel

Probe mode

Sets the measurement mode of modular probes.

The modular probes of the R&S RT-ZM family have a multimode function. You can switch between single-ended, differential and common mode measurements without reconnecting or resoldering the probe. You can set the probe mode in the dialog, and you can assign the probe mode setting to the micro button.

If you use the R&S RT-ZMA30 browser module, only DM measurements are possible because this module has no ground connector.

The measurement modes are:

"DM" Differential-mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

$$V_{dm} = V_p - V_n$$

"CM" Common-mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

$$V_{cm} = \frac{V_p + V_n}{2}$$

"P" Positive single-ended input voltage (V_p). The voltage between the positive input terminal and the ground.

"N" Negative single-ended input voltage (V_N). The voltage between the negative input terminal and the ground.

Remote command:

[PROBe<ch>:SETup:PRMode](#) on page 592

DM Offset, CM Offset, P Offset, N Offset

Compensate offset voltages. The dialog shows the offset of the selected probe mode.

The offset of the selected probe mode is used as the channel offset and considered automatically for correction. For example, in CM mode, the common mode offset is used as the channel offset.

"DM Offset" Compensates a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

"CM Offset" Compensates a DC voltage applied to both input terminals referenced to ground.

"P Offset" Compensates a DC voltage applied to the positive input terminal (V_p) referenced to ground.

"N Offset" Compensates a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Remote command:

[PROBe<ch>:SETup:DMOFFset](#) on page 593

[PROBe<ch>:SETup:CMOFFset](#) on page 587

[PROBe<ch>:SETup:NOFFset](#) on page 593


[PROBe<ch>:SETup:POFFset](#) on page 593

6.4.5.2 Termination voltage with R&S RT-ZMA40 SMA module

Access: "Menu" > "Vertical" > "Probe" tab > "Termination"

Termination voltage is relevant if you use the R&S RT-ZMA40 SMA module. The SMA module applies a termination voltage (± 4 V) to the DUT to enable measurements against a common mode DC voltage instead of ground. This measurement is required for many digital signal standards.

The termination voltage can be controlled at the oscilloscope. Therefore, connect the V_T terminal of the R&S RT-ZM probe amplifier to the V_T terminal of the R&S RT-ZMA40 SMA module using the red DC lead (see R&S RT-ZM User Manual). The required termination voltage is measured and adjusted automatically, but can also be set manually.

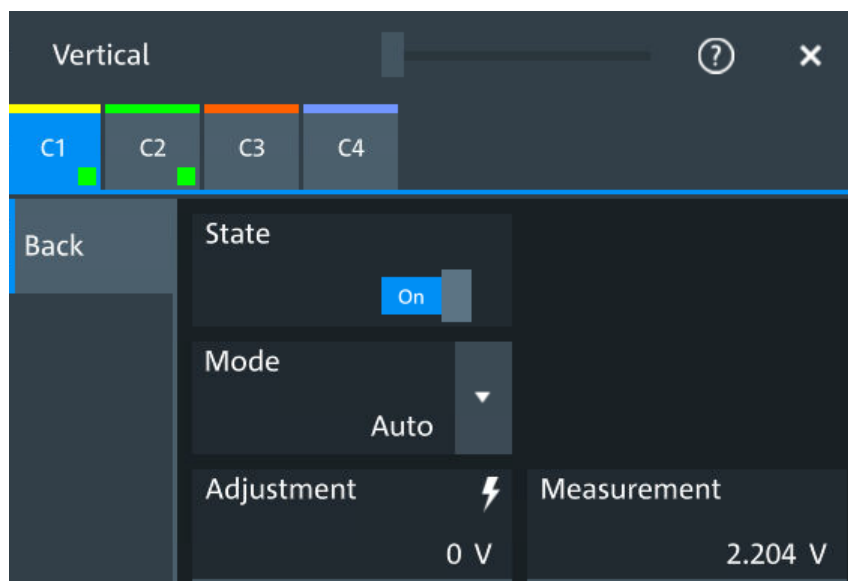

State

Activates control of the termination voltage.

Remote command:

[PROBe<ch>:SETup:TERM:STATe](#) on page 595

Mode

Selects the voltage that is used for termination.

In auto mode, the instrument uses the measured common mode voltage for termination. In manual mode, you can enter the voltage to be used for termination. Use the manual mode if you know the common mode voltage of the DUT.

Remote command:

`PROBe<ch>:SETup:TERM:MODE` on page 594

Adjustment

Sets the voltage to be used for termination correction in manual termination mode.

Remote command:

`PROBe<ch>:SETup:TERM:ADJust` on page 594

Measurement

Shows the measured common mode voltage.

Remote command:

`PROBe<ch>:SETup:TERM:MEASure?` on page 594


6.4.6 Setup for optical isolated probe systems

The R&S RT-ZISO is an optical isolated probe system. It consists of the probe head with exchangeable tip module, probe receiver, and scope connector cable. The probe head is permanently connected to the probe receiver by an optical cable, which is an optical isolated cable with multifiber system. To connect the probe receiver to the MXO 4, the scope connector cable is used. This cable provides the required supply voltage and transmits the measurement data and control signals simultaneously.

The power consumption of the probes is monitored by the power monitor.

6.4.6.1 Setup parameters of optical isolated probes

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe.

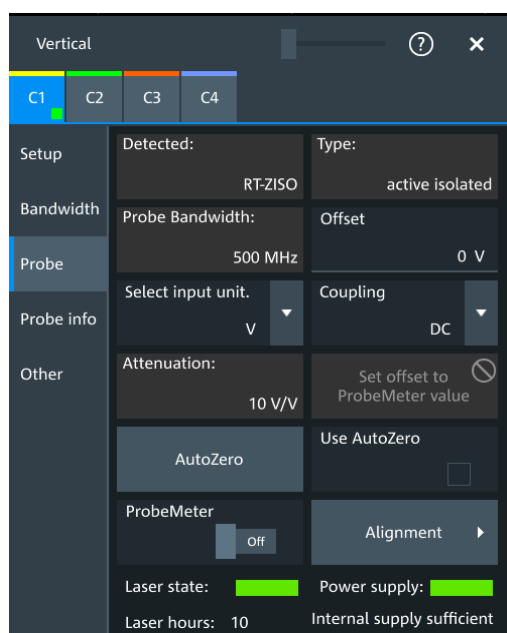

Most settings are common settings, which are available for all probe types. See [Chapter 6.4.1, "Common probe settings"](#), on page 128 for description of these settings.

The dialog also shows some vertical settings

- "Offset". See ["Offset"](#) on page 124 for details.
- "Coupling". See ["Coupling"](#) on page 125 for details.

Set the vertical scale in the "Setup" tab. The probe adjusts its attenuation automatically.

Select input unit

Sets the unit of the R&S RT-ZISO signal.

Remote command:

[PROBe<ch>:SETup:ADVanced:UNIT](#) on page 597

Set offset to ProbeMeter value

Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if [ProbeMeter](#) is active.

Remote command:

[PROBe<ch>:SETup:ADVanced:PMToffset](#) on page 591

Alignment

Opens the "Alignment" dialog. See [Chapter 6.4.6.2, "Alignment"](#), on page 145.

Laser state

The color indicates the current status of the laser:

- Green: the laser is working.
- Yellow: the laser needs service, but is still working.
- Red: defective laser, send it to your Rohde & Schwarz service center.

Remote command:

[PROBe<ch>:SETup:LASer:STATe?](#) on page 598

Laser hours

Indicates the operating hours of the R&S RT-ZISO laser since the first use or last service.

Remote command:

[PROBe<ch>:SETup:LASer:OPERatinghrs?](#) on page 598

Power supply


Indicates whether the power supply of the R&S RT-ZISO is sufficient. Details on power consumption are given in the power monitor. See [Chapter 6.4.8.1, "Power monitor"](#), on page 149.

6.4.6.2 Alignment

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe > "Alignment".

The dialog provides functions to correct the zero point and gain errors.

Align the probe before first use, and when the ambient conditions have been changed, for example, when strong temperature changes occur ($> 5^\circ$).

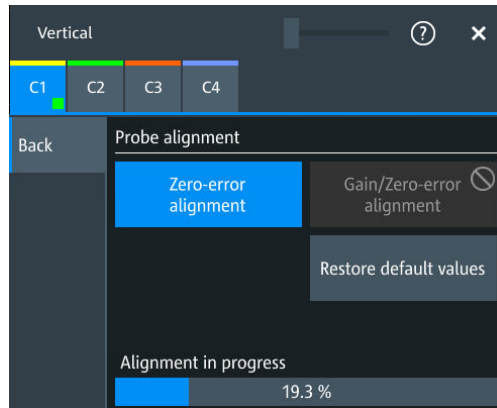

The progress of the alignment process is shown in a progress bar below the buttons.

Zero-error alignment

Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:

[PROBe<ch>:SETup:ALIGnment:ZERO:EXECute](#) on page 599

Gain/Zero-error alignment

Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:

[PROBe<ch>:SETup:ALIGnment:GAIN:EXECute](#) on page 598

Restore default values

Resets the zero point and gain error correction to the factory default values.


Remote command:

[PROBe<ch>:SETup:ADVanced:RDEFaults](#) on page 599

6.4.6.3 Tip info dialog

Access: "Menu" > "Vertical" > "Probe" > select channel with connected R&S RT-ZISO probe > "Tip info"


The dialog shows the characteristics of the tip modules that are connected to the probes.

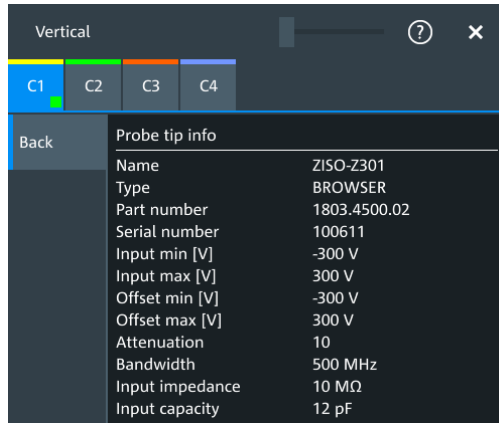

6.4.7 Probe adapter R&S RT-Z2T


Using the R&S RT-Z2T probe interface adapter, you can connect selected Tektronix active probes with TekProbe BNC™ level II interface.

1. Connect the R&S RT-Z2T adapter to the channel input.
2. Connect the probe to the adapter.
The instrument identifies the adapter.
3. Select "Menu" > "Vertical" > "Probe" tab.

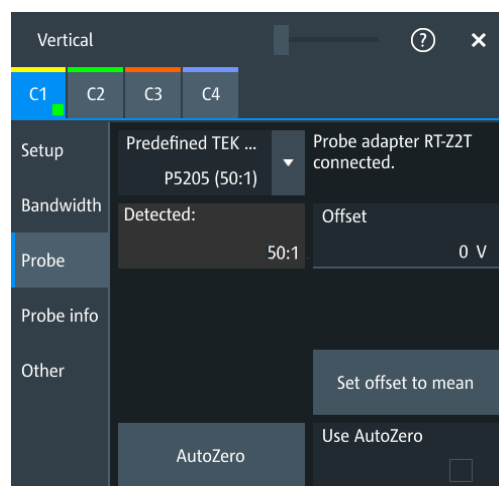

The dialog shows that the R&S RT-Z2T probe interface adapter is connected, and supported Tektronix probes are listed as "Predefined probe".

- Select the "Predefined probe" in the "Probe" tab.

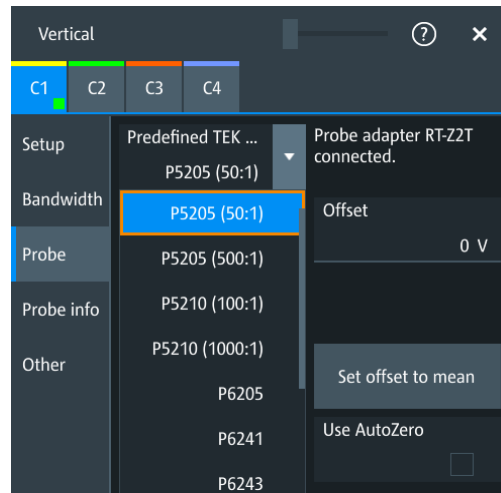


See also: ["Predefined probe, name and type of the probe"](#) on page 129.

The power consumption of the R&S RT-Z2T probe interface adapter in the "Power Monitor": "Vertical" > "Probe Info" > "Power Monitor".

6.4.8 Probe info

The dialog shows general information on the connected probe, for example, type, serial number, and part number. Below, electrical characteristics are shown, like bandwidth, attenuation, input capacitance and impedance, voltage and DC offset range.


For a specification of the probe parameters, refer to the specifications document.

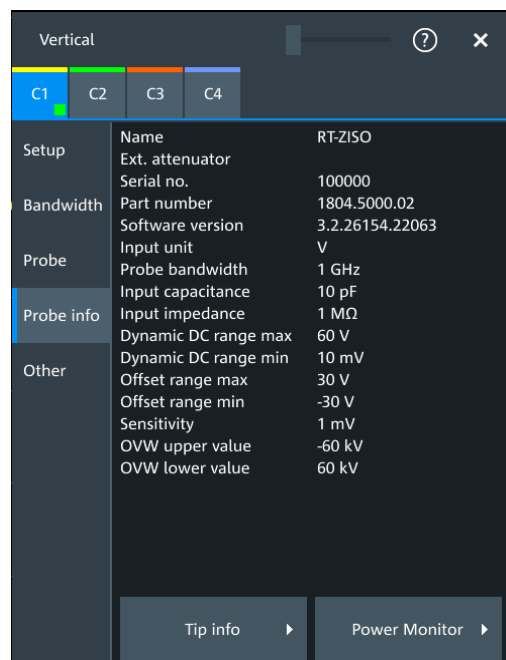

Remote commands: [Chapter 17.8.8.7, "Probe attributes"](#), on page 600.

6.4.8.1 Power monitor

The power monitor informs about the connected probes and their power consumption. If you use several R&S RT-ZISO probes, the power of the instrument can be insufficient to power all probes. The power monitor notifies you of insufficient power. To solve the problem, you can remove redundant probes, or use the external power supplies to power the R&S RT-ZISO probes.

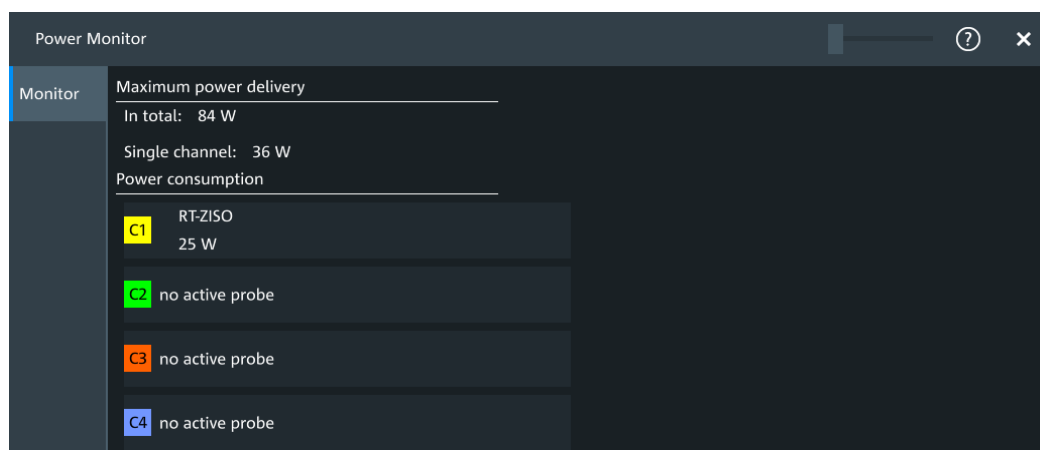



6.4.8.2 Tip info

The "TIP info" button and dialog are available if an R&S RT-ZISO probe is connected to the channel. See [Chapter 6.4.6.3, "Tip info dialog"](#), on page 147 for details.

6.4.9 Adjusting passive probes




When using a passive probe, you have to compensate it when you connect it to the instrument the first time. Compensation matches the probe cable capacitance to the oscilloscope input capacitance to assure good amplitude accuracy from DC to upper bandwidth limit frequencies. A poorly compensated probe reduces the performance of the probe-oscilloscope system and introduces measurement errors resulting in distorted waveforms and inaccurate results.

Two connector pins are located on the front panel. The  pin is on ground level. The  pin supplies a square wave signal with 1 kHz for low frequency probe compensation.

1. Connect the BNC connector of the probe to one of the channel inputs.
2. Connect the probe's ground connector to the ground compensation pin, and the probe tip to the signal pin.
3. Press [Autoset].

A square wave appears on the display.

- Adjust the compensation trimmer of the probe to optimum square wave response. For details, refer to the documentation of your probe.

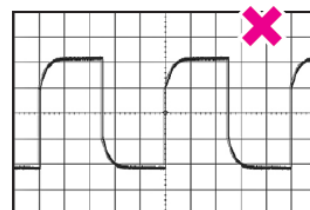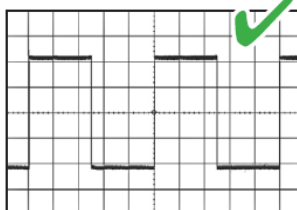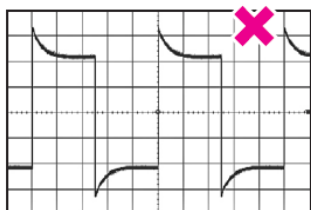

7 Trigger

• Basics of triggering.....	151
• Common trigger settings.....	153
• Trigger sequence.....	155
• Trigger types.....	157
• Trigger mode / holdoff.....	180
• Hysteresis.....	182
• Channel filter.....	184
• Actions on trigger.....	185
• Zone trigger.....	187

7.1 Basics of triggering

Triggering means to capture the interesting part of the relevant waveforms, and the trigger point is the determining point in the waveform record. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in analog, digital, and protocol signals.

How the instrument triggers

A trigger occurs if the complete set of trigger conditions is fulfilled. The instrument acquires continuously and keeps the sample points to fill the pre-trigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the post-trigger part of the waveform record is filled. Then it stops acquiring and waits for the next trigger. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete and the holdoff time has expired.

Trigger setup

A simple trigger setup includes:

- Source of the trigger signal
- Trigger type selection and setup
- Horizontal position of the trigger, see: [Chapter 6.1.1, "About the horizontal system"](#), on page 107
- Trigger mode

The MXO 4 provides various trigger types for troubleshooting and signal analysis, for example, edge trigger, glitch trigger, interval trigger, pattern trigger, and much more.

For complex tasks like verifying and debugging designs, advanced trigger settings are available:

- Filter to remove high or low frequencies from the trigger signal
- Hysteresis to avoid unwanted trigger events caused by noise
- Holdoff to define exactly which trigger event causes the trigger
- Trigger sequences to combine several event conditions

Action on trigger

A trigger can initiate a trigger out signal.

Trigger sequence

A trigger sequence joins two or more separate trigger conditions with an optional delay time and an optional reset time or reset condition. Similar setups are also known as multi-step triggers or A/B trigger.

7.1.1 Trigger information

Information on the most important trigger settings is shown in the trigger label above the diagram. If you tap the trigger label, the "Trigger" dialog opens.

If you trigger on a single event, the trigger label shows:

- Trigger source
- Trigger type
- Trigger level
- Trigger mode
- Edge or polarity, and important trigger-type specific settings
- Trigger state

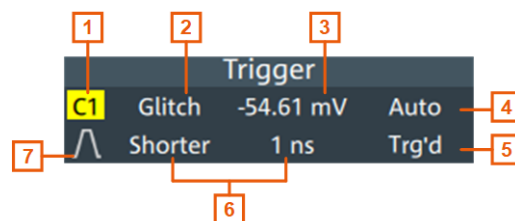


Figure 7-1: Trigger label on the toolbar

- 1 = Trigger source
- 2 = Trigger type
- 3 = Trigger level
- 4 = Trigger mode
- 5 = Trigger state
- 6 = Trigger type specific settings
- 7 = Trigger slope

If you trigger on a sequence, the trigger label shows:


- Sequence type
- Trigger mode
- Trigger state

7.2 Common trigger settings

Access: "Menu" > "Trigger" > "Setup" tab

The common trigger settings are the trigger source and the trigger type, including the trigger level. To set the trigger level automatically, use "Find level".

These common settings are set once for a single event and are specific for each condition in a trigger sequence.

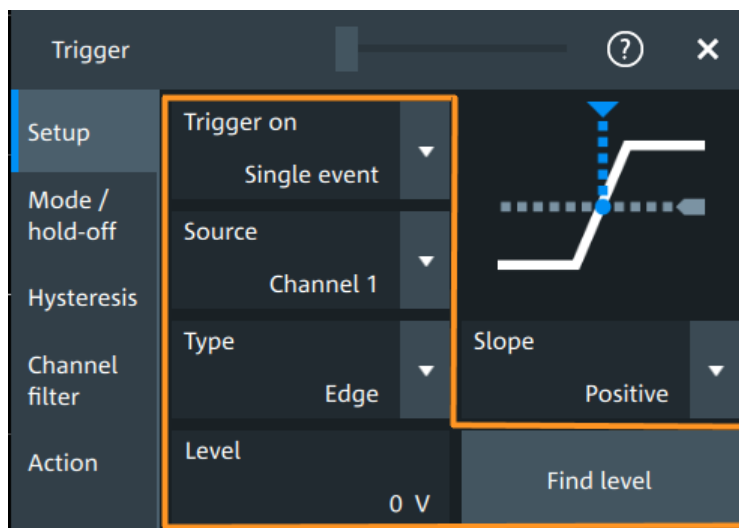

Depending on the trigger type, additional settings are available. They are explained in the trigger-type specific sections.

Trigger on	153
Source	153
Type	154
Level	154
Find level	155

Trigger on

Selects, if you want to trigger on a single event, or on a series of events.

Remote command:

[TRIGger:MEVents:MODE](#) on page 605

Source

Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source.

The trigger source can be:

- Channel <n>: an analog input channel
- Extern: external analog signal connected to the external trigger input. For the external trigger source, the analog edge trigger is available.

- **Line:** The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency. Use this source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices. For the line trigger source, the edge trigger type is available.
- **Digital channels D0 to D15, serial bus**
If options with trigger functionality are installed, the variety of trigger sources is enhanced with specific trigger sources. These specific trigger sources are only available for triggering on single event.

For the state trigger, this source is the "Clock source", the clock signal.

For the setup & hold trigger, this source is the "Data source", the data signal.

Remote command:

`TRIGger:EVENT<ev>:SOURce` on page 606

Type

Selects the trigger type. In a trigger sequence the trigger type is set for each condition.

The current trigger type is shown on the button and in the trigger label above the diagram.

The following trigger types are available:

- [Edge trigger, see page 157](#)
- [Glitch trigger, see page 160](#)
- [Width trigger, see page 162](#)
- [Runt trigger, see page 163](#)
- [Window trigger, see page 165](#)
- [Timeout trigger, see page 167](#)
- [Interval trigger, see page 168](#)
- [Slew rate trigger, see page 170](#)
- [Setup & Hold, see page 172](#)
- [State trigger, see page 174](#)
- [Pattern trigger, see page 175](#)

If the external trigger input is used as the trigger source, the analog edge trigger is the only available trigger type.

For digital channels, the edge, width, timeout, state and pattern trigger are available.

Remote command:

`TRIGger:EVENT<ev>:TYPE` on page 605

Level

Sets the voltage level or threshold for the trigger.

You can also drag the trigger level marker on the display, or turn the [Level] knob. To set the trigger level to 50% of the signal amplitude, press the [Level] knob.

For the setup & hold trigger, this level sets the voltage level for the data signal. At this level, the setup and hold time are measured.

For the timeout trigger, the trigger level is the threshold for the high and low signal states.

Runt, window and slew rate triggers require two trigger levels (upper and lower), which are defined as specific settings.

Remote command:

`TRIGger:EVENT<ev>:LEVel<n>[:VALue]` on page 606

`TRIGger:ANEDge:LEVel` on page 610 (for external trigger source)

Find level

Sets the trigger level automatically to $0.5 * (MaxPeak - MinPeak)$.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:

`TRIGger:FINDlevel` on page 606

7.3 Trigger sequence

With MXO 4, you can trigger on a single trigger event, or on a sequence of events. A trigger sequence consists of at least two event conditions and additional conditions defining when the trigger occurs.

The trigger sequence "A → B → R", for example, consists of two subsequent events: A-trigger and B-trigger with optional B-trigger delay and count. In addition, an optional reset condition R can be configured: timeout or R-trigger condition. A-, B-, and R-triggers are configured in the same way.

After the A-trigger conditions have been met, and an optional delay has passed, the B-trigger with independent conditions is enabled. The instrument waits until one or a specified number of B-trigger conditions occur. If the reset condition is not fulfilled, the latest B-trigger causes the trigger event, and then the sequence starts again. The B-trigger can only cause the trigger event if it occurs after the A-trigger and after the delay time.

If you expect, for example, an irregular B-trigger, you can configure a reset condition to restart the sequence. The reset condition can be a simple timeout, and/or a reset event that is defined in the same way as the A- and B-trigger conditions.

All trigger sequences require that analog input channels C<n> are set as trigger sources for all events. The instrument checks all trigger settings for compatibility and adjusts them if they do not fit.


The following trigger types are only available for triggering on single event:

- Setup & Hold
- State
- Pattern

For the zone trigger, more trigger sequences are available, see [Chapter 7.9, "Zone trigger"](#), on page 187.

7.3.1 Sequence setup

Access: "Menu" > "Trigger" > "Setup" tab > "Trigger on" = "Sequence"

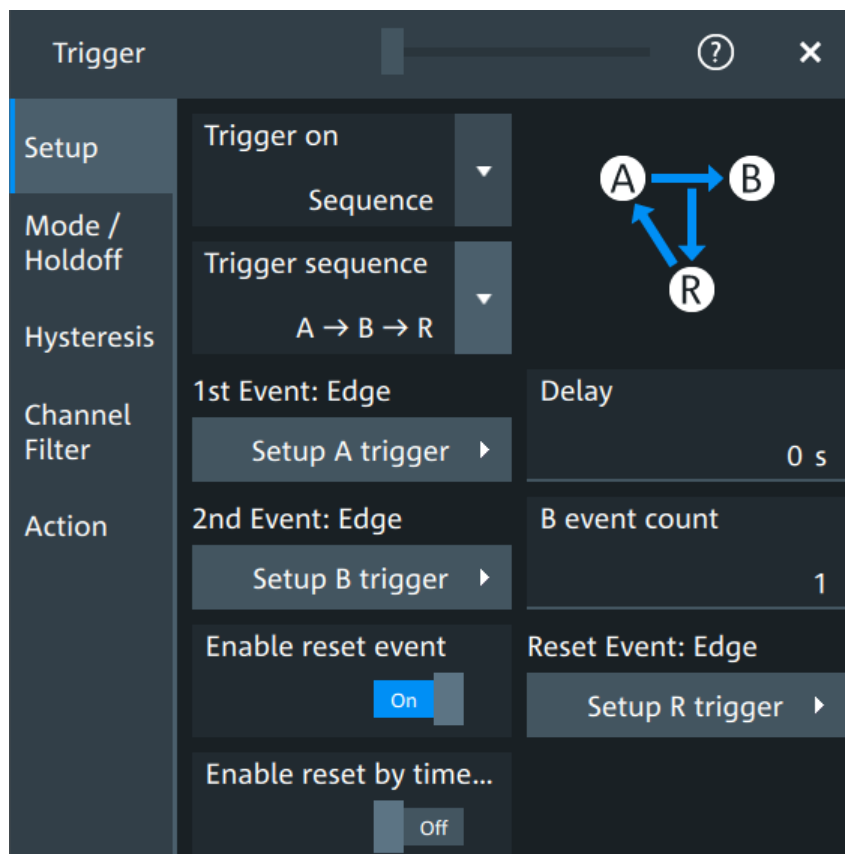

B-trigger and R-trigger are configured in the same way as the A-trigger. You can configure a delay between the A- and B-trigger, and define a number of fulfilled B-trigger conditions to be ignored. The reset condition R can be a timeout or a trigger condition, or a combination of both.

Trigger sequence

Selects the type of the trigger sequence.

"A → B → R" Triggers if all conditions of A- and B-events, as well as additional delay and count, and optional reset timeout and/or R-event conditions are fulfilled.

"A → Zone Trigger" Triggers if the conditions of the A-event and the zone trigger are fulfilled, see [Chapter 7.9, "Zone trigger"](#), on page 187

Remote command:

[TRIGger:MEVents:AEVents](#) on page 607

Delay

Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Remote command:

[TRIGger:MEVents:SEquence<se>:DELAy](#) on page 608

B event count

Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Remote command:

[TRIGger:MEVents:SEquence<se>:COUNT](#) on page 607

Enable reset event

If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Remote command:

[TRIGger:MEVents:SEquence<se>:RESet:EVENT](#) on page 608

Enable reset by time, Reset timeout

If reset timeout is enabled, the instrument waits for the "Reset timeout" time for the specified number of B-triggers. If no trigger occurs during that time, the sequence is restarted with the A-trigger.

Remote command:

[TRIGger:MEVents:SEquence<se>:RESet:TIMEout\[:ENABLE\]](#) on page 609

[TRIGger:MEVents:SEquence<se>:RESet:TIMEout:TIME](#) on page 608

7.4 Trigger types


• Edge trigger	157
• Edge trigger on external trigger source	158
• Glitch trigger	160
• Width trigger	162
• Runt trigger	163
• Window trigger	165
• Timeout trigger	167
• Interval trigger	168
• Slew rate trigger	170
• Setup & Hold	172
• State trigger	174
• Pattern trigger	175
• Line trigger	180

7.4.1 Edge trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Edge"

The edge trigger is the most common trigger type. The trigger occurs when the signal from the trigger source passes the trigger level in the specified direction (slope).

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

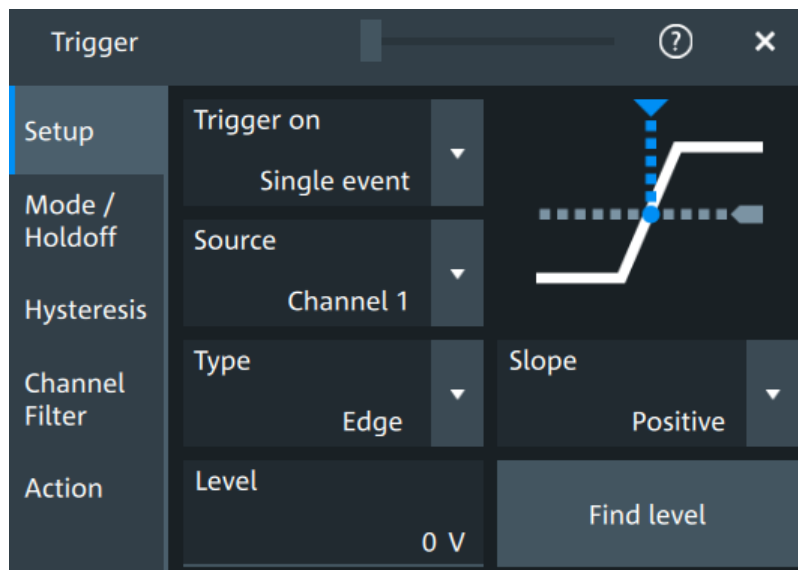**Level**

See "[Level](#)" on page 154.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Slope

Sets the edge direction for the trigger.

"Positive" Selects the rising edge, which is a positive voltage change.

"Negative" Selects the falling edge, which is a negative voltage change.

"Either" Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:


[TRIGger:EVENT<ev>:EDGE:SLOPe](#) on page 609

7.4.2 Edge trigger on external trigger source

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Extern" > "Type = Analog Edge"

If an external trigger signal is connected to the Trigger In connector, and the trigger source is set to "Extern", the analog edge trigger is available. Triggering on an external source is only possible if you trigger on a single event but not for sequences.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

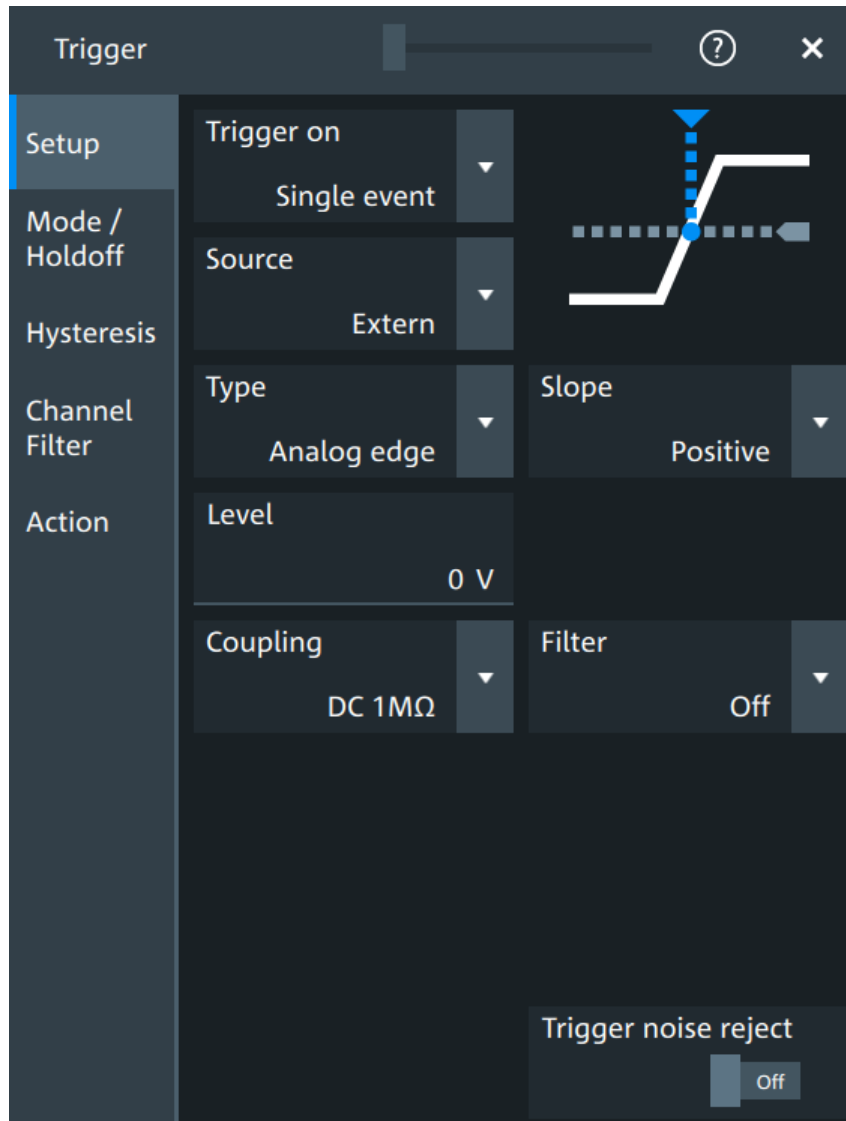

The "Slope" and "Level" are the same settings as for the edge trigger, see:

- ["Level"](#) on page 154
- ["Slope"](#) on page 158

Specific settings for the analog edge trigger are the following:

Coupling

Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

"DC 50 Ω " Connection with 50 Ω termination, passes both DC and AC components of the signal.

"DC 1 M Ω " Connection with 1 M Ω termination, passes both DC and AC components of the signal.

"AC 1 M Ω " Connection with 1 M Ω termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

Remote command:

[TRIGger:ANEDge:COUPling](#) on page 610

Filter, Cut-off

Selects the filter mode for the external trigger signal, and sets the cut-off frequency.

"Off" The trigger signal is not filtered.

"LF reject" Frequencies lower than the "Cut-off" frequency are rejected, higher frequencies pass the filter.

"RF reject" Frequencies higher than the "Cut-off" frequency are rejected, lower frequencies pass the filter.

Remote command:

[TRIGger:ANEDge:FILTer](#) on page 610

[TRIGger:ANEDge:CUToff:HIGHpass](#) on page 610

[TRIGger:ANEDge:CUToff:LOWPass](#) on page 611

Trigger noise reject

Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Remote command:


[TRIGger:ANEDge:NREJect](#) on page 611

7.4.3 Glitch trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Glitch"

The glitch trigger detects pulses shorter or longer than a specified time. It identifies deviation from the nominal data rate and helps to analyze causes of even rare glitches and their effects on other signals.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

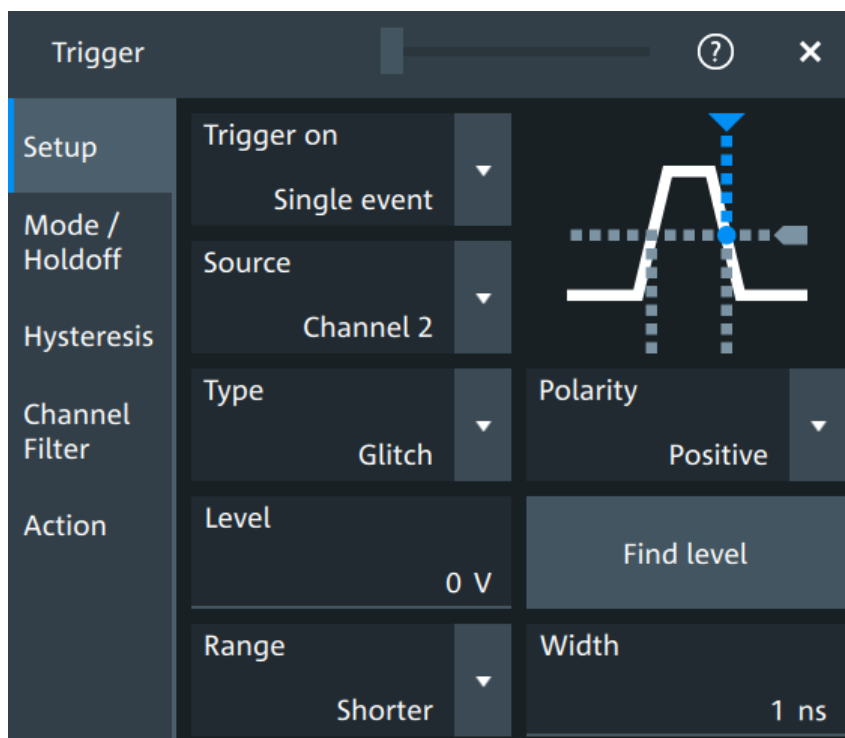**Level**

See "Level" on page 154.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Polarity

Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:

[TRIGger:EVENT<ev>:GLITCh:POLarity](#) on page 611

[TRIGger:EVENT<ev>:RUNT:POLarity](#) on page 615

Range

Selects how the time limit of the runt pulse is defined.

Remote command:

[TRIGger:EVENT<ev>:GLITCh:RANGe](#) on page 612

Width

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with "Range".

You need to know the expected pulse widths of the circuit to set the glitch width correctly.

Remote command:


[TRIGger:EVENT<ev>:GLITCh:WIDTh](#) on page 612

7.4.4 Width trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Width"

The width trigger compares the pulse width (duration) with given time limits. It detects pulses with an exact pulse width, pulses shorter or longer than a given time, and also pulses inside or outside the allowable time range. The pulse width is measured at the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

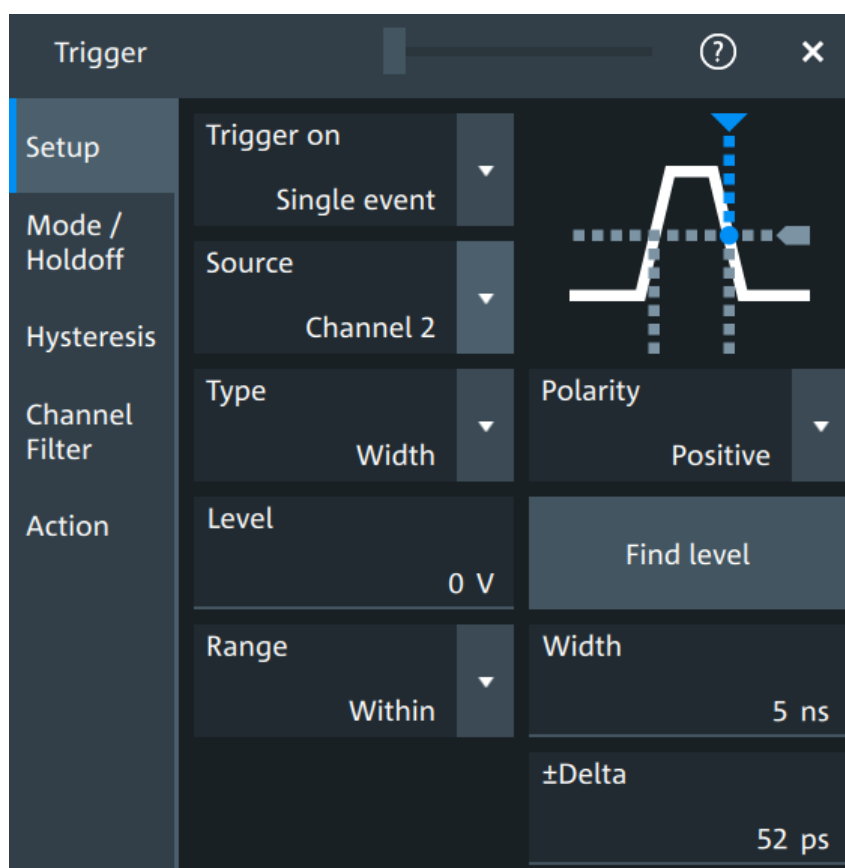

Level

See "[Level](#)" on page 154.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Polarity

Sets the polarity of a pulse, which is the direction of the first pulse slope.

- "Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.
- "Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.
- "Either" Selects both positive and negative going pulses.

Remote command:

[TRIGGER:EVENT<ev>:WIDTH:POLARITY](#) on page 613

Range

Selects how the range of a pulse width is defined.

- "Longer" Triggers on pulses longer than the given "Width".
- "Shorter" Triggers on pulses shorter than the given "Width".
- "Within" Triggers on pulses inside a given range. The range of the pulse width is defined by " $\pm\Delta$ " related to "Width".
- "Outside" Triggers on pulses outside a given range. The range definition is the same as for "Within" range.

Remote command:

[TRIGGER:EVENT<ev>:WIDTH:RANGE](#) on page 613

Width

For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits " $\pm\Delta$ ".

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Remote command:

[TRIGGER:EVENT<ev>:WIDTH:WIDTH](#) on page 613

 $\pm\Delta$

Defines a range around the width value.

The combination "Range" = "Within" and " $\pm\Delta$ " = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range" = "Outside" and " $\pm\Delta$ " = 0 means to trigger on pulse widths \neq "Width".

Remote command:

[TRIGGER:EVENT<ev>:WIDTH:DELTA](#) on page 613

7.4.5 Runt trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Runt"

A runt is a pulse lower than normal in amplitude. The amplitude crosses the first threshold twice in succession without crossing the second one. For example, this trig-

ger can detect logic, digital, and analog signals remaining below a specified threshold amplitude because I/O ports are in undefined state.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.



Polarity

Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:

[TRIGger:EVENT<ev>:GLITCh:POLarity](#) on page 611

[TRIGger:EVENT<ev>:RUNT:POLarity](#) on page 615

Upper level

Sets the upper voltage limit.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:RUNT:UPPer](#) on page 614

Lower level

Sets the lower voltage limit.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:RUNT:LOWer](#) on page 614

Range

Selects how the time limit of the runt pulse is defined.

"Any runt"	Triggers on all runts fulfilling the level condition, without time limitation.
"Longer"	Triggers on runts longer than the given "Runt width".
"Shorter"	Triggers on runts shorter than the given "Runt width".
"Within"	Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and " $\pm\Delta$ ".
"Outside"	Triggers if the runt length is outside a given time range. The range definition is the same as for "Within" range.

Remote command:

[TRIGger:EVENT<ev>:RUNT:RANGe](#) on page 615

Runt width

For the ranges "Shorter" and "Longer", the runt width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the runt width defines the center of a range which is defined by " $\pm\Delta$ ".

Remote command:

[TRIGger:EVENT<ev>:RUNT:WIDTh](#) on page 616

$\pm\Delta$

Defines a range around the runt width value.

Remote command:

[TRIGger:EVENT<ev>:RUNT:DELTA](#) on page 615


7.4.6 Window trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Window"

The window trigger checks the signal run in relation to a "window". The window is formed by the upper and lower voltage levels. The trigger condition is fulfilled, if the waveform enters or leaves the window, or if the waveform stays inside or outside for a time longer or shorter than specified.

With the window trigger, you can display longer transient effects.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

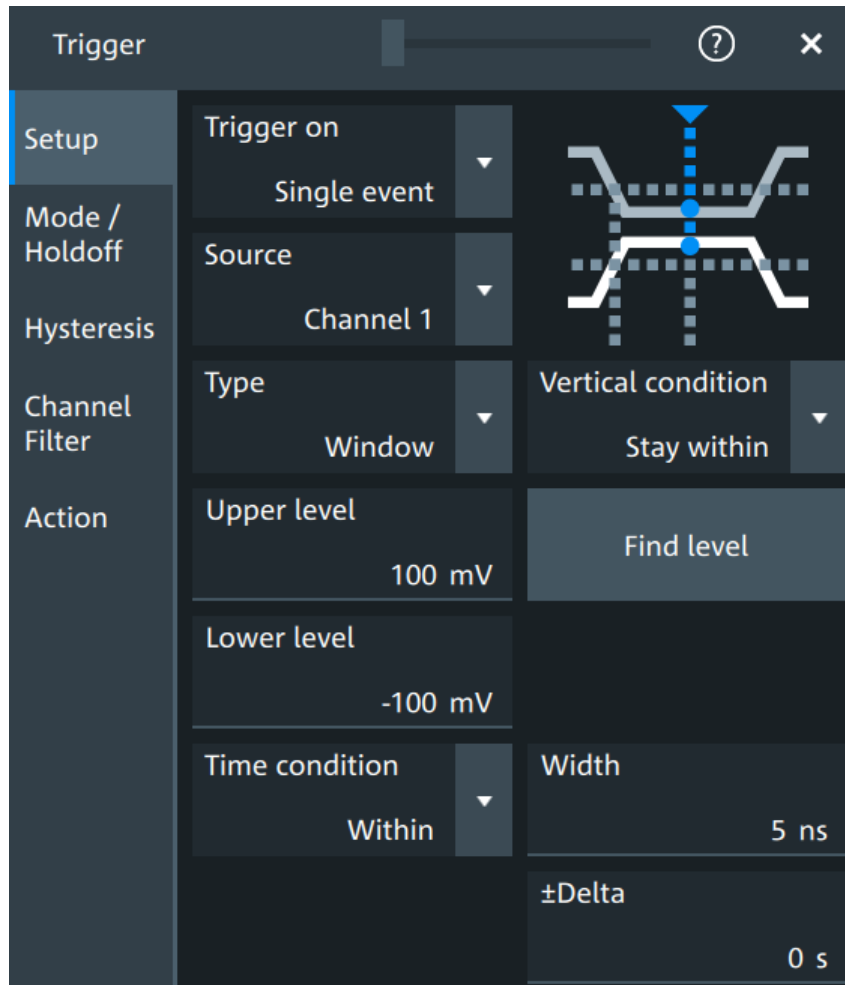

Vertical condition

Selects how the signal run is compared with the window.

- "Enter" Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.
- "Exit" Triggers when the signal leaves the window.
- "Stay within" Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the "Time condition".
- "Stay outside" Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is also defined by the "Time condition".

Remote command:

[TRIGger:EVENT<ev>:WINDow:RANGe](#) on page 618

Upper level

Sets the upper voltage limit.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:WINDow:UPPer](#) on page 617

Lower level

Sets the lower voltage limit.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:WINDow:LOWer](#) on page 617

Time condition

Available for "Vertical condition" = "Stay within"/"Stay outside".

Selects how the time limit of the window is defined.

"Within"	Triggers if the signal stays inside or outside the vertical window limits at least for the time <i>Width - Delta</i> and for <i>Width + Delta</i> at the most.
"Outside"	"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than <i>Width - Delta</i> or longer than <i>Width + Delta</i> .
"Shorter"	Triggers if the signal crosses vertical limits before the specified "Width" time is reached.
"Longer"	Triggers if the signal crosses vertical limits after the specified "Width" time is reached.

Remote command:

[TRIGger:EVENT<ev>:WINDow:TIME](#) on page 618

Width

For the ranges "Within" and "Outside", the width defines the center of a time range which is defined by the limits " $\pm\Delta$ ".

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

Remote command:

[TRIGger:EVENT<ev>:WINDow:WIDTh](#) on page 619

 $\pm\Delta$

Defines a range around the width value.

Remote command:


[TRIGger:EVENT<ev>:WINDow:DELTA](#) on page 617

7.4.7 Timeout trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Timeout"

The timeout trigger checks if the signal stays above or below the threshold voltage for a specified time lapse. In other words, the trigger occurs if the trigger source does not have the expected transition within the specified time.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

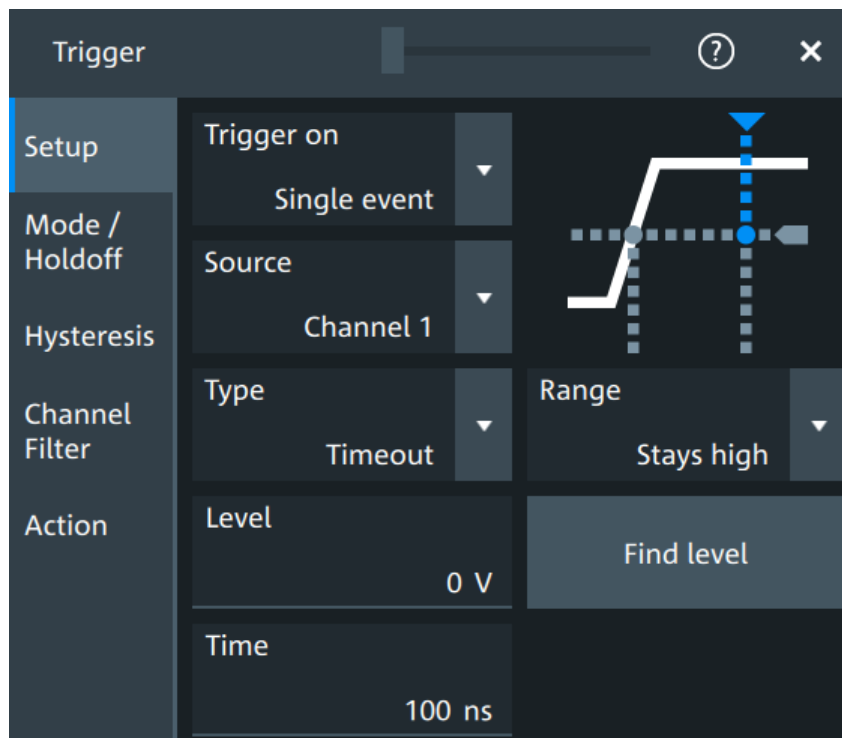**Level**

Sets the threshold for the high and low signal states.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Range

Sets the relation of the signal level to the trigger level for the timeout trigger.

"Stays high" The signal level stays above the trigger level.

"Stays low" The signal level stays below the trigger level.

"High or low" The signal level stays above or below the trigger level.

Remote command:

[TRIGger:EVENT<ev>:TIMEout:RANGe](#) on page 619

Time

Sets the time limit for the timeout at which the instrument triggers.

Remote command:

[TRIGger:EVENT<ev>:TIMEout:TIME](#) on page 620


7.4.8 Interval trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Interval"

The interval trigger analyzes the time between two pulses.

The interval trigger can analyze either rising or falling edges, but searching for an interval is also possible for both edges at the same time ("Either").

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

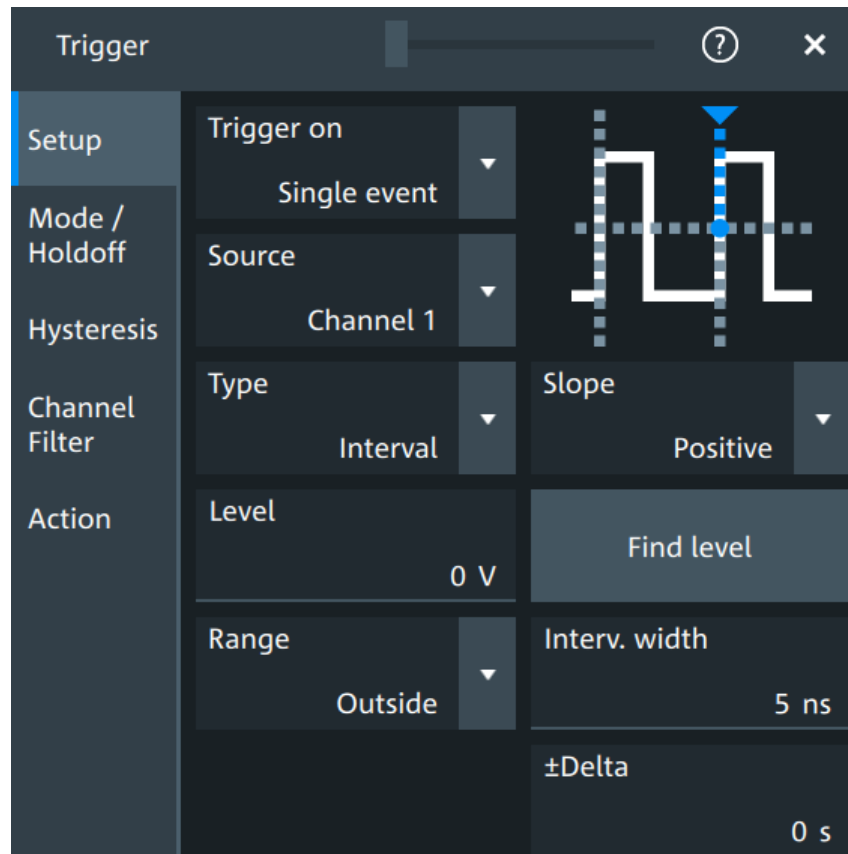

Level

See ["Level"](#) on page 154.

Remote command:

`TRIGger:EVENT<ev>:LEVel<n>[:VALue]` on page 606

Slope

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Remote command:

`TRIGger:EVENT<ev>:INTerval:SLOPe` on page 621

Range

Selects how the range of an interval is defined:

- "Within" Triggers on pulse intervals inside a given range. The range is defined by "Interv. width" and "±Delta".
- "Outside" Triggers on intervals outside a given range. The range definition is the same as for "Within" range.

"Shorter" Triggers on intervals shorter than the given "Interv. width".

"Longer" Triggers on intervals longer than the given "Interv. width".

Remote command:

[TRIGger:EVENT<ev>:INTerval:RANGe](#) on page 621

Interv. width

Sets the time between two pulses for the interval trigger.

Remote command:

[TRIGger:EVENT<ev>:INTerval:WIDTh](#) on page 621

±Delta

Defines a range around the "Interv. width" value.

Remote command:

[TRIGger:EVENT<ev>:INTerval:DELTA](#) on page 620


7.4.9 Slew rate trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Slew rate"

The slew rate trigger is also known as transition trigger. It triggers if the transition time from the lower to higher voltage level (or vice versa) is shorter or longer as defined, or outside or inside a specified time range.

The slew rate trigger finds slew rates faster than expected or permissible to avoid overshooting and other interfering effects. It also detects slow edges violating the timing in pulse series.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

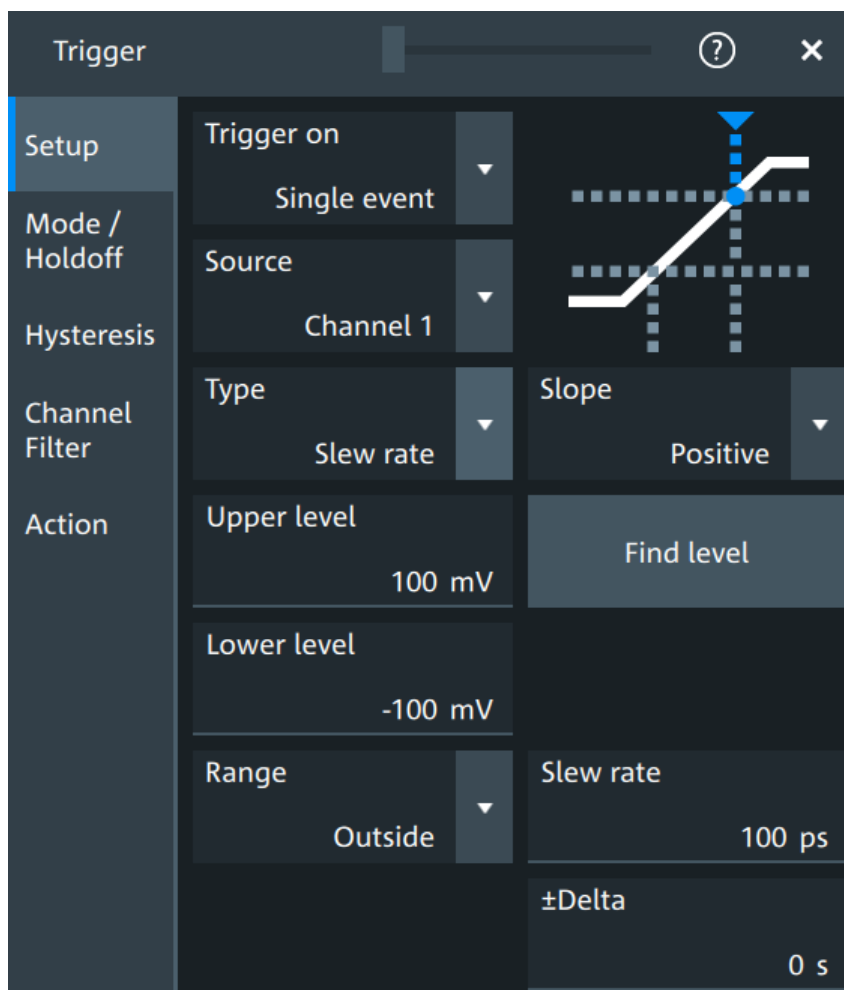

Slope

Sets the edge direction for the trigger.

- "Positive" Selects the rising edge, which is a positive voltage change.
- "Negative" Selects the falling edge, which is a negative voltage change.
- "Either" Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:

[TRIGger:EVENT<ev>:SLEW:SLOPe](#) on page 624

Upper level

Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:SLEW:UPPer](#) on page 622

Lower level

Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>:SLEW:LOWer](#) on page 622

Range

Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

"Within"	Triggers on slew rates inside a given time range. The range is defined by "Slew rate" and " $\pm\Delta$ ".
"Outside"	Triggers on slew rates outside a given time range. The range definition is the same as for "Within" range.
"Shorter"	Triggers on slew rates shorter than the given "Slew rate" limit.
"Longer"	Triggers on slew rates longer than the given "Slew rate" limit.

Remote command:

[TRIGger:EVENT<ev>:SLEW:RANGE](#) on page 623

Slew rate

For the ranges "Within" and "Outside", the slew rate defines the center of a range which is defined by the limits " $\pm\Delta$ ".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively.

Remote command:

[TRIGger:EVENT<ev>:SLEW:RATE](#) on page 624

$\pm\Delta$

Defines a time range around the given slew rate.

Remote command:

[TRIGger:EVENT<ev>:SLEW:DELTA](#) on page 623


7.4.10 Setup & Hold

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Setup & Hold"

The setup & hold trigger analyzes the relative timing between two signals: a data signal and the synchronous clock signal. Many systems require, that the data signal must be steady for some time before and after the clock edge, for example, the data transmission on parallel interfaces. With this trigger type, you can also test the time correlation of sideband and in-band signals.

The setup & hold trigger is also known as Data2Clock trigger.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

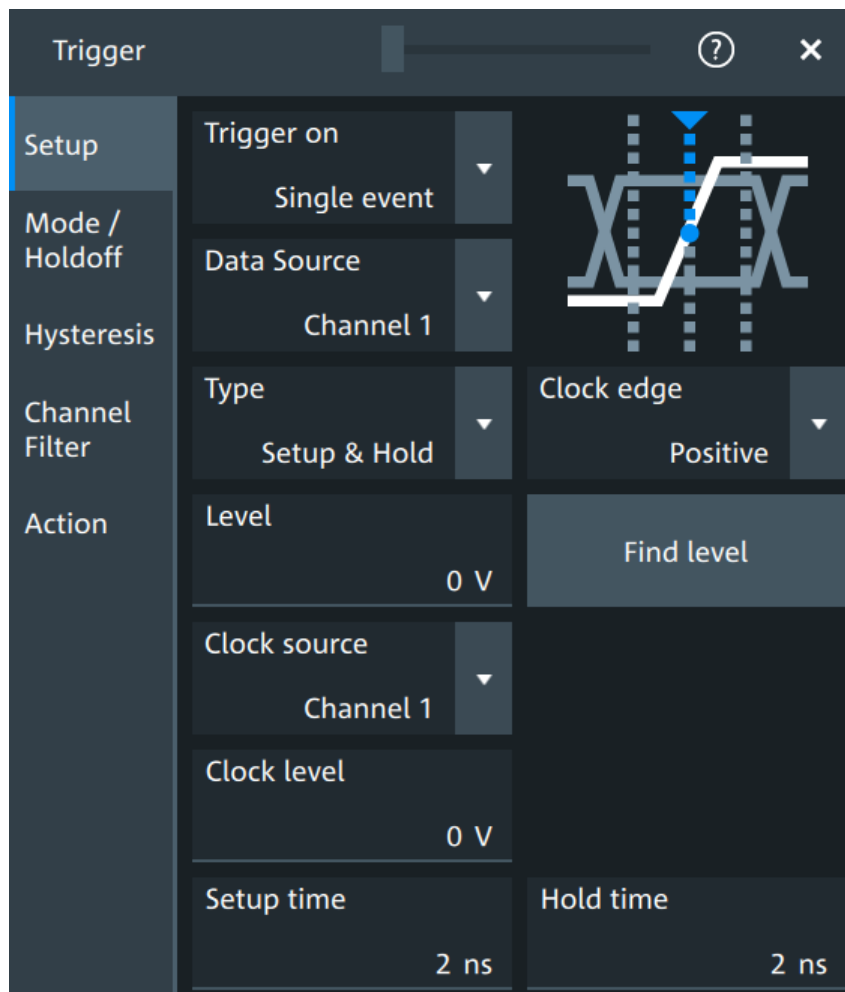**Data source**

Selects the input channel of the data signal.

Remote command:

[TRIGger:EVENT<ev>:SOURce](#) on page 606

Level

Sets the voltage level for the data signal. At this level, the setup and hold time are measured.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Clock source

Selects the input channel of the clock signal.

Remote command:

[TRIGger:EVENT<ev>:SETHold:CSOURce\[:VALue\]](#) on page 625

Clock edge

Sets the edge of the clock signal. Edge and level define the time reference point.

"Positive"	Rising edge, a positive voltage change.
"Negative"	Falling edge, a negative voltage change.
"Both"	Both the rising and the falling edge.

Remote command:

[TRIGger:EVENT<ev>:SETHold:CSOURCE:EDGE](#) on page 624

Clock level

Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Remote command:

[TRIGger:EVENT<ev>:SETHold:CSOURCE:LEVEL](#) on page 625

Setup time

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Remote command:

[TRIGger:EVENT<ev>:SETHold:STIME](#) on page 626

Hold time

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

Remote command:


[TRIGger:EVENT<ev>:SETHold:HTIME](#) on page 625

7.4.11 State trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = State"

The state trigger verifies if the channel states match the defined pattern at the clock edge. The trigger occurs if the logical combination of the input channels is true at the crossing point of the selected clock edge and the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

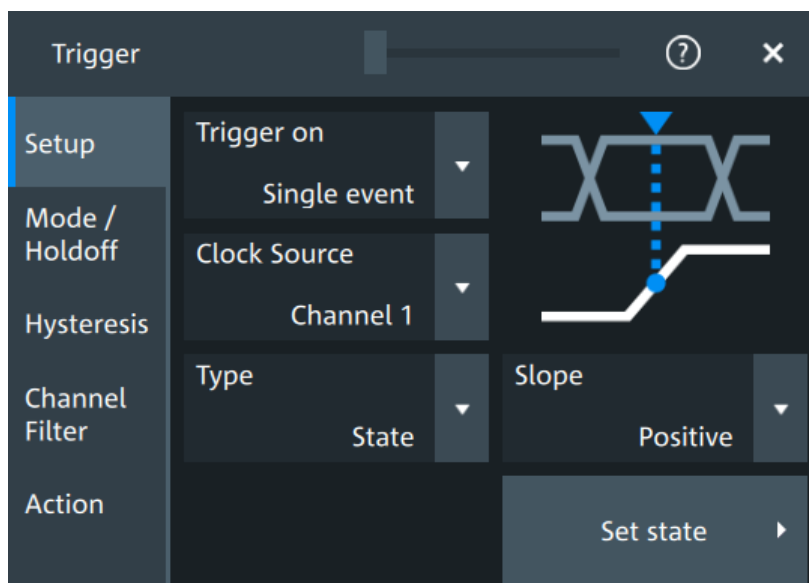

1. Select the "Clock source" and the "Slope".
2. Tap "Set state".
See [Chapter 7.4.12.2, "Settings for state and pattern trigger of analog channels"](#), on page 177 for setting details.

Slope

Sets the edge direction for the trigger.

"Positive" Selects the rising edge, which is a positive voltage change.

"Negative" Selects the falling edge, which is a negative voltage change.

"Either" Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:


[TRIGger:EVENT<ev>:STATe:SLOPe](#) on page 627

7.4.12 Pattern trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern"

The pattern trigger works like a logic trigger. It provides logical combinations of the input channels and can be used for verifying the operation of digital logic. If the channel states match the desired pattern, the pattern trigger occurs.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see [Chapter 7.2, "Common trigger settings"](#), on page 153.

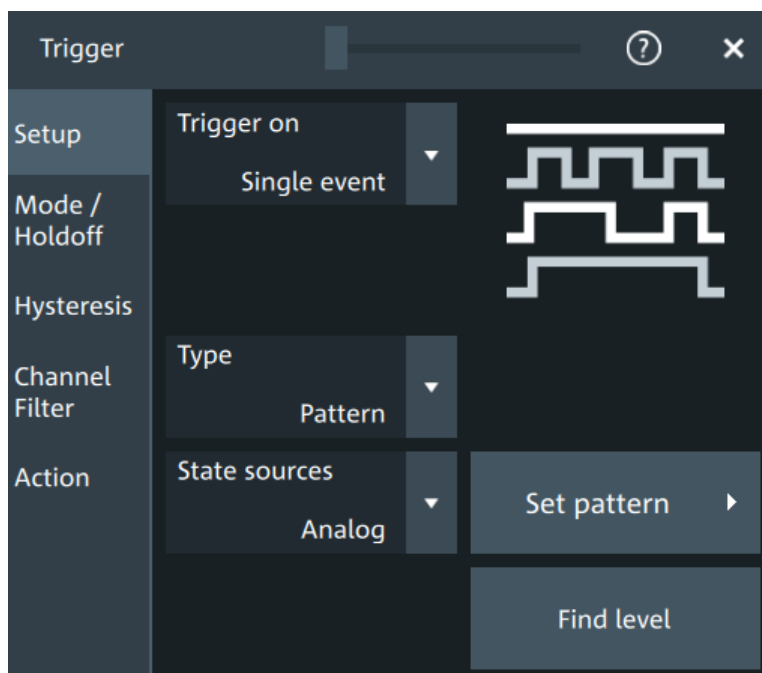

- ▶ Tap "Set pattern".
See [Chapter 7.4.12.2, "Settings for state and pattern trigger of analog channels"](#), on page 177 for setting details.

7.4.12.1 General settings

State sources

Selects if the source of the trigger for the pattern type is an "Analog" or "Digital" channel.

Remote command:

[TRIGger:EVENT<ev>:PATTern:QUALify:SOURces](#) on page 629

Set pattern

Opens a dialog for setting the pattern by defining the channel stated and logic operator..

For analog channels, see [Chapter 7.4.12.2, "Settings for state and pattern trigger of analog channels"](#), on page 177.

For digital channels, see [Chapter 7.4.12.3, "Settings for state and pattern trigger of digital channels"](#), on page 179.

Find level

Sets the trigger level automatically to $0.5 * (MaxPeak - MinPeak)$.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:

`TRIGger:FINDlevel` on page 606

7.4.12.2 Settings for state and pattern trigger of analog channels

Access for state trigger: "Menu" > "Trigger" > "Setup" tab > "Type = State" > "Set state"

Access for pattern trigger: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

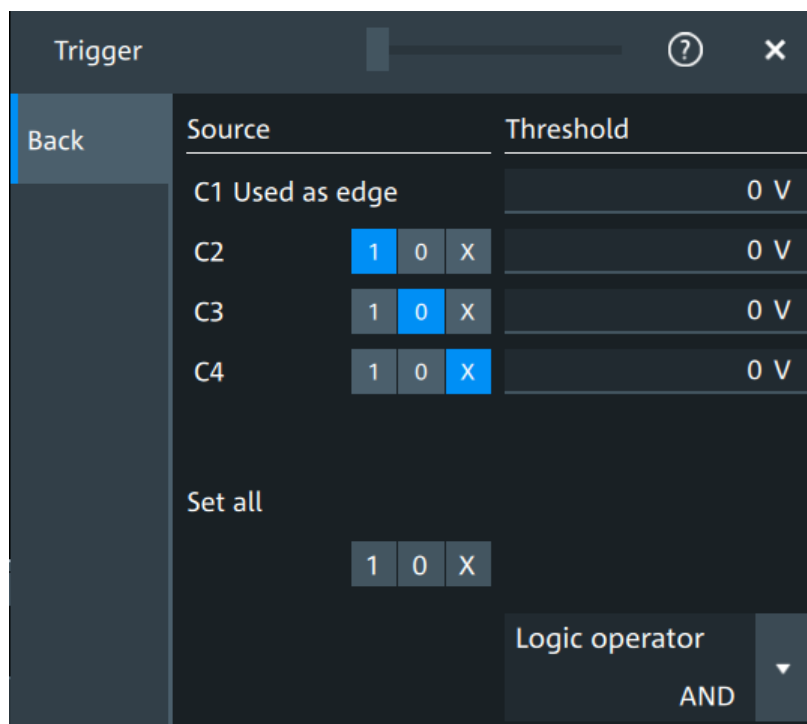


Figure 7-2: Detailed settings for state trigger

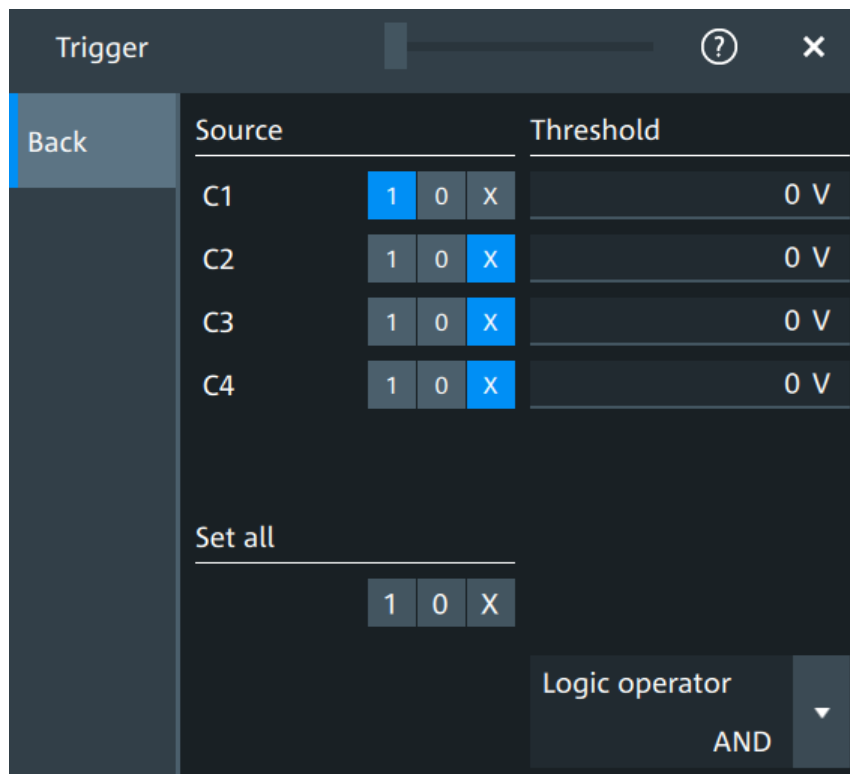


Figure 7-3: Detailed settings for pattern trigger

Source: channel states

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Remote command:

[TRIGger:EVENT<ev>:STATE:QUALify:ANALog:CHAN<n>:HLX](#) on page 626

[TRIGger:EVENT<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX](#) on page 628

Threshold

Set the threshold for each channel.

Remote command:

[TRIGger:EVENT<ev>:LEVel<n>\[:VALue\]](#) on page 606

Set all

Sets all channels to the selected state.

Logic Operator

Defines the logic combination of the channels and their states.

- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:

[TRIGger:EVENT<ev>:STATE:QUALify:LOGic](#) on page 627


[TRIGger:EVENT<ev>:PATTern:QUALify:LOGic](#) on page 629

[TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:LOGic](#) on page 629

[TRIGger:EVENT<ev>:STATe:QUALify:DIGital:LOGic](#) on page 627

7.4.12.3 Settings for state and pattern trigger of digital channels

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

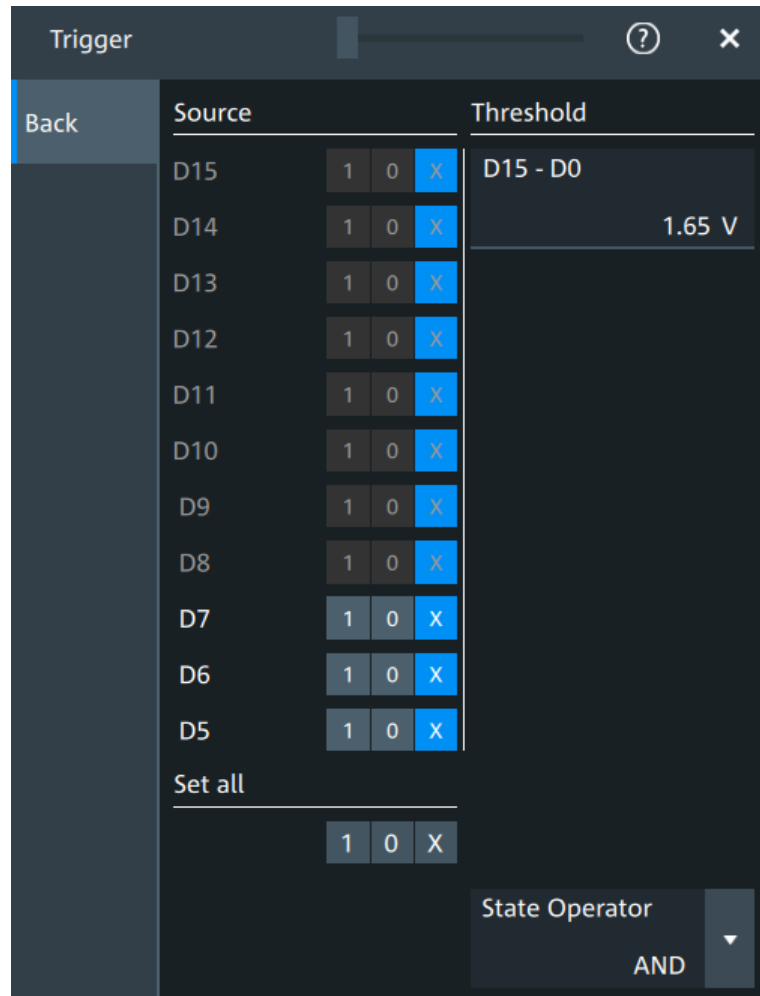

Source: channel states

Set the state for each channel.

Remote command:

[TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX](#) on page 628

[TRIGger:EVENT<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX](#) on page 628

Set all

Sets all channels to the selected state.

Logic Operator

Defines the logic combination of the channels and their states.

- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:

[TRIGger:EVENT<ev>:STATe:QUALify:LOGic](#) on page 627

[TRIGger:EVENT<ev>:PATTern:QUALify:LOGic](#) on page 629

[TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:LOGic](#) on page 629

[TRIGger:EVENT<ev>:STATe:QUALify:DIGital:LOGic](#) on page 627

7.4.13 Line trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Line"

The line trigger is an edge trigger that triggers on the AC power input and synchronizes the signal to the AC power frequency. It is not a trigger type but rather a special trigger source. Use the line source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices.

Slope

Selects the rising or falling edges of the AC power input.


Remote command:

[TRIGger:EVENT<ev>:EDGE:SLOPe](#) on page 609

7.5 Trigger mode / holdoff

Access: "Trigger" menu > "Mode / holdoff" tab

Holdoff conditions define a waiting time after the current trigger until the next trigger can be recognized.

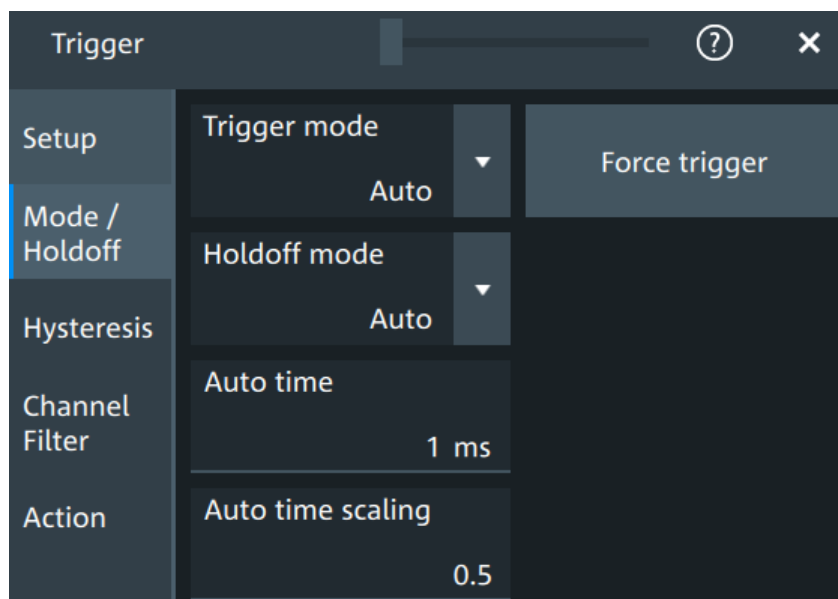

Trigger mode

Sets the trigger mode which determines the behavior of the instrument if no trigger occurs. The current setting is shown on the trigger label.

To toggle quickly between "Auto" and "Normal" mode, use the [Auto Norm] key on the front panel (in "Trigger" section).

"Auto"	The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. This mode helps to see the waveform even before the trigger conditions are set correctly. The waveform on the screen is not synchronized, and successive waveforms are not triggered at the same point of the waveform. The time interval depends on the time base settings.
"Normal"	The instrument acquires a waveform only if a trigger occurs, that is, if all trigger conditions are fulfilled. If no trigger occurs, no waveform is acquired and the last acquired waveform is displayed. If no waveform was captured before, none is displayed. When no trigger has been found for longer than one second, a message box appears that shows the time elapsed since the last trigger.
"Free run"	The instrument starts acquisition immediately and triggers after a short time interval independent of the time base settings and faster than in "Auto" mode. Real triggers are ignored. Use this mode if the "Auto" mode is too slow.

Remote command:

[TRIGger:MODE](#) on page 630

Force trigger

Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Remote command:

[TRIGger:FORCe](#) on page 630

Holdoff mode

Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Example:

For example, you want to analyze the first pulse in a burst of several pulses. At first, you select a sufficiently slow time base to display the entire burst. Then, you set the holdoff time a little longer than the length of the burst. Now, each trigger corresponds to the first pulse in successive bursts, and you can change the time base to display the waveform in more detail.

The following methods are available:

"Time"	Defines the holdoff directly as a time period. The next trigger occurs only after the "Holdoff time" has passed.
"Events"	Defines the holdoff as a number of trigger events. The next trigger only occurs when this number of events is reached. The number of triggers to be skipped is defined in "Holdoff events".
"Random"	Defines the holdoff as a random time limited by "Minimum time" and "Maximum time". For each acquisition cycle, the instrument selects a new random holdoff time from the specified range. Random holdoff prevents synchronization to discover effects invisible with synchronized triggering, for example, the features of a pulse train.
"Auto"	The holdoff time is calculated automatically based on the current horizontal scale. "Auto time scaling" defines the factor that the horizontal scale is multiplied with. "Auto time" shows the resulting holdoff time: $Auto\ time = Auto\ time\ scaling * Horizontal\ scale$.
"Off"	No holdoff

Remote command:

[TRIGger:HOLDoff:MODE](#) on page 631

[TRIGger:HOLDoff:TIME](#) on page 633

[TRIGger:HOLDoff:EVENTs](#) on page 632

[TRIGger:HOLDoff:MAX](#) on page 632


[TRIGger:HOLDoff:MIN](#) on page 633

[TRIGger:HOLDoff:AUTotime?](#) on page 631

[TRIGger:HOLDoff:SCALing](#) on page 632

7.6 Hysteresis

Access: "Menu">"Trigger" > "Hysteresis"

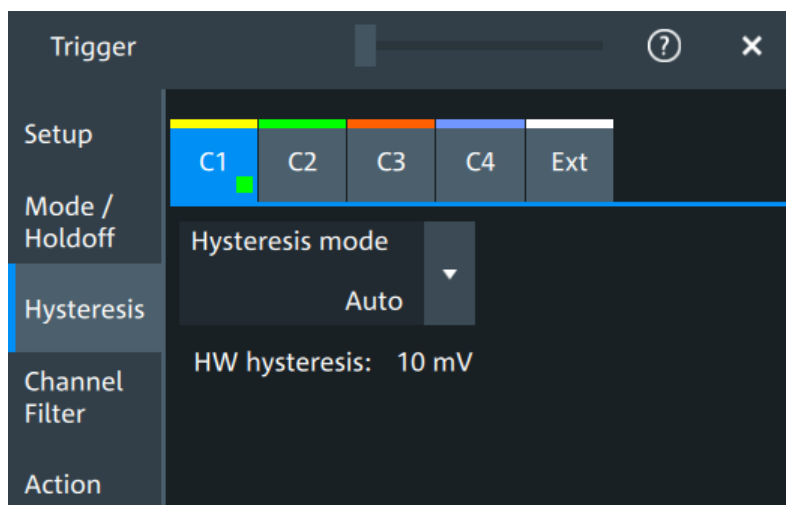

The rejection of noise by setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

HW hysteresis

Displays the hysteresis that is set by the instrument in automatic hysteresis mode.

Remote command:

[TRIGger:NOISe<m>:EFFective?](#) on page 634

Hysteresis mode

Selects how the hysteresis is set.

"Auto" Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

"Manual" The hysteresis is defined directly in absolute or relative values.

Remote command:

[TRIGger:NOISe<m>:MODE](#) on page 634

Size mode

Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Remote command:

[TRIGger:NOISe<m>:MODE](#) on page 634

Absolute hysteresis

Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Remote command:

[TRIGger:NOISe<m>:ABSolute](#) on page 633

Relative hysteresis

Defines a range in divisions around the trigger level in division or as percentage. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.


Remote command:

[TRIGger:NOISe<m>:PERDivision](#) on page 634

[TRIGger:NOISe<m>:RELative](#) on page 634

7.7 Channel filter

Access: "Menu">"Trigger" > "Channel filter"

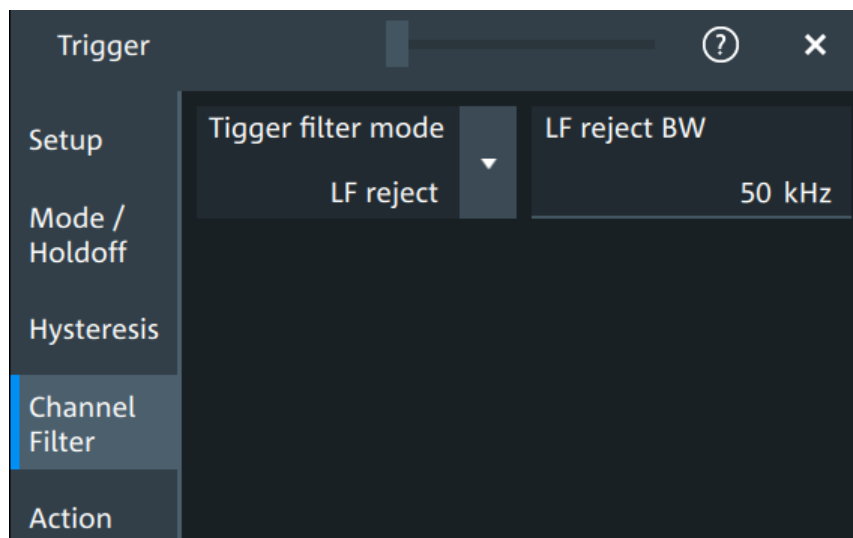

Trigger filter mode

Selects the filter mode for the trigger channel.

- "Off" The trigger signal is not filtered.
- "LF reject" Frequencies lower than the "LF reject BW" are rejected, higher frequencies pass the filter.
- "RF reject" Frequencies higher than the "RF reject BW" are rejected, lower frequencies pass the filter.

Remote command:

[TRIGger:FILTermode](#) on page 635

LF reject BW

Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.

Remote command:

[TRIGger:LFReject](#) on page 635

RF reject BW


Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Remote command:

[TRIGger:RFReject](#) on page 636

7.8 Actions on trigger

Access: "Menu" > "Trigger" > "Action" tab

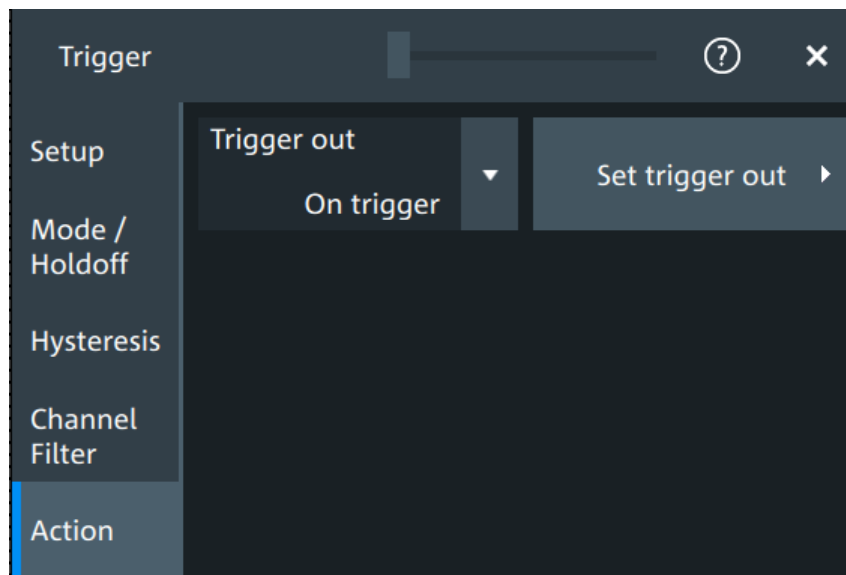

The action settings define what happens when a trigger occurs. All available actions can be initiated at the same time.

Trigger out

Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.


To adjust the outgoing signal, tap "Set trigger out".

Remote command:

[TRIGger:ACTions:OUT:STATe](#) on page 636

Set trigger out

Opens a dialog to adjust the trigger out pulse.

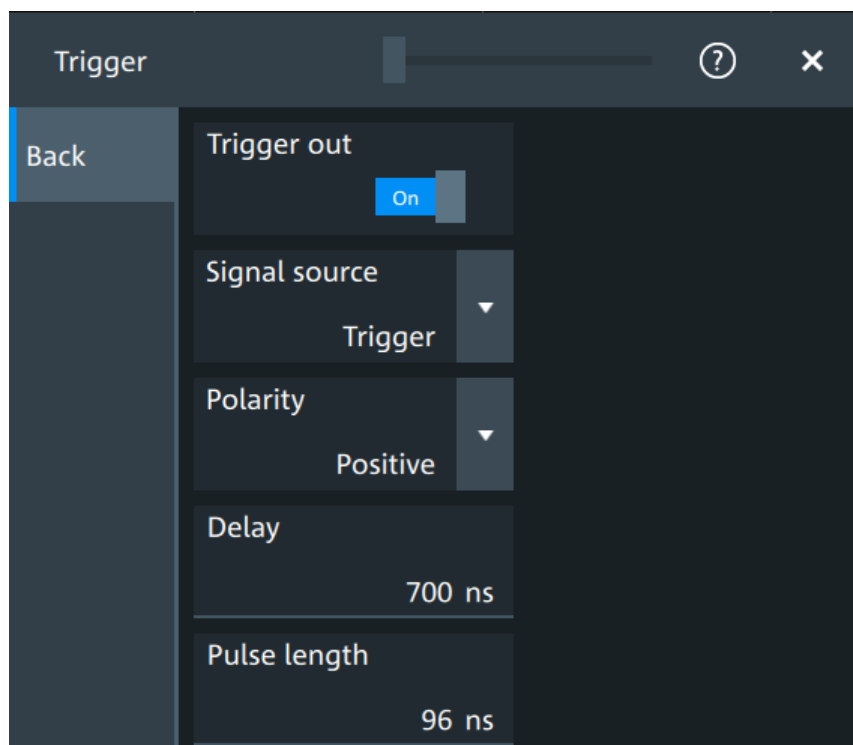**Trigger out** ← **Set trigger out**

Activates the outgoing pulse on the [Trigger Out] connector on the rear panel.

Remote command:

[TRIGger:ACTions:OUT:STATE](#) on page 636

Signal source ← **Set trigger out**

Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Remote command:

[TRIGger:ACTions:OUT:SOURce](#) on page 636

Polarity ← **Set trigger out**

Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Remote command:

[TRIGger:ACTions:OUT:POLarity](#) on page 637

Delay ← **Set trigger out**

Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Remote command:

[TRIGger:ACTions:OUT:DELay](#) on page 637

Pulse length ← **Set trigger out**

Sets the length of the trigger out pulse.

Remote command:

[TRIGger:ACTions:OUT:PLENgtH](#) on page 637

7.9 Zone trigger

The zone trigger triggers on the intersection or non-intersection of the signal and one or more zones. The zone can be applied to any active input signal, math waveform and spectrum (norm).

You can use the zone trigger, for example, to solve the following tasks:

- Triggering on differential math signals.

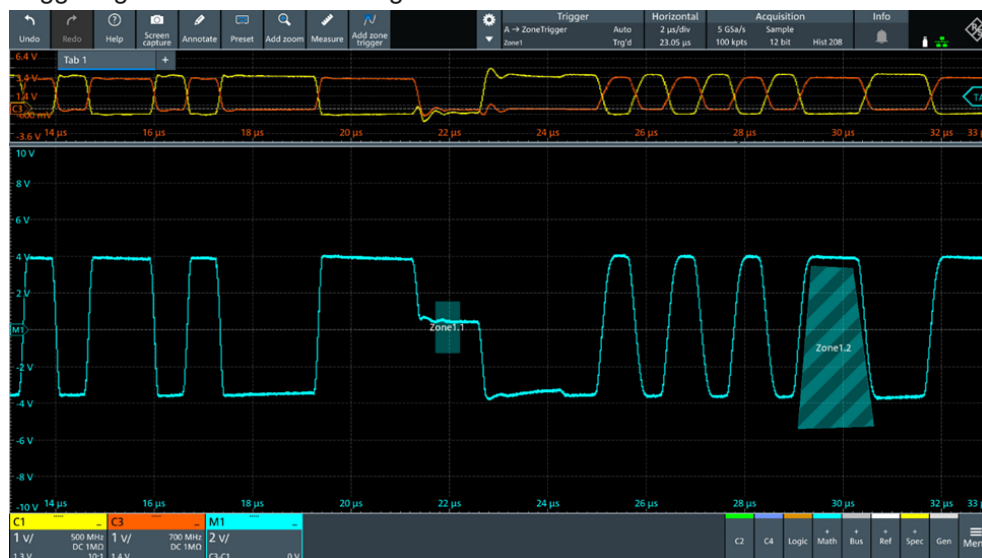


Figure 7-4: Zone trigger on math

- Trigger if a peak in the spectrum occurs: define a zone in the spectrum diagram to filter amplitude peaks.

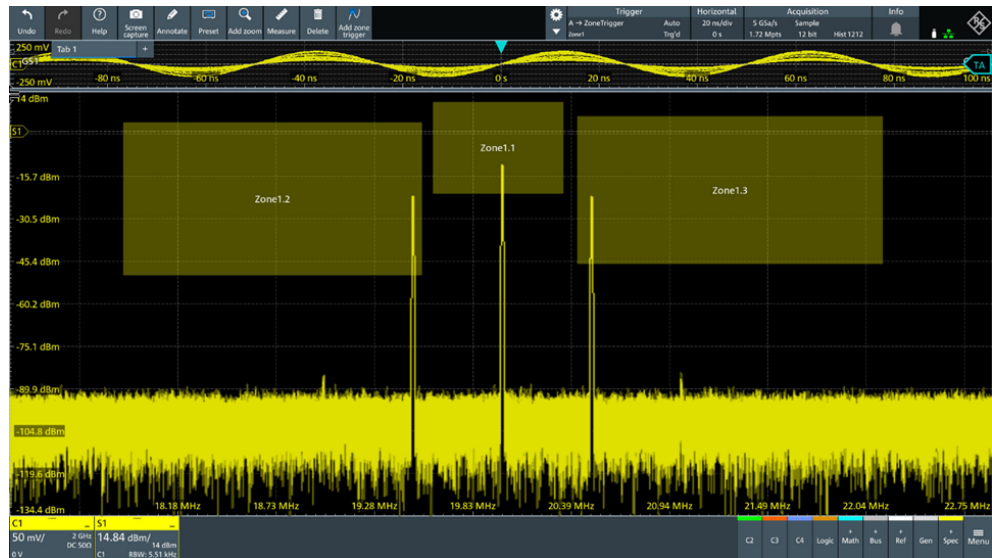


Figure 7-5: Zone trigger on spectrum

- Separate rising and falling edges: define a zone around the base or top of the digital signal.

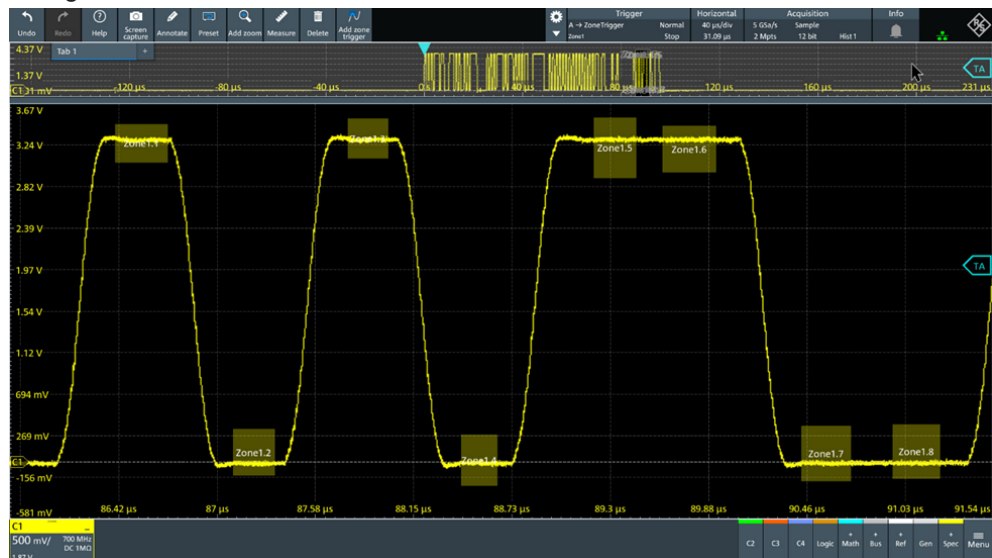


Figure 7-6: Zone trigger on digital serial pattern

- Zoom on a trigger event, even when capturing large amounts of time

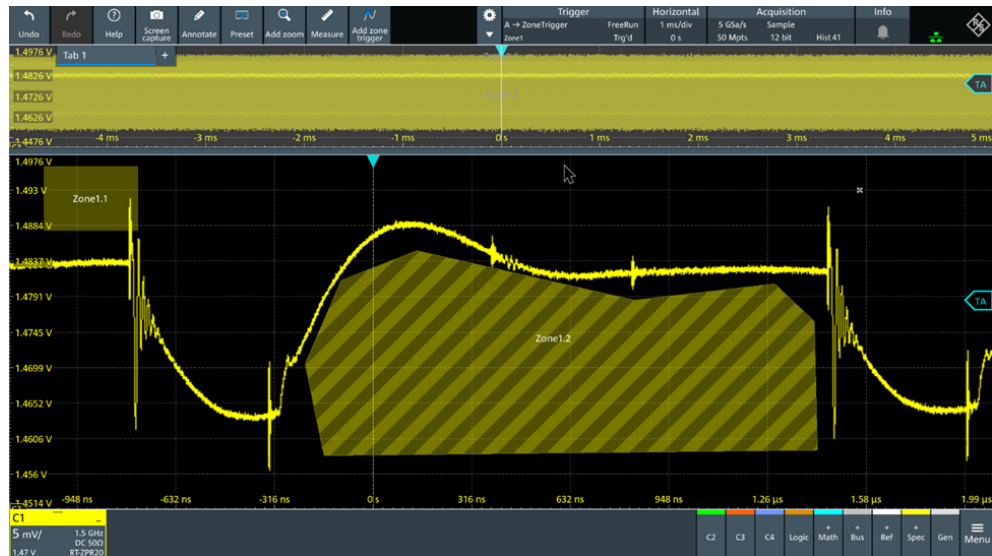


Figure 7-7: Zoom on a zone trigger in the mV and ns range

- Filter events in the history after the acquisition has finished

In a sequence, the zone trigger acts like a filter on previous acquisitions. Previous conditions and then the zone condition must be fulfilled. For example, in an "A → Zone" sequence, the trigger marker is set to the A event, and a corresponding trigger-out signal is sent when the zone condition is fulfilled.

Trigger zone definition

With the MXO 4 you can define up to 4 trigger zones consisting of up to 8 different areas.

A zone consists of up to 8 areas associated with a single source.

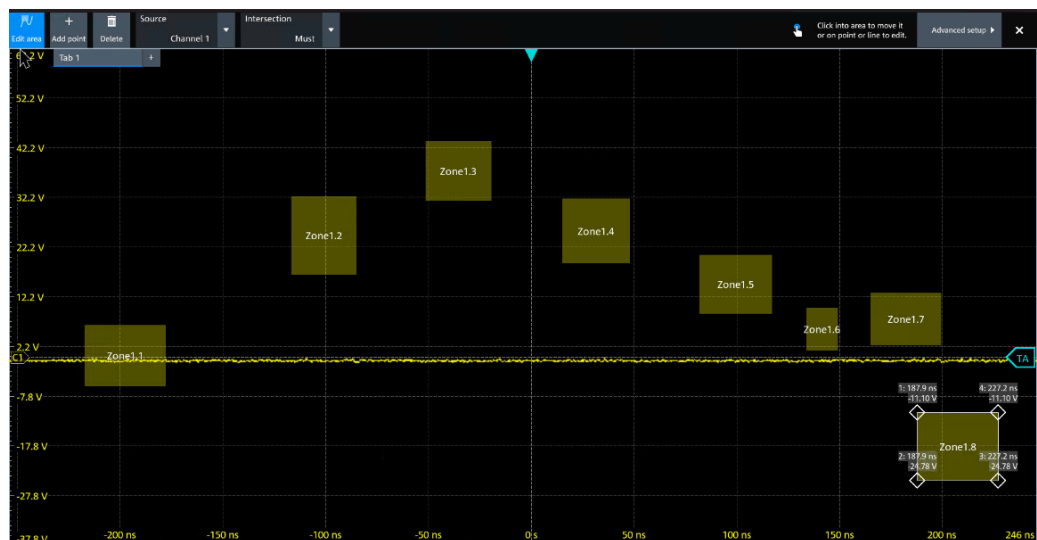


Figure 7-8: 1 trigger zone with 3 areas

The zone is applied to the diagram onto which it is drawn and has the color of the source. All areas of the zone have to be in the same diagram. If a zone is shown in a diagram for which it is not applied, for example in a Zoom diagram, it is shown in a gray color.

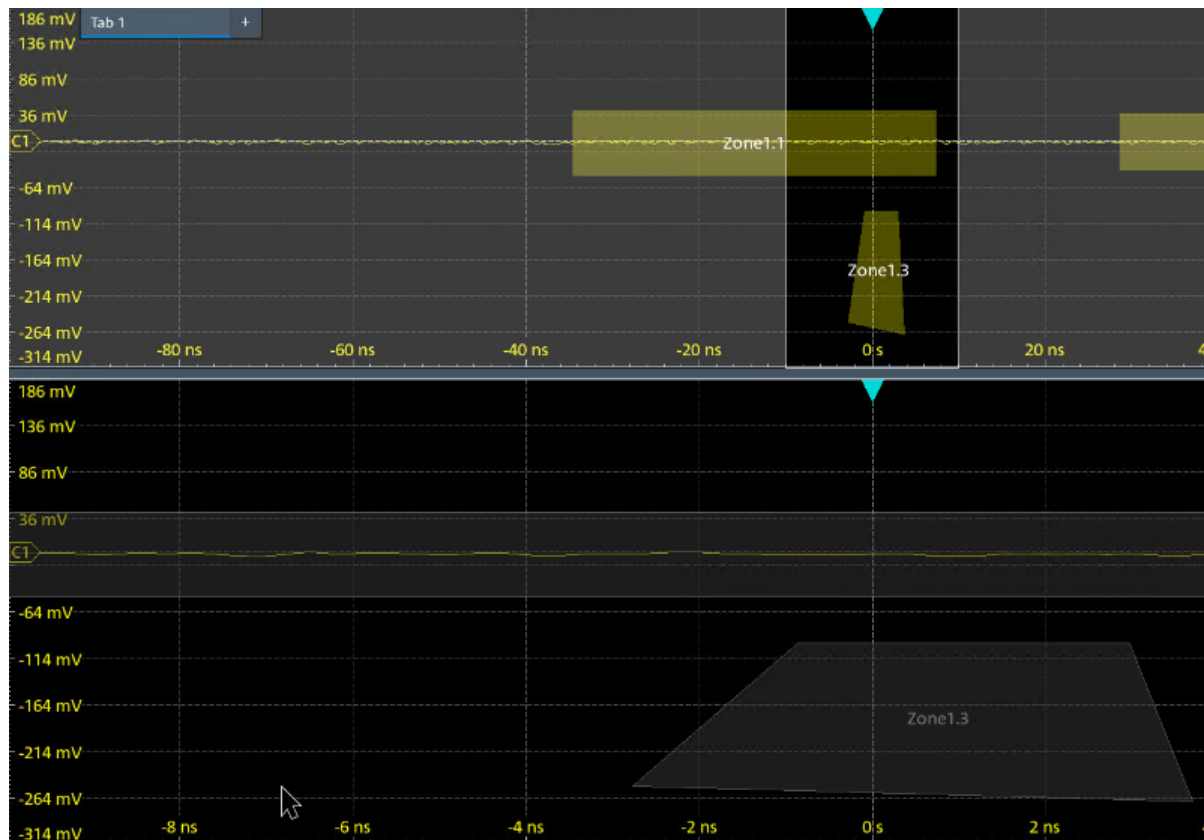


Figure 7-9: Trigger zone and a zoom diagram

Trigger area definition

An area is defined as part of the zone for a trigger. The area has the following characteristics:

- An area is a polygon that is applied against a captured waveform.

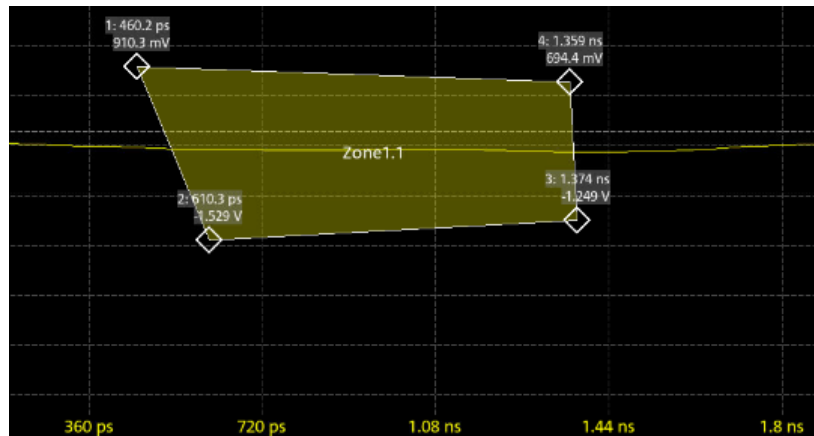


Figure 7-10: 1 area of a trigger zone

- An area can be defined from 3 up to 16 sides.



Figure 7-11: Area sizes

- 1 = 3 point area with "Intersection" = "Must not"
- 2 = 16 point area with "Intersection" = "Must"

- Next to each point the number of the point and the horizontal and vertical values are shown.

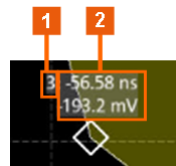


Figure 7-12: Area point definition

- 1 = Number of the point
- 2 = Horizontal and vertical values of the point

- An area has a defined intersect condition, defining if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area. On the screen, an area that fulfills a "Must" condition has a solid fill in the color of the source channel. An area that fulfills a "Must not" also has the same color as the source channel, but is striped.

7.9.1 Creating trigger zones and areas

You can define the trigger zones on the display through the toolbar:

To add trigger zones and areas

1. Tap the "Add zone trigger" icon on the toolbar.



The trigger zone toolbar opens.



2. Select the "Source" of the zone.
3. Select if the signal must violate the zone to cause a trigger ("Intersect" = "Must"), or vice versa ("Intersect" = "Must not").
4. Tap on "Add zone".
5. Draw a rectangle in the diagram to create the first area of a new zone trigger.
6. To add more areas to the zone, tap on "+ Area".




7. Draw a rectangle in the diagram to add a new trigger area.
8. Select if the signal must violate the area to cause a trigger (must intersect), or vice versa (must not intersect).

To edit an existing area

1. Tap on an existing zone area.
2. To change the shape of the zone area, tap the corner points of the zone on the SmartGrid.
3. Move the point to the required coordinates on the SmartGrid.
4. If necessary, add more points to the zone area:


- a) In the toolbar, tap "Add point".

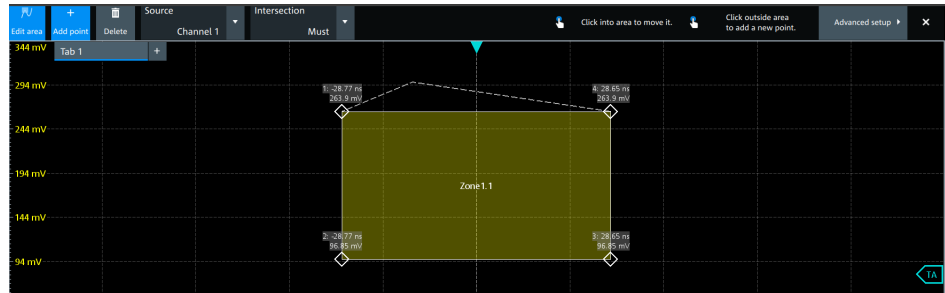

- b) Tap outside of the area to add the new point.
 c) If necessary, add more points.
 d) If necessary to change the coordinates of a point, tap on it and move it.

To delete an area or point

1. In the "Edit area" toolbar, tap on the delete icon.
2. Tap on the area that you want to delete or edit.

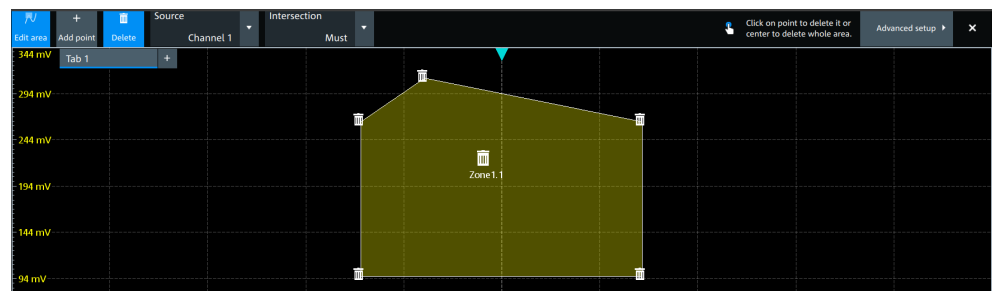



Delete icons appear at the area points and in the middle of the area.

3. To delete a point from the area, tap on the delete icon on top of the point.
4. To delete the whole area, tap on the delete icon in the middle of the area next to the area "Label".

7.9.2 Zone trigger setup settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Setup" tab.

In this dialog you can add areas to your trigger zone and display them.

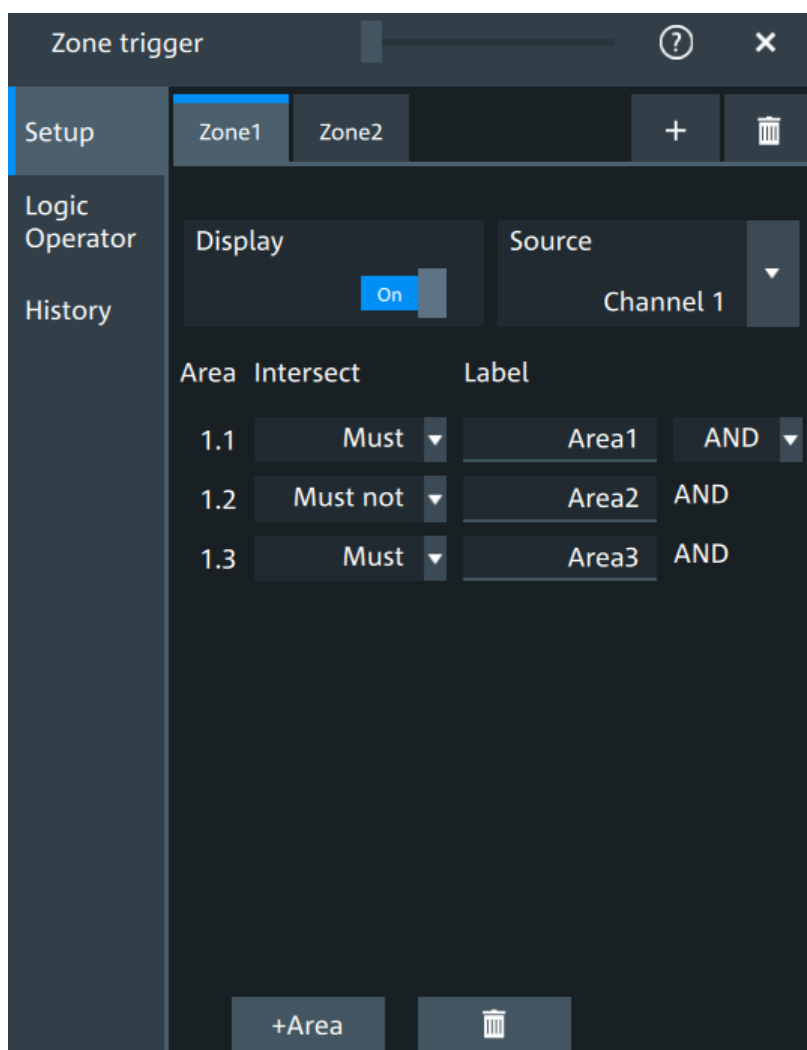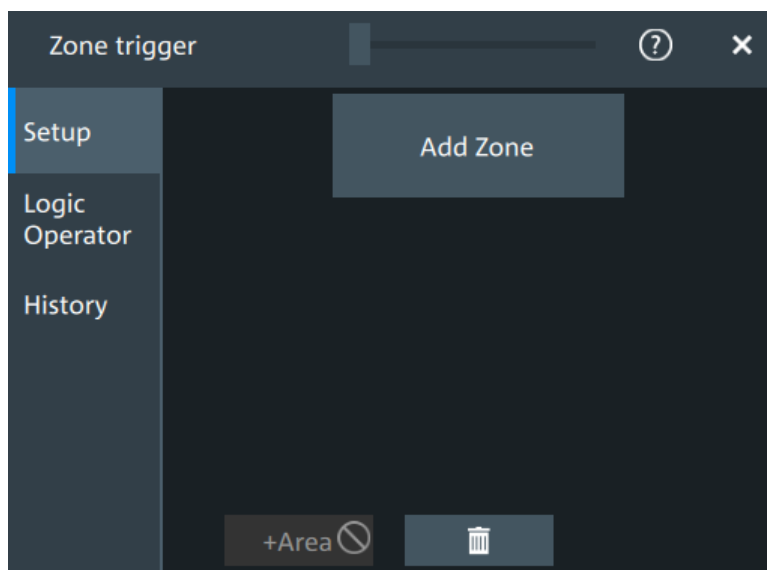

Add zone, 

Adds a new trigger zone. You can add up to four zones.

Remote command:

`ZONE<m>:ADD` on page 639

Display

Enables the display of the zone on the screen.

Remote command:

`ZONE<m>[:VISible]` on page 643

Source

Sets the source of the zone trigger. The zone can be applied to any active input signal, math waveform, spectrum and power.

Remote command:

`ZONE<m>:SOURce` on page 643

Area

Defines the area and its condition for the zone.

- "Add area" Adds a new area to the zone. You can add up to 8 areas.
- "Intersect" Defines if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area.
- "Label" Defines a label for the selected area.
- Condition Sets the logic combination that has to apply for all areas in a zone. Available are "AND" or "OR".

Remote command:

`ZONE<m>:AREA<n>:ADD` on page 639

`ZONE<m>:AREA<n>:COUNT` on page 639

`ZONE<m>:AREA<n>:INTERsect` on page 640

`ZONE<m>:AREA<n>:LABEL` on page 640

`ZONE<m>:ACOMBination` on page 639

Delete icon

Enables the removal of areas of the zone.

You can also delete all current areas with "Delete All".


Remote command:

`ZONE<m>:REMOve` on page 643

`ZONE<m>:AREA<n>:REMOve` on page 642

7.9.3 Logic operator settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Logic Operator" tab.

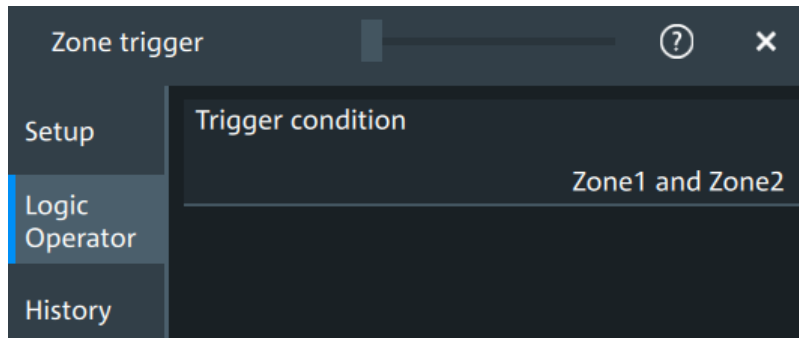


Trigger condition

Sets a logical expression for the trigger condition between different defined zones.

If all required zones are defined, you can type the logical expression directly, or use the trigger condition editor.

Double-click on the "Trigger condition" field to open the editor:

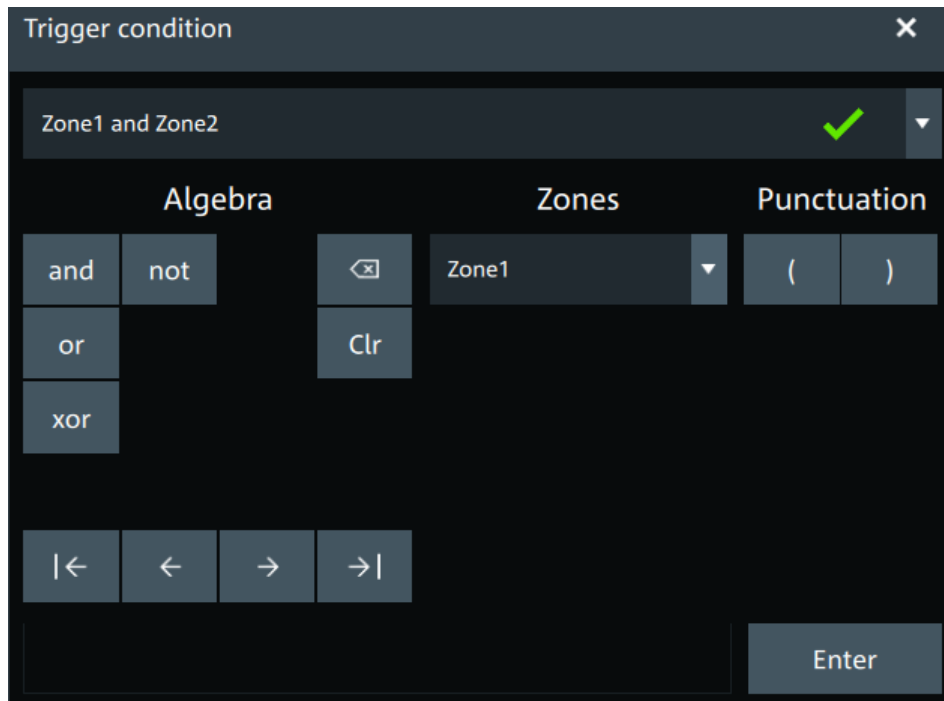

The keys of the "Trigger condition" editor are described in [Trigger condition keys](#).

Table 7-1: Trigger condition keys

Icon	Description
and	And
not	Must not intersect
or	Or
"xor"	Exclusive or
"Zone"	Selects the zone


Icon	Description
"Clr"	Clear expression in editor
(Left bracket to enclose operands
)	Right bracket to enclose operands
←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→	Moves cursor to end

Remote command:

[TRIGger:ZONE:EXPReSSion\[:DEFine\]](#) on page 638

7.9.4 History settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "History" tab.

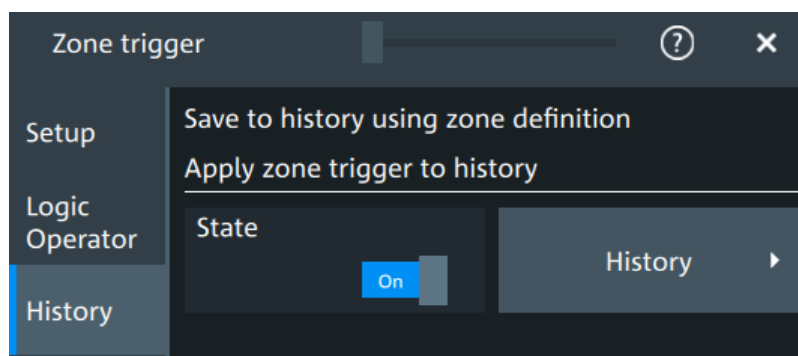

Apply zone trigger to history

If enabled, applies the zone trigger condition to the acquisitions in the history memory.

The history saves only acquisitions that fulfill the trigger condition that is set during acquisition (zone trigger condition, or another trigger condition).

Using "Apply zone trigger to history", you can:

- Acquire waveforms with high speed and filter them afterwards in the history.
- Change the zone trigger condition after acquisition.

Remote command:

[TRIGger:ZONE:HISTory](#) on page 638

8 Waveform analysis

This chapter describes general methods to check and analyze waveforms. These are:

- [Zoom](#)..... 198
- [Mathematics](#).....202
- [History](#).....213
- [Reference waveforms](#)..... 219

8.1 Zoom

The zoom magnifies a part of the waveform to view more details. The zoom is applied to all waveforms that are visible in a diagram.

For each diagram, you can define one zoom area.


- You can define the zoom by drawing, moving and adjusting the zoom area on the touchscreen.
- You can precisely define the size of the zoom area by entering start and stop values in a dialog box.

Zoom areas can be used for gating, for example, to define a measurement gate. You can set the gate exactly to the limits of the zoom.

8.1.1 Zoom settings

Access: "Menu" > "Horizontal" > "Zoom" tab.

The "Zoom" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

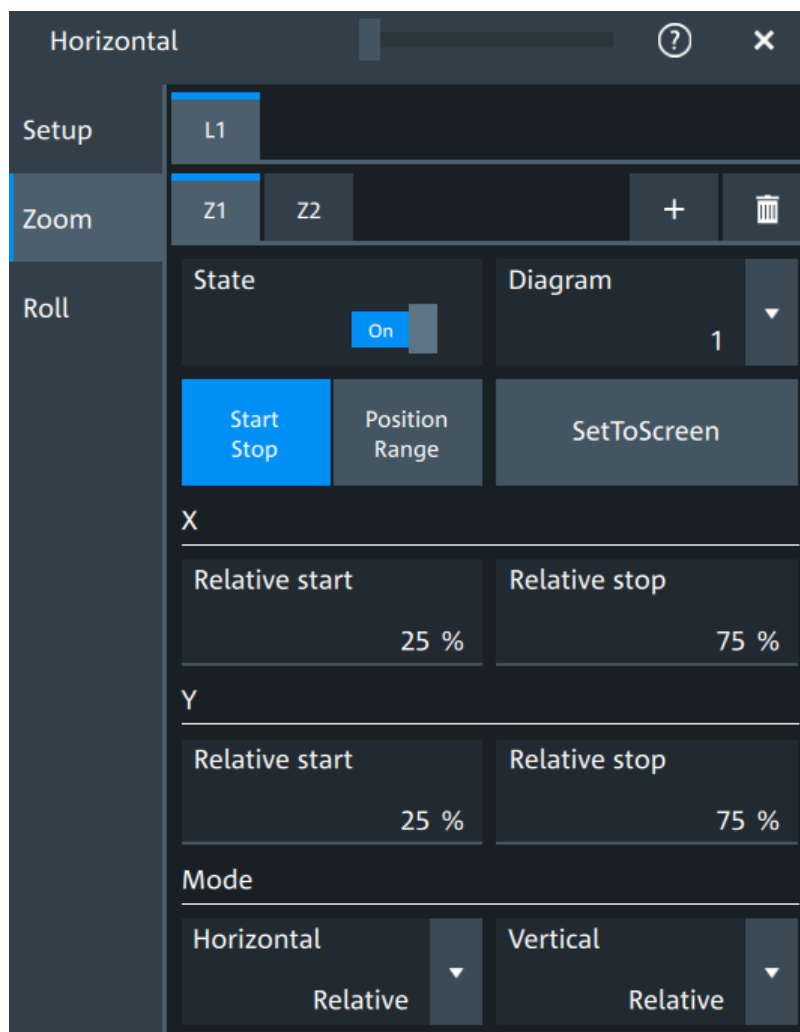**Tabx**

Selects one of the enabled SmartGrid layouts.

Zx

Selects the zoom window. You can add up to 4 different zooms.

State

Enables the zoom.

Remote command:

[LAYout<ly>:ZOOM<zo>\[:ENABle\]](#) on page 645

Diagram

Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.

Remote command:

[LAYout<ly>:ZOOM<zo>:SOURce](#) on page 649

Start Stop, Position range

Selects how the window for the zoom diagram is defined. You can select between defining "Start Stop" values or "Position range".

Start Stop

The "Start Stop" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

According to the selected "Mode", absolute or relative values are used.

"Start", "Relative start"

Defines the lower limit of the zoom area on the axis.

"Stop", "Relative stop"

Defines the upper limit of the zoom area on the axis.

Remote command:

[LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:START](#) on page 646

[LAYout<ly>:ZOOM<zo>:HORizontal:RELative:START](#) on page 648

[LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP](#) on page 646

[LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP](#) on page 648

[LAYout<ly>:ZOOM<zo>:VERTical:RELative:START](#) on page 651

[LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:START](#) on page 650

[LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP](#) on page 652

[LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP](#) on page 650

Position range

If "Position range" is selected, you specify the x and y position of center point of the zoom area plus a range for the x- and y-axes. The area defined by that point and the ranges is zoomed. You can set absolute values or relative values (in percent of the screen, depending on the "Mode" selection).

"Range" Defines the width or height of the zoom area.

"Position" Defines the x or y value of the centerpoint of the zoom area.

Remote command:

[LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition](#) on page 645

[LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition](#) on page 647

[LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN](#) on page 646

[LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN](#) on page 648

[LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition](#) on page 649

[LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition](#) on page 651

[LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN](#) on page 650

[LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN](#) on page 652

Set to screen

Sets the zoom area to the whole screen.

Remote command:

[LAYout<ly>:ZOOM<zo>:SSCReen](#) on page 652

Mode

Defines if absolute or relative values are used to specify the "Horizontal" (x-axis) and the "Vertical" (y-axis) values.

Remote command:

[LAYout<ly>:ZOOM<zo>:HORizontal:MODE](#) on page 647

[LAYout<ly>:ZOOM<zo>:VERTical:MODE](#) on page 651

 
8.1.2 Zooming for details**To define the zoom area on the touchscreen**

For graphical zooming, you use your finger on the screen.

1. On the toolbar, tap the "Add zoom" icon.



The zoom overlay menu opens.



2. Draw a rectangle in the diagram that defines the zoomed area.
While you drag your finger on the touchscreen, a dotted rectangle indicates the current zoom area.
The indicated area is magnified in a new zoom diagram. The original diagram shows the zoom area as a rectangle.
3. If the position of the zoom area is not correct, drag the rectangle in the overview to the correct position.
4. If the size of the zoom area is not yet ideal, tap the rectangle in the overview diagram.
Now, 4 white lines indicate the edges of the zoom area. A dashed white line indicates the selected edge, which you can adjust.
5. Touch the edge that you want to move. Drag it to the required position.

To create a zoom using the zoom dialog box

- ▶ If you want to create a new, unconfigured zoom, tap the "Add" icon.

**To define the zoom area numerically using start/stop values**

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Start Stop".

3. Select a value for "Mode" > "Horizontal" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. For "X", define the "Relative start" and "Relative stop" values. They define the lower and upper borders of the zoom area on the x-axis.
5. Select the "Mode" > "Vertical" to define "Absolute" or "Relative" y-axis values.
6. For "Y", define the "Relative start" and "Relative stop" values. They define the lower and upper borders of the zoom area on the y-axis.

When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

To define the zoom area numerically using position and range values

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Position range".
3. Select "Mode" > "Horizontal" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. Under "X" > "Position", define the x-value of the center point of the zoom area.
5. Under "X" > "Range", define the width of the zoom area.
6. Select the "Mode" > "Vertical" to define "Absolute" or "Relative" y-axis values.
7. Under "Y" > "Position", define the y-value of the center point of the zoom area.
8. Under "Y" > "Range", define the height of the zoom area.

When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

8.2 Mathematics

Math waveforms are calculated waveforms. You can define up to 5 math waveforms and display them on the screen, and use it as source for further analysis.

It is calculated out of one or two analog channels, or another math waveform using several predefined operations. You can define up to 5 equations. The complete configuration is called equation set and can be saved for later use.

You can analyze math waveforms in the same way as channel waveforms: use zoom, perform automatic and cursor measurements, and save as reference waveform.

You can store a math waveform as a reference waveform and restore it later. See [Chapter 8.4, "Reference waveforms"](#), on page 219.

8.2.1 Creating math waveforms

Math waveforms are created and displayed in addition to the channel and other waveforms. They can also be used for analysis, e.g. measurements, even if the math waveform is not active.

1. Open "Menu" > "Math" > "Setup".
Alternatively, press the [Math] key.
2. Define the mathematic operation with one of the following methods:
 - Use basic operations in "Operator" subtab.
 - Define a filtered waveform in the "Filter" subtab.
 - Create a mathematic equation in the formula editor on the "Equation" subtab.

3. Enable "Display".

The math waveform is displayed on the screen. A green dot in the math waveform tab indicates that the waveform is active.




4. To change the vertical scaling of the math waveform, open the "Scale" tab.
5. Set the "Scale mode" to "Manual".
6. Enter the "Vertical scale" factor (per division). If necessary, add a "Vertical offset".
By default the instrument performs an automatic scaling.
7. Close the "Math" dialog box.

8.2.2 General math waveforms settings

Access: [Math] > "Setup" tab


You can define up to five different math waveforms. Each waveform is defined in a separate tab in the "Math" dialog box ("M1" to "M5").

You can also find a summary of the state of all math channels in the "All" tab.

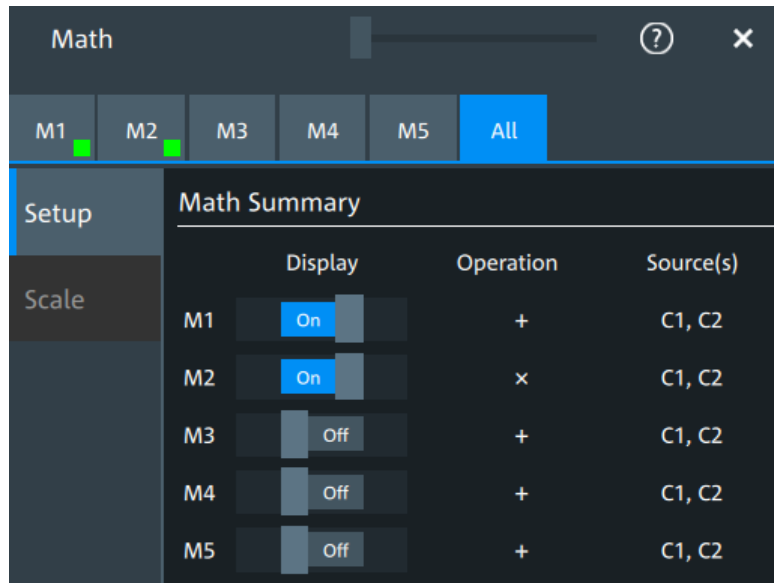

This section describes the general settings in the "Setup" tab. The subtabs for the definition of the mathematic operation are explained separately:

- [Chapter 8.2.3, "Operator settings"](#), on page 205
- [Chapter 8.2.4, "Filter settings"](#), on page 206
- [Chapter 8.2.5, "Equations"](#), on page 207

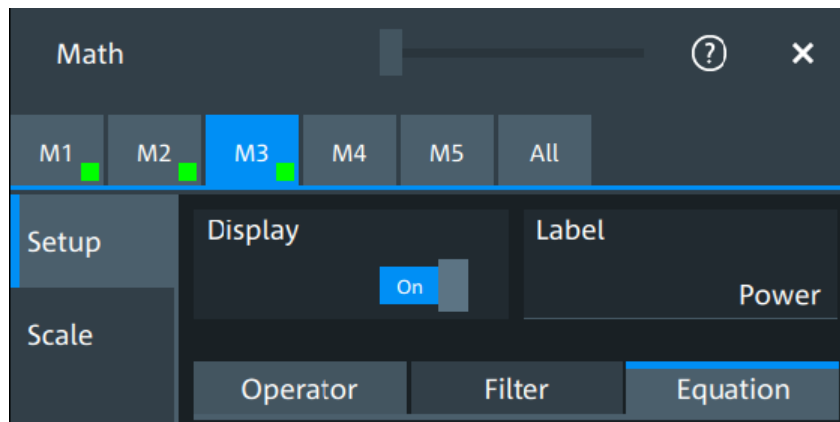

Display

Activates the selected Math channel and displays the defined math waveforms.

Remote command:

[CALCulate:MATH<m>:STATe](#) on page 653

Label

Defines a label for the selected math waveform.


Remote command:

[CALCulate:MATH<m>:LAbel](#) on page 654

8.2.3 Operator settings

Access: [Math] > "Setup" tab > "Operator".

To create simple math waveforms, use the settings in the "Operator" subtab. It provides common math functions.

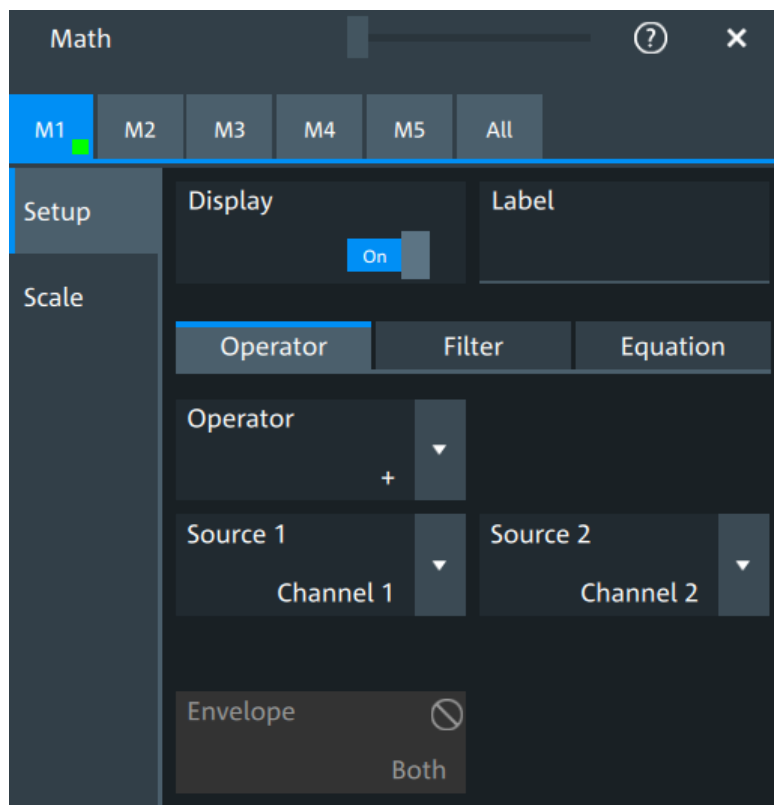

Operator

Defines the type of operation to be performed on the selected signal sources.

The following functions are available:

"+"	Adds the values of 2 sources (channel or math waveform).
"-"	Subtracts source 2 from source 1.
"x"	Multiplies the two sources.
"/"	Divides source 1 by source 2.
"1/x"	Calculates the reciprocal of the source.
"- x"	Calculates the negative value of the source.
" x "	Determines the absolute value of the source.
" $\Delta x/\Delta t$ "	Differentiates the source value relating to the time value. Not possible on envelope waveforms and waveforms with "Peak detect" decimation.
"Integral"	Calculates the definite integral of the source.
"log(x)"	Calculates the logarithm of the source value based on 10.

"ln(x)"	Calculates the natural logarithm of the source value (based on e).
"ld(x)"	Calculates the binary logarithm of the source value (binary logarithm, based on 2).
"x ² "	Squares the source. If the source contains negative values that have been clipped, then the result contains positive clipping.
"√x"	Calculates the square root of the source. Note that the square root of a negative number is undefined and the result is clipped.
"Rescale"	Rescaling of x.

Remote command:

[CALCulate:MATH<m>\[:EXPRession\]\[:DEFine\]](#) on page 653

Source 1, Source 2

Defines the signal source to be evaluated by the math function.

a, b

Define the values for the rescale function, if "Operator" = "Rescale"

"a"	Multiplication factor
"b"	Offset of the signal source on the y-axis.

Noise reject

Only available for "Operator" = "Δx/Δt".

Sets the number of neighboring samples that are skipped for differentiation.

To suppress noise effects during differentiation, it can be useful not to consider two directly neighboring points to calculate $dx (x_n-x_{n-1})$. Instead, some samples in-between are skipped and a point a few samples further is used (e.g. x_n-x_{n-3}).

Envelope wfm selection


Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Remote command:

[CALCulate:MATH<m>:ENVSelection](#) on page 656

8.2.4 Filter settings

Access:[Math] > "Filter" tab

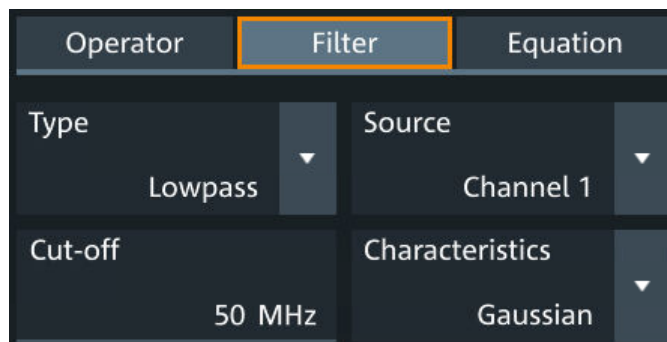

The finite impulse response filter is a filter to create filtered math waveforms with low-pass or highpass. The filter requires additional settings.

In remote control, filter settings are defined in the expression string, see [CALCulate: MATH<m>\[:EXPRession\]\[:DEFine\]](#) on page 653.

Type

Selects if the filter is highpass or lowpass.

Source 1

Selects the input channel of the signal.

Cut-off

Sets the limit frequency for the filter.

Cutoff frequency for lowpass filter

The cutoff frequency depends on the horizontal resolution and the filter characteristics. The frequency for the lowpass filter can only be set in this range:

$f_{g_3dB} = (0.001 \dots 0.2) * f_{a_in}$ for Gaussian FIR filter

$f_{g_3dB} = (0,001 \dots 0.4) * f_{a_in}$ for rectangular FIR filter

Where: f_{g_3dB} = cutoff frequency to be set for the lowpass filter, and f_{a_in} = reciprocal of the resolution, or sample rate.

Cutoff frequency for highpass filter

To check the limit frequency for the highpass filter, convert it to an equivalent lowpass frequency:

$f_{LP} = f_{a_in}/2 - f_{HP}$

Where f_{HP} is the requested highpass limit frequency and f_{LP} the equivalent lowpass frequency that has to comply with the limits given above.

Characteristics

Selects if a Gaussian or a rectangular shape is used for the lowpass filter. The highpass filter always uses Gaussian.

8.2.5 Equations

In the "Equation" tab, you can enter complex formulas to define a math waveform. The formula editor helps to enter formulas easily with correct syntax, using a large selection of operators and signal sources.

1. In the "Math" dialog, open the "Equation" tab.
2. Double-tap on "Math formula" to display the formula editor.

8.2.5.1 Math formula editor

Using the formula editor you can define math functions freely, using a selection of operators and signal sources.

8-1 shows an overview of the math formula dialog and its different sections. The separate functions are described below.

For a procedure to create equations, see [Chapter 8.2.5.2, "Defining a formula in the formula editor"](#), on page 211.

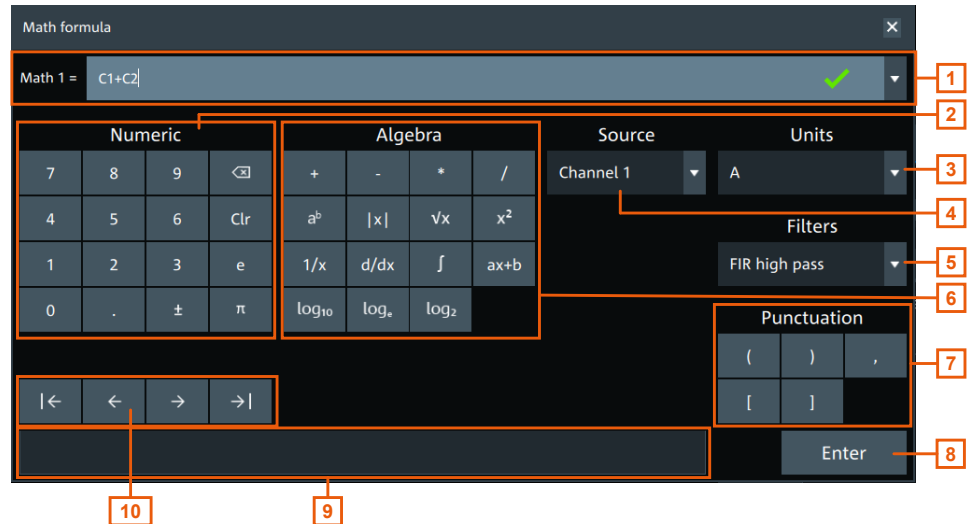


Figure 8-1: Math formula editor overview

- 1 = [Math expression](#)
- 2 = [Numeric](#)
- 3 = [Unit](#)
- 4 = [Source](#)
- 5 = [Filters](#)
- 6 = [Algebra](#)
- 7 = [Math punctuation](#)
- 8 = "Enter": press to complete the equation entry . The button is grayed out if the expression is not valid.
- 9 = Information display: additional information about the selected function is displayed.
- 10 = [Cursor keys](#)

Math expression

Use the various buttons of the editor to assemble the equation. If a keyboard is connected to the instrument and you know the exact syntax, you can also type the equation. You can see immediately whether the input is complete and correct.

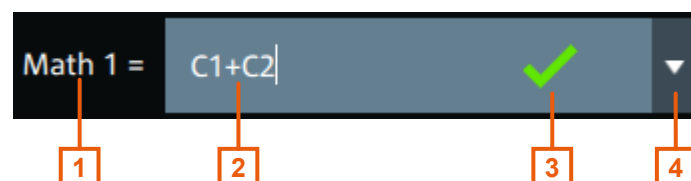


Figure 8-2: Math expression line

- 1 = Indicates the math waveform that is configured, e.g "Math 1" = "M1"
- 2 = Math expression input field
- 3 = Displays the status of the current expression: valid or not
- 4 = Displays a list of the last 20 used expressions

Buttons of the formula editor and their usage

Table 8-1: Source

Unit	Description
Analog channels	All analog channel waveforms of the device
Other math waveforms	All math waveforms of the device
Track channels	All track waveforms of a device
Reference	All reference waveforms of the device for which the source of reference is an analog channel (e.g. R3)

Table 8-2: Unit

Unit	Description
A	Ampere: the unit for electrical current.
V	Volt: the unit for electrical difference of potential
W	Watt: the unit for power. It is used to quantify the rate of energy transfer.
Ohm	Ohm: the unit for electrical resistance
Siemens	Siemens: the unit for electrical conductance
S	Second: the unit for time
Hz	Hertz: the unit for frequency, the number of occurrences of a repeating event per second.
dBm	dBm: the unit for power level. dBm is expressed in decibels (dB) with reference to 1 milliwatt (mW).
dB	dB: the unit for power gain, expressed in the base-10 logarithm of the ratio between two power levels.
dB μ V	dB μ V: the unit for voltage level. dB μ V is expressed in decibels (dB) relative to 1 μ V across 50 Ω resistance.
dBV	dBV: the unit for voltage level. dBV is expressed in decibels (dB) relative to 1V across 50 Ω resistance
Degree	Degree: the unit for an angle. A degree is a measure of angle equal to 1/360 of a full rotation.
rad	Radian: the unit for an angle. 2 π radians make up a full rotation.

If you type the unit, put it in square brackets, for example $C1[A]*C3[V]$. Additional parentheses are required if you want to assign the unit to the result of the equation, for example $(C1*C3)[W]$

Table 8-3: Filters

Value	Usage/Comment <i>FormulaEditor</i> expression
FIR highpass	<p><i>FIR(highpass,source,limit,shape)</i>: source=input channel of the signal, limit=cutoff frequency shape=rectangle for the highpass filter</p> <p>Example: <i>FIR(highpass,C2,3e+09,rectangle)</i> Sets a rectangle highpass filter on Channel 2 with a 3 GHz cutoff frequency</p>
FIR lowpass	<p><i>FIR(lowpass,source,limit,shape)</i> source=input channel of the signal limit=cutoff frequency shape=Gaussian or rectangle for the lowpass filter</p> <p>Example: <i>FIR(lowpass,C1,1e+07,gaussian)</i> Sets a Gaussian lowpass filter on Channel 1 with a 10 MHz cutoff frequency</p>

Table 8-4: Numeric


Icon	Description	Usage/Comment <i>FormulaEditor</i> expression
0...9	Numeric characters	
	Erases the character before the cursor	
Backspace		
Clr	Clear expression in editor	Restart editing
e	Math. constants, Euler number	Euler number: 2.7182...
π	Math. constants, Pi	Pi: 3.14159...
.	Decimal point	
\pm	Changes the sign of the equation	

Table 8-5: Algebra

Icon	Description	Usage/Comment <i>FormulaEditor</i> expression
+	Addition	
-	Subtraction	
*	Multiplication	
/	Division	
a^b	Exponentiation with base a	a: base, b: exponent a^b
$ x $	Absolute x value	$abs(x)$
\sqrt{x}	Square root of x	$sqrt(x)$
x^2	$x*x$	$pow(x)$

Icon	Description	Usage/Comment <i>FormulaEditor expression</i>
1/x	Reciprocal of x	1/(x)
d/dx	Derivation of x	<i>Derivation(x,y)</i> With x = waveform and y = number of skipped samples (noise reject)
$\int x dx$	Integral of x	<i>integral(x)</i>
ax+b	Scaling of x	<i>Rescale(x,a,b)</i> With x = waveform, a= gain factor, and b= constant
log ₁₀	Decimal logarithm (base 10)	<i>log(x)</i>
log _e	Natural logarithm (base e)	<i>ln(x)</i>
log ₂	Binary logarithm (base 2)	<i>ld(x)</i>

Table 8-6: Math punctuation

Icon	Description	Usage/Comment <i>FormulaEditor expression</i>
(Left bracket	Enclose operands
)	Right bracket	Enclose operands
,	Comma	Separates operands
[Left square bracket	Enclose unit
]	Right square bracket	Enclose unit

Table 8-7: Cursor keys

Icon	Description
←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→	Moves cursor to end

8.2.5.2 Defining a formula in the formula editor

1. Open the "Menu" > "Math" dialog.
2. Select the "Equation" tab.
3. Double-tap the editing area.
The "Formula Editor" is displayed.
4. Enter the math formula including all required signal sources and operators by selecting the corresponding keys in the editor. For details on the available keys, see [Chapter 8.2.5.1, "Math formula editor"](#), on page 207.
5. To perform a rescaling function, proceed as follows:

- a) Select the rescaling function using the "ax+b" key.
- b) Behind the left bracket, insert the signal source using one of the following keys:
 - "Cx" for a channel
 - "Mx" for a math function
 - "Rx" for a reference waveform
- c) After the first comma, insert the "a" value, i.e. the scaling factor, using the number keys.
- d) After the second comma, insert the "b" value, i.e. the scaling offset, using the number keys.


The resulting expression could be, for example: `rescale(C1,3,4)`

6. To insert a unit, press "Unit". Select a value from the list.

If you type the unit, put it in square brackets, for example `C1[A]*C3[V]`. Additional parentheses are required if you want to assign the unit to the result of the equation, for example `(C1*C3)[W]`

8.2.6 Scale settings for math waveforms

Access:[Math] > "Scale" tab

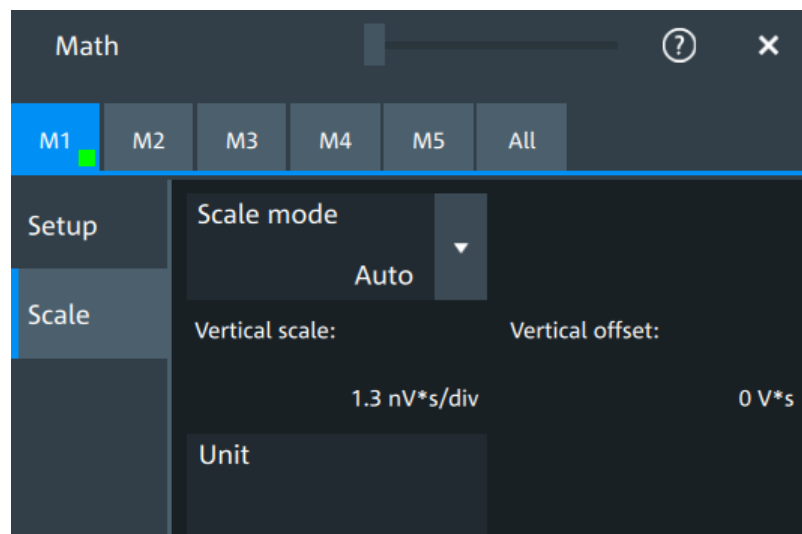

Scale mode

By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

"Manual" Enter the required values for "Vertical scale" and "Vertical offset".

"Auto" "Vertical scale" and "Vertical offset" are read-only.

Remote command:

`CALCulate:MATH<m>:VERTical:SCALE:MODE` on page 656

Vertical scale

Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

If **Scale mode** is set to "Auto", this setting is read-only.

Remote command:

`CALCulate:MATH<m>:VERTical:SCALE[:VALue]` on page 655

Vertical offset

Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

If **Scale mode** is set to "Auto", this setting is read-only.

Remote command:

`CALCulate:MATH<m>:VERTical:OFFSet` on page 655

Unit

Sets a user-defined unit for the math operation.

Remote command:

`CALCulate:MATH<m>:UNIT` on page 655

8.3 History

The history accesses the data of previous acquisitions and provides them for further analysis.

8.3.1 About history

If a continuous acquisition runs, the captured data is stored in the sample memory and the current acquisition is processed and shown on the display. After the acquisition is stopped, the history accesses the captured samples that were stored, displays these samples as history waveforms, and makes them available for further analysis. It considers all channels that were enabled during the running acquisition.

When a new acquisition is started with [Single], the memory is cleared and written anew. In continuous acquisition, stopping and starting the acquisition does not clear the memory, and the history memory is continued. When the memory is full, new acquisitions are stored, and the oldest are removed (first in, first out). The history memory is cleared when the acquisition parameters are changed. To clear the history memory on demand, use the [Clear] key or the "Clear" tool on the toolbar.

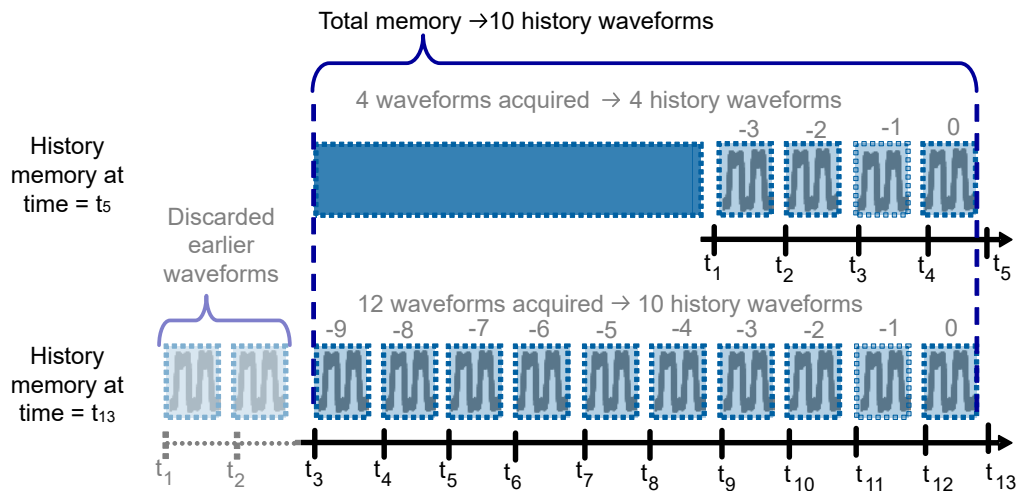


Figure 8-3: History memory. In this example, the memory can store 10 waveforms.

The number of stored history waveforms depends on the memory size, the number of enabled channels, and the record length. The shorter the record length, the less the number of channels, and the larger the memory, the more history waveforms are saved.


You can work with history waveforms in the same way as with the waveform of the latest acquisition: use zoom, cursors, measurements, create math waveforms and so on. You can also save a single history waveform for further analysis.

8.3.2 History setup

The "History" dialog contains the complete functionality on history viewing and information.

The most important information and functions are also provided in the quick-access history dialog box.

Access: "Menu" > "Acquisition" > "History" tab.

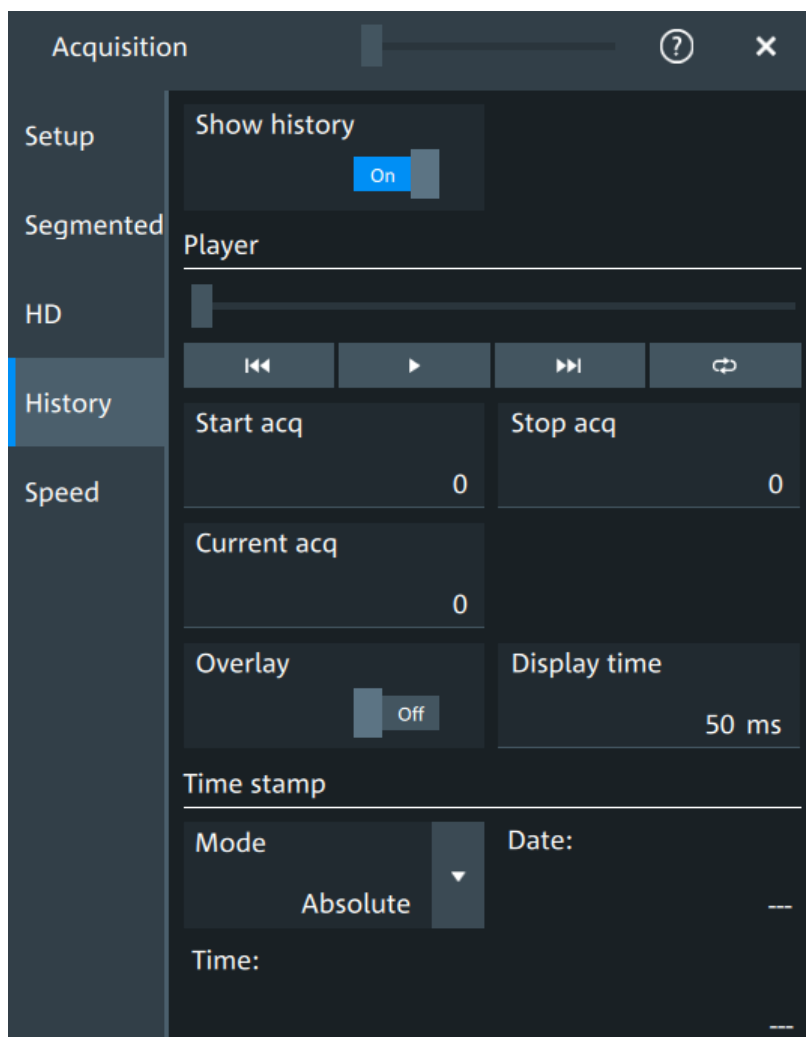

Show history.....215
 Player.....215
 Start acq.....216
 Stop acq.....216
 Current acq.....216
 Overlay.....216
 Display time.....216
 Time stamp.....216

Show history

Enables the history mode and allows you to save history waveforms to file.





The history display is enabled automatically when you press the [History] button. It is disabled when you close the quick-access "History" dialog box.

Remote command:

`ACQuire:HISTory[:STATe]` on page 660

Player

The player can be used to control the playback of the history waveforms.

	Sets the oldest acquisition in the sample memory as "Start acq" and "Current acq".
	Starts and stops the replay of the history waveforms from "Start acq" to "Stop acq".
	Sets the newest acquisition in the sample memory as "Stop acq" and "Current acq". This acquisition always has the index "0".
	"Auto repeat": If selected, the playback of the selected history segments repeats automatically. See also: "Auto repeat" on page 218.

Remote command:

[ACQUIRE:HISTORY:PLAY](#) on page 658

Start acq

Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Remote command:

[ACQUIRE:HISTORY:START](#) on page 659

Stop acq

Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Remote command:

[ACQUIRE:HISTORY:STOP](#) on page 659

Current acq

Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

If a history replay is running, the field shows the number of the currently shown acquisition.

Remote command:

[ACQUIRE:HISTORY:CURRENT](#) on page 658

Overlay

Displays the segments with infinite persistence. Thus, you can see all data points of all displayed segments of a player cycle. Same setting as ["Infinite persistence"](#) on page 91.

Display time

Sets the display time for one acquisition. The shorter the time, the faster the replay is.

The setting takes effect for usual history replay and the display of a fast segmentation series via the history.

Remote command:

[ACQUIRE:HISTORY:TPACQ](#) on page 659

Time stamp

The time stamp shows the time of the currently displayed history acquisition. Thus, the time relation between acquisitions is always available.

The time stamp "Mode" can be absolute or relative:

- In "Absolute" mode, the instrument shows the date and the daytime of the current acquisition.
- In "Relative" mode, the time difference to the newest acquisition (index = 0) is shown.

During history replay, the time value is displayed and updated if the replay speed ("Display time") is slow enough, that is 40 ms or slower.

The quick-access history dialog box always shows the time according to the "Mode" that is selected in the "Acquisition" > "History" tab.

Remote command:

[ACQUIRE:HISTORY:TSDATE?](#) on page 660


[ACQUIRE:HISTORY:TSABSOLUTE?](#) on page 659

[ACQUIRE:HISTORY:TSRELATIVE?](#) on page 660

[ACQUIRE:HISTORY:TSREFERENCE?](#) on page 660

8.3.3 Quick access history dialog

The quick access history dialog is visible when the history is active. Closing the dialog disables the history display ("Show history" = "Off")

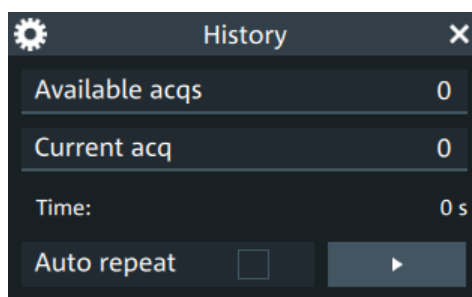

Available acqs	217
Current acq	217
Time	217
Auto repeat	218
▶ Play	218

Available acqs

Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Remote command:

[ACQUIRE:AVAILABLE?](#) on page 576

Current acq

Index of the current acquisition, same as [Current acq](#) in the history setup.

Time

Shows the timestamp of the current acquisition. See ["Time stamp"](#) on page 216.

Auto repeat

If selected, the playback of the selected history segments repeats automatically.

Remote command:

[ACQUIRE:HISTORY:REPLAY](#) on page 658

▶ Play

Starts and stops the replay of the history waveforms. See also: "[Player](#)" on page 215.

8.3.4 Using history


You can access the history waveforms in two ways:

- Display a particular acquisition.
- Replay all or a part of the saved waveforms to track the signal run.

To open the history and get information

1. Press the [History] key on the front panel.


A running acquisition is stopped, the history mode is enabled and the quick-access "History" dialog box is displayed. The [History] key lights up as long as the history mode is active.

2. Open the full configuration dialog box:
 - Tap the  icon.
 - Open "Menu" > "Acquisition" dialog > "History" tab.

To display a particular acquisition

You can analyze a selected history waveform, and save it to file.

- ▶ In the quick-access "History" dialog box, enter the number of the required acquisition in the "Current acq" field. The newest acquisition always has the index "0", older acquisitions have a negative index.

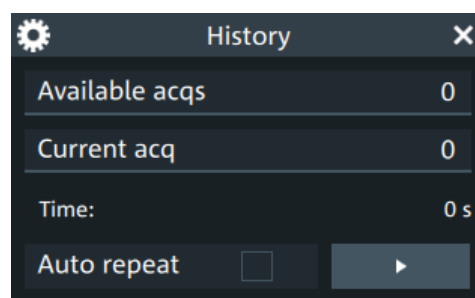

Alternatively, you can configure and start the history display from the "History" configuration dialog box:

1. Open the "History" configuration tab.
2. If the history mode is off (the [History] key is not illuminated), select "Show history".


3. Drag the slider to the required acquisition. The current number is shown in the "Current acq" field.
Alternatively, enter the number of the required acquisition in the "Current acq" field.

To save a single history waveform

1. Select and display the required history waveform as described in ["To display a particular acquisition"](#) on page 218.
2. Save the selected waveform using "Save/Recall" > "Save" tab > "Waveform". For details, see [Chapter 12.2, "Save and recall waveform data"](#), on page 324.

To replay history waveforms

If you want to see the complete acquisition series without any setup, simply tap in the quick-access "History" dialog box. For specific analysis of history data, use the history "Viewer" setup.

1. Open the "History" configuration dialog tab.
2. If the history mode is off (the [History] key is not illuminated), enable "Show history".
3. Tap  to start.

To exit the history

- ▶ Choose one of the following ways:
 - Close the quick-access "History" dialog box.
 - In the "History" configuration tab, disable "Show history".
 - Start the acquisition.

8.4 Reference waveforms

You can configure up to four reference waveforms to display stored waveforms. Any active signal, mathematical waveform or spectrum can be stored as a reference waveform. It can then be loaded again later to restore the waveform on the screen.

8.4.1 Working with reference waveforms

Reference waveforms can be displayed in addition to the signal waveforms. Reference waveforms can be loaded only from REF files.

To display a reference waveform

1. In the "Menu" > "Apps" > "General" tab, select "Reference".
Alternatively, press the [Ref] key.
2. Select the tab for the reference waveform that you want to display, e.g. "R1".

3. Load a stored reference waveform as described in [To load a reference waveform](#). Alternatively, select a source that you want to display as a reference:
 - a) In the "Setup" tab, select "Source".
 - b) Select the "Source" from the selection list. The list shows all active waveforms that you can save as references.
 - c) Tap the "Create/update" button to update the current reference waveform with the source data.
4. Tap the "Show" button.

The reference waveform is displayed on the screen.
5. A reference waveform can have its own scaling settings or it can be scaled according to the source settings. By default, the scaling of the reference waveform is coupled to the source settings. Also, you can stretch it or compress it in vertical and horizontal directions.

If necessary, change the settings on the "Vertical" and "Rescale" tabs of the "Reference waveform" dialog.

To restore the original settings, tap the "Set to original" in the "Vertical" tab.

For a description of the scaling settings, see [Chapter 8.4.2.4, "Reference waveform rescale"](#), on page 225.

To save a reference waveform

1. In the "Menu" > "Apps" > "General" tab, select "Reference".

Alternatively, press the [Ref] key.
2. Select the tab for the reference waveform that you want to store, e.g. "R1".
3. Display and configure the reference waveform as described in ["To display a reference waveform"](#) on page 219.
4. Tap "File extension" to select the file format.

Note that reference waveforms can be loaded only from REF files. CSV files are meant for further processing in other applications.
5. To save the waveform, tap "Save".
6. Enter a filename and select the directory. The file type is defined according to the selection in the previous steps.

The source settings of the reference waveform and the current scaling settings are stored to the specified file.

To load a reference waveform

Note: Reference waveforms can be loaded only from REF files.

1. Press the [Ref] key.
2. Select the tab for the reference waveform that you want to load ("R1/2/3/4").
3. In the "Setup" tab, select "Recall".
4. Select the file from the file selection dialog box.

5. To load the waveform from the specified file, tap "Open".

The selected waveform is loaded as the specified reference waveform.

8.4.2 Settings for reference waveforms


To compare waveforms and analyze differences between waveforms, you can use up to four reference waveforms R1 to R4.

Each reference waveform has its own memory on the instrument. You can also save an unlimited number of reference waveforms and load them for further use.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically and horizontally.

8.4.2.1 Reference waveform setup

Access: [Ref] key > "Setup" tab

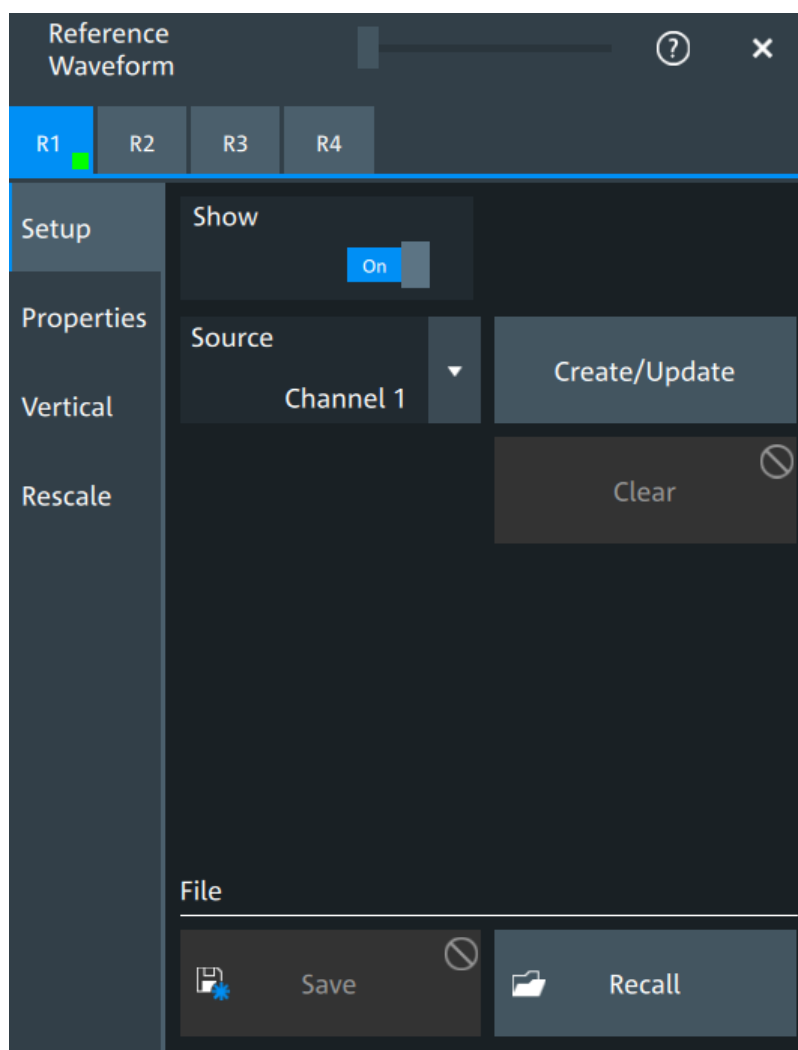

In the "Setup" tab, you select the target reference waveform and its source.

R1/2/3/4

Each tab contains the settings for one of the available reference waveforms.

Show

Enables the display of the reference waveform in the diagram.

Remote command:

`REFCurve<rc>:STAtE` on page 663

Source

Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Remote command:

`REFCurve<rc>:SOURce` on page 663

Create/update

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

A progress bar informs you about the process, see "[Progress information](#)" on page 73.

Remote command:

`REFCurve<rc>:UPDate` on page 663

Clear

The selected reference waveform disappears, its memory is deleted.

Remote command:

`REFCurve<rc>:CLear` on page 661

Save

Saves the reference waveform. The complete reference waveform is stored in a REF file and can be reloaded later. Other formats, like CSV, are meant for further processing in other applications.

A progress bar informs you about the process, see "[Progress information](#)" on page 73.

See also:

- [Chapter 12.2, "Save and recall waveform data"](#), on page 324
- [Chapter 12.2.3, "Waveform export files"](#), on page 328

Remote command:

`REFCurve<rc>:SAVE` on page 663

To abort the saving, use `REFCurve<rc>:ABORt` on page 661.

Recall

Opens a file selection dialog box and loads the selected reference waveform file.


Note that reference waveforms can be loaded only from REF files.

Remote command:

`REFCurve<rc>:OPEN` on page 662

8.4.2.2 Reference waveform properties

Access: [Ref] key > "Properties" tab

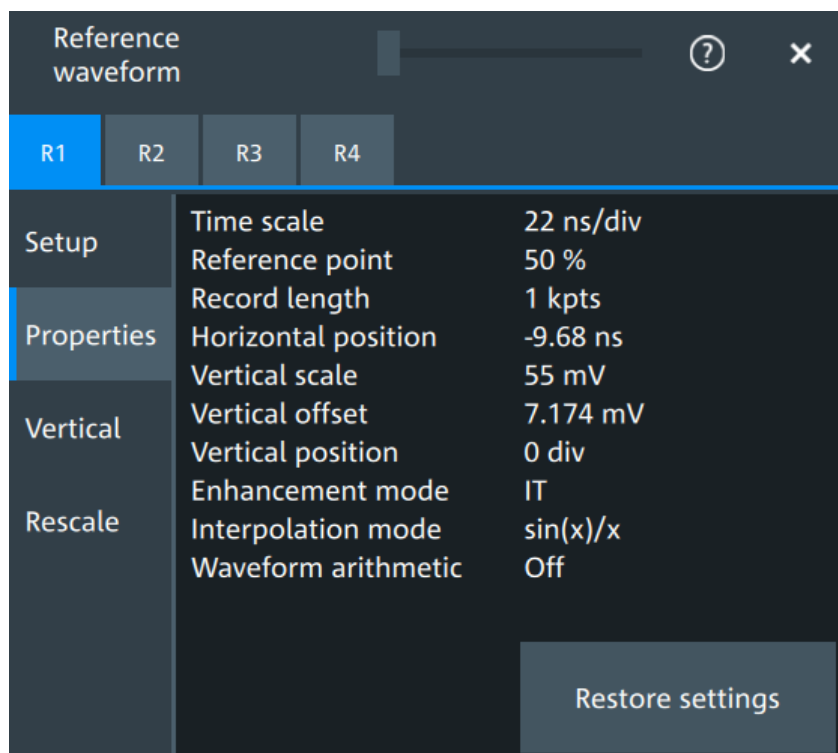

A reference waveform can be scaled, stretched and positioned in the diagram. The "Properties" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

The following settings are displayed:

- [Time scale](#)
- [Reference point](#)
- [Record length](#)
- [Position](#)
- [Vertical scale](#)
- [Offset](#)
- [Position](#)
- [Enhancement mode](#)
- [Interpolation](#)
- [Waveform arithmetic](#)

Enhancement mode

The enhancement mode is taken from the source waveform of the reference. The enhancement mode is set automatically by the instrument and depends on the sample rate. As long as the waveform sample rate is not higher than the ADC sample rate, the instrument works automatically in real time mode (RT). At higher waveform sample rates, the instrument changes to interpolated time mode (IT), where interpolation adds waveform points between the captured ADC samples by various mathematical methods, see [Interpolation](#).

Waveform arithmetic

The waveform arithmetic is taken from the source waveform of the reference, and it cannot be changed for the reference. Waveform arithmetic builds the resulting waveform from several consecutive acquisitions of the signal. The arithmetic methods are envelope and average, which are set in the [Acquisition mode](#).

Restore settings


Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Remote command:

`REFCurve<rc>:REStore` on page 662

8.4.2.3 Reference waveform vertical

Access: [Ref] key > "Vertical" tab

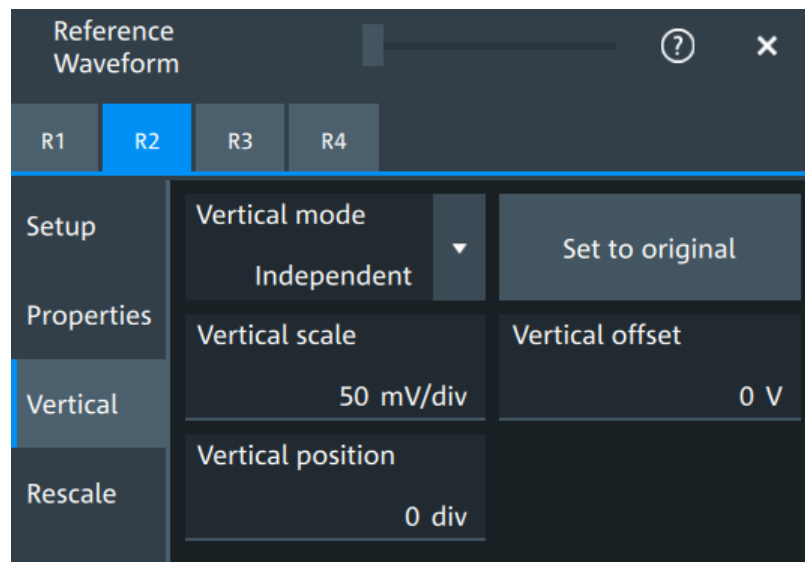**Mode**

Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:

[REFCurve<rc>:VMODE](#) on page 668

Set to original

Available, if "Mode" = "Independent".

Restores the original vertical settings of the reference waveform (vertical scale, position, and offset).

Remote command:

[REFCurve<rc>:TOORiginal](#) on page 667

Vertical scale

Available, if "Mode" = "Independent".

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit of the reference is the same as the unit of the source waveform.

Remote command:

[REFCurve<rc>:SCALE](#) on page 664

Vertical offset

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Remote command:

[REFCurve<rc>:OFFSet](#) on page 662

Vertical position

Available, if "Mode" = "Independent".


Moves the reference waveform up or down in the diagram.

Remote command:

[REFCurve<rc>:POSition](#) on page 665

8.4.2.4 Reference waveform rescale

Access: [Ref] key > "Rescale" tab

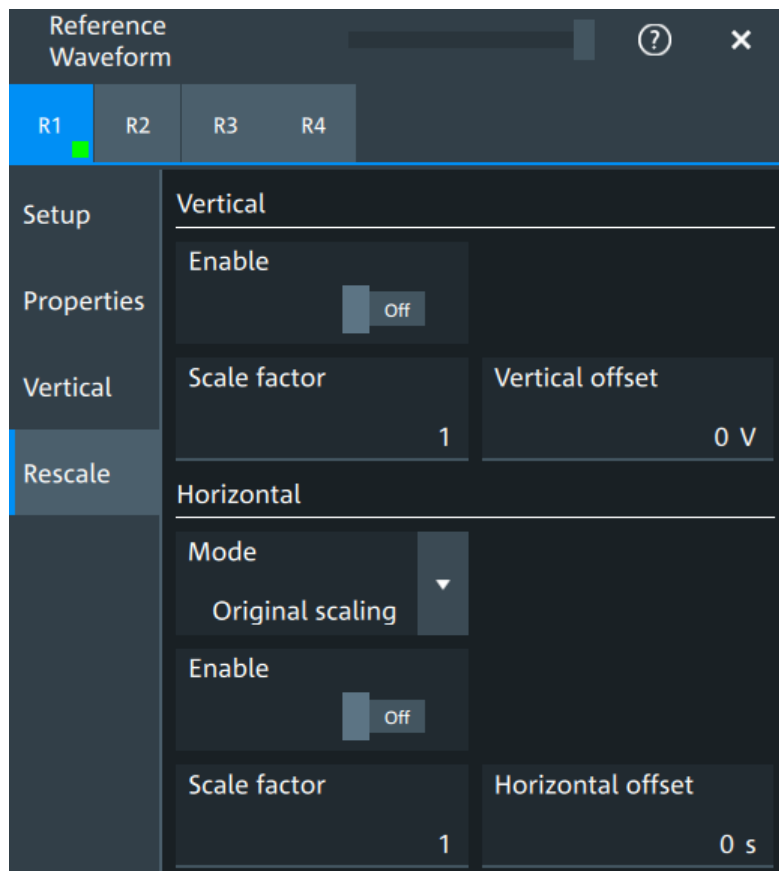

In the "Rescale" tab you can adjust the vertical and horizontal scaling of the reference waveform.

Vertical

Stretching and offset change the display of the waveform independent of the vertical scale and position.

Enable ← Vertical

If enabled, the vertical offset and factor are applied to the reference waveform.

Remote command:

[REFCurve<rc>:RESCale:VERTical:STATe](#) on page 667

Scale factor ← Vertical

Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Remote command:

[REFCurve<rc>:RESCale:VERTical:FACTor](#) on page 666

Vertical offset ← Vertical

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Remote command:

[REFCurve<rc>:RESCale:VERTical:OFFSet](#) on page 667

Horizontal

Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Mode ← Horizontal

Selects the type of horizontal settings:

"Original scaling" Horizontal scaling and reference point of the source waveform are used.

"Adjust to X Axis" The current horizontal settings of the diagram are used.

Remote command:

[REFCurve<rc>:HMODE](#) on page 665

Enable ← Horizontal

If enabled, the horizontal offset and factor are applied to the reference waveform.

Remote command:

[REFCurve<rc>:RESCale:HORizontal:STATE](#) on page 666

Scale factor ← Horizontal

Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Remote command:

[REFCurve<rc>:RESCale:HORizontal:FACTor](#) on page 665

Horizontal offset ← Horizontal

Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Remote command:

[REFCurve<rc>:RESCale:HORizontal:OFFSet](#) on page 666

9 Measurements

Using the MXO 4 you can perform and display different measurements simultaneously, based on the active signal or math waveforms. The color of the results in the result table corresponds with the source waveform color.

9.1 Cursor measurements

- [Cursors and results of cursor measurements](#)..... 228
- [Using cursors](#)..... 229
- [Settings for cursor measurements](#)..... 231

9.1.1 Cursors and results of cursor measurements

Cursor measurements determine the results at the current cursor positions. The cursors can be positioned manually, or can be configured to follow the waveform. You can measure on one waveform, or on two different waveforms (sources).

Up to 2 cursor sets can be configured and displayed. Each cursor set consists of a pair of horizontal or vertical cursors, or both. Cursor lines can be coupled so that the initially defined distance is always maintained.

The cursors are displayed in the diagrams of the source waveform only, or in all diagrams. For each measurement, labels can be defined for the cursors. By default, the cursors are labeled as Cu1.1 and Cu1.2.

How to set up cursor measurements is described in [Chapter 9.1.2, "Using cursors"](#), on page 229. The [Chapter 9.1.3, "Settings for cursor measurements"](#), on page 231 provides a detailed description of all settings.

For details on using the result table, see [Chapter 4.10, "Displaying results"](#), on page 69.

9.1.1.1 Cursor measurements on time-based waveforms

The cursor for measurement on time-based waveforms returns the following results. The results are displayed automatically when a cursor measurement is enabled.

C1	X1	-50 ns	X2	14.226 ns	Y1: 0.5 mV	Y2: 1.5 mV
	dx:	64.226 ns	1/dx:	15.5700 MHz	dy:	1 mV
					dy/dx:	15.2162 kV...

Label	Description
"X1, X2"	Time at the position of the vertical cursors.
"Y1, Y2"	Vertical values of the waveform at the position of the horizontal cursors in V or A.

Label	Description
"dx"	Difference between the vertical cursor (time) values
"1/dx"	Inverse time difference
"dy"	Difference between the horizontal cursor values
"dy/dx"	Slope of the waveform between the cursors (if measured on one source)

9.1.2 Using cursors

You can start cursor measurements by using the toolbar, or using the [Cursor] key. For detailed configuration, use the "Cursor" dialog.

9.1.2.1 Starting a simple cursor measurement

To add cursors using the toolbar

1. Tap the "Add cursor" icon on the toolbar.



2. Select the channel that you want to apply the cursor to.
Tap the waveform that you want to measure. Alternatively, you can draw a rectangle in the diagram to position the cursor lines.

The cursor lines appear and the cursor results are displayed in the result table.

To display cursors using the [Cursor] key

1. Select the waveform that you want to measure.
2. Press the [Cursor] key.

The cursor lines and the measurement results are displayed.

9.1.2.2 Configuring a cursor measurement

To modify the position of the cursor lines, you can drag the lines on the screen. In addition, various settings are possible to refine the measurement.

The complete configuration of cursor measurements is provided in the "Cursor" dialog.

1. To open the "Cursor" dialog, use one of these ways:
 - Open the "Menu" > "Cursor".
 - Press the [Cursor] key.
 - Double-tap in the results table (but not on a result).
2. Select the "Setup" tab.

3. Select the subtab for the cursor set that you want to use.
4. Select the "Source" - the measured waveform. You can select any input channel, or various other active waveforms. Available sources are shown in the source list.
5. If necessary, enable the "Second source". Select a waveform for "Source 2".
6. Select the "Type": X (vertical), Y (horizontal), or XY (both).
7. Define the position of the cursors:
 - a) To define exact positions of the cursor lines, enter the X-position for each vertical cursor and the Y-position for each horizontal cursor.
If it is not possible to set horizontal cursors, disable "Track waveform".
 - b) To position the horizontal cursors automatically, select "Track waveform".
In this case, Cu 1.1 indicates the current maximum, Cu 1.2 indicates the current minimum. If both horizontal and vertical cursors are displayed, the horizontal cursors are placed at the crossing points of the vertical cursors with the waveform. Adjust the vertical cursors manually, and the horizontal cursors follow.
8. To display the cursor in all diagrams that are in the same domain as the selected source (time or spectrum), enable "Show in all diagrams" in the "Advanced" tab.
9. To set the cursors for a spectrum measurement to peak values, select the "Peak search" tab.
Tap one of the buttons to place the cursors on the selected peak value. For details, see [Chapter 9.1.3.3, "Peak search tab"](#), on page 236.
10. Tap the "Type" button in the "Setup" tab to activate the cursor measurement.

The cursors lines and the results are displayed. For details on cursor measurement results, see [Chapter 9.1.1, "Cursors and results of cursor measurements"](#), on page 228.

9.1.2.3 Configuring the cursor display

By default, the cursors are displayed as lines in the diagrams and labeled according to the syntax: Cu<cursor set number>.<1|2>

For example, the cursors for the cursor set 2 are labeled 2.1 and 2.2. The horizontal and the vertical cursors lines have the same labels.

You can change the default cursor display and labels.

To set the cursor style

1. Press the [Cursor] key.
2. Select the subtab for the cursor set you want to configure.
3. Select the "Setup" tab.
4. Select the "Cursor style". See also: ["Cursor style"](#) on page 232.

To add labels to cursor lines


1. Press the [Cursor] key.
2. Select the subtab for the cursor set you want to configure.
3. Select the "Advanced" tab.
4. Enter a label for "Vertical cursor 1", "Vertical cursor 2", "Horizontal cursor 1", "Horizontal cursor 2".
5. Enable "Show label".

9.1.3 Settings for cursor measurements

Cursor measurements are configured in the "Cursor" dialog.

9.1.3.1 Setup tab

The "Setup" tab contains the settings for cursor measurements.

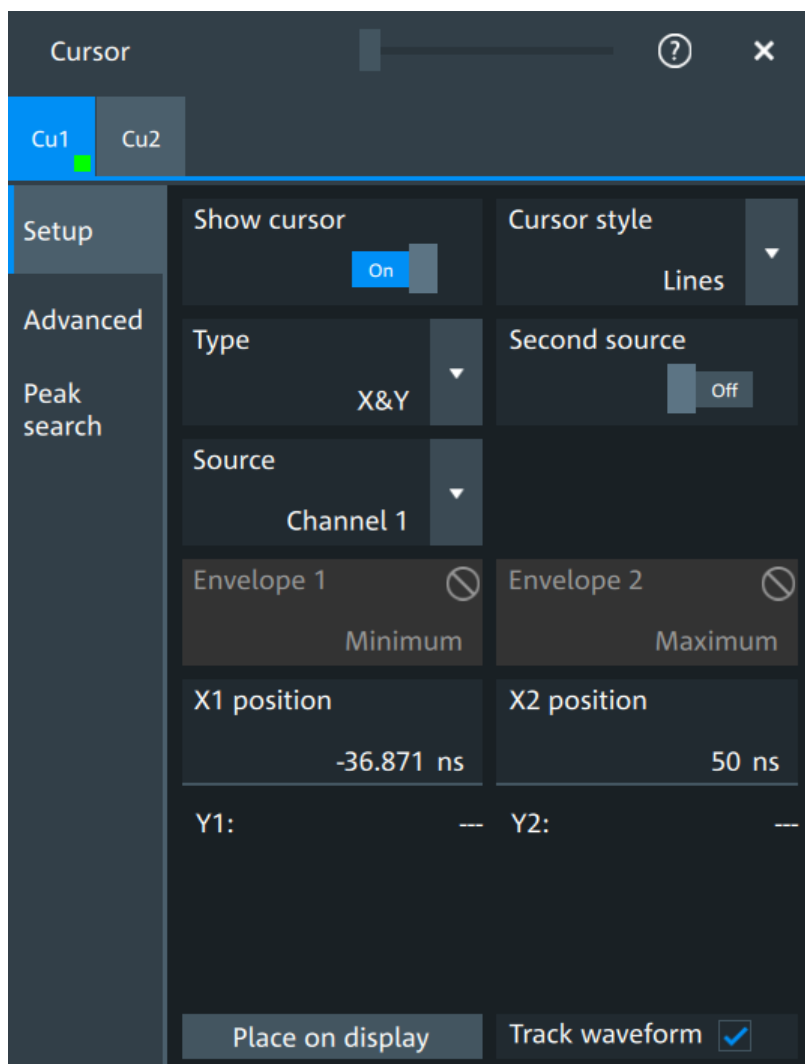

Cu1/Cu2

The settings for each cursor measurement (or cursor set) are configured on separate tabs. For each cursor set, a horizontal pair of cursors, a vertical pair of cursors, or both can be displayed.

Show cursor

Enables the selected cursor measurement.

Remote command:

[CURSor<cu>:STATe](#) on page 706

Cursor style

Defines how the cursor is displayed in the diagram.

"Lines" The cursors are displayed as lines.

"Line & Rhombus"

The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"VLine & Rhombus"

Vertical line and rhombus: the cursors are displayed as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"Rhombus"

The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

Remote command:

[CURSor<cu>:STYLe](#) on page 716

Type

Defines the cursor type to be used for the measurement.

"X" (vertical cursors)

Both vertical cursor lines are set automatically to the trigger position, and you can reposition them manually.

"Y" (horizontal cursors)

Horizontal cursors are positioned automatically along the waveform and can be adjusted manually.

"X&Y" (both vertical and horizontal cursors)

Horizontal cursors are positioned automatically along the waveform and vertical cursors are set to the trigger position. You can reposition all cursor lines manually.

Remote command:

[CURSor<cu>:FUNction](#) on page 706

Second source, Source 2

Enables and selects a second source for the cursor measurements. If enabled, the second cursor lines Cu2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Remote command:

[CURSor<cu>:USSource](#) on page 707

[CURSor<cu>:SSource](#) on page 707

Source

Defines the source of the cursor measurement. Any of the input signal, math or reference waveforms can be selected.

Remote command:

[CURSor<cu>:SOURce](#) on page 706

Envelope, Envelope 2

Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Envelope selection is effective under the following conditions:

- The acquisition mode of the cursor source waveform is set to envelope, see [Acquisition mode](#).
- [Track waveform](#) is enabled.
- Both horizontal and vertical cursors are enabled (**Type** = "X&Y").

"Minimum" The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

"Maximum" The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

Remote command:

[CURSor<cu>:X1ENvelope](#) on page 712

[CURSor<cu>:X2ENvelope](#) on page 712

X1 position, X2 position

Define the left and right position of the vertical cursors.

Remote command:

[CURSor<cu>:X1Position](#) on page 708

[CURSor<cu>:X2Position](#) on page 708

Y1 position, Y2 position

Define the upper and lower position of the horizontal cursor lines.

If [Track waveform](#) is enabled, the user setting is disabled and the measurement results are displayed in the result table.

Remote command:

[CURSor<cu>:Y1Position](#) on page 708

[CURSor<cu>:Y2Position](#) on page 709

Track waveform

The horizontal cursors track the waveform. The first cursor line indicates the current vertical minimum, and the second cursor line indicates the maximum. If the waveform changes, e.g. during a running measurement, the cursors move along with it.

If both horizontal and vertical cursors are displayed, the horizontal cursors are positioned to the crossing points of the vertical cursors with the waveform. The measurement results are displayed in the cursor result table.

Remote command:

[CURSor<cu>:TRACking\[:STATe\]](#) on page 709

Place on display

Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.


Remote command:

[CURSor<cu>:SSCReen](#) on page 709

9.1.3.2 Advanced settings

Access: Cursor key > "Advanced" tab

The settings in the "Advanced" cursor tab configure the behavior and display of cursor lines, and labels for the lines.

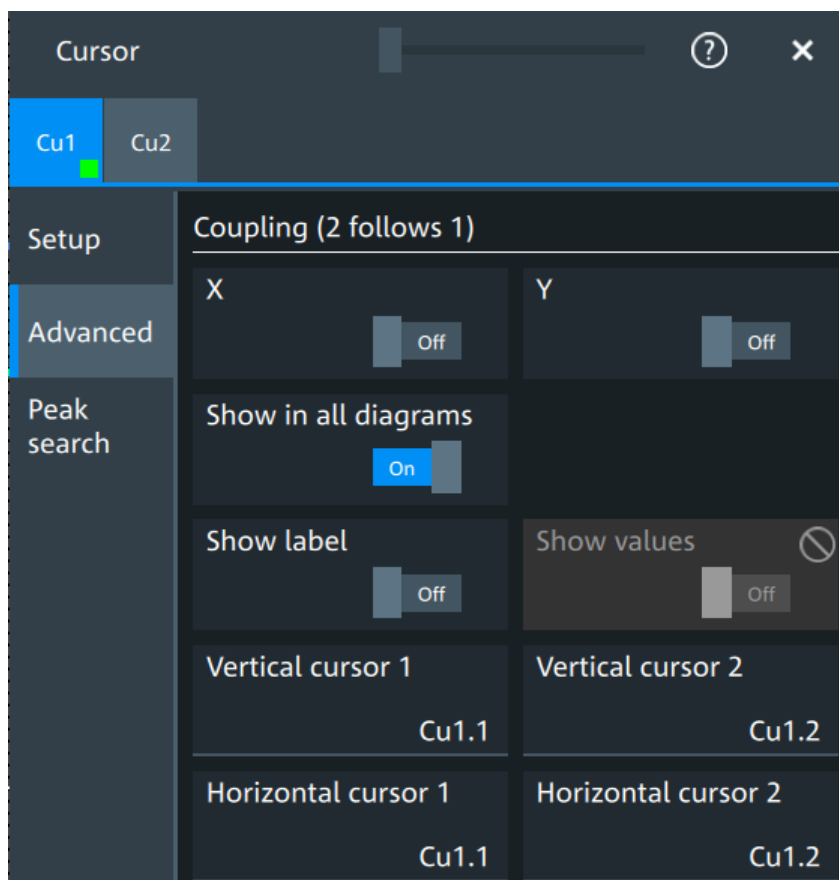**X, Y**

Couple the horizontal or vertical cursor lines so that the distance between the two lines remains the same if one cursor is moved. "X" couples the vertical cursor lines, and "Y" couples the horizontal cursor lines.

Remote command:

[CURSor<cu>:XCoupling](#) on page 711

[CURSor<cu>:YCoupling](#) on page 711

Show in all diagrams

Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Remote command:

[CURSor<cu>:SIAD](#) on page 711

Show label

Shows the cursor labels in the diagram.

Remote command:

[CURSor<cu>:LABel](#) on page 709

Show values

Shows the measured values in the cursor labels.

Remote command:

`CURSor<cu>:DISPlay:VALues` on page 710

Vertical cursor 1, Vertical cursor 2

Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Remote command:

`CURSor<cu>:VERTical<n>:LABel` on page 710

Horizontal cursor 1, Horizontal cursor 2

Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...


Remote command:

`CURSor<cu>:HORizontal<n>:LABel` on page 710

9.1.3.3 Peak search tab

Access: [Cursor] key > "Peak search" tab

The settings on this tab are only available in spectrum mode, i.e. the source of the cursor measurement is a spectrum. In this case, the cursors can indicate the results of a peak search on the waveform. You can define which peaks the instrument determines by defining the noise reject settings.

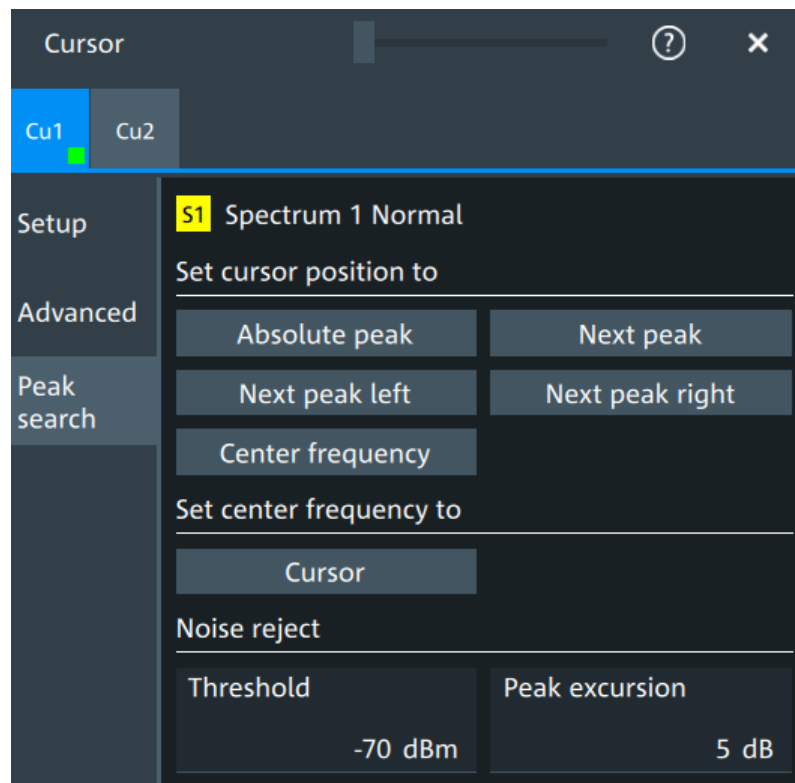

Absolute peak

Sets both cursors to the absolute peak value.

Remote command:

[CURSor<cu>:MAXimum\[:PEAK\]](#) on page 714

Next peak

Cursor 2 is set to the next smaller absolute peak from the current position.

Remote command:

[CURSor<cu>:MAXimum:NEXT](#) on page 715

Next peak left

Cursor 2 is set to the next peak to the left of the current position.

Remote command:

[CURSor<cu>:MAXimum:LEFT](#) on page 715

Next peak right

Cursor 2 is set to the next peak to the right of the current position.

Remote command:

[CURSor<cu>:MAXimum:RIGHT](#) on page 715

Center frequency

Sets the vertical cursor line Cu1 to the center frequency.

Remote command:

[CURSor<cu>:FFT:TOCenter](#) on page 714

Set center frequency to

Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Remote command:

[CURSor<cu>:FFT:SETCenter](#) on page 714

Threshold

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:

[CALCulate:SPECTrum<sp>:THReshold](#) on page 722

[CURSor<cu>:THReshold](#) on page 716


Peak excursion

Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

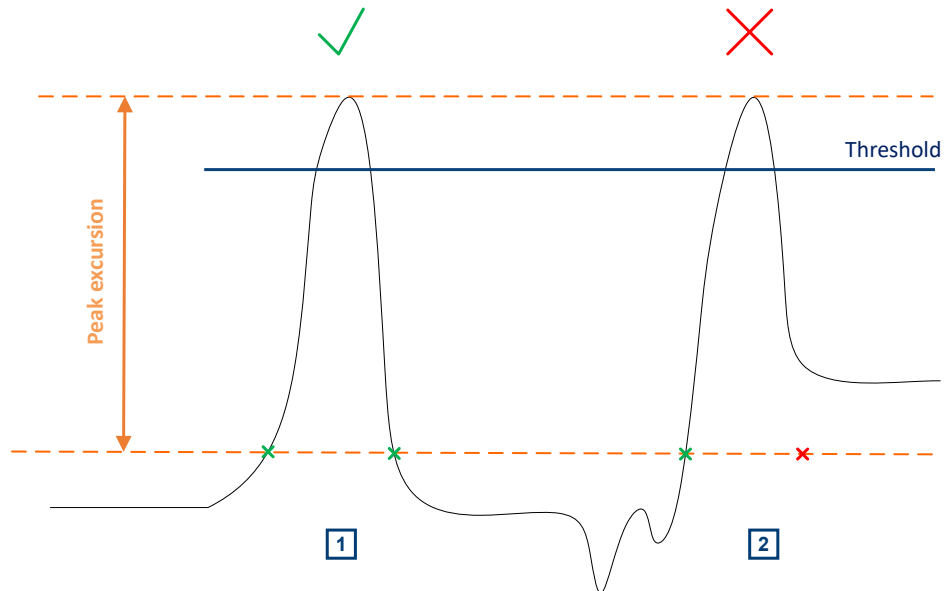

Remote command:

[CALCulate:SPECTrum<sp>:PEXCursion](#) on page 723

[CURSor<cu>:PEXCursion](#) on page 715

9.2 Automatic measurements

You can perform up to 16 different measurements simultaneously.

There are two methods to start a measurement, each with slightly different effects:

- Using the "Measure" icon on the toolbar:
See: ["To start a measurement using the toolbar icon"](#) on page 238.
- Pressing the [Measure] key on the front panel, or using the "Measurement" menu.
See: ["To configure measurements in the Measurement dialog"](#) on page 239.

To start a measurement using the toolbar icon

1. Tap the "Measure" icon on the toolbar.



The measurement overlay menu opens.




2. Select the "Category".
3. Tap on the measurements that you want to perform. You can scroll left and right through the measurement list, to view all available measurements for the selected "Category".
4. Select the source that you want to apply the measurement on.
5. If needed, click on "Setup" to configure further measurements.
The measurement results are displayed.

To configure measurements in the Measurement dialog


1. Select the waveform on the screen.
2. Press the [Measure] key.
The measurement for the selected waveform is enabled using the next available measurement configuration. The measurement results are displayed.

To add a new measurement


1. Press the [Measure] key, to open the measurement dialog.
2. In the "Setup" tab, press "Add".
A dialog opens to select the measurements.
3. Select the "Source" for the measurement.
4. Select the "Category" of the measurement that you want to add, e.g. "Horizontal".
All available measurements for this category are displayed. For more details on the available measurement types, see [Chapter 9.2.4, "Measurement types"](#), on page 247.
5. Tap on a measurement from the list to enable it.
Selected measurements are marked with a blue check mark in their checkbox.

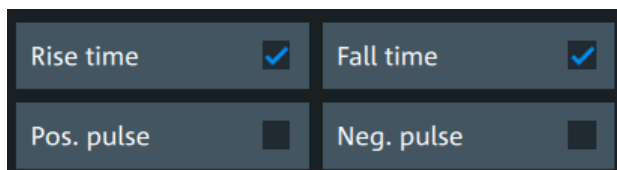

6. The measurements of some categories are listed on several tabs. To switch between the tabs, press the points at the bottom of the list.

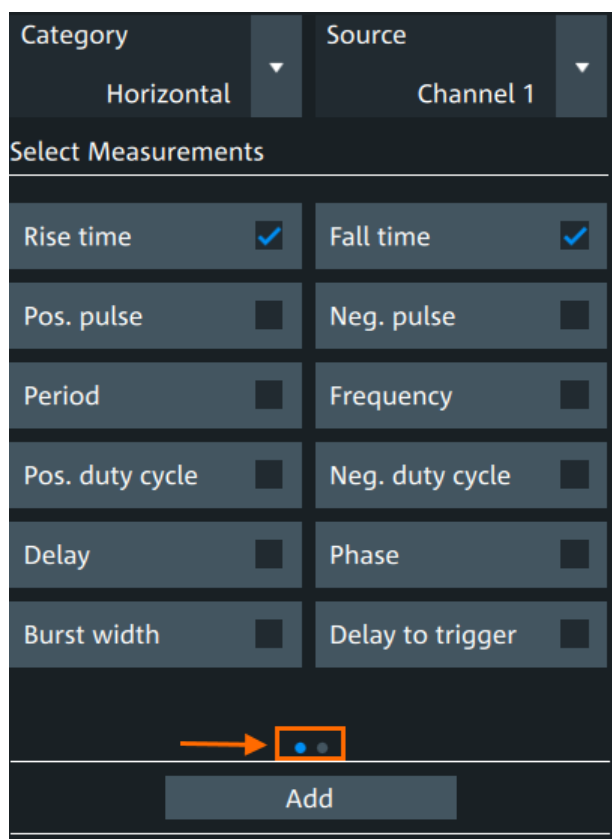

7. Tap "Add" to add the selected measurements.
All selected measurements are enabled.

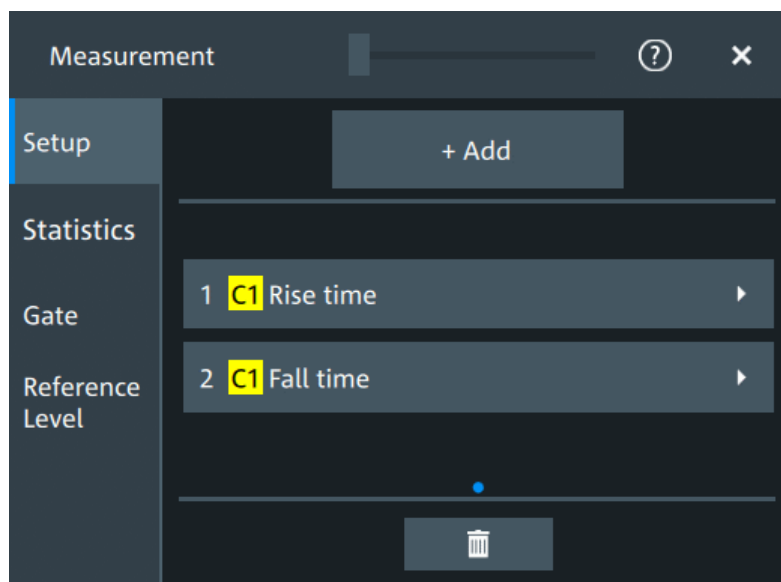


To delete a measurement

1. Press the [Measure] key, to open the measurement dialog.

- In the "Setup" tab, press .

A delete icon appears in the selection button of each measurement.

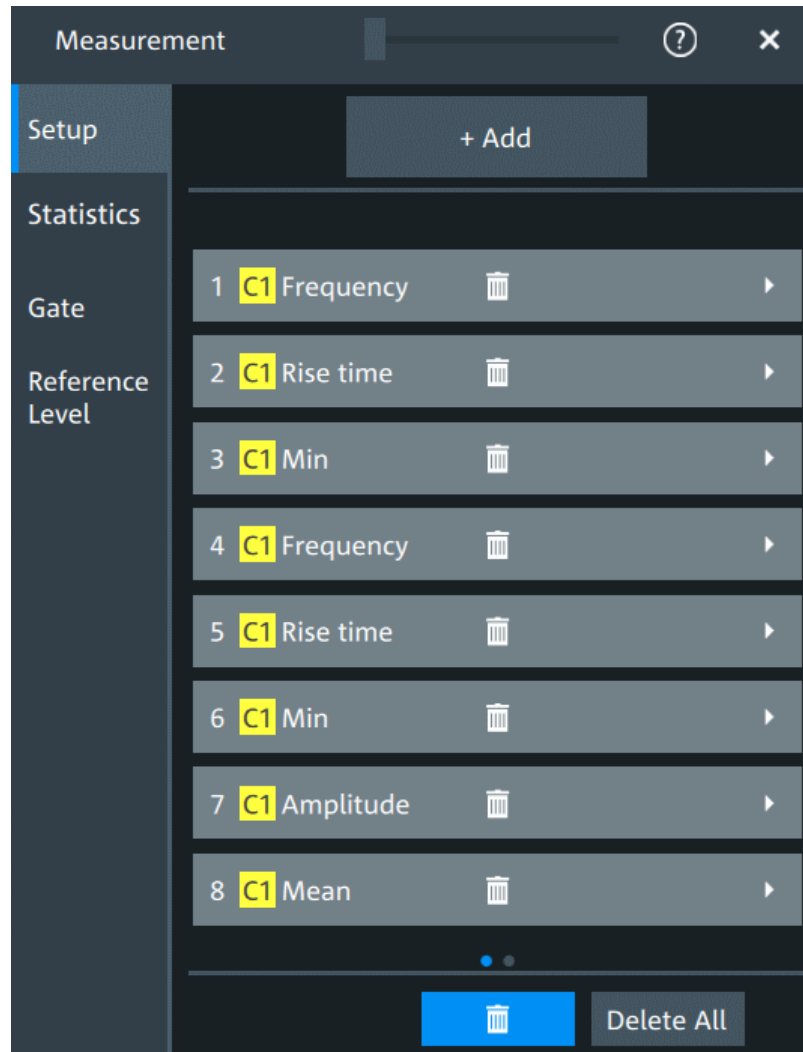

- Tap on the button of the measurement that you want to delete. Alternatively, tap "Delete All" to delete all measurements.

9.2.1 Measurement results

The measurement results are shown in a table below the grid.

Measure	Statistics
1 C1 Amp.:	3.418 mV
2 C1 Min:	-2.443 mV
3 C1 Max:	3.054 mV
4 C1 PTP:	5.497 mV

-	No valid waveform is available, for example, if the source waveform is off.
---	---

Statistics

In addition to the current measurement results, you can enable a statistic evaluation. It returns the current, minimum and maximum measurement values, the average and standard deviation, and the number of measured waveforms. The results are shown in a separate tab below the grid. If the cursor measurement is active simultaneously, its results are shown beside the statistics results.


Measure	Current	Max	Min	Mean	RMS	σ (5-dev)	Event count	Wave count
1 C1 Amp.	4.88 mV	7.81 mV	1.46 mV	3.8 mV	3.91 mV	938.01 μ V	2847	2847
2 C1 Min	-2.44 mV	-1.71 mV	-4.76 mV	-2.69 mV	2.71 mV	365.09 μ V	2283	2283
3 C1 Max	3.66 mV	5.25 mV	2.32 mV	3.29 mV	3.31 mV	356.83 μ V	2283	2283
4 C1 PTP	6.11 mV	8.18 mV	4.76 mV	5.98 mV	6 mV	480.81 μ V	2283	2283

9.2.2 Gate settings for measurements

Gate areas limit the measurement to a user-defined range of the waveform. The gate settings are defined on the "Gate" tab.

You can define up to 2 separate gates for the measurement analysis. Then, you assign the measurements to the gates.

Access: [Measure] > "Gate" tab

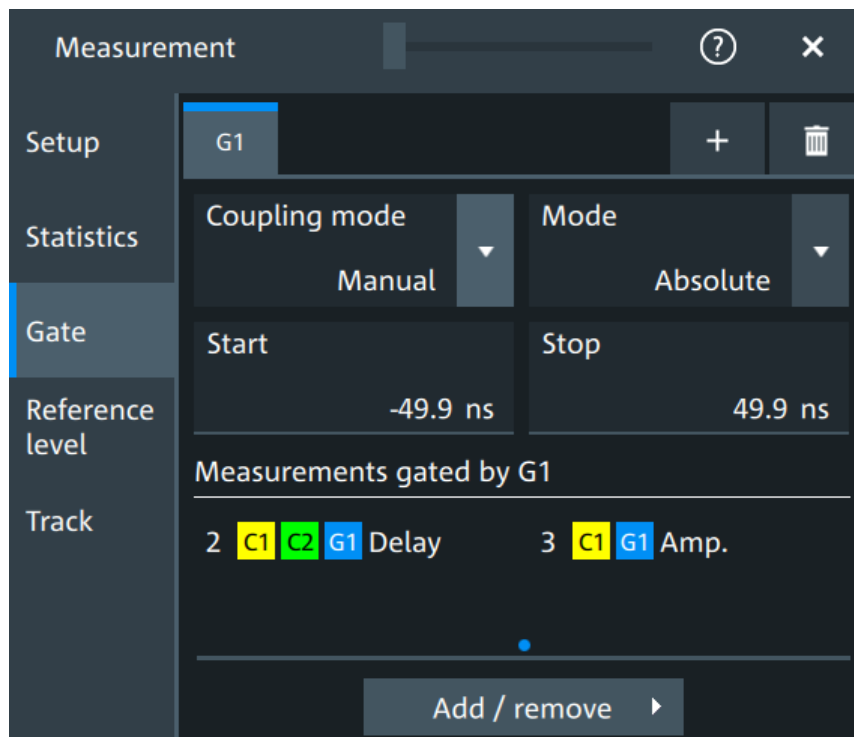

+ Add

Activates a new gate.

Remote command:

[GATE<g>:ENABLe](#) on page 695

Coupling mode

The gate coupling mode selects how the gate area is defined.

- | | |
|------------|--|
| "Manual" | Manually define the gate with a user-defined start and stop values. |
| "Cursor" | Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement.
If several cursor measurements are enabled, select the "Cursor" to be used for gating. The start and stop values of the gate are adjusted to the values of the cursor line positions. The measurement is limited to the part of the waveform between the cursor lines. |
| "Zoom" | Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.
If several zoom diagrams are defined, select the "Zoom" diagram to be used for gating. The start and stop values of the gate are adjusted to the values of the zoom positions. |
| "Spectrum" | Spectrum coupling is available if a spectrum is enabled. |

Remote command:

[GATE<g>:GCOupling](#) on page 695

[GATE<g>:CURSor](#) on page 696

[GATE<g>:ZDIagram](#) on page 696

Mode

Selects if the gate settings are configured using absolute or relative values.

- | | |
|------------|--|
| "Absolute" | The gate is defined by absolute start and stop values with "Start" and "Stop". |
| "Relative" | The gate's start and stop values are defined by a percentage of the value range with "Relative start" and "Relative stop". |

Remote command:

[GATE<g>:MODE](#) on page 696

[GATE<g>:ABSolute:START](#) on page 697

[GATE<g>:ABSolute:STOP](#) on page 697

[GATE<g>:RELative:START](#) on page 697

[GATE<g>:RELative:STOP](#) on page 697

Measurements gated by G<x>

Displays all active measurements that are limited by the gate.

Remote command:

[MEASurement<mg>:GATE](#) on page 690

Add

Opens a dialog to select the measurements to be gated by the active gate. You can select from the list of all enabled measurements.

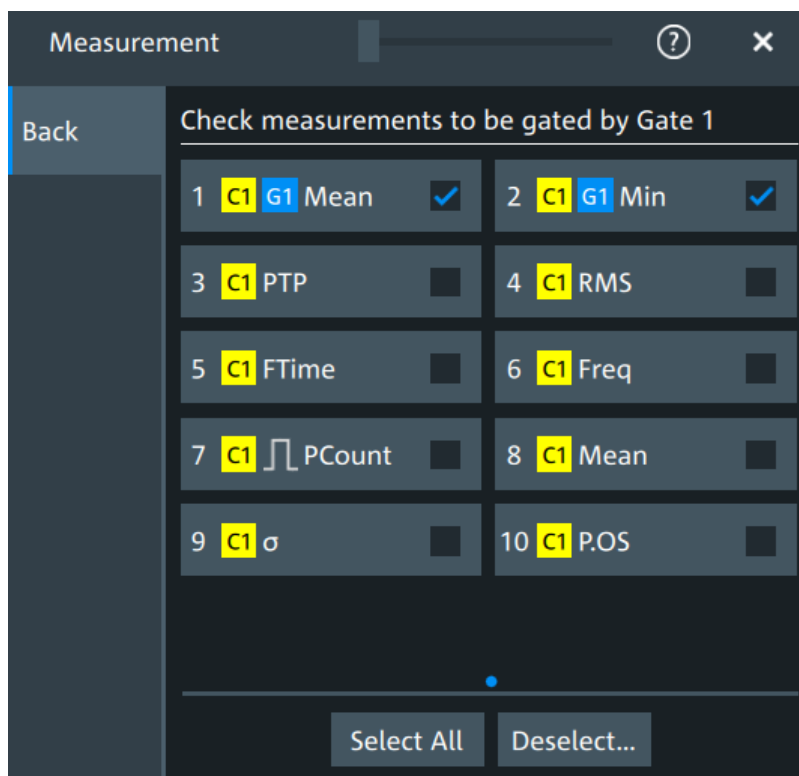


Figure 9-1: Automatic measurements gate dialog

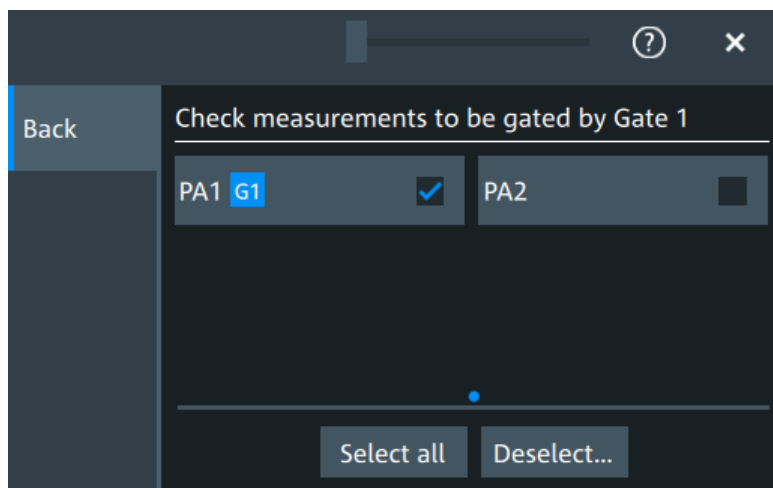


Figure 9-2: Power quality analysis gate dialog

9.2.3 Reference level

Some measurements require reference levels to obtain the measurement points, e.g. time measurements or pulse count. You can define 4 sets of reference levels. During configuration of the measurement, you select which set of reference levels is used.

Access: [Measure] > "Reference level" tab

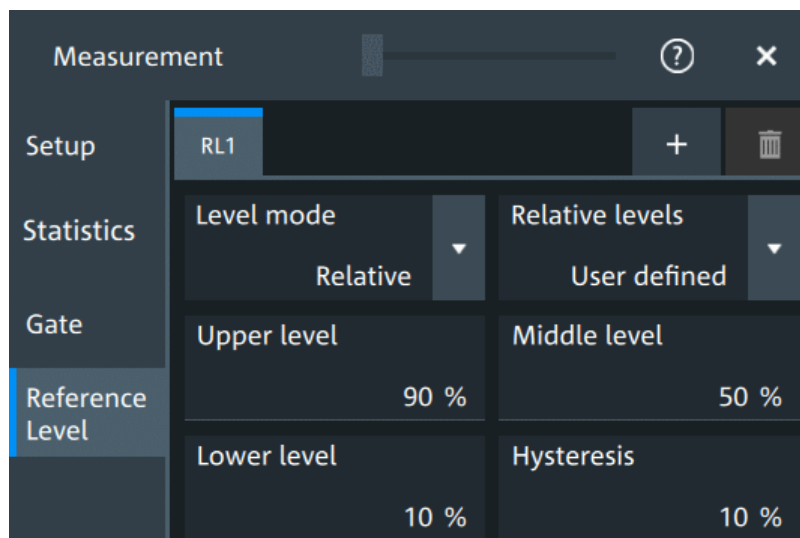


Figure 9-3: Relative reference level

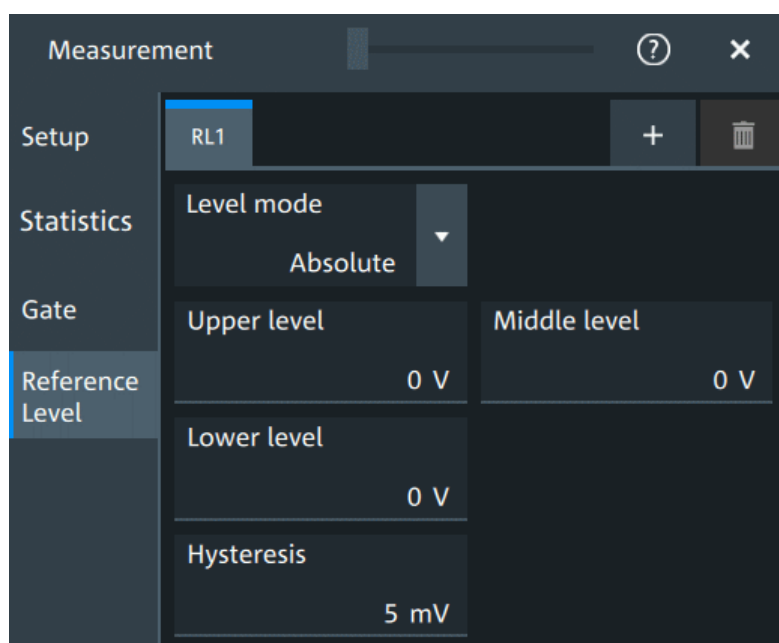


Figure 9-4: Absolute reference level

RLx

Select the correct reference level tab before you enter the settings.

You can add up to 4 reference levels.

Remote command:

[REFLevel<rl>:ENABLE](#) on page 698

Level mode

Defines if the reference level is set in absolute or relative values.

Remote command:

[REFLevel<rl>:LMODE](#) on page 698

Absolute Level mode

In the absolute mode, the reference values are set as voltages, in absolute values.

Upper level, Middle level, Lower level ← Absolute Level mode

Sets the low, middle and upper reference signal levels.

Remote command:

[REFLevel<rl>:ABSolute:LLEVEL](#) on page 699

[REFLevel<rl>:ABSolute:MLEVEL](#) on page 699

[REFLevel<rl>:ABSolute:ULEVEL](#) on page 700

Relative Level mode

In the relative mode, the reference values are set as percentages of the signal amplitude.

Relative levels ← Relative Level mode

Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:

[REFLevel<rl>:RELative:MODE](#) on page 701

Upper level, Middle level, Lower level ← Relative Level mode

Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:

[REFLevel<rl>:RELative:LOWer](#) on page 700

[REFLevel<rl>:RELative:MIDDLE](#) on page 701

[REFLevel<rl>:RELative:UPPer](#) on page 701

Hysteresis

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:








[REFLevel<rl>:ABSolute:HYSTeresis](#) on page 699




[REFLevel<rl>:RELative:HYSTeresis](#) on page 700

9.2.4 Measurement types

The MXO 4 provides many measurement types to measure time and amplitude characteristics, and to count pulses and edges.





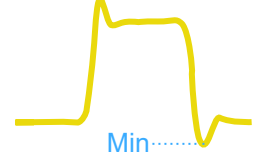

9.2.4.1 Horizontal measurements (time)

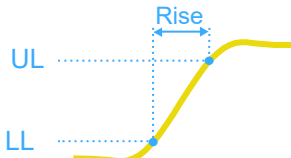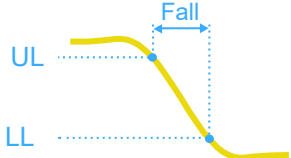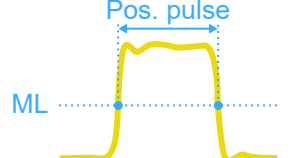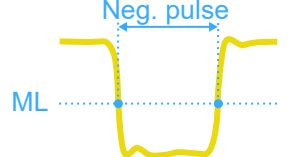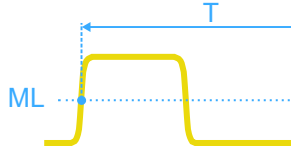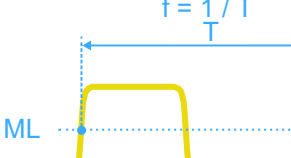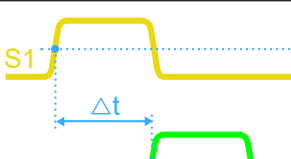Meas. type	Symbol	Description	Formula, graphic
Rise Time	RTime	Rise time of the first rising edge, the time it takes the signal to rise from the lower reference level to the upper reference level. Measurement of all events in the acquisition is possible.	
Fall Time	FTime	Fall time of the first falling edge, the time it takes the signal to fall from the upper reference level to the lower reference level. Measurement of all events in the acquisition is possible.	
Pos. pulse	PPuls	Duration of the first positive pulse: time between a rising edge and the following falling edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	
Neg. pulse	NPuls	Duration of the first negative pulse: time between a falling edge and the following rising edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	
Period	T	Time between the first two consecutive waveform edges of the same direction, measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.	
Frequency	Freq	Frequency of the signal, reciprocal value of the measured period.	
Delay	Delay	Time difference between two slopes of the same or different waveforms, measured on the middle reference level. A negative result indicates that the slope of the second source comes before the slope of the first source.	

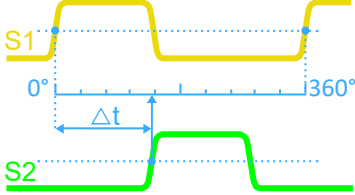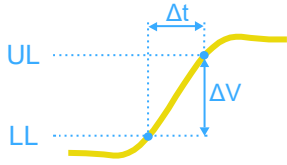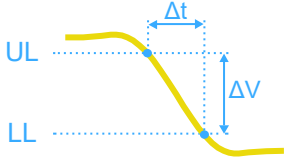Meas. type	Symbol	Description	Formula, graphic
Phase	Phs in °	Phase difference between two waveforms, measured on the middle reference level. $Phase = Delay / Period * 360$	
Burst width	Bst	Duration of one burst, measured on the middle reference level from the first edge to the last edge.	
Setup Hold Setup/Hold time	Setup Hold SHT	Setup and Hold time measurements with positive and/or negative clock edge, measured on the middle reference level. See " Setup/Hold time measurement " on page 255.	
Setup/Hold ratio	SHR	Setup/Hold ratio measurement with positive and/or negative clock edge.	$SHR = Setup / (Setup + Hold)$
Delay to trigger	DTO	Time between the trigger point and the next signal slope, measured on the middle reference level. Slope direction can be selected. If the edge is to the left of the trigger (before trigger), the result is negative.	
Slew rate rising	SRRise in V/s = V*Hz	Steepness of the rising edge: voltage difference between the lower and higher reference level, divided by the rise time.	
Slew rate falling	SRFall in V/s = V*Hz	Steepness of the falling edge: voltage difference between the higher and lower reference level, divided by the fall time.	
Pos. duty cycle	PDCyc	Width of the first positive pulse in relation to the period in %.	$PDCyc = \frac{T_{PosPulse}}{T_{Period}} \times 100\%$
Neg. duty cycle	NDCyc	Width of the first negative pulse in relation to the period in %.	$PDCyc = \frac{T_{NegPulse}}{T_{Period}} \times 100\%$

9.2.4.2 Vertical measurements (amplitude)

The unit of most amplitude measurement results depends on the measured source.

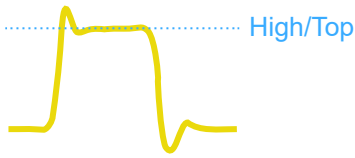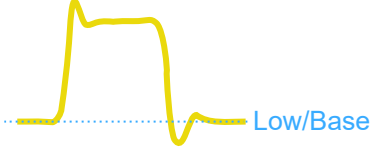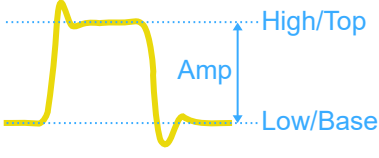Meas. type	Symbol	Description	Formula, graphic
High	High	High level of the displayed waveform - the upper maximum of the sample distribution, or the mean value of the high level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as top level.	
Low	Low	Low level of the displayed waveform - the lower maximum of the sample distribution, or the mean value of the low level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as base level.	
Amplitude	Amp	Difference between the high level and the low level of the signal. The measurement requires at least one complete period of the signal.	
Max	Max	Maximum value within the displayed waveform.	
Min	Min	Minimum value within the displayed waveform.	
Peak to peak	PTP	Difference of maximum and minimum values.	
Mean	Mean	Arithmetic average of the complete displayed waveform.	$Mean = \frac{1}{N} \sum_{k=1}^N x^k$
RMS	RMS	RMS (root mean square) value of the voltage of the complete displayed waveform.	$RMS = \sqrt{\frac{1}{N} \sum_{k=1}^N x_k^2}$
σ (S-dev/AC-RMS)	σ	Standard deviation of one cycle, usually of the first, left-most signal period.	$\sigma = \sqrt{\frac{1}{N-1} \sum_{k=1}^N (x_k - Mean)^2}$

Meas. type	Symbol	Description	Formula, graphic
Crest factor	Crest	The crest factor is also known as peak-to-average ratio. It is the maximum value divided by the RMS value of the displayed waveform.	$Crest = \frac{Max x_k }{RMS}$
Pos. Overshoot	P.OS	Overshoot of a square wave after a rising edge. It is calculated from measurement values High, local Max and Amplitude.	$OS_{pos} = \frac{Max_{local} - High}{Amplitude} \times 100\%$
Neg. Overshoot	N.OS	Overshoot of a square wave after a falling edge. It is calculated from measurement values Low, local Min and Amplitude.	$OS_{neg} = \frac{Low - Min_{local}}{Amplitude} \times 100\%$
Cycle mean	CMean	Mean value of one cycle	
Cycle RMS	CRMS	RMS (root mean square) value of one cycle	
Cycle σ (S-dev)	Cyc σ	Standard deviation of one cycle	
Cycle max	CMax	Maximum value of one cycle	
Cycle min	CMin	Minimum value of one cycle	
Cycle peak to peak	CPTP	Peak-to-peak value of one cycle: the difference of CMax and CMin	
Cycle crest	CCrest	Crest factor of one cycle	

9.2.4.3 Area and cycle measurements

All cycle measurements require that at least one complete period of the signal is acquired. Cycle measurements can be found in the "Amp/time" category.

Meas. type	Symbol	Description/result	
Area	Area	Area between the waveform and ground. T_{Eval} : evaluation time, time of a full waveform or limited by a gate	$Area = \frac{T_{Eval}}{N_{Eval}} \times \sum_{k=1}^{N_{Eval}} x(k)$
Cycle area	CArea	Area between the waveform and ground, measured for one period, see also "Area" measurement.	
Cycle Amp	CAmp	Amplitude of one cycle	

9.2.4.4 Counting


Meas. type	Symbol	Description/result	
Pulse count	PCount	<p>The number of positive or negative pulses of the waveform, or of both positive and negative pulses.</p> <p>The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A positive pulse is counted if a rising edge and a following falling edge are detected. A negative pulse is counted if a falling edge and a following rising edge are detected.</p>	
Edge count	EdCo	<p>The number of positive or negative edges, or of both positive and negative edges.</p> <p>The instrument determines the mean value of the signal and counts an edge every time the signal passes the mean value.</p>	

9.2.5 Settings for measurements

In the "Measurement" dialog, you can enable measurement and define their settings.


9.2.5.1 Setup tab

Access: "Menu" > "Measurement" > "Setup" tab.

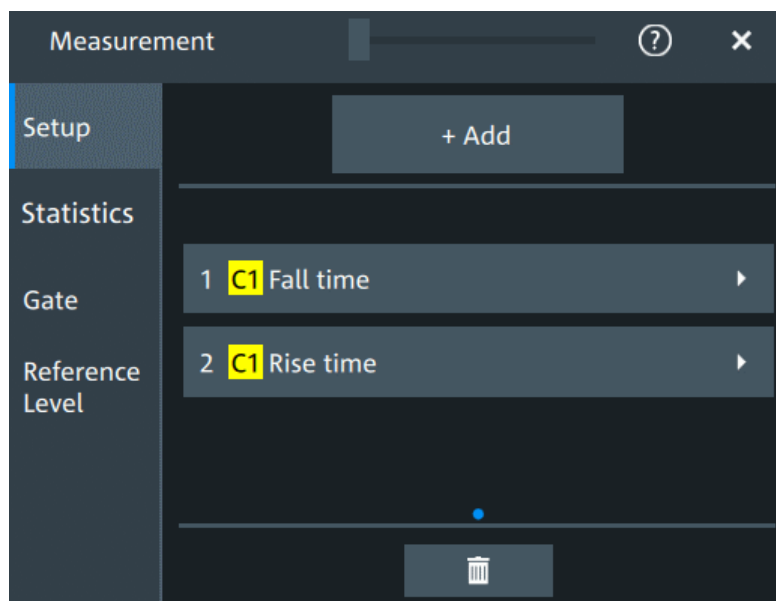

Add

Opens a dialog to select the measurements.

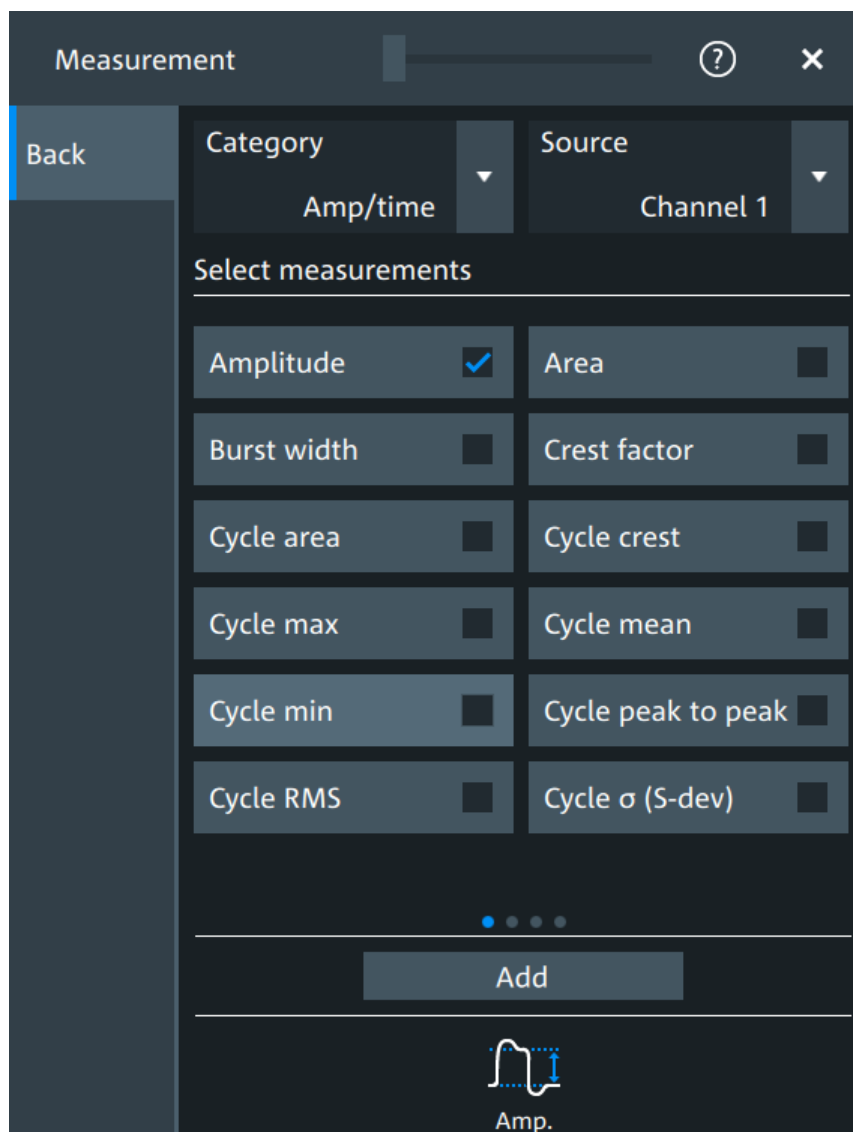**Category** ← **Add**

Selects the measurement category. Some measurements are listed in more than one category.

For an overview of the available categories and measurements, see [Chapter 9.2.4, "Measurement types"](#), on page 247.

Source ← **Add**

Sets the source of the measurement.

Remote command:

[MEASurement<mg>: SOURce](#) on page 685

Delete icon


Enables the removal of measurements. You can delete a single measurement by tapping on the delete icon next to it.

You can also delete all current measurements with "Delete All".

9.2.5.2 Measurement type specific settings

You can define additional parameters for some measurements.

Access: "Menu" > "Measurement" > "Setup" tab > add measurement > select measurement

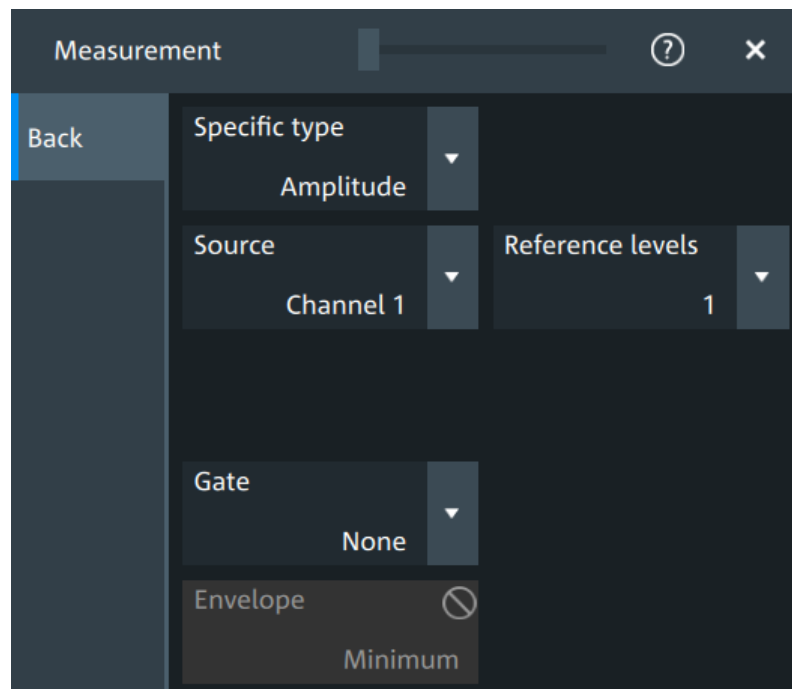**Specific type**

Selects the type of measurement that you want to define the settings for.

Source

Sets the source of the measurement.

Remote command:

[MEASurement<mg>:SOURce](#) on page 685

Reference levels

Selects the set of reference levels that is used for the measurement (RL1, RL2...), and for the selected source. Each source of the measurement can have its own reference level set.

Only the numbers of defined reference level sets are listed. Define the reference level set before you select it, see [Chapter 9.2.3, "Reference level"](#), on page 244.

Remote command:

[MEASurement<mg>:REFLevel<sc>:REFerence](#) on page 690

Gate

Selects the gate that is used for limiting the measurement range. Define a gate before you select it, see [Chapter 9.2.2, "Gate settings for measurements"](#), on page 242.

Remote command:

[MEASurement<mg>:GATE](#) on page 690

Envelope

This setting is only available for measurements on envelope waveforms, see [Acquisition mode](#).

- "Both" The upper and the lower envelope are used in measurements. For time measurements, the averages of min and max values are used, that is, the measurement is performed on the average waveform built from the upper and lower envelope.
- "Maximum" Measurements are performed on the upper envelope.
- "Minimum" Measurements are performed on the lower envelope.

Remote command:

[MEASurement<mg>:ENVSelect](#) on page 687

Pulse count

Available, if "Specific type" is set to "Pulse train".

Sets the number N of positive pulses for the "Pulse train" measurement. This measurement measures the duration of N positive pulses from the rising edge of the first pulse to the falling edge of the N-th pulse.

Remote command:

[MEASurement<mg>:AMPTime:PTCount](#) on page 688

Pulse slope

Available, if "Specific type" is set to "Pulse count".

Sets the first slope of the pulses to be counted.

- "Positive" Positive pulses are counted.
- "Negative" Negative pulses are counted.
- "Either" Both positive and negative pulses are counted.

Remote command:

[MEASurement<mg>:AMPTime:PSlope](#) on page 688

Edges slope

Available, if "Specific type" is set to "Edge count" or "Delay to trigger".

Sets the edge direction to be used for delay measurement: positive, negative, or either edge.

Remote command:



[MEASurement<mg>:AMPTime:ESlope](#) on page 688

Setup/Hold time measurement

Setup/Hold measurements analyze the relative timing between two signals: a data signal and the synchronous clock signal. Setup time is the time that the data signal is steady before clock edge - the time between a data transition and the next specified clock edge. Hold time is the time that the data signal is steady after clock edge - the time between a data transition and the previous specified clock edge.

"Setup/Hold time" measures and displays the setup and hold durations. "Setup/Hold ratio" measurements return the ratio of the setup time to the sum of hold and setup time: $T_{Setup} / (T_{Setup} + T_{Hold})$.

The clock edge can be defined, the polarity of the data signal does not matter.

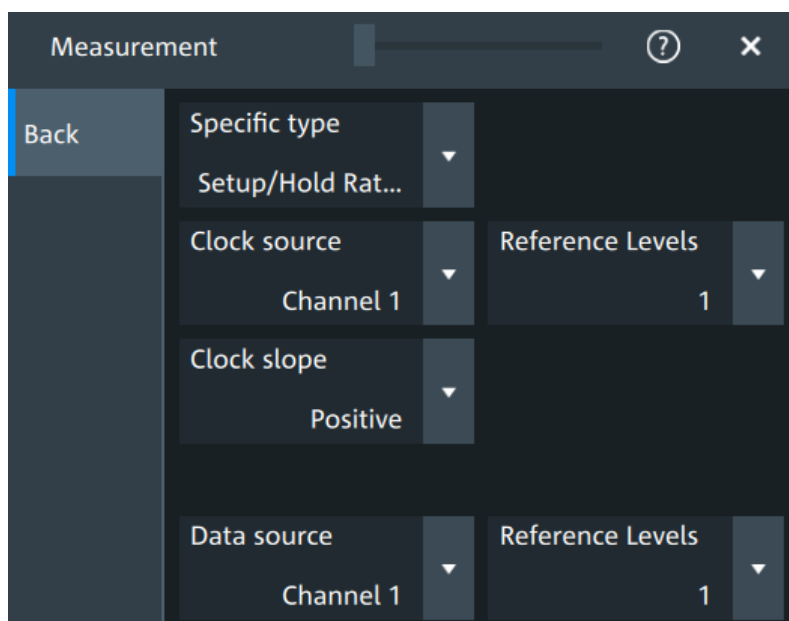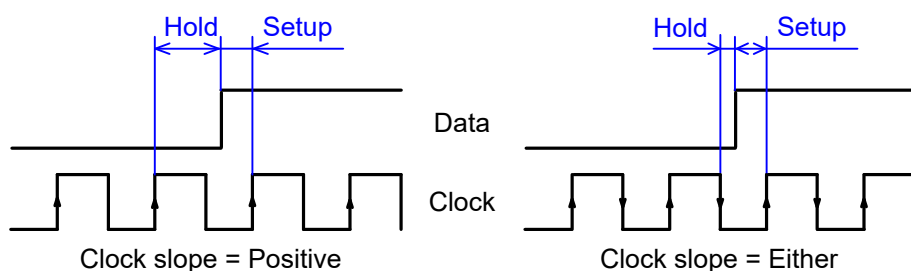

Clock source ← Setup/Hold time measurement

Sets the waveform used as clock in the setup/hold measurement.

Remote command:

[MEASurement<mg>:SSRC](#) on page 686

Clock slope ← Setup/Hold time measurement

Sets the edge of the clock from which the setup and hold times are measured: positive, negative, or either of them. If "Either" is selected, the clock edges next to the data edge are considered regardless of the clock slope.

Remote command:


[MEASurement<mg>:AMPTime:CSLope](#) on page 687

Data source ← Setup/Hold time measurement

Sets the source for the data signal.

Delay measurement

The specific settings for delay measurement allow you to measure the time between any two slopes at any reference level. Therefore, the reference levels and the slopes must be defined for each source individually. The measurement result is negative if the edge of the second source comes before the edge of the first source.

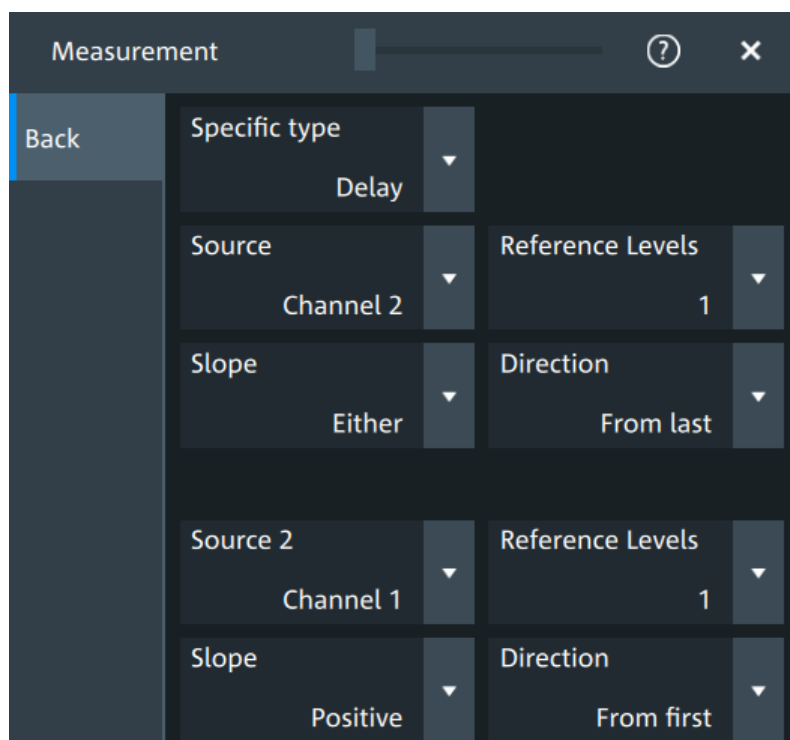

Slope ← Delay measurement

Sets the edge of each source, between which the delay is measured: positive, negative, or either of them.

Remote command:

[MEASurement<mg>:AMPTime:DELAy<n>:SLOPe](#) on page 689

Direction ← Delay measurement


Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Remote command:

[MEASurement<mg>:AMPTime:DELAy<n>:DIRectioN](#) on page 689

Delay to trigger measurement settings

Delay to trigger measures the time between the trigger point and the following slope of a waveform. The delay between the trigger and the slope can be high compared to the accuracy of the acquisition, and the trigger point can even be outside of the current acquisition.

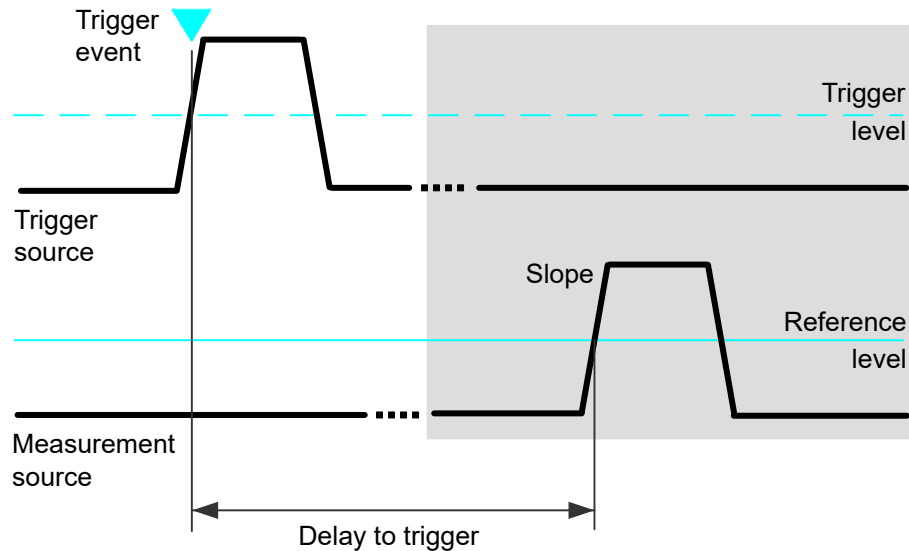

To configure the trigger conditions, use the trigger setup.


"Edges slope" Sets the edge direction to be used for delay measurement: positive, negative, or either edge.

Remote command:

[MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe](#) on page 689

9.2.6 Statistics

Access: "Menu" > "Measurement" > "Statistics" tab.

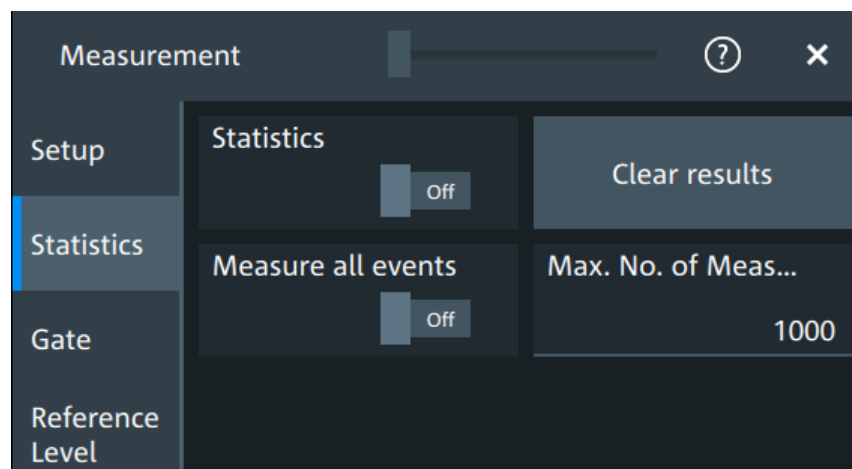

In addition to the current measurement results, you can enable a statistical evaluation. It returns the current, minimum and maximum measurement values, the average and

standard deviation, and the number of measured waveforms. The results are shown in a separate tab below the grid. If the cursor measurement is active simultaneously, its results are shown beside the statistics results.

Statistics

Activates or deactivates the statistical evaluation for the measurement.

Remote command:

[MEASurement<mg>:STATistics\[:ENABLE\]](#) on page 694

Clear results

Deletes the statistical results for all measurements, and starts a new statistical evaluation if the acquisition is running.

Remote command:

[MEASurement<mg>:STATistics:ARESet](#) on page 693

Measure all events

Normally, only one measurement is performed for each acquired waveform to get best performance. If "Measure all events" is enabled, more than one result is taken from one acquired waveform and the results are included in evaluation. For example, the rise time is measured on all pulses in the waveform, not only on the first.

The result table shows only the first result of the waveform, the following results are used only for evaluation. The number of considered results can be restricted: see [Max. No. of events](#).

Measuring all events is useful when calculating statistics.

The setting affects all measurements, it is a global setting. However, if a track is enabled for a selected measurement, all results are considered for this measurement, independent from the global setting.

Remote command:

[MEASurement<mg>:MULTiple](#) on page 694

Max. No. of events

Sets the maximum number of measured events per acquisition.

Remote command:

[MEASurement<mg>:MNOMeas](#) on page 694

9.2.7 Track

A track shows the measurement results over time for an acquired waveform. The track is the graphical interpretation of all measurement values of a single acquisition. Furthermore, the track reveals trends of change in the analysis and preserves the timing relationship of the measurement results to the signal.

Tracks can be enabled for each active measurement. Enabling the track also enables "Measure all events" for the selected measurement.

To analyze tracks, you can use cursor measurements, zoom, mathematics and spectrum.

9.2.7.1 Track settings

Access: "Menu" > "Measurement" > "Track" tab.

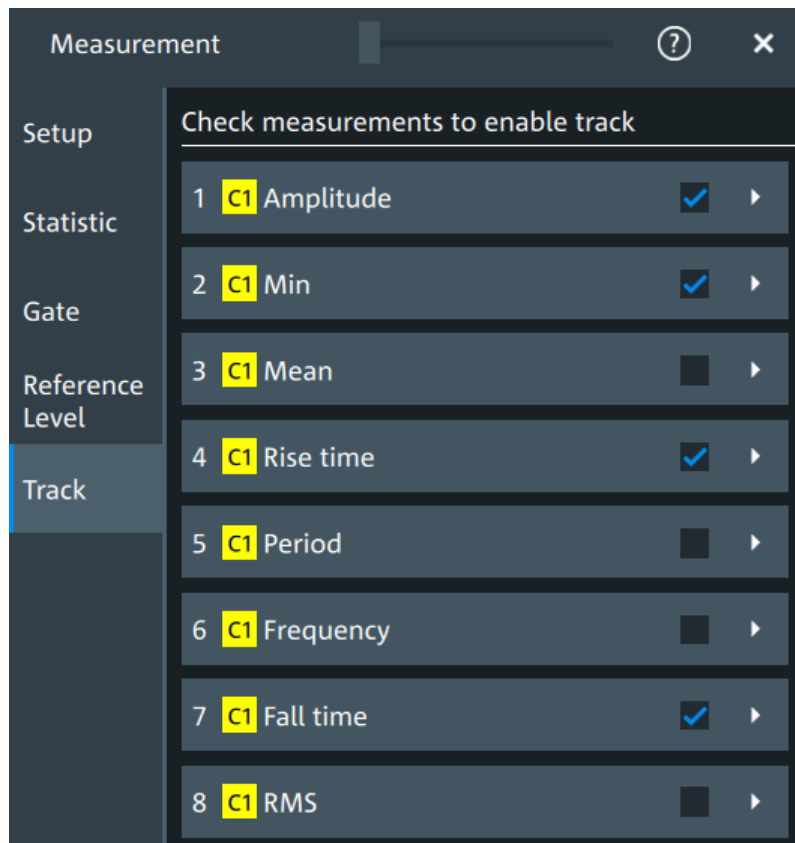


Figure 9-5: Measurement selection for tracks

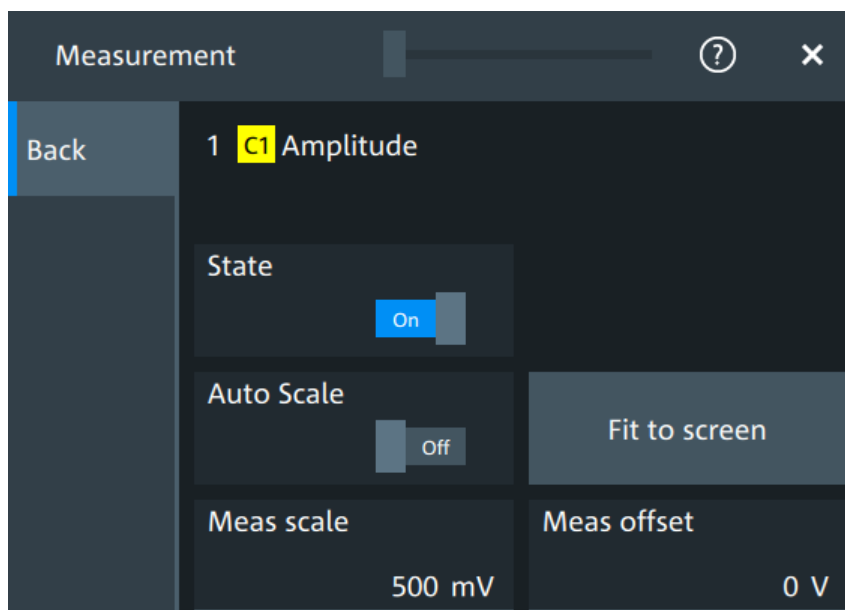


Figure 9-6: Track settings

Check measurements to enable track

The list shows all active measurements. Select the check square of a measurement to enable the track for this measurement. Tap the button to open the track settings.

State

Enables or disables the track for the selected measurement.

Enabling the track also enables "Measure all events" for the selected measurement.

Remote command:

[MEASurement<mg>:TRACk\[:STATe\]](#) on page 702

Auto Scale

Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Remote command:

[MEASurement<mg>:TRACk:CONTiunous](#) on page 702

Fit to screen

Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Remote command:

[MEASurement<mg>:TRACk:AUTO](#) on page 702

Meas scale

Defines the vertical scale of the track diagram. If "Auto Scale" is on, the current scale value is displayed.

You can also select the track waveform and use the vertical [Scale] knob to change the scale.

Remote command:

[MEASurement<mg>:TRACk:SCALe](#) on page 703

Meas offset

Defines the offset of the track waveform. If "Auto Scale" is on, the current offset value is displayed.

You can also select the track waveform and use the vertical [Position] knob to change the offset.

Remote command:

[MEASurement<mg>:TRACk:OFFSet](#) on page 703

9.2.7.2 Examples of track usage

The examples in this section provide ideas on how you can use tracks for waveform analysis.

Tracks with math functions



Figure 9-7: Tracks used in math functions

The example is set up as follows:

- Waveform on channel 1
- 3 measurements on C1: positive duty cycle, period and positive pulse width
- Enable track for each measurement: Track 1 (positive duty cycle), Track 2 (period), Track 3 (positive pulse width)
- Math1 = Trk1 * Trk2
- Math2 = Math1 / 100

Expected values: $\text{Period} * \text{Pos. duty cycle} / 100 = \text{Positive pulse width}$, i.e. $\text{Math2} = \text{Trk3}$

- $\text{Math3} = \text{Math2} - \text{Trk3}$
Expected values = 0

Spectrum on track



Figure 9-8: Track and spectrum on track, C1 is not in diagram

The example is set up as follows:

- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1
- Spectrum with "Source" = Track 1
- Enable "PeakList" > "Peak on waveform"

Zoom on track

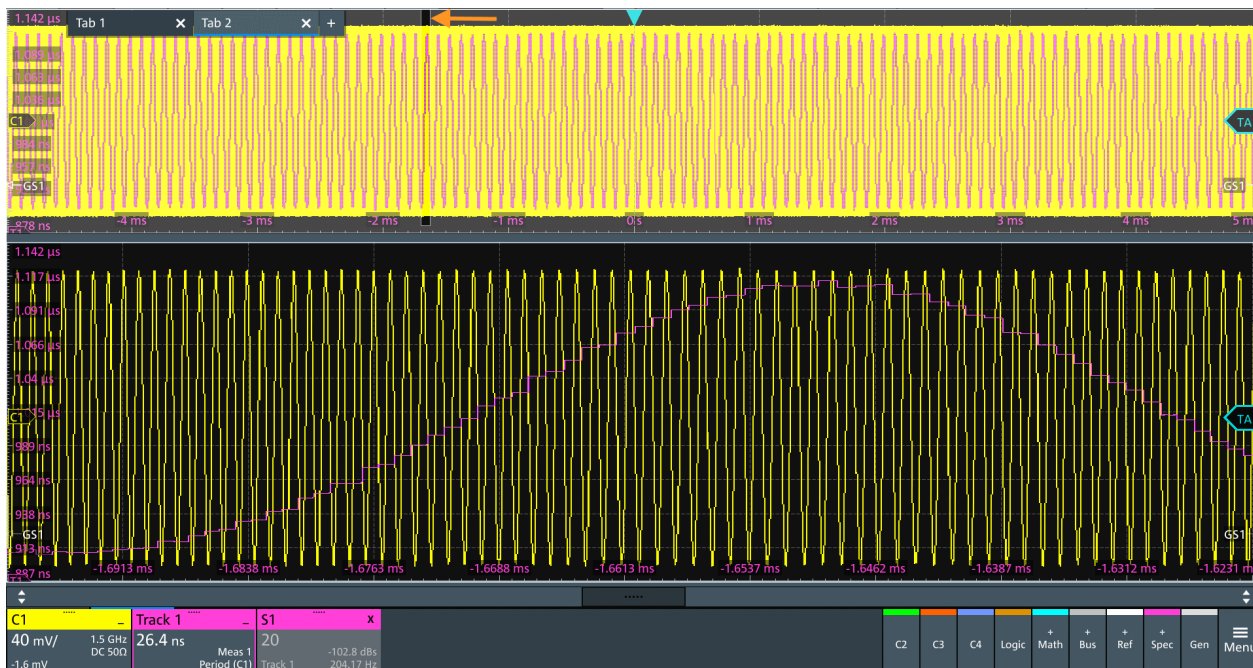


Figure 9-9: Track and C1 in the upper diagram, zoom below

The example is set up as follows:


- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1
- Drag and drop the track on the channel waveform
- Create zoom

10 Spectrum analysis

The MXO 4 provides an easy way to set up a spectrum analysis. The spectrum settings are independent of the time domain settings but the time and frequency domains are time-correlated.

10.1 Fundamentals of spectrum analysis

During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. As a result, either the magnitude or the phase of the determined frequencies can be displayed. Spectrum analysis can be restricted to an extract of the original time base, and the results display can be restricted to a specified frequency range.

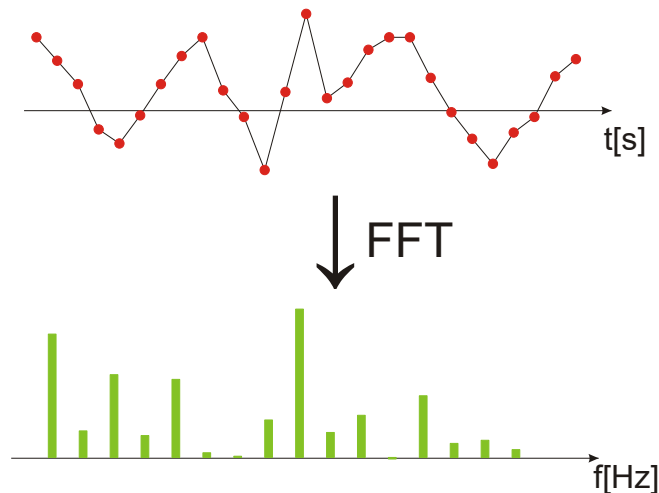

Window functions


Each frame is multiplied with a specific window function after sampling in the time domain. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

There are several window functions that can be used in FFT analysis. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

For details, see ["Window type"](#) on page 270.

Gating functions

You can restrict the time base of the input signal for which spectrum analysis is to be performed. You can define start and stop times for the time base extract.

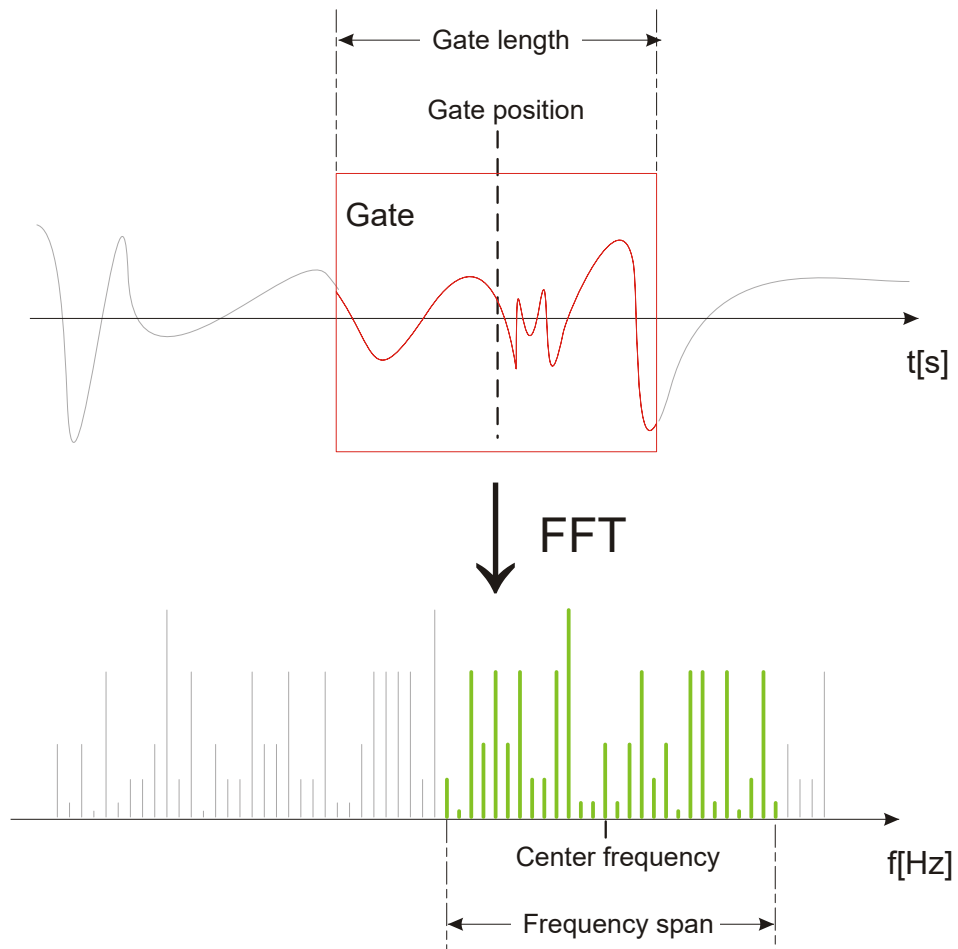

Restricting the result range

You can restrict the results of the spectrum analysis to a specified frequency range. The frequency range can be defined in two ways:

- Define a center frequency and frequency span
- Define start and stop frequencies

Dependencies between spectrum parameters

Spectrum analysis in the MXO 4 is highly configurable. Several parameters, including the resolution bandwidth, frequency span and center frequency, can be defined according to your requirements. Note, however, that several parameters are correlated and not all can be configured independently of the others.

The **resolution bandwidth** defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase measurement speed.

The minimum achievable RBW depends on the integration time which is equivalent to the number of samples available for calculation. If a higher spectral resolution is

required, the number of samples must be increased by using a higher sample rate or longer record length. To simplify operation, some parameters are coupled and automatically calculated, such as record length and RBW.

The **frequency span** and **center frequency** define the start and stop frequency of the spectral diagram. By default, a suitable frequency range according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled, so that the parameters can be adjusted automatically as necessary.

With a **Span/RBW ratio** of 100 and a screen resolution of 1000 pixels, each frequency in the spectrum is displayed by 10 pixels. A span/RBW ratio of 1000 provides the highest resolution. For full flexibility, the span/RBW coupling can also be disabled. Note, however, that a higher span/RBW ratio (i.e. low RBW values and large frequency spans) result in large amounts of data and extend the duration of the calculation.

10.2 Configuring spectrum waveforms


During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. A basic spectrum waveform can be displayed quickly. By defining additional parameters, the waveform can be configured in more detail.

To display a basic spectrum waveform

1. Press the [Spectrum] key.

The "Setup" tab of the "Spectrum" dialog box opens.

2. Set the "Source" to the input signal.
3. Enable "Display".

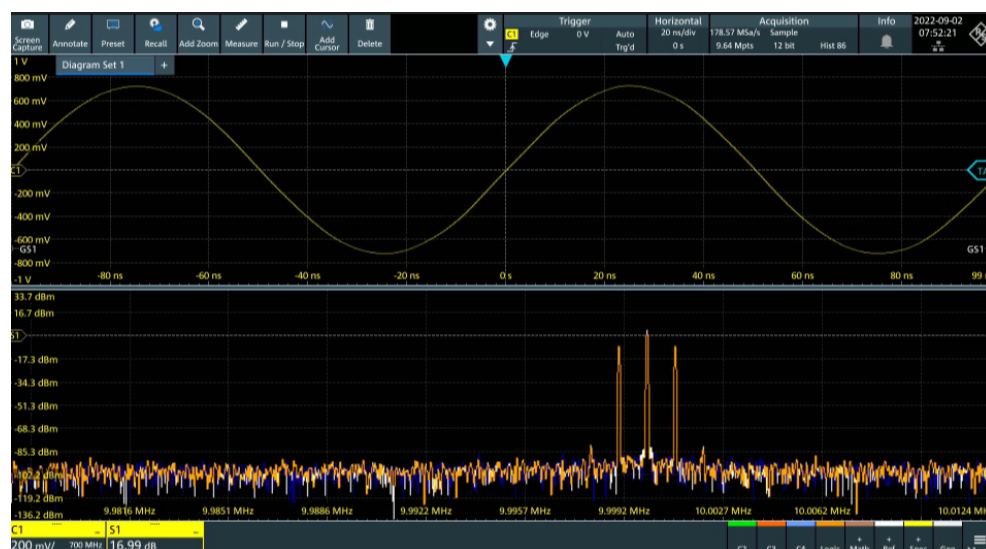

4. If necessary, edit the spectrum waveform parameters as described in the following procedures.

To configure the spectrum

By default, a suitable frequency range for the expected horizontal values according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled. If a more precise evaluation is required, for example for postprocessing in a different application, disable the coupling and change the frequency ranges and resolution bandwidth values as required.

1. Press [Spectrum].
The "Spectrum" dialog opens.
2. In the "Setup" tab, specify the frequency range you want to display using one of the following methods:
 - Select "CF span". Enter a "Center" and a "Span" that define the spectrum.
 - Select "Start Stop". Enter a "Start" and "Stop" frequencies that define the spectrum.
 - Tap the "Full span" button to display the complete spectrum resulting from the FFT analysis.
3. Define the resolution bandwidth for the spectrum result.
The resolution bandwidth defines how precise the results are, i.e. how close together the individual frequencies can be. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase performance.
You can define the RBW manually, or couple it to other settings. Do one of the following:
 - To couple the RBW to the span, enable "Auto RBW". Define the "Span/RBW" ratio, the smaller the ratio, the higher the RBW becomes to display the same frequency span.
 - Disable "Auto RBW". Enter the "RBW" manually.
4. Tap "Advanced".
5. Select the most suitable "Window type" for your source data. Window functions are multiplied with the input values and thus can improve the spectrum display. For details, see "[Window type](#)" on page 270.

To restrict the input values (gating)


You can restrict the time range for which the FFT is calculated, resulting in a restricted spectrum.

1. Open [Spectrum] > "Gate" tab.
2. Enter the "Start" and the "Stop" times that define the gate area.
3. Set the "Position" and the "Width".

The spectrum waveform displays the spectrum for the specified time span.

10.3 Spectrum setup

Access: "Menu" > "Spectrum" > "Setup" tab.

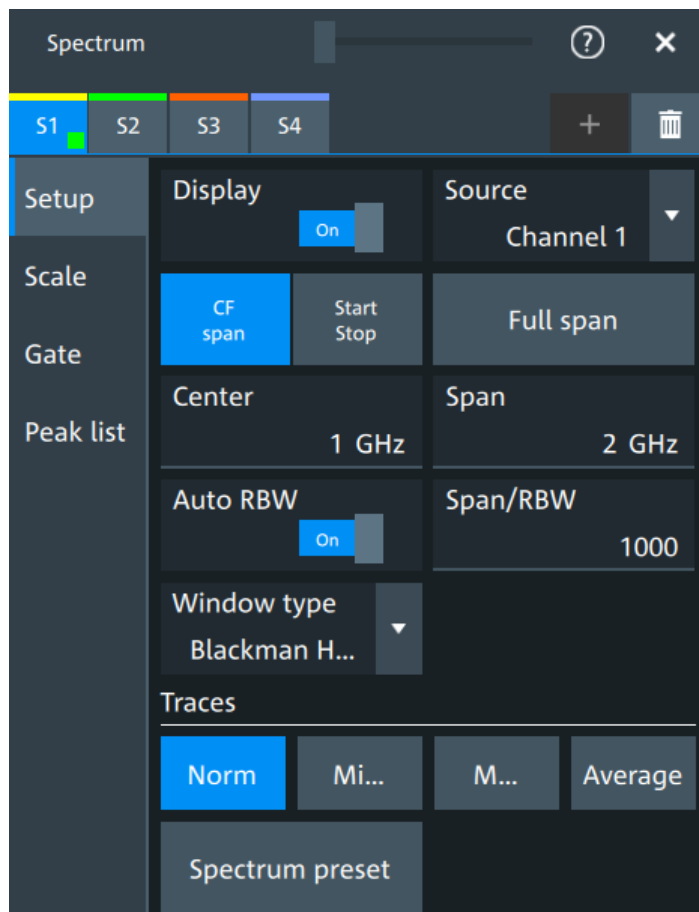

In this tab, you define the settings for the spectrum window. The display can be restricted to the results for a certain time base extract and to a specified frequency range.



The settings in this dialog are greyed out and cannot be changed, if "Coupling" is enabled in the "Scale" tab.

Display

Enables the spectrum.

Remote command:

[CALCulate:SPECTrum<sp>:STATe](#) on page 722

Source

Selects the source for the spectrum.

Remote command:

[CALCulate:SPECTrum<sp>:SOURce](#) on page 722

Full span

Displays the full frequency span.

CF span, Start Stop

Selects if the frequency span is defined through a "Center"/"Span" pair or through the "Start"/"Stop".

Center

Defines the position of the displayed frequency range, which is $(Center - Span/2)$ to $(Center + Span/2)$. The width of the range is defined using the frequency span setting.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:CENTer` on page 718

Span

The span is specified in Hertz and defines the width of the displayed frequency range, which is $(Center - Span/2)$ to $(Center + Span/2)$. The position of the span is defined using the "Center" setting.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:SPAN` on page 719

Start

Defines the start frequency of the displayed frequency span.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:START` on page 719

Stop

Sets the stop frequency of the displayed frequency span.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:STOP` on page 719

Auto RBW

Couples the frequency span to the "RBW" setting.

If span and RBW values are coupled, changing the span also changes the RBW.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO`
on page 717

Span/RBW

Defines the coupling ratio for Span/RBW.

This setting is only available if "Auto RBW" is enabled.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio`
on page 717

RBW

Defines the resolution bandwidth. Note that the resolution bandwidth is correlated with the span, record length and acquisition time. If a constant record length is to be used, the RBW can be adapted if the required number of samples cannot be acquired.

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue]`

on page 718

Window type

Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 4 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully, to find the optimum solution for the measurement task.

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Blackman Harris (default)	Worst	Best	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements
Gaussian	Good	Good	Weak signals and short duration
FlatTop2	Poor	Best	Accurate single-tone measurements
Kaiser Bessel	Poor	Good	Separation of two tones with differing amplitudes and a small frequency distance

Remote command:

`CALCulate:SPECTrum<sp>:FREQuency:WINDow:TYPE` on page 720

Traces

Spectrum analysis can only be performed on a maximum number of values at once. If more values must be calculated, the input signal is divided into segments, each of which is calculated separately. The segments need not to be disjunct. In this case, the arithmetic mode defines how the final result is calculated from the individual results.

The following methods are available:

- "Norm" The data of only one segment is considered. In effect, no arithmetics are processed.
- "Min hold" Determines the minimum result for each input value from the data of the current acquisition and the acquisitions before.
- "Max hold" Determines the maximum result for each input value from the data of the current acquisition and the acquisitions before.

"Average" The average is calculated over the number of segments set with "Average count".

Remote command:

`CALCulate:SPECTrum<sp>:WAVEform:AVERAge:ENABle` on page 723

`CALCulate:SPECTrum<sp>:WAVEform:AVERAge:COUNT` on page 723

`CALCulate:SPECTrum<sp>:WAVEform:MAXimum:ENABle` on page 724

`CALCulate:SPECTrum<sp>:WAVEform:MINimum:ENABle` on page 724

`CALCulate:SPECTrum<sp>:WAVEform:NORMal[:ENABle]` on page 724

Spectrum preset


Presets the spectrum measurement.

Remote command:

`CALCulate:SPECTrum<sp>:PRESet` on page 722

10.4 Spectrum scale

Access: "Menu" > "Spectrum" > "Scale".

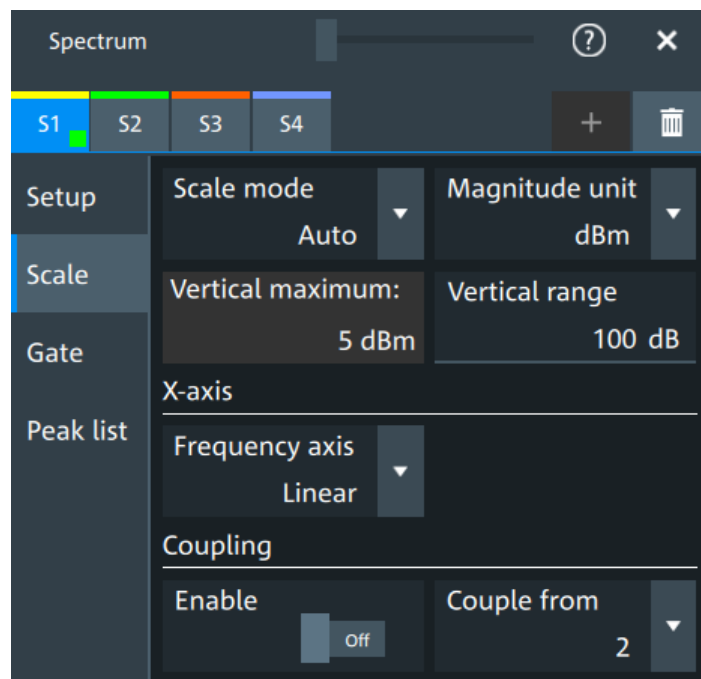

Scale mode

By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Note: When you change the scaling values manually using the [Scale] rotary knob, the scale mode is set to "Manual" temporarily.

"Manual" Enter the required values for "Vertical maximum" and "Vertical range".

"Auto" "Vertical maximum" is read-only.

Magnitude unit

Sets the unit for the y-axis.

The display values are calculated for the termination impedance that is set in "Vertical" > "Other" tab > "Impedance".

Remote command:

[CALCulate:SPECTrum<sp>:MAGNitude:SCALE](#) on page 721

Vertical maximum

Sets the maximum displayed value on the vertical scale.

Remote command:

[CALCulate:SPECTrum<sp>:MAGNitude:LEVel](#) on page 721

Vertical range

Sets the range of the spectrum values to be displayed.

Remote command:

[CALCulate:SPECTrum<sp>:MAGNitude:RANGe](#) on page 721

Frequency axis

Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Available are logarithmic and linear scaling.

Remote command:


[CALCulate:SPECTrum<sp>:FREQuency:SCALE](#) on page 718

Coupling

If the coupling is enabled, the settings of the current spectrum are coupled to the spectrum selected with "Couple from".

10.5 Spectrum gate

Access: "Menu" > "Spectrum" > "Scale"

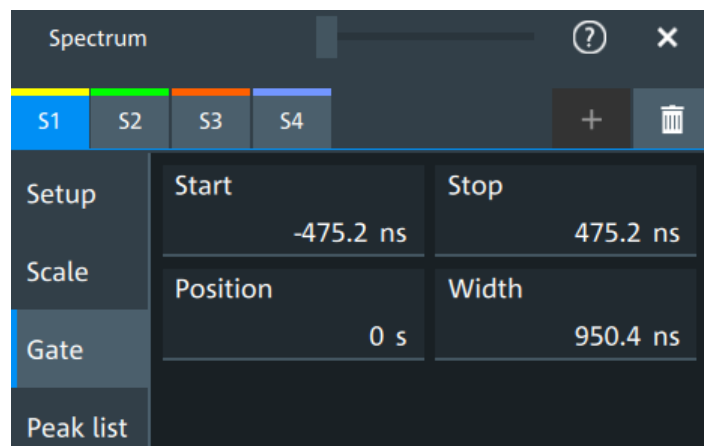

Spectrum gating restrict the spectrum analysis to a user-defined region of the captured time domain signal.

Start

Sets the starting value for the gate.

Remote command:

[CALCulate:SPECTrum<sp>:GATE:START](#) on page 725

Stop

Sets the end value for the gate.

Remote command:

[CALCulate:SPECTrum<sp>:GATE:STOP](#) on page 725

Position

Sets the position of the displayed frequency range.

The width of the gate is defined using the "Width" setting.

Remote command:

[CALCulate:SPECTrum<sp>:GATE:POSition](#) on page 725

Width

Defines the width of the displayed gate.

The position of the span is defined using the "Position" setting.


Remote command:

[CALCulate:SPECTrum<sp>:GATE:WIDTh](#) on page 726

10.6 Spectrum peak list

A peak list measurement detects all peaks above a user-definable threshold and optionally indicates the peaks in the spectrum diagram.

Access: "Menu" > "Spectrum" > "PeakList".

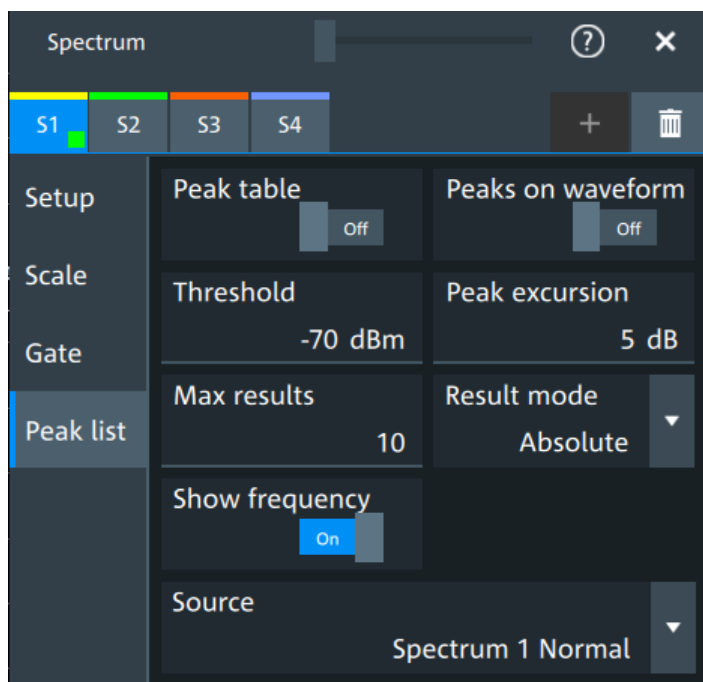

In the peak list dialog, you can define various criteria for a peak search. The peaks can be indicated in the frequency diagram by peak boxes, and the measured peak frequencies and magnitudes are listed in the peak list table.

The number of determined peaks can be defined. You can sort the results by frequency or power value, and the peak labels are adjusted accordingly.



Also, you can adjust some of the display settings, see [Chapter 5.3.4, "Peak list"](#), on page 89.

To analyze the peaks in a spectrum, you can also use cursors on the spectrum waveform and peak search functions. For details, see [Chapter 9.1.3.3, "Peak search tab"](#), on page 236.

Remote commands query peak results and to change the results display:

- [CALCulate:SPECTrum<sp>:PLISt:RESult\[:VALue\]?](#) on page 728
- [CALCulate:SPECTrum<sp>:PLISt:SORT:COLumn](#) on page 728
- [CALCulate:SPECTrum<sp>:PLISt:SORT:ORDer](#) on page 729
- [CALCulate:SPECTrum<sp>:PLISt:LABel:INVert](#) on page 729

Peak table

Enables the display of the peak table.


Remote command:

[CALCulate:SPECTrum<sp>:PLISt\[:STATe\]](#) on page 727

Peak on waveform

Displays a box with a description for each detected peak in the spectrum, including the magnitude. If "Show frequency" is enabled, the frequency values are also displayed.

If this option is disabled, the peaks are marked on the diagram only with a point marker.

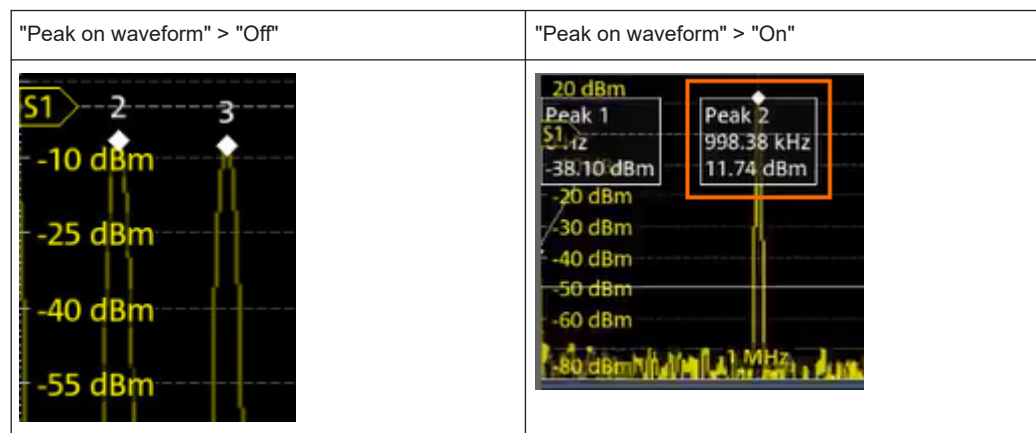

Remote command:

[CALCulate:SPECTrum<sp>:PLISt:SPOW](#) on page 728

Threshold

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:

[CALCulate:SPECTrum<sp>:THReshold](#) on page 722

[CURSor<cu>:THReshold](#) on page 716


Peak excursion

Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

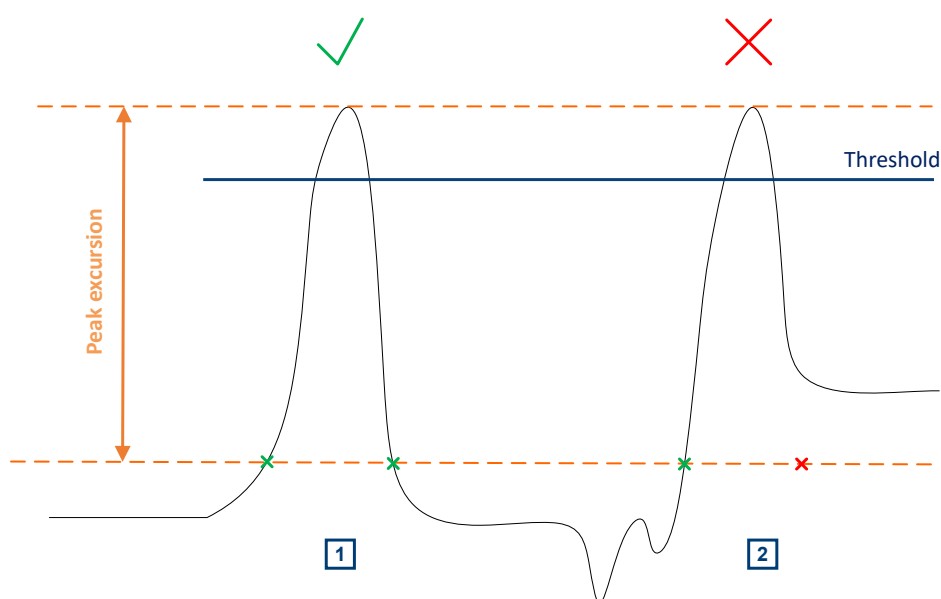

Remote command:

[CALCulate:SPECTrum<sp>:PEXCursion](#) on page 723

[CURSor<cu>:PEXCursion](#) on page 715

Max results

Sets the maximum number of measurement results that are listed in the result table.

Remote command:

[CALCulate:SPECTrum<sp>:PLISt:MAXCount](#) on page 727

Result mode

Selects how the measurement results are displayed.

"Absolute" The peaks are shown in absolute value, dBm.

"Relative" The level of the carrier is shown in absolute value dBm. The values of the peaks are shown relatively to the carrier in dBc.

Remote command:

`CALCulate:SPECTrum<sp>:PLISt:MODE` on page 727

Show frequency

Includes the frequency of the detected peak in the diagram labels.

Remote command:

`CALCulate:SPECTrum<sp>:PLISt:LABel:FREQuency[:STATe]` on page 729

Source

Selects the source of the peak table. You can select one of the traces that is enabled with [Traces](#).


Remote command:

`CALCulate:SPECTrum<sp>:PLISt:SOURce` on page 727

11 Applications

All available applications are provided in the "Apps" dialog.

- ▶ To open an application, press the [Apps] key.

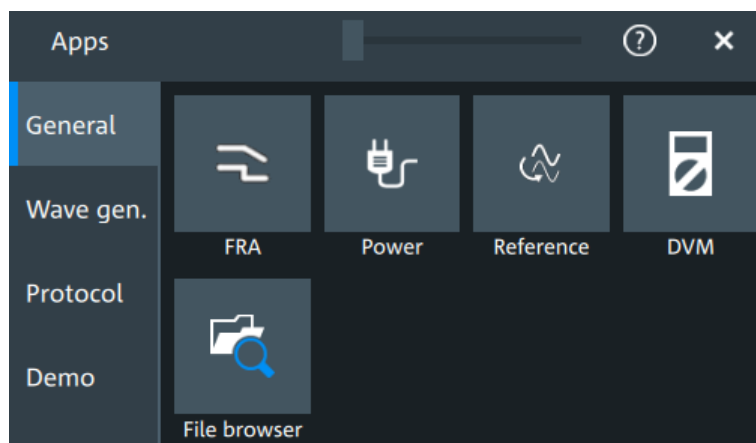

Some applications are described in different chapters. See:

- [Chapter 8.4, "Reference waveforms"](#), on page 219
- [Chapter 15, "Waveform generator \(option R&S MXO4-B6\)"](#), on page 478
- [Chapter 12.5, "File browser dialog"](#), on page 338
- [Chapter 13, "Protocol analysis"](#), on page 340

Also the "Demo" is available in the "Apps" dialog. It is only for demonstration purposes of the functionalities of MXO 4.

11.1 Frequency response analysis (option R&S MXO4-K36)

The frequency response analysis (FRA) option lets you perform low-frequency response analysis on your oscilloscope. It characterizes the frequency response of a variety of electronic devices, including passive filters and amplifier circuits. For switched-mode power supplies, it measures the control loop response (CLR) and power supply rejection ratio (PSRR).

The FRA option uses the oscilloscope's built-in waveform generator to create stimulus signals ranging from 10 mHz to 100 MHz. Measuring the ratio of the stimulus signal and the output signal of the DUT at each test frequency, the oscilloscope plots gain and phase logarithmically.

Having both time and frequency domain views allows you to monitor if the injected signal causes distortion that leads to errors in the measurement.

11.1.1 About the frequency response analysis plot

FRA plot display

The FRA plot display is divided into several sections.

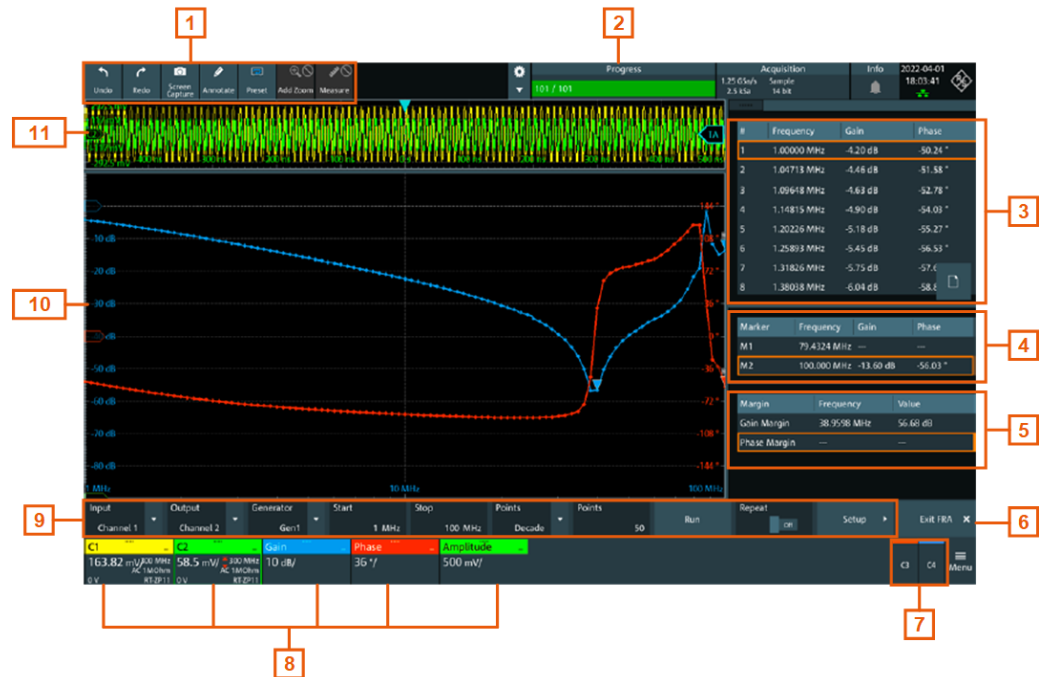


Figure 11-1: FRA plot display

- 1 = Toolbar
- 2 = Progress bar
- 3 = FRA result table
- 4 = Marker value table
- 5 = Margin value table
- 6 = Exit app button
- 7 = Inactive channels
- 8 = Active channels and plots
- 9 = FRA plot controls
- 10 = FRA plot diagram, gain: blue color; phase: red color; amplitude: green color
- 11 = Channel diagram

Progress bar


Displays the current status of the measurement: how many points have already been displayed and the total set number of points.

FRA plot diagram

The FRA plot diagram has the frequency presented on the x-axis. The gain (blue color waveform) and phase (red color waveform) scales are on the y-axis. The gain plot represents the ratio between input and output. The phase plot shows the phase shift between input and output.

FRA plot result table

In the FRA plot result table, all sample points are displayed with the respective value for the frequency, gain, phase and amplitude. If you select a sample in the table, the respective points in the FRA plot are highlighted by a white vertical helper line on the gain and the phase curve.

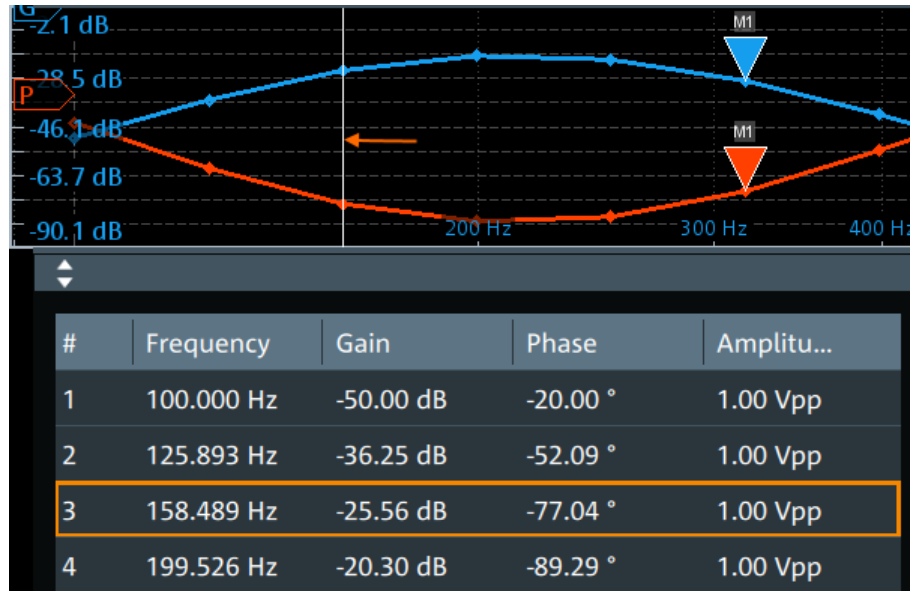

Marker value table

There are two markers available for the FRA plot. They are highlighted on the FRA plot diagram by a white line and the respective marker number 1 or 2. You can move the markers as needed.

In the marker table you can see the frequency, phase and gain values for both of them.

Remote commands:

- [FRANalysis:MARKer<m>:FREQuency](#) on page 746
- [FRANalysis:MARKer<m>:GAIN?](#) on page 746
- [FRANalysis:MARKer<m>:PHASe?](#) on page 746

Margin value table

The margin value displays the gain and the phase margin frequency and value of the system. Higher margin values are an indicator for higher stability of the system.

Remote commands:

- [FRANalysis:MARGin:STATe](#) on page 744
- [FRANalysis:MARGin:GAIN:FREQuency?](#) on page 745
- [FRANalysis:MARGin:GAIN:VALue?](#) on page 745
- [FRANalysis:MARGin:PHASe:FREQuency?](#) on page 745
- [FRANalysis:MARGin:PHASe:VALue?](#) on page 745

Vertical position and size of the waveforms

To set the position and the vertical scaling of the gain, phase or amplitude waveforms, select the waveform and use the vertical [Scale] and [Position] (upper knob) knobs.

The remote commands for setting the position and scales of the are described in [Chapter 17.15.1.4, "Frequency response analysis diagram settings"](#), on page 740.

11.1.2 Using a frequency response analysis

Connecting the test setup



To avoid measurement uncertainties, make sure that the cables connecting the input and the output of your DUT to the oscilloscope are of similar length.


Starting the FRA

1. Press the [Apps] key.
2. In the "General" tab, tap "FRA".

The FRA window opens. Only the settings relevant for the FRA setup are visible in the "Menu".

Closing the FRA

- ▶ Tap the "Exit FRA" key at the bottom-right corner of the display.

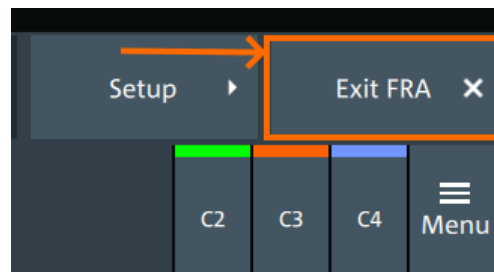

11.1.3 Settings for frequency response analysis

The following chapters, describes the settings that you can define for the frequency response analysis.

11.1.3.1 Setup

Access: [Apps] > "General" > "FRA" > "Setup".

**Input**

Sets the channel for the input signal of the DUT.

Remote command:

[FRANalysis:INPut\[:SOURce\]](#) on page 735

Output

Sets the channel for the output signal of the DUT.

Remote command:

[FRANalysis:OUTPut\[:SOURce\]](#) on page 736

Generator

Selects the built-in generator to start a frequency sweep for a defined frequency range.

Remote command:

[FRANalysis:GENerator\[:CHANnel\]](#) on page 734

Start, Stop

Set the start and stop frequency of the sweep.

Remote command:

`FRANalysis:FREQuency:START` on page 733

`FRANalysis:FREQuency:STOP` on page 734

Points

Selects, if the number of points are measured as total or per decade and sets the number of points.

Remote command:

`FRANalysis:POINts:TOTal` on page 737

`FRANalysis:POINts:MODE` on page 736

`FRANalysis:POINts:LOGarithmic` on page 736

Amplitude

Sets a fixed amplitude for the frequency response analysis.

Remote command:

`FRANalysis:GENerator:AMPLitude` on page 734

User load

Selects the generator voltage display for 50Ω or high impedance load.

Remote command:

`FRANalysis:GENerator:LOAD` on page 734

Amplitude mode

Selects, if the amplitude is a constant value ("Amplitude") or is defined as an amplitude profile.

Remote command:

`FRANalysis:POINts:MODE` on page 736

Amplitude profile

Opens a dialog to set the amplitude profile. See [Chapter 11.1.3.2, "Amplitude profile"](#), on page 284.

You can then define different amplitudes for different frequencies. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case distortion might occur.

If this function is enabled, a green colored diagram of the amplitudes for the different frequencies can be displayed on the screen.

Remote command:

`FRANalysis:AMPLitude:MODE` on page 733

`FRANalysis:AMPLitude:ENABle` on page 742

Run

Starts the frequency response analysis.

Remote command:

`FRANalysis:STATe` on page 732

Repeat


Repeats the measurement, using the same parameters.

Remote command:

[FRANalysis:REPeat](#) on page 737

11.1.3.2 Amplitude profile

Access: [Apps] > "General" > "FRA" > "Setup" > "Amplitude profile".

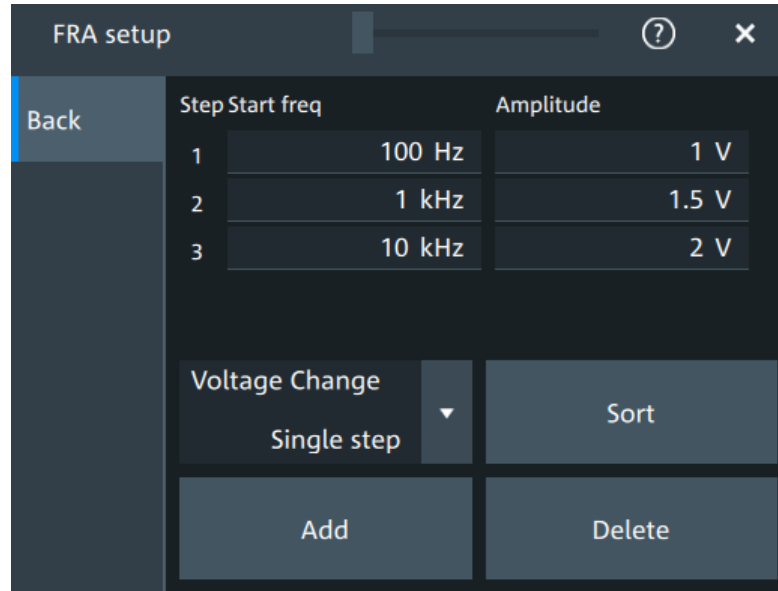

Opens a dialog to set the amplitude profile. You can then define different amplitudes for different frequency. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case distortion can occur.



Step start freq, Amplitude

Set the frequency and amplitude values for the selected point.

Remote command:

[FRANalysis:AMPLitude:PROFile:POINT<m>:AMPLitude](#) on page 739

[FRANalysis:AMPLitude:PROFile:POINT<m>:FREQuency](#) on page 739

[FRANalysis:AMPLitude:PROFile:COUNT](#) on page 738

Voltage change

Selects if the voltage change is done as a single step or as a ramp.

Remote command:

[FRANalysis:AMPLitude:PROFile:MODE](#) on page 739

Add

Adds a new point to the amplitude profile.

Remote command:

[FRANalysis:AMPLitude:PROFile:APOint](#) on page 738

Sort


Sorts the points in the amplitude table by frequency, starting with the lowest frequency.

Remote command:

[FRANalysis:AMPLitude:PROFile:SORT](#) on page 738

Delete

If enabled a delete icon appears next to each point in the amplitude profile table. You can tap on it to delete the amplitude point.

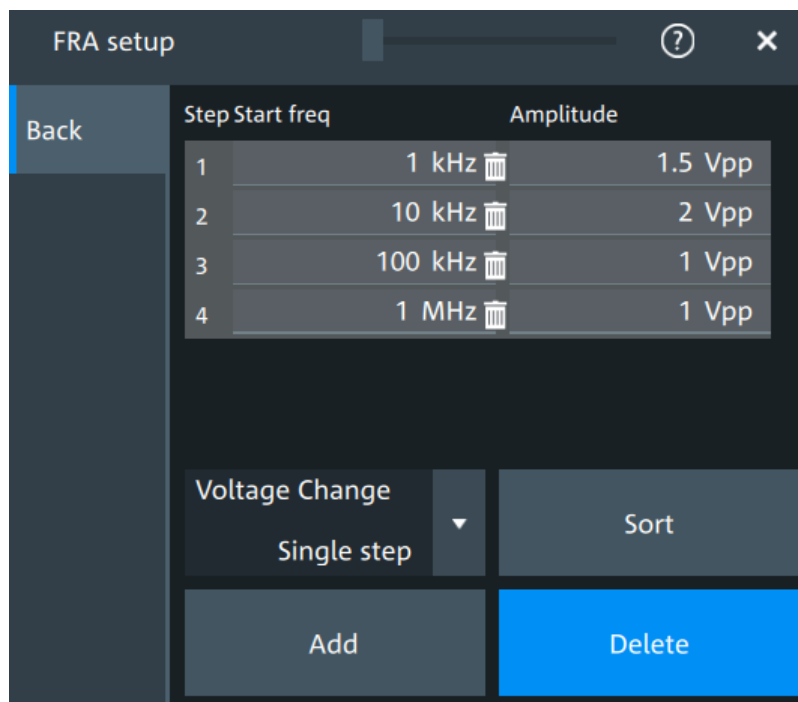


Remote command:

[FRANalysis:AMPLitude:PROFile:POINT<m>:REMOve](#) on page 738

11.1.3.3 Advanced

Access: [Apps] > "General" > "FRA" > "Setup" > "Advanced".

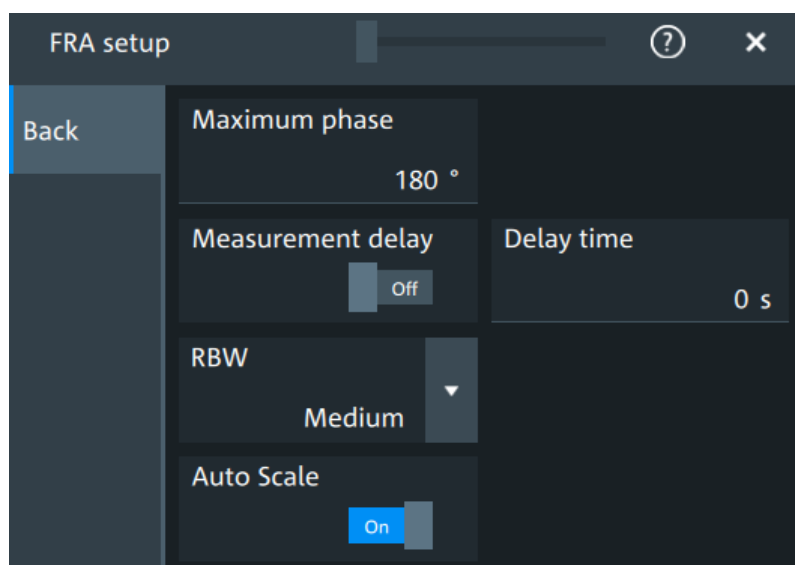

Maximum phase

Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Remote command:

[FRANalysis:PHASe:MAXimum](#) on page 737

Measurement delay, Delay time

Sets a time delay, that the system waits before measuring the next point of the plot.

Time delay is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present.

Remote command:

[FRANalysis:MEASurement:DELay:STATE](#) on page 735

[FRANalysis:MEASurement:DELay\[:TIME\]](#) on page 735

RBW

Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

"High (fast)" A high RBW value is useful for obtaining a general understanding of a system's behavior over a wide frequency range. The accuracy of the measurement is not as good, but the measurement is completed fast.

"Medium" A medium RBW value is a compromise between the measurement time and measurement accuracy.

"Low (slow)" A low RBW value allows for a more detailed analysis of the system. Since more data needs to be collected, the measurement time would increase significantly.

Remote command:

[FRANalysis:MEASurement:RBW](#) on page 736

Auto scale

If enabled, the vertical scaling of input and output channel is done automatically for every new measurement frequency point.

That guarantees a non-disturbed signal and a maximum of measurement resolution.

For **Coupling** = "DC", the channel offset is also changed to compensate the signal offset.


The function is disabled if calibration is active.

Remote command:

[FRANalysis:AUToscale](#) on page 733

11.1.3.4 Display

Access: [Apps] > "General" > "FRA" > "Display".

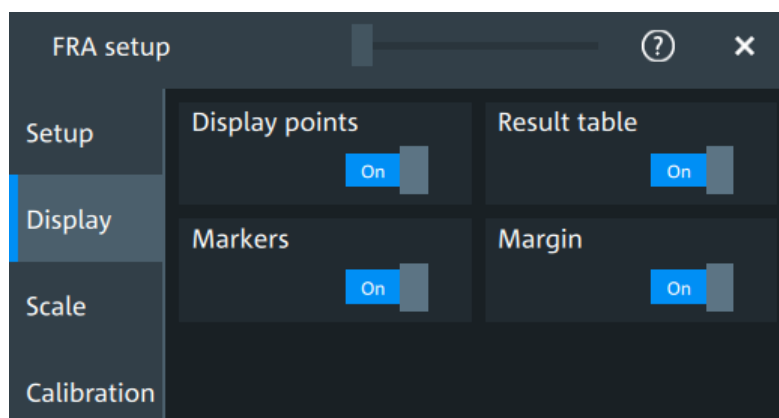

In this dialog, you can select which elements are displayed in the FRA diagram.

Display points

Enables the display of the measurement points for the frequency response analysis.

Remote command:

[FRANalysis:MEASurement:POINT\[:DISPlay\]](#) on page 735

Result table

Enables the display of the result table for the FRA.

Remote command:

[FRANalysis:RESult:STATe](#) on page 744

Markers

Enables the display of the marker table for the FRA.

Remote command:

[FRANalysis:MARKer<m>:STATe](#) on page 745

Margin

Enables the display of the margin table for the FRA.

Remote command:

[FRANalysis:MARGin:STATe](#) on page 744

11.1.3.5 Scale

Access: [Apps] > "General" > "FRA" > "Scale".

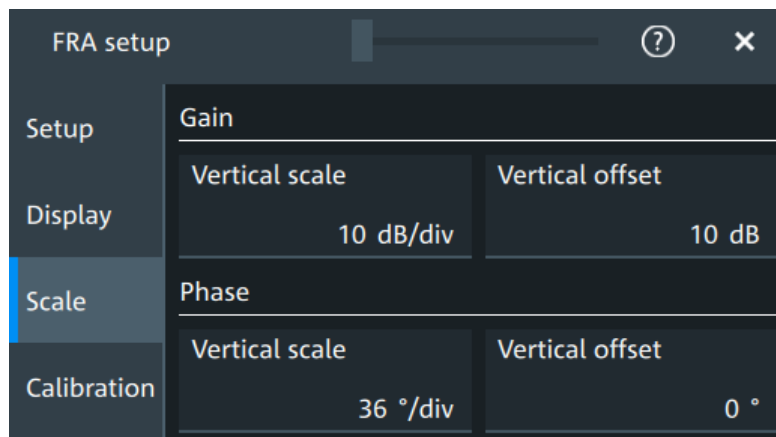


Figure 11-2: Scale dialog for Mode = Gain/Phase

Vertical scale

Sets the scale of the y-axis in the function diagram.


Vertical offset

Sets a voltage offset to adjust the vertical position on the screen.

11.1.3.6 Calibration

Calibration can be used to compensate the electrical parameter of probes, cables, connector or fixtures.

Access: [Apps] > "General" > "FRA" > "Calibration".

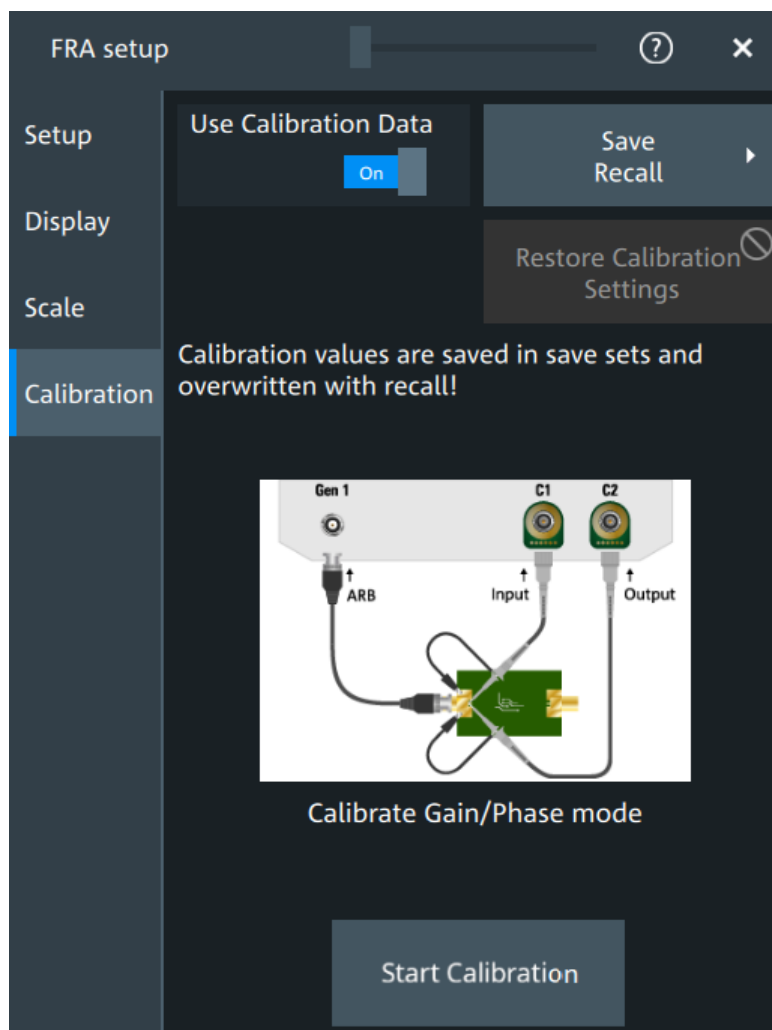

Test setup considerations

[Example of a calibration test setup](#) shows an example of a test setup, where the input probe is connected to [C1] and the output probe is connected to [C2]. The input is also connected to the ARB generator.

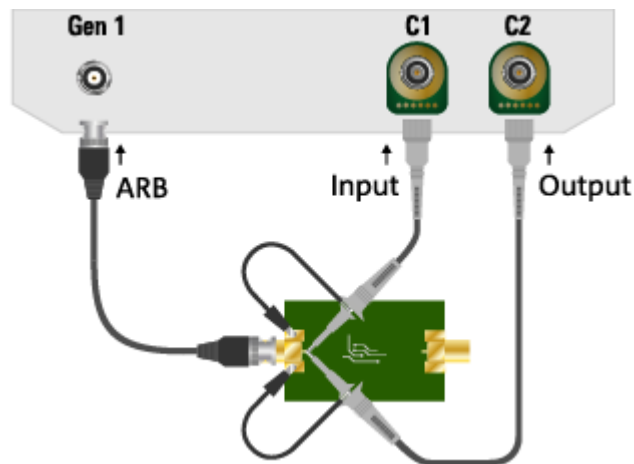


Figure 11-3: Example of a calibration test setup

Input = [C1], [Gen1]
Output = [C2]

Consider also the following:

- Calibration for FRA is only possible with probes connected to the input and output channels.
- For best FRA calibration results, shorten the DUT and place the probe tips as near as possible to each other.
- If there is a fixture for the DUT it should be part of the calibration setup.
- If the DUT needs a termination, it is to be conducted with an external termination direct on DUT output / input.

Calibration state

Once the calibration is started, a label is shown in the toolbar.



The calibration label displays the status of the calibration. The following states are available:

- "Valid": calibration values are used
- "Invalid": device settings changed
- "Running": a calibration cycle is running
- "None": not performed or no data

Settings influencing calibration

Calibration is only valid for the settings that are active during its execution. If one of the following settings is changed, the calibration becomes "Invalid":

- "Input" and "Output" channel
- "Channel coupling" and "Bandwidth"
- "Channel scaling"

- "Generator"
- "User load"
- "Amplitude mode"
- "Amplitude profile"
- "Amplitude profile" > "Voltage change"
- "Start" frequency
- "Stop" frequency
- "Points" mode and total points
- "Measurement delay"
- "Delay time"
- "RBW"

If calibration is active, "Auto scale" is disabled.

The following settings are available for the calibration:

Use calibration data

If enabled, the user calibration data is used for the frequency response analysis.

Remote command:

[FRANalysis:CALibration:STAtE](#) on page 740

Restore calibration settings

Restores the FRA settings, to the values that were selected during the calibration process. This allows you to further perform measurements with a valid calibration state.

See also "[Settings influencing calibration](#)" on page 290.

Save/Recall

Opens the "Save/Recall" dialog. You can recall a saved saveset.

Start calibration

Starts the calibration. The button is only enabled, if there is a valid test setup.

The state of the calibration process is displayed in the calibration label in the toolbar.

After a calibration is performed successfully, the calibration values are saved automatically.


Remote command:

[FRANalysis:CALibration:CALibration](#) on page 740

[FRANalysis:CALibration:RESult?](#) on page 740

11.1.4 FRA saving results

Access: [Apps] > "General" > "FRA" > "Setup" > "Save/Recall" > "Results".

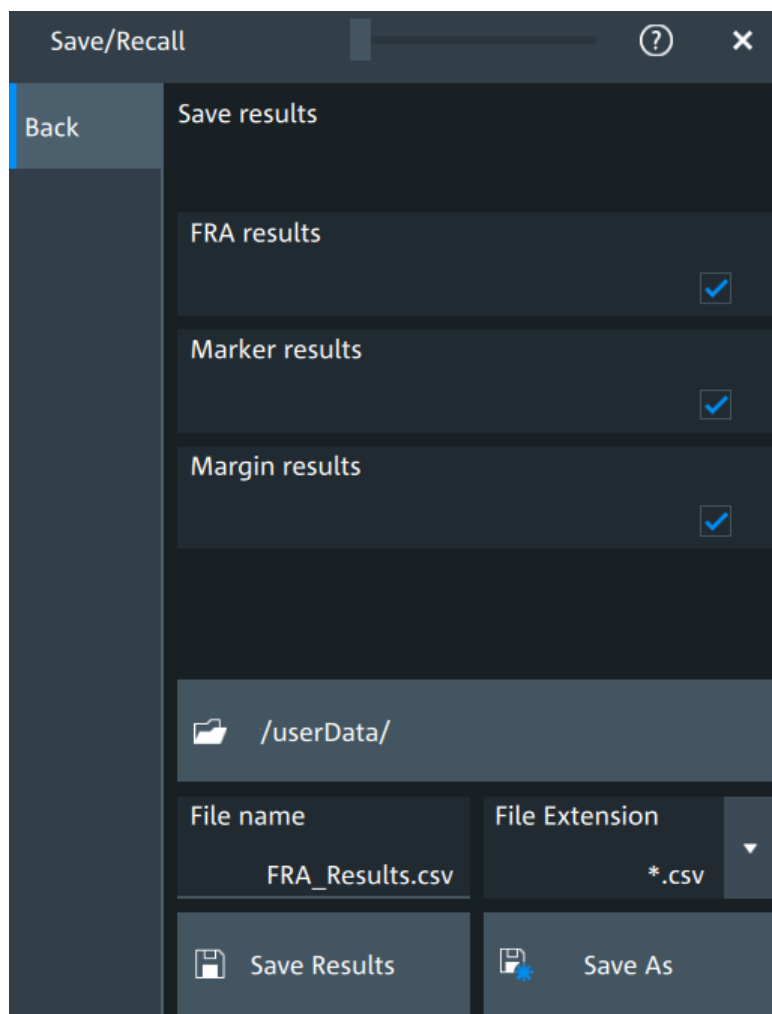

FRA results

In this dialog you can select which result values you want to include in your FRA export results file.

The following options are available:

- "FRA results": includes the frequency, gain, phase and amplitude
- "Marker results": includes the marker frequency and gain
- "Margin results": includes the margin gain and phase

Remote command:

[EXPort:RESult:SElect:FRA:MARGin](#) on page 747

[EXPort:RESult:SElect:FRA:MARKer](#) on page 747

[EXPort:RESult:SElect:FRA:RESult](#) on page 747

11.1.5 Dependencies of the measurement setup

When performing the FRA measurement consider the following dependencies on parameters from the "Vertical" menu.

- [Coupling](#):

- For frequencies smaller than 10 Hz, the "Coupling" on page 125 is set to DC.
- For frequencies higher than 10Hz, you can select a Coupling manually. The default set value is AC.
- The bandwidth value is changed to a higher value, if it the selected bandwidth is smaller than double the stop frequency.
- If the bandwidth of the connected probe is lower than the "Stop" frequency, a warning is shown.

11.2 Power analysis (option R&S MXO4-K31)

With the MXO 4 and option R&S MXO4-K31, you can perform power analysis measurements.




For best measurement results, it is recommended to set Bandwidth = 20 MHz. If using the HD mode, it is recommended to set Bandwidth = 100 MHz.

11.2.1 Power measurement selection


To add a new power measurement

1. Tap the "Menu" > "Apps" > "General" tab > "Power", to open the power measurement dialog.
2. In the "Analysis" tab, tap "Add".


A dialog opens to select the power measurements.

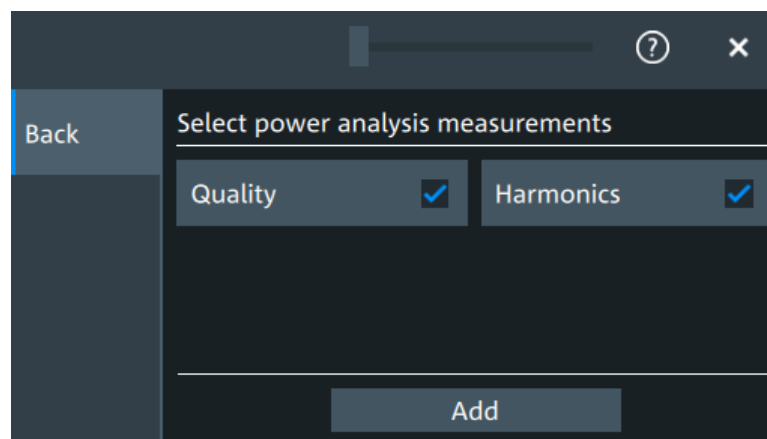


3. Tap on a power measurement from the list to enable it. Selected measurements are marked with a blue check mark in their checkbox.
4. Tap "Add" to add the selected measurements. All selected measurements are enabled.

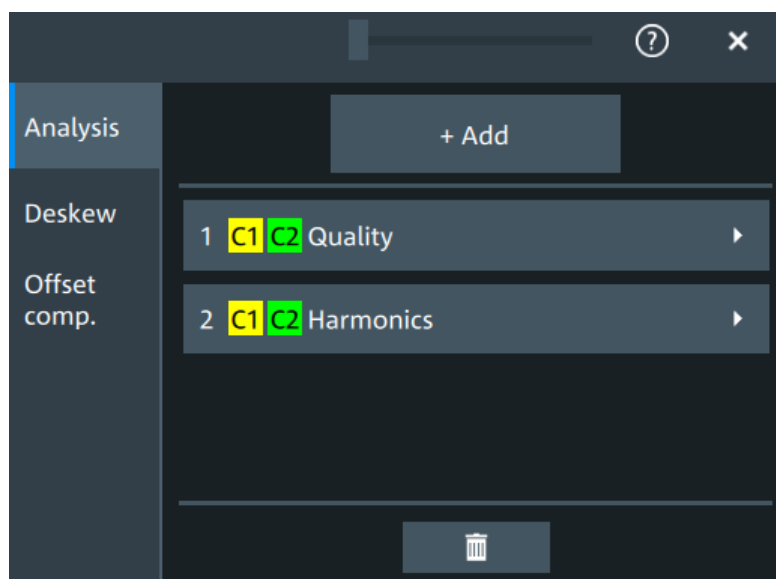

To delete a measurement

1. Tap the "Menu" > "Apps" > "General" tab > "Power", to open the power measurement dialog.
2. In the "Analysis" tab, tap .

A delete icon appears in the selection button of each measurement.

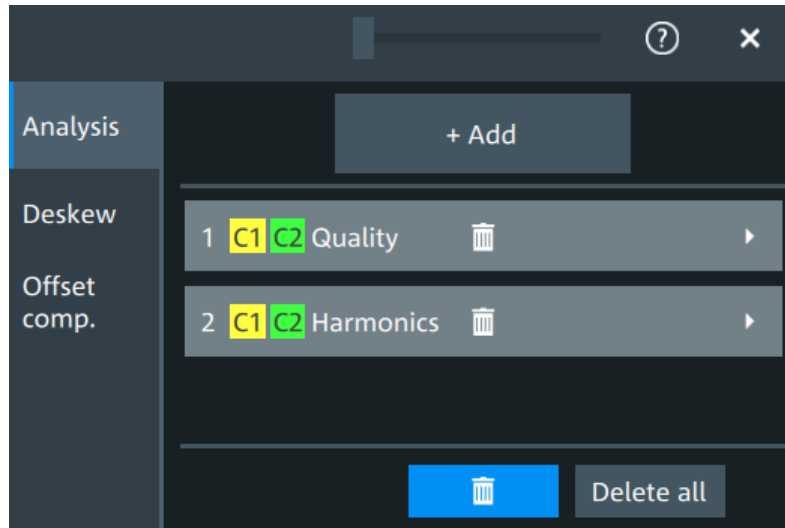

3. Tap on the button of the power measurement that you want to delete. Alternatively, tap "Delete All" to delete all measurements.


11.2.2 Power measurements

11.2.2.1 Power analysis settings

In the "Analysis" you can enable the power analysis and access the dialog to select the power analysis measurements.

You can add up to 3 power analysis measurements. You can also add several instances of the same measurement.


Also you can access the settings dialogs for all enabled power analysis measurements.

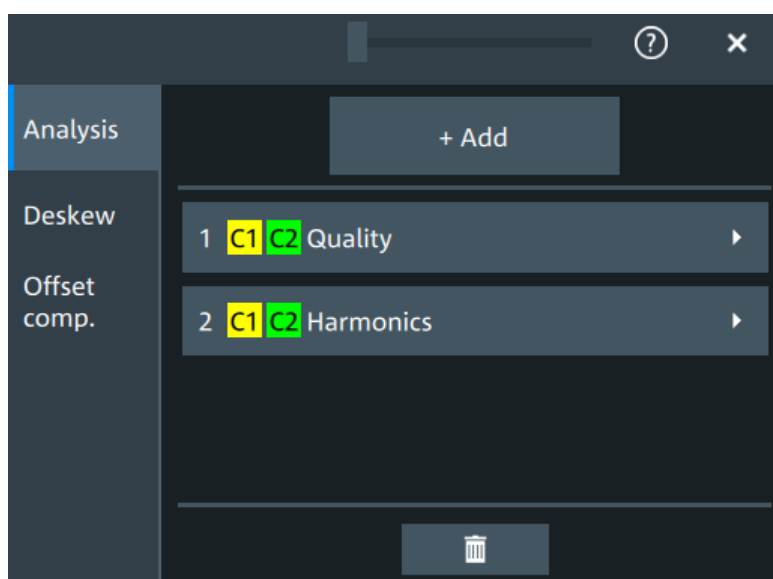

Add

Opens a dialog to select the power analysis measurements.

Available are power quality and power harmonics measurements.

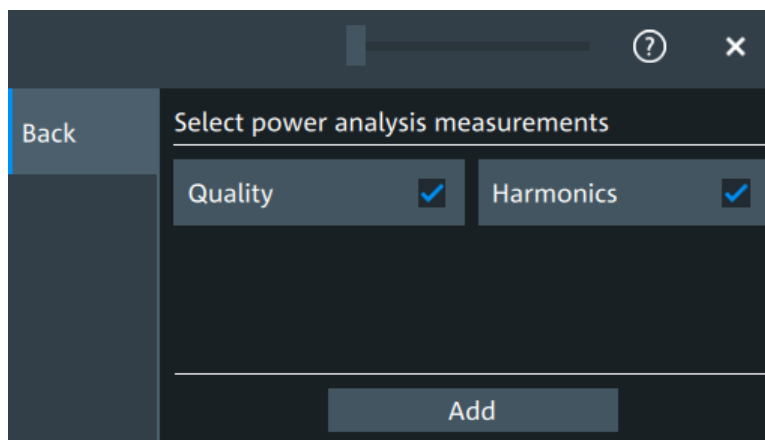

Remote command:

`POWer<m>[:ENABle]` on page 748

`POWer<m>:TYPE` on page 748

11.2.2.2 Power quality

In an electric circuit power is a measure for the rate of flow of energy at a certain point of the circuit. The active power of a circuit, or the energy that can be used for work, is the portion of energy that is transferred in one direction over a complete cycle of the AC waveform. In AC circuits, however, inductive and capacitive elements can store energy temporarily. This portion of the power flow known as reactive power is then returned to the source without doing any work.

The power quality analysis measurements include the active power, the reactive power, the apparent power and the power factor. The crest factors and the phase angle between the current and voltage are also measured. These properties describe the power transfer in the system and allow you to characterize the power quality of the system.


Required probes:

- Differential voltage probe
- Current probe


Configuring power quality

For details of the configuration settings, see "[Power quality settings](#)" on page 298.

1. Add a new power quality measurement as described in "[To add a new power measurement](#)" on page 293.
2. In the "Analysis" tab, tap the "Quality" measurement.
The "Quality" setup dialog opens.

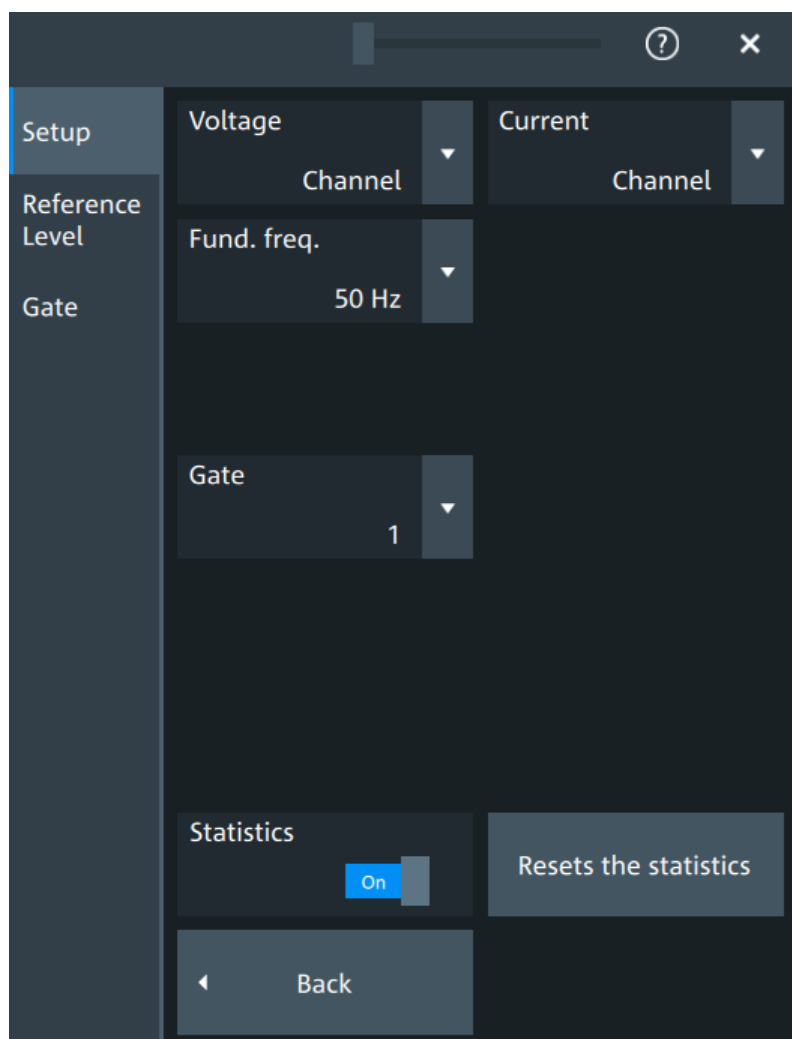


3. Connect the differential voltage probe and the current probe to the oscilloscope.
4. Connect the probes to the DUT:

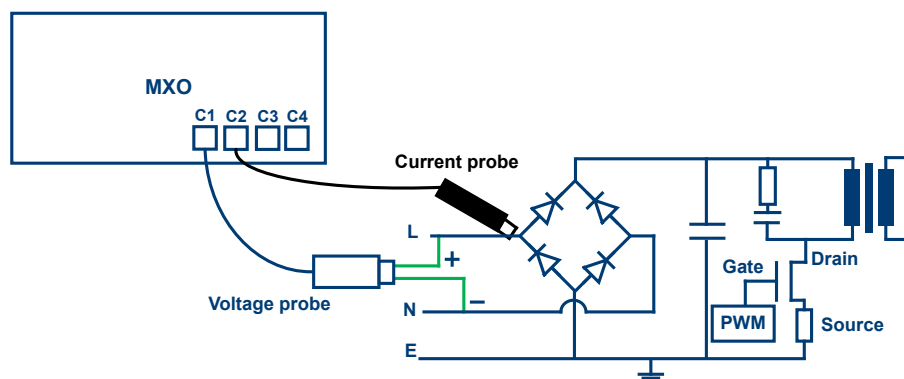

- a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
 - b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
 - c) Connect the current probe to the line of the AC input.
5. Select the correct channels for the "Voltage" and the "Current" probes.
 6. Set the "Fund. Freq" according to your signal.
 7. If necessary, enable "Statistics".

On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see "[Power quality results](#)" on page 300.

Power quality settings

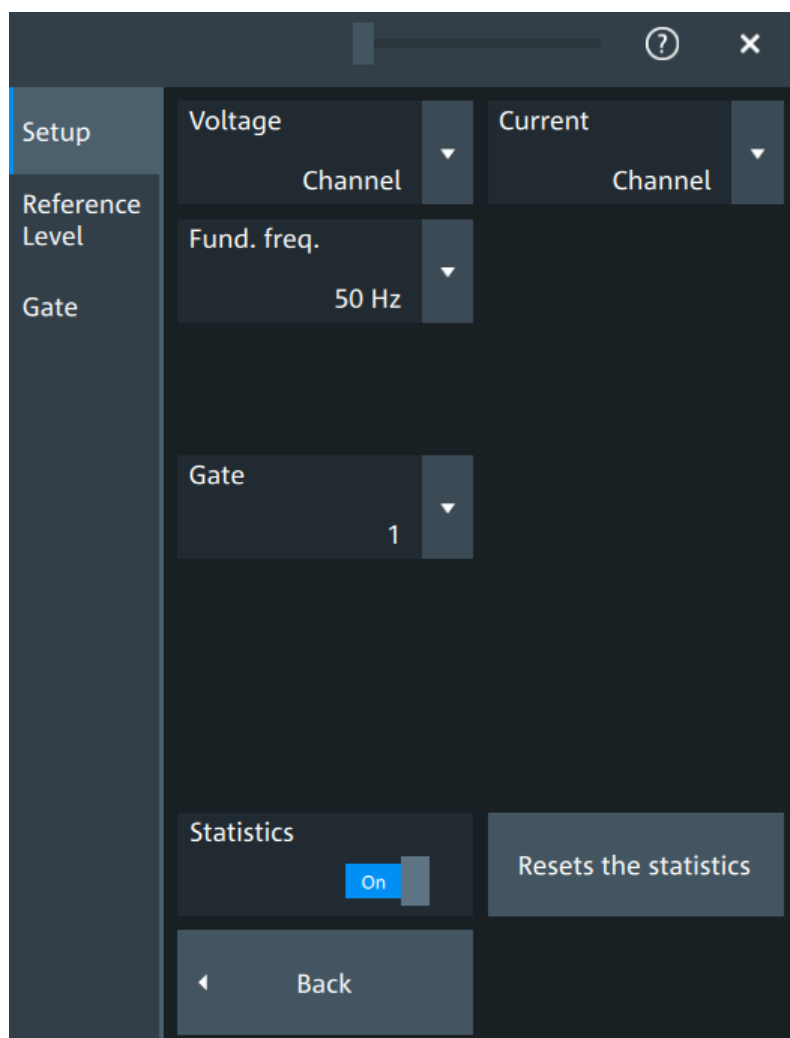

Voltage

Selects the channel for the voltage source.

Remote command:

`POWer<m>:QUALity:SOURce[:VOLTage]` on page 750

Current

Selects the channel for the current source.

Remote command:

`POWer<m>:QUALity:SOURce:CURREnt` on page 749

Fund. Freq

Selects the input frequency of the source signal.

Remote command:

`POWer<m>:QUALity:FREQuency[:VALue]` on page 750

`POWer<m>:QUALity:FREQuency:USER` on page 750

Statistics

Activates or deactivates the statistical evaluation for the power measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions) the measurement is based on

Resets the statistics

Resets the statistical results for the respective power measurements, and starts a new statistical evaluation if the acquisition is running.

Power quality results



The results of power quality measurements are provided in two ways:

- The diagram shows the graphical presentation of:
 - The voltage waveform
 - The current waveform
 - The power waveform that is the product of the current and voltage waveforms
- The result table displays the numeric measurement results:

Voltage and current results

The voltage and current results are defined as follows:

Result	Description
Current / Voltage RMS	Square root of the mean of the square of the current or voltage averaged over N cycles
Voltage Frequency	Frequency of the signal
Current / Voltage Cycle Crest factor	Peak value / RMS value

Power results

The power in a system is described by several physical quantities:

Result	Unit	Formula	Description
Apparent power, S	VA	$ S = V_{RMS} \cdot I_{RMS}$ (averaged over N cycles)	S is the magnitude of the vector sum of active and reactive power (the complex power S).
Reactive power, Q	VAR (Volt-Ampere reactive)	$Q = S \sin \phi$	Power flow that is temporally stored in a system because of the inductive and capacitive elements.
Power factor, P_{Factor}	-	$P_{Factor} = P / S $	Measure of the system efficiency. The value varies between -1 and 1.
Active power, P	W	$P = V_{INSTANTENEOUS} \cdot I_{INSTANTENEOUS}$ (averaged over N cycles)	Energy of the system that can be used to do work.
Phase, ϕ	°	$\phi = \arccos(P_{Factor})$	Phase angle between the current and the voltage sine waves.

Reference level

For a description of the gate settings, see [Chapter 11.2.3, "Reference level"](#), on page 311.

Gate

For a description of the gate settings, see [Chapter 9.2.2, "Gate settings for measurements"](#), on page 242.

11.2.2.3 Power harmonics

Current harmonics appear in an electric power system due to nonlinear electric loads. The harmonics can be ejected back into the AC line and disturb other equipment on the grid. To avoid this disturbance, there are often standards of compliance that consumer or industry end-products must meet.

The "Harmonics" analysis tests the devices according to the precompliance standards EN 61000-3-2, MIL-STD-1399 and RTCA DO-160.

Required probes:


- Differential voltage probe
- Current probe

Configuring power harmonics


For details of the configuration settings, see ["Power harmonic settings"](#) on page 303.

1. Add a new power quality measurement as described in ["To add a new power measurement"](#) on page 293.
2. In the "Analysis" tab, tap the "Harmonics" measurement.

The "Harmonics" setup dialog opens.

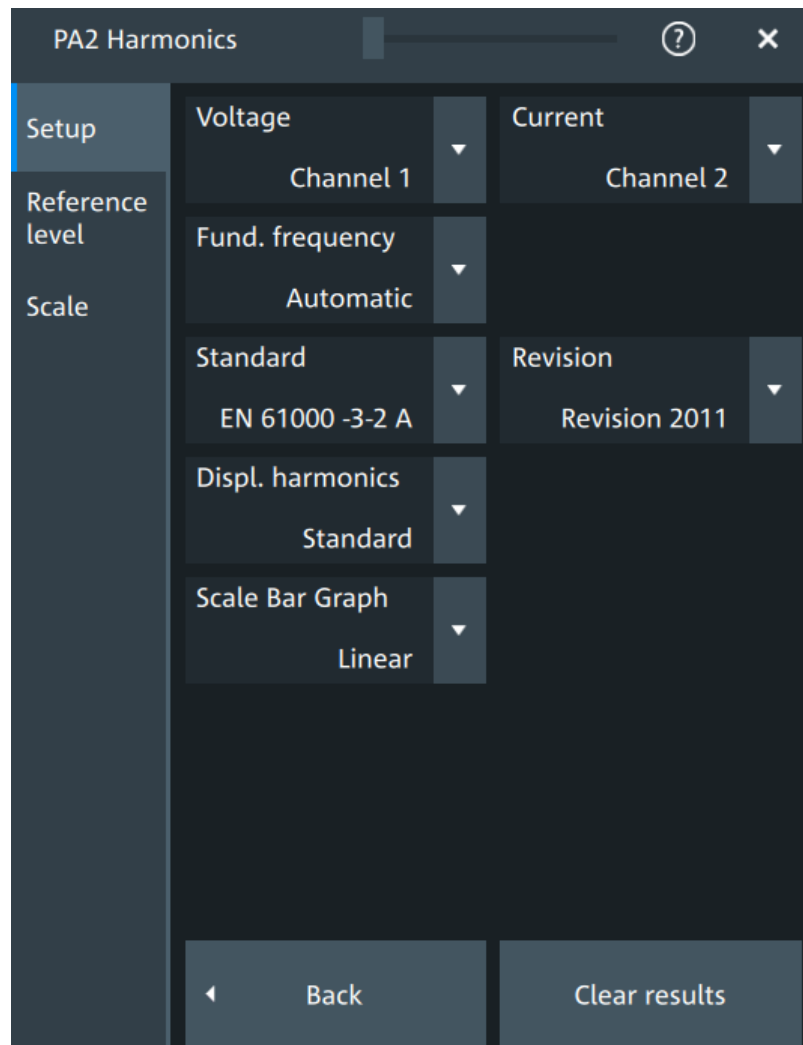

3. Connect the differential voltage probe and the current probe to the oscilloscope.
4. Connect the probes to the DUT:

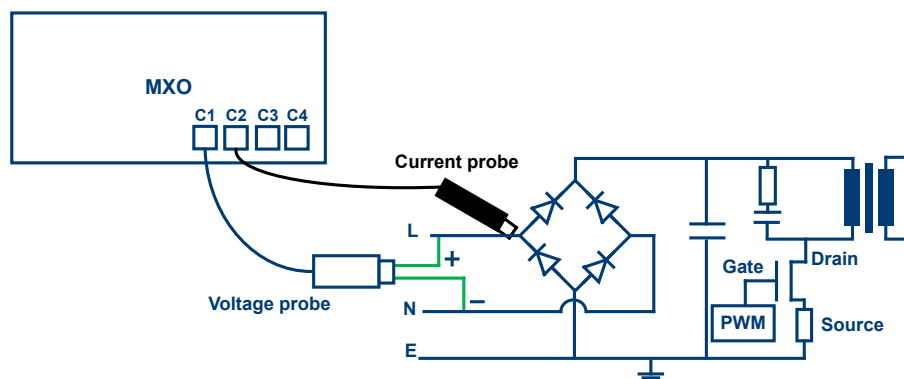

- a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
 - b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
 - c) Connect the current probe to the line of the AC input.
5. Select the correct channels for the "Voltage" and the "Current" probes.
 6. Select the "Standard".
 7. Select the "Fund. Freq" according to your signal.

On the screen, you can see the measurement of the current, the voltage and the power. Also there is a table giving information about important measurement parameters. For details, see "[Power harmonic results](#)" on page 309.

Power harmonic settings

In this tab, you configure the current harmonic measurement parameters and display settings.

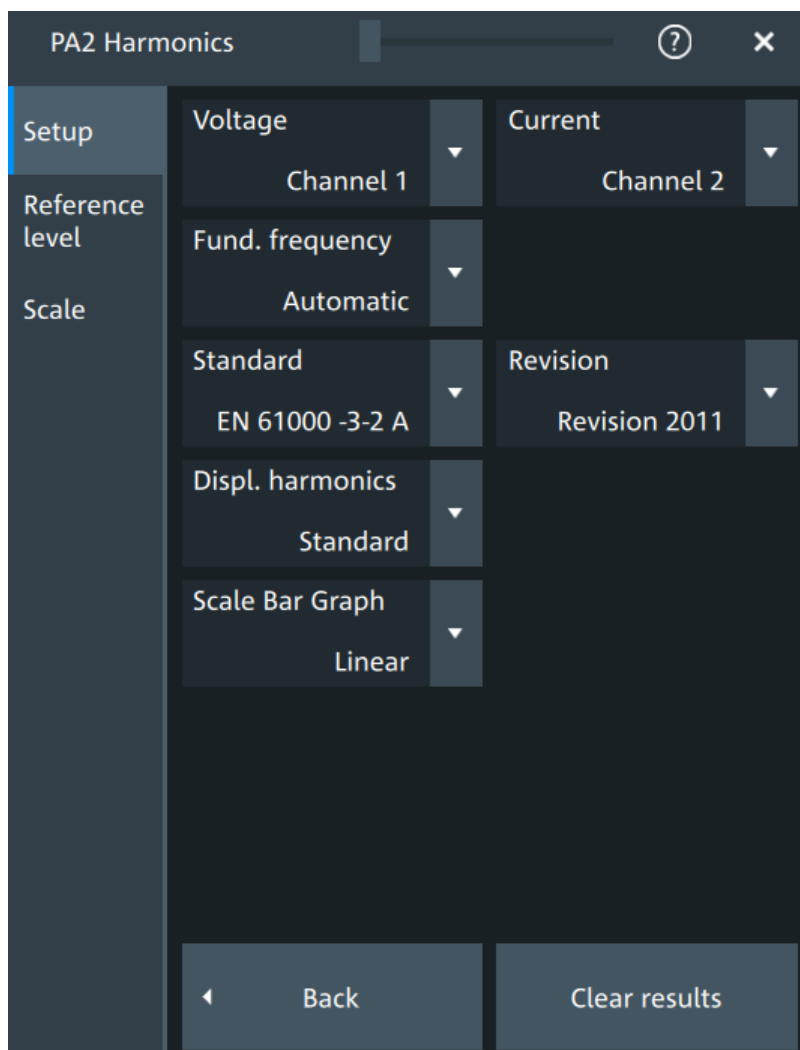


Figure 11-4: Power harmonic setup for EN 61000-3-2 A / EN 61000-3-2 B

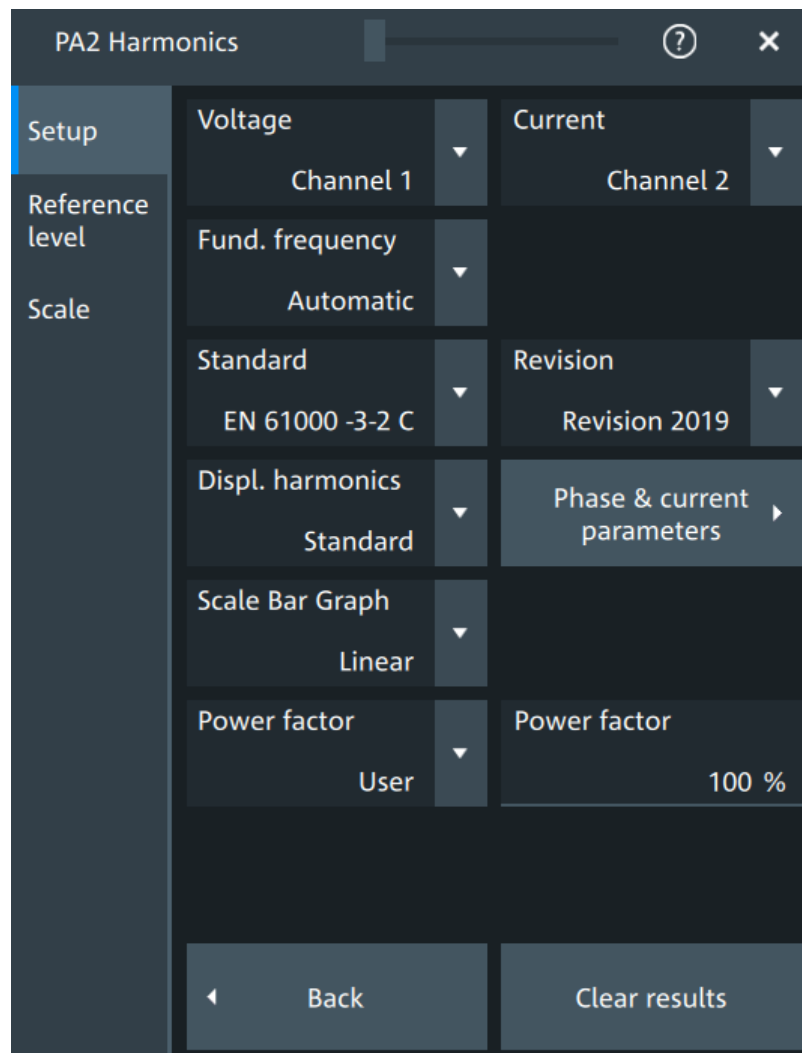


Figure 11-5: Power harmonic setup for EN 61000-3-2 C

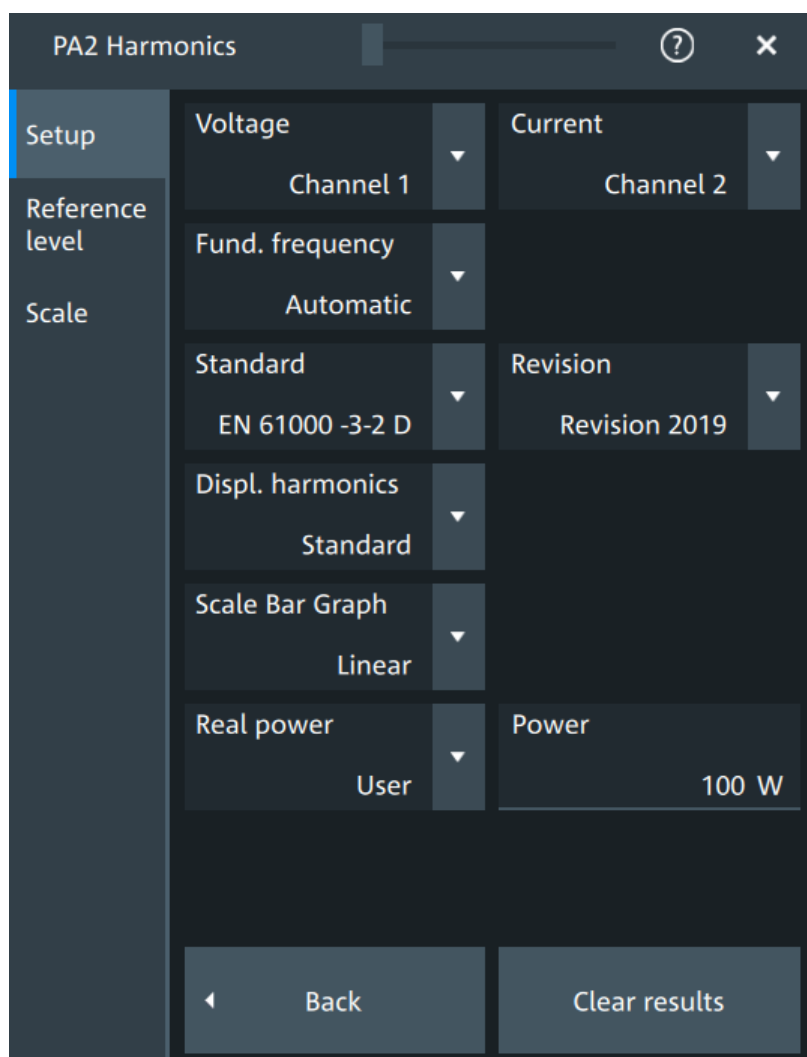


Figure 11-6: Power harmonic setup for EN 61000-3-2 D

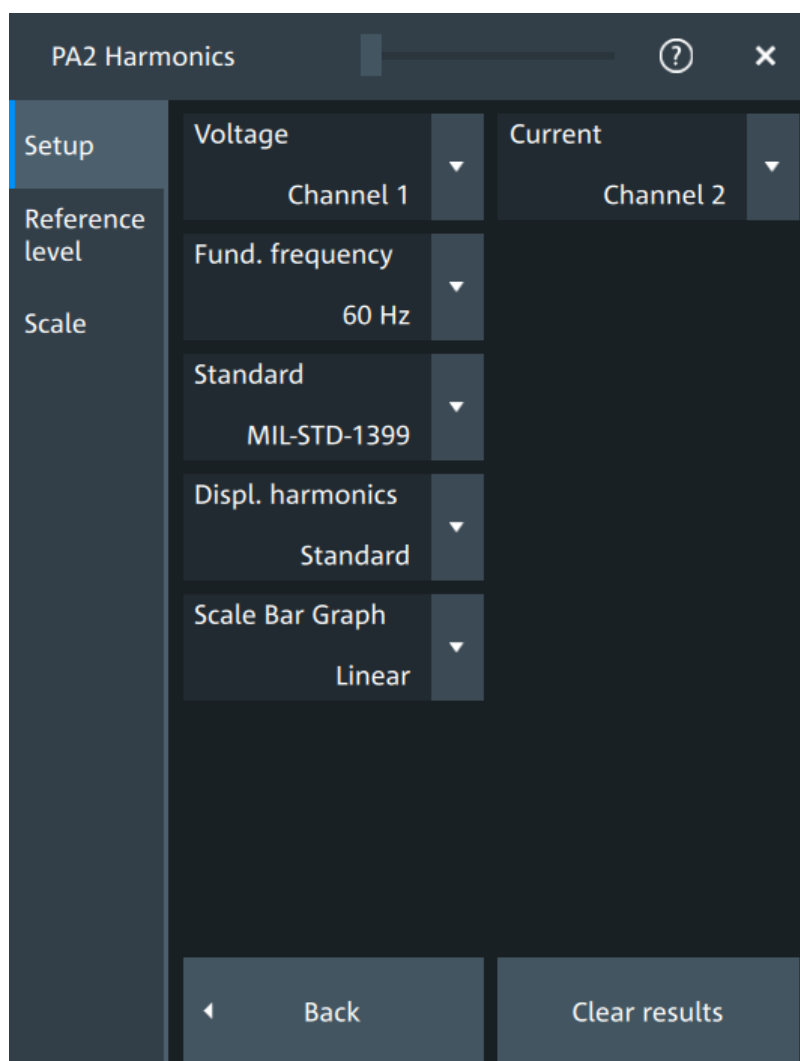


Figure 11-7: Power harmonic setup for MIL-STD-1399/ RTCA DO-160

Voltage

Selects the channel for the voltage source.

Remote command:

[POWER<m>:HARMonics:SOURce\[:VOLtage\]](#) on page 758

Current

Selects the channel for the current source.

Remote command:

[POWER<m>:HARMonics:SOURce:CURRent](#) on page 757

Fund. Freq

Selects the frequency of the input signal. The available frequencies depend on the selected [Standard](#).

Remote command:

[POWer<m>:HARMonics:FREQuency:EN](#) on page 759

[POWer<m>:HARMonics:FREQuency:MIL](#) on page 759

[POWer<m>:HARMonics:FREQuency:RTCA](#) on page 759

Standard

Select the standard in use.

For EN 61000-3-2 you can also select which "Revision" of the standard is used, "Revision 2011" or "Revision 2019".

Table 11-1: Current harmonic precompliance standards

Standard	Application
EN 61000-3-2 Class A	Balanced 3-phase equipment, household appliances (excluding equipment identified as class D), tools (excluding portable tools), dimmers for incandescent lamps, audio equipment
EN 61000-3-2 Class B	Portable tools, not professional arc welding equipment
EN 61000-3-2 Class C ¹⁾	Lighting equipment
EN 61000-3-2 Class D	PC, PC monitors, radio, or TV receivers with an input power less than or equal to 600W
MIL-STD-1399	Military shipboard user equipment
RTCA DO-160	Environmental tests of avionics hardware
¹⁾ The EN 61000-3-2 defines different limits for EN 61000-3-2 Class C equipment with an input power smaller or equal than 25W either. The limits that are implemented in the MXO 4 firmware comply with the limits of table 3 (column two) of the EN 61000-3-2 standard.	

Remote command:

[POWer<m>:HARMonics:STANdard](#) on page 758

[POWer<m>:HARMonics:REVisiOn](#) on page 758

Displ. Harm.

Selects which harmonics are displayed in the bargraph: all, odd even or depending on the standard definition.

Remote command:

[POWer<m>:HARMonics:DISPlay:HARMonics](#) on page 760

Scale bar graph

Selects a logarithmic or linear scale for the display for the harmonics bargraph.

Remote command:

[POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALE:TYPE](#)
on page 761

Power factor

Available only for "Standard" = EN 61000-3-2 Class C.

Selects if the power factor is defined automatically, or a user-defined value ("Power factor") is used.

Remote command:

`POWer<m>:HARMonics:PFACTOR[:MODE]` on page 762

`POWer<m>:HARMonics:PFACTOR:USER` on page 762

Phase & current parameters

Shows a graphical explanation of the relative phase angle and current parameters.

Real power, Power

Available only for "Standard" = EN 61000-3-2 Class D.

Selects if the real power is defined automatically, or a user-defined value ("Power") is used.

Remote command:

`POWer<m>:HARMonics:RPOWER[:MODE]` on page 761

`POWer<m>:HARMonics:RPOWER:USER` on page 762


Clear Results

Clears all current results and resets the statistics.

Remote command:

`POWer<m>:HARMonics:STATistics:RESet` on page 760

Power harmonic results

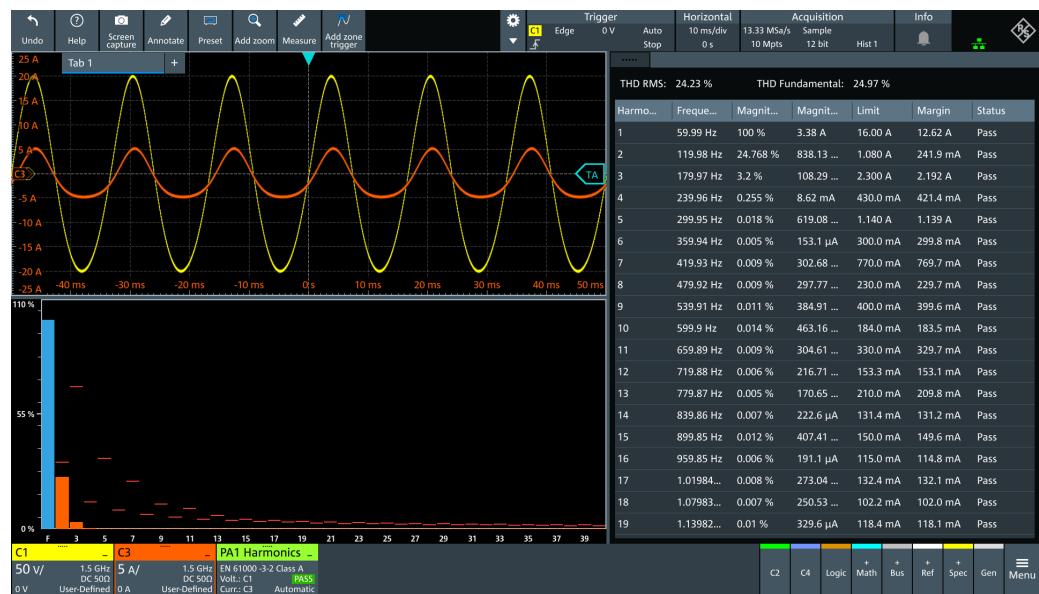

The results of the Harmonic measurements are provided in two ways:

- The diagram shows the graphical presentation of the voltage waveform, the current waveform and the power waveform
- The results are a bar chart and a table with the numerical measurement results. The number of displayed harmonics depends on the standard definition. When you tap on a harmonic in the bar chart, the respective row in the result table is displayed.

The current harmonic results displayed in the result table are defined as follows:


Result table	Bar chart match	Description
THDF	-	Total harmonic distortion relative to the fundamental
THDR	-	Total harmonic distortion relative to the RMS amplitude
Harmonic index	Value of the x-axis	The harmonic order
Frequency	-	The frequency value of the signal
Magnitude	Value of the y-axis. Shown by a green bar	The present value of the current harmonic
Magnitude (dB) Max	Shown by a darkened green bar	The maximum measured value
Limit	Shown by a red bar	The maxim allowed value according to the selected standard
Margin		Sets the upper limit for the display of the Y scale. This value can be reset with "Clear Results"
Status	Pass: green bar Dark orange bar: current value Light orange bar: maximum value	Displays, if the harmonics is within the defined limit (pass) or not (fail).
Blue outline of the row	Blue bar	The selected bar matches with the outlined line in the result table.

Reference level

The power harmonic measurement requires reference levels to obtain the measurement points. Power analysis uses its own reference level set, which is independent from other measurements and is used for all power measurements. For a description of the reference level settings, see [Chapter 11.2.3, "Reference level"](#), on page 311.

Scale

In this tab you can configure the scale for the bargraph display.

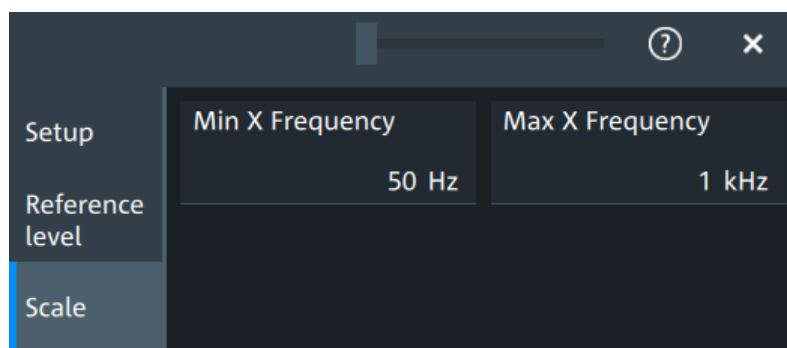

Min X Frequency

Sets the start frequency of a bargraph display. At least three bars are displayed.

Remote command:

`POWer<m>:HARMonics:DISPlay:FREQuency:STARt` on page 760

Max X Frequency

Sets the stop frequency of the bargraph display. The maximum value is defined by standard and fundamental frequency.

Remote command:

`POWer<m>:HARMonics:DISPlay:FREQuency:STOP` on page 761

11.2.3 Reference level

Some power analysis measurements require reference levels to obtain the measurement points. Power analysis uses its own reference level set, which is independent from other measurements and is used for all power measurements.

To ensure that the correct value for the period is used for the measurements, the period is determined on a voltage channel first. This period value is then applied wherever it is required to the current waveform and to the power (Math) waveform.

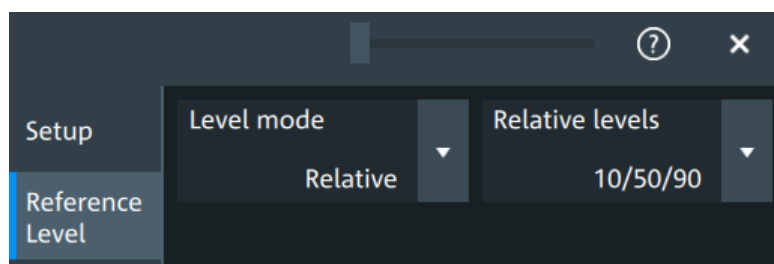


Figure 11-8: Relative reference level

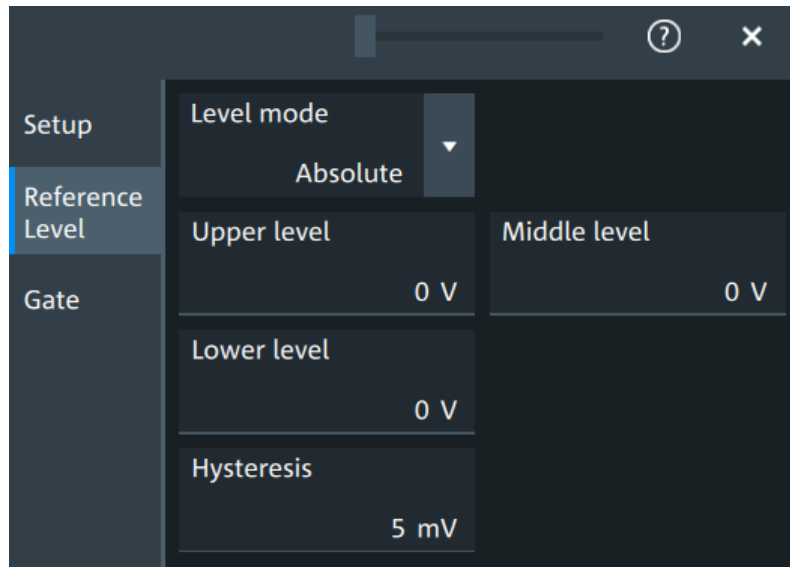


Figure 11-9: Absolute reference level

Level mode

Defines if the reference level is set in absolute or relative values.

Remote command:

[POWER<m>:HARMonics:REFLevel<rl>:LMODE](#) on page 769

[POWER<m>:QUALity:REFLevel<rl>:LMODE](#) on page 769

Absolute Level mode

In the absolute mode, the reference values are set as voltages, in absolute values.

Upper level, Middle level, Lower level ← Absolute Level mode

Sets the low, middle and upper reference signal levels.

Remote command:

[POWER<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVEL](#) on page 767

[POWER<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVEL](#) on page 768

[POWER<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVEL](#) on page 768

[POWER<m>:QUALity:REFLevel<rl>:ABSolute:LLEVEL](#) on page 767

[POWER<m>:QUALity:REFLevel<rl>:ABSolute:MLEVEL](#) on page 768

[POWER<m>:QUALity:REFLevel<rl>:ABSolute:ULEVEL](#) on page 768

Relative Level mode

In the relative mode, the reference values are set as percentages of the signal amplitude.

Relative levels ← Relative Level mode

Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95

- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:

`POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE` on page 770

`POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` on page 770

Upper level, Middle level, Lower level ← Relative Level mode

Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:

`POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer` on page 769

`POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDLE` on page 770

`POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer` on page 771

`POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer` on page 769

`POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDLE` on page 770

`POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer` on page 771

Hysteresis

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:

`POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis` on page 769

`POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis` on page 767

`POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis` on page 769

`POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis` on page 767


11.2.4 Deskew

In the dialog box you can perform a deskew of your current and voltage probes.

Required equipment:

- R&S RT-ZF20 power deskew fixture
- Rohde & Schwarz voltage probe
- Rohde & Schwarz current probe

11.2.4.1 Deskew settings

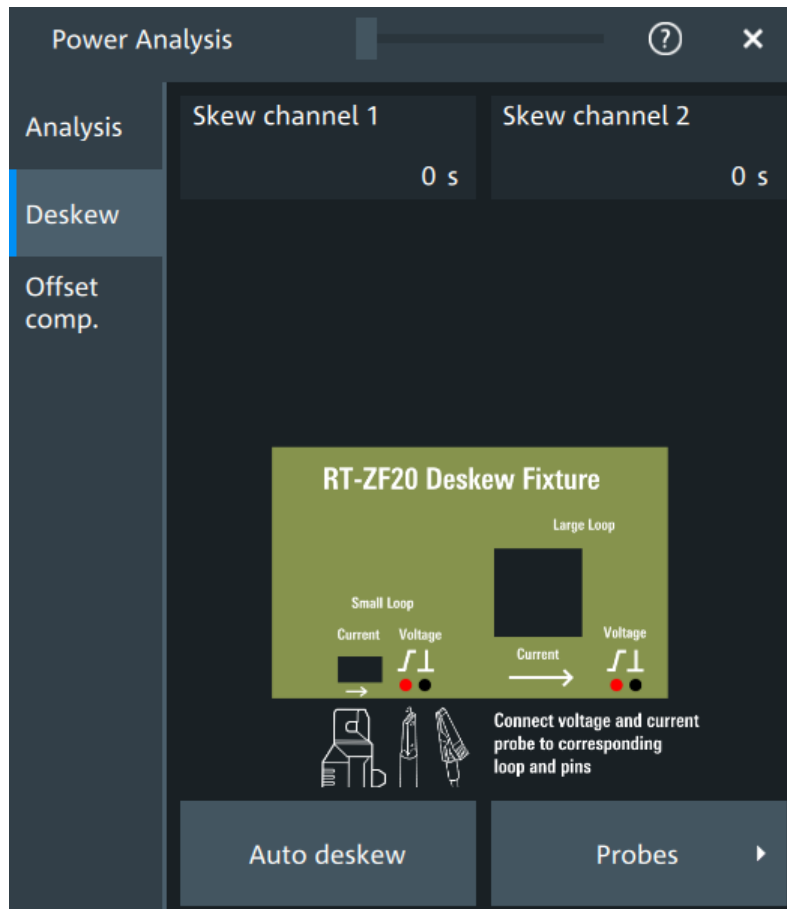

Skew channel

Sets user-defined skew settings for the channel connected to the current probe. Alternatively, you can start an "Auto Deskew".

Auto Deskew

Starts an auto deskew. It is used to determine the trigger and scaling properties.

For an auto deskew, only Rohde & Schwarz probes are supported.

Make sure that the probes are configured correctly before you start the deskewing.

After the deskew, the result values are written in the "Skew" value of the corresponding channel.


If there are more than two active channels, you can perform automatic deskew step by step and exchange the probes connected fixture between the steps.

Remote command:

`POWER<m>:ASKew[:EXECute]` on page 749

11.2.5 Offset compensation

The offset compensation adjustments are applied to all power analysis measurements.

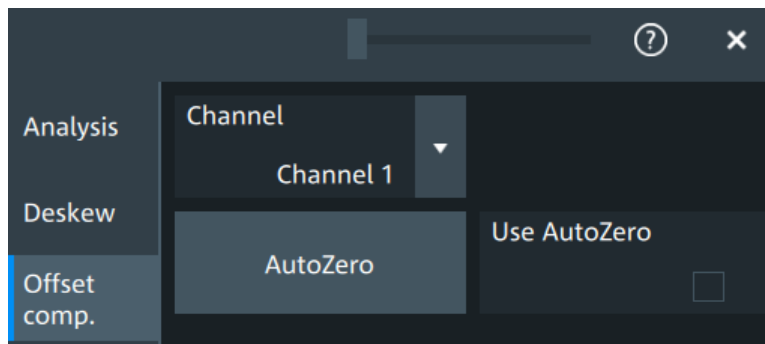

Channel

Select the channel for the offset compensation.

Remote command:

[PROBe<ch>:SETup:OFFSet:ZADJust](#) on page 596

AutoZero, Use AutoZero

Differences in DUT and oscilloscope ground levels can cause larger zero errors, which affect the waveform. If the DUT is ground-referenced, the AutoZero function corrects the zero error of the probe to optimize measurement results at small signal levels. The validation limit depends on the probe attenuation because probes with high attenuation often have to compensate high offsets. AutoZero detects offset values even when the signal is out of the current measurement range.

To correct the zero error of voltage probes, short the signal pin and the ground pin together and connect them to the ground of the DUT. Then tap "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To include the measured offset in measurement results, enable "Use AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:

[PROBe<ch>:SETup:OFFSet:AZERo](#) on page 584

[PROBe<ch>:SETup:OFFSet:USEautozero](#) on page 584


11.3 Digital voltmeter

The software-based voltmeter features AC RMS, DC and DC RMS voltage measurements on a specific analog channel.

11.3.1 Using the digital voltmeter

To start a digital voltmeter measurement

1. Tap the "Menu" > "Apps" > "General" tab > "DVM", to open the digital voltmeter measurement dialog.

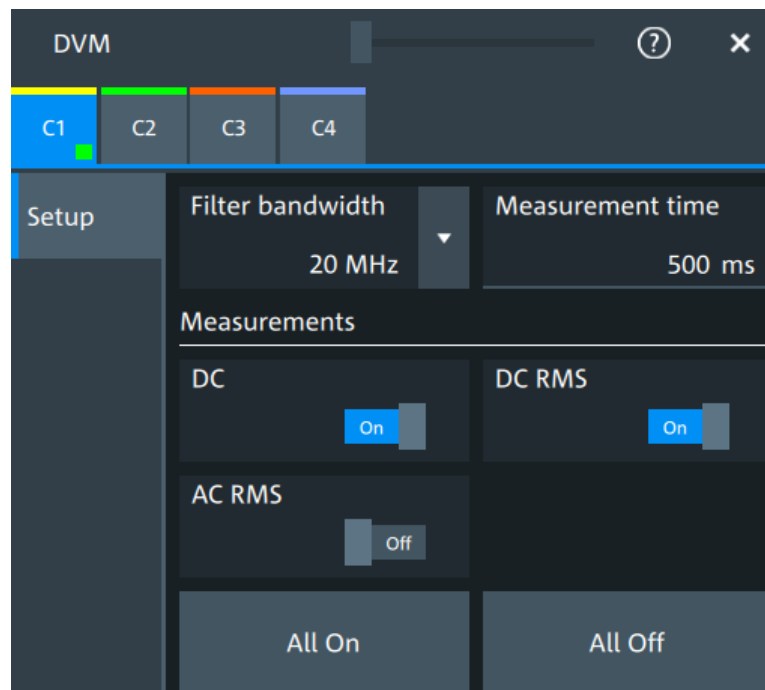


2. Select the channel for your measurement.
3. Select a "Filter bandwidth" from the list.
4. Set a "Measurement time".
5. Tap on a measurement to enable it. Available are "DC", "DC RMS", "AC RMS".
The measurement results of all enabled measurements are displayed in a result box.



11.3.2 Settings of the digital voltmeter

Access: "Menu" > "Apps" > "General" tab > "DVM".

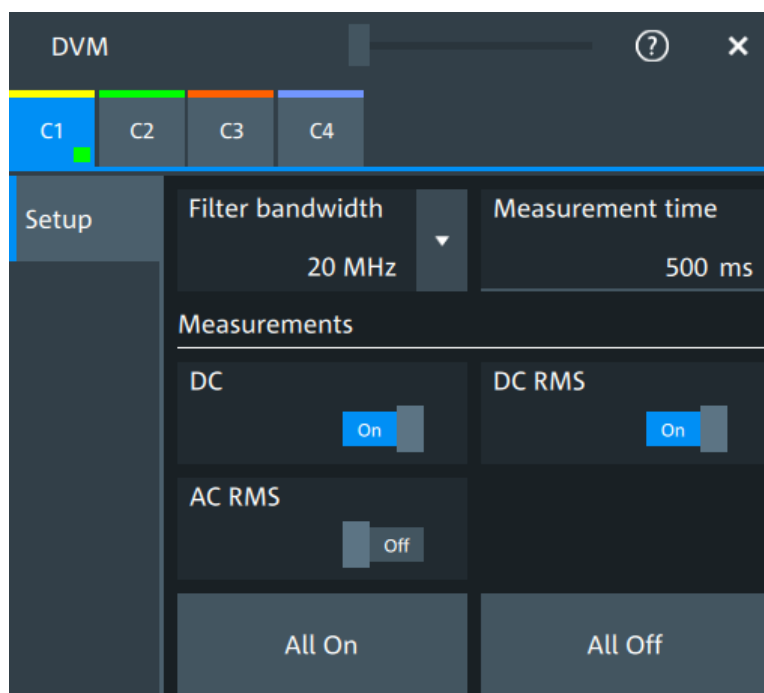

C<n>

Selects the channel which is measured by the digital voltmeter.

Filter bandwidth

Selects the filter bandwidth.

Remote command:

[METer:BAWdwidth](#) on page 773

Measurement time

Sets a measurement time. The time begins in the moment that a measurement is enabled.

Measurements

Enables the voltmeter measurements. When a measurement is enabled, the voltmeter is turned on automatically.

"DC" Enables the DC voltage measurement.

"DC RMS" Enables the DC RMS voltage measurement.

"AC RMS" Enables the AC RMS voltage measurement.

Remote command:

[METer:DVMeter<m>:ACRMs:ENABle](#) on page 773

[METer:DVMeter<m>:ACRMs:RESult?](#) on page 774

[METer:DVMeter<m>:DC:ENABle](#) on page 774

[METer:DVMeter<m>:DC:RESult?](#) on page 774

[METer:DVMeter<m>:DCRMs:ENABle](#) on page 775

[METer:DVMeter<m>:DCRMs:RESult?](#) on page 775

All on, All off

Enables/disables all voltmeter measurements.

12 Data and file management

This chapter describes how to manage instrument settings, waveform data, measurement results, and screenshots.

The "Save/Recall" dialog provides functions for saving and restoring data on the instrument.

Access to saving settings and data: "Menu" key > "Save/Recall" key > "Save" tab.

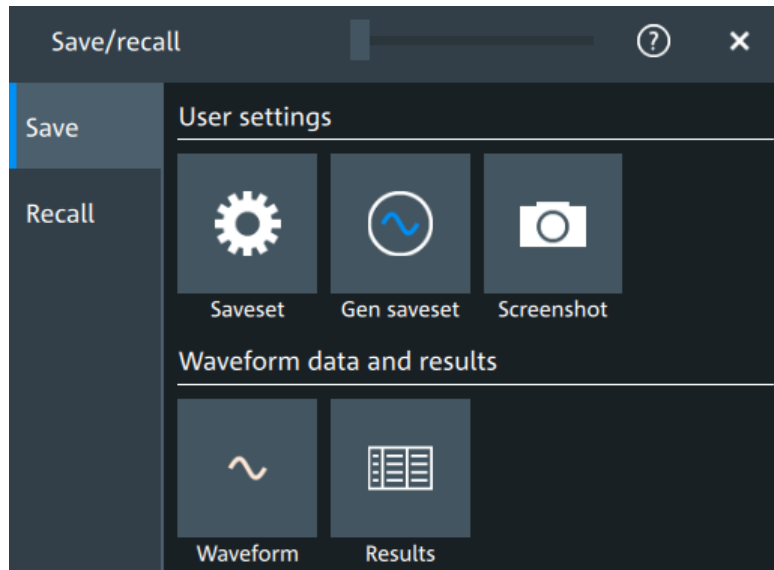


Figure 12-1: Save tab

Access to loading settings and data: "Menu" key > "Save/Recall" key > "Recall" tab.

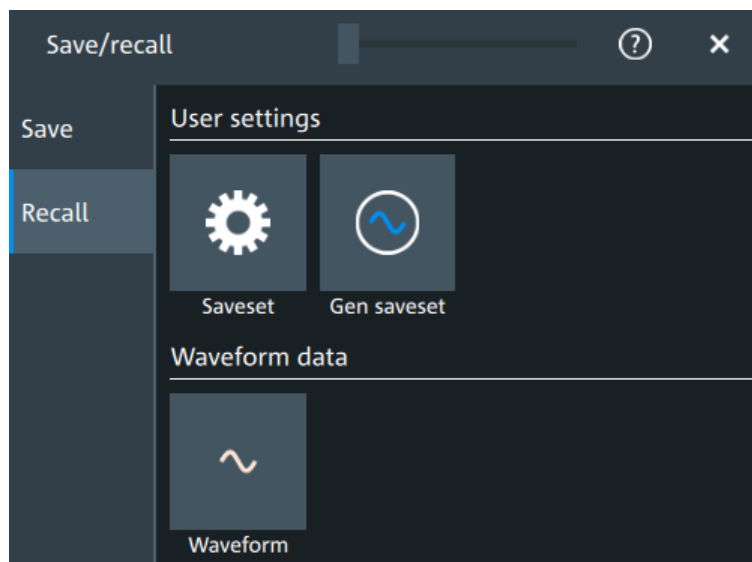


Figure 12-2: Recall tab

Using the "Save/Recall" dialog, you can store or load various data to files for further usage, analysis and reporting:

- Instrument settings: [Chapter 12.1, "Save and recall user settings"](#), on page 320
- Waveforms: [Chapter 12.2, "Save and recall waveform data"](#), on page 324
- Screenshots: [Chapter 12.4, "Screenshots"](#), on page 335
- Reference waveforms: [Chapter 12.2, "Save and recall waveform data"](#), on page 324 and [Chapter 8.4, "Reference waveforms"](#), on page 219
- Measurement results: [Chapter 12.3, "Saving results"](#), on page 333

The [Camera] key can be configured to save or set up screenshots.

Storage locations

You can store data directly on the instrument, or to a USB flash drive. For local storage, the path is always `/home/storage/userData`. The path has subdirectories to organize the data. For storage on USB flash drive, the default path is `/run/media/usb/`. On both storage media, you can create directories to organize the data. You can also copy, paste and delete data.

On USB flash drives, the following file systems are supported: FAT32, FAT16, exFAT and NTFS.



The operating system of the oscilloscope differentiates between relative and absolute paths.

A relative path starts with your current directory and does not start with a `/`, e.g. `userData`.

An absolute path defines the location from the root directory, e.g. `/home/storage/userData`.

12.1 Save and recall user settings

To repeat measurements at different times or perform similar measurements with different test data, you can save the used instrument settings and load them again later. Furthermore, you can refer to the instrument settings of a particular measurement when analyzing the results. Optionally, the current toolbar and dialog configuration can be included into the saveset.

Access: "Menu" key > "Save/Recall" key > "Save" tab > "User settings".

If you often save and load instrument settings, try the following shortcuts:

- The "Save saveset" toolbar icon saves the current settings to a file according to the settings in "Save/Recall" key > "Save".
- The "Recall" toolbar icon opens the dialog to select and load a setup.
- You can assign a saveset to the [Preset] key and the "Preset" function on the toolbar, see [Chapter 5.6, "Preset setup"](#), on page 95.

12.1.1 Using savesets

Savesets contain the complete instrument and measurement configuration. You can save an unlimited number of setting files.

To save settings to a saveset file

1. Open "Menu" > "Save/Recall".
2. In the "Save" tab, tap the "Saveset" button.
The save "Saveset" dialog opens.

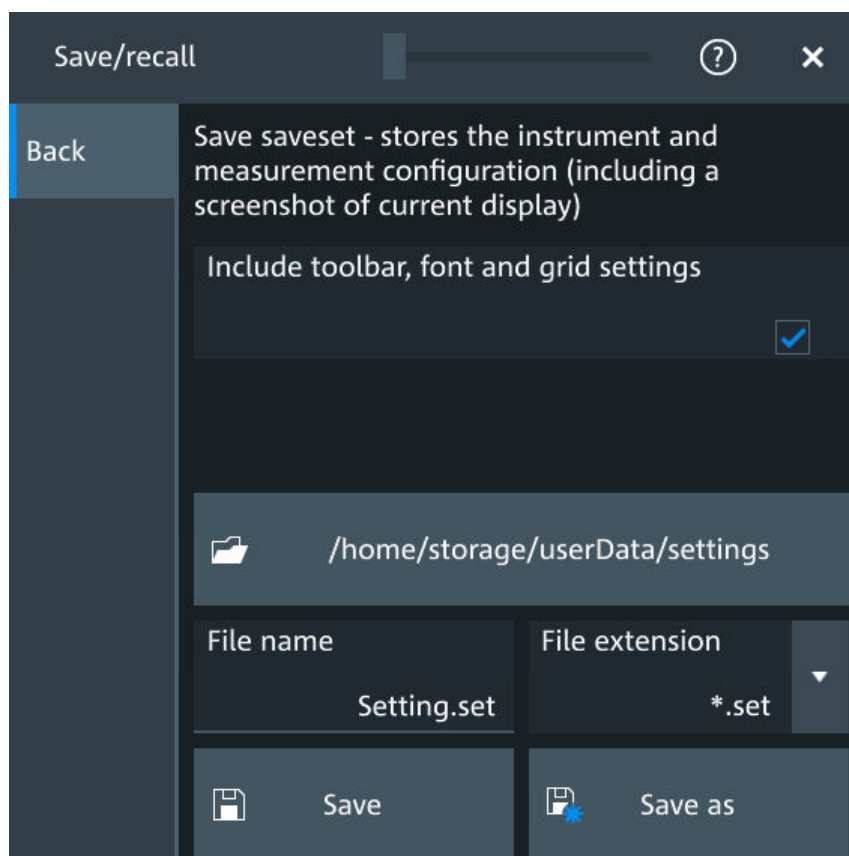


Figure 12-3: Save saveset dialog

3. If needed, enable "Include toolbar, font and grid settings".
4. Check the path on the "Directory" button. If the path does not fit, tap the button. Navigate to the folder, where you want to save the settings file.
5. Tap "Save to file".
Alternatively, select "Save As" and select the destination folder and file name in the file selection dialog.

The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/Recall".
2. In the "Recall" tab, press the "Saveset" button.

The recall "Saveset" dialog opens.

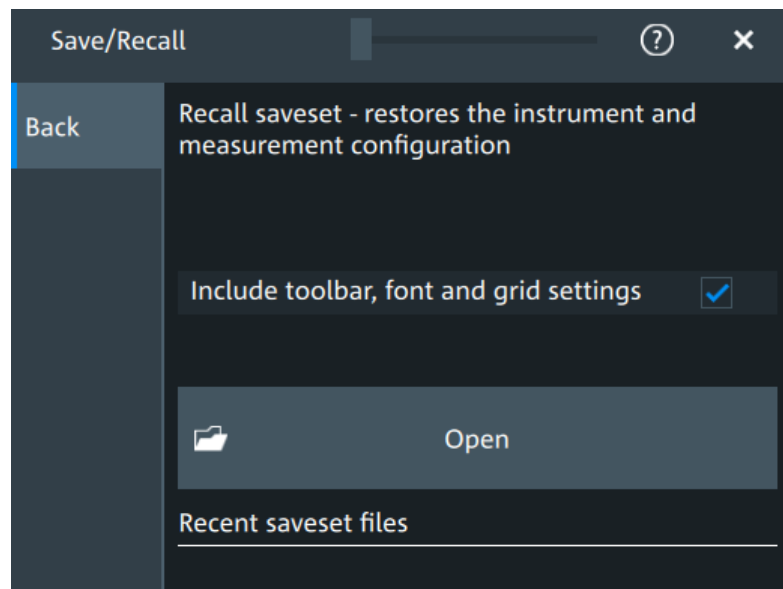


Figure 12-4: Recall saveset dialog

3. Tap "Open".
4. Navigate to the required saveset.

The saved settings are loaded to the MXO 4.

Remote commands:

- [MMEMoRY:SAV](#) on page 675
- [MMEMoRY:RCL](#) on page 676

12.1.2 Waveform generator saveset

Generator savesets store the instruments generator configuration.

To save settings to a saveset file

1. Open "Menu" > "Save/Recall".
2. In the "Save" tab, press the "Gen saveset" button.

The save "Gen saveset" dialog opens.

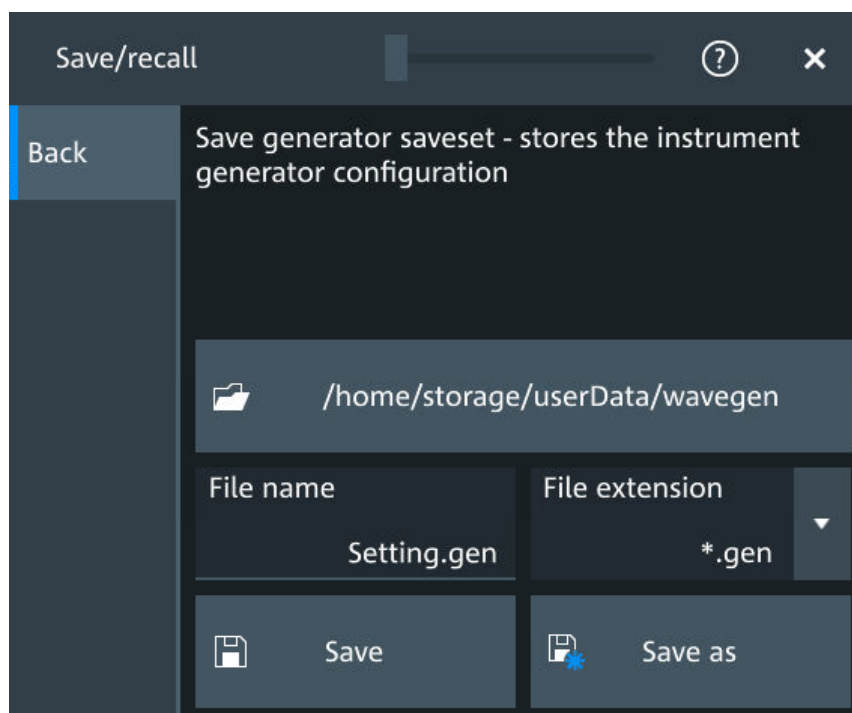


Figure 12-5: Save generator saveset dialog

3. Tap "Browse"

The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/Recall".
2. In the "Recall" tab, press the "Gen saveset" button.

The recall "Gen saveset" dialog opens.

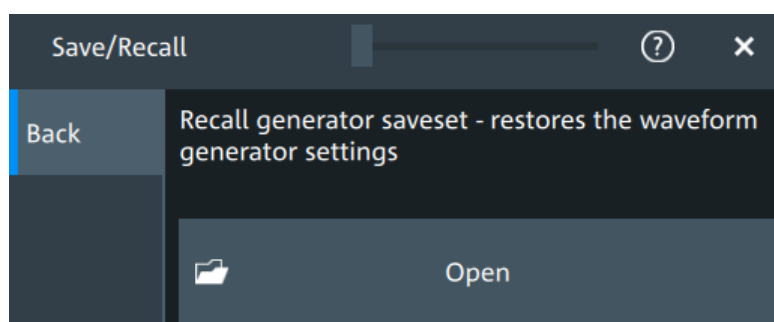


Figure 12-6: Recall generator saveset dialog

3. Tap "Open".
4. Navigate to the saveset.

The saved settings are loaded to the MXO 4.

Remote commands:

- `GENerator:SAV` on page 677
- `GENerator:RCL` on page 677


12.2 Save and recall waveform data

You can save waveform data to file, and reload the data of REF files as reference waveforms.

12.2.1 Waveform settings

Access: "Menu" > "Save/Recall" > "Save" tab > "Waveform".

In this dialog, you define the storage settings for waveform data.

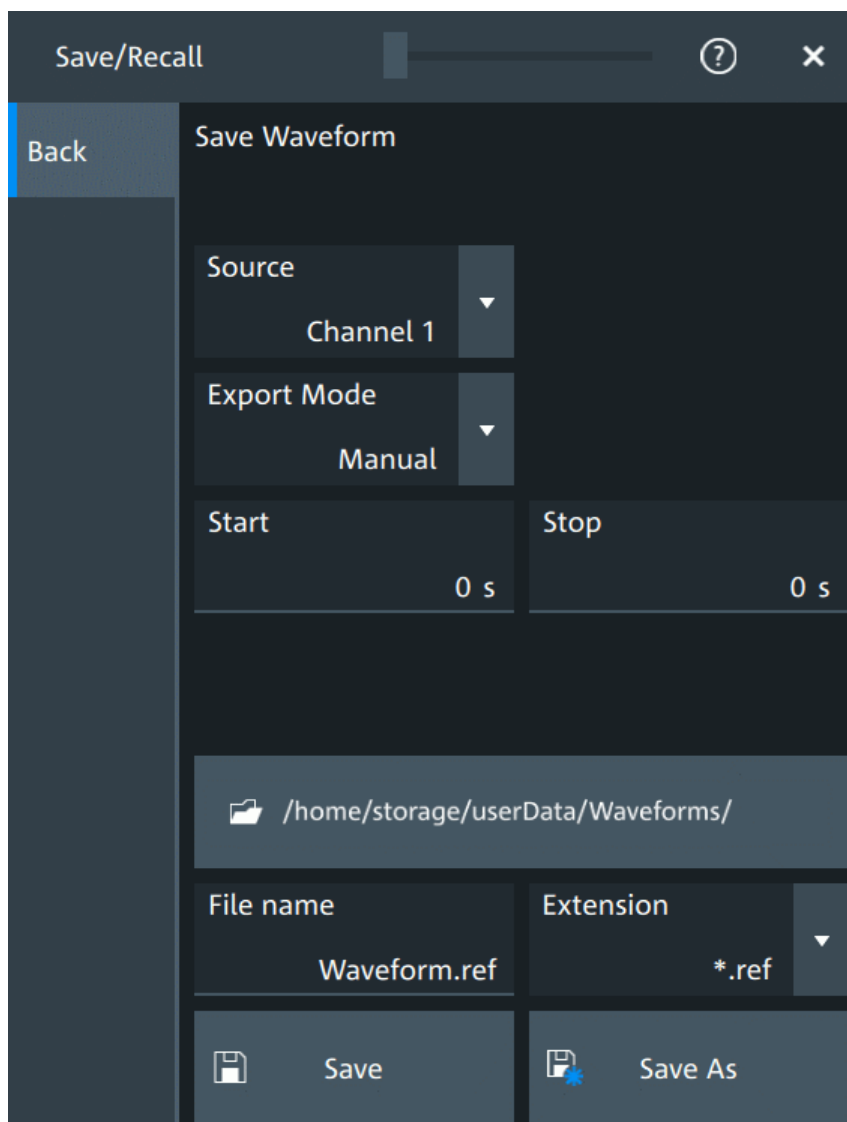**Source**

Selects the waveform to be exported. The list shows all active waveform that can be exported.

Remote command:

[EXPort:WAVeform:SOURce](#) on page 679

Export mode

Defines the part of the waveform record that has to be stored.

- | | |
|------------|---|
| "Display" | Saves the waveform data that is displayed in the diagram. |
| "All data" | Saves the complete waveform record. |
| "Cursor" | Saves the data between the cursor lines if at least one cursor measurement is defined for the source waveform. If several cursor sets are defined, select the "Cursor set" to be used for export. |

"Gate" Saves the data included in the measurement gate if a gated measurement is defined for the source waveform. Select the "Gate" to be used for export.

"Manual" Saves the data between user-defined "Start" and "Stop" values.

Remote command:

[EXPort:WAVeform:SCOPE](#) on page 678

[EXPort:WAVeform:CURSorset](#) on page 680

[EXPort:WAVeform:GATE](#) on page 680

[EXPort:WAVeform:START](#) on page 679

[EXPort:WAVeform:STOP](#) on page 680

Save settings

Defines the details of the filename, extension and directory.

"File name" Sets a name for the file, without extension.

"Extension" Selects the format of the exported file. You can select between "Excel-CSV-File (*.csv)" and a "Reference Waveform Format (*.ref)". REF files can be reloaded as reference waveforms. See also: [Chapter 12.2.3, "Waveform export files"](#), on page 328.

"Directory" Opens a file explorer where you can select the directory where the file is saved.

"Save as" Opens a file explorer where you can select the directory and enter the filename.

"Save" Saves the file in the defined "Directory" using the defined "File name". If the specified file already exists, it is overwritten with the new data.

A progress bar informs you about the process, see ["Progress information"](#) on page 73.

Remote command:

[EXPort:WAVeform:NAME](#) on page 678

[EXPort:WAVeform:SAVE](#) on page 678

12.2.2 Saving waveforms

To save a waveform

1. Open "Menu" > "Save/Recall".
2. In the "Save" tab, tap "Waveform".

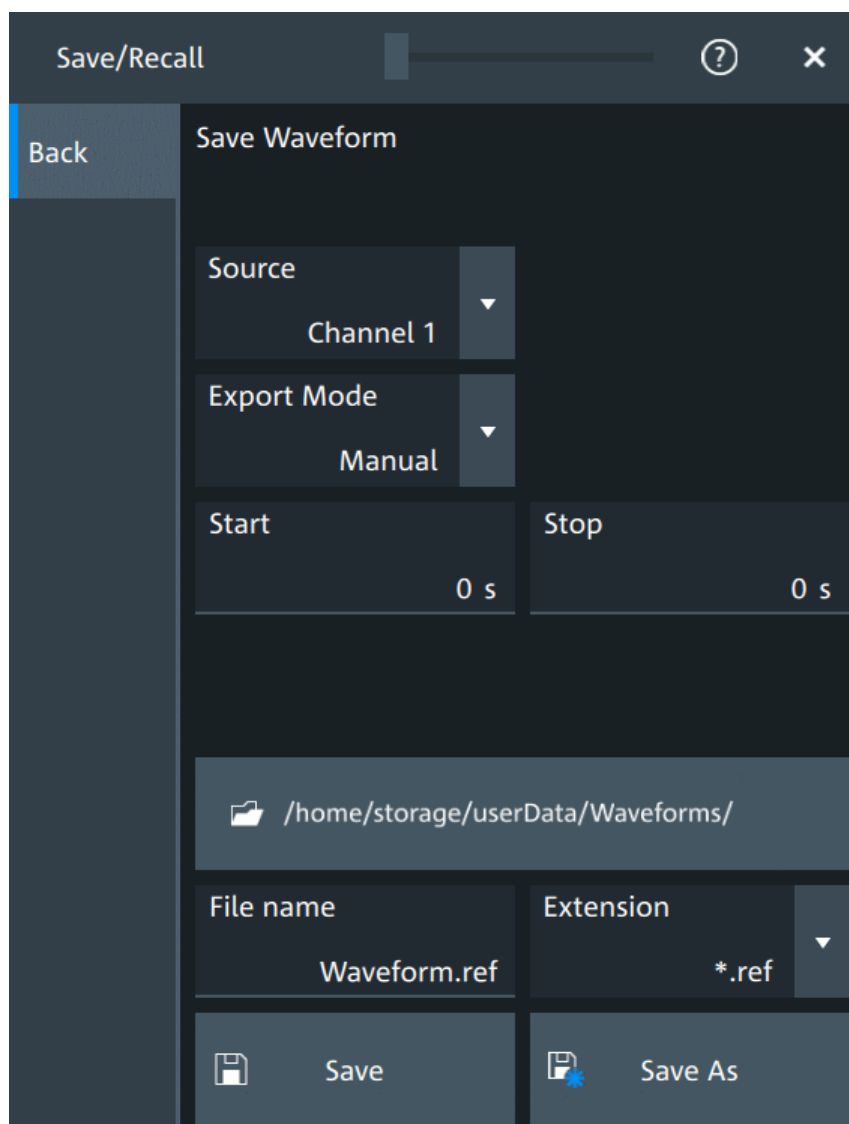


Figure 12-7: Save waveform dialog

3. Select the "Source".
4. Select the "Export mode" to define the part of the waveform to be exported.
5. If necessary, define the cursor, gate or start/stop values for the data.
6. Select the format of the export file: "Extension".
7. Set the "File name".
8. Tap "Save" or "Save as".

The current waveform is saved to the selected file. A progress bar informs you about the saving process.

12.2.3 Waveform export files

Waveform data is stored in excel `*csv` format, or in a specific `*.ref` format. Files in `*.ref` format can be reloaded as reference waveforms.

12.2.3.1 CSV files

A `*csv` file is a comma-separated values (CSV) text file, the waveform is stored in a table. The columns are separated by commas. For each sample, one line is written. Values are listed in scientific notation. You can convert the comma-separated text to columns.

Content of waveform files

The first lines of the file contain header data, for example, time scale, vertical scale, vertical and horizontal positions. Header data is required to interpret the waveform data, and to analyze the data values of the data file.

Below the header, the waveform data follows. For each sample, one line is written. The first value is the X-value (time or frequency), the next is the Y-value in the unit indicated in the header data. For envelope or peak detect waveforms, two Y-values (minimum and maximum) are written for each sample.

	A	B	C	D	E	F
1	Model,MXO54					
2	SerialNumber,101416					
3	,					
4	SourceType,CHANNEL_TRACE					
5	SignalSource,Ch1Wfm1					
6	Resolution,2e-10					
7	RecordLength,1000					
8	HWRecordLength,1000					
9	HorizontalPosition,0					
10	TraceArithmetics,SINGLE					
11	BaseUnit,LEVEL_V					
12	BaseUnitRelative,OFF					
13	Impedance,50					
14	UserTermination,1M_OHM					
15	XStart,-1.0000000000000001e-07					
16	XStop,1.0000000000000001e-07					
17	TimebaseScale,2e-08					
37	TIME,C1					
38	-1e-07,0.0031761544099682382					
39	-9.98e-08,0.002565355484974346					
40	-9.959999999999999e-08,0.000977278279990227					
41	-9.939999999999999e-08,0.0008551184949914487					
42	-9.919999999999999e-08,0.00036647935499633513					
43	-9.899999999999999e-08,-0.0010994380649890054					
44	-9.879999999999998e-08,-0.0018323967749816759					
45	-9.859999999999998e-08,-0.0020767163449792324					
46	-9.839999999999998e-08,-0.002321035914976789					
47	-9.819999999999998e-08,-0.001954556559980454					
48	-9.799999999999998e-08,-0.0008551184949914487					

Figure 12-8: CSV file of a time waveform, opened in Excel

	A	B	C	D	E
1	Model,MXO54				
2	SerialNumber,101416				
3	,				
4	SourceType,SPECTRUM				
5	SignalSource,SPECTRUM1_NORMAL				
6	BaseUnit,LEVEL_V				
7	BaseUnitRelative,OFF				
8	Impedance,50				
9	UserTermination,1M_OHM				
10	VerticalPosition,0				
11	VerticalScale,10				
12	VerticalOffset,-45				
13	BaseYStart,0				
14	BaseYStop,0				
15	ViewUnit,LEVEL_DBM				
16	ViewUnitRelative,OFF				
17	ViewReferenceLevel,0				
18	NumericFormat,DECIMAL				
19	CenterFreq,1000000000.0000001				
20	FreqSpan,2000000000				
33	FREQUENCY,SPECNORM1				
34	-213623.27970552444,-49.02157013180808				
35	549316.1734194754,-49.769556105402145				
36	1312255.6265444753,-53.96493039074978				
37	2075195.079669475,-61.57760265043916				
38	2838134.532794475,-70.19729413316635				
39	3601073.985919475,-73.24404760765583				
40	4364013.439044475,-75.68197528968501				
41	5126952.892169475,-91.81643862397064				

Figure 12-9: CSV file of a spectrum waveform, opened in Excel

Header data

The header lines contain the following properties, depending on the type of the exported waveform (time or frequency):

Table 12-1: Header file properties in CSV files

Value	Description	Time	Frequency
Model	Model of the instrument	X	X
SerialNumber	Serial number of the instrument	X	X
SourceType	Type of the exported waveform	X	X
SignalSource	Source of the exported waveform	X	X
Resolution	Time between two samples <i>Resolution = 1 / Sample Rate</i>	X	
RecordLength	Number of samples in a waveform record of one acquisition	X	
HWRRecordLength	Equivalent to the RecordLength	X	
HorizontalPosition	Horizontal position of the waveform in divisions	X	
TraceArithmetics	Arithmetic of the waveform: off, envelope, or average	X	
BaseUnit	Base unit of a mathematic waveform, for example, linear unit	X	X
BaseUnitRelative	Base unit, if a relative unit (e.g. dB) is enabled	X	X

Save and recall waveform data

Value	Description	Time	Frequency
Impedance	Input impedance, used for power calculation	X	X
UserTermination	User-defined load impedance connected to the probe	X	X
XStart	Horizontal start value of the waveform (time or frequency), as defined in the export settings	X	
XStop	Horizontal stop value of the waveform (time or frequency), as defined in the export settings	X	
TimebaseScale	Horizontal scale in seconds per division	X	
ReferencePoint	Position of the zero point in % of the screen	X	
VerticalPosition	Vertical position of the waveform in divisions	X	X
VerticalScale	Vertical scale of the waveform	X	X
VerticalOffset	Vertical offset of the waveform in Volts, or other unit	X	X
BaseYStart	Vertical start value of the waveform	X	X
BaseYStop	Vertical stop value of the waveform	X	X
ViewUnit	User-selected unit of a mathematic waveform, for example, logarithmic unit for a spectrum. The value is only valid if the exported waveform is a math waveform.	X	X
ViewUnitRelative	Indication of a relative unit. It is true if the math waveform has the ViewUnit "dB", for example. The value is only valid if the exported waveform is a math waveform.	X	X
ViewReferenceLevel	Reference level for a relative unit. The value is only valid if the exported waveform is a math waveform, and the unit is relative.	X	X
NumericFormat	Number format of bus values and digital channel data (bit pattern format)	X	X
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.	X	
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.	X	
CenterFreq	Center frequency of the spectrum		X
FreqSpan	Frequency span of the spectrum		X
ResolutionBW	Resolution bandwidth of the spectrum		X
FrequencyStart	Start frequency of the spectrum		X
FrequencyStop	Stop frequency of the spectrum		X
WindowType	Window used for the spectrum computation		X
GateRBWCoupling	Indication whether the record length or the resolution bandwidth is a constant for the spectrum computation		X
XAxisMode	Indicates a linear or logarithmic x-axis		X
HorizontalDivisionCount	Number of horizontal divisions	X	X

Value	Description	Time	Frequency
VerticalDivisionCount	Number of vertical divisions	X	X
FirmwareVersion	Firmware version that is installed on the MXO 4	X	X
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate: Sample, peak detect, HiRes, RMS	X	

12.2.3.2 Reference waveforms

The REF format is a specific format, which allows you to reload the waveform data as a reference waveform. The data is saved in a zipped file that contains two files. One file is a binary file (BIN file) and contains the waveform data values. The second file is an XML file and contains the header data in several data groups. Header data is required to reload the waveform from data, or to analyze the data values of the data file.

```
<?xml version="1.0" encoding="UTF-8"?>
<Group Name="SignalExportBase">
  <Group Name="SignalAttributes">
    <Prop Name="SourceType" Value="CHANNEL_TRACE" UserValue="NONE" />
    <Prop Name="SignalSource" Value="Ch1Wfm1" />
    <Prop Name="Resolution" Value="2.0000000000000001e-10" />
    <Prop Name="RecordLength" Value="1000" />
    <Prop Name="HWRecordLength" Value="1000" />
    <Prop Name="HorizontalPosition" Value="0" />
    <Prop Name="TraceArithmetics" Value="SINGLE" UserValue="SINGLE" />
    <Prop Name="BaseUnit" Value="LEVEL_V" UserValue="LEVEL_V" />
    <Prop Name="BaseUnitRelative" Value="OFF" UserValue="OFF" />
    ...
  </Group>
  <Group Name="PostProcessingBufferSampleCounts">
    <Prop Name="DeltaPreSamples" Value="25" />
    <Prop Name="PreSamples" Value="500" />
    <Prop Name="PostSamples" Value="500" />
    <Prop Name="DeltaPostSamples" Value="29" />
  </Group>
</Group>
```

Figure 12-10: Header file in XML format, part of the REF file container

Table 12-2: Header file properties in REF files

Value	Description
SignalAttributes	
Same values as in CSV files, except for Model and SerialNumber. See Table 12-1.	
SignalAttributesPostProcessing	
SignalFormat	Format of the data values in the BIN file: INT8BIT, INT16BIT, INT32BIT, FLOAT, DOUBLE
Origin	WFM_EXPORT: export of one acquisition
ByteOrder	Byte order of the values in the BIN file <ul style="list-style-type: none"> • LSB first: little endian, least significant byte first • MSB first: big endian, most significant byte first
NumberOfWaveforms	Number of waveforms. always = 1

Save and recall waveform data


Value	Description
TimestampState	OFF
Timestamp	Absolute time of the waveform recording in ISO 8601 format
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate
IsMinMax	If ON, then min and max values are saved for each sample. For envelope and peak detect waveforms.
IsComplex	If ON, then two values are saved for each sample (I and Q value).
TriggerOffsetToPostSampleInSeconds	Offset between the exact trigger position and the first sample after the trigger
SignalRecordLength	Number of samples in the BIN file. If the signal is a spectrum, the value indicates the number of FFT bins.
SignalXStart	Time of the first sample in the acquired data. Different from XStart if only part of the data is exported.
SignalXStop	Time of the last sample in the data acquired. Different from XStop if only part of the data is exported.
AdjustedResolutionBW	Actual resolution bandwidth of a spectrum waveform. Only valid if the exported waveform is a spectrum.
NoiseBandwidth	Noise bandwidth of a spectrum waveform, required for power calculation. Only valid if the exported waveform is a spectrum.
ValuesPerSample	Number of y-values saved at each sampling time. The value is usually 1. The value is 2, if min and max values are saved for each sample, for example, for envelope waveforms.
NofQuantisationLevels	Number of quantization levels of y values
TOADone	If ON, then TriggerOffsetToPostSampleInSeconds is compensated.
SignalResolution	Time between two samples in this waveform. The value can differ from Resolution if the source is, for example, a spectrum. The value is determined automatically considering the waveform parameters and their dependencies. If the signal is a spectrum, the value indicates the frequency range of FFT bins.
HorizontalDomain	Domain of the x-axis (time or frequency)
PostProcessingVerticalAxisAttributes	
Range	Range of the signal in y-direction
Offset	Center of the y-range
Resolution	Resolution of the y-axis
IsLogarithmic	Indicates if the y-axis is logarithmic (ON or OFF)
PostProcessingSampleFormatAttributes	
ValueStorage	Interpretation of the data: is integer or float (floating point data)
ValueInterpretation	Indicates if the data is saved as binary ADC values (BINARY), or physical values (PHYSICAL)
SampleBitSize	Value size in bit, as used in processing

Value	Description
ValueBitSize	Value size of ADC data in bit
LsbExtensionBits	Number of bits the ADC value is shifted to the left in the CPU sample size
AdcValueBitSize	Number of bits of the ADC that was used to sample the signal. It does not include any additionally gained bits due to high definition mode.
IsSigned	Signed values (ON) or unsigned values (OFF)
PostProcessingBufferSampleCounts	
[DeltaPreSamples PreSamples PostSamples DeltaPostSamples]	Indicates the distribution of the samples. marks the trigger time. The sum of PreSamples and PostSamples matches the requested record length. DeltaSamples are additional samples that are needed for computation but they are not measured or displayed.

Note: FractionalBits was removed in FW version 1.3.x. Reference waveforms created with older FW versions are compatible and can be reloaded.

12.3 Saving results

In this tab, you can select the result tables to be saved, and define the storage settings.

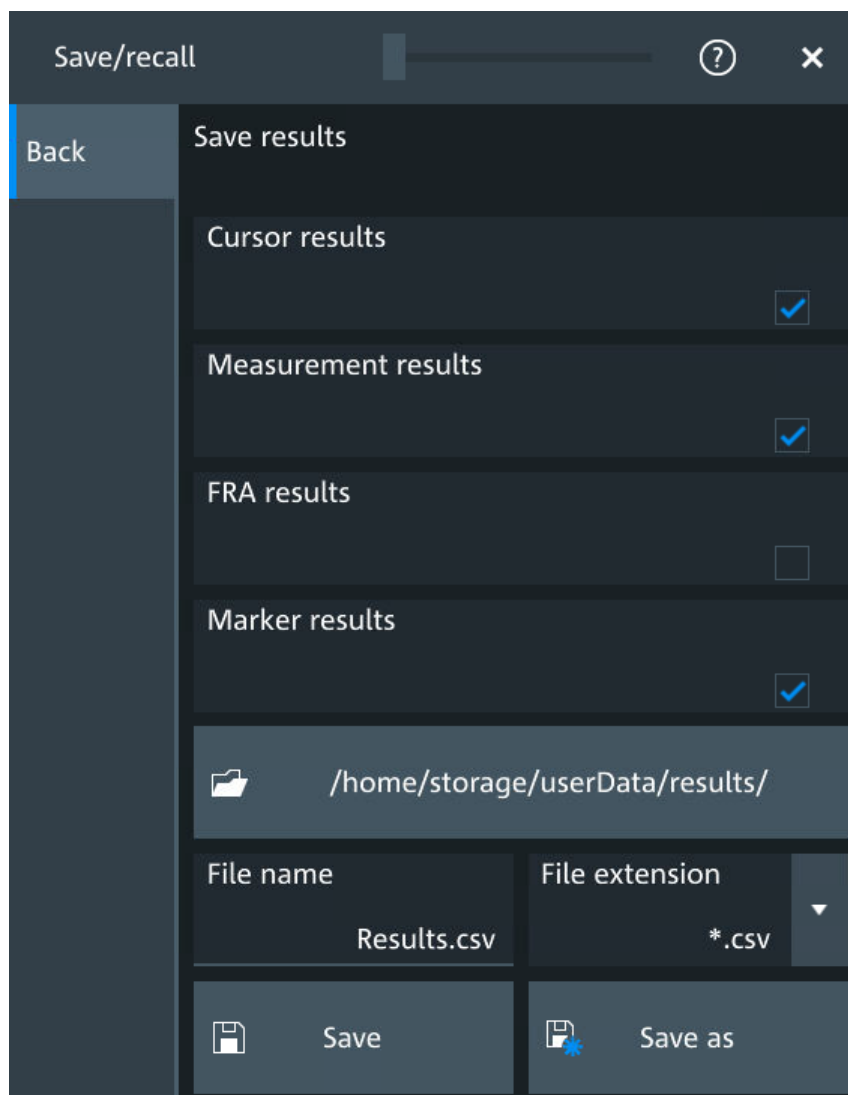

To save results

1. Open "Menu" > "Save/Recall".
2. In the "Save" tab, press the "Results" button.
The save "Results" dialog opens.
3. Select the results to be saved. The "Save results" results list shows all result tables that are currently open. All results are written into one file.
4. Under "Location", enter a "File name" and select "Save". Alternatively, select "Save As" and define the target directory and file name in the file selection dialog.
The current results are saved to the selected file.

Remote commands:

- `EXPort:RESult:SElect:CURSor` on page 681

- [EXPort:RESult:SElect:MEASurement](#) on page 681
- [EXPort:RESult:NAME](#) on page 680
- [EXPort:RESult:SAVE](#) on page 681

12.4 Screenshots

To store the graphical results of the measurement, you can save a screenshot of the graphic area. To document current settings, the open dialog box can be included in the screenshot.

If you often save screenshots, try the following shortcuts:

- The "Screen capture" toolbar icon saves the current display to a file according to the settings in "Menu" > "Save/Recall" > "Save" tab > "Screenshot".
- You can configure the [Camera] key to save screenshots by a single keypress. See also "[Camera hardkey action](#)" on page 94.

If a USB flash drive is connected to the instrument, the default path of the user data directory is set to the USB flash drive. Thus, you save data to USB flash drive automatically, and you can change the directory in the file explorer at any time.

Screenshots on a computer using the Web interface


If the MXO 4 is connected to a LAN, you can create and save screenshots of the instrument's display on a computer.

Meta information in screenshots

The meta data of the screenshot also contains instrument information. In PNG and JPEG files, meta information is saved as EXIF information and can be read, for example, using the ExifTool.

12.4.1 Screenshot settings

Access: "Menu" > "Save/Recall" > "Save" tab > "Screenshot"

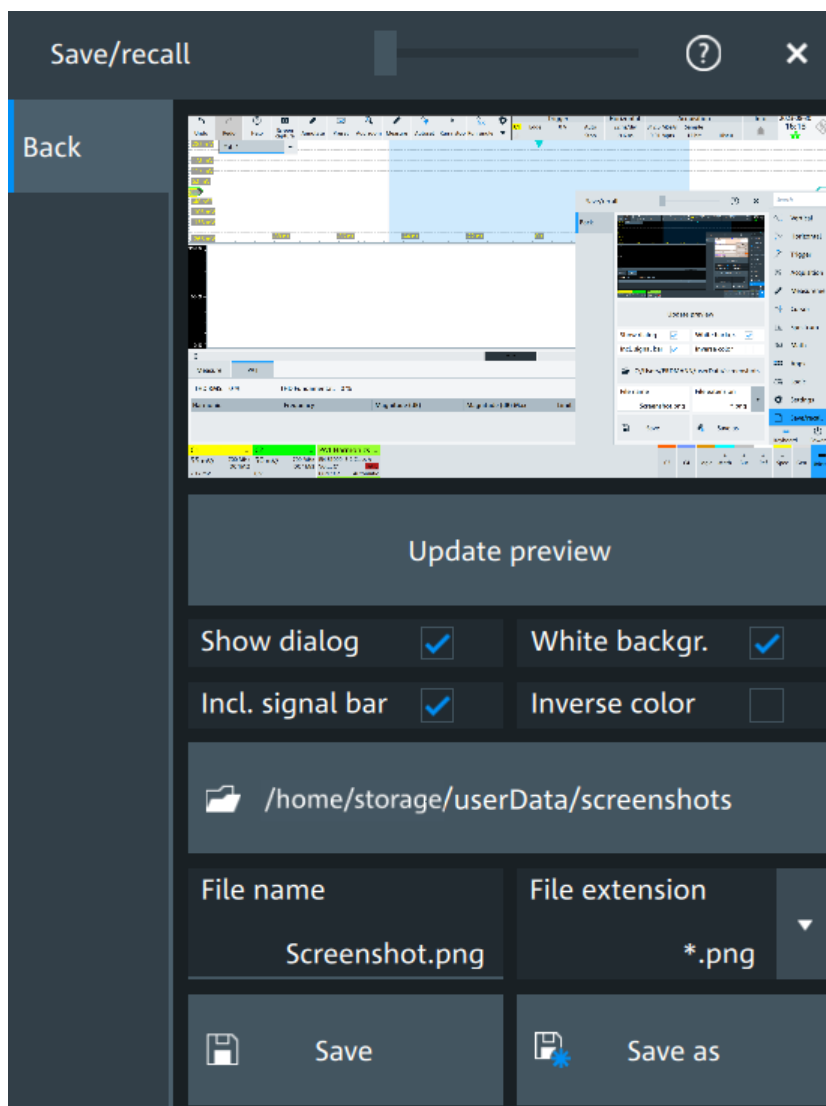

In the "Screenshot" dialog box, you configure the image to be saved or included in a report. You select the storage location for screenshot files. The image is created when you open the dialog box, and can be updated at any time.

You can also edit the colors of the image before saving it, and include an open dialog box or the sidebar in the image.

You can save the image in the dialog box. To save screenshots quickly, use the "Screen capture" toolbar icon, or configure and use the [Camera] key.

Preview	337
Update	337
Show setup dialog	337
White background	337
Include signal bar	337
Inverse color	337

Directory.....337
 File name, Extension.....338
 Save..... 338

Preview

Shows a preview of the screenshot. The image is created when the dialog box opens.

Update

Updates the preview of the screenshot with the current display view, e.g. after changes to the settings have been made, or an additional channel has been activated.

Show setup dialog

If enabled, the currently open dialog box is included in the screenshot.

Remote command:

[HCOPY:SSD](#) on page 684

White background

Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both "White background" and "Inverse color" are enabled, the instrument inverts the background twice, and it appears black.

"White background"	"Inverse color"	Background	Waveform and results
On	Off	White	Screen colors
Off	On	White	Inverted colors
On	On	Black	Inverted colors
Off	Off	Black	Screen colors

Remote command:

[HCOPY:WBKG](#) on page 684

Include signal bar

If enabled, the screenshot shows the signal bar below the diagram area.

Remote command:

[HCOPY:ISBA](#) on page 683

Inverse color

Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

Remote command:

[HCOPY:DEVICE<m>:INVerse](#) on page 682

Directory

Opens the file selection dialog box. Here you can adjust the target directory where the screenshot is saved. The symbols of important target folders are listed on the left of the file explorer.

Remote command:

[HCOPY:DESTination<m>](#) on page 682

File name, Extension

Sets a file name for the screenshot, and the extension of the file. You can save the screenshot as *.jpg or *.png file.

Save

Saves the current screenshot to the specified file.

12.4.2 Configuring and saving screenshots


You can select which elements are shown in the screenshot, invert the colors and the background color. A preview of the current image is shown for reference.

1. Open the "Menu" > "Save/Recall" > "Save" tab > "Screenshot".
2. To enhance the images for later print on white paper, enable "White background" or "Inverse color". If you print this image later on a monochrome printer, you get a grayscale picture. The contrast of the gray lines depends on waveform colors and the used printer.
3. To change the directory, tap "Browse" and configure the path.
The symbols of often used target folders are listed on the left of the file explorer. By default, screenshots are saved in the `/home/storage/userData/ScreenShots` directory.
4. Tap "Save".
The file is saved.
5. Check if the screenshot is saved to the desired directory.
6. To save further screenshots, use one of the following ways:
 - Configure the [Camera] key. Press the key to save a screenshot. See also [Camera hardkey action](#).
 - Add the "Screen capture" icon to the toolbar. Tap the icon to save an image.
 - Tap "Save" in the "Screenshot" dialog box to save the image to the specified file.
 - To save the image with a dedicated filename or to another directory, tap "Browse" in the "Screenshot" dialog box. Select the path, enter a filename, and tap "Save".

12.5 File browser dialog

The file browser dialog provides a file explorer from which you can select a file to load or to save data to. You can also manage your files in this dialog.

Access: [Apps] > "File browser".

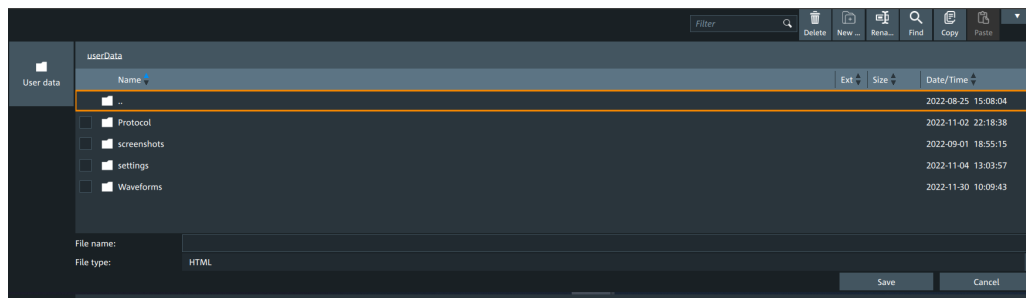

Path

Navigate the path elements to change the current folder. The default folder is defined in [Chapter 5.8.1, "Autonaming"](#), on page 103.

You can save the data in a local folder on the instrument.

On the left, shortcut icons provide access to often used folders.

Toolbar

The toolbar on the top provides various functions for file management.

"Filter"	Displays only the files and folders that match the current search term.
"Delete"	Deletes the selected file or folder.
"New folder"	Creates new folder in the current directory.
"Rename"	Renames the selected file.
"Find"	Searches for files within the current folder.
"Copy"	Copies the selected file.
"Paste"	Pastes the file.

File name

The file name to be loaded or stored to. Tap the file name, or tap the keyboard icon to enter the file name using the online keyboard.

The default file name for new files is defined in the "Autonaming" tab, see [Chapter 5.8.1, "Autonaming"](#), on page 103.

File type

The file extension of the file to be loaded or stored to.

Save, Select


Selects the specified file for the open or save operation and closes the dialog box.

Cancel

Closes the dialog box without selecting a file.

13 Protocol analysis

Using the serial protocol options for the MXO 4, you can analyze various serial protocols.

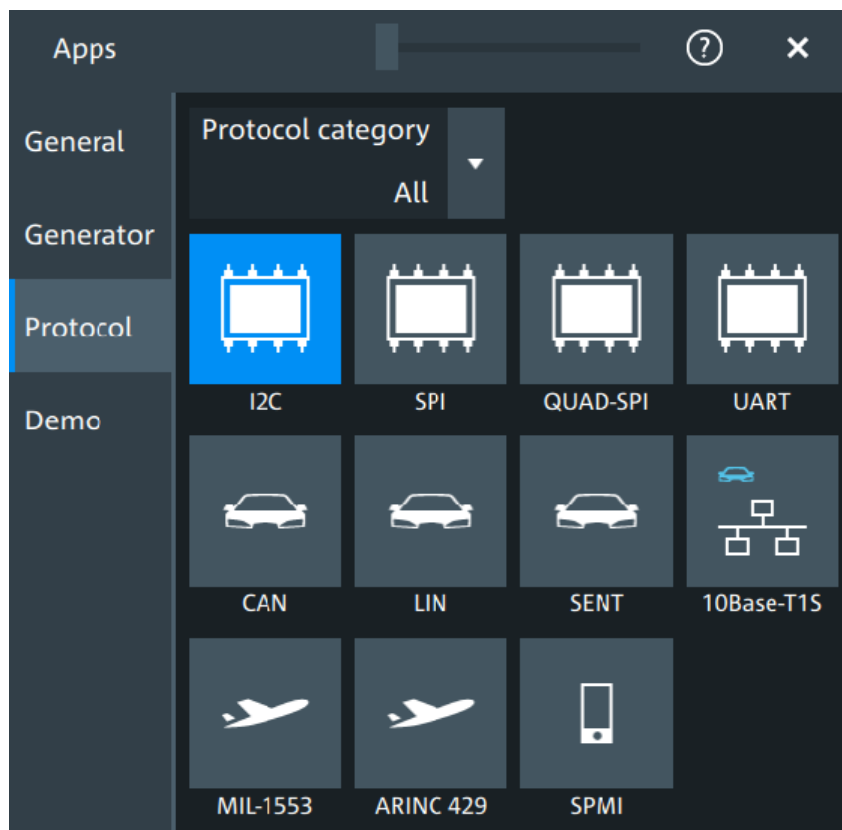

• Basics of protocol analysis.....	340
• SPI bus (option R&S MXO4-K510).....	349
• QUAD-SPI bus (option R&S MXO4-K510).....	363
• I ² C (option R&S MXO4-K510).....	374
• UART (option R&S MXO4-K510).....	393
• CAN (option R&S MXO4-K520).....	407
• LIN (option R&S MXO4-K520).....	432
• SPMI (option R&S MXO4-K550).....	445
• 10BASE-T1S (option R&S MXO4-K560).....	453
• ARINC 429 (option R&S MXO4-K530).....	460

13.1 Basics of protocol analysis

With the MXO 4 oscilloscope, you can decode selected protocols.

With dual-path protocol analysis, you can set the instrument sample rate for the waveform path and the oscilloscope automatically uses another internal decoupled sample

rate for the decoding path. Even with very slow sample rates, the protocol data is correctly decoded.

With the MXO 4, you can use deep memory to capture more packets. The oscilloscope can capture long time periods where the cause and result are distanced in time. Over the entire capture, signal detail is time-correlated with packet content for fast debug.

Before you can analyze a serial signal, the bus has to be configured according to the protocol and specifics of the signal. The configuration contains:


- Assignment of the data and clock lines to the input channels
- Logical thresholds
- Protocol-specific settings

Serial data can be analyzed in several ways:

- Triggering: You can trigger on various events that are typical for the selected protocol type, for example, on start and stop of messages, or on specified data patterns in the message.
Triggering on a trigger event sequence is not supported, and holdoff settings are not available.
- Protocol decoding: The digitized signal data is displayed on the screen together with the decoded content of the messages in readable form, and the decode results are listed in a table.

13.1.1 Setup - general settings

For all protocols, configuration starts with the selection of the serial bus and the protocol.

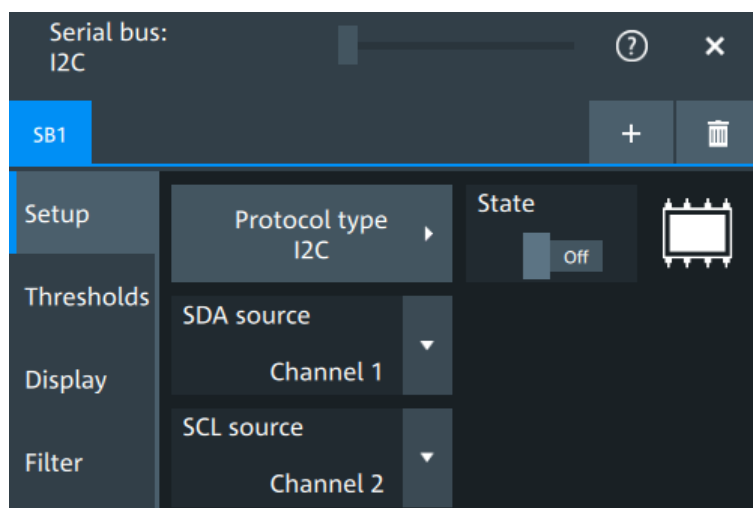

Configuration settings are protocol-specific. They are described in the related chapters.



Make sure that the tab of the correct serial bus is selected.

SB1 /SB2 /SB3 /SB4

Select the correct bus tab before you enter the settings.

Protocol type

Displays the protocol type to be decoded.

Remote command:


`SBUS<sb>:TYPE` on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

13.1.2 Thresholds

In the "Thresholds" tab, you can set values for threshold and hysteresis.

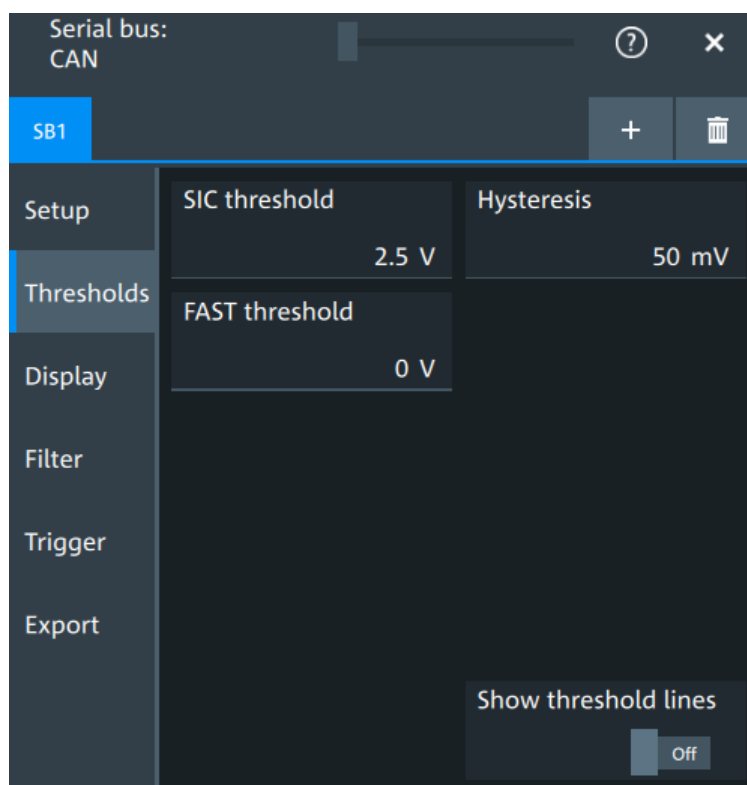**Show threshold lines**

Enables the display of the threshold lines in the diagram.

The label of the threshold line is set according to the signal that it is referring to. It is displayed in the color of the signal channel.

Example:

When the "Show threshold lines" is enabled, the threshold lines and the hysteresis are shown on the display for a few seconds. Afterwards only the threshold line is visible.



Figure 13-1: Threshold lines, shortly after Show threshold lines is enabled

Remote command:

`SBUS<m>:THReshold` on page 778


13.1.3 Advanced

Some protocols have additional more advanced settings. They are displayed in the "Advanced" tab.

The settings are protocol specific and are described in the corresponding protocol chapter.

13.1.4 Display

For all protocols, you can select to display the decoded signal as a table and to show the binary signal on the screen.

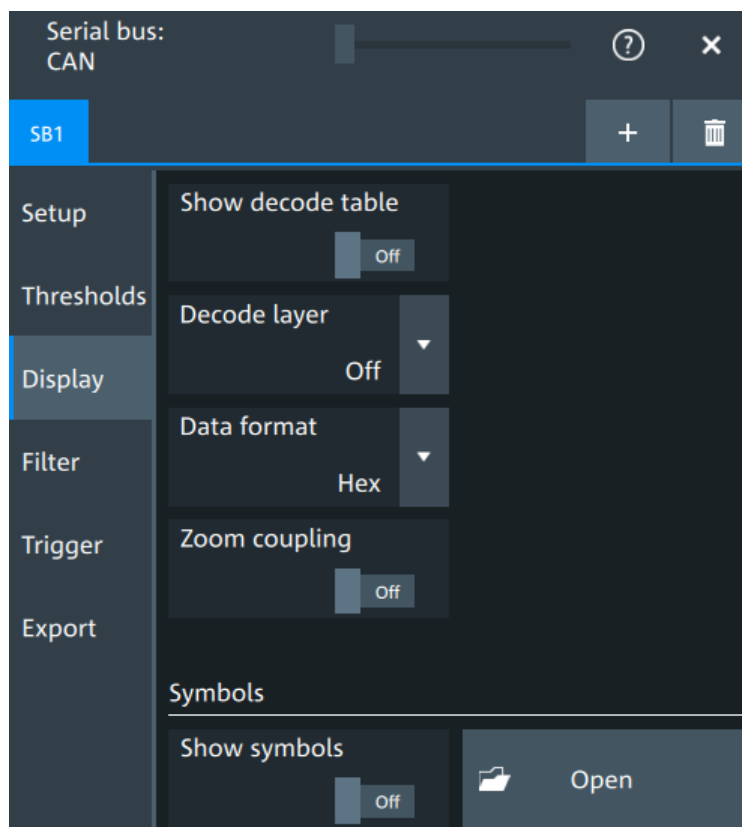

Show decode table

Opens a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Decode results are protocol-specific.

Remote command:

[SBUS<sb>:RESult](#) on page 777

Decode layer

Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

The available values are protocol-specific.

"Off" No decode layer is displayed.

"Edges" All edges.

"Bits" All bits.

"Words" All words.

Data format

Sets the data format for the values displayed in the decode table and in the combs of the decoded signal.

Available formats are: hex, octal, binary, ASCII, signed, unsigned.

For more information on the available formats, see [Chapter 13.1.8, "Bit pattern editor"](#), on page 348.

Remote command:

`SBUS<sb>:FORMat` on page 777

Zoom coupling

If enabled, the decode zoom and result table are synchronized. If you select a row in the result table, this result is shown in the decode zoom.

Remote command:


`SBUS<m>:ZCOupling` on page 777

Symbols

Symbol lists are protocol-specific. They are described in the respective configuration chapter of the protocol.

13.1.5 Filter


In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

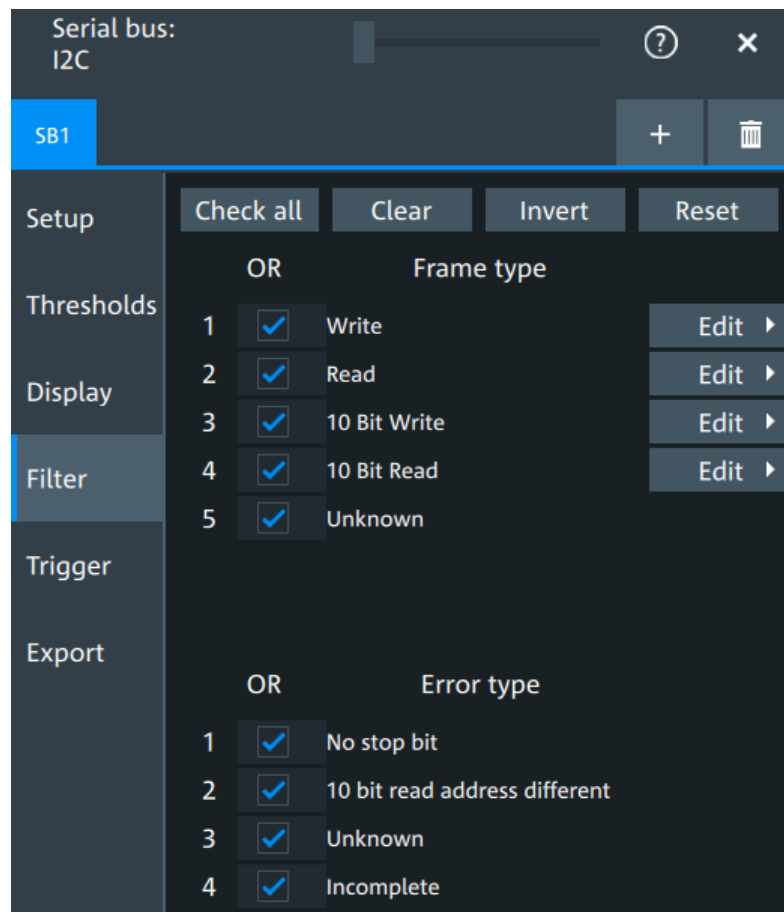

The settings are protocol specific and are described in the corresponding protocol chapter.


13.1.6 Trigger

The "Trigger" tab gives quick access to the "Trigger" dialog.

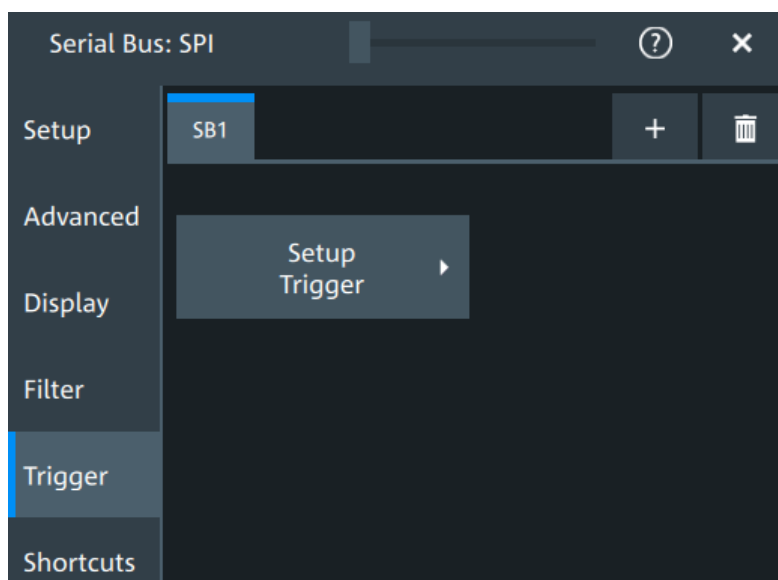

13.1.7 Export protocol results

In the "Export results" tab, you can export the results and all details of the selected protocol.

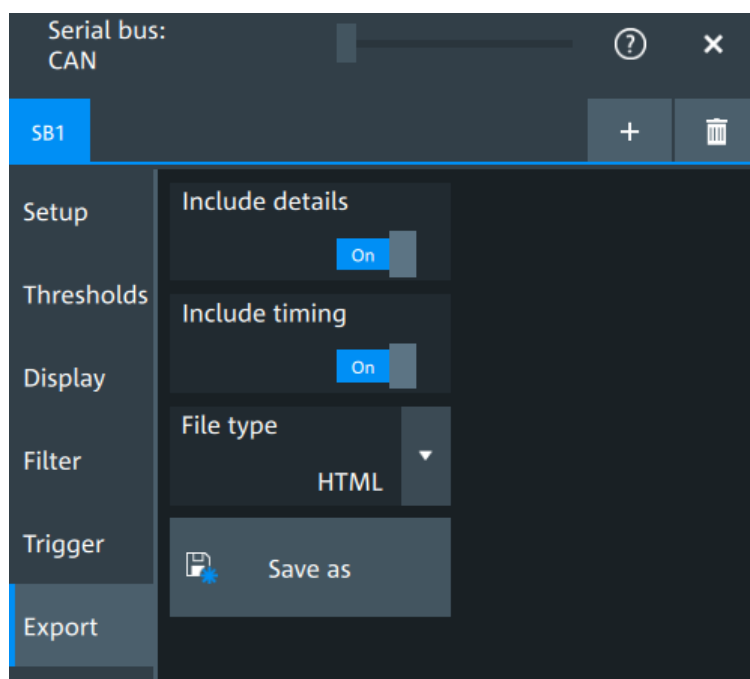**Include details**

If enabled, includes the detailed results for all frames in the export result file.

Remote command:

[SBUS<sb>:EXPResult:DETail](#) on page 778

Include timing

If enabled, includes the frame timing in the export result file.

Remote command:

[SBUS<sb>:EXPResult:TIME](#) on page 779

File type

Selects the file format.

- ".csv" The results are saved as a CSV compatible file.
- ".html" The results are saved as webpage for display in a browser.
- ".xml" The results are saved in an xml compatible file format.
- ".py" The values are saved in a Python compatible file format.

Remote command:

[SBUS<sb>:EXPResult:EXTension](#) on page 779

Save as

Opens a dialog box where you can select a filename and a path for the export results file.


Remote command:

[SBUS<sb>:EXPResult:SAVE](#) on page 779

[SBUS<sb>:EXPResult:PATH](#) on page 780

13.1.8 Bit pattern editor

If you want to enter a specified address or data pattern, the pattern editor helps you to enter the pattern in various formats - decimal, hexadecimal, octal, binary and ASCII.

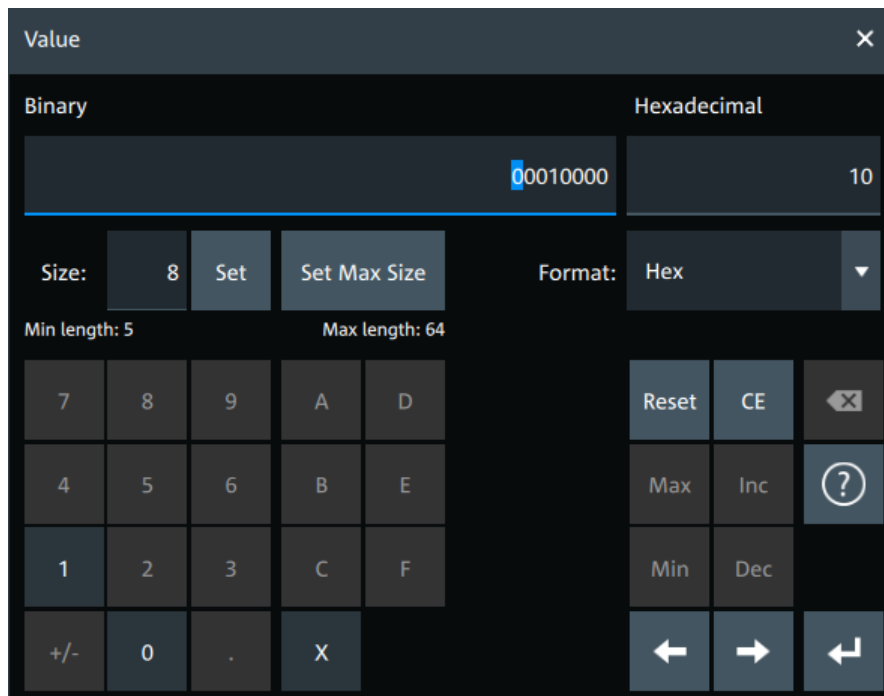

The editor at the top displays the pattern in two columns. The left column always shows binary data. For the right column, you can select the "Format". The default depends on the data specifics. You can edit data in the left or right column. The keypad adapts itself to the column format and only keys appropriate to the format are enabled.

The data is grouped and converted in bit groups. The size of a bit group depends on the address or data specifics and is set by the instrument. Groups are automatically separated by blanks. The maximum size of a bit group is 64 bit, the most common group size is 1 byte.

Format-specific information:

- Binary: 0, 1 and X (do not care) is allowed.
- Octal: Each digit represents 3 bit.
- Hex: most common format in the right column.
- ASCII: In the ASCII column, "X" is the character X. The binary X (do not care) is not allowed. If an X is included in the binary value in the left column, the ASCII column displays "§" to indicate that the value is not defined.
- Unsigned: Decimal data format without sign. 3 digits are grouped and next group is separated by comma, e.g. 653,848.
- Signed: Signed decimal format. 3 digits are grouped. The first bit represents the sign. You can use the 2's complement format. 3 digits are grouped and next group is separated by comma, e.g. -653,848.

13.2 SPI bus (option R&S MXO4-K510)

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

Required options and equipment

For performing SPI decode measurements, you need the following equipment:

- MXO 4 with 4 channels. The channels can be a combination of the following:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- Option R&S MXO4-K510

13.2.1 About the SPI protocol

A 4-channel instrument is required for full support of the SPI protocol, or the MSO option R&S MXO4-B1.

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

The main characteristics of SPI are:

- Main-subnode communication
- No device addressing. The sub is accessed by a chip select, or sub select line.
- No acknowledgment mechanism to confirm receipt of data
- Duplex capability

Most SPI buses have four lines, two data and two control lines:

- Clock line to all subs (SCLK)
- Sub select or Chip select line (SS or CS)
- Main data output, sub data input (MOSI or SDI)
- Main data input, sub data output (MISO or SDO)

When the main generates a clock and selects a sub device, data can be transferred in either or both directions simultaneously.

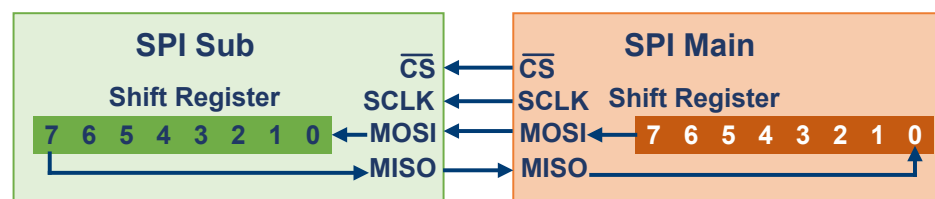


Figure 13-2: Simple configuration of SPI bus

The data bits of a message are grouped by the following criteria:

- A word contains several successive bits. The word length is defined in the protocol configuration.
- A frame contains several successive words, at least one word.


13.2.2 SPI configuration

13.2.2.1 SPI configuration settings

Access: [Apps] key > "Protocol" tab > "SPI" > "Setup".



Make sure that the tab of the correct serial bus is selected.

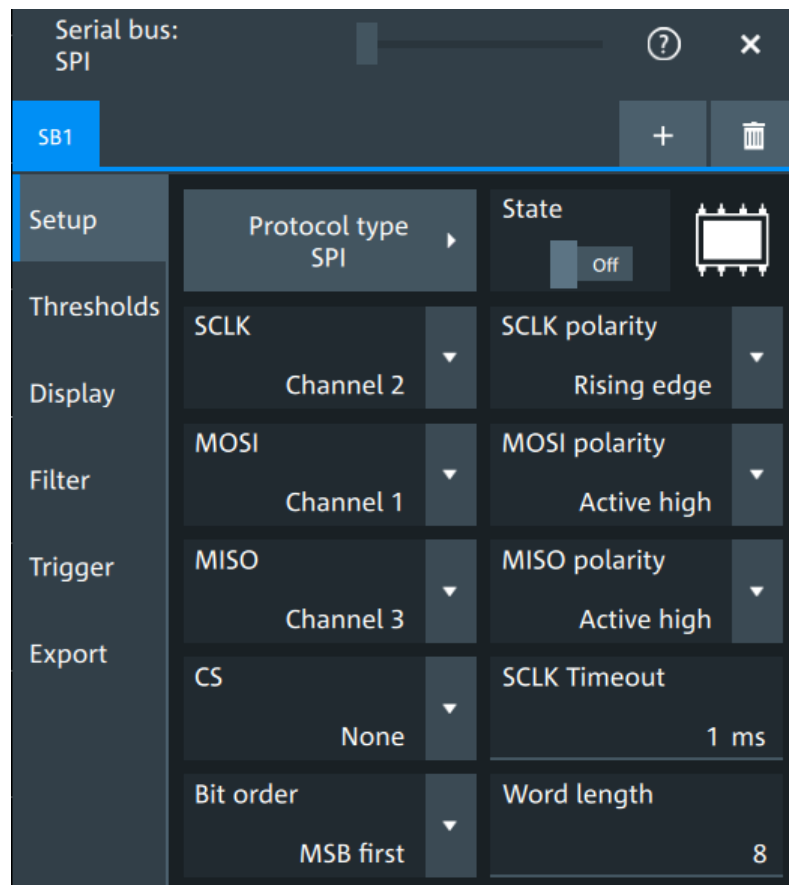

Protocol type

Displays the protocol type to be decoded.

Remote command:

`SBUS<sb>:TYPE` on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

SCLK,MOSI,MISO,CS

Sets the input channel for the respective line:

- SCLK: clock line
- MOSI line
- MISO line
- CS: chip select

Alternatively, digital channels can be used if MSO option R&S MXO4-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:

[SBUS<sb>:SPI:MISO:SOURce](#) on page 783

[SBUS<sb>:SPI:MOSI:SOURce](#) on page 784

[SBUS<sb>:SPI:SCLK:SOURce](#) on page 784

[SBUS<sb>:SPI:CSElect:SOURce](#) on page 781

Clock polarity

Two settings define the clock mode: the clock polarity and the clock phase. Together, they determine the edges of the clock signal on which the data are driven and sampled.

A master/slave pair must use the same parameter pair values to communicate. The clock phase defines the slope. It selects if data is stored with the rising or falling slope of the clock. The slope marks the begin of a new bit.

Polarity: MOSI, MISO, CS

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:

[SBUS<sb>:SPI:MISO:POLarity](#) on page 782

[SBUS<sb>:SPI:MOSI:POLarity](#) on page 783

[SBUS<sb>:SPI:CSElect:POLarity](#) on page 781

Bit order

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:

[SBUS<sb>:SPI:BORDER](#) on page 781

Word length

Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Remote command:

[SBUS<sb>:SPI:WSIZE](#) on page 785

Timeout

Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.


This setting is only available, for "CS" = "None".

Remote command:

[SBUS<sb>:SPI:TIMEout](#) on page 785

13.2.2.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "SPI" > "Thresholds".

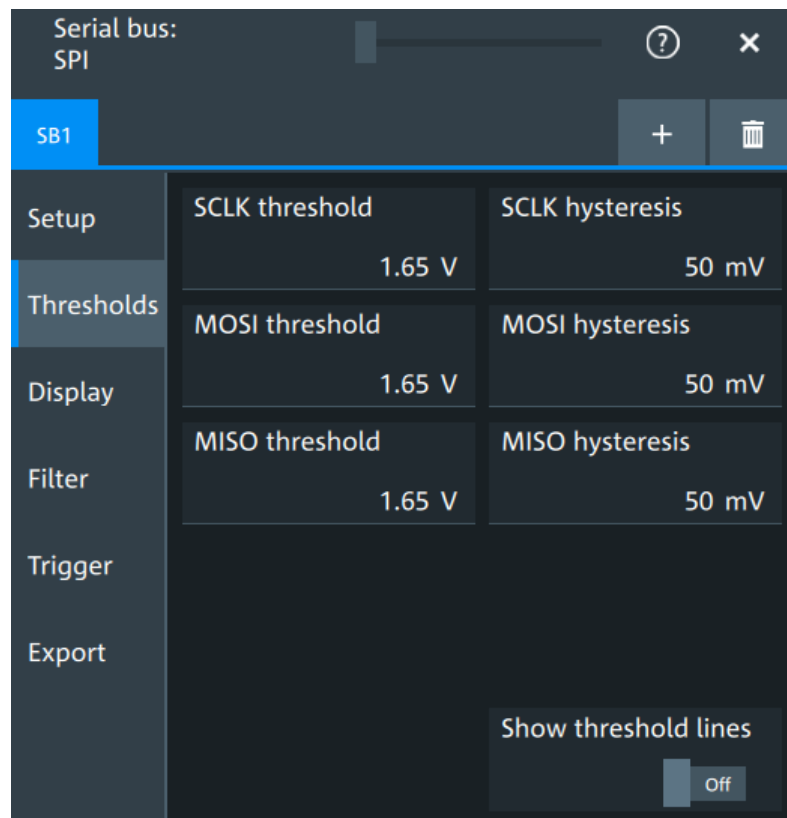**Threshold**

Sets the threshold for the SCLK, MOSI and MISO channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold.

The interpretation of high and low is defined by the "[Polarity: MOSI, MISO, CS](#)" on page 351.

Remote command:

[SBUS<sb>:SPI:MISO:HYSTeresis](#) on page 782

[SBUS<sb>:SPI:MOSI:HYSTeresis](#) on page 783

[SBUS<sb>:SPI:SCLK:HYSteresis](#) on page 784

[SBUS<sb>:SPI:CSElect:HYSteresis](#) on page 781

[SBUS<sb>:SPI:MISO:THReshold](#) on page 783

[SBUS<sb>:SPI:MOSI:THReshold](#) on page 784

[SBUS<sb>:SPI:SCLK:THReshold](#) on page 785

[SBUS<sb>:SPI:CSElect:THReshold](#) on page 782

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:


[SBUS<m>:THReshold](#) on page 778

13.2.2.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

13.2.3 SPI filter

Access:[Apps] key > "Protocol" tab > "SPI" > "Filter" tab

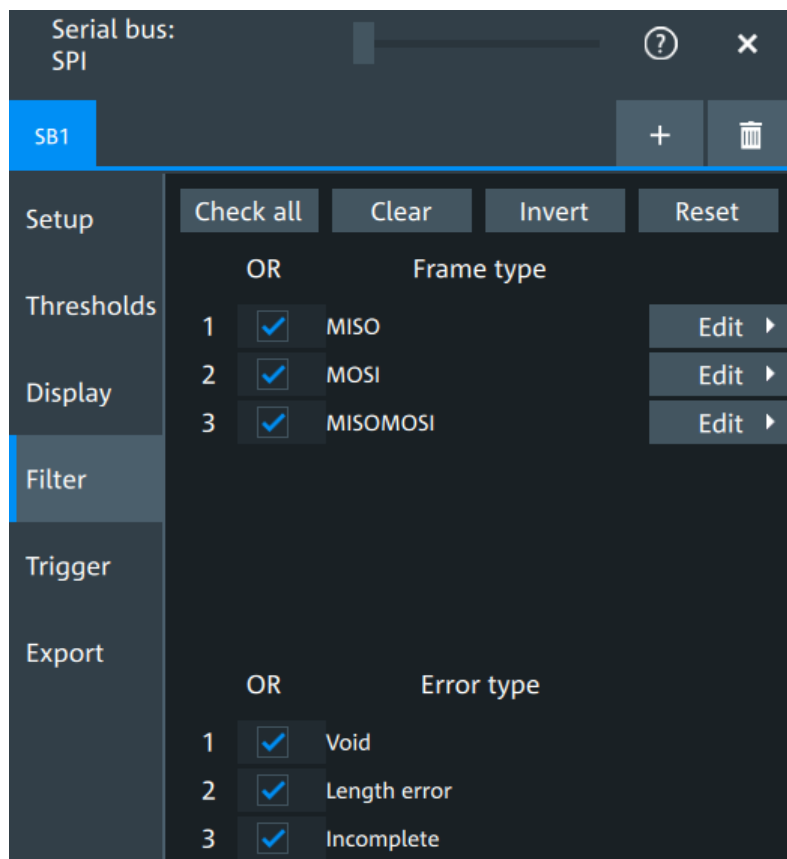

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Reset"	Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:SPI:FILTer:CHKall](#) on page 787

[SBUS<sb>:SPI:FILTer:CLR](#) on page 787

[SBUS<sb>:SPI:FILTer:INVert](#) on page 788

[SBUS<sb>:SPI:FILTer:RST](#) on page 788

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "MOSI", "MISO" and "MOSI/MISO".


Remote command:

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle](#) on page 790

[SBUS<sb>:SPI:FILTer:FRENable](#) on page 790

Edit

Opens a dialog to define the details of the selected frame.

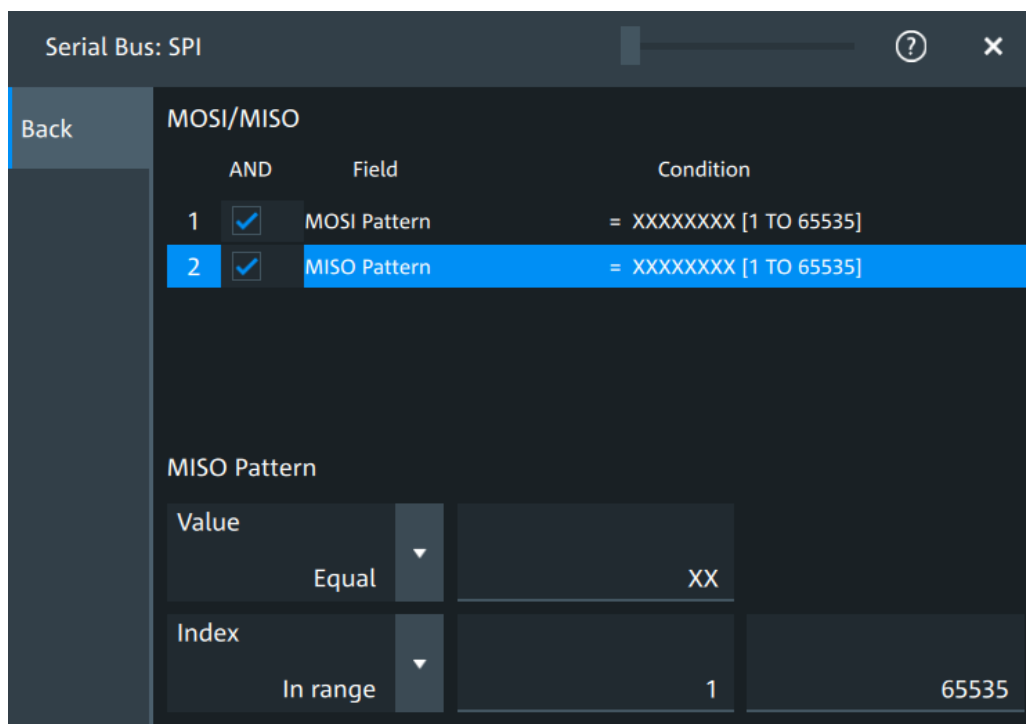

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "MOSI Pattern" and "MISO Pattern".

Remote command:

[SBUS<sb>:SPI:FILTer:FIENable](#) on page 790
[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABLE](#)
 on page 790

"Condition" Displays the value condition for the selected field.

Remote command:

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT](#) on page 788

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX](#)
 on page 789
[SBUS<sb>:SPI:FILTer:DMAX](#) on page 789
[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN](#)
 on page 789
[SBUS<sb>:SPI:FILTer:DMIN](#) on page 789
[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator](#)
 on page 789
[SBUS<sb>:SPI:FILTer:DOPerator](#) on page 789

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX](#)

on page 791

[SBUS<sb>:SPI:FILTer:IMAX](#) on page 791

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN](#)

on page 791

[SBUS<sb>:SPI:FILTer:IMIN](#) on page 791

[SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator](#)

on page 791

[SBUS<sb>:SPI:FILTer:IOPerator](#) on page 791

Edit

Opens a dialog to define the details of the selected frame.

Error type

Enables filtering on the selected error type.


Available error types are "Void", "Length error" and "Incomplete".

Remote command:

[SBUS<sb>:SPI:FILTer:ERRor<n>:ENABLE](#) on page 790

13.2.4 SPI trigger

Access: [Apps] key > "Protocol" tab > "SPI" > "Shortcuts".

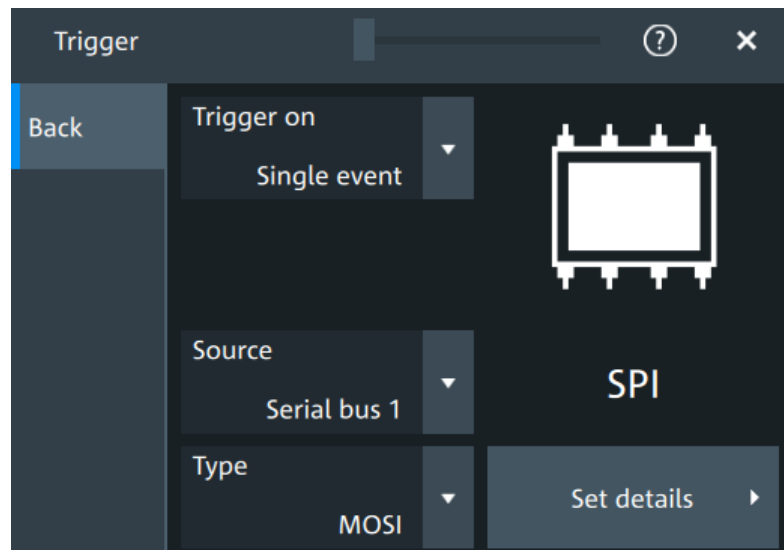

Type

Selects the trigger type for SPI analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame" Sets the trigger to the beginning of the frame.

"End of frame" Sets the trigger to the end of the frame.

"MOSI" Sets the trigger to a specified data pattern expected on the MOSI line.
Available, if there is a channel assigned to the "MOSI" line in the "Setup" tab.


"MISO" Sets the trigger to a specified data pattern expected on the MISO line.
Available, if there is a channel assigned to the "MISO" line in the "Setup" tab.

Remote command:

[TRIGger:SPI:TYPE](#) on page 792

Data conditions

The trigger on MOSI and MISO patterns is defined in the same way:

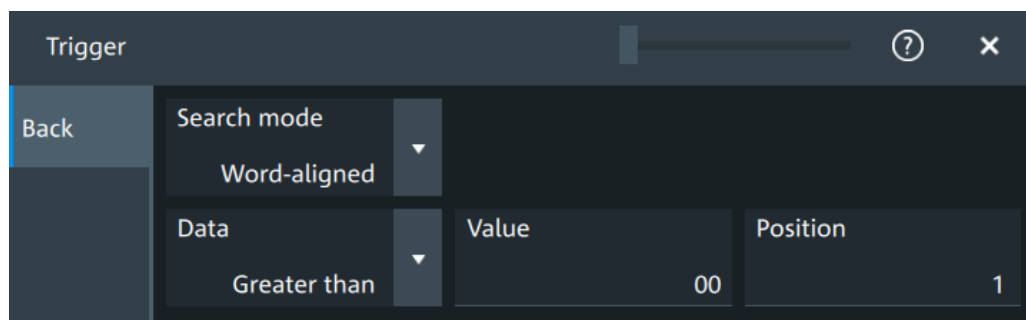

Search mode ← Data conditions

Defines how the specified data pattern is searched.

"Bit-aligned" Bit-by-bit: the pattern can start at any position in the message.

"Word-aligned" The pattern is matched only at word boundaries.

Remote command:

[TRIGger:SPI:PALignment](#) on page 793

Data ← Data conditions

Selects the operator condition for the data pattern and sets the data pattern.

Remote command:

[TRIGger:SPI:FCONdition](#) on page 793

[TRIGger:SPI:DMINpattern](#) on page 792

Position ← Data conditions

Sets the number of bits or words to be ignored before the first bit or word of interest.

Remote command:

[TRIGger:SPI:DPOStition](#) on page 793

13.2.5 SPI decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

The "Decode results" table contains information about all decoded frames.



Figure 13-3: Decoded and binary SPI signal

- Green brackets [...] = Start and end of complete frame
- Red brackets [...] = Start and end of incomplete frame
- Yellow = Word
- Red = Error

Table 13-1: Content of the "Decode results" table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start

Column	Description
Count	Number of words in the frame
MOSI values	Value of the MOSI data words. The data format is selected in the "Display" tab.
MISO values	Value of the MISO data words. The data format is selected in the "Display" tab.
Bit rate	Value of the bit rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.2.4, "Decode results"](#), on page 794.

13.2.6 Performing SPI decoding

This chapter explains step by step how to configure and decode the SPI bus.


For more information on decoding SPI, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: [Decoding SPI with MXO Series Oscilloscope](#).

13.2.6.1 Configuring SPI signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.2.2, "SPI configuration"](#), on page 350.

1. Tap the "Bus" activator in the bottom right of the screen.

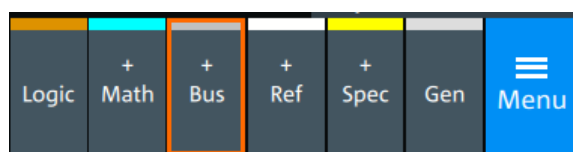

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "SPI".
4. Tap on "State" to enable the decoding.

An SPI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "SPI" dialog settings.

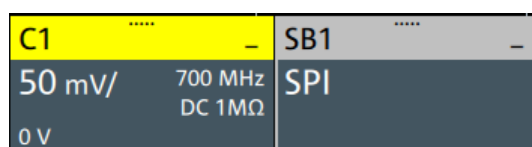


5. Tap on each active wire and select the correct channels: "SCLK", "MOSI", "MISO", "CS".
6. Set "Bit order" to "MSB" or "LSB first".
7. Set "Clock polarity" to "Rising edge" (CPOL = 0) or "Falling edge" (CPOL = 1).
8. Set "MOSI polarity"/"MISO polarity" to "Active high"(CPHA = 0) or "Active low"(CPHA = 1).
9. Set "CS polarity" to "Active high" or "Active low".
The typical value is "Active low", which means that the line is pulled low on message start.
10. Set the "Word length". The typical value is 8.
11. Check that the signals are on the screen.
If not try adjusting the vertical and horizontal settings.



12. Set the logical thresholds:

- Tap the "Thresholds" tab.
- For each wire, set the threshold value. A typical value is 1.65 V.
- If necessary, set the hysteresis value for the wires.
- Optionally, tap on "Show threshold lines".

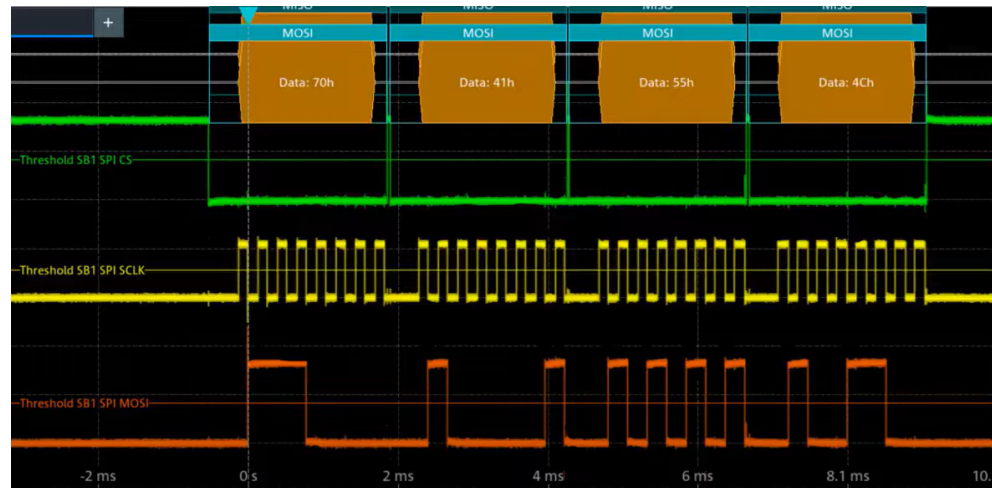

13.2.6.2 Triggering on SPI

Prerequisites: A bus is configured for the SPI signal to be analyzed. See [Chapter 13.2.6.1, "Configuring SPI signals"](#), on page 359.

For details on configuration settings, see [Chapter 13.2.2, "SPI configuration"](#), on page 350.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. Define additional settings for more complex trigger types ("MOSI"/ "MISO"):
 - a) Tap on "Set details".
 - b) Set the "Search mode".
 - c) Set the "Data pattern" or a data range.

In the following example a decode for triggering on "MOSI" triggered on "Data pattern" = 0x41.

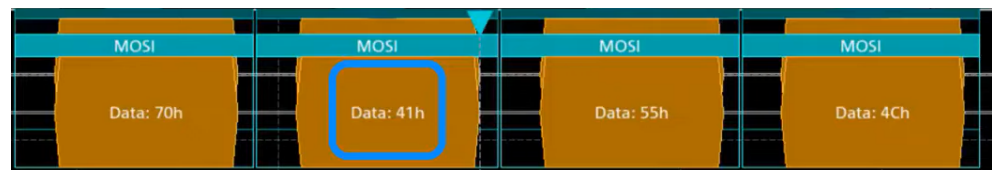


Figure 13-4: Trigger on Type= MOSI, Data pattern = 41

13.2.6.3 Exporting decode results

Once a decode has been completed, you can export the decode results of the

Prerequisites: A bus is configured for the SPI and decoded.

1. Tap on the "SPI" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

An export file is saved in the selected directory.

The SPI export file contains the following fields:

- A list of all decoded frames:
 - Index
 - Start
 - Stop
 - Source
 - State
 - Bit rate
- The details frame includes the following fields:
 - Index

- Start time
- Stop time
- MOSI values
- MISO values

Example SPI export file

```

Index,Start,Stop,State,Count,BitRate
1,-2.9e-05,-2.872e-05,'OK',2,50000000
2,-2.844e-05,-2.83e-05,'OK',1,50000000
3,-2.816e-05,-2.788e-05,'OK',2,50000000
4,-2.76e-05,-2.746e-05,'VOID',0,---

Details frame 1
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.9e-05,-2.886e-05,AFh,---
2,-2.886e-05,-2.872e-05,FEh,---

Details frame 2
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.844e-05,-2.83e-05,---,34h

Details frame 3
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.816e-05,-2.802e-05,CAh,F0h
2,-2.802e-05,-2.788e-05,05h,0Dh

```

13.3 QUAD-SPI bus (option R&S MXO4-K510)

QUAD SPI also known as QSPI is a protocol that extends the standard SPI by using four data lanes instead of one. This enables a faster data transfer.

Required options and equipment

For performing QUAD-SPI decode measurements, you need the following equipment:

- MXO 4 with 4 channels. The channels can be a combination of the following:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- Option R&S MXO4-K510

13.3.1 Basics

Quad Serial Peripheral Interface is an extension of the standard Serial Peripheral Interface (SPI). It enhances the data transfer capabilities by utilizing four data lines instead of the single data line used in traditional SPI. This expansion significantly increases the

data throughput, making it ideal for applications requiring rapid data exchange, such as memory devices, display controllers, and sensors.

Key features

Key features of Quad SPI are:

- **Increased Data Throughput:** By using four data lines (IO0, IO1, IO2, IO3), QSPI can achieve higher data transfer rates compared to standard SPI. This makes it suitable for high-speed applications.
- **Enhanced Flexibility:** Quad SPI supports various modes of operation, including single, dual, and quad modes, allowing for flexible communication tailored to specific needs.
- **Memory Mapping:** one of the standout features of QSPI is its ability to map external flash memory directly into the memory space of a microcontroller, enabling efficient and seamless data access.

QUAD SPI builds upon the traditional SPI protocol but adds complexity and speed.

Communication Lines

QUAD SPI uses six primary lines:

- SCLK (serial clock): generates the clock signal
- CS (chip select): selects the device for communication
- IO0-IO3, data lines: four lines for data transfer.

13.3.2 QUAD-SPI configuration

13.3.2.1 QUAD-SPI configuration settings

Access: [Apps] key > "Protocol" tab > "QUAD SPI" > "Setup".



Make sure that the tab of the correct serial bus is selected.

Protocol type

Displays the protocol type to be decoded.

Remote command:

`SBUS<sb>:TYPE` on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

CS, SCLK, IO n

Sets the input channel for the respective line:

- CS: chip select

- SCLK: clock line
- IO0, IO1, IO2, IO3, IO4: data lines

Remote command:

[SBUS<sb>:QSPI:CSEL:SOURce](#) on page 800

[SBUS<sb>:QSPI:IOONe:SOURce](#) on page 802

[SBUS<sb>:QSPI:IOTHree:SOURce](#) on page 804

[SBUS<sb>:QSPI:IOTWo:SOURce](#) on page 805

[SBUS<sb>:QSPI:IOZero:SOURce](#) on page 807

[SBUS<sb>:QSPI:SCLK:SOURce](#) on page 808

SCLK SDR Polarity

Selects if the transmitted signal for the respective line is rising or falling.

Remote command:

[SBUS<sb>:QSPI:SCLK:POLarity](#) on page 808

Polarity: CS, IOx

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Remote command:

[SBUS<sb>:QSPI:CSEL:POLarity](#) on page 800

[SBUS<sb>:QSPI:IOONe:POLarity](#) on page 801

[SBUS<sb>:QSPI:IOTHree:POLarity](#) on page 803

[SBUS<sb>:QSPI:IOTWo:POLarity](#) on page 804

[SBUS<sb>:QSPI:IOZero:POLarity](#) on page 806

Instruction

Selects the instruction mode that defines how many lanes are used to transmit data.

"Single"	Only one data line is used, IO0.
"Dual"	Two lines are used for data transmission IO0 and IO1. This mode doubles the data rate compared to single mode, as it can send or receive two bits per clock cycle.
"Quad"	Four lines are used for data transmission IO0, IO1, IO2 and IO3. This mode provides the highest data transfer rate. This mode quadruples the data rate transfer compared to single mode, as it can send or receive four bits per clock cycle.

Remote command:

[SBUS<sb>:QSPI:INSTruction](#) on page 801

Opcode file

Opens a dialog box where you can select an operation code (opcode) file.

Opcode is a specific command byte sent from the microcontroller to the SPI device to initiate a particular action, such as reading, writing or erasing data. The opcodes vary by device manufacturer and memory model.

Opcode files are in JSON format, and contain frame descriptions for each hexadecimal opcode value.

The following is an example from a JSON file:

```

{
  "Firmware Version": "2.2.0.0",
  "Description": "Rohde Schwarz Inc. oscilloscope Quadspi Opcode data",
  "Opcode Version": 1,
  "Opcodes": {
    "0x05,RDSR1": [
      {
        "name": "data",
        "bytes": 0,
        "ddr": false,
        "lanes": 1
      }
    ],
    "0x07,RDSR2": [
      {
        "name": "data",
        "bytes": 0,
        "ddr": false,
        "lanes": 1
      }
    ],
    "0x35,RDCR1": [
      {
        "name": "data",
        "bytes": 0,
        "ddr": false,
        "lanes": 1
      }
    ],
    "0x0D,DDRFAS READ": [
      {
        "name": "address",
        "bytes": 3,
        "ddr": true,
        "lanes": 1
      },
      {
        "name": "data",
        "bytes": 0,
        "ddr": true,
        "lanes": 1
      }
    ]
  }
}


```

Remote command:

[SBUS<sb>:QSPI:LDOPcode](#) on page 808

13.3.2.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "QUAD SPI" > "Thresholds".

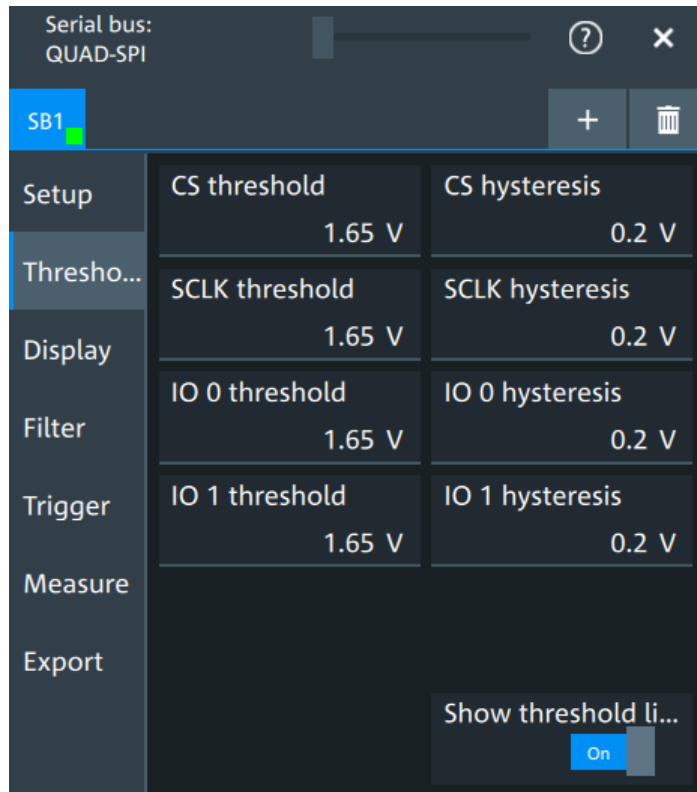

Threshold

Sets the threshold for the signal channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:QSPI:CSEL:HYSTeresis](#) on page 800

[SBUS<sb>:QSPI:CSEL:THReshold](#) on page 800

[SBUS<sb>:QSPI:IOONe:HYSTeresis](#) on page 801

[SBUS<sb>:QSPI:IOONe:THReshold](#) on page 802

[SBUS<sb>:QSPI:IOTWo:HYSTeresis](#) on page 804

[SBUS<sb>:QSPI:IOTWo:THReshold](#) on page 805

[SBUS<sb>:QSPI:IOTHree:HYSTeresis](#) on page 802

[SBUS<sb>:QSPI:IOTHree:THReshold](#) on page 804

[SBUS<sb>:QSPI:IOZero:HYSTeresis](#) on page 806

[SBUS<sb>:QSPI:IOZero:THReshold](#) on page 807

[SBUS<sb>:QSPI:SCLK:HYSTeresis](#) on page 807

[SBUS<sb>:QSPI:SCLK:THReshold](#) on page 808

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

`SBUS<m>:THReshold` on page 778

13.3.2.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.


Decode layer

Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

13.3.3 QUAD SPI filter

Access: [Apps] key > "Protocol" tab > "QUAD SPI" > "Filter" tab

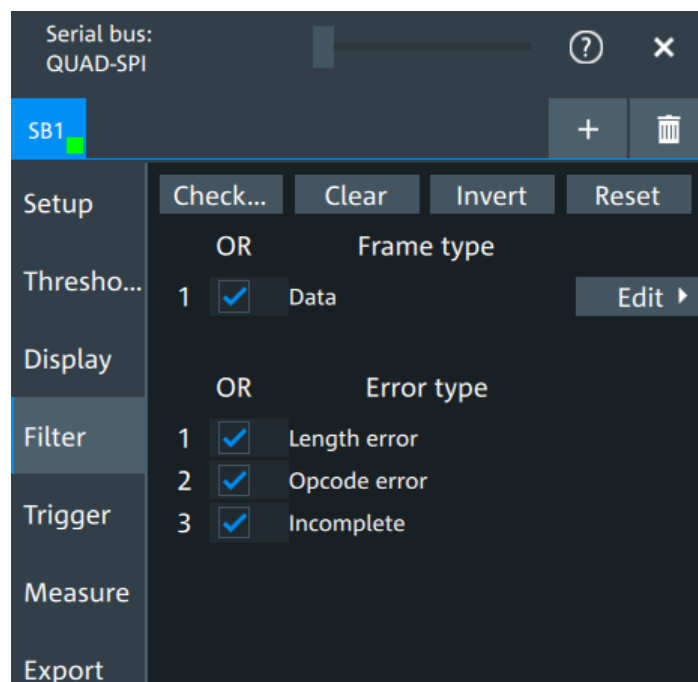

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:QSPI:FILTer:CHKall](#) on page 809

[SBUS<sb>:QSPI:FILTer:CLR](#) on page 810

[SBUS<sb>:QSPI:FILTer:INVert](#) on page 810

[SBUS<sb>:QSPI:FILTer:RST](#) on page 810

Frame type


Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frame is "Data".

Edit

Opens a dialog to define the details of the selected frame.

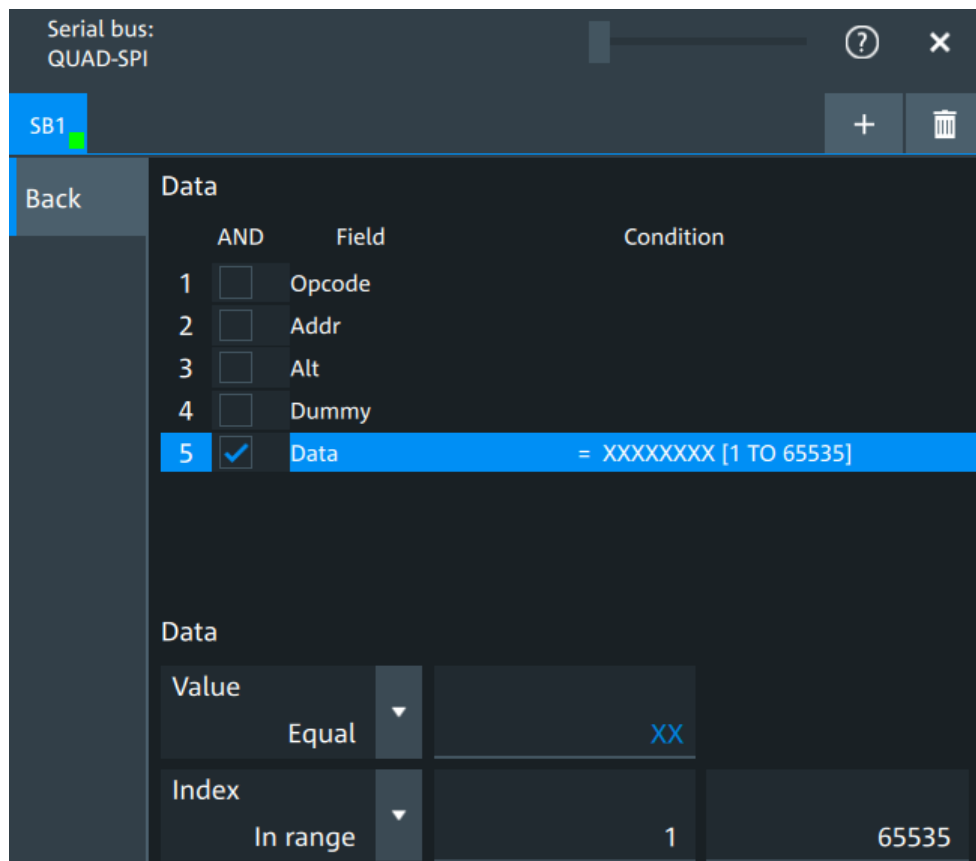

"Field"	<p>Enables the field type that you want to filter on for the selected frame.</p> <p>The available fields are:</p> <ul style="list-style-type: none"> • "Opcode" • "Addr" • "Alt" • "Dummy" • "Data" <p>Remote command: SBUS<sb>:QSPI:FILTer:FIENable on page 814 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABLE on page 812</p>
"Condition"	<p>Displays the value condition for the selected field.</p> <p>Remote command: SBUS<sb>:QSPI:FILTer:BIT on page 810 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 810</p>
"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command: SBUS<sb>:QSPI:FILTer:DMAX on page 811 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 811 SBUS<sb>:QSPI:FILTer:DMIN on page 811 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 811 SBUS<sb>:QSPI:FILTer:DOPerator on page 811 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 811</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command: SBUS<sb>:QSPI:FILTer:IMAX on page 812 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 812 SBUS<sb>:QSPI:FILTer:IMIN on page 813 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 813 SBUS<sb>:QSPI:FILTer:IOPerator on page 813 SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 813</p>

Error type

Enables filtering on the selected error type.

Available error types are "Length error", "Opcode error", "Incomplete".

Remote command:

[SBUS<sb>:QSPI:FILTer:ERENable](#) on page 813

[SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle](#) on page 813

13.3.4 QUAD-SPI decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

The "Decode results" table contains information about all decoded frames.



Figure 13-5: Decoded QUAD-SPI signal

Table 13-2: Content of the "Decode results" table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Opcode	Operation code value
Address	Address value

Column	Description
Alt	Value of the alternate byte
Count	Number of words in the frame
Data value	Value of the data frame
Bit rate	Value of the bit rate

Table 13-3: Content of the Details results table

Column	Description
Index	Index of the decoded field
Data	Value of the data frame

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.3.3, "Decode results"](#), on page 814.

13.3.5 Performing QUAD-SPI decoding


This chapter explains step by step how to configure and decode the QUAD-SPI bus.

13.3.5.1 Configuring QUAD-SPI signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.3.2, "QUAD-SPI configuration"](#), on page 364.

1. Tap the "Bus" activator in the bottom right of the screen.

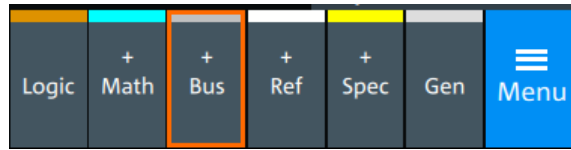

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "QUAD SPI".
4. Tap on "State" to enable the decoding.

A "QUAD SPI" shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "QUAD SPI" dialog settings.

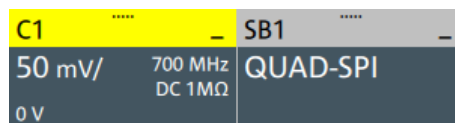

5. Check that the signals are on the screen.
If not try adjusting the vertical and horizontal settings.
6. Set the logical thresholds:
 - a) Tap the "Thresholds" tab.
 - b) For each wire, set the threshold value. A typical value is 1.65 V.
 - c) If necessary, set the hysteresis value for the wires.
 - d) Optionally, tap on "Show threshold lines".

13.4 I²C (option R&S MXO4-K510)

The Inter-Integrated Circuit is a simple, low-bandwidth, low-speed protocol used for communication between on-board devices, for example, in LCD and LED drivers, RAM, EEPROM, and others.

Required options and equipment

For performing I²C decode measurements, you need the following equipment:

- MXO 4 with 2 available channels. The channels can be a combination of the following:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- Option R&S MXO4-K510
- [About the I²C protocol](#)..... 375
- [I²C configuration](#)..... 377
- [I²C filter](#)..... 380

• I ² C trigger settings.....	383
• I ² C decode results.....	387
• Performing I ² C decoding.....	389

13.4.1 About the I²C protocol

This chapter provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "I²C-bus specification and user manual" available on the NXP manuals webpage at <http://www.nxp.com/>.

I²C characteristics

The main characteristics of I²C are:

- Two-wire design: serial clock (SCL) and serial data (SDA) lines
- Controller/ target communication: the controller generates the clock and addresses the targets. Targets receive the address and the clock. Both controller and targets can transmit and receive data.
- Addressing scheme: each target device is addressable by a unique address. Multiple target devices can be linked together and can be addressed by the same controller.
- Read/write bit: specifies if the controller reads (=1) or writes (=0) the data.
- Acknowledge: takes place after every byte. The receiver of the address or data sends the acknowledge bit to the transmitter.

The MXO 4 supports all operating speed modes: high-speed, fast mode plus, fast mode, and standard mode.

Data transfer

The format of a simple I²C message (frame) with 7-bit addressing consists of the following parts:

- Start condition: a falling slope on SDA while SCL is high
- 7-bit address of the target device that is either written to or read from
- R/W bit: specifies if the data is written to or read from the target
- ACKnowledge bits: is issued by the receiver of the previous byte if the transfer was successful
Exception: At read access, the controller terminates the data transmission with a NACK bit after the last byte.
- Data: several data bytes with an ACK bit after every byte
- Stop condition: a rising slope on SDA while SCL is high

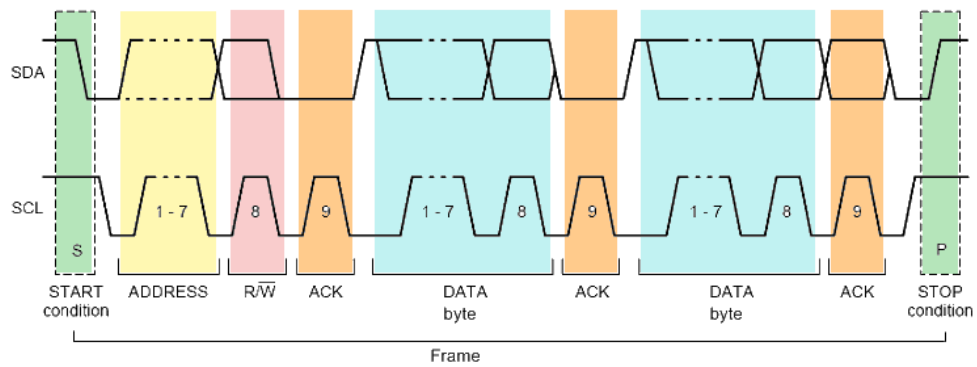


Figure 13-6: I²C write access with a 7-bit address

Address types: 7-bit and 10-bit

Target addresses can be 7 bits or 10 bits long. A 7-bit address requires 1 byte, 7 bits for the address followed by the R/W bit.

A 10-bit address for write access requires 2 bytes: the first byte starts with the reserved sequence 11110, followed by the two MSB of the address and the write bit. The second byte contains the remaining 8 LSB of the address. The target acknowledges each address byte.



Figure 13-7: 10-bit address, write access

A 10-bit address for read access requires 3 bytes. The first 2 bytes are identical to the write access address. The third byte repeats the address bits of the first byte and sets the read bit.

 


Figure 13-8: 10-bit address, read access

Trigger

The MXO 4 can trigger on various parts of I²C messages. The data and clock lines must be connected to the input channels, triggering on math and reference waveforms is not possible.


You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific data pattern in the message

13.4.2 I²C configuration

13.4.2.1 I²C configuration settings

Access: [Apps] key > "Protocol" tab > "I²C" > "Setup".

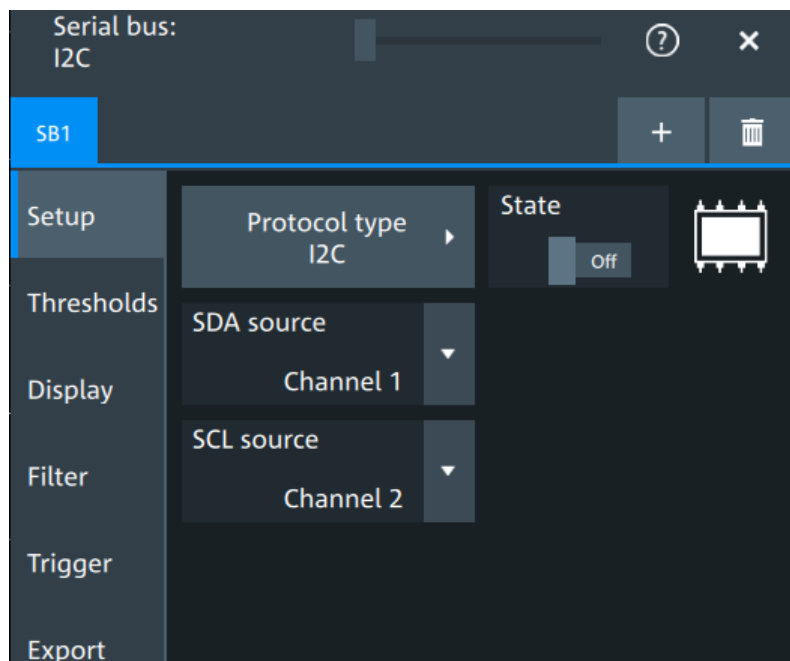

Make sure that the tab of the correct serial bus is selected.

Protocol type

Displays the protocol type to be decoded.

Remote command:

`SBUS<sb>:TYPE` on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

SDA source

Sets the source channel to which the data line is connected.

Remote command:

[SBUS<sb>:I2C:SDA:SOURce](#) on page 820

SCL source


Selects the source channel to which the clock line is connected.

Remote command:

[SBUS<sb>:I2C:SCL:SOURce](#) on page 819

13.4.2.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "I2C" > "Thresholds".

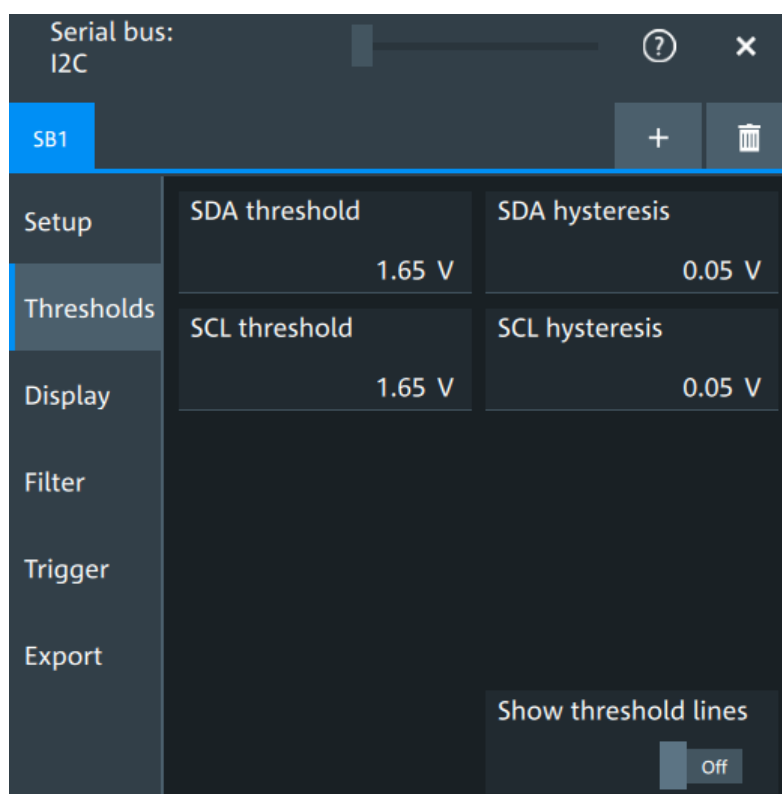**Threshold**

Sets the threshold for the SDA and SCL channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:I2C:SCL:THReshold](#) on page 820

[SBUS<sb>:I2C:SDA:THReshold](#) on page 820

[SBUS<sb>:I2C:SCL:HYSTeresis](#) on page 819

[SBUS<sb>:I2C:SDA:HYSTeresis](#) on page 820

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.


The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

`SBUS<m>:THReshold` on page 778

13.4.2.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

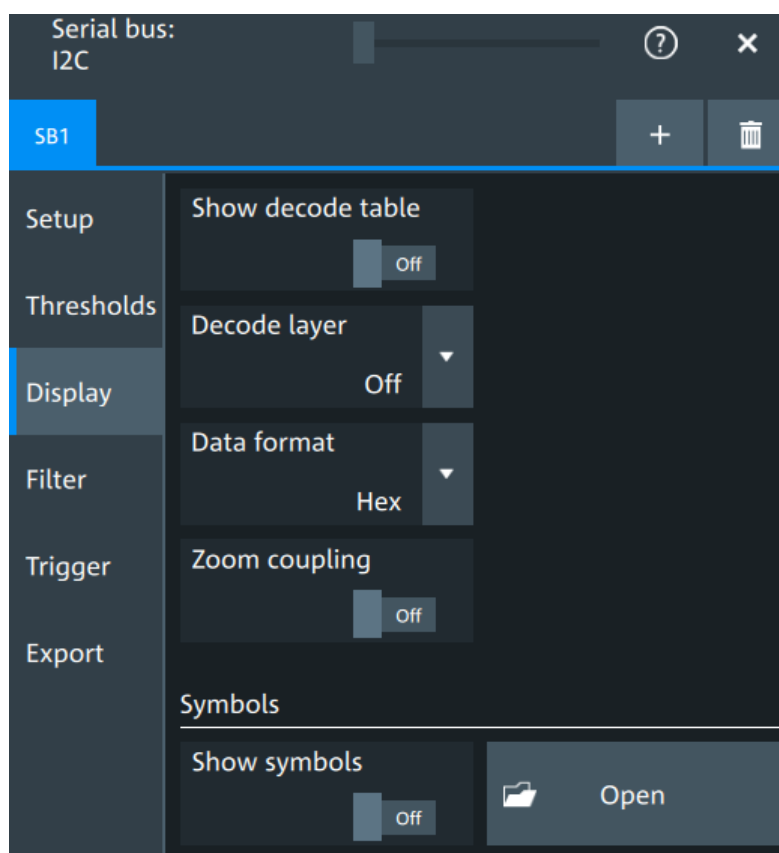

Show symbols

Symbol lists are protocol-specific. Label lists for I2C are available in CSV format.

For details, see [I²C symbols](#).

Remote command:

`SBUS<sb>:I2C:SYMBOLs` on page 822

`SBUS<sb>:I2C:NEWLlist` on page 822

13.4.2.4 I²C symbols

For the I²C protocol, you can upload symbol lists containing IDs and a symbolic name for each node. You can load a file in one of the supported formats. Symbol lists for I²C are available in CSV format.

An I²C label file contains three values for each address:


- Address type, 7-bit or 10-bit long
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

Example: I²C CSV file

```
# -----
@FILE_VERSION = 1.00
@PROTOCOL_NAME = i2c
# -----
# Labels for I2C protocol
# Column order: Identifier type, Identifier value, Label
# -----
7,0x1E,Voltage
7,38h,Pressure
7,2Ah,Temperature
7,16h,Speed
7,118,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
10,3A2h,DeviceSetup
10,1A3h,GatewayStatus
10,06Eh,LeftSensor
# -----
```

13.4.3 I²C filter

Access: [Apps] key > "Protocol" tab > "I²C" > "Filter" tab

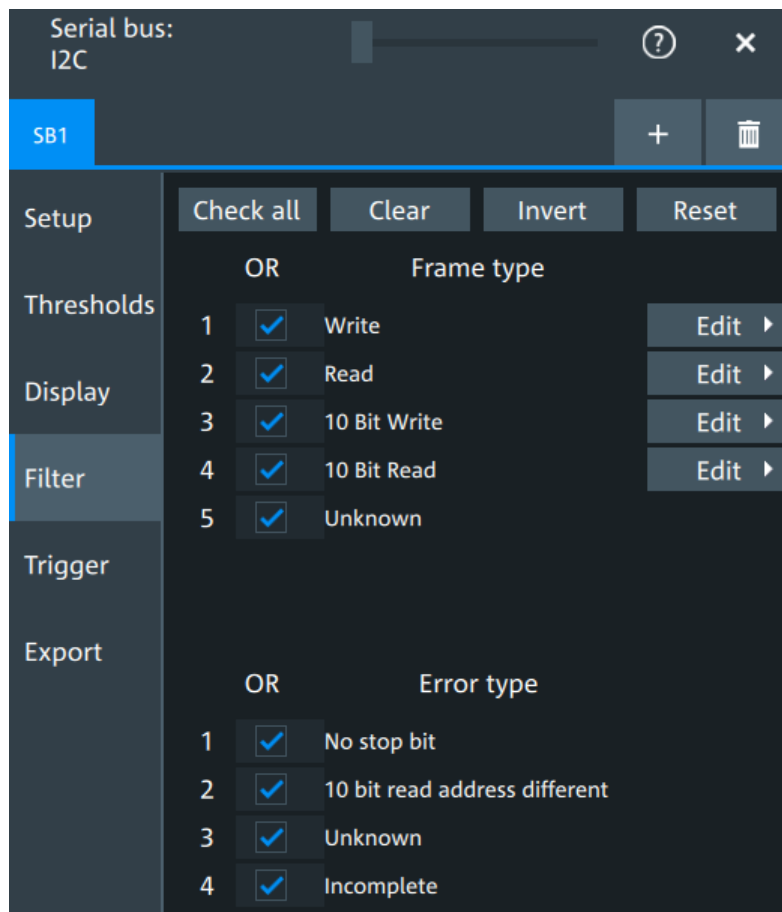

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

- "Check all" Enables the filter for all available frames and error types.
- "Clear" Disables the filter for all available frames and error types.
- "Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
- "Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:I2C:FILTer:CHKall](#) on page 827

[SBUS<sb>:I2C:FILTer:CLR](#) on page 827

[SBUS<sb>:I2C:FILTer:INVert](#) on page 827

[SBUS<sb>:I2C:FILTer:RST](#) on page 827

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.


Remote command:

[SBUS<sb>:I2C:FILTer:FREnable](#) on page 828

[SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle](#) on page 828

Edit

Opens a dialog to define the details of the selected frame.

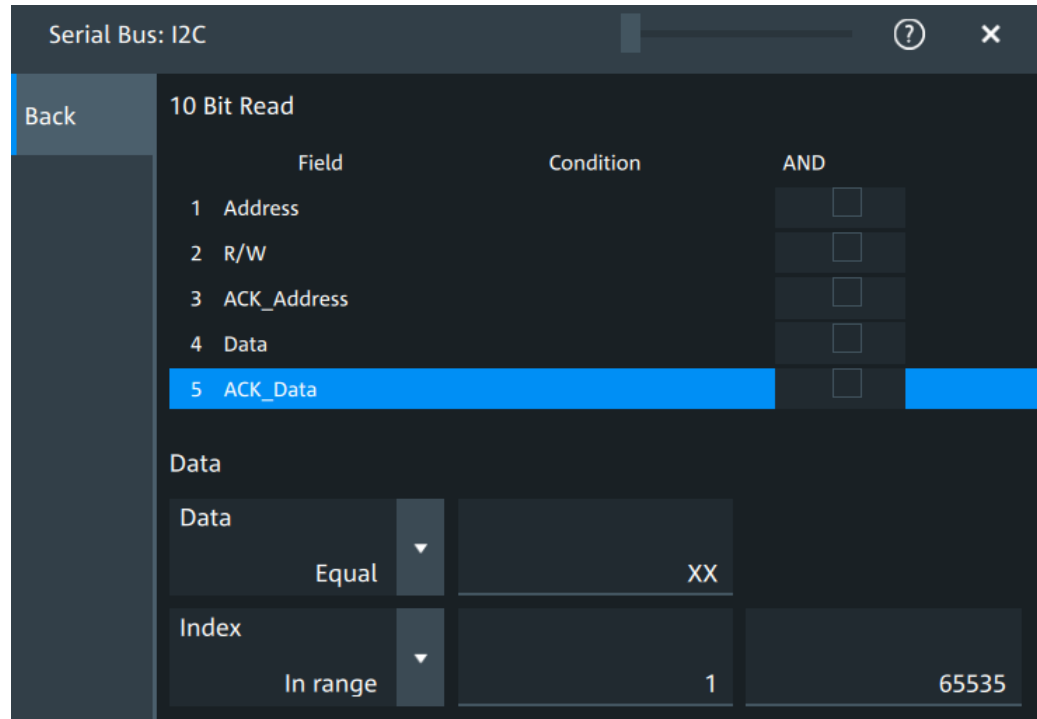

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Address", "R/W", "ACK_A", "Data", and "ACK_D".

Remote command:

[SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle](#) on page 831

[SBUS<sb>:I2C:FILTer:FIENable](#) on page 831

"Condition" Displays the value condition for the selected field.

Remote command:

[SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT](#) on page 831

"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command:</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 828</p> <p>SBUS<sb>:I2C:FILTer:DMAX on page 828</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 828</p> <p>SBUS<sb>:I2C:FILTer:DMIN on page 828</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 829</p> <p>SBUS<sb>:I2C:FILTer:DOPerator on page 829</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command:</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 829</p> <p>SBUS<sb>:I2C:FILTer:IMAX on page 829</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 830</p> <p>SBUS<sb>:I2C:FILTer:IMIN on page 830</p> <p>SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 830</p> <p>SBUS<sb>:I2C:FILTer:IOPerator on page 830</p>

Error type

Enables filtering on the selected error type.


Remote command:

[SBUS<sb>:I2C:FILTer:ERENable](#) on page 829

[SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle](#) on page 829

13.4.4 I²C trigger settings

Access: [Apps] > "Protocol" > "I²C" > "Shortcuts" > "Setup trigger"

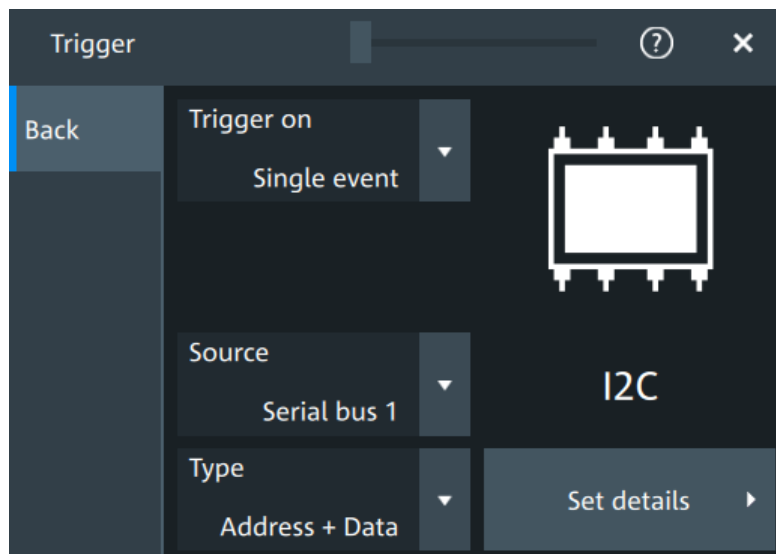**Type**

Selects the trigger type for I²C analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

Remote command:

`TRIGger:I2C:TYPE` on page 823

Start ← Type

Sets the trigger to the start of the message. The start condition is a falling edge on SDA while SCL is high. The trigger instant is the falling edge of the SDA line.

You can change the SDA and SCL lines here if necessary.

Repeated start ← Type


Sets the trigger to a repeated start - when the start condition occurs without previous stop condition. Repeated start conditions occur when a controller exchanges multiple messages with a target device without releasing the bus.

Stop ← Type

Sets the trigger to the end of the message. The stop condition is a rising slope on SDA while SCL is high.


No Ack ← Type

Missing acknowledge bit: the instrument triggers if the data line remains HIGH during the clock pulse following a transmitted byte.

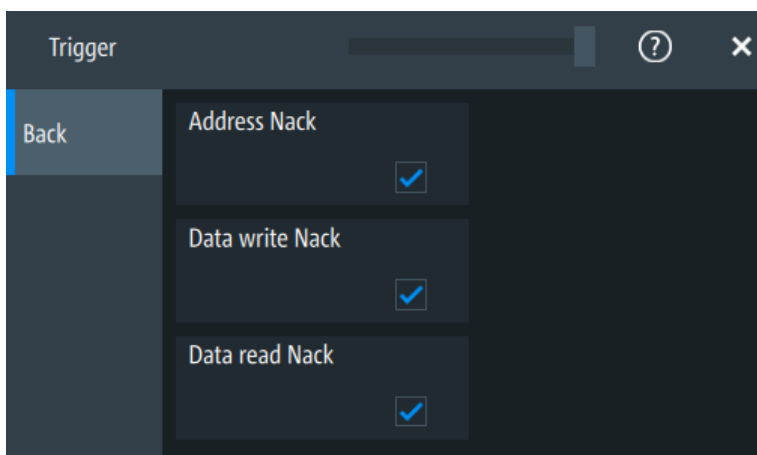


Address ← Type

Sets the trigger to one specific address condition or a combination of address conditions. The trigger time is the falling clock edge of the acknowledge bit after the address.

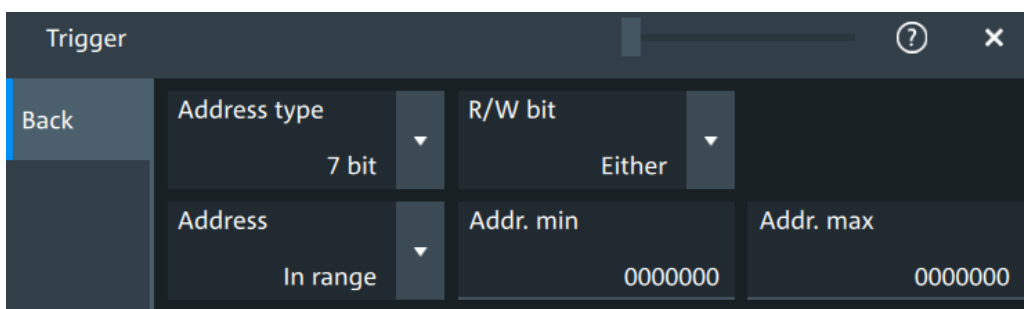

Data ← Type

Sets the trigger to one specific data condition or a combination of address conditions.

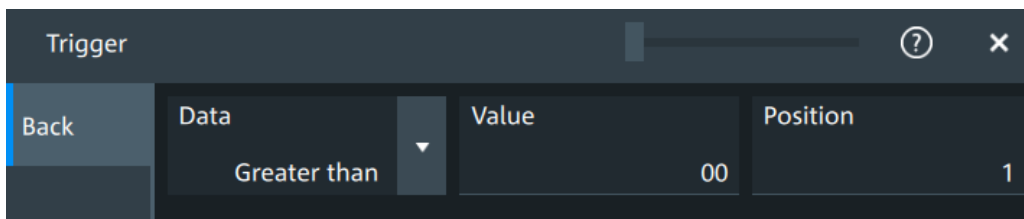

Address and data ← Type

Sets the trigger to a combination of address and data condition.

Back	Address type 7 bit	R/W bit Either	
	Address In range	From 00	To 00
	Data Less or equal	Value 00	Position 1

No Ack conditions

Selects which missing acknowledge bits is detected if the trigger type is set to "No Ack".

"Address Nack"

No secondary recognizes the address.

"Data write Nack"

The addressed secondary does not accept the data.

"Data read Nack"

Marks the end of the read process when the primary reads data from the secondary. This Nack is sent according to the protocol definition, it is not an error.

Remote command:

[TRIGger: I2C:ADNack](#) on page 824

[TRIGger: I2C:DWNack](#) on page 826

[TRIGger: I2C:DRNack](#) on page 825

Address type

Sets the address length to be triggered on: 7 bit or 10 bit.

Remote command:

[TRIGger: I2C:AMODe](#) on page 824

R/W bit

Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Remote command:

[TRIGger: I2C:ACCess](#) on page 823

Address

The trigger address setup consists of a comparison condition and one or two address patterns.

Defines the bit pattern of the secondary device address. The length of the entry is adjusted to the selected address type.

"Condition" Sets the comparison condition to a specific value or a range.

"From"	Specifies the value or sets the start value of a range.
"To"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:

[TRIGger:I2C:ADDRess](#) on page 824

[TRIGger:I2C:ADDTTo](#) on page 824

Data

Specifies the trigger conditions for the data bit pattern.

"Condition"	Sets the comparison condition to a specific value or a range.
"Value"	Specifies the value or sets the start value of a range. Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Remote command:

[TRIGger:I2C:DCONdition](#) on page 825

[TRIGger:I2C:DMIN](#) on page 825

Position

Sets the number of data bytes to be skipped after the address.

Remote command:

[TRIGger:I2C:DPOSition](#) on page 825

13.4.5 I²C decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

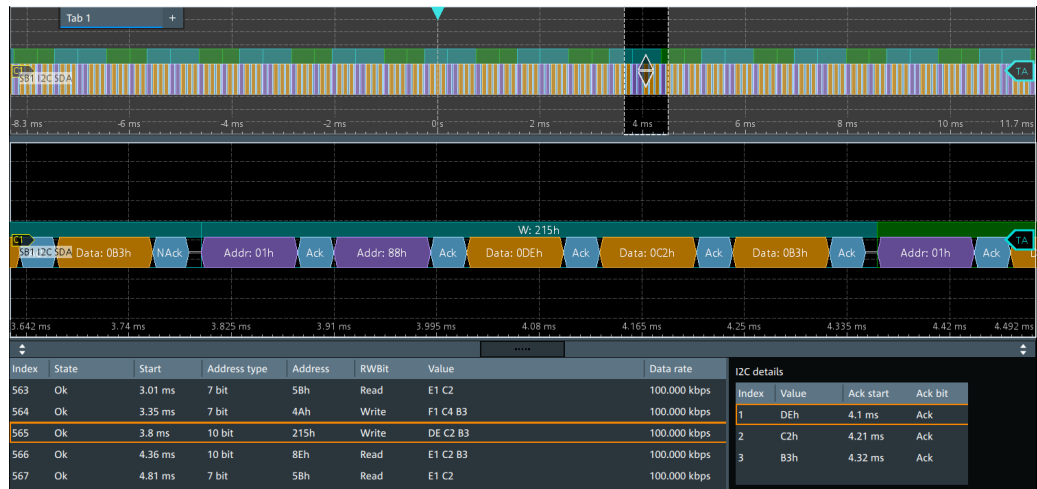


Figure 13-9: Decoded I2C signal, and decode results

- Purple = Address byte
- Blue = R/W bit
- Cyan = ACK bit
- Red = NACK bit
- Gold = Data byte
- Turquoise = Write frame
- Green = Read frame
- Crimson red = Incomplete frame

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Decode results table

The "Decode results" table contains information about all decoded frames.

Table 13-4: Content of the Decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame. "Insufficient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Symbol	Symbolic label of the frame
Address type	Address length, 7 bit or 10 bit
Address value (hex)	Hexadecimal value of the address
R/W bit	Value of the R/W bit
Data rate	Value of the data rate

Table 13-5: Content of the Details results table

Column	Description
Index	Index of the decoded field
Value	Value of all data bytes of the frame
ACK bit start	Start time of the acknowledge bit
ACK bit	Value of the address acknowledge bit

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.4.4, "Decode results"](#), on page 831.

13.4.6 Performing I2C decoding

This chapter explains step by step how to configure and decode the I2C bus.


For more information on decoding I2C, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: [Decoding I2C with MXO Series Oscilloscope](#).

13.4.6.1 Configuring I2C signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.4.2, "I2C configuration"](#), on page 377.

1. Tap the "Bus" activator in the bottom right of the screen.

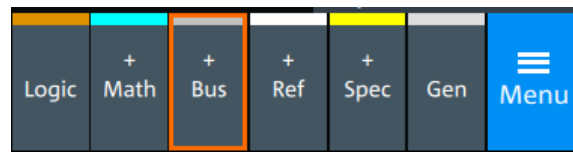

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "I2C".
4. Tap on "State" to enable the decoding.


An I2C shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "I2C" dialog settings.

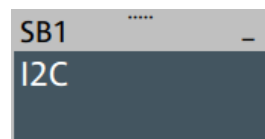

5. Tap on each active wire and select the correct channels: "SDA source" and "SCL source".
6. Check that the signals are on the screen. If not try adjusting the vertical and horizontal settings.



7. Set the logical thresholds:
 - a) Tap the "Thresholds" tab.
 - b) For each wire, set the threshold value. A typical value is 1.65 V.
 - c) If necessary, set the hysteresis value for the wires.
 - d) Optionally, tap on "Show threshold lines".

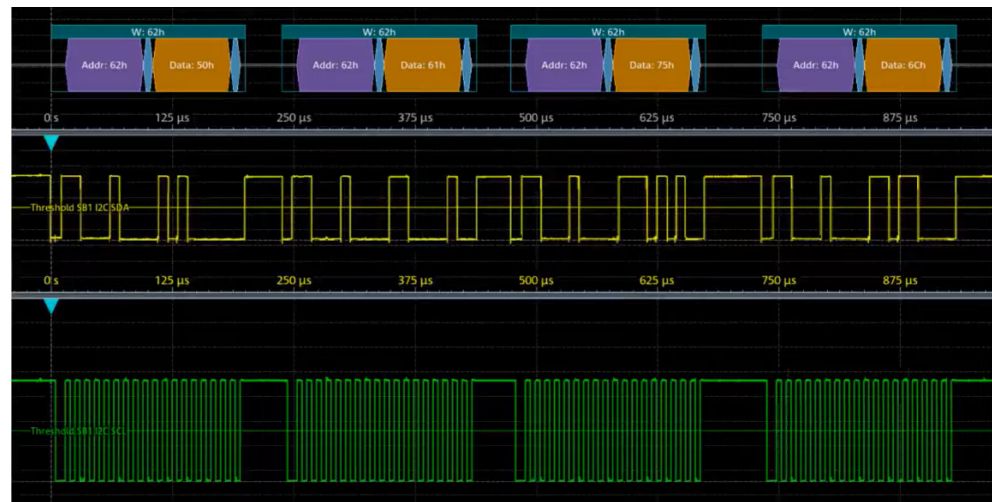

13.4.6.2 Triggering on I2C

Prerequisites: A bus is configured for the I2C signal to be analyzed. See [Chapter 13.4.6.1, "Configuring I2C signals"](#), on page 389.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. Define additional settings for more complex trigger types: "No Ack", "Address", "Data", "Address + Data".
 - a) Tap on "Set details".
 - b) Set the "Data" condition and "Value".
 - c) Set the "Position".

In the following example a decode for triggering on triggered on "Data" = 0x75, "Position" = 1.

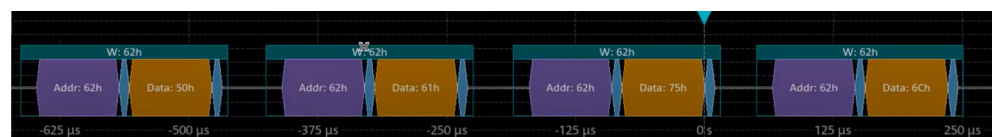


Figure 13-10: Trigger on Type=Data, Data=0x75 and Position=1

13.4.6.3 Exporting decode results

Once a decode has been completed, you can export the decode results of the

Prerequisites: A bus is configured for the I2C and decoded.

1. Tap on the "I2C" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

An export file is saved in the selected directory.

The I2C export files contain the following fields:

- A list of all decoded frames:
 - Index
 - Start
 - Stop
 - State
 - Address type
 - Address value
 - R/W bit
 - Bit rate
- The details frames include the following fields:
 - Index
 - Formatted data
 - ACK bit start
 - ACK bit

Example of I2C export file

```
Index,Start,Stop,State,Address type,Address value,R/W bit,Bit rate
1,-0.25,-0.24945,'OK','BIT10',188h,'WRIT',100000
2,-0.24944,-0.249,'OK','BIT10',1h,'READ',100000
3,-0.24899,-0.24866,'OK','BIT7',5Bh,'READ',100000
4,-0.24865,-0.24821,'OK','BIT7',4Ah,'WRIT',100000
5,-0.2482,-0.24765,'OK','BIT10',188h,'WRIT',100000
6,-0.24764,-0.2472,'OK','BIT10',1h,'READ',100000
```

Details frame 1

```
Index,Formatted data,Ack bit start,Ack bit
1,DEh,-0.2497,'ACK'
2,C2h,-0.24959,'ACK'
3,B3h,-0.24948,'ACK'
```

Details frame 2

```
Index,Formatted data,Ack bit start,Ack bit
1,E1h,-0.24925,'ACK'
```



```
2,C2h,-0.24914,'ACK'  
3,B3h,-0.24903,'ACK'
```

```
Details frame 3  
Index,Formatted data,Ack bit start,Ack bit  
1,E1h,-0.2488,'ACK'  
2,C2h,-0.24869,'ACK'
```

```
Details frame 4  
Index,Formatted data,Ack bit start,Ack bit  
1,F1h,-0.24846,'ACK'  
2,C4h,-0.24835,'ACK'  
3,B3h,-0.24824,'NACK'
```

```
Details frame 5  
Index,Formatted data,Ack bit start,Ack bit  
1,DEh,-0.2479,'ACK'  
2,C2h,-0.24779,'ACK'  
3,B3h,-0.24768,'ACK'
```

13.5 UART (option R&S MXO4-K510)

The Universal Asynchronous Receiver/Transmitter UART converts a word of data into serial data, and vice versa. It is the base of many serial protocols such as RS-232.

Required options and equipment

For performing UART decode measurements, you need the following equipment:

- MXO 4 with 2 available channels. The channels can be a combination of the following:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- Option R&S MXO4-K510
- Two probes

13.5.1 About the UART / RS-232 interface

The UART uses only one line, or two lines for transmitter and receiver.

Data transfer

The data is transmitted in words, also referred to as symbols or characters. Each word consists of a start bit, several data bits, an optional parity bit, and one or more stop bits. Several words can form a package, or frame. The end of a package is marked with a reserved word or by a pause between two words.



Figure 13-11: Bit order in a UART word (symbol)

- The start bit is a logic 0.
- The stop bits and the idle state are always logic 1.

The UART protocol has no clock for synchronization. The receiver synchronizes by the start and stop bits, and the bit rate that must be known to the receiver.

Trigger


The MXO 4 can trigger on specified parts of UART serial signals:

- Start bit
- Packet start
- Parity errors, and breaks
- Stop errors
- A serial pattern at any or a specified position

13.5.2 UART configuration

13.5.2.1 UART configuration settings

Access: [Apps] key > "Protocol" tab > "UART / RS232" > "Setup".

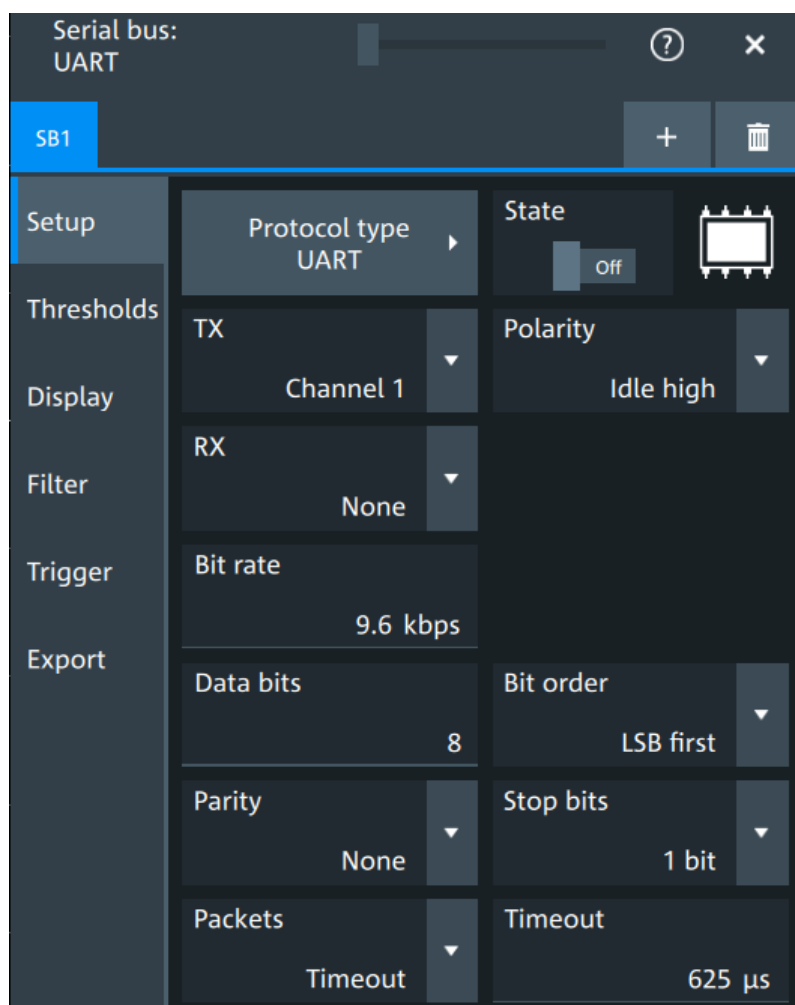**Protocol type**

Displays the protocol type to be decoded.

Remote command:

[SBUS<sb>:TYPE](#) on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Source: Tx, Rx

Select the input channels for the transmitter and receiver signals.

Do not combine a reference waveform with channel or math waveform because the time correlation of these waveforms might differ.

Remote command:

[SBUS<sb>:UART:TX:SOURce](#) on page 844

[SBUS<sb>:UART:RX:SOURce](#) on page 842

Bit order

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:

[SBUS<sb>:UART:BOrDer](#) on page 840

Polarity

Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Remote command:

[SBUS<sb>:UART:POLArity](#) on page 842

Bit rate

Sets the number of transmitted bits per second.

Remote command:

[SBUS<sb>:UART:BITRate](#) on page 840

Stop bits

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Remote command:

[SBUS<sb>:UART:SBIT](#) on page 843

Data bits

Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Remote command:

[SBUS<sb>:UART:SSIZe](#) on page 843

Parity

Defines the optional parity bit that is used for error detection.

"None"	No parity bit is used.
"Odd"	The parity bit is set to "1" if the number of data bits set to "1" is even.
"Even"	The parity bit is set to "1" if the number of data bits set to "1" is odd.
"Mark"	The parity bit is always a logic 1.
"Space"	The parity bit is always a logic 0.
"Don't care"	The parity is ignored.

Remote command:

[SBUS<sb>:UART:PARity](#) on page 841

Packets

Allows you to define packets of several words in the data stream.

"None"	Packets are not considered.
--------	-----------------------------

- "End word" Defines a pattern as end condition of a packet, for example, a reserved word like CR or LF. The bit pattern editor provides frequently used values in the "Predefined values" list below the pattern table. A new packet starts with the first start bit after the defined end pattern.
- "Timeout" Defines a timeout between a stop bit and the next start bit. Enter the minimum time that marks the end of a packet. A new packet starts with the first start bit after the timeout.

Remote command:


[SBUS<sb>:UART:PACKets](#) on page 841

[SBUS<sb>:UART:TOUT](#) on page 843

[SBUS<m>:UART:EWORd](#) on page 840

13.5.2.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "UART / RS232" > "Thresholds".

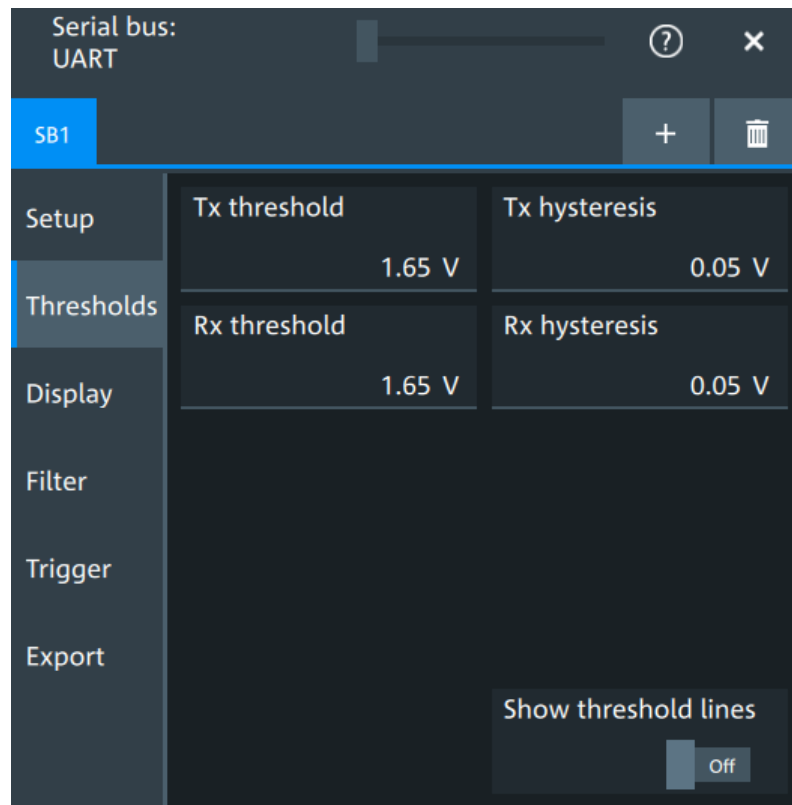

Threshold

Sets the threshold for the Tx and Rx channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:UART:RX:HYSTeresis](#) on page 842

[SBUS<sb>:UART:RX:THReshold](#) on page 842

[SBUS<sb>:UART:TX:HYSTeresis](#) on page 844

[SBUS<sb>:UART:TX:THReshold](#) on page 844

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:


[SBUS<m>:THReshold](#) on page 778

13.5.2.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

13.5.3 UART filter

Access:[Apps] key > "Protocol" tab > "UART / RS232" > "Filter" tab

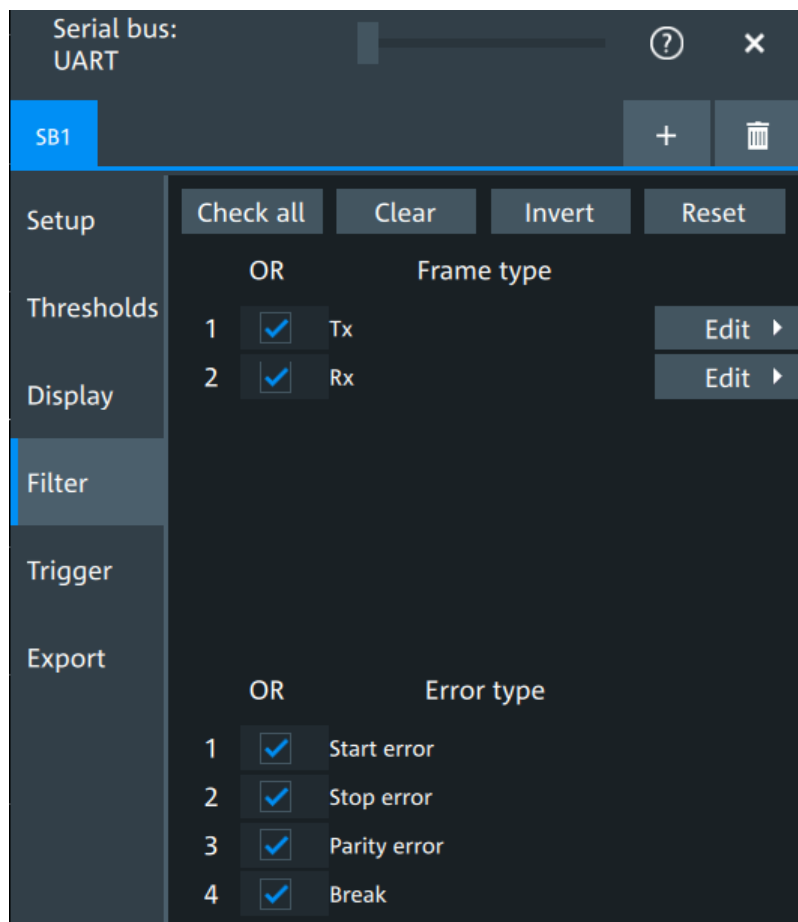

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Reset"	Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:UART:FILTer:CHKall](#) on page 848

[SBUS<sb>:UART:FILTer:CLR](#) on page 848

[SBUS<sb>:UART:FILTer:INVert](#) on page 848

[SBUS<sb>:UART:FILTer:RST](#) on page 848

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "Tx", "Rx".


Remote command:

[SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle](#) on page 851

[SBUS<sb>:UART:FILTer:FRENable](#) on page 851

Edit

Opens a dialog to define the details of the selected frame.

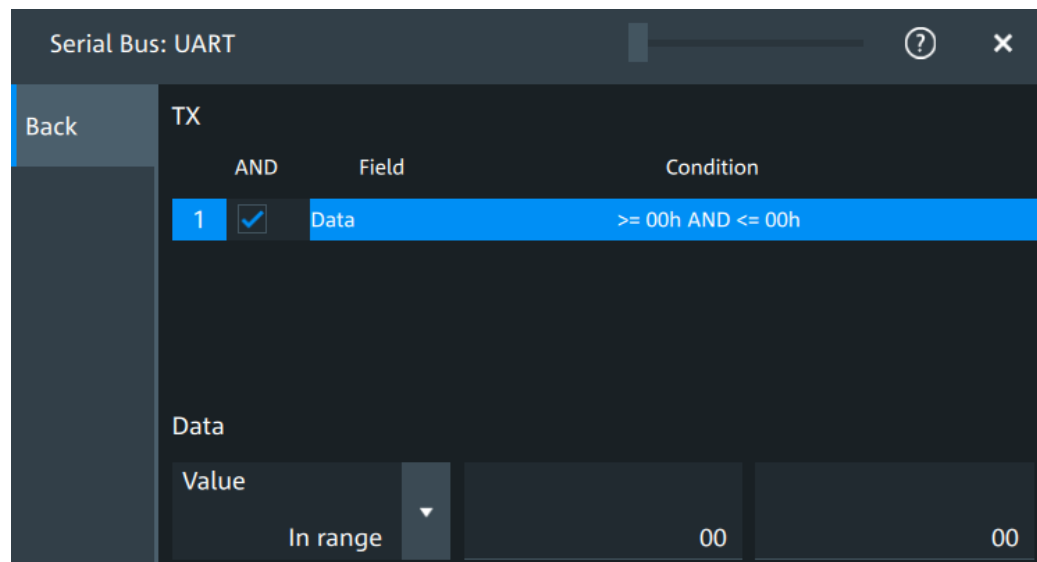

"Field"	<p>Enables the field type that you want to filter on for the selected frame. The available field is "Data".</p> <p>Remote command: SBUS<sb>:UART:FILTer:FIENable on page 852 SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABLE on page 852</p>
"Condition"	<p>Displays the value condition for the selected field.</p> <p>Remote command: SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 851</p>
"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command: SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 851 SBUS<sb>:UART:FILTer:DMAX on page 851 SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 850 SBUS<sb>:UART:FILTer:DMIN on page 850 SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 850 SBUS<sb>:UART:FILTer:DOPerator on page 850</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command: SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 849 SBUS<sb>:UART:FILTer:IMAX on page 849 SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 848 SBUS<sb>:UART:FILTer:IMIN on page 848 SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 849 SBUS<sb>:UART:FILTer:IOPerator on page 849</p>

Error type

Enables filtering on the selected error type.

Available error types are "Start error", "Stop error", "Parrity error", "Break".


Remote command:

[SBUS<sb>:UART:FILTer:ERRor<n>:ENABLE](#) on page 850

13.5.4 UART trigger

13.5.4.1 UART trigger settings

Access: [Apps] > "Protocol" > "UART" > "Shortcuts" > "Setup trigger"

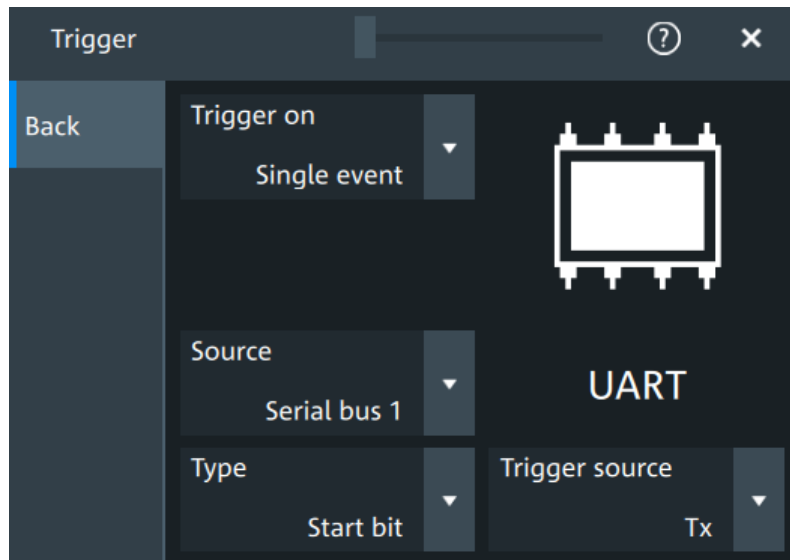

Type

Selects the trigger condition.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start bit"	Triggers on a start bit. The start bit is the first low bit after a stop bit.
"Packet start"	Triggers on the begin of a data packet.
"Data"	Trigger on a serial pattern at a defined position in the data packet. The pattern can include several subsequent symbols (data frames).
"Parity error"	Triggers on a parity error indicating a transmission error. This trigger type is only available if a parity is configured for the UART bus.
"Break condition"	Triggers if a start bit is not followed by a stop bit, the data line remains at logic 0 for longer than a UART word.
"Stop error"	Triggers if the stop bit is a logic 0.

Remote command:

[TRIGger:UART:TYPE](#) on page 847

Trigger source

Selects the transmitter or receiver line as trigger source.

Remote command:

[TRIGger:UART:SOURce](#) on page 846

Data conditions

Specify the data conditions if the trigger type is set to "Data".

Data ← Data conditions

Selects the operator for the "Data" pattern.

Remote command:

[TRIGger:UART:FCONdition](#) on page 846

Value ← Data conditions

Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Remote command:

[TRIGger:UART:DATA](#) on page 846

Position ← Data conditions

Sets the number of words before the first word of interest. These offset words are ignored.

The setting is available if packet detection is enabled in the protocol configuration.

Remote command:

[TRIGger:UART:DPOsition](#) on page 846

13.5.5 UART decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

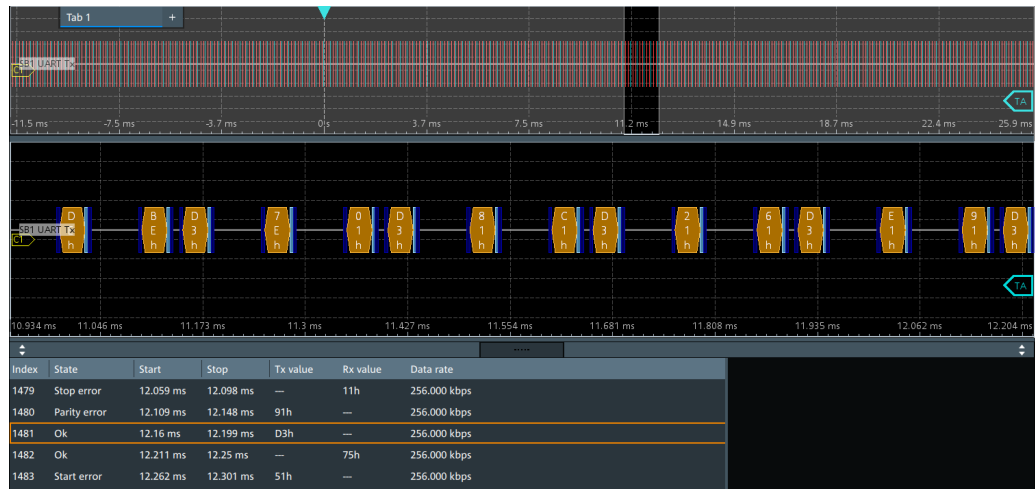


Figure 13-12: Decoded and binary UART signal

Blue = Start and stop bits if ok
 Red = Start error, stop error, parity error
 Cyan = Parity bit if ok
 Gold = Word ok
 Magenta = Word contains error

The "Decode results" table shows the detailed decoded data for each word.

Table 13-6: Content of the Decode results table

Column	Description
Index	Number of the decoded frames
State	Decoding state of the word. "Insufficient waveform length" indicates that the word is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of the word start (start bit)
Stop	Time of the word stop (stop bit)
Tx value	Value of the Tx word. The data format is selected below the table.
Rx value	Value of the Rx word. The data format is selected below the table.
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".

The "Export results" dialog opens.

For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.

2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.5.4, "Decode results"](#), on page 852.

13.5.6 Performing UART decoding

This chapter explains step by step how to configure and decode the UART bus.


For more information on decoding UART, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: [Decoding UART with MXO Series Oscilloscope](#).

13.5.6.1 Configuring UART signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [UART configuration](#).

1. Tap the "Bus" activator in the bottom right of the screen.

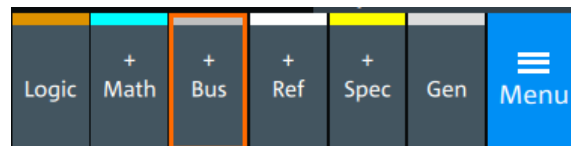

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "UART".
4. Tap on "State" to enable the decoding.

An SPI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "UART / RS232" dialog settings.

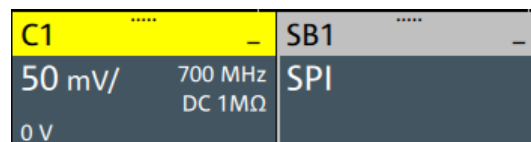


5. Select the correct channels for each active line: "Tx" and "Rx".
6. Set the "Bit rate".

7. Set the "Data bits". Typical value is 7 or 8.
8. Set the "Stop bits". Typical value is 1.
9. Set the "Parity" to "None", "Odd" or "Even".
10. Set "Bit order" to "MSB" or "LSB first".
11. Set the "Packets".
12. Set the "Timeout".
13. Set the "Polarity" to "Idle high" or "Idle low".
14. Check that the signals are on the screen.
If not try adjusting the vertical and horizontal settings.



15. Set the logical thresholds:
 - a) Tap the "Thresholds" tab.
 - b) For each line, set the threshold value. A typical value is 2.5 V.
 - c) If necessary, set the hysteresis value for the wires.
 - d) Optionally, tap on "Show threshold lines".

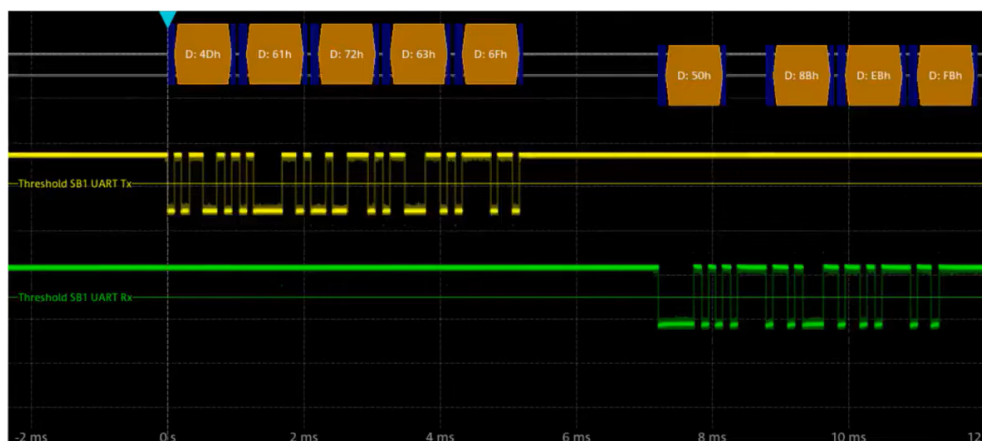

13.5.6.2 Triggering on UART

Prerequisites: A bus is configured for the UART signal to be analyzed. See [Configuring UART signals](#).

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type": "Start bit", "Packet start", "Parity error", "Break condition" and "Stop error".
5. Set "Trigger source" to "Tx" or "Rx".
6. Define additional settings for more complex trigger types ("Data"):
 - a) Tap on "Set details".
 - b) Set the "Data" condition and "Value".
 - c) Set the "Position".

In the following example a decode for triggering on TX triggered on "Data"= 0x72 and "Position"= 3.



Figure 13-13: Trigger on Type= Tx, Data =0x72 and Position=3

13.5.6.3 Exporting decode results

Once a decode has been completed, you can export the decode results of the

Prerequisites: A bus is configured for the UART and decoded.

1. Tap on the "UART / RS232" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

An export file is saved in the selected directory.

The UART export files contain the following fields:

- Index
- Start
- Stop
- Source
- State
- TX value
- RX value
- Bit rate

Example UART export file

```
Index,Start,Stop,Source,State,Tx value,Rx value,Bit rate
1,-0.0629961,-0.0629531,'TX','OK',33h,---,256000
2,-0.0629453,-0.0629023,'RX','OK',---,F5h,256000
3,-0.0628945,-0.0628516,'TX','STER',C8h,---,256000
4,-0.0628438,-0.0628008,'RX','SPER',---,28h,256000
5,-0.062793,-0.06275,'TX','PRER',A8h,---,256000
```

13.6 CAN (option R&S MXO4-K520)

CAN is the Controller Area Network, a bus system designed by Bosch for use within automotive network architecture, for example, for brake, power train and engine management. Today, it is also used in many other systems, for example, in industrial machines, aerospace, subsea, merchant marine.

With the MXO 4 you can decode frames from some of the most common CAN protocols standards:

- Classical CAN (CAN 2.0): with the standard frame format (11-bit identifier) and the extended frame format (29-bit identifier).
- CAN FD: CAN with flexible data rate. It is an extension of the classical CAN protocol and allows for increased data rates and payloads. It is backward compatible with CAN 2.0.

- CAN XL: an advanced version of the CAN protocol designed to handle higher data rates and larger payloads compared to classical CAN and CAN FD.

Required options and equipment


For performing CAN decode measurements, you need the following equipment:

- MXO 4 with 1 available channel. The channel can be:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- One probe
- Option R&S MXO4-K520

13.6.1 CAN configuration

13.6.1.1 CAN configuration settings

Access: [Apps] key > "Protocol" tab > "CAN" > "Setup".

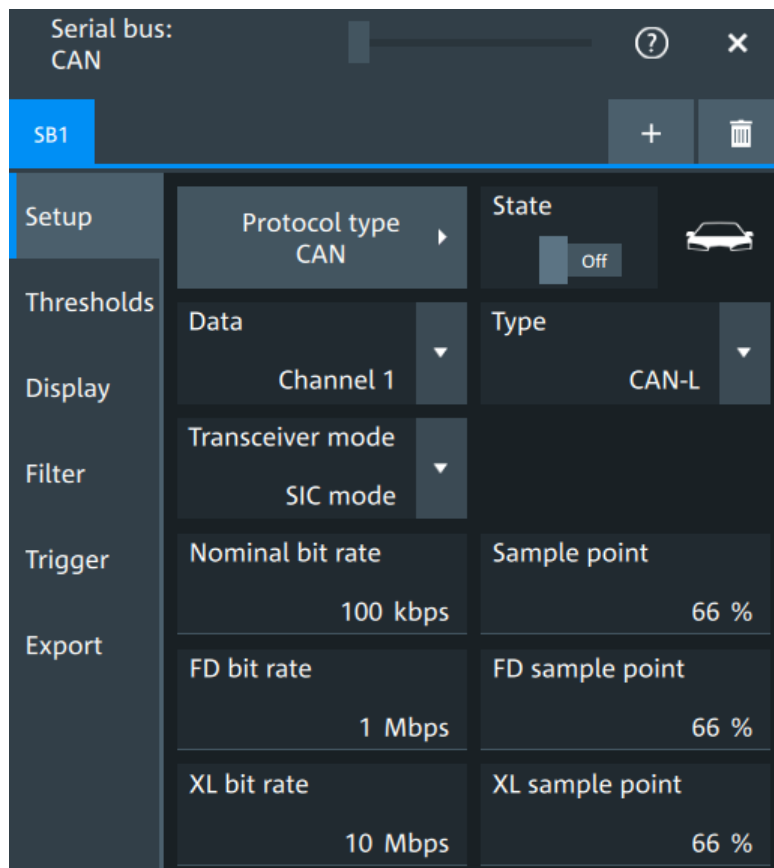



Make sure that the tab of the correct serial bus is selected.

Protocol type

Displays the protocol type to be decoded.

Remote command:

[SBUS<sb>:TYPE](#) on page 776

State

Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Data

Sets the source of the selected data line.

Remote command:

[SBUS<sb>:CAN:SOURce](#) on page 857

Type

Selects the CAN-High or CAN-Low line. CAN uses both lines for differential signal transmission.

If you measure with a differential probe, connect the probe to both CAN-H and CAN-L lines, and select the data "Type" = *CAN-H*.

If you use a single-ended probe, connect the probe to either CAN_L or CAN_H, and select the data type accordingly.

Remote command:

[SBUS<sb>:CAN:TYPE](#) on page 856

Transceiver mode

Selects the transceiver mode for the CAN decoding.

"SIC mode" Signal improvement capability (SIC) mode. The possible bit rate is up to 8 Mbit.

"FAST mode" Fast mode. The possible bit rate is up to 20 Mbit.

Remote command:

[SBUS<sb>:CAN:TRCVmode](#) on page 859

Nominal bit rate

Sets the number of transmitted bits per second.

Remote command:

[SBUS<sb>:CAN:BITRate](#) on page 856

Sample point

Sets the position of the sample point within the bit in percent of the nominal bit time.

Remote command:

[SBUS<sb>:CAN:SAMPlepoint](#) on page 856

FD bit rate

Sets the number of transmitted bits per second for the CAN FD frame.

Remote command:

[SBUS<sb>:CAN:FDATa:DBITrate](#) on page 857

FD sample point

Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN FD frame.

Remote command:

[SBUS<sb>:CAN:FDATa:SAMPlepoint](#) on page 857

XL bit rate

Sets the number of transmitted bits per second for the CAN XL frame.

Remote command:

[SBUS<sb>:CAN:XDATa:DBITrate](#) on page 858

XL sample point


Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Remote command:

[SBUS<sb>:CAN:XDATa:SAMPlepoint](#) on page 859

13.6.1.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "CAN" > "Thresholds".

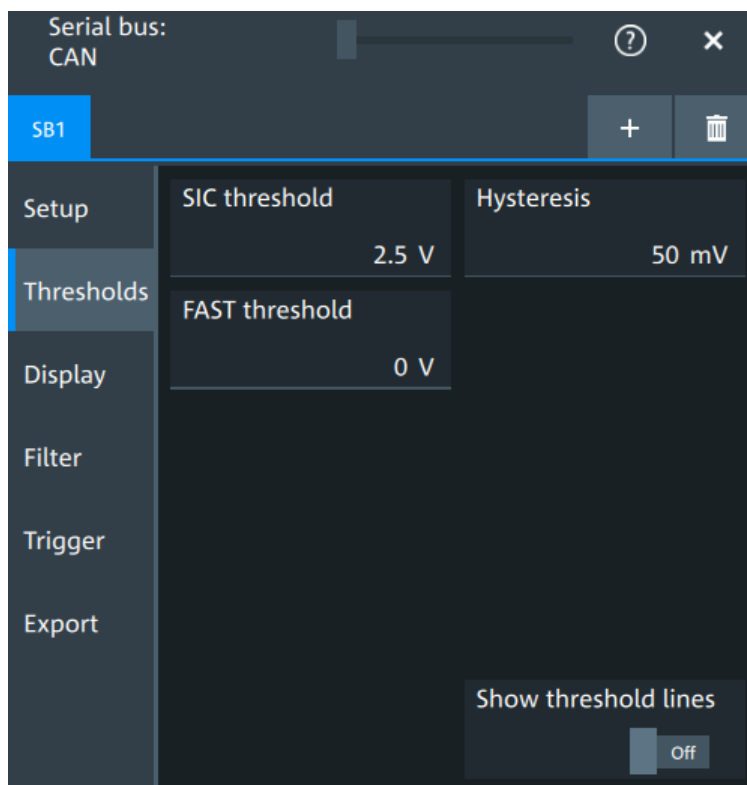

Threshold

Sets the threshold for the SIC and Fast channels. Enter the value directly in the fields. Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:CAN:FAST:HYSTeresis](#) on page 858

[SBUS<sb>:CAN:FAST:THReshold](#) on page 858

[SBUS<sb>:CAN:SIC:HYSTeresis](#) on page 857

[SBUS<sb>:CAN:SIC:THReshold](#) on page 858

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.


The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

[SBUS<m>:THReshold](#) on page 778

13.6.1.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

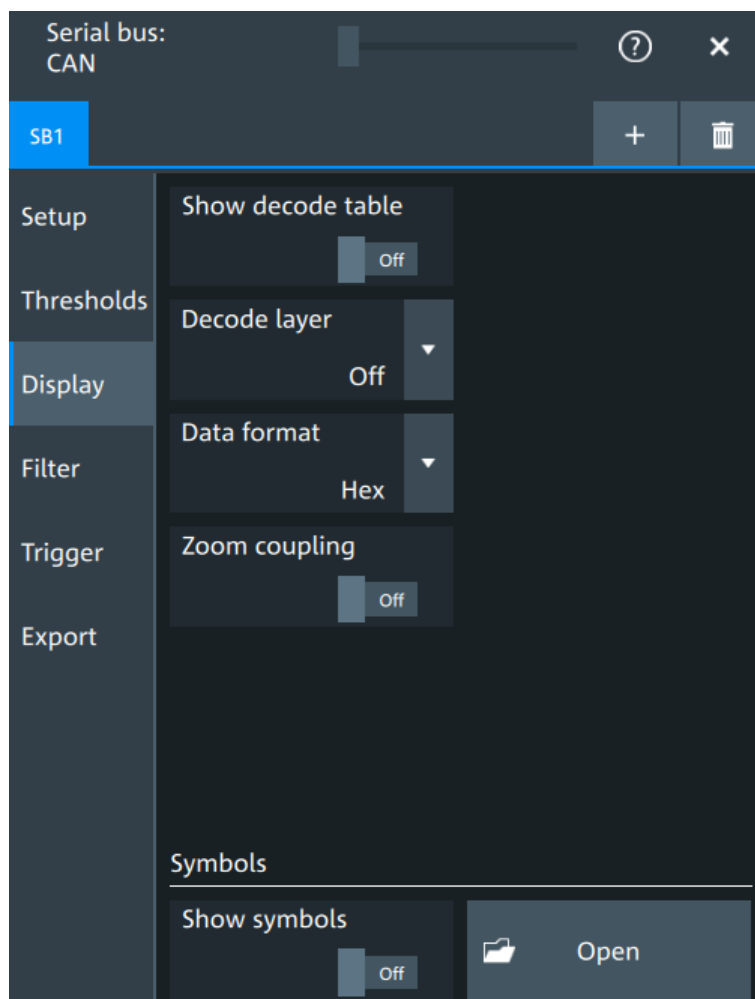

Decode layer

Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Show symbols

You can load symbol lists, and activate its usage for decoding. As a result, an additional "Symbol" column appears in the "Decode results" table, containing the symbolic label.

Symbol lists for CAN are available in DBC and CSV format, see [CAN symbols](#).

Remote command:

`SBUS<sb>:CAN:SYMBOLs` on page 859

`SBUS<sb>:CAN:NEWLlist` on page 860

13.6.1.4 CAN symbols

For the CAN protocol, you can upload symbol lists containing IDs and a symbolic name for each node. You can load a file in one of the supported formats: DBC and CSV.

DBC files for CAN and CAN FD

Industry standard DBC files contain more information than CSV files and translate the abstract decode results to human language. For each frame, the frame ID and the symbolic name of the ID are given. The frames are also called messages in CAN. The data of a CAN message can consist of several "signals". The DBC file provides the label, unit, start bit, length and other indicators for each signal. For state-encoded signals, the meaning of the states is given.

In the following demo example, the message "EngineData" has the decimal ID 2,166,573,756 and consists of 8 data bytes. These 8 bytes are defined as 6 signals. The first one, "PetrolLevel", starts at bit #24, has a length of 8 bit, and the unit is liter. The signal "IdleRunning" is state-encoded. It has only one bit. The binary value 0 means "Running", and the binary value 1 means "Idle".

Example: CAN DBC file section

```
BO_ 2166573756 EngineData: 8 Engine
  SG_ PetrolLevel : 24|8@1+ (1,0) [0|255] "l" ...
  SG_ EngPower : 48|16@1+ (0.01,0) [0|350] "kW" ...
  SG_ EngForce : 32|10@1+ (1,0) [0|1000] "N" ...
  SG_ IdleRunning : 23|1@1+ (1,0) [0|1] "" ...
  SG_ EngTemp : 16|7@1+ (2,-50) [-50|150] "degC" ....
  SG_ EngSpeed : 0|13@1+ (1,0) [0|8000] "rpm" ...
  ....
  VAL_ 2166573756 IdleRunning 0 "Running" 1 "Idle" ;
```

CSV files for CAN / CAN FD

Symbol list files are protocol-specific. A CSV label file for CAN protocols contains three values for each identifier:

- Identifier type, 11-bit or 29-bit long
- Identifier value
- Symbolic name of the identifier, specifying its function in the bus network.

Example: CAN CSV file

```
# -----
@FILE_VERSION = 1.00
@PROTOCOL_NAME = can
# -----
# Labels for CAN protocol
# Column order: Identifier type, Identifier value, Label
# -----
11,064h,Diag_Response
11,1E5h,EngineData
11,0A2h,Ignition_Info
```


```

11,1BCh,TP_Console
11,333h,ABSdata
11,313h,Door_Left
11,314h,Door_Right
29,01A54321h,Throttle
29,13A00FA2h,LightState
29,0630ABCDh,Engine_Status
29,03B1C002h,Airbag_Status
29,01234ABCh,NM_Gateway
# -----

```

13.6.2 CAN filter

Access: [Apps] key > "Protocol" tab > "CAN" > "Filter" tab

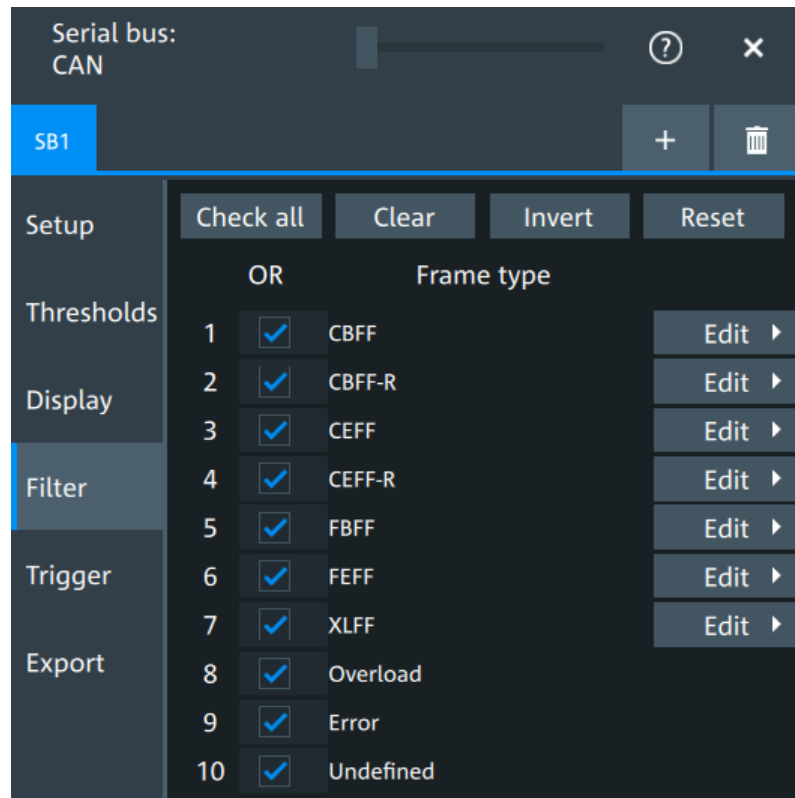

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

- "Check all" Enables the filter for all available frames and error types.
- "Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:CAN:FILTer:CHKall](#) on page 870

[SBUS<sb>:CAN:FILTer:CLR](#) on page 870

[SBUS<sb>:CAN:FILTer:INVert](#) on page 871

[SBUS<sb>:CAN:FILTer:RST](#) on page 871

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "CBFF", "CBFF-R", "CEFF", "CEFF-R", "FBFF", "FEFF", "XLFF", "Overload" and "Error".


Remote command:

[SBUS<sb>:CAN:FILTer:FREnable](#) on page 873

[SBUS<sb>:CAN:FILTer:FRAME<fr>:ENABLE](#) on page 873

Edit

Opens a dialog to define the details of the selected frame.

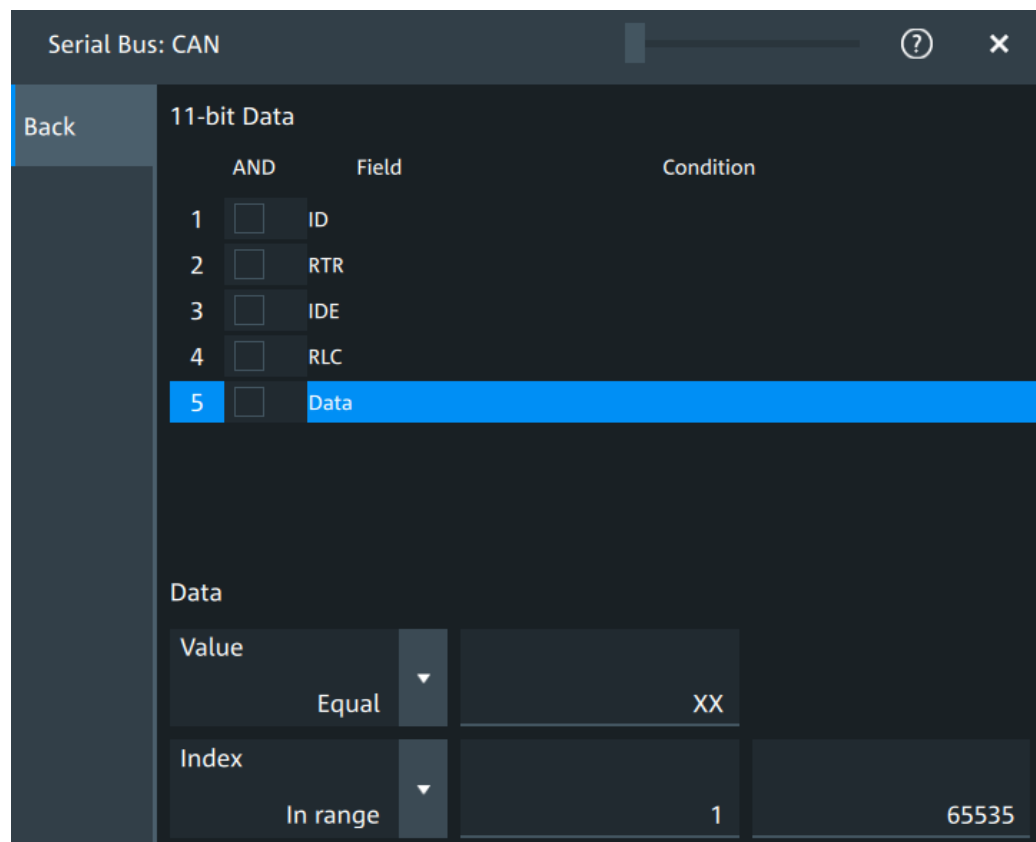

"Field"	<p>Enables the field type that you want to filter on for the selected frame. The available fields are "ID", "RTR", "ITE", "RLC" and "Data".</p> <p>Remote command: SBUS<sb>:CAN:FILTer:FIENable on page 873 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABLE on page 873</p>
"Condition"	<p>Displays the value condition for the selected field.</p> <p>Remote command: SBUS<sb>:CAN:FILTer:BIT on page 871 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 871</p>
"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command: SBUS<sb>:CAN:FILTer:DMAX on page 872 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 872 SBUS<sb>:CAN:FILTer:DMIN on page 872 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 872 SBUS<sb>:CAN:FILTer:DOPerator on page 872 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 872</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command: SBUS<sb>:CAN:FILTer:IMAX on page 874 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 874 SBUS<sb>:CAN:FILTer:IMIN on page 874 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 874 SBUS<sb>:CAN:FILTer:IOPerator on page 875 SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 875</p>

Error type

Enables filtering on the selected error type.


Remote command:

[SBUS<sb>:CAN:FILTer:ERENable](#) on page 873

[SBUS<sb>:CAN:FILTer:ERRor<n>:ENABLE](#) on page 873

13.6.3 CAN trigger settings

Access: [Apps] > "Protocol" > "CAN" > "Shortcuts" > "Setup trigger"

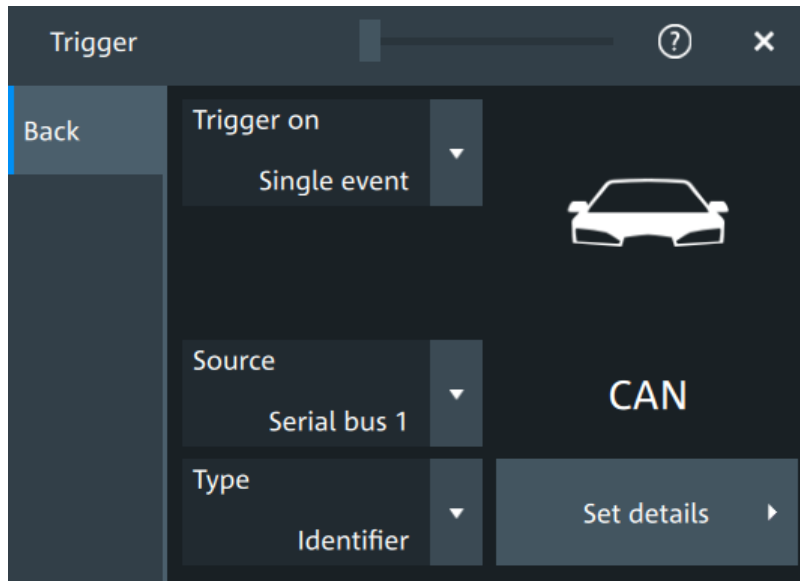


Type


Selects the trigger type for CAN analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.


- "Start of frame" Triggers on the first edge of the dominant SOF bit (synchronization bit).
- "End of frame" Triggers on the end of frame.
- "Frame type" Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

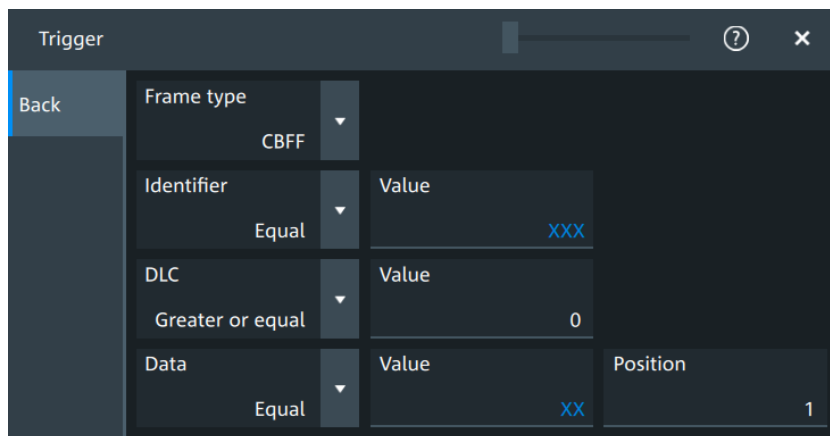


"Identifier" Sets the trigger to a specific message identifier or an identifier range.

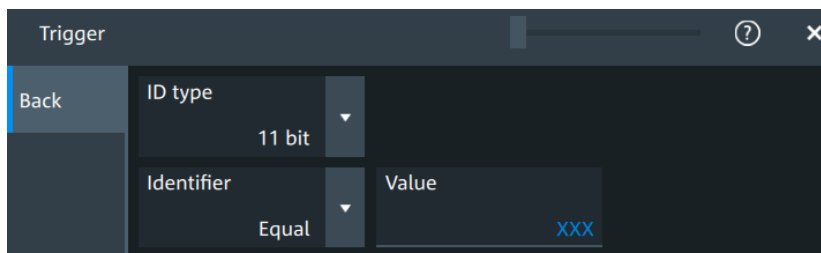

"Identifier + Data" Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

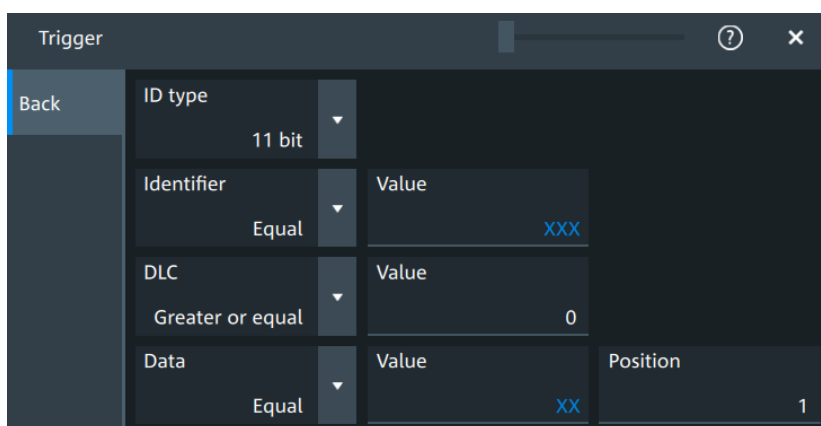

"Error condition" Identifies various errors in the frame.

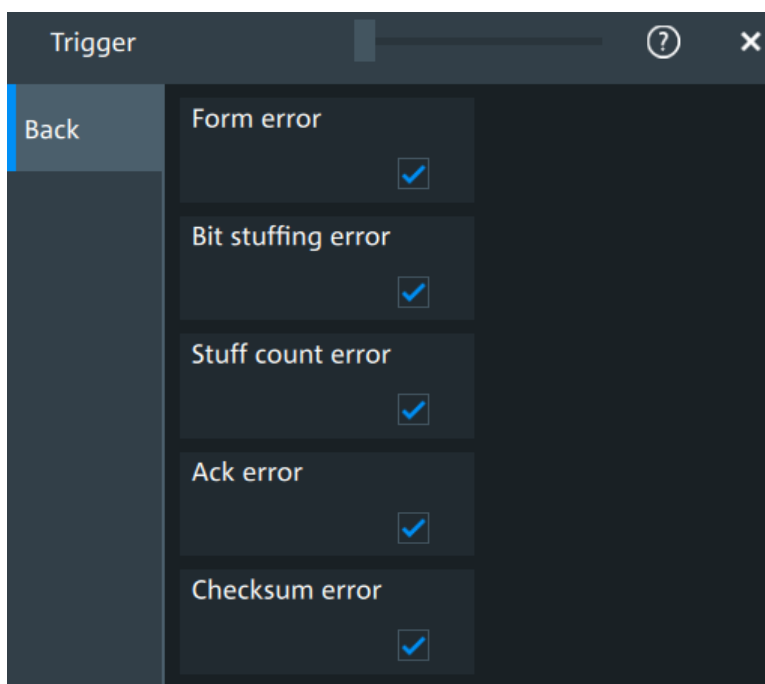

Remote command:

[TRIGger:CAN:TYPE](#) on page 861

Frame type

CAN has different frame types which can be used as trigger condition. Depending on the selected frame, you can specify further parameters.

"CBFF" Classical base frame format data: supports a length of 11 bit for the CAN identifier. The data frame is the only frame for actual data transmission.

Parameter	Value
Frame type	CBFF
Identifier	In range
From	000
To	7FF
DLC	Greater or equal
Value	0
Data	Equal
Value	00
Position	1

Figure 13-14: Settings for CBFF and CEFF frames

"CBFF-R"

Classical base frame format remote: supports a length of 11 bit for the CAN identifier.

The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

Parameter	Value
Frame type	CBFF-R
Identifier	In range
From	000
To	7FF
DLC	Greater or equal
Value	0

Figure 13-15: Settings for CBFF-R and CEFF-R frames

"CEFF"

Classical extended frame format data: supports a length of 29 bit for the CAN identifier. The data frame is the only frame for actual data transmission.

- "CEFF-R" Classical extended frame format remote: supports a length of 29 bit for the CAN identifier.
The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.
- "FBFF" FD base frame format: supports a length of 11 bit for the CAN identifier.

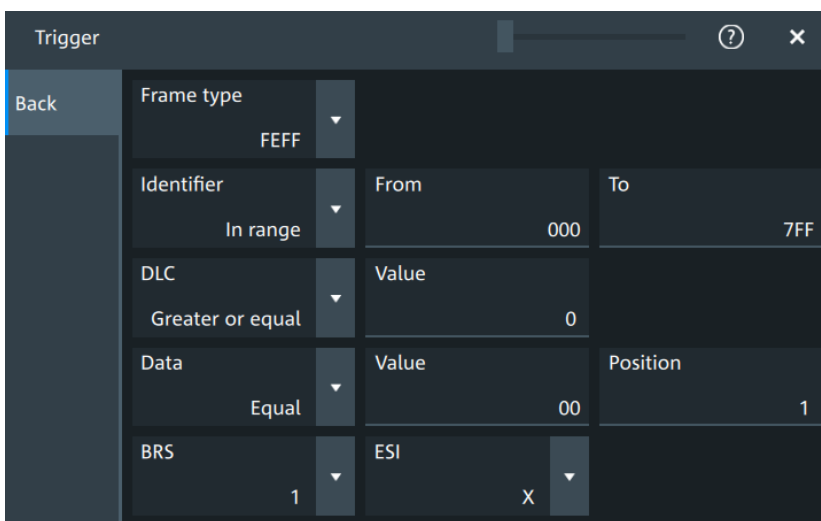


Figure 13-16: Settings for FBFF and FEFF frames

- "FEFF" FD extended frame format: supports a length of 29 bit for the CAN identifier.

"XLFF" XL frame format: supports a length of 29 bit for the CAN identifier.

Parameter	Condition	Value	Position
Frame type	XLFF		
Identifier	In range	From: 000	To: 7FF
DLC	Greater or equal	Value: 0	
Data	Equal	Value: 00	Position: 1
SDT	In range	From: 00	To: FF
VCID	In range	From: 00	To: FF
AF	In range	From: 0000 0000	To: FFFF FFFF
SEC		0	

"Error" When a node recognizes an error, it cancels transmission by sending an error frame.

The ID type is irrelevant for error frames.

"Overload" When a node needs a delay between data and/or remote frames, it sends an overload frame.

The ID type is irrelevant for overload frames.

Remote command:

[TRIGger:CAN:FTYPE](#) on page 863

Identifier

Specifies the identifier pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:

[TRIGger:CAN:ICONdition](#) on page 864

[TRIGger:CAN:IMAX](#) on page 864

[TRIGger:CAN:IMIN](#) on page 864

DLC

The data length code (DLC) defines the number of data bytes to be found. You can set a fixed value for the DLC or define a minimum value.

Remote command:

[TRIGger:CAN:DLC](#) on page 863

[TRIGger:CAN:DLCCondition](#) on page 863

Data pattern

Specifies the data pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value" Specifies the value or sets the start value of a range.

Remote command:

[TRIGger:CAN:DCONdition](#) on page 862

[TRIGger:CAN:DMIN](#) on page 862

ID type

Selects the length of the identifier:

"11 bit" Identifier length of the CAN base frame format. The instrument triggers on the sample point of the identifier extension flag (IDE) bit.

"29 bit" Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the remote transmission request (RTR) bit.

"Any" The ID type and ID pattern are not relevant for the trigger condition. If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type. If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

Remote command:

[TRIGger:CAN:ITYPE](#) on page 865

BRS, ESI

If "Frame type" = "FBFF"/"FEFF", you can trigger on specific bits.

"BRS" The bit rate switch bit. Value 1 means that the bit rate switches from the arbitration rate to the faster data rate.

"ESI" The error state indicator bit. Set "X" if the bit is not relevant.

Remote command:

[TRIGger:CAN:FDATa:BRS](#) on page 866

[TRIGger:CAN:FDATa:ESI](#) on page 867

SDT

Specifies a value or a range for the service data unit type.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:

[TRIGger:CAN:XDATA:SDT:CONDition](#) on page 868

[TRIGger:CAN:XDATA:SDT:MAX](#) on page 868

[TRIGger:CAN:XDATA:SDT:MIN](#) on page 868

VCID

Specifies a value or a range for the virtual CAN network ID (VCID).

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:

[TRIGger:CAN:XDATA:VCID:CONDition](#) on page 869

[TRIGger:CAN:XDATA:VCID:MAX](#) on page 869

[TRIGger:CAN:XDATA:VCID:MIN](#) on page 869

AF

Specifies a value or a range for the CAN XL acceptance field (AF).

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:

[TRIGger:CAN:XDATA:AF:CONDition](#) on page 867

[TRIGger:CAN:XDATA:AF:MAX](#) on page 867

[TRIGger:CAN:XDATA:AF:MIN](#) on page 868

SEC


Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Remote command:

[TRIGger:CAN:XDATA:SEC](#) on page 869

Error conditions

If a CAN detects an error, it transmits an error flag at the next bit. The MXO 4 detects errors in the message and triggers on these errors even if no CAN node sends an error flag.

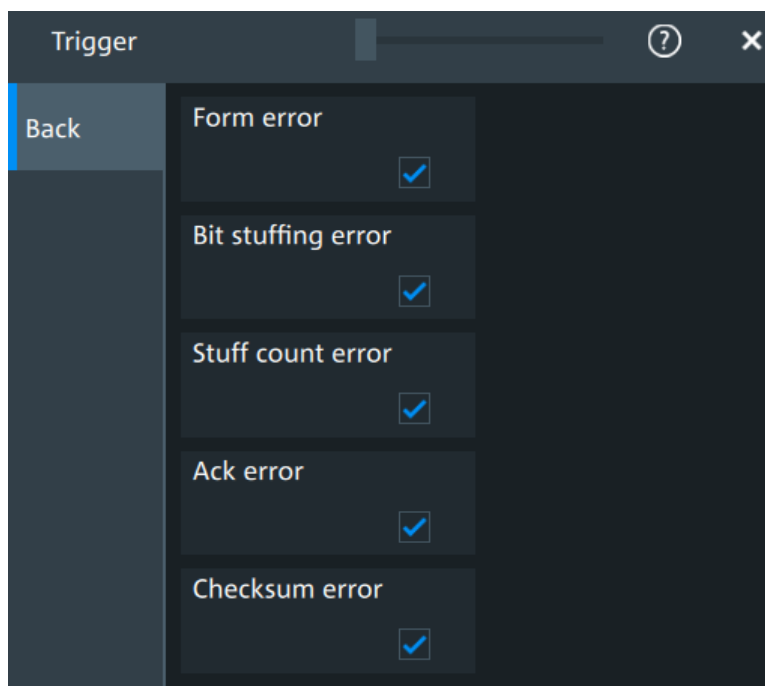

"Form error"	A form error occurs when a fixed-form bit field contains one or more illegal bits.
"Bit stuffing error"	The frame segments Start of Frame, Arbitration Field, Control Field, Data Field and CRC Sequence are coded by the bit stuffing method. The transmitter automatically inserts a complementary bit into the bitstream when it detects five consecutive bits of identical value in the bitstream to be transmitted. A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.
"Stuff count error"	A stuff bit error occurs, if more than five consecutive bits of the same level occur on the bus.
"Ack error"	An acknowledgment error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.
"Checksum error"	CAN uses the Cyclic Redundancy Check, which is a complex checksum calculation method. The transmitter calculates the CRC and sends the result in the CRC sequence. The receiver calculates the CRC in the same way. A CRC error occurs when the calculated result differs from the received value in the CRC sequence.

Remote command:

[TRIGger:CAN:FORMerror](#) on page 865

[TRIGger:CAN:BITSterror](#) on page 866

[TRIGger:CAN:FDATa:SCERror](#) on page 865

[TRIGger:CAN:ACKerror](#) on page 866

[TRIGger:CAN:CRCErrror](#) on page 866

13.6.4 CAN decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.



Green = Identifier
 Bright Green = DLC
 Orange = Data
 Blue = CRC (checksum)
 Purple = End of frame
 Red = Error occurred

The "Decode results" box shows the detailed decoded data for each word.

Table 13-7: Content of the Decode results table

Column	Description
"Index"	Number of the decoded frames
"State"	Overall state of the frame. "Insufficient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
"Start"	Time of frame start

Column	Description
"Type"	Frame type
"Symbol"	Symbolic name defined in the symbol list
"Identifier"	Identifier value, hexadecimal value
"DLC"	Data length code, coded number of data bytes
"Values"	Value of the data frame. Remote frames do not transmit data, therefore "- -" is displayed
"Nominal bit rate"	Number of bits per second
"Data bit rate"	Number of data bits per second

Table 13-8: Content of the Detail results table

Column	Description
"Field"	Field type. Values depend on the decoded frame "Type", see Table 13-10 .
"Value"	Value of the corresponding field

Table 13-9: Content of the Data results table

Column	Description
"Index"	Number of the decoded fields
"State"	Overall state of the frame
"Value"	Value of the field

Depending on the decoded type of frame, the following fields are available:

Table 13-10: Decoded fields depending on the frame type

Frame	Fields
CBFF/CBFF-R	CRC: cyclic redundancy checks
CEFF/CEFF-R	CRC: cyclic redundancy checks
FBFF/FEFF	BRS: bit rate switch
	ESI: error state indicator
	SBC: stuff bit count
	CRC: cyclic redundancy checks
XLFF	SBC: stuff bit count
	SDT: service data unit
	SEC: simple extended content
	VCID: virtual CAN network ID
	AF: acceptance field
	PCRC: preamble cyclic redundant check
	FCRC: frame CRC

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".

The "Export results" dialog opens.

For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.

2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.6.4, "Decode results"](#), on page 875.

13.6.5 Performing CAN decoding


This chapter explains step by step how to configure and decode the CAN bus.

13.6.5.1 Configuring CAN signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.6.1, "CAN configuration"](#), on page 408.

1. Tap the "Bus" activator in the bottom right of the screen.

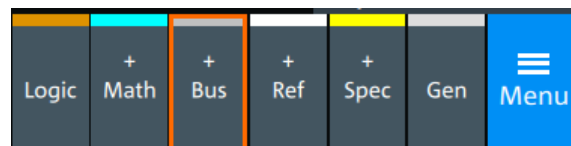

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: CAN.
4. Tap on "State" to enable the decoding.

A CAN shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "CAN" dialog settings.

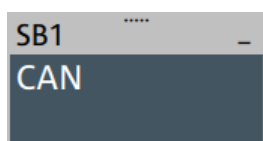


5. Tap on "Data" and select the correct channel.
6. Set the CAN "Type", depending on whether you use single-ended or differential probe:
 - a) For single-ended probes, connect the probe to either CAN-L or CAN-H. Set the "Type" accordingly.
 - b) For differential probes, connect the probe to both CAN-H and CAN-L lines. Set "Type" = "CAN-H".
7. Set the "Transceiver mode", according to your signal: "SIC mode" or "FAST mode".
8. Set the bit rate for
9. Check that the signals are on the screen.
If not try adjusting the vertical and horizontal settings.
10. Set the logical thresholds:
 - a) Tap "Threshold setup". The threshold dialog opens.
 - b) For each wire, set the threshold value.
 - c) If necessary, set the hysteresis value for the wires.
 - d) Optionally, tap on "Show threshold lines".

13.6.5.2 Triggering on CAN


Prerequisites: A bus is configured for the CAN signal to be analyzed. See [Chapter 13.6.5.1, "Configuring CAN signals"](#), on page 427.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. For "Type" = "Frame type":

- a) Tap on "Set details".

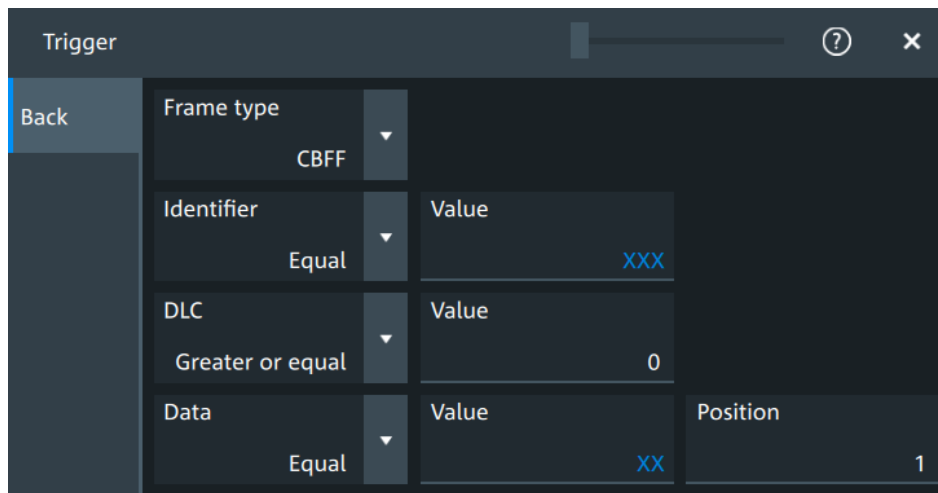

- b) Select the "Frame type". According to the selected type, different settings are available.
 - c) Set the "Identifier" or an identifier range.
 - d) Set the "DLC" or a DLC range.
 - e) Set the "Data" or a data range.
 - f) Set the "ESI" value.
 - g) Set the "BRS" value.
6. For "Type" = "Identifier":
- a) Tap on "Set details".

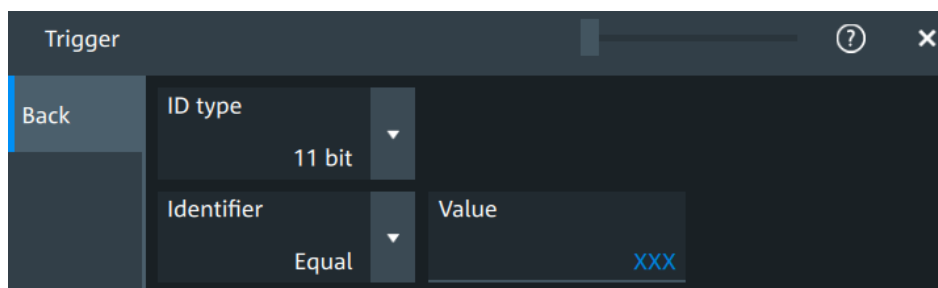

- b) Select the "ID type".
 - c) Set the "Identifier" or an identifier range.
7. For "Type" = "Identifier + Data":

- a) Tap on "Set details".

Parameter	Operator	Value	Position
ID type		11 bit	
Identifier	Equal	XXX	
DLC	Greater or equal	0	
Data	Equal	XX	1

- b) Select the "ID type".
 c) Set the "Identifier" or an identifier range.
 d) Set the "DLC" or a DLC range.
 e) Set the "Data" or a data range.
8. For "Type" = "Error condition":
 a) Tap on "Set details".

Error Condition	Status
Form error	<input checked="" type="checkbox"/>
Bit stuffing error	<input checked="" type="checkbox"/>
Stuff count error	<input checked="" type="checkbox"/>
Ack error	<input checked="" type="checkbox"/>
Checksum error	<input checked="" type="checkbox"/>

- b) Select one or more error conditions that you want to trigger on:
- "Form error"
 - "Bit stuffing error"
 - "Stuff count error"
 - "Ack error"
 - "Checksum error"

13.6.5.3 Exporting decode results

Once a decode has been completed, you can export the decode results of the

Prerequisites: A bus is configured for the CAN and decoded.

1. Tap on the "CAN" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

An export file is saved in the selected directory.

The CAN export files contains the following fields:

- A list of all decoded frames:
 - Index
 - Start
 - Stop
 - State
 - Type
 - ID value
 - DLC
 - Nominal bit rate
 - Data bit rate
 - CRC
 - BRS
 - ESI
 - SBC
 - SDT
 - SEC
 - VCID
 - AF
 - PCRC
- The details frames include the following fields:

- Index
- Data

Example of CAN export file

```

Index,Start,Stop,State,Type,ID value,DLC,Nominal bit rate,Data bit rate,CRC,BRS,ESI,SBC,SDT,
SEC,VCID,AF,PCRC
1,-0.19,-0.188,'OK','XLFF',064h,7FFh,1000000,1000000,0000AABBh,-,-,6h,FFh,1b,AAh,0000ABCDh,0
2,-0.188311,-0.188243,'OK','CBFF',064h,3h,1000000,1000000,35CEh,-,-,-,-,-,-,-,-,-
3,-0.188239,-0.188195,'OK','CBFR',064h,3h,1000000,1000000,5AA0h,-,-,-,-,-,-,-,-,-
4,-0.188191,-0.188157,'OK','FBFF',064h,2h,1000000,5000000,035FFh,0b,1b,Eh,-,-,-,-,-,-,-
5,-0.188153,-0.188075,'OK','CEFF',01401B26h,2h,1000000,1000000,32A0h,-,-,-,-,-,-,-,-,-
6,-0.188071,-0.188008,'OK','CEFR',01900064h,3h,1000000,1000000,32AAh,-,-,-,-,-,-,-,-,-
7,-0.188004,-0.187951,'OK','FEFF',01900064h,3h,1000000,5000000,032AAh,1b,0b,Fh,-,-,-,-,-,-,-
8,-0.187947,-0.187899,'OK','XLFF',064h,046h,1000000,1000000,00032AAh,-,-,6h,03h,0b,0Ah,0000
9,-0.187895,-0.187881,'INC','ERR',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-,-
10,-0.187877,-0.187863,'UNKN','OVER',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-,-

```

Details frame 2

```

Index,Data
1,D0h
2,E7h
3,20h

```

Details frame 4

```

Index,Data
1,D1h
2,E8h

```

Details frame 5

```

Index,Data
1,D2h
2,E9h

```

Details frame 7

```

Index,Data
1,D3h
2,EAh
3,21h

```

13.7 LIN (option R&S MXO4-K520)

The Local Interconnect Network (LIN) is a simple, low-cost bus system used within automotive network architectures. LIN is usually a subnetwork of a CAN bus. The primary purpose of LIN is the integration of uncritical sensors and actuators with low-bandwidth requirements. Common applications in a motor vehicle are the control of doors, windows, wing mirrors, and wipers.

Required options and equipment


For performing LIN decode measurements, you need the following equipment:

- MXO 4 with 1 available channel. The channel can be:
 - Analog channels (C1-C4)
 - Logic channels (D0-D15) (requires option R&S MXO4-B1)
- One probe
- Option R&S MXO4-K520

13.7.1 LIN configuration

13.7.1.1 LIN configuration settings

Access: [Apps] key > "Protocol" tab > "LIN" > "Setup".

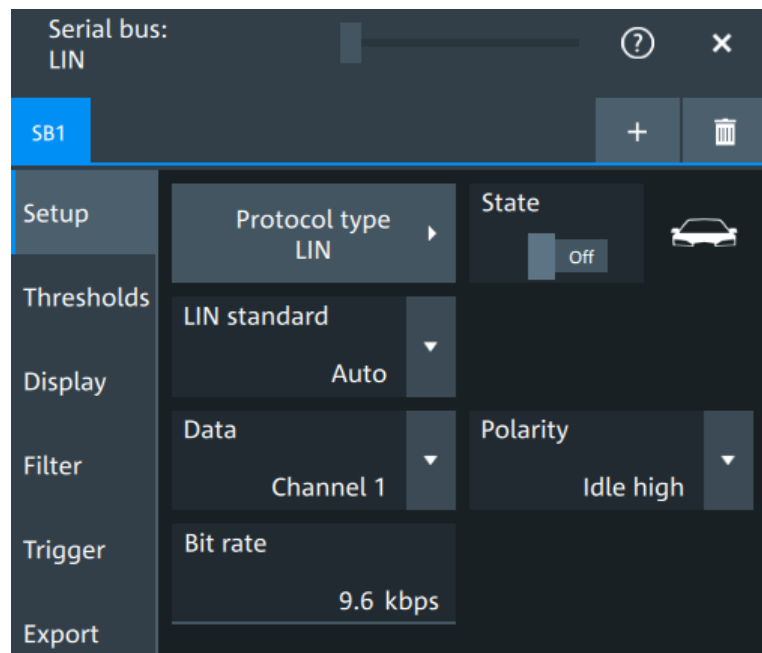

LIN standard

Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

The most common version is LIN v.2.x. For mixed networks, or if the standard is unknown, set the LIN standard to "Auto".

Remote command:

[SBUS<sb>:LIN:STANdard](#) on page 890

Data

Sets the source waveform of the data line.

Remote command:

[SBUS<sb>:LIN:DATA:SOURce](#) on page 889

Polarity

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic high.

Remote command:

[SBUS<sb>:LIN:POLarity](#) on page 890

Bit rate

Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.


If the [LIN standard](#) is "J2602", the bit rate is 10.417 kbit/s and cannot be changed.

Remote command:

[SBUS<sb>:LIN:BITRate](#) on page 889

13.7.1.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "LIN" > "Thresholds".

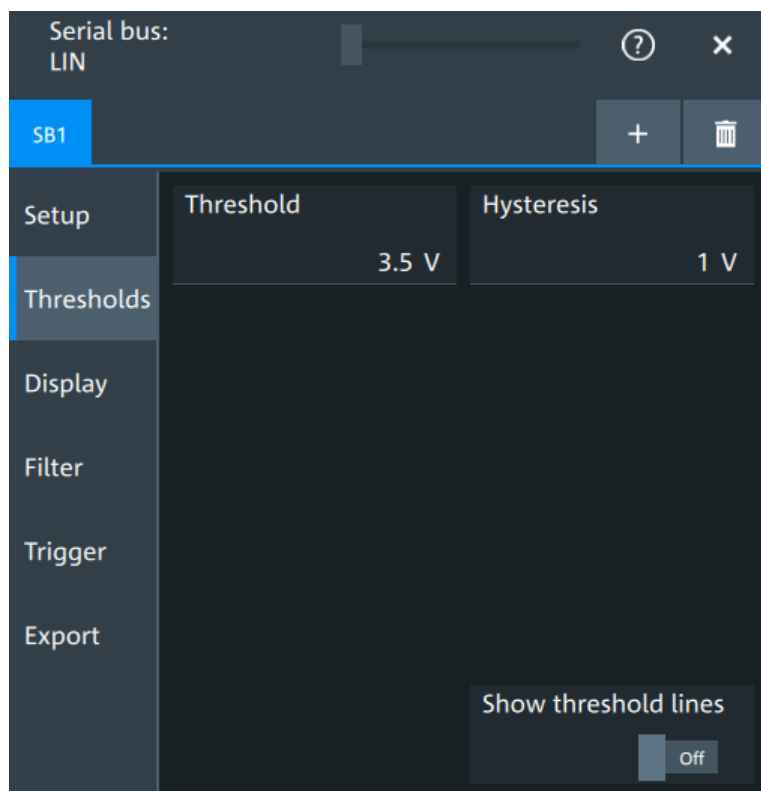

Threshold

Sets the threshold for the data channel. Enter the value directly in the fields.

In addition to the threshold, you can also set a hysteresis.

Remote command:

`SBUS<sb>:LIN:DATA:THReshold` on page 889

`SBUS<sb>:LIN:DATA:HYSTeresis` on page 889

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:


`SBUS<m>:THReshold` on page 778

13.7.1.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

13.7.2 LIN trigger settings

Access: [Apps] > "Protocol" > "LIN" > "Shortcuts" > "Setup trigger".

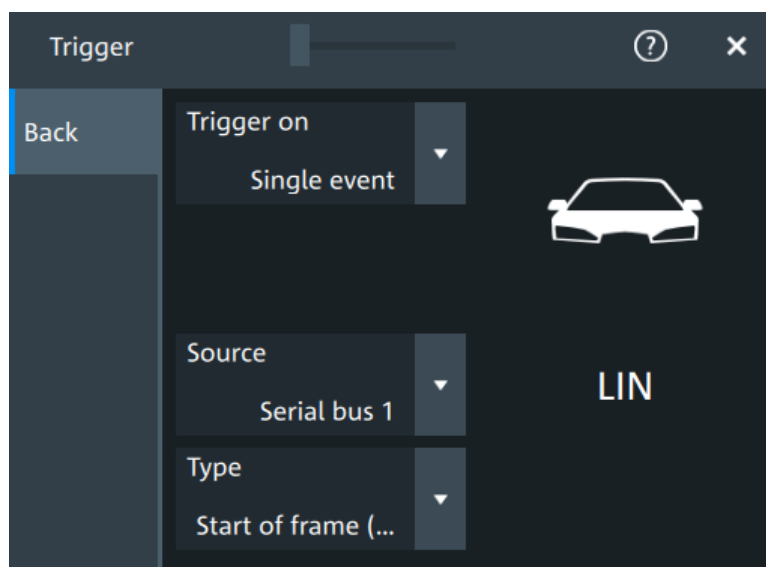

Type

Selects the trigger type for LIN analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame Triggers on the stop bit of the sync field.
(Sync)"

"Identifier" Sets the trigger to one specific identifier or an identifier range. Enter only the 6-bit identifier without parity bits, not the protected identifier. Description of trigger type specific settings: [Identifier setup: Condition, Frame ID min, Frame ID max](#).

Trigger			
Back	Identifier In range	Frame ID min 00	Frame ID max 00

"Identifier + Data" Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

Trigger			
Back	Identifier In range	Frame ID min 00	Frame ID max 00
	Data Greater than	Pattern 00	Position 1

The identifier conditions are the same as for the "Identifier" trigger type, see [Identifier setup: Condition, Frame ID min, Frame ID max](#). Data conditions are set with [Data setup: Condition, Pattern, Position](#).

"Wake-up frame" Triggers after a wake-up frame.

"Error condition" Identifies various errors in the frame, see [Error conditions](#).

Remote command:
[TRIGger:LIN:TYPE](#) on page 891

Identifier setup: Condition, Frame ID min, Frame ID max

The identifier setup consists of the condition and one or two identifier pattern.

Condition Sets the comparison condition to a specific value or a range.

"Frame ID min" Defines the bit pattern of the identifier. Enter only the 6-bit identifier without parity bits, not the protected identifier.

"Frame ID max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
[TRIGger:LIN:IMIN](#) on page 893
[TRIGger:LIN:IMAX](#) on page 893
[TRIGger:LIN:ICONdition](#) on page 893

Data setup: Condition, Pattern, Position

The data setup consists of the transfer direction, the number of bytes, the condition, and one data pattern.

Condition	Sets the operator to define a specific data pattern ("Equal" or "Not equal") or a range smaller or bigger than a specific pattern.
"Pattern"	Defines the data pattern.
"Position"	Sets the number of data events that are ignored, before trigger condition check of the data starts.

Remote command:


[TRIGger:LIN:DCONdition](#) on page 892

[TRIGger:LIN:DMIN](#) on page 892

[TRIGger:LIN:DPOSition](#) on page 892

Error conditions

Triggers if one or more of the following errors occur.

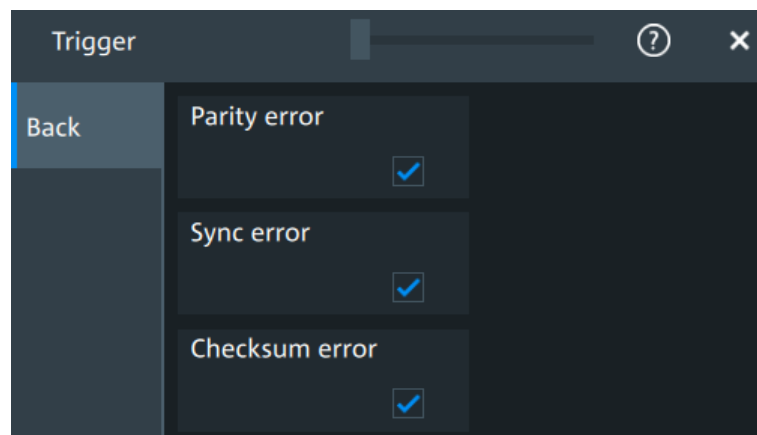

"Parity error"	Parity bits are the bits 6 and 7 of the identifier. They verify the correct transmission of the identifier.
"Sync error"	Synchronization error.
"Checksum error"	The checksum verifies the correct data transmission. It is the last byte of the frame response. The checksum includes not only the data but also the protected identifier (PID).

Remote command:


[TRIGger:LIN:IPERror](#) on page 893

[TRIGger:LIN:SYERror](#) on page 894

[TRIGger:LIN:CHKSError](#) on page 892

13.7.3 LIN filter

Access: [Apps] key > "Protocol" tab > "LIN" > "Filter" tab

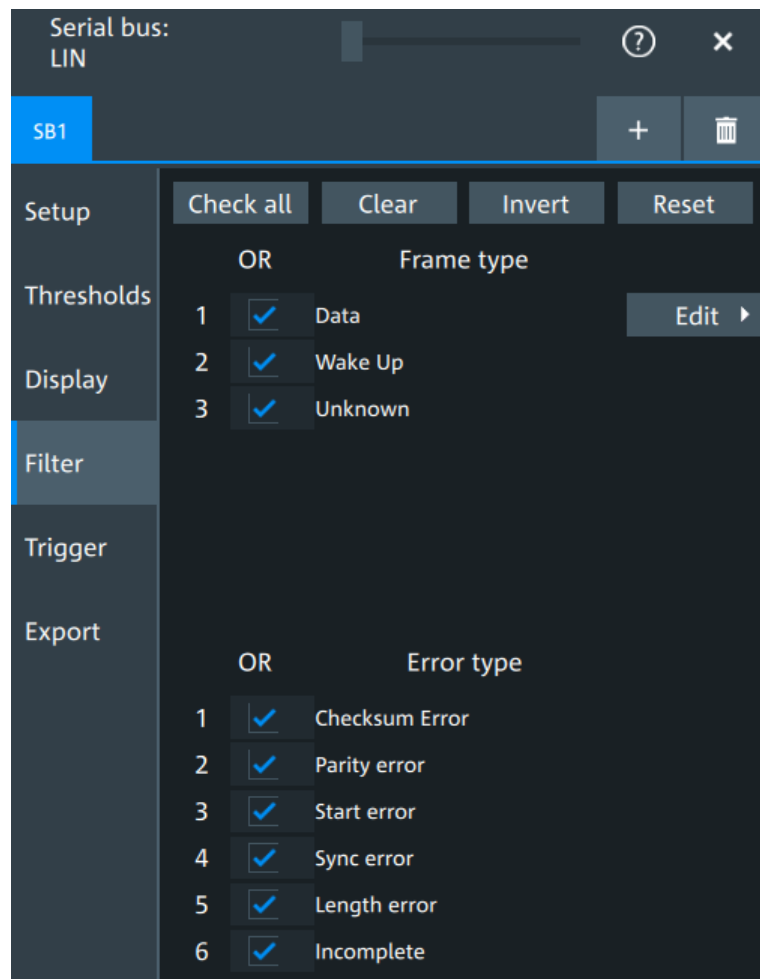

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

- "Check all" Enables the filter for all available frames and error types.
- "Clear" Disables the filter for all available frames and error types.
- "Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
- "Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:LIN:FILTer:CHKall](#) on page 895

[SBUS<sb>:LIN:FILTer:CLR](#) on page 895

[SBUS<sb>:LIN:FILTer:INVert](#) on page 895

[SBUS<sb>:LIN:FILTer:RST](#) on page 895

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Wake" and "Unknown".

Remote command:


[SBUS<sb>:LIN:FILTER:FRENable](#) on page 898

[SBUS<sb>:LIN:FILTER:FRAME<fr>:ENABLE](#) on page 898

Edit

Opens a dialog to define the details of the selected frame.

"Field" Enables the field type that you want to filter on for the selected frame.

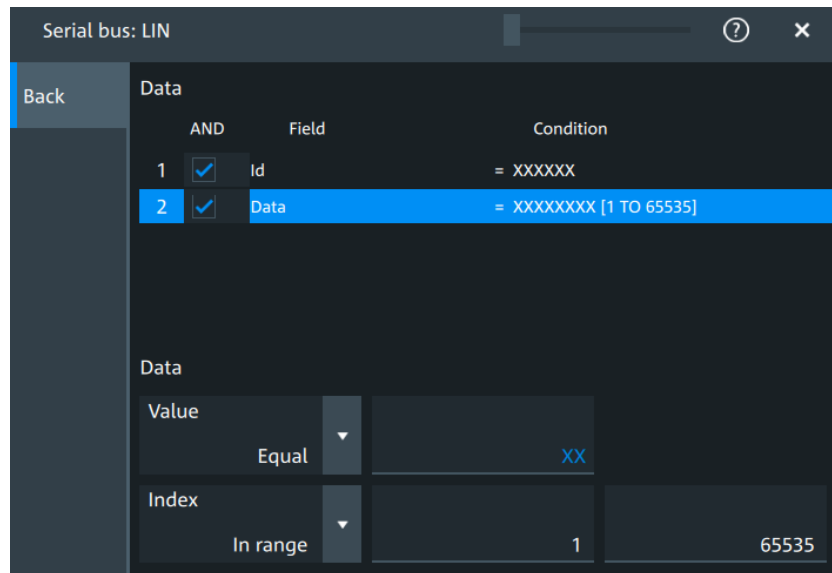

The available fields are "Id" and "Data".

Remote command:

[SBUS<sb>:LIN:FILTER:FIENable](#) on page 897

[SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:ENABLE](#)
on page 897

"Condition" Displays the value condition for the selected field.

Remote command:

[SBUS<sb>:LIN:FILTER:BIT](#) on page 896

[SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:BIT](#) on page 896

"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command:</p> <p>SBUS<sb>:LIN:FILTer:DMAX on page 896</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 896</p> <p>SBUS<sb>:LIN:FILTer:DMIN on page 896</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 896</p> <p>SBUS<sb>:LIN:FILTer:DOPerator on page 897</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 897</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command:</p> <p>SBUS<sb>:LIN:FILTer:IMAX on page 898</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 898</p> <p>SBUS<sb>:LIN:FILTer:IMIN on page 898</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 898</p> <p>SBUS<sb>:LIN:FILTer:IOPerator on page 899</p> <p>SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 899</p>

Error type

Enables filtering on the selected error type.

The available errors are "Checksum error", "Parity error", "Start error", "Sync error", "Length error" and "Incomplete".

Remote command:

[SBUS<sb>:LIN:FILTer:ERENable](#) on page 897

[SBUS<sb>:LIN:FILTer:ERRor<n>:ENABLE](#) on page 897

13.7.4 LIN decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

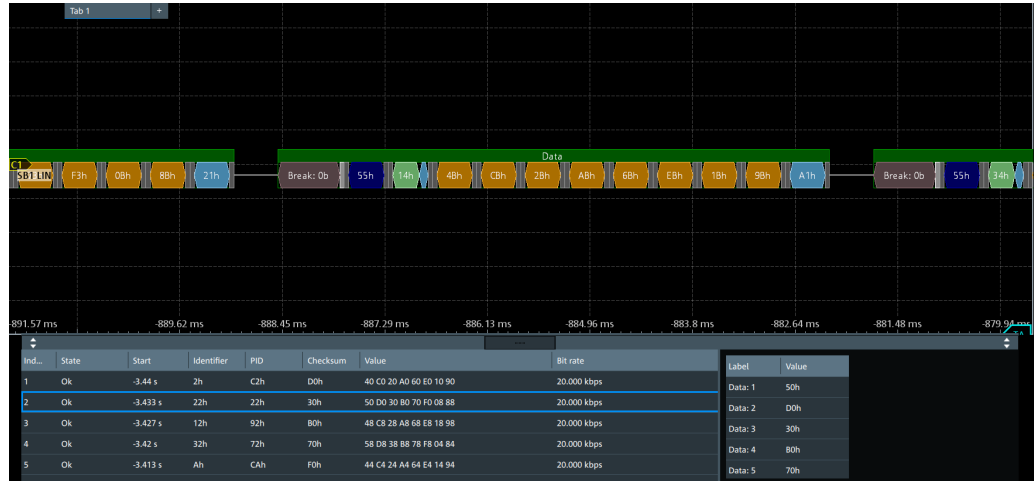


Table 13-11: Content of the Decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Symbol	Symbolic label of the frame
Identifier	Identifier value
PID	Protected identifier
Checksum	Checksum value
Values	Value of the data bytes. The data format is selected below the table.
Bit rate	Value of the bit rate

Table 13-12: Content of the Details frame table

Column	Description
Label	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.7, "LIN \(option R&S MXO4-K520\)"](#), on page 888.

13.7.5 Performing LIN decoding


This chapter explains step by step how to configure and decode the LIN bus.

13.7.5.1 Configuring LIN signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.

For details on configuration settings, see [Chapter 13.7.1, "LIN configuration"](#), on page 433.

1. Tap the "Bus" activator in the bottom right of the screen.

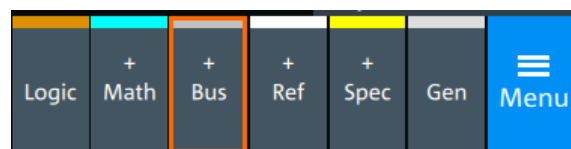

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: LIN.
4. Tap on "State" to enable the decoding.

An SPI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "LIN" dialog settings.



5. Select the "LIN standard".
6. Select the correct channel for "Data".

7. Set the "Bit rate".
8. Check that the signals are on the screen.
If not try adjusting the vertical and horizontal settings.
9. Set the logical thresholds:
 - a) Tap "Threshold setup". The threshold dialog opens.
 - b) For each wire, set the threshold value. A typical value is 3.5 V.
 - c) If necessary, set the hysteresis value.
 - d) Optionally, tap on "Show threshold lines".

13.7.5.2 Triggering on LIN

Prerequisites: A bus is configured for the LIN signal to be analyzed. See [Chapter 13.7.5.1, "Configuring LIN signals"](#), on page 442.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. Define additional settings for more complex trigger types: "Identifier", "Identifier +Data".
 - a) Tap on "Set details".
 - b) Set the "Identifier" condition or an identifier range.
 - c) Set the "Data" condition or a data range.

13.7.5.3 Exporting decode results

Once a decode has been completed, you can export the decode results of the

Prerequisites: A bus is configured for the LIN and decoded.

1. Tap on the "LIN" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

An export file is saved in the selected directory.

The LIN export file contains the following fields:

- A list of all decoded frames:
 - Index
 - Start

- Stop
- State
- Identifier
- PID
- Checksum
- Bit rate
- The details frames include the following fields:
 - Index
 - State
 - Value

Example of LIN export file

```
Index,Start,Stop,State,Identifier,PID,Checksum,Bit rate
1,-3.44,-3.43375,'OK',02h,C2h,D0h,20000
2,-3.43325,-3.427,'OK',22h,22h,30h,20000
3,-3.4265,-3.42025,'OK',12h,92h,B0h,20000
4,-3.41975,-3.4135,'OK',32h,72h,70h,20000
5,-3.413,-3.40675,'OK',0Ah,CAh,F0h,20000
```

```
Details frame 1
Index,State,Value
1,'OK',40h
2,'OK',C0h
3,'OK',20h
4,'OK',A0h
5,'OK',60h
6,'OK',E0h
7,'OK',10h
8,'OK',90h
```

```
Details frame 2
Index,State,Value
1,'OK',50h
2,'OK',D0h
3,'OK',30h
4,'OK',B0h
5,'OK',70h
6,'OK',F0h
7,'OK',08h
8,'OK',88h
```


13.8 SPMI (option R&S MXO4-K550)

The System Power Management Interface (SPMI) is a high-speed, low-latency, bi-directional, two-wire serial bus.

13.8.1 SPMI configuration

13.8.1.1 SPMI configuration settings

Access: [Apps] key > "Protocol" tab > "SPMI" > "Setup".

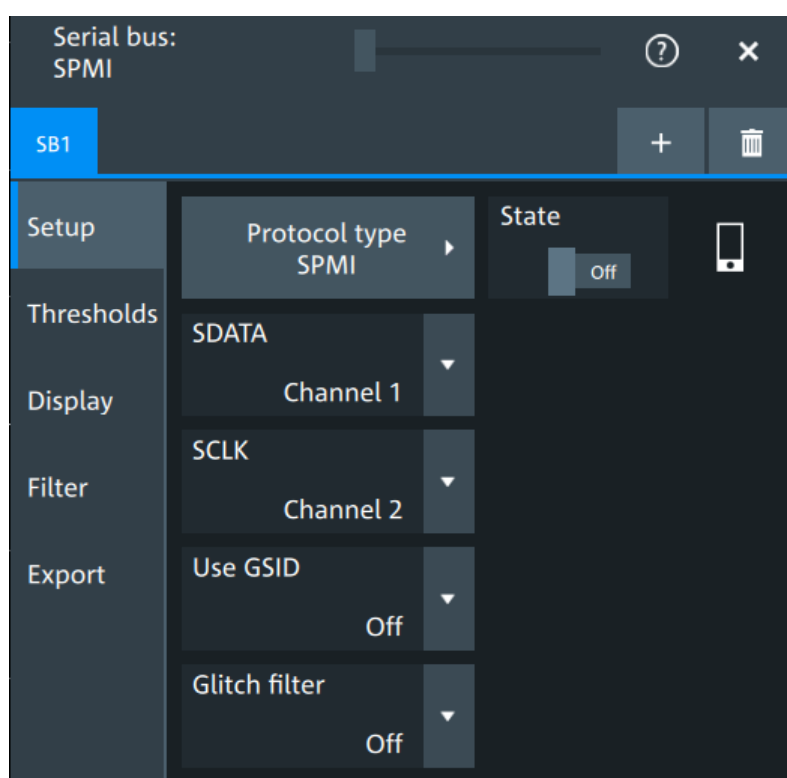

Make sure that the tab of the correct serial bus is selected.

Protocol type

Displays the protocol type to be decoded.

Remote command:

[SBUS<sb>:TYPE](#) on page 776

SDATA

Sets the source of the data line.

Remote command:

[SBUS<sb>:SPMI:SDATa:SOURce](#) on page 908

SCLK

Sets the source of the clock line.

Remote command:

[SBUS<sb>:SPMI:SCLK:SOURce](#) on page 907

Use GSID, GSID (hex)

Enables the use of the group sub ID (GSID). You can then enter a value for the "GSID (hex)".

Remote command:

[SBUS<sb>:SPMI:GSIDenable](#) on page 906

[SBUS<sb>:SPMI:GIDValue](#) on page 905

Glitch filter, Glitch width

A glitch filter can help to filter out short duration voltage spikes/ glitches that can occur on the communication line.

If "Glitch filter" > "On" you can set the "Glitch width". Any signal transitions with a duration smaller than this value will be considered a glitch and filtered out.


Remote command:

[SBUS<sb>:SPMI:GTCHenable](#) on page 906

[SBUS<sb>:SPMI:GTWDith](#) on page 906

13.8.1.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "SPMI" > "Thresholds".

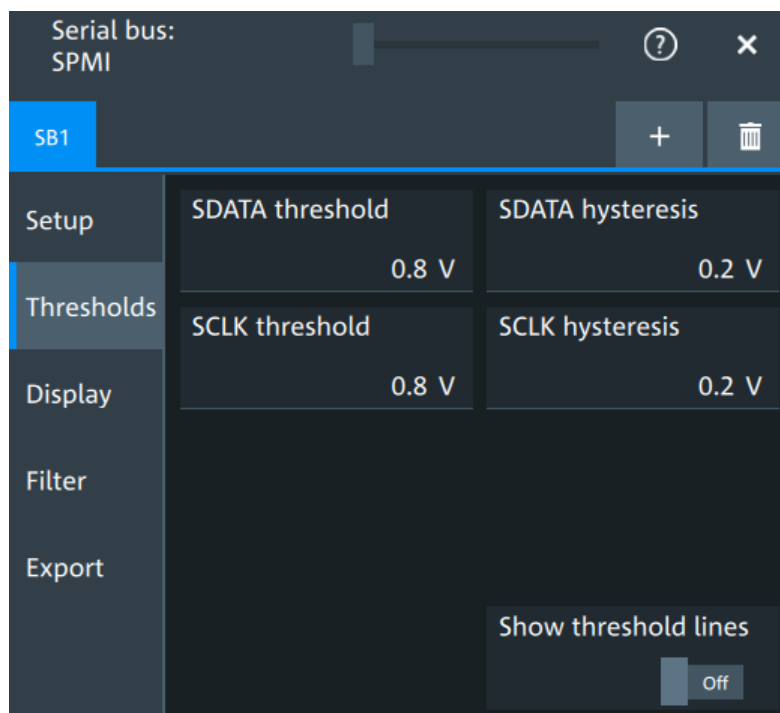

Threshold

Sets the threshold for the data/clock channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:SPMI:SCLK:THReshold](#) on page 907

[SBUS<sb>:SPMI:SDATa:THReshold](#) on page 908

[SBUS<sb>:SPMI:SCLK:HYSTeresis](#) on page 907

[SBUS<sb>:SPMI:SDATa:HYSTeresis](#) on page 907

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

[SBUS<m>:THReshold](#) on page 778

13.8.1.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.


Decode layer

Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

13.8.2 SPMI filter

Access: [Apps] key > "Protocol" tab > "SPMI" > "Filter" tab

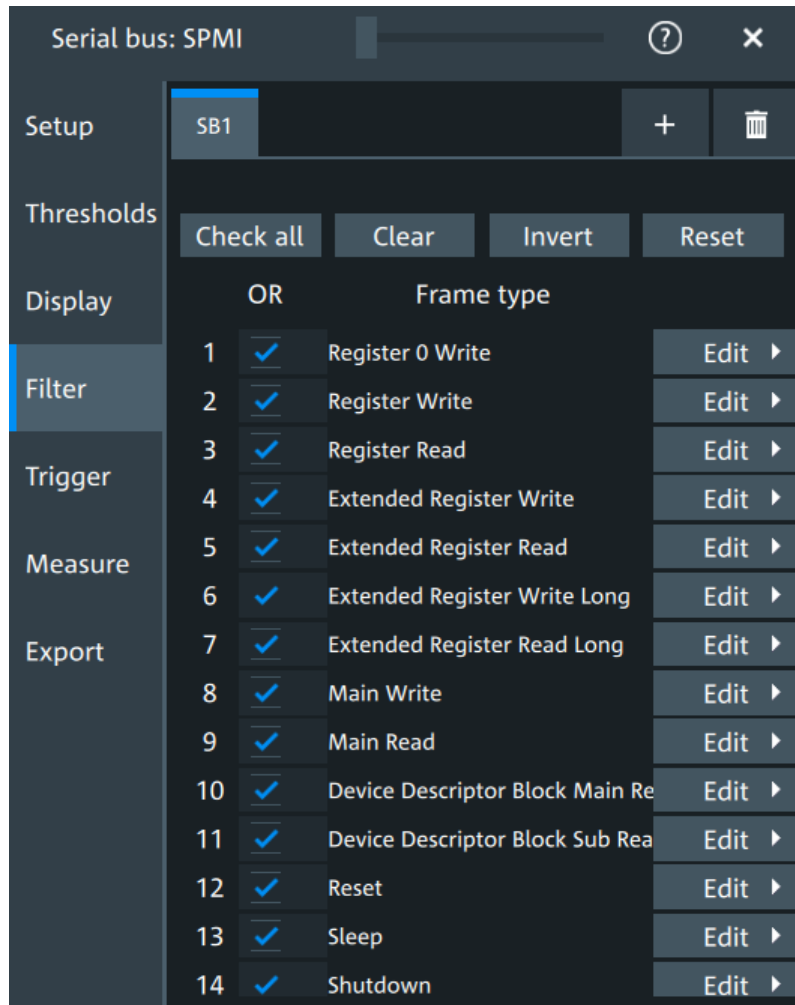

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

- "Check all" Enables the filter for all available frames and error types.
- "Clear" Disables the filter for all available frames and error types.
- "Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
- "Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:SPMI:FILTer:CHKall](#) on page 909

[SBUS<sb>:SPMI:FILTer:CLR](#) on page 910

[SBUS<sb>:SPMI:FILTer:INVert](#) on page 910

[SBUS<sb>:SPMI:FILTer:RST](#) on page 910

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.


Remote command:

[SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle](#) on page 914

[SBUS<sb>:SPMI:FILTer:FRENable](#) on page 914

Edit

Opens a dialog to define the details of the selected frame.

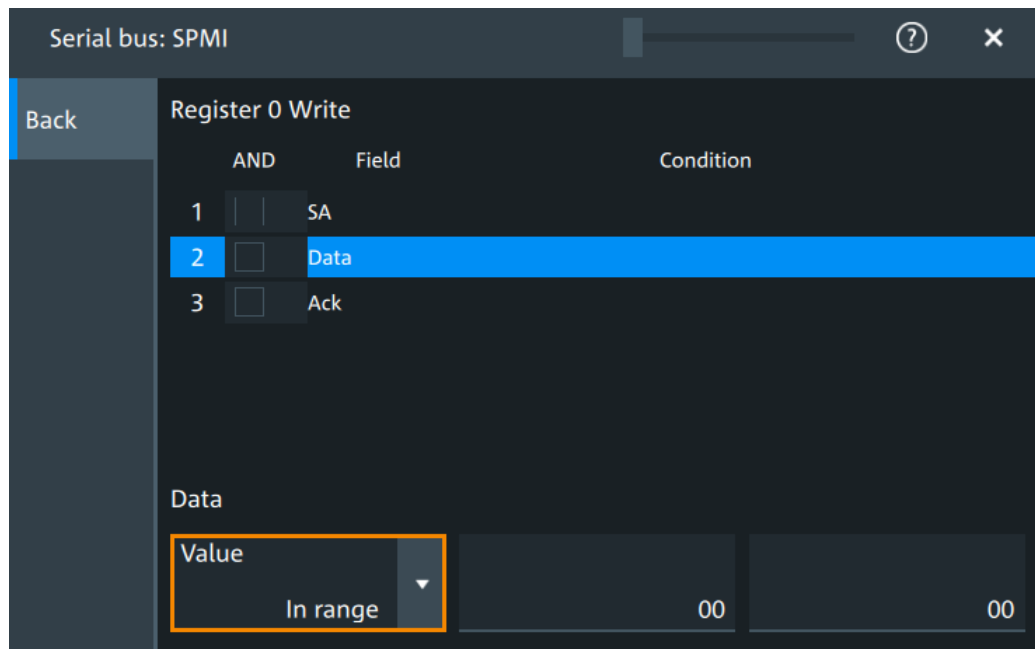

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are

Remote command:

[SBUS<sb>:SPMI:FILTer:FIENable](#) on page 914

[SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle](#)
on page 914

"Condition" Displays the value condition for the selected field.

Remote command:

[SBUS<sb>:SPMI:FILTer:BIT](#) on page 911

[SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT](#)
on page 911

"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command:</p> <p>SBUS<sb>:SPMI:FILTer:DMAX on page 912</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 912</p> <p>SBUS<sb>:SPMI:FILTer:DMIN on page 912</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 912</p> <p>SBUS<sb>:SPMI:FILTer:DOPerator on page 912</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 912</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command:</p> <p>SBUS<sb>:SPMI:FILTer:IMAX on page 914</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 914</p> <p>SBUS<sb>:SPMI:FILTer:IMIN on page 913</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 913</p> <p>SBUS<sb>:SPMI:FILTer:IOPerator on page 913</p> <p>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 913</p>

Error type

Enables filtering on the selected error type.

Remote command:

[SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle](#) on page 913

[SBUS<sb>:SPMI:FILTer:ERENable](#) on page 913

13.8.3 SPMI decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

The "Decode results" table contains information about all decoded frames.



Table 13-13: Content of the Decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	The type of command
SA	Address of the SA
Address	Register address (hex value)
Data	Data (hex value)
Write bit rate	Value of the write bit rate
Read bit rate	Value of the read bit rate

Table 13-14: Content of the Details frame table

Column	Description
Label	Label of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.8, "SPMI \(option R&S MXO4-K550\)"](#), on page 905.

13.8.4 Performing SPMI decoding


This chapter explains step by step how to configure and decode the SPMI bus.

13.8.4.1 Configuring SPMI signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.8.1, "SPMI configuration"](#), on page 445.

1. Tap the "Bus" activator in the bottom right of the screen.

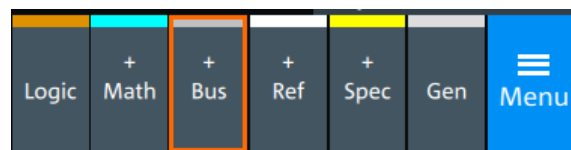

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "SPMI".
4. Tap on "State" to enable the decoding.

An SPMI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "SPMI" dialog settings.

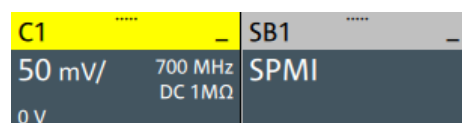

13.9 10BASE-T1S (option R&S MXO4-K560)

10BASE-T1S technology provides a 10 Mbit/s, multidrop transmission over a single pair physical layer. It is an IEEE standard, defined in the IEEE standard 802.3cg-2019 specification.

Required options and equipment


For performing 10BASE-T1S decode measurements, you need the following equipment:

- MXO 4. One of the analog input channels is used for analysis.
- Option R&S MXO4-K560

13.9.1 10BASE-T1S configuration

13.9.1.1 10BASE-T1S configuration settings

Access: [Apps] key > "Protocol" tab > "10Base -T1S" > "Setup".

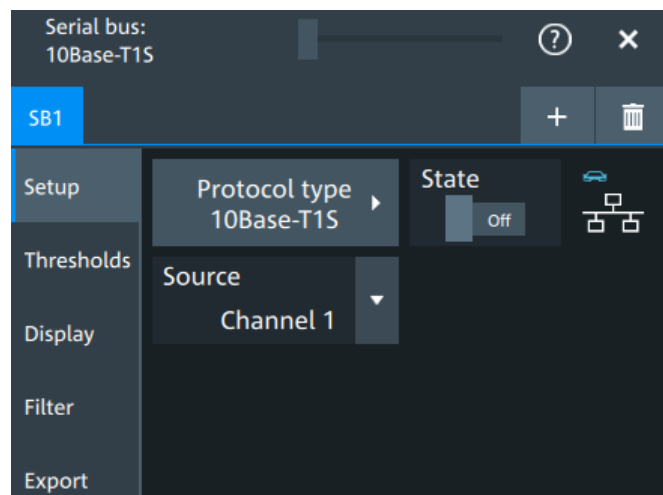

Make sure that the tab of the correct serial bus is selected.

Protocol type

Displays the protocol type to be decoded.

Remote command:

[SBUS<sb>:TYPE](#) on page 776

Source


Selects the source for the 10BASE-T1S protocol. Only analog channels can be used.

Remote command:

[SBUS<sb>:TNOS:SOURce](#) on page 921

13.9.1.2 Threshold settings

Access: [Apps] key > "Protocol" tab > "10Base -T1S" > "Thresholds".

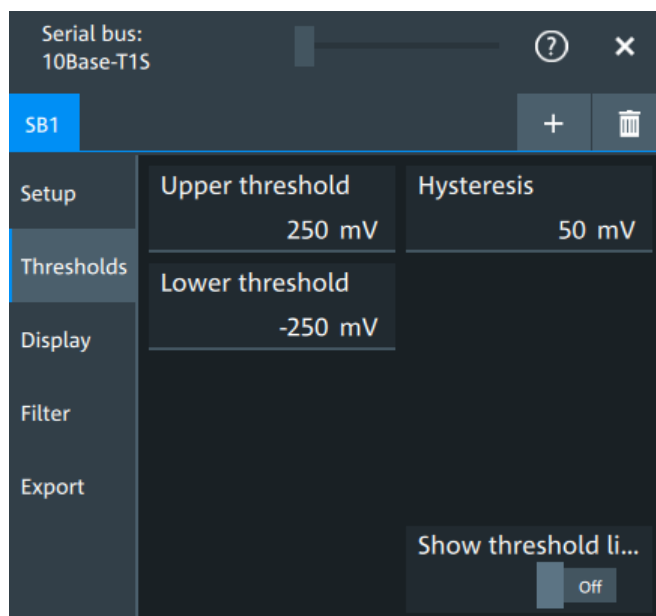

Threshold

Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:TNOS:THReshold:LOWer](#) on page 922

[SBUS<sb>:TNOS:THReshold:UPPer](#) on page 922

[SBUS<sb>:TNOS:HYSTeresis](#) on page 921

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

[SBUS<m>:THReshold](#) on page 778

13.9.1.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

Decode layer

Selects the decode layer.


Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Show symbols

You can load symbol lists, and activate its usage for decoding. As a result, an additional "Symbol" column appears in the "Decode results" table, containing the symbolic label.

13.9.2 10BASE-T1S filter

Access: [Apps] key > "Protocol" tab > "10Base -T1S" > "Filter" tab

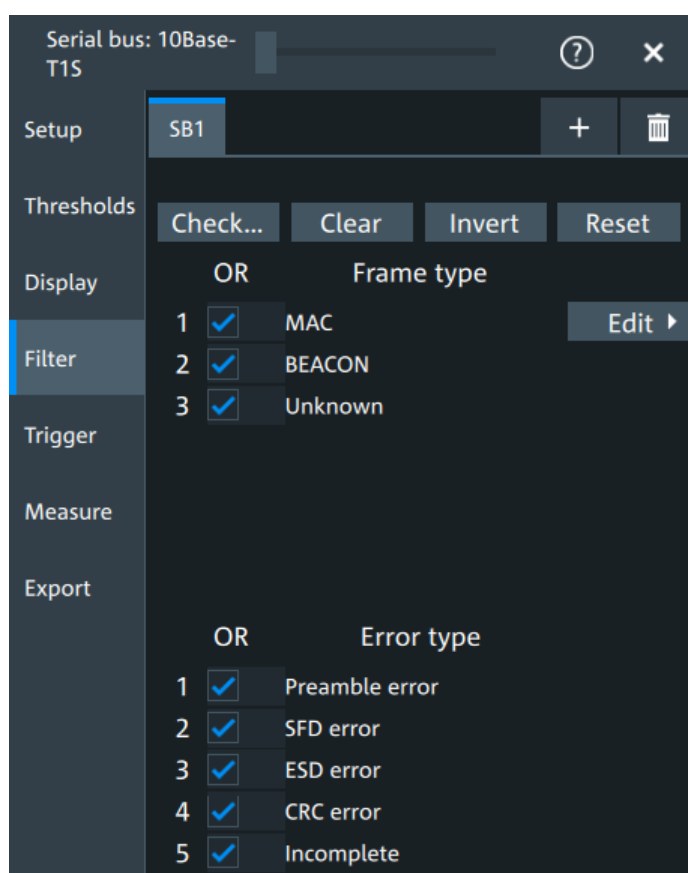

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Reset" Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:TNOS:FILTer:CHKall](#) on page 923

[SBUS<sb>:TNOS:FILTer:CLR](#) on page 924

[SBUS<sb>:TNOS:FILTer:INVert](#) on page 924

[SBUS<sb>:TNOS:FILTer:RST](#) on page 924

Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "MAC", "BEACON" and "Unknown".


Remote command:

[SBUS<sb>:TNOS:FILTer:FRENAble](#) on page 928

[SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABLe](#) on page 928

Edit

Opens a dialog to define the details of the selected frame.

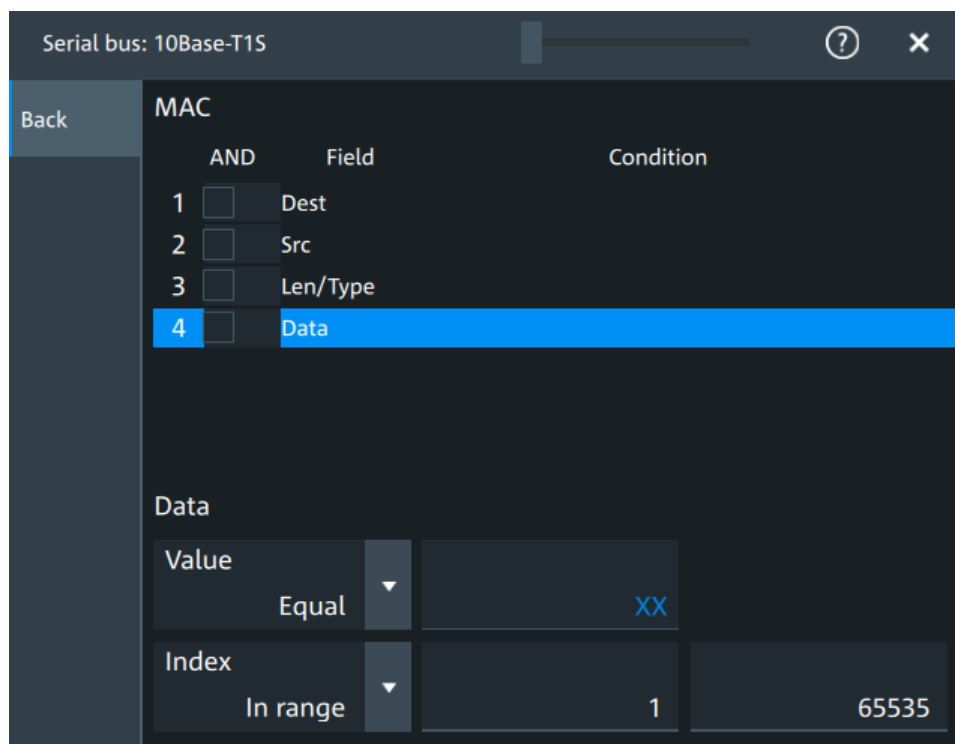

"Field"	<p>Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type" and "Data".</p> <p>Remote command: SBUS<sb>:TNOS:FILTer:FIENable on page 926 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABLE on page 926</p>
"Condition"	<p>Displays the value condition for the selected field.</p> <p>Remote command: SBUS<sb>:TNOS:FILTer:BIT on page 924 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 924</p>
"Data"	<p>The data setup consists of a comparison condition and one or two data patterns.</p> <p>Remote command: SBUS<sb>:TNOS:FILTer:DMAX on page 925 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 925 SBUS<sb>:TNOS:FILTer:DMIN on page 925 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 925 SBUS<sb>:TNOS:FILTer:DOPerator on page 925 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 925</p>
"Index"	<p>The index setup consists of a comparison condition and one or two index values.</p> <p>Remote command: SBUS<sb>:TNOS:FILTer:IMAX on page 926 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 926 SBUS<sb>:TNOS:FILTer:IMIN on page 927 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 927 SBUS<sb>:TNOS:FILTer:IOPerator on page 927 SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 927</p>

Error type

Enables filtering on the selected error type.

Remote command:

[SBUS<sb>:TNOS:FILTer:ERENable](#) on page 926

[SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABLE](#) on page 926

13.9.3 10BASE-T1S decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table



The "Decode results" table contains information about all decoded frames.

Table 13-15: Content of the Decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Source	Source address of the frame
Type/Length	The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
Data	Value of the data

Column	Description
CRC	Frame Check (Cyclic Redundancy Code, CRC)
Bit rate	Value of the bit rate

Table 13-16: Content of the Details frame table

Column	Description
Label	Label of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.9.3, "Decode results"](#), on page 928.

13.9.4 Performing 10BASE-T1S decoding


This chapter explains step by step how to configure and decode the 10BASE-T1S bus.

13.9.4.1 Configuring 10BASE-T1S signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see [Chapter 13.9.1, "10BASE-T1S configuration"](#), on page 453.

1. Tap the "Bus" activator in the bottom right of the screen.

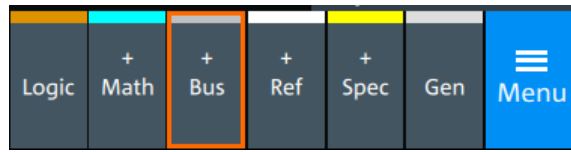

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "10BASE-T1S".
4. Tap on "State" to enable the decoding.

A 10Base-T1S shortcut appears at the bottom left of the screen. Tap the shortcut for a quick access to the "10Base -T1S" dialog settings.

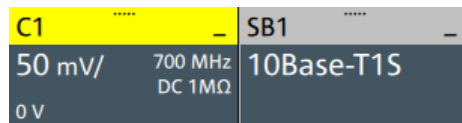

13.10 ARINC 429 (option R&S MXO4-K530)

13.10.1 ARINC 429 basics

The ARINC 429 is a specification that defines the characteristics of an avionic data bus used on commercial and transport aircraft.

In an ARINC 429 system, a single transmitter/source is connected to 1 to 20 receivers/sinks on one twisted wire pair. The bus uses differential signals. The ARINC 429 standard uses a simplex communication - data may be transmitted in only one direction. The information is transmitted over the bus in defined series of words.

Word Format

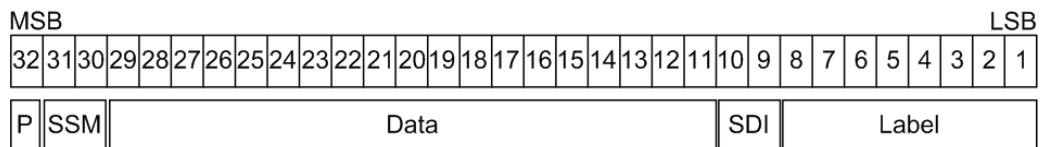


Figure 13-17: Structure of an ARINC 429 word

An ARINC 429 word is 32-bits and consists of the following parts (see [Figure 13-17](#)):

- Parity: the most significant bit (MSB). Checks if there are bit errors during the transmission. The total number of logic 1 bits for the word shall be odd.
- Sign/Status Matrix (SSM): the value of these bits depends on the data type. It may be used to report the status of hardware equipment.
- Data:
 - Binary (BNR): stores the data as a binary number.


- Binary Coded Decimal (BCD): uses 4 data field bits to represent a decimal digit.
- Discrete data: a combination of BNR and/ or BCD or individual bits that express specific equipment conditions.
- Maintenance data and acknowledgment
- Williamsburg / Buckhorn protocol: a bit-oriented protocol that is used for file transfer.
- Source/Destination Identifier (SDI): indicates the intended receiver or the transmitting subsystem.
- Label: gives information about the word's data type.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

13.10.2 ARINC 429 configuration

13.10.2.1 ARINC 429 configuration settings

Access: [Apps] key > "Protocol" tab > "ARINC 429" > "Setup".

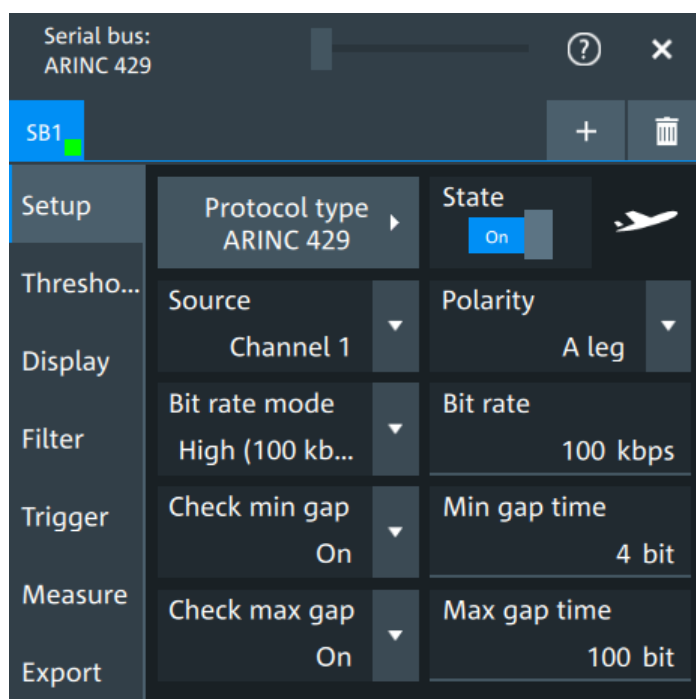

Source

Sets the source of the selected data line. Usually, the source is one of the analog channels. Reference and math waveforms are only available if the trigger source is one of the input channels but not the serial bus.

For triggering on a serial bus, a channel signal is required.

Remote command:

`SBUS<sb>:ARINC:SOURce` on page 937

Polarity

Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Remote command:

`SBUS<sb>:ARINC:POLarity` on page 937

Bit rate mode, Bit rate

Selects the number of transmitted bits per second. The value can be set to high speed (100 kbps) or low speed (12.0- 14.5 kbps).

Remote command:

`SBUS<sb>:ARINC:BRMode` on page 937

`SBUS<sb>:ARINC:BRValue` on page 937


Min gap time,Max gap time

The gap time defines the idle time between two words, which is needed for word synchronization. The beginning of the first bit after the gap marks the start of a new word. If "Check min gap" and/or "Check max gap" are enabled, the instrument detects the specified gaps during decoding.

You can define a minimum idle time "Min gap time", and/or a maximum time "Max gap time". The standard defines a minimum of 4-bit times to separate two subsequent words.

13.10.2.2 Threshold

Access: [Apps] key > "Protocol" tab > "ARINC 429" > "Thresholds".

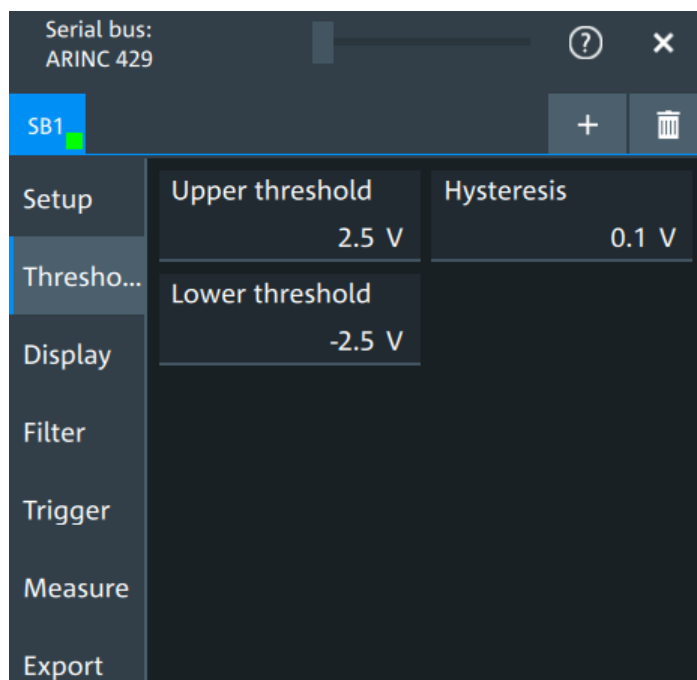

Threshold

Sets the upper and lower threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:

[SBUS<sb>:ARINC:THReshold:HIGH](#) on page 938

[SBUS<sb>:ARINC:THReshold:LOW](#) on page 938

[SBUS<sb>:ARINC:THReshold:HYSTeresis](#) on page 938

Show threshold lines

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Remote command:

[SBUS<m>:THReshold](#) on page 778

13.10.2.3 Display settings

For details about the display settings, see [Chapter 13.1.4, "Display"](#), on page 343.

Show symbols

Symbol lists are protocol-specific. Label lists for ARINC 429 are available in CSV format.

For details, see [Chapter 13.10.2.4, "ARINC 429 Symbols"](#), on page 464.

Remote command:

`SBUS<sb>:ARINC:SYMBOLs` on page 939

`SBUS<sb>:ARINC:NEWLlist` on page 939

13.10.2.4 ARINC 429 Symbols

Label lists are protocol-specific. An ARINC 429 label file contains two values for each identifier:

- "Arinc Label": the ARINC 429 label value, that identifies the data type and the parameters associated with it. The usual data format is octal.
- "Symbolic label": symbolic name of the label, specifying its function.


Example: ARINC 429 PTT file

```
# -----
@FILE_VERSION = 1.0
@PROTOCOL_NAME = arinc429
# -----
# Labels for ARINC 429 protocol
#   Column order: Arinc Label, Symbolic Label
# -----
# ----Definition----
001o, Distance to Go
002o, Time to Go
010o, Present Position - Latitude
011o, Present Position - Longitude
014o, Magnetic Heading
015o, Wind Speed
075o, Gross Weight
125o, Universal Time Coordinated
# -----
s
```

13.10.3 ARINC 429 filter

Access: [Apps] key > "Protocol" tab > "ARINC 429" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

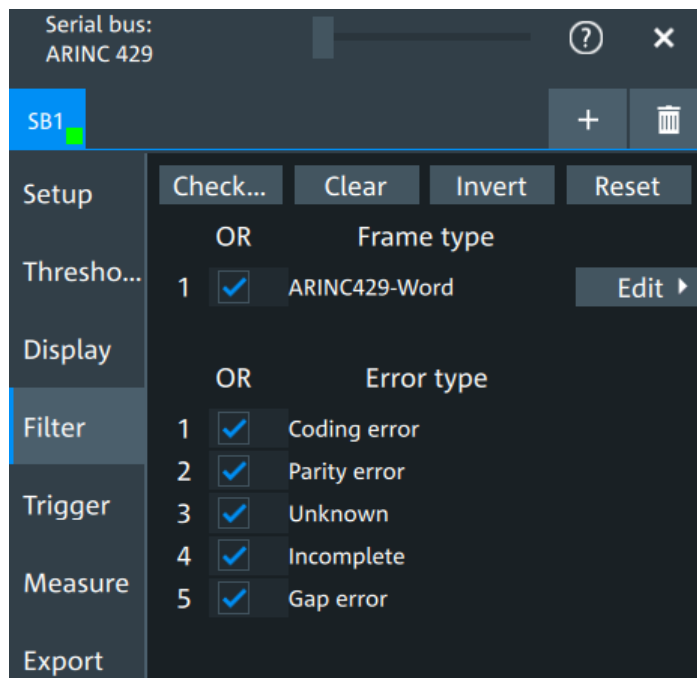

Check all, Clear, Invert, Reset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Reset"	Resets the state of the selected frames and error types.

Remote command:

[SBUS<sb>:ARINC:FILTer:RST](#) on page 941
[SBUS<sb>:ARINC:FILTer:INVert](#) on page 940
[SBUS<sb>:ARINC:FILTer:CHKall](#) on page 940
[SBUS<sb>:ARINC:FILTer:CLR](#) on page 940

Enable

Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Remote command:

[SBUS<sb>:ARINC:FILTer:FREnable](#) on page 943
[SBUS<sb>:ARINC:FILTer:FRAMe<fr>:ENABle](#) on page 943


Frame type

Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Edit

Opens a dialog to define the details of the selected frame.

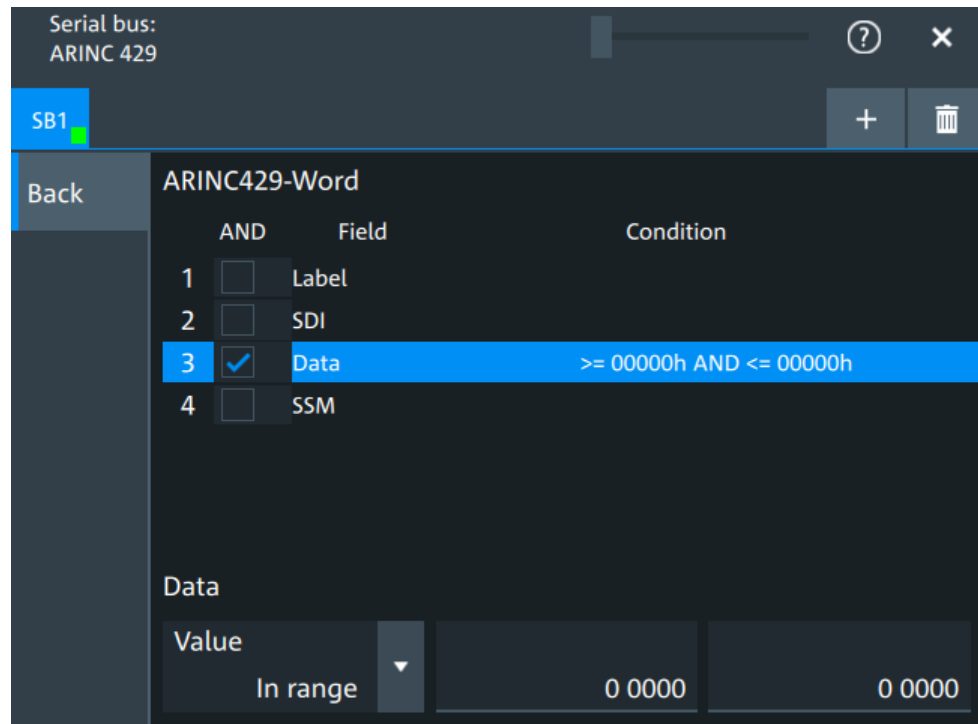

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Label", "SDI", "Data", "SSM".

Remote command:

[SBUS<sb>:ARINC:FILTER:FIENable on page 943](#)

[SBUS<sb>:ARINC:FILTER:FRAME<fr>:FLD<fl>:ENABLE on page 943](#)

"Condition" Displays the value condition for the selected field.

Remote command:

[SBUS<sb>:ARINC:FILTER:BIT on page 941](#)

[SBUS<sb>:ARINC:FILTER:FRAME<fr>:FLD<fl>:BIT on page 941](#)

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:

[SBUS<sb>:ARINC:FILTER:DMAX on page 942](#)

[SBUS<sb>:ARINC:FILTER:FRAME<fr>:FLD<fl>:DMAX on page 942](#)

[SBUS<sb>:ARINC:FILTER:DMIN on page 942](#)

[SBUS<sb>:ARINC:FILTER:FRAME<fr>:FLD<fl>:DMIN on page 942](#)

[SBUS<sb>:ARINC:FILTER:DOPerator on page 942](#)

[SBUS<sb>:ARINC:FILTER:FRAME<fr>:FLD<fl>:DOPerator on page 942](#)

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:

[SBUS<sb>:ARINC:FILTer:IMAX](#) on page 944

[SBUS<sb>:ARINC:FILTer:FRAMe<fr>:FLD<fl>:IMAX](#)
on page 944

[SBUS<sb>:ARINC:FILTer:IMIN](#) on page 944

[SBUS<sb>:ARINC:FILTer:FRAMe<fr>:FLD<fl>:IMIN](#)
on page 944

[SBUS<sb>:ARINC:FILTer:IOPerator](#) on page 944

[SBUS<sb>:ARINC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator](#)
on page 944

Error type

Enables filtering on the selected error type.

The available error types are "Coding error", "Parity error", "Unknown", "Incomplete", "Gap error".

Remote command:

[SBUS<sb>:ARINC:FILTer:ERENable](#) on page 941

[SBUS<sb>:ARINC:FILTer:ERRor<n>:ENABLE](#) on page 941

13.10.4 ARINC 429 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also [Chapter 13.1.4, "Display"](#), on page 343.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

The "Decode results" table contains information about all decoded frames.



Table 13-17: Content of the Decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Label	The label name
SDI	The state of the SDI bits
Data	All 32 bits of the word
SSM	The state of the SSM bits
32-bit word	The value of the data bytes
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 777

Export of decode results

1. In the protocol "Shortcuts" tab, press "Export results".
The "Export results" dialog opens.
For details, see [Chapter 13.1.7, "Export protocol results"](#), on page 346.
2. Select the details that you want to export and the file format.
3. Tap "Save as".
4. Key in a name and select the file format.

Remote commands

Remote commands to retrieve decode results are described in [Chapter 17.16.10.3](#), "Decode results", on page 945.

14 Mixed signal option (MSO, R&S MXO4-B1)

The Mixed Signal Option R&S MXO4-B1 adds logic analyzer functions to the classical oscilloscope functions. Using the MSO option, you can analyze and debug embedded systems with mixed-signal designs that use analog signals and correlated digital signals simultaneously.

The Mixed Signal Option provides 16 digital channels grouped in two logic probes (pods) with 8 channels each. The instrument ensures that analog and digital waveforms are time-aligned and synchronized so that critical timing interactions between analog and digital signals can be displayed and tested. The automatic alignment compensates the skew between the probe connectors of the analog channels and the probe boxes of the digital channels.

14.1 Logic configuration

Access: "Menu" > "Logic" > "Setup" tab

You can display digital channels individually, and you can group them and display as a logic group. 4 logic groups are available. Each digital channel can be assigned to one *active* logic only, and the instrument disables conflicting buses automatically.


For clocked buses, you can display the decoded data in a result box.



If you have configured several logic groups and you want to modify the settings, make sure that the tab of the correct logic is selected. Disable the logic before you change the settings.

14.1.1 Setup

Access: "Menu" > "Logic" > "Setup" tab

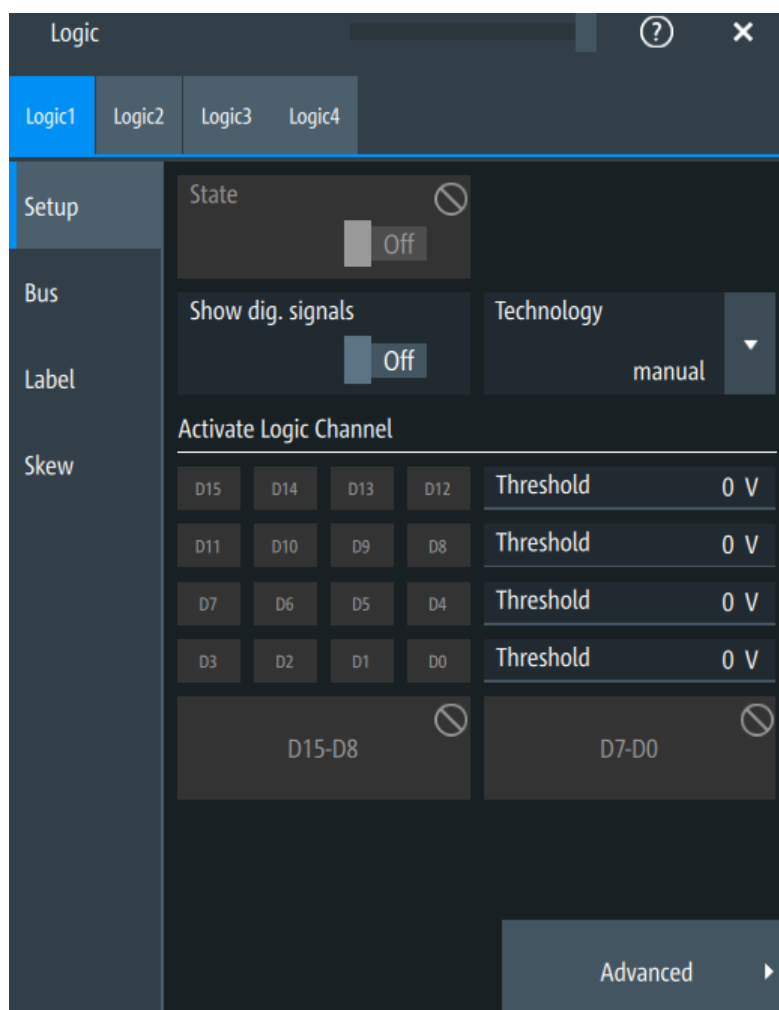**State**

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the same digital channel, the instrument disables the other bus and shows a message.

Remote command:

[PBUS<pb>:STATe](#) on page 958

Show dig. signals

If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.


Remote command:

[PBUS<pb>:DISPlay:SHDI](#) on page 956

Technology, Threshold

Sets the logical threshold. For each sample, the instrument compares the input voltage with the threshold value. If the input voltage is above the threshold, the signal state "1" is stored. Otherwise, the signal state "0" is stored if the input voltage is below the threshold.

To avoid the change of signal states due to noise, a hysteresis is considered.

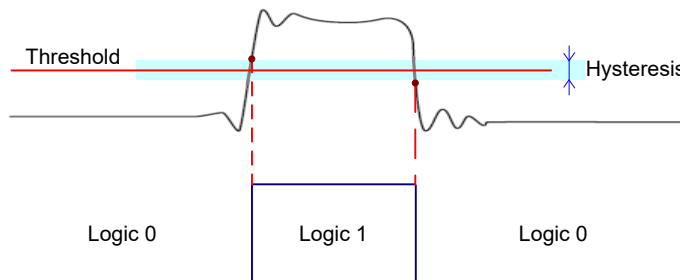

By default, the same threshold and hysteresis value are used for all digital channels and all logic buses: "Couple thresholds" is enabled.

You can also set different thresholds for the individual channel groups. As long as the buses are disabled, you can set different thresholds for each bus. Active buses use the same threshold and hysteresis values, the settings of the last activated bus take effect.

The range of threshold levels and the minimum voltage swing is given in the specifications document.

"Threshold" Enter the value directly in the field.

"Technology" Selects the threshold voltage for various types of integrated circuits from a list and applies it to all digital channels. The value is set to "Manual" if a user-defined threshold was entered directly.

Remote command:

[PBUS<pb>:TECHnology](#) on page 958

[PBUS<pb>:THReshold<n>](#) on page 959

Advanced

Opens a dialog for advanced threshold and hysteresis settings. You can define them in addition to the "Threshold" and "Technology".

Level coupling ← Advanced

Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

Remote command:

[PBUS<pb>:THCoupling](#) on page 959

Hysteresis ← Advanced

Defines the size of the hysteresis for the respective channels.

"Normal" The instrument sets a small value suitable for the signal and its settings. Use this setting for clean signals.

"Maximum" The instrument sets the maximum value that is possible and useful for the signal and its settings. Use this setting for noisy signals.

"Robust" Sets different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system. Use this setting for very noisy signals.

Remote command:

[PBUS<pb>:HYSTeresis<n>](#) on page 957

Active logic channel


Selects the state of the respective bus channel.

Enable/Disable D7-D0,D15-D8

The buttons select or deselect all digital channels of a pod at once.

14.1.2 Bus

Access: "Menu" > "Logic" > "Bus" tab

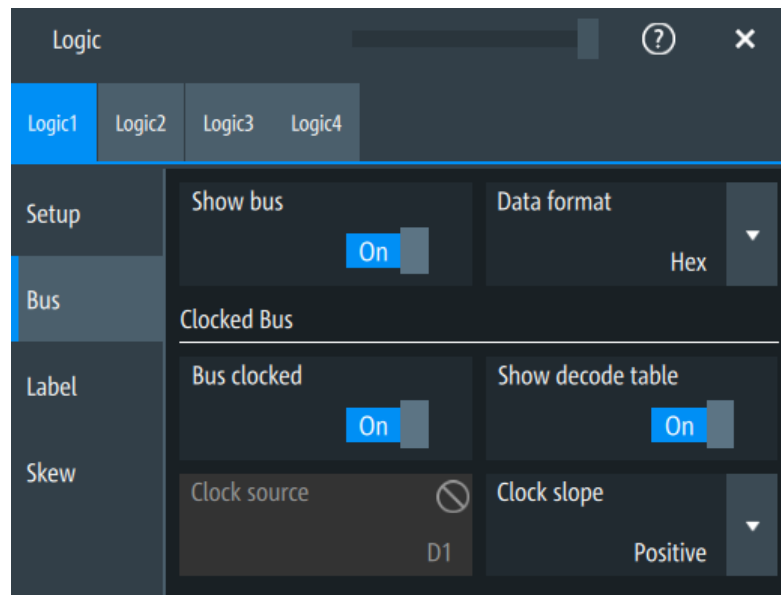

Show bus

If enabled, the resulting bus signal and bus values are displayed in the diagram.

Remote command:

[PBUS<pb>:DISPlay:SHBU](#) on page 956

Data format

Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

Available formats are: Hex, octal, binary, ASCII, string, signed, unsigned, symbolic, and auto.

Signed and Unsigned are integer data types with a maximum 16-bit length. Unsigned is used for positive integers. Signed is used for positive and negative integers.

If the target file format is BIN, you can save only signed and unsigned binary data. The data format "Signed" writes signed data; all other formats are saved as unsigned binary data.

Remote command:

[PBUS<pb>:DATA:FORMat](#) on page 961

[PBUS<pb>:DATA:HEADer?](#) on page 961

[PBUS<pb>:DATA\[:VALues\]?](#) on page 962

Clocked bus

If a bus is a clocked bus, one of the digital channels serves as the clock of the bus.

For an unclocked bus, the logical state of the bus is determined for each sample. For a clocked bus, the logical state is determined only at the specified clock edges.

Bus clocked ← Clocked bus

Enable this option for a clocked bus.

Remote command:

[PBUS<pb>:CLON](#) on page 954

Show decode table ← Clocked bus

If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Remote command:

[PBUS<pb>:DECTable:SHOW](#) on page 955

[PBUS<pb>:DECTable:COUNT?](#) on page 955

[PBUS<pb>:DECTable:DATA?](#) on page 955

Clock source ← Clocked bus

Selects the digital channel used as clock.

Remote command:

[PBUS<pb>:CLOCK](#) on page 954

Clock slope ← Clocked bus


Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Remote command:

[PBUS<pb>:CLSLope](#) on page 954

14.1.3 Label settings

Access: "Menu" > "Logic" > "Label" tab

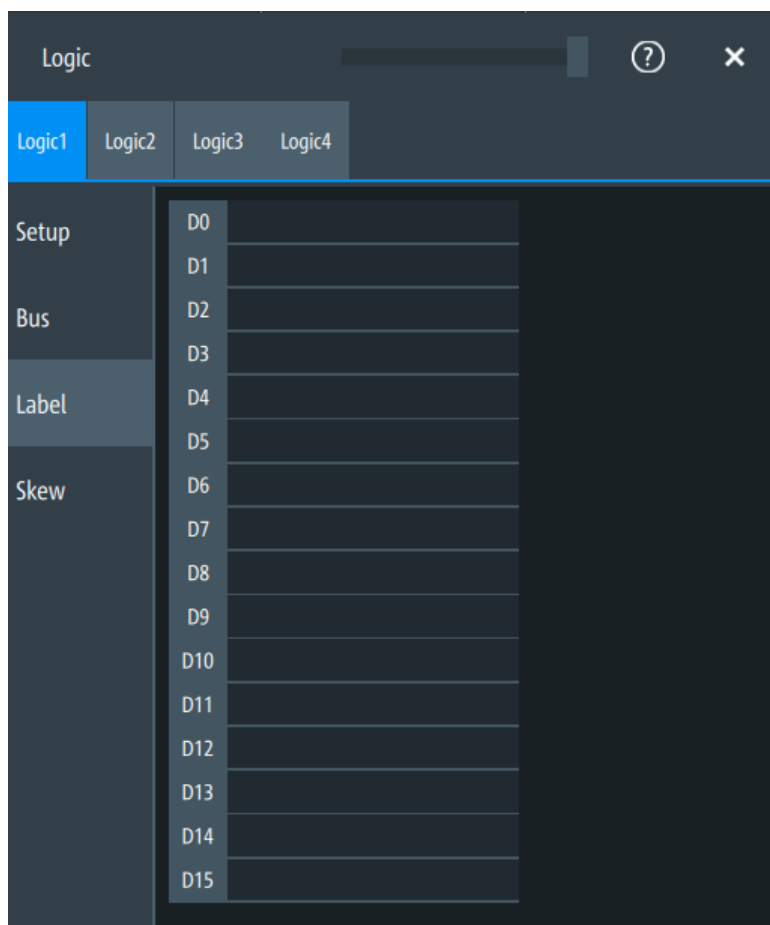


In this tab, you can enter a name for each digital channel. The name is displayed in the diagram.

[PBUS<pb>:BIT<n>:LAbel](#) on page 952

14.1.4 Skew settings

Access: "Menu" > "Logic" > "Skew" tab

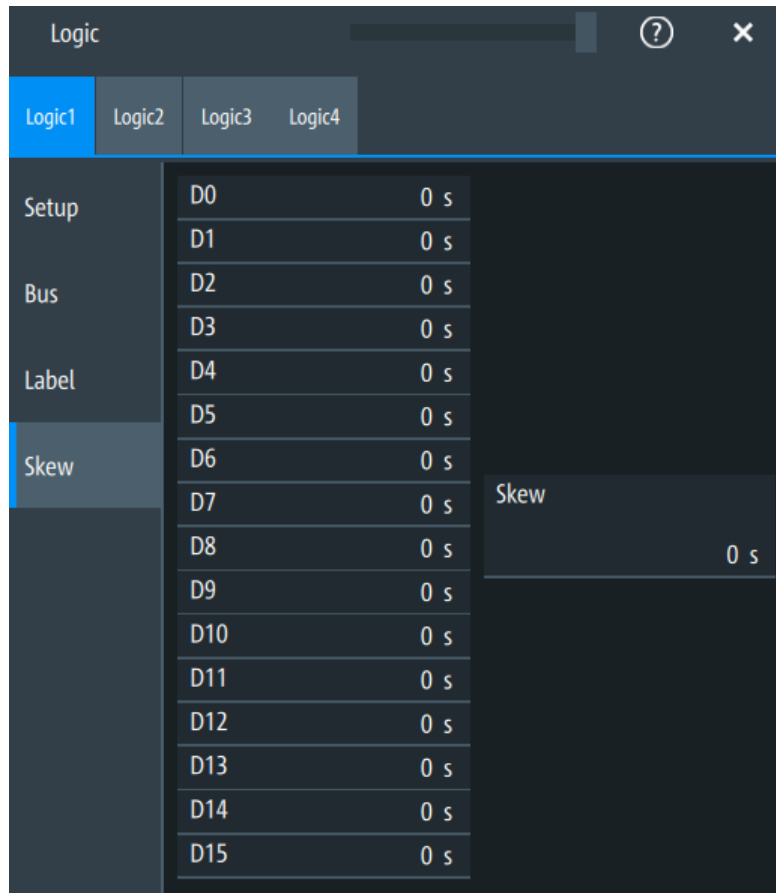**D0-D15**

Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Remote command:

[PBUS<pb>:BIT<n>:SKEW](#) on page 953

Skew


Sets a general delay for all digital channels.

Remote command:

[PBUS<pb>:SKEW](#) on page 958

14.2 Display

Each logic group is shown in a separate diagram, and the diagrams can be minimized and arranged as usual.

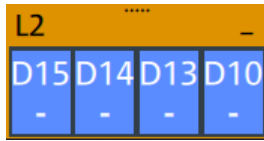

You can adjust the display of the logic bus signals and the individual digital channels to optimize the analysis of bus data:

- Show the digital channels which are assigned to the bus, drag them to the optimal position, and scale them.
- Adjust size and position of the logic signal: Therefore, tap the Lx signal or the signal icon, and use the [Position] and [Scale] knobs.
- Adjust size and position of all active digital channels: Therefore, tap one of the Dx signals, and use the [Position] and [Scale] knobs.
- Show the result table of the decoded clocked bus signal.

Remote commands:

- [PBUS<pb>:DIGSignals:POSition](#) on page 955
- [PBUS<pb>:DIGSignals:SCALE](#) on page 956
- [PBUS<pb>:POSition](#) on page 957
- [PBUS<pb>:SCALE](#) on page 957

To access and analyze one or more specific acquisitions, you can use the "History" in the common way.

Furthermore, you can zoom in digital signals and bus signal in the same way as in analog waveforms.

14.2.1 Logic bus - decode table

Decoding is available for clocked buses.

The decode table shows the decoded data words of the bus signal and the corresponding time. Each clock edge corresponds to one row in the table. Beside the table, you can select the data format of the bus values.

Result	Time	Value	Data format
			Binary

The results can be saved to a `.csv` or `.html` file.

15 Waveform generator (option R&S MXO4-B6)

The MXO 4 includes a two-channel 100 MHz waveform generator which can generate a wide range of waveform and modulation types.

With each of the waveform generators, one can output simple functions, modulated sine waveform, arbitrary waveforms and sweep waveforms. It is possible to couple and synchronize the settings of the waveform generators.


The instrument preset does not affect the generator settings. Each generator has its own preset ("Default setup"). When the instrument is shut down, the waveform generator settings are stored. At instrument start, these settings are restored but the generators are switched off. When a saveset of instrument settings is recalled, generators are also switched off but the generator settings remain unchanged.

15.1 Setup of the waveform generator

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab.

15.1.1 General settings

The "Setup" tab provides general settings like enabling the waveform generator, and setting that depend on the selected function type.

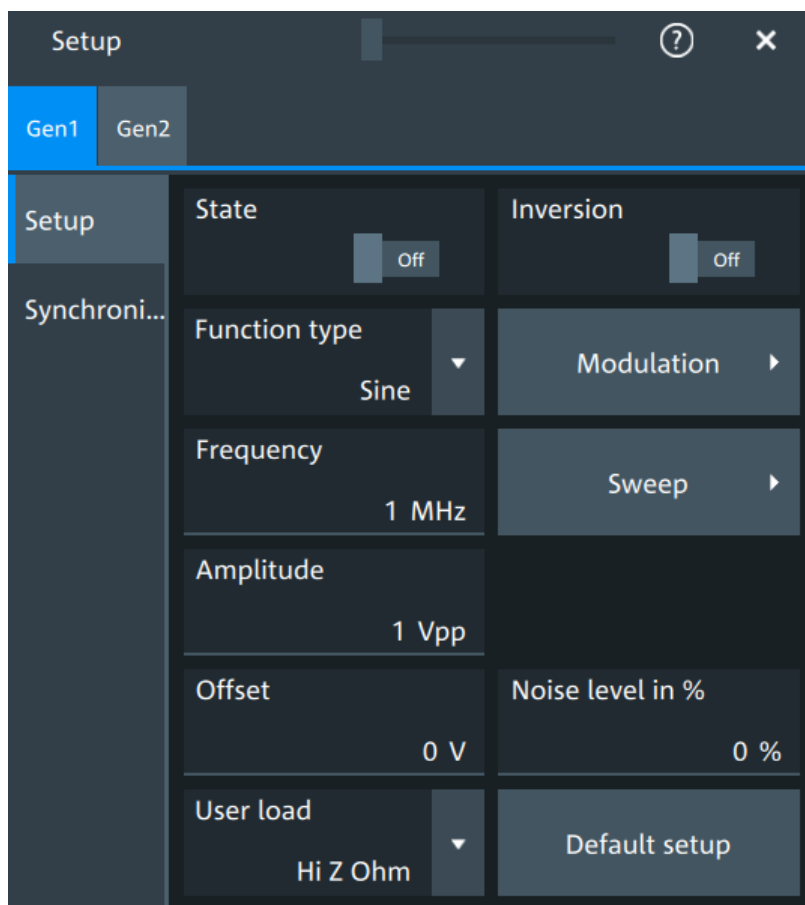**State**

Enables the function generator.

Remote command:

[WGENerator<wg>\[:ENABLE\]](#) on page 967

Inversion

Inverts the waveform at the offset level.

Remote command:

[WGENerator<wg>:VOLTage:INVersion](#) on page 966

Function type

Selects the type of waveform to be generated.

For all waveforms, you can set:

- [Frequency](#)
- [Amplitude](#)
- [Offset](#)

"Sine" Generates a sine wave.

Function type Sine	Modulation
Frequency 1 MHz	Sweep
Amplitude 1 Vpp	
Offset 0 V	Noise level in % 0 %


"Square" Generates a square wave.

Function type Square	Modulation
Frequency 10 MHz	Duty cycle 50 %
Amplitude 200 mVpp	
Offset 0 V	Noise level in % 0 %


"Ramp" Generates a ramp signal. You can set the [Symmetry](#).

Function type Ramp	
Frequency 1 MHz	Symmetry 50 %
Amplitude 200 mVpp	
Offset 0 V	Noise level in % 0 %

"DC" Generates a direct current (DC) signal.

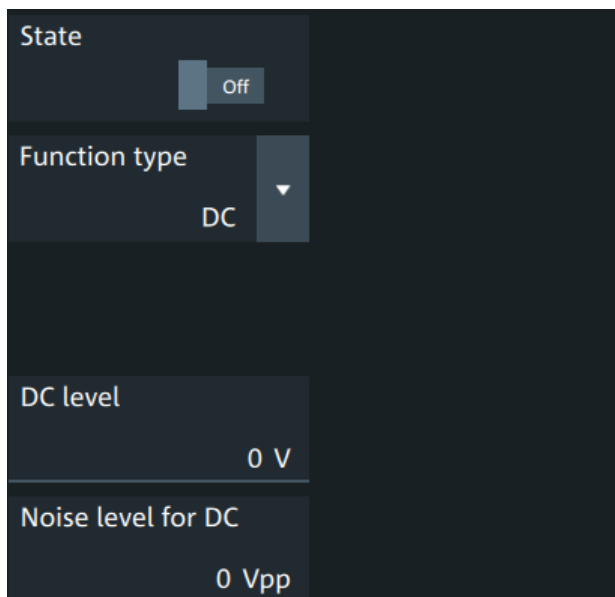

"Pulse" Generates a pulse signal. Additional settings are the [Pulse width](#).

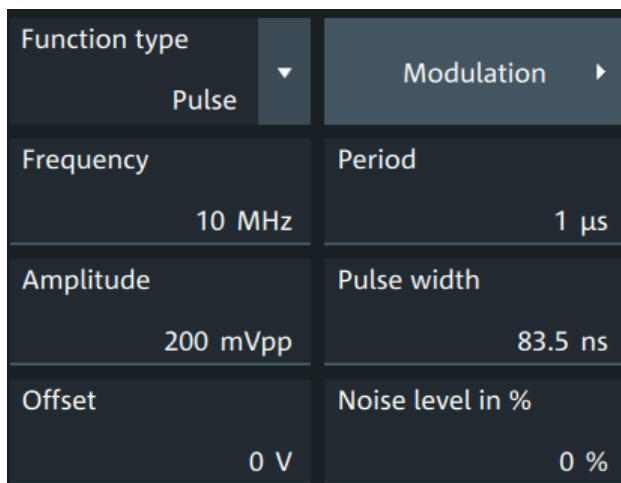

"Cardinal sine" Generates a cardinal sine wave.

Function type	
Cardinal sine	
Frequency	
5 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %

"Cardiac" Generates a cardiac signal.

Function type	
Cardiac	
Frequency	
1 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %

"Gauss" Generates a Gaussian signal.

Function type	
Gauss	
Frequency	
10 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %

"Lorentz" Generates a Lorentz signal .

Function type	▼
Lorentz	
Frequency	
10 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %


"Exp. rise" Generates an exponential rise signal.

Function type	▼
Exp. rise	
Frequency	
10 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %

"Exp. fall" Generates an exponential fall signal.

Function type	▼
Exp. fall	
Frequency	
10 MHz	
Amplitude	
200 mVpp	
Offset	Noise level in %
0 V	0 %

"Arbitrary" Generates an arbitrary waveform, which is copied from an existing waveform, or loaded from file. See [Chapter 15.1.4, "Arbitrary waveforms"](#), on page 490.

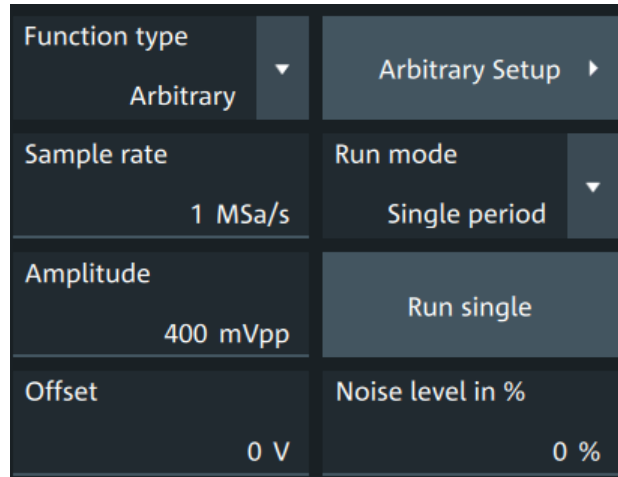

Remote command:

`WGEnerator<wg>:FUNCTION[:SElect]` on page 964

Frequency

Sets the frequency of the waveform.

The available frequency range depends on the selected "Function type", see [Frequency range of the function generator waveforms](#).

Table 15-1: Frequency range of the function generator waveforms

"Function type"	Min frequency	Max frequency
"Sine"	0.001 Hz	100 MHz
"Square"	0.001 Hz	30 MHz
"Ramp"	0.001 Hz	1 MHz
"DC"	-	-
"Pulse"	0.001 Hz	30 MHz
"Cardinal sine"	0.001 Hz	5 MHz
"Cardiac"	0.001 Hz	1 MHz
"Gauss"	0.001 Hz	25 MHz
"Lorentz"	0.001 Hz	10 MHz
"Exp. rise"	0.001 Hz	10 MHz
"Ep. fall"	0.001 Hz	10 MHz

Remote command:

`WGEnerator<wg>:FREQuency` on page 963

Amplitude

Sets the amplitude of the waveform.

Remote command:

[WGENerator<wg>:VOLTage\[:VPP\]](#) on page 967

Offset

Sets the vertical offset of the generated waveform.

Remote command:

[WGENerator<wg>:VOLTage:OFFSet](#) on page 967

Arbitrary Setup

Opens a menu to configure the arbitrary waveform.

See [Chapter 15.1.4, "Arbitrary waveforms"](#), on page 490.

Sweep

Opens a menu to configure the sweep.

See [Chapter 15.1.3, "Sweep settings"](#), on page 489.

Modulation

Opens a menu to configure the modulation.

See [Chapter 15.1.2, "Modulation settings"](#), on page 486.

Noise level in %

Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Remote command:

[WGENerator<wg>:MODulation:NLPCent](#) on page 974

User load

Select the user load, the load of the DUT at its connection.

You can select either a "50Ω" or a "High-Z" (high input impedance) load.

Remote command:

[WGENerator<wg>:OUTPut\[:LOAD\]](#) on page 965

Symmetry

Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

50% defines symmetric triangles. Values <50% define triangles with steeper rising edge leaned to the left. Values >50% define triangles with steeper falling edge leaned to the right.

Remote command:

[WGENerator<wg>:FUNCTION:RAMP\[:SYMMetry\]](#) on page 964

Duty cycle

Sets the duty cycle for the pulse function.

The duty cycle expresses for what percentage of the period, the signal state is high.

Remote command:

[WGENerator<wg>:FUNCTION\[:SQUare\]:DCYCLE](#) on page 964

Pulse width

Sets the pulse width, the pulse duration of the generated pulse waveform.

Remote command:

[WGENerator<wg>:FUNCTION:PULSe\[:WIDTh\]](#) on page 963

Default setup

Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Remote command:

[WGENerator<wg>:PRESet](#) on page 965

DC level

Available for "Function type" = DC.

Sets the level for the DC signal.

Remote command:

[WGENerator<wg>:VOLTage:DCLevel](#) on page 966

Noise level for DC

Available for "Function type" = "DC".

Sets the level of the noise for the DC signal.

Remote command:

[WGENerator<wg>:MODulation:NDCLevel](#) on page 973

Period

Available for "Function type" = "Pulse".

Sets the period of the pulse waveform.


Remote command:

[WGENerator<wg>:PERiod](#) on page 965

15.1.2 Modulation settings

Modulation is available only for sine and square waveforms.

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab > "Function type" = "Sine" or "Square" > "Modulation".

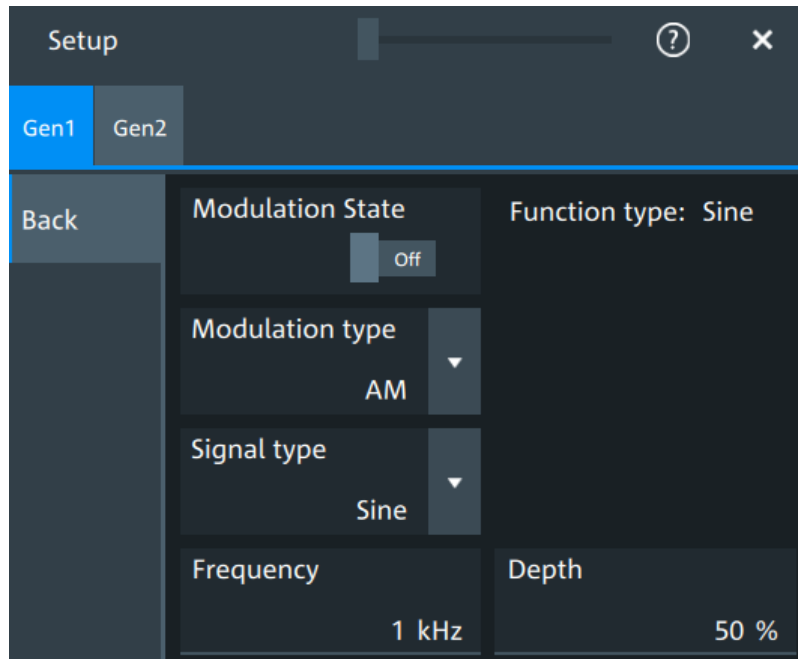**Modulation state**

Enables or disables modulation.

Modulation is available only for "Function type" = "Sine"/"Square".

Remote command:

[WGENerator<wg>:MODulation\[:STATe\]](#) on page 968

Modulation type

Selects the modulation type, which defines how the carrier signal is modified.

"AM"	Amplitude modulation. The amplitude of the carrier signal is varied according to the modulation signal.
"FM"	Frequency modulation. The frequency of the carrier signal is varied according to the modulation signal.
"PWM"	Pulse width modulation. The time for which the signal is in a high state is varied according to the modulation signal.
"FSK"	Frequency shift keying (FSK) modulation. The signal frequency switches between "Frequency 1" and "Frequency 2" at a "FSK rate".

Remote command:

[WGENerator<wg>:MODulation:TYPE](#) on page 976

Signal type

Selects the type of the modulating signal for AM, FM or PWM modulation.

Remote command:

[WGENerator<wg>:MODulation:AM\[:FUNCTION\]](#) on page 970

[WGENerator<wg>:MODulation:FM\[:FUNCTION\]](#) on page 972

[WGENerator<wg>:MODulation:PWM\[:FUNCTION\]](#) on page 975

Frequency

Sets the frequency of the modulating waveform for AM/FM/PWM modulation.

Remote command:

[WGENerator<wg>:MODulation:AM:FREQuency](#) on page 969

[WGENerator<wg>:MODulation:FM:FREQuency](#) on page 971

[WGENerator<wg>:MODulation:PWM:FREQuency](#) on page 975

Depth

Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Remote command:

[WGENerator<wg>:MODulation:AM:DEPTH](#) on page 969

Duty cycle

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Remote command:

[WGENerator<wg>:MODulation:AM:DCYCLe](#) on page 969

[WGENerator<wg>:MODulation:FM:DCYCLe](#) on page 971

[WGENerator<wg>:MODulation:PWM:DCYCLe](#) on page 974

Symmetry

Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.

Remote command:

[WGENerator<wg>:MODulation:AM:SYMMetry](#) on page 970

[WGENerator<wg>:MODulation:FM:SYMMetry](#) on page 972

[WGENerator<wg>:MODulation:PWM:SYMMetry](#) on page 975

Deviation

Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Remote command:

[WGENerator<wg>:MODulation:FM:DEVIation](#) on page 971

Modulation depth

Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Remote command:

[WGENerator<wg>:MODulation:PWM:DEPTH](#) on page 974

Frequency 1/Frequency 2

Sets the frequency of the first /second signal in FSK modulated signal.

Remote command:

[WGENerator<wg>:MODulation:FSK:FONE](#) on page 972

[WGENerator<wg>:MODulation:FSK:FTWO](#) on page 972

FSK rate

Sets the frequency at which signal switches between "Frequency 1" and "Frequency 2".


Remote command:

[WGENerator<wg>:MODulation:FSK\[:RATE\]](#) on page 973

15.1.3 Sweep settings

Sweep is available only for sine waveforms.

Access: "Gen" signal activator > "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Sine" > "Sweep".

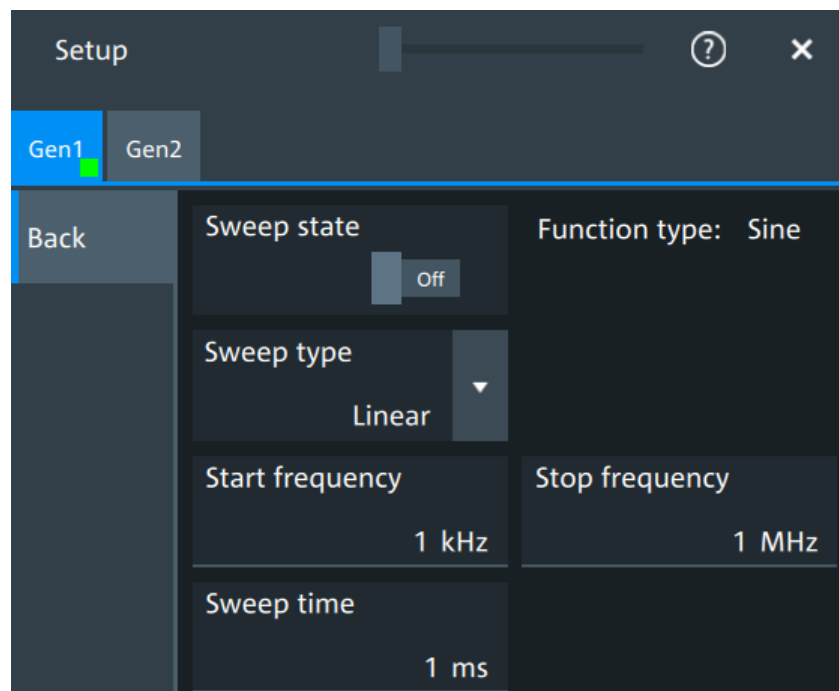

In the sweep mode, the MXO 4 generates a signal whose frequency gradually changes from the "Start frequency" to the "Stop frequency" for a certain "Sweep time".

For a step-by-step description of the sweep setup, see [Chapter 15.3.3, "Configuring a sine sweep waveform"](#), on page 497.

Sweep state

Enables or disables the sweeping.

Remote command:

[WGENerator<wg>:SWEep\[:STATe\]](#) on page 978

Sweep type

Sets the type of the sweep, a linear or logarithmic change of the frequency.

Remote command:

[WGENerator<wg>:SWEep:TYPE](#) on page 979

Start frequency

Sets the start frequency of the sweep signal.

Remote command:

[WGENerator<wg>:SWEep:FStart](#) on page 979

Stop frequency

Sets the stop frequency of the sweep signal.

Remote command:

[WGENerator<wg>:SWEep:FEND](#) on page 979

Sweep time

Sets the duration of the sweep.

Remote command:

[WGENerator<wg>:SWEep:TIME](#) on page 979

15.1.4 Arbitrary waveforms

The arbitrary waveform generator allows you to output a user-defined waveform for testing your devices. An arbitrary waveform is copied from an existing waveform on the instrument, or loaded from file. You can load CSV files that follow a defined structure, or saved reference waveforms.

See also: [Chapter 15.3.4, "Configuring an arbitrary waveform"](#), on page 497.

15.1.4.1 Arbitrary waveform files

You can load CSV files that have a Rohde & Schwarz WaveGen format.

Content and format of the Rohde & Schwarz arbitrary waveform CSV files

The waveform generator format can contain the following values:

- Rate
- Time value
- Voltage value

If all the values are defined, the file format is as follows:

```
Rate = 5000000           //Sample rate of the arbitrary waveform.
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0     //Time value 2, Voltage value 2
.....
```

In this case, the rate is reflected in the "Sample Rate" field of the user interface. The total number of Time/Voltage values is reflected in the "Samples" of the user interface. Anything written after // is ignored as a comment.

You can define only some of the values. According to what you define, the file format looks different and is handled differently:

- With specified *Rate*:

Time values are ignored. You can specify just rate and voltage values as below:

```
Rate = 5000000           //Sample rate of the arbitrary waveform
-5.995                  //Voltage value 1
-6.0                    //Voltage value 2
.....
```

- Without specified *Rate* and without specified *Time* values:
The last user-defined sample rate is used to calculate the waveform. You can change the "Sample rate" in the user interface. The voltage values are then played with this sample rate.

```
-5.995                  //Voltage value 1
-6.0                    //Voltage value 2
.....
```

- Without specified *Rate* and with specified *Time*:
The timing information of the first 2 time values is used to calculate the sample rate.

Example:

Consider the following file:

```
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0     //Time value 2, Voltage value 2
```


The sample rate is:

$Sample\ rate = 1 / Time\ between\ first\ two\ samples = 1 / 1.237011E-005 = 80.840K\ Sample/sec$

15.1.4.2 Arbitrary settings

Access: "Gen" signal activator > "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Arbitrary"

The following settings in the "Setup" tab and the "Arbitrary Setup" dialog are specific for generated arbitrary waveforms.

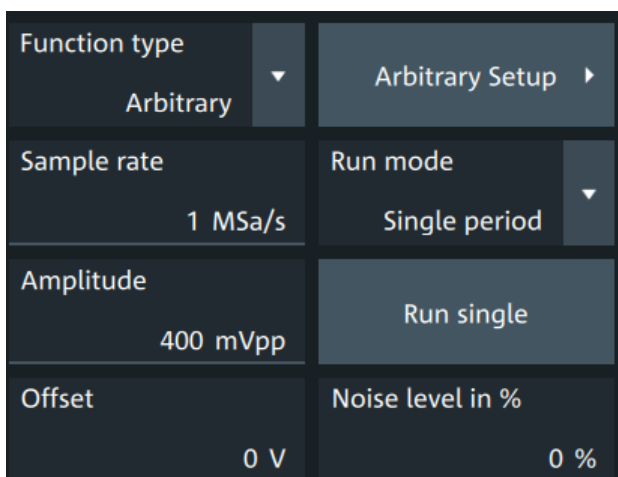

Run mode.....492
 Run single..... 492
 Arbitrary Setup..... 492
 Arb wfm source..... 493
 Sample rate.....493
 Number of samples.....493
 Open..... 493

Run mode

Selects the duration for which the signal of the arbitrary generator is output after the trigger event. You can choose between a "Continuous" and "Single period" duration.

Remote command:

[WGENerator<wg>:ARBGen:RUNMode](#) on page 977

Run single

Generates a single period of the arbitrary waveform if "Run mode" is set to "Single period".


If you load the arbitrary waveform from file, first load the file, and then connect the DUT. See also: "[Open](#)" on page 493.

Remote command:

[WGENerator<wg>:ARBGen:RUNSingle](#) on page 977

Arbitrary Setup

Opens a dialog to define the arbitrary waveform.

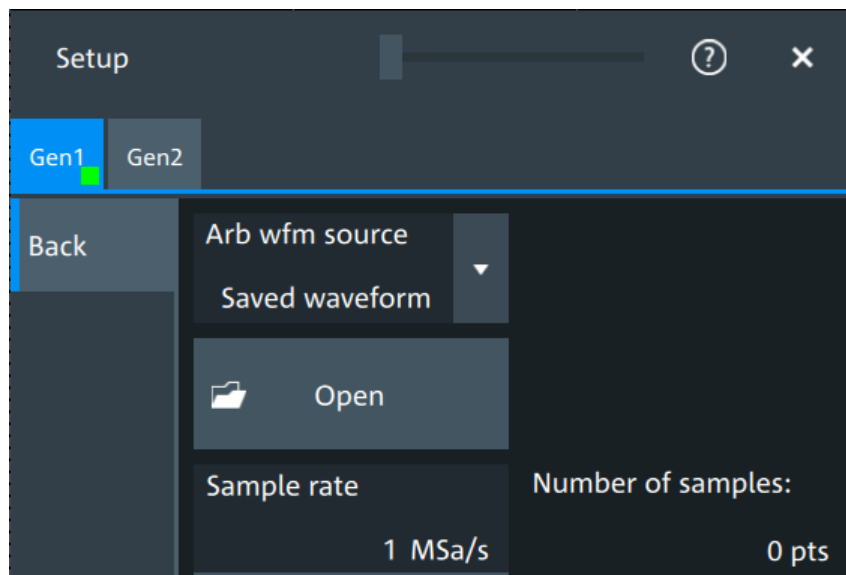

Arb wfm source

Selects the source of the arbitrary waveform.

You can load CSV files that follow a defined structure, or saved reference waveforms. See also: ["Open"](#) on page 493.

Remote command:

[WGENerator<wg>:ARBGen\[:SOURCE\]](#) on page 978

Sample rate

Sets the sample rate for the arbitrary waveform.

If the sample rate is given in the arbitrary waveform file (CSV or REF file), the instrument displays the value here, and you can change it. If no sample rate is available in the data, you can set the required sample rate.

Remote command:

[WGENerator<wg>:ARBGen:SRATe](#) on page 978

Number of samples

Displays the number of samples in the loaded waveform.

Remote command:

[WGENerator<wg>:ARBGen:SAMPles?](#) on page 977

Open

Opens a dialog to select the saved waveform, and loads the file. The setting is available if "Arb wfm source" is set to "Saved waveform".

You can load CSV files, or REF waveforms (saved reference waveforms). See also: [Chapter 15.1.4.1, "Arbitrary waveform files"](#), on page 490.

When the file is loaded, the output voltage is set to the value of the first sample in the file. Therefore, if you want to output single periods of the arbitrary waveform, first load the waveform file, and then connect the DUT.


Remote command:

[WGENerator<wg>:ARBGen:NAME](#) on page 976

[WGENerator<wg>:ARBGen:OPEN](#) on page 976

15.2 Synchronize settings

Access: "Menu" > "Apps" > "Gen1" > "Synchronisation" tab.

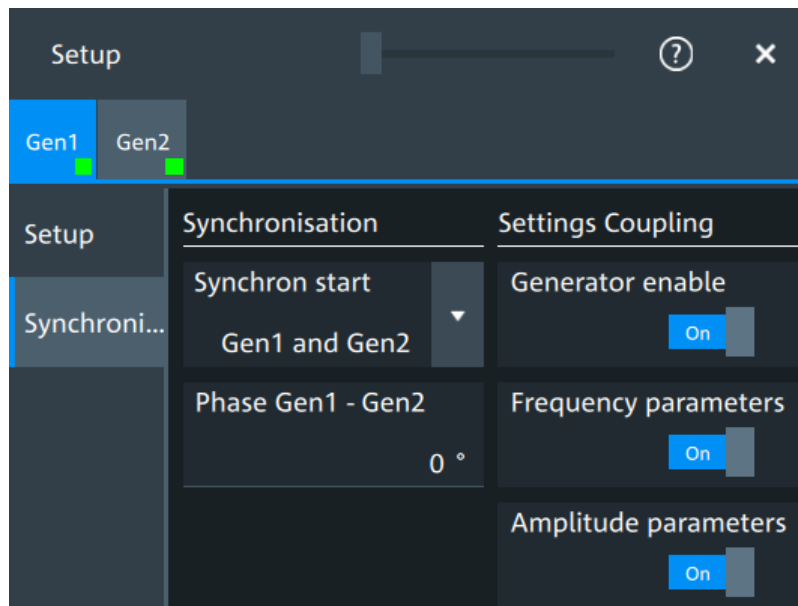

Synchron start

Selects, which signals generated from the waveform generator are synchronized.

Selecting one of the sync options indicates that the first samples of those signals are generated at the same time, irrespective of if the generators are on or off. Selecting one of the coupling options automatically syncs the signals generated by the two waveform generators.

Remote command:

[WGENerator:SYNC\[:COMBination\]](#) on page 981

Generator enable

Enables the coupling of the generators, with the selected set of parameters: amplitude and frequency.

Remote command:

[WGENerator<wg>:COUpling:STATe](#) on page 980

Frequency parameters

Couples all frequency parameters of "Gen1" and "Gen2". The values are taken from the currently selected generator.

You can still change the other settings of the generators independently.

Remote command:

[WGENerator<wg>:COUPling:AMPLitude](#) on page 980

Amplitude parameters

Couples all amplitude parameters of "Gen1" and "Gen2" including the load. The values are taken from the currently selected generator.

Remote command:

[WGENerator<wg>:COUPling\[:FREQuency\]](#) on page 981

Phase Gen1 - Gen2

Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Remote command:

[WGENerator<wg>:COUPling:PHASeshift](#) on page 981

15.3 Configuring the waveform generator

This chapter explains step by step how to configure the waveform generator.

- [Configuring a function waveform](#).....495
- [Configuring a modulation waveform](#).....495
- [Configuring a sine sweep waveform](#).....497
- [Configuring an arbitrary waveform](#).....497

15.3.1 Configuring a function waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, select the "Function type" that you want to generate, e.g. "Sine".
4. Depending on the selected "Function type", configure the settings of the waveform like "Frequency" and "Amplitude".
5. If necessary, change the "User load" settings, or add "Noise level in %" to the waveform.
6. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

15.3.2 Configuring a modulation waveform

Generating an AM modulated waveform

1. Tap the "Gen" signal activator.

2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "AM".
6. Set the "Carrier frequency" and the "Carrier period".
7. Tap "Modulation signal", and select the required waveform.
8. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Modulation depth".
9. Set "Modulation state" = "On" to enable the modulation.
10. Press "Back" to return to the "Setup" tab.
11. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FM".
6. Select the "Signal type".
7. Set the "Frequency" and the "Deviation".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FSK modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FSK".
6. Set the "Frequency 1", "Frequency 2" and the "FSK rate".
7. Set "Modulation state" = "On" to enable the modulation.

8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating a PWM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Square".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "PWM".
6. Tap "Signal type", and select the required waveform.
7. Configure the settings of the waveform like "Frequency" and "Modulation depth".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

15.3.3 Configuring a sine sweep waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set "Function type" = "Sine".
4. Press "Sweep" to open the sweep dialog.
5. Select the "Sweep type".
6. Set the "Start frequency", the "Stop frequency" and the "Sweep time".
7. Set "Sweep state" = "On" to enable the sweep.
8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

15.3.4 Configuring an arbitrary waveform

For a description of the settings, see [Chapter 15.1.4, "Arbitrary waveforms"](#), on page 490.

Generating an arbitrary waveform from a saved file

If you want to output single periods of the arbitrary waveform, first set up the generator, and then connect the DUT.

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen1" or "Gen2".
3. In the "Setup" tab, set "Function type" = "Arbitrary".
4. Select "Arbitrary Setup" to open the arbitrary dialog.
5. Set the "Arb wfm source" to "Saved waveform".
6. Set the "Sample rate" if it is not defined in the file data.
7. Check "Number of samples".
8. Select "Back" to return to the "Setup" tab.
9. Select the "Run mode".
10. If "Run mode" = "Repetitive", set "State" = "On" to output the waveform at the output connector of the waveform generator.
11. If "Run mode" = "Single period":
 - a) Connect the DUT.
 - b) Set "State" = "On" to enable the output of the waveform generator.
 - c) Tap "Run single" to output one waveform.

Generating an arbitrary waveform from the scope waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen1" or "Gen2".
3. In the "Setup" tab, set "Function type" = "Arbitrary".
4. Select "Arbitrary Setup" to open the arbitrary dialog.
5. Set the "Arb wfm source" to "Scope waveform".
6. Select the "Signal source", the waveform source for the generated waveform.
7. Tap "Update" to load the selected waveform.
8. Press "Back" to return to the "Setup" tab.
9. Select the "Run mode".
10. Set "State" = "On" to enable the output of the generated waveform.
11. If "Run mode" = "Single period", tap "Run single" to output one waveform.

16 Network operation and remote control

The operating system is the basis of the instrument's firmware, it provides basic functions such as logon, password protection, virus protection, and connection to a network.

In addition to working with the MXO 4 directly, using the touchscreen and the keys, you can also operate the instrument from a remote PC. Various methods of remote operation and control in a LAN network are supported:

- Using the web interface
- Using a VNC client
- Remote control with SCPI commands



The following descriptions provide information required for operating the MXO 4 remotely. Definitions specified in the SCPI standard are not provided.

For basic knowledge on remote control operation and additional information, see the following documents, available on the Rohde & Schwarz website:

- [Remote control via SCPI](#)
- [Connecting the instrument to the network \(LAN\)](#)..... 499
- [Web interface](#)..... 501
- [Remote operation with VNC client](#)..... 507
- [Remote control](#)..... 507
- [Remote control - status reporting system](#)..... 510

16.1 Connecting the instrument to the network (LAN)

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

16.1.1 Connecting the instrument to the network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

To connect a LAN cable

- ▶ Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

16.1.2 Assigning the IP address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports the Dynamic Host Configuration Protocol (DHCP), the address is assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use manual configuration, the addresses must be set manually.

By default, the instrument is configured to use DHCP and obtains all address information automatically. Thus it is safe to establish a physical connection to the LAN without any previous instrument configuration.

To assign the IP address manually on the instrument

1. **NOTICE!** Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN.
Contact your network administrator to obtain a valid IP address.
2. Open "Menu" > "Settings".
3. Select "System" > "Network" > "Advanced".
4. Disable "Automatic IP (DHCP)".
5. Enter the address information as obtained from the network administrator.

16.1.3 Using host names

In a LAN that uses a DNS server (Domain Name System server), each computer and instrument in the LAN can be accessed via an unambiguous host name (or computer name) instead of the IP address. The DNS server translates the host name to the IP address. Host names are useful when a DHCP server is used, as a new IP address can be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned host name, but you can change this name.

The default host name is the device name, a non-case-sensitive string with the following syntax: <instrument_model>-<serial_number>.

For example, the default host name of an MXO44 with serial number 123456 is MXO44-123456.

You can find the current host name, the model and the serial number in the "Device summary", when you tap the Rohde & Schwarz logo in the upper right corner of the screen. See also: [Chapter 4.12, "Information and notifications"](#), on page 72.

The serial number can also be found on the rear panel of the instrument. It is the third part of the device ID printed on the barcode sticker:



To change the host name

1. Open the "Menu".
2. Select "Settings" > "System" > "Network".
3. In "Device name", enter the new host name.
4. Confirm the entry.
5. Reboot the instrument.

16.2 Web interface

If the MXO 4 is connected to a computer via LAN, you can operate the instrument from the computer. No additional tools are required, you need only a web browser.

16.2.1 Settings on the MXO 4



The connection status icon in the upper right corner indicates the status of the LAN connection. A green icon indicates that the instrument is connected to the LAN; a red symbol indicates a connection error - mostly the LAN cable is not connected.


The "Network" tab of the "System" dialog box provides network information and settings. See [Chapter 5.1.2, "Network settings"](#), on page 77.

16.2.2 Web browser

The instrument's web interface works with all W3C compliant browsers.

1. Open a browser on a computer connected to the instrument via LAN.
2. Type the instrument's host name or IP address in the address field of the browser on your PC, e.g. "http://11.111.11.222".

The instrument homepage opens.

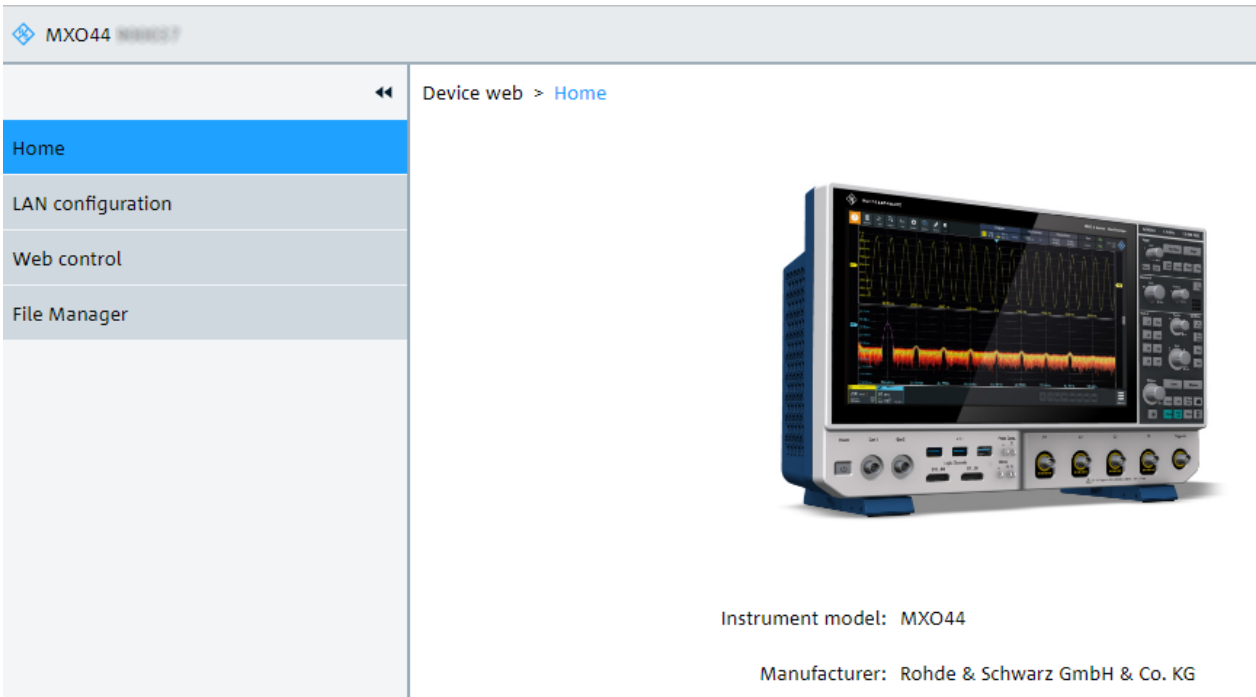

MXO44

Device web > Home

Home

LAN configuration

Web control

File Manager

Instrument model: MXO44

Manufacturer: Rohde & Schwarz GmbH & Co. KG

The instrument homepage displays the device information in read-only format, including DNS host names and the VISA resource string.

The navigation menu of the browser interface has the following items:

- "LAN configuration" opens the menu with configuration pages.
- "Web control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.
- "File manager" provides access to the user data that is saved on the instrument, upload and download.

16.2.2.1 LAN configuration

The LAN configuration consists of several parts:


- "General"
- "IP configuration" provides all mandatory LAN parameters.

- "Advanced configuration" provides LAN settings that are not declared mandatory by the standard.
- "Ping client" provides the ping utility to verify the connection between the instrument and other devices.

Changing the LAN parameters requires the "Web Ifc Password" password, which is set on the instrument.

IP configuration

The "LAN Configuration > IP configuration" webpage displays all mandatory LAN parameters and allows their modification. Changing the LAN parameters requires the "Web Ifc Password" password, which is set on the instrument.

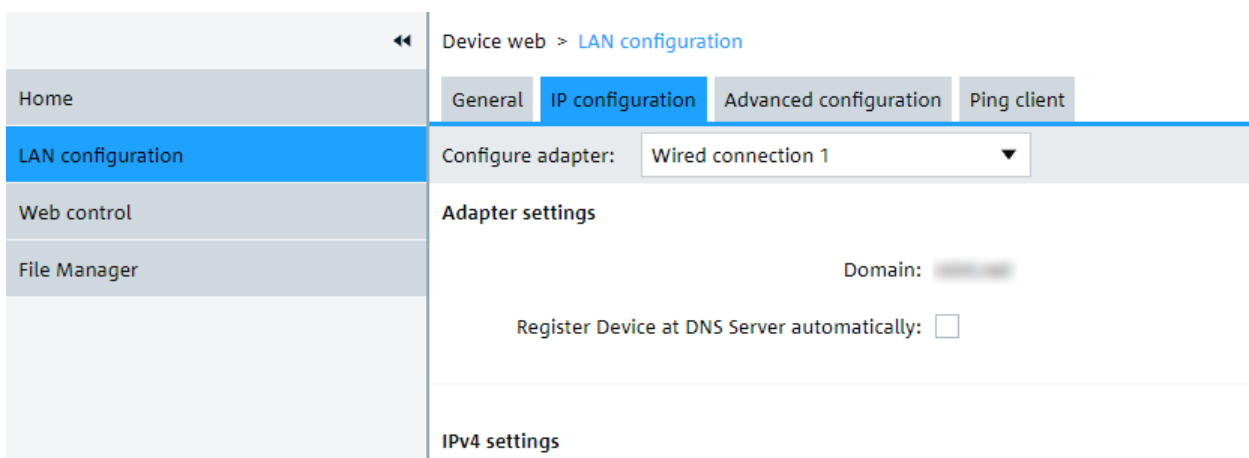

The "IP address mode" controls how the IP address for the instrument gets assigned. For the manual configuration mode, at least the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses DHCP server or Dynamic Link Local Addressing to obtain the instrument IP address.

The same settings are available on the instrument under "Menu" > "Settings" > "System" > "Network" > "Advanced".

Advanced configuration

The "LAN Configuration > Advanced configuration" parameters are used as follows:

- mDNS and DNS-SD are two additional protocols: Multicast DNS and DNS Service Discovery. They are used for device communication in zero configuration networks working without DNS and DHCP.
- "ICMP ping" must be enabled to use the ping utility.
- "VXI-11" is the protocol that is used to detect the instrument in the LAN.

The screenshot shows the web interface for LAN configuration. The breadcrumb trail is "Device web > LAN configuration". The navigation tabs are "General", "IP configuration", "Advanced configuration" (selected), and "Ping client". The left sidebar contains "Home", "LAN configuration" (selected), "Web control", and "File Manager".

Device settings

mDNS and DNS-SD:

IPv4 settings

ICMP ping:

VXI-11 discovery:

IPv6 settings

ICMP ping:

Privacy extension:

Ping client

Ping is a utility that verifies the connection between the instrument and another device. The ping command uses the ICMP echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

The screenshot shows the "Ping client" page in the web interface. The breadcrumb trail is "Device web > LAN configuration". The navigation tabs are "General", "IP configuration", "Advanced configuration", and "Ping client" (selected). The left sidebar contains "Home", "LAN configuration" (selected), "Web control", and "File Manager".


Destination address:

To initiate a ping between the compliant instrument and a second connected device:

1. Enable "ICMP ping" on the "Advanced configuration" page (enabled by default).
2. On the "Ping client" page, enter the IP address of the second device **without the ping command and without any further parameters** into the "Destination address" field (e.g. *11.113.11.203*).
3. Click "Submit".

16.2.2.2 Web control

"Web Control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.

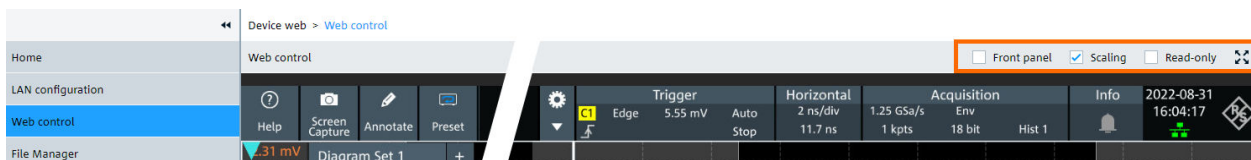


In the upper right corner above the emulated display, you see some options:

- "Front panel" hides or shows the front panel.
- "Scaling" scales the diagram to show it completely. If disabled, the diagram is shown in its original size.
- "Read-only" disables operating, only viewing is possible
- The arrows icon hides or shows the menu.

16.2.2.3 File manager

The file manager on the instrument's webpage provides access to the user data that is stored on the instrument, or on a USB flash device connected to the instrument.

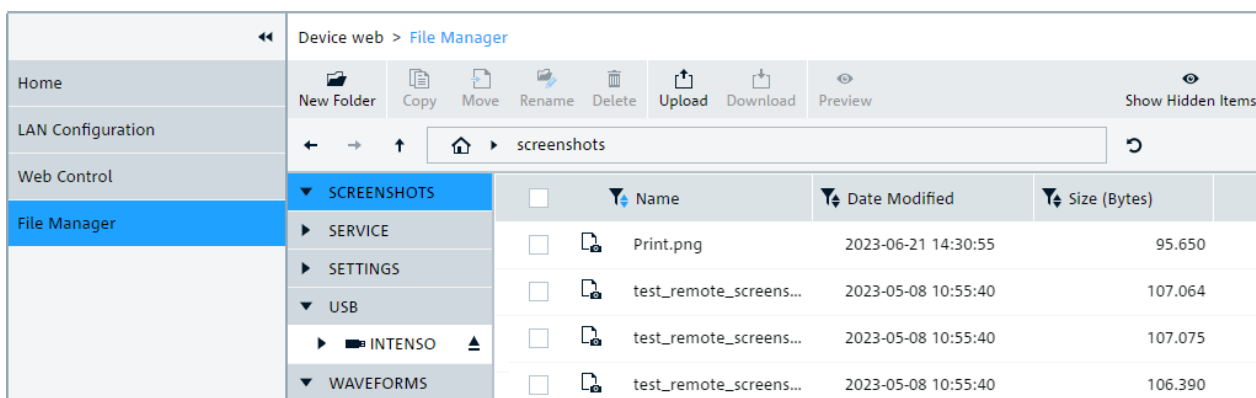

In the web file manager, you can organize the data:

- Create folders
- Copy files within the instrument's file system, or from and to USB flash device. Multiple files selection is possible.
- Move files within the instrument's file system, or from and to USB flash device. Multiple files selection is possible.
- Rename files
- Delete files
- Upload files from the operating computer to the instrument. Multiple files can be uploaded at once.

- Download files from the instrument to the operating computer. Multiple files selection is possible.
- Preview file content of text files with maximum size of 500 kbyte.

After attaching a USB flash device, creating a screenshot or other actions, the file manager might not display the last change:

- ▶ Click the "Refresh" icon on the right of the address field to update the display.

Note that the "Eject" button for USB flash devices has no function when operating the instrument remotely.

16.2.2.4 Mapping the instrument's file system as network drive

Using web-based distributed authoring and versioning (WebDAV), you can access and exchange files over the internet: move, cut, copy and paste files from the instrument to the computer and vice versa. Therefore, map the instrument's file system as network drive in the file explorer of the operating computer:

The instrument is connected to LAN, and the connection status icon in the upper right corner of the instrument's display is green.


1. Open the file explorer on the operating computer.
2. In the left list, right-click "Network" or the entry of the operating computer, and select "Map network drive".
3. Enter the path to the instrument's file system:

`http://<hostname>/webdavData.`

Example: `http://MXO44-123456/webdavData`

 
You can find the hostname in the "Device summary", which is shown when you tap the Rohde & Schwarz logo in the upper right corner of the instrument's screen. The default host name is `<instrument_model>-<serial_number>`.


4. Activate "Connect using different credentials".

←  Map Network Drive

What network folder would you like to map?

Specify the drive letter for the connection and the folder that you want to connect to:

Drive: 

Folder: 

Example: `\\server\share`

Reconnect at sign-in

Connect using different credentials

[Connect to a Web site that you can use to store your documents and pictures.](#)

5. Click "Finish".

6. Leave the "User name" and "Password" empty. Click "OK".

If there are problems with the connection, check if the "WebClient" service is running: "Task Manager" > "Services" tab. If the "WebClient" service is not running, start it.

16.3 Remote operation with VNC client

If the MXO 4 is connected to a computer via LAN, you can operate the instrument from the computer using a VNC client. Therefore, install a VNC client on the computer.

To operate the instrument via VNC client:

1. Start the VNC client.
2. Enter the hostname (device name) of the instrument. You find the name in the instrument information on the oscilloscope. Tap the Rohde & Schwarz logo to show the information.
3. Connect to the instrument.

You see the display of the oscilloscope and can use the menus, dialogs, SmartGrid and all operating means of the display.

16.4 Remote control

Remote control automates the operation of the instrument using SCPI commands, scripts and programs.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scp.

The following sections describe the instrument-specific basics of remote control. SCPI commands are listed and described in chapter [Chapter 17, "Remote control commands"](#), on page 520.

- [Remote control interfaces and protocols](#).....507
- [Starting and stopping remote control](#)..... 509

16.4.1 Remote control interfaces and protocols

The instrument supports different interfaces for remote control. The following table gives an overview.

Table 16-1: Remote control interfaces and protocols

Interface	Protocols, VISA address string	Remarks
Local Area Network (LAN)	<p>Protocol HiSLIP</p> <p>VISA address string: TCP/IP::<host address="">:: hislip0[, <port>] [::INSTR]</host></p> <p>Protocol VXI-11</p> <p>VISA address string: TCP/IP::<host address="">:: inst0]::[INSTR]</host></p>	<p>The LAN connector is located on rear panel of the instrument.</p> <p>The interface is based on TCP/IP and supports various protocols.</p>

16.4.1.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The interface details are given in the specifications.

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ-45 cable (shielded or unshielded twisted-pair category 5 or better). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

IP address

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by programs to identify and control the instrument. The VISA resource string has the form:

TCP/IP::::hislip0[, <port>] [::INSTR] for HiSLIP protocol

TCP/IP::::inst0] [::INSTR] for VXI-11 protocol

Where:

- `host address` identifies the instrument in the network, usually the IP address. If the LAN is supported by a DNS server, the host name can be used instead of the IP address. The DNS server (Domain Name System server) translates the host name to the IP address.
- `hislip0` indicates the HiSLIP protocol.
- `inst0` is the default LAN device name. VISA supports several devices running on the instrument. On MXO 4, only one device is configured, so the LAN device name can be omitted.
- `INSTR` specifies a VISA resource of the type INSTR. By default, the VISA resource name control is set to the INSTR class.

Example: HiSLIP

IP address is *192.1.2.3*: the valid resource string is: `TCPIP::192.1.2.3::hislip0`

Instrument name is *RSRT1*: the valid resource string is: `TCPIP::RSRT1::hislip0`.

DNS host name is *MXO 4-123456*: the valid resource string is:

`TCPIP::MXO 4-123456::hislip0`.

Example: VXI-11

IP address is *192.1.2.3*: the valid resource string is: `TCPIP::192.1.2.3`

Instrument name is *RSRT1*: the valid resource string is: `TCPIP::RSRT1`.

DNS host name is *MXO 4-123456*: the valid resource string is:

`TCPIP::MXO 4-123456`.

16.4.2 Starting and stopping remote control

16.4.2.1 Starting a remote control session

When you switch on the instrument, it is always in manual operation state ("local" state). It can be operated via the front panel, the touchscreen and external keyboard and/or mouse.

- ▶ To start remote control:
 - Send a command from the controller.
 - VXI-11 protocol (LAN or USB interface): Use `>R` interface message.

While remote control is active, the instrument settings are optimized for maximum measurement speed; the display is switched off. Operation via the front panel is disabled.

On the touchscreen, two buttons appear in the upper left corner: "Local" and "View".

16.4.2.2 Using the display during remote control

You can observe the screen while a remote control script is executed. Displaying the results of script execution is helpful for program test purposes but tends to slow down the measurement. Therefore it is recommended that you switch off the display in real measurement applications where a tested program script is to be executed repeatedly.

- ▶ To switch on the display, do one of the following:
 - Tap the "View" button in the upper left corner of the touchscreen.
 - Use the `SYSTem:DISPlay:UPDate ON` command.
- ▶ To switch off the display, do one of the following:
 - Tap the "View" button again.

- Use the `SYSTem:DISPlay:UPDate OFF` command.

16.4.2.3 Returning to manual operation

The instrument switches back to manual operation when the remote connection is closed. Besides, you can return to manual operation manually or via remote control.

- ▶ To return to manual operation:
 - Tap the "Local" button in the upper left corner of the touchscreen.
 - VXI-11 protocol: Use `>L` interface message.

16.5 Remote control - status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via `STATus...` commands.

16.5.1 Hierarchy of status registers

As shown in the following figure, the status information is of hierarchical structure.

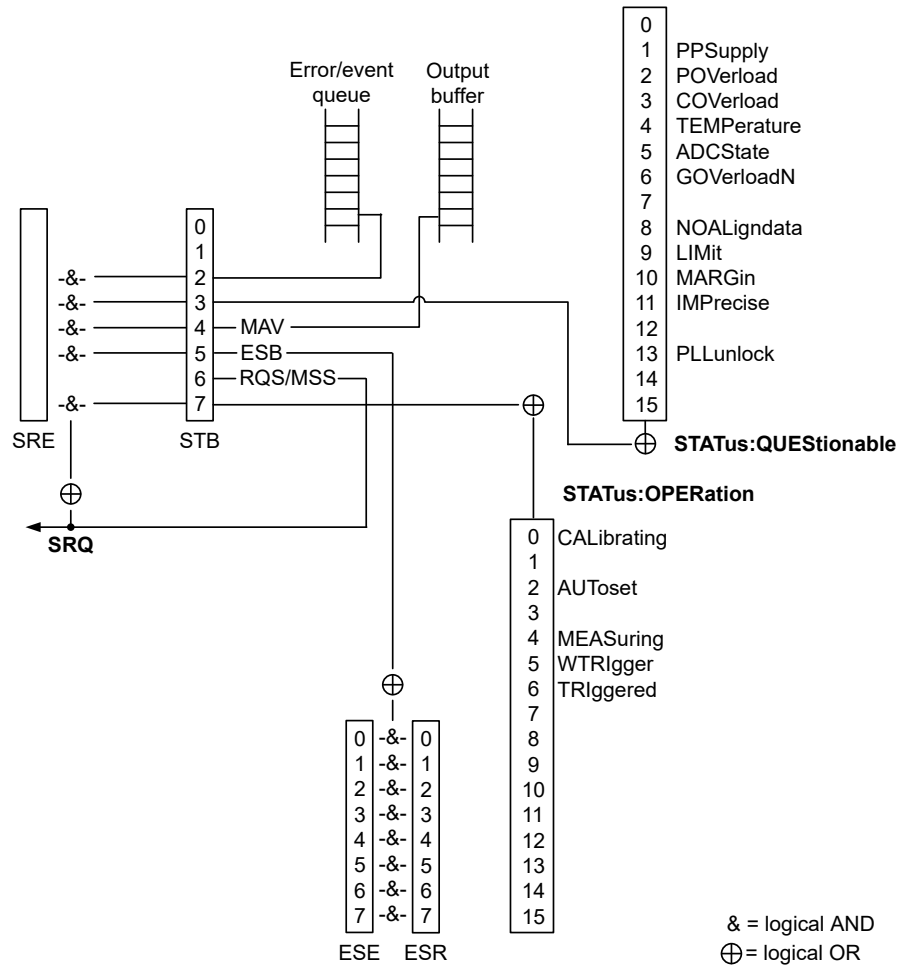


Figure 16-1: Overview of the status registers hierarchy

- STB, SRE**

The STatus Byte (STB) register and its associated mask register Service Request Enable (SRE) form the highest level of the status reporting system. The STB provides a rough overview of the instrument status, collecting the information of the lower-level registers.
- ESR and SCPI registers**

The STB receives its information from the following registers:

 - The Event Status Register (ESR) with the associated mask register standard Event Status Enable(ESE).
 - The STATUS:OPERation and STATUS:QUESTIONable registers which are defined by SCPI and contain detailed information on the instrument.
- Output buffer**

The output buffer contains the messages that the instrument returns to the controller. It is not part of the status reporting system but determines the value of the `MAV` bit in the `STB` and thus is represented in the overview.


All status registers have the same internal structure.

16.5.2 Structure of a SCPI status register

The `STATUS:OPERation` and the `STATUS:QUESTIONable` SCPI status registers consists of five parts.

The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.

Description of the five status register parts

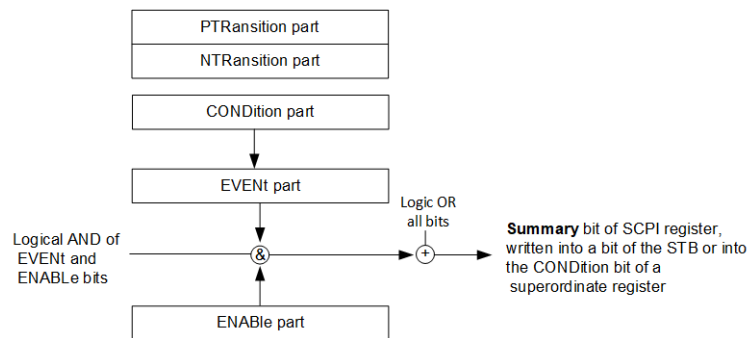

The five parts of a SCPI status register have different properties and functions:

- CONDition**

The `CONDition` part reflects the current instrument status. For summary bits, the `CONDition` bit mirrors the sum of the enabled `EVENT` bits of the next lower register.

This register part can only be read, but not written into or cleared. Its contents are not affected by reading.
- PTRansition / NTRansition**

The two transition register parts define which state transition of the `CONDition` part (none, 0 to 1, 1 to 0 or both) is stored in the `EVENT` part.

The **Positive-TTransition** part acts as a transition filter. When a bit of the `CONDition` part is changed from 0 to 1, the associated `PTR` bit decides whether the `EVENT` bit is set to 1.

 - `PTR` bit =1: the `EVENT` bit is set.
 - `PTR` bit =0: the `EVENT` bit is not set.

All positive transitions are enabled by default.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-Transition** part also acts as a transition filter. When a bit of the `CONDition` part is changed from 1 to 0, the associated `NTR` bit decides whether the `EVENT` bit is set to 1.

- `NTR` bit =1: the `EVENT` bit is set.
- `NTR` bit =0: the `EVENT` bit is not set.

All negative transitions are disabled by default.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The `EVENT` part indicates whether an event has occurred since the last reading. It is the "memory" of the condition part. It allows you to detect the occurrence of events reliably, even if they have changed the state of the `CONDition` bit for a very brief interval. It only indicates events passed on by the transition filters. This part can only be read by the user. **Reading the register clears it.**

- **ENABLE**

The `ENABLE` part determines whether the associated `EVENT` bit contributes to the summary bit (see below). Each bit of the `EVENT` part is "ANDed" with the associated `ENABLE` bit (symbol '&'). The results of all logical operations of this part are passed on to the summary bit via an "OR" function (symbol '+').

`ENABLE` bit = 0: the associated `EVENT` bit does not contribute to the summary bit
`ENABLE` bit = 1: if the associated `EVENT` bit is "1", the summary bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

16.5.3 Contents of the status registers

16.5.3.1 Status byte (STB) and service request enable register (SRE)

The `STatus Byte` (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the `CONDition` part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command `*STB?` or a serial poll.

The `STatus Byte` (STB) is linked to the `Service Request Enable` (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command `*SRE` and read using the command `*SRE?`.

Table 16-2: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTionable status register summary bit The bit is set if an EVENT bit is set in the QUESTionable status register and the associated ENABLE bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the STATus:QUESTionable status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STATus:OPERation status register summary bit The bit is set if an EVENT bit is set in the OPEration status register and the associated ENABLE bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the STATus:OPERation status register.

16.5.3.2 Event status register (ESR) and event status enable register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVENT part of a SCPI register. The event status register can be read out using command *ESR?.

The ESE corresponds to the ENABLE part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set.

The ESE register can be set using the command *ESE and read using the command *ESE?.

Table 16-3: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation complete This bit is set on receipt of the command *OPC exactly when all previous commands have been executed.
1	Not used

Bit No.	Meaning
2	Query error This bit is set if the controller wants to read data from the instrument without having sent a query. It is also set if the controller does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User request This bit is set when the instrument is switched over to manual control.
7	Power on (supply voltage on) This bit is set when you turn on the instrument.

16.5.3.3 STATus:OPERation register

In the `CONDition` part, this register contains information on which actions the instrument is executing. In the `EVENT` part, it contains information on which actions the instrument has executed since the last reading.

It can be read using the commands `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENT]?`, see also [Chapter 17.19.2, "STATus:OPERation register"](#), on page 982.

Table 16-4: Bits in the STATus:OPERation register

Bit No.	Meaning
0	<code>ALIGNment</code> This bit is set as long as the instrument is performing a self-alignment.
1	Not used
2	<code>AUTOset</code> This bit is set while the instrument is performing an auto setup.
3	Not used
4	<code>MEASuring</code> The bit is set as long as an acquisition - sampling and postprocessing - is running. In run continuous mode, the bit is always set.

Bit No.	Meaning
5	<p>WTRigger</p> <p>Available only for single acquisitions or the first acquisition of continuous acquisitions.</p> <p>The wait for trigger status bit indicates that the instrument is ready to trigger, and the pre-trigger time is expired.</p> <p>The bit is set for as long as a measurement is running.</p>
6	<p>TRiggered</p> <p>Available only for single acquisitions or the first acquisition of continuous acquisitions.</p> <p>The triggered status bit indicates that the instrument has been triggered.</p>
7 - 15	Not used

16.5.3.4 STATUS:QUESTIONable register

This register contains specific information on instrument operation and signal reliability. It can be read using the commands `STATUS:QUESTIONable:CONDition?` and `STATUS:QUESTIONable[:EVENT]?`.

The remote commands for the STATUS:QUESTIONable register are described in [Chapter 17.19, "Status reporting"](#), on page 981.

Table 16-5: Bits in the STATUS:QUESTIONable register

Bit No.		Meaning
0	-	For future use.
1	PPSupply	This bit is set if probe power supply overload occurs.
2	POVerload	This bit is set if a probe overload occurs.
3	COVerload	This bit is set if a questionable channel overload occurs.
4	TEMPerature	This bit is set if a questionable temperature occurs.
5	ADCState	The bit is set if the signal is clipped on the upper or lower edge of the screen overflow of the ADC occurs.
6	GOVerload	This bit is set if a generator overload occurs.
7	-	For future use.
8	NOALigndata	This bit is set if no alignment data is available - the instrument is uncalibrated.
9	LIMit	This bit is set if a limit value is violated.
10	MARGin	This bit is set if a margin value is violated, and the limit value is not violated.
11	IMPRecise	This bit is set if the magnitude of the signal is too low to get reliable measurement results.
12	-	For future use.

Bit No.		Meaning
13	PLUnlock	This bit is set if a phase-locked loop process is unlocked. There are two reasons: <ul style="list-style-type: none"> external reference is missing or defect hardware defect of internal PLL
14	-	For future use.

16.5.3.5 Application of the status reporting system

The purpose of the status reporting system is to monitor the status of one or several instruments in a test system. In particular, it monitors continuous measurements to detect errors in the signal. The controller must receive and evaluate the information of all devices.

The following standard methods are used:

- **Service request:** An SRQ is initiated by the instrument.
- Query of a **specific register** by commands
- Query of the **error queue**

These methods are described in the following sections.

Service request

The instrument can send a service request (SRQ) to the controller. Usually, this service request initiates an interrupt at the controller, to which the control program can react appropriately.


An SRQ is initiated if one or several of bits 2, 3, 4, 5 or 7 of the STB are set and enabled in the SRE. Each of these bits combines the information of a lower-level register, the error queue or the output buffer.

The `ENABLE` parts of the status registers can be set such that arbitrary bits in an arbitrary status register initiate an SRQ. To use service requests effectively, set all bits to "1" in the mask registers SRE and ESE.

The SRQ is the only possibility for the instrument to become active on its own. Configure the instrument so that it initiates a service request if errors occur. And ensure that your program reacts appropriately to service requests.

Query of a register

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. Therefore, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

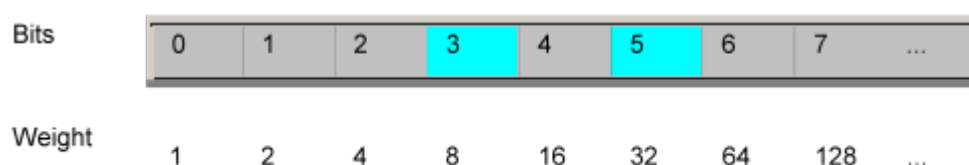**Example:**

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the `QUESTionable` status summary bit and the `ESB` bit in the `STatus` byte) are set.

16.5.4 Error queue

Each error state in the instrument leads to an entry in the error queue.

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

16.5.5 Reset values of the status reporting system

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except `*RST` and `SYSTEM:PRESet`, influence the functional instrument settings. In particular, `DCL` does not change the instrument settings.

Table 16-6: Resets of the status reporting system

Event	DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTEM: PRESet	STATUS: PRESet	*CLS
Clear STB, ESR	-	-	-	yes
Clear SRE, ESE	-	-	-	-
Clear EVENT parts of the registers	-	-	-	yes
Clear ENABLE parts of all OPERATION and QUESTionable registers; Fill ENABLE parts of all other registers with "1".	-	-	yes	-
Fill PTRansition parts with "1"; Clear NTRansition parts	-	-	yes	-
Clear error queue	-	-	-	yes

Event	DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTem: PRESet	STATus: PRESet	*CLS
Clear output buffer	yes	1)	1)	1)
Clear command processing and input buffer	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.				

17 Remote control commands

This chapter describes all remote commands available for MXO 4 and provides examples and information how to use the commands.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

See also [Chapter 16.4, "Remote control"](#), on page 507 and [Chapter 16.5, "Remote control - status reporting system"](#), on page 510 for further information on remote control.



The description of the remote commands, assume a MXO 4 with the highest available bandwidth. Depending on your model, some of the available command ranges can differ from the values stated in the following chapters.

17.1 Conventions used in remote command description

The basics of SCPI command structure, syntax and command parameters are explained in www.rohde-schwarz.com/rc-via-scpi.

The following conventions are used in the remote command descriptions:

- *Command usage*
If not specified otherwise, commands can be used both for setting and for querying parameters.
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- *Parameter usage*
If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.
Parameters required only for setting are indicated as "Setting parameters".
Parameters required only to refine a query are indicated as "Query parameters".
Parameters that are only returned as the result of a query are indicated as "Return values".
- *Conformity*
Commands that are taken from the SCPI standard are indicated as "SCPI confirmed". All commands used by the MXO 4 follow the SCPI syntax rules.
- *Asynchronous commands*
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an "Asynchronous command".
- *Reset values (*RST)*
Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as "*RST" values, if available.
- *Default unit*

The default unit is used for numeric values if no other unit is provided with the parameter.

17.2 Finding the appropriate command

In the following chapters, the commands are sorted according to the menu and dialog structure of the instrument.

A list of all commands in alphabetical order is given in the "List of Commands" at the end of this documentation.

To find the appropriate command for a setting easily, you can use the context help:

1. Enable the "Help" icon on the toolbar.
2. Tap the parameter for which you need information.
The "Help" window opens and displays the comprehensive description and the corresponding remote command.
3. Tap the remote command link to open the command description.

17.3 Frequently used parameters and suffixes

This chapter describes in general those parameters and suffixes that are used in several subsystems.

17.3.1 Waveform parameter

Many commands require one of the waveforms to be specified as source. The following table lists all waveforms. For each command using a waveform parameter, the available waveforms are specified in the command description.

Waveform	Description
C1 C2 C3 C4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 M1 M2 M3 M4 M5 R1 R2 R3 R4 CHAN1 = C1, CHAN2 = C2, CHAN3 = C3, CHAN4 = C4	Channel waveforms
M1 M2 M3 M4 M5	Math waveforms
R1 R2 R3 R4	Reference waveforms
SBUS1 SBUS2 SBUS3 SBUS4	Serial buses
D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15	Digital channels (option R&S MXO4-B1)

Waveform	Description
PBUS1 PBUS2 PBUS3 PBUS4	Digital buses (option R&S MXO4-B1)
SPECMAXH1 SPECMINH1 SPECNORM1 SPECAVER1	Spectrum traces: SPECMAXH1 : Spectrum1 maxhold SPECMINH1: Spectrum1 minhold SPECNORM1: Spectrum1 normal SPECAVER1: Spectrum1 average

17.3.2 Slope parameter

The slope parameter is used with several trigger and search condition commands.

Slope	Description
POSitive	Rising edge, which is a positive voltage change.
NEGative	Falling edge, which is a negative voltage change.
EITHer	Rising as well as the falling edge.

17.3.3 Polarity parameter

The polarity parameter is used with several trigger and search condition commands.

Polarity	Description
POSitive	Positive going pulses.
NEGative	Negative going pulses.
EITHer	Both positive and negative going pulses.

17.4 Programming examples

17.4.1 SmartGrid layout with zoom

The following example uses 3 sine waves, all with frequency 20 MHz and an amplitude of ± 0.4 V. The vertical scale is 100 mV/div, the time scale is 20 ns/div.


In the example, 2 layouts are created, waveforms are assigned, and zoom and spectrum are added.

For a description of the commands, see:


- [Chapter 17.7.2, "SmartGrid"](#), on page 535
- [Chapter 17.10.1, "Zoom"](#), on page 644

- Chapter 17.14.1, "Spectrum setup", on page 717


```
//Prepare: 3 channel signals.
//Enable C1, C2 and C3.
CHAN1:STAT 1
CHAN2:STAT 1
CHAN3:STAT 1
```

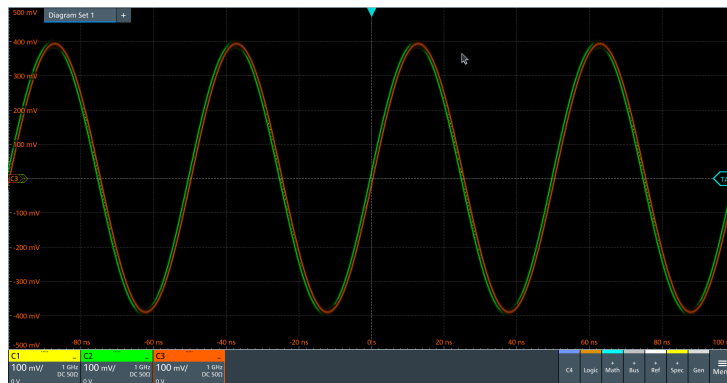

```
//Create new diagrams for C2 and C3.
//Assign sources C2 and C3 to these diagrams.
LAY:DIAG2:ENAB 1
LAY:DIAG2:SOUR C2
LAY:DIAG3:ENAB 1
LAY:DIAG3:SOUR C3
//Create new node (node 2) and assign new diagrams to that node
//Place C2 on top, C3 at bottom
LAY:NODE2:ENAB 1
LAY:NODE2:CHIL1:CONT:TYPE DIAG
LAY:NODE2:CHIL1:CONT:ID 2
LAY:NODE2:CHIL2:CONT:TYPE DIAG
LAY:NODE2:CHIL2:CONT:ID 3
LAY:NODE2:STYP VERT
//Insert node 2 into the base node (initial node)
//Diagram1 is initially located at child 1
LAY:NODE1:CHIL2:CONT:TYPE NODE
LAY:NODE1:CHIL2:CONT:ID 2
//Place both nodes side by side
LAY:NODE1:STYP HOR
```

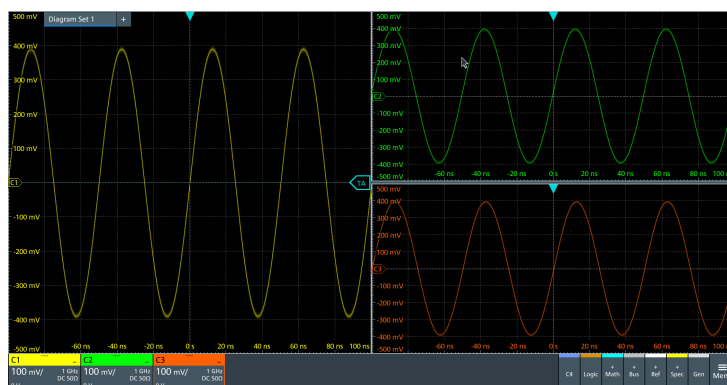


```
//Add zoom to C3. The zoom is located in diagram 3.
LAY:ZOOM:ENAB 1
LAY:ZOOM:SOUR 3
```

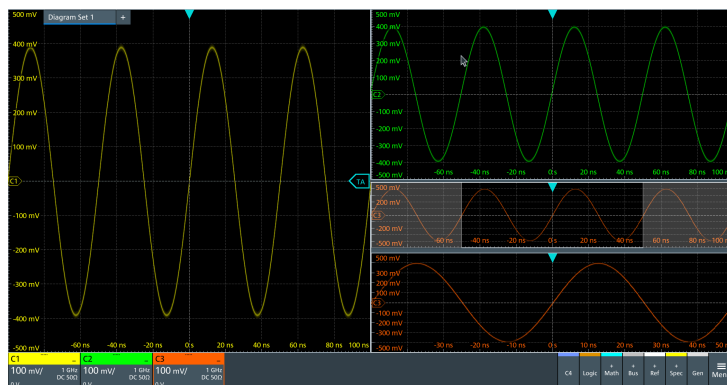


```
//Add a second layout with C1 and spectrum of C1.
//By default, the new layout is empty.
LAY2:ENAB 1
```




```
//Assign C1 to layout 2.
LAY2:DIAG1:SOUR C1
```

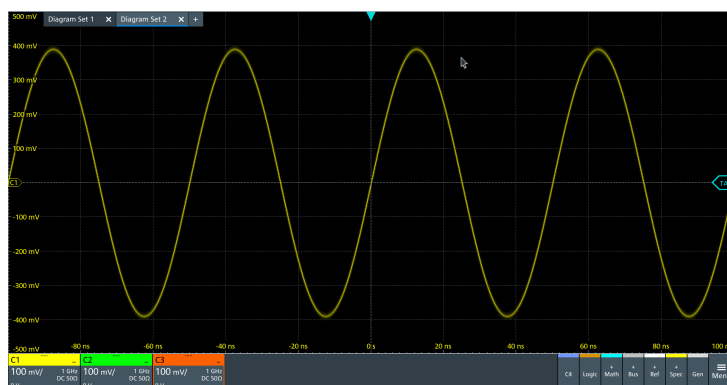


```
//Turn on spectrum of C1.
//By default, the spectrum is set below its analog source, and into the next
//free diagram (here diagram 2).
CALC:SPEC:STAT 1
CALC:SPEC:FREQ:CENT 20e6
CALC:SPEC:FREQ:SPAN 4e6
CALC:SPEC:FREQ:SCAL 15
```

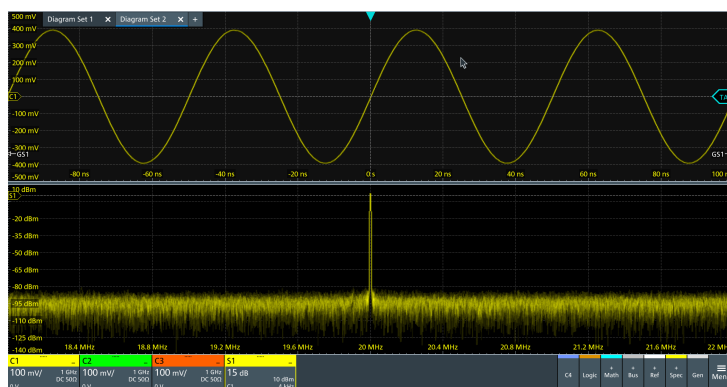


```
//Set C1 and spectrum side by side by changing the split type.
LAY2:NODE1:STYP HOR
```

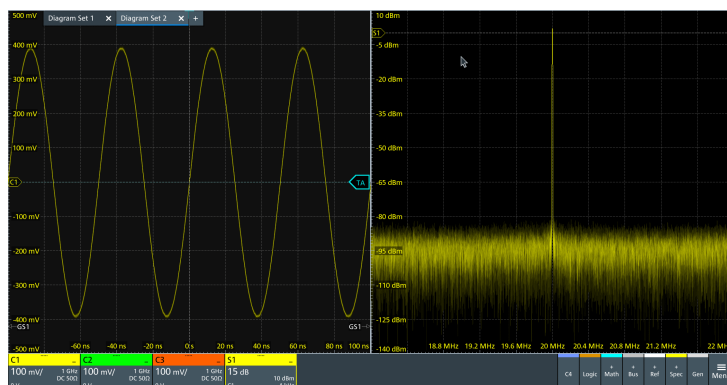


```
//Add zoom to spectrum. The zoom is located in layout 2, in diagram 2.
LAY2:ZOOM:ENAB 1
LAY2:ZOOM:SOUR 2
```

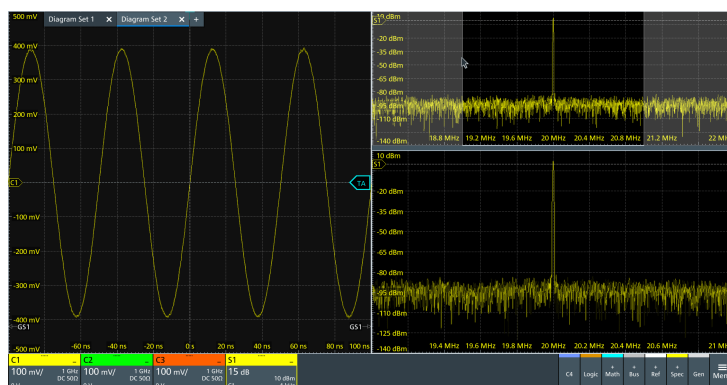

```
//Change zoom area.
LAY2:ZOOM:HOR:MODE REL
LAY2:ZOOM:HOR:REL:START 48
LAY2:ZOOM:HOR:REL:STOP 52
```

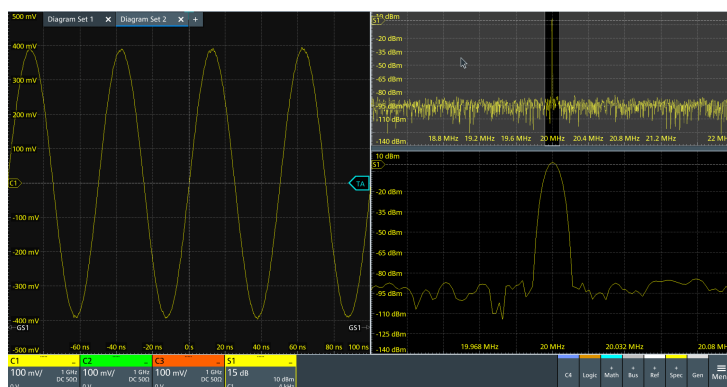

```
//Switch back to first layout (Tab 1).
LAY1:SACT
```

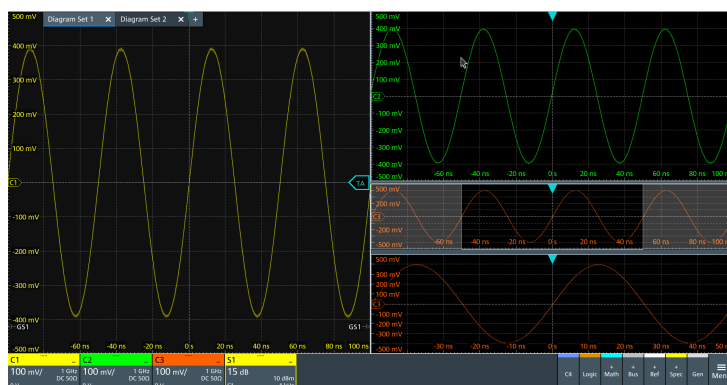

17.4.2 Saving screenshots to file

The example saves three display images in png format to the files `Print.png`, `Print_001.png`, and `Print_002.png` on USB flash drive in the directory `/run/media/usb/`. To get a correct screenshot, turn on the display first.

Command description in: [Chapter 17.11.6, "Screenshots"](#), on page 681.

In the following example *OPC prevents overlapping execution of asynchronous commands.

- Connect a USB flash drive to the instrument.

```
SYST:DISP:UPD ON
HCOP:DEST 'MME'
HCOP:DEV:LANG PNG
*OPC?
MME:NAME '/run/media/usb/Print.png'
HCOP:IMMEDIATE; *OPC?
HCOP:IMM:NEXT; *OPC?
HCOP:IMM:NEXT; *OPC?
```

17.4.3 Data transfer in roll mode

The example shows the effects of [EXPort:WAVeform:SCOPE](#) and [ACquire:ROLLmode:OScapture](#) in roll mode.

Sample rate mode and record length mode are set to AUTO, and the record length is 10 M points.

```
ACquire:SRATE:MODE AUTO
ACquire:POINTS:MODE AUTO
ACquire:POINTS?
--> 10000000
ACquire:ROLLmode:OScapture OFF
CHANnel:DATA:HEADer?
--> -5,4.999999,10000000,1 //10 M points of data are transferred
ACquire:ROLLmode:OScapture ON
EXPort:WAVeform:SCOPE DISP //Export of the displayed data
CHANnel:DATA:HEADer?
--> -5,4.999999,10000000,1 //10 M points of data are transferred
EXPort:WAVeform:SCOPE ALL //Export of all data
CHANnel:DATA:HEADer?
--> -31.702346,4.99999999,36702346,1 //36.7 M points of data are transferred
```

17.5 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL?	528
*CLS	528
*IDN?	528
*OPC	529
*OPT?	529
*RCL	529
*RST	529
*SAV	530
*SRE	530
*STB?	530
*TRG	530
*WAI	530

***CAL?**

Starts a self-alignment of the instrument, and then queries a status response. Return values $\neq 0$ indicate an error.

Return values:

<State>

- 0: no error
- 1: alignment failed
- 2: not aligned, e.g. init
- 3: device needs longer warmup time before selfalignment can start
- 4: input signal connected during selfalignment

Usage: Query only

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***IDN?**

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: Rohde&Schwarz, MXO4, 1335.5050K04/100222, 1.00.0.2
Model assignment:

Usage: Query only

Manual operation: See "[Instrument](#)" on page 77

*OPC

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

*OPT?

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the specifications document.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

*RCL <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command [*SAV](#) with the associated number.

The stored instrument settings do not include waveform generator settings.

It also activates the instrument settings which are stored in a file and loaded using [MMEMoRY:LOAD:STATe](#).

*RST

Reset

Sets the instrument to a default status. The default settings are indicated in the description of commands. Default settings are fixed, they are *not* changed by user-defined preset.

The command does not affect the waveform generator settings. To reset the generator, use [WGENerator<wg>:PRESet](#).

Usage: Setting only

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command ***RCL** with the associated number.

Waveform generator settings are not included.

To transfer the stored instrument settings to a file, use **MMEMory:STORe:STATe**.

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
 Bit 6 (MSS mask bit) is always 0.
 Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, ***TRG** generates a manual trigger signal. This common command complements the commands of the **TRIGger** subsystem.

***TRG** corresponds to the **INITiate:IMMediate** command.

Usage: Event

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and ***OPC**).

Usage: Event

17.6 General remote settings

This chapter describes commands that affect many other remote commands in different applications of the instrument.

FORMat[:DATA].....	531
FORMat:BPATtern.....	532
SYSTem:DISPlay:UPDate.....	532
SYSTem:DISPlay:MESSage:STATe.....	532
SYSTem:DISPlay:MESSage[:TEXT].....	532

FORMat[:DATA] [<Format>],[<Length>]

FORMat[:DATA]? [<Format>]

Selects the data type that is used for transmission of data from analog channels, math and reference waveforms, and some measurement results from the instrument to the controlling computer.

Setting parameters:

<Length> *RST: ASCii

Parameters for setting and query:

<Format> ASCii | REAL | INT

ASCii

Data values are returned in ASCII format as a list of comma-separated values in floating point format. The length can be omitted. It is 0 which means that the instrument selects the number of digits to be returned. The query returns both values (ASC, 0).

REAL,32

The data is stored as binary data (Definite Length Block Data according to IEEE 488.2). Each waveform value is formatted in 32-Bit IEEE 754 Floating Point Format.

The schema of the result string is as follows:

#41024<value1><value2>...<value n> with:

#4 = number of digits (= 4 in the example) of the following number

1024 = number of following data bytes (= 1024 in the example)

<value> = 4-byte floating point values

For large data (≥ 1 GB), the result string starts with "#(data length)". The number inside the parentheses indicates the real data length in bytes.

INT,8 | INT,16 | INT,32

Signed integer data with length 8 bit, 16 bit, or 32 bit.

The result string has the same schema as the REAL format.

For INT,16 you can set the byte order using the command.

For digital channel data, math and histogram data, INT formats are not available.

Example: FORMat:DATA REAL, 32
 FORMat:DATA?
 REAL, 32

Usage: SCPI confirmed
 Asynchronous command

Manual operation: See "[Transfer data format](#)" on page 80

FORMat:BPATtern <BtPattFmt>

Sets the number format for remote bit pattern queries on serial protocols.

Parameters:

<BtPattFmt> DEC | HEX | OCT | BIN | ASCII | ASCii | STRG
 *RST: HEX

Usage: Asynchronous command

Manual operation: See "[Bit pattern format](#)" on page 80

SYSTem:DISPlay:UPDate <DisplayUpdate>

Defines whether the display is updated while the instrument is in the remote state. If the display is switched off, the normal GUI is replaced by a static image while the instrument is in the remote state. Switching off the display can speed up the measurement. This is the recommended state.

Parameters:

<DisplayUpdate> ON | OFF
 ON | 1: Display is shown and updated during remote control.
 OFF | 0: Display shows static image during remote control.
 *RST: OFF

Example: SYSTem:DISPlay:UPDate 1
 Switch on the display update.

Usage: Asynchronous command

SYSTem:DISPlay:MESSAge:STATe <DispMessSt>

Enables and disables the display of an additional text in remote control.

To define the text, use [SYSTem:DISPlay:MESSAge\[:TEXT\]](#).

Parameters:

<DispMessSt> ON | OFF
 *RST: OFF

Usage: Asynchronous command

SYSTem:DISPlay:MESSage[:TEXT] <DisplayMessage>

Defines an additional text that is displayed during remote control operation.

To enable the text display, use `SYSTem:DISPlay:MESSage:STATe`.

Parameters:

<DisplayMessage>

Usage: Asynchronous command

17.7 Instrument setup

• System	533
• SmartGrid	535
• Toolbar	541
• Annotations	541
• Appearance	553
• Display	557
• Preset	563
• Maintenance	564

17.7.1 System

SYSTem:COMMunicate:NET[:HOSTname]	533
SYSTem:DATE	534
SYSTem:EXIT	534
SYSTem:FW:FILEpath	534
SYSTem:PRESet	534
SYSTem:SHUTdown	535
SYSTem:FW:STARt	535
SYSTem:TIME	535

SYSTem:COMMunicate:NET[:HOSTname] <Hostname>

Sets the host name of the instrument, which is required when configuring a network. After changing the host name, you have to reboot the instrument.

The query `SYSTem:COMMunicate:NET:HOSTname?` returns the currently defined host name.

Parameters:

<Hostname> String parameter

Usage: Asynchronous command

Manual operation: See "[Device name](#)" on page 78

SYSTem:DATE <Year>,<Month>,<Day>

Sets the date of the internal calendar.

Parameters:

<Year>	Year, to be entered as a four-digit number (including the century and millennium information) Range: 2012 to 2099 Increment: 1 *RST: 2012
<Month>	Month, 1 (January) to 12 (December) Range: 1 to 12 Increment: 1 *RST: 1
<Day>	Day, 1 to the maximum number of days in the specified month Range: 1 to 31 Increment: 1 *RST: 1

Example: SYSTem:DATE?
Returned value: 2022,09,28

Usage: Asynchronous command

SYSTem:EXIT

Starts the shutdown of the firmware.

Usage: Setting only
Asynchronous command

SYSTem:FW:FILEpath <FilePath>

Sets the path and the filename of the firmware installation file.

Parameters:

<FilePath> String with path and filename

Usage: SCPI confirmed
Asynchronous command

SYSTem:PRESet

Resets the instrument to the default state, has the same effect as *RST.

Usage: Setting only
SCPI confirmed
Asynchronous command

Manual operation: See "[Factory preset](#)" on page 97

SYSTem:SHUTdown

Starts the shutdown of the instrument (firmware and operating system).

Usage: Setting only
 Asynchronous command

SYSTem:FW:STARt

Starts the firmware update. Before starting, make sure that the correct path is set with [SYSTem:FW:FILEpath](#).

Usage: Event
 SCPI confirmed
 Asynchronous command

SYSTem:TIME <Hours>,<Minutes>,<Seconds>

Returns the current time of the clock.

Parameters:

<Hours> Range: 0 to 24
 Increment: 1
 *RST: 1

<Minutes> Range: 0 to 59
 Increment: 1
 *RST: 1

<Seconds> Range: 0 to 59
 Increment: 1
 *RST: 1

Usage: Asynchronous command

17.7.2 SmartGrid

The following `LAYout` commands configure the SmartGrid. In manual operation, you configure the SmartGrid by drag and drop. See [Chapter 4.5, "Rohde & Schwarz Smart-Grid"](#), on page 59.

Table 17-1: Terms and definitions of SmartGrid configuration

Term	Definition
Layout	A layout is a SmartGrid configuration. Several layouts can exist but only one layout is active. By default, layouts are named "Tab <n>" on the display.
Children	A child is an area where data (data table, result table) or waveforms (diagram) are displayed. A node can also be a child. A child can be empty.

Term	Definition
Node	A node consists of one or two children. A node is created by default with one child that has content.
Diagram	A diagram displays waveforms, the graphical visualization of data.

LAYout<ly>:COUNT?	536
LAYout<ly>[:ENABLE]	536
LAYout<ly>:ACTIVE	537
LAYout<ly>:SACTIVE	537
LAYout<ly>:LABEL	537
LAYout<ly>:DIAGram<da>:COUNT?	537
LAYout<ly>:DIAGram<da>[:ENABLE]	538
LAYout<ly>:DIAGram<da>:SOURCE	538
LAYout<ly>:DIAGram<da>:LABEL	538
LAYout<ly>:NODE<no>:COUNT?	538
LAYout<ly>:NODE<no>[:ENABLE]	539
LAYout<ly>:NODE<no>:CHILDren<o>:CONTent<p>:ID	539
LAYout<ly>:NODE<no>:CHILDren<o>:CONTent<p>:TYPE	539
LAYout<ly>:NODE<no>:RATio	540
LAYout<ly>:NODE<no>:STYPe	540

LAYout<ly>:COUNT?

Returns the number of available layouts, i.e. SmartGrid configurations. By default, they named "Diagram Set" on the display.

Suffix:

<ly> Irrelevant, omit the suffix.

Return values:

<Count> Number of SmartGrid configurations

Usage:

Query only
Asynchronous command

LAYout<ly>[:ENABLE] <State>

Creates a new SmartGrid configuration and sets it active.

Suffix:

<ly> 1...4, index of the SmartGrid layout

Parameters:

<State> ON | OFF

Example:

See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage:

Asynchronous command

LAYout<ly>:ACTive <ActiveKey>

Sets the active SmartGrid configuration. The query returns the index of the active layout.

Suffix:

<ly> Irrelevant, omit the suffix.

Parameters:

<ActiveKey> Index of the active layout

Usage:

Asynchronous command

LAYout<ly>:SACTive

Activates the specified SmartGrid configuration. The command has the same effect as [LAYout<ly>:ACTive](#) but it has no query, and the active layout is specified by the suffix.

Suffix:

<ly> 1...4, index of the SmartGrid layout

Example:

See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage:

Setting only
Asynchronous command

LAYout<ly>:LABel <Label>

Defines a name for the specified layout (SmartGrid configuration).

Suffix:

<ly> 1...4, index of the SmartGrid layout

Parameters:

<Label> String with the layout name

Usage:

Asynchronous command

LAYout<ly>:DIAGram<da>:COUNT?

Returns the number of diagrams in a specified layout.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<da>

Irrelevant, omit the suffix.

Return values:

<Count> Number of diagrams

Usage:

Query only
Asynchronous command

LAYout<ly>:DIAGram<da>[:ENABle] <State>

Creates and displays a specified diagram in a specified layout. OFF deletes the diagram.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<da> 1...8, index of the diagram

Parameters:

<State> ON | OFF

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:SOURce <SignalKeys>

Assigns the waveforms to a diagram.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<da> 1...8, index of the diagram

Parameters:

<SignalKeys> String with a comma-separated list of waveforms, e.g. "C1, C2, M1"

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:LABel <Label>

Defines a name for the specified diagram in a specified layout.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<da> 1...8, index of the diagram

Parameters:

<Label> String with the diagram name

Usage: Asynchronous command

LAYout<ly>:NODE<no>:COUNT?

Returns the maximum number of nodes that can be defined. This number is the maximum value for the node suffix.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<no> Irrelevant, omit the suffix.

Return values:

<Count> Maximum value for the node suffix

Usage: Query only
Asynchronous command

LAYout<ly>:NODE<no>[:ENABLE] <State>

Creates the specified node in the specified layout. OFF deletes the node and its children.

The query returns whether the specified node exists (1) or not (0).

Suffix:

<ly> 1...4, index of the SmartGrid layout

<no> Index of the node

Parameters:

<State> ON | OFF

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID <ID>

Sets the content ID, the number of the specified content type.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<no> Index of the node

<o> 1 | 2, child index

<p> Irrelevant, omit the suffix.

Parameters:

<ID> Numeric value

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE <Type>

Sets the content type for a specified child in a specified node: diagram, result table, another node, or empty.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:

<ly>	1...4, index of the SmartGrid layout
<no>	Index of the node
<o>	1 2, child index
<p>	Irrelevant, omit the suffix.

Parameters:

<Type>	NONE DIAG DIAGRAM RES RESULT NODE DIAG = DIAGRAM, RES = RESULT *RST: NONE
--------	---

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:RATio <SplitRatio>

Sets the size ratio of the two children in the specified node.

Suffix:

<ly>	1...4, index of the SmartGrid layout
<no>	Index of the node

Parameters:

<SplitRatio>	Size ratio of the children. 0.5 assigns 50% of the node size to each child. 0.3 assigns 30% to child 1% and 70% to child 2. Range: 0 to 1 Increment: 0.0001 *RST: 0.5
--------------	--

Usage: Asynchronous command

LAYout<ly>:NODE<no>:STYPe <SplitType>

Creates a second child (e.g. diagram) in the node if only one child exists, and sets the splitting of the node. If two children exist, only the splitting is set.

Suffix:

<ly>	1...4, index of the SmartGrid layout
<no>	Index of the node

Parameters:

<SplitType>	HOR HORIZONTAL VERT VERTICAL HOR = HORIZONTAL, VERT = VERTICAL *RST: NONE
-------------	---

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

17.7.3 Toolbar

DISPlay:TOOLbar:COUNT?	541
DISPlay:TOOLbar:DESelect	541
DISPlay:TOOLbar:RESTore	541

DISPlay:TOOLbar:COUNT?

Returns the number of tools that are currently assigned to the toolbar.

Return values:

<ToolCount> Range: 0 to 100
 Increment: 1
 *RST: 8

Usage: Query only
 Asynchronous command

DISPlay:TOOLbar:DESelect

Removes all tools from the toolbar.

Usage: Setting only
 SCPI confirmed
 Asynchronous command

DISPlay:TOOLbar:RESTore

Resets the toolbar to the factory configuration.

Usage: Setting only
 SCPI confirmed
 Asynchronous command


17.7.4 Annotations

The following `DISPlay:ANNotation` commands configure the annotations. With these commands you can select the type of annotation you want to add, define its value, position and color.

Defining the position of the annotation

With some of the following commands, you can define the position of the annotation on the screen. When defining the position, consider the following:

- A position is defined with two elements. The first element refers to the X dimension and the second to the Y dimension.
- The minimum position (0,0) is the lower left corner of the SmartGrid.

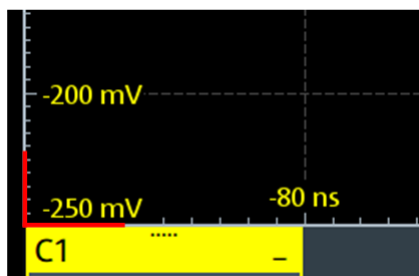

- The maximum position (100,100) is the upper right corner of the SmartGrid.




- The position is defined in percent with a range from 0 to 100. The minimum increment is 0.01.
- An annotation element cannot be moved outside the SmartGrid, the position is limited depending on the size of the annotation element.

Color catalog

When using annotations, you can select their color from a list of predefined colors. The following table gives an overview on the available colors and their command parameter name.

Table 17-2: Color catalog for annotations

Color	Color command parameter	Description
	WHITe	White
	LGRay	Light gray
	MGRay	Middle gray
	GRAY	Gray
	DGRay	Dark gray
	RED	Red

Color	Color command parameter	Description
	DORange	Dark orange
	ORANge	Orange
	LORange	Light orange
	YELLow	Yellow
	DGRreen	Dark green
	GREn	Green
	LGRreen	Light green
	LBLue	Light blue
	BLUE	Blue
	PINK	Pink
	LPINK	Light pink
	TURQuoise	Turquoise
	LPURple	Light purple
	PURPlE	Purple

17.7.4.1 General settings

DISPlay:ANNotation:CLEar..... 543
 DISPlay:ANNotation:COLor<m>:CATalog?..... 544
 DISPlay:ANNotation:TRANsparency..... 544

DISPlay:ANNotation:CLEar

Removes all existing annotations.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:COLor<m>:CATalog?

Returns the list of possible colors, see [Color catalog for annotations](#).

Suffix:
<m> *

Return values:
<colorCatalog>

Usage: Query only
Asynchronous command

DISPlay:ANNotation:TRANsparency <Transparency>

Sets a transparency of the annotation. For high transparency values, you can see the waveform display in the background. For lower transparency values, readability of the annotation improves.

Parameters:
<Transparency> Range: 0 to 90
Increment: 1
*RST: 0

Usage: Asynchronous command

17.7.4.2 Rectangle

DISPlay:ANNotation:RECTangle<m>:CLEar	544
DISPlay:ANNotation:RECTangle<m>:COLor	545
DISPlay:ANNotation:RECTangle<m>:HEIGHt	545
DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition	545
DISPlay:ANNotation:RECTangle<m>:REMOve	545
DISPlay:ANNotation:RECTangle<m>:VERTical:POSition	546
DISPlay:ANNotation:RECTangle<m>:WIDTh	546
DISPlay:ANNotation:RECTangle<m>[:VALue]	546

DISPlay:ANNotation:RECTangle<m>:CLEar

Deletes all rectangle annotations.

Suffix:
<m> *
index of the rectangle annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:COLor <Type>

Sets the color of the rectangle annotation.

Suffix:

<m> *
index of the rectangle annotation

Parameters:

<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange |
ORANge | LORange | YELLow | DGReen | GREen | LGReen |
LBLue | BLUE | PINK | LPINK | TURQuoise | LPURple | PURPle
See [Color catalog for annotations](#).

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HEIGHt <Height>

Sets the height (vertical) of the rectangle annotation.

Suffix:

<m> *
index of the rectangle annotation

Parameters:

<Height>

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the lower left corner of the rectangle annotation. See also [Defining the position of the annotation](#).

Suffix:

<m> *
index of the rectangle annotation

Parameters:

<HorizontalPos>

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:REMOve

Removes the specified rectangle annotation and deletes it from screen.

Suffix:

<m> *
index of the rectangle annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower left corner of the rectangle annotation. See also [Defining the position of the annotation](#).

Suffix:

<m> *
 index of the rectangle annotation

Parameters:

<VerticalPos>

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:WIDTh <Width>

Sets the width (horizontal) of the rectangle annotation. The unit is in percent of the smartgrid.

Suffix:

<m> *
 index of the rectangle annotation

Parameters:

<Width>

Usage: Asynchronous command

**DISPlay:ANNotation:RECTangle<m>[:VALue] [<HorizontalPos>],[<VerticalPos>],
 [<Width>],[<Hieght>]****DISPlay:ANNotation:RECTangle<m>[:VALue]? [<HorizontalPos>],[<VerticalPos>],
 [<Width>]**

Adds a new rectangle annotation, or replaces the annotation if it already exists.

Suffix:

<m> *
 index of the rectangle annotation

Parameters:

<Hieght>

Parameters for setting and query:

<HorizontalPos>

<VerticalPos>

<Width>

Usage: Asynchronous command

17.7.4.3 Arrow

DISPlay:ANNotation:ARRow<m>:CLEAr.....	547
DISPlay:ANNotation:ARRow<m>:COLor.....	547
DISPlay:ANNotation:ARRow<m>:DIRection.....	547
DISPlay:ANNotation:ARRow<m>:HEIGHt.....	548
DISPlay:ANNotation:ARRow<m>:HORizontal:POSition.....	548
DISPlay:ANNotation:ARRow<m>:REMOve.....	548
DISPlay:ANNotation:ARRow<m>:VERTical:POSition.....	548
DISPlay:ANNotation:ARRow<m>:WIDTh.....	549
DISPlay:ANNotation:ARRow<m>[:VALue].....	549

DISPlay:ANNotation:ARRow<m>:CLEAr

Deletes all arrow annotations.

Suffix:

<m> *
index of the arrow annotation

Usage:

Setting only
Asynchronous command

DISPlay:ANNotation:ARRow<m>:COLor <Type>

Sets the color of the arrow annotation.

Suffix:

<m> *
index of the arrow annotation

Parameters:

<Type> WHITE | LGRay | MGRay | GRAY | DGRay | RED | DORange |
ORANGE | LORange | YELLOW | DGREEN | GREEN | LGREEN |
LBLue | BLUE | PINK | LPINK | TURQuoise | LPURple | PURPle
See [Color catalog for annotations](#).

Usage:

Asynchronous command

DISPlay:ANNotation:ARRow<m>:DIRection <Type>

Sets the direction of the arrow annotation.

Suffix:

<m> *
index of the arrow annotation

Parameters:

<Type> TLEFt | TRIGHt | BLEFt | BRIGHt
TLEFt
TRIGHt
BLEFt

BRIGht

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HEIGht <Height>

Sets the height (vertical) of the arrow annotation.

Suffix:
 <m> *
 index of the arrow annotation

Parameters:
 <Height>

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position for the arrow annotation. See also [Defining the position of the annotation](#).

Suffix:
 <m> *
 index of the arrow annotation

Parameters:
 <HorizontalPos>

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:REMOve

Removes the specified arrow annotation and deletes it from the screen.

Suffix:
 <m> *
 index of the arrow annotation

Usage: Setting only
 Asynchronous command

DISPlay:ANNotation:ARRow<m>:VERTical:POSition <VerticalPos>

Sets the vertical position for the arrow annotation. See also [Defining the position of the annotation](#).

Suffix:
 <m> *
 index of the arrow annotation

Parameters:
 <VerticalPos>

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:WIDTh <Width>

Sets the width (horizontal) of the arrow annotation.

Suffix:
 <m> *
 index of the arrow annotation

Parameters:
 <Width>

Usage: Asynchronous command

**DISPlay:ANNotation:ARRow<m>[:VALue] [<HorizontalPos>],[<VerticalPos>],
 [<Width>],[<Height>]**

**DISPlay:ANNotation:ARRow<m>[:VALue]? [<HorizontalPos>],[<VerticalPos>],
 [<Width>]**

Adds a new arrow annotation, or replaces the annotation if it already exists.

Suffix:
 <m> *
 index of the arrow annotation

Parameters:
 <Height>

Parameters for setting and query:

<HorizontalPos>

<VerticalPos>

<Width>

Usage: Asynchronous command

17.7.4.4 Text

DISPlay:ANNotation:TEXT<m>:CLEAr.....	549
DISPlay:ANNotation:TEXT<m>:COLor.....	550
DISPlay:ANNotation:TEXT<m>:FONTsize.....	550
DISPlay:ANNotation:TEXT<m>:HORizontal:POSition.....	550
DISPlay:ANNotation:TEXT<m>:REMOve.....	550
DISPlay:ANNotation:TEXT<m>:VERTical:POSition.....	551
DISPlay:ANNotation:TEXT<m>[:VALue].....	551

DISPlay:ANNotation:TEXT<m>:CLEAr

Deletes all text annotations.

Suffix:
 <m> *
 index of the text annotation

Usage: Setting only
 Asynchronous command

DISPlay:ANNotation:TEXT<m>:COLor <Type>

Sets the color of the text annotation.

Suffix:
 <m> *
 index of the text annotation

Parameters:
 <Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange |
 ORANge | LORange | YELLow | DGReen | GREen | LGReen |
 LBLue | BLUE | PINK | LPINK | TURQuoise | LPURple | PURPlE
 See [Color catalog for annotations](#).

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:FONtsize <FontSize>

Sets the font size of the text annotation.

Suffix:
 <m> *
 index of the text annotation

Parameters:
 <FontSize>

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position for the text annotation. See also [Defining the position of the annotation](#).

Suffix:
 <m> *
 index of the text annotation

Parameters:
 <HorizontalPos>

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:REMOve

Removes the specified text annotation and deletes it from screen.

Suffix:
 <m> *
 index of the text annotation

Usage: Setting only
 Asynchronous command

DISPlay:ANNotation:TEXT<m>:VERTical:POSition <VerticalPos>

Sets the vertical position for the text annotation. See also [Defining the position of the annotation](#).

Suffix:
 <m> *
 index of the text annotation

Parameters:
 <VerticalPos>

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>[:VALue] [<Text>]

Adds a new text annotation or replaces the text value of an already existing text annotation.

Suffix:
 <m> *
 index of the text annotation

Parameters:
 <Text>

Usage: Asynchronous command

17.7.4.5 Draw

DISPlay:ANNotation:PLINE<m>:CLEar	551
DISPlay:ANNotation:PLINE<m>:COLor	552
DISPlay:ANNotation:PLINE<m>:EXTend	552
DISPlay:ANNotation:PLINE<m>:REMove	552
DISPlay:ANNotation:PLINE<m>[:VALue]	552

DISPlay:ANNotation:PLINE<m>:CLEar

Deletes all draw annotations.

Suffix:
 <m> *
 index of the draw annotation

Usage: Setting only
 Asynchronous command

DISPlay:ANNotation:PLINe<m>:COLor <Type>

Sets the color of the draw annotation.

Suffix:

<m> *
index of the draw annotation

Parameters:

<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange |
ORANge | LORange | YELLow | DGReen | GREen | LGReen |
LBLue | BLUE | PINK | LPINK | TURQuoise | LPURple | PURPle
See [Color catalog for annotations](#).

Usage: Asynchronous command

DISPlay:ANNotation:PLINe<m>:EXTend [<x>],[<y>]

Expands the draw item with a segment. The last x and y position is the start point.

Suffix:

<m> *
index of the draw annotation

Setting parameters:

<x>

<y>

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>:REMOve

Removes the specified draw annotation and deletes it from screen.

Suffix:

<m> *
index of the draw annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>[:VALue] <x1>,<y1>,<x2>,<y2>,[<xn>]**DISPlay:ANNotation:PLINe<m>[:VALue]? <x1>,<y1>,<x2>,<y2>**

Adds a new draw annotation, or replaces the annotation if it already exists.

Suffix:

<m> *
index of the draw annotation

Parameters:

<xn>

Parameters for setting and query:

<x1>

<y1>

<x2>

<y2>

Usage: Asynchronous command**17.7.5 Appearance**

- [Waveform colors](#)..... 553
- [Grid appearance](#)..... 554
- [Dialog appearance](#)..... 556
- [Peak list appearance](#)..... 557

17.7.5.1 Waveform colors

DISPlay:COLor:SIGNal:CATalog?	553
DISPlay:COLor:SIGNal:COLor	553
DISPlay:COLor:SIGNal:ASSign	554
DISPlay:COLor:SIGNal:USE	554

DISPlay:COLor:SIGNal:CATalog?

Returns a comma-separated list of valid signal names. The signal names are needed in other DISPlay:COLor commands to set the <Signal> parameter.

Usage: Query only
Asynchronous command

DISPlay:COLor:SIGNal:COLor <Signal>,<Value>

Sets the color of the selected waveform.

Parameters:

<Value> Decimal value of the ARGB color. Use the color dialog box on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.
To reset the color to its default, use
DISPlay:COLor:SIGNal:COLor <Signal>,DEF.

Setting parameters:

<Signal> Signal name as returned by [DISPlay:COLor:SIGNal:CATalog?](#).

Usage: Asynchronous command

Manual operation: See "Color" on page 86

DISPlay:COLor:SIGNal:ASSign <Signal>,<ColorTable>

Assigns a color table to the source waveform instead of a dedicated color.

Parameters:

<ColorTable> String with the name of the color table

Setting parameters:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Assigned color table" on page 86

DISPlay:COLor:SIGNal:USE <Signal>,<State>

If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

Parameters:

<State> ON | OFF

Setting parameters:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Use color table" on page 85

17.7.5.2 Grid appearance

<code>DISPlay:DIAGram:CROShair</code>	554
<code>DISPlay:DIAGram:FINegrid</code>	555
<code>DISPlay:DIAGram:GRID</code>	555
<code>DISPlay:DIAGram:LABels</code>	555
<code>DISPlay:DIAGram:XFIXed</code>	555
<code>DISPlay:DIAGram:YFIXed</code>	556

DISPlay:DIAGram:CROShair <Crosshair>

If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Parameters:

<Crosshair> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Show crosshair"](#) on page 88

DISPlay:DIAGram:FINeGrid <ShowFineScale>

If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

Parameters:

<ShowFineScale> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Show fine grid scale"](#) on page 87

DISPlay:DIAGram:GRID <Show>

If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Parameters:

<Show> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Show grid"](#) on page 87

DISPlay:DIAGram:LABels <ShowLabels>

If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Parameters:

<ShowLabels> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Show labels"](#) on page 87

DISPlay:DIAGram:XFIXed <XGridFixed>

If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Parameters:

<XGridFixed> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Keep X-grid fixed"](#) on page 88

DISPlay:DIAGram:YFIXed <YGridFixed>

If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Parameters:

<YGridFixed> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Keep Y-grid fixed"](#) on page 88

17.7.5.3 Dialog appearance

DISPlay:DIALog:FONTsize	556
DISPlay:DIALog:TRANsparency	556
DISPlay:RESult:FONTsize	557

DISPlay:DIALog:FONTsize <DialogFontSize>

Sets the font size of the text in dialog boxes.

Parameters:

<DialogFontSize> Range: 16 to 25
 Increment: 1
 *RST: 21

Usage: Asynchronous command

Manual operation: See ["Font size \(Dialog\)"](#) on page 89

DISPlay:DIALog:TRANsparency <DialogTransp>

Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

Parameters:

<DialogTransp> Range: 0 to 70
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See ["Transparency \(Dialog\)"](#) on page 89

DISPlay:RESult:FONTsize <ResultFontSize>

Sets the font size of the text in result tables.

Parameters:

<ResultFontSize> Range: 8 to 30
 Increment: 1
 *RST: 19

Usage: Asynchronous command

Manual operation: See "[Font size \(Result dialog\)](#)" on page 89

17.7.5.4 Peak list appearance

[CALCulate:SPECTrum<sp>:PLISt:LABel:BORDER](#).....557

CALCulate:SPECTrum<sp>:PLISt:LABel:BORDER <LabelBorder>

Defines the layout of the labels, full border or none.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<LabelBorder> NOBorder | FULL
 FULL: Full border
 *RST: FULL

Usage: Asynchronous command

Manual operation: See "[Frame type](#)" on page 90

17.7.6 Display

- [Persistence](#)..... 557
- [Signal](#)..... 559
- [Backlight](#)..... 559
- [Clear results](#)..... 560
- [Save/Recall](#)..... 560

17.7.6.1 Persistence

[DISPlay:PERSiStence:INFinite](#)..... 558

[DISPlay:PERSiStence:RESet](#)..... 558

[DISPlay:PERSiStence:TIME](#)..... 558

[DISPlay:PERSiStence\[:STATe\]](#)..... 558

DISPlay:PERSistence:INFinite <State>

If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Infinite persistence](#)" on page 91

DISPlay:PERSistence:RESet

Resets the display, removing persistent all waveform points.

Usage: Setting only
 Asynchronous command

Manual operation: See "[Reset](#)" on page 92

DISPlay:PERSistence:TIME <Time>

Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the MXO 4 emulates the persistence of analog phosphor screens.

Parameters:

<Time> Range: 0.05 to 50
 Increment: 0.05
 *RST: 0.05
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Time](#)" on page 92

DISPlay:PERSistence[:STATE] <State>

If enabled, each new data point in the diagram area remains on the screen for the duration defined using [DISPlay:PERSistence:TIME](#), or as long as [DISPlay:PERSistence:INFinite](#) is enabled.

If disabled, the signal value is only displayed as long as it actually occurs.

Parameters:

<State> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Enable](#)" on page 91

17.7.6.2 Signal

DISPlay:INTensity	559
DISPlay:DIAGram:STYLE	559

DISPlay:INTensity <Intensity>

The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

Parameters:

<Intensity>	Range: 0 to 100
	Increment: 1
	*RST: 50
	Default unit: %

Usage: Asynchronous command

Manual operation: See "[Intensity](#)" on page 92

DISPlay:DIAGram:STYLE <Style>

Selects the style in which the waveform is displayed.

Parameters:

<Style> VECTors | DOTS

VECTors

The individual data points are connected by a line.

DOTS

Only the individual data points are displayed.

*RST: VECTors

Usage: Asynchronous command

Manual operation: See "[Waveform style](#)" on page 92

17.7.6.3 Backlight

| | |
|---|-----|
| DISPlay:BACKlight[:BRIGtness] | 559 |
| DISPlay:BACKlight:DIMMING | 560 |

DISPlay:BACKlight[:BRIGtness] <LCDIntensity>

Sets the background luminosity of the touchscreen.

Parameters:

| | |
|----------------|-----------------|
| <LCDIntensity> | Range: 5 to 100 |
| | Increment: 1 |
| | *RST: 90 |
| | Default unit: % |

Usage: Asynchronous command

Manual operation: See "Brightness" on page 93

DISPlay:BACKlight:DIMMing <UsrActivityTout>

Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.

Parameters:

<UsrActivityTout> OFF | T1Minute | T2Minutes | T3Minutes | T5Minutes |
T10Minutes | T15Minutes | T20Minutes | T25Minutes |
T30Minutes | T45Minutes | T1Hour | T2Hours | T3Hours |
T4Hours
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Dimm on user inactivity" on page 93

17.7.6.4 Clear results

DISPlay:CLR

Deletes all measurement results including all waveforms and statistics.

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 63

17.7.6.5 Save/Recall

Autonaming

| | |
|-------------------------------------|-----|
| MMEMory:AUTonaming:PREFix..... | 560 |
| MMEMory:AUTonaming:TIME..... | 560 |
| MMEMory:AUTonaming:INDex..... | 560 |
| MMEMory:AUSave:ENABle..... | 561 |
| MMEMory:AUSave:INTerval..... | 561 |
| MMEMory:AUTonaming:USERtext..... | 561 |
| MMEMory:AUTonaming:DEFaultpath..... | 562 |
| MMEMory:AUTonaming:RESall..... | 562 |
| MMEMory:AUTonaming:RESPath..... | 562 |
| MMEMory:AUTonaming:TEXT..... | 562 |

MMEMory:AUTonaming:PREFix <MainNmeStemSt>

MMEMory:AUTonaming:TIME <DateTIme>

MMEMory:AUTonaming:INDex <NameIndex>

Includes or excludes the prefix/ date/time /index in the filename pattern for automatic filename generation. This name is used as the default filename.

The prefix indicates the type of data that is saved, for example, RefCurve, Settings.

Parameters:

<NameIndex> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Index](#)" on page 104

MMEMory:AUSave:ENABLE <EnableAutosave>

Enables the automatic saving of the waveform. You can set the autosave interval with [MMEMory:AUSave:INTERval](#).

Parameters:

<EnableAutosave> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Enable autosave](#)" on page 104

MMEMory:AUSave:INTERval <AutosaveIntvl>

Defines the time interval for the automatic saving of the waveform, if [MMEMory:AUSave:ENABLE](#) is set to ON.

Parameters:

<AutosaveIntvl> Range: 1 to 360000
Increment: 1
*RST: 300
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Enable autosave](#)" on page 104

MMEMory:AUTonaming:USERtext <NmeStringSt>

If enabled, inserts the specified user text after the prefix.

You can define the text with [MMEMory:AUTonaming:TEXT](#).

Parameters:

<NmeStringSt> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[User text](#)" on page 104

MMEMory:AUTonaming:DEFaultpath <Path>

Sets the path where data and settings files are stored. On the instrument, all user data is written to `/home/storage/userData`. You can create subfolders in this folder.

Parameters:

<Path> String parameter

Usage: Asynchronous command

Manual operation: See "[Default path for all file operations](#)" on page 104

MMEMory:AUTonaming:RESall

Resets all autonaming settings to the default value, including the path.

Usage: Setting only
Asynchronous command

Manual operation: See "[Reset path](#)" on page 104

MMEMory:AUTonaming:RESPath

Resets the path for file operations to the factory default path.

Usage: Setting only
Asynchronous command

Manual operation: See "[Reset path](#)" on page 104

MMEMory:AUTonaming:TEXT <NameString>

Defines a text that can be included in the autonaming pattern.

Parameters:

<NameString> String parameter

Usage: Asynchronous command

Manual operation: See "[User text](#)" on page 104

CSV export

EXPort:RESult:DELimiter <Delimiter>

Selects the list separator symbol from a list. Available are semicolon, comma, space, tab and colon.

Parameters:

<Delimiter> SEMICOLON | COMMA | SPACE | TAB | COLON
*RST: COMMA

Manual operation: See "[CSV delimiter](#)" on page 106

17.7.7 Preset

| | |
|--|-----|
| <code>USERdefined:PRESet:NAME</code> | 563 |
| <code>USERdefined:PRESet:OPEN</code> | 563 |
| <code>USERdefined:PRESet:SAVE</code> | 563 |
| <code>USERdefined:PRESet[:ENABLE]</code> | 563 |

`USERdefined:PRESet:NAME` <Name>

Sets the path, the filename and the file format of the preset file.

Parameters:

<Name> String with path and file name with extension `.set`.

Example: `USERdefined:PRESet:NAME '/home/storage/userData/settings/Preset_SPI.set'`

Manual operation: See "[Preset file selection](#)" on page 96

`USERdefined:PRESet:OPEN`

Opens and loads the preset file that is defined with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "[Preset file selection](#)" on page 96

`USERdefined:PRESet:SAVE`

Saves the the current settings as a preset file. You define the storage location and filename with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "[Select, Save](#)" on page 97

`USERdefined:PRESet[:ENABLE]` <Name>

If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

The saveset to be used as preset file is defined with `USERdefined:PRESet:NAME`.

Parameters:

<Name> ON | OFF
*RST: OFF

Manual operation: See "[Enable user-defined preset](#)" on page 96

17.7.8 Maintenance

| | |
|---------------------|-----|
| CALibration:DATE? | 564 |
| CALibration:TIME? | 564 |
| CALibration:RESult? | 564 |
| SERVice:REPort | 564 |
| SYSTem:APUP | 565 |

CALibration:DATE?

Returns the date of the last self-alignment.

Return values:

<Date>

Usage: Query only
Asynchronous command

Manual operation: See ["Date, Time, Overall alignment state"](#) on page 100

CALibration:TIME?

Returns the time of the last self-alignment.

Return values:

<Time>

Usage: Query only
Asynchronous command

Manual operation: See ["Date, Time, Overall alignment state"](#) on page 100

CALibration:RESult?

Returns the result of the last self-alignment and the current alignment status. In remote mode, *CAL? provides more detailed information.

Return values:

<ResultState> PASSEd | FAILed | NOALigndata
*RST: FAILed

Usage: Query only
Asynchronous command

Manual operation: See ["Date, Time, Overall alignment state"](#) on page 100

SERVice:REPort

Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.

Usage: Event
Asynchronous command

Manual operation: See "[Create report](#)" on page 102

SYSTem:APUP <AutoPowerUp>

If enabled, the instrument powers up automatically when it is connected to the mains voltage.

Parameters:
<AutoPowerUp> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Auto power up](#)" on page 102

17.8 Acquisition and setup

17.8.1 Starting and stopping acquisition

| | |
|---------------------------------|-----|
| RUNCont | 565 |
| RUN | 565 |
| RUNSingle | 565 |
| SINGLE | 565 |
| STOP | 566 |

RUNCont

RUN

Starts the continuous acquisition.

Usage: Setting only
Asynchronous command

Manual operation: See "[\[Run / Stop\]](#)" on page 41

RUNSingle

SINGLE

Starts a defined number of acquisition cycles. The number of cycles is set with [ACquire:COUNT](#).

Usage: Setting only
Asynchronous command

Manual operation: See "[Single]" on page 41

STOP

Stops the running acquisition.

Usage: Event
Asynchronous command

Manual operation: See "[Run / Stop]" on page 41

17.8.2 Horizontal setup

| | |
|-----------------------------------|-----|
| AUToscale..... | 566 |
| TIMEbase:SCALE..... | 566 |
| TIMEbase:RANGe..... | 566 |
| TIMEbase:DIVisions?..... | 567 |
| TIMEbase:HORizontal:POSition..... | 567 |
| TIMEbase:REFerence..... | 567 |

AUToscale

Performs an autoset process: analyzes the enabled channel signals, and obtains appropriate horizontal, vertical, and trigger settings to display stable waveforms.

Rohde & Schwarz does not recommend using the autoset in remote control. To adjust the oscilloscope remotely, especially for automated testing applications, use the remote commands that adjust the horizontal, vertical and trigger settings.

Usage: Event
Asynchronous command

TIMEbase:SCALE <TimebaseScale>

Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Parameters:

<TimebaseScale> Range: 200E-12 to 10E3
 Increment: 1E-12
 *RST: 20E-9
 Default unit: s/div

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 42

TIMEbase:RANGe <TimebaseRange>

Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions.*

Parameters:

<TimebaseRange> Range: Device specific to Device specific
 Increment: 1E-12
 *RST: Device specific
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Timebase range](#)" on page 108

TIMEbase:DIVisions?

Returns the number of horizontal divisions on the screen. The number cannot be changed.

Return values:

<HorizDivCnt> *RST: 10

Usage: Query only
 Asynchronous command

TIMEbase:HORizontal:POSition <Position>

Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

Parameters:

<Position> Range: Device specific to 1E+26
 Increment: 1E-12
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[\[Position\]](#)" on page 42

TIMEbase:REFerence <RescaleCtrPos>

Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

Parameters:

<RescaleCtrPos> Range: 0 to 100
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Reference point](#)" on page 109

17.8.3 Roll mode

| | |
|---------------------------------|-----|
| TIMebase:ROLL:ENABLE..... | 568 |
| TIMebase:ROLL:MTIME..... | 568 |
| ACQuire:ROLLmode:OSCapture..... | 568 |
| ACQuire:ROLLmode:POINts?..... | 569 |
| TIMebase:ROLL:STATe?..... | 569 |

TIMebase:ROLL:ENABLE <Mode>

Selects, if the roll mode is set automatically by the instrument or if it is turned off.

Parameters:

<Mode> AUTO | OFF
 *RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 110

TIMebase:ROLL:MTIME <MinAcquTime>

Sets the minimum acquisition time for automatic start of the roll mode.

Parameters:

<MinAcquTime> Range: 0.5 to 100000
 Increment: 1
 *RST: 2
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Start roll time" on page 110

ACQuire:ROLLmode:OSCapture <OffScreenCapture>

If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the invisible area on the left.

Parameters:

<OffScreenCapture> ON | OFF
 *RST: OFF

Example: See [Chapter 17.4.3, "Data transfer in roll mode"](#), on page 527.

Usage: Asynchronous command

Manual operation: See "Off screen capture" on page 111

ACQUIRE:ROLLmode:POINTs?

Returns the record length of the roll mode. In roll mode, the complete record is always captured, independently of the displayed waveform. To process and analyze the complete roll waveform, enable [ACQUIRE:ROLLmode:OSCapture](#).

Return values:

<RecordLength> Range: 0 to 18446744073709551615
 Increment: 1
 *RST: 0
 Default unit: pts

Usage: Query only
 Asynchronous command

Manual operation: See "[Off screen capture](#)" on page 111

TIMEbase:ROLL:STATe?

Returns the status of the roll mode.

Return values:

<State> ON | OFF
 *RST: OFF

Usage: Query only
 Asynchronous command

Manual operation: See "[Mode](#)" on page 110

17.8.4 Vertical setup

The channel suffix <ch> selects the input channel that is affected by the command.

| | |
|--|-----|
| CHANnel<ch>:STATe | 569 |
| CHANnel<ch>:SCALE | 570 |
| CHANnel<ch>:RANGE | 570 |
| CHANnel<ch>:OFFSet | 570 |
| CHANnel<ch>:POSition | 571 |
| CHANnel<ch>:COUPling | 571 |
| CHANnel<ch>:INVert | 572 |
| DISPlay:SIGNal:LABel | 572 |
| CHANnel<ch>:SKEW:TIME | 572 |
| CHANnel<ch>:BANDwidth | 573 |
| CHANnel<ch>:EATScale | 573 |
| CHANnel<ch>:EATTenuation | 573 |
| CHANnel<ch>:IMPedance | 574 |

CHANnel<ch>:STATe <State>

Switches the selected channel signal on or off.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[C<n>]" on page 43

CHANnel<ch>:SCALE <Scale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <Scale> Range: 0.001 to 1
 Increment: 0.001
 *RST: 0.05
 Default unit: Depends on the connected probe

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 44

CHANnel<ch>:RANGE <Range>

Sets the voltage range across the 10 vertical divisions of the diagram. The command is an alternative to [CHANnel<ch>:SCALE](#).

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <Range> Range: 0.01 to 10
 Increment: 0.01
 *RST: 0.5
 Default unit: V/div

Usage: Asynchronous command

CHANnel<ch>:OFFSet <Offset>

Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:

<Offset> Range: -1 to 1
 Increment: 0.01
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Position]" on page 44

CHANnel<ch>:POSition <Position>

Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions. The visual effect is the same as for offset.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Position> Positive values move up the waveform, negative values move it down.

Range: -5 to 5

Increment: 0.02

*RST: 0

Default unit: div

Usage: Asynchronous command

Manual operation: See "[Position]" on page 44

CHANnel<ch>:COUPling <Value>

Sets the connection of the channel signal, i.e. the input impedance (termination) and a filter (coupling). The command determines what part of the signal is used for waveform analysis and triggering.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Value> DC | DCLimit | AC

DC

Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit

Connection with 1 M Ω termination, passes both DC and AC components of the signal.

AC

Connection with 1 M Ω termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

Usage: Asynchronous command
Manual operation: See "[Coupling](#)" on page 125

CHANnel<ch>:INVert <InvertChannel>

Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <InvertChannel> ON | OFF
 ON: inverted waveform
 OFF: normal waveform
 *RST: OFF

Usage: Asynchronous command
Manual operation: See "[Invert channel](#)" on page 125

DISPlay:SIGNal:LABel <Signal>,<Label>

Defines and assigns a label to the specified channel waveform.

Parameters:
 <Label> String with the waveform label

Setting parameters:
 <Signal> C1 | C2 | C3 | C4

Usage: Asynchronous command
Manual operation: See "[Label](#)" on page 125

CHANnel<ch>:SKEW:TIME <Offset>

Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <Offset> Range: -100E-9 to 100E-9
 Increment: 1E-12
 *RST: 0
 Default unit: s

Usage: Asynchronous command
Manual operation: See "[Skew](#)" on page 125

CHANnel<ch>:BANDwidth <BandwidthLimit>

Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<BandwidthLimit> FULL | B2G | B1G5 | B1G | B700 | B500 | B350 | B200 | B100 | B50 | B20

FULL

Sets the bandwidth to the maximum bandwidth of the instrument. Bandwidth extension options are considered.

B700 | B500 | B350 | B200 | B100 | B50 | B20

Sets a bandwidth limit lower than the maximum. The number indicates the bandwidth limit in MHz.

B1G5 | B1G

Sets the bandwidth limit to 1500 MHz or 1000 MHz if these values are lower than the maximum.

*RST: FULL

Usage: Asynchronous command

Manual operation: See "[Bandwidth](#)" on page 126

CHANnel<ch>:EATScale <ExtAttScI>

Sets the attenuation scale for an external divider: linear or logarithmic.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<ExtAttScI> LIN | LOG

*RST: LIN

Usage: Asynchronous command

Manual operation: See "[External Attenuation: Scale, Attenuation](#)" on page 127

CHANnel<ch>:EATTenuation <ExtAtt>

Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<ExtAtt> Values depend on the selected scale ([CHANnel<ch>:EATScale](#) on page 573) and the unit of the waveform. See ["External Attenuation: Scale, Attenuation"](#) on page 127. Limits below are for linear scale.

Range: 0.005 to 1000000
 Increment: 0.01
 *RST: 1

Usage: Asynchronous command

Manual operation: See ["External Attenuation: Scale, Attenuation"](#) on page 127

CHANnel<ch>:IMPedance <Impedance>

Sets the impedance of the connected probe for power calculations and measurements.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Impedance> Range: 0.1 to 100000
 Increment: 1
 *RST: 50
 Default unit: Ω

Usage: Asynchronous command

Manual operation: See ["Impedance"](#) on page 127

17.8.5 Waveform data export

To set the export data format, see [FORMat \[:DATA \]](#).

[CHANnel<ch>:DATA:HEADer?](#).....574
[CHANnel<ch>:DATA\[:VALues\]?](#).....575

CHANnel<ch>:DATA:HEADer?

Returns the header of channel waveform data. The header contains attributes of the waveform.

Table 17-3: Header data

| Position | Meaning | Example |
|----------|-------------|--------------------------|
| 1 | XStart in s | -9.477E-008 = - 94,77 ns |
| 2 | XStop in s | 9.477E-008 = 94,77 ns |

| Position | Meaning | Example |
|----------|---|---------|
| 3 | Record length of the waveform in Samples | 200000 |
| 4 | Number of values per sample interval. For most waveforms, the result is 1. For peak detect and envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length). | 1 |

Suffix:

<ch> 1 to 4, index of the analog channel

Example:

```
CHAN1:WAV1:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```

Usage:

Query only
Asynchronous command

CHANnel<ch>:DATA[:VALues]? [<Offset>],[<Length>]

Returns the data of the channel waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use [FORMat \[:DATA \]](#) on page 531.

Suffix:

<ch> 1 to 4, index of the analog channel

Query parameters:

<Offset> Number of offset waveform samples to be skipped.
Range: 0 to m. Limit: $n + m \leq \text{record length}$

<Length> Number of waveform points to be retrieved.
Range: 1 to n. Limit: $n + m \leq \text{record length}$

Example:

```
Retrieve the complete channel 1 waveform, only Y-values:
FORM ASC
CHAN1:WAV:DATA?
<-- -0.125000,-0.123016,-0.123016,-0.123016,-0.123016,-0.123016,...
```

Example:

```
Retrieve the first 10 values of the waveform:
CHANnel:WAVeform:DATA:VALues? 0,10
<-- -0.10079051554203,-0.098814234137535,-0.098814234137535,
-0.096837945282459,-0.094861663877964,-0.094861663877964,
-0.092885382473469,-0.090909093618393,-0.090909093618393,
-0.088932812213898
```

Example: Skip 5 samples and retrieve the next 5 samples:
 CHANnel:WAVeform:DATA:VALues? 5,5
 <-- -0.094861663877964,-0.092885382473469,-0.090909093618393,
 -0.090909093618393,-0.088932812213898

Usage: Query only
 Asynchronous command

17.8.6 Acquisition setup

| | |
|------------------------|-----|
| ACQUIRE:AVAILABLE? | 576 |
| ACQUIRE:AVERAGE? | 576 |
| ACQUIRE:COUNt | 577 |
| ACQUIRE:CURREnt? | 577 |
| ACQUIRE:INTerpolate | 577 |
| ACQUIRE:POINts[:VALue] | 578 |
| ACQUIRE:POINts:ARATE? | 578 |
| ACQUIRE:POINts:MAXimum | 578 |
| ACQUIRE:POINts:MODE | 578 |
| ACQUIRE:RESolution | 579 |
| ACQUIRE:SRATE[:VALue] | 579 |
| ACQUIRE:SRATE:MINimum | 579 |
| ACQUIRE:SRATE:MODE | 580 |
| ACQUIRE:SRReal | 580 |
| ACQUIRE:TYPE | 580 |

ACQUIRE:AVAILABLE?

Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Return values:

<AcquisitionCount> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage: Query only
 Asynchronous command

Manual operation: See "[Available acqs](#)" on page 217

ACQUIRE:AVERAGE?

Returns the current number of acquired waveforms that contribute to the average.

Return values:

<CurrAverageCount> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "[Current Average count](#)" on page 118

ACQUIRE:COUNT <MaxAcqCnt>

Sets the acquisition and average count, which has a double effect:

- It sets the number of waveforms acquired with `RUNSingle`.
- It defines the number of waveforms used to calculate the average waveform.

Parameters:

<MaxAcqCnt> Range: 1 to 16777215
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[N-single/Avg count](#)" on page 116

ACQUIRE:CURRENt?

Returns the current number of acquisitions that have been acquired.

Return values:

<CurrAcqCnt> Range: 0 to 18446744073709551615
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

ACQUIRE:INTERpolate <IntpolMd>

Selects the interpolation method.

Parameters:

<IntpolMd> SINX | LINear | SMHD

LINear
Linear interpolation between two adjacent sample points

SINX
Interpolation with a $\sin(x)/x$ function.

SMHD
Sample/hold causes a histogram-like interpolation.

*RST: SINX

Usage: Asynchronous command

Manual operation: See "[Interpolation](#)" on page 118

ACQUIRE:POINTS:VALue] <RecordLength>

Sets the record length, if `ACQUIRE:POINTS:MODE` is set to `MANual`.

Parameters:

<RecordLength> Range: 1000 to 200E+6
 Increment: 2
 *RST: 1000
 Default unit: pts

Usage: Asynchronous command

Manual operation: See "[Record length](#)" on page 116

ACQUIRE:POINTS:ARATe?

Returns the sample rate of the ADC, before waveform processing. The result is the interleaved sample rate or the non-interleaved one, depending on the channel usage.

Return values:

<ADCSampleRate> Range: 5 Gsample/s (interleaved), 2,5 Gsample/s (non-interleaved)
 Default unit: Hz

Usage: Query only
 Asynchronous command

ACQUIRE:POINTS:MAXimum <RecLengthLimit>

Sets the maximum record length, if `ACQUIRE:POINTS:MODE` is set to `AUTO`.

Parameters:

<RecLengthLimit> Range: 1000 to 800E+6
 Increment: 2
 *RST: 10E+6
 Default unit: pts

Usage: Asynchronous command

Manual operation: See "[Record length limit](#)" on page 116

ACQUIRE:POINTS:MODE <RecLengthMode>

Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

Parameters:

<RecLengthMode> AUTO | MANual

AUTO

Record length is determined automatically and changes due to instrument internal adjustments.

MANual

The waveform record length is defined with `ACQUIRE:POINTS[:VALUE]`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[RL mode](#)" on page 116

ACQUIRE:RESolution <Resolution>

Defines the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record.

The resolution is the reciprocal value of `ACQUIRE:SRATE[:VALUE]`.

Parameters:

<Resolution> Range: 1E-15 to Device specific
 Increment: 1E-11
 *RST: Device specific
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Resolution](#)" on page 117

ACQUIRE:SRATE[:VALUE] <SampleRate>

Sets the number of waveform points per second if `ACQUIRE:SRATE:MODE` is set to `MANual`.

Parameters:

<SampleRate> Range: 2 to 5E+12
 Increment: 1
 *RST: 5E+9
 Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "[Sample rate](#)" on page 116

ACQUIRE:SRATE:MINimum <SampleRateMin>

Sets the minimum sample rate if `ACQUIRE:SRATE:MODE` is set to `AUTO`.

Parameters:

<SampleRateMin> Increment: 1
 *RST: 2
 Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "[Min. sample rate](#)" on page 116

ACQUIRE:SRATE:MODE <SampleRateMode>

Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

Parameters:

<SampleRateMode> AUTO | MANual

AUTO

Sample rate is determined automatically and changes due to instrument internal adjustments. You can set a minimum sample rate with [ACQUIRE:SRATE:MINimum](#).

MANual

The sample rate is defined with [ACQUIRE:SRATE\[:VALue\]](#).

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[SR mode](#)" on page 115

ACQUIRE:SRReal <HWSampleRate>

Returns the sample rate of the waveform after HW processing. Interpolation is not considered.

Parameters:

<HWSampleRate> Range: Device specific to ADC sample rate
 Increment: 1
 *RST: Device specific
 Default unit: Sa/s

Usage: Asynchronous command

ACQUIRE:TYPE <AcqMd>

Sets how the waveform is built from the captured samples.

Parameters:

<AcqMd> SAMPLE | PDETect | ENVelope | AVERAge
 *RST: SAMPLE

Usage: Asynchronous command

Manual operation: See "[Acquisition mode](#)" on page 117

17.8.7 Fast segmentation

ACQUIRE:SEGMENTED:STATE <State>

If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Fast segmentation](#)" on page 119

ACQUIRE:SEGMENTED:MAX <MaxAcqs>

If ON, the instrument acquires the maximum number of segments that can be stored in the memory. The maximum number depends on the current sample rate and record length settings.

If OFF, define the number of segments in a fast segmentation cycle with [ACQUIRE:COUNT](#).

Parameters:

<MaxAcqs> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Acquire maximum](#)" on page 119

17.8.8 Probes

- [Common probe settings](#)..... 581
- [Settings for active voltage probes](#)..... 585
- [Settings for modular probes](#)..... 592
- [Settings for current probes](#)..... 595
- [Optical isolated probes](#)..... 597
- [Probe adapter R&S RT-Z2T](#)..... 600
- [Probe attributes](#)..... 600

17.8.8.1 Common probe settings

The probe suffix <ch> selects the input channel to which the probe is connected.

[PROBe<ch>:SETup:ATTenuation\[:AUTO\]?](#)..... 582
[PROBe<ch>:SETup:ATTenuation:MANual](#)..... 582
[PROBe<ch>:SETup:ATTenuation:DEFProbe](#)..... 582

| | |
|---|-----|
| PROBe<ch>:SETup:ATTenuation:UNIT..... | 583 |
| PROBe<ch>:SETup:BANDwidth?..... | 583 |
| PROBe<ch>:SETup:OFFSet:TOMean..... | 584 |
| PROBe<ch>:SETup:OFFSet:AZERo..... | 584 |
| PROBe<ch>:SETup:OFFSet:USEautozero..... | 584 |
| PROBe<ch>:SETup:NAME?..... | 584 |
| PROBe<ch>:SETup:STATe?..... | 585 |
| PROBe<ch>:SETup:TYPE?..... | 585 |

PROBe<ch>:SETup:ATTenuation[:AUTO]?

Returns the attenuation of a detected or predefined probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Attenuation> Range: 0.001 to 1000
 Increment: 0.1
 *RST: 1
 Default unit: V/V

Usage:

Query only
 Asynchronous command

Manual operation: See "[Attenuation](#)" on page 130

PROBe<ch>:SETup:ATTenuation:MANual <Attenuation>

Sets the attenuation for an unknown probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Attenuation> Range: 0.0001 to 10000
 Increment: 0.1
 *RST: 1
 Default unit: V/V

Usage:

Asynchronous command

Manual operation: See "[Attenuation](#)" on page 130

PROBe<ch>:SETup:ATTenuation:DEFProbe <PredefinedProbe>

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<PredefinedProbe> NONE | USER | ZC10 | ZC20 | ZC30 | ZD01A100 | ZD01A1000 |
 ZS10L | ZC02100 | ZC021000 | ZC03

USER

Probe is not detected and not known to the instrument. Set unit and attenuation manually.

ZC10 | ZC20 | ZC30 | ZS10L | ZC03

Type of the probe

ZD01A100 | ZD01A1000

High voltage differential probes, attenuation ratio according to the setting on the probe.

A100 = 100:1

A1000 = 1000:1

ZC02100 | ZC021000

Current probes 100 A or 1000 A according to the setting on the probe.

*RST: NONE

Usage: Asynchronous command

Manual operation: See ["Predefined probe, name and type of the probe"](#) on page 129

PROBe<ch>:SETup:ATTenuation:UNIT <Unit>

Returns the unit of the connected probe if the probe is detected or predefined. For unknown probes, you can select the required unit.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Unit> V | A | W
Voltage probe (V), current probe (A), power probe (W)

*RST: V

Usage: Asynchronous command

Manual operation: See ["Vertical unit"](#) on page 130

PROBe<ch>:SETup:BANDwidth?

Returns the bandwidth of the connected probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Bandwidth> Range: 10000 to 20000000000
Increment: 10
*RST: 1500000000
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See ["Probe bandwidth"](#) on page 130

PROBe<ch>:SETup:OFFSet:TOMean

Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
Asynchronous command

Manual operation: See ["Set offset to mean"](#) on page 130

PROBe<ch>:SETup:OFFSet:AZERo

Measures the zero error. Short the signal pin and the ground pin together and connect them to the ground of the DUT before sending the command.

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
Asynchronous command

Manual operation: See ["AutoZero, Use AutoZero"](#) on page 131

PROBe<ch>:SETup:OFFSet:USEautozero <UseAutoZeroOffset>

Includes the AutoZero offset in measurement results. The AutoZero error is detected with [PROBe<ch>:SETup:OFFSet:AZERo](#).

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<UseAutoZeroOffset> ON | OFF

*RST: OFF

Example:

```
PROB2:SET:OFFS:AZER
```

```
PROB2:SET:OFFS:USE ON
```

Detects the zero error and uses it for correction of measurement results.

Usage:

Asynchronous command

Manual operation: See ["AutoZero, Use AutoZero"](#) on page 131

PROBe<ch>:SETup:NAME?

Queries the name of the probe.

| | |
|--------------------------|---|
| Suffix: | |
| <ch> | 1 to 4, index of the analog channel |
| Return values: | |
| <Name> | Name string |
| Usage: | Query only
Asynchronous command |
| Manual operation: | See "Predefined probe, name and type of the probe"
on page 129 |

PROBe<ch>:SETup:STATe?

Queries if the probe at the specified input channel is active (detected) or not active (not detected). To switch the probe on, use [CHANnel<ch>:STATe](#).

| | |
|--------------------------|---|
| Suffix: | |
| <ch> | 1 to 4, index of the analog channel |
| Return values: | |
| <State> | DETEcted NDETEcted
*RST: NDETEcted |
| Usage: | Query only
Asynchronous command |
| Manual operation: | See "Predefined probe, name and type of the probe"
on page 129 |

PROBe<ch>:SETup:TYPE?

Queries the class of the probe.

| | |
|--------------------------|--|
| Suffix: | |
| <ch> | 1 to 4, index of the analog channel |
| Return values: | |
| <Type> | String containing the probe class, e.g. None (no probe detected), passive, current, active diff., active single-ended. |
| Usage: | Query only
Asynchronous command |
| Manual operation: | See "Predefined probe, name and type of the probe"
on page 129 |

17.8.8.2 Settings for active voltage probes

The probe suffix <ch> selects the input channel to which the probe is connected.

| | |
|--|-----|
| PROBe<ch>:SETup:MODE | 586 |
| PROBe<ch>:SETup:ACCoupling | 587 |
| PROBe<ch>:SETup:CMOffset | 587 |

| | |
|---|-----|
| PROBe<ch>:SETup:DISPlaydiff..... | 587 |
| PROBe<ch>:SETup:ZAXV..... | 588 |
| PROBe<ch>:PMETer:STATe..... | 588 |
| PROBe<ch>:PMETer:RESults:SINGle?..... | 589 |
| PROBe<ch>:PMETer:RESults:COMMon?..... | 589 |
| PROBe<ch>:PMETer:RESults:DIFFerential?..... | 589 |
| PROBe<ch>:PMETer:RESults:NEGative?..... | 590 |
| PROBe<ch>:PMETer:RESults:POSitive?..... | 590 |
| PROBe<ch>:SETup:ADVanced:AUDioverload..... | 590 |
| PROBe<ch>:SETup:ADVanced:FILTer..... | 591 |
| PROBe<ch>:SETup:ADVanced:RANGe..... | 591 |
| PROBe<ch>:SETup:ADVanced:PMToffset..... | 591 |

PROBe<ch>:SETup:MODE <Mode>

The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection.

Select the action that you want to start from the probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Mode> RCONTinuous | RSINGle | AUToset | AZERo | OTMean | SITFile | NOACtion | FTRiglevel | PRSetup

RCONTinuous

Run continuous: the acquisition is running as long as the probe button is pressed.

RSINGle

Run single: starts a defined number of acquisitions (same as [Single] key).

AUToset

Starts the autoset procedure.

AZERo

AutoZero: performs an automatic correction of the zero error.

OTMean

Set offset to mean: performs an automatic compensation for a DC component of the input signal.

SITFile

Save image to file: saves the display image in a file.

NOACtion

Nothing is started on pressing the micro button.

FTRiglevel

Sets the trigger level automatically to $0.5 * (MaxPeak - MinPeak)$. The function is not available for an external trigger source.

PRSetup

Opens the "Probes Setup" dialog box.

*RST: RCONTinuous

Usage: Asynchronous command

Manual operation: See "[MicroButton](#)" on page 133

PROBe<ch>:SETup:ACCoupling <ProbeCouplingAC>

Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<ProbeCouplingAC> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[AC Coupling](#)" on page 136

PROBe<ch>:SETup:CMOffset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<CMOffset> Range: -1E+26 to 1E+26

Increment: 0.001

*RST: 0

Default unit: V

Usage: Asynchronous command

Manual operation: See "[CM offset](#)" on page 135

PROBe<ch>:SETup:DISPlaydiff <DisplayDiff>

Selects the voltage to be measured by the R&S ProbeMeter of differential active probes:

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <DisplayDiff> DIFFerential | SINGleended

DIFFerential
 Measures differential and common mode voltages

SINGleended
 Measures the voltage between the positive/negative signal socket and the ground.

*RST: DIFFerential

Usage: Asynchronous command

Manual operation: See "[Display](#)" on page 135

PROBe<ch>:SETup:ZAXV <AttenuationZA15>

If you use the external attenuator R&S RT-ZA15 together with one of the differential active probes R&S RT-ZD10/20/30, enable "RT-ZA15 attenuator" to include the external attenuation in the measurements.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <AttenuationZA15> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[RT-ZA15 attenuator](#)" on page 135

PROBe<ch>:PMETer:STATe <State>

Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <State> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:PMETer:RESults:SINGle?

Returns the R&S ProbeMeter measurement result of single-ended active Rohde & Schwarz probes, the voltage measured between the probe tip and the ground.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage:

Query only
Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:PMETer:RESults:COMMon?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the common mode voltage, which is the mean voltage between the signal sockets and the ground socket.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage:

Query only
Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:PMETer:RESults:DIFFerential?

Returns the R&S ProbeMeter measurement result of differential active Rohde & Schwarz probes, the differential voltage - the voltage between the positive and negative signal sockets.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:PMETer:RESults:NEGative?

Returns the R&S ProbeMeter measurement result of differential active R&S probes, the voltage that is measured between the negative signal socket and the ground.

Suffix:
<ch> 1 to 4, index of the analog channel

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:PMETer:RESults:POSitive?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the voltage that is measured between the positive signal socket and the ground.

Suffix:
<ch> 1 to 4, index of the analog channel

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "[ProbeMeter](#)" on page 133

PROBe<ch>:SETup:ADVanced:AUDioverload <Sound>

Activates the acoustic overrange warning in the probe control box. The command is relevant for R&S RT-ZHD probes.

Suffix:
<ch> 1 to 4, index of the analog channel

Parameters:
<Sound> ON | OFF
*RST: OFF

Usage: Asynchronous command
Manual operation: See "[Audible overrange](#)" on page 138

PROBe<ch>:SETup:ADVanced:FILTer <State>

Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <State> ON | OFF
 *RST: OFF

Usage: Asynchronous command
Manual operation: See "[Bandwidth limit](#)" on page 138

PROBe<ch>:SETup:ADVanced:RANGe <ProbeRange>

Sets the voltage range of an R&S RT-ZHD probe.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <ProbeRange> AUTO | MHIGH | MLOW
AUTO
 The voltage range is set with [CHANnel<ch>:SCALE](#).

MHIGH

Sets the higher voltage range of the connected probe. To query the value, use [PROBe<ch>:SETup:ATTenuation\[:AUTO\]?](#).

MLOW

Sets the lower voltage range of the connected probe. To query the value, use [PROBe<ch>:SETup:ATTenuation\[:AUTO\]?](#).

*RST: AUTO

Usage: Asynchronous command
Manual operation: See "[Range](#)" on page 138

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
 <ch> 1 to 4, index of the analog channel

Usage: Setting only
 Asynchronous command

Manual operation: See ["Set offset to ProbeMeter value"](#) on page 145

17.8.8.3 Settings for modular probes

| | |
|---|-----|
| PROBe<ch>:SETup:PRMode | 592 |
| PROBe<ch>:SETup:CMOffset | 592 |
| PROBe<ch>:SETup:DMOffset | 593 |
| PROBe<ch>:SETup:NOFFset | 593 |
| PROBe<ch>:SETup:POFFset | 593 |
| PROBe<ch>:SETup:TERM:ADJust | 594 |
| PROBe<ch>:SETup:TERM:MEASure? | 594 |
| PROBe<ch>:SETup:TERM:MODE | 594 |
| PROBe<ch>:SETup:TERM:STATe | 595 |

PROBe<ch>:SETup:PRMode <MeasMode>

Sets the measurement mode of modular probes.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<PrbMeasMd> DMODe | CMODE | PMODE | NMODE

DMODE

Differential mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

CMODE

Common mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

PMODE

Positive single-ended input voltage (V_p). the voltage between the positive input terminal and ground.

NMODE

Negative single-ended input voltage (V_N). the voltage between the negative input terminal and ground.

*RST: DMODe

Usage: Asynchronous command

Manual operation: See ["Probe mode"](#) on page 142

PROBe<ch>:SETup:CMOffset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<CMOffset> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See ["CM offset"](#) on page 135

PROBe<ch>:SETup:DMOffset <DMOffset>

Sets the differential offset to compensate a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<DMOffset> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See ["DM Offset, CM Offset, P Offset, N Offset"](#) on page 142

PROBe<ch>:SETup:NOFFset <NOffset>

Sets the negative offset to compensate a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<NOffset> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See ["DM Offset, CM Offset, P Offset, N Offset"](#) on page 142

PROBe<ch>:SETup:POFFset <POffset>

Sets the positive offset to compensate a DC voltage applied to the positive input terminal (V_p) referenced to ground.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<POffset> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[DM Offset, CM Offset, P Offset, N Offset](#)" on page 142

PROBe<ch>:SETup:TERM:ADJust <VoltageAdj>

Activates control of the termination voltage.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<VoltageAdj> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Adjustment](#)" on page 144

PROBe<ch>:SETup:TERM:MEASure?

Returns the measured common mode voltage.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<VoltageMeas> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Query only
 Asynchronous command

Manual operation: See "[Measurement](#)" on page 144

PROBe<ch>:SETup:TERM:MODE <Mode>

Selects the voltage that is used for termination.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Mode> AUTO | MANual
 AUTO: the instrument uses the measured common mode voltage for termination.
 MANual: enter the voltage to be used for termination with [PROBe<ch>:SETup:TERM:ADJust](#).
 *RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Mode](#)" on page 143

PROBe<ch>:SETup:TERM:STATe <VoltageState>

Activates control of the termination voltage.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<VoltageState> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[State](#)" on page 143

17.8.8.4 Settings for current probes

The probe suffix <ch> selects the input channel to which the probe is connected.

| | |
|--|-----|
| PROBe<ch>:SETup:GAIN:AUTO? | 595 |
| PROBe<ch>:SETup:GAIN:MANual | 596 |
| PROBe<ch>:SETup:DEGauss | 596 |
| PROBe<ch>:SETup:OFFSet:ZADJust | 596 |
| PROBe<ch>:SETup:OFFSet:STPRobe | 596 |

PROBe<ch>:SETup:GAIN:AUTO?

Returns the gain of a detected or predefined current probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Gain> Range: 0.001 to 1000
 Increment: 0.1
 *RST: 1
 Default unit: A/V

Usage: Query only
 Asynchronous command

Manual operation: See "[Gain, Manual gain](#)" on page 139

PROBe<ch>:SETup:GAIN:MANual <Gain>

Sets the gain for an unknown current probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<Gain> Range: 0.0001 to 10000
 Increment: 0.0001
 *RST: 1
 Default unit: V/V

Usage: Asynchronous command

Manual operation: See ["Gain, Manual gain"](#) on page 139

PROBe<ch>:SETup:DEGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
 Asynchronous command

Manual operation: See ["DeGauss"](#) on page 140

PROBe<ch>:SETup:OFFSet:ZADJust <ZeroAdjustValue>

Set the waveform to zero position. It corrects the effect of a voltage offset or temperature drift. To set the value by the instrument, use [PROBe<ch>:SETup:OFFSet:AZERo](#).

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<ZroAdjVal> Range: -100 to 100
 Increment: 0.1
 *RST: 0
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Zero adjust"](#) on page 140

PROBe<ch>:SETup:OFFSet:STPRobe

Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Suffix:
 <ch> 1 to 4, index of the analog channel

Usage: Event
 Asynchronous command

Manual operation: See ["Save to probe"](#) on page 140

17.8.8.5 Optical isolated probes

The commands of this chapter are relevant for optical isolated probes. The commands are available in firmware version 2.2 and higher

| | |
|--|-----|
| PROBe<ch>:SETup:ADVanced:UNIT | 597 |
| PROBe<ch>:SETup:OFFSet:TOPMeter | 597 |
| PROBe<ch>:SETup:LASer:OPERatinghrs? | 598 |
| PROBe<ch>:SETup:LASer:STATe? | 598 |
| PROBe<ch>:SETup:ALIGnment:GAIN:EXECute | 598 |
| PROBe<ch>:SETup:ALIGnment:ZERO:EXECute | 599 |
| PROBe<ch>:SETup:ALIGnment:WRITe | 599 |
| PROBe<ch>:SETup:ADVanced:RDEFaults | 599 |
| PROBe<ch>:SETup:TIPModel:NAME? | 599 |

PROBe<ch>:SETup:ADVanced:UNIT <SelectUnit>

Sets the unit of the R&S RT-ZISO signal.

Suffix:
 <ch> 1 to 4, index of the analog channel

Parameters:
 <SelectUnit> V | A | W
 *RST: V

Usage: Asynchronous command

Manual operation: See ["Select input unit"](#) on page 145

PROBe<ch>:SETup:OFFSet:TOPMeter

Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
 <ch> 1..8

Usage: Event
 Asynchronous command

Manual operation: See ["ProbeMeter to offset"](#) on page 137

PROBe<ch>:SETup:LASer:OPERatinghrs?

Returns the operating hours of the R&S RT-ZISO laser since the first use or last service.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<LaserOperatingHours> Range: 0 to 100000
 Increment: 1
 *RST: 0
 Default unit: hrs

Usage:

Query only
 Asynchronous command

Manual operation: See "[Laser hours](#)" on page 145

PROBe<ch>:SETup:LASer:STATe?

Returns the current status of the laser.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<LaserState> 1 | 2 | 3
1
 The laser is working.
2
 The laser needs service, but is still working.
3
 Defective laser, send to your Rohde & Schwarz service center.
 *RST: 1

Usage:

Query only
 Asynchronous command

Manual operation: See "[Laser state](#)" on page 145

PROBe<ch>:SETup:ALIGnment:GAIN:EXECute

Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use [PROBe<ch>:SETup:ALIGnment:WRITe](#).

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
 Asynchronous command

Manual operation: See ["Gain/Zero-error alignment"](#) on page 146

PROBe<ch>:SETup:ALIGnment:ZERO:EXECute

Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use [PROBe<ch>:SETup:ALIGnment:WRITe](#).

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
Asynchronous command

Manual operation: See ["Zero-error alignment"](#) on page 146

PROBe<ch>:SETup:ALIGnment:WRITe

The command writes the alignment result to the non-volatile flash of the probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
Asynchronous command

PROBe<ch>:SETup:ADVanced:RDEFaults

Resets the zero point and gain error correction to the factory default values.

Suffix:

<ch> 1 to 4, index of the analog channel

Usage:

Event
Asynchronous command

Manual operation: See ["Restore default values"](#) on page 146

PROBe<ch>:SETup:TIPModel:NAME?

Returns the name of the tip module that is connected to the R&S RT-ZISO probe at the specified channel.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<ProbeTipModel> UNKNOWN | Z101 | Z201 | Z202 | Z203 | Z301 | Z302 | NONE
*RST: NONE

Usage:

Query only
Asynchronous command

17.8.8.6 Probe adapter R&S RT-Z2T

| | |
|--|-----|
| <code>PROBe<ch>:SETup:ADAPter?</code> | 600 |
| <code>PROBe<ch>:SETup:ATTenuation:TDEFprobe</code> | 600 |

PROBe<ch>:SETup:ADAPter?

Queries the adapter status, whether the instrument identified the adapter.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Type> NONE | Z2T

*RST: NONE

Usage:

Query only
Asynchronous command

PROBe<ch>:SETup:ATTenuation:TDEFprobe <TekPredefProbe>

Selects the Tektronix probe that is connected to the R&S RT-Z2T adapter.

Suffix:

<ch> 1 to 4, index of the analog channel

Parameters:

<TekPredefProbe> NONE | P5205A50 | P5205A500 | P5210A100 | P5210A1000 |
P6205 | P6241 | P6243 | P6245 | P6246A1 | P6246A10 |
P6247A1 | P6247A10 | P6248A1 | P6248A10 | P6249 |
P6250A5 | P6250A50 | P6251A5 | P6251A50 | P6701B |
P6703B | P6711 | P6713 | TCP202

*RST: NONE

Example:

```
PROBe2:SETup:ADAPter
```

```
<-- Z2T
```

```
PROBe2:SETup:ATTenuation:TDEFprobe P5205A50
```

Checks the adapter state on channel 2, and selects the probe P5205A50.

Usage:

Asynchronous command

17.8.8.7 Probe attributes

| | |
|---|-----|
| <code>PROBe<ch>:ID:PARTnumber?</code> | 601 |
| <code>PROBe<ch>:ID:PRDate?</code> | 601 |
| <code>PROBe<ch>:ID:SRNumber?</code> | 601 |
| <code>PROBe<ch>:ID:SWVersion?</code> | 601 |
| <code>PROBe<ch>:SETup:CAPacitance?</code> | 602 |

| | |
|-----------------------------------|-----|
| PROBe<ch>:SETup:DCRange:MAX?..... | 602 |
| PROBe<ch>:SETup:DCRange:MIN?..... | 602 |
| PROBe<ch>:SETup:IMPedance?..... | 602 |

PROBe<ch>:ID:PARTnumber?

Queries the Rohde & Schwarz part number of the probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<PartNumber> Part number in a string.

Usage:

Query only
Asynchronous command

PROBe<ch>:ID:PRDate?

Queries the production date of the probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<ProductionDate> Date in a string.

Usage:

Query only
Asynchronous command

PROBe<ch>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<SerialNo> Serial number in a string.

Usage:

Query only
Asynchronous command

PROBe<ch>:ID:SWVersion?

Queries the version of the probe firmware.

Suffix:

<ch> 1 to 4, index of the analog channel

Return values:

<Softwareversion> Version number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:CAPacitance?

Queries the input capacitance of the probe.

Suffix:
<ch> 1 to 4, index of the analog channel

Return values:
<InputCapacity> Range: 1E-13 to 1E-07
Default unit: F

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MAX?

Returns the maximum value of the dynamic DC range.

Suffix:
<ch> 1 to 4, index of the analog channel

Return values:
<DynDCrangeMax> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MIN?

Returns the minimum value of the dynamic DC range.

Suffix:
<ch> 1 to 4, index of the analog channel

Return values:
<DynDCrangeMin> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:IMPedance?

Queries the termination of the probe.

Suffix:
 <ch> 1 to 4, index of the analog channel

Return values:
 <InputImpedance> Range: 0 to 1E+9
 Default unit: Ω

Usage: Query only
 Asynchronous command

17.8.9 High definition mode

| | |
|---|-----|
| HDEFinition:BWIDth | 603 |
| HDEFinition:RESolution? | 603 |
| HDEFinition:STATe | 603 |

HDEFinition:BWIDth <Bandwidth>

Sets the filter bandwidth for the high definition mode.

Parameters:
 <Bandwidth> Range: 10000 to 2E+9
 Increment: 1000
 *RST: 100E+6
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Bandwidth](#)" on page 121

HDEFinition:RESolution?

Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Return values:
 <Resolution> Range: 0 to 18
 Increment: 0.1
 *RST: 0
 Default unit: bit

Usage: Query only
 Asynchronous command

Manual operation: See "[Resolution in bits](#)" on page 121

HDEFinition:STATe <State>

Enables high definition mode, which increases the numeric resolution of the waveform signal.

Parameters:

<State> ON | OFF
 ON: high definition mode
 OFF: normal oscilloscope mode
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[State](#)" on page 120

17.8.10 Reference clock

SENSe[:ROSCillator]:OUTPut[:ENABle] <ReferenceOutput>

Sends the internal reference clock signal to the Ref. Out connector.

Parameters:

<ReferenceOutput> ON | OFF
 *RST: OFF

Usage: SCPI confirmed
 Asynchronous command

Manual operation: See "[Output 10 MHz ref. signal](#)" on page 111

SENSe[:ROSCillator]:SOURce <RefSource>

Enables the use of an external 10 MHz reference signal instead of the internal reference clock.

Parameters:

<RefSource> INTernal | EXTernal
 *RST: INTernal

Usage: Asynchronous command

Manual operation: See "[Use external ref. clock](#)" on page 111

17.9 Trigger

Trigger commands use several suffixes.

LEVel<n>, Noise<m>

The suffix indicates the analog channel, for which the command takes effect. C1 has suffix 1, C2 has suffix 2, and so on.

Event<ev>

The suffix indicates the sequence step, for which the command takes effect when you trigger on a sequence. If you trigger on a single event, the suffix = 1 and can be omitted.

- 1 = A-trigger
- 2 = B-trigger
- 3 = R-trigger (reset event)

Asynchronous commands

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-sdpi, chapter "Command sequence and synchronization"

17.9.1 Common trigger settings

| | |
|---|-----|
| TRIGger:MEVents:MODE..... | 605 |
| TRIGger:EVENT<ev>:TYPE..... | 605 |
| TRIGger:EVENT<ev>:LEVel<n>[:VALue]..... | 606 |
| TRIGger:FINDlevel..... | 606 |
| TRIGger:EVENT<ev>:SOURce..... | 606 |

TRIGger:MEVents:MODE <Class>

Selects, if you want to trigger on a single event, or on a series of events.

Parameters:

<Class> SINGLE | SEQUENCE
 *RST: SINGLE

Usage: Asynchronous command

Manual operation: See "Trigger on" on page 153

TRIGger:EVENT<ev>:TYPE <Type>

Selects the trigger type. In a trigger sequence the trigger type is set for each condition.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Type> EDGE | GLITch | WIDTH | RUNT | WINDOW | TIMEout | INTerval | SLEWrate | ANEDge | SETHold | STATE | PATtern
 ANEDge = analog edge trigger is the only trigger type if the extern trigger source is used.
 For SETHold, also DATatoclock can be used.
 *RST: EDGE

Usage: Asynchronous command

Manual operation: See "[Type](#)" on page 154

TRIGger:EVENT<ev>:LEVel<n>[:VALue] <Level>

Sets the trigger level for the specified event and source (channel).

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[\[Level\]](#)" on page 41

TRIGger:FINDlevel

Sets the trigger level automatically to $0.5 * (MaxPeak - MinPeak)$.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

Usage: Event
 Asynchronous command

Manual operation: See "[Find level](#)" on page 155

TRIGger:EVENT<ev>:SOURce <SourceDetailed>

Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source.

| | |
|--------------------------|---|
| Suffix: | |
| <ev> | 1 = A-trigger, 2 = B-trigger, 3 = reset event |
| Parameters: | |
| <SourceDetailed> | C1 C2 C3 C4 EXTErnanalog LINE D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 SBUS1 SBUS2 SBUS3 SBUS4 |
| | C1 C2 C3 C4
Available for single event and all events in a trigger sequence |
| | EXTErnanalog LINE D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 SBUS1 SBUS2 SBUS3 SBUS4
Available for single event (EVENT1) |
| | *RST: C1 |
| Usage: | Asynchronous command |
| Manual operation: | See "[Source]" on page 41 |

17.9.2 Trigger sequence

| | |
|---|-----|
| TRIGger:MEVents:AEVents..... | 607 |
| TRIGger:MEVents:SEQuence<se>:COUNT..... | 607 |
| TRIGger:MEVents:SEQuence<se>:DELay..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:EVENT..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:TIMEout:TIME..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:TIMEout[ENABLE]..... | 609 |

TRIGger:MEVents:AEVents <Type>

Selects the type of the trigger sequence.

Parameters:

| | |
|--------|--------------------------|
| <Type> | AONLY ABR |
| | ABR = sequence A → B → R |
| | *RST: AONLY |

Usage: Asynchronous command

Manual operation: See "Trigger sequence" on page 156

TRIGger:MEVents:SEQuence<se>:COUNT <Events>

Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Suffix:

| | |
|------|------|
| <se> | 1..3 |
| | 2 |

Parameters:

<Events> Range: 1 to 2147483647
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[B event count](#)" on page 157

TRIGger:MEVents:SEQuence<se>:DELay <Delay>

Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Suffix:

<se> 1

Parameters:

<Delay> Range: 0 to 50
 Increment: 1E-12
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Delay](#)" on page 156

TRIGger:MEVents:SEQuence<se>:RESet:EVENT <State>

If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Suffix:

<se> 3

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Enable reset event](#)" on page 157

TRIGger:MEVents:SEQuence<se>:RESet:TIMEout:TIME <ResetTimeout>

The time the instrument waits for the number of B-events specified using [TRIGger:MEVents:SEQuence<se>:COUNT](#), before the sequence is restarted with the A-trigger.

Suffix:

<se> Irrelevant, omit the suffix.

Parameters:

<ResetTimeout> Range: 0 to 50
 Increment: 1E-12
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["Enable reset by time, Reset timeout"](#) on page 157

TRIGger:MEVents:SEQuence<se>:RESet:TIMEout[:ENABle] <State>

If set to ON, the instrument waits for the time defined using [TRIGger:MEVents:SEQuence<se>:RESet:TIMEout:TIME](#) for the specified number of B-events. If no trigger occurs during that time, the sequence is restarted with the A-event.

Suffix:

<se> Irrelevant, omit the suffix.

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Enable reset by time, Reset timeout"](#) on page 157

17.9.3 Edge trigger

| | |
|--|-----|
| TRIGger:EVENT<ev>:EDGE:SLOPe | 609 |
| TRIGger:ANEDge:LEVel | 610 |
| TRIGger:ANEDge:COUPling | 610 |
| TRIGger:ANEDge:FILTer | 610 |
| TRIGger:ANEDge:CUToff:HIGHPass | 610 |
| TRIGger:ANEDge:CUToff:LOWPass | 611 |
| TRIGger:ANEDge:NREJect | 611 |

TRIGger:EVENT<ev>:EDGE:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Slope> POSitive | NEGative | EITHer
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See ["Slope"](#) on page 158

TRIGger:ANEDge:LEVel <ExtTrigLev>

Sets the trigger level for the external trigger source.

Parameters:

<ExtTrigLev> Range: - 5 to 5
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Level](#)" on page 154

TRIGger:ANEDge:COUPling <Coupling>

Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

Parameters:

<Coupling> DC | DCLimit | AC

DC

Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit

Connection with 1 M Ω termination, passes both DC and AC components of the signal.

AC

Connection with 1 M Ω termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

*RST: DCLimit

Usage: Asynchronous command

Manual operation: See "[Coupling](#)" on page 159

TRIGger:ANEDge:FILTer <Filter>

Selects the filter mode for the external trigger signal.

Parameters:

<Filter> OFF | LFReject | RFReject
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Filter, Cut-off](#)" on page 160

TRIGger:ANEDge:CUToff:HIGHpass <CutOffFreq>

Frequencies below the cutoff frequency are rejected, higher frequencies pass the filter.

Parameters:

<CutOffFreq> KHZ5 | KHZ50
 KHZ5 = 5 kHz
 KHZ50 = 50 kHz
 *RST: KHZ50

Usage: Asynchronous command

Manual operation: See "[Filter, Cut-off](#)" on page 160

TRIGger:ANEDge:CUToff:LOWPass <CutOffFreq>

Frequencies higher than the cutoff frequency are rejected, lower frequencies pass the filter.

Parameters:

<CutOffFreq> KHZ50 | MHZ50
 KHZ50 = 50 kHz
 MHZ50 = 50 MHz
 *RST: KHZ50

Usage: Asynchronous command

Manual operation: See "[Filter, Cut-off](#)" on page 160

TRIGger:ANEDge:NREJect <NoiseReject>

Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Parameters:

<NoiseReject> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Trigger noise reject](#)" on page 160

17.9.4 Glitch trigger

| | |
|---|-----|
| TRIGger:EVENT<ev>:GLITch:POLarity | 611 |
| TRIGger:EVENT<ev>:GLITch:RANGe | 612 |
| TRIGger:EVENT<ev>:GLITch:WIDTh | 612 |

TRIGger:EVENT<ev>:GLITch:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHer
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 161

TRIGger:EVENT<ev>:GLITch:RANGe <RangeMode>

Selects which glitches are identified: shorter or longer than the width specified using [TRIGger:EVENT<ev>:GLITch:WIDTh](#).

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> SHORter | LONGer

SHORter

Glitches shorter than the specified width are identified.

LONGer

Glitches longer than the specified width are identified.

*RST: SHORter

Usage: Asynchronous command

Manual operation: See "Range" on page 161

TRIGger:EVENT<ev>:GLITch:WIDTh <Width>

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with [TRIGger:EVENT<ev>:GLITch:RANGe](#).

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width> Range: 1E-10 to 10000
 Increment: 0.0001
 *RST: 1E-09
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 161

17.9.5 Width trigger

| | |
|--|-----|
| TRIGger:EVENT<ev>:WIDTh:DELTA | 613 |
| TRIGger:EVENT<ev>:WIDTh:POLarity | 613 |
| TRIGger:EVENT<ev>:WIDTh:RANGe | 613 |
| TRIGger:EVENT<ev>:WIDTh:WIDTh | 613 |

TRIGger:EVENT<ev>:WIDTH:DELTA <WidthDelta>

Defines a range around the width value.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta> Range: 0 to 432
Increment: 5E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "[±Delta](#)" on page 163

TRIGger:EVENT<ev>:WIDTH:POLARITY <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Polarity](#)" on page 163

TRIGger:EVENT<ev>:WIDTH:RANGE <RangeMode>

Selects how the range of a pulse width is defined.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer
*RST: WITHin

Usage: Asynchronous command

Manual operation: See "[Range](#)" on page 163

TRIGger:EVENT<ev>:WIDTH:WIDTH <Width>

Depending on the values of [TRIGger:EVENT<ev>:WIDTH:RANGE](#) the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range which is defined by the limits "[±Delta](#)" (see [TRIGger:EVENT<ev>:WIDTH:DELTA](#)).

- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width> Range: 1E-10 to 10000
 Increment: 1E-07
 *RST: 5E-09
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Width](#)" on page 163

17.9.6 Runt trigger

| | |
|---|-----|
| TRIGger:EVENT<ev>:LEVel<n>:RUNT:LOWer | 614 |
| TRIGger:EVENT<ev>:LEVel<n>:RUNT:UPPer | 614 |
| TRIGger:EVENT<ev>:RUNT:DELTA | 615 |
| TRIGger:EVENT<ev>:RUNT:POLarity | 615 |
| TRIGger:EVENT<ev>:RUNT:RANGe | 615 |
| TRIGger:EVENT<ev>:RUNT:WIDTh | 616 |

TRIGger:EVENT<ev>:LEVel<n>:RUNT:LOWer <Level>

Sets the lower voltage limit.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10
 Increment: 0.001
 *RST: -0.1
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Lower level](#)" on page 165

TRIGger:EVENT<ev>:LEVel<n>:RUNT:UPPer <Level>

Sets the upper voltage limit.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10
 Increment: 0.001
 *RST: 0.1
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level](#)" on page 164

TRIGger:EVENT<ev>:RUNT:DELTA <WidthDelta>

Defines a range around the runt width specified using [TRIGger:EVENT<ev>:RUNT:WIDTH](#).

Available if [TRIGger:EVENT<ev>:RUNT:RANGE](#) is set to WITHin or OUTSide.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta> Range: 1E-10 to 864
 Increment: 1E-07
 *RST: 1E-10
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[±Delta](#)" on page 165

TRIGger:EVENT<ev>:RUNT:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHER
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Polarity](#)" on page 161

TRIGger:EVENT<ev>:RUNT:RANGE <Mode>

Defines the time limit of the runt pulse in relation to the [TRIGger:EVENT<ev>:RUNT:WIDTH](#) and [TRIGger:EVENT<ev>:RUNT:DELTA](#) settings.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Mode> ANY | LONGer | SHORter | WITHin | OUTSide

ANY

Triggers on all runts fulfilling the level condition, without time limitation.

LONGer

Triggers on runts longer than the given runt width.

SHORter

Triggers on runts shorter than the given runt width.

WITHin

Triggers if the runt length is inside a given time range. The range is defined by runt width and $\pm\Delta$.

OUTSide

Triggers if the runt length is outside a given time range. The range is defined by runt width and $\pm\Delta$.

*RST: ANY

Usage:

Asynchronous command

Manual operation: See "Range" on page 165

TRIGger:EVENT<ev>:RUNT:WIDTH <Width>

Defines the upper or lower voltage threshold.

It is not available if **TRIGger:EVENT<ev>:RUNT:RANGE** is set to ANY.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width> Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage:

Asynchronous command

Manual operation: See "Runt width" on page 165

17.9.7 Window trigger

| | |
|---|-----|
| TRIGger:EVENT<ev>:LEVel<n>:WINDow:LOWer | 617 |
| TRIGger:EVENT<ev>:LEVel<n>:WINDow:UPPer | 617 |
| TRIGger:EVENT<ev>:WINDow:DELTA | 617 |
| TRIGger:EVENT<ev>:WINDow:RANGE | 618 |
| TRIGger:EVENT<ev>:WINDow:TIME | 618 |
| TRIGger:EVENT<ev>:WINDow:WIDTH | 619 |

TRIGger:EVENT<ev>:LEVel<n>:WINDow:LOWer <Level>

Sets the lower voltage limit.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10

Increment: 0.001

*RST: -0.1

Default unit: V

Usage: Asynchronous command

Manual operation: See "[Lower level](#)" on page 167

TRIGger:EVENT<ev>:LEVel<n>:WINDow:UPPer <Level>

Sets the upper voltage limit.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: 0 to 1000

Increment: 1E-06

*RST: 0.1

Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level](#)" on page 166

TRIGger:EVENT<ev>:WINDow:DELTA <WidthDelta>

Defines a range around the width value.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta> Range: 0 to 432

Increment: 5E-10

*RST: 0

Default unit: s

Usage: Asynchronous command

Manual operation: See "[±Delta](#)" on page 167

TRIGger:EVENT<ev>:WINDow:RANGe <RangeMode>

Selects how the signal run is compared with the window.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> ENTer | EXIT | WITHin | OUTSide

ENTer

Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

EXIT

Triggers when the signal leaves the window.

WITHin

Triggers if the signal stays between the upper and lower level for a specified time. The time is defined with [TRIGger:EVENT<ev>:WINDow:TIME](#).

OUTSide

Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is defined with [TRIGger:EVENT<ev>:WINDow:TIME](#).

*RST: ENTer

Usage: Asynchronous command

Manual operation: See "[Vertical condition](#)" on page 166

TRIGger:EVENT<ev>:WINDow:TIME <TimeRangeMode>

Available for [TRIGger:EVENT<ev>:WIDTh:RANGe](#) = WITHin and OUTSide.

Selects how the time limit of the window is defined.

You can specify the width with [TRIGger:EVENT<ev>:WIDTh:WIDTh](#) and the delta with [TRIGger:EVENT<ev>:WINDow:DELTA](#).

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<TimeRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin

Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

OUTSide

"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

SHORter

Triggers if the signal crosses vertical limits before the specified width time is reached.

LONGer

Triggers if the signal crosses vertical limits before the specified width time is reached.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Time condition" on page 167

TRIGger:EVENT<ev>:WINDow:WIDTh <Width>

Depending on the values of `TRIGger:EVENT<ev>:WINDow:RANGe` the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range. The range is defined by the limits " $\pm\Delta$ ", see `TRIGger:EVENT<ev>:WINDow:DELTA`.
- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width> Range: 1E-10 to 10000
 Increment: 1E-07
 *RST: 5E-09
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 167

17.9.8 Timeout trigger

| | |
|--|-----|
| <code>TRIGger:EVENT<ev>:TIMeout:RANGe</code> | 619 |
| <code>TRIGger:EVENT<ev>:TIMeout:TIME</code> | 620 |

TRIGger:EVENT<ev>:TIMeout:RANGe <TimeoutMode>

Sets the relation of the signal level to the trigger level for the timeout trigger.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<TimeoutMode> HIGH | LOW | EITHER
 HIGH = stays high, the signal level stays above the trigger level.
 LOW = stays low, the signal level stays below the trigger level.
 EITHER = stays high or low.
 *RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 168

TRIGger:EVENT<ev>:TIMEout:TIME <Time>

Sets the time limit for the timeout at which the instrument triggers.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Time> Range: 1E-10 to 10000
 Increment: 1E-07
 *RST: 1E-07
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 168

17.9.9 Interval trigger

| | |
|---------------------------------------|-----|
| TRIGger:EVENT<ev>:INTerval:DELTA..... | 620 |
| TRIGger:EVENT<ev>:INTerval:RANGe..... | 621 |
| TRIGger:EVENT<ev>:INTerval:SLOPe..... | 621 |
| TRIGger:EVENT<ev>:INTerval:WIDTh..... | 621 |

TRIGger:EVENT<ev>:INTerval:DELTA <WidthDelta>

Sets a range around the interval width value specified with `TRIGger:EVENT<ev>:INTerval:WIDTh`.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta> Range: 0 to 10
 Increment: 1E-07
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 170

TRIGger:EVENT<ev>:INTerval:RANGe <RangeMode>

Defines the range of an interval in relation to the interval width specified using `TRIGger:EVENT<ev>:INTerval:WIDTH` and `TRIGger:EVENT<ev>:INTerval:DELTA`.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin

Triggers on pulses inside a given range. The range is defined by the interval width $\pm\delta$.

OUTSide

Triggers on pulses outside a given range. The range is defined by the interval width $\pm\delta$.

SHORter

Triggers on pulses shorter than the given interval width.

LONGer

Triggers on pulses longer than the given interval width.

*RST: OUTSide

Usage:

Asynchronous command

Manual operation: See "Range" on page 169

TRIGger:EVENT<ev>:INTerval:SLOPe <Slope>

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Slope> POSitive | NEGative | EITHer

*RST: POSitive

Usage:

Asynchronous command

Manual operation: See "Slope" on page 169

TRIGger:EVENT<ev>:INTerval:WIDTH <Width>

Sets the time between two pulses for the interval trigger.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width> Range: 1E-10 to 10000
 Increment: 1E-07
 *RST: 5E-09
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Interv. width](#)" on page 170

17.9.10 Slew rate trigger

| | |
|---|-----|
| TRIGger:EVENT<ev>:LEVel<n>:SLEW:LOWer | 622 |
| TRIGger:EVENT<ev>:LEVel<n>:SLEW:UPPer | 622 |
| TRIGger:EVENT<ev>:SLEW:DELTA | 623 |
| TRIGger:EVENT<ev>:SLEW:RANGe | 623 |
| TRIGger:EVENT<ev>:SLEW:RATE | 624 |
| TRIGger:EVENT<ev>:SLEW:SLOPe | 624 |

TRIGger:EVENT<ev>:LEVel<n>:SLEW:LOWer <Level>

Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10
 Increment: 0.001
 *RST: -0.1
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Lower level](#)" on page 171

TRIGger:EVENT<ev>:LEVel<n>:SLEW:UPPer <Level>

Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 1 to 4, index of the analog channel

Parameters:

<Level> Range: -10 to 10
 Increment: 0.001
 *RST: 0.1
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level](#)" on page 171

TRIGger:EVENT<ev>:SLEW:DELTA <TimeDelta>

Defines a time range around the given slew rate.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<TimeDelta> Range: 0 to 10
 Increment: 1E-07
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[±Delta](#)" on page 172

TRIGger:EVENT<ev>:SLEW:RANGe <RangeMode>

Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

You can select the rate with [TRIGger:EVENT<ev>:SLEW:RATE](#) and set the delta with [TRIGger:EVENT<ev>:SLEW:DELTA](#).

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> INSRange | OUTRange | LTHan | GTHan

INSRange

Triggers on pulses inside a given range. The range is defined by the slew rate $\pm\delta$.

OUTRange

Triggers on pulses outside a given range. The range is defined by the slew rate $\pm\delta$.

LTHan

Triggers on pulses shorter than the given slew rate.

GTHan

Triggers on pulses longer than the given slew rate.

*RST: GTHan

Usage: Asynchronous command

Manual operation: See "[Range](#)" on page 172

TRIGger:EVENT<ev>:SLEW:RATE <Time>

For TRIGger:EVENT<ev>:SLEW:RANGE = INSRange and OUTRange, the slew rate defines the center of a range which is defined by the limits " $\pm\Delta$ ".

For TRIGger:EVENT<ev>:SLEW:RANGE = LTHan and GTHan, the slew rate defines the maximum and minimum slew rate limits, respectively. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope (see TRIGger:EVENT<ev>:SLEW:SLOPe).

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Time> Range: 1E-10 to 10000
 Increment: 1E-07
 *RST: 1E-10
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Slew rate](#)" on page 172

TRIGger:EVENT<ev>:SLEW:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Slope> POSitive | NEGative | EITHER
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Slope](#)" on page 171

17.9.11 Setup & Hold

| | |
|--|-----|
| TRIGger:EVENT<ev>:SETHold:CSOURCE:EDGE..... | 624 |
| TRIGger:EVENT<ev>:SETHold:CSOURCE:LEVel..... | 625 |
| TRIGger:EVENT<ev>:SETHold:CSOURCE[:VALue]..... | 625 |
| TRIGger:EVENT<ev>:SETHold:HTIME..... | 625 |
| TRIGger:EVENT<ev>:SETHold:STIME..... | 626 |

TRIGger:EVENT<ev>:SETHold:CSOURCE:EDGE <ClockEdge>

Sets the edge of the clock signal. Edge and level define the time reference point.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <ClockEdge> POSitive | NEGative | EITHer
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Clock edge](#)" on page 173

TRIGger:EVENT<ev>:SETHold:CSOURCE:LEVel <ClockLevel>

Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <ClockLevel> Range: -10 to 10
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Clock level](#)" on page 174

TRIGger:EVENT<ev>:SETHold:CSOURCE[:VALue] <ClockSource>

Selects the input channel of the clock signal.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <ClockSource> C1 | C2 | C3 | C4
 The following values are also accepted:
 C1 = CHAN1 = CHANnel1, C2 = CHAN2 = CHANnel2,
 C3 = CHAN3 = CHANnel3, C4 = CHAN4 = CHANnel4
 *RST: C1

Usage: Asynchronous command

Manual operation: See "[Clock source](#)" on page 173

TRIGger:EVENT<ev>:SETHold:HTIME <HoldTime>

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <HoldTime> Range: -9.9999E-08 to 1E-07
 Increment: 1E-09
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Hold time" on page 174

TRIGger:EVENT<ev>:SETHold:STIME <SetupTime>

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <SetupTime> Range: -9.9999E-08 to 1E-07
 Increment: 1E-09
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "Setup time" on page 174

17.9.12 State trigger

| | |
|--|-----|
| TRIGger:EVENT<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX..... | 626 |
| TRIGger:EVENT<ev>:STATe:QUALify:LOGic..... | 627 |
| TRIGger:EVENT<ev>:STATe:SLOPe..... | 627 |
| TRIGger:EVENT<ev>:STATe:QUALify:DIGital:LOGic..... | 627 |
| TRIGger:EVENT<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX..... | 628 |

TRIGger:EVENT<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 1 to 4, index of the analog channel

Parameters:
 <HLX> HIGH | LOW | DONTcare
 State of the individual channels
 *RST: DONTcare

Example:

```
TRIG:EVENT1:SOUR C1
TRIG:EVENT1:SLOP POS
TRIG:EVENT1:STAT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVENT1:STAT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVENT1:STAT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVENT1:STAT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "[Source: channel states](#)" on page 178

TRIGger:EVENT<ev>:STATe:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateOperator> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "[Logic Operator](#)" on page 178

TRIGger:EVENT<ev>:STATe:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Slope](#)" on page 175

TRIGger:EVENT<ev>:STATe:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Logic> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "[Logic Operator](#)" on page 178

TRIGger:EVENT<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 0 to 15

Parameters:

<HLX> HIGH | LOW | DONTcare
 *RST: DONTcare

Usage: Asynchronous command

Manual operation: See "[Source: channel states](#)" on page 179

17.9.13 Pattern trigger

| | |
|--|-----|
| TRIGger:EVENT<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX..... | 628 |
| TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX..... | 628 |
| TRIGger:EVENT<ev>:PATTern:QUALify:LOGic..... | 629 |
| TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:LOGic..... | 629 |
| TRIGger:EVENT<ev>:PATTern:QUALify:SOURces..... | 629 |

TRIGger:EVENT<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 1 to 4, index of the analog channel

Parameters:

<HLX> HIGH | LOW | DONTcare
 State of the individual channels
 *RST: DONTcare

Example:

```
TRIG:EVENT1:PATT:QUAL:ANAL:CHAN1:HLX LOW
TRIG:EVENT1:PATT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVENT1:PATT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVENT1:PATT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVENT1:PATT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "[Source: channel states](#)" on page 178

TRIGger:EVENT<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
 <n> 0 to 15

Parameters:
 <HLX> HIGH | LOW | DONTcare
 *RST: DONTcare

Usage: Asynchronous command

Manual operation: See "[Source: channel states](#)" on page 179

TRIGger:EVENT<ev>:PATtern:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <StateOperator> AND | OR
 *RST: AND

Usage: Asynchronous command

Manual operation: See "[Logic Operator](#)" on page 178

TRIGger:EVENT<ev>:PATtern:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
 <ev> 1..3

Parameters:
 <Logic> AND | OR
 *RST: AND

Usage: Asynchronous command

Manual operation: See "[Logic Operator](#)" on page 178

TRIGger:EVENT<ev>:PATtern:QUALify:SOURces <StateSources>

Selects if the source of the trigger for the pattern type is an analog or digital channel.

Suffix:
 <ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
 <StateSources> ANALog | DIGital
 *RST: ANALog

Usage: Asynchronous command

Manual operation: See ["State sources"](#) on page 176

17.9.14 Trigger mode, holdoff

| | |
|--------------------------------|-----|
| TRIGger:MODE..... | 630 |
| TRIGger:FORCe..... | 630 |
| TRIGger:HOLDoff:MODE..... | 631 |
| TRIGger:HOLDoff:AUTotime?..... | 631 |
| TRIGger:HOLDoff:SCALing..... | 632 |
| TRIGger:HOLDoff:EVENTs..... | 632 |
| TRIGger:HOLDoff:MAX..... | 632 |
| TRIGger:HOLDoff:MIN..... | 633 |
| TRIGger:HOLDoff:TIME..... | 633 |

TRIGger:MODE <TriggerMode>

Sets the trigger mode which determines the behavior of the instrument with and without a trigger event.

Parameters:

<TriggerMode> AUTO | NORMal | FREerun

AUTO

The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the time base.

NORMal

The instrument acquires a waveform only if a trigger occurs.

FREerun

The instrument triggers after a very short time interval - faster than in AUTO mode. Real triggers are ignored.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See ["\[Auto Norm\]"](#) on page 41

TRIGger:FORCe

Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Usage: Setting only
Asynchronous command

Manual operation: See ["Force trigger"](#) on page 181

TRIGger:HOLDoff:MODE <Mode>

Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Parameters:

<Mode>

TIME | EVENTs | RANDom | AUTO | OFF

TIME

Defines the holdoff directly as a time period. The next trigger occurs only after the holdoff time has passed, which is defined using [TRIGger:HOLDoff:TIME](#)).

EVENTs

Defines the holdoff as a number of trigger events. The next trigger occurs only when this number of events is reached. The number of triggers to be skipped is defined with [TRIGger:HOLDoff:EVENTs](#).

RANDom

Defines the holdoff as a random time limited by [TRIGger:HOLDoff:MIN](#) and [TRIGger:HOLDoff:MAX](#). For each acquisition cycle, the instrument selects a new random holdoff time from the specified range.

AUTO

The holdoff time is calculated automatically based on the current horizontal scale.

OFF

No holdoff

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:AUTotime?

Returns the resulting holdoff time, if [TRIGger:HOLDoff:MODE](#) is set to `AUTO`: *Auto time = Auto time scaling * Horizontal scale*. The auto time scaling factor is defined with [TRIGger:HOLDoff:SCALing](#).

Return values:

<AutoTime>

Range: 1E-07 to 10

Increment: 0.0002

*RST: 0.001

Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:SCALing <AutoTimeScI>

Sets the auto time scaling factor that the horizontal scale is multiplied with, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `AUTO`.
*Auto time = Auto time scaling * Horizontal scale*

The next trigger occurs only after this time has passed.

Parameters:

<AutoTimeScI> Range: 0.001 to 1000
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:EVENTs <Events>

Defines the number of triggers to be skipped, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `EVENTs`. The next trigger only occurs when this number of events is reached.

Parameters:

<Events> Range: 1 to 2147483647
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:MAX <RandomMaxTime>

Defines the upper limit for the random time holdoff, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `RANDom`.

Parameters:

<RandomMaxTime> Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.002
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:MIN <RandomMinTime>

Defines the lower limit for the random time holdoff, if **TRIGger:HOLDoff:MODE** **TRIGger:HOLDoff:MODE** **TRIGger:HOLDoff:MODE** is set to **RANdOm**.

Parameters:

<RandomMinTime> Range: 1E-07 to 5
 Increment: 0.0002
 *RST: 0.001
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

TRIGger:HOLDoff:TIME <Time>

Defines the holdoff time period, if **TRIGger:HOLDoff:MODE** is set to **TIME**. The next trigger occurs only after this time has passed.

Parameters:

<Time> Range: 1E-07 to 10
 Increment: 0.0002
 *RST: 0.001
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Holdoff mode](#)" on page 181

17.9.15 Hysteresis

| | |
|---|-----|
| TRIGger:NOISe<m>:ABSolute | 633 |
| TRIGger:NOISe<m>:EFFective? | 634 |
| TRIGger:NOISe<m>:MODE | 634 |
| TRIGger:NOISe<m>:PERDivision | 634 |
| TRIGger:NOISe<m>:RELative | 634 |
| TRIGger:NOISe<m>[:STATe] | 635 |

TRIGger:NOISe<m>:ABSolute <Absolute>

Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<Absolute>

Usage: Asynchronous command

Manual operation: See "[Absolute hysteresis](#)" on page 183

TRIGger:NOISe<m>:EFFective?

Returns the hysteresis that is set by the instrument in automatic hysteresis mode.

Suffix:

<m> 1 to 4, index of the analog channel

Return values:

<Effective> numeric value

Usage:

Query only
Asynchronous command

Manual operation: See "[HW hysteresis](#)" on page 183

TRIGger:NOISe<m>:MODE <Mode>

Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<Mode> ABS | REL

Usage:

Asynchronous command

Manual operation: See "[Hysteresis mode](#)" on page 183

TRIGger:NOISe<m>:PERDivision <InDivision>

Defines a range in divisions around the trigger level in division units. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<InDivision> Range: 0 to 5
Increment: 0.01
*RST: 0
Default unit: div

Usage:

Asynchronous command

Manual operation: See "[Relative hysteresis](#)" on page 183

TRIGger:NOISe<m>:RELative <Relative>

Defines a range in divisions around the trigger level as percentage. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<Relative> Range: 0 to 50
 Increment: 1
 *RST: 0
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Relative hysteresis](#)" on page 183

TRIGger:NOISe<m>[:STATe] <Mode>

Selects how the hysteresis is set.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<Mode> AUTO | MANual

AUTO

Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

MANual

The hysteresis is defined with [TRIGger:NOISe<m>:ABSolute](#) or [TRIGger:NOISe<m>:RELative](#).

Usage: Asynchronous command

17.9.16 Channel filter

| | |
|--|-----|
| TRIGger:FILTermode | 635 |
| TRIGger:LFRReject | 635 |
| TRIGger:RFReject | 636 |

TRIGger:FILTermode <Mode>

Selects the filter mode for the trigger channel.

Parameters:

<Mode> OFF | LFRReject | RFReject
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Trigger filter mode](#)" on page 184

TRIGger:LFRReject <Bandwidth>

Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.

Parameters:

<Bandwidth> Range: 50 kHz
 *RST: 50 kHz
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[LF reject BW](#)" on page 184

TRIGger:RFReject <Bandwidth>

Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Parameters:

<Bandwidth> Range: 1E+3 to 500E+6
 Increment: 1000
 *RST: 1E+6
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[RF reject BW](#)" on page 184

17.9.17 Actions on trigger

| | |
|--|-----|
| TRIGger:ACTions:OUT:STATE | 636 |
| TRIGger:ACTions:OUT:SOURce | 636 |
| TRIGger:ACTions:OUT:DELay | 637 |
| TRIGger:ACTions:OUT:PLENght | 637 |
| TRIGger:ACTions:OUT:POLarity | 637 |

TRIGger:ACTions:OUT:STATE <State>

Activates the outgoing pulse on the [Trigger Out] connector on the rear panel.

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Trigger out](#)" on page 185

TRIGger:ACTions:OUT:SOURce <SignalSource>

Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Parameters:

<SignalSource> TRIG | TRIGGER | POST | POSTTRIGGER | WAIT | WAITTRIGGER
 TRIG = TRIGGER, POST = POSTTRIGGER, WAIT = WAITTRIGGER
 *RST: TRIG

Usage: Asynchronous command

Manual operation: See "[Signal source](#)" on page 186

TRIGger:ACTions:OUT:DELay <Delay>

Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Parameters:

<Delay> Range: 8E-07 to 1
 Increment: 4E-09
 *RST: 8E-07
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Delay](#)" on page 186

TRIGger:ACTions:OUT:PLENgtH <PulseLength>

Sets the length of the trigger out pulse.

Parameters:

<PulseLength> Range: 1.6E-08 to 0.05
 Increment: 1.6E-08
 *RST: 9.6E-08
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Pulse length](#)" on page 186

TRIGger:ACTions:OUT:POLarity <Polarity>

Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Parameters:

<Polarity> POSitive | NEGative
 *RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Polarity](#)" on page 186

17.9.18 Zone trigger

Zone trigger commands are available since FW version 2.2.x.x.

| | |
|---------------------------------------|-----|
| TRIGger:ZONE:EXPRession[:DEFine]..... | 638 |
| TRIGger:ZONE:HISTory..... | 638 |
| ZONE<m>:ACOMbination..... | 639 |
| ZONE<m>:ADD..... | 639 |
| ZONE<m>:AREA<n>:ADD..... | 639 |
| ZONE<m>:AREA<n>:COUNT..... | 639 |
| ZONE<m>:AREA<n>:INTersect..... | 640 |
| ZONE<m>:AREA<n>:LABel..... | 640 |
| ZONE<m>:AREA<n>:POINT<o>:ADD..... | 640 |
| ZONE<m>:AREA<n>:POINT<o>:COUNT?..... | 641 |
| ZONE<m>:AREA<n>:POINT<o>:REMove..... | 641 |
| ZONE<m>:AREA<n>:POINT<o>:X..... | 641 |
| ZONE<m>:AREA<n>:POINT<o>:Y..... | 641 |
| ZONE<m>:AREA<n>:REMove..... | 642 |
| ZONE<m>:AREA<n>:STATe..... | 642 |
| ZONE<m>:COUNT..... | 642 |
| ZONE<m>:DIAGram..... | 643 |
| ZONE<m>:REMove..... | 643 |
| ZONE<m>:SOURce..... | 643 |
| ZONE<m>[:VISible]..... | 643 |

TRIGger:ZONE:EXPRession[:DEFine] <LogicExpression>

Defines the zone trigger. The available operators for the combination between the zones are AND | NOT | OR | XOR.

Parameters:

<LogicExpression> String with the logical expression

Example:

```
Prerequisite: Zone1 and Zone2 are defined.
TRIGger:ZONE:EXPRession 'Zone1 and Zone2'
TRIGger:ZONE:EXPRession?
<-- Zone1 and Zone2
```

Usage:

Asynchronous command

Manual operation: See "[Zone]" on page 42

TRIGger:ZONE:HISTory <ApplyZnTrigHistory>

Applies the zone trigger condition to the acquisitions in the history memory during history replay.

Parameters:

<ApplyZnTrigHistory> ON | OFF

*RST: OFF

Usage:

Asynchronous command

Manual operation: See ["Apply zone trigger to history"](#) on page 197

ZONE<m>:ACOMbination <AreaCombination>

Sets a logical expression for the condition between the different defined areas in one zone.

Suffix:

<m> 1...4, index of the zone

Parameters:

<AreaCombination> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See ["Area"](#) on page 195

ZONE<m>:ADD

Adds a new trigger zone.

Suffix:

<m> 1...4, index of the zone

Usage:

Setting only
Asynchronous command

Manual operation: See ["Add zone, !\[\]\(df47d6bec273bbb8b349135fff3a20f7_img.jpg\)](#)" on page 195

ZONE<m>:AREA<n>:ADD

Adds a new area to the trigger zone.

Suffix:

<m> 1...4, index of the zone

<n> 1...8, index of the zone area

Usage:

Setting only
Asynchronous command

Manual operation: See ["Area"](#) on page 195

ZONE<m>:AREA<n>:COUNT <Count>

Queries the number of the defined areas in the zone.

Suffix:

<m> 1...4, index of the zone

<n> 1...8, index of the zone area

Parameters:

<Count> Range: 0 to 1
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See "[Area](#)" on page 195

ZONE<m>:AREA<n>:INTERsect <Intersection>

Defines if the signal must intersect the zone to allow the instrument to trigger, or if it must not intersect the zone.

Suffix:

<m> 1...4, index of the zone
 <n> 1...8, index of the zone area

Parameters:

<Intersection> MUST | NOT
 *RST: MUST

Usage: Asynchronous command

Manual operation: See "[Area](#)" on page 195

ZONE<m>:AREA<n>:LABel <Label>

Defines a label for the selected area.

Suffix:

<m> 1...4, index of the zone
 <n> 1...8, index of the zone area

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "[Area](#)" on page 195

ZONE<m>:AREA<n>:POINT<o>:ADD

Adds a new point to the area.

Suffix:

<m> 1...4, index of the zone
 <n> 1...8, index of the zone area
 <o> 1...4, index of the zone area point

Usage: Setting only
 Asynchronous command

ZONE<m>:AREA<n>:POINT<o>:COUNT?

Queries the number of the defined points in the area.

Suffix:

| | |
|-----|-------------------------------------|
| <m> | 1...4, index of the zone |
| <n> | 1...8, index of the zone area |
| <o> | 1...4, index of the zone area point |

Usage:

Query only
Asynchronous command

ZONE<m>:AREA<n>:POINT<o>:REMOve

Removes the selected point from the area.

Suffix:

| | |
|-----|-------------------------------------|
| <m> | 1...4, index of the zone |
| <n> | 1...8, index of the zone area |
| <o> | 1...4, index of the zone area point |

Usage:

Setting only
Asynchronous command

ZONE<m>:AREA<n>:POINT<o>:X <X>

Sets the horizontal X coordinates for the selected point of the area.

Suffix:

| | |
|-----|-------------------------------------|
| <m> | 1...4, index of the zone |
| <n> | 1...8, index of the zone area |
| <o> | 1...4, index of the zone area point |

Parameters:

| | |
|-----|------------------------|
| <X> | Range: -1E+26 to 1E+26 |
| | Increment: 1E-06 |
| | *RST: 0 |
| | Default unit: s |

Usage:

Asynchronous command

ZONE<m>:AREA<n>:POINT<o>:Y <Y>

Sets the vertical Y coordinates for the selected point of the area.

Suffix:

| | |
|-----|-------------------------------|
| <m> | 1...4, index of the zone |
| <n> | 1...8, index of the zone area |

<o> 1...4, index of the zone area point

Parameters:

<Y> Range: -1E+26 to 1E+26
 Increment: 1E-06
 *RST: 0
 Default unit: V

Usage: Asynchronous command

ZONE<m>:AREA<n>:REMOve

Removes the selected area from the trigger zone.

Suffix:

<m> 1...4, index of the zone
 <n> 1...8, index of the zone area

Usage: Setting only
 Asynchronous command

Manual operation: See "[Delete icon](#)" on page 195

ZONE<m>:AREA<n>:STATe <State>

Enables the selected area.

Suffix:

<m> 1...4, index of the zone
 <n> 1...8, index of the zone area

Parameters:

<State> ON | OFF
 *RST: ON

Usage: Asynchronous command

ZONE<m>:COUNT <Count>

Sets the number of the zone.

Suffix:

<m> *

Parameters:

<Count> Range: 0 to 1
 Increment: 1
 *RST: 0

Usage: Asynchronous command

ZONE<m>:DIAGram <SignDiagKey>

Selects the diagram on which the zone trigger is applied, for example Layoutset1 Diagram1 (L1_D1).

For more information about the SmartGrid definition, see [Chapter 17.7.2, "SmartGrid"](#), on page 535.

Suffix:

<m> 1...4, index of the zone

Parameters:

<SignDiagKey>

Usage:

Asynchronous command

ZONE<m>:REMOve

Removes the selected trigger zone.

Suffix:

<m> 1...4, index of the zone

Usage:

Setting only
Asynchronous command

Manual operation: See ["Delete icon"](#) on page 195

ZONE<m>:SOURce <Source>

Sets the source of the zone trigger.

Suffix:

<m> 1...4, index of the zone

Parameters:

<Source> NONE | C1 | C2 | C3 | C4 | M1 | M2 | M3 | M4 | M5 |
SPECNORM1 | SPECNORM2 | SPECNORM3 | SPECNORM4 |
PA1QPOWER1 | PA2QPOWER2 | PA3QPOWER3

Usage:

Asynchronous command

Manual operation: See ["Source"](#) on page 195

ZONE<m>[:VISible] <DisplayState>

Enables the display of the zone on the screen.

Suffix:

<m> 1...4, index of the zone

Parameters:

<DisplayState> ON | OFF
*RST: ON

Usage: Asynchronous command
Manual operation: See "Display" on page 195

17.10 Waveform analysis

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, chapter "Command sequence and synchronization"
- [Zoom](#)..... 644
- [Mathematics](#)..... 653
- [History](#)..... 658
- [Reference waveforms](#)..... 661

17.10.1 Zoom

| | |
|---|-----|
| LAYout<ly>:ZOOM<zo>[:ENABle]..... | 645 |
| LAYout<ly>:ZOOM<zo>:COUNt?..... | 645 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition..... | 645 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN..... | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:START..... | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP..... | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh..... | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:MODE..... | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition..... | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN..... | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:START..... | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP..... | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh..... | 649 |
| LAYout<ly>:ZOOM<zo>:SOURce..... | 649 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition..... | 649 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe..... | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN..... | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:START..... | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP..... | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:MODE..... | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition..... | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:START..... | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP..... | 652 |

| | |
|--|-----|
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh..... | 652 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN..... | 652 |
| LAYout<ly>:ZOOM<zo>:SSCReen..... | 652 |

LAYout<ly>:ZOOM<zo>[:ENABLE] <State>

Enables the zoom.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<State> ON | OFF

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

Manual operation: See ["State"](#) on page 199

LAYout<ly>:ZOOM<zo>:COUNT?

Returns the max number of available zooms.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Return values:

<Count>

Usage: Query only
Asynchronous command

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition <Center>

Defines the x-value of the centerpoint of the zoom area in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

**LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN **

Defines the width of the zoom area in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

 Range: 0 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the x-axis in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the x-axis in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

**LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh **

Defines the width of the zoom area in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
<zo> 1...4, index of the zoom

Parameters:

 Range: 0 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:HORizontal:MODE <Mode>

Defines if absolute or relative values are used to specify the x-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:

<ly> 1...4, index of the SmartGrid layout
<zo> 1...4, index of the zoom

Parameters:

<Mode> ABS | REL
*RST: ABS

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

Manual operation: See ["Mode"](#) on page 201

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition <RelativeCenter>

Defines the x-value of the centerpoint of the zoom area in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
<zo> 1...4, index of the zoom

Parameters:

<RelativeCenter> Relative position of the centerpoint (x-value)
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<RelativeSpan> Range: 1E-15 to 100
 Increment: 0.1
 *RST: 1
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:START <RelativeStart>

Defines the lower limit of the zoom area on the x-axis in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<RelativeStart> Range: 0 to 100
 Increment: 0.1
 *RST: 0
 Default unit: %

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zo> 1...4, index of the zoom

Parameters:

<RelativeStop> Range: 0 to 100
 Increment: 0.1
 *RST: 100
 Default unit: %

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<RelativeSpan> Range: 1E-15 to 100
 Increment: 0.1
 *RST: 1
 Default unit: %

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:SOURce <Diagram>

Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<Diagram> Index of the diagram, which is zoomed.

Example: See [Chapter 17.4.1, "SmartGrid layout with zoom"](#), on page 522.

Usage: Asynchronous command

Manual operation: See ["Diagram"](#) on page 199

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition <Center>

Defines the y-value of the centerpoint of the zoom area in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<Center> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01

Usage: Asynchronous command

Manual operation: See "[Position range](#)" on page 200

**LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe **

**LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN **

Defines the height of the zoom area in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

 Range: 0 to 1E+26
 Increment: 0.01
 *RST: 0.01

Usage: Asynchronous command

Manual operation: See "[Position range](#)" on page 200

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the y-axis in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<Start> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01

Usage: Asynchronous command

Manual operation: See "[Start Stop](#)" on page 200

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the y-axis in absolute values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<Stop> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:VERTical:MODE <Mode>

Defines if absolute or relative values are used to specify the y-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<Mode> ABS | REL
 *RST: REL

Usage: Asynchronous command

Manual operation: See ["Mode"](#) on page 201

LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition <RelativeCenter>

Defines the y-value of the centerpoint of the zoom area in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<RelativeCenter> Range: 0 to 100
 Increment: 0.1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt <RelativeStart>

Defines the lower limit of the zoom area on the y-axis in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<RelativeStart> Range: 0 to 100
 Increment: 0.1
 *RST: 0
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis, in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<RelativeStop> Range: 0 to 100
 Increment: 0.1
 *RST: 100
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Start Stop"](#) on page 200

LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTH <RelativeSpan>**LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN <RelativeSpan>**

Defines the height of the zoom area in relative values.

Suffix:

<ly> 1...4, index of the SmartGrid layout
 <zo> 1...4, index of the zoom

Parameters:

<RelativeSpan> Range: 1E-15 to 100
 Increment: 0.1
 *RST: 100
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Position range"](#) on page 200

LAYout<ly>:ZOOM<zo>:SSCReen

Sets the zoom area to the whole screen.

Suffix:

<ly> 1...4, index of the SmartGrid layout

<zO> 1...4, index of the zoom

Usage: Setting only
Asynchronous command

Manual operation: See "Set to screen" on page 200

17.10.2 Mathematics

CALCulate:MATH<m>:STATe..... 653

CALCulate:MATH<m>[:EXPRession][:DEFine]..... 653

CALCulate:MATH<m>:LABel..... 654

CALCulate:MATH<m>:VERTical:SCALe[:VALue]..... 655

CALCulate:MATH<m>:UNIT..... 655

CALCulate:MATH<m>:VERTical:OFFSet..... 655

CALCulate:MATH<m>:ENVSelection..... 656

CALCulate:MATH<m>:VERTical:SCALe:MODE..... 656

CALCulate:MATH<m>:DATA:HEADer?..... 656

CALCulate:MATH<m>:DATA:STYPe?..... 657

CALCulate:MATH<m>:DATA[:VALues]?..... 657

CALCulate:MATH<m>:STATe <First>

Activates the selected Math channel and displays the defined math waveforms.

Suffix:
<m> 1...5, index of the math waveform

Parameters:
<First> ON | OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 204

CALCulate:MATH<m>[:EXPRession][:DEFine] <Expression>

Defines the math expression to be calculated for the specified math channel.

| Operation | <Expression> | Comment |
|----------------|--------------|---|
| Addition | "C1+C2" | |
| Subtraction | "C1-C2" | |
| Multiplication | "C1*C2" | |
| Division | "C1/C2" | 0/0 = 0
+1 / 0 = Clip+
-1 / 0 = Clip- |
| Inverting | "-C1" | |
| Absolute value | "Abs(C1)" | |

| Operation | <Expression> | Comment |
|--------------------------------|---|---|
| Derivation | "Derivation(C1,NoiseReject)" | NoiseReject can get any value between 1 and 5000 points
Default = 50 |
| Integral | "Integral(C1)" | |
| Logarithm (based on 10) | "Log(C1)" | Uses the absolute value of the source in calculation.
Log(0) = Clip - |
| Natural logarithm (based on e) | "Ln(C1)" | Uses the absolute value of the source in calculation.
Log(0) = Clip - |
| Binary logarithm (based on 2) | "Ld(C1)" | Uses the absolute value of the source in calculation.
Log(0) = Clip - |
| Square | "Pow(C1)" | |
| Square root | "Sqrt(C1)" | Uses the absolute value of the source in calculation. |
| Rescale | "Rescale(C1,a,b)" | a = scale, default = 1
b = offset, default = 0 |
| FIR | "FIR(Type,C1,Cut-Off,Characteristics)"

Examples:
"FIR(highpass,C1,10000000,Gaussian)"
"FIR(lowpass,C1,10000000,rectangle)" | Type = lowpass, highpass
Cut-Off = limit frequency
Characteristics = Gaussian, rectangle
Cut-Off can get any value between 4 GHz and 1 kHz |

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<Expression> String with regular expression for calculation

Example:

CALC:MATH 'C1*C2'

Defines the multiplication of waveforms channel 1 and channel 2.

Usage:

Asynchronous command

Manual operation: See "[Operator](#)" on page 205

CALCulate:MATH<m>:LABel <Label>

Defines a label for the selected math waveform.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<Label> String with the label

Example: `CALCulate:MATH3:LABel 'M3AddC1C2'`

Usage: Asynchronous command

Manual operation: See "[Label](#)" on page 204

CALCulate:MATH<m>:VERTical:SCALE[:VALue] <VerticalScale>

Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<VerticalScale> Range: 1E-12 to 100E+12
 Increment: 1E-05
 *RST: 0.5
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[\[Scale\]](#)" on page 44

CALCulate:MATH<m>:UNIT <UserUnit>

Sets a user-defined unit for the math operation.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<UserUnit> String with the base unit

Example: `CALCulate:MATH:UNIT 'A'`

Usage: Asynchronous command

Manual operation: See "[Unit](#)" on page 213

CALCulate:MATH<m>:VERTical:OFFSet <VerticalOffset>

Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<VerticalOffset> Range: -100E12 to 100E12
 Increment: 0.01
 *RST: 0
 Default unit: div

Usage: Asynchronous command

Manual operation: See "[Vertical offset](#)" on page 213

CALCulate:MATH<m>:ENVSelection <EnvelopeCurve>

Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<EnvelopeCurve> MIN | MAX | BOTH

*RST: BOTH

Usage: Asynchronous command

Manual operation: See "[Envelope wfm selection](#)" on page 206

CALCulate:MATH<m>:VERTical:SCALE:MODE <VertScIMd>

Sets how the vertical scale is adapted to the current measurement results. By default, scaling is done automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Suffix:

<m> 1...5, index of the math waveform

Parameters:

<VertScIMd> MANual | AUTO

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Scale mode](#)" on page 212

CALCulate:MATH<m>:DATA:HEADer?

Returns the header of math waveform data. The header contains attributes of the waveform.

Table 17-4: Header data

| Position | Meaning | Example |
|----------|---|--------------------------|
| 1 | XStart in s | -9.477E-008 = - 94,77 ns |
| 2 | XStop in s | 9.477E-008 = 94,77 ns |
| 3 | Record length of the waveform in Samples | 200000 |
| 4 | Number of values per sample interval. For most waveforms, the result is 1. For envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length). | 1 |

| | |
|-----------------|--|
| Suffix: | |
| <m> | 1...5, index of the math waveform |
| Example: | CALC:MATH1:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1 |
| Usage: | Query only
Asynchronous command |

CALCulate:MATH<m>:DATA:STYPe?

Returns the signal type of the source of the math waveform.

| | |
|-----------------------|---|
| Suffix: | |
| <m> | 1...5, index of the math waveform |
| Return values: | |
| <SignalType> | SOUR CORR MEAS NONE
SOURce = normal signal
CORRelation = correlated signal, specific math signal
MEAsurement = result of a measurement
NONE = undefined |
| Usage: | Query only
Asynchronous command |

CALCulate:MATH<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the math waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use [FORMat \[:DATA\]](#).

| | |
|--------------------------|---|
| Suffix: | |
| <m> | 1...5, index of the math waveform |
| Query parameters: | |
| <Offset> | Number of offset waveform points to be skipped. |
| <Length> | Number of waveform points to be retrieved. |
| Return values: | |
| <Data> | List of values according to the format and content settings. |
| Example: | :CALCulate:MATH1:DATA:VALues? 100,10
Returns 10 points from the start index 100. |
| Usage: | Query only
Asynchronous command |

17.10.3 History

| | |
|-----------------------------------|-----|
| ACQUIRE:HISTORY:CURRENT..... | 658 |
| ACQUIRE:HISTORY:PLAY..... | 658 |
| ACQUIRE:HISTORY:REPLAY..... | 658 |
| ACQUIRE:HISTORY:START..... | 659 |
| ACQUIRE:HISTORY:STOP..... | 659 |
| ACQUIRE:HISTORY:TPACQ..... | 659 |
| ACQUIRE:HISTORY:TSABSOLUTE?..... | 659 |
| ACQUIRE:HISTORY:TSDATE?..... | 660 |
| ACQUIRE:HISTORY:TSRELATIVE?..... | 660 |
| ACQUIRE:HISTORY:TSREFERENCE?..... | 660 |
| ACQUIRE:HISTORY[:STATE]..... | 660 |

ACQUIRE:HISTORY:CURRENT <CurrentAcqIndex>

Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

Parameters:

<CurrentAcqIndex> Range: -2147483648 to 0
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See "[Current acq](#)" on page 216

ACQUIRE:HISTORY:PLAY

Starts and stops the replay of the history waveforms.

Usage: Event
 Asynchronous command

Manual operation: See "[Player](#)" on page 215

ACQUIRE:HISTORY:REPLAY <AutoRepeat>

If enabled, the replay of the history waveform sequence repeats automatically.

Otherwise, the replay stops at the stop index set with [ACQUIRE:HISTORY:STOP](#) on page 659.

Parameters:

<AutoRepeat> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Auto repeat](#)" on page 218

ACQUIRE:HISTORY:START <StartAcqIndex>

Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Parameters:

<StartAcqIndex> Range: -2147483648 to 0
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See "[Start acq](#)" on page 216

ACQUIRE:HISTORY:STOP <StopAcqIndex>

Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Parameters:

<StopAcqIndex> Range: -2147483648 to 0
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See "[Stop acq](#)" on page 216

ACQUIRE:HISTORY:TPACq <TimePerAcq>

Sets the display time for one acquisition. The shorter the time, the faster the replay is.

Parameters:

<TimePerAcq> Range: 4E-05 to 10
 Increment: 1
 *RST: 0.05
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Display time](#)" on page 216

ACQUIRE:HISTORY:TSABsolute?

Returns the absolute daytime of the current acquisition ([ACQUIRE:HISTORY:CURRENT](#)).

Return values:

<TimeAbsString> String containing the time and unit

Usage: Query only
 Asynchronous command

Manual operation: See "[Time stamp](#)" on page 216

ACQUIRE:HISTORY:TSDATE?

Returns the date of the current acquisition ([ACQUIRE:HISTORY:CURRENT](#)).

Return values:

<DateAbsString> String parameter with acquisition date

Usage: Query only
Asynchronous command

Manual operation: See "[Time stamp](#)" on page 216

ACQUIRE:HISTORY:TSRELATIVE?

Returns the relative time of the current acquisition - the time difference to the newest acquisition (index = 0).

See also: [ACQUIRE:HISTORY:CURRENT](#).

Return values:

<TimeRelativ> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "[Time stamp](#)" on page 216

ACQUIRE:HISTORY:TSRREFERENCE?

Returns the relative time of the currently selected acquisition and the internal reference time (horizontal alignment) in history view in relation to the acquisition with index 0.

Return values:

<TimeRelIntRef> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "[Time stamp](#)" on page 216

ACQUIRE:HISTORY[:STATE] <State>

Enables the history mode and allows you to save history waveforms to file.

Parameters:

<State> ON | OFF
*RST: OFF

Usage: Asynchronous command
Manual operation: See ["Show history"](#) on page 215

17.10.4 Reference waveforms

- [Setup](#).....661
- [Scaling](#)..... 664
- [Reference waveform data export](#)..... 668

17.10.4.1 Setup

| | |
|--|-----|
| REFCurve<rc>:ABORt | 661 |
| REFCurve<rc>:CLEar | 661 |
| REFCurve<rc>:NAME | 662 |
| REFCurve<rc>:OFFSet | 662 |
| REFCurve<rc>:OPEN | 662 |
| REFCurve<rc>:RESTore | 662 |
| REFCurve<rc>:SAVE | 663 |
| REFCurve<rc>:SOURce | 663 |
| REFCurve<rc>:STATe | 663 |
| REFCurve<rc>:UPDate | 663 |

REFCurve<rc>:ABORt

Aborts a running reference waveform export, which was started with [REFCurve<rc>:SAVE](#), or a running reference waveform update, which was started with [REFCurve<rc>:UPDate](#) on page 663.

Suffix:

<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See ["Save"](#) on page 222

REFCurve<rc>:CLEar

The selected reference waveform disappears, its memory is deleted.

Suffix:

<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See ["Clear"](#) on page 222

REFCurve<rc>:NAME <Name>

Defines the name of the reference waveform file to be loaded, saved or deleted.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<Name>

Usage: Asynchronous command

REFCurve<rc>:OFFSet <VerticalOffset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<VerticalOffset> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Vertical offset](#)" on page 225

REFCurve<rc>:OPEN

Loads the reference waveform file selected by [REFCurve<rc>:NAME](#) on page 662. Note that reference waveforms can be loaded only from `.ref` files.

Suffix:

<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "[Recall](#)" on page 222

REFCurve<rc>:RESTore

Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Suffix:

<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "[Restore settings](#)" on page 224

REFCurve<rc>:SAVE

Saves the reference waveform to the file selected by [REFCurve<rc>:NAME](#).

Suffix:

<rc> 1...4, index of the reference waveform

Usage:

Event
Asynchronous command

Manual operation: See ["Save"](#) on page 222

REFCurve<rc>:SOURCE <Source>

Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<Source> C1 | C2 | C3 | C4 | M1 | M2 | M3 | M4 | M5 | R1 | R2 | R3 | R4 |
SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 |
SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 |
SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 |
SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4
Source of the reference waveform.

Usage:

Asynchronous command

Manual operation: See ["Source"](#) on page 222

REFCurve<rc>:STATE <State>

Enables the display of the reference waveform in the diagram.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<State> ON | OFF
*RST: OFF

Usage:

Asynchronous command

Manual operation: See ["Show"](#) on page 222

REFCurve<rc>:UPDATE

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

| | |
|--------------------------|--|
| Suffix: | |
| <rc> | 1...4, index of the reference waveform |
| Usage: | Event
Asynchronous command |
| Manual operation: | See "Create/update" on page 222 |

17.10.4.2 Scaling

| | |
|--|-----|
| REFCurve<rc>:AXIS[:XMODE] | 664 |
| REFCurve<rc>:SCALE | 664 |
| REFCurve<rc>:POSITION | 665 |
| REFCurve<rc>:HMODE | 665 |
| REFCurve<rc>:RESCale:HORizontal:FACTor | 665 |
| REFCurve<rc>:RESCale:HORizontal:OFFSet | 666 |
| REFCurve<rc>:RESCale:HORizontal:STATe | 666 |
| REFCurve<rc>:RESCale:VERTical:FACTor | 666 |
| REFCurve<rc>:RESCale:VERTical:OFFSet | 667 |
| REFCurve<rc>:RESCale:VERTical:STATe | 667 |
| REFCurve<rc>:TOORiginal | 667 |
| REFCurve<rc>:VMODE | 668 |

REFCurve<rc>:AXIS[:XMODE] <XAxisMode>

Defines the scaling method for the frequency (x-axis) of the reference curve.

| | |
|--------------------|---|
| Suffix: | |
| <rc> | 1...4, index of the reference waveform |
| Parameters: | |
| <XAxisMode> | LIN LOG
LIN: Linear scaling
LOG: Logarithmic scaling
*RST: LIN |
| Usage: | Asynchronous command |

REFCurve<rc>:SCALE <VerticalScale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

| | |
|--------------------|---|
| Suffix: | |
| <rc> | 1...4, index of the reference waveform |
| Parameters: | |
| <VerticalScale> | Range: 1E-15 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: Unit of the source waveform |

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 44

REFCurve<rc>:POSition <VertPosi>

Available, if `REFCurve<rc>:VMODE` is set to `INDepeNdeNt`.

Moves the reference waveform up or down in the diagram.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<VertPosi> Range: -1E+26 to 1E+26
 Increment: 0.02
 *RST: 0
 Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical position" on page 225

REFCurve<rc>:HMODE <HorizontalMode>

Selects the coupling of horizontal settings.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<HorizontalMode> ORIGINAL | COUPled

ORIGINAL
 Horizontal scaling and reference point of the source waveform are used.

COUPled
 The current horizontal settings of the diagram are used.

*RST: ORIGINAL

Usage: Asynchronous command

Manual operation: See "Mode" on page 227

REFCurve<rc>:RESCale:HORIZontal:FACTor <ScaleFactor>

Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<ScaleFactor> Range: 1E-14 to 1000000000000000
 Increment: 0.1
 *RST: 1

Usage: Asynchronous command

Manual operation: See ["Scale factor"](#) on page 227

REFCurve<rc>:RESCale:HORizontal:OFFSet <Offset>

Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<Offset> Range: -5000000 to 5000000
 Increment: 0.01
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["Horizontal offset"](#) on page 227

REFCurve<rc>:RESCale:HORizontal:STATe <State>

If enabled, the horizontal offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Enable"](#) on page 227

REFCurve<rc>:RESCale:VERTical:FACTor <ScaleFactor>

Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<ScaleFactor> Range: -100000000 to 100000000
 Increment: 0.1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[Scale factor](#)" on page 226

REFCurve<rc>:RESCale:VERTical:OFFSet <Offset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<Offset> Range: -100000000 to 100000000
 Increment: 1E-06
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Vertical offset](#)" on page 226

REFCurve<rc>:RESCale:VERTical:STATe <State>

If enabled, the vertical offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the vertical scale and position.

Suffix:

<rc> 1...4, index of the reference waveform

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Enable](#)" on page 226

REFCurve<rc>:TOORiginal

Available, if [REFCurve<rc>:VMODE](#) is set to INDependent.

Restores the original vertical settings of the reference waveform (vertical scale, position, and offset).

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See ["Set to original"](#) on page 225

REFCurve<rc>:VMODE <VerticalMode>

Selects the coupling of vertical settings.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: INDependent

Usage: Asynchronous command

Manual operation: See ["Mode"](#) on page 224

17.10.4.3 Reference waveform data export

Commands to transmit the data of reference waveforms are listed below. Commands for saving waveform data to file are described in [Chapter 17.11.4, "Waveform export to file"](#), on page 677.

| | |
|-----------------------------|-----|
| REFCurve<rc>:DATA:STYPe? | 668 |
| REFCurve<rc>:DATA:HEADer? | 669 |
| REFCurve<rc>:DATA[:VALues]? | 669 |

REFCurve<rc>:DATA:STYPe?

Returns the signal type of the source of the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Return values:
<SignalType>

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA:HEADer?

Returns information on the reference waveform.

Table 17-5: Header data

| Position | Meaning | Example |
|----------|--|--------------------------|
| 1 | XStart in s | -9.477E-008 = - 94,77 ns |
| 2 | XStop in s | 9.477E-008 = 94,77 ns |
| 3 | Record length of the waveform in Samples | 200000 |
| 4 | Number of values per sample interval. Depends on the source waveform from which the reference waveform was created | 1 |

Suffix:

<rc> 1...4, index of the reference waveform

Example:

```
REFC:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```

Usage:

Query only
Asynchronous command

REFCurve<rc>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the channel waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use [FORMat \[:DATA\]](#) on page 531.

Suffix:

<rc> 1...4, index of the reference waveform

Query parameters:

<Offset> Number of offset waveform points to be skipped.
Range: 0 to m. Limit: $n + m \leq \text{record length}$

<Length> Number of waveform points to be retrieved.
Range: 1 to n. Limit: $n + m \leq \text{record length}$

Return values:

<Data> List of values according to the format and content settings.

Usage:

Query only
Asynchronous command

17.11 Data management

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scp, chapter "Command sequence and synchronization"

17.11.1 Instrument settings

The Mass MEMory subsystem provides commands to access the storage media and to save and reload instrument settings.

File and directory names

The `<file_name>` and `<directory_name>` parameters are strings. Some commands use a fixed directory; for others the `<file_name>` can contain the complete path including the drive name and all subdirectories. If no complete path is specified, the file location is relative to the current directory, queried with `MMEemory:CDIRectory?`. The filename itself may contain the period as a separator for extensions.

File and directory names can be chosen according to Windows™ conventions; the restrictions placed on filenames known from DOS systems do not apply. All letters and numbers are allowed, as well as the special characters `"_"`, `"^"`, `"$"`, `"~"`, `"!"`, `"#"`, `"%"`, `"&"`, `"-"`, `"{"`, `"}"`, `"("`, `)"`, `"@"` and `"'"`. Reserved filenames are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

The use of wildcards `?` and `*` is not allowed.

| | |
|--|-----|
| <code>MMEemory:DRIVes?</code> | 671 |
| <code>MMEemory:DCATalog?</code> | 671 |
| <code>MMEemory:DCATalog:LENGth?</code> | 671 |
| <code>MMEemory:CDIRectory</code> | 672 |
| <code>MMEemory:MDIRectory</code> | 672 |
| <code>MMEemory:RDIRectory</code> | 672 |
| <code>MMEemory:CATalog?</code> | 672 |
| <code>MMEemory:CATalog:LENGth?</code> | 673 |
| <code>MMEemory:COpy</code> | 673 |
| <code>MMEemory:MOVe</code> | 674 |
| <code>MMEemory:DELeTe</code> | 674 |
| <code>MMEemory:DATA</code> | 674 |
| <code>MMEemory:ATTRibute</code> | 675 |
| <code>MMEemory:SAV</code> | 675 |
| <code>MMEemory:RCL</code> | 676 |
| <code>MMEemory:STORe:STATe</code> | 676 |

| | |
|---|-----|
| MMEMory:LOAD:STATE | 676 |
| MMEMory:GENerator:RCL | 676 |
| MMEMory:GENerator:SAV | 677 |

MMEMory:DRIVes?

Returns the path list of available drives.

Return values:

<Drive> List of strings, for example:
 Instrument only: `"/home/storage/userData"`
 Instrument with connected USB flash drive:
`"/home/storage/userData", "/run/media/usb/MYDATA"`
 . MYDATA is the partition name, which is also shown in the file explorer.
 Instrument with connected USB flash drive:
`"/home/storage/userData", "/run/media/usb/8AF8-3EBA"`
 . 8AF8-3EBA is an example ID. ID is used if the partition does not have a name, or the name cannot be read.

Usage: Query only

MMEMory:DCATalog? [<PathName>]

Returns the subdirectories of the current or of a specified directory.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with [MMEMory:CDIRectory](#).

Return values:

<FileEntry> Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example: `MMEM:DCAT?`

Usage: Query only

MMEMory:DCATalog:LENGth? [<PathName>]

Returns the number of subdirectories of the current or of a specified directory. The number includes the parent directory strings "." and ".." and corresponds to the number of strings returned by the [MMEMory:DCATalog?](#) command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with [MMEMory:CDIRectory](#).

Return values:

<FileEntryCount> Number of parent directories and subdirectories.

Example: MMEM:DCAT:LENG?
5

Usage: Query only

MMEMory:CDIRectory [<DirectoryName>]

Changes the default directory for file access.

Parameters:

<DirectoryName> String parameter to specify the directory.
*RST: ""

Example: MMEM:CDIR '/home/storage/userData/Waveforms'

Usage: SCPI confirmed

MMEMory:MDIRectory <DirectoryName>

Creates a new directory with the specified name.

Setting parameters:

<DirectoryName> String parameter to specify the new directory. If the path consists of several subdirectories, the complete tree is created if necessary.

Example: MMEM:MDIR '/home/storage/userData/Waveforms'

Usage: Setting only

MMEMory:RDIRectory <DirectoryName>

Deletes the specified directory.

Setting parameters:

<DirectoryName> String parameter to specify the directory to be deleted. This directory must be empty, otherwise it is not deleted.

Example: MMEM:RDIR '/home/storage/userData/Test'

Usage: Setting only

MMEMory:CATalog? [<PathName>][, <Format>]

Returns a list of files contained in the specified directory. The result corresponds to the number of files returned by the MMEMory:CATalog:LENGth command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries directory specified with [MMEMory:CDIRectory](#).

| | |
|-----------------------|---|
| <Format> | ALL WTIME
ALL: Extended result including file, date, time and attributes
WTIME: Extended result including file, date, time |
| Return values: | |
| <UsedMemory> | Total amount of storage currently used in the directory, in bytes. |
| <FreeMemory> | Total amount of storage available in the directory, in bytes. |
| <FileEntry> | All files and subdirectories of the directory are listed with their filename, format and size in bytes. The first two strings are related to the parent directory. |
| Example: | <pre>MMEM:CAT? '/home/storage/userData' 529479,1831777894400,".",DIR,0","..",DIR,0", "Backup,DIR,0","CSS,DIR,0","DATEN,DIR,0", "Commands.jar,BIN,529479","FAVORITES,DIR,0", "LOG,DIR,0","DATA,DIR,0","test,DIR,0", "TotalCMD,DIR,0"</pre> |
| Usage: | Query only
SCPI confirmed |

MMEMory:CATalog:LENGth? [<PathName>]

Returns the number of files and subdirectories of the current or specified directory. The number includes the parent directory strings "." and ".." and it corresponds to the number of <FileEntry> strings returned by the [MMEMory:CATalog?](#) command.

Query parameters:

<PathName>	String parameter, directory to be queried. If the directory is omitted, the current directory is queried, specified with MMEMory:CDIRectory .
------------	---

Return values:

<Count>	Number of files and subdirectories including parent directory entries.
---------	--

Example:

```
MMEM:CDIR '/home/storage/userData'
MMEM:CAT:LENG?
11
```

Usage: Query only

MMEMory:COpy <FileSource>[, <FileDestination>]

Copies an existing file to a new file.

Setting parameters:

<FileSource>	String parameter. Contains name and path of the file to be copied. Wildcards (* and ?) are allowed.
--------------	---

<FileDestination> String parameter. Contains name and path of the new file. If the file already exists, it is overwritten without notice. If no file destination is specified, the source file is written to the current directory specified with [MMEMory:CDIRectory](#).

Usage: Setting only
SCPI confirmed

MMEMory:MOVE <FileSource>, <FileDestination>

Moves the specified file to a new location on the same drive and renames it.

Setting parameters:

<FileSource> String parameter, contains name and path of the file to be copied. Wildcards (* and ?) are allowed. Therefore, specify a directory for <FileDestination>. Renaming is not possible.

<FileDestination> String parameter. Contains name and path of the new file. If no path is specified, the <FileSource> directory is used - the file is renamed.

Usage: Setting only
SCPI confirmed

MMEMory:DELeTe <FileName>

Removes the specified file/files. To delete directories, use [MMEMory:RDIRectory](#).

Setting parameters:

<FileName> String parameter to specify the name and directory of the file to be removed. Wildcards (* and ?) are allowed. If no path is defined, the current directory is used, specified with [MMEMory:CDIRectory](#).

Example: `MMEM:DEL '* .CFG'`
Deletes all CFG files from the current directory.

Usage: Setting only
SCPI confirmed

MMEMory:DATA <FileName>, <Data>

MMEMory:DATA? <FileName>

Stores data in the specified file to the storage location specified using [MMEMory:CDIRectory](#).

Parameters:**<Data>** <block>

488.2 block data format. The delimiter EOI must be selected to achieve correct data transfer.

The block begins with character '#'. The next digit is the length of the length information, followed by this given number of digits providing the number of bytes in the following binary data.

Parameters for setting and query:**<FileName>** String parameter, the name of the file the data is stored to.**Example:**

```
MMEM:DATA 'abc.txt', #216This is the file
#2: the length information has two digits.
16: the binary data has 16 bytes.
```

Example:

```
MMEM:DATA? 'abc.txt'
Returns the data from file abc.txt.
```

MMEMory:ATTRibute <FileName>, <Attributes>**MMEMory:ATTRibute?** <FileName>

Sets file attributes for the specified file/files. The command can be used for files only.

Setting parameters:

<Attributes> String with attributes and setting information.
 '+' before the attribute: sets the attribute
 '-' before the attribute: deletes the attribute
 'R': read only
 'H': hidden file

Parameters for setting and query:**<FileName>** String parameter, contains name and path of the file. Wildcards (* and ?) are allowed.**Return values:****<FileEntry>** String containing: "<file_name>,<file_attributes>"**MMEMory:SAV** <FileDestination>

Stores the current instrument settings to the specified file.

Waveform generator settings are not included.

This command has the same effect as the combination of *SAV and MMEMory:STORe:STATe.

Parameters:**<FileDestination>** String parameter specifying path and filename of the target file. Wildcards are not allowed.**Usage:** Event

MMEMory:RCL <FileSource>

Restores the instrument settings from the specified file.

The stored instrument settings do not include waveform generator settings.

This command has the same effect as the combination of **MMEMory:LOAD:STATe** and ***RCL**.

Parameters:

'<FileSource>' String parameter specifying the path and filename of the source file. Wildcards are not allowed.

Usage: Event

MMEMory:STORE:STATe <MemoryNumber>, <FileName>

Stores the instrument settings from the specified internal memory to the specified file. To store the current instrument settings to the internal memory, use ***SAV** first.

Setting parameters:

<MemoryNumber> Number of the internal memory
Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:LOAD:STATe <MemoryNumber>, <FileName>

Loads the instrument settings from the specified file to the specified internal memory. After the file has been loaded, the settings must be activated using a ***RCL** command.

Setting parameters:

<MemoryNumber> Number of the internal memory
Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:GENerator:RCL <FilePath>

Restores the waveform generator settings from the specified file.

Parameters:

<FilePath> String parameter specifying the path and filename of the settings file.

Usage: Asynchronous command

MMEMory:GENerator:SAV <FilePath>

Stores the current waveform generator settings to the specified file.

Parameters:

<FilePath> String parameter specifying path and filename of the settings file.

Usage: Asynchronous command

17.11.2 Saveset

SAVeset:CONFig:PREView <IncludeImage>

If set to `OFF`, the saveset is stored without the preview image to reduce the file size.

Use the command each time before you save a saveset.

Parameters:

<IncludeImage> ON | OFF
*RST: ON

Usage: Asynchronous command

17.11.3 Gen saveset

GENerator:RCL <filePath>

Restores the waveform generator from the specified file.

Parameters:

<filePath> String parameter specifying the path and filename of the source file.

Usage: Asynchronous command

GENerator:SAV <filePath>

Stores the current waveform generator settings to the specified file.

Parameters:

<filePath> String parameter specifying path and filename of the target file.

Usage: Asynchronous command

17.11.4 Waveform export to file

EXPort:WAVeform:NAME	678
EXPort:WAVeform:SAVE	678
EXPort:WAVeform:ABORt	678
EXPort:WAVeform:SCOPE	678

EXPort:WAVeform:SOURce	679
EXPort:WAVeform:START	679
EXPort:WAVeform:STOP	680
EXPort:WAVeform:GATE	680
EXPort:WAVeform:CURSorset	680

EXPort:WAVeform:NAME <name>

Sets the path, the filename and the file format of the export file.

Parameters:

<name> String with path and filename with extension *xml, *ref, *csv.
 For local storage, the path is
 always /home/storage/userData.

Example:

```
EXP:WAV:NAME
'/home/storage/userData/Export_C1.csv'
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
Saves the visible waveform data of channel 1 in xml format
to /home/storage/userData/Export_C1.csv.
```

Usage: Asynchronous command

Manual operation: See "[Save settings](#)" on page 326

EXPort:WAVeform:SAVE

Saves the waveform to the file specified with [EXPort:WAVeform:NAME](#).

Usage: Event
 Asynchronous command

Manual operation: See "[Save settings](#)" on page 326

EXPort:WAVeform:ABORT

Aborts a running waveform export, which was started with [EXPort:WAVeform:SAVE](#).

Usage: Event
 Asynchronous command

EXPort:WAVeform:SCOPE <Scope>

Defines the part of the waveform record that has to be stored.

Parameters:

<Scope> DISPLAY | ALL | CURSor | GATE | MANual
DISPlay
 Waveform data that is displayed in the diagram.

ALL

Complete waveform, which is usually longer than the displayed waveform.

CURSor

Data between the cursor lines if a cursor measurement is defined for the source waveform.

GATE

Data included in the measurement gate if a gated measurement is defined for the source waveform.

MANual

Saves the data between user-defined start and stop values to be set with `EXPort:WAVeform:STARt` and `EXPort:WAVeform:STOP`.

*RST: DISPlay

Example: See [Chapter 17.4.3, "Data transfer in roll mode"](#), on page 527.

Usage: Asynchronous command

Manual operation: See ["Export mode"](#) on page 325

EXPort:WAVeform:SOURce <Source>

Selects the waveform to be exported to file.

Parameters:

<Source> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4 | SPECMAXH1 | SPECMINH1 | SPECNORM1
| SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 |
SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 |
SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 |
SPECAVER4

Usage: Asynchronous command

Manual operation: See ["Source"](#) on page 325

EXPort:WAVeform:STARt <Start>

Sets the start time value of the waveform section for export, if `EXPort:WAVeform:SCOPE` on page 678 is set to Manual.

Parameters:

<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See ["Export mode"](#) on page 325

EXPort:WAVeform:STOP <Stop>

Sets the end time value of the waveform section for export, if [EXPort:WAVeform:SCOPE](#) on page 678 is set to `Manual`.

Parameters:

<Stop> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Export mode](#)" on page 325

EXPort:WAVeform:GATE

Selects the gate to be used for limited data export if [EXPort:WAVeform:SCOPE](#) is set to `GATE`.

Usage: Asynchronous command

Manual operation: See "[Export mode](#)" on page 325

EXPort:WAVeform:CURSorset <Cursorset>

Sets the cursor set to be used for limited data export if [EXPort:WAVeform:SCOPE](#) is set to `CURSOR`.

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2
 CURSORx = CURSorx

Usage: Asynchronous command

Manual operation: See "[Export mode](#)" on page 325

17.11.5 Results

EXPort:RESult:NAME	680
EXPort:RESult:SAVE	681
EXPort:RESult:SELEct:CURSor	681
EXPort:RESult:SELEct:MEASurement	681

EXPort:RESult:NAME <FilePath>

Sets the path, the filename and the file format of the export file.

Parameters:

<FilePath> String with path and file name with extension `.CSV`.

Usage: Asynchronous command

EXPort:RESult:SAVE

Saves the results to file. The target file is set using `EXPort:RESult:NAME`. To select the results to be exported, use `EXPort:RESult:SElect:CURSor` and `EXPort:RESult:SElect:MEASurement`.

Usage: Event
Asynchronous command

EXPort:RESult:SElect:CURSor <CursorResult>

Includes the current cursor results in the export file.

Parameters:

<CursorResult> ON | OFF
*RST: OFF

Usage: Asynchronous command

EXPort:RESult:SElect:MEASurement <MeasResult>

Includes the current automatic measurement results in the export file.

Parameters:

<MeasResult> ON | OFF
*RST: OFF

Usage: Asynchronous command

17.11.6 Screenshots

The `HCOPY` subsystem and some other commands control the output of display information for documentation purposes. The instrument allows two independent output configurations which can be set separately with the suffix.

Note that the remote mode is intended for maximum performance. Therefore, the display does not follow the remote commands constantly. To get a correct screenshot, turn the display on using `SYSTem:DISPlay:UPDate`.

<code>HCOPY:DESTination<m></code>	682
<code>MMEMory:NAME</code>	682
<code>HCOPY:DEVice<m>:LANGUage</code>	682
<code>HCOPY:DEVice<m>:INVerse</code>	682
<code>HCOPY:IMMEDIATE<m>:NEXT</code>	683
<code>HCOPY:IMMEDIATE<m>[:DUM]</code>	683
<code>HCOPY:ISBA</code>	683
<code>HCOPY:SSD</code>	684
<code>HCOPY:WBKG</code>	684

HCOPY:DESTination<m> <medium>

Selects the output medium: file or clipboard.

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:

<medium> MMEM | CLIPBOARD
MMEM: saves image to a file.
CLIPBOARD: directs the image to the clipboard.
*RST: MMEM

Usage: Asynchronous command

Manual operation: See ["Directory"](#) on page 337

MMEMory:NAME <FileName>

Defines the filename for a screenshot that is stored to a file.

Parameters:

<FileName> String parameter specifying path and filename of the screenshot.

Example: See [Chapter 17.4.2, "Saving screenshots to file"](#), on page 526.

Usage: SCPI confirmed
Asynchronous command

HCOPY:DEvice<m>:LANGuage <FileFormat>

Defines the file format for output of the screenshot to file.

To set the output to file, use [HCOPY:DESTination<m>](#) with parameter 'MMEM'.

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:

<FileFormat> PNG | JPG
*RST: PNG

Usage: Asynchronous command

HCOPY:DEvice<m>:INVerse <InverseColor>

Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

See also [HCOPY:WBKG](#) and [White background](#).

Suffix:
 <m> 1..2
 Selects the output configuration.

Parameters:
 <InverseColor> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "Inverse color" on page 337

HCOPY:IMMEDIATE<m>:NEXT

Starts the output of the next display image, depending on the [HCOPY:DESTINATION<m>](#) destination setting.

If the screenshot is saved to a file, the file name used in the last saving process is automatically counted up to the next unused name. To define the file name, use [MMEMORY:NAME](#).

Suffix:
 <m> 1..2
 Selects the output configuration.

Example: See [Chapter 17.4.2, "Saving screenshots to file"](#), on page 526.

Usage: Asynchronous command

HCOPY:IMMEDIATE<m>[:DUM]

Starts the immediate output of the display image, depending on the [HCOPY:DESTINATION<m>](#) destination setting.

To define the file name, use [MMEMORY:NAME](#). Existing files are overwritten by the `HCOPY:IMM` command.

To get a correct screenshot of the diagrams, results, and dialog boxes, turn on the display using [SYSTEM:DISPLAY:UPDATE](#).

Suffix:
 <m> 1..2
 Selects the output configuration.

Example: See [Chapter 17.4.2, "Saving screenshots to file"](#), on page 526.

Usage: Event
 Asynchronous command

HCOPY:ISBA <IncludeSignBarScpi>

If enabled, the screenshot shows the signal bar below the diagram area.

Parameters:`<IncludeSignBarScpi>ON | OFF``*RST: ON`**Usage:**

Asynchronous command

Manual operation: See ["Include signal bar"](#) on page 337**HCOPY:SSD <ShwSetDialogScpi>**

If enabled, the currently open dialog box is included in the screenshot.

Parameters:`<ShwSetDialogScpi> ON | OFF``*RST: OFF`**Usage:**

Asynchronous command

Manual operation: See ["Show setup dialog"](#) on page 337**HCOPY:WBKG <WhiteBackground>**

Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both `HCOPY:WBKG` and `HCOPY:DEVICE<m>:INVERSE` are ON, the instrument inverts the background twice, and it appears black.**Parameters:**`<WhiteBackground> ON | OFF``*RST: OFF`**Usage:**

Asynchronous command

Manual operation: See ["White background"](#) on page 337

17.12 Automatic measurements

This chapter contains all remote commands to set up automatic measurements and to analyze the measurement results.

Measurement suffix <mg>The suffix `<mg>` indicates the number of the measurement, for which the command takes effect.

17.12.1 General settings

MEASurement<mg>:COUNT?	685
MEASurement<mg>[:ENABLE]	685
MEASurement<mg>:SOURce	685
MEASurement<mg>:FSRC	686
MEASurement<mg>:SSRC	686
MEASurement<mg>:MAIN	686
MEASurement<mg>:ENVSelect	687

MEASurement<mg>:COUNT?

Returns the maximum number of measurements, which is the maximum value for the <mg> suffix.

Suffix:

<mg> Irrelevant, omit the suffix.

Return values:

<Count> Maximum number of measurements

Usage:

Query only
Asynchronous command

MEASurement<mg>[:ENABLE] <First>

Switches the indicated measurement on or off.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<First> ON | OFF

Usage:

Asynchronous command

MEASurement<mg>:SOURce <SignalSource>,[<SignalSource2>]

Sets the source of the measurement.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<SignalSource> NONE | C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5

<SignalSource2> NONE | C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5

Usage:

Asynchronous command

Manual operation: See ["Source"](#) on page 252

MEASurement<mg>:FSRC <Source>

Defines the first measurement source.

The command is an alternative to [MEASurement<mg>:SOURce](#).

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<Source> NONE | C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5

Usage: Asynchronous command

MEASurement<mg>:SSRC <Source2>

Defines the second measurement source.

The command is an alternative to [MEASurement<mg>:SOURce](#).

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<Source2> NONE | C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5

Usage: Asynchronous command

Manual operation: See ["Clock source"](#) on page 255

MEASurement<mg>:MAIN <MeasType>

Defines the measurement that is used as a source for math calculations and result analysis.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<MeasType> HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDDev | CREST | POVershoot | NOVershoot | AREA | RTIME | FTIME | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | CYCCrest | CAMPLitude | CMAXimum | CMINimum | CPDELta | PULCnt | DELay | PHASe | BWIDth | EDGecount | SETup | HOLD | SHT | SHR | DTOTrigger | SLERising | SLEFalling

Usage: Asynchronous command

MEASurement<mg>:ENVSelect <EnvelopeCurve>

Relevant only for measurements on envelope waveforms. It selects the envelope to be used for measurement.

Prerequisites:

- [ACQUIRE:TYPE](#) on page 580 is set to `ENVELOPE`.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<EnvelopeCurve> MIN | MAX | BOTH

MIN

Measures on the lower envelope.

MAX

Measures on the upper envelope.

BOTH

The envelope is ignored, and the waveform is measured as usual.

*RST: BOTH

Usage: Asynchronous command

Manual operation: See "[Envelope](#)" on page 254

17.12.2 Measurement-specific settings

MEASurement<mg>:AMPTIME:CSLOPE	687
MEASurement<mg>:AMPTIME:ESLOPE	688
MEASurement<mg>:AMPTIME:PTCOUNT	688
MEASurement<mg>:AMPTIME:PSLOPE	688
MEASurement<mg>:AMPTIME:DELAY<n>:DIRRECTION	689
MEASurement<mg>:AMPTIME:DTOTRIGGER<n>:SLOPE	689
MEASurement<mg>:AMPTIME:DELAY<n>:SLOPE	689
MEASurement<mg>:GATE	690
MEASurement<mg>:REFLEVEL<sc>:REFERENCE	690

MEASurement<mg>:AMPTIME:CSLOPE <SetHoldClkSlp>

Sets the edge of the clock from which the setup and hold times are measured.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<SetHoldClkSlp> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See ["Clock slope"](#) on page 255

MEASurement<mg>:AMPTime:ESLope <EdgesSlope>

Sets the edge direction to be counted: rising edges, falling edges, or both. The setting is only relevant for edge count measurement [MEASurement<mg>:MAIN](#) is set to `EDGEcount`.

Suffix:
<mg> 1...16, index of the measurement

Parameters:
<EdgesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See ["Edges slope"](#) on page 254

MEASurement<mg>:AMPTime:PTCount <PulseCount>

Sets the number of positive pulses for the pulse train measurement. It measures the duration of N positive pulses from the rising edge of the first pulse to the falling edge of the N-th pulse.

Suffix:
<mg> 1...16, index of the measurement

Parameters:
<PulseCount> Range: 1 to 2147483647
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See ["Pulse count"](#) on page 254

MEASurement<mg>:AMPTime:PSLope <PulsesSlope>

Sets the first slope of the pulses to be counted. The setting is only relevant for pulse count measurement ([MEASurement<mg>:MAIN](#) is set to `PULCnt`).

Suffix:
<mg> 1...16, index of the measurement

Parameters:
<PulsesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See ["Pulse slope"](#) on page 254

MEASurement<mg>:AMPTime:DELay<n>:DIRection <EdgeCountDir>

Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Suffix:

<mg> 1...16, index of the measurement

<n> 1..2
Selects the source number.

Parameters:

<EdgeCountDir> FRFI | FRLA

FRFI - FRom FIrst, counting starts with the first edge of the waveform.

FRLA - FRom LAst, counting starts with the last edge of the waveform.

*RST: FRFI

Usage: Asynchronous command

Manual operation: See "[Direction](#)" on page 256

MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe <DlyTrigSlp>

Sets the edge direction to be used for delay measurement.

Suffix:

<mg> 1...16, index of the measurement

<n> 1..2
Selects the source number.

Parameters:

<DlyTrigSlp> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Delay to trigger measurement settings](#)" on page 257

MEASurement<mg>:AMPTime:DELay<n>:SLOPe <Slope>

Sets the edge of each source, between which the delay is measured.

Suffix:

<mg> 1...16, index of the measurement

<n> 1..2
Selects the source number.

Parameters:

<Slope> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See ["Slope"](#) on page 256

MEASurement<mg>:GATE <Gate>

Sets the gate of the indicated measurement. Enable a gate before you assign a measurement to it (`GATE<g>:ENABLe =ON`).

The query returns 0, if no gate is assigned.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See ["Measurements gated by G<x>"](#) on page 243

MEASurement<mg>:REFLevel<sc>:REFerence <RefLevelSet>

Selects the set of reference levels that is used for the measurement and for the indicated source. Each source of the measurement can have its own reference level set.

Suffix:

<mg> 1...16, index of the measurement

<sc> 1...3

Source waveform, to which the reference level set is applied.

Parameters:

<RefLevelSet> Number of the reference level set. Define the reference level set before you use it.

Example:

```
MEASurement1:MAIN DELay
MEASurement1:SOURce C1,C2
MEASurement1:REFLevel1:REFerence 1
MEASurement1:REFLevel2:REFerence 2
```

Measurement 1 is a delay measurement on channel 1 and channel 2. C1 is the first source and uses reference level set 1 (RL1). C2 is the second source and uses reference level set 2 (RL2).

Usage: Asynchronous command

Manual operation: See ["Reference levels"](#) on page 253

17.12.3 Results

MEASurement<mg>:RESult[:ACTual]?	691
MEASurement<mg>:RESult:AVG?	691
MEASurement<mg>:RESult:NPEak?	691

MEASurement<mg>:RESult:PPEak?	691
MEASurement<mg>:RESult:RELiability?	691
MEASurement<mg>:RESult:RMS?	691
MEASurement<mg>:RESult:WFMCOUNT?	691
MEASurement<mg>:RESult:EVTCount?	691
MEASurement<mg>:RESult:STDDev?	691
MEASurement<mg>:RESult:STARt?	692
MEASurement<mg>:RESult:STOP?	692
MEASurement<mg>:RESult:EVENTs:COUNT?	692
MEASurement<mg>:RESult:EVENTs:STARt?	692
MEASurement<mg>:RESult:EVENTs:STOP?	693
MEASurement<mg>:RESult:EVENTs:VALue?	693

MEASurement<mg>:RESult[:ACTual]?
MEASurement<mg>:RESult:AVG?
MEASurement<mg>:RESult:NPEak?
MEASurement<mg>:RESult:PPEak?
MEASurement<mg>:RESult:RELiability? [<MeasType>]
MEASurement<mg>:RESult:RMS?
MEASurement<mg>:RESult:WFMCOUNT?
MEASurement<mg>:RESult:EVTCount?
MEASurement<mg>:RESult:STDDev?

Return the statistic results of the specified measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using `MEASurement<mg>:MAIN`.

- [:ACTual]: current measurement result
- AVG: average of the measurement results
- EVTCount: number of measurement results in the measurement
- NPEak: negative peak value of the measurement results
- PPEak: positive peak value of the measurement results
- RELiability: reliability of the measurement result
- RMS: RMS value of the measurement results
- STDDev: standard deviation of the measurement results

Suffix:

<mg> 1...16, index of the measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

MEASurement<mg>:RESult:START?**MEASurement<mg>:RESult:STOP?**

Return the start and stop times of the specified measurement. The parameter defines the measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using [MEASurement<mg>:MAIN](#).

Suffix:

<mg> 1...16, index of the measurement

Return values:

<Stop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage:

Query only
Asynchronous command

MEASurement<mg>:RESult:EVENTs:COUNT?

Returns the number of measured events in one acquisition.

The command is relevant for measurements of all events, see [MEASurement<mg>:MULTiple](#).

Suffix:

<mg> 1...16, index of the measurement

Return values:

<Count> Number of events

Usage:

Query only
Asynchronous command

MEASurement<mg>:RESult:EVENTs:START? <EventIndex>

Returns the start time of the indicated measured event.

The command is relevant for measurements of all events, see [MEASurement<mg>:MULTiple](#).

Suffix:

<mg> 1...16, index of the measurement

Setting parameters:

<EventIndex> Index number of the measured event.

Return values:

<EventStart> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage:

Query only
Asynchronous command

MEASurement<mg>:RESult:EVENTs:STOP? <EventIndex>

Returns the end time of the indicated measured event.

The command is relevant for measurements of all events, see [MEASurement<mg>:MULTiple](#).

Suffix:

<mg> 1...16, index of the measurement

Setting parameters:

<EventIndex> Index number of the measured event.

Return values:

<EventStop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage:

Query only
Asynchronous command

MEASurement<mg>:RESult:EVENTs:VALue? <MeasResEvtIdx>

Returns the measured value of the indicated measured event.

The command is relevant for measurements of all events, see [MEASurement<mg>:MULTiple](#).

Suffix:

<mg> 1...16, index of the measurement

Setting parameters:

<EventIndex> Index number of the measured event.

Return values:

<EventValue> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

17.12.4 Statistics

MEASurement<mg>:STATistics:ARESet	693
MEASurement<mg>:STATistics[:ENABle]	694
MEASurement<mg>:MULTiple	694
MEASurement<mg>:MNOMeas	694

MEASurement<mg>:STATistics:ARESet

Resets the statistics for all measurements.

Suffix:
 <mg> Irrelevant, omit the suffix.

Usage: Setting only
 Asynchronous command

Manual operation: See "[Clear results](#)" on page 258

MEASurement<mg>:STATistics[:ENABLE] <GlobalEnable>

Enables statistics calculation for all measurements.

Suffix:
 <mg> Irrelevant, omit the suffix.

Parameters:
 <GlobalEnable> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Statistics](#)" on page 258

MEASurement<mg>:MULTiple <GlobalMeassAll>

If ON, the measurement is performed repeatedly if the measured parameter occurs several times inside the acquisition or defined gate. All results are included in evaluation, e.g. in statistics. To set the number of results to be considered, use [MEASurement<mg>:MNOMeas](#).

Suffix:
 <mg> Irrelevant, omit the suffix.

Parameters:
 <GlobalMeassAll> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Measure all events](#)" on page 258

MEASurement<mg>:MNOMeas <MaxMeasPerAcq>

Sets the maximum number of measurements per acquisition if [MEASurement<mg>:MULTiple](#) is on. The setting affects all measurements.

Suffix:
 <mg> Irrelevant, omit the suffix.

Parameters:
 <MaxMeasPerAcq> Range: 2 to 1E6
 Increment: 1
 *RST: 1E6

Usage: Asynchronous command
Manual operation: See "Max. No. of events" on page 258

17.12.5 Gate

GATE<g>:ENABle.....	695
GATE<g>:GCOupling.....	695
GATE<g>:CURSor.....	696
GATE<g>:ZDIagram.....	696
GATE<g>:MODE.....	696
GATE<g>:ABSolute:START.....	697
GATE<g>:ABSolute:STOP.....	697
GATE<g>:RELative:START.....	697
GATE<g>:RELative:STOP.....	697
GATE<g>:SHOW.....	697

GATE<g>:ENABle <First>

Enables the gate.

Suffix:

<g> 1...2, index of the gate

Parameters:

<First> ON | OFF

Usage: Asynchronous command

Manual operation: See "➕ Add" on page 242

GATE<g>:GCOupling <CouplingMode>

The gate coupling mode selects how the gate area is defined.

Suffix:

<g> 1...2, index of the gate

Parameters:

<CouplingMode> MANual | CURSor | ZOOM | SPECtrum

MANual

Manually define the gate with a user-defined start and stop values.

CURSor

Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement.

ZOOM

Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

SPECTrum

Spectrum coupling is available if a spectrum is enabled.

*RST: MANual

Usage: Asynchronous command

Manual operation: See "[Coupling mode](#)" on page 243

GATE<g>:CURSor <Cursorset>

Available for [GATE<g>:GCoupling](#) = CURSor.

Selects the cursor set to be used for measurement gating. The gate area is defined by the cursor lines.

Suffix:

<g> 1...2, index of the gate

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2

CURSORx = CURSorx

*RST: CURSOR1

Usage: Asynchronous command

Manual operation: See "[Coupling mode](#)" on page 243

GATE<g>:ZDiagram <SignalSource>,[<SignalSource2>]**GATE<g>:ZDiagram? <SignalSource>**

Available for [GATE<g>:GCoupling](#) = ZOOM.

The gate area is defined identically to the zoom area for the selected zoom diagram.

Suffix:

<g> 1...2, index of the gate

Parameters:

<SignalSource2>

Parameters for setting and query:

<SignalSource>

Usage: Asynchronous command

Manual operation: See "[Coupling mode](#)" on page 243

GATE<g>:MODE <Mode>

Selects if the gate settings are configured using absolute or relative values.

Suffix:

<g> 1...2, index of the gate

Parameters:

<Mode> ABS | REL
 *RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode" on page 243

GATE<g>:ABSolute:START <Start>

GATE<g>:ABSolute:STOP <Stop>

Define the absolute start and end values for the gate, respectively.

Available, if `GATE<g>:GCoupling = MANUal` and `GATE<g>:MODE =ABS`.

Suffix:

<g> 1...2, index of the gate

Parameters:

<Stop> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Mode" on page 243

GATE<g>:RELative:START <RelativeStart>

GATE<g>:RELative:STOP <RelativeStop>

Define the relative start and end values for the gate, respectively.

Available, if `GATE<g>:GCoupling = MANUal` and `GATE<g>:MODE =REL`.

Suffix:

<g> 1...2, index of the gate

Parameters:

<RelativeStop> Range: 0 to 100
 Increment: 0.1
 *RST: 100
 Default unit: %

Usage: Asynchronous command

Manual operation: See "Mode" on page 243

GATE<g>:SHOW <DisplayState>

If enabled, the gate area is indicated in the source diagram.

Suffix:

<g> 1...2, index of the gate

Parameters:

<DisplayState> ON | OFF
 *RST: ON

Usage: Asynchronous command

17.12.6 Reference levels

REFLevel<rl>:ENABLe.....	698
REFLevel<rl>:LMODe.....	698
REFLevel<rl>:ABSolute:HYSTerisis.....	699
REFLevel<rl>:ABSolute:LLEVel.....	699
REFLevel<rl>:ABSolute:MLEVel.....	699
REFLevel<rl>:ABSolute:ULEVel.....	700
REFLevel<rl>:RELative:HYSTerisis.....	700
REFLevel<rl>:RELative:LOWer.....	700
REFLevel<rl>:RELative:MIDDle.....	701
REFLevel<rl>:RELative:MODE.....	701
REFLevel<rl>:RELative:UPPer.....	701

REFLevel<rl>:ENABLe <First>

Enables the specified reference level.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<First> ON | OFF

Usage: Asynchronous command

Manual operation: See "[RLx](#)" on page 245

REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<LevelMode> ABS | REL
 *RST: REL

Usage: Asynchronous command

Manual operation: See "[Level mode](#)" on page 246

REFLevel<rl>:ABSolute:HYSTerisis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<HystAbs> Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See ["Hysteresis"](#) on page 246

REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<LowerLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See ["Upper level, Middle level, Lower level"](#) on page 246

REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<MiddleLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See ["Upper level, Middle level, Lower level"](#) on page 246

REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<UpperLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 246

REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<HystRel> Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Hysteresis](#)" on page 246

REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if [REFLevel<rl>:RELative:MODE](#) is set to USER.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<LowRefLevRel> Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 246

REFLevel<rl>:RELative:MIDDLE <MidRefLevRel>

Sets the middle relative reference level if [REFLevel<rl>:RELative:MODE](#) is set to USER.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<MidRefLevRel> Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 246

REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<RelativeLevels> FIVE | TEN | TWENTy | USER

FIVE

5/50/95

TEN

10/50/90

TWENTy

20/50/80

USER

Set the reference levels to individual values with

[REFLevel<rl>:RELative:LOWer](#), [REFLevel<rl>:](#)

[RELative:MIDDLE](#), and [REFLevel<rl>:RELative:UPPer](#).

*RST: TEN

Usage: Asynchronous command

Manual operation: See "[Relative levels](#)" on page 246

REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if [REFLevel<rl>:RELative:MODE](#) is set to USER.

Suffix:

<rl> 1...4, index of the reference level set

Parameters:

<UppRefLevRel> Range: -100 to 200
 Increment: 1
 *RST: 90
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 246

17.12.7 Tracks

MEASurement<mg>:TRACk[:STATe]	702
MEASurement<mg>:TRACk:AUTO	702
MEASurement<mg>:TRACk:CONTiuous	702
MEASurement<mg>:TRACk:OFFSet	703
MEASurement<mg>:TRACk:SCALE	703
MEASurement<mg>:TRACk:DATA:HEADer?	704
MEASurement<mg>:TRACk:DATA[:VALues]?	704

MEASurement<mg>:TRACk[:STATe] <State>

Enables or disables the track for the selected measurement.

Suffix:

<mg> 1...16, index of the measurement

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[State](#)" on page 260

MEASurement<mg>:TRACk:AUTO

Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Suffix:

<mg> 1...16, index of the measurement

Usage:

Event
 Asynchronous command

Manual operation: See "[Fit to screen](#)" on page 260

MEASurement<mg>:TRACk:CONTiuous <AutoScale>

Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Suffix:
 <mg> 1...16, index of the measurement

Parameters:
 <AutoScale> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Auto Scale](#)" on page 260

MEASurement<mg>:TRACk:OFFSet <VerticalOffset>

Sets or queries the offset of the track waveform.

If [MEASurement<mg>:TRACk:CONTiunous](#) is ON, use the command to query the current value.

If [MEASurement<mg>:TRACk:CONTiunous](#) is OFF, the command sets the offset.

Suffix:
 <mg> 1...16, index of the measurement

Parameters:
 <VerticalOffset> Range: -1E+26 to 1E+26
 Increment: 1E-06
 *RST: 0
 Default unit: div

Usage: Asynchronous command

Manual operation: See "[Meas offset](#)" on page 261

MEASurement<mg>:TRACk:SCALE <VerticalScale>

Sets or queries the vertical scale of the track diagram.

If [MEASurement<mg>:TRACk:CONTiunous](#) is ON, use the command to query the current value.

If [MEASurement<mg>:TRACk:CONTiunous](#) is OFF, the command sets the scale.

Suffix:
 <mg> 1...16, index of the measurement

Parameters:
 <VerticalScale> Range: 1E-26 to 1E+26
 Increment: 1E-05
 *RST: 0.5
 Default unit: V/div

Usage: Asynchronous command

Manual operation: See "[Meas scale](#)" on page 260

MEASurement<mg>:TRACk:DATA:HEADer?

Returns the header of track data.

Table 17-6: Header data

Position	Meaning	Example
1	XStart, acquisition time before trigger, in s	-5E-008 = - 50 ns
2	XStop, acquisition time after trigger, in s	5E-008 = 50 ns
3	Number of measurement events = number of points in the track waveform	1000
4	Always 1	1

Suffix:

<mg> 1...16, index of the measurement

Usage:

Query only
Asynchronous command

MEASurement<mg>:TRACk:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the indicated track waveform for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Suffix:

<mg> 1...16, index of the measurement

Query parameters:

<Offset> Number of offset track points, which are ignored in the data transfer.

[<Length>] Number of track points to be retrieved.

Return values:

<Data> List of values according to the format and content settings.

Usage:

Query only
Asynchronous command

17.13 Cursor measurements

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpj, chapter "Command sequence and synchronization"
- [Cursor setup](#).....705
- [Cursor results](#).....712
- [Peak search using cursors](#).....714
- [Cursor appearance](#).....716

17.13.1 Cursor setup

CURSor<cu>:AOFF	705
CURSor<cu>:COUNT?	706
CURSor<cu>:STATe	706
CURSor<cu>:FUNction	706
CURSor<cu>:SOURce	706
CURSor<cu>:USSource	707
CURSor<cu>:SSource	707
CURSor<cu>:X1Position	708
CURSor<cu>:X2Position	708
CURSor<cu>:Y1Position	708
CURSor<cu>:Y2Position	709
CURSor<cu>:SSCReen	709
CURSor<cu>:TRACking[:STATe]	709
CURSor<cu>:LABel	709
CURSor<cu>:HORizontal<n>:LABel	710
CURSor<cu>:VERTical<n>:LABel	710
CURSor<cu>:DISPlay:VALues	710
CURSor<cu>:SIAD	711
CURSor<cu>:XCoupling	711
CURSor<cu>:YCOupling	711
CURSor<cu>:X1ENvelope	712
CURSor<cu>:X2ENvelope	712

CURSor<cu>:AOFF

Switches all cursors off.

Suffix:

<cu> Irrelevant, omit the suffix.

Usage:

Setting only
Asynchronous command

CURSor<cu>:COUNT?

Returns the maximum number of cursor sets, which is the maximum value for the cursor suffix.

Suffix:

<cu> Irrelevant, omit the suffix.

Return values:

<Count> Number of cursor sets

Usage:

Query only
Asynchronous command

CURSor<cu>:STATe <State>

Enables the selected cursor measurement.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<State> ON | OFF
*RST: OFF

Usage:

Asynchronous command

Manual operation: See "[Show cursor](#)" on page 232

CURSor<cu>:FUNCTioN <Type>

Defines the cursor type to be used for the measurement.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<Type> VERTical | HORizontal | PAIRed
HORizontal
A pair of horizontal cursor lines.
VERTical
A pair of vertical cursor lines.
PAIRed
Both vertical and horizontal cursor line pairs.
*RST: PAIRed

Usage:

Asynchronous command

Manual operation: See "[Type](#)" on page 233

CURSor<cu>:SOURce <Source>

Selects the cursor source.

Suffix:	
<cu>	1...2, index of the cursor set
Parameters:	
<Source>	C1 C2 C3 C4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 SBUS1 SBUS2 SBUS3 SBUS4 M1 M2 M3 M4 M5 SPECMAXH1 SPECMINH1 SPECNORM1 SPECAVER1 SPECMAXH2 SPECMINH2 SPECNORM2 SPECAVER2 SPECMAXH3 SPECMINH3 SPECNORM3 SPECAVER3 SPECMAXH4 SPECMINH4 SPECNORM4 SPECAVER4
Usage:	Asynchronous command
Manual operation:	See " Source " on page 233

CURSor<cu>:USSource <UseSource2>

Enables the second cursor source. To select the second source, use [CURSor<cu>:SSource](#).

If enabled, the second cursor lines Cx.2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Suffix:	
<cu>	1...2, index of the cursor set
Parameters:	
<UseSource2>	ON OFF
	*RST: OFF
Usage:	Asynchronous command
Manual operation:	See " Second source, Source 2 " on page 233

CURSor<cu>:SSource <Source2>

Selects the second cursor source.

Suffix:	
<cu>	1...2, index of the cursor set
Parameters:	
<Source2>	C1 C2 C3 C4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 SBUS1 SBUS2 SBUS3 SBUS4 M1 M2 M3 M4 M5 SPECMAXH1 SPECMINH1 SPECNORM1 SPECAVER1 SPECMAXH2 SPECMINH2 SPECNORM2 SPECAVER2 SPECMAXH3 SPECMINH3 SPECNORM3 SPECAVER3 SPECMAXH4 SPECMINH4 SPECNORM4 SPECAVER4
	Second source of the cursor measurement.
Usage:	Asynchronous command

Manual operation: See ["Second source, Source 2"](#) on page 233

CURSor<cu>:X1Position <X1Position>

Defines the position of the left vertical cursor line.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<X1Position> Range: 0 to 500
 Increment: 0.1
 *RST: depends on time scale, at 25% of the time axis
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["X1 position, X2 position"](#) on page 234

CURSor<cu>:X2Position <X2Position>

Defines the position of the right vertical cursor line.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<X2Position> Range: 0 to 500
 Increment: 0.1
 *RST: depends on time scale, at 75% of the time axis
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["X1 position, X2 position"](#) on page 234

CURSor<cu>:Y1Position <YPosition1>

Defines the position of the lower horizontal cursor line.

If [CURSor<cu>:TRACking\[:STATe\]](#) is enabled, the y-positions are set automatically. The query returns the measurement result - the lower vertical value of the waveform.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<YPosition1> Range: -50 to 50
 Increment: 0.01
 *RST: 0

Usage: Asynchronous command

Manual operation: See ["Y1 position, Y2 position"](#) on page 234

CURSor<cu>:Y2Position <YPosition2>

Defines the position of the upper horizontal cursor line.

If **CURSor<cu>:TRACking[:STATe]** is enabled, the y-positions are set automatically. The query returns the measurement result - the upper vertical value of the waveform.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<YPosition2> Range: -50 to 50
Increment: 0.01
*RST: 0

Usage: Asynchronous command

Manual operation: See "[Y1 position, Y2 position](#)" on page 234

CURSor<cu>:SSCReen

Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Suffix:

<cu> 1...2, index of the cursor set

Usage:

Setting only
Asynchronous command

Manual operation: See "[Place on display](#)" on page 234

CURSor<cu>:TRACking[:STATe] <TrackCurve>

If enabled, the horizontal cursor lines tracks the waveform.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<TrackCurve> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Track waveform](#)" on page 234

CURSor<cu>:LABel <ShowLabel>

Shows the cursor labels in the diagram.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<ShowLabel> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Show label"](#) on page 235

CURSor<cu>:HORizontal<n>:LABel <Label>

Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:

<cu> 1...2, index of the cursor set
 <n> 1..2
 Number of the cursor line

Parameters:

<Label> String with the cursor label

Example:

```
CURSor1:HORizontal1:LABel 'Cu1H1'  

CURSor1:HORizontal2:LABel "Cu1H2"
```

Usage: Asynchronous command

Manual operation: See ["Horizontal cursor 1, Horizontal cursor 2"](#) on page 236

CURSor<cu>:VERTical<n>:LABel <Label>

Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:

<cu> 1...2, index of the cursor set
 <n> 1..2
 Number of the cursor line

Parameters:

<Label> String with the cursor label

Example:

```
CURSor2:VERTical1:LABel 'Cu2V1'  

CURSor2:VERTical2:LABel "Cu2V2"
```

Usage: Asynchronous command

Manual operation: See ["Vertical cursor 1, Vertical cursor 2"](#) on page 236

CURSor<cu>:DISPlay:VALues <AddValuesLabel>

Shows the measured values in the cursor labels.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<AddValuesLabel> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Show values"](#) on page 236

CURSor<cu>:SIAD <ShwInAllDiags>

Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<ShwInAllDiags> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Show in all diagrams"](#) on page 235

CURSor<cu>:XCOupling <Coupling>

Defines the positioning mode of the vertical cursor.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<Coupling> ON | OFF

ON

Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF

Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See ["X, Y"](#) on page 235

CURSor<cu>:YCOupling <Coupling>

Defines the positioning mode of the horizontal cursor. If the horizontal cursor lines track the waveform, the y-coupling is irrelevant (**CURSor<cu>:TRACking[:STATe]** is ON).

Suffix:	
<cu>	1...2, index of the cursor set
Parameters:	
<Coupling>	ON OFF
	ON
	Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.
	OFF
	Each cursor line is positioned independently.
	*RST: OFF
Usage:	Asynchronous command
Manual operation:	See "X, Y" on page 235

CURSor<cu>:X1ENvelope <EnvelopeSelect>

CURSor<cu>:X2ENvelope <EnvelopeSelect>

Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Prerequisites:

- **ACQUIRE:TYPE** on page 580 is set to **ENVELOPE**.
- **CURSor<cu>:TRACKing[:STATE]** is set to **ON**.
- **CURSor<cu>:FUNCTION** is set to **PAIRED**.

Suffix:	
<cu>	1...2, index of the cursor set

Parameters:	
<EnvelopeSelect>	MIN MAX
	MIN
	The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.
	MAX
	The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.
	*RST: MAX

Usage: Asynchronous command

Manual operation: See "Envelope, Envelope 2" on page 233

17.13.2 Cursor results

CURSor<cu>:XDELta[:VALue]?	713
CURSor<cu>:XDELta:INVerse?	713
CURSor<cu>:YDELta[:VALue]?	713
CURSor<cu>:YDELta:SLOPe	713

CURSor<cu>:XDELta[:VALue]?

Queries the delta value (distance) of two vertical cursor lines.

Suffix:

<cu> 1...2, index of the cursor set

Return values:

<Delta> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: s

Usage:

Query only
Asynchronous command

CURSor<cu>:XDELta:INVerse?

Queries the inverse value of the delta value (distance) of the two vertical cursor lines.

Suffix:

<cu> 1...2, index of the cursor set

Return values:

<DeltaInverse> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: Hz

Usage:

Query only
Asynchronous command

CURSor<cu>:YDELta[:VALue]?

Queries the delta value (distance) of the two horizontal cursor lines.

Suffix:

<cu> 1...2, index of the cursor set

Return values:

<Delta> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage:

Query only
Asynchronous command

CURSor<cu>:YDELta:SLOPe <DeltaSlope>

Returns the inverse value of the voltage difference - the reciprocal of the vertical distance of two horizontal cursor lines: $1/\Delta V$.

Suffix:
 <cu> 1...2, index of the cursor set

Parameters:
 <DeltaSlope> Range: -1E+26 to 1E+26
 Increment: 0
 *RST: 0

Usage: Asynchronous command

17.13.3 Peak search using cursors

CURSor<cu>:FFT:SETCenter.....	714
CURSor<cu>:FFT:TOCenter.....	714
CURSor<cu>:MAXimum[:PEAK].....	714
CURSor<cu>:MAXimum:LEFT.....	715
CURSor<cu>:MAXimum:RIGHT.....	715
CURSor<cu>:MAXimum:NEXT.....	715
CURSor<cu>:PEXCursion.....	715
CURSor<cu>:THReshold.....	716

CURSor<cu>:FFT:SETCenter

Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Suffix:
 <cu> 1...2, index of the cursor set

Usage: Setting only
 Asynchronous command

Manual operation: See "[Set center frequency to](#)" on page 237

CURSor<cu>:FFT:TOCenter

Sets the vertical cursor line Cu1 to the center frequency.

Suffix:
 <cu> 1...2, index of the cursor set

Usage: Setting only
 Asynchronous command

Manual operation: See "[Center frequency](#)" on page 237

CURSor<cu>:MAXimum[:PEAK]

Sets both cursors to the absolute peak value.

Suffix:
 <cu> 1...2, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See ["Absolute peak"](#) on page 237

CURSor<cu>:MAXimum:LEFT

Cursor 2 is set to the next peak to the left of the current position.

Suffix:
<cu> 1...2, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See ["Next peak left"](#) on page 237

CURSor<cu>:MAXimum:RIGHT

Cursor 2 is set to the next peak to the right of the current position.

Suffix:
<cu> 1...2, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See ["Next peak right"](#) on page 237

CURSor<cu>:MAXimum:NEXT

Cursor 2 is set to the next smaller absolute peak from the current position.

Suffix:
<cu> 1...2, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See ["Next peak"](#) on page 237

CURSor<cu>:PEXCursion <Value>

Sets the minimum level by which the waveform must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Suffix:
<cu> 1...2, index of the cursor set

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See ["Peak excursion"](#) on page 237

CURSor<cu>:THReshold <Value>

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<Value>

Usage:

Asynchronous command

Manual operation: See ["Threshold"](#) on page 237

17.13.4 Cursor appearance

CURSor<cu>:STYLe <Style>

Defines how the cursor is displayed in the diagram.

Suffix:

<cu> 1...2, index of the cursor set

Parameters:

<Style> LINes | LRHombus | VLRHombus | RHOMbus

LINes

The cursors are displayed as lines.

LRHombus

The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

VLRHombus

The cursors are displayed only as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

RHOMbus

The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

*RST: LINes

Usage:

Asynchronous command

Manual operation: See ["Cursor style"](#) on page 232

17.14 Spectrum analysis

17.14.1 Spectrum setup

| | |
|--|-----|
| CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution]:AUTO..... | 717 |
| CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution]:RATio..... | 717 |
| CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution][:VALue]..... | 718 |
| CALCulate:SPECTrum<sp>:FREQUency:CENTer..... | 718 |
| CALCulate:SPECTrum<sp>:FREQUency:SCALE..... | 718 |
| CALCulate:SPECTrum<sp>:FREQUency:SPAN..... | 719 |
| CALCulate:SPECTrum<sp>:FREQUency:START..... | 719 |
| CALCulate:SPECTrum<sp>:FREQUency:STOP..... | 719 |
| CALCulate:SPECTrum<sp>:FREQUency:WINDow:TYPE..... | 720 |
| CALCulate:SPECTrum<sp>:MAGNitude:LEVel..... | 721 |
| CALCulate:SPECTrum<sp>:MAGNitude:RANGe..... | 721 |
| CALCulate:SPECTrum<sp>:MAGNitude:SCALE..... | 721 |
| CALCulate:SPECTrum<sp>:PRESet..... | 722 |
| CALCulate:SPECTrum<sp>:SOURce..... | 722 |
| CALCulate:SPECTrum<sp>:STATe..... | 722 |
| CALCulate:SPECTrum<sp>:THReshold..... | 722 |
| CALCulate:SPECTrum<sp>:PEXCursion..... | 723 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:COUNT..... | 723 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:ENABLE..... | 723 |
| CALCulate:SPECTrum<sp>:WAVEform:MAXimum:ENABLE..... | 724 |
| CALCulate:SPECTrum<sp>:WAVEform:MINimum:ENABLE..... | 724 |
| CALCulate:SPECTrum<sp>:WAVEform:NORMAl[:ENABLE]..... | 724 |

CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution]:AUTO <AutoRBW>

Couples the frequency span to the "RBW" setting.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<AutoRBW> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto RBW" on page 269

CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution]:RATio <SpanRBWRatio>

Defines the coupling ratio for Span/RBW.

Available, if `CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution]:AUTO` is set to ON.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<SpanRBWRatio> Range: 10 to 10000
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "[Span/RBW](#)" on page 269

CALCulate:SPECTrum<sp>:FREQUency:BANDwidth[:RESolution][:VALue] <RBW>

Queries or defines the used resolution bandwidth.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<RBW> Range: 0.0002 to 2000000
Increment: 0.01
*RST: 2000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[RBW](#)" on page 270

CALCulate:SPECTrum<sp>:FREQUency:CENTer <Center>

Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the frequency span setting.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[\[Position\]](#)" on page 42

CALCulate:SPECTrum<sp>:FREQUency:SCALE <XAxisMode>

Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Suffix:
 <sp> 1...4, index of the spectrum

Parameters:
 <XAxisMode> LIN | LOG
 LIN: linear scaling
 LOG: logarithmic scaling
 *RST: LIN

Usage: Asynchronous command

Manual operation: See "[Frequency axis](#)" on page 272

**CALCulate:SPECTrum<sp>:FREQUENCY:SPAN **

The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center" setting.

Suffix:
 <sp> 1...4, index of the spectrum

Parameters:
 Range: 0 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[\[Scale\]](#)" on page 42

CALCulate:SPECTrum<sp>:FREQUENCY:START <Start>

Defines the start frequency of the displayed frequency span.

Suffix:
 <sp> 1...4, index of the spectrum

Parameters:
 <Start> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Start](#)" on page 269

CALCulate:SPECTrum<sp>:FREQUENCY:STOP <Stop>

Sets the stop frequency of the displayed frequency span.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:
<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Stop](#)" on page 269

CALCulate:SPECTrum<sp>:FREQUENCY:WINDOW:TYPE <WindowFunction>

Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 4 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:
<WindowFunction> RECTangular | HAMMING | HANN | BLACKharris | GAUSSian | FLATTOP2 | FLATtop2 | KAISerbessel

RECTangular

The rectangular window has the best frequency resolution, but a poor amplitude accuracy and is recommended for separating two tones with almost equal amplitudes and a small frequency distance.

HAMMING

The Hamming window is bell shaped and has a good frequency resolution and fair amplitude accuracy. It is recommended for frequency response measurements and sine waves, periodic signals and narrowband noise.

HANN

The Hann window is bell shaped and has a slightly worse frequency resolution but smaller sidelobe level than the Hamming window. The applications are the same.

BLACKharris

The Blackman window is bell shaped and has a poor frequency resolution, but very good amplitude accuracy. It is recommended mainly for signals with single frequencies to detect harmonics.

GAUSSian

Good frequency resolution and best magnitude resolution, recommended for weak signals and short duration

FLATTOP2 = FLATtop2

The flat top window has a poor frequency resolution, but the best amplitude accuracy and the sharpest sidelobe. It is recommended for accurate single tone amplitude measurements.

KAISerbessel

The kaiser-bessel window has a fair frequency resolution and good amplitude accuracy, and a very high sidelobe level. It is recommended for separating two tones with differing amplitudes and a small frequency distance.

*RST: BLACkharris

Usage: Asynchronous command
Manual operation: See "[Window type](#)" on page 270

CALCulate:SPECTrum<sp>:MAGNitude:LEVel <VerticalMax>

Sets the maximum displayed value on the vertical scale.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<VerticalMax> Range: -1E+26 to 1000000000000000
 Increment: 1
 *RST: 10

Usage: Asynchronous command
Manual operation: See "[Vertical maximum](#)" on page 272

CALCulate:SPECTrum<sp>:MAGNitude:RANGe <VerticalRange>

Sets the range of the spectrum values to be displayed.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<VerticalRange> Range: 0 to 1000000000000000
 Increment: 0.01
 *RST: 100

Usage: Asynchronous command
Manual operation: See "[Vertical range](#)" on page 272

CALCulate:SPECTrum<sp>:MAGNitude:SCALE <Unit>

Sets the unit for the y-axis.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Unit> LINear | DB | DBM | DBV | DBUV | DBS | DBHZ
 *RST: DBM

Usage: Asynchronous command

Manual operation: See "[Magnitude unit](#)" on page 272

CALCulate:SPECTrum<sp>:PRESet

Presets the spectrum measurement.

Suffix:

<sp> 1...4, index of the spectrum

Usage:

Setting only
 Asynchronous command

Manual operation: See "[Spectrum preset](#)" on page 271

CALCulate:SPECTrum<sp>:SOURce <Source>

Selects the source for the spectrum.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Source> C1 | C2 | C3 | C4 | M1 | M2 | M3 | M4 | M5 | R1 | R2 | R3 | R4

Usage:

Asynchronous command

Manual operation: See "[Source](#)" on page 268

CALCulate:SPECTrum<sp>:STATe <State>

Enables the spectrum.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<State> ON | OFF
 *RST: OFF

Usage:

Asynchronous command

Manual operation: See "[Display](#)" on page 268

CALCulate:SPECTrum<sp>:THReshold <Threshold>

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:
<Threshold> Range: -500 to 500
Increment: 1
*RST: -70
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 237

CALCulate:SPECTrum<sp>:PEXCursion <PeakExcursion>

Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:
<PeakExcursion> Range: 0 to 100
Increment: 1
*RST: 5
Default unit: dB

Usage: Asynchronous command

Manual operation: See "[Peak excursion](#)" on page 237

CALCulate:SPECTrum<sp>:WAVEform:AVERAge:COUNT <AverageCount>

Sets the number of segments used for the averaging of the spectrum.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:
<AverageCount> Range: 2 to 65534
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "[Traces](#)" on page 270

CALCulate:SPECTrum<sp>:WAVEform:AVERAge:ENABLE <Enable>

Enables the average trace.

Suffix:
<sp> 1...4, index of the spectrum

Parameters:

<Enable> ON | OFF

Usage:

Asynchronous command

Manual operation: See "[Traces](#)" on page 270

CALCulate:SPECTrum<sp>:WAVEform:MAXimum:ENABLE <Enable>

Enables the maximum trace.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Enable> ON | OFF

Usage:

Asynchronous command

Manual operation: See "[Traces](#)" on page 270

CALCulate:SPECTrum<sp>:WAVEform:MINimum:ENABLE <Enable>

Enables the minimum trace.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Enable> ON | OFF

Usage:

Asynchronous command

Manual operation: See "[Traces](#)" on page 270

CALCulate:SPECTrum<sp>:WAVEform:NORMAL[:ENABLE] <Enable>

Enables the normal spectrum trace.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Enable> ON | OFF

Usage:

Asynchronous command

Manual operation: See "[Traces](#)" on page 270

17.14.2 Spectrum gate

| | |
|---|-----|
| CALCulate:SPECTrum<sp>:GATE:POSition..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:STARt..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:STOP..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:WIDTh..... | 726 |

CALCulate:SPECTrum<sp>:GATE:POSition <Center>

Sets the position of the displayed frequency range.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Center> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Position](#)" on page 273

CALCulate:SPECTrum<sp>:GATE:STARt <Start>

Sets the starting value for the gate.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Start> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Start](#)" on page 273

CALCulate:SPECTrum<sp>:GATE:STOP <Stop>

Sets the end value for the gate.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Stop> Range: -1E+26 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Stop" on page 273

**CALCulate:SPECTrum<sp>:GATE:WIDTh **

Defines the width of the displayed gate.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

 Range: 0 to 1E+26
 Increment: 0.01
 *RST: 0.01
 Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Width" on page 273

17.14.3 Peak list

| | |
|--|-----|
| CALCulate:SPECTrum<sp>:PLISt:COUNT? | 726 |
| CALCulate:SPECTrum<sp>:PLISt[:STATe] | 727 |
| CALCulate:SPECTrum<sp>:PLISt:MAXCount | 727 |
| CALCulate:SPECTrum<sp>:PLISt:MODE | 727 |
| CALCulate:SPECTrum<sp>:PLISt:SOURce | 727 |
| CALCulate:SPECTrum<sp>:PLISt:SPOW | 728 |
| CALCulate:SPECTrum<sp>:PLISt:RESUlt[:VALue]? | 728 |
| CALCulate:SPECTrum<sp>:PLISt:SORT:COLumn | 728 |
| CALCulate:SPECTrum<sp>:PLISt:SORT:ORDer | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LAbel:FREQUency[:STATe] | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LAbel:MAXCount | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LAbel:INVert | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LAbel:MAXCount | 730 |
| CALCulate:SPECTrum<sp>:PLISt:LAbel[:STATe] | 730 |

CALCulate:SPECTrum<sp>:PLISt:COUNT?

Returns the current number of peak list results.

Suffix:

<sp> 1...4, index of the spectrum

Return values:

<Count>

Usage:

Query only
 Asynchronous command

CALCulate:SPECTrum<sp>:PLISt[:STATe] <ShowTable>

Enables the display of the peak table.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ShowTable> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Peak table](#)" on page 275

CALCulate:SPECTrum<sp>:PLISt:MAXCount <MaxNoRes>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<MaxNoRes> Range: 1 to 1000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "[Max results](#)" on page 276

CALCulate:SPECTrum<sp>:PLISt:MODE <ResultMode>

Selects how the measurement results are displayed.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ResultMode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "[Result mode](#)" on page 276

CALCulate:SPECTrum<sp>:PLISt:SOURce <Source>

Selects the source of the peak table. You can select one of the traces that is enabled with [Traces](#).

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Source> SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 |
 SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 |
 SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 |
 SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4

Usage: Asynchronous command

Manual operation: See "[Source](#)" on page 277

CALCulate:SPECTrum<sp>:PLISt:SPOW <ShwPeaksOnWfm>

Displays a box with a description for each detected peak in the spectrum, including the magnitude.

If `CALCulate:SPECTrum<sp>:PLISt:LABel:FREQuency[:STATe]` is ON, the frequency values are also displayed.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ShwPeaksOnWfm> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Peak on waveform](#)" on page 275

CALCulate:SPECTrum<sp>:PLISt:RESult[:VALue]?

Returns the current peak list measurement results.

Suffix:

<sp> 1...4, index of the spectrum

Usage: Query only
 Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:SORt:COLumn <ResultColumn>

Sorts the results in the spectrum peak list table either according to the frequency or according to the value.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ResultColumn> FREQ | VAL
 *RST: FREQ

Usage: Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:SORt:ORDer <ResultOrder>

Defines if the spectrum peak list results are sorted in an ascending (increasing) or descending (decreasing) order.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ResultOrder> ASC | DESC
 ASC: ascending
 DESC: descending
 *RST: ASC

Usage: Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:LABel:FREQuency[:STATe] <ShowFrequency>

Includes the frequency of the detected peak in the diagram labels.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ShowFrequency> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Show frequency"](#) on page 277

CALCulate:SPECTrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<MaxNumberPeaks> Range: 1 to 100
 Increment: 1
 *RST: 10

Usage: Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:LABel:INVert <Inverse>

Inverts the colors of the peak list labels, the peak boxes are shown with a white background.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<Inverse> ON | OFF
 *RST: OFF

Usage: Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<MaxNumberPeaks> Range: 1 to 100
 Increment: 1
 *RST: 10

Usage: Asynchronous command

CALCulate:SPECTrum<sp>:PLISt:LABel[:STATe] <ShowLabels>

Displays the labels in the peak list diagram.

Suffix:

<sp> 1...4, index of the spectrum

Parameters:

<ShowLabels> ON | OFF
 *RST: ON

Usage: Asynchronous command

17.14.4 Data export of spectrum waveforms

For each of the spectrum traces, a dedicated command is available. For a description of the traces, see "[Traces](#)" on page 270.

CALCulate:SPECTrum<sp>:WAVEform:AVERage:DATA:HEADer?
CALCulate:SPECTrum<sp>:WAVEform:MAXimum:DATA:HEADer?
CALCulate:SPECTrum<sp>:WAVEform:MINimum:DATA:HEADer?
CALCulate:SPECTrum<sp>:WAVEform:NORMal:DATA:HEADer?

Returns the header of spectrum data. The header contains attributes of the waveform.

Table 17-7: Header data

| Position | Meaning | Example |
|----------|-------------|--------------------------|
| 1 | XStart in s | -9.477E-008 = - 94,77 ns |
| 2 | XStop in s | 9.477E-008 = 94,77 ns |

| Position | Meaning | Example |
|----------|--|---------|
| 3 | Record length of the waveform in Samples | 200000 |
| 4 | Always = 1 | 1 |

Suffix:

<sp> 1...4, index of the spectrum

Usage:

Query only
Asynchronous command

CALCulate:SPECTrum<sp>:WAVEform:AVERAge:DATA[:VALues]?
[<Offset>[,<Length>]]

CALCulate:SPECTrum<sp>:WAVEform:MAXimum:DATA[:VALues]?
[<Offset>[,<Length>]]

CALCulate:SPECTrum<sp>:WAVEform:MINimum:DATA[:VALues]?
[<Offset>[,<Length>]]

CALCulate:SPECTrum<sp>:WAVEform:NORMAL:DATA[:VALues]?
[<Offset>[,<Length>]]

Returns the data of the spectrum points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use [FORMat \[: DATA \]](#) on page 531.

Suffix:

<sp> 1...4, index of the spectrum

Query parameters:

<Offset> Number of offset waveform points to be skipped.
Range: 0 to m. Limit: $n + m \leq \text{record length}$

<Length> Number of waveform points to be retrieved.
Range: 1 to n. Limit: $n + m \leq \text{record length}$

Return values:

<Data> List of values according to the format and content settings.

Usage:

Query only
Asynchronous command

17.15 Applications

17.15.1 Frequency response analysis (option R&S MXO4-K36)

- Frequency response analysis settings..... 732
- Frequency response analysis amplitude profile..... 738
- Frequency response analysis calibration settings..... 739
- Frequency response analysis diagram settings..... 740
- Frequency response analysis results..... 744
- Frequency response analysis export..... 747

17.15.1.1 Frequency response analysis settings

| | |
|---|-----|
| FRANalysis:STATe..... | 732 |
| FRANalysis:ENABle..... | 733 |
| FRANalysis:AUToscale..... | 733 |
| FRANalysis:AMPLitude:MODE..... | 733 |
| FRANalysis:FREQuency:STARt..... | 733 |
| FRANalysis:FREQuency:STOP..... | 734 |
| FRANalysis:GENERator:AMPLitude..... | 734 |
| FRANalysis:GENERator:LOAD..... | 734 |
| FRANalysis:GENERator[:CHANnel]..... | 734 |
| FRANalysis:INPut[:SOURce]..... | 735 |
| FRANalysis:MEASurement:DELay:STATe..... | 735 |
| FRANalysis:MEASurement:DELay[:TIME]..... | 735 |
| FRANalysis:MEASurement:POINt[:DISPlay]..... | 735 |
| FRANalysis:MEASurement:RBW..... | 736 |
| FRANalysis:OUTPut[:SOURce]..... | 736 |
| FRANalysis:POINts:LOGarithmic..... | 736 |
| FRANalysis:POINts:MODE..... | 736 |
| FRANalysis:POINts:TOTal..... | 737 |
| FRANalysis:REPeat..... | 737 |
| FRANalysis:RESet..... | 737 |
| FRANalysis:PHASe:MAXimum..... | 737 |

FRANalysis:STATe <Value>

Starts the frequency response analysis.

Parameters:

<Value> RUN | STOP

Usage: Asynchronous command

Manual operation: See "Run" on page 283

FRANalysis:ENABLE <State>

Enables the frequency response analysis application.

If the frequency response analysis is disabled, the instrument does not accept any `FRANalysis` command.

You can start the analysis with `FRANalysis:STATe`.

Parameters:

<State> ON | OFF

Usage: Asynchronous command

FRANalysis:AUToscale <AutoScale>

Enables the auto scaling function for each measurement.

Parameters:

<AutoScale> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Auto scale](#)" on page 287

FRANalysis:AMPLitude:MODE <AmplitudeMode>

Selects, if the amplitude is a constant value (`FRANalysis:GENerator:AMPLitude`) or is defined as an amplitude profile.

Parameters:

<AmplitudeMode> CONStant | PROFile
*RST: CONStant

Usage: Asynchronous command

Manual operation: See "[Amplitude profile](#)" on page 283

FRANalysis:FREQuency:START <StartFrequency>

Sets the start frequency of the sweep.

Parameters:

<StartFrequency> Range: 0.01 to 100000000
 Increment: 1
*RST: 100
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Start, Stop](#)" on page 282

FRANalysis:FREQuency:STOP <StopFrequency>

Sets the stop frequency of the sweep.

Parameters:

<StopFrequency> Range: 0.01 to 100000000
 Increment: 1
 *RST: 10000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Start, Stop](#)" on page 282

FRANalysis:GENErator:AMPLitude <GenAmplitude>

Sets a fixed amplitude for the frequency response analysis.

Parameters:

<GenAmplitude> Range: 0.01 to 12
 Increment: 0.1
 *RST: 1
 Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "[Amplitude](#)" on page 283

FRANalysis:GENErator:LOAD <GenLoad>

Selects the generator voltage display for 50Ω or high impedance load.

Parameters:

<GenLoad> FIFTy | HIZ
 HIZ: high input impedance
 *RST: FIFTy

Usage: Asynchronous command

Manual operation: See "[User load](#)" on page 283

FRANalysis:GENErator[:CHANnel] <GenCh>

Selects the built-in generator to start a frequency sweep for a defined frequency range.

Parameters:

<GenCh> GEN1 | GEN2
 *RST: GEN1

Usage: Asynchronous command

Manual operation: See "[Generator](#)" on page 282

FRANalysis:INPut[:SOURce] <InputChannel>

Sets the channel for the input signal of the DUT.

Parameters:

<InputChannel> C1 | C2 | C3 | C4
*RST: C1

Usage: Asynchronous command

Manual operation: See ["Input"](#) on page 282

FRANalysis:MEASurement:DELay:STATe <MeasDelay>

Enables the measurement delay. Set a measurement delay time with [FRANalysis:MEASurement:DELay\[:TIME\]](#).

Parameters:

<MeasDelay> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Measurement delay, Delay time"](#) on page 286

FRANalysis:MEASurement:DELay[:TIME] <MeasDelayTime>

Sets a time delay, that the system waits before measuring the next point of the plot. This is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present.

Available, if [FRANalysis:MEASurement:DELay:STATe](#) = ON.

Parameters:

<MeasDelayTime> Range: 0 to 10
Increment: 0.001
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See ["Measurement delay, Delay time"](#) on page 286

FRANalysis:MEASurement:POINt[:DISPlay] <Points>

Enables the display of the measurement points for the frequency response analysis.

Parameters:

<Points> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Display points"](#) on page 287

FRANalysis:MEASurement:RBW <RBW>

Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

Parameters:

<RBW> HIGH | MID | LOW
*RST: MID

Usage: Asynchronous command

Manual operation: See "[RBW](#)" on page 286

FRANalysis:OUTPut[:SOURce] <OutputChannel>

Sets the channel for the output signal of the DUT.

Parameters:

<OutputChannel> C1 | C2 | C3 | C4
*RST: C2

Usage: Asynchronous command

Manual operation: See "[Output](#)" on page 282

FRANalysis:POINts:LOGarithmic <PtsPerDecade>

Selects the number of points that are measured per decade, if [FRANalysis:POINts:MODE](#) is set to `DECade`.

Parameters:

<PtsPerDecade> Range: 10 to 500
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "[Points](#)" on page 283

FRANalysis:POINts:MODE <PointsMode>

Selects, if the number of points for the FRA are measured as total or per decade.

You can set the number of points with [FRANalysis:POINts:TOTal](#)/[FRANalysis:POINts:LOGarithmic](#).

Parameters:

<PointsMode> TOTal | DECade
*RST: DECade

Usage: Asynchronous command

Manual operation: See "[Points](#)" on page 283

FRANalysis:POINts:TOTal <TotalPoints>

Set the total number of points for the FRA analysis, if `FRANalysis:POINts:MODE` on page 736 is set to `TOTal`.

Parameters:

<TotalPoints> Range: 10 to 5000
 Increment: 1
 *RST: 100

Usage: Asynchronous command

Manual operation: See "[Points](#)" on page 283

FRANalysis:REPeat <Repeat>

Repeats the measurement, using the same parameters.

Parameters:

<Repeat> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Repeat](#)" on page 283

FRANalysis:RESet

Resets the frequency response analysis.

Usage: Setting only
 Asynchronous command

FRANalysis:PHASe:MAXimum <MaxPhase>

Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Parameters:

<MaxPhase> Range: 0 to 360
 Increment: 1
 *RST: 180
 Default unit: °

Usage: Asynchronous command

Manual operation: See "[Maximum phase](#)" on page 286

17.15.1.2 Frequency response analysis amplitude profile

| | |
|--|-----|
| FRANalysis:AMPLitude:PROFile:COUNT..... | 738 |
| FRANalysis:AMPLitude:PROFile:APOint..... | 738 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:REMOve..... | 738 |
| FRANalysis:AMPLitude:PROFile:SORT..... | 738 |
| FRANalysis:AMPLitude:PROFile:MODE..... | 739 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency..... | 739 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude..... | 739 |

FRANalysis:AMPLitude:PROFile:COUNT <Value>

Returns the number of defined points for the amplitude profile.

Parameters:

<Value>

Usage: Asynchronous command

Manual operation: See "[Step start freq, Amplitude](#)" on page 284

FRANalysis:AMPLitude:PROFile:APOint

Adds a new point to the amplitude profile.

Usage: Setting only
Asynchronous command

Manual operation: See "[Add](#)" on page 284

FRANalysis:AMPLitude:PROFile:POINt<m>:REMOve

Removes the selected amplitude point from the list.

Suffix:
<m> Index of the amplitude profile point

Usage: Setting only
Asynchronous command

Manual operation: See "[Delete](#)" on page 285

FRANalysis:AMPLitude:PROFile:SORT

Sorts the points in the amplitude table by frequency, starting with the lowest frequency.

Usage: Setting only
Asynchronous command

Manual operation: See "[Sort](#)" on page 285

FRANalysis:AMPLitude:PROFile:MODE <VoltageChange>

Selects if the voltage change is done as a single step or as a ramp.

Parameters:

<VoltageChange> SINGle | RAMP
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "[Voltage change](#)" on page 284

FRANalysis:AMPLitude:PROFile:POINT<m>:FREQuency <Frequency>

Sets the start frequency for the selected point.

Suffix:

<m> Index of the amplitude profile point

Parameters:

<Frequency> Range: 0.01 to 100E6
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Step start freq, Amplitude](#)" on page 284

FRANalysis:AMPLitude:PROFile:POINT<m>:AMPLitude <Amplitude>

Sets the amplitude for the selected point.

Suffix:

<m> Index of the amplitude profile point

Parameters:

<Amplitude> Range: 0 to 5.995
Increment: 0.1
*RST: 1
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "[Step start freq, Amplitude](#)" on page 284

17.15.1.3 Frequency response analysis calibration settings

| | |
|--|-----|
| FRANalysis:CALibration:CALibration | 740 |
| FRANalysis:CALibration:RESult? | 740 |
| FRANalysis:CALibration:STATe | 740 |

FRANalysis:CALibration:CALibration

Runs a calibration sequence.

Usage: Event

Manual operation: See "[Start calibration](#)" on page 291

FRANalysis:CALibration:RESult?

Returns the result of the calibration.

Return values:

<States> PASS | FAIL | RUN | NOAL
 PASS: the calibration is successful.
 FAIL: the calibration failed.
 RUN: a calibration cycle is running.
 NOAL: no active calibration.

*RST: NOAL

Usage: Query only

Manual operation: See "[Start calibration](#)" on page 291

FRANalysis:CALibration:STATe <UseCalibrationDat>

Sets the state of calibration.

Parameters:

<UseCalibrationDat> ON | OFF

*RST: OFF

Manual operation: See "[Use calibration data](#)" on page 291

17.15.1.4 Frequency response analysis diagram settings

| | |
|----------------------------------|-----|
| FRANalysis:PHASe:ENABLE..... | 741 |
| FRANalysis:PHASe:OFFSet..... | 741 |
| FRANalysis:PHASe:SCALe..... | 741 |
| FRANalysis:GAIN:ENABLE..... | 741 |
| FRANalysis:GAIN:OFFSet..... | 741 |
| FRANalysis:GAIN:SCALe..... | 742 |
| FRANalysis:AMPLitude:SCALe..... | 742 |
| FRANalysis:AMPLitude:ENABle..... | 742 |
| FRANalysis:AMPLitude:OFFSet..... | 742 |
| FRANalysis:PHASe:DATA?..... | 743 |
| FRANalysis:FREQuency:DATA?..... | 743 |
| FRANalysis:GAIN:DATA?..... | 743 |

FRANalysis:PHASe:ENABLE <State>

Enables the phase waveform for the frequency response analysis.

Parameters:

<State> ON | OFF
*RST: OFF

Usage: Asynchronous command

FRANalysis:PHASe:OFFSet <VerticalOffset>

Sets a vertical offset of the phase waveform.

Parameters:

<VerticalOffset> Range: -10000 to 10000
Increment: 1
*RST: 0
Default unit: °

Usage: Asynchronous command

FRANalysis:PHASe:SCALE <VerticalScale>

Sets the vertical scale for the phase waveform.

Parameters:

<VerticalScale> Range: 1 to 180
Increment: 1
*RST: 36
Default unit: °/div

Usage: Asynchronous command

FRANalysis:GAIN:ENABLE <State>

Enables the gain waveform for the frequency response analysis.

Parameters:

<State> ON | OFF
*RST: OFF

Usage: Asynchronous command

FRANalysis:GAIN:OFFSet <VerticalOffset>

Sets a vertical offset of the gain waveform.

Parameters:

<VerticalOffset> Range: -2000 to 2000
 Increment: 1
 *RST: 10
 Default unit: dB

Usage: Asynchronous command

FRANalysis:GAIN:SCALE <VerticalScale>

Sets the vertical scale for the gain waveform.

Parameters:

<VerticalScale> Range: 0.1 to 20
 Increment: 1
 *RST: 10
 Default unit: dB/div

Usage: Asynchronous command

FRANalysis:AMPLitude:SCALE <VerticalScale>

Sets the vertical scale for the amplitude waveform.

Parameters:

<VerticalScale> Range: 0.01 to 10
 Increment: 0.01
 *RST: 0.5
 Default unit: Vpp/div

Usage: Asynchronous command

FRANalysis:AMPLitude:ENABLE <State>

Enables the amplitude signal for the frequency response analysis. You can then define the amplitude profile of the signal.

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Amplitude profile](#)" on page 283

FRANalysis:AMPLitude:OFFSet <VerticalOffset>

Sets a vertical offset of the amplitude waveform.

Parameters:

<VerticalOffset> Range: -100 to 100
 Increment: 0.01
 *RST: 5
 Default unit: Vpp

Usage: Asynchronous command

FRANalysis:PHASe:DATA?

Returns the data of the phase as a list of comma-separated values in degree.

Example: FRAN:PHAS:DATA?
 Result:
 -0.07463742650985239,-0.09417628145200041,
 -0.1457021392091207,-0.1914790795969807,
 -0.2494368612845221,-0.3415108478964939,
 -0.4350150706042513,-0.5673151547214843,
 -0.7363486980048108,-0.9055923620805615,
 -1.0829557075417

Usage: Query only
 Asynchronous command

FRANalysis:FREQuency:DATA?

Returns the data of the frequency points for which gain and phase has been calculated as a list of comma-separated values in Hz.

Example: FRAN:FREQ:DATA?
 Result:
 -0.07463742650985239,-0.09417628145200041,
 -0.1457021392091207,-0.1914790795969807,
 -0.2494368612845221,-0.3415108478964939,
 -0.4350150706042513,-0.5673151547214843,
 -0.7363486980048108,-0.9055923620805615,
 -1.0829557075417

Usage: Query only
 Asynchronous command

FRANalysis:GAIN:DATA?

Returns the data of the gain as a list of comma-separated values in dB.

Example: FRAN:GAIN:DATA?
Result:
 0.4381956630254851,0.4593246383252179,
 0.461895233375762,0.4570717993766185,
 0.4623802509651942,0.4533450898899926,
 0.4408194360143725,0.4221600784741697,
 0.4483342212879299,0.4473558449908476,
 0.4915016244058707

Usage: Query only
 Asynchronous command

17.15.1.5 Frequency response analysis results

| | |
|---|-----|
| FRANalysis:RESult:STATe..... | 744 |
| FRANalysis:MARGin:STATe..... | 744 |
| FRANalysis:MARGin:GAIN:FREQuency?..... | 745 |
| FRANalysis:MARGin:GAIN:VALue?..... | 745 |
| FRANalysis:MARGin:PHASe:FREQuency?..... | 745 |
| FRANalysis:MARGin:PHASe:VALue?..... | 745 |
| FRANalysis:MARKer<m>:STATe..... | 745 |
| FRANalysis:MARKer<m>:FREQuency..... | 746 |
| FRANalysis:MARKer<m>:GAIN?..... | 746 |
| FRANalysis:MARKer<m>:PHASe?..... | 746 |
| FRANalysis:MARKer<m>:SSCRen..... | 746 |

FRANalysis:RESult:STATe <Table>

Enables the display of the result table for the FRA.

Parameters:

<Table> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Result table](#)" on page 287

FRANalysis:MARGin:STATe <Margins>

Enables the display of the margin table for the FRA.

Parameters:

<Margins> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Margin](#)" on page 287

FRANalysis:MARGin:GAIN:FREQuency?

Returns the frequency of the gain margin.

Return values:

<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:GAIN:VALue?

Returns the value of the gain margin.

Return values:

<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:FREQuency?

Returns the frequency of the phase margin.

Return values:

<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:VALue?

Returns the value of the phase margin.

Return values:

<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:STATe <Markers>

Enables the display of the marker table for the FRA.

Suffix:

<m> Irrelevant, omit the suffix.

Parameters:

<Markers> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Markers](#)" on page 287

FRANalysis:MARKer<m>:FREQuency <Frequency>

Returns the frequency for the specified marker.

Suffix:

<m> 1..2
Selects the marker number.

Parameters:

<Frequency> Range: 0.01 to 1000000000
Increment: 1E-05
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

FRANalysis:MARKer<m>:GAIN?

Returns the gain for the specified marker.

Suffix:

<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:PHASe?

Returns the phase value for the specified marker.

Suffix:

<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:SSCReen

Resets the marker to their initial positions. Reset is helpful if the markers have disappeared from the display or need to be moved for a larger distance.

Suffix:

<m> 1..2
Selects the marker number.

Usage: Setting only
Asynchronous command

17.15.1.6 Frequency response analysis export

| | |
|--------------------------------------|-----|
| EXPort:RESult:SElect:FRA:MARGin..... | 747 |
| EXPort:RESult:SElect:FRA:MARKer..... | 747 |
| EXPort:RESult:SElect:FRA:RESult..... | 747 |

EXPort:RESult:SElect:FRA:MARGin <MarginResult>

If enabled, includes the margin results in the results export file of the FRA.

Parameters:

<MarginResult> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 292

EXPort:RESult:SElect:FRA:MARKer <MarkerResult>

If enabled, includes the marker results in the results export file of the FRA.

Parameters:

<MarkerResult> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 292

EXPort:RESult:SElect:FRA:RESult <Result>

If enabled, includes the frequency response analysis results, including the frequency, gain, phase and amplitude, in the results export file of the FRA.

Parameters:

<Result> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 292

17.15.2 Power analysis (option R&S MXO4-K31)

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-sdpi, chapter "Command sequence and synchronization"

Overview of statistic commands

The remote commands for the power analysis measurements can include statistic results. In the following the abbreviations after the commands have the following meaning:

| Command | Description |
|-----------------------------------|--|
| POWer<m>:xxx:RESult:nnn[:ACTual]? | Current measurement result |
| POWer<m>:xxx:RESult:nnn:AVERage? | Average of the measurement results |
| POWer<m>:xxx:RESult:nnn:RMS? | RMS value of the measurement results |
| POWer<m>:xxx:RESult:nnn:PPEak? | Positive peak value of the measurement results |
| POWer<m>:xxx:RESult:nnn:NPEak? | Negative peak value of the measurement results |
| POWer<m>:xxx:RESult:xxx:STDDev? | Standard deviation of the measurement results |

- [General settings](#)..... 748
- [Power quality](#)..... 749
- [Power harmonics](#)..... 757
- [Reference level](#)..... 767
- [Power analysis data](#)..... 771

17.15.2.1 General settings

| | |
|---|-----|
| POWer<m>[:ENABLE] | 748 |
| POWer<m>:TYPE | 748 |
| POWer<m>:ASKew[:EXECute] | 749 |
| EXPort:RESult:SElect:POWer<m> | 749 |

POWer<m>[:ENABLE] <State>

Enables the power measurement instance.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<State> ON | OFF

Usage:

Asynchronous command

Manual operation: See "[Add](#)" on page 295

POWer<m>:TYPE <Type>

Sets the type for the respective power analysis measurement.

| | |
|--------------------------|---|
| Suffix: | |
| <m> | 1...3, index of the power analysis measurement |
| Parameters: | |
| <Type> | QUALity HARMonics |
| Example: | POW1:TYPE QUAL
Sets the 1st power analysis measurement to quality. |
| Usage: | Asynchronous command |
| Manual operation: | See "Add" on page 295 |

POWER<m>:ASKew[:EXECute]

Performs auto deskew adjustment.

| | |
|--------------------------|---|
| Suffix: | |
| <m> | Irrelevant, omit the suffix. |
| Usage: | Event
Asynchronous command |
| Manual operation: | See "Auto Deskew" on page 314 |

EXPort:RESult:SElect:POWER<m> <ExportResults>

If enabled, includes the results of selected power analysis measurement in the results export file.

| | |
|--------------------|--|
| Suffix: | |
| <m> | 1...3, index of the power analysis measurement |
| Parameters: | |
| <ExportResults> | ON OFF
*RST: OFF |
| Usage: | Asynchronous command |

17.15.2.2 Power quality**Power quality setup**

| | |
|--|-----|
| POWER<m>:QUALity:SOURce:CURRent | 749 |
| POWER<m>:QUALity:SOURce[:VOLTage] | 750 |
| POWER<m>:QUALity:FREQUENCY[:VALue] | 750 |
| POWER<m>:QUALity:FREQUENCY:USER | 750 |

POWER<m>:QUALity:SOURce:CURRent <CurrentSource>

Sets the channel for the current source input of the power quality analysis.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <CurrentSource> C1 | C2 | C3 | C4

Usage: Asynchronous command

Manual operation: See "[Current](#)" on page 299

POWER<m>:QUALity:SOURce[:VOLTage] <VoltageSource>

Sets the channel for the voltage source input of the power quality analysis.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <VoltageSource> C1 | C2 | C3 | C4

Usage: Asynchronous command

Manual operation: See "[Voltage](#)" on page 298

POWER<m>:QUALity:FREQuency[:VALue] <FundamFreq>

Sets the input frequency of the source signal in Hz.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <FundamFreq> F50 | F60 | F400 | USER | AUTO
 *RST: F50

Usage: Asynchronous command

Manual operation: See "[Fund. Freq](#)" on page 299

POWER<m>:QUALity:FREQuency:USER <FundamentalFreq>

Sets the user-defined frequency, if `POWER<m>:QUALity:FREQuency[:VALue]` on page 750 is set to `USER`.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <FundamentalFreq> Range: 10 to 1000000
 Increment: 1
 *RST: 50
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Fund. Freq](#)" on page 299

Power quality results

| | |
|---|-----|
| POWER<m>:QUALity:RESult:CURRent:CREStfactor[:ACTual]? | 752 |
| POWER<m>:QUALity:RESult:CURRent:CREStfactor:AVERAge? | 752 |
| POWER<m>:QUALity:RESult:CURRent:CREStfactor:NPEak? | 752 |
| POWER<m>:QUALity:RESult:CURRent:CREStfactor:PPEak? | 752 |
| POWER<m>:QUALity:RESult:CURRent:CREStfactor:RMS? | 752 |
| POWER<m>:QUALity:RESult:CURRent:CREStfactor:STDDev? | 752 |
| POWER<m>:QUALity:RESult:CURRent:PEAK[:ACTual]? | 752 |
| POWER<m>:QUALity:RESult:CURRent:PEAK:AVERAge? | 752 |
| POWER<m>:QUALity:RESult:CURRent:PEAK:NPEak? | 752 |
| POWER<m>:QUALity:RESult:CURRent:PEAK:PPEak? | 753 |
| POWER<m>:QUALity:RESult:CURRent:PEAK:RMS? | 753 |
| POWER<m>:QUALity:RESult:CURRent:PEAK:STDDev? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS[:ACTual]? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS:AVERAge? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS:NPEak? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS:PPEak? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS:RMS? | 753 |
| POWER<m>:QUALity:RESult:CURRent:RMS:STDDev? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent[:ACTual]? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent:AVERAge? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent:NPEak? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent:PPEak? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent:RMS? | 753 |
| POWER<m>:QUALity:RESult:POWer:APParent:STDDev? | 753 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR[:ACTual]? | 754 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR:AVERAge? | 754 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR:NPEak? | 754 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR:PPEak? | 754 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR:RMS? | 754 |
| POWER<m>:QUALity:RESult:POWer:PFACTOR:STDDev? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe[:ACTual]? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe:AVERAge? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe:NPEak? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe:PPEak? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe:RMS? | 754 |
| POWER<m>:QUALity:RESult:POWer:PHASe:STDDev? | 754 |
| POWER<m>:QUALity:RESult:POWer:REACTive[:ACTual]? | 755 |
| POWER<m>:QUALity:RESult:POWer:REACTive:AVERAge? | 755 |
| POWER<m>:QUALity:RESult:POWer:REACTive:NPEak? | 755 |
| POWER<m>:QUALity:RESult:POWer:REACTive:PPEak? | 755 |
| POWER<m>:QUALity:RESult:POWer:REACTive:RMS? | 755 |
| POWER<m>:QUALity:RESult:POWer:REACTive:STDDev? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower[:ACTual]? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower:AVERAge? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower:NPEak? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower:PPEak? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower:RMS? | 755 |
| POWER<m>:QUALity:RESult:POWer:REALpower:STDDev? | 755 |

| | |
|---|-----|
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor[:ACTual]? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor:AVERAge? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor:NPEak? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor:PPEak? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor:RMS? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:CREStfactor:STDDev? | 755 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERAge? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERAge? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev? | 756 |
| POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]? | 757 |
| POWer<m>:QUALity:RESult:VOLTage:RMS:AVERAge? | 757 |
| POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak? | 757 |
| POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak? | 757 |
| POWer<m>:QUALity:RESult:VOLTage:RMS:RMS? | 757 |
| POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev? | 757 |

POWer<m>:QUALity:RESult:CURRent:CREStfactor[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:AVERAge?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:NPEak?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:PPEak?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:RMS?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:STDDev?

Returns the current crest factor, the *Peak value / RMS value* for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERAge?
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak?

POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak?
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS?
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev?

Returns the current peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:RMS:AVERAge?
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:RMS?
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev?

Returns the root mean square of the current for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]?
POWer<m>:QUALity:RESult:POWer:APParent:AVERAge?
POWer<m>:QUALity:RESult:POWer:APParent:NPEak?
POWer<m>:QUALity:RESult:POWer:APParent:PPEak?
POWer<m>:QUALity:RESult:POWer:APParent:RMS?
POWer<m>:QUALity:RESult:POWer:APParent:STDDev?

Returns the apparent power for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWER<m>:QUALity:RESult:POWER:PFACtor[:ACTual]?
POWER<m>:QUALity:RESult:POWER:PFACtor:AVERAge?
POWER<m>:QUALity:RESult:POWER:PFACtor:NPEak?
POWER<m>:QUALity:RESult:POWER:PFACtor:PPEak?
POWER<m>:QUALity:RESult:POWER:PFACtor:RMS?
POWER<m>:QUALity:RESult:POWER:PFACtor:STDDev?

Returns the power factor for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWER<m>:QUALity:RESult:POWER:PHASe[:ACTual]?
POWER<m>:QUALity:RESult:POWER:PHASe:AVERAge?
POWER<m>:QUALity:RESult:POWER:PHASe:NPEak?
POWER<m>:QUALity:RESult:POWER:PHASe:PPEak?
POWER<m>:QUALity:RESult:POWER:PHASe:RMS?
POWER<m>:QUALity:RESult:POWER:PHASe:STDDev?

Returns the phase for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWer<m>:QUALity:RESult:POWer:REACTive[:ACTual]?
POWer<m>:QUALity:RESult:POWer:REACTive:AVERAge?
POWer<m>:QUALity:RESult:POWer:REACTive:NPEak?
POWer<m>:QUALity:RESult:POWer:REACTive:PPEak?
POWer<m>:QUALity:RESult:POWer:REACTive:RMS?
POWer<m>:QUALity:RESult:POWer:REACTive:STDDev?

Returns the reactive power for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWer<m>:QUALity:RESult:POWer:REALpower[:ACTual]?
POWer<m>:QUALity:RESult:POWer:REALpower:AVERAge?
POWer<m>:QUALity:RESult:POWer:REALpower:NPEak?
POWer<m>:QUALity:RESult:POWer:REALpower:PPEak?
POWer<m>:QUALity:RESult:POWer:REALpower:RMS?
POWer<m>:QUALity:RESult:POWer:REALpower:STDDev?

Returns the active power for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage:

Query only
 Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:CREStfactor[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:AVERAge?
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:NPEak?
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:PPEak?
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:RMS?
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:STDDev?

Returns the voltage crest factor, the *Peak value* / *RMS value* for the power quality analysis.

For details on the statistics, see ["Overview of statistic commands"](#) on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:FREQUency[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:FREQUency:AVERage?
POWer<m>:QUALity:RESult:VOLTage:FREQUency:NPEak?
POWer<m>:QUALity:RESult:VOLTage:FREQUency:PPEak?
POWer<m>:QUALity:RESult:VOLTage:FREQUency:RMS?
POWer<m>:QUALity:RESult:VOLTage:FREQUency:STDDev?

Returns the voltage frequency value for the power quality analysis.

For details on the statistics, see ["Overview of statistic commands"](#) on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage?
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS?
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev?

Returns the voltage peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see ["Overview of statistic commands"](#) on page 748.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWER<m>:QUALity:RESult:VOLTage:RMS[:ACTual]?
POWER<m>:QUALity:RESult:VOLTage:RMS:AVERage?
POWER<m>:QUALity:RESult:VOLTage:RMS:NPEak?
POWER<m>:QUALity:RESult:VOLTage:RMS:PPEak?
POWER<m>:QUALity:RESult:VOLTage:RMS:RMS?
POWER<m>:QUALity:RESult:VOLTage:RMS:STDDev?

Returns the root mean square of the voltage for the power quality analysis.

For details on the statistics, see "[Overview of statistic commands](#)" on page 748.

Suffix:
 <m> 1...3, index of the power analysis measurement

Return values:
 <StdDev> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0

Usage: Query only
Asynchronous command

17.15.2.3 Power harmonics

Power harmonics setup

| | |
|--|-----|
| POWER<m>:HARMonics:SOURce:CURRent..... | 757 |
| POWER<m>:HARMonics:SOURce[:VOLTage]..... | 758 |
| POWER<m>:HARMonics:STANdard..... | 758 |
| POWER<m>:HARMonics:REVisIon..... | 758 |
| POWER<m>:HARMonics:FREQuency:EN..... | 759 |
| POWER<m>:HARMonics:FREQuency:MIL..... | 759 |
| POWER<m>:HARMonics:FREQuency:RTCA..... | 759 |
| POWER<m>:HARMonics:STATistics:RESet..... | 760 |
| POWER<m>:HARMonics:DISPlay:HARMonics..... | 760 |
| POWER<m>:HARMonics:DISPlay:FREQuency:STARt..... | 760 |
| POWER<m>:HARMonics:DISPlay:FREQuency:STOP..... | 761 |
| POWER<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALE:TYPE..... | 761 |
| POWER<m>:HARMonics:RPOWER[:MODE]..... | 761 |
| POWER<m>:HARMonics:RPOWER:USER..... | 762 |
| POWER<m>:HARMonics:PFACTOR:USER..... | 762 |
| POWER<m>:HARMonics:PFACTOR[:MODE]..... | 762 |

POWER<m>:HARMonics:SOURce:CURRent <CurrentSource>

Sets the channel for the current source input of the power harmonics analysis.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <CurrentSource> C1 | C2 | C3 | C4

Usage: Asynchronous command

Manual operation: See "[Current](#)" on page 307

POWer<m>:HARMonics:SOURce[:VOLTage] <VoltageSource>

Sets the channel for the voltage source input of the power harmonics analysis.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <VoltageSource> C1 | C2 | C3 | C4

Usage: Asynchronous command

Manual operation: See "[Voltage](#)" on page 307

POWer<m>:HARMonics:STANdard <Standard>

Sets a standard for the current harmonic measurement.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:
 <Standard> ENA | ENB | ENC | END | MIL | RTCA
 ENA: EN 61000-3-2 Class A
 ENB: EN 61000-3-2 Class B
 ENC: EN 61000-3-2 Class C
 END: EN 61000-3-2 Class D
 MIL: MIL-STD-1399
 RTCA: RTCA DO-160
 *RST: ENA

Usage: Asynchronous command

Manual operation: See "[Standard](#)" on page 308

POWer<m>:HARMonics:REVision <Revision>

Selects the revision of the EN61000 standard, if [POWer<m>:HARMonics:STANdard](#) is set to ENA / ENB / ENC / END.

Suffix:
 <m> 1...3, index of the power analysis measurement

Parameters:

<Revision> REV2011 | REV2019
 *RST: REV2019

Usage: Asynchronous command

Manual operation: See "[Standard](#)" on page 308

POWer<m>:HARMonics:FREQuency:EN <FundFreqEN61000>

Sets the fundamental frequency of the input signal for the EN61000 standard, if [POWer<m>:HARMonics:STANdard](#) is set to ENA / ENB / ENC / END.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<FundFreqEN61000> F50 | F60 | AUTO
 F50: 50 Hz
 F60: 60 Hz
 AUTO: automatically set
 *RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Fund. Freq](#)" on page 307

POWer<m>:HARMonics:FREQuency:MIL <FundFreqMIL>

Sets the fundamental frequency of the input signal for the MIL standard, if [POWer<m>:HARMonics:STANdard](#) is set to MIL.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<FundFreqMIL> F60 | F400
 F60: 60 Hz
 F400: 400 Hz
 *RST: F60

Usage: Asynchronous command

Manual operation: See "[Fund. Freq](#)" on page 307

POWer<m>:HARMonics:FREQuency:RTCA <FundamFreqRTCA>

Sets the fundamental frequency of the input signal for the RTCA standard, if [POWer<m>:HARMonics:STANdard](#) is set to RTCA.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<FundFreqRTCA> F400 | NVF | WVF
 F400: 400 Hz
 NVF
 WVF
 *RST: F400

Usage: Asynchronous command

Manual operation: See "[Fund. Freq](#)" on page 307

POWER<m>:HARMonics:STATistics:RESet

Resets the statistics for the power harmonics analysis.

Suffix:

<m> 1...3, index of the power analysis measurement

Usage:

Setting only
 Asynchronous command

Manual operation: See "[Clear Results](#)" on page 309

POWER<m>:HARMonics:DISPlay:HARMonics <DispedHarmonics>

Selects which harmonics are displayed in the bargraph: all, odd even or depending on the standard definition.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<DispedHarmonics> ALL | EVEN | ODD | STANdard
 *RST: STANdard

Usage: Asynchronous command

Manual operation: See "[Displ. Harm.](#)" on page 308

POWER<m>:HARMonics:DISPlay:FREQUency:STARt <Frequency>

Sets the start frequency of bar graph display. At least three bars are displayed.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<Frequency> Range: 0 to 100000000
 Increment: 1
 *RST: 50
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See ["Min X Frequency"](#) on page 311

POWer<m>:HARMonics:DISPlay:FREQuency:STOP <Frequency>

Sets the stop frequency of the bar graph display. The maximum value is defined by standard and fundamental frequency.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<Frequency> Range: 0 to 100000000
 Increment: 1
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See ["Max X Frequency"](#) on page 311

POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALE:TYPE <Scaling>

Selects a logarithmic or linear scale for the display for the harmonics bargraph.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<Scaling> LIN | LOG
 *RST: LIN

Usage: Asynchronous command

Manual operation: See ["Scale bar graph"](#) on page 308

POWer<m>:HARMonics:RPOWer[:MODE] <ActPowMd>

Available if `POWer<m>:HARMonics:STANdard` is set to END.

Selects if the power factor is defined automatically, or a user-defined value is used (`POWer<m>:HARMonics:RPOWer:USER`).

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<ActPowMd> AUTO | USER
 *RST: AUTO

Usage: Asynchronous command

Manual operation: See ["Real power, Power"](#) on page 309

POWer<m>:HARMonics:RPOWer:USER <UsrActPow>

Selects the revision of the EN61000 standard, if `POWer<m>:HARMonics:STANdard` is set to `END` and `POWer<m>:HARMonics:RPOWer:USER` is set to `USER`.

Sets a user-defined power value.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<UsrActPow> Range: 0 to 10000
Increment: 1
*RST: 100
Default unit: W

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 309

POWer<m>:HARMonics:PFACTOR:USER <UsrPowFact>

Available if `POWer<m>:HARMonics:STANdard` is set to `ENC` and `POWer<m>:HARMonics:PFACTOR[:MODE]` is set to `USER`.

Sets a user-defined power factor.

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<UsrPowFact> Range: 0 to 100
Increment: 1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Power factor" on page 308

POWer<m>:HARMonics:PFACTOR[:MODE] <PowFactMd>

Available if `POWer<m>:HARMonics:STANdard` is set to `ENC`.

Selects if the power factor is defined automatically, or a user-defined value is used (`POWer<m>:HARMonics:PFACTOR:USER`).

Suffix:

<m> 1...3, index of the power analysis measurement

Parameters:

<PowFactMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Power factor" on page 308

Power harmonics results

POWER<m>:HARMonics:AVAIlable?

Returns the number of measured harmonics.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<Count>

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:MEASurement:THDFundament[:ACTual]?

Returns the total harmonic distortion relative to fundamental (THDF).

Suffix:

<m> 1...3, index of the power analysis measurement

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:MEASurement:THDRms[:ACTual]?

Returns the total harmonic distortion relative to the RMS amplitude (THD RMS).

Suffix:

<m> 1...3, index of the power analysis measurement

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:RESult<n>:VIOLation?

Queries if the value of n-th harmonic is within the defined limit for the current measurement.

Suffix:

<m> 1...3, index of the power analysis measurement

<n>

1...n, index of the harmonics

Return values:

<Harmonic>

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:RESult<n>[:FREQuency]?

Returns the frequency of the n-th harmonic.

Suffix:

<m> 1...3, index of the power analysis measurement
<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:MEASurement:FREQuency[:ACTual]?

Returns the frequency of measured harmonics.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:MEASurement:REALpower[:ACTual]?

Returns the real power. Only available, if `POWER<m>:HARMonics:STANdard` on page 758 is set to `ENC / END`.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWER<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?

Returns the maximum magnitude of the n-th harmonic in percent.

Suffix:

<m> 1...3, index of the power analysis measurement
<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:Query only
Asynchronous command**POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?**

Returns the minimum magnitude of the n-th harmonic in percent.

Suffix:

<m> 1...3, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:Query only
Asynchronous command**POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?**

Returns the magnitude of the n-th harmonic in percent.

Suffix:

<m> 1...3, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:Query only
Asynchronous command**POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?**

Returns the maximum magnitude of the n-th harmonic in RMS.

Suffix:

<m> 1...3, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:Query only
Asynchronous command**POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?**

Returns the minimum magnitude of the n-th harmonic in RMS.

Suffix:

<m> 1...3, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:

Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?

Returns the magnitude of the n-th harmonic in RMS.

Suffix:

<m> 1...3, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:

<Harmonic>

Usage:

Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]?

Returns the frequency of measured harmonics.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage:

Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:REALpower[:ACTual]?

Returns the real power. Only available, if `POWer<m>:HARMonics:STANdard` on page 758 is set to `ENC / END`.

Suffix:

<m> 1...3, index of the power analysis measurement

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

17.15.2.4 Reference level

| | |
|--|-----|
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis..... | 767 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis..... | 767 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel..... | 767 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel..... | 767 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel..... | 768 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel..... | 768 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel..... | 768 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel..... | 768 |
| POWer<m>:HARMonics:REFLevel<rl>:LMODE..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:LMODE..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDLE..... | 770 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDLE..... | 770 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE..... | 770 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:MODE..... | 770 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer..... | 771 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer..... | 771 |

POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m> 1...3, index of the power analysis measurement
 <rl> 1...4, index of the reference level set

Parameters:

<HystAbs> Range: 0 to 1E+26
 Increment: 0.001
 *RST: 0.005
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Hysteresis](#)" on page 313

POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<LowerLevel> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 312

POWER<m>:HARMonics:REFLevel<rl>:ABSolute:MLeVel <MiddleLevel>

POWER<m>:QUALity:REFLevel<rl>:ABSolute:MLeVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<MiddleLevel> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 312

POWER<m>:HARMonics:REFLevel<rl>:ABSolute:ULeVel <UpperLevel>

POWER<m>:QUALity:REFLevel<rl>:ABSolute:ULeVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<UpperLevel> Range: -1E+26 to 1E+26
 Increment: 0.001
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 312

POWer<m>:HARMonics:REFLevel<rl>:LMODe <LevelMode>

POWer<m>:QUALity:REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<LevelMode> ABS | REL

*RST: REL

Usage: Asynchronous command

Manual operation: See "[Level mode](#)" on page 312

POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis <HystRel>

POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<HystRel> Range: 0 to 50

Increment: 1

*RST: 10

Default unit: %

Usage: Asynchronous command

Manual operation: See "[Hysteresis](#)" on page 313

POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if [POWer<m>:QUALity:REFLevel<rl>:RELative:MODE](#) is set to `USER`.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<LowRefLevRel> Range: -100 to 200

Increment: 1

*RST: 10

Default unit: %

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 313

POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDLE <MidRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDLE <MidRefLevRel>

Sets the middle relative reference level if [POWer<m>:QUALity:REFLevel<rl>:RELative:MODE](#) is set to `USER`.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<MidRefLevRel> Range: -100 to 200
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Upper level, Middle level, Lower level](#)" on page 313

POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<RelativeLevels> FIVE | TEN | TWENTy | USER

FIVE

5/50/95

TEN

10/50/90

TWENTy

20/50/80

USER

Set the reference levels to individual values with [POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer](#), [POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDLE](#), and [POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer](#).

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 312

POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` on page 770 is set to `USER`.

Suffix:

<m> 1...3, index of the power analysis measurement

<rl> 1...4, index of the reference level set

Parameters:

<UppRefLevRel> Range: -100 to 200
 Increment: 1
 *RST: 90
 Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 313

17.15.2.5 Power analysis data

This chapter describes the commands for exporting and loading power analysis measurement data.

| | |
|--|-----|
| <code>POWer<m>:HARMonics:POWer:DATA:HEADer?</code> | 771 |
| <code>POWer<m>:QUALity:POWer:DATA:HEADer?</code> | 771 |
| <code>POWer<m>:HARMonics:POWer:DATA[:VALues]?</code> | 772 |
| <code>POWer<m>:QUALity:POWer:DATA[:VALues]?</code> | 772 |

POWer<m>:HARMonics:POWer:DATA:HEADer?

Only available, if `POWer<m>:HARMonics:STANdard` is set to `ENC / END`.

Returns the header of the power analysis waveform data. The header contains attributes of the waveform.

Suffix:

<m> 1...3, index of the power analysis measurement

Usage: Query only
 Asynchronous command

POWer<m>:QUALity:POWer:DATA:HEADer?

Only available, if `POWer<m>:HARMonics:STANdard` is set to `ENC / END`.

Returns the header of the power analysis waveform data. The header contains attributes of the waveform.

Suffix:
 <m> 1...3, index of the power analysis measurement

Usage:
 Query only
 Asynchronous command

POWER<m>:HARMONics:POWER:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Suffix:
 <m> 1...3, index of the power analysis measurement

Setting parameters:

<Offset> Number of offset waveform points to be skipped.
 <Length> Number of waveform points to be retrieved.

Return values:

<Data> List of values according to the format and content settings.

Usage:
 Query only
 Asynchronous command

POWER<m>:QUALity:POWER:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use [FORMat \[:DATA\]](#).

Suffix:
 <m> 1...3, index of the power analysis measurement

Setting parameters:

<Offset> Number of offset waveform points to be skipped.
 <Length> Number of waveform points to be retrieved.

Return values:

<Data> List of values according to the format and content settings.

Usage:
 Query only
 Asynchronous command

17.15.3 Digital voltmeter

This chapter describes the commands for setting up and querying the results of the digital voltmeter.

| | |
|--------------------------------|-----|
| METer:DVMeter<m>:ENABLE? | 773 |
| METer:BANDwidth | 773 |
| METer:DVMeter<m>:ACRMs:ENABLE | 773 |
| METer:DVMeter<m>:ACRMs:RESult? | 774 |
| METer:DVMeter<m>:DC:ENABLE | 774 |
| METer:DVMeter<m>:DC:RESult? | 774 |
| METer:DVMeter<m>:DCRMs:ENABLE | 775 |
| METer:DVMeter<m>:DCRMs:RESult? | 775 |

METer:DVMeter<m>:ENABLE?

Queries the state of the voltmeter for the respective channel.

Suffix:

<m> 1 to 4, index of the analog channel

Return values:

<State> ON | OFF
*RST: OFF

Usage:

Query only
Asynchronous command

METer:BANDwidth <Bandwidth>

Sets the filter bandwidth.

Parameters:

<Bandwidth> B20M | B10M | B5M | B2M | B1M | B500 | B200
B20M: 20 MHz
B10M: 10 MHz
B5M: 5 MHz
B2M: 2 MHz
B1M: 1 MHz
B500: 500 kHz
B200: 200 kHz
*RST: B20M

Usage:

Asynchronous command

Manual operation: See "[Filter bandwidth](#)" on page 317

METer:DVMeter<m>:ACRMs:ENABLE <ACRMSResults_St>

Enables the AC RMS voltmeter measurement for the respective channel.

Suffix:
 <m> 1 to 4, index of the analog channel

Parameters:
 <ACRMSResults_St> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

METer:DVMeter<m>:ACRMs:RESult?

Returns the result of the AC RMS voltmeter measurement.

Suffix:
 <m> 1 to 4, index of the analog channel

Return values:
 <Results_ACRMS> Range: -1E+26 to 1E+26
 Increment: 0.1
 *RST: 0
 Default unit: V

Usage: Query only
 Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

METer:DVMeter<m>:DC:ENABLE <DCResults_St>

Enables the DC voltmeter measurement for the respective channel.

Suffix:
 <m> 1 to 4, index of the analog channel

Parameters:
 <DCResults_St> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

METer:DVMeter<m>:DC:RESult?

Returns the result of the DC voltmeter measurement.

Suffix:
 <m> 1 to 4, index of the analog channel

Return values:

<Results_DC> Range: -1E+26 to 1E+26
 Increment: 0.1
 *RST: 0
 Default unit: V

Usage:

Query only
 Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

METer:DVMeter<m>:DCRMs:ENABLE <DCRMSResults_St>

Enables the DC RMS voltmeter measurement for the respective channel.

Suffix:

<m> 1 to 4, index of the analog channel

Parameters:

<DCRMSResults_St> ON | OFF
 *RST: OFF

Usage:

Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

METer:DVMeter<m>:DCRMs:RESult?

Returns the result of the DC RMS voltmeter measurement.

Suffix:

<m> 1 to 4, index of the analog channel

Return values:

<Results_DCRMS> Range: -1E+26 to 1E+26
 Increment: 0.1
 *RST: 0
 Default unit: V

Usage:

Query only
 Asynchronous command

Manual operation: See "[Measurements](#)" on page 318

17.16 Protocols

- [Configuration settings for all serial protocols](#)..... 776
- [SPI \(option R&S MXO4-K510\)](#)..... 780
- [Quad SPI \(option R&S MXO4-K510\)](#)..... 799
- [I²C \(option R&S MXO4-K510\)](#)..... 819
- [UART / RS-232 \(option R&S MXO4-K510\)](#)..... 839
- [CAN \(option R&S MXO4-K520\)](#)..... 855

| | |
|--|-----|
| • LIN (option R&S MXO4-K520)..... | 888 |
| • SPMI (option R&S MXO4-K550)..... | 905 |
| • 10BASE-T1S (option R&S MXO4-K560)..... | 920 |
| • ARINC 429 (option R&S MXO4-K530)..... | 936 |

17.16.1 Configuration settings for all serial protocols

17.16.1.1 General settings

| | |
|---------------------------|-----|
| SBUS<sb>[:STATe]..... | 776 |
| SBUS<sb>:TYPE..... | 776 |
| SBUS<sb>:RESult..... | 777 |
| SBUS<sb>:FORMat..... | 777 |
| SBUS<m>:ZCOupling..... | 777 |
| SBUS<m>:THReshold..... | 778 |
| SBUS<m>:SETReflevels..... | 778 |

SBUS<sb>[:STATe] <ProtocolState>

Enables the decoding of the specified bus.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ProtocolState> ON | OFF

Usage:

Asynchronous command

SBUS<sb>:TYPE <Protocol Type>

Selects the bus type for analysis. The type of available buses depends on the installed options.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Protocol Type> I2C | SPI | QSPI | UART | CAN | LIN | SPMI | TNOS | ARIN429 | ARINc429

I2C : I²C protocol, see [Chapter 17.16.4, "I²C \(option R&S MXO4-K510\)"](#), on page 819

SPI: SPI protocol, see [Chapter 17.16.2, "SPI \(option R&S MXO4-K510\)"](#), on page 780

QSPI: Quad SPI protocol, see [Chapter 17.16.3, "Quad SPI \(option R&S MXO4-K510\)"](#), on page 799

UART: UART protocol, see [Chapter 17.16.5, "UART / RS-232 \(option R&S MXO4-K510\)"](#), on page 839

CAN: CAN protocol, see [Chapter 17.16.6, "CAN \(option R&S MXO4-K520\)"](#), on page 855

LIN: LIN protocol, see [Chapter 17.16.7, "LIN \(option R&S MXO4-K520\)"](#), on page 888

TNOS: Ethernet 10Base-T1S protocol, see [Chapter 17.16.9, "10BASE-T1S \(option R&S MXO4-K560\)"](#), on page 920

ARIN429 = ARINC429: ARINC 429 protocol, see [Chapter 17.16.10, "ARINC 429 \(option R&S MXO4-K530\)"](#), on page 936

Usage: Asynchronous command

Manual operation: See ["Protocol type"](#) on page 342

SBUS<sb>:RESult <ShwResTbl>

Enables a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ShwResTbl> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Show decode table"](#) on page 344

SBUS<sb>:FORMat <DataFormat>

Sets the number format for decoded data values of the indicated serial bus. It defines the format in the decode table, and in the combs of the decoded signal on the screen.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
*RST: HEX

Usage: Asynchronous command

Manual operation: See ["Data format"](#) on page 344

SBUS<m>:ZCOupling <ZoomCoupling>

If enabled, the protocol decode zoom and result table are synchronized.

Suffix:

<m> 1...4, index of the serial bus

Parameters:

<ZoomCoupling> ON | OFF
 *RST: OFF

Manual operation: See "[Zoom coupling](#)" on page 345

SBUS<m>:THReshold <ShwThresLines>

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also [Show threshold lines](#).

Suffix:

<m> 1..4

Parameters:

<ShwThresLines> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Show threshold lines](#)" on page 342

SBUS<m>:SETReflevels

Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Suffix:

<m> 1..4

Usage:

Event
 Asynchronous command

17.16.1.2 Export results settings

| | |
|--|-----|
| SBUS<sb>:EXPResult:DETail | 778 |
| SBUS<sb>:EXPResult:SAVE | 779 |
| SBUS<sb>:EXPResult:TIME | 779 |
| SBUS<sb>:EXPResult:EXTension | 779 |
| SBUS<sb>:EXPResult:PATH | 780 |

SBUS<sb>:EXPResult:DETail <IncludeDetails>

If enabled, includes the detailed results for all frames in the export result file.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<IncludeDetails> ON | OFF
 *RST: ON

Usage: Asynchronous command
Manual operation: See ["Include details"](#) on page 347

SBUS<sb>:EXPResult:SAVE <FileName>

Saves the selected results to the indicated file.

Suffix:
 <sb> 1...4, index of the serial bus

Setting parameters:
 <FileName>

Example: SBUS1:EXPResult:SAVE
 '/home/storage/userData/export_10base-t1s.csv'

Usage: Setting only
 Asynchronous command

Manual operation: See ["Save as"](#) on page 347

SBUS<sb>:EXPResult:TIME <IncludeTiming>

If enabled, includes the frame timing in the export result file.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <IncludeTiming> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Include timing"](#) on page 347

SBUS<sb>:EXPResult:EXTension <FileType>

Selects the file format.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <FileType> HTML | CSV | XML | PY
 PY: Python
 *RST: HTML

Usage: Asynchronous command

Manual operation: See ["File type"](#) on page 347

SBUS<sb>:EXPResult:PATH <Path>

Sets the path where the protocol export files are stored. On the instrument, the default path is `/home/storage/userData/Protocol`. You can create subfolders in this folder.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Path> String parameter

Usage:

Asynchronous command

Manual operation: See "Save as" on page 347

17.16.2 SPI (option R&S MXO4-K510)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|-----------------------|-----|
| • Configuration..... | 780 |
| • Filter..... | 787 |
| • Trigger..... | 792 |
| • Decode results..... | 794 |

17.16.2.1 Configuration

| | |
|--------------------------------------|-----|
| SBUS<sb>:SPI:BORDer..... | 781 |
| SBUS<sb>:SPI:CSElect:HYSteresis..... | 781 |
| SBUS<sb>:SPI:CSElect:POLarity..... | 781 |
| SBUS<sb>:SPI:CSElect:SOURce..... | 781 |
| SBUS<sb>:SPI:CSElect:THReshold..... | 782 |
| SBUS<sb>:SPI:MISO:HYSteresis..... | 782 |
| SBUS<sb>:SPI:MISO:POLarity..... | 782 |
| SBUS<sb>:SPI:MISO:SOURce..... | 783 |
| SBUS<sb>:SPI:MISO:THReshold..... | 783 |
| SBUS<sb>:SPI:MOSI:HYSteresis..... | 783 |
| SBUS<sb>:SPI:MOSI:POLarity..... | 783 |
| SBUS<sb>:SPI:MOSI:SOURce..... | 784 |
| SBUS<sb>:SPI:MOSI:THReshold..... | 784 |
| SBUS<sb>:SPI:SCLK:HYSteresis..... | 784 |
| SBUS<sb>:SPI:SCLK:SOURce..... | 784 |
| SBUS<sb>:SPI:SCLK:THReshold..... | 785 |
| SBUS<sb>:SPI:TIMeout..... | 785 |
| SBUS<sb>:SPI:WSIZe..... | 785 |
| SBUS<sb>:SPI:MISO:POSition..... | 786 |

| | |
|---|-----|
| SBUS<sb>:SPI:MISO:SCALe..... | 786 |
| SBUS<sb>:SPI:MOSI:POSition..... | 786 |
| SBUS<sb>:SPI:MOSI:SCALe..... | 786 |

SBUS<sb>:SPI:BORDER <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<BitOrder> LSBF | MSBF
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "[Bit order](#)" on page 351

SBUS<sb>:SPI:CSElect:HYSteresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:CSElect:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "[Polarity: MOSI, MISO, CS](#)" on page 351

SBUS<sb>:SPI:CSElect:SOURce CSSource

Sets the input channel of the CS line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 CSSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[SCLK,MOSI,MISO,CS](#)" on page 351

SBUS<sb>:SPI:CSElect:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:MISO:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MISO channel.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:MISO:POLarity <MISOPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <MISOPolarity> ACTLow | ACTHigh
 *RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "[Polarity: MOSI, MISO, CS](#)" on page 351

SBUS<sb>:SPI:MISO:SOURce MISOSource

Sets the input channel of the MISO line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

MISOSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage:

Asynchronous command

Manual operation: See "[SCLK,MOSI,MISO,CS](#)" on page 351

SBUS<sb>:SPI:MISO:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage:

Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:MOSI:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MOSI channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage:

Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:MOSI:POLarity <MOSIPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<MOSIPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command
Manual operation: See "[Polarity: MOSI, MISO, CS](#)" on page 351

SBUS<sb>:SPI:MOSI:SOURce MOSISource

Sets the input channel of the MOSI line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 MOSISource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command
Manual operation: See "[SCLK,MOSI,MISO,CS](#)" on page 351

SBUS<sb>:SPI:MOSI:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:SCLK:SOURce SCLKSource

Sets the input channel of the SCLK line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 SCLKSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[SCLK,MOSI,MISO,CS](#)" on page 351

SBUS<sb>:SPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 352

SBUS<sb>:SPI:TIMEout <ClockTimeout>

Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <ClockTimeout> Range: 5E-08 to 10
 Increment: 1E-06
 *RST: 0.001
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Timeout](#)" on page 352

SBUS<sb>:SPI:WSize <WordLength>

Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <WordLength> Range: 4 to 32
 Increment: 1
 *RST: 8

Usage: Asynchronous command

Manual operation: See ["Word length"](#) on page 351

SBUS<sb>:SPI:MISO:POStion <SPI MISO position>

Sets the vertical position of the MISO signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MISO:SCALe <SPI MISO scale>

Set the vertical scale of the MISO signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPI MISO scale>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:POStion <SPI MISO position>

Sets the vertical position of the MOSI signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:SCALe <SPI MOSI scale>

Set the vertical scale of the MOSI signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPI MOSI scale>

Usage: Asynchronous command

17.16.2.2 Filter

| | |
|--|-----|
| SBUS<sb>:SPI:FILTer:CHKall..... | 787 |
| SBUS<sb>:SPI:FILTer:CLR..... | 787 |
| SBUS<sb>:SPI:FILTer:INVert..... | 788 |
| SBUS<sb>:SPI:FILTer:RST..... | 788 |
| SBUS<sb>:SPI:FILTer:ENABle..... | 788 |
| SBUS<sb>:SPI:FILTer:BIT..... | 788 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 788 |
| SBUS<sb>:SPI:FILTer:DMAX..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 789 |
| SBUS<sb>:SPI:FILTer:DMIN..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 789 |
| SBUS<sb>:SPI:FILTer:DOPerator..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 789 |
| SBUS<sb>:SPI:FILTer:ERENable..... | 790 |
| SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:FIENable..... | 790 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:FRENable..... | 790 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:IMAX..... | 791 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 791 |
| SBUS<sb>:SPI:FILTer:IMIN..... | 791 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 791 |
| SBUS<sb>:SPI:FILTer:IOPerator..... | 791 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 791 |

SBUS<sb>:SPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 354

SBUS<sb>:SPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 354

SBUS<sb>:SPI:FILTER:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 354

SBUS<sb>:SPI:FILTER:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 354

SBUS<sb>:SPI:FILTER:ENABLE <Enable>

Enables the filtering on SPI frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Enable> ON | OFF
*RST: ON

Usage:

Asynchronous command

SBUS<sb>:SPI:FILTER:BIT <Frame>,<Field>,<Bit>**SBUS<sb>:SPI:FILTER:FRAME<fr>:FLD<fl>:BIT <BitState>**

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 354

SBUS<sb>:SPI:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `ORANGE`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 354

SBUS<sb>:SPI:FILTer:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 354

SBUS<sb>:SPI:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQal | LTHan | LETHan | GTHan | GETHan |
INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 354

SBUS<sb>:SPI:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:SPI:FILTer:ERRor<n>:ENABLE <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 356

SBUS<sb>:SPI:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 354

SBUS<sb>:SPI:FILTer:FRENable <Frame>,<Enabler>

SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABLE <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Frame type](#)" on page 354

SBUS<sb>:SPI:FILTER:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:SPI:FILTER:FRAME<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 354

SBUS<sb>:SPI:FILTER:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:SPI:FILTER:FRAME<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 354

SBUS<sb>:SPI:FILTER:IOperator <Frame>,<Field>,<Operator>

SBUS<sb>:SPI:FILTER:FRAME<fr>:FLD<fl>:IOperator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

| | |
|--------------------------|--------------------------------|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <fl> | index of the field |
| Parameters: | |
| <Index_Operator> | EQUal INRange RANGE |
| | *RST: INRange |
| Usage: | Asynchronous command |
| Manual operation: | See "Edit" on page 354 |

17.16.2.3 Trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENT<ev>:SOURCE` before sending the bus-specific trigger commands.

| | |
|--|-----|
| <code>TRIGger:SPI:TYPE</code> | 792 |
| <code>TRIGger:SPI:DMINpattern</code> | 792 |
| <code>TRIGger:SPI:DPOSITION</code> | 793 |
| <code>TRIGger:SPI:FCONDITION</code> | 793 |
| <code>TRIGger:SPI:PALignment</code> | 793 |

`TRIGger:SPI:TYPE` <Type>

Selects the trigger type for SPI analysis.

Parameters:

| | |
|--------|--|
| <Type> | FRStart FRENd MOSI MISO |
| | FRStart |
| | Triggers on the beginning of the frame. |
| | FRENd |
| | Triggers on the end of the frame. |
| | MOSI |
| | Triggers on a specified data pattern in that is expected on the MOSI line. |
| | MISO |
| | Triggers on a specified data pattern in that is expected on the MISO line. |
| | *RST: FRStart |

Usage: Asynchronous command

Manual operation: See "Type" on page 356

`TRIGger:SPI:DMINpattern` <DataPattern>

Specifies a data bit pattern, or sets the start value of a pattern range.

Parameters:

<DataPattern>

Usage: Asynchronous command**Manual operation:** See "[Data](#)" on page 357**TRIGger:SPI:DPOsition** <DataPosition>

Sets the number of bits or words to be ignored before the first bit or word of interest. The effect is defined by [TRIGger:SPI:PALignment](#).

Parameters:

<DataPosition> Range: 1 to 4096
 Increment: 1
 *RST: 1

Usage: Asynchronous command**Manual operation:** See "[Position](#)" on page 357**TRIGger:SPI:FCONDition** <DataOperator>

Selects the operator for the MISO and MOSI pattern.

Parameters:

<DataOperator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan
 *RST: EQUal

Usage: Asynchronous command**Manual operation:** See "[Data](#)" on page 357**TRIGger:SPI:PALignment** <DataAlignment>

Defines how the specified data pattern is searched.

Parameters:

<DataAlignment> WORD | BIT

WORD
 The pattern is matched only at word boundaries.

BIT
 Bit-by bit: the pattern can be at any position in the data word.

*RST: WORD

Usage: Asynchronous command**Manual operation:** See "[Search mode](#)" on page 357

17.16.2.4 Decode results

| | |
|---------------------------------------|-----|
| SBUS<sb>:SPI:FCOunt? | 794 |
| SBUS<sb>:SPI:FRAMe<fr>:BITRate? | 794 |
| SBUS<sb>:SPI:FRAMe<fr>:COUNT? | 794 |
| SBUS<sb>:SPI:FRAMe<fr>:DATA? | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:START? | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:STATus? | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:STOP? | 796 |
| SBUS<sb>:SPI:FRAMe<fr>:WCOunt? | 796 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo? | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi? | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO? | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI? | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:START? | 798 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP? | 798 |

SBUS<sb>:SPI:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1...4, index of the serial bus

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<PrimaryBitRate> Range: 0 to 100000000000
 Increment: 1
 *RST: 0
 Default unit: bps

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:COUNT?

Returns the number of decoded frames.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> *
 Not relevant.

Return values:
 <Count> Total number of decoded frames.

Usage: Query only
 Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:DATA?

Returns the data words of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameData> Comma-separated sequence of integer values (N, L1, R1,..., LN, RN). N is the number of word pairs in the frame, and {L1,R1} ...{LN,RN} are the value pairs. The values Lx and Rx are associated with the MOSI and the MISO channel, respectively. If a channel is disabled, an empty value is returned.

Usage: Query only
 Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:START?

Returns the start time of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
 Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameState> OK | VOID | INComplete | LENGth

OK: the frame is valid.

VOID: the frame is empty.

INComplete: INComplete word. The word is cut off at the left or right side of the acquisition.

LENGth: The frame that was found has an unexpected length: there are either too few or too many bits in this frame.

*RST: OK

Usage:

Query only

Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26

Increment: 1E-10

*RST: 0

Default unit: s

Usage:

Query only

Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WCOunt?

Returns the number of words in the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameWordCount> Range: 0 to 65535

Increment: 1

*RST: 0

Usage:

Query only

Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?

Returns the formatted value of the specified word on the MISO line.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <w> | index of the word |

Return values:

<FormattedMISOVal>

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?

Returns the formatted value of the specified word on the MOSI line.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <w> | index of the word |

Return values:

<FormattedMOSIVal>

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?

Returns the data value of the specified word on the MISO line.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <w> | index of the word |

Return values:

<MISOValue> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?

Returns the data value of the specified word on the MOSI line.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<w> index of the word

Return values:

<MOSIValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:START?

Returns the start time of the specified data word.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<w> index of the word

Return values:

<FrameWordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage:

Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP?

Returns the end time of the specified data word.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<w> index of the word

Return values:

<FrameWordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage:

Query only
Asynchronous command

17.16.3 Quad SPI (option R&S MXO4-K510)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|-----------------------|-----|
| • Configuration..... | 799 |
| • Filter..... | 809 |
| • Decode results..... | 814 |

17.16.3.1 Configuration

| | |
|---------------------------------------|-----|
| SBUS<sb>:QSPI:CSEL:HYSteresis..... | 800 |
| SBUS<sb>:QSPI:CSEL:POLarity..... | 800 |
| SBUS<sb>:QSPI:CSEL:SOURce..... | 800 |
| SBUS<sb>:QSPI:CSEL:THReshold..... | 800 |
| SBUS<sb>:QSPI:INSTruction..... | 801 |
| SBUS<sb>:QSPI:IOONe:HYSteresis..... | 801 |
| SBUS<sb>:QSPI:IOONe:POLarity..... | 801 |
| SBUS<sb>:QSPI:IOONe:POSition..... | 801 |
| SBUS<sb>:QSPI:IOONe:SCALe..... | 802 |
| SBUS<sb>:QSPI:IOONe:SOURce..... | 802 |
| SBUS<sb>:QSPI:IOONe:THReshold..... | 802 |
| SBUS<sb>:QSPI:IOTHree:HYSteresis..... | 802 |
| SBUS<sb>:QSPI:IOTHree:POLarity..... | 803 |
| SBUS<sb>:QSPI:IOTHree:POSition..... | 803 |
| SBUS<sb>:QSPI:IOTHree:SCALe..... | 803 |
| SBUS<sb>:QSPI:IOTHree:SOURce..... | 804 |
| SBUS<sb>:QSPI:IOTHree:THReshold..... | 804 |
| SBUS<sb>:QSPI:IOTWo:HYSteresis..... | 804 |
| SBUS<sb>:QSPI:IOTWo:POLarity..... | 804 |
| SBUS<sb>:QSPI:IOTWo:POSition..... | 805 |
| SBUS<sb>:QSPI:IOTWo:SCALe..... | 805 |
| SBUS<sb>:QSPI:IOTWo:SOURce..... | 805 |
| SBUS<sb>:QSPI:IOTWo:THReshold..... | 805 |
| SBUS<sb>:QSPI:IOZero:HYSteresis..... | 806 |
| SBUS<sb>:QSPI:IOZero:POLarity..... | 806 |
| SBUS<sb>:QSPI:IOZero:POSition..... | 806 |
| SBUS<sb>:QSPI:IOZero:SCALe..... | 806 |
| SBUS<sb>:QSPI:IOZero:SOURce..... | 807 |
| SBUS<sb>:QSPI:IOZero:THReshold..... | 807 |
| SBUS<sb>:QSPI:SCLK:HYSteresis..... | 807 |
| SBUS<sb>:QSPI:SCLK:POLarity..... | 808 |
| SBUS<sb>:QSPI:SCLK:SOURce..... | 808 |
| SBUS<sb>:QSPI:SCLK:THReshold..... | 808 |
| SBUS<sb>:QSPI:LDOPcode..... | 808 |
| SBUS<sb>:QSPI:INSTruction..... | 809 |

SBUS<sb>:QSPI:CSEL:HYSteresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:CSEL:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "[Polarity: CS, IOx](#)" on page 365

SBUS<sb>:QSPI:CSEL:SOURce CSSource

Sets the input channel of the CS line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<FutureSignal> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:CSEL:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:INSTruction <Instruction>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Instruction> SINGle | DUAL | QUAD
 *RST: SINGle

Usage: Asynchronous command
Manual operation: See "[Instruction](#)" on page 365

SBUS<sb>:QSPI:IOONe:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO1 line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:IOONe:POLarity <IO1Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <IO1Polarity> ACTLow | ACTHigh
 *RST: ACTHigh

Usage: Asynchronous command
Manual operation: See "[Polarity: CS, IOx](#)" on page 365

SBUS<sb>:QSPI:IOONe:POSition <QUADSPI IO1 position>

Sets the vertical position of the IO1 signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <QUADSPI IO1
 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SCALE <QUADSPI IO1 scale>

Set the vertical scale of the IO1 signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <QUADSPI IO1
 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SOURce IO1Source

Sets the input channel of the IO 1 line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 IO1Source <char_data>

Usage: Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:IOONe:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:IOThree:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO0 line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:IOTHree:POLarity <IO3Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <IO3Polarity> ACTLow | ACTHigh
 *RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "[Polarity: CS, IOx](#)" on page 365

SBUS<sb>:QSPI:IOTHree:POSition <QUADSPI IO3 position>

Sets the vertical position of the IO3 signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <QUADSPI IO3 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SCALE <QUADSPI IO3 scale>

Set the vertical scale of the IO3 signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <QUADSPI IO3 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SOURCE IO3Source

Sets the input channel of the IO 3 line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

IO3Source C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage:

Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:IOTHree:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage:

Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:IOTWo:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO2 line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage:

Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:IOTWo:POLarity <IO2Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<IO2Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "[Polarity: CS, IOx](#)" on page 365

SBUS<sb>:QSPI:IOTWo:POSition <QUADSPI IO2 position>

Sets the vertical position of the IO2 signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<QUADSPI IO2 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SCALE <QUADSPI IO2 scale>

Set the vertical scale of the IO2 signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<QUADSPI IO2 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SOURce IO2Source

Sets the input channel of the IO 2 line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

IO2Source C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:IOTWo:THReshold <Threshold>

Sets a value for the hysteresis for the IO2 line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command**Manual operation:** See ["Threshold"](#) on page 367**SBUS<sb>:QSPI:IOZero:HYSTeresis <Hysteresis>**

Sets a value for the hysteresis for the IO0 line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command**Manual operation:** See ["Threshold"](#) on page 367**SBUS<sb>:QSPI:IOZero:POLarity <IO0Polarity>**

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<IO0Polarity> ACTLow | ACTHigh

*RST: ACTHigh

Usage: Asynchronous command**Manual operation:** See ["Polarity: CS, IOx"](#) on page 365**SBUS<sb>:QSPI:IOZero:POSition <QUADSPI IO0 position>**

Sets the vertical position of the IO0 signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:<QUADSPI IO0
position>**Usage:** Asynchronous command**SBUS<sb>:QSPI:IOZero:SCALE <QUADSPI IO0 scale>**

Set the vertical scale of the IO0 signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <QUADSPI IO0
 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOZero:SOURce IO0Source

Sets the input channel of the IO 0 line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 IO0Source C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:IOZero:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:SCLK:POLarity <SCLKPolarity>

Sets the polarity for the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SCLKPolarity> FALLing | RISing
*RST: RISing

Usage: Asynchronous command

Manual operation: See "[SCLK SDR Polarity](#)" on page 365

SBUS<sb>:QSPI:SCLK:SOURce SCLKSource

Sets the input channel of the SCLK clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

SCLKSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[CS, SCLK, IO n](#)" on page 364

SBUS<sb>:QSPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 367

SBUS<sb>:QSPI:LDOPcode <FileName>

Loads an opcode file from the selected file.

Suffix:

<sb> 1...4, index of the serial bus

Setting parameters:

<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "[Opcode file](#)" on page 365

SBUS<sb>:QSPI:INSTRUction <Instruction>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Instruction> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "[Instruction](#)" on page 365

17.16.3.2 Filter

| | |
|--|-----|
| SBUS<sb>:QSPI:FILTer:CHKall | 809 |
| SBUS<sb>:QSPI:FILTer:CLR | 810 |
| SBUS<sb>:QSPI:FILTer:INVert | 810 |
| SBUS<sb>:QSPI:FILTer:RST | 810 |
| SBUS<sb>:QSPI:FILTer:BIT | 810 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT | 810 |
| SBUS<sb>:QSPI:FILTer:DMAX | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 811 |
| SBUS<sb>:QSPI:FILTer:DMIN | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 811 |
| SBUS<sb>:QSPI:FILTer:DOPerator | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle | 812 |
| SBUS<sb>:QSPI:FILTer:IMAX | 812 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX | 812 |
| SBUS<sb>:QSPI:FILTer:IMIN | 813 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN | 813 |
| SBUS<sb>:QSPI:FILTer:IOPerator | 813 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator | 813 |
| SBUS<sb>:QSPI:FILTer:ERENable | 813 |
| SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle | 813 |
| SBUS<sb>:QSPI:FILTer:FIENable | 814 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle | 814 |
| SBUS<sb>:QSPI:FILTer:FRENable | 814 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle | 814 |

SBUS<sb>:QSPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 368

SBUS<sb>:QSPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 368

SBUS<sb>:QSPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 368

SBUS<sb>:QSPI:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 368

SBUS<sb>:QSPI:FILTer:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 369

SBUS<sb>:QSPI:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to INRange or OORANGe.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 369

SBUS<sb>:QSPI:FILTer:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 369

SBUS<sb>:QSPI:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan |
INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 369

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 369

SBUS<sb>:QSPI:FILTer:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to INRange.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 369

SBUS<sb>:QSPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 369

SBUS<sb>:QSPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGE
 *RST: INRange

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 369

SBUS<sb>:QSPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus
 <n> index of the error

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 370

SBUS<sb>:QSPI:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 369

SBUS<sb>:QSPI:FILTer:FRENable <Frame>,<Enabler>

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABLE <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

17.16.3.3 Decode results

| | |
|---|-----|
| SBUS<sb>:QSPI:FCOunt? | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:ADDR? | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:ALT? | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:BITRate? | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:DATA? | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:DCOunt? | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:FDATa? | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:DVALue? | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:ILBL? | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:IVALue? | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:STARt? | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:STATus? | 818 |
| SBUS<sb>:QSPI:FRAMe<fr>:STOP? | 818 |

SBUS<sb>:QSPI:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1...4, index of the serial bus

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:ADDR?

Returns the address of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameAddress> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:ALT?

Returns the value of the alternate byte for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameAlt> Range: 0 to 65535
Increment: 1
*RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<PrimaryBitRate> Range: 0 to 100000000000
 Increment: 1
 *RST: 0
 Default unit: bps

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:DCOunt?

Returns the data count for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameDataCount> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FDATa?

Returns the formatted data value of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameData>

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:FLD<fl>:DVALue?

Returns the data value of the specified field of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Return values:

<FieldDataValue> Range: 0 to 255
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:ILBL?

Returns the label of the instruction.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameLabel>

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:IVALue?

Returns the instruction mode value for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrmInstruction> Range: 0 to 65535
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:START?

Returns the start time of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameState> OK | LENGth | OPCode | INComplete
 OK: the frame is valid.
 OPCode: operation code.
 INComplete: INComplete word. The word does not have the expected word length.
 LENGth: The frame is not contained in the acquisition.
 *RST: OK

Usage: Query only
 Asynchronous command

SBUS<sb>:QSPI:FRAME<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameStop> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
 Asynchronous command

17.16.4 I²C (option R&S MXO4-K510)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|-----------------------|-----|
| • Configuration..... | 819 |
| • Trigger..... | 822 |
| • Filter..... | 826 |
| • Decode results..... | 831 |

17.16.4.1 Configuration

| | |
|--|-----|
| <code>SBUS<sb>:I2C:SCL:HYSteresis</code> | 819 |
| <code>SBUS<sb>:I2C:SCL:SOURce</code> | 819 |
| <code>SBUS<sb>:I2C:SCL:THReshold</code> | 820 |
| <code>SBUS<sb>:I2C:SDA:HYSteresis</code> | 820 |
| <code>SBUS<sb>:I2C:SDA:SOURce</code> | 820 |
| <code>SBUS<sb>:I2C:SDA:THReshold</code> | 820 |
| <code>SBUS<sb>:I2C:SDA:POSition</code> | 821 |
| <code>SBUS<sb>:I2C:SDA:SCALe</code> | 821 |
| <code>SBUS<sb>:I2C:POSition</code> | 821 |
| <code>SBUS<sb>:I2C:SCALe</code> | 821 |
| <code>SBUS<sb>:I2C:SYMBOLs</code> | 822 |
| <code>SBUS<sb>:I2C:NEWLisT</code> | 822 |

SBUS<sb>:I2C:SCL:HYSteresis <Hysteresis>

Sets a hysteresis value for the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage:

Asynchronous command

Manual operation: See "[Threshold](#)" on page 378

SBUS<sb>:I2C:SCL:SOURce SCLSource

Selects the waveform source of the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

SCLSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command
Manual operation: See "[SCL source](#)" on page 378

SBUS<sb>:I2C:SCL:THReshold <Threshold>
 Sets a user-defined threshold value for the clock line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Threshold>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 378

SBUS<sb>:I2C:SDA:HYSTeresis <Hysteresis>
 Sets a hysteresis value for the data line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Hysteresis>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 378

SBUS<sb>:I2C:SDA:SOURce SDASource
 Sets the source channel to which the data line is connected.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 SDASource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command
Manual operation: See "[SDA source](#)" on page 378

SBUS<sb>:I2C:SDA:THReshold <Threshold>
 Sets a user-defined threshold value for the data line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command**Manual operation:** See "[Threshold](#)" on page 378

SBUS<sb>:I2C:SDA:POSition <sda position>

Sets the vertical position of the SDA signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<sda position>

Usage: Asynchronous command

SBUS<sb>:I2C:SDA:SCALe <sda scale>

Set the vertical scale of the SDA I2C signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<sda scale>

Usage: Asynchronous command

SBUS<sb>:I2C:POSition <Position>Sets the vertical position of the I²C signal.**Suffix:**

<sb> 1...4, index of the serial bus

Parameters:

<Position>

Usage: Asynchronous command

SBUS<sb>:I2C:SCALe <Scale>Set the vertical scale of the I²C signal.**Suffix:**

<sb> 1...4, index of the serial bus

Parameters:

<Scale>

Usage: Asynchronous command

SBUS<sb>:I2C:SYMBOLs <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ShowSymbols> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 379

SBUS<sb>:I2C:NEWList <FileName>

Loads a symbol list file.

Suffix:

<sb> 1...4, index of the serial bus

Setting parameters:

<FileName> String parameter with path and file name.

Example:

```
SBUS1:I2C:NEWList
'/home/storage/userData/Protocol/I2C.csv'
SBUS1:I2C:SYMBOLs ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 379

17.16.4.2 Trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENT<ev>:SOURCE` before sending the bus-specific trigger commands.

| | |
|-----------------------------|-----|
| TRIGger:I2C:TYPE..... | 823 |
| TRIGger:I2C:ACCess..... | 823 |
| TRIGger:I2C:ACONdition..... | 823 |
| TRIGger:I2C:ADDRess..... | 824 |
| TRIGger:I2C:ADDTo..... | 824 |
| TRIGger:I2C:ADNack..... | 824 |
| TRIGger:I2C:AMODE..... | 824 |
| TRIGger:I2C:DCONdition..... | 825 |
| TRIGger:I2C:DMIN..... | 825 |
| TRIGger:I2C:DPOSition..... | 825 |
| TRIGger:I2C:DRNack..... | 825 |
| TRIGger:I2C:DWNack..... | 826 |

TRIGger:I2C:TYPE <Type>

Selects the trigger type for I²C analysis.

Parameters:

<Type> START | REPStart | STOP | NACK | ADDRess | DATA | ADAT

START

Start condition

REPStart

Repeated start - the start condition occurs without previous stop condition.

STOP

Stop condition, end of frame

NACK

Missing acknowledge bit. To localize specific missing acknowledge bits, use:

[TRIGger:I2C:ADNack](#)

[TRIGger:I2C:DWNack](#)

[TRIGger:I2C:DRNack](#)

ADDRess

Triggers on one specific address

DATA

Triggers on a specific data

ADAT

Triggers on a combination of address and data condition.

*RST: START

Usage: Asynchronous command

Manual operation: See "[Type](#)" on page 384

TRIGger:I2C:ACCess <RWBitAddress>

Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Parameters:

<RWBitAddress> READ | WRITe | EITHer

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "[R/W bit](#)" on page 386

TRIGger:I2C:ACONdition <AddrOptor>

Sets the operator to set a specific address or an address range. The address values are set with [TRIGger:I2C:ADDRess](#) and [TRIGger:I2C:ADDTo](#).

Parameters:

<AddrOptor> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange
 *RST: EQUal

Usage: Asynchronous command

TRIGger:I2C:ADDRESS <Address>

Triggers on the specified address, or sets the start value of an address range depending on the condition set with [TRIGger:I2C:ACONdition](#).

Parameters:

<Address> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "[Address](#)" on page 386

TRIGger:I2C:ADDTTo <AddressTo>

Sets the end value of an address range if the condition is set to an address range with [TRIGger:I2C:ACONdition](#).

Parameters:

<AddressTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "[Address](#)" on page 386

TRIGger:I2C:ADNack <AddressNack>

Triggers if the address acknowledge bit is missing - no target recognizes the address.

Parameters:

<AddressNack> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[No Ack conditions](#)" on page 386

TRIGger:I2C:AMODe <AddressType>

Sets the address length to be triggered on: 7 bit or 10 bit.

Parameters:

<AddressType> BIT7 | BIT10
 *RST: BIT7

Usage: Asynchronous command

Manual operation: See "[Address type](#)" on page 386

TRIGger:I2C:DCONdition <DataOperator>

Sets the operator to set a specific data value or a data range.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "[Data](#)" on page 387

TRIGger:I2C:DMIN <Data>

Specifies the data bit pattern, or sets the start value of a data pattern range. Enter the bytes in MSB first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Parameters:

<Data>

Usage: Asynchronous command

Manual operation: See "[Data](#)" on page 387

TRIGger:I2C:DPOStion <DataPosition>

Sets the number of data bytes to be skipped after the address.

Parameters:

<DataPosition> Range: 1 to 4096
 Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "[Position](#)" on page 387

TRIGger:I2C:DRNack <DataReadNack>

Triggers on the end of the read process when the controller reads data from the target. This NACK is sent according to the protocol definition, it is not an error.

Parameters:

<DataReadNack> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[No Ack conditions](#)" on page 386

TRIGger:I2C:DWNack <DataWriteNack>

Triggers if a data acknowledge bit is missing - the addressed target does not accept the data.

Parameters:

<DataWriteNack> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[No Ack conditions](#)" on page 386

17.16.4.3 Filter

There are two commands for each parameter, that you can use for defining the I2C settings.

For example, to set the *Frame type =WRITE > Field =Address >Data* value you can use one of the following commands:

- SBUS:I2C:FILTer:FRAMe1:FLD1:DMIN 01100
 Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- SBUS:I2C:FILTer:DMIN "WRITE", "Address", 01100
 Defines the parameter by using the frame and field name.

| | |
|--|-----|
| SBUS<sb>:I2C:FILTer:CHKall..... | 827 |
| SBUS<sb>:I2C:FILTer:CLR..... | 827 |
| SBUS<sb>:I2C:FILTer:INVert..... | 827 |
| SBUS<sb>:I2C:FILTer:RST..... | 827 |
| SBUS<sb>:I2C:FILTer:ENABLE..... | 827 |
| SBUS<sb>:I2C:FILTer:FRENable..... | 828 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABLE..... | 828 |
| SBUS<sb>:I2C:FILTer:DMAX..... | 828 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 828 |
| SBUS<sb>:I2C:FILTer:DMIN..... | 828 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 828 |
| SBUS<sb>:I2C:FILTer:DOPerator..... | 829 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 829 |
| SBUS<sb>:I2C:FILTer:ERENable..... | 829 |
| SBUS<sb>:I2C:FILTer:ERRor<n>:ENABLE..... | 829 |
| SBUS<sb>:I2C:FILTer:IMAX..... | 829 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 829 |
| SBUS<sb>:I2C:FILTer:IMIN..... | 830 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 830 |
| SBUS<sb>:I2C:FILTer:IOPerator..... | 830 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 830 |
| SBUS<sb>:I2C:FILTer:BIT..... | 831 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 831 |
| SBUS<sb>:I2C:FILTer:FIENable..... | 831 |
| SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABLE..... | 831 |

SBUS<sb>:I2C:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 381

SBUS<sb>:I2C:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 381

SBUS<sb>:I2C:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 381

SBUS<sb>:I2C:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 381

SBUS<sb>:I2C:FILTer:ENABLE <Enable>

Enables the filtering on I2C frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

SBUS<sb>:I2C:FILTer:FREnable <Frame>,<Enabler>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABLE <Enable>
 Enables or disables the specific frame to be filtered on.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Parameters:
 <Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Frame type](#)" on page 381

SBUS<sb>:I2C:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>
 Sets the end value of a data pattern range if the operator is set to INRange or OORANGE.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Data_Max>

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 382

SBUS<sb>:I2C:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>
 Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 382

SBUS<sb>:I2C:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan |
INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 382

SBUS<sb>:I2C:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 383

SBUS<sb>:I2C:FILTer:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to INRange.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 382

SBUS<sb>:I2C:FILTer:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 382

SBUS<sb>:I2C:FILTer:IOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGE
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 382

SBUS<sb>:I2C:FILTer:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<BitState> ONE | ZERO
 *RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 382

SBUS<sb>:I2C:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<CondEnabler> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 382

17.16.4.4 Decode results

| | |
|--|-----|
| SBUS<sb>:I2C:FCOunt? | 832 |
| SBUS<sb>:I2C:FRAMe<fr>:AACcess? | 832 |
| SBUS<sb>:I2C:FRAMe<fr>:ACCess? | 832 |
| SBUS<sb>:I2C:FRAMe<fr>:ACOMplete? | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADBStart? | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADDRess? | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADEVice? | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:AMODE? | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:ASTart? | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:BCOunt? | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:BITRate? | 835 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACCess? | 835 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACKStart? | 835 |

| | |
|--|-----|
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:COMPlEte? | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:STARt? | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:VALue? | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:DATA? | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:RWBStArT? | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:STARt? | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:STATus? | 838 |
| SBUS<sb>:I2C:FRAMe<fr>:STOP? | 838 |
| SBUS<sb>:I2C:FRAMe<fr>:SYMBol? | 839 |

SBUS<sb>:I2C:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1..4
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage:

Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AACcEss?

Returns the address acknowledge bit value for the indicated frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<AddressAckBit> ACK | NACK | EITHer
*RST: EITHer

Usage:

Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACCess?

Returns the value of the R/W bit of the indicated frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<RWBit> UNDeFined | READ | WRITe | EITHer
*RST: UNDeFined

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACOMplete?

Returns if the address is completely contained in the acquisition.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <AddrComplete> ON | OFF
 *RST: OFF

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADBStart?

Returns the start time of the address acknowledge bit.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <AddrAckBtStrt> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <AddressValue> Range: 0 to 2047
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADEVice?

Returns the pure device address of the indicated frame *without* the R/W bit.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<DeviceAddress> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AMODE?

Returns the address length.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<AddressType> BIT7 | BIT7RW | BIT7_RW | BIT10 | AUTO | ANY
*RST: BIT7

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AStart?

Returns the start time of the address for the indicated frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<AddressStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BCOunt?

Returns the number of bytes in the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <Count>

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <PrimaryBitRate> Range: 0 to 100000000000
 Increment: 1
 *RST: 0
 Default unit: bps

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACCess?

Returns the acknowledge bit value of the specified data byte.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the byte number

Return values:
 <AckBit> ACK | NACK | EITHer
 *RST: EITHer

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACKStart?

Returns the start time of the acknowledge bit of the specified byte.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

<o> index of the byte number

Return values:

<AckBitStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:COMplete?

Returns if the indicated byte is completely contained in the acquisition.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte number

Return values:

<ValueComplete> ON | OFF
 *RST: OFF

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:START?

Returns the start time of the specified data byte.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte number

Return values:

<FrameByteStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:VALue?

Returns the data value of the specified byte.

Suffix:

<sb> 1...4, index of the serial bus

| | |
|-----------------------|--|
| <fr> | index of the frame |
| <o> | index of the byte number |
| Return values: | |
| <Value> | Range: 0 to 255
Increment: 1
*RST: 0 |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:I2C:FRAME<fr>:DATA?

Returns the data words of the specified frame.

| | |
|-----------------|---|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| Example: | BUS:I2C:FRAME4:DATA?
<-- 3,74,164,18 |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:I2C:FRAME<fr>:RWBStart?

Returns the start time of the R/W bit

| | |
|-----------------------|--|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| Return values: | |
| <RWBitStart> | Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:I2C:FRAME<fr>:START?

Returns the start time of the specified frame.

| | |
|----------------|--------------------------------|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |

Return values:

<FrameStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage:

Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameState> NOSTop | OK | INComplete | ADDifferent | UNKNown

INComplete

The stop bit is missing.

OK

The frame is valid.

UNEXpstop

A stop bit was detected but clock and data are continued.

INSufficient

The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

ADDifferent

Error in 10-bit address. For a read access on a 10-bit address, the first address byte is sent twice, first as write, the second as read. The first 7 bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

*RST: OK

Usage:

Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage:

Query only
 Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<Translation> String with symbolic name of the address

Usage:

Query only
 Asynchronous command

17.16.5 UART / RS-232 (option R&S MXO4-K510)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|--|-----|
| • Configuration | 839 |
| • Trigger | 845 |
| • Filter | 847 |
| • Decode results | 852 |

17.16.5.1 Configuration

| | |
|---|-----|
| SBUS<sb>:UART:BITRate | 840 |
| SBUS<sb>:UART:BORDER | 840 |
| SBUS<m>:UART:EWORd | 840 |
| SBUS<sb>:UART:PACKets | 841 |
| SBUS<sb>:UART:PARity | 841 |
| SBUS<sb>:UART:POLarity | 842 |
| SBUS<sb>:UART:RX:HYSTeresis | 842 |
| SBUS<sb>:UART:RX:SOURce | 842 |
| SBUS<sb>:UART:RX:THReshold | 842 |
| SBUS<sb>:UART:SBIT | 843 |
| SBUS<sb>:UART:SSIZE | 843 |
| SBUS<sb>:UART:TOUT | 843 |
| SBUS<sb>:UART:TX:HYSTeresis | 844 |

| | |
|---------------------------------|-----|
| SBUS<sb>:UART:TX:SOURce..... | 844 |
| SBUS<sb>:UART:TX:THReshold..... | 844 |
| SBUS<sb>:UART:RX:POSition..... | 844 |
| SBUS<sb>:UART:RX:SCALe..... | 845 |
| SBUS<sb>:UART:TX:POSition..... | 845 |
| SBUS<sb>:UART:TX:SCALe..... | 845 |

SBUS<sb>:UART:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Bitrate> Range: 300 to 2000000
 Increment: 1
 *RST: 9600
 Default unit: bps

Usage: Asynchronous command

Manual operation: See "[Bit rate](#)" on page 396

SBUS<sb>:UART:BORDER <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<BitOrder> LSBF | MSBF
 *RST: LSBF

Usage: Asynchronous command

Manual operation: See "[Bit order](#)" on page 396

SBUS<m>:UART:EWORd <EndWord>

Sets the end pattern of the packets. A new packet starts with the first start bit after the defined end pattern.

The command is relevant if `SBUS<sb>:UART:PACKets` is set to `EWORd`.

Suffix:

<m> 1...4, index of the serial bus

Parameters:

<EndWord>

Usage: Asynchronous command

Manual operation: See "Packets" on page 396

SBUS<sb>:UART:PACKets <FrmSeparation>

Defines the method of packet separation. A packet is a number of subsequent words in a data stream.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<FrmSeparation> NONE | TOUT

NONE

Packets are not considered.

EWORd

End word, the end condition of a packet is a pattern. To define the end word, use `SBUS<m>:UART:EWORd`.

TOUT

Defines a timeout between the packets. To set the timeout, use `SBUS<sb>:UART:TOUT`.

*RST: TOUT

Usage: Asynchronous command

Manual operation: See "Packets" on page 396

SBUS<sb>:UART:PARity <Parity>

Defines the optional parity bit that is used for error detection.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Parity> NONE | ODD | EVEN | MARK | SPC | DC

MARK

The parity bit is always a logic 1.

SPC

SPaCe: The parity bit is always a logic 0.

DC

Do not care: the parity is ignored.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Parity" on page 396

SBUS<sb>:UART:POLarity <Polarity>

Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Polarity> IDLLow | IDLHigh
*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "[Polarity](#)" on page 396

SBUS<sb>:UART:RX:HYSTeresis <Rx hysteresis>

Sets the hysteresis for the Tx line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Rx hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 397

SBUS<sb>:UART:RX:SOURce RXSource

Selects the input channel for the receiver signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

RXSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[Source: Tx, Rx](#)" on page 395

SBUS<sb>:UART:RX:THREshold <Rx threshold>

Sets a user-defined threshold value for the Rx line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Rx threshold>

Usage: Asynchronous command**Manual operation:** See "[Threshold](#)" on page 397**SBUS<sb>:UART:SBIT <StopBits>**

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<StopBits> B1 | B15 | B2

*RST: B1

Usage: Asynchronous command**Manual operation:** See "[Stop bits](#)" on page 396**SBUS<sb>:UART:SSIZE <DataBits>**

Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<DataBits> Range: 5 to 9

Increment: 1

*RST: 8

Usage: Asynchronous command**Manual operation:** See "[Data bits](#)" on page 396**SBUS<sb>:UART:TOUT <Timeout>**

Sets the timeout between packets in a UART data stream. A new packet starts with the first start bit after the timeout.

The command is relevant if `SBUS<sb>:UART:PACKets` is set to TOUT.**Suffix:**

<sb> 1...4, index of the serial bus

Parameters:

<Timeout> Range: 1E-06 to 1

Increment: 1

*RST: 0.000625

Default unit: s

Usage: Asynchronous command
Manual operation: See "[Packets](#)" on page 396

SBUS<sb>:UART:TX:HYSteresis <Tx hysteresis>

Sets the hysteresis for the TX line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Tx hysteresis>

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 397

SBUS<sb>:UART:TX:SOURce TXSource

Selects the input channel for the transmitter signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 TXSource C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
 R1 | R2 | R3 | R4

Usage: Asynchronous command
Manual operation: See "[Source: Tx, Rx](#)" on page 395

SBUS<sb>:UART:TX:THReshold <Tx threshold>

Sets a user-defined threshold value for the Tx line.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Tx threshold> User-defined clock threshold

Usage: Asynchronous command
Manual operation: See "[Threshold](#)" on page 397

SBUS<sb>:UART:RX:POSition <Rx position>

Sets the vertical position of the RX UART signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:

<Rx position>

Usage: Asynchronous command**SBUS<sb>:UART:RX:SCALE <Rx scale>**

Set the vertical scale of the RX UART signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Rx scale>

Usage: Asynchronous command**SBUS<sb>:UART:TX:POSition <Tx position>**

Sets the vertical position of the TX UART signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Tx position>

Usage: Asynchronous command**SBUS<sb>:UART:TX:SCALE <Tx scale>**

Set the vertical scale of the TX UART signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Tx scale>

Usage: Asynchronous command**17.16.5.2 Trigger**

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENT<ev>:SOURce` before sending the bus-specific trigger commands.

| | |
|--|-----|
| <code>TRIGger:UART:DATA</code> | 846 |
| <code>TRIGger:UART:DPOSition</code> | 846 |
| <code>TRIGger:UART:FCONdition</code> | 846 |
| <code>TRIGger:UART:OPERator</code> | 846 |
| <code>TRIGger:UART:SOURce</code> | 846 |
| <code>TRIGger:UART:TYPE</code> | 847 |

TRIGger:UART:DATA <DataPattern>

Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Parameters:

<DataPattern>

Usage: Asynchronous command

Manual operation: See "[Value](#)" on page 402

TRIGger:UART:DPOsition <DataPosition>

Sets the number of words before the first word of interest. These offset words are ignored.

Parameters:

<DataPosition> Range: 1 to 4096
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[Position](#)" on page 402

TRIGger:UART:FCONDition <DataOperator>

Selects the operator for the "Data" pattern.

Parameters:

<DataOperator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan
 *RST: EQUal

Usage: Asynchronous command

Manual operation: See "[Data](#)" on page 402

TRIGger:UART:OPERator <DataOperator>

Sets the operator for the data pattern in the selected field of the selected frame.

Parameters:

<DataOperator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan
 *RST: EQUal

Usage: Asynchronous command

TRIGger:UART:SOURce <Source>

Selects the transmitter or receiver line as trigger source.

Parameters:

<Source> TX | RX
 *RST: TX

Usage: Asynchronous command

Manual operation: See ["Trigger source"](#) on page 401

TRIGger:UART:TYPE <Type>

Selects the trigger condition.

Parameters:

<Type> STBT | PCKS | DATA | PRER | BRKC | STPerror
 STBT: Start bit
 PCKS: Packet start
 DATA: Serial pattern
 BRKC: Break condition
 STPerror: Stop error
 *RST: STBT

Usage: Asynchronous command

Manual operation: See ["Type"](#) on page 401

17.16.5.3 Filter

| | |
|---|-----|
| SBUS<sb>:UART:FILTer:CHKall..... | 848 |
| SBUS<sb>:UART:FILTer:CLR..... | 848 |
| SBUS<sb>:UART:FILTer:INVert..... | 848 |
| SBUS<sb>:UART:FILTer:RST..... | 848 |
| SBUS<sb>:UART:FILTer:IMIN..... | 848 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 848 |
| SBUS<sb>:UART:FILTer:IMAX..... | 849 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 849 |
| SBUS<sb>:UART:FILTer:IOPerator..... | 849 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 849 |
| SBUS<sb>:UART:FILTer:ERENable..... | 850 |
| SBUS<sb>:UART:FILTer:ERRor<n>:ENABle..... | 850 |
| SBUS<sb>:UART:FILTer:DOPerator..... | 850 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 850 |
| SBUS<sb>:UART:FILTer:DMIN..... | 850 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 850 |
| SBUS<sb>:UART:FILTer:DMAX..... | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 851 |
| SBUS<sb>:UART:FILTer:BIT..... | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 851 |
| SBUS<sb>:UART:FILTer:FRENable..... | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle..... | 851 |
| SBUS<sb>:UART:FILTer:FIENable..... | 852 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 852 |

SBUS<sb>:UART:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 399

SBUS<sb>:UART:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 399

SBUS<sb>:UART:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 399

SBUS<sb>:UART:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 399

SBUS<sb>:UART:FILTer:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 399

SBUS<sb>:UART:FILTER:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTER:FRAME<fr>:FLD<fl>:IMAX <Index_Max>
 Sets the end value of an index range if the operator is set to INRange.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 399

SBUS<sb>:UART:FILTER:IOperator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTER:FRAME<fr>:FLD<fl>:IOperator <Index_Operator>
 Sets the operator for the index in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Operator> EQUAL | INRange | RANGE
 *RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 399

SBUS<sb>:UART:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:UART:FILTer:ERRor<n>:ENABLE <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus
 <n> index of the error

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Error type](#)" on page 400

SBUS<sb>:UART:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange
 *RST: EQUal

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 399

SBUS<sb>:UART:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1..4
 Selects the serial bus.
 <fr> *
 Specifies the frame number.
 <fl> *
 Specifies the field number within the frame.

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 399

SBUS<sb>:UART:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `ORANGE`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 399

SBUS<sb>:UART:FILTer:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO

*RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 399

SBUS<sb>:UART:FILTer:FRENable <Frame>,<Enabler>

SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABLE <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Frame type](#)" on page 399

SBUS<sb>:UART:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<CondEnabler> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 399

17.16.5.4 Decode results

| | |
|--|-----|
| SBUS<sb>:UART:WORD<w>:BITRate? | 852 |
| SBUS<sb>:UART:WORD<w>:COUNT? | 853 |
| SBUS<sb>:UART:WORD<w>:RXValue? | 853 |
| SBUS<sb>:UART:WORD<w>:SOURce? | 853 |
| SBUS<sb>:UART:WORD<w>:START? | 854 |
| SBUS<sb>:UART:WORD<w>:STOP? | 854 |
| SBUS<sb>:UART:WORD<w>:STATe? | 854 |
| SBUS<sb>:UART:WORD<w>:TXValue? | 855 |

SBUS<sb>:UART:WORD<w>:BITRate?

Returns the primary bit rate.

Suffix:

<sb> 1...4, index of the serial bus
 <w> index of the word

Return values:

<PrimaryBitRate> Range: 0 to 100000000000
 Increment: 1
 *RST: 0
 Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:COUNT?

Returns the number of words in the acquisition.

Suffix:
 <sb> 1...4, index of the serial bus
 <w> *

The suffix is irrelevant.

Return values:
 <Count> Number of words

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:RXValue?

Returns the value of the specified word on the Rx line.

Suffix:
 <sb> 1...4, index of the serial bus
 <w> index of the word

Return values:
 <RxValue> Range: 0 to 511
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:SOURce?

Returns the line on which the specified word was transferred.

Suffix:
 <sb> 1...4, index of the serial bus
 <w> index of the word

Return values:
 <WordSource> TX | RX
 *RST: TX

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:START?

Returns the start time of the specified word.

Suffix:

<sb> 1...4, index of the serial bus
<w> index of the word

Return values:

<WordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STOP?

Returns the stop time of the specified word.

Suffix:

<sb> 1...4, index of the serial bus
<w> index of the word

Return values:

<WordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STATe?

Returns the status of the specified word.

Suffix:

<sb> 1...4, index of the serial bus
<w> index of the word

Return values:

<WordState> OK | BREak | STERror | SPERror | PRERror | INComplete
OK: the frame is valid.
BREak: stop bit error with 0x00 word
STERror: start error, incorrect start bit
SPERror: stop error, incorrect stop bit
PRERror: parity error, incorrect parity bit.
INComplete: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:TXValue?

Returns the value of the specified word on the TX line.

Suffix:

<sb> 1...4, index of the serial bus

<w> index of the word

Return values:

<TxValue> Range: 0 to 511
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

17.16.6 CAN (option R&S MXO4-K520)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|--|-----|
| • Configuration | 855 |
| • Trigger | 861 |
| • Filter | 870 |
| • Decode results | 875 |

17.16.6.1 Configuration

| | |
|--|-----|
| SBUS<sb>:CAN:TYPE | 856 |
| SBUS<sb>:CAN:BITRate | 856 |
| SBUS<sb>:CAN:SAMPlEpoint | 856 |
| SBUS<sb>:CAN:SOURce | 857 |
| SBUS<sb>:CAN:FDATa:DBITrate | 857 |
| SBUS<sb>:CAN:FDATa:SAMPlEpoint | 857 |
| SBUS<sb>:CAN:SIC:HYSTeresis | 857 |
| SBUS<sb>:CAN:SIC:THReshold | 858 |
| SBUS<sb>:CAN:FAST:THReshold | 858 |
| SBUS<sb>:CAN:FAST:HYSTeresis | 858 |
| SBUS<sb>:CAN:XDATa:DBITrate | 858 |
| SBUS<sb>:CAN:XDATa:SAMPlEpoint | 859 |
| SBUS<sb>:CAN:TRCVmode | 859 |
| SBUS<sb>:CAN:SYMBols | 859 |

| | |
|----------------------------|-----|
| SBUS<sb>:CAN:NEWList..... | 860 |
| SBUS<sb>:CAN:POSition..... | 860 |
| SBUS<sb>:CAN:SCALe..... | 860 |

SBUS<sb>:CAN:TYPE <SignalType>

Selects the CAN-High or CAN-Low line. Both lines are required for differential signal transmission used by CAN.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SignalType> CANL | CANH
*RST: CANL

Usage: Asynchronous command

Manual operation: See "[Type](#)" on page 409

SBUS<sb>:CAN:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Bitrate> Range: 10000 to 5000000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "[Nominal bit rate](#)" on page 409

SBUS<sb>:CAN:SAMPlepoint <SamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Sample point](#)" on page 409

SBUS<sb>:CAN:SOURce Source

Sets the source channel to which the line is connected.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

Source C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See ["Data"](#) on page 409

SBUS<sb>:CAN:FDATa:DBITrate <FDBitrate>

Sets the bit rate of the data phase.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<FDBitrate> Range: 10000 to 15000000
Increment: 100
*RST: 1000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See ["FD bit rate"](#) on page 410

SBUS<sb>:CAN:FDATa:SAMPlEpoint <FDSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<FDSamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See ["FD sample point"](#) on page 410

SBUS<sb>:CAN:SIC:HYSTeresis <Hysteresis>

Sets a hysteresis value for the SIC transceiver mode.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 411

SBUS<sb>:CAN:SIC:THReshold <SIC Threshold>

Sets a threshold value for the SIC transceiver mode.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 411

SBUS<sb>:CAN:FAST:THReshold <SIC Threshold>

Sets a threshold value for the fast transceiver mode.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 411

SBUS<sb>:CAN:FAST:HYSteresis <Hysteresis>

Sets a hysteresis value for the fast transceiver mode.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 411

SBUS<sb>:CAN:XDATA:DBITrate <XLBitrate>

Sets the bit rate of the data phase for the CAN XL frame.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<XLBitrate> Range: 10000 to 15000000
 Increment: 100
 *RST: 10000000
 Default unit: bps

Usage:

Asynchronous command

Manual operation: See "[XL bit rate](#)" on page 410

SBUS<sb>:CAN:XDATA:SAMPLEpoint <XLSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<XLSamplePoint> Range: 30 to 90
 Increment: 5
 *RST: 66
 Default unit: %

Usage:

Asynchronous command

Manual operation: See "[XL sample point](#)" on page 410

SBUS<sb>:CAN:TRCVmode <TransceiverMd>

Selects the transceiver mode for the CAN decoding.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<TransceiverMd> SIC | FAST
 *RST: SIC

Usage:

Asynchronous command

Manual operation: See "[Transceiver mode](#)" on page 409

SBUS<sb>:CAN:SYMBOLs <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ShowSymbols> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Show symbols](#)" on page 412

SBUS<sb>:CAN:NEWList <FileName>

Loads a symbol list file.

Suffix:

<sb> 1...4, index of the serial bus

Setting parameters:

<FileName> String parameter with path and file name.

Example:

```
SBUS1:CAN:NEWList
'/home/storage/userData/Protocol/CAN.csv'
SBUS1:CAN:SYMBOLS ON
```

Usage: Setting only
 Asynchronous command

Manual operation: See "[Show symbols](#)" on page 412

SBUS<sb>:CAN:POSition <CAN position>

Sets the vertical position of the CAN signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<CAN position>

Usage: Asynchronous command

SBUS<sb>:CAN:SCALe <CAN scale>

Set the vertical scale of the indicated CAN signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<CAN scale>

Usage: Asynchronous command

17.16.6.2 Trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENT<ev>:SOURCE` before sending the bus-specific trigger commands.

| | |
|---|-----|
| <code>TRIGger:CAN:TYPE</code> | 861 |
| <code>TRIGger:CAN:DCondition</code> | 862 |
| <code>TRIGger:CAN:DMin</code> | 862 |
| <code>TRIGger:CAN:FData:DPosition</code> | 863 |
| <code>TRIGger:CAN:DLC</code> | 863 |
| <code>TRIGger:CAN:DLCondition</code> | 863 |
| <code>TRIGger:CAN:FType</code> | 863 |
| <code>TRIGger:CAN:ICondition</code> | 864 |
| <code>TRIGger:CAN:IMAX</code> | 864 |
| <code>TRIGger:CAN:IMIN</code> | 864 |
| <code>TRIGger:CAN:IType</code> | 865 |
| <code>TRIGger:CAN:FormError</code> | 865 |
| <code>TRIGger:CAN:FData:SCError</code> | 865 |
| <code>TRIGger:CAN:ACKError</code> | 866 |
| <code>TRIGger:CAN:BITStError</code> | 866 |
| <code>TRIGger:CAN:CRCErr</code> | 866 |
| <code>TRIGger:CAN:FData:BRS</code> | 866 |
| <code>TRIGger:CAN:FData:ESI</code> | 867 |
| <code>TRIGger:CAN:XData:AF:Condition</code> | 867 |
| <code>TRIGger:CAN:XData:AF:MAX</code> | 867 |
| <code>TRIGger:CAN:XData:AF:MIN</code> | 868 |
| <code>TRIGger:CAN:XData:SDT:Condition</code> | 868 |
| <code>TRIGger:CAN:XData:SDT:MAX</code> | 868 |
| <code>TRIGger:CAN:XData:SDT:MIN</code> | 868 |
| <code>TRIGger:CAN:XData:SEC</code> | 869 |
| <code>TRIGger:CAN:XData:VCID:Condition</code> | 869 |
| <code>TRIGger:CAN:XData:VCID:MAX</code> | 869 |
| <code>TRIGger:CAN:XData:VCID:MIN</code> | 869 |

TRIGger:CAN:TYPE <Type>

Selects the trigger type for CAN analysis.

Parameters:

<Type>

STOF | EDOF | FTYP | ID | IDDT | ERRC

STOF

Start of Frame: triggers on the first edge of the dominant SOF bit (synchronization bit).

FTYP

Frame type: triggers on a specified frame type and on the identifier format.

ID

Identifier: Sets the trigger to one specific identifier or an identifier range.

To set the identifier, use `TRIGger:CAN:ICONdition`, `TRIGger:CAN:IMAX`, and `TRIGger:CAN:IMIN`.

IDDT

Identifier and data: Combination of identifier and data conditions.

To set the identifier condition, use `TRIGger:CAN:ICONdition`, `TRIGger:CAN:IMIN`, and `TRIGger:CAN:IMAX`.

To set the data condition, use `TRIGger:CAN:DCondition` and `TRIGger:CAN:DMIN`.

ERRC

Error condition: Define the error types with:

`TRIGger:CAN:ACKerror`

`TRIGger:CAN:BITSterror`

`TRIGger:CAN:CRCErrror`

`TRIGger:CAN:FORMerror`

`TRIGger:CAN:FDATA:SCERror`

*RST: STOF

Usage: Asynchronous command

Manual operation: See "[Type](#)" on page 417

TRIGger:CAN:DCondition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:

<DataOperator> `EQUal` | `NEQUal` | `LTHan` | `LETHan` | `GTHan` | `GETHan`

`EQUal` | `NEQUal` | `LTHan` | `LETHan` | `GTHan` | `GETHan`

Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one data pattern to be set with `TRIGger:CAN:DMIN`.

*RST: `EQUal`

Usage: Asynchronous command

Manual operation: See "[Data pattern](#)" on page 422

TRIGger:CAN:DMIN <DataPattern>

Sets a data pattern, or sets the start value of a data pattern range.

Parameters:

<DataPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "[Data pattern](#)" on page 422

TRIGger:CAN:FDATa:DPOSition <DataPosition>

Defines the number of the first data byte at which the data pattern may start.

Parameters:

<DataPosition> Range: 1 to 2048
 Increment: 1
 *RST: 1

Usage: Asynchronous command

TRIGger:CAN:DLC <DLC>

Sets the data length code, the number of data bytes to be found. For complete definition, set also the operator with [TRIGger:CAN:DLCCondition](#).

Parameters:

<DLC> Range: CAN: 1 to 8, CAN FD: 1 to 15 (64 bytes)
 Increment: 1
 *RST: 0

Usage: Asynchronous command

Manual operation: See "[DLC](#)" on page 421

TRIGger:CAN:DLCCondition <DLCOperator>

Operator to set the data length code.

The number of data bytes to be found is set with [TRIGger:CAN:DLC](#).

Parameters:

<DLCOperator> EQUal | GETHan
 For little endian transfer direction, EQUal must be set.
 *RST: GETHan

Usage: Asynchronous command

Manual operation: See "[DLC](#)" on page 421

TRIGger:CAN:FTYPe <FrameType>

Sets the CAN frame type.

Parameters:

<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor |
 OVERload
 CBFF: classical base frame format data
 CEFF: classical extended frame format data
 FBFF: FD base frame format
 FEFF: FD extended frame format
 XLFF: XL frame format

ERR: error
 OVLd: overload
 *RST: CBFF

Usage: Asynchronous command
Manual operation: See "[Frame type](#)" on page 419

TRIGger:CAN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:

<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with [TRIGger:CAN:IMIN](#).

INRange | OORange

In range / out of range: Set the minimum and maximum value of the range with [TRIGger:CAN:IMIN](#) and [TRIGger:CAN:IMAX](#).

*RST: EQUal

Usage: Asynchronous command
Manual operation: See "[Identifier](#)" on page 421

TRIGger:CAN:IMAX <IdPattern>

Sets the end value of an identifier range if [TRIGger:CAN:ICONdition](#) is set to [INRange](#) or [OORange](#).

Parameters:

<IdPattern> List of comma separated values

Usage: Asynchronous command
Manual operation: See "[Identifier](#)" on page 421

TRIGger:CAN:IMIN <IdPattern>

Specifies a message identifier pattern, or sets the start value of an identifier range.

Parameters:

<IdPattern> List of comma separated values

Usage: Asynchronous command
Manual operation: See "[Identifier](#)" on page 421

TRIGger:CAN:ITYPe <IdentifierType>

Selects the format of data and remote frames.

Remote frames are not available in the CAN FD protocol.

Parameters:

<IdentifierType> B11 | B29

B11

11-bit identifier (standard format). The instrument triggers on the sample point of the IDE bit.

B29

29-bit identifier (extended format). The instrument triggers on the sample point of the RTR bit.

ANY

The ID type and ID pattern are not relevant for the trigger condition.

*RST: B11

Usage: Asynchronous command

Manual operation: See "[ID type](#)" on page 422

TRIGger:CAN:FORMerror <FormError>

Triggers when a fixed-form bit field contains one or more illegal bits.

Available, if [TRIGger:CAN:TYPE](#) is set to `ERRC`.

Parameters:

<FormError> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 423

TRIGger:CAN:FDATa:SCERror <StuffCntErr>

Triggers on stuff count errors. A stuff bit error occurs, if more than five consecutive bits of the same level occur on the bus.

Available, if [TRIGger:CAN:TYPE](#) is set to `ERRor`.

Parameters:

<StuffCntErr> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 423

TRIGger:CAN:ACKerror <AckError>

Triggers when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.

Available, if **TRIGger:CAN:TYPE** is set to `ERRC`.

Parameters:

<AckError> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 423

TRIGger:CAN:BITSterror <BitStuffError>

Triggers if a stuff error occurs - when the 6th consecutive equal bit level in the mentioned fields is detected.

Available, if **TRIGger:CAN:TYPE** is set to `ERRC`.

Parameters:

<BitStuffError> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 423

TRIGger:CAN:CRCErrror <ChecksumError>

Triggers on CRC errors. A CRC error occurs when the CRC calculated by the receiver differs from the received value in the CRC sequence.

Available, if **TRIGger:CAN:TYPE** is set to `ERRC`.

Parameters:

<ChecksumError> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 423

TRIGger:CAN:FDATa:BRS <BRS_Bit>

Sets the bit rate switch bit.

Parameters:

<BRS_Bit> ONE | ZERO | DC
ONE: the bit rate switches from the bit rate of the arbitration phase to the faster data rate.
*RST: ONE

Usage: Asynchronous command
Manual operation: See "BRS, ESI" on page 422

TRIGger:CAN:FDATA:ESI <ESI_Bit>

Sets the error state indicator bit.

Parameters:

<ESI_Bit> ONE | ZERO | DC
 DC: do not care, bit is nor relevant.
 *RST: DC

Usage: Asynchronous command
Manual operation: See "BRS, ESI" on page 422

TRIGger:CAN:XDATA:AF:CONDition <AfOperator>

Sets the comparison condition for the acceptance field to a specific value or a range.

Parameters:

<AfOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange
EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
 Equal, not equal, less than, less or equal than, greater than,
 greater or equal than. These conditions require one pattern to be
 set with [TRIGger:CAN:XDATA:AF:MIN](#).
INRange | OORange
 In range / out of range: Set the minimum and maximum value of
 the range with [TRIGger:CAN:XDATA:AF:MIN](#) and [TRIGger:
 CAN:XDATA:AF:MAX](#).
 *RST: EQUal

Usage: Asynchronous command
Manual operation: See "AF" on page 423

TRIGger:CAN:XDATA:AF:MAX <AfPatternTo>

Sets the end value of an acceptance field if [TRIGger:CAN:XDATA:AF:CONDition](#) is
 set to [INRange](#) or [OORange](#).

Parameters:

<AfPatternTo> List of comma separated values

Usage: Asynchronous command
Manual operation: See "AF" on page 423

TRIGger:CAN:XDATA:AF:MIN <AfPattern>

Specifies an acceptance field pattern, or sets the start value of a range.

Parameters:

<AfPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "AF" on page 423

TRIGger:CAN:XDATA:SDT:CONDition <SdtOperator>

Sets the comparison condition for the service data unit type to a specific value or a range.

Parameters:

<SdtOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with [TRIGger:CAN:XDATA:SDT:MIN](#).

INRange | OORange

In range / out of range: Set the minimum and maximum value of the range with [TRIGger:CAN:XDATA:SDT:MIN](#) and [TRIGger:CAN:XDATA:SDT:MAX](#).

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "SDT" on page 422

TRIGger:CAN:XDATA:SDT:MAX <SdtPatternTo>

Sets the end value of a service data unit type range if [TRIGger:CAN:XDATA:SDT:CONDition](#) is set to [INRange](#) or [OORange](#).

Parameters:

<SdtPatternTo> List of comma separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 422

TRIGger:CAN:XDATA:SDT:MIN <SdtPattern>

Specifies a service data unit type pattern, or sets the start value of a range.

Parameters:

<SdtPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 422

TRIGger:CAN:XDATA:SEC <SEC_Bit>

Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Parameters:

<SEC_Bit> ONE | ZERO | DC
*RST: DC

Usage: Asynchronous command

Manual operation: See "SEC" on page 423

TRIGger:CAN:XDATA:VCID:CONDition <VcidOperator>

Sets the comparison condition for the VCID to a specific value or a range.

Parameters:

<VcidOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with [TRIGger:CAN:XDATA:VCID:MIN](#).
INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with [TRIGger:CAN:XDATA:VCID:MIN](#) and [TRIGger:CAN:XDATA:VCID:MAX](#).
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "VCID" on page 423

TRIGger:CAN:XDATA:VCID:MAX <VcidPatternTo>

Sets the end value of a VCID range if [TRIGger:CAN:XDATA:VCID:CONDition](#) is set to INRange or OORange.

Parameters:

<VcidPatternTo> List of comma separated values

Usage: Asynchronous command

Manual operation: See "VCID" on page 423

TRIGger:CAN:XDATA:VCID:MIN <VcidPattern>

Specifies a VCID pattern, or sets the start value of a range.

Parameters:

<VcidPattern> List of comma separated values

Usage:

Asynchronous command

Manual operation:

See "[VCID](#)" on page 423

17.16.6.3 Filter

| | |
|---|-----|
| SBUS<sb>:CAN:FILTer:CHKall | 870 |
| SBUS<sb>:CAN:FILTer:CLR | 870 |
| SBUS<sb>:CAN:FILTer:INVert | 871 |
| SBUS<sb>:CAN:FILTer:RST | 871 |
| SBUS<sb>:CAN:FILTer:ENABle | 871 |
| SBUS<sb>:CAN:FILTer:BIT | 871 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT | 871 |
| SBUS<sb>:CAN:FILTer:DMAX | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 872 |
| SBUS<sb>:CAN:FILTer:DMIN | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 872 |
| SBUS<sb>:CAN:FILTer:DOPerator | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator | 872 |
| SBUS<sb>:CAN:FILTer:ERENable | 873 |
| SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle | 873 |
| SBUS<sb>:CAN:FILTer:FIENable | 873 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle | 873 |
| SBUS<sb>:CAN:FILTer:FRENable | 873 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle | 873 |
| SBUS<sb>:CAN:FILTer:IMAX | 874 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX | 874 |
| SBUS<sb>:CAN:FILTer:IMIN | 874 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN | 874 |
| SBUS<sb>:CAN:FILTer:IOPerator | 875 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator | 875 |

SBUS<sb>:CAN:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation:

See "[Check all, Clear, Invert, Reset](#)" on page 414

SBUS<sb>:CAN:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 414

SBUS<sb>:CAN:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 414

SBUS<sb>:CAN:FILTer:RST

Suffix:
 <sb> 1..4

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 414

SBUS<sb>:CAN:FILTer:ENABLE <Enable>

Enables the filtering on CAN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

SBUS<sb>:CAN:FILTer:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 415

SBUS<sb>:CAN:FILTER:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:CAN:FILTER:FRAME<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to INRange or OORANGE.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 415

SBUS<sb>:CAN:FILTER:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:CAN:FILTER:FRAME<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 415

SBUS<sb>:CAN:FILTER:DOPERator <Frame>,<Field>,<Operator>

SBUS<sb>:CAN:FILTER:FRAME<fr>:FLD<fl>:DOPERator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan |
INRanGe | OORanGe
*RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 415

SBUS<sb>:CAN:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 416

SBUS<sb>:CAN:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 415

SBUS<sb>:CAN:FILTer:FRENable <Frame>,<Enabler>

SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on CAN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Parameters:
 <Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "[Frame type](#)" on page 415

SBUS<sb>:CAN:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>
 Sets the end value of an index range if the operator is set to INRange.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 415

SBUS<sb>:CAN:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>
 Specifies the index, or sets the start value of an index range.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 415

SBUS<sb>:CAN:FILTER:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:CAN:FILTER:FRAME<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
 *RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 415

17.16.6.4 Decode results

| | |
|---------------------------------------|-----|
| SBUS<sb>:CAN:FCOunt? | 876 |
| SBUS<sb>:CAN:FRAME<fr>:ACKState? | 876 |
| SBUS<sb>:CAN:FRAME<fr>:ACKValue? | 876 |
| SBUS<sb>:CAN:FRAME<fr>:BYTE<o>:STATe? | 877 |
| SBUS<sb>:CAN:FRAME<fr>:BYTE<o>:VALue? | 877 |
| SBUS<sb>:CAN:FRAME<fr>:CSState? | 877 |
| SBUS<sb>:CAN:FRAME<fr>:CSValue? | 878 |
| SBUS<sb>:CAN:FRAME<fr>:DATA? | 878 |
| SBUS<sb>:CAN:FRAME<fr>:DLCState? | 878 |
| SBUS<sb>:CAN:FRAME<fr>:DLCValue? | 879 |
| SBUS<sb>:CAN:FRAME<fr>:FERCause? | 879 |
| SBUS<sb>:CAN:FRAME<fr>:IDState? | 879 |
| SBUS<sb>:CAN:FRAME<fr>:IDTYpe? | 880 |
| SBUS<sb>:CAN:FRAME<fr>:IDValue? | 880 |
| SBUS<sb>:CAN:FRAME<fr>:NDBYtes? | 880 |
| SBUS<sb>:CAN:FRAME<fr>:SDATa? | 881 |
| SBUS<sb>:CAN:FRAME<fr>:SDEXport? | 881 |
| SBUS<sb>:CAN:FRAME<fr>:START? | 881 |
| SBUS<sb>:CAN:FRAME<fr>:STATus? | 882 |
| SBUS<sb>:CAN:FRAME<fr>:STOP? | 882 |
| SBUS<sb>:CAN:FRAME<fr>:STUFf? | 882 |
| SBUS<sb>:CAN:FRAME<fr>:SYMBol? | 883 |
| SBUS<sb>:CAN:FRAME<fr>:TYPE? | 883 |
| SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:AF? | 884 |
| SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:PCRC? | 884 |
| SBUS<m>:CAN:FRAME<fr>:XDATa<o>:SBC? | 884 |
| SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:SDT? | 885 |
| SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:SEC? | 885 |
| SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:VCID? | 885 |
| SBUS<sb>:CAN:FRAME<fr>:FDATa<o>:ESI? | 886 |

| | |
|---------------------------------------|-----|
| SBUS<sb>:CAN:FRAME<fr>:FDATA<o>:BRS? | 886 |
| SBUS<sb>:CAN:FRAME<fr>:DBITrate? | 886 |
| SBUS<sb>:CAN:FRAME<fr>:NBITrate? | 887 |
| SBUS<sb>:CAN:FRAME<fr>:COUNT? | 887 |
| SBUS<sb>:CAN:FRAME<fr>:SBC? | 887 |
| SBUS<sb>:CAN:FRAME<fr>:XDATA<o>:FCRC? | 888 |

SBUS<sb>:CAN:FCOunt?

Returns the number of decoded frames for the CAN protocol analysis.

Suffix:

<sb> 1...4, index of the serial bus

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:ACKState?

Return the states of the acknowledgment field.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameAckState> OK | ERRor | UNDF
UNDF: Undefined
*RST: OK

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameAckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:BYTE<o>:STATe?

Returns the state of the specified byte.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <o> | * |
| | Selects the byte number. |

Return values:

| | |
|---------|--|
| <State> | OK EOFD ACKD NOACK CRCD CRC SERRror
FORM BTST UNKNown INComplete
UNDF: Undefined
*RST: OK |
|---------|--|

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:BYTE<o>:VALue?

Returns the value of the specified byte.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <o> | * |
| | Selects the byte number. |

Return values:

| | |
|---------|---|
| <Value> | Range: 0 to 18446744073709551615
Increment: 1
*RST: 0 |
|---------|---|

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:CSSTate?

Return the states of the checksum field (CRC).

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |

Return values:

| | |
|-----------------|-------------------------------|
| <ChecksumState> | OK ERRor UNDF
*RST: OK |
|-----------------|-------------------------------|

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<ChecksumValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:DATA?

Returns the data of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameData> Comma-separated list of values. The first value is the number of bytes, followed by the values of the data bytes.

Example:

```
BUS1:CAN:FRAME2:DATA?
--> 3,208,231,32
```

Returns the data of the second frame: the number of bytes is 3 data (first value).

Usage: Query only

SBUS<sb>:CAN:FRAME<fr>:DLCState?

Return the states of the state of data length code.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameDLCState> OK | ERRor | UNDF
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:DLCValue?

Returns the data length code of the selected frame - the number of data bytes in the frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameDLCValue> Range: 0 to 2047

Increment: 1

*RST: 0

Usage:

Query only

Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:FERCause?

Returns information on a form error, if the frame status query ([SBUS<sb>:CAN:FRAME<fr>:STATUS?](#)) returned a form error.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FormErrorCause> NONE | CRCDerror | ACKDerror | FSBE | RESerror

CRCDerror = CRC delimiter error

ACKDerror = ACK delimiter error

FSBE = fixed stuff bit error (CAN FD ISO only)

RESerror = reserved bit error

*RST: NONE

Usage:

Query only

Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:IDStAtE?

Return the states of the identifier state.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<IdtfSt> OK | ERRor | UNDF

UNDF: Undefined

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:IDType?

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <IdentifierType> B11 | B29
 B11: standard format, 11 bit
 B29: extended format, 29 bit
 *RST: B11

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <IdtFVal> Range: 0 to 536870911
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:NDBYtes?

Returns the number of data bytes.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <NDBytes> Range: 0 to 2048
 Increment: 1
 *RST: 1

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:SDATa?

Returns the symbolic data of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <SymbolicData> Comma-separated list of values. The first value is the number of bytes, followed by the values of the data bytes.

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:SDEXport?

Returns the symbolic data of the frame in export format.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <SymbolicData>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:START?

Return the start time of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<FrameState> OK | EOFD | ACKD | NOACK | CRCd | CRC | SERRror | FORM | BTST | UNKNown | INComplete
OK: the frame is valid.
EOFD: Wrong end of frame.
ACKD: Wrong ACK delimiter occurred.
NOACK: Acknowledge is missing.
CRCd: Wrong CRC delimiter occurred.
CRC: Cyclic redundancy check failed.
SERRror: Stuff count error (CAN FD ISO only).
FORM: Fixed-bit form error.
BTST: Bit stuffing error occurred.
INSufficient: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:STOP?

Return the stop time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:STUFF?

Returns the value of the stuff count field.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<StuffCount> Range: 0 to 7
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:SYMBOL?

Returns the symbol of the specified frame if the label list is enabled.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<Label> String with symbol of the identifier

Example: BUS:CAN:FRAME:SYMBOL?

Response: Temperature

Usage: Query only

SBUS<sb>:CAN:FRAME<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor |
OVERload | UNDEFINED

CBFF: classical base frame format data

CBFRremote: classical base frame format remote

CEFF: classical extended frame format data

CEFRremote: classical extended frame format remote

FBFF: FD base frame format

FEFF: FD extended frame format

XLFF: XL frame format

ERR: error

OVLD: overload

*RST: CBFF

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:AF?

Returns the value of the acceptance field for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the field

Return values:

<AF> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:PCRC?

Returns the value of the preamble cyclic redundant check (PCRC) for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the field

Return values:

<PCRC> Range: 0 to 65535
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<m>:CAN:FRAME<fr>:XDATa<o>:SBC?

Returns the value of the stuff bit count (SBC) field for the selected CAN XL frame.

Suffix:

<m> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the field

Return values:

<SBC> Range: 0 to 7
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:SDT?

Returns the value of the service data unit field for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame
<o> index of the field

Return values:

<SDT> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:SEC?

Returns the value of the simple extended content (SEC) field for the selected CAN XL frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame
<o> index of the field

Return values:

<SEC> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:VCID?

Returns the value of the VCID field for the selected CAN XL frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame
<o> index of the field

Return values:

<VCID> Range: 0 to 255
 Increment: 1
 *RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:FDATa<o>:ESI?

Returns the value of the error state indicator (ESI) field for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame
<o> index of the field

Return values:

<ESI> Range: 0 to 1
 Increment: 1
 *RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:FDATa<o>:BRS?

Returns the value of the bit rate switch (BRS) field for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame
<o> index of the field

Return values:

<BRS> Range: 0 to 1
 Increment: 1
 *RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:DBITrate?

Returns the data bit rate of the frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<DataBitRate> Range: 0 to 100000000000
 Increment: 100
 *RST: 0
 Default unit: bps

Usage:

Query only
 Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:NBITrate?

Returns the nominal bit rate of the frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<NominalBitRate> Range: 0 to 100000000000
 Increment: 100
 *RST: 0
 Default unit: bps

Usage:

Query only
 Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:COUNT?

Returns the number of decoded frames of the acquisition.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<Count>

Usage:

Query only
 Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:SBC?

Returns the value of the stuff bit count field.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<SBC> Range: 0 to 15
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:CAN:FRAME<fr>:XDATa<o>:FCRC?

Returns the value of the frame CRC for the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the field

Return values:

<FCRC> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

17.16.7 LIN (option R&S MXO4-K520)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|--|-----|
| • Configuration | 888 |
| • Trigger | 891 |
| • Filter | 894 |
| • Decode results | 899 |

17.16.7.1 Configuration

| | |
|--|-----|
| SBUS<sb>:LIN:BITRate | 889 |
| SBUS<sb>:LIN:DATA:HYSTeresis | 889 |
| SBUS<sb>:LIN:DATA:SOURce | 889 |
| SBUS<sb>:LIN:DATA:THReshold | 889 |
| SBUS<sb>:LIN:POLarity | 890 |
| SBUS<sb>:LIN:STANdard | 890 |
| SBUS<sb>:LIN:POSition | 890 |
| SBUS<sb>:LIN:SCALe | 890 |

SBUS<sb>:LIN:BITRate <Bitrate>

Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Bitrate> Range: 1000 to 20000000
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See ["Bit rate"](#) on page 434

SBUS<sb>:LIN:DATA:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the data channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See ["Threshold"](#) on page 434

SBUS<sb>:LIN:DATA:SOURce <DataSource>

Sets the waveform of the data line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<DataSource> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See ["Data"](#) on page 433

SBUS<sb>:LIN:DATA:THReshold <Threshold>

Sets a user-defined threshold value for the data channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command**Manual operation:** See "[Threshold](#)" on page 434**SBUS<sb>:LIN:POLarity <Polarity>**

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic 1.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Polarity> IDLLow | IDLHigh

*RST: IDLHigh

Usage: Asynchronous command**Manual operation:** See "[Polarity](#)" on page 434**SBUS<sb>:LIN:STANdard <Standard>**

Selects the version of the LIN standard.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Standard> V1X | V2X | J2602 | AUTO

*RST: AUTO

Usage: Asynchronous command**Manual operation:** See "[LIN standard](#)" on page 433**SBUS<sb>:LIN:POSition <LIN position>**

Sets the vertical position of the LIN signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<LIN position>

Usage: Asynchronous command**SBUS<sb>:LIN:SCALe <LIN scale>**

Set the vertical scale of the indicated LIN signal.

Suffix:
 <sb> 1...4, index of the serial bus

Parameters:
 <LIN scale>

Usage: Asynchronous command

17.16.7.2 Trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENT<ev>:SOURCE` before sending the bus-specific trigger commands.

| | |
|---|-----|
| <code>TRIGger:LIN:TYPE</code> | 891 |
| <code>TRIGger:LIN:CHKSError</code> | 892 |
| <code>TRIGger:LIN:DCondition</code> | 892 |
| <code>TRIGger:LIN:DMIN</code> | 892 |
| <code>TRIGger:LIN:DPOsition</code> | 892 |
| <code>TRIGger:LIN:ICONdition</code> | 893 |
| <code>TRIGger:LIN:IMAX</code> | 893 |
| <code>TRIGger:LIN:IMIN</code> | 893 |
| <code>TRIGger:LIN:IPERror</code> | 893 |
| <code>TRIGger:LIN:SYERror</code> | 894 |

`TRIGger:LIN:TYPE` <Type>

Selects the trigger type for LIN analysis.

Parameters:

<Type> STARTframe | ID | IDDT | WKFR | ERRC

STARTframe

Start of the frame. Triggers on the stop bit of the sync field.

ID

Sets the trigger to one specific identifier or an identifier range.

IDDT

Combination of identifier and data conditions.

WKFR

Wake-up frame.

ERRC

Error condition. Define the error types with:

`TRIGger:LIN:CHKSError`

`TRIGger:LIN:IPERror`

`TRIGger:LIN:SYERror`

*RST: STARTframe

Usage: Asynchronous command

Manual operation: See "Type" on page 435

TRIGger:LIN:CHKSError <ChecksumError>

Triggers on checksum errors.

Available, if **TRIGger:LIN:TYPE** is set to **ERRC**.

Parameters:

<ChecksumError> ON | OFF
*RST: ON

Usage: Asynchronous command

Manual operation: See "[Error conditions](#)" on page 437

TRIGger:LIN:DCondition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:

<DataOperator> EQUal | NEQal | LTHan | LETHan | GTHan | GETHan
EQUal | NEQal | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than,
greater or equal than. These conditions require one data pattern
to be set with **TRIGger:LIN:DMIN**.
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "[Data setup: Condition, Pattern, Position](#)" on page 436

TRIGger:LIN:DMIN <DataPattern>

Specifies a data pattern, or sets the start value of a data pattern range.

Parameters:

<DataPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "[Data setup: Condition, Pattern, Position](#)" on page 436

TRIGger:LIN:DPosition <DataPosition>

Sets the number of data events that are ignored, before trigger condition check of the data starts.

Parameters:

<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "[Data setup: Condition, Pattern, Position](#)" on page 436

TRIGger:LIN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:

<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with [TRIGger:LIN:IMIN](#).

INRange | OORange

In range / out of range: Set the minimum and maximum value of the range with [TRIGger:LIN:IMIN](#) and [TRIGger:LIN:IMAX](#).

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "[Identifier setup: Condition, Frame ID min, Frame ID max](#)" on page 436

TRIGger:LIN:IMAX <IdPattern>

Sets the end value of an identifier range if [TRIGger:LIN:ICONdition](#) is set to INRange or OORange.

Parameters:

<IdPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "[Identifier setup: Condition, Frame ID min, Frame ID max](#)" on page 436

TRIGger:LIN:IMIN <IdPattern>

Specifies a secondary identifier pattern, or sets the start value of an identifier range.

Parameters:

<IdPattern> List of comma separated values

Usage: Asynchronous command

Manual operation: See "[Identifier setup: Condition, Frame ID min, Frame ID max](#)" on page 436

TRIGger:LIN:IPERror <IdParityError>

Triggers if an error occurs in the identifier parity bits. These are the bits 6 and 7 of the identifier.

Available, if [TRIGger:LIN:TYPE](#) is set to ERRC.

Parameters:

<IdParityError> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 437

TRIGger:LIN:SYERror <SyncError>

Triggers if a synchronization error occurs.

Available, if **TRIGger:LIN:TYPE** is set to **ERRC**.

Parameters:

<SyncError> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 437

17.16.7.3 Filter

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >Id* value you can use one of the following commands:

- **SBUS:LIN:FILTer:FRAMe1:FLD1:DMIN 00**
 Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- **SBUS:LIN:FILTer:DMIN "Data", "Address", 00**
 Defines the parameter by using the frame and field name.

| | |
|--|-----|
| SBUS<sb>:LIN:FILTer:CHKall | 895 |
| SBUS<sb>:LIN:FILTer:CLR | 895 |
| SBUS<sb>:LIN:FILTer:INVert | 895 |
| SBUS<sb>:LIN:FILTer:RST | 895 |
| SBUS<sb>:LIN:FILTer:BIT | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT | 896 |
| SBUS<sb>:LIN:FILTer:DMAX | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 896 |
| SBUS<sb>:LIN:FILTer:DMIN | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 896 |
| SBUS<sb>:LIN:FILTer:DOPerator | 897 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator | 897 |
| SBUS<sb>:LIN:FILTer:ERENable | 897 |
| SBUS<sb>:LIN:FILTer:ERRor<n>:ENABLE | 897 |
| SBUS<sb>:LIN:FILTer:FIENable | 897 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABLE | 897 |
| SBUS<sb>:LIN:FILTer:FRENable | 898 |

| | |
|--|-----|
| SBUS<sb>:LIN:FILTER:FRAME<fr>:ENABLE..... | 898 |
| SBUS<sb>:LIN:FILTER:IMAX..... | 898 |
| SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IMAX..... | 898 |
| SBUS<sb>:LIN:FILTER:IMIN..... | 898 |
| SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IMIN..... | 898 |
| SBUS<sb>:LIN:FILTER:IOPERATOR..... | 899 |
| SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IOPERATOR..... | 899 |

SBUS<sb>:LIN:FILTER:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 438

SBUS<sb>:LIN:FILTER:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 438

SBUS<sb>:LIN:FILTER:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all](#), [Clear](#), [Invert](#), [Reset](#)" on page 438

SBUS<sb>:LIN:FILTER:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 438

SBUS<sb>:LIN:FILTER:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO

*RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `ORANGE`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:LIN:FILTER:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan |
INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:ERENable <ErrorName>,<Enabler>

SBUS<sb>:LIN:FILTER:ERRor<n>:ENABLE <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 440

SBUS<sb>:LIN:FILTER:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:LIN:FILTER:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:FREnable <Frame>,<Enabler>

SBUS<sb>:LIN:FILTER:FRAME<fr>:ENABLE <Enable>

Enables the filtering on LIN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Frame type"](#) on page 439

SBUS<sb>:LIN:FILTER:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 439

SBUS<sb>:LIN:FILTER:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 439

SBUS<sb>:LIN:FILTER:IOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:LIN:FILTER:FRAME<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGE
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 439

17.16.7.4 Decode results

The following chapter describes the commands used for querying the results of the LIN decoding.

| | |
|---|-----|
| SBUS<sb>:LIN:FCOunt?..... | 900 |
| SBUS<sb>:LIN:FRAME<fr>:BITRate?..... | 900 |
| SBUS<sb>:LIN:FRAME<fr>:BYTE<o>:STATe?..... | 900 |
| SBUS<sb>:LIN:FRAME<fr>:BYTE<o>:VALue?..... | 900 |
| SBUS<sb>:LIN:FRAME<fr>:BYTE<o>:COUnT?..... | 901 |
| SBUS<sb>:LIN:FRAME<fr>:BYTE<o>:FVALue?..... | 901 |
| SBUS<sb>:LIN:FRAME<fr>:BYTE<o>:LABel?..... | 901 |
| SBUS<sb>:LIN:FRAME<fr>:CSValue?..... | 902 |
| SBUS<sb>:LIN:FRAME<fr>:DATA?..... | 902 |
| SBUS<sb>:LIN:FRAME<fr>:IDPValue?..... | 902 |
| SBUS<sb>:LIN:FRAME<fr>:IDSTate?..... | 903 |
| SBUS<sb>:LIN:FRAME<fr>:IDValue?..... | 903 |
| SBUS<sb>:LIN:FRAME<fr>:STARt?..... | 903 |
| SBUS<sb>:LIN:FRAME<fr>:STATus?..... | 904 |
| SBUS<sb>:LIN:FRAME<fr>:STOP?..... | 904 |
| SBUS<sb>:LIN:FRAME<fr>:PIDentifier?..... | 904 |

SBUS<sb>:LIN:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1...4, index of the serial bus

Return values:

<Count> Total number of decoded frames.

Usage:

Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage:

Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:STATe?

Returns the state of the specified byte.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte

Return values:

<FrameByteState> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror |
LNERror | UNK | INComplete
*RST: OK

Usage:

Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:VALue?

Returns the value of the specified byte.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the byte

Return values:

<FrameByteValue> Range: 0 to 18446744073709551615
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:COUNT?

Returns the number of bytes in the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the byte

Return values:

<Count>

Usage:

Query only
 Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:FVALue?

Returns the formatted value of the specified byte.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <o> index of the byte

Return values:

<FormattedValue>

Usage:

Query only
 Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:LABeI?

Returns the label of the bytes in the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte

Return values:

<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAME<fr>:CSValue?

Returns the checksum value of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<ChecksumValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAME<fr>:DATA?

Returns the data bytes of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Example: BUS:LIN:FRAME4:DATA?
<-- 4,118,39,71,123

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAME<fr>:IDPValue?

Returns the value of the identifier parity bits of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<IdtfParVal> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDStAtE?

Returns the identifier state of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<IdtfSt> OK | UART | CHCKsum | VERS | LENer | SPERror | PRERror |
SYERror | WAKeup | CPERror | INComplete | INER
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDVAlue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<IdtfVal> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:START?

Returns the start time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<FrameState> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror |
LNERror | UNK | INComplete
WAKeup: wake-up frame.
CHCKsum: checksum error
PRERror: parity error in identifier
STERror: stop error
SYERror: synchronization error
LNERror: unexpected length
UNK: unknown error
*RST: OK

Usage:

Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage:

Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:PIDentifier?

Returns the protected identifier of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<Protected identifier> Range: 0 to 255
 Increment: 1
 *RST: 0

Usage:

Query only
 Asynchronous command

17.16.8 SPMI (option R&S MXO4-K550)

Before MXO 4 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

| | |
|--|-----|
| • Configuration | 905 |
| • Filter | 909 |
| • Decode results | 915 |

17.16.8.1 Configuration

| | |
|--|-----|
| SBUS<sb>:SPMI:GIDValue | 905 |
| SBUS<sb>:SPMI:GSIDenable | 906 |
| SBUS<sb>:SPMI:GTCHenable | 906 |
| SBUS<sb>:SPMI:GTWDith | 906 |
| SBUS<sb>:SPMI:SCLK:HYSteresis | 907 |
| SBUS<sb>:SPMI:SCLK:SOURce | 907 |
| SBUS<sb>:SPMI:SCLK:THReshold | 907 |
| SBUS<sb>:SPMI:SDATa:HYSteresis | 907 |
| SBUS<sb>:SPMI:SDATa:SOURce | 908 |
| SBUS<sb>:SPMI:SDATa:THReshold | 908 |
| SBUS<sb>:SPMI:POSition | 908 |
| SBUS<sb>:SPMI:SCALe | 908 |

SBUS<sb>:SPMI:GIDValue <GSID>

Sets a value for the group sub index. Available, if `SBUS<sb>:SPMI:GSIDenable` is set to ON.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<GSID> Range: 0 to 15
 Increment: 1
 *RST: 0

Usage:

Asynchronous command

Manual operation: See "Use GSID, GSID (hex)" on page 446

SBUS<sb>:SPMI:GSIDenable <UseGSID>

Enables the use of the group sub ID (GSID). You can set the GSID with [SBUS<sb>:SPMI:GIDValue](#).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<UseGSID> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Use GSID, GSID \(hex\)](#)" on page 446

SBUS<sb>:SPMI:GTCHenable <UseGlitchFilter>

Enables the glitch filter. A glitch filter can help to filter out short duration voltage spikes/glitches that can occur on the communication line.

You can set the glitch filter width with [SBUS<sb>:SPMI:GTWDith](#).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<UseGlitchFilter> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Glitch filter, Glitch width](#)" on page 446

SBUS<sb>:SPMI:GTWDith <GlitchFilterWdt>

Sets the glitch width. Any signal transitions with a duration smaller than this value will be considered a glitch and filtered out.

This is available, if [SBUS<sb>:SPMI:GTCHenable](#) is set to ON.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<GlitchFilterWdt> Range: 1E-15 to 1000000000
Increment: 1E-10
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Glitch filter, Glitch width](#)" on page 446

SBUS<sb>:SPMI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 447

SBUS<sb>:SPMI:SCLK:SOURce <ClockSource>

Sets the source of the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ClockSource> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[SCLK](#)" on page 446

SBUS<sb>:SPMI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the clock line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 447

SBUS<sb>:SPMI:SDATa:HYSTeresis <SDATA Hyst>

Sets a value for the hysteresis for the source data channel.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SDATA Hyst>

Usage: Asynchronous command

Manual operation: See ["Threshold"](#) on page 447

SBUS<sb>:SPMI:SDATa:SOURce <DataSource>

Sets the source of the data line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<DataSource> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See ["SDATA"](#) on page 445

SBUS<sb>:SPMI:SDATa:THReshold <SDATA Thres>

Sets a user-defined threshold value for the source data line.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SDATA Thres>

Usage: Asynchronous command

Manual operation: See ["Threshold"](#) on page 447

SBUS<sb>:SPMI:POSition <SPMI position>

Sets the vertical position of the SPMI signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPMI position>

Usage: Asynchronous command

SBUS<sb>:SPMI:SCALe <SPMI scale>

Sets the vertical position of the SPMI signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<SPMI scale>

Usage: Asynchronous command

17.16.8.2 Filter

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >Id* value you can use one of the following commands:

- `SBUS:SPMI:FILTer:FRAMe1:FLD1:DMIN 00`
Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SPMI:FILTer:DMIN "Data", "Address", 00`
Defines the parameter by using the frame and field name.

| | |
|---|-----|
| <code>SBUS<sb>:SPMI:FILTer:CHKall</code> | 909 |
| <code>SBUS<sb>:SPMI:FILTer:CLR</code> | 910 |
| <code>SBUS<sb>:SPMI:FILTer:INVert</code> | 910 |
| <code>SBUS<sb>:SPMI:FILTer:RST</code> | 910 |
| <code>SBUS<sb>:SPMI:FILTer:CHKall</code> | 910 |
| <code>SBUS<sb>:SPMI:FILTer:CLR</code> | 910 |
| <code>SBUS<sb>:SPMI:FILTer:INVert</code> | 911 |
| <code>SBUS<sb>:SPMI:FILTer:RST</code> | 911 |
| <code>SBUS<sb>:SPMI:FILTer:BIT</code> | 911 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT</code> | 911 |
| <code>SBUS<sb>:SPMI:FILTer:DMAX</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:DMIN</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:DOPerator</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator</code> | 912 |
| <code>SBUS<sb>:SPMI:FILTer:ERENable</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:IOPerator</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:IMIN</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN</code> | 913 |
| <code>SBUS<sb>:SPMI:FILTer:IMAX</code> | 914 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX</code> | 914 |
| <code>SBUS<sb>:SPMI:FILTer:FRENable</code> | 914 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle</code> | 914 |
| <code>SBUS<sb>:SPMI:FILTer:FIENable</code> | 914 |
| <code>SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle</code> | 914 |

SBUS<sb>:SPMI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 448

SBUS<sb>:SPMI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 448

SBUS<sb>:SPMI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 448

SBUS<sb>:SPMI:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 448

SBUS<sb>:SPMI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 448

SBUS<sb>:SPMI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 448

SBUS<sb>:SPMI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 448

SBUS<sb>:SPMI:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:
 <sb> 1...4, index of the serial bus

Usage: Setting only
 Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 448

SBUS<sb>:SPMI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <BitState> ONE | ZERO
 *RST: ZERO

Usage: Asynchronous command

Manual operation: See "[Edit](#)" on page 449

SBUS<sb>:SPMI:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to INRange or OORANGE.

You can set the operator with **SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator**.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 449

SBUS<sb>:SPMI:FILTer:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 449

SBUS<sb>:SPMI:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQUal | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 449

SBUS<sb>:SPMI:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 450

SBUS<sb>:SPMI:FILTer:IOperator <Frame>,<Field>,<Operator>

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOperator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGE

*RST: INRange

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 449

SBUS<sb>:SPMI:FILTer:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 449

SBUS<sb>:SPMI:FILTer:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:SPMI:FILTer:FRAME<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:SPMI:FILTer:FRAME<fr>:FLD<fl>:IOperator`.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 449

SBUS<sb>:SPMI:FILTer:FRENAble <Frame>,<Enabler>

SBUS<sb>:SPMI:FILTer:FRAME<fr>:ENABLe <Enable>

Enables the filtering on SPMI frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Frame type"](#) on page 449

SBUS<sb>:SPMI:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:SPMI:FILTer:FRAME<fr>:FLD<fl>:ENABLe <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 449

17.16.8.3 Decode results

| | |
|---|-----|
| SBUS<sb>:SPMI:FRAMe<fr>:ADDRess? | 915 |
| SBUS<sb>:SPMI:FRAMe<fr>:BC? | 915 |
| SBUS<sb>:SPMI:FRAMe<fr>:DATA? | 916 |
| SBUS<sb>:SPMI:FRAMe<fr>:FDCount? | 916 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue? | 916 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:RBRate? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:SA? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:START? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:STATus? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:STOP? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:TYPE? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:WBRate? | 920 |

SBUS<sb>:SPMI:FRAMe<fr>:ADDRess?

Returns the address of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameADDR> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:BC?

Returns the BC of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameBC> Range: 0 to 65535
 Increment: 1
 *RST: 0

Usage: Query only
 Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:DATA?

Returns the data value of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <FrameData>

Usage: Query only

SBUS<sb>:SPMI:FRAME<fr>:FDCOUNT?

Returns the FD count of the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <Count>

Usage: Query only
 Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:FLD<fl>:FVALUE?

Returns the formatted value of the specified byte.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Return values:
 <FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:FLD<fl>:LABEL?

Returns the label of the fields in the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Return values:
 <Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:FLD<fl>:STATE?

Returns the overall state of the frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Return values:
 <State> OK | NOReponse | ACKError | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete
 *RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Return values:
 <Value> Range: 0 to 18446744073709551615
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:RBRate?

Returns the read bit rate of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameRBR> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:SPMI:FRAME<fr>:SA?

Returns the address of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameSA> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAME<fr>:START?

Returns the start time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameState> OK | NOReponse | ACKerror | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete
*RST: OK

Usage:

Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage:

Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:TYPE?

Returns the frame type.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameType> RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | MAWR | MARD | BMRD | BSRD | TBOW | REST | SLEP | SHUT | WAK | AUTH | INV | UNKN | ARB
RZWR: register 0 write
RWR: register write
RRD: register read
ERWR: extended register write
ERRD: extended register read
ERWL: extended register write long

ERRL: extended register read long
 MAWR: main write
 MARD: main read
 BMRD: device descriptor block main read
 BSRD: device descriptor block sub read
 TBOW: transfer bus ownership
 REST: reset
 SLEP: sleep
 SHUT: shutdown
 WAK: wakeup
 AUTH: authenticate
 INV: invalid
 UNKN: unknown
 ARB: arbitration frame
 *RST: RZWR

Usage: Query only
 Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:WBRate?

Returns the write bit rate of the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameWBR> Range: 0 to 100000000000
 Increment: 1
 *RST: 0
 Default unit: bps

Usage: Query only

17.16.9 10BASE-T1S (option R&S MXO4-K560)

- [Configuration](#).....920
- [Filter](#)..... 923
- [Decode results](#)..... 928

17.16.9.1 Configuration

[SBUS<sb>:TNOS:HYSTeresis](#).....921
[SBUS<sb>:TNOS:POSition](#)..... 921
[SBUS<sb>:TNOS:SCALe](#)..... 921
[SBUS<sb>:TNOS:SOURce](#)..... 921
[SBUS<sb>:TNOS:SYMBols](#)..... 922

| | |
|------------------------------------|-----|
| SBUS<sb>:TNOS:THReshold:LOWer..... | 922 |
| SBUS<sb>:TNOS:THReshold:UPPer..... | 922 |
| SBUS<sb>:TNOS:NEWList..... | 922 |

SBUS<sb>:TNOS:HYSTeresis <Hysteresis>

Sets a value for the hysteresis.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 454

SBUS<sb>:TNOS:POSition <TENBTO position>

Sets the vertical position of the 10BASE-T1S signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<TENBTO position>

Usage: Asynchronous command

SBUS<sb>:TNOS:SCALe <TENBTO scale>

Set the vertical scale of the indicated 10BASE-T1S signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<TENBTO scale>

Usage: Asynchronous command

SBUS<sb>:TNOS:SOURce <Source>

Selects the source for the 10BASE-T1S protocol. Only analog channels can be used.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Source> <char_data> | C1 | C2 | C3 | C4

Usage: Asynchronous command

Manual operation: See "[Source](#)" on page 453

SBUS<sb>:TNOS:SYMBOLs <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ShowSymbols> ON | OFF

*RST: OFF

Usage: Asynchronous command

SBUS<sb>:TNOS:THReshold:LOWer <Lower Thres>

Sets a lower threshold.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Lower Thres>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 454

SBUS<sb>:TNOS:THReshold:UPPer <Upper Thres>

Sets an upper threshold.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Upper Thres>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 454

SBUS<sb>:TNOS:NEWLlist <FileName>

Loads a symbol list file.

Suffix:

<sb> 1...4, index of the serial bus

Setting parameters:

<FileName> String parameter with path and file name.

Example:

```
SBUS1:TNOS:NEWLlist
'/home/storage/userData/Protocol/TNOS.csv'
SBUS1:TNOS:SYMBOLs ON
```

Usage: Setting only
Asynchronous command

17.16.9.2 Filter

There are two commands for each parameter, that you can use for defining the 10BASE-T1S settings.

For example, to set the *Frame type =Data > Field =Id >Id* value you can use one of the following commands:

- `SBUS:TNOS:FILTer:FRAMe1:FLD1:DMIN 00`
Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:TNOS:FILTer:DMIN "Data", "Address", 00`
Defines the parameter by using the frame and field name.

| | |
|---|-----|
| <code>SBUS<sb>:TNOS:FILTer:CHKall</code> | 923 |
| <code>SBUS<sb>:TNOS:FILTer:CLR</code> | 924 |
| <code>SBUS<sb>:TNOS:FILTer:RST</code> | 924 |
| <code>SBUS<sb>:TNOS:FILTer:INVert</code> | 924 |
| <code>SBUS<sb>:TNOS:FILTer:BIT</code> | 924 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT</code> | 924 |
| <code>SBUS<sb>:TNOS:FILTer:DMAX</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:DMIN</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:DOPerator</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator</code> | 925 |
| <code>SBUS<sb>:TNOS:FILTer:ERENable</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABLE</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:FIENable</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABLE</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:IMAX</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX</code> | 926 |
| <code>SBUS<sb>:TNOS:FILTer:IMIN</code> | 927 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN</code> | 927 |
| <code>SBUS<sb>:TNOS:FILTer:IOPerator</code> | 927 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator</code> | 927 |
| <code>SBUS<sb>:TNOS:FILTer:FRENable</code> | 928 |
| <code>SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABLE</code> | 928 |

SBUS<sb>:TNOS:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1...4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 455

SBUS<sb>:TNOS:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 455

SBUS<sb>:TNOS:FILTer:RST

Resets the state of the selected frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 455

SBUS<sb>:TNOS:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 455

SBUS<sb>:TNOS:FILTer:BIT <Frame>,<Field>,<Bit>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<BitState> ONE | ZERO

*RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 456

SBUS<sb>:TNOS:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `ORANGE`.

You can set the operator with `SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 456

SBUS<sb>:TNOS:FILTer:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 456

SBUS<sb>:TNOS:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan |
 INRange | OORange
 *RST: EQUal

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 456

SBUS<sb>:TNOS:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABLE <Enable>

Suffix:

<sb> 1..4

<n> *

Parameters:

<Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 457

SBUS<sb>:TNOS:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 456

SBUS<sb>:TNOS:FILTer:IMAX <Frame>,<Field>,<Data>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to INRange.

You can set the operator with [SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOperator](#).

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 456

SBUS<sb>:TNOS:FILTer:IMIN <Frame>,<Field>,<Data>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 456

SBUS<sb>:TNOS:FILTer:IOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGE
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 456

SBUS<sb>:TNOS:FILTer:FRENAble <Frame>,<Enabler>

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABLe <Enable>

Enables the filtering on 10Base-T1S frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 456

17.16.9.3 Decode results

| | |
|---|-----|
| SBUS<sb>:TNOS:FCOunt? | 928 |
| SBUS<sb>:TNOS:FRAMe<fr>:BCOunt? | 929 |
| SBUS<sb>:TNOS:FRAMe<fr>:BITRate? | 929 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:COUNt? | 929 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:FVALue? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:LABel? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:STATe? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:VALue? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:COUNt? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:CRC? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:DATA? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:DTADdress? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:FCRC? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:FDATa? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FDAddress? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FSRAddress? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FTPLentH? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:SRADdress? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:STARt? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:STATus? | 935 |
| SBUS<sb>:TNOS:FRAMe<fr>:STOP? | 935 |
| SBUS<sb>:TNOS:FRAMe<fr>:TPLentH? | 936 |
| SBUS<sb>:TNOS:FRAMe<fr>:TYPE? | 936 |

SBUS<sb>:TNOS:FCOunt?

Suffix:

<sb> 1..4

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BCOunt?

Returns the number of bytes in the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<PrimaryBitRate> Range: 0 to 100000000000

Increment: 1

*RST: 0

Default unit: bps

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:COUNT?

Returns the number of bytes in the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte

Return values:

<Count>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:FVALue?

Returns the formatted value of the specified byte.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <o> | index of the byte |

Return values:

<FormattedValue>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:LABeI?

Returns the label of the specified byte.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <o> | index of the byte |

Return values:

<Label>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:STATe?

Returns the state of the specified byte.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <fr> | index of the frame |
| <o> | index of the byte |

Return values:

<FrameByteState> OK | EPRMble | ESFD | EESD | ECRC | INComplete

EPRMble: preamble error, the hex value of the preamble field is different from 0x5555555555555555 (56 alternating 0's and 1's).

ESFD: SFD error, the hex value of the SFD field is different from 0xD5

EESD: ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC: CRC error, the value of the FCS field does not match the calculated CRC.

INComplete: the frame is incomplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:VALue?

Returns the value of the specified byte.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<o> index of the byte

Return values:

<FrameByteValue> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:COUNT?

Returns the number of decoded frames for 10BASE-T1S.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:CRC?

Returns the CRC for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DATA?

Returns the data for the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTADress?

Returns the destination address for the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <DestAddress> Range: 0 to 18446744073709551615
 Increment: 1
 *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?

Returns the destination symbol for the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:
 <DestSymbol>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FCRC?

Returns the formatted CRC for the specified frame.

Suffix:
 <sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAME<fr>:FDATa?

Returns the formatted data for the specified frame.

Suffix:
<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAME<fr>:FDTaddress?

Returns the formatted destination address of the specified frame.

Suffix:
<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAME<fr>:FSRaddress?

Returns the formatted SRC address for the specified frame.

Suffix:
<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FTPLentH?

Returns the formatted type length for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FormattedTypLenth>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRADdress?

Returns the source address for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<SourceAddress> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol?

Returns the frame of the source symbol.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<SourceSymbol>

Usage:

Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage:

Query only
 Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STATus?

Returns the state of the frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameState> OK | EPRMble | ESFD | EESD | ECRC | INComplete
 EPRMble: preamble error, the hex value of the preamble field is different from 0x5555555555555555 (56 alternating 0's and 1's).
 ESFD: SFD error, the hex value of the SFD field is different from 0xD5
 EESD: ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"
 ECRC: CRC error, the value of the FCS field does not match the calculated CRC.
 INComplete: the frame is incomplete
 *RST: OK

Usage:

Query only
 Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus
 <fr> index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
 Increment: 1E-10
 *RST: 0
 Default unit: s

Usage:

Query only
 Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TPLentH?

Returns the type length for the specified frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<TypeLentH> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TYPE?

Returns the type of the frame.

Suffix:

<sb> 1...4, index of the serial bus
<fr> index of the frame

Return values:

<FrameType> MAC | BEACon | UNKN
*RST: MAC

Usage: Query only
Asynchronous command

17.16.10 ARINC 429 (option R&S MXO4-K530)

- [Configuration](#).....936
- [Filter](#).....939
- [Decode results](#).....945

17.16.10.1 Configuration

| | |
|---|-----|
| SBUS<sb>:ARINc:BRMode | 937 |
| SBUS<sb>:ARINc:BRValue | 937 |
| SBUS<sb>:ARINc:POLarity | 937 |
| SBUS<sb>:ARINc:SOURce | 937 |
| SBUS<sb>:ARINc:THReshold:HIGH | 938 |
| SBUS<sb>:ARINc:THReshold:HYSTeresis | 938 |
| SBUS<sb>:ARINc:THReshold:LOW | 938 |
| SBUS<sb>:ARINc:NEWList | 939 |
| SBUS<sb>:ARINc:SYMBols | 939 |

SBUS<sb>:ARINc:BRMode <BitRateMode>

Sets the bit rate mode to high or low speed. You can set an exact bitrate value with [SBUS<sb>:ARINc:BRValue](#).

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<BitRateMode> HIGH | LOW
*RST: HIGH

Usage: Asynchronous command

Manual operation: See "[Bit rate mode, Bit rate](#)" on page 462

SBUS<sb>:ARINc:BRValue <BitRateValue>

Sets the number of transmitted bits per second.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<BitRateValue> Range: 10000 to 110000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "[Bit rate mode, Bit rate](#)" on page 462

SBUS<sb>:ARINc:POLarity <Polarity>

Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<Polarity> ALEG | BLEG
*RST: ALEG

Usage: Asynchronous command

Manual operation: See "[Polarity](#)" on page 462

SBUS<sb>:ARINc:SOURce Source

Sets the channel for the signal source.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9
| D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 |
R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "[Source](#)" on page 461

SBUS<sb>:ARINc:THReshold:HIGH <Upper threshold>

Sets the upper threshold level of the signal.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<Upper threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 463

SBUS<sb>:ARINc:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 463

SBUS<sb>:ARINc:THReshold:LOW <Lower threshold>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1...4, index of the serial bus

Parameters:
<Lower threshold>

Usage: Asynchronous command

Manual operation: See "[Threshold](#)" on page 463

SBUS<sb>:ARINC:NEWList <FileName>

Loads a symbol list file.

Suffix:

<sb> 1...4, index of the serial bus

Setting parameters:

<FileName> String parameter with path and file name.

Example:

```
SBUS1:ARIN:NEWList
'/home/storage/userData/Protocol/ARINC.csv'
SBUS1:ARIN:SYMBOLS ON
```

Usage:

Setting only
Asynchronous command

Manual operation: See ["Show symbols"](#) on page 463

SBUS<sb>:ARINC:SYMBOLS <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1...4, index of the serial bus

Parameters:

<ShowSymbols> ON | OFF
*RST: OFF

Usage:

Asynchronous command

Manual operation: See ["Show symbols"](#) on page 463

17.16.10.2 Filter

There are two commands for each parameter, that you can use for defining the ARINC 429 settings.

For example, to set the *Frame type =WRITE > Field =Address >Data* value you can use one of the following commands:

- SBUS:ARINC:FILTer:FRAMe1:FLD1:DMIN 01100
Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- SBUS:ARINC:FILTer:DMIN "WRITe", "Address", 01100
Defines the parameter by using the frame and field name.

| | |
|--|-----|
| SBUS<sb>:ARINC:FILTer:CHKAll..... | 940 |
| SBUS<sb>:ARINC:FILTer:CLR..... | 940 |
| SBUS<sb>:ARINC:FILTer:INVert..... | 940 |
| SBUS<sb>:ARINC:FILTer:RST..... | 941 |
| SBUS<sb>:ARINC:FILTer:BIT..... | 941 |
| SBUS<sb>:ARINC:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 941 |

| | |
|--|-----|
| SBUS<sb>:ARINc:FILTer:ERENable..... | 941 |
| SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABLE..... | 941 |
| SBUS<sb>:ARINc:FILTer:DMAX..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 942 |
| SBUS<sb>:ARINc:FILTer:DMIN..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 942 |
| SBUS<sb>:ARINc:FILTer:DOPerator..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 942 |
| SBUS<sb>:ARINc:FILTer:ERENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABLE..... | 943 |
| SBUS<sb>:ARINc:FILTer:FIENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABLE..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABLE..... | 943 |
| SBUS<sb>:ARINc:FILTer:IMAX..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 944 |
| SBUS<sb>:ARINc:FILTer:IMIN..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 944 |
| SBUS<sb>:ARINc:FILTer:IOPerator..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 944 |

SBUS<sb>:ARINc:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 465

SBUS<sb>:ARINc:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:

<sb> 1...4, index of the serial bus

Usage:

Setting only
Asynchronous command

Manual operation: See "[Check all, Clear, Invert, Reset](#)" on page 465

SBUS<sb>:ARINc:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:

<sb> 1...4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 465

SBUS<sb>:ARINc:FILTER:RST

Resets the state of the selected frames and error types.

Suffix:
<sb> 1...4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See ["Check all, Clear, Invert, Reset"](#) on page 465

SBUS<sb>:ARINc:FILTER:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:ARINc:FILTER:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <BitState> ONE | ZERO
 *RST: ZERO

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 466

SBUS<sb>:ARINc:FILTER:ERENable <ErrorName>,<Enabler>
SBUS<sb>:ARINc:FILTER:ERRor<n>:ENABLE <Enable>

Defines the error type to be filtered on.

Suffix:
 <sb> 1...4, index of the serial bus
 <n> index of the error

Parameters:
 <Enable> ON | OFF
 *RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 467

SBUS<sb>:ARINc:FILTer:DMAX <Frame>,<Field>,<Data>

SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORange`.

You can set the operator with `SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 466

SBUS<sb>:ARINc:FILTer:DMIN <Frame>,<Field>,<Data>

SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 466

SBUS<sb>:ARINc:FILTer:DOPerator <Frame>,<Field>,<Operator>

SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<Data_Operator> `EQUal` | `NEQUal` | `LTHan` | `LETHan` | `GTHan` | `GETHan` | `INRange` | `OORange`

*RST: `EQUal`

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 466

SBUS<sb>:ARINC:FILTer:ERENable <ErrorName>,<Enabler>

SBUS<sb>:ARINC:FILTer:ERRor<n>:ENABLE <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1...4, index of the serial bus

<n> index of the error

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command

Manual operation: See ["Error type"](#) on page 467

SBUS<sb>:ARINC:FILTer:FIENable <Frame>,<Field>,<Enabler>

SBUS<sb>:ARINC:FILTer:FRAMe<fr>:FLD<fl>:ENABLE <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

<fl> index of the field

Parameters:

<CondEnabler> ON | OFF

*RST: OFF

Usage: Asynchronous command

Manual operation: See ["Edit"](#) on page 466

SBUS<sb>:ARINC:FILTer:FRENable <Frame>,<Enabler>

SBUS<sb>:ARINC:FILTer:FRAMe<fr>:ENABLE <Enable>

Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1...4, index of the serial bus

<fr> index of the frame

Parameters:

<Enable> ON | OFF

*RST: ON

Usage: Asynchronous command
Manual operation: See ["Enable"](#) on page 465

SBUS<sb>:ARINc:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>
 Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IOperator`.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Max> Range: 1 to 65535
 Increment: 1
 *RST: 65535

Usage: Asynchronous command
Manual operation: See ["Edit"](#) on page 466

SBUS<sb>:ARINc:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>
 Specifies the index, or sets the start value of an index range.

Suffix:
 <sb> 1...4, index of the serial bus
 <fr> index of the frame
 <fl> index of the field

Parameters:
 <Index_Min> Range: 1 to 65535
 Increment: 1
 *RST: 1

Usage: Asynchronous command
Manual operation: See ["Edit"](#) on page 466

SBUS<sb>:ARINc:FILTer:IOperator <Frame>,<Field>,<Operator>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IOperator <Index_Operator>
 Sets the operator for the index in the selected field of the selected frame.

Suffix:
 <sb> 1...4, index of the serial bus

| | |
|--------------------------|-------------------------|
| <fr> | index of the frame |
| <fl> | index of the field |
| Parameters: | |
| <Index_Operator> | EQUal INRange RANGE |
| | *RST: INRange |
| Usage: | Asynchronous command |
| Manual operation: | See "Edit" on page 466 |

17.16.10.3 Decode results

This chapter describes the commands to query the results of the decoding.

| | |
|---------------------------------|-----|
| SBUS<sb>:ARINc:WCOunt? | 945 |
| SBUS<sb>:ARINc:WORD<w>:COUNT? | 945 |
| SBUS<sb>:ARINc:WORD<w>:BITRate? | 945 |
| SBUS<sb>:ARINc:WORD<w>:DATA? | 946 |
| SBUS<sb>:ARINc:WORD<w>:LABel? | 946 |
| SBUS<sb>:ARINc:WORD<w>:PATtern? | 946 |
| SBUS<sb>:ARINc:WORD<w>:SDI? | 947 |
| SBUS<sb>:ARINc:WORD<w>:SSM? | 947 |
| SBUS<sb>:ARINc:WORD<w>:STARt? | 947 |
| SBUS<sb>:ARINc:WORD<w>:STATe? | 948 |
| SBUS<sb>:ARINc:WORD<w>:STOP? | 948 |
| SBUS<sb>:ARINc:WORD<w>:SYMBol? | 949 |

SBUS<sb>:ARINc:WCOunt?

SBUS<sb>:ARINc:WORD<w>:COUNT?

Returns the number of decoded words.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
| <w> | * |
| | index of the word |

Return values:

<Count>

| | |
|---------------|----------------------|
| Usage: | Query only |
| | Asynchronous command |

SBUS<sb>:ARINc:WORD<w>:BITRate?

Returns the bit rate of the word.

Suffix:

| | |
|------|--------------------------------|
| <sb> | 1...4, index of the serial bus |
|------|--------------------------------|

<w> *
index of the word

Return values:
<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:DATA?

Returns the data of the specified word.

Suffix:
<sb> 1...4, index of the serial bus
<w> *
index of the word

Return values:
<FrameData> Range: 0 to 524287
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:LABel?

Returns the label of the specified word.

Suffix:
<sb> 1...4, index of the serial bus
<w> *
index of the word

Return values:
<FrameLabel> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:PATTErn?

Returns all 32 bits of the specified word.

Suffix:
<sb> 1...4, index of the serial bus

| | |
|-----------------------|--|
| <w> | * |
| | index of the word |
| Return values: | |
| <FrmDatPatt> | List of comma separated values. |
| Example: | SBUS1:ARINc:WORD1:PATtern?
#H04, #H10, #H04 |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:ARINc:WORD<w>:SDI?

Returns the source/destination identifier (SDI) bits of the specified word.

| | |
|-----------------------|--|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <w> | * |
| | index of the word |
| Return values: | |
| <SDI> | Range: 0 to 3
Increment: 1
*RST: 0 |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:ARINc:WORD<w>:SSM?

Returns the sign/status matrix (SSM) bits of the specified word.

| | |
|-----------------------|--|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |
| <w> | * |
| | index of the word |
| Return values: | |
| <SSM> | Range: 0 to 3
Increment: 1
*RST: 0 |
| Usage: | Query only
Asynchronous command |

SBUS<sb>:ARINc:WORD<w>:START?

Returns the start time of the specified word.

| | |
|----------------|--------------------------------|
| Suffix: | |
| <sb> | 1...4, index of the serial bus |

<w> *
index of the word

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STATE?

Returns the overall state of the specified word.

Suffix:
<sb> 1...4, index of the serial bus
<w> *
index of the word

Return values:
<FrameState> OK | CODE | GAP | PAR | INC | UNKN
CODE: coding error occurred.
GAP: timing gap error occurred.
PAR: parity error occurred.
INComplete: the sequence is not completely contained in the acquisition
UNKNown: unknown frame type
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STOP?

Returns the end time of the specified word.

Suffix:
<sb> 1...4, index of the serial bus
<w> *
index of the word

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SYMBol?

Returns the label name of the word ID.

Suffix:

<sb> 1...4, index of the serial bus
 <w> *
 index of the word

Return values:

<Translation>

Usage:

Query only
 Asynchronous command

17.17 Mixed signal option (option R&S MXO4-B1)

This chapter describes the remote commands of MSO option R&S MXO4-B1.

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scp, chapter "Command sequence and synchronization"

17.17.1 Digital channels

All DIGital: commands affect only the settings of the first MSO bus (Logic1). The settings of all other logic groups (Logic 2, 3,4) remain unchanged.

| | |
|----------------------------|-----|
| DIGital<m>:LABel..... | 949 |
| DIGital<m>:SIZE..... | 950 |
| DIGital<m>:SKEW..... | 950 |
| DIGital<m>:STATE..... | 950 |
| DIGital<m>:TECHnology..... | 951 |
| DIGital<m>:THCoupling..... | 951 |
| DIGital<m>:THReshold..... | 951 |

DIGital<m>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

The setting affects only the settings of the first MSO bus (Logic1).

Mixed signal option (option R&S MXO4-B1)

You can set the label for all buses with `PBUS<pb>:BIT<n>:LABel`

Suffix:

<m> 0..15
Selects the digital channel.

Parameters:

<Label> String containing the channel name

Usage: Asynchronous command

DIGital<m>:SIZE <Size>**Suffix:**

<m> 0..15
The suffix is irrelevant.

Parameters:

<Size>

Usage: Asynchronous command

DIGital<m>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels. The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the skew for all buses with `PBUS<pb>:BIT<n>:SKEW`.

Suffix:

<m> 0..15
Selects the digital channel.

Parameters:

<Skew>

Usage: Asynchronous command

DIGital<m>:STATe <State>

Enables or disables the indicated digital channel, displays it, and enables the Logic 1 if the bus was disabled.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

For Logic 1, the `DIG : : STAT` command has the same effect as `PBUS<pb>:STATe`. To enable digital channels for buses 2, 3 and 4, use the `PBUS:BIT[:STAT]` command.

Suffix:

<m> 0..15
Selects the digital channel.

Mixed signal option (option R&S MXO4-B1)

Parameters:

<State> ON | OFF

Usage:

Asynchronous command

DIGital<m>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the technology value for all buses with [PBUS<pb>:TECHnology](#).

Suffix:

<m> 0..15

The suffix is irrelevant.

Parameters:

<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual

See [PBUS<pb>:TECHnology](#).**Usage:**

Asynchronous command

DIGital<m>:THCoupling <State>

Sets the threshold and the hysteresis for all digital channels of Logic1 to the same value.

Suffix:

<m> 0..15

The suffix is irrelevant.

Parameters:

<State> ON | OFF

Usage:

Asynchronous command

DIGital<m>:THReshold <Value>

Sets the logical threshold for the channel group to which the indicated digital channel belongs.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the threshold for all buses with [PBUS<pb>:TECHnology](#) or [PBUS<pb>:THReshold<n>](#)

See also: [DIGital<m>:THCoupling](#) on page 951

Suffix:

<m> 0..15

Number of the digital channel.

Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:

<Value>

Usage:

Asynchronous command

17.17.2 Logic configuration

The following commands configure the four logic groups of R&S MXO4-B1.

| | |
|-----------------------------------|-----|
| PBUS<pb>:BIT<n>:LABel..... | 952 |
| PBUS<pb>:BIT<n>:SKEW..... | 953 |
| PBUS<pb>:BIT<n>[:STATe]..... | 953 |
| PBUS<pb>:CLEar..... | 953 |
| PBUS<pb>:CLOCK..... | 954 |
| PBUS<pb>:CLON..... | 954 |
| PBUS<pb>:CLSLope..... | 954 |
| PBUS<pb>:DECTable:SHOW..... | 955 |
| PBUS<pb>:DECTable:COUNT?..... | 955 |
| PBUS<pb>:DECTable:DATA?..... | 955 |
| PBUS<pb>:DIGSignals:POSition..... | 955 |
| PBUS<pb>:DIGSignals:SCALE..... | 956 |
| PBUS<pb>:DISPlay:SHBU..... | 956 |
| PBUS<pb>:DISPlay:SHDI..... | 956 |
| PBUS<pb>:HYSTeresis<n>..... | 957 |
| PBUS<pb>:POSition..... | 957 |
| PBUS<pb>:SCALE..... | 957 |
| PBUS<pb>:SKEW..... | 958 |
| PBUS<pb>:STATe..... | 958 |
| PBUS<pb>:TECHnology..... | 958 |
| PBUS<pb>:THCoupling..... | 959 |
| PBUS<pb>:THReshold<n>..... | 959 |

PBUS<pb>:BIT<n>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

Suffix:

<pb> 1...4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Label> String containing the channel name

Usage:

Asynchronous command

PBUS<pb>:BIT<n>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Suffix:

<pb> 1...4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Skew> Range: -2E-07 to 2E-07
Increment: 2E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "[D0-D15](#)" on page 476

PBUS<pb>:BIT<n>[:STATe] <Assigned>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

Suffix:

<pb> 1...4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Assigned> ON | OFF
*RST: OFF

Usage: Asynchronous command

PBUS<pb>:CLEAr

Removes all assigned digital channels from the bus.

Suffix:

<pb> 1...4, index of the logic group

Usage: Setting only
Asynchronous command

PBUS<pb>:CLOCK <ClockSource>

Selects the digital channel used as clock.

Suffix:
<pb> 1...4, index of the logic group

Parameters:
<ClockSource> D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 |
D13 | D14 | D15
Clock channel
*RST: D0

Usage: Asynchronous command

Manual operation: See "[Clock source](#)" on page 474

PBUS<pb>:CLON <Clocked>

Defines if the bus is a clocked bus - one of the digital channels serves as clock of the bus.

Suffix:
<pb> 1...4, index of the logic group

Parameters:
<Clocked> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Bus clocked](#)" on page 474

PBUS<pb>:CLSlope <ClockSlope>

Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Suffix:
<pb> 1...4, index of the logic group

Parameters:
<ClockSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "[Clock slope](#)" on page 474

PBUS<pb>:DECTable:SHOW <DecodeTable>

If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<DecodeTable> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Show decode table](#)" on page 474

PBUS<pb>:DECTable:COUNT?

Returns the number of rows in the decode table. Each clock edge corresponds to one row in the table. The decode table is only available for clocked buses.

Suffix:

<pb> 1...4, index of the logic group

Usage:

Query only
Asynchronous command

Manual operation: See "[Show decode table](#)" on page 474

PBUS<pb>:DECTable:DATA?

Returns a list of decoded values and corresponding points in time from the decode table. Each data pair corresponds to one clock edge, which is one row in the table. The decode table is only available for clocked buses.

Suffix:

<pb> 1...4, index of the logic group

Usage:

Query only
Asynchronous command

Manual operation: See "[Show decode table](#)" on page 474

PBUS<pb>:DIGSignals:POSition <DigChanPosition>

Sets the vertical position of all active digital channels.

Suffix:

<pb> 1...4, index of the logic group

Mixed signal option (option R&S MXO4-B1)

Parameters:

<DigChanPosition> Range: 0 to 4294967295
 Increment: 1
 *RST: 0

Usage: Asynchronous command

PBUS<pb>:DIGSignals:SCALE <RelativeHeight>

Sets the size of the display that is used by each active digital signal.

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<RelativeHeight> Range: 2 to 100
 Increment: 0.5
 *RST: 6.25
 Default unit: %

Usage: Asynchronous command

PBUS<pb>:DISPlay:SHBU <ShowBus>

If enabled, the resulting bus signal and bus values are displayed in the diagram.

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<ShowBus> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Show bus"](#) on page 473

PBUS<pb>:DISPlay:SHDI <ShwDigSigns>

If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<ShwDigSigns> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Show dig. signals"](#) on page 471

PBUS<pb>:HYSTerisis<n> <Hysteresis>

Defines the size of the hysteresis for the respective channels.

Suffix:

| | |
|------|---|
| <pb> | 1..4, index of the logic group |
| <n> | 1..4
Selects the channel group:
1 = digital channels 0..3
2 = digital channels 4..7
3 = digital channels 8..11
4 = digital channels 12..15 |

Parameters:

| | |
|--------------|--|
| <Hysteresis> | MAXimum ROBust NORMal

MAXIMUM = MAXimum
Maximum value that is possible and useful for the signal and its settings

ROBUST = ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system.

NORMAL = NORMal
The instrument sets a value suitable for the signal and its settings. |
|--------------|--|

Usage: Asynchronous command

Manual operation: See "[Hysteresis](#)" on page 472

PBUS<pb>:POSition <YPosition>

Sets the position of the indicated logic group waveform.

Suffix:

| | |
|------|--------------------------------|
| <pb> | 1..4, index of the logic group |
|------|--------------------------------|

Parameters:

| | |
|-------------|--|
| <YPosition> | Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: % |
|-------------|--|

Usage: Asynchronous command

PBUS<pb>:SCALe <RelativeHeight>

Sets the size of the display that is used by the indicated logic group waveform.

Suffix:

| | |
|------|--------------------------------|
| <pb> | 1..4, index of the logic group |
|------|--------------------------------|

Mixed signal option (option R&S MXO4-B1)

Parameters:

<RelativeHeight> Range: 3 to 100
 Increment: 0.5
 *RST: 10
 Default unit: %

Usage: Asynchronous command

PBUS<pb>:SKEW <SkewOffset>

Sets a general delay for all digital channels.

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<SkewOffset> Range: -2E-07 to 2E-07
 Increment: 2E-10
 *RST: 0
 Default unit: s

Usage: Asynchronous command

Manual operation: See "[Skew](#)" on page 476

PBUS<pb>:STATe <State>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

Dependencies: At least one digital channel must be enabled for the selected bus, otherwise the command does not work.

The bus is enabled automatically if the first digital channel is enabled with [PBUS<pb>:BIT<n>\[:STATe\]](#).

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[State](#)" on page 471

PBUS<pb>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

Mixed signal option (option R&S MXO4-B1)

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual

V15: TTL

V25: CMOS 5.0 V

V165: CMOS 3.3 V

V125: CMOS 2.5 V

V09: CMOS 1.85 V

VM13: ECL, -1.3 V

V38: PECL

V20: LVPECL

V0: Ground

MANual: Set a user-defined threshold value with [DIGital<m>: THReshold](#) on page 951.

*RST: V165

Usage:

Asynchronous command

Manual operation: See "[Technology, Threshold](#)" on page 472**PBUS<pb>:THCoupling <LevelCoupling>**

Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

For Logic 1, the command [DIGital<m>:THCoupling](#) has the same effect.**Suffix:**

<pb> 1...4, index of the logic group

Parameters:

<LevelCoupling> ON | OFF

*RST: ON

Usage:

Asynchronous command

Manual operation: See "[Level coupling](#)" on page 472**PBUS<pb>:THReshold<n> <Threshold>**

Sets the logical threshold for the indicated channel group.

Alternatively you can use the following commands:

- To select from a list of predefined technologies: [PBUS<pb>:TECHnology](#)
- For logic 1: [DIGital<m>:THReshold](#)

See also [DIGital<m>:THCoupling](#) on page 951.**Suffix:**

<pb> 1...4, index of the logic group

Mixed signal option (option R&S MXO4-B1)

<n> 1..4
 Selects the channel group:
 1 = digital channels 0..3;
 2 = digital channels 4..7
 3 = digital channels 8..11
 4 = digital channels 12..15

Parameters:
 <Threshold>

Usage: Asynchronous command

Manual operation: See "[Technology, Threshold](#)" on page 472

17.17.3 MSO data

The remote data transfer from the instrument to the controlling computer is performed using the following commands:

| | |
|---------------------------|-----|
| DIGital<m>:DATA:HEADer? | 960 |
| DIGital<m>:DATA[:VALues]? | 960 |
| PBUS<pb>:DATA:FORMat | 961 |
| PBUS<pb>:DATA:HEADer? | 961 |
| PBUS<pb>:DATA[:VALues]? | 962 |

DIGital<m>:DATA:HEADer?

Returns the header of digital channel data

Table 17-8: Header data

| Position | Meaning | Example |
|----------|--|-------------------|
| 1 | XStart, acquisition time before trigger, in s | -5E-008 = - 50 ns |
| 2 | XStop, acquisition time after trigger, in s | 5E-008 = 50 ns |
| 3 | Record length of the waveform in Samples | 1000 |
| 4 | Number of values per sample interval. For digital data, the result is 1. | 1 |

Suffix:

<m> 0..15
 Selects the digital channel.

Usage: Query only
 Asynchronous command

DIGital<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the indicated digital channel for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Mixed signal option (option R&S MXO4-B1)

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Suffix:

<m> 0..15
Selects the digital channel.

Query parameters:

<Offset> Number of offset values, which are ignored in the data transfer.
<Length> Number of values to be retrieved.

Return values:

<Data> List of values according to the format and content settings.

Usage:

Query only
Asynchronous command

PBUS<pb>:DATA:FORMat <DataFormat>

Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

It also sets the format for the number representation for remote data transfer with [PBUS<pb>:DATA\[:VALues\]?](#).

Suffix:

<pb> 1...4, index of the logic group

Parameters:

<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
*RST: HEX

Usage:

Asynchronous command

Manual operation: See "[Data format](#)" on page 473

PBUS<pb>:DATA:HEADer?

Returns the header data of the indicated bus.

For a detailed description, see [DIGital<m>:DATA:HEADer?](#).

Suffix:

<pb> 1...4, index of the logic group

Usage:

Query only
Asynchronous command

Manual operation: See "[Data format](#)" on page 473

PBUS<pb>:DATA[:VALues]? [<Offset>],[<Length>]

Returns the data of the indicated logic.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Requirements:

- `PBUS<pb>:STATe` is set to ON.
- `PBUS<pb>:DISPlay:SHBU` is set to ON.
- A number format is set with `PBUS<pb>:DATA:FORMat`.

Suffix:

<pb> 1...4, index of the logic group

Query parameters:

<Offset> Number of offset waveform points to be skipped.
Range: 0 to m. Limit: $n + m \leq$ record length

<Length> Number of waveform points to be retrieved.
Range: 1 to n. Limit: $n + m \leq$ record length

Example:

```
PBUS:STAT ON
PBUS:DISP:SHBU ON
PBUS:DISP:BTYP COMB
PBUS:DATA:FORMat HEX
PBUS:DATA:VAL?
```

Usage:

Query only
Asynchronous command

Manual operation: See "Data format" on page 473

17.18 Waveform generator (option R&S MXO4-B6)

This chapter describes the remote commands of the waveform generator.

The instrument preset does not affect the generator settings. Each generator has its own preset: `WGENerator<wg>:PRESet`.

Some of the commands in the following chapter are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scp, chapter "Command sequence and synchronization"

17.18.1 Waveform generator setup

17.18.1.1 General settings

| | |
|--|-----|
| WGENerator<wg>:FREQUency..... | 963 |
| WGENerator<wg>:FUNCTion:PULSe[:WIDTh]..... | 963 |
| WGENerator<wg>:FUNCTion:RAMP[:SYMMetry]..... | 964 |
| WGENerator<wg>:FUNCTion[:SELEct]..... | 964 |
| WGENerator<wg>:FUNCTion[:SQUare]:DCYCLE..... | 964 |
| WGENerator<wg>:OUTPut[:LOAD]..... | 965 |
| WGENerator<wg>:PERiod..... | 965 |
| WGENerator<wg>:PRESet..... | 965 |
| WGENerator<wg>:VOLTage:DCLevel..... | 966 |
| WGENerator<wg>:VOLTage:HIGH..... | 966 |
| WGENerator<wg>:VOLTage:INVersion..... | 966 |
| WGENerator<wg>:VOLTage:LOW..... | 967 |
| WGENerator<wg>:VOLTage:OFFSet..... | 967 |
| WGENerator<wg>:VOLTage[:VPP]..... | 967 |
| WGENerator<wg>[:ENABLE]..... | 967 |

WGENerator<wg>:FREQUency <Frequency>

Sets the frequency of the waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Frequency> Range: 0.001 to 100000000
 Increment: 0.001
 *RST: 10000000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Frequency](#)" on page 484

WGENerator<wg>:FUNCTion:PULSe[:WIDTh] <PulseWidth>

Sets the pulse width, the pulse duration of the generated pulse waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<PulseWidth> Range: 1.65E-08 to 90000
 Increment: 1
 *RST: 5E-07
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["Pulse width"](#) on page 486

WGENerator<wg>:FUNctioN:RAMP[:SYMMetry] <RampSymmetry>

Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<RampSymmetry> Range: 0 to 100
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Symmetry"](#) on page 485

WGENerator<wg>:FUNctioN[:SElect] <FunctionType>

Selects the type of waveform to be generated.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<FunctionType> SINusoid | SQUare | RAMP | DC | PULSe | SINC | CARDiac |
 GAUSs | LORNtz | EXPRise | EXPFall | ARBitary
 SINC: Cardinal sine
 *RST: SINusoid

Usage: Asynchronous command

Manual operation: See ["Function type"](#) on page 479

WGENerator<wg>:FUNctioN[:SQUare]:DCYCLE <SquareDutyCycle>

Sets the duty cycle for the pulse function.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SquareDutyCycle> Range: 0.01 to 99.99
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See ["Duty cycle"](#) on page 485

WGENerator<wg>:OUTPut[:LOAD] <Load>

Select the user load, the load of the DUT at its connection.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Load> FIFTy | HIZ
 FIFTy: 50Ω
 HIZ: High-Z (high input impedance)
 *RST: HIZ

Usage: Asynchronous command

Manual operation: See ["User load"](#) on page 485

WGENerator<wg>:PERiod <Period>

Sets the period of the pulse waveform, if `WGENerator<wg>:FUNCTION[:SElect]` is set to `PULSe`.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Period> Range: 1E-08 to 1000
 Increment: 1
 *RST: 1E-06
 Default unit: s

Usage: Asynchronous command

Manual operation: See ["Period"](#) on page 486

WGENerator<wg>:PRESet

Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Waveform generator (option R&S MXO4-B6)

Suffix:
 <wg> 1...2, index of the waveform generator

Usage: Setting only
 Asynchronous command

Manual operation: See "[Default setup](#)" on page 486

WGENerator<wg>:VOLTage:DCLevel <DCLevel>

Sets the level for the DC signal, if `WGENerator<wg>:FUNCTION[:SElect]` is set to DC.

Suffix:
 <wg> 1...2, index of the waveform generator

Parameters:
 <DCLevel> Range: -5 to 5
 Increment: 0.01
 *RST: 0
 Default unit: V

Usage: Asynchronous command

Manual operation: See "[DC level](#)" on page 486

WGENerator<wg>:VOLTage:HIGh <High>

Sets the high signal level of the output waveform.

Suffix:
 <wg> 1...2, index of the waveform generator

Parameters:
 <High> Range: -5.99 to 6
 Increment: 0.1
 *RST: 0.5
 Default unit: V

Usage: Asynchronous command

WGENerator<wg>:VOLTage:INVersion <Inversion>

Inverts the waveform at the offset level.

Suffix:
 <wg> 1...2, index of the waveform generator

Parameters:
 <Inversion> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Inversion](#)" on page 479

WGENerator<wg>:VOLTage:LOW <Low>

Sets the low signal level of the output waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Low> Range: -6 to 5.99
Increment: 0.1
*RST: -0.5
Default unit: V

Usage: Asynchronous command

WGENerator<wg>:VOLTage:OFFSet <Offset>

Sets the vertical offset of the generated waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Offset> Range: -5.995 to 5.995
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Offset](#)" on page 485

WGENerator<wg>:VOLTage[:VPP] <Amplitude>

Sets the amplitude of the waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Amplitude> Range: 0.01 to 12
Increment: 0.01
*RST: 0.4
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "[Amplitude](#)" on page 484

WGENerator<wg>[:ENABLE] <State>

Enables the function generator.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<State> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 479

17.18.1.2 Modulation settings

| | |
|--|-----|
| WGENerator<wg>:MODulation[:STATe]..... | 968 |
| WGENerator<wg>:MODulation:AM:DCYCLE..... | 969 |
| WGENerator<wg>:MODulation:AM:DEPTH..... | 969 |
| WGENerator<wg>:MODulation:AM:FREQUENCY..... | 969 |
| WGENerator<wg>:MODulation:AM:SYMMetry..... | 970 |
| WGENerator<wg>:MODulation:AM[:FUNction]..... | 970 |
| WGENerator<wg>:MODulation:CARRier:FREQUENCY..... | 970 |
| WGENerator<wg>:MODulation:CARRier:PERiod..... | 970 |
| WGENerator<wg>:MODulation:FM:DCYCLE..... | 971 |
| WGENerator<wg>:MODulation:FM:DEVIation..... | 971 |
| WGENerator<wg>:MODulation:FM:FREQUENCY..... | 971 |
| WGENerator<wg>:MODulation:FM:SYMMetry..... | 972 |
| WGENerator<wg>:MODulation:FM[:FUNction]..... | 972 |
| WGENerator<wg>:MODulation:FSK:FONE..... | 972 |
| WGENerator<wg>:MODulation:FSK:FTWO..... | 972 |
| WGENerator<wg>:MODulation:FSK[:RATE]..... | 973 |
| WGENerator<wg>:MODulation:NDCLevel..... | 973 |
| WGENerator<wg>:MODulation:NLABsolute?..... | 973 |
| WGENerator<wg>:MODulation:NLPCent..... | 974 |
| WGENerator<wg>:MODulation:PWM:DCYCLE..... | 974 |
| WGENerator<wg>:MODulation:PWM:DEPTH..... | 974 |
| WGENerator<wg>:MODulation:PWM:FREQUENCY..... | 975 |
| WGENerator<wg>:MODulation:PWM:SYMMetry..... | 975 |
| WGENerator<wg>:MODulation:PWM[:FUNction]..... | 975 |
| WGENerator<wg>:MODulation:TYPE..... | 976 |

WGENerator<wg>:MODulation[:STATe] <Modulation>

Enables or disables modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Modulation> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "Modulation state" on page 487

WGENerator<wg>:MODulation:AM:DCYCLE <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SquareDutyCycle> Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Duty cycle](#)" on page 488

WGENerator<wg>:MODulation:AM:DEPTH <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Depth> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Depth](#)" on page 488

WGENerator<wg>:MODulation:AM:FREQUENCY <Frequency>

Sets the frequency of the modulation waveform for AM frequency modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Frequency> Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Frequency](#)" on page 488

WGENerator<wg>:MODulation:AM:SYMMetry <RampSymmetry>

Sets the symmetry for the AM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Symmetry](#)" on page 488

WGENerator<wg>:MODulation:AM[:FUNCTion] <SignalType>

Selects the type of the modulating signal for AM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "[Signal type](#)" on page 487

WGENerator<wg>:MODulation:CARRier:FREQUency <FreqCarrierAlias>

Sets the frequency of the carrier signal for a modulation waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<FreqCarrierAlias> Range: 0.001 to 100000000
Increment: 0.001
*RST: 1000000
Default unit: Hz

Usage: Asynchronous command

WGENerator<wg>:MODulation:CARRier:PERiod <PeriodCarrierAlias>

Sets the period of the carrier signal for a modulation waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<PeriodCarrierAlias> Range: 1E-08 to 1000
 Increment: 1
 *RST: 1E-06
 Default unit: s

Usage: Asynchronous command

WGENerator<wg>:MODulation:FM:DCYCLE <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SquareDutyCycle> Range: 10 to 90
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Duty cycle](#)" on page 488

WGENerator<wg>:MODulation:FM:DEVIation <Deviation>

Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Deviation> Range: 0.001 to 10000000
 Increment: 1
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Deviation](#)" on page 488

WGENerator<wg>:MODulation:FM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for FM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Frequency> Range: 0.001 to 1000000
 Increment: 0.001
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Frequency](#)" on page 488

WGENerator<wg>:MODulation:FM:SYMMetry <RampSymmetry>

Sets the symmetry for the FM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<RampSymmetry> Range: 0 to 100
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Symmetry](#)" on page 488

WGENerator<wg>:MODulation:FM[:FUNCTION] <SignalType>

Selects the type of the modulating signal for FM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SignalType> SINusoid | SQUare | RAMP
 *RST: SINusoid

Usage: Asynchronous command

Manual operation: See "[Signal type](#)" on page 487

WGENerator<wg>:MODulation:FSK:FONE <Frequency1>**WGENerator<wg>:MODulation:FSK:FTWO <Frequency2>**

Sets the frequency of the first /second signal in FSK modulated signal.

Suffix:

<wg> 1...2, index of the waveform generator

Waveform generator (option R&S MXO4-B6)

Parameters:

<Frequency2> Range: 0.001 to 100000000
 Increment: 1
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Frequency 1/Frequency 2](#)" on page 488

WGENerator<wg>:MODulation:FSK[:RATE] <Rate>

Sets the frequency at which signal switches between [WGENerator<wg>:MODulation:FSK:FONE](#) and [WGENerator<wg>:MODulation:FSK:FTWO](#).

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Rate> Range: 0.001 to 1000000
 Increment: 1
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[FSK rate](#)" on page 489

WGENerator<wg>:MODulation:NDCLevel <LevelDC>

Sets the DC noise level, if [WGENerator<wg>:FUNCTION\[:SElect\]](#) is set to DC.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<LevelDC> Range: 0 to 10
 Increment: 0.01
 *RST: 0
 Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "[Noise level for DC](#)" on page 486

WGENerator<wg>:MODulation:NLABbsolute?

Queries the level of the noise in volts.

Suffix:

<wg> 1...2, index of the waveform generator

Return values:

<LevAbs> Range: 0 to 12
 Increment: 0.1
 *RST: 0
 Default unit: Vpp

Usage:

Query only
 Asynchronous command

WGENerator<wg>:MODulation:NLPCent <LevelPct>

Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<LevelPct> Range: 0 to 100
 Increment: 0.1
 *RST: 0
 Default unit: %

Usage:

Asynchronous command

Manual operation: See ["Noise level in %"](#) on page 485

WGENerator<wg>:MODulation:PWM:DCYCLE <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SquareDutyCycle> Range: 10 to 90
 Increment: 1
 *RST: 50
 Default unit: %

Usage:

Asynchronous command

Manual operation: See ["Duty cycle"](#) on page 488

WGENerator<wg>:MODulation:PWM:DEPTH <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Depth> Range: 0 to 100
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Modulation depth](#)" on page 488

WGENerator<wg>:MODulation:PWM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for PWM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Frequency> Range: 0.001 to 1000000
 Increment: 0.001
 *RST: 1000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Frequency](#)" on page 488

WGENerator<wg>:MODulation:PWM:SYMMetry <RampSymmetry>

Sets the symmetry for the PWM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<RampSymmetry> Range: 0 to 100
 Increment: 1
 *RST: 50
 Default unit: %

Usage: Asynchronous command

Manual operation: See "[Symmetry](#)" on page 488

WGENerator<wg>:MODulation:PWM[:FUNction] <SignalType>

Selects the type of the modulating signal for PWM modulation.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SignalType> SINusoid | SQUare | RAMP
 *RST: SINusoid

Usage: Asynchronous command

Manual operation: See "[Signal type](#)" on page 487

WGENerator<wg>:MODulation:TYPE <ModulationType>

Selects the modulation type, which defines how the carrier signal is modified.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<ModulationType> NONE | AM | FM | PWM | ASK | FSK
 *RST: AM

Usage: Asynchronous command

Manual operation: See "[Modulation type](#)" on page 487

17.18.1.3 ARB settings

| | |
|---|-----|
| WGENerator<wg>:ARBGen:NAME | 976 |
| WGENerator<wg>:ARBGen:OPEN | 976 |
| WGENerator<wg>:ARBGen:RUNMode | 977 |
| WGENerator<wg>:ARBGen:RUNSingle | 977 |
| WGENerator<wg>:ARBGen:SAMPLEs? | 977 |
| WGENerator<wg>:ARBGen:SRATE | 978 |
| WGENerator<wg>:ARBGen[:SOURce] | 978 |

WGENerator<wg>:ARBGen:NAME <Folder>

Sets the file path and the file for an arbitrary waveform, if [WGENerator<wg>:ARBGen\[:SOURce\]](#) is set to `ARBiTrary`.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Folder>

Usage: Asynchronous command

Manual operation: See "[Open](#)" on page 493

WGENerator<wg>:ARBGen:OPEN

Loads the arbitrary waveform, which is selected with the [WGENerator<wg>:ARBGen:NAME](#) command.

Waveform generator (option R&S MXO4-B6)

Suffix:
 <wg> 1...2, index of the waveform generator

Usage: Event
 Asynchronous command

Manual operation: See ["Open"](#) on page 493

WGENerator<wg>:ARBGen:RUNMode <RunMode>

Sets the duration for which the signal of the arbitrary generator will be output after the trigger event.

Suffix:
 <wg> 1...2, index of the waveform generator

Parameters:
 <RunMode> SINGLE | REPetitive
 *RST: REPetitive

Usage: Asynchronous command

Manual operation: See ["Run mode"](#) on page 492

WGENerator<wg>:ARBGen:RUNSingle

Executes a single period of the arbitrary signal generator, if [WGENerator<wg>:ARBGen:RUNMode](#) is set to `SINGLE`.

Suffix:
 <wg> 1...2, index of the waveform generator

Usage: Event
 Asynchronous command

Manual operation: See ["Run single"](#) on page 492

WGENerator<wg>:ARBGen:SAMPLES?

Sets the sample rate for the arbitrary waveform.

Suffix:
 <wg> 1...2, index of the waveform generator

Return values:
 <NumSamples> Range: 0 to 128000000
 Increment: 10
 *RST: 0
 Default unit: pts

Usage: Query only
 Asynchronous command

Manual operation: See ["Number of samples"](#) on page 493

WGENerator<wg>:ARBGen:SRATe <SampleRate>

Sets the sample rate for the arbitrary waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<SampleRate> Range: 1 to 312500000
 Increment: 10
 *RST: 1000000
 Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "[Sample rate](#)" on page 493

WGENerator<wg>:ARBGen[:SOURce] <WaveformSource>

Selects the source of the arbitrary waveform.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<WaveformSource> ARBbitrary | SCOPe
 *RST: ARBbitrary

Usage: Asynchronous command

Manual operation: See "[Arb wfm source](#)" on page 493

17.18.1.4 Sweep settings

| | |
|--|-----|
| WGENerator<wg>:SWEep[:STATe] | 978 |
| WGENerator<wg>:SWEep:TYPE | 979 |
| WGENerator<wg>:SWEep:FSTart | 979 |
| WGENerator<wg>:SWEep:TIME | 979 |
| WGENerator<wg>:SWEep:FEND | 979 |

WGENerator<wg>:SWEep[:STATe] <Sweep>

Enables or disables the sweeping.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Sweep> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See "[Sweep state](#)" on page 489

WGENerator<wg>:SWEep:TYPE <Type>

Sets the type of the sweep, a linear or logarithmic change of the frequency.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Type> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "[Sweep type](#)" on page 489

WGENerator<wg>:SWEep:FSTart <StartFrequency>

Sets the start frequency of the sweep signal.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<StartFrequency> Range: 0.001 to 100000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "[Start frequency](#)" on page 490

WGENerator<wg>:SWEep:TIME <Time>

Sets the duration of the sweep.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<Time> Range: 0.001 to 500
Increment: 1
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Sweep time](#)" on page 490

WGENerator<wg>:SWEep:FEND <StopFrequency>

Sets the stop frequency of the sweep signal.

Suffix:

<wg> 1...2, index of the waveform generator

Parameters:

<StopFrequency> Range: 0.001 to 100000000
 Increment: 0.001
 *RST: 1000000
 Default unit: Hz

Usage: Asynchronous command

Manual operation: See ["Stop frequency"](#) on page 490

17.18.2 Synchronize settings

| | |
|---|-----|
| WGENerator<wg>:COUPLing:STATe | 980 |
| WGENerator<wg>:COUPLing:AMPLitude | 980 |
| WGENerator<wg>:COUPLing:PHASeshift | 981 |
| WGENerator<wg>:COUPLing[:FREQUENCY] | 981 |
| GENerator:SYNC[:COMBination] | 981 |

WGENerator<wg>:COUPLing:STATe <CoupleEnable>

Enables the coupling of the generators, with the selected set of parameters: amplitude and frequency.

Suffix:

<wg> 1..2
 Specifies the prime generator.

Parameters:

<CoupleEnable> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Generator enable"](#) on page 494

WGENerator<wg>:COUPLing:AMPLitude <CplAmplitude>

Enables the coupling of all amplitude parameters of the generators.

Suffix:

<wg> 1..2
 Specifies the prime generator.

Parameters:

<CplAmplitude> ON | OFF
 *RST: OFF

Usage: Asynchronous command

Manual operation: See ["Frequency parameters"](#) on page 494

WGENerator<wg>:COUPling:PHASeshift <PhaseShift>

Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Suffix:

<wg> 1..2
Specifies the prime generator.

Parameters:

<PhaseShift> Range: -180 to 180
Increment: 1
*RST: 0
Default unit: °

Usage: Asynchronous command

Manual operation: See "[Phase Gen1 - Gen2](#)" on page 495

WGENerator<wg>:COUPling[:FREQuency] <CplFreq>

Enables the coupling of all frequency parameters of the generators.

Suffix:

<wg> 1..2
Specifies the prime generator.

Parameters:

<CplFreq> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[Amplitude parameters](#)" on page 495

GENerator:SYNC[:COMBination] <Combination>

Selects which signals generated from the waveform generator are synchronized.

Parameters:

<Combination> NONE | GEN12
*RST: NONE

Usage: Asynchronous command

Manual operation: See "[Synchron start](#)" on page 494

17.19 Status reporting

This chapter describes the remote commands that are used to read the status registers.

For information on structure, hierarchy, and contents of the status registers, see [Chapter 16.5, "Remote control - status reporting system"](#), on page 510.

| | |
|--|-----|
| • General commands | 982 |
| • STATus:OPERation register | 982 |
| • STATus:QUEStionable registers | 983 |
| • Reading out the CONDition part | 985 |
| • Reading out the EVENt part | 986 |
| • Controlling the ENABle part | 986 |
| • Controlling the negative transition part | 987 |
| • Controlling the positive transition part | 988 |
| • Programming tips and examples | 989 |

17.19.1 General commands

STATus:PRESet

Resets the status registers.

All PTRansition bits are set to 1, i.e. all transitions from 0 to 1 are detected.

All NTRansition bits are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected.

All EVENt bits are set to 0.

The ENABle bits of STATus:OPERation and STATus:QUEStionable are set to 0, i.e. all events in these registers are not passed on.

Usage: Setting only
 SCPI confirmed

17.19.2 STATus:OPERation register

STATus:OPERation commands provide information on the activity of the instrument.

See also: [Chapter 16.5.3.3, "STATus:OPERation register"](#), on page 515.

| | |
|---|-----|
| STATus:OPERation:CONDition? | 982 |
| STATus:OPERation[:EVENt]? | 982 |
| STATus:OPERation:ENABle | 983 |

STATus:OPERation:CONDition?

STATus:OPERation[:EVENt]?

The CONDition command returns information on actions the instrument is currently executing. The contents of the register is retained.

The EVENt command returns information on actions the instrument has executed since the last reading. Reading the EVENt register deletes its contents.

Bits:

- 0 = ALIGNment
- 2 = AUToset
- 4= MEASuring
- 5= WTRIGGER (wait for trigger)
- 6= TRIGGERed

Example: For an example, see [Example "Querying with STATUS:OPERation:CONDition"](#) on page 990.

Usage: Query only

STATUS:OPERation:ENABLE <Enable>

Controls the ENABLE part of the STATUS:OPERation register. The ENABLE defines which events in the EVENT part of the status register are forwarded to the OPERATION summary bit (bit 7) of the status byte. The status byte can be used to create a service request.

Parameters:

<Enable> Range: 1 to 65535
 Increment: 1

Example: STATUS:OPERation:ENABLE 5
 The ALIGNment event (bit 0) and AUToset event (bit 2) are forwarded to the OPERATION summary bit of the status byte.

17.19.3 STATUS:QUESTIONable registers

The commands of the STATUS:QUESTIONable subsystem control the status reporting structures of the STATUS:QUESTIONable registers.

See also: [Chapter 16.5.3.4, "STATUS:QUESTIONable register"](#), on page 516.

The query of the [:EVENT] and [:ENABLE] commands, return a list of the affected sources:

Table 17-9: Source values for STATUS:QUESTIONable:....[:EVENT] and STATUS:QUESTIONable:....[:ENABLE]

| Bits | Source values | Description |
|--------------|---------------|-------------------------------------|
| For all bits | NONE | |
| | ALL | All available sources are activated |
| PPSupply | PRObe<m> | Active probe |
| POVerload | PRObe<m> | Active probe |
| COVerload | CHAN<m> | Analog channels |
| | WARNCHAN<m> | Warning overload channels |

| Bits | Source values | Description |
|-------------|---------------|---|
| | EXTTRIGGERIN | External analog signal connected to the external trigger input |
| | TRIGGEROUT | Trigger out signal |
| TEMPerature | TEMPWARN | Temperature warning: indicates that the device is getting hot and should be cooled. |
| | TEMPERROR | Temperature error: the device is too hot and will automatically shut down in a few seconds. |
| ADCState | CPCHAN<m> | Positive clipping for analog channels |
| | CNCHAN<m> | Negative clipping for analog channels |
| | CPPROBE<m> | Positive clipping for probes |
| | CNPROBE<m> | Negative clipping for probes |
| GOVerload | WGENerator<m> | Available generators |
| NOALigndata | HCHannel<m> | Horizontal channels |
| | VCHannel<m> | Vertical channels |
| | PROBe<m> | Probes channels |
| | LPRObes<m> | Logic probes |
| | WGENerator<m> | Available generators |
| LIMit | MEAS<m> | Enabled measurements |
| MARGin | MEAS<m> | Enabled measurements |
| IMPRecise | MEAS<m> | Enabled measurements |

Some of the status commands can be used interchangeably:

Table 17-10: Overview: STATus:QUESTionable and respective CHANnel, MEASurement and WGENerator commands

| STATus:QUESTionable register | MEASurement |
|--|---------------------------------------|
| STATus:QUESTionable:COVerload
Bit: CHANnel<ch> | CHANnel<ch>:OVERload:STATus |
| STATus:QUESTionable:COVerload
Bit: WCHannel<ch> | CHANnel<ch>:WARNOverload:STATus |
| STATus:QUESTionable:COVerload
Bit: EXTTRIGGERIN | TRIGger:ANEDge:OVERload:STATus |
| STATus:QUESTionable:COVerload
Bit: TRIGGEROUT | TRIGger:ACTions:OUT:OVERload:STATus |
| STATus:QUESTionable:ADCState
Bit: CPCHannel<ch> | CHANnel<ch>:ADCState:STATus:PClipping |
| STATus:QUESTionable:ADCState
Bit: CNCHannel<ch> | CHANnel<ch>:ADCState:STATus:NClipping |

| | |
|--|----------------------------------|
| STATUS:QUESTIONABLE register | MEASurement |
| STATUS:QUESTIONABLE:PPSupply
Bit: CNCHannel<ch> | CHANnel<ch>PPSupply:STATUS |
| STATUS:QUESTIONABLE:LIMit
Bit: MEASurement<mg> | MEASurement<mg>:LIMit:STATUS |
| STATUS:QUESTIONABLE:MARGin
Bit: MEASurement<mg> | MEASurement<mg>:MARGin:STATUS |
| STATUS:QUESTIONABLE:IMPRecise
Bit: MEASurement<mg> | MEASurement<mg>:IMPRecise:STATUS |
| STATUS:QUESTIONABLE:GOVerload
Bit: WGENerator<wg> | WGENerator<wg>:GOVerload |
| STATUS:QUESTIONABLE:TEMPerature
Bit: WGENerator<wg> | WGENerator<wg>:TEMPerature |

17.19.4 Reading out the CONDition part

CHANnel<ch>:OVERload:STATUS:CONDition?
CHANnel<ch>:ADCState:STATUS:NCLipping:CONDition?
CHANnel<ch>:ADCState:STATUS:PCLipping:CONDition?
CHANnel<ch>:WARNoverload:STATUS:CONDition?
CHANnel<ch>:PPSupply:STATUS:CONDition?
MEASurement<mg>:IMPRecise:STATUS:CONDition?
MEASurement<mg>:LIMit:STATUS:CONDition?
MEASurement<mg>:MARGin:STATUS:CONDition?
TRIGger:ACTions:OUT:OVERload:STATUS:CONDition?
TRIGger:ANEDge:OVERload:STATUS:CONDition?
WGENerator<wg>:GOVerload:STATUS:CONDition?
WGENerator<wg>:TEMPerature:STATUS:CONDition?
STATUS:QUESTIONABLE:ADCState:CONDition?
STATUS:QUESTIONABLE:COVERload:CONDition?
STATUS:QUESTIONABLE:GOVerload:CONDition?
STATUS:QUESTIONABLE:IMPRecise:CONDition?
STATUS:QUESTIONABLE:LIMit:CONDition?
STATUS:QUESTIONABLE:MARGin:CONDition?
STATUS:QUESTIONABLE:PLL:CONDition?
STATUS:QUESTIONABLE:PPSupply:CONDition?
STATUS:QUESTIONABLE:TEMPerature:CONDition?

Returns the contents of the `CONDition` part of the status register to check for questionable instrument or measurement states. This part contains information on the action currently being performed in the instrument.

Reading the `CONDition` registers does not delete the contents since it indicates the current hardware status.

Usage: Query only

17.19.5 Reading out the EVENT part

```

CHANnel<ch>:ADCState:STATus[:NCLipping]:EVENT?
CHANnel<ch>:ADCState:STATus[:PCLipping]:EVENT?
CHANnel<ch>:OVERload[:STATus]:EVENT <Value>
CHANnel<ch>:WARNoverload[:STATus]:EVENT?
CHANnel<ch>:PPSupply[:STATus]:EVENT <Value>
MEASurement<mg>:IMPRecise:STATus[:EVENT]?
MEASurement<mg>:LIMit:STATus[:EVENT]?
MEASurement<mg>:MARGin:STATus[:EVENT]?
TRIGger:ACTions:OUT:OVERload:STATus[:EVENT] <Value>
TRIGger:ANEDge:OVERload:STATus[:EVENT] <Value>
WGENerator<wg>:GOVerload:STATus[:EVENT] <Value>
WGENerator<wg>:TEMPerature:STATus[:EVENT] <Value>
STATus:QUEStionable:ADCState[:EVENT]?
STATus:QUEStionable:COVerload[:EVENT]?
STATus:QUEStionable:GOVerload[:EVENT]?
STATus:QUEStionable:IMPRecise[:EVENT]?
STATus:QUEStionable:LIMit[:EVENT]?
STATus:QUEStionable:MARGin[:EVENT]?
STATus:QUEStionable:PLL[:EVENT]?
STATus:QUEStionable:PPSupply[:EVENT]?
STATus:QUEStionable:TEMPerature[:EVENT]?

```

Returns the contents of the `EVENT` part of the status register to check if an event has occurred since the last reading.

Reading an `EVENT` register deletes its contents.

Parameters:

<Value> See [Source values for STATus:QUEStionable:...\[:EVENT\] and STATus:QUEStionable:...\[:ENABLE\]](#) for a list of the return values.

Usage: Query only

17.19.6 Controlling the ENABLE part

```

CHANnel<ch>:OVERload:STATus:ENABLE <Value>
CHANnel<ch>:ADCState:STATus:NCLipping:ENABLE <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:ENABLE <Value>
CHANnel<ch>:WARNoverload:STATus:ENABLE <Value>
CHANnel<ch>:PPSupply:STATus:ENABLE <Value>
MEASurement<mg>:IMPRecise:STATus:ENABLE <Value>
MEASurement<mg>:LIMit:STATus:ENABLE <Value>
MEASurement<mg>:MARGin:STATus:ENABLE <Value>
TRIGger:ACTions:OUT:OVERload:STATus:ENABLE <Value>

```

TRIGger:ANEDge:OVERload:STATus:ENABle <Value>
WGENerator<wg>:GOVerload:STATus:ENABle <Value>
WGENerator<wg>:TEMPerature:STATus:ENABle <Value>
STATus:QUESTionable:ADCState:ENABle <Value>
STATus:QUESTionable:COVerload:ENABle <Value>
STATus:QUESTionable:GOVerload:ENABle <Value>
STATus:QUESTionable:IMPRecise:ENABle <Value>
STATus:QUESTionable:LIMit:ENABle <Value>
STATus:QUESTionable:MARGin:ENABle <Value>
STATus:QUESTionable:PLL:ENABle <Value>
STATus:QUESTionable:PPSupply:ENABle <Value>
STATus:QUESTionable:TEMPerature:ENABle <Value>

Sets the **ENABle** part that allows true conditions in the **EVENT** part to be reported for the summary bit in the status byte.

These events can be used for a service request. If a bit in the **ENABle** part is 1, and the corresponding **EVENT** bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

See [Source values for STATus:QUESTionable:...\[:EVENT\]](#) and [STATus:QUESTionable:...\[:ENABle\]](#) for a list of the return values.

Parameters:

<Value> bit dependent

17.19.7 Controlling the negative transition part

CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition <Value>
CHANnel<ch>:OVERload:STATus:NTRansition <Value>
CHANnel<ch>:PPSupply:STATus:NTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:NTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:NTRansition <Value>
MEASurement<mg>:LIMit:STATus:NTRansition <Value>
MEASurement<mg>:MARGin:STATus:NTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:NTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
WGENerator<wg>:GOVerload:STATus:NTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:NTRansition <Value>
STATus:QUESTionable:ADCState:NTRansition <Value>
STATus:QUESTionable:COVerload:NTRansition <Value>
STATus:QUESTionable:GOVerload:NTRansition <Value>
STATus:QUESTionable:IMPRecise:NTRansition <Value>
STATus:QUESTionable:LIMit:NTRansition <Value>
STATus:QUESTionable:MARGin:NTRansition <Value>
STATus:QUESTionable:PLL:NTRansition <Value>
STATus:QUESTionable:PPSupply:NTRansition <Value>
STATus:QUESTionable:TEMPerature:NTRansition <Value>

Sets the negative transition filter.

If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the corresponding bit of the `EVENT` part of the register.

Parameters:

<Value> Source dependent

17.19.8 Controlling the positive transition part

CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition <Value>
CHANnel<ch>:OVERload:STATus:PTRansition <Value>
CHANnel<ch>:PPSupply:STATus:PTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:PTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:PTRansition <Value>
MEASurement<mg>:LIMit:STATus:PTRansition <Value>
MEASurement<mg>:MARGin:STATus:PTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
TRIGger:ANEDge:OVERload:STATus:PTRansition <Value>
WGENerator<wg>:GOVerload:STATus:PTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:PTRansition <Value>
STATus:QUESTionable:ADCState:PTRansition <Value>
STATus:QUESTionable:COVerload:PTRansition <Value>
STATus:QUESTionable:GOVerload:PTRansition <Value>
STATus:QUESTionable:IMPRecise:PTRansition <Value>
STATus:QUESTionable:LIMit:PTRansition <Value>
STATus:QUESTionable:MARGin:PTRansition <Value>
STATus:QUESTionable:PLL:PTRansition <Value>
STATus:QUESTionable:PPSupply:PTRansition <Value>
STATus:QUESTionable:TEMPerature:PTRansition <Value>

Sets the positive transition filter.

If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the corresponding bit of the `EVENT` part of the register.

Parameters:

<Value> Source dependent

17.19.9 Programming tips and examples

Example: Observing the limits violation of a measurement

The following example describes how to use the status register commands to observe, if a violation of a measurement limit has occurred.

```
*SRE 8
// Enables the STATus:QUEStionable bit in the service-request (SRE)

STATus:QUEStionable:ENABle 512
// Enables the LIMit bit of the STATus:QUEStionable register

MEASurement1:ENABle ON
MEASurement2:ENABle ON
MEASurement3:ENABle ON
// Enables measurement 1,2,3

STATus:QUEStionable:LIMit:ENABle ALL
// Enables the limit check for all active measurements

STATus:QUEStionable:LIMit:ENABle?
MEAS1,MEAS2,MEAS3
//Queries which measurement were active at the time the
//STATus:QUEStionable:LIMit:ENABle was send

*SRQ?
// A service request was sent

*STB?
72
// STATus:QUEStionable is set:
// #72= 64 + 8 = 2^6 + 2^3
// 64 : bit 6 is awlays on when a SRQ is sent
// 8: bit 3 for STATus:QUEStionable

STATus:QUEStionable:EVENT?
512
// 512= 2^9,

STATus:QUEStionable:LIMit:EVENT?
MEAS1,MEAS2
// Measurements 1 and 2 have exceeded the limit
// The event register is cleared after the query

STATus:QUEStionable:LIMit:EVENT?
NONE
// The event bit has been set to 0 after the first query
```

```

STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2
// Measurements 1 and 2 are still exceeding the limit

STATus:QUEStionable:EVENT?
0

// Waiting for an event
*SRQ?

// Measurement 3 exceeds the limit

STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2,MEAS3
// Measurements 1,2 and 3 are currently exceeding the limit

STATus:QUEStionable:LIMit:EVENT?
MEAS3
// Measurement 3 has newly exceeded the limit
// The event register is cleared after the query

```

Example: Querying with STATus:OPERation:CONDition

The following example shows how the result of STATus:OPERation:CONDition? changes during a single acquisition.

```

SINGLE
// Measurement starts

STATus:OPERation:CONDition?
16
//Measuring

STATus:OPERation:CONDition?
48
//Pre trigger waiting time is over (16 Measuring + 32 WaitForTrigger)

STATus:OPERation:CONDition?
112
//Trigger is deactivated (16 Measuring + 32 WaitForTrigger + 64 Triggered)

STATus:OPERation:CONDition?
96
// Measurement has finished (32 WaitForTrigger + 64 Triggered)

```

Query OPC status in the event status register

If you activate a time-consuming operation and wait for completion with *OPC?, a time-out could occur before the operation is finished and you do not receive the returned

“1”. In addition, the test program is blocked while waiting with *OPC?. It is not possible to process other (not interdependent) commands in the meantime or to communicate with other instruments.

Thus, for time-consuming operations, you can avoid blocking the communication by sending the operation complete command *OPC:

```
*CLS
*OPC
```

Afterwards you can poll the operation complete status in the event status register with *ESR?.

This query returns the content of the event status register and afterwards clears the content. See also [Chapter 16.5.3.2, "Event status register \(ESR\) and event status enable register \(ESE\)"](#), on page 514.

17.20 Deprecated commands

The following commands are provided for compatibility to previous oscilloscope versions only. For new remote control programs, use the specified alternative commands.

17.20.1 Base instrument

| Legacy command | Replaced by | Comment |
|---------------------------------|--|-----------------------|
| DIAGnostic:SERvice:COMPUtername | SYSTem:COMMunicate:NET[:HOSTname]
on page 533 | Replaced since FW 2.0 |

17.20.2 Options

| Legacy command | Replaced by | Comment |
|---|---|-------------------------------|
| SBUS<sb>:SPI:FILTer:ENABle
SBUS<sb>:I2C:FILTer:ENABle
SBUS<sb>:UART:FILTer:ENABle
SBUS<sb>:CAN:FILTer:ENABle
SBUS<sb>:LIN:FILTer:ENABle | - | No longer needed since FW 2.0 |
| SBUS<sb>:CAN:DATA:HYSTeresis | SBUS<sb>:CAN:SIC:HYSTeresis
on page 857
SBUS<sb>:CAN:FAST:HYSTeresis
on page 858 | Replaced since FW 1.4 |

Deprecated commands

| Legacy command | Replaced by | Comment |
|-----------------------------|---|-----------------------|
| SBUS<sb>:CAN:DATA:THReshold | SBUS<sb>:CAN:SIC:THReshold
on page 858
SBUS<sb>:CAN:FAST:THReshold
on page 858 | Replaced since FW 1.4 |
| SBUS<sb>:CAN:DATA:SOURce | SBUS<sb>:CAN:SOURce on page 857 | Replaced since FW 2.0 |

18 Maintenance and support

The instrument does not need periodic maintenance. Only the cleaning of the instrument is essential.

To protect the front panel and to transport the instrument to another workplace safely and easily, various accessories are provided. Refer to the specifications document for available covers and cases and their order numbers.

18.1 Cleaning

How to clean the product is described in "[Cleaning the product](#)" on page 22.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

18.2 Changing fuses

If the product does not start, it is possible that a blown fuse is the cause.

The product is protected by 2 fuses of type Size 5x20 mm, 250V~, T5H (slow-blow), IEC 60127-2 (order no. 0099.6735.00), order number 0099.6735.00.

1. **WARNING!** The fuse is part of the AC power supply. Handling the fuse while the power is on can lead to electric shock.
Before changing the fuse:
 - a) Set the switch on the power supply to position [0].
 - b) Disconnect the product from the power source.
2. The fuse slot is on the rear panel between the mains switch and AC power supply connector.
Pull out the fuse holder.
3. Check the condition of the fuse.
4. Replace the blown fuse. Only use a fuse of the specified type.
5. Insert the fuse holder into its slot until it latches.

18.3 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you

to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 18-1: QR code to the Rohde & Schwarz support page

18.4 Information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center, see [Contacting customer support](#).

The support center finds solutions more quickly and efficiently, if you provide them with information on the instrument and an error description. To create, collect and save the required information, you can create a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

1. Open the "Settings" > "Maintenance" dialog.
2. Select the "Service" tab.
3. Tap "Create report".
If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.
4. Create a support ticket that describes the problem, and attach the report file.

See also: [Chapter 5.7.4, "Service"](#), on page 102.

18.5 Data security

If you have to send the instrument to the service, or if the instrument is used in a secured environment, consider the document "Instrument Security Procedures" that is delivered on the MXO 4 webpage.

18.6 Transporting

Lifting and carrying

See: "[Lifting and carrying the instrument](#)" on page 18

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the MXO 4 in a vehicle or using transporting equipment, make sure that the MXO 4 is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the specifications document, the maximum transport altitude without pressure compensation is 4500 m above sea level.

18.7 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

18.8 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 18-2: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

List of commands

| | |
|----------------------------------|-----|
| *CAL? | 528 |
| *CLS | 528 |
| *IDN? | 528 |
| *OPC | 529 |
| *OPT? | 529 |
| *RCL | 529 |
| *RST | 529 |
| *SAV | 530 |
| *SRE | 530 |
| *STB? | 530 |
| *TRG | 530 |
| *WAI | 530 |
| ACQUIRE:AVAILABLE? | 576 |
| ACQUIRE:AVERAGE? | 576 |
| ACQUIRE:COUNT | 577 |
| ACQUIRE:CURRENT? | 577 |
| ACQUIRE:HISTORY:CURRENT | 658 |
| ACQUIRE:HISTORY:PLAY | 658 |
| ACQUIRE:HISTORY:REPLAY | 658 |
| ACQUIRE:HISTORY:START | 659 |
| ACQUIRE:HISTORY:STOP | 659 |
| ACQUIRE:HISTORY:TPACQ | 659 |
| ACQUIRE:HISTORY:TSABSOLUTE? | 659 |
| ACQUIRE:HISTORY:TSDATE? | 660 |
| ACQUIRE:HISTORY:TSRELATIVE? | 660 |
| ACQUIRE:HISTORY:TSREFERENCE? | 660 |
| ACQUIRE:HISTORY[:STATE] | 660 |
| ACQUIRE:INTERPOLATE | 577 |
| ACQUIRE:POINTS:ARATE? | 578 |
| ACQUIRE:POINTS:MAXIMUM | 578 |
| ACQUIRE:POINTS:MODE | 578 |
| ACQUIRE:POINTS[:VALUE] | 578 |
| ACQUIRE:RESOLUTION | 579 |
| ACQUIRE:ROLLMODE:OSCATURE | 568 |
| ACQUIRE:ROLLMODE:POINTS? | 569 |
| ACQUIRE:SEGMENTED:MAX | 581 |
| ACQUIRE:SEGMENTED:STATE | 581 |
| ACQUIRE:SRATE:MINIMUM | 579 |
| ACQUIRE:SRATE:MODE | 580 |
| ACQUIRE:SRATE[:VALUE] | 579 |
| ACQUIRE:SRREAL | 580 |
| ACQUIRE:TYPE | 580 |
| AUTOSCALE | 566 |
| CALCULATE:MATH<m>:DATA:HEADER? | 656 |
| CALCULATE:MATH<m>:DATA:STYPE? | 657 |
| CALCULATE:MATH<m>:DATA[:VALUES]? | 657 |
| CALCULATE:MATH<m>:ENVSELECTION | 656 |

| | |
|--|-----|
| CALCulate:MATH<m>:LABel..... | 654 |
| CALCulate:MATH<m>:STATe..... | 653 |
| CALCulate:MATH<m>:UNIT..... | 655 |
| CALCulate:MATH<m>:VERTical:OFFSet..... | 655 |
| CALCulate:MATH<m>:VERTical:SCALE:MODE..... | 656 |
| CALCulate:MATH<m>:VERTical:SCALE[:VALue]..... | 655 |
| CALCulate:MATH<m>[:EXPRession][:DEFine]..... | 653 |
| CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO..... | 717 |
| CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio..... | 717 |
| CALCulate:SPECTrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue]..... | 718 |
| CALCulate:SPECTrum<sp>:FREQuency:CENTER..... | 718 |
| CALCulate:SPECTrum<sp>:FREQuency:SCALE..... | 718 |
| CALCulate:SPECTrum<sp>:FREQuency:SPAN..... | 719 |
| CALCulate:SPECTrum<sp>:FREQuency:START..... | 719 |
| CALCulate:SPECTrum<sp>:FREQuency:STOP..... | 719 |
| CALCulate:SPECTrum<sp>:FREQuency:WINDow:TYPE..... | 720 |
| CALCulate:SPECTrum<sp>:GATE:POSition..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:START..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:STOP..... | 725 |
| CALCulate:SPECTrum<sp>:GATE:WIDTh..... | 726 |
| CALCulate:SPECTrum<sp>:MAGNitude:LEVel..... | 721 |
| CALCulate:SPECTrum<sp>:MAGNitude:RANGE..... | 721 |
| CALCulate:SPECTrum<sp>:MAGNitude:SCALE..... | 721 |
| CALCulate:SPECTrum<sp>:PEXCursion..... | 723 |
| CALCulate:SPECTrum<sp>:PLISt:COUNT?..... | 726 |
| CALCulate:SPECTrum<sp>:PLISt:LABel:BORDER..... | 557 |
| CALCulate:SPECTrum<sp>:PLISt:LABel:FREQuency[:STATe]..... | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LABel:INVert..... | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LABel:MAXCount..... | 729 |
| CALCulate:SPECTrum<sp>:PLISt:LABel:MAXCount..... | 730 |
| CALCulate:SPECTrum<sp>:PLISt:LABel[:STATe]..... | 730 |
| CALCulate:SPECTrum<sp>:PLISt:MAXCount..... | 727 |
| CALCulate:SPECTrum<sp>:PLISt:MODE..... | 727 |
| CALCulate:SPECTrum<sp>:PLISt:RESUlt[:VALue]?..... | 728 |
| CALCulate:SPECTrum<sp>:PLISt:SORT:COLUmN..... | 728 |
| CALCulate:SPECTrum<sp>:PLISt:SORT:ORDER..... | 729 |
| CALCulate:SPECTrum<sp>:PLISt:SOURce..... | 727 |
| CALCulate:SPECTrum<sp>:PLISt:SPOW..... | 728 |
| CALCulate:SPECTrum<sp>:PLISt[:STATe]..... | 727 |
| CALCulate:SPECTrum<sp>:PRESet..... | 722 |
| CALCulate:SPECTrum<sp>:SOURce..... | 722 |
| CALCulate:SPECTrum<sp>:STATe..... | 722 |
| CALCulate:SPECTrum<sp>:THReshold..... | 722 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:COUNT..... | 723 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:DATA:HEADer?..... | 730 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:DATA[:VALues]?..... | 731 |
| CALCulate:SPECTrum<sp>:WAVEform:AVERAge:ENABLE..... | 723 |
| CALCulate:SPECTrum<sp>:WAVEform:MAXimum:DATA:HEADer?..... | 730 |
| CALCulate:SPECTrum<sp>:WAVEform:MAXimum:DATA[:VALues]?..... | 731 |
| CALCulate:SPECTrum<sp>:WAVEform:MAXimum:ENABLE..... | 724 |

| | |
|--|-----|
| CALCulate:SPECTrum<sp>:WAVEform:MINimum:DATA:HEADer? | 730 |
| CALCulate:SPECTrum<sp>:WAVEform:MINimum:DATA[:VALues]? | 731 |
| CALCulate:SPECTrum<sp>:WAVEform:MINimum:ENABLE | 724 |
| CALCulate:SPECTrum<sp>:WAVEform:NORMal:DATA:HEADer? | 730 |
| CALCulate:SPECTrum<sp>:WAVEform:NORMal:DATA[:VALues]? | 731 |
| CALCulate:SPECTrum<sp>:WAVEform:NORMal[:ENABLE] | 724 |
| CALibration:DATE? | 564 |
| CALibration:RESult? | 564 |
| CALibration:TIME? | 564 |
| CHANnel<ch>:ADCState:STATus:NCLipping:CONDition? | 985 |
| CHANnel<ch>:ADCState:STATus:NCLipping:ENABle | 986 |
| CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition | 987 |
| CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition | 988 |
| CHANnel<ch>:ADCState:STATus:PCLipping:CONDition? | 985 |
| CHANnel<ch>:ADCState:STATus:PCLipping:ENABle | 986 |
| CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition | 987 |
| CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition | 988 |
| CHANnel<ch>:ADCState:STATus[:NCLipping]:EVENT? | 986 |
| CHANnel<ch>:ADCState:STATus[:PCLipping]:EVENT? | 986 |
| CHANnel<ch>:BANDwidth | 573 |
| CHANnel<ch>:COUPling | 571 |
| CHANnel<ch>:DATA:HEADer? | 574 |
| CHANnel<ch>:DATA[:VALues]? | 575 |
| CHANnel<ch>:EATScale | 573 |
| CHANnel<ch>:EATTenuation | 573 |
| CHANnel<ch>:IMPedance | 574 |
| CHANnel<ch>:INVert | 572 |
| CHANnel<ch>:OFFSet | 570 |
| CHANnel<ch>:OVERload:STATus:CONDition? | 985 |
| CHANnel<ch>:OVERload:STATus:ENABle | 986 |
| CHANnel<ch>:OVERload:STATus:NTRansition | 987 |
| CHANnel<ch>:OVERload:STATus:PTRansition | 988 |
| CHANnel<ch>:OVERload[:STATus]:EVENT | 986 |
| CHANnel<ch>:POSition | 571 |
| CHANnel<ch>:PPSupply:STATus:CONDition? | 985 |
| CHANnel<ch>:PPSupply:STATus:ENABle | 986 |
| CHANnel<ch>:PPSupply:STATus:NTRansition | 987 |
| CHANnel<ch>:PPSupply:STATus:PTRansition | 988 |
| CHANnel<ch>:PPSupply[:STATus]:EVENT | 986 |
| CHANnel<ch>:RANGe | 570 |
| CHANnel<ch>:SCALE | 570 |
| CHANnel<ch>:SKEW:TIME | 572 |
| CHANnel<ch>:STATe | 569 |
| CHANnel<ch>:WARNoverload:STATus:CONDition? | 985 |
| CHANnel<ch>:WARNoverload:STATus:ENABle | 986 |
| CHANnel<ch>:WARNoverload:STATus:NTRansition | 987 |
| CHANnel<ch>:WARNoverload:STATus:PTRansition | 988 |
| CHANnel<ch>:WARNoverload[:STATus]:EVENT? | 986 |
| CURSor<cu>:AOFF | 705 |
| CURSor<cu>:COUNt? | 706 |

| | |
|--|-----|
| CURSor<cu>:DISPlay:VALues..... | 710 |
| CURSor<cu>:FFT:SETCenter..... | 714 |
| CURSor<cu>:FFT:TOCenter..... | 714 |
| CURSor<cu>:FUNCTion..... | 706 |
| CURSor<cu>:HORizontal<n>:LABel..... | 710 |
| CURSor<cu>:LABel..... | 709 |
| CURSor<cu>:MAXimum:LEFT..... | 715 |
| CURSor<cu>:MAXimum:NEXT..... | 715 |
| CURSor<cu>:MAXimum:RIGHT..... | 715 |
| CURSor<cu>:MAXimum[:PEAK]..... | 714 |
| CURSor<cu>:PEXCursion..... | 715 |
| CURSor<cu>:SIAD..... | 711 |
| CURSor<cu>:SOURce..... | 706 |
| CURSor<cu>:SSCReen..... | 709 |
| CURSor<cu>:SSOURce..... | 707 |
| CURSor<cu>:STATe..... | 706 |
| CURSor<cu>:STYLe..... | 716 |
| CURSor<cu>:THReshold..... | 716 |
| CURSor<cu>:TRACKing[:STATe]..... | 709 |
| CURSor<cu>:USSource..... | 707 |
| CURSor<cu>:VERTical<n>:LABel..... | 710 |
| CURSor<cu>:X1ENvelope..... | 712 |
| CURSor<cu>:X1Position..... | 708 |
| CURSor<cu>:X2ENvelope..... | 712 |
| CURSor<cu>:X2Position..... | 708 |
| CURSor<cu>:XCoupling..... | 711 |
| CURSor<cu>:XDELta:INVerse?..... | 713 |
| CURSor<cu>:XDELta[:VALue]?..... | 713 |
| CURSor<cu>:Y1Position..... | 708 |
| CURSor<cu>:Y2Position..... | 709 |
| CURSor<cu>:YCOupling..... | 711 |
| CURSor<cu>:YDELta:SLOPe..... | 713 |
| CURSor<cu>:YDELta[:VALue]?..... | 713 |
| DIGital<m>:DATA:HEADer?..... | 960 |
| DIGital<m>:DATA[:VALues]?..... | 960 |
| DIGital<m>:LABel..... | 949 |
| DIGital<m>:SIZE..... | 950 |
| DIGital<m>:SKEW..... | 950 |
| DIGital<m>:STATe..... | 950 |
| DIGital<m>:TECHnology..... | 951 |
| DIGital<m>:THCoupling..... | 951 |
| DIGital<m>:THReshold..... | 951 |
| DISPlay:ANNotation:ARRow<m>:CLEAr..... | 547 |
| DISPlay:ANNotation:ARRow<m>:COLor..... | 547 |
| DISPlay:ANNotation:ARRow<m>:DIRection..... | 547 |
| DISPlay:ANNotation:ARRow<m>:HEIGHt..... | 548 |
| DISPlay:ANNotation:ARRow<m>:HORizontal:POSition..... | 548 |
| DISPlay:ANNotation:ARRow<m>:REMove..... | 548 |
| DISPlay:ANNotation:ARRow<m>:VERTical:POSition..... | 548 |
| DISPlay:ANNotation:ARRow<m>:WIDTh..... | 549 |

| | |
|--|-----|
| DISPlay:ANNotation:ARRow<m>[:VALue]..... | 549 |
| DISPlay:ANNotation:CLear..... | 543 |
| DISPlay:ANNotation:COLor<m>:CATalog?..... | 544 |
| DISPlay:ANNotation:PLINe<m>:CLear..... | 551 |
| DISPlay:ANNotation:PLINe<m>:COLor..... | 552 |
| DISPlay:ANNotation:PLINe<m>:EXTend..... | 552 |
| DISPlay:ANNotation:PLINe<m>:REMove..... | 552 |
| DISPlay:ANNotation:PLINe<m>[:VALue]..... | 552 |
| DISPlay:ANNotation:RECTangle<m>:CLear..... | 544 |
| DISPlay:ANNotation:RECTangle<m>:COLor..... | 545 |
| DISPlay:ANNotation:RECTangle<m>:HEIGHt..... | 545 |
| DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition..... | 545 |
| DISPlay:ANNotation:RECTangle<m>:REMove..... | 545 |
| DISPlay:ANNotation:RECTangle<m>:VERTical:POSition..... | 546 |
| DISPlay:ANNotation:RECTangle<m>:WIDTh..... | 546 |
| DISPlay:ANNotation:RECTangle<m>[:VALue]..... | 546 |
| DISPlay:ANNotation:TEXT<m>:CLear..... | 549 |
| DISPlay:ANNotation:TEXT<m>:COLor..... | 550 |
| DISPlay:ANNotation:TEXT<m>:FONTSize..... | 550 |
| DISPlay:ANNotation:TEXT<m>:HORizontal:POSition..... | 550 |
| DISPlay:ANNotation:TEXT<m>:REMove..... | 550 |
| DISPlay:ANNotation:TEXT<m>:VERTical:POSition..... | 551 |
| DISPlay:ANNotation:TEXT<m>[:VALue]..... | 551 |
| DISPlay:ANNotation:TRANSpaREncy..... | 544 |
| DISPlay:BACKlight:DIMMING..... | 560 |
| DISPlay:BACKlight[:BRIGtness]..... | 559 |
| DISPlay:CLR..... | 560 |
| DISPlay:COLor:SIGNal:ASSign..... | 554 |
| DISPlay:COLor:SIGNal:CATalog?..... | 553 |
| DISPlay:COLor:SIGNal:COLor..... | 553 |
| DISPlay:COLor:SIGNal:USE..... | 554 |
| DISPlay:DIAGram:CROSShair..... | 554 |
| DISPlay:DIAGram:FINegrid..... | 555 |
| DISPlay:DIAGram:GRID..... | 555 |
| DISPlay:DIAGram:LABels..... | 555 |
| DISPlay:DIAGram:STYLe..... | 559 |
| DISPlay:DIAGram:XFIXed..... | 555 |
| DISPlay:DIAGram:YFIXed..... | 556 |
| DISPlay:DIALog:FONTSize..... | 556 |
| DISPlay:DIALog:TRANSpaREncy..... | 556 |
| DISPlay:INTensity..... | 559 |
| DISPlay:PERsistence:INFinite..... | 558 |
| DISPlay:PERsistence:RESet..... | 558 |
| DISPlay:PERsistence:TIME..... | 558 |
| DISPlay:PERsistence[:STATe]..... | 558 |
| DISPlay:RESult:FONTSize..... | 557 |
| DISPlay:SIGNal:LABel..... | 572 |
| DISPlay:TOOLbar:COUNt?..... | 541 |
| DISPlay:TOOLbar:DESelect..... | 541 |
| DISPlay:TOOLbar:REStore..... | 541 |

| | |
|--|-----|
| EXPort:RESult:DELimiter..... | 562 |
| EXPort:RESult:NAME..... | 680 |
| EXPort:RESult:SAVE..... | 681 |
| EXPort:RESult:SElect:CURSor..... | 681 |
| EXPort:RESult:SElect:FRA:MARGin..... | 747 |
| EXPort:RESult:SElect:FRA:MARKer..... | 747 |
| EXPort:RESult:SElect:FRA:RESult..... | 747 |
| EXPort:RESult:SElect:MEASurement..... | 681 |
| EXPort:RESult:SElect:POWer<m>..... | 749 |
| EXPort:WAVEform:ABORT..... | 678 |
| EXPort:WAVEform:CURSorset..... | 680 |
| EXPort:WAVEform:GATE..... | 680 |
| EXPort:WAVEform:NAME..... | 678 |
| EXPort:WAVEform:SAVE..... | 678 |
| EXPort:WAVEform:SCOPE..... | 678 |
| EXPort:WAVEform:SOURce..... | 679 |
| EXPort:WAVEform:START..... | 679 |
| EXPort:WAVEform:STOP..... | 680 |
| FORMat:BPATtern..... | 532 |
| FORMat[:DATA]..... | 531 |
| FRANalysis:AMPLitude:ENABLE..... | 742 |
| FRANalysis:AMPLitude:MODE..... | 733 |
| FRANalysis:AMPLitude:OFFSet..... | 742 |
| FRANalysis:AMPLitude:PROFile:APOint..... | 738 |
| FRANalysis:AMPLitude:PROFile:COUNt..... | 738 |
| FRANalysis:AMPLitude:PROFile:MODE..... | 739 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude..... | 739 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency..... | 739 |
| FRANalysis:AMPLitude:PROFile:POINt<m>:REMOve..... | 738 |
| FRANalysis:AMPLitude:PROFile:SORT..... | 738 |
| FRANalysis:AMPLitude:SCALE..... | 742 |
| FRANalysis:AUToscale..... | 733 |
| FRANalysis:CALibration:CALibration..... | 740 |
| FRANalysis:CALibration:RESult?..... | 740 |
| FRANalysis:CALibration:STATe..... | 740 |
| FRANalysis:ENABLE..... | 733 |
| FRANalysis:FREQuency:DATA?..... | 743 |
| FRANalysis:FREQuency:START..... | 733 |
| FRANalysis:FREQuency:STOP..... | 734 |
| FRANalysis:GAIN:DATA?..... | 743 |
| FRANalysis:GAIN:ENABLE..... | 741 |
| FRANalysis:GAIN:OFFSet..... | 741 |
| FRANalysis:GAIN:SCALE..... | 742 |
| FRANalysis:GENerator:AMPLitude..... | 734 |
| FRANalysis:GENerator:LOAD..... | 734 |
| FRANalysis:GENerator[:CHANnel]..... | 734 |
| FRANalysis:INPut[:SOURce]..... | 735 |
| FRANalysis:MARGin:GAIN:FREQuency?..... | 745 |
| FRANalysis:MARGin:GAIN:VALue?..... | 745 |
| FRANalysis:MARGin:PHASe:FREQuency?..... | 745 |

| | |
|--|-----|
| FRANalysis:MARGIn:PHASe:VALue? | 745 |
| FRANalysis:MARGIn:STATe | 744 |
| FRANalysis:MARKer<m>:FREQUency | 746 |
| FRANalysis:MARKer<m>:GAIN? | 746 |
| FRANalysis:MARKer<m>:PHASe? | 746 |
| FRANalysis:MARKer<m>:SSCReen | 746 |
| FRANalysis:MARKer<m>:STATe | 745 |
| FRANalysis:MEASurement:DELay:STATe | 735 |
| FRANalysis:MEASurement:DELay[:TIME] | 735 |
| FRANalysis:MEASurement:POINt[:DISPlay] | 735 |
| FRANalysis:MEASurement:RBW | 736 |
| FRANalysis:OUTPut[:SOURce] | 736 |
| FRANalysis:PHASe:DATA? | 743 |
| FRANalysis:PHASe:ENABLE | 741 |
| FRANalysis:PHASe:MAXimum | 737 |
| FRANalysis:PHASe:OFFSet | 741 |
| FRANalysis:PHASe:SCALe | 741 |
| FRANalysis:POINts:LOGarithmic | 736 |
| FRANalysis:POINts:MODE | 736 |
| FRANalysis:POINts:TOTal | 737 |
| FRANalysis:REPeat | 737 |
| FRANalysis:RESet | 737 |
| FRANalysis:RESult:STATe | 744 |
| FRANalysis:STATe | 732 |
| GATE<g>:ABSolute:START | 697 |
| GATE<g>:ABSolute:STOP | 697 |
| GATE<g>:CURSor | 696 |
| GATE<g>:ENABLE | 695 |
| GATE<g>:GCOupling | 695 |
| GATE<g>:MODE | 696 |
| GATE<g>:RELative:START | 697 |
| GATE<g>:RELative:STOP | 697 |
| GATE<g>:SHOW | 697 |
| GATE<g>:ZDIagram | 696 |
| GENerator:RCL | 677 |
| GENerator:SAV | 677 |
| GENerator:SYNC[:COMBination] | 981 |
| HCOPY:DESTination<m> | 682 |
| HCOPY:DEVIce<m>:INVerse | 682 |
| HCOPY:DEVIce<m>:LANGuage | 682 |
| HCOPY:IMMEdiate<m>:NEXT | 683 |
| HCOPY:IMMEdiate<m>[:DUM] | 683 |
| HCOPY:ISBA | 683 |
| HCOPY:SSD | 684 |
| HCOPY:WBKG | 684 |
| HDEFinition:BWIDth | 603 |
| HDEFinition:RESolution? | 603 |
| HDEFinition:STATe | 603 |
| LAYout<ly>:ACTive | 537 |
| LAYout<ly>:COUNT? | 536 |

| | |
|--|-----|
| LAYout<ly>:DIAGram<da>:COUNT? | 537 |
| LAYout<ly>:DIAGram<da>:LABel | 538 |
| LAYout<ly>:DIAGram<da>:SOURce | 538 |
| LAYout<ly>:DIAGram<da>[:ENABLE] | 538 |
| LAYout<ly>:LABel | 537 |
| LAYout<ly>:NODE<no>:CHILdren<o>:CONTeNt<p>:ID | 539 |
| LAYout<ly>:NODE<no>:CHILdren<o>:CONTeNt<p>:TYPE | 539 |
| LAYout<ly>:NODE<no>:COUNT? | 538 |
| LAYout<ly>:NODE<no>:RATio | 540 |
| LAYout<ly>:NODE<no>:STYPe | 540 |
| LAYout<ly>:NODE<no>[:ENABLE] | 539 |
| LAYout<ly>:SACTive | 537 |
| LAYout<ly>:ZOOM<zo>:COUNT? | 645 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition | 645 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:START | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP | 646 |
| LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:MODE | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition | 647 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:START | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP | 648 |
| LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh | 649 |
| LAYout<ly>:ZOOM<zo>:SOURce | 649 |
| LAYout<ly>:ZOOM<zo>:SSCReen | 652 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition | 649 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:START | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP | 650 |
| LAYout<ly>:ZOOM<zo>:VERTical:MODE | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN | 652 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:START | 651 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP | 652 |
| LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh | 652 |
| LAYout<ly>:ZOOM<zo>[:ENABLE] | 645 |
| LAYout<ly>[:ENABLE] | 536 |
| MEASurement<mg>:AMPTime:CSLoPe | 687 |
| MEASurement<mg>:AMPTime:DELay<n>:DIRection | 689 |
| MEASurement<mg>:AMPTime:DELay<n>:SLOPe | 689 |
| MEASurement<mg>:AMPTime:DTOTriGger<n>:SLOPe | 689 |
| MEASurement<mg>:AMPTime:ESLoPe | 688 |
| MEASurement<mg>:AMPTime:PSLoPe | 688 |
| MEASurement<mg>:AMPTime:PTCount | 688 |
| MEASurement<mg>:COUNT? | 685 |
| MEASurement<mg>:ENVSelect | 687 |
| MEASurement<mg>:FSRC | 686 |
| MEASurement<mg>:GATE | 690 |

| | |
|--|-----|
| MEASurement<mg>:IMPRecise:STATus:CONDition? | 985 |
| MEASurement<mg>:IMPRecise:STATus:ENABle | 986 |
| MEASurement<mg>:IMPRecise:STATus:NTRansition | 987 |
| MEASurement<mg>:IMPRecise:STATus:PTRansition | 988 |
| MEASurement<mg>:IMPRecise:STATus[:EVENT]? | 986 |
| MEASurement<mg>:LIMit:STATus:CONDition? | 985 |
| MEASurement<mg>:LIMit:STATus:ENABle | 986 |
| MEASurement<mg>:LIMit:STATus:NTRansition | 987 |
| MEASurement<mg>:LIMit:STATus:PTRansition | 988 |
| MEASurement<mg>:LIMit:STATus[:EVENT]? | 986 |
| MEASurement<mg>:MAIN | 686 |
| MEASurement<mg>:MARGin:STATus:CONDition? | 985 |
| MEASurement<mg>:MARGin:STATus:ENABle | 986 |
| MEASurement<mg>:MARGin:STATus:NTRansition | 987 |
| MEASurement<mg>:MARGin:STATus:PTRansition | 988 |
| MEASurement<mg>:MARGin:STATus[:EVENT]? | 986 |
| MEASurement<mg>:MNOMeas | 694 |
| MEASurement<mg>:MULTiple | 694 |
| MEASurement<mg>:REFLevel<sc>:REFerence | 690 |
| MEASurement<mg>:RESult:AVG? | 691 |
| MEASurement<mg>:RESult:EVENTs:COUNT? | 692 |
| MEASurement<mg>:RESult:EVENTs:START? | 692 |
| MEASurement<mg>:RESult:EVENTs:STOP? | 693 |
| MEASurement<mg>:RESult:EVENTs:VALue? | 693 |
| MEASurement<mg>:RESult:EVTCount? | 691 |
| MEASurement<mg>:RESult:NPEak? | 691 |
| MEASurement<mg>:RESult:PPEak? | 691 |
| MEASurement<mg>:RESult:RELiability? | 691 |
| MEASurement<mg>:RESult:RMS? | 691 |
| MEASurement<mg>:RESult:START? | 692 |
| MEASurement<mg>:RESult:STDDev? | 691 |
| MEASurement<mg>:RESult:STOP? | 692 |
| MEASurement<mg>:RESult:WFMCount? | 691 |
| MEASurement<mg>:RESult[:ACTual]? | 691 |
| MEASurement<mg>:SOURce | 685 |
| MEASurement<mg>:SSRC | 686 |
| MEASurement<mg>:STATistics:ARESet | 693 |
| MEASurement<mg>:STATistics[:ENABle] | 694 |
| MEASurement<mg>:TRACk:AUTO | 702 |
| MEASurement<mg>:TRACk:CONTInuous | 702 |
| MEASurement<mg>:TRACk:DATA:HEADer? | 704 |
| MEASurement<mg>:TRACk:DATA[:VALues]? | 704 |
| MEASurement<mg>:TRACk:OFFSet | 703 |
| MEASurement<mg>:TRACk:SCALe | 703 |
| MEASurement<mg>:TRACk[:STATe] | 702 |
| MEASurement<mg>[:ENABle] | 685 |
| METer: BANDwidth | 773 |
| METer: DVMeter<m>:ACRMs:ENABle | 773 |
| METer: DVMeter<m>:ACRMs:RESult? | 774 |
| METer: DVMeter<m>:DC:ENABle | 774 |

| | |
|--------------------------------|-----|
| METer:DVMeter<m>:DC:RESult? | 774 |
| METer:DVMeter<m>:DCRMs:ENABle | 775 |
| METer:DVMeter<m>:DCRMs:RESult? | 775 |
| METer:DVMeter<m>:ENABle? | 773 |
| MMEMory:ATTRibute | 675 |
| MMEMory:AUSave:ENABle | 561 |
| MMEMory:AUSave:INTerval | 561 |
| MMEMory:AUTonaming:DEFaultpath | 562 |
| MMEMory:AUTonaming:INDex | 560 |
| MMEMory:AUTonaming:PREFix | 560 |
| MMEMory:AUTonaming:RESall | 562 |
| MMEMory:AUTonaming:RESPath | 562 |
| MMEMory:AUTonaming:TEXT | 562 |
| MMEMory:AUTonaming:TIME | 560 |
| MMEMory:AUTonaming:USERtext | 561 |
| MMEMory:CATalog:LENGth? | 673 |
| MMEMory:CATalog? | 672 |
| MMEMory:CDIRectory | 672 |
| MMEMory:COPIY | 673 |
| MMEMory:DATA | 674 |
| MMEMory:DCATalog:LENGth? | 671 |
| MMEMory:DCATalog? | 671 |
| MMEMory:DELEte | 674 |
| MMEMory:DRIVes? | 671 |
| MMEMory:GENerator:RCL | 676 |
| MMEMory:GENerator:SAV | 677 |
| MMEMory:LOAD:STATe | 676 |
| MMEMory:MDIRectory | 672 |
| MMEMory:MOVE | 674 |
| MMEMory:NAME | 682 |
| MMEMory:RCL | 676 |
| MMEMory:RDIRectory | 672 |
| MMEMory:SAV | 675 |
| MMEMory:STORE:STATe | 676 |
| PBUS<pb>:BIT<n>:LABel | 952 |
| PBUS<pb>:BIT<n>:SKEW | 953 |
| PBUS<pb>:BIT<n>[:STATe] | 953 |
| PBUS<pb>:CLEar | 953 |
| PBUS<pb>:CLOCK | 954 |
| PBUS<pb>:CLON | 954 |
| PBUS<pb>:CLSlope | 954 |
| PBUS<pb>:DATA:FORMat | 961 |
| PBUS<pb>:DATA:HEADer? | 961 |
| PBUS<pb>:DATA[:VALues]? | 962 |
| PBUS<pb>:DECTable:COUNT? | 955 |
| PBUS<pb>:DECTable:DATA? | 955 |
| PBUS<pb>:DECTable:SHOW | 955 |
| PBUS<pb>:DIGSignals:POSition | 955 |
| PBUS<pb>:DIGSignals:SCALE | 956 |
| PBUS<pb>:DISPlay:SHBU | 956 |

| | |
|---|-----|
| PBUS<pb>:DISPlay:SHDI..... | 956 |
| PBUS<pb>:HYSTeresis<n>..... | 957 |
| PBUS<pb>:POSition..... | 957 |
| PBUS<pb>:SCALe..... | 957 |
| PBUS<pb>:SKEW..... | 958 |
| PBUS<pb>:STATe..... | 958 |
| PBUS<pb>:TECHnology..... | 958 |
| PBUS<pb>:THCOupling..... | 959 |
| PBUS<pb>:THReshold<n>..... | 959 |
| POWer<m>:ASKew[:EXECute]..... | 749 |
| POWer<m>:HARMonics:AVAILable?..... | 763 |
| POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALE:TYPE..... | 761 |
| POWer<m>:HARMonics:DISPlay:FREQuency:START..... | 760 |
| POWer<m>:HARMonics:DISPlay:FREQuency:STOP..... | 761 |
| POWer<m>:HARMonics:DISPlay:HARMonics..... | 760 |
| POWer<m>:HARMonics:FREQuency:EN..... | 759 |
| POWer<m>:HARMonics:FREQuency:MIL..... | 759 |
| POWer<m>:HARMonics:FREQuency:RTCA..... | 759 |
| POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]?..... | 764 |
| POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]?..... | 766 |
| POWer<m>:HARMonics:MEASurement:REALpower[:ACTual]?..... | 764 |
| POWer<m>:HARMonics:MEASurement:REALpower[:ACTual]?..... | 766 |
| POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]?..... | 763 |
| POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]?..... | 763 |
| POWer<m>:HARMonics:PFACTOR:USER..... | 762 |
| POWer<m>:HARMonics:PFACTOR[:MODE]..... | 762 |
| POWer<m>:HARMonics:POWer:DATA:HEADer?..... | 771 |
| POWer<m>:HARMonics:POWer:DATA[:VALues]?..... | 772 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis..... | 767 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel..... | 767 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel..... | 768 |
| POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel..... | 768 |
| POWer<m>:HARMonics:REFLevel<rl>:LMODE..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer..... | 769 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDLE..... | 770 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE..... | 770 |
| POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer..... | 771 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?..... | 764 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?..... | 765 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?..... | 765 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?..... | 765 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?..... | 765 |
| POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?..... | 766 |
| POWer<m>:HARMonics:RESult<n>:VIOLation?..... | 763 |
| POWer<m>:HARMonics:RESult<n>[:FREQuency]?..... | 764 |
| POWer<m>:HARMonics:REVision..... | 758 |
| POWer<m>:HARMonics:RPOWer:USER..... | 762 |
| POWer<m>:HARMonics:RPOWer[:MODE]..... | 761 |
| POWer<m>:HARMonics:SOURce:CURRent..... | 757 |

| | |
|--|-----|
| POWer<m>:HARMonics:SOURce[:VOLTage]..... | 758 |
| POWer<m>:HARMonics:STANdard..... | 758 |
| POWer<m>:HARMonics:STATistics:RESet..... | 760 |
| POWer<m>:QUALity:FREQuency:USER..... | 750 |
| POWer<m>:QUALity:FREQuency[:VALue]..... | 750 |
| POWer<m>:QUALity:POWer:DATA:HEADer?..... | 771 |
| POWer<m>:QUALity:POWer:DATA[:VALues]?..... | 772 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis..... | 767 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel..... | 767 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel..... | 768 |
| POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel..... | 768 |
| POWer<m>:QUALity:REFLevel<rl>:LMODE..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer..... | 769 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDLE..... | 770 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:MODE..... | 770 |
| POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer..... | 771 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor:AVERAge?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor:NPEak?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor:PPEak?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor:RMS?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor:STDDev?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:CREStfactor[:ACTual]?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK:AVERAge?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK:NPEak?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK:PPEak?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK:RMS?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK:STDDev?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:PEAK[:ACTual]?..... | 752 |
| POWer<m>:QUALity:RESult:CURREnt:RMS:AVERAge?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:RMS:NPEak?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:RMS:PPEak?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:RMS:RMS?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:RMS:STDDev?..... | 753 |
| POWer<m>:QUALity:RESult:CURREnt:RMS[:ACTual]?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent:AVERAge?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent:NPEak?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent:PPEak?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent:RMS?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent:STDDev?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]?..... | 753 |
| POWer<m>:QUALity:RESult:POWer:PFACtor:AVERAge?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PFACtor:RMS?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PHASe:AVERAge?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PHASe:NPEak?..... | 754 |
| POWer<m>:QUALity:RESult:POWer:PHASe:PPEak?..... | 754 |

| | |
|---|-----|
| POWer<m>:QUALity:RESult:POWer:PHASe:RMS? | 754 |
| POWer<m>:QUALity:RESult:POWer:PHASe:STDDev? | 754 |
| POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]? | 754 |
| POWer<m>:QUALity:RESult:POWer:REACTive:AVERAge? | 755 |
| POWer<m>:QUALity:RESult:POWer:REACTive:NPEak? | 755 |
| POWer<m>:QUALity:RESult:POWer:REACTive:PPEak? | 755 |
| POWer<m>:QUALity:RESult:POWer:REACTive:RMS? | 755 |
| POWer<m>:QUALity:RESult:POWer:REACTive:STDDev? | 755 |
| POWer<m>:QUALity:RESult:POWer:REACTive[:ACTual]? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower:AVERAge? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower:NPEak? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower:PPEak? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower:RMS? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower:STDDev? | 755 |
| POWer<m>:QUALity:RESult:POWer:REALpower[:ACTual]? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor:AVERAge? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor:NPEak? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor:PPEak? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor:RMS? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor:STDDev? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:CREStfactor[:ACTual]? | 755 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency:AVERAge? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency:NPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency:PPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency:RMS? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency:STDDev? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:FREQUency[:ACTual]? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK:AVERAge? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK:NPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK:PPEak? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK:RMS? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK:STDDev? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:PEAK[:ACTual]? | 756 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS:AVERAge? | 757 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS:NPEak? | 757 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS:PPEak? | 757 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS:RMS? | 757 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS:STDDev? | 757 |
| POWer<m>:QUALity:RESult:VOLTagE:RMS[:ACTual]? | 757 |
| POWer<m>:QUALity:SOURce:CURREnt | 749 |
| POWer<m>:QUALity:SOURce[:VOLTagE] | 750 |
| POWer<m>:TYPE | 748 |
| POWer<m>[:ENABle] | 748 |
| PROBe<ch>:ID:PARTnumber? | 601 |
| PROBe<ch>:ID:PRDate? | 601 |
| PROBe<ch>:ID:SRNumber? | 601 |
| PROBe<ch>:ID:SWVersion? | 601 |
| PROBe<ch>:PMETer:RESults:COMMon? | 589 |
| PROBe<ch>:PMETer:RESults:DIFFerential? | 589 |
| PROBe<ch>:PMETer:RESults:NEGative? | 590 |

| | |
|--|-----|
| PROBe<ch>:PMETer:RESults:POSitive? | 590 |
| PROBe<ch>:PMETer:RESults:SINGle? | 589 |
| PROBe<ch>:PMETer:STATe | 588 |
| PROBe<ch>:SETup:ACCoupling | 587 |
| PROBe<ch>:SETup:ADAPter? | 600 |
| PROBe<ch>:SETup:ADVanced:AUDioverload | 590 |
| PROBe<ch>:SETup:ADVanced:FILTer | 591 |
| PROBe<ch>:SETup:ADVanced:PMTOffset | 591 |
| PROBe<ch>:SETup:ADVanced:RANGe | 591 |
| PROBe<ch>:SETup:ADVanced:RDEFaults | 599 |
| PROBe<ch>:SETup:ADVanced:UNIT | 597 |
| PROBe<ch>:SETup:ALIGnment:GAIN:EXECute | 598 |
| PROBe<ch>:SETup:ALIGnment:WRITe | 599 |
| PROBe<ch>:SETup:ALIGnment:ZERO:EXECute | 599 |
| PROBe<ch>:SETup:ATTenuation:DEFProbe | 582 |
| PROBe<ch>:SETup:ATTenuation:MANual | 582 |
| PROBe<ch>:SETup:ATTenuation:TDEFprobe | 600 |
| PROBe<ch>:SETup:ATTenuation:UNIT | 583 |
| PROBe<ch>:SETup:ATTenuation[:AUTO]? | 582 |
| PROBe<ch>:SETup:BANDwidth? | 583 |
| PROBe<ch>:SETup:CAPacitance? | 602 |
| PROBe<ch>:SETup:CMOFFset | 587 |
| PROBe<ch>:SETup:CMOFFset | 592 |
| PROBe<ch>:SETup:DCRange:MAX? | 602 |
| PROBe<ch>:SETup:DCRange:MIN? | 602 |
| PROBe<ch>:SETup:DEGAuss | 596 |
| PROBe<ch>:SETup:DISPlaydiff | 587 |
| PROBe<ch>:SETup:DMOFFset | 593 |
| PROBe<ch>:SETup:GAIN:AUTO? | 595 |
| PROBe<ch>:SETup:GAIN:MANual | 596 |
| PROBe<ch>:SETup:IMPedance? | 602 |
| PROBe<ch>:SETup:LASer:OPERatinghrs? | 598 |
| PROBe<ch>:SETup:LASer:STATe? | 598 |
| PROBe<ch>:SETup:MODE | 586 |
| PROBe<ch>:SETup:NAME? | 584 |
| PROBe<ch>:SETup:NOFFset | 593 |
| PROBe<ch>:SETup:OFFSet:AZERo | 584 |
| PROBe<ch>:SETup:OFFSet:STPProbe | 596 |
| PROBe<ch>:SETup:OFFSet:TOMean | 584 |
| PROBe<ch>:SETup:OFFSet:TOPMeter | 597 |
| PROBe<ch>:SETup:OFFSet:USEautozero | 584 |
| PROBe<ch>:SETup:OFFSet:ZADJust | 596 |
| PROBe<ch>:SETup:POFFset | 593 |
| PROBe<ch>:SETup:PRMode | 592 |
| PROBe<ch>:SETup:STATe? | 585 |
| PROBe<ch>:SETup:TERM:ADJust | 594 |
| PROBe<ch>:SETup:TERM:MEASure? | 594 |
| PROBe<ch>:SETup:TERM:MODE | 594 |
| PROBe<ch>:SETup:TERM:STATe | 595 |
| PROBe<ch>:SETup:TIPModel:NAME? | 599 |

| | |
|--|-----|
| PROBe<ch>:SETup:TYPE? | 585 |
| PROBe<ch>:SETup:ZAXV | 588 |
| REFCurve<rc>:ABORt | 661 |
| REFCurve<rc>:AXIS[:XMODE] | 664 |
| REFCurve<rc>:CLEAr | 661 |
| REFCurve<rc>:DATA:HEADer? | 669 |
| REFCurve<rc>:DATA:STYPe? | 668 |
| REFCurve<rc>:DATA[:VALues]? | 669 |
| REFCurve<rc>:HMODE | 665 |
| REFCurve<rc>:NAME | 662 |
| REFCurve<rc>:OFFSet | 662 |
| REFCurve<rc>:OPEN | 662 |
| REFCurve<rc>:POSition | 665 |
| REFCurve<rc>:RESCale:HORizontal:FACTor | 665 |
| REFCurve<rc>:RESCale:HORizontal:OFFSet | 666 |
| REFCurve<rc>:RESCale:HORizontal:STATe | 666 |
| REFCurve<rc>:RESCale:VERTical:FACTor | 666 |
| REFCurve<rc>:RESCale:VERTical:OFFSet | 667 |
| REFCurve<rc>:RESCale:VERTical:STATe | 667 |
| REFCurve<rc>:RESTore | 662 |
| REFCurve<rc>:SAVE | 663 |
| REFCurve<rc>:SCALE | 664 |
| REFCurve<rc>:SOURce | 663 |
| REFCurve<rc>:STATe | 663 |
| REFCurve<rc>:TOORiginal | 667 |
| REFCurve<rc>:UPDate | 663 |
| REFCurve<rc>:VMODE | 668 |
| REFLevel<rl>:ABSolute:HYSTerisis | 699 |
| REFLevel<rl>:ABSolute:LLEVel | 699 |
| REFLevel<rl>:ABSolute:MLEVel | 699 |
| REFLevel<rl>:ABSolute:ULEVel | 700 |
| REFLevel<rl>:ENABle | 698 |
| REFLevel<rl>:LMODE | 698 |
| REFLevel<rl>:RELative:HYSTerisis | 700 |
| REFLevel<rl>:RELative:LOWer | 700 |
| REFLevel<rl>:RELative:MIDDLE | 701 |
| REFLevel<rl>:RELative:MODE | 701 |
| REFLevel<rl>:RELative:UPPer | 701 |
| RUN | 565 |
| RUNCont | 565 |
| RUNSingle | 565 |
| SAVeset:CONFig:PREView | 677 |
| SBUS<m>:CAN:FRAMe<fr>:XDATA<o>:SBC? | 884 |
| SBUS<m>:SETReflEvels | 778 |
| SBUS<m>:THReshold | 778 |
| SBUS<m>:UART:EWORd | 840 |
| SBUS<m>:ZCOuPling | 777 |
| SBUS<sb>:ARINc:BRMode | 937 |
| SBUS<sb>:ARINc:BRValue | 937 |
| SBUS<sb>:ARINc:FILTer:BIT | 941 |

| | |
|--|-----|
| SBUS<sb>:ARINc:FILTer:CHKall..... | 940 |
| SBUS<sb>:ARINc:FILTer:CLR..... | 940 |
| SBUS<sb>:ARINc:FILTer:DMAX..... | 942 |
| SBUS<sb>:ARINc:FILTer:DMIN..... | 942 |
| SBUS<sb>:ARINc:FILTer:DOPerator..... | 942 |
| SBUS<sb>:ARINc:FILTer:ERENable..... | 941 |
| SBUS<sb>:ARINc:FILTer:ERENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABLE..... | 941 |
| SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABLE..... | 943 |
| SBUS<sb>:ARINc:FILTer:FIENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 941 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 942 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 943 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 944 |
| SBUS<sb>:ARINc:FILTer:FRENable..... | 943 |
| SBUS<sb>:ARINc:FILTer:IMAX..... | 944 |
| SBUS<sb>:ARINc:FILTer:IMIN..... | 944 |
| SBUS<sb>:ARINc:FILTer:INVert..... | 940 |
| SBUS<sb>:ARINc:FILTer:IOPerator..... | 944 |
| SBUS<sb>:ARINc:FILTer:RST..... | 941 |
| SBUS<sb>:ARINc:NEWList..... | 939 |
| SBUS<sb>:ARINc:POLarity..... | 937 |
| SBUS<sb>:ARINc:SOURce..... | 937 |
| SBUS<sb>:ARINc:SYMBols..... | 939 |
| SBUS<sb>:ARINc:THReshold:HIGH..... | 938 |
| SBUS<sb>:ARINc:THReshold:HYSTeresis..... | 938 |
| SBUS<sb>:ARINc:THReshold:LOW..... | 938 |
| SBUS<sb>:ARINc:WCOunt?..... | 945 |
| SBUS<sb>:ARINc:WORD<w>:BITRate?..... | 945 |
| SBUS<sb>:ARINc:WORD<w>:COunt?..... | 945 |
| SBUS<sb>:ARINc:WORD<w>:DATA?..... | 946 |
| SBUS<sb>:ARINc:WORD<w>:LABel?..... | 946 |
| SBUS<sb>:ARINc:WORD<w>:PATtern?..... | 946 |
| SBUS<sb>:ARINc:WORD<w>:SDI?..... | 947 |
| SBUS<sb>:ARINc:WORD<w>:SSM?..... | 947 |
| SBUS<sb>:ARINc:WORD<w>:STARt?..... | 947 |
| SBUS<sb>:ARINc:WORD<w>:STATe?..... | 948 |
| SBUS<sb>:ARINc:WORD<w>:STOP?..... | 948 |
| SBUS<sb>:ARINc:WORD<w>:SYMBol?..... | 949 |
| SBUS<sb>:CAN:BITRate..... | 856 |
| SBUS<sb>:CAN:FAST:HYSTeresis..... | 858 |
| SBUS<sb>:CAN:FAST:THReshold..... | 858 |
| SBUS<sb>:CAN:FCOunt?..... | 876 |
| SBUS<sb>:CAN:FDATa:DBITRate..... | 857 |
| SBUS<sb>:CAN:FDATa:SAMPlepoint..... | 857 |

| | |
|--|-----|
| SBUS<sb>:CAN:FILTer:BIT..... | 871 |
| SBUS<sb>:CAN:FILTer:CHKall..... | 870 |
| SBUS<sb>:CAN:FILTer:CLR..... | 870 |
| SBUS<sb>:CAN:FILTer:DMAX..... | 872 |
| SBUS<sb>:CAN:FILTer:DMIN..... | 872 |
| SBUS<sb>:CAN:FILTer:DOPerator..... | 872 |
| SBUS<sb>:CAN:FILTer:ENABle..... | 871 |
| SBUS<sb>:CAN:FILTer:ERENable..... | 873 |
| SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle..... | 873 |
| SBUS<sb>:CAN:FILTer:FIENable..... | 873 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle..... | 873 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 871 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 872 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 873 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 874 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 874 |
| SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 875 |
| SBUS<sb>:CAN:FILTer:FRENable..... | 873 |
| SBUS<sb>:CAN:FILTer:IMAX..... | 874 |
| SBUS<sb>:CAN:FILTer:IMIN..... | 874 |
| SBUS<sb>:CAN:FILTer:INVert..... | 871 |
| SBUS<sb>:CAN:FILTer:IOPerator..... | 875 |
| SBUS<sb>:CAN:FILTer:RST..... | 871 |
| SBUS<sb>:CAN:FRAMe<fr>:ACKState?..... | 876 |
| SBUS<sb>:CAN:FRAMe<fr>:ACKValue?..... | 876 |
| SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:STATe?..... | 877 |
| SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:VALue?..... | 877 |
| SBUS<sb>:CAN:FRAMe<fr>:COUNT?..... | 887 |
| SBUS<sb>:CAN:FRAMe<fr>:CSSTATe?..... | 877 |
| SBUS<sb>:CAN:FRAMe<fr>:CSValue?..... | 878 |
| SBUS<sb>:CAN:FRAMe<fr>:DATA?..... | 878 |
| SBUS<sb>:CAN:FRAMe<fr>:DBITrate?..... | 886 |
| SBUS<sb>:CAN:FRAMe<fr>:DLCState?..... | 878 |
| SBUS<sb>:CAN:FRAMe<fr>:DLCValue?..... | 879 |
| SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS?..... | 886 |
| SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI?..... | 886 |
| SBUS<sb>:CAN:FRAMe<fr>:FERCause?..... | 879 |
| SBUS<sb>:CAN:FRAMe<fr>:IDSTATe?..... | 879 |
| SBUS<sb>:CAN:FRAMe<fr>:IDType?..... | 880 |
| SBUS<sb>:CAN:FRAMe<fr>:IDValue?..... | 880 |
| SBUS<sb>:CAN:FRAMe<fr>:NBITrate?..... | 887 |
| SBUS<sb>:CAN:FRAMe<fr>:NDBYtes?..... | 880 |
| SBUS<sb>:CAN:FRAMe<fr>:SBC?..... | 887 |
| SBUS<sb>:CAN:FRAMe<fr>:SDATa?..... | 881 |
| SBUS<sb>:CAN:FRAMe<fr>:SDEXport?..... | 881 |
| SBUS<sb>:CAN:FRAMe<fr>:START?..... | 881 |
| SBUS<sb>:CAN:FRAMe<fr>:STATus?..... | 882 |
| SBUS<sb>:CAN:FRAMe<fr>:STOP?..... | 882 |

| | |
|---|-----|
| SBUS<sb>:CAN:FRAME<fr>:STUFF? | 882 |
| SBUS<sb>:CAN:FRAME<fr>:SYMBOL? | 883 |
| SBUS<sb>:CAN:FRAME<fr>:TYPE? | 883 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:AF? | 884 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:FCRC? | 888 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:PCRC? | 884 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:SDT? | 885 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:SEC? | 885 |
| SBUS<sb>:CAN:FRAME<fr>:XDAta<o>:VCID? | 885 |
| SBUS<sb>:CAN:NEWList | 860 |
| SBUS<sb>:CAN:POSition | 860 |
| SBUS<sb>:CAN:SAMPlepoint | 856 |
| SBUS<sb>:CAN:SCALE | 860 |
| SBUS<sb>:CAN:SIC:HYSteresis | 857 |
| SBUS<sb>:CAN:SIC:THReshold | 858 |
| SBUS<sb>:CAN:SOURce | 857 |
| SBUS<sb>:CAN:SYMBols | 859 |
| SBUS<sb>:CAN:TRCVmode | 859 |
| SBUS<sb>:CAN:TYPE | 856 |
| SBUS<sb>:CAN:XDAta:DBITrate | 858 |
| SBUS<sb>:CAN:XDAta:SAMPlepoint | 859 |
| SBUS<sb>:EXPResult:DETail | 778 |
| SBUS<sb>:EXPResult:EXTension | 779 |
| SBUS<sb>:EXPResult:PATH | 780 |
| SBUS<sb>:EXPResult:SAVE | 779 |
| SBUS<sb>:EXPResult:TIME | 779 |
| SBUS<sb>:FORMat | 777 |
| SBUS<sb>:I2C:FCOunt? | 832 |
| SBUS<sb>:I2C:FILTer:BIT | 831 |
| SBUS<sb>:I2C:FILTer:CHKall | 827 |
| SBUS<sb>:I2C:FILTer:CLR | 827 |
| SBUS<sb>:I2C:FILTer:DMAX | 828 |
| SBUS<sb>:I2C:FILTer:DMIN | 828 |
| SBUS<sb>:I2C:FILTer:DOPerator | 829 |
| SBUS<sb>:I2C:FILTer:ENABLE | 827 |
| SBUS<sb>:I2C:FILTer:ERENable | 829 |
| SBUS<sb>:I2C:FILTer:ERRor<n>:ENABLE | 829 |
| SBUS<sb>:I2C:FILTer:FIENable | 831 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:ENABLE | 828 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:BIT | 831 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:DMAX | 828 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:DMIN | 828 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:DOPerator | 829 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:ENABLE | 831 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:IMAX | 829 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:IMIN | 830 |
| SBUS<sb>:I2C:FILTer:FRAME<fr>:FLD<fl>:IOPerator | 830 |
| SBUS<sb>:I2C:FILTer:FRENable | 828 |
| SBUS<sb>:I2C:FILTer:IMAX | 829 |
| SBUS<sb>:I2C:FILTer:IMIN | 830 |

| | |
|---|-----|
| SBUS<sb>:I2C:FILTer:INVert..... | 827 |
| SBUS<sb>:I2C:FILTer:IOPerator..... | 830 |
| SBUS<sb>:I2C:FILTer:RST..... | 827 |
| SBUS<sb>:I2C:FRAMe<fr>:AACcess?..... | 832 |
| SBUS<sb>:I2C:FRAMe<fr>:ACCess?..... | 832 |
| SBUS<sb>:I2C:FRAMe<fr>:ACOMplete?..... | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADBStart?..... | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADDResS?..... | 833 |
| SBUS<sb>:I2C:FRAMe<fr>:ADEVice?..... | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:AMODE?..... | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:ASTart?..... | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:BCOunt?..... | 834 |
| SBUS<sb>:I2C:FRAMe<fr>:BITRate?..... | 835 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACCess?..... | 835 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACKStart?..... | 835 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:COMplete?..... | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:START?..... | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:VALue?..... | 836 |
| SBUS<sb>:I2C:FRAMe<fr>:DATA?..... | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:RWBStart?..... | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:START?..... | 837 |
| SBUS<sb>:I2C:FRAMe<fr>:STATus?..... | 838 |
| SBUS<sb>:I2C:FRAMe<fr>:STOP?..... | 838 |
| SBUS<sb>:I2C:FRAMe<fr>:SYMBol?..... | 839 |
| SBUS<sb>:I2C:NEWList..... | 822 |
| SBUS<sb>:I2C:POSition..... | 821 |
| SBUS<sb>:I2C:SCALe..... | 821 |
| SBUS<sb>:I2C:SCL:HYSteresis..... | 819 |
| SBUS<sb>:I2C:SCL:SOURce..... | 819 |
| SBUS<sb>:I2C:SCL:THReshold..... | 820 |
| SBUS<sb>:I2C:SDA:HYSteresis..... | 820 |
| SBUS<sb>:I2C:SDA:POSition..... | 821 |
| SBUS<sb>:I2C:SDA:SCALe..... | 821 |
| SBUS<sb>:I2C:SDA:SOURce..... | 820 |
| SBUS<sb>:I2C:SDA:THReshold..... | 820 |
| SBUS<sb>:I2C:SYMBols..... | 822 |
| SBUS<sb>:LIN:BITRate..... | 889 |
| SBUS<sb>:LIN:DATA:HYSteresis..... | 889 |
| SBUS<sb>:LIN:DATA:SOURce..... | 889 |
| SBUS<sb>:LIN:DATA:THReshold..... | 889 |
| SBUS<sb>:LIN:FCOunt?..... | 900 |
| SBUS<sb>:LIN:FILTer:BIT..... | 896 |
| SBUS<sb>:LIN:FILTer:CHKall..... | 895 |
| SBUS<sb>:LIN:FILTer:CLR..... | 895 |
| SBUS<sb>:LIN:FILTer:DMAX..... | 896 |
| SBUS<sb>:LIN:FILTer:DMIN..... | 896 |
| SBUS<sb>:LIN:FILTer:DOPerator..... | 897 |
| SBUS<sb>:LIN:FILTer:ERENable..... | 897 |
| SBUS<sb>:LIN:FILTer:ERRor<n>:ENABLE..... | 897 |
| SBUS<sb>:LIN:FILTer:FIENable..... | 897 |

| | |
|--|-----|
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle..... | 898 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 896 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 897 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 897 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 898 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 898 |
| SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 899 |
| SBUS<sb>:LIN:FILTer:FRENable..... | 898 |
| SBUS<sb>:LIN:FILTer:IMAX..... | 898 |
| SBUS<sb>:LIN:FILTer:IMIN..... | 898 |
| SBUS<sb>:LIN:FILTer:INVert..... | 895 |
| SBUS<sb>:LIN:FILTer:IOPerator..... | 899 |
| SBUS<sb>:LIN:FILTer:RST..... | 895 |
| SBUS<sb>:LIN:FRAMe<fr>:BITRate?..... | 900 |
| SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:COUNT?..... | 901 |
| SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:FVALue?..... | 901 |
| SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:LABel?..... | 901 |
| SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:STATe?..... | 900 |
| SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:VALue?..... | 900 |
| SBUS<sb>:LIN:FRAMe<fr>:CSValue?..... | 902 |
| SBUS<sb>:LIN:FRAMe<fr>:DATA?..... | 902 |
| SBUS<sb>:LIN:FRAMe<fr>:IDPValue?..... | 902 |
| SBUS<sb>:LIN:FRAMe<fr>:IDStAte?..... | 903 |
| SBUS<sb>:LIN:FRAMe<fr>:IDValue?..... | 903 |
| SBUS<sb>:LIN:FRAMe<fr>:PIDentifier?..... | 904 |
| SBUS<sb>:LIN:FRAMe<fr>:STARt?..... | 903 |
| SBUS<sb>:LIN:FRAMe<fr>:STATus?..... | 904 |
| SBUS<sb>:LIN:FRAMe<fr>:STOP?..... | 904 |
| SBUS<sb>:LIN:POLarity..... | 890 |
| SBUS<sb>:LIN:POSition..... | 890 |
| SBUS<sb>:LIN:SCALe..... | 890 |
| SBUS<sb>:LIN:STANdard..... | 890 |
| SBUS<sb>:QSPI:CSEL:HYSteresis..... | 800 |
| SBUS<sb>:QSPI:CSEL:POLarity..... | 800 |
| SBUS<sb>:QSPI:CSEL:SOURce..... | 800 |
| SBUS<sb>:QSPI:CSEL:THReshold..... | 800 |
| SBUS<sb>:QSPI:FCOunt?..... | 815 |
| SBUS<sb>:QSPI:FILTer:BIT..... | 810 |
| SBUS<sb>:QSPI:FILTer:CHKall..... | 809 |
| SBUS<sb>:QSPI:FILTer:CLR..... | 810 |
| SBUS<sb>:QSPI:FILTer:DMAX..... | 811 |
| SBUS<sb>:QSPI:FILTer:DMIN..... | 811 |
| SBUS<sb>:QSPI:FILTer:DOPerator..... | 811 |
| SBUS<sb>:QSPI:FILTer:ERENable..... | 813 |
| SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle..... | 813 |
| SBUS<sb>:QSPI:FILTer:FIENable..... | 814 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle..... | 814 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 810 |

| | |
|---|-----|
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMax..... | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMin..... | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 811 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 812 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 814 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 812 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 813 |
| SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 813 |
| SBUS<sb>:QSPI:FILTer:FRENABle..... | 814 |
| SBUS<sb>:QSPI:FILTer:IMAX..... | 812 |
| SBUS<sb>:QSPI:FILTer:IMIN..... | 813 |
| SBUS<sb>:QSPI:FILTer:INVert..... | 810 |
| SBUS<sb>:QSPI:FILTer:IOPerator..... | 813 |
| SBUS<sb>:QSPI:FILTer:RST..... | 810 |
| SBUS<sb>:QSPI:FRAMe<fr>:ADDR?..... | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:ALT?..... | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:BITRate?..... | 815 |
| SBUS<sb>:QSPI:FRAMe<fr>:DATA?..... | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:DCOunt?..... | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:FDATa?..... | 816 |
| SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:DVALue?..... | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:ILBL?..... | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:IVALue?..... | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:STARt?..... | 817 |
| SBUS<sb>:QSPI:FRAMe<fr>:STATus?..... | 818 |
| SBUS<sb>:QSPI:FRAMe<fr>:STOP?..... | 818 |
| SBUS<sb>:QSPI:INSTRUction..... | 801 |
| SBUS<sb>:QSPI:INSTRUction..... | 809 |
| SBUS<sb>:QSPI:IOONe:HYSTerEsis..... | 801 |
| SBUS<sb>:QSPI:IOONe:POLarity..... | 801 |
| SBUS<sb>:QSPI:IOONe:POSition..... | 801 |
| SBUS<sb>:QSPI:IOONe:SCALe..... | 802 |
| SBUS<sb>:QSPI:IOONe:SOURce..... | 802 |
| SBUS<sb>:QSPI:IOONe:THReshold..... | 802 |
| SBUS<sb>:QSPI:IOThree:HYSTerEsis..... | 802 |
| SBUS<sb>:QSPI:IOThree:POLarity..... | 803 |
| SBUS<sb>:QSPI:IOThree:POSition..... | 803 |
| SBUS<sb>:QSPI:IOThree:SCALe..... | 803 |
| SBUS<sb>:QSPI:IOThree:SOURce..... | 804 |
| SBUS<sb>:QSPI:IOThree:THReshold..... | 804 |
| SBUS<sb>:QSPI:IOtWo:HYSTerEsis..... | 804 |
| SBUS<sb>:QSPI:IOtWo:POLarity..... | 804 |
| SBUS<sb>:QSPI:IOtWo:POSition..... | 805 |
| SBUS<sb>:QSPI:IOtWo:SCALe..... | 805 |
| SBUS<sb>:QSPI:IOtWo:SOURce..... | 805 |
| SBUS<sb>:QSPI:IOtWo:THReshold..... | 805 |
| SBUS<sb>:QSPI:IOZero:HYSTerEsis..... | 806 |
| SBUS<sb>:QSPI:IOZero:POLarity..... | 806 |
| SBUS<sb>:QSPI:IOZero:POSition..... | 806 |
| SBUS<sb>:QSPI:IOZero:SCALe..... | 806 |

| | |
|--|-----|
| SBUS<sb>:QSPI:IOZero:SOURce..... | 807 |
| SBUS<sb>:QSPI:IOZero:THReshold..... | 807 |
| SBUS<sb>:QSPI:LDOPcode..... | 808 |
| SBUS<sb>:QSPI:SCLK:HYSteresis..... | 807 |
| SBUS<sb>:QSPI:SCLK:POLarity..... | 808 |
| SBUS<sb>:QSPI:SCLK:SOURce..... | 808 |
| SBUS<sb>:QSPI:SCLK:THReshold..... | 808 |
| SBUS<sb>:RESult..... | 777 |
| SBUS<sb>:SPI:BORDer..... | 781 |
| SBUS<sb>:SPI:CSElect:HYSteresis..... | 781 |
| SBUS<sb>:SPI:CSElect:POLarity..... | 781 |
| SBUS<sb>:SPI:CSElect:SOURce..... | 781 |
| SBUS<sb>:SPI:CSElect:THReshold..... | 782 |
| SBUS<sb>:SPI:FCOunt?..... | 794 |
| SBUS<sb>:SPI:FILTer:BIT..... | 788 |
| SBUS<sb>:SPI:FILTer:CHKall..... | 787 |
| SBUS<sb>:SPI:FILTer:CLR..... | 787 |
| SBUS<sb>:SPI:FILTer:DMAX..... | 789 |
| SBUS<sb>:SPI:FILTer:DMIN..... | 789 |
| SBUS<sb>:SPI:FILTer:DOPerator..... | 789 |
| SBUS<sb>:SPI:FILTer:ENABle..... | 788 |
| SBUS<sb>:SPI:FILTer:ERENable..... | 790 |
| SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:FIENable..... | 790 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT..... | 788 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator..... | 789 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle..... | 790 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX..... | 791 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 791 |
| SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 791 |
| SBUS<sb>:SPI:FILTer:FRENable..... | 790 |
| SBUS<sb>:SPI:FILTer:IMAX..... | 791 |
| SBUS<sb>:SPI:FILTer:IMIN..... | 791 |
| SBUS<sb>:SPI:FILTer:INVert..... | 788 |
| SBUS<sb>:SPI:FILTer:IOPerator..... | 791 |
| SBUS<sb>:SPI:FILTer:RST..... | 788 |
| SBUS<sb>:SPI:FRAMe<fr>:BITRate?..... | 794 |
| SBUS<sb>:SPI:FRAMe<fr>:COUNt?..... | 794 |
| SBUS<sb>:SPI:FRAMe<fr>:DATA?..... | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:STARt?..... | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:STATus?..... | 795 |
| SBUS<sb>:SPI:FRAMe<fr>:STOP?..... | 796 |
| SBUS<sb>:SPI:FRAMe<fr>:WCOunt?..... | 796 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?..... | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?..... | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?..... | 797 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?..... | 797 |

| | |
|--|-----|
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:START? | 798 |
| SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP? | 798 |
| SBUS<sb>:SPI:MISO:HYSteresis | 782 |
| SBUS<sb>:SPI:MISO:POLarity | 782 |
| SBUS<sb>:SPI:MISO:POSition | 786 |
| SBUS<sb>:SPI:MISO:SCALe | 786 |
| SBUS<sb>:SPI:MISO:SOURce | 783 |
| SBUS<sb>:SPI:MISO:THReshold | 783 |
| SBUS<sb>:SPI:MOSI:HYSteresis | 783 |
| SBUS<sb>:SPI:MOSI:POLarity | 783 |
| SBUS<sb>:SPI:MOSI:POSition | 786 |
| SBUS<sb>:SPI:MOSI:SCALe | 786 |
| SBUS<sb>:SPI:MOSI:SOURce | 784 |
| SBUS<sb>:SPI:MOSI:THReshold | 784 |
| SBUS<sb>:SPI:SCLK:HYSteresis | 784 |
| SBUS<sb>:SPI:SCLK:SOURce | 784 |
| SBUS<sb>:SPI:SCLK:THReshold | 785 |
| SBUS<sb>:SPI:TIMEout | 785 |
| SBUS<sb>:SPI:WSIZE | 785 |
| SBUS<sb>:SPMI:FILTer:BIT | 911 |
| SBUS<sb>:SPMI:FILTer:CHKall | 909 |
| SBUS<sb>:SPMI:FILTer:CHKall | 910 |
| SBUS<sb>:SPMI:FILTer:CLR | 910 |
| SBUS<sb>:SPMI:FILTer:CLR | 910 |
| SBUS<sb>:SPMI:FILTer:DMAX | 912 |
| SBUS<sb>:SPMI:FILTer:DMIN | 912 |
| SBUS<sb>:SPMI:FILTer:DOPERator | 912 |
| SBUS<sb>:SPMI:FILTer:ERENable | 913 |
| SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABLE | 913 |
| SBUS<sb>:SPMI:FILTer:FIENable | 914 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABLE | 914 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT | 911 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 912 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 912 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPERator | 912 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABLE | 914 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX | 914 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN | 913 |
| SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPERator | 913 |
| SBUS<sb>:SPMI:FILTer:FRENable | 914 |
| SBUS<sb>:SPMI:FILTer:IMAX | 914 |
| SBUS<sb>:SPMI:FILTer:IMIN | 913 |
| SBUS<sb>:SPMI:FILTer:INVert | 910 |
| SBUS<sb>:SPMI:FILTer:INVert | 911 |
| SBUS<sb>:SPMI:FILTer:IOPERator | 913 |
| SBUS<sb>:SPMI:FILTer:RST | 910 |
| SBUS<sb>:SPMI:FILTer:RST | 911 |
| SBUS<sb>:SPMI:FRAMe<fr>:ADDRess? | 915 |
| SBUS<sb>:SPMI:FRAMe<fr>:BC? | 915 |
| SBUS<sb>:SPMI:FRAMe<fr>:DATA? | 916 |

| | |
|--|-----|
| SBUS<sb>:SPMI:FRAMe<fr>:FDCount? | 916 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue? | 916 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue? | 917 |
| SBUS<sb>:SPMI:FRAMe<fr>:RBRate? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:SA? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:START? | 918 |
| SBUS<sb>:SPMI:FRAMe<fr>:STATus? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:STOP? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:TYPE? | 919 |
| SBUS<sb>:SPMI:FRAMe<fr>:WBRate? | 920 |
| SBUS<sb>:SPMI:GIDValue | 905 |
| SBUS<sb>:SPMI:GSIDenable | 906 |
| SBUS<sb>:SPMI:GTCHenable | 906 |
| SBUS<sb>:SPMI:GTWDith | 906 |
| SBUS<sb>:SPMI:POSition | 908 |
| SBUS<sb>:SPMI:SCALE | 908 |
| SBUS<sb>:SPMI:SCLK:HYSteresis | 907 |
| SBUS<sb>:SPMI:SCLK:SOURce | 907 |
| SBUS<sb>:SPMI:SCLK:THReshold | 907 |
| SBUS<sb>:SPMI:SDATa:HYSteresis | 907 |
| SBUS<sb>:SPMI:SDATa:SOURce | 908 |
| SBUS<sb>:SPMI:SDATa:THReshold | 908 |
| SBUS<sb>:TNOS:FCOunt? | 928 |
| SBUS<sb>:TNOS:FILTer:BIT | 924 |
| SBUS<sb>:TNOS:FILTer:CHKall | 923 |
| SBUS<sb>:TNOS:FILTer:CLR | 924 |
| SBUS<sb>:TNOS:FILTer:DMAX | 925 |
| SBUS<sb>:TNOS:FILTer:DMIN | 925 |
| SBUS<sb>:TNOS:FILTer:DOPerator | 925 |
| SBUS<sb>:TNOS:FILTer:ERENable | 926 |
| SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABLE | 926 |
| SBUS<sb>:TNOS:FILTer:FIENable | 926 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABLE | 928 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT | 924 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 925 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 925 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator | 925 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABLE | 926 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX | 926 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN | 927 |
| SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator | 927 |
| SBUS<sb>:TNOS:FILTer:FRENable | 928 |
| SBUS<sb>:TNOS:FILTer:IMAX | 926 |
| SBUS<sb>:TNOS:FILTer:IMIN | 927 |
| SBUS<sb>:TNOS:FILTer:INVert | 924 |
| SBUS<sb>:TNOS:FILTer:IOPerator | 927 |
| SBUS<sb>:TNOS:FILTer:RST | 924 |
| SBUS<sb>:TNOS:FRAMe<fr>:BCOunt? | 929 |

| | |
|--|-----|
| SBUS<sb>:TNOS:FRAMe<fr>:BITRate? | 929 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:COUNT? | 929 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:FVALue? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:LABEL? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:STATe? | 930 |
| SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:VALue? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:COUNT? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:CRC? | 931 |
| SBUS<sb>:TNOS:FRAMe<fr>:DATA? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:DTADdress? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:FCRC? | 932 |
| SBUS<sb>:TNOS:FRAMe<fr>:FDATA? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FDAddress? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FSRAddress? | 933 |
| SBUS<sb>:TNOS:FRAMe<fr>:FTPLentH? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:SRADdress? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:START? | 934 |
| SBUS<sb>:TNOS:FRAMe<fr>:STATus? | 935 |
| SBUS<sb>:TNOS:FRAMe<fr>:STOP? | 935 |
| SBUS<sb>:TNOS:FRAMe<fr>:TPLentH? | 936 |
| SBUS<sb>:TNOS:FRAMe<fr>:TYPE? | 936 |
| SBUS<sb>:TNOS:HYSTeresis | 921 |
| SBUS<sb>:TNOS:NEWList | 922 |
| SBUS<sb>:TNOS:POSition | 921 |
| SBUS<sb>:TNOS:SCALe | 921 |
| SBUS<sb>:TNOS:SOURce | 921 |
| SBUS<sb>:TNOS:SYMBols | 922 |
| SBUS<sb>:TNOS:THReshold:LOWer | 922 |
| SBUS<sb>:TNOS:THReshold:UPPer | 922 |
| SBUS<sb>:TYPE | 776 |
| SBUS<sb>:UART:BITRate | 840 |
| SBUS<sb>:UART:BORDER | 840 |
| SBUS<sb>:UART:FILTer:BIT | 851 |
| SBUS<sb>:UART:FILTer:CHKall | 848 |
| SBUS<sb>:UART:FILTer:CLR | 848 |
| SBUS<sb>:UART:FILTer:DMAX | 851 |
| SBUS<sb>:UART:FILTer:DMIN | 850 |
| SBUS<sb>:UART:FILTer:DOPerator | 850 |
| SBUS<sb>:UART:FILTer:ERENable | 850 |
| SBUS<sb>:UART:FILTer:ERRor<n>:ENABle | 850 |
| SBUS<sb>:UART:FILTer:FIENable | 852 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX | 851 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN | 850 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator | 850 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle | 852 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX | 849 |

| | |
|---|-----|
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN..... | 848 |
| SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator..... | 849 |
| SBUS<sb>:UART:FILTer:FRENAble..... | 851 |
| SBUS<sb>:UART:FILTer:IMAX..... | 849 |
| SBUS<sb>:UART:FILTer:IMIN..... | 848 |
| SBUS<sb>:UART:FILTer:INVert..... | 848 |
| SBUS<sb>:UART:FILTer:IOPerator..... | 849 |
| SBUS<sb>:UART:FILTer:RST..... | 848 |
| SBUS<sb>:UART:PACKets..... | 841 |
| SBUS<sb>:UART:PARity..... | 841 |
| SBUS<sb>:UART:POLarity..... | 842 |
| SBUS<sb>:UART:RX:HYSTeresis..... | 842 |
| SBUS<sb>:UART:RX:POSition..... | 844 |
| SBUS<sb>:UART:RX:SCALe..... | 845 |
| SBUS<sb>:UART:RX:SOURce..... | 842 |
| SBUS<sb>:UART:RX:THReshold..... | 842 |
| SBUS<sb>:UART:SBIT..... | 843 |
| SBUS<sb>:UART:SSIZe..... | 843 |
| SBUS<sb>:UART:TOUT..... | 843 |
| SBUS<sb>:UART:TX:HYSTeresis..... | 844 |
| SBUS<sb>:UART:TX:POSition..... | 845 |
| SBUS<sb>:UART:TX:SCALe..... | 845 |
| SBUS<sb>:UART:TX:SOURce..... | 844 |
| SBUS<sb>:UART:TX:THReshold..... | 844 |
| SBUS<sb>:UART:WORD<w>:BITRate?..... | 852 |
| SBUS<sb>:UART:WORD<w>:COUNT?..... | 853 |
| SBUS<sb>:UART:WORD<w>:RXValue?..... | 853 |
| SBUS<sb>:UART:WORD<w>:SOURce?..... | 853 |
| SBUS<sb>:UART:WORD<w>:START?..... | 854 |
| SBUS<sb>:UART:WORD<w>:STATe?..... | 854 |
| SBUS<sb>:UART:WORD<w>:STOP?..... | 854 |
| SBUS<sb>:UART:WORD<w>:TXValue?..... | 855 |
| SBUS<sb>[:STATe]..... | 776 |
| SENSe[:ROSCillator]:OUTPut[:ENABle]..... | 604 |
| SENSe[:ROSCillator]:SOURce..... | 604 |
| SERVice:REPort..... | 564 |
| SINGle..... | 565 |
| STATus:OPERation:CONDition?..... | 982 |
| STATus:OPERation:ENABle..... | 983 |
| STATus:OPERation[:EVENT]?..... | 982 |
| STATus:PRESet..... | 982 |
| STATus:QUEStionable:ADCState:CONDition?..... | 985 |
| STATus:QUEStionable:ADCState:ENABle..... | 987 |
| STATus:QUEStionable:ADCState:NTRansition..... | 987 |
| STATus:QUEStionable:ADCState:PTRansition..... | 988 |
| STATus:QUEStionable:ADCState[:EVENT]?..... | 986 |
| STATus:QUEStionable:COVerload:CONDition?..... | 985 |
| STATus:QUEStionable:COVerload:ENABle..... | 987 |
| STATus:QUEStionable:COVerload:NTRansition..... | 987 |
| STATus:QUEStionable:COVerload:PTRansition..... | 988 |

| | |
|---|-----|
| STATus:QUESTionable:COVerload[:EVENT]? | 986 |
| STATus:QUESTionable:GOVerload:CONDition? | 985 |
| STATus:QUESTionable:GOVerload:ENABle | 987 |
| STATus:QUESTionable:GOVerload:NTRansition | 987 |
| STATus:QUESTionable:GOVerload:PTRansition | 988 |
| STATus:QUESTionable:GOVerload[:EVENT]? | 986 |
| STATus:QUESTionable:IMPRecise:CONDition? | 985 |
| STATus:QUESTionable:IMPRecise:ENABle | 987 |
| STATus:QUESTionable:IMPRecise:NTRansition | 987 |
| STATus:QUESTionable:IMPRecise:PTRansition | 988 |
| STATus:QUESTionable:IMPRecise[:EVENT]? | 986 |
| STATus:QUESTionable:LIMit:CONDition? | 985 |
| STATus:QUESTionable:LIMit:ENABle | 987 |
| STATus:QUESTionable:LIMit:NTRansition | 987 |
| STATus:QUESTionable:LIMit:PTRansition | 988 |
| STATus:QUESTionable:LIMit[:EVENT]? | 986 |
| STATus:QUESTionable:MARGin:CONDition? | 985 |
| STATus:QUESTionable:MARGin:ENABle | 987 |
| STATus:QUESTionable:MARGin:NTRansition | 987 |
| STATus:QUESTionable:MARGin:PTRansition | 988 |
| STATus:QUESTionable:MARGin[:EVENT]? | 986 |
| STATus:QUESTionable:PLL:CONDition? | 985 |
| STATus:QUESTionable:PLL:ENABle | 987 |
| STATus:QUESTionable:PLL:NTRansition | 987 |
| STATus:QUESTionable:PLL:PTRansition | 988 |
| STATus:QUESTionable:PLL[:EVENT]? | 986 |
| STATus:QUESTionable:PPSupply:CONDition? | 985 |
| STATus:QUESTionable:PPSupply:ENABle | 987 |
| STATus:QUESTionable:PPSupply:NTRansition | 987 |
| STATus:QUESTionable:PPSupply:PTRansition | 988 |
| STATus:QUESTionable:PPSupply[:EVENT]? | 986 |
| STATus:QUESTionable:TEMPerature:CONDition? | 985 |
| STATus:QUESTionable:TEMPerature:ENABle | 987 |
| STATus:QUESTionable:TEMPerature:NTRansition | 987 |
| STATus:QUESTionable:TEMPerature:PTRansition | 988 |
| STATus:QUESTionable:TEMPerature[:EVENT]? | 986 |
| STOP | 566 |
| SYSTem:APUP | 565 |
| SYSTem:COMMunicate:NET[:HOSTname] | 533 |
| SYSTem:DATE | 534 |
| SYSTem:DISPlay:MESSage:STATe | 532 |
| SYSTem:DISPlay:MESSage[:TEXT] | 533 |
| SYSTem:DISPlay:UPDate | 532 |
| SYSTem:EXIT | 534 |
| SYSTem:FW:FILEpath | 534 |
| SYSTem:FW:START | 535 |
| SYSTem:PRESet | 534 |
| SYSTem:SHUTdown | 535 |
| SYSTem:TIME | 535 |
| TIMebase:DIVisions? | 567 |

| | |
|--|-----|
| TIMebase:HORizontal:POSition..... | 567 |
| TIMebase:RANGe..... | 566 |
| TIMebase:REFerence..... | 567 |
| TIMebase:ROLL:ENABle..... | 568 |
| TIMebase:ROLL:MTIME..... | 568 |
| TIMebase:ROLL:STATe?..... | 569 |
| TIMebase:SCALE..... | 566 |
| TRIGger:ACTions:OUT:DELay..... | 637 |
| TRIGger:ACTions:OUT:OVERload:STATus:CONDition?..... | 985 |
| TRIGger:ACTions:OUT:OVERload:STATus:ENABle..... | 986 |
| TRIGger:ACTions:OUT:OVERload:STATus:NTRansition..... | 987 |
| TRIGger:ACTions:OUT:OVERload:STATus:PTRansition..... | 987 |
| TRIGger:ACTions:OUT:OVERload:STATus:PTRansition..... | 988 |
| TRIGger:ACTions:OUT:OVERload:STATus[:EVENT]..... | 986 |
| TRIGger:ACTions:OUT:PLENght..... | 637 |
| TRIGger:ACTions:OUT:POLarity..... | 637 |
| TRIGger:ACTions:OUT:SOURce..... | 636 |
| TRIGger:ACTions:OUT:STATe..... | 636 |
| TRIGger:ANEDge:COUPLing..... | 610 |
| TRIGger:ANEDge:CUToff:HIGHPass..... | 610 |
| TRIGger:ANEDge:CUToff:LOWPass..... | 611 |
| TRIGger:ANEDge:FILTer..... | 610 |
| TRIGger:ANEDge:LEVel..... | 610 |
| TRIGger:ANEDge:NREJect..... | 611 |
| TRIGger:ANEDge:OVERload:STATus:CONDition?..... | 985 |
| TRIGger:ANEDge:OVERload:STATus:ENABle..... | 987 |
| TRIGger:ANEDge:OVERload:STATus:PTRansition..... | 988 |
| TRIGger:ANEDge:OVERload:STATus[:EVENT]..... | 986 |
| TRIGger:CAN:ACKError..... | 866 |
| TRIGger:CAN:BITStError..... | 866 |
| TRIGger:CAN:CRCError..... | 866 |
| TRIGger:CAN:DCONDition..... | 862 |
| TRIGger:CAN:DLC..... | 863 |
| TRIGger:CAN:DLCCondition..... | 863 |
| TRIGger:CAN:DMIN..... | 862 |
| TRIGger:CAN:FDATa:BRS..... | 866 |
| TRIGger:CAN:FDATa:DPOSITION..... | 863 |
| TRIGger:CAN:FDATa:ESI..... | 867 |
| TRIGger:CAN:FDATa:SCERror..... | 865 |
| TRIGger:CAN:FORMError..... | 865 |
| TRIGger:CAN:FTYPE..... | 863 |
| TRIGger:CAN:ICONDition..... | 864 |
| TRIGger:CAN:IMAX..... | 864 |
| TRIGger:CAN:IMIN..... | 864 |
| TRIGger:CAN:ITYPe..... | 865 |
| TRIGger:CAN:TYPE..... | 861 |
| TRIGger:CAN:XDATa:AF:CONDition..... | 867 |
| TRIGger:CAN:XDATa:AF:MAX..... | 867 |
| TRIGger:CAN:XDATa:AF:MIN..... | 868 |
| TRIGger:CAN:XDATa:SDT:CONDition..... | 868 |

| | |
|--|-----|
| TRIGger:CAN:XDATA:SDT:MAX..... | 868 |
| TRIGger:CAN:XDATA:SDT:MIN..... | 868 |
| TRIGger:CAN:XDATA:SEC..... | 869 |
| TRIGger:CAN:XDATA:VCID:CONDition..... | 869 |
| TRIGger:CAN:XDATA:VCID:MAX..... | 869 |
| TRIGger:CAN:XDATA:VCID:MIN..... | 869 |
| TRIGger:EVENT<ev>:EDGE:SLOPe..... | 609 |
| TRIGger:EVENT<ev>:GLITCh:POLarity..... | 611 |
| TRIGger:EVENT<ev>:GLITCh:RANGe..... | 612 |
| TRIGger:EVENT<ev>:GLITCh:WIDTh..... | 612 |
| TRIGger:EVENT<ev>:INTerval:DELTA..... | 620 |
| TRIGger:EVENT<ev>:INTerval:RANGe..... | 621 |
| TRIGger:EVENT<ev>:INTerval:SLOPe..... | 621 |
| TRIGger:EVENT<ev>:INTerval:WIDTh..... | 621 |
| TRIGger:EVENT<ev>:LEVel<n>:RUNT:LOWer..... | 614 |
| TRIGger:EVENT<ev>:LEVel<n>:RUNT:UPPer..... | 614 |
| TRIGger:EVENT<ev>:LEVel<n>:SLEW:LOWer..... | 622 |
| TRIGger:EVENT<ev>:LEVel<n>:SLEW:UPPer..... | 622 |
| TRIGger:EVENT<ev>:LEVel<n>:WINDow:LOWer..... | 617 |
| TRIGger:EVENT<ev>:LEVel<n>:WINDow:UPPer..... | 617 |
| TRIGger:EVENT<ev>:LEVel<n>[:VALue]..... | 606 |
| TRIGger:EVENT<ev>:PATtern:QUALify:ANALog:CHAN<n>:HLX..... | 628 |
| TRIGger:EVENT<ev>:PATtern:QUALify:DIGital:CHAN<n>:HLX..... | 628 |
| TRIGger:EVENT<ev>:PATtern:QUALify:DIGital:LOGic..... | 629 |
| TRIGger:EVENT<ev>:PATtern:QUALify:LOGic..... | 629 |
| TRIGger:EVENT<ev>:PATtern:QUALify:SOURces..... | 629 |
| TRIGger:EVENT<ev>:RUNT:DELTA..... | 615 |
| TRIGger:EVENT<ev>:RUNT:POLarity..... | 615 |
| TRIGger:EVENT<ev>:RUNT:RANGe..... | 615 |
| TRIGger:EVENT<ev>:RUNT:WIDTh..... | 616 |
| TRIGger:EVENT<ev>:SETHold:CSOURce:EDGE..... | 624 |
| TRIGger:EVENT<ev>:SETHold:CSOURce:LEVel..... | 625 |
| TRIGger:EVENT<ev>:SETHold:CSOURce[:VALue]..... | 625 |
| TRIGger:EVENT<ev>:SETHold:HTIME..... | 625 |
| TRIGger:EVENT<ev>:SETHold:STIME..... | 626 |
| TRIGger:EVENT<ev>:SLEW:DELTA..... | 623 |
| TRIGger:EVENT<ev>:SLEW:RANGe..... | 623 |
| TRIGger:EVENT<ev>:SLEW:RATE..... | 624 |
| TRIGger:EVENT<ev>:SLEW:SLOPe..... | 624 |
| TRIGger:EVENT<ev>:SOURce..... | 606 |
| TRIGger:EVENT<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX..... | 626 |
| TRIGger:EVENT<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX..... | 628 |
| TRIGger:EVENT<ev>:STATe:QUALify:DIGital:LOGic..... | 627 |
| TRIGger:EVENT<ev>:STATe:QUALify:LOGic..... | 627 |
| TRIGger:EVENT<ev>:STATe:SLOPe..... | 627 |
| TRIGger:EVENT<ev>:TIMEout:RANGe..... | 619 |
| TRIGger:EVENT<ev>:TIMEout:TIME..... | 620 |
| TRIGger:EVENT<ev>:TYPE..... | 605 |
| TRIGger:EVENT<ev>:WIDTh:DELTA..... | 613 |
| TRIGger:EVENT<ev>:WIDTh:POLarity..... | 613 |

| | |
|--|-----|
| TRIGger:EVENT<ev>:WIDTh:RANGe..... | 613 |
| TRIGger:EVENT<ev>:WIDTh:WIDTh..... | 613 |
| TRIGger:EVENT<ev>:WINDow:DELTA..... | 617 |
| TRIGger:EVENT<ev>:WINDow:RANGe..... | 618 |
| TRIGger:EVENT<ev>:WINDow:TIME..... | 618 |
| TRIGger:EVENT<ev>:WINDow:WIDTh..... | 619 |
| TRIGger:FILTerMode..... | 635 |
| TRIGger:FINdLevel..... | 606 |
| TRIGger:FORCe..... | 630 |
| TRIGger:HOLDoff:AUTotime?..... | 631 |
| TRIGger:HOLDoff:EVENTs..... | 632 |
| TRIGger:HOLDoff:MAX..... | 632 |
| TRIGger:HOLDoff:MIN..... | 633 |
| TRIGger:HOLDoff:MODE..... | 631 |
| TRIGger:HOLDoff:SCALing..... | 632 |
| TRIGger:HOLDoff:TIME..... | 633 |
| TRIGger:I2C:ACCess..... | 823 |
| TRIGger:I2C:ACONdition..... | 823 |
| TRIGger:I2C:ADDReSS..... | 824 |
| TRIGger:I2C:ADDTo..... | 824 |
| TRIGger:I2C:ADNack..... | 824 |
| TRIGger:I2C:AMODE..... | 824 |
| TRIGger:I2C:DCONdition..... | 825 |
| TRIGger:I2C:DMIN..... | 825 |
| TRIGger:I2C:DPOStion..... | 825 |
| TRIGger:I2C:DRNack..... | 825 |
| TRIGger:I2C:DWNack..... | 826 |
| TRIGger:I2C:TYPE..... | 823 |
| TRIGger:LFReject..... | 635 |
| TRIGger:LIN:CHKSeRror..... | 892 |
| TRIGger:LIN:DCONdition..... | 892 |
| TRIGger:LIN:DMIN..... | 892 |
| TRIGger:LIN:DPOStion..... | 892 |
| TRIGger:LIN:ICONdition..... | 893 |
| TRIGger:LIN:IMAX..... | 893 |
| TRIGger:LIN:IMIN..... | 893 |
| TRIGger:LIN:IPERror..... | 893 |
| TRIGger:LIN:SYERror..... | 894 |
| TRIGger:LIN:TYPE..... | 891 |
| TRIGger:MEVents:AEVents..... | 607 |
| TRIGger:MEVents:MODE..... | 605 |
| TRIGger:MEVents:SEQuence<se>:COUNt..... | 607 |
| TRIGger:MEVents:SEQuence<se>:DELay..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:EVENT..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:TIMEout:TIME..... | 608 |
| TRIGger:MEVents:SEQuence<se>:RESet:TIMEout[:ENABLE]..... | 609 |
| TRIGger:MODE..... | 630 |
| TRIGger:NOISe<m>:ABSolute..... | 633 |
| TRIGger:NOISe<m>:EFFective?..... | 634 |
| TRIGger:NOISe<m>:MODE..... | 634 |

| | |
|--|-----|
| TRIGger:NOISe<m>:PERDivision..... | 634 |
| TRIGger:NOISe<m>:RELative..... | 634 |
| TRIGger:NOISe<m>[:STATe]..... | 635 |
| TRIGger:RFReject..... | 636 |
| TRIGger:SPI:DMINpattern..... | 792 |
| TRIGger:SPI:DPOSition..... | 793 |
| TRIGger:SPI:FCONdition..... | 793 |
| TRIGger:SPI:PALignment..... | 793 |
| TRIGger:SPI:TYPE..... | 792 |
| TRIGger:UART:DATA..... | 846 |
| TRIGger:UART:DPOSition..... | 846 |
| TRIGger:UART:FCONdition..... | 846 |
| TRIGger:UART:OPERator..... | 846 |
| TRIGger:UART:SOURce..... | 846 |
| TRIGger:UART:TYPE..... | 847 |
| TRIGger:ZONE:EXPRession[:DEFine]..... | 638 |
| TRIGger:ZONE:HISTory..... | 638 |
| USERdefined:PRESet:NAME..... | 563 |
| USERdefined:PRESet:OPEN..... | 563 |
| USERdefined:PRESet:SAVE..... | 563 |
| USERdefined:PRESet[:ENABle]..... | 563 |
| WGENerator<wg>:ARBGen:NAME..... | 976 |
| WGENerator<wg>:ARBGen:OPEN..... | 976 |
| WGENerator<wg>:ARBGen:RUNMode..... | 977 |
| WGENerator<wg>:ARBGen:RUNSingle..... | 977 |
| WGENerator<wg>:ARBGen:SAMPles?..... | 977 |
| WGENerator<wg>:ARBGen:SRATe..... | 978 |
| WGENerator<wg>:ARBGen[:SOURce]..... | 978 |
| WGENerator<wg>:COUPling:AMPLitude..... | 980 |
| WGENerator<wg>:COUPling:PHASeshift..... | 981 |
| WGENerator<wg>:COUPling:STATe..... | 980 |
| WGENerator<wg>:COUPling[:FREQuency]..... | 981 |
| WGENerator<wg>:FREQuency..... | 963 |
| WGENerator<wg>:FUNCTion:PULSe[:WIDTh]..... | 963 |
| WGENerator<wg>:FUNCTion:RAMP[:SYMMetry]..... | 964 |
| WGENerator<wg>:FUNCTion[:SELect]..... | 964 |
| WGENerator<wg>:FUNCTion[:SQUare]:DCYCLE..... | 964 |
| WGENerator<wg>:GOVerload:STATus:CONDition?..... | 985 |
| WGENerator<wg>:GOVerload:STATus:ENABle..... | 987 |
| WGENerator<wg>:GOVerload:STATus:NTRansition..... | 987 |
| WGENerator<wg>:GOVerload:STATus:PTRansition..... | 988 |
| WGENerator<wg>:GOVerload:STATus[:EVENT]..... | 986 |
| WGENerator<wg>:MODulation:AM:DCYCLE..... | 969 |
| WGENerator<wg>:MODulation:AM:DEPTH..... | 969 |
| WGENerator<wg>:MODulation:AM:FREQuency..... | 969 |
| WGENerator<wg>:MODulation:AM:SYMMetry..... | 970 |
| WGENerator<wg>:MODulation:AM[:FUNCTion]..... | 970 |
| WGENerator<wg>:MODulation:CARRier:FREQuency..... | 970 |
| WGENerator<wg>:MODulation:CARRier:PERiod..... | 970 |
| WGENerator<wg>:MODulation:FM:DCYCLE..... | 971 |

| | |
|--|-----|
| WGENerator<wg>:MODulation:FM:DEVIation..... | 971 |
| WGENerator<wg>:MODulation:FM:FREQUency..... | 971 |
| WGENerator<wg>:MODulation:FM:SYMMetry..... | 972 |
| WGENerator<wg>:MODulation:FM[:FUNction]..... | 972 |
| WGENerator<wg>:MODulation:FSK:FONE..... | 972 |
| WGENerator<wg>:MODulation:FSK:FTWO..... | 972 |
| WGENerator<wg>:MODulation:FSK[:RATE]..... | 973 |
| WGENerator<wg>:MODulation:NDCLevel..... | 973 |
| WGENerator<wg>:MODulation:NLABsolute?..... | 973 |
| WGENerator<wg>:MODulation:NLPCent..... | 974 |
| WGENerator<wg>:MODulation:PWM:DCYCLE..... | 974 |
| WGENerator<wg>:MODulation:PWM:DEPTH..... | 974 |
| WGENerator<wg>:MODulation:PWM:FREQUency..... | 975 |
| WGENerator<wg>:MODulation:PWM:SYMMetry..... | 975 |
| WGENerator<wg>:MODulation:PWM[:FUNction]..... | 975 |
| WGENerator<wg>:MODulation:TYPE..... | 976 |
| WGENerator<wg>:MODulation[:STATe]..... | 968 |
| WGENerator<wg>:OUTPut[:LOAD]..... | 965 |
| WGENerator<wg>:PERiod..... | 965 |
| WGENerator<wg>:PRESet..... | 965 |
| WGENerator<wg>:SWEep:FEND..... | 979 |
| WGENerator<wg>:SWEep:FSTart..... | 979 |
| WGENerator<wg>:SWEep:TIME..... | 979 |
| WGENerator<wg>:SWEep:TYPE..... | 979 |
| WGENerator<wg>:SWEep[:STATe]..... | 978 |
| WGENerator<wg>:TEMPerature:STATus:CONDition?..... | 985 |
| WGENerator<wg>:TEMPerature:STATus:ENABLE..... | 987 |
| WGENerator<wg>:TEMPerature:STATus:NTRansition..... | 987 |
| WGENerator<wg>:TEMPerature:STATus:PTRansition..... | 988 |
| WGENerator<wg>:TEMPerature:STATus[:EVENT]..... | 986 |
| WGENerator<wg>:VOLTage:DCLevel..... | 966 |
| WGENerator<wg>:VOLTage:HIGH..... | 966 |
| WGENerator<wg>:VOLTage:INVersion..... | 966 |
| WGENerator<wg>:VOLTage:LOW..... | 967 |
| WGENerator<wg>:VOLTage:OFFSet..... | 967 |
| WGENerator<wg>:VOLTage[:VPP]..... | 967 |
| WGENerator<wg>[:ENABLE]..... | 967 |
| ZONE<m>:ACOMbination..... | 639 |
| ZONE<m>:ADD..... | 639 |
| ZONE<m>:AREA<n>:ADD..... | 639 |
| ZONE<m>:AREA<n>:COUNT..... | 639 |
| ZONE<m>:AREA<n>:INTersect..... | 640 |
| ZONE<m>:AREA<n>:LABel..... | 640 |
| ZONE<m>:AREA<n>:POINt<o>:ADD..... | 640 |
| ZONE<m>:AREA<n>:POINt<o>:COUNT?..... | 641 |
| ZONE<m>:AREA<n>:POINt<o>:REMOve..... | 641 |
| ZONE<m>:AREA<n>:POINt<o>:X..... | 641 |
| ZONE<m>:AREA<n>:POINt<o>:Y..... | 641 |
| ZONE<m>:AREA<n>:REMOve..... | 642 |
| ZONE<m>:AREA<n>:STATe..... | 642 |

| | |
|------------------------|-----|
| ZONE<m>:COUNT..... | 642 |
| ZONE<m>:DIAGram..... | 643 |
| ZONE<m>:REMOve..... | 643 |
| ZONE<m>:SOURce..... | 643 |
| ZONE<m>[:VISible]..... | 643 |

Index

Symbols

10BASE-T1S
Configuring 459

A

Acquisition
 Single, multiple 41, 115
 Start and stop 41, 115
Acquisitions per second 121
Active waveform 58
Adapter for Tektronix probes 147
Add gate 64
Aligning
 Input channels 101
Annotate 63, 70
Apps key 47
Arranging waveforms 59
Auto Norm
 Key 41
Auto trigger mode 41
Auto, trigger mode 181
Autonaming 103
Autoset
 Key 47
Average
 Spectrum 270
Average count 116
Average count (N-single count) 116

B

Bench top operation 30
Bit pattern editor 348
Blackman Harris window (FFT) 270
Blind time 121
Brochure 26
Bug report 994

C

C<n> keys 43
Calibration certificate 27
Camera key 47
CAN
 Configuring 427
 Decode results 425
 Trigger settings 416
 Triggering 428
Changing fuses 993
Channel
 C<n> keys 43
 Waveforms 57
Clear status
 Remote 528
Clock
 Logic 474
Command sequence
 Remote 530
Commands
 Finding a command 521
Compensation, passive probes 149
CONDition 512

CSV export 105
Cursor key 46
Cursor measurements
 Envelope waveform 233
 How to 229
 Peak search 236
 Results 228
Cursors 64
 Configuring display 230
 Configuring measurement 229
 Position 234
 Start measurement 229
Customer support 993

D

Data entry 67
Data security 994
Data sheet 26
Data2Clock trigger 172
Date/time display 72
Decode table
 MSO 477
Default
 File names 105
 Path for saving 105
Default values
 Remote 529
Delete 64
Demo
 Input connectors 37
Device ID 77
Device name 500
DHCP 500
DHCP server
 LAN configuration 500
Diagrams 52
Dialog boxes
 Usage 66
Dialogs 54
Digital channels
 Decode table 477
Display
 Intensity 92
 Overview 51
Display elements 51
 Diagram 51
DNS server
 LAN configuration 500
Download data 505

E

Edge trigger 157
Edit spectrum 64
ENABLE 512
Envelope
 Measurements 254
Envelope waveform
 Cursor measurement 233
Error queue 514
Error report 994
ESE (Event Status Enable register) 514

- ESR 511
- ESR (Event Status Register) 514
- EVENT 512
- Event Status Enable register (ESE) 514
- Event Status Register (ESR) 514
- Expressions 207
- External monitor 40
- F**
- FFT
 - Configuring 266
 - Performance considerations 267
 - Setup 268
 - Window types 270
- File browser 64, 338
- File manager 505
- File names
 - Default 103, 105
- Files 338
- Firmware version 77
- Flattop2 window (FFT) 270
- Formulas
 - Advanced expressions 207
- Function generator
 - Output connectors 37
- Fuses 993
- G**
- Gaussian window (FFT) 270
- Gen key 44
- Getting started 26
- Glitch trigger 160
- GPIO
 - Remote control interface 507
- Grid 52
- Grounding 32
- H**
- Hamming window (FFT) 270
- Hann window (FFT) 270
- HD key 47
- HDMI connector 40
- Help 26, 63
 - Open 74
- High definition 120
- History
 - MSO 476
 - Time stamp 216
- History key 47
- Holdoff 180
- Horizontal
 - Controls 42
 - Label 53
 - Position 42
- Host name 500
- I**
- I2C
 - Configuring 389
 - Triggering 391
- I²C
 - Basics 374
 - Decode results 387
 - Trigger settings 383
- Identification
 - Remote 528
- Infinite persistence 91
- Info 53
- Information on instrument 72
- Instrument settings
 - Recall 529
 - Save 530
- Intensity 92
- Intensity key 46
- Interfaces
 - LAN 508
- Interpolation 118
- Interrupt 517
- Interval trigger 168
- IP address 508
 - Changing 500
- K**
- Kaiser Bessel window (FFT) 270
- Keep X-grid fixed 88
- Keep Y-grid fixed 88
- Keyboard
 - On-screen 67
- Keypad 67
- L**
- LAN
 - Configuration 499, 501
 - Connector 40
 - Environment 499
 - Interface 508
 - IP address 508
 - Remote control interface 507
 - Resource string 508
- Languages 80
- Layout 52
- Level knob 41
- LIN
 - Configuring 442
 - Decode results 440
 - Triggering 443
- Load instrument settings 529
- Lock touchscreen 47
- Logic
 - Clock setup 474
 - Configuration settings 470
- Logic analyzer 470
- Logic buses
 - Decode table 477
- Logic key 44
- Logical thresholds
 - MSO settings 472
- M**
- Manuals 26
- Material number 77
- Math key 45

- Math waveforms 45, 57
 - Displaying 203
 - FFT setup 268
 - Formula editor 207
 - Operators 205
- Measure key 47
- Measurement 64
 - Add 239
- Menu 54, 55
- Minimized waveform 58
- Mixed signal option 470
- Monitor 40
- MSO 470
 - History 476
 - Zoom 476
- N**
- Network
 - Environment 499
- Normal trigger mode 41
- Normal, trigger mode 181
- Notifications 72
- NTRansition 512
- Numeric data entry 67
- O**
- On/Off key 40
- Open source acknowledgment 27
- Open Source Acknowledgment 77
- Operation
 - Concepts 50
 - Manual 50
- Operation complete
 - Remote 529
- Operator
 - Type 205
- Options
 - Identification (remote) 529
- Output buffer 511
- P**
- Pattern trigger 175
- Peak excursion
 - Spectrum measurement 237, 276
- Peak search
 - Spectrum measurement 236
- Performance
 - Considerations for FFT 267
- Ping 504
- Position
 - Horizontal 42
- Power
 - Connector 40
 - On/Off 32
- Power analysis 293
- Power analysis measurement
 - Add 293
- Preset 95
- Preset key 47
- Printing
 - Settings 335
- Probes
 - Compensation connectors 37
 - Passive, compensation 149
 - Tektronix 147
- Protocols
 - Advanced settings 343
 - CAN decode results 425
 - CAN trigger settings 416
 - Display settings 343
 - Filter settings 345
 - I²C decode results 387
 - I²C trigger settings 383
 - LIN decode results 440
 - SPI configuration settings 350
 - SPI trigger settings 356
 - Trigger settings 346
 - UART decode results 402
- PTRansition 512
- Q**
- QUAD-SPI
 - Configuring 373
- R**
- R&S RT-Z2T 147
- Rack mounting 31
- Recall instrument settings 529
- Recall intermediate 529
- Rectangular window (FFT) 270
- Redo 63
- Ref key 44
- Reference waveforms 44, 57
 - Displaying 219
 - Loading 219
 - Saving 219
- Registers 511
- Release notes 27
- Remote commands
 - Finding a command 521
- Remote control 50
 - Find command using help 74
 - Interfaces 507
 - Protocols 507
 - Starting 509
- Remote Desktop 50
- Remote operation 50, 505
- Repetitive, trigger mode 181
- Reset values
 - Remote 529
- Resolution
 - 16 bit 120
- Resource string
 - LAN 508
- Restoring
 - Settings 98
- Result tables 54
- Results
 - Configuring display 69
 - Displaying 69
- Roll mode 109
- RS232
 - Basics 393
- Run / Stop 64
- Run / Stop key 41
- Runt trigger 163

S

| | |
|---|---------------|
| Safety instructions | 26 |
| Save instrument settings | 530 |
| Save intermediate | 530 |
| Save/Recall | |
| Remote | 670 |
| Saving | |
| File name generation | 103 |
| Preset | 95 |
| Screenshots | 338 |
| Scale | |
| Horizontal, rotary knob | 42 |
| SCPI | |
| Finding a command | 521 |
| Screenshot | |
| Saving | 338 |
| Screenshots | 335 |
| Meta information | 335 |
| Search | 55 |
| Secured environment | 994 |
| Select | |
| Waveform | 58 |
| Selected waveform | 58 |
| Self-alignment | 101, 528 |
| Serial number | 77 |
| Service request (SRQ) | 513, 514, 517 |
| Service request enable register (SRE) | 513 |
| Remote | 530 |
| Setup & Hold trigger | 172 |
| Signal bar | 53 |
| Signal icons | 53 |
| Signal label | 53 |
| Signal view | 53 |
| Single | 64 |
| Single key | 41 |
| Slew rate trigger | 170 |
| Slope key | 42 |
| SmartGrid | 59 |
| Source key | 41 |
| Specifications | 26 |
| Spectrum | |
| Key | 45 |
| Spectrum measurements | |
| Peak excursion | 237, 276 |
| SPI | |
| Configuration settings | 350 |
| Configuring | 359 |
| Trigger settings | 356 |
| Triggering | 361 |
| SPI protocol | |
| Basics | 349 |
| SPMI | |
| Configuring | 452 |
| SRE | 511 |
| SRE (service request enable register) | 513 |
| SRQ (service request) | 513, 517 |
| State trigger | 174 |
| Status byte | |
| Remote | 528, 530 |
| Status byte (STB) | 514 |
| Status registers | |
| CONDition | 512 |
| ENABle | 512 |
| EVENT | 512 |
| NTRansition | 512 |
| Overview | 510 |

| | |
|-------------------------|-----|
| PTRansition | 512 |
| STATus:OPERation | 515 |
| Status reporting system | |
| Common commands | 527 |
| Status reports | 510 |
| STB | 511 |
| Style (waveforms) | 92 |
| Switch off | |
| Waveform | 59 |
| Switch on | |
| Waveform | 58 |

T

| | |
|---------------------------------|---------|
| Technical support | 994 |
| Temperature | |
| Changes | 101 |
| Text entry | 67 |
| Thresholds | |
| MSO settings | 472 |
| Time base | 42 |
| Time scale | 42 |
| Time stamp | 216 |
| Timeout trigger | 167 |
| Toolbar | 61 |
| Add gate | 64 |
| Cursor | 64 |
| Delete | 64 |
| File browser | 64 |
| Help | 63 |
| Hide/show icons | 61 |
| Label | 63 |
| Load saveset | 63 |
| Measure | 64 |
| Overview | 62 |
| Redo | 63 |
| Run / Stop | 64 |
| Single | 64 |
| Spectrum | 64 |
| Undo | 63 |
| Zone trigger | 64 |
| Touch Lock key | 47 |
| Touchscreen | |
| Compared with mouse | 50 |
| Control elements | 54 |
| Lock, unlock | 47 |
| Usage | 50 |
| Traces | |
| Spectrum | 270 |
| Trigger | |
| CAN settings | 416 |
| Controls | 40 |
| Data2Clock | 172 |
| Delay (holdoff) | 180 |
| Edge | 157 |
| Event (remote) | 530 |
| Glitch | 160 |
| Holdoff | 180 |
| I ² C settings | 383 |
| Information | 152 |
| Interval | 168 |
| Label | 53 |
| Level | 41, 52 |
| Mode | 41, 181 |
| Pattern | 175 |
| Position | 52 |
| Runt | 163 |

| | | | |
|--------------------------|---------|---------------------------|--------|
| Setup & Hold | 172 | Window trigger | 165 |
| Slew rate | 170 | Z | |
| Slope | 42 | Zone key | 42 |
| Source | 41 | Zone trigger | 42, 64 |
| SPI settings | 356 | Zoom | 198 |
| State | 174 | MSO | 476 |
| Timeout | 167 | On the touchscreen | 201 |
| Width | 162 | Position/Range | 202 |
| Window | 165 | Start-stop values | 201 |
| Trigger types | 154 | Start/Stop settings | 200 |
| Width | 162 | Waveforms | 57 |
| Type | | Zoom key | 43 |
| Trigger | 154 | | |
| U | | | |
| UART | 393 | | |
| Basics | 393 | | |
| Configuring | 404 | | |
| Decode results | 402 | | |
| Triggering | 406 | | |
| Undo | 63 | | |
| Unlock touchscreen | 47 | | |
| Upload data | 505 | | |
| USB | | | |
| Connector | 37 | | |
| Device | 40 | | |
| User manual | 26 | | |
| V | | | |
| Vertical | | | |
| Controls | 43 | | |
| VISA | | | |
| Resource string | 508 | | |
| VNC | 50, 505 | | |
| W | | | |
| Wait | | | |
| Remote | 530 | | |
| Waveform export | | | |
| Files and formats | 328 | | |
| Waveform generator | | | |
| Settings | 478 | | |
| Waveforms | | | |
| Arrange | 59 | | |
| Channel | 57 | | |
| Intensity | 46 | | |
| Math | 57 | | |
| Minimize | 58 | | |
| Overview and usage | 57 | | |
| Reference | 57 | | |
| Select | 58 | | |
| States | 58 | | |
| Style | 92 | | |
| Switch off | 59 | | |
| Switch on | 58 | | |
| Zoom | 57 | | |
| Zooming | 198 | | |
| Web browser | 502 | | |
| Web control | 505 | | |
| Web interface | 50, 501 | | |
| Browser | 502 | | |
| LAN configuration | 502 | | |
| Width trigger | | | |
| Trigger | 162 | | |