

R&S® TSMA6B-Z62 NESTOR Dongle Lock Supplement

This supplement describes the usage of the option R&S TSMA6B-Z62 to attach the R&S NESTOR license dongle to the R&S TSMA6B.




4901434902
Version 01




1 Usage of the option R&S TSMA6B-Z62

1. Connect the NESTOR USB dongle to the USB port (1).


NOTE: The NESTOR USB dongle is not part of the delivery of the option R&S TSMA6B-Z62.

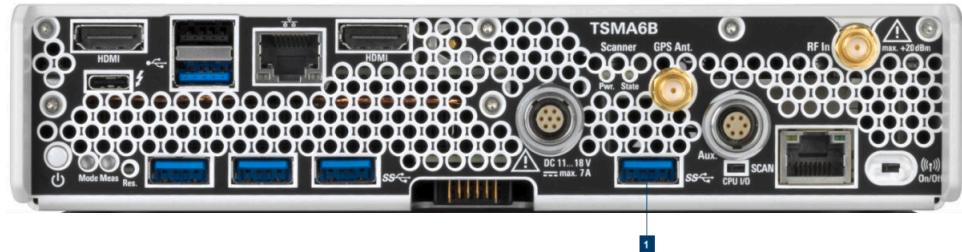

2. Attach the locking bracket in the thread with a suitable screw. The screw (M2 x 5) and a screwdriver (Torx M6) are part of R&S TSMA6B-Z62 option delivery package.

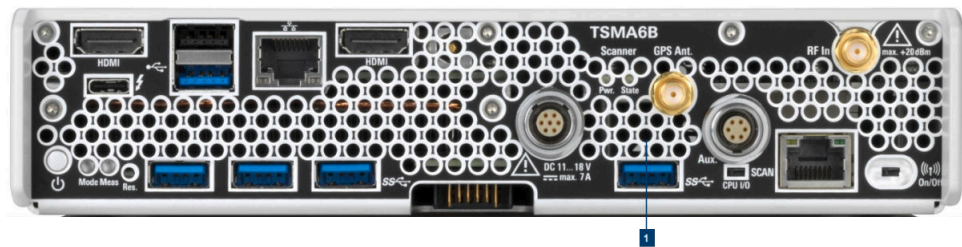

The NESTOR dongle is secured by the option R&S TSMA6B-Z62.

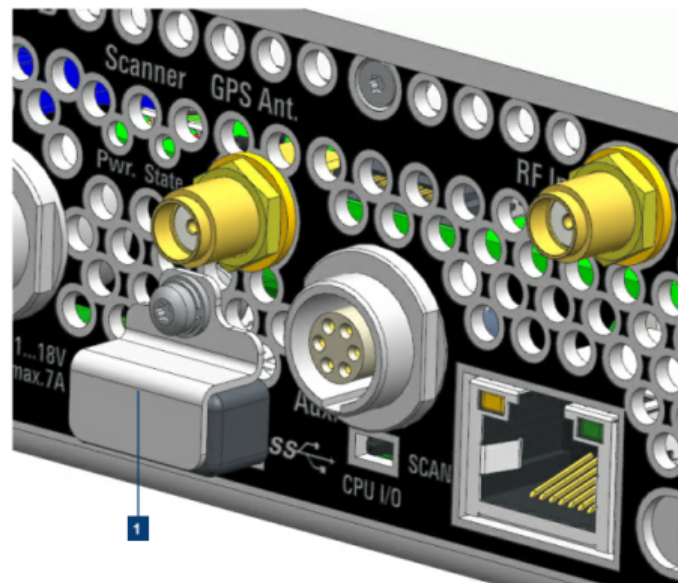

3. Start the web-GUI and activate the needed NESTOR mode (standalone or probe).

© 2021 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g.

R&S®TSMA6B is indicated as R&S TSMA6B.