

# R&S®License Server for Signal Generators Release Notes

**Software Version 5.00.166.1**

© 2022 Rohde & Schwarz GmbH & Co. KG  
Muehldorfstr. 15, 81671 Munich, Germany  
Phone: +49 89 41 29 - 0  
E-mail: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)  
Internet: <http://www.rohde-schwarz.com>

Subject to change – Data without tolerance limits is not binding.  
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.  
Trade names are trademarks of the owners.

1414.7683.00 | Version 01 | R&S®License Server for Signal Generators |

The software makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgment" provided with the product.

The following abbreviations are used throughout this document: R&S®License Server for Signal Generators is abbreviated as R&SLicense Server for Signal Generators

PAD-TM: 3574.3288.02/04.00/CI/1/EN

**ROHDE & SCHWARZ**  
Make ideas real



# Contents

<b>1</b>	<b>Information on the current version and history .....</b>	<b>3</b>
1.1	Version 5.00.166.1 .....	3
1.2	Version 5.00.044.4 .....	3
<b>2</b>	<b>Modifications to the documentation .....</b>	<b>4</b>
<b>3</b>	<b>Software installation.....</b>	<b>5</b>
3.1	Validity information .....	5
3.2	Update information .....	6
3.3	Updating the software .....	6
<b>4</b>	<b>Customer support.....</b>	<b>7</b>

# 1 Information on the current version and history

## 1.1 Version 5.00.166.1

### New functionality

Support of R&S@SMCVB-FL Floating Licenses Dongle including licenses for SMCV100B Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMCVB-LPFL Floating Licenses Provider including licenses for SMCV100B Digital Standards using R&S@WinIQSIM2™.

## 1.2 Version 5.00.044.4

Released: December 2021

### New functionality

Support of R&S@SMWA-FL Floating Licenses Dongle including licenses for SMW200A Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMWA-LPFL Floating Licenses Provider including licenses for SMW200A Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMMA-FL Floating Licenses Dongle including licenses for SMM100A Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMMA-LPFL Floating Licenses Provider including licenses for SMM100A Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMBVB-FL Floating Licenses Dongle including licenses for SMBV100B Digital Standards using R&S@WinIQSIM2™.

Support of R&S@SMBVB-LPFL Floating Licenses Provider including licenses for SMBV100B Digital Standards using R&S@WinIQSIM2™.

## 2 Modifications to the documentation

The current documentation is up-to-date.

## 3 Software installation

### 3.1 Validity information

The R&S® License Server for Signal Generators support the following products.

Device	Order Number
R&S@SMWA-FL	1412.0000K91
R&S@SMWA-LPFL	1412.0000K92
R&S@SMMA-FL	1440.8002K91
R&S@SMMA-LPFL	1440.8002K92
R&S@SMBVB-FL	1423.1003K91
R&S@SMBVB-LPFL	1423.1003K92
R&S@SMCVB-FL	1432.7000K91
R&S@SMCVB-LPFL	1432.7000K92

The following R&S Signal Generators support floating licenses using the R&S® License Server for Signal Generators

- R&S@SMW200A  
 Minimum firmware version: 5.00.044.34.  
 You can find the R&S® License Server for Signal Generators and the release notes on the internet [www.rohde-schwarz.com/firmware/smw200a](http://www.rohde-schwarz.com/firmware/smw200a)
- R&S@SMM100A  
 Minimum firmware version: 5.00.044.34.  
 You can find the R&S® License Server for Signal Generators and the release notes on the internet [www.rohde-schwarz.com/firmware/smm100a](http://www.rohde-schwarz.com/firmware/smm100a)
- R&S@SMBV100B  
 Minimum firmware version: 5.00.044.34.  
 You can find the R&S® License Server for Signal Generators and the release notes on the internet [www.rohde-schwarz.com/firmware/smbv100b](http://www.rohde-schwarz.com/firmware/smbv100b)
- R&S@SMBV100B  
 Minimum firmware version: 5.00.122.24  
 You can find the R&S® License Server for Signal Generators and the release notes on the internet [www.rohde-schwarz.com/firmware/smcv100b](http://www.rohde-schwarz.com/firmware/smcv100b)

## 3.2 Update information

You can download the R&S®License Server for Signal Generators and the release notes on the internet for

- R&S®SMW200A at [www.rohde-schwarz.com/firmware/smw200a](http://www.rohde-schwarz.com/firmware/smw200a)
- R&S®SMM100A at [www.rohde-schwarz.com/firmware/smm100a](http://www.rohde-schwarz.com/firmware/smm100a)
- R&S®SMBV100B at [www.rohde-schwarz.com/firmware/smbv100b](http://www.rohde-schwarz.com/firmware/smbv100b)
- R&S®SMCV100B at [www.rohde-schwarz.com/firmware/smcv100b](http://www.rohde-schwarz.com/firmware/smcv100b)

The software installation file for the R&S®License Server for Signal Generators is one file including the version number e.g. SignalGeneratorLicenseServer-5.00.044.4.exe.

The R&S®License Server software can only be installed on a server or PC. It cannot be installed on R&S® signal generators.



### Supported operating systems

- Microsoft Windows 10 (64-bit) version 1507 or later
- Microsoft Windows Server 2019

## 3.3 Updating the software

Download the R&S®License Server for Signal Generators from the Rohde & Schwarz web page for the respective signal generator.

In Windows Explorer double-click SignalGeneratorLicenseServer-<version>.exe and follow the instructions.

## 4 Customer support

### Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

### Contact information

Contact our customer support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support) or follow this QR code:



Figure 4-1: QR code to the Rohde & Schwarz support page