


R&S®FSMR

Measuring Receiver

Instrument Security Procedures



1178.6427.02 – 01

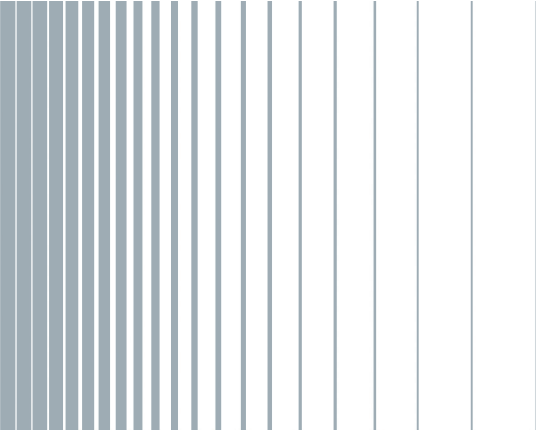

# Contents

<b>1 Overview.....</b>	<b>2</b>
<b>2 Instrument Models Covered.....</b>	<b>2</b>
<b>3 Security Terms and Definitions.....</b>	<b>3</b>
<b>4 Types of Memory and Information Storage in the R&amp;S FSMR.....</b>	<b>3</b>
<b>5 Instrument Declassification.....</b>	<b>6</b>
<b>6 Special Considerations for USB Ports.....</b>	<b>7</b>

## 1 Overview

In many cases, it is imperative that the R&S FSMR Measuring Receivers are used in a secured environment. Generally these highly secured environments do not allow any test equipment to leave the area unless it can be proven that no user information leaves with the test equipment. Security concerns can arise when devices need to leave a secured area e.g. to be calibrated or serviced.

This document describes the types of memory and their usage in the R&S FSMR. It provides a statement regarding the volatility of all memory types and specifies the steps required to declassify an instrument through memory clearing or sanitization procedures. These sanitization procedures are designed for customers who need to meet the requirements specified by the US Defense Security Service (DSS).

## 2 Instrument Models Covered

*Table 2-1: Measuring Receiver models*

Product name	Order number
R&S FSMR3	1313.9200.03
R&S FSMR26	1313.9200.26
R&S FSMR43	1313.9200.43
R&S FSMR50	1313.9200.50

## 3 Security Terms and Definitions

### **Clearing:**

As defined in Section 8-301a of DoD 5220.22-M, "National Industrial Security Program Operating Manual (NISPOM)", clearing is the process of eradicating the data on media so that the data can no longer be retrieved using the standard interfaces on the instrument. Hence, clearing is typically used when the instrument is to remain in an environment with an acceptable level of protection.

### **Sanitization:**

As defined in Section 8-301b of DoD 5220.22-M, "National Industrial Security Program Operating Manual (NISPOM)", sanitization is the process of removing or eradicating stored data so that the data cannot be recovered using any known technology. Instrument sanitization is typically required when an instrument is moved from a secure to a non-secure environment, such as when it is returned for service of calibration.

The memory sanitization procedures described in this document are designed for customers who need to meet the requirements specified by the US Defense Security Service (DSS). These requirements are specified in the "Clearing and Sanitization Matrix" in Section 14.1.16 of the ISFO Process Manual for the Certification and Accreditation of Classified Systems under the NISPOM.

### **Instrument declassification:**

A term that refers to procedures that must be undertaken before an instrument can be removed from a secure environment, such as is the case when the instrument is returned for calibration. Declassification procedures include memory sanitization or memory removal, or both. The declassification procedures described in this document are designed to meet the requirements specified in DoD 5220.22-M, "National Industrial Security Program Operating Manual (NISPOM)", Chapter 8.

## 4 Types of Memory and Information Storage in the R&S FSMR

The Measuring Receiver contains various memory components.

The following table provides an overview of the memory components that are part of your instrument. For a detailed description regarding type, size, usage and location, refer to the subsequent sections.

Memory type	Size	Content	Volatility	User data	Sanitization procedure
SDRAM (CPU board)	256 Mbyte	Temporary information storage for operating system and instrument firmware	Volatile	Yes	Turn off instrument power
SDRAM (option R&S FSMR-B73)	32 Mbyte	Measurement data	Volatile	Yes	Turn off instrument power
SRAM (option R&S FSMR-B73)	512k * 36 bit 128 kbyte 1 Mbyte 2 Mbyte 128k * 36 bit	Temporary information storage for FPGA processing and measurement data	Volatile	Yes	Turn off instrument power
EEPROM (board assembly)	256 bytes up to 32 kbyte	Hardware information: <ul style="list-style-type: none"> <li>• Serial number</li> <li>• Product options</li> <li>• Calibration correction data</li> </ul>	Non-volatile	No	None required (no user data)
Flash (CPU board)	512 kbyte	BIOS	Non-volatile	No	None required (no user data)
Flash (option R&S FSMR-B73)	16 kbyte	FPGA code	Non-volatile	No	None required (no user data)
Compact flash (removable)	4 Gbyte	<ul style="list-style-type: none"> <li>• Operating system</li> <li>• Instrument firmware</li> <li>• Instrument states and setups</li> <li>• Limit lines and transducer tables</li> <li>• Trace data</li> <li>• Measurement results and screen images</li> </ul>	Non-volatile	Yes	Remove compact flash memory from instrument

## 4.1 Volatile Memory

The volatile memory in the instrument does not have battery backup. It loses its contents as soon as power is removed from the instrument. The volatile memory is not a security concern.

Removing power from this memory meets the memory sanitization requirements specified in the "Clearing and Sanitization Matrix" in section 5.2.5.5.5 of the ISFO Process Manual for the Certification and Accreditation of Classified Systems under the NIS-POM.

### SDRAM

The SDRAM on the CPU board has a size of 256 Mbyte and contains temporary information storage for operating system and instrument firmware. The SDRAM loses its memory as soon as power is removed.

**Sanitization procedure:** Turn off instrument power

**SDRAM (option R&S FSMR-B73)**

The SDRAM on the option R&S FSMR-B73 (if installed) has a size of 32 Mbyte and contains measurement data. The SDRAM loses its memory as soon as power is removed.

**Sanitization procedure:** Turn off instrument power

**SRAM (option R&S FSMR-B73)**

The option R&S FSMR-B73 (if installed) has one 512k \* 36 bit SRAM which contains temporary information storage for FPGA processing. In addition, there is one 128 kbyte SRAM, one 1 Mbyte SRAM, one 2 Mbyte SRAM for data processing for the Vector Signal Analyzer option R&S FSMR-B73 plus 128k \* 36 bit dual-port SRAM for temporary data transfer to the main processor. The SRAM loses its memory as soon as power is removed.

**Sanitization procedure:** Turn off instrument power

## 4.2 Non-Volatile Memory

The R&S FSMR contains various non-volatile memories. Out of these, only the compact flash memory contains user data. The compact flash memory can be physically removed from the R&S FSMR and left in the secure area.

All non-volatile memories of the R&S FSMR are not a security concern.

**EEPROM**

Each board assembly in the R&S FSMR Measuring Receiver has one serial EEPROM device with a size of 256 bytes up to 32 kbyte. The EEPROM contains information related to the installed hardware, such as board serial number, product options and calibration correction data. The EEPROM does not hold user data nor can the user access the EEPROM storage.

**Sanitization procedure:** None required (no user data)

**Flash**

The CPU board of the R&S FSMR Measuring Receiver has one 512 kbyte flash memory device. It contains the BIOS. The flash memory does not hold user data nor can the user access the flash memory.

**Sanitization procedure:** None required (no user data)

**Flash (option R&S FSMR-B73)**

The option R&S FSMR-B73 (if installed) has one 16 kbyte flash memory which contains the FPGA code for the Vector Signal Analyzer option R&S FSMR-B73. The flash memory does not hold user data nor can the user access the flash memory.

**Sanitization procedure:** None required (no user data)

### Compact flash memory / hard disk

The R&S FSMR Measuring Receiver can be equipped with either a non-removable hard disk or a removable compact flash memory. The hard disk and compact flash memory hold user data and are non-volatile. Hence, user data is not erased when power is removed from the instrument.

The compact flash memory (R&S FSMR-B18) can be removed from the Measuring Receiver to make sure that no user data is stored within the Measuring Receiver.

The R&S FSMR Measuring Receiver, equipped with the removable compact flash memory (R&S FSMR-B18), addresses the needs of customers working in secured areas.

**Sanitization procedure:** Remove compact flash memory from instrument

## 5 Instrument Declassification

Before you can remove the Measuring Receiver from a secured area (for example to perform service or calibration), all classified user data needs to be removed. You can declassify the Measuring Receiver as follows:

1. Turn off the Measuring Receiver. This will sanitize the volatile memory.
2. Remove the classified compact flash memory (containing user data).

Following these steps removes all user data from the Measuring Receiver. The Measuring Receiver can now leave the secured area.

These declassification procedures meet the needs of customers working in secured areas.

Once the Measuring Receiver is outside the secured area, installing a second non-classified removable compact flash memory (without any user data) allows the Measuring Receiver to function properly for service or other needs.

Prior to re-entering the secured area, the non-classified removable compact flash memory (without the user data) is removed. When the Measuring Receiver is back within the secured area, the original classified removable compact flash memory can be reinstalled.

- To hold classified user data in secure areas, use the removable compact flash memory (R&S FSMR-B18) which comes with the instrument.
- To hold non-classified user data in non-secure areas, use a second compact flash memory (R&S FSMR-B19).

### Validity of instrument calibration after declassification

The calibration makes sure that measurements comply to government standards.

Rohde & Schwarz recommends that you follow the calibration cycle suggested for your instrument.

The EEPROM is the only memory type used to hold permanent adjustment values required to maintain the validity of the R&S FSMR's calibration. Therefore, replacing one removable compact flash memory with another, does not affect the validity of the instrument's calibration.

After an exchange of the removable compact flash memory, the board assembly EEPROMs need to be registered once:

1. Turn off the instrument.
2. Turn the instrument back on while holding down the decimal point key [.] on the number keypad on the front panel.
3. Continue to hold this key for 10 seconds after pressing the "On" button. The instrument recognizes the changes and then powers up.

It is only necessary to perform these steps the first time the Measuring Receiver returns from the service.

After exchanging the removable compact flash memory, perform a self-alignment once:



Note that the instrument has sufficient warm-up time before you perform the self-alignment.

---

1. Select the CAL key.
2. Select the "CAL-TOTAL" softkey.

This function uses the high-stability internal reference generator to produce the temporary adjustment values. Using the permanent and temporary values, the necessary adjustment information is then stored on the compact flash memory. Rohde & Schwarz recommends that you perform the self-alignment function once a week.

## 6 Special Considerations for USB Ports

USB ports can pose a security risk in high-security locations. Generally, this risk comes from small USB pen drives, also known as memory sticks or key drives. They can be easily concealed and can quickly read/write several Gbyte of data.

### Disabling USB ports for writing user data

You can disable the write capability on the USB ports of the R&S FSMR via a utility software. This utility software is available on the R&S FSMR website <http://www.rohde-schwarz.com/product/fsmr.html>.

To disable the write capability, copy the utility software to the R&S FSMR and run it once. After a reboot of the instrument, the write capability on any USB memory device is disabled.

© 2016 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of their owners.

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol , e.g.

R&S®FSMR is indicated as R&S FSMR.