

R&S® UPV / UPP*

Audio Analyzers

Release Notes

Firmware Version 4.0.4

* Namely the models UPV, UPV66, UPP200, UPP400, UPP800

© 2017 Rohde & Schwarz GmbH & Co. KG

81671 Munich, Germany

Printed in Germany – Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this document:

R&S®UPV / UPP is abbreviated as UPV / UPP.

Table of Contents

1	Information on the Current Version and History	3
1.1	Version 4.0.4.0159	3
1.2	Version 4.0.3.0136	5
1.3	Version 4.0.2.0107	8
1.4	Version 4.0.1.0076	9
1.5	Version 3.3.6.0834 (UPP only).....	10
1.6	Version 3.3.4.0822	11
1.7	Version 3.3.2.0805	12
1.8	Version 3.3.1.0758	13
1.9	Version 3.3.0.0724	16
1.10	Version 3.2.0.0683	17
1.11	Version 3.1.2.0626 (UPV only).....	18
1.12	Version 3.1.0.0571	20
2	Last Minute Changes.....	31
2.1	Updating UPX Firmware from earlier Versions to 4.x	31
2.2	Functionality Changes in User Interface	34
2.3	Changes in User Documentation	34
2.4	Troubleshooting.....	38
2.5	Windows 7 Backup / Recovery System	41
3	Firmware Update.....	44
3.1	Local Firmware Update	45
3.2	Remote Firmware Update.....	47
3.3	Firmware Installation	49
4	Open Source Acknowledgement	51
5	Customer Support	52

1 Information on the Current Version and History


1.1 Version 4.0.4.0159

Attention: When updating Firmware from Version 2.x or 3.x to 4.x please carefully read section 2.1 first!

Attention: When using an UPP running Windows 7 in conjunction with the R&S Sequencing application, you will need an update of this, too.


Component	FW version
UPxCheckPreconditions	1.4.3
UPVCompass_3.1.18.21-Release	3.1.18.21
Setup_4.0.40159Release	4.0.4

New Functionality
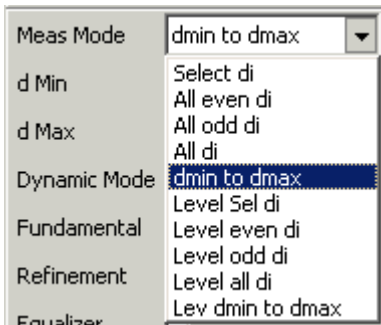
<p>THD now allows measurement beyond the first 8 harmonics. 2 new Meas Modes have been added that now allow to calculate THD result up to d50 (49th harmonic).</p> <p>Meas Mode</p>  <p>Note: Only the first 8 harmonics - and the fundamental - are always displayed in the graphic irrespective of the selected measurement mode.</p> <p>dmin to dmax: The distortion of all harmonics dmin to dmax – root from the squared sum of these harmonics – is measured relative to the total RMS. 2 additional menu lines occur and allows the setting of the range</p> <p>Lev dmin to dmax: The distortion voltage of all harmonics dmin to dmax (root from the squared sum of these harmonics) is measured</p>	UPV UPP
--	------------

<p>2 additional menu lines occur and allows the setting of the range By setting dMin and dMax to the same value this single harmonic is calculated.</p> <p>d Min enter the first harmonic of the harmonic range to be calculated. Can be any number from 2 to 50</p> <p>d Max enter the last harmonic of the harmonic range to be calculated. Can be any number from d Min to 50</p>	
Modified POLQA version 2.4 including implementers guide 2016-01 no 4 (application of the reverberation indicator removed in the SWB mode of P.863) (170261)	UPV
POLQA, PESQ, PEAQ: To perform offline measurements internal generator need not to be active but can be turned off via 'Channel Off' or 'Output Off'	UPV

Modified Functionality
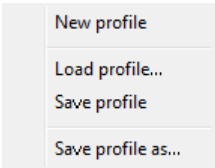
<p>Graphics profile editor now provides more convenient handling of definition files:</p> <p>A Click on the “Profile...” button now opens a popup menu:</p>  <p>This allows a more clearly way for dealing with profile file definitions:</p> <ul style="list-style-type: none"> - When the editor is opened first time, no file is selected - When changes are made and the dialog is closed a message will appear asking if the changes should be stored. When clicking Yes, a file selector will appear - When a file definition is loaded by “Load profile...”, after asking for storing, changes always will be automatically stored in this file - When “Save profile as...” is selected, the current definition may be stored with another file name - When “New profile” is selected, unsaved changes will be (after asking for store) saved. Afterwards, all settings are reset to default and the editor will go back to the state with no file selected. 	UPV UPP
--	------------

Fixed Issues

Missing texts in status bar after start up / missing hints in status bar (189864, 192853)	UPV UPP
Firmware version crashes when a file defined generator filter does not find	UPV

the filter definition file (165247)	UPP
Firmware version 4.0.x sometimes has problems with non-ASCII characters in file names (like German umlauts) (164666)	UPV UPP
Numeric input fields may run into a malfunctioned state where every digit typed in will be selected and numbers no more can be entered (161507)	UPV UPP
Setting Chirp Based Harmonics gets very slow during SCPI operation with larger sweep times (158335)	UPV UPP
Firmware 4.0.x crashes when using chirp based measurement with newly introduced measurement mode PHASE (132491)	UPV UPP
Firmware 4.0.x may get inoperable during SCPI operation when ERROR queue gets messages (158904)	UPV
SQUARE generator function occasionally using equalization file although switched off (187208)	UPV
Hard disk gets full while doing many POLQA measurements (147974)	UPV
POLQA measurement does not work correctly when given ref and play files are different in length or when given play file is longer than 40s (147861)	UPV
Firmware crashes after several 100 POLQA measurements (147474)	UPV
PEAQ offline measurement crashes with play length > 20s (132484)	UPV

Known Issues

When switching off the sweep while fast sweep measurement is running, some panels may be updated wrong. To work around this, stop the sweep before changing anything or select the generator function a second time.	UPP
On some devices, UpxCheckPreconditions always showing message about "R&S Framework" deinstallation (section 2.4.1)	UPV UPP
Update installation may be denied with "missing .NET 2.0" framework (section 2.4.2)	UPV
Firmware may not work on an FMR6 after update to version 4.x.(section 2.4.3)	UPV




1.2 Version 4.0.3.0136


Attention: When updating Firmware from Version 2.x or 3.x to 4.x please carefully read section 2.1 first!

Attention: When using an UPP running Windows 7 in conjunction with the R&S Sequencing application, you will need an update of this, too.

Component	FW version
UPxCheckPreconditions	1.4.3
UPVCompass_3.1.18.21-Release	3.1.18.21
Setup_4.0.30136Release	4.0.3

New Functionality

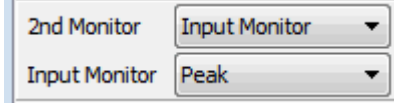Quick start panel for beginners (see user documentation)	UPV UPP
Sequencing and reporting tool available for download on R&S home page	UPV UPP
<p>Adding Gapless / Overlapping mode for FFT based measurement functions</p> <p>The functionality of the FFT mode, which was up to now not changeable and is used by FFT based measurement functions, is extended to additional modes.</p> <p>If set to Standard, measurement is done same as before.</p> <p>If set to Gapless, measurements are done without loss of samples. This mode is only available with analogue analyser fix range and Meas Time Precision setting</p>  <p>If set to Overlapping, measurements are done without loss of samples and with overlapping FFT calculations. The range of overlapping can be chosen.</p>  <p>Running a gapless or overlapping FFT requires:</p> <ul style="list-style-type: none"> - Analogue analyzer set to Fix Range - Frequency measurement time set to Precision <p>If set to Normal, FFT measurements have some gap between subsequent acquisitions (same as before).</p>	UPP
<p>Input Monitor now more flexible:</p> <p>The functionality of the Input Monitor, which was up to now limited to Input Peak, is extended to a second Level Monitor.</p>  <p>The test point of this monitor can now be set to Input, Level (after Pre filter) or Function (after function filters).</p> <p>UPP only: "With FFT Mode Overlap or Gapless the test point is limited to Function for both monitors."</p>	UPV UPP

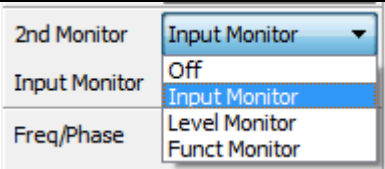 <p>If set to Input the Input Peak only can be displayed (same as before). If set to Level or Function it is possible to display RMS, DC or PEAK. This allows displaying two different levels (chosen from RMS, DC or PEAK) in addition to the Function Result (e.g. SINAD) and Frequency.</p> <p>The test point Function is available only for measurement function FFT or if Post-FFT is activated, and RMS and DC are calculated in frequency domain (based on FFT bins) then. RMS and DC are always calculated in time domain for test point Level.</p>	
--	--

Modified Functionality

--	--

Fixed Issues

Firmware crashes if loading a setup with enabled limit curves (122135)	UPV UPP
File selector for saving files does not take the correct path (119342)	UPV UPP
If an error occurs during manual operation, the SCPI error queue gets an entry (112749)	UPV UPP
Cursor set to min / max not working (106929)	UPV UPP
Number formatting problems with some settings	UPV UPP
Loading UPV setups does not give an error if settings of display channel 2 are different against channel 1 (116305,116289)	UPP

Known Issues

When switching off the sweep while fast sweep measurement is running, some panels may be updated wrong. To work around this, stop the sweep before changing anything or select the generator function a second time.	UPP
Measurement PEAQ Offline crashes with file length > 20s (issue concerning all releases which support PEAQ)	UPV
Storing of WAV files recorded with PESQ, POLQA or PEAQ does not work if Play Mode AUTOMUTE is active (issue also concerning releases 4.0.2, 4.0.1, 3.3.4, 3.3.2)	UPV

Generator function PLAY and Analyzer function RECORD do not start synchronously (issue also concerning releases 4.0.2, 4.0.1, 3.3.4,3.3.2, 3.3.1)	UPV
Chirp Based Measurement crashes if new measurement mode phase is active and generator function is changed away from Chirp and back.	UPV UPP
On some devices, UpxCheckPreconditions always showing message about "R&S Framework" deinstallation (section 2.4.1)	UPV UPP
Update installation may be denied with "missing .NET 2.0" framework (section 2.4.2)	UPV
Firmware may not work on an FMR6 after update to version 4.x.(section 2.4.3)	UPV

1.3 Version 4.0.2.0107

Attention: When updating Firmware from Version 2.x or 3.x to 4.x please carefully read section 2.1 first!

Attention: When using an UPP running Windows 7 in conjunction with the R&S Sequencing application, you will need an update of this, too.

Component	FW version
UPxCheckPreconditions	1.4.2
UPVCompass_3.1.18.21-Release	3.1.18.21
Setup_4.0.20107Release	4.0.2

New Functionality

Now fully supporting the Windows 7 operating system	UPV UPP
Chirp based Measurements added	UPV UPP
Numeric values can be modified via mouse wheel	UPV UPP
POLQA 2.4 (ITU Version) implemented	UPV

Modified Functionality

Device Key is now displayed with checksum (Help -> About / Install Options)	UPV UPP
---	------------

Fixed Issues

Sometimes panel layout gets corrupted so that input elements cannot be used (56408)	UPV UPP
Inconsistent file location of graphic profiles. Must be on D:\UPV\user (56712)	UPV UPP
Trace reference files are not loaded automatically (55175)	UPV UPP

Known Issues

UpXCheckPreconditions always showing message about "R&S Framework" deinstallation (section 2.4.1)	UPV UPP
Update installation may be denied with "missing .NET 2.0" framework (section 2.4.2)	UPV
Firmware may not work on an FMR6 after update to version 4.x.(section 2.4.3)	UPV

1.4 Version 4.0.1.0076

Attention: When updating Firmware from Version 2.x or 3.x to 4.x please carefully read section 2.1 first!

Component	FW version
UPXCheckPreconditions	1.4.2
UPVCompass_3.1.18.21-Release	3.1.18.21
Setup_4.0.10076Release	4.0.1

New Functionality

Now supporting the Windows 7 operating system	UPV
Chirp based Measurements added	UPV
Numeric values can be modified via mouse wheel	UPV

Modified Functionality

“Modify” hard key has changed meaning (section 2.2.1)	UPV
Keyboard Enter does not change editor into variation mode (section 2.2.1)	UPV
Device Key is now displayed with checksum (Help -> About / Install Options)	UPV

Fixed Issues

Sometimes panel layout gets corrupted so that input elements cannot be used (56408)	UPV
Inconsistent file location of graphic profiles. Must be on D:\UPV\user (56712)	UPV
Trace reference files are not loaded automatically (55175)	UPV
Converting of setups from UPP to UPV sometimes fails (64689)	UPV

Known Issues

UpXCheckPrerequisites always showing message about “R&S Framework” deinstallation (section 2.4.1)	UPV
Update installation may be denied with “missing .NET 2.0” framework (section 2.4.2)	UPV
Firmware may not work on an FMR6 after update to version 4.x.(section 2.4.3)	UPV

1.5 Version 3.3.6.0834 (UPP only)

Component	FW version
UPXCheckPreconditions	1.3.3
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.3.60384Release	3.3.6

New Functionality

--	--

Modified Functionality

--	--

Fixed Issues

HDMI E-EDID: The transmitted checksum was wrong, which caused a connected generator to stop output data transmission.	UPP
---	-----

Known Issues

--	--

1.6 Version 3.3.4.0822

Component	FW version
UPxCheckPreconditions	1.3.3
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.3.40822Release	3.3.4

New Functionality

Muting after measurement, selectable for generator function Random, Play and Play+Anlr	UPV
UPV-K421: <ul style="list-style-type: none"> • supports clock frequencies down to 1 kHz and sampling rates up to 400 kHz; • supports down sampling factor 8; • sample frequency can be set manually, if Clock Source Extern is selected 	UPV
Averaging added for POLQA measurements	UPV
Undersampling and "triggered" now available for averaged FFT	UPV
SCPI only command: <i>SYSTem:SEArch? 'Drive+Path+Filename'</i>	UPV
If UPV-K9 is installed then all extended functionality (K6) is available	UPV
Generator Bandwidth selection "Sine 185 kHz" forces low distortion	UPV

Store trace as "Equalization List" or "Sweep List" available for 1/n octave bar graph display	UPV UPP
Generator phase accuracy increased for frequencies below 1 kHz	UPV UPP
Support added for UPP-8 option	UPP

Modified Functionality

UPV-K421: <ul style="list-style-type: none"> clipping instead of rolling over, if 1.0 FS is exceeded 	UPV

Fixed Issues

POLQA NB recordings can now be stored (11092)	UPV
Improved stability of external sweep with fix RMS and S/N measurements with precision frequency setting (11528, 11157, 11529)	UPV
UPV-K1: improved stability in communication with firmware	UPV UPP

Known Issues

--	--

1.7 Version 3.3.2.0805

Component	FW version
UPxCheckPreconditions	1.3.3
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.3.2.0805 Release	3.3.2

New Functionality

Allowing changes of sweep parameters frequency or volume only when sine	UPP
---	-----

signal has the next zero transition	
-------------------------------------	--

Modified Functionality

Universal generator function: increasing maximum output level with equalization	UPP
FFT averaging now allows level trigger for each accumulated measurement	UPP

Fixed Issues

File menu --> Exit crashing sometimes (10766)	UPP
Digital analyzer not working after start up if generator was analogue (11310)	UPP
SCPI query for undefined parameters resulting in Visa Timeout (9922)	UPP
Wrong DC offset value measurements on channel pairs 1/2, 3/4, 5/6, 7/8 when using different AC coupling settings (10764)	UPP
HDMI fixed ARC problems with HDMI 1.4 CEC handshake (11553)	UPP

Known Issues

--	--

1.8 Version 3.3.1.0758

Component	FW version
UPxCheckPreconditions	1.3.3
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.3.10758Release.exe	3.3.1

New Functionality

Introducing support for R&S Sequencing and Reporting tool Can be invoked from UPP menu (File → UPx Sequencing ...) or tool bar	UPP
HDMI:	UPP

<ul style="list-style-type: none"> protocol generator now setting "Channel Number" to "Don't Care" LipSync measurement now enabled with "Sine Burst" signals 	
SCPI: <ul style="list-style-type: none"> hardcopy now creating missing directories HCOPY <string> allows direct output of a graphical window with its window title even if it has no focus (only with "SCPI update On") DISPlay:SCReen <n> allows selecting of given screen (only with "SCPI update On") 	UPP UPV
All generated trace files now containing description of current device, serial no, date and time of creation	UPP UPV

Modified Functionality

HDMI: several improvements <ul style="list-style-type: none"> Increased performance by reducing internal initializations Using "Coding Autodetect" now rejecting trigger source "Gen Burst" Allowing "Hotplug Detect" via new button "Resync" Now ignoring HDMI interrupts while input is not Sink / ARC Reducing analyzer update rate of protocol data and video timings during continuous measurements and sweeps 	UPP
Time Tick sweeps: no longer restarting upon sample rate or coding format changes at digital inputs	UPP UPV
Improved overall stability in Remote operation, especially in "SCPI update On" mode	UPP UPV
PESQ / POLQA improvements <ul style="list-style-type: none"> Degraded scaling now independent from data source and meas mode Degraded scaling now independent from creation process (store in DUT mode / Record function) Reducing gain headroom of filter usage, overall reduction up to 0dB when no filter selected 	UPV
Graphic Display for Time Tick sweep: The x-axis can now be scaled up to 2048 ks (23.7 days). This allows to display the maximum sweep time of 1024 points with steps of 2000 s.	UPP UPV
External Sweep: Improved trigger delay: Up to now the trigger delay was related to the measurement time, which was specified in the analyzer measurement function, and which could be considerably long. Now the trigger has an independent short delay.	UPP UPV

Fixed Issues

fixed issues with HDMI: <ul style="list-style-type: none"> fixed initialization problem when color depth at AUX IN changes fixed "Format Change" error when CTS / N changes, no longer changing hardware settings When DSP reports a PCM signal, now using direct data routing Changing from "Monochrome" to "Pattern" or vice versa does now correctly update the audio settings 	UPP
fixed issue with wrong SCPI status events on generator state	UPP UPV
fixed issue with creating hardcopies in SCPI operation: *WAI working correct	UPP UPV
fixed Gentrack Reference issues: Play, Play+Anlr, Peak functions and different level settings in generator chan 1 & 2	UPP UPV
fixed problem with marker drawing upon small FFT sizes: markers now at correct x position	UPP UPV
fixed problems resulting from loading a multiscan trace file	UPP UPV
fixed problem with binary data transfer and UPV-K1	UPV
fixed several problems with POLQA <ul style="list-style-type: none"> Correct labelling of graphical y axis Repainting of graphical display now showing POLQ result instead of last PESQ result Scaling of x axis now updated with "Record length" Average Delay display now allowing negative values 	UPV

Known Issues

The printed and online documentation contains some wrong information regarding the POLQA measurement: <ul style="list-style-type: none"> There are only two different bandwidths, namely "narrow band" and "super-wide band" The measurements are done according to ITU-T P.863 instead of the mentioned P.861 / P.862 In narrow band mode, the POLQA measurement only supports reference files with 8 kHz sample rate 	UPV
---	-----

1.9 Version 3.3.0.0724

Component	FW version
UPxCheckPreconditions	1.3.2
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.3.00724Release	3.3.0

New Functionality

Supporting UPP-B4 HDMI / digital audio measurements	UPP
In the "Start Condition" section of the analyzer config panel the selection of "Max FFT Size" was added for limiting the automatic zooming of FFT size. Especially useful for external sweeps to reduce measurement time of FFT based functions.	UPP UPV
Dual domain signal generation: If the generator instrument is switched between analog and digital, the previously selected generator keeps running with all its parameters settings made before. When the sampling frequency of the digital generator is below 200 kHz, this feature is possible for all analog and digital generator settings. When the sampling frequency of the digital generator exceeds 200 kHz, the analog generator must be set to function Sine and Low Dist must be set to ON (UPV-B1 option required).	UPV

Modified Functionality

Improvement of setup and SCPI compatibility between UPV and UPP	UPP
Speedup of external sweep: start trigger level now 0.1% below nominal value	UPP UPV

Fixed Issues

Loading of sweep list or equalization files crashed when > 1024 points. Now loading is rejected.	UPP UPV
External sweep sometimes stopping at 2 nd point	UPP UPV
POLQA in offline mode crashed when example WAV file was selected	UPV

Known Issues

The remote control commands MMEM:MSIS and MMEM:CDIR, which could be used to define a default folder for file storage, do not work properly. The	UPV UPP
---	------------

<p>default folder is always c:\upv\bin and cannot be changed with those commands.</p> <p>Work-around: Specify full path names in commands for storing and loading files, e. g. MMEM:STOR:STAT, "d:\upv\user\test1.set"</p>	
--	--

1.10 Version 3.2.0.0683

Firmware package contents

Component	FW version
UPxCheckPreconditions	1.3.2
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.2.00683Release	3.2.0

New Functionality

Perceptual Objective Listening Quality Analysis POLQA according to ITU-T recommendation P.863 is now available with software option UPV-K63.	UPV
Digital Analyzer for Pulse Density Modulated data streams is now available with software option UPV-K421 as add-on to UPV-B42 hardware option.	UPV
Measurement functions PESQ, PEAQ, POLQA now available with digital and analogue measurements. Reference file sample rate must be multiple of 8 kHz	UPV
Remote control emulation mode for direct replacement of the obsolete HP audio analyzer 8903B in remote controlled system applications. See also Application Note 1GA54_2e.	UPV UPP
Analyzer function THD: The automatically optimized FFT size can be increased with a "refinement factor" (2, 4, or 8) in order to reduce noise contributions to the calculation of the harmonics. Especially useful for noisy signals without significant harmonics.	UPV UPP
New "factory preset" functionality added during start up of firmware when the "OUTPUT OFF" indicator (UPV) or "BUSY" indicator (UPP) is flashing for 2 seconds: Pressing PRESET key (UPV) or TRIGGER key (UPP) during this period of time will delete the current settings and reset the display resolution to 800x600 after confirmation with the same key.	UPV UPP
Generator function Stereo Sine: Filter and Equalizer can be independently selected for each channel. Not yet available via remote control.	UPV UPP
Generator function Play: Filter can be independently selected for each channel. Not yet available via remote control.	UPV UPP

Protocol analysis in line with IEC 60958 now supported with software option UPP-K21. Digital Audio option UPP-B2 required.	UPP
1/n octave analysis now available with software option UPP-K601.	UPP
600 Ω output impedance (switchable) and 600 Ω input impedance (switchable) is now available for instruments with serial numbers 100100 or higher. This feature is not retrofittable into older instruments.	UPP
Monitor outputs now have 0 Ω output impedance and can provide a DC voltage for instruments with serial numbers 100100 or higher. 0 Ω output impedance is not retrofittable into older instruments.	UPP

Modified Functionality

None

Fixed Issues

Analyzer functions PESQ, PEAQ, POLQA: From now on the measurement terminates with a fail message as soon as an overrange is detected.	UPV
Analyzer functions FFT or 1/n octave analysis might not terminate when measured on input channel 2 only.	UPV UPP
Sweep graphics: If the sweep steps down from higher to lower values (i. e. the curve is plotted from right to left) the START button did not clear the scans. Now correct.	UPV UPP
Deadlock might occur when executing *wai or *opc?	UPV
Generator function Chirp: Now restarted on start of measurement.	UPV

Known Issues

The remote control commands MMEM:MSIS and MMEM:CDIR, which could be used to define a default folder for file storage, do not work properly. The default folder is always c:\upv\bin and cannot be changed with those commands. Work-around: Specify full path names in commands for storing and loading files, e. g. MMEM:STOR:STAT, "d:\upv\user\test1.set"	UPV UPP
---	------------

1.11 Version 3.1.2.0626 (UPV only)

Firmware package contents

Component	FW version
UPxCheckPreconditions	1.3.2

Component	FW version
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.1.20626Release	3.1.2

New Functionality

Analyzer/Generator	
Analyzer function THD: If all harmonics are outside the upper bandlimit, then the THD result is now set to "invalid". Up to now the result was displayed as 0 % or -240 dB.	UPV
Analyzer functions THD and THD+N: Undersampling FFT can now be activated to allow high-resolution, low-frequency distortion measurements. Post-FFT must be enabled, FFT size must be set manually.	UPV
Analog analyzer: Automatic internal DC offset correction now implemented via setting "Anl.ZeroAuto = ON" in diagnostic panel	UPV

Modified Functionality

None

Fixed Issues

Analyzer function FFT: Equalization did not work, though activated and a valid file was loaded. Now correct.	UPV
When a bandpass is used for analyzer or generator, it may become instable, if: 1. upper passband edge >> lower passband edge (very broad passband), 2. low signal frequency 3. high signal level (> 0.5 of FS) Now correct.	UPV
Digital Audio Interface (UPV-B2): - Sync Output is always set to Internal clock, - Sync Output Type is always set to Wordclock, independent of the settings made in the analyzer config panel. Now correct.	UPV
If the generator is overloaded, it will be switched off internally. But this state is not indicated by the Overload LED, nor by the Output Off LED, nor by the Gen Ovld status information. Now correct.	UPV
Multichannel Analyzer: If a new channel was selected in the display panel, the trace of the previous channel was not removed. Now correct.	UPV
Analog analyzer: 250 kHz bandwidth: special combinations of filters together with very long measurement times might cause the measurement not to terminate. Fixed by reducing the maximum measurement times.	UPV

Generator overload might sporadically occur, if UPV-B3 is installed and generator bandwidth is changed at high output signal levels. Fixed by modification of hardware setting procedure.	UPV
Phase measurement did not work with dynamic mode precision (distortion measurements).	UPV
Generator level sweep: if start and stop level are defined in dBm, the x-axis of the sweep graph panel is scaled to the open circuit level of the generator – instead of the settings defined in the generator function panel. Now correct.	UPV
Waveform display might be corrupted if: - continuously measuring RMS in auto fast mode - signal frequency below 200 Hz - waveform length > 10 ms	UPV

Known Issues

The remote control commands MMEM:MSIS and MMEM:CDIR, which could be used to define a default folder for file storage, do not work properly. The default folder is always c:\upv\bin and cannot be changed with those commands. Work-around: Specify full path names in commands for storing and loading files, e. g. MMEM:STOR:STAT, "d:\upv\user\test1.set"	UPV UPP
Graphics: The multichannel mode is available for FFT and bargraph window. Though it should be able to display more than 2 channels per graphics window, only 2 channels are possible now.	UPV UPP




1.12 Version 3.1.0.0571

Firmware package contents

Component	FW version
UPxCheckPreconditions	1.3.1
UPVCompass_2.1.77.0-Release	2.1.77.0
Setup_3.1.00571Release	3.1.0

New Functionality

Analyzer/Generator	
Analyzer functions FFT, THD and THD+N: A progress information is displayed in the status bar, if averaging is selected and if the averaging takes more than only a few seconds. FFT-Averaging in progress; 60.0 % completed.	UPV UPP

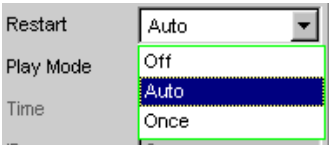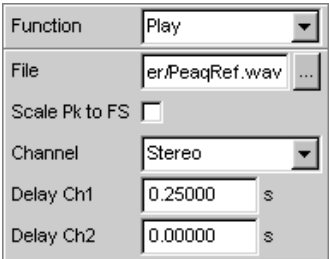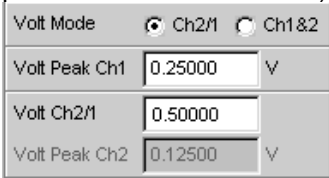The progress information starts after the 2nd average step and is updating once per second.	
PESQ now available in digital domain for I2S and USI Dual Channel instruments	UPV
<p>New features for generator function Play:</p> <p>Restart:</p>  <p>Off: the waveform is not restarted Auto: the waveform is restarted after any user interaction Once: the waveform is started once</p> <p>If restart is switched from Auto to Off, the generator is stopped and muted. Auto is the default to be compatible to older firmware versions</p> <p>Remote control commands: SOURCE:PLAY:REStart OFF SOURCE:PLAY:REStart AUTO SOURCE:PLAY:REStart ONCE</p> <p>Inter-channel Delay</p>  <p>Available only for stereo wav files, played in stereo mode. Maximum delay is 48 k samples (1 s @ 48 kHz sampling rate)</p> <p>Remote control commands: SOURCE:PLAY:DELay[1] .25 S SOURCE:PLAY:DELay2 0 S</p> <p>Stereo level setting</p> <p>The level can now be set independently for each channel. For mono and stereo wavefiles. Two voltage setting modes are supported (same as for stereo sine) Channel 1 and ratio Ch2/1 This is the default, with ratio = 1 (mono level setting, thus compatible to previous firmware versions)</p> 	UPV

Remote control commands:
 SOURce:VOLTage:SElect VLRT
 SOURce:VOLTage 0.25 V
 SOURce:VOLTage:RATio 0.5

Ch1&2 voltage setting

Remote control commands:
 SOURce:VOLTage:SElect VLVL
 SOURce:VOLTage 0.15 V
 SOURce:VOLTage:CH2Stereo 0.30 V

Generator Sweep:

The new menu item **Halt** defines the frequency of the generator after the sweep has terminated.

Start: The generator returns to the start frequency

Value: The generator frequency is set to a predefined value

Mute: The generator mutes after the sweep has terminated.

Remote control commands:

SOURce:SWEep:FREQuency:HALT START

SOURce:SWEep:FREQuency:HALT

VALue::SOURce:SWEep:FREQuency:HALT:VALue 1 KHZ

SOURce:SWEep:FREQuency:HALT MUTE




This halt state can be defined for all sweepable parameters. Therefore instead of FREQuency also VOLTage, PHASe (for stereo sine only), INTerval and ONTime (for Burst only) is supported.




Play before measurement:


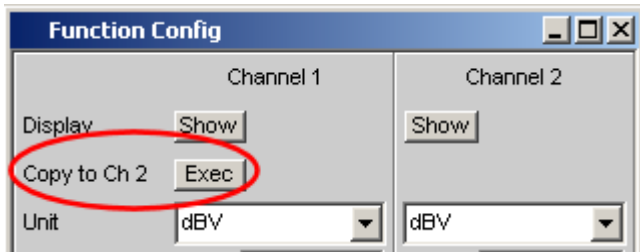
This feature is only available for the 2-channel analog analyzer, with UPV-K9 option installed. It can then be activated in the analyzer config panel:





It is intended for use in mobile phone tests, to play an activation signal (usually a voice-like signal stored in a *.wav file) before the test signal (e.g. a sinewave) is started. Measurement starts, with the start of the test signal,


UPV
UPP
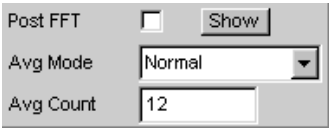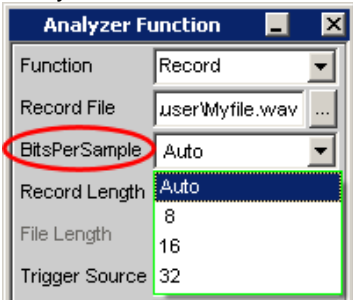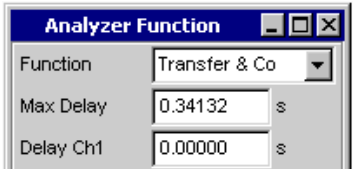
<p>and can be further delayed with the start condition delay.</p> <p>As test signal one of the generator functions must be selected. An appropriate measurement function must be selected in the analyzer.</p> <p>The *.wav file must have been loaded in the generator function play, before the test signal function is selected.</p> <p>Remote control command: TRIGger:PLAYbefmeas ON OFF</p>	
<p>UPV-B42 generator: the maximum setting of MClk Ratio is increased from 768 to 800.</p>	UPV
<p>The THD+N&SINAD measurement function now provides 2 filters. Up to now only one filter was possible.</p>	UPV UPP
<p>Measurement functions THD+N&SINAD and THD: Average Mode for the Post FFT</p>  <p>The number of averages can be set in the range from 1 to 10000</p> <p>The resulting measurement value is calculated from the averaged FFT.</p> <p>Remote control commands: SENSe:FUNCTION:FFT:AVERAge:MODE NORMAl SENSe:FUNCTION:FFT:AVERAge 12</p>	UPV UPP
<p>Analyzer function record</p>  <p>Up to now only the automatic mode was supported. From now on 3 fixed settings are possible.</p> <p>Remote control command: SENSe[1]:FUNCTION:RECOrd:BPS AUTO L8 L16 L32</p>	UPV
<p>Interchannel delay and impulse response can now be calculated with the analyzer function Transfer&Co from any input signal, maybe speech, music or noise.</p> 	UPV

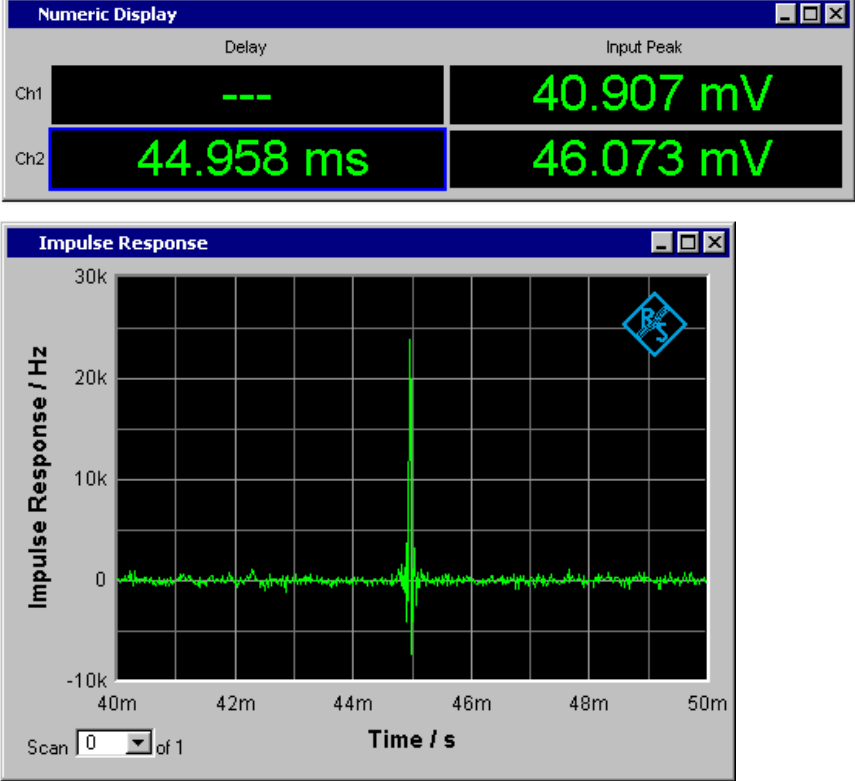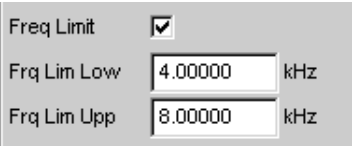	
<p>Noise density can now also be displayed in the unit "dBV/√Hz". The reference must be set to "Noise Density dB" in the FFT graph config panel.</p>	UPV
<p>Analyzer function FFT:</p> <p>The RMS level via FFT can now be calculated within a freely selectable frequency range</p>  <p>Remote control command: SENSE[1]:FREQUENCY:LIMit ON OFF</p> <p>OFF is the same as the previously supported wideband mode (default).</p>	UPV UPP
<p>Analyzer function FFT:</p> <p>The start of the FFT can now be triggered simultaneously with the waveform trigger.</p> <p>The FFT triggered mode is activated in the analyzer FFT function</p>  <p>. If not yet active, the waveform is switched on.</p> <p>The trigger parameters are the same as for the waveform function, and have to be defined there.</p>	UPV
<p>Remote Control</p>	
<p>New remote control command: INITiate:CONTinuous RStart</p>	UPV

<p>This command starts a single measurement (like INITiate:CONTinuous OFF), and in addition:</p> <ul style="list-style-type: none"> - resets all parameters (like Min/Max values or limit violations) - re-starts the wavefile for the generator function Play <p>Thus this command simulates the sequence of pressing the START and then the SINGLE button on the front panel.</p>	UPP
<p>New remote control command: SYSTem:WINStyle ON OFF</p> 	UPV UPP
<p>New remote control commands:</p> <p>SENSe[1]:CONFIg:COPIYother ONCE SENSe2:CONFIg:COPIYother ONCE SENSe6:CONFIg:COPIYother ONCE</p> <p>These commands copy the settings made for channel 1 in the Display Config Panels of Function, Input and Level Monitor to channel 2.</p> 	UPV UPP
<p>Strings can be transmitted to and queried from the UPx, by using the remote control commands SYSTem:MEMory:STRing<i> 'Any String' and SYSTem:MEMory:STRing<i>?.</p> <p>If the queried string was an empty string "" this could lead to a timeout in the controlling program.</p> <p>If the string buffer was deleted before, the query answer was ' ' (space).</p> <p>Now in both cases the query answer is 'empty'.</p>	UPV UPP
<p>New command to query the MAC address of the instrument: SYST:SI NFo:MAC?</p>	UPV UPP
<p>New remote control command...</p> <p>SENSe<n>:DATA:ALL?</p> <p>... to query the measurement results of all channels with one command.</p> <p>In the return string, the results are separated by commas.</p>	UPV UPP
<p>New remote control command...</p> <p>OUTPut:IMPedance:UNBalanced?</p> <p>... to query the value (which is fixed to 5 ohm) of the generator impedance, when the generator is set to Output Type Unbal.</p>	UPV UPP
Graphics	
<p>Graphic Windows can have a title above the grid. The title is defined in the graphic config panel:</p>	UPV UPP

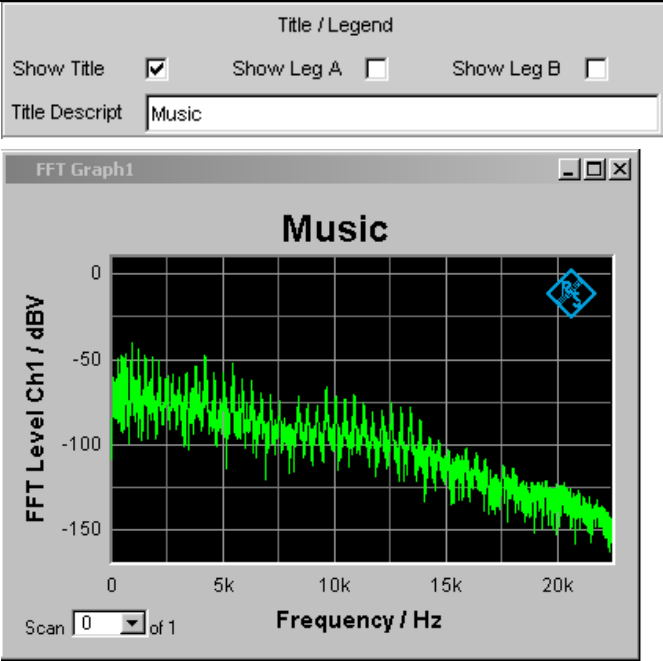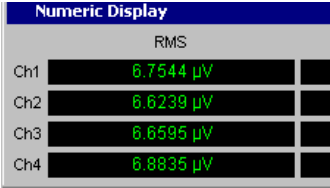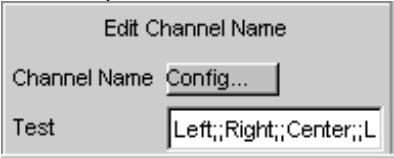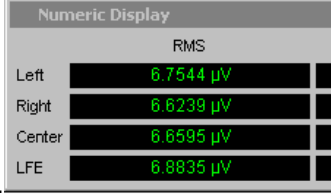 <p>The title of a graphic is stored (and loaded) with the trace file.</p>	
<p>Numeric display</p>  <p>Up to now the channel names were fixed to Ch1, Ch2, , Ch16 Now the names for the channels can be freely configured in the config Panel, for example:</p>  <p>..... for the following</p>  <p>display.....</p> <p>Remote control command: SYSTEM:CHNString 'Left;;Right;;Center;;LFE'</p>	UPV UPP
<p>The numeric display can now be copied to file or clipboard. Up to now this was only supported for active graphics window.</p>	UPV UPP
<p>General</p>	
<p>The setup of the instrument can be stored as *.html file, by selecting "Report Files" as file type when saving the setup.....</p>	UPV UPP

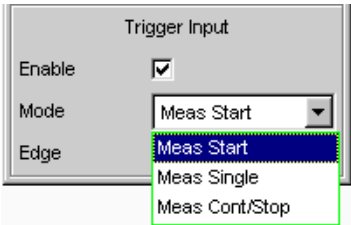
<p>Save as type: Report Files[*.html]</p> <p>.....and loaded with a browser</p> <p>Generator Config</p> <table> <tr><td>Instrument</td><td>Analog</td></tr> <tr><td>Channel</td><td>2 \equiv 1</td></tr> <tr><td>Output Type</td><td>Unbal</td></tr> <tr><td>Impedance</td><td>5 Ω</td></tr> <tr><td>Common</td><td>Float</td></tr> <tr><td>Bandwidth</td><td>22 kHz</td></tr> <tr><td>Volt Range</td><td>Auto</td></tr> <tr><td>Max Voltage</td><td>20.0000 V</td></tr> <tr><td>Ref Voltage</td><td>1.00000 V</td></tr> <tr><td>Ref Frequency</td><td>1000.00 Hz</td></tr> </table>	Instrument	Analog	Channel	2 \equiv 1	Output Type	Unbal	Impedance	5 Ω	Common	Float	Bandwidth	22 kHz	Volt Range	Auto	Max Voltage	20.0000 V	Ref Voltage	1.00000 V	Ref Frequency	1000.00 Hz	
Instrument	Analog																				
Channel	2 \equiv 1																				
Output Type	Unbal																				
Impedance	5 Ω																				
Common	Float																				
Bandwidth	22 kHz																				
Volt Range	Auto																				
Max Voltage	20.0000 V																				
Ref Voltage	1.00000 V																				
Ref Frequency	1000.00 Hz																				
<p>Trigger Input now implemented</p>  <p>The impuls at the trigger input acts like a keystroke of one of the front panel keys START, SINGLE or STOP/CONT. The Mode selects, which key is simulated by the trigger impulse.</p> <p>Edge selects the active slope of the impulse. It is expected, that the impulse has a fast rise/fall time due to modern logic circuit outputs.</p> <p>Trigger input cannot be used together with a generator or analyzer sweep.</p> <p>Remote control commands: AUXiliaries:TRIGger:INPut:ENABLE ON OFF AUXiliaries:TRIGger:INPut:MODE MStArt MSINgle MCONtstop AUXiliaries:TRIGger:INPut:EDGE RISing FALLing</p>	UPV																				



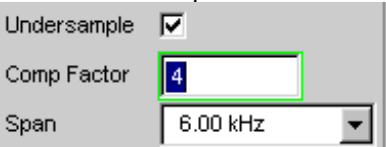
Modified Functionality

None

Fixed Issues

Analyzer functions PESQ and PEAQ: When operating in offline mode, where the degraded signal is loaded from file, the waveform display still showed the signal at the analyzer input connectors, which is meaningless in offline mode. Now the signal in the loaded file is displayed.	UPV
Analog analyzer bandwidth 250 kHz: If a prefilter and 3 function filters (if possible for the selected measurement function) were used, the measurement did not terminate. From now on the third function filter can no	UPV

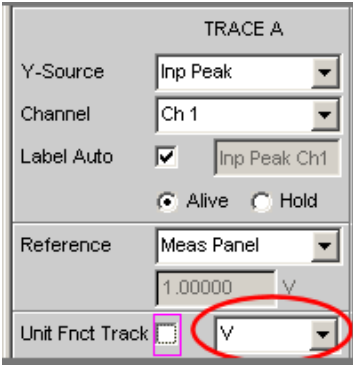longer be selected for the 250 kHz bandwidth analyzer.	
Generator signal sine squared burst: If a negative voltage was entered the generated pulse was still positive and the level setting was not correct. Now the pulse is inverted by entering a negative voltage.	UPV
Sweep Graph Config panel: If Inp Peak was selected as Y-Source, the unit could not be selected manually, though Unit Fnc Track was unchecked. Now correct.	UPV
	
Analog analyzer with bandwidth 250 kHz: If a startcondition delay > 2.8 s was used, the user interface was blocked (due to internal calculation errors). The UPV application had to be ended with the windows task manager. Now fixed.	UPV
Multichannel instruments: Wrong input peak reading in the 3 rd and 4 th active channel, if the measurement time was longer than 500 ms. Now correct.	UPV
Waveform trigger channel, analog analyzer bandwidth 250 kHz, single channel measurement: When the channels were switched between 1 and 2, the trigger source was set to "Manual". Now the trigger source tracks to the selected channel.	UPV
Analog 16 channel instrument (2 UPV-B48 options fitted): Channels 9 to 16 could not be set to a fixed range via remote control, because the command SENSE:VOLTage:RANGe<n>:VALue <level> produced a "Data out of range" error, if <n> was in the range from 9 to 16. Now correct.	UPV
Generator function Stereo Sine: The input range of the voltage ratio setting was not limited according to the maximum allowed level. Now correct.	UPV
Generator function Play: The level of channel 2 was too low, when channels were switched between Stereo and Mono and if the level was > 50 % of Fullscale. Now correct.	UPV
Up to now the limit file parser expected capital letters. An error message occurred, when e.g. Hz was written instead of HZ. Now the parser is no longer case-sensitive.	UPV
The following remote control commands to show/hide and define the legend string have been missing for the bargraph display: DISPlay:BARgraph1 2:A B:LEGend:SHOW ON OFF DISPlay:BARgraph1 2:A B:LEGend:DESCription "String"	UPV
The following remote control commands have been missing for the PESQ display:	UPV
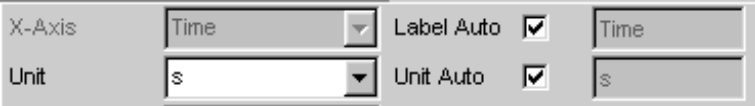
<p>DISPlay:PESQ:X:LABel:AUTO ON OFF DISPlay:PESQ:X:LABel:USER 'MyXLabel'</p> <p>DISPlay:PESQ:X:UNIT S MIN DS DISPlay:PESQ:X:UNIT:AUTO ON OFF DISPlay:PESQ:X:UNIT:USER 'MyXUnit'</p> 	
<p>The following remote control commands have been missing for the PESQ display:</p> <p>DISPlay:PESQ1 2:A B:LABel:AUTO ON OFF DISPlay:PESQ1 2:A B:LABel:USER 'MyLabel'</p> 	UPV
<p>The following remote control commands did not work for trace B of the PESQ display</p> <p>DISPlay:PESQ1 2:B:YSource PEMO DELay REFSignal DEGSIGNAL DROPouts</p> <p>Now correct</p>	UPV
<p>When undersample FFT was selected</p>  <p>..... the MIN/MAX query SENSe:FUNCTion:FFT:CMPFactor? MIN MAX did not work properly: the return value was the actual value, not MIN or MAX. Now correct.</p>	UPV
<p>Multichannel instruments: The remote control command SENSe3:FREQuency:REFerence:MODE to store the frequency reference value did not work for the following parameters: MREFchannel CH<n>Store <n> = 3 to 16</p>	UPV
<p>FFT Phase Ch1, Ch2 or Ch2-Ch1 (selected in FFT Graph Config Panel) could only be displayed, if Freq/Phase measurement in Analyzer Function Panel was set to Freq & Phase. Now fixed.</p>	UPV

Known Issues

<p>The remote control commands MMEM:MSIS and MMEM:CDIR, which could be used to define a default folder for file storage, do not work properly. The default folder is always c:\upv\bin and cannot be changed with those commands.</p>	UPV UPP
---	------------

Work-around: Specify full path names in commands for storing and loading files, e. g. MMEM:STOR:STAT, "d:\upv\user\test1.set"	
Graphics: The multichannel mode is vailable for FFT and bargraph window. Though it should be able to display more than 2 channels per graphics window, only 2 channels are possible now.	UPV UPP

2 Last Minute Changes

2.1 Updating UPX Firmware from earlier Versions to 4.x

This firmware update is a major update. That means that all old parts of the firmware have to be uninstalled before the new parts may be installed. Please follow the instructions in the following sections to do this.

In case you missed these steps and just start the new firmware installer a prompt will occur which tells you to uninstall the R&S Framework and the old firmware.

2.1.1 Uninstall all parts of the old firmware and COMPASS

- Open the Windows Control Panel
- Select "Add or Remove Programs" (Windows XP)
- Remove following parts:
 - R&S Framework
 - R&S InstallationAssistantService
 - R&S Msi_LXIWebServer
 - UPx Firmware x.y.z


Please check if the directory "C:\Pogram Files\Rohde&Schwarz" has been deleted after this. If not, do it in the Explorer. It may be that the directory is read only. In this case please remove the check mark in the Properties Dialog of the directory and apply the changes to all subfolder and files.

2.1.2 Install and run the UpxPreconditions

Double-click the item UPxCheckPreconditions_1.4.3.exe and start the installation by selecting "Next >" and "Install".

The UpxCheckPreconditions tool will show a dialog which confirms the device type (UPV / UPV66 or UPP) and the installed Windows version.

Click "OK". The following prompt should appear:

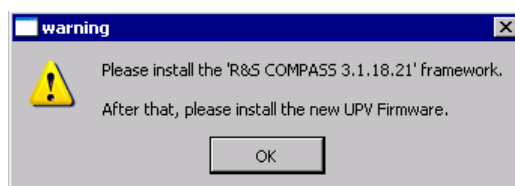


The instrument is now prepared for the installation of the new R&S COMPASS Framework and the new R&S Firmware.

Click "OK" and leave the Preconditioner Installer with "Exit".

2.1.3 Install all parts of the new COMPASS

Double-click the item UPVCompass_3.1.18.21-Release.exe and start the installation by selecting "Next >" and "Install".

If the hard disk has less than 1GB free disk space, following errors may occur:

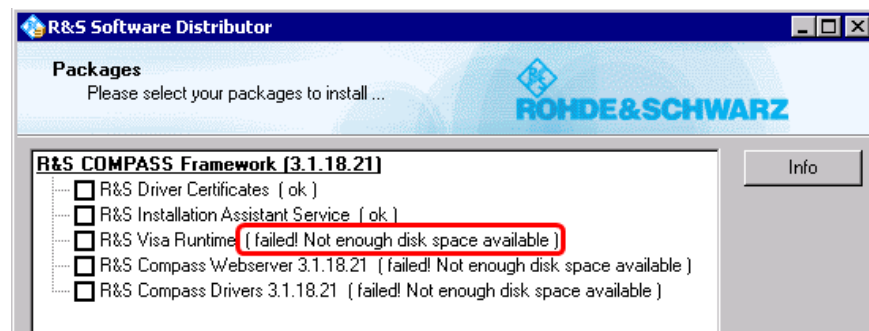

There are two ways to solve the problem:

- Make sure that there is more than 1 GByte free space on drive C.
- If this is not possible, reduce the needed disk space from 1000 MByte to 500 MByte. This should only be done by experienced users, because a change in the registry is necessary. Open the registry editor and change the setting of the key
"HKEY_LOCAL_MACHINE\Software\Rohde&Schwarz\SoftwarePlatform\ServiceConfiguration\InstallServerEx\NeededDiskSpaceMB" to decimal 500.

When you have done this, run the COMPASS installation again.


2.1.4 Install the new firmware

Double-click the item UpxSetup_4.0.xxxxxRelease.exe and start the installation by selecting "Next >" and "Install".

It may occur that the device is missing the Microsoft .NET framework 2.0 which will be needed for the new firmware version.

Section 2.4.2 describes how to deal with this situation.

It may occur that the hard disk has less than 1GB free disk space. In this case following errors will occur:

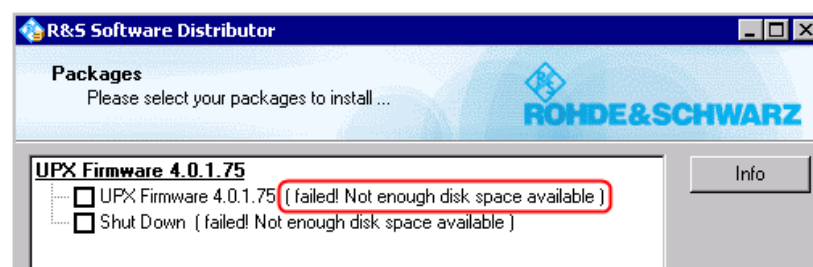

The solution for this problem is described in the previous section 2.1.3.

The instrument shuts down automatically.

During reboot the firmware may not start correctly due to errors as described in section 2.4.3.


Continue with next section 2.1.5 to fix this.

2.1.5 UPV only: Fix incorrect installation of device driver

- Open the Control panel and select "System"
- Select the "Hardware" Tab
- Open the Device Manager
- Open the UPV Hardware node and right click on UPV Driver to open the context menu
 - Select "Update Driver"
 - Select "No, not this time", click "Next"
 - select "Install from a list or specific location ...", click "Next"
 - select "Don't search ...", click "Next"
 - select the upper UPV Driver with left mouse click, click "Next"
- Shut down and restart the instrument.

2.1.6 UPP only: Ignore message of missing component after update


When updating from 3.x.x on a UPP the following message will occur:

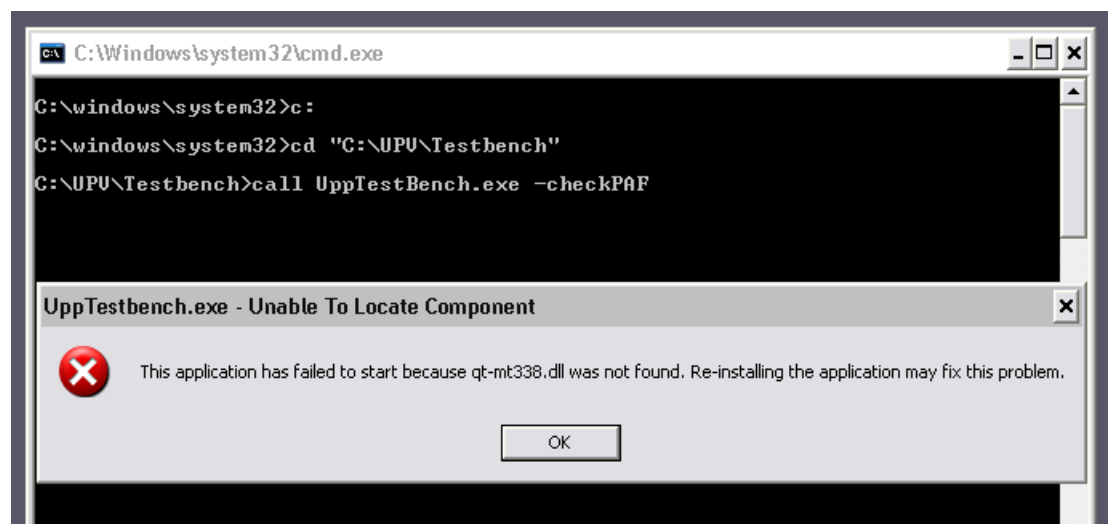

Continue with "OK". The installation will finish successfully.

2.2 Functionality Changes in User Interface

2.2.1 Version 4.0.1.76 and following

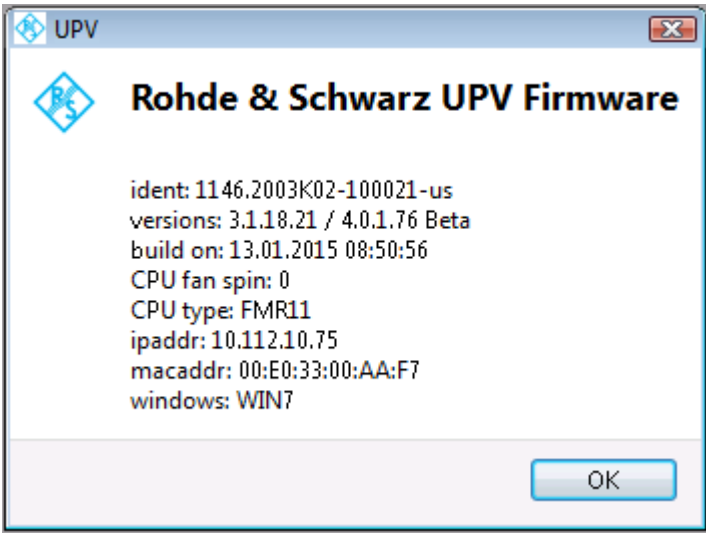MODIFY hard key will get a more convenient and intelligent meaning in the future. The old functionality is no longer working. For moving, maximizing and resizing panels please use an external mouse.	UPV
When a numeric input field is selected, the input mode can be switched between edit mode and variation mode with Rotary click. The enter key on a normal keyboard just confirms the actual value again.	UPV
<p>The "About" information dialog contains some new information:</p>  <p>Now it is possible to detect the current IP address, MAC address, CPU type and Windows version</p>	UPV

2.3 Changes in User Documentation

- **2.1.10 WINDOW / SETUP panel, 4.18 Overview of Keys**

The MODIFY key will get a more convenient functionality in the future. From now on, it is reserved and does not provide moving and resizing of panels any longer.

Please use an external USB mouse for this.

- **2.1.5 VARIATION panel, 4.18 Overview of Keys**

Rotary Enter will still change between Edit Mode and Variation Mode, but the keyboard Enter key will not. This key instead confirms the selected value again.

- **2.6.1 Retrieving Computer Hardware Information**

From now on, the “Help --> About” message shows the Hardware Information. This works independent of the underlying operating system.

- **2.7 Resetting the External Monitor to a Resolution of 800 x 600 Pixels**


At the beginning of starting the firmware, a startup screen will be displayed which allows cancelling of the startup with a “Cancel” button for a period of 2-3 seconds. At the same time the “Output Off” LED is lightened (UPP: ANLR OVRG yellow LED). If you press the PRESET (UPP: CASCADE) hard key during this period of time, the LED soon starts flashing. When the PRESET (UPP: CASCADE) hard key is pressed again for confirmation within of 5 seconds, following will happen:

- The current settings of last firmware run will be cleared; the device will start with its factory preset settings.
- The display resolution will be restored to 800x600 (UPP: 1024x768)
- The output display will be set to internal (UPV only)


- **2.10.2.2 Entering the IP Address**

When using Windows 7, the entry point for the network settings is slightly different.

Open the System Control Panel, then navigate to the “Network and Sharing Center”.

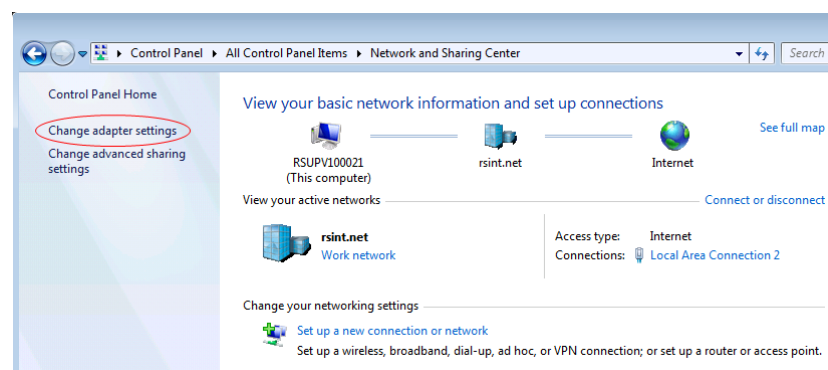

Click on “Change adapter settings”

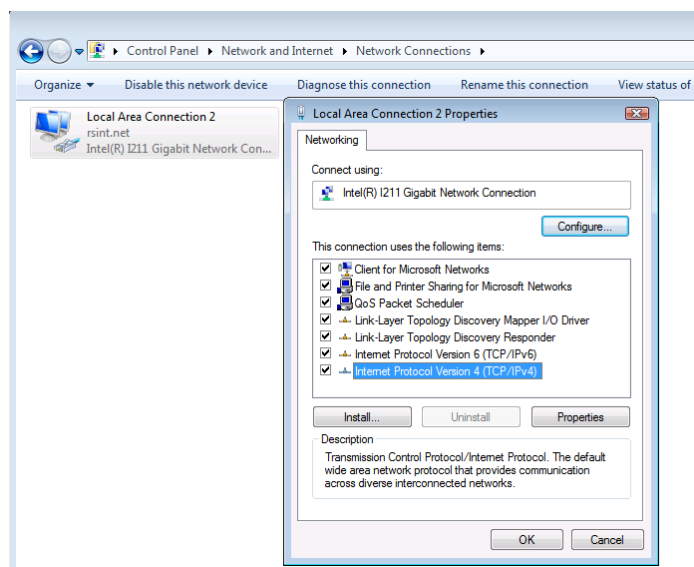


Open the context menu upon the network adapter with right-click, then select “Properties”.

From now on, follow the original instructions in the manual.

- **2.10.2.3 Querying the computer name**

When using Windows 7, the computer name is displayed in the lower left corner of an explorer window when “Computer” is selected:

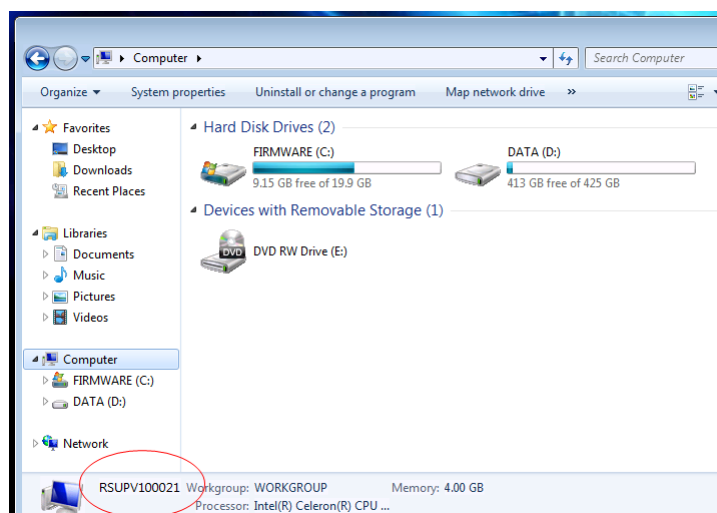

- **2.10.4.1 Activating the Remote Desktop Connection at the R&S UPV**

When using Windows 7, Remote Desktop Connections are enabled by default. There is nothing to do.

- **2.14.4 Recover Factory Default**

When using Windows 7, the Factory Default is stored in the backup system like a normal backup. Section 2.5 gives a short description of the new Backup / Recovery system.

- **4.4.3 Moving and Resizing Panels and Graphical Windows**

This will no longer be possible with the MODIFY hard key. Please use an external USB mouse for this.

In the future, the MODIFY hard key will get a more convenient functionality.

- **5.6.17 Generator signal Chirp**

Play Mode:

If Analyzer Function is set to "ChirpBased Meas", then the Play Mode is automatically set to "Total Single" and cannot be changed by user.

"Total Cont": Cannot be selected if Analyzer Function is set to "ChirpBased Meas".

"Total Single": The chirp is played once per measurement; an "Interval" length cannot be set by user. When performing a single measurement the chirp is muted after having reached the Stop Frequency.

Interval:

Selectable only if Analyzer Function is not set to "Chirpbased Meas". When performing a continuous "Chirpbased Meas" the time between two chirps is internally controlled by the sum of chirp time and result calculation time.

Prechirp Time:

If > 0 , then the chirp signal is extended by this time, starting with a frequency lower than the start frequency but without fading in.

Analyzer function Chirp-based Measurement

- **5.34.1 Settings**

Delay Comp:

Mode of delay compensation.

- Manual: If the delay of the DUT is known and constant, then this delay can be entered as "Fix Delay". This reduces the calculation time.

For signals with very low correlation to the generated chirp signal the Auto delay measurement might be too inaccurate. In this case it is recommended to use the manual delay compensation.

- Auto: The delay of the DUT is calculated on each single measurement and entered as "Meas Delay". Use this setting if the delay of the DUT is unknown or instable.

Max Delay:

The sampling time of the chirp signal is extended by this value to ensure complete chirp signal is recorded and calculated. Enter the maximum expected delay of the DUT. If this value is longer than the actual delay, then obsolete time is spend for recording; however the trailing silence does not disturb the result.

Fct SwpXTrY:

"Phase Response" is not yet implemented in this firmware version, but will be available in the next firmware release.

Frq Lim Upp:

Specifies the upper limit for THD calculation. To measure THD up to of nth harmonic the upper frequency limit must be n times higher than the stop frequency of the chirp. If "Frq Lim Upp" is lower than stop frequency of the chirp, then calculation of amplitude frequency result is limited to "Frq Lim Upp".

- **5.34.2 Data Buffers**

Because Phase response measurement is not yet implemented the corresponding data buffers 11, 21, .. 81 are not used and reserved for later firmware versions.


2.4 Troubleshooting

2.4.1 UpxCheckpreconditions still complaining about “R&S Framework”

This problem may occur if the uninstallation of the old COMPASS version did not remove all files completely. Section 2.1.1 describes how to fix this.

2.4.2 Firmware update not possible (.NET 2.0 missing)

On older instruments having Windows XP earlier than version 03.60 following error will occur when running the firmware installation:

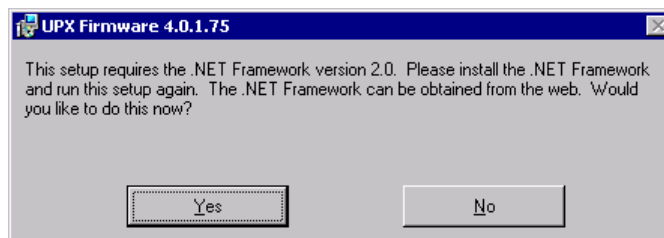

In this case, select “No” and break the installation.

It is recommended to download .NET Framework 3.5 from the Microsoft internet site.

<http://www.microsoft.com/de-de/download/details.aspx?id=25150>

After having installed this, please repeat the firmware installation.

2.4.3 Firmware does not start after update

If you missed doing the steps as described in section 2.1 errors similar to following may occur during firmware startup:






Front Panel LEDs are not turned on.

In these cases please follow the steps in section 2.1.5.

2.4.4 UPP only: device does not start after update

When updating from 3.x.x on a UPP the following message will occur:

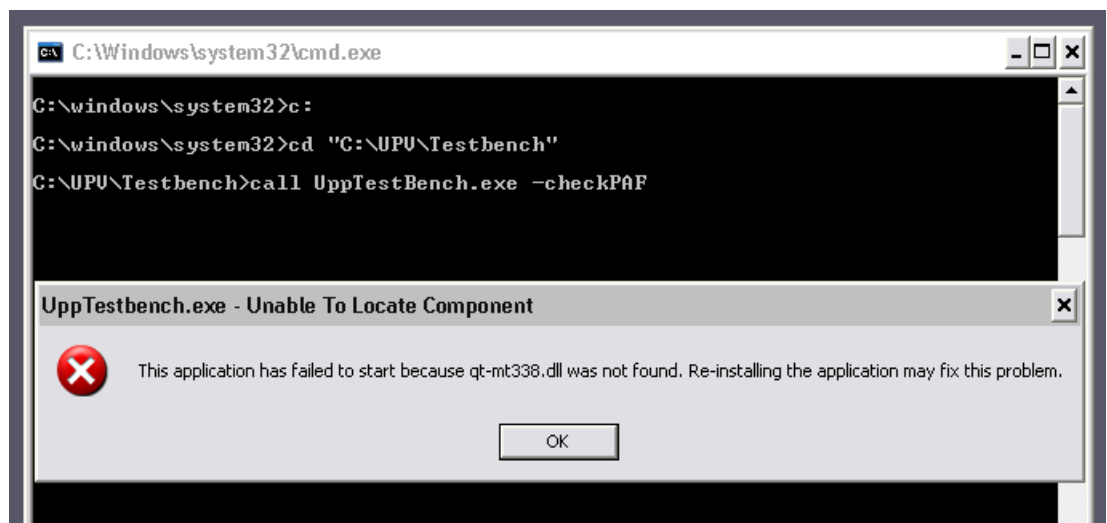

Continue with "OK". The installation will finish successfully.


2.4.5 UPP only: update from a firmware below 3.3.4 to 4.0.x

The UPP cannot be updated directly from a firmware version below 3.3.4 to 4.0.x. An intermediate installation of firmware version 3.3.4 is necessary. This firmware consists of the files

- UPxCheckPreconditions_1.3.3.exe
- UPVCompass_2.1.77.0-Release.exe
- Setup_3.3.40822Release.exe

which can be downloaded from the R&S internet site.

- Install firmware version 3.3.4. The UPP shuts down automatically.
- Switch on UPP
- During start-up this message will appear

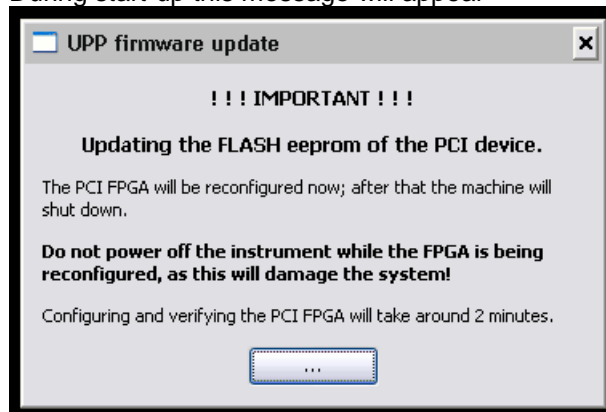

After this update the UPP shuts down automatically.

- Switch on UPP
- Un-install version 3.3.4 using the Windows tool “Add or Remove Programs”

R&S Framework	Size	20.94MB
R&S InstallationAssistantService	Size	0.19MB
R&S Msi_LXIWebServer	Size	29.92MB
UPx Firmware 3.3.4.822	Size	180.00MB


- Install firmware version 4.0.4.159

Without this intermediate installation of version 3.3.4 the Flash eeprom is not updated. A firmware version 4.0.x can be installed, but the analyzer measurement functions Waveform, FFT and all FFT-based functions e.g. THD+N will not work.


2.5 Windows 7 Backup / Recovery System

The backup / Recovery system of Windows 7 has a slightly different user interface, but still may be operated with an external keyboard.

Every time the device is rebooted, the following window is shown. It can be chosen between “Firmware” and “Backup” like it was already possible with Windows XP. If not doing anything the instrument chooses “Firmware” after about 2 seconds.

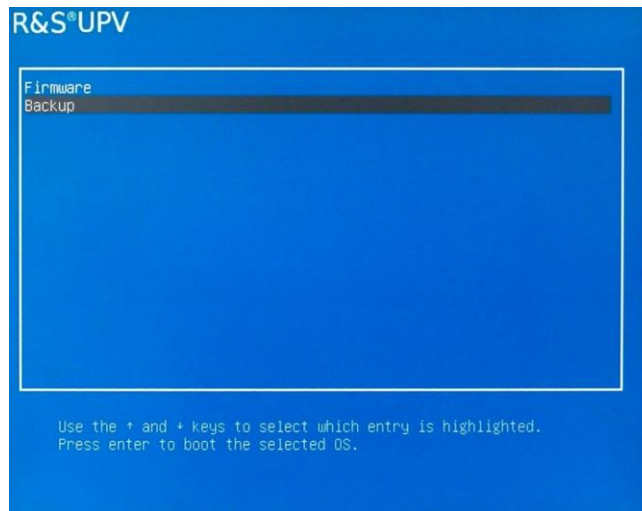


To manage the Backups you have to choose “Backup” with the direction keys within the 2 seconds. After a while following screen appears:

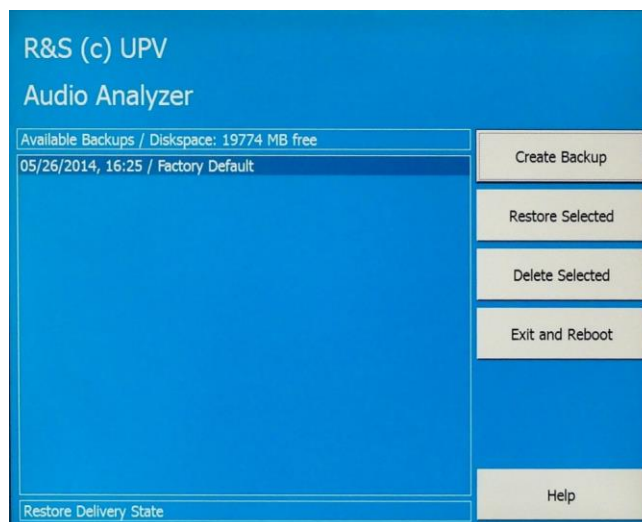

2.5.1 Restoring Factory Default

For restoring the factory default or a backup, take the selected “Factory Default” entry. Select “Restore Selected” with the Tab key and confirm with ENTER.

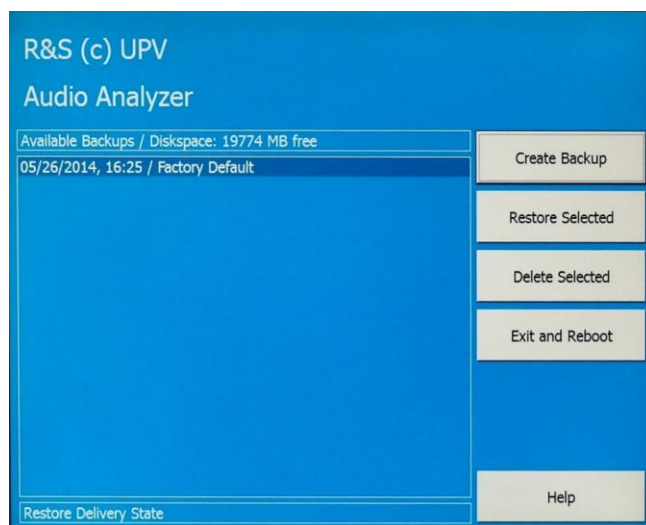


2.5.2 Restoring User Backup

For restoring another backup, navigate to the selection list with the Shift Tab key and select the desired backup with cursor up / down keys. Selecting “Restore Selected” with the Tab key and confirmation with ENTER will restore the backup of the previously selected entry.

2.5.3 Creating User Backup

For creating a backup, choose “Create Backup” with Tab and confirm with ENTER:

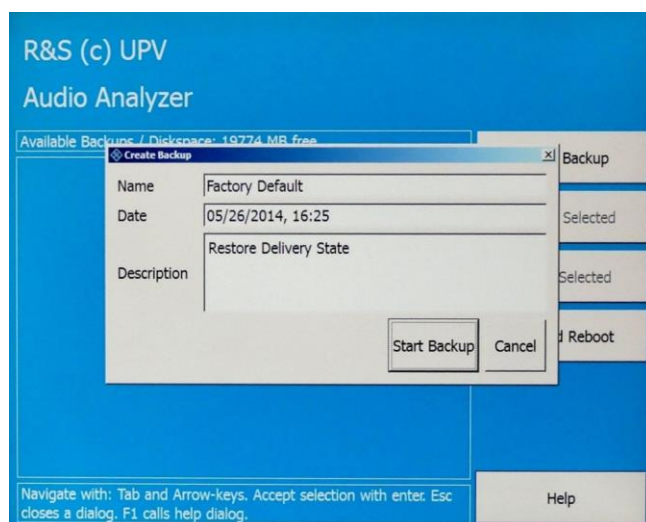

The “Name” and “Description” entries (except the date) should to be made. Afterwards choose “Start Backup” with Tab and confirm with ENTER:

3 Firmware Update

ATTENTION

For any update of **UPV** firmware from a **version 3.x to a version higher than 4.0.0** you must first uninstall the complete firmware according to chapter 3.3, Firmware Installation..

ATTENTION

For any update of **UPV** firmware from a version 1.x to a version higher than 2.0.0 the upgrade to version 2.0.0 is required before. For this purpose a bootable CD "UPV Audio Analyzer Firmware Upgrade 2.0.0" is provided, which is included in the "UPV Firmware Version 2.0.0 Installation Manual", ident number 1406.0154.42.

Please contact your local R&S agency to receive the Installation Manual and the CD-ROM free of charge.

Local Firmware Update

The firmware update is performed directly on the instrument, typically using an USB memory stick which contains the files for the firmware update. Mouse and keyboard have to be connected to the instrument. In addition, an external monitor is required for UPP (DVI monitor) and UPV66 (VGA monitor). The appropriate connector is located on the rear.

See chapter 3.1 for details.

Remote Firmware Update

Alternatively the firmware update can be performed over LAN or GPIB from an external PC. Connect the instrument via LAN or GPIB to the PC and run the firmware update from the PC.

See chapter 3.2 for details.


ATTENTION


It is strongly recommended to do **no firmware downgrade** below the version the instrument was delivered originally (this is the version you can see if you select “Factory Default” starting with Backup/Recovery).

3.1 Local Firmware Update


1. Save the current version

It is recommended to save the currently installed version. This can be done very easily and completely intuitive with the built-in recovery and backup tool.

- Switch off the instrument and switch it on again. When the instrument is starting now you see the Boot manager window (blue background, white field inside and a red selection line) after a short time. If you see this window press the cursor key  and **Enter** on the external keyboard.
- After a short time the recovery and backup service is started.

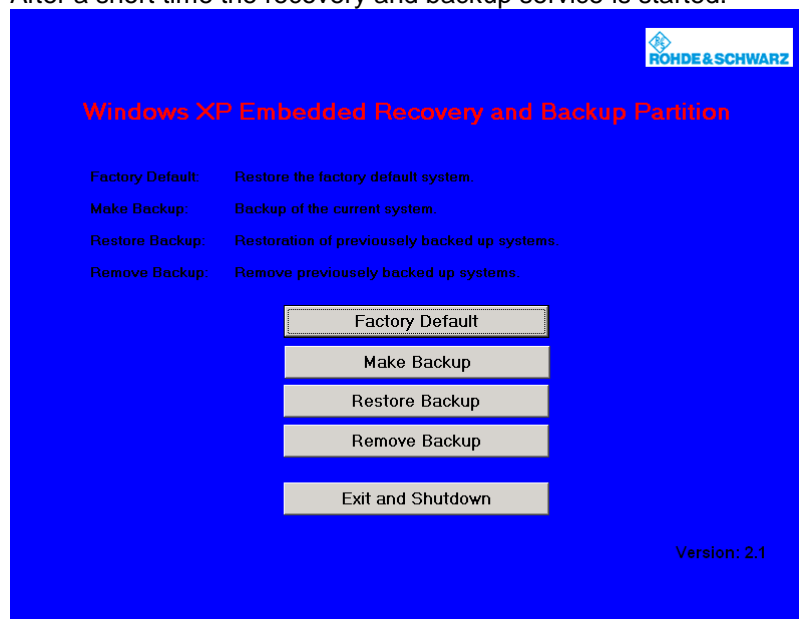

Select **Make Backup** via mouse or keyboard. The menu disappears and the instrument shows you the versions of what will be stored.

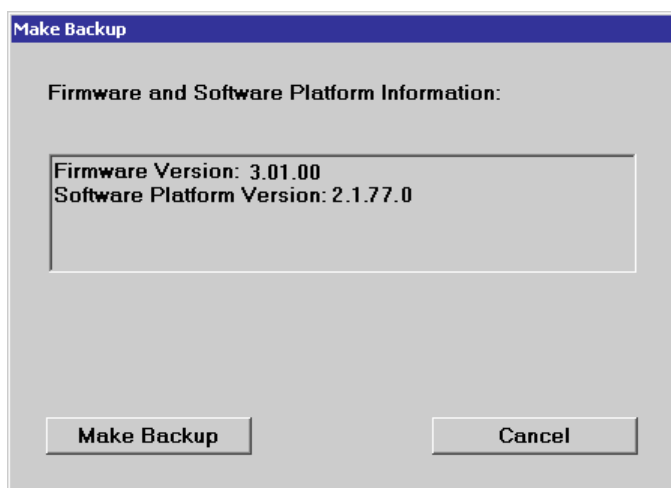

Select **Make Backup** and follow the instructions on the screen and the instrument starts working. The backup process takes some minutes. Please do not switch off the instrument, otherwise your backup may be corrupt. It's safe to switch off the instrument with the **Exit and Shutdown** button, when the menu is shown again.

If you want to restore a previously saved version select **Restore Backup** in the same way.

2. Install the new firmware version on the UPV / UPP

- Switch on the instrument.
- **Access Windows desktop**

Operating with the mouse

- Wait until R&S UPV / UPP firmware boot window with the progress bars appears.
- Click on the **Cancel** button in the boot window. Booting of the instrument firmware is aborted and the Windows XP desktop is displayed.

Operation with the keyboard

- Wait until R&S instrument firmware has booted and the application has started.
- Press **Alt** + **F4** to close the application. The Windows XP desktop is displayed.

- **Install new firmware version**

- Plug in the USB memory stick which contains the update files.
- Double-click the item **Setup_4.0.40159Release.exe**
- Keep the defaults and start the installation by selecting Next > Install.
- When installation is completed the instrument automatically shuts down.

- UPV only: switch the instrument off.
- Switch the instrument on again.

Depending on the installed version and the update version of the firmware the installer may request that you run the item **UPxCheckPreconditions.exe** before you can install the new firmware. In this case, please follow the instructions in section 2.3 “Firmware Installation”.

3.2 Remote Firmware Update

1. Save the current version


Please ensure that the current version of the remote instrument has been saved by the operator, as described in section 2.1.

2. Connect the remote instrument to your PC

The remote instrument may be connected to your PC via GPIB or via a LAN connection.


3. Install the new firmware version

- Run **Setup_4.0.40159Release.exe** on your PC
- Select “Remote Installation”

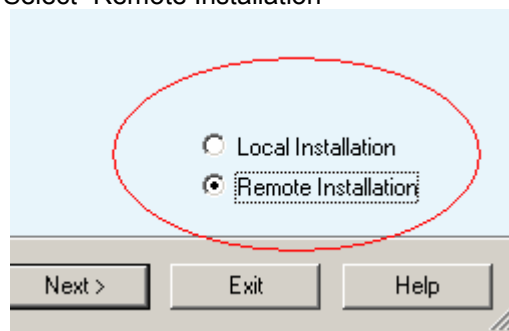


and click the button “Next >”


- After scanning GPIB connections and your LAN subnet all found instruments are listed. Select the instruments you want to update:

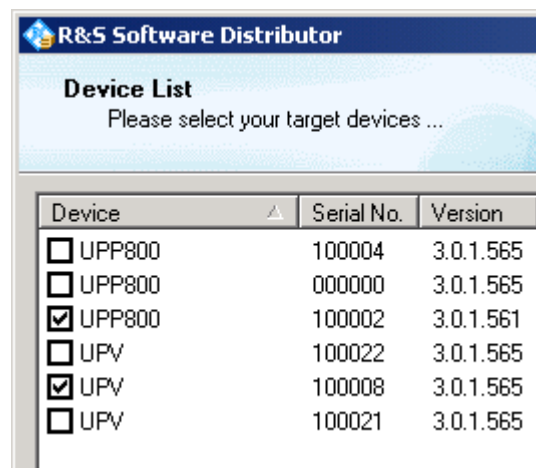

- If no audio analyzers are found even if they are connected to GPIB or LAN, please ensure that the **Device Group** is set to “**AUDIOANALYZER**” and perform a rescan.

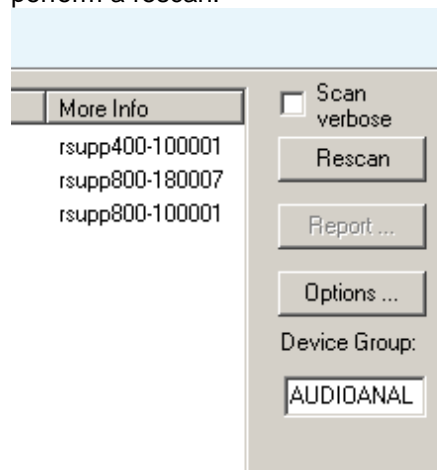

- To store Device Group “**AUDIOANALYZER**” permanently, select “Options ...”-Button and type “**AUDIOANALYZER**” in the field shown below,

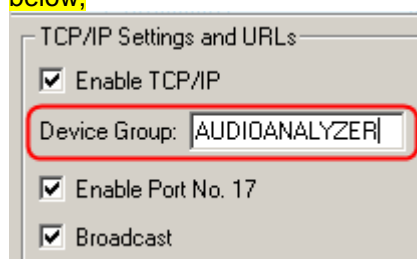

then click “Save Options”-Button and “OK”-Button in sequence.

ATTENTION

Please be careful and check twice if you have selected the correct instruments. Depending on your company's network structure also instruments of other departments will show up!

- Additional help will be displayed after clicking the button "Help"
- Start installation by selecting "Install"
- When installation is completed the instrument automatically shuts down.
- UPV only: switch instrument off.
- Switch instrument on again.

Depending on the installed version and the update version of the firmware the installer may request that you run the item **UPxCheckPreconditions.exe** before you can install the new firmware. In this case, you are not able to do the update via remote, please follow the instructions in section 2.3 "Firmware Installation".

3.3 Firmware Installation

Connect mouse and keyboard to the instrument.


Connect external monitor to UPP (DVI monitor) or UPV66 (VGA monitor).

Switch on the instrument.


Plug in the USB memory stick which contains the update files.

1. Remove the previous firmware version

Use the Windows tool "Add or Remove Programs" to remove the R&S Framework, the R&S InstallationAssistantService and the R&S Msi_LXIWebServer...

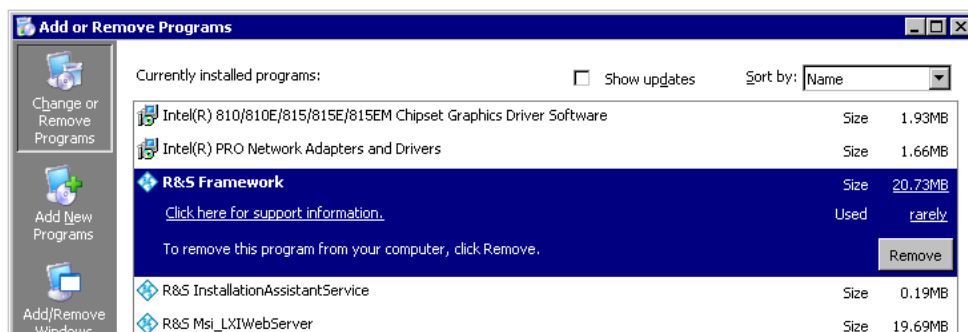

Remove the previous version of the instrument firmware ...

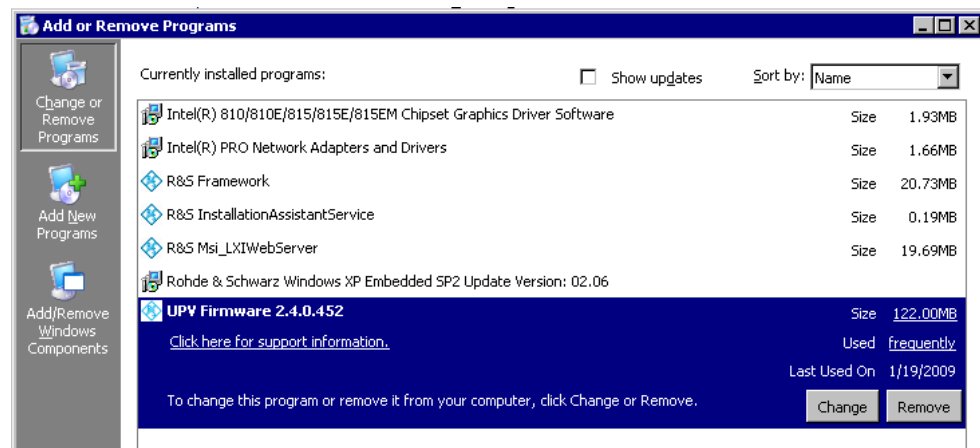

2. Run the UPx preconditioning tool

- Double-click the item **UPxCheckPreconditions_1.4.3.exe**.
The instrument is now prepared for the installation of the new R&S Framework and the new UPV / UPP firmware version.
Click on the **OK** button and follow the instructions on screen.

3. Install the new firmware version on the UPV / UPP

- Double-click the item **UPVCompass_3.1.18.21-Release.exe**
 - Keep the defaults and start the installation by selecting Next > Install.
 - Quit the installation by selecting Exit.
 - Skip a request for a reboot, which may be displayed on screen.
- Double-click the item **Setup_4.0.40159Release.exe**
 - Keep the defaults and start the installation by selecting Next > Install.
 - When installation is completed the instrument automatically shuts down.
 - Switch the instrument off and on again.

4 Open Source Acknowledgement

This instrument firmware makes use of valuable open source software packages. The most important of them are listed below together with their corresponding open source license. The verbatim license texts are provided on the documentation disk delivered with each instrument.

Package	Link	License
OpenSSL	http://www.openssl.org	OpenSSL/SSLeay
Net-SNMP	http://www.net-snmp.org	NetSnmp-5.0.8
Xitami	http://www.xitami.com	2.5b6
PHP	http://www.php.net	PHP, Version 3
DOJO-AJAX	http://www.dojotoolkit.org	Academic Free License (BSD)
ResizableLib	http://www.geocities.com/ppescher	Artistic License
BOOST Library	http://www.boost.org	Boost Software, v.1
zlib	http://www.zlib.net	zlib, v.1.2.3
Xalan Xerces	http://xalan.apache.org/ http://xerces.apache.org/	Apache, Ver.2
ACE	http://www.cs.wustl.edu/~schmidt/ACE.html	ACE_TAO
TAO (The ACE ORB)	http://www.cs.wustl.edu/~schmidt/TAO.html	ACE_TAO
PC/SC-Lite	http://www.linuxnet.com/	PCSC Lite
ONC/RPC	http://www.plt.rwth-aachen.de/index.php?id=258	SUN

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com) and software written by Tim Hudson (tjh@cryptsoft.com).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing. The source code of the open source packages is available on request.

5 Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Regional contact

Europe, Africa, Middle East

Phone +49 89 4129 12345

customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)

customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988

customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88

customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 / +86-400-650-5896

customersupport.china@rohde-schwarz.com