

# R&S®SMBV100B

## Vector Signal Generator

### User Manual



1178446002  
Version 13

**ROHDE & SCHWARZ**  
Make ideas real





This document describes the R&S®SMBV100B, stock no. 1423.1003.02 and its options:

- R&S®SMBVB-B103/-KB106
- R&S®SMBVB-B1/-B1H
- R&S®SMBVB-B3
- R&S®SMBVB-B32
- R&S®SMBVB-B80/-B81
- R&S®SMBVB-K17/-K19
- R&S®SMBVB-K22/-K23/-K24/-K27
- R&S®SMBVB-K31
- R&S®SMBVB-K61/-K62
- R&S®SMBVB-K90
- R&S®SMBVB-K200
- R&S®SMBVB-K511/-K512/-K513/-K520/-K523/-K524/-K525
- R&S®SMBVB-K704/-K720
- R&S®SMBVB-K811

This manual describes firmware version FW 5.30.047.xx and later of the R&S®SMBV100B.

© 2023 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks are the properties of their respective owners.

1178.4460.02 | Version 13 | R&S®SMBV100B

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol , e.g. R&S®SMBV100B is indicated as R&S SMBVB. Linux® is abbreviated as Linux.



# Contents

<b>1</b>	<b>Safety and regulatory information.....</b>	<b>17</b>
1.1	Safety instructions.....	17
1.2	Labels on R&S SMBV100B.....	19
1.3	Warning messages in the documentation.....	20
1.4	Where to find key documents on Rohde & Schwarz.....	20
1.5	Korea certification class A.....	20
<b>2</b>	<b>Welcome to the R&amp;S SMBV100B.....</b>	<b>22</b>
2.1	Key features.....	22
2.2	What's new.....	22
2.3	Documentation overview.....	23
2.3.1	Getting started manual.....	23
2.3.2	User manuals and help.....	23
2.3.3	Service manual.....	23
2.3.4	Instrument security procedures.....	24
2.3.5	Printed safety instructions.....	24
2.3.6	Data sheets and brochures.....	24
2.3.7	Release notes and open source acknowledgment (OSA).....	24
2.3.8	Application notes, application cards, white papers, etc.....	24
2.3.9	Videos.....	24
<b>3</b>	<b>Getting started.....</b>	<b>26</b>
3.1	Preparing for use.....	26
3.1.1	Lifting and carrying.....	26
3.1.2	Unpacking and checking.....	26
3.1.3	Choosing the operating site.....	26
3.1.4	Setting up the R&S SMBV100B.....	27
3.1.5	Considerations for test setup.....	29
3.1.6	Connecting to power.....	30
3.1.7	Connecting to LAN.....	30
3.1.8	Connecting USB devices.....	31
3.1.9	Connecting to RF coaxial connectors.....	32
3.1.10	Connecting to RF.....	33



3.1.11	Connecting to LO In/Out.....	33
3.1.12	Connecting to Ref In/Ref Out.....	34
3.1.13	Connecting to HS Dig I/Q.....	34
3.1.14	Switching on or off.....	35
<b>3.2</b>	<b>Instrument tour.....</b>	<b>36</b>
3.2.1	Front panel tour.....	36
3.2.2	Rear panel tour.....	42
<b>3.3</b>	<b>Trying out the instrument.....</b>	<b>46</b>
3.3.1	Generating an unmodulated carrier.....	47
3.3.2	Generating a digitally modulated signal.....	48
3.3.3	Triggering the instrument with an external signal.....	50
3.3.4	Enabling and configuring a marker signal.....	55
3.3.5	Verifying the generated signal with the graphics display.....	56
3.3.6	Saving and recalling settings.....	59
3.3.7	Generating an EUTRA/LTE signal.....	61
<b>3.4</b>	<b>System overview.....</b>	<b>64</b>
3.4.1	Brief introduction to the instrument's concept.....	64
3.4.2	Signal flow at a glance.....	65
3.4.3	Internal baseband source ("Baseband" block).....	66
3.4.4	Digital baseband input ("BB input"Block).....	66
3.4.5	Additional white gaussian noise ("AWGN" block).....	67
3.4.6	"I/Q stream mapper" block.....	67
3.4.7	I/Q modulator ("I/Q mod" block).....	67
3.4.8	Analog I/Q output ("I/Q analog" block).....	67
3.4.9	RF and analog modulations ("RF" block).....	67
3.4.10	Applications examples of the R&S SMBV100B.....	68
<b>3.5</b>	<b>Instrument control.....</b>	<b>68</b>
3.5.1	Possible ways to operate the instrument.....	68
3.5.2	Means of manual interaction.....	69
3.5.3	Understanding the display information.....	70
3.5.4	Accessing the functionality.....	74
3.5.5	Entering data.....	75
3.5.6	Getting information and help.....	77



3.5.7	Remote control.....	79
3.5.8	Remote operation over VNC.....	79
<b>4</b>	<b>Configuring the internal baseband source.....</b>	<b>81</b>
<b>4.1</b>	<b>Overview of the signal generation modes.....</b>	<b>81</b>
<b>4.2</b>	<b>Accessing the functions in the baseband domain.....</b>	<b>82</b>
<b>4.3</b>	<b>Generating signals according to digital standards.....</b>	<b>83</b>
<b>4.4</b>	<b>Common functions and settings in the baseband domain.....</b>	<b>86</b>
4.4.1	Basics on signals, modulation formats and filters.....	86
4.4.2	Common settings.....	107
4.4.3	Time-based triggering.....	115
<b>4.5</b>	<b>Generating custom digital modulated signals.....</b>	<b>119</b>
4.5.1	Required options.....	119
4.5.2	About the custom digital modulation.....	119
4.5.3	Custom digital modulation settings.....	119
4.5.4	How to create data and control lists.....	138
4.5.5	References.....	141
<b>4.6</b>	<b>Using the arbitrary waveform generator (ARB).....</b>	<b>152</b>
4.6.1	Required options.....	152
4.6.2	About ARB.....	153
4.6.3	ARB settings.....	157
4.6.4	Playing waveform files.....	167
4.6.5	Tags for waveforms, data and control lists.....	182
<b>4.7</b>	<b>Generating notched signals.....</b>	<b>199</b>
4.7.1	Required options.....	200
4.7.2	About the notch filters.....	200
4.7.3	Notch filter settings.....	200
4.7.4	AWGN test signal.....	203
<b>4.8</b>	<b>Reducing the crest factor.....</b>	<b>205</b>
<b>4.9</b>	<b>Generating multi-segment waveform files.....</b>	<b>205</b>
4.9.1	Required options.....	206
4.9.2	About the multi-segment waveforms.....	206
4.9.3	Multi-segment settings.....	211
4.9.4	How to create and work with multi-segment waveform files.....	227



4.9.5	Reference to triggering of multi-segment waveforms.....	232
<b>4.10</b>	<b>Generating multi-carrier signals.....</b>	<b>235</b>
4.10.1	Required options.....	236
4.10.2	About the multi-carrier waveforms.....	236
4.10.3	Multi-carrier settings.....	238
4.10.4	How to use the multi-carrier function.....	250
<b>4.11</b>	<b>Generating multi-carrier continuous wave signal.....</b>	<b>252</b>
4.11.1	Required options.....	253
4.11.2	About the MCCW.....	253
4.11.3	MCCW settings.....	253
4.11.4	How to use the multi-carrier continuous wave function.....	260
4.11.5	References.....	261
<b>4.12</b>	<b>Shifting and boosting the baseband signal.....</b>	<b>262</b>
4.12.1	About baseband offsets.....	262
4.12.2	Baseband offsets settings.....	264
4.12.3	How to improve signal characteristics by shifting the baseband signal.....	265
<b>5</b>	<b>Adding noise and predistortions, and impairing the signal.....</b>	<b>267</b>
<b>5.1</b>	<b>Adding noise to the signal.....</b>	<b>267</b>
5.1.1	Required options.....	267
5.1.2	About the AWGN generator.....	267
5.1.3	AWGN block.....	271
5.1.4	AWGN settings.....	272
5.1.5	How to configure the noise generator for receiver tests.....	279
<b>5.2</b>	<b>Impairing the signal.....</b>	<b>281</b>
5.2.1	Required options.....	281
5.2.2	About the linear I/Q impairments.....	281
5.2.3	Analog and digital impairments settings.....	283
5.2.4	How to optimize the carrier leakage and sidebands suppression.....	287
<b>5.3</b>	<b>Applying digital predistortion.....</b>	<b>288</b>
<b>6</b>	<b>Applying I/Q vector modulation.....</b>	<b>289</b>
<b>6.1</b>	<b>Required options.....</b>	<b>289</b>
<b>6.2</b>	<b>About the I/Q modulator.....</b>	<b>289</b>
<b>6.3</b>	<b>I/Q modulator settings.....</b>	<b>290</b>



6.4	Optimizing I/Q modulation performance.....	294
<b>7</b>	<b>Configuring the RF signal.....</b>	<b>297</b>
7.1	Required options.....	298
7.2	How to access the RF settings.....	298
7.3	How to activate the RF signal output.....	298
7.4	How to set the frequency and level.....	299
7.5	RF frequency settings.....	301
7.6	RF level settings.....	303
7.7	RF phase settings.....	307
7.8	Reference oscillator.....	308
7.8.1	Required options.....	308
7.8.2	Reference frequency settings.....	309
7.8.3	Reference output settings.....	312
7.8.4	Adjustment settings.....	313
7.8.5	Using the reference frequency for instruments synchronization.....	313
7.9	Local oscillator coupling.....	316
7.9.1	Required options.....	317
7.9.2	Phase coherence.....	317
7.9.3	LO coupling settings.....	318
7.9.4	How to configure cascaded instruments.....	319
7.10	Varying the RF signal in list or sweep mode.....	321
7.10.1	Signal generation and triggering in the sweep and list modes.....	323
7.10.2	About sweep mode.....	331
7.10.3	About list mode.....	334
7.10.4	Significant parameters and functions.....	335
7.10.5	Sweep mode settings.....	337
7.10.6	List mode settings.....	348
7.10.7	List editor.....	354
7.10.8	How to generate a signal in list or sweep mode.....	357
7.11	Analog modulations.....	359
7.11.1	Required options.....	359
7.11.2	Modulation types and signal sources.....	360
7.11.3	Activating analog modulations.....	361



7.11.4	Modulation settings.....	362
7.11.5	How to generate an amplitude modulated signal.....	394
7.11.6	How to generate a pulse modulated signal.....	394
7.11.7	How to generate a pulse train modulated signal.....	395
<b>7.12</b>	<b>Improving level performance.....</b>	<b>396</b>
7.12.1	Attenuator.....	397
7.12.2	ALC - automatic level control.....	399
7.12.3	User correction.....	402
7.12.4	Using power sensors.....	415
7.12.5	To calibrate the power level with an R&S NRP power sensor.....	432
<b>8</b>	<b>Monitoring signal characteristics.....</b>	<b>436</b>
<b>8.1</b>	<b>Displaying baseband signal characteristics in real-time.....</b>	<b>436</b>
8.1.1	Required options.....	436
8.1.2	About the graphical signal display.....	436
8.1.3	Graphics configuration settings.....	443
8.1.4	Graphical signal display settings.....	447
8.1.5	How to verify the generated signal with the graphics display.....	449
<b>9</b>	<b>Multi-instrument setups.....</b>	<b>456</b>
<b>9.1</b>	<b>Synchronizing instruments.....</b>	<b>456</b>
<b>9.2</b>	<b>Generating phase-coherent signals.....</b>	<b>456</b>
<b>9.3</b>	<b>Generating time-aligned baseband signals.....</b>	<b>457</b>
9.3.1	Connecting multiple instruments in primary-secondary instrument mode.....	457
9.3.2	Triggering several instruments with a common trigger signal.....	462
<b>9.4</b>	<b>Control and operation of external instruments.....</b>	<b>463</b>
9.4.1	About signal routing and system configuration.....	464
9.4.2	Overview of the input and output signals and interfaces.....	465
9.4.3	Further information.....	471
<b>9.5</b>	<b>System configuration settings.....</b>	<b>471</b>
9.5.1	I/Q stream mapper settings.....	471
9.5.2	External RF and I/Q settings.....	472
9.5.3	Overview.....	485
<b>9.6</b>	<b>Digital baseband input settings.....</b>	<b>486</b>
9.6.1	General settings.....	487



9.6.2	Signal input settings.....	489
9.6.3	Sample rate settings.....	491
9.6.4	Input level settings.....	492
<b>9.7</b>	<b>I/Q digital output settings.....</b>	<b>494</b>
9.7.1	General settings.....	495
9.7.2	Channels settings.....	497
9.7.3	Signal output settings.....	499
<b>9.8</b>	<b>I/Q analog output settings.....</b>	<b>501</b>
9.8.1	General analog I/Q output settings.....	503
<b>10</b>	<b>File and data management.....</b>	<b>508</b>
<b>10.1</b>	<b>About the file system.....</b>	<b>508</b>
<b>10.2</b>	<b>Restoring the (default) instrument configuration.....</b>	<b>511</b>
10.2.1	Preset, set to default and factory preset settings.....	513
10.2.2	How to identify parameters which are not in a preset state.....	514
10.2.3	How to recall user settings automatically after preset.....	515
10.2.4	Reference.....	515
<b>10.3</b>	<b>Protecting data.....</b>	<b>517</b>
<b>10.4</b>	<b>Saving and recalling instrument settings.....</b>	<b>518</b>
10.4.1	Save/recall settings.....	519
10.4.2	How to save and recall instrument settings.....	522
10.4.3	How to recall the settings of a firmware option.....	523
<b>10.5</b>	<b>Accessing files with user data.....</b>	<b>524</b>
10.5.1	File select settings.....	524
10.5.2	How to create and access data and control lists.....	527
<b>10.6</b>	<b>Exporting and importing remote command lists.....</b>	<b>528</b>
<b>10.7</b>	<b>Loading, importing and exporting lists.....</b>	<b>528</b>
<b>10.8</b>	<b>Using the file manager.....</b>	<b>529</b>
10.8.1	File manager settings.....	530
10.8.2	Map network share settings.....	531
10.8.3	How to display all saved files.....	533
10.8.4	How to map a network folder.....	533
<b>10.9</b>	<b>How to transfer files from and to the instrument.....</b>	<b>535</b>
10.9.1	Removing file system protection.....	536



10.9.2	Accessing the file system of the R&S SMBV100B over FTP.....	537
10.9.3	Accessing the R&S SMBV100B file system using SMB (Samba).....	538
10.9.4	Using a USB storage device for file transfer.....	540
10.9.5	Using a file server for test files exchange.....	540
<b>10.10</b>	<b>Creating screenshots of current settings.....</b>	<b>541</b>
10.10.1	Hardcopy settings.....	541
10.10.2	How to save a hardcopy of the display.....	545
<b>11</b>	<b>General instrument functions.....</b>	<b>547</b>
<b>11.1</b>	<b>Customizing the user interface.....</b>	<b>547</b>
11.1.1	Display and keyboard settings.....	548
11.1.2	Appearance settings.....	550
11.1.3	Display update settings.....	550
11.1.4	Defining the RF signal state on power on.....	551
11.1.5	How to set the initial instrument settings.....	552
<b>11.2</b>	<b>Configuring global connectors.....</b>	<b>553</b>
11.2.1	Required options.....	553
11.2.2	About global connectors.....	553
11.2.3	Trigger marker clock settings.....	556
11.2.4	RF connectors settings.....	557
11.2.5	Global connectors settings.....	559
11.2.6	Routing signals to local/global connectors.....	563
<b>11.3</b>	<b>Checking parameters and dependencies.....</b>	<b>564</b>
<b>11.4</b>	<b>Organizing frequently used settings as favorites.....</b>	<b>566</b>
11.4.1	User menu settings.....	567
11.4.2	How to use the user menu for fast adjustments.....	568
11.4.3	Define user key actions settings.....	570
11.4.4	How to assign actions to the [★ (User)] key.....	571
<b>11.5</b>	<b>Managing licenses and license keys.....</b>	<b>573</b>
11.5.1	Manage license keys settings.....	574
11.5.2	Using the license server.....	579
11.5.3	How to occupy or extend a license.....	589
11.5.4	How to move a portable license.....	591
<b>11.6</b>	<b>Using the security settings.....</b>	<b>593</b>



11.6.1	Protection level settings.....	594
11.6.2	Setting security parameters.....	595
11.6.3	Configuring LAN services.....	600
11.6.4	Password management.....	603
11.6.5	How to prevent unauthorized access.....	606
<b>11.7</b>	<b>Undoing or restoring actions.....</b>	<b>609</b>
<b>11.8</b>	<b>Shutting down and rebooting the instrument.....</b>	<b>611</b>
<b>12</b>	<b>Network operation and remote control.....</b>	<b>612</b>
<b>12.1</b>	<b>Overview of remote access modes.....</b>	<b>613</b>
<b>12.2</b>	<b>Remote control interfaces and protocols.....</b>	<b>614</b>
12.2.1	LAN interface.....	615
12.2.2	USB interface.....	617
12.2.3	GPIB interface (IEC/IEEE bus interface).....	618
12.2.4	LXI browser interface.....	619
<b>12.3</b>	<b>Remote control programs and libraries.....</b>	<b>619</b>
<b>12.4</b>	<b>Status reporting system.....</b>	<b>622</b>
12.4.1	Hierarchy of the status registers.....	622
12.4.2	Structure of a SCPI status register.....	624
12.4.3	Status byte (STB) and service request enable register (SRE).....	626
12.4.4	Event status register (ESR) and event status enable register (ESE).....	627
12.4.5	Questionable status register (STATus:QUESTionable).....	628
12.4.6	Operation status register (STATus:OPERation).....	628
12.4.7	Application of the status reporting system.....	628
12.4.8	Reset values of the status reporting system.....	630
<b>12.5</b>	<b>Remote access settings.....</b>	<b>631</b>
12.5.1	Network settings.....	633
12.5.2	VISA resource strings.....	636
12.5.3	GPIB address settings.....	638
12.5.4	RS232 settings.....	638
12.5.5	Instrument emulations settings.....	639
12.5.6	Remote connections settings.....	640
12.5.7	HUMS settings.....	642
12.5.8	HUMS enhanced settings.....	644



12.5.9	QR code.....	653
<b>12.6</b>	<b>LXI settings.....</b>	<b>654</b>
12.6.1	LXI status settings.....	654
12.6.2	LXI browser settings.....	655
<b>12.7</b>	<b>To configure the instrument for remote access.....</b>	<b>661</b>
12.7.1	To find the VISA resource string.....	662
12.7.2	To configure the acces over LAN.....	662
12.7.3	To configure the access over GPIB.....	666
<b>12.8</b>	<b>To establish a remote control session over LAN.....</b>	<b>666</b>
12.8.1	To establish the connection with the LXI web browser.....	667
12.8.2	To establish the connection using VXI-11 protocol.....	667
12.8.3	To establish the connection using socket communication.....	672
<b>12.9</b>	<b>To establish a remote control session over GPIB.....</b>	<b>674</b>
<b>12.10</b>	<b>To establish a remote control session over USB.....</b>	<b>674</b>
<b>12.11</b>	<b>To trace messages with the LXI web browser interface.....</b>	<b>675</b>
<b>12.12</b>	<b>To return to manual operation.....</b>	<b>676</b>
<b>12.13</b>	<b>To automate tasks with remote command scripts.....</b>	<b>676</b>
12.13.1	Show SCPI command.....	679
12.13.2	Displaying an SCPI list.....	679
12.13.3	SCPI recording export settings.....	680
12.13.4	How to record / create SCPI lists.....	681
12.13.5	How to convert and save SCPI lists.....	685
12.13.6	How to find out the SCPI commands for GUI functions.....	685
<b>12.14</b>	<b>To operate the instrument using VNC.....</b>	<b>686</b>
12.14.1	How to enable the VNC service.....	687
12.14.2	How to set up remote operation from a desktop system.....	687
12.14.3	How to set up remote operation from a smart device.....	689
<b>12.15</b>	<b>References.....</b>	<b>692</b>
12.15.1	LXI functionality.....	692
12.15.2	Code generator templates.....	693
12.15.3	Remote control states.....	695
<b>13</b>	<b>Remote control commands.....</b>	<b>696</b>
<b>13.1</b>	<b>Conventions used in SCPI command descriptions.....</b>	<b>696</b>



<b>13.2</b>	<b>Backward compatibility with other Rohde &amp; Schwarz signal generators.....</b>	<b>697</b>
<b>13.3</b>	<b>Programming examples.....</b>	<b>697</b>
<b>13.4</b>	<b>Common commands.....</b>	<b>698</b>
<b>13.5</b>	<b>Preset commands.....</b>	<b>702</b>
<b>13.6</b>	<b>MMEMory subsystem.....</b>	<b>704</b>
13.6.1	File naming conventions.....	704
13.6.2	Accessing files in the default or in a specified directory.....	705
13.6.3	Programming examples.....	707
13.6.4	Remote control commands.....	709
<b>13.7</b>	<b>CALibration subsystem.....</b>	<b>716</b>
<b>13.8</b>	<b>DIAGnostic subsystem.....</b>	<b>721</b>
<b>13.9</b>	<b>HUMS remote control commands.....</b>	<b>724</b>
<b>13.10</b>	<b>DISPlay subsystem.....</b>	<b>732</b>
<b>13.11</b>	<b>FORMat subsystem.....</b>	<b>736</b>
<b>13.12</b>	<b>HCOPy subsystem.....</b>	<b>738</b>
13.12.1	Hard copy settings.....	739
13.12.2	Automatic naming.....	740
<b>13.13</b>	<b>KBOard subsystem.....</b>	<b>743</b>
<b>13.14</b>	<b>OUTPut subsystem.....</b>	<b>743</b>
<b>13.15</b>	<b>SENSe, READ, INITiate and SLISt subsystems.....</b>	<b>746</b>
<b>13.16</b>	<b>SCONfiguration subsystem.....</b>	<b>761</b>
13.16.1	Multi-instrument configuration commands.....	764
13.16.2	I/Q stream mapper commands.....	765
13.16.3	External RF and I/Q instruments commands.....	766
<b>13.17</b>	<b>SOURce subsystem.....</b>	<b>778</b>
13.17.1	Connector settings.....	779
13.17.2	SOURce:BBIN subsystem.....	783
13.17.3	Analog modulation subsystems.....	791
13.17.4	SOURce:BB subsystem.....	817
13.17.5	SOURce:CORRection subsystem.....	932
13.17.6	SOURce:FREQuency subsystem.....	942
13.17.7	SOURce:INPut subsystem.....	950
13.17.8	SOURce:IQ subsystem.....	952



13.17.9	SOURce:IQ:OUTPut subsystem.....	954
13.17.10	SOURce:LFOutput subsystem.....	966
13.17.11	SOURce:LIST subsystem.....	979
13.17.12	SOURce:NOISe subsystem.....	992
13.17.13	SOURce:OCCupy subsystem.....	993
13.17.14	SOURce:PGEN subsystem.....	995
13.17.15	SOURce:PHASe subsystem.....	996
13.17.16	SOURce:POWer subsystem.....	997
13.17.17	SOURce:ROSCillator subsystem.....	1011
13.17.18	SOURce:SWEep subsystem.....	1017
<b>13.18</b>	<b>SYSTem subsystem.....</b>	<b>1028</b>
<b>13.19</b>	<b>STATus subsystem.....</b>	<b>1059</b>
<b>13.20</b>	<b>TEST subsystem.....</b>	<b>1062</b>
<b>13.21</b>	<b>TRIGger subsystem.....</b>	<b>1069</b>
<b>13.22</b>	<b>UNIT subsystem.....</b>	<b>1072</b>
<b>14</b>	<b>Troubleshooting and notifications.....</b>	<b>1074</b>
<b>14.1</b>	<b>Notifications.....</b>	<b>1074</b>
14.1.1	Volatile notifications.....	1074
14.1.2	Permanent notifications.....	1075
<b>14.2</b>	<b>SCPI notifications.....</b>	<b>1075</b>
<b>14.3</b>	<b>Device-specific notifications.....</b>	<b>1075</b>
<b>14.4</b>	<b>Querying notifications.....</b>	<b>1077</b>
<b>14.5</b>	<b>Resolving network connection failures.....</b>	<b>1079</b>
<b>14.6</b>	<b>Resolving errors during internal adjustments.....</b>	<b>1080</b>
<b>14.7</b>	<b>Measuring USB cable quality.....</b>	<b>1080</b>
<b>14.8</b>	<b>Requesting instrument configuration and specifications.....</b>	<b>1081</b>
14.8.1	Hardware configuration settings.....	1081
14.8.2	Versions/options settings.....	1082
14.8.3	How to query instrument configuration.....	1084
14.8.4	How to request the data sheet.....	1086
<b>14.9</b>	<b>Collecting information for technical support.....</b>	<b>1086</b>
<b>14.10</b>	<b>Contacting customer support.....</b>	<b>1087</b>
<b>15</b>	<b>Transporting.....</b>	<b>1089</b>



<b>16</b>	<b>Maintenance, storage and disposal.....</b>	<b>1090</b>
<b>16.1</b>	<b>Cleaning.....</b>	<b>1090</b>
<b>16.2</b>	<b>Storage.....</b>	<b>1090</b>
<b>16.3</b>	<b>Performing maintenance tasks.....</b>	<b>1090</b>
16.3.1	Date and time.....	1091
16.3.2	Check front panel.....	1093
16.3.3	Check display screen.....	1096
16.3.4	Internal adjustments.....	1097
16.3.5	Selftest.....	1101
16.3.6	FPGA/uC update settings.....	1105
16.3.7	Delete temporary files.....	1107
<b>16.4</b>	<b>Disposal.....</b>	<b>1108</b>
	<b>Annex.....</b>	<b>1109</b>
<b>A</b>	<b>Reference information for remote control.....</b>	<b>1109</b>
A.1	Telnet program examples.....	1109
A.2	Extensions for user files.....	1114
<b>B</b>	<b>Hardware interfaces.....</b>	<b>1117</b>
B.1	GPIO-Bus interface.....	1117
<b>C</b>	<b>Unit shortcuts.....</b>	<b>1119</b>
	<b>Glossary: Terms and abbreviations.....</b>	<b>1121</b>
	<b>Glossary: Publications and references.....</b>	<b>1126</b>
	<b>List of commands.....</b>	<b>1127</b>
	<b>Index.....</b>	<b>1149</b>







# 1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following chapters.

## Intended use

The product generates radio frequency (RF) signals for the development, production and verification of electronic components, modules or devices. The product is intended for industrial use, for example for production and conformance testing, maintenance and engineering laboratories.

Use the product only for its designated purpose. Any other use is considered improper use. Observe the operating conditions and performance limits stated in the data sheet.

## Target audience

This document targets at all users, including technicians, operators, administrators and maintenance personnel. The required skills and experience of the users depend on the test setup and application of the product.

## Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 17. The same information is provided in many languages as printed "Safety Instructions". The printed "Safety Instructions" are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

## 1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the data sheet, manuals and the printed "Safety Instructions". If you are unsure about the appropriate use, contact Rohde & Schwarz customer service.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the data sheet. Any other modifications can affect safety and are not permitted.



Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer service at <https://www.rohde-schwarz.com/support>.

### **Lifting and carrying the product**

The maximum weight of the product is provided in the data sheet. You can lift or carry the product by yourself, if you can manage the weight on your own. Alternatively, you can use lifting or transporting equipment. Follow the instructions provided by the equipment manufacturer.

### **Choosing the operating site**

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing. If Rohde & Schwarz provides accessories designed for your product, e.g. a carrying bag, you can use the product outdoors.

Unless otherwise specified, you can operate the product up to an altitude of 2000 m above sea level. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the data sheet.

### **Setting up the product**

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

### **Connecting to power**

The product is an overvoltage category II product. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death. Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.



Take the following measures for your safety:





- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

### Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

### Meaning of safety labels

Safety labels on the product warn against potential hazards.

	<p>Potential hazard</p> <p>Read the product documentation to avoid personal injury or product damage.</p>
	<p>Electrical hazard</p> <p>Indicates live parts. Risk of electric shock, fire, personal injury or even death.</p>
	<p>Hot surface</p> <p>Do not touch. Risk of skin burns. Risk of fire.</p>
	<p>Protective conductor terminal</p> <p>Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.</p>

## 1.2 Labels on R&S SMBV100B


Labels on the casing inform about:

- Personal safety, see ["Connecting to power"](#) on page 18.



- Product and environment safety, see [Table 1-1](#).
- Identification of the product, see the serial number on the [rear panel](#).

**Table 1-1: Labels regarding R&S SMBV100B and environment safety**

	<p>Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its service life. For more information, see <a href="#">Chapter 16.4, "Disposal"</a>, on page 1108.</p>
---	--

## 1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

### **WARNING**

Potentially hazardous situation. Could result in death or serious injury if not avoided.

### **CAUTION**

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

### **NOTICE**

Potential risks of damage. Could result in damage to the supported product or to other property.

## 1.4 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at [www.rohde-schwarz.com/key-documents](http://www.rohde-schwarz.com/key-documents), e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

## 1.5 Korea certification class A





이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기  
바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.



## 2 Welcome to the R&S SMBV100B

The R&S SMBV100B is a new signal generator developed to meet demanding customer requirements. Offering excellent signal characteristic and straightforward and intuitive operation, the signal generator makes signal generation fast and easy.

### 2.1 Key features

Outstanding key features of the R&S SMBV100B are:

- Frequency range from 8 kHz to 6 GHz
- Up to 1 GHz I/Q modulation bandwidth (in RF) with internal baseband
- Support of all important digital standards such as 5G NR, LTE incl eMTC/NB-IoT, WLAN IEEE 802.11, 3GPP FDD/HSPA/HSPA+
- Excellent signal quality for high accuracy in spectral and modulation measurements
- Intuitive operation via touchscreen with block diagram as key element
- Graphical signal monitoring at practically every point in the signal flow
- SCPI macro recorder and code generator for generating executable remote control code from manual operating steps (for MATLAB®, CVI, etc.)

For more information, see data sheet.

### 2.2 What's new

This manual describes firmware version FW 5.30.047.xx and later of the R&S®SMBV100B.

Compared to the previous version, it provides the new features listed below:

- Telemetry SOQPSK-TG modulation and related settings added for custom digital modulation, see ["Set according to Standard"](#) on page 121 and [Table 4-6](#).
- Time-based triggering, see ["Time Based Trigger"](#) on page 109 and [Chapter 4.4.3, "Time-based triggering"](#), on page 115.
- NRP closed loop power control to achieve a constant input power at the DUT in real time, see [Chapter 7.12.4.3, "NRP power control"](#), on page 419.
- Delayed internal adjustment settings to start the internal adjustments at a specified time and automatic shut-down of the instrument when completed, see [Chapter 16.3.4.2, "Delayed adjustment settings"](#), on page 1099.
- HUMS settings: SNMP communication extended by version SNMPv3 that also supports SNMP user-defined profiles, see [Chapter 12.5.8, "HUMS enhanced settings"](#), on page 644.
- Test function to check the display screen added, see [Chapter 16.3.3, "Check display screen"](#), on page 1096.



- Glossary for publications and references added.

## 2.3 Documentation overview

This section provides an overview of the R&S SMBV100B user documentation. Unless specified otherwise, you find the documents at:

[www.rohde-schwarz.com/manual/smbv100b](http://www.rohde-schwarz.com/manual/smbv100b)

### 2.3.1 Getting started manual

Introduces the R&S SMBV100B and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

### 2.3.2 User manuals and help

Separate manuals for the base unit and the software options are provided for download:

- Base unit manual  
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Software option manual  
Contains the description of the specific functions of an option. Basic information on operating the R&S SMBV100B is not included.

The contents of the user manuals are available as help in the R&S SMBV100B. The help offers quick, context-sensitive access to the complete information for the base unit and the software options.

All user manuals are also available for download or for immediate display on the Internet.

### 2.3.3 Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>



### 2.3.4 Instrument security procedures

Deals with security issues when working with the R&S SMBV100B in secure areas. It is available for download on the internet.

### 2.3.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

### 2.3.6 Data sheets and brochures

The data sheet contains the technical specifications of the R&S SMBV100B. It also lists the options and their order numbers and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/smbv100b](http://www.rohde-schwarz.com/brochure-datasheet/smbv100b)

### 2.3.7 Release notes and open source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The software makes use of several valuable open source software packages. An open-source acknowledgment document provides verbatim license texts of the used open source software.

See [www.rohde-schwarz.com/firmware/smbv100b](http://www.rohde-schwarz.com/firmware/smbv100b)

### 2.3.8 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See [www.rohde-schwarz.com/application/smbv100b](http://www.rohde-schwarz.com/application/smbv100b)

### 2.3.9 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>





On the menu bar, search for your product to find related videos.

HOME VIDEOS SHORTS PLAYLISTS COMMUNITY CHANNELS ABOUT



**Figure 2-1: Product search on YouTube**



## 3 Getting started

### 3.1 Preparing for use

Here, you can find basic information about setting up the product for the first time.

#### 3.1.1 Lifting and carrying

Use the handles at the side, for lifting and carrying the R&S SMBV100B, see ["Lifting and carrying the product"](#) on page 18. Use the handles at the front, for mounting the R&S SMBV100B in a rack.

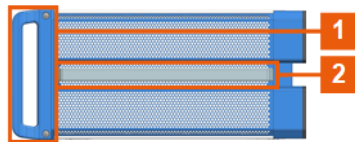


Figure 3-1: Instrument side view with front handles (1) and side handles (2)

#### 3.1.2 Unpacking and checking

1. Unpack the R&S SMBV100B carefully.
2. Retain the original packing material. Use it to protect the control elements and connectors when transporting or shipping the R&S SMBV100B later.  
See also [Chapter 15, "Transporting"](#), on page 1089.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

#### 3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the data sheet.

For safety information, see ["Choosing the operating site"](#) on page 18.



### Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the data sheet.

- Class B equipment is suitable for use in:
  - Residential environments
  - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

### 3.1.4 Setting up the R&S SMBV100B

See also:

- ["Setting up the product"](#) on page 18
- ["Intended use"](#) on page 17

#### 3.1.4.1 Placing the R&S SMBV100B on a bench top

##### To place the product on a bench top

1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the data sheet.
2. **CAUTION!** Foldable feet can collapse. For safety information, see ["Setting up the product"](#) on page 18.


Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.

3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack.

Stack as follows:

- If the products have foldable feet, fold them in completely.
- It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
- Do not exceed the permissible total load placed on the product at the bottom of the stack:
  - 50 kg when stacking products of identical dimensions (left figure).
  - 25 kg when stacking smaller products on top (middle figure).



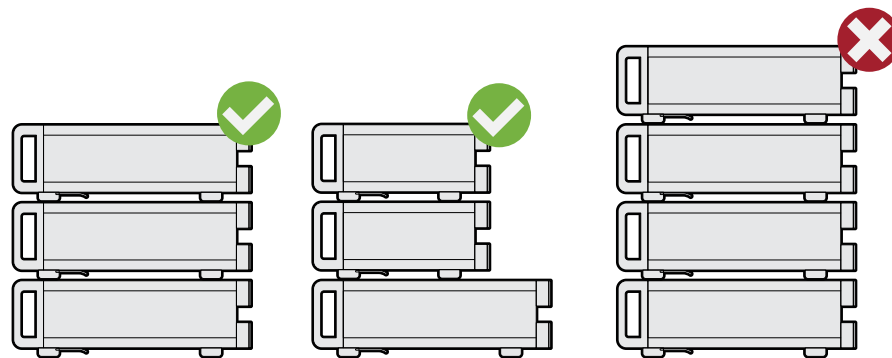

Left = Stacked correctly, same dimensions  
 Middle = Stacked correctly, different dimensions  
 Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
- Do not place the product next to heat-generating equipment such as radiators or other products.

#### 3.1.4.2 Mounting the R&S SMBV100B in a rack

##### To prepare the rack

1. Observe the requirements and instructions in "[Setting up the product](#)" on page 18.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.  
Design and implement an efficient ventilation concept for the rack.

##### To mount the R&S SMBV100B in a rack

1. Use an adapter kit that fits the dimensions of the R&S SMBV100B to prepare the instrument for rack mounting.
  - a) Order the rack adapter kit designed for the R&S SMBV100B. For the order number, see the data sheet.
  - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the R&S SMBV100B to shelf height.
3. Grab the handles at the front.
4. Push the R&S SMBV100B onto the shelf until the rack brackets fit closely to the rack.
5. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the R&S SMBV100B in the rack.



**To unmount the R&S SMBV100B from a rack**

1. Loosen the screws at the rack brackets.
2. Bring the lifting equipment to shelf height.
3. Remove the R&S SMBV100B from the rack.
4. If placing the R&S SMBV100B on a bench top again, unmount the adapter kit from the R&S SMBV100B. Follow the instructions provided with the adapter kit.

### 3.1.5 Considerations for test setup

**Cable selection and electromagnetic interference (EMI)**

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, especially for the following connector types:
  - BNC  
Double-shielded BNC cables.  
How to: ["To connect to pluggable connectors"](#) on page 33
  - SMA  
Double-shielded SMA cables.  
How to: ["To connect to screwable connectors"](#) on page 32
  - USB  
Double-shielded USB cables.  
How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 31.
  - LAN  
At least CAT6 STP cables.  
How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 30
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.
- Use cables of the same type and equal length for connection to the I/Q and I/Q Bar interfaces of the instrument.
- Use the cable R&S SMU-Z6 for connection to the Dig I/Q interfaces of the instrument. The cable is available under order number 1415.0201.02.
- Use the cable R&S DIGIQ-HS for connection to the HS Dig I/Q interfaces of the instrument. The cable is available under order number 3641.2948.03.  
How to: [Chapter 3.1.13, "Connecting to HS Dig I/Q"](#), on page 34

**Signal input and output levels**

Information on signal levels is provided in the data sheet. Keep the signal levels within the specified ranges to avoid damage to the R&S SMBV100B and connected devices.

**Preventing electrostatic discharge (ESD)**

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.



- **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

### 3.1.6 Connecting to power

For safety information, see ["Connecting to power"](#) on page 18.

1. Plug the AC power cable into the AC power connector on the rear panel. Only use the AC power cable delivered with the R&S SMBV100B.
2. Plug the AC power cable into a power outlet with ground contact.

The required ratings are listed next to the AC power connector and in the data sheet.

### 3.1.7 Connecting to LAN

#### Network environment

Before connecting the product to a local area network (LAN), consider the following:


- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

#### To connect to LAN

- Connect the LAN socket on the rear panel via an RJ-45 cable to the LAN.

Using DHCP (dynamic host configuration protocol), the R&S SMBV100B assigns the IP address automatically.

If connected to the LAN, the R&S SMBV100B displays the IP address at the left bottom of the block diagram.



10.100.10.10 inst-123456

1 = IP address  
2 = Hostname



If disconnected from the LAN, the R&S SMBV100B displays the IP address *0.0.0.0*.

See also [Chapter 12.7, "To configure the instrument for remote access"](#), on page 661.

### 3.1.8 Connecting USB devices

You can connect or disconnect all USB devices from the R&S SMBV100B during operation.

#### To connect USB storage devices

USB storage devices, such as memory sticks, allow data transfer from or to the R&S SMBV100B. You can also use them for firmware updates.

- ▶ Connect the USB storage device to the USB type A connector on the front panel. Connect the device directly, without connecting cable. Connecting cables can cause electromagnetic radiation and impair a measurement result.

#### To connect USB devices with external power supply

1. **NOTICE!** Connected devices with external power supply can feed back current into the 5 V power supply of the USB interface and thus damage the R&S SMBV100B. Ensure that there is no connection between the positive pole of the power supply and the +5 V power pin of the USB interface (VBUS).
2. Connect the USB storage device to the USB connector on the rear panel.

#### To connect a keyboard

- ▶ Connect the keyboard to the USB connector on the rear panel.

When connected, the R&S SMBV100B detects the keyboard automatically. A detected keyboard has the default layout English – US.

#### To connect a mouse

- ▶ Connect the mouse to the USB connector on the rear panel.

When connected, the R&S SMBV100B detects the mouse automatically.

#### To connect power sensors

Connect power sensors of the R&S NRP families to the USB connector on the rear panel.

See [Chapter 7.12.4, "Using power sensors"](#), on page 415.



### 3.1.9 Connecting to RF coaxial connectors

Here, you find information on how to prepare and to connect to RF coaxial connectors of the R&S SMBV100B. Use these RF connectors, for example, for output of the RF signal or for input of an external reference signal.

#### To prepare for connecting

1. **NOTICE!** Damaged or not clean connections can lead to RF insertion loss and mismatch, and even premature wear of the connectors.  
Before connecting to the port, inspect the RF connector visually. Check that it is clean, undamaged and mechanically compatible.
2. **NOTICE!** DC voltage at the RF connector can damage the instrument. Never apply DC voltage to the RF input connectors.  
Make sure that the values are within the DC limits given in the data sheet.
3. If your test setup has a DC component at the RF input, insert a DC blocker.
4. Use a high-quality RF cable that matches the RF connector type.  
See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 29.
5. You can connect to two kinds of connectors:
  - ["To connect to screwable connectors"](#) on page 32
  - ["To connect to pluggable connectors"](#) on page 33

#### To connect to screwable connectors

The R&S SMBV100B provides screwable RF connectors as in [Table 3-1](#).

- **NOTICE!** Excessive tightening can damage the connectors.

To connect the cable with the connector, proceed as follows:

- a) Carefully align the connector of the cable and the connector along a common axis.
- b) Mate the connectors along the common axis until the male pin of the inner connector engages with the female socket of the outer connector.
- c) Turn the nut of the outer connector until the connectors are firmly coupled.
- d) Using a calibrated torque wrench torque the nut to the limit as in the table below. Hold the opposite connector part stationary with a spanner.

**Table 3-1: Connector name, type, size, torque limit and nut opening**

Connector		Torque limit		Nut opening	
Type	Name	lb-Inch	Nm	Inch	mm
N	RF	13.3	1.5	3/4	20
SMA	LO In LO Out Ref In 1 GHz Ref Out 1 GHz	5	0.56	5/16	8



**To connect to pluggable connectors**

The R&S SMBV100B provides pluggable Bayonet Neill-Concelman (BNC) connectors.

- ▶ To connect the RF cable with the BNC connector, proceed as follows:
  - a) Carefully align the connector of the cable and the BNC connector along a common axis.
  - b) Mate the connectors along the common axis until the male pin of the connector of the cable engages with the female socket of the BNC connector.

For information on how to handle and maintain the RF port, to minimize measurement deviations and ensure its longevity, see the application note [1MA99](#).

If you want to mount test port adapters to your RF connector, see the application note [1MA100](#).

**3.1.10 Connecting to RF****To connect to "RF"**

1. Before connecting to the "RF" connector on the front panel, proceed as follows:
  - a) Prepare the "RF" connector. See ["To prepare for connecting"](#) on page 32.
  - b) If activated, deactivate the RF output. In the block diagram, select the block "RF" > "RF Level" > "RF On > Off".

If equipped with an option for rear panel connectors, prepare the "RF" connector on the rear panel.

2. Connect to the "RF" connector. See ["To connect to screwable connectors"](#) on page 32.

**To prevent RF output switch-off**

- ▶ **NOTICE!** If you set a too high output level without a load connected to the instrument, the reverse power can exceed a limit forcing the R&S SMBV100B to switch off the RF output.

Connect a load with sufficient return loss as given in the data sheet.

**3.1.11 Connecting to LO In/Out**

1. Before connecting, prepare the "LO In/Out" connectors on the rear panel. See ["To prepare for connecting"](#) on page 32.
2. Connect to the "LO In/Out" connectors. See ["To connect to screwable connectors"](#) on page 32.

See also [Chapter 7.9, "Local oscillator coupling"](#), on page 316.



### 3.1.12 Connecting to Ref In/Ref Out


#### To connect to "Ref In"/"Ref Out"

For connection, the R&S SMBV100B provides BNC connectors (reference signal frequency  $f_{\text{ref}} < 1$  GHz) or SMA connectors ( $f_{\text{ref}} = 1$  GHz).

1. Before connecting, prepare the Ref In/Ref Out connectors on the rear panel. See ["To prepare for connecting"](#) on page 32.
2. Connect to the "Ref In"/"Ref Out" connectors:
  - $f_{\text{ref}} < 1$  GHz: ["To connect to pluggable connectors"](#) on page 33
  - $f_{\text{ref}} = 1$  GHz: ["To connect to screwable connectors"](#) on page 32

### 3.1.13 Connecting to HS Dig I/Q

The HS Dig I/Q connector comprises a QSFP+ (Quad Small Form-factor Pluggable) socket that has two components: a QSFP+ cage and a QSFP+ connector. The QSFP+ cable is equipped with the QSFP+ plug.

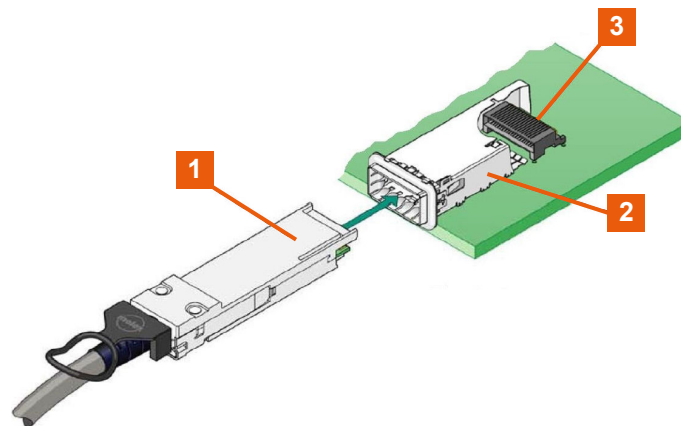

- 1 = QSFP+ plug  
 2 = QSFP+ cage  
 3 = QSFP+ connector

#### To connect to HS Dig I/Q interface

1. For connection, use the QSFP+ cable R&S DIGIQ-HS.  
 See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 29.
2. Hold the QSFP+ plug of the cable by its panes.
3. Turn the QSFP+ cable, so that the release tab shows upwards.
4. Insert and push the QSFP+ plug into the QSFP+ cage.



**To disconnect from HS Dig I/Q interface**

1. **NOTICE!** If you pull the cable, you can damage the cable and the HS Dig I/Q connector.  
Pull the release tab.
2. Pull the QSFP+ plug out of the QSFP+ cage.

See also:

- [Chapter 9.6, "Digital baseband input settings"](#), on page 486.
- [Chapter 9.7, "I/Q digital output settings"](#), on page 494.

**3.1.14 Switching on or off**

The following table provides an overview of power states, LEDs and positions of the power switch.

**Table 3-2: Overview of power states**

State	LED	Position of power switch
Off	● gray	[0]
Standby	● orange	[I]
Ready	● green	[I]

**To switch on the R&S SMBV100B**

The R&S SMBV100B is off but connected to power. See [Chapter 3.1.6, "Connecting to power"](#), on page 30.

1. Set the switch on the power supply to position [I] on the rear panel.  
The LED of the [On/Standby] key on the front panel is orange.
2. Wait until the oven-controlled oscillator (OCXO) warms up. For the warm-up time, see the data sheet.
3. Press the [On/Standby] key on the front panel.  
The LED changes to green. The R&S SMBV100B boots.  
After booting, the R&S SMBV100B starts up displaying the block diagram on the screen on the front panel.

**To check start-up functions**

When starting for the first time, the R&S SMBV100B starts with the default settings. When restarting, the R&S SMBV100B recalls the instrument configuration before shut-down.

See [Chapter 10.4, "Saving and recalling instrument settings"](#), on page 518.



When switched on, the R&S SMW automatically monitors main functions. You can query erroneous functions. In addition to automatic monitoring, you can perform maintenance tasks. See the following:

- [Chapter 14.4, "Querying notifications"](#), on page 1077
- [Chapter 16.3, "Performing maintenance tasks"](#), on page 1090

### To shut down the product

The product is in the ready state.

- ▶ Press the [On/Standby] key.

The operating system shuts down. The LED changes to orange.

In the standby state, the power switch circuits and the OCXO are active. To deactivate them, disconnect the instrument from the power supply.

### To disconnect from power

The R&S SMBV100B is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

Set the toggle switch on the power supply to position [0].

The LED of the [On/Standby] key is switched off.

2. Disconnect the R&S SMBV100B from the power source.

## 3.2 Instrument tour

This chapter explains the control elements and the connectors of the R&S SMBV100B. The views of the front panel and the rear panel help you to get familiar with the instrument and to perform first steps. For specifications of the interfaces, see the data sheet.

The meanings of the labels on the R&S SMBV100B are described in [Chapter 1.2, "Labels on R&S SMBV100B"](#), on page 19.

### 3.2.1 Front panel tour

This section provides an overview of the control elements and connectors on the front panel of the R&S SMBV100B. On the [rear panel](#), you find all further connectors.



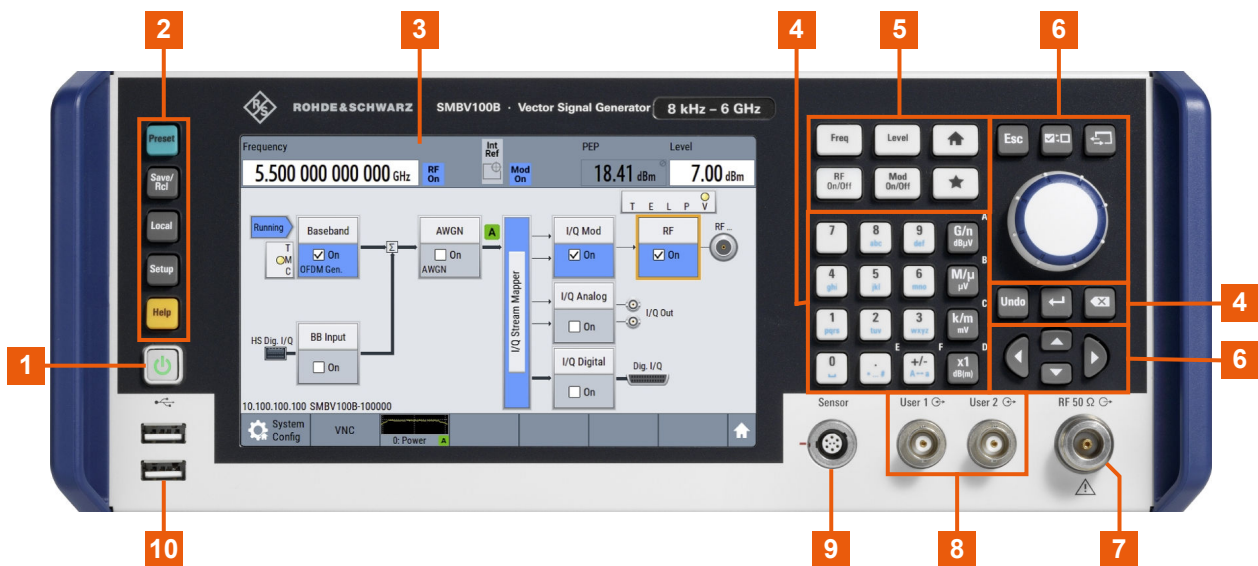



Figure 3-2: R&S SMBV100B front panel controls and connectors

- 1 = On/Standby
- 2 = Utility keys
- 3 = Touchscreen
- 4 = Keypad
- 5 = Function keys
- 6 = Navigation controls
- 7 = RF
- 8 = User x
- 9 = Sensor
- 10 = USB

### 3.2.1.1 Touchscreen

The block diagram and the most important settings are displayed on the screen on the front panel. Also, the screen display provides status and setting information and allows you to quickly reconfigure the signal flow. The screen is touch-sensitive, offering an alternative means of user interaction for quick and easy handling of the instrument.



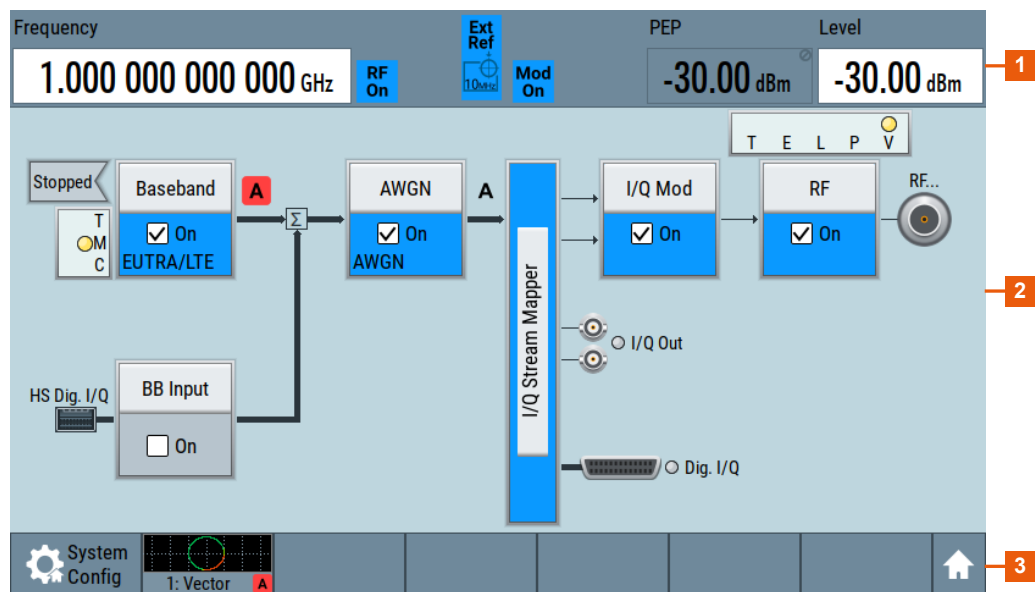

**Figure 3-3: Touchscreen elements**

- 1 = Status bar (frequency and level display)
- 2 = Block diagram
- 3 = Taskbar/softkey bar

A touchscreen is a screen that is touch-sensitive. It reacts in a specified way when a particular element on the screen is tapped by a finger. Any user interface element that can be clicked by a mouse pointer can also be tapped on the screen to trigger the same behavior.

Using the touchscreen, the following tasks (among others) can be performed by the tap of your finger:

- Changing a setting
- Selecting new settings
- Scrolling through the list of parameters
- Saving or recalling settings
- Opening and closing dialogs

See also:

- [Chapter 3.5, "Instrument control"](#), on page 68, for operating the touchscreen.
- [Chapter 16.1, "Cleaning"](#), on page 1090, for instructions on cleaning the screen.

### 3.2.1.2 Keys

#### Utility keys

The utility keys cause the R&S SMBV100B to return to a defined instrument state and provide information on the instrument and assistance.



For more information, refer to [Chapter 11, "General instrument functions"](#), on page 547.

**Table 3-3: Utility keys**

Utility key	Assigned functions
[Preset]	Sets the instrument to a defined state
[Save/Rcl]	Saves and loads instrument setting Accesses the file manager
[Local]	Switches from remote control to local (manual) control
[Setup]	Accesses the general instrument settings
[Help]	Displays context-sensitive help text

### On/Standby

The [On/Standby] key switches the instrument from the standby to the ready state or vice versa.

The LED above the [On/Standby] key indicates the instrument state, see [Chapter 3.1.14, "Switching on or off"](#), on page 35.

### Function keys

Function keys provide access to most common generator settings and functions.

A detailed description of the corresponding functions is provided in the user manual.

**Table 3-4: Function keys**

Function key	Assigned functions
[Freq]	Activates frequency entry.
[Level]	Activates level entry.
[Home]	Brings the block diagram to the foreground. Active dialogs are minimized.
[RF on/off]	Switches the RF output on and off. Press the key again to restore the last active status. Status is displayed in the "Status bar".
[Mod on/off]	Switches the modulations on and off. Press the key again to restore the last active status. Status is displayed in the "Status bar".
[★ (User)]	Key with a customizable function.

### Keypad

The keypad is used to enter alphanumeric parameters, including the corresponding units. It contains the following keys:



**Table 3-5: Keys on the keypad**

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. For an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (G/n dBμV, M/μ μV, k/m mV and x1 dB(m))	These keys add the selected unit to the entered numeric value and complete the entry.  For level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [Enter] key.

### Editing keys

Editing keys enable you to confirm an entry, delete individual characters, or exit the current operation.

**Table 3-6: Editing keys**

Type of key	Description
[Esc] key	Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. Equals selecting the "Cancel" button in dialogs, if provided. For "Edit" dialog boxes, the following applies: <ul style="list-style-type: none"> <li>• If data entry has been started, it retains the original value and closes the dialog box.</li> <li>• If data entry has not been started or has been completed, it closes the dialog box.</li> </ul>
[Enter] key	Has the same effect as pressing the rotary knob <ul style="list-style-type: none"> <li>• Concludes the entry of dimensionless entries. The new value is accepted.</li> <li>• With other entries, this key can be used instead of the default unit key.</li> <li>• In a dialog box, selects the default or focused element.</li> <li>• Calls the next dialog level.</li> <li>• Confirms and closes open input windows.</li> </ul>
[Backspace] key	Deletes the character to the left of the cursor in editing mode.

### Navigation controls

The navigation controls include a rotary knob, navigation keys, and the display keys. They allow you to navigate within the display or within dialog boxes.

#### Rotary knob

The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counterclockwise direction) numeric instrument parameters at a defined step width.
- Moves the selection, e.g. to a function block in the block diagram
- Shifts the selection bar within focused areas (e.g. lists).
- Acts like the [Enter] key, when it is pressed.



- Opens a context-sensitive menu, when it is pressed and held.

### Navigation keys

The navigation keys can be used alternatively to the rotary knob to navigate through dialog boxes, diagrams, or tables.

**Table 3-7: Navigation keys**

Type of key	Description
[Up/Down] key	<p>The [Up] and the [Down] key does the following:</p> <ul style="list-style-type: none"> <li>• In a numeric edit dialog box, increase or decrease the instrument parameter.</li> <li>• In a list, scroll forward and backward through the list entries.</li> <li>• In a table, move the selection bar vertically.</li> <li>• In windows or dialog boxes with vertical scrollbar, move the scrollbar.</li> </ul>
[Left/Right] key	<p>The [Left] and the [Right] key does the following:</p> <ul style="list-style-type: none"> <li>• In an alphanumeric edit dialog box, move the cursor.</li> <li>• In a list, scroll forward and backward through the list entries.</li> <li>• In a table, move the selection bar horizontally.</li> <li>• In windows or dialog boxes with horizontal scrollbar, move the scrollbar.</li> </ul>

### Display keys

The display keys arrange different windows on the display.

**Table 3-8: Display keys**

Display key	Assigned functions
[Next window]	Toggles between the active dialogs
[Home]	Shows the block diagram.
[Next window]	Toggles between the open dialogs.
[On/Off Toggle]	<ul style="list-style-type: none"> <li>• Switches highlighted elements or a function block on and off.</li> <li>• Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.</li> </ul>
[Undo]	Reverts the last operation.
[★ (User)]	Key with a customizable function.

#### 3.2.1.3 Connectors

The RF connector and various others interface connectors are on the front panel.

##### RF

N-type female connector for output of the RF signal.

How to: [Chapter 3.1.10, "Connecting to RF"](#), on page 33

##### User x

BNC multipurpose connectors for defining input signals and output signals.






The [Table 3-9](#) lists the signals assigned to the User x connectors in the default instrument state.

**Table 3-9: Default configuration of the User x connectors**

User connector	Direction	Default assigned signal
1	Output	"Baseband Marker 1"
2	Output	"Baseband Marker 2"

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

### Sensor

Connector for R&S NRP sensors.

A power sensor is connected to the R&S SMBV100B by inserting the male connector. To disconnect, pull the connector by its sleeve. You cannot disconnect the sensor simply by pulling at the cable or the rear part of the connector.

The R&S SMBV100B supports the use of R&S NRP power sensors in various ways including the use as a power viewer.

See also:

- [Chapter 7.12.4, "Using power sensors"](#), on page 415
- [Chapter 7.12.3, "User correction"](#), on page 402

### USB

Two female USB (universal serial bus) 2.0 connectors of type A (host USB). These connectors are intended for service and file transfer purposes only. You can connect, for example, a USB memory stick.

Further USB connectors of type A (host USB) and type B (USB In) are available on the rear panel.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 31.

## 3.2.2 Rear panel tour

This section provides an overview of the connectors on the rear panel of the instrument. For technical data of the connectors, refer to the data sheet.



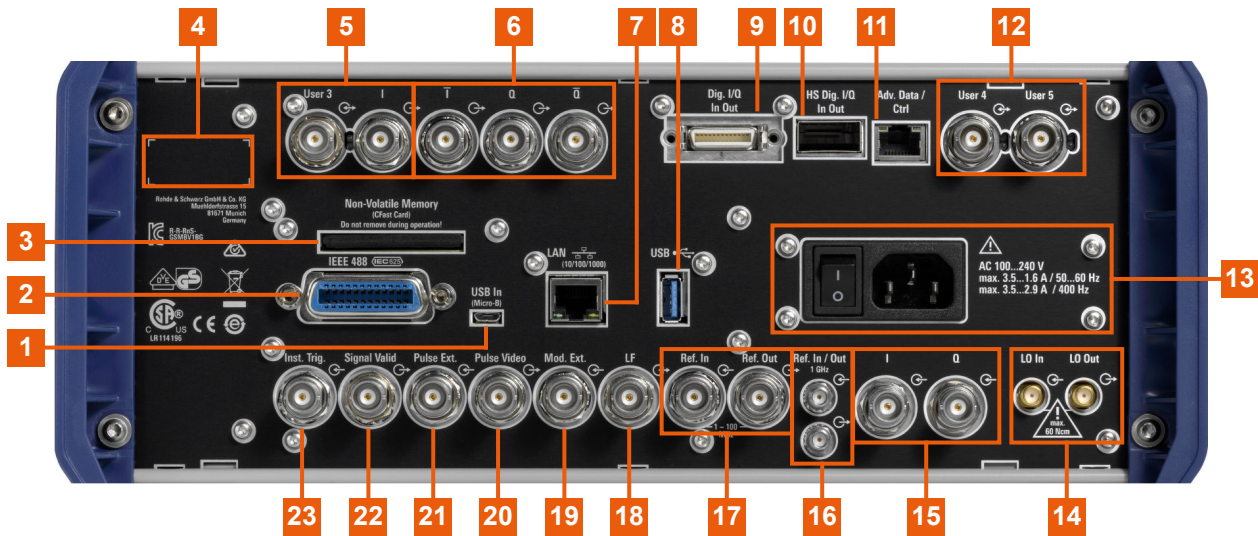


Figure 3-4: Rear panel

- 1, 8 = USB/USB In
- 2 = IEC 625/IEEE 488
- 3 = Non-Volatile Memory
- 4 = Serial number (six digits in the string 1423.1003.02-<serial number>-<checksum>)
- 5, 12 = User x
- 6 = I/Q, I/Q Bar
- 7 = LAN
- 9 = Dig I/Q
- 10 = HS Dig I/Q
- 11 = Adv Data/Ctrl
- 13 = AC power supply connector and switch
- 14 = LO In/LO Out
- 15 = I/Q
- 16, 17 = Ref In/Ref Out
- 18 = LF
- 19 = Mod Ext
- 20 = Pulse Video
- 21 = Pulse Ext
- 22 = Signal Valid
- 23 = Inst Trig

### 3.2.2.1 Connectors

#### USB/USB In

- Female USB (universal serial bus) 2.0 connector of type A (host USB), to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors
- Female USB 3.0 connector of type Micro-B (USB In), for example, for remote control.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 31



**IEC 625/IEEE 488**

General purpose interface bus (GPIB) interface for remote control of the instrument. The interface is in compliance with the standards IEC 625, IEEE 488 and SCPI.

Use this interface to connect a computer for remote control of the R&S SMBV100B. To set up the connection, use high-quality shielded cables. See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 29.

See also [Chapter B.1, "GPIB-Bus interface"](#), on page 1117 and [Chapter 12, "Network operation and remote control"](#), on page 612.

**Non-Volatile Memory**

Option: R&S SMBVB-B80

Slot for removable mass storage.

**User x**




BNC multipurpose connectors for defining input signals and output signals.

[Table 3-10](#) lists the signals assigned to the User x connectors in the default instrument state.

*Table 3-10: Default configuration of the User x connectors*

Connector	Direction	Default assigned signal
"User 3"	"Input"	"Global Trigger"
"User 4"	"Input"	"Global Next Segment"
"User 5"	"Output"	"Baseband Sync Out"

A dedicated LED indicates the connector status:

-  green: an input connector
-  yellow: an output connector
-  no light / gray: the connector is not active

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

**I/Q, I/Q Bar**

BNC connector for output of direct (single-ended) or differential analog I/Q signals.

Use the connectors for connections as follows:

- I/Q connectors: Direct (single-ended) or positive differential output of analog I/Q signals
- I/Q Bar connectors: Negative differential output of analog I/Q signals

**LAN**

RJ-45 connector to connect the R&S SMBV100B to a LAN for remote control, remote operation, and data transfer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 30

**Dig I/Q**

Option: R&S SMBVB-K19 for output.

Connectors for the input of a digital I/Q signal from a Rohde & Schwarz instrument, like a signal generator.



**HS Dig I/Q**

Option: R&S SMBVB-K19 for output.

Connectors for the input of high-speed digital I/Q signals, for example, from Rohde & Schwarz instruments.

For more information, see data sheet.

The interface is a QSFP+ (Quad Small Form-factor Pluggable) module. It supports max. bandwidth of up to 50 Gsample/s with optical active cables.

How to: [Chapter 3.1.13, "Connecting to HS Dig I/Q"](#), on page 34

**Adv Data/Ctrl**

Interface for exchanging of external data and control signals.

**AC power supply connector and switch**

Mains power switch for performing the following tasks:

- Connecting the internal power supply to the power source
- Disconnecting the internal power supply from the power source

How to: [Chapter 3.1.6, "Connecting to power"](#), on page 30.

**LO In/LO Out**

Option: R&S SMBVB-K90

SMA connector for local oscillator input and output for phase-coherent RF signal:

- LO In: Input of phase coherence signal
- LO Out: Output of phase coherence signal

How to: [Chapter 3.1.11, "Connecting to LO In/Out"](#), on page 33

**I/Q**

BNC connector for input of external I/Q signals for analog modulation. The signals are fed directly into the I/Q modulator.

Use the I/Q connector for direct (single-ended) or positive differential input of analog I/Q signals.

See also [Chapter 9.4.2, "Overview of the input and output signals and interfaces"](#), on page 465.

**Ref In/Ref Out**

Input/output for external reference signal.

BNC connectors for reference signals from 1 MHz to 100 MHz.

SMA connectors for 1 GHz reference signals.

How to: [Chapter 3.1.12, "Connecting to Ref In/Ref Out"](#), on page 34

**LF**

BNC connector for output of the internal LF generator signal.

See the data sheet and in the user manual, section [Chapter 7.11, "Analog modulations"](#), on page 359.

**Mod Ext**

BNC connector for input of external analog modulation signals.



See [Chapter 7.11, "Analog modulations"](#), on page 359.

**Pulse Video**

BNC connector for output of the internal pulse generator signal or the looped through pulse signal from Pulse Ext connector (video signal).

See [Chapter 7.11.4.1, "Pulse modulation settings"](#), on page 362.

**Pulse Ext**

BNC connector for input of an external pulse modulation signal or an external trigger/gate signal for the pulse generator.

**Signal Valid**

BNC connector for output of a signal that determines the valid signal times (valid level and frequency) for all analog modulations.

Alternatively, you can use this connector to synchronize pulse signals by activating the "Pulse Sync" in the dialog [Chapter 7.11.4.3, "Pulse generator settings"](#), on page 369.

**Inst Trig**

BNC connector for input of external trigger signals. The signals trigger sweeps and list mode.

See [Chapter 7.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 323.

## 3.3 Trying out the instrument

This chapter introduces the most important functions and settings of the R&S SMBV100B step by step. The complete description of the functionality and its usage is given in the R&S SMBV100B user manual. Basic instrument operation is described in [Chapter 3.5, "Instrument control"](#), on page 68.

**Prerequisites**

- The instrument is set up, connected to the power supply, and started up as described in [Chapter 3.1, "Preparing for use"](#), on page 26.

For the first signal generation tasks, you use the internal baseband and reference signal, so you do not need any additional signal source. More complex signal generation tasks, however, require an instrument equipped with additional options and/or external signals. Each task description lists its prerequisites.



The screenshots in this description show a fully equipped instrument. Consider that, the block diagram displayed on your particular instrument can differ from the one used in the example.

The instrument is manually operated via the touchscreen. Try out the following:




• Generating an unmodulated carrier.....	47
• Generating a digitally modulated signal.....	48
• Triggering the instrument with an external signal.....	50
• Enabling and configuring a marker signal.....	55
• Verifying the generated signal with the graphics display.....	56
• Saving and recalling settings.....	59
• Generating an EUTRA/LTE signal.....	61

### 3.3.1 Generating an unmodulated carrier

We start out by generating a simple unmodulated signal. The R&S SMBV100B in this example can be a base unit in its minimal configuration (i.e. with installed R&S SMBVB-B103).

1. On the R&S SMBV100B front panel, press the Preset key to start out in a defined instrument configuration.
2. Set the frequency:
  - a) On the "Status Bar", tap the "Frequency" field.
  - b) On the on-screen keypad, enter 1.955 and press the "GHz" key.

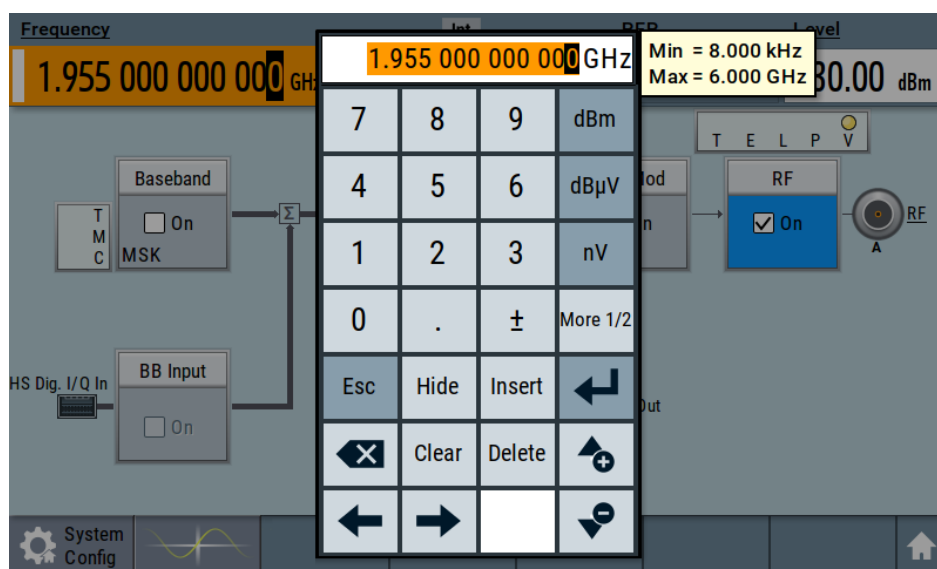

The on-screen keypad closes and the frequency value is displayed.

3. On the "Status Bar", tap the "Level" field and enter the level in the same way.



4. Select "Block Diagram > RF Block > On" to enable the output of the generated unmodulated signal.



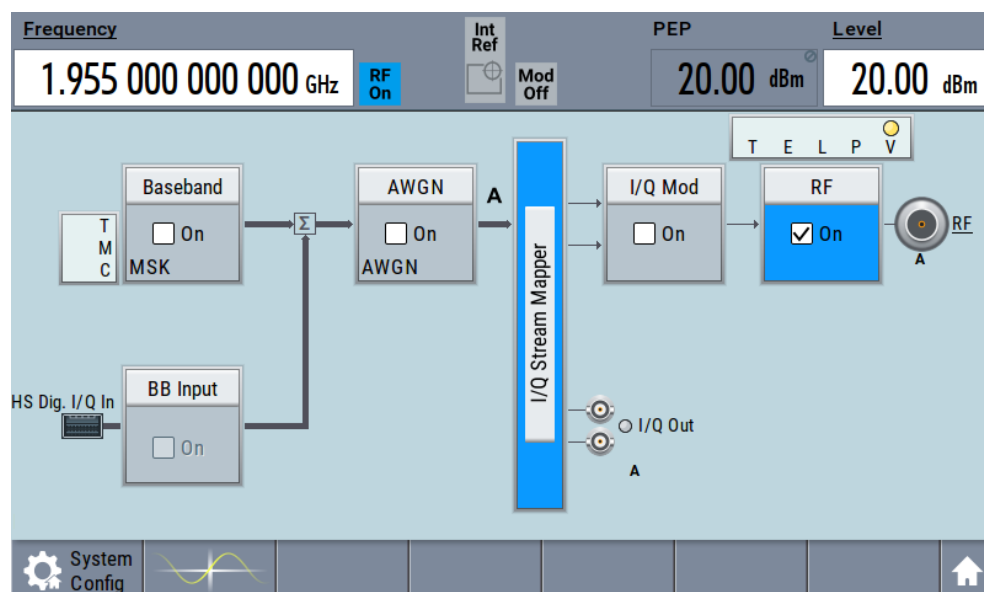


Figure 3-5: Block diagram: Generating an unmodulated signal

The 1.95 GHz signal is output at the RF connector at the front panel of the R&S SMBV100B.



Connect RF of the R&S SMBV100B to a signal analyzer, for example R&S®FSW, to display the generated signal.

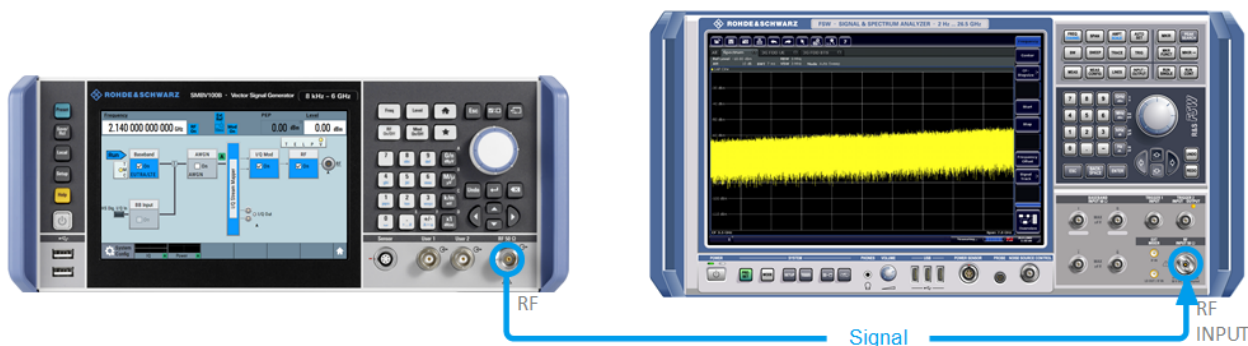


Figure 3-6: Simplified test setup

For the required settings of the signal analyzer, refer to its user manual or its online help.

### 3.3.2 Generating a digitally modulated signal

This example shows you how to generate a simple WCDMA-3GPP (QPSK 45° offset) signal with the help of the "Custom Digital Modulation" functionality.

The minimum requirement for R&S SMBV100B in this example is a base unit equipped with:


- Option custom digital modulation R&S SMBVB-K520



- Option frequency R&S SMBVB-B103.


The initial situation is not the instrument's preset state but rather the configuration described in [Chapter 3.3.1, "Generating an unmodulated carrier"](#), on page 47.

1. In the block diagram, select "Baseband" and navigate to the section "Misc > Custom Digital Mod...".

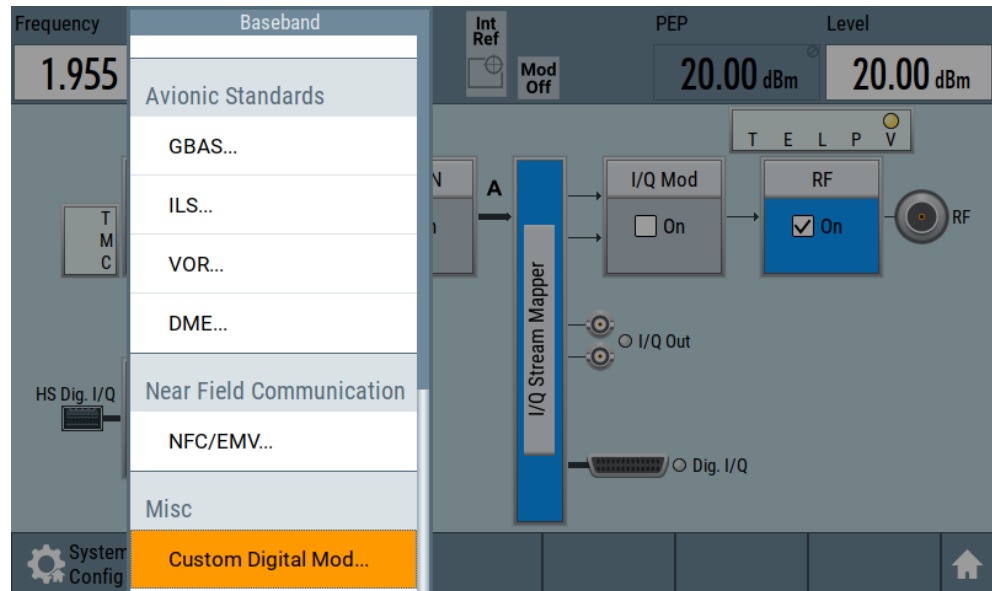

The "Custom Digital Modulation" dialog opens.

2. In the "Custom Digital Modulation" dialog, select "General > Set according to Standard > WCDMA-3GPP".
3. Select "General > State > On" to enable signal generation.

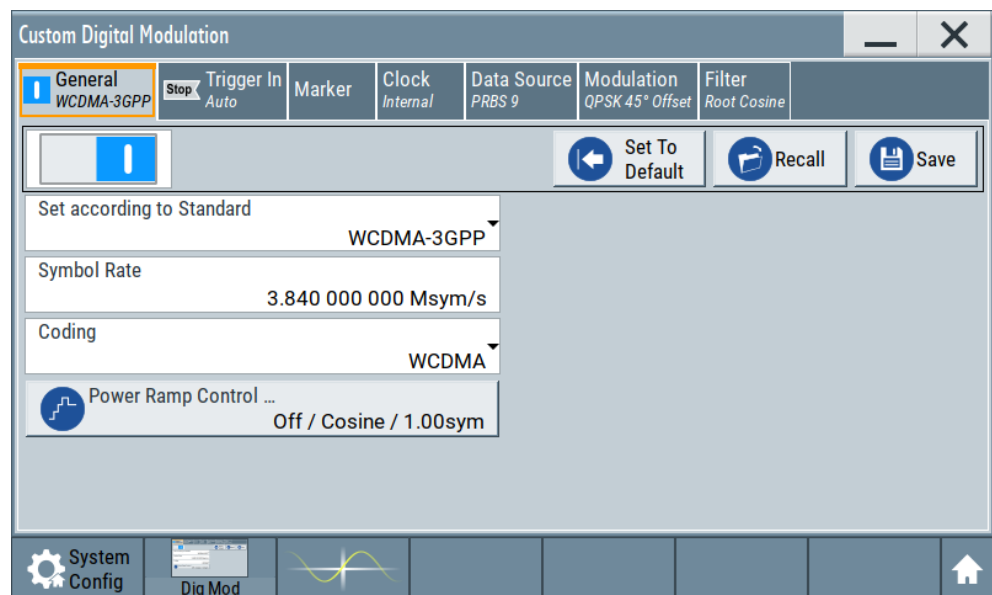



4. Select the "Modulation" tab and observe the used "Modulation Type".

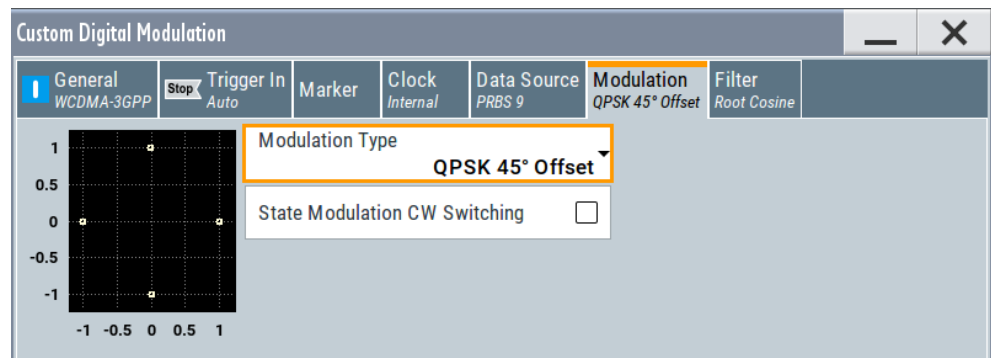


Figure 3-7: Display of the used modulation type

The instrument activates automatically "I/Q Mod", uses the internal trigger and clock signals, and generates a WCDMA-3GPP signal, modulated with a QPSK 45° offset modulation.

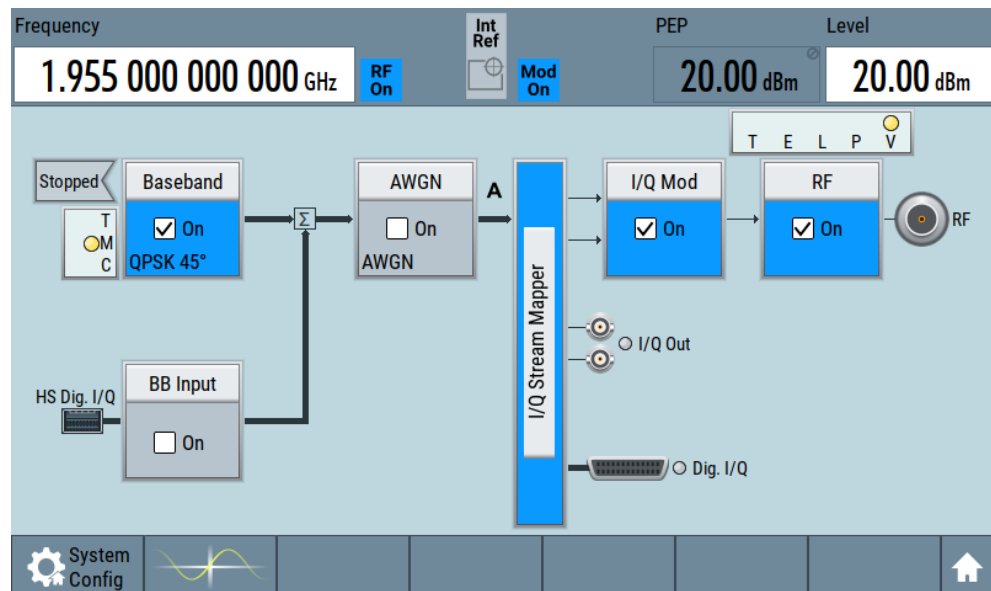


Figure 3-8: Block diagram: Generating a digitally modulated signal

### 3.3.3 Triggering the instrument with an external signal

The example configurations are rather theoretical cases, because you rarely use the R&S SMBV100B as a standalone instrument. Usually, the instrument would be connected to a device under test (DUT) and/or other measurement equipment. As a rule, whenever a test setup requires two or more devices, provide them with a common reference frequency. Some test setups require control of the signal generation start and an exact generation start time, determined by a defined trigger event. For example, by triggering the instrument internally or externally from the DUT.



This example illustrates the general principle of external triggering and extends the configuration performed in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 48 by the configuration of the required trigger signal and connector settings.

This test setup requires one signal analyzer, like the R&S®FSW, as additional equipment.

### To start the signal generation synchronous to an external global trigger signal

The configuration requires three main steps with the following goals:

1. Observe the current connector configuration. Define an input connector for the external global trigger signal.  
See ["To verify the current connector configuration"](#) on page 51
2. Configure the baseband to use this external global trigger signal as trigger source.  
See ["To reconfigure the trigger settings"](#) on page 53
3. Connect the instrument and the external trigger source.  
See ["To connect the instrument and the external trigger source"](#) on page 54

### To verify the current connector configuration


The R&S SMBV100B is equipped with multipurpose bi-directional User connectors. Because the signal direction, input or output, and the signal mapping are configurable, we recommend that you check the current configuration before cabling or further instrument's configurations.

1. To display *an overview* of the current mapping of the logical signals to the connectors, perform one of the following:
  - In the block diagram, select the Trigger/Marker/Clock status LEDs on the left side of the "Baseband" block.




- Select "Baseband > Trigger Marker Clock".



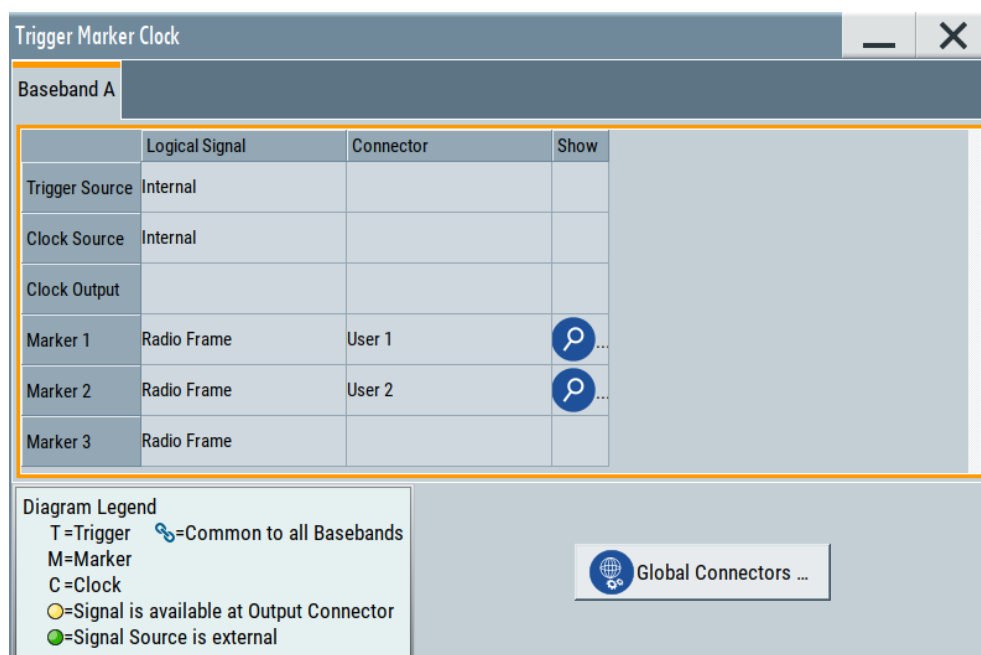

The instrument uses its internal trigger and clock signals, and the default mapping of the marker signals to the connectors.

2. To access the related connector settings, perform one of the following:
  - Select "Global Connector Settings"
  - Tap the connector name, for example select the connector "User 1"

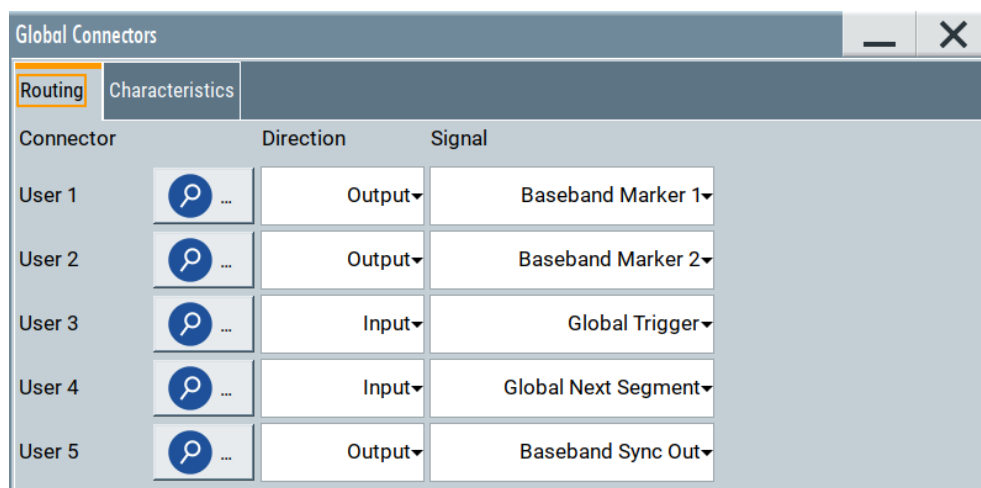

**Figure 3-9: Signal mapping to the global connectors**

The "Global Connectors" dialog displays the current connectors configuration. The settings are configurable, but in this example we use the default mapping.



- Alternatively, select "Block Diagram > Baseband > Misc > Custom Digital Mod", select the "Trigger In" tab and select "Global Connector Settings".

In the current mapping, the two global connectors **User x** on the front panel are configured as follows:

- "Marker 1/2" are output at the User 1/2 connectors
- The User 3 connector is an input for the "Global Trigger" signal.




### Find the physical location of each connector

Use the built-in "Trigger Marker Clock > Show" function to display the location of the selected connector. A blinking marker on the front/rear panel view also indicates the selected connector.

### To reconfigure the trigger settings



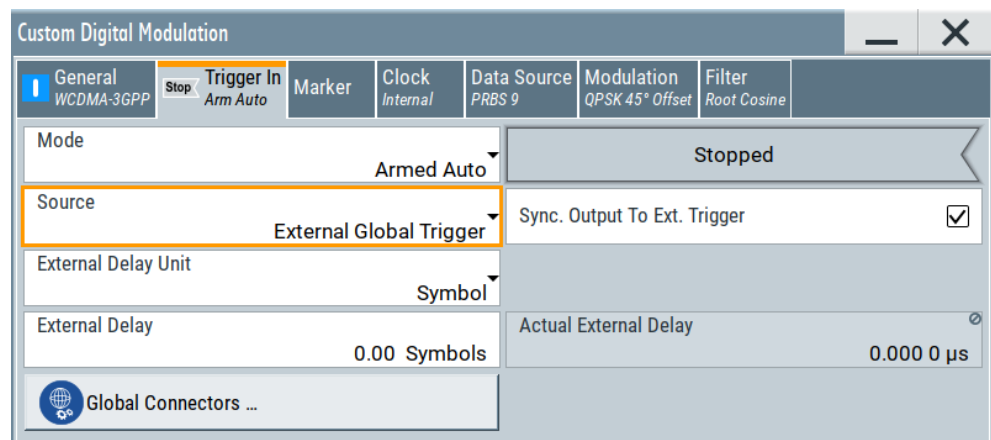


We assume that the instrument is configured as described in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 48 and the default connector mapping is maintained (see [Figure 3-9](#)).

- In the block diagram, select "Baseband > Misc > Custom Digital Mod > Trigger In".
- Select the following settings:
  - "Mode > Armed Auto"
  - "Source > External Global Trigger".




- Select "Global Connector Settings > Routing".
- For "User 2", select "Direction > Input" and "Signal > Global Trigger".



Global Connectors			
Routing		Characteristics	
Connector		Direction	Signal
User 1		Output	Baseband Marker 1
User 2		Input	Global Trigger
User 3		Input	Global Trigger
User 4		Input	Global Next Segment
User 5		Output	Baseband Sync Out


The instrument expects an external global trigger event. In the current configuration, the "Global Trigger" signal has to be supplied at the input connector User 2. The Trigger/Marker/Clock status LEDs in the block diagram confirm that an external trigger signal is selected; the signal generation is however stopped.

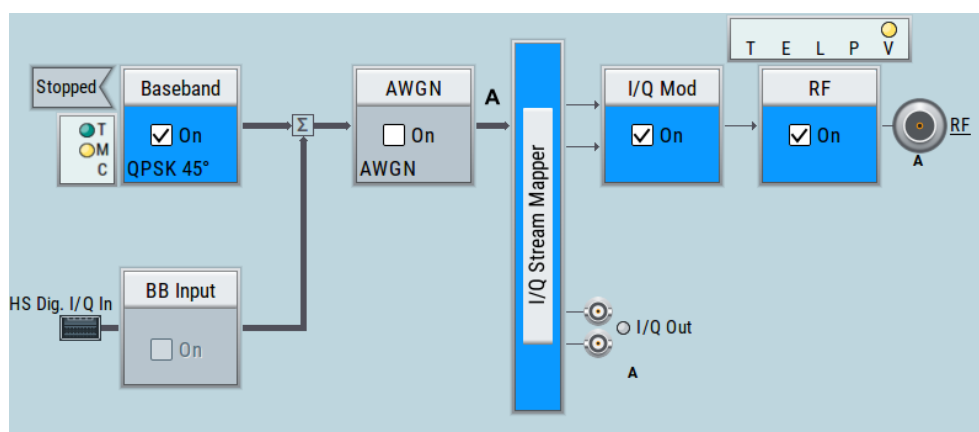

### To connect the instrument and the external trigger source

1. Use a suitable cable to connect the external trigger source to the User 2 connector of the R&S SMBV100B. See [Figure 3-10](#).



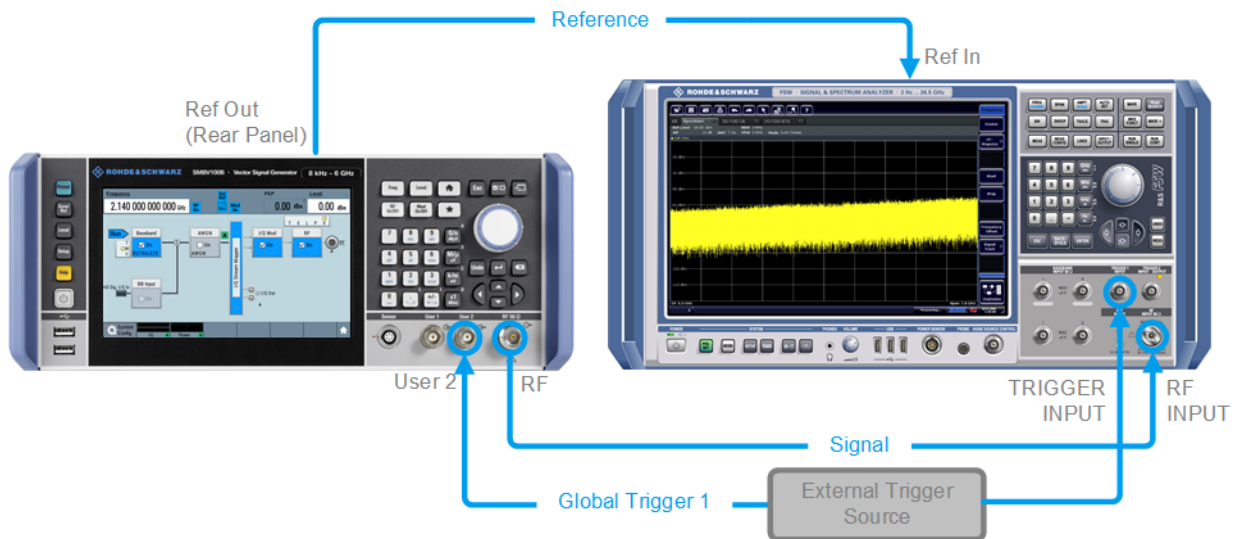

**Figure 3-10: Simplified representation of a test setup\*\***

\*\* = The figure depicts the cabling as a general principle; particular test setups do not require all connections at the same time

The [Figure 3-10](#) depicts the location of the connectors and explains the connection as principle. In practice, you would rather "substitute" the analyzer by a DUT, like a base station (BS). Other than in the example, the DUT can be the source for the reference signal. Instead of using an external trigger source, the DUT can also send, for example, a frame trigger signal to the R&S SMBV100B. The R&S SMBV100B acts still as the signal source.

2. Use suitable cables to connect the [RF](#) and [REF OUT](#) connectors of the R&S SMBV100B to the signal analyzer or the DUT.

Upon the receiving of an external trigger event, the R&S SMBV100B starts the signal generation and then generates a continuous signal. An "Arm" stops the signal generation. A subsequent trigger event causes a restart of the signal generation.



To learn more about this topic, refer to:

- [Chapter 4.4.1.3, "Baseband trigger signals"](#), on page 93
- [Chapter 7.9, "Local oscillator coupling"](#), on page 316

### 3.3.4 Enabling and configuring a marker signal

Test setups often require that an external device is synchronized to the generated data stream. For this purpose, the R&S SMBV100B can output marker signals (or markers) also to the generated signal. The R&S SMBV100B provides several regular marker signals and marker signals specific to the firmware option. With suitable marker settings for instance, you can mark slot or frame boundaries or mark the start of a particular modulation symbol.



This example extends further the configurations performed in [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 48. We assume a default connector mapping (see [Figure 3-9](#)).

This test setup requires one oscilloscope, like the R&S®RTO, as additional equipment.

1. In the block diagram, select "Block Diagram > Baseband > Misc > Custom Digital Mod > Marker" tab.

2. Select "Marker Mode > Marker 1 > Pulse" and "Divider = 32".

Generated is a periodic marker with marker frequency of 120 KHz. The signal is output at the User 1 connector of the R&S SMBV100B (see [Figure 3-9](#)).

3. Use a suitable cable to connect the User 1 connector of the R&S SMBV100B to the monitoring instrument, for example oscilloscope like R&S®RTO. See [Figure 3-11](#).



**Figure 3-11: Simplified representation of a test setup for signal monitoring\*\***

\*\* = The figure depicts the cabling as a general principle

4. Use a suitable cable to connect the **I OUT** connector of the R&S SMBV100B to the monitoring instrument.



To learn more about this topic, refer to [Chapter 4.4.1.2, "Regular marker output signals"](#), on page 91.

### 3.3.5 Verifying the generated signal with the graphics display

It is often useful to check the spectra of the configured signals, before you enable the RF output of the instrument.


The R&S SMBV100B provides a build-in function to represent the generated signal on a graphical signal display. We demonstrate this feature by showing the characteristics at one particular point of the signal processing chain. You can, however, display the signal characteristics at other different stages.




This example shows you how to use this graphical display to verify the generated signal. Use the signal generated in [Chapter 3.3.4, "Enabling and configuring a marker signal"](#), on page 55.

### To access the graphical signal display functionality

- Perform one of the following:
  - a) Select "Taskbar > System Configuration > Graphics"

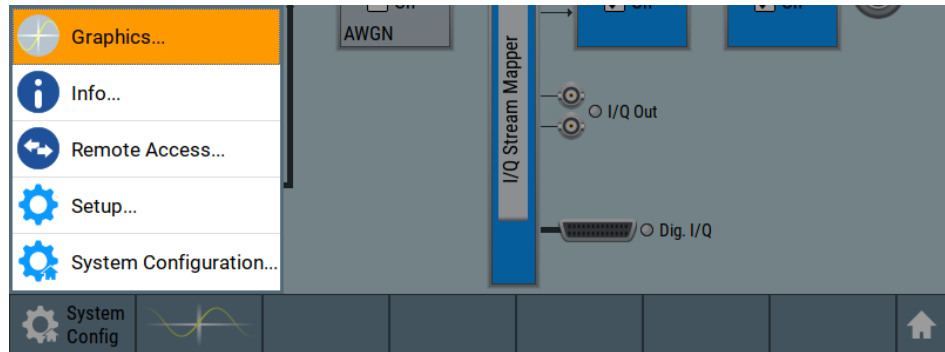


- b) On the "Taskbar", tap the wave icon.

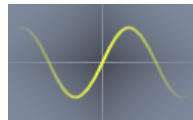

The "Graphics Configuration" dialog opens.


### To visualize the signal

1. In the "Graphics Configuration" dialog, select "Mode > Constellation".
2. Select "Source > Baseband".
3. Select "Add" to enable signal display.

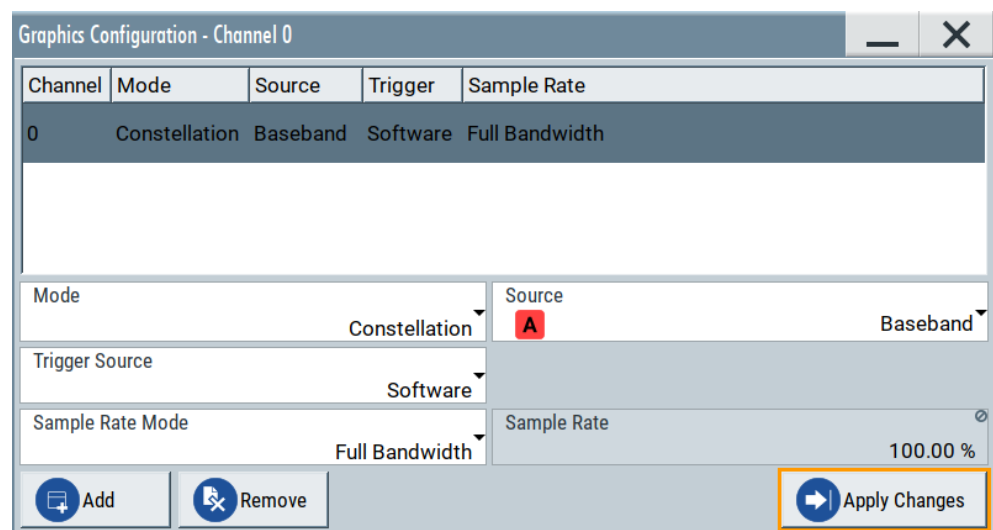




A new thumbnail (minimized view) indicating the active diagram appears in the "Taskbar".



4. Press the thumbnail graphic.

The graphic enlarges and the diagram is displayed in a normal size.

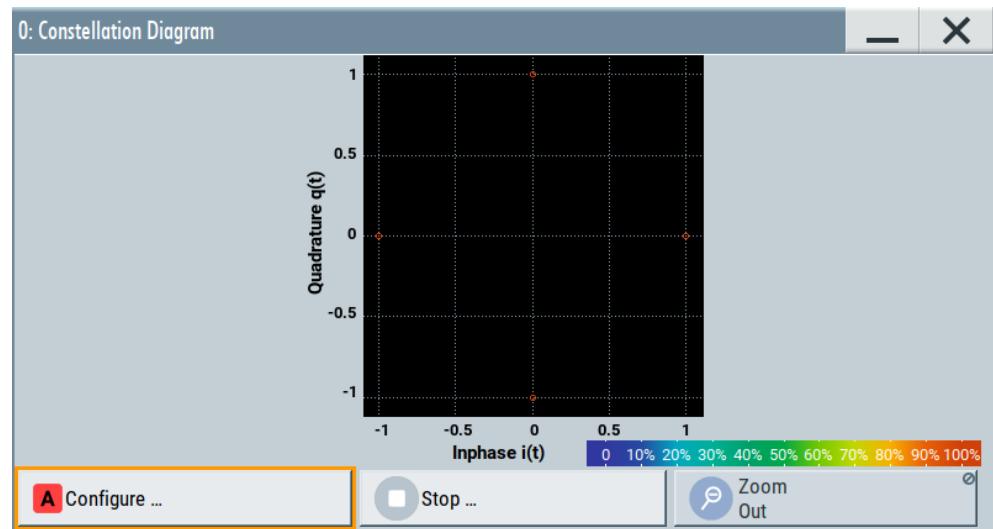


The "Constellation Diagram" displays the 3GPP FDD signal.

5. To retrieve more information, zoom in. In some diagrams you can select "Show Marker" to measure the distance, for example, between two signals.  
In principle, the zoom in function works like the two-finger pinching for magnifying images on your cellphone.
6. In the "Constellation Diagram" dialog, select "Configure" to return to the "Graphics Configuration" dialog.  
Close the "Graphics Configuration" dialog.

This action has no effect on the configured graphics but on the dialog itself.

The block diagram displays the current signal routing. It indicates that frequency and power offsets are enabled and displays the acquisition points for the real-time diagrams minimized in the "Taskbar".



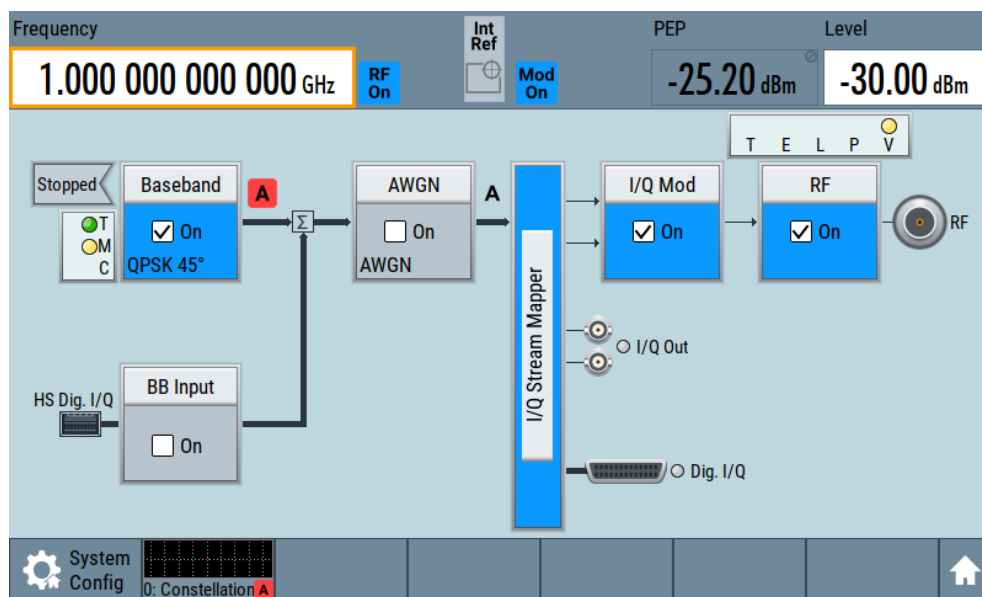

See also [Chapter 8, "Monitoring signal characteristics"](#), on page 436.


### 3.3.6 Saving and recalling settings

To restore the results of our measurements later, we save the instrument settings to a file.

#### To save the instrument settings to a file

We assume, a test configuration as described in [Chapter 3.3.4, "Enabling and configuring a marker signal"](#), on page 55.

1. Press the Save/Rcl key on the front panel.
2. In the "Save/Recall" dialog box, select "Operation Mode > Save".  
Tap the "Filename", use the on-screen keyboard, and enter *MyTestSignal*.

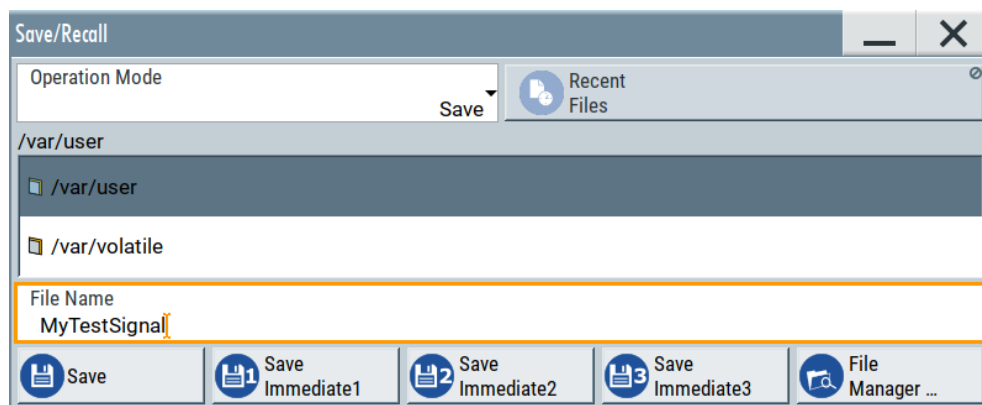

3. Tap the "Save" button.


The file `MyTestSignal.savrc1.txt` is saved in the default directory `/var/user`.



### To load saved instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the Preset button to restore the default instrument settings so you can check that the saved user settings are restored afterwards.
2. Press the Save/Rcl key.
3. In the "Save/Recall" dialog, select "Recall" operation.  
Navigate to the directory of the saved file. Select the `MyTestSignal` file.

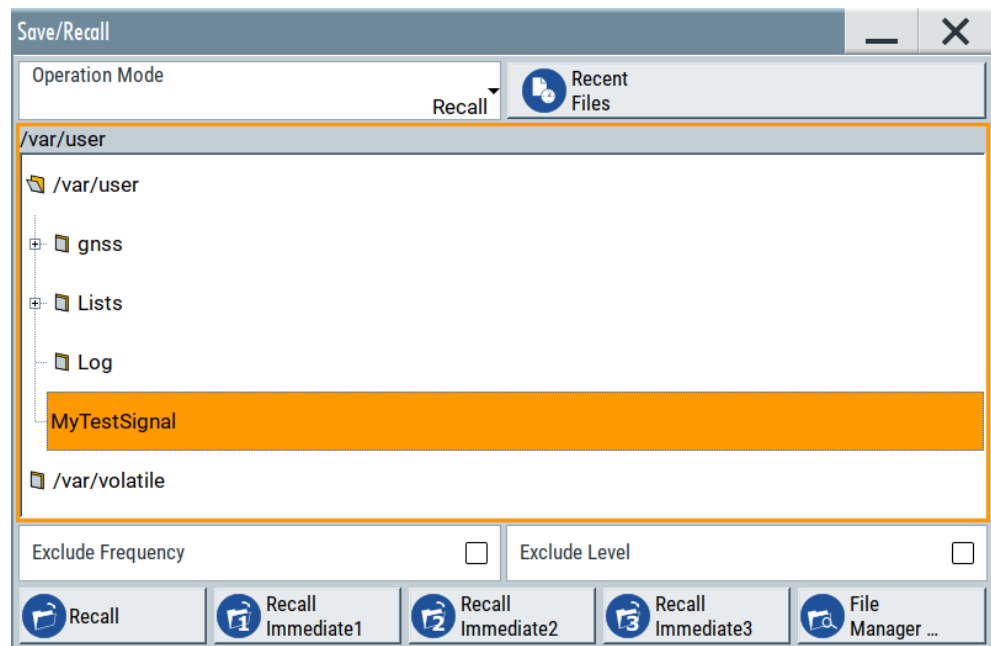

4. Tap the "Recall" button.

All instrument settings are restored and the display resembles the instrument display right before the settings were saved.




### How to display all parameters with values different to their preset values

When you load a file to your instrument and do not have enough information on the changed settings, visualize all parameters that have been changed from their default state.


Try out the following:

- Tap and hold on an empty space in the block diagram to access the context-sensitive menu.
- Select "Mark All Parameters Changed from Preset".



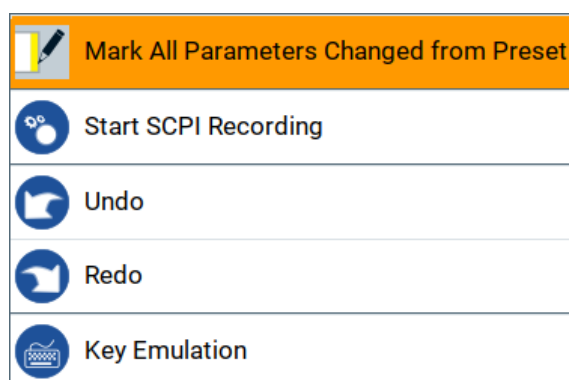

- All changed parameters are highlighted.

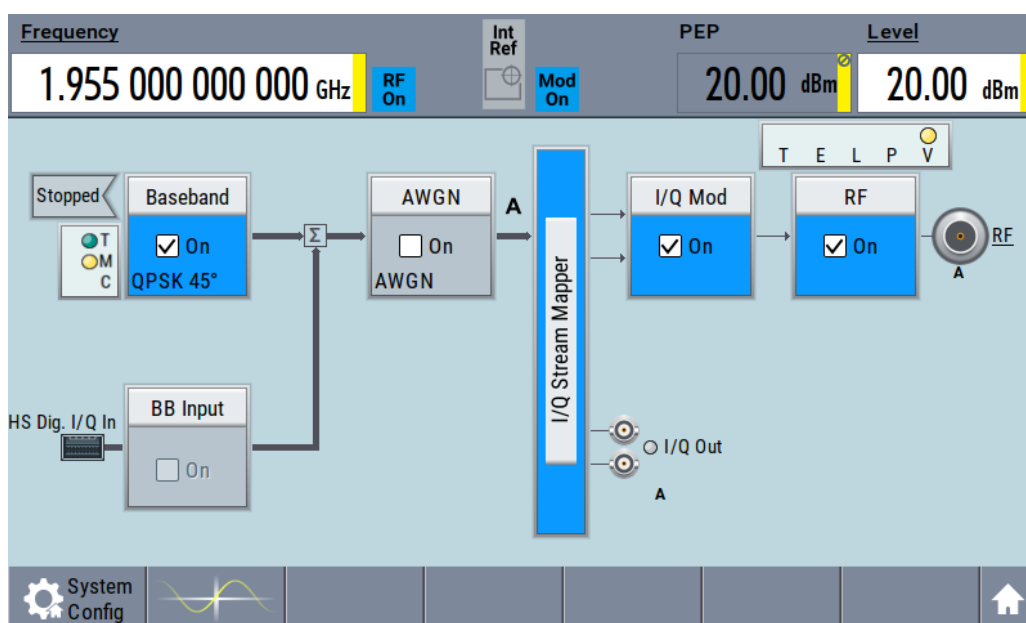

See also [Chapter 10, "File and data management"](#), on page 508.

### 3.3.7 Generating an EUTRA/LTE signal

The main application field of the R&S SMBV100B is the generation of digital signals in accordance with several telecommunication and wireless standards, like WCDMA, EUTRA/LTE or WLAN, to name a few. This example uses the digital standard EUTRA/LTE to introduce the way you can access and interact with the instrument and experience the advantages provided by the additional options.

The minimum requirement for R&S SMBV100B in this example is a base unit equipped with:

- Option EUTRA/LTE R&S SMBVB-K55
- Option frequency R&S SMBVB-B103



### To generate a downlink test signal


The main focus of the following example is not on the R&S SMBV100B capabilities and the features provided by the firmware option. The example aims rather to help you get familiar with the settings and configuration principle common for the digital standards.

We use one of the provided EUTRA test models (E-TM) to show how to generate a test signal upon a quick selection.

1. On the R&S SMBV100B front panel, press the Preset key to start out in a defined instrument configuration.

2. In the block diagram, select "Baseband > Beyond 3G Standards > EUTRA/LTE".

The EUTRA/LTE dialog appears and displays the general settings provided for the digital standard.

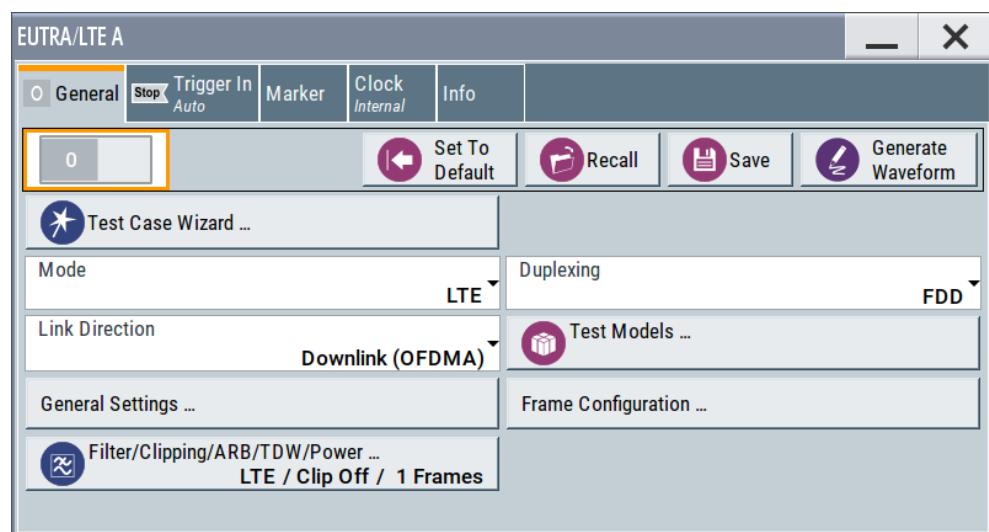

As in the user interfaces of all digital standards, the "EUTRA/LTE" dialog is divided into several tabs. The "General" tab comprises the primary settings of the standard, the functions for storing and recalling settings and provides access to further functions and dialogs, like the "Filter" settings. The "Trigger In", "Marker" and "Clock" tabs comprise the settings related to the corresponding function.

The more complex the digital standard itself is, the more comprehensive the further dialog and tab structure. The start dialog of each digital standard, however, follows a repeating dialog structure that comprises the tabs "General", "Trigger In", "Marker" and "Clock". (See also [Chapter 3.5.3.4, "Additional display characteristics"](#), on page 73).

**Tip:** To display the dialog in its maximal height, press the Resize window key on the front panel.

3. In the "EUTRA/LTE General" tab, select "Test Models".

The test models is a function for quick selection and settings adjustment according to one of the various EUTRA test models (E-TM).

A standard "File Select" function enables you to select from files with predefined settings.






**Tip:** On the front panel, press the Help key to retrieve detailed information on the current settings and on the contents of the predefined files.

4. Navigate to a file, for example to the E-TM1\_1\_\_10MHz (an E-TM1.1 test model with 10 MHz channel bandwidth) and confirm with "Select".

The dialog closes automatically and the user interface confirms the name of the selected file.

5. In the "EUTRA/LTE > General" tab, select "State > On".

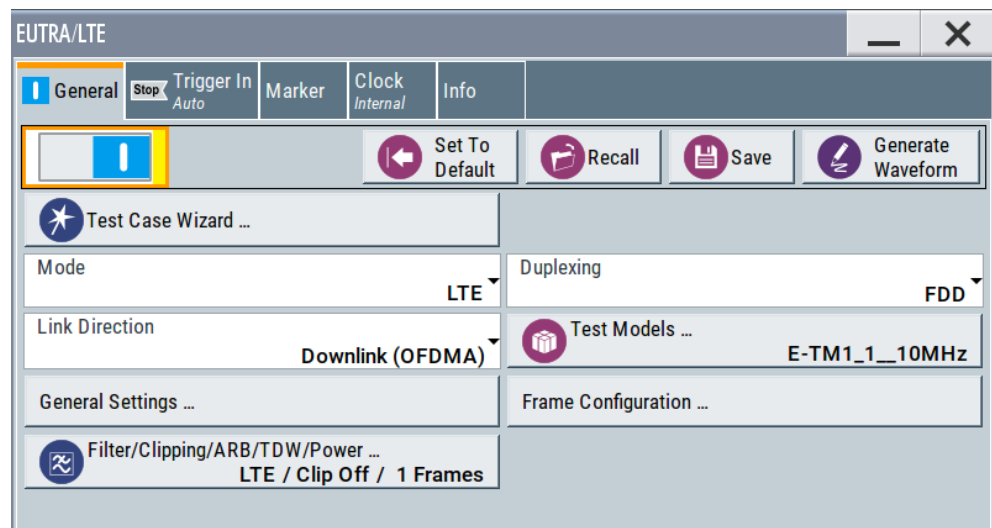


Close the dialog.

6. On the "Status Bar", tap the "Frequency" and "Level" fields and enter new values, for example 2.1432 GHz and -20 dBm.



Select "RF > On".

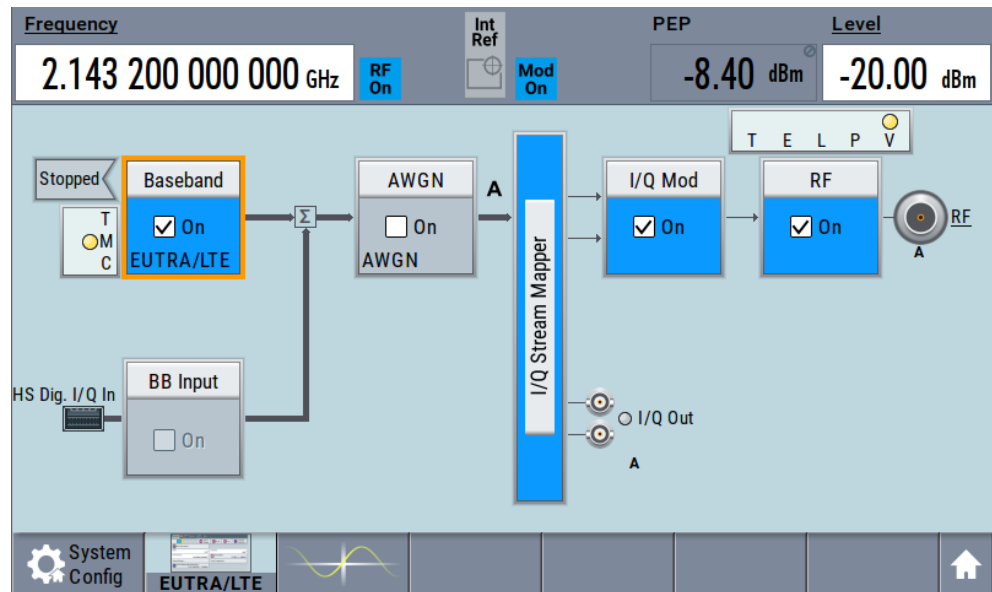

The instrument generates an EUTRA/LTE test signal with the selected channel bandwidth, frequency, and level.



With these first steps, you have gained an impression of the provided functionality.

For a comprehensive description of the full range of capabilities, refer to the user manual "EUTRA/LTE Digital Standard for R&S SMBV100B".

## 3.4 System overview

This section helps you to get familiar with the R&S SMBV100B. It provides an introduction to the general concept of the instrument. This section also introduces the main blocks in the signal generation flow.

For information on how to access functions and interact with the R&S SMBV100B, refer to [Chapter 3.5, "Instrument control"](#), on page 68.

### 3.4.1 Brief introduction to the instrument's concept

The R&S SMBV100B offers excellent RF and baseband characteristics. The baseband section of the R&S SMBV100B is fully digital. It contains the hardware for generating and processing I/Q signals in realtime or generating signals with an arbitrary waveform generator.




### 3.4.2 Signal flow at a glance


The R&S SMBV100B is equipped with a large touchscreen, that displays a block diagram. The block diagram represents the signal flow and the general stages the signal generation goes through. Depending on the options the R&S SMBV100B is equipped with, the appearance of the block diagram changes.

The following examples do not cover all possible cases but aim to introduce the way the block diagram depicts the installed options.

- An example of a base unit, equipped with R&S SMBVB-B103.

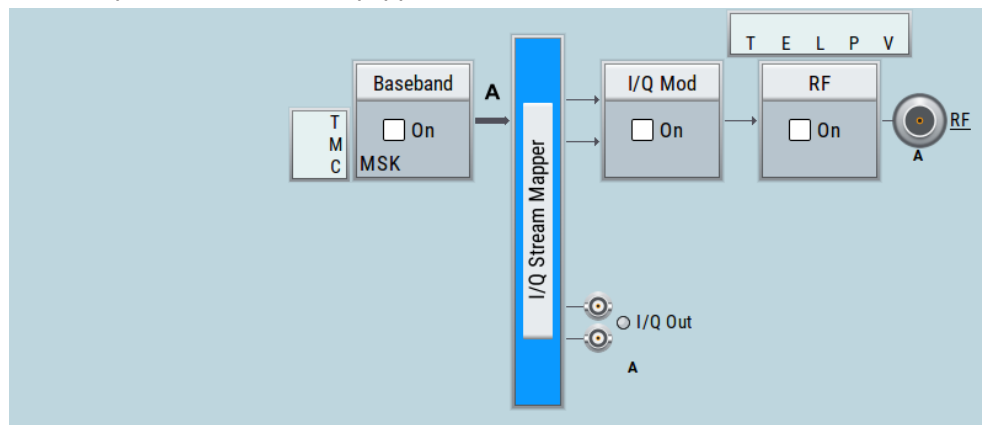

- An example of a fully equipped instrument. The block diagram displays all blocks for that the required hardware and software options are fitted. The block diagram shows the signal flow as it is.

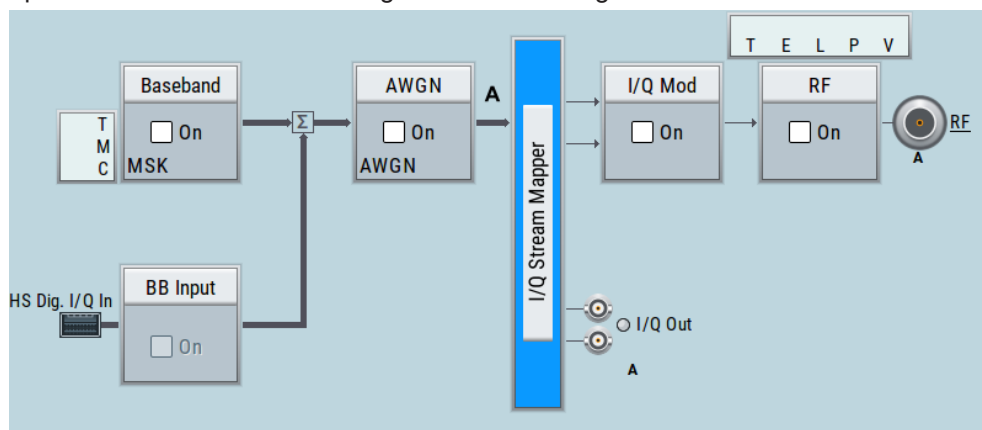

#### The cross-reference between the installed options and the displayed settings

The [Table 3-11](#) is an excerpt of the available options and lists only the options required *to display* a functional block in the block diagram. The information assumes R&S SMBV100B base unit.

For exact information on the available options, and on the minimum requirements and the interdependencies between the provided options, refer to the R&S SMBV100B data sheet.



**Table 3-11: Required options per functional block (excerpt)**

Functional block	Required option
"Baseband"	-
"BB Input"	
"AWGN"	R&S SMBVB-K62
"I/Q Stream Mapper"	-
"I/Q Mod"	-
"I/Q Analog"	-
"I/Q Digital"	R&S SMBVB-K19
"RF"	R&S SMBVB-B103/-KB106

### 3.4.3 Internal baseband source ("Baseband" block)

The "Baseband" block represents the source of the baseband signals (basebands).

This functional block is the access point to:

- *The internal baseband generator*  
The baseband generator contains modules for real time signal generation (Custom Digital Modulation) and an arbitrary waveform generator (ARB).
- *The available digital standards*  
Generation of digital signals in accordance with the supported standards requires additional software options. For example, option R&S SMBVB-K55 generates signals according to the EUTRA/LTE standard.
- *The baseband offsets function*  
Signals from the baseband generator can be shifted in frequency and phase, or boosted in power.

### 3.4.4 Digital baseband input ("BB input"Block)

The "BB Input" and the "I/Q Digital" blocks are the access point to the settings of the digital interfaces.

The R&S SMBV100B is - depending on the software options - able to receive digital baseband signals and to output digital baseband signals. A fully equipped instrument provides two bi-directional configurable digital interfaces. Depending on the configuration, each of the available digital interfaces can each be used as input or output.

The digital baseband inputs and outputs can be used together with other Rohde & Schwarz instruments, like signal generators. A Rohde & Schwarz signal generator for instance can serve as digital signal source in test configuration requiring two baseband sources.

The "BB Input" block is the access point to the settings of:

- *The external digital I/Q signals*  
The external digital I/Q signals are further processed in the baseband section



- *The baseband offsets function*

The external and internal baseband signals can be shifted in frequency and phase, or boosted in power.

The "I/Q Digital" block is the access point to the settings of:

- The digital I/Q output signals
- The digital I/Q impairments

### 3.4.5 Additional white gaussian noise ("AWGN" block)

The "AWGN" block is displayed only in instruments equipped with the option R&S SMBVB-K62. This block controls the additional white Gaussian noise generator (AWGN). An additive white noise is required for measurements of mobile radio base stations.

### 3.4.6 "I/Q stream mapper" block

As one of the access points to the system configuration settings, the "I/Q Stream Mapper" provides direct access for mapping the generated I/Q streams to the available output connectors. That is, to the analog RF and I/Q output connectors.

### 3.4.7 I/Q modulator ("I/Q mod" block)

The "I/Q Mod" block represent the I/Q modulator.

This functional block is the access point to:

- The I/Q modulation of the internal baseband signal
- The I/Q modulation of an external single-ended analog wideband signal
- The analog I/Q impairments

### 3.4.8 Analog I/Q output ("I/Q analog" block)

The "I/Q Analog" block represents the analog I/Q output connectors.

This block is the access point to the settings of:

- The analog I/Q output signals  
The generated signal can be output as single-ended or differential analog signal.
- The analog I/Q impairments

### 3.4.9 RF and analog modulations ("RF" block)

The "RF" block represents the RF settings of the instrument.



This block is the access point to:

- RF frequency and level settings, as well as the reference frequency, local oscillator, user correction, etc.
- The analog modulations
- The list and sweep modes

### 3.4.10 Applications examples of the R&S SMBV100B

The R&S SMBV100B can be optimally adapted to the requirements of different applications:

- Generation of digitally modulated signal  
The main field of application of the R&S SMBV100B is the generation of digitally modulated signals. The R&S SMBV100B generates a digitally modulated signal in several ways: using the internal baseband generator, using the externally applied digital baseband signals or in an analog wideband I/Q operation.
- Generation of a wanted signal or an interfering signal for receiver tests
- Generation of signals with up to 500 MHz signal bandwidth

## 3.5 Instrument control

This chapter provides an overview on how to work with the R&S SMBV100B.

It covers the following topics:

• Possible ways to operate the instrument.....	68
• Means of manual interaction.....	69
• Understanding the display information.....	70
• Accessing the functionality.....	74
• Entering data.....	75
• Getting information and help.....	77
• Remote control.....	79
• Remote operation over VNC.....	79

### 3.5.1 Possible ways to operate the instrument

There are three ways to operate the R&S SMBV100B:

- Manual operation:  
Use the touchscreen, hard keys and rotary knob, or an optional mouse and/or keyboard.
- Remote control:  
Create programs to automatize repeating settings, tests and measurements. The instrument is connected to a computer running the program.  
This way of operation is described in [Chapter 12, "Network operation and remote control"](#), on page 612.



- Remote operation from a computer:  
Remote monitoring and control of the instrument from a connected computer is based on the common cross-platform technology VNC (Virtual Network Computing). On the remote computer, any standard web browser (supporting Java) or a dedicated VNC client (like Ultr@VNC) can be used. See also [Chapter 3.5.8, "Remote operation over VNC"](#), on page 79.

The following sections show how to operate the instrument manually.

### 3.5.2 Means of manual interaction

For the manual interaction with the R&S SMBV100B, you have several methods that you can use as an alternative to perform a task:

- Touchscreen:  
Touchscreen operation is the most direct way to interact. Almost all control elements and actions on the screen are based on the standard operating system concept. You can tap any user interface element to set parameters in dialog boxes, enter data, scroll within a dialog etc., as if you work with a mouse pointer.  
Tapping the screen works like clicking mouse buttons:
  - Touch quickly = click: Selects a parameter or provokes an action.
  - Touch and hold = right-click: Opens a context-sensitive menu.
  - Touch and swipe = drag: Scrolls through the contents of a display element larger than the screen, e.g. a list or a table.
  - Spread or pinch two fingers = zoom out, zoom in:  
Increases or decreases the size of an area in a graphical display as it works on your cell phone
- Function keys and rotary knob:  
The front panel provides nearly all functions and controls to operate the instrument in the classic way, without touchscreen.
- Optional mouse and/or keyboard:  
These devices work like known from PCs. The navigation keys on the front panel correspond to the keys on the keyboard.

This manual describes the manual interaction with the instrument via the touchscreen. It mentions the alternative methods using the keys on the instrument or the on-screen keypads if it deviates from the standard operating procedures. The usage of the touchscreen and navigation keys is described in [Chapter 3.5.4, "Accessing the functionality"](#), on page 74.

Throughout the manual, the term "select" refers to any of the following methods:

- Using a finger on the touchscreen
- Using a mouse pointer in the display
- Using a key on the instrument or on a keyboard



3.5.3 Understanding the display information

The block diagram of the R&S SMBV100B displays all main settings and generator states, divided into main operation areas.

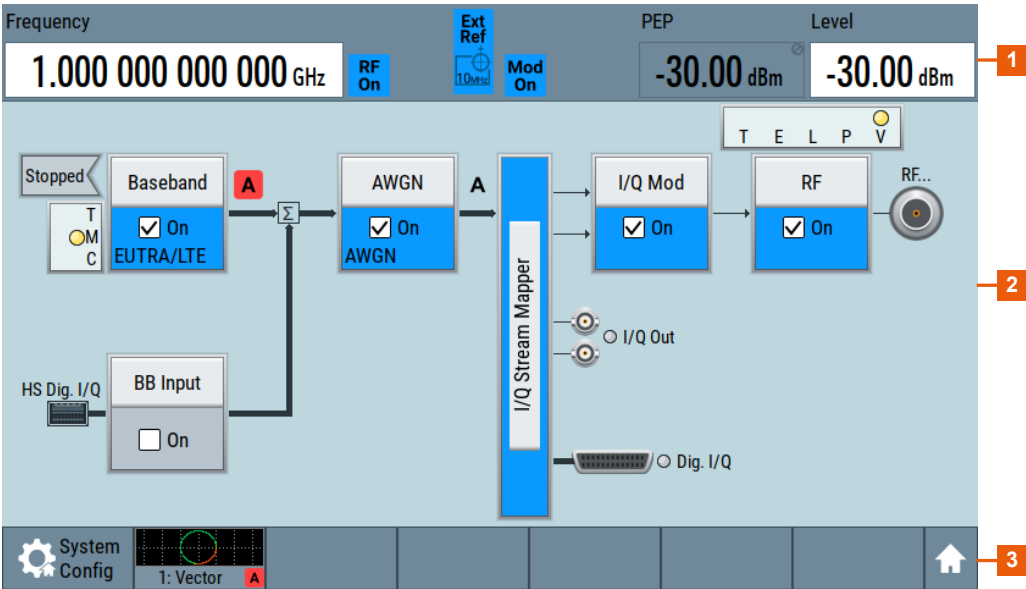



Figure 3-12: Block diagram

- 1 = Status bar (frequency and level display)  
2 = Block diagram  
3 = Taskbar/softkey bar

• Status bar.....	70
• Block diagram.....	71
• Taskbar.....	72
• Additional display characteristics.....	73

3.5.3.1 Status bar

The status bar at the top of the screen indicates the RF frequency and the level of the output signal provided to the DUT. You can set both parameters directly here.

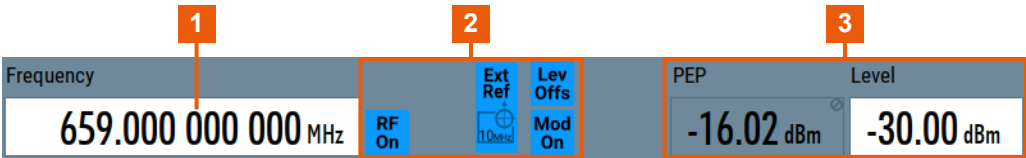


- 1 = Frequency display  
2 = Status buttons  
3 = Level display



The status buttons indicate key parameters that are set for the output signal. Most of the status buttons are virtual keys that you can use to open a corresponding menu or dialog.

### 3.5.3.2 Block diagram

The block diagram shows the current configuration and the signal flow in the generator with the aid of function blocks, connected by signal lines.

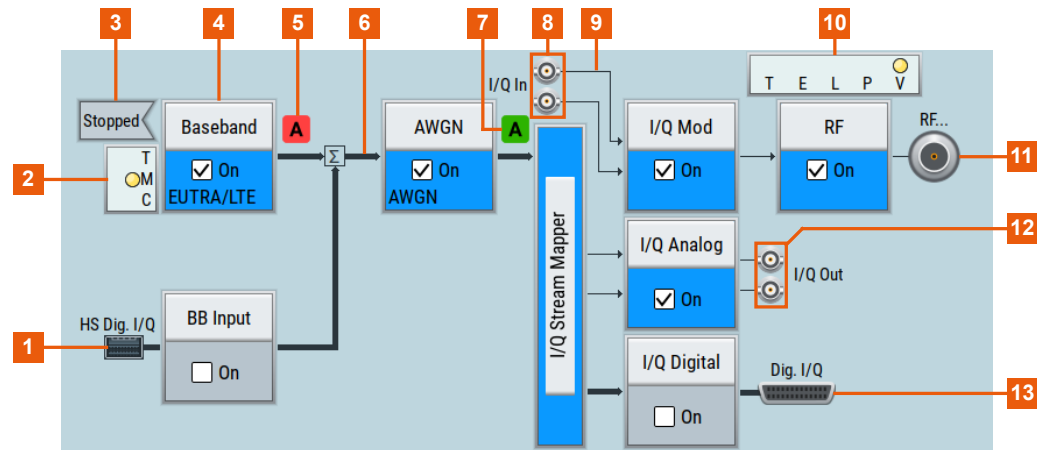

- 1, 8, 11, 12, 13 = Connector icons (RF, analog, digital)
- 2, 10 = Control signal block
- 3 = Status indicator
- 4 = Functional block
- 5, 7 = Graphics indicator
- 6 = Signal line (digital)
- 9 = Signal line (analog)

Starting from left up to the "I/Q Stream Mapper", you can see the functional blocks provided in the baseband domain. After the stream mapper, the analog section contains the digital to analog conversion and modulation to RF.

Legend	Item	Description
1 8 11 12 13	Connector icons	Represent the interfaces for signal input and output: <ul style="list-style-type: none"> <li>Digital I/Q signal connector input (1)</li> <li>Analog I/Q signal connector input (8)</li> <li>RF signal connector output (11)</li> </ul> Icons vary depending on the frequency. <ul style="list-style-type: none"> <li>Analog I/Q signal connector output (12)</li> <li>Digital I/Q signal connector output (13)</li> </ul>
2 10	Control signal block	Indicates information on the control signals like signal content, input or output and provides quick access to the corresponding configuration dialog.  A dedicated control block is displayed to the left of the baseband block (2) and above the RF block (10).
3	Status indicator	Indicates whether the signal is running or waiting for a trigger.



Legend	Item	Description
4	Functional block	Represents a basic task in signal generation. The push button provides access to any number of associated actions to accomplish the task. "On/Off" (checkbox) and the block label quickly activates the basic task.
5 7	Graphics indicator	Denotes that the signal is displayed graphically: Baseband signal (5), stream signal (7)
6 9	Signal line • digital • analog	Shows the currently configured signal flow: • Thick lines represent the digital I/Q streams (6). • Thin lines represent the analog signals (9).

### 3.5.3.3 Taskbar

The "Taskbar" contains labeled softkeys and minimized views (thumbnails) of active graphics and dialogs.

Initially, it shows the permanently assigned softkeys. The softkey with the sine wave denotes that no signal is activated for graphical representation.



Figure 3-13: Taskbar in default state

Whenever you open a settings or graphics dialog, it is automatically assigned to the "Taskbar". The softkeys shown in the following figure represent the variants.




Figure 3-14: Taskbar fully assigned

- 1 = System configuration
- 2 = Remote control connections
- 3 = Graphics
- 4 = Dialogs
- 5 = Diagram / more

1	System Config	Provides access to general system configurations like setup, display, or remote.
2	Remote	Shows the established remote connections when the instrument is remotely controlled. <b>Tip:</b> An indicator in the status bar shows the current remote control status.
3	Graphics	Shows that a signal is represented graphically.



4	Dialogs	Shows a dialog as a thumbnail, the dialog name, and the name of signal channel.
5	Diagram / more	<p>The diagram icon as shown in <a href="#">Figure 3-13</a> minimizes all dialogs indicated on the screen. The block diagram is in the foreground.</p> <p>The "More" softkey indicates that more dialogs are open than can be displayed in the taskbar. Use this softkey to open a selection list with the remaining active dialogs, and the "Diagram" function.</p>

### 3.5.3.4 Additional display characteristics

The following section provides a short insight on the indication of the screen in general, and significant elements that you see under specific operating modes, in dialogs or settings.

- **Appearance of active elements**


- *Active* elements like On/Off switches, state buttons have a **blue** background.
- *Selected* elements are framed or highlighted **orange**.
- *Inactive* elements are **gray**.

- **On-Screen keypads**

As additional means of interacting with the instrument without having to connect an external keyboard, either a numerical or alphanumerical on-screen keypad appears when you activate an entry field (see [Chapter 3.5.5, "Entering data"](#), on page 75).

- **Info line**

The "Info line" shows brief status information and error messages. It appears when an event generates a message. If selected, the R&S SMBV100B shows information on static errors and the error history.



- **Key parameters indicated in tab labels**

Most dialogs are divided into tabs with logically grouped parameters. The tab label expresses the content and can also contain status indicators or the set value of a key parameter.



1 = Status indicators  
2 = Key parameter values

- **Scrollbar handle**

An arrow icon that appears when you touch a scrollbar helps you to scroll in a dialog or list.




- **Progress indicators**

A busy icon indicates a currently running process. If a process takes some time, a progress bar shows the current state.

- **Context-sensitive menus**

Within the entire screen display, including single parameters, you can access context-sensitive menus that provide some additional functions.

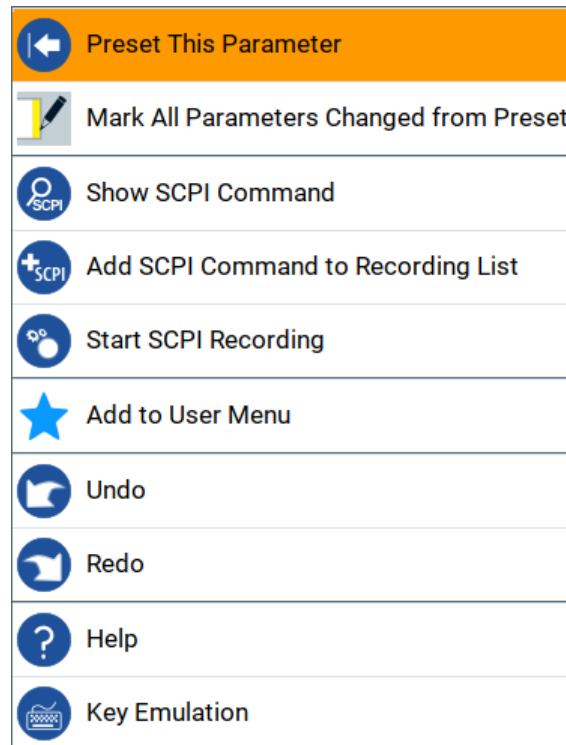

### 3.5.4 Accessing the functionality

All functionalities are provided in dialog boxes as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods.

The instrument's functions and settings can be accessed by selecting one of the following elements:

- System and function keys on the front panel of the instrument
- Taskbar/softkeys on the touchscreen
- Context-sensitive menus for specific elements on the touchscreen, or with the rotary knob (press and hold).
- Elements on the status bar in the touchscreen
- Displayed setting on the touchscreen that means block diagram and all settings available in dialogs.

#### To open a dialog box

- ▶ Perform one of the following actions:



- Tap the required block, and then the menu entry.
- Tap the minimized view (thumbnail) on the taskbar.

Some of the utility keys access a dedicated dialog, too.

#### To minimize a dialog box

- ▶ Tap the "Minimize" icon in the upper right corner.

#### To close a dialog box

To close a dialog box, you have the same controls as you know from computers or devices with touchscreen.

- ▶ Perform one of the following actions:
  - Tap the "Close" icon in the upper right corner.
  - Press the [Esc] key on the front panel.
  - Drag and drop a minimized dialog from the taskbar to the block diagram.

#### To select an option in a dialog box

- ▶ Tap the required option.

#### To select an option in a list

If many options are available - for example, for the trigger mode - the options are provided in a list. The current selection is shown on the list button.

1. Tap in the list.
2. To navigate through the list, try out the following:
  - Using a mouse, scroll in the list to tap the required option.
  - Use the rotary knob.
  - Use [On/Off Toggle] key to select the succeeding option
  - Use the front panel keys:
    - a) Press the [Left/Right] arrow keys to navigate to the list button.
    - b) Press the [Enter] key to open the list.
    - c) Press the [Up/Down] keys to navigate to the required option in the list.
    - d) Press the [Enter] key to select the marked option.

### 3.5.5 Entering data

Some parameters have their own key on the front panel.

For data input in dialog boxes, the instrument provides on-screen keypads for entering numeric and alphanumeric values. Thus, you can always set the parameters via the touchscreen, the front panel, or an external keyboard.

#### To correct an entry

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.



2. Press the [Backspace] key.
3. Deletes the entry to the left of the cursor.
4. Enter your correction.

**To complete the entry**

- Press the [Enter] key or the rotary knob.

**To abort the entry**

- Press the [Esc] key.  
The dialog box closes without changing the settings.

**3.5.5.1 Entering numeric parameters****To enter values with the on-screen keypad**

For numeric settings, the instrument displays the numeric keypad. The units specified correspond to the units of the parameter.

1. Enter the numeric value.

**Tip:** For quick entry, you can enter a value in exponential representation, e.g.  $1e7$  for  $10000000$ .

2. Tap the unit button to complete the entry.

The unit is added to the entry.

**Tip:** For quick unit change, you can enter shortcuts, e.g. for a frequency value  $1e8h$  for  $100\text{ MHz}$ .

For an overview of shortcuts supported by the R&S SMBV100B, see [Chapter C, "Unit shortcuts"](#), on page 1119.

3. If the parameter does not require a unit, confirm the entered value by pressing "Enter".

**To enter values by using the front panel controls**

1. Change the currently used parameter value by using the rotary knob or the [Up/Down] keys.
2. If the parameter does not require a unit, confirm the entered value by pressing the [Enter] key or any of the unit keys.  
The instrument highlights the editing line to confirm the entry.

If you edit numeric data in tables, the entry field must be in edit mode: Press [Enter], or the rotary knob to activate the edit mode.



### 3.5.5.2 Entering alphanumeric parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter letters and (special) characters.

### 3.5.5.3 Undo and redo actions

Accessed via the context-sensitive menus, "Undo" allows you to restore one or more actions on the instrument. Depending on the available memory, the "Undo" steps can restore all actions.



"Redo" restores a previously undone action.

## 3.5.6 Getting information and help

In some dialog boxes, graphics are included to explain the way a setting works.

For further information, you can use the following sources:


- Tooltips give the value range of the parameter.
- The context help provides functional description on a setting.
- The general help explains a dialog box, provides instructions, and general information.

### To display context help

- To access a help topic, perform one of the following:
  - a) Tap and hold the parameter for which you need information and tap "Help" in the context menu.
  - b) Tap the parameter and press the [Help] key.

The "Help" dialog opens. You can browse the help for further information.



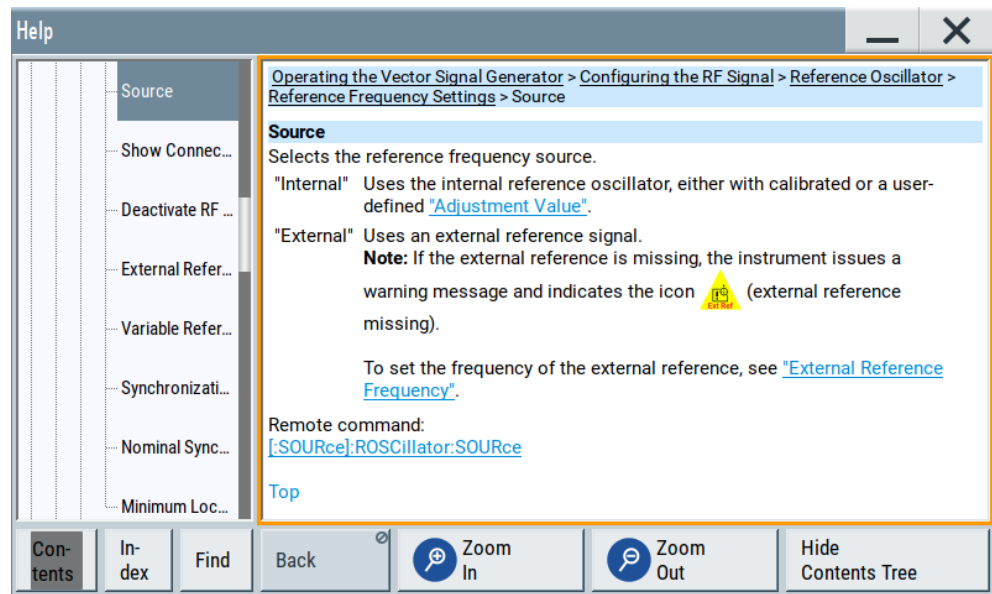

### Contents of the help dialog box

The help dialog box covers two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system also provides an "Index" and a "Find" area, and "Zoom" functions that are accessed via the corresponding buttons.

### To open general help

- Press the yellow [Help] key on the front panel.

If a dialog box is opened, the help topic for the current tab is shown. Otherwise the "Contents" page appears.

### Navigating in the table of contents and in the help topics

1. To move through the displayed contents entries, tap on an entry and scroll or use a connected mouse or the [Up/Down] keys.  
Entries with a plus sign contain further entries.
2. To display a help topic, tap on the topic name or double-click the topic name or press the [Enter] key.
3. To follow a cross-reference, tap on the link text.
4. To return to the previous page, select "Back".  
This function scrolls back all steps you have performed before.
5. Use the "scroll bars" to shift the visible section of content shown.
6. To maximize the "Topics" area, tap the "Hide Contents Tree" button to hide the contents tree.



### Using the index

1. Select the "Index" button.
2. Enter the first characters of the topic you are interested in.  
The entries starting with these characters are displayed.
3. Tap on the index entry.  
The corresponding help topic is displayed.

## 3.5.7 Remote control

In addition to working with the R&S SMBV100B interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC.

The R&S SMBV100B supports various methods for remote control:

- Connecting the instrument to a LAN (see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30)
- Using the LXI browser interface in a LAN
- Connecting a PC via the IEC-bus (IEEE 488) interface
- Remote control via the USB interface



For remote control over LAN or USB, you can use the R&S VISA (Virtual Instrument Software Architecture) library provided for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to configure the remote control interfaces is described in [Chapter 12, "Network operation and remote control"](#), on page 612.

## 3.5.8 Remote operation over VNC

The VNC is an application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and VNC provides access to all applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.



### Instrument control from a remote computer

To access the basic utility functions of the R&S SMBV100B, perform a right mouse click the block diagram and select "Key Emulation".

A key panel to the right of the block diagram gives access to the utility functions provided by the front panel keys.

The VNC is an add-on program, included in operating system Linux/Unix, and available as a free-of-charge download on the internet.



See also [Chapter 12.14, "To operate the instrument using VNC"](#), on page 686.



## 4 Configuring the internal baseband source

The R&S SMBV100B is a vector signal generator with internal signal generation and real-time functionality and with integrated arbitrary waveform generator.

The instrument enables you to generate various digital modulation signals in accordance with the definitions in the corresponding specifications or with user-definable characteristics. Signals are generated in realtime or played from a data store with external and internal data. The instrument provides an interface for the loading of externally computed modulation signals in form of waveform files.

### 4.1 Overview of the signal generation modes

The R&S SMBV100B can generate the signal in the following ways:

- [Generating digital modulated signals according to various digital standards](#)
- [Generating a real-time signal](#)
- [Playing a waveform](#)

#### Generating digital modulated signals according to various digital standards

Provided the instrument is equipped with the required digital standard options, the instrument can generate digital standards in accordance with the corresponding specifications.

The required options are specified in the description of the respective digital standard (see the corresponding user manual).

See also [Chapter 4.3, "Generating signals according to digital standards"](#), on page 83.

#### Generating a real-time signal

- While utilizing the *internal* signal generator, the R&S SMBV100B generates the digital modulation signals with user-definable characteristics in real time.  
See also [Chapter 4.5, "Generating custom digital modulated signals"](#), on page 119.
- If the required options are installed, *externally supplied real-time* baseband signals can be added to the internally generated signals.  
See also [Chapter 9.6, "Digital baseband input settings"](#), on page 486.

#### Playing a waveform

The R&S SMBV100B is equipped with an arbitrary waveform generator (ARB) used to generate test signals and to process waveform files. Waveforms are files with settings provided for repeatable tests with the same test signal. Irrespectively of the way these waveform files are generated, they are always played from the instrument. That is, the signal calculation is performed in advance and the instrument reacts as a player.


- Externally computed waveform files can be loaded in the instrument over the LAN, USB, or the GPIB interface.




Create waveforms, for example, with the signal generation software R&S WinIQ-SIM2 or the R&S®Pulse Sequencer software.

- The instrument provides different functions to generate waveforms *internally*.
  - Some of the digital standards firmware options provide the possibility to store the current signal settings into a waveform file. These waveform files can be loaded in and processed as multi-carrier or multi-segment signal by the ARB generator.  
See also [Chapter 4.6, "Using the arbitrary waveform generator \(ARB\)"](#), on page 152.
  - Multi-carrier waveforms consisting of carriers modulated by different baseband signals can be configured and created internally. Such multi-carrier waveform files are required to simulate complex multi-carrier scenarios with different baseband signals, e.g. CDMA2000, 3GPP FDD, or signals in accordance with the LTE-Advanced specifications.  
See also [Chapter 4.10, "Generating multi-carrier signals"](#), on page 235.
  - Provided the instrument is equipped with the corresponding option, it is also possible to generate multi-carrier waveforms consisting of unmodulated carriers  
See also [Chapter 4.11, "Generating multi-carrier continuous wave signal"](#), on page 252.

## 4.2 Accessing the functions in the baseband domain

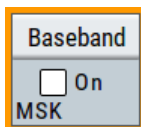

1. In the block diagram, select the "Baseband" block and navigate through the context menu.

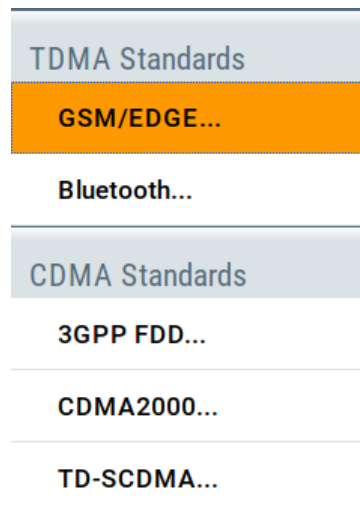

The "Baseband" block comprises all functions and settings concerning the baseband signal. The functions and settings include all generation modes as described in the [Chapter 4.1, "Overview of the signal generation modes"](#), on page 81.

2. By default, baseband signal generation is off.



To activate the baseband generator, in the block diagram, select the "Baseband" block and set "Baseband > On".

**Note:** The internal baseband generator ("Baseband" block) and the external digital baseband input ("BB Input") cannot run simultaneously. They deactivate each other.

A short designation indicates the digital standard or modulation currently selected.

For information, see:

- [Chapter 4.5, "Generating custom digital modulated signals"](#), on page 119
- [Chapter 4.6, "Using the arbitrary waveform generator \(ARB\)"](#), on page 152
- [Chapter 4.11, "Generating multi-carrier continuous wave signal"](#), on page 252
- The description of the digital standards
- [Chapter 4.12, "Shifting and boosting the baseband signal"](#), on page 262

## 4.3 Generating signals according to digital standards

The R&S SMBV100B generates digital signals in accordance with the specifications of the main communication and radio standards only if the corresponding firmware options are installed.

### GSM/EDGE, EDGE Evolution

This digital standard requires an instrument equipped with the GSM/EDGE and EDGE Evolution options R&S SMBVB-K40/-K41.

The GSM/EDGE, EDGE Evolution options provide functionality to generate signals in accordance with the GSM/EDGE standard. GSM/EDGE signals comprise GMSK and 8PSK modulation and higher order modulations that are in accordance with the EDGE Evolution standard.

For details, see the R&S SMBV100B GSM/EDGE user manual.

### Bluetooth® Enhanced Data Rate/Bluetooth® 5.x

This digital standard requires an instrument equipped with options Bluetooth® Enhanced Data Rate (EDR) and Bluetooth® 5.x R&S SMBVB-K60/-K117.

The Bluetooth® options provide functionality to generate signals in accordance with the Bluetooth® core specification for Bluetooth® EDR and Bluetooth® 5.x. For the latest version of Bluetooth® 5.x, see the latest Bluetooth® core specification document.

For details, see the R&S SMBV100B Bluetooth Enhanced Data Rate, Bluetooth 5.x user manual.

### LoRa

This digital standard requires an instrument equipped with the LoRa option R&S SMBVB-K131.

The LoRa option provides functionality to generate signals in accordance with the Semtech Corporation, Camarillo California, USA proprietary standard.



For details, see the R&S SMBV100B LoRa user manual.

### **3GPP FDD incl. enhanced MS/BS tests, HSPA, HSPA+**

This digital standard requires an instrument equipped with the 3GPP FDD incl. enhanced MS/BS tests, HSPA, HSPA+ options R&S SMBVB-K42/-K83.

These options provide functionality to generate signals in accordance with the WCDMA standard 3GPP FDD.

For details, see the R&S SMBV100B 3GPP FDD user manual.

### **CDMA2000®**

This digital standard requires an instrument equipped with the CDMA2000 option R&S SMBVB-K46.

The CDMA2000 option provides functionality to generate signals in accordance with the CDMA2000 standard 3GPP2 C.S0002-C, version 1.0 (release C).

For details, see the R&S SMBV100B CDMA2000 user manual.

### **TD-SCDMA and TD-SCDMA enhanced features**

This digital standard requires an instrument equipped with the TD-SCDMA and TD-SCDMA enhanced features options R&S SMBVB-K50/-K51.

The TD-SCDMA options provide functionality to generate signals in accordance with the TD-SCDMA (3GPP TDD LCR) standard.

For details, see the R&S SMBV100B TD-SCDMA user manual.

### **1xEV-DO Rev. A and Rev. B**

This digital standard requires an instrument equipped with the 1xEV-DO Rev. A and Rev. B options R&S SMBVB-K47/-K87.

The 1xEV-DO options provide functionality to generate signals in accordance with the CDMA2000 1xEV-DO (Evolution-Data Optimized), Rev. A and Rev. B standard.

For details, see the R&S SMBV100B 1xEV-DO Rev. A Rev. B user manual.

### **IEEE 802.11a/b/g/n, IEEE 802.11p/j, IEEE 802.11ac, IEEE 802.11ax, IEEE 802.11be**

These digital standards require an instrument equipped with the WLAN options R&S SMBVB-K54/-K86/-K142/-K147.

These options provide functionality to generate signals in accordance with the wireless LAN standards IEEE 802.11a/b/g/n/ac/p/j/ax/be.

For details, see the R&S SMBV100B IEEE 802.11 WLAN user manual.

### **HRP UWB 802.15.4**

This functionality requires an instrument equipped with the HRP UWB 802.15.4 option R&S SMBVB-K149.



This option provides functionality to generate signals in accordance with the HRP UWB standard.

For details, see the R&S SMBV100B HRP UWB 802.15.4 user manual.

### **EUTRA/LTE Rel. 8, Rel. 9, Rel. 10, Rel. 11, Rel. 12, Rel. 13/14, Cellular IoT, incl. Enhancements**

This digital standard requires an instrument equipped with the EUTRA/LTE options R&S SMBVB-K55/-K69/-K81/-K84/-K85/-K112/-K113/-K115/-K119/-K143.

These options provide functionality to generate signals in accordance with the 3GPP standard EUTRA/LTE Rel. 8, Rel. 9, Rel. 10, Rel. 11, Rel. 12 and Rel. 13/14.

For details, see the R&S SMBV100B EUTRA/LTE user manual.

### **5G New Radio**

This functionality requires an instrument equipped with the 5G New Radio option R&S SMBVB-K144.

This option provides functionality to generate signals in accordance with the 3GPP standard New Radio Rel. 15.

For details, see the R&S SMBV100B 5G New Radio user manual.

### **OFDM Signal Generation**

This functionality requires an instrument equipped with the OFDM Signal Generation option R&S SMBVB-K114.

This option provides functionality to generate OFDM signals and signals according to predefined OFDM modulation schemes.

For details, see the R&S SMBV100B OFDM Signal Generation user manual.

### **GNSS**

These digital standards require an instrument equipped with the GNSS options R&S SMBVB-K44/-K66/-K94/-K97/-K98/-K106/-K107/-K108/-K109/-K122/-K132/-K133/-K134/-K135/-K136/-K137.

The GNSS options provide functionality to generate signals in accordance with satellite navigation standards and to turn the R&S SMBV100B into a GNSS simulator.

For details, see the R&S SMBV100B Satellite Navigation user manual.

### **GBAS**

This digital standard requires an instrument equipped with the option R&S SMBVB-K111.

The GBAS option provides functionality to generate signals in accordance with the Ground-Based Augmentation System (GBAS) standard.

For details, see the R&S SMBV100B GBAS user manual.



**ILS/VOR/DME**

These digital standards require an instrument equipped with the Avionics standards options R&S SMBVB-K151/-K152/-K153.

The Avionics standards options provide functionality to generate signals in accordance with VOR, ILS and DME specifications.

For details, see the R&S SMBV100B ILS/VOR/DME user manual.

**NFC/EMV**

This digital standard requires an instrument equipped with the NFC/EMV option R&S SMBVB-K89.

The NFC/EVM option provides functionality to generate signals in accordance with the short-range wireless connectivity technology NFC-A/B/F and the EMV standard.

For details, see the R&S SMBV100BNFC A/B/F user manual.

## 4.4 Common functions and settings in the baseband domain

This chapter describes common signal generation settings that are common to many generation tasks. These settings are independent from the selected baseband source or the selected digital standard.

For specific signal generation tasks, there can be specific settings that can deviate from common signal generation settings. For example, a specific signal generation task is to generate a signal according to a digital standard.

### 4.4.1 Basics on signals, modulation formats and filters

This section provides general information on common topics and basic principles.

- [Data, clock and control signals and sources in the baseband](#)..... 86
- [Regular marker output signals](#)..... 91
- [Baseband trigger signals](#).....93
- [Supported modulation signals](#).....101
- [Supported coding schemes](#).....102
- [Supported baseband filters](#)..... 103
- [Methods for optimizing the crest factor](#)..... 105

#### 4.4.1.1 Data, clock and control signals and sources in the baseband

This section describes common characteristics of the signals used for generating the baseband signal for all standards. Common characteristics do not depend on the used generation mode.



The selection in the dialogs at any given time depends on the parameter and standard concerned. It is clear from the selection list offered in the dialog. Some parameters are therefore not available in certain cases.

Characteristics specific to particular standards are described in the corresponding user manual.

For the generation of modulation signals, the instrument uses the following input signals:

- [Internal modulation data](#)
- [Clock signals](#)
- [Control signals](#)

### Signal sources

The data, the clock and the trigger signals can be both internally generated and supplied from an external source. Control signals however are always generated internally.

Depending on the current configuration, the internally generated data and marker signals are output on one or several connectors. The output capabilities of the instrument and the required connectors are configurable.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

### Internal modulation data

The R&S SMBV100B uses the following internal modulation data sources:

- **Data lists**

Data lists are externally or internally created binary lists with modulation data. The instrument provides standard file select function for loading of existing data lists, creating internally new data lists or editing an existing one. Internally, data lists are created in the dedicated "Data List" editor (see [Chapter 4.5.3.7, "Data list editor"](#), on page 132). A separate file is created for each list and saved on the instrument's hard disk. The filename is user-defined; the file extension is `*.dm_iqd`.

The maximum length of a data list is determined by the size of the data list memory (see data sheet). There is no restriction on the number of lists that can be saved. Settings for file handling, like transferring external data lists to the instrument, or renaming of folders and files, are accessed via the standard "File Manger" function. (See also [Chapter 10, "File and data management"](#), on page 508).

- **Data patterns**

Simple data patterns such as binary 0 ("All 0") strings or 1 ("All 1") strings or variable bit strings with a maximum length of 64 bits can be used as internal modulation data.

- **PRBS data**

The PRBS generators deliver pseudo random binary sequences of differing length and duration. They are known as maximum length sequences. PRBS sequences are generated with the aid of ring shift registers with feedback points determined by the polynomial.



The pseudo-random sequence from a PRBS generator is uniquely defined by the register number and the feedback. The [Table 4-1](#) describes the available PRBS generators.


For PRBS15 and PRBS23, a CCITT V.52-compliant data inversion is performed in the feedback path automatically.

**Table 4-1: Overview of PRBS generators**

PRBS generator	Sequence length /bit	Feedback to	GUI selection
9-bit	$2^9 - 1 = 511$	Registers 4, 0	"PRBS 9"/"PN9"
11-bit	$2^{11} - 1 = 2047$	Registers 2, 0	"PRBS 11"/"PN11"
15-bit	$2^{15} - 1 = 32767$	Registers 1, 0	"PRBS 15"/"PN15"
16-bit	$2^{16} - 1 = 65535$	Registers 5, 3, 2, 0	"PRBS 16"/"PN16"
20-bit	$2^{20} - 1 = 1048575$	Registers 3, 0	"PRBS 20"/"PN20"
21-bit	$2^{21} - 1 = 2097151$	Registers 2, 0	"PRBS 21"/"PN21"
23-bit	$2^{23} - 1 = 8388607$	Registers 5, 0	"PRBS 23"/"PN23"

#### Example:

By way of example, the diagram on [A 9-bit PRBS generator](#) shows a 9-bit generator with feedback to registers 4 and 0 (output). The generated serial data is converted internally, e.g 2 Bit/Symbol if QPSK is used.

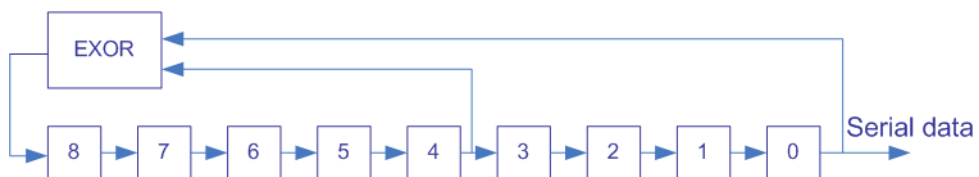

**Figure 4-1: A 9-bit PRBS generator**

Related settings:

- [Chapter 4.5.3.3, "Data source settings"](#), on page 123
- [Chapter 4.5.3.7, "Data list editor"](#), on page 132
- [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134
- "Data Source" selection in the dialogs of the firmware options

#### Clock signals

The instrument requires a clock reference for generating the timing pulse and uses its internal clock reference for that purpose.

The internally generated symbol clock signal can be output at the User x connectors. The [Table 4-2](#) gives an overview.



**Table 4-2: Output connectors for the reference clock signal**

Connector	Location	GUI selection
User x	Front and rear panel	<p>To configure the connector:</p> <ul style="list-style-type: none"> <li>• "Custom. Dig. Mod/Digital Standard &gt; Clock Settings &gt; Global Connectors &gt; Direction &gt; Output"</li> <li>• "Custom. Dig. Mod/Digital Standard &gt; Clock Settings &gt; Global Connectors &gt; Signal &gt; Symbol Clock"</li> </ul> <p>To enable the clock source</p> <ul style="list-style-type: none"> <li>• "Custom. Dig. Mod/Digital Standard &gt; Clock Settings &gt; Clock Source &gt; Internal"</li> </ul>

### Synchronizing data signals and clock signals

The synchronization is always based on the positive edge of the clock.

Related settings:

- [Chapter 4.4.2.3, "Clock settings"](#), on page 114
- [Chapter 11.2, "Configuring global connectors"](#), on page 553
- Clock settings in the dialogs of the firmware options

### Control signals

The following control signals are processed in the R&S SMBV100B:

- "Burst Gate" for power ramping
- "Level Attenuation" for power ramping
- "CW/Mod" for controlling the CW (continuous wave) mode

A dedicated internal "Control Data Editor" is provided for defining the control signals. Refer to [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134 for a description on the provided settings.

### Continuous wave mode

The "CW" signal turns off digital modulation. The signal is output in unmodulated form.

The CW/Mod control signal is generated internally and is output at one of the User x connectors.

### Power ramping and level attenuation

The R&S SMBV100B uses the two control signals "Burst Gate" and "Lev\_Att" to trigger the power ramping and level attenuation functions.

The instrument internally generates control signals as configured in [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134; the signals can be output on the User x connectors.

- *Burst gate control signal*  
The "Burst Gate" signal is a rectangular pulse signal with variable low and high periods. Signal generation is restricted to the gate high periods. If the power ramping function is enabled, each transition between two gate periods of the "Burst Gate" signal triggers the generation of a ramp. Further settings define the form and



the steepness of this ramp, see ["Impact of the power ramping settings on the generated signal"](#) on page 90.

- **Level attenuation control signal**  
The "Lev\_Att" signal is a rectangular pulse signal with variable low and high periods. Level attenuation is applied, if the "Lev\_Att" signal is high. If level attenuation is enabled, the modulation signal level is attenuated by a defined value.

Related settings:

- [Chapter 4.5.3.6, "Power ramp control settings"](#), on page 130




#### Possible applications

- Use the "Level Attenuation" function to simulate radio stations located at various distances.
- Use the "Power Ramp" function if it is necessary to control the RF output signal envelope synchronously, e.g. by the generation of TDMA signals.

Both the GSM/EDGE and the TD-SCDMA firmware options are equipped with embedded power ramping function. In the GSM/EDGE standard for example, a maximum of 7 different level attenuation values can be defined and allocated separately to the 8 slots independently of one another.

#### Impact of the power ramping settings on the generated signal

The [Figure 4-2](#) explains the power ramping function in principle. The "Burst Gate" signal defines the start of the rising and falling edges of the envelope of the output signal, and the "Lev Att" signal defines the start and end of level attenuation. The signal level during the attenuation period is a configurable value.

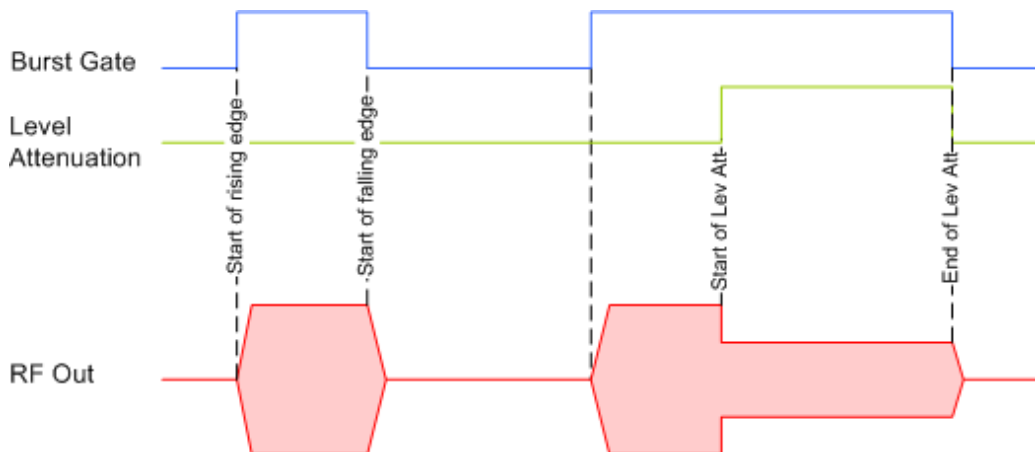

**Figure 4-2: Signal behavior when power ramping and level attenuation are enabled**

Several parameters are provided for precise definition of the form and the steepness of ramp. The [Figure 4-3](#) depicts the impact of the provided settings.

- Ramp function: defines the shape of the rising and falling edges
- Ramp time: defines the duration of the rising and the falling ramp
- Rise/fall delay: offsets the falling edge of the envelope at the beginning/end of a burst



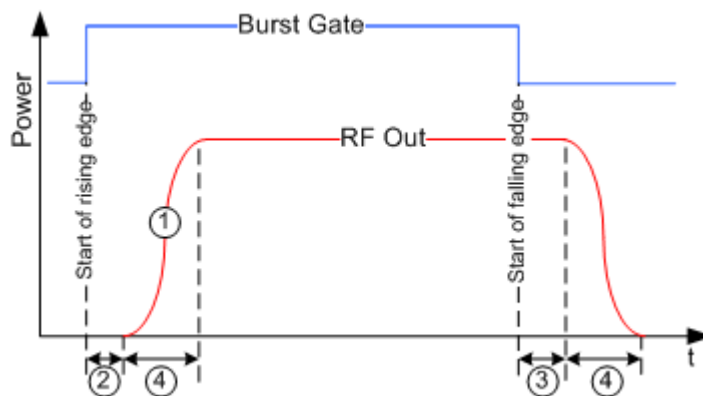


Figure 4-3: Impact of the ramp settings

- 1 = "Ramp Function"
- 2, 3 = "Rise Delay", "Fall Delay"
- 4 = "Ramp Time"

#### 4.4.1.2 Regular marker output signals

The R&S SMBV100B can add *additional signals* to the generated signal. Marker signals (or markers) are digital signals which can be used to synchronize external devices to the generated data stream. For example, with suitable marker settings, a slot clock or frame clock can be selected, or the start of a particular modulation symbol can be marked.

Three marker output signals are available; they can be output at the User x connectors.

Related settings:

- [Chapter 4.4.2.2, "Marker settings"](#), on page 113
- [Chapter 11.2, "Configuring global connectors"](#), on page 553
- Marker settings in the dialogs of the firmware options

#### Marker modes

The marker mode is a characteristic for the shape and the periodicity of the marker. The R&S SMBV100B provides several different modes to define different marker signals. Most of them are specific for each of the firmware options. This section focuses only on the general commonly available marker signals.

The marker mode is a characteristic for the shape and the periodicity of the marker. The R&S SMBV100B provides several different modes to define different marker signals, that are described in the following sections.

Generally, the marker signal can change from "On" (high) to "Off" (low) state or vice versa after some period of time. The instrument provides various ways to describe the marker signal. Use the method that best suits your needs.



### Marker mode restart

The generated marker signal is a single "On" pulse. The rising edge of this pulse is generated at the signal generation start and at each subsequent signal restart time. This marker can be used to monitor the effects of the selected trigger, e.g. trigger causing restarts of the signal generation.

### Marker mode pulse

Periodic marker with consecutive On and Off periods of equal length. The first On period starts at the beginning of the first generated sample/symbol. The marker frequency is defined by a "Divider". The frequency is derived as follows:


<Frequency> = "Symbol/Sample Rate" / "Divider", respectively

<Frequency> = "Sampling Frequency" / "Divider".

#### Example:

"Symbol Rate = 1 Msym/s", "Divider = 2"

The marker frequency is 500 kHz, corresponding to a marker period of 2 us. Each On and Off period has a length of 1 us, corresponding to one symbol period. With a divider of 4 (6, 8 ...), the length of each On and Off period is increased to 2 (3, 4, ...) symbol periods.

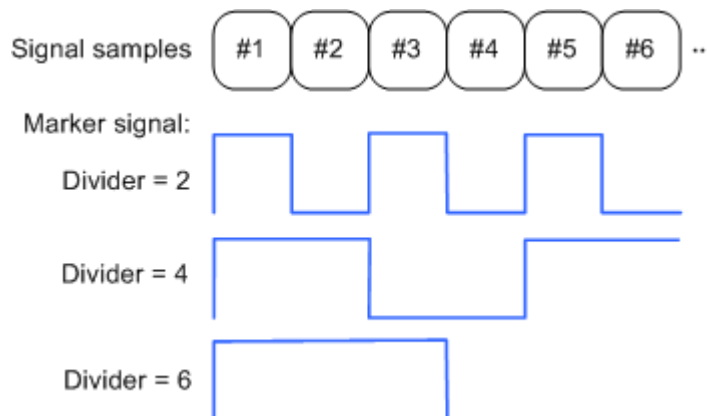


### Marker mode pattern

Periodic marker where each period is defined by a bit pattern with a maximum length of 64 bits. A "1" ("0") in the pattern denotes an On (Off) signal segment with a duration of one sample/symbol period.

#### Example:

In the following example, the marker signal is defined by a pattern 100100....

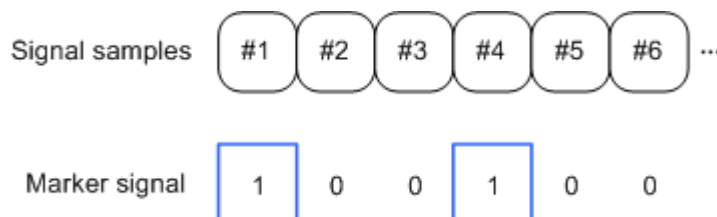



**Marker mode On/Off ratio**

Similar to "Pulse" but with independent lengths of the On and Off periods. The length of the periods is entered as several symbols/sample periods.

**Example:**

In the following example, the marker signal is defined by an "On Time" = 1 and "Off Time" = 2.

**Marker mode CList**

The instrument generates a marker signal that is defined in the selected control list. The R&S SMBV100B provides a graphical interface for convenient definition of control signals among others also for the marker signals.

**Delaying marker signals**

In all the examples listed in ["Marker modes"](#) on page 91, the marker starts at the beginning of the first generated sample/symbol (sample/symbol no. 1). It is possible though to delay the start of the marker by an integer number of symbols/sample periods.

**4.4.1.3 Baseband trigger signals**

The R&S SMBV100B provides several trigger modes, different trigger sources, and some additional trigger settings to suppress or delay the trigger events. This section provides an overview of the provided baseband trigger settings and the impact of the trigger settings on the signal generation.

The current signal generation status ("Running" or "Stopped") is continuously displayed in the corresponding dialog, indicated in the header of the tab and in the block diagram of the instrument. This indication is important when an external trigger is applied.

For information on the trigger signals used in the RF domain, see [Chapter 7.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 323.

**Trigger**

The trigger signals are internally generated or externally supplied signals which start signal generation at a particular point in time. However, signal generation can also take place without triggering. In this case, the signal generation starts immediately after the modulation is enabled.



## Trigger event

A trigger event is caused by the received trigger signal. Another possibility to provoke a trigger event is to execute trigger manually. The "Arm" function stops the signal generation until subsequent trigger event occurs.

- [Trigger sources](#)..... 94
- [Impact of the trigger modes on the signal generation](#)..... 94
- [Impact of the additional trigger settings](#)..... 98
- [Receiving and providing trigger signals](#)..... 101

## Trigger sources

The provided trigger sources are divided into two main groups, internally generated or externally supplied trigger signals.

- Internal ("Internal")  
Internal trigger signals are generated by the instrument itself.
- External ("External Global Trigger")  
External trigger signal is generated by an external trigger source.  
The instrument expects the trigger signal at one of the User x connectors. Refer to [Configuring global connectors](#) for information on how to configure the required settings.
- External ("Baseband Sync In")  
In [primary-secondary instrument mode](#), secondary instruments are triggered by the active edge of the synchronization signal.  
This trigger source is selected automatically and cannot be changed.  
See [Chapter 9.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 457.



The trigger mode setting, the selection of the trigger source and the setting of a delay and trigger suppression in the case of external triggering are carried out independently. However, the polarity and impedance characteristics of the external signals are identical for all basebands using this signal.

A signal which marks the trigger event can be output at the User x connectors.

Related settings:

- [Chapter 4.4.2.1, "Trigger settings"](#), on page 108
- [Chapter 11.2.5, "Global connectors settings"](#), on page 559
- Trigger settings in the dialogs of the firmware options

## Impact of the trigger modes on the signal generation

A trigger event affects the signal generation in different way, depending on the selected trigger mode. The [Table 4-3](#) gives an overview of the provided trigger modes and their impact.



Table 4-3: Impact of the trigger events on the generated signal

"Trigger Mode"	Signal generation mode <sup>1)</sup>	1st Trigger event "Exec. Trigger" or "External" trigger signal	Subsequent trigger event "Exec. Trigger" or "External" trigger signal	Trigger event "Arm"
"Auto" See Figure 4-5	Continuous	-	-	-
"Retrigger" See Figure 4-6	Continuous	Initial start	Restart	-
"Armed_auto" See Figure 4-7	Continuous	Initial start	Restart (only after previous "Arm")	Stop
"Armed_retrigger" See Figure 4-8	Continuous	Initial start	Restart	Stop
"Single" See Figure 4-4	Single length determined by "Trigger Signal Duration"	Initial start	Restart	-


<sup>1)</sup> The instrument generates a continuous signal or a single signal.

- Single signal generation means that the signal generation stops after one cycle. That is, after the signal with signal length determined by the "Trigger Signal Duration" has been generated.
- Continuous transmission means that the signal is generated repeatedly without delay and until the data generation is stopped explicitly. However, any parameter change within the processing chain (baseband, fading simulator, or stream mapping) causes a signal generation restart.

The following is a list of the trigger modes together with their short description. An example of their impact on the generated signal is given. The provided examples are intended to show the triggering mechanism in principle. To simplify the description, an internal trigger event ("Execute Trigger") is used. An external trigger event has the same effect on the signal generation. In the examples on the figures below, the instrument's processing time is ignored.

- **Single**  
The instrument starts the signal generation only when a trigger event occurs. The signal is generated once. Its signal length is set with the parameter "Trigger Signal Duration".  
Every subsequent trigger event causes a restart.



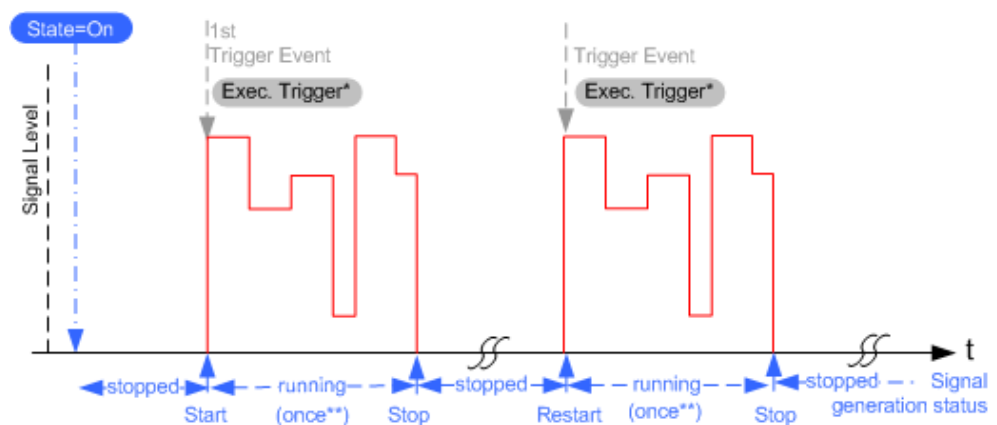


**Figure 4-4: Trigger mode single**

\* = Internal trigger event (to simplify the description)

\*\* = The signal is generated once to the length specified with "Trigger Signal Duration"

- Auto

In auto trigger mode, the instrument generates a continuous signal.

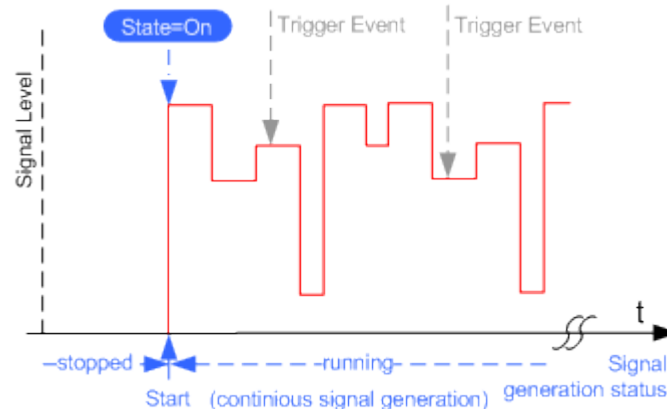


**Figure 4-5: Trigger mode auto**

- Retrigger

The instrument generates a continuous signal. With enabled retrigger, a new trigger event aborts the current generation cycle and restarts the signal generation from the beginning.



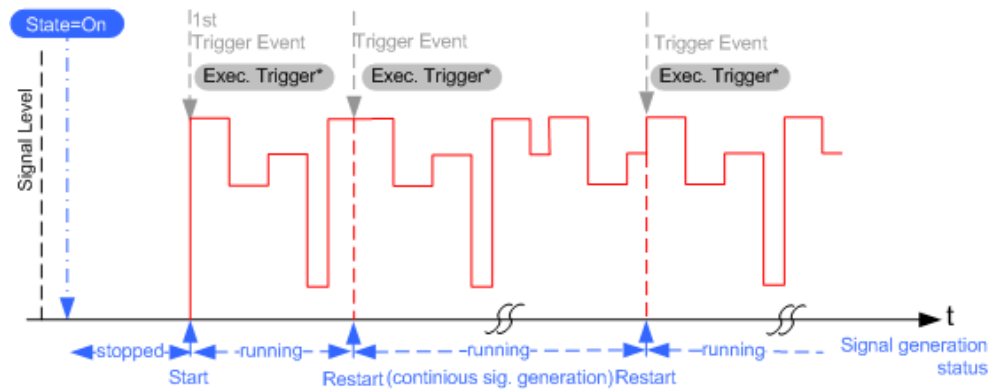


**Figure 4-6: Trigger mode retrigger**

\* = Internal trigger event (to simplify the description)

Compare the shape and the length of the red curve in single mode and in retrigger mode. The first part of the curve in retrigger mode is shorter. The signal generation is interrupted due to the subsequent trigger event.

- **Armed auto**

The instrument starts the signal generation only when a trigger event occurs and then generates a continuous signal. An "Arm" stops signal generation. A subsequent trigger event causes a restart of the signal generation.

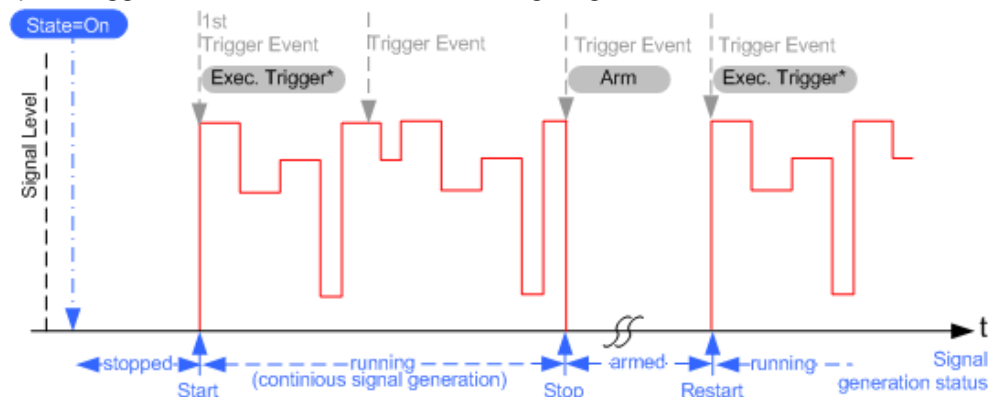

**Figure 4-7: Trigger mode armed auto**

\* = Internal trigger event (to simplify the description)

- **Armed retrigger**

The instrument starts the signal generation only when a trigger event occurs and then generates a continuous signal. Every subsequent trigger event causes a restart of the signal generation.

An "Arm" stops the signal generation. A subsequent trigger event causes a restart.



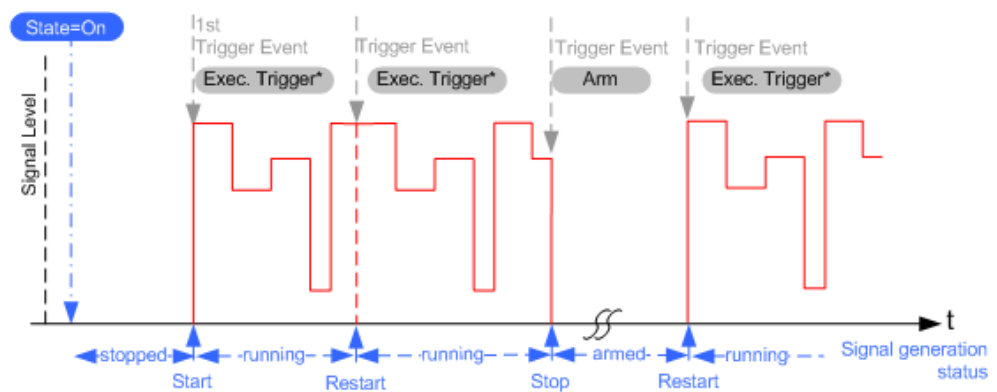


Figure 4-8: Trigger mode armed retrigger

\* = Internal trigger event (to simplify the description)

### Impact of the additional trigger settings

The R&S SMBV100B provides a set of settings to configure the behavior upon receiving of a trigger signal. For example:

- Suppressing trigger events
- Delaying the instrument's response on trigger events
- Adjusting the signal calculation start time in relation to the trigger event.

### Avoiding accidental trigger events

The following trigger settings enhance the flexibility of the trigger system and can help to avoid accidental trigger events.

- "Threshold Trigger Input"  
Defines the voltage level of the trigger signal where the R&S SMBV100B generates a trigger event. Trigger signals below the trigger threshold are ignored.
- "Trigger Input Slope"  
Specifies the edge (rising or falling edge) of the trigger signal that is to provide the trigger event.
- "Impedance Trigger Input"  
Specifies the input impedance of the trigger signal.



### Starting the signal generation with the first sample

By default, the instrument starts the signal calculation simultaneously with the receiving of the external trigger event. Because of the signal propagation time and the instrument's processing time, the first samples are cut off and no signal is output.

This default behavior, however, can cause problems if short signal sequences are generated. To overcome this problem, the instrument provides the special parameter "Sync. Output to (External) Trigger". If this parameter is disabled, the signal output begins after elapsing of the processing time and starts with sample 0. That is, the complete signal is output (compare both figures in [Table 4-4](#)).



Table 4-4: Impact of the parameter Sync. Output to (External) Trigger

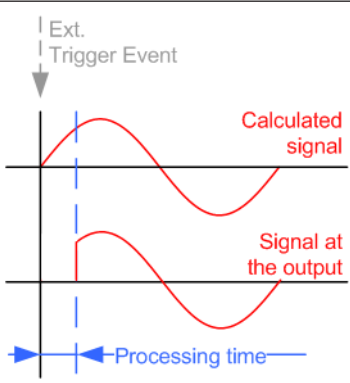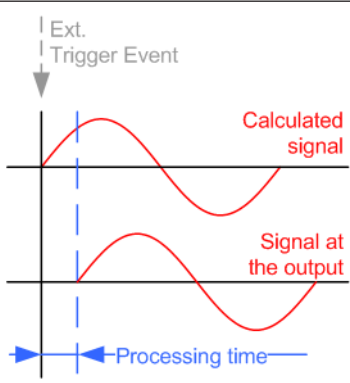"Sync. Output to (External) Trigger = On"	"Sync. Output to (External) Trigger = Off"
 <p>Suitable for long signal sequences</p> <p>The output signal is synchronous to the trigger event after elapsing of the internal processing time.</p> <p>In <a href="#">primary-secondary instrument mode</a>, this setting ensures that once achieved, synchronization is not lost if the baseband signal sample rate changes.</p> <p>See also <a href="#">Chapter 9.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"</a>, on page 459.</p>	 <p>Suitable for triggering of short signal sequences with signal duration comparable with the processing time of the instrument</p>

### Suppressing and delaying trigger events

The main focus of the following features is the mobile communication standards.

- "(External) Trigger Delay"  
You can apply a definable number of symbols to delay the **start** trigger event of an externally supplied trigger signal  
This feature is useful to:
  - Simulate the time delay between a base station signal and a user equipment signal, for example during base station tests
  - Compensate for known propagation delays or a timing offset in the test setups
- "(External) Trigger Inhibit"  
You can suppress the effect of a restarted trigger signal in the "Retrigger" trigger mode for a definable number of symbols.  
During base station tests, for example, this feature enables the trigger suppression for a definable number of frames and yet the signal can still be generated synchronously. In each frame, the base station generates a trigger which would cause a signal generation restart every time but for the suppression.

#### Example:

A trigger delay of 1000 samples means that after a trigger event, any subsequent trigger signal is ignored for the space of 1000 samples.



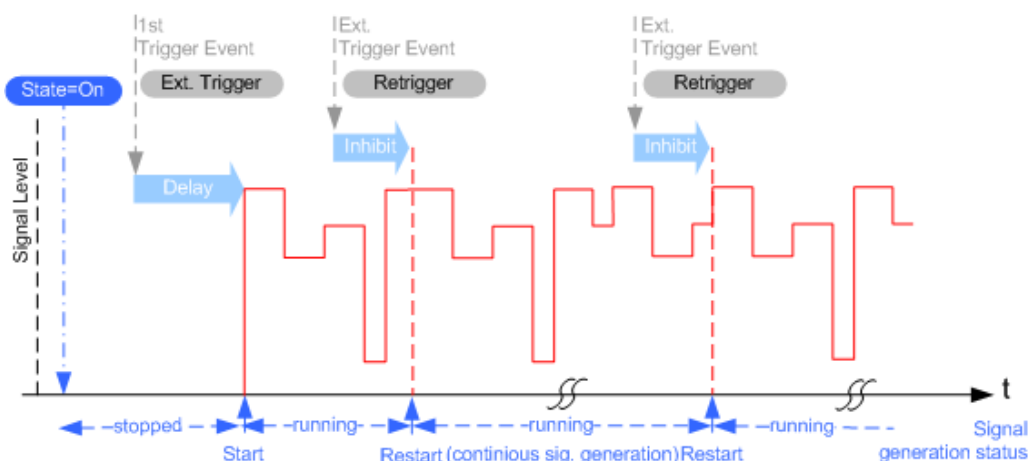


Figure 4-9: Trigger delay and trigger inhibit in trigger mode retrigger

### Specifying delay and inhibit values

Trigger delay and inhibit values are expressed in the units of the generated signal, e.g. in samples or symbols. You can also define the exact delay or inhibit period as a time value, e.g. in seconds.

Trigger delay values  $t_{\text{delay}}$  depend on the instrument hardware. The table illustrates an exemplary instrument configuration and related  $t_{\text{delay}}$  values in samples (or symbols) and in seconds.

Option	Max. $r_s$ / MHz	$t_{\text{delay}}$ / samples	$t_{\text{delay}}$ / s
Base unit	600	0 to depends on sample rate	0 to 1833

For more information, see the data sheet.

### Example: Trigger delay and ARB clock frequency

The example is based on an ARB signal with 1 MHz clock frequency ("Baseband > ARB > Clock Frequency = 1 MHz").

Step 1: Enable the following settings:

- "ARB > Trigger In > Mode > Armed Auto"
- "ARB > Trigger In > Source > External Global Trigger 1"
- "ARB > Trigger In > External Delay Unit > Samples"
- "ARB > Trigger In > External Delay = 100 Samples"

The parameter "Actual External Delay = 100 us" displays the time delay in seconds.

External Delay Unit	Sample	Processing Time	---
External Delay	100.00 Samples	Actual External Delay	100.000 0 $\mu$ s



Step 2: Enable the following settings:

- "ARB > Trigger In > External Delay Unit > Time"
  - "ARB > Trigger In > Specified External Delay = 10 us"
- Logically, the "Actual External Delay" changes to 10 us.

External Delay Unit	Time	Processing Time	---
Specified External Delay	100.000 0 µs	Actual External Delay	100.000 0 µs

Step 3:

- Switch to "ARB > Trigger In > External Delay Unit > Samples".

The value of "ARB > Trigger In > External Delay" is 10 samples.

External Delay Unit	Sample	Processing Time	---
External Delay	10.00 Samples	Actual External Delay	10.000 0 µs

### Receiving and providing trigger signals

In test setups that combine the signal of two or more instruments it is often required that:

- The signal generation starts at a defined moment
- The signal generation starts simultaneously (or with an exactly defined delay) in all involved instruments.

For information on **simultaneous signal generation start in multiple instruments**, see [Chapter 9.3, "Generating time-aligned baseband signals"](#), on page 457.

#### 4.4.1.4 Supported modulation signals

The R&S SMBV100B supports a range of predefined digital and analog modulation signals. This section focuses on the possibility to digitally modulate the baseband signal.

The analog modulation methods provided for shifting the frequency bandwidth of the RF signal are described in [Chapter 7.11, "Analog modulations"](#), on page 359.

In communication techniques, commonly used digital modulation schemes are based on keying. From the several existing keying techniques, this instrument supports ASK (amplitude shift keying), FSK (frequency shift keying), PSK (phase shift keying), and QAM (quadrature amplitude modulation).

The digital modulation procedure is described by mapping. That is, by the assignment of I and Q values (PSK and QAM) or frequency shifts (FSK) to every modulation symbol. The resulting modulated signal is graphically represented by a constellation diagram, in that each possible symbol is represented by a discrete point on a complex plane. The number of used bits per symbol is a modulation parameter. The exact position of the symbols on the constellation diagram is determined by the used coding scheme. You can also change the symbol position by applying rotation.



Most of the provided modulation schemes are implemented according to a communication standard. The QAM procedures 16QAM, 32QAM, 64QAM, for instance, have been produced in accordance with ETSI standard ETS 300429 for digital video broadcasting (DVB). The QAM procedures 256QAM and 1024QAM are not specified in this standard, but have been produced according to the same basic principles.

For all FSK procedures you can set the symbol rate  $f_{\text{SYMB}}$  up to a maximum value, see data sheet. The frequency deviation (FSK deviation) of the MSK modulation is permanently set to  $\frac{1}{4}$  of the symbol rate. Also a variable FSK modulation with definable deviation per symbol is available and for even greater flexibility. A user-defined modulation mapping can be applied, see ["User mapping"](#) on page 102.

### User mapping

A user-defined modulation-mapping file can also be selected as modulation-mapping source. Valid files have the extension `*.vam` and can be created with the Rohde & Schwarz software tool-mapping wizard. The mapping wizard "mapwiz" is a tool from Rohde & Schwarz designed for editing modulation schemes (for example QPSK, 32QAM).

The main purpose of "mapwiz" is the assignment of logical symbol numbers to constellation points and the selection of modulation-specific parameters. Also, the tool supports the creation of nearly any arbitrarily chosen constellation diagram. The output of "mapwiz" is a mapping file (`*.vam`) that can be imported into a R&S SMBV100B. The program was developed on a 32-bit Microsoft Windows platform under MATLAB.

For more information, see "Introduction to "mapwiz" Mapping Editor" at the Rohde & Schwarz webpage.

The remote commands required to define the modulation settings are described in [Chapter 13.17.4.2, "SOURce:BB:DM subsystem"](#), on page 820.

Related settings:

- [Chapter 4.5.3.4, "Modulation settings"](#), on page 125

#### 4.4.1.5 Supported coding schemes

Coding is a technique used to improve the signal properties and signal reception and is required only when using some types of modulation. In general, the coding schemes are applied before modulation. The modulation symbols are coded directly before I and Q values or frequency shifts are assigned. The applied coding is directly related to the selected modulation methods. The relation implies that coding schemes are not freely combinable with the modulation methods.

Refer to [Chapter 4.5.5.1, "Common coding algorithms"](#), on page 145 for overview on the available coding combinations. This section also defines the modulation formats for which the various coding procedures can be used.

Related settings:

- ["Coding"](#) on page 122



#### 4.4.1.6 Supported baseband filters

In the wireless transmission technique, filters are applied to shape the baseband signal before it is modulated on the RF. The selected baseband filter type and shape affect the output stream, especially while generating broadband signals. If the filter is too narrow, it cuts the signal. If the filter is too wide, the signal could be distorted by some unwanted signals.

To fulfill wide range of requirements, the R&S SMBV100B offers a wide selection of predefined baseband filters. The predefined filters are designed for the special spectrum characteristics of the different communication standards. However, depending on the selected filter form one or more filter parameters are provided for even more precise adjustment of the filter characteristic. You can select, for example, steeper edges or change the transition bandwidth. For more information on the provided settings, see ["Impact of the filter parameters"](#) on page 103.

The selection of user-defined filters offers even more flexibility. Use these filters if you need to filter with filters of complex or proprietary form are required. For more information, refer to ["User filter"](#) on page 103.

##### Predefined baseband filters

See [Chapter 4.5.5.2, "Predefined baseband filters"](#), on page 147 for an overview of available baseband filters.

##### User filter

The user filter file must have extension `*.vaf` and can be created with the Rohde & Schwarz software tool filter wizard.

The filter wizard (filtwiz) is a tool from Rohde & Schwarz designed for creating filter files that can be imported on a R&S SMBV100B. Its main purpose is the conversion of user-defined finite impulse response (FIR) filters into the filter format (`*.vaf`). Beyond this filt wiz provides designs for standard filters, e.g. root raised cosine (RRC), Gaussian.

The program was developed on a 32-bit Microsoft Windows platform under MATLAB.

For more information, see "Introduction to "filtwiz" Filter Editor" at the Rohde & Schwarz webpage.

The remote commands required to define the filter settings are described in [Chapter 13.17.4.2, "SOURce:BB:DM subsystem"](#), on page 820 and the corresponding section in the user manual of each firmware option.

Related settings:

- [Chapter 4.5.3.5, "Filter settings"](#), on page 127
- Filter settings in the dialogs of the firmware options

##### Impact of the filter parameters

The following is a simple description of the filter parameters and the way they affect the main filter characteristics. Changing filter parameters is an effective way to ensure that




the entire bandwidth of the desired signal is allowed to pass and adjust the filter form to reach the spectrum mask requirements.

### Cut Off Frequency

The cut-off frequency or corner frequency is a filter characteristic that defines the frequency at the 3 dB down point. This frequency is bound to the transition band; here the filter characteristic changes from the passband to the stopband, where the signal is suppressed.

### Rolloff Factor

The rolloff factor is a measure for the excess bandwidth compared to the ideal bandwidth of a "brick like" filter. The roll off factor affects the steepness of the filter flanks. A "Rolloff Factor" = 0 would result in the steepest theoretically possible flanks ; values near to 1 make the flanks more flat.

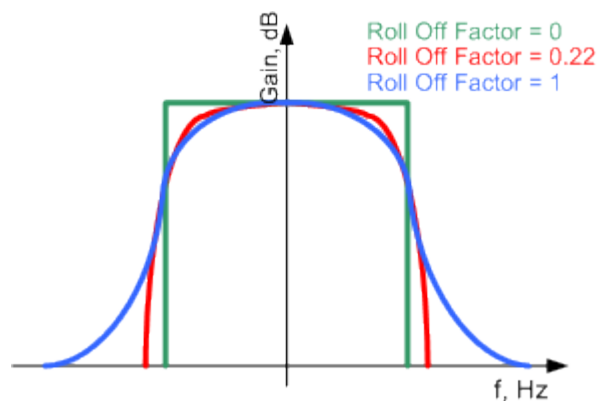

### Passband

The passband describes the frequency span that the filter passes unchanged. The total passband of a filter is given as follows:


$$\text{Bandwidth} = (1 + \text{"Roll Off Factor"}) * \text{"Symbol Rate"}$$

### Cut Off Frequency Shift

The "Cut Off Frequency Shift" affects the cut-off frequency in the way that the filter flanks are "moved" and the passband increases by "Cut Off Frequency Shift" \* "Sample Rate":

$$\text{Cut Off Frequency} = (1 + \text{"Cut Off Frequency Shift"}) * \text{"Sample Rate"}$$



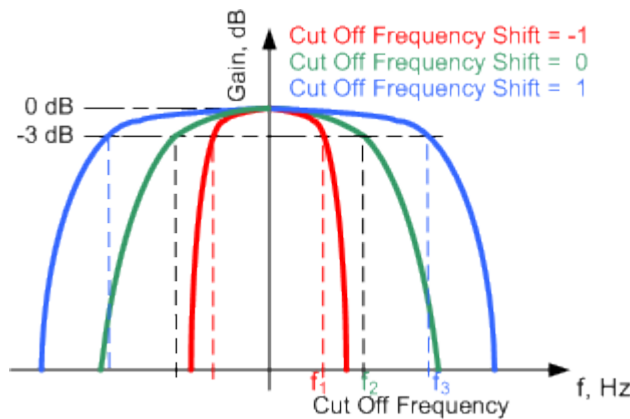

- A "Cut Off Frequency Shift" = -1 results in a very narrow-band filter
- Increasing the value up to 1 makes the filter more broad-band
- By "Cut Off Frequency Shift" = 0, the -3 dB point is at the frequency determined by the half of the selected "Sample Rate".

#### 4.4.1.7 Methods for optimizing the crest factor

Communication standards utilizing higher order modulation techniques or using multiple carrier and complex signals consisting of the signals of more than one digital standard can feature a high crest factor. The signals of some digital standards can have high crest factors also particularly with many channels and long sequences.

The **crest factor** represents the ratio of the peak voltage value to the RMS voltage value, i.e. the peak to average ratio (**PAR**). The higher the crest factor and the resulting dynamics of a signal, the greater the requirement for a power amplifier fed by the signal to be linear. A high crest factor arises for instance, when in a multi carrier signal the carriers feature an identical start phase. This is based on the fact that the carriers are periodically superposed that leads to high peak voltages in relation to the RMS voltage values.

High crest factors entail two basic problems:

- The nonlinearity of the power amplifier (compression) causes intermodulation which expands the spectrum (spectral regrowth).
- Since the level of the D/A converter is relative to the maximum value, the average value is converted with a relatively low resolution. This leads to a high quantization noise.

Both effects increase the adjacent-channel power.

#### Direct approaches

At the individual signal generation stages, the R&S SMBV100B offers different direct approaches aimed to reduce the crest factor. While the corresponding parameters are enabled, the implemented algorithms ensure minimizing the crest factor or achieving of predefined target crest factor by applying of automatic settings. Methods of reducing the crest factor differ regarding both the optimization achievable and the time required for computation.



The provided crest factor reduction methods include:

- Internal calculation of optimized carrier phases for the individual carriers in a multi carrier signal
- Automatic calculation of the carrier start phases in a multi-carrier continuous wave signal

### Applying clipping and filtering

Another common and simple approach for achieving a lower PAR is the combination of clipping and filtering. In several of the firmware options, like 3GPP FDD or CDMA2000, the instrument provides the possibility to enable baseband clipping and to select the baseband filter and, when applicable, to adjust the filter characteristics.

- **Clipping** is a technique that applies a wanted distortion to the signal. The principle includes specifying a threshold, finding out the signal peaks once the defined limits are exceeded and clipping them off. The level limit is specified as a percentage of the highest peak value. Because clipping is done before filtering, the procedure does not influence the spectrum. The error vector magnitude (EVM) however increases.

The instrument offers two clipping modes:

- **Vector  $|I + q|$**

The clipping limit is related to the amplitude  $|I + q|$ . The I and Q components are mapped together, the angle is retained.

- **Scalar  $|I| + |q|$**

The clipping limit is related to the absolute maximum of all the I and Q values  $|I| + |q|$ . The I and Q components are mapped separately, the angle changes.


However, signal clipping not only changes the peak value but also the average value and the effect on the crest factor is unpredictable.




**Example:**

The following figures demonstrate the effect of the clipping on the crest factor for typical scenarios.

Enabled is clipping with vector mode ( $|I+q|$ ), using a signal configuration with 2 active channels.

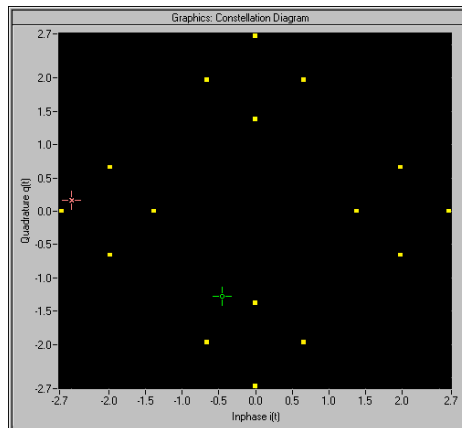

Constellation diagram of the signal without clipping, shows the level mapping

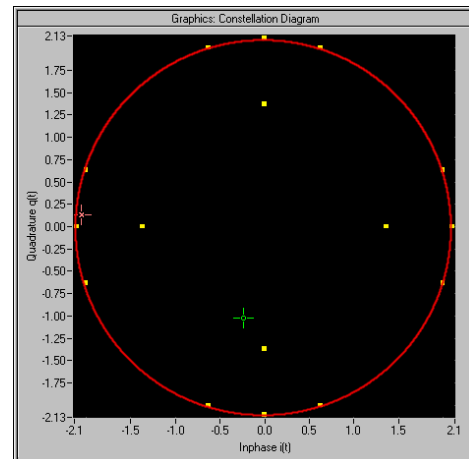

Constellation diagram with clipping level 80%, vector mode ( $|I+q|$ ). The circle emphasizes the changed constellation points

- **Filtering** is applied subsequently. The used filters are specially designed so that they filter out the distortion.

#### 4.4.2 Common settings

The main baseband dialog for a digital standard follows a repeating dialog structure including the tabs "General", "Trigger In", "Marker" and "Clock".

The "General" tab comprises the primary settings of the standard, the functions for storing and recalling settings. It also provides access to further functions and dialogs, like the "Filter" settings.

The "Trigger In", "Marker" and "Clock" tabs comprise the settings related to the corresponding function.

In the following, we use the "Custom Digital Mod" dialog to explain the provided common settings. The related remote control commands are listed in the order "Custom Digital Mod", "ARB", "Multi Carrier CW".

##### About trigger marker clock signals

For background information on these signals, refer to:

- [Chapter 4.4.1.3, "Baseband trigger signals"](#), on page 93.
- [Chapter 4.4.1.2, "Regular marker output signals"](#), on page 91
- ["Clock signals"](#) on page 88




**Settings:**

- [Trigger settings](#)..... 108
- [Marker settings](#)..... 113
- [Clock settings](#)..... 114
- [Global connectors settings](#)..... 115

**4.4.2.1 Trigger settings**

Access:

- Select "Baseband" > "Custom Digital Mod" > "Trigger In".

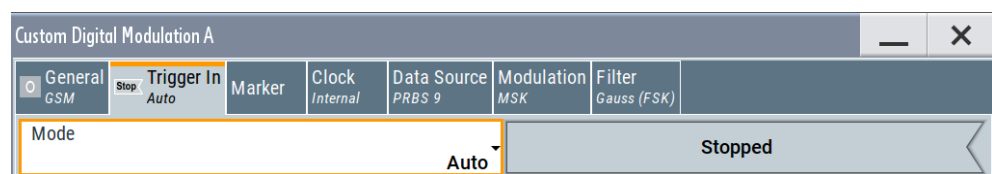

This tab provides settings to select and configure the trigger, like trigger source, trigger mode and trigger delays, and to arm or trigger an internal trigger manually. The header of the tab displays the status of the trigger signal and trigger mode. As in the tabs "Marker" and "Clock", this tab provides also access to the settings of the related connectors.

**Routing and activating a trigger signal**

1. Define the effect of a trigger event and the trigger signal source.
  - a) Select "Trigger In" > "Mode".
  - b) Select "Trigger In" > "Source".
2. For external trigger signals, define the connector for signal input. See [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115.  
 You can map trigger signals to one or more User x connectors.  
 Global connectors settings allow you to configure the signal mapping, the polarity, the trigger threshold and the input impedance of the input connectors.
3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".  
 The R&S SMBV100B starts baseband signal generation after the configured trigger event.

**About baseband trigger signals**

This section focuses on the available settings.

For information on how these settings affect the signal, refer to [Chapter 4.4.1, "Basics on signals, modulation formats and filters"](#), on page 86.



**Settings:**

Mode.....	109
Running/Stopped.....	109
Time Based Trigger.....	109
Trigger Time.....	110
Arm.....	110
Execute Trigger.....	110
Source.....	110
Sync. Output to Ext. Trigger/Sync. Output to Trigger.....	111
External Inhibit/Trigger Inhibit.....	111
(External) Delay Unit.....	111
(Specified) External Delay/(Specified) Trigger Delay.....	112
Actual Trigger Delay/Actual External Delay.....	112
Signal Duration.....	112

**Mode**

Selects a regular trigger signal: "Auto", "Retrigger", "Armed\_Auto", "Armed\_Retrigger", or "Single".

For a detailed description on trigger modes, see ["Impact of the trigger modes on the signal generation"](#) on page 94.

Remote command:

[\[:SOURce<hw>\]:BB:DM\[:TRIGger\]:SEQuence](#) on page 834

[\[:SOURce<hw>\]:BB:ARBitrary\[:TRIGger\]:SEQuence](#) on page 890

[\[:SOURce<hw>\]:BB:MCCW\[:TRIGger\]:SEQuence](#) on page 910

**Running/Stopped**

With enabled modulation, displays the status of signal generation for all trigger modes.

- "Running"  
The signal is generated; a trigger was (internally or externally) initiated in triggered mode.
- "Stopped"  
The signal is not generated and the instrument waits for a trigger event.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:RMODe?](#) on page 835

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:RMODe?](#) on page 890

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:RMODe?](#) on page 910

**Time Based Trigger**

Requires trigger "Mode" > "Armed Auto"/"Single".

Activates time-based triggering with a fixed time reference.

The R&S SMBV100B triggers signal generation when its operating system time ("Current Time") matches a specified time trigger ("Trigger Time"). As trigger source, you can use an internal trigger or an external global trigger.

How to: [Chapter 4.4.3, "Time-based triggering"](#), on page 115



Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME\[:STATe\]](#) on page 836

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME\[:STATe\]](#) on page 892

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME\[:STATe\]](#) on page 912

### Trigger Time

Requires trigger "Mode" > "Armed Auto"/"Single".

Sets date and time for a time-based trigger signal.

Set a trigger time that is later than the "Current Time". The current time is the operating system time of the R&S SMBV100B. If you set an earlier trigger time than the current time, time-based triggering is not possible.

How to: [Chapter 4.4.3, "Time-based triggering"](#), on page 115

"Date" Sets the date of the time-based trigger in format YYYY-MM-DD.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME:DATE](#) on page 835

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME:DATE](#)

on page 891

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME:DATE](#) on page 911

"Time" Sets the time of the time-based trigger in format hh:mm:ss.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:TIME:TIME](#) on page 836

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:TIME:TIME](#)

on page 891

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:TIME:TIME](#) on page 911

### Arm

Stops the signal generation until subsequent trigger event occurs.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:ARM:EXECute](#) on page 837

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:ARM:EXECute](#) on page 893

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:ARM:EXECute](#) on page 912

### Execute Trigger

Requires trigger "Source" > "Internal"

Executes the trigger manually.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:EXECute](#) on page 837

[\[:SOURce<hw>\]:BB:ARBitrary:TRIGger:EXECute](#) on page 893

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:EXECute](#) on page 912

### Source

The following sources of the trigger signal are available:

- "Internal"  
The trigger event is executed manually by the "Execute Trigger".
- "External Global Trigger"



The trigger event is the active edge of an external trigger signal provided and configured at the User x connectors.

- "Baseband Sync In"

In primary-secondary instrument mode, secondary instruments are triggered by the active edge of the synchronization signal.

The polarity, the trigger threshold, and the input impedance of the input connectors can be configured in the "Global connectors settings" dialog.

See ["Trigger sources"](#) on page 94

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger:SOURce` on page 834

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:SOURce` on page 890

`[ :SOURce<hw> ] :BB:MCCW:TRIGger:SOURce` on page 910

### **Sync. Output to Ext. Trigger/Sync. Output to Trigger**

Enables signal output synchronous to the trigger event.

For more information, see ["Impact of the additional trigger settings"](#) on page 98.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger:EXTeRnal:SYNChronize:OUTPut`

on page 837

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger[:EXTeRnal]:SYNChronize:OUTPut`

on page 893

`[ :SOURce<hw> ] :BB:MCCW:TRIGger:EXTeRnal:SYNChronize:OUTPut`

on page 913

### **External Inhibit/Trigger Inhibit**

Sets the duration with that any following trigger event is suppressed. In "Retrigger" mode for example, a new trigger event does not cause a restart of the signal generation until the specified inhibit duration does not expire.

Applies for:

- External trigger signal

For more information, see ["Impact of the additional trigger settings"](#) on page 98.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger[:EXTeRnal]:INHibit` on page 839

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger[:EXTeRnal]:INHibit` on page 895

`[ :SOURce<hw> ] :BB:MCCW:TRIGger[:EXTeRnal<ch>]:INHibit` on page 913

### **(External) Delay Unit**

Determine whether the trigger delay is expressed in samples or directly defined as a time period (seconds).

To specify the delay, use [\(Specified\) External Delay/\(Specified\) Trigger Delay](#).

The parameter [Actual Trigger Delay/Actual External Delay](#) displays the delay converted in time.

See also ["Specifying delay and inhibit values"](#) on page 100.



Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger:DElay:UNIT` on page 837

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:DElay:UNIT` on page 894

### (Specified) External Delay/(Specified) Trigger Delay

The name of the parameter and the units the delay is expressed in, changes depending on the parameter [\(External\) Delay Unit](#).

Delays the trigger event provided by:

- The external trigger source
- Other instrument in [primary-secondary instrument mode](#)

Use the settings to:

- Synchronize the instrument with the device under test (DUT) or other external devices
- Compensate for signal delay and align the signals in time

For more information, see:

- ["Impact of the additional trigger settings"](#) on page 98
- ["Specifying delay and inhibit values"](#) on page 100

The parameter [Actual Trigger Delay/Actual External Delay](#) displays the delay converted in time.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :DElay` on page 838

`[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :TDElay` on page 838

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :DElay` on page 894

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :TDElay` on page 894

`[ :SOURce<hw> ] :BB:MCCW:TRIGger [ :EXternal<ch> ] :DElay` on page 913

### Actual Trigger Delay/Actual External Delay

Displays the delay time (in seconds) of an external trigger event or of a trigger event from the other signal path.

See also ["Specifying delay and inhibit values"](#) on page 100.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger [ :EXternal ] :RDElay?` on page 838

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger [ :EXternal ] :RDElay?` on page 895

### Signal Duration

Requires trigger "Mode" > "Single".

Enters the length of the trigger signal sequence.

Use this parameter, for example, for the following applications:

- To output the trigger signal partly.
- To output a predefined sequence of the trigger signal.

Remote command:

`[ :SOURce<hw> ] :BB:DM:TRIGger:SEnGth` on page 835

`[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:SLUNit` on page 892


`[ :SOURce<hw> ] :BB:MCCW:TRIGger:SEnGth` on page 912



4.4.2.2 Marker settings

Access:

► Select "Baseband" > "Custom Digital Mod" > "Marker".

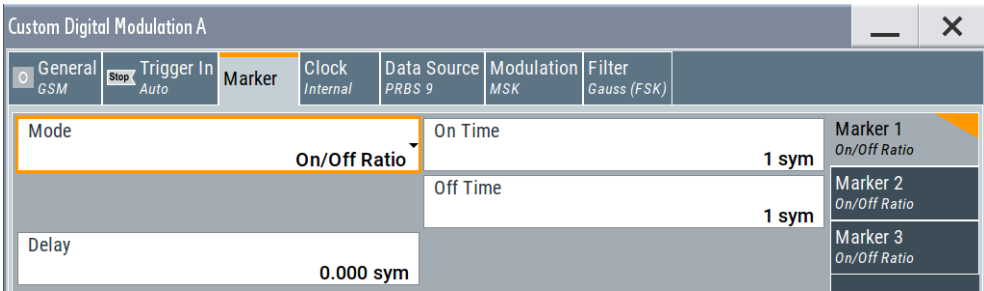

This tab provides settings to select and configure the marker output signal including marker mode and marker delay.

Routing and activating a marker signal

- 1. To define the signal shape of an individual marker signal "x", select "Marker" > "Marker x" > "Mode".
- 2. Optionally, define the connector for signal output. See [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115.  
You can map marker signals to one or more User x connectors.
- 3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".  
The R&S SMBV100B adds the marker signal to the baseband signal. Also, R&S SMBV100B outputs this signal at the configured User x connector.

About marker output signals

This section focuses on the available settings.

For information on how these settings affect the signal, refer to [Chapter 4.4.1, "Basics on signals, modulation formats and filters"](#), on page 86.

Settings:

Mode.....	113
Delay.....	114

Mode

Marker configuration for up to 3 markers. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode.

How to: ["Routing and activating a marker signal"](#) on page 113

"CList"                    A marker signal as defined in the selected control list.



Remote command:

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:MODE on page 839

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider on page 840

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?

on page 841

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:PATtern on page 840

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:OFFTime on page 840

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:ONTime on page 840

ARB: see "Marker Mode" on page 166

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:MODE on page 914

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider on page 915

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?

on page 915

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:PATtern on page 914

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:ONTime on page 914

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:OFFTime on page 914

### Delay

Delays the marker signal at the marker output relative to the signal generation start.

Variation of the parameter "Marker x" > "Delay" causes signal recalculation.

Remote command:

[ :SOURce<hw> ] :BB:DM:TRIGger:OUTPut<ch>:DELay on page 841


[ :SOURce<hw> ] :BB:ARBitrary:TRIGger:OUTPut<ch>:DELay on page 897

[ :SOURce<hw> ] :BB:MCCW:TRIGger:OUTPut<ch>:DELay on page 915

#### 4.4.2.3 Clock settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Clock".

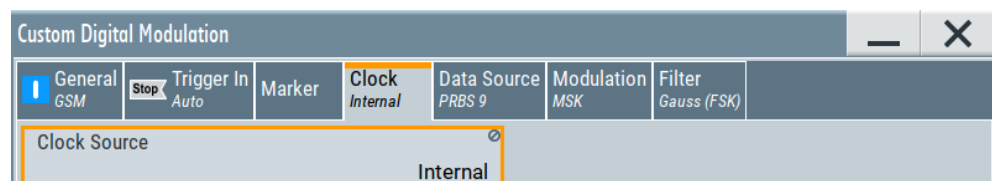

This tab provides clock source settings.

### Defining the clock

1. Select "Clock" > "Source" to define the source of clock signal.
2. For external clock signals, define the connector for signal input. See [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115.  
You can map clock signals to one or more User x connectors.

Global connectors settings allow you to configure the signal mapping, the polarity, the trigger threshold and the input impedance of the input connectors.



3. Activate baseband signal generation. In the block diagram, set "Baseband" > "On".  
The R&S SMBV100B starts baseband signal generation with a symbol rate that equals the clock rate.

### About clock signals

This section focuses on the available settings.

For information on how these settings affect the signal, refer to [Chapter 4.4.1, "Basics on signals, modulation formats and filters"](#), on page 86.

### Settings:

[Clock Source](#)..... 115

#### Clock Source

Selects the clock source.

- "Internal"  
The instrument uses its internal clock reference.

How to: ["Defining the clock"](#) on page 114

See also ["Clock signals"](#) on page 88.

Remote command:

[\[:SOURce<hw>\]:BB:DM:CLOCK:SOURce](#) on page 841

[\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:SOURce](#) on page 898


[\[:SOURce<hw>\]:BB:MCCW:CLOCK:SOURce](#) on page 915

#### 4.4.2.4 Global connectors settings

Accesses a dialog to configure global connectors.

The button is available in the following dialogs or tabs:

- "Trigger / Marker / Clock" dialog that is accessible via the "TMC" block in the block diagram.
- "Trigger In", "Marker" and "Clock" tabs that are accessible via the "Baseband" block in the block diagram.



See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

#### 4.4.3 Time-based triggering

To synchronize signal generation of the R&S SMBV100B to a common time reference, use the time-based trigger. Synchronization is useful for time-sensitive signal generation tasks.


These tasks meet, for example, the following requirements:

- Absolute time reference for radar signal generation




- Radar system synchronization to a common time
- GNSS simulation time synchronization to GPS time

### Test setup for coarse external time reference

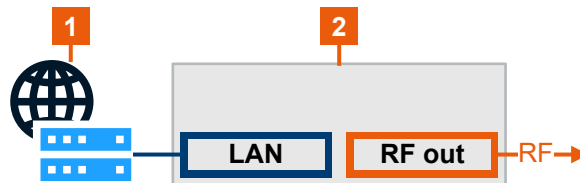

1 = NTP server  
2 = R&S SMBV100B

### Test setup for fine external time reference

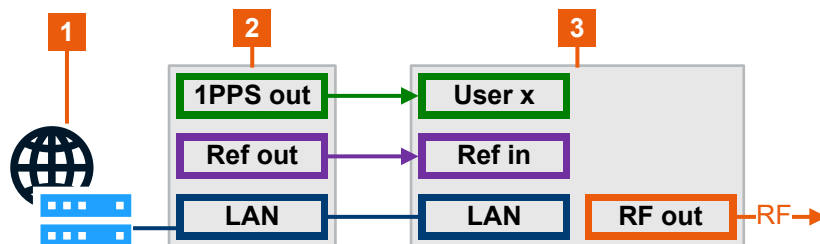

1 = NTP server  
2 = Time reference source  
3 = R&S SMBV100B

The following step-by-step instructions provide information on how to trigger signal generation to a specific time reference. These instructions use the ARB generator as baseband signal source. The configuration in other baseband configuration dialogs is analogous.

- ["To access time-based trigger settings"](#) on page 116
- ["To trigger to the internal time reference"](#) on page 117
- ["To trigger coarsely to an external time reference"](#) on page 117
- ["To trigger finely to an external time reference"](#) on page 118


### To access time-based trigger settings

1. Select "Baseband" > "ARB" > "Trigger In".



2. Select "Mode" > "Single"/"Armed Auto".

For these trigger modes, the R&S SMBV100B provides settings to trigger baseband signal generation at a defined time reference. You can configure external or internal trigger events. The configuration of these events is specific for each baseband signal.

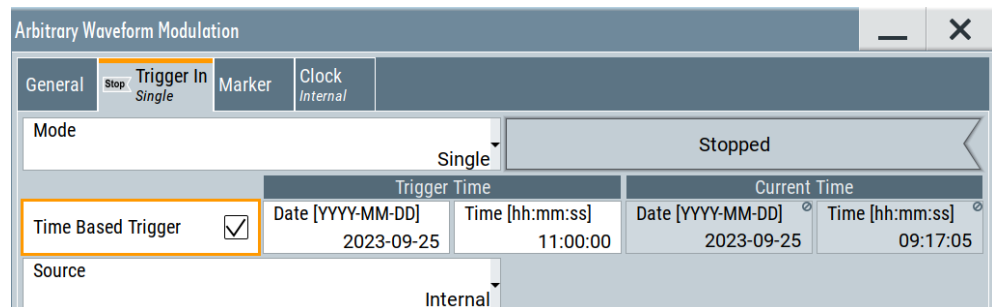

### To trigger to the internal time reference

To trigger to the operating system time or an arbitrary internal time at the R&S SMBV100B, proceed as follows:

1. Access time-based trigger settings of your digital baseband signal.  
For example, see ["To access time-based trigger settings"](#) on page 116.
2. To specify "Trigger Time" settings, set "Time" and "Date", for example:
  - a) Set "Time" > "11:00:00".
  - b) Set "Date" > "2023-09-25".
3. Select "Source" > "Internal".
4. To activate signal generation at this specified time, select "Time Based Trigger" > "On".
5. Optionally, define an arbitrary internal time.  
To edit the "Current Time" settings, unlock the operating system time:
  - a) Select "System Config" > "Setup" > "Security" > "Protection".
  - b) Enter protection level 1 password.  
See ["Protection levels"](#) on page 593.
  - c) Set "Date" and "Time" of the "Current Time" settings as needed.
6. Set "Baseband" > "ARB" > "State" > "On".

The R&S SMBV100B starts signal generation, if the "Current Time" matches the "Trigger Time". The accuracy of the trigger point is on the order of milliseconds. If you need a higher accuracy on the order of microseconds, proceed with ["To trigger finely to an external time reference"](#) on page 118.

### To trigger coarsely to an external time reference

1. Follow the instructions in ["To trigger to the internal time reference"](#) on page 117 until step (2).
2. Connect a suitable external time reference to the "LAN" connector.



This time reference provides time information from an NTP server.

3. Specify the NTP server address:
  - a) Select "System Config" > "Setup" > "Maintenance" > "Date / Time".
  - b) Select "Time Protocol" > "NTP".
  - c) Enter the address of the NTP server.
4. Set "Baseband" > "ARB" > "State" > "On".

The R&S SMBV100B starts signal generation, if the "Current Time" matches the "Trigger Time" from the NTP server. The accuracy of the trigger point is on the order of milliseconds.

If you need a higher accuracy on the order of microseconds, proceed with ["To trigger finely to an external time reference"](#) on page 118.

### To trigger finely to an external time reference

1. Follow the instructions in ["To trigger to the internal time reference"](#) on page 117 until step (2).
2. Connect a suitable external time reference that collects time information from an NTP server:
  - a) For the reference signal, use the "Ref In" connector.
  - b) For the trigger signal, use one of the "User x" connectors, for example, "User 1".

The R&S SMBV100B expects a 10 MHz reference signal at the "Ref In" connector and a 1PPS trigger signal at the "User x" connector.

3. Configure the R&S SMBV100B for input of the external trigger signal:
  - a) Select "Baseband" > "ARB" > "Trigger In".
  - b) Select "Source" > "External Global Trigger".
  - c) Select "Global Connectors" > "Routing".
  - d) For "Connector" > "User 1", select "Direction" > "Input".
  - e) Select "Signal" > "Global Trigger 1"
4. Configure the R&S SMBV100B for input of the reference signal:
  - a) In the status bar, select "Ext Ref" > "Reference Frequency".
  - b) Select "Source" > "External".
  - c) Select "External Reference Frequency" > "10 MHz".
5. Select "Baseband" > "ARB" > "Trigger In".
6. Select "Time Based Trigger" > "On".
7. Set "Baseband" > "ARB" > "State" > "On".



## 4.5 Generating custom digital modulated signals

The R&S SMBV100B can generate digital modulation signals with user-definable characteristics. The baseband filtering and the symbol rate can be set within wide limits.

### 4.5.1 Required options

The equipment layout for generating the digital modulation signals includes:

- Base unit
- Option custom digital modulation/baseband real-time extension (R&S SMBVB-K520)

### 4.5.2 About the custom digital modulation

An introduction to the supported filter, modulation, and coding schemes are provided in:

- [Chapter 4.4.1.6, "Supported baseband filters"](#), on page 103
- [Chapter 4.4.1.4, "Supported modulation signals"](#), on page 101
- [Chapter 4.4.1.5, "Supported coding schemes"](#), on page 102.

#### **Interdependency between selected modulation type and coding scheme and handling of conflicting settings**

The applied coding is directly related to the selected modulation methods. The available coding schemes listed in [Chapter 4.5.5.1, "Common coding algorithms"](#), on page 145 are not freely combinable with modulation methods.

Obviously, having selected a modulation procedure, not every combination of the further modulation parameters "Symbol Rate" and "Coding" is possible. These restrictions inevitably result in conflicting settings if you change a parameter and leads to a prohibited combination.

An inappropriate change of a parameter triggers a settings conflict, which is indicated by a message on the "Info" line in the display. Although the R&S SMBV100B displays the selected settings, the generated modulation signal does not correspond to this display. The displayed message disappears when a conflict-free setting is selected.

Refer to [Chapter 14, "Troubleshooting and notifications"](#), on page 1074 for a list of the possible settings conflicts and messages in digital modulation.

### 4.5.3 Custom digital modulation settings

Access:

- ▶ Select "Baseband" > "Custom Digital Mod".



The "Custom Digital Modulation" dialog enables direct selection of the data source, standard, symbol rate, coding, modulation type and filter.

The dialog is divided into several tabs. In each case, the current setting is displayed in the tab name.

The remote commands required to define these settings are described in [Chapter 13.17.4.2, "SOURce:BB:DM subsystem"](#), on page 820.


#### Settings:

• <a href="#">General settings</a> .....	120
• <a href="#">Trigger, marker and clock settings</a> .....	122
• <a href="#">Data source settings</a> .....	123
• <a href="#">Modulation settings</a> .....	125
• <a href="#">Filter settings</a> .....	127
• <a href="#">Power ramp control settings</a> .....	130
• <a href="#">Data list editor</a> .....	132
• <a href="#">Control and marker lists editor</a> .....	134

#### 4.5.3.1 General settings

Access:

- Select "Baseband" > "Custom Digital Mod".

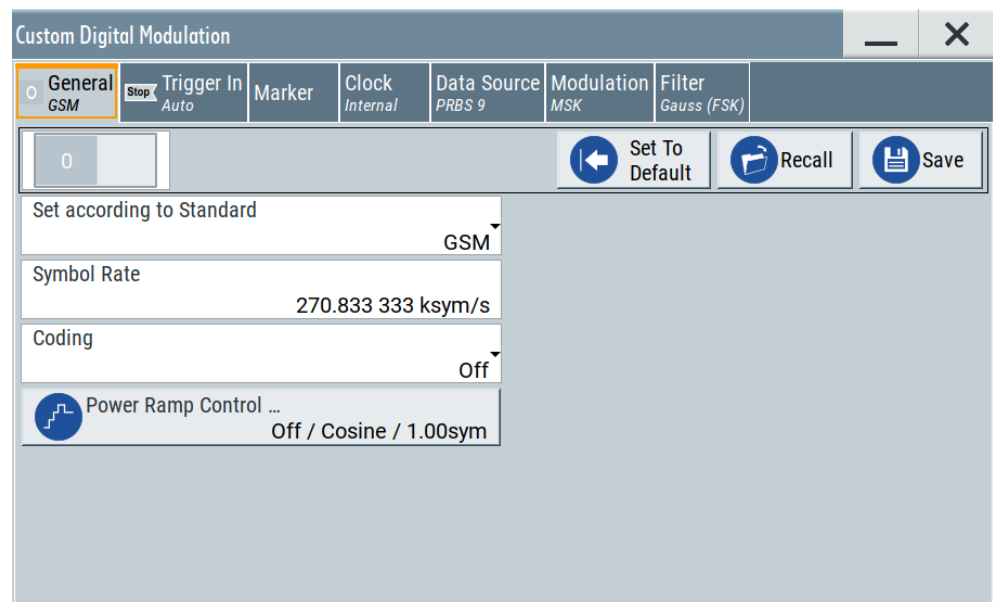

This tab provides access to the default and the save/recall settings, and to a quick selection of a digital modulation according to predefined communication standard.



**Settings:**

State.....	121
Set To Default.....	121
Save/Recall.....	121
Set according to Standard.....	121
Symbol Rate.....	122
Coding.....	122
Power Ramp Control.....	122

**State**

Enables/disables digital modulation. Switching on digital modulation turns off all other digital standards.

The digital modulation is generated in real time (no precalculated signal), and therefore while the digital modulation is enabled, all parameter changes directly affect the output signal.

Remote command:

[ :SOURce<hw> ] :BB:DM:STATe on page 823

**Set To Default**

Calls default settings. The values are listed in [Table 4-5](#).

Remote command:

[ :SOURce<hw> ] :BB:DM:PRESet on page 823

**Save/Recall**

Accesses the "Save/Recall" dialog, that is the standard instrument function for saving and recalling the complete dialog-related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The settings are saved in a file with predefined extension. You can define the filename and the directory, in that you want to save the file.

See also [Chapter 10, "File and data management"](#), on page 508.

Remote command:

[ :SOURce<hw> ] :BB:DM:SETTing:CATalog? on page 825

[ :SOURce<hw> ] :BB:DM:SETTing:DELeTe on page 826

[ :SOURce<hw> ] :BB:DM:SETTing:LOAD on page 826

[ :SOURce<hw> ] :BB:DM:SETTing:STORe on page 826

**Set according to Standard**

Selects a predefined communication standard.

Communication standard

Selects a predefined communication standard. If selected, the firm-ware automatically sets standard-compliant values for the following parameters: "Modulation Type", "Symbol Rate", "Filter" and "Coding". For "Set according to Standard" > "Telemetry - SOQPSK-TG", the "Data Source" is "Data List" only. See [Chapter 4.5.3.3, "Data source settings"](#), on page 123.

See [Table 4-6](#) for an overview of the available standards and standard-compliant settings of the modulation parameters.



- "User" Set automatically, this value indicates a modification made on at least one of the parameters.  
Use the "Save/Recall" function to save and recall customized settings.
- "CW in Baseband" Generates a continuous wave signal as a BPSK modulated signal with "Data Source = All 1".  
This signal is useful for phase coherence applications, and a test signal for testing and debugging.  
**Note:** The selection "CW in Baseband" changes also the data source to "All 1". Subsequent change to a communication standard maintains this data source.

Remote command:

[\[:SOURce<hw>\]:BB:DM:STANdard](#) on page 824

### Symbol Rate

Selects the symbol rate. The value range of this parameter depends on the selected modulation type; the range is automatically redefined.

An error message appears if the selected symbol rate is outside of the redefined range. The symbol rate is set automatically to the maximum allowed value for the new modulation.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SRATe](#) on page 823

### Coding

Selects the coding (see [Chapter 4.4.1.5, "Supported coding schemes"](#), on page 102).

The dialog shows only the coding settings that are permissible for the selected modulation type and installed options (see [Table 4-8](#)). All other coding methods are grayed out.

A subsequent modification to a modulation type for which the selected coding is not available, automatically disables the coding ("Coding = Off").

Remote command:

[\[:SOURce<hw>\]:BB:DM:CODing](#) on page 828

### Power Ramp Control

Accesses the power ramp control dialog, see [Chapter 4.5.3.6, "Power ramp control settings"](#), on page 130.

## 4.5.3.2 Trigger, marker and clock settings

These tabs provide standard settings.

For detailed description, see:

- [Chapter 4.4.2.1, "Trigger settings"](#), on page 108
- [Chapter 4.4.2.2, "Marker settings"](#), on page 113
- [Chapter 4.4.2.3, "Clock settings"](#), on page 114



- [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115


#### 4.5.3.3 Data source settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "Data Source".

This tab provides access to the settings necessary to select and configure the data source, like access to data and list editors or direct selection of PRBS data.

For an overview of the supported data sources, refer to [Chapter 4.4.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 86.

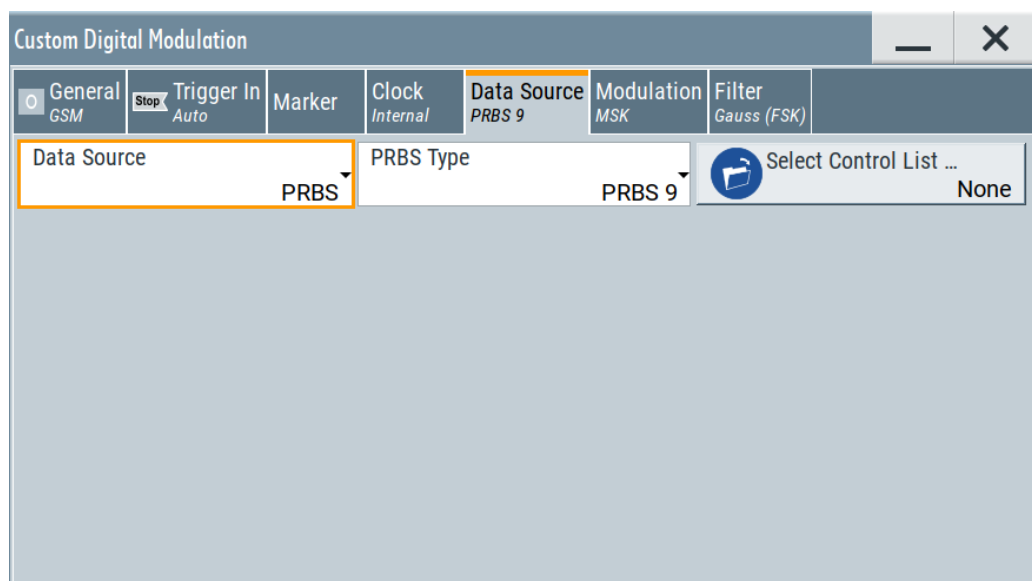

#### Settings:

<a href="#">Data Source</a> .....	123
<a href="#">Select Data List</a> .....	124
<a href="#">Select Control List</a> .....	124
<a href="#">Connector Settings</a> .....	125

#### Data Source

Selects the data source (see [Chapter 4.4.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 86).

The following data sources are available:

"All 0, All 1"      A sequence containing 0 data or 1 data is internally generated.

"PRBS, PRBS Type"

Selects internally generated PRBS data in accordance with the IUT-T. Use the parameter "PRBS Type" to define the length.

Remote command:

`[ :SOURce<hw> ] :BB:DM:PRBS [ :LENGTH ]` on page 825



"Pattern" Use the "Pattern" box to define a bit pattern with a maximum length of 64 bits.

Remote command:

`[ :SOURce<hw> ] :BB:DM:PAThern` on page 824

"Data List"

Binary data from data lists are used, see [Select Data List](#).

Remote command:

`[ :SOURce<hw> ] :BB:DM:DLISt:CATalog?` on page 842

`[ :SOURce<hw> ] :BB:DM:DLISt:SElect` on page 842

Remote command:

`[ :SOURce<hw> ] :BB:DM:SOURce` on page 824

### Select Data List

Accesses the standard "Select List" dialog to select an existing data list or to create a one.

Data lists can be generated externally or internally in the data editor.

- Select the "Select Data List > navigate to the list file \*.dm\_iqd > Select" to select an existing data list.
- Use the standard "File Manager" function to transfer external data lists to the instrument.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one, see [Chapter 4.5.3.7, "Data list editor"](#), on page 132.

See also [Chapter 4.5.4.2, "How to create and assign a data list"](#), on page 140.

Remote command:

`[ :SOURce<hw> ] :BB:DM:DLISt:CATalog?` on page 842

`[ :SOURce<hw> ] :BB:DM:DLISt:SElect` on page 842

`[ :SOURce<hw> ] :BB:DM:DLISt:COpy` on page 845

`[ :SOURce<hw> ] :BB:DM:DLISt:DElete` on page 843

### Select Control List

Accesses the standard "Select List" dialog to select an existing control list or to create a one.

Control lists can be generated externally or internally in the "Control and Marker Lists" editor.

- Select the "Select Control List > navigate to the list file \*.dm\_iqc > Select" to select an existing control list.
- Use the standard "File Manager" function to transfer external lists to the instrument.
- Use the "New" and "Edit" functions to create internally new list or to edit an existing one, see [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134.

Irrespectively on the way they are created, control lists are not automatically used (see ["To assign and activate control signals from a control list"](#) on page 139).

Remote command:

`[ :SOURce<hw> ] :BB:DM:CLISt:CATalog?` on page 842

`[ :SOURce<hw> ] :BB:DM:CLISt:SElect` on page 842

`[ :SOURce<hw> ] :BB:DM:CLISt:COpy` on page 845

`[ :SOURce<hw> ] :BB:DM:CLISt:DElete` on page 843



**Connector Settings**

Accesses the connectors settings.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

**4.5.3.4 Modulation settings**


Access:

- Select "Baseband > Custom Digital Mod > Modulation".

This tab provides access to the modulation settings, e.g modulation type, FSK deviation, or modulation depth. The dialog shows the theoretical constellation diagram of the selected modulation.



This section focuses on the available settings. For background information on how the settings affect the signal and the filter characteristics, refer to [Chapter 4.4.1.4, "Supported modulation signals"](#), on page 101.

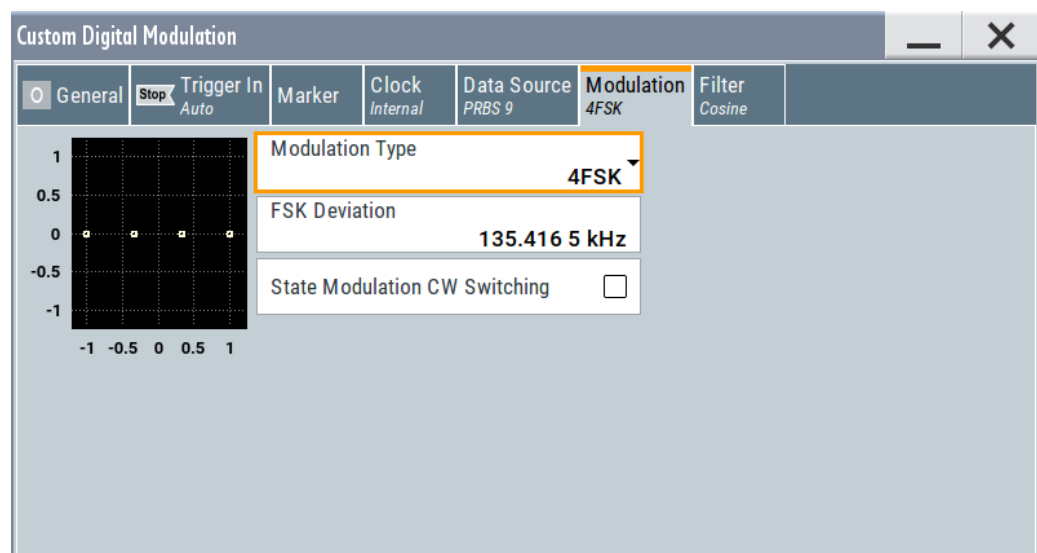**Settings:**

Modulation Type.....	126
Load User Mapping.....	126
ASK Depth.....	126
FSK Deviation.....	126
Angle Alpha.....	126
FSK Type.....	127
Deviation xxxx.....	127
Gamma/Gamma 1.....	127
State Modulation CW Switching.....	127



**Modulation Type**

Selects a modulation type. The associated symbol mapping is displayed.

If the selected "Coding" is not allowed with the configured modulation type, the value of the parameter [Coding](#) is set to "Off".

Refer to [Table 4-7](#) for an overview of the allowed combinations.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FORMat](#) on page 829

**Load User Mapping**

Accesses the "Select List File User Mapping" dialog to select the mapping table (see ["User mapping"](#) on page 102). The dialog provides all standard file management functions.

Remote command:

[\[:SOURce<hw>\]:BB:DM:MLIST:SElect](#) on page 842

[\[:SOURce<hw>\]:BB:DM:MLIST:CATalog?](#) on page 842

[\[:SOURce<hw>\]:BB:DM:MLIST:DElete](#) on page 843

**ASK Depth**

Sets the modulation depth  $m$  for ASK modulation.

$$m = (Amplitude_{max} - Amplitude_{min}) / (Amplitude_{max} + Amplitude_{min})$$

Remote command:

[\[:SOURce<hw>\]:BB:DM:ASK:DEPTh](#) on page 829

**FSK Deviation**

Sets the frequency deviation for FSK modulation. The range of values depends on the selected [Symbol Rate](#) (see data sheet).


Whenever "MSK" is selected, the deviation corresponds to 1/4 of the symbol rate and cannot be changed.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FSK:DEVIation](#) on page 830

**Angle Alpha**

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

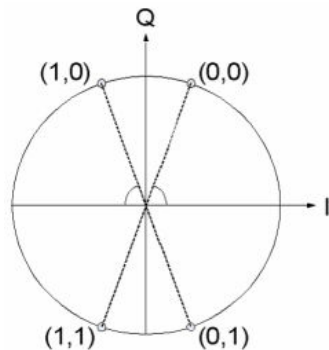

Remote command:

[\[:SOURce<hw>\]:BB:DM:AQPSk:ANGLE](#) on page 829



**FSK Type**

For "Variable FSK", selects the FSK modulation type.

Available are 4FSK, 8FSK and 16FSK.

Remote command:

`[ :SOURce<hw> ] :BB:DM:FSK:VARiable:TYPE` on page 830

**Deviation xxxx**

For "Variable FSK", sets the deviation of the associated symbol. The number of symbols depends on the selected modulation type. The value of each symbol is indicated in binary format, i.e.  $x$  can be 1 or 0.

Remote command:

`[ :SOURce<hw> ] :BB:DM:FSK:VARiable:SYMBOL<ch0>:DEViation` on page 830

**Gamma/Gamma 1**

Selects the gamma function  $\gamma$  for the 16APSK and 32APSK modulations.

The values in brackets indicate the used code rate according to the DVB-S2 specification.

Remote command:

`[ :SOURce<hw> ] :BB:DM:APSK16:GAMMa` on page 831

`[ :SOURce<hw> ] :BB:DM:APSK32:GAMMa` on page 831

**State Modulation CW Switching**

Enables/disables switching between the digitally modulated and an unmodulated (CW) signal.

Remote command:

`[ :SOURce<hw> ] :BB:DM:SWITChing:STATe` on page 831

**4.5.3.5 Filter settings**

Access:


- Select "Baseband" > "Custom Digital Mod" > "Filter".

This tab provides access to the filter settings, like filter type and if available further filter settings. A simplified diagram shows the filter characteristic of the selected filter.



This section focuses on the available settings. For background information on how the settings affect the signal and the filter characteristics, refer to [Chapter 4.4.1.6, "Supported baseband filters"](#), on page 103.

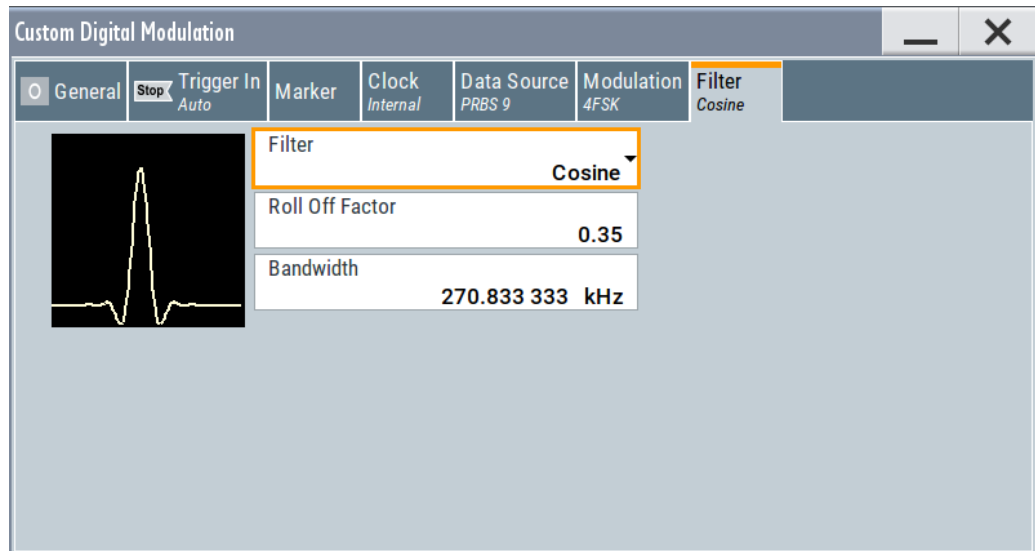

**Settings:**

Filter.....	128
Filter Parameter.....	128
Cutoff Frequency Factor.....	128
Bandwidth.....	129
Load User Filter.....	129

**Filter**

Selects the baseband filter.

Refer to [Chapter 4.5.5.2, "Predefined baseband filters"](#), on page 147 for an overview of the available filter types, their filter shapes and filter parameters.

Remote command:

`[ :SOURce<hw> ] :BB:DM:FILTer:TYPE` on page 827

**Filter Parameter**

Sets the corresponding filter parameter.

The filter parameter offered ("Rolloff Factor" or "BxT") depends on the currently selected filter type.

Remote command:

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:APCO25` on page 827

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:COSine[:ROLLoff]` on page 827

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:GAUSSs` on page 827

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:PGAuss` on page 827

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:RCOSine` on page 827

`[ :SOURce<hw> ] :BB:DM:FILTer:PARAmeter:SPHase` on page 827

**Cutoff Frequency Factor**

(Available for filter parameter "Lowpass" and "APCO25 (LSM)".)

Sets the value of the cutoff frequency factor. The cutoff frequency of the filter can be adjusted to reach spectrum mask requirements.



Remote command:

[ :SOURce<hw> ] :BB:DM:FiLTeR:PaRaMeter:LPASs on page 827

[ :SOURce<hw> ] :BB:DM:FiLTeR:PaRaMeter:LPASSEVM on page 827

[ :SOURce<hw> ] :BB:DM:FiLTeR:PaRaMeter:APCO25Lsm:GAUSS on page 827

[ :SOURce<hw> ] :BB:DM:FiLTeR:PaRaMeter:APCO25Lsm:LOWPass on page 827

### Bandwidth

Determines the bandwidth of the cosine filter, so that the function in  $H(f) = 0$  is fulfilled for  $f \geq (1 + \text{rolloff}) * \text{bandwidth} / 2$ .

Remote command:

[ :SOURce<hw> ] :BB:DM:FiLTeR:PaRaMeter:COSSine:BANDwidth on page 827

### Load User Filter

Calls the dialog "Select User Filter" for selecting a user-defined filter file with extension \*.vaf (see "User filter" on page 103). The dialog provides access to the standard file management functions, like save, load, delete.

Remote command:

[ :SOURce<hw> ] :BB:DM:FLISt:SElect on page 842

[ :SOURce<hw> ] :BB:DM:FLISt:CATalog? on page 842

[ :SOURce<hw> ] :BB:DM:FLISt:DELeTe on page 843



#### 4.5.3.6 Power ramp control settings

Access:

- Select "Baseband" > "Custom Digital Mod" > "General" > "Power Ramp Control".

State	0
Source	Internal
Ramp Function	Cosine
Ramp Time	1.00 sym
Rise Delay	0.00 sym
Fall Delay	0.00 sym
Attenuation	15.0 dB
Power Ramping / Level Attenuation	
In Baseband Only	<input type="checkbox"/>

The dialog comprises the settings used to configure the power ramping, like the source of the control signals, the form of the ramp function and the applied attenuation.

See also ["Power ramping and level attenuation"](#) on page 89.



Power ramping is possible for symbol rates up to 5 MHz. A higher symbol rate disables the power ramping automatically and an error message is output.

#### Settings:

State.....	131
Source.....	131
Ramp Function.....	131
Ramp Time.....	131
Rise Delay.....	131
Fall Delay.....	131
Attenuation.....	132
In Baseband Only.....	132



**State**

Enables/disables power ramping.

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp [ :STATe ] on page 833

**Source**

Defines the source for the power ramp control signals.

"Internal" The control signals as defined in the internal control list are used for control purposes.

See also [Chapter 4.5.4.1, "How to create and assign a control list"](#), on page 138.

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp :SOURce on page 832

**Ramp Function**

Selects the ramp function that describes the shape of the rising and falling edges during power ramp control, see [Figure 4-3](#).

"Linear" The transmitted power rises and falls linear fashion.

"Cosine" The transmitted power rises and falls with a cosine-shaped edge, resulting in a more favorable spectrum than the "Linear" setting.

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp :SHAPE on page 832

**Ramp Time**

Enters the power ramping rise time and the fall time for a burst. The setting is expressed in symbols. See also [Figure 4-3](#).

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp :TIME on page 832

**Rise Delay**

Sets the offset in the rising edge of the envelope at the start of a burst, see [Figure 4-3](#).

A positive value delays (the envelope length decreases) and a negative value causes an advance (the envelope length increases). The setting is expressed in symbols.

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp :RDELaY on page 833

**Fall Delay**

Sets the offset in the falling edge of the envelope at the end of a burst, see [Figure 4-3](#).

A positive value delays (the envelope length increases) and a negative value causes an advance (the envelope length decreases). The setting is expressed in symbols.

Remote command:

[ :SOURce<hw> ] :BB:DM:PRAMp :FDELaY on page 833



**Attenuation**

Determines the level by that the average signal level is attenuated during the signal attenuation period, during the time, that the "Lev\_Att" signal is high. See also [Figure 4-2](#).

For information about the required control signal, refer to ["Power ramping and level attenuation"](#) on page 89.

Remote command:

`[ :SOURce<hw> ] :BB:DM:PRAMp:ATTenuation` on page 833

**In Baseband Only**

Restricts power ramping to the baseband signal.

"Off" Level attenuation is affected via the attenuator stages in the RF section; only the remaining part is attenuated in the baseband. The signal is issued at the RF output with the defined level values.

"On" Level attenuation is affected in the baseband only.

**Note:**

This setting is mandatory in the following cases:

- When only the baseband signal is issued at the I/Q outputs  
It is thus ensured that, with power ramping active, this signal is output with the defined level values.
- For two-path instruments, when one baseband signal is applied to two RF paths.

Remote command:

`[ :SOURce<hw> ] :BB:DM:PRAMp:BBONly [ :STATe ]` on page 833

**4.5.3.7 Data list editor**

The R&S SMBV100B provides the following ways to create a data list file:


- To use the dedicated "Data List Editor" and create a file with extension `*.dm_iqd`, see ["To create data lists manually"](#) on page 140
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 180.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 181.

Access:

1. Select "Baseband > Custom Digital Mod > Data Source > Data List".
2. Select "Select Data List".
3. Navigate to the required directory.
4. Select "New".
5. Enter a filename.



For example, in the directory `/var/user/`, enter "Filename" = `dl_3gpp`

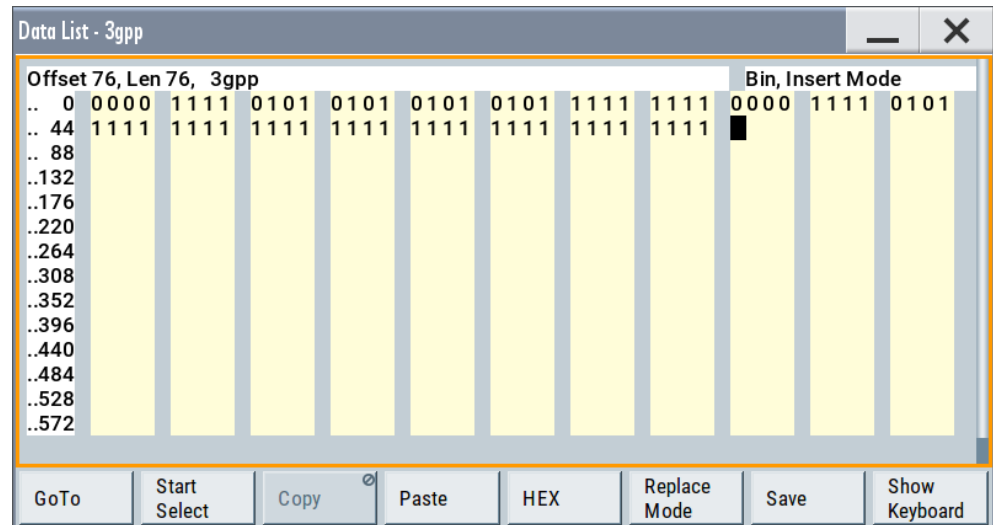

The "Data List Editor" is a list of binary values with a maximum length of  $2^{31}$  bits.

This value corresponds to a file size of approx. 268 Mbyte.

To increase readability, the bits are displayed in groups of four (binary format) or two (hexadecimal format). Also, above the list are displayed: The current cursor position and the length of the list and the list filename are displayed above the list. The offset starts with the value 0 which corresponds to the bit position on the left side of the first row, i.e. the beginning of the list. On the left edge of the editor, the last three offset positions are specified at the beginning of the row.

An existing list can be edited in the insert or replace mode. The upper right corner shows the current mode.

SCPI command:

`[ :SOURce<hw> ] :BB:DM:DLIST:SElect` on page 842

`[ :SOURce<hw> ] :BB:DM:DLIST:DATA` on page 846

`[ :SOURce<hw> ] :BB:DM:DLIST:DATA:APPend` on page 847

The buttons below the binary list simplify the editing.

### Settings:

<a href="#">GoTo</a> .....	133
<a href="#">Start Select/Undo Select</a> .....	134
<a href="#">Copy, Cut, Paste</a> .....	134
<a href="#">HEX/BIN</a> .....	134
<a href="#">Replace/Insert Mode</a> .....	134
<a href="#">Save</a> .....	134
<a href="#">Show/Hide Keyboard</a> .....	134

### GoTo

Opens the entry window for the bit position. The cursor marks the bit at the selected position.



**Start Select/Undo Select**

Defines the current cursor position as the start position for the range to be selected. To define the stop position, select "GoTo > Go To Offset" and define the offset.

Selecting "Undo Select" deactivates the selected range.

**Copy, Cut, Paste**

Standard copy, cut, and paste functions.

**HEX/BIN**

Switches between hexadecimal and binary display.

Every 4-bit group is displayed as a hexadecimal value. To increase readability, the hexadecimal values in turn are displayed in pairs of two.

The hex functions are automatically assigned to the numeric keys at the front panel.

**Replace/Insert Mode**

Switches between replace and insert mode to enter new or replace old values.

**Save**

Saves the changes into the selected data list file.

**Show/Hide Keyboard**

Accesses a virtual keyboard to enter Hex/Bin values.

**4.5.3.8 Control and marker lists editor**

The R&S SMBV100B provides the following ways to create a file containing control signals:


- To use the tag-oriented format and create a control list file, see ["To create a control list with tag file format"](#) on page 179.
- To use SCPI commands and create a file in binary format, see ["To create a control list in binary format"](#) on page 180.
- To use the dedicated "Control Data Editor" and create a file in ASCII format and with extension \*.dm\_iqc.  
The "Control Data Editor" is described in this section. Refer to ["To create a control list in ASCII format manually"](#) on page 138 for step-by-step instructions.

To access the "Control Data Editor":

1. Select "Baseband > Custom Digital Mod > Data Source".
2. Select "Select Control List".
3. Navigate to the required directory, for example `/var/user/`.  
Select "New".
4. In the "Filename" field, enter the name of the new control list, for example `dl_3gpp`.



## 5. Select "Edit".

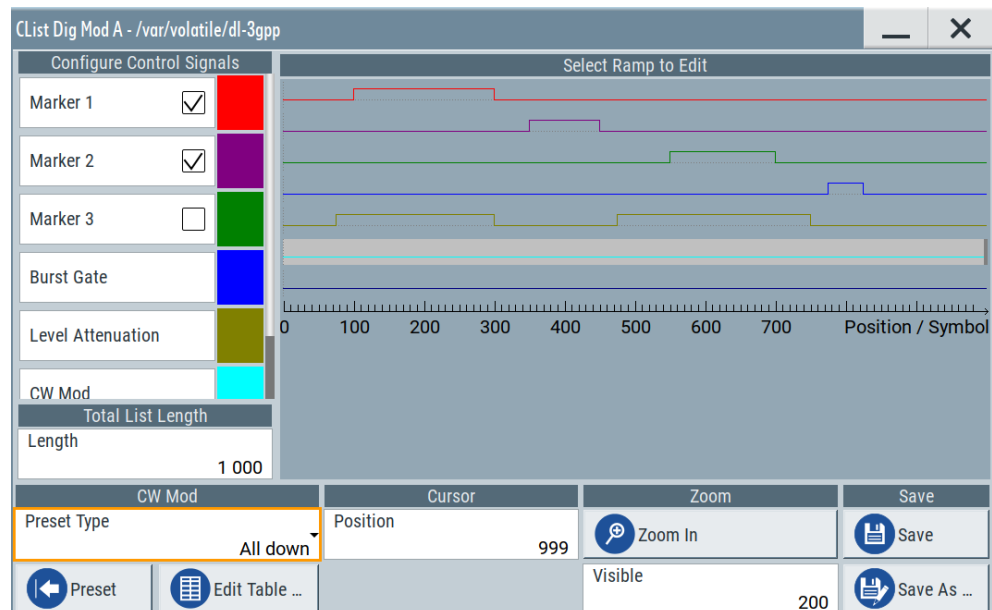

The dedicated internal "Control Data Editor" is an intuitive graphical interface provided for defining and managing of:

- Marker signals
- Control signals, like the CW, "Hop", "Burst Gate", and "Lev\_Att" control signals  
See also ["Control signals"](#) on page 89.

A separate file with the file extension `*.dm_iqc` is created for each defined control signal and held on the instrument's hard disk. Control lists created with the editor are files in an ASCII file format.

In the "Control Data Editor" dialog, the available marker and control signals are displayed color-coded. The "Select Ramp to Edit" is a graphical display of the signal characteristics. To define the ramp for the individual markers or control signals, tap on the desired position or use the provided support functions "<Signal> Table" and "Cursor Position". To simplify the settings, use the predefined preset ramp characteristics in the "<Signal> Preset Type" section. The scaling of the x-axis is always adapted to the overall length of the control list to provide constant overview of all defined ramps. For detailed representation, zoom the displayed area around the current cursor position.

In the "Configure Control Signal" section, a status checkbox indicates whether the individual marker or control signal is assigned or enabled (see [Chapter 4.5.4.1, "How to create and assign a control list"](#), on page 138).

SCPI command:

`[ :SOURce<hw> ] :BB:DM:CLIST:CATalog?` on page 842

`[ :SOURce<hw> ] :BB:DM:CLIST:SElect` on page 842

**Settings:**

<a href="#">Configure Control Signal</a> .....	136
<a href="#">Select Ramp to Edit</a> .....	136
<a href="#">Total List Length</a> .....	136



Preset Type.....	136
Cursor Position.....	137
Positions Control Signal.....	137
Zoom/Visible.....	137
Save/Save As.....	138

### Configure Control Signal

Displays the color the marker/control signal has been assigned.

The status checkbox indicates whether the individual marker or control signal is assigned or enabled (see [Chapter 4.5.4.1, "How to create and assign a control list"](#), on page 138).

Remote command:

n.a.

### Select Ramp to Edit

Graphical representation for editing of the marker/control signals.

Refer to [Chapter 4.5.4.1, "How to create and assign a control list"](#), on page 138 for an overview of the editing capabilities of the display.

Remote command:

```
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
```

on page 190

```
[ :SOURce<hw>] :BB:DM:CLIST:DATA
```

 on page 845

### Total List Length

Enters the length of the definition range of the control list in bits. The starting value is always bit 0. The entire definition range is displayed, i.e. the bit scale is adapted to the entry. If the definition range is decreased, the ramps outside the range are lost.

When used, the control list is always repeated over the length of the definition range if the length of the data list exceeds the length of the control list.

**Tip:** With long control lists, it is useful to zoom the displayed area around the current cursor position ("Zoom in").

Remote command:

```
{CONTROL LENGTH: ControlLength}
```

 on page 186

### Preset Type

Triggered with "Preset", presets for the ramp characteristic of the selected control signal as defined with the "Preset Type".

"All Up, All Down"

Continuously high/low marker/control signal.

"Ramp Up, Ramp Down"

A ramp from low to high or from high to low is configured in the center of the displayed signal area; ramp position can be later shifted as required.



**"Ramp Up/Down, Ramp Down/Up"**

Created is a ramp sequence of low to high and high to low transitions, respectively high to low, and low to high transitions. The ramps are symmetrically distributed around the center of the displayed signal area but be later shifted as required.

Remote command:

n.a.

**Cursor Position**

Displays/enters the cursor position in the graphical display

If the entered value exceeds the selected length of the definition range, the length is adjusted automatically.


Remote command:

n.a.

**Positions Control Signal**

Select "Edit ..." to access a dialog with representation of the ramps of the selected signal in table form.

	Ramp Position	Ramp State
0	0	Low
1	82	High
2	284	Low
3	468	High
4	767	Low
5		

 Accept

The bit position is specified in the "Ramp Position" column, the high or low signal status in the "Ramp State" column. Use the last blank row to enter new ramps.

To apply the changes, press "Accept".

Remote command:

n.a.

**Zoom/Visible**

Zooms the displayed area of the control list. The designation of the button changes from "Zoom in" to "Zoom out".

With long control lists, it is helpful to display only a part of the control list. In such cases, set the "Visible/Bits Visible" to determine the number of symbols/bits to be displayed and select "Zoom" to focus the displayed area around the current "Cursor Position".

Ramps outside the displayed area are not lost by zooming.



Remote command:  
n.a.

#### **Save/Save As**

Saves the changes in the selected control list file or in a new file.

Remote command:  
n.a.

### **4.5.4 How to create data and control lists**

This section provides step-by-step instructions on configuring and using the provided settings. For details on individual functions and settings, see [Chapter 4.5.3, "Custom digital modulation settings"](#), on page 119.

#### **4.5.4.1 How to create and assign a control list**

The R&S SMBV100B provides the following ways to create a file containing control signals:

- To use the dedicated [Control and marker lists editor](#) and create a file in ASCII format and with extension \*.dm\_iqc, see ["To create a control list in ASCII format manually"](#) on page 138
- To use the tag-oriented format and create a control list file, see ["To create a control list with tag file format"](#) on page 179.
- To use SCPI commands and create a file in binary format, see ["To create a control list in binary format"](#) on page 180.

#### **To create a control list in ASCII format manually**

Use the intuitive build in [Control and marker lists editor](#) dialog:

1. To open the "Control Data Editor":
  - a) Select "Baseband" > "Custom Digital Mod" > "Data Source" > "Select Control List".
  - b) Select a file.  
You can select an existing file or a "New".

If the selected file is an existing one, the dialog shows the used settings. If you create a file, the control list is empty.

2. Adjust the control signals as required.
  - a) In the graphic editor "Select Ramp to Edit", select the color-coded trace of the required signal.
  - b) Tap at a position which requires a ramp. The number of ramps per marker is unlimited.
  - c) To remove a ramp, place the cursor at the desired ramp position.  
Press the [Backspace] key.
  - d) For faster marker and control signal definition, use the predefined ramp functions ("Preset Type"). Apply them with "Preset".



- e) If necessary, readjust the ramps with the help of the "Edit" function.
- f) Define the "Total List Length".
- g) To display only a part of the control list, set the "Visible/Bits Visible" to determine the number of displayed symbols/bits.  
Select "Zoom" to focus the displayed area around the current "Cursor Position".

Ramps outside the displayed area are not lost.

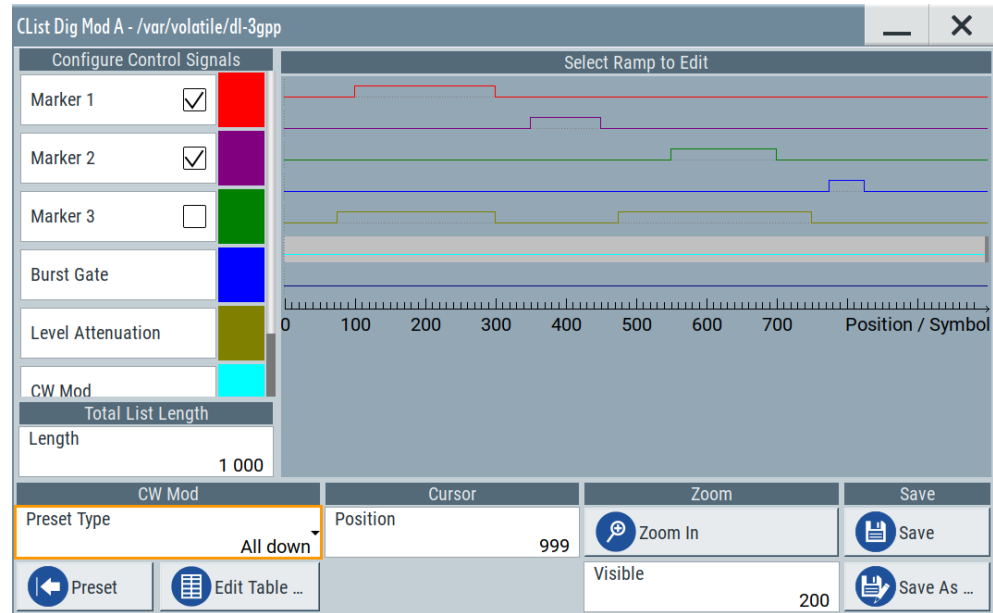


Figure 4-10: Example of control list settings

3. Select "Save" or "Save As" to save the used settings as a control list file.

The created file is an ASCII file with the extension \*.dm\_iqc.

Enable the instrument to use the control list, e.g. for the marker and/or other control signals.

Enabled control signals are indicated as active in the "Configure Control Signal" section.

### To assign and activate control signals from a control list

Irrespectively on the way they are created, generated control lists are not automatically used.

To use a marker/control signal from a control list and to output this signal at the supported connector, perform the following:

1. Enable the R&S SMBV100B to use the control list for marker output 2.  
Output this signal at the User2 connector:
  - a) Select "Baseband" > "Custom Digital Mod" > "Marker".
  - b) Select "Marker 2" > "Mode" > "CList".
  - c) Select "Baseband" > "Custom Digital Mod" > "Marker" > "Global Connectors".
  - d) Select "Routing" > "User 2" > "Direction" > "Output".  
The output signal is "Signal" > "Baseband Marker 2".



2. To enable the R&S SMBV100B to use the "Burst Gate" and "Level Attenuation" control signals as defined in a control list and output one of them at the User3 connector:
  - a) Select "Baseband" > "Custom Digital Mod" > "Power Ramp Control" > "Source" > "Internal".
  - b) Select "Baseband" > "Custom Digital Mod" > "Marker" > "Global Connectors".
  - c) Select "Routing" > "User 3" > "Direction" > "Output".
 The output signal is "Signal" > "Lev Att A".

#### 4.5.4.2 How to create and assign a data list

The R&S SMBV100B provides the following ways to create a data list file:

- To use the dedicated [Data list editor](#) and create a file with extension \*.dm\_iqd, see ["To create data lists manually"](#) on page 140
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 180.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 181.

##### To create data lists manually

Use the intuitive build in [Data list editor](#) dialog:

1. To access the "Data List Editor":
  - a) Select "Baseband" > "Custom Digital Mod".
  - b) Select "Data Source" > "Data List".
  - c) Select "Select Data List"
  - d) Navigate to the required directory, for example, /var/user/.
  - e) Select "New". Enter a filename, for example, dl.

The "Data List Editor" opens; the data list is empty.

2. Enter a sequence of 0 and 1, for example 01110101.

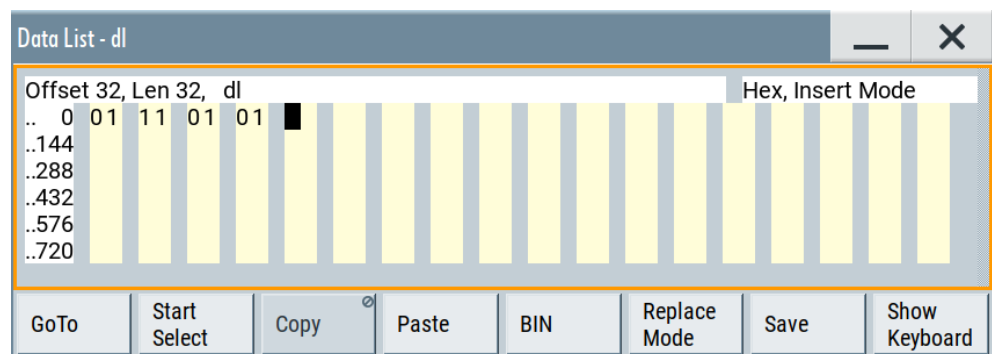


Figure 4-11: Example of data list

3. Select "Save" to save the used settings as a data list file.
- The instrument saves the dl.dm\_iqd file in the /var/user/ directory.



### How to assign and activate data lists

Irrespective of the way they are created, generated data lists are not automatically used.

1. To enable the R&S SMBV100B to use the data list as data source for the custom digital modulation:
  - a) Select "Baseband" > "Custom Digital Mod".
  - b) Select "Data Source" > "Data List".
  - c) Select "Select Data List"
  - d) Navigate through the file system.
  - e) To select the file, confirm with "Select".
2. To enable the R&S SMBV100B to use the data list as data source for any of the digital standards:
  - a) Select the "Data List Name" in the individual dialog.  
For example, for "Baseband" > "3GPP FDD" > "Basestations" > "BS1" > "Channel Table" > "P-CCPCH" > "Data" > "Data List".
  - b) Select "DList" > "None".
  - c) Select the file in the file system.

## 4.5.5 References

**Table 4-5: Custom digital modulation default values**

Parameter	Value
"State"	Not affected
"Data Source"	"PRBS 9"
"Standard"	"GSM"
"Symbol Rate"	"270.833 ksymb/s"
"Coding"	"GSM"
"Modulation Type"	"MSK"
"Filter"	"Gauss (FSK)"
Filter parameter "B*T"	"0.3"
Trigger	"Mode > Auto", "Source > Internal"
Clock	"Source > Internal"
"Power Ramp Control" settings:	
"Attenuation"	"15.0 dB"
"Ramp Time"	"1.00 sym"
"Ramp Function"	"Cosine"
"Rise Delay"	"0.00 sym"
"Fall Delay"	"0.00 sym"



Parameter	Value
"Source"	"Internal"
"State"	"Off"

Table 4-6: Predefined settings for communication standards

Standard	Modulation	Symbol rate	Filter	Coding	SCPI filter type
APCO Phase1 C4FM	4FSK $f_{dev} = 1.8 \text{ kHz}$	4.8 ksym/s	APCO25 Roll off factor = 0.2	APCO25(FSK)	APCOPH1C4fm
APCO Phase1 CQPSK	pi/4-DQPSK	4.8 ksym/s	Raised Cosine Roll off factor = 0.2 Bandwidth = 4.8 kHz	APCO25(PSK)	APCOPH1CQpsk
APCO Phase2 H-CPM	4FSK $f_{dev} = 3 \text{ kHz}$	6 ksym/s	APCO25(H-CPM)	APCO25(FSK)	APCOPH2HCpm
APCO Phase2 H-DQPSK	pi/4-DQPSK	6 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(PSK)	APCOPH2HDQpsk
APCO Phase2 H-D8PSK Wide	pi/8-D8PSK	4 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(8PSK)	APCOPH2HD8PSKW
APCO Phase2 H-D8PSK Narrow	pi/8-D8PSK	4 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 5 kHz	APCO25(8PSK)	APCOPH2HD8PSKN
APCO Phase1 LSM	pi/4-DQPSK	4.8 ksym/s	APCO25(LSM) Gauss Cut Off Freq. = 2.04 kHz Lowpass Cut Off Freq. = 6.2 kHz	APCO25(PSK)	APCOPH1Lsm
APCO Phase1 WCQPSK	pi/4-DQPSK	4.8 ksym/s	Raised Cosine Roll off factor = 1 Bandwidth = 7.2 kHz	APCO25(PSK)	APCOPH1WcQpsk
Bluetooth	2FSK $f_{dev} = 160 \text{ kHz}$	1 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	BLUetooth
CDMA2000 Forward	QPSK	1.2288 Msym/s	cdmaOne + Equalizer	cdma2000	CFORward
CDMA2000 Reverse	Offset QPSK	1.2288 Msym/s	cdmaOne	cdma2000	CREVerse
CW in Baseband	BPSK	1 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	CWBPsk
DECT	2FSK $f_{dev} = 288 \text{ kHz}$	1.152 Msym/s	Gauss (FSK) $B \cdot T = 0.5$	Off	DECT
ETC (ARIB STD T55)	ASK $m = 100 \%$	1.024 Msym/s	Split Phase $B \cdot T = 2.0$	Off	ETC



Standard	Modulation	Symbol rate	Filter	Coding	SCPI filter type
GSM	MSK	270.833333 ksym/s	Gauss (FSK) B*T = 0.3	GSM	GSM
GSM EDGE	8PSK EDGE (3pi/8 8PSK)	270.833333 ksym/s	Gauss Linearized	Off	GSMEdge
NADC	pi/4 DQPSK	24.3 ksym/s	Root Raised cosine Roll off factor = 0.35	NADC	NADC
PDC	pi/4 DQPSK	21 ksym/s	Root Raised cosine Roll off factor = 0.5	PDC	PDC
PHS	pi/4 DQPSK	192 ksym/s	Root Raised cosine Roll off factor = 0.5	PHS	PHS
TD-SCDMA	QPSK 45° Off-set	1.28 Msym/s	Root Raised cosine Roll off factor = 0.22	Off	TCSCdma
Telemetry SOQPSK-TG	2FSK $f_{dev} = 1.25 \text{ MHz}$	5 Msym/s	SOQPSK	Off	SOQPSKTG
TETRA	pi/4 DQPSK	18 ksym/s	Root Raised cosine Roll off factor = 0.35	TETRA	TETRa
WCDMA 3GPP	QPSK 45° Off-set	3.84 Msym/s	Root Raised cosine Roll off factor = 0.22	WCDMA 3GPP	W3GPp
Worldspace	QPSK	1.84 Msym/s	Root Raised cosine Roll off factor = 0.4	Off	WORLdspace
TFTS	pi/4 DQPSK	22.1 ksym/s	Root Raised cosine Roll off factor = 0.4	TFTS/TETRA	TFTS

Table 4-7: Modulation type and coding combinations

Modulation	Coding	Modulation	Coding	Modulation	Coding
ASK	Off Differential Differential + Gray Gray	OQPSK	Off Differential Differential + Gray Gray	16QAM	Off Differential Phase Differential Differential + Gray Gray
BPSK	Off Differential Diff.+Gray Gray	8PSK_EDGE	Off	16QAM EDGE	Off
pi/2 DBPSK	Off Gray	Pi/8 D8PSK	Off Gray APCO25(8PSK)	32QAM	Off Differential Phase Differential Differential + Gray Gray



Modulation	Coding	Modulation	Coding	Modulation	Coding
QPSK	Off Differential Differential + Gray Gray INMARSAT, ICO, WCDMA, CDMA2000	MSK	Off Differential Differential + Gray Gray GSM	32QAM EDGE	Off
QPSK EDGE	Off	2FSK	Off Differential Differential + Gray Gray GSM	64QAM	Off Differential Phase Differential Differential + Gray Gray
QPSK45° Offset	Off Differential Differential + Gray Gray	4FSK	Off Differential Differential + Gray Gray	128QAM	Off Differential Phase Differential Differential + Gray Gray
Pi/4 QPSK	Off Differential Gray	8FSK	Off Differential Differential + Gray Gray	256QAM	Off Differential Phase Differential Differential + Gray Gray
Pi/4 DQPSK	Off Gray NADC, PDC, PHS, TETRA, APCO25(PSK), PWT TFTS/TETRA	16FSK	Off Differential Differential + Gray Gray	1024QAM	Off Differential Phase Differential Differential + Gray Gray
8PSK	Off Differential Differential + Gray Gray VDL	32FSK	Off	16APSK	Off
AQPSK	Off Differential Differential + Gray Gray	64FSK	Off	32APSK	Off



#### 4.5.5.1 Common coding algorithms



In the notation used below,  $a_n$  denotes the  $n^{\text{th}}$  input symbol and  $b_n$  denotes the correspondingly coded output symbol. Individual bits in the symbols from the LSB (least significant bit) to the MSB (most significant bit) are denoted by  $a_{0n}$ ,  $a_{1n}$ , etc. The same applies to the output symbols.

Common coding types are listed in [Table 4-8](#).

**Table 4-8: Common coding algorithms**

Coding	Coding algorithm	Applicable for K bit/symbol
"None"	$b_n = a_n$	$k = 1...8$
"Differential"	$b_n = (a_n + b_{n-1}) \text{ modulo } 2^k$	$k = 1...7$
"Differential + Gray"	Gray coding with additional differential coding	$k = 1...7$
"Phase Differential"	$b_{1n} = [\text{NOT } (a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{1n} \text{ EXOR } b_{1(n-1)})] \text{ OR } [(a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{1n} \text{ EXOR } b_{0(n-1)})]$ $b_{0n} = [\text{NOT } (a_{1n} \text{ EXOR } a_{0n}) \text{ AND } (a_{0n} \text{ EXOR } b_{0(n-1)})] \text{ OR } [(a_{1n} \text{ EXOR } a_{0(n-1)}) \text{ AND } (a_{0n} \text{ EXOR } b_{1(n-1)})]$	-

"Coding > Phase Differential/INMARSAT" correspond to system standards Inmarsat-M and DVB according to ETS 300 429. You can use INMARSAT coding for modulation types with 2 bits/symbol, such as QPSK.

#### Examples

The following examples illustrate how some of the different common coding schemes combined with a modulation method influence the signal.



**Example: Differential coding for QPSK modulation with  $K = 2$  bit/symbol**

Decimal display; the value range for modulation symbols is  $a_n = \{0, 1, 2, 3\}$ .

According to [Table 4-8](#) and for  $k = 2$ , the recursive coding is defined as  $b_n = (a_n + b_{n-1}) \text{ modulo } 4$ .

Depending on the state of a preceding modulation symbol  $b_{n-1}$ , the coded modulation symbol  $b_n$  is obtained, for example, from modulation symbol,  $a_n = 2$  as follows:

$b_{n-1}$	0	1	2	3
$b_n$	2	3	0	1

With differential coding, the assignment of modulation symbols  $a_n$  (binary indication: MSB, LSB) to the phase differences shown in the following table is generated:

**Table 4-9: Phase difference for QPSK**

Modulation symbol $a_n$	00	01	10	11
Phase difference	0°	90°	180°	270°

**Example: Differential coding for modulation type pi/4DQPSK**

With differential coding switched on at the same time, the obtained constellation diagram for pi/4DQPSK is similar to that of 8PSK. Phase shifts are however assigned to the individual modulation symbols. The [Table 4-10](#) shows the assignment of modulation symbols  $a_n$  (binary indication: MSB, LSB) to phase shifts of the I/Q vector in relation to the selected coding.

**Table 4-10: Phase shifts for pi/4DQPSK**

Modulation symbol $a_n$	00	01	10	11
"Coding = Off"	+ 45°	+ 135°	- 135°	- 45°
"Coding = NADC, PDC, PHS, TETRA, or APCO25 (PSK)"	+ 45°	+ 135°	- 45°	- 135°
"Coding = TFTS"	- 135°	+ 135°	- 45°	+ 45°

**Example: Gray and differential coding for 8PSK modulation**

When this coding scheme is used, the gray coding according to the gray code is performed before the differential coding. The later uses the recursive coding algorithm quoted above (see [Table 4-8](#)). The assignment of modulation symbols  $a_n$  (binary indication: MSB, LSB) to the phase differences shown in the following table is generated:

**Table 4-11: Differential coding according to VDL<sup>1)</sup>**

Modulation symbol $d_n$	000	001	010	011	100	101	110	111
Phase difference	0°	45°	135°	90°	270°	315°	225°	180°





<sup>1)</sup> "Differential coding according to VDL" can be used for modulation types with 3 bits/symbol, e.g. 8PSK.




#### 4.5.5.2 Predefined baseband filters

The [Table 4-12](#) shows the filters that are available, together with their associated parameters. The filter characteristic is displayed in graphical form.





**Table 4-12: Overview of the baseband filters**
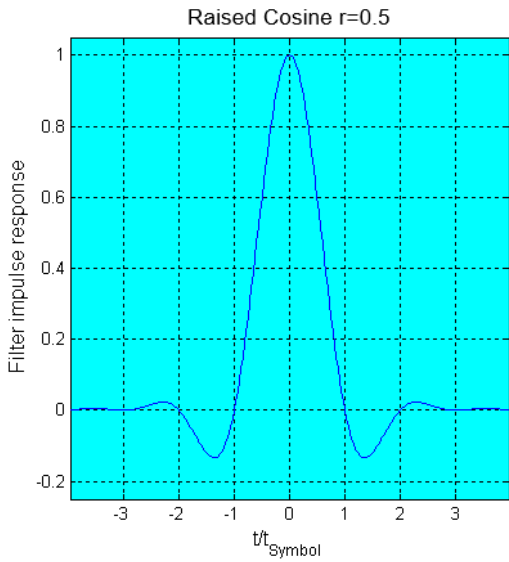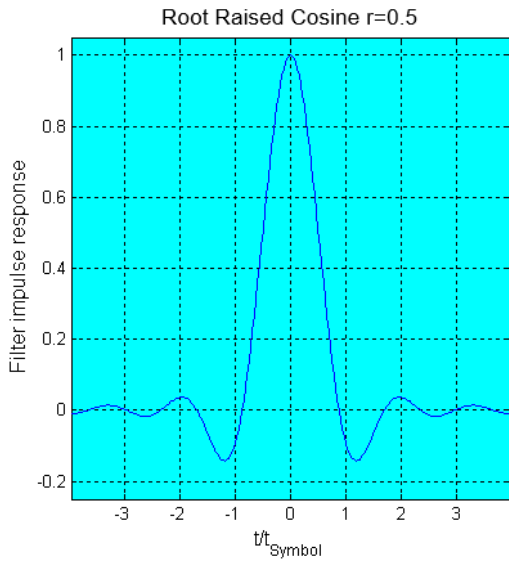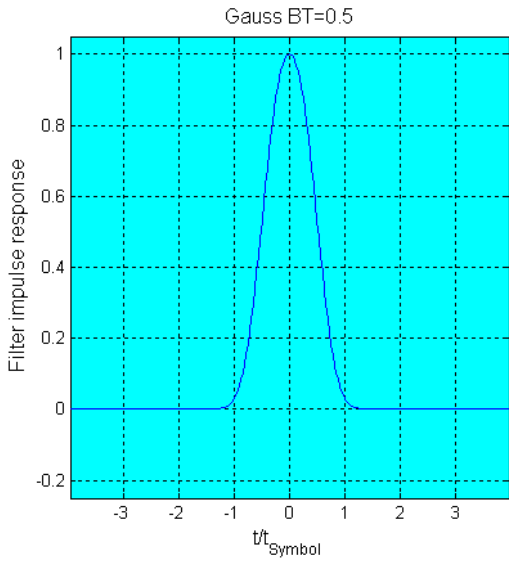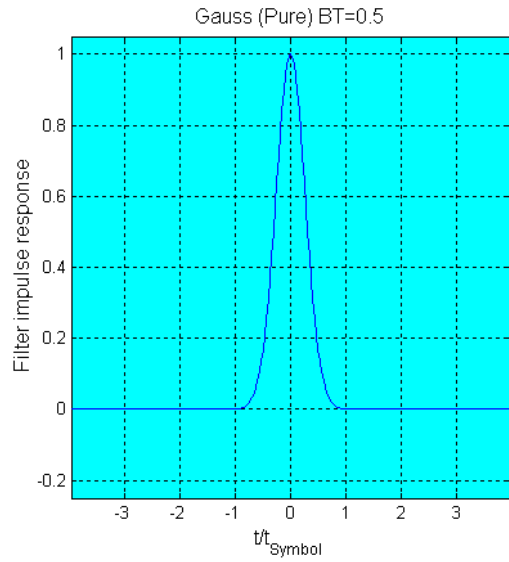
<p>"Raised Cosine (RC)" "Roll Off Factor"</p> 	<p>"Root Raised Cosine (RRC)" "Roll Off Factor"</p> 
<p>"Gauss (FSK)" "B*T"</p> 	<p>"Gauss (Pure)" "B*T"</p> 
<p>"Gauss Linearized"</p>	<p>"Edge Narrow Pulse Shape"</p>



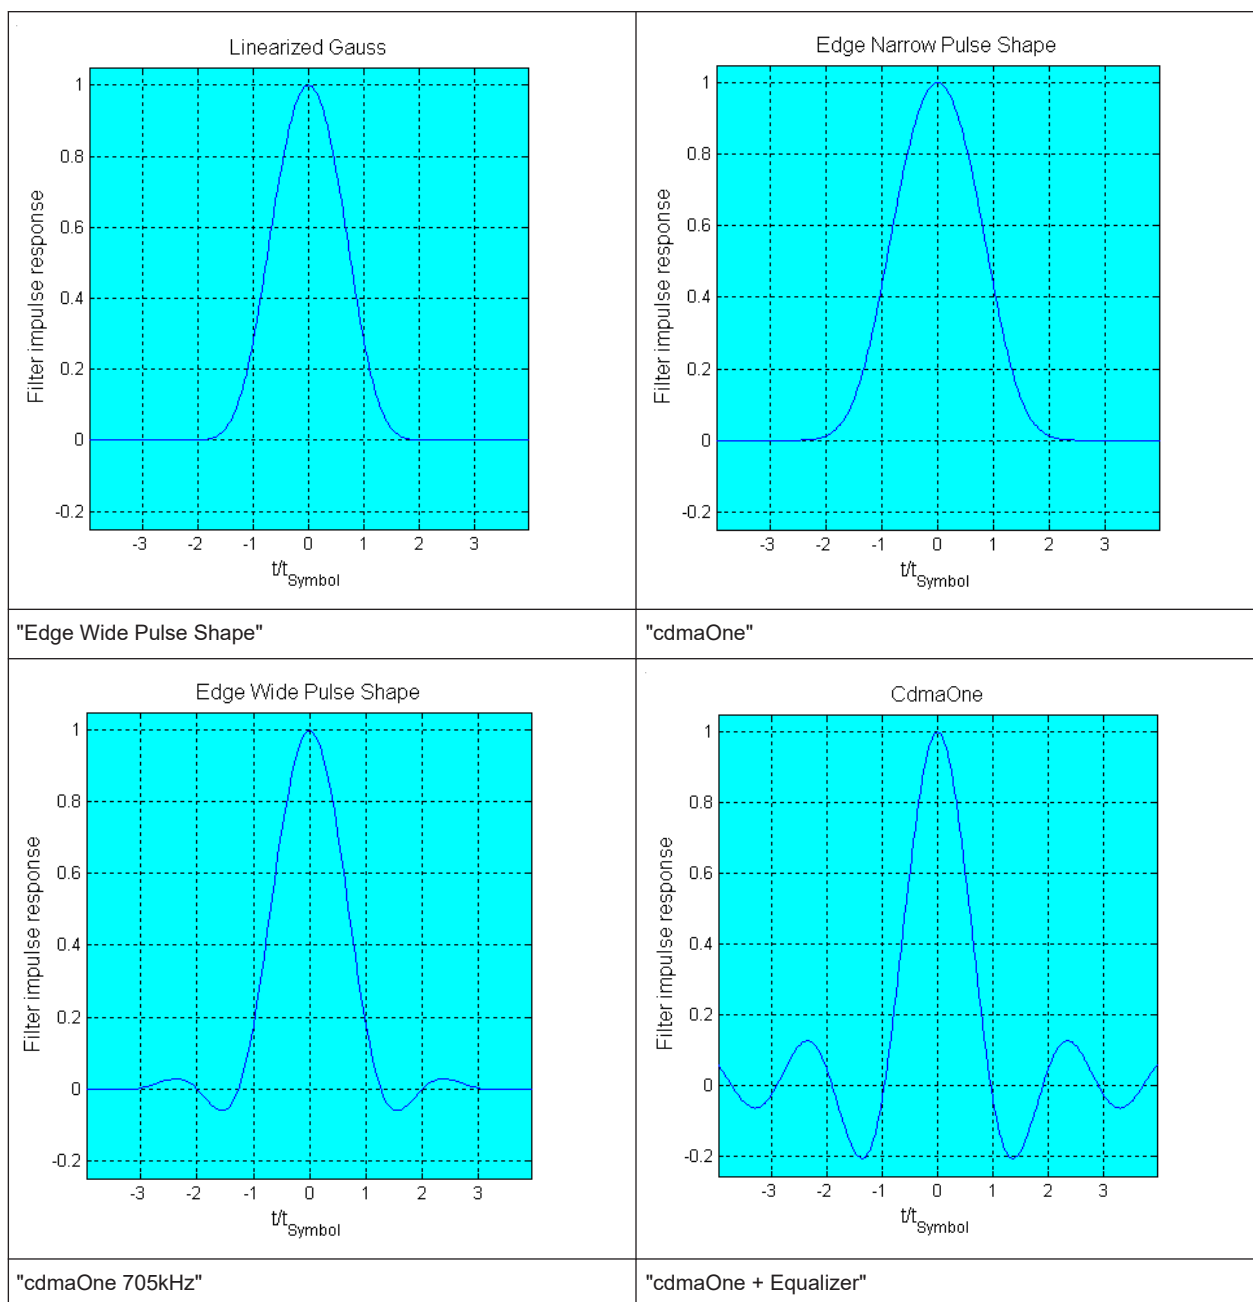

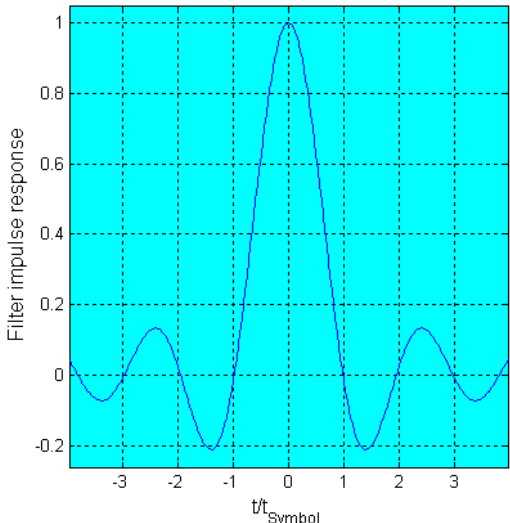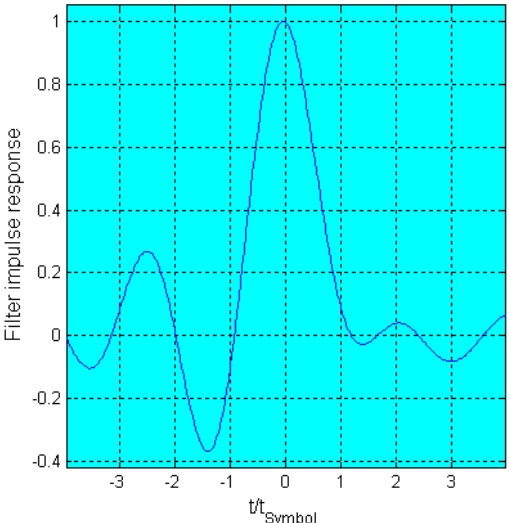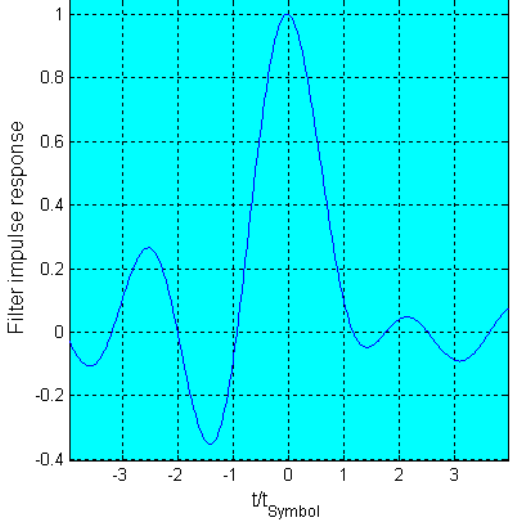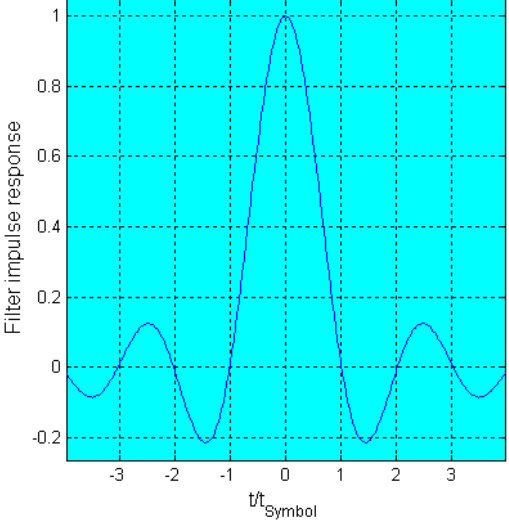


<p>CdmaOne 705kHz</p> 	<p>CdmaOne with equalizer</p> 
<p>"cdmaOne 705kHz + Equalizer"</p>	<p>"cdma2000 3X"</p>
<p>CdmaOne 705 kHz with equalizer</p> 	<p>Cdma2000 3X</p> 
<p>"APCO25" "Roll Off Factor"</p>	<p>"APCO25 (H-CPM)"</p>




<div> <div>APCO25 r=0.5</div> </div>	<div> <div>APCO H-CPM</div> </div>
<div> <div>"APCO25 (LSM)"</div> <div>"Gauss Cut Off Frequency"</div> <div>"Lowpass Cut Off Frequency"</div> </div>	<div> <div>"Split Phase"</div> <div>"B*T"</div> </div>
<div> <div>APCO LSM</div> </div>	<div> <div>Splitphase BT=0.5</div> </div>
<div> <div>"Rectangular"</div> </div>	<div> <div>"Dirac"</div> </div>



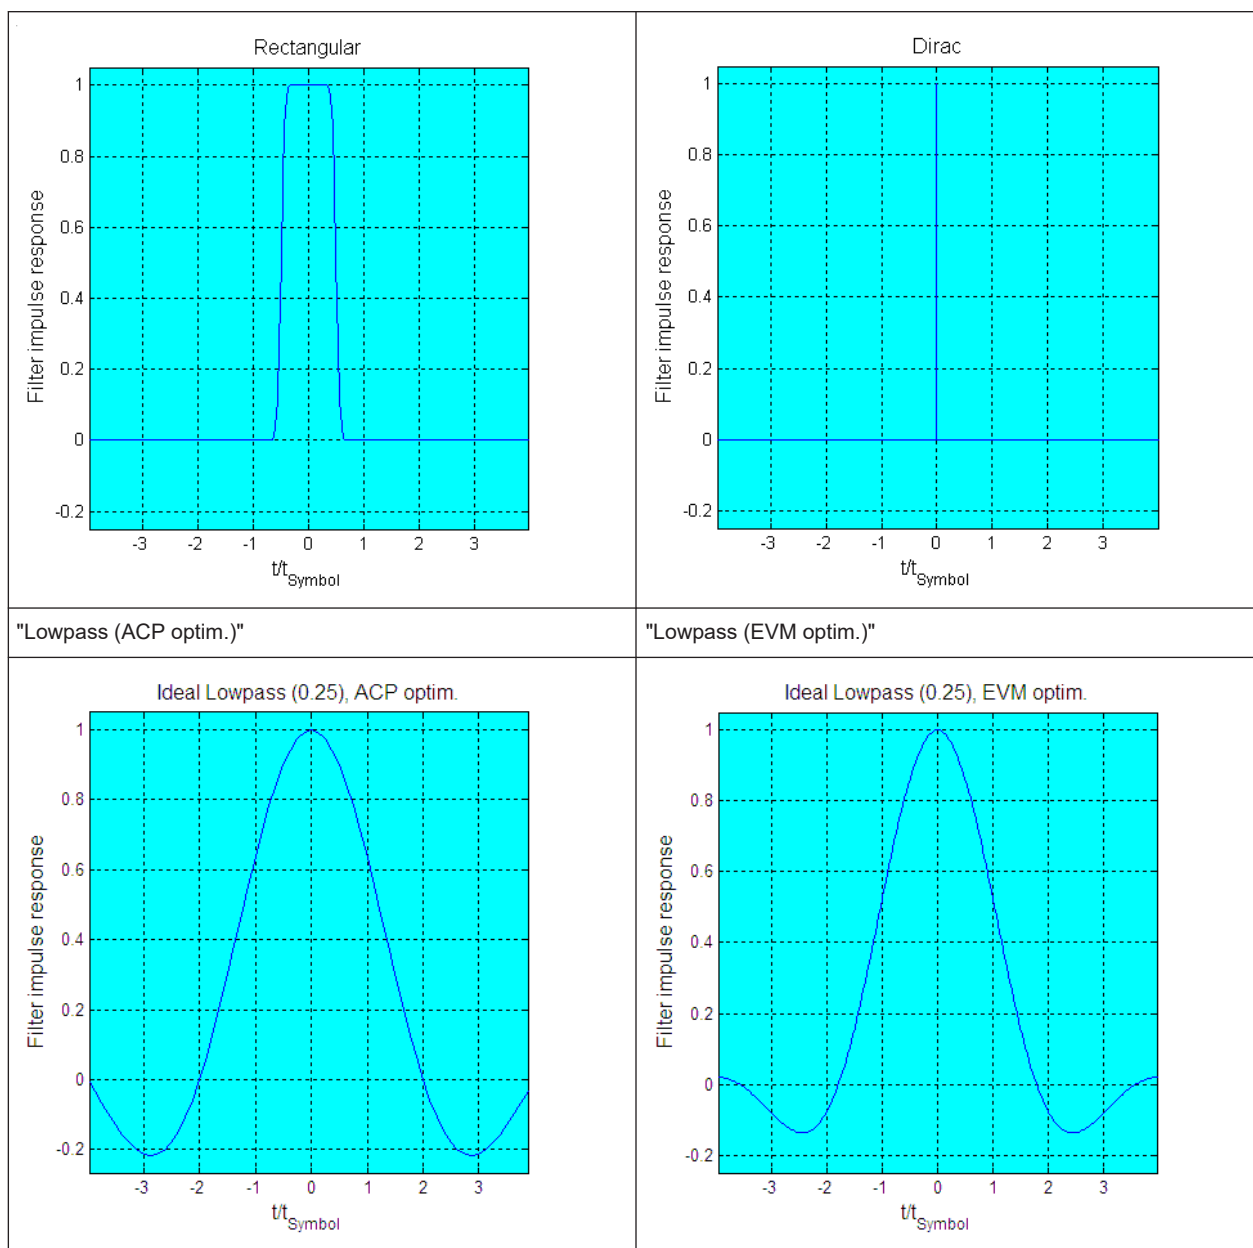



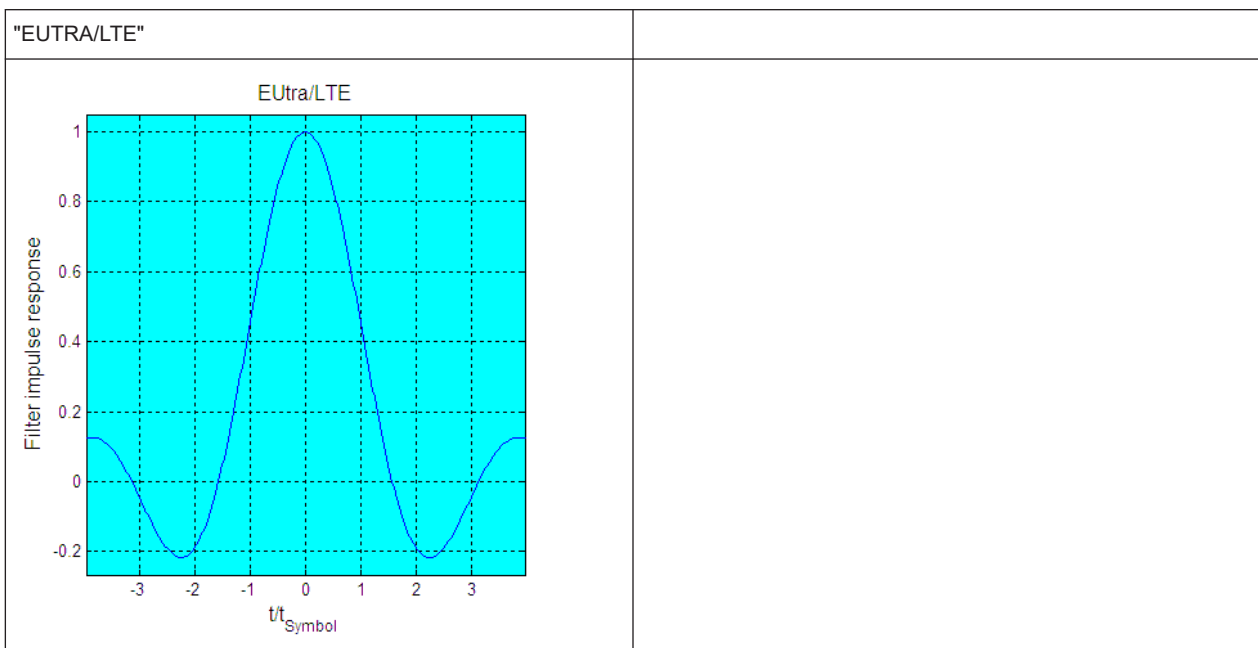

## 4.6 Using the arbitrary waveform generator (ARB)

The arbitrary waveform generator (ARB) is an I/Q modulation source of the R&S SMBV100B. The ARB allows the playback and output of any externally calculated modulation signals in the form of waveform files. The ARB can also generate multi-carrier or multi-segment signals from the waveform files.

### 4.6.1 Required options

The equipment layout for processing of waveform files includes:

- Base unit, including arbitrary waveform generator
- Corresponding digital standard option (R&S SMBVB-K2xx/K4xx)  
Required to process a waveform file generated by the signal generation software R&S WinIQSIM2.  
For example, if you purchase option Digital Standard EUTRA/LTE R&S SMBVB-K255, you can process EUTRA/LTE waveform files generated by R&S WinIQSIM2.
- Corresponding R&S®Pulse Sequencer option
- Optional, ARB memory extension (R&S SMBVB-K511/-K512/-K513)

You can output waveform signals at several connectors. Dedicated connector output requires the following options:

- Output at the RF connector: RF frequency option (for example R&S SMBVB-B103)
- Output at the Dig I/Q and HS Dig I/Q connectors: option digital baseband connectivity (R&S SMBVB-K19)

For more information, see data sheet.



## 4.6.2 About ARB

This section provides background information on the ARB functionality and the impact of the provided settings.

For a description of the multi-carrier, multi-segment and multi-carrier continuous wave functions, refer to:

- [Chapter 4.10, "Generating multi-carrier signals"](#), on page 235
- [Chapter 4.9, "Generating multi-segment waveform files"](#), on page 205
- [Chapter 4.11, "Generating multi-carrier continuous wave signal"](#), on page 252

### 4.6.2.1 Waveform files sources

In ARB mode, the R&S SMBV100B uses ARB waveform files to obtain the digital I/Q data of the baseband signal. The R&S SMBV100B can play back any waveform file saved on a network drive but it can also generate and play back simple waveforms for test purposes.

#### What is a waveform?

A waveform is a file with specified file format containing raw IQ samples. The IQ values are calculated in advance and saved in waveform files with a predefined extension

\* .wv.

When waveforms are created by the R&S SMBV100B, the instrument inserts a waveform header at the beginning of each created ARB file. The header of the generated I/Q data files consists of "tags" which are enclosed in braces { }.

For detailed description on all available tags and for information on how to query them or to create waveforms manually, refer to [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182.

#### Waveform file sources

Depending on whether the R&S SMBV100B creates the waveform files itself or not, the following waveform file sources can be distinguished:

- **Internally generated waveforms**

The ARB generator enables the calculation and the generation of multi-segment and multi-carrier waveform files. The ARB generator provides also a built-in function to create a test waveform (for example a sine or rectangle signal) and keep it as a file or in the RAM.

Several digital standards provide the special function "Generate Waveform File". With this function, the calculated signals are saved as a waveform file that you can play back using the ARB generator.

- **Externally generated or created waveforms**

The ARB generator processes externally created waveform files, for example:

- The *waveform files generated* by the software R&S WinIQSIM2, the R&S ARB Toolbox, the R&S Pulse Sequencer
- *Signals calculated* using a mathematical program such as MATLAB.  
See [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182.



Irrespectively of the way they are created, you can load the externally generated waveform files into the instrument via one of the available interfaces, for example, USB or LAN. Usually, the waveform file is saved on one of the network drives which are accessible for the operating system.

### Related settings

See:

- [Chapter 4.6.3, "ARB settings"](#), on page 157

### Related step-by-step descriptions

See:

- [Chapter 4.6.4, "Playing waveform files"](#), on page 167
- [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177
- [Chapter 4.6.4.5, "Creating waveforms with tag file format"](#), on page 173
- [Chapter 4.6.4.7, "Creating control lists with tag file format"](#), on page 179
- [Chapter 4.6.4.8, "Creating data lists with tag file format"](#), on page 180
- [Chapter 4.6.4.9, "Editing waveform files, data and control lists"](#), on page 181

#### 4.6.2.2 ARB test signals


The following test signals are available:

- **"Sine" test signal:** Two sinewave signals with a selectable (but equal) number of samples per period and equal frequencies. When the generation is triggered, the number of samples per period, together with the frequency of the test signal, determine the ARB clock frequency: "Clock Frequency" = "Frequency" \* "Samples per Period".

**Note:** Because the resulting clock rate must not exceed the maximum ARB clock rate (see data sheet), the number of sample values is automatically restricted depending on the selected frequency.

The first sine signal is mapped on the I samples, the second on the Q samples.

The two signals differ by a selectable phase offset. For a  $-90^\circ$  offset, the result is a unit vector in the I/Q plane, rotating counter-clockwise and starting at  $I = 0$ ,  $Q = -1$ . For a  $0^\circ$  offset, the I and Q samples are on the diagonal of a unit square ( $I(t) = Q(t)$ ).

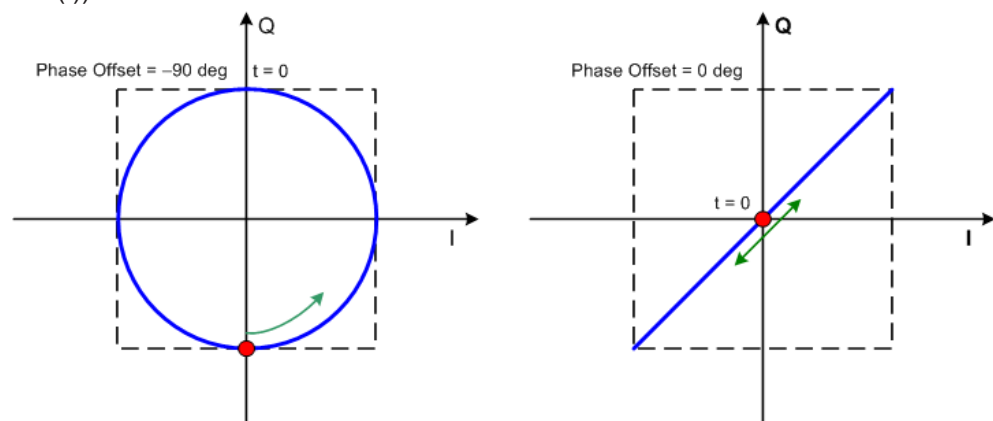




In general, the I/Q samples are located on a deformed circle which is confined to the dashed square in the upper diagrams.

- **"Rect" test signal:** Rectangle signal with selectable but equal On and Off periods and amplitude. The period is defined by the selected frequency:  $\text{<Period>} = 1 / \text{"Frequency"}$ .

The signal is mapped on both the I and Q samples. The mapping results in two distinct points in the I/Q plane. The "Offset DC" shifts both points along the diagonal  $I(t) = Q(t)$ .

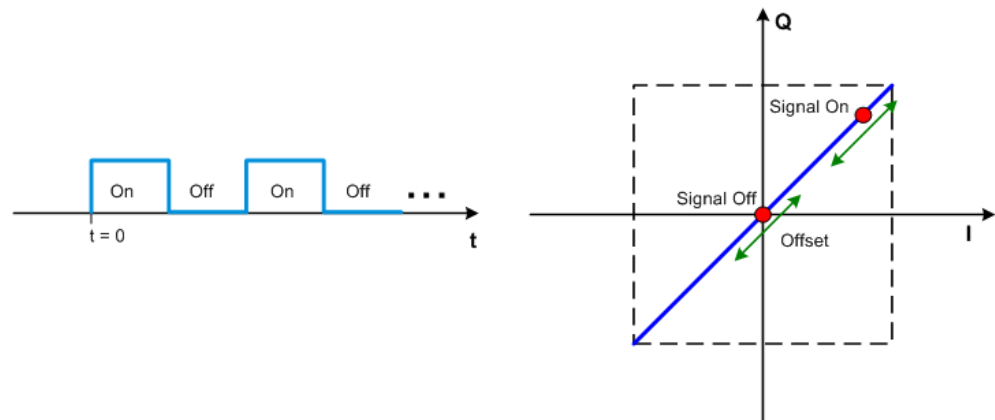


- **"Const I/Q" test signal:** Continuous test signal with constant IQ and constant clock frequency of 10 kHz. The values for each I and Q components are selectable but constant. They are defined as a decimal number, which is decimal-to-binary converted internally. The signal is provided as a 16-bit wide digital signal for both I and Q channels. You can output the signal directly at the BNC connectors I and Q outputs of the instrument.
- **"AWGN" test signal:** Requires option R&S SMBVB-K811. Test signal comprising a noise signal. The 3 dB noise bandwidth is about 0.96 times the clock frequency. See also [Chapter 4.7.4, "AWGN test signal"](#), on page 203.

#### 4.6.2.3 Waveform sample rate

The Arbitrary Waveform Generator includes a resampling unit that interpolates the input samples to target a certain digital output I/Q sample rate. The input sample rate  $f_{\text{input}}$  is retrieved from the waveform (the default sample rate tag) or is defined by the corresponding parameter in the ARB user interface.

The [Figure 4-12](#) depicts the stages involved in the processing and resampling of a waveform in the ARB.



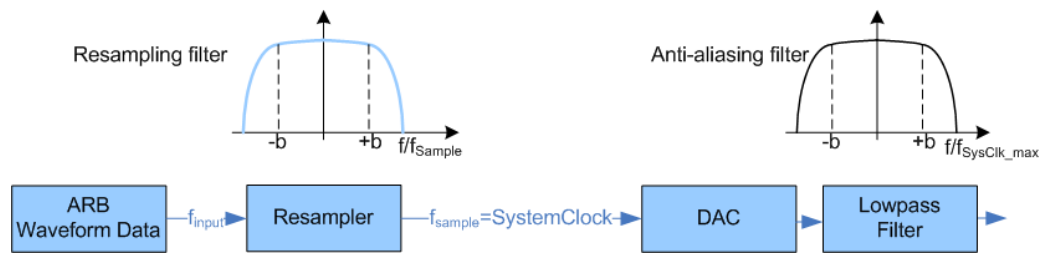

**Figure 4-12: Processing of the waveform files in the ARB**

$f_{input}$  = Waveform sample rate  
 $b$  = Usable bandwidth factor  
 $f_{SysClk\_max} = SystemClock_{max} = SampleRate_{max}$

Where:

- $f_{SysClk\_max} = SystemClock_{max} = SampleRate_{max} = 600 \text{ MHz}$
- $b = 0.4165$

### Impact of the resampling filter

As illustrated in Figure 4-12, the filter in the resampling stage is distortion-free for signals with the following maximum baseband bandwidth:

$$Usable\_Bandwidth_{max} [MHz] = b * f_{input}$$

The usable bandwidth factor  $b$  equals  $b = 0.4165$ .

An externally created waveform file has to provide a sample rate  $f_{input}$  that is high enough for perfect signal reconstruction. For distortion-free resampling the lower bound of the required sample rate  $f_{input}$  is then calculated as follows:

$$f_{input} \geq Usable\_Bandwidth / b$$

Thus, a modulation signal with a sample rate  $f_{input} = 600 \text{ MHz}$  fed in the baseband generator ensures the  $Usable\_Bandwidth_{max}$ . After the DAC, this signal features a  $RF\_Bandwidth_{max} = 2 * b * f_{input} = 2 * b * 600 \text{ MHz} = 1 \text{ GHz}$ .

### Impact of the oversampling factor

Waveforms generated by the R&S WinIQSIM2 software can be optimized by choosing a suitable integer oversampling factor.

Conventional ARB generators often assume oversampling factors of 4. The ARB generator of the R&S SMBV100B requires low oversampling factors and still provides excellent signal quality in terms of EVM and ACP.

A reduced sample rate saves significantly the amount of memory or allows an increased signal cycle time, and vice versa.



#### 4.6.2.4 Marker signals and waveform length

The R&S SMBV100B provides the possibility to define marker signals that are sent to the marker outputs in synchronicity with the I/Q output signals. Marker signals can be either predefined or later defined.

The I/Q data and marker data are located in separate memory areas of the SDRAM and can be independently configured. Each marker signal requires 1 bit of the available memory size. Sometimes, it is useful to generate a modulation signal without extra marker signals to increase the maximum waveform length.

The following example explains the dependency between the number of enabled marker signals, the available memory size, and the resulting waveform length.

##### Example: Calculating the maximum waveform length

The calculation assumes a R&S SMBV100B with an ARB memory of 64 Msample, see [Chapter 4.6.1, "Required options"](#), on page 152.

- Total memory size = 256 Mbyte
- Required memory size (per complex sample) = 32 bit + 3 bit = 35 bit = 4.375 byte, where:
  - The raw I/Q samples are 16-bit values. For the length of I/Q data that is:  
 $2 \times 16 \text{ bit} = 32 \text{ bit}$  (16 bit per I/Q channel)
  - Each marker requires one bit. Three enabled markers require 3 bit.
- Maximum waveform length (with 3 markers) = 256 Mbyte / 4.375 byte = 58 Msample
- Theoretical maximum waveform length (no markers) = 256 Mbyte / 4 byte = 64 Msample

Hence, a memory size of 256 Mbyte yields a maximum waveform length of 58 Msample, if three markers are enabled. The maximum waveform length increases to 64 Msample, if the internal hardware markers are used, and the complete memory is available for I/Q data.

The minimum length of a waveform is 512 samples. A waveform shorter than this value is automatically repeated until it reaches the minimum length.

#### 4.6.3 ARB settings

Access:

- Select "Baseband" > "ARB".

The "ARB" dialog enables direct selection of the waveform file to be processed, the selection of a test signal or access to the multi-segment and multi-carrier settings.

The remote commands required to define these settings are described in [Chapter 13.17.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 848.



**Settings:**

- [ARB general settings](#)..... 158
- [Sine test signals](#)..... 161
- [Rectangular test signal](#)..... 163
- [Constant IQ test signal](#)..... 164
- [Trigger, marker and clock settings](#)..... 165

**4.6.3.1 ARB general settings**


Access:

- Select "Baseband" > "ARB".

This tab provides access to the default ARB settings, selecting a waveform file and enabling the ARB generator.

Further settings depend on selected "System Configuration" and waveform type:

- If a single segment waveform is used, the tab provides also settings for configuring the test signal and access to the settings for calculating a multi-segment or a multi-carrier waveform.
- If a multi-segment waveform is loaded, the tab expands and displays the dedicated section "Multi Segment Waveform Options".

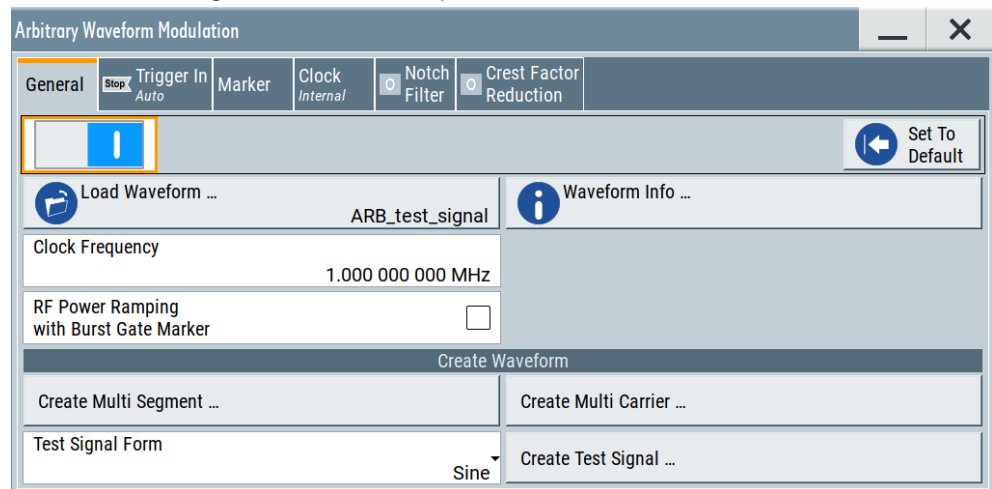

This section comprises the settings necessary to configure the segment to be output and adjust the trigger for the switch between the segments of the multi-segment waveform. The parameters displayed depend on the selected trigger source. The provided parameters are identical with the parameters in the section "Next Segment Trigger In" in the "Trigger" tab; for information see [Chapter 4.9.3.5, "Multi-segment waveform trigger settings"](#), on page 223.



**Settings:**

State.....	159
Set To Default.....	159
Load Waveform/File.....	160
Waveform Info.....	160
Clock Frequency.....	160
RF Power Ramping with Burst Marker.....	161
Create Multi Segment.....	161
Create Multi Carrier.....	161
Test Signal Form.....	161
Create Test Signal.....	161

**State**

Enables/disables ARB modulation. Switching on the ARB generator turns off all the other digital standards and digital modulation types in the same signal path.

The output is based on the waveform file that is loaded. The name of the waveform file is displayed next to "Load Waveform". When a multi-segment waveform is loaded, the display expands and lists more settings, grouped in the "Multi Segment Waveform Options" section.

**Note:** ARB generator cannot be activated.

You cannot activate the ARB generator in the following cases:

- **No or empty waveform file**  
By default, no waveform file is loaded. The "Load Waveform" button displays "None".  
Remedy: Select a waveform file, before activating the ARB generator.
- **Missing burst gate marker in the waveform**  
The "RF Power Ramping with Burst Gate Marker" state is "On" and the loaded ARB waveform does not contain a control list or the burst gate marker is not defined. An error message indicates the message above.  
Remedy: Define a burst gate marker in your waveform file.

Remote command:

`[ :SOURce<hw> ] :BB:ARBitrary:STATe` on page 857

**Set To Default**

Calls default settings, see [Table 4-13](#).

**Table 4-13: ARB default settings**

Parameter	Value
State	Off
Clock Frequency	1 MHz
Trigger Mode	Auto
Trigger Source	Internal
Marker State	Off
Marker Mode	Unchanged
Clock Source	Internal



Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:PRESet` on page 857

### Load Waveform/File

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

The waveform files are files with predefined file extension \* .wv. If you select a file, the dialog displays short information about the selected waveform.


Activate the ARB generator to trigger the instrument to load and process the selected waveform file.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WAVEform:SElect` on page 863

### Waveform Info

Opens a dialog with detailed information about the currently selected waveform. The display depends on whether the selected waveform file is a multisegment one or not. All parameters are read-only.

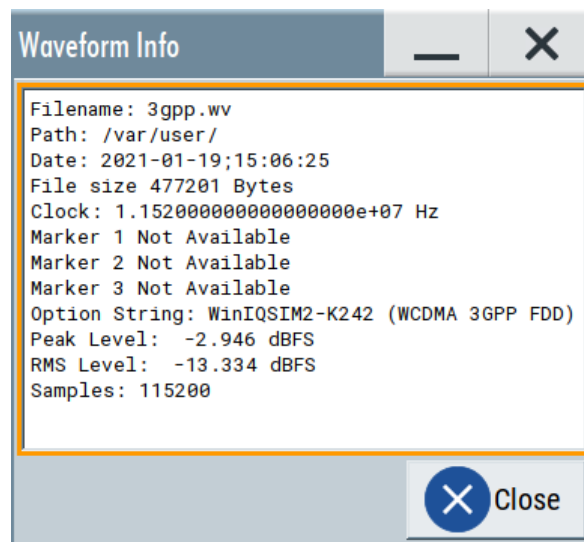

Remote command:

n.a.

For non-multi segment waveform files, use the `Tag` commands. See [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182.

### Clock Frequency

Displays or sets the ARB output clock rate.

The value of this parameter is set to the clock rate defined in the loaded waveform file (`{CLOCK}` tag). The value can be changed afterwards.

**Note:** The clock frequency must match the value of the externally applied clock source.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:CLOCK` on page 865



**RF Power Ramping with Burst Marker**

Option: R&S SMBVB-K22

If activated, the burst gate marker signal included in the ARB waveform file is used as marker signal for the pulse modulator.

If this parameter is activated, but the loaded ARB waveform does not contain control list or the burst gate marker is not defined, the ARB generator cannot be activated. An error message indicates this situation, too.

You can create the suitable waveform files including the required burst gate marker signals, for example, with the R&S Pulse Sequencer software.

Remote command:

`[ :SOURce<hw> ] :BB:ARBitrary:PRAMp [ :STATe ]` on page 858

**Create Multi Segment**

Accesses the dialog for creating multi-segment waveforms (see [Chapter 4.9, "Generating multi-segment waveform files"](#), on page 205).

**Create Multi Carrier**

Accesses the dialog for creating multi-carrier waveforms (see [Chapter 4.10, "Generating multi-carrier signals"](#), on page 235).

**Test Signal Form**

Selects the form of the test signal. A choice between a sinusoidal, rectangular, AWGN or test signal with constant I/Q is provided.

To access further settings, select [Create Test Signal](#).

Remote command:

`[ :SOURce<hw> ] :BB:ARBitrary:SIGNal:TYPE` on page 858

**Create Test Signal**

Opens the dialog with further setting for the selected [Test Signal Form](#), see:

- [Chapter 4.6.3.2, "Sine test signals"](#), on page 161
- [Chapter 4.6.3.3, "Rectangular test signal"](#), on page 163
- [Chapter 4.6.3.4, "Constant IQ test signal"](#), on page 164
- [Chapter 4.7.4, "AWGN test signal"](#), on page 203


**4.6.3.2 Sine test signals**

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Sine".



## 3. Select "Create Test Signal".

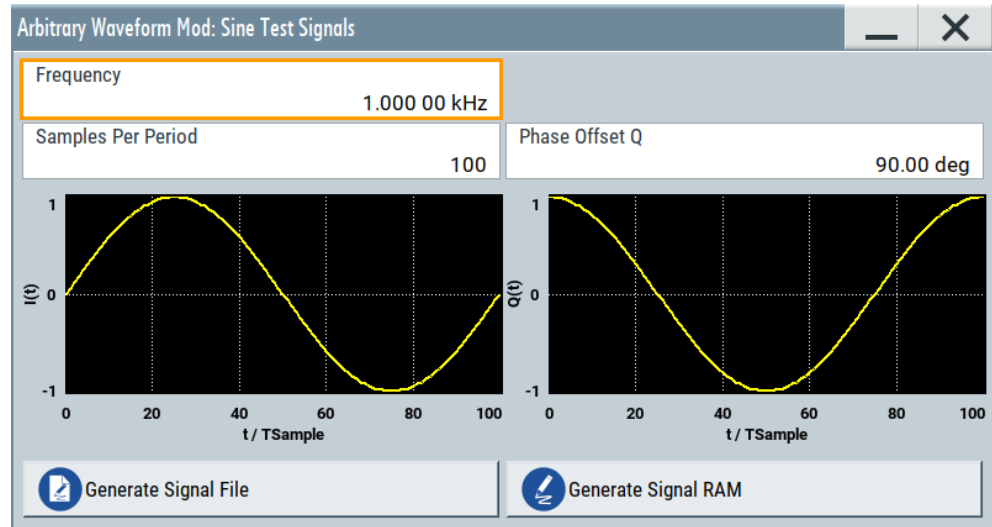

This dialog provides settings to configure a sinusoidal test signal. A sine wave is generated on the I path, and a sine wave of the same frequency but phase-shifted is generated on the Q path. For more information, refer to [Chapter 4.6.2.2, "ARB test signals"](#), on page 154.

The dialog displays the characteristic of the currently selected signal.

**Settings:**

Frequency.....	162
Samples per Period.....	162
Phase Offset Q.....	162
Generate Signal File.....	163
Generate Signal RAM.....	163

**Frequency**

Enters the frequency of the test signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:FREQuency](#) on page 860

**Samples per Period**

Enters the number of sample values required from the sine wave per period.

The maximum allowed value is determined by the maximum ARB clock rate (see data sheet) and the selected frequency.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:SAMPles](#) on page 861

**Phase Offset Q**

Enters the phase offset of the sine-wave signal on the Q channel relative to the sine-wave signal on the I channel.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:PHASe](#) on page 860



**Generate Signal File**

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed](#) on page 861

**Generate Signal RAM**

Generates a signal and uses this signal as output straight away. The instrument saves the file using a predefined filename.


Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:CREate](#) on page 861

**4.6.3.3 Rectangular test signal**

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Rect".
3. Select "Create Test Signal".

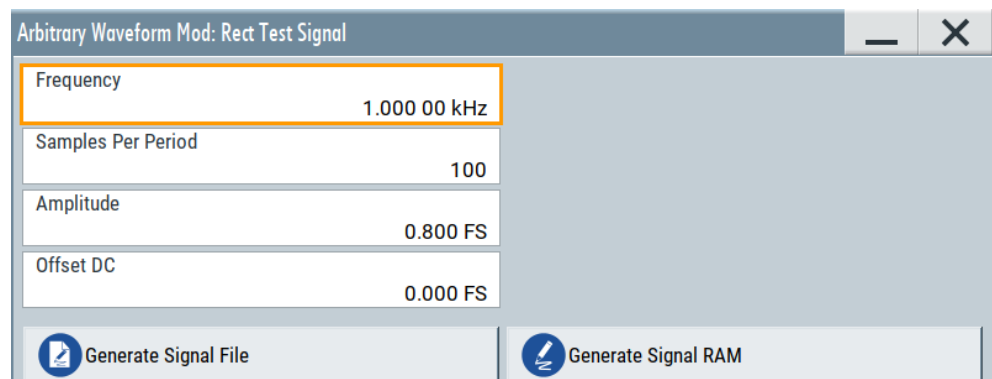

This dialog provides settings to configure a rectangular test signal. A rectangular test signal with a duty factor of 0.5 is created. Amplitude and offset are adjustable. Both paths, I and Q, use the same signal.

For more information, refer to [Chapter 4.6.2.2, "ARB test signals"](#), on page 154.

**Settings:**

<a href="#">Frequency</a> .....	163
<a href="#">Samples per Period</a> .....	164
<a href="#">Amplitude</a> .....	164
<a href="#">Offset DC</a> .....	164
<a href="#">Generate Signal File</a> .....	164
<a href="#">Generate Signal RAM</a> .....	164

**Frequency**

Enters the frequency of the test signal.



Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:RECTangle:FREQuency` on page 859

#### **Samples per Period**

Enters the number of sample values required for the rectangular signal per period.

The maximum allowed value is determined by the maximum ARB clock rate (see data sheet) and the selected frequency.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:RECTangle:SAMPles` on page 860

#### **Amplitude**

Enters the digital amplitude of the rectangular wave. The abbreviation FS means full-scale.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:RECTangle:AMPLitude` on page 859

#### **Offset DC**

Enters a DC component.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:RECTangle:OFFSet` on page 859

#### **Generate Signal File**

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed`  
on page 861

#### **Generate Signal RAM**

Generates a signal and uses it as outputs straight away. The instrument saves the file using a predefined filename.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:SINE:CREate` on page 861


#### **4.6.3.4 Constant IQ test signal**

Access:

1. Select "Baseband" > "ARB" > "General".
2. Select "Test Signal Form" > "Const IQ".



## 3. Select "Create Test Signal".

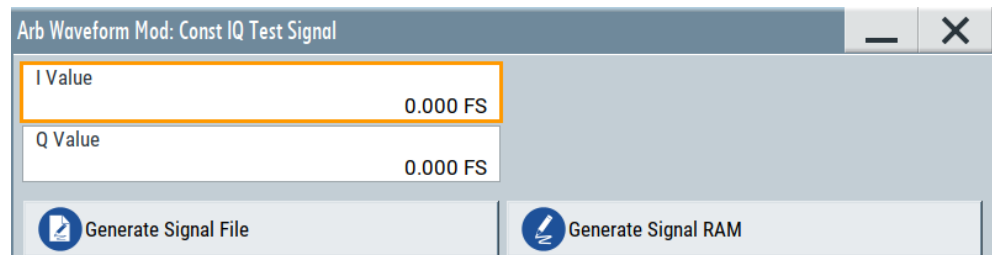

This dialog provides settings to configure a continuous test signal with constant IQ. The I and Q values for each path are adjustable but constant. For more information, refer to [Chapter 4.6.2.2, "ARB test signals"](#), on page 154. If converted to an analog signal, the signal is output directly at the I and Q connectors of the instrument.

**Settings:**

I Value, Q Value.....	165
Generate Signal File.....	165
Generate Signal RAM.....	165

**I Value, Q Value**

Enters the value for the I respectively Q component of the test signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:CIQ:I](#) on page 859

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:CIQ:Q](#) on page 859

**Generate Signal File**

Generates a signal and saves it as a waveform file on the hard disk. Use the standard "File Select" function to save the file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed](#) on page 861

**Generate Signal RAM**

Generates a signal and uses this signal as output straight away. The instrument saves the file using a predefined filename.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:CIQ:CREate](#) on page 861

**4.6.3.5 Trigger, marker and clock settings**

These tabs provide standard settings.

For detailed description, see:

- [Chapter 4.4.2.1, "Trigger settings"](#), on page 108
- [Chapter 4.4.2.2, "Marker settings"](#), on page 113
- [Chapter 4.4.2.3, "Clock settings"](#), on page 114



- [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115

The following settings are specific to the ARB dialog.

<a href="#">Processing Time</a> .....	166
<a href="#">Marker Mode</a> .....	166
<a href="#">Delay (Time)</a> .....	166

### Processing Time

Displays the internal processing time.

The processing time is the elapsed time between the input of the external trigger event and the output of the baseband signal. An additional delay applies to the RF signal with respect to the baseband signal depending on the RF frequency. For more information, see ["Starting the signal generation with the first sample"](#) on page 98.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:PTIME?](#) on page 893

### Marker Mode

Basic marker configuration for up to three marker channels. The contents of the dialog change with the selected marker mode.

Use the settings to define the shape and periodicity of the markers. See [Regular marker output signals](#) for description of the regular marker signals.

**Note:** The marker trace in the waveform file remains unchanged in any case. It is not overwritten, even if something else than Unchanged has been selected.

The instrument routes the generated marker signals to the selected output connectors.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

"Unchanged"      The marker signal remains unchanged as defined in the waveform file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE](#) on page 895

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider](#)  
on page 896

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?](#)  
on page 897

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATtern](#) on page 896

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime](#) on page 896

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime](#) on page 896

### Delay (Time)

Shows the [marker delay](#) time in microseconds, milliseconds or seconds depending on the set marker delay.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DINSec?](#) on page 897



#### 4.6.4 Playing waveform files

This section provides step-by-step instructions to create, generate and play waveform files on the R&S SMBV100B. For details on individual functions and settings, see [Chapter 4.6.3, "ARB settings"](#), on page 157.

Some test cases do not require a real-time generation of signal according to a digital standard. For these test cases, the replay of a previously generated waveform is sufficient. In such cases, you can generate the required test waveform file in one of the following ways:

- Internally,
  - With the built-in "Generate Waveform File" function, see [Chapter 4.6.4.2, "Using the function Generate Waveform"](#), on page 168
  - With the "Create ARB Test Signal" function, see [Chapter 4.6.4.1, "Generating ARB test signals"](#), on page 167
- Externally, for example:
  - With the free of charge software R&S WinIQSIM2, see [Chapter 4.6.4.4, "Working with R&S WinIQSIM2"](#), on page 169
  - With the software R&S ARB Toolbox
  - With the R&S SMBVB-K300/-K301 Pulse Sequencer software
  - Calculated using a mathematical program such as MATLAB, see [Chapter 4.6.4.5, "Creating waveforms with tag file format"](#), on page 173.

Provided the R&S SMBV100B is equipped with the required option, you can load this waveform file and subsequent process it with the instrument.

This section provides examples on the internal waveform file generation and on the external generation with the R&S WinIQSIM2.

• <a href="#">Generating ARB test signals</a> .....	167
• <a href="#">Using the function Generate Waveform</a> .....	168
• <a href="#">Loading and playing waveform files</a> .....	169
• <a href="#">Working with R&amp;S WinIQSIM2</a> .....	169
• <a href="#">Creating waveforms with tag file format</a> .....	173
• <a href="#">Defining periodically repeating traces</a> .....	177
• <a href="#">Creating control lists with tag file format</a> .....	179
• <a href="#">Creating data lists with tag file format</a> .....	180
• <a href="#">Editing waveform files, data and control lists</a> .....	181

##### 4.6.4.1 Generating ARB test signals

If your test case requires a simple sine or square test file, consider to use the provided ARB test signals.

###### To generate a sine test signal

1. Select "Baseband" > "ARB"
2. Select "Create Test Signal" > "Sine".
3. Adjust the "Sine Test Signal" settings as required.



4. Select "Generate Signal File".  
A standard file-select dialog opens.
  - a) Navigate to the directory, in that you want to save the file, for example `/var/user/`.
  - b) Enter a filename, for example `sine_waveform`.
  - c) Click "Save".

The R&S SMBV100B saves the generated waveform file and automatically loads it in the ARB.
5. Select "ARB" > "State" > "On".  
The R&S SMBV100B processes the waveform file.

#### 4.6.4.2 Using the function Generate Waveform

The general settings dialog of several digital standards provides the built-in function "Generate Waveform".



This function enables the calculation of the signal and saves the information in a waveform file. After saving, you can load the waveform file in the ARB generator.

##### To generate an EUTRA/LTE waveform file

1. Select "Baseband" > "EUTRA/LTE/IoT".
2. Adjust the settings as required, for example:
  - a) Select "Link Direction" > "Downlink".
  - b) Select a predefined test model, for example, "Test Models" > "E-TM1\_1\_\_10MHz".
3. Select "State" > "On".
4. Select "Generate Waveform".  
A standard file-select dialog opens.
  - a) Navigate to the directory, in that you want to save the file, for example `/var/user/`.
  - b) Enter a filename, for example `lte_waveform`.
  - c) Click "Save".

The R&S SMBV100B saves the generated waveform file `lte_waveform.wv` in the selected directory `/var/user/`.

To process the waveform file, load it in the ARB, see [Chapter 4.6.4.3, "Loading and playing waveform files"](#), on page 169.



#### 4.6.4.3 Loading and playing waveform files

Irrespectively on the way a waveform file is generated, you can transfer it to the instrument, load it in the ARB and play it.

##### To load and play a waveform file

1. Transfer an externally created waveform file to the instrument.  
See [Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535.
2. Select "Baseband" > "ARB".
3. Select "Load Waveform".  
A standard file-select dialog opens.
  - a) Navigate to the directory, that the waveform file contains.
  - b) Select the waveform file, for example, `/var/user/lte_waveform`.
  - c) Click "Select".The "ARB" dialog confirms that the waveform file is loaded.
4. Select "ARB" > "State" > "On".  
The R&S SMBV100B processes the waveform file.

#### 4.6.4.4 Working with R&S WinIQSIM2

The following example illustrates how to use R&S WinIQSIM2 simulation software to generate an EUTRA/LTE waveform and load it in the ARB of the R&S SMBV100B.

The workflow consists of three main steps, each described in a separate step-by-step instruction:

- Configuring the connection between the R&S WinIQSIM2 and the R&S SMBV100B
- Generating of a waveform file with the required settings
- Transferring the waveform file to and playing it with the R&S SMBV100B.



This section does not describe the R&S WinIQSIM2 simulation software but focuses on the task-related settings. For a description of the simulation software, see the R&S WinIQSIM2 user manual.

##### To define the R&S SMBV100B as destination instrument

In this example, we assume that the R&S WinIQSIM2 is installed on a remote controller. This remote controller is connected over LAN to the R&S SMBV100B.

The general instrument settings of the destination instrument affect various functions, like, the maximum size of the file the waveform is saved in. We recommend that you configure the destination instrument before you generate the waveform with the R&S WinIQSIM2.


1. In the R&S WinIQSIM2, select "File" > "New" to preset the software.
2. In the block diagram, select "Vector Sig Gen" > "Instruments".



The "Configure Instruments" dialog opens. The list of configured instruments is empty.


3. Select "Configure Instruments" > "Scan".

The software scans the network for connected and active instruments.

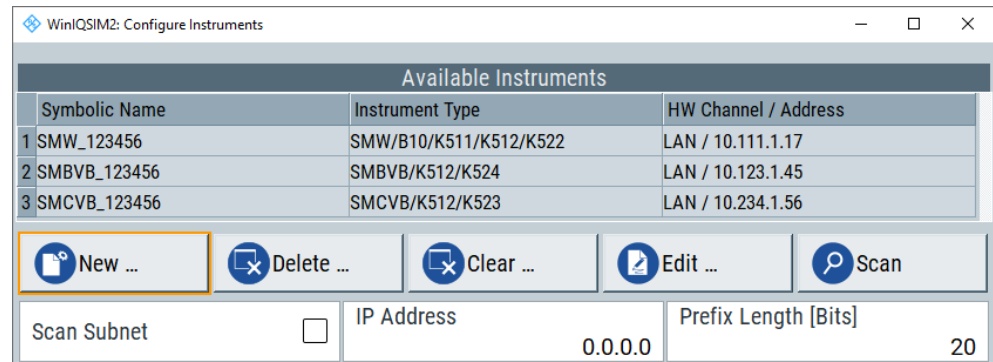


Alternatively, use the "New" function to add the R&S SMBV100B manually to the list of instruments.

4. Close the dialog.
5. In the block diagram, select "Vector Sig Gen" block and select the R&S SMBV100B form the list.

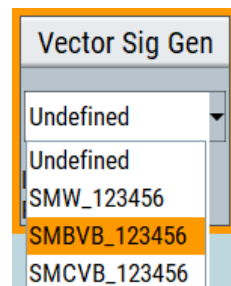

6. In the block diagram, select "ARB Sig Gen" block and select the R&S SMBV100B form the list.


The two lines to the "Vector Sig Gen" and "ARB Sig Gen" blocks on the block diagram confirm that a remote connection to the R&S SMBV100B is established.

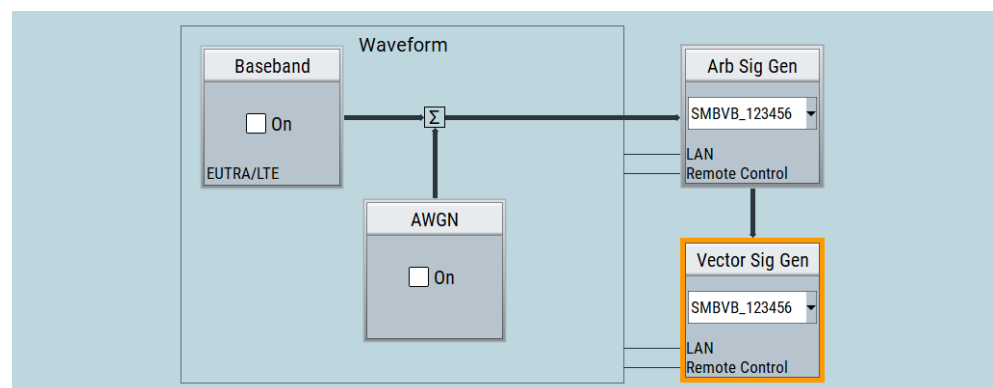




**To generate a waveform file with R&S WinIQSIM2**

1. In the block diagram of R&S WinIQSIM2, select "Baseband" > "EUTRA/LTE/IoT".
2. Adjust the settings as required, for example:
  - a) Select "Link Direction" > "Downlink (OFDMA)"
  - b) Select a predefined test model, for example, "Test Models" > "E-TM1\_1\_\_10MHz".
3. Select "EUTRA/LTE/IoT" > "State" > "On".

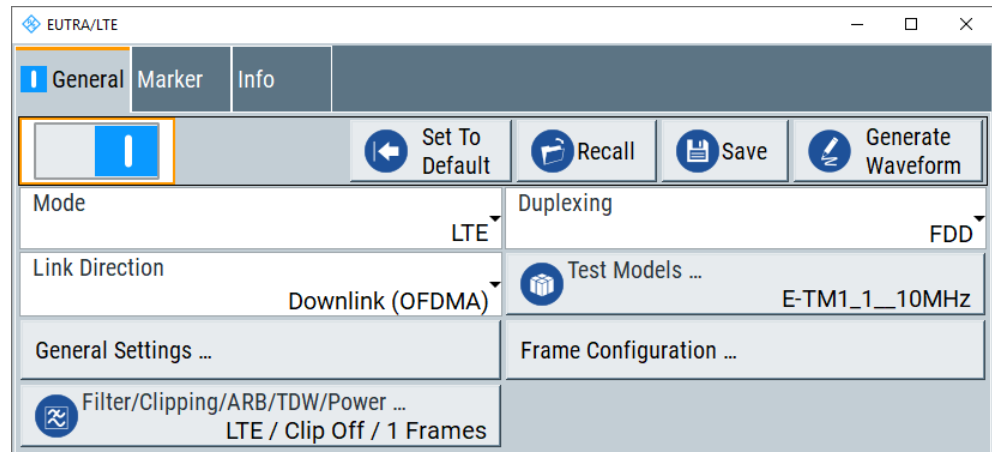


R&S WinIQSIM2 calculates the signal and displays important signal parameters, for example, number of samples "Samples" and "Sample Rate".

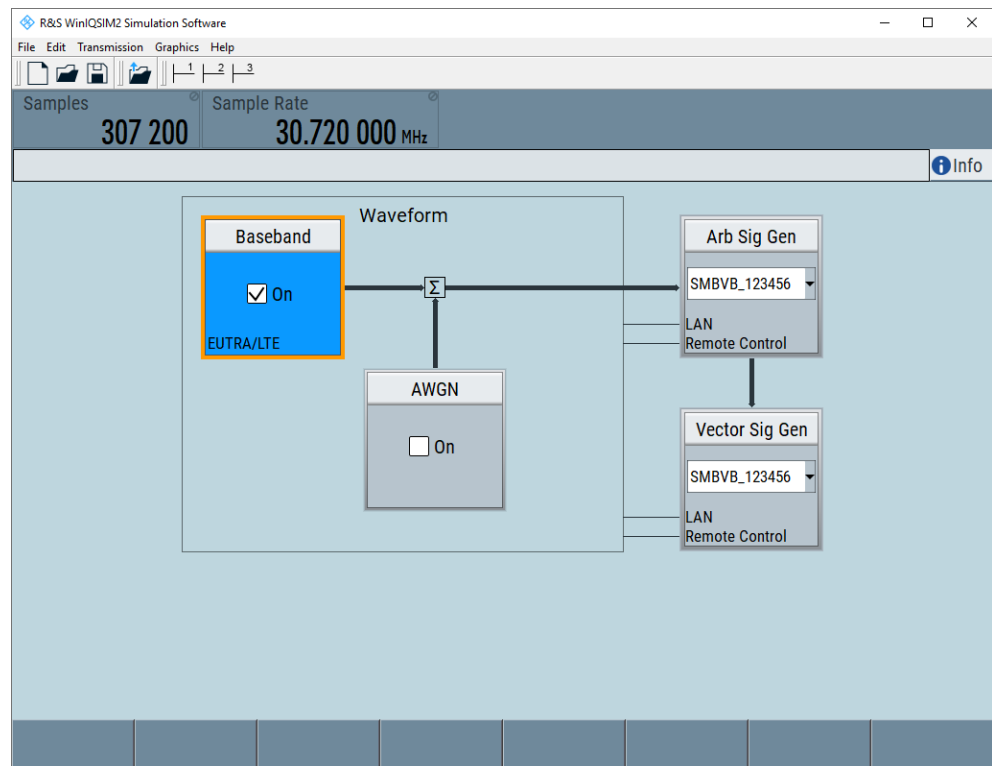





Select "Graphics" > "Graphic 1 (Complete)" to check for more information on the generated signal.

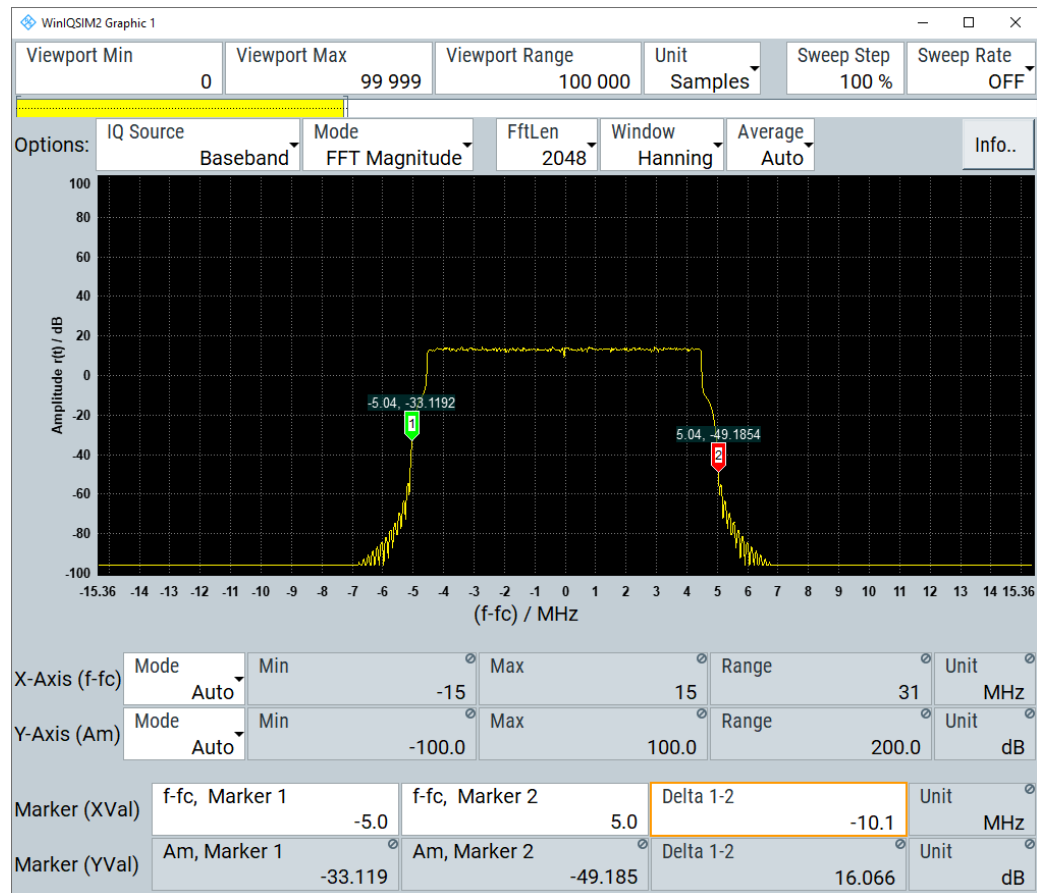


The display confirms the expected EUTRA/LTE 10 MHz spectrum.

### To transfer the waveform file to the R&S SMBV100B


1. At R&S WinIQSIM2, select "Transmission" > "Transmit".
2. In the "Waveform Transmission to Arbitrary Waveform Generator" dialog, proceed as follows:
  - a) "Transmit from" > "Internal (WinIQSIM2)".
  - b) "Transmit to" > "Instrument".
  - c) Select "File".
  - d) Define the filename of the transmitted file.
  - e) Activate "Automatically Load and Start Waveform".
  - f) Select the required baseband, for example, "Path A".
  - g) Add a comment to the waveform, for example, as follows:  
 "User Comment for File/Waveform" > "LTE\_TM\_1-10\_WinIQSIM2\_WV"
  - h) Select "Transmit".



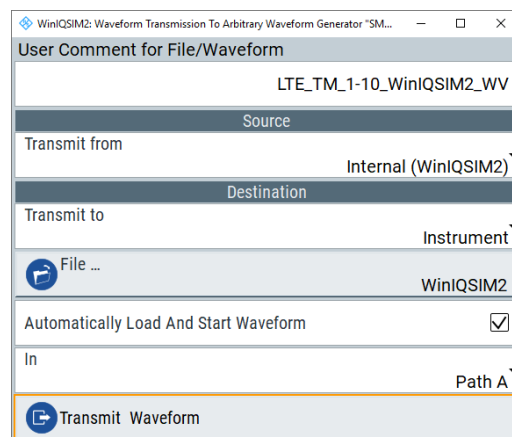

R&S WinIQSIM2 transmits the waveform to the default directory of the R&S SMBV100B.

3. In the R&S SMBV100B, select "Baseband" > "ARB".

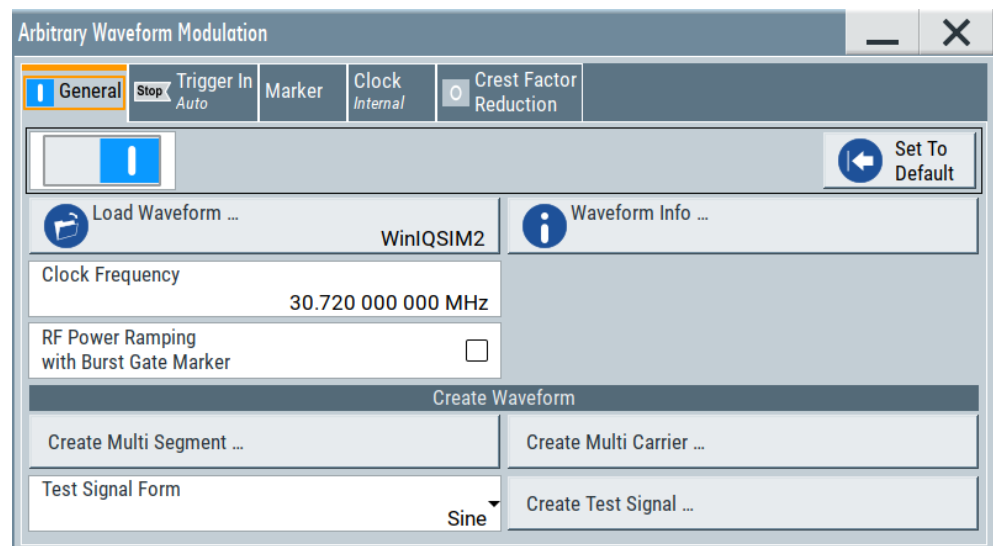

The dialog confirms that the ARB is active and plays the transmitted waveform.

#### 4.6.4.5 Creating waveforms with tag file format

The provided example uses a sine function in the I channel and a cosine function in the Q channel, each with 20 points. The example uses a short program written in the programming language C to calculate the sine and cosine values (see [Example "C-program for creating a waveform file"](#) on page 176). They are saved in the file `SICO.txt`. The decimal values in `SICO.txt` are normalized such that they are between  $-1.0$  and  $+1.0$ . The data is converted into binary format. The appropriate mandatory tags are added and the data is packed into the `WAVEFORM` tag. As result, the waveform file `SICO.wv` is generated.

This example follows the general principle of creating of a waveform manually, using the tag file format. The [Figure 4-13](#) illustrates this general workflow.



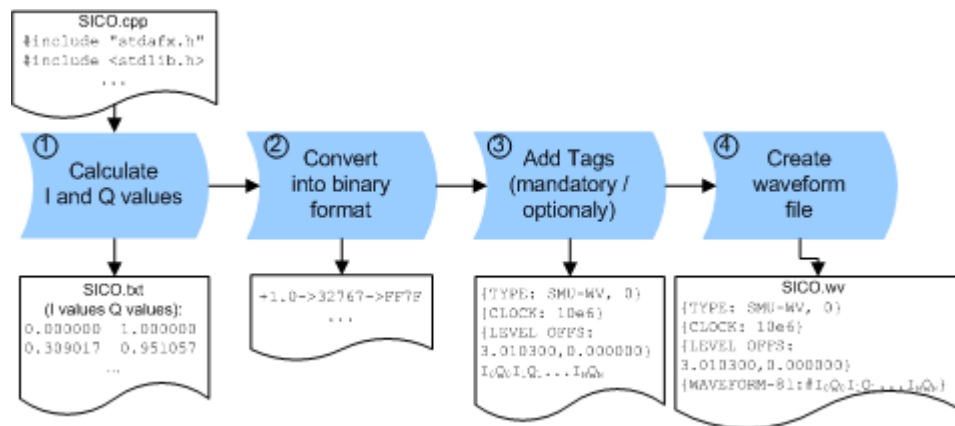


Figure 4-13: Principle of creating a waveform manually

The following steps outline how to create the waveform file `SICO.wv`:

1. Calculate the sine and cosine values. For example, use the `SICO.cpp` program.

The result is saved in the file `SICO.txt`.

```

0.000000 1.000000
0.309017 0.951057
0.587785 0.809017
0.809017 0.587785
0.951057 0.309017
1.000000 -0.000000
0.951057 -0.309017
0.809017 -0.587785
0.587785 -0.809017
0.309017 -0.951057
-0.000000 -1.000000
-0.309017 -0.951056
-0.587785 -0.809017
-0.809017 -0.587785
-0.951056 -0.309017
-1.000000 0.000000
-0.951056 0.309017
-0.809017 0.587785
-0.587785 0.809017
-0.309017 0.951057
  
```

Figure 4-14: Contents of `SICO.txt`: first column Sine (I), second column Cosine (Q)

2. Convert the values from the file `SICO.txt` into binary format consisting of 16-bit signed integer numbers. The numeric range between  $-1.0$  and  $+1.0$  corresponds to the modulation range of the waveform 16-bit D/A converter of  $-32767$  to  $+32767$ .

```

+1.0 -> 32767 -> = 0x7FFF
0.0 -> 0 -> = 0x0000
-1.0 -> -32767 -> = 0x8001
  
```



The [Figure 4-15](#) shows the calculation and conversion steps. The highlighted columns contain the resulting I and Q values represented in Little endian format.

Sample n	deg $= 360^\circ/20 * n$	$I = \sin(\text{deg})$	$I_{\text{quant,dec}}$ $= I * FS$ $= I * (2^{15}-1)$	$I_{\text{quant,hex}}$	$I_{\text{quant,hex}}$ (little-endian waveform file representation)	$Q = \cos(\text{deg})$	$Q_{\text{quant,dec}}$ $= Q * FS$ $= Q * (2^{15}-1)$	$Q_{\text{quant,hex}}$	$Q_{\text{quant,hex}}$ (little-endian waveform file representation)
0	0	0.000000	0	0000	0000 $I_0$	1.000000	32767	7FFF	FF7F $Q_0$
1	18	0.309017	10126	278E	8E27	0.951057	31163	79BB	BB79
2	36	0.587785	19260	4B3C	3C4B	0.809017	26509	678D	8D67
3	54	0.809017	26509	678D	8D67	0.587785	19260	4B3C	3C4B
4	72	0.951057	31163	79BB	BB79	0.309017	10126	278E	8E27
5	90	1.000000	32767	7FFF	FF7F	0.000000	0	0000	0000
6	108	0.951057	31163	79BB	BB79	-0.309017	-10126	D872	72D8
7	126	0.809017	26509	678D	8D67	-0.587785	-19260	B4C4	C4B4
8	144	0.587785	19260	4B3C	3C4B	-0.809017	-26509	9873	7398
9	162	0.309017	10126	278E	8E27	-0.951057	-31163	8645	4586
10	180	0.000000	0	0000	0000	-1.000000	-32767	8001	0180
11	198	-0.309017	-10126	D872	72D8	-0.951057	-31163	8645	4586
12	216	-0.587785	-19260	B4C4	C4B4	-0.809017	-26509	9873	7398
13	234	-0.809017	-26509	9873	7398	-0.587785	-19260	B4C4	C4B4
14	252	-0.951057	-31163	8645	4586	-0.309017	-10126	D872	72D8
15	270	-1.000000	-32767	8001	0180	0.000000	0	0000	0000
16	288	-0.951057	-31163	8645	4586	0.309017	10126	278E	8E27
17	306	-0.809017	-26509	9873	7398	0.587785	19260	4B3C	3C4B
18	324	-0.587785	-19260	B4C4	C4B4	0.809017	26509	678D	8D67
19	342	-0.309017	-10126	D872	72D8	0.951057	31163	79BB	BB79

Figure 4-15: I and Q values calculation and conversion

- Use an ASCII editor which is able to handle binary data. Create and add the following mandatory tags before this binary data set can be further processed:

- CLOCK
- LEVEL OFFS

An example of the `SICO.wv` file contents could be:

```
{TYPE: SMU-WV, 0}{CLOCK: 10e6}{LEVEL OFFS: 3.010300,0.000000}
0000FF7F8E27BB79 ... 72D8BB79
```

To simplify the example, the checksum is set to 0, i.e. the instrument does not evaluate a checksum.

**Tip:** The tags `TYPE`, `CLOCK`, `LEVEL OFFS` and `WAVEFORM` are mandatory for each waveform. All other tags are optional and can be inserted after the `TYPE` tag in arbitrary order.

- Pack the binary data into a `WAVEFORM` tag with the described structure.

```
{WAVEFORM-Length: #I0Q0I1Q1I2Q2 ... InQn}
```


- Calculate the Length  
Length = Number of I/Q pairs \* 4 + 1 = 20\*4 + 1 = 81 bytes
- Place the string `{WAVEFORM-81: #` at the beginning of the data set
- Place the symbol `}` at the end of the data set

The contents of the waveform file `SICO.wv` for 20 I/Q pairs is now ready for operation and reads:

```
{TYPE: SMU-WV, 0}
{CLOCK: 10e6}
{LEVEL OFFS: 3.010300,0.000000}
{WAVEFORM-81: #I0Q0I1Q1...InQn}
```



There is no readable representation for binary values in this document. This example uses the sequence  $I0Q0I1Q1 \dots I_nQ_n$  to characterize the binary code. The following figure shows this waveform in a data editor.

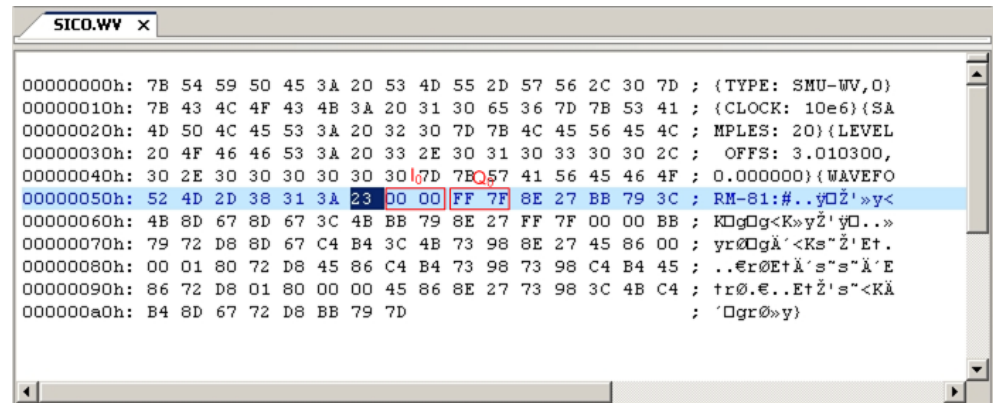

### Example: C-program for creating a waveform file

C-program `SICO.cpp` for creating the file `SICO.txt` containing 20 sine and cosine pairs, converting them into binary data and creating the waveform file `SICO.wv`.

```
// SICO.cpp
// Defines the entry point for the console application

#include "stdafx.h"
#include <stdlib.h>
#include <stdio.h>
#include <math.h>

int _tmain(int argc, _TCHAR* argv[])
{
    const unsigned int samples = 20;
    const float pi = 3.141592654f;
    int i;

    // SICO.txt
    // Creating the file SICO.txt containing 20 sine and cosine pairs
    float grad, rad;
    FILE *fp;
    fp = fopen("SICO.txt", "w");
    if (fp == 0)
        return;
    for (i=0; i<samples; i++)
    {
        grad = (360.0f / (float)samples) * (float)i;
        rad = grad * (pi / 180.0f);
        fprintf(fp, "%f %f\n", sin(rad), cos(rad));
    }
    fclose(fp);
}
```



```

// SICO.wv
// Generating a binary data set from the I/Q pairs in the file SICO.txt
// and storing the result to file SICO.wv
FILE *fp_sour, *fp_dest;
float i_float, q_float;
unsigned short i_usint, q_usint;
fp_sour = fopen("SICO.TXT", "rt");
if (fp_sour == 0)
    return -1;
fp_dest = fopen("SICO.WV", "wb");
if (fp_dest == 0)
{
    fclose(fp_sour);
    return -1;
}
// Write required tags to waveform file
fprintf(fp_dest, "{TYPE: SMU-WV,0}");
fprintf(fp_dest, "{CLOCK: 10e6}");
fprintf(fp_dest, "{SAMPLES: %d}", samples);
// RMS, Peak
fprintf(fp_dest, "{LEVEL OFFS: %f,%f}", -1.0f * 20.0f * log10(1.0f/sqrt(2.0f)), 0.0f);
fprintf(fp_dest, "{WAVEFORM-%d:#", (samples * 4) + 1);
for (i=0; i<samples; i++)
{
    // Read I/Q pair from ASCII file
    if (fscanf(fp_sour, "%f %f", &i_float, &q_float) == EOF)
        break;
    // Convert I/Q pair to unsigned short
    i_usint = (unsigned short)floor((i_float * 32767.0) + 0.5);
    q_usint = (unsigned short)floor((q_float * 32767.0) + 0.5);
    // Write converted I/Q pair to waveform file
    fwrite(&i_usint, 2, 1, fp_dest);
    fwrite(&q_usint, 2, 1, fp_dest);
}
fprintf(fp_dest, "}");
fclose(fp_dest);
fclose(fp_sour);
return 0;
}

```

#### 4.6.4.6 Defining periodically repeating traces

If your test setup requires marking an event, for example, each frame start, it is sufficient to define the trace once and repeat it over the length of a waveform. Repeating is useful for long waveforms with periodical marker signals.

The following examples use marker traces. You can use control lists analogously.



**To define periodical marker trace**

The waveform in the example below consists of three frames, each frame has a length of 100 samples. Waveform processing is continuous via "Trigger Mode" > "Auto".

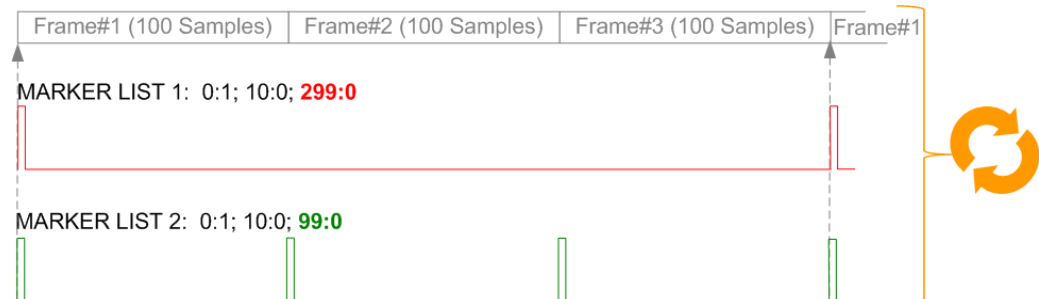


Figure 4-16: Example: Defining marker traces without **CONTROL LENGTH** tag

To define a restart marker and a frame start marker, use the following tags:

1. The waveform is 300 samples long, i.e. set `{SAMPLES: 300}`.
2. Set two `[TRACE] LIST` tags:
  - For Marker 1 that acts as a restart marker:  
`{MARKER LIST 1: 0:1; 10:0; 299:0}`
  - For Marker 2 that marks each frame start:  
`{MARKER LIST 2: 0:1; 10:0; 99:0}`
3. Do not use the `CONTROL LENGTH` tag.

The length of the repeated patterns is determined by the last sample number in the `[TRACE] LIST` that is the last `{Pos:State}`.

**Example: CONTROL LENGTH tag and trace processing**

In the example below, use the same marker traces and set the `CONTROL LENGTH` tag, for example `{CONTROL LENGTH: 150}`.

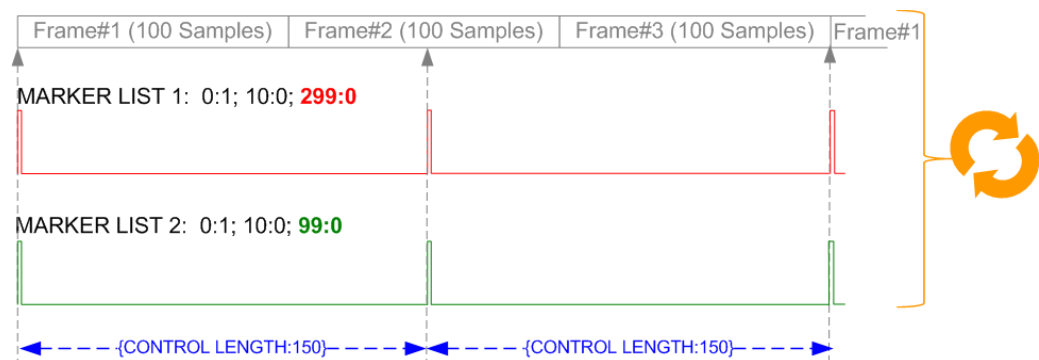


Figure 4-17: Example: Processing control signals with **CONTROL LENGTH** tag

The length of **all** control signals is determined by the `CONTROL LENGTH`. Observe how the marker traces are processed. In this example, both marker traces are repeated every 150 samples.



#### 4.6.4.7 Creating control lists with tag file format

The R&S SMBV100B provides the following ways to create a file containing control signals:

- To use the dedicated "Control Data Editor" and create a file in ASCII format and with extension \*.dm\_iqc, see ["To create a control list in ASCII format manually"](#) on page 138.
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 180.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 181.

##### To create a control list with tag file format

To create an ASCII control list file directly, use the provided tag commands.

1. Use a hex data editor.
2. Create the **mandatory** tags:
  - `TYPE`
  - `[TRACE] LIST`

The `[TRACE] LIST` tag defines the individual markers or control traces in a combined `{Pos:State}` way within the control list period (`CONTROL LENGTH`).

3. Create the **recommended** tag `CONTROL LENGTH`.

This tag defines the periodicity of the total control list.

4. Add required optional tags.  
Insert these tags after the `TYPE` tag in arbitrary order.

For example, the control list file contains the following information:

```
{TYPE:SMU-CL}{COPYRIGHT:Rohde&Schwarz}
{DATE:2012-06-11;15:00:09}{HOP LIST:0:0;498:1;506:0}
{CW MODE LIST:0:0;380:1}{LEVATT LIST 3:0:0;464:1}
{BURST LIST:0:0;122:1;270:0;582:1;924:0}
{MARKER LIST 4:0:0;706:1;764:0}
{MARKER LIST 3:0:0;530:1;633:0}
{MARKER LIST 2:0:0;350:1;457:0}
{MARKER LIST 1:0:0;108:1;160:0}
{CONTROL LENGTH:1000}
```

The [Figure 4-10](#) shows the representation of the created control list in the "CList" data editor dialog.

Compare the displayed ramp values of "Marker 1" and the "Total List Length" with the values in the corresponding tags.

**Note:** In the provided example, the tags have been separated by line breaks for better reading.

See also [Example "To assign and activate control signals"](#) on page 180.



### To create a control list in binary format

Generation of a control list in binary format is not necessary but possible.

- Use the commands `BB:DM:CLIST:...` to generate a control list in binary format (see ["Handling list files"](#) on page 842 and the example in `[ :SOURCE<hw> ] :BB:DM:CLIST:DATA` on page 845).

See also [Example "To assign and activate control signals"](#) on page 180.

### Example: To assign and activate control signals

**Note:** Irrespectively on the way they are created, generated control lists are not automatically used.

We assume, that a control list `clist.dm_iqc` containing information on marker 2, burst gate and level attenuation control signals is created and saved in the directory `/var/user/temp/`.

The following example shows how to enable the R&S SMBV100B to:

- Use the control list for a particular marker output, e.g. the "Custom Digital Modulation > Marker 2".
- Use the Burst Gate and Level Attenuation control signals as defined in a control list.

```
MMEM:CDIRectory "/var/user/temp"
SOURCE1:BB:DM:CLIST:CATalog?
// Response: clist
SOURCE1:BB:DM:CLIST:SElect "clist"
SOURCE1:BB:DM:TRIGger:OUTPut2:MODE CLIST
SOURCE1:BB:DM:PRAMp:SOURce INTernal
```

#### 4.6.4.8 Creating data lists with tag file format

The R&S SMBV100B provides the following ways to create a data list file:

- To use the dedicated "Data List Editor" and create a file with extension `*.dm_iqd`, see ["To create data lists manually"](#) on page 140.
- To use the tag-oriented format and create a data list file, see ["To create a data list with tag file format"](#) on page 180.
- To use SCPI commands and create a file in binary format, see ["To create a data list in binary format"](#) on page 181.

### To create a data list with tag file format

1. Use a hex data editor.
2. Create the mandatory tags: `{TYPE}`, `{DATA BITLENGTH}` and `{DATA LIST}`
3. Consider the tag syntax and rules.

The following is an example of the data list file content. The tags are separated by line breaks for better reading. The text in brackets is short explanation.



For details, see the tag description:

- `TYPE`
- `{DATA BITLENGTH}`
- `{DATA LIST-Length}`

```
{TYPE:SMU-DL}{COPYRIGHT:Rohde&Schwarz}
```

```
{DATE:201-06-11;15:00:09}
```

```
{DATA BITLENGTH: 8}
```

```
{DATA LIST-2: #d0d1...d7}
```

(1 byte containing 8 data bits d0 to d7 in binary format, where d0 is the MSB)

See also:

- [Figure 4-11](#) for representation of the created data list in the "Data List Editor".
- [Example "To assign and activate a data list"](#) on page 181

### To create a data list in binary format

- Use the commands `BB:DM:DLIST:....`

See ["Handling list files"](#) on page 842.

```
MMEM:CDIRectory "/var/user"
// Create a new data list file.
SOURcel:BB:DM:DLIST:SElect "dl_new"
// Append data to the data list and query the content.
FORMat ASCii
SOURcel:BB:DM:DLIST:DATA:APPend 0,1,1,1,0,1,0,1
SOURcel:BB:DM:DLIST:DATA?
// Response: 0,1,1,1,0,1,0,1
```

See also [Example "To assign and activate a data list"](#) on page 181.

### Example: To assign and activate a data list

We assume, that a created data list file `dl.dm_iqd` in the directory `/var/user/`. The following example shows how to use this data list as data source for the custom digital modulation.

```
MMEM:CDIRectory "/var/user"
SOURcel:BB:DM:DLIST:CATalog?
// Response: dl
SOURcel:BB:DM:DLIST:SElect "dl"
```

#### 4.6.4.9 Editing waveform files, data and control lists

You can edit the internally and externally created waveform files, data and control lists. The waveform, data and control lists files contain binary and ASCII data.

Consider the following rules while editing files with binary data.

#### Rules for editing binary data

- **Use hex data editor**  
Always use a hex data editor to edit files containing binary data.



Editing of binary data file with a text editor, even if you only change the ASCII part of the file, corrupts the file.

- **Adapt the length information in the {EMPTYTAG}**

If you change the content of a waveform file, change also the {EMPTYTAG-Length} value.

For example, change this value, if you add a tag or add bytes to an existing tag.

Reduce the value by the number of newly introduced bytes.

#### 4.6.5 Tags for waveforms, data and control lists

The R&S SMBV100B uses a simple tag-oriented format for externally or internally generated waveforms, data and control lists. Files with this format can be transmitted from an external computer to the instrument and vice versa. These files are transmitted as a binary data block, using SCPI command [:SOURce<hw>]:BB:ARbitrary:WAVEform:DATA, [:SOURce<hw>]:BB:DM:DLISt:DATA, and [:SOURce<hw>]:BB:DM:CLISt:DATA.

File can be transmitted via the GPIB interface of the instrument.

##### Tag general format

Tags are self-contained information units, enclosed in braces { }. Their general format is {Name: Data} or {Name-Length: Data}. The colon separates the name part and the data part. The colon can be followed by a space for the sake of legibility.

- The **Name** identifies the tag. It is always expressed in capital letters.
- The **Data** is tag-specific, and usually it is in ASCII plain text.
- The **Length** specifies the number of bytes in a WAVEFORM tag, DATA LIST tag, or EMPTYTAG  
Length is an ASCII integer value, defining the number of bytes from the colon : to the end brace }

##### Rules

Each waveform file must begin with the TYPE tag. The sequence of the remaining tags is arbitrary. For each tag, an indication shows whether it must be included in the file concerned (mandatory) or may be included (optional).

Unknown tags are not analyzed by the R&S SMBV100B; they are left unchanged and saved without an error message for a possible further read back.

R&S SMU waveforms can also be loaded on the instrument, where they are converted internally into an R&S SMBV100B waveform.



In all examples of file contents listed in this section, the tags have been separated by line breaks for better reading.



### Tag description

This section describes the **mandatory TYPE tag** followed by description of all other tags, grouped per file type and listed in an alphabetical order. Some tags are valid for all three file types. If a tag is valid only for a single file type, e.g. only for a waveform, this fact is indicated in the description.

### Related step-by-step descriptions

See:

- [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177
- [Chapter 4.6.4.5, "Creating waveforms with tag file format"](#), on page 173
- [Chapter 4.6.4.7, "Creating control lists with tag file format"](#), on page 179
- [Chapter 4.6.4.8, "Creating data lists with tag file format"](#), on page 180
- [Chapter 4.6.4.9, "Editing waveform files, data and control lists"](#), on page 181

### Tags description

• <a href="#">Common tags</a> .....	183
• <a href="#">Tags for single and multi-segment waveforms</a> .....	185
• <a href="#">Tags for data lists</a> .....	196
• <a href="#">Tags for control lists</a> .....	197

#### 4.6.5.1 Common tags

The following tags are common to all file types. For description of the dedicated tags, see

---

**{TYPE: magic, xxxxxxxx}**

**(mandatory, must be the first tag in the file)**

Identifies the file as a valid R&S SMBV100B file. It must be present and must be the first in the waveform. If a file of the same name exists on the target medium, it is overwritten.

#### Setting parameters:

magic Designates the file type and has the following values:

##### **SMU-WV**

A valid R&S SMBV100B waveform.

##### **SMU-MWV**

A valid R&S SMBV100B multi-segment waveform.

##### **SMU-DL**

A valid R&S SMBV100B data list.

##### **SMU-CL**

A valid R&S SMBV100B control list.

xxxxxxx

Is an ASCII-coded checksum of the data part of the **WAVEFORM** tag in the file. This value is always 0 for data lists and control lists.



The checksum for waveforms is used for detecting transmission errors. If the `TYPE` tag contains 0 or a non-numeric value for the checksum, it is ignored.

It is calculated in accordance with the algorithm given below, where:

`start` is a pointer to the first byte after the `#` character in the `WAVEFORM` tag

`length` is the number of bytes between `start` and the closing curly bracket (excluding the latter; `length` must be divisible by 4 without a remainder.

```
UINT32 checksum(void *start, UINT32 length)
{
    UINT32 i, result = 0xA50F74FF;
    for(i=0; i < length/4; i++)
        result = result ^ ((UINT32 *)start)[i];
    return(result);
}
```

The checksum is currently not verified when waveforms are loaded.

**Example:**

```
{TYPE: SMU-WV,106656}
BB:ARB:WAV:TAG? 'TYPE'
Queries the content of the TYPE tag.
Response: 'SMU-WV,106656'
This is a valid waveform.
```

---

**{COMMENT: string}**

The tag contains a plain text ASCII string of arbitrary length. The string is not analyzed in the R&S SMBV100B. It is used to describe the file. The string is allowed to contain all printable ASCII characters except the closing curly bracket.

**Example:**

```
{COMMENT: File with data for 3GPP enhanced
channels}
BB:ARB:WAV:TAG? 'COMMENT'
Queries the content of the COMMENT tag of the selected waveform file.
Response: 'File with data for 3GPP enhanced
channels'
The comment on the waveform reads "File with data for 3GPP enhanced channels".
```

**Usage:**

Setting only

---

**{COPYRIGHT: string}**

The tag contains an ASCII string of arbitrary length. The string is not analyzed in the R&S SMBV100B. It is used to save copyright information about the file content.



**Example:** {COPYRIGHT: Rohde&Schwarz}  
 BB:ARB:WAV:TAG? 'COPYRIGHT'  
 Queries the content of the COPYRIGHT tag of the selected waveform file.  
 Response: 'Rohde&Schwarz'  
 Copyright resides with Rohde & Schwarz.

**Usage:** Setting only

---

**{DATE: yyyy-mm-dd;hh:mm:ss}**

**(optional)**

The tag contains the date and time at which the file was created. The year must be expressed as four digits. The instrument does not analyze this tag.

**Example:** {DATE: 2009-04-02;14:32:12}  
 BB:ARB:WAV:TAG? 'DATE'  
 Queries the content of the DATE tag of the selected waveform file.  
 Response: '2009-04-02;14:32:12'  
 The waveform was created on April 2, 2009 at 14 hrs 32 min

**Usage:** Setting only

#### 4.6.5.2 Tags for single and multi-segment waveforms

The following tags apply to waveforms and multi-segment waveforms, additionally to the tags listed in [Chapter 4.6.5.1, "Common tags"](#), on page 183.

{CLOCK: frequency}.....	186
{CONTROL LENGTH: ControlLength}.....	186
{EMPTYTAG-Length: #EmptySequence}.....	187
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}.....	188
{MARKER MODE [#]: GENERATOR}.....	189
{SAMPLES: Samples}.....	189
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	191
{MWV_SEGMENT_COUNT: NumOfSeg}.....	192
{MWV_SEGMENT_DURATION: SegDur0, SegDur1, ..., SegDurN-1}.....	192
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	192
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	193
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	193
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	193



{MWV_SEGMENT_LEVEL_MODE: Mode}.....	194
{MWV_SEGMENT_LEVEL_OFFS:	
RMSOffs_dBSg0, PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	194
{MWV_SEGMENT_SETTINGS_FILE: SegSettingFilePath}.....	195
{MWV_SEGMENT_FILES:	
"FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	195
{MWV_SEGMENTx_COMMENT: text}.....	195
{CONTROL LIST WIDTH4–Length: #m0m1...mx...mM-1}.....	195

### {CLOCK: frequency}

#### (mandatory for waveforms)

The tag specifies the clock frequency at which the waveform has to be output, in Hz (on multi-segment waveforms this tag contains the maximal clock of all segments).

A query of `ARB:CLOCK?` after loading the waveform returns the value set using the `CLOCK` tag. This value can later be altered with the command `ARB:CLOCK?`.

**Example:**

```
{CLOCK: 54000000}
BB:ARB:WAV:TAG? 'CLOCK'
```

Queries the content of the `CLOCK` tag.

Response: 54000000

The clock frequency is set to 54 MHz.


**Usage:** Setting only

### {CONTROL LENGTH: ControlLength}

#### (optional / recommended for marker and control lists)

The tag specifies the length of *all* control or marker list in ASCII format.

The control length influences the way the marker and control lists are processed, in particular the way traces are repeated; see [Figure 4-18](#).

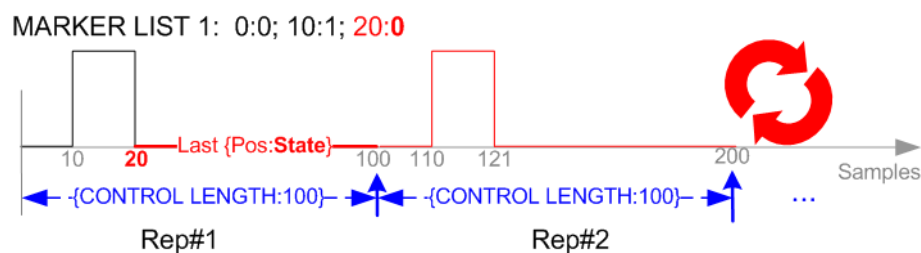

**Figure 4-18: Example: Processing of MARKER TRACE if CONTROL LENGTH is specified**

If the `CONTROL LENGTH` tag is not used, the marker and control list length are determined by the last position, that is the last **{Pos:State}** couple, defined in the particular `[TRACE] LIST` tag; see [Figure 4-19](#).



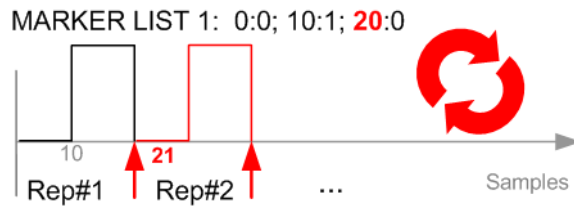


Figure 4-19: Example: Processing of MARKER TRACE if CONTROL LENGTH is not used

To maintain marker signals and waveform data synchronized, set the `CONTROL LENGTH` to be equal to the number of samples specified with the tag `SAMPLES`.

See also [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177.

**Example:**

```
{CONTROL LENGTH: 500}
SOURCE:BB:ARbitrary:CLIST:TAG? 'CONTROL LENGTH'
Queries the length of the control list.
Response: 500
```

**Manual operation:** See ["Total List Length"](#) on page 136

---

#### **{EMPTYTAG-Length: #EmptySequence}**

**(mandatory in automatically generated one and multi-segment waveforms)**

This tag is empty, i.e. contains no data, and is used as placeholder.

##### **Setting parameters:**

**Length** An ASCII integer value that specifies the number of bytes in the `EMPTYTAG`, i.e. defines the number of bytes from the colon `:` to the end brace `}`

**Note:** If you change the content of a waveform file, change also the `{EMPTYTAG-Length}` value. For example, if you add a tag or add bytes to a tag, reduce the length by the number of newly introduced bytes.

**EmptySequence** An empty sequence containing blanks only. The number of used blanks is calculated as the difference between the hex addresses of the `{WAVEFORM}` tag and the hash sign `#` in the `{EMPTYTAG}`.

The `{WAVEFORM}` tag always starts at hex address `#4000`.



**Example:**

```
{TYPE:SMU-WV, 837236424}
{COPYRIGHT:2003 Rohde&Schwarz SMU}
{DATE:2012-07-11;14:38:01}
{SAMPLES:80000}
{CLOCK:8666666.666666666}
{VECTOR MAX:1.000000038569158}
{LEVEL OFFS:3.333553817875577e-07,0}
{MARKER LIST 1:0:1;1:0;1249:0}
{MARKER LIST 2:0:1;1:0;1249:0}
{MARKER LIST 3:0:1;1:0;1249:0}
{MARKER LIST 4:0:1;1:0;1249:0}
{EMPTYTAG-15947:# ...}
{WAVEFORM-320017:#IQIQIQ...}
```

The example waveform file contains 436 (0x1b4) bytes before the # sign in the EMPTYTAG; the hex address of the # sign is 0x1b5. The {WAVEFORM} starts at 0x4000. The EMPTYTAG contains 15946 blanks and has a length of (15946+1) bytes.

**Usage:**

Setting only

---

**{LEVEL OFFS: RMSOffset\_dB,PeakOffset\_dB}**
**(recommended for waveforms)**

The tag determines the level of the ARB signal in the waveform file. The offset levels define the offset of RMS and peak value relative to the 16-bit full scale modulation (-32767 to + 32767) = 0 dB.

**Setting parameters:****RMSOffset\_dB**

Defines the RMS level offset of the signal relative to full scale ARB signal in the WAVEFORM tag. The offset is defined in ASCII float format. The value is always positive.  
A 3 dB value indicates that the RMS level of the signal is 3 dBs below the full scale.  
full scale = max. amplitude of vector of I/Q samples =  $|S_{IQ}|_{\max} = \sqrt{I^2+Q^2}_{\max} = 0 \text{ dB}$

**PeakOffset\_dB**

Defines the peak level offset of the signal relative to full scale for the ARB signal in the WAVEFORM tag. The offset is defined in ASCII float format.  
The value usually equals 0 dB as usually the I/Q samples (signed 16-bit integer values) are modulated to full scale: Full scale = 0 dB = max. amplitude of vector of I/Q samples =  $|S_{IQ}|_{\max} = \sqrt{I^2+Q^2}_{\max} = (2^{15})-1 = 32767$ .  
A positive PeakOffset\_dB value indicates that a headroom to full scale is provided when generating the waveform. A negative PeakOffset\_dB value indicates that overrange is likely for some samples, i.e. clipping might occur.  
The crest factor can be calculated from the two values as follows:



$$\text{Crest Factor} = |\text{PeakOffset\_dB} - \text{RMSOffset\_dB}|$$
**Example:**

```
{LEVEL OFFS: 3.45,2}
```

```
BB:ARB:WAV:TAG? 'LEVEL OFFS'
```

Queries the content of the LEVEL OFFS tag of the selected waveform file.

```
Response: 3.45,2
```

The level of the waveform is below full scale, clipping does not occur.

**Usage:**

Setting only

**{MARKER MODE [#]: GENERATOR}****(Optional for waveforms)**

The tag defines how the marker signals are generated. The tag is included in the waveforms, created by the R&S WinIQSIM2 software.

- Tag not used

The marker signals defined with the tag **MARKER LIST** are converted into a separate binary control list. When the waveform is loaded into the ARB, this control list is also loaded automatically and processed synchronous with the waveform.

**Note:** This method reduces the maximum waveform length (given as number of samples). The number of available samples is limited, because each marker requires 4 bits per I/Q sample, additionally to the 32 bits required to describe an I/Q sample.

- Tag is used

The marker signals defined with the tag **MARKER LIST** are processed internally; additional control list is not created. If the tag is used for **all 3 markers**, the whole ARB memory is available for the I/Q samples.

**Note:** If this tag is used, the maximum number of marker states defined with the tag **MARKER LIST** is 64, i.e. Pos<sub>63</sub>:State<sub>63</sub>

**Setting parameters:**

[#]

1 to 3

Sets the marker number.

**Example:**

```
{MARKER MODE 1: GENERATOR}
```

```
{MARKER MODE 2: GENERATOR}
```

```
{MARKER MODE 3: GENERATOR}
```

**Usage:**

Setting only

**{SAMPLES: Samples}****(recommended for waveforms)**

The tag contains the number of I/Q samples in the waveform in ASCII format.

On multi-segment waveforms, this tag contains the total I/Q samples of all segments.



**Example:**                   {SAMPLES: 1000}  
                               BB:ARB:WAV:TAG? 'SAMPLES'  
                               Queries the content of the SAMPLES tag of the selected waveform file.  
                               Response: 1000  
                               The waveform contains 1000 I/Q samples.

**Usage:**                   Setting only

See also [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177.

---

{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}  
 {[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}

(mandatory for control lists / optional for waveforms)

The tag contains the data for the marker and control signals in the control list or the marker signals of ARB waveforms.

Traces are processed different, depending on the selected [CONTROL LENGTH](#). See for example [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177.

The processing of the marker traces (MARKER LIST) depends additionally on the presence of the tag [MARKER MODE](#).

**Setting parameters:**

[TRACE]	MARKER   BURST   LEVATT   CW MODE   HOP   MAP Name of the marker or control signal. For ARB waveforms, it is only meaningful to define marker signals; in the ARB multi-segment waveforms these tags are ignored!
[#]	1 to 3 Sets the marker or control trace number; supported is only LEVATT LIST 1.
Pos	Specifies in ASCII format the position (i.e. sample number or data value), with effect from which the binary State of the marker or of the control signal changes. If the tag <a href="#">MARKER MODE</a> is used, the maximum number of marker states is 64, i.e. Pos <sub>63</sub> :State <sub>63</sub> .
State	0   1 Specifies the binary state of the marker or of the control signal from Pos <sub>N</sub> to Pos <sub>N+1</sub> exclusive in ASCII format.



- Example:** `{MARKER LIST 1: 0:0;10:1;20:0;30:1}`  
`BB:DM:CLIS:TAG? 'MARKER LIST 1'`  
 Queries the content of the `MARKER LIST 1` tag of the selected control list file.  
 Response: `'0:0;10:1;20:0;30:1'`  
 The marker setting for samples 0 to 9 = 0 (low), for 10 to 19 = 1 (high) and for 20 to 29 = 0. From sample 30 onward the marker setting = 1.
- Example:** `{LEVATT LIST 1: 0:0;10:1;20:0;30:1}`  
`BB:DM:CLIS:TAG? 'LEVATT LIST 1'`  
 Queries the content of the `LEVATT LIST 1` tag of the selected control list file.  
 Response: `'0:0;10:1;20:0;30:1'`  
 Level attenuation applies to data values 10 to 19 (high) and from data value 30 onward.
- Usage:** Setting only
- Manual operation:** See ["Select Ramp to Edit"](#) on page 136

---

#### **{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}**

(mandatory for waveforms)

##### **Setting parameters:**

- Length** Specifies the number of bytes in a `WAVEFORM` tag and is calculated as follows:  

$$\text{Length} = \text{Number of I/Q pairs} * 4 \text{ (2 bytes per I and 2 bytes per Q value)} + 1 \text{ byte (the length of the \#)}$$
- IxQx** `IxQx...` represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each component consists of 2 bytes in Little endian format representation, i.e. least significant byte (LSB) first.  
 The values of the 2 bytes in an I component and a Q component are in the range 0x0 to 0xFFFF (-32767 to +32767). This value is transferred to the D/A converter.  
 This tag is also used to store multi-segment waveforms. The I/Q streams of the individual waveforms are directly concatenated to one collectively waveform I/Q stream.  
 The number of segments and the start offset and length of the individual segments inside the total waveform I/Q stream is determined by the additional tags [MWV\\_SEGMENT\\_COUNT](#), [MWV\\_SEGMENT\\_START](#), and [MWV\\_SEGMENT\\_LENGTH](#).  
 Further `MWV_SEGMENT_...` tags are also available, for example for level and clock information.



- Example:** **One segment waveform**  
 {WAVEFORM-401: #I<sub>0</sub>, Q<sub>0</sub>, I<sub>1</sub>, Q<sub>1</sub>, I<sub>2</sub>, Q<sub>2</sub>, ..., I<sub>99</sub>, Q<sub>99</sub>}  
 100 I/Q pairs with 4 bytes each are transmitted - none multi-segment
- Example:** **Multi-segment waveform**  
 {WAVEFORM-1201:  
 #I<sub>0,Seg0</sub>, Q<sub>0,Seg0</sub>, I<sub>1,Seg0</sub>, Q<sub>1,Seg0</sub>, ..., I<sub>99,Seg0</sub>, Q<sub>99,Seg0</sub>, I<sub>0,Seg1</sub>, Q<sub>0,Seg1</sub>, I<sub>1,Seg1</sub>,  
 Q<sub>1,Seg1</sub>, ..., I<sub>199,Seg1</sub>, Q<sub>199,Seg1</sub>}  
 2 segments: segment 0 with 100 I/Q pairs; segment 1 with 200 I/Q pairs. Each I/Q pair consists of 2\*16 bit = 4 bytes
- Usage:** Setting only

**{MWV\_SEGMENT\_COUNT: NumOfSeg}****(mandatory for multi-segment waveforms)**

The tag contains the number of segments in the multi-segment waveform in ASCII integer format.

- Example:** {MWV\_SEGMENT\_COUNT: 2}  
 Multi-segment waveform with 2 segments

**Usage:** Setting only

**{MWV\_SEGMENT\_DURATION: SegDur0, SegDur1, ..., SegDurN-1}****(optional for multi-segment waveforms)**

The tag gives the time duration (in seconds) per segment.

- Example:** {MWV\_SEGMENT\_DURATION: 1, 0.5}  
 Multi-segment waveform with 2 segments, lasting 1 s and 0.5 s each.

**Usage:** Setting only

**{MWV\_SEGMENT\_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}****(mandatory for multi-segment waveforms)**

The tag contains a list of I/Q sample lengths for every segment in the multi-segment waveform in ASCII integer format.

- Example:** {MWV\_SEGMENT\_LENGTH: 100, 200}  
 2 segments: 100 samples in segment 0 and 200 samples in segment 1.

**Usage:** Setting only



---

**{MWV\_SEGMENT\_START:****SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}****(mandatory for multi-segment waveforms)**

The tag contains a list of I/Q sample start offsets for every segment in the multi-segment waveform in ASCII integer format.

**Example:**

{MWV\_SEGMENT\_START: 0,100}

2 segments with 100 samples in segment 0 and 200 samples in segment 1.

The start offset of first segment is 0 samples, start offset of next segment 1 is the sample length of segment 0 = 100 samples.

**Usage:**

Setting only

---

**{MWV\_SEGMENT\_CLOCK\_MODE: Mode}****(mandatory for multi-segment waveforms)**

The tag contains a string in ASCII format which supplies the clock rate mode, that was used for calculation of the multi-segment output waveform (see also "[Clock](#)" on page 218).

The tag **CLOCK** contains always the highest clock rate of all segments. The tag **MWV\_SEGMENT\_CLOCK** contains the clock rates of the individual segments.

**Setting parameters:****Mode****UNCHANGED**

The segments may have different clock rates; each segment is output with the clock rate defined in its waveform file.

**HIGHEST**

All segments are output at the highest available clock rate.

**USER**

All segments are output at the clock rate defined by the user.

**Note:** Only upsampling is allowed, no downsampling!

**Example:**

{MWV\_SEGMENT\_CLOCK\_MODE: UNCHANGED}

**Usage:**

Setting only

---

**{MWV\_SEGMENT\_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}****(mandatory for multi-segment waveforms)**

The tag contains a list of clock frequencies for every segment in the multi-segment waveform in ASCII floating point format.



**Example:** `{MWV_SEGMENT_CLOCK: 100e6, 80e6}`  
 2 segments: clock of segment 0 is 100 MHz, clock of segment 1 is 80 MHz.  
**Note:** If the segments have different clock frequencies, there are some restrictions on signal output, i.e. seamless switching between segments is only possible, if all segments have the same clock frequency. Software resampling (upsampling) can be used to bring all segments to the same clock.

**Usage:** Setting only

---

#### **{MWV\_SEGMENT\_LEVEL\_MODE: Mode}**

##### **(optional for multi-segment waveforms)**

The tag contains a string in ASCII format which supplies the clock rate mode, that was used for calculation of the multi-segment output waveform.

See also "[Level](#)" on page 218.

##### **Setting parameters:**

Mode	<b>UNCHANGED</b> Concerning the level settings, the segments are output exactly as defined in the individual files. The value displayed with the parameter "Task bar > Level" applies only to the segment with the highest RMS value. The remaining segments are output at a lower level than the displayed value. <b>EQUALRMS</b> Segments are output so that all segments have the same RMS value. The value displayed with the parameter "Task bar > Level" applies to all segments.
------	---

**Example:** `{MWV_SEGMENT_LEVEL_MODE: UNCHANGED}`

**Usage:** Setting only

---

#### **{MWV\_SEGMENT\_LEVEL\_OFFSETS:**

**RMSOffs\_dBSg0, PeakOffs\_dBSg0, ..., RMSOffs\_dBSgN-1, PeakOffs\_dBSgN-1}**

##### **(mandatory for multi-segment waveforms)**

The tag contains a list of level pairs in ASCII floating point format, one pair for every segment in the multi-segment waveform. The first value of a level pair defines the rms offset and the second value the peak offset relative to the 16-bit full scale modulation  $(-32767; + 32767) = 0$  dB. The meaning of one level value pair is the same as in the [LEVEL\\_OFFSETS](#) tag for normal waveforms.

**Example:** `{MWV_SEGMENT_LEVEL_OFFSETS: 3.0, 0.0, 6.0, 0.0}`  
 2 segments: RMS level of segment 0 is 3 dB below full scale;  
 RMS level of segment 1 is 6dB below full scale.  
 Peak level of both segments is 0 dB full scale.



**Usage:** Setting only

---

#### **{MWV\_SEGMENT\_SETTINGS\_FILE: SegSettingFilePath}**

##### **(optional for multi-segment waveforms)**

The tag contains the file path and filename of the multi-segment file, used for the calculation of the multi-segment waveform.

**Example:**           {MWV\_SEGMENT\_SETTINGS\_FILE:  
                      "/var/user/Settings.inf\_mswv"}  
                      Multi-segment file path and filename.

**Usage:** Setting only

---

#### **{MWV\_SEGMENT\_FILES:**

**"FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}**

##### **(optional for multi-segment waveforms)**

The tag contains a list of file names for every segment in the multi-segment waveform in ASCII format.

**Example:**           {MWV\_SEGMENT\_FILES: "/var/user/temp/sine.wv",  
                      "/var/user/temp/rect.wv"}

**Usage:** Setting only

---

#### **{MWV\_SEGMENTx\_COMMENT: text}**

##### **(optional for multi-segment waveforms)**

The tag contains a user comment for a specific segment  $x = [0 \dots \text{NumOfSeg}-1]$  in the multi-segment waveform in ASCII format.

**Example:**           {MWV\_SEGMENT1\_FILES: segment 1 contains a QPSK  
                      signal.}

**Usage:** Setting only

---

#### **{CONTROL\_LIST\_WIDTH4–Length: #m0m1...mx...mM-1}**

##### **(optional for waveforms and multi-segment waveforms)**

The tag contains a binary marker element stream, which is output synchronously to the I/Q sample sequence. One marker element  $m_x$  consists of 4 bit, which are assigned to the 3 possible marker traces of the instrument (1 bit per marker trace). One 4-bit marker element is required for every I/Q sample in the **WAVEFORM** tag. Hence, the number of marker elements  $m$  should be equal to the number of I/Q samples. The **CONTROL LENGTH** tag has to contain the number of all marker elements  $m$ .



MSB 7	Byte						LSB 1
Marker element $m_x$ (synchronous to I/Q Sample $x$ )				Marker element $m_{x+1}$ (synchronous to I/Q Sample $x+1$ )			
Marker 4	Marker 3	Marker 2	Marker 1	Marker 4	Marker 3	Marker 2	Marker 1

Figure 4-20: Marker element in 4-bit binary format bit order

For standard waveforms, the `MARKER LIST x` tags are a more compact way to define markers. In principle, however, the `CONTROL LIST WIDTH4` format can also be used instead of the `MARKER LIST x` tags.

For multi-segment waveforms, the `CONTROL LIST WIDTH4` format is required for marker definition. The binary marker streams of the individual segments are directly concatenated (without any gap) to one collectively marker stream.

#### Setting parameters:

Length	<p>Defines the number of bytes in the <code>CONTROL LIST WIDTH4</code> tag in ASCII Format and is calculated as follows:</p> $\text{Length} = \text{Size of "\#" (1 byte)} + \text{Number of marker elements } m_x * (4 \text{ bit}) / (8 \text{ bits/byte})$ <p>The value is rounded up for byte alignment.</p>
$m_x$	Marker element in 4-bit binary format.
<b>Example:</b>	<code>{CONTROL LIST WIDTH4-51: #m<sub>0</sub>m<sub>1</sub>...m<sub>x</sub>...m<sub>99</sub>}</code> 100 marker elements, each marker element with 4 bits
<b>Usage:</b>	Setting only

#### 4.6.5.3 Tags for data lists

The following tags apply to data lists, additionally to the tags listed in [Chapter 4.6.5.1, "Common tags"](#), on page 183.

<code>{DATA BITLENGTH: BitLength}</code> .....	196
<code>{DATA LIST-Length: #d0d1...dx...dN-1...}</code> .....	197

#### `{DATA BITLENGTH: BitLength}`

##### (mandatory for data lists)

The tag defines the length of the data field in the `DATA LIST` tag in bits in ASCII format.

**Example:**

```
{DATA BITLENGTH: 444}
BB:DM:DLIS:SEL "/var/user/dl"
BB:DM:DLIS:TAG? "dl", "DATA BITLENGTH"
Queries the content of the DATA BITLENGTH tag of the
selected data list file.
Response: '444'
The data list is 444 bits long.
```



**Usage:** Setting only

---

**{DATA LIST-Length: #d0d1...dx...dN-1...}**

**(mandatory for data lists)**

The tag contains the actual bit sequence of the data list in binary format.

**Setting parameters:**

**Length** Defines the number of bytes in the DATA LIST tag in ASCII Format (see {WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...} for details).

**dx** Data bits in binary format (8-bit unsigned characters, MSB first).

**Example:** {DATA LIST-17: #d0d1...dx...d127}  
16 bytes containing 128 data bits, first bit is the MS bit of the first byte.

**Usage:** Setting only

#### 4.6.5.4 Tags for control lists

The following tags apply to control lists, additionally to the tags listed in [Chapter 4.6.5.1, "Common tags"](#), on page 183.

{CONTROL LENGTH: ControlLength}.....	197
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198

---


**{CONTROL LENGTH: ControlLength}**

**(optional / recommended for marker and control lists)**

The tag specifies the length of *all* control or marker list in ASCII format.

The control length influences the way the marker and control lists are processed, in particular the way traces are repeated; see [Figure 4-18](#).

MARKER LIST 1: 0:0; 10:1; 20:0

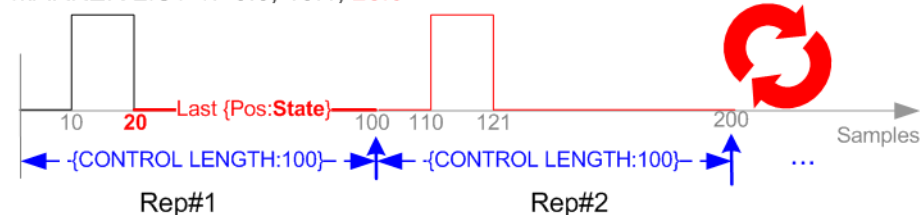

*Figure 4-21: Example: Processing of MARKER TRACE if CONTROL LENGTH is specified*



If the `CONTROL LENGTH` tag is not used, the marker and control list length are determined by the last position, that is the last `{Pos:State}` couple, defined in the particular `[TRACE] LIST` tag; see [Figure 4-19](#).

MARKER LIST 1: 0:0; 10:1; 20:0

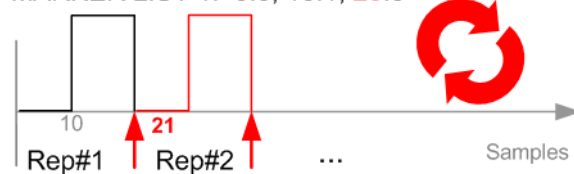


Figure 4-22: Example: Processing of MARKER TRACE if CONTROL LENGTH is not used

To maintain marker signals and waveform data synchronized, set the `CONTROL LENGTH` to be equal to the number of samples specified with the tag `SAMPLES`.

See also [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177.

**Example:**

```
{CONTROL LENGTH: 500}
SOURCE:BB:ARbitrary:CLIST:TAG? 'CONTROL LENGTH'
Queries the length of the control list.
Response: 500
```

**Manual operation:** See ["Total List Length"](#) on page 136

---

```
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}
```

(mandatory for control lists / optional for waveforms)

The tag contains the data for the marker and control signals in the control list or the marker signals of ARB waveforms.

Traces are processed different, depending on the selected `CONTROL LENGTH`. See for example [Chapter 4.6.4.6, "Defining periodically repeating traces"](#), on page 177.

The processing of the marker traces (`MARKER LIST`) depends additionally on the presence of the tag `MARKER MODE`.

#### Setting parameters:

`[TRACE]` MARKER | BURST | LEVATT | CW MODE | HOP | MAP  
 Name of the marker or control signal.  
 For ARB waveforms, it is only meaningful to define marker signals; in the ARB multi-segment waveforms these tags are ignored!



[#]	1 to 3 Sets the marker or control trace number; supported is only <code>LEVATT LIST 1</code> .
Pos	Specifies in ASCII format the position (i.e. sample number or data value), with effect from which the binary <code>State</code> of the marker or of the control signal changes. If the tag <code>MARKER MODE</code> is used, the maximum number of marker states is 64, i.e. <code>Pos<sub>63</sub>:State<sub>63</sub></code> .
State	0   1 Specifies the binary state of the marker or of the control signal from <code>Pos<sub>N</sub></code> to <code>Pos<sub>N+1</sub></code> exclusive in ASCII format.
<b>Example:</b>	<pre>{MARKER LIST 1: 0:0;10:1;20:0;30:1}</pre> <pre>BB:DM:CLIS:TAG? 'MARKER LIST 1'</pre> <p>Queries the content of the <code>MARKER LIST 1</code> tag of the selected control list file.</p> <p>Response: '0:0;10:1;20:0;30:1'</p> <p>The marker setting for samples 0 to 9 = 0 (low), for 10 to 19 = 1 (high) and for 20 to 29 = 0. From sample 30 onward the marker setting = 1.</p>
<b>Example:</b>	<pre>{LEVATT LIST 1: 0:0;10:1;20:0;30:1}</pre> <pre>BB:DM:CLIS:TAG? 'LEVATT LIST 1'</pre> <p>Queries the content of the <code>LEVATT LIST 1</code> tag of the selected control list file.</p> <p>Response: '0:0;10:1;20:0;30:1'</p> <p>Level attenuation applies to data values 10 to 19 (high) and from data value 30 onward.</p>
<b>Usage:</b>	Setting only
<b>Manual operation:</b>	See " <a href="#">Select Ramp to Edit</a> " on page 136

## 4.7 Generating notched signals

If your instrument is equipped with the R&S SMBVB-K811, you can apply notched filter.



In the following, the notched filter settings are described based on the ARB functionality. The described settings also apply for:

- EUTRA/LTE
- OFDM Signal Generation



### 4.7.1 Required options

The basic equipment layout for the generation of notched signals includes the following options:

- Base unit, including arbitrary waveform generator
- Option Notched Signals (R&S SMBVB-K811)  
Sufficient for the generation of notched signals with the ARB

For the generation of notched signals with one of the digital standards, also the corresponding option:

- Option EUTRA/LTE (R&S SMBVB-K55)
- Option OFDM Signal Generation (R&S SMBVB-K114)

For more information, see data sheet.

### 4.7.2 About the notch filters

The noise power ratio (NPR) measurement is a method for evaluating the linearity of wideband-amplifiers. The NPR measurement use notched filters that are applied on internally or externally created waveforms.

The R&S SMBV100B equipped with the R&S SMBVB-K811 option allows you to define up to 25 notches. You can define the frequency offset and bandwidth of each notch individually. You can use frequency values with fixed resolution, where the resolution step depends on the used [Clock Frequency](#).

The notched filters settings are available for the ARB generator and four digital standards. The provided settings are identical, merely the access to the settings and the remote control commands are different.

This section describes the notched filter settings based on the ARB functionality. The described settings, however, also apply for:

- EUTRA/LTE
- OFDM Signal Generation

### 4.7.3 Notch filter settings

Access:

1. Select "System Configuration" with separate sources.  
Select "System Configuration > Fading/Baseband Config." > **"BB Source Config = Separated"**.
2. Select "Baseband > ARB > Notch Filter".
3. Observe the value of the parameter "ARB > General > Clock Frequency".  
It indicates and defines the resolution of frequency offsets of the individual notches.
4. Set the number of notches, for example, "Number of Notches = e.g. 3"



5. Define notch settings, for example, for the first notch:
  - a) For notch#1, set "Frequency Offset = 0" and "Notch Bandwidth, MHz = 0.6".
  - b) For notch#1, set "State = On".
6. Select "Notch Filter > Apply" to trigger the instrument to adopt the notch filter settings.
7. Select "ARB > General > State > On".

State	Frequency Offset /kHz	Notch Bandwidth /kHz	Notch Bandwidth /%
1 On	0.000 0	3.000 5	3.00
2 On	-25.000	1.999 5	0.20
3 On	25.000	0.500 5	0.50

Comprises the settings for enabling the notch filter and indicates the clock frequency for the waveform.

The remote commands required to define these settings are described in ["Notch filter commands"](#) on page 885.

The notched filters settings are available for the ARB generator and four digital standards. The provided settings are identical, merely the access to the settings and the remote control commands are different.

This section describes the notched filter settings based on the ARB functionality. The described settings, however, also apply for:

- EUTRA/LTE
- OFDM Signal Generation

#### Settings:

State.....	201
Clock Frequency.....	202
Number of Notches.....	202
Notch definition table.....	202
L State.....	202
L Frequency Offset /MHz.....	202
L Notch Bandwidth /MHz.....	203
L Notch Bandwidth /%.....	203
Apply.....	203

#### State

If enabled, the defined notch filter is applied to the baseband signal.



Remote command:

[ :SOURce<hw> ] :BB:ARBitrary:NOTCh on page 886

etc. for the corresponding option:

[ :SOURce<hw> ] :BB:EUTRa:NOTCh on page 886

[ :SOURce<hw> ] :BB:OFDM:NOTCh on page 886

### Clock Frequency

Indicates the current clock frequency of the waveform signal.

The value equals the clock frequency of the ARB application: "ARB > General > Clock Frequency".

Notch Bandwidth /% is related to this value.

Remote command:

[ :SOURce<hw> ] :BB:ARBitrary:NOTCh:CLOCK? on page 886

etc. for the corresponding option:

[ :SOURce<hw> ] :BB:EUTRa:NOTCh:CLOCK? on page 886

[ :SOURce<hw> ] :BB:OFDM:NOTCh:CLOCK? on page 886

### Number of Notches

Sets the number of notches.

Notches are defined individually; in the notch definition table, there is one line per notch.

Remote command:

[ :SOURce<hw> ] :BB:ARBitrary:NOTCh:COUNt on page 887

etc. for the corresponding option:

[ :SOURce<hw> ] :BB:EUTRa:NOTCh:COUNt on page 887

[ :SOURce<hw> ] :BB:OFDM:NOTCh:COUNt on page 887

### Notch definition table

Comprises the setting used to define the notch filter.

The notch filter is defined as a sequence of notches. It is described in a table form, where each table line corresponds to one notch and the number of lines is set with the parameter [Number of Notches](#).

### State ← Notch definition table

Enables the notch defined in this line of the table.

Remote command:

[ :SOURce<hw> ] :BB:ARBitrary:NOTCh<ch>:STATe on page 887

etc. for the corresponding option:

[ :SOURce<hw> ] :BB:EUTRa:NOTCh<ch>:STATe on page 887

[ :SOURce<hw> ] :BB:OFDM:NOTCh<ch>:STATe on page 887

### Frequency Offset /MHz ← Notch definition table

Specifies the center frequency of the notch  $f_{\text{offset}}$ , where:

$-\text{Clock Frequency}/2 < f_{\text{offset}} < + \text{Clock Frequency}/2$



Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:NOTCh<ch>:FREQuency:OFFSet` on page 887

etc. for the corresponding option:

`[ :SOURce<hw> ] :BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet` on page 887

`[ :SOURce<hw> ] :BB:OFDM:NOTCh<ch>:FREQuency:OFFSet` on page 887

#### **Notch Bandwidth /MHz ← Notch definition table**

Sets the absolute notch bandwidth.

The selected value is adjusted to the internal frequency grid.

The maximum notch bandwidth is calculated as [Clock Frequency](#)/10.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:NOTCh<ch>:BWIDth[:ABSolute]` on page 887

etc. for the corresponding option:

`[ :SOURce<hw> ] :BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute]` on page 887

`[ :SOURce<hw> ] :BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute]` on page 887

#### **Notch Bandwidth /% ← Notch definition table**

Sets the notch bandwidth relative to [Clock Frequency](#).

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:NOTCh<ch>:BWIDth:RELative` on page 888

etc. for the corresponding option:

`[ :SOURce<hw> ] :BB:EUTRa:NOTCh<ch>:BWIDth:RELative` on page 888

`[ :SOURce<hw> ] :BB:OFDM:NOTCh<ch>:BWIDth:RELative` on page 888

#### **Apply**

Select "Apply" to adopt the configured settings.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:NOTCh:APPLY` on page 888

etc. for the corresponding option:

`[ :SOURce<hw> ] :BB:EUTRa:NOTCh:APPLY` on page 888

`[ :SOURce<hw> ] :BB:OFDM:NOTCh:APPLY` on page 888

### **4.7.4 AWGN test signal**

Option: R&S SMBVB-K811.

See also [Chapter 4.7.1, "Required options"](#), on page 200.

Access:

- Select "Baseband > ARB > General > Test Signal Form > AWGN".

The remote commands required to define these settings are described in [Chapter 13.17.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 848.


#### **To generate an AWGN test signal**

1. Select "Test Signal Form > AWGN".



- Click "Create Test Signal".

The dialog "AWGN Test Signal" opens. Optionally, adjust the number of samples of the test signal.




- Click "Generate Signal RAM".

A test signal waveform file is created with the set number of samples.

- Close the dialog.

The waveform file is loaded to the "ARB > General > Load Waveform" selection. By default, the filename is `awgn_test_signal_a` with file extension `*.vv`.

- To monitor waveform properties, click "Waveform Info".

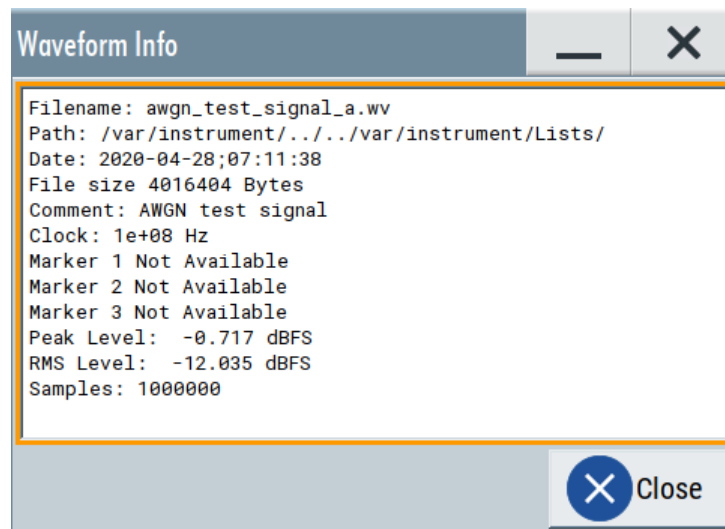


The clock frequency  $f_{\text{clock}}$  is 100 MHz per default. You can change it, see the next step.

- Optionally, adjust the clock frequency  $f_{\text{clock}}$ . The bandwidth of the resulting noise signal is approximately  $0.96 * f_{\text{clock}}$ .

**Example:** A clock frequency  $f_{\text{clock}}$  of 100 MHz results in a noise signal bandwidth of about  $0.96 * f_{\text{clock}} = 96$  MHz.

- Select "ARB > State > On" and "RF > On".



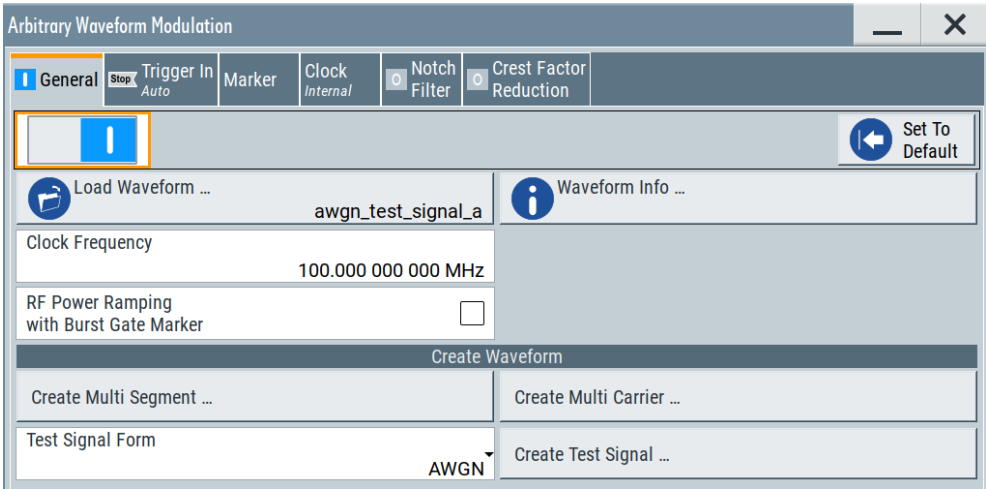

The R&S SMBV100B processes the waveform file and generates an AWGN signal.

Settings:

Samples.....	205
Generate Signal RAM.....	205

Samples

Sets the number of samples generated for the AWGN waveform.

The maximum number of samples depends on the installed ARB options.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:AWGN:SAMPles` on page 861

Generate Signal RAM

Generates a signal and uses it as output straight away. The instrument saves the file with a predefined name.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TSIGnal:AWGN:CREate` on page 862

4.8 Reducing the crest factor

Reducing the crest factor of waveforms is a function that requires the additional option Crest Factor Reduction (R&S SMBVB-K548).

See user manual R&S SMBVB-K548 Crest Factor Reduction.

4.9 Generating multi-segment waveform files

Modern chip technologies implement several communication standards within one chip and rise special verification and test requirements. To fulfill the requirements of these test systems and to enable rapid alternation between different waveforms with differing



test signals, the R&S SMBV100B provides the functionality to generate multi-segment waveform files.

This section introduces the concept of the multi-segment waveform files, together with description of the provided settings and some typical configuration examples.

### 4.9.1 Required options


See [Chapter 4.6.1, "Required options"](#), on page 152.

Multi-segment waveform files require the corresponding Digital Standard options (R&S SMBV100B-K2xx) of all included standards.

### 4.9.2 About the multi-segment waveforms

A multi-segment waveform is a composed signal that contains several multiple independent waveforms called segments. Each segment is an independent waveform that can be output with its own marker and clock settings.

The [Figure 4-23](#) shows the principle of building a multi-segment waveform.

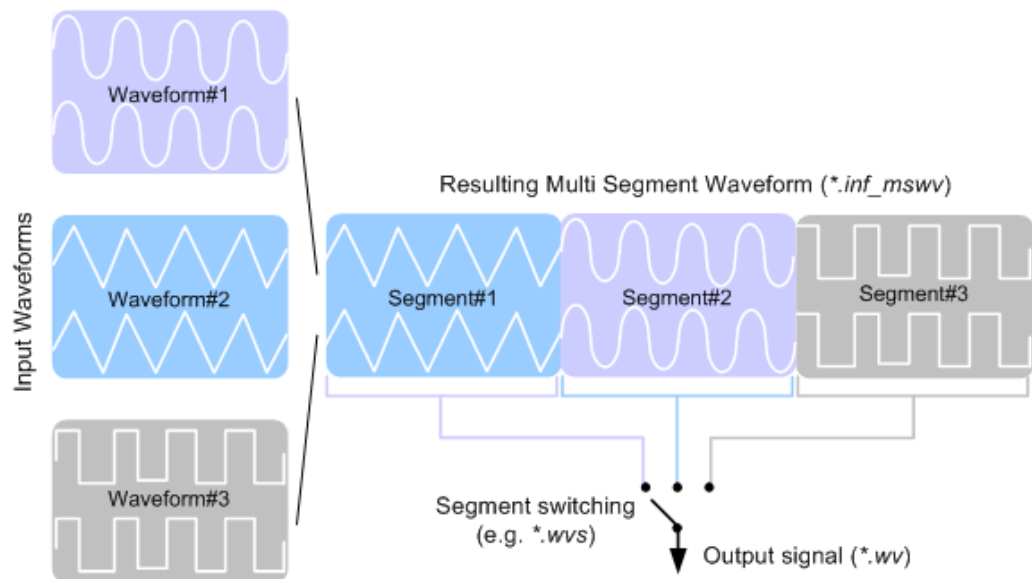

**Figure 4-23: ARB Multi-Segment Waveform Concept**

It is also possible to create and output a blank segment, i.e. segments containing a zero signal.

Typical applications for the multi-segment mode are described in section [Chapter 4.9.4, "How to create and work with multi-segment waveform files"](#), on page 227.



#### 4.9.2.1 Multi-segment waveforms processing

Processing of the waveform is triggered by the "Create" or "Create and Load" function. To process the waveform, the instrument loads the entire multi-segment waveform into the memory. It is therefore possible to alternate between the individual waveforms without delay due to loading. You can define the output order of the segments, and the segment intended to be output at any given moment.

When the created waveform is loaded, the graphical interface displays information on clock rate, number of samples and creation day. You can also acquire information about the waveform in the dedicated "Waveform Info" dialog.

#### 4.9.2.2 ARB sequencer mode

If high switch over speeds is required, the test signals can be continuously scrolled through with the aid of an external trigger or by applying a predefined "Play List". The R&S SMBV100B provides the possibility to define a sequence of different segments and to determine whether a segment is played once or repeated several times and to adjust the transition between the segments.

For the correct and fast processing and for seamless transition between the multiple waveforms, segments with a common sample rate are required. If the combined waveforms features different sample rates, they have to be adapted to a common sample rate by resampling. Another advantage of this procedure is the scaling of the instantaneous amplitude of the various waveforms to a common RMS level.

#### 4.9.2.3 File concept

To provide flexible configuration, the building of a composed multi-segment waveform file involves different stages; by completing of each of them, the R&S SMBV100B creates and stores a dedicated file. The following files are used:

- **Configuration list:** is a dedicated file with details on how a multi-segment waveform is made up from different waveforms, the level and the clock rate settings, and the filename. The file extension is `*.inf_mswv`.  
You can create any number of configurations as a basis for defining further multi-segment waveforms.
- **Output file:** is the created output multi-segment waveform file. The R&S SMBV100B stores it under a user definable name; as with the standard waveforms, the used file extension is `*.wv`. The instrument appends additional information to the header of the composed waveform file, e.g. user comments.
- **Sequencing list:** are files created in the "Multi Segment Waveform Sequencing" dialog, i.e. when the ARB sequencer mode is used (see [Chapter 4.9.2.2, "ARB sequencer mode"](#), on page 207).  
The sequencing list file has an extension `*.wvs` and is automatically assigned to but independent from the multi-segment file. By default, both files have the same name and are located in the same file directory. You can create more than one sequencing list file per multi-segment waveform file.  
The sequencing list file carries information only about the segment number, the corresponding waveform filenames are retrieved from the assigned multi-segment



waveform file. That is, the same sequencing list file can be reused for different multi-segment waveform files with the same number of segments. Changes and recalculations of a multi-segment waveform file cause a recheck whether the assigned sequencing list files are still valid. A message is displayed to inform about necessary corrections in the “play list”.

#### 4.9.2.4 Impact of the marker settings

The general purpose of the marker signal is the triggering of the DUT (device under test) and the synchronization with other measurement instruments.

For better flexibility, the instrument provides several possibilities to define marker signals:

- **Segment markers**  
Because the multiple segments are standalone waveforms, they can already carry marker signals. You can define how the instrument processes these available marker signals. The instrument can ignore them or use them in the composed multi-segment waveform.
- **Additional segment restart and sequence restart markers**  
Additional marker signal can be defined to restart the multi-segment sequence or to restart each of the multiple segments. A marker output configured and defined for one of these purposes overwrites markers that use the same output connector and that are defined in the individual waveforms.

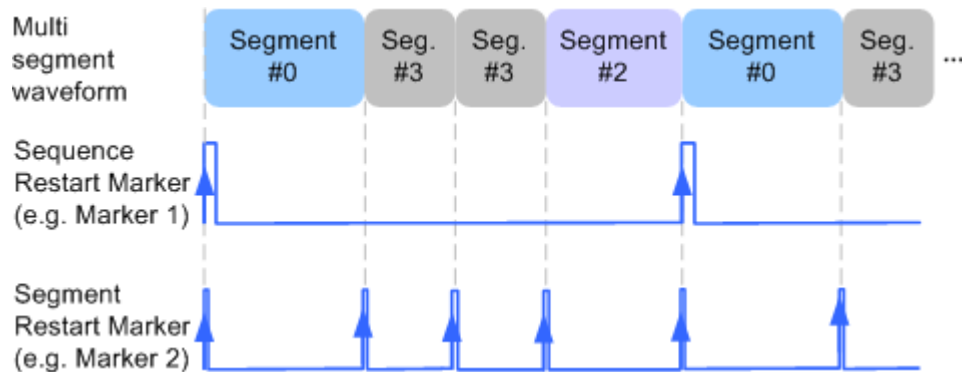


Figure 4-24: Example of marker signals

The segment begin is defined by the low-high slope of the marker, which applies for switching between two segments and if there is a segment replay.

- **General marker signals for the composed multi-segment waveform**  
The "ARB" dialog provides also access to the standard marker settings. Settings other than "unchanged" overwrite existing marker in the waveforms or markers defined for the multi-segment waveform.

The [Figure 4-25](#) shows schematically how the instrument evaluates the priorities of the different marker signals, if multiple marker signals are mapped to the same connector.



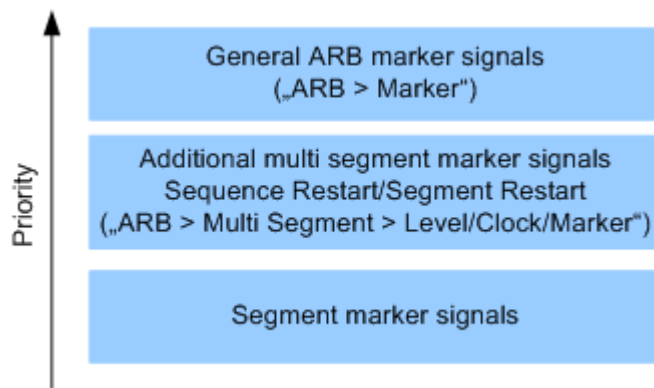


Figure 4-25: Marker priority used by assigning of marker signals to a hardware connector

#### 4.9.2.5 Impact of the trigger settings and next segment settings

The ARB dialog is equipped with the standard (regular) trigger settings. These settings are provided for triggering of the composed multi-segment waveform as a **sequence**, i.e. as one file. The functions provided in the "Trigger" tab and their effect are described in [Chapter 4.4.1.3, "Baseband trigger signals"](#), on page 93.

This section focuses on the additional settings provided for triggering of the individual segments building the composed multi-segment waveform. These settings are enabled and visible only if a multi-segment waveform is loaded for processing. The settings are grouped in the "Multi Segment Waveform Options/Next Segment Trigger In" section.

The [Figure 4-26](#) illustrates how trigger events affect the processing of the multi-segment waveforms.

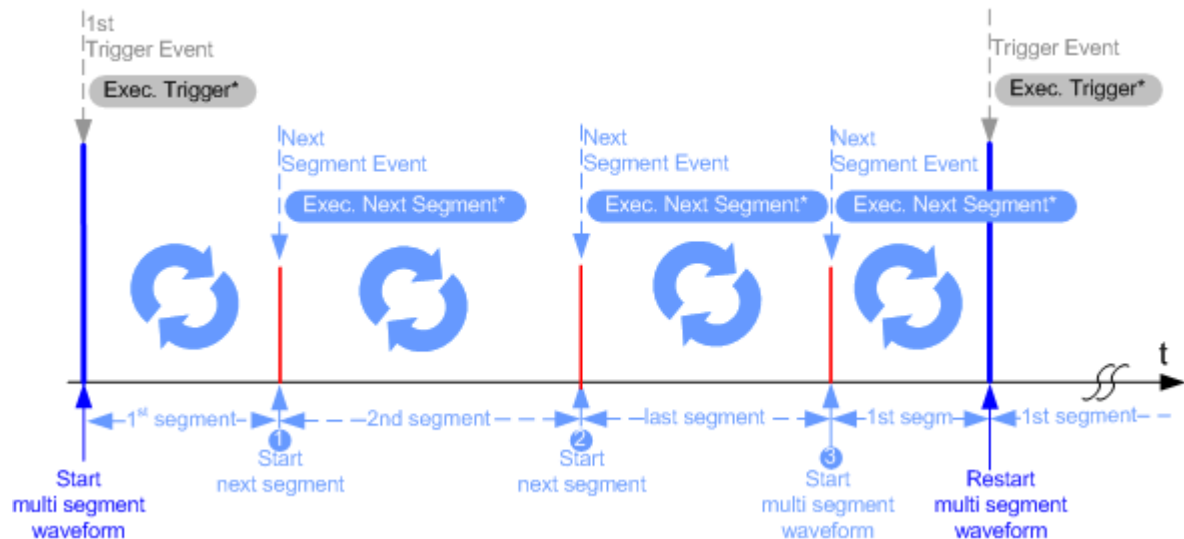


Figure 4-26: Principle of segment triggering



- \* = To simplify the description, an internal next segment trigger event ("Exec. Next Segment") and an internal trigger event ("Execute Trigger") are used; an external trigger event has the same effect on the signal generation.
- 1, 2 = Any next segment trigger event (internal or external) causes a switch over to the subsequent available segment in the waveform. The currently output segment (segment filename and segment index) is indicated at "Current Segment".
- 3 = When the last segment of the multi-segment waveform is output, the sequence starts again with the output of the first segment after the subsequent trigger event. Hence, a sequence of external next segment trigger events can be used to cyclically output the segments in the multi-segment file.

### Defining the Next Segment Source

As with the standard trigger system, provided are the following two sources for the next segment signal:

- **Internal:** the switch over to the subsequent segment is triggered manually with the "Execute Next Segment" function.  
To trigger a switch over to any segment within the multi-segment waveform, change the value of the parameter "Segment".
- **External:** the instrument expects a trigger event ("Global Next Segment") on one of the two provided and configured User connectors.

### Defining the Subsequent Segment

By default, the instrument replays the segments in incremental order, e.g. Segment#1, Segment#2, etc. If other order is required, use one of the following possibilities to define the segment to be played next:

- **Next Segment:** defines the subsequent segment while triggering the segments manually, i.e. by "Next Segment Source > Internal"
- **Sequencing List:** the subsequent segment is defined in the selected play list.

### Defining the Transition between the Segments


The R&S SMBV100B provides the parameter "Next Segment Mode" to define the transition to the subsequent segment (see the graphs in [Transition examples](#)).

- **Next Segment:** by receiving a Next Segment Event, the ARB aborts immediately the playing of the current waveform and starts playing the next segment waveform (see [Table 4-14](#)).
- **Next Segment Seamless:** by receiving a Next Segment Event, the ARB completes the processing of the current waveform before starting the next segment waveform (see [Table 4-14](#)).  
Use this setting to avoid signal gaps and wrap-around problems. Seamless transition requires segments with equal clock rates.  
Another way to generate a multi-segment signal without signal gaps between the segments is to use the provided ARB sequencer mode (see [Chapter 4.9.3.4, "Multi-segment waveform sequencing"](#), on page 219).

The [Table 4-14](#) shows two examples of the transition from a sine-wave signal segment to a sawtooth segment (I channel, upper curve) in the case of next segment external triggering. The left graphic displays an abrupt transition; the right graphic, the **seamless** transition case.



Table 4-14: Transition examples

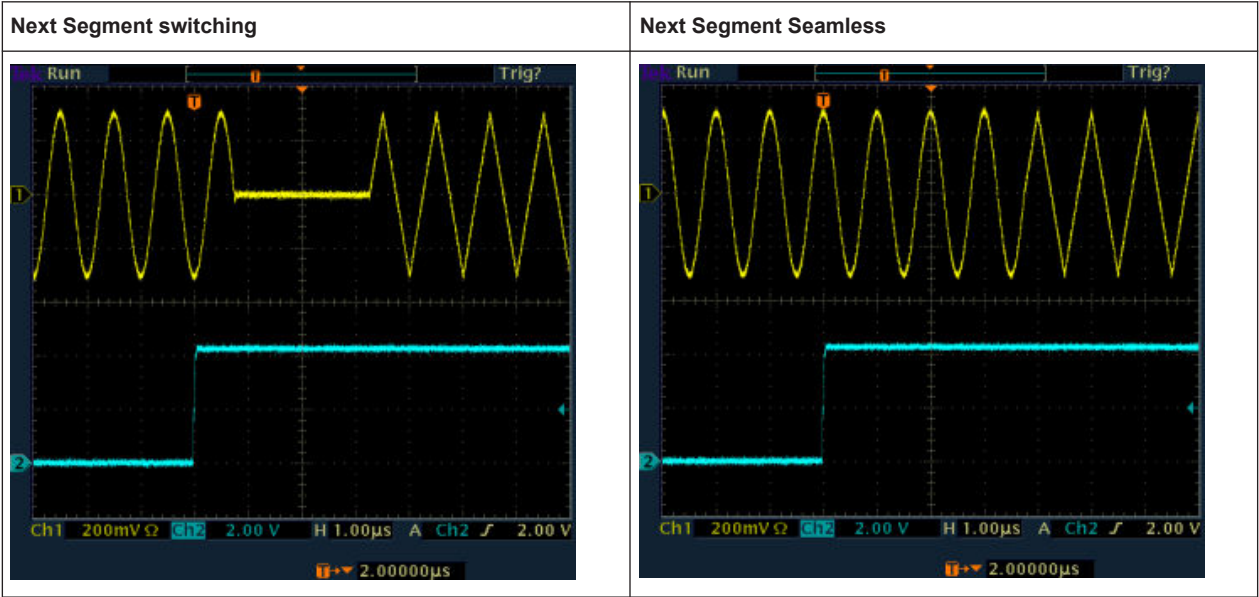


Understanding the Trigger Examples

A simplified diagram in the ARB dialog is intended to explain the effect of the triggering on the signal processing. The currently enabled settings for trigger and next segment mode are considered.

- The curves plotted in the dialog are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and the next segment settings more clearly.

  - The triangle on the top line denotes a trigger event. A filled triangle on the bottom line denotes a next segment event.
  - A green sine wave (or other shape) over a full period indicates one replay cycle of a segment. A shorter example signal indicates a replay cycle which was interrupted, e.g. due to a next segment event (compare the two graphics in Table 4-15).

Table 4-15: Trigger examples in the ARB dialog

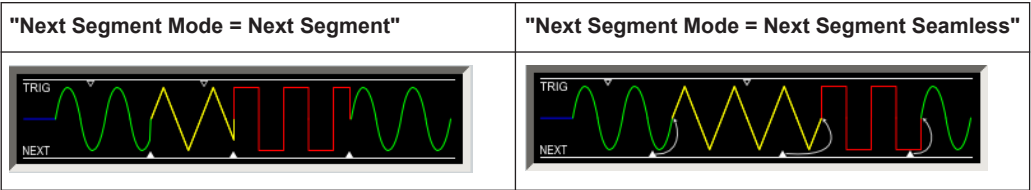


4.9.3 Multi-segment settings

Access:

- Select "Baseband > ARB > General > Create Multi Segment".



The "ARB: Multi Segment" dialog enables direct assignment of waveforms to the multiple segments, adjusting the clock, level, and marker settings of the composed waveform and selecting the output file.

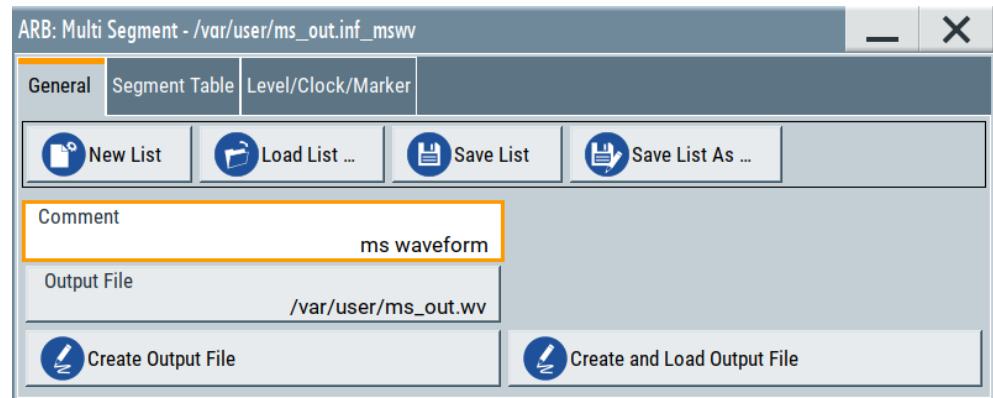

For description on the provided settings, refer to:

[Chapter 4.9.3.1, "Setting for handling the multi-segment files and output file settings"](#), on page 213,

[Chapter 4.9.3.2, "Segment table"](#), on page 215 and

[Chapter 4.9.3.3, "Level / clock / marker settings"](#), on page 217

2. Select "ARB: Multi Segment > General" > **"Create and Load Output File"** to store and load current multi-segment file.
3. Select "Multi Segment" > **"Sequencing List"** to access the settings for configuring a sequencing "Play List" for fast automatic processing of the multi-segment waveform.

For a description of the provided settings, refer to [Chapter 4.9.3.4, "Multi-segment waveform sequencing"](#), on page 219.

4. Select "Baseband > ARB > General".

The "Load Waveform" confirms that the current multi-segment file is loaded (file-name as defined with "Output File").

**Note:** The provided settings depend on the current waveform.

The "Sequencing List" function for instance requires that:

- Multi segment file is created, i.e. you have executed **"Create Output File/ Create and Load Output File"**.
- "Sequence Table" contains **more than one segment**.

5. Select "Baseband > ARB > Trigger In (MSW)".

For a description of the provided settings, refer to [Chapter 4.9.3.5, "Multi-segment waveform trigger settings"](#), on page 223.

6. Select "Baseband > ARB > General > State > On" to process the configured multi-segment waveform.

The remote commands required to define these settings are described in [Chapter 13.17.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 848.



• <a href="#">Setting for handling the multi-segment files and output file settings</a> .....	213
• <a href="#">Segment table</a> .....	215
• <a href="#">Level / clock / marker settings</a> .....	217
• <a href="#">Multi-segment waveform sequencing</a> .....	219
• <a href="#">Multi-segment waveform trigger settings</a> .....	223

#### 4.9.3.1 Setting for handling the multi-segment files and output file settings

Access:

1. Select "Baseband > ARB > General > Create Multi Segment".

The "General" tab comprises standard functions for file handling, like selecting and loading of files, or determining the output filename.

2. Perform one of the following:

- Select "New List" to create a multi-segment waveform file
- Select "Load List" to load an existing one

3. Add a comment and select "Output File" to define the filename the multi-segment waveform is created at.

**Note:** The provided settings depend on the current waveform.

The "Sequencing List" function for instance requires that:

- Multi segment file is created, i.e. you have executed "**Create Output File/ Create and Load Output File**".
- "Sequence Table" contains **more than one segment**.

Settings:

<a href="#">New List</a> .....	213
<a href="#">Load List</a> .....	213
<a href="#">Save List/Save List As</a> .....	214
<a href="#">Sequencing List</a> .....	214
<a href="#">Comment</a> .....	214
<a href="#">Output file</a> .....	214
<a href="#">Create/Create and Load</a> .....	214

##### New List

Accesses the standard "Create Multi Segment Waveform List" function to enter the name of the new file.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:SElect` on page 873

##### Load List

Accesses the standard "File Select" function to select the configuration file to be edited.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:CATalog?` on page 871

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:SElect` on page 873



**Save List/Save List As...**

Saves the current entries of the [Segment table](#) in a configuration list (file), including the level mode, clock mode, segment marker mode, and output filename settings.

See also [Chapter 4.9.2.3, "File concept"](#), on page 207.

Consider also the following remote control commands:

- To define the configuration file (\* .inf\_mswv) used by the calculation of the output file:
  - `[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CREate`
  - `[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CLOad`
- To define the filename of the output waveform file (\* .wv):
  - `[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:OFILe`

Remote command:

n.a.

**Sequencing List**

Accesses the dedicated dialog for configuring the associated play lists, see [Chapter 4.9.3.4, "Multi-segment waveform sequencing"](#), on page 219.

This function is enabled, if a multi segment file is created or created and loaded.

Remote command:

n.a.

**Comment**

Adds a comment to the composed multi-segment file.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:COMMeNt` on page 872

**Output file**

Accesses the standard "File Select" dialog function and requests the filename for the multi-segment waveform to be calculated.

An output filename is required for further processing of the multi-segment waveform:

- For the internal storage triggered by the "Save List" function
- For the calculation and creation of the multi-segment waveform, triggered by the "Create" or "Create and Load" function.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:OFILe` on page 873

**Create/Create and Load**

- "Create"
  - Creates a multi-segment waveform using the current entries in the [Segment table](#).
- "Create and Load"
  - Creates a multi-segment waveform and loads it in the ARB generator.

The R&S SMBV100B stores the multi-carrier waveform as file with filename as specified with parameter [Output file](#).

Depending on the configuration of the multi-carrier waveform, calculation takes some time. Use the "Abort" function, to interrupt the calculation.



Remote command:

To define the configuration file (\*.inf\_mswv) used by the calculation of the output file:

[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CREate

Or [ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CLOad


To define the filename of the output waveform file (\*.wv):

[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:OFile

#### 4.9.3.2 Segment table

Access:

1. Select "Baseband > ARB > General > Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table".
4. Select "Append" to add *existing* waveform segments.
5. Select "Append Blank" to add a blank segment and configure the "Blank Segment Settings" as required.

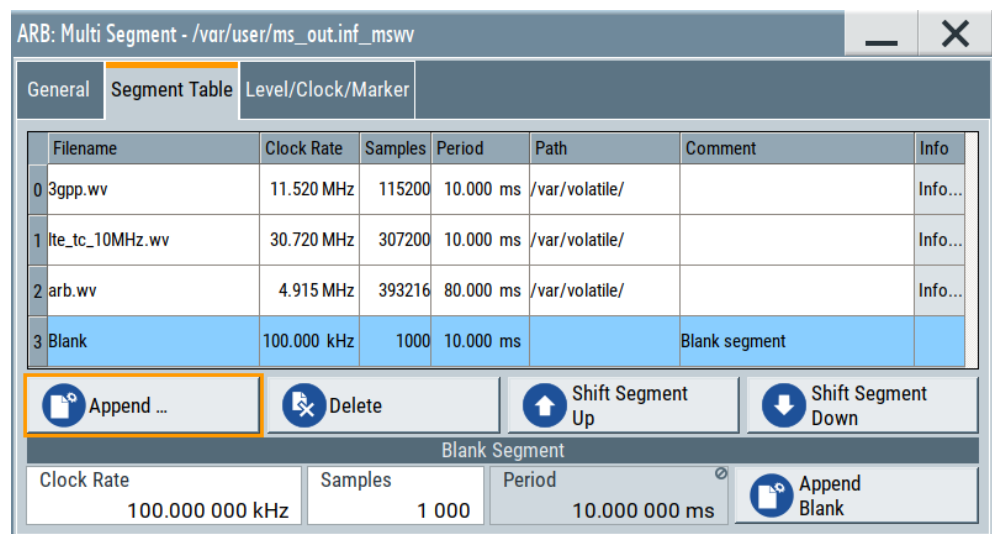

This section explains the settings, necessary to create and adjust the contents of the multi-segment file.

#### Settings:

Segment Table.....	216
Append/Delete/Shift Seg. Up/Down.....	216
Blank Segment.....	216



**Segment Table**

The table lists the individual waveforms (segments) of the selected multi-segment waveform. The information about the segments is retrieved from the tags of the corresponding waveform files.

"Segment#"	Indication of segment index. Within the manual and remote control configuration, this segment index indicates the segment explicitly. <b>Tip:</b> Use the segment index, for example, to define the subsequent sequence to be output in Next Segment Mode "Next Segment" or "Next Segment Seamless".
"Waveform"	Indication of the waveform filename of the segment.
"Clock Rate"	Indication of the clock rate of the selected waveform.
"Samples"	Indication of the number of samples in the segment.
"Period"	Indication of the segment duration.
"Path"	Indication of the location of the waveform file used for the corresponding segment.
"Comment"	Indication of the possible comment contained in the waveform.
"Info"	Indication of the possible comment contained in the waveform.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:SEGment:CATalog?`  
on page 868

**Append/Delete/Shift Seg. Up/Down**

Standard handling functions:

"Append"	Opens the standard "File Select" dialog for navigation to and selection of the waveform file to be added on the end of the existing list. Only non-multi segment waveforms can be loaded.
"Delete"	Removes the selected entry from the table. The waveform file itself is however not deleted.
"Shift Segment Up"/"Shift Segment Down"	Rearranges the segments, i.e. moves the selected segment up and down.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:SEGment:APPend`  
on page 873

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:DELeTe` on page 873

**Blank Segment**

Comprises the settings of a blank segment. A blank segment is a zero signal with defined clock rate and number of samples.




"Clock Rate"	<p>Selects the clock rate of the blank segment.</p> <p>Remote command:  <code>[ :SOURce&lt;hw&gt; ] :BB:ARBitrary:WSEgment:CONFigure:BLANK:APPend</code> on page 871</p>
"Samples"	<p>Selects the number of samples for the blank segment.</p> <p>Remote command:  <code>[ :SOURce&lt;hw&gt; ] :BB:ARBitrary:WSEgment:CONFigure:BLANK:APPend</code> on page 871</p>
"Period"	<p>Displays the resulting period for the blank segment.</p>
"Append Blank"	<p>Adds the blank segment to the multi-segment file.</p> <p>Remote command:  <code>[ :SOURce&lt;hw&gt; ] :BB:ARBitrary:WSEgment:CONFigure:BLANK:APPend</code> on page 871</p>

#### 4.9.3.3 Level / clock / marker settings

Access:

1. Select "Baseband > ARB > General > Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table" and configure the segments.
4. Select "ARB: Multi Segment > Level/Marker/Clock".

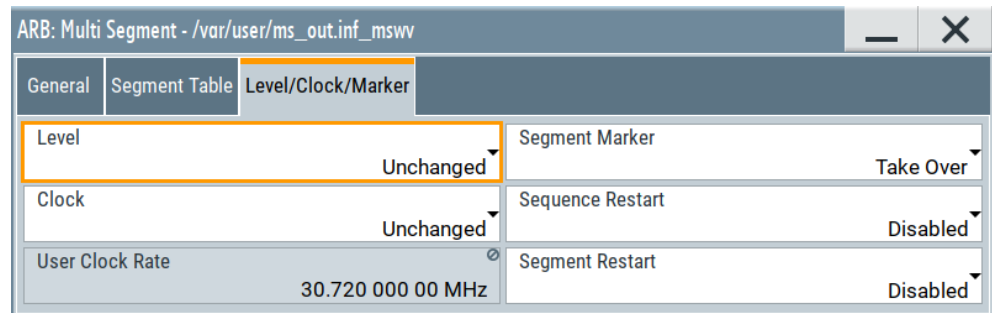

The "Level/Marker/Clock" tab provides the parameters necessary to adjust the level, marker and clock settings for the selected multi-segment waveform file.

#### Settings:

Level.....	218
Clock.....	218
User Clock Rate.....	218
Segment Marker.....	218
Sequence Restart.....	219
Segment Restart.....	219



**Level**

Defines the way the instrument determines the output level of each of the multiple waveforms.

- |             |  |
|-------------|--|
| "Unchanged" | Concerning the level settings, the segments are output exactly as defined in the individual files. The "Level" display applies only to the segment with the highest RMS value. Sometimes, the remaining segments are output at a lower level than the displayed value. |
| "Equal RMS" | Segments are output so that all segments have the same RMS value. The "Level" display applies to all segments.   |

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:LEVel[:MODE]
```

on page 872

**Clock**

Defines the way the instrument determines the clock rate of each of the multiple waveforms.

- |             |   |
|-------------|---|
| "Unchanged" | Each segment is output with the clock rate defined in its waveform file.<br><br><b>Note:</b> Segments with equal clock rates are required for "Next Segment Mode > Next Segment Seamless".  |
| "Highest"   | All segments are output at the highest available clock rate.<br><br><b>Note:</b> Trade-off between fast switch over and computing time. This mode provides short switch over times between segments. However, the computing time increases because the individual segments are resampled. |
| "User"      | All segments are output at the clock rate defined by the parameter "User Clock".<br>This mode is a trade-off between fast switch over and computing time, too.  |

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE
```

on page 872

**User Clock Rate**

Defines the sample rate used for multi-segment waveform output, if "Clock Mode > User" is selected.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:CONFigure:CLOCK on page 872
```

**Segment Marker**

Defines the way the marker information within the separate segments is processed, see also [Chapter 4.9.2.4, "Impact of the marker settings"](#), on page 208.

- |             |  |
|-------------|--|
| "Ignore"    | The marker information carried in the individual segment waveform files is not considered.               |
| "Take Over" | The output waveform file contains the marker information as configured in the individual waveform files. |



Remote command:

`[ :SOURCE<hw> ] :BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE`  
on page 870

### Sequence Restart

Enables/disables the generation of an extra restart marker in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered, see also [Chapter 4.9.2.4, "Impact of the marker settings"](#), on page 208.

"Disable" No additional marker is generated.

"Marker 1, 2, 3" Generates a restart marker signal at the beginning of the first segment of the complete multi-segment sequence.

Remote command:

`[ :SOURCE<hw> ] :BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment`  
on page 870

### Segment Restart

Enables/disables the generation of an extra restart marker in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered, see also [Chapter 4.9.2.4, "Impact of the marker settings"](#), on page 208.

"Disable" No additional marker is generated.

"Marker 1, 2, 3" Generates a restart marker signal at the beginning of each segment. The segment begin is defined by the low-high slope of the marker signal, which applies for switching between two segments and if there is a segment replay.

Remote command:

`[ :SOURCE<hw> ] :BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment`  
on page 870

## 4.9.3.4 Multi-segment waveform sequencing

Access:

1. Select "Baseband > ARB > General > Create Multi Segment".
2. In the "ARB: Multi Segment > General" dialog, select an existing list.
3. Select "ARB: Multi Segment > Segment Table" and configure a waveform with more than one segment.
4. Select "ARB: Multi Segment > Level/Marker/Clock" and adjust the clock settings so that all segments use the same clock rate.
5. Select "ARB: Multi Segment > General" > **"Create Output File/Create and Load Output File"**.



6. Select "Sequencing List..."
7. Select "New" or "Load" to load a sequencing list file.




8. Select "ARB: Multi Segment Waveform Sequencing > Sequencing Play List" to create a "play list".

A new sequencing list contains no information.

9. Use the "Append/Delete" and "Up/Down" functions to configure the order the segments are processed.

The user interface shows the configured play list in form of a "Sequencing Graphic".

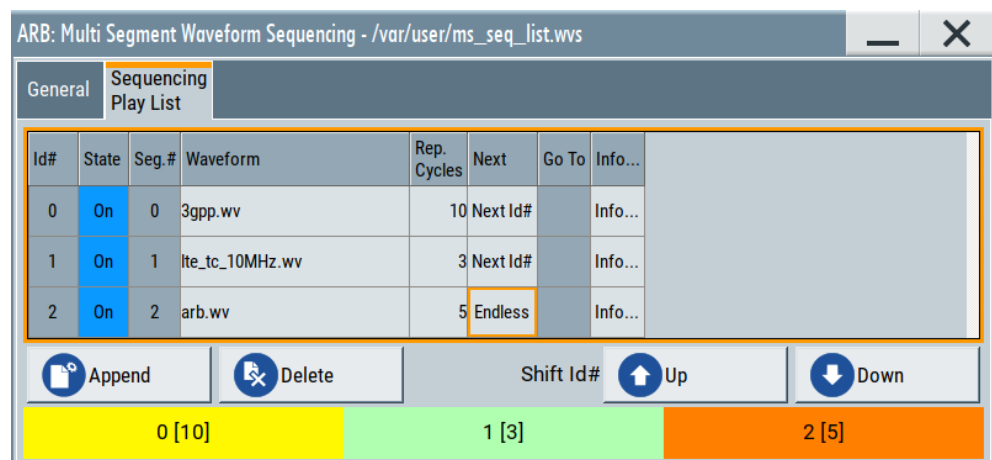

Refer to ["Sequencing play list settings"](#) on page 222 for description of the provided settings.

10. Select "ARB: Multi Segment Waveform Sequencing > General > Save" to store the "play list".
11. Select "ARB: Multi Segment > General > Create and Load Output File" to store and load current multi-segment file.
12. To enable the instrument to use the configured "play list", select "ARB > Next Segment Waveform Options > Next Segment Mode > Sequencer".





All segments in a “play list” must have the same clock rate.

#### Settings:

- [General settings](#).....221
- [Sequencing play list settings](#).....222

#### General settings

Access:

- Select "Baseband > ARB > General > Multi Segment > Sequencing List..."

#### Settings:

<a href="#">New/Load Sequencing List</a> .....	221
<a href="#">Save List/Save List As</a> .....	221
<a href="#">Sequencing List</a> .....	221
<a href="#">Assigned to Multi Seg. Waveform</a> .....	221

#### New/Load Sequencing List

Accesses the standard "Select Sequencing List" function to define the name of the new play list file or select of an existing one.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:SEquence:SElect` on page 868

#### Save List/Save List As

Saves the current entries of the table in a play list file. Play list files have the file extension \*.wvs.

The default filename of the play list file is the same as the multi-segment waveform filename, but it can be changed.

#### Sequencing List

Displays the name of the selected sequencing list file, i.e. the file with the “play list” settings (see [Chapter 4.9.2.3, "File concept"](#), on page 207).

Remote command:

n.a.

#### Assigned to Multi Seg. Waveform

Displays the name of the multi-segment waveform file the current sequencing list file is assigned to.

Remote command:


n.a.



## Sequencing play list settings

Access:

- Select "Baseband > ARB > General > Multi Segment > Sequencing List... > Sequencing Play List".

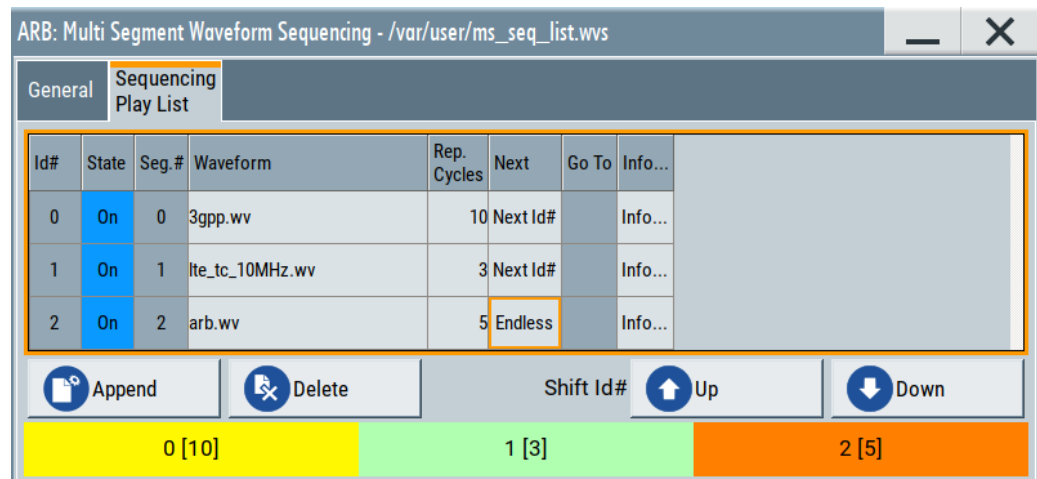

### Settings:

Sequencing Play List.....	222
L Next.....	223
L Append.....	223
L Delete.....	223
L Shift Id# Up/Down.....	223
Sequencing Graphic.....	223

### Sequencing Play List

The "Sequencing Play List" table defines the sequence order the waveform file segments are processed and how many times each of them is repeated.

"Id#"	Indicates the row number.
"State"	Enables/disables the selected row. Only active segments are processed.
"Segment#"	Indicates the segment index. The sequencing list file carries information only about the segment index, the corresponding filenames are retrieved from the assigned multi-segment waveform file.
"Waveform"	Indicates the waveform file mapped to the corresponding segment. The filename is retrieved from the assigned multi-segment waveform file. Available are only waveform files from the pool of segments of the selected multi-segment waveform file.



**"Repetition Cycles"**

Sets the number of times the selected segment is cyclically repeated before the next segment in the sequence is processed.

**"Info"**

Opens a dialog with detailed information about the currently selected waveform.

Remote command:

See ["Append"](#) on page 223

**Next ← Sequencing Play List**

Determines the action after completing the current one, like for instance which segment is processed after the processing of the current one is finished.

**"Next Id#"**

The next active segment in the play list is processed.

**"Blank"**

After the processing of the current segment is completed, the signal output is stopped until a signal restart like a retrigger signal is received.

A restart signal causes a complete restart of the sequencing play list.

**"Endless"**

The current segment is replayed until a signal restart like a retrigger signal is received and the complete sequencing play list is restarted. Only active segments are considered.

**"Goto Id#"**

Determines the row number of the segment to be processed next. This feature is limited to the first 32 rows.

**Append ← Sequencing Play List**

Inserts a new row at the end of the sequencing play list table.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:SElect](#) on page 868

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:APPend](#) on page 869

**Delete ← Sequencing Play List**

Deletes the selected row.

**Shift Id# Up/Down ← Sequencing Play List**

Rearranges the rows, i.e. moves the selected row up and down.

**Sequencing Graphic**

Displays the play list graph according to the current configuration.

The graph shows the segment sequence, the segment number, and the number of times, the segment is repeated; considered are only the active segments.


**4.9.3.5 Multi-segment waveform trigger settings**

The settings in the "Trigger In (MSW)" tab are visible, only if a multi-segment waveform is loaded into the ARB.



Access:

1. Enable and load a multi-segment waveform in the ARB, see [Chapter 4.9.3, "Multi-segment settings"](#), on page 211.
2. Select "Baseband > ARB > Trigger In (MSW)".

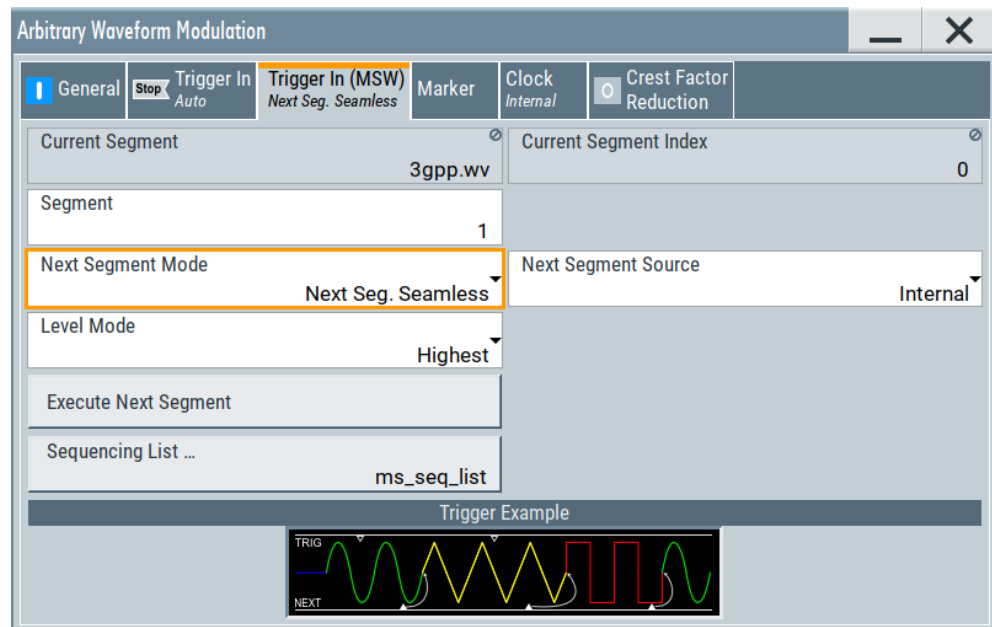

The "Next Segment Trigger In" section comprises the settings necessary to adjust the trigger for switching between the segments of a multi-segment waveform. The parameters displayed depend on the selected trigger source.

#### Settings:

Current Segment/Current Segment Index.....	224
Segment.....	224
Next Segment Mode.....	225
Next Segment Source.....	226
Level Mode.....	226
Execute Next Segment.....	226
Sequencing List.....	226
Trigger Example.....	227

#### Current Segment/Current Segment Index

Indicates the waveform segment (segment filename and index) that is output.

Remote command:

[ :SOURce<hw> ] :BB:ARbitrary:WSEgment? on page 866

[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:NAME? on page 867

#### Segment

Selects the waveform segment to be output after the segment indicated as "Current Segment". This parameter determines the start segment when switching on the ARB and enables switching over to any other segment.



The following events cause a switch over:

- An external next segment trigger event
- An internal segment trigger, that is a change in the segment index in the "Segment" field

Use the parameter [Next Segment Mode](#) to define whether the new segment is generated immediately or only after the previous segment has been fully generated (wrap around). The subsequent trigger event after the last segment causes the first segment to be output again.

For more information, see [Chapter 4.9.2.5, "Impact of the trigger settings and next segment settings"](#), on page 209.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEgment:NEXT` on page 867

### Next Segment Mode

Defines the way the **switch over between the segments** in a multi-segment waveform is executed.

The regular trigger mode for starting the waveform generation and **triggering the whole multi-segment sequence** is set with the parameters in the "ARB > Trigger" tab. The segment currently being output is displayed at "Current Segment". The "Trigger Example" graph displays schematically the waveform output, depending on the activated trigger and the next segment settings.

For background information, refer to [Chapter 4.9.2.5, "Impact of the trigger settings and next segment settings"](#), on page 209.

For detailed information on how the regular trigger signal affects the multi-segment waveform processing in combination with the different values for "Next Segment Mode", refer to [Chapter 4.9.5, "Reference to triggering of multi-segment waveforms"](#), on page 232.

**Note:** The seamless switch over and the sequencer mode require segments with equal sample rate.

#### "Same Segment"

The processing of the multi-segment waveform file is similar to the processing of a non-multi segment waveform, i.e. there is no switching to consecutive segment upon the receiving of a trigger event. To trigger switching between the segments, change the segment index in the "Segment" field.

#### "Next Segment"

The current segment ceases to be output when a trigger event for a new segment occurs, and the new segment starts to be output after a system-imposed signal gap.

#### "Next Segment Seamless"

If all segments have the same sample rate, the new segment is not output until the whole of the current segment has been output (wrap around), i.e. the signal transition is seamless.



"Sequencer" The waveform files are processed according to the order and repetition cycles defined in the special sequencing list file (\*.wvs) assigned to the multi-segment waveform file. This "play list" is defined in the [Multi-segment waveform sequencing](#) dialog.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:TRIGger:SMODE` on page 870

### Next Segment Source

Determines whether the next segment is switched upon receiving of an external trigger signal or upon executing of software next segment trigger (see [Figure 4-26](#)).

This parameter is disabled, if a sequencing play list is used.

"Internal" Switch over to any segment is triggered manually with the "Execute Next Segment" function.

"External Global Next Segment" The trigger event for switching to the next segment is input as configured on one of the User x connectors.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEGment:NEXT:SOURce` on page 868

### Level Mode

Sets how the instrument levels the individual segments in a multi-segment signal. The parameter is important, if waveforms with different crest factors are used.

"Highest" All segments are output at the highest available crest factor.

"Unchanged" Each segment is output with the crest factor defined in its waveform file.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEGment:LMODe` on page 868

### Execute Next Segment

For "Next Segment Source = Internal", triggers manually switch over to the subsequent segment in the multi-segment file. The subsequent segment can be any segment within the multi-segment file and is defined by the parameter "Segment"

This parameter is disabled, if a sequencing play list is enabled.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEGment:NEXT:EXECute` on page 867

### Sequencing List

Opens a dialog box for defining the "play lists", see [Chapter 4.9.3.4, "Multi-segment waveform sequencing"](#), on page 219.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:WSEGment:SEquence:SElect` on page 868



**Trigger Example**

Displays an example of a multi-segment waveform. The currently enabled trigger and next segment mode are considered. After the instrument is switched on, the graph of the last loaded waveform is displayed.

**Note:** The curves plotted in this dialog box are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and next segment settings more clearly.

Remote command:  
n.a.

#### 4.9.4 How to create and work with multi-segment waveform files

This section provides step-by-step instructions on how to configure and use the multi-segment settings. The [Figure 4-27](#) shows the essential stages of multi-segment waveform configuration, together with the corresponding user interface dialogs and if applicable, the corresponding file extensions. Perform the necessary settings, enable the signal generation, and provide trigger signal.

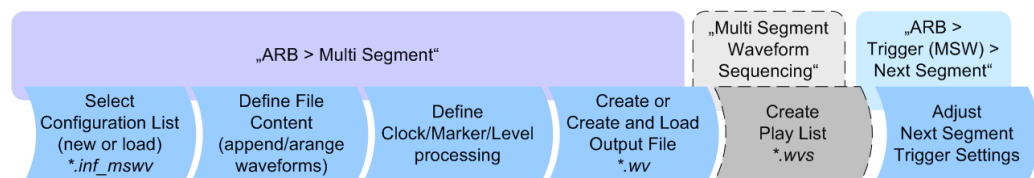


Figure 4-27: Basic workflow for generation of multi-segment waveforms

##### Generating a multi-segment waveform file (basic workflow)


1. In the "ARB > Create Multi Segment > General" dialog, select "New List" to create an empty list.
2. Use the "ARB: Multi Segment > Segment Table > Append" function to add two or more waveform files.
3. In the "ARB: Multi Segment > Level/Clock/Marker" dialog, adjust the "Level", "Clock", and "Segment Marker" settings.
4. Select the "ARB > Multi Segment > General > Output File" and enter filename.
5. Select "ARB > Multi Segment > General > Save List" to store the configuration file.
6. Select "ARB > Multi Segment > General > Create Output File" or "Create and Load Output File" to create and load the multi-segment waveform.
7. Select "ARB > Multi Segment > General > State > On".





The following description emphasizes on the settings required to fulfill the particular task or achieve the desired performance; standard basic settings are not discussed.

All provided examples use the example segment sequence as shown on [Figure 4-28](#).

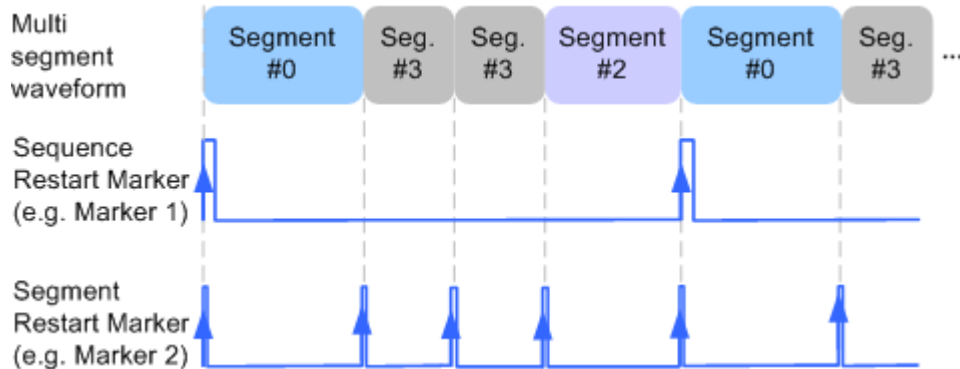

**Figure 4-28: Example: multi-segment sequence with marker signals**

See how to:

- ["To apply a manual segment switch to the output segments in the required order"](#) on page 228
- ["To generate a multi-segment signal without signal interruptions"](#) on page 229
- ["To enable an external triggering for high-speed switch over"](#) on page 230
- ["To configure a multi-segment sequence using the play list function"](#) on page 231
- ["To add marker signals"](#) on page 232

#### To apply a manual segment switch to the output segments in the required order

When testing DUTs using different test signals, it may be necessary to switch dynamically and flexibly between any of the test signals, for instance depending on the outcome of the previous test. The following settings enable flexible dynamic switch over between the segments in a multi-segment waveform.

We assume, that a multi-segment sequence composed of 4 segments (Seg#0, Seg#1, Seg#2 and Seg#3) is created and loaded in the ARB (see ["Generating a multi-segment waveform file \(basic workflow\)"](#) on page 227). The required output order of the segments is Seg#0, Seg#3 [2], Seg#2. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

1. Select "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment"  
The transition between the segments is abrupt.
2. To enable manual next segment triggering, select "ARB > Trigger In (MSW) > Next Segment Source = Internal".
3. To enable manual triggering, select "ARB > Trigger In > Mode = Armed Auto".  
Select "ARB > Trigger In > Source = Internal".
4. Execute "ARB > Trigger In > Execute Trigger" to trigger the signal generation.



The "ARB > Trigger In (MSW)" settings display the currently output segment: "Current Segment Name = Seg#0" and "Current Segment Index = 0". Seg#0 is output continuously.

5. Set "ARB > Trigger In (MSW) > Segment = 3" to output the second segment in the sequence order.

The parameter "ARB > Trigger In (MSW) > Current Segment Index" changes to segment index 3. Seg#3 is output continuously.

6. Execute "ARB > Trigger In > Execute Trigger" to restart Seg#3.
7. Set "ARB > Trigger In (MSW) > Segment = 2" to output the third segment in the sequence order.

Seg#2 is output continuously.

To switch over to Seg#0, change the "ARB > Trigger In (MSW) > Current Segment Index", etc.

**Tip:** The ARB sequencer mode provides the necessary settings to achieve the same goal in a more convenient way, see ["To configure a multi-segment sequence using the play list function"](#) on page 231



#### Faster flexible dynamic switch over

When using **remote control** via an external computer, the following settings enable switching times of approx. 20 ms for segments with the same sample rate and approx. 200 ms for segments with different sample rates:

- "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment"
- "ARB > Trigger In > Trigger Mode = Auto"
- "ARB > Trigger In > Trigger Source = Internal"

#### To generate a multi-segment signal without signal interruptions

Testing receivers requires a continuous output of different test signals without interrupting the signal. The test signals then produce a complex total signal with no signal gaps on switch over. Control procedures can use a simulated back channel of the receiver (trigger line or remote control).



Switching times depend on the length of the segment currently being output, because switch over to the next segment does not take place until the current segment ends.

To overcome wrap-around problems and generate multi-segment signals without signal gaps between the segments, consider the following settings:

1. Enable "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment Seamless"
2. Select "ARB > Trigger In > Trigger Mode = Auto"
3. Select "ARB > Trigger In > Trigger Source = Internal"



4. A segment ("Current Segment") is output continuously as long as the value of the parameter "Segment" is not changed. Change the value of the parameter "ARB > Trigger In (MSW) > Segment" to select the segment index processed after completing the current one.
5. The seamless transition between the segments requires waveforms with equal clock rate.  
If the waveforms feature different sample rates, select "ARB > Multi Segment > Level/Clock/Marker > Clock Mode = Highest" or "Clock Mode = User" to resample the waveforms.

#### To enable an external triggering for high-speed switch over

To test DUTs/chips using different test signals at high throughput requires fast switch over (for instance when testing ATE devices during manufacture).

We assume, that the required multi-segment sequence is created and loaded in the ARB (see ["Generating a multi-segment waveform file \(basic workflow\)"](#) on page 227). The segments are *output in incremental order*. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on. An external global or local trigger source is connected to the instrument and the corresponding connectors are configured.

The following settings enable **switching times of approx. 5 us** and the test signals are scrolled through with the aid of an external trigger signal:

1. Select "ARB > Trigger In (MSW) > Next Segment Mode = Next Segment".
2. Select "ARB > Trigger In (MSW) > Next Segment Source = External (NEXT)".
3. Do not change the displayed segment index (parameter "ARB > Trigger In (MSW) > Segment").
4. Enable "ARB > Trigger > Trigger Mode = Auto"
5. Select "ARB > Trigger > Trigger Source = External Global"
6. If the waveforms in the multi-segment file feature different sample rates, select "ARB > Multi Segment > Level/Clock/Marker > Clock Mode = Highest" or "Clock Mode = User" to resample the waveforms.

The switch over between the segments is triggered by receiving of an external trigger event. The segments are output in incremental order, i.e. Seg#0, Seg#1, etc. The currently processed segment ("Current Segment") is output continuously as long as a new trigger event is received. A new trigger event aborts the output of the current segment immediately and starts the processing of the next one in the sequence.

**Tip:** To output the segments in any order, use the ARB sequencer mode, see ["To configure a multi-segment sequence using the play list function"](#) on page 231. For general description on the configuration of the trigger and connector settings: See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.



### To configure a multi-segment sequence using the play list function



The ARB Sequencer mode requires waveform files with equal clock rate!

We assume, that a multi-segment sequence composed of four segments (Seg#0, Seg#1, Seg#2 and Seg#3) is created and loaded in the ARB (see ["To apply a manual segment switch to the output segments in the required order"](#) on page 228). The required output order of the segments is Seg#0, Seg#3 [2], Seg#2. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

The following settings show an example of how to configure this segment output order with the help of the ARB sequencing function.

1. In the "ARB > Multi Segment" dialog, load the previously created list and execute "Create and Load".
2. Select "ARB > Multi Segment > General > Sequencing List".  
The "Multi Segment Waveform Sequencing" dialog opens. A new play list is created and assigned to the current multi-segment waveform file.
3. Select "ARB: Multi Segment Waveform Sequencing > Sequencing Play List" and use the "Append" function to add new rows to the list and configure the settings as follows:
  - a) Id#0: Seg#0, "Rep. Cycles = 1", "Next = Next Id#"
  - b) Id#1: Seg#3, "Rep. Cycles = 2", "Next = Next Id#"
  - c) Id#2: Seg#2, "Rep. Cycles = 1", "Next = Goto Id", "Go To = 0" (creates a loop to the first segment in the sequence)

General		Sequencing Play List						
Id#	State	Seg.#	Waveform	Rep. Cycles	Next	Go To	Info...	
0	On	0	arb_sine.wv	1	Next Id#		Info...	
1	On	1	arb_constIQ.wv	2	Next Id#		Info...	
2	On	2	arb_rect.wv	1	Goto Id	0	Info...	

Append
Delete
Shift Id#
Up
Down

0 [1]
1 [2]
2 [1]
Goto Id#0

4. Select "ARB: Multi Segment Waveform Sequencing > General > Save List" to store the configured play list.
5. To enable the instrument to use this play list, select "ARB > Trigger (MSW) > Next Segment Mode > Sequencer".
6. Select "ARB > Trigger (MSW) > Trigger Mode = Armed Auto"



7. Select "ARB > Trigger (MSW) > Trigger Source = Internal"

The segments are played back (output) as defined in the sequencing list, i.e. the switch over to the next segment is performed automatically according to the rules and segment order defined in the "Sequencing Play List".

#### To add marker signals

We assume, that a multi-segment sequence composed of the segments Seg#0 [1], Seg#3 [2], Seg#2 [1] is created and loaded in the ARB (see ["To configure a multi-segment sequence using the play list function"](#) on page 231). The multi-segment sequence starts with Seg#0 and this segment is output once. The instrument is operated manually, the ARB generator is in active state, and the instrument output is switched on.

To add marker signals at the beginning of each segment and at the beginning of the sequence (see [Figure 4-28](#)), two additional marker signals, "Marker 2" and "Marker 1", are enabled and inserted into the multi-segment waveform.

1. Select "ARB > Marker > Marker Mode > Marker 1/Marker2 = Unchanged" to enable taking over of the marker signals defined inside the multi-segment sequence. If necessary, adjust the marker delay settings.
2. Select the "Block Diagram > Trigger/Marker/Clock" and map the "Logical Signals > Marker 1/Marker 2" to the desired connectors ("Global Connectors > User x > Direction = Output" and "Signal = Baseband Marker 1/Baseband Marker 2")
3. In the "ARB > Multi Segment > Level/Clock/Marker" dialog, select "Segment Marker = Ignore"
4. Enable "Level/Clock/Marker > Sequence Restart = Marker 1"
5. Enable "Level/Clock/Marker > Segment Restart = Marker 2"

An extra restart marker signal is generated at the beginning of each segment and the beginning of the waveform. These restart markers *overwrite* the existing Marker 1 and Marker 2 trace signals defined in the waveforms of the individual segments.

## 4.9.5 Reference to triggering of multi-segment waveforms

Signal generation of multi-segment waveforms takes place differently according to the trigger selected in the "ARB > Trigger In" section. The sections provide a detailed explanation of the effect of a trigger event on the multi-segment waveform processing, depending on the enabled "Next Trigger Mode". Refer to [Chapter 4.9.2.5, "Impact of the trigger settings and next segment settings"](#), on page 209 for background information.

### 4.9.5.1 Triggering in "Next trigger mode = same segment"

Depending on the trigger setting, the currently selected segment is continuously output either immediately or after a trigger event.



**Table 4-16: Waveform triggering: "Next Trigger Mode = Same Segment", "Trigger Source = Internal"**

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously. Trigger events are ignored.  If the segment is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. Further trigger events are ignored.  If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Retrigger"	Output starts at once and the segment is generated continuously, a trigger event causes a restart.  If the segment is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Retrigger"	Output starts after the first trigger event. The segment is then generated continuously. Further trigger events cause a restart.  If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Single"	Output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart.  If the segment is changed in "Segment", signal output is not stopped. The new segment is not output until a trigger occurs.

#### 4.9.5.2 Triggering in "Next trigger mode = next segment"

Depending on the trigger setting, the segment selected under "Segment" is output either immediately or after a trigger event. If the segment index is changed in "Segment", the new segment is not output until a trigger occurs.

**Table 4-17: Waveform triggering: "Next Trigger Mode = Next Segment", "Trigger Source = Internal"**

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously.  If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously.  If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
"Single"	Output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart.  If the segment index is changed in "Segment", the new segment is not output until a trigger occurs.



**Table 4-18: Waveform triggering: "Next Trigger Mode = Next Segment", "Trigger Source = External"**

<b>"Trigger Mode"</b>	<b>Description</b>
"Auto"	<p>Output starts at once and the segment is generated continuously.</p> <p>Further trigger events are ignored. Each next segment trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.</p> <p>If the segment index is changed in "Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>
"Armed_Auto"	<p>Output starts after the first trigger event. The segment is then generated continuously.</p> <p>Further trigger events are ignored. Each next segment trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.</p> <p>If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>
"Single"	<p>Output starts after the first trigger event. The segment is then generated once.</p> <p>Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment.</p> <p>If the segment is changed in "Segment", signal output is not stopped. The new segment is not output until a trigger occurs.</p> <p>The subsequent trigger event after the last segment causes the first segment to be output again.</p>

For description of the "Retrigger" and "Armed\_Retrigger" trigger modes, see [Table 4-16](#).

#### **4.9.5.3 Triggering in "Next trigger mode = next segment seamless"**

The segment selected under "Segment" is output. This mode is only available if all segments have the same sample rate.



**Table 4-19: Waveform triggering: "Next Trigger Mode = Next Segment Seamless", "Trigger Source = Internal"**

"Trigger Mode"	Description
"Auto"	Output starts at once and the segment is generated continuously. If the segment is changed in "Segment", the new segment is output seamlessly after the output of the current segment is complete.
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.
"Single"	Output starts at once and the segment is generated continuously. Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Segment", the new segment is output seamlessly after the output of the current segment is complete.

**Table 4-20: Waveform triggering: "Next Trigger Mode = Next Segment Seamless", "Trigger Source = External"**

"Trigger Mode"	Description
"Armed_Auto"	Output starts after the first trigger event. The segment is then generated continuously. Each trigger event (re-) starts the segment; each next segment trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Segment", signal output is stopped and the new segment is not output until a trigger occurs.

For description of the "Retrigger" and "Armed\_Retrigger" trigger modes, see [Table 4-16](#).

#### 4.9.5.4 Triggering in "Next trigger mode = sequencer"

The waveform files are processed according to the order and repetition cycles defined in the special sequencing list file (\*.wvs) assigned to the multi-segment waveform file.

## 4.10 Generating multi-carrier signals

To simulate complex multi-carrier scenarios with different baseband signals, the R&S SMBV100B provides the possibility to generate multi-carrier waveforms. These waveforms can consist of up to 512 carriers, each modulated by the same or by different user-selectable baseband signal.

The multi-carrier waveform is a practical solution for the generation of a complex broadband signal, for example:

- Multi-carrier waveforms build from signals of *different* communication standards (e.g. CDMA2000 or 3GPP FDD)



- Multi-carrier waveforms composed of several signals from *the same* communication standard as in LTE Advanced.

### 4.10.1 Required options

See [Chapter 4.6.1, "Required options"](#), on page 152.

Multi-carrier waveform files require the corresponding digital standard options (R&S SMBV100B-K2xx) of all included standards.

### 4.10.2 About the multi-carrier waveforms

This chapter provides background information on the ARB functionality for generating of multicarrier signals and the impact of the provided settings. Refer to [Chapter 4.10.4, "How to use the multi-carrier function"](#), on page 250 for information on how to use the provided settings to configure a multicarrier signal.

The multi-carrier waveforms are convenient way to configure the broadband test signals required for transmitter or receiver tests. Even complex multi-carrier scenarios composed of signals from different digital standards can be created and used for these tests.

Because the multi-carrier files are processed by the ARB generator, the composed waveform file must be created before it is loaded to and played by the ARB. The R&S SMBV100B saves the created multi-carrier waveform file under user definable name; as with the single carrier waveforms, the used file extension is \*.wv. The instrument appends additional information to the header of the composed waveform file. When the created waveform is loaded, the graphical interface displays information on clock rate, number of samples and creation day.

#### Differences between multi-carrier waveform generation and multi-carrier continuous wave generation

By default, the ARB multi-carrier waveform application does not generate a multi-carrier continuous wave (CW) signals that are aligned to the center frequency. Signals generated by the digital standard "Multi Carrier CW" are aligned to the center frequency.

To generate a multi-carrier CW signal, create a constant DC input signal, see ["Create Test Signal"](#) on page 161. Select a signal period, that is matching the carrier frequency distances.

To reach a smooth transition between end and start signal, make sure that the actual carrier frequency offset is rounded: Select "Mode > Equidistant Carrier Spacing" to set a frequency resolution that is the inverse of the signal period of the output signal. See [Chapter 4.10.2.1, "Defining the carrier frequency"](#), on page 237.



### General principle for composing the multi-carrier signal

The following is a list of the general steps used for composing the multicarrier signal:

- In the default mode, the up to 512 carriers are equally spaced and centered toward the RF frequency or the baseband DC line.  
The carrier spacing is adjustable within the total available bandwidth. Make sure, that the total RF bandwidth of the composed multicarrier signal does not exceed the available RF bandwidth, see data sheet.
- Another possibility is to define the center frequency of each of the carrier individually, see also [Chapter 4.10.2.1, "Defining the carrier frequency"](#), on page 237.
- Each carrier can be separately defined in terms of power, phase and modulated input signal.  
To define the leveling of the composed multicarrier signal, use the parameter [Power Reference](#)
- Optionally, crest factor optimization can be applied (see [Chapter 4.10.2.2, "Optimizing the crest factor"](#), on page 238).
- After all multi-carrier processing steps are completed, the instrument calculates the resulting peak and RMS power over the total signal. This value is then written in the waveform file.

#### 4.10.2.1 Defining the carrier frequency

There are two ways to define the carrier frequency of the individual carriers in the multicarrier signal:

- Enabling the **arbitrary carrier frequency** distribution and specifying the carrier frequency of each carrier individually.
- Using the built-in **equidistant carrier spacing** distribution function.  
That is, enabling the carriers to be equally spaced and centered toward the RF frequency. The carrier frequencies are automatically calculated depending on the selected number of carriers and the carrier spacing.  
The maximum carrier spacing is a function of the available total bandwidth and the selected number of carriers. It is calculated as follows:  
$$\text{Max Carrier Spacing} = \text{Total bandwidth} / (\text{Number of Carriers} - 1)$$
  
To avoid wrap-around problems, the effective applied carrier spacing can be slightly modified.

The value of the carrier spacing is rounded in that way that the carrier closest to the center RF frequency shows no phase jump. It is assumed that the carrier is unmodulated.

- For odd number of carriers:  
$$\text{RoundedCarrierSpacing} = 1 / \text{OutputSignalDuration} * \text{round}(\text{CarrierSpacing} * \text{OutputSignalDuration})$$
- For even number of carriers:  
$$\text{RoundedCarrierSpacing} = 2 / \text{OutputSignalDuration} * \text{round}(0.5 * \text{CarrierSpacing} * \text{OutputSignalDuration})$$

The R&S SMBV100B provides the parameter [Mode](#) for this purpose.



#### 4.10.2.2 Optimizing the crest factor

An introduction to the topic is provided in [Chapter 4.4.1.7, "Methods for optimizing the crest factor"](#), on page 105. This section focuses on the settings provided for and related to the multicarrier signals.

The R&S SMBV100B provides a crest factor reduction in form of an automatic optimization upon selected values for the following parameters:

- **Crest factor optimization mode:** determines whether the phase settings are selectable or internally calculated to fulfill a requirement for the crest factor value.
- **Clipping:** reduces the peak power of the resulting multicarrier signal according to the input parameter "Target Crest Factor"  
The resulting clipped peak power is the sum of the RMS level of the unclipped multicarrier signal and the parameter "Target Crest Factor".  
Because clipping reduces also the RMS level, the resulting crest factor of the clipped signal is slightly above the "Target Crest Factor".
- **Target crest factor:** determines the target crest factor. A value above the crest factor of the unclipped multicarrier signal has no effect.
- **Filter cut off frequency:** determines the filter parameter of the final lowpass filter. When the cutoff frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal. However, it can also increase the resulting crest factor.

#### 4.10.3 Multi-carrier settings

Access:

- Select "Baseband > ARB > General > Create Multi Carrier".

The "ARB: Multi Carrier" dialog enables direct configuration of the carrier distribution around the center frequency and adjusting some parameters for improving the signal characteristics.

The dialog is divided into several tabs. In each case, the current setting is displayed in the tab name. The tab "Carrier Table" enables the selection of the waveform files to be processed. Use the "Carrier Graph" to visualize the configured signal.

The remote commands required to define these settings are described in [Chapter 13.17.4.3, "SOURce:BB:ARbitrary subsystem"](#), on page 848.

Settings:

- [General settings](#).....239
- [Carrier table settings](#).....245
- [Carrier table assistant](#).....247
- [Carrier graph](#).....249




#### 4.10.3.1 General settings

Access:

- Select "Baseband > ARB > General > Create Multi Carrier".

This tab comprises settings for selecting the output waveform file, enabling the generation, and the configuration of the carrier distribution.

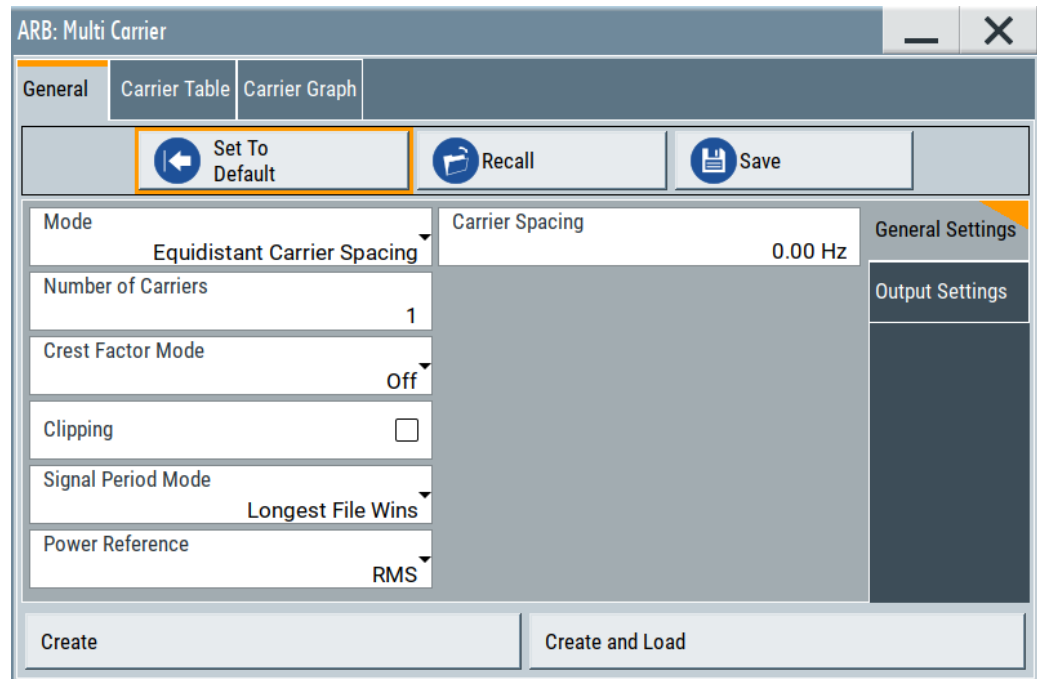

#### Settings:

Set to Default.....	240
Save/Recall Frame.....	240
Mode.....	240
Number of Carriers.....	240
Carrier Spacing.....	241
Crest Factor Mode.....	241
Clipping.....	241
Target Crest Factor.....	241
Filter Cutoff Frequency.....	241
Signal Period Mode.....	242
Signal Period.....	242
Power Reference.....	242
Output Settings.....	244
L Output File.....	244
L Clock Rate.....	244
L File Size.....	244
Create/Create and Load.....	244



**Set to Default**

Calls the default settings.

Parameter	Value
"Number of Carriers"	"1"
"Carrier Spacing"	"0 MHz"
"Crest Factor Mode"	"Off"
"Signal Period Mode"	"Longest file wins"

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:PRESet` on page 875

**Save/Recall Frame**

Accesses the standard "Save/Recall" dialog, i.e. the standard instrument function for storing and recalling the complete dialog-related settings. Refer to [Chapter 10.4, "Saving and recalling instrument settings"](#), on page 518 for a detailed description.

The multi-carrier settings are saved as files with predefined file extension `*.arb_multcarr`. The filename and the directory are user-definable.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:SETTing:CATalog?` on page 875

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:SETTing:LOAD` on page 875

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:SETTing:STORE` on page 875

**Mode**

Selects the way the carriers are distributed within the available bandwidth.

"Equidistant Carrier Spacing"

Sets an equidistant carrier spacing distribution, i.e. the carriers are equally spaced and centered toward the RF frequency. The carrier frequencies are automatically calculated depending on the selected number of carriers and the carrier spacing.

"Arbitrary Carrier Frequency"

Enables the specification of the carrier frequency of each carrier individually.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier:MODE` on page 876

**Number of Carriers**

Sets the number of carriers for the multi-carrier waveform. By default the multi-carrier table lists one carrier. A maximum of 512 carriers can be configured and activated.

When the number of carriers is increased, new lines are added at the end of the table. If these carriers already have been defined before, the settings are preset according to the former settings. Otherwise the parameters are preset with the default values.

See also [Chapter 4.10.2.1, "Defining the carrier frequency"](#), on page 237.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier:COUNt` on page 876



**Carrier Spacing**

Sets the frequency spacing between adjacent carriers of the multi-carrier waveform.

The carriers are arranged symmetrically around the RF carrier and the maximum carrier spacing is limited to:

$$\text{"Carrier Spacing"} = \text{Baseband bandwidth} / (\text{"Number of Carriers"} - 1).$$

The baseband bandwidth depends on the installed options (see the data sheet).

For more information, see [Chapter 4.10.2.1, "Defining the carrier frequency"](#), on page 237.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier:SPACing` on page 876

**Crest Factor Mode**

Selects the mode for optimizing the crest factor by calculating the carrier phases. For more information, refer to [Chapter 4.10.2.2, "Optimizing the crest factor"](#), on page 238.

The following modes are available:

"Off"	There is no automatic setting for minimizing or maximizing the crest factor. The "Phase" setting as defined in the carrier table is in use.
"Minimize"	The crest factor is minimized by internally calculating optimized carrier phases. The phase setting displayed in the carrier table is invalid.
"Maximize"	The crest factor is maximized by internally calculating optimized carrier phases. The phase setting displayed in the carrier table is invalid.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CFACTOR:MODE` on page 877

**Clipping**

Switches the baseband clipping on and off.

Clipping reduces the peak power of the resulting multicarrier signal according to the input parameter "Target Crest Factor". For more information, refer to [Chapter 4.10.2.2, "Optimizing the crest factor"](#), on page 238.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping[:STATe]` on page 878

**Target Crest Factor**

Sets the value of the target crest factor, if baseband clipping is enabled.

A "Target Crest Factor" above the crest factor of the unclipped multicarrier signal has no effect. For more information, refer to [Chapter 4.10.2.2, "Optimizing the crest factor"](#), on page 238.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping:CFACTOR` on page 877

**Filter Cutoff Frequency**

Sets the cutoff frequency of the final lowpass filter, if baseband clipping is enabled.



When the cutoff frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal. This process can increase the resulting crest factor. See also [Chapter 4.10.2.2, "Optimizing the crest factor"](#), on page 238.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping:CUToff` on page 878

### Signal Period Mode

Defines the way the resulting signal period of the multi-carrier waveform is calculated. The resulting period is always calculated for all carriers in the carrier table irrespective of their state (ON/OFF). Use the "Carrier Table > Info" function to obtain information on the sample rate and file length data of each carrier.

**Note:** Wrap-around and timing problems can occur when I/Q signals of different length are used. Thus, demodulation of a carrier can be difficult or even impossible.

We recommend that you proceed as follows:

- Consider the timing when creating the input I/Q files.
- Adjust the signal duration to the carrier which is then demodulated.  
(In this case, the other carriers are for interfering the signal only.)

These problems do not arise with signals of the same standard (e.g. 3GPP).

The following modes are available:

"Longest File Wins"

The longest I/Q file in the carrier table defines the resulting signal period. Shorter I/Q files are periodically repeated.

"Shortest File Wins"

The shortest I/Q file in the carrier table defines the resulting signal period. Only the first part of longer I/Q files is used.

"User"

The signal period is set manually ([Signal Period](#)). Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

"Least Common Multiple"

The output file duration is the least common multiple of all input file durations.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:TIME:MODE` on page 878

### Signal Period

Sets the signal period in signal duration mode "User". Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:TIME` on page 877

### Power Reference

Defines the way the individual carriers in a composed multi carrier signal are leveled. The difference between the provided modes is especially important if signals with different crest factors are composed together into a multi carrier signal.



**"RMS"**

The individual carriers are leveled based on their RMS power and the configured "Carrier Gain".

**Example:**

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *RMS power* of the second carrier signal is 3 dB lower than the RMS power of the first carrier signal.

**"Peak"**

The individual carriers are leveled based on their peak power and the configured "Carrier Gain".

**Example:**

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *peak power* of the second carrier signal is 3 dB lower than the peak power of the first carrier signal.

**Example: Multi carrier signal composed of waveforms with different crest factor**


A multi carrier signal is composed from two waveform files with the following characteristics:

3GPP FDD signals with the same "Sample Rate" but *different "Crest Factors"*.

"Peak" = 0 dBFS

"Carrier Gain" = 0 dB

	State	Carrier Freq. Offs. / MHz	Gain / dB	Phase / deg	Delay / ns	File	Info	!!!
0	On	-5.000 000	0.00	0.00	0	/var/user/lte1	Info...	
1	On	5.000 000	0.00	0.00	0	/var/user/lte2	Info...	

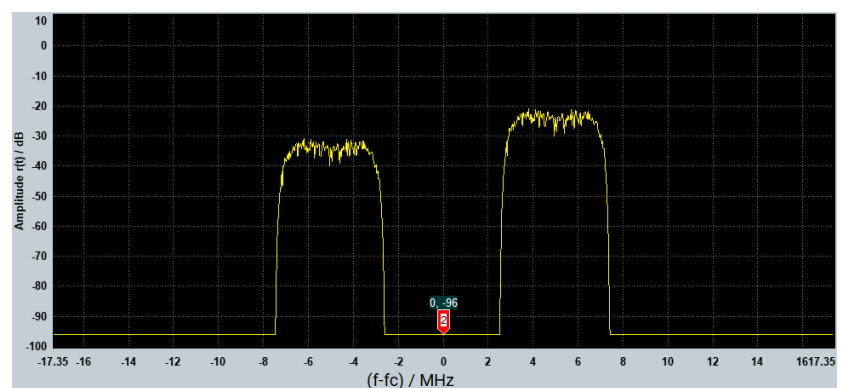

The Peak values of the carrier signals are equal, the RMS values are different.



Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:POWer:REference](#) on page 879

### Output Settings

The output settings indicate the name, the file size, and the clock rate of the currently calculated multi-carrier output file.

#### Output File ← Output Settings

Accesses the standard "File Select" function to specify the output filename of the multi-carrier waveform to be calculated. As with normal waveforms, the file extension is \* .wv.

To trigger the calculation and storage of this multi-carrier waveform, select "Create" or "Create and Load".

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:OFILe](#) on page 879

#### Clock Rate ← Output Settings

Displays the resulting sample rate at which the multi-carrier waveform is output by the ARB generator.

The output clock rate depends on the following:

- Number of carriers
- Carrier spacing
- Input sample rate of the leftmost or rightmost carriers.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:CLOCK?](#) on page 879

#### File Size ← Output Settings

Displays the resulting number of samples of the multi-carrier waveform.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:SAMPles?](#) on page 876

#### Create/Create and Load

Creates a multi-carrier waveform defined by the multi-carrier table and general setting entries.

If you start calculation with the "Create and Load" function, the instrument creates the waveform and loads it in the ARB generator.



This multi-carrier waveform is saved with filename specified in "Output File". Depending on the configuration of the multi-carrier waveform, calculation can take some time. To stop the calculation, use the "Abort" function.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CREate` on page 880

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLOad` on page 879

#### 4.10.3.2 Carrier table settings

Access:

1. Select "Baseband > ARB > General > Multi Carrier".
2. Select "ARB: Multi Carrier > Carrier Table"

General <b>Carrier Table</b> Carrier Graph									
Number of Carriers					4	Carrier Table Assistant ...			
	State	Carrier Freq. Offs. / MHz	Gain / dB	Phase / deg	Delay / ns	File	Info	!!!	
0	On	-7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...		
1	On	-2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...		
2	On	2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...		
3	On	7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...		

This tab comprises the settings of the individual carriers. A selectable carrier range can be set with the aid of the optional "Carrier Table Assistant".

The settings of all available carriers are displayed in table form. Previously applied assistant settings can be further refined. The number of lines corresponds to the number of carriers.



The "Phase / deg" settings are only valid if optimization of the crest factor is disabled ("Crest Factor Mode" = "Off").

Use the "Carrier Graph" tab to visualize the selected multi-carrier configuration.

#### Settings:

Number of Carriers.....	246
No.....	246
State.....	246
Carrier Freq [MHz].....	246
Gain.....	246
Phase.....	246



Delay.....	246
File.....	246
Info.....	247
!!!.....	247

### Number of Carriers

Defines the number of carriers of the multi-carrier waveform.

This parameter is identical to the one in the "General Setting" section.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier:COUNT` on page 876

### No

Indicates the carrier index ranging from 0 to (number of carriers -1).

Remote command:

Individual carriers are set by the index at the keyword `CARR`

### State

Switches On/Off a carrier.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:STATe` on page 880

### Carrier Freq [MHz]

Sets the carrier frequency.

**Note:** The carrier frequency can only be set in "Arbitrary Carrier frequency" mode. For "Equidistant Carrier Spacing", the carrier spacing is determined automatically.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency`  
on page 880

### Gain

Sets the gain of a carrier.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:POWER` on page 881

### Phase

Sets the starting phase of a carrier.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:PHASe` on page 881

### Delay

Sets the starting delay of a carrier.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:DELay` on page 881

### File

Accesses the standard "File Select" function for selecting the input file. The input file contains the I/Q signal that is modulated onto the carrier.



Remote command:

[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:FILE on page 882

### Info

Indicates the sample rate, number of I/Q value pairs (number of samples), and the signal period of the selected file.

Remote command:

n.a.

### !!!

Indicates an occurred conflict by means of a warning triangle. A conflict arises when the carriers overlap and is also indicated in the header of the "Carrier Table" tab.

Remote command:

[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CARRier<ch>:CONFLICT? on page 882

#### 4.10.3.3 Carrier table assistant

Access:

1. Select "Baseband > ARB > General > Multi Carrier".
2. Select "ARB: Multi Carrier > Carrier Table > Carrier Table Assistant"

ARB Multi Carrier Table	
Number of Carriers	4
Carrier Start	0
Carrier Stop	3
Carrier State	<input checked="" type="checkbox"/>
Gain Start	0.00 dB
Gain Step	0.00 dB
Phase Start	0.00 deg
Phase Step	0.00 deg
Delay Start	0 ns
Delay Step	0 ns
<input type="button" value="Input Waveform File ..."/>	
<input checked="" type="button" value="Apply Assistant Settings"/>	
3gpp	

The "Carrier Table Assistant" dialog enables the configuration of a selectable subset of carrier. The provided settings are an optional way to create a multi-carrier scenario within a specified carrier range.



**Settings:**

Carrier State.....	248
Carrier Start/Start.....	248
Gain Start.....	248
Gain Step.....	248
Phase Start.....	248
Phase Step.....	249
Delay Start.....	249
Delay Step.....	249
Input Waveform File.....	249
Apply Assistant Settings.....	249

**Carrier State**

Switches the carriers in the range "Carrier Start" to "Carrier Stop" on/off.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:STATe` on page 882

**Carrier Start/Start**

Defines the start/stop index of the carrier range to which the assistant settings are intended to apply.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:START` on page 882

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:STOP` on page 882

**Gain Start**

Sets the gain of the carrier marked by "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWER[:START]`

on page 883

**Gain Step**

Sets the step width that is used to increment the gain.

The resulting carrier gain in the carrier table equals:

$$\text{Gain} = \text{"Gain Start"} + n * \text{"Gain Step"}.$$

$n$  is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWER:STEP`

on page 883

**Phase Start**

Sets the phase of the carrier marked by "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START]`

on page 884



**Phase Step**

Sets the step width that is used to increment the phase.

The resulting phase in the carrier table equals:

$$\text{Phase} = \text{"Phase Start"} + n * \text{"Phase Step"}$$

$n$  is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP`  
on page 883

**Delay Start**

Sets the delay of the carrier marked by "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELaY[:START]`  
on page 884

**Delay Step**

Sets the step width that is used to increment the delay.

The resulting delay in the carrier table equals:

$$\text{Delay} = \text{"Delay Start"} + n * \text{"Delay Step"},$$

$n$  is a value between 0 and the difference of "Carrier Stop" and "Carrier Start".

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELaY:STEP`  
on page 884

**Input Waveform File**

Accesses the standard "File Select" function for selecting the input file. The input file contains the I/Q signal to be modulated onto *all carriers* of the selected carrier range.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:FILE` on page 885

**Apply Assistant Settings**

Transfers the assistant settings to the carrier table.

Remote command:

`[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute`  
on page 885


**4.10.3.4 Carrier graph**

Access:

1. Select "Baseband > ARB > General > Multi Carrier".



2. Select "ARB: Multi Carrier > Carrier Graph"

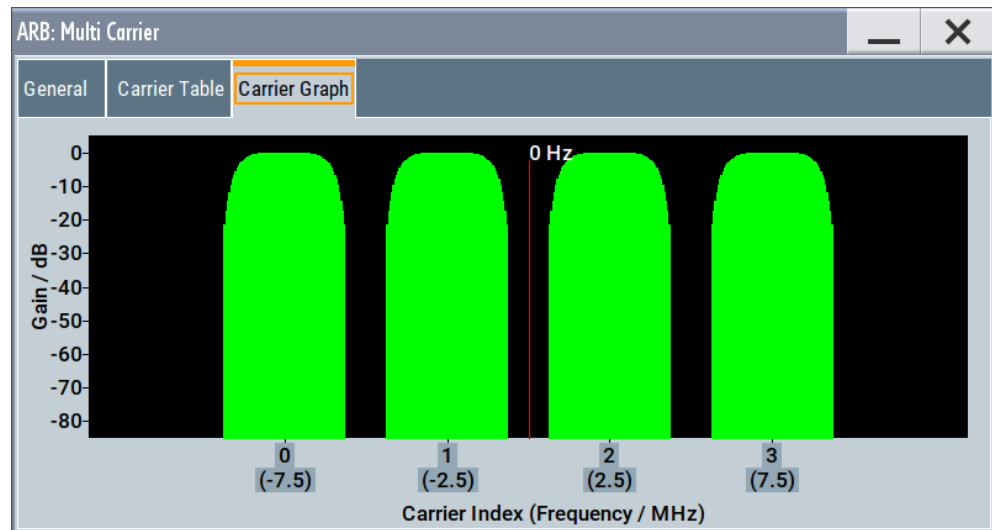

The carrier graph is a graphical representation of the current multi-carrier configuration in the frequency domain.

The height of the bars corresponds to the gain of each individual carrier. The bars width indicates the bandwidth of the carriers signals.

#### 4.10.4 How to use the multi-carrier function

This section provides step-by-step instructions on how to configure and use the multi-carrier settings.

##### To create a multi-carrier waveform file (general workflow)

Perform the following general steps:

1. To configure the general settings, select "Baseband > ARB > General"
2. To configure the carrier table select "ARB > Multi Carrier > Carrier Table"
3. To enter the filename of the multi-carrier waveform, select "ARB > Multi Carrier > Output File"
4. To save and load multi-carrier waveform, select "ARB > Multi Carrier > Create or Create and Load")

##### To generate a multi-carrier signal for standard transmitter test



High-power amplifiers of multi-carrier base stations face increased requirements in terms of linearity and acceptable intermodulation performance.

To set up a standard transmitter test, proceed as follows:

1. Open the "Baseband > 3GPP FDD" dialog. Perform the following:
  - a) select "3GPP FDD > Basestations > Test Setups/Models"
  - b) select "3GPP FDD: Downlink/Test Model > Test\_Model\_1\_16channels".



- c) Confirm with "Select".
2. To enable signal generation, select "3GPP FDD > General > ON".
3. To create a 3GPP ARB file, select "3GPP FDD > Generate Waveform".  
Enter the name of the waveform, that you want to generate, for example:  
3gpp\_1\_16.
4. Confirm with "Save"
5. To set up a multi-carrier scenario with 4 carriers and a carrier spacing of 5 MHz, select "Baseband > ARB > Multi Carrier".  
Perform the following:
  - a) In the "General" dialog, select "Number of Carriers = 4" and "Carrier Spacing = 5 MHz".
  - b) To load the generated waveform file to all 4 carriers, select "Carrier Table > Carrier Table Assistant". Select "Carrier Start = 0" and "Carrier Stop = 3".
  - c) To load the generated waveform file to all 4 carriers, select "ARB Multi Carrier Table > Input Waveform File". Select the generated waveform file 3gpp\_1\_16.
  - d) Select "ARB Multi Carrier Table > Carrier State > On".

ARB Multi Carrier Table	
Number of Carriers	4
Carrier Start	Carrier Stop
0	3
Carrier State	<input checked="" type="checkbox"/>
Gain Start	Gain Step
0.00 dB	0.00 dB
Phase Start	Phase Step
0.00 deg	0.00 deg
Delay Start	Delay Step
0 ns	0 ns
 Input Waveform File ...	3gpp
 Apply Assistant Settings	

- e) Select "ARB Multi Carrier Table > Apply Assistant Settings". Close the dialog.  
The "ARB: Multi Carrier > Carrier Table" dialog confirms the configuration.



General

Carrier Table

Carrier Graph


Number of Carriers

4

Carrier Table Assistant ...

	State	Carrier Freq. Offs. / MHz	Gain / dB	Phase / deg	Delay / ns	File	Info	!!!
0	On	-7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
1	On	-2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
2	On	2.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	
3	On	7.500 000	0.00	0.00		0 /var/user/3gpp-1-16.wv	Info...	

6. Select "ARB: Multi Carrier > Carrier Graph" to visualize the configuration.

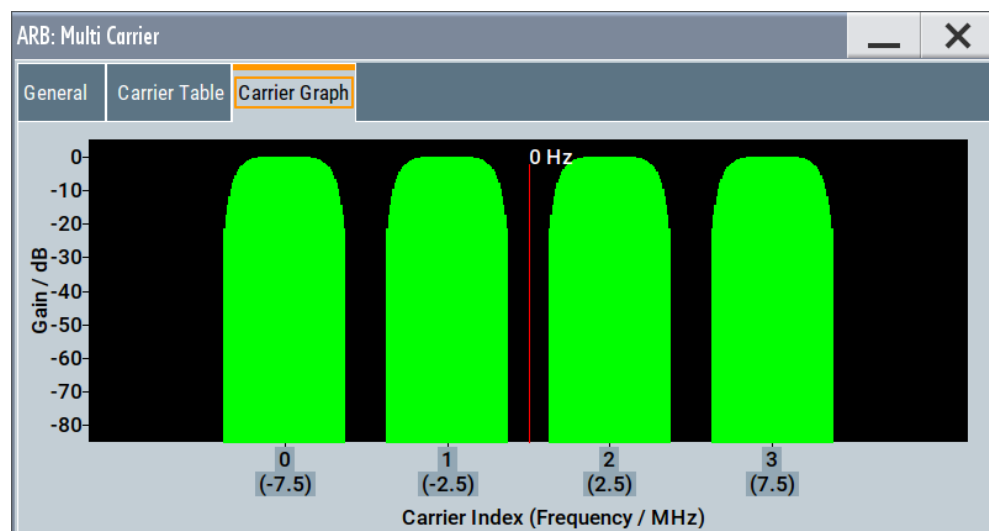

7. Select "ARB: Multi Carrier > General > Output Settings > Output File" and enter the name of the output file, for example `4x5MHz_3gpp_1_16`.
8. To trigger signal calculation and to load the waveform in the ARB generator, select "ARB: Multi Carrier > General > Create/Create and Load" function.
9. Select "ARB > General > Load Waveform".  
Confirm that you loaded the generated multi-carrier waveform.
10. Select "ARB > State > On" to enable the ARB generator.

## 4.11 Generating multi-carrier continuous wave signal

The multi-carrier continuous wave (MCCW) is a firmware option that enables the R&S SMBV100B to calculate up to 160001 continuous wave signals.



### 4.11.1 Required options

The equipment layout for processing of waveform files includes:

- Base unit
- Option Multi-Carrier CW (R&S SMBVB-K61)

### 4.11.2 About the MCCW

The R&S SMBV100B can calculate and generate a multi-carrier continuous wave signal build form up to 8192 unmodulated carriers. The carrier offset and the power level of the carriers are user-definable. The provided settings allow individual configuration of each carrier and the joint configuration of subset of carriers. Automatic start phase setting is provided to minimize the crest factor.

The multi carrier CW signals are not generated in real time but rather computed in arbitrary waveform mode. Changes in the carrier settings are not considered until the instrument is triggered to accept and apply them.

The common application fields of the multi carrier CW signals are the receiver tests with broadband test signals.


### 4.11.3 MCCW settings

Access:

- Select "Baseband" > "Multi Carrier CW".

The dialog enables direct carrier configuration, access to the carrier table and the graphical representation of the configured carriers.



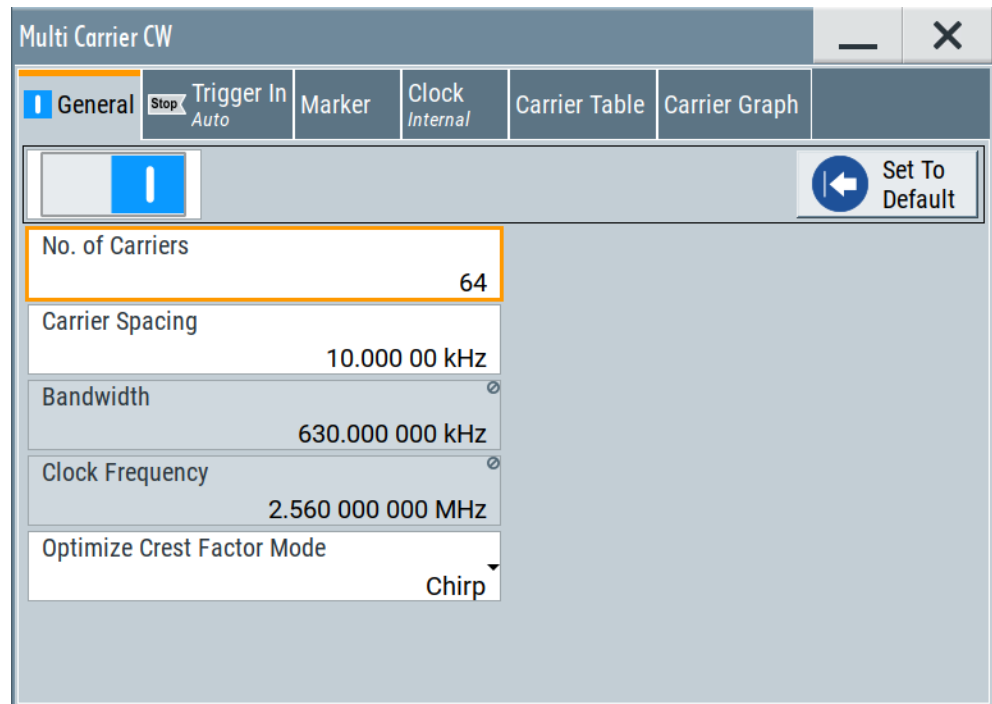

The remote commands required to define these settings are described in [Chapter 13.17.4.4, "SOURce1:BB:MCCW subsystem"](#), on page 898.

#### Settings:

##### 4.11.3.1 General carrier settings

Access:

- Select "Baseband" > "Multi Carrier CW".

#### Settings:

State.....	254
Set to Default.....	255
Number of Carriers.....	255
Carrier Spacing.....	255
Bandwidth.....	255
Clock Frequency.....	255
Optimize Crest Factor Mode.....	256
Desired Crest Factor.....	256

#### State

Enables the Multi Carrier CW.

Switching on this option, turns off all the other digital standards and digital modulation modes in the corresponding signal path.



Multi Carrier CW signals are computed in arbitrary waveform mode. To adopt the changes in the settings of individual carriers, select "Accept". This selection applies to the settings in the "Table Setup Assistant" section and the "Carrier Table" dialog.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:STATe` on page 903

### Set to Default

Calls the default settings, see [Table 4-21](#).

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:PRESet` on page 903

### Number of Carriers

Sets the number of carriers composing the multi carrier CW signal.

**Note:** Cross-reference between total bandwidth, carrier spacing, and number of carriers. The total bandwidth of the multi-carrier CW signal is calculated as follows:

Total Bandwidth = ("Number of Carriers" - 1) \* "Carrier Spacing"

The result must not exceed the system bandwidth of the instrument (see data sheet).

If the total bandwidth is not respected, the value selected as "Carrier Spacing" is reduced. Hence, the selected number of carriers defines the maximum carrier spacing.

By default, the multi-carrier table lists 64 carriers that are preset to the settings: "State" = "On", "Power" = "0 dB", "Phase" = "0°".

If the selected number of carriers is less than the carriers in the table, the superfluous table rows are deleted. If the number of carriers exceeds the number of table rows, new rows are appended to the table.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:CARRier:COUNT` on page 903

### Carrier Spacing

Sets the spacing between carriers for the multi-carrier CW signal. The carriers are arranged symmetrically around the HF carrier.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:CARRier:SPACing` on page 904

### Bandwidth

Indicates the resulting occupied signal bandwidth, calculated from the selected [Number of Carriers](#) and [Carrier Spacing](#).

### Clock Frequency

Displays the clock rate at which the multi-carrier CW signal is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers and the selected carrier offset.

The value indicates the resolution during the marker generation.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:CLOCK?` on page 904



**Optimize Crest Factor Mode**

Selects the mode for automatically minimizing the crest factor. The carrier start phases are automatically configured according to the selected mode.

Methods of reducing the crest factor differ regarding both the optimization achievable and the time required for computation. For more information, refer to [Chapter 4.4.1.7, "Methods for optimizing the crest factor"](#), on page 105.

"Off"	There are no automatic settings for minimizing the crest factor. Use the "Phase" parameter to set the start phase.
"Chirp"	<p>Rapid crest factor optimization regardless of the number of carriers. The minimal crest factor is 3 dB. This value is obtained, if the following prerequisites are fulfilled:</p> <ul style="list-style-type: none"> <li>• All carriers in the multicarrier signal are switched on.</li> <li>• All carriers have identical power.</li> </ul> <p>In a configuration which differs from these prerequisites, the achievable crest factor is worse.</p>
"Target Crest"	<p>Optimization of the crest factor to a desired value for all carrier configurations.</p> <p>The optimization time depends on the number of carriers and the desired crest factor. Computation time increases only when the number of carriers exceeds 256 and the crest factor is below 4 dB. The desired value can be entered in "Desired Crest Factor".</p> <p><b>Note:</b> Optimization can be canceled at any time, and the current value being displayed at that moment is then used.</p>

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CFACTOR:MODE](#) on page 904

**Desired Crest Factor**

For optimization "Target Crest", defines the desired crest factor.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CFACTOR](#) on page 904

**4.11.3.2 Carrier table**

Access:

- Select "Baseband" > "Multi Carrier CW" > "Carrier Table".

The provided settings enable the configuration of selectable range of carriers.



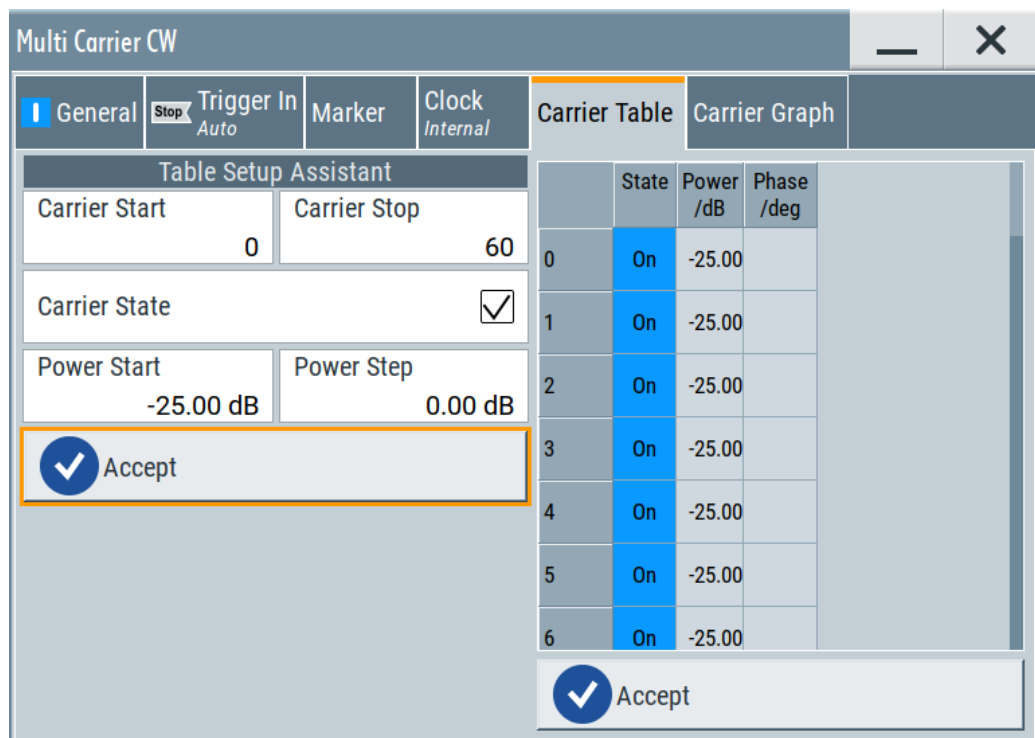
**Settings:**

Table Setup Assistant.....	257
L Carrier Start/Stop.....	257
L Carrier State.....	257
L Power Start.....	258
L Power Step.....	258
L Phase Start.....	258
L Phase Step.....	258
L Accept.....	258
Carrier Table.....	258

**Table Setup Assistant**

Enables joint configuration of selectable range of carriers.

**Carrier Start/Stop ← Table Setup Assistant**

Defines the start/stop index of the carrier range to which the following settings are intended to apply.

Remote command:

[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:STARt on page 909

[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:STOP on page 909

**Carrier State ← Table Setup Assistant**

Switches the carriers in the carrier range on/off.

Remote command:

[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:STATe on page 909



**Power Start ← Table Setup Assistant**

Sets the power of the starting carrier.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:POWer [ :START ]` on page 908

**Power Step ← Table Setup Assistant**

Sets the width of the step with which the power is changed from carrier to carrier.

The individual power of each carrier ("Carrier Table" > "Carrier#" > "Power") is calculated as "Power Start" + n\*"Power Step".

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:POWer:STEP` on page 908

**Phase Start ← Table Setup Assistant**

If "Optimize Crest Factor Mode" > "Off", sets the phase of the starting carrier.

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:PHASe [ :START ]` on page 908

**Phase Step ← Table Setup Assistant**

If "Optimize Crest Factor Mode" > "Off", sets the width of the step with which the phase is changed from carrier to carrier.

The individual phase of each carrier ("Carrier Table" > "Carrier#" > "Power") is calculated as "Phase Start" + n\*"Phase Step".

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:PHASe:STEP` on page 908

**Accept ← Table Setup Assistant**

Adopts the carrier range setting into the "Carrier Table".

Remote command:

`[ :SOURce<hw> ] :BB:MCCW:EDIT:CARRier:EXECute` on page 909

**Carrier Table**

A table with settings for the configuration of the individual carriers.

The multi-carrier CW signal is only computed when the "Accept" function is triggered. Whenever the carrier table contains settings that have not yet been adopted with the "Accept" function, the background is yellow.

**Note:** The phase/deg settings are only valid if optimization of the crest factor is disabled ("Optimize Crest Factor" > "Off").

**Tip:** Use the [Carrier graph](#) function to display the current carrier configuration.

"No."	Carrier index.
"State"	Switches a carrier on/off.
"Power"	Sets the power of a carrier. If you use the <a href="#">Table Setup Assistant</a> settings to fill the individual carrier powers, the power of a carrier is calculated as follows: "Power Start" + n*"Power Step".



"Phase" Sets the starting phase of a carrier.  
If you use the [Table Setup Assistant](#) settings to fill the individual carrier phases, the phase of a carrier is calculated as follows:  
"Phase Start" + n\*"Phase Step".

"Accept" Transfers the settings in the carrier table into the instrument.

Remote command:

[ :SOURce<hw> ] :BB:MCCW:CARRier:LIST:STATe on page 905

[ :SOURce<hw> ] :BB:MCCW:CARRier:STATe on page 905

[ :SOURce<hw> ] :BB:MCCW:CARRier:LIST:POWeR on page 907

[ :SOURce<hw> ] :BB:MCCW:CARRier:POWeR on page 907

[ :SOURce<hw> ] :BB:MCCW:CARRier:LIST:PHASe on page 906

[ :SOURce<hw> ] :BB:MCCW:CARRier:PHASe on page 906


#### 4.11.3.3 Carrier graph

Access:

- Select "Baseband" > "Multi Carrier CW" > "Carrier Graph".

The "Carrier Graph" tab is a graphical representation of the current carrier configuration.

The carriers are on the X-axis and the colored bars represent those carriers which are in the active state. Power is on the Y-axis, and the height of the bars corresponds to the chosen power of each individual carrier.

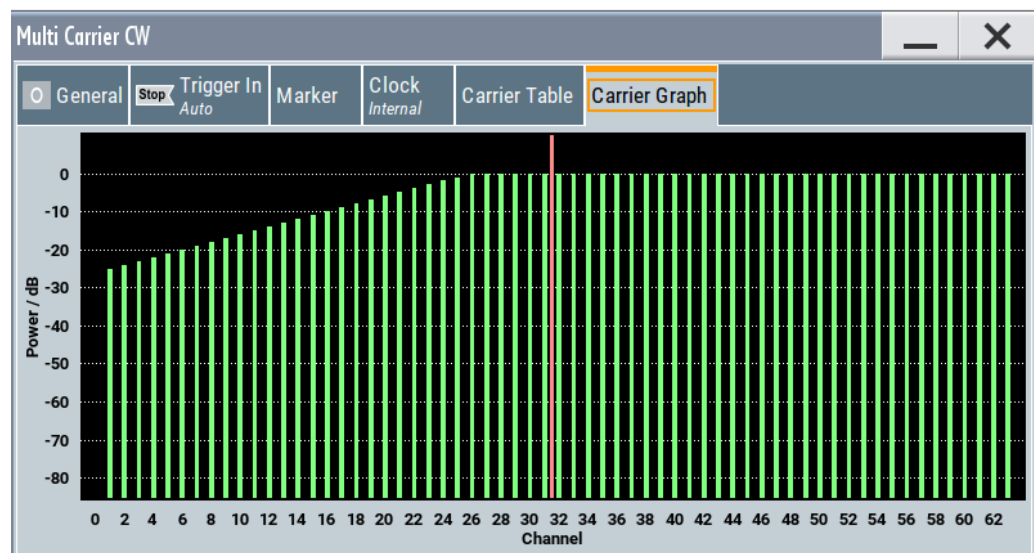

#### 4.11.3.4 Trigger, marker and clock settings

These tabs provide standard settings.



For detailed description, see:

- [Chapter 4.4.2.1, "Trigger settings"](#), on page 108
- [Chapter 4.4.2.2, "Marker settings"](#), on page 113
- [Chapter 4.4.2.3, "Clock settings"](#), on page 114
- [Chapter 4.4.2.4, "Global connectors settings"](#), on page 115

#### 4.11.4 How to use the multi-carrier continuous wave function

This section provides examples on how to use the multi-carrier continuous wave function in some general test cases.

##### To generate a signal to test the frequency response

If the test case requires a signal for DUT testing, like power amplifier or filter with a bandwidth of 80 MHz, proceed as follows:

1. Connect the DUT to the output connectors of the instrument.
2. Connect a suitable measurement equipment, like signal analyzer to the DUT.
3. Select "Baseband" > "Multi Carrier CW".
4. Adjust further settings, for example, trigger settings, as required.
5. Set "Multi Carrier CW" > "State" > "On".
6. Set "RF" > "On" to enable the signal output.
7. On the connected signal analyzer, execute the required measurement tasks. Measure the frequency response at the outputs of the DUT.


##### To generate a single sideband signal to test the image rejection

If a single sideband test signal for testing the image rejection capabilities of DUT is required, proceed as follows:

1. Connect the DUT to the output connectors of the instrument.
2. Connect a suitable measurement equipment, like signal analyzer to the DUT.
3. Select "Baseband" > "Multi Carrier CW" > "General":
  - a) Enable "No. of Carriers" = "81".
  - b) Set "Carrier Spacing" = "1 MHz".
4. Select "Multi Carrier CW" > "Carrier Table":
  - a) Set "Carrier Start" = "40".
  - b) Set "Carrier Stop" = "80".
  - c) Set "Carrier State" = "Off".
  - d) Confirm with "Accept".

Open the "Multi Carrier CW" > "Carrier Graph" to visualize the configured single sideband signal.



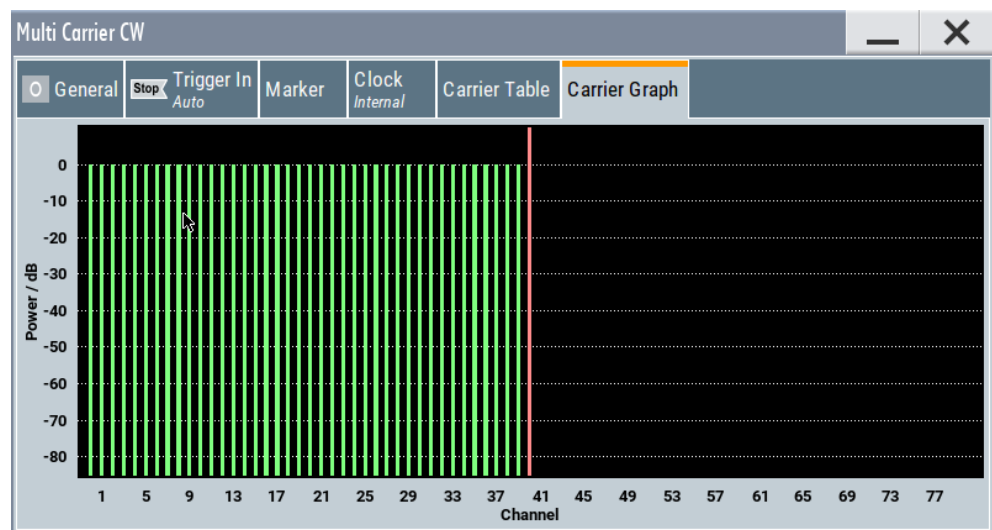

5. Adjust further settings, for example, trigger settings, as required.
6. Set "Multi Carrier CW" > "State" > "On".
7. Set "RF" > "On" to enable the signal output.
8. On the connected signal analyzer, execute the required measurement tasks. Measure the frequency response at the outputs of the DUT.

#### 4.11.5 References

**Table 4-21: MCCW default values**

Parameter	Value
State	Not affected by "Set to Default"
<b>Carrier Setup</b>	
Number of Carriers	64
Carrier Spacing	10 kHz
Optimize Crest Factor	Chirp
Desired Crest Factor	3 dB
<b>Trigger</b>	
Mode	Auto
Source	Internal
Ext. Delay	0
Ext. Inhibit	0
<b>Marker</b>	
Channel 1...4	Restart
<b>Clock</b>	



Parameter	Value
Source	Internal
<b>Multichannel Setup</b>	
Start Carrier	0
Stop Carrier	0
State	on
Power	0 dB
Power Step	0 dB
Initial Phase	0°
Phase Step	0°
<b>Channel Setup</b>	
State	ON
Phase	0°
Power	0 dB

## 4.12 Shifting and boosting the baseband signal

The R&S SMBV100B provides settings to frequency offset the internally generated and externally supplied baseband signal.

### 4.12.1 About baseband offsets

The applied baseband frequency and phase offset and path gain affect the signal on the output of the corresponding block, "Baseband" or "BB Input". The shifting of the central frequency of the baseband signal is one of the tasks of the resampler.

#### 4.12.1.1 Impact of the frequency offset

For some applications, it is helpful to shift the baseband signal with a user-defined baseband frequency offset to a different center frequency to improve signal characteristics.

The frequency offset function shifts the center frequency of the wanted baseband signal. The function also provides a quick way to shift the used frequency band in the RF frequency domain without modifying the RF settings.

See [Chapter 4.12.3, "How to improve signal characteristics by shifting the baseband signal"](#), on page 265.



### Limitations

The complex I/Q bandwidth of the shifted useful signal must not exceed the total available baseband bandwidth (see data sheet). The setting range of the frequency offset is then calculated as follows:

$$-(TotalBasebandBandwidth/2) + f_{use}/2 \leq f_{offset} \leq (TotalBasebandBandwidth/2) - f_{use}/2 ,$$

where

$f_{use}$  is the complex useful bandwidth of the I/Q signal before the offset

$f_{offset}$  is the frequency offset

The [Figure 4-29](#) illustrates the setting range of the frequency offset.

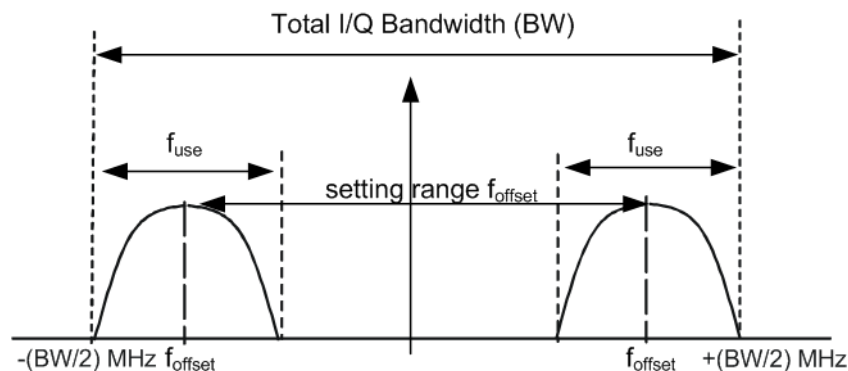


Figure 4-29: Setting range of frequency offset

### Example: To calculate the maximum frequency offset

This example uses the following signal:

- Standard: "Baseband > Custom Digital Modulation"
- "Set according to Standard > WCDMA-3GPP"
- "Symbol Rate = 3.84 Msym/s" (3.84 MHz)
- "Filter > Root Cosine"
- "Roll Off Factor = 0.22"

The complex useful bandwidth of filtered signal is calculated as follows (see ["Impact of the filter parameters"](#) on page 103):

- $f_{use} = (1 + \text{"Roll Off Factor"}) * \text{"Symbol Rate"}$
- $f_{use} = (1 + 0.22) * 3.84 \text{ MHz} = 4.6848 \text{ MHz}$

For an instrument with a total available I/Q bandwidth of 160 MHz, the valid range of values for the frequency offset is then:

- $-160 \text{ MHz}/2 + 4.6848 \text{ MHz}/2 \leq f_{offset} \leq 160 \text{ MHz}/2 - 4.6848 \text{ MHz}/2$  or
- $-77.6576 \text{ MHz} \leq f_{offset} \leq 77.6576 \text{ MHz}$



### To observe the effect of offsetting the frequency

Use the built-in real-time graphical display ("System Configuration > Graphics > Power Spectrum") and observe the power spectrum of the signal with and without frequency offset:

- See [Chapter 3.3.5, "Verifying the generated signal with the graphics display"](#), on page 56.
- See ["To set and verify a baseband frequency offset"](#) on page 451.

#### 4.12.1.2 Impact of the phase offset

The "Phase Offset" determines the phase offset between the different baseband signals. A phase offset rotates each point of an I/Q constellation diagram by the specified phase offset.

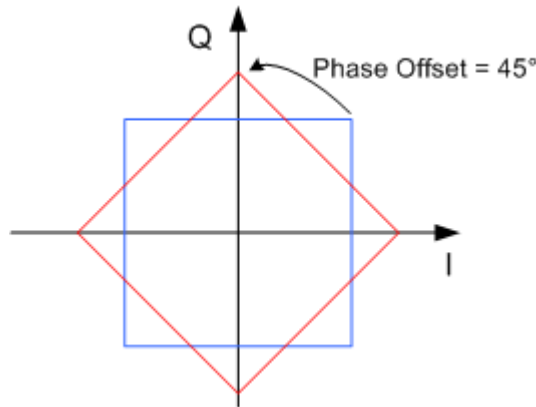


Figure 4-30: I/Q constellation diagram: Effect after offsetting the phase by an angle of 45 °

### To observe the effect of offsetting the phase

Use the built-in real-time graphical display ("System Configuration > Graphics > Constellation") and observe that the points on the I/Q constellation diagram are turning counterclockwise.

See [Chapter 8.1, "Displaying baseband signal characteristics in real-time"](#), on page 436.

#### 4.12.2 Baseband offsets settings

Access:

- Select "Baseband > Baseband Offsets" or "BB Input > Baseband Offsets".

The "Baseband Offsets" dialog provides the settings necessary to add frequency and/or phase offset.



Baseband Offsets			
	Frequency Offset /Hz	Phase Offset /°	
Baseband A	0.00	0.00	
BB Input A	10 000 000.00	0.00	

The block diagram shows an icon  $\Delta f$  on the signal path to indicate an applied frequency offset.

#### Settings:

Frequency Offset.....	265
Phase Offset.....	265

#### Frequency Offset

Enters the frequency offset for the internal or external baseband signal and shifts the useful baseband signal in the center frequency.

Use function, for example, to shift the baseband signal relative to the AWGN signal.

See:

- [Chapter 4.12.1.1, "Impact of the frequency offset"](#), on page 262 for detailed information on the calculation of the frequency offset value range
- [Chapter 4.12.3, "How to improve signal characteristics by shifting the baseband signal"](#), on page 265

Remote command:

[ :SOURce<hw> ] :BB:FOFFset on page 818

[ :SOURce<hw> ] :BBIN:FOFFset on page 818

#### Phase Offset

Enters the phase offset for the baseband signal (see [Chapter 4.12.1.2, "Impact of the phase offset"](#), on page 264).

The phase offset affects the signal on the "Baseband block" output.

Use this parameter, for example, to change the start phase of the baseband signal.

Remote command:

[ :SOURce<hw> ] :BB:POFFset on page 819


[ :SOURce<hw> ] :BBIN:POFFset on page 818

### 4.12.3 How to improve signal characteristics by shifting the baseband signal

Shifting of the generated baseband signal is useful in the following cases:

- You analyze the generated signal with a signal analyzer and the displayed signal spectrum indicates a carrier leakage (a signal drop) at the current RF frequency.



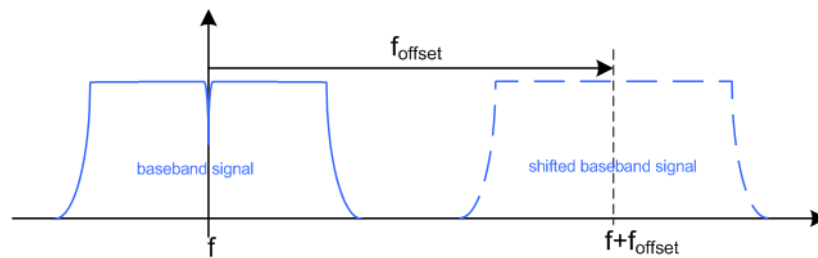

Shifting the baseband signal to a different center frequency can eliminate the carrier leakage problem.

Alternatively, apply an I and/or Q offset and vary the settings until the observed signal drop disappears, see ["To optimize the carrier leakage suppression"](#) on page 287.

In the following examples, we assume that:

- The R&S SMBV100B generates a baseband signal
- A spectrum analyzer is connected to the R&S SMBV100B, the analyzed is configured and measures the required signal characteristics.

#### To shift the generated baseband signal

- Select "Baseband > Baseband Offsets > Frequency Offset" and apply an offset to the generated baseband signal.

#### To verify characteristics of the generated signal

- Use the built-in real-time graphical display.  
See [Chapter 3.3.5, "Verifying the generated signal with the graphics display"](#), on page 56.

#### To observe the effect of applied frequency offset and gain

- Use the built-in real-time graphical display.  
See [Chapter 3.3.5, "Verifying the generated signal with the graphics display"](#), on page 56.



## 5 Adding noise and predistortions, and impairing the signal

The test case scenarios in accordance with the specifications often require a not "clean" signal but rather a signal that is impaired or interfered. To fulfill such requirements, the R&S SMBV100B is equipped with a noise generator and provides the possibility to impair and predistort the digital I/Q signal.

This section describes the following functions:

- [Adding noise to the signal](#).....267
- [Impairing the signal](#).....281
- [Applying digital predistortion](#).....288

### 5.1 Adding noise to the signal

This section introduces the concept of the AWGN generator (Additive White Gaussian Noise). The section also describes the settings for generation of noise, sine wave interferer, and adding noise to the generated signal.

#### 5.1.1 Required options

The equipment layout for generating an AWGN signal includes:

- Base unit
- Option Noise Generator (R&S SMBVB-K62)

#### 5.1.2 About the AWGN generator

Provided the required options are installed, the R&S SMBV100B allows you to superimpose noise on the generated signal. The built-in internal noise generator generates an AWGN signal (Additive White Gaussian Noise) with selectable bandwidth and adds it to the digital baseband signal. The main characteristic of this kind of noise signal is the Gaussian distribution of the noise power density and uniform frequency distribution.

##### Generation of the AWGN signal

The Gaussian noise is generated with a feedback shift register with subsequent probability transformation. The switching configuration is such that ideal statistical characteristics are achieved:

- I and Q paths are decorrelated from each other.
- Small probabilities are ensured via the crest factor of ~15 dB
- The period of the noise signal is relatively long and depends on the selected system bandwidth.



- Scalable lowpass filters are used to produce a noise level with both a broad dynamic range and a broad bandwidth range.

### AWGN modes

The AWGN generator generates signal in one of the following different modes:

- **"Additive Noise"**: the generated noise signal superimposes the interference-free useful signal



- **"Noise Only"**: a pure noise signal is generated and modulated to the carrier; the connection to the baseband is interrupted.


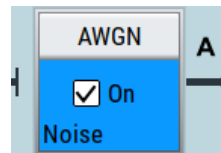


Figure 5-1: Representation of an AWGN > Mode > Noise Only in the block diagram

- **"CW Interferer"**: a sinusoidal signal with an adjustable frequency offset and carrier-to-interferer (C/I) power ratio is added to the baseband signal.

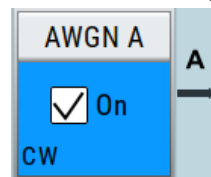

### Signal and noise parameters

The Figure 5-2 illustrates the relation between the signal and noise parameters.

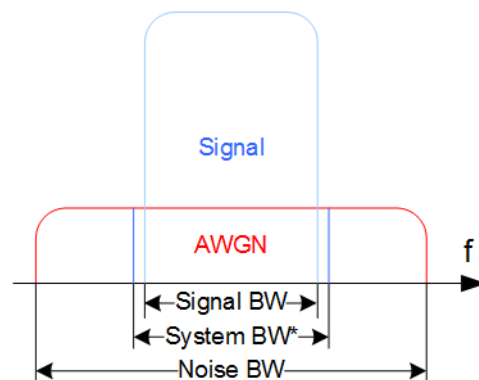


Figure 5-2: Graphical representation of the relation between system bandwidth and noise bandwidth (Minimum Noise/System BW = 2)

System BW\* = Occupied BW



The **system bandwidth** is a measure for the transmitted RF bandwidth. The selected value is usually the occupied bandwidth and is therefore a value greater than the pure signal bandwidth.

In the most test cases, the signal and the noise power are not defined directly but with the target signal-to-noise ratio (SNR) or **carrier/noise ratio**.

The **carrier power** is a measure for the *signal without the noise distribution*. This indication corresponds to the "Level" value in the "Status bar" (see [Figure 5-3](#)).


To ensure flat noise within the selected system bandwidth, the **noise bandwidth** has to be larger than the system bandwidth. The minimum noise bandwidth is sometimes part of the specifications and is calculated as follows:

"Noise Bandwidth" = "System Bandwidth" x "Minimum Noise/System Bandwidth Ratio"

Logically, the calculated noise bandwidth does not exceed the total available bandwidth of the instrument, as specified in the data sheet.

By default, the **noise power** within the system bandwidth is not defined directly but calculated depending on the selected system bandwidth and the desired SNR. The noise power over the noise bandwidth is calculated respectively.

The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth, which means that the total measurable noise power usually exceeds the displayed value "Noise Power".

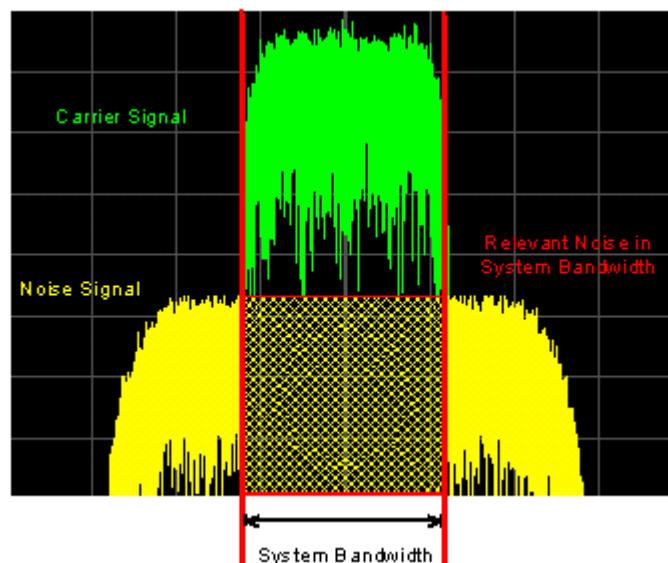

For a correct measurement of the noise power within the system bandwidth, we recommend that you measure the channel power with a signal analyzer.

In the "Additive Noise" mode, the output signal is the *signal with the noise distribution*. Hence, the power level at the RF output corresponds to the **carrier+noise power** (see [Figure 5-3](#)).



The noise power of digitally modulated signal is characterized by the parameter  $E_b/N_0$  indicating the ratio of bit energy to noise power density. The correlation to the SNR is as follows:

$C/N$  or  $S/N = (E_b/N_0) * (f_{\text{bit}}/B_{\text{sys}})$ , where  $B_{\text{sys}}$  is the system bandwidth.

Bit Rate  $f_{\text{bit}} = \text{"Symbol Rate"} * \text{Modulation Value}$



#### Where the bit rate value is retrieved from?

The parameter "AWGN > Noise Power / Output Results > Bit Rate" indicates the value used by the  $C/N$  or  $E_b/N_0$  calculation. The value is retrieved automatically depending on the configured baseband signal:

- For signals generated by the "Custom Digital Mod", the bit rate is determined by the selected standard (see parameter "Custom Dig Mod > General" > "Symbol Rate" and "Custom Dig Mod > Modulation Type").
- For signals generated in accordance to a digital standard, the bit rate is often a standalone parameter. Some test cases however, for example the 3GPP base station tests (TS 25.141), specify the E/N settings that apply to channel-coded data or block segments. Set the parameter "Bit Rate" to the required value, e.g. the bit rate before or after channel coding.

#### Understanding the displayed information

The following example explains the impact of the AWGN settings on the signal and noise parameters.

See [Figure 5-3](#) for an example of an AWGN generation with the following configuration:

- "Baseband"
  - "Custom Digital Modulation > Set acc. to standard > WCDMA-3GPP"
  - "State > On".
  - "Symbol Rate = 3.840 Msym/s"
- "AWGN"
  - "General > Mode > Additive Noise"
  - "General > Min Noise/System Bandwidth Ratio = 3"
  - "General > State > On"
  - "Noise Power / Output Results > Show Results for Output > RF"
  - "Noise Power / Output Results > Reference Mode > Carrier"
  - "Noise Power / Output Results > Carrier/Noise Ratio = 10 dB"
- "RF > On"



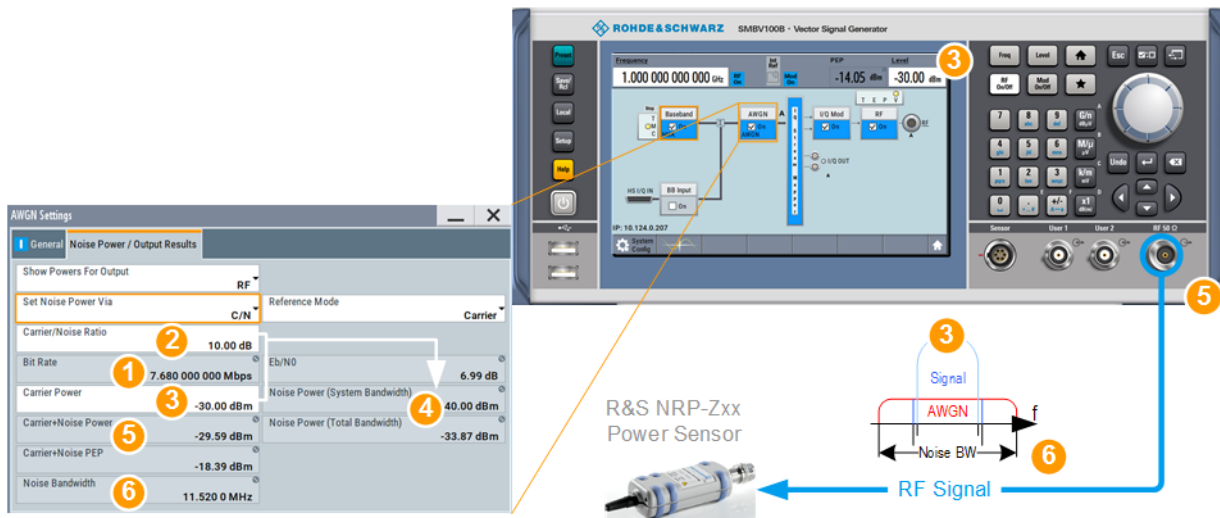


Figure 5-3: AWGN: Understanding the displayed information

- 1 = Bit Rate derived from the selected "Symbol Rate = 3.840 Msym/s"
- 2 = Selected Carrier/Noise Ratio
- 3 = Noise Power calculated from the "Carrier Power" and the "Carrier/Noise Ratio" = -30 dBm - 10 dB = -40 dBm
- 4, 7, 10 = Carrier Power = Status bar > Level = -30 dBm
- 5, 8 = Carrier+Noise Power = power at the RF output; i.e. the power a connected power meter would measure
- 6, 9 = Noise Bandwidth = System Bandwidth\*Minimum Noise/System Bandwidth Ratio = 3.840 MHz\*3 = 11.520 MHz




Use the built-in graphical signal monitoring function of the instrument to display the signal characteristics in real-time, see ["To observe the effect of enabled additive noise \(AWGN\)"](#) on page 454.

### Application fields

Typically, the noise generator is required for the following tests:

- In receiver sensibility tests with predefined SNR of the receiver, see ["To configure the AWGN for receiver sensibility tests"](#) on page 279
- In bit-error or block-error measurements, depending on the set signal-to-noise ratio (SNR)
- Whenever a pure noise signal is required

### 5.1.3 AWGN block

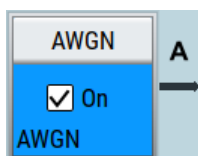


The "AWGN" block provides access to the settings for the **AWGN generator**, see [Chapter 5.1.4, "AWGN settings"](#), on page 272. The label in the AWGN block indicates the AWGN mode that is activated. The quickest way to activate or deactivate the AWGN generator is the "On/Off" switch in the AWGN block.




### 5.1.4 AWGN settings

Access:

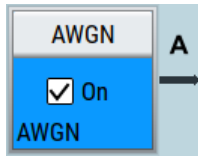

1. Select "Block Diagram > AWGN".

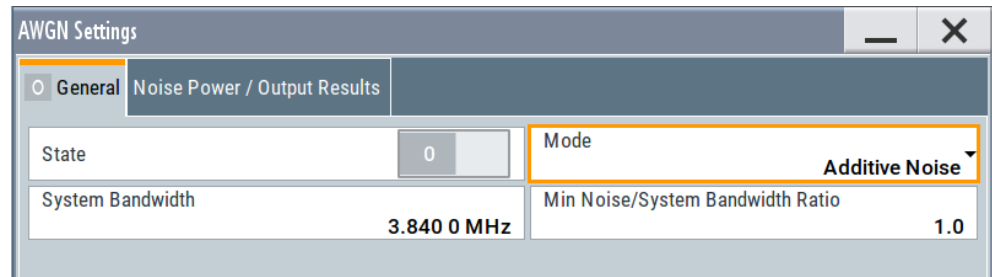

The dialog contains the settings for noise level configuration and CW interfering parameters.

2. To activate the AWGN generator, select "Block Diagram > AWGN > On".

The remote commands required to define these settings are described in [Chapter 13.17.4.5, "SOURce:AWGN subsystem"](#), on page 916.

**Settings:**

#### 5.1.4.1 General settings

Access:

- Select "Block Diagram > AWGN".

**Settings:**

<a href="#">State</a> .....	272
<a href="#">Mode</a> .....	273
<a href="#">System Bandwidth</a> .....	273
<a href="#">Minimum Noise/System Bandwidth Ratio</a> .....	273
<a href="#">Center Frequency Offset</a> .....	273
<a href="#">Target CW Frequency Offset</a> .....	274

#### State

Activates/deactivates the generation of an AWGN signal. The interferer (AWGN or CW interferer, depending on the selected mode) is generated after the generator is activated.

Remote command:

[ :SOURce<hw> ] :AWGN:STATe on page 918



**Mode**

Activates/deactivates the generation of an AWGN signal. The interferer (AWGN or CW interferer, depending on the selected mode) is generated after the generator is activated.

**"Additive Noise"**

The AWGN noise signal with selectable system bandwidth is added to the baseband signal.

**"Noise Only"**

The pure AWGN noise signal with selectable system bandwidth is modulated to the carrier. The connection to the baseband is interrupted.

**"CW Interferer"**

A sine with a defined frequency offset is added to the baseband signal.

This mode is disabled in "System Configuration" with more than 4 input streams.

Remote command:

`[ :SOURce<hw> ] :AWGN:MODE` on page 918

**System Bandwidth**

For "Additive Noise" and "Noise Only" modes, sets the RF bandwidth to which the set carrier/noise ratio relates.

Within this frequency range, the signal is superimposed with a noise signal which level corresponds exactly to the set C/N or S/N ratio.

For more information, refer to the description of [Figure 5-2](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:BWIDth` on page 919

**Minimum Noise/System Bandwidth Ratio**

For "Additive Noise" and "Noise Only" modes, sets the ratio of minimum noise bandwidth to system bandwidth, as required by some standards.

"Noise Bandwidth" = "System BW" x "Minimum Noise/System BW Ratio"

The parameter [Noise Bandwidth](#) displays the resulting noise bandwidth. Because the noise power density is a constant value, increasing the noise/system bandwidth ratio increases the noise bandwidth.

The calculation of level from the selected C/N or S/N ratio in relation to system bandwidth is not influenced.

Remote command:

`[ :SOURce<hw> ] :AWGN:BWIDth:RATio` on page 919

**Center Frequency Offset**

Requires "Mode > Additive Noise/Noise Only".

Defines the frequency offset of the noise signal relative to the carrier center frequency. Use the setting to shift noise signals relative to the output RF signal.

Remote command:

`[ :SOURce<hw> ] :AWGN:FREQuency:CENTer:OFFSet` on page 923



**Target CW Frequency Offset**

In "CW Interferer" mode, sets the desired frequency of the sine wave.

Remote command:

[ :SOURce<hw> ] :AWGN:FREQuency:TARGet on page 923

**5.1.4.2 Noise power/output results settings**

Access:

- Select "AWGN > Noise Power/Output Results".

AWGN Settings	
<div> <div>General</div> <div>Noise Power / Output Results</div> </div>	
Show Powers For Output	RF
Set Noise Power Via	C/N
Reference Mode	Carrier
Bit Rate	7.680 000 000 Mbps
Carrier/Noise Ratio	10.00 dB
E <sub>b</sub> /N <sub>0</sub>	6.99 dB
Carrier Power	-30.00 dBm
Noise Power (System Bandwidth)	-40.00 dBm
Noise Power (Total Bandwidth)	-40.00 dBm
Carrier+Noise PEP	-23.98 dBm
Carrier+Noise Power	-30.00 dBm
Noise Bandwidth	0.0 kHz

The available settings depend on the selected [Mode](#).

**Settings:**

Show Powers For Output.....	275
Set Noise Power Via.....	275
Reference Mode.....	275
Bit Rate.....	275
Carrier/Noise Ratio, Signal/Noise Ratio.....	275
E <sub>b</sub> /N <sub>0</sub> .....	276
Carrier Power, Signal Power.....	276
Noise Power (System Bandwidth), Interferer Power.....	277
Noise Power (Total Bandwidth).....	278
Carrier + Noise Power, Signal + Noise Power (System Bandwidth), Carrier + Interferer Power, Signal + Interferer Power.....	278
Carrier + Noise PEP, Signal + Noise PEP (Total Bandwidth), Carrier + Interferer PEP, Signal + Interferer PEP.....	278
Noise Bandwidth.....	278
Resulting CW Frequency Offset.....	278



**Show Powers For Output**

Sets the output to which the displayed settings are related to.

This setting also influences:

- The way the interfering parameters are displayed, e.g. if the SNR value is defined as C/N or as S/N.
- The value units:
  - The values related to the RF outputs are displayed in dBm
  - The values related to the baseband outputs - in dB

Remote command:

[ :SOURce<hw> ] :AWGN:DISP:MODE on page 920

**Set Noise Power Via**

In "Additive Noise" mode, selects the way the noise power is determined.

The following correlation applies:

"C/N or S/N" =  $(E_b/N_0) * (f_{bit}/B_{sys})$ , where:

- "C/N or S/N" is the carrier/noise ratio
- " $E_b/N_0$ " is the ratio of bit energy to noise power density
- "Bit Rate"  $f_{bit}$  = "Symbol Rate" x Modulation Value
- $B_{sys}$  is the system bandwidth.

See also [Chapter 5.1.2, "About the AWGN generator"](#), on page 267.

Remote command:

[ :SOURce<hw> ] :AWGN:POWer:MODE on page 920

**Reference Mode**

Selects whether the carrier or the noise power is kept constant if the C/N or  $E_b/N_0$  ratio is changed.

In the common case, the instrument keeps the carrier power and adjusts the noise power accordingly. Some test cases however, for example the 3GPP base station tests (TS 25.141), specify explicitly the noise power. These test cases require that the noise power is permanently set as a function of the base station power class, whereas the carrier power is variable.

Remote command:

[ :SOURce<hw> ] :AWGN:POWer:RMODE on page 920

**Bit Rate**

In "Additive Noise" mode, indicates the bit rate used for converting C/N or S/N to  $E_b/N_0$ .

**Tip:** For digitally modulated signals, select the bit rate before or after channel coding, as required.

See also [Chapter 5.1.2, "About the AWGN generator"](#), on page 267.

Remote command:

[ :SOURce<hw> ] :AWGN:BRATe on page 920

**Carrier/Noise Ratio, Signal/Noise Ratio**

In "Additive Noise" and "CW Interferer" mode, sets the carrier/noise, signal/noise or signal/interferer ratio.



Whether a configuration of C/N or S/N is enabled, depend on the selected output [Show Powers For Output](#).

- In "Reference Mode > Carrier": sets the noise power. It does not affect the power of the useful signal, i.e. the carrier power remains constant.  
Thus the power of the carrier + noise signal or the *power of the output signal* changes.
- In "Reference Mode > Noise", sets the *power of the useful signal*, i.e. the carrier power.  
The power of the output signal remains constant.
- The power of the noise signal is derived from the entered C/N or S/N value and displayed with the parameter "Noise Power" in the units of the useful signal.
- The power of the useful signal is displayed with the parameter "Carrier Power" and can also be changed there. This indication corresponds to the "Level" value in the "Status bar".
- The power of the output signal is displayed as "Carrier + Noise Power".

See also [Figure 5-3](#).

Remote command:

[\[:SOURce<hw>\]:AWGN:CNRatio](#) on page 921

### $E_b/N_0$

In "Additive Noise" mode, sets the ratio of bit energy to noise power density.

- In "Reference Mode > Carrier": sets the *noise power* and hence the power of the output signal, i.e. the carrier + noise signal.  
It does not affect the power of the useful signal, i.e. the carrier power is kept constant.
- In "Reference Mode > Noise": sets the *power of the useful signal*, i.e. the carrier power.  
The noise power is kept constant.
- The power of the noise signal is derived from the selected  $E_b/N_0$  and displayed with the parameter "Noise Power" in the units of the useful signal.
- The power of the useful signal is displayed with the parameter "Carrier Power".  
This indication corresponds to the "Level" value in the "Status bar".
- The power of the output signal is displayed as "Carrier + Noise Power".

See also [Figure 5-3](#).

Remote command:

[\[:SOURce<hw>\]:AWGN:ENRatio](#) on page 921

### Carrier Power, Signal Power

("Additive Noise" and "CW Interferer")

The name of this parameter depends on the selected output [Show Powers For Output](#).

- In "Reference Mode > Carrier": sets the carrier power. This indication corresponds to the "Level" value in the "Status bar".  
The power of the noise signal is derived from the selected C/N or S/N value and displayed with the parameter "Noise Power" in the units of the useful signal.
- In "Reference Mode > Noise", indicates the carrier power as derived from the entered C/N or S/N value. This indication corresponds to the "Level" value in the "Status bar".  
The noise power can be set with the parameter "Noise Power".



**Note:** The peak envelope power (PEP) displayed in the "Status bar" corresponds to the PEP value of the carrier. The parameter "Carrier+Noise (PEP)" indicates the PEP value of the overall signal.

See also [Figure 5-3](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:POWer:CARRier` on page 921

### Noise Power (System Bandwidth), Interferer Power

Displays the power of the noise signal in the system respectively the total bandwidth in "Noise Only" and "Additive Noise" mode.

- "Noise Only" mode
 

Sets the power of the noise signal. This indication corresponds to the "Level" value in the "Status bar".
- "Additive Noise" mode
  - "Reference Mode > Noise"
 


Sets the power of the noise signal. The power of the carrier is derived from the entered C/N or S/N or Eb/N0 value.
  - "Reference Mode > Carrier"
 

Displays the power of the noise signal in the system bandwidth. The power of the noise signal is derived from the entered C/N or S/N or Eb/N0 value. The carrier power is selected with "Carrier Power"; respectively the signal power is displayed by "Signal Power".
- "CW Interferer" mode
  - "Reference Mode > Noise"
 

Sets the power of the interfering signal. The power of the carrier is derived from the entered C/I value.
  - "Reference Mode > Carrier"
 

Displays the power of the interfering signal. The power of the interfering signal is derived from the entered C/N or S/N value. The carrier power is entered under "Carrier Power".

**Note:** The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth. The occurrence means that the total measurable noise power usually exceeds the value displayed here. For correct measurement of the noise power within the system bandwidth, we recommend that you measure the channel power with a signal analyzer.

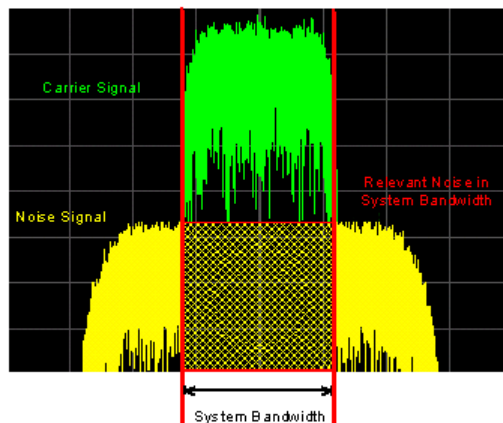



See also [Figure 5-3](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:POWer:NOISe` on page 921

#### Noise Power (Total Bandwidth)

Displays the power of the noise signal in the total bandwidth in "Noise Only" and "Additive Noise" mode.

See also [Figure 5-3](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:POWer:NOISe:TOTal?` on page 922

#### Carrier + Noise Power, Signal + Noise Power (System Bandwidth), Carrier + Interferer Power, Signal + Interferer Power

In "Additive Noise" and "CW Interferer" mode, displays the overall power of the noise/interferer signal plus useful signal.

The output selected with the parameter [Show Powers For Output](#) determines:

- The name of this parameter
- The units the overall power is measured in, dBm or dB (full-scale)

See also [Figure 5-3](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:POWer:SUM?` on page 922

#### Carrier + Noise PEP, Signal + Noise PEP (Total Bandwidth), Carrier + Interferer PEP, Signal + Interferer PEP

In "Additive Noise" and "CW Interferer" mode, displays the peak envelope power (PEP) of the overall signal comprised of noise signal plus useful signal.

The output selected with the parameter [Show Powers For Output](#) determines:

- The name of this parameter
- The units the overall power is measured in, dBm or dB (full-scale)

**Note:** The peak envelope power ("PEP") displayed in the "Status bar" corresponds to the PEP value of the carrier.

Remote command:

`[ :SOURce<hw> ] :AWGN:POWer:SUM:PEP?` on page 922

#### Noise Bandwidth

For "Additive Noise" and "Noise Only" modes and with activated AWGN generator, indicates the real noise bandwidth.

See also [Figure 5-2](#).

Remote command:

`[ :SOURce<hw> ] :AWGN:BWIDth:NOISe?` on page 919

#### Resulting CW Frequency Offset

In "CW Interferer" mode, indicates the resulting frequency offset of the sine wave.

Remote command:

`[ :SOURce<hw> ] :AWGN:FREQuency:RESult?` on page 923



### 5.1.5 How to configure the noise generator for receiver tests

This section shows you how to configure the noise generator for receiver tests, for example the tests specified in the 3GPP test specification TS 36.141, chapter 7.

For the following example, we assume that the R&S SMBV100B generates an uplink EUTRA/LTE signal with following characteristics:

- "EUTRA/LTE > Duplexing = FDD", "Link Direction = Uplink"
- "EUTRA/LTE > General Uplink Setting > Channel Bandwidth = 5 MHz" and "Occupied Bandwidth = 4.5 MHz"
- "EUTRA/LTE > Frame Configuration > UE1 > FRC > FRC State = On" and "FRC = TS 36.141: A2-3"
- "EUTRA/LTE > State = On"
- "Status bar > Frequency = 1.95 GHz" and "Level = -69.9 dBm"
- "RF State > On"

#### To configure the AWGN for receiver sensibility tests

We assume that an AWGN interfering signal with the following characteristics is required:

The mean power of the interfering signal is -82.5 dBm/BW and C/N = 12.6 dB.

1. Select "AWGN".
2. Set AWGN general settings:
  - "Mode > Additive Noise"
  - "System Bandwidth = 4.5 MHz"  
The definition of the interfering signal mean power is dBm/BW, where BW is the system bandwidth. The system bandwidth of the LTE signal is the occupied bandwidth.  
See also [Figure 5-2](#).
  - "Min Noise/System Bandwidth Ratio = 1.5"
3. Select "Noise Power/Output Results".
4. Set AWGN noise power settings:
  - "Set Noise Power Via = C/N"
  - "Reference Mode = Carrier"
  - "Carrier/Noise Ratio = 12.6 dB"



AWGN Settings	
<div> <div>General</div> <div>Noise Power / Output Results</div> </div>	
Show Powers For Output	RF
Set Noise Power Via	C/N
Carrier/Noise Ratio	12.60 dB
Reference Mode	Carrier
Bit Rate	100.000 000 kbps
Eb/N0	29.13 dB
Carrier Power	-69.90 dBm
Noise Power (System Bandwidth)	-82.50 dBm
Carrier+Noise Power	-69.90 dBm
Noise Power (Total Bandwidth)	-82.50 dBm
Carrier+Noise PEP	-63.88 dBm
Noise Bandwidth	0.0 kHz

The dialog confirms the required mean power of the interfering signal "Noise Power (System Bandwidth) = -82.5 dBm".

5. Select "AWGN > General > State > On".

#### To generate a CW interfering signal

For the following example, we assume that two interfering signals are required, a 5 MHz uplink LTE signal and a CW signal. The signals are transmitted at -52 dBm; the LTE signal at 1.96 GHz and the CW signal 10 MHz below it. Signals with equal (or similar) RF levels and at frequencies spaced within the max. RF bandwidth can be generated by the same path.

To configure the instrument:

1. Enable the required LTE signal:
  - a) Select "EUTRA/LTE > General Uplink Setting > Channel Bandwidth = 5 MHz" and "EUTRA/LTE > State = On"
  - b) Select "Status bar > Frequency = 1.96 GHz" and "Level = -52 dBm"
2. Enable the required interfering signal:
  - a) Select "AWGN > General > Mode > CW Interferer"
  - b) Select "Target CW Frequency Offset = 10 MHz"
  - c) Select "Noise Power/Output Results > Reference Mode = Noise"
  - d) Select "Interferer Power = -52 dB"
  - e) Select "AWGN > General > State > On".
3. Select "RF > State > On"



## 5.2 Impairing the signal

In the R&S SMBV100B, *analog and digital linear impairments* such as I/Q imbalance and quadrature error can be added to the generated signal.

The instrument can also simulate the effect of non-linear memoryless effects like AM/AM and AM/PM conversion.

See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

### 5.2.1 Required options

The base unit is sufficient for impairing I/Q signals. Impairing these signals does not require additional options.

### 5.2.2 About the linear I/Q impairments

I/Q signal impairments are well-defined arithmetic modifications of the data. Every data sample is modified in the same way.

Adding linear impairments to the data stream is provided for the following purpose:

- To simulate frequent sources of distortions in a real signal-processing chain as, it is required for tests with dirty transmitter conditions (receiver tests)
- To compensate the faults of the I/Q demodulator in the receiver

See [Chapter 5.2.4, "How to optimize the carrier leakage and sidebands suppression"](#), on page 287.

The R&S SMBV100B offers functions to impair an internal or external I/Q signal linearly:

- Impair I/Q samples for each I/Q stream.
- Add analog I/Q impairments to an analog I/Q input signal, before it is passed to in the I/Q modulator.  
See ["Defining the input signal of the I/Q modulator"](#) on page 289.
- Impair analog and digital I/Q signals twice.  
If you apply both impairments, they superimpose each other at the impaired signal.

Also, you can correct impairments at the I/Q modulator automatically, see ["Adjust I/Q Modulator Current Frequency"](#) on page 294.

See also [Chapter 16.3.4.3, "How to use the internal adjustments"](#), on page 1100.

- [Gain and gain imbalance](#)..... 282
- [I and Q offset](#).....282
- [Quadrature offset](#)..... 283



### 5.2.2.1 Gain and gain imbalance

An I/Q gain is a multiplication of all I/Q amplitudes by a common factor. The effect is equivalent to two identical I and Q gain factors. The effect of an increased gain factor in the I/Q constellation diagram is shown on [Figure 5-4](#).

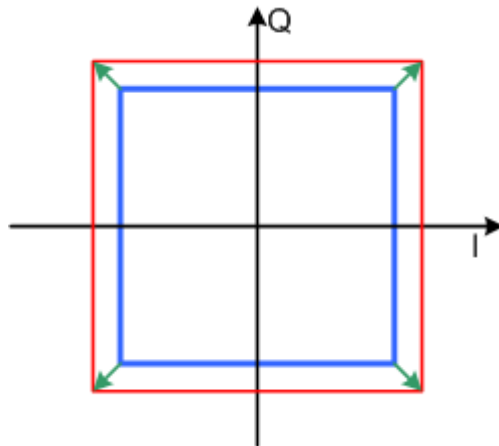


Figure 5-4: Effect of an increased amplitude in the I/Q constellation diagram

An I gain multiplies the I amplitudes by a factor, leaving the Q amplitudes unchanged. A Q gain has the opposite effect. Different I and Q gain factors result in an I/Q imbalance, which is due to different gains of the amplifiers in the I and Q channels of the I/Q modulator. The effect of a positive and negative gain imbalance is shown on [Figure 5-5](#).

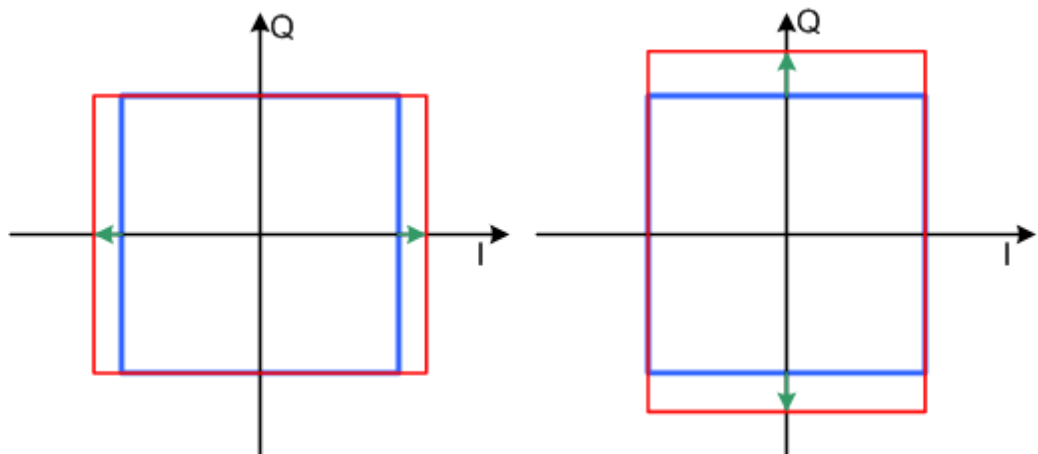


Figure 5-5: Negative gain imbalance (left) and positive gain imbalance (right) in the I/Q constellation diagram

### 5.2.2.2 I and Q offset

An I offset adds a constant value to all I amplitudes, leaving the Q amplitudes unchanged. A Q offset has the opposite effect. A combination of I and Q values results in an I/Q offset, which is due to carrier feedthrough in the I/Q modulator. Possible rea-



sons are interfering signals at the RF carrier frequency, e.g. an unsuppressed RF carrier subchannel. The effect of a positive I and Q offset in the I/Q constellation diagram is shown on [Figure 5-6](#).

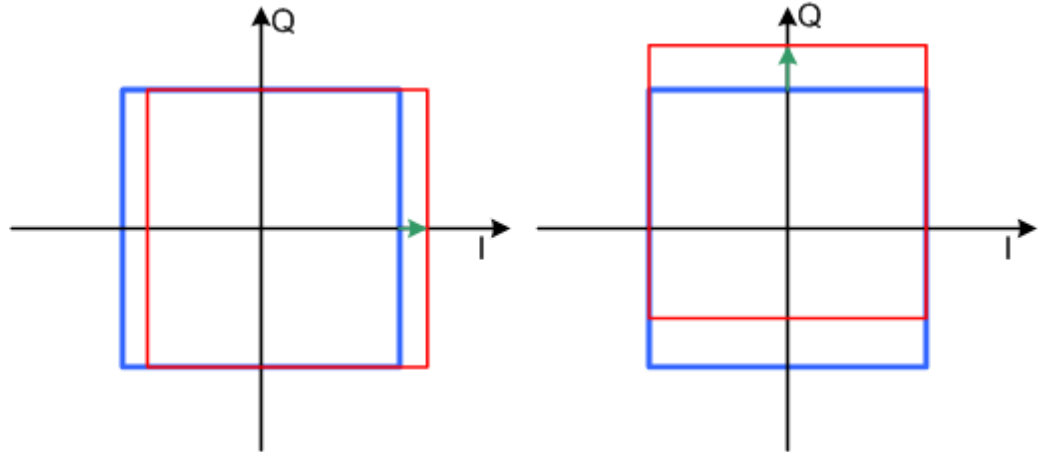


Figure 5-6: I offset (left) and Q offset (right) in the I/Q constellation diagram

#### 5.2.2.3 Quadrature offset

Changes the phase angle between the I and the Q vectors from the ideal 90 degrees, while the amplitudes are maintained. A positive quadrature offset results in a phase angle greater than 90 degrees. The effect of a positive quadrature offset in the I/Q constellation diagram is shown on [Figure 5-7](#).

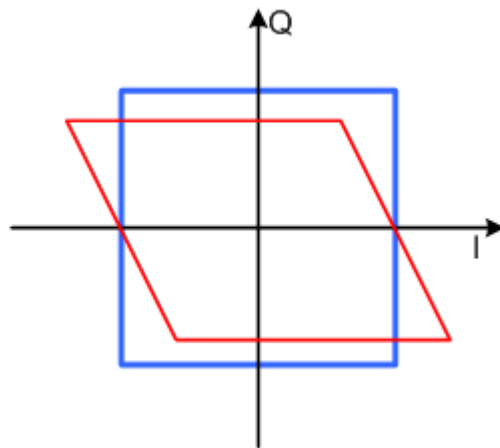


Figure 5-7: Positive quadrature offset in the I/Q constellation diagram

### 5.2.3 Analog and digital impairments settings

You can add digital impairments to each internal generated I/Q stream and analog impairments to internal generated or external supplied analog I/Q signals.

See also [Chapter 5.2.2, "About the linear I/Q impairments"](#), on page 281.



### Accessing analog impairments settings

- Select "I/Q Mod" > "I/Q Analog Impairments".

The screenshot shows the 'I/Q Modulator' dialog box with the 'Analog Impairments' tab selected. The 'State' dropdown is set to '0'. The settings are as follows:

Parameter	Value
I Offset	0.00 %
Q Offset	0.00 %
Gain Imbalance	0.000 dB
Quadrature Offset	0.00 deg

The dialog provides settings to configure I/Q analog impairments, like carrier leakage, imbalance and quadrature offset.

### Accessing digital impairments settings

1. Select "I/Q Mod" > "I/Q Digital Impairments" for digital impairing I/Q signals at the I/Q modulator to the RF output.
2. For analog I/Q outputs, select "I/Q Analog" > "I/Q Digital Impairments".

The screenshot shows the 'I/Q Modulator' dialog box with the 'Digital Impairments' tab selected. The 'State' dropdown is set to '0'. The settings are as follows:

Parameter	Value
I Offset	0.00 %
Q Offset	0.00 %
Gain Imbalance	0.000 dB
Quadrature Offset	0.00 deg
Skew	0 ps
IQ Delay	0 ps
Phase Offset	0.00 deg

The dialog provides settings to configure I/Q digital impairments, like carrier leakage, imbalance, quadrature offset and I/Q delays.

The remote commands required to define these settings are described in:

- [Chapter 13.17.4.6, "SOURce:BB:IMPAirment subsystem"](#), on page 923.
- [Chapter 13.17.8, "SOURce:IQ subsystem"](#), on page 952.

The instrument can also simulate the effect of non-linear effects like AM/AM and AM/PM conversion.

See the R&S SMBV100B Envelope Tracking and AM/AM, AM/PM Predistortion user manual.



**Settings:**

State.....	285
I Offset/Q Offset.....	285
Gain Imbalance.....	285
Quadrature Offset.....	286
Skew.....	286
IQ Delay.....	286
Phase Offset.....	287

**State**

Activates the impairment of the I/Q signal.

If activated, the R&S SMBV100B applies the settings for I/Q offset, gain imbalance and quadrature offset.

Remote command:

For analog impairments: `[ :SOURce<hw> ] :IQ:IMPairment [ :STATe ]` on page 927

For digital impairments:

`[ :SOURce ] :BB:IMPairment:DIGital:STATe` on page 927

`[ :SOURce ] :BB:IMPairment:IQOutput<ch>:STATe` on page 927

`[ :SOURce ] :BB:IMPairment:RF<ch>:STATe` on page 927

**I Offset/Q Offset**

Sets a carrier offset (in percent) of the amplitudes (scaled to the peak envelope power (PEP)) for the I and/or Q signal component. An ideal I/Q modulator suppresses the carrier offset completely (offset = 0 percent).

For more information, see:

- [Chapter 5.2.2.2, "I and Q offset"](#), on page 282
- ["To optimize the carrier leakage suppression"](#) on page 287

Remote command:

For analog impairments:

`[ :SOURce<hw> ] :IQ:IMPairment:LEAKage:I` on page 926

`[ :SOURce<hw> ] :IQ:IMPairment:LEAKage:Q` on page 926

For digital impairments:

`[ :SOURce ] :BB:IMPairment:DIGital:LEAKage:I` on page 926

`[ :SOURce ] :BB:IMPairment:DIGital:LEAKage:Q` on page 926

`[ :SOURce ] :BB:IMPairment:IQOutput<ch>:LEAKage:I` on page 926

`[ :SOURce ] :BB:IMPairment:IQOutput<ch>:LEAKage:Q` on page 926

`[ :SOURce ] :BB:IMPairment:RF<ch>:LEAKage:I` on page 926

`[ :SOURce ] :BB:IMPairment:RF<ch>:LEAKage:Q` on page 926

**Gain Imbalance**

Sets the imbalance of the I and Q vector.

The entry is made in dB (default) or %, where 1 dB offset is roughly 12% according to the following:

$$\text{Imbalance [dB]} = 20 \log ( | \text{GainQ} | / | \text{GainI} | )$$

Positive values mean that the Q vector is amplified more than the I vector by the corresponding percentage. Negative values have the opposite effect.



For more information, see:

- [Chapter 5.2.2.1, "Gain and gain imbalance"](#), on page 282
- ["To optimize sideband suppression"](#) on page 287

Remote command:

For analog impairments: `[ :SOURce<hw> ] :IQ:IMPAirment:IQRatio[:MAGNitude]` on page 925

For digital impairments:

`[ :SOURce ] :BB:IMPAirment:IQOutput<ch>:IQRatio[:MAGNitude]`

on page 925

`[ :SOURce ] :BB:IMPAirment:RF<ch>:IQRatio[:MAGNitude]` on page 925

### Quadrature Offset

Sets the quadrature offset.

For more information, see:

- [Chapter 5.2.2.3, "Quadrature offset"](#), on page 283
- ["To optimize sideband suppression"](#) on page 287

Remote command:

For analog impairments: `[ :SOURce<hw> ] :IQ:IMPAirment:QUADrature[:ANGLE]` on page 926

For digital impairments:

`[ :SOURce ] :BB:IMPAirment:DIGital:QUADrature[:ANGLE]` on page 926

`[ :SOURce ] :BB:IMPAirment:IQOutput<ch>:QUADrature[:ANGLE]`

on page 926

`[ :SOURce ] :BB:IMPAirment:RF<ch>:QUADrature[:ANGLE]` on page 926

### Skew

Sets or displays the delay between the Q vector and the I vector of the corresponding stream.

Setting this delay is possible for I/Q samples in the I/Q modulator ("I/Q Mod" > "I/Q Digital Impairments") and at the I/Q analog output interfaces ("I/Q Analog" > "I/Q Digital Impairments" dialog).

Remote command:

`[ :SOURce ] :BB:IMPAirment:DIGital:SKEW` on page 927

`[ :SOURce ] :BB:IMPAirment:IQOutput<ch>:SKEW` on page 927

`[ :SOURce ] :BB:IMPAirment:RF<ch>:SKEW` on page 927

### IQ Delay

Sets or display time delay of both I and Q vectors relative to the selected trigger and marker. A positive value means that the I and Q vectors delay relative to the marker or trigger. A negative delay implies the other way around.

Setting this time delay is possible for I/Q samples in the I/Q modulator ("I/Q Mod" > "I/Q Digital Impairments") and at the I/Q analog output interfaces ("I/Q Analog" > "I/Q Digital Impairments").

See also [Chapter 9.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 457.



Remote command:

`[ :SOURce ] :BB:IMPairment:DIGital:DELay` on page 924

`[ :SOURce ] :BB:IMPairment:IQOutput<ch>:DELay` on page 924

`[ :SOURce ] :BB:IMPairment:RF<ch>:DELay` on page 924

### Phase Offset

Adds a phase offset after the stream mapper.

You can shift the phase at the different stages in the signal generation flow, see:

- "Baseband Offsets" > [Phase Offset](#).
- "I/Q Stream Mapper" > [Phase Offset](#).

Remote command:

`[ :SOURce ] :BB:IMPairment:DIGital:POFFset` on page 927

`[ :SOURce ] :BB:IMPairment:IQOutput<ch>:POFFset` on page 927

`[ :SOURce ] :BB:IMPairment:RF<ch>:POFFset` on page 927

## 5.2.4 How to optimize the carrier leakage and sidebands suppression

Applying linear I/Q impairments helps to improve signal quality in the following cases:

- To suppress a carrier leakage at the current RF frequency
- To improve the attenuation of the unwanted sidebands

In the following examples, we assume that:

- The R&S SMBV100B generates a baseband signal
- A spectrum analyzer is connected to the R&S SMBV100B, the analyzed is configured, and measures the required signal characteristics.

### To optimize sideband suppression

For a given baseband signal, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod" > "I/Q Digital Impairments".
2. Set the values of the parameters "Gain Imbalance" and "Quadrature Offset" to adjust the relative amplitude and phase relationship of the baseband signal.
3. Select "State" > "On".
4. On a connected signal analyzer, monitor the power spectrum.
5. Vary the values of the parameters "Gain Imbalance" and "Quadrature Offset" until the maximal sideband suppression is achieved.

### To optimize the carrier leakage suppression

For a given baseband signal, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod" > "I/Q Digital Impairments".
2. Set the parameters "I Offset" and "Q Offset".
3. Select "State" > "On".



4. On a connected signal analyzer, monitor the power spectrum.
5. Vary the I/Q offset until the maximal carrier leakage suppression is achieved.  
Adjusting the I and Q offsets is one of the possible ways to control carrier leakage.

See also [Chapter 4.12.3, "How to improve signal characteristics by shifting the base-band signal"](#), on page 265.

## 5.3 Applying digital predistortion

Digital predistortion (DPD) is one of the methods, used to improve the efficiency of RF power amplifiers. In the R&S SMBV100B, the generated digital signal can be deliberately AM/AM and AM/PM predistorted.

See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.



## 6 Applying I/Q vector modulation

The R&S SMBV100B offers I/Q modulation with an external analog I/Q signals, external digital signals, and the internally generated digital signal.

For a description on the signal impairment functionality and settings for applying non-linear effects, see:

- [Chapter 5.2, "Impairing the signal"](#), on page 281

See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

### 6.1 Required options

The equipment layout for I/Q modulation includes:

- Base unit
- One of the Frequency options (R&S SMBVB-B103/-KB106)  
Sufficient for I/Q modulation with internal and external analog signal  
Sufficient for I/Q modulation with internal signal.

### 6.2 About the I/Q modulator

The R&S SMBV100B offers I/Q modulation with the internally generated digital signal, the external digital signals (when separately processed), and an external analog I/Q signal. The maximum available RF bandwidth of externally applied wideband analog signal is higher than the bandwidths of the internal or external digital signal. For exact values, refer to the instrument specification (data sheet).

Analog I/Q input signals are directly applied to the analog I/Q modulation circuit, and are not routed through the baseband section of the R&S SMBV100B.

#### Defining the input signal of the I/Q modulator

The [Table 6-1](#) gives an overview of the possible input signals and the connectors they are supplied at. Any of the specified input signals is processed by the I/Q modulator and output at the RF output.

**Table 6-1: Physical input signals of the I/Q modulator**

Input signal	Input connector	GUI parameter
Internal digital baseband signal	-	"I/Q Mod. > I/Q Mod. In > Internal Baseband I/Q In" and "Baseband > On"
External analog wideband	I/Q	"I/Q Mod. > I/Q Settings > Analog Wideband I/Q Input"
External digital signal	Dig I/Q	"I/Q Mod. > I/Q Modulator Input > Internal Baseband" and "BB Input > On"






### Interdependencies

An I/Q modulation with an **external analog** signal cannot be used simultaneously with the following:


- AM, digital modulation, digital standards
- AWGN
- External digital baseband input signal, arbitrary waveform generation, and multi-carrier CW.

## 6.3 I/Q modulator settings

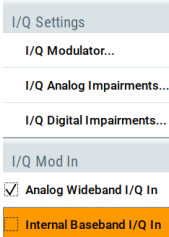

Access:

1. To configure the input signal source of the I/Q modulator, select "I/Q Mod > I/Q Mod In" and enable an internal baseband or an analog wideband input signal.
2. Select "I/Q Mod > I/Q Settings > I/Q Modulator".

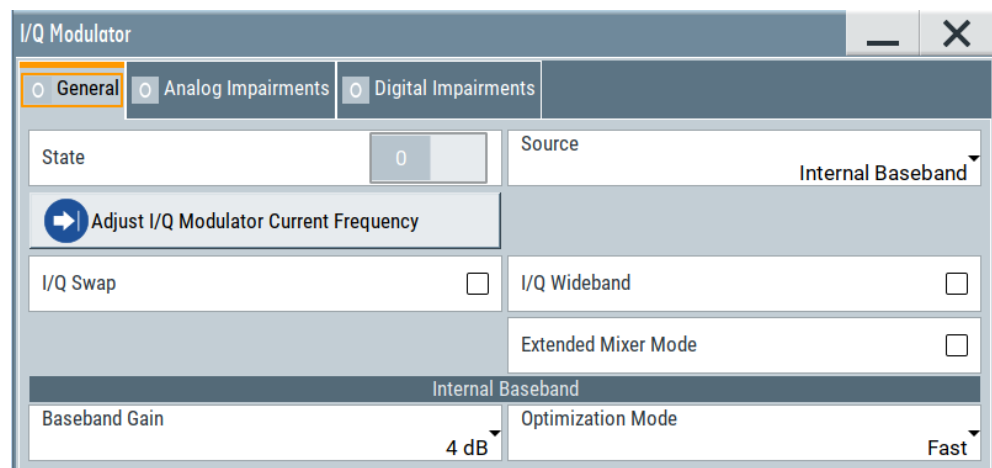

The dialog comprises the I/Q modulator settings, the optimized settings for wideband modulation and settings for enabling the analog and/or digital impairments. The dialog comprises the I/Q modulator settings and settings for enabling digital impairments.

The remote commands required to define these settings are described in [Chapter 13.17.8, "SOURCE:IQ subsystem"](#), on page 952.

For a description on the signal impairment functionality and settings for applying non-linear effects, see:

- [Chapter 5.2, "Impairing the signal"](#), on page 281

See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.





System error correction of the I/Q modulator permits precise and repeatable measurements.

If a temperature fluctuation of several degrees occurs, trigger the correction routine using the following:

- Select "I/Q Mod > I/Q Modulator > Adjust I/Q Modulator Current Frequency"

#### Settings:

State.....	291
Source.....	291
I/Q Swap.....	291
I/Q Wideband.....	292
Extended Mixer Mode.....	292
Crest Factor.....	293
Baseband Gain.....	293
Optimization Mode.....	293
Adjust I/Q Modulator Current Frequency.....	294

#### State

Activates/deactivates I/Q modulation.

#### Note: Interdependencies

You cannot use some functions simultaneously. **They deactivate each other.**

See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

Remote command:

[ :SOURce<hw> ] : IQ : STATe on page 952

#### Source

Selects the input signal for the I/Q modulator. Refer to [Table 6-1](#) for an overview of the possible input signals and the connectors they are supplied at.

"Internal Baseband"


Selects the internal baseband signal.

"Analog Wideband I/Q Input"

Selects an external analog signal.

Remote command:

[ :SOURce<hw> ] : IQ : SOURce on page 952

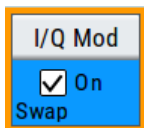


#### I/Q Swap

Selects normal or swapped I/Q control for the generated signal.

The I/Q modulator defined in the IS2000 standard differs from the definition in this implementation. The definition on which the implementation is based is used by virtually all digital communication standards, except IS95 and IS2000.

In the final step, the filtered IQ signal is modulated to the desired RF in a different way in the I/Q modulator:



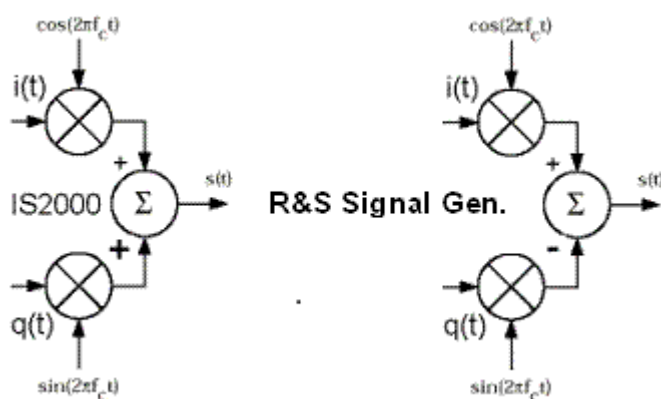

**Figure 6-1: Definition of I/Q modulator in IS2000 and the R&S SMBV100B**

IS2000 = The RF signal  $s(t)$  is derived from the baseband I/Q signal as  $s(t) = i(t)\cos(2\pi f_c t) + q(t)\sin(2\pi f_c t)$

R&S SMBVB = The RF signal  $s(t)$  is based on the definition  $s(t) = i(t)\cos(2\pi f_c t) - q(t)\sin(2\pi f_c t)$

See also:

- Description "CDMA2000® incl. EV-DV Digital Standard for R&S SMBV100B"
- Description "1xEV-DO Rev. A, Rev. B Digital Standard for R&S SMBV100B"

"Off" I/Q control is normal.

"On" The modulation sidebands are inverted by swapping the I and Q signals (the Q-part of the signal is inverted).  
The generated baseband signal is according to standards CDMA2000 and 1xEV-DO.  
An I/Q modulator defined according to these standards can cope with the RF signal generated by the R&S SMBV100B.

Remote command:

`[ :SOURce<hw> ] :IQ:SWAP [ :STATe ]` on page 954

### I/Q Wideband

Activates/deactivates optimization for wideband modulation signals (higher I/Q modulation bandwidth).

The modulation frequency response of the R&S SMBV100B in the useful bandwidth is improved at the expense of poorer harmonic suppression. This improvement is achieved by shifting the switching frequencies of the lowpass filters in the output section.

Remote command:

`[ :SOURce<hw> ] :IQ:WBStAt e` on page 954

### Extended Mixer Mode

The way the I/Q modulator works, depends on the selected RF value:

- If "Frequency > 80 MHz", a direct I/Q modulation is used.
- If "Frequency < 80 MHz", the I/Q modulation is a two-steps process.  
First, the signal is I/Q modulated on the higher frequency. In the second step, the resulting modulated signal is down-converted to the selected frequency. This down-conversion is the task of a mixer stage.



With enabled "Extended Mixer Mode", the upper frequency, until a direct I/Q modulation is used, is shifted to 200 MHz. Thus, the RF modulation bandwidth below 200 MHz is increased and the spectral artifacts reduced. The phase noise and the ACLR performance, however, can decrease.

Remote command:

`[ :SOURce<hw> ] :IQ:EMIXer:MODE` on page 953

### Crest Factor

If "Source = Analog Wideband I/Q Input", sets the crest factor of the *externally supplied analog signal*.

The crest factor gives the difference in level between the peak envelope power (PEP) and the average power value (RMS) in dB. The R&S SMBV100B uses this value for the calculation of the RF output power. For more information, refer to [Chapter 9.4.2.4, "Important signal parameters and interface's characteristics"](#), on page 467

#### Note:

To set the crest factor of an *externally supplied digital signal*, use the parameter:

- "BB Input > Input Level" > [Crest Factor](#).

Remote command:

`[ :SOURce<hw> ] :IQ:CREStfactor` on page 953

### Baseband Gain

Optimizes the modulation of the I/Q modulator for a subset of measurement requirement. Provided is a dynamic range of 16 dB divided into 2 dB steps. The optimization is a trade-off between signal distortion and signal-to-noise ratio (SNR).

See also [Chapter 6.4, "Optimizing I/Q modulation performance"](#), on page 294.

"-4 dB/- 2 dB (Low Distortion)"

Activates -4 dB or -2 dB gain.

Baseband signal is internally attenuated to minimize signal distortions; the intermodulation characteristics of signal are optimized, the SNR however decreases.

"0 dB"

No changes on the baseband signal; optimization is not applied.

"+2 dB/ +4 dB/ + 6 dB/ + 8 dB (Low Noise)"

Activates a 2 dB, 4 dB, 6 dB or 8 dB gain

Baseband signal is internally boosted to maximize the SNR; signal noise is minimized, the signal distortions however increase.

These values are suitable for 3GPP signals with high adjacent channel power ratio (ACPR).

Remote command:

For analog I/Q signal:

`[ :SOURce<hw> ] :IQ:GAIN` on page 953

For digital I/Q signal:

`[ :SOURce<hw> ] :BB:IQGain` on page 953

### Optimization Mode

Selects the optimization mode. For information on the I/Q modulation performance in any of the modes, see the data sheet.



The selected optimization mode applies for the I/Q modulation performance and for user-defined frequency response corrections.

How to: [Chapter 6.4, "Optimizing I/Q modulation performance"](#), on page 294

"Fast"	Fast optimization by compensating for I/Q skew. This mode is suitable in time sensitive environments and for narrow-band signals.
"High Quality"	With "Source > Internal Baseband", activates optimization by compensating for I/Q skew and frequency response correction. This mode generates flat signal over large bandwidth but requires longer setting time and leads to signal interruption.

**Note:**

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

Remote command:

`[ :SOURce<hw> ] :BB:IMPairment:OPTimization:MODE` on page 928

#### Adjust I/Q Modulator Current Frequency

Starts the adjustment for the I/Q modulator for the currently set frequency and base-band gain. The I/Q modulator is adjusted regarding carrier leakage, I/Q imbalance and quadrature.

See also ["To trigger the internal correction routine of the I/Q modulator"](#) on page 295.

Remote command:

`:CALibration<hw>:IQModulator:LOCal?` on page 720

## 6.4 Optimizing I/Q modulation performance

With its default settings, the I/Q Modulator provides vector modulated signal that is optimized for time sensitive measurements and lower noise.

Adjusting the settings helps to improve signal quality in the following cases:

- To optimize the intermodulation characteristics of the signal
- To optimize the signal-to-noise ratio (SNR) of the signal
- To improve the flatness of the RF signal

In the following examples, we assume that:

- The R&S SMBV100B generates a baseband signal
- A spectrum analyzer is connected to the R&S SMBV100B, the analyzed is configured, and measures the required signal characteristics.



**To improve signal flatness**

For a given baseband signal and RF frequency, perform the following:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".

The I/Q modulator is enabled. Modulated is the internal baseband signal.

This mode generates flat signal but requires longer settling time and leads to signal interruption.

2. Select "Optimization Mode > High Quality"

**Note:**

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

3. On a connected signal analyzer, monitor the signal characteristics.

**To optimize the intermodulation characteristics of signal**

For a given baseband signal and RF frequency, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".

The I/Q modulator is enabled. Modulated is the internal baseband signal.

2. If activated, disable the "I/Q Wideband > Off".

3. Select "Baseband Gain = - 2 dB".

4. On a connected signal analyzer, monitor the signal distortion characteristics.

5. Vary the value of the parameter "Baseband Gain" until the maximal suppression of the intermodulation products is achieved.

**To optimize the characteristics of signals with high adjacent channel power ratio (ACPR)**

For a given baseband signal (e.g. a 3GPP signal) and RF frequency, perform the following iterative steps:

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".

The I/Q modulator is enabled. Modulated is the internal baseband signal.

2. Select "Baseband Gain = 6 dB".

3. On a connected signal analyzer, monitor the signal characteristics.

4. Vary the value of the parameter "Baseband Gain" until the maximal signal-to-noise ratio (SNR) is achieved.

**To trigger the internal correction routine of the I/Q modulator**

System error correction of the I/Q modulator permits precise and repeatable measurements.



If a temperature fluctuation of several degrees occurs, trigger the correction routine using the following:

- Select "I/Q Mod > I/Q Modulator > Adjust I/Q Modulator Current Frequency"

**To generate a wideband modulation signal**

1. In the block diagram, select "I/Q Mod > I/Q Settings > I/Q Modulator > On".

The I/Q modulator is enabled. Modulated is the internal baseband signal.

2. Select "I/Q Wideband > On".

The R&S SMBV100B shifts the switching frequencies of the lowpass filters in the output section and generates signal with higher I/Q modulation bandwidth. The harmonic suppression, however, degrades.



## 7 Configuring the RF signal

The vector signal generator R&S SMBV100B generates RF signals with outstanding spectral purity within the frequency range from 8 kHz up to 6 GHz and with adjustable signal level over a wide range.

In addition to these real-time CW signals, you can generate RF signals from predefined lists and sweep signals that vary according to the frequency or amplitude curves.

You can also apply versatile analog modulation types with definable characteristics.

The variably adjustable output level due to the built-in attenuator, allows you to vary the RF signal level over the full level range. There are different methods to improve signal performance and to optimize the signal quality for the particular application, or to increase the accuracy and reliability of the generated RF signal.

The R&S SMBV100B supports R&S NRP power sensors, e.g. to monitor the output level of the generator and to determine the level correction values for user correction lists.

### Signal modes and characteristics

The R&S SMBV100B generates unmodulated or analog modulated RF signals. You can output the signal in fixed mode or as a signal having periodically varying frequencies or amplitudes.

**Signal modes** for RF signal generation:

- Unmodulated signal  
Generates an unmodulated continuous wave (CW) of constant frequency and amplitude.  
For information on the signal frequency and level settings and example on how to configure a simple CW signal, see:
  - [Chapter 7.5, "RF frequency settings"](#), on page 301
  - [Chapter 7.6, "RF level settings"](#), on page 303
  - [Chapter 3.3.1, "Generating an unmodulated carrier"](#), on page 47
- Analog modulated signal  
Modulates the signal with an analog signal and generates amplitude, phase, frequency and pulse modulation.

See [Chapter 7.11, "Analog modulations"](#), on page 359.

- Vector modulated signal  
Generates an I/Q vector modulated signal  
See [Chapter 6, "Applying I/Q vector modulation"](#), on page 289.

The R&S SMBV100B allows you to provide the RF signal with constant or varying frequencies and/or amplitudes at the output:

- Constant frequency and level (CW/Fixed mode)  
The RF output signal has the set frequency and level.
- Varying frequency and/or level
  - Sweep mode



An RF or LF frequency and RF level sweep signal, processed continuously, step-by-step or individually and with selectable trigger modes. You can only run one sweep at a time.

- List mode

The RF signal is based on a list of predefined frequency and level values pairs and step widths.

See [Chapter 7.10, "Varying the RF signal in list or sweep mode"](#), on page 321.


## 7.1 Required options

The equipment layout for generating the RF signal includes:

- Base unit
- Option frequency (R&S SMBVB-B103/-KB106)
- Optional, option extension to 240 MHz RF bandwidth (R&S SMBVB-K523)
- Optional, option extension to 500 MHz RF bandwidth (R&S SMBVB-K524) (requires R&S SMBVB-K523)
- Optional, option extension to 1 GHz RF bandwidth (R&S SMBVB-K525) (requires R&S SMBVB-K523 and R&S SMBVB-K524)

For more information, see data sheet.

## 7.2 How to access the RF settings

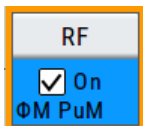

Access:

1. In the block diagram, select the block "RF > RF".
2. Select the required function from the list.

The RF block covers all functions and settings concerning the RF signal. The settings include the RF frequency and level settings, enhanced functions for improving the signal characteristics, analog modulations, list and sweep mode settings and connector assignments and measurement functions of the RF signal.

## 7.3 How to activate the RF signal output

By default, the RF output signal is disabled. When you activate the RF output, the instrument restores the previously set signal configuration

### To activate the RF output

1. Configure the RF signal as required.  
Set, for example, the frequency and level values.



2. Enable the RF output in one of the following ways:

- a) In the status bar, select the "RF On" icon and enable RF.
- b) In the block diagram, select the "On" checkbox of the RF block.
- c) In the RF level settings menu, select "Level > RF ON > On"
- d) At the front panel, press the [RF on/off] key.

The blue color of the "RF On" icon and the RF block indicate that the RF signal output is enabled.

RF State/RF ON.....	299
PEP.....	299
RF output impedance.....	299

#### RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF on/off] key.

Remote command:

`:OUTPut<hw>[:STATe]` on page 744

#### PEP

Displays the PEP (Peak Envelope Power) in the status bar. This value corresponds to the level specification of a digital modulation or of a digital standard signal at the RF output.

Remote command:

`[:SOURce<hw>]:POWer:PEP?` on page 1003

#### RF output impedance

You can query the impedance of the RF output.

Remote command:

`:OUTPut<hw>:IMPedance?` on page 745

## 7.4 How to set the frequency and level

The simplest form of the RF signal is a continuous wave (CW) of constant frequency and amplitude. The RF signal is defined by its frequency, level and phase.

#### To access the frequency, level and phase settings

► Use one of the following:

- "Status Bar > Frequency and Level"
- "Status bar > RF Off/On > RF Frequency > Frequency"
- "RF block > RF > RF Frequency > Frequency"
- "RF block > RF > RF Level > Level"
- "RF block > RF > RF Frequency > Phase"
- "Block diagram" > RF connector label "RF > RF Frequency > Frequency", etc.



- "Block diagram" > underlined label RF > "RF Frequency > Frequency > Frequency", etc.
- At the front panel, press the [Freq] or the [Level] key.

The frequency and level values are indicated on the "Status bar" so that you can see them at a glance. Values displayed in the status bar and in the "Frequency/Level" dialogs can deviate from each other.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

### RF frequency and level display with a downstream instrument


If your test setup includes a downstream instrument, you can enter the parameter of the downstream instrument in the frequency or level settings dialog of the R&S SMBV100B. Examples of downstream instruments are mixers, frequency multipliers, amplifiers or attenuators and of their corresponding major parameters offset, multiplier, amplitude. The R&S SMBV100B generates the signal without the downstream parameters, but considers all additional parameters concerning the frequency and level.

Example parameters that affect the frequency and level:

- Frequency offset
- Multiplication factor
- User correction
- Digital attenuation

Any of these cases are indicated by a dedicated icon in the status bar, depending on the affected parameter.

[Figure 7-1](#) illustrates the calculation of the "Frequency" and "Level" values, displayed in the status bar.

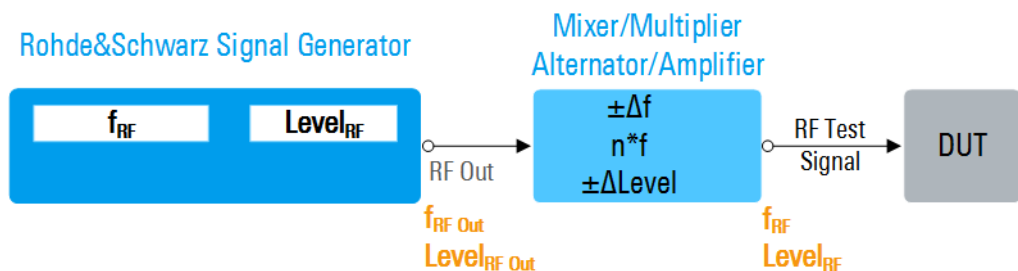

**Figure 7-1: Frequency and Level display vs frequency and level at the RF output**

$f_{RF}$ , $Level_{RF}$	= Frequency and level ("Status bar > Frequency and Level") at the output of the downstream instrument, see also <a href="#">Calculation of <math>f_{RF}</math> and <math>Level_{RF}</math></a>
$f_{RF\ Out}$ , $Level_{RF\ Out}$	= Frequency and level at the output connector [RF] ("RF > RF Frequency > Frequency" and "RF > RF Level > Amplitude")
$n*f$	= Multiplication factor ("RF > RF Frequency > Multiplier")
$\Delta f$	= Frequency offset ("RF > RF Frequency > Offset")
$\Delta Level$	= Power offset ("RF > RF Level > Offset")




Calculation of  $f_{RF}$  and  $Level_{RF}$

- $f_{RF} = n \cdot f_{RF\ Out} + \Delta f$
- $Level_{RF} = Level_{RF\ Out} + \Delta Level + Level_{DigAtt}$   
( $Level_{DigAtt}$  for active internal I/Q modulation, "RF > RF Level > Digital Attenuation")

7.5 RF frequency settings

Access:

- Select "RF" > "RF Frequency" > "Frequency".

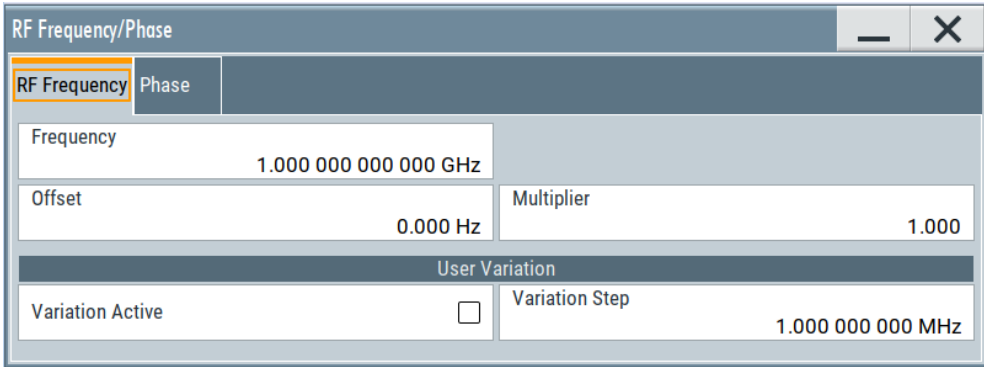

In the "RF Frequency" dialog, you can configure:

- RF frequency, incl. an offset or multiplication factor of a downstream instrument
- The step size for varying the frequency with the rotary knob.

The remote commands required to define the settings are described in [Chapter 13.17.6, "SOURCE:FREQuency subsystem"](#), on page 942.

Settings

Frequency.....	301
Offset.....	302
Multiplier.....	302
User Variation.....	302
L Variation Active.....	302
L Variation Step.....	303

Frequency

Sets the RF frequency.

This frequency is output at the RF connector. It does not consider an [Offset](#) or multiplication factor ([Multiplier](#)).

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

**Note:** Suppressed values in the status bar



For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- **\*\*\*\*\***

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)



The display is disabled when:

- List mode is running, see [Chapter 7.10, "Varying the RF signal in list or sweep mode"](#), on page 321.

Remote command:

`[ :SOURce<hw> ] :FREQuency [ :CW | FIXed ]` on page 946

### Offset

Sets the frequency offset.

This value represents the frequency shift of a downstream instrument, like for example a mixer.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMBV100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

Remote command:

`[ :SOURce<hw> ] :FREQuency:OFFSet` on page 948

### Multiplier

Sets the multiplication factor for the RF frequency.

This value represents the multiplication factor of a downstream instrument, as for example a multiplier. You can also assign a negative multiplication factor, for example -1.0 to support frequency converters working in the reverse frequency position.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMBV100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

Remote command:

`[ :SOURce<hw> ] :FREQuency:MULTiplier` on page 947

### User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

### Variation Active ← User Variation

Activates the set user-defined step width.



Remote command:

[ :SOURce<hw> ] :FREQuency:STEP:MODE on page 950

[ :SOURce<hw> ] :POWer:STEP:MODE on page 1007

#### Variation Step ← User Variation

Sets the user-defined step width.

Remote command:


[ :SOURce<hw> ] :FREQuency:STEP [ :INCRe ment ] on page 950

[ :SOURce<hw> ] :POWer:STEP [ :INCRe ment ] on page 1008

## 7.6 RF level settings

Access:


1. Select "RF" > "RF Level" > "Level".

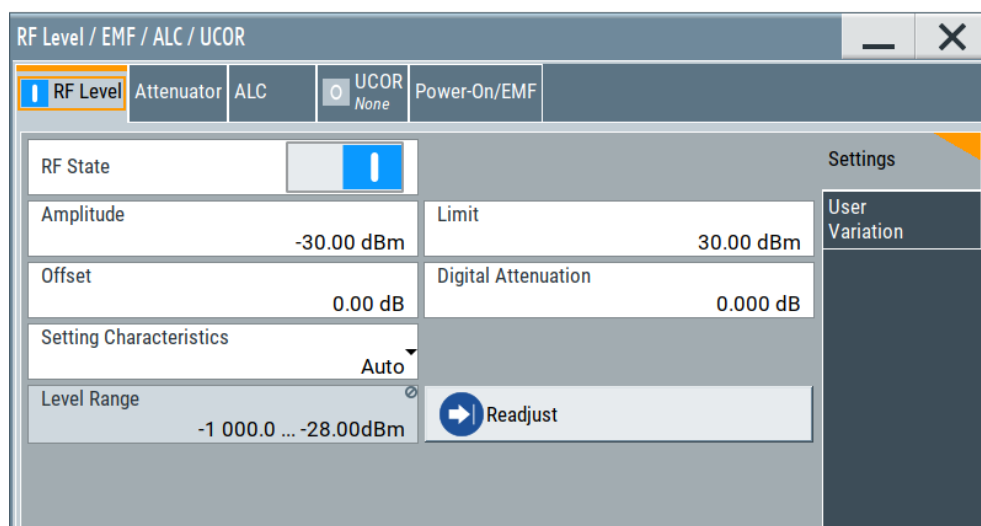

In the "RF Level" dialog, you can configure the offset-free level, the level limit, and the step width for varying the level with the rotary knob.

2. Select "User Variation" to set the step width to be used when setting the RF level using the rotary knob.



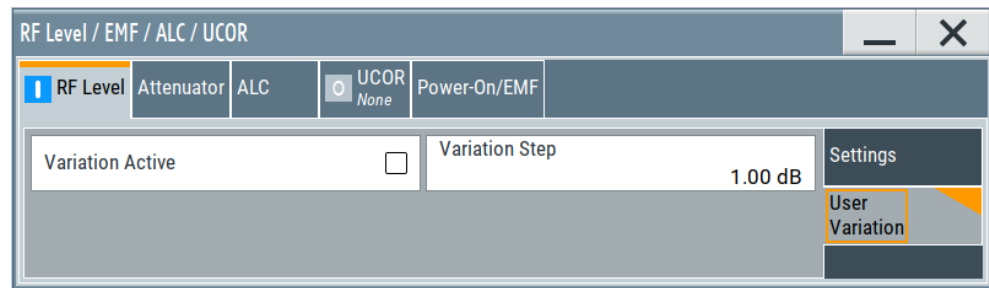

The remote commands required to define the settings are described in [Chapter 13.17.16, "SOURce:POWer subsystem"](#), on page 997.

### Settings

Amplitude.....	304
Limit.....	305
Offset.....	305
Digital Attenuation.....	305
Setting Characteristics.....	306
Level Range.....	306
Readjust.....	307
User Variation.....	307
L Variation Active.....	307
L Variation Step.....	307

### Amplitude

Sets the level of the RF signal.

The value is offset-free and corresponds to the level at the RF connector.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

#### Note: Suppressed values in the status bar


For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- **\*\*\*\*\***

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)



The display is disabled when:

- List mode is running, see [Chapter 7.10, "Varying the RF signal in list or sweep mode"](#), on page 321.

Remote command:

`[ :SOURce<hw> ] :POWer:POWer` on page 1004

**Note:** The SCPI command `[ :SOURce<hw> ] :POWer[:LEVel] [:IMMediate] [:AMPLitude]` sets the level of the "Level" display.

This means, the level containing offset.



**Limit**

Sets an upper limit for the output power.

The parameter "RF level" > "Limit" is identical with "NRP power control" > "RF Amplitude Limit", see

- [Chapter 7.6, "RF level settings"](#), on page 303
- ["NRP power control settings"](#) on page 420

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[ :SOURce<hw> ] :POWer:LImit [ :AMPLitude ]` on page 1002

**Offset**

Sets a level offset.

This value represents the level shift of a downstream instrument, like, for example, an attenuator or an amplifier.

The "Level" value displayed in the status bar is the resulting level, as it is at the output of the downstream instrument. The level at the R&S SMBV100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

Remote command:

`[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet` on page 1008

**Digital Attenuation**

Attenuates or raises the level of the internal, digitally modulated I/Q baseband signals, and thus the level of the RF signal accordingly.

The function allows fast level changes of the internal I/Q signals. You can determine an attenuation value between -3 dB and +80 dB. The instrument calculates the digital attenuation to the  $Level_{PEP}$  and the  $Level_{rms}$  as follows:

$$Level_{PEP(RF\ output)} = Level_{PEP} - \text{Digital Attenuation}$$

$$Level_{rms(RF\ output)} = Level_{rms} - \text{Digital Attenuation}$$

The level range changes accordingly.

**Note:** The digital attenuation has no effect on the RF output level when you work in CW mode or with externally applied I/Q signals, i.e. with unmodulated signals. If the digital attenuation affects the RF level, the R&S SMBV100B indicates the resulting level in the "Status bar". It is also denoted by an icon next to the level indicator.

Note also that several other parameters affect the displayed RF level value.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

Remote command:

`[ :SOURce<hw> ] :POWer:ATTenuation:DIGital` on page 1001



### Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto" Sets the RF output level automatically according to the selected mode.  
In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.  
The RF signal is shortly blanked when the step attenuator is switching.

"Uninterrupted" Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.  
This mode reduces the dynamic range of the instrument. The step attenuator is fixed.

#### Note:

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

"Strictly Monotone" Executes signal level changes monotonically increasing or decreasing.  
The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.  
All electronic switches, which can affect the monotonicity are fixed.  
The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.

"Constant-VSWR" Suppresses output impedance variations at the RF output connector, due to changed level settings.

"User" Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

`[ :SOURce<hw> ] :POWer:LBEHaviour` on page 1002

### Level Range

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

`[ :SOURce<hw> ] :POWer:RANGe:LOWer?` on page 1010

`[ :SOURce<hw> ] :POWer:RANGe:UPPer?` on page 1010



**Readjust**

Recalculates and adjusts the internal switch positions of the RF chain according to the current level.

In "Sample & Hold" or "Sample & On" mode, the function also triggers a new sample process. During the recalculation, the output level is blanked briefly.

Remote command:

`[ :SOURce<hw> ] :POWer:ALC:SONCe` on page 1000

**User Variation**

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

**Variation Active ← User Variation**

Activates the set user-defined step width.

Remote command:

`[ :SOURce<hw> ] :FREQuency:STEP:MODE` on page 950

`[ :SOURce<hw> ] :POWer:STEP:MODE` on page 1007

**Variation Step ← User Variation**

Sets the user-defined step width.

Remote command:

`[ :SOURce<hw> ] :FREQuency:STEP [ :INCRement ]` on page 950


`[ :SOURce<hw> ] :POWer:STEP [ :INCRement ]` on page 1008

## 7.7 RF phase settings

The phase in sinusoidal signals defines the initial angle at its origin.

Access:

- Select "RF" > "RF Frequency" > "Phase".

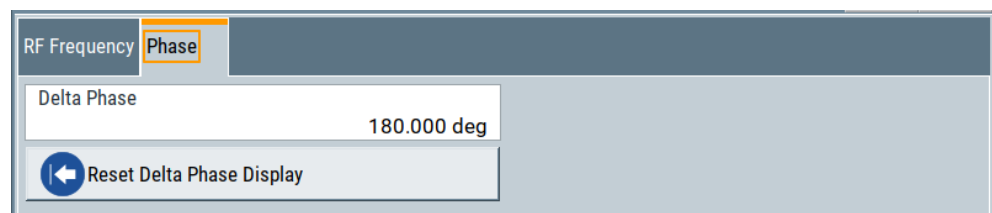

In the "RF Phase" tab, you can determine the delta phase value and reset the phase to this reference.

The remote commands required to define the settings are described in [Chapter 13.17.15, "SOURce:PHASe subsystem"](#), on page 996.



**Settings**

<a href="#">Delta Phase</a> .....	308
<a href="#">Reset Delta Phase Display</a> .....	308

**Delta Phase**

Sets the phase of the RF signal.

The current phase of the signal is used as the reference.

**Note:** Achieving long-term stable phase-locked coupling. We recommend that you use the LO coupling feature, if you try to synchronize the output signal with the phase of a second signal generator for example.

See [Chapter 7.9, "Local oscillator coupling"](#), on page 316.

Remote command:

[\[:SOURce<hw>\]:PHASe](#) on page 997

**Reset Delta Phase Display**

Adopts the selected "Delta Phase" value as the current value, and resets delta phase to 0 degrees.

Remote command:

[\[:SOURce<hw>\]:PHASe:REFeRence](#) on page 997

## 7.8 Reference oscillator

The R&S SMBV100B is equipped with an internal reference oscillator that generates a reference frequency of 10 MHz. It is used as internal reference source for the synthesizer.

Alternatively, you can apply an external reference signal. If equipped with the required options, the R&S SMBV100B can process external reference frequency in the range 1 MHz to 100 MHz and the 1 GHz reference frequency.

Regardless of the used reference source (internal or external), the R&S SMBV100B always provides the configured reference frequency at the output. You can use it, for example to synchronize several interconnected instruments, see [Chapter 7.8.5, "Using the reference frequency for instruments synchronization"](#), on page 313, for an overview of typical test situations.



The reference oscillator settings are not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. They are reset only by factory preset.

### 7.8.1 Required options

R&S SMBV100B base unit equipped with the following options:

- Reference oscillator (R&S SMBVB-B1)
- 1 GHz reference (R&S SMBVB-B3)




For more information, see data sheet.

## 7.8.2 Reference frequency settings

Access:

1. Select "RF" > "RF Frequency" > "Reference Frequency".

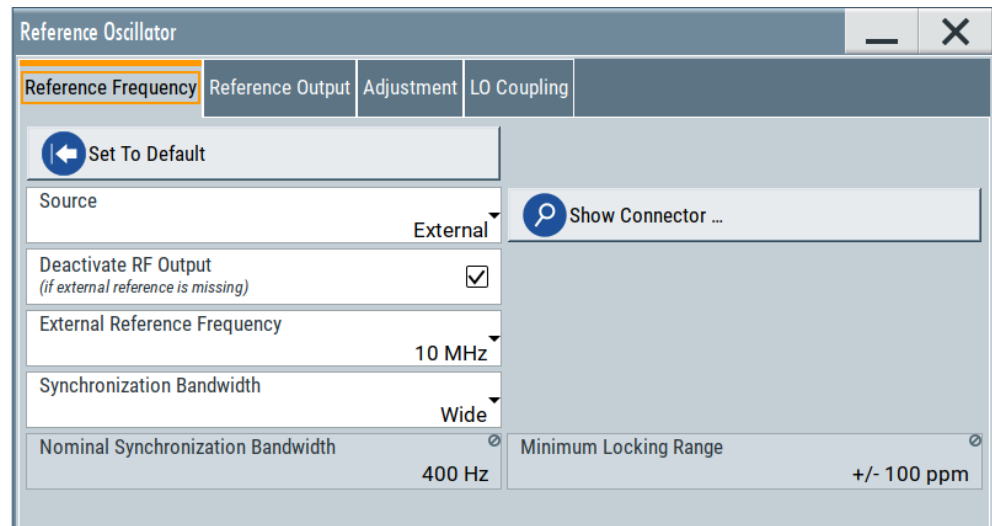

In the "Reference Frequency" tab, you can select the reference frequency signal source and the frequency and synchronization bandwidth mode of an external reference signal.

2. Observe the information in the status bar of the block diagram.

The status bar indicates the current oscillator configuration.



The remote commands required to define these settings are described in [Chapter 13.17.17, "SOURce:ROSCillator subsystem"](#), on page 1011.

### Settings:

<a href="#">Set to Default</a> .....	310
<a href="#">Source</a> .....	310
<a href="#">Show Connector</a> .....	310
<a href="#">Deactivate RF Output (if external reference is missing)</a> .....	310
<a href="#">External Reference Frequency</a> .....	310
<a href="#">Variable Reference Frequency</a> .....	311
<a href="#">Synchronization Bandwidth</a> .....	311
<a href="#">Nominal Synchronization Bandwidth</a> .....	311
<a href="#">Minimum Locking Range</a> .....	311



**Set to Default**

Calls the default settings.

Remote command:

`[ :SOURce ] :ROSCillator :PRESet` on page 1013


**Source**

Selects the reference frequency source.

"Internal" Uses the internal reference oscillator, either with calibrated or a user-defined [Adjustment Value](#).

**Note:** The internal reference frequency automatically uses [Synchronization Bandwidth > Narrow](#). Thus, if you preset this parameter, or set the reference source from "External" to "Internal" manually, the R&S SMBV100B sets the bandwidth to "Narrow".

"External" Uses an external reference signal.

**Note:** If the external reference is missing, the R&S SMBV100B issues a warning message and indicates the icon  (external reference missing).

To set the frequency of the external reference, see ["External Reference Frequency"](#) on page 310.

Remote command:

`[ :SOURce ] :ROSCillator :SOURce` on page 1013

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Deactivate RF Output (if external reference is missing)**

Turns off the RF output when the external reference signal is selected, but no signal is supplied.

This function prevents that no improper RF signal due to the missing external reference signal is used for measurements. A message indicates that the RF output is deactivated.

Remote command:

`[ :SOURce ] :ROSCillator :EXTernal :RFOff [ :STATe ]` on page 1013

**External Reference Frequency**

Selects the frequency of the external reference signal.

Set the reference output frequency with the parameters in the [Reference output settings](#) dialog.

"10 MHz" Selects 10 MHz for the external reference frequency signal.

"100 MHz, 1 GHz"

Option: R&S SMBVB-B3

Selects the external reference frequency.



"Variable" Option: R&S SMBVB-K704  
The external reference signal has an arbitrary frequency, within the permissible range from 1 MHz to 100 MHz.

Remote command:

[\[:SOURce\]:ROSCillator:EXternal:FREQuency](#) on page 1013

### Variable Reference Frequency

Option: R&S SMBVB-K704

Sets the variably settable external reference frequency.

Remote command:

[\[:SOURce\]:ROSCillator:EXternal:FREQuency:VARiable](#) on page 1014

### Synchronization Bandwidth

Selects the synchronization bandwidth for an external reference signal, set with [Source > External](#).

The resulting bandwidth is indicated by the parameter [Nominal Synchronization Bandwidth](#).

**Note:** If you preset or set the reference source from "External" to "Internal", the synchronization bandwidth is reset to "Narrow".

"Narrow" The internal reference oscillator is synchronized to the external signal with narrow bandwidth.

This setting is recommended if the phase noise of the external signal is worse than the phase noise of the internal OCXO.

"Wide" Synchronizes the internal oscillator to the external signal with the maximum possible bandwidth.

This mode is the recommended standard mode and for precise reference sources of high spectral purity.

**Note:** If the frequency of the external reference signal is outside the locking range of the internal reference oscillator, spurs due to the difference of the internal and external reference frequency are generated in the reference PLL.

The R&S SMBV100B issues an error message.

For more information, see data sheet.

Remote command:

[\[:SOURce\]:ROSCillator:EXternal:SBANDwidth](#) on page 1014

### Nominal Synchronization Bandwidth

Indicates the nominal synchronization bandwidth for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).

Remote command:

[\[:SOURce\]:ROSCillator:EXternal:NSBandwidth?](#) on page 1015

### Minimum Locking Range


Indicates the minimum locking range for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).



Remote command:  
[:SOURce]:ROSCillator:EXternal:MLRange? on page 1014

7.8.3 Reference output settings

- Access:
- 1. Select "RF" > "RF Frequency" > "Reference Frequency".
  - 2. Select "Reference Output".

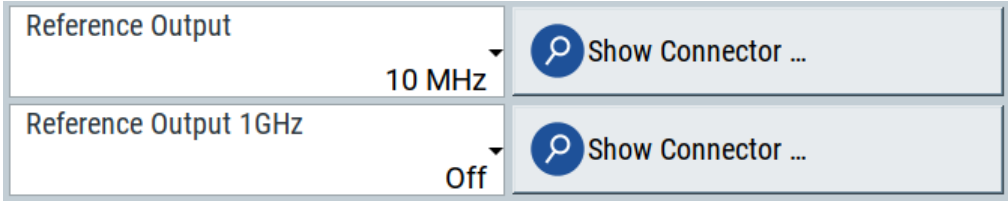

In the "Reference Output" tab, you can set the reference frequency value at the output connectors.  
As a result of parameter dependencies, "Preset This Parameter" sometimes does not affect output dialogs.  
The remote commands required to define these settings are described in [Chapter 13.17.17, "SOURce:ROSCillator subsystem"](#), on page 1011.

Settings:

<a href="#">Reference Output/1 GHz Reference Output</a> .....	312
<a href="#">Show Connector</a> .....	312

Reference Output/1 GHz Reference Output

Selects frequency reference output signal for downstream instruments.

- "Off" Deactivates the reference signal output.
- "10 MHz" Derives a signal with 10 MHz frequency from the internal reference oscillator and provides this signal at the output.
- "1 GHz" Option: R&S SMBVB-B3  
Provides the 1 GHz reference frequency signal at the output.
- "Input Signal (loop through)"  
Passes the external reference frequency to the output directly.

Remote command:  
[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE on page 1015  
[:SOURce]:ROSCillator:OUTPut:ALternate:FREQuency:MODE on page 1015



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.  
A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).



7.8.4 Adjustment settings

Access:

1. Select "RF" > "RF Frequency" > "Reference Frequency".
2. Select "Adjustment".

Adjustment Active

☒

Adjustment Value

0

Settings:

Adjustment Active.....	313
Adjustment Value.....	313

Adjustment Active

Selects the adjustment mode.

- |       |  |
|-------|--|
| "Off" | Uses the calibrated internal reference frequency.  |
| "On"  | Allows you to apply a deviation to the internal reference frequency, according to your requirements.<br>Enter the value in the <a href="#">Adjustment Value</a> field. |

Remote command:

`[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust [ :STATe ]` on page 1016

Adjustment Value

Sets a user-defined adjustment value for the internal reference frequency. This value takes effect when it is activated with [Adjustment Active](#).

- "0" represents the calibrated state.
- The setting range depends on the reference oscillator type and its factory calibration value.

Note:

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust :VALue` on page 1016

7.8.5 Using the reference frequency for instruments synchronization

Test setups with two or more instruments often require that the instruments use a common reference frequency. Depending on the availability of external reference frequency source and its quality, the instruments are connected and configured in different ways.



This section gives an overview of the possible test setups and the related settings. The following situations are considered:

- External reference source is not available or the **built-in reference oscillator** is of better quality than the external source  
(see ["Distributing the internal 10 MHz reference signal to further instruments"](#) on page 314)
- **Clean external reference source** with quality exceeding the quality of the built-in reference oscillator  
(see ["Using external reference source"](#) on page 315)
- **Interfered or noisy external reference signal**  
(see ["Deriving 10 MHz from the external reference frequency"](#) on page 315)
- **1 GHz reference coupling** for phase coherence of the RF signals with enhanced long-term phase stability  
(see ["Sharing the 1 GHz reference frequency to obtain phase-coherent signals"](#) on page 314)

### Connectors overview


Use the "Show Connector" function to indicate the connector on the front/rear panel:

- ["Ref In/Ref Out"](#) on page 45
- 1GHz ["Ref In/Ref Out"](#) on page 45

### Distributing the internal 10 MHz reference signal to further instruments

The internal reference oscillator provides the reference frequency:

- Internal  $f_{\text{ref}} = 10 \text{ MHz}$  (10 MHz at connector Ref Out)
- [Source](#) = "Internal"
- [Reference Output/1 GHz Reference Output](#) = "10 MHz"

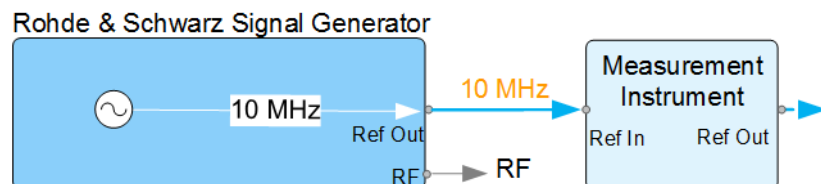

**Figure 7-2: Synchronizing instruments using the internal 10 MHz reference signal of the R&S SMBV100B**

Ref In, Ref Out = Connectors

### Sharing the 1 GHz reference frequency to obtain phase-coherent signals

Compared to 10 MHz, a 1 GHz reference signal significantly improves the achievable phase stability between two signal sources. Because the synchronization frequency increases by a factor of 100, the relative phase fluctuations between the sources can be reduced.

#### 1 GHz at connector Ref In 1GHz and 1 GHz at Ref Out 1GHz

- External  $f_{\text{Ref}} = 1 \text{ GHz}$



- Source = "External"
- External Reference Frequency = "1 GHz"
- 1GHz Reference Output = "1 GHz"

### Using external reference source

If you have a clean external reference signal with 10 MHz or 100 MHz frequency, for example, you can **directly pass it to the output**. The signal quality remains the same.

#### 10 MHz, 100 MHz at connector Ref Out and Ref In

- External  $f_{\text{Ref}}$  = 10 MHz or 100 MHz  
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- Source = "External"
- Reference Output = "10 MHz, 100 MHz" or "Input Signal (loop through)"  
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- Set the synchronization bandwidth according to the requirements of the application.

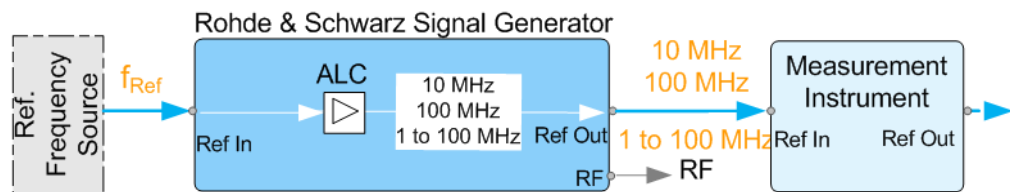


Figure 7-3: Synchronizing instruments with a 10 MHz external reference signal

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

$f_{\text{Ref}}$  = 10 MHz, 100 MHz, 1 MHz to 100 MHz external reference frequency

Ref In, Ref Out = Connectors

You can forward reference frequency between 1 MHz and 100 MHz directly to the output in the same way.

- External  $f_{\text{Ref}}$  = 1 MHz to 100 MHz  
(1 MHz to 100 MHz at connector Ref In and Ref Out)
- Source = "External"
- Variable Reference Frequency = "Variable"
- External Reference Frequency = current external frequency
- Reference Output = "Input Signal (loop through)" or specify the reference frequency the synchronized instrument supports
- Set the synchronization bandwidth according to the requirements of the application.


### Deriving 10 MHz from the external reference frequency

10 MHz reference frequency can be derived from the following external reference signals:

- 10 MHz from internal oscillator locked to external input
- 100 MHz and 1 GHz external reference signals



- External reference signal between 1 MHz and 100 MHz
- If the external reference signal is interfered (noisy)

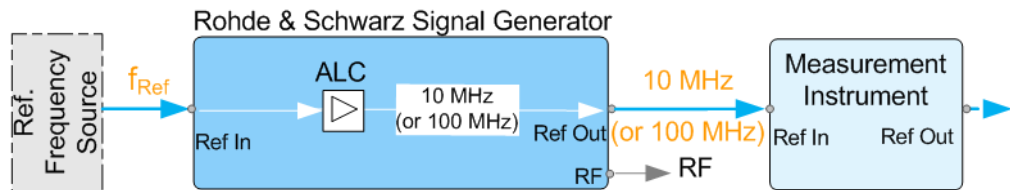

**Figure 7-4: Synchronizing instruments with 10 MHz (derived from an external reference frequency)**

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

$f_{\text{Ref}}$  = 10 MHz, 100 MHz, 1 MHz to 100 MHz, 1 GHz\*\* external reference frequency

\*\* = 1 GHz uses Ref In 1 GHz connector

Ref In, Ref Out = Connectors

#### 1 GHz, 1 MHz to 100 MHz at connector Ref In 1 GHz/Ref In and 10 MHz at Ref Out

- E.g., external Ref.  $f_{\text{ref}} = 100 \text{ MHz}$
- **Source** = "External"
- **External Reference Frequency** = "100 MHz"
- **Reference Output/1 GHz Reference Output** = "10 MHz"
- **Synchronization Bandwidth** = "Narrow"

## 7.9 Local oscillator coupling

The "LO Coupling" function allows a distribution of the local oscillator signal in a way that multiple RF signals can be derived from the same LO signal. Derivation from the same LO signal is mandatory for minimizing the phase fluctuations between these RF signals.

The R&S SMBV100B uses either the internal oscillator frequency for the LO signal, that is the output signal of the internal synthesizer, or an external frequency source.

### Connectors

- The internal LO signal is output at the LO Out connector.
- An external signal is fed in at the LO In connector.



The instrument cannot verify the frequency of the oscillator signal that is fed in. We recommend that you fed in signal with exactly the same frequency as shown in the settings dialog, see [LO OUT Frequency](#).

See also ["To find the physical Location of the LO In/Out connectors"](#) on page 319.




### 7.9.1 Required options

The equipment layout for using the LO coupling function includes:

- Base unit
- Option phase coherence (R&S SMBVB-K90)

### 7.9.2 Phase coherence

Phase coherence of RF signals designates a defined, constant delta phase between two or more RF carrier signals with the same frequency or a multiple of the frequency.

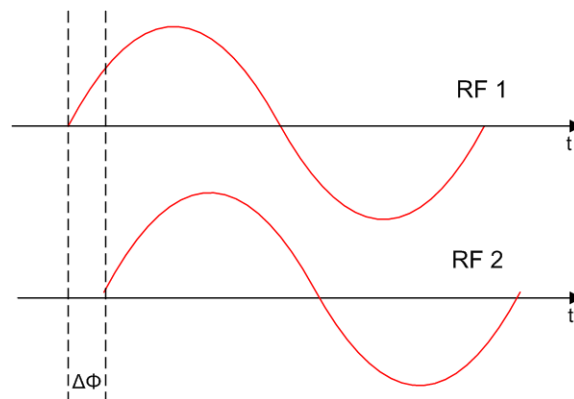

If two signal generators are coupled via their 10 MHz reference, they are generating the same frequency but only from the long term perspective. Having a closer look into the instantaneous differential phase (“delta phase”) of these two RF signals, the following are possible causes for instabilities:

- Phase noise of the two synthesizers
- *Weak* coupling at 10 MHz and a long synthesis chain up to the RF domain
- Temperature differences which cause a change of the effective electrical length of some synthesizer components


Most critical for a stable delta phase is the thermal RF phase fluctuation between multiple RF synthesizers. These fluctuations can be minimized by using a common synthesizer, that means a common local oscillator (LO) signal for all RF carrier. The LO signal is internally used for upconverting the baseband signal to the RF. Only if the LO signal is the same for all carriers, you can achieve a stable phase relationship between the RF signals.



### 7.9.3 LO coupling settings

Access:

- Select "RF" > "LO Coupling ...".

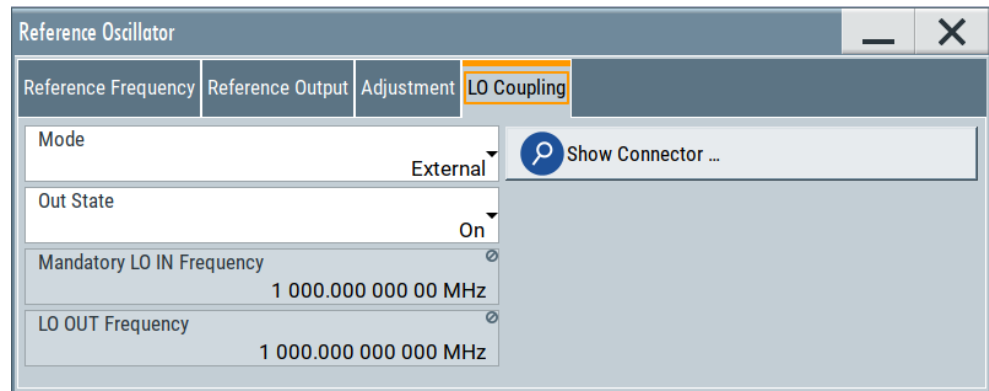

The "Local Oscillator (LO) Coupling" settings enable you to define the coupling of the local oscillator signal in the RF signal paths.

The related remote commands are described in [Chapter 13.17.6, "SOURce:FRE-Quency subsystem"](#), on page 942.

#### Mode

Selects the coupling mode of the LO signals.

See a typical test setup in [Chapter 7.9.4, "How to configure cascaded instruments"](#), on page 319.

**Note:** Working with an **external** oscillator signal disables all setting parameters of the "RF Frequency / Phase / Ext. Reference" dialog.

In **external** mode with active **Out State**, the LO coupling mode is defined within an RF frequency range of 80 MHz to 6 GHz. If you set the RF frequency below 80 MHz, the R&S SMBV100B adjusts the frequency to the minimum value and displays a corresponding message.

"Internal" Uses the internal signal.

"External" Uses an externally supplied signal.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:MODE](#) on page 944.

#### Out State

Activates or deactivates the LO output.

"On" Switches the LO output signal on.  
For coupling two instruments, the internal local oscillator signal is also available at the LO Out connector.

"Off" Switches the LO output signal off.

Remote command:

[\[:SOURce<hw>\]:FREQuency:LOSCillator:OUTPut:STaTe](#) on page 945



**Mandatory LO IN Frequency**

Displays the frequency that must be applied as external LO frequency.

Remote command:

`[ :SOURce<hw> ] :FREQuency:LOSCillator:INPut:FREQuency?` on page 944

**LO OUT Frequency**

Displays the current LO frequency at the LO Out connector.

Remote command:

`[ :SOURce<hw> ] :FREQuency:LOSCillator:OUTPut:FREQuency?` on page 944

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**7.9.4 How to configure cascaded instruments**

This section describes how you can find out the location of the LO signal connectors (LO In/Out). You can also find instructions for configuring the LO signals of several disconnected signal generators.

**To find the physical Location of the LO In/Out connectors**

The LO In and LO Out connectors are located on the rear panel. To find out the exact position, proceed as follows:

1. In the block diagram, select the "T/E/P/L/V" status indication field above the "RF" block.
2. Select "LO In" > "Show".
3. Observe the connectors's position on the "Rear" panel.

See also [Chapter 11.2.4, "RF connectors settings"](#), on page 557.


**To configure LO coupling with cascaded instruments to achieve phase coherence**

The LO Coupling function can be used to generate beamforming signals.

The test setups in the following examples represent possible applications and provide information about the coupling modes set in the signal generators. For the configuration via remote control, see the examples in [Chapter 13.17.6, "SOURce:FREQuency subsystem"](#), on page 942.

The first test setup example represents all variants of the coupling modes, and describes step-by-step how to configure each of the Rohde & Schwarz signal generators. The following examples show further conceivable test setups. To configure these test setups, proceed similarly as shown in the first example.

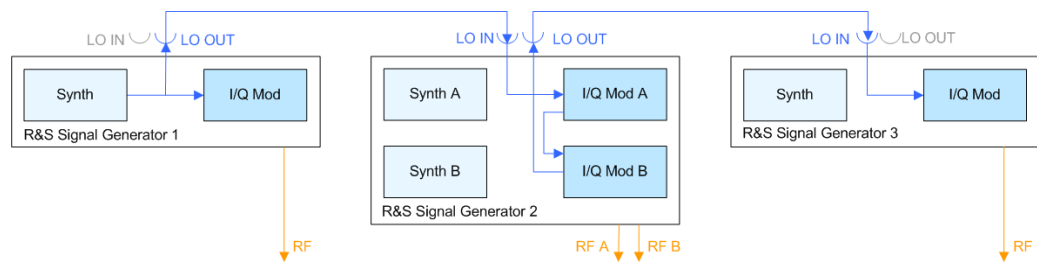

**Example: Cascading three Rohde & Schwarz Signal Generators****Figure 7-5: Set up of LO coupling with three Rohde & Schwarz Signal Generators**

Generator 1 = "Internal"; "LO Out > Off"

Generator 2 = "A External & A->B Coupled"; "LO Out > On"

Generator 3 = "External"; "LO Out > Off"

A frequency of 5 GHz is assumed.

- Signal Generator 1 is a one-path instrument, for example R&S SMBV100B and uses its internal oscillator signal.
- Signal Generator 2 is a two-paths instrument, for example a R&S SMW200A. It receives the LO signal from the first instrument and assigns it to both paths.
- Signal Generator 3 is a one-path instrument, for example R&S SMBV100B, R&S SGT100A, or R&S SMBV100A. It receives the LO signal from the second instrument.

To configure the application, proceed as follows:

1. Connect the first signal generator Ref Out with LO In of the second instrument, and similarly the LO Out of the second signal generator with LO In of the third.
2. Configure **Signal Generator 1**.  
Select "Freq = 5 GHz".
  - a) Select "RF > LO Coupling > Mode > Internal".
  - b) Set "Out State > On".
3. Configure **Signal Generator 2**.
  - a) Set "Freq => 5 GHz".
  - b) Check if both paths are able to deal with the desired RF frequency.
    - If both paths can handle the RF frequency, select "RF > LO Coupling > Mode > A External & A->B Coupled"
    - If path A is not sufficiently equipped, select "RF > LO Coupling > Mode > A RF Off & B External"
    - If path B is not able to handle the frequency, select "RF > LO Coupling > Mode > A External & B RF Off"
  - c) Set "Out State > On".



- d) If the attenuation between the interconnection LO Out and LO In is more than 1 dB at the oscillator frequency, we recommend that you execute "Adjust LO Level Current Frequency".

**Note:** Complete the adjustment procedure before you perform the adjustment on a subsequent instrument.

The signal generator automatically adjusts the internal LO signal level at the I/Q modulator and LO Out connector.

#### 4. Configure **Signal Generator 3**.

- Set "Freq = 5 GHz".
- Select "RF > LO Coupling > Mode > External".
- Set "Out State > Off".
- If the attenuation between the interconnection LO Out and LO In is greater than 1 dB at the oscillator frequency, we recommend that you perform level adjustment:


- Check if the "Adjust LO Level Current Frequency" procedure of the previous instrument is completed.
- Execute "Adjust LO Level Current Frequency".

The signal generator automatically adjusts the internal LO signal level at the I/Q modulator and LO Out connector.

All instruments generate the RF signals in phase, as they use the same oscillator signal looped through all instruments.

#### **Example: Generating a beamformed signal with two one path Rohde & Schwarz Signal Generators**

This example shows a test setup with two generators, each equipped with one path.

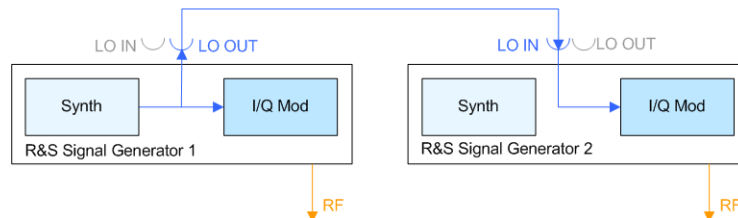

Generator 1 = "Internal"; "LO Out > On"

Generator 2 = "External"; "LO Out > Off"

The *Signal Generator 1* uses its internal oscillator signal. *Signal Generator 2* receives the LO signal from the first instrument. The frequency is assumed to be 2 GHz.

## 7.10 Varying the RF signal in list or sweep mode

The operating modes "List" and "Sweep" allow you to generate an RF signal having periodically varying frequencies or amplitudes.




A signal generated with varying parameters scans a certain range of varying values of a parameter, with defined start and end points, and can be repeated cyclically.

The R&S SMBV100B supports two basic methods:

- **Sweep** mode

The instrument generates an RF signal which varies its frequency or level values in discrete steps between the start and end values. The values change according to a specific shape like sawtooth or triangle. The spacing is linear or logarithmic.

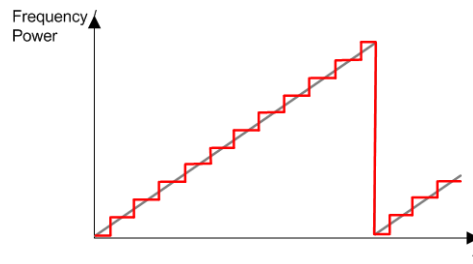

**Figure 7-6: Schematic representation of a signal generated in sweep mode**


The main application field of the "Sweep" mode is to determine the frequency response of a DUT.

- **List** mode

The instrument generates a varying output signal, based on a previously saved list with frequency, amplitude and step width values. While in sweep mode the frequency **or** the level values change, in list mode you can vary **both parameters simultaneously**. The frequency and level values do not need to have ascending or descending order, they can vary arbitrarily.

You can use a global dwell time, which means that the time interval is constant for all steps of the list, or different dwell times for each value pair.

[Figure 7-7](#) represents the frequency and power value pairs, in this case with the dwell time set the same for all steps (global dwell time).

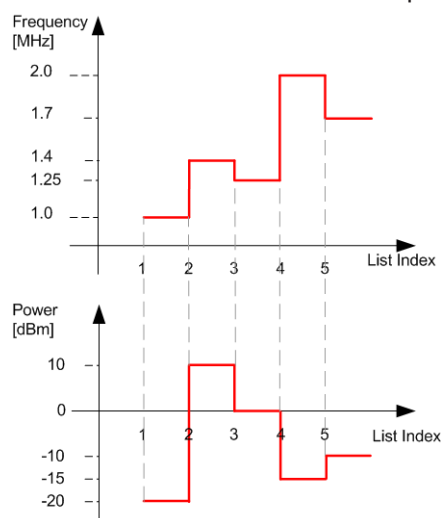

**Figure 7-7: Schematic representation of a signal generated in list mode (global dwell time)**




The list mode is especially useful in high-speed measurements with fast changing frequency and level settings.



Note that the shown diagrams represent the behaviour in theory. In real signal generation, the instruments usually have a blank time when the frequency or level changes.

### Interactions and characteristics of list and sweep mode

- Activating the list mode automatically deactivates all RF and LF sweeps and vice versa.
- In list processing mode, the frequency and level display in the status bar is disabled.



- The sweep modes only work with a *global* dwell time, that means the time intervals are constant during signal generation.
- If you want to hold a running sweep at a specific frequency or level value, enter the value in the status bar. The sweep stops immediately.
- We recommend that you switch off the display update for optimum sweep performance, especially with short dwell times  
See [Chapter 11.1.3, "Display update settings"](#), on page 550.

## 7.10.1 Signal generation and triggering in the sweep and list modes

In both operating modes "List" and "Sweep", triggering and signal generation follow the same principle. The instrument generates the signal continuously (that means triggered automatically) or in individual steps (controlled manually by an internal or external trigger signal).

The instrument expects the trigger signal at the Inst Trig connector.



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMBV100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

The figures in this section give an overview on the signal generation in the sweep and list modes and the appropriate triggering. The figures show the signal state after activating the mode and the generation of the signal when a trigger event occurs. For each mode, the relevant parameters and settings are briefly explained.

Each "Sweep" and "List" mode dialog provides also a "Reset" function that sets the signal to the initial value or the beginning of the list. Depending on the selected trigger mode, the signal generation proceeds accordingly.





The naming of the selection parameters in manual control (GUI) sometimes deviates from the naming in the remote-control commands. In addition, the value names of the selection parameters used in the signal generator partly differ from the SCPI syntax. The instrument accepts all value names.

The correlation between the manual control and the corresponding remote control commands, including the SCPI conform syntax are explained for each mode (see the cross-reference tables).

See also the following programming examples on the sweep and list modes in remote control:

- [Example "Setup an RF frequency or power sweep"](#) on page 1017
- [Example "Setup an LF sweep"](#) on page 966
- [Example "Create an RF list and activate the list mode"](#) on page 979

### Auto mode (Sweep/List)

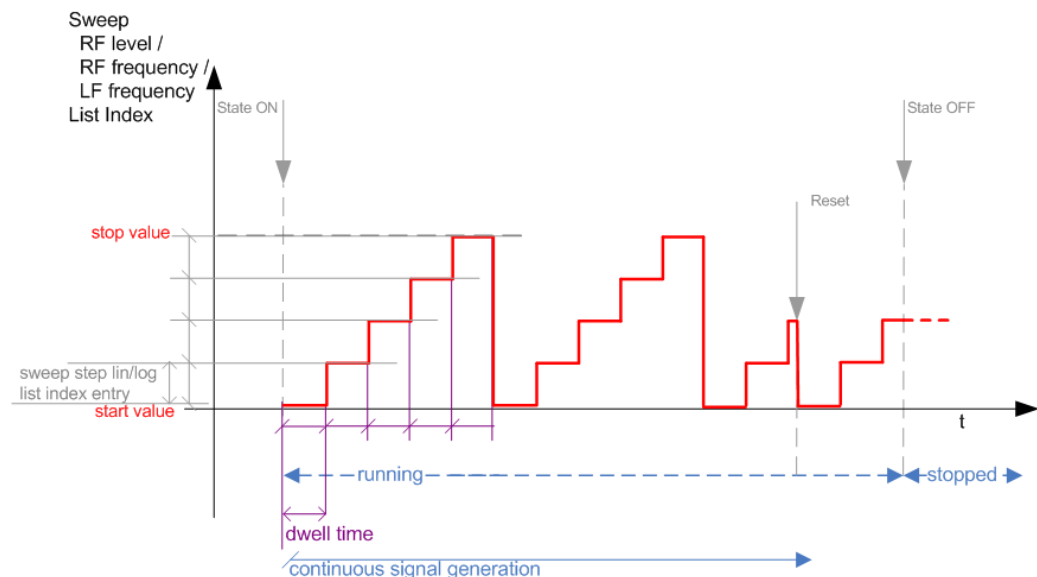


Figure 7-8: Auto mode (Sweep/List)

- The instrument generates the signal continuously.
- Trigger mode "Auto" is prerequisite (default). It causes the continuous generation of the sweep signal.
- Starts signal generation immediately with "State = On".
- Switches automatically to the next step when the [Dwell time](#) has elapsed.
- Stops signal generation with "State = Off".



Table 7-1: Cross-reference between manual and remote control in Auto mode (Sweep/List)

Manual control mode: "Auto"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:MODE AUTO :SOURce<hw>:LIST:TRIGger:SOURce AUTO

## Single / Extern Single mode (Sweep/List)

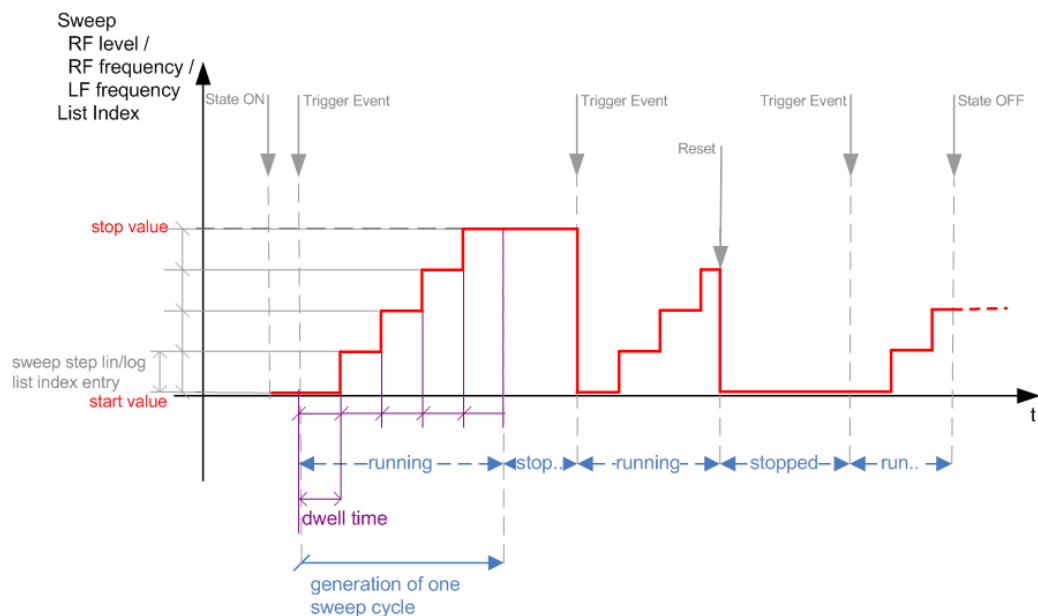


Figure 7-9: Single / Extern Single mode (sweep / list)



In single mode, you can specify, that the signal returns to the start value when a sweep cycle has been completed.

See ["The Retrace function"](#) on page 330 for details.

- The instrument generates a single sweep cycle.
- Trigger mode "Manual". A trigger event initiates one sweep from the start value to the end value.
- "State = On" sets the signal to the start value: the sweep start frequency, the sweep start power or the frequency-power value pair of the selected index in the list.
- Starts signal generation with a trigger event.




## Varying the RF signal in list or sweep mode

- Switches automatically to the next step when the **Dwell time** has elapsed.
- Stops signal generation at the set end value and waits for the subsequent trigger event.
- Trigger sources:
  - The "Execute Single Sweep" function.
  - The corresponding remote control command.
  - An externally applied trigger signal.
- "State = Off" stops the signal generation in sweep or list mode.

**Table 7-2: Cross-reference between manual and remote control in Single / Extern Single modes (Sweep/List)**

Manual control mode: "Single / Extern Single"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:FSweep:SOURce EXTernal [EXTernal] "Extern Single" :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGLE [BUS] for "Single" or :TRIGger<hw>:PSweep:SOURce EXTernal [EXTernal] for "Extern Single" :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:LFFSweep:SOURce EXTernal [EXTernal] "Extern Single" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Single" or :SOURce<hw>:LIST:TRIGger:SOURce EXTernal "Extern Single" :SOURce<hw>:LIST:MODE AUTO

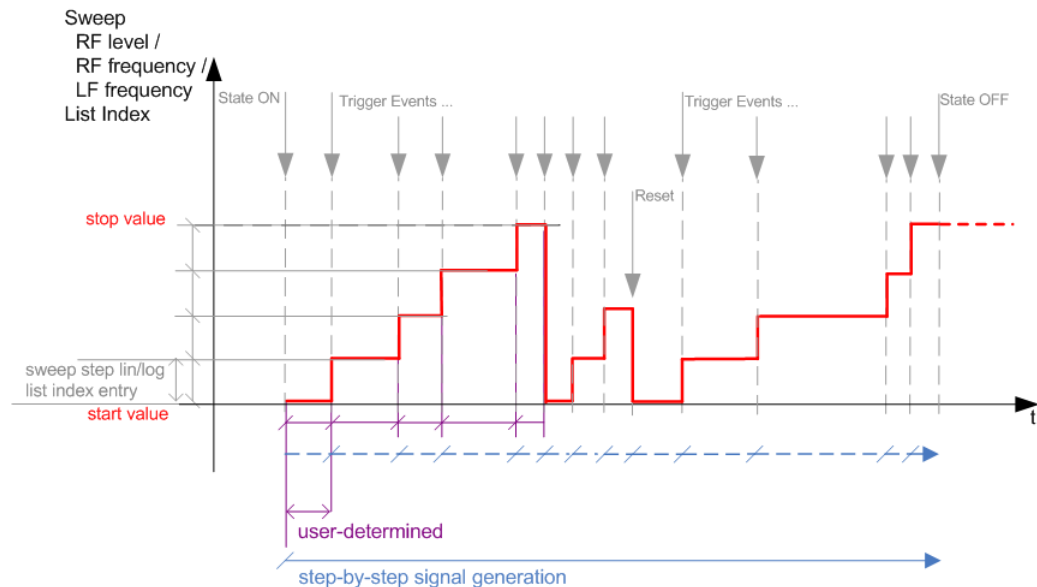

**Step / Extern Step mode (Sweep/List)****Figure 7-10: Step / Extern Step mode (sweep / list)**

- The instrument generates the signal step-by-step.
- Starts signal generation with "State = On".
- Switches to the next step with a manual action.  
If the end value is reached, signal generation starts again from the beginning.
- Stops signal generation with "State = Off".
- Trigger sources:
  - The rotary knob at the front panel.
  - The [Arrow] keys at the front panel.
  - The corresponding remote control commands.
  - An externally applied trigger signal.

To step through the sweep frequencies or levels:

- In manual mode:
  - Set the **Current Frequency** or **Current Level** values
  - Use the [Up] and [Down] keys or the rotary knob
- In remote control mode:
  - Use the commands `[ :SOURce<hw> ] :FREQuency:MANual` or `[ :SOURce<hw> ] :POWer:MANual` with the UP or DOWN parameter




Steps that would exceed the sweep range are ignored.



**Table 7-3: Cross-reference between manual and remote control in Step / Extern Step modes (Sweep/List)**

Manual control mode: "Step / Extern Step"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:FSweep:SOURce EXTeRnal [EXTeRnal] for "Extern Step" :SOURce<hw>:SWEep:FREQuency:MODE STEP
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:PSweep:SOURce EXTeRnal [EXTeRnal] "Extern Step" :SOURce<hw>:SWEep:POWer:MODE STEP
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:LFFSweep:SOURce EXTeRnal [EXTeRnal] "Extern Step" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE STEP
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Step" or :SOURce<hw>:LIST:TRIGger:SOURce EXTeRnal "Extern Step" :SOURce<hw>:LIST:MODE STEP

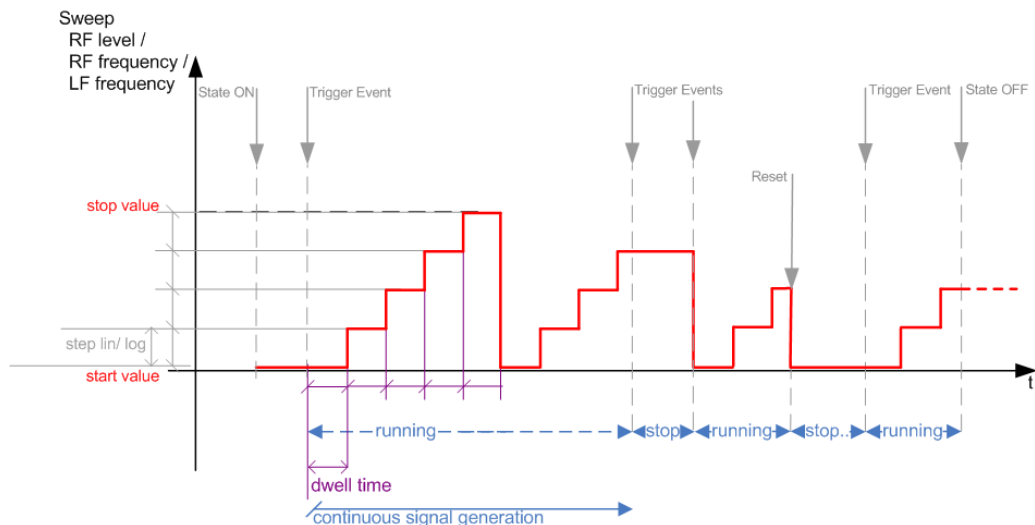**Extern Start/Stop mode (sweep)****Figure 7-11: Extern Start/Stop mode (sweep)**

- The instrument generates the signal continuously.
- Trigger mode "Auto" and "Sweep > State = On" are prerequisite.
- State "On" sets the signal to the start value, that is one of the following:
  - Sweep start frequency
  - Sweep start power
  - Frequency-power value pair of the selected index in the list
- Starts signal generation with a trigger event.



- Switches automatically to the next sweep step when the **Dwell time** has elapsed. If the end value is reached, signal generation continues with the next sweep cycle.
- Stops signal generation with the next external trigger event.
- Starts the signal generation again with the next trigger event, beginning at the start value.
- "State = Off" stops the signal generation in sweep or list mode.
- Trigger source: An externally applied trigger signal.


**Table 7-4: Cross-reference between manual and remote control in Extern Start/Stop modes (sweep)**

Manual control mode: "Extern Start/Stop"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce EAUTO [-] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce EAUTO [-] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce EAUTO [-] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO

### Manual mode (Sweep/List)



The **manual** mode only applies to remote control. It is not visible in the graphical user interface of the instrument and is described here for completeness.

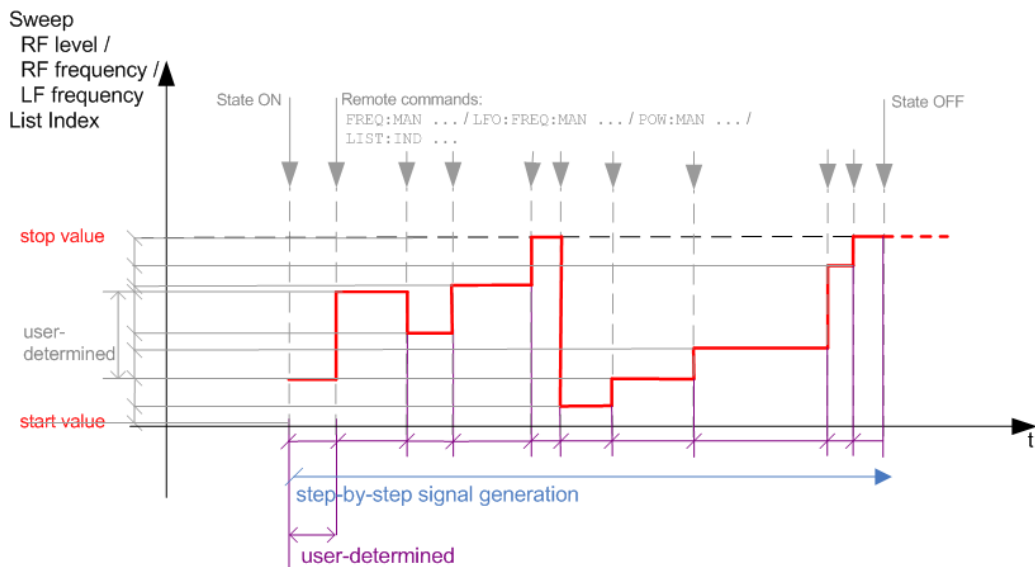

**Figure 7-12: Manual mode in remote control (sweep / list)**

- The instrument generates the signal in steps.
- Starts signal generation with "State = On".
- Switches to the next step with a user defined setting via remote control.




You can arbitrarily select a value within the range of the start and stop values by setting the frequency, power or index using the corresponding remote control command. There is no ascending or descending order.

- Stops signal generation with "State = Off".

**Table 7-5: Remote control commands in manual mode (Sweep/List)**

Remote control mode:	Remote commands
<b>Manual</b>	<b>Rohde &amp; Schwarz proprietary and [SCPI conform] value name</b>
RF frequency sweep	:SOURce<hw>:FREQuency:MANUal <Manual>
RF level sweep	:SOURce<hw>:POWer:MANUal <Manual>
LF frequency sweep	:SOURce<hw>:LFOUtpuT:FREQuency:MANUal <Manual>
List	:SOURce<hw>:LIST:INDex <Index>

### The Retrace function

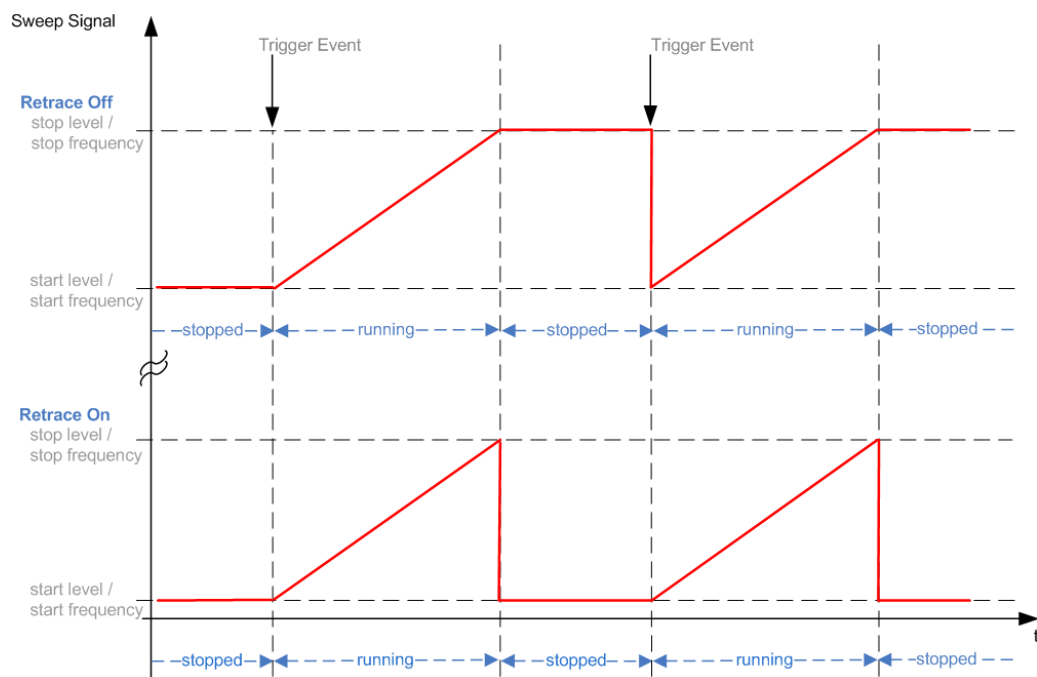

Retrace is a function especially designed for "Single" sweep modes, when the sweep signal follows a sawtooth shape. Working in this mode, the instrument performs a single sweep cycle when a trigger event occurs. The signal generation stops at the set end point (stop frequency or stop level), and waits for the next trigger event.

In this state, the upper value of the signal remains at the output until the next cycle starts. In particular, if you generate a level sweep signal, the high amplitude of the signal is output for a certain time. To protect the DUT from overload, the retrace function immediately resets the signal value to the start value at the end of a sweep cycle. It returns to the start level or start frequency until the next trigger is applied.



You can use the "Retrace" function if "Sweep > Mode = Single/External Single" and "Shape = Sawtooth", see:

- "Shape" on page 340
- "Mode" on page 339

### 7.10.2 About sweep mode

In sweep mode, the signal generator scans the sweep range gradually from one point to another, using a defined step size and following a triangle or sawtooth shape. This mode also enables you to change direction, that means, it is possible to step backwards.

See [Chapter 7.10.2.2, "Sweep signal shapes"](#), on page 333.

#### Configuration and operation of sweep mode signals

- The R&S SMBV100B generates a sweep signal by varying the following parameters: either the *RF frequency*, the *RF level* or both, the *RF frequency* and the *RF level* in combined RF sweep mode, or the *LF frequency*.
- In all sweep modes, you can perform a complete sweep cycle once, repeat the cycle continuously or step through it gradually.
- The instrument generates the sweep signal according to the sweep settings.
- The "Reset Sweep" function, provided in the sweep settings dialogs enables you to reset the sweep to its initial value and restart it.



#### Impact of changing the sweep mode during performance

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

#### Combined RF frequency / level sweep processing mode

The combined RF sweep functionality processes the signal similar to the Live list mode. The R&S SMBV100B sets the frequency and level values simultaneously in the hardware. The difference to the list mode is that the values are not taken from a previously created list, but are calculated using the selected frequency and level ranges, the dwell time and the number of steps.

#### 7.10.2.1 Correlating parameters in sweep mode

A sweep signal is a periodic signal that changes its frequency or level, or both, from a starting value to an ending value in a defined time.

The R&S SMBV100B provides various possibilities to configure a sweep signal. For example, you can determine the sweep range by the start and end values, or based on the start value and span. In any case, related parameters are adjusted accordingly.

The formulas below show how the sweep parameters correlate and the corresponding calculation basis, by the frequency and offset settings. Apart from "Center Frequency", "Span" and "Step\_lin", the values apply accordingly to the level settings.



**Table 7-6: Variables that are used in the following formulas**

Variable	Description
Sweep range	Defined frequency or level value range
$f_{\text{CENTer}}$	Defined center frequency
$f_{\text{SPAN}}$	Defined extend of the sweep range
$f_{\text{OFFSet}}$	Frequency offset
$f_{\text{START}}$	Start frequency of the sweep range
$f_{\text{STOP}}$	End frequency of the sweep range
$f_1$	Current sweep frequency
$f_2$	Next, subsequent sweep frequency
step_lin	Step size in linear scaling
step_log	Step size in logarithmic scaling
POINTS	Number of steps within the sweep range

**Sweep range**

The sweep range is defined by a start and an end value. How the remaining parameters correlate is shown below.

**Offset = 0**

Sweep Range =  $f_{\text{START}}$  to  $f_{\text{STOP}}$

$f_{\text{CENTer}} = (f_{\text{START}} + f_{\text{STOP}})/2$

$f_{\text{SPAN}} = (f_{\text{STOP}} - f_{\text{START}})$

Where:

$f_{\text{START}} = f_{\text{CENTer}} - (f_{\text{SPAN}}/2)$

$f_{\text{STOP}} = f_{\text{CENTer}} + (f_{\text{SPAN}}/2)$

**Offset≠0**

A defined offset also affects the sweep range and the center frequency. Therefore, the set frequencies are only absolute values, if the Offset = 0. Offset ≠ 0 shifts the frequencies with the offset value:

Sweep Range =  $f_{\text{START}} + f_{\text{OFFSet}}$  to  $f_{\text{STOP}} + f_{\text{OFFSet}}$

$f_{\text{CENTer}} = f_{\text{CENTer}} + f_{\text{OFFSet}}$

$f_{\text{SPAN}} = f_{\text{SPAN}} + f_{\text{OFFSet}}$

The value range of the instrument is calculated as follows:

$\text{RF}_{\text{min}} + f_{\text{OFFSet}}$  to  $\text{RF}_{\text{max}} + f_{\text{OFFSet}}$





It is possible to set  $f_{\text{START}} > f_{\text{STOP}}$  and  $f_{\text{START}} < f_{\text{STOP}}$ , so that even a negative value is permitted for the "Span".

If you change the start and/or stop frequency, the span and center frequency change accordingly, and vice versa.

### Sweep steps

In the following, you see how the sweep steps are calculated depending on the defined spacing mode. The formulas show a frequency sweep, but apply to the level settings in the same way.

The step size is added to the current value, to get the subsequent sweep step.

With **linear** scaling, the next frequency is calculated according to:

$$f_2 = f_1 + \text{step\_lin}$$

In the **logarithmic** scaling, the step size is determined in per cent, as a constant fraction of the current frequency.

Successive frequencies are calculated as follows:

- For  $f_{\text{START}} < f_{\text{STOP}}$   
 $f_2 = f_1 * (1 + \text{step\_log}/100)$   
 If  $f_2 > f_{\text{STOP}}$ , then  $f_2 = f_{\text{STOP}}$
- For  $f_{\text{START}} > f_{\text{STOP}}$   
 $f_2 = f_1 / (1 + \text{step\_log}/100)$   
 If  $f_2 < f_{\text{STOP}}$ , then  $f_2 = f_{\text{STOP}}$

With "Shape = Triangle", the frequency values on the slope from  $f_{\text{STOP}}$  to  $f_{\text{START}}$  are the same as on the slope from  $f_{\text{START}}$  to  $f_{\text{STOP}}$ .

If you specify the number of steps within the sweep range, the step size is adjusted according to the following correlation:

- For **linear** sweeps and  $f_{\text{START}} < f_{\text{STOP}}$   
 $\text{POINTS}_{\text{frequency}} = ((f_{\text{START}} - f_{\text{STOP}})/\text{step\_lin}) + 1 = (f_{\text{SPAN}}/\text{step\_lin}) + 1$
- For **logarithmic** sweeps and  $f_{\text{START}} < f_{\text{STOP}}$   
 $\text{POINTS}_{\text{frequency}} = ((\log f_{\text{STOP}} - \log f_{\text{START}})/\log \text{step\_log}) + 1$

If step\_log changes, the value of POINTs is adjusted. The  $f_{\text{START}}$  and  $f_{\text{STOP}}$  values are retained.

#### 7.10.2.2 Sweep signal shapes

The R&S SMBV100B supports the following sweep shapes:

- **Sawtooth**  
 The sweep sequence resembles a sawtooth. One sweep runs from start to stop frequency, or level value respectively. Each subsequent sweep starts again at the start value.



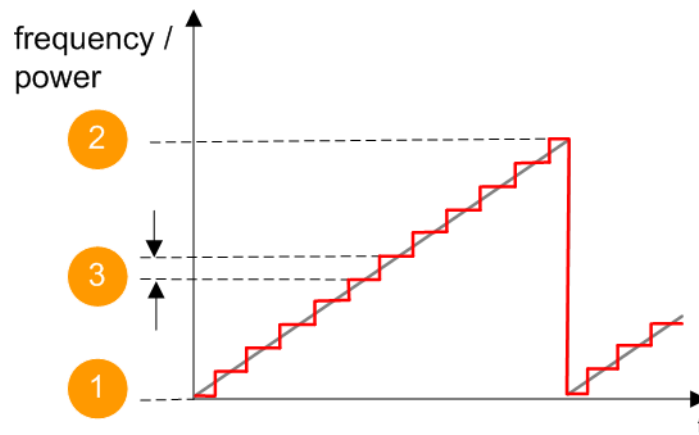


Figure 7-13: Sweep signal sawtooth shape

1 = Start value  
2 = Stop value  
3 = Step size

- Triangle  
The sweep sequence resembles a triangle. One sweep runs from start to stop value frequency and back. Each subsequent sweep starts at the start value.

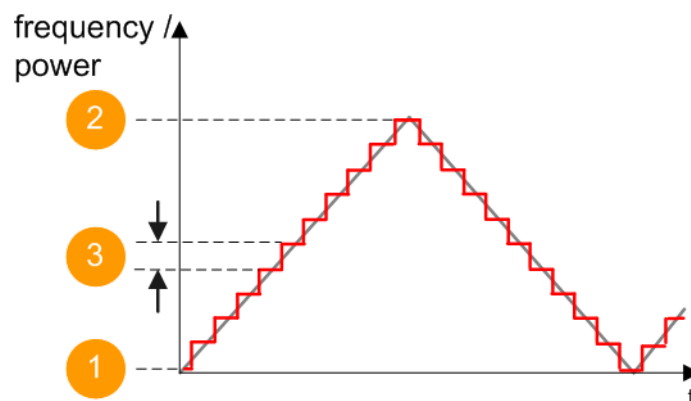


Figure 7-14: Sweep signal triangle shape

1 = Start value  
2 = Stop value  
3 = Step size

The current frequency or level of an RF frequency, level or LF frequency sweep is determined by the shape (e.g. sawtooth or triangle) and the spacing (linear or logarithmic), and the step size.

### 7.10.3 About list mode

The list mode is used to generate the RF signal based on a set of predefined frequency and amplitude value pairs, with individual step times. You can define the values arbitrarily, in any order and varying step sizes, within the entire configurable value range of the instrument.



### Configuration and operation of list mode signals

The parameters configuring the RF signal are defined in a list (table) and stored in a file.

### Creating and handling lists

List files can be created in the following ways:

- **Internally**  
Use the build-in table editor with columns for the frequency-level values pairs and the dwell time.  
Define the values manually (row by row) or automatically, based on value range and step size.  
(See [Chapter 7.10.7, "List editor"](#), on page 354)  
Lists are saved as files with user-definable filename and the predefined file extension \*.lsw. To load a saved file, use the "File Manager".  
(See [Chapter 10.8, "Using the file manager"](#), on page 529)
- Lists can be exported, too. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- **Externally**  
Create a list file as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

### Dwell time mode

You can choose whether you want to use different dwell times or a fixed value for all steps in the list mode:

- "From List"  
This mode uses the values from the data table.  
See [Edit List Mode Data](#)
- "Global"  
This mode processes the list with a fixed time interval you can set with [Global Dwell Time](#).

### List processing mode

See:

- ["Live list processing mode"](#) on page 337

## 7.10.4 Significant parameters and functions

This section provides some basic parameters, settings and functions that affect the operating modes CW, list and sweep, that means at all frequency and level transitions of the RF signal.



### Dwell time

Dwell time is the length of time that elapses from the beginning until the end of a step in list or sweep mode.

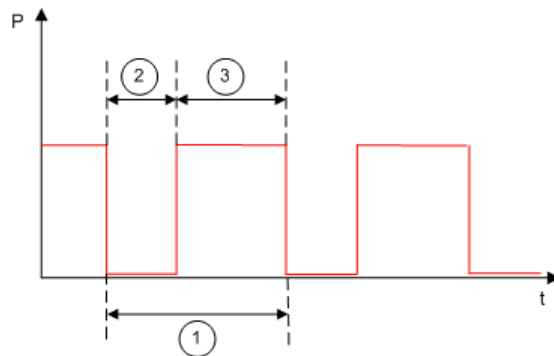


Figure 7-15: Dwell Time vs. settling time

- 1 = "Dwell Time" (as set with the parameter)
- 2 = Settling time
- 3 = Dwell time (effective)

However, the time the instrument requires for the signal to settle reduces the set dwell time:

$$t_{\text{dwell(effective)}} = t_{\text{dwell}} - t_{\text{settling}}$$



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMBV100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

### Hardware adjustments

The first time a list (new or modified) is processed, the instrument automatically calculates the necessary hardware settings. It can be performed during list processing, but delays the first cycle, especially with short dwell times.

With long dwell times, you can perform this calculation while the list is being processed; the entered dwell times are observed. With short dwell times, calculation of the hardware settings increases the dwell time for the initial processing cycle; the entered value is only observed from the second processing cycle onwards. In this case, a message indicates that there is a deviation between the current and set dwell times. After the first cycle, you do not need to perform additional calculations. The current dwell times do not deviate from the set dwell times.

### Blanking

The instrument applies *blanking*, which temporarily turns off the RF signal when the frequency or level changes, until the signal has settled to a stable state.

Temporary blanking applies to all operating modes.



**Live list processing mode**

The R&S SMBV100B generates the signal directly from the value pairs in the data-base, and adjusts the hardware settings accordingly. The current instrument state and thus any change during the signal generation directly affects the RF signal. The temporary memory is not used.

You can conveniently modify parameters like modulation settings during run-time. Learning list mode data is not required. Impacts like temperature drift are also considered immediately.

This mode is optimized for **maximum signal quality**, and is useful if dwell times higher than 2 ms are sufficient.

**7.10.5 Sweep mode settings**

This section lists the settings of **all** available sweep modes.

Access:

1. Select "RF" > "Sweep/List" > "RF Frequency Sweep"
2. Select "RF" > "Sweep/List" > "RF Level Sweep"
3. Select "RF" > "Sweep/List" > "RF Combined Sweep"
4. Select "RF" > "Sweep/List" > "LF Frequency Sweep"

The sweep modes use the similar parameters to be configured. Thus, the description comprises the settings of the three dialogs, "RF Frequency Sweep", "RF Level Sweep" and "LF Frequency Sweep". If parameters relate to only particular modes, they are pointed out.

The remote commands required to define these settings are described in:

- [Chapter 13.17.6, "SOURce:FREQuency subsystem"](#), on page 942
- [Chapter 13.17.16, "SOURce:POWEr subsystem"](#), on page 997
- [Chapter 13.17.18, "SOURce:SWEep subsystem"](#), on page 1017
- [Chapter 13.17.10, "SOURce:LFOutput subsystem"](#), on page 966

**Settings**

- [General sweep settings](#).....337
- [Frequency range settings](#).....343
- [Level range settings](#).....345



**7.10.5.1 General sweep settings**

Access:

- ▶ Select, for example, "RF" > "Sweep/List" > "RF Frequency Sweep".



Table 7-7: General settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs
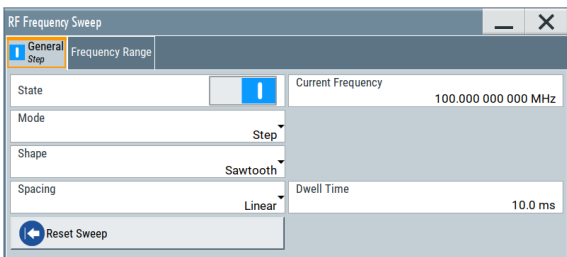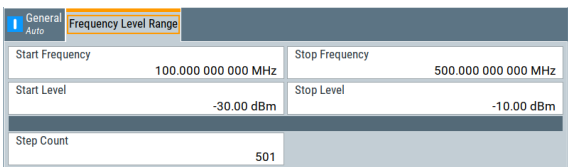
> "RF Frequency Sweep"	> "RF Combined Sweep"
	

## Settings

State (RF frequency sweep).....	338
State (RF level sweep).....	338
State (RF frequency / level sweep).....	338
State (LF frequency sweep).....	339
Current Frequency.....	339
Current Level.....	339
Mode.....	339
Retrace.....	340
Shape.....	340
Spacing.....	342
Dwell Time.....	342
Trigger Slope.....	342
Execute Single Sweep.....	342
Show Connector.....	343
Reset Sweep.....	343

### State (RF frequency sweep)

Activates RF frequency sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw>] :FREQuency:MODE on page 945

### State (RF level sweep)

Activates RF level sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw>] :POWER:MODE on page 1003

### State (RF frequency / level sweep)

Activates the RF frequency / level sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.



Remote command:

[ :SOURce<hw> ] :FREQuency:MODE on page 945

[ :SOURce<hw> ] :POWer:MODE on page 1003

### State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.  
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw> ] :LFOutput:FREQuency:MODE on page 970

### Current Frequency

Displays the current frequency sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next frequency setting manually.

Remote command:

[ :SOURce<hw> ] :FREQuency:MANual on page 947

[ :SOURce<hw> ] :LFOutput:FREQuency:MANual on page 969

### Current Level

Displays the current level sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next level setting manually.

Remote command:

[ :SOURce<hw> ] :POWer:MANual on page 1002

### Mode

Selects the sweep mode.

See [Chapter 7.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 323.

- |                          |  |
|--------------------------|--|
| "Auto"                   | Generates a continuously repeating sweep signal directly after activating the sweep mode.<br>The sweep steps are performed automatically, controlled by the dwell time.  |
| "Single / Extern Single" | Generates a single sweep cycle after a trigger event.<br>The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event. |
| "Step / Extern Step"     | Generates the sweep signal step-by-step, manually triggered.   |



**"Extern Start/Stop"**

Generates a continuously repeating sweep signal that is started, stopped, and restarted by subsequent external trigger events. The sweep steps are performed automatically, controlled by the dwell time.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :MODE` on page 1021  
`:TRIGger<hw>:FSWEEP:SOURce` on page 1069

RF level sweep:

`[ :SOURce<hw> ] :SWEep:POWer:MODE` on page 1020  
`:TRIGger<hw>:PSWEEP:SOURce` on page 1069

RF combined sweep:

`[ :SOURce<hw> ] :SWEep:COMBined:MODE` on page 1027  
`:TRIGger<hw>:FPSWEEP:SOURce` on page 1071

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :MODE` on page 976  
`:TRIGger<hw>:LFFSWEEP:SOURce` on page 1069

**Retrace**

For "Shape = Sawtooth" and "Mode = Single/External Single", enables changing the signal to the start value while it is waiting for the next trigger event. It returns to the start level or start frequency until the next trigger is applied.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :RETRace` on page 1023

RF level sweep:

`[ :SOURce<hw> ] :SWEep:POWer:RETRace` on page 1023

RF combined sweep:

`[ :SOURce<hw> ] :SWEep:COMBined:RETRace` on page 1027

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :RETRace` on page 977


**Shape**

Selects the waveform shape of the sweep signal.



**"Sawtooth"**

The sweep runs from start to stop frequency. The subsequent sweep starts at the start value, i.e. the shape of the sweep sequence resembles a sawtooth.

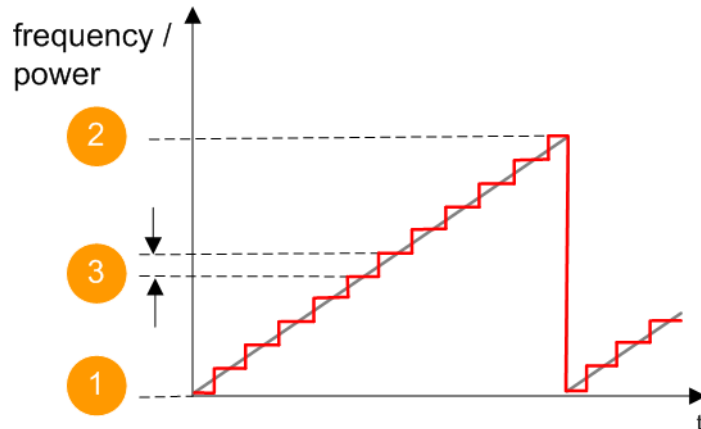


**Figure 7-16: Sweep signal sawtooth shape**

1 = Start value  
2 = Stop value  
3 = Step width

**"Triangle"**

The sweep runs from start to stop value and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency.

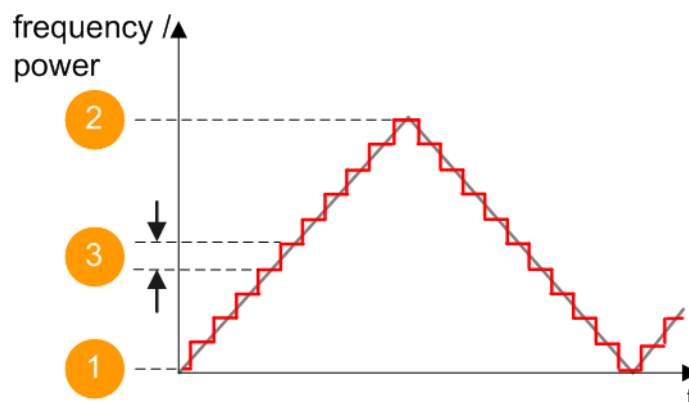

**Figure 7-17: Sweep signal triangle shape**

1 = Start value  
2 = Stop value  
3 = Step width

Remote command:

RF frequency sweep:

`[ :SOURCE<hw> ] :SWEep [ :FREQuency ] :SHApe` on page 1023

RF level sweep:

`[ :SOURCE<hw> ] :SWEep :POWer :SHApe` on page 1023

RF combined sweep:

`[ :SOURCE<hw> ] :SWEep :COMBined :SHApe` on page 1028



LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :SHApe` on page 978

### Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :SPACing` on page 1022

RF combined sweep: n.a.

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :SPACing` on page 978

### Dwell Time

Defines the duration of the individual sweep steps.

**Note:** In case of considerable overrun conditions, the R&S SMBV100B turns off the sweep mode.

See also [Chapter 7.10.4, "Significant parameters and functions"](#), on page 335.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :DWELl` on page 1021

RF level sweep:

`[ :SOURce<hw> ] :SWEep:POWer:DWELl` on page 1019

RF combined sweep:

`[ :SOURce<hw> ] :SWEep:COMBined:DWELl` on page 1026

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :DWELl` on page 976

### Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

`[ :SOURce ] :INPut:TRIGger:SLOPe` on page 951

### Execute Single Sweep

In "Mode = Single", starts a sweep manually.



Remote command:

RF frequency sweep:

[ :SOURce<hw> ] :SWEep [ :FREQuency ] :EXECute on page 1023

:TRIGger<hw>:FSWep [ :IMMediate ] on page 1071

RF level sweep:

[ :SOURce<hw> ] :SWEep:POWer:EXECute on page 1023

:TRIGger<hw>:PSWep [ :IMMediate ] on page 1071

RF combined sweep:

[ :SOURce<hw> ] :SWEep:COMBined:EXECute on page 1026

LF frequency sweep:

[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :EXECute on page 976

:TRIGger<hw>:LFFSweep:IMMediate on page 1071

General:

:TRIGger<hw> [ :SWEep ] [ :IMMediate ] on page 1071



### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

### Reset Sweep

Resets a sweep.

With the next trigger event, the sweep starts at the initial value.

Remote command:

[ :SOURce<hw> ] :SWEep:RESet [ :ALL ] on page 1028

## 7.10.5.2 Frequency range settings

Access:

1. Select for example "RF" > "Sweep/List" > "RF Frequency Sweep"
2. Select for example "Frequency Range".

**Table 7-8: Range settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs**

> "Frequency Range"	> "Frequency / Level Range"



## Settings

Start Frequency/Stop Frequency.....	344
Center Frequency.....	344
Span.....	344
Spacing.....	344
Step Linear/Step Logarithmic.....	345

### Start Frequency/Stop Frequency

Defines the frequency sweep range by setting the start and end values.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Remote command:

RF frequency sweep:

[ :SOURce<hw> ] :FREQuency:STARt on page 949

[ :SOURce<hw> ] :FREQuency:STOP on page 949

RF combined sweep:

[ :SOURce<hw> ] :COMBined:FREQuency:STARt on page 1025

[ :SOURce<hw> ] :COMBined:FREQuency:STOP on page 1025

LF frequency sweep:

[ :SOURce<hw> ] :LFOutput:FREQuency:STARt on page 970

[ :SOURce<hw> ] :LFOutput:FREQuency:STOP on page 970

### Center Frequency

In "RF Frequency Sweep" mode, sets the RF center frequency.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Remote command:

[ :SOURce<hw> ] :FREQuency:CENTer on page 948

### Span

In "RF Frequency Sweep" mode, sets the span of the frequency sweep range.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Remote command:

[ :SOURce<hw> ] :FREQuency:SPAN on page 949

### Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.



Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :SPACing` on page 1022

RF combined sweep: n.a.

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :SPACing` on page 978

### Step Linear/Step Logarithmic

In "RF/LF Frequency Sweep" mode, sets the step width for the individual frequency sweep steps. The value is added at each sweep step to the current frequency.

Depending on the current [Spacing](#), you can enter either an absolute or logarithmic step width.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

"Step Linear" The step width is a constant value in Hz.

"Step Logarithmic"

The step width is determined logarithmically in %, i.e. as a constant fraction of the current frequency.

Remote command:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP [ :LINear ]`  
on page 1024

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP :LOGarithmic`  
on page 1024

`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :STEP [ :LINear ]` on page 979



`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :STEP :LOGarithmic` on page 978

### 7.10.5.3 Level range settings

Access:

1. Select "RF" > "Sweep/List" > "RF Level Sweep"
2. Select for example "Level Range".

**Table 7-9: Range settings dialog: Examples of RF Level and RF Combined Sweep dialogs**
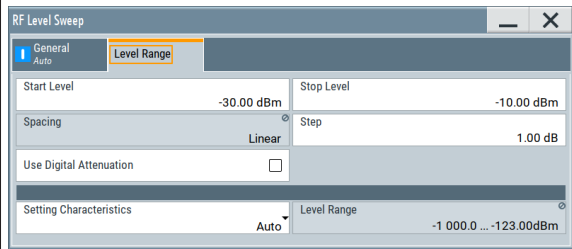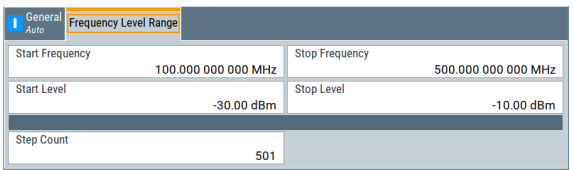
> "Level Range"	> "Frequency / Level Range"
	



## Settings

Start Level / Stop Level.....	346
Step Count.....	346
Spacing.....	346
Step.....	346
Use Digital Attenuation.....	346
Setting Characteristics.....	347
Level Range.....	347

### Start Level / Stop Level

Defines the RF level sweep range by setting the start and end values.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Remote command:

RF level sweep:

`[ :SOURce<hw> ] :POWER:START` on page 1004

`[ :SOURce<hw> ] :POWER:STOP` on page 1004

RF combined sweep:

`[ :SOURce<hw> ] :COMBined:POWER:START` on page 1025

`[ :SOURce<hw> ] :COMBined:POWER:STOP` on page 1026

### Step Count

In "RF Combined Mode", defines the number of sweeps to be executed in [Mode > Single](#).

To start the sweep cycles, select [Execute Single](#).

Remote command:

`[ :SOURce<hw> ] :SWEep:COMBined:COUNt` on page 1026

### Spacing

Indicates that the instrument distributes the level steps linearly (straight proportional), i.e. the level steps have the same size.

To determine the step size, use the parameter [Step](#).

Remote command:

n.a.

### Step

Sets the step width for the RF level sweep in dB.

The "RF level sweep" mode increases or decreases the level value linearly by the set value.

Remote command:

`[ :SOURce<hw> ] :SWEep:POWER:STEP[:LOGarithmic]` on page 1021

### Use Digital Attenuation

Activates digital attenuation during RF level sweep.



**Setting Characteristics**

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto" Sets the RF output level automatically according to the selected mode.  
In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.  
The RF signal is shortly blanked when the step attenuator is switching.

"Uninterrupted" Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.  
This mode reduces the dynamic range of the instrument. The step attenuator is fixed.

**Note:**

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

"Strictly Monotone" Executes signal level changes monotonically increasing or decreasing.  
The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.  
All electronic switches, which can affect the monotonicity are fixed.  
The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.

"Constant-VSWR" Suppresses output impedance variations at the RF output connector, due to changed level settings.

"User" Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

`[ :SOURce<hw> ] :POWer:LBEHaviour` on page 1002

**Level Range**

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

`[ :SOURce<hw> ] :POWer:RANGe:LOWer?` on page 1010

`[ :SOURce<hw> ] :POWer:RANGe:UPPer?` on page 1010



## 7.10.6 List mode settings

The "List Mode" dialog contains all the functions and settings for creating and handling lists with RF frequency/level pairs for generating the RF signal based on these values.

Access:

- Select "RF" > "Sweep/List" > "List mode".

The dialog contains parameters for configuring the list mode processing, entering list mode data and transferring data files from or to the instrument.


The remote commands required to define these settings are described in [Chapter 13.17.11, "SOURce:LIST subsystem"](#), on page 979.

- [General settings](#).....348
- [List mode data settings](#).....350
- [Import/export settings](#).....352

### 7.10.6.1 General settings

Access:

- Select "RF" > "Sweep/List" > "List mode > General".

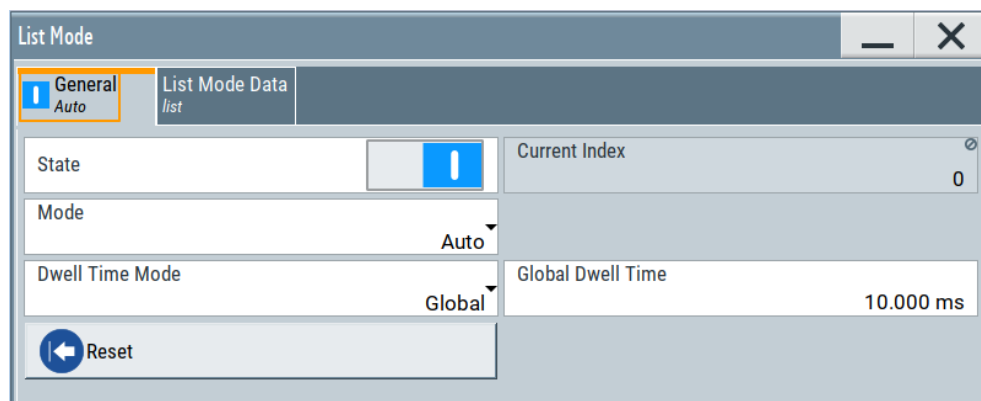

In the "General" tab, you can configure the trigger and dwell time modes for list processing and activate signal generation.

#### Settings

- [State](#).....349
- [Current Index](#).....349
- [Mode](#).....349
- [Dwell Time Mode](#).....349
- [Global Dwell Time](#).....350
- [Trigger Slope](#).....350
- [Show Connector](#).....350
- [Reset](#).....350
- [Execute Single](#).....350



**State**

Activates the list mode and processes the currently selected list.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[ :SOURce<hw> ] :FREQuency:MODE` on page 945

**Current Index**

Sets the list index for list processing in "Step" mode. In the other modes, the index indicates the current step.

Remote command:

`[ :SOURce<hw> ] :LIST:INDEX` on page 984

**Mode**

Selects the mode for list processing.

See [Chapter 7.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 323.

"Auto" Generates the signal by processing the frequency/level value pairs of the list from the beginning to the end.  
The list steps are performed automatically, controlled by the dwell time. If you switch from any mode to "Auto", signal generation always starts at the top of the list.

"Single / Extern Single" Generates the signal by processing the frequency/level value pairs of the list once from the beginning to the end after a trigger event.  
The list steps are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

"Step / Extern Step" Generates the signal by processing the frequency/level value pairs of the list step-by-step, manually triggered.

Remote command:

`[ :SOURce<hw> ] :LIST:TRIGger:SOURce` on page 986

`[ :SOURce<hw> ] :LIST:MODE` on page 985

**Dwell Time Mode**

Selects either variable dwell times or a fixed dwell time to perform signal generation in list mode.

"Global" Uses the same dwell time for all lists steps, set with [Global Dwell Time](#).

"From List" Uses the dwell times from the list.  
You can define the dwell time for each frequency/level value pair individually, see [Chapter 7.10.7, "List editor"](#), on page 354.

Remote command:

`[ :SOURce<hw> ] :LIST:DWELL:MODE` on page 982



**Global Dwell Time**

Sets the dwell time for [Dwell Time Mode](#) > "Global".

**Note:** In case of considerable overrun conditions, the R&S SMBV100B turns off the list mode.

See also "[Dwell time](#)" on page 336.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL](#) on page 982

**Trigger Slope**

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive"            The rising edge of the trigger signal triggers the instrument.

"Negative"           The falling edge of the trigger signal triggers the instrument.

Remote command:

[\[:SOURce\]:INPut:TRIGger:SLOPe](#) on page 951

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Reset**

Resets the list to the starting point.

Remote command:

[\[:SOURce<hw>\]:LIST:RESet](#) on page 989

**Execute Single**

Manually starts list processing in "Single" mode.

Remote command:

[\[:SOURce<hw>\]:LIST:TRIGger:EXECute](#) on page 986


**7.10.6.2 List mode data settings**

Access:

1. Select "RF" > "Sweep/List" > "List mode".



## 2. Select "List Mode Data".

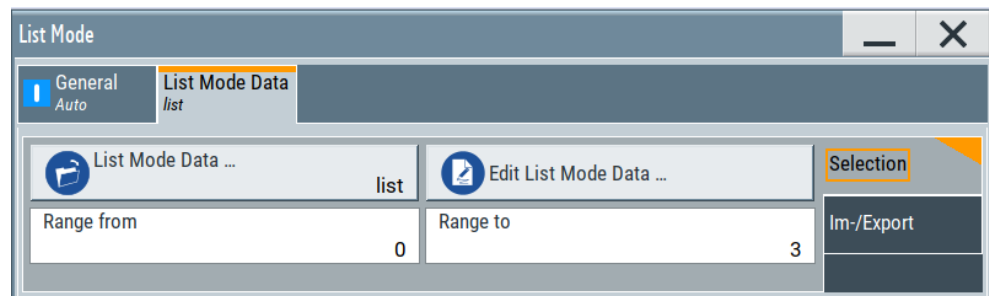

This dialog contains the parameters required for creating and editing lists, activating the learning function and selecting the list processing mode.

**Settings**

List Mode Data.....	351
Edit List Mode Data.....	351
List Range from/to.....	351

**List Mode Data**

Accesses the standard "Select List" dialog for selecting, creating and editing a list file. The currently loaded file is indicated.

You can create data lists with the internal editor or import externally created files, see ["Creating and handling lists"](#) on page 335.

Remote command:

[ :SOURce<hw> ] :LIST:CATalog? on page 987  
 [ :SOURce<hw> ] :LIST:SElect on page 989  
 [ :SOURce<hw> ] :LIST:DElete on page 988  
 [ :SOURce<hw> ] :LIST:DElete:ALL on page 988

**Edit List Mode Data**

Opens the editor to insert and save data lists with RF frequency, power and dwell time values, see [Chapter 7.10.7, "List editor"](#), on page 354.

You find this function also in standard file select dialog, accessed via [List Mode Data](#).

**List Range from/to**

Defines an index range in the current list by setting the start and stop index.

The instrument generates the signal with the values of the selected index range and ignores all other list entries.

Remote command:


[ :SOURce<hw> ] :LIST:INdex:STARt on page 984  
 [ :SOURce<hw> ] :LIST:INdex:STOP on page 984



### 7.10.6.3 Import/export settings

Access:

1. Select "RF" > "Sweep/List" > "List Mode".
2. Select "List Mode Data" > "Im-/Export".

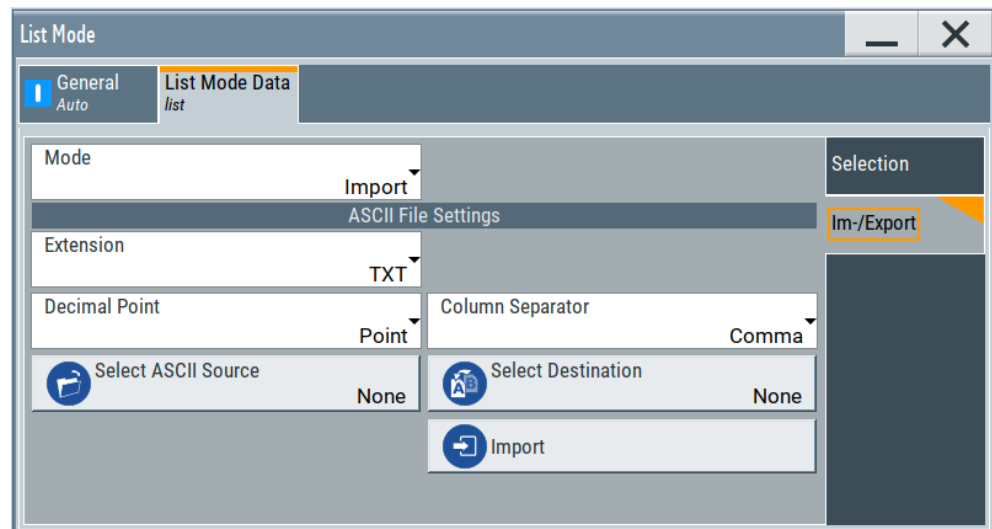

The "Im-/Export" dialog provides the parameters for importing or exporting files with user data in standard ASCII \*.txt or \*.csv file format.

The table separators and the decimal floating point numbers are customizable.

#### Settings

Mode.....	352
ASCII File Settings.....	352
Select (ASCII) Source/Select (ASCII) Destination.....	353
Select Source/Select ASCII Destination.....	353
Import / Export.....	353

#### Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:MODE on page 991

[ :SOURce<hw> ] :CORRection:DEXChange:MODE on page 939

[ :SOURce<hw> ] :PULM:TRAIin:DEXChange:MODE on page 815

#### ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension"      Selects \*.csv or \*.txt format.

"Decimal Point"      Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.



**"Column Separator"**

Sets the separator between the columns in an ASCII table.  
Available are: "Tab", "Semicolon", "Comma" or "Space".

**Remote command:**

`[ :SOURce<hw> ] :LIST:DEXChange:AFILe:EXTension` on page 990  
`[ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:DECimal` on page 991  
`[ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:COLumn` on page 991  
`[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:EXTension` on page 938  
`[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:DECimal`  
on page 939  
`[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:COLumn`  
on page 938  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:EXTension` on page 816  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal`  
on page 816  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn`  
on page 816

**Select (ASCII) Source/Select (ASCII) Destination**

In "Mode > Import", access the file select dialog that provides standard file handling functions.

**Where:**

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

**Remote command:**

`[ :SOURce<hw> ] :LIST:DEXChange:AFILe:CATalog?` on page 990  
`[ :SOURce<hw> ] :LIST:DEXChange:AFILe:SElect` on page 990  
`[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:CATalog?` on page 938  
`[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SElect` on page 938  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:CATalog?` on page 816  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SElect` on page 817

**Select Source/Select ASCII Destination**

In "Mode > Export", access the file select dialog that provides standard file handling functions.

**Where:**

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

**Remote command:**

`[ :SOURce<hw> ] :LIST:DEXChange:SElect` on page 991  
`[ :SOURce<hw> ] :CORRection:DEXChange:SElect` on page 939  
`[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:SElect` on page 817

**Import / Export**

Imports or exports the selected data list file, depending on the current mode.



Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:EXECute on page 990

[ :SOURce<hw> ] :CORRection:DEXChange:EXECute on page 939

[ :SOURce<hw> ] :PULM:TRain:DEXChange:EXECute on page 817

### 7.10.7 List editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- "RF" > "Sweep/List" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.


	Frequency / Hz	Power / dBm	Dwell Time / s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 13.17.11, "SOURce:LIST subsystem"](#), on page 979.



Access to "Edit User Correction Data":

- "RF" > "RF Level" > "User Correction" > "Edit User Cor. Data"

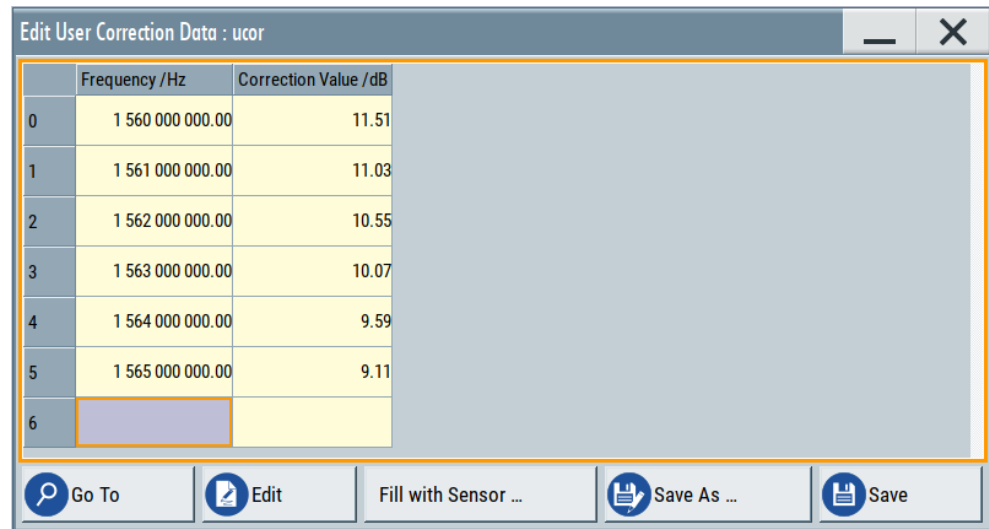

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 13.17.5, "SOURCE:CORRection subsystem"](#), on page 932.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mdoe Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

### Settings

<a href="#">Edit List Mode Data</a> .....	355
<a href="#">Data handling keys</a> .....	356
L <a href="#">Go To</a> .....	356
L <a href="#">Edit</a> .....	356
L <a href="#">Fill with Sensor</a> .....	356
L <a href="#">Save As/Save</a> .....	356
<a href="#">Fill</a> .....	356

### Edit List Mode Data

Table with values for list or user correction processing.

**Note:** Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.



**"Frequency /Hz"**

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 983

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)  
on page 935

**"Power /dBm" (list mode data table)**

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 985

**"Correction Value /dBm" (user correction data table)**

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 935

**"Dwell /s"**

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL:LIST](#) on page 983

**Data handling keys**

Standard functions for file and data handling.

**Go To ← Data handling keys**

Selects a row for editing.

**Edit ← Data handling keys**

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see ["Fill..."](#) on page 356.

**Fill with Sensor ← Data handling keys**

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 7.12.3.3, "Fill with sensor"](#), on page 411

**Save As/Save ← Data handling keys**

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

**Fill...**

Provides parameters for filling a table automatically with user-defined values.



From	0	Range	4
Column To Fill	Frequency /Hz		
Start Value	2.000 000 000 000 GHz	End Value	2.600 000 000 000 GHz
Increment Value	200.000 000 000 MHz		
<input checked="" type="checkbox"/> Fill			

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

### 7.10.8 How to generate a signal in list or sweep mode

This section shows you how to configure a varying RF output signal for both, the list and sweep modes.

#### To configure the frequency sweep signal

1. In the status bar, enter "Freq = 6 GHz" and "Lev = -25 dBm".
2. Select "RF" > "Sweep/List" > "RF Frequency Sweep"
3. Select "Mode > Auto".
4. Select "Spacing > Linear".
5. Set "Dwell Time > 15.0 ms".



6. In the "Frequency Range" tab, set "Start Freq > 200 MHz" and "Stop Freq > 600 MHz".  
(Alternatively you can set "Center Freq > 400 MHz" and "Span > 400 MHz".)
7. Set the step width "Step Lin > 10 MHz" and "Dwell Time > 10.0 ms".
8. In the "Advanced" tab, trigger the sweep "Auto".
9. In the "General" tab, select "State > On".

#### **Example: Fast changing frequency and level settings in list mode**

The following example shows you how to generate an amplitude modulated RF signal based on list mode data.

#### **General workflow**

Since any change of the hardware settings or list entries can affect the RF signal characteristics directly, we recommend that you proceed as follows:

1. Configure the modulation settings.  
Activate the RF signal.
2. Wait until the hardware settings have settled.
3. Create a list file.
4. Configure the list mode.
5. Activate list mode.

#### **To configure amplitude modulation and switch RF on**

1. Press [Preset] to start from an initial state.
2. Select "RF" > "Analog Modulation" > "Amplitude Modulation > On".
3. Select "RF > On" to activate RF signal generation.

#### **To create list mode data**

1. Select "RF" > "Sweep/List" > "List Mode".
2. In the "List Mode Data" tab, select "List Mode Data > New"
3. Enter the filename `ListMode_Test` for the data list and confirm with "Ok".  
The instrument creates a file and stores it in the `/var/user/` directory.
4. Select "Edit List Mode Data".
5. Enter the first values "Frequency > 2", "Power > 0" and "Dwell > 2".
6. Enter further frequency, power and dwell time values in the same way.
7. Select "Save" and close the dialog.



**To configure the list mode and start signal generation**

1. In the "General" tab, select "List Mode > Auto".
2. Select "Dwell Time Mode > From List".
3. Switch state to "On".
4. Select "General > State > On".

The instrument continuously generates an amplitude-modulated RF signal whose frequency and level values change according to the dwell times, as defined in the list.

With active list mode, the generator displays no frequency and level values in the status bar, but you can check the following parameters.

- In the list mode dialog, the current index indicates the steps of the signal generation.
- In remote control mode, you can query:
  - The current state with `[ :SOURce<hw> ] :LIST:RUNning?`
  - Current parameters with the commands `FREQ?`, `POW?` and `LIST:DWEL?`.

## 7.11 Analog modulations

The R&S SMBV100B supports AM (amplitude modulation), FM (frequency modulation),  $\Phi$ M (phase modulation (PhiM)), and also PULM (pulse modulation). It generates low frequency signals (LF) as sine, triangle, trapezoidal or square (pulse) waveform, that can be output and further processed by a downstream instrument.

### 7.11.1 Required options

R&S SMBV100B base unit equipped with the following options:

- Option pulse modulator (R&S SMBVB-K22)
- Option pulse generator (R&S SMBVB-K23)  
(supports generation of single and double pulse signals)
- Option multi-function generator (R&S SMBVB-K24)
- Option pulse train generator (R&S SMBVB-K27)  
(requires R&S SMBVB-K23)
- Option AM/FM/PhiM, up to 6 GHz (R&S SMBVB-K720)
- Option frequency R&S SMBVB-B103

For more information, see data sheet.



### 7.11.2 Modulation types and signal sources

The signal sources for the modulation signal are two internal generators, LF and Noise, and a pulse generator, but you can also use an externally supplied signal, see ["Signal sources"](#) on page 360.

You can perform the AM, FM and PhiM with the signal of any of the provided sources. Even more, you can merge two modulation signals, for example, to generate a two-tone signal. Similarly, you can forward the used modulation signal to the output.

#### Signal sources

If fully equipped, the R&S SMBV100B modulates signals from the following sources:

- **Internal modulation source**
  - *Two LF generators*  
Each of the LF generators provides a modulation signal with sine, pulse, triangle or trapezoid shape.
  - *Noise generator*  
The noise generator supplies white noise with selectable bandwidth and distribution.
  - *High-performance pulse generator*  
Generates single and double pulse, or pulse train signals.
- **External modulation source**
  - Amplitude, frequency or phase modulation signals are input at the Mod Ext connector.
  - Pulse modulation signals, at the Pulse Ext connector.

#### Signal output

You can perform AM, FM and PhiM with the signal of any of the provided sources. Moreover, you can combine two modulation signals and generate a two-tone signal. Regardless of the signal source, the generated signal can be output for further processing in a downstream instrument.

Current configuration is indicated in the "Analog Modulations > Overview" dialog; the output signal routing can be changed, too.

#### Input and output connectors

Direction	Modulation	Connector	Required option
Output	Pulse modulation from internal signal Loop through of pulse signal from Pulse Ext	Pulse Video	R&S SMBVB-K22/-K23
	All analog modulations Marks the valid level and frequency	Signal Valid	
	LF generator	LF	



Direction	Modulation	Connector	Required option
Input	AM, FM, PhiM	Mod Ext **)	R&S SMBVB-K720
	Pulse modulation from external source*) Or External trigger or gate signal*)	Pulse Ext**)	R&S SMBVB-K22

- \*) External trigger signal and external signal for the pulse modulation cannot be used simultaneously, because these signals are expected at the same connector Pulse Ext. Signal polarity and impedance are the same for both signals.
- \*\*) The external modulation signal must have a voltage of  $U_S = 1\text{ V}$  ( $U_{EFF} = 0.707\text{ V}$ ) to achieve the displayed modulation depth and range.  
Note that the input voltage does not exceed 1 V, otherwise modulation distortions can occur.

For more information, see data sheet.

### Interactions and characteristics

- Some modulations exclude each other and cannot be performed simultaneously.

For more information, see data sheet.

- The settings of the modulation signal affect all analog modulations that use an internal modulation source.
- In sweep mode, LF frequency sweep is possible.
- An activated analog modulation automatically turns off:
  - I/Q modulation,
  - Arbitrary waveform generation,
  - Digital modulation and
  - Digital standards.

## 7.11.3 Activating analog modulations

- Use one of the following:
  - Select "RF > Amplitude Modulation/Frequency Modulation/Phase Modulation > State > ON".
  - Select "Mod Off > Modulation On".
  - Press the [Mod on/off] key.

### [Mod on/off]

Activate one or more analog modulations and press the [Mod on/off] key to toggle the state of them all.

Pressing the key again restores the status that was active before the last switch-off.

Remote command:

`[ :SOURce<hw> ] :MODulation [ :ALL ] [ :STATe ]` on page 792



7.11.4 Modulation settings

Access:

- ▶ Select "RF" > "Analog Modulation" > "Modulation Source".

The "Modulation" dialog contains all functions and settings to configure the analog modulations, the LF signal sources for performing a modulation, and the LF signal output.

The remote commands required to define these settings are described in:


- [Chapter 13.17.3.2, "SOURce:AM subsystem"](#), on page 792
- [Chapter 13.17.3.3, "SOURce:FM subsystem"](#), on page 797
- [Chapter 13.17.3.4, "SOURce:PM subsystem"](#), on page 802
- [Chapter 13.17.3.5, "SOURce:PULM subsystem"](#), on page 806
- [Chapter 13.17.10, "SOURce:LFOutput subsystem"](#), on page 966

7.11.4.1 Pulse modulation settings

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

Access:

- ▶ Select "RF" > "Analog Modulation" > "Pulse Modualtion".

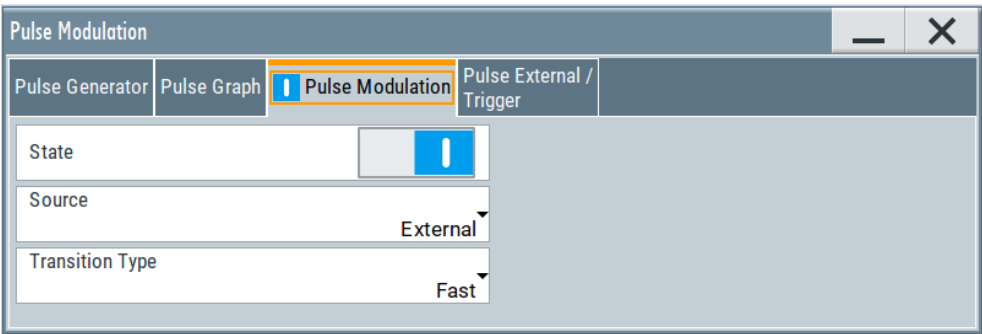

The "Pulse Modulation" dialog contains all parameters required to configure pulse modulation and pulse signal generation. It also displays the pulse signal graphically.

For an overview of the supported signals sources and related connectors, see [Chapter 7.11.2, "Modulation types and signal sources"](#), on page 360.

The remote commands required to define these settings are described in [Chapter 13.17.3.5, "SOURce:PULM subsystem"](#), on page 806.

Settings:

<a href="#">State</a> .....	363
<a href="#">Source</a> .....	363
<a href="#">Transition Type</a> .....	363



**State**

Activates pulse modulation and triggers the following automatic settings:

- Pulse generator is activated.  
The signal is output at the Pulse Video connector.  
To deactivate the signal output, set "Pulse Generator" > [Pulse Output State](#) > "Off".

Remote command:

[ :SOURce<hw> ] :PULM:STATe on page 810

**Source**

Selects between the internal "Pulse Generator" or an "External" pulse signal for the modulation.

"Pulse Generator"

Selects the internal generator.

See [Pulse generator settings](#).

"External"

Modulation source is fed to the input connector.

See ["Signal sources"](#) on page 360.

Remote command:

[ :SOURce<hw> ] :PULM:SOURce on page 810

**Transition Type**

Selects between "Fast" or "Smoothed" slew rate (slope).

"Fast"

Enables fast transitions with shortest rise and fall times.

"Smoothed"

Flattens the slew rate, resulting in longer rise / fall times. Use this mode if you are working with devices that are sensitive to steep slopes.

Remote command:

[ :SOURce<hw> ] :PULM:TTYPe on page 811

**7.11.4.2 FM, PhiM and AM modulation settings**

Option: R&S SMBVB-K720



Access:

- Select "RF" > "Analog Modulation" > "Amplitude Modulation/Frequency Modulation/Phase Modulation".

The "FM", "Φ" and "AM" tabs contain the parameters per modulation type.

### Source

State.....	364
Source.....	365
FM settings.....	365
L Deviation.....	365
L Deviation Mode.....	365
L Total Deviation.....	366
L Ratio Path2/Path1.....	366
L Mode.....	366
PhiM settings.....	366
L Deviation.....	366
L Deviation Mode.....	367
L Total Deviation.....	367
L Ratio Path2/Path1.....	367
L Mode.....	367
AM settings.....	368
L Depth.....	368
L Sensitivity.....	368
L Deviation Mode.....	368
L Total Depth.....	369
L Ratio Path2/Path1.....	369

### State

Activates a modulation.

**Note:** Some modulations exclude each other and cannot be performed simultaneously. For more information, see data sheet.



Remote command:

[ :SOURce<hw> ] :AM<ch> :STATe on page 794

[ :SOURce<hw> ] :FM<ch> :STATe on page 799

[ :SOURce<hw> ] :PM<ch> :STATe on page 803

### Source

Selects the LF signal source.

You can vary the signal sources for each of the modulations.

"LF Generator 1/2"

Selects one or both of the internally generated LF signals.

See "[Source > LF generator settings](#)" on page 384.

"External"

Selects an externally supplied LF signal.

"Noise Generator"

Selects the internally generated noise signal.

See "[Source > noise generator settings](#)" on page 389.

Remote command:

[ :SOURce<hw> ] :AM<ch> :SOURce on page 795

[ :SOURce<hw> ] :FM<ch> :SOURce on page 799

[ :SOURce<hw> ] :PM<ch> :SOURce on page 804

### FM settings

The following settings are dedicated to FM.

#### Deviation ← FM settings

Sets the frequency modulation deviation in Hz.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

[ :SOURce<hw> ] :FM<ch> [:DEViation] on page 799

#### Deviation Mode ← FM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The total deviation is the sum of both paths. When the sum is exceeded, the R&S SMBV100B reports a settings conflict, but does not change the settings.

"Uncoupled" Enables you to adjust the deviation for each path independently.

"Fixed Total" Couples the deviation of both paths in per Hz. If you change the deviation of any path, the R&S SMBV100B automatically adjusts the value of the other path. The sum always results in the set [Total Deviation](#).



"Fixed Ratio" Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMBV100B adjusts the value of the other path.

Remote command:

`[ :SOURce<hw> ] :FM:DEVIation:MODE` on page 800

#### **Total Deviation ← FM settings**

Sets the sum of the signal deviation for path 1 and path 2 in Hz when using combined sources in [Deviation Mode > Fixed Total](#).

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviation of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

`[ :SOURce<hw> ] :FM:DEVIation:SUM` on page 800

#### **Ratio Path2/Path1 ← FM settings**

Sets the deviation ratio (path2 to path1) in percent.

#### **Example:**

If the deviation in path1 is 10 kHz and the ratio is 50%, the deviation in path 2 is automatically set to 5 kHz.

Remote command:

`[ :SOURce<hw> ] :FM:RATio` on page 801

#### **Mode ← FM settings**

Selects the mode of the frequency modulation.

"High Bandwidth"

The maximum range for modulation bandwidth is available.

"Low Noise"

Phase modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

Remote command:

`[ :SOURce<hw> ] :FM:MODE` on page 801

#### **PhiM settings**

The following settings are dedicated to PhiM.

#### **Deviation ← PhiM settings**

Sets the phase modulation deviation in radians or degrees.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.



A warning message indicates this situation, too.

Remote command:

`[ :SOURce ] : PM <ch> [ :DEViation ]` on page 806

#### **Deviation Mode ← PhiM settings**

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum 2 rad at a maximum. When the sum is exceeded, the R&S SMBV100B adjusts the settings automatically.

- |               |   |
|---------------|---|
| "Uncoupled"   | Enables you to adjust the deviation for each path independently.  |
| "Fixed Total" | Couples the deviation of both paths. If you change the deviation of any path, the R&S SMBV100B automatically adjusts the value of the other path. The sum always results in the set <a href="#">Total Deviation</a> . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMBV100B adjusts the value of the other path.   |

Remote command:

`[ :SOURce <hw> ] : PM : DEViation : MODE` on page 805

#### **Total Deviation ← PhiM settings**

In [Deviation Mode = Fixed Total](#), sets the sum of the signal deviation for path 1 and path 2.

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviations of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

`[ :SOURce <hw> ] : PM : DEViation : SUM` on page 805

#### **Ratio Path2/Path1 ← PhiM settings**

Sets the deviation ratio (path2 to path1) in per cent.

#### **Example:**

If the deviation in path1 is 10 rad and the ratio is 50%, the deviation in path 2 is automatically set to 5 rad.

Remote command:

`[ :SOURce <hw> ] : PM : RATio` on page 805

#### **Mode ← PhiM settings**

Selects the mode of the phase modulation.



**"High Bandwidth"**

The maximum range for modulation bandwidth and PhiM deviation is available.

However, phase noise increases at low frequencies, and the range of PhiM deviation is limited. This mode is suitable if you process high frequencies.

**"High Deviation"**

The maximum range for PhiM deviation is available.

Phase noise is improved for low frequencies compared to the default mode. The range for modulation frequency is limited (see data sheet). This mode is suitable for low modulation frequencies and/or high PhiM deviation.

**"Low Noise"**

Frequency modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

Remote command:

`[ :SOURce<hw> ] :PM:MODE` on page 804

**AM settings**

The following settings are dedicated to AM.

**Depth ← AM settings**

Determines the depth of the modulation signal in percent.

The depth is limited by the maximum peak envelope power (PEP).

Remote command:

`[ :SOURce<hw> ] :AM<ch> [ :DEPTTh ]` on page 795

**Sensitivity ← AM settings**

Sets the input sensitivity of the external modulation signal.

Remote command:

`[ :SOURce<hw> ] :AM<ch>:SENSitivity` on page 796

**Deviation Mode ← AM settings**

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum of both paths is 100% in total. When the sum is exceeded, the R&S SMBV100B reports a settings conflict, but does not change the settings.

**"Uncoupled"** Enables you to adjust the deviation depth for each path independently.

**"Fixed Total"** Couples the deviation depth of both paths in per cent. If you change the depth of any path, the R&S SMBV100B automatically adjusts the value of the other path. The sum always results in the set [Total Depth](#).

**"Fixed Ratio"** Couples the deviation ratio of both paths. If you change the depth of any path, the R&S SMBV100B adjusts the value of the other path.



Remote command:

`[ :SOURce<hw> ] :AM:DEVIation:MODE` on page 796

#### **Total Depth ← AM settings**

Sets the sum of the signal [Depth](#) for path 1 and path 2 in per cent when using combined sources and [Deviation Mode > Fixed Total](#).

Using external LF signals, the R&S SMBV100B indicates the [Sensitivity](#) per Volts for the input signal.

Provided both signal paths are turned on, the depth of both paths always sum up to the value of the total depth.

Behavior when changing any depth settings:

- Changing the total depth adjusts the depths of both paths proportionally.
- Changing the depth of one path adjusts the depth of the other path. The sum always results in the set total depth.

Remote command:

`[ :SOURce<hw> ] :AM:DEPTh:SUM` on page 795

#### **Ratio Path2/Path1 ← AM settings**

Sets the deviation ratio of the signal depth for path 2 to path 1 in per cent when using combined sources.

Using external LF signals, the R&S SMBV100B indicates the [Sensitivity](#) per Volts for the input signal.

Remote command:

`[ :SOURce<hw> ] :AM:RATio` on page 796


### **7.11.4.3 Pulse generator settings**

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

Access:

- Select "RF" > "Analog Modulation" > "Pulse Generator".



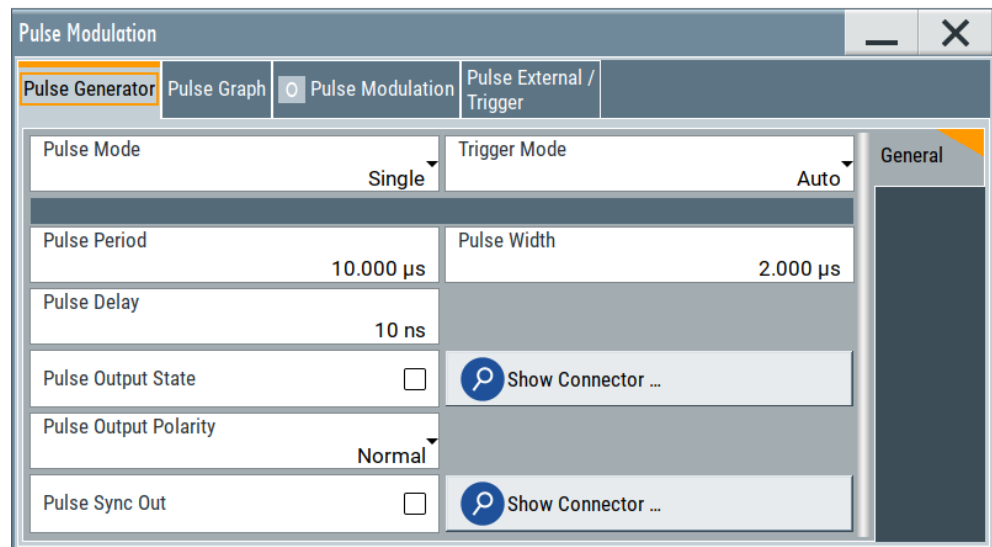

The "Pulse Generator" tab contains the settings for creating the pulse modulation signal internally.

- [Pulse generator > general settings](#)..... 370
- [Pulse generator > pulse train settings](#)..... 376
- [Import/export list files](#)..... 379

### Pulse generator > general settings

Access:

- Select "RF" > "Analog Modulation" > "Pulse Generator".

### Settings

<a href="#">Pulse Mode</a> .....	370
<a href="#">Trigger Mode</a> .....	372
<a href="#">Pulse Period</a> .....	374
<a href="#">Pulse Width</a> .....	374
<a href="#">Double Pulse Width</a> .....	375
<a href="#">Pulse Delay</a> .....	375
<a href="#">Double Pulse Delay</a> .....	375
<a href="#">Pulse Output State</a> .....	375
<a href="#">Show Connector</a> .....	375
<a href="#">Pulse Output Polarity</a> .....	375
<a href="#">Execute Single Trigger</a> .....	375
<a href="#">Pulse Sync Out</a> .....	375


### Pulse Mode

Sets the operating mode of the pulse generator. Depending on the selection, the instrument displays the associated parameters.



"Single"


Generates a single pulse in one pulse period.

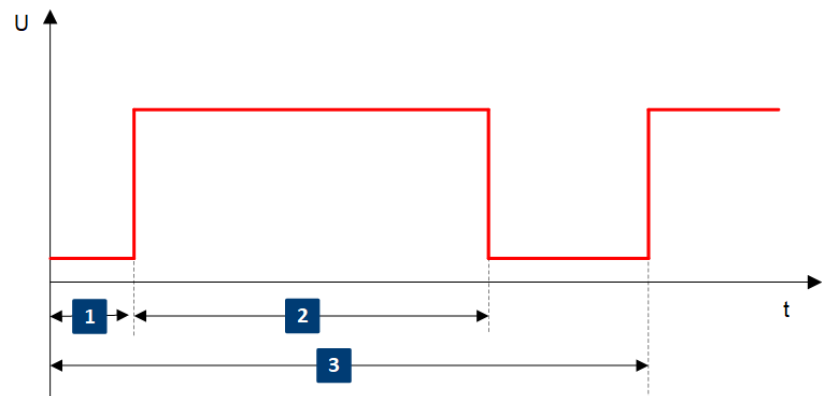

- 1 = Pulse delay
- 2 = Pulse width
- 3 = Pulse period

"Double"

Generates two pulses in one pulse period.

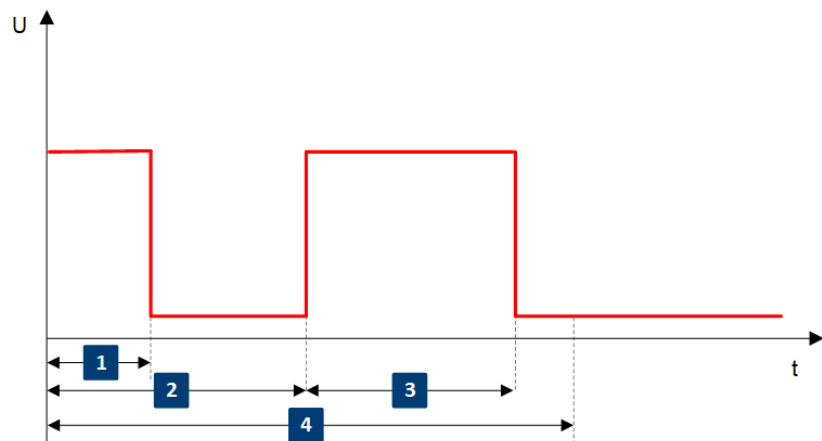


- 1 = Pulse width
- 2 = Double pulse delay
- 3 = Double pulse width
- 4 = Pulse period



**"Train"**

Option: R&amp;S SMBVB-K27

Generates a user-defined pulse train.

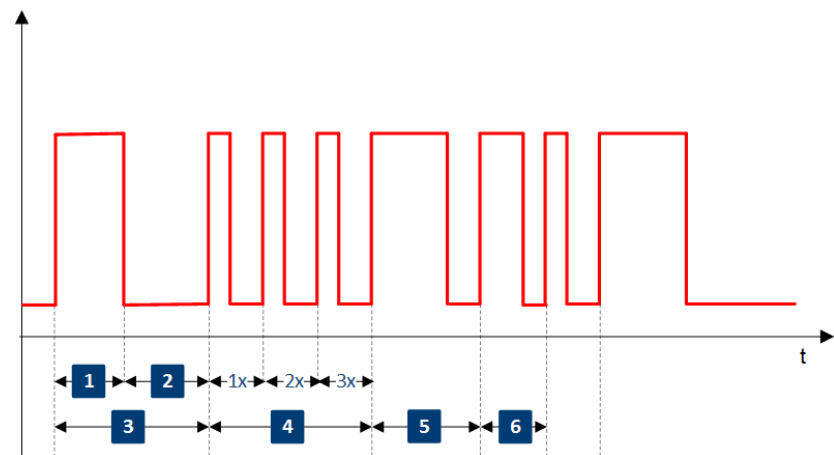

- 1 = 1st pulse: On-time
- 2 = 1st pulse: Off-time
- 3 = 1st pulse: pulse period
- 4 = 2nd pulse: repeated 3 times
- 5 = 3rd pulse
- 6 = 4th pulse

See ["Pulse generator > pulse train settings"](#) on page 376.

Remote command:

[\[:SOURce<hw>\]:PULM:MODE](#) on page 808**Trigger Mode**

Selects between continuous triggering or triggering initiated by a trigger event from an external signal.

See also ["Input and output connectors"](#) on page 360.**"Auto"** Generates the internal modulation signal continuously.**"Single"** The pulse generator is triggered by an internal trigger event, initiated with [Execute Single Trigger](#).


The pulse signal is generated once.

**"Ext Single"** Generates a single pulse signal, triggered by an external signal.




"Ext Triggered" Generates the pulse signal each time an external trigger event occurs.

**Example: Generation of single pulse signal ("Pulse Mode = Single") using "Trigger Mode = Ext Triggered"**

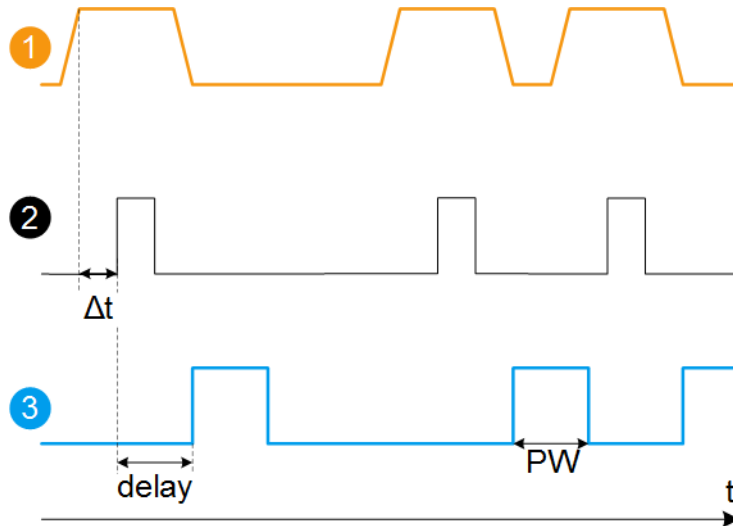

- 1 = External trigger signal input with "Trigger Input Polarity = Normal" (the positive slope is active)
- 2 = Sync signal
- 3 = Pulse signal
- $\Delta t$  = Trigger delay between the trigger and the sync signal start; see data sheet
- delay = "Pulse Delay = 100 ns"
- PW = "Pulse Width = 100 ns"

**Example: Generation of double pulse signal ("Pulse Mode = Double") using "Trigger Mode = Ext Triggered"**

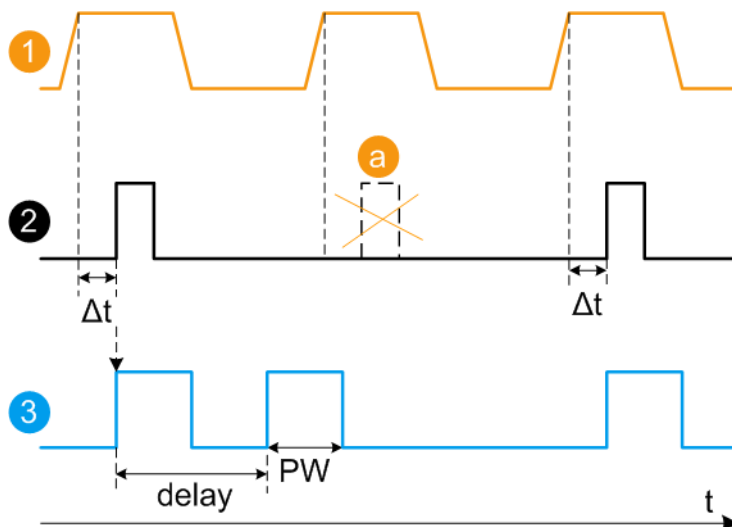

- 1 = External trigger signal input with "Trigger Input Polarity = Normal" (the positive slope is active)
- 2 = Sync signal




- 3 = Pulse signal
- a = Trigger signal during double pulse generation is without effect
- $\Delta t$  = Trigger delay between the trigger and the sync signal start; see data sheet
- delay = "Double Pulse Delay = 200 ns"; the first pulse starts without a delay
- PW = "Double Pulse Width = 100 ns"

"Ext Gated"

Generates the signal triggered by an external gate signal.

**Example: Generation of single pulse signal ("Pulse Mode = Single") using "Trigger Mode = Ext Gated"**

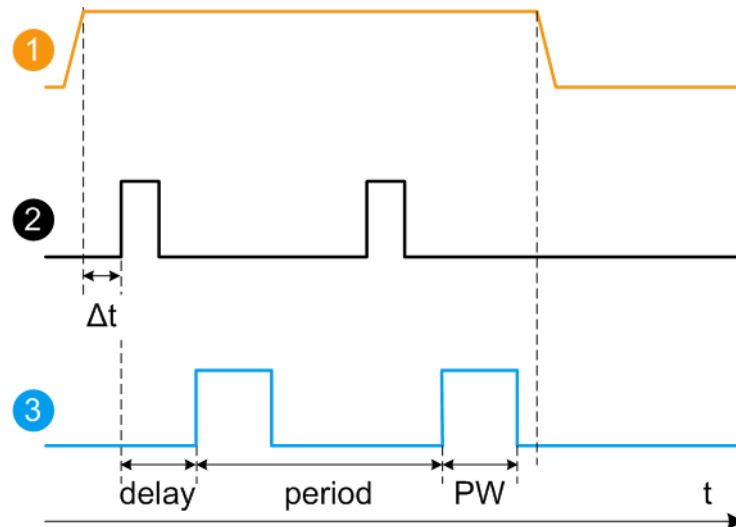

- 1 = External trigger signal input with "Trigger Input Polarity = Normal" (the positive slope is active)
- 2 = Sync signal
- 3 = Pulse signal
- $\Delta t$  = Trigger delay between the trigger and the sync signal start; see data sheet
- delay = "Pulse Delay = 100 ns"
- PW = "Pulse Width = 100 ns"
- period = "Pulse Period = 300 ns" (time between the pulse start of two consecutive pulses)
- a = Gate active duration (pulses are generated during the gate active part)

Remote command:

`[ :SOURce<hw> ] :PULM:TRIGger:MODE` on page 808

#### Pulse Period

Sets the repetition rate of the generated pulse signal.

Remote command:

`[ :SOURce<hw> ] :PULM:PERiod` on page 809

#### Pulse Width

Sets the pulse duration of the generated pulse signal.

**Note:** The pulse width must be at least 20 ns less than the set pulse period.

Remote command:

`[ :SOURce<hw> ] :PULM:WIDTh` on page 809



**Double Pulse Width**

Sets the width of the second pulse.

Remote command:

`[ :SOURce<hw> ] :PULM:DOUBle:WIDTh` on page 810

**Pulse Delay**

Sets the pulse delay. The pulse delay determines the time that elapses after a trigger event before pulse modulation starts. The pulse delay is not effective for double pulse generation.

Remote command:

`[ :SOURce<hw> ] :PULM:DELaY` on page 809

**Double Pulse Delay**

Sets the delay from the start of the first pulse to the start of the second pulse.

Remote command:

`[ :SOURce<hw> ] :PULM:DOUBle:DELaY` on page 810

**Pulse Output State**

Activates the output of the pulse modulation signal.

Remote command:

`[ :SOURce<hw> ] :PGENerator:OUTPut [ :STATe ]` on page 996

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Pulse Output Polarity**

Sets the polarity of the pulse output signal.

Remote command:

`[ :SOURce<hw> ] :PGENerator:OUTPut:POLarity` on page 995

**Execute Single Trigger**

If "Trigger Mode = Single", initiates a single pulse sequence manually.

Remote command:

`[ :SOURce ] :PULM [ :INTernal ] [ :TRAIIn ] :TRIGger:IMMediate` on page 809

**Pulse Sync Out**

Assigns the pulse synchronization signal to the [Signal Valid] connector at the rear panel.

- |           |  |
|-----------|--|
| "checked" | Sets the validity of the RF signal at the output: <ul style="list-style-type: none"> <li>• <b>high:</b> while the signal settles.</li> <li>• <b>low:</b> when it is stable (valid).</li> </ul> |
| "cleared" | Generates a single pulse at the beginning of a pulse sequence, e.g. to synchronize pulse modulation.   |



Remote command:


[ :SOURce<hw> ] :PULM:OUTPut:SYNC [ :STATe ] on page 811

### Pulse generator > pulse train settings

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

Access:

1. Select "RF" > "Analog Modulation" > "Pulse Generator" > **"Pulse Mode = Train"**.

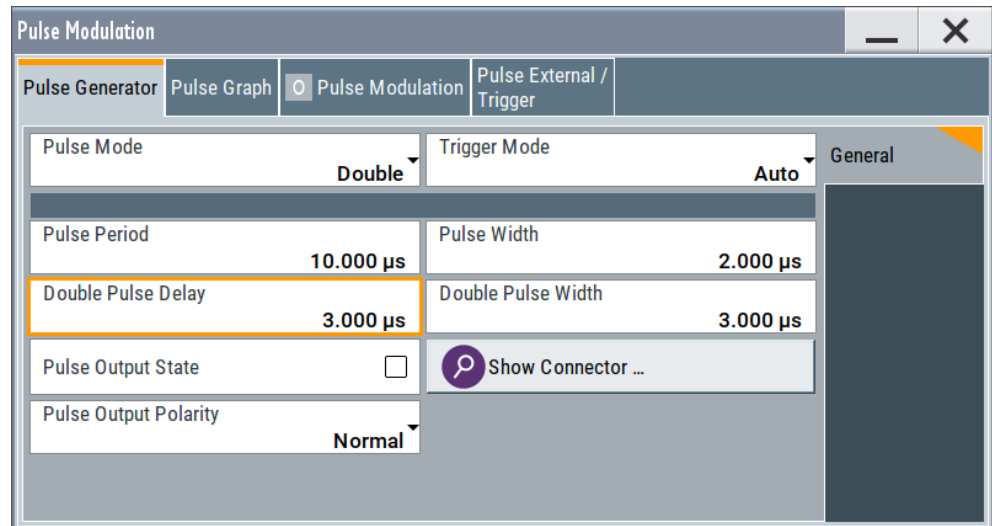

2. Select "Pulse Train Data".
3. Select an existing file or select "New" to create one.
4. Define the filename.  
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
5. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.
6. Select "Save".

A pulse train is a sequence of pulses with user-defined repetition, and pulse on and off times. Once defined, pulse train settings can be saved in a file. The filename is user-definable; the file extension (\*.pulstrn) is assigned automatically.

When a file is selected, the filename is indicated.

### Possible ways to configuring a pulse train

You can configure a pulse train in the following ways:

- **Internally**
  - Use the built-in editor table editor, see in the "Pulse Generator > Pulse Train" dialog.



Once defined, pulse train settings can be saved in a file. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.

The filename is user-definable; the file extension is `*.pulstrn`.

- Using the corresponding remote-control commands.

Note that you have to create a pulse train file first.

- **Externally**

Create a pulse train sequence as a CSV file with Microsoft Excel, with a Notepad or a similar tool, save it with the predefined extension. Transfer the file to and load it into the instrument.

### Pulse train ASCII file format

Files describing pulse trains are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is `*.csv` or `*.txt`.

The file contains a list of pulse definition values, one row per pulse; a new line indicator separates the pulses. Pulses are defined with their pulse on time, pulse off time given in us and number of repetitions.

#### Example: Pulse train file content (\*.txt file)

```
0.0001,0.0005,2
0.00025,0.0005,1
0.0001,0.0003,3
```

For file handling, use the standard functions in the "File Manager", see [Chapter 10.8, "Using the file manager"](#), on page 529.

### Settings

<a href="#">Pulse Train Data</a> .....	377
<a href="#">Edit Pulse Train Data</a> .....	378
<a href="#">Data handling keys</a> .....	378
L <a href="#">Go To</a> .....	378
L <a href="#">Edit</a> .....	378
L <a href="#">Save As/Save</a> .....	378
<a href="#">Fill</a> .....	378

### Pulse Train Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Pulse train files are files with predefined file extension `*.pulstrn`. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file `*.pulstrn` > Select"
- Use the general editor function to create internally new file or to edit an existing one.
- Use the standard file manager function to load externally created files to the instrument.



Remote command:

[ :SOURce<hw> ] :PULM:TRAI:n:CATalog? on page 813

[ :SOURce<hw> ] :PULM:TRAI:n:SElect on page 815

[ :SOURce<hw> ] :PULM:TRAI:n:DElete on page 813

### Edit Pulse Train Data

Accesses the build-in table editor to define a new pulse train file or edit an existing one.

"On-Time,  $\mu$ s/Off-Time, $\mu$ s"

Sets the pulse on and pulse off time.

"Count"

Sets the number of repetitions of an "On-/ Off-Time" value pair.

Pulses with "Count = 0" are ignored.

Use this method to skip value pairs temporarily, without deleting them from the table.

Remote command:

[ :SOURce<hw> ] :PULM:TRAI:n:ONTime on page 814

[ :SOURce<hw> ] :PULM:TRAI:n:OFFTime on page 814

[ :SOURce<hw> ] :PULM:TRAI:n:REPetition on page 814

[ :SOURce<hw> ] :PULM:TRAI:n:DElete on page 813

### Data handling keys

Standard functions for file and data handling.



**Note:** Save a list only after filling both columns (frequency and level), otherwise the entries are lost.

#### Go To ← Data handling keys

Selects a row for editing.

#### Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling.

See "Fill..." on page 356.

#### Save As/Save ← Data handling keys

Saves the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

#### Fill...

Provides parameters for filling a table automatically with user-defined values.



From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

### Import/export list files

Access:

1. Select one of the following:

- "RF" > "Sweep/List" > "List mode".
- "RF" > "RF Level" > "User Correction".
- "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".



2. Select "Import/Export".

Figure 7-18: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats `*.txt` (ASCII), or `*.csv` (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

## Settings

Mode.....	380
ASCII File Settings.....	380
Select (ASCII) Source/Select (ASCII) Destination.....	381
Select Source/Select ASCII Destination.....	381
Import / Export.....	381

### Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

`[ :SOURCE<hw> ] :LIST:DEXChange:MODE` on page 991  
`[ :SOURCE<hw> ] :CORRection:DEXChange:MODE` on page 939  
`[ :SOURCE<hw> ] :PULM:TRAIIn:DEXChange:MODE` on page 815

### ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension"	Selects <code>*.csv</code> or <code>*.txt</code> format.
"Decimal Point"	Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.
"Column Separator"	Sets the separator between the columns in an ASCII table. Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

`[ :SOURCE<hw> ] :LIST:DEXChange:AFIle:EXTeNsion` on page 990  
`[ :SOURCE<hw> ] :LIST:DEXChange:AFIle:SEParator:DECimal` on page 991



[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SEParator:COLumn](#) on page 991  
[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:EXTension](#) on page 938  
[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:DECimal](#)  
 on page 939  
[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:COLumn](#)  
 on page 938  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:EXTension](#) on page 816  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal](#)  
 on page 816  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn](#)  
 on page 816

### Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:CATalog?](#) on page 990  
[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SElect](#) on page 990  
[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:CATalog?](#) on page 938  
[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SElect](#) on page 938  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:CATalog?](#) on page 816  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SElect](#) on page 817

### Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:SElect](#) on page 991  
[\[:SOURce<hw>\]:CORRection:DEXChange:SElect](#) on page 939  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:SElect](#) on page 817

### Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:EXECute](#) on page 990  
[\[:SOURce<hw>\]:CORRection:DEXChange:EXECute](#) on page 939  
[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:EXECute](#) on page 817




#### 7.11.4.4 Pulse graph settings

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

Access:

- Select "RF" > "Analog Modulation" > "Pulse Modulation > Pulse Graph".

The pulse graph is the graphical representation of the current pulse signal.

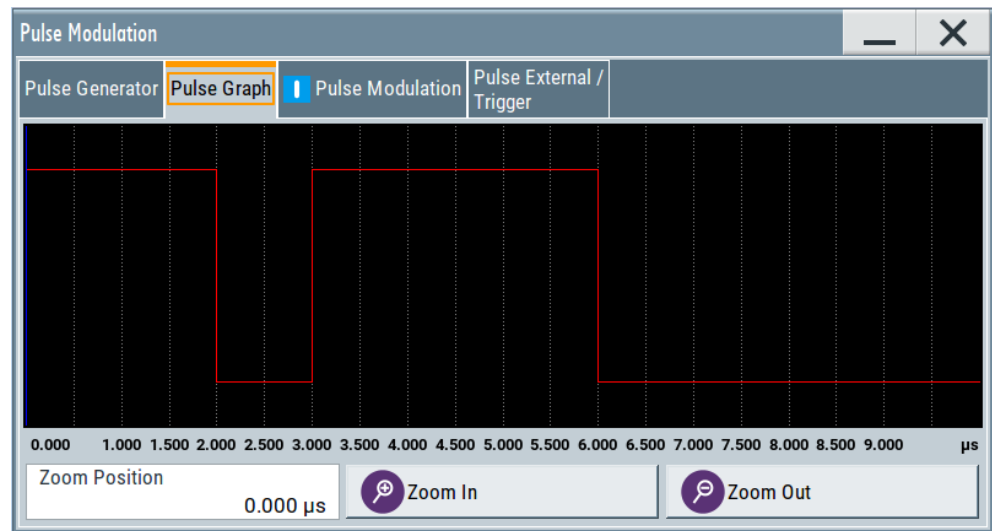

The height of the bars corresponds to the selected amplitude of the pulse signal.

#### File Name

Indicates the name of the pulse train data file.

To create or select a file, see ["Pulse Train Data"](#) on page 377.

Remote command:

`[ :SOURCE<hw> ] :PULM:TRAI:n:SElect` on page 815

#### Zooming

You can zoom into the diagram to visualize the graph in more detail:


- "Zoom Position": Sets the focus on the time axis where to enlarge the graph.
- "Zoom In": Enlarges the graph at the selected position.
- "Zoom Out" for the reverse operation.



#### 7.11.4.5 Pulse external /Trigger settings

Access:

- Select "RF" > "Analog Modulation" > "Pulse Modulation > Pulse External /Trigger".

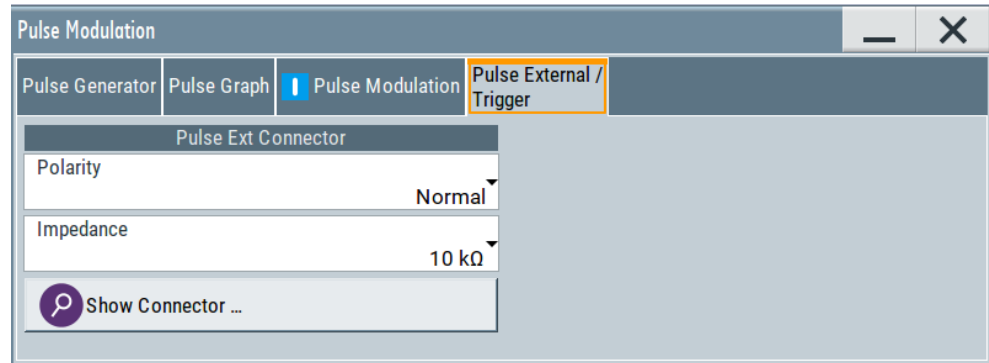

The dialog comprises the characteristics of the Pulse Ext connector. This connector is common for the pulse generator and the pulse modulator. For an overview, see ["Input and output connectors"](#) on page 360.

#### Settings

<a href="#">Polarity</a> .....	383
<a href="#">Impedance</a> .....	383
<a href="#">Show Connector</a> .....	383

#### Polarity

Sets the polarity of the active slope of a pulse input signal, that is the external pulse modulation signal.

Remote command:

[\[:SOURce<hw>\]:PULM:POLarity](#) on page 811

#### Impedance

Sets the input impedance.

Remote command:

[\[:SOURce<hw>\]:PULM:IMPedance](#) on page 812



#### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).



#### 7.11.4.6 FM, PhiM and AM modulation sources

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source..."


In the "Sources" tab, you can configure an LF modulation signal for performing analog modulations. It includes the setting parameters of the internal LF- and multi-function generators, the noise generator, and an external signal source.

- [Source > LF generator settings](#).....384
- [Source > external settings](#).....388
- [Source > noise generator settings](#).....389

#### Source > LF generator settings

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > LF Generator".

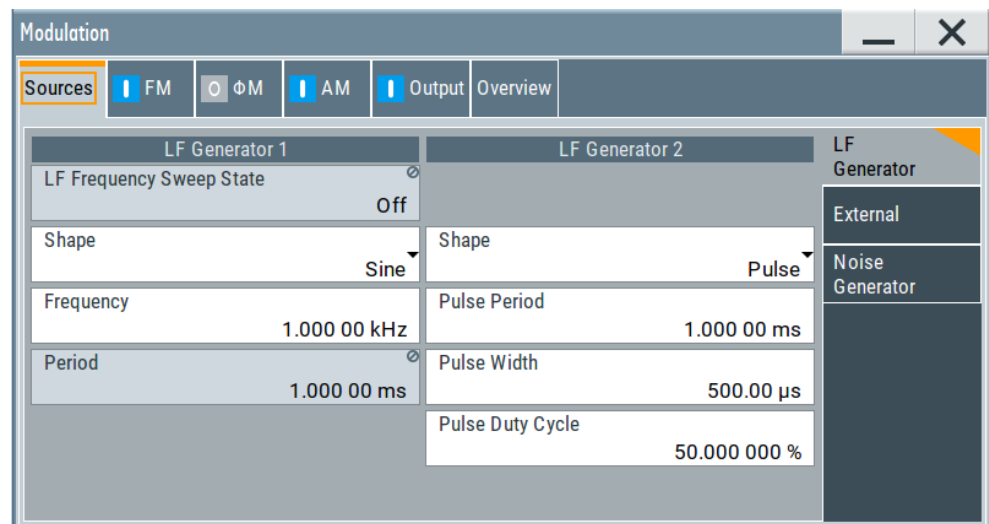

The internal LF signal can be used as modulation signal source for any of the analog modulations. The LF signal applies to all modulations which use the internal modulation signal. Therefore, any modification of the LF signal influences immediately all currently active modulations.

#### Settings

- [State \(LF frequency sweep\)](#).....385
- [Shape](#).....385
- [Frequency](#).....387
- [Period](#).....387
- [Pulse Width](#).....387
- [Pulse Duty Cycle](#).....387



Triangle Rise.....	388
Trapezoid Rise / Fall.....	388
Trapezoid High.....	388

### State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.  
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:


`[ :SOURce<hw> ] :LFOutput:FREQuency:MODE` on page 970

### Shape

Option: R&S SMBVB-K24.


Selects the waveform shape of the LF generator signal.

"Sine"

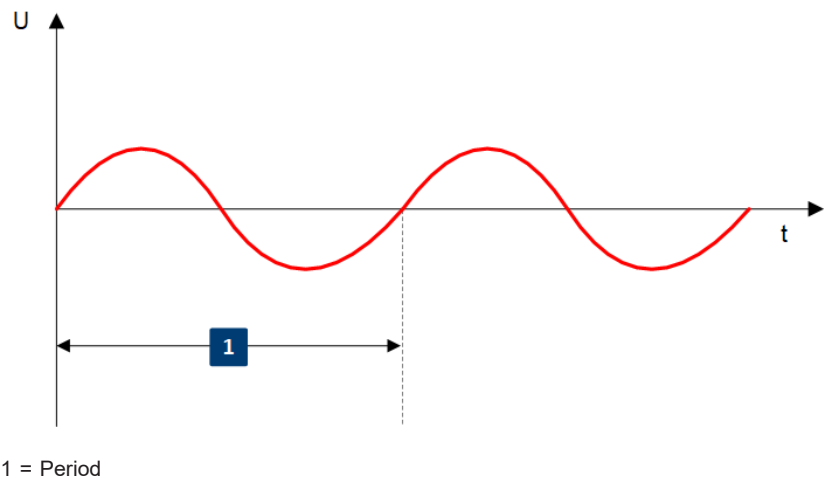




"Square"

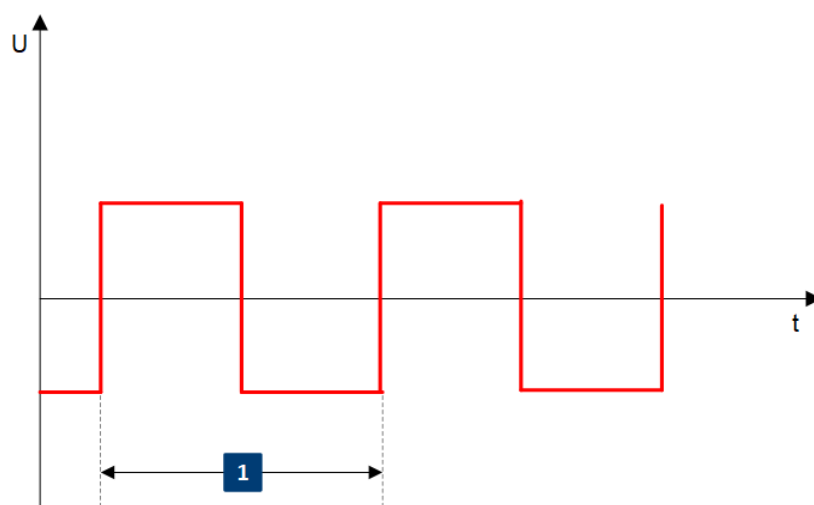


1 = Period


"Pulse"

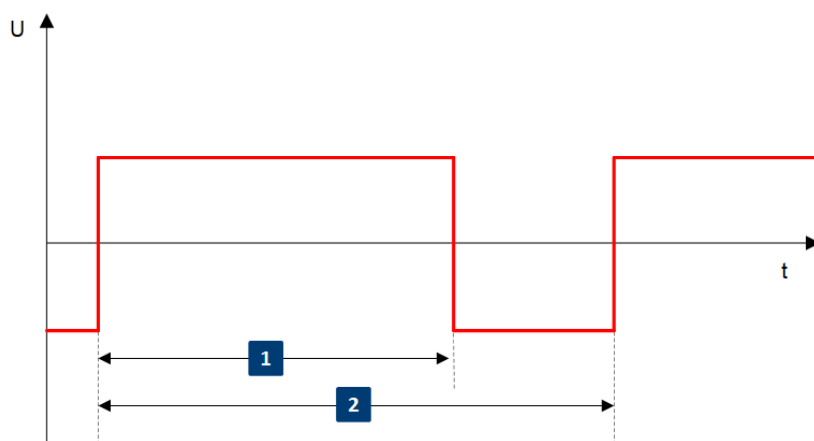1 = Pulse width  
2 = Pulse period

"Triangle"

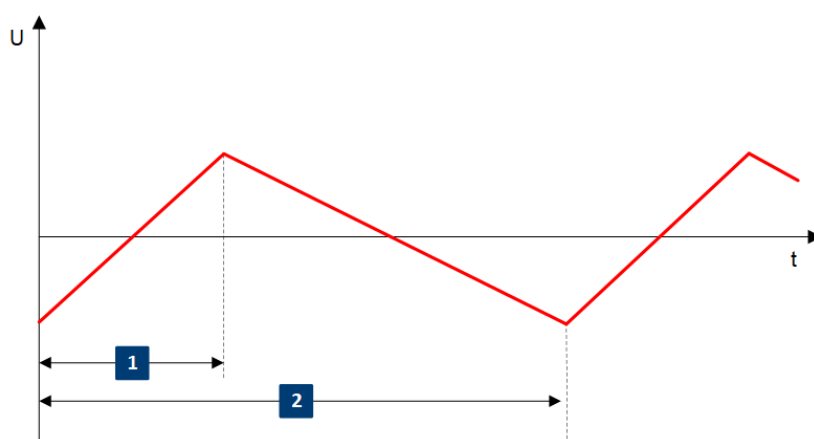1 = Triangle rise  
2 = Triangle period



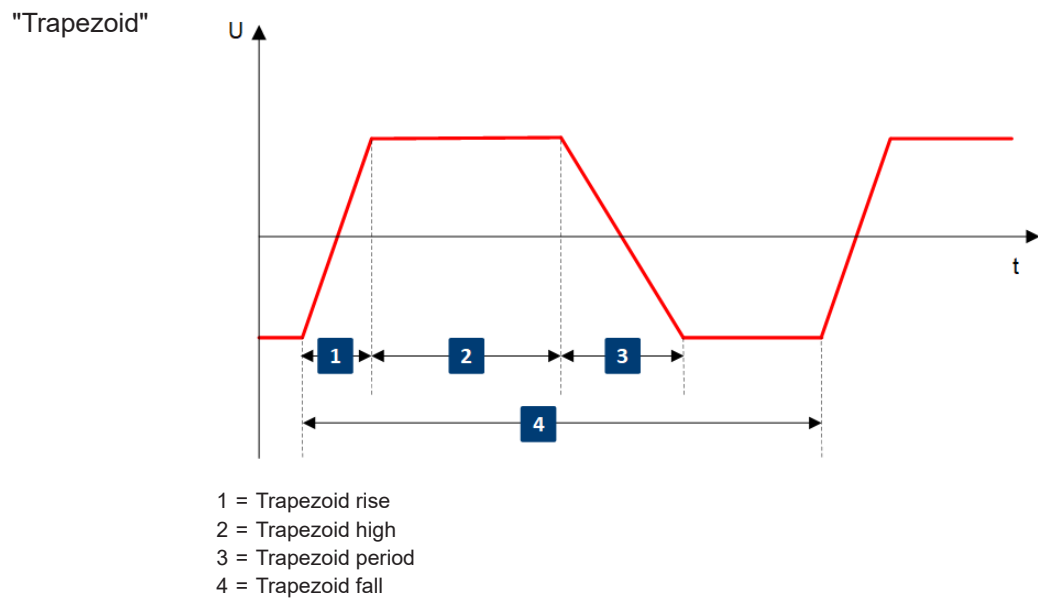

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE](#) on page 973

### Frequency

Sets the frequency of the LF generator for sine signals.

Set the signal shape with the parameter [Shape](#).

Remote command:

[\[:SOURce\]:LFOutput<ch>:FREQuency](#) on page 969

### Period

Sets the repetition rate of the generated LF signal for triangle, trapezoid or pulse shapes, see [Shape](#).

The period of sine signals is calculated from the selected [Frequency](#)

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod](#) on page 974

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRIangle:PERiod](#) on page 975

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:PERiod](#) on page 973

### Pulse Width

Sets the pulse duration of the generated pulse signal.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:WIDTh](#) on page 974

### Pulse Duty Cycle

Sets the ratio between the pulse duration and the pulse period in percent.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:DCYClE](#) on page 973



**Triangle Rise**

Sets the time required for the triangle signal to change from low level to high level.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRIangle:RISE](#) on page 975

**Trapezoid Rise / Fall**

Sets the time required for the trapezoid signal to change from low level to high level, and vice versa.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeZe:RISE](#) on page 975

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeZe:FALL](#) on page 974

**Trapezoid High**

Sets how long the trapezoid signal is at high level.


Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeZe:HIGH](#) on page 974

**Source > external settings**

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > External".

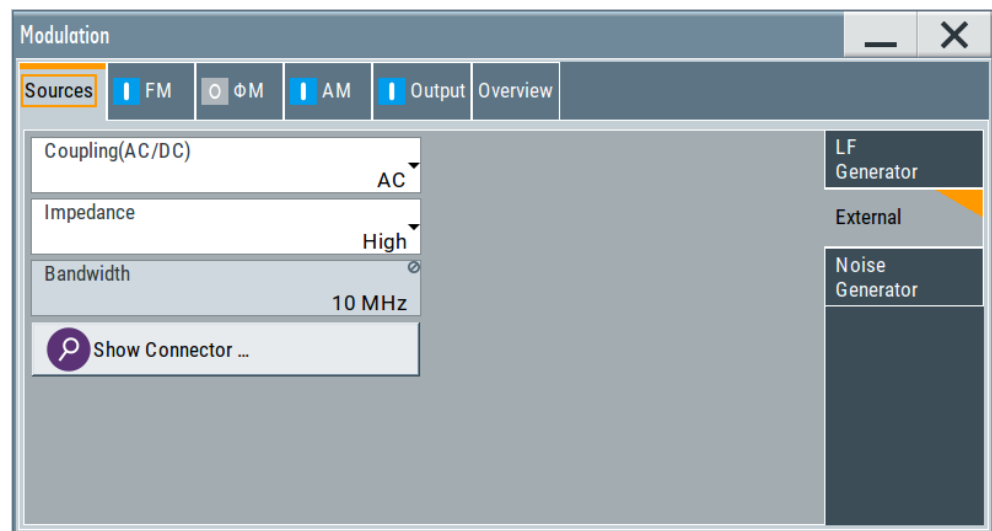

The "External" settings section contains all parameters required to configure the signal of an externally supplied LF signal.

**Settings**

<a href="#">Coupling (AC/DC)</a> .....	389
<a href="#">Impedance</a> .....	389
<a href="#">Bandwidth</a> .....	389
<a href="#">Show Connector</a> .....	389



**Coupling (AC/DC)**

Selects the coupling mode (AC or DC) for the external signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:COUPling](#) on page 951

**Impedance**

Sets the impedance for the externally supplied signal.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:IMPedance<ch>](#) on page 951

**Bandwidth**

Displays the maximum bandwidth of the external LF signal.

Remote command:

[\[:SOURce\]:LFOutput<ch>:BANDwidth?](#) on page 968

**Show Connector**


Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Source > noise generator settings**

Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > Noise Generator".

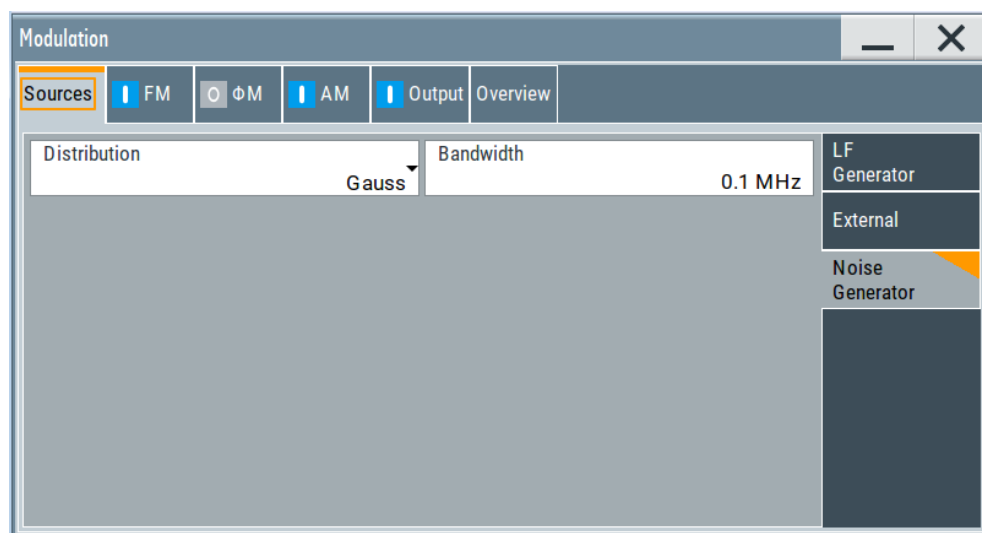

The "Noise Generator" settings contain all parameters to configure the signal of the internal noise generator.



**Settings**

<a href="#">Distribution</a> .....	390
<a href="#">Bandwidth</a> .....	390

**Distribution**

Selects the distribution of the noise power density.

"Gauss" Generates the noise power according to a Gaussian distribution.

"Equal" Generates an evenly distributed noise.

Remote command:

[\[:SOURce<hw>\]:NOISe:DISTriBution](#) on page 992

**Bandwidth**

Sets the noise bandwidth as distinct value.

You can set the bandwidth between 100 kHz and 10 MHz in 100 KHz steps.


Remote command:

[\[:SOURce<hw>\]:NOISe:BANDwidth|BWIDth](#) on page 992

**7.11.4.7 LF signal output settings**

Access:

- Select "RF" > "Analog Modulation" > "LF Output".

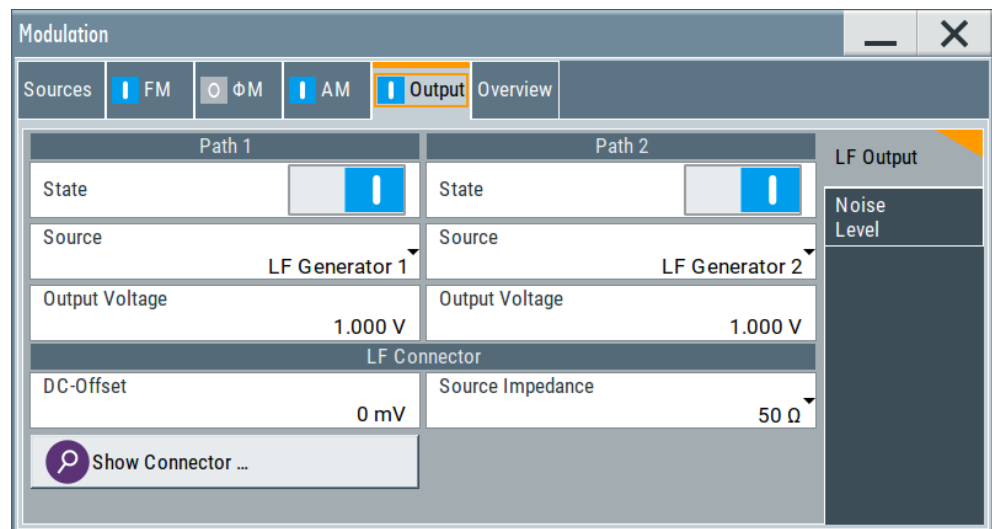

In the "LF Output" tab, you can configure the signal at the LF outputs, determine the output voltage or add a DC offset. Activate both paths to output the sum signal of the two sources.

See also [Chapter 7.11.4.8, "Overview"](#), on page 392.



**Settings:**

State.....	391
Source.....	391
Output Voltage.....	391
DC-Offset.....	391
Show Connector.....	392
Source Impedance.....	392
Noise Generator.....	392
L Noise Density.....	392
L Noise Level.....	392

**State**

Activates the output of the LF signal.

Remote command:

`[ :SOURce] :LFOutput<ch> [ :STATe]` on page 971

**Source**

Select the sources for the signal output at the LF connector. If you activate path 1 *and* 2, those sources are added.

Use the "Show Connector" function to find out where this connector is located.

"LF Generator 1/2"

Selects one of internally generated LF signals.

"AM"

Option: R&S SMBVB-K720

Selects the AM signal.

"FM/PhiM"

Option: R&S SMBVB-K720

Selects the signal also used by the frequency or phase modulations.

"Noise Generator"

Selects the internally generated noise signal.

"External"

Selects an externally supplied LF signal.

Remote command:

`[ :SOURce] :LFOutput<ch>:SOURce` on page 972

**Output Voltage**

Sets the peak to peak voltage of the selected LF output source.

This value, e.g. +1 V to -1 V refers to 50 Ohm at the RF output with high termination impedance at the LF output.

Remote command:

`[ :SOURce] :LFOutput<ch>:INTernal:VOLTage` on page 971

**DC-Offset**

Adds a DC offset to the LF output signal.

Remote command:

`[ :SOURce] :LFOutput:OFFSet` on page 971



**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Source Impedance**

Selects the output impedance of the LF generator.

"50  $\Omega$ "

Selects an output impedance of 50  $\Omega$ .

"600  $\Omega$ "

Selects an output impedance of 600  $\Omega$ .


Remote command:

[\[:SOURce\]:LFOutput:SIMPedance](#) on page 972

**Noise Generator**

Access:

- Select "RF" > "Analog Modulation" > "LF Output > Noise Generator".

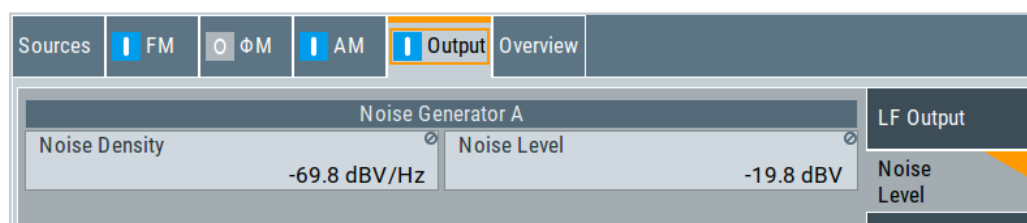**Noise Density ← Noise Generator**

Indicates the level of the noise signal for a bandwidth of 1 Hz (relative).

Remote command:

[\[:SOURce<hw>\]:NOISE:LEVEL:RELative?](#) on page 993

**Noise Level ← Noise Generator**

Indicates the level of the noise signal per Hz within the total bandwidth (absolute).

Remote command:

[\[:SOURce<hw>\]:NOISE:LEVEL\[:ABSolute\]?](#) on page 993


**7.11.4.8 Overview**

Option: AM and FM/PM require R&S SMBVB-K720



Access:

- Select "RF" > "Analog Modulation" > "Modulation Source... > Overview".

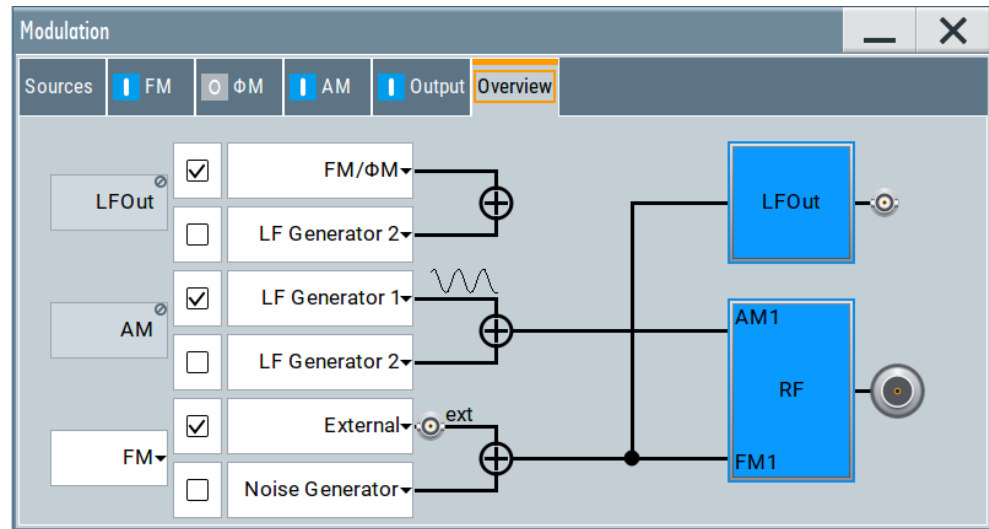

Blue color = Active output signal (AM and FM)  
 Gray color = Inactive output signal (LF Out)  
 Miniature graph = Indicates an active source  
 Connectors = Indicate a connector (e.g. external signal) is involved in the path of the signal

The "Overview" tab is an interactive diagram that indicates the active modulations and the signal being output.

Here you can:

- Select the output signal ("LF Out") per path; the setting acts as the parameter "LF Output Source"
- Select the source for each modulation and modulation path; the setting acts as the parameter "Source"
- Activate modulation per path; the setting acts as the parameter "State"  
To generate a two-tone signal composed form the two paths of the same modulation type, activate both paths.
- Activate "FM" or "PhiM"; the two modulations are mutually exclusive.

### LFOut

Label for the LF output settings in the overview.

Remote command:

n.a.

### AM

Label for the amplitude modulation settings in the overview.

Remote command:

n.a.

### FM/PhiM

Selects the modulation signal to be assigned to the output. You can assign the frequency or phase modulated signal.



Remote command:  
n.a.

### 7.11.5 How to generate an amplitude modulated signal

The following examples use the internal LF generator.

#### To set the frequency and level of the RF signal

1. Press [Preset] to start from a defined state.
2. In the status bar, set "Frequency = 2 GHz".
3. Set "Level = -20 dBm".

#### To configure the modulation signal (LF generator)

1. Select "RF" > "Analog Modulation" > "Modulation Source".
2. In the "Sources" tab, select "Shape > Sine".
3. Set "Frequency = 20 kHz".

The period is calculated automatically and indicates "Period = 50.00 µs".

#### To configure the amplitude modulation settings

1. In "Modulation" dialog, select the "AM" tab.
2. Set "Source = LF Generator1"
3. Set "Depth = 30%"
4. Select "State = I" to activate the modulation.
5. Set "RF > On" to enable signal output.

### 7.11.6 How to generate a pulse modulated signal

The following example uses the internal pulse generator.

#### To set the frequency and level of the RF signal

1. Press [Preset].
2. In the status bar, set "Frequency = 4 GHz".
3. Set "Level = -25 dBm".

#### To configure the pulse generator

1. Select "RF" > "Analog Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Double".
3. Set "Pulse Period = 10 us".



4. Set "Pulse Width = 2 us".
5. Set "Double Pulse Width = 1.2 us".
6. Set "Double Pulse Delay = 4.5 us".
7. Activate "Pulse Output State".
8. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

#### To enable pulse modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I" to activate pulse modulation.
3. Set "RF > On" to enable signal output.

### 7.11.7 How to generate a pulse train modulated signal

The following example uses the internal pulse generator.

#### To set the frequency and level of the RF signal

1. Press [Preset].
2. In the status bar, set "Frequency = 6 GHz".
3. Set "Level = -25 dBm".

#### To configure the pulse generator

1. Select "RF" > "Analog Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Train".
3. Select "Pulse Train Data".  
Accesses the standard function for file handling.
4. Select an existing file or select "New" to create one.
5. Define the filename.  
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
6. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.  
For example:
  - "On-Time = 500 us", "OFF-Time = 2 ms", "Count = 2"
  - "On-Time = 100 us", "OFF-Time = 2.5 ms", "Count = 1"
  - "On-Time = 10 us", "OFF-Time = 50 us", "Count = 10"
7. "Save" the file and close the dialog.



The instrument returns to the /var/user/ where it has saved the file.

8. Select the file in the directory.
9. Confirm with "Select".
10. In the "Pulse Generator" dialog, select "Pulse Output State = On".
11. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

#### To enable pulse train modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I".
3. Set "RF > On" to enable signal output.

## 7.12 Improving level performance

To adjust the RF output signal to specific needs in your application optimally, the R&S SMBV100B provides different functions:

- **Attenuator**  
The R&S SMBV100B is equipped with a step attenuator that enables you to vary the amplitude of the RF signal in a wide range. It is characterized by low VSWR (voltage standing wave ratio) over the full level and frequency range, and provides highest level accuracy and noise suppression.  
See [Chapter 7.12.1, "Attenuator"](#), on page 397.
- **Automatic Level Control (ALC)**  
The automatic level control system ensures stable RF signals with highest absolute level accuracy over temperature and time.  
See [Chapter 7.12.2, "ALC - automatic level control"](#), on page 399.
- **User correction (UCOR)**  
The user correction function allows you to compensate frequency responses of external setups (e.g. losses of cables) and achieve a stable input signal over frequency directly at the DUT.  
See [Chapter 7.12.3, "User correction"](#), on page 402.
- **Power sensors**  
The R&S NRP power sensors support RF signal level optimization by determining the attenuation characteristics of downstream devices or cables, or by monitoring the RF signal level at the output directly. The R&S SMBV100B uses the readings of a sensor for compensation of losses and thus improving the accuracy of the RF signal level.  
You can configure the measurement parameters of a power sensor directly in the R&S SMBV100B and monitor its readings, including calibration.  
See:  
– [Chapter 7.12.4, "Using power sensors"](#), on page 415



- [Chapter 7.12.5, "To calibrate the power level with an R&S NRP power sensor"](#), on page 432
- [Chapter 7.12.4.2, "NRP power viewer"](#), on page 417
- [Chapter 7.12.4.3, "NRP power control"](#), on page 419
- [Chapter 7.12.4.4, "NRP sensor configuration"](#), on page 424
- [Chapter 7.12.4.5, "NRP sensor mapping"](#), on page 429

## 7.12.1 Attenuator

### About the attenuator

The step attenuator is an electronic device without mechanical components, providing fast and wear free level settings.

According to the requirements of your application, you can select different attenuator characteristics.

The following are examples of test requirements and the corresponding configuration:

- Automatic configuration  
Select standard operation mode ("Auto"), in which the generator adjusts the attenuation of the RF output signal automatically.
- DUT tests under low signal to noise conditions  
Low output power is suitable to test the behavior of a DUT under low signal to noise conditions.
- Uninterrupted level settings with constant VSWR  
A fix attenuation value is required for obtaining uninterrupted level settings with constant VSWR.  
The configuration "RF Off Mode > Unchanged" ensures that constant VSWR is maintained if you turn the signal off and on again.
- Noise sensitive applications  
The parameter "RF OFF Mode > Full Attenuation" sets maximum attenuation and thus suppresses noise when you turn off the RF signal.


### 7.12.1.1 Attenuator settings

Access:

- Select "RF" > "RF Level" > "Level > Attenuator".

In the "Attenuator" dialog, you can select the operating mode of the step attenuator, the instrument is equipped with.



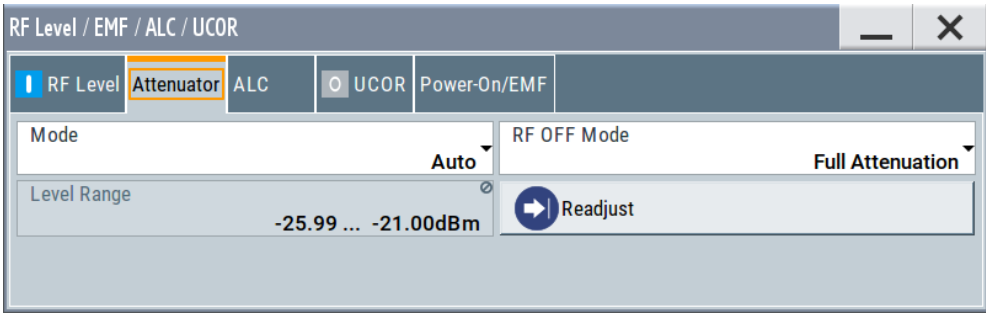

The remote commands required to define these settings are described in [Chapter 13.14, "OUTPut subsystem"](#), on page 743 and [Chapter 13.17.16, "SOURce:POWer subsystem"](#), on page 997.

### Settings

Mode.....	398
Level Range.....	398
RF OFF Mode.....	398

#### Mode

Determines the operating mode of the step attenuator.

- "Auto" Adjusts the attenuator settings automatically.
- "Fixed" Fixes the attenuator and amplifier paths for the current RF level and provides signal output with constant output VSWR. The resulting level range is indicated under "[Level Range](#)" on page 398.

Remote command:  
[:OUTPut<hw>:AMODE](#) on page 745

#### Level Range

Shows the interruption-free range of the level that you can use in the selected mode.

Remote command:  
[:OUTPut<hw>:AFIXed:RANGe:LOWer?](#) on page 745  
[:OUTPut<hw>:AFIXed:RANGe:UPPer?](#) on page 745

#### RF OFF Mode

Determines the state of the step attenuator, when the RF signal is switched off.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

- "Unchanged" Freezes the setting of the step attenuator.  
 Use this mode if a constant VSWR (Voltage Standing Wave Ratio) is required.
- "Full Attenuation" Switches to the maximum attenuation.  
 Use this mode for applications that require a high level of noise suppression.



Remote command:

`[ :SOURce<hw> ] :POWer:ATTenuation:RFOff:MODE` on page 1001

### 7.12.1.2 Reverse power protection

The R&S SMBV100B is equipped with a reverse power protection circuit.

The reverse power protection is tripped when the power of signals reflected from the load or external signals applied to the RF output get too high. A relay opens and interrupts the internal connection to the RF output. This condition is indicated in the status bar by the "Overload" status message.

#### Overload

If an "Overload" status message is indicated in the status bar, perform the following:

- Remove the cause for the overload
- Press the [RF on/off] key to reset the overload protection

The RF input is activated when the overload protection is reset.

Remote command:

`:OUTPut<hw>:PROTection:TRIPped?` on page 746

`:OUTPut<hw>:PROTection:CLEar` on page 746

### 7.12.2 ALC - automatic level control

The R&S SMBV100B is equipped with an automatic level control (ALC) unit to obtain best RF level accuracy.

#### About ALC

ALC is an adaptive control system to stabilize the RF output level. It continuously monitors the current level and adjusts it to keep a steady state over temperature and time.

ALC is active in almost all applications by default. It is not active for frequencies below 200 kHz and if the optimization mode (IQ modulation) is different than "FAST".

Also note that ALC can detect incorrect values in **multi-transmitter** test setups. If multiple generators are coupled, reverse power can affect the ALC readings, which leads to an incorrect RF output power.

#### ALC states and their effects

The following description basically explains the ALC states and their principle of operation:

- "Auto"  
Adjusts the output level to the operating conditions automatically. ALC is active in almost all operating modes.
- "On"  
Activates the internal level control permanently, regardless of the operating conditions.



**Note:** This mode is not useful for pulse modulation with narrow pulses and low repetition rates, since the automatic level control cannot settle in time. Set ALC "Table & On" instead.

- "Off (Sample & Hold)"  
Deactivates ALC, but still allows you to maintain a constant output level. The R&S SMBV100B switches briefly in the CW mode and enables ALC to adjust the level to the set target value. The instrument freezes this setting, turns off ALC again, and switches back to the operating mode.
- "Sample & On"  
Initially the level control circuit uses a sample process to settle to the current level. When settled, it continues level control with highest level accuracy.
- "Off (Table)"  
Deactivates internal level control loop. The instrument calculates every level setting using the attenuation values from the internal (ALC) table. Level attenuation between two table values is done with linear interpolation. This mode enables you to perform a fast and strictly monotonic, but not quite as precise level adjustment.
- "Table & On"  
Starts with the associated value of the internal level table and then activates the automatic level control. This mode achieves maximum level accuracy and fast setting times.


The R&S SMBV100B displays the level control setting as a status message in the info line.

How to: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

### 7.12.2.1 ALC settings

Access:

- Select "RF" > "RF Level" > "Automatic Level Control".

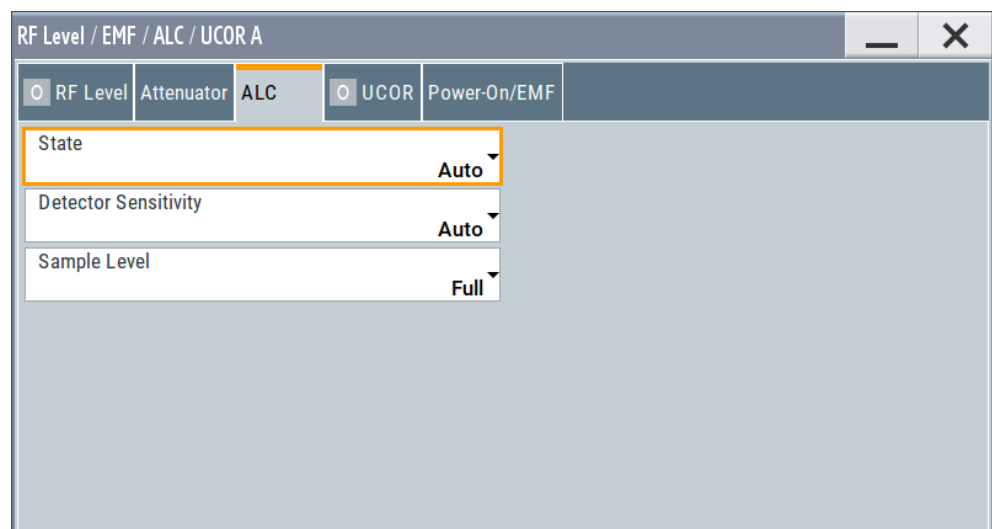



In the "ALC" dialog, you can configure the settings for the automatic level control of the RF signal to achieve optimal accuracy.

The remote commands required to define these settings are described in [Chapter 13.17.16, "SOURce:POWer subsystem"](#), on page 997.

How to: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

### Settings

State.....	401
Detector Sensitivity.....	401
Sample Level.....	402

### State

Selects the internal level control mode.

"Auto"	Selects the most appropriate ALC mode automatically.
"On"	Activates ALC permanently.
"Off (Sample & Hold)"	Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.
"Sample & On"	Enables automatic level control after a short sample pulse.
"Off (Table)"	Controls the level using the attenuation values of the internal ALC table.
"Table & On"	Starts with the attenuation setting from the internal ALC table and continues with automatic level control.

For further details on the individual settings, an overview of the functionality and details on what is to be considered, see ["ALC states and their effects"](#) on page 399.

### Note:

The ALC modes "Off (Sample & Hold)" and "Sample & On" use a short sample pulse to set the level control. To adjust the level of this sample pulse, see ["Sample Level"](#) on page 402 in the ALC dialog. It does not consider any signal headroom, e.g. applied to a user defined ARB waveform.

How to: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

Remote command:

[\[:SOURce<hw>\]:POWer:ALC\[:STATe\]](#) on page 999

### Detector Sensitivity

Determines the path of the internal level detector.

The level detector of the ALC has multiple paths distinguished by their sensitivity.

"Auto"	Selects the detector path automatically, according to the given level. This mode is the recommended operation mode.
--------	---



"Low"	Selects the detector path with low sensitivity. This setting is intended for signals with high internal electronic levels.
"Med"	Selects the path with medium sensitivity. This setting corresponds to normal mode. It is intended for signals with medium internal electronic levels.
"High"	Selects the detector path with high sensitivity, intended for signals with low internal electronic levels.
"Fix"	Fixes the last set sensitivity setting.

Remote command:

`[ :SOURce<hw> ] :POWer:ALC:DSEnsitivity` on page 1000

### Sample Level

Determines the level at the output of the instrument during the sample process.

How to: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

"Full"	Attenuates the sample level by the crest factor of the used I/Q modulation signal or 9 dB, whichever is lower. Additionally, an internal headroom of the signal is considered.
"Attenuated"	Sets an additional attenuation of 40 dB.
"Minimum"	Sets the attenuation to maximum.

Remote command:

`[ :SOURce<hw> ] :POWer:ALC:SLEVel` on page 1000

### 7.12.2.2 How to enable the ALC


1. Select "RF" > "RF Level" > "Automatic Level Control".
2. **NOTICE!** Risk of DUT damage due to high input power. The ALC modes "State" > "Off (Sample & Hold)" and "State" > "Sample & On" use a short sample pulse to set the level control. With the setting "Sample Level" > "Full", this sample pulse results in a CW RF pulse. Usually, the RMS value of this CW pulse equals the configured RMS level value of the signal, but it can also rise up to the PEP level.  
To protect the DUT from damage due to high input power, use the following setting combinations for the sampling states "Off (Sample & Hold)" or "Sample & On":
  - Set "Sample Level" > "Attenuated" or
  - Set "Sample Level" > "Minimum".
3. Set "RF" > "State" > "On".

### 7.12.3 User correction

The R&S SMBV100B supports a correction function to compensate external losses, caused, for example, by the RF cable, to achieve a precise target input level at the DUT.



The signal at the RF outputs of the R&S SMBV100B is flat. However, the DUT is usually not connected directly to the outputs of the instrument but rather via connecting cables. Components like cables, power combiners, switches or mixers can affect the signal flatness at the DUT input.

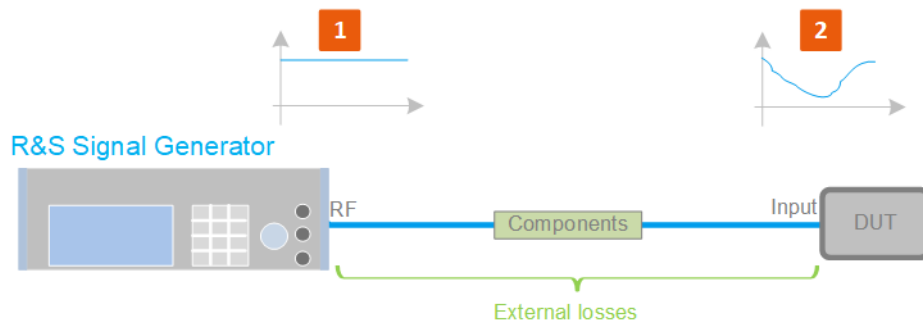


**Figure 7-19: Effect of external losses on the signal flatness at the DUT input**

- DUT = Device under test  
 Components = Designation of all components between the measurement equipment and the DUT, e.g. cables  
 1 = Flat signal at the outputs of the R&S SMBV100B  
 2 = Signal received at the DUT, incl. the external losses

### About UCOR

User correction (UCOR) is a method that determines the external level loss over a frequency range in advance, see [Figure 7-20](#).

The difference between the generator output level and the level at the DUT determines the correction value at the respective frequency. Alternatively, the attenuation characteristics over a certain frequency range of, for example, RF cables are also specified in the associated data sheet.

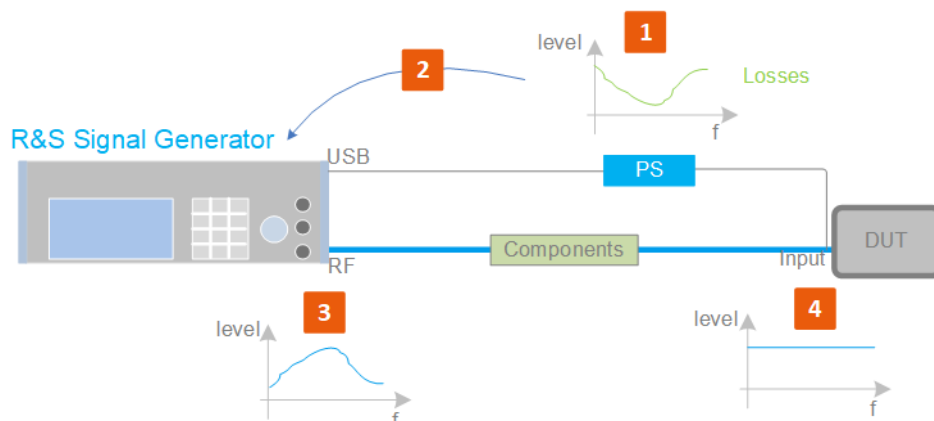

**Figure 7-20: Understanding the principle of user correction**



DUT	= Device under test
Compo- nents	= Designation of all components between the measurement equipment and the DUT, e.g. cables
PS	= Power sensor, e.g. R&S NRP, connected at the DUT's input and the USB connector of the R&S SMBV100B
1	= Power sensor measures the level over a frequency range, where the collected values correspond to the losses caused by the components between the R&S SMBV100B and the DUT
2	= Obtain the correction data by inverting the collected data; load the correction parameters in the R&S SMBV100B
3	= In the R&S SMBV100B, the RF signal is pre-processed with the correction values so that the signal at the outputs is the inverted version of the external losses
4	= Received at the DUT input, the pre-processed signal if flat

With active **UCOR**, the generator adds the correction value internally and thus increases the output level by exactly the amount of the loss between its output and the DUT. For frequencies which are not contained in the list, the level correction is calculated by interpolation of the closest correction values.

### Possible ways for configuring the user correction values

You can configure correction values in the following ways:

- **Internally**

- Use the built-in table editor in the "UCOR > Edit User Correction Data" dialog. Once defined, user correction values can be saved in a file. Files with correction data can be exported, for example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- Using the corresponding remote-control commands. Note that you have to create a user correction file first.

- **Externally**

Create a file with correction values as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

### UCOR file format

Files containing correction data are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is `*.ucor`.

The file contains a list of correction values, one row per frequency and correction value pair; a new line indicator separates the correction values.

For file handling, use the standard functions in the "File Manager", see [Chapter 10.8, "Using the file manager"](#), on page 529.

### Collecting correction data

To fill the frequency and power values in the correction table, use one of the following options:

- **Manually**, row by row.
- Fill the table **automatically** with linearly interpolated values, calculated from value range and step size.



- Acquire the real frequency response characteristics of the used component with the **R&S NRP power sensor**, see [Understanding the principle of user correction](#).

### Using a power sensor for frequency response measurements

Consider the following when using R&S NRP power sensors to measure the correction values:

- Measure the level directly at the input of the DUT.
- Use the internal correction functions of an R&S NRP power sensor to increase the measurement accuracy.
- Use S-parameter to consider the impact of any two-port device like an adapter between the signal generator and the sensor input.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note [1GP141](#).



### Interactions and characteristics

Activated user correction is effective in all operating modes.

The RF output level ( $\text{Level}_{\text{RF}}$ ) is the sum of the level value and the correction for the particular frequency:

$$\text{Level}_{\text{RF}} = \text{"Status bar > Level"} + \text{"UCOR"}$$

Activated user correction is indicated by the status indication "UCOR" in the status bar.


#### 7.12.3.1 User correction settings

Access:

1. Select "RF" > "RF Level" > "User Correction".
2. If you already have created a file with user correction data:
  - a) Select "UCOR Data" > navigate to the file "\*.uco" > "Select".
  - b) Proceed with [step 4](#).
3. If you need to create a file:
  - a) Select "UCOR Data" > "New".
  - b) Enter the filename `UCOR_Data` and confirm with "Ok".
  - c) Choose the file and confirm with "Select".
  - d) Select "Edit UCOR Data".
  - e) To fill the user correction data table, proceed as described in [Chapter 7.10.7, "List editor"](#), on page 354.
4. Select "UCOR" > "State" > "On".



5. Select block diagram > RF > "On".

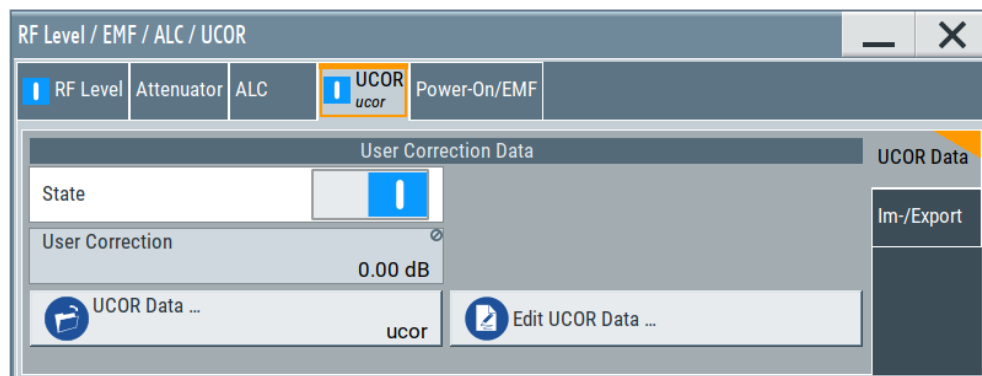

The "UCOR" dialog contains all settings for creating and handling files with user-defined level correction values.

The remote commands required to define these settings are described in [Chapter 13.17.5, "SOURCE:CORRection subsystem"](#), on page 932.

### Settings

State.....	406
User Correction.....	406
UCOR Data.....	406
Edit UCOR Data.....	407
UCOR Info .....	407

### State

Activates user correction.

The R&S SMBV100B displays the status icon "Lev Ucor" in the status bar.

Remote command:

`[ :SOURCE<hw> ] :CORRection [ :STATe ]` on page 937

### User Correction

Indicates the corrected level value for a specific frequency point.

Remote command:

`[ :SOURCE<hw> ] :CORRection:VALue?` on page 936

### UCOR Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Files with user correction values are files with predefined file extension \*.uco. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file \*.uco > Select"
- Use the general editor function to create internally new file or to edit an existing one.



- Use the standard file manager function to load externally created files to the instrument.

Remote command:

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 937

[\[:SOURce<hw>\]:CORRection:CSET\[:SElect\]](#) on page 936

[\[:SOURce\]:CORRection:CSET:DElete](#) on page 937

### Edit UCOR Data

Opens the build-in table editor to define a new correction table or edit an existing one.

See also:

- [Chapter 7.10.7, "List editor"](#), on page 354
- ["Fill..."](#) on page 356
- [Chapter 7.12.3.3, "Fill with sensor"](#), on page 411

### UCOR Info ...

Opens a window information on the user correction file.

The window shows the metadata of the file and the output level parameters that are relevant for user correction.

Remote command:

n.a.

## 7.12.3.2 List editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

► "RF" > "Sweep/List" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.



Edit List Mode Data: rf_list			
	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

Go To Edit Save As ... Save

The remote commands required to define the list mode data are described in [Chapter 13.17.11, "SOURce:LIST subsystem"](#), on page 979.

Access to "Edit User Correction Data":

- "RF" > "RF Level" > "User Correction" > "Edit User Cor. Data"

Edit User Correction Data : ucor		
	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

Go To Edit Fill with Sensor ... Save As ... Save

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 13.17.5, "SOURce:CORRection subsystem"](#), on page 932.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.



Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mdoe Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

### Settings

Edit List Mode Data.....	409
Data handling keys.....	409
L Go To.....	409
L Edit.....	410
L Fill with Sensor.....	410
L Save As/Save.....	410
Fill.....	410

### Edit List Mode Data

Table with values for list or user correction processing.

**Note:** Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency /Hz"

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 983

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)  
on page 935

"Power /dBm" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 985

"Correction Value /dBm" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 935

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELl:LIST](#) on page 983

### Data handling keys

Standard functions for file and data handling.



### Go To ← Data handling keys

Selects a row for editing.



**Edit ← Data handling keys**

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see "Fill..." on page 356.

**Fill with Sensor ← Data handling keys**

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 7.12.3.3, "Fill with sensor"](#), on page 411

**Save As/Save ← Data handling keys**

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

**Fill...**

Provides parameters for filling a table automatically with user-defined values.

From	0	Range	4
Column To Fill	Frequency /Hz		
Start Value	2.000 000 000 000 GHz	End Value	2.600 000 000 000 GHz
Increment Value	200.000 000 000 MHz		
<input checked="" type="checkbox"/> Fill			

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

**"From / Range"**

Defines the start line and number of lines to be filled.

**"Column To Fill"**

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

**"Start Value / End Value"**

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

**"Increment Value"**

Determines the step size.

**"Fill"**

Fills the column specified in "Column To fill".



### 7.12.3.3 Fill with sensor

Access:

1. Select "RF" > "RF Level" > "User Correction".
2. Select "UCOR Data > navigate to the file \*.ucor > Select".
3. Select "Edit UCOR Data > Fill With Sensor...".

**Fill User Correction Data with Sensor**

List To Fill: ucor

Sensor: 3: NRP33-SN-V 999006 [Config ...]

Include Zeroing: ☒ [Execute]

**Generator Settings used for Measurement**

Modulation	Off (CW)	Amplitude	-30.00 dBm
Offset	0.00 dB	UCOR Reference Level	-30.00 dBm

This dialog contains parameters for filling a table automatically with sensor readings.



To fill the table, select "Execute".

For information on power sensors and how to use them, see [Chapter 7.12.5, "To calibrate the power level with an R&S NRP power sensor"](#), on page 432.

#### Settings:

<a href="#">Fill User Correction Data with Sensor</a> .....	411
<a href="#">Generator Settings used for Measurement</a> .....	412

#### Fill User Correction Data with Sensor

- "Sensor"  
Displays connected sensors for selection.
- "List To Fill"  
Indicates the used list.
- "Config"



Leads you to the sensor configuration dialog to set the parameters for the selected power sensor.

- "Include Zeroing"

Performs a zeroing procedure before acquiring the user correction data to improve precision.

No signal is applied to the sensor during zeroing. RF output is temporarily switched off during that time.

When unchecked, the zeroing procedure is skipped. However, the RF signal level can be blanked shortly. This setting is useful if blanking of RF is undesirable or the absence of power at the sensor cannot be guaranteed.

- "Execute"

The "Execute" button is only enabled if a sensor is detected and the user correction list contains at least one frequency value.

Remote command:

`[ :SOURce<hw> ] :CORRection:ZERoing:STATe` on page 936

`[ :SOURce<hw> ] :CORRection:CSET:DATA [ :SENSor<ch> ] [ :POWER ] :SONCe` on page 935

### Generator Settings used for Measurement

Displays the settings relevant for the measurement.

"Modulation" Indicates the modulation state

"Amplitude" Displays the currently set level.

Remote command:

`[ :SOURce<hw> ] :POWER:POWER` on page 1004

"Offset" Displays the level offset, set with "Offset" on page 305.

Remote command:

`[ :SOURce<hw> ] :POWER [ :LEVel ] [ :IMMediate ] :OFFSet` on page 1008

"UCOR Reference Level" Displays the reference value for user correction.

The user correction reference level is the set [Amplitude](#) plus the set [Offset](#).

Remote command:

`[ :SOURce<hw> ] :POWER [ :LEVel ] [ :IMMediate ] :REFLevel` on page 1010

#### 7.12.3.4 Import/export list files

Access:

1. Select one of the following:

- "RF" > "Sweep/List" > "List mode".
- "RF" > "RF Level" > "User Correction".
- "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".



2. Select "Import/Export".

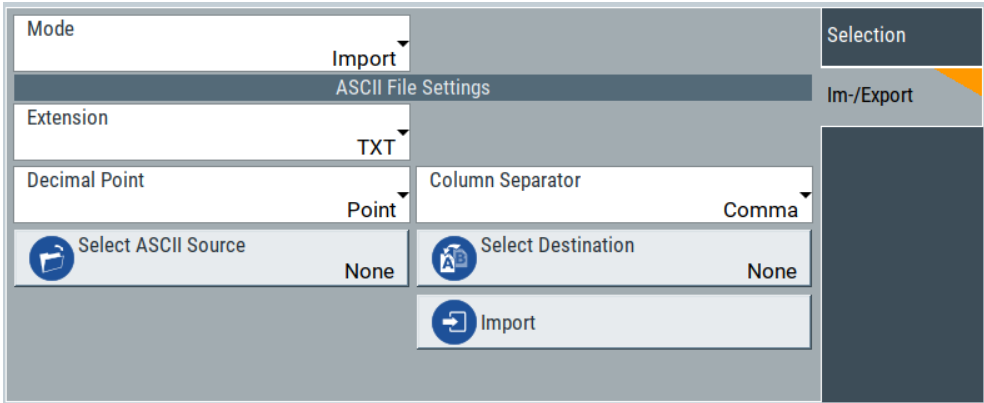


Figure 7-21: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats \*.txt (ASCII), or \*.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

Settings

Mode.....	413
ASCII File Settings.....	413
Select (ASCII) Source/Select (ASCII) Destination.....	414
Select Source/Select ASCII Destination.....	414
Import / Export.....	414

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

```
[ :SOURce<hw> ] :LIST:DEXChange:MODE on page 991
[ :SOURce<hw> ] :CORRection:DEXChange:MODE on page 939
[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:MODE on page 815
```

ASCII File Settings

Defines the format and the separators of the associated data file.

- "Extension"       Selects \*.csv or \*.txt format.
- "Decimal Point"   Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.
- "Column Separator"       Sets the separator between the columns in an ASCII table. Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

```
[ :SOURce<hw> ] :LIST:DEXChange:AFILe:EXTension on page 990
[ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:DECimal on page 991
```



[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SEParator:COLumn](#) on page 991

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:EXTension](#) on page 938

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:DECimal](#)

on page 939

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:COLumn](#)

on page 938

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:EXTension](#) on page 816

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal](#)

on page 816

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn](#)

on page 816

### Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:CATalog?](#) on page 990

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SElect](#) on page 990

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:CATalog?](#) on page 938

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SElect](#) on page 938

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:CATalog?](#) on page 816

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SElect](#) on page 817

### Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:SElect](#) on page 991

[\[:SOURce<hw>\]:CORRection:DEXChange:SElect](#) on page 939

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:SElect](#) on page 817

### Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:EXECute](#) on page 990

[\[:SOURce<hw>\]:CORRection:DEXChange:EXECute](#) on page 939

[\[:SOURce<hw>\]:PULM:TRAIIn:DEXChange:EXECute](#) on page 817



## 7.12.4 Using power sensors

The R&S SMBV100B works with any of the R&S NRP power sensors and thus supports various application tasks. Using power sensors, you can for example determine attenuation characteristics of downstream equipment or cables. You can use the measured values to compensate the losses with internal control functions or with an external control circuit in real time.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note [1GP141](#).

R&S NRP power sensors are highly accurate standalone measuring devices, suitable for a wide range of applications. The power sensors communicate directly with the signal generator, calculate the average or peak power internally, include S-parameter correction and return the measurement results to the generator.

The R&S SMBV100B supports up to four power sensors, allowing up to four power measurements simultaneously.



Check the firmware version of the R&S NRP sensors regularly. Update the firmware, if necessary.

For updates, see the Rohde & Schwarz website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters".

For more information on working with power sensors, see the following topics:

- [Chapter 7.12.4.1, "Connecting R&S NRP power sensors to the R&S SMBV100B"](#), on page 415  
Overview on the supported connectors, connection options and the required accessories.
- [Chapter 7.12.4.2, "NRP power viewer"](#), on page 417  
A function for measuring and monitoring the RF output power or a user-defined signal source.
- [Chapter 7.12.4.3, "NRP power control"](#), on page 419  
Controls a downstream closed loop power control circuit, to compensate frequency response characteristics.
- [Chapter 7.12.4.4, "NRP sensor configuration"](#), on page 424  
Parameter settings of the specific R&S NRP power sensor.
- [Chapter 7.12.4.5, "NRP sensor mapping"](#), on page 429  
Shows all R&S NRP sensors connected to the instrument, or in the LAN.

### 7.12.4.1 Connecting R&S NRP power sensors to the R&S SMBV100B

R&S NRP sensors are connected to the R&S SMBV100B in the following ways:

- Connection to the Sensor connector
  - R&S NRP-ZK6 (six-pole interface cable) for R&S NRPxx power sensors
  - No additional cable for R&S NRP-Zxx power sensors (cable is fixed on the sensor)



- Connection to the USB connector  
Requires the following cables, depending on the used sensor type:
  - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
  - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via R&S NRP-Z5 sensor hub  
The R&S NRP-Z5 USB sensor hub (high-speed USB 2.0) can host up to 4 R&S NRP sensors.  
Requires additional cables, depending on the used output connector of the hub. Choose one of the following:
  - Short extension cable R&S NRP-Z2 for connection to the sensor connector. This six-pole connection provides the external trigger capability.
  - Standard USB cable (USB type A to USB type B) to any USB type A connector of the R&S SMBV100B. This connection does not support external triggering.
- Connection via USB hub with external power supply unit  
Requires the following cables, depending on the used sensor type:
  - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
  - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via LAN for R&S NRPxxxSN/xxxTN/xxxAN power sensors  
Using the Ethernet interface requires PoE (Power over Ethernet) to provide the electrical power.  
To establish the connection, you can use:
  - A PoE Ethernet switch, e.g. R&S NRP-ZAP1 and an RJ-45 Ethernet cable.
  - A PoE injector and an RJ-45 Ethernet cable.

For details, see the description R&S®NRP Power Sensors getting started.

### Detection and mapping

The R&S SMBV100B either detects a R&S NRP power sensor automatically or you can scan for available power sensors manually. The "NRP Sensor Mapping" dialog lists all detected R&S NRP power sensors, see [Chapter 7.12.4.5, "NRP sensor mapping"](#), on page 429. The dialog enables you to add, remove and map the sensors manually.

Depending on the connection interface, the R&S SMBV100B detects and maps connected R&S NRP power sensors differently:

- USB interface  
Detects a sensor automatically and maps it with index "2" to index "4" according to the sequence of connection.
- LAN interface  
To detect sensors that are connected in the LAN, the instrument provides a scan function. When you start the function, scan searches in the LAN for available R&S NRP power sensors and adds all detected sensors to list. Assigning a mapping index activates the sensor for the measurement.





On connection, the R&S SMBV100B immediately starts the measurement of the R&S NRP power sensor. If you preset the instrument ([Preset] key or \*RST), the R&S SMBV100B stops the measurement. The connection and the mapping of the power sensors remain.

#### 7.12.4.2 NRP power viewer

The R&S SMBV100B features the power viewer function for measuring or monitoring signals with R&S NRP power sensors.

##### About

The R&S SMBV100B can perform up to four power measurements simultaneously.

The measured signals can be the RF output power or other selected signal sources.

Depending on the signal characteristic (CW, AM, pulsed, etc.) or the parameter to be measured (average, peak, etc.) a suitable R&S power sensor must be used.

##### About the measuring principle, averaging filter, filter length, and achieving stable results

A sensor measures the average or peak RF power of the source continuously. The measurement results are displayed in the "NRP Power Viewer" dialog.

The power viewer function uses **averaging filters** for getting a stable readout.

Measurement results could be interfered, for instance, by too much noise in your setup, by a bad suppression of harmonics or non-harmonics or when you reach the sensitivity level of your power sensor.

Measurements are continuously repeated in a predefined time window. The measurement result is obtained by averaging the measured values for the last 2N time windows. This approach is referred as a **two-step averaging process**.

The factor of 2 in the formula arises because the output signals from the microwave detector are chopped at the same rate as the time windows to suppress low-frequency noise. An independent measured value can only be obtained from two consecutive values.

The variable N in the formula indicates the **filter length**. The filter length then directly influences the measurement time. The filter length can be selected automatically or it can be manually set to a fixed value.

Depending on the R&S NRP power sensor type, the manual setting of the filter length varies in resolution:

- Resolution = 1 for the R&S NRPxx power sensor family
- Resolution =  $2^n$  for R&S NRP-Zxx power sensors, with  $n = 1$  to 16

Follow the following general recommendation to find out the **optimum filter length**:

- Always start a measurement in auto mode ("Filter > Auto").  
Check if the measurement results are sufficient.
- If the power is not constant, select the filter length manually ("Filter > User").



Trigger the "Auto Once" function to search for the optimum filter length for the current measurement conditions.

The estimated value is indicated as filter length.

- If the target measurement accuracy value is known, select "Filter > Fixed Noise". The averaging factor is selected automatically and so that the sensor's intrinsic noise (two standard deviations) does not exceed the specified noise content.
- Different sensor types achieve the same filtering result with different filter and time window lengths.

The time window length depends on the sensor type:

- For most sensors, it is fixed to 20 ms.
- For the R&S NRP-Z81 sensor, it is 10 µs.

The R&S NRP-Z81 uses filter length that is 1000 times larger than the filter length for other sensors.

### About zeroing

Activates the auto zero function.

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor. If a Rohde & Schwarz power sensor receives an input power during the zeroing process, it aborts zeroing and generates an error message. Zeroing takes a few seconds, depending on the sensor model. Refer to the documentation of your power sensor for more information.

### Tips for zeroing

When to perform zeroing:

- During warm up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.
- Switch off the RF power source for zeroing, but do not disconnect it from the power sensor. This proceeding keeps the thermal equilibrium, and the zeroing process also compensates the noise that superimposes the measured signal (e.g. from a broadband amplifier).

### Related settings and functions

- Measurements-related settings, like results, filter, filter length:  
[Chapter 7.12.4.4, "NRP sensor configuration"](#), on page 424
- Closed loop power control of the output level:  
[Chapter 7.12.4.3, "NRP power control"](#), on page 419.
- Software version of the connected power sensor:  
`:SENSe<ch>[:POWER]:TYPE?` on page 761
- Assignment of the external signals and the output connectors:  
[Chapter 11.2.4, "RF connectors settings"](#), on page 557



- Acquisition of level correction data:  
[Chapter 7.12.3, "User correction"](#), on page 402.

### Additional information

See the Rohde & Schwarz website <http://www.rohde-schwarz.com>, section "Power Meters & Voltmeters" for:

- R&S NRP power sensor manual.
- Information on the R&S NRP-Z5 sensor hub and the available accessories.
- Sensor software updates.

### NRP power viewer settings

Access:

- Select "RF" > "RF Measurement" > "NRP Power Viewer".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping		
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...	
2: NRP18SN 101748	Average	-1.03	dBm	Config ...	
3: NRP67TN 101015	Average	-38.20	dBm	Config ...	
4: NRP33SN-V 900011	Average	-7.96	dBm	Config ...	

The "Power Viewer" tab lists the mapped R&S NRP power sensors with the measured parameter mode and the current readings. The "Config" button leads you to the configuration dialog to set the parameters for each sensor.

[Config](#).....419


### Config

Accesses the [Chapter 7.12.4.4, "NRP sensor configuration"](#), on page 424 dialog.

### 7.12.4.3 NRP power control

The NRP power control function enables you to apply stable and accurate RF power to the DUT. For example, you can set up a downstream closed loop power control circuit to compensate spurious effects or losses caused by power amplifiers or cables.

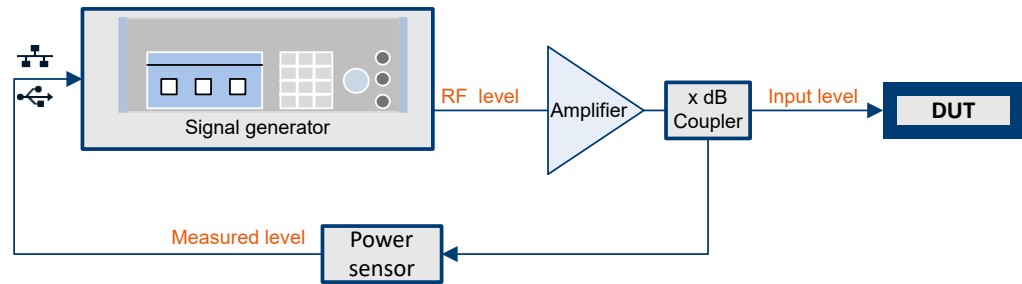

**Example: How to set up a closed loop power control****Figure 7-22: Example of a test setup with NRP power control**

The signal generator applies the RF output signal to an amplifier and to the DUT. An intermediately connected coupler derives the output power from the output signal and forwards it to the power sensor. Thus, the power sensor measures a proportional power in defined time intervals, and returns the results to the signal generator. If supported, the power sensor also includes given S-parameters. The signal generator compares the measured power with the set level value and adjusts the level of the output signal accordingly.

This closed loop power control enables you to control the external signal level continuously and reliably achieve a constant input power at the DUT in real time.

**Impact of NRP power control and operating modes**

Since the frequency and level of the RF output signal are continuously adjusted during "NRP Power Control", this operating mode interferes signal generation modes with varying frequency and level values. In addition, the setting time increases. The reason is the interaction between the signal generator and the R&S NRP power sensor in the control loop.

The operating modes impact each other as follows:

- Enabling the RF frequency sweep, RF level sweep or the list mode disables a running "NRP Power Control".
- A running list or RF sweep mode blocks "NRP Power Control".
- Modulated signals can deviate from the CW signal in mean power and peak power, and thus affect the "NRP Power Control".

**NRP power control settings**

Access:

- Select "RF" > "RF Measurement" > "NRP Power Control".



Power Viewer	Power Control	Sensor Configuration	Sensor Mapping
State		<input checked="" type="checkbox"/>	
Sensor		2: NRP18SN 101748	
Target Level		Average -1.52 dBm <a href="#">Config ...</a>	
Mode		Take Measurement as Target Level	
Catch Range +/-		Execute Single	
RF Amplitude Limit		Delay Time 0 ms	
		RF Setting Characteristics Auto	

In this dialog you can configure the parameters of the power control setup for the selected power sensor.

The remote commands required to define these settings are described in [Chapter 13.17.16, "SOURce:POWer subsystem"](#), on page 997.

## Settings

State.....	421
Sensor.....	421
Measured Level.....	422
Target Level.....	422
Take Measurement as Target Level.....	422
Mode.....	422
Execute Single.....	422
Catch Range +/-.....	422
Delay Time.....	423
Limit.....	423
Setting Characteristics.....	423

## State

Enables power control with the selected sensor.

The control loop periodically adjusts the generator output. After switching off, the running loop is completed.

**Note:** If you want to use another sensor, you must disable power control before. It is not possible to switch between sensors when power control is active.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:STATe](#) on page 1006

## Sensor

Indicates the R&S NRP power sensor that is selected for power control.

To configure the power sensor parameters, see [Chapter 7.12.4.4, "NRP sensor configuration"](#), on page 424.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:SElect](#) on page 1006



**Measured Level**

Indicates the current reading of the selected power sensor.

Remote command:

`:READ<ch>[:POWER]?` on page 753

`:SENSe<ch>:UNIT[:POWER]` on page 754

**Target Level**

Specifies the nominal level expected at the input of the sensor. The signal generator adjusts the output power accordingly, to meet the target value at the sensor input, and thus the power required at the DUT.

Remote command:

`[:SOURce<hw>]:POWER:SPC:TARGet` on page 1007

**Take Measurement as Target Level**

Uses the currently measured level as reference and applies the value as target level, see "[Target Level](#)" on page 422.

This feature simplifies setting up the control loop after manual adjustment of the measurement configuration. To assign the measured level as reference level, you must switch off "NRP Power Control". It is not possible when the control loop is running.

Remote command:

`[:SOURce<hw>]:POWER:SPC:MEASure` on page 1005

**Mode**

Selects the measurement mode for acquiring the power values measured by the sensor.

"Auto"                      Immediately starts and measures the power continuously.

"Single"                    Starts when you manually select [Execute Single](#), and executes one power measurement cycle.  
Note, that you can achieve the expected target power level at the DUT only with linear test setups. Non-linear test setups, for example, setups including an amplifier do not work.

Remote command:

`[:SOURce<hw>]:POWER:SPC:MODE` on page 1005

**Execute Single**

In mode "Single", starts one measurement cycle manually.

Remote command:

`[:SOURce<hw>]:POWER:SPC:SINGLE` on page 1006

**Catch Range +/-**

Sets the capture range of the control system.

Within the range:

*Target Level +/- Catch Range*

the power control locks and tries to achieve the target level. Readings outside the range are not considered.



Remote command:

[\[:SOURce<hw>\]:POWer:SPC:CRANge](#) on page 1004

### Delay Time

Sets a waiting period between the level adjustment of the generator and the next measurement of the power sensor.

With this parameter, you can bypass idle times in the controlled system.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:DELay](#) on page 1005

### Limit

Sets an upper limit for the output power.

The parameter "RF level" > "Limit" is identical with "NRP power control" > "RF Amplitude Limit", see

- [Chapter 7.6, "RF level settings"](#), on page 303
- ["NRP power control settings"](#) on page 420

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

[\[:SOURce<hw>\]:POWer:LIMit\[:AMPLitude\]](#) on page 1002

### Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto"	<p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p>
--------	--



**"Uninterrupted"**

Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.

This mode reduces the dynamic range of the instrument. The step attenuator is fixed.

**Note:**

Do not use the mode "I/Q Modulator > Optimization Mode > High Quality" in combination with the modes "RF Level > Setting Characteristics > Uninterrupted/Strictly Monotone".

The high-quality I/Q optimization leads to RF signal interruption. The requirements of the RF level modes "Uninterrupted" and "Strictly Monotone" cannot be fulfilled.

**"Strictly Monotone"**

Executes signal level changes monotonically increasing or decreasing.

The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.

All electronic switches, which can affect the monotonicity are fixed. The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.

**"Constant-VSWR"**

Suppresses output impedance variations at the RF output connector, due to changed level settings.

**"User"**

Indicates that a setting has been modified in the expert mode. The expert mode is a protected function that requires protection level 2 password.

Remote command:

`[ :SOURce<hw> ] :POWer:LBEHaviour` on page 1002

**7.12.4.4 NRP sensor configuration**

Access:

- Select "RF" > "RF Measurement" > "NRP Sensor Configuration".



Power Viewer	Power Control	Sensor Configuration	Sensor Mapping
Average		-1.02	dBm
State		Zero	
Display Permanent		<input checked="" type="checkbox"/>	Display
Use Frequency Of		RF	Average
Level Offset State		Off	Level Offset
Filter		Auto	0.000 dB
			Filter Length
			376
			Timeout
			2.00 s
Default Aperture Time		<input checked="" type="checkbox"/>	Aperture Time
			5.0 ms
S-Parameter		Unused	Enable Logging
			<input type="checkbox"/>

1: NRP-Z81 900008  
 2: NRP18SN 101748  
 4: NRP33SN-V 900011

In this dialog you can configure the parameters for each mapped R&S NRP power sensor in separate tabs.

The remote commands required to define these settings are described in [Chapter 13.15, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 746, including the triggering of the measurement and the retrieval of measurement results.

### Settings:

Sensor type and serial number.....	425
Level (Peak) / Level (Average).....	426
State.....	426
Zero.....	426
Display.....	426
L Permanent.....	426
L Display.....	426
Use Frequency Of.....	426
Frequency.....	427
Level Offset State,Level Offset.....	427
Filter.....	427
Filter Length.....	428
Auto Once.....	428
Noise/Signal Ratio.....	428
Timeout.....	428
Default Aperture Time.....	428
Aperture Time.....	428
S-Parameter.....	429
Enable Logging.....	429

### Sensor type and serial number

The side tab label indicates type and serial number of an R&S NRP power sensor and its mapping index.



The **Level (Peak) / Level (Average)** values display the current readings of the sensor.

Remote command:

`:SENSe<ch>[:POWER]:TYPE?` on page 761

`:SENSe<ch>[:POWER]:SNUMber?` on page 760

### Level (Peak) / Level (Average)

Indicates the measured peak or average level value.

You can also change the unit for the results display: Watt, dBm or dBμV.

**Note:** Peak level measurements are provided if the power sensor supports this feature.

Remote command:

`:READ<ch>[:POWER]?` on page 753

`:SENSe<ch>:UNIT[:POWER]` on page 754

### State

Enables level measurement of the R&S NRP power sensor.

Remote command:

`:INITiate<hw>[:POWER]:CONTinuous` on page 752

To query the availability of a sensor at a given connector, use the command :

`SENSe<ch>[:POWER]:STATus[:DEVIce]?` on page 760.

### Zero

Activates the auto zeroing.

For details, see ["About zeroing"](#) on page 418.

Remote command:

`:SENSe<ch>[:POWER]:ZERO` on page 761

### Display

Sets the display mode for power readings.

#### Permanent ← Display

Enables the display of the power sensor with the currently measured value in the task bar.

The task bar label shows the measurement result, the channel, the sensor is mapped to and its serial number. Optionally, "(Offset,Peak)" appear when you have set these parameters.

You can activate the permanent display for several sensors.

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:STATe` on page 756

#### Display ← Display

Sets the display of results on mean or peak power.

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:PRIority` on page 755

### Use Frequency Of

Selects the source for measurement.



"RF"	The R&S SMBV100B transfers the RF frequency and level settings to the R&S power sensor automatically. Thus you achieve power readings of high accuracy, irrespective from the connected sensor type.
"User"	Sets a user defined frequency.

**Example:**

If you have a frequency converting device between the generator and the DUT. If the frequency converter doubles the frequency, you can set twice the frequency in the R&S SMBV100B. The R&S power sensor considers this RF frequency setting.

Set the parameter [Frequency](#) to the measurement's frequency.

Remote command:

[:SENSe<ch>\[:POWER\]:SOURce](#) on page 760

**Frequency**

Defines the frequency value if "Source > User" is used.

Remote command:

[:SENSe<ch>\[:POWER\]:FREQuency](#) on page 758

**Level Offset State,Level Offset**

Activates and defines a level offset which is considered in the power measurement result. The level offset value is always expressed in dB, irrespective of the display of the measurement result.

This function allows you to consider, for example, an attenuator in the signal path.

Remote command:

[:SENSe<ch>\[:POWER\]:OFFSet](#) on page 759

[:SENSe<ch>\[:POWER\]:OFFSet:STATe](#) on page 759

**Filter**

Selects the way the length of the used filter is defined.

See also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 417.

"Auto"	<p>Selects the filter length automatically and adjusts it to the measured value. The value is indicated with the parameter <a href="#">Filter Length</a>.</p> <p>When high output power is applied, the filter length and therefore the measurement time can be short.</p> <p>When low output power is applied, the filter length and therefore the measurement time is increased which reduces the considered noise content in your measurement.</p>
"User"	<p>The filter length is defined manually, with the parameter <a href="#">Filter Length</a>. As the filter length works as a multiplier for the time window, constant filter length results in a constant measurement time.</p> <p>Values 1 and 2N are allowed.</p>



"Fixed Noise" The averaging factor is taken automatically in accordance to the value [Noise/Signal Ratio](#). Thus, the sensor's intrinsic noise (2 standard deviations) does not exceed the specified noise content. To avoid long measurement times when the power is too low, set a [Timeout](#).  
Timeout is the maximum acceptable measurement time which limits the averaging factor and therefore leads to a more unstable readout.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:TYPE](#) on page 758

### Filter Length

Sets or indicates the filter length, depending on the selected filter mode.

- "Filter > Auto" indicates the automatically adjusted filter length.
- "Filter > User" enables you to set the filter length manually.
- "Filter > Fixed Noise" hides the setting parameter.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:LENGTH:AUTO?](#) on page 756

[:SENSe<ch>\[:POWER\]:FILTer:LENGTH\[:USER\]](#) on page 756

### Auto Once

Searches the optimum filter length for the current measurement conditions. The result is indicated with the parameter [Filter Length](#).

See also "[About the measuring principle, averaging filter, filter length, and achieving stable results](#)" on page 417.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:SONCe](#) on page 757

### Noise/Signal Ratio

For [Filter > Fixed Noise](#), sets the noise content.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:NSRatio](#) on page 757

### Timeout

Sets a time limit for the averaging process.

The setting is bound to the timeout of the connected sensor.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:NSRatio:MTIME](#) on page 757

### Default Aperture Time

The sensor default setting is sufficient. Disable this parameter to specify a user-defined aperture time per sensor, if, for example, the readings vary.

To obtain stable readings, set the [Aperture Time](#) exactly to one modulation period.

Remote command:

[:SENSe<ch>\[:POWER\]:APERTure:DEFAUlt:STATe](#) on page 754

### Aperture Time

If "Use Default Aperture Time > Off", defines the acquisition time per sensor.



For example, to obtain a sufficient low average value, set the aperture time exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:TIME` on page 754

### S-Parameter

Lists the S-Parameter correction data files retrieved for the connected power sensor. To activate the correction data, select the corresponding file.

S-Parameter correction is used to mathematically shift the reference plane to the DUT by considering the S-parameters for any components connected upstream of the sensor.

The S-Parameter table can be changed with the S-Parameters tool, provided as part of the free R&S NRP Toolkit software. For more information, refer to the manual of the connected R&S NRP power sensor.

Remote command:

`:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe` on page 755

`:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?` on page 755

`:SENSe<ch>[:POWer]:CORRection:SPDevice:SElect` on page 755

### Enable Logging

Activates recording of R&S NRP power sensor readings in a log file.

There is 1 log file per sensor. The log files are created automatically and filled in continuously. They are text files with predefined filename `SensLog<n>.txt`, where `<n>` indicates the connected sensor. Log files are stored on the internal memory, in the directory `/var/user/SensorLogging`.

Each log file contains the measured value (2 readings when you work with peak sensors), the sensor type, and the measurement time (timestamp). Logged data is not overwritten. When a new measurement is started, the collected logging data is appended in the log file.

Check the used disc space regularly and remove log files to maintain storage capacity.

**Note:** The logging function is intended for measurements with long time intervals. It is suitable source for data reconstructions if the connection to the sensor was interrupted.

Remote command:

`:SENSe<ch>[:POWer]:LOGGing:STATe` on page 759

#### 7.12.4.5 NRP sensor mapping

The "NRP Sensor Mapping" lists the sensors detected by the instrument.

Any R&S NRP sensor that supports the USB legacy protocol and is connected to one of the USB interfaces, is detected automatically and added to the list. When you disconnect a power sensor, the R&S SMBV100B removes it from the list accordingly.

R&S NRP sensors that are connected in the LAN or use the USBTMC protocol are only detected by the scan search function.



Access:

- Select "RF" > "RF Measurement" > "NRP Sensor Mapping".

NRP Sensors						
Power Viewer	Power Control	Sensor Configuration	Sensor Mapping			
		Sensor	Peak	Revision	Protocol	Connector Mapping
1		NRP-Z11 900003	<input type="checkbox"/>	04.16	Legacy	1
2		NRP18SN 101699	<input checked="" type="checkbox"/>	02.40.22081101	Visa	3
3		NRP18SN 101748	<input checked="" type="checkbox"/>	02.40.22081101	Legacy	2
4		NRP18SN 101748	<input checked="" type="checkbox"/>	02.40.22081101	Visa	
5		NRP18TN 100952	<input type="checkbox"/>	03.00.23050801 .beta	Visa	
6		NRP67TN 101015	<input type="checkbox"/>	02.30.21062301	Visa	
7		NRP67TN 101016	<input type="checkbox"/>	02.30.21062301	Visa	
8		NRP6AN 101118	<input checked="" type="checkbox"/>	17.11.27.03	Visa	

Scan
Start
Clear
Add Sensor ...

The dialog lists all detected R&S NRP sensors for selection and mapping. You can also browse the network for sensors.

The list informs on the sensor type with serial number, specific features and the revision of the sensor firmware.

For each sensor, you find the used protocol and the connector icon of the interface. In the "Mapping" column, you can assign a mapping index to enable the sensor for use. The list can contain several entries but the R&S SMBV100B can only use up to four sensors simultaneously.

The remote commands required to define these settings are described in [Chapter 13.15, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 746.

## Settings

<a href="#">Sensor Mapping List</a> .....	430
<a href="#">Scan</a> .....	431
<a href="#">Clear</a> .....	431
<a href="#">Add Sensor/Hide 'Add Sensor'</a> .....	431
<a href="#">Add Sensor settings</a> .....	431
L <a href="#">Add LAN Sensor settings</a> .....	431
L <a href="#">Add USB Sensor settings</a> .....	432

## Sensor Mapping List

Shows the sensors that are connected to the R&S SMBV100B.

The table informs on the sensor type, specific features and the installed sensor firmware. It also shows the interface the sensor is connected to, including the communication protocol and the mapping index.



Remote command:

`:SLIST[:LIST]?` on page 750

`:SLIST:ELEMENT<ch>:MAPPING` on page 752

`:SLIST:SENSOR:MAP` on page 752

### Scan

Scans the network and the USB connections for sensors connected using the VISA communication protocol, i.e. sensors that are addressed over LAN or USBTMC.

The instrument detects sensors communicating over the USB legacy protocol automatically.

Remote command:

`:SLIST:SCAN[:STATE]` on page 750

### Clear

Removes the selected sensor from the sensor mapping list.

Remote command:

`:SLIST:CLEAR:LAN` on page 751

`:SLIST:CLEAR:USB` on page 751

`:SLIST:CLEAR[:ALL]` on page 752

### Add Sensor/Hide 'Add Sensor'

Shows or hides the "Add Sensor" settings.

Add Sensor		
IP Address or Host Name NRQ6-101624		Add LAN Sensor
Device ID or Sensor Name NRQ6	Serial Number 101624	Add USBTMC Sensor

### Add Sensor settings

Configures settings to add sensors connected to the R&S SMBV100B over USB or LAN.

#### Add LAN Sensor settings ← Add Sensor settings

Configures settings to add sensors connected to the R&S SMBV100B over LAN.

"IP Address or Host Name"

Displays the host name or the IP address of a R&S NRP power sensor.

If the R&S SMBV100B does not detect a connected R&S NRP sensor, you can assign the address information manually.

"Add LAN Sensor"

Adds a detected R&S NRP sensor connected in the LAN to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:LSensor` on page 750



**Add USB Sensor settings ← Add Sensor settings**

Configures settings to add sensors connected to the R&S SMBV100B via USB.

**"Device ID or Sensor Name"**

Displays the device identifier or the name of the R&S NRP power sensor.

If the R&S SMBV100B does not detect a connected R&S NRP sensor, you can assign the ID or name manually.

**"Serial Number"**

Displays the serial number of the R&S NRP power sensor.

If the R&S SMBV100B does not detect a connected R&S NRP sensor, you can assign the serial number manually.

**"Add USBTMC Sensor"**

Adds a detected R&S NRP sensor connected at the USB interface to the list of sensors, including its device ID or name and its serial number.

Remote command:

[:SLIST:SCAN:USENSor](#) on page 751

**7.12.5 To calibrate the power level with an R&S NRP power sensor**

Using a R&S NRP power sensor and the user correction function of the instrument, you can compensate external frequency responses. The R&S SMBV100B utilizes the readings of the power sensor and creates a correction value table for controlling the output level during operation.

**To connect the R&S NRP to the R&S SMBV100B**

1. Connect the power sensor.  
See [Chapter 7.12.4.1, "Connecting R&S NRP power sensors to the R&S SMBV100B"](#), on page 415.
2. Select "RF" > "RF Measurement" > "NRP Sensor Mapping".
3. If the sensor is not detected automatically, select "Scan > Start".  
The instrument scans the network and the USB connections for connected sensors and lists all detected R&S NRP sensors in the mapping table.
4. In the "Mapping" column, assign the sensor to a sensor channel, see [Chapter 7.12.4.5, "NRP sensor mapping"](#), on page 429.
5. Close the dialog.

**To configure and calibrate the R&S NRP in the R&S SMBV100B**

Provided the power sensor is connected to the R&S SMBV100B and is assigned to a sensor channel, we recommend that you calibrate and configure the power sensor.

1. In the block diagram > RF, turn off the RF output signal.
2. Select "RF" > "RF Measurement" > "NRP Power Viewer".




Power Viewer	Power Control	Sensor Configuration	Sensor Mapping	
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...
2: NRP18SN 101748	Average	-1.03	dBm	Config ...
3: NRP67TN 101015	Average	-38.20	dBm	Config ...
4: NRP33SN-V 900011	Average	-7.96	dBm	Config ...

- To configure the sensor, select "Config".
- Select "Zero" to start zeroing of the sensor.  
**Note:** Always turn the RF power off or disconnect the sensor from RF before zeroing, since the function calibrates the power sensor at zero signal power.  
The zeroing process takes a few seconds, depending on the power sensor type.
- Configure additional parameters for the selected sensor as required.
- Select "State > On".
- Close the dialog.

#### To create user correction data with an R&S NRP and the R&S SMBV100B

We assume, that the power sensor is connected, assigned and ready for operation.

- Select "RF" > "RF Level" > "User Correction".

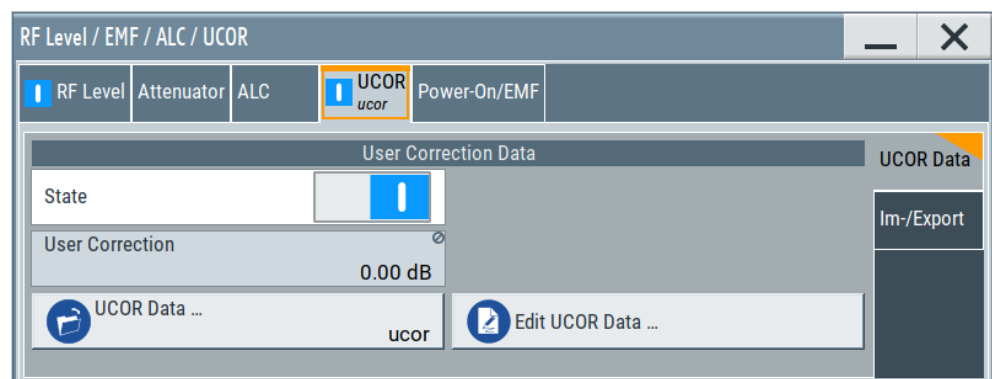

- Select "UCOR Data" > "UCOR Data...."
- Create a file: "New" > Filename and confirm with "OK".
- Select the new file with "Select".
- Select "Edit UCOR Data...".
- Select "Edit" > "Fill".  
The "Fill Table" dialog enables you to fill in the values of the columns automatically.
- To fill in the frequency column:



From	0	Range	15
Column To Fill	Frequency / Hz		
Start Value	1.560 000 000 00 GHz	End Value	1.574 000 000 00 GHz
Increment Value	1.000 000 00 MHz		
<input checked="" type="checkbox"/> Fill			

- Select "Select Column To Fill > Frequency / Hz".
- Select "Range > e.g. 15" to determine the number of values.
- Select "Start Value > e.g. 1.56 GHz".
- Select "Increment Value > e.g. 1 MHz", to determine the frequency steps.
- Select "Fill", to insert the frequency values.

The "Fill" function also fills the column of the "Correction Value / dB" values with a predefined value, since empty cells lead to the data loss of the entire line. If you need different values, you can change them manually, or you can use the automatic function "Fill with Sensor" as described in the next steps.

- Select "Fill with Sensor".

The "Fill User Correction Data With Sensor" dialog provides an overview of the sensor configuration.

- Select "Execute".

The R&S SMBV100B successively sets each frequency point, reads the measured power of the sensor and fills in the value in the correction table.

	Frequency / Hz	Correction Value / dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.58
3	1 563 000 000.00	10.17
4	1 564 000 000.00	9.80
5	1 565 000 000.00	9.46
6	1 566 000 000.00	9.18

Go To Edit Fill with Sensor ... Save As ... Save

- Select "Save" to save the data in the file.
- Close the dialog.



**To perform power leveling calibration with user correction data**

We assume that a user correction file is available in the user directory of the R&S SMBV100B or on a memory stick or in a shared directory.

If you have created and saved the file immediately before this step, the file is loaded in the "User Correction" dialog automatically. Otherwise you can load a previously saved file.

1. Select "RF" > "RF Level" > "User Correction".
2. Select "UCOR Data" > "UCOR Data...", if there is no file loaded already.
3. Select the directory and file you want to use.
4. Load the file with "Select".
5. To view the file content, select "Edit UCOR Data...".
6. Select "UCOR Data" > "State" > "On" to apply the user correction values.

When you activate the RF output, the R&S SMBV100B considers the user correction data and adjusts the signal level accordingly to compensate external frequency responses.



## 8 Monitoring signal characteristics

The R&S SMBV100B is a highly configurable signal generator with level settings distributed over several dialogs. To optimize the signal generation process and to help monitoring the variation of the signal parameters through the instrument, the R&S SMBV100B is equipped with a real time graphical signal display. This section explains the provided functions for monitoring of the signal characteristics in real time. Here you can also find out how to visualize the generated signal with measurement diagrams.

### 8.1 Displaying baseband signal characteristics in real-time

In test setups, you usually use signal and spectrum analyzers or an oscilloscope to display and analyze the characteristics of the generated signal. In the R&S SMBV100B, you can also use the built-in graphical signal display function and visualize a subset of signal characteristics.

#### 8.1.1 Required options

The minimum equipment layout for using this function includes the base unit.

#### 8.1.2 About the graphical signal display

To ease the setting and routing of baseband signals, R&S SMBV100B is able to capture these signals and display them graphically in different ways: as I/Q, vector, eye or constellation diagram, as power spectrum or as statistical evaluations.

In the digital domain, the measurements are based on recorded I/Q samples. The sources of these samples are selectable points (acquisition points) in the signal flow. You can configure and display the signal characteristics simultaneously in up to diagrams.

##### 8.1.2.1 Available diagrams

This section focuses on graphical signal displays, their content and application. See [Table 8-1](#) for an overview of the signal characteristics you can monitor.

**Table 8-1: Graphics modes overview**

Graphics modes	Domain	Measurement is known from this instrument
<a href="#">I/Q diagram</a>	Time	Oscilloscope (standard mode)
<a href="#">Vector diagram</a>	Time	Oscilloscope (XY mode)



## Displaying baseband signal characteristics in real-time

Graphics modes	Domain	Measurement is known from this instrument
<a href="#">Constellation diagram</a>	Time	Oscilloscope (XY mode)
<a href="#">Eye diagram</a>	Time	Oscilloscope (triggered to symbol clock and showing repetitive traces)
<a href="#">CCDF display</a>	Statistical representation of peaks	Peak Power Analyzer
<a href="#">Power spectrum</a>	Frequency	Spectrum Analyzer

**I/Q diagram**

The I/Q diagram displays the inphase component ( $i[t]$ ) and quadrature component ( $q[t]$ ) of the I/Q signal over time.



**Figure 8-1: I/Q diagram with markers**

= window with two separate coordinate systems with identical X and Y axes

X-axis = time represented as number of symbols, chips, or samples depending on the signal

Y-axis = amplitude, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1


**Application:** To analyze impairments, added noise and signals (e.g. from external baseband input) in the time domain. This mode shows the signal like an oscilloscope.

**Signal acquisition points:** See [Table 8-2](#).

**Vector diagram**

The vector diagram displays the Q component over the I component. All points in the complex domain are connected by lines.



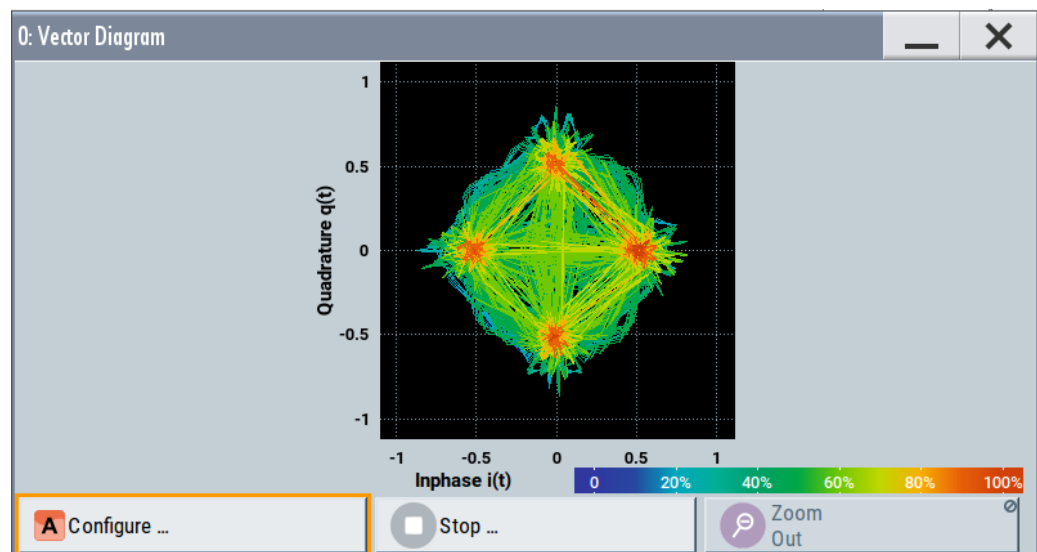

**Figure 8-2: Vector diagram (64 QAM)**

X-axis, Y-axis = amplitudes of the signal components, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

**Application:** To analyze the transition between the various states of modulation mapping, especially with linear modulations like MSK, QPSK or QAM. This mode shows the signal like an oscilloscope (X/Y-mode).

**Signal acquisition points:** See [Table 8-2](#).


### Constellation diagram

Constellation diagrams display the modulation symbols as discrete points in the I/Q plane. Unlike the vector diagram, the constellation diagram displays only one sample per symbol. This sample represents the symbol.

Constellation diagrams are helpful when generating signals using the "Custom Digital Modulation" settings. Compare the displayed constellation diagram with the diagram displayed in the "Custom Digital Modulation > Modulation" dialog.



Displaying baseband signal characteristics in real-time

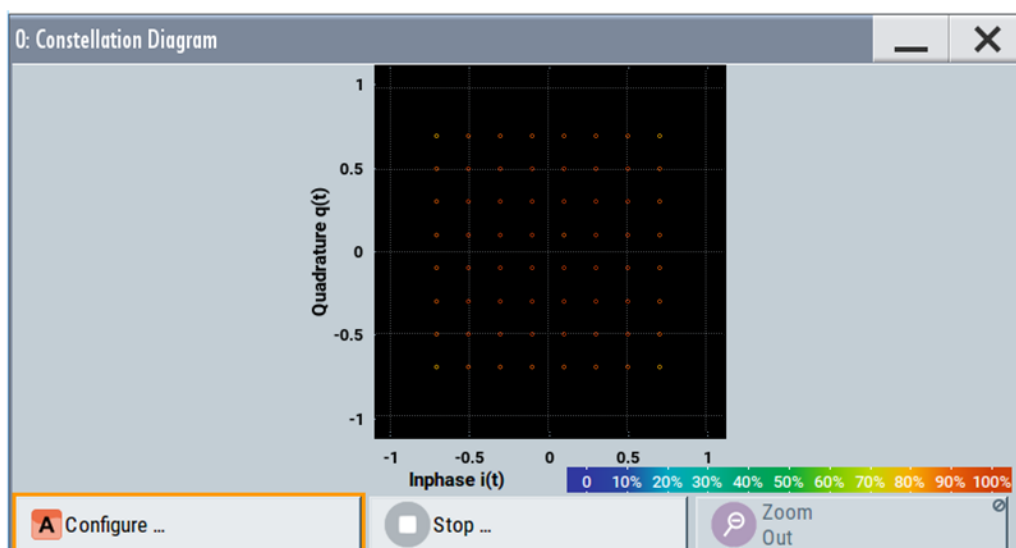

**Figure 8-3: Constellation diagram (64 QAM)**


X-axis, Y-axis = amplitudes of the signal components, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1

**Application:** To classify modulation.

**Signal acquisition points:** See [Table 8-2](#).

### Eye diagram

The eye diagram displays synchronized and superimposed sections of either the in-phase or the quadrature components of the signal.

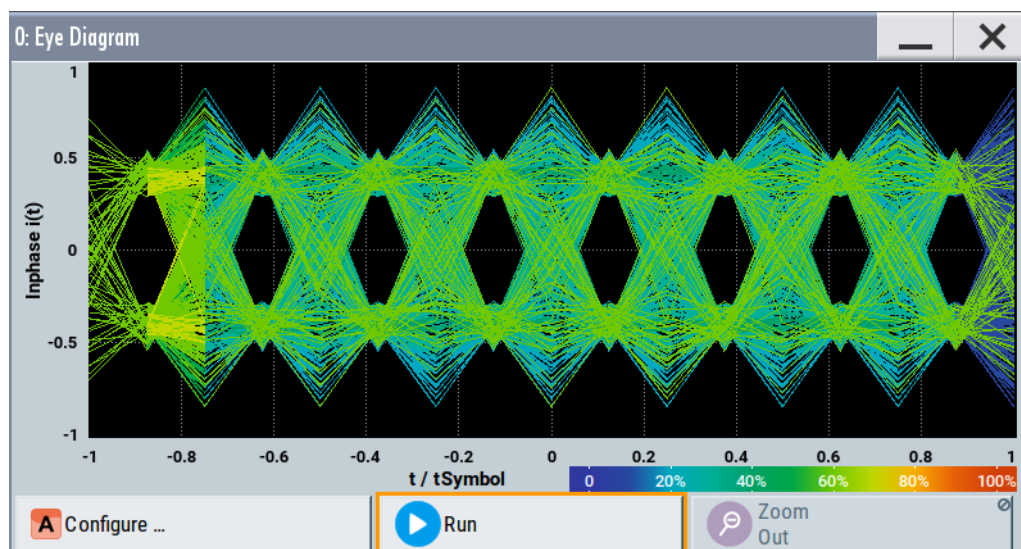

**Figure 8-4: Eye diagram with partially closed eye (QPSK)**

X-axis = time in the range of  $\pm 1$  symbol

Y-axis = amplitude, scaled to the peak envelope power; where minimum scaled amplitude = -1, maximum scaled amplitude = +1




The display width is normalized for 2 symbols. It uses one-symbol "eye opening" in the center of the display and 1/2-symbols to the left and right of the center eye for capturing time transitions. Several hundreds curve segments are superimposed. The beginning of the recording is synchronous to the symbol and chip clock pulse.

**Application:** To analyze amplitude and time distortion elements (e.g. jitter) at high-speed digital data systems. A high quality, unimpaired signal shows a clearly open eye (horizontally and vertically).

**Signal acquisition points:** See [Table 8-2](#).

### CCDF display

The complementary cumulative distribution function (CCDF) displays the probability with which the output signal exceeds the average power.

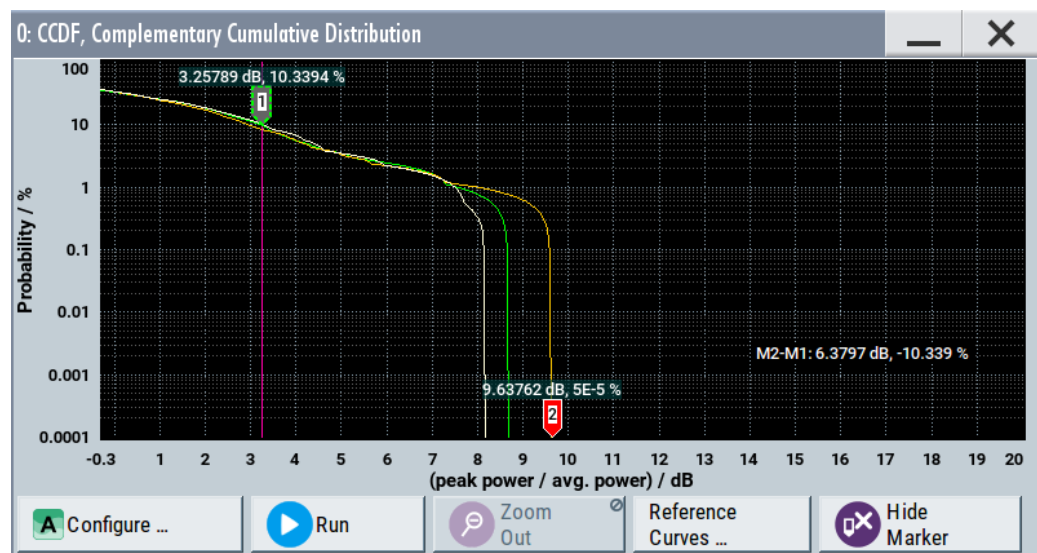

**Figure 8-5: CCDF diagram of a 5 MHz LTE Signal (Level -30 dBm) and two reference curves**

- X-axis = Level over the average signal power, where the average power (RMS) corresponds to the origin  
 Y-axis = Probability of exceeding the average power, that is the percentage of time the signal spends at or above the power level specified by the X-axis  
 Marker 1 = Interpolation: 10.3% of the samples exceed 3.3 dB above average; similarly 1% of the samples exceed 7.5 dB above average (not shown with a marker)  
 Marker 2 = The point where the trace crosses the x-axis; indicates the highest peak that is found in the sample block and is 9.6 dB higher than average.

The CCDF diagram is calculated over 8 KSamples and corresponds to a signal with the following characteristics:


- "Baseband > LTE" and "Test Model > E-TM1\_1\_\_5 MHz"
- "Status bar > Level = - 30 dBm" and "Status bar > PEP = - 18.43 dBm"  
 The difference between the level and the PEP results in the peak to average ratio. If the measurement is long enough, the displayed highest peak would correspond to the calculated crest factor.  
 The PEP value does not indicate how often the peak level is reached. The CCDF shows the probability for reaching a dedicated instantaneous power.



**Signal acquisition points:** See [Table 8-2](#).

### Power spectrum

The power spectrum displays the signal spectrum which is calculated from the I/Q signal with fast Fourier transform (FFT). The power density over frequency is displayed.

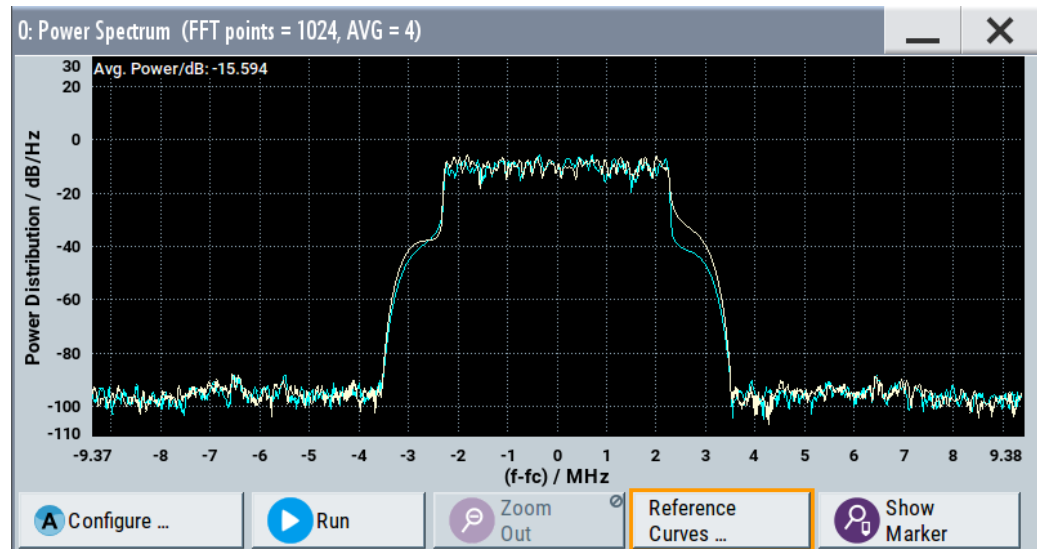

**Figure 8-6: Power spectrum diagram of a 5 MHz LTE signal with enabled reference curve (blue)**

"FFT points" = indicates the number of I/Q value pairs that are used for calculating a (part-)FFT  
 "AVG" = indicates the number of subspectra used for averaging  
 X-axis = frequency plotted symmetrically (- Sampling Rate/2 to +Sampling Rate/2)  
 Y-axis = power density

**Signal acquisition points:** See [Table 8-2](#).

#### 8.1.2.2 Signal acquisition points

Signal characteristics can be displayed using different methods and different acquisition points, also at the same time. [Table 8-2](#) shows which signal acquisition point is suitable for which kind of graphics mode. Also, it provides associated graphics sources and the designation of the access points in the block diagram.

**Table 8-2: Signal acquisition points, modes and sources**







Signal acquisition points	Graphics modes	Graphics source	Designation
Baseband signals	Constellation diagram, eye diagram	"Baseband" "BB Input"	 
Input streams	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"Stream"	
Analog outputs	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"IQ Out" "RF"	 
Digital output streams	I/Q diagram, vector diagram, CCDF diagram, power spectrum diagram	"IQ Digital"	



Figure 8-7 shows an example for locations of signal acquisition points.

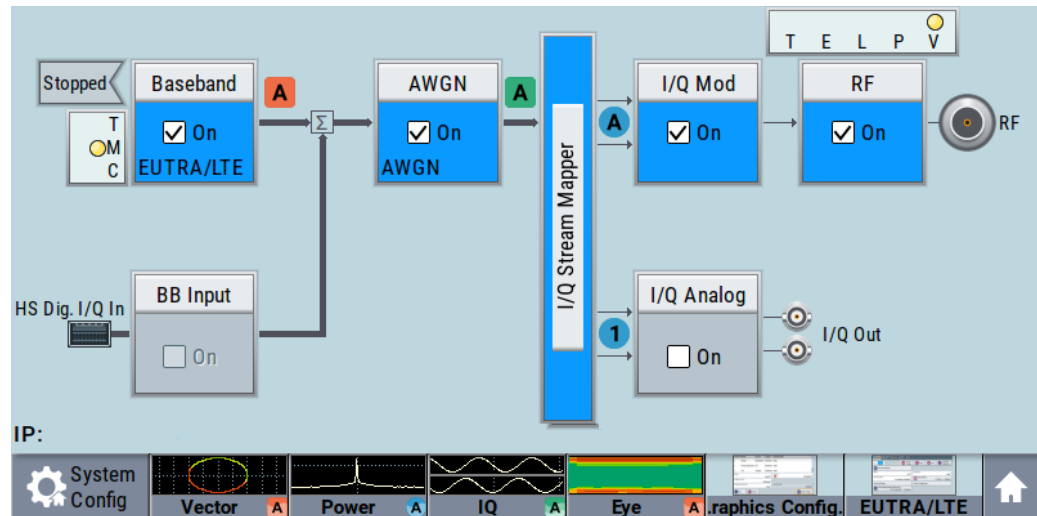


Figure 8-7: Block diagram with graphical signal display and signal acquisition points

### 8.1.2.3 Display functions

The graphical display provides general display functions known from other measurement instruments and offers zoom and markers.

#### Zooming

You can zoom into the diagram to visualize the measurement results in greater detail. Using the touchscreen or a mouse pointer you can easily define the area to be enlarged.

Zooming is merely a visual tool, it does not change the number of samples used for the calculation. You can increase the number of samples before zooming.

See also ["To zoom into a diagram"](#) on page 453.



#### Using markers

Markers are tools for numerical readout of measured data in diagrams. They help you analyze the displayed signal characteristics by determining particular values in the diagram.

Often you can use markers to measure the frequency distance of two peaks or to measure the power decrease of an oscillator at a given frequency offset, dBc value. Note that markers in the diagram are not related to the markers in the digital standards.

In the graphical display, the markers and their values (for example time or frequency) are displayed as usual.

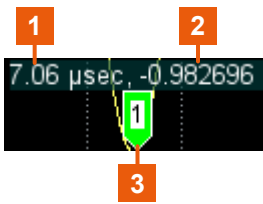

Single marker indication	Delta marker indication
 <ul style="list-style-type: none"> <li>1 = marker position on the x-axis in the current units</li> <li>2 = marker value on the y-axis</li> <li>3 = marker number</li> </ul>	 <ul style="list-style-type: none"> <li>1 = delta marker</li> <li>2 = result of the marker function, i.e. the delta values in the current units</li> </ul>

See also ["To enable markers to readout exact measured data"](#) on page 453.

### Persistence and color maps

In addition to the standard representation, the vector, the constellation, and the power spectrum diagrams use a color map.

The color encodes the relative amplitude (in percent) of the probability distribution of the data points in the diagram. A detailed breakdown of the colors is below diagrams the colors are relevant for. Data points in areas with high probability are marked in red, data points in areas with low probability in blue. Thus, for example, you can observe not only the "level versus frequency" trace but also a third dimension, the probability of the power level.


### Reference trace

Reference traces help you analyze a displayed characteristic, as do the markers. Reference traces are used to define amplitude curves or spectral distribution boundaries in the result diagram which are not to be exceeded. They indicate, for example, the upper power limits which are allowed from a device under test (DUT).

The R&S SMBV100B supports up to five reference traces. You can load reference traces and activate them simultaneously.

## 8.1.3 Graphics configuration settings

This section focuses on the graphics configuration dialog, which determines the number and kind of the graphical signal displays.



Access:

1. Select "Taskbar > System Config > Graphics" or use the wave icon.

The "Graphics Configuration" dialog opens.



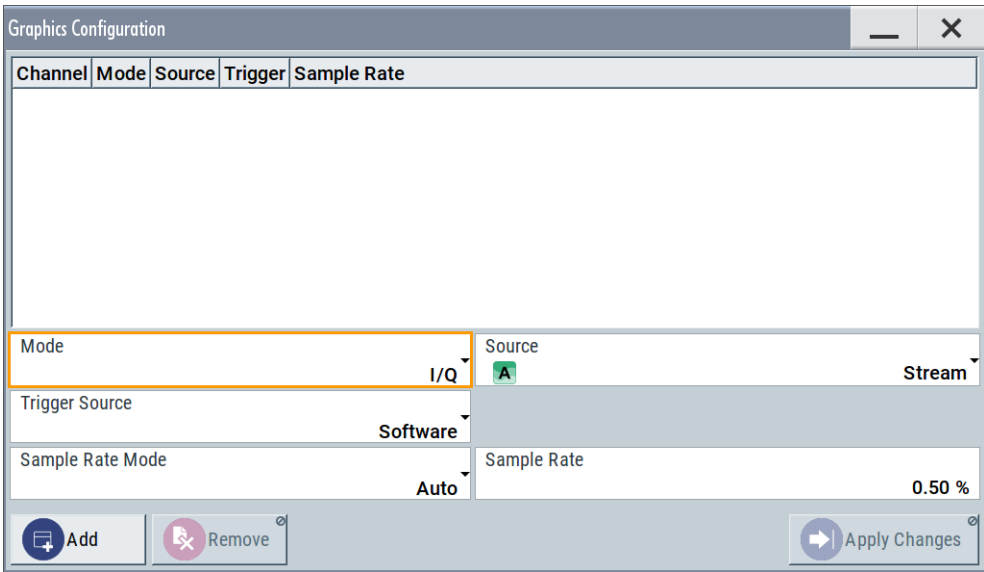


Figure 8-8: Graphics configuration dialog

- 2. To determine the kind of signal display, use the parameter "Mode".
- 3. To select suitable signal acquisition points, use the parameter "Source".
- 4. To enable the graphical signal display, select "Add".

A thumbnail of the graphical signal display is shown in the taskbar.

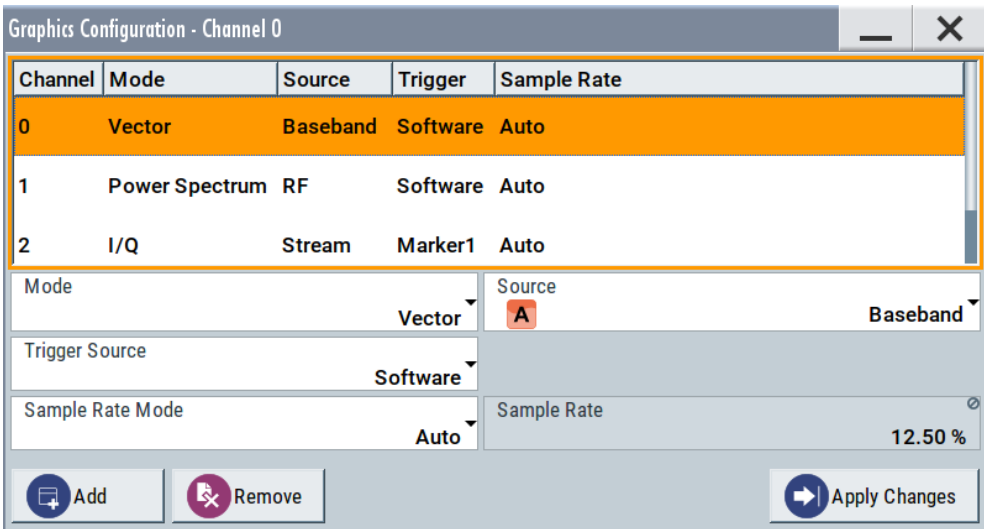


Figure 8-9: Graphics configuration dialog with active graphical signal displays

- 5. To enlarge the thumbnail, select it.

Settings:

Graphical Diagrams Table	445
Mode	445
Source	445



FFT Length.....	445
Full Scale (dBFS).....	445
Trigger Source.....	445
Sample Rate Mode.....	446
Sample Rate.....	446
Add.....	446
Apply Changes.....	446
Remove.....	447

### Graphical Diagrams Table

The active graphical signal displays are listed in the table at the top of the dialog.

#### Mode

Determines the graphics mode, see [Chapter 8.1, "Displaying baseband signal characteristics in real-time"](#), on page 436.

Remote command:

`[ :SOURce<hw> ] :BB:GRAPhics:MODE` on page 928

#### Source

Defines the signal acquisition point, see [Chapter 8.1.2.2, "Signal acquisition points"](#), on page 441.

Remote command:

`[ :SOURce ] :BB:GRAPhics:SOURce` on page 930

#### FFT Length

In "Mode > Power Sepectrum", selects the number of samples to be included in the graph of the power spectrum.

Remote command:

`[ :SOURce ] :BB:GRAPhics:FFTLen` on page 930

#### Full Scale (dBFS)

In "Mode > Power Spectrum", determines the normalization of the power values in the diagram.

Observe the change in the units on the y-axis.

"On"	The maximal digital power $ I = Q =\max$ is mapped to 0 dB in the power spectrum diagram. The y-axis shows the normalized power in dBFS.
"Off"	The frequency average of the displayed power (frequency domain) agrees with the average power in the time domain. The y-axis shows the power distribution in dB/Hz.

Remote command:

`[ :SOURce ] :BB:GRAPhics:FFTFscale` on page 931

#### Trigger Source

Defines the trigger for signal recording.



"Software"	Recording of signals starts automatically in predefined intervals. This asynchronous method is suitable if a representative display of the complete signal is required.
"Marker 1"	The starting point for recording of signals is determined by the marker 1 setting of the activated digital standard ("Trigger/Marker" dialog). This synchronous method is suitable if specific signal segments are to be shown in greater detail. With periodic signals, a static image is obtained by selecting a period length of marker 1 that is equal to the signal period. The displayed signal segment can be shifted by entering a marker delay in the "Trigger/Marker" dialog of the activated digital standard.

Remote command:

`[ :SOURce<hw> ] :BB:GRAPHics:TRIGger:SOURce` on page 931

### Sample Rate Mode

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a display covering the entire signal bandwidth. The higher the resolution, the shorter the length of the displayed signal segment.

"Auto"	The resolution is set to an optimum value in terms of signal and display type.
"Full Bandwidth"	The resolution is set so that the display covers the entire signal bandwidth.
"User"	Activates the "Sample Rate" input field, where you can manually set the resolution.

Remote command:

`[ :SOURce<hw> ] :BB:GRAPHics:SRATe:MODE` on page 929

### Sample Rate

- If "Sample Rate Mode = Auto/Full Bandwidth"  
Displays the percentage of the entire signal bandwidth which is used for the graphical signal display.
- If "Sample Rate Mode = User"  
Input for the percentage of signal bandwidth which is used for the graphical signal display.

Remote command:

`[ :SOURce<hw> ] :BB:GRAPHics:SRATe:USER` on page 929

### Add

Adds a graphical signal display (as set in the "Graphics Configuration" dialog) to the taskbar/graphical diagrams table.

Remote command:

`[ :SOURce ] :BB:GRAPHics:ADD` on page 929

### Apply Changes

Enables the current settings for the selected graphical signal display.



**Remove**

Removes the selected graphical signal display from the taskbar/graphical diagrams table.

Remote command:

[\[:SOURce\]:BB:GRAPhics:CLOSe](#) on page 929.

Note, that this command closes all graphical signal displays.

### 8.1.4 Graphical signal display settings

Access:

1. Select "Taskbar > System Config > Graphics > Add".
2. Double click the thumbnail in the taskbar.

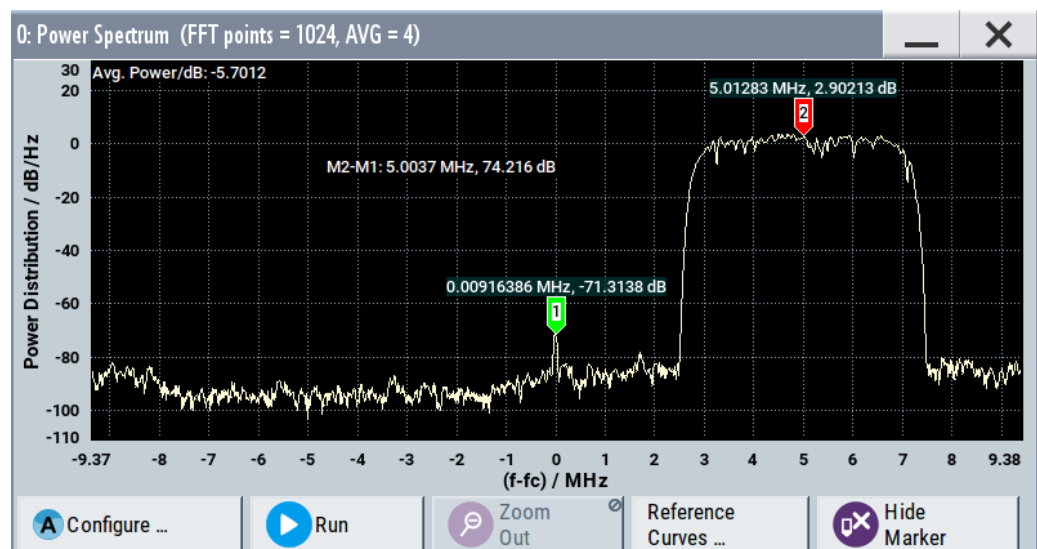


Figure 8-10: Graphical signal display of a power spectrum with markers

This section focuses on the functions of the enlarged graphical signal displays.

**Settings:**

<a href="#">Configure</a> .....	447
<a href="#">Stop / Run</a> .....	448
<a href="#">Zoom Out</a> .....	448
<a href="#">Reference Curves</a> .....	448
<a href="#">Display Units</a> .....	448
<a href="#">Show / Hide marker</a> .....	448
<a href="#">Reference Curve</a> .....	448

**Configure**

Opens the "Graphics Configuration" dialog, see [Chapter 8.1.3, "Graphics configuration settings"](#), on page 443.



**Note:** This function is available for enlarged graphical signal displays and in the context menus of the thumbnails.

### Stop / Run

Stops the processing of the displayed signal and freezes it.

"Run" continues a stopped displayed signal.

### Zoom Out

Resets a previous zoom, see also ["To zoom into a diagram"](#) on page 453.

### Reference Curves

Accesses the dialog for defining reference curves, see ["Reference Curve"](#) on page 448.

### Display Units

Changes the units of the X-axis. The available values depend on the generated signal.

### Show / Hide marker


Sets two markers to the displayed signal or hides them.

See also:

- ["Using markers"](#) on page 442
- ["To enable markers to readout exact measured data"](#) on page 453

### Reference Curve

Enable the indication of up to five configurable reference curves (traces).

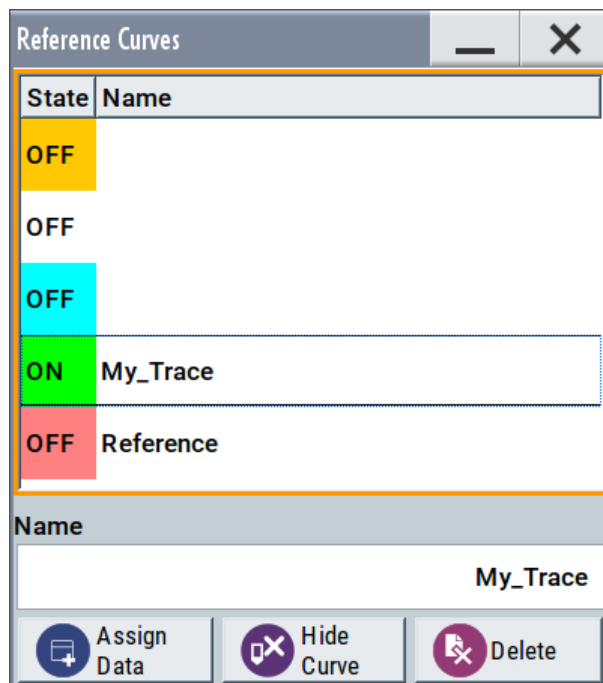

See ["Reference trace"](#) on page 443.



**"Reference Curves Table"**

Lists the configured reference curves and their current state.  
To change a curve, select it.

**"Name"**

Enters the name of a new reference curve

**"Assign Data"**

Accesses the standard "File Select" function to load a file describing a reference curve

**"Show Curve"**

Toggles the show/hide state of the selected curve

**"Delete"**

Removes the curve

### 8.1.5 How to verify the generated signal with the graphics display

This section shows you how to use the different graphic modes to visualize the signal characteristics of the generated signal. It shows also how to observe the effect of standard settings, like applied filter, an enabled fading or AWGN. The examples use a simple custom digital modulated signal.

#### To generate a simple WCDMA-3GPP (QPSK 45° offset) signal

- Use the custom digital modulation. Enable a predefined WCDMA-3GPP signal. For more information, see [Chapter 3.3.2, "Generating a digitally modulated signal"](#), on page 48.


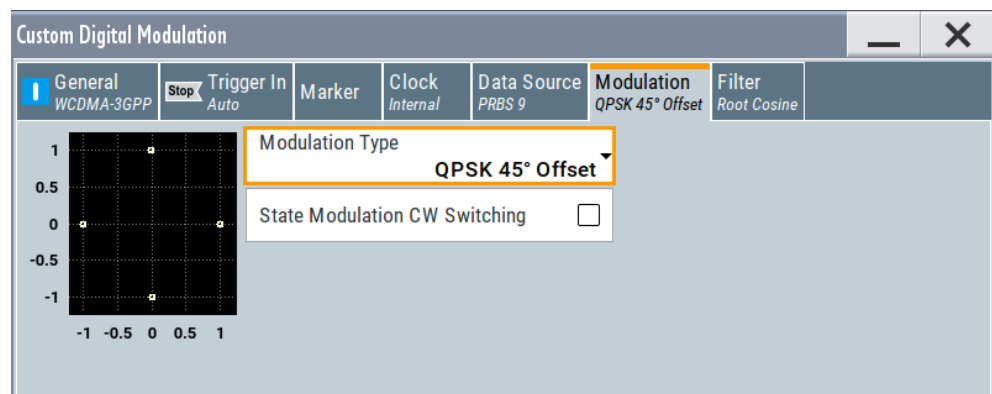


Figure 8-11: Used modulation type


#### Configure the graphical signal display

1. Select the wave icon:

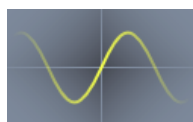


The "Graphics Configuration" dialog opens.



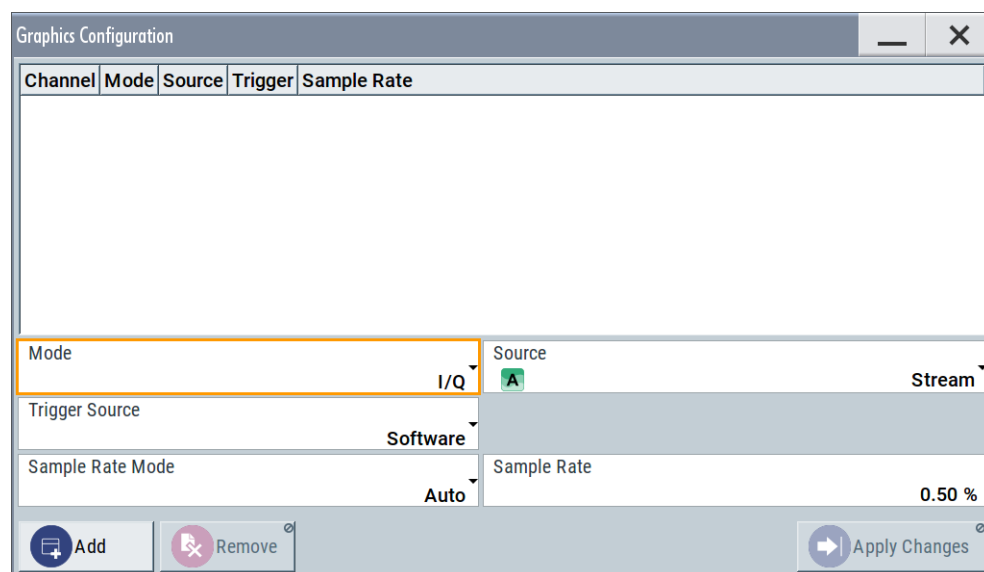

2. Select "Mode > Constellation".
3. Select "Source > Baseband".
4. To view the signal, select "Add".

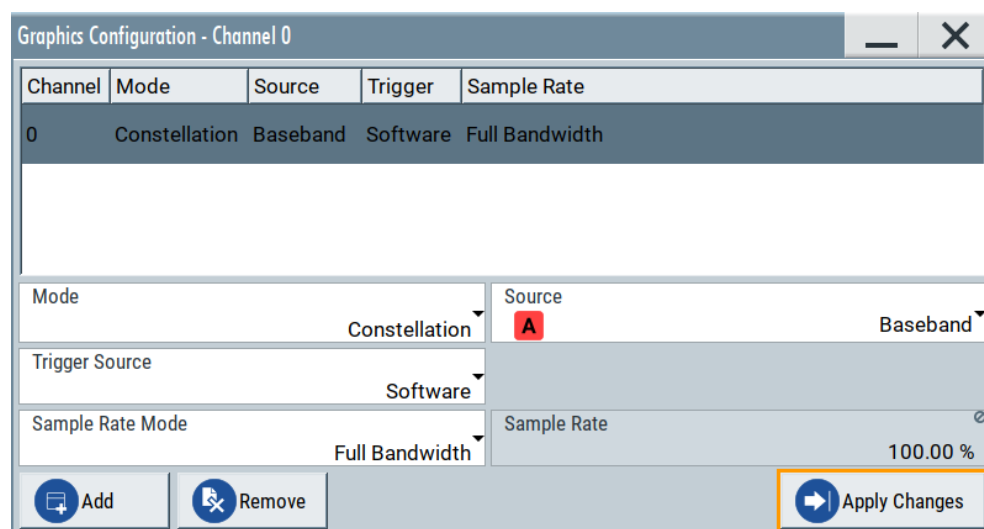

A new thumbnail (minimized view) indicating the constellation diagram appears in the "Taskbar".

5. To enlarge the constellation diagram, select it.

The displayed constellation diagram confirms the used modulation type, see [Figure 8-11](#).



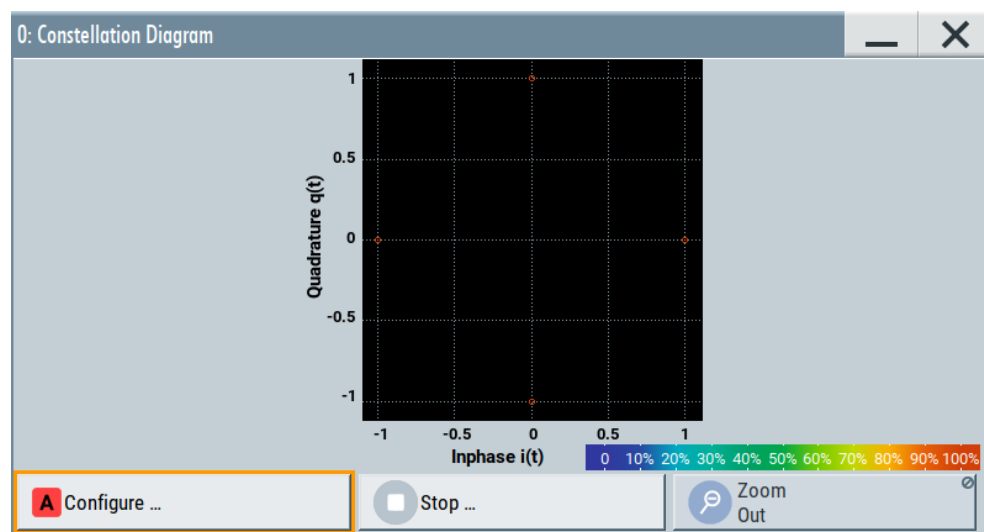


Figure 8-12: Constellation diagram of a WCDMA-3GPP (QPSK 45° offset) signal

#### To set and verify a baseband frequency offset

1. In "Baseband > Baseband Offsets", set "Baseband > Frequency Offset = 1 Hz"

Baseband Offsets			
	Frequency Offset /Hz	Phase Offset /°	Gain /dB
Baseband A	1.00	0.00	0.000
BB Input A	0.00	0.00	0.000

2. In the "Constellation Diagram", select "Configure".  
The "Graphics Configuration" dialog opens.
3. Add a vector diagram with signal acquisition point "Stream" and enlarge it.  
The vector diagram rotates with 1 Hz.



Displaying baseband signal characteristics in real-time

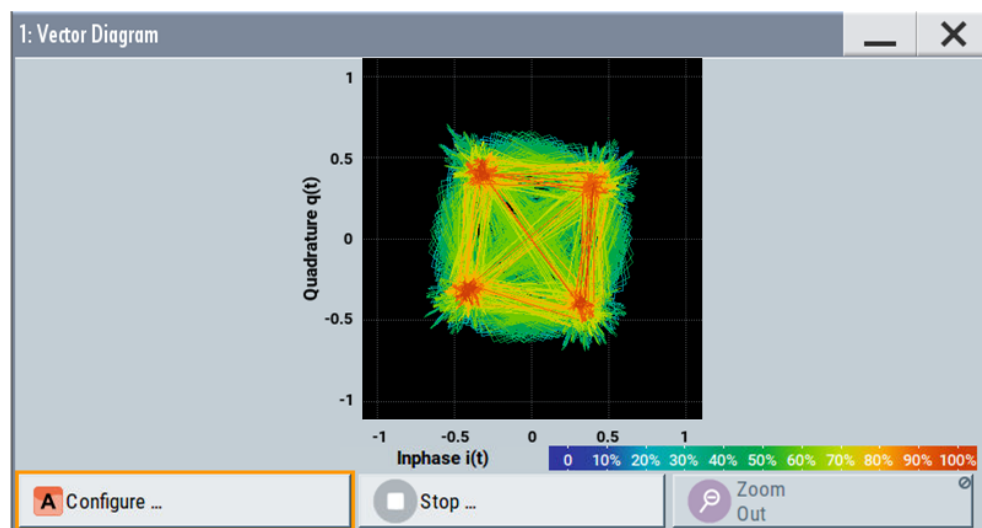



Figure 8-13: Rotating vector diagram

- Reset the baseband frequency offset to 0 Hz.

The vector diagram does not rotate any more.


#### To visualize the effect of the filter parameters on the generated signal

- Select "Baseband > Custom Digital Mod... > Filter > Roll Off Factor = 0.99"

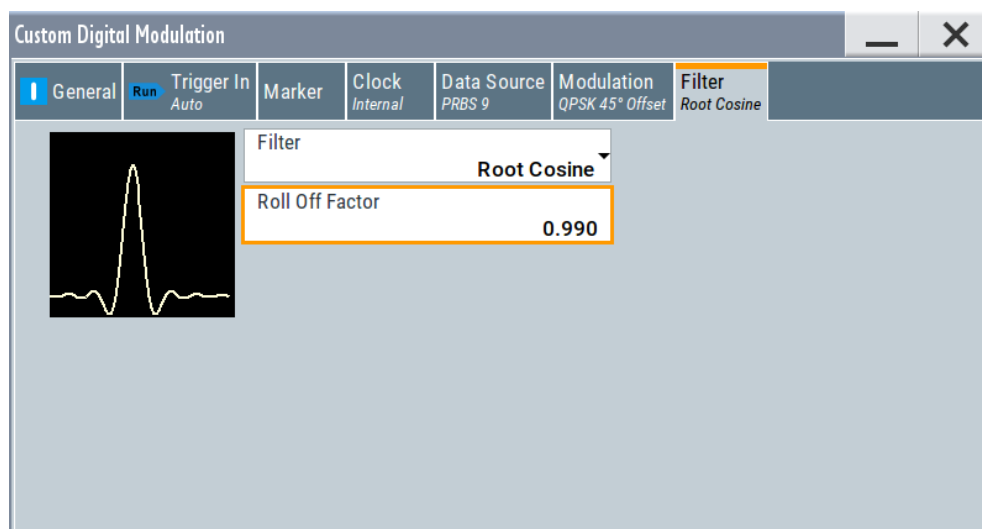

The vector diagram changes.



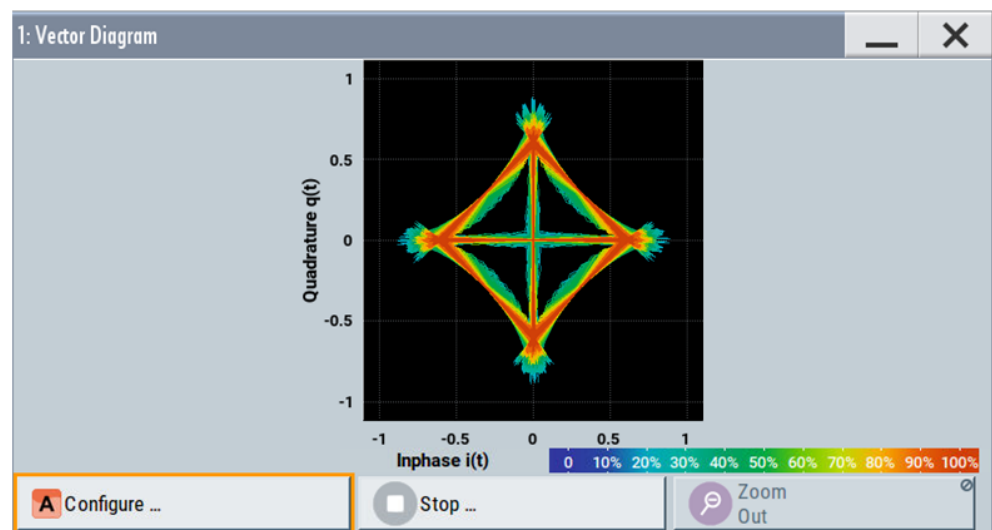

2. Select "Roll Off Factor", open the context menu, and select "Preset this parameter".

#### To zoom into a diagram

In an enlarged diagram:

1. Use the one-finger zoom to zoom with a fixed zoom factor.
2. Use the two-finger zoom to do a custom zoom.  
This zoom works like the two-finger pinching for magnifying images on your cell phone.

If the diagram is zoomed, an overview window appears.

3. Move the visible area in the graphics or in the overview window.
4. For the reverse operation, select "Zoom out".


#### To enable markers to readout exact measured data

In an enlarged diagram:

1. Select "Show Marker".  
Two markers appear, one over the other.
2. To position the markers, select and shift them.  
"M2-M1" indicates the distance of marker 1 and marker 2 on the x-axis (left value) and on the y-axis (right value).




Displaying baseband signal characteristics in real-time

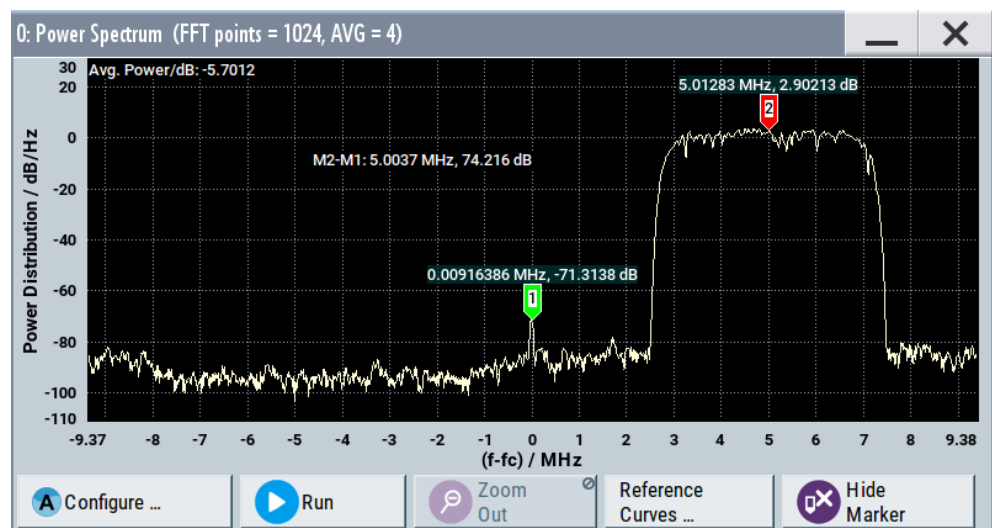

- To hide the markers, select "Hide Marker".

#### To observe the effect of enabled additive noise (AWGN)


- Select "AWGN > General > Mode > Additive Noise".
- Select "AWGN > General > Min Noise/System Bandwidth Ratio = 3".
- Select "Noise Power / Output Results > Carrier/Noise Ratio = 30 dB".

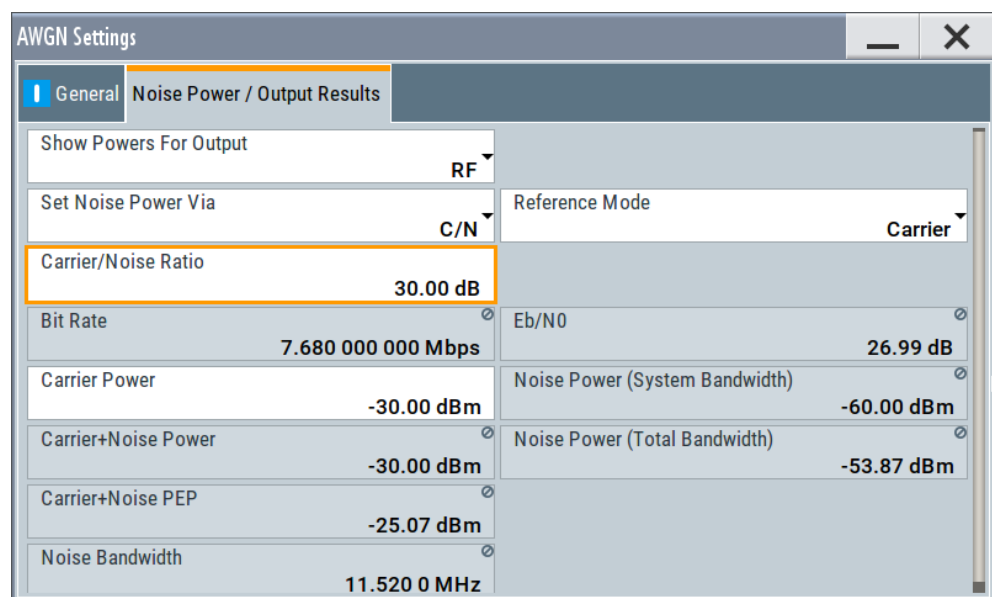

- Select "AWGN > State > On"
- Observe the power spectrum display.

The power spectrum shows a noise floor with constant level and the spectrum of the digitally modulated signal, in this case the WCDMA signal with a bandwidth of 3.84 MHz.



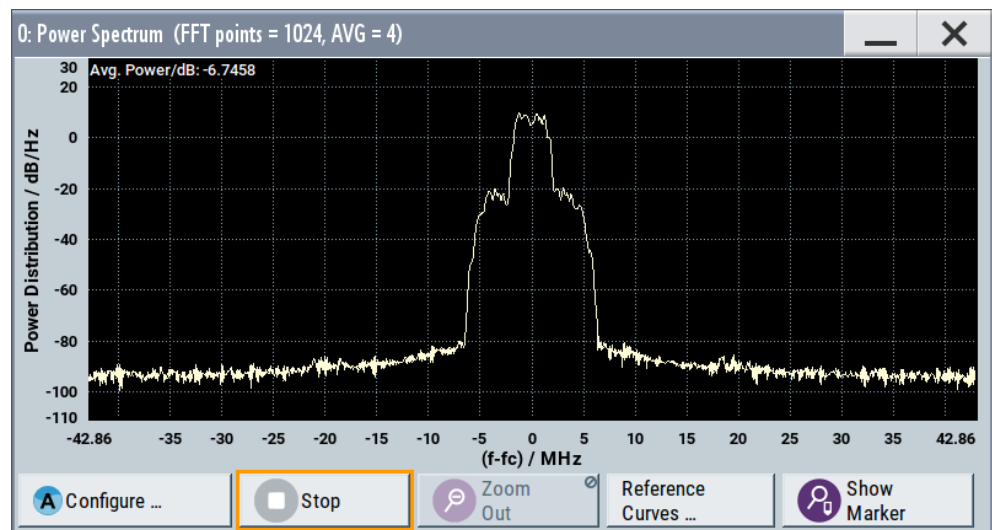

### To print current power spectrum

1. Select "System Config > Setup > User Interface > Hardcopy".
2. Use the default settings and select "Save".

The instrument creates a screenshot of the current screen and stores it in a file with a predefined filename in the default user directory `/var/user/`.

See [Chapter 10.10, "Creating screenshots of current settings"](#), on page 541.

3. Use one of the standard file transfer methods to access the user directory of the instrument. Transfer the file to a PC.  
See [Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535.
4. Print the file content.



## 9 Multi-instrument setups

R&S SMBV100B is rarely used as a standalone instrument. Usually, the instrument is connected to a device under test (DUT) or other measurement equipment.

Test setups have different requirements, for example:

- Test setups comprising two or more instruments often require a common reference frequency.
- Generation of beamforming signals requires phase coherent signals.
- Some test setups also require control of the signal generation start and an exact generation start time, for example determined by a defined trigger event.
- In other cases, you would need time-aligned simultaneous signals between multiple instruments.
- etc.

R&S SMBV100B provides several settings that help fulfilling these requirements. This section explains main principles and gives an overview of the related settings and step-by-step instructions.

• <a href="#">Synchronizing instruments</a> .....	456
• <a href="#">Generating phase-coherent signals</a> .....	456
• <a href="#">Generating time-aligned baseband signals</a> .....	457
• <a href="#">Control and operation of external instruments</a> .....	463
• <a href="#">System configuration settings</a> .....	471
• <a href="#">Digital baseband input settings</a> .....	486
• <a href="#">I/Q digital output settings</a> .....	494
• <a href="#">I/Q analog output settings</a> .....	501

### 9.1 Synchronizing instruments

For information on the possible scenarios concerning the distribution of reference frequency, test setups and the related settings:

See [Chapter 7.8, "Reference oscillator"](#), on page 308.

### 9.2 Generating phase-coherent signals

The R&S SMBV100B provides a build-in function that allows a distribution of the local oscillator signal in a way that multiple RF signals can be derived from the same LO signal. LO coupling is mandatory for minimizing the phase fluctuations between these RF signals, as it is, for example, required for the generation of beamformed signals.

For information on the possible scenarios, test setups and the related settings:

See [Chapter 7.9, "Local oscillator coupling"](#), on page 316.



## 9.3 Generating time-aligned baseband signals

In test setups that combine the signal of two or more instruments it is often required that:

- The signal generation starts at a defined moment
- The signal generation starts simultaneously (or with an exactly defined delay) in all involved instruments.

One possible way to achieve quasi-simultaneous signal start is to trigger the instruments by the same trigger event, for example from a **common trigger source**.

Because of the trigger signal propagation time and the signal processing time, however, this method does not achieve precise time aligned signals.

To generate **synchronous and time aligned signals** with multiple instruments, use the [primary-secondary instrument mode](#).

This section explains how to use the provided settings to define the signal generation start in the basebands of **multiple instruments**.

- [Connecting multiple instruments in primary-secondary instrument mode](#).....457
- [Triggering several instruments with a common trigger signal](#).....462

### 9.3.1 Connecting multiple instruments in primary-secondary instrument mode

#### About the primary-secondary instrument mode

When connected in primary-secondary instrument mode, two or more R&S SMBV100B or one R&S SMBV100B and several other signal generators such as R&S SGT or R&S SMBV can generate synchronous and time aligned signals.

In this mode, the primary instrument generates and outputs a dedicated synchronization signal (Sync Out), that has to be fed into the secondary instrument. The secondary instrument detects and demodulates the signal, and retrieves both the baseband clock and the trigger signal from it. Secondary instruments can forward the received synchronization signal (Sync In) and output it to trigger further secondary instruments.

#### Synchronization signal

The synchronization signal is a 50 MHz signal that carries the trigger pulse modulated on it. Hence, it provides **joint triggering** and **baseband clock synchronization** at the same time.

Final time alignment can require adding I/Q or trigger delay. However, once synchronization is achieved, the primary-secondary instrument mode ensures reproducibility of triggering, if the used waveform, sample rate and cabling are not changed.

#### Test setup

Regarding the **synchronization signal**, the instruments can be connected (cascaded) in a **daisy chain** (see [Figure 9-1](#)).




Also, all instruments in the setup have to use the **same reference frequency**. You can distribute the internal reference frequency of one of the instruments. Distribution is independent for primary or secondary instruments. Alternatively, supply all instruments with an external reference frequency source.

9.3.1.1 Multi-instrument settings

Access:

- ▶ Use one of the following:
  - Select "Taskbar > System Config > System Configuration > Multi Instrument"
  - Select "Block Diagram > I/Q Stream Mapper > System Configuration > Multi Instrument"
  - On the instrument front panel, press [Setup].  
Select "System Configuration > Multi Instrument".

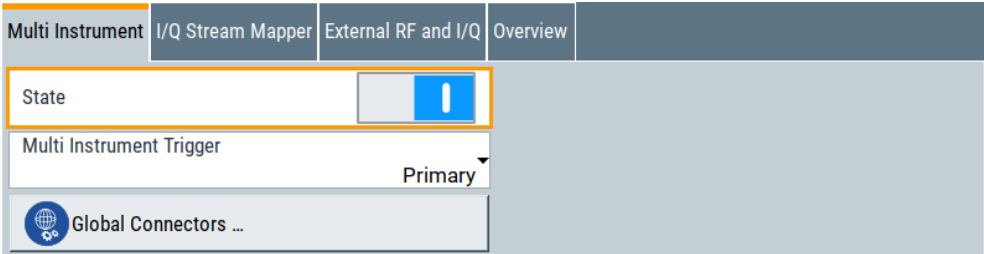

For step-by-step description, see [Chapter 9.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 459.

Settings

<a href="#">State</a> .....	458
<a href="#">Multi Instrument Trigger</a> .....	458
<a href="#">Synchronisation State</a> .....	459
<a href="#">Global Connector Settings</a> .....	459

State

Activates the configuration.

With "State = Off", the instrument works in a standalone mode.

Remote command:  
[:SCONfiguration:MULTiinstrument:STATe](#) on page 765

Multi Instrument Trigger

Sets the mode in that the instrument works.

To activate the mode, set "Multi Instrument > State = On".

"Primary"            Provides its trigger signal to the secondary instruments.



"Secondary" Synchronizes to the supplied trigger signal from the primary instrument.  
Observe the "Synchronisation State" indication for information if the synchronization signal is found and synchronization is achieved.

Remote command:

`:SCONfiguration:MULTiinstrument:MODE` on page 764

### Synchronisation State

If "Multi Instrument Trigger = Secondary", indicates if synchronization is achieved.

"Sync" Instrument is in sync.  
It receives and decodes the synchronization and the trigger signal from the primary instrument.

"No Sync" Synchronization is not achieved, because:

- The baseband generators in the secondary instruments or in the primary instruments are not activated, see ["To start signal generation"](#) on page 461.
- There is no physical connection (the synchronization signal is not connected as required).  
For details, see [Chapter 9.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 459.
- The secondary instrument does not detect the synchronization signal.

Remote command:

`:SCONfiguration:MULTiinstrument:TRIGger:SYNChronization?`  
on page 765

### Global Connector Settings

Provides a quick access to the related global connector settings.

With "State = On", the synchronization signal is assigned per default as follows:

- "Multi Instrument Trigger > Primary"  
"Connector = User 5": "Direction = Output", "Signal = Baseband Sync Out"
- "Multi Instrument Trigger > Secondary"  
"Connector = User 5": "Direction = Output", "Signal = Baseband Sync Out"  
"Connector = User 4": "Direction = Input", "Signal = Baseband Sync In"

See also:

- [Chapter 9.3.1.2, "How to connect and configure instruments in primary-secondary instrument mode"](#), on page 459.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

### 9.3.1.2 How to connect and configure instruments in primary-secondary instrument mode

Proceed as follows:

- [Connect the instruments and distribute the synchronization signal and the reference frequency](#)



- Configure the primary instrument (R&S SMBV100B)
- Configure the secondary instrument (R&S SMBV100B)
- To compensate signal mis-alignment:

### Connect the instruments and distribute the synchronization signal and the reference frequency

1. With the default connector settings of the R&S SMBV100B, connect the instruments in a **daisy chain**:

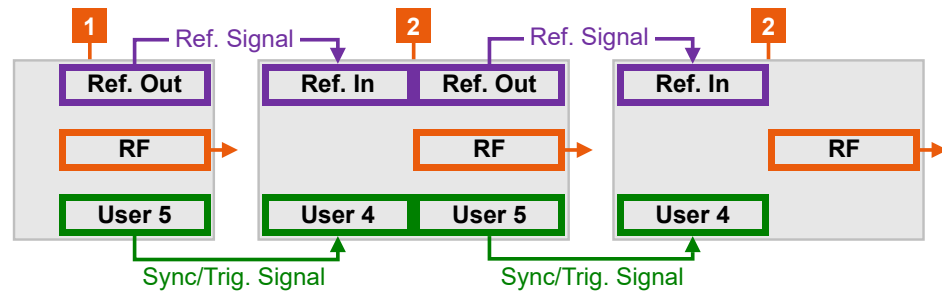


Figure 9-1: Example: Daisy chain connection for distributing the synchronization signal (simplified)\*

- \* = I/Q, LAN etc. connections are not shown
- 1 = Primary instrument acting as synchronization and trigger signal source
- 2 = Secondary instruments: One or more cascaded instruments, receiving (and forwarding) the synchronization and trigger signal
- Ref Out, Ref In = Reference frequency connectors
- User x = Synchronization and trigger signal connectors
- RF = RF signal output connector

- Connect **User 5** connector of the primary instrument R&S SMBV100B to **User 4** connector of the first secondary instrument.
- Connect User 5 connector of the first secondary instrument to the User 4 connector of the second secondary instrument, etc.

**Note:** Avoid unnecessary cable length and branching points.

Use cables of the same length and type for all connections between the primary instrument and the secondary instruments and between secondary instruments.

2. To distribute the internal reference signal of one of the instruments (in this example the primary instrument), connect the instruments in a **daisy chain concerning the reference frequency**.

That is, connect Ref Out of the primary instrument R&S SMBV100B to the Ref In of the first of the secondary instrument group, etc.

See [Chapter 7.8, "Reference oscillator"](#), on page 308.

### Configure the primary instrument (R&S SMBV100B)

1. Select "RF > Reference Frequency > Source > Internal".
2. Select "System Config > System Config > Multi Instruments".
3. Select "Multi Instrument Trigger" > **"Primary"**.



4. Select "State > On".
5. In the "Global Connector Settings" dialog, and observe current signal assignment.  
Per default, the synchronization signal ("Baseband Sync Out") is output at the **User 5**.
6. Configure the baseband signal as required for the particular test setup.  
Configure the trigger signal, for example, as follows:
  - a) Select "Baseband > EUTRA/LTE > Trigger In"
  - b) Select "Trigger Mode > Armed Retrigger" and "Trigger Source > Internal"
  - c) Set "Sync. Out to Trigger > On".

The trigger parameters of all basebands are coupled. Once the basebands are activated, they use common trigger signal.

See also ["Starting the signal generation with the first sample"](#) on page 98.

#### Configure the secondary instrument (R&S SMBV100B)

1. Select "RF > Reference Frequency > Source > External".  
Use the default reference frequency settings.
2. Select "System Config > System Config > Multi Instruments > Multi Instrument Trigger" > **"Secondary"**.
3. Select "State > On".
4. Observe current synchronization status.  
The parameter indicates that the instruments are not synchronized.  
Synchronization is achieved at the moment the basebands in the secondary instruments and in the primary instrument are activated.
5. Configure the baseband signal.
  - a) Select the same trigger mode as in the primary instrument.
  - b) Set "Sync. Out to Trigger > On".
  - c) Observe the automatically selected **"Trigger Source = Baseband Sync In"**

Once the baseband is activated, the secondary instruments are triggered by the synchronization signal.

If the secondary instrument is R&S SMBV100B, the trigger parameters of all basebands are coupled and all basebands use common trigger signal.

#### To start signal generation

1. In the secondary instruments, start signal generation.  
That is, activate the baseband generator.
2. In the primary instrument, activate the baseband generator.
3. In the secondary instruments, observe the value of the parameter "System Config > Multi Instruments > Synchronization State"

The instruments are synchronized if:

- The physical connection is established



- The synchronization signal is routed properly
- The baseband generators in all generators are active.

#### To compensate signal mis-alignment:

1. Connect an oscilloscope or network analyzer.  
Observe the generated signals.
2. Compare the signal start in the instruments.
3. To compensate signal delay, select "I/Q Modulator > I/Q Digital Impairments"
4. Vary the value of the parameter "**I/Q Delay**" to achieve time aligned signals.
5. If the value range is insufficient, enable also or alternatively a trigger delay.  
Select "Baseband > <Dig Standard> > Trigger In" > "**Delay**".
6. Vary the values until the signals align in time.

#### 9.3.1.3 Further information

See:

- Trigger settings of the used baseband source, for example [Chapter 4.4.2.1, "Trigger settings"](#), on page 108.

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

### 9.3.2 Triggering several instruments with a common trigger signal

Using the same trigger event on several instruments is useful to synchronize the transmitted and received signals. Some test cases also require that you control the signal generation start and determine the exact generation start time by a defined trigger event. The signal generation start can be controlled, for example, by triggering the instrument internally or externally from the DUT.

To share common trigger signal:

- Let one R&S SMBV100B generate a dedicated signal that triggers all R&S SMBV100B instruments.  
See [Example "Triggering several R&S SMBV100B instruments simultaneously"](#) on page 462.
- Connect all instruments to a common external trigger source.

See [Chapter 3.3.4, "Enabling and configuring a marker signal"](#), on page 55.

#### Example: Triggering several R&S SMBV100B instruments simultaneously

This example shows you how to connect several R&S SMBV100B, distribute the trigger signal generated by the first one (R&S SMBV100B#1) and trigger the instruments simultaneously.


Required cabling and connections:

- Connect the instruments in a star network, concerning the trigger signal.



That is, connect the User 5 output of the R&S SMBV100B#1 to the User 3 input of all other R&S SMBV100B and the R&S SMBV100B#1 itself.

- Always use cables of the same length.  
Use as short as possible cables.

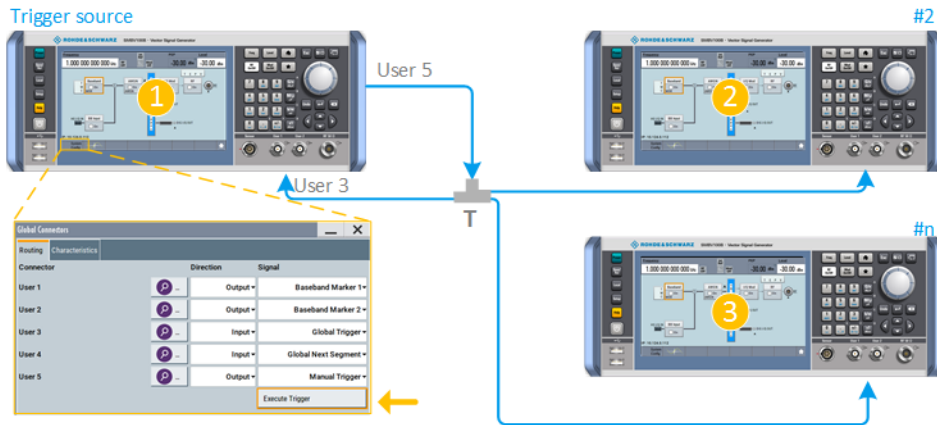

- T = T-connector  
 1 = Trigger source (R&S SMBV100B#1)  
 2, 3 = N number of instruments (R&S SMBV100B#2 to R&S SMBV100B#n)  
 User x = Connectors  
 <- = Executes trigger manually

Required configurations:

- In **all** R&S SMBV100B:
  - Use the default settings "User 3 > Direction = Input" and "Signal = Global Trigger 1".
  - Select "Baseband > ... > Trigger In > Trigger Source > Ext. Global Trigger 1".
- In R&S SMBV100B#1, set "System Config. > Setup > Global Connectors">"**User 5**">"Direction = Output".  
Set "User 5 > Signal = Manual Trigger".

To trigger the signal generation from R&S SMBV100B#1, select "Global Connectors > Execute Trigger".

Alternatively, send the remote control command `:OUTPut:USER<ch>:TRIGger[:IMMediate]`.

R&S SMBV100B#1 generates a short high signal and outputs it at the User connector. The signal acts as a common external trigger signal for all R&S SMBV100B and all basebands.

## 9.4 Control and operation of external instruments

In test scenarios that require more than one RF signals, the I/Q analog and digital output signal can be routed to and processed by external instruments. Typically, the generated I/Q streams are further processed by R&S SGT or R&S SGS.



The R&S SMBV100B provides all settings required to configure the output connectors, to establish the connections to the connected RF instruments and to control them. The settings are grouped in the "System configuration" > [External RF and I/Q](#) dialog. In this dialog, you find an overview of all available I/Q input and output connectors and configure the connection to the external instruments.

Once the connection is established, the R&S SMBV100B acts as a **primary instrument** and controls the **setup-related parameters** of any connected further processing external instrument. Among others, this applies to connected R&S SGT, R&S SGS (also in combination with R&S SGU) or R&S SMBV100A.

### 9.4.1 About signal routing and system configuration

Provided the instrument is equipped with the required options, R&S SMBV100B can:

- Process the internally generated digital baseband signal
- Process an external digital signal
- Generate vector-modulated baseband signals, irrespectively of the signal source
- Impair and add noise to digital baseband signals.

Generally, the processing of the generated baseband signal involves a modulation on the selected radio frequency (RF) and output at the RF connector. However, the digital baseband signal can also be output directly, or converted and output as an analog I/Q signal.

To support you in your configuration tasks, the R&S SMBV100B provides the "System Configuration" dialog. The main focus of this section is the "System Configuration" settings. This section also introduces the concept of the signal routing possibilities and covers the settings provided for the adjustment of the input and output analog and digital signals.

#### 9.4.1.1 Prerequisites for control of external instruments from the R&S SMBV100B

Required are the following connections between the R&S SMBV100B and the external instruments:

- **Physical remote control connection** over LAN or USB  
The remote control connection to the external instruments must be in status **connected**.  
See [Chapter 9.5.2, "External RF and I/Q settings"](#), on page 472.
- **Physical signal connection** for the digital or analog I/Q signal
- For the most test setups, the instruments must use a **common reference frequency signal**.

Suitable reference frequency signal sources are:

- An external common reference source
- The distributed reference frequency of the R&S SMBV100B.



### 9.4.1.2 Test setups

The test setup depends on the external instrument and the used I/Q output signal (digital, analog single-ended or analog differential).

### 9.4.1.3 Control of connected external instruments

For any connected external instruments, you find related information like the connection status and the used RF level and frequency values in the [External RF and I/Q](#) dialog. This dialog provides also additional short information on each of the connected instruments.

Settings related to the output signal are grouped in the [I/Q Digital](#) dialog.

## 9.4.2 Overview of the input and output signals and interfaces

Designed as a signal generator with various application fields, the R&S SMBV100B uses a hardware concept that enables you to define and customize some of the input and output signals and interfaces. Depending on the configuration, digital interfaces can be used as input or output connectors. The different logical settings of the same physical interface are grouped in different dialogs.

### Logical signals, streams and channels at the interfaces

This section provides **background information** and introduction to the topics. For an overview of the interfaces and their characteristics, refer to:

- [Chapter 9.4.2.1, "Overview of the baseband signal sources"](#), on page 465
- [Chapter 9.4.2.2, "Overview of the RF output signals"](#), on page 466
- [Chapter 9.4.2.4, "Important signal parameters and interface's characteristics"](#), on page 467

### 9.4.2.1 Overview of the baseband signal sources

The [Table 9-1](#) gives an overview of the *possible* input signals and the connectors they are supplied at. Any one of the specified input signals can be processed by the I/Q modulator and output at the RF outputs.

**Table 9-1: Physical input signals**

Input Signal	Input connector	GUI element	Refer to
Internal digital baseband signal	-	"Baseband"	<a href="#">Chapter 4, "Configuring the internal baseband source"</a> , on page 81
External digital signal	Dig I/Q HS Dig I/Q	"BB Input"	<a href="#">Chapter 9.6, "Digital baseband input settings"</a> , on page 486
External analog	I/Q	"I/Q Mod"	<a href="#">Chapter 6, "Applying I/Q vector modulation"</a> , on page 289



### Input interface for the external digital baseband signal

The two digital interfaces (Dig I/Q and HS Dig I/Q) can be used as input for digital signals but not at the same time. They provide direct communication with other Rohde & Schwarz instruments, like:

- Signal generators
- R&S FSW signal and spectrum analyzer

### Application examples of the externally supplied digital baseband signal

Provided the instrument is equipped with the required options, the externally applied signals can be used for and further processed as follows:

- Used as a standalone baseband source and processed separately, e.g. detuned, or loaded with noise or directly applied to the I/Q modulator
- Used as a user-specific signal **instead of** the internally generated signal

### Input interface for the external analog signal

The R&S SMBV100B provides also an input interface for an external wideband analog I/Q signal; the external signal is fed directly to the I/Q modulator.

For description of the related connectors and settings, see:

- [Chapter 6, "Applying I/Q vector modulation"](#), on page 289
- [Table 6-1](#).

## 9.4.2.2 Overview of the RF output signals

Usually, the generated baseband signal is modulated on the RF frequency and output at the RF connector. As shown in [Table 9-2](#), the R&S SMBV100B outputs the digitally modulated signal converted to an analog I/Q baseband output signal. The analog baseband signal can be output single ended or differential (non-inverted); an RF envelope signal can be generated, too.

The [Table 9-2](#) shows the possible output connectors with the corresponding kind of signal.

**Table 9-2: Physical output signals**

Type	Output Signal	Output connector	GUI element	Refer to
RF	RF signal	RF	"RF"	<a href="#">Chapter 7, "Configuring the RF signal"</a> , on page 297
BB	Digital signal	Dig I/Q HS Dig I/Q	"I/Q Digital" (I/Q OUT / HS I/Q OUT)	<a href="#">Chapter 9.7, "I/Q digital output settings"</a> , on page 494
	Analog signal <ul style="list-style-type: none"> <li>• Single ended</li> <li>• Differential</li> <li>• RF Envelope</li> </ul>	<ul style="list-style-type: none"> <li>• I/Q</li> <li>• I/Q Bar</li> <li>• I/I Bar</li> </ul>	"I/Q Analog"	<a href="#">Chapter 9.8, "I/Q analog output settings"</a> , on page 501



### 9.4.2.3 Interdependencies

The following functions cannot be activated simultaneously. **They deactivate each other.**

- The internal baseband generator ("Baseband" block) and the external digital baseband input ("BB Input")
- The external digital baseband input ("BB Input") and output of digital signals ("I/Q Digital") because they share physical connectors (Dig I/Q and the HS Dig I/Q).
- The output of analog ("I/Q Analog") and digital ("I/Q Digital") signals
- The output of digital signals ("I/Q Digital") and I/Q modulation with internal baseband signal ("I/Q Mod > I/Q Modulator Input").

### 9.4.2.4 Important signal parameters and interface's characteristics

Correct signal processing of the externally supplied input signals in the instrument and correct processing of the output signal in the next connected instrument require information of signal parameters. These signal parameters are sampling rate, crest factor and signal level, expressed as peak or as RMS level value.

#### Sample rate


The sample rate of the digital input and output signal can be defined manually or automatically retrieved from the input and estimated for the output signal. The bandwidth and thus the sample rate of the digital input signal is not limited by the installed sample rate options.

For more information, see data sheet.

#### Crest factor

According to its definition, the crest factor gives the difference in level between the peak level and RMS level value in dB (see [Figure 9-2](#)).

The R&S SMBV100B uses the crest factor to calculate the power levels that is the instrument compensates the RMS levels of the externally supplied signal by the crest factor. For example, the crest factor of the external signal is important for the calculation of the RF output power.

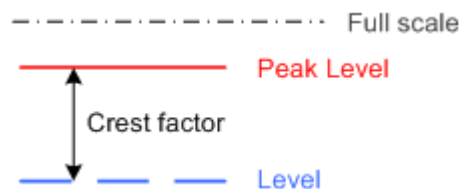

**Figure 9-2: Relation between the level settings**

Test setups often involve an up-converter connected to the I/Q connectors of the generator or feeding of external signal to the digital input of the R&S SMBV100B. As a rule, whenever an I/Q signal is transferred between two instruments, *the crest factor and the peak levels of the two involved instruments have to be coordinated.*



To ensure proper signal settings and correct results, check if the peak level values and crest factor values are equal. Equal values hold for the I/Q outputs of the R&S SMBV100B and the I/Q inputs of the up-converter are equal.

In the R&S SMBV100B, level values are represented as relative to full-scale values (see [Figure 9-2](#)).



#### Where to find the necessary values

- Dialog "BB Input"  
[Chapter 9.6, "Digital baseband input settings"](#), on page 486
- Dialog "Digital I/Q Out"  
[Chapter 9.7, "I/Q digital output settings"](#), on page 494
- Dialog "Analog I/Q Out"  
See [Chapter 9.8, "I/Q analog output settings"](#), on page 501

#### Why the instrument monitors the signal internally and how to avoid overflow

The R&S SMBV100B constantly monitors the input and output digital signal and indicates an overflow status.

- Overflow of the **input signal** (crest factor and peak level) is indicated if the entered "Peak Level" (in dBFS) value does not correspond to the real value  
**Tip:** The overflow status is indicated as long as the signal level is not reduced and the peak level value corrected. Trigger "Auto Level Set" to collect the required values and adjusts the settings automatically.
- Overflow of the **output signal** is indicated if the digital signal is clipped, i.e. if the level of the output signal, or the noise level (AWGN) are too high.

#### Specific characteristics of the digital I/Q interface

##### What is a "digital channel" and how are the channels distributed to the basebands

The external digital signals supplied at the Dig I/Q interfaces of the instrument can contain more than one, possibly even multiplexed, digital channels. The R&S SMBV100B processes each of these digital channels as a separate signal.

The external digital signals supplied at the HS Dig I/Q interfaces of the instrument can contain more than one, possibly even multiplexed, digital channels. The R&S SMBV100B processes each of these digital channels as a separate signal.

##### Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal

The [Chapter 9.4.2.4, "Important signal parameters and interface's characteristics"](#), on page 467 emphasis why and which signal parameters are important for the correct internal signal processing of externally supplied signals in the R&S SMBV100B. This section focuses on the way that these requirements are fulfilled and explains how the instrument deals with signals deviating from the expected values:

- **Crest factor, peak level and RMS level**



These values can be adjusted in one of the following ways:

- Adjusted manually  
If you have knowledge about these values, it is best to enter them directly
- Estimated automatically by the internal measurement function  
Use the function [Auto Level Set](#) to trigger the R&S SMBV100B to measure the input signal, estimate the peak level and RMS level and calculate the crest factor out of them.

**Tip:** For a correct signal leveling:

- 1) Enable an appropriate measurement time.
- 2) Execute one measurement for each baseband source.
- 3) Set the measurement period to a time value that is long enough to capture several periods of the input signal.


- Determined automatically

The R&S SMBV100B can receive the values from the connected transmitter. If the external digital signal source is a second Rohde & Schwarz instrument, it signals the peak level and the RMS level of the signal over the digital input interface. To enable the R&S SMBV100B to receive these values, enable the parameter "[DIG IQ Auto Setting](#)" on page 491.

In the second automatic way, the R&S SMBV100B adjusts the corresponding input fields with the measured/received values. The internal gain control mechanism uses these received values to adjust the input signal gain to achieve an optimal dynamic range.

- **Sample rate**

External input signals with sample rates different than the system clock are resampled, as illustrated on [Figure 9-3](#).

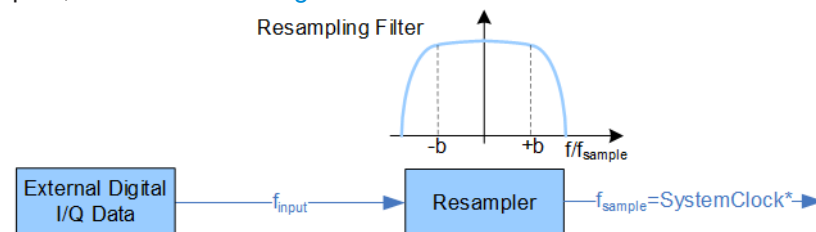

**Figure 9-3: Resampling principle of external digital baseband signals**

\* = Max. sample rate depends on connected device

$f_{\text{input}}$  = Max. sample rate

The R&S SMBV100B can process digital signals with sample rate  $f_{\text{input}} = 400 \text{ Hz}$  to  $200 \text{ MHz}$ , where the maximum value ( $f_{\text{sample, max}}$ ) depends on the capabilities of the connected transmitting/receiving device.

- **Maximum modulation bandwidth**

A baseband signal with a sample rate  $f_{\text{sample}} < f_{\text{sample, max}}$  (i.e. smaller than the used system clock) is interpolated, see [Figure 9-3](#). The resulting modulation bandwidth is calculated as *sample rate \* 0.8*.

With a sample rate  $f_{\text{sample, max}}$  of exactly  $600 \text{ MSamples/s}$ , the modulation bandwidth is  $160 \text{ MHz}$ .





### Estimating or defining the sample rate

The sample rate of the signal at the digital interface can be determined with one of the following methods:

- **Estimated sample rate**  
Enable the instrument to evaluate the received I/Q data clock
- **User-defined sample rate**  
Provide both the external signal source and the receiving instrument with a common external reference signal and set the sample rate value.

### Specifics of the analog I/Q interfaces

The R&S SMBV100B outputs the digitally modulated signal not only directly but also converted to an analog I/Q baseband output signal. The R&S SMBV100B outputs the analog baseband signal single ended or differential (non-inverted); an RF envelope signal can be generated, too.

### Differential output signal

The differential output provides symmetrical signals for differential inputs of DUTs without the need of additional external electric network. To achieve an optimal and balanced operating point of these inputs, ensure the correct adjustment of the used DC voltage ("Bias") and the offset ("Offset") between inverting and non-inverting output. Refer to the descriptions [Bias \(EMF\)](#) and [Offset \(EMF\)](#) for a description of the effect of these parameters.

### Maximum overall output voltage

The voltage of the analog output signals is defined as a combination of output voltage of the I and Q signal components and an optional bias voltage. If the differential output is used, an additional offset can be set, too. The values of these parameters are interdependent so that the magnitude of the sum of output voltage and bias voltage must not exceed 4V.

The following applies:

- Single ended signal:  
 $V_p + V_{bias} \leq 4 \text{ V}$
- Differential signal:  
 $0.5 \cdot V_p + |V_{bias}| + 0.5 \cdot V_{offset} \leq 4 \text{ V}$

Where:

- $V_p$  is the output voltage as set with the parameter [I/Q Level Vp EMF](#)
- $V_{bias}$  is the bias voltage as set with the parameter [Bias \(EMF\)](#)
- $V_{offset}$  is the offset between inverting and non-inverting output as set with the parameter [Offset \(EMF\)](#)



### 9.4.3 Further information

For description of the settings related to connection establishment, see:

- [Chapter 9.5.2, "External RF and I/Q settings"](#), on page 472
- [Chapter 9.5.1, "I/Q stream mapper settings"](#), on page 471

For information on the **manual and remote control operation** of the external instruments, see the documentation of the particular instrument:

- For R&S SGT, see the SGT100A User Manual

## 9.5 System configuration settings

The settings in this dialog comprise the I/Q mapping and the processing of the generated I/Q streams. Form this dialog, you can control and configure the connections to instruments connected to the RF and I/Q connectors.

### Required options

The equipment layout includes:

- Base unit
- Option differential analog I/Q outputs R&S SMBVB-K17
- Option digital baseband outputs R&S SMBVB-K19
- Optional, option frequency R&S SMBVB-KB106

For description of "Multi-Instrument" settings, see [Chapter 9.3.1.1, "Multi-instrument settings"](#), on page 458.


### Settings:

- [I/Q stream mapper settings](#).....471
- [External RF and I/Q settings](#).....472
- [Overview](#).....485

### 9.5.1 I/Q stream mapper settings

Access:

- In the block diagram, select "I/Q Stream Mapper".

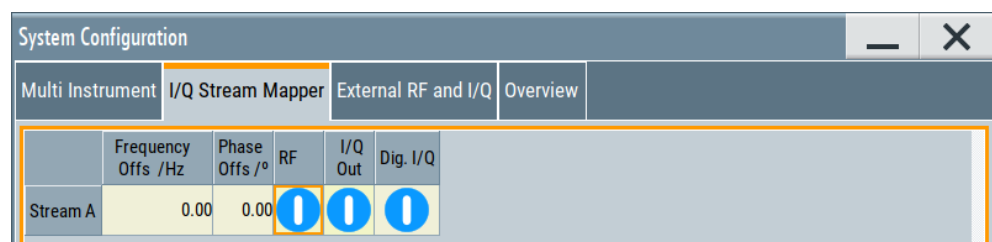



The dialog provides the settings for routing of the signal streams to the available output connectors.

#### Settings:

Frequency Offset.....	472
Phase Offset.....	472
Map Stream X to Connector.....	472

#### Frequency Offset

Sets an absolute frequency offset  $f_{\text{offset}}$ .

**Tip:** Use this parameter to shift the used frequency band in the RF frequency section without modifying the RF settings.

#### Phase Offset

Sets the phase offset of the corresponding stream.

#### Map Stream X to Connector

The mapping of the generated stream to the output connectors is represented as a stream matrix. A blue circle at a matrix element routes the stream to the selected connector.

Remote command:

`:SCONfiguration:OUTPut:MAPPING:RF:STReam<st>:STATe` on page 765

`:SCONfiguration:OUTPut:MAPPING:IQOutput:STReam<st>:STATe`  
on page 765

`:SCONfiguration:OUTPut:MAPPING:DIGital<ch>:STReam<st>:STATe`  
on page 765

`:SCONfiguration:OUTPut:MAPPING:HSDigital:CHANnel<di>:STReam<st>:STATe` on page 765

## 9.5.2 External RF and I/Q settings

With the settings in the "External RF and I/Q" tab, you can control external devices and instruments from the R&S SMBV100B, if all prerequisites are fulfilled. See "[Prerequisites for control of external instruments from the R&S SMBV100B](#)" on page 473.





### Prerequisites for control of external instruments from the R&S SMBV100B

The following connections between the R&S SMBV100B and the external instruments are required:


- **Physical remote control connection** over LAN or USB  
The remote control connection to the external instruments must be in status **connected**, see [Remote Connection Status](#).
- **Physical signal connection** for the digital or analog I/Q signal
- For the most test setups, the instruments must use a **common reference frequency signal**.

Suitable reference frequency signal sources are:

- An external common reference source
- The distributed reference frequency of the R&S SMBV100B.

Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q".

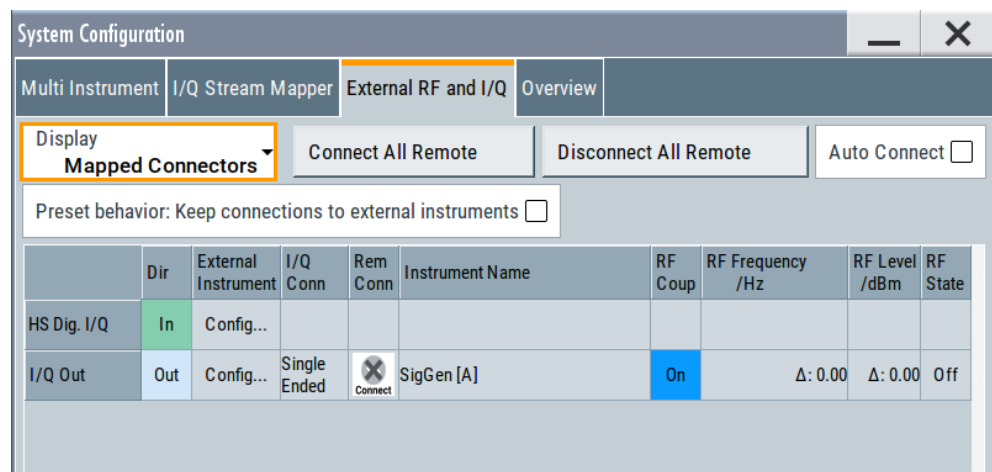

The dialog provides an overview of all available I/Q input and output connectors and comprises the settings necessary to establish the connection to the external instruments. Displayed is an overview of the currently connected external instruments together with relevant information like the connection status and the RF level and frequency that these external instruments use.

The dialog provides access to some additional short information on each of the connected instruments. It also provides a show connector function for an easy localization of the selected connector on the instrument front or rear panel.

### Settings:

- [Connections configuration and connection status overview settings](#).....474
- [External instrument configuration settings](#).....478



### 9.5.2.1 Connections configuration and connection status overview settings

Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q".

**Settings:**

Display.....	474
Auto Connect.....	474
Connect/Disconnect All Remote.....	475
Preset behavior: Keep connections to external instruments.....	475
Connector Name.....	475
Direction.....	475
External Instrument.....	476
I/Q Connection.....	476
Remote Connection Status.....	476
Instrument Name.....	477
RF Couple.....	477
(Delta) RF Frequency/ RF Level.....	477
RF State.....	478

#### Display

Filters the displayed connectors upon one of the following criteria:

"All Connectors"

No filter is applied.

"Mapped Connectors"

Displayed are only the connectors to which a stream is mapped.

**Note:** To prevent faults, use this filter before you further configure the external instruments.

"Input Connectors/Output Connectors"

Filters the display according to connector direction.

Remote command:

:SCONfiguration:EXTernal:DISPlay on page 767

#### Auto Connect

With enabled auto connect function, the instrument automatically detects connected external instruments and establishes the required connection.

If the "Auto Connect > Off", however, after a R&S SMBV100B startup you have to revise the test setup and perform the following:

- Check whether the necessary connections between the R&S SMBV100B and the external instruments are still existing.
- Prove that the remote control of the particular instruments is required.
- Trigger the [Connect All Remote](#) function.

Remote command:

:SCONfiguration:EXTernal:ACONnect on page 768



**Connect/Disconnect All Remote**

Triggers the instrument to:

- Establish the remote connections to all configured [External Instruments](#).
- To terminate all existing remote connections.  
The external instruments are not removed from the list of external instruments.  
Only the remote connection status changes.

Remote connection status can be toggled with the parameter [Remote Connection Status](#).

**Note:**

External instruments connected to the R&S SMBV100B are preset (`:DEVIce:PRESet`) whenever:

- The connection to the external instrument is established or terminated ("Connect/Disconnect All Remote" or "Rem. Conn > On/Off")
- The R&S SMBV100B is preset ([Preset]).

To ensure that the remote connections to the external instruments will be automatically established after instrument's start-up or a reboot, set [Auto Connect](#) > "On".

Remote command:

`:SCONfiguration:EXTernal:REMOte:CONNect[:ALL]` on page 768

`:SCONfiguration:EXTernal:REMOte:DISConnect[:ALL]` on page 768

**Preset behavior: Keep connections to external instruments**

Sets the effect of R&S SMBV100B preset ([Preset] or \*RST) on the following:

- The connection status between the instrument and the connected external instruments.
- The R&S SMBV100B itself and the preset values.
- The connected instruments.

"Preset behavior..."	Off	On
R&S SMBV100B and preset values	Standard R&S SMBV100B preset See <a href="#">Table 10-1</a> .	Standard R&S SMBV100B preset Excluded from preset: <ul style="list-style-type: none"> <li>• "I/Q Output Type" <a href="#">See also</a></li> </ul>
Connection status	Terminated ("Disconnect All Remote")	Unchanged
Connected instruments	External instrument preset ( <code>:DEVIce:PRESet</code> )	External instrument preset

Remote command:

`:SCONfiguration:EXTernal:PBEHaviour` on page 768

**Connector Name**

Displays the connector name.

Remote command:

Via keyword in the SCPI syntax, e.g. `IQOutput`

**Direction**

Displays the connector direction as a color coded field.



Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:DIRection? on page 769

:SCONfiguration:EXTernal:HSDigital<ch>:DIRection? on page 769

:SCONfiguration:EXTernal:IQOutput:DIRection? on page 769

### External Instrument

Accesses a dialog with settings that help you to establish the connection to the external instruments, see [Chapter 9.5.2.2, "External instrument configuration settings"](#), on page 478.

#### Note:




Each external instrument must be connected via LAN or USB to the R&S SMBV100B.

In most test setups, all instruments must use a common reference frequency signal, either from an external common reference source or using the distributed reference frequency of the R&S SMBV100B.

### I/Q Connection

Depends on the interface type.

- Analog I/Q interfaces:  
Selects the type of the I/Q output signal
- Digital I/Q interfaces:  
Indicates the status of the I/Q connection of the digital interfaces.  
The indication includes a status LED and an icon, where the icon depends on the connector (Dig I/Q or HS Dig I/Q) used.

Indication	Designation
 green LED and an icon	The Dig I/Q/HS Dig I/Q interface is used as an <b>input</b> connector
 yellow LED and an icon	The Dig I/Q/HS Dig I/Q interface is used as an <b>output</b> connector
 icon without an LED	An external instrument is connected to the Dig I/Q interface, but no direction is specified
No icon displayed	No connection
"Single Ended"/"Differential"	Selects the type of the I/Q output signal at the I/Q output connector Works like the parameter " <a href="#">I/Q Output Type</a> " on page 504.

Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:IQConnection:STATe?

on page 769

:SCONfiguration:EXTernal:HSDigital<ch>:IQConnection:STATe?

on page 769

[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :TYPE on page 957

### Remote Connection Status

Indicates the status of the remote connection. Click the status indicator to toggle the remote connection status.

To connect/disconnect all external instruments, use the functions [Connect/Disconnect All Remote](#).

#### Note:



External instruments connected to the R&S SMBV100B are preset (`:DEVIce:PRESet`) whenever:

- The connection to the external instrument is established or terminated ("Connect/Disconnect All Remote" or "Rem. Conn > On/Off")
- The R&S SMBV100B is preset ([Preset]).

**Note:** An active "Rem. Conn." and an "RF State > On" do not mean that an I/Q stream is mapped to this connector.

Use the "System Configuration > External Rf and I/Q > Display > Mapped Connectors" filter to list only the connectors with a mapped I/Q stream.

Remote command:

`:SCONfiguration:EXTernal:DIGital<ch>:RCONnection:STATe?`

on page 770

`:SCONfiguration:EXTernal:DIGital<ch>:REMote:DISConnect` on page 777

`:SCONfiguration:EXTernal:IQOutput:RCONnection:STATe?` on page 770

`:SCONfiguration:EXTernal:HSDigital<ch>:REMote:DISConnect`

on page 777

`:SCONfiguration:EXTernal:IQOutput:REMote:DISConnect` on page 777

`:SCONfiguration:EXTernal:DIGital<ch>:REMote:INFO?` on page 776

`:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INFO?` on page 776

`:SCONfiguration:EXTernal:IQOutput:REMote:INFO?` on page 776

### Instrument Name

Displays useful information on the connected external instrument, like the instrument designation and the RF path the RF settings are coupled to.

Remote command:

`:SCONfiguration:EXTernal:DIGital<ch>:INAME?` on page 770

`:SCONfiguration:EXTernal:HSDigital<ch>:INAME?` on page 770

`:SCONfiguration:EXTernal:IQOutput:INAME?` on page 770

`:SCONfiguration:EXTernal:DIGital<ch>:REMote:INFO?` on page 776

`:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INFO?` on page 776

`:SCONfiguration:EXTernal:IQOutput:REMote:INFO?` on page 776

### RF Couple

If enabled, this parameter couples all major RF setting (like the "RF Frequency", the "RF Level" and the "RF State") of the external instrument to the R&S SMBV100B.

The R&S SMBV100B acts as a primary instrument, i.e the external instruments synchronize their settings and the RF output state to the R&S SMBV100B. You can apply delta frequency and level offset to the signal.

Remote command:

`:SCONfiguration:EXTernal:DIGital<ch>:RF:COUPling` on page 770

`:SCONfiguration:EXTernal:HSDigital<ch>:RF:COUPling` on page 770

`:SCONfiguration:EXTernal:IQOutput:RF:COUPling` on page 770

### (Delta) RF Frequency/ RF Level

In uncoupled mode, sets the RF frequency and RF level of the external instrument.

With enabled "RF Coupled" parameter, applies a frequency and level offset. The RF frequency of the external instrument is calculated as follows:



$$RF_{ExtInstr} = RF_{Instrument} + \Delta_{Freq}$$

Both the RF frequency and the RF frequency offset are applied at the external instrument.

Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:RF:FREQuency on page 771

:SCONfiguration:EXTernal:HSDigital<ch>:RF:FREQuency on page 771

:SCONfiguration:EXTernal:IQOutput:RF:FREQuency on page 771

:SCONfiguration:EXTernal:DIGital<ch>:RF:FREQuency:OFFSet

on page 771

:SCONfiguration:EXTernal:HSDigital<ch>:RF:FREQuency:OFFSet

on page 771

:SCONfiguration:EXTernal:IQOutput:RF:FREQuency:OFFSet on page 771

:SCONfiguration:EXTernal:DIGital<ch>:RF:POWer on page 772

:SCONfiguration:EXTernal:HSDigital<ch>:RF:POWer on page 772

:SCONfiguration:EXTernal:IQOutput:RF:POWer on page 772

:SCONfiguration:EXTernal:DIGital<ch>:RF:POWer:OFFSet on page 772

:SCONfiguration:EXTernal:IQOutput:RF:POWer:OFFSet on page 772

:SCONfiguration:EXTernal:HSDigital<ch>:RF:POWer:OFFSet on page 772

### RF State

With enabled "RF Coupled" parameter, displays the RF output state of the connected external instrument. The parameter is coupled to the state of the RF output of the R&S SMBV100B.

In uncoupled mode, enables/disables the RF output in the external instrument.

Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:RF:STATe on page 772

:SCONfiguration:EXTernal:HSDigital<ch>:RF:STATe on page 772

:SCONfiguration:EXTernal:IQOutput:RF:STATe on page 772


### 9.5.2.2 External instrument configuration settings

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Navigate to the required connector.  
Select "External Instruments > Config ...".

The "<Dig. Conn. Name>: External Instrument Configuration" dialog opens and displays the "External Instrument Configuration > Remote Config" settings.

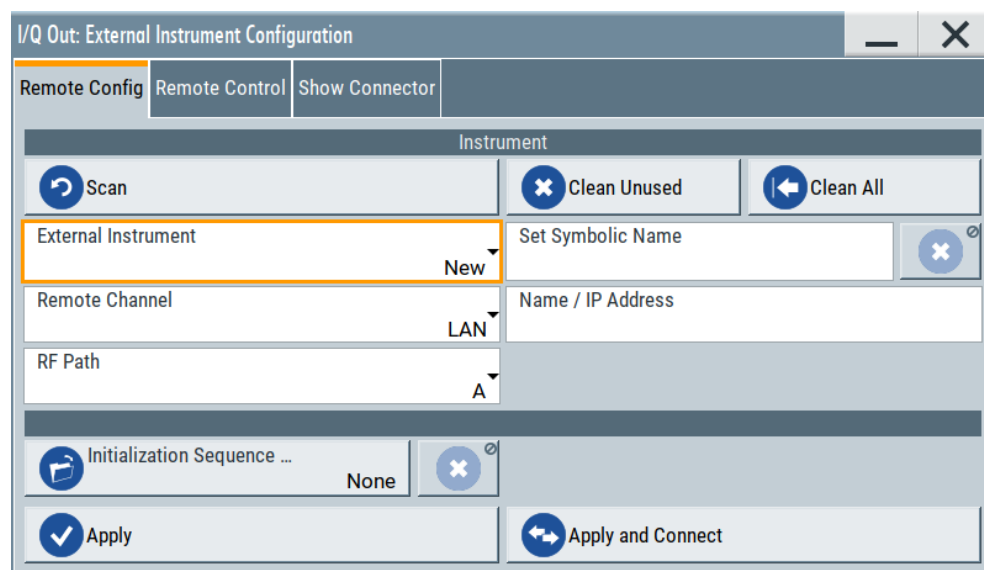

**Settings:**

Remote config settings.....	479
Remote control settings.....	483
Show connector.....	484

**Remote config settings**

## Access:

- Select "Taskbar > System Config > System Configuration > External RF and I/Q > External Instruments > Config ...".

**Settings:**

Detect/Scan.....	480
Clean Unused/Clean All.....	480
External Instrument.....	480
Set Symbolic Name.....	481
Remote Channel.....	481
Hostname or IP Address.....	481
Device ID.....	481
RF Path.....	481
Initialization Sequence.....	482
Remove Initialization Sequence.....	482
Apply.....	482
Apply and Connect.....	482



**Detect/Scan**

If you connect an external instrument, you can fill in the required information in the "External Instrument Configuration" dialog manually or use one of the provided "Detect/Scan" functions. Both functions consider the connections via the supported interfaces, USB or LAN.

The parameter [External Instrument](#) lists the pool of available instruments.

Scans the network for connected supported instruments, like:

R&S SGS or R&S SGT

**Note:** The scan function searches throughout the entire network and can last several minutes.

**Note:** The first initialization of an instrument connected to a network can last several minutes. During their initialization, instruments are not detected by the detect/scan function.

"Detect"	<p>Searches for external instruments connected to this particular digital interface of the R&amp;S SMBV100B.</p> <p>Remote command:</p> <p><a href="#">:SCONfiguration:EXTernal:DIGital&lt;ch&gt;:REMote:DETect?</a> on page 775</p> <p><a href="#">:SCONfiguration:EXTernal:HSDigital:REMote:DETect?</a> on page 775</p>
"Scan"	<p>Scans the network for connected supported instruments, like: R&amp;S SGS or R&amp;S SGT.</p> <p><b>Note:</b> The scan function searches throughout the entire network and can last several minutes.</p> <p>Remote command:</p> <p><a href="#">:SCONfiguration:EXTernal:REMote:SCAN</a> on page 773</p> <p><a href="#">:SCONfiguration:EXTernal:REMote:SCAN:STATe?</a> on page 773</p>

**Clean Unused/Clean All**

Triggers the instrument to clean at once all unused LAN connections. This function allows you to retrieve a new pool of valid instruments.

The "Clean All" function removes all configured settings from the "External RF and I/Q". USB connections to external instruments are not affected.

Remote command:

[:SCONfiguration:EXTernal:REMote:PURGe](#) on page 777

[:SCONfiguration:EXTernal:REMote:CLEan](#) on page 778

**External Instrument**

Lists all available instruments, found by the [Detect/Scan](#) function.

To connect an external instrument, use one of the following:

- Enable "Select Instrument > New" and configure the settings manually
- Select "Select Instrument", navigate through the pool of available instruments, and select the required. The required settings are retrieved and updated automatically.

Select "None" to disable the connection.



Execute "Apply" to confirm the settings.

Remote command:

:SCONfiguration:EXTernal:REMOte:LIST? on page 773  
 :SCONfiguration:EXTernal:REMOte:ADD on page 774  
 :SCONfiguration:EXTernal:DIGital<ch>:REMOte:ISElect on page 775  
 :SCONfiguration:EXTernal:IQOutput:REMOte:ISElect on page 775  
 :SCONfiguration:EXTernal:HSDigital<ch>:REMOte:ISElect on page 775

### Set Symbolic Name

Sets the alias name of the instrument.

Remote command:

:SCONfiguration:EXTernal:REMOte:ADD on page 774  
 :SCONfiguration:EXTernal:DIGital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:HSDigital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:IQOutput:REMOte:INFO? on page 776

### Remote Channel

Selects the hardware channel (USB or LAN) used by the remote channel to the external instrument.

Remote command:

:SCONfiguration:EXTernal:REMOte:ADD on page 774  
 :SCONfiguration:EXTernal:DIGital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:HSDigital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:IQOutput:REMOte:INFO? on page 776

### Hostname or IP Address

Displays/sets the hostname or IP address of the connected external instrument.

Remote command:

:SCONfiguration:EXTernal:REMOte:ADD on page 774  
 :SCONfiguration:EXTernal:DIGital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:HSDigital<ch>:REMOte:INFO? on page 776  
 :SCONfiguration:EXTernal:IQOutput:REMOte:INFO? on page 776

### Device ID

Sets/displays the device identifier that is a unique string with the following structure:

<frontend type>-<serial number>

For a defined "External Instrument", the information is read out automatically.

Remote command:

:SCONfiguration:EXTernal:REMOte:ADD on page 774

### RF Path

In a two-path instrument, determines the RF output to be used.

Remote command:

:SCONfiguration:EXTernal:REMOte:ADD on page 774  
 :SCONfiguration:EXTernal:DIGital<ch>:REMOte:INFO? on page 776



:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INFO? on page 776

:SCONfiguration:EXTernal:IQOutput:REMote:INFO? on page 776

### Initialization Sequence

Accesses the standard "File Select" dialog for loading an existing initialization file (extension \*.iec).

When you establish the connection to an external instrument, i.e. [Remote Connection Status](#) is active, the R&S SMBV100B performs the following:

- Sends the command :DEvice:PRESet
- Sends the content of the initialization sequence file to reconfigure the external instrument

If necessary, perform further settings and configuration of the external instruments.

Remote command:

:SCONfiguration:EXTernal:REMote:INITialization:CATalog?

on page 777

:SCONfiguration:EXTernal:DIGital<ch>:REMote:INITialization:FILE

on page 777

:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INITialization:

FILE on page 777

:SCONfiguration:EXTernal:IQOutput:REMote:INITialization:FILE

on page 777

### Remove Initialization Sequence

Deletes the loaded sequence.

### Apply

Confirms the settings and displays the external instrument in the "External RF and I/Q" dialog.

Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:REMote:ISElect on page 775

:SCONfiguration:EXTernal:HSDigital<ch>:REMote:ISElect on page 775

:SCONfiguration:EXTernal:IQOutput:REMote:ISElect on page 775

### Apply and Connect

Confirms the settings and triggers the connection establishment. In the connected instruments, the status of this active remote connection is displayed by the "Remote" indication.

Remote command:

:SCONfiguration:EXTernal:DIGital<ch>:REMote:ISElect on page 775

:SCONfiguration:EXTernal:HSDigital<ch>:REMote:ISElect on page 775

:SCONfiguration:EXTernal:DIGital<ch>:REMote:CONNECT on page 775

:SCONfiguration:EXTernal:HSDigital<ch>:REMote:CONNECT on page 775


:SCONfiguration:EXTernal:IQOutput:REMote:ISElect on page 775

:SCONfiguration:EXTernal:IQOutput:REMote:CONNECT on page 775



Remote control settings

- Access:
1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
  2. Navigate to the required connector.  
Select "External Instruments > Config ...".
  3. In the "<Dig. Conn. Name>: External Instrument Configuration" dialog, select "Remote Control".

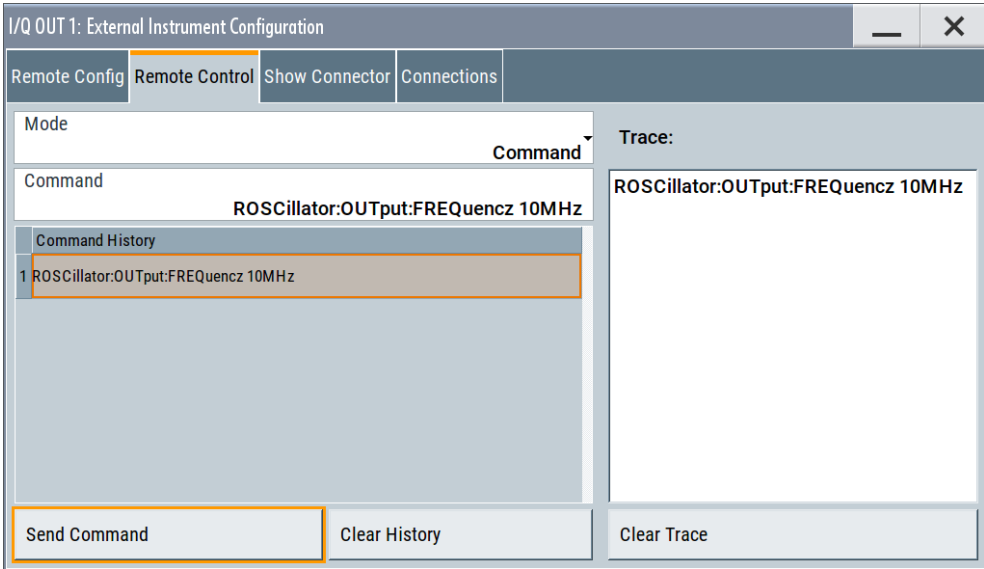

In this dialog, you can send individual SCPI commands or a sequence of SCPI commands to the connected instruments.

The sent commands and their results are displayed in the "Command Trace" field, as long as the trace is not deleted "Clear Trace". The sent commands are also listed in the "History" list. As long as this history list is not deleted ("Clear History"), you can select a command from the list and send it again.

Settings:

Mode.....	483
Command, Send Command.....	483
File, Sequence, Send Sequence.....	484
History, Clear History.....	484
Commands Trace, Clear Trace.....	484

Mode

You can send a single command ("Command") or a command sequence ("Sequence") to the connected instrument.

Command, Send Command

Entry field for the SCPI commands.



You can enter a new command or select a previously sent command from the "History".

If the remote connection is active, select "Send Command" to execute the command.

Remote command:

[:SCONfiguration:EXTernal:IQOutput:REMOte:SEND](#) on page 778

[:SCONfiguration:EXTernal:HSDigital<ch>:REMOte:SEND](#) on page 778

### **File, Sequence, Send Sequence**

Accesses the standard "File Select" dialog for loading of user-defined files with extension \*.iec.

The provided navigation possibilities in the dialog are self-explanatory.

When a file is selected, its name and content are displayed, and the first command is selected. You can send the commands one by one ("Send Command") or send the entire sequence at once ("Send Sequence").

After a command is sent, the next command from the sequence is selected.

See also:

- ["Initialization Sequence"](#) on page 482
- [Chapter 10.5.1, "File select settings"](#), on page 524.

### **History, Clear History**

List of the sent commands.

As long as this history list is not cleared ("Clear History"), you can select a command from the list and send it again.

### **Commands Trace, Clear Trace**

List of the sent commands and their results, where the results are displayed in blue color.

To delete the trace, select "Clear Trace".


### **Show connector**

Access:

1. Select "Taskbar > System Config > System Configuration > External RF and I/Q".
2. Navigate to the required connector.  
Select "External Instruments > Config ...".



3. In the "<Dig. Conn. Name>: External Instrument Configuration" dialog, select "Show Connector".

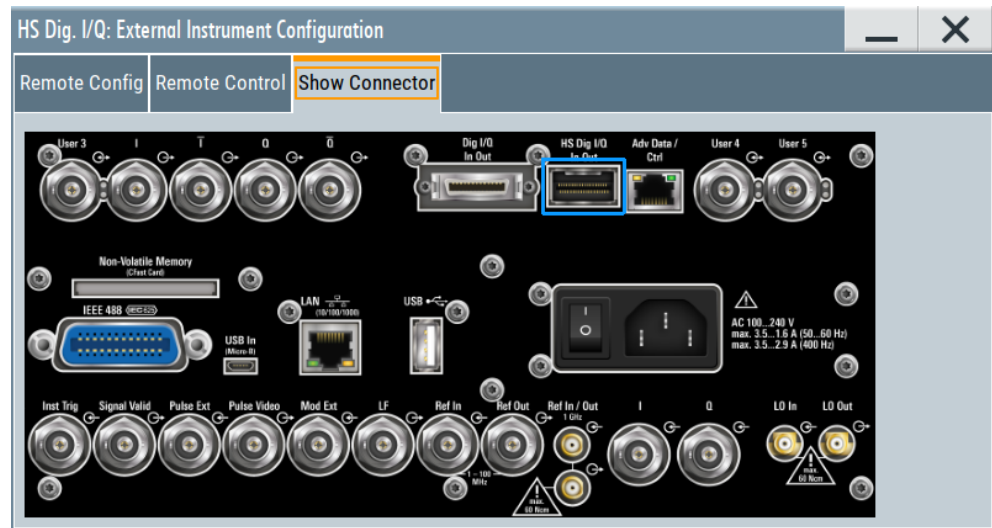

The dialog displays the location of the selected connector.


The "Show Connector" function triggers the instrument to identify the connector on the rear panel. The LED next to the selected connector blinks.

### 9.5.3 Overview

You can check current connections, interfaces, input signals and output signals of the R&S SMBV100B in the "Overview" tab.

Access:

- Select "System Configuration" > "Overview".

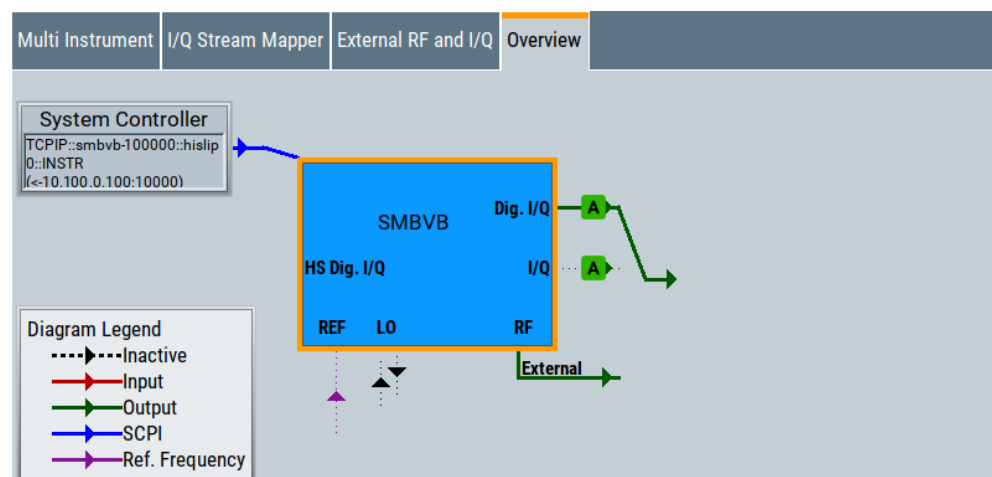

The overview tab shows information on the following:

- Input signals and output signals: Type (RF, reference, HS Dig IQ, User 1/2) and state (active, inactive)



- Input and output interfaces
- Current stream mapping to the output interfaces.  
See [Chapter 9.5.1, "I/Q stream mapper settings"](#), on page 471.
- Connected controller ("System Controller") and connection ("SCPI").  
See [Chapter 9.5.2, "External RF and I/Q settings"](#), on page 472.
- Connections for remote control of connected external devices

### Hotspots for fast access to the required settings

Several of the displayed elements are hotspots. Select an element to access the related dialog.

## 9.6 Digital baseband input settings

The R&S SMBV100B provides digital I/Q interfaces to feed an external digital baseband signal into the signal path.

### Required options

The equipment layout for applying an external baseband signal includes:

- Base unit
- Option frequency R&S SMBVB-B103

For more information, see data sheet.

### To access and configure the "Baseband Input" settings


The "BB Input" block provides access to the settings for frequency offset and path gain, and to the available configuration parameters of the external baseband signal.

The digital baseband input interface Dig I/Q and HS Dig I/Q are located on the R&S SMBV100B rear panel, see [Chapter 9.4.2.1, "Overview of the baseband signal sources"](#), on page 465.

In the default instrument state, the block diagram displays the connector in an unfolded state. The digital input interface is off.

- To fold out the "BB Input" block, select the connector symbol:

- HS Dig I/Q for "Interface" > "HS Dig. I/Q"
- Dig I/Q for "Interface" > "Dig. I/Q"

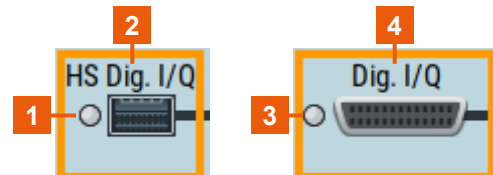


**Figure 9-4: Representation of the digital baseband input interface HS Dig I/Q/Dig I/Q**

1, 3 = Digital input interface state: gray = inactive; blue = active  
2, 4 = Connector name



If you click on the "BB Input" block, you can access baseband input settings or baseband offset settings.

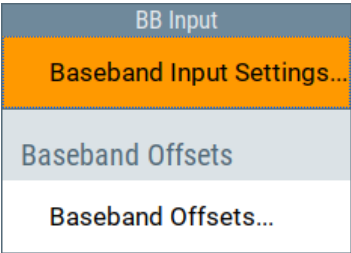

2. To access the baseband offset settings, select "BB Input" > "Baseband Offsets".  
See [Chapter 4.12, "Shifting and boosting the baseband signal"](#), on page 262.
3. To access the dialog box for configuring the external signal input, select "BB Input" > "Digital I/Q In" > "Baseband Input Settings".

The "Baseband Input Settings" dialog provides settings necessary to define the used connector. Also, it provides settings to adjust the signal parameters, like the sample rate and the baseband input level.

In this dialog, you access the settings of both, the Dig I/Q and the HS Dig I/Q connectors in the same manner. You recognize the type of connector that is active by the used connector icon.

4. To set the input connector, select "BB Input" > "General" > "Interface" > "HS Dig I/Q"
5. To enable the input signal, select "BB Input" > "On".

**Note: Interdependencies**  
You cannot use some functions simultaneously. **They deactivate each other.**  
See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

The remote commands required to define these settings are described in [Chapter 13.17.2, "SOURce:BBIN subsystem"](#), on page 783.


Settings:

• <a href="#">General settings</a> .....	487
• <a href="#">Signal input settings</a> .....	489
• <a href="#">Sample rate settings</a> .....	491
• <a href="#">Input level settings</a> .....	492

9.6.1 General settings

- Access:
- ▶ Select "BB Input" > "Baseband Input Settings".



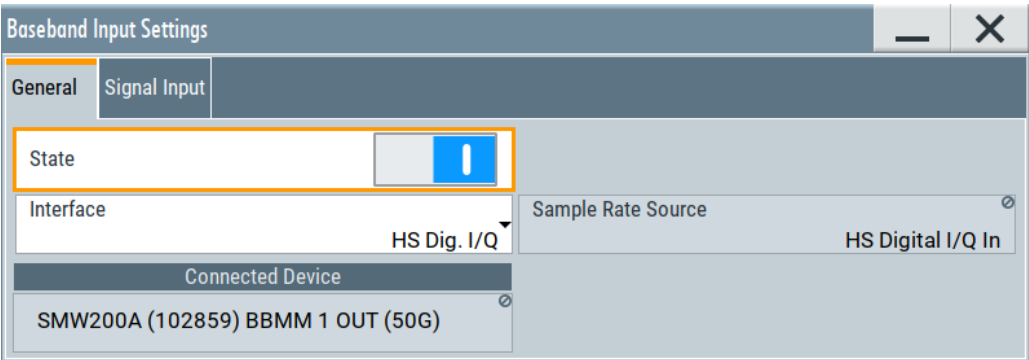

Settings:

State.....	488
Interface.....	488
Sample Rate Source.....	488
Connected Device.....	489

State

Enables the feeding of the selected external digital signals into the baseband.

Note: Interdependencies

You cannot use some functions simultaneously. **They deactivate each other.**

See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

Remote command:

[\[:SOURce<hw>\]:BBIN:STATe](#) on page 785

Interface

Sets which of the digital interfaces is used, the Dig I/Q or the HS Dig I/Q.

Remote command:

[\[:SOURce<hw>\]:BBIN:DIGital:INTERface](#) on page 786

Sample Rate Source

Indicates the digital interface used to estimate the sample rate.

"Digital I/Q In"

Estimates the sample rate based on the applied I/Q data clock and displays the resulting value in the value field. The I/Q data clock signal is fed via the Dig I/Q input.

**Note:** Estimation works best if the sample rate is close to the user-defined value.

"HS Digital I/Q In"

Estimates the sample rate value based on the information transmitted by the transmitter.  
Resulting value per channel is displayed by the parameter [Sample Rate](#).

Remote command:

[\[:SOURce<hw>\]:BBIN:SRATe:SOURce](#) on page 788



**Connected Device**

If the connection to the external device is properly established and signal transmission is active, this parameter displays information on the instrument connected to the Dig I/Q interface:

- Name, serial number and port of the connected instrument
- The transmitter sample rate, if supported by the transmitter

"None" indicates that no device is connected.

Remote command:

[ :SOURce<hw> ] :BBIN:CDEvice? on page 786

**9.6.2 Signal input settings**

Access:

1. Select "BB Input > Digital I/Q In > Baseband Input Settings > Interface = HS DIG I/Q".
2. Select "Signal Input".

The screenshot shows the 'Baseband Input Settings' dialog box with the 'Signal Input' tab selected. It contains a table with columns: Name, Sample Rate / MHz, Crest Factor / dB, Peak Level / dBFS, Level / dBFS, and BB. The table has one row with the following values: 0, BBMM1\_CH0, 100.000 000 000, 10.87, 0.00, -10.87, and an information icon. Below the table, it shows 'Aggregated Link Sample Rate (MHz): 100.00 / 600.00'. There is a 'DIG IQ Auto Setting' checkbox which is checked. At the bottom, there is a 'Measurement Period' set to '2 s' and an 'Auto Level Set' button.

Name	Sample Rate / MHz	Crest Factor / dB	Peak Level / dBFS	Level / dBFS	BB
0 BBMM1_CH0	100.000 000 000	10.87	0.00	-10.87	

Aggregated Link Sample Rate (MHz): 100.00 / 600.00

DIG IQ Auto Setting ☒

Measurement Period: 2 s Auto Level Set

**Settings:**

Channel Table.....	490
L Number.....	490
L Name.....	490
L Sample Rate.....	490
L Crest Factor.....	490
L Peak Level.....	490
L Level.....	490
L BB.....	490
Aggregated Link Sample Rate.....	490
DIG IQ Auto Setting.....	491
Measurement Period.....	491
Auto Level Set.....	491



**Channel Table**

Displays information on the up to 8 digital channels per HS Dig I/Q interface:

**Number ← Channel Table**

Subsequent number.

**Name ← Channel Table**

Channel indication, set by the transmitter.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:NAME` on page 786

**Sample Rate ← Channel Table**

Displays the used sample rate per channel.

For information on the maximum sample rate and the aggregated link sample rate, see ["Aggregated Link Sample Rate"](#) on page 490.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:SRATe` on page 788

**Crest Factor ← Channel Table**

If [DIG IQ Auto Setting](#) > "Off", sets the crest factor per channel.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:POWer:CFACtor` on page 787

**Peak Level ← Channel Table**

If [DIG IQ Auto Setting](#) > "Off", sets the peak level per channel. The value is set as attenuation in digital baseband domain.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:POWer:PEAK` on page 787

**Level ← Channel Table**

Indicates the level, set automatically depending on the selected peak level and crest factor.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:POWer:RMS` on page 787

**BB ← Channel Table**

Activates the channel.

You can only activate one channel at a time. Toggle the state of the channel to test all channels one after another.

Remote command:

`[ :SOURce<hw> ] :BBIN:CHANnel<ch0>:BB:STATe` on page 786

**Aggregated Link Sample Rate**

Indicates the aggregated sample rate and the maximum sample rate, where:

- The aggregated sample rate is the sum of the sample rates of all active channels. It cannot exceed the maximum sample rate.
- The R&S SMBV100B supports two standard max. sample rate values.



This parameter indicates the currently selected one, where the max. sample rate is selected depending on the capabilities of the transmitter/receiver.

For more information, see data sheet.

Remote command:

`[ :SOURce<hw> ] :BBIN:SRATe:SUM?` on page 788

`[ :SOURce<hw> ] :BBIN:SRATe:MAX?` on page 789

### DIG IQ Auto Setting

Activates an automatic adjustment of the baseband input signal.

The R&S SMBV100B receives peak level, level and crest factor values directly from the connected transmitter and recognizes changes automatically.

Remote command:

`[ :SOURce<hw> ] :BBIN:DIGital:ASETting:STATe` on page 789

### Measurement Period

Sets the recording duration for measuring the baseband input signal by "Auto Level Set".

**Note:** For accurate level measurements, set the measurement period to a time value that is long enough to capture several periods of the input signal.

Remote command:

`[ :SOURce<hw> ] :BBIN:MPERiod` on page 790

### Auto Level Set

Starts measuring the input signal for estimating the crest factor, the peak level, and the Revel of the input signal.

See also "[Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal](#)" on page 468.

Remote command:


`[ :SOURce<hw> ] :BBIN:ALEVel:EXECute` on page 790

## 9.6.3 Sample rate settings

Access:

1. Select "BB Input > Digital I/Q In > Baseband Input Settings > Interface = DIG I/Q".
2. Select "Sample Rate".



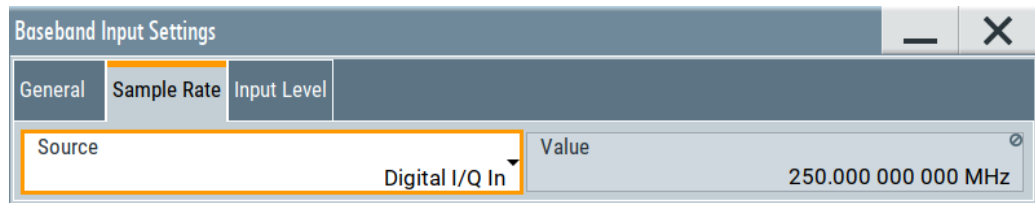

Sample Rate Source.....492  
 Sample Rate Value.....492

### Sample Rate Source

Indicates the digital interface used to estimate the sample rate.

"Digital I/Q In"

Estimates the sample rate based on the applied I/Q data clock and displays the resulting value in the value field. The I/Q data clock signal is fed via the Dig I/Q input.

**Note:** Estimation works best if the sample rate is close to the user-defined value.

"HS Digital I/Q In"

Estimates the sample rate value based on the information transmitted by the transmitter.

Resulting value per channel is displayed by the parameter [Sample Rate](#).

Remote command:

[\[:SOURce<hw>\]:BBIN:SRATe:SOURce](#) on page 788

### Sample Rate Value

For Dig I/Q connectors, sets the sample rate of the external digital baseband input signal.

The max. sample rate depends on the connected transmitting device.

Remote command:

[\[:SOURce<hw>\]:BBIN:SRATe\[:ACTual\]?](#) on page 789

## 9.6.4 Input level settings

Access:

1. Select "BB Input > Digital I/Q In > Baseband Input Settings > Interface = DIG I/Q".
2. Select "Input Level".



Baseband Input Settings		
General	Sample Rate	Input Level
DIG IQ Auto Setting <input checked="" type="checkbox"/>		Measurement Period 2 s
Auto Level Set <input checked="" type="checkbox"/>		Crest Factor 11.15 dB
Peak Level 0.00 dBFS		Level -11.15 dBFS

DIG IQ Auto Setting.....	493
Measurement Period.....	493
Auto Level Set.....	493
Crest Factor.....	493
Peak Level.....	494
Level.....	494

### DIG IQ Auto Setting

Activates an automatic adjustment of the baseband input signal.

The R&S SMBV100B receives peak level, level and crest factor values directly from the connected transmitter and recognizes changes automatically.

Remote command:

[\[:SOURce<hw>\]:BBIN:DIGital:ASETting:STATE](#) on page 789

### Measurement Period

Sets the recording duration for measuring the baseband input signal by "Auto Level Set".

**Note:** For accurate level measurements, set the measurement period to a time value that is long enough to capture several periods of the input signal.

Remote command:

[\[:SOURce<hw>\]:BBIN:MPERiod](#) on page 790

### Auto Level Set

Starts measuring the input signal for estimating the crest factor, the peak level, and the level of the input signal.

See also ["Fulfilling the prerequisites for a correct signal processing of the externally supplied digital baseband signal"](#) on page 468.

Remote command:

[\[:SOURce<hw>\]:BBIN:ALEvel:EXECute](#) on page 790

### Crest Factor

Indicates the crest factor of the external baseband signal.

See also [Chapter 9.4.2.4, "Important signal parameters and interface's characteristics"](#), on page 467.

Remote command:

[\[:SOURce<hw>\]:BBIN:POWer:CFACTOR](#) on page 790



**Peak Level**

Indicates the peak level of the external baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

See also [Chapter 9.4.2.4, "Important signal parameters and interface's characteristics"](#), on page 467.

Remote command:

`[ :SOURce<hw> ] :BBIN:POWer:PEAK` on page 791

**Level**

Indicates the estimated RMS level acquired with "Auto Level Set".

Remote command:

`[ :SOURce<hw> ] :BBIN:POWer:RMS?` on page 791

## 9.7 I/Q digital output settings

**Required options**

The equipment layout for output of a baseband signal includes:


- Base unit
- Option digital baseband output R&S SMBVB-K19  
(incl. the digital interfaces Dig I/Q and HS Dig I/Q, where each of the interfaces can be used as input and HS Dig I/Q also as output)

For more information, see data sheet.

**To access and configure the "I/Q Digital Output" settings**

The digital output connectors are located on the R&S SMBV100B rear panel, see [Chapter 9.4.2.2, "Overview of the RF output signals"](#), on page 466.

In the default instrument state, the block diagram displays the Dig I/Q connectors in a folded state. The digital output interfaces are inactive (gray LEDs).

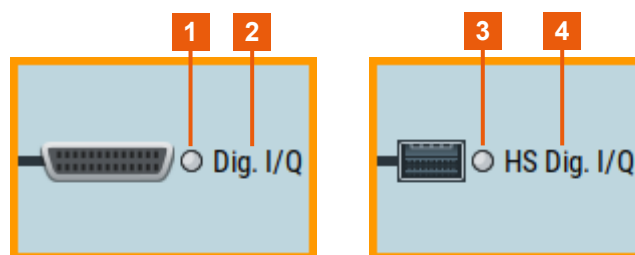

**Figure 9-5: Unfolded view of the digital output interface: left Dig I/Q, right HS Dig I/Q**

1, 3 = digital output interface state: gray = inactive; blue = active  
2, 4 = digital output connector name

1. Select the "Dig. I/Q Out" symbol to unfold the "I/Q Digital" block.



You access the settings of both, the **Dig I/Q** and the **HS Dig I/Q connectors** in the same manner. You recognize the type of connector that is active by the used connector icon.

- To enable the baseband signal at the digital output, select "Block Diagram > I/Q Digital > I/Q Digital On".

**Note: Interdependencies**

You cannot use some functions simultaneously. **They deactivate each other.** See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

The digital output is activated and the baseband digital input deactivated.


- To access the dialog box for configuring the digital output signal, select "I/Q Digital > I/Q Digital Outputs".
- To set the input connector, select "I/Q Digital > General > Interface = e.g. HS Dig I/Q"

The remote commands required to define these settings are described in [Chapter 13.17.9.2, "SOURce:IQ:OUTPut:DIGital commands"](#), on page 960.

## 9.7.1 General settings

Access:

- Select "I/Q Digital > I/Q Digital Outputs".

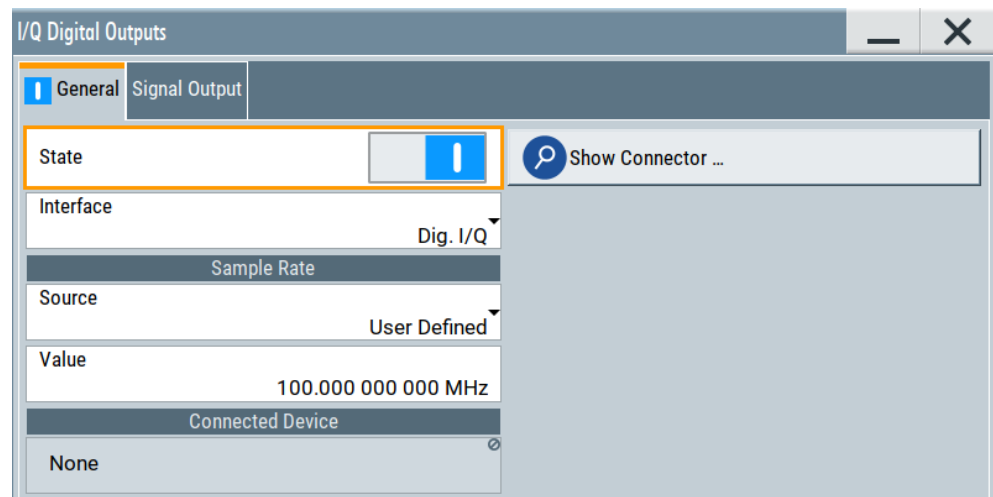

**Settings:**

State.....	496
Show Connector.....	496
Interface.....	496
Source.....	496
Value.....	496
Connected Device.....	496



**State**

Activates/deactivates the digital I/Q output.

**Note: Interdependencies**

You cannot use some functions simultaneously. **They deactivate each other.**

See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

Remote command:

`[[:SOURce<hw>]:IQ:OUTPut:DIGital:STATe` on page 961

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

**Interface**

Sets which of the digital interfaces is used, the Dig I/Q or the HS Dig I/Q.

Remote command:

`[[:SOURce<hw>]:IQ:OUTPut:DIGital:INTERface` on page 961

**Source**

For Dig I/Q interfaces, selects whether the sample rate is estimated based on the digital signal or a manually entered value.

"User Defined" Enables you to define the sample rate in the entry field value. An I/Q data clock is not necessary.

Remote command:

`[[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce` on page 961

**Value**

Sets/displays the sample rate of the digital I/Q output signal. The maximal sample rate depends on the connected receiving device.

Remote command:

`[[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe` on page 962

**Connected Device**

If the connection to the external device is properly established and signal transmission is active, this parameter displays information on the instrument connected to the Dig I/Q interface:

- Name, serial number and port of the connected instrument
- The transmitter sample rate, if supported by the transmitter

"None" indicates that no device is connected.

Remote command:


`[[:SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?` on page 962



## 9.7.2 Channels settings

Access:

1. Select "I/Q Digital > I/Q Digital Settings > General > Interface > HS Dig I/Q".
2. Select "I/Q Digital > I/Q Digital Settings > Channels".

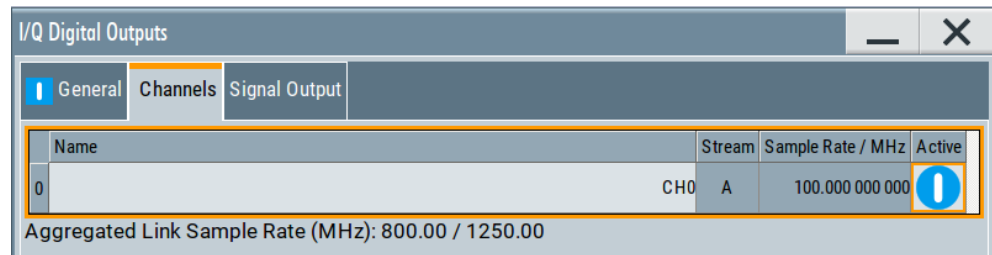

The channels are displayed in table form, where the number of rows corresponds to the number of channels.

### Settings:

Number.....	497
Name.....	497
Stream.....	497
Sample Rate.....	497
Peak Level.....	498
Level.....	498
Active.....	498
Aggregated Link Sample Rate.....	498

### Number

Subsequent number.

### Name

Sets the name of the channel of the used interface.

Remote command:

`[ :SOURce ] :IQ:OUTPut:DIGital:CHANnel<st0>:NAME` on page 965

### Stream

Indicates the streams that are routed to the channel.

### Sample Rate

Sets the sample rate per channel.

For information on the max. sample rate and the aggregated sample rate, depending on the number of active channels, observe the indication [Aggregated Link Sample Rate](#).

Remote command:

`[ :SOURce ] :IQ:OUTPut:DIGital:CHANnel<st0>:SRATe` on page 965



**Peak Level**

Setting this parameter requires "Set Level Via > Peak Level".

Sets the peak level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Option: R&S SMBVB-B9/-K19

Parameter is read-only in the configuration "Mode > Advanced" and "Signal Outputs > Analog&Digital".

Remote command:

For the output signal at the Dig I/Q interfaces:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:PEP` on page 963

For the output signal of a channel of the HS Dig I/Q interfaces:

`[ :SOURce ] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP`  
on page 963

**Level**

Setting this parameter requires "Set Level Via > Level".

Sets the RMS level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Remote command:

For the output signal at the Dig I/Q interfaces:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:LEVel` on page 963

For the output signal of a channel of the HS Dig I/Q interfaces:

`[ :SOURce ] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel`  
on page 963

**Active**

Activates the channel.

Remote command:

`[ :SOURce ] :IQ:OUTPut:DIGital:CHANnel<st0>:STATe` on page 965

**Aggregated Link Sample Rate**

Indicates the aggregated sample rate and the maximum sample rate, where:

- The aggregated sample rate is the sum of the sample rates of all active channels. It cannot exceed the maximum sample rate.
- The R&S SMBV100B supports two standard max. sample rate values. This parameter indicates the currently selected one, where the max. sample rate is selected depending on the capabilities of the transmitter/receiver.

For more information, see data sheet.

Remote command:

`[ :SOURce ] :IQ:OUTPut:DIGital:SRATe:SUM?` on page 965


`[ :SOURce ] :IQ:OUTPut:DIGital:SRATe:MAX?` on page 965



9.7.3 Signal output settings

Access:

- ▶ Select "I/Q Digital > I/Q Digital Settings > Signal Output".

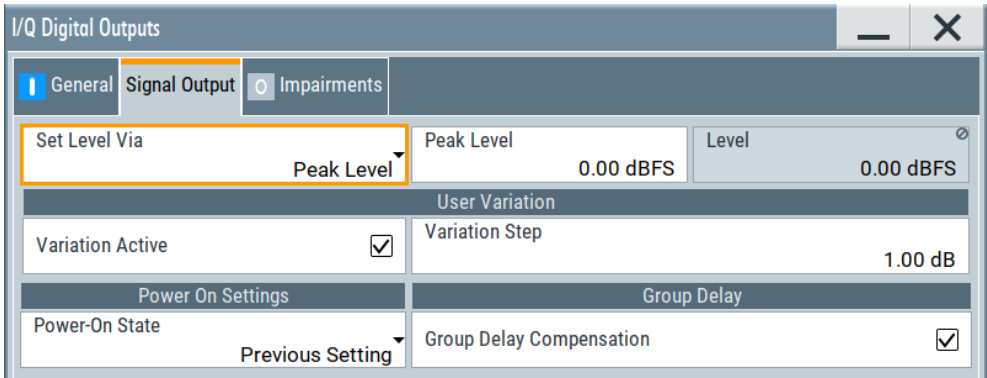

The tab comprises settings necessary to configure the I/Q digital signal output parameters.  
"User Variation" and "Group Delay Compensation" settings are not available, if "Interface = HS Digital I/Q".

Settings:

Signal output level settings.....	499
L Set Level Via.....	499
L Peak Level.....	499
L Level.....	500
User Variation.....	500
Power-On State.....	500
Group Delay Compensation.....	501

Signal output level settings

Comprises the level settings of the digital IQ output signal. The signal level is expressed as a peak or RMS level value.  
If R&S SGT is connected to the Dig I/Q interface of the R&S SMBV100B, the level parameters are set automatically.

**Note:** The "Level" display always refers to both signal components, i.e.  $SQR(I^2+Q^2)$ .

Set Level Via ← Signal output level settings

Selects whether the signal level is expressed as a peak or as RMS level value.

Remote command:

[ :SOURce ] :IQ:OUTPut:DIGital:POWer:VIA on page 963

Peak Level ← Signal output level settings

Setting this parameter requires "Set Level Via > Peak Level".

Sets the peak level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).



Option: R&S SMBVB-B9/-K19

Parameter is read-only in the configuration "Mode > Advanced" and "Signal Outputs > Analog&Digital".

Remote command:

For the output signal at the Dig I/Q interfaces:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:PEP` on page 963

For the output signal of a channel of the HS Dig I/Q interfaces:

`[ :SOURce ] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP`

on page 963

### Level ← Signal output level settings

Setting this parameter requires "Set Level Via > Level".

Sets the RMS level of the output signal relative to full scale of 0.5 V (in terms of dB full scale).

Remote command:

For the output signal at the Dig I/Q interfaces:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:LEVel` on page 963

For the output signal of a channel of the HS Dig I/Q interfaces:

`[ :SOURce ] :IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel`

on page 963

### User Variation

If the rotary knob is used to adjust the level values, the step width can be defined. The configured step width applies with activated variation.

"User Variation" is disabled, if R&S SGT is connected to the Dig I/Q interface of the R&S SMBV100B.

"Variation Active"

Enables the user-defined step width.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:STEP:MODE`

on page 964

"Variation Step"

Sets the user defined step width.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:POWer:STEP[ :`

`INCRement ]` on page 964

### Power-On State

Selects the state which the I/Q digital output connectors Dig I/Q are to resume after the instrument is switched on.

"I/Q Out Off" On power-on, the output is deactivated.

"Previous Setting"

Resumes the state that was active before the last switch off.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut:DIGital:PON` on page 964



### Group Delay Compensation

If you evaluate digital signals, enable this parameter so that the instrument compensates the group delay response of the internal digital filters.

Remote command:

`[[:SOURce]:IQ:OUTPut:DIGital:GDElay:CState` on page 962

## 9.8 I/Q analog output settings

### Required Options


The equipment layout for output of analog I/Q signal includes:

- Base unit  
Incl. output the baseband signal at the single-ended outputs
- Option differential analog I/Q outputs (R&S SMBVB-K17)

### Access

The analog output connectors I/Q are located on the R&S SMBV100B rear panel, see [Chapter 9.4.2.2, "Overview of the RF output signals"](#), on page 466.

The block diagram displays the "I/Q OUT" connector in a folded state. The analog output connectors are inactive (gray LEDs).

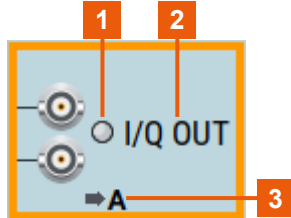

**Figure 9-6: Representation of the analog output interface**

- 1 = Analog output interface state: gray = inactive; blue = active  
 2 = Analog output connector name  
 3 = Mapped I/Q stream

### To configure the "I/Q Analog Output" settings

1. Select the "I/Q OUT" symbol to unfold the "I/Q Analog" block.
2. To route or reroute the signal to the analog outputs, select the "I/Q Stream Mapper" block.
3. To enable the baseband signal at the analog outputs, select "Block Diagram > I/Q Analog > I/Q Analog On".
4. To access the dialog box for configuring the analog output signal, select "I/Q Analog > I/Q Analog Settings > General".



The dialog comprises the settings for selecting the analog output signal type (single-ended or differential), enabling and generating an RF envelope signal, and adding digital impairments to the signal.

- To configure connected external instruments, use the "System Config > System Configuration > External RF and I/Q" dialog.

The parameters defining the voltage level of the output signal are interdependent. Consider the limits listed in ["Maximum overall output voltage"](#) on page 502.

### Maximum overall output voltage

The voltage of the analog output signals is defined as a combination of output voltage of the I and Q signal components and an optional bias voltage. If the differential output is used, an additional offset can be set, too. The values of these parameters are interdependent so that the magnitude of the sum of output voltage and bias voltage must not exceed 4V.

The following applies:

- Single ended signal:  

$$V_p + V_{\text{bias}} \leq 4 \text{ V}$$
- Differential signal:  

$$0.5 \cdot V_p + |V_{\text{bias}}| + 0.5 \cdot V_{\text{offset}} \leq 4 \text{ V}$$

Where:

- $V_p$  is the output voltage as set with the parameter [I/Q Level Vp EMF](#)
- $V_{\text{bias}}$  is the bias voltage as set with the parameter [Bias \(EMF\)](#)
- $V_{\text{offset}}$  is the offset between inverting and non-inverting output as set with the parameter [Offset \(EMF\)](#)

For more information, see data sheet.

### Related settings

- See [Chapter 9.8.1, "General analog I/Q output settings"](#), on page 503
- See [Chapter 5.2, "Impairing the signal"](#), on page 281.



See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

### 9.8.1 General analog I/Q output settings

Access:

- Select "I/Q Analog > I/Q Analog Outputs > General".

For description of the impairments settings, see [Chapter 5.2, "Impairing the signal"](#), on page 281

**Settings:**

State.....	503
Set to Default.....	503
Save/Recall.....	504
RF Envelope.....	504
Show Connector.....	504
I/Q Output Type.....	504
Mode.....	505
Digital Attenuation.....	505
I/Q Level Vp EMF.....	505
Couple I/Q Bias.....	505
Bias (EMF).....	506
Offset (EMF).....	506

#### State

Enables/disables the analog I/Q output.

**Note:** By default, these output connectors are deactivated.

#### Note: Interdependencies

You cannot use some functions simultaneously. **They deactivate each other.**

See [Chapter 9.4.2.3, "Interdependencies"](#), on page 467.

Remote command:

[ :SOURce<hw> ] : IQ:OUTPut:ANALog:STATe on page 955

#### Set to Default

Calls the default settings. The values of the main parameters are listed in the following table.

Parameter	Value
"State"	Not affected by the "Set to Default"
"RF Envelope"	Off
"I/Q Output Type"	Depends on "System Configuration > External RF and I/Q > Preset behavior: Keep connections to external instruments": <ul style="list-style-type: none"> <li>• "Off": Single Ended</li> <li>• "On": Not affected by the "Set to Default"</li> </ul>



Parameter	Value
"I/Q Level Vp (EMF)"	1 V
"Bias (EMF)"	0 mV

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :PRESet` on page 956

### Save/Recall

Accesses the "Save/Recall" dialog, that is the standard instrument function for saving and recalling the complete dialog-related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The settings are saved in a file with predefined extension. You can define the filename and the directory, in that you want to save the file.

See also [Chapter 10, "File and data management"](#), on page 508.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :SETTing:CATalog?` on page 956

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :SETTing:STORe` on page 956

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :SETTing:LOAD` on page 957

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :SETTing:DELeTe` on page 957

### RF Envelope

In instruments equipped with option R&S SMBV100B-K540, enables the output of a control signal that follows the RF envelope. This control signal is provided for power amplifiers envelope tracking testing. The signal is output at the I/I Bar connectors.

The envelope tracking (ET) is a method used by modern power amplifiers (PA) to improve their efficiency, especially when amplifying high crest factor RF signals. With envelope tracking, the PA estimates, i.e. "tracks", the RF signal and varies the supply voltage at the end-amplifying stage synchronous to the changes in the RF signal.

See user manual R&S SMBVB-K540, R&S SMBVB-K541 Envelope Tracking and AM/AM, AM/PM Predistortion.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :ENVELOpe:STATe`



### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

### I/Q Output Type

Selects the type of output signal.

The provided parameters in the "I/Q Analog Outputs" dialog depend on the selected output mode.



- "Single-Ended"
- If "RF Envelope > Off"  
Single-ended output at the I/Q connectors.
  - If "RF Envelope > On"  
The envelope signal E is output at the I connectors.  
You can define a bias between the output signal and ground.
- "Differential"
- Option: R&S SMBVB-K17
- If "RF Envelope > Off"  
The analog I/Q signal components are output at the I/Q and I/Q Bar connectors.
  - If "RF Envelope > On"  
The inverted envelope signal  $\bar{E}$  is output at the I Bar connectors.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :TYPE` on page 957

### Mode

Selects the mode for setting the outputs, independent or together.

- "Fixed"
- The I/Q signal components settings are predefined fix values:
- "Bias (EMF)" = "Offset (EMF)" = 0V
  - "I/Q Level Vp (EMF)"
    - Single-ended mode: "I/Q Level Vp (EMF)" = 1 V
    - Differential mode: "I/Q Level Vp (EMF)" = 2 V
- "Variable"
- Option: R&S SMBVB-K17
- Enables modification of the I/Q signal components settings.
- "Var. Attenuated"
- Enables a precise digital attenuation of the signal.  
The level of the signal is attenuated by the value set with the parameter [Digital Attenuation](#).

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :MODE` on page 957

### Digital Attenuation

In "Mode = Var. Attenuated", attenuates the level of the baseband and the RF signal.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut : [ANALog] :POWER:ATTDigital` on page 959

### I/Q Level Vp EMF

In "Mode > Variable", sets the output voltage for the I and Q signal components.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut :LEVel` on page 958

### Couple I/Q Bias

In "Variable Mode", couples the bias setting of the I signal and the Q signal component. With activated coupling, the settings of the I signal component automatically apply to the Q signal component.




Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :BIAS:COUPling [ :STATe ]`  
on page 958

### Bias (EMF)

If a bias is enabled, a DC voltage is superimposed upon the I or Q signal.

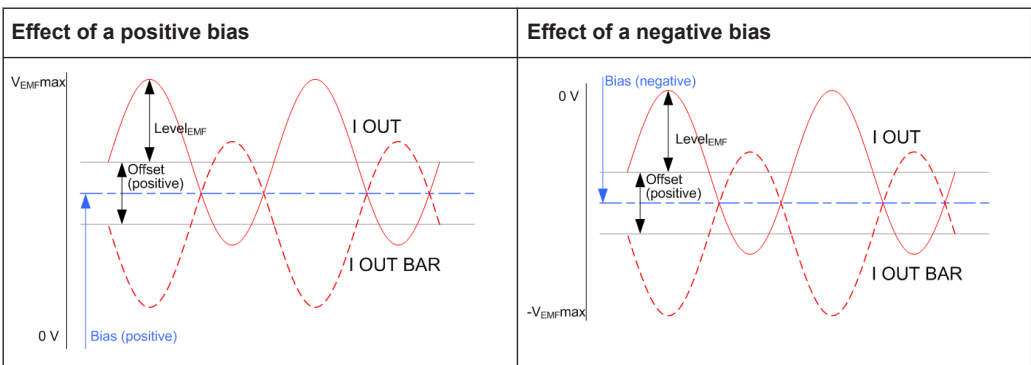

In "Single Ended" mode, this parameter defines the bias between the output signal and ground. It can be used to define the operating point of a DUT.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

Remote command:


`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :BIAS:I` on page 958  
`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :BIAS:Q` on page 958

### Offset (EMF)

Sets an offset between the inverting and the non-inverting output.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

The selected offset is set half in the positive and half in the negative direction.

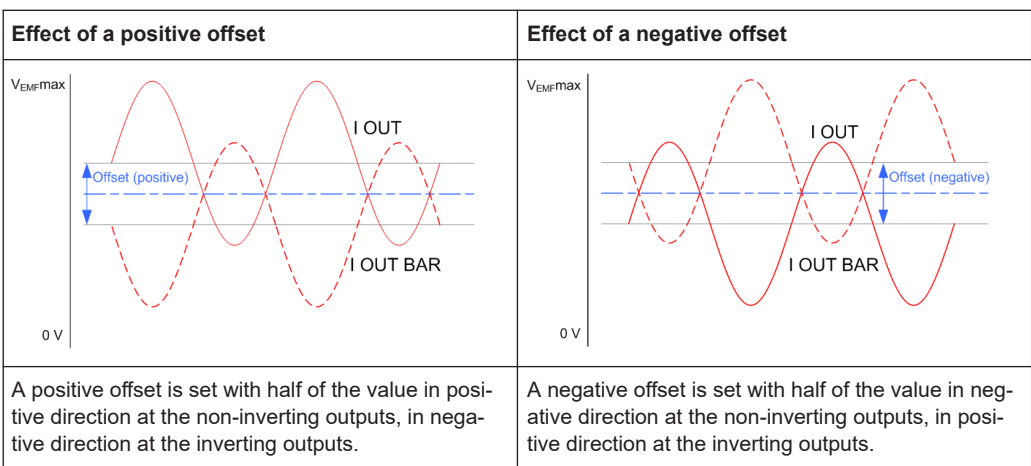



**Example: Effect of a positive offset on the I signal component**

"I Offset" = 100.0 mV

The offsets applied on the two output connectors as follows:

- +50.0 mV at the positive signal output
- -50.0 mV at the inverted signal output

Remote command:

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :OFFSet:I` on page 959

`[ :SOURce<hw> ] :IQ:OUTPut [ :ANALog ] :OFFSet:Q` on page 959



## 10 File and data management

The R&S SMBV100B uses files to save all instrument data. The instrument allows you to save and to load instrument settings, and to import and to export user data for processing in another instrument or later. Finally, you can create a screenshot of the current settings displayed on the screen and save it as a file.

The main save and recall function for managing of the instrument settings is available via the Save/Rcl key. Dedicated save/recall functions are available in the settings dialogs of the digital standards or accessible whenever user files are used.

This section focuses on the functions provided for managing of user data files and covers the topics listed below.

For information on the related remote control commands, refer to [Chapter 13.6, "Memory subsystem"](#), on page 704.

For information on how to save the displayed setting in a file, refer to [Chapter 10.10, "Creating screenshots of current settings"](#), on page 541.

• <a href="#">About the file system</a> .....	508
• <a href="#">Restoring the (default) instrument configuration</a> .....	511
• <a href="#">Protecting data</a> .....	517
• <a href="#">Saving and recalling instrument settings</a> .....	518
• <a href="#">Accessing files with user data</a> .....	524
• <a href="#">Exporting and importing remote command lists</a> .....	528
• <a href="#">Loading, importing and exporting lists</a> .....	528
• <a href="#">Using the file manager</a> .....	529
• <a href="#">How to transfer files from and to the instrument</a> .....	535
• <a href="#">Creating screenshots of current settings</a> .....	541

### 10.1 About the file system

Depending on the contained information, two file groups can be distinguished: system and user files.



Due to security reasons, system files and the system directory are protected and therefore not accessible.

The scope of this section is only the files with user data.

This section is an overview of the R&S SMBV100B file system and covers the following topics:

- ["Types of user data"](#) on page 509
- ["File storage location"](#) on page 509
- ["File handling"](#) on page 510
- ["File naming conventions"](#) on page 510
- ["File extensions"](#) on page 511



- ["File contents"](#) on page 511

### Types of user data

The **user data** includes saved instrument settings, data for the different digital standards, lists for the list mode and the user correction, and the waveforms for the arbitrary waveform generator.

You can also save the settings in the form of command sequences, e.g. in SCPI or other languages.

Depending on the **content**, the **user data** can be roughly divided into the following data types:

- *Settings*, e.g. the current instrument settings, can be saved and loaded later or used in other instrument of the same kind.  
See [Chapter 10.4, "Saving and recalling instrument settings"](#), on page 518
- *SCPI scripts*, a series of commands that can be run to perform a task.  
See [Chapter 10.6, "Exporting and importing remote command lists"](#), on page 528
- Externally or internally generated *lists*, e.g. user correction lists, or data lists can be loaded in the instrument.  
See [Chapter 10.7, "Loading, importing and exporting lists"](#), on page 528 and [Chapter 10.5, "Accessing files with user data"](#), on page 524
- Externally or internally generated *complex modulation and control data* can be loaded in the instrument.  
See [Chapter 10.5, "Accessing files with user data"](#), on page 524
- Externally generated *waveforms* can be loaded in the "Arbitrary Waveform Generation" dialog.  
See [Chapter 4.6, "Using the arbitrary waveform generator \(ARB\)"](#), on page 152

Depending on the **data storage method**, user data can be:

- *Persistent*, i.e. user files that are recorded on the data storage.  
Data is preserved when instrument is powered off and can be accessed and modified subsequently.
- *Temporary*, i.e. volatile data that the instrument retains while it is powered on.  
Volatile data is immediately lost when the R&S SMBV100B is switched off.

### File storage location

Without any additional measures, the R&S SMBV100B stores user files on the internal memory, the [removable memory](#), or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

If option R&S SMBVB-B80 is installed, the R&S SMBV100B maps the user directory to the [removable memory](#). If a memory is mounted, user data is saved there. Otherwise user data is redirected to the volatile memory.



### Default storage location

The R&S SMBV100B stores user data in the user directory.

Depending on the installed options, the user directory is physically located on the internal memory or on the [removable memory](#).

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 10.8, "Using the file manager"](#), on page 529. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

### File handling

To *access files* and the file system of the instrument or to use the general file management functions such as copying and moving data, use the standard "File Manager" dialog.

See [Chapter 10.8, "Using the file manager"](#), on page 529.

To *transfer files* from and to the instruments or to exchange files, use one of the following alternatives:

- Connect a memory stick to one of the USB interfaces.  
The instrument recognizes automatically a connected memory stick and assigns the `/usb/` drive to it.
- Connect the instrument to a LAN.  
An instrument connected to a LAN supports two standard file transfer methods from a remote client:
  - FTP (file transfer protocol)
  - File sharing according to the SAMBA/SMB (server message block) protocol.Both file transfer methods access the folder `/user`, that is the `/var/user/` folder on the instrument.  
For step-by-step description, see [Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535.
- Map a network folder or a computer to an instrument connected to a LAN.  
A mapped network folder is indicated as `/shares/<"Local Folder">`.  
For step-by-step description, see [Chapter 10.8.4, "How to map a network folder"](#), on page 533.

### File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).



- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: CLOCK\$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN  
They are reserved by the operating system.

### File extensions

The R&S SMBV100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and also a specific file extension. The extension is usually of no consequence to you since access to the files occurs in the individual dialogs where only the relevant type of file is available. For example, files with user correction data can only be saved and loaded in the "UCOR" dialog.

See [Chapter A.2, "Extensions for user files"](#), on page 1114 for an overview of the supported file extensions.

### File contents

To maintain the file size and to accelerate the loading and processing times, not all instrument settings but rather the settings in state different than the preset one are saved. Considered is also configuration data for the operating elements and lists with user data, e.g. dialog positions and a list of user correction data. However, if a list data is part of the instrument settings, a reference to this list is saved, not the list itself.

This approach ensures that the created files contain only relevant information and allows you to transfer instrument settings even between different equipped signal generators. During the recall process, the instrument interprets only the relevant settings; all non-referenced parameters are set to their preset values. Error messages indicate the settings which cannot be implemented, like referencing non-existing lists or the attempt to activate settings which are not supported by the instrument.



Network settings and remote settings cannot be saved and restored.

## 10.2 Restoring the (default) instrument configuration

The R&S SMBV100B has various options to set default settings. You can preset the R&S SMBV100B to an initial state at any time as a known starting point for configurations. It is often useful as a first step in troubleshooting when unusual results arise.

The graph on [Figure 10-1](#) shows the impact of the particular reset functions.



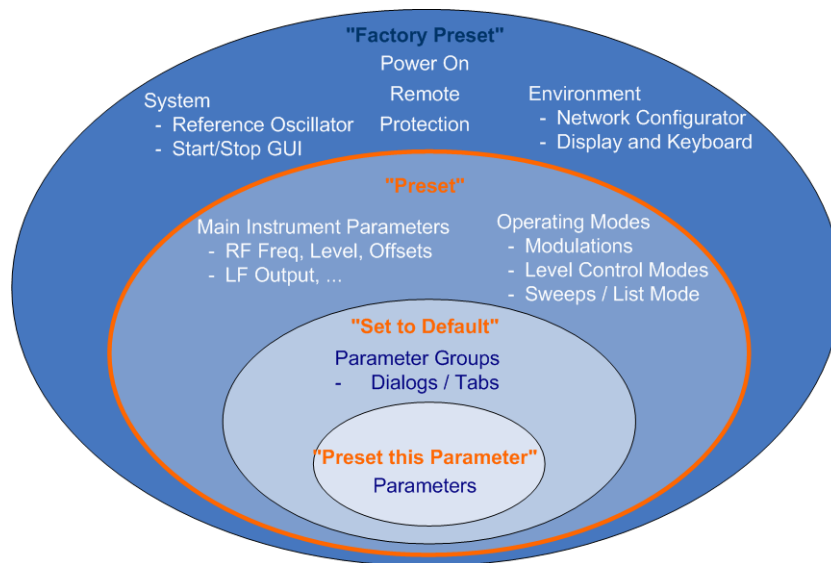


Figure 10-1: Parameter and operating modes, reset by the respective preset functions


### Overview of the characteristics of the preset functions

Select the preset option that most fits to your particular application:




- [Preset]  
It is the most frequently used function.  
A **Preset** executes a defined instrument setup to provide an initial instrument state as a basis for a new configuration. It resets all parameters and switching states, including also the states of inactive operating modes.  
Network, remote access or system settings are retained.

► To execute a preset, press the [Preset] key at the front panel.



- "Set to Default"  
**Set To Default** relates to individual dialogs or tabs and resets the associated settings of the corresponding dialog. All other settings are retained.  
For example, you can use it to reset all digital modulation settings in the "Custom Digital Mod" dialog.


► To reset the grouped settings, click "Set To Default".



- "Preset this parameter"  
Sets a single parameter to its default value.



- ▶ To reset an individual parameter: Open its context-sensitive menu and select "Preset this parameter...".



- "Factory Preset"  
A factory preset is the most profound preset function that resets almost all instrument settings, including reference oscillator, network and remote access settings. Retained are the following settings:
  - Security, password, and settings protected by these passwords
  - User-defined data, like setups or data lists
  - Settings that relate to an integration of the instrument in a measurement setup.

- ▶ To restore the factory defaults, select [System Config > Setup > Settings > Factory Preset](#).

**Note:** Perform a "Factory Preset" only if it is necessary. After a "Factory Preset", the network connection to the instrument no longer exists.

### Presetting the instrument to a user-defined instrument state

The reset functions set the parameters and operating modes to default values predefined by the factory. Alternatively to these default settings, you can:

- Define user-specific recall settings to be restored after a preset (see [Chapter 10.2.3, "How to recall user settings automatically after preset"](#), on page 515)
- Store and reload user-defined instrument states (see [Chapter 10.4.2, "How to save and recall instrument settings"](#), on page 522)

### Mark / Do not mark parameters changed from preset

To survey the current state of the settings concerning default values, the R&S SMBV100B offers a feature that visually identifies deviations from the default values.

For more information, see [Chapter 10.2.2, "How to identify parameters which are not in a preset state"](#), on page 514.

## 10.2.1 Preset, set to default and factory preset settings

<a href="#">Preset</a> .....	513
<a href="#">Set To Default</a> .....	514
<a href="#">Preset this Parameter</a> .....	514
<a href="#">Execute Factory Preset</a> .....	514

### Preset

Resets all parameters and switching states, and closes all opened dialogs.



External instruments connected to the R&S SMBV100B are also preset, see [Chapter 9.5.2, "External RF and I/Q settings"](#), on page 472.

**Note:**

In contrast to the [Preset] key, the SCPI commands `*RST` and `:SYSTem:PRESet` do not close open dialogs in the GUI.

Consider also the following possibilities:

- You can define the settings that are restored when you preset the instrument (see [Chapter 10.2.3, "How to recall user settings automatically after preset"](#), on page 515)
- You can reset the instrument to the factory state (see ["Execute Factory Preset"](#) on page 514)

See also [Table 10-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`*RST` on page 700

**Set To Default**

Resets the associated settings of the corresponding dialog or tab.

Remote command:

For example, `[ :SOURce<hw> ] :BB:<Digital Standard>:PRESet`

**Preset this Parameter**

Restores the default value of a single parameter.

**Execute Factory Preset**

Resets the instrument to its factory settings.

**Note:** "Factory Preset" retains all security settings and does not delete any user files like setups or user data.

See also [Table 10-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`:SYSTem:FPRreset` on page 703


## 10.2.2 How to identify parameters which are not in a preset state

To recognize the current state of the settings related to their default values at the first glance, enable a function that visually identifies parameters in states different than preset.

To activate this display:

1. Open the context-sensitive menu (touch and hold the screen anywhere in the GUI of the R&S SMBV100B).
2. Select "Mark all parameters changed from preset".





If enabled, the corresponding settings are marked.

#### Example:

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

**Figure 10-2: Labeled parameters show that the value deviates from its default**

Frequency = changed (default = 1 GHz)  
 Offset = changed (default = 0 kHz)  
 Multiplier = unchanged  
 Variation active = changed (default = disabled)  
 Variation step = unchanged

### 10.2.3 How to recall user settings automatically after preset

You can define the settings that are restored when you preset the instrument.

1. Configure the settings as required. Save them as described in [Chapter 10.4.2, "How to save and recall instrument settings"](#), on page 522.
2. Save the settings as a file with the predefined filename `UserPreset.savrc1.txt`. Save this file in the directory `/var/user/`.

The filename `UserPreset.savrc1.txt` and the directory `/var/user/` are mandatory.

Now when you press the [Preset] key or send the `*RST` command to the instrument, the defined settings are restored.

An "Info" message appears and confirms, that a file with user-defined preset setting is loaded.

### 10.2.4 Reference

See [Table 10-1](#) for an overview of the main generator settings that are affected by the corresponding preset functions. While the regular [Preset] key primarily resets the signal relevant parameters of the instrument, the "Factory Preset" affects almost all instrument settings.



## Restoring the (default) instrument configuration

For information on the default values of further parameters, refer to the description of the corresponding remote commands.

**Table 10-1: Key parameters affected by preset and factory preset**

Parameter	Preset value	Preset	Factory Preset
RF frequency	1 GHz	x	x
RF level (RF output)	off	x	x
RF OFF mode	-	-	x
Offsets	0	x	x
Modulation state	off	x	x
Uninterrupted level settings	off	x	x
Level attenuator mode	auto	x	x
Level ALC (internal level control)	auto	x	x
Level UCOR (user correction)	off	x	x
LF output state	off	x	x
Sweep state	off	x	x
List mode state	off	x	x
Reference frequency settings (reference oscillator)	-	-	x
Power on settings (Level/EMF)	-	-	x
Network settings	-	-	x
Hostname	-	-	x
Start/Stop display update	-	-	x
Display and keyboard settings	-	-	x
Preset behavior: Keep connections to external instruments	off	-	x
Password and settings protected by passwords (e.g. disabled LAN or USB)	-	-	-
Security settings	-	-	-
User files (setups <sup>2)</sup> , data lists, etc.)	-	-	-

- <sup>2)</sup> `UserPreset.savrc1txt` is renamed as `UserPresetInactive.savrc1txt`; an existing file with the same name is overwritten.



If the default values in the "Remote Access" dialog had been changed, a factory preset via remote control (`:SYSTem:FPReset`) terminates the connection to the instrument. Security settings are never reset.

Resets all parameters and switching states, and closes all opened dialogs.





A [Preset] resets also external instruments connected to the R&S SMBV100B.  
See [Chapter 9.5.2, "External RF and I/Q settings"](#), on page 472.

## 10.3 Protecting data

During operation, the R&S SMBV100B saves user data permanently in the user directory, see ["File storage location"](#) on page 509.

**To protect any classified data and to avoid saving any sensitive data on the R&S SMBV100B permanently**, you have the following options:

- Activate the **volatile mode**. This mode redirects user data to the volatile memory, see ["Volatile Mode"](#) on page 597.  
The internal memory and the removable memory are write-protected.  
Once you power off the instrument for at least five minutes, all volatile memory modules lose their contents.  
Instead, you can redirect the user data to an **external memory device**, as, e.g., a USB stick.  
See also:
  - ["Default storage location"](#) on page 510
  - ["Volatile Mode"](#) on page 597
  - [Chapter 10.9.4, "Using a USB storage device for file transfer"](#), on page 540
- If the R&S SMBV100B is equipped with the **removable memory** R&S SMBVB-B80 and an SD card is inserted:
  - If the volatile mode is disabled (default setting) the R&S SMBV100B **saves user data permanently and only on this storage medium**.  
You can access data saved on the removable memory just as data saved in the `/var/user/`.
  - If the volatile mode is enabled, the R&S SMBV100B redirects user data to the **volatile memory** (SDRAM).  
The volatile memory loses its contents when you power off the instrument.
- Save user files **temporarily in the `/var/volatile` directory**, which remains available only until the instrument is turned off.  
You can access data in the volatile memory just as data that is saved permanently in the `/var/user/`.  
See also [Chapter 10.8.3, "How to display all saved files"](#), on page 533.

### Removing the Non-Volatile Memory from the R&S SMBV100B

1. **NOTICE!** You can damage the instrument and loose data, when removing the Non-Volatile Memory during operation.  
Switch off the R&S SMBV100B, see ["To shut down the product"](#) on page 36.
2. Remove the Non-Volatile Memory from the instrument.





For detailed information on how to protect the instrument and sensitive data from unauthorized access, see the Instrument Security Document on the product website.

## 10.4 Saving and recalling instrument settings

Possibly you would like to restore or repeat a signal generation you performed under specific conditions on the instrument. Or, in a test setup with more than one signal generator, you want to transfer the used settings to another R&S SMBV100B. Some test setups also require similar settings in all instrument paths. In these cases, you can save and recall instrument and user settings, and possibly other related data.

In each of these cases, you can create a file with the complete instrument settings or you can choose to save only the settings belonging to a particular digital standard. The instrument uses a similar save/recall principle; both ways are scope of this section.

### Save/Recall the complete instrument settings

Two different methods are available for managing *complete instrument settings*:

- Immediate (quick) Save/Recall  
A defined set of instrument settings are saved or recalled quickly in just one step, without defining a filename or storage location. This function enables a fast switching between different instrument settings.
- Save/Recall in files with user-defined names  
The defined set of instrument settings are saved to a definable storage location. The file extension is \*.savrc1txt.  
Settings files created in this way are visible in the file system and accessible with the supported methods for file handling.

In the general case, a recall process replaces the instruments settings with the saved values. An exception is the frequency and level settings. During recall of the instrument settings, it is possible to retain the current settings or to overwrite them with the saved values.

### Save/Recall the settings belonging to a firmware option

Each of the firmware option provides a special "Save/Recall" function to manage directly the settings associated to the corresponding digital standard, e.g. all settings in the "3GPP FDD" dialog.

The "Save/Recall" function creates files with user-defined names, predefined file extension and on a definable storage location. The files are accessible with the supported methods for file handling.




### 10.4.1 Save/recall settings

#### To access the dialog for saving and loading the complete instrument settings

1. Press the [Save/Rcl] key.
2. Select "Operation Mode > Save or Recall" to access the corresponding settings.


The provided settings for both operations are similar and closely related.

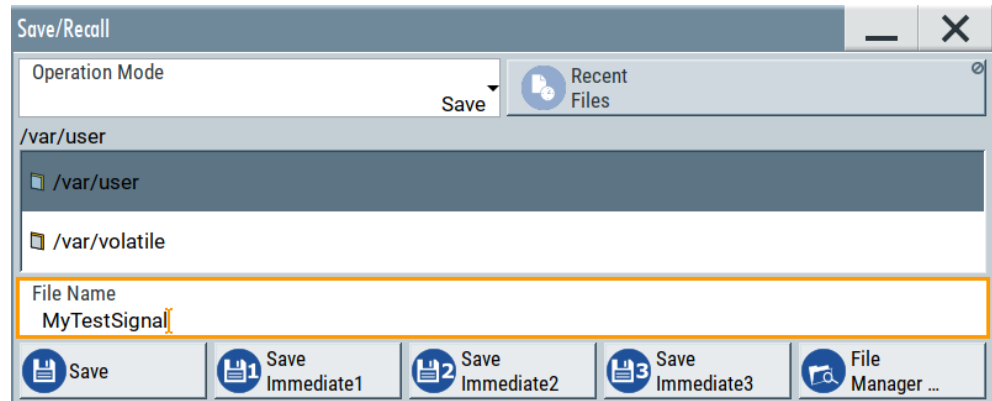

#### To access the dialog for saving and loading the settings of a firmware option

- In the general dialog of the corresponding digital standard, select the "Save" or "Recall" function.  
For example, select "Block Diagram > Baseband > EUTRA/LTE > General > Save".

The name of the dialog is context-sensitive and differs depending on the particular digital standard. The provided functions are similar.

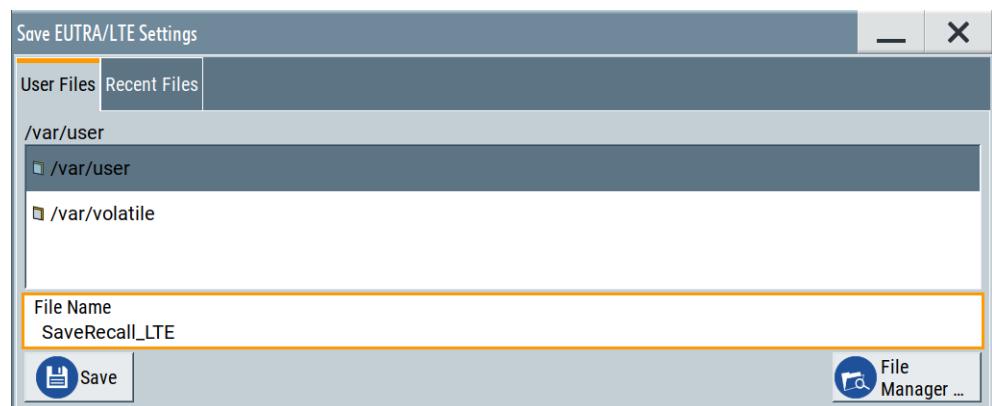

#### Settings:

Operation Mode.....	520
Directory, File List and Filename.....	520
Recent files.....	520
Show SCPI List.....	521
SCPI List.....	521



Save.....	521
Save Immediate x.....	521
Exclude Frequency.....	521
Exclude Level.....	521
Recall.....	521
Recall Immediate x.....	522
File Manager.....	522

### Operation Mode

Accesses the settings for storing ("Save") and loading ("Recall") of the instrument settings. Also, you can import SCPI-Files ("SCPI-Import") or export SCPI files ("SCPI-Export").

See [Chapter 10.6, "Exporting and importing remote command lists"](#), on page 528.

### Directory, File List and Filename

#### Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions ["New"](#), ["Select"](#), [Save](#), and [Recent files](#).
- To access the general data list editor, use the ["Edit"](#) button (see also [Chapter 7.10.7, "List editor"](#), on page 354).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 10.8, "Using the file manager"](#), on page 529).

Remote command:

To list all files in a directory:

[:MMEMory:CDIRectory](#) on page 710

[:MMEMory:CATalog?](#) on page 709

Refer to the description of firmware options for the syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:CATalog](#)

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 937

To list files with user data:

[\[:SOURce<hw>\]:BB:DM:DLISt:CATalog?](#) on page 842

[\[:SOURce<hw>\]:BB:DM:CLISt:CATalog?](#) on page 842

### Recent files

Displays the files last used.



**Show SCPI List**

Opens the "SCPI List", which lists the current settings of the R&S SMBV100B as SCPI commands.

The R&S SMBV100B provides this function for [Operation Mode > SCPI-Export](#).

**SCPI List**

Contains a list of all SCPI commands corresponding to the current instrument settings.

See also ["How to create a SCPI list with the current instrument settings in one step"](#) on page 683

**Save**

Saves the current instrument settings or the settings belonging to a digital standard under the defined filename.

Remote command:

[:MMEMory:STORe:STATe](#) on page 716

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI commands:

```
[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:STORe
[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:DELeTe
```

**Save Immediate x**

Stores the current instrument setting in one of the intermediate memories.

These instrument settings are retained until a different instrument setting is stored in the intermediate memory. When the instrument is switched off, the contents of the intermediate memories are retained.

Remote command:

[\\*SAV](#) on page 701

**Exclude Frequency**

The current frequency is retained when a stored instrument setting is loaded.

Remote command:

[\[ :SOURce<hw> \] :FREQuency \[ :CW|FIXed \] :RCL](#) on page 947

**Exclude Level**

The current level is retained when a stored instrument setting is loaded.

Remote command:

[\[ :SOURce<hw> \] :POWEr \[ :LEVel \] \[ :IMMediate \] :RCL](#) on page 1009

**Recall**

Restores the selected configuration.

During recall, the instrument considers all related settings, for example sweeps in active state or lists. An error message indicates the settings which cannot be implemented.



Remote command:

[:MMEMory:LOAD:STATe](#) on page 714

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command:

`[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:LOAD`

#### Recall Immediate x

Loads the selected configuration from one of the intermediate memories. A message appears if no instrument configuration is stored in this memory.

Remote command:

[\\*RCL](#) on page 700

#### File Manager

Accesses the "File Manager" dialog, see [Chapter 10.8, "Using the file manager"](#), on page 529.

## 10.4.2 How to save and recall instrument settings

Instrument settings can be saved to a file and loaded again later, so that you can repeat the tests with the same settings.

#### To access and recall instrument setups quickly

- Assign the appropriate action to the [**★** (User)] key.  
See [Chapter 11.4.4, "How to assign actions to the \[\*\*★\*\* \(User\)\] key"](#), on page 571.

#### To save and recall instrument settings

1. Select Save/Rcl > "Operation Mode > Save".
2. Select "Save Immediate 1".  
The instrument saves its settings in the intermediate memory 1. The filename and the storage location cannot be changed.
3. Adapt the instrument settings as required. Select "Save Immediate 2"
4. To restore the settings, select the "Operation Mode > Recall"
5. Select "Recall Immediate 1"  
The instrument is restored to the previous state.
6. Select "Recall Immediate 2" to switch to the settings saved in the second file.

#### To save complete instrument settings

1. Select Save/Rcl > "Operation Mode > Save".
2. In the file selection dialog, select a filename and storage location for the settings file.



3. Select "Save".

A file with the defined name and path and the extension \*.savrc1.txt is created.

#### To restore instrument's configuration

Save the configuration as described in ["To save complete instrument settings"](#) on page 522.

1. To restore settings, select Save/Rcl > "Operation Mode > Recall".
2. To retain the current frequency and level settings, enable "Save/Recall > Exclude Frequency/Level".
3. In the file selection dialog, select the filename and storage location of the settings file.

The settings are restored, but the frequency and level settings are retained; you can repeat the signal generation with the same settings.

See also [Chapter 10.2.3, "How to recall user settings automatically after preset"](#), on page 515.

### 10.4.3 How to recall the settings of a firmware option

Some test setups, e.g. for MIMO tests, require that two or more instruments generate baseband signal with similar settings. One easy way to speed up the configuration is to use the dedicated save/recall function to transfer the configuration data from one instrument to the other.

#### To use the "Save/Recall" function to transfer settings related to a digital standard to another instrument

1. In the first instrument, select "Baseband > Digital Standard, e.g. 3GPP FDD".  
Adjust the settings as required.
2. In the "3GPP FDD > General" tab, select "Save".  
In the file selection dialog, select a filename and storage location for the settings file.  
A file with the defined name and path and a predefined extension (\*.3g) is created.
3. Connect both instrument to a LAN.  
Alternatively, use a USB flash drive to transfer the created \*.3g file to the second instrument.
4. In the second instrument, select "Baseband > 3GPP FDD > General > Recall" to load the saved file.



5. Navigate in the file selection dialog. Select the filename and storage location of the settings file.

The settings are loaded in the second instrument. If the corresponding settings are left unchanged, the second instrument generates a signal with identical baseband settings.

## 10.5 Accessing files with user data

By the calculation of signals according to the different digital standards or by the generation of custom digitally modulated signals, the R&S SMBV100B uses the data from different data sources (see also [Chapter 4.4.1.1, "Data, clock and control signals and sources in the baseband"](#), on page 86). To simulate the signal of one UE for instance, the instrument modulates and codes the provided data for each channel. It further processes the signal as described in the corresponding standard.

Whenever a data list file is enabled as a data source, the instrument provides direct access to the standard "File Select" function. This function enables you to select, create and edit the data list files.

### 10.5.1 File select settings


The "File Select" dialog opens automatically each time you select a data list file as data source or you select a control list.

#### To access a loadable data list file

1. Select the "Data List Name" in the individual dialog.  
For "Baseband > 3GPP FDD > Base Stations > BS1 > Channel Table > P-CCPCH > Data = Data List", for example, select "DList Patt = None".

A file select dialog for loading, creating and modifying a file opens.




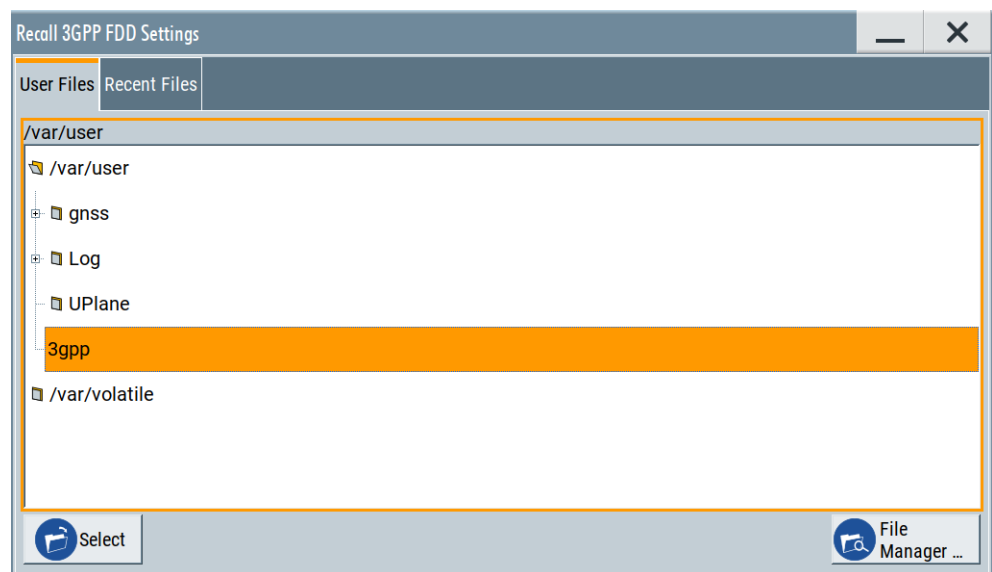

**Tip:** The name of the dialog is context-sensitive and differs depending on the particular function this dialog is from. However, the provided functions are similar.

2. To load an existing file:  
Navigate through the file system.  
Select the file and confirm with "Select".
3. To create a file, for example if there is no data list file specified:  
Navigate through the file system.  
Select "New" and specify the filename.  
A new empty file is created and saved in the selected folder.
4. To edit an existing or newly created file:  
Navigate through the file system.  
Select the file and select "Edit".  
The standard "Data List Editor" dialog opens  
See [Chapter 4.5.3.7, "Data list editor"](#), on page 132.



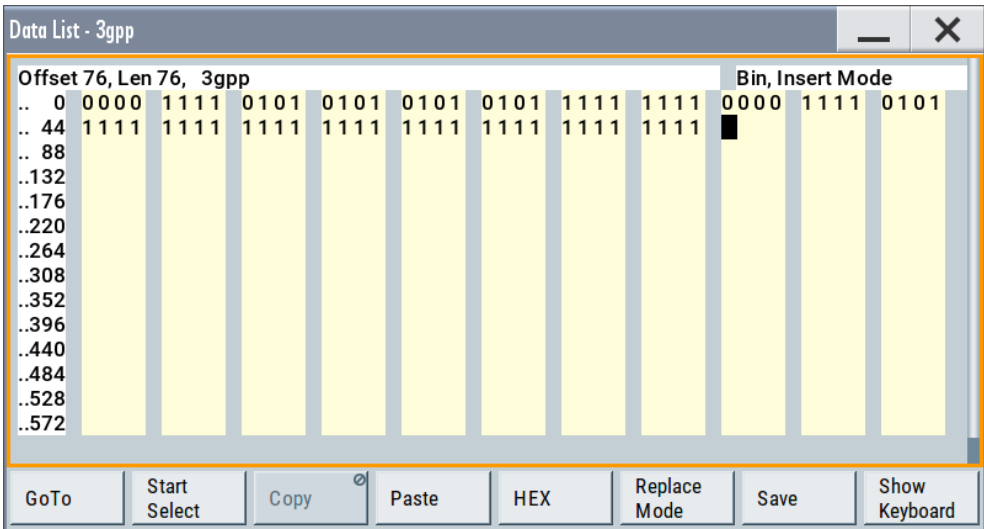

5. Edit the file content.  
Confirm with "Save".

Settings:

Directory, File List and Filename.....	526
Functions for handling of data lists.....	527
Functions for handling of control lists.....	527
Recent files.....	527
File Manager.....	527

Directory, File List and Filename

Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions "New", "Select", Save, and Recent files.
- To access the general data list editor, use the "Edit" button (see also Chapter 7.10.7, "List editor", on page 354).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see Chapter 10.8, "Using the file manager", on page 529).

Remote command:

To list all files in a directory:

:MMEMory:CDIRectory on page 710

:MMEMory:CATalog? on page 709



Refer to the description of firmware options for the syntax of the corresponding SCPI command:

`[ :SOURce<hw> ] :BB:<Digital Standard> :SETTing:CATalog`

[\[ :SOURce \] :CORRection:CSET:CATalog?](#) on page 937

To list files with user data:

[\[ :SOURce<hw> \] :BB:DM:DLISt:CATalog?](#) on page 842

[\[ :SOURce<hw> \] :BB:DM:CLISt:CATalog?](#) on page 842

### Functions for handling of data lists

Provided are the following standard functions for file handling:

"Select"	<p>Select and load the file.</p> <p>Remote command:  <a href="#">[ :SOURce&lt;hw&gt; ] :BB:DM:DLISt:SElect</a> on page 842</p> <p>Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command:  <code>[ :SOURce&lt;hw&gt; ] :BB:&lt;Digital Standard&gt; :...:DATA DLISt</code>  <code>[ :SOURce&lt;hw&gt; ] :BB:&lt;Digital Standard&gt; :...:DSElect</code></p>
"New"	<p>Creates file with the specified "Filename".</p> <p>To confirm, select "OK"; use "Cancel" to undo the operation.</p> <p>To edit the file content, select "File Select &gt; Edit".</p>
"Edit"	<p>Accesses the "Data List Editor" and loads the selected file for editing</p> <p>See <a href="#">Chapter 4.5.3.7, "Data list editor"</a>, on page 132.</p>

### Functions for handling of control lists

Provided are the following standard functions for file handling:

"Select"	<p>Select and load the file.</p> <p>Remote command:  <a href="#">[ :SOURce&lt;hw&gt; ] :BB:DM:CLISt:SElect</a> on page 842</p>
"New"	<p>Creates file with the specified name. To edit the file content, select "File Select &gt; Edit".</p>
"Edit"	<p>Access the "Control List Editor" and loads the selected file for editing, see <a href="#">Control and marker lists editor</a>.</p>

### Recent files

Displays the files last used.

### File Manager

Accesses the "File Manager" dialog, see [Chapter 10.8, "Using the file manager"](#), on page 529.

## 10.5.2 How to create and access data and control lists

The general principle for accessing files with user data is described in ["To access a loadable data list file"](#) on page 524. Detailed and further information on how to create



and access files with user data like data lists and control lists is provided in the following sections:

- [Chapter 4.5.4.2, "How to create and assign a data list"](#), on page 140  
Overview of the possible ways and detailed description on how to create data lists.
- [Chapter 4.5.4.1, "How to create and assign a control list"](#), on page 138  
Overview of the possible ways and detailed description on how to create control lists.
- [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705  
Information on accessing files in a remote environment

## 10.6 Exporting and importing remote command lists

To set specific instrument settings or perform tasks automatically, you can create scripts or import scripts that contain the settings in the form of remote control command sequences.

The R&S SMBV100B also offers a SCPI macro recorder with code generator that is used to record manual settings and create an executable script, see [Chapter 12.13.4, "How to record / create SCPI lists"](#), on page 681.

Completed scripts are saved in files and possibly converted to different formats, depending on the used language of the source code.

The R&S SMBV100B supports the following commonly used languages:

- Plain SCPI: \*.txt
- MATLAB: \*.m
- NICVI: \*.c
- Python: \*.py

It is also possible to convert the SCPI command list to a user-specific language, see [Chapter 12.13.5, "How to convert and save SCPI lists"](#), on page 685.

## 10.7 Loading, importing and exporting lists

The R&S SMBV100B provides built-in editors for creating list files, for example for the list mode or lists with user correction data. You can also create or evaluate them with an external application. The instrument provides interfaces with the following functionality:

- Import and export list files in a standard ASCII format file
- Load files with modulation and control information
- Load of internally or externally generated waveform file

Lists are saved and loaded in the corresponding dialogs. For example, the user correction data list is created and saved in the "User Correction" dialog.



Waveform files are created with the signal generation software R&S WinIQSIM2 or in the dialogs of some of the digital standards.

For more information, refer to:

- [Chapter 10.5.2, "How to create and access data and control lists"](#), on page 527
- ["Import/export list files"](#) on page 379

## 10.8 Using the file manager

The "File Manager" is a tool similar to a standard Windows Explorer. It helps you manage mass storage media and files saved on the R&S SMBV100B.

You can perform the following tasks:


- Copying multiple files from disk to other media  
See [Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535
- Copying files into another directory  
See [Cut, Copy&Paste and Delete](#)
- Renaming and deleting files
- Creating directories  
See [Create New Directory](#)
- Mapping shared network folders  
See [Chapter 10.8.4, "How to map a network folder"](#), on page 533
- Displaying saved files  
See [Chapter 10.8.3, "How to display all saved files"](#), on page 533

Access:

- Select Save/Rcl > "File Manager".



**Tip:** Each "Save/Recall" dialog and each "File Select" dialog provides a quick access to the "File Manager", i.e. whenever you select data lists or files with user data.

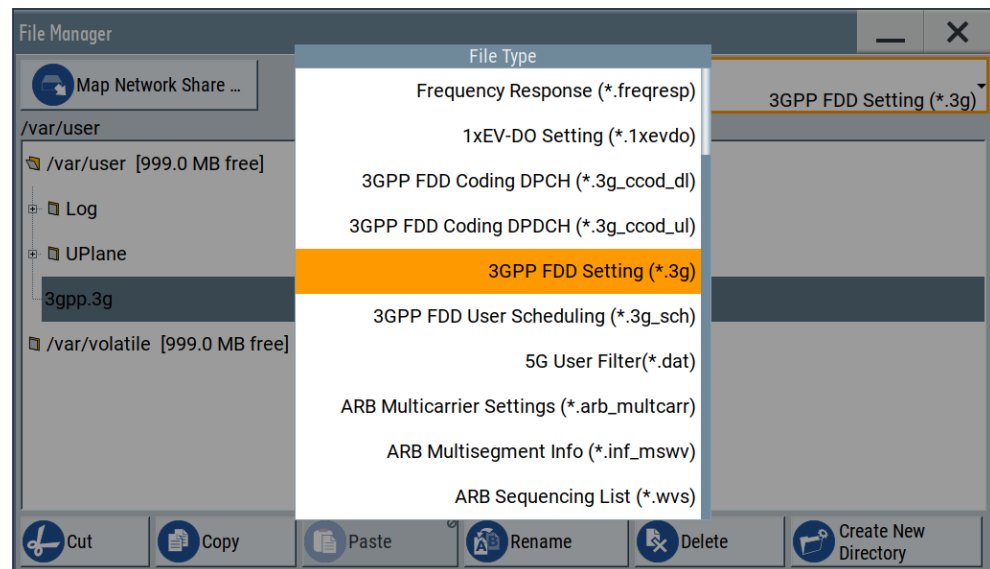

The "File Manager" dialog provides all standard functions required for file management. It displays the contents of the selected folder on the R&S SMBV100B and provides functions to rename, delete, copy, or move individual files.

### 10.8.1 File manager settings

Access:

- Select Save/Rcl > "File Manager".

**Settings:**

Map Network Share.....	530
File Type.....	530
Directory and Filename.....	531
Cut, Copy&Paste and Delete.....	531
Rename.....	531
Create New Directory.....	531

#### Map Network Share

Accesses the [Map network share settings](#) dialog where you can map one or more network folders.

See also [Chapter 10.8.4, "How to map a network folder"](#), on page 533.

#### File Type

Selects the file type to be listed. If a file type with a specific file extension is selected, only files with this extension are listed.



See [Chapter A.2, "Extensions for user files"](#), on page 1114 for an overview of the supported file extensions.

### Directory and Filename

Selects the directory in which the file to be deleted or copied is located. The dialog lists all files in this directory. Selected files are highlighted. The path is indicated above the directory tree.

Unlike the "Save/Recall" and "File Select" dialogs, the "File Manager" displays the full filenames including extensions.

Remote command:

[:MMEMory:CDIRectory](#) on page 710

### Cut, Copy&Paste and Delete

Standard file management functions.

Before a file is deleted, you have to confirm the delete operation.

Remote command:

[:MMEMory:DELeTe](#) on page 714

[:MMEMory:COpy](#) on page 710

### Rename

Renames the selected file or directory.

Remote command:

[:MMEMory:MOVE](#) on page 715

### Create New Directory

Creates a folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[:MMEMory:MDIRectory](#) on page 714

## 10.8.2 Map network share settings


Access:

- Select Save/Rcl > "File Manager > Map Network Share".

The "Map Network Share" dialog provides settings that are similar to the standard Windows Explorer function "Map network drive". These settings help you to create up to 10 "shortcuts" to shared folders or computers in the network.

The dialog displays a list of current mapped network folders. The directory tree of the "File Manager", "Save/Recall", and "File Select" dialogs indicate a mapped network folder as /shares/<"Local Folder">.



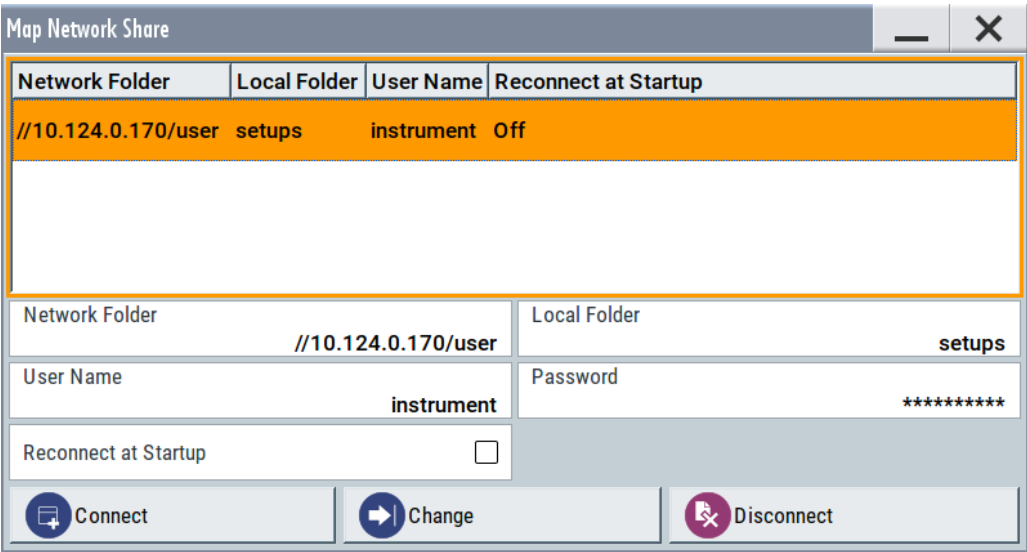

See also [Chapter 10.8.4, "How to map a network folder"](#), on page 533.

**Settings:**

<a href="#">Network Folder</a> .....	532
<a href="#">Local Folder</a> .....	532
<a href="#">User Name</a> .....	532
<a href="#">Password</a> .....	532
<a href="#">Reconnect at Startup</a> .....	532
<a href="#">Connect</a> .....	533
<a href="#">Change</a> .....	533
<a href="#">Disconnect</a> .....	533

**Network Folder**

Enter the path of the folder or computer, e.g. `//<IP Address>/user` or `//<server name>/user`.

**Local Folder**

Enter a letter or an alias name to describe the folder.

In the directory tree, a mapped network folder is indicated as `/shares/`  
`<"Local Folder">`.

**User Name**

Enter a user name of a user that has the permission to access the selected network folder.

**Password**

Enter the password of the selected user.

**Reconnect at Startup**

Enables reconnecting every time you start up the instrument.



**Connect**

Triggers the instrument to prove the credential and to map (i.e. connect) the selected network folder or computer to the instrument.

You can map up to 10 network folders.

**Change**

Applies the changes.

**Disconnect**

Disconnects the network drive.

### 10.8.3 How to display all saved files

**To display all files on the internal memory**

1. Select Save/Rcl > "File Manager".
2. Navigate to `/var/user/`.

**To display all files on a connected USB flash drive**

1. Select Save/Rcl > "File Manager".
2. Navigate to `/usb/`.

**To display all files in the volatile memory**

1. Select Save/Rcl > "File Manager".
2. Navigate to `/var/volatile/`.

### 10.8.4 How to map a network folder

Possibly you would like to transfer instrument or user settings to another R&S SMBV100B, distribute waveform files to several instruments or you have to access frequently the same network drive. In these cases, on a R&S SMBV100B connected to a LAN you can create a shortcut to this network folder or this computer.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.


To map a network folder, proceed as follows:

1. On the computer or the network folder you want to map, enable remote access.  
You can specify a list of users allowed for remote access.  
The remote access settings depend on the operating system the remote computer is using. For step-by-step instructions, refer to the documentation of the particular operating system.
2. On the R&S SMBV100B, [enable file transfer via SMB \(samba\)](#).



3. Select "System Config > Setup > Remote Access > Network".  
Select:
  - a) "Address Mode > Auto (DHCP)"
  - b) Check that the "DNS Suffix" and "DNS Server" are correct.
4. Press the [Save/Rcl] key.
5. In the "Save/Recall" dialog, select "File Manager > Map Network Share".
6. In the "Map Network Share" dialog, select:
  - a) In the "Network Folder" field, enter `//<IP Address>/user` or `//<Server Name>/user`.  
For example, `//10.124.0.170/user`.
  - b) In the "Local Folder" field, enter an alias name, e.g. `setups`.
  - c) Enter the "User Name" and "Password" of a user with a remote access permission to the selected network folder.
  - d) If necessary, enable "Reconnect at Startup".
  - e) Select "Connect".

The selected network folder is mapped to your instrument. The list of mapped network folders is updated.

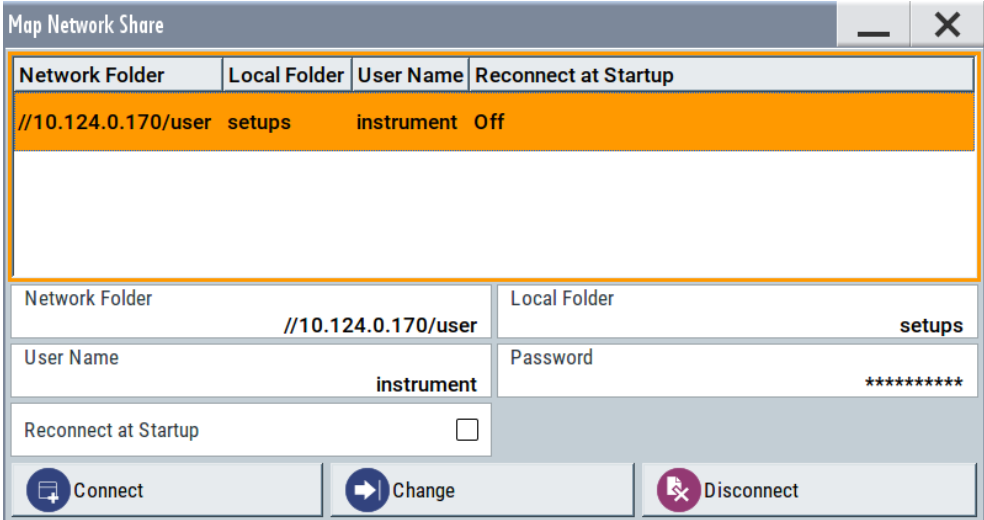

Network Folder	Local Folder	User Name	Reconnect at Startup
//10.124.0.170/user	setups	instrument	Off


  

Network Folder	//10.124.0.170/user	Local Folder	setups
User Name	instrument	Password	*****
Reconnect at Startup	<input type="checkbox"/>		

7. Close the "Map Network Share" dialog.

The navigation tree in the "File Manager" dialog displays the mapped network folder as `/shares/Setups`.



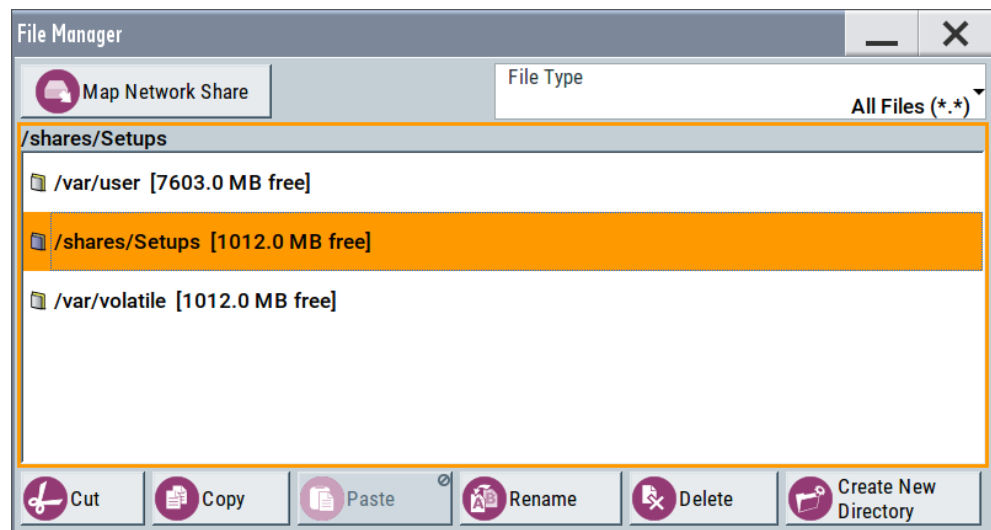

If the connection does not succeed, consider to check the following:

- Is the network folder or computer you try to map turned on?
- Is the network folder or computer enabled for remote access?
- Does the selected user name have the necessary permissions?

See also [Chapter 10.9.5, "Using a file server for test files exchange"](#), on page 540.

## 10.9 How to transfer files from and to the instrument

As explained in ["File handling"](#) on page 510, you access the file system of the R&S SMBV100B via one of the following ways:

- Via the built-in "File Manager"  
See [Chapter 10.8, "Using the file manager"](#), on page 529.
- On an instrument connected to a LAN:
  - Via one of the standard functions FTP or SMB (samba)  
See [Chapter 10.9.2, "Accessing the file system of the R&S SMBV100B over FTP"](#), on page 537 and  
[Chapter 10.9.3, "Accessing the R&S SMBV100B file system using SMB \(Samba\)"](#), on page 538
  - Via mapped network drives  
See [Chapter 10.8.4, "How to map a network folder"](#), on page 533.
- Via a connected USB storage device  
See [Chapter 10.9.4, "Using a USB storage device for file transfer"](#), on page 540

Mainly because of security reasons, the access to the file system of your R&S SMBV100B can be denied, because one or all these access methods are deliberately disabled. Access to the file system via LAN and/or USB requires that the corresponding service is enabled and a write access to the file system is enabled. Refer to



[Chapter 10.9.1, "Removing file system protection"](#), on page 536 for description of the required steps.

This section provides an introduction to the topic. For comprehensive information, refer to the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

• <a href="#">Removing file system protection</a> .....	536
• <a href="#">Accessing the file system of the R&amp;S SMBV100B over FTP</a> .....	537
• <a href="#">Accessing the R&amp;S SMBV100B file system using SMB (Samba)</a> .....	538
• <a href="#">Using a USB storage device for file transfer</a> .....	540
• <a href="#">Using a file server for test files exchange</a> .....	540

### 10.9.1 Removing file system protection

Before you try to access the file system via FTP, SMB (samba) or USB, fulfill the following:

- Disable write protection on the file system
- Enable the corresponding service or interface

#### To enable write permission on the file system

1. Select "System Config > Setup > Security > Security > General".
2. Select "Disk & Memory".
3. Enable "Volatile Mode".
4. Enter the "Security Password".  
The default password is 123456. For more information, see [Chapter 11.6, "Using the security settings"](#), on page 593.  
The R&S SMBV100B requests a reboot.
5. Confirm the request.  
The system reboots. The enabled settings are active.

#### To enable file transfer over FTP

1. Select "System Config > Setup > Security > Security > LAN Services".
2. In the "Common Services" tab, enable "LAN Interface"
3. Enable "FTP"
4. Enter the "Security Password".  
The default password is 123456. For more information, refer to [Chapter 11.6, "Using the security settings"](#), on page 593.
5. Select "Accept".

#### To enable file transfer over SMB (samba)

1. Select "System Config > Setup > Security > Security > LAN Services"



2. Enable "LAN Interface"
3. Select "Samba Services".
4. Enable the "SMB 1.0/2.0 Client".
5. Enable the "SMB 1.0/2.0 Server".
6. Enter the "Security Password".  
The default password is 123456. For more information, refer to [Chapter 11.6, "Using the security settings"](#), on page 593.
7. Select "Accept".

#### To enable file transfer over USB

1. Select "System Config > Setup > Security > Security > General"
2. Select "Disk & Memory".
3. Enable "USB Storage"
4. Enter the "Security Password".  
The default password is 123456. For more information, refer to [Chapter 11.6, "Using the security settings"](#), on page 593.
5. Select "Accept".

## 10.9.2 Accessing the file system of the R&S SMBV100B over FTP

If the R&S SMBV100B is connected to a LAN, you can use file transfer protocol (FTP) to access the file system and to transfer files from and to the instrument.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.

#### To access the file system over FTP

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `ftp://<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

**Tip:** The R&S SMBV100B indicates its IP address on the block diagram.

A log-on dialog opens and requests a password.

The default user name and password is *instrument*.

#### Tip:

##### Default password

The FTP and SAMBA file access use the user "instrument" with default password "instrument".




We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 11.6.4, "Password management"](#), on page 603.

5. Enter the password to access the `user` directory.

The `user` directory corresponds to the `/var/user/` directory of the instrument.

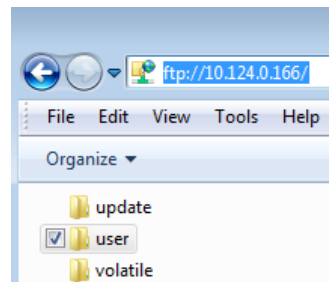


There, you can perform standard functions like creating directory, or saving files.

6. In the `user` directory, create a directory, e.g. `test ftp`.

7. Select Save/Rcl.

Open the `/var/user/` directory.

The dialog displays the `/var/user/test ftp` directory.

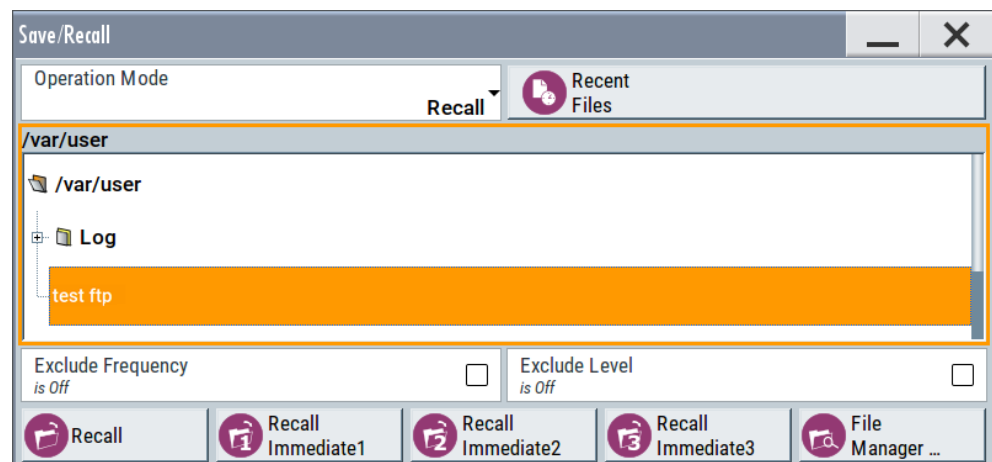

### 10.9.3 Accessing the R&S SMBV100B file system using SMB (Samba)

The SMB (Samba) protocol is an alternative way to access the file system of the instrument from a remote PC. This protocol works if both the instrument and the PC are connected to a LAN.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.




### To access the file system over SMB

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `\\<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

**Tip:** The R&S SMBV100B indicates its IP address on the block diagram.

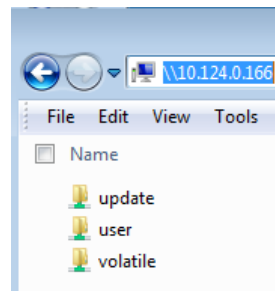

The `user` directory corresponds to the `/var/user/` directory of the instrument; the `volatile` directory - to the `/var/volatile` directory.

### To map the R&S SMBV100B as a network drive to the remote PC

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via SMB \(Samba\)](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.  
Open the "Map Network Drive" dialog.
  - a) Select a valid "Drive", e.g. *W*.
  - b) In the "Folder" field, enter `\\<"IP Address" of the Instrument>/user` or `\\<"Hostname" of the Instrument>/user`  
For example: `\\10.124.0.166/user` or `\\SMBV100B-102030/user`.

**Tip:** The R&S SMBV100B indicates its IP address on the screen.

- c) Select "Finish".

A log-on dialog opens and requests a user name and a password.

#### **Tip:**

#### **Default password**

The FTP and SAMBA file access use the user "instrument" with default password "instrument".


We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 11.6.4, "Password management"](#), on page 603.



4. Enter the user name and the password of your instrument.

The `/var/user/` directory of the instrument is mapped to and displayed as a network drive of the remote PC.

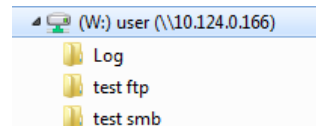

You can access the files in the `/var/user/` directory, perform standard function like creating directory, or saving files.

### 10.9.4 Using a USB storage device for file transfer

Alternatively to the file transfer possibility via LAN, you can use a USB storage device for direct file transfer from and to the instrument.

We recommend that you transfer files with user data (like lists or instrument setup files) to the instrument, rather than load and play them from a connected USB storage device.

#### To transfer a file with user data to the instrument

1. Connect a USB storage device, for example a USB memory stick to one of the USB interfaces of the instrument.

The R&S SMBV100B recognizes the connected USB storage device automatically.

2. [Enable file transfer via USB](#)
3. [Enable write permission on the file system](#)
4. Select Save/Rcl.

The dialog displays the `/var/user/` directory and the `/usb/` drive.

5. In the "Save/Recall" dialog, select "File Manager".
6. In the directory tree, navigate to the `/usb/` drive.  
Select the required file with user data.
7. Select "Copy".
8. In the directory tree, navigate to the `/var/user/` directory.  
Select "Paste".

The file with user data is transferred to the instrument.

### 10.9.5 Using a file server for test files exchange

You can use a central file storage location like a file server in your company network to save setup files, SCPI scripts, application programs, or waveform files on it. Usually,



you would like to distribute the files to several instruments. If the R&S SMBV100Bs are connected to a LAN, you can create a shortcut on the instruments to the file server.

**To access the file server**

1.

On each R&S SMBV100B, map the required directory of the file server to the instrument.  
Perform the steps described in [Chapter 10.8.4, "How to map a network folder"](#), on page 533.
2.

On each R&S SMBV100B, use the same alias name for the directory of the file server, i.e. enter the same "Local Folder" (in this example *Setups*).  
  
On any of the R&S SMBV100B, you access the file server directly from the "File Manager" and under the same name, e.g. `/shares/Setups`.  
An extra advantage in remote control is that the same application program would control the instruments.  
For example, use the remote control command `MMEMory:CDIRECTory "/shares/Setups"` to set the default directory for mass storage.

## 10.10 Creating screenshots of current settings

The save/recall function enables you to save current settings in a file. To document the most important settings for a performed signal generation, you can also save a hard-copy of the current display.


- [Hardcopy settings](#)..... 541
- [How to save a hardcopy of the display](#)..... 545

### 10.10.1 Hardcopy settings

Access:

- Select "System Config > Setup > User Interface > Hardcopy".



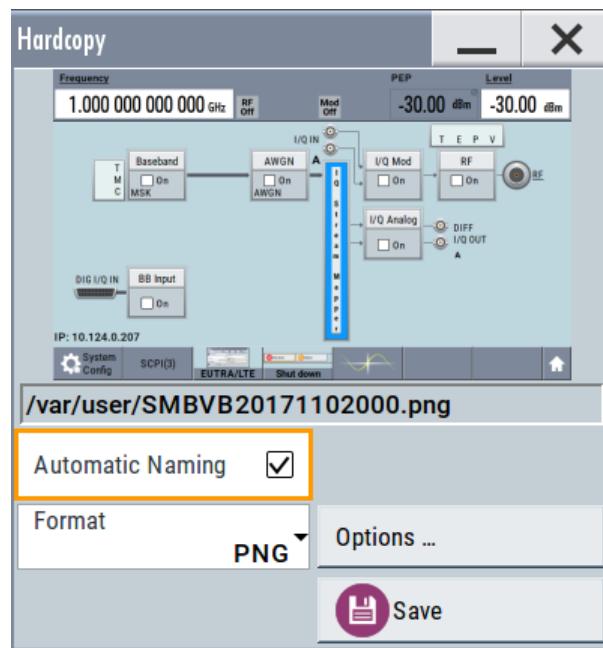

The remote commands required to define these settings are described in [Chapter 13.12, "HCOPY subsystem"](#), on page 738.

#### Settings:

Automatic Naming.....	542
File.....	542
Format.....	543
Options.....	543
Save.....	543
Hardcopy Options > Common.....	543
L Automatic Naming.....	543
L Format.....	543
L Region.....	543
Hardcopy Options > Automatic Naming.....	544
L Path.....	544
L Clear Path.....	544
L Prefix, Year, Month, Day.....	544
L Current Auto Number.....	545

#### Automatic Naming

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:STATE` on page 742

#### File...

In "Automatic Naming > Off" mode, accesses the standard file select dialog for selecting the filename and folder the hardcopy is stored in.



If you have enabled "Automatic Naming", the instrument displays the automatically generated filename.

Remote command:

[:HCOPY:FILE\[:NAME\]](#) on page 740

### Format

Selects the output file format, for example \*.bmp, \*.jpg\*.xpm and \*.png.

Remote command:

[:HCOPY:IMAGE:FORMat](#) on page 739

[:HCOPY:DEvice:LANGuage](#) on page 739

### Options...

Accesses [Hardcopy Options](#) dialog.

### Save

Saves a hardcopy of the current display as a file.


Remote command:

[:HCOPY\[:EXECute\]](#) on page 740

### Hardcopy Options > Common

Access: select "Hardcopy > Options... > Common".

With the provided settings, you can customize the file format and the syntax of the automatically assigned filename.

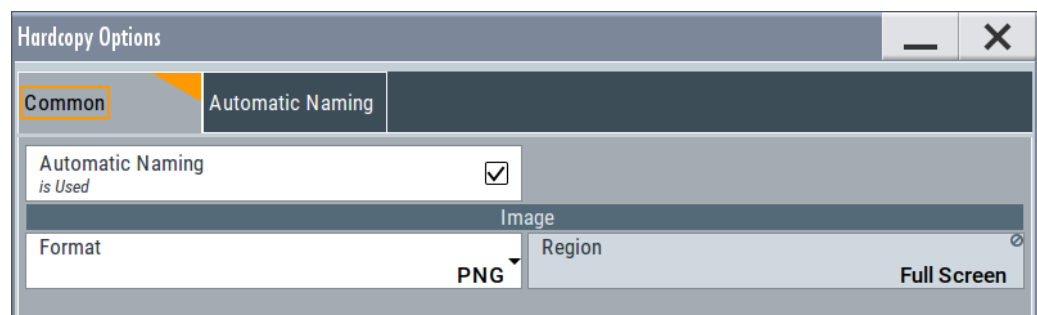

### Automatic Naming ← Hardcopy Options > Common

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:STATe](#) on page 742

### Format ← Hardcopy Options > Common

Selects the output file format, for example \*.bmp, \*.jpg\*.xpm and \*.png.

Remote command:

[:HCOPY:IMAGE:FORMat](#) on page 739

[:HCOPY:DEvice:LANGuage](#) on page 739

### Region ← Hardcopy Options > Common

Displays the snapshot area.



Remote command:

[:HCOPY:REGion](#) on page 740

### Hardcopy Options > Automatic Naming

Access: select "Hardcopy > Options... > Automatic Naming".

Hardcopy Options

Common Automatic Naming

Path ... /var/user

Delete All Image Files In Path Clear Path

Prefix ☒ <Instrument Name>

Year ☒ Month ☒ Day ☒

Current Auto Number 000

Resulting File Name

<InstrName>20180321000.png

Provided are the following settings:

#### Path... ← Hardcopy Options > Automatic Naming

Selects the directory.

**Note:** To select the destination path, specify also a filename. Otherwise an error message is displayed and selection is canceled.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:DIRectory](#) on page 741

#### Clear Path ← Hardcopy Options > Automatic Naming

Deletes all image files with extensions \*.bmp, \*.jpg, \*.png and \*.xmp in the directory set for automatic naming.

Before the command is executed, a warning message prompts you to confirm the deletion of the files.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:DIRectory:CLEar](#) on page 741

#### Prefix, Year, Month, Day ← Hardcopy Options > Automatic Naming

Determines the rules for "Automatic Naming".

Per default, the automatically generated filename is composed of:

<Path>/<Prefix><YYYY><MM><DD><Number>.<Format>, where Y, M and D mean year, month, Day; Number is the [Current Auto Number](#).

You can activate or deactivate each component separately.

The "Resulting filename" indicates the current filename syntax.



Remote command:

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX on page 743

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATE on page 743

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATE on page 742

:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATE on page 742

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATE on page 742

### Current Auto Number ← Hardcopy Options > Automatic Naming

Indicates the number which is used in the automatically generated filename.


**Note:** When initially switching on the instrument, the number is reset to the lowest possible value. Starting with number 0 the output directory is scanned for existing files. As long as files with the same name are existing, the number is increased by 1. The number is automatically set so that the resulting filename is unique within the selected path. The current number is not in the save/recall file but is temporarily stored within the database. At the following save operation, the number is increased.

Remote command:

:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBER? on page 742

## 10.10.2 How to save a hardcopy of the display

1. Select "System Config > Setup > User Interface > Hardcopy".

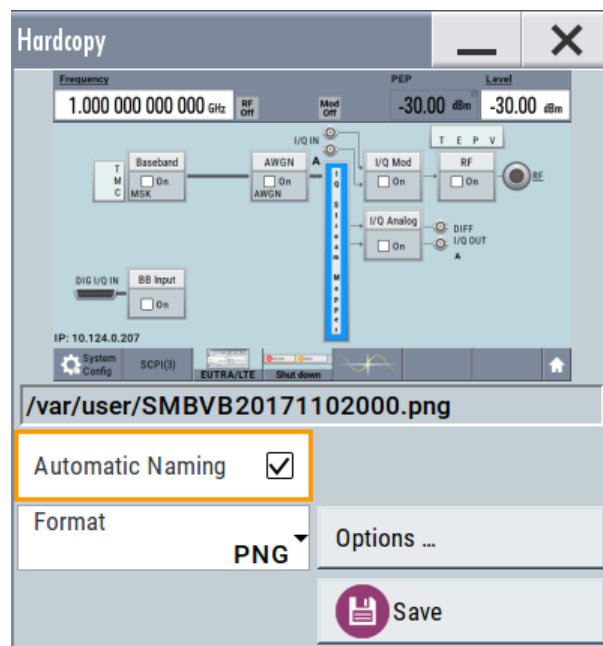

2. To define the output format, select "Format > JPG".
3. To enable the instrument to create output filenames, select "Automatic Naming > On".
4. Select "Options...".



5. In the "Hardcopy Options" dialog:
  - a) To change the default directory the file is saved in, select "Automatic Naming Settings > Path" and define a path and a filename. For example, select the default directory `/var/user`.
  - b) If necessary, disable or change some of the parameters in the "Automatic Naming Settings".
  - c) Close the "Hardcopy Options" dialog.
6. In the "Hardcopy" dialog, select "Save".

The instrument saves a hardcopy of the current instrument display as a `*.jpg` file. The filename is automatically created.
7. To print the hardcopy, connect the instrument to a LAN and:
  - a) Transfer the file to a remote computer as described in [Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535.
  - b) On the remote computer, navigate through the file system.
  - c) Print the selected file.

For more information, refer to the online help of the operating system.



# 11 General instrument functions

The general instrument functions include basic instrument settings, regardless of the selected operating mode and measurement. Some of these settings like screen display and peripherals are initially configured at the setup of the instrument, according to personal preferences and requirements. However, you can individually adjust the settings at any time, for example, for specific applications.

The following special functions help you in service and basic system configuration:

- [Chapter 11.1, "Customizing the user interface"](#), on page 547  
Allows you to adjust the display and keyboard language settings.
- [Chapter 11.2, "Configuring global connectors"](#), on page 553  
Allows you to map internal or external signals to the multipurpose connectors.
- [Chapter 11.3, "Checking parameters and dependencies"](#), on page 564  
Allows you to check for interdependencies between parameters and settings.
- [Chapter 11.4, "Organizing frequently used settings as favorites"](#), on page 566  
Enables you to group user-defined settings in a favorites list or to assign actions to the [★ (User)] as quick access for later retrieval.
- [Chapter 11.5, "Managing licenses and license keys"](#), on page 573  
If you have purchased an additional option for the R&S SMBV100B, you can enable it using a license key.
- [Chapter 10.2, "Restoring the \(default\) instrument configuration"](#), on page 511  
At any time, you can restore a default configuration to start a measurement at a defined instrument state, or set the instrument to factory preset.
- [Chapter 16.3, "Performing maintenance tasks"](#), on page 1090  
Special functions like calibration routines and selftests put your instrument to an initial state.
- [Chapter 11.6, "Using the security settings"](#), on page 593  
Special security and protection functions protect your instrument from unauthorized use or activate specific test routines.

## 11.1 Customizing the user interface

The R&S SMBV100B provides basic alignments of instrument settings regarding the user interface, that means the touch panel (screen), the appearance of the displayed dialogs and graphics, and an external keyboard.

### Dialog snapshots

The R&S SMBV100B enables you to disable the snapshots of dialogs in the taskbar and replaces dialogs with test. For information on how to deactivate the snapshot preview, see [Chapter 11.1.2, "Appearance settings"](#), on page 550.



### Start / stop display update

The operating system of the R&S SMBV100B refreshes the displayed settings by default in almost real-time, to keep the display updated with the internally used values. However, you can turn off this function to reduce settling times when the instrument is remote controlled.



We recommend that you switch off the display update for optimum sweep performance with short dwell times and for fast settling times.

Consider that in this case the displayed values can differ from the operated values.

In detail described in the following paragraphs, you can:

- Set display and keyboard language, see [Chapter 11.1.1, "Display and keyboard settings"](#), on page 548
- Customize the GUI appearance, see:
  - [Dialog snapshots](#)
  - [Chapter 11.1.2, "Appearance settings"](#), on page 550
- Set date and time for the system clock, see [Chapter 16.3.1, "Date and time"](#), on page 1091
- Configure and activate a [Screen Saver](#)
- Deactivate display update to improve performance, see [Chapter 11.1.3, "Display update settings"](#), on page 550
- Determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMBV100B, see [Chapter 11.1.4, "Defining the RF signal state on power on"](#), on page 551.

## 11.1.1 Display and keyboard settings


Access:

1. Select "System Config > Setup > User Interface > Display/Keyboard > Display".

Display	USB Keyboard			✕
Screen Saver <i>is Active</i>		<input checked="" type="checkbox"/>	Wait time 10 Min	
Brightness				
Display		14	RF Hardkey	14

2. Select "Display/Keyboard > USB Keyboard".



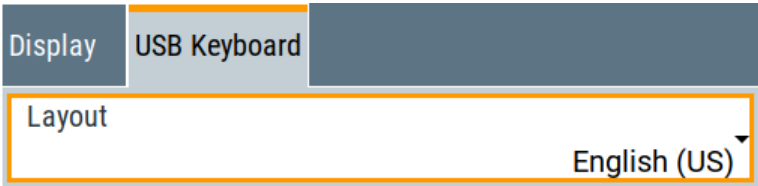

In the "Display/Keyboard" dialog, you can change regional and language options for the GUI and an external keyboard, and define the screen saver settings.

The remote commands required to configure the display and keyboard are described in [Chapter 13.10, "DISPlay subsystem"](#), on page 732 and [Chapter 13.13, "KBOard subsystem"](#), on page 743.

<a href="#">Screen Saver</a> .....	549
<a href="#">Wait Time</a> .....	549
<a href="#">Display</a> .....	549
<a href="#">RF Hardkey</a> .....	549
<a href="#">USB Keyboard &gt; Layout</a> .....	550

**Screen Saver**

Activates the screensaver.

If activated, the display including backlight is switched off after the selected [Wait Time](#) elapses and if no entries via touch panel, front panel, external mouse, or external keyboard are made

Remote command:  
[:DISPlay:PSAVe\[:STATe\]](#) on page 733

**Wait Time**

Enters the idle time that must elapse before the display lamp is shut off when no entries are made.

Remote command:  
[:DISPlay:PSAVe:HOLDoff](#) on page 733

**Display**

Adjusts the brightness of the display.

Increase the value to turn up the display brightness.

Remote command:  
[:DISPlay:BRIGhtness](#) on page 733

**RF Hardkey**

Adjusts the brightness of the [RF on/off] key.

Increase the value to change the contrast between the key and the front panel background color.

Remote command:  
[:DISPlay:BUtTon:BRIGhtness](#) on page 734



**USB Keyboard > Layout**

Selects the language of an externally connected keyboard via USB. The function assigns the corresponding keys automatically.


Remote command:

[:KBOard:LAYout](#) on page 743

**11.1.2 Appearance settings**

Access:

- Select "System Config > Setup > User Interface > Appearance".

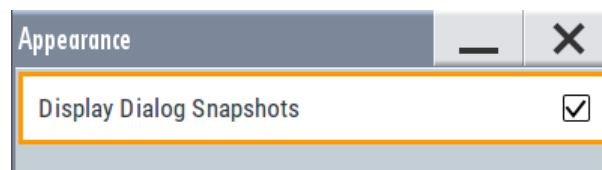

In this dialog, you can set inactive dialog opaque and enable the display of dialog snapshots.

[Display Dialog Snapshots](#)..... 550


**Display Dialog Snapshots**

Displays thumbnails of open dialogs in the task bar.

**11.1.3 Display update settings**

Access:

- Select "System Config > Setup > User Interface > Start/Stop Display Update".

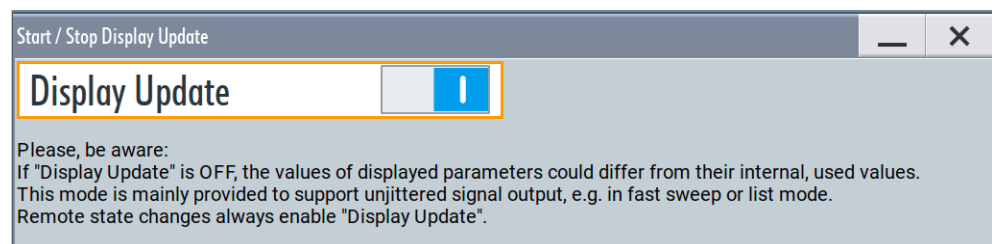

This dialog enables you, to deactivate updating the display.

The remote command to switch off the display update is described in [Chapter 13.10, "DISPlay subsystem"](#), on page 732.

**Display Update is**

Disables the automatic refreshing of the displayed values.



Remote command:

`:DISPlay:UPDate[:STATe]` on page 734


### 11.1.4 Defining the RF signal state on power on

As additional functions for the level settings, you can determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMBV100B.

#### Power-On/EMF settings

Access:

- Select "RF" > "RF Level" > "Power-On / EMF".

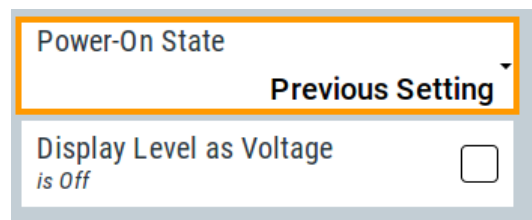

The "Power-On/EMF" dialog contains all settings for configuring the power-on behavior and the level display.

#### Settings:

<a href="#">Power-On State</a> .....	551
<a href="#">Display Level as Voltage of EMF</a> .....	551

#### Power-On State

Determines the RF signal output state when the instrument is switched on.

You can disable the RF output signal in general, or start it in the same state as it had been when it was switched off.

Remote command:

`:OUTPut<hw>[:STATe]:PON` on page 744

#### Display Level as Voltage of EMF

Activates display of the signal level as voltage of the EMF (no-load voltage).

If disabled, the level is displayed as a voltage over a 50 Ohm load.

#### Note:

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce<hw>]:POWer:EMF:STATe` on page 1001



## 11.1.5 How to set the initial instrument settings


This section describes how to set up the R&S SMBV100B initially.

### 11.1.5.1 Setting the keyboard language

You can select the language of the external keyboard connected to the instrument.

#### To adjust the keyboard settings

1. Press the [Setup] key.
2. Select "User Interface > Keyboard".

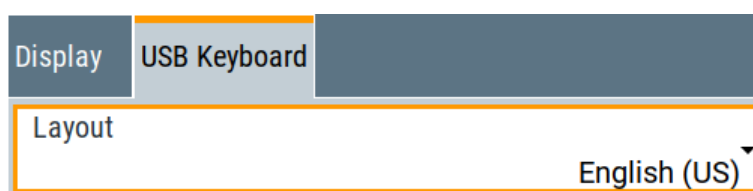

3. Select the "Layout".


The dialog closes and the changes take effect immediately.

### 11.1.5.2 Setting the screen saver

You can enable a screen saver that automatically turns off the display after a user-defined period of time. The screen saver is activated if no settings are made on the touch screen, or via keys or the rotary knob during the selected wait time.

#### To activate the screen saver

1. Press the [Setup] key.
2. Select "User Interface > Display"
3. Activate the "Screen Saver".

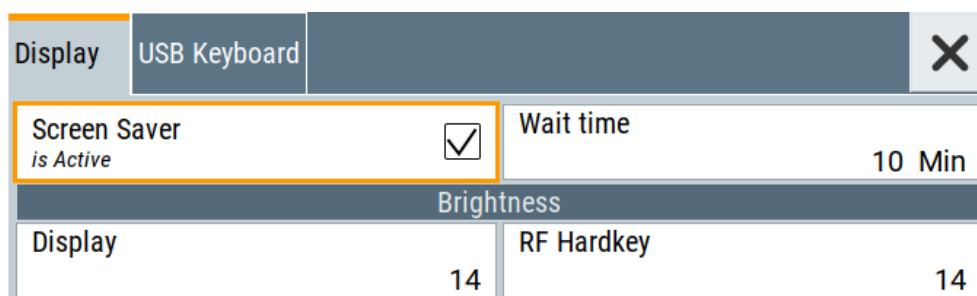

4. Define the "Wait Time" in minutes.

The instrument turns off the display after the defined period of time.

5. To reactivate the display, tap the screen or press any key on the front panel.



**To deactivate the screen saver**

1. Press the [Setup] key.
2. Select "User Interface > Display"
3. Disable the "Screen Saver" state.

**11.1.5.3 Adjusting appearance of the user interface**

You can disable the snapshot preview of dialog in the taskbar .

1. Press the [Setup] key.
2. Select "User Interface > Appearance".
3. If necessary, enable "Display Dialog Snapshots".

The changes take effect immediately.

## 11.2 Configuring global connectors

The R&S SMBV100B is equipped with multipurpose bi-directional connectors.

Grouped according to their impact on the baseband or on the RF signal, the same connectors are divided into:

- [Chapter 11.2.3, "Trigger marker clock settings"](#), on page 556
- [Chapter 11.2.4, "RF connectors settings"](#), on page 557

### 11.2.1 Required options

The R&S SMBV100B is always equipped with five "User" connectors.

Additional options are not required.

### 11.2.2 About global connectors

**Signal to connector mapping**

As described in [Chapter 4.4.1, "Basics on signals, modulation formats and filters"](#), on page 86, the R&S SMBV100B uses several internally generated and externally supplied signals.

To handle these signals, the R&S SMBV100B introduces the concept of signal to connector mapping. The available signals are not dedicated to a particular connector but can be mapped to one or more "User" connectors.



The signal mapping and the polarity, the trigger threshold, and the input impedance of the input connectors are configurable parameters. The connectors settings are grouped in the dialog: [Global connectors settings](#).



For required configuration steps, see ["To map the signal to a connector"](#) on page 563.

#### 11.2.2.1 Global connectors

The R&S SMBV100B is equipped with "User x" connectors which can be freely assigned a selection of signals and which can be configured as both inputs and outputs.

A common threshold and input impedance is effective for all trigger and clock signal inputs provided at the "User" connectors. The settings influence the custom digital modulations, the generation of waveforms or multicarrier signals, and all digital standards.

The R&S SMBV100B is also equipped with "Inst Trig" connector. The instrument trigger setting influences all sweeps and is effective in the list mode.

See [Chapter 7.10, "Varying the RF signal in list or sweep mode"](#), on page 321.

[Table 11-1](#) gives an overview of the signals that can be applied to and output at the User connector.

**Table 11-1: Mapping control signals to the User x connectors**

Connector	Direction	Assigned signal	Remark
"User x"	"Input"	"Global Trigger" "Global Clock" "Global Next Segment" "Baseband Sync In" "Data"	-
		"BER Data" "BER Clock" "BER Data Enable" "BER Restart"	Option: R&S SMBVB-K80
"User x"	"Output"	"Baseband Marker 1/2/3" "Baseband Sync Out" "Symbol Clock" "Lev Att" "Burst Gate" "Hop" "CW/Mod" "Triggered"	-



Connector	Direction	Assigned signal	Remark
		"BER TestGen Data" "BER TestGen Clock" "BER TestGen Data Enable" "BER TestGen Restart"	Option: R&S SMBVB-K80
"User 5"	"Output"	"Manual Trigger"	-

### 11.2.2.2 Trigger, marker, clock and RF connectors

The [Trigger marker clock settings](#) and [RF connectors settings](#) dialogs provide an overview of the current mapping of the logical signals to the corresponding connectors. The dialogs are summary representation of related settings, as configured with the [Global connectors settings](#) settings.

### 11.2.2.3 Status indicators

#### Connector status LEDs

A dedicated LED indicates the connector status:

- green: an input connector
- yellow: an output connector
- no light / gray: the connector is not active

#### T/M/C status LEDs




For quick overview of the source (internal/external) of the used trigger, marker and clock signals, the block diagram displays *T/M/C status LEDs* on the left side of the "Baseband" block.

If the baseband generator is active, a dedicated LED indicates the status:

- green: an external signal is used.
- yellow: the signal is available at the output connector.

#### T/E/L/P/V status LEDs



For quick overview of the source (internal/external) of the control signals, the block diagram displays *T/E/L/P/V status LEDs* on the top/bottom of the "RF" blocks.

If the RF block is active, a dedicated LED indicates the signal status:

- green: an external signal is used.
- yellow: the signal is available at the output connector.

The signal valid (V) and the pulse signal (P) indications are displayed if the corresponding function is enabled ("RF > On" and "Pulse Modulator > State > On").




### 11.2.3 Trigger marker clock settings

Access:

1. Perform one of the following:
  - In the "Block Diagram", select the [T/M/C status LEDs](#) on the left side of the "Baseband" blocks.
  - Select "Baseband > Trigger Marker Clock".

The "Trigger Marker Clock" gives an overview of the current mapping of the logical signals to the connectors, as configured in the [Global Connectors](#) dialog. Clicking the connector name directly accesses the related connector settings.

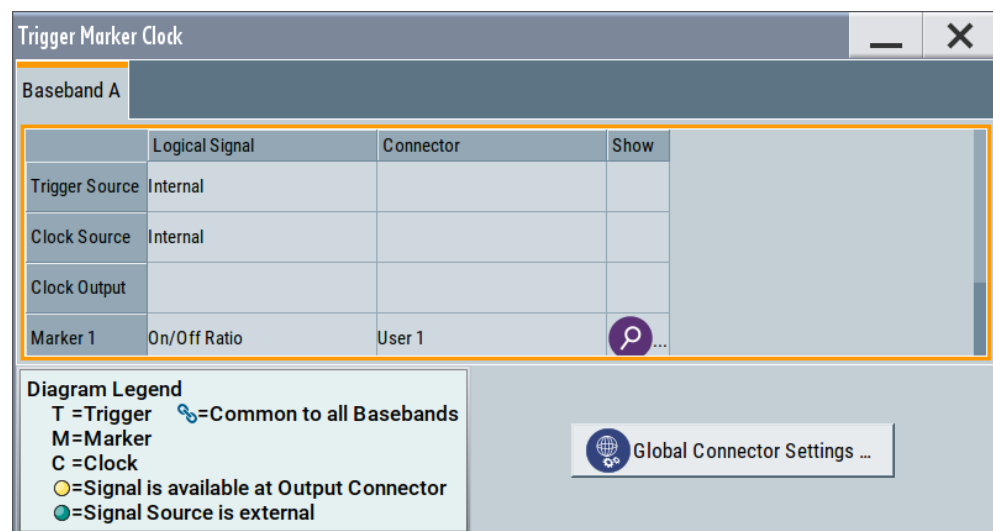


2. Use the built-in [Show Connector](#) function to display the physical location of the selected connector.

A blinking LED on the rear panel indicates the selected connector, too.





The eye icon  in the tab header indicates the location of the connector on the panel (front, rear or both).

### 11.2.3.1 Overview table

#### Logical Signal

Displays the logical signal, as configured in the "Trigger In", "Marker" or "Clock" tab of the corresponding digital standard, see for example [Chapter 4.4.2.1, "Trigger settings"](#), on page 108.

#### Connector

Displays the assigned connector.



#### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

### 11.2.3.2 Global connectors settings

Accesses a dialog to configure global connectors.

The button is available in the following dialogs or tabs:

- "Trigger / Marker / Clock" dialog that is accessible via the "TMC" block in the block diagram.
- "Trigger In", "Marker" and "Clock" tabs that are accessible via the "Baseband" block in the block diagram.



See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

## 11.2.4 RF connectors settings


Access:

1. Perform one of the following:
  - In the "RF" block, select "RF" > "RF Frequency" > "RF Connectors".
  - In the control signal block next to the "RF" block, select [T/E/L/P/V status LEDs](#).
  - Select "System Config" > "Setup" > "RF Connectors".




The "RF Connectors" dialog gives an overview of the mapping of the logical signals to the connectors; the displayed connectors depend on the installed options. The signal assignment to the dedicated RF connectors, for example LO In/Out or Inst Trig, is fixed.

Selecting a connector name accesses directly the related connector settings.

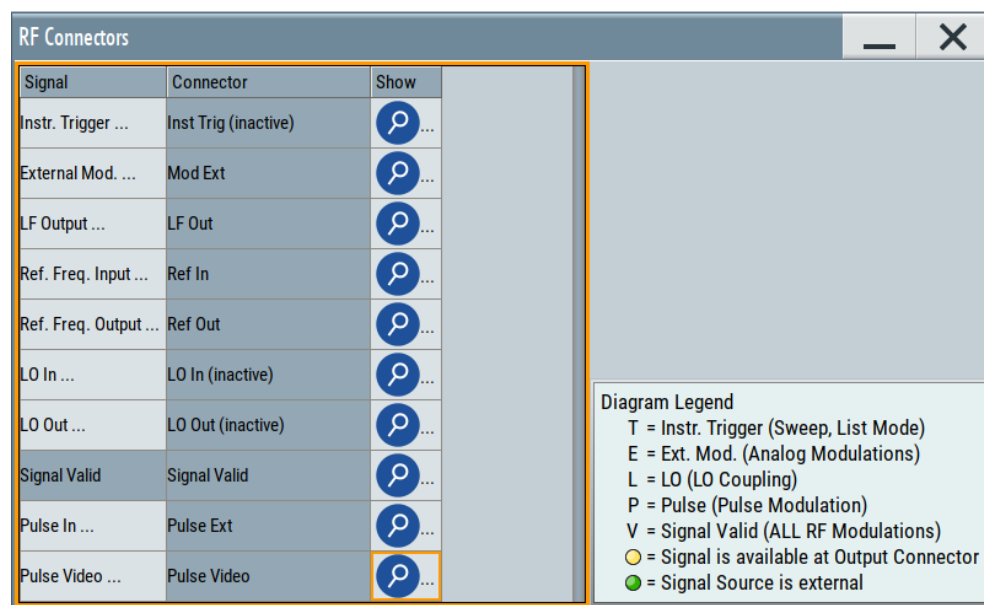

2. Select the "Signal" name to access the dialog with respective settings.
3. Use the built-in [Show Connector](#) function to display the physical location of the selected connector.



The eye icon  in the tab header indicates the panel (front, rear or both) the selected connector is located at.



**Settings:**

<a href="#">Signal</a> .....	559
<a href="#">Connector</a> .....	559
<a href="#">Show Connector</a> .....	559

**Signal**

Opens the dialog with the corresponding settings.

**Connector**

Displays the assigned connector.

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).



## 11.2.5 Global connectors settings

Access:

1. To access global connector settings via the signal control blocks of the block diagram, select the [T/M/C status LEDs](#).
2. In the opening dialogs, try one of the following:
  - Select "Connector" > "User x".
  - Select "Global Connectors".
3. To access global connector settings via the baseband block of the block diagram, select one of the following:
  - Select "Baseband" > "ARB"/"Custom Digital Modulation" > "Trigger In" > "Global Connectors".
  - Select the tabs "Trigger In", "Marker" or "Clock" of the corresponding digital standard.

The "Global Connectors" dialog provides settings to configure the signal to connector routing and the physical characteristics of the input connectors for trigger, clock and control signals.



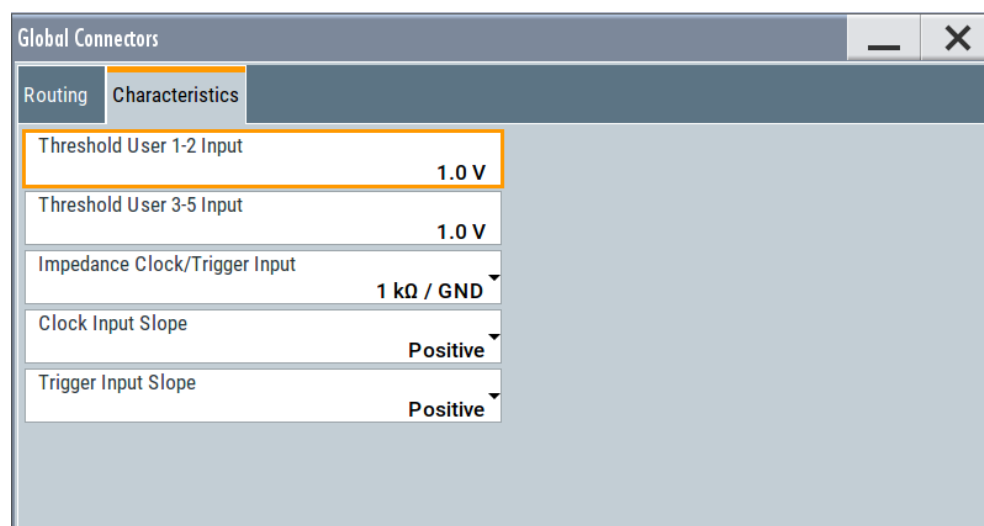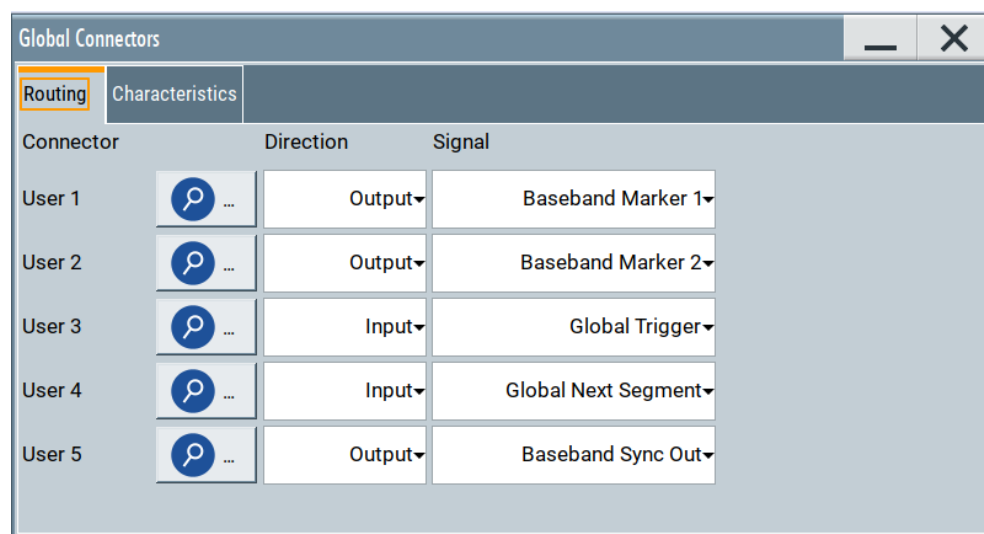

Use the built-in [Show Connector](#) function to display the physical location of the selected connector. Also, a blinking LED on the rear panel indicates the selected connector.

### Settings

<a href="#">Show Connector</a> .....	561
<a href="#">Direction</a> .....	561
<a href="#">Signal</a> .....	561
<a href="#">Execute Trigger</a> .....	562
<a href="#">Threshold User1-2 Input</a> .....	563
<a href="#">Threshold User3-5 Input/Threshold Pulse Input</a> .....	563
<a href="#">Impedance Clock/Trigger Input</a> .....	563
<a href="#">Clock Input Slope</a> .....	563
<a href="#">Trigger Input Slope</a> .....	563





### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

A blinking LED on the front/rear panel indicates the selected connector, too (see [Chapter 11.2.2.3, "Status indicators"](#), on page 555).

### Direction

Sets the direction of the signal at the connector that can be input or an output.

If you do not use the connector, select "Not Used".

Remote command:

`[ :SOURce ] :INPut:USER<ch>:DIRection` on page 780

`:OUTPut:USER<ch>:DIRection` on page 780

### Signal

Determines the control signal that is input or output at the selected connector. Whether the connector is used as an input or an output is selected by the parameter [Direction](#).

The [Table 11-1](#) lists the available control signals.

#### "Global Trigger"

Input for triggering custom digital modulations, digital standards and ARB. A trigger event affects the signal generation in all basebands for which the "Global Trigger" signal is enabled.

#### "Global Clock"

Input for external clock signal for synchronizing the internal clocks in all basebands to an externally applied clock signal. The active edge can be configured.

#### "Global Next Segment"

Input next segment for triggering of multi-segment waveform files, see [Chapter 4.9, "Generating multi-segment waveform files"](#), on page 205.

#### "Baseband Marker 1/2/3"

Marker signal output for triggering and control of external devices with user-definable marker signals.

#### "Baseband Sync Out"/"Baseband Sync In"

Signals available in enabled [primary-secondary instrument mode](#).

- "Baseband Sync Out"

One or more outputs of a dedicated synchronization (and trigger) signal that has to be fed into the slave instruments.

- "Baseband Sync In"

In the slave instruments, at most one input for the synchronization (and trigger) signal.

Can be assigned to any global connector.

See also [Chapter 9.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 457.

#### "BER Data"/"BER Clock"/"BER Data Enable"/"BER Restart"

Option: R&S SMBVB-K80

Input signals for BERT/BLER testing.



"BER TestGen Data"/"BER TestGen Clock"/"BER TestGen Data Enable"/"BER TestGen Restart"

Option: R&S SMBVB-K80

Output signals for BERT/BLER testing.

"Symbol Clock"

Output of the internal clock signal used for digital modulations. The signal is generated automatically when the standard is switched on.

"Lev Att"

Output signal that determines whether the signal level is attenuated, if envelope curve control is active.

The internal "Lev Att" control signal is defined in a control list and activated in the dialog: "Baseband" > "Custom Digital Modulation" > "Power Ramp Control"

See also [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134.

"Burst Gate"

Output for control signal for envelope curve control.

This control signal is defined in a control list and activated in the dialog: "Baseband" > "Custom Digital Modulation" > "Power Ramp Control"

See also [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134.

"Hop"

Marks the hop trigger for frequency hopping in the list mode for "Custom Digital Modulation". The hop signal is defined in a control list and activated by loading the control list, see [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134.

"CW/Mod"

Output signal to indicate the output of RF signal in unmodulated form (digital modulation is deactivated).

This control signal is defined in a control list, see [Chapter 4.5.3.8, "Control and marker lists editor"](#), on page 134.

"Triggered"

Output of the internal or the received external trigger signal.

"Manual Trigger"

Output of a short pulse signal that can serve as a common external trigger signal for triggering of several R&S SMBV100B.

See [Example "Triggering several R&S SMBV100B instruments simultaneously"](#) on page 462.

"Always 0"/"Always 1"

Control signal with low or high level.

"None"

No signal is assigned to the connector.

Remote command:

[\[:SOURce\]:INPut:USER<ch>:SIGNal](#) on page 780

[:OUTPut:USER<ch>:SIGNal](#) on page 781

### Execute Trigger

If "User 5 > Direction = Output" and "Signal = Manual Trigger", generates a short pulse signal and outputs it at the User 5 connector.

The signal can serve as a common external trigger signal for triggering of several R&S SMBV100B, see [Example "Triggering several R&S SMBV100B instruments simultaneously"](#) on page 462.



Remote command:

[:OUTPut:USER<ch>:TRIGger\[:IMMediate\]](#) on page 782

#### Threshold User1-2 Input

Sets the high/low threshold in volts for the signal at the User1-2 connectors.

The input signal is defined with the parameter [Signal](#). The same threshold applies for both connectors and any input signal.

Remote command:

[\[:SOURce\]:INPut:USER:TRIGger:LEVel](#) on page 782

[\[:SOURce\]:INPut:USER:CLOCK:LEVel](#) on page 782

#### Threshold User3-5 Input/Threshold Pulse Input

Sets the high/low threshold in volts for the signal at the User3-5 connectors.

The input signal is defined with the parameter [Signal](#). The same threshold applies for all 3 connectors and any input signal (e.g. external pulse modulation or trigger signal).

Remote command:

[\[:SOURce\]:INPut:USER:PULM:LEVel](#) on page 782

#### Impedance Clock/Trigger Input

Selects the input impedance for the external trigger/clock inputs.

Set the value to 1 kΩ/GND for high clock rates.

Remote command:

[\[:SOURce\]:INPut:USER:TRIGger:IMPedance](#) on page 783

[\[:SOURce\]:INPut:USER:CLOCK:IMPedance](#) on page 783

#### Clock Input Slope

Sets the polarity of the active slope of an externally applied clock signal.

Remote command:

[\[:SOURce\]:INPut:USER:CLOCK:SLOPe](#) on page 783

#### Trigger Input Slope

Sets the polarity of the active slope of an applied instrument trigger.

Remote command:

[\[:SOURce\]:INPut:USER:TRIGger:SLOPe](#) on page 783

## 11.2.6 Routing signals to local/global connectors

This section introduces the general principle of connector configuration.

### To map the signal to a connector

The [Figure 11-1](#) shows the main configuration stages, together with the corresponding user interface dialogs.



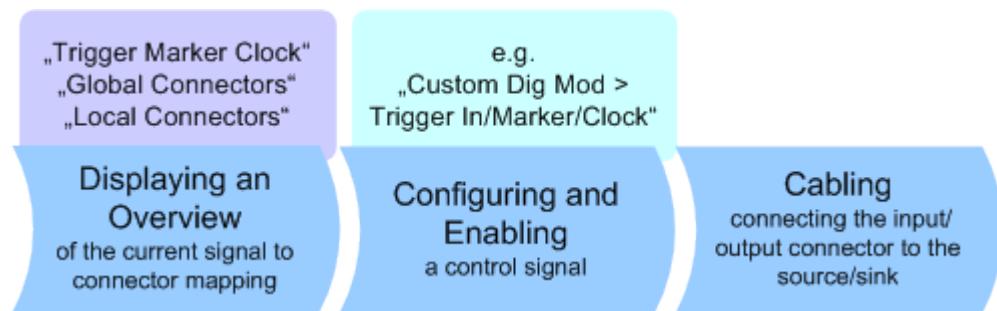


Figure 11-1: General workflow: signal to connector mapping

To map the signal to the connector mapping, perform the following:

1. Verify the current connector configuration and mapping and if necessary (re)define it.
2. Configure and enable the required signal, e.g. trigger, marker, clock signal.
3. Connect the configured connector, e.g. to the external instrument or device.

For a step-by-step description:

See [Chapter 3.3.4, "Enabling and configuring a marker signal"](#), on page 55.

#### To find out the connector location

Proceed as follows:

1. Select [T/M/C status LEDs](#) or [T/E/L/P/V status LEDs](#) to open the "Trigger Marker Clock" and the "RF Connectors" dialog.
2. For the corresponding connector, select the "Find" icon.

The "Show Connectors" dialog opens and displays the location of the selected connector on the front panel or rear panel of the instrument.


If active, the LED next to connector is green or yellow. See also ["Connector status LEDs"](#) on page 555.

## 11.3 Checking parameters and dependencies

You can check settings on a parameter-level for incoming dependencies. These dependencies include R&S SMBV100B configurations that affect properties of the parameter. Properties are, for example, selectable values, ranges, minimum or maximum value depending on the parameter type. After the dependency check, a dialog displays R&S SMBV100B configurations that include a list of dependent parameters or dependent settings that affect the parameter.


1. Select the parameter that you want to check.
2. Right-click the parameter, to open the context menu.
3. Select "Show Incoming Dependencies".



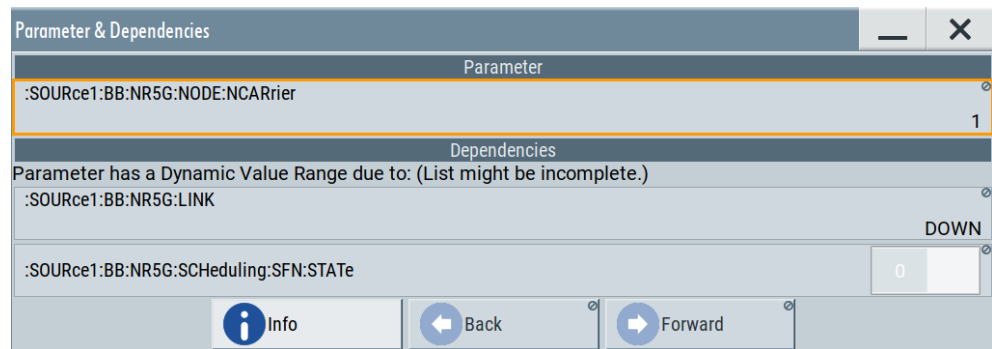


The "Parameter & Dependencies" dialog opens. The "Parameter" panel of this dialog displays the SCPI command including its setting or query parameters. The "Dependencies" panel displays dependent parameters and their settings that affect the setting of the parameter, that you want to check initially (2).

4. In the "Dependencies" panel, you can further check for dependencies within the dependent parameters.
  - a) Select the parameter that you want to check from the list in the "Dependencies" panel, e.g.:  
 :SOURce1:BB:NR5G:LINK DOWN for the "Link Direction" > "Downlink".

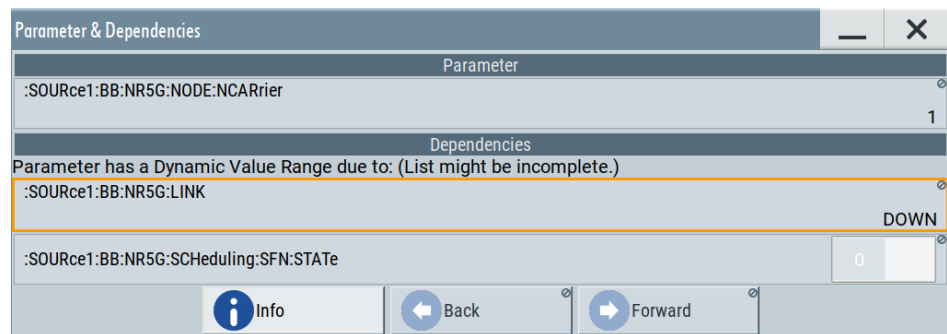

- b) Select "Show Incoming Dependencies".

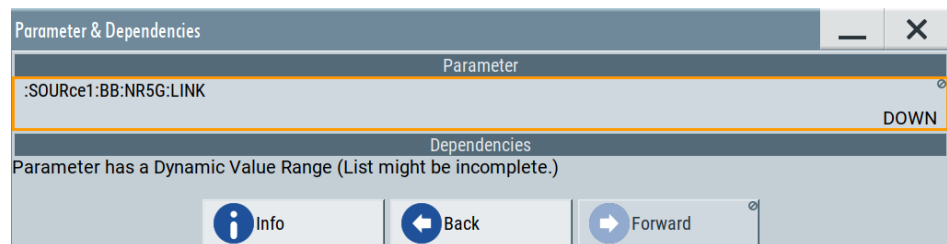

The list in the "Dependencies" panel is empty. I.e., the "Link Direction" setting does not depend on any further parameters or settings.

5. Optionally, navigate via "Back" and "Forward" to move up or down the dependency tree for parameters with dynamic value range.



**Settings:****Info**

Accesses the help of the selected parameter, see [Chapter 11.3, "Checking parameters and dependencies"](#), on page 564.

**Back/Foward**

Toggles between parameter dependencies for dependent parameters.

If you select "Show Incoming Dependencies" for parameters or settings from the "Dependencies" panel, you can move back or move forward through the dependency tree-like structure.

## 11.4 Organizing frequently used settings as favorites

The R&S SMBV100B provides two possibilities to define frequently used settings and procedures for later retrieval individually.

**User menu and [★ (User)] key**

These two functions work similar to the favorites function of a browser or other programs. They allow you to create a list of frequently used actions or to group frequently used settings in one dialog.

You can collect the parameters of your configuration in a favorites list, i.e. in the "User Menu", or define settings and actions with the [★ (User)] key:

- "User Menu" to group settings of specific tasks.  
Similar to a favorites function, you can use this menu for:
  - Grouping the settings required for a task in one dialog.
  - Saving and recalling the settings of a task.
  - Transferring the settings for use on multiple instruments.
- [★ (User)] key, with customizable function.  
You can perform the following steps using this key:
  - Open the "User Menu" (default functionality).
  - Add or remove settings and functions.
  - Execute actions and access functions.

**Possible applications**

The ★ (User) key and the "User Menu" are useful for the following situations:

- There are functions or tasks you have to perform in a defined order but the setting parameters are distributed across several dialogs.
- There are functions or tasks you have to perform frequently but they are not accessible via the front panel keys.
- The required functions are grouped in a dialog that is not directly accessible from the block diagram.



- Your task involves the frequently loading and executing of certain SCPI scripts. Refer to [Chapter 12.13.4, "How to record / create SCPI lists"](#), on page 681 for information on how to create an SCPI script.
- A quick access to saved setups is required.
- There are functions and tasks you have to perform on several instruments.

### Dialog identification

To identify each dialog, the instrument uses a dedicated dialog ID. The dialog ID contains the dialog position on the display and the current active tab. The action that triggers the instrument to open a dialog uses this identification.

### Save/Recall vs. recall setup

If you need to restore a specific signal generation setup and perform further configurations based on this particular instrument state, the R&S SMBV100B provides two options:

- "Save/Recall" function  
For a detailed description, refer to [Chapter 10.4, "Saving and recalling instrument settings"](#), on page 518.
- "Recall Setup" function  
If the "Recall Setup" is the only user action assigned to the [★ (User)] key, pressing this key triggers the R&S SMBV100B to load the user-defined preset file immediately.



Recalling a user-defined preset file using the [★ (User)] key is even faster than the immediate recall function provided by the [Save/Rcl] key.

## 11.4.1 User menu settings

The "User Menu" dialog contains function keys to organize, save and load a favorites list. You can also modify, add or delete list entries directly in the dialog.

### Clear User Menu

Removes all entries from the "User Menu" at once.

### Save User Menu

Saves the current "User Menu" under the defined filename.

### Recall User Menu

Loads the selected "User Menu" file.

This function enables you to use the user specific favorites file on another instrument. However, if functions or parameters are not provided due to varying configuration of the instrument, the settings of these particular parameters take no effect.




### 11.4.2 How to use the user menu for fast adjustments

Access:



1. Press the [★ (User)] key.

The "User Menu" dialog opens.

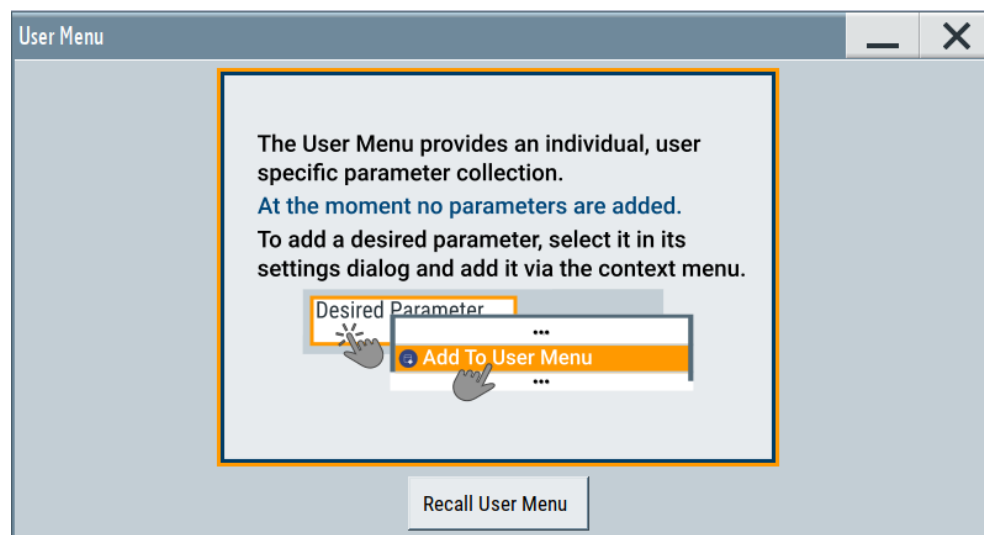


If you execute this action for the first time, the dialog displays instructions on how to use the "User Menu".

2. If you already have a saved user menu file on the instrument, you can load with "Recall User Menu".


#### Creating a user menu

To create your own user dialog with settings:

1. Open a dialog with settings you frequently use.
2. Select a parameter.
3. Open the context menu and select "Add to User Menu".



A favorites icon ★ indicates that the parameter is used in the "User Menu".






The "User Menu" button in the taskbar confirms that you have created a "User Menu" with at least one entry.

4. Press the [★ (User)] key.

The "User Menu" dialog shows all parameters that you have added to the list.

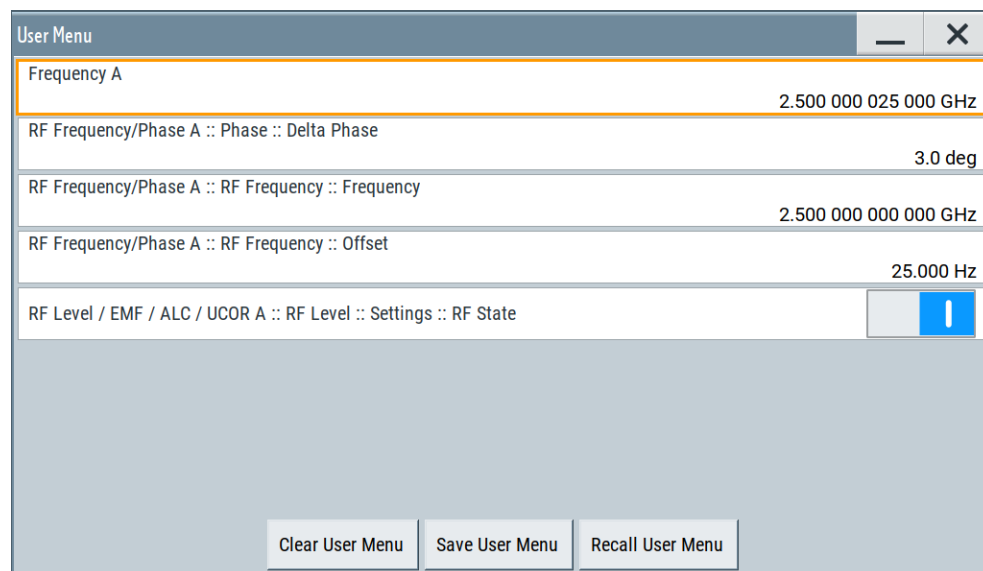

You can modify the parameter settings directly in this dialog, e.g. change a state or set values, as you do in the particular dialog the parameter originally belongs to.

5. To remove an entry, select the parameter either in the "User Menu" or in the dialog where it originally belongs to.
  - a) Open the context menu and select "Remove from User Menu".



6. To remove all entries at once, select "Clear User Menu".
7. To save your individual favorites list, select "Save User Menu", and follow the file managing instructions.  
The file system automatically assigns the file extension \*.user\_menu.
8. To recall a previously saved user menu, select "Recall User Menu" and proceed accordingly.

### Providing a user menu favorites list for several instruments

To transfer files from or to an instrument:

1. Create the favorites list, as described in ["Creating a user menu"](#) on page 568.
2. Save the favorites list.




- To transfer a file from or to an instrument, the R&S SMBV100B provides several options, see ["File handling"](#) on page 510.

### 11.4.3 Define user key actions settings

Access:

- Select "System Configuration > Setup > User Interface > Define User Key".

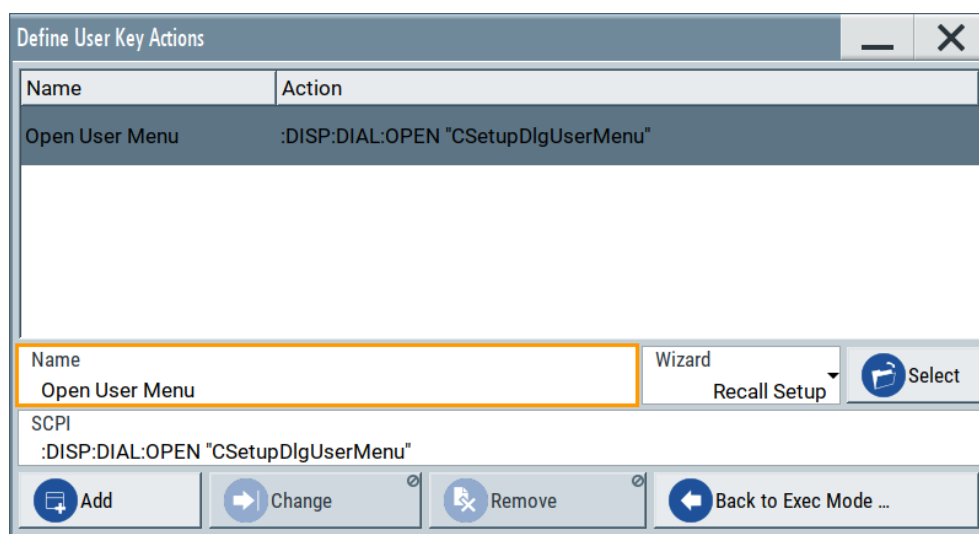

The dialog displays a list of the currently enabled actions and provides functions to define new, edit or remove existing actions. If no actions have been defined, the list is empty.

See [Chapter 11.4.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 571.

The remote commands required to define these settings are described in [Chapter 13.10, "DISPlay subsystem"](#), on page 732.

#### Name

Enters a user-defined name for the action.

#### Wizard

Defines the action to be executed.

"Load SCPI Script"

Selecting the action load and executes the SCPI script.

"Recall Setup"

Load a setup for quick access to the user-defined settings.

"Open Dialog"

Quick access to the selected dialog.

#### Select

Depending on the selected "Wizard", provides access to:

- The standard "File Select" function for loading of an SCPI script or setup file



- A list of the dialog IDs of all currently opened dialogs. The dialog ID is used for dialog identification in the remote control.  
See [SCPI](#).

### SCPI

For the currently selected action, displays the corresponding SCPI command with the associated parameter for dialog identification (dialog ID). The automatically displayed SCPIs are enabled for subsequent modification.

Remote command:

:DISPlay:DIALog:OPEN on page 736

See also :DISPlay:DIALog:ID? on page 735

### Add, Change, Remove


Standard functions for managing of the actions.

### Back to Execute Mode

Opens the "Select Action to Execute" dialog. Select an Action from the list to execute it.

To return to the "Define User Key Actions" dialogs, select [Select Action to Execute > Define Actions](#).

### Select Action to Execute > Define Actions

Name	Action
Open User Menu	:DISP:DIAL:OPEN "CSetupDlgUserMenu"
Open	:DISP:DIAL:OPEN "CSetupFrontPanelKe..."
 Define Actions ...	

Accesses the "Define User Key Actions" dialog.

## 11.4.4 How to assign actions to the [★ (User)] key

The customizable [★ (User)] key has no predefined function assigned. You can individually define actions to be executed or functions to be accessed when pressing this key.

To assign a frequently used dialog to the [★ (User)] key:

1. Open the dialog you want to quickly access.  
For example, select "Baseband > EUTRA/LTE > DL Frame Configuration > Time Plan > Detach Time Plan".
2. Select "System Configuration > Setup > User Interface > Define User Key".




3. To create an action:

- a) Specify the "Name".  
E.g. *LTE\_ShowTimePlanDL*.
- b) Select "Wizard > Open Dialog"
- c) Select "Select" and select the dialog ID from the list

The corresponding SCPI command is automatically displayed and can be later modified.


4. Select "Add" to store the new action in the list of user key actions.

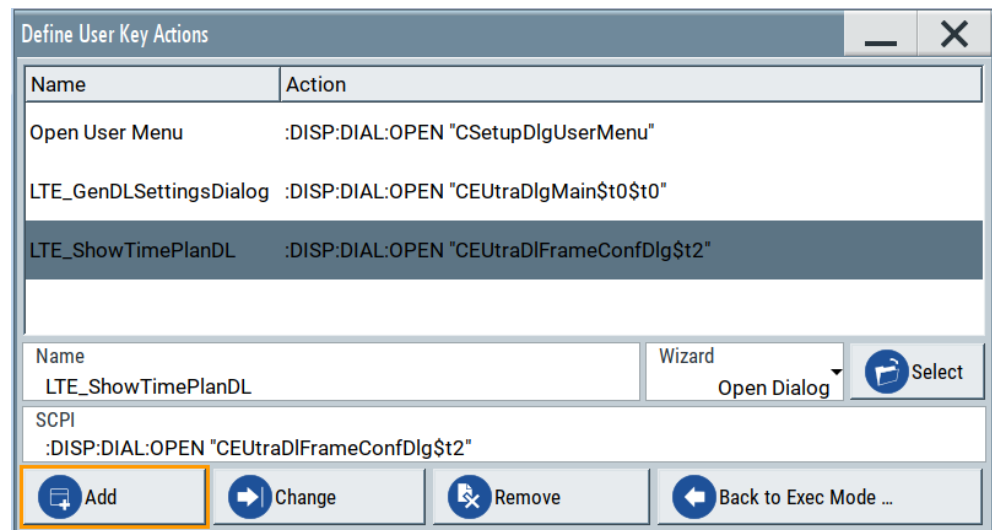

5. To execute the created action, press ★ (User).

In the list of actions ("Select Action to Execute" dialog), navigate to the required action.

In this example, this is "LTE\_ShowTimePlanDL".

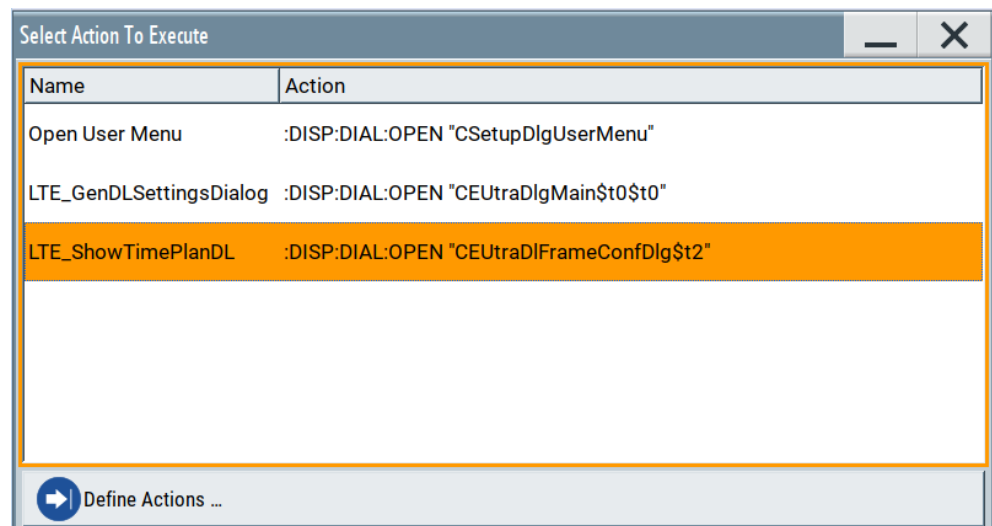

The R&S SMBV100B executes the action and opens the dialog.



## 11.5 Managing licenses and license keys

The R&S SMBV100B provides options for all required applications, as, e.g., for digital standards, you can purchase and activate.

Various license types enable you to manage licenses for options as follows:

- Activate an option locally on an instrument.
- Share an option with other instruments.
- Activate an option for a certain period of time as needed.

An option is ready to operate after it is enabled with a license keycode supplied with the option. The license key is delivered as a file or on paper. Unregistered licenses must be registered for a particular instrument before the corresponding option can be enabled for operation.



For reliable operation, a software option usually requires the latest firmware version. The required version is specified in the delivery. If your instrument works with a former firmware version, update the firmware before enabling the software option.

The firmware update is described in the release notes provided on the product page of the R&S SMBV100B.



### Occupied Licenses

A license server allows you to use one or more options with floating license for a specified period of time.

Provided the R&S SMBV100B is connected one or more license servers, it shows the currently unoccupied, i.e. available options. You can borrow the license for one or more options and specify the required time period.

The maximum number of options you can occupy is determined by the minimum number of available options on the server, and the maximum number of options you can install on the instrument, including the permanently installed options.

Once you have occupied an option, the instrument saves the license locally, and blocks it for other instruments. During the occupied period, you do not necessarily need permanent access to the license server. If you need the option for a longer time than you have occupied, you can extend the requested occupation period up to 7 days.

When the occupation period elapses, the license expires automatically. After 1 hour follow up time, the option is available again on the license server.



You cannot return or disable the license of an option manually before the occupation period has elapsed.

If the R&S SMBV100B has no connection to the license server, it displays a warning message.



### 11.5.1 Manage license keys settings

The "Manage License Keys" dialog provides all information on the available licenses. Instrument-related steps guide you through the process of registering or deactivating licenses.

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > New License".

The screenshot shows the 'Manage License Keys' dialog box with the 'New License' tab selected. The 'Device ID' field contains '1423.1003K02-000000-sD'. Below it is a text input field for the 'Enter License Key' with a masked input area showing asterisks. At the bottom, there are two buttons: 'Import License Key From File ...' and 'Export Deactivation Response To File ...'. The 'License Installation Info' section is visible at the bottom right.

In this tab, you can activate licenses for newly purchased or newly registered options.

2. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

The screenshot shows the 'Manage License Keys' dialog box with the 'Installed License Keys' tab selected. The 'Show Inactive' and 'Show Deactivated' checkboxes are unchecked. The 'Open License Server' and 'Manage Waveform Packages ...' buttons are visible. Below these are several buttons: 'Export License Key To File', 'Option', 'License Count', 'License Type', and 'Registrations'. A table lists installed licenses with columns for Option, License Count, License Type, and Registrations.

Option	License Count	License Type	Registrations
<InstName>-Opt> 1	1	Permanent	
<InstName>-Opt> 2	2	Permanent	
<InstName>-Opt> 1	1	Timed (2160 h left)	
<InstName>-Opt> 5	5	Floating	
<InstName>-Opt> 50	50	Quantified (free 49)	Manage..

This tab lists all active options, with information on the available number of an option, the license type and registration. You can query inactive or disabled options also.

3. Select "Open License Server".
4. Select "Manage Waveform Packages".



Number of Licenses/Waveforms		
Total:	Used:	Free:
38	11	27

Select Waveform ... None

Register Selected Waveform

Waveform	Registration Date	Used License(s)
1 drive:/path/MultiSegmentFilename_38969276.wv	2017-12-10 17:14:37	5
2 drive:/path/MultiSegmentFilename_663074699.wv	2018-09-17 05:57:18	6

This tab enables you to select and register purchased waveform packages.

5. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

Occupy Option	Designation	All Licenses from Server	Occupied by Device	Occupation Period(s)
0 <inst>-K55 ...	LTE Release 8	17	0	
1 <inst>-K62 ...	Additive White Gaussian Noise	2	2	7d, 23h

The tab lists all options available on the license server, the number of options already occupied by the R&S SMBV100B and the state of their occupation period. The occupation period indicates the remaining time you can use the option. How to occupy a license or to extend the occupation period, see [Chapter 11.5.3, "How to occupy or extend a license"](#), on page 589.

The "Manage License Keys" dialog covers all required parameters for activating or deactivating newly purchased or newly registered options, and provides access to the onboard license server, see [Chapter 11.5.2, "Using the license server"](#), on page 579.

## Settings

Device ID.....	576
Enter License Key.....	576
Import License Key from File.....	576
Export Deactivation Response to File.....	576
License Installation Info.....	576
Installed License Keys.....	576
L Show Inactive.....	576
L Show Deactivated.....	577



L Installed License Keys Table.....	577
Open License Server.....	577
Manage Waveform Packages.....	577
L Number of Licenses/Waveforms.....	577
L Select Waveform.....	578
L Register Selected Waveform.....	578
L License Table.....	578
Occupy Licenses.....	578
L License Info.....	578
L Select Free Licenses.....	579
L Occupation Period.....	579
L Occupy.....	579
L License <no>: Extend Occupation Period to.....	579
L Renew.....	579

### Device ID

Displays the instrument-specific identification number. The device ID is a unique string with the following structure:

<stock number>-<serial number>-<checksum>

### Enter License Key

Type here the license key provided with the option.

For license keys delivered as a file, use [Import License Key from File....](#)

### Import License Key from File...

Opens a dialog for selecting the file with the license key.

Use this function also to import the deactivation key file generated by the R&S License Manager online tool (see [How to move a portable license](#)).

### Export Deactivation Response to File...

Exports the generated deactivation response key to a file and opens a file management dialog to save the file.

This key is required during the unregistration process, e.g. when you want to uninstall an option or have a portable option, which you want to register later on another instrument (see [How to move a portable license](#)).

### License Installation Info

Indicates status information on the performed actions.

### Installed License Keys

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

Comprises information on the installed options.

### Show Inactive ← Installed License Keys

Enables the display of the inactive (expired) licenses in the [Installed License Keys Table](#).



**Show Deactivated ← Installed License Keys**

Enables the display of the deactivated licenses in the [Installed License Keys Table](#).

See [How to move a portable license](#) for information on how to activate deactivated licenses.

**Installed License Keys Table ← Installed License Keys**

Shows information on the currently installed options.

**"Export License Key to File"**

Opens a dialog to save the generated license key file. This file is required during the unregistration process.

If you have a portable unregistered option, you can register it later on another instrument (see [How to move a portable license](#)).

**"Option"**

Displays the option short designation.

**Tip:** Open the [Hardware Options/Software Options](#) dialog to retrieve more information about the installed options.

**"License Count"**

Displays the number of the licenses for the selected option key.

**"License Type"**

Displays the type of license.

A license type determines the common qualification application duration and the portability of a license. The following license types are provided: evaluation, permanent, portable, quantified, time-controlled with a duration of 1, 3, 6 or 12 months. A license can also be deactivated or expired.

For time limited licenses, the left time of applicability is displayed too.

**"Registrations" (reserved for future use)****Open License Server**

Opens the R&S License Server of the R&S SMBV100B, see [Chapter 11.5.2, "Using the license server"](#), on page 579.

**Manage Waveform Packages**

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys > Manage Waveform Packages".

Opens the "Manages Waveform Packages" dialog that enables you to register waveform files.

With a waveform packages license, the R&S SMBV100B can play a waveform file generated with the R&S WinIQSIM2 software, even if it is not equipped with the corresponding digital standard option for using R&S WinIQSIM2 (R&S SMBVB-K2xy/K4xy).

**Note:** One waveform packages license per waveform is required, and for multisegment waveforms, you need a license per segment.

Once registered license cannot be moved to another instrument.

A waveform packages license does not allow R&S SMBV100B to play waveforms of options R&S SMBVB-K256/-K352/-K353/-K354.

**Number of Licenses/Waveforms ← Manage Waveform Packages**

Displays the number of the available and used R&S SMBVB-K200 licenses.



**Select Waveform ← Manage Waveform Packages**

Opens a standard dialog to select the waveform to be registered.

**Register Selected Waveform ← Manage Waveform Packages**

Executes the registration.

**License Table ← Manage Waveform Packages**

Gives an overview of the registered waveforms, the registration date and the number of used licenses.

"Waveform" Displays the directory, path and file name of the waveform file.

"Registration Date"  
Displays date and time of registration.

"Used License(s)"  
Shows the number of licenses the waveform file requires.

**Occupy Licenses**


The license server allows you to borrow one or more options with floating licenses for a specified time. You can retrieve a non-occupied license and save it locally for up to 7 days.

Access:

Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

The table lists all options that are available on the license server. It covers the short and long name, the number of available options on the server, the number of already occupied options and the remaining time periods for their use.

To occupy or renew a license, select "Occupy Option".

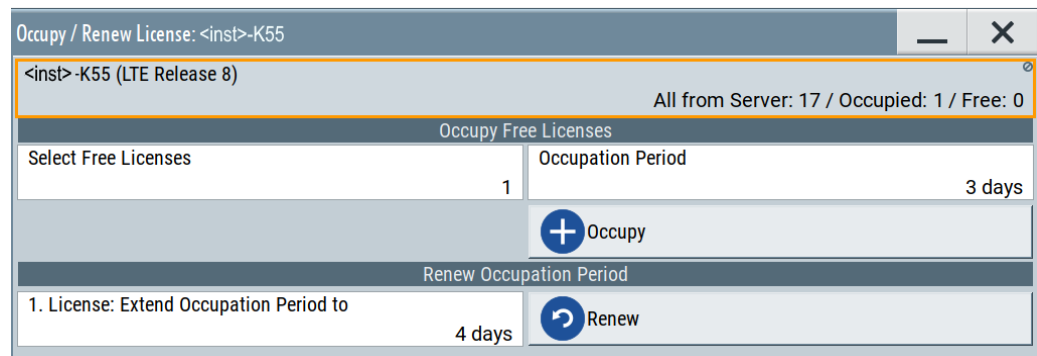

Remote command:

[\[:SOURCE\]:OCCupy:OPTion:CATalog?](#) on page 994

**License Info ← Occupy Licenses**

Displays the current occupancy state of the selected option.

"<instrument>-<option>"  
Short name of the option.

"(<designation>)"  
Long name of the option.



"All from Server: <no>"

Number of options available on all connected license servers.

"Occupied: <no>"

Number of options occupied by the instrument.

"Free: <no>"

Remaining number of options that can be occupied on the instrument.

#### **Select Free Licenses ← Occupy Licenses**

Sets the number of licenses to occupy.

#### **Occupation Period ← Occupy Licenses**

Sets the occupation period for the selected option in days.

#### **Occupy ← Occupy Licenses**

Executes the occupation process.

The R&S SMBV100B saves the selected options locally and removes the licenses from the list of available options on the license servers.

Remote command:

`[ :SOURce ] :OCCupy:OPTion` on page 994

#### **License <no>: Extend Occupation Period to ← Occupy Licenses**

Extends the occupancy duration set before to the required length.

**Note:** You can only extend an already set occupation period.

Reset or return an occupied period before the time has elapsed is not possible.

#### **Renew ← Occupy Licenses**

Executes the extension of the occupation period.

The R&S SMBV100B saves the selected options locally and removes the licenses from the list of available options on the license servers.

Remote command:

`[ :SOURce ] :OCCupy:OPTion:RENew<ch>` on page 995

## **11.5.2 Using the license server**

The R&S SMBV100B now supports handling of software licenses using the license server from Rohde & Schwarz.

As a browser application you can access the R&S License Server either in a browser and also directly in the R&S SMBV100B. The onboard license server integrated in the instrument firmware has connection to a *local smartcard* memory. The local smartcard holds local licenses, i.e. licenses that are intended for use on this specific instrument.

As opposed to local licenses, the application also manages licenses referred to as *floating licenses*.

For managing floating licenses, the same license server application runs on a PC at customer's site. In this context referred to as *remote license server*, with connection to the customers memory, the *remote smart card*. The remote smartcard holds floating



licenses, i.e. licenses you can use on instruments everywhere without restrictions on the location.

When you need a specific application, you can obtain a license from the server. When you no longer need the license, return it to the server.



The license server releases a returned floating license for use in another instrument only after a follow-up time of 10 minutes.

At startup, the license server checks the available floating licenses. During this check, it returns the licenses immediately.



The floating license server application is part of the configuration at purchase. Included in delivery, you get an installation package that consists of a smart card dongle with the software and the corresponding user documentation.

### To open the license server

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

New License

Installed License Keys

Show Inactive☐

Show Deactivated☐

Open License Server

Manage Waveform Packages ...

	Export License Key To File	Option	License Count	License Type	Registrations
1 ...		<InstName>-Opt>	1	Permanent	
2 ...		<InstName>-Opt>	2	Portable	
7 ...		<InstName>-Opt>	1	Timed (2160 h left)	
8 ...		<InstName>-Opt>	5	Floating	
9 ...		<InstName>-Opt>	50	Quantified (free 49)	Manage..



## 2. Select "Open License Server".

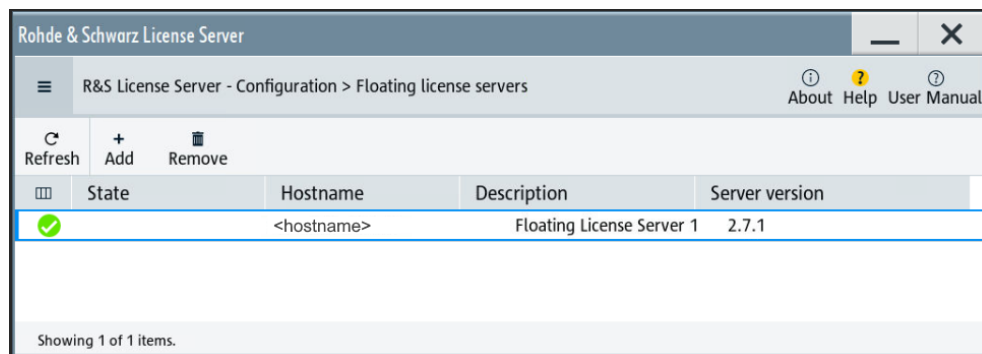


Figure 11-2: R&amp;S license server dialog

The license server opens in a browser window and starts initially in the "Configuration" view for configuring floating license servers. It lists already configured floating license servers, with information on the host address, designation and state. You can add or remove a floating license server configuration and customize the information to be displayed. The control elements in the upper area enable you to access the "Analytics" or "Licenses" views.

The icons at the upper right lead you to information on the license server:


- "About": shows the software version.
- "User Manual": opens the embedded license server user manual.
- "Help": provides the functional description on a specific dialog and its settings.



For security reasons, the license server of the R&S SMBV100B enables you to restrict the access to the floating licenses from an external instrument.

For information on how to restrict the access to the connections, see ["To restrict remote connection access"](#) on page 586. To release a restriction, see ["To enable remote connection access"](#) on page 588.

For more information, see the user manual of the license server.

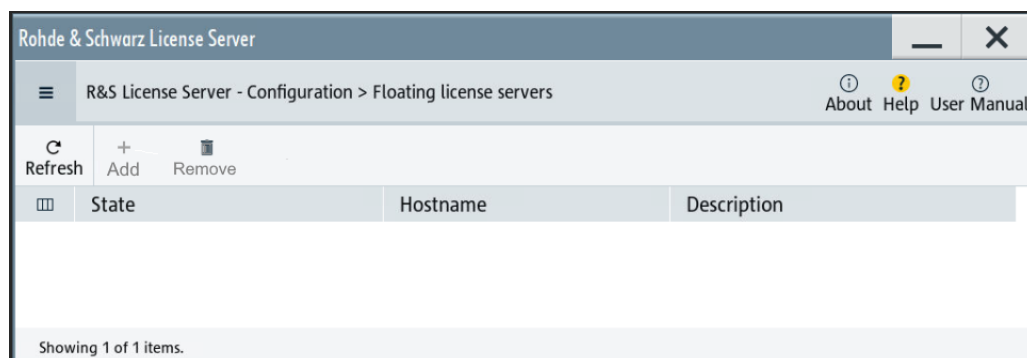




### Short glance at the main views

The section provides a brief insight into the main windows of the license server. For details and handling of the application, refer to the embedded user documentation.




1. To access a view, select the menu button.
2. Select "Configuration".

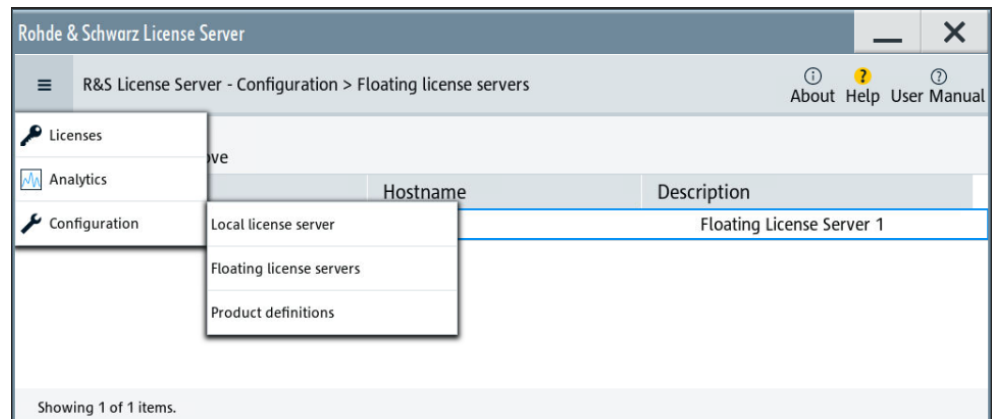

**Figure 11-3: Configuration menu**

Accesses the configured license servers, access lists and installed product definitions.

- a) Select "Local license server".

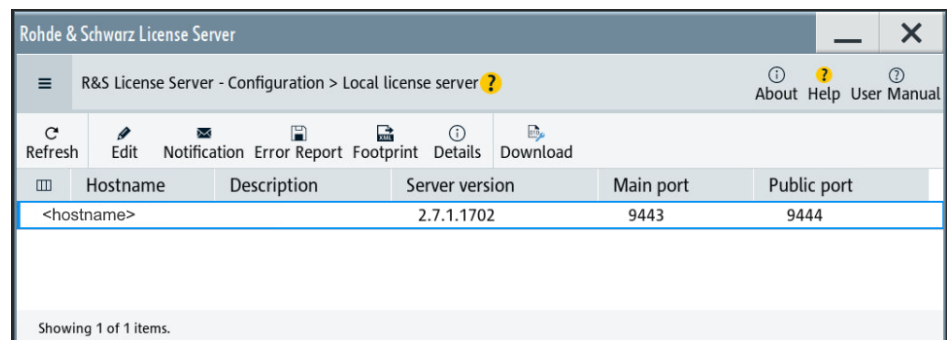

**Figure 11-4: Example of a local license server view**

Shows the onboard license server of the instrument. With the column selection, you can indicate or unhide characteristics of the available server. The task bar buttons provide access to the corresponding functions and access lists.



- b) Select "Floating license server".

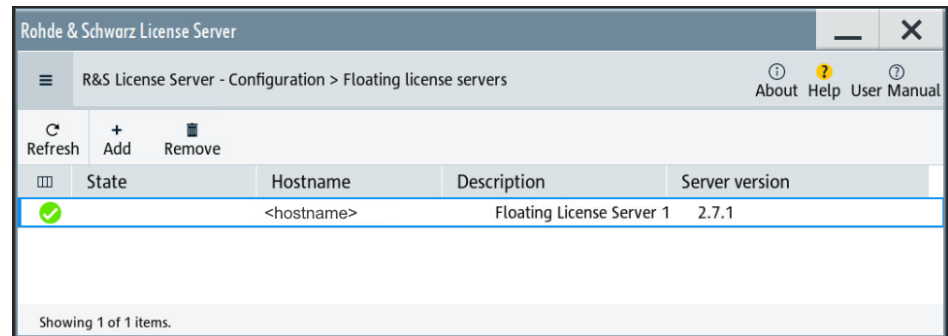


Figure 11-5: Example of a floating license server view

To add the connection to a floating license server, see ["To add a remote connection to an external license server"](#) on page 589.

- c) Select "Product definitions".

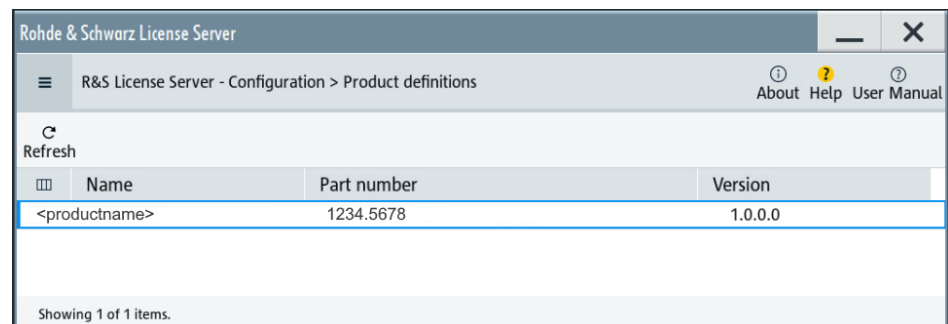


Figure 11-6: Example of a product definition view

Shows installed product definitions. To view the available characteristics, use the column selection.

3. Select "Licenses".


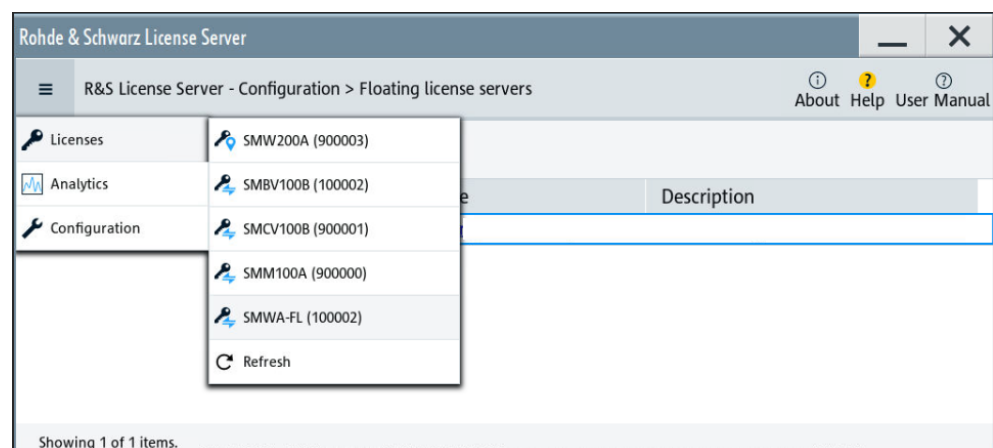


Figure 11-7: Licenses menu



Provides access to the available license servers.

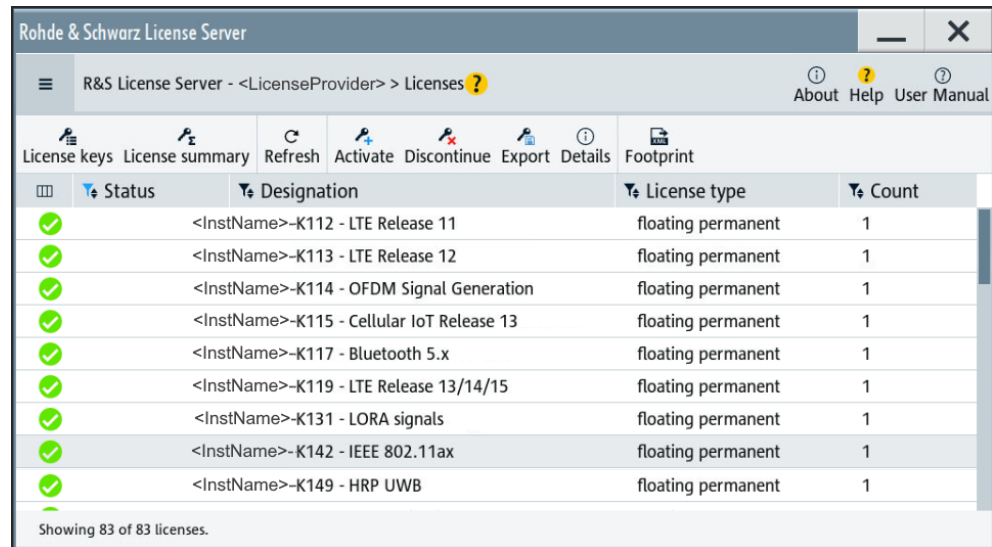

Status	Designation	License type	Count
✓	<InstName>-K112 - LTE Release 11	floating permanent	1
✓	<InstName>-K113 - LTE Release 12	floating permanent	1
✓	<InstName>-K114 - OFDM Signal Generation	floating permanent	1
✓	<InstName>-K115 - Cellular IoT Release 13	floating permanent	1
✓	<InstName>-K117 - Bluetooth 5.x	floating permanent	1
✓	<InstName>-K119 - LTE Release 13/14/15	floating permanent	1
✓	<InstName>-K131 - LORA signals	floating permanent	1
✓	<InstName>-K142 - IEEE 802.11ax	floating permanent	1
✓	<InstName>-K149 - HRP UWB	floating permanent	1


Showing 83 of 83 licenses.

**Figure 11-8: Example of a license keys view**

The "License keys" view lists the license key options that are available on the selected server. To show additional information, use the column selection.

The task bar functions enable you to activate or deactivate a license, to get details on an option and export license keys or information on the selected product.

4. Select "Analytics".

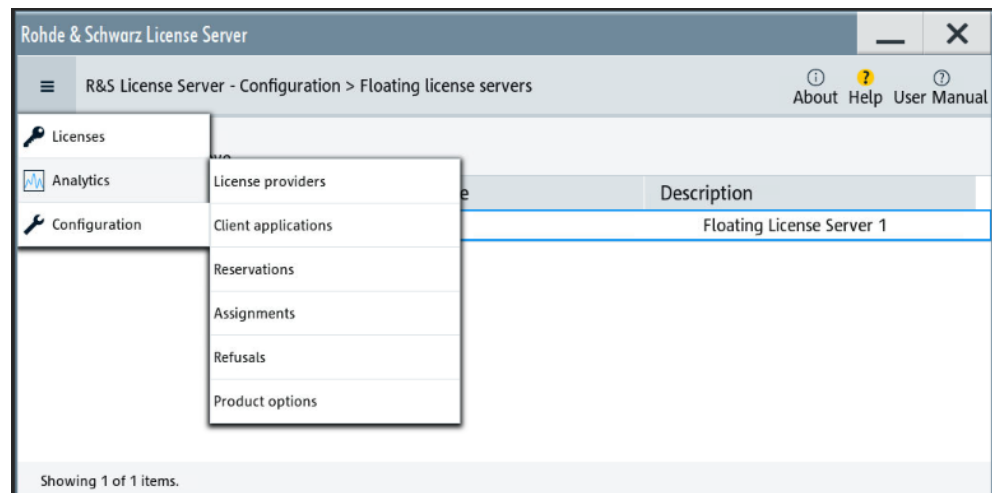

**Figure 11-9: Analytics menu**

Provides access to the license providers, client applications and enables you to export statistics data for evaluation in external applications.



Status	Product	Storage	Provider type	Situated at	Device ID/Part numb...	Remarks
In Use	<hostname>	Local	<provider>		1412.0000K02-90C...	
In Use		Floating	<LicenseServerAddress>	1412.0000		
In Use	<hostname>	Floating	<LicenseServerAddress>	1412.0000k91		
Disconnected		Floating	<LicenseServerAddress>	1423.1003k91		
Disconnected		Floating	<LicenseServerAddress>	1440.8002k92		
Disconnected		Floating	<LicenseServerAddress>	1432.7000k92		

Showing 7 of 7 items.

**Figure 11-10: Example of the license providers view**

Shows information on configured client applications, license providers and license types. To show additional information, use the column selection.

### To manage licenses on the R&S SMBV100B

To request or return a license, proceed as follows:

1. Access: see ["To open the license server"](#) on page 580.  
The browser application opens.
2. Select "Licenses"
3. Select a license server in the menu list, e.g. "R&S SMBV100B".  
The "License keys" view lists the enabled options available on the selected server.
4. Select "Status" > "Select all" to list also options that are currently deactivated.  
The "Licenses" view shows all active, inactive and time limited options.
5. To get detailed information on a specific option:
  - a) Select the option in the list.



- b) In the task bar, select "Details".


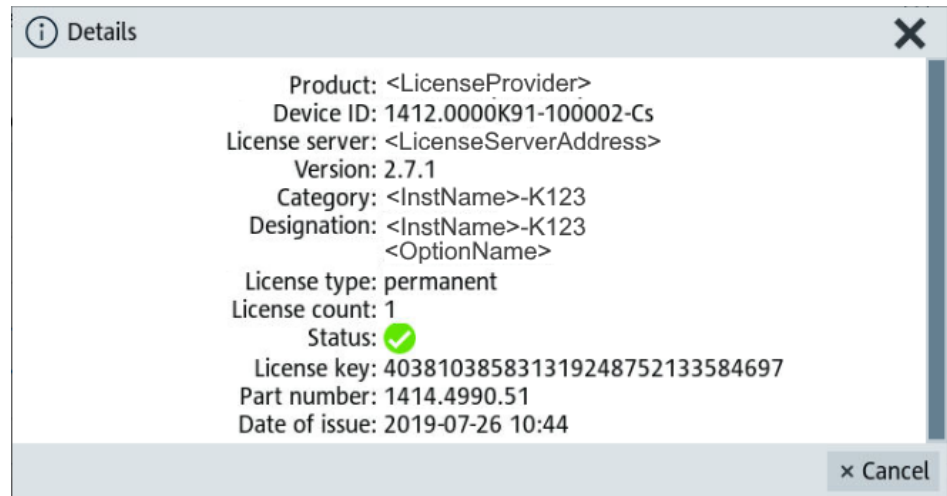


Figure 11-11: Example of the license characteristics of an option

6. To enable a discontinued license: , select in the taskbar.

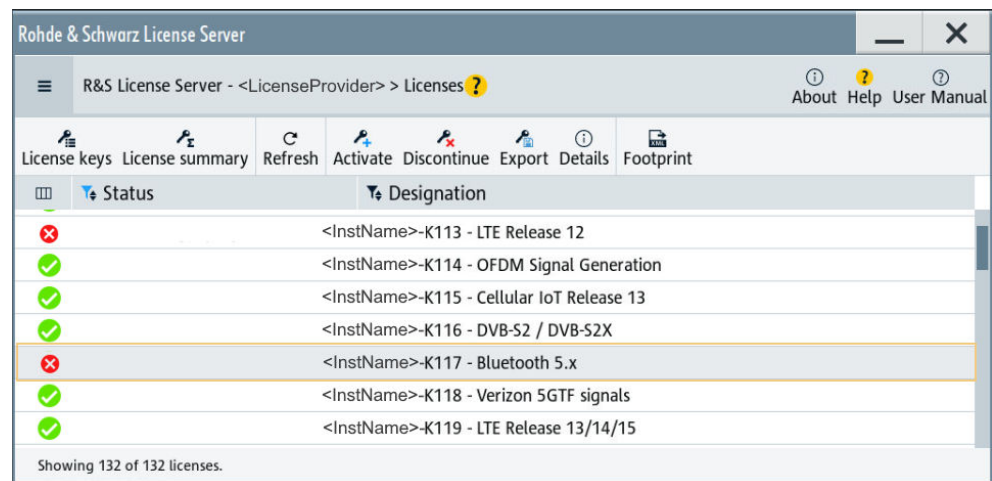

- a) Select the license you want to activate.
  - b) In the task bar, select .
7. To return a license, proceed the same way:
- a) Select the license.
  - b) Deactivate the license with .
8. Follow the instructions on the screen.

#### To restrict remote connection access


If you want to restrict the remote connection to the floating license server of the R&S SMBV100B, you can configure specific levels to prevent unauthorized access:

1. Open the license server as described in ["To open the license server"](#) on page 580.




The onboard license server browser opens.

2. Select "Configuration" > "Local license server".
3. In the task bar, select "Edit".
4. Select the "Access options" tab.
5. Under "Remote Connection Restriction" restrict the access according to your requirements.

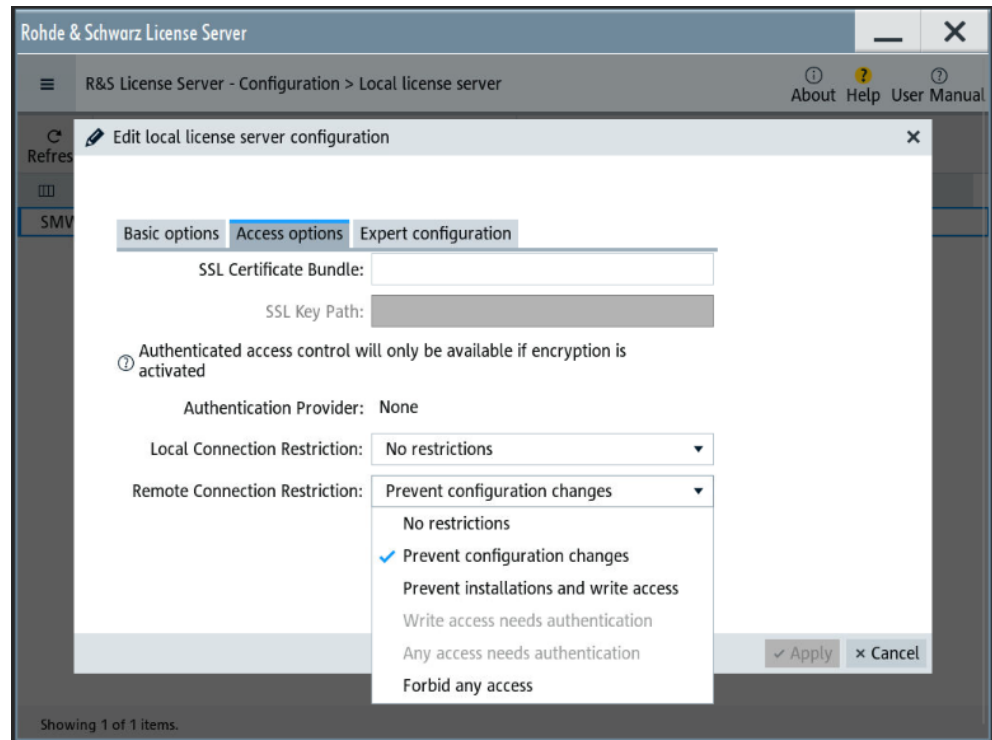

6. Confirm with "Apply" and close the dialog.

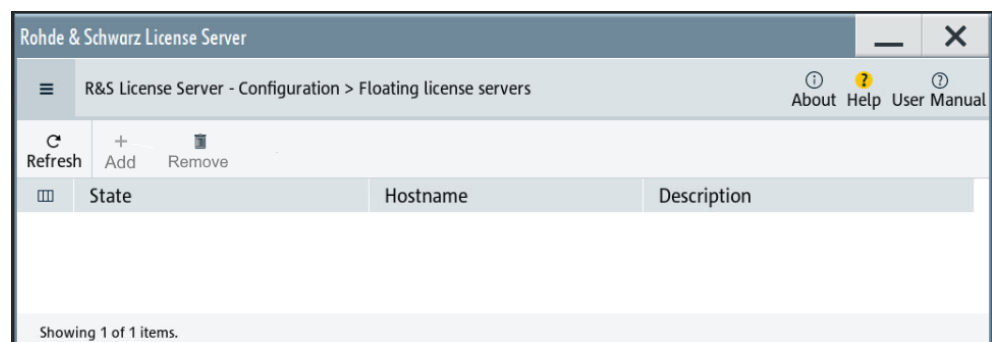


The R&S SMBV100B blocks the remote connection of an external floating license server. The "Add" and "Remove" buttons are disabled (grayed out). The restriction also disables the remote access to the "Edit" mode of the local server. You can release the restricted access only directly on the instrument.



### To enable remote connection access


If the remote connection to the floating license server is blocked, you can release the restriction or configure specific levels to prevent unauthorized access:

1. Open the license server as described in ["To open the license server"](#) on page 580.  
The onboard license server browser opens.
2. Select "Configuration" > "Local license server".
3. In the task bar, select "Edit".
4. Select the "Access options" tab.
5. Under "Remote Connection Restriction" release the access according to your requirements.

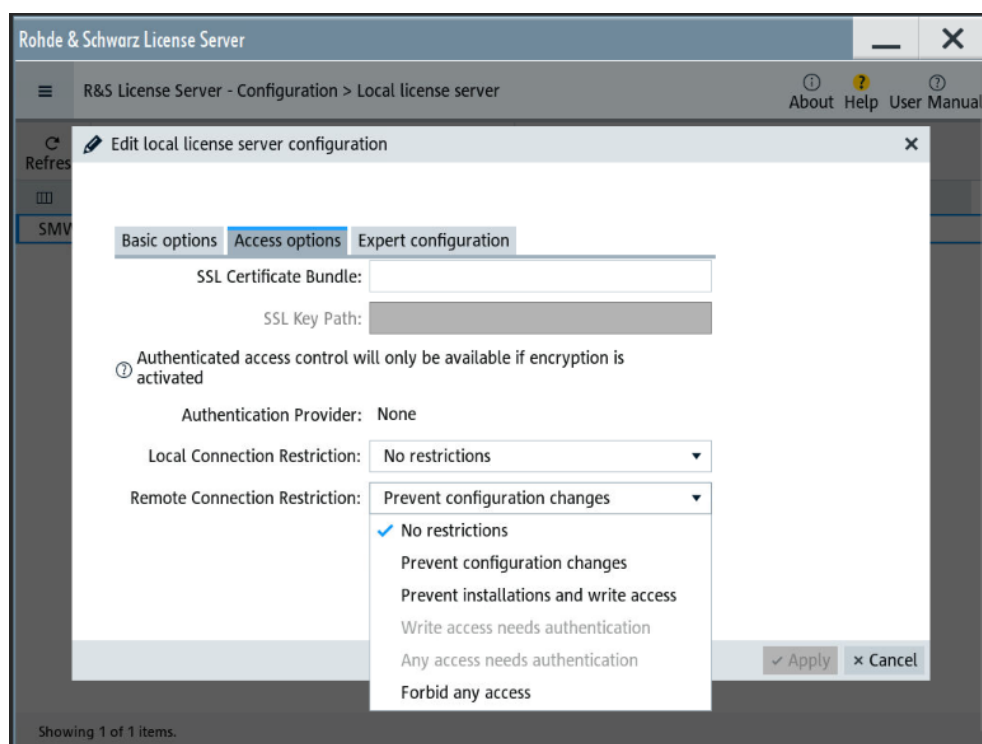

6. Confirm with "Apply" and close the dialog.  
If your selection no longer restricts the access, you can assign a floating license server.
7. Select "Configuration" > "Floating license server".




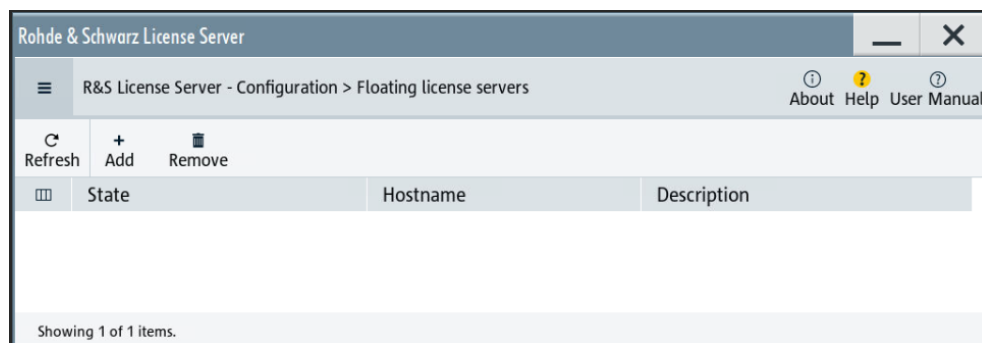

The "Add" and "Remove" buttons in the task bar are no longer blocked.

#### To add a remote connection to an external license server

1. Open the license server as described in ["To open the license server"](#) on page 580. The onboard license server browser opens.
2. Select "Configuration" > "Floating license server".
3. Select "Add".
4. Enter hostname and port of the license server you want to use.
5. Confirm with "Add".

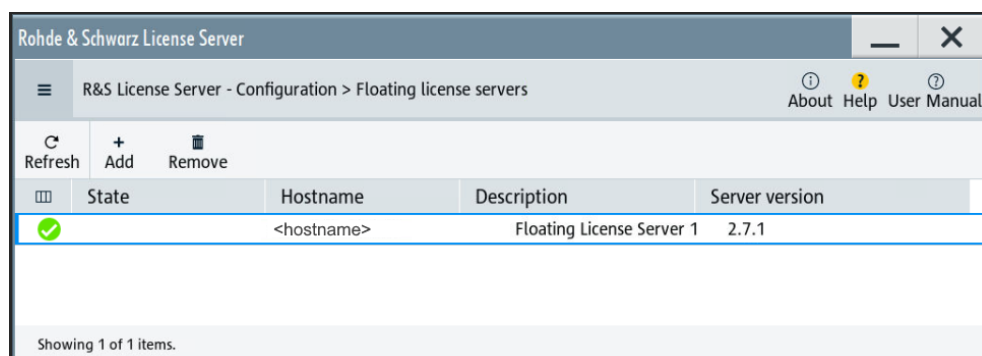

The access to the server is established.

### 11.5.3 How to occupy or extend a license

The R&S SMBV100B also supports the use of currently non-occupied software licenses provided by license servers of Rohde & Schwarz. When connected to one or more license servers, you can retrieve licenses for temporary installation and use directly on the instrument.

The following description shows how to assign and handle occupied licenses.

#### To occupy an option

The example shows how to occupy an LTE option for use in the instrument.





If all licenses are occupied, the license management of the instrument blocks the settings under "Occupy Free Licenses". But you can still extend the period of already occupied licenses, the instrument lists under "Renew Occupation Period", see ["To extend the occupation period for an option in use"](#) on page 591.

1. Access:

Select "System Config > Setup > Instrument Assembly > Manage License Keys > Occupy Licenses".

Manage License Keys					
New License		Installed License Keys		Occupy Licenses	
Occupy Option	Designation	All Licenses from Server	Occupied by Device	Occupation Period(s)	
0	<inst>-K55 ... LTE Release 8	17	0		
1	<inst>-K62 ... Additive White Gaussian Noise	2	2	7d, 23h	

The table displays one row per option, even if more than one license is available. Column "All Licenses from Server" shows the number of free licenses.

2. To access the configuration dialog, select "Occupy Option" in the corresponding row.

The subdialog for configuring the occupancy opens.

Occupy / Renew License: <inst>-K55			
<inst>-K55 (LTE Release 8)		All from Server: 17 / Occupied: 0 / Free: 1	
Occupy Free Licenses			
Select Free Licenses	1	Occupation Period	3 days
		<input type="button" value="+"/> Occupy	
Renew Occupation Period			

In the information field of the dialog, you can see the number of available licenses for the selected option. It is not yet installed on the instrument ("Occupied: 0"), and you can occupy options up to the number of free licenses.

- In the "Select Free Licences" field, set "1".
- In the "Occupation Period" field, select e.g. "3 days".
- Confirm and assign the selection with "Occupy".

Now you can use the option on the instrument. The number of available licenses on the servers is reduced by 2 for the set occupation period.



### To extend the occupation period for an option in use

If an option is already occupied, the R&S SMBV100B lists each option under "Renew Occupation Period".

1. Access: Navigate to the "Occupy / Renew License: ..." dialog, as described in "To occupy an option" on page 589.
2. To extend the occupation time, select the option in section "Renew Occupation Period".
3. Set the required time, e.g. "4 days".

The maximum period is 7 days.

## 11.5.4 How to move a portable license

This example is intended to explain how to perform the required steps at the instrument.

Use a USB flash drive to transfer the license key files between the instruments and the browser.



We assume knowledge about the handling of the R&S License Manager online tool and the description of the whole process.

1. Open your browser. Enter <https://extranet.rohde-schwarz.com/service>. Select "Manage Licenses > Move Portable License".  
The first step requires the Device IDs of the source and target instruments.
2. To find out the Device IDs, proceed as follows:
  - a) On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Device ID".



- b) On the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys".
  - c) In the "New License" tab, select "Device ID".  
In the "Manage License Keys" tab, select "Device ID".
  - d) In the browser, select "Manage Licenses > Move Portable License > Select Devices".
  - e) Enter the Device IDs.
3. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys > License Keys Table".
  - a) Navigate to the portable license that you want to move.
  - b) Select the "Export License to File" column.  
A standard file manager dialog opens.
4. Enter a filename.
5. Save the exported license key, e.g. `k123_portable_key_to_move.xml`.
6. In the browser, select "Manage Licenses > Move Portable License > Select License (from file)":
  - a) Select the exported license key.
  - b) Check the selection.
  - c) Create the deactivation key.
  - d) Save it to file.
7. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".  
Select the transferred deactivation key.
8. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New Licence > Export Deactivation Response to File".
9. In the browser, go to "Manage Licenses > Move Portable License > Install Deactivation Key (from file)".
10. Enter the deactivation response of the instrument.  
The license is deactivated for the source instrument.
11. In the "Manage Licenses > Move Portable License", go to step "Create License" to generate a license key for this portable option and the selected target instrument.
  - a) Download the license key as a file.
  - b) Transfer it to the target instrument.
12. In the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".
13. Select the created license key file.  
The portable option is installed on the target instrument.



## 11.6 Using the security settings

The protection function of the R&S SMBV100B offers several levels to activate particular functions like self-test or tests for service purposes specifically.

### Protection

The five protection levels are automatically active on startup that means all protected functions are locked.

To unlock a protection level:

- ▶ In the "System Config > Setup > Security > Protection" dialog, enter the correct password.

To lock a protection level:

- ▶ Clear the corresponding checkbox.

### Protection levels

The following functions are protected in the respective levels:

- **Protection level 1**  
Protects against accidental changes, like, for example, the clock and date, several internal adjustments functions and the self-test, as well as network settings or the instrument hostname.  
You can access this level with the password 123456.
- **Protection level 2**  
Unlocks protected service functions. It is accessible to authorized personnel of Rohde & Schwarz service department only.
- **Protection level 3 to 5**  
Are reserved for internal use.

### Security

The security concept of the R&S SMBV100B helps you to protect your instrument against uncontrolled access and changes. All provided security services require that you enter the security password.

Provided security services are:

- **General** security parameters, such as:
  - **USB storage** that secures controlled access to the mass memory of the instrument
  - **Volatile mode** that prevents information to be written to the internal memory permanently.
  - **Sanitizing** that prevents the instrument from leaving a secure environment with stored user information.
  - **Annotation** frequency and amplitude prevent reading the display.
  - **Secure Update Policy** check that verifies the integrity and origin of the firmware package to be installed.



To access the settings of these topics, see [Setting security parameters](#) > ["Secure Update Policy"](#) on page 596.

- **Password** management secures controlled user access to the instrument  
With the two-step password concept, you can assign a user-defined password for the operating system, and a security password for accessing the mass storage of the instrument.  
See [Chapter 11.6.4, "Password management"](#), on page 603.
- **LAN services** secure controlled network access  
You can individually lock and unlock supported LAN interface services, including the SMB client and SMB server that use versions 1.0 and 2.0 of the SMB protocol. Remote control over LAN requires you have enabled the interface, but you can disable not needed LAN services individually.  
**Note:** Disabling LAN services needed for remote control over LAN locks the instrument access persistently. You cannot address the instrument any longer.  
See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
- **User interface** prevents front panel operation and/or reading the display.

For more information, see the document R&S SMBV100B Instrument Security Procedures.

### 11.6.1 Protection level settings

Access:

- Select "System Config > Setup > Security > Protection".

Protection Level 1	<input checked="" type="checkbox"/>	<div> <div>Password</div> <div>*****</div> </div>
Protection Level 2	<input checked="" type="checkbox"/>	<div> <div>Password</div> <div>*****</div> </div>
Protection Level 3	<input checked="" type="checkbox"/>	<div> <div>Password</div> <div>*****</div> </div>
Protection Level 4	<input checked="" type="checkbox"/>	<div> <div>Password</div> <div>*****</div> </div>
Protection Level 5	<input checked="" type="checkbox"/>	<div> <div>Password</div> <div>*****</div> </div>

The "Protection" dialog provides access to the unlocking of different protection levels.

Several functions in the instrument are password-protected to prevent for example accidental changes, ["Protection"](#) on page 593.

The remote commands required to unlock a protected stage are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

#### Protection Level/Password

Unlocks the selected level of protection, if you enter the correct password.

The default protection level 1 password is 123456.



To lock the protection level again, clear the checkbox.


Remote command:

`:SYSTem:PROTect<ch>[:STATe]` on page 1039

## 11.6.2 Setting security parameters

Access:

- Select "System Config > Setup > Security > Security > General".

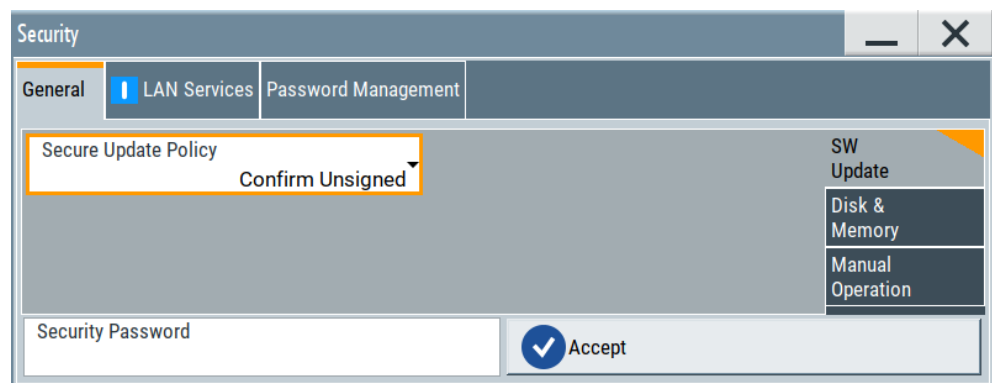

In the "General" tab, you can determine the security level for firmware updates, and configure the security settings for the mass memory and manual operation.




All modified settings in this dialog are not applied until you enter the [Security Password](#) and confirm with [Accept](#).

### 11.6.2.1 Update policy security settings

Access:

- Select "System Config > Setup > Security > Security > General > SW Update".

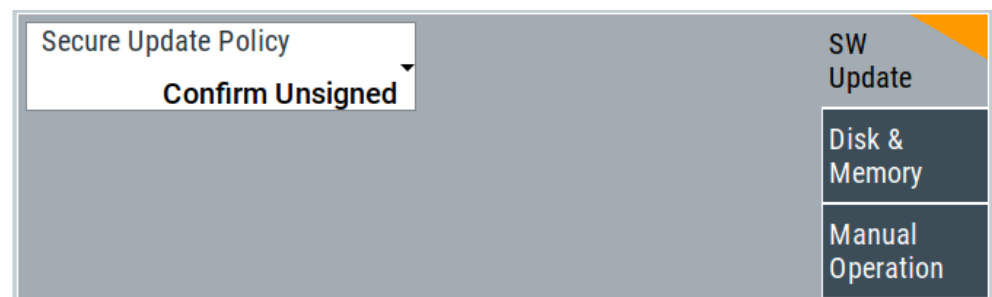

The SW Update tab enables you to select the security mode for firmware updates.

The remote commands available to control security settings are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.



**Secure Update Policy**

Allows you to configure the automatic signature verification for firmware installation.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also:

- [Chapter 11.6, "Using the security settings"](#), on page 593 for more information on the security concept.
- The release notes for details on signature verification when installing new or former firmware versions, available at [www.rohde-schwarz.com/firmware/smbv100b](http://www.rohde-schwarz.com/firmware/smbv100b).

**"Confirm Unsigned"**

Performs the signature verification.

If the check detects any discrepancies, the instrument issues a warning message. You can still update the firmware or reject updating.

This setting also enables you to downgrade the firmware version.

**"All Packages"** Accepts all packages without signature verification.

**"R&S Signed Packages"**

Performs the signature check.

If the check detects any discrepancies, the instrument issues a warning message and locks the update to this firmware.


Remote command:

`:SYSTem:SECurity:SUPolicy` on page 1051

**11.6.2.2 Disk & memory security settings**

Access:

- Select "System Config > Setup > Security > Security > General > Disk & Memory".

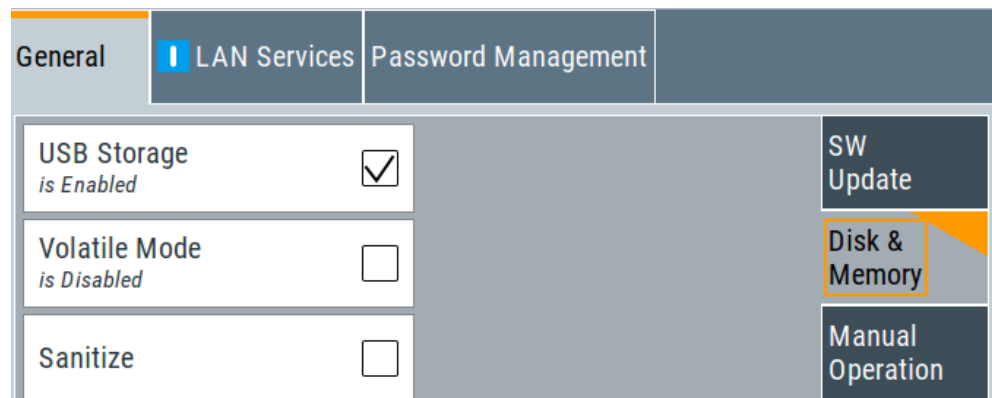

The "Disk & Memory" tab secures controlled access to the mass memory and prevents information from leaving a secure environment.

The remote commands available to control security settings are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.



### USB Storage

Activates the access to external USB storage media.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also [Chapter 10.9.4, "Using a USB storage device for file transfer"](#), on page 540.

**Note:** Remove all USB memory devices before disabling the USB storage. If any USB memory device remains connected, disabling is blocked, and the instrument returns a warning message.


### Volatile Mode

Activates volatile mode, so that no user data can be written on the internal memory permanently.

In volatile mode:

- Data that the instrument normally stores on the internal memory is redirected to volatile memory.
- The user directory is mapped to the volatile memory. You access the temporary data just as data stored in the `/var/user/`, see [Chapter 10.3, "Protecting data"](#), on page 517.
- Data on the internal memory cannot be changed. It is protected against modification or erasure.
- You can only save data:
  - Temporarily in the volatile memory
  - On a connected external storage device, such as a memory stick

To activate volatile mode: enter the security password, confirm with "Accept" and reboot the instrument. Otherwise the change has no effect.

Activated volatile mode is indicated by the icon .

Remote command:

`:SYSTem:SECurity:VOLMode[:STATe]` on page 1051

### Sanitize

Executes the erase procedure that sanitizes the internal memory.

The sanitizing function makes sure that no user information is stored on the instrument when it leaves the secure environment.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

**Note:** If the instrument is subject to high security, and you have disabled volatile mode, the internal memory holds user-data, and thus poses a security risk.

See also [Chapter 11.6, "Using the security settings"](#), on page 593 for more information on the security concept.

Remote command:


`:SYSTem:SECurity:SANitize[:STATe]` on page 1050



### 11.6.2.3 Manual operation security settings

Access:

- Select "System Config > Setup > Security > Security > General > Manual Operation".

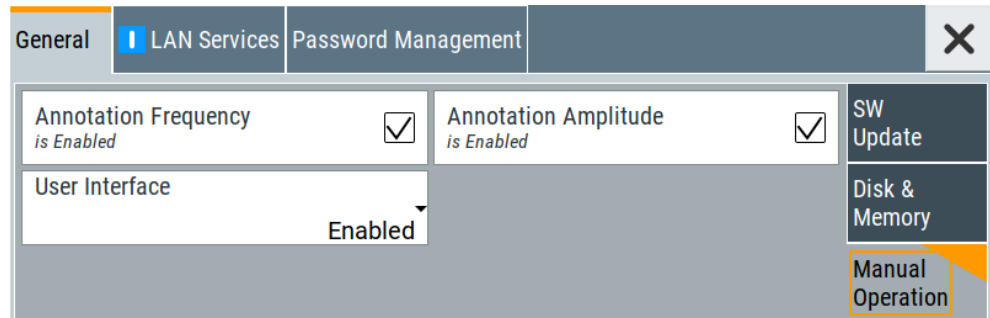

The "SW Update" tab enables you to lock front panel operation and/or reading the display.

The remote commands available to control security settings are described in:

- [Chapter 13.10, "DISPlay subsystem"](#), on page 732
- [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

#### Annotation Frequency

Enables the display of the currently used frequency in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 608.

Remote command:

`:DISPlay:ANNotation:FREQuency` on page 734

#### Annotation Amplitude

Enables the display of the currently selected level in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 608.

Remote command:

`:DISPlay:ANNotation:AMPLitude` on page 734

#### User Interface

Allows you to lock the controls for manual operation and the display individually.

How to: see ["Deactivating the user interface"](#) on page 608.

See also [Chapter 11.6, "Using the security settings"](#), on page 593.

"Enabled" Enables the display and all controls for the manual operation of the instrument.



**"Touchscreen Off"**

Locks the touch sensitivity of the screen.

This security feature protects the instrument against unintentional change of settings by accidentally touching of the screen.

Still available controls for manual operation are:

- The keys at the front panel, including the rotary knob
- The external mouse and keyboard
- Remote operation over VNC


The instrument indicates the locked touchscreen by an icon .

Unlocking is possible via VNC, external controls or remote control.

**"VNC Only"**

Locks the keys at the front panel, the touchscreen and externally connected keyboard and mouse.

The display on the screen remains and shows the current settings and changes.

The instrument indicates the activated "VNC only" feature by the icon .

Unlocking is possible via VNC or turning off and on again.

**"Display Only"**

Locks the manual operation of the instrument. The display on the screen remains and shows the current settings and changes.

This security feature protects the instrument against unauthorized access, but still shows the current settings and processes, for example when you operate the instrument via remote control.

The function disables:

- The touchscreen functionality of the display
- The keys at the front panel of the instrument
- The external mouse and keyboard

The instrument indicates the locked controls by a padlock  softkey.

How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 608.

**"Disabled"**

Locks the display and all controls for the manual operation of the instrument.

This security feature protects the instrument against unauthorized reading and access, for example when you operate the instrument via remote control.

The function disables:

- The display
- The touchscreen
- The keys at the front panel of the instrument
- The external mouse and keyboard

The screen shuts off and displays a padlock symbol  instead.

How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 608.

Remote command:

:SYSTem:ULOCK on page 1037

:SYSTem:DLOCK on page 1036

:SYSTem:KLOCK on page 1036



### Enabling a locked user interface for manual operation

Follow the instructions listed in ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 608.

Remote command:

:SYSTem:ULOCK on page 1037

:SYSTem:DLOCK on page 1036

:SYSTem:KLOCK on page 1036

## 11.6.3 Configuring LAN services

Access:

1. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
2. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.

Do not disable the LAN interface or LAN services needed for remote control while you operate the instrument remotely.

Proceed with [step 4](#) for troubleshooting disabled services.

LAN Services			Common Services
LAN	<input checked="" type="checkbox"/>		
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Enabled</i>	<input checked="" type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Enabled</i>	<input checked="" type="checkbox"/>
HTTP <i>is Enabled</i>	<input checked="" type="checkbox"/>	Remote Support <i>is Disabled</i>	<input type="checkbox"/>
		Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>
		Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>
Security Password			<input checked="" type="checkbox"/> Accept

In the "Common Services" side tab, you can individually disable the supported services of the LAN interface.

3. Disable LAN services as needed.
  - a) Disable the service.
  - b) To confirm disabling, enter the security password.
  - c) Select "Accept".
4. If you have locked the access accidentally, you have the following options:
  - Update the instrument firmware using ISO image (`<instrument>_<version-number>.iso`).

**Note:** A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data.




Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.

- Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without losing user-specific settings and data.

See <http://www.services.rohde-schwarz.com>.

5. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".

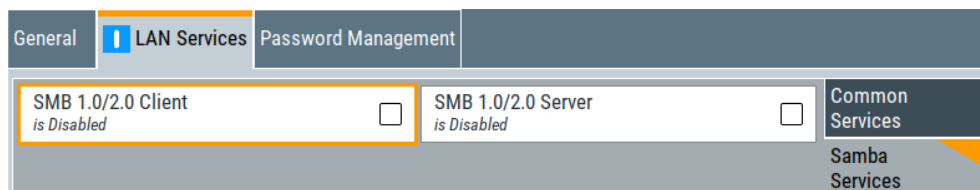

In the "Samba Services" side tab, you can activate former versions of the SMB client and SMB server.

The remote commands available to control security settings are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

How to:

- ["Disabling the LAN interface"](#) on page 607
- ["Disabling LAN services"](#) on page 607
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 608

Common Services.....	601
L LAN.....	601
L LAN Services.....	601
Samba Services.....	603
L SMB 1.0/2.0 Client.....	603
L SMB 1.0/2.0 Server.....	603
Security Password.....	603
Accept.....	603

### Common Services

Enables the LAN interface and supported LAN interface services.

#### LAN ← Common Services

Enables the LAN interface in general, and thus provides remote access over all unlocked services.

Remote command:

`:SYSTem:SECurity:NETWork[:STATe]` on page 1050

#### LAN Services ← Common Services

Enables the supported LAN interface services individually.



**"SCPI over LAN"**

Access over LAN to control the instrument remotely, by using SCPI (Standard Commands for Programmable Instruments) commands. See also ["To start remote control with R&S VISA"](#) on page 670.

Remote command:

[:SYSTem:SECurity:NETWork:SOE\[:STATe\]](#) on page 1049

**"VNC"**

Access over VNC (Virtual Network Computing) interface, a graphical desktop sharing system that uses RFB protocol to control the instrument remotely.

See also [Chapter 12.14, "To operate the instrument using VNC"](#), on page 686.

Remote command:

[:SYSTem:SECurity:NETWork:VNC\[:STATe\]](#) on page 1050

**"SSH (SCP)"**

Access over SSH (Secure Shell), a network protocol for secure data communication.

Remote command:

[:SYSTem:SECurity:NETWork:SSH\[:STATe\]](#) on page 1049

**"Remote Support"**

Remote support over SSH (SCP).

The service provides communication for service purposes only.

Remote command:

[:SYSTem:SECurity:NETWork:REMSupport\[:STATe\]](#)  
on page 1048

**"HTTP"**

Access with HTTP (Hyper Text Transfer Protocol), the application protocol for hypermedia information systems.

Remote command:

[:SYSTem:SECurity:NETWork:HTTP\[:STATe\]](#) on page 1048

**"FTP"**

Access with FTP (File Transfer Protocol), used to transfer files from a host to the instrument and vice versa.

See also [Chapter 10.9.2, "Accessing the file system of the R&S SMBV100B over FTP"](#), on page 537.

Remote command:

[:SYSTem:SECurity:NETWork:FTP\[:STATe\]](#) on page 1047

**"SMB (Samba)"**

Access to SMB (Server Message Block), used for providing shared access to files, printers and serial ports of a network.

See also [Chapter 10.9.3, "Accessing the R&S SMBV100B file system using SMB \(Samba\)"](#), on page 538.

Remote command:

[:SYSTem:SECurity:NETWork:SMB\[:STATe\]](#) on page 1049

**"Avahi (Zeroconf)"**

Avahi, a service for automatic configuration of the instrument in a network environment.

Remote command:

[:SYSTem:SECurity:NETWork:AVAHi\[:STATe\]](#) on page 1047



**"Software Update"**

Allows updating the software.

Remote command:

`:SYSTem:SECurity:NETWork:SWUpdate[:STATe]`

on page 1050

**Samba Services**

Enables support of SMB client and SMB server version 1.0 and 2.0 of the SMB protocol.

Support of version 1.0 and 2.0 is additional to the current SMB protocol version supported in the firmware. This firmware supports SMB protocol up to version 3.1.1.

**SMB 1.0/2.0 Client ← Samba Services**

Enables support of the SMB client compatible with SMB protocol versions 1.0 and 2.0.

**SMB 1.0/2.0 Server ← Samba Services**

Enables support of the SMB server compatible with SMB protocol versions 1.0 and 2.0.

**Security Password**

Enters the password that is required to enable or to disable the settings protected by a security password. Default is 123456.

How to: ["Changing the default security password"](#) on page 607

**Accept**


Applies the modified settings, provided the security password is entered and correct.

## 11.6.4 Password management

Access:


1. Select "System Config > Setup > Security > Security > Password Management > User Password".



General	<b>LAN Services</b>	Password Management	
Valid for VNC, FTP and SMB (Samba) access			User Password
User Name			Security Password
instrument			
Old Password			
New Password			
Confirm Password			
 Change Password			

In this tab, you can assign the security and a user-defined password.

2. Select "System Config > Setup > Security > Security > Password Management > Security Password".

General	<b>LAN Services</b>	Password Management	
Old Password			User Password
New Password			Security Password
Confirm Password			
 Change Password			

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

#### User Name

Indicates the user name used for access to the Linux operating system and valid for VNC, FTP and SMB (Samba) access.



**User Password**

Access: select "System Config > Setup > Security > Security > Password Management > User Password".

Allows you to change and confirm the user password.

**Old Password ← User Password**

Enters the current user password. The default password is "instrument".

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

**Note:** Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 14.10, "Contacting customer support"](#), on page 1087.

**New Password ← User Password**

Enters the new user password.

The security password can contain decimal characters only.

**Confirm Password ← User Password**

Confirms the new user password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

**Change Password ← User Password**

Changes the user password accordingly.

**Security Password**

Access: select "System Config > Setup > Security > Security > Password Management > Security Password".

Enables you to change and confirm the security password.

**Old Password ← Security Password**

Enters the currently used security password. The default password is '123456'.

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

The security password is required when changing the status of the USB and LAN interface or other security settings.

**Note:** Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 14.10, "Contacting customer support"](#), on page 1087.



**New Password ← Security Password**

Enters the new security password.

The security password can contain decimal characters only.

**Confirm Password ← Security Password**

Confirms the new security password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

**Change Password ← Security Password**

Changes the password accordingly.

## 11.6.5 How to prevent unauthorized access

The default computer name and user password are *instrument*. The user password is the password required for VNC, FTP and SMB (samba) connections. If for example, the VNC service or FTP are enabled, anyone in the network who knows the computer name and user password of the instrument can access it.

The default security password is 123456. The security password is required when changing the status of the USB and LAN interfaces.

To prevent unauthorized access, use the following configurations exclusively or complementary:

- ["Changing the default user password of the instrument"](#) on page 606
- ["Changing the default security password"](#) on page 607
- ["Disabling the LAN interface"](#) on page 607
- ["Disabling LAN services"](#) on page 607
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 608
- ["Disabling the frequency and level indication in the status bar"](#) on page 608
- ["Deactivating the user interface"](#) on page 608

If security is a concern, see the document instrument security procedures for comprehensive description.

**Changing the default user password of the instrument**

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
  - ["Changing the default security password"](#) on page 607.
- a) Select "System Config > Setup > Security > Security > Password Management > User Password".
  - b) Enter the current password in the "Old Password" field.
  - c) Enter the new password in the "New Password" and "Confirm Password" fields.



- d) Select "Change Password".

The user password is changed; the user name is displayed ("Security > Password Management > User Password > User Name").

### Changing the default security password

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
  - ["Changing the default security password"](#) on page 607.
- a) Select "System Config > Setup > Security > Security > Password Management > Security Password".
  - b) Enter the current password in the "Old Password" field.  
The default password is 123456.
  - c) Enter the new password in the "New Password" and "Confirm Password" fields.
  - d) Select "Change Password".

### Disabling the LAN interface

1. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or certain services lock the remote access to the instrument.

The following services lock the remote access when disabled: "LAN", "SCPI over LAN", "VNC" and "HTTP".

If you have locked the access accidentally, you have the following options:

- Update the instrument firmware using ISO image  
(`<instrument>_<version-number>.iso`).  
**Note:** A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data.  
Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.
- Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without loosing user-specific settings and data.  
See <http://www.services.rohde-schwarz.com>.

2. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
3. Select "LAN > Off".

All LAN connections and hence all LAN services are disabled.

### Disabling LAN services

1. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
2. Select, for example, "FTP > Off" or "VNC > Off".



3. Enter the [Security Password](#).
4. Select "Accept".

### Activating SMB version 1.0/2.0 client and server

By default, support of SMB client and SMB server of the SMB protocol versions 1.0 and 2.0 is deactivated.

Activate support only, if needed:

1. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".
2. Select "SMB 1.0/2.0 Client > On" and "SMB 1.0/2.0 Server > On".
3. Enter the [Security Password](#).
4. Select "Accept".

### Disabling the frequency and level indication in the status bar

These settings are useful to prevent unauthorized personnel from reading the display, when you remotely control the instrument from a different location.

1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "Annotation Frequency > Off" or "Annotation Amplitude > Off".
3. Enter the [Security Password](#).
4. Select "Accept".

### Deactivating the user interface

1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "User Interface > Disabled".
3. Enter the [Security Password](#).
4. Select "Accept".

The screen shuts off and displays a padlock symbol  instead.


There are further possible configurations. For details, see ["User Interface"](#) on page 598.

### Unlocking (reactivating) the user interface for manual operation

1. In manual operation:



- a) On the instrument's keypad or external keyboard, press any key.  
The instrument prompts you to enter the security password for unlocking.

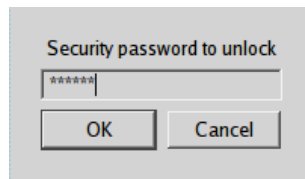

If you press the character of the first key, the input field accepts the character immediately.

- b) Delete the entry before inserting the password.  
Enter the security password **123456**.

2. In remote control mode:

- a) Send the command `SYST:ULOC ENABled` to release all locks at once.
- b) Send the command `SYST:KLOC OFF` to unlock the keyboard and touchscreen.
- c) Send the command `SYST:DLOC OFF` to release all locks.

Via remote control, there is no password required.

## 11.7 Undoing or restoring actions

"Undo" is a function that removes the effect of the last action on the instrument and reverts it to an older state. Conversely, "Redo" restores a previously undone action.


You can "Undo/Redo" actions according to two criteria:

- Step by step  
Gradually undo/redo the actions in reverse order as previously performed.  
Depending on the available memory the "Undo/Redo" steps may restore all actions.
- Multiple steps at once  
Select any specific action in the history list to "Undo/Redo" multiple actions in a single step.  
**Note:** This mode requires a system restoration file on the instrument.



Access:

- ▶ Select "Setup > Settings > Undo/Redo".

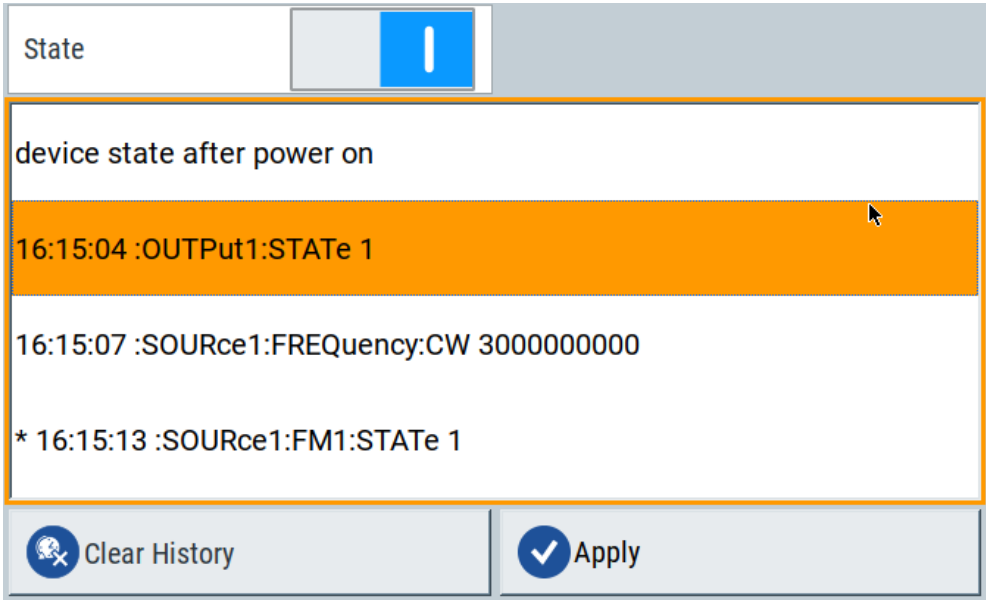

The dialog contains all functions for enabling the "Undo/Redo" functionality.

Settings:

State.....	610
History List.....	610
Clear History.....	610
Apply.....	610

**State**  
Enables the recording of the performed actions.

**History List**  
Lists the performed actions, provided "Undo/Redo" state is "On".

**Clear History**  
Deletes the recorded list of the performed steps.

**Apply**  
Performs the "Undo/Redo".  
  
If you select a previously performed action of the list, all subsequent actions are undone. The list entries remain.  
  
If you select a subsequently executed action, you can restore all the actions undone up to this state.



## 11.8 Shutting down and rebooting the instrument

On the front panel, the [On/Standby] key switches the instrument from the standby to the ready state or vice versa. In remote operation from a remote computer or in manual control, there is another possibility to shut down the instrument or to reboot the system.

Access:

- Select "System Config > Setup > Maintenance > Shut down".



Remote control commands:

- `:SYSTem:REBoot` on page 1057
- `:SYSTem:SHUTdown` on page 1058



## 12 Network operation and remote control

As an alternative to the interactive operation directly at the instrument, you can operate the R&S SMBV100B also from a remote location.

The various interfaces provide flexible access to the instrument, such as *remote control*, *remote operation* or *remote file access*. These remote access modes are fundamentally different, although they are often considered interchangeable, as described in [Overview of remote access modes](#).


[Figure 12-1](#) shows the possibilities of the physical connection (interfaces) for remote access.



The following descriptions provide information required for operating the R&S SMBV100B remotely. The information applies to all applications and operating modes supported by the instrument. Definitions specified in the SCPI standard are not provided.

For basic knowledge on remote control operation and additional information, see the following documents, available on the Rohde & Schwarz website:

- [Remote control via SCPI](#)
- [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#)
- [1MA208: Fast Remote Instrument Control with HiSLIP](#)

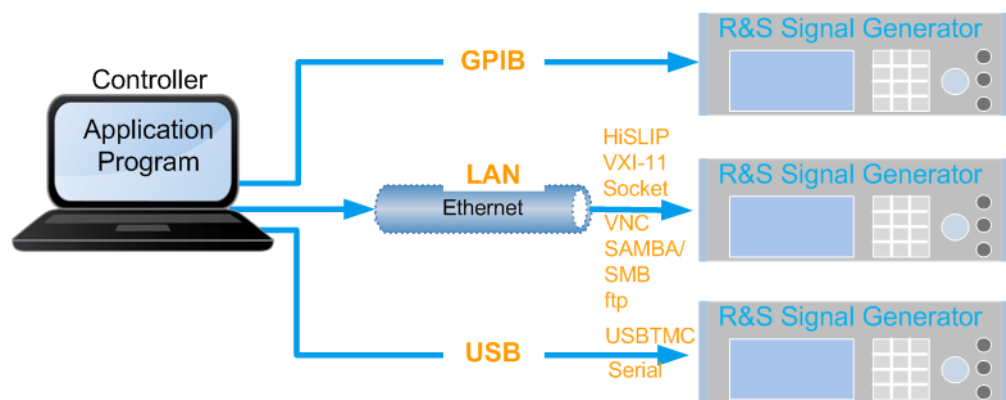

**Figure 12-1: Supported remote connections**

• <a href="#">Overview of remote access modes</a> .....	613
• <a href="#">Remote control interfaces and protocols</a> .....	614
• <a href="#">Remote control programs and libraries</a> .....	619
• <a href="#">Status reporting system</a> .....	622
• <a href="#">Remote access settings</a> .....	631
• <a href="#">LXI settings</a> .....	654
• <a href="#">To configure the instrument for remote access</a> .....	661
• <a href="#">To establish a remote control session over LAN</a> .....	666
• <a href="#">To establish a remote control session over GPIB</a> .....	674
• <a href="#">To establish a remote control session over USB</a> .....	674



• <a href="#">To trace messages with the LXI web browser interface</a> .....	675
• <a href="#">To return to manual operation</a> .....	676
• <a href="#">To automate tasks with remote command scripts</a> .....	676
• <a href="#">To operate the instrument using VNC</a> .....	686
• <a href="#">References</a> .....	692

## 12.1 Overview of remote access modes

This section outlines the possible access modes and their major characteristics.

### Remote control (SCPI)

- A remote PC controls the instrument, usually via VISA (Virtual Instrument Software Architecture) interfaces.
- Remote control disables the manual operation of the instrument; you can set different lock states.
- The GUI is not visible.
- Remote control commands (SCPI) perform the settings, either individually or in sequences (SCPI programs).
- Using SCPI programs is faster than the manual operation, since they automate repeating applications.

### Remote operation (VNC)

- A remote device accesses the instrument via the common platform technology VNC (Virtual Network Computing).
- The protocol allows simultaneous operation from several remote devices and the instrument nevertheless remains locally operable.
- The GUI is visible.
- To perform the settings, you can operate the instrument as with the manual control.
- During remote operation via VNC, the direct control of the instrument is not disabled.  
You can control the instrument from the front panel and via the remote computer alternately.
- Clients supporting remote operation depend on the used remote device, see [Table 12-1](#).
- How to: see [Chapter 12.14, "To operate the instrument using VNC"](#), on page 686.



Table 12-1: Supported VNC operation modes

Remote device	VNC client	Requirements	Characteristics
Desktop (Windows, Linux, Mac™OS)	<ul style="list-style-type: none"> <li>Ultr@VNC</li> <li>Other dedicated client software</li> </ul>	<i>Ultr@VNC or Client Software</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> <li>Any web browser</li> </ul>	<i>Java Runtime</i> must be installed and activated in the browser settings.	Fast and convenient - only the instrument address required. Java runtime is sometimes considered as security concern.
	<ul style="list-style-type: none"> <li>Web browser with HTML5</li> </ul>	<i>Web sockets</i> must be supported.	Slower than the other modes. No additional installation or activation required. No security concern.
Smart device (Tablet/ smartphone)	<ul style="list-style-type: none"> <li>Dedicated client App</li> </ul>	<i>App</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> <li>Web browser with HTML5</li> </ul>	<i>Web sockets</i> must be supported.	Support of QR code scanning Slower than a dedicated App.

**Remote file access (FTP, SAMBA/SMB)**

- A remote client accesses the instrument's file system, using the protocols FTP (file transfer protocol) and SAMBA/SMB (server message block).
- The protocols enable you to transfer files from or to the instrument and to get direct access to its file sharing directory *share*.

How to:

[Chapter 10.9, "How to transfer files from and to the instrument"](#), on page 535.

["Activating SMB version 1.0/2.0 client and server"](#) on page 608

## 12.2 Remote control interfaces and protocols

The instrument supports various interfaces for remote control. [Table 12-2](#) gives an overview on the connectivity:



Table 12-2: Remote control interfaces and protocols

Interface	Protocols, VISA <sup>*)</sup> address string and library	Remarks
Local area network (LAN)	<ul style="list-style-type: none"> <li>• <b>HiSLIP</b> High-Speed LAN Instrument Protocol (IVI-6.1) TCP/IP::host address::hislip0[::INSTR] VISA</li> <li>• <b>VXI-11</b> TCP/IP::host address[:: LAN device name][::INSTR] VISA</li> <li>• <b>Socket communication</b> (Raw Ethernet, simple Telnet) TCP/IP::host address[:: LAN device name]::&lt;port&gt;::SOCKET VISA or socket controller</li> </ul>	<p>The LAN connector is at the rear panel of the instrument.</p> <p>The interface is based on TCP/IP, see <a href="#">Chapter 12.2.1, "LAN interface"</a>, on page 615 for details on the address information.</p>
USB	<ul style="list-style-type: none"> <li>• <b>USBTMC</b> USB::&lt;vendor ID&gt;::&lt;product ID&gt;:: &lt;serial number&gt;[::INSTR] VISA</li> </ul>	<p>The USB In connector is at the rear panel of the instrument.</p> <p>For a description of the interface, see <a href="#">Chapter 12.2.2, "USB interface"</a>, on page 617</p>
GPIB (IEC/IEEE Bus Interface)	<ul style="list-style-type: none"> <li>• VISA<sup>*)</sup> address string: GPIB::&lt;address&gt;[::INSTR] (no secondary address) VISA (optional)</li> </ul>	<p>The optional GPIB bus interface according to standard IEC 625.1/IEEE 488.1 is at the rear panel of the instrument.</p> <p>For a description of the interface, see <a href="#">Chapter 12.2.3, "GPIB interface (IEC/IEEE bus interface)"</a>, on page 618.</p>

<sup>\*)</sup> VISA (Virtual Instrument Software Architecture) is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control over LAN (when using VXI-11 or HiSLIP protocol), USB and serial interface. When using socket communication or the GPIB interface, VISA installation is optional. For basic information, see [Remote control via SCPI](#).



<http://www.rohde-schwarz.com/rsvisa> provides the standardized I/O software library R&S VISA for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to: [Chapter 12.8, "To establish a remote control session over LAN"](#), on page 666 describes how to configure the remote control interfaces.

- [LAN interface](#)..... 615
- [USB interface](#)..... 617
- [GPIB interface \(IEC/IEEE bus interface\)](#)..... 618
- [LXI browser interface](#)..... 619

## 12.2.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols.

For remote control, the PC and the instrument must be connected over the LAN interfaces to a common network with TCP/IP network protocol. The instruments are connected using a commercial RJ45 cable (shielded or unshielded twisted-pair category 5). The TCP/IP network protocol and the associated network services are preconfig-



ured on the instrument. Software for instrument control and, if necessary, the VISA program library must be installed on the controller.



### Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by the resource string.

#### 12.2.1.1 VISA resource strings

The VISA resource string is required to establish a communication session between the controller and the instrument in the LAN. The resource string is a unique identifier, composed of the specific IP address of the instrument and some network and VISA-specific keywords.

**TCPIP::<host address>[:<LAN device name>][:INSTR]**

TCPIP	= designates the network protocol
host address	= designates the IP address or hostname of the instrument
[:LAN device name]	= defines the protocol and the instance number of a subinstrument
[:INSTR]	= indicates the instrument resource class (optional)

The **IP address** (host address/computer name) is used by the programs to identify and control the instrument. It is automatically assigned by the DHCP server the first time the device is registered in the network. Optionally, you can also assign its **LAN device name**.

If assigned, the IP address is displayed in the block diagram. You can adjust it manually with the parameter the "System Config > Remote Access > Network" > [IP Address Enabling a locked user interface for manual operation](#).

The following section lists the characteristics of the VISA resource strings for the corresponding interface protocols. The emphasized characters determine the protocol.



For description of the interface protocols, control commands and messages, refer to [Remote control via SCPI](#).

### HiSLIP

**TCPIP::<host address>::hislip0[:INSTR]**

hislip0 = HiSLIP device name, designates that the interface protocol HiSLIP is used (mandatory)

**hislip0** is composed of `[::HiSLIP device name[,HiSLIP port]]` and must be assigned.

#### Example:

**TCPIP::192.1.2.3::hislip0**



## VXI-11

TCPIP::**<host address>**::**inst0**::INSTR]

[::inst0] = LAN device name, indicates that the VXI-11 protocol is used (optional)

**inst0** currently selects the VXI-11 protocol by default and can be omitted.

### Example:

TCPIP::192.1.2.3::INSTR

## Socket communication

TCPIP::**<host address>**::**<port>**::SOCKET

port = determines the used port number

SOCKET = indicates the raw network socket resource class

Socket communication requires the specification of the port (commonly referred to as port number) and of "SOCKET" to complete the resource string.

Basically, instruments from Rohde & Schwarz use port number 5025 for socket communication.

### Example:

TCPIP::192.1.2.3::5025::SOCKET

## 12.2.2 USB interface

For remote control using USB, the controller PC and the instrument must be connected over the USB type B interface. Software for instrument control and the VISA program library must be installed on the controller.

The serial interface "RS232" enables you to connect the instrument over serial interface. You can connect to the interface by using the external USB/serial-adapter R&S TS1-USB (see recommended extras in the data sheet) and a serial crossover (null modem) cable.

VISA detects and configures the Rohde & Schwarz instrument automatically when the USB connection is established. You do not have to install a separate driver.

USBTMC (USB Test & Measurement Class Specification) is a protocol that is built on top of USB for communication with USB devices. It defines class code information of the instrument, that identifies its functionality to load the respective device driver. Using VISA library, the protocol supports service request, trigger, and other specific operations.



### 12.2.2.1 USB resource string

The resource string represents an addressing scheme that is used to establish a communication session with the instrument. It is based on the instrument address and some instrument- and vendor-specific information.

The USB resource string syntax is as follows:

**USB::<vendor ID>::<product ID>::<serial number>[:INSTR]**

USB = denotes the used interface  
 <vendor ID> = is the manufacturer ID for Rohde & Schwarz  
 <product ID> = is the product identification of the instrument  
 <serial number> = is the individual serial number at the rear of the instrument  
 [:INSTR] = indicates the instrument resource class (optional)

To set the USB resource string, see [Remote access settings](#).

**Example:**

USB::0x0AAD::0x01df::100001::INSTR

0x0AAD is the vendor ID for Rohde & Schwarz.

0x01df is the product ID for the R&S SMBV100B

100001 is the serial number of the particular instrument.

### 12.2.2.2 RS232 resource string

The RS232 resource string represents the addressing scheme for a device connected to the serial interface of the instrument.

The RS232 resource string syntax is as follows:

**ASRL<port number>[:INSTR]**

ASRL is the name of the serial interface

<port number> is the number of the serial interface

**Example:**

ASRL1::INSTR

### 12.2.3 GPIB interface (IEC/IEEE bus interface)

To control the R&S SMBV100B over the GPIB bus, the instrument and the controller PC must be connected with a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the used programming language must be installed on the controller.



For description of the characteristics, control commands and messages of the GPIB interface, refer to [Remote control via SCPI](#).



### GPIO address

The controller PC addresses the instrument with the GPIO bus channel, see [Chapter 12.5.3, "GPIO address settings"](#), on page 638. GPIO provides channel addresses from 0 to 30.

The GPIO resource string syntax is as follows:

`GPIO:://<channel>[:INSTR]`

GPIO	= denotes the used interface
<channel address>	= the used channel
[:INSTR]	= indicates the instrument resource class (optional)

**Note:** If the VISA implementation supports the GPIO interface, you can optionally define the VISA Instrument Control Resource (INSTR). It is used to define the basic operations and attributes for a device, such as reading, writing, or triggering.

#### Example:

`GPIO::28::INSTR`

28 is the selected GPIO bus channel

## 12.2.4 LXI browser interface

The LXI browser interface allows easy configuration of the LAN and remote control of the R&S SMBV100B without additional installation requirements. The instrument's LXI browser interface works correctly with all W3C compliant browsers.

See [Chapter 12.15.1, "LXI functionality"](#), on page 692 for more about LXI.

The LAN settings are configured using the instrument's LXI browser interface described in [Chapter 12.6.2.1, "LAN configuration"](#), on page 656.

## 12.3 Remote control programs and libraries

This section shows how the remote-control programs access the instrument, and the libraries they require for the corresponding interface protocols.



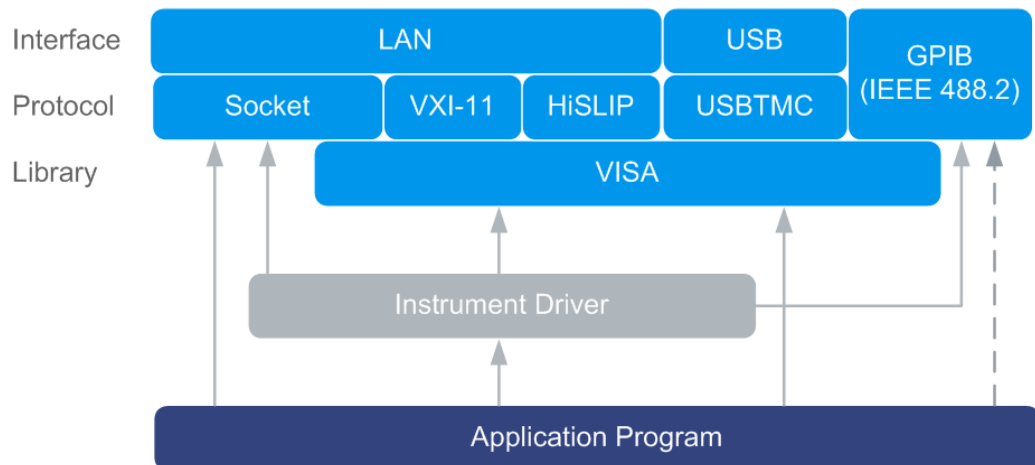


Figure 12-2: Overview of remote control interfaces, protocols and libraries

### Possible setups and access functions

The following examples give an overview of dependencies between the available libraries, the possible interfaces and protocols, and whether an instrument driver is provided. For detailed information, see the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

#### Example: Remote control (application) program using VISA

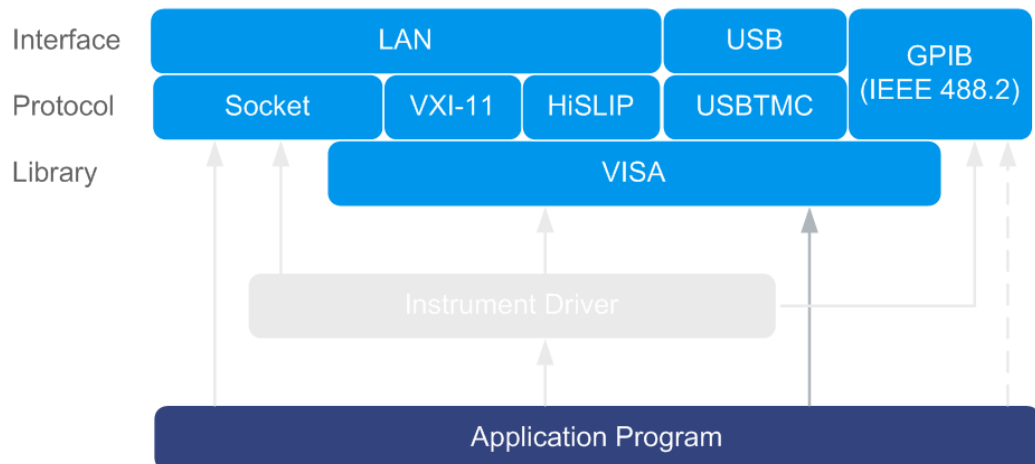



Figure 12-3: Application program using VISA

Protocol	Remote control program
Socket	<pre>viOpen (... , "TCPIP:SMBV100B-102030::5025::SOCKET", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
VXI-11	<pre>viOpen (... , "TCPIP:SMBV100B-102030::inst0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>



Protocol	Remote control program
HiSLIP	<pre>viOpen (... , "TCPIP:SMBV100B-102030::hislip0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
USBTMC	<pre>viOpen (... , "USB::0x0AAD::0x01df::100001::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
GPIB	<pre>viOpen (... , "GPIB::28::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>

**Example: Remote control program using instrument driver (VISA available)**

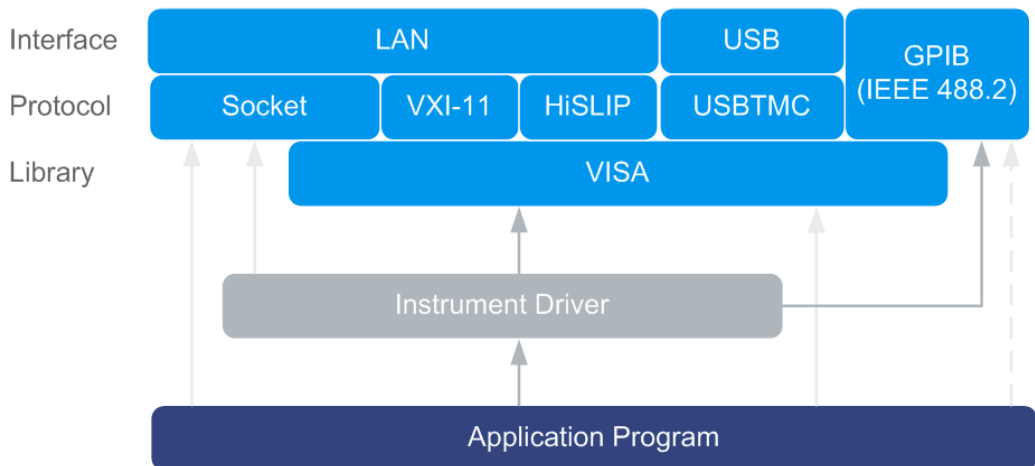

**Figure 12-4: Application using instrument driver (VISA available)**

Protocol	Remote control program
Socket	<pre>rssmbv_init ("TCPIP:SMBV100B-102030::5025::SOCKET", ...) rssmbv_SetFrequency (... , 2e9)</pre>
VXI-11	<pre>rssmbv_init ("TCPIP:SMBV100B-102030::inst0::INSTR", ...) rssmbv_SetFrequency (... , 2e9)</pre>
HiSLIP	<pre>rssmbv_init ("TCPIP:SMBV100B-102030::hislip0::INSTR", ...) rssmbv_SetFrequency (... , 2e9)</pre>
USBTMC	<pre>rssmbv_init ("USB::0x0AAD::0x01df::100001::INSTR", ...) rssmbv_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmbv_init ("GPIB::28::INSTR", ...) rssmbv_SetFrequency (... , 2e9)</pre>



Example: Remote control program using instrument driver (VISA not available)

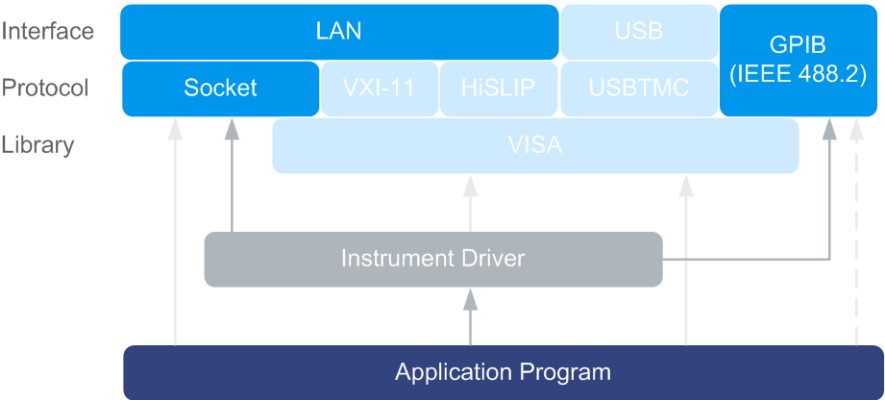


Figure 12-5: Remote control program using instrument driver (VISA not available)

Protocol	Remote control program
Socket	<code>rssmbv_init ("TCPIP:SMBV100B-102030::5025::SOCKET", ...)</code> <code>rssmbv_SetFrequency (... , 2e9)</code>
GPIB	<code>rssmbv_init ("GPIB::28::INSTR", ...)</code> <code>rssmbv_SetFrequency (... , 2e9)</code>

12.4    Status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue.

You can query both with the commands of the [STATus subsystem](#).

12.4.1    Hierarchy of the status registers

The [Figure 12-6](#) shows the hierarchical structure of information in the status registers (ascending from left to right).



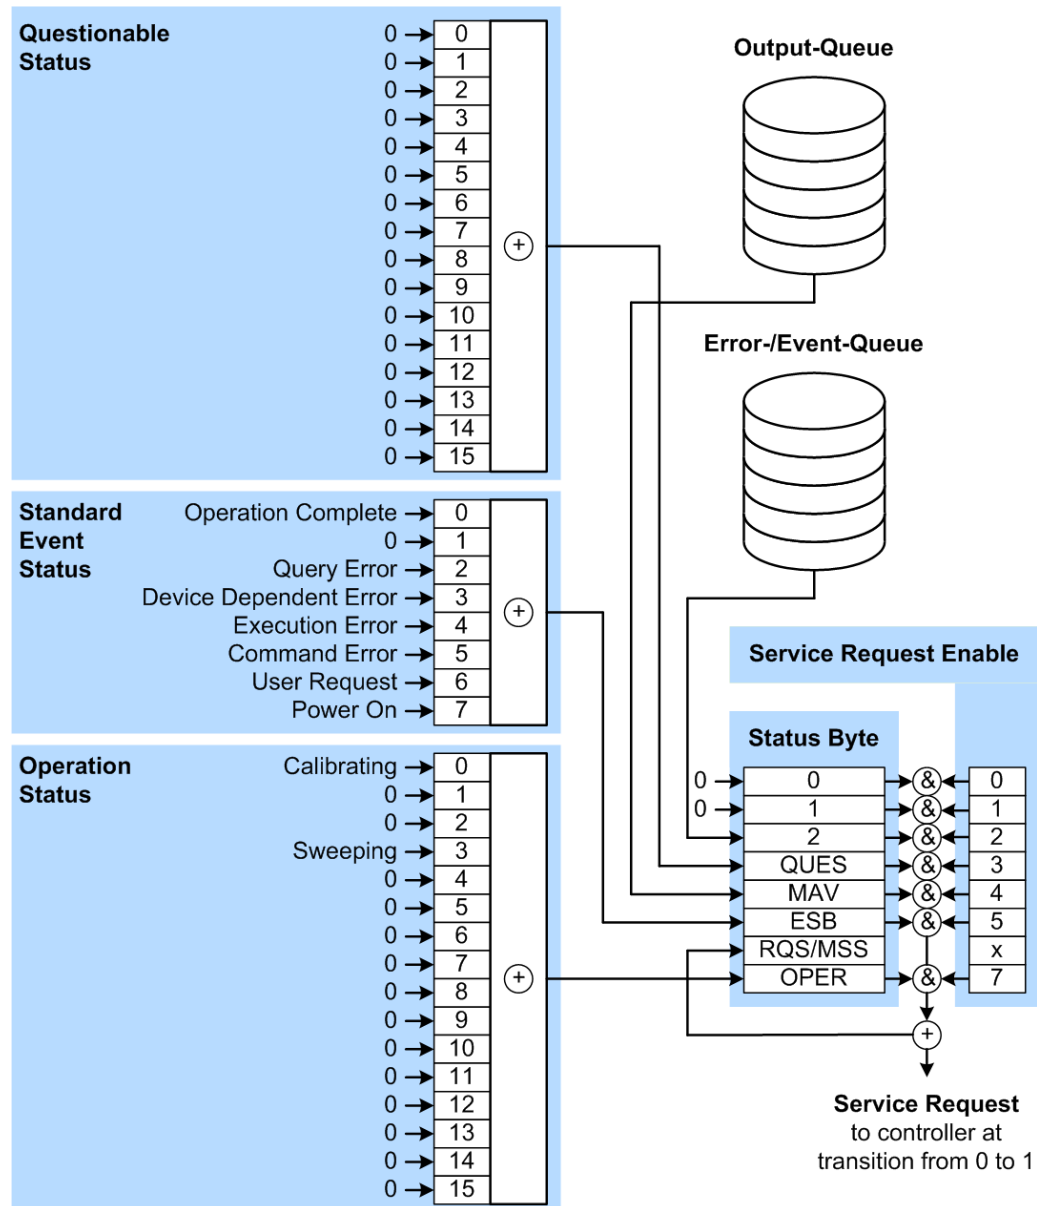


Figure 12-6: Graphical overview of the status registers hierarchy

OPER = Operation Status Summary Bit  
 RQS/MSS = Service Request Generation  
 ESB = Standard Event Status Summary Bit  
 MAV = Message Available in Output Queue  
 QUES = Questionable Status Summary Bit  
 2 = Error- /Event-Queue  
 1, 0 = not used

**Note:** This legend explains the abbreviations to the Status Byte Register.

The R&S SMBV100B uses the following status registers:

- **Status Byte (STB)** and **Service Request Enable (SRE)**, see [Chapter 12.4.3, "Status byte \(STB\) and service request enable register \(SRE\)"](#), on page 626.



- **Standard Event Status**, i.e. the Event status Register (ESR) and the Event Status Enable (ESE), see [Chapter 12.4.4, "Event status register \(ESR\) and event status enable register \(ESE\)"](#), on page 627.
- **Questionable Status and Operation Status**, the (SCPI status registers, see [Chapter 12.4.2, "Structure of a SCPI status register"](#), on page 624, [Chapter 12.4.5, "Questionable status register \(STATus:QUESTionable\)"](#), on page 628 and [Chapter 12.4.6, "Operation status register \(STATus:OPERation\)"](#), on page 628.
- **Output-Queue**  
The output queue contains the messages that the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.
- **Error-/Event-Queue**  
The error-/event-queue contains all errors and events that have occurred in the past. When reading the queue, the instrument starts with the first occurred error/event.

All status registers have the same internal structure.



#### SRE, ESE

The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR command.

### 12.4.2 Structure of a SCPI status register

Each SCPI status register consists of five parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.



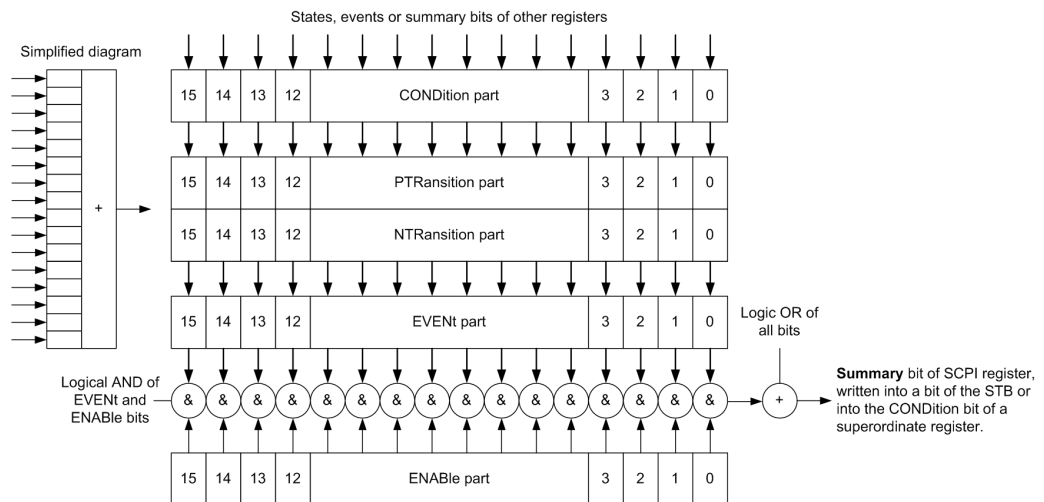


Figure 12-7: The status-register model

## Description of the five status register parts

The five parts of a SCPI status register have different properties and functions:

- **CONDition**

The **CONDition** part is written directly by the hardware or it mirrors the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

- **PTRansition / NTRansition**

The two transition register parts define which state transition of the **CONDition** part (none, 0 to 1, 1 to 0 or both) is stored in the **EVENT** part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the **CONDition** part is changed from 0 to 1, the associated **PTR** bit decides whether the **EVENT** bit is set to 1.

- **PTR** bit =1: the **EVENT** bit is set.
- **PTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the **CONDition** part is changed from 1 to 0, the associated **NTR** bit decides whether the **EVENT** bit is set to 1.

- **NTR** bit =1: the **EVENT** bit is set.
- **NTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The **EVENT** part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be



read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The **ENABLE** part determines whether the associated **EVENT** bit contributes to the sum bit (see below). Each bit of the **EVENT** part is "ANDed" with the associated **ENABLE** bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

**ENABLE** bit = 0: the associated **EVENT** bit does not contribute to the sum bit

**ENABLE** bit = 1: if the associated **EVENT** bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

### Sum bit

The sum bit is obtained from the **EVENT** and **ENABLE** part for each register. The result is then entered into a bit of the **CONDition** part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

## 12.4.3 Status byte (STB) and service request enable register (SRE)

The **Status Byte** (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB is read using the command **\*STB?** or a serial poll.

The **Status Byte** (STB) is linked to the **Service Request Enable** (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command **\*SRE** and read using the command **\*SRE?**.

**Table 12-3: Meaning of the bits used in the status byte**

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty  The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTIONable status register summary bit  The bit is set if an <b>EVENT</b> bit is set in the <b>QUESTIONable</b> status register and the associated <b>ENABLE</b> bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the <b>STATUS:QUESTIONable</b> status register.



Bit No.	Meaning
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STaTus:OPERation status register summary bit The bit is set if an EVEnt bit is set in the OPERation status register and the associated ENABle bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the STaTus:OPERation status register.

#### 12.4.4 Event status register (ESR) and event status enable register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVEnt part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the ENABle part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set. The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

**Table 12-4: Meaning of the bits used in the event status register**

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.



Bit No.	Meaning
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User Request This bit is set when the instrument is switched over to manual control.
7	Power On (supply voltage on) This bit is set on switching on the instrument.

### 12.4.5 Questionable status register (STATus:QUESTionable)

This register contains information on questionable instrument states. Such states can occur when the instrument is not operated in compliance with its specifications.

To read the register, use the query commands `STAT:QUEST:COND?` or `STAT:QUEST[:EVEN]?`.

**Table 12-5: Meaning of the bits used in the questionable status register**

Bit No.	Meaning
0–15	Not used

### 12.4.6 Operation status register (STATus:OPERation)

This condition part contains information on the actions that the instrument currently executes. The event part contains information on the actions that the instrument executed since the last readout of the register.

To read the register, use the query commands `STAT:OPER:COND?` or `STAT:OPER[:EVEN]?`.

**Table 12-6: Meaning of the bits used in the operation status register**

Bit No.	Meaning
0	Calibrating The bit is set during the calibration phase.
1–2	Not used
3	Sweeping This bit is set during a sweep in automatic or single mode.
4–15	Not used

### 12.4.7 Application of the status reporting system

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. For correct operation, the controller receives and eval-



uates the information of all devices. The status reporting system uses the following standard methods:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller to find out who sent an SRQ and why
- Query of a **specific instrument status** by commands
- Query of the **error queue**

#### 12.4.7.1 Service request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. An SRQ is always initiated if one or several of bits 2, 4 or 5 of the status byte are set and enabled in the SRE. Each of these bits combines the information of the error queue or the output buffer. To use the possibilities of the service request effectively, set all bits to "1" in the enable registers SRE and ESE.

##### Example:

Use command `*OPC` to generate an SRQ.

`*ESE 1` - set bit 0 of ESE (Operation Complete)

`*SRE 32` - set bit 5 of SRE (ESB).

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program sets the instrument and initiates a service request if malfunctions occur. The program reacts appropriately to the service request.

#### 12.4.7.2 Serial poll

In a serial poll, just as with command `*STB`, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

#### 12.4.7.3 Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.



- The commands of the `STATUS` system query the SCPI registers (`STATUS:QUESTIONABLE...`)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

#### 12.4.7.4 Error queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTEM:ERROR[:NEXT]?`. Each call of `SYSTEM:ERROR[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

### 12.4.8 Reset values of the status reporting system

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except for `*RST` and `SYSTEM:PRESet` affect the functional instrument settings. In particular, `DCL` does not change the instrument settings.

**Table 12-7: Resetting the status reporting system**

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC  (Device Clear, Selected Device Clear)	*RST or SYSTEM: PRESet	STATUS: PRESet	*CLS
Effect	0	1				
Clear STB, ESR	-	Yes	-	-	-	Yes
Clear SRE, ESE	-	Yes	-	-	-	-
Clear PPE	-	Yes	-	-	-	-
Clear error queue	Yes	Yes	-	-	-	Yes
Clear output buffer	Yes	Yes	Yes	1)	1)	1)
Clear command processing and input buffer	Yes	Yes	Yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						



## 12.5 Remote access settings

This section outlines the settings required for accessing and configuring the provided remote control interfaces. It includes network settings, access addresses, emulation settings for using the command sets of other generators, and the access with smart devices.

### About instrument emulations

You can remotely control the R&S SMBV100B using the command set of another signal generator. With this function you can, for example, replace a signal generator with an R&S SMBV100B in an automated test setup, without adjusting the command scripts used.



The R&S SMBV100B also covers command sets of Rohde & Schwarz signal generators. To achieve optimal compatibility when replacing an instrument, we recommend that you select the emulation command set for the corresponding signal generator.

You find the remote control command sets supported by the R&S SMBV100B in a selection list.

For more information, see the application note:

[1GP121: Remote Emulation with the R&S SMBV100B Signal Generator](#)

The selected instrument also defines the identification string that is retrieved with query `*IDN?`. If necessary, use the parameter `Mode` and `IDN String` to change this string.

As any other parameter, the remote control command set can also be changed remotely by the command `:SYSTem:LANGuage`.

While working in an emulation mode, the R&S SMBV100B specific command set is disabled and the SCPI command `:SYSTem:LANGuage` is discarded.

To return to the SCPI command set of the R&S SMBV100B, use the appropriate command of the selected command set.

If for example an HP generator is emulated, the HP command `EX` returns to the instrument-specific GPIB command set.

### About health and utilization monitoring system (HUMS)

The R&S SMBV100B comes with a health and utilization monitoring system (HUMS) providing information about the R&S SMBV100B. Aim is to increase the overall utilization, to avoid downtime and to increase the overall security level of a fleet of instruments.

HUMS provides, for example, information about:

- Instrument identification, hardware components, software packages, licenses
- Usage of remote control, usage via keyboard / mouse, usage of test applications
- Hardware utilization and status, including S.M.A.R.T. data of the system drive
- User-defined static information, for example, an inventory code



## Interfaces and protocols

The HUMS installation on the R&S SMBV100B includes an SNMP agent and a REST service with HTTP endpoints. So you can access the health and usage information via LAN, using the SNMP protocol or the REST protocol. Accessing the data does not interfere with remote control via SCPI commands or with measurement execution.

Reference information for both protocols is available on the R&S SMBV100B at the address `http://<instrument>/api/hums/v1/documents?name=<interface>`.

For `<instrument>`, enter the hostname (e.g. `SMBV100B-102030`) or the IP address (e.g. `10.121.0.34`) of your instrument, as for access to the GUI.

For `<interface> = snmp`, you get a .zip file containing the MIB files for SNMP. For `<interface> = rest`, you get a web page with the OpenAPI specification of the REST API.

Address example: `http://SMBV100B-102030/api/hums/v1/documents?name=snmp`.

The following table lists the REST endpoints and the SNMP MIB file names.

REST endpoint /api/hums/v1/...	SNMP MIB	Description	Typical data
documents	---	developer information	SNMP MIB files, swagger specification of HUMS REST endpoints
greetings	RS-GREETINGS-MIB	identity information	manufacturer, model, serial number, version
equipment/bios	RS-BIOS-INFO-MIB	BIOS information	BIOS manufacturer, version and release date
date-time	RS-TIME-DATE-MIB	time and date information	UTC and local time, timezone, dst (daylight savings time)
device-history	RS-DEVICE-HISTORY-MIB	history events	instrument-specific event information and notifications
device-tags	RS-DEVICE-TAGS-MIB	customer information	user-definable key information, associated with the instrument, e.g. asset number, owner, location
equipment	RS-EQUIPMENT-MIB	footprint information	hardware and software configuration, licenses
hums-info	RS-HUMS-INFO-MIB	basic information on the HUMS service	HUMS version, counter of SNMP and REST requests, amount of collected data, HUMS database size
storage	RS-STORAGE-MIB	S.M.A.R.T. data of drive	system drive temperature, drive health
system-info	RS-SYSTEM-INFO-MIB	a system overview	OS and BIOS version, IP address, locale
system-status	RS-SYSTEM-STATUS-MIB	system status information	global system status, static notifications
utilization	RS-UTILIZATION-MIB	utilization information	instrument activity, e.g., power on time, RF on time, option utilization, remote interface traffic

For detailed information about HUMS and its applications, refer to:

- The R&S®HUMS Health and Utilization Monitoring Service user manual, available on the Rohde & Schwarz website.
- The application note [GFM336: Instrument Health and Utilization Monitoring](#)



## 12.5.1 Network settings

Access:

- Select "System Config" > "Remote Access" > "Network".

Network	Visa Resource Strings	GPIB Address	RS232	Instrument Emulations	Remote Connections	HUMS	QR-Code
<div> <div>Network Status</div> <div>● Connected</div> <div>Restart Network</div> </div>							
Instrument Name							
<div>Hostname</div> <div>INSTRUMENT</div>		<div>Workgroup</div> <div>INSTRUMENT</div>					
Instrument Address							
<div>Address Mode</div> <div>Auto (DHCP)</div>		<div>Show Connector ...</div>					
<div>IP Address</div> <div>10.111.1.17</div>		<div>Subnet Mask</div> <div>255.255.252.0</div>		<div>Default Gateway</div> <div>10.111.0.1</div>			
<div>DNS Suffix</div> <div>rsint.net</div>		<div>DNS Server</div> <div>10.0.2.166</div>		<div>MAC Address</div> <div>08 00 27 55 c0 44</div>			

In the "Network" dialog, you can configure the settings of the general network environment and specific identification parameters of the instrument in the network.

The remote commands required to configure the network remotely are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.

### Settings:

<a href="#">Network Status</a> .....	633
<a href="#">Restart Network</a> .....	633
<a href="#">Hostname</a> .....	634
<a href="#">Workgroup</a> .....	634
<a href="#">Address Mode</a> .....	634
<a href="#">IP Address</a> .....	634
<a href="#">Subnet Mask</a> .....	635
<a href="#">Default Gateway</a> .....	635
<a href="#">DNS Suffix</a> .....	635
<a href="#">DNS Server</a> .....	636
<a href="#">MAC Address</a> .....	636

### Network Status

Indicates that the instrument is connected to the network.

Remote command:

`:SYSTem:COMMunicate:NETWork:STATus?` on page 1042

### Restart Network

Terminates the network connection of the instrument and sets it up again. You can use this function to fix network problems.



**Note:** This function restarts only the connection of the instrument to the network. It does not impact the network itself.

Remote command:

[:SYSTem:COMMunicate:NETWork:REStart](#) on page 1042

### Hostname

Displays the hostname.

Each instrument is delivered with an assigned hostname, a logical name which can be used instead of the IP address. With the default network settings, the IP address is allocated by the DHCP server. This address can change each time the instrument is reconnected. Unlike the IP address, the hostname name does not change.

#### **Note:**

This function is password-protected. Unlock the protection level 1 to access it.

- We recommend that you do not change the default network settings or the host-name to avoid problems with the network connection.  
If you change the hostname, be sure to use a unique name.

Remote command:

[:SYSTem:COMMunicate:NETWork\[:COMMON\]:HOSTname](#) on page 1042

### Workgroup

Sets the individual windows workgroup name of the R&S SMBV100B. This parameter is required in case the instrument is integrated in a windows network.

This function is password-protected. Unlock the protection level 1 to access it.

Remote command:

[:SYSTem:COMMunicate:NETWork\[:COMMON\]:WORKgroup](#) on page 1043

### Address Mode

Selects the mode for assigning the IP address.

How to: [Chapter 12.7.2.1, "How to assign the IP address"](#), on page 663

"Auto (DHCP)"

Assigns the IP address automatically, provided the network supports DHCP (Dynamic Host Configuration Protocol).

"Static"

Enables you to assign the IP address manually.

Remote command:

[:SYSTem:COMMunicate:NETWork:IPAdDress:MODE](#) on page 1041

### IP Address

Displays the IP address of the instrument in the network.

By default, the R&S SMBV100B is configured to use dynamic TCP/IP configuration and to obtain the address information automatically. Setting [Address Mode](#) > "AUTO (DHCP)" denotes that the DHCP server is available. The instrument displays the assigned IP address read-only.



If the network does not support DHCP or there is no DHCP server available, the instrument tries to obtain the IP address using [Zeroconf \(Avahi\)](#) protocol. This feature enables the instrument to self-configure an IP address and subnet mask. Zeroconf (Avahi) IP addresses start with the number blocks 169.254.\*.\*, with the subnet mask of 255.255.

**Note:** An IP address that is assigned with the Zeroconf protocol although the network requires an IP address assigned from the DHCP server can cause network connection failures.

See [Chapter 14.5, "Resolving network connection failures"](#), on page 1079.

If both services fail to connect, you can configure the address manually.

How to: ["To assign the IP address manually on the instrument"](#) on page 663

Remote command:

[:SYSTem:COMMunicate:NETWork:IPADdress](#) on page 1041

### Subnet Mask

Displays the bit group of the subnet in the host identifier.

The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available [Address Mode A AUTO \(DHCP\)](#), the setting is read-only. The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address).

To assign the subnet mask manually, select [Address Mode > Static](#).

**Note:** When assigning the subnet mask manually, make sure that the address matches with the subnet mask of the controlling host interface.

How to: ["To assign the IP address manually on the instrument"](#) on page 663.

Remote command:

[:SYSTem:COMMunicate:NETWork\[:IPADdress\]:SUBNet:MASK](#) on page 1043

### Default Gateway

Displays the gateway address.

This address identifies the router on the same network as the instrument that is used to forward traffic to destinations beyond the local network.

To assign the gateway address manually, select [Address Mode > "Static"](#).

Remote command:

[:SYSTem:COMMunicate:NETWork\[:IPADdress\]:GATeway](#) on page 1043

### DNS Suffix

Displays the primary DNS (Domain Name System) suffix, that means the DNS name without the hostname part.

The DNS system uses the suffix for registration and name resolution for unique identification of the instrument in the entire network.

To assign the DNS suffix manually, select [Address Mode > "Static"](#).

Remote command:

[:SYSTem:COMMunicate:NETWork\[:COMMON\]:DOMain](#) on page 1042



**DNS Server**

Determines the preferred server for name resolution. The DNS server contains the underlying numerical values that are required for name resolution of the hostname as part of the IP address.

To select the DNS server manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAddress]:DNS` on page 1043

**MAC Address**

Indicates the MAC (Media Access Control) address, a unique identifier of the network adapter in the R&S SMBV100B.


Remote command:

`:SYSTem:COMMunicate:NETWork:MACAddress` on page 1041

**12.5.2 VISA resource strings**

Access:

- Select "System Config > Remote Access > Visa Resource Strings".

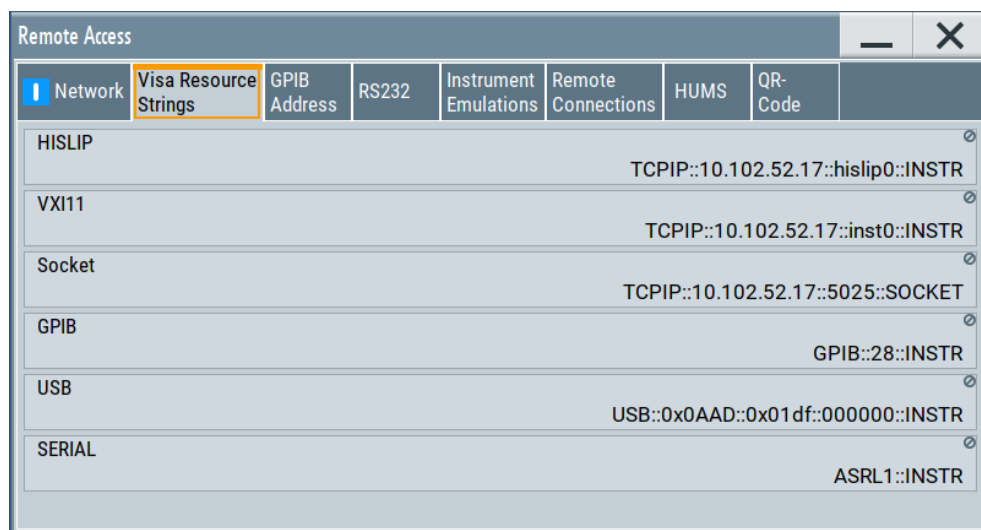

The "Visa Resource String" dialog displays the VISA resource strings provided for remote control over the different interfaces.

The remote commands required to query the address information remotely are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

**Settings:**

<a href="#">HISLIP</a> .....	637
<a href="#">VXI11</a> .....	637
<a href="#">Socket</a> .....	637



<b>GPIB</b> .....	637
<b>USB</b> .....	637
<b>SERIAL</b> .....	637

**HISLIP**

Displays the visa resource string for remote control with HiSLIP protocol.

See also [Chapter 12.2.1, "LAN interface"](#), on page 615

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 1040

**VXI11**

Displays the visa resource string for remote control over LAN.

See also [Chapter 12.2.1, "LAN interface"](#), on page 615

Remote command:

`:SYSTem:COMMunicate:NETWork:RESource?` on page 1041

**Socket**

Displays the visa resource string for remote control over LAN, using the socket communication protocol.

See also [Chapter 12.2.1, "LAN interface"](#), on page 615

Remote command:

`:SYSTem:COMMunicate:SOCKet:RESource?` on page 1044

**GPIB**

Displays the visa resource string for remote control over the GPIB interface.

See also [Chapter 12.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 618.

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 1040

**USB**

Displays the visa resource string for remote control over the USB interface.

See also [Chapter 12.2.2, "USB interface"](#), on page 617

Remote command:

`:SYSTem:COMMunicate:USB:RESource?` on page 1045

**SERIAL**

Displays the visa resource string for remote control over the serial interface.

See also [Chapter 12.2.2, "USB interface"](#), on page 617

Remote command:

`:SYSTem:COMMunicate:SERial:RESource?` on page 1044



### 12.5.3 GPIB address settings

Access:

- Select "System Config > Remote Access > GPIB Address".

The screenshot shows the 'Remote Access' dialog box with the 'GPIB Address' tab selected. The 'GPIB Channel Address' is set to 28. The tabs include Network, Visa Resource Strings, GPIB Address, RS232, Instrument Emulations, Remote Connections, HUMS, and QR-Code.

The "GPIB Address" enables you to select the channel for remote control over the IEC/IEEE bus interface.

The remote command to configure the setting remotely is described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

#### Settings

[GPIB Channel Address](#)..... 638

#### GPIB Channel Address

Sets the GPIB (IEC/IEEE bus) channel address for the connected instrument.

Remote command:

`:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes` on page 1040

### 12.5.4 RS232 settings

Access:

- Select "System Config > Remote Access > RS232".

The screenshot shows the 'Remote Access' dialog box with the 'RS232' tab selected. A message 'Needs USB Adapter (R&S TS1-USB)' is displayed. The Baud Rate is set to 115200, Parity is set to None, and Stop Bits is set to 1. The tabs include Network, Visa Resource Strings, GPIB Address, RS232, Instrument Emulations, Remote Connections, HUMS, and QR-Code.

The "RS232" dialog enables you to control the instrument over a serial interface using a USB adapter. The controller and the instrument must be connected with the external USB/serial-adapter R&S TS1-USB (see recommended extras in the data sheet) and a serial crossover (null modem) cable. The USB connection requires the Visa library to be installed on the controller. Visa detects and configures the R&S SMBV100B automatically when the USB connection is established.



The remote commands required to configure the parameters remotely are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.

## Settings

### Baud Rate

Sets the baudrate for the serial remote control interface.

Remote command:

[:SYSTem:COMMunicate:SERial:BAUD](#) on page 1044

### Parity

Sets the parity for the serial remote control interface.

Remote command:

[:SYSTem:COMMunicate:SERial:PARity](#) on page 1044

### Stop Bits

Sets the number of stop bits for the serial remote control interface.


Remote command:

[:SYSTem:COMMunicate:SERial:SBITs](#) on page 1044

## 12.5.5 Instrument emulations settings

Access:

- Select "System Config > Remote Access > Instrument Emulations".

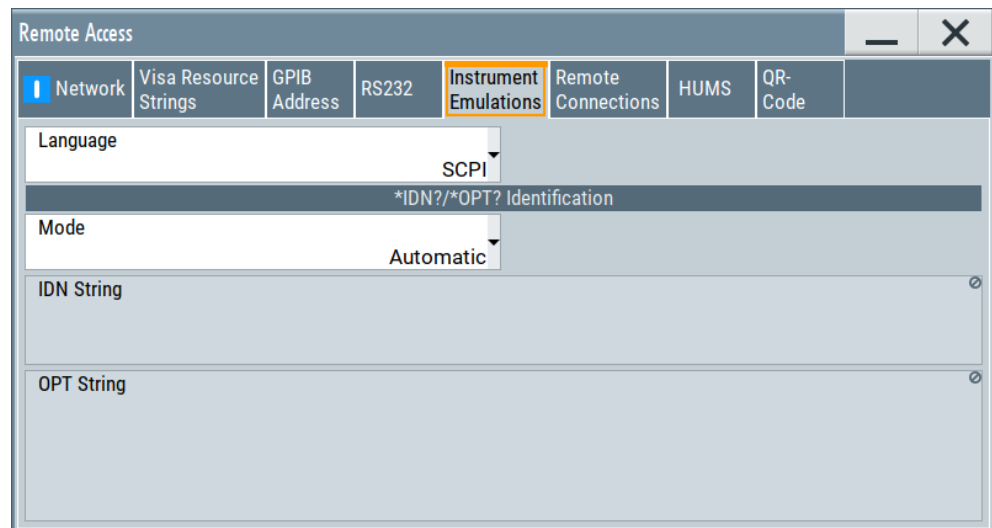

The "Instrument Emulations" dialog enables you to emulate a remote control command set of another signal generator.

The remote commands required to configure the emulation settings remotely are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.



## Settings

### Language

Selects the instrument whose remote command set is emulated by the R&S SMBV100B.

Remote command:

[:SYSTem:LANGuage](#) on page 1047

### Mode

Selects the way the instrument identification is performed.

"Automatic" Sets the "IDN String" and the "OPT String" automatically for the instrument selected with the parameter [Language](#).

"User Defined" Enables you to define the "IDN String" and the "OPT String".

Remote command:

[:SYSTem:IDENTification](#) on page 1045

### Set to Default

In "Mode > User Defined", resets the \*IDN and \*OPT strings.

Remote command:

[:SYSTem:IDENTification:PRESet](#) on page 1046

### IDN String

Indicates the identification string of the instrument when queried with the common command \*IDN?.

In addition to the preset values, you can define your own identification string so that each generator uses an individual identification, like `My_SigGen` for instance, see [Mode](#).

Remote command:

[\\*IDN?](#) on page 699

[:SYSTem:IRESpOnse](#) on page 1046

### OPT String

Indicates the option string of the instrument as queried with common command \*OPT?.

In [Mode](#) > "User Defined", you can define your own option string. A query responds with this option string instead of the automatically created option string.

Remote command:

[\\*OPT?](#) on page 699

[:SYSTem:ORESpOnse](#) on page 1046


## 12.5.6 Remote connections settings

The "Remote Connections" dialog covers the active SCPI and TCP/IP connections, and a history list of the connections that have accessed the instrument before.



12.5.6.1 Active connections

- Access:
- Select "System Config > Remote Access > Remote Connections > Active".

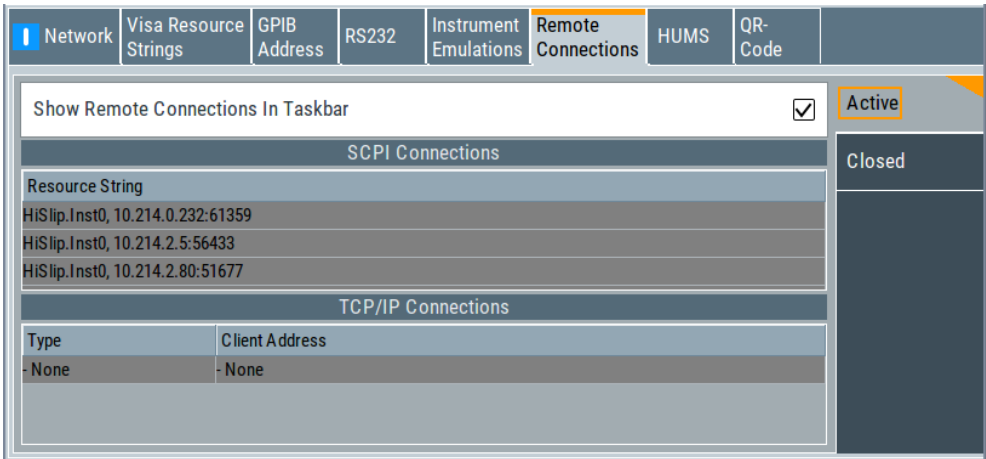

The "Active" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

Settings

Show Remote Connections in Taskbar.....	641
SCPI Connections.....	641
TCP/IP Connections.....	641

Show Remote Connections in Taskbar

Displays the currently active connections in the taskbar.

SCPI Connections

Displays the VISA resources strings of the remote connections currently controlling the instrument via the LAN interface.

Remote command:  
n.a.

TCP/IP Connections


Displays the types and client addresses of the remote connections currently controlling the instrument via the LAN interface.

Remote command:  
n.a.



12.5.6.2 Closed connections

- Access:
- ▶ Select "System Config > Remote Access > Remote Connections > Closed".

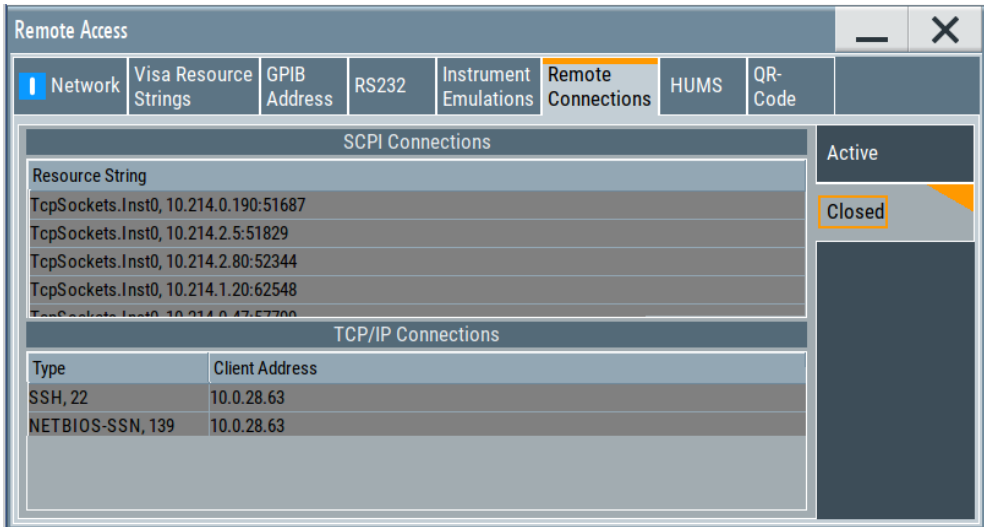

The "Closed" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

Settings

SCPI Connections.....	642
TCP/IP Connections.....	642

SCPI Connections

Lists the VISA resource strings of the last remote connections that have accessed the instrument via the LAN interface before.

Remote command:  
n.a.

TCP/IP Connections

Lists the types and client addresses of the last remote connections that had accessed the instrument via the LAN interface before.

Remote command:  
n.a.


12.5.7 HUMS settings

Requires R&S SMBVB-K980.



Access:

- Select "System Config > Remote Access > HUMS".

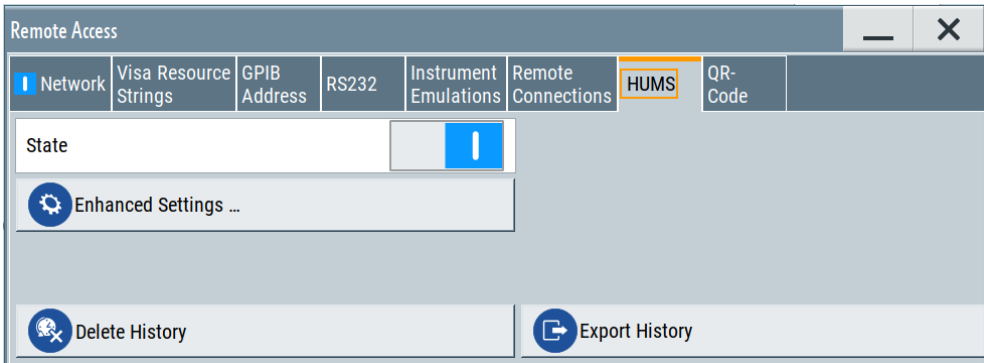

The dialog provides settings to configure the health and utilization monitoring system (HUMS) of the R&S SMBV100B.

The remote commands required to define these settings are described in [Chapter 13.9, "HUMS remote control commands"](#), on page 724.

Settings

State.....	643
Enhanced Settings.....	643
Delete History.....	643
Export History.....	644

State

Activates HUMS.

Data is only recorded, if HUMS is enabled. If disabled, already recorded data can still be retrieved.

The setting is reset by a factory preset to "off".

Remote command:  
[DIAGnostic:HUMS:STATe](#) on page 727

Enhanced Settings

Opens a dialog for configuring enhanced protocol settings, see [Chapter 12.5.8, "HUMS enhanced settings"](#), on page 644.

Access is only available, when HUMS is enabled, see [State](#).

Delete History

Deletes all information from the HUMS service including the device history.

**Note:** Regarding the instrument security, the sanitization procedure also deletes the history of the HUMS service, see [Chapter 11.6.2.2, "Disk & memory security settings"](#), on page 596.


Remote command:  
[DIAGnostic:HUMS:DEVIce:HISTory:DELeTe:ALL](#) on page 726



**Export History**  
 Triggers an export of the logged data of the HUMS service into a \*.zip file.  
 A standard file dialog opens, to save the log file. By default, the file is saved to the directory /var/user/.  
 Remote command:  
[DIAGnostic:HUMS:DEVIce:HISTory?](#) on page 725  
[DIAGnostic:HUMS:SAVE](#) on page 726

12.5.8 HUMS enhanced settings

- Access:
1. Select "System Config > Remote Access > HUMS".
  2. Select "State > ON".
  3. Select "Enhanced Settings".

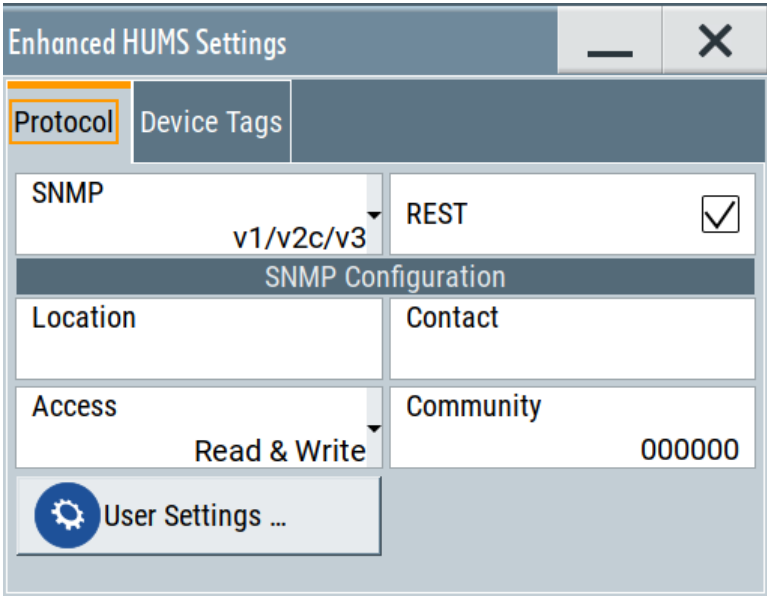

The dialog provides enhanced settings for configuring protocol settings and device tags.

The remote commands required to define these settings are described in [Chapter 13.9, "HUMS remote control commands"](#), on page 724.

- [Protocol settings](#).....645
- [SNMP user settings](#)..... 646
- [Device tag settings](#).....651



### 12.5.8.1 Protocol settings

The "Protocol" tab of the "Enhanced HUMS Settings" dialog provides protocol settings for SNMP or REST protocol.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. Select "Protocol".

The dialog provides enhanced settings for configuring protocol settings and device tags.

#### Settings

SNMP.....	645
REST.....	645
SNMP Configuration.....	645
L Location.....	646
L Contact.....	646
L Access.....	646
L Community.....	646
User Settings.....	646

#### SNMP

Enables the SNMP agent and selects the supported SNMP version to communicate with the service.

The setting is reset by a factory preset to "v1/v2c".

"Off"	The SNMP agent is disabled.
"v1/v2c"	Selects SNMP version 2, which also enables version v1.
"v1/v2c/v3"	Selects all SNMP version v1, v2c and v3.
"v3"	Selects SNMP version v3.

Remote command:

[SYSTem:COMMUnicate:SNMP:VERSion](#) on page 731

#### REST

Enables the REST API protocol.

The setting is reset by a factory preset to "On".

Remote command:

[SYSTem:COMMUnicate:REST:ENABLe](#) on page 728

#### SNMP Configuration

For SNMPv1 and SNMPv2c authentication, you can define "Access" and "Community".  
For SNMPv3 authentication, you can define "User" profiles.



**Location ← SNMP Configuration**

Defines the SNMP location information. This information complies with the server's physical location and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMunicate:SNMP:LOCation](#) on page 729

**Contact ← SNMP Configuration**

Sets the SNMP contact information. This information complies with the person who manages the SNMP server and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMunicate:SNMP:CONtact](#) on page 729

**Access ← SNMP Configuration**

Defines the access type for SNMP community string.

For read access, you can use "Read" or "Read & Write". For write access, use "Read & Write".

The setting is reset by a factory preset to "Read & Write".

Remote command:

[SYSTem:COMMunicate:SNMP:COMMunity:RO](#) on page 728

[SYSTem:COMMunicate:SNMP:COMMunity:RW](#) on page 729

**Community ← SNMP Configuration**

Defines the SNMP community string that can be a group of instruments with SNMP version v2 support.

The setting is reset by a factory preset to the "<serial number>" of the instrument.

**User Settings**

Accesses the "Configure SNMP Users for HUMS" dialog.

**12.5.8.2 SNMP user settings**


For SNMPv3 authentication, you can define user profiles.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. In the protocol tab, select SNMP communication with SNMPv3, e.g. "SNMP > v1/v2c/v3".



5. Select "User Settings".

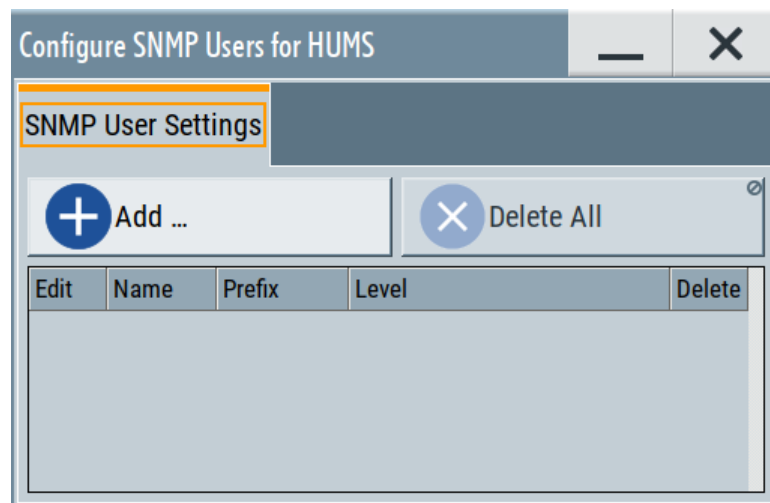

The "Configure SNMP User for HUMS" dialog provides an overview of all defined SNMP users and their profiles. With the "Add" and "Delete All" controls, you can add or remove users.

## Settings

Add.....	647
Delete All.....	647
User table.....	648
L Edit.....	648
L Name.....	649
L Prefix.....	649
L Level.....	649
L Delete.....	649
Add SNMP User for HUMS.....	649
L SNMP User Name.....	650
L SNMP User Prefix.....	650
L SNMP User Level.....	650
L SNMP User Public Passphrase.....	651
L SNMP User Encrypted Passphrase.....	651
L Add / Update.....	651

## Add

Accesses the "Add SNMP User for HUMS" dialog.

In this dialog, you can define a user and its profile, see ["Add SNMP User for HUMS"](#) on page 649.

## Delete All

Removes all users from the list.


Remote command:

[SYSTem:COMMUnicate:SNMP:USM:USER:DELeTe:ALL](#) on page 731



**User table**

Lists all defined SNMP users.

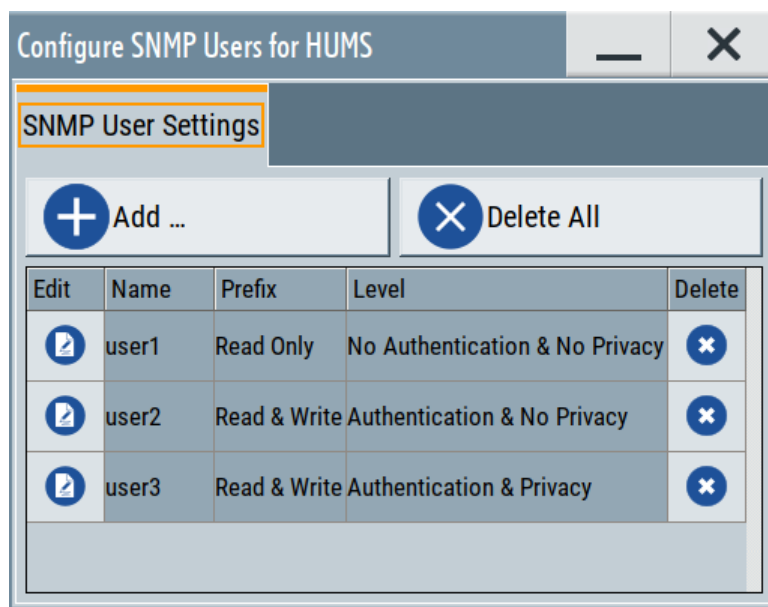

The table informs on the user name and its specified user profile.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:ALL?](#) on page 730

**Edit ← User table**

Accesses the "Edit SNMP Users for HUMS" dialog, where you can modify an already defined user profile.



For description on the entry fields, see [Add SNMP User for HUMS](#).

**Name ← User table**

Shows the user name of the user who should have specific user rights.

**Prefix ← User table**

Shows the access right of the selected user.

**Level ← User table**

Shows the security level of the selected user.

**Delete ← User table**

Removes the selected user from the list.

Remote command:

[SYSTEM:COMMunicate:SNMP:USM:USER:DELeTe](#) on page 731

**Add SNMP User for HUMS**

Configuration dialog for defining SNMP users and their profiles.



Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER](#) on page 730

#### **SNMP User Name ← Add SNMP User for HUMS**

Defines the name of the user for assigning specific user rights. Entering a user name is mandatory.

#### **SNMP User Prefix ← Add SNMP User for HUMS**

Defines the access right for a user.

"Read Only" Allows the user to only read information.

"Read & Write" Allows the user to read and modify information.

#### **SNMP User Level ← Add SNMP User for HUMS**

Defines the security level of the SNMP user. Depending on the security level, the service requests user name and passphrases for authentication and encryption.

"No Authentication & No Privacy"

Low security level. Using this level, the service queries the user name only. Password authentication and password for encrypted data transfer is not requested.

See ["SNMP User Public Passphrase"](#) on page 651 and ["SNMP User Encrypted Passphrase"](#) on page 651 for data transfer is not requested.



**"Authentication & No Privacy"**

Medium security level: Requests the user name and password authentication, but no data transfer encryption.

**"Authentication & Privacy"**

High security level: Requests the user name, and both, the password authentication and the password for data transfer encryption.

**SNMP User Public Passphrase ← Add SNMP User for HUMS**

Defines the password for authentication. The password must have of 8 to 12 characters with any combination of ASCII characters.

**SNMP User Encrypted Passphrase ← Add SNMP User for HUMS**

Defines the password for encryption. This password must have at least 8 characters with any combination of ASCII characters. When encryption is defined, the R&S SMBV100B supports the DES (directed enhanced services) protocol.

**Add / Update ← Add SNMP User for HUMS**

Assigns the defined user with its profile to the list.

If you change an already defined user profile, the instrument provides the "Update" button to apply the modifications.

### 12.5.8.3 Device tag settings


The "Device Tags" tab of the "Enhanced HUMS Settings" dialogs displays the defined device tags. You can also add or delete device tags here.

A device tag is a label to assign to your instrument. You can create any device tag for your instrument and define it by a specific key and value.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".



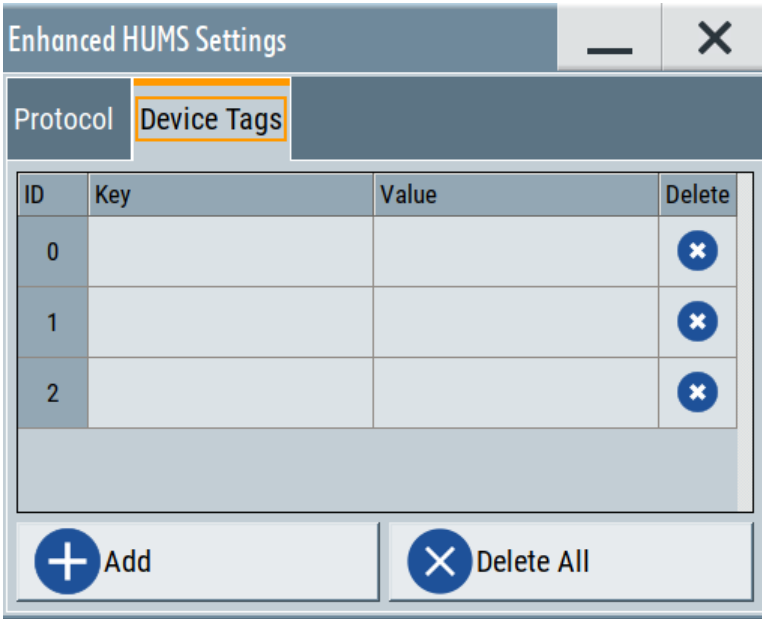

Configures device tags for tagging user-defined information of the instrument in a table. You can define up to 32 device tags, e.g., for HUMS history evaluation. To add a device tag, define "Key" and "Value" of the device tag in the table. Click "Add" to add all device tags of the table to the HUMS history.

Settings

ID.....	652
Key.....	652
Value.....	652
Delete.....	652
Add.....	653
Delete All.....	653

**ID**  
Identification count of a device tag entry.

**Key**  
Sets the identification key of a device tag.

Remote command:  
`DIAGnostic:HUMS:TAGS[:VALue]` on page 728

**Value**  
Sets the value of the identification key of a device tag.

Remote command:  
`DIAGnostic:HUMS:TAGS[:VALue]` on page 728

**Delete**  
Deletes the selected device tag from the HUMS history.



Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe](#) on page 727

### Add

Adds a new device tag to the HUMS service.

Remote command:

[DIAGnostic:HUMS:TAGS\[:VALue\]](#) on page 728

[DIAGnostic:HUMS:TAGS:ALL?](#) on page 727

### Delete All

Removes all device tags from the HUMS history.

Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe:ALL](#) on page 728

## 12.5.9 QR code

Access:

- Select "System Config > Remote Access > QR Code".



The "QR Code" dialog shows the current instrument address (IP address) in quick response (QR) format.

This functionality provides fast access to the instrument via VNC with, for example, a smartphone or a tablet.

See [Chapter 12.14.3, "How to set up remote operation from a smart device"](#), on page 689.



## 12.6 LXI settings


On the R&S SMBV100B, an LXI functionality is already installed and enabled, see [LXI status settings](#). Thus, you can access the instrument using any web browser to perform the following tasks:

- Modifying network configurations, see [Chapter 12.6.2.1, "LAN configuration"](#), on page 656.
- Accessing the instrument remotely
- Analyzing SCPI remote diagnostics

### 12.6.1 LXI status settings

Access:

- ▶ Select "System Config > Setup > Remote Access > LXI Status".

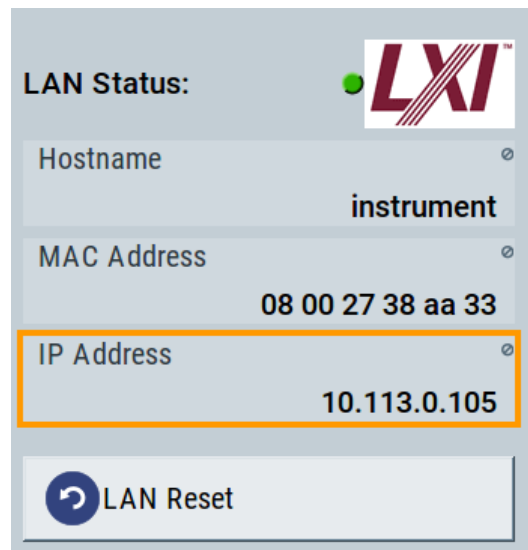

The LXI "LAN Status" dialog shows the parameters of the LAN connection.

Alternatively, you can change the LAN settings using the LXI web browser interface, see [Chapter 12.6.2.1, "LAN configuration"](#), on page 656.

#### LAN Status

The LED indicates the LXI status.

"green"	Normal operation
"green (flashing)"	Device identification
"red"	LAN fault

#### Hostname / MAC Address / IP Address

See ["Hostname"](#) on page 634.



**LAN Reset**

Initiates the network configuration reset mechanism for the instrument and resets the hostname, MAC address, and IP address.

According to the LXI standard, a LAN reset must set the following network parameters to a default state:

Parameter	Value
TCP/IP mode	DHCP + Auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN reset also resets the following parameters for the vector signal generator:

Parameter	
Hostname	Instrument-specific hostname
Description	Vector signal generator
Negotiation	Auto detect
VXI-11 discovery	Enabled

## 12.6.2 LXI browser settings

The LXI browser functionality enables you to control the instrument remotely over a web browser.


Access:

- In the address field of the browser, enter the URL address, composed of the instrument's IP address or host name, for example *http://10.113.1.151*.

**Note:** Do not add the missing zeros in the IP address, while opening the instrument homepage.



The instrument homepage (welcome page) opens.

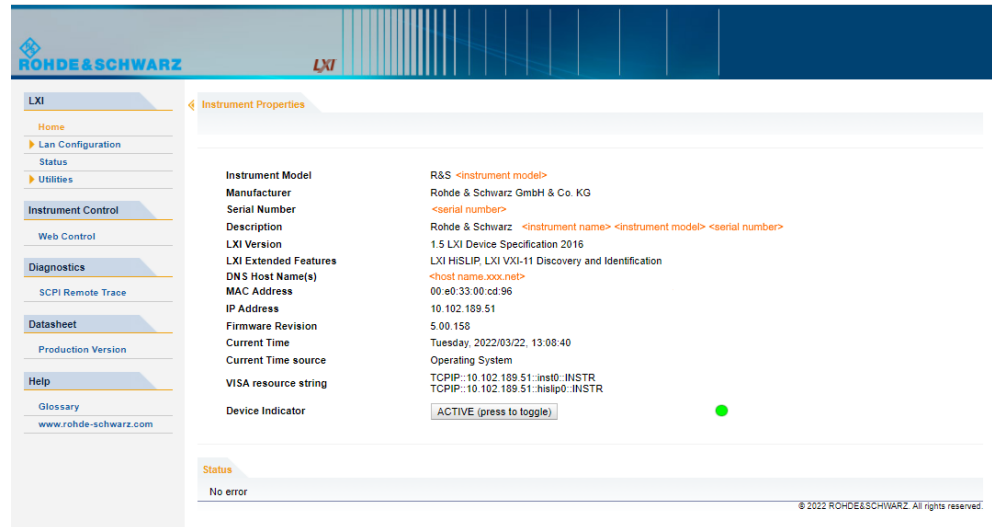

The navigation pane of the browser interface contains the following elements:

- "LXI"
  - "Home" opens the instrument homepage.  
The homepage displays the device information required by the LXI standard, including the VISA resource string in read-only format.
  - "Device Indicator" activates or deactivates the LXI status indication.  
When activated, the LXI LED flashes. A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.
  - "Lan Configuration" allows you to configure LAN parameters and to initiate a ping, see ["Ping client"](#) on page 658.
  - "Status" displays information about the LXI status of the instrument.
  - "Utilities" provides access to the LXI event logging functionality required by the LXI standard.
- "Instrument Control"
  - "Web Control" provides remote access to the instrument, see ["To start remote control with the LXI web browser"](#) on page 667.
- "Diagnostics"
  - "SCPI Remote Trace" records messages exchanged via the remote control interface, see [Chapter 12.6.2.2, "SCPI remote trace"](#), on page 659.
- "Datasheet"
  - Provides the data sheet with the specification data of the instrument at the time of delivery, see [Chapter 12.6.2.3, "Datasheet"](#), on page 661.
- "Help"
  - "Glossary" explains terms related to the LXI standard.
  - [www.rohde-schwarz.com](http://www.rohde-schwarz.com) opens the Rohde & Schwarz homepage.

### 12.6.2.1 LAN configuration

The "LAN Configuration" web page displays all mandatory LAN parameters and allows their modification.



It comprises the following navigation entries.

- [IP configuration](#)..... 657
- [Advanced config](#)..... 657
- [Ping client](#)..... 658

## IP configuration

The "IP configuration" web page displays all mandatory LAN parameters and allows their modification.

The screenshot shows the 'LAN Parameters' configuration page. The left sidebar contains navigation links: LXI, Home, Lan Configuration (with sub-links for IP Configuration, Advanced Config, and Ping Client), Status, Utilities, Instrument Control (with sub-links for Web Control and Diagnostics), SCPI Remote Trace, Datasheet, Production Version, and Help (with sub-links for Glossary and www.rohde-schwarz.com). The main content area is titled 'LAN Parameters' and contains the following fields:

- Hostname: <host name>
- DNS Hostname(s): <host name.xxx.net>
- Domain: rsint.net
- Description: <instrument>
- IP Address Mode: DHCP + Auto IP Address (dropdown menu)
- IP Address: 10.102.189.51
- Subnet Mask: 255.255.252.0
- Default Gateway: 10.102.188.1
- Obtain DNS Server Address automatically: ☒
- DNS Server(s): 10.0.2.166
- Register Device at DNS Server dynamically: ☐
- HISLIP Port: 4880

A 'Submit' button is located below the HISLIP Port field. A note on the right states: 'Attention! Changing the hostname reboots the device!'. At the bottom, there is a password field with the label '(Password required!)'. A status bar at the very bottom indicates 'Status: No error'.

The "IP Address Mode" selects a configuration mode for the IP address of the instrument. With static configuration, the entered IP address, subnet mask, and default gateway are used. With dynamic configuration, DHCP or dynamic link local addressing (automatic IP) is used to obtain the instrument IP address.



### Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

See [Chapter 11.6.4, "Password management"](#), on page 603.

## Advanced config

The "Advanced Config" web page provides LAN settings that are not declared mandatory by the LXI standard.



The screenshot shows the 'LAN Parameters' configuration page. On the left is a navigation menu with options like Home, Lan Configuration, IP Configuration, Advanced Config, Ping Client, Status, Utilities, Instrument Control, Web Control, Diagnostics, SCPI Remote Trace, Datasheet, Production Version, and Help. The main content area has a header 'LAN Parameters' and a list of settings: 'mDNS and DNS-SD' with a dropdown menu, 'ICMP Ping enabled' with a checked checkbox, and 'VXI-11 Discovery' with a checked checkbox. Below these is a 'Submit' button and a password field labeled '(Password required)'. At the bottom, a status bar indicates 'No error' and includes a copyright notice for Rohde & Schwarz.

The following advanced parameters are available:

- "mDNS and DNS-SD": The additional protocols "multicast DNS" and "DNS service discovery" are used for device communication in zero configuration networks, working without DNS and DHCP.
- "ICMP Ping": Must be enabled to use the ping utility.  
If you disable this setting, the instrument does not answer ping requests. The setting does not affect the LXI ping client. You can ping other hosts from the instrument, even if the setting is disabled.
- "VXI-11 Discovery": Must be enabled to detect the instrument in the LAN.  
If you disable this setting, the instrument cannot be detected by the VXI-11 discovery protocol mechanism. The setting does not affect other detection mechanisms. Setting up a VXI-11 connection via the IP address or the host name is independent of this setting.



### Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 606.
- ["Changing the default security password"](#) on page 607.

See [Chapter 11.6.4, "Password management"](#), on page 603.

### Ping client

The "Ping Client" page provides the ping utility to verify the connection between the LXI-compliant instrument and another device.

The ping is initiated from the instrument. Using the `ICMP` echo request and echo reply packets, this function checks whether the communication with a device via LAN is working. Ping is useful for the diagnosis of IP network or router failures.



To initiate a ping at the instrument:

1. On the "Ping Client" page, enter the IP address of the host in the "Destination Address" field (for example 10.113.1.151).
2. Select "Submit".

The screenshot shows the LXI web interface with a sidebar menu on the left containing options like Home, Lan Configuration, IP Configuration, Advanced Config, Ping Client, Status, Utilities, Instrument Control, Web Control, Diagnostics, SCPI Remote Trace, Datasheet, Production Version, and Help. The main content area is titled "Ping Parameter" and contains a "Destination Address" input field with a "Clear" and "Submit" button. Below this, the "Result" section displays the following text:

```
PING <host name> (10.102.189.51): 56 data bytes
64 bytes from 10.102.189.51: seq=0 ttl=64 time=0.040 ms

--- <host name> ping statistics ---
1 packets transmitted, 1 packets received, 0% packet loss
round-trip min/avg/max = 0.040/0.040/0.040 ms
```

At the bottom, a "Status" section indicates "No error". The footer of the interface reads "© 2022 ROHDE & SCHWARZ. All rights reserved."


### 12.6.2.2 SCPI remote trace

The remote trace functionality allows you to trace input and output strings at the remote control interface of the R&S SMBV100B, see [Chapter 12.11, "To trace messages with the LXI web browser interface"](#), on page 675.

A recorded trace (message log) can be evaluated directly in the dialog. Use the highlighting and navigation functions provided by the lower toolbar to locate error messages and messages containing arbitrary search strings. You can also export the message log to a \*.CSV file and evaluate the file using a suitable program.


To trace and display messages, switch on "logging" and "live mode" in the toolbar.



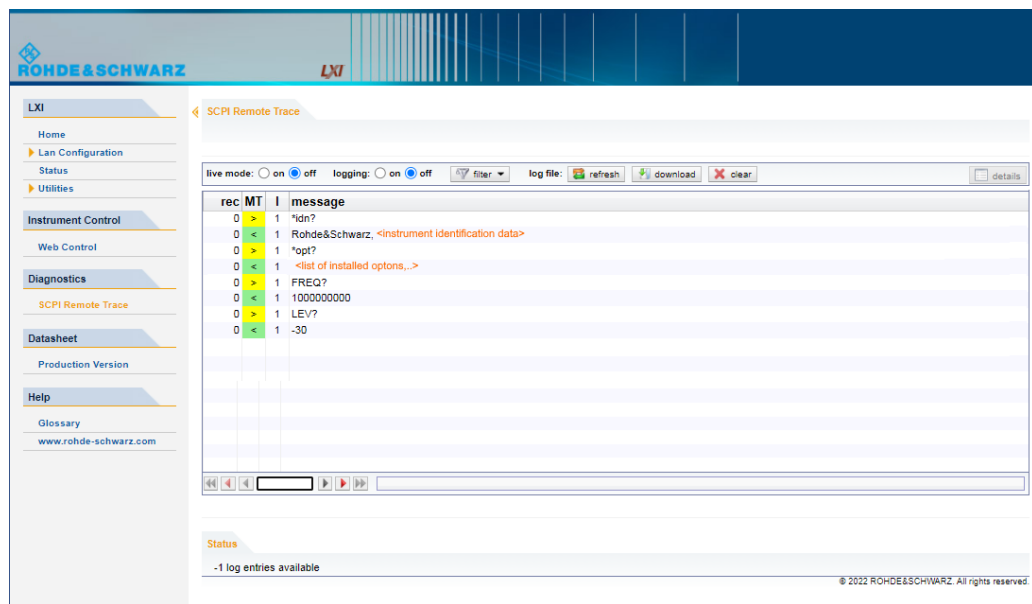

## Toolbars

The toolbar at the top of the dialog provides basic settings and functions.



- "Live mode" / "logging": If logging is switched on, messages are traced. They are stored in an internal database and can be displayed upon request, using the refresh button (live mode off) or they can be displayed automatically (live mode on).
- "Filter": applies a filter to columns and/or rows when working (live mode off)
- "Refresh": reads the message log from the internal database and displays it
- "Download": stores the SCPI trace log to a \*.CSV file
- "Clear": deletes all message log entries in the database and at the screen
- "Details": displays details of the selected message, for example an SCPI command in hex format (also possible by double-clicking a message)

## Columns

The following columns are available if no column filter is applied:

- "Rec": record number of the message within the message log
- "I": number of the subinstrument
- "MT": indicates the type of the message. Possible values and related message contents are:
  - > = incoming command
  - < = outgoing response to a query
  - E = error message, highlighted by red color
  - T = execution time, i.e. time required by the instrument to process the command internally.



To configure the instrument for remote access

- "message": indicates the type of the message. Possible values and related message contents are:
  - > = incoming command
  - < = outgoing response to a query
  - E = error message, denoted in red
  - T = execution time, i.e. time required by the instrument to process the command internally

### 12.6.2.3 Datasheet

The data sheet functionality allows you to retrieve the specification data of the instrument at the time of delivery.

The document contains all specified value ranges and information of the data sheet, for example important as reference values for recalibration.

**<instrument> Specifications <version>**

This document contains all specified limits of the data sheet. These values can be used as reference values for recalibration.  
 Examples for usage (SCPI): :system:spec? "ID\_RF\_FREQ\_SETTING\_TIME\_BX03\_BX06\_MS" or :syst:spec:par?  
 "ID\_RF\_LEVEL\_MAX\_GENERAL\_FORMULA\_GHZ\_DBM",1.0  
 For details please see user manual.

**Contents**

ID	Type	Value	ValueTypical	Formula
ID_RF_FREQ_SETTING_TIME_BX03_BX06_MS	ms	1.2	0.9	
ID_RF_FREQ_SETTING_TIME_BX12_BX20_MS	ms	1.4	1.0	
ID_RF_FREQ_SETTING_TIME_B131_B140_MS	ms	1.5	1.2	
ID_RF_FREQ_SETTING_TIME_B171_B174_MS	ms	1.8	1.2	

**Status**  
No error

© 2022 ROHDE&SCHWARZ. All rights reserved.

## 12.7 To configure the instrument for remote access

The R&S SMBV100B is equipped with a network interface and can be connected to an Ethernet LAN (local area network).

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

How to: see [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.

For identification in the network, all devices require an IP address.




To configure the instrument for remote access

How to:

- To find the VISA resource string.....662
- To configure the acces over LAN..... 662
- To configure the access over GPIB.....666

### 12.7.1 To find the VISA resource string

- Select "System Config > Remote Access > VISA Resource Strings".

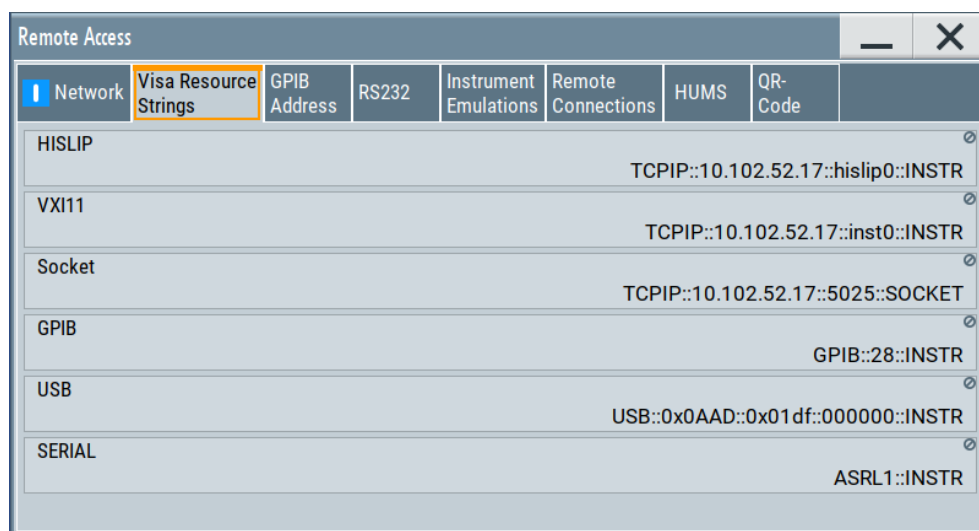

The dialog shows all specified resource strings of the supported remote control interfaces.

**Note:** Using the RS232 serial interface via USB requires the USB serial adapter R&S TS-USB1.

### 12.7.2 To configure the acces over LAN

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the **DHCP** protocol, this service assigns all address information automatically.
- If the network does not support DHCP, the instrument tries to obtain the IP address by using the Zeroconf (Avahi) protocol.

The automatic address configuration assigns the address information automatically. Thus it is safe to establish a physical connection to the LAN without any previous instrument configuration.



If the dynamic TCP/IP configuration does not succeed, or if the instrument is expected to use alternate TCP/IP configuration, you must set the address information manually.



### 12.7.2.1 How to assign the IP address

If necessary, you can assign the IP address manually. It is assumed that you have connected controller PC and the instrument.

#### To assign the IP address manually on the instrument

1. Obtain the IP address and subnet mask for the R&S SMBV100B and the IP address for the local default gateway from your network administrator. If necessary, also obtain the name of your DNS domain and the IP addresses of the DNS server on your network.
2. On the instrument, select "System Config > Remote Access > Network".
3. Select "Address Mode > Static".
4. Select the "IP Address".
5. Enter the IP address, for example *192.168.0.1*.

The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum.

6. Select the "Subnet Mask" and enter the subnet mask, for example *255.255.255.0*.  
The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum.

**Note:** The subnet mask must be the same for both, the R&S SMBV100B and the host interface, the instrument is connected to.

#### To assign the IP address manually on the computer

- Obtain the necessary information from your network administrator. If you use more than one LAN connector, you need separate address information for each connector.  
For information on how to configure the address information, see the documentation of the operating system the computer uses.

### 12.7.2.2 How to use the hostname

In a LAN that uses a [DNS](#) server, each computer or instrument connected in the LAN can be addressed with an unambiguous [Hostname](#) (also referred to as computer name) instead of the IP address. The DNS server translates the hostname to the IP address.



Using the hostname is useful in networks with dynamic TCP/IP and DHCP protocol services, that assign the address information automatically. Thus, it can be that the services assign a new IP address each time the instruments restarts, but they do not change the hostname.

Each instrument is delivered with an assigned hostname, that remains constant as long as it is not explicitly changed.



This function is password-protected. Unlock the protection level 1 to access it.

The default *hostname* name follows the syntax <INST>-<Serial Number>, where:

- <INST> is the short name of your instrument, as stated on the front panel.
- <Serial Number> is the individual serial number of the instrument.  
You can find the serial number at the rear panel of instrument. It is the third part of the device ID printed on the barcode sticker.



#### Example:

The default hostname of an R&S SMBV100B with a serial number 102030 is SMBV100B-102030.

#### To query and change the hostname

1. Select "System Config > Remote Access > Network".  
Section "Instrument Name" displays the assigned "Hostname".  
**Note:** This function is password-protected. Unlock the protection level 1 to access it.
2. Select "System Config > Setup > Security > Protection".
3. Enable the "Protection Level 1".  
The default protection level 1 password is 123456.  
The parameter "Hostname" in the "Network" tab is now enabled for configuration.
4. Change the "Hostname".

#### 12.7.2.3 How to configure LAN interface access and services

By default, the LAN interface and the supported LAN interface services are enabled.

For security reasons, for example to protect the instrument against unauthorized access, you can block either the LAN services individually, or the access over LAN in general.

#### To disable LAN access in general

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".
4. Disable "LAN" state.
5. Enter the [Security Password](#).



To configure the instrument for remote access

6. Select "Accept".

When disabled, communication over the LAN connection is not possible.

#### To disable LAN services individually

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".
4. Enable "LAN" state.
5. In the "Common Services" side tab, uncheck all services you want to block.

General | **LAN Services** | Password Management | X

LAN ☒

Common Services		Samba Services	
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Disabled</i>	<input type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Disabled</i>	<input type="checkbox"/>
HTTP <i>is Disabled</i>	<input type="checkbox"/>	Remote Support <i>is Disabled</i>	<input type="checkbox"/>
		Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>
		Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>

Security Password

6. Select the "Samba Services" sidetab.

General | **LAN Services** | Password Management | X

Common Services	Samba Services
SMB 1.0/2.0 Client <i>is Enabled</i>	<input checked="" type="checkbox"/>
SMB 1.0/2.0 Server <i>is Disabled</i>	<input type="checkbox"/>

Security Password

7. For example, uncheck "SMB 1.0/2.0 Server" to block the access for the SMB Samba server.



8. Enter the [Security Password](#).
9. Select "Accept".

### 12.7.3 To configure the access over GPIB

To control the instrument remotely over the GPIB bus, it must be addressed using the GPIB address. The remote control address is factory-set to 28, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

#### How to change the GPIB address

1. Select "System Config > Remote Access > GPIB Address".
2. Select "GPIB Channel Address" and enter a value between 0 and 30.



#### Risk of losing remote connection

If the remote access and network settings had been configured to values different to the default, executing a factory preset via remote control terminates the connection to the instrument.

## 12.8 To establish a remote control session over LAN

This section shows you how to establish remote control connections over the available interfaces.

The following general prerequisites must be fulfilled:

- The instrument and the controller have to be connected over the corresponding interface with the suitable cable.
- The instrument and the controller must be switched on.
- To operate the instrument remotely, it must be addressed using the defined interface address.

See:

- [Chapter 12.2.1, "LAN interface"](#), on page 615
- [Chapter 12.2.2, "USB interface"](#), on page 617
- [Chapter 12.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 618
- A remote control program must open a connection to the instrument, before it can send commands to and receive device responses from the instrument.



If security is a concern, see:

- Document Instrument Security Procedures.
- [Chapter 11.6.5, "How to prevent unauthorized access"](#), on page 606.



To establish a remote control session over LAN

- [To establish the connection with the LXI web browser](#)..... 667
- [To establish the connection using VXI-11 protocol](#).....667
- [To establish the connection using socket communication](#)..... 672

### 12.8.1 To establish the connection with the LXI web browser

Using the LXI browser interface you can access and control the R&S SMBV100B instrument remotely from another PC without additional installation. File upload and download between the instrument and the remote PC is also available.

#### To start remote control with the LXI web browser

1. On the instrument, make sure the LAN interface is enabled. Enable the LAN interface on the instrument, if necessary.  
See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
2. Connect the remote PC and the instrument in the same network.  
See [Chapter 3.1.7, "Connecting to LAN"](#), on page 30 .
3. On the remote PC, start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMBV100B in the browser's address bar.  
The R&S SMBV100B's welcome page is displayed.
5. In the navigation pane, select "Instrument Control" > "Web Control".  
Remote access to the instrument requires the password. The default password is *instrument*.
6. Enter the password and confirm with the [Enter] key.  
After the connection is established, the current screen of the R&S SMBV100B is displayed in the browser window.
7. Use the mouse cursor and keyboard to access the functionality of the instrument as you would directly perform on the instruments touchscreen and front panel.

### 12.8.2 To establish the connection using VXI-11 protocol

In this example, the I/O software library R&S VISA from Rohde & Schwarz is used to set up a LAN remote control link and remotely control the R&S SMBV100B. R&S VISA is running on a controller PC with Windows operating system. When the connection is set up, you can send commands to the instrument and receive the responses.

The remote control connection requires a VISA installation but no additional hardware on the controller PC. The LAN I/O channel is selected at initialization time using the VISA resource string (also referred to as "address string"). A VISA alias (short name) is used to replace the complete resource string. The host address is the R&S SMBV100B's hostname or its IP address.

See also [Chapter 12.2.1, "LAN interface"](#), on page 615.



To establish a remote control session over LAN


### To set up the controller with R&S VISA

To remote control the R&S SMBV100B, we use the R&S VISA Tester application. The application communicates via TCP/IP protocol.




The instrument is preconfigured for networks using DHCP (dynamic host configuration protocol). If this configuration is used, enter the computer name in the position of the IP address.

1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.  
See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
2. On the controller (remote PC), install the R&S VISA program.  
See <http://www.rohde-schwarz.com/rsvisa> > "RS VISA Release Notes".
3. Connect the controller and the instrument in the same network (network cable).  
Switch them on.  
See also [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.
4. On the controller, start "R&S VISA > Tester 32bit" or "R&S VISA > Tester 64bit".

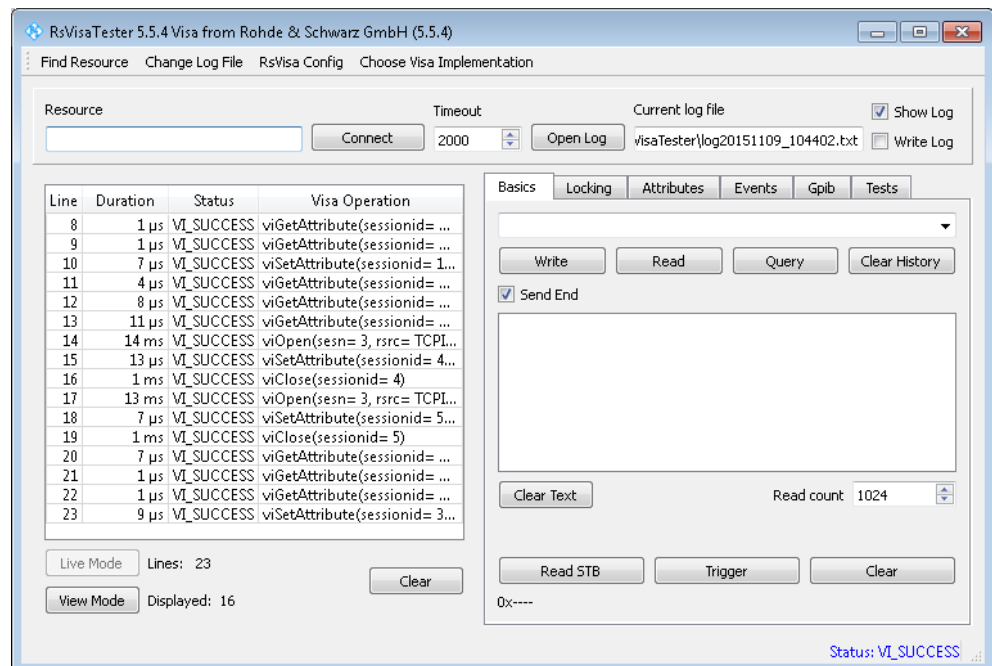


5. In the menu bar, select "Choose VISA Implementation > Rohde & Schwarz Visa" and confirm with "OK".

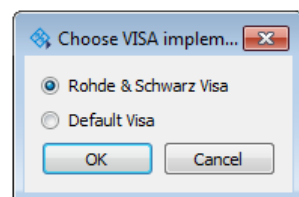



To establish a remote control session over LAN

6. In the menu bar, select "Find Resource" to search for the instrument in the LAN.

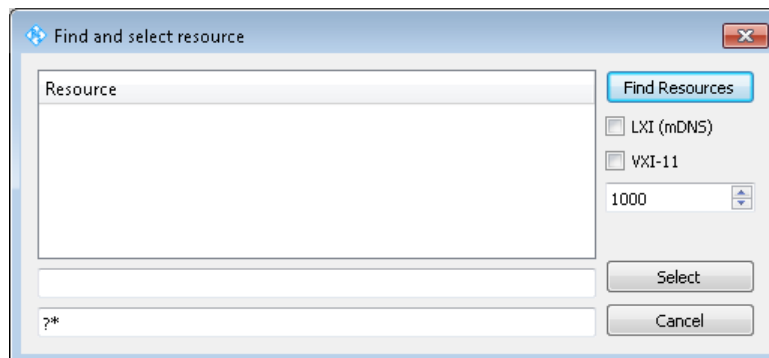


7. Select "VXI-11" and "Find Resources".

R&S VISA scans the network for connected instruments and lists all detected instruments in the "Resource" list.


**Note:** The search may take some time, particularly in large networks.

8. Select the required instrument and confirm with "Select".

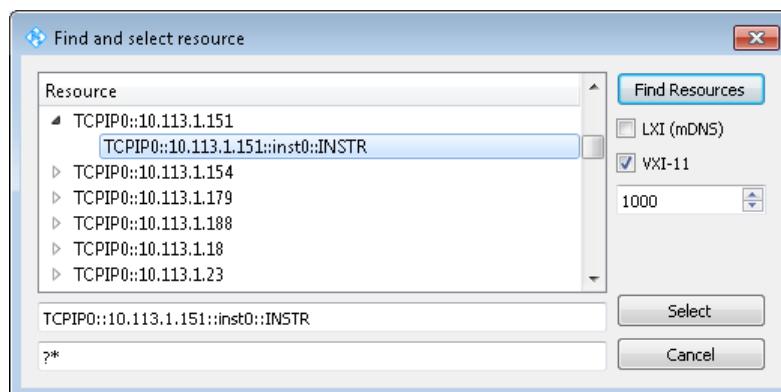

The "Find and select resource" dialog closes and R&S VISA indicates the IP address in the "Resource" field of the main application window.

9. As an alternative to the IP address, you can assign an alias name to the R&S SMBV100B:
- In the menu bar, select "RsVisaConfig".

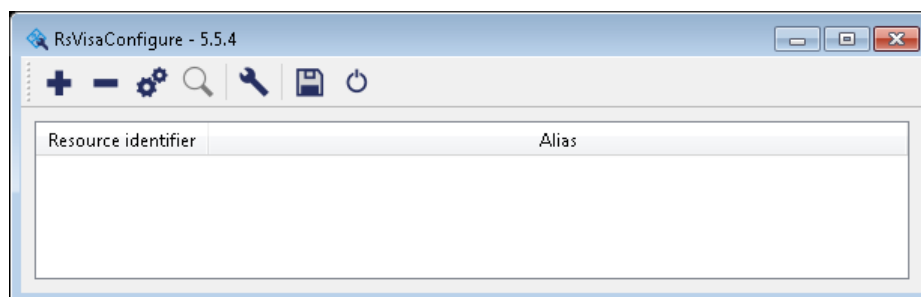


- In the toolbar, select "+" to access the "VISA Resource String Composer".




To establish a remote control session over LAN

- c) Fill in the "Alias" name, the "VISA Resource String" and the "Device IP Address or hostname" as shown in the figure, and confirm with "OK".

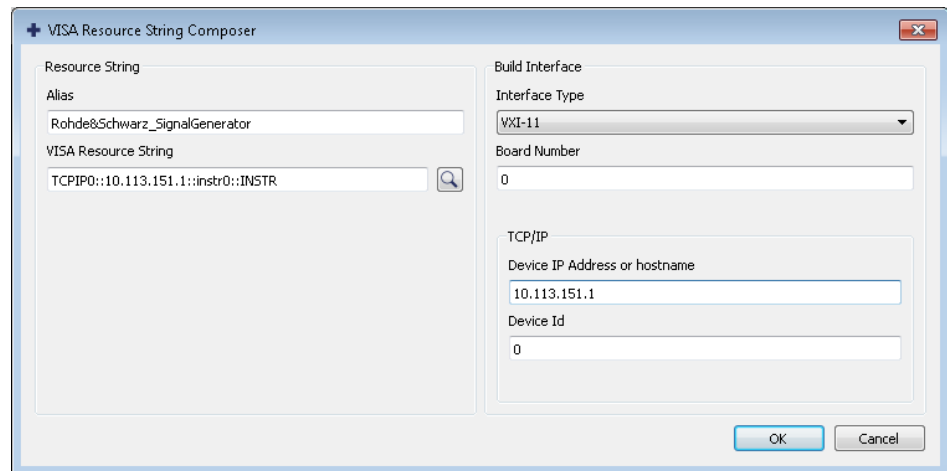

The "Alias" name is assigned.

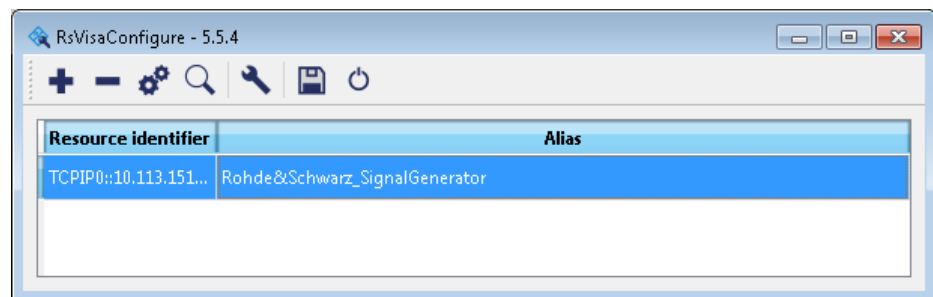

- d) Close the dialog.  
The R&S SMBV100B is registered in the program. It can be addressed via the resource string or alias name.

10. In the main window, select "Connect".

R&S VISA establishes the connection to the R&S SMBV100B.

You can send settings to configure the instrument and receive its responses.

**Note:** If the connection cannot be set up, R&S VISA displays an error in the log view.

See also [Chapter 14.5, "Resolving network connection failures"](#), on page 1079.

For further information on the functions to read and write to an open session, and the utility applications the software provides, see the R&S VISA user manual.

### To start remote control with R&S VISA

To set the instrument to remote control, you can use the addressed command `&GTR` or send any command from the controller.

1. Start the R&S VISA Tester.  
Establish the connection to the R&S SMBV100B.  
See ["To set up the controller with R&S VISA"](#) on page 668.




To establish a remote control session over LAN

2. In the R&S VISA "Basics" tab, enter a SCPI command, e.g. `"*IDN?"`. Confirm with "Query".

The instrument is switched to remote control when it receives a command from the controller.

3. Select "Read" to obtain the instrument response.

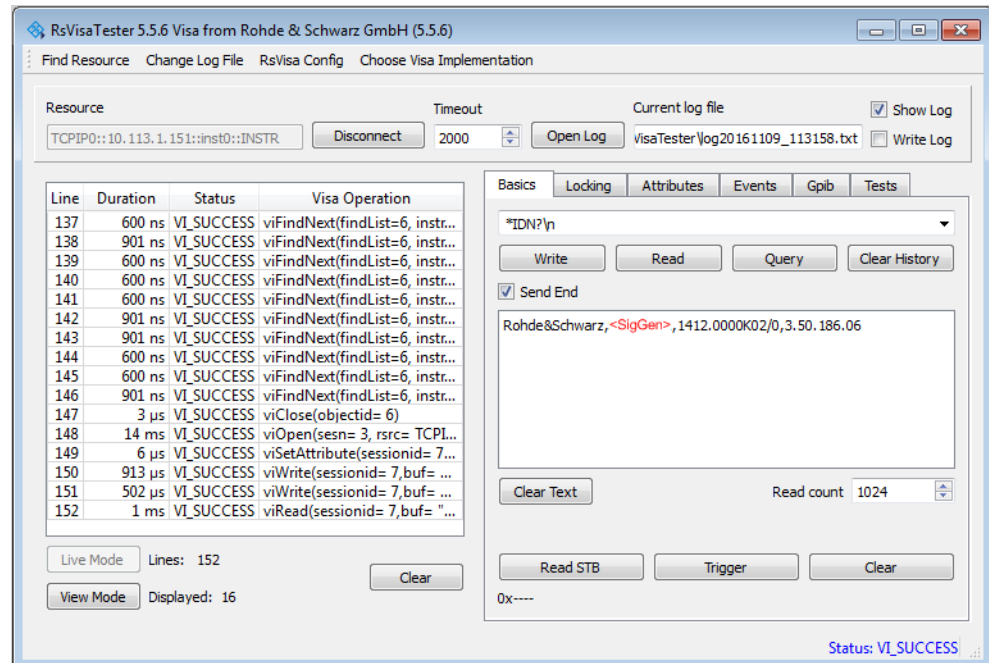

**Tip:** If the "Show Log" checkbox is checked, R&S VISA displays each VISA function call in the log-view on the left. If you check the "Write Log" checkbox, the log-view entry is written to the log file as well. You can operate the log-view in two modes: the "Live Mode" shows only the most recent messages whereas the "View Mode" allows you to scroll the history.

4. To set, e.g. the frequency, enter `SOUR1:FREQ 4 GHz` and select "Write". To check the performed setting, `SOUR1:FREQ?` and select "Query". The instrument response is `4000000000`. The value corresponds to the frequency in Hz.

While remote control is active, the "Remote" icon in the status bar indicates that the instrument is in remote control mode. Currently ongoing communication (data transfer) is indicated by green colored arrows in the icon.

Operating via the front and touch panel or via mouse and keyboard are locked, allowing a remote control program to be performed without interruption. On the display, keys and entry fields are grayed out and cannot be activated or modified, but you can still open dialogs, for example to verify settings.

5. To disable the access to the dialogs, use the command `SYST:KLOC ON`.
6. To prevent unintentional return to manual operation, use the command `&LLO`. See [Remote control via SCPI](#), section "LAN interface messages".



The instrument switches to "Remote LLO" state.

The [Setup] key is disabled.

7. To enable the [Setup] key, use the command `&GTR`.
8. To return to manual operation, see [Chapter 12.12, "To return to manual operation"](#), on page 676.

**Tip:** Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

### 12.8.3 To establish the connection using socket communication

This section provides an example on how to establish a remote control connection over Telnet client and a simple sockets-based program example that can be further developed.

See also [Chapter A.1, "Telnet program examples"](#), on page 1109.



The telnet client transmits information unencrypted. Therefore, for sensitive information we recommend that you use a client which supports secure protocols, like SSH.

In the following example, we assume basic knowledge of programming and operation of the controller. You can find information on the interface commands in the corresponding manuals.


#### To set up a Telnet connection

To control the software, only a Telnet program is required. The Telnet program is part of every operating system.


1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.  
See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
2. Connect the remote PC and the instrument in the same network.  
See [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.
3. On the remote PC, start the Telnet program.  
Enter the socket address.  
The socket address is a combination of the IP address or the hostname of the R&S SMBV100B and the number of the port configured for remote-control via Telnet.  
**Tip:** The R&S SMBV100B uses the port number 5025 for remote connection via Telnet.




To establish a remote control session over LAN

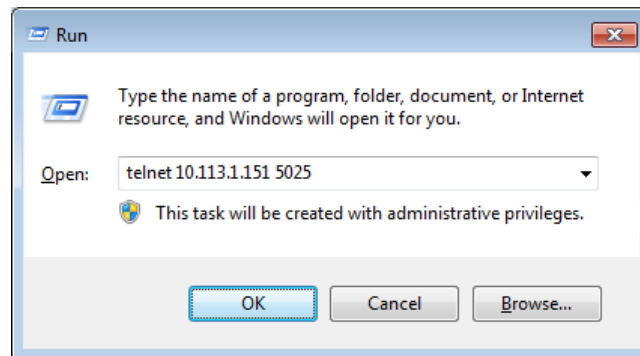

The connection to the instrument is set up and you can send remote-control commands.

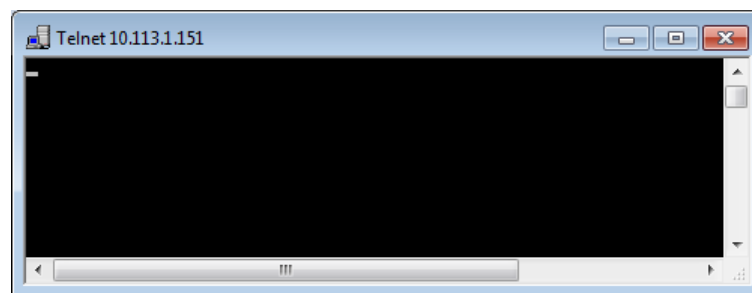

4. Telnet does not reflect your first entry.  
Insert a command, e.g. \*IDN and confirm with "Enter".
5. Observe the screen.  
A response on the query confirms that the connection is working. The client displays all subsequent inputs and responses.
6. Even if the cursor is not visible on the screen, blindly enter a remote-control command. Confirm with Enter.

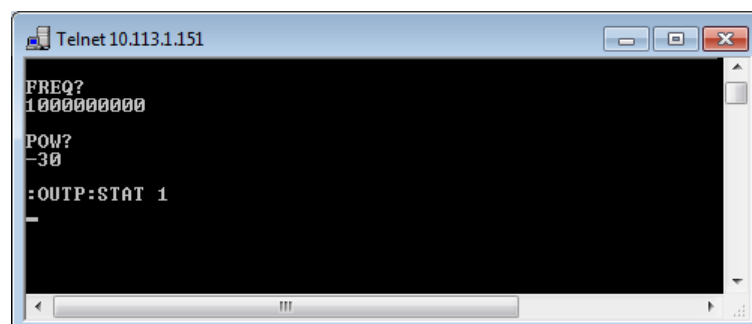



## 12.9 To establish a remote control session over GPIB

The program example in this section is written in VISUAL BASIC. A condition for programming in VISUAL BASIC is that the modules NIGLOBAL (Niglobal.bas) and VBIB32 (Vbib\_32.bas) are added to the projects.



Drivers for instrument, for example IVI-COM and LabVIEW drivers, are available for download area on the product page at:

<https://www.rohde-schwarz.com/driver/smbv100b/>

### To start remote control over GPIB

1. Connect instrument and controller using a GPIB cable.  
Switch them on.
2. Select "System Config > Remote Access > GPIB Address" > **"GPIB Channel Address = 28"**.  
The GPIB address of the instrument must be the default value of 28.
3. Execute the following commands on the controller:
  - a) Open the port to the instrument.  
`CALL IBFIND("DEV1", generator%)`
  - b) Inform the controller about instrument address.  
`CALL IBPAD(generator%, 28)`
  - c) Reset the instrument.  
`CALL IBWRT(generator%, "*RST;*CLS")`
  - d) Set the instrument to new address.  
`CALL IBWRT(generator%, "SYST:COMM:GPIB:ADDR 18")`
  - e) Inform the controller about new address.  
`CALL IBPAD(generator%, 18)`

The GPIB address of the instrument is changed.
4. To return to manual operation, press the Local key at the front panel.

## 12.10 To establish a remote control session over USB

For remote control, the PC and the instrument must be connected over the USB type B interface. A USB connection requires the VISA library to be installed. VISA detects and configures the R&S instrument automatically when the USB connection is established. You do not have to enter an address string or install a separate driver.

### To start remote control over USB

1. Connect instrument and controller using USB cable. Switch them on.
2. Execute the following commands on the controller:



To trace messages with the LXI web browser interface

- a) Open the port to the instrument.  
`viOpen (... , "USB::0x0AAD::0x01df::100001::INSTR", ...)`
- b) Reset the instrument.  
`viRST (generator%, "*RST;*CLS")`
- c) Set 2 GHz frequency  
`viPrintf (... , "SOUR:FREQ 2GHz\n")`
- d) Set 20 dBm output level  
`viPrintf (... , "SOUR:POW -20dBm\n")`

The RF frequency and signal level of the instrument are changed.

- 3. To return to manual operation, press the [Local] key.

## 12.11 To trace messages with the LXI web browser interface

The remote trace functionality allows you to trace commands and messages exchanged via a remote control interface of the R&S SMBV100B.

### To activate SCPI remote trace

1. On the instrument, make sure, that the LAN interface and "SCPI over LAN" are enabled.  
 See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
2. Connect the remote PC and the instrument in the same network.  
 See also [Chapter 3.1.7, "Connecting to LAN"](#), on page 30.
3. Start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMBV100B in the browser's address bar.  
 The welcome page is displayed.
5. In the navigation pane, select "Diagnostics > SCPI Remote Trace".
6. In the toolbar bar of the "SCPI Remote Trace" page, select "live mode > on" and "logging > on".

"live mode > on" displays all commands and responses, and "logging > on" also traces messages.

If you now control the R&S SMBV100B with SCPI commands, using an appropriate tool, the LXI function records the information sent and received.

The function records all sent commands, received responses and messages, and saves them in an internal database. If "live mode" is disabled, you can display the recent traces upon request, using the "refresh" button. You can also save the log in a file.

**Note:** The diagnostics functionality is extended in later releases, e.g. to download or upload SCPI command files from / to the instrument.



## 12.12 To return to manual operation



Before returning to manual control, command processing must be completed. Otherwise, the instrument switches back to remote control immediately.

1. To return from "Remote" state to manual state, perform one of the following:
  - On the controller, use the command `&GTL`

**Note:** If `&NREN` has been set before `&GTL` is locked. Use `&GTR` instead.
  - In the status bar, select the "Remote" icon.
  - On the front panel, press the [Local] key.
  - In the block diagram, select "Context sensitive menu > Key Emulation > Local"
2. **Note:** In the local lockout state, the command `&GTL` and the [Local] key are locked. You can unlock this state only over remote control.  
 To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:  
 To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:
  - On the controller, use the command `&LOCS`.  
 This command switches directly to manual operation.
  - Send the command `&REMS`.  
 This command changes the remote control state from "Remote LLO" to "Remote".
  - Use the Visual Basic command `CALL IBLOC (generator%)`.  
 The command switches directly to manual operation.
  - VISA function `viGpibControlREN()`  
 This function switches directly to manual operation.

## 12.13 To automate tasks with remote command scripts

To achieve fast configuration, make complex test setups or repeating measurements reproducible, you can automate the required settings with scripts. A script contains a series of SCPI commands corresponding to the settings. When completed, it is converted to an executable format, saved in a file and can be run whenever needed.



If you frequently need to load and run a script, assign the script to the [★ (User)], and you can quickly and easily perform the task.

See [Chapter 11.4.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 571.

In contrast to "Recall Setup" via the [★ (User)] key, an assigned script execution does not close active dialogs and windows. On the contrary, even active window control (open / close) is possible.



To automate tasks with remote command scripts

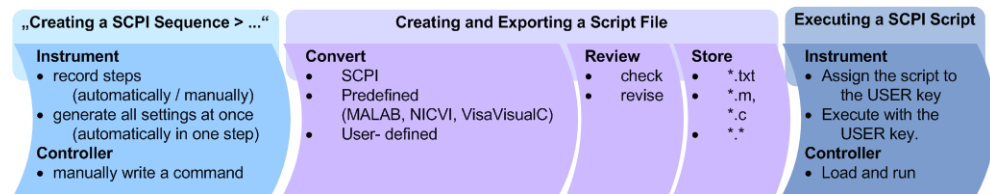


Figure 12-8: Steps for performing SCPI Scripts

In the graph, you can see the main steps required to work with a SCPI script.

### Creating a SCPI list

With the SCPI record functions, you can create a SCPI command list directly in the instrument and then export the list to the controller. If you want to edit or write a script manually, use a suitable editor on the controller. Even for manually creating, the instrument supports you by showing the corresponding command syntax and the current settings value.

Directly in the instrument, you can create a SCPI list at any time of operation, in the following ways:

- **Recording steps**  
Both, automatic and manual SCPI recording of settings is possible. You can start, stop and resume automatic recording, and also record individual commands manually.
  - **Manually record the steps selectively**  
In manual recording mode, you can deliberately record a SCPI command with the "Add CPI Command to Recording List" function, see [How to record SCPI lists manually](#).
  - **Automatically record all performed steps**  
The instrument records the SCPI command and settings value of each step you perform, and then writes the commands to the file system, see [How to record SCPI lists automatically](#).  
You can also add a SCPI command manually to the recording list during automatic SCPI recording.
- **Generating all settings at once**  
Generates the SCPI commands of the current instrument settings in one step, and writes the command list in a temporary list, see [How to create a SCPI list with the current instrument settings in one step](#).  
**Note:** This function lists all commands in alphabetical order, in contrast to the recording or manual creation, which consider the order the settings are configured. Using this function can slow down the runtime or cause errors during execution. Therefore, always check and revise a script if necessary, see ["How to check a SCPI list"](#) on page 684.
- **Manually create a command script with "Copy" and paste**  
Enables you to copy the SCPI command and the current setting, see [Chapter 12.13.1, "Show SCPI command"](#), on page 679.





Some parameters cannot be set by a SCPI command.

If so, *no SCPI command found* is entered instead of a command when you record or generate all settings at once.

### The difference between Show SCPI Command and the provided cross-reference

If you want to enter your settings in a script, or use a remote control program, you must know the corresponding SCPI command and the exact syntax.

If you need to look up the SCPI command, the instrument offers two ways to figure it out quickly.

- "Show SCPI command" (context-sensitive menu)  
Displays the SCPI command syntax of a selected parameter including the current setting value, see ["Finding out the SCPI command with the "Show SCPI Command" function"](#) on page 685.  
The "Copy" function enables you to write a SCPI script conveniently by hand.
- Instrument help ([Help] key)  
Opens a help topic that describes the selected parameter or instrument function, including a cross-reference to the corresponding SCPI command. The reference leads you to the description of the SCPI command comprising the complete SCPI syntax, all available setting values, value ranges, etc.  
See ["Finding out the SCPI command using the online help"](#) on page 686.

### Creating and exporting a script file

When the script list is completed, a code generator translates the SCPI commands into the source code of a proprietary programming language, using a code template. Therefore, each language requires an appropriate code template. When converted, you can save the script in a file with an extension corresponding to the programming language.

The R&S SMBV100B provides the following predefined code templates by default:

- Plain SCPI  
Represents SCPI base format, that is ASCII format, saved as text file (\*.txt).
- MATLAB  
A programming environment, frequently used in signal processing and test and measurement applications (\*.m).  
You can directly use this format with MATLAB(c) Toolkit. For comprehensive information on this topic, refer to the application note [1GP60: MATLAB Toolkit for R&S Signal Generators](#).
- NICVI  
An ANSI C programming environment designed for measurements and tests (\*.c).  
You can directly use this format with National Instruments LabWindows CVI.
- Python3  
A general-purpose and high-level programming language (\*.py).

You can also convert a script to a user-specific format. In this case, you need a code template with the extension \*.expcodetmpl.

For information on how to select the code template and save the script in a file, see [Chapter 12.13.3, "SCPI recording export settings"](#), on page 680.



### Executing a SCPI script

A SCPI script primarily runs on the controller PC. In addition, you can execute a script directly on the instrument, by assigning the script to the [★ (User)] key.

See [Chapter 11.4.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 571.

## 12.13.1 Show SCPI command

Access:

1. Select the parameter.
2. Open the context-sensitive menu (tap and hold).
3. Select "Show SCPI Command".

This function provides the syntax of the remote command with the current setting.

### Copy

Copies the command and the current setting.

### Close

Exits the "SCPI Command" dialog.


## 12.13.2 Displaying an SCPI list

The instrument displays a recorded SCPI list and thus provides viewing the recorded results before exporting.

- ▶ Depending on the starting point, you can access the "SCPI Recording List" dialog as follows:
  - During recording  
Select "Show SCPI Recording List" in the context-sensitive menu.
  - At any time outside recording  
Select "Show SCPI Recording List" in the context-sensitive menu.  
This function assumes that at least one recording has been executed after power-on.
  - At the end of the recording  
Select "Stop automatic SCPI recording". The dialog opens automatically.
  - After you have exported the script to a file.  
Select "SCPI Recording Export > Show file content"



See [Chapter 12.13.3, "SCPI recording export settings"](#), on page 680.

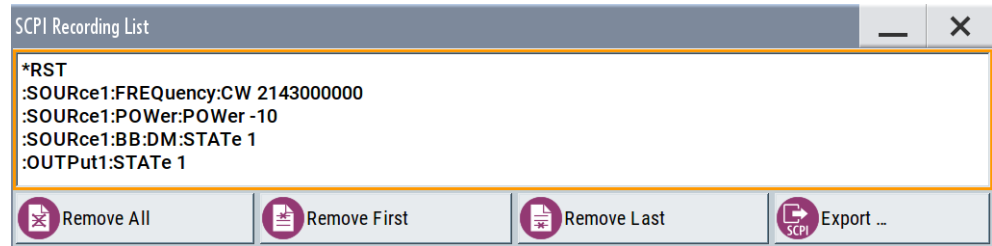

The "SCPI Recording List" shows the last recorded and exported commands.

### SCPI Recording List

Lists the automatically or manually recorded recorded SCPI commands.

### Export

Opens the [SCPI Recording Export](#) dialog for configuring the file parameters for export.

### Remove All, Remove First, Remove Last

Deletes either the first, the last or all recorded SCPI commands.

To remove several recorded commands, repeat the removing.

For post processing, export the SCPI command list in a file, see [Chapter 12.13.5, "How to convert and save SCPI lists"](#), on page 685.

## 12.13.3 SCPI recording export settings


Scripts are configured and saved in the "SCPI Recording Export" dialog. This dialog opens automatically, when you stop recording.

Access:

1. Select "Show SCPI Recording List" in the context-sensitive menu.

The "SCPI Recording List" dialog opens.

2. Select "Export".

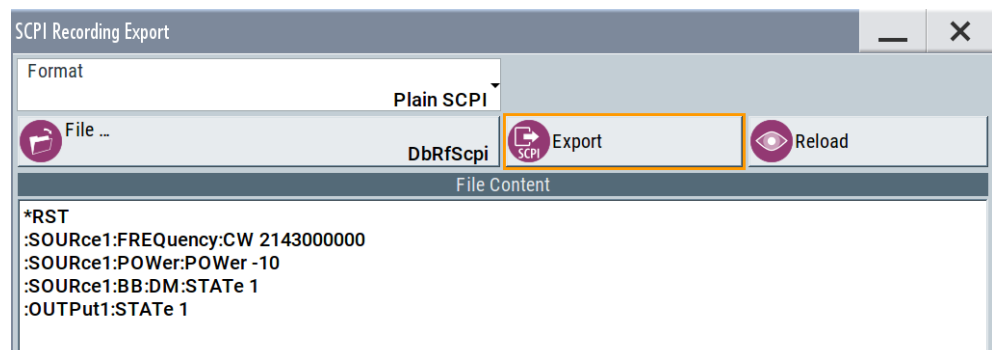



The "SCPI Recording Export" dialog contains all functions required for export of command lists to a file. It enables you to select the source code format, assign an individual filename and display the file content.

**Format**

Selects the source code format for the command list.

"Plain SCPI"      Uses SCPI syntax.

"Predefined Code Generator"

Accesses the predefined templates for common source code generators that convert the recorded settings in the programming languages MATLAB or NICVI or Python.

"User Code Generator"

Use this setting to convert a script by a user-specific code generator.

**Select Code Template**

Opens the standard "File Select" dialog and lists the predefined or user-defined code templates.

See [Chapter 10.5.1, "File select settings"](#), on page 524.

**File**

Opens the standard file select dialog "Select Output File", see [Chapter 10.5.1, "File select settings"](#), on page 524.

**Export**

Executes data export.

The SCPI list is saved in as file with the selected filename and in the selected directory, see [File](#).

**Reload**

Reloads a SCPI list from a file.

You can export recorded SCPI lists to files (see [File](#) and [Export](#)), that can be modified.

**File content**

Displays the content of the script in the selected format and code template.

## 12.13.4 How to record / create SCPI lists

**How to record SCPI lists automatically**

The following example briefly explains how to proceed when you want to record SCPI lists.

For comprehensive description, see [1GP98: SCPI Recorder Test Automation on a Fingertip](#).

1. On the screen, open the context-sensitive menu (touch and hold, or right mouse click) and select "Start SCPI recording".





### Start SCPI Recording

Starting from now, all steps you perform are recorded.

2. To stop SCPI recording, select "context-sensitive menu > Stop SCPI recording".



### Stop SCPI Recording

The "SCPI Recording List" dialog opens automatically.

3. Proceed with [How to check a SCPI list](#).

### How to record SCPI lists manually

1. To retrace your settings, open the context-sensitive menu and select "Mark all Parameters Changed from Preset".



### Mark All Parameters Changed from Preset

This function identifies and highlights all settings you have changed, both in the block diagram, and in the dialogs.

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

2. For selectively recording your steps:
  - a) Set the parameter.
  - b) Open the context-sensitive menu.
  - c) Select "Add SCPI Command to Recording List"



### Add SCPI Command to Recording List

**Tip:** You cannot see "Add SCPI ..." in the menu?


A possible reason is opening the menu outside of a dialog or input field, for example in a block diagram. Open the context-sensitive menu within the corresponding dialog or input field, and the feature is available.

- d) Continue with the next setting, and repeat steps *a to b* whenever needed.

Each time you select "Add SCPI ...", the SCPI command is appended to a temporary list.



3. To check the progress of the recording, select "Context-Sensitive > Show SCPI Recording List".



The "SCPI Recording List" dialog opens, displaying all recorded settings so far.


4. Proceed with [How to check a SCPI list](#).

### How to create a SCPI list with the current instrument settings in one step

You can also generate a SCPI list from a manually created instrument state at any time, in only one step.

To generate a SCPI list with commands for all settings performed:

1. Select "Save/Recall > SCPI Export".

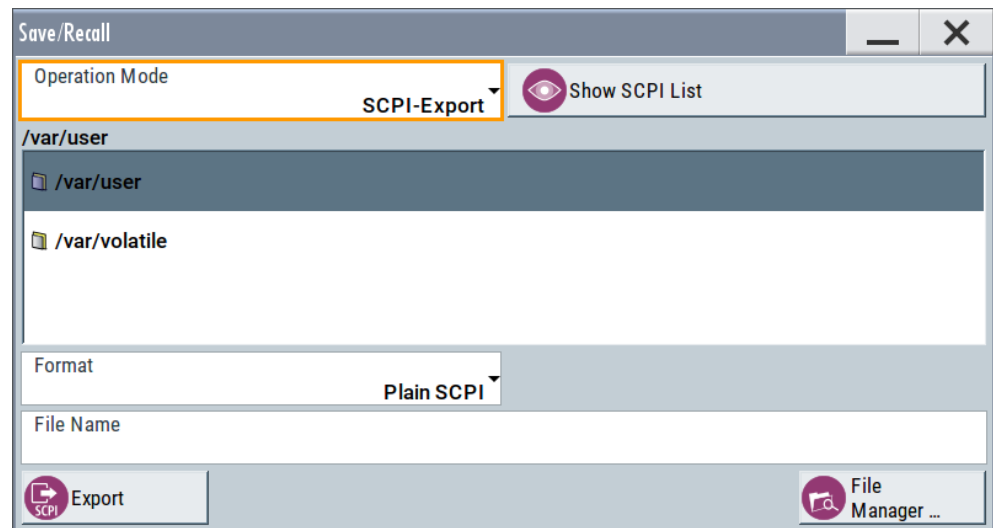


The instrument opens the standard file select dialog, see [Chapter 10.4.1, "Save/recall settings"](#), on page 519.

2. In the "Format" entry field, select the source code.
3. Depending on the selected format, convert the script as described in [Chapter 12.13.5, "How to convert and save SCPI lists"](#), on page 685
4. Enter a filename.
5. Select "Export".  
The instrument writes all SCPI commands of the key parameters and the modified settings in the file. Also assigns the file extension automatically according to the source code format.
6. To preview the content of the SCPI list:
  - a) Select Save/Rcl.
  - b) Select "Operation Mode > SCPI-Export".



- c) In the `/var/user/` directory, select a previously saved file.
- d) Select "Show SCPI List".



```

SCPI List
*RST
:SOURce1:FREQuency:CW 2143000000
:SOURce1:POWer:POWer -10
:SOURce1:BB:DM:STATe 1
:OUTPut1:STATe 1
  
```

The list of all SCPI commands is displayed, for example, for a final check.



Exporting the SCPI list of the instrument state in one step is a fast and convenient method. Nevertheless, it usually requires postprocessing on an external PC.

### How to check a SCPI list

The easiest way to check a list, is to execute it. The generator returns a warning if a setting could not be performed.

However, we recommend that you check the list and possibly rework. It can be that ...

- A parameter has not assigned a SCPI command or an element of the user interface has not an assigned parameter. In these cases, `:SYST:INF:SCPI 'SCPI command not available'` is entered in the list instead. Such entries are also detected during execution. The instrument recognizes these incomplete commands and displays an error message.
- A preset has been executed, but several standards then perform some internal settings that are also assigned to the list with "SCPI Export".
- After a preset still some settings are defined, which are then written to the list generated with "SCPI Export."

Some suggestions on how you can check and revise a list:

1. Search and remove missing command entries.
2. Remove unnecessary content written after a preset.
3. Rearrange the commands to a reasonable order. If you, for example, set a `STATe` command to the last position of a list, you can avoid intermediate calculations of the signal.
4. Preview the list for completeness by comparing it with the modified settings in the manual mode.
  - a) To retrace your settings in manual operation, open the context-sensitive menu and select "Mark all parameters changed from preset". The function identifies all settings you have changed, both in the block diagram, and in the dialogs. They appear orange.
  - b) Check whether there is a command in the list for all modified settings.



5. To perform modifications, export the list to a PC, using for example a USB flash drive.

### 12.13.5 How to convert and save SCPI lists

After completing the recording, the "SCPI Recording Export" dialog opens.

1. Select the "Format" for the command syntax in which you want to save the list.
2. "Select Code Template"
 

Depending on the selected format, proceed accordingly:

**Note:** Select the code template **before** exporting.

  - a) Plain SCPI
 

Continue with the next step.
  - b) Predefined code generator
 

The "SCPI Recording Export - Select Predefined Code Template" dialog opens. Select one of the predefined code templates.
  - c) User code generator
 

A file system ("SCPI Recording Export - Select User Code Template") dialog opens. Select your user-defined code template. The code template must have file extension \*.expcodetmpl.
3. Select "File..."
 


The "SCPI Recording Export - Select Output File" dialog opens.
4. Select "New" and assign a filename for saving the recorded list.
5. In the "SCPI Recording Export" dialog, select "Export".
 

Saves the recorded data either in ASCII format (plain SCPI), or in the corresponding format of the used code template, and shows the SCPI list in the "File Content" section.

### 12.13.6 How to find out the SCPI commands for GUI functions


#### Finding out the SCPI command with the "Show SCPI Command" function

1. To find out the SCPI command of a parameter in manual operation, select the parameter.
2. Open the context-sensitive menu and select "Show SCPI command"



You get the detailed command syntax, including the currently set value.



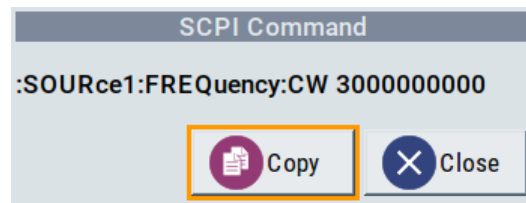

With the "Copy" function, you can conveniently paste the command including the current setting, e.g., in a command script.

### Finding out the SCPI command using the online help

If you are looking for the remote command to a function in manual operation, you find it in the description of the online help.

1. To find out the SCPI command of a parameter in manual operation, select the respective parameter.
2. To open the corresponding help topic, select one of the following:
  - In the display, select "context-sensitive menu > Help".



- On the front panel, press the [Help] key.

The help topic opens. Apart from the function description, it contains the SCPI command in detailed syntax.



### How to find the corresponding GUI function to a command

Conversely, if you are looking for a function in the GUI, which belongs to a SCPI, you find it via a cross-reference in the online help and in the user manual.

## 12.14 To operate the instrument using VNC

This section shows you some examples of the various possibilities to set up remote operation.

- Using a desktop system
  - [Chapter 12.14.2.1, "Using a web browser"](#), on page 687
  - [Chapter 12.14.2.2, "Using a VNC client software"](#), on page 687
- Using a smart device
  - [Chapter 12.14.3.1, "Using a VNC app"](#), on page 690
  - [Chapter 12.14.3.2, "Using a web browser with HTML5"](#), on page 691
  - [Chapter 12.14.3.3, "Special mode QR code"](#), on page 691



### 12.14.1 How to enable the VNC service

1. **NOTICE!** Enabled VNC service can lead to unauthorized access.  
Change the computer name and password of the instrument.  
See [Chapter 11.6.5, "How to prevent unauthorized access"](#), on page 606.
2. Select "System Config > Setup > Security > Security > LAN Services".
3. Select "VNC > On".
4. Enter the [Security Password](#).
5. Select "Accept".

### 12.14.2 How to set up remote operation from a desktop system

#### 12.14.2.1 Using a web browser

The R&S SMBV100B supports remote operation via VNC with any web browser, like Windows Internet Explorer or Mozilla Firefox for instance, or alternatively, an HTML5 web browser.

To operate the instrument via a web browser remotely:

1. Install the *JRE (Java Runtime Environment)* on the remote computer.  
**Note:** Skip this step if you are working with an HTML5 web browser.
2. Type the instruments' IP address in the address field of the web browser on your PC, e.g. *http://10.113.1.151*  
The VNC authentication screen appears.
3. Enter the password and confirm with "OK".  
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

#### 12.14.2.2 Using a VNC client software

A VNC client software is an application which can be used to access and control the instrument from a remote computer through a LAN connection.

The VNC client software for setting up the connection is included in the operating system Linux/Unix per default. For Windows operating systems, a VNC client software must be installed manually.

Various free-of charge programs such as Ultr@VNC or similar VNC client programs are available for download on the Internet.




### Setting up the VNC connection on a Linux/Unix desktop client

1. Start a web browser on the remote computer. Enter the IP address of the instrument.
2. Enter the following address:  
`vnc://<IP-address of the instrument>`, for example `vnc://10.113.1.151`.  
 A dialog opens requesting the password for the remote VNC connection.
3. Enter the password and confirm with "OK".  
 The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

### Setting up the VNC connection on a Windows desktop client


1. Install the VNC viewer program component on the remote computer.
  - a) On the Internet, select a VNC client program and download it onto your PC.  
 For example the free of charge software Ultr@VNC (`vncviewer.exe` is available, see <http://www.uvnc.com/download/index.html>).
  - b) Execute the VNC client installation.
  - c) Select the VNC viewer program component and follow the installation instructions.
2. Start VNC viewer program component on the PC.

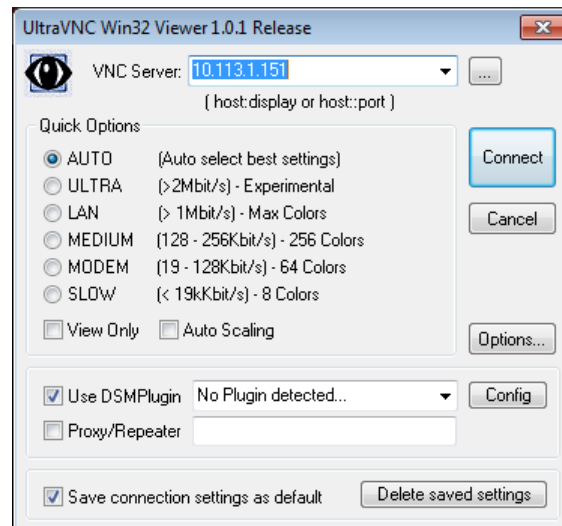

3. Select "VNC Server" and enter the IP address of the instrument.
4. To initialize the connection, select "Connect".  
 A dialog opens requesting the password.



To operate the instrument using VNC

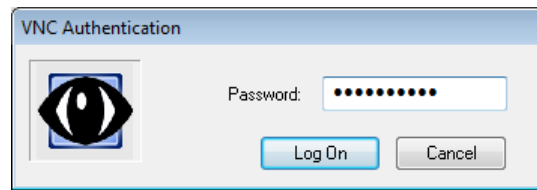

5. Enter the password and confirm with "OK".  
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

#### Terminating VNC connection

- Perform one of the following:
  - a) On an external Unix/Linux PC, close the Internet browser or the signal generator window.
  - b) On an external Windows PC, close the VNC viewer program.

The connection is terminated but not disabled. It can be established again anytime. In the "Active Connections" tab, the displayed TCP/IP connection disappears. See [Chapter 11.6.5, "How to prevent unauthorized access"](#), on page 606.

### 12.14.3 How to set up remote operation from a smart device


The R&S SMBV100B supports remote operation via VNC from a smart device (remote client), like a tablet (tablet computer) or a smartphone. The smart device accesses the instrument via WLAN, either by a suitable App, or an HTML5 web browser, that means with embedded *javascript*.

There are several possibilities to establish a WLAN connection between the smart device and the R&S SMBV100B. This section gives an example of how a network environment can be built up, and some essential configuration steps.

For more information, see:

- [1MA216: Remote Operation of Windows Based Instruments with Apple iPad](#)
- [7BM82: Apple iPad Remote Control of Broadcasting T&M Instruments](#)

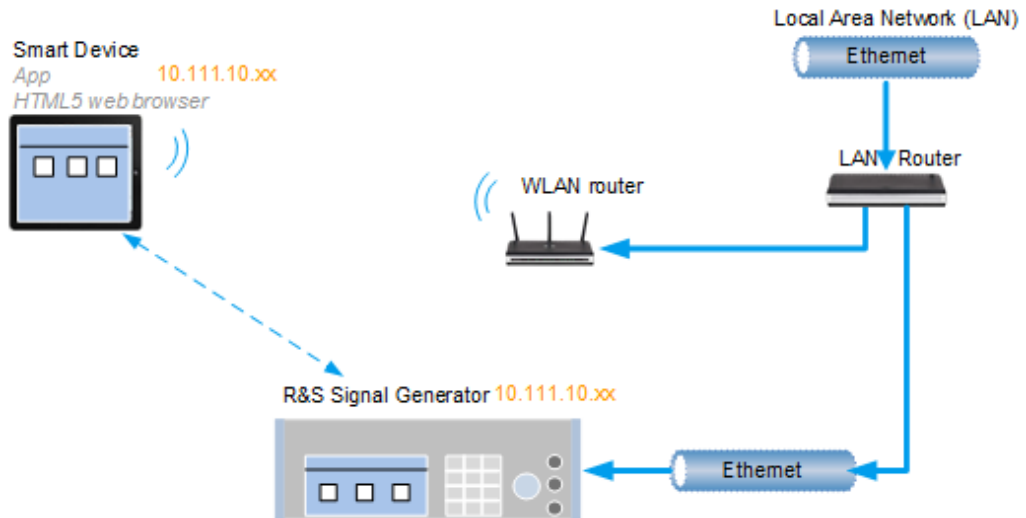

**Example:**

**Figure 12-9:** Example of a network configuration for remote operation with a smart device

As shown in the figure, the R&S SMBV100B and the WLAN router are connected to the LAN router. The smart device accesses the Rohde & Schwarz instrument via the WLAN router.

**Prerequisites**

For this network configuration, the following prerequisites must be met:

- The required equipment is:
  - A LAN router
  - A WLAN router (hot spot)  
Required for accessing the R&S SMBV100B
- The smart device must be known and accepted in the network of the R&S SMBV100B.
- The App or web browser implements the VNC functionality on the smart device for remote operation.

It is recommended that all components in the network use DHCP, which automatically assigns the relevant address information.



With the configuration in the example, you can reach the instrument from a great distance, since the WLAN router acts as an additional access point.

**12.14.3.1 Using a VNC app**

Using a VNC App enables the smart device to access the R&S SMBV100B via WLAN.

The VNC Apps are available from various manufacturers of the smart devices.



The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website to find out whether a VNC App is available for your device, and how it is installed.
2. In the network, establish the connection of the WLAN router to the LAN router. We assume the connection of the LAN router and the R&S SMBV100B and their configuration in the LAN.
3. Configure the WLAN router according to the manufacturer's instructions.
4. Install the required *VNC App* on your smart device.
5. On the smart device, start the *VNC App*.

6. In the address field, enter the IP address of the instrument.

A log-on dialog opens and requests the password for the VNC connection.

7. Enter the password to establish the remote access.

The default user name and password is *instrument*.

See [Chapter 11.6.5, "How to prevent unauthorized access"](#), on page 606.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

#### 12.14.3.2 Using a web browser with HTML5

The R&S SMBV100B supports remote operation from a smart device via VNC with any HTML5 compliant web browser, like Internet Explorer, Firefox, Google Chrome, or Safari for instance.

To operate the instrument remotely via a web browser, proceed as follows:

1. In the web browser enter the IP address of the instrument, e.g. *http://10.113.1.151*.
2. Type the instrument IP address in the address field of the web browser on your PC, e.g. *http://10.113.1.151*

The VNC authentication screen appears.

3. Enter the password and confirm with "OK".

The default password is *instrument*.

See [Chapter 11.6.5, "How to prevent unauthorized access"](#), on page 606.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

#### 12.14.3.3 Special mode QR code

If your smart device is equipped with a camera and a QR code reader, you can scan the instrument's IP address or access the instrument with the Safari web browser.

QR code readers are available from various manufacturers of the smart devices.



The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website of your smart device to find out whether a reader is available for your device, and how it is installed.
2. Install the required QR code reader software on your device.
3. Start the reader.
4. On the R&S SMBV100B, select "System Config > Remote Access".
5. In the "Remote Access" dialog, select the "QR-Code" tab.
6. Scan the QR code of the instrument with your smart device.
7. On the device, decode the scanned QR code and pass it to the web browser.  
A dialog opens requesting the password for the VNC connection.
8. Enter the password and confirm with "OK".  
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

## 12.15 References

### 12.15.1 LXI functionality

LAN Extensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology.

LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. Like GPIB, LXI determines and standardizes the way the instrument behaves in a LAN.

The LXI implementation in the R&S SMBV100B allows you to change certain LAN settings, to reset the LAN connection, and to identify the instrument.



For information about the LXI standard, refer to the LXI website at <http://www.lxistandard.org>.

See also "News from Rohde & Schwarz, article 2006/II - 190".

The LXI functionality in the R&S SMBV100B is characterized by a common LAN implementation, including an ICMP ping responder for diagnostics. Using a web browser, you can configure the instrument. A LAN Configuration Initialize (LCI) mechanism resets the LAN configuration. The instrument also supports automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.



In addition, the R&S SMBV100B provides the following LXI-related functionality:

- Integrated "LXI Status" dialog for LXI status indication and reset of the LAN configuration, see [Chapter 12.6.1, "LXI status settings"](#), on page 654.
- "LXI Browser Interface", as described in [Chapter 12.6.2.1, "LAN configuration"](#), on page 656.
- "SCPI Remote Trace" utility, see [Chapter 12.6.2.2, "SCPI remote trace"](#), on page 659.



#### Firmware update

To enable the full LXI functionality after a firmware update, shut down and restart the instrument.

## 12.15.2 Code generator templates

This section describes the main structure of the code generator templates, and shows the method with the NICVI template.

The code generation is controlled by templates with the following blocks:

Command	Function
#EXTENSION_START #EXTENSION_END	Defines the output file extension.
#INIT_CODE_START #INIT_CODE_END	Contains initial entries, such as included files and libraries, buffer size, commands for synchronization, or creating a VISA session.  All entries between start and end are written once at the beginning of the output file.
#COMMAND_CODE_START #COMMAND_CODE_END	Frame for a SCPI command. A command is accessed with %COMMAND.
#NO_COMMAND_CODE_START #NO_COMMAND_CODE_END	Frame for a parameter with no SCPI command available. A parameter is accessed with %PARAMETER.
#EXIT_CODE_START #EXIT_CODE_END	Closes the visa session.  All entries between start and end are written once at the end of the output file.

Templates are created in ASCII format with file extension \*.expcodetempl.

#### Example:

Example to the code generator template NICVI.expcodetmpl:

```
#EXTENSION_START
.c
#EXTENSION_END

#INIT_CODE_START
```



```

#include <ansi_c.h>
#include <visa.h>
#include <cvirte.h>

#define MAX_BUFFER_SIZE 200
static ViStatus status;
static ViSession defaultRM, handle;

static void write_command(char *command)
{
    char writeBuffer[MAX_BUFFER_SIZE];
    char readBuffer[MAX_BUFFER_SIZE];
    int length;
    int readCount;

    strcpy(writeBuffer, command);
    //append "*OPC?" to sync
    strcat(writeBuffer, "*OPC?");
    length = strlen (writeBuffer);
    writeBuffer[length]='\n';
    length = length+1;
    viWrite (handle, writeBuffer, length, VI_NULL);
    //read result
    viRead(handle, readBuffer, 100, &readCount);
}

int main (int argc, char *argv[])
{
    if (InitCVIRTE (0, argv, 0) == 0)
        return -1;    /* out of memory */
        //create a VISA session and return a handle to it
    viOpenDefaultRM (&defaultRM);
        //create a VISA session to the serial port and return a handle to it
    viOpen (defaultRM, (ViRsrc)"TCPIP::localhost::INSTR", VI_NULL, VI_NULL,
    &handle);
#INIT_CODE_END

#COMMAND_CODE_START
    write_command("%COMMAND");
#COMMAND_CODE_END

#NO_COMMAND_CODE_START
    //no SCPI command available for parameter %PARAMETER !
#NO_COMMAND_CODE_END

#EXIT_CODE_START
    viClose (handle);
    viClose (defaultRM);
    return 0;
}

```




```
}
#EXIT_CODE_END
```

### 12.15.3 Remote control states

#### How to recognize if there is an active remote connection to the instrument

- Observe the indication on the taskbar.



A softkey in the taskbar indicates if and what kind of remote connections are currently set up.  
See also [Chapter 12.5.6, "Remote connections settings"](#), on page 640.

The following table shows the different remote control states and the associated commands or actions to return to manual control.

Table 12-8: Remote control status icons

GUI symbol	Transition to remote control state...	Transition to manual operation...(local state)
	&GTR (controller) Remote control, but usable front panel keys. The parameters are in read-only mode.	<ul style="list-style-type: none"> <li>• &amp;GTL (controller)</li> <li>• Tap the "Remote" icon (display)</li> <li>• [Local] (front panel or key emulation)</li> </ul>
		A currently performed setting is indicated by the green arrows. The setting must be completed (white arrows), otherwise the instrument remains in remote state.
	&LLO (controller) Remote control with locked front panel keys to prevent user interaction. The parameters are in read-only mode. You can unlock LLO, and thus return to manual operation only via remote control.	<ul style="list-style-type: none"> <li>• &amp;LOCS (controller)</li> <li>• CALL IBLOC (generator%) (controller)</li> </ul> <b>Note:</b> The command &REMS returns to "Remote" state.



## 13 Remote control commands

In the following, all remote-control commands are presented in detail with their parameters and the ranges of numerical values.

For an introduction to remote control and the status registers, see [Chapter 12, "Network operation and remote control"](#), on page 612.

### 13.1 Conventions used in SCPI command descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**  
If not specified otherwise, commands can be used both for setting and for querying parameters.  
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**  
If not specified otherwise, a parameter can be used to set a value and it is the result of a query.  
Parameters required only for setting are indicated as **Setting parameters**.  
Parameters required only to refine a query are indicated as **Query parameters**.  
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**  
Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S SMBV100B follow the SCPI syntax rules.
- **Asynchronous commands**  
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (\*RST)**  
Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as **\*RST** values, if available.
- **Factory preset values**  
Default parameter values that are reset only by factory preset.
- **Default unit**  
The default unit is used for numeric values if no other unit is provided with the parameter.
- **Manual operation**  
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.



## 13.2 Backward compatibility with other Rohde & Schwarz signal generators

To allow you to use your existing scripts, the R&S SMBV100B accepts also a defined subset of SCPI parameter values of other Rohde & Schwarz signal generators, like the R&S SMBV. The R&S SMBV100B accepts these values and maps them automatically to the corresponding newly introduced parameters.



### Handling of parameters provided for backward compatibility with other Rohde & Schwarz signal generators

The parameter values provided for backwards compatibility are "setting only" values; the query commands return the corresponding new value.

#### Example:

```
SOURcel:BB:ARbitrary:TRIGger:SOURce EXTernal
```

The backwards compatibility parameter value `EXTernal` is accepted

```
SOURcel:BB:ARbitrary:TRIGger:SOURce?
```

Response: `EGT1`

The query returns the correct new value

## 13.3 Programming examples

The corresponding sections of the same title provide simple programming examples for the R&S SMBV100B. The purpose of the examples is to present **all** commands for a given task. In real applications, one would rather reduce the examples to an appropriate subset of commands.

The programming examples have been tested with a software tool which provides an environment for the development and execution of remote tests. To keep the examples as simple as possible, only the "clean" SCPI syntax elements are reported. Non-executable command lines (for example comments) start with two `//` characters.

At the beginning of the most remote control program, an instrument (p)reset is recommended to set the R&S SMBV100B to a definite state. The commands `*RST` and `SYSTem:PRESet` are equivalent for this purpose. `*CLS` also resets the status registers and clears the output buffer.

In all the examples we assume that:

- A remote PC is connected to the instrument
- The remote PC and the instrument are switched on
- A connection between them is established
- The security setting "System Config > Setup > Security > SCPI over LAN" is enabled.



## 13.4 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "\*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CLS.....	698
*ESE.....	698
*ESR?.....	698
*IDN?.....	699
*IST?.....	699
*OPC.....	699
*OPT?.....	699
*PRE.....	700
*PSC.....	700
*RCL.....	700
*RST.....	700
*SAV.....	701
*SRE.....	701
*STB?.....	701
*TRG.....	701
*TST?.....	702
*WAI.....	702

---

### \*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

**Usage:**                      Setting only

---

### \*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

**Parameters:**

<Value>                      Range:      0 to 255

---

### \*ESR?

Event status read



Returns the contents of the event status register in decimal form and then sets the register to zero.

**Return values:**

<Contents>                      Range:        0 to 255

**Usage:**                              Query only

**\*IDN?**

Identification

Returns the instrument identification.

**Return values:**

<ID>                                "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

**Example:**                        Rohde&Schwarz,SMBV100B,  
1423.1003K02/102030,4.30.005

**Usage:**                              Query only

**Manual operation:**    See ["IDN String"](#) on page 640  
See ["Hardware Options/Software Options"](#) on page 1083

**\*IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

**Return values:**

<ISTflag>                        0 | 1

**Usage:**                              Query only

**\*OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

**\*OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the data sheet.



**Return values:**

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

**Usage:**

Query only

**Manual operation:**

See ["OPT String"](#) on page 640

See ["Hardware Options/Software Options"](#) on page 1083

**\*PRE <Value>**

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

**Parameters:**

<Value> Range: 0 to 255

**\*PSC <Action>**

Power on status clear

Determines whether the contents of the `ENABLE` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

**Parameters:**

<Action> 0 | 1  
**0**  
 The contents of the status registers are preserved.  
**1**  
 Resets the status registers.

**\*RCL <Number>**

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command [\\*SAV](#) with the associated number.

It also activates the instrument settings which are stored in a file and loaded using the `MMEMory:LOAD <number>, <file_name.extension>` command.

**Manual operation:** See ["Recall Immediate x"](#) on page 522

**\*RST**

Reset



Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

**Usage:** Setting only

**Manual operation:** See "[Preset](#)" on page 513

#### **\*SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command `*RCL` with the associated number.

To transfer the stored instrument settings in a file, use the command `:MMEMory:STORe:STATe`.

**Manual operation:** See "[Save Immediate x](#)" on page 521

#### **\*SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

##### **Parameters:**

<Contents>                      Contents of the service request enable register in decimal form.  
    Bit 6 (MSS mask bit) is always 0.  
    Range:        0 to 255

#### **\*STB?**

Status byte query

Reads the contents of the status byte in decimal form.

**Usage:** Query only

#### **\*TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, `*TRG` generates a manual trigger signal. This common command complements the commands of the `TRIGger` subsystem.

`*TRG` corresponds to the `INITiate:IMMediate` command.

**Usage:** Event



---

**\*TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

**Return values:**

<b>&lt;ErrorCode&gt;</b>	<b>integer &gt; 0 (in decimal format)</b> An error occurred. (For details, see the Service Manual supplied with the instrument).
	<b>0</b> No errors occurred.

**Usage:** Query only

---

**\*WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and [\\*OPC](#)).**Usage:** Event

## 13.5 Preset commands

The preset commands are not bundled in one subsystem. Therefore, they are listed separately in this section.

In addition, a specific preset command is provided for each digital standard. These specific commands are described in the associated subsystems.

Four presetting actions are available:

- Activating the default state of all internal instrument functions ([\\*RST](#) on page 700). Functions that concern the integration of the instrument into a measurement setup are not changed, e.g. reference oscillator source settings.
- Activating the preset state of the parameters related to the selected signal path ([:SOURce<hw>:PRESet](#) on page 703)
- Activating the preset state of all parameters that are not related to the signal path ([:DEVice:PRESet](#) on page 703)
- Activating the original state of delivery (factory reset, [:SYSTem:FPRreset](#) on page 703). Only functions that are protected by a password remain unchanged as well as the passwords themselves.





When resetting, the following deviation between remote and manual control exists:

In contrast to the [Preset] key, the SCPI commands `*RST` and `:SYSTem:PRESet` do not close open dialogs in the GUI.

<code>:DEVIce:PRESet</code> .....	703
<code>:SOURce&lt;hw&gt;:PRESet</code> .....	703
<code>:SYSTem:PRESet</code> .....	703
<code>:SYSTem:FPRReset</code> .....	703

---

#### **:DEVIce:PRESet**

Presets all parameters which are not related to the signal path, including the LF generator.

**Example:**                `DEV: PRES`  
Presets all instruments settings that are not related to the signal path.

**Usage:**                Event

---

#### **:SOURce<hw>:PRESet**

Presets all parameters which are related to the selected signal path.

**Example:**                `SOUR: PRES`  
Presets all settings that are related to signal path

**Usage:**                Event

---

#### **:SYSTem:PRESet**

Triggers an instrument reset. It has the same effect as:

- The [Preset] key.  
However, the command does not close open GUI dialogs like the key does.
- The `*RST` command

For an overview of the settings affected by the preset function, see [Table 10-1](#)

**Example:**                `SYST: PRES`  
All instrument settings (also the settings that are not currently active) are reset to their default values.

**Usage:**                Setting only

---

#### **:SYSTem:FPRReset**

Triggers an instrument reset to the original state of delivery.

**Example:**                `SYST: FPR`  
All instrument settings (also the settings that are not currently active) are reset to the factory values.



**Usage:** Event

**Manual operation:** See ["Execute Factory Preset"](#) on page 514

## 13.6 MMEMory subsystem

The MMEMory subsystem (Mass MEMory) contains the commands for managing files and directories as well as for loading and saving complete instrument settings in files.

### Mass storage location

Without any additional measures, the R&S SMBV100B stores user files on the internal memory, the [removable memory](#), or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

If option R&S SMBVB-B80 is installed, the R&S SMBV100B maps the user directory to the [removable memory](#). If a memory is mounted, user data is saved there. Otherwise user data is redirected to the volatile memory.

### Default storage location

The R&S SMBV100B stores user data in the user directory.

Depending on the installed options, the user directory is physically located on the internal memory or on the [removable memory](#).

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 10.8, "Using the file manager"](#), on page 529. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

### 13.6.1 File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.



- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: CLOCK\$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN  
They are reserved by the operating system.

### File extension

The file and the optional file *extension* are separated by a period sign. The R&S SMBV100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and hence a specific file extension. Refer to [Chapter A.2, "Extensions for user files"](#), on page 1114 for an overview of the supported file extensions.

### Wildcards

The two characters "\*" and "?" function as "wildcards", i.e. they are used for selecting several files. The "?" character represents exactly one character, while the "\*" character represents all characters up to the end of the filename. "\*.\*" therefore represents all files in a directory.

### Filename and file path

When used in remote control commands, the parameter <filename> is specified as a string parameter with quotation marks. It can contain either the complete path including the root user directory /var/user and filename, or only the filename. The filename must include the file extension. The same applies for the directory /var/volatile and for the parameters <directory\_name> and <path>.

Depending on how much information is provided, the values specified in the parameter or with the command `MMEM:CDIR` are used for the path and drive setting in the commands.

## 13.6.2 Accessing files in the default or in a specified directory

For better overview and easy file handling, you may not save all user files in the user directory /var/user but rather organize them into subdirectories.

The command syntax defines two general ways to access files with user data in a *specific* directory:

- **Change the current default directory** for mass memory storage and then directly access the files in this default directory, like saved list files, files with user data or save/recall files.  
(See [Example "Save the user settings in a file in a specific directory"](#) on page 706).  
The subsequent commands for file handling (select, delete, read out files in the directory, etc.) require only specification of the filename. File extension can be omitted; after syntax evaluation of the used command, the R&S SMBV100B filters out the relevant files.



- Define the **complete file path**, including the user directory `/var/user`, created subdirectories and filename (see [Example"Load file with user data from a specific directory"](#) on page 706).

As a rule, whenever an complete file path is determined, it overwrites a previously specified default directory.

The following example explains this rule as a principle. Exceptions of this general rule are stated in the description of the corresponding command. The [Chapter 13.6.3, "Programming examples"](#), on page 707 explains the general working principle with the commands for mass memory storage.

The same rule applies to the `/var/volatile` directory, see [Example"Working with files in the volatile memory"](#) on page 708.

#### Example: Save the user settings in a file in a specific directory

This example uses the commands for saving and loading files with custom digital modulation settings. We assume that the directory `/var/user/DigMod` is existing and contains the files `SaveRecallTest.dm` and `dmSavRcl.dm`.

```
// Set the default directory first
MMEMory:CDIRectory "/var/user/DigMod"
SOURCE1:BB:DM:SETting:CATalog?
// "SaveRecallTest","dmSavRcl"

// Specify only the file name; the extension *.dm is assigned automatically
SOURCE1:BB:DM:SETting:STORE "dmSettings"
SOURCE1:BB:DM:SETting:DElete "dmSavRcl"
SOURCE1:BB:DM:SETting:LOAD "SaveRecallTest"
SOURCE1:BB:DM:SETting:CATalog?
// "SaveRecallTest","dmSettings"
```

Working with the files of other subsystems or files containing the settings of a particular digital standard (e.g. `SOURCE1:BB:EUTRa:SETting:...`), is analogical.

#### Example: Load file with user data from a specific directory

This example shows how to use the custom digital modulation commands to set the data source and select a data list. We assume that the directory `/var/user/lists` is existing and contains the files `dlist1.dm_iqd` and `myDList.dm_iqd`.

```
// Select a data list file as data source
SOURCE1:BB:DM:SOURce DLISt

// Query the data list files (*.dm_iqd) in the default directory
MMEMory:CDIRectory "/var/user/lists"
SOURCE1:BB:DM:DLISt:CATalog?
// "dlist1","myDList"

// Specify the complete path to select a data list file (*.dm_iqd)
// in the specific directory
MMEMory:CDIRectory
```



```
SOURce1:BB:DM:DList:SElect "/var/user/lists/myDList"
SOURce1:BB:DM:DList:DElete "/var/user/lists/dlist1"
```

Working with other list files, like control lists (`...:CLIST:...`) or lists with modulation data (`...:MLIST:...`), and the handling of data list files of other subsystems or of a particular digital standard (like `SOURce1:BB:EUTRa:...:DSElect`), is analogical.

### 13.6.3 Programming examples

#### Example: Saving and loading current settings

This example shows two ways of how to save the current instrument setting in the file `settings.savrc1.txt` in the directory `/var/user/savrc1`.



Before the instrument settings can be saved in a file, they have to be saved in an intermediate memory using common command `*SAV <number>`. The specified number is then used in the `:MMEMory:STORe:STATe` command.

Also, after loading a file with instrument settings with command `:MMEMory:LOAD:STATe`, these settings have to be activated with the common command `*RCL <number>`.

```
// Save the current settings in an intermediate memory with number 4
*SAV 4

// save the settings in a file in a specific directory;
// the complete path has to be specified
MMEMory:STORe:STATe 4,"/var/user/savrc1/settings.savrc1.txt"

// save the settings in a file in the default directory;
// set the default directory; specify only the file name
MMEMory:CDIRectory "/var/user/savrc1"
*SAV 4
MMEMory:STORe:STATe 4,"settings.savrc1.txt"

// Load the saved settings in the intermediate memory 4 and activate them
MMEMory:LOAD:STATe 4,"/var/user/settings.savrc1.txt"
*RCL 4
```

#### Example: Working with files and directories

This example shows how to list files in a directory, list the subdirectories, query the number of files in a directory, create directory, rename and delete files.

```
// Query the current default directory for mass storage,
// change the directory to the default user directory "/var/user"
// and read out the files in it
MMEMory:CDIRectory?
// "/var/user/temp"
```



```

MMEemory:CDIRectory
MMEemory:CDIRectory?
// "/var/user/"
MMEemory:CATalog?
// 1282630,8102817792,".",DIR,4096","..,DIR,4096","Log,DIR,4096",
// "settings.savrc1txt,BIN,16949","temp,DIR,4096","test,DIR,4096",
// "list.lsw,BIN,1245201"
// the directory "/var/user" contains the predefined directory "Log",
// the subdirectories "test" and "temp"
// as well as the files "settings.savrc1txt" and "list.lsw"

// query only the subdirectories of the current or specified directory
MMEemory:DCATalog? "/var/user"
// "","", "Log", "temp", "test"

// query only number of subdirectories in the current or specified directory
MMEemory:DCATalog:LENGth? "/var/user"
// 5

// query number of files in the current or specified directory
MMEemory:CATalog:LENGth? "/var/user"
// 7

// Create a new directory for mass memory storage in the specified directory
MMEemory:MDIRectory "/var/user/new"

// Copy the file "settings.savrc1txt" into the new directory
MMEemory:COPY "/var/user/settings.savrc1txt","/var/user/new/settings.savrc1txt"

// Rename the file "settings.savrc1txt" into the new directory
// and read out the files in this specific directory
MMEemory:CDIRectory "/var/user/new"
MMEemory:MOVE "settings.savrc1txt","settings_new.savrc1txt"
MMEemory:CATalog? "/var/user/new"
// 25141,8102789120,".",DIR,4096","..,DIR,4096","settings_new.savrc1txt,BIN,16949"

// Delete an empty directory, e.g. the "test" directory
MMEemory:RDIRectory "/var/user/test"
// Delete the entire directory, including files and subdirectories
:MMEemory:RDIRectory:RECURsive "var/user/test"

```

### Example: Working with files in the volatile memory

This example shows how to work with files in the `/var/volatile` directory.

```
// Change the default directory for mass storage,
// read out the files, load and play a file with the ARB
MMEMory:CDIRectory "/var/volatile"
MMEMory:CDIRectory?
// "/var/volatile"
```



```

MMEMory:CATalog?
//13928,525352960,".,DIR,60",".,DIR,4096","list.lst,BIN,9772"

SOURcel:LIST:SElect "/var/volatile/list"
SOURcel:FREQuency:MODE LIST
OUTPut1:STATe 1

```

### 13.6.4 Remote control commands

:MMEMory:CATalog?	709
:MMEMory:CATalog:LENGth?	710
:MMEMory:CDIRectory	710
:MMEMory:COpy	710
:MMEMory:DATA	711
:MMEMory:DATA:UNPRotected	712
:MMEMory:DCATalog?	713
:MMEMory:DCATalog:LENGth?	713
:MMEMory:DELeTe	714
:MMEMory:LOAD:STATe	714
:MMEMory:MDIRectory	714
:MMEMory:MOVE	715
:MMEMory:MSIS	715
:MMEMory:RDIRectory	715
:MMEMory:RDIRectory:RECURSive	715
:MMEMory:STORe:STATe	716
:MEMory:HFRee?	716

---

#### :MMEMory:CATalog? <path>

Returns the content of a particular directory.

##### Query parameters:

<path>                      string  
                               String parameter to specify the directory.  
                               If you leave out the path, the command returns the contents of  
                               the directory selected with :MMEMory:CDIRectory.  
                               The path may be relative or absolute.

##### Return values:

<UsedDiskSpace>            Byte size of all files in the directory.  
 <FreeDiskSpace>            Remaining disk space in bytes.  
 <FileInfo>                 <NameFileN>,<SuffixFileN>,<SizeFileN>  
                               List of files, separated by commas  
                               <NameFileN>  
                               Name of the file.  
                               <SuffixFileN>  
                               Type of the file. Possible suffixes are: ASCii, BINary, DIRectory



**<SizeFileN>**

Size of the file in bytes.

**Usage:** Query only**Manual operation:** See ["Directory, File List and Filename"](#) on page 520**:MMEMory:CATalog:LENGth? <Path>**

Returns the number of files in the current or in the specified directory.

**Query parameters:**

**<Path>** string

String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with [:MMEMory:CDIRectory](#) command.

**Return values:**

**<FileCount>** integer

Number of files.

**Usage:** Query only**:MMEMory:CDIRectory <Directory>**Changes the default directory for mass memory storage. The directory is used for all subsequent [MMEM](#) commands if no path is specified with them.**Parameters:**

**<Directory>** <directory\_name>

String containing the path to another directory. The path can be relative or absolute.

To change to a higher directory, use two dots '..'.

**Usage:** SCPI confirmed

**Manual operation:** See ["Directory, File List and Filename"](#) on page 520

See ["Directory and Filename"](#) on page 531

**:MMEMory:COPY <SourceFile>[,<DestinationFile>]**

Copies an existing file to a new file. Instead of just a file, this command can also be used to copy a complete directory together with all its files.

**Setting parameters:**

**<SourceFile>** string

String containing the path and file name of the source file



**<DestinationFile>** string  
 String containing the path and name of the target file. The path can be relative or absolute.  
 If **<DestinationFile>** is not specified, the **<SourceFile>** is copied to the current directory, queried with the **:MMEMory:CDIRectory** command.  
**Note:** Existing files with the same name in the destination directory are overwritten without an error message.

**Usage:** Setting only  
 SCPI confirmed

**Manual operation:** See ["Cut, Copy&Paste and Delete"](#) on page 531

**:MMEMory:DATA <Filename>, <BinaryBlock>**  
**:MMEMory:DATA? <Filename>**

The setting command writes the block data **<BinaryBlock>** to the file identified by **<Filename>**.

**Tip:** Use this command to read/transfer stored instrument settings or waveforms directly from/to the instrument.

**Parameters:**

**<BinaryBlock>** #<number><length\_entry><data>  
 #: Hash sign; always comes first in the binary block  
 <number>: the first digit indicates how many digits the subsequent length entry has  
 <length\_entry>: indicates the number of subsequent bytes  
 <data>: binary block data for the specified length.  
 For files with a size with more than nine digits (gigabytes), the instrument allows the syntax # (<Length>), where <Length> is the file size in decimal format.

**Parameters for setting and query:**

**<Filename>** string  
 String parameter to specify the name of the file.

**Example:** **MMEMory:DATA '/var/user/test.txt', #15hallo**  
 Writes the block data to the file **test.txt**.  
 The digit 1 indicates a length entry of one digit; the digit 5 indicate a length of the binary data (**hallo**) in bytes.  
**MMEMory:DATA? '/var/user/test.txt'**  
 Sends the data of the file **test.txt** from the instrument to the controller in the form of a binary block.  
 Response: **#15hallo**

**Usage:** SCPI confirmed



**:MMEMory:DATA:UNPRotected <Msus>, <Data>**

The **setting** command sends the I/Q data and the marker data to the file defined with the <Msus> parameter. The required tags are created automatically so that the file content follows the waveform file format.

The **query** reads out the I/Q data part or the marker information of the specified file.

Waveform files can also be created with the command `[ :SOURce<hw> ] :BB: ARbitrary:WAVEform:DATA`. In this case, the *complete content* of the waveform file must be specified, i.e. not only the I/Q or marker data but all required tags.

(see [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182).

**Parameters:**

&lt;Msus&gt;

&lt;Identifier&gt;:&lt;file name&gt;

Mass Storage Unit Specifier

A string that specifies whether I/Q data (NVWFM) or marker data (NVMKR) is transferred and the file name the data is stored in.

If the file with the specified name does not exist, a file is created.

Any existing content in the file is *overwritten*.

Complete file path and file extension can also be specified. If omitted, files are stored in the default directory and the extension \*.wv is assigned to the file name.

**Setting parameters:**

&lt;Data&gt;

block data

I/Q data or marker binary data, where the number of marker elements has to be equal to the number of I/Q samples

Binary block data follows the syntax:

```
#<Digits><Length><IQ00...IxQx...IN-1QN-1> or
```

```
#<Digits><Length><M0M1...Mx...MN-1>
```

#

Indicates the start of the data block

&lt;Digits&gt;

Decimal value

Gives the number of decimal digits used for the <Length> value

&lt;Length&gt;

Decimal value

Number of bytes the follow in the <Binary data> part

**IQ00...IxQx...IN-1QN-1**

*Binary data* in ASCII format

IxQx represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each I and Q component consists of 2 bytes in MSB format (most significant byte first).

The values of the 2 bytes in an I component and a Q component are in the range: -32767 to +32767.



**M0M1...Mx...MN-1**

*Binary data* in ASCII format

*Mx* represents one marker byte, where only the 4 least significant bits are used. These 4 bits are assigned to the 4 possible markers of the instrument, 1 bit per marker: Bit<sub>0</sub> = Marker 1 to Bit<sub>3</sub> = Marker 4.

One 4-bit marker element is required for every I/Q sample.

**Example:**

```
:MMEM:DATA:UNPR "NVWFM:/var/user/wave.wv",#220<IQ00..IxQx>
// the binary data <IQ00..IxQx> is added to a file named wave.wv
// and saved in the selected directory
// <IQ00..IxQx> contains of 20 bytes, i.e. 5 I/Q samples,
// 2 bytes for each I and Q component
// <IQ00..IxQx> is a placeholder;
// the actual ASCII values are not printable

MMEMory:DATA:UNPRotected? "NVWFM:/var/user/wave.wv"
MMEMory:DATA:UNPRotected "NVMKR:/var/user/wave.wv",#15<M0M1...M5>
// the specified marker data is added to a file named wave.wv
// in the specified directory
// used are printable values;
// used are only the 4 least significant bits of a byte
MMEMory:DATA:UNPRotected? "NVMKR:/var/user/wave.wv"
// note that, the query returns binary values
SOURcel:BB:ARBitrary:WAVeform:CLOCK "/var/user/wave.wv",1.1E6
SOURcel:BB:ARBitrary:WAVeform:CLOCK? "/var/user/wave.wv"
```

**:MMEMory:DCATalog? <path>**

Returns the subdirectories of a particular directory.

**Query parameters:**

<path> String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with **:MMEMory:CDIRectory** command.

**Return values:**

<Catalog> <file\_entry>  
Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

**Usage:** Query only

**:MMEMory:DCATalog:LENGth? [<Path>]**

Returns the number of subdirectories in the current or specified directory.

**Query parameters:**

<Path> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with **:MMEMory:CDIRectory** command.



**Return values:**

<DirectoryCount> integer  
Number of parent and subdirectories.

**Usage:** Query only

**:MMEMory:DELeTe** <Filename>

Removes a file from the specified directory.

**Setting parameters:**

<Filename> string  
String parameter to specify the name and directory of the file to be removed.

**Usage:** Event  
SCPI confirmed

**Manual operation:** See ["Cut, Copy&Paste and Delete"](#) on page 531

**:MMEMory:LOAD:STATe** <SavRclStateNumb>, <file\_name>

Loads the specified file stored under the specified name in an internal memory.

After the file has been loaded, the instrument setting must be activated using an \*RCL command.

**Setting parameters:**

<SavRclStateNumb> Determines to the specific <number> to be used with the \*RCL command, e.g. \*RCL 4.

<file\_name> String parameter to specify the file name with extension \*.savrc1txt.

**Usage:** Setting only

**Manual operation:** See ["Recall"](#) on page 521

**:MMEMory:MDIRectory** <Directory>

Creates a subdirectory for mass memory storage in the specified directory. If no directory is specified, a subdirectory is created in the default directory. This command can also be used to create a directory tree.

**Setting parameters:**

<Directory> string  
String parameter to specify the new directory.

**Usage:** Event

**Manual operation:** See ["Create New Directory"](#) on page 531



---

**:MMEMory:MOVE** <SourceFile>, <DestinationFile>

Moves an existing file to a new location or, if no path is specified, renames an existing file.

**Setting parameters:**

<SourceFile>	string
	String parameter to specify the name of the file to be moved.
<DestinationFile>	string
	String parameters to specify the name of the new file.

**Usage:** Event  
SCPI confirmed

**Manual operation:** See ["Rename"](#) on page 531

---

**:MMEMory:MSIS** <Msis>

Defines the drive or network resource (in the case of networks) for instruments with windows operating system, using `msis` (MSIS = Mass Storage Identification String).

**Note:** Instruments with Linux operating system ignore this command, since Linux does not use drive letter assignment.

**Usage:** SCPI confirmed

---

**:MMEMory:RDIRECTory** <Directory>

Removes an empty directory from the mass memory storage system. If no directory is specified, the subdirectory with the specified name is deleted in the default directory.

To remove a directory with contents, use command **:MMEMory:RDIRECTory:RECURSive** on page 715.

**Setting parameters:**

<Directory>	string
	String parameter to specify the directory to be deleted.

**Example:** See [Example "Working with files and directories"](#) on page 707.

**Usage:** Event

---

**:MMEMory:RDIRECTory:RECURSive** <Directory>

Removes the specified directory, including files and subdirectories from the mass memory storage system. If no directory is specified, the command removes the subdirectories of the default directory.

The command the entire directory without further prompt or notification.



**Setting parameters:**

<Directory> string  
String parameter to specify the directory to be deleted.

**Example:** See [Example "Working with files and directories"](#) on page 707.

**Usage:** Setting only

**:MMEMory:STORe:STATe** <savrcl\_state\_nr>, <file\_name>

Stores the current instrument setting in the specified file.

The instrument setting must first be stored in an internal memory with the same number using the common command \*SAV.

**Setting parameters:**

<savrcl\_state\_nr> Corresponds to the specific <number> defined with the \*SAV command, e.g. \*SAV 4.

<file\_name> String parameter to specify the file name with extension \*.savrcltxt.

**Usage:** Event

**Manual operation:** See ["Save"](#) on page 521

**:MEMory:HFRee?**

Returns the used and available memory in Kb.

**Return values:**

<TotalPhysMemKb> integer  
Total physical memory.

<ApplicMemKb> integer  
Application memory.

<HeapUsedKb> integer  
Used heap memory.

<HeapAvailableKb> integer  
Available heap memory.

**Usage:** Query only

## 13.7 CALibration subsystem

The CALibration subsystem contains the commands needed for performing internal adjustments. This procedure is triggered by the query commands.



### Common suffixes

The following common suffixes are used in the remote commands:

Suffix	Value range	Description
CALibration<hw>	[1]	Optional suffix

### Understanding the query response

- 0: error-free execution of the adjustments
- 1: indicates that an error occurred; the process has been canceled

:CALibration:ALL[:MEASure]?	717
:CALibration<hw>:ALL:DATE?	717
:CALibration<hw>:ALL:INFormation?	718
:CALibration<hw>:ALL:TEMP?	718
:CALibration<hw>:ALL:TIME?	718
:CALibration<hw>:CONTinueonerror	719
:CALibration:DATA:EXPort	719
:CALibration:DATA:FACTory:DATE?	719
:CALibration:DElay:MINutes	719
:CALibration:DElay:SHUTdown[:STATe]	720
:CALibration:DElay[:MEASure]?	720
:CALibration<hw>:IQModulator:LOCal?	720

---

#### :CALibration:ALL[:MEASure]? [<Force>]

Starts all internal adjustments that do not need external measuring equipment.

##### Query parameters:

<Force>                      string

##### Return values:

<Measure>                      1 | ON | 0 | OFF

##### Example:

```
CAL:ALL:MEAS?
// Response: "0"
// Executes the adjustments of all instrument functions.
// When completed, it indicates that the adjustment
// has been performed successfully.
```

**Usage:**                      Query only

**Manual operation:**      See "[Adjust All](#)" on page 1098

---

#### :CALibration<hw>:ALL:DATE?

Queries the date of the most recently executed full adjustment.

##### Suffix:

<hw>                              [1]  
Optional suffix



**Return values:**

<Date> string

**Example:**

```
CAL:ALL:DATE?  
// "2016-01-01"
```

**Usage:**

Query only

**Manual operation:** See ["Last Full Adjustment"](#) on page 1098

**:CALibration<hw>:ALL:INFormation?**

Queries the current state of the internal adjustment.

**Return values:**

<CallInfoText> string

**Example:**

```
CAL:ALL:INF?  
"Instrument is calibrated, no adjustment required."  
"UNCAL, instrument is warming up."  
"UNCAL, Please perform full adjustment after warming up."  
"UNCAL, Please perform full adjustment."
```

**Usage:**

Query only

**Manual operation:** See ["Information"](#) on page 1099

**:CALibration<hw>:ALL:TEMP?**

Queries the temperature deviation compared to the calibration temperature.

**Suffix:**

<hw> [1]  
Optional suffix

**Return values:**

<Temperature> string

**Example:**

```
CALibration:ALL:TEMP?  
// "+12.00 K"
```

**Usage:**

Query only

**Manual operation:** See ["Temperature Offset"](#) on page 1099

**:CALibration<hw>:ALL:TIME?**

Queries the time elapsed since the last full adjustment.

**Return values:**

<Time> string

**Example:**

```
CAL:ALL:TIME?  
// "22 days"
```

**Usage:**

Query only



**Manual operation:** See ["Time"](#) on page 1098

---

#### **:CALibration<hw>:CONTinueonerror <State>**

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

**Suffix:**

<hw> [1]  
Optional suffix

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 0)

**Example:**

```
CAL:CONT ON
// Continues calibration after an error
```

**Manual operation:** See ["Continue Adjustment on Error"](#) on page 1099

---

#### **:CALibration:DATA:EXPort**

Collects the internal adjustment data and provides the data for export in a zip file. You can export the data for service and evaluation purposes.

**Example:** :CALibration:DATA:EXPort

**Usage:** Event

---

#### **:CALibration:DATA:FACTory:DATE?**

Queries the date of the last factory calibration.

**Return values:**

<Date> string

**Example:** CAL:DATA:FACT:DATE?  
// "2016-01-01"

**Usage:** Query only

**Manual operation:** See ["Last Factory Calibration"](#) on page 1082

---

#### **:CALibration:DELaY:MINutes <Minutes>**

Sets the warm-up time to wait before internal adjustment starts automatically.

Automatic execution starts only, if you have enabled the calibration with command :  
[CALibration:DELaY\[:MEASure\]? ON](#).



**Parameters:**

<Minutes> integer  
 Range: 30 to 120  
 \*RST: n.a. (no preset. default: 60)

**Example:**

```
:CALibration:DElay:MINutes 30
// sets the time delay for warm-up of the instrument.
```

**Manual operation:** See ["Warm Up Time"](#) on page 1100

**:CALibration:DElay:SHUTdown[:STATe] <Shutdown>**

Enables the instrument to shut down automatically after calibration.

**Parameters:**

<Shutdown> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

```
:CALibration:DElay:SHUTdown[:STATe] ON|1
// inititates that the instrument shuts down when the adjustments are com
```

**Manual operation:** See ["Shutdown After Adjustment"](#) on page 1100

**:CALibration:DElay[:MEASure]?**

Starts the delayed adjustment process. When the warm-up time has elapsed (see : [CALibration:DElay:MINutes](#), it executes the internal adjustments.

If you have enabled automatic shutdown, [:CALibration:DElay:SHUTdown\[:STATe\] ON](#), the instrument shuts down when the adjustments are completed.

**Return values:**

<Error> 1 | ON | 0 | OFF  
 \*RST: n.a. (no preset. default: 0)

**Example:**

```
:CALibration:DElay[:MEASure] ON|1
// enables the adjustment processs to start after the warm-up time automa
```

**Usage:** Query only

**Manual operation:** See ["Adjust All Delayed"](#) on page 1100

**:CALibration<hw>:IQModulator:LOCal?**

Starts adjustment of the I/Q modulator for the currently set frequency and baseband gain. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.

**Return values:**

<Local> 1 | ON | 0 | OFF  
 \*RST: 0



**Example:**

```
// Start adjustment for the I/Q modulator
// for the currently set frequency
CALibration:IQModulator:LOCal?
// 0
// Adjustments are performed successfully
```

**Usage:** Query only

**Manual operation:** See ["Adjust I/Q Modulator Current Frequency"](#) on page 294

## 13.8 DIAGnostic subsystem

The `DIAGnostic` subsystem contains the commands used for instrument diagnosis and servicing. SCPI does not define any `DIAGnostic` commands; the commands listed here are all device-specific. All `DIAGnostic` commands are query commands which are not affected by `*RST`.



The test functions are intended for services purposes.

They are thus password-protected functions. Unlock the corresponding protection level to access them, see `:SYSTem:PROtect<ch>[:STATe]`.

For more information, see R&S SMBV100B Service Manual.

### Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
<code>DIAGnostic&lt;hw&gt;</code>	[1]	Optional suffix



**Example: Programming example**

The example lists the commands required to query assemblies and test points for diagnosis purposes.

```
// Query the modules available in the instrument
// and variant and revision state of a certain assembly
DIAGnostic1:BGInfo:CATalog?
// IEC_BOARD,BNC_BOARD,BBMB,FPNL,SSYN,SYNEX,RFMB,...
DIAGnostic1:BGInfo? "SSYN"
// SSYN 1412.6667.02 05.02 100000

// Query the test points available in the instrument
// and trigger the measurement in a selected test point
DIAGnostic1:POINt:CATalog?
// ASATT6HP_M5V7,ASATT6HP_OFFSET,...
DIAGnostic1:MEASure:POINt? "BBB_CODER_BBB_US"
// -1.000000V/°C

// Query the operating hours and number of power-on so far.
DIAGnostic:INFO:OTIMe?
// 112 h
DIAGnostic:INFO:POCount?
// 14
```

**Commands**

:DIAGnostic<hw>:BGInfo:CATalog?	722
:DIAGnostic<hw>:BGInfo?	722
:DIAGnostic:INFO:OTIMe?	723
:DIAGnostic:INFO:POCount?	723
:DIAGnostic<hw>:POINt:CATalog?	724
:DIAGnostic<hw>[:MEASure]:POINt?	724

**:DIAGnostic<hw>:BGInfo:CATalog?**

Queries the names of the assemblies available in the instrument.

**Return values:**

<Catalog>                      string  
                                  List of all assemblies; the values are separated by commas  
                                  The length of the list is variable and depends on the instrument  
                                  equipment configuration.

**Example:**                      See [Example "Programming example"](#) on page 722.

**Usage:**                        Query only

**:DIAGnostic<hw>:BGInfo? [<Board>]**

Queries information on the modules available in the instrument, using the variant and revision state.



**Query parameters:**

<Board> string  
 Module name, as queried with the command :  
[DIAGnostic<hw>:BGInfo:CATalog?](#).  
 To retrieve a complete list of all modules, omit the parameter.  
 The length of the list is variable and depends on the instrument equipment configuration.

**Return values:**

<BgInfo> <Module name> <Module stock number incl. variant> <Module revision> <Module serial number>  
 List of comma-separated entries, one entry per module.  
 Each entry for one module consists of four parts that are separated by space characters.

**Example:** See [Example"Programming example"](#) on page 722.

**Usage:** Query only

**Manual operation:** See ["Assembly"](#) on page 1082

**:DIAGnostic:INFO:OTIme?**

Queries the operating hours of the instrument so far.

**Return values:**

<OperationTime> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example"Programming example"](#) on page 722.

**Usage:** Query only

**Manual operation:** See ["Operation Time / h"](#) on page 1082

**:DIAGnostic:INFO:POCount?**

Queris how often the instrument has been turned on so far.

**Return values:**

<PowerOnCount> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example"Programming example"](#) on page 722.

**Usage:** Query only

**Manual operation:** See ["Power On Count"](#) on page 1082



**:DIAGnostic<hw>:POINT:CATalog?**

Queries the test points available in the instrument.

For more information, see R&S SMBV100B Service Manual.

**Return values:**

<Catalog> string  
List of comma-separated values, each representing a test point

**Example:** See [Example"Programming example"](#) on page 722.

**Usage:** Query only

**:DIAGnostic<hw>[:MEASure]:POINT? <Name>**

Triggers the voltage measurement at the specified test point and returns the measured voltage.

For more information, see R&S SMBV100B Service Manual.

**Query parameters:**

<Name> <test point identifier>  
Test point name, as queried with the command :  
[DIAGnostic<hw>:POINT:CATalog?](#)

**Return values:**

<Value> <value><unit>

**Example:** See [Example"Programming example"](#) on page 722.

**Usage:** Query only

## 13.9 HUMS remote control commands

The remote control commands for the health and utilizations monitoring system (HUMS) comprise commands of the `DIAGnostic` subsystem and the commands of the `SYSTem:COMMunicate:REST` and `SYSTem:COMMunicate:REST` subsystems.

For all HUMS-related remote control commands, see refer to the "R&S®HUMS Health and Utilization Monitoring Service" User Manual on the Internet.

**Commands**

<a href="#">DIAGnostic:HUMS:DELeTe:ALL</a> .....	725
<a href="#">DIAGnostic:HUMS:DEViCe:HISTory?</a> .....	725
<a href="#">DIAGnostic:HUMS:DEViCe:HISTory:DELeTe:ALL</a> .....	726
<a href="#">DIAGnostic:HUMS:FORMat</a> .....	726
<a href="#">DIAGnostic:HUMS:SAVE</a> .....	726
<a href="#">DIAGnostic:HUMS:STATe</a> .....	727
<a href="#">DIAGnostic:HUMS:TAgS:ALL?</a> .....	727
<a href="#">DIAGnostic:HUMS:TAgS:DELeTe</a> .....	727



DIAGnostic:HUMS:TAGS:DELeTe:ALL.....	728
DIAGnostic:HUMS:TAGS[:VALue].....	728
SYSTem:COMMunicate:REST:ENABle.....	728
SYSTem:COMMunicate:SNMP:COMMunity:RO.....	728
SYSTem:COMMunicate:SNMP:COMMunity:RW.....	729
SYSTem:COMMunicate:SNMP:CONtAct.....	729
SYSTem:COMMunicate:SNMP:LOCation.....	729
SYSTem:COMMunicate:SNMP:USM:USER.....	730
SYSTem:COMMunicate:SNMP:USM:USER:ALL?.....	730
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe.....	731
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL.....	731
SYSTem:COMMunicate:SNMP:VERsion.....	731

---

### DIAGnostic:HUMS:DELeTe:ALL

Deletes the complete HUMS data. This includes device history, device tags, SCPI connections, utilization history and utilizations.

**Example:**               //Delete HUMS data  
                  DIAG:HUMS:DEL:ALL

**Usage:**                Event

---

### DIAGnostic:HUMS:DEvIce:HISTory?

Queries the device history information of the connected instrument. Depending on the set data format, the queried data is either displayed in XML or JSON format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 726.

#### Return values:

<HistoryInfo>           <block\_data>  
Device history information of the connected instrument as block data in a comma-separated list:  
#blockdata[{event1},{event2},{event3}...]
   
With the following parameters:  
 <eventID>,<eventTimestamp>,<eventMessage>,<eventDetails>,<eventSeverity>  
 Binary block data with the following syntax:  
 #<Digits><Length><Binarydata>  
 #  
 Indicates the start of the binary block  
**<Digits>**  
 Decimal value  
 Gives the number of decimal digits used for the <Length> value  
**<Length>**  
 Decimal value  
 Number of bytes the follow in the <Binary data> part  
**<Binary data>**



Binary data in ASCII format

**Example:** //Return device history  
 DIAG:HUMS:DEV:HIST?  
**Returns for example:**  
 #44715[{"eventId":32,"eventTimestamp":  
 "2021-02-02T17:25:39Z","eventMessage":  
 "Deviation from Self Alignment Temperature",  
 "eventDetails":  
 "Deviations resolved","eventSeverity":0}  
**Usage:** Query only  
**Manual operation:** See ["Export History"](#) on page 644

#### DIAGnostic:HUMS:DEvIce:HISTory:DELeTe:ALL

Deletes the complete device history information of the connected instrument.

**Example:** //Delete complete device history  
 DIAG:HUMS:DEV:HIST:DEL:ALL  
**Usage:** Event  
**Manual operation:** See ["Delete History"](#) on page 643

#### DIAGnostic:HUMS:FORMat <DataFormat>

Selects the format for the queried HUMS data. You can query the HUMS data either in JSON format or XML format.

The defined format affects all other commands that return block data.

##### Parameters:

<DataFormat> JSON | XML  
**JSON**  
 Returns the HUMS data in JSON format.  
**XML**  
 Returns the HUMS data in XML format.  
 \*RST: JSON

**Example:** //Return data in JSON format  
 DIAG:HUMS:FORM JSON

#### DIAGnostic:HUMS:SAVE <path>

Saves the HUMS history as a ZIP file to your preferred path.

##### Setting parameters:

<path>

**Example:** //Save HUMS history data  
 DIAG:HUMS:SAVE 'C:\HUMS\hums\_2021.zip'



**Usage:** Setting only

**Manual operation:** See ["Export History"](#) on page 644

#### DIAGnostic:HUMS:STATe <State>

Turns the HUMS service and data collection on and off.

##### Parameters:

<State> ON | OFF | 1 | 0  
 \*RST: ON

**Example:** //Turn on HUMS service  
 DIAG:HUMS:STAT ON

**Manual operation:** See ["State"](#) on page 643

#### DIAGnostic:HUMS:TAgS:ALL?

Queries all key-value tags that you have assigned to the instrument. Depending on the set data format, the queried data is either displayed in XML or JSON format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 726.

##### Return values:

<ID> ID number of the defined tag.  
 <Key> String containing key name of the defined tag.  
 <Value> String containing value of the defined tag.

**Example:** //Return all tags  
 DIAG:HUMS:TAgS:ALL?  
 1,"location","building\_11",2,"time zone","CET"

**Usage:** Query only

**Manual operation:** See ["Add"](#) on page 653

#### DIAGnostic:HUMS:TAgS:DELeTe <ID>

Deletes a certain tag you assigned to your instrument, including its key and value.

##### Setting parameters:

<ID> ID number of the tag you want to delete.  
 To identify the ID number, query all device tags from the system first. For more information, see [DIAGnostic:HUMS:TAgS:ALL?](#) on page 727.

**Example:** //Delete tag  
 DIAG:HUMS:TAgS:DEL 0

**Usage:** Setting only

**Manual operation:** See ["Delete"](#) on page 652



---

**DIAGnostic:HUMS:TAGS:DELeTe:ALL**

Deletes all key-value tags you have assigned to the instrument.

**Example:**               //Delete all tags  
                  DIAG:HUMS:TAGS:DEL:ALL

**Usage:**                Event

**Manual operation:**   See ["Delete All"](#) on page 653

---

**DIAGnostic:HUMS:TAGS[:VALue] <ID>, <Key>, <Value>****DIAGnostic:HUMS:TAGS[:VALue]? <ID>**

Adds or modifies a key-value pair (device tag).

The query returns the key-value pair for a given ID or an empty string if the ID is unknown.

**Parameters:**

<Key>                   String containing key name of the queried tag.

<Value>                String containing value of the queried tag.

**Parameters for setting and query:**

<ID>                    0 - 31  
                          ID number of the tag you want to modify or query.  
                          To identify the ID number, query all device tags from the system first. For more information, read here [DIAGnostic:HUMS:TAGS:ALL?](#) on page 727.

**Example:**               //Add or modify a tag (tag 1)  
                  DIAG:HUMS:TAGS 1, 'location', 'building\_11'

**Manual operation:**   See ["Key"](#) on page 652  
                          See ["Value"](#) on page 652  
                          See ["Add"](#) on page 653

---

**SYSTem:COMMunicate:REST:ENABle <RestState>**

Turns communication via the REST API on and off.

**Parameters:**

<RestState>            ON | OFF | 0 | 1

**Example:**               //Return REST state  
                  SYST:COMM:REST:ENAB?

**Manual operation:**   See ["REST"](#) on page 645

---

**SYSTem:COMMunicate:SNMP:COMMunity:RO <CommunityString>**

Defines the SNMP community string for read-only access.



Prerequisites for this command:

- Select an SNMP version that supports communities (`SYSTem:COMMunicate:SNMP:VERSion` on page 731).

**Setting parameters:**

<CommunityString> String containing the community name.

**Example:**               //Set community name  
                           SYST:COMM:SNMP:VERS V12  
                           SYST:COMM:SNMP:COMM:RO 'ABC'

**Usage:**                Setting only

**Manual operation:**   See "[Access](#)" on page 646

**SYSTem:COMMunicate:SNMP:COMMunity:RW** <CommunityString>

Defines the SNMP community string for read-write access.

Prerequisites for this command:

- Select an SNMP version that supports communities (`SYSTem:COMMunicate:SNMP:VERSion` on page 731).

**Setting parameters:**

<CommunityString> String containing the community name.

**Example:**               //Set read-write access  
                           SYST:COMM:SNMP:VERS V12  
                           SYST:COMM:SNMP:COMM:RW 'ABC'

**Usage:**                Setting only

**Manual operation:**   See "[Access](#)" on page 646

**SYSTem:COMMunicate:SNMP:CONtact** <SnmpContact>

Defines the SNMP contact information for the administrator.

You can also set the contact information via SNMP if you do not set it via SCPI.

**Parameters for setting and query:**

<SnmpContact>           String containing SNMP contact.  
                           \*RST:           "" (empty string)

**Example:**               //Set SNMP contact  
                           SYST:COMM:SNMP:CONT 'ABC'

**Manual operation:**   See "[Contact](#)" on page 646

**SYSTem:COMMunicate:SNMP:LOCation** <SnmpLocation>

Defines the SNMP location information for the administrator.

You can also set the location information via SNMP if you do not set it via SCPI.



**Parameters for setting and query:**

<SnmpLocation> String containing SNMP location.  
 \*RST: "" (empty string)

**Example:** //Return SNMP location  
 SYST:COMM:SNMP:LOC?

**Manual operation:** See "[Location](#)" on page 646

**SYSTem:COMMunicate:SNMP:USM:USER** <Name>, <Access>, <Level>[, <Auth\_pwd>[, <Priv\_pwd>]]

Defines an SNMP user profile.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 731).

**Setting parameters:**

<Name> String containing name of the user.  
 <Access> RO | RW  
 Defines the access right a user can have.  
 <Level> NOAuth | AUTH | PRIVacy  
 Defines the security level.

<Auth\_pwd> String containing the authentication password.  
 <Priv\_pwd> String containing the privacy password.

**Example:** //Create user profile  
 SYST:COMM:SNMP:VERS V123  
 SYST:COMM:SNMP:USM:USER 'Peter','RO','PRIV',  
 '1234','XYZ'

**Usage:** Setting only

**Manual operation:** See "[Add SNMP User for HUMS](#)" on page 649

**SYSTem:COMMunicate:SNMP:USM:USER:ALL?**

Queries the number of users and a list of all SNMP users for SNMPv3.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 731).

**Return values:**

<Count> Total number of registered SNMP users.  
 <Name> List of all user names as a comma-separated list.

**Example:** //Return all SNMP users  
 SYST:COMM:SNMP:USM:USER:ALL?

**Usage:** Query only



**Manual operation:** See ["User table"](#) on page 648

---

#### **SYSTem:COMMunicate:SNMP:USM:USER:DELeTe <UserName>**

Deletes a specific SNMP user profile.

##### **Setting parameters:**

<UserName> String containing name of SNMP user profile to be deleted.

**Example:** //Delete SNMP user profile  
SYST:COMM:SNMP:USM:USER:DEL "Peter"

**Usage:** Setting only

**Manual operation:** See ["Delete"](#) on page 649

---

#### **SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL**

Deletes all SNMP user profiles.

**Example:** //Delete all SNMP user profiles  
SYST:COMM:SNMP:USM:USER:DEL:ALL

**Usage:** Event

**Manual operation:** See ["Delete All"](#) on page 647

---

#### **SYSTem:COMMunicate:SNMP:VERSion <SnpVersion>**

Selects the SNMP version.

##### **Parameters for setting and query:**

<SnpVersion> OFF | V12 | V123 | V3 | DEFault

##### **OFF**

SNMP communication is off.

##### **V12**

SNMP communication with SNMPv2 or lower.

##### **V123**

SNMP communication with SNMPv2 and SNMPv3.

##### **V3**

SNMP communication with SNMPv3.

\*RST: V123

**Example:** //Select the SNMP version  
SYST:COMM:SNMP:VERS V12

**Manual operation:** See ["SNMP"](#) on page 645



## 13.10 DISPlay subsystem

The DISPlay system contains the commands to set the power-save mode of the instrument.

### Programming Examples

#### Example: Activating screen saver mode and display update

Use the following commands to switch on the screen saver of your instrument or to automatic display. These settings are particularly useful when you control the instrument remotely.

```
// Set the wait time interval and activate the screen saver
DISPlay:PSAVE:HOLDoff 10
DISPlay:PSAVE:STATE ON

// Disable the display of the current frequency and level values in remote control
DISPlay:ANNotation:ALL ON
// DISPlay:ANNotation:FREQuency ON
// DISPlay:ANNotation:AMPLitude ON

// Enable automatic update of the display at defined time intervals
DISPlay:UPDate[:STATE] ON
```

#### Example: Querying the dialog IDs, opening and closing dialogs

Use the following commands to query the dialog IDs of all currently open dialogs. The dialog ID is a prerequisite for opening and closing dialogs via the remote control.



The dialog ID is also required to define user key actions.

See [Chapter 11.4.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 571.

```
// Query the dialog IDs of all open dialogs
DISPlay:DIALOG:ID?
// CEUtraDLGenSetDlg,_, $A DlgKeyRf_Rosc
```

```
// Open and close dialogs via remote control
DISPlay:DIALOG:OPEN "CEUtraDLGenSetDlg,_, $A"
DISPlay:DIALOG:OPEN "DlgKeyRf_Rosc"
DISPlay:DIALOG:CLOSE "DlgKeyRf_Rosc"
DISPlay:DIALOG:CLOSE:ALL
```

:DISPlay:PSAVE:HOLDoff.....	733
:DISPlay:PSAVE[:STATE].....	733
:DISPlay:BRIGhtness.....	733
:DISPlay:BUTTon:BRIGhtness.....	734
:DISPlay:UPDate[:STATE].....	734
:DISPlay:ANNotation:AMPLitude.....	734
:DISPlay:ANNotation:FREQuency.....	734



:DISPlay:ANNotation[:ALL].....	735
:DISPlay:DIALog:ID?.....	735
:DISPlay:DIALog:OPEN.....	736
:DISPlay:DIALog:CLOSe.....	736
:DISPlay:DIALog:CLOSe:ALL.....	736

---

#### **:DISPlay:PSAVe:HOLDoff** <HoldoffTimeMin>

Sets the wait time for the screen saver mode of the display.

##### **Parameters:**

<HoldoffTimeMin>     integer  
                          Range:     1 to 60  
                          \*RST:     n.a. (factory preset: 10)  
                          Default unit: minute

**Example:**            see [Example"Activating screen saver mode and display update"](#)  
                          on page 732

**Manual operation:**   See ["Wait Time"](#) on page 549

---

#### **:DISPlay:PSAVe[:STATe]** <State>

Activates the screen saver mode of the display.

We recommend that you use this mode to protect the display, if you operate the instrument in remote control.

To define the wait time, use the command `:DISPlay:PSAVe:HOLDoff`.

##### **Parameters:**

<State>                1 | ON | 0 | OFF  
                          \*RST:     n.a. (factory preset: 0)

**Example:**            See [Example"Activating screen saver mode and display update"](#)  
                          on page 732

**Manual operation:**   See ["Screen Saver"](#) on page 549

---

#### **:DISPlay:BRIGhtness** <BRIGhtness>

Sets the brightness of the display.

##### **Parameters:**

<BRIGhtness>        float  
                          Range:     1.0 to 20.0  
                          Increment: 1.0  
                          \*RST:     14.0

**Example:**            `DISPlay:BRIGhtness 14`

**Manual operation:**   See ["Display"](#) on page 549



---

**:DISPlay:BUtTon:BRIGhtness** <ButtonBrightnes>

Sets the brightness of the [RF on/off] key.

**Parameters:**

<ButtonBrightnes>      integer  
                                  Range:      1 to 20  
                                  \*RST:      n.a. (no preset. default: 14)

**Example:**                      DISPlay:BUtTon:BRIGhtness 15

**Manual operation:**    See ["RF Hardkey"](#) on page 549

---

**:DISPlay:UPDate[:STATe]** <Update>

Activates the refresh mode of the display.

**Parameters:**

<Update>                      1 | ON | 0 | OFF  
                                  \*RST:      n.a. (factory preset: 1)

**Example:**                      See [Example"Activating screen saver mode and display update"](#) on page 732

**Manual operation:**    See ["Display Update is"](#) on page 550

---

**:DISPlay:ANNotation:AMPLitude** <State>

Indicates asterisks instead of the level values in the status bar.

**Parameters:**

<State>                      1 | ON | 0 | OFF  
                                  \*RST:      n.a. (factory preset: 1)

**Example:**                      See [Example"Activating screen saver mode and display update"](#) on page 732

**Manual operation:**    See ["Annotation Amplitude"](#) on page 598

---

**:DISPlay:ANNotation:FREQuency** <State>

Indicates asterisks instead of the frequency values in the status bar.

**Parameters:**

<State>                      1 | ON | 0 | OFF  
                                  \*RST:      n.a. (factory preset: 1)

**Example:**                      See [Example"Activating screen saver mode and display update"](#) on page 732

**Manual operation:**    See ["Annotation Frequency"](#) on page 598

---



**:DISPlay:ANNotation[:ALL] <State>**

Displays asterisks instead of the level and frequency values in the status bar of the instrument.

We recommend that you use this mode if you operate the instrument in remote control.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 1

**Example:** See [Example "Activating screen saver mode and display update"](#) on page 732

**:DISPlay:DIALog:ID?**

Returns the dialog identifiers of the open dialogs in a string separated by blanks.

**Return values:**

<DialogIdList> <DialogID#1>< ><DialogID#2>< > ... < ><DialogID#n>  
Dialog identifiers are string without blanks. Blanks are represented as \$\$.  
Dialog identifiers <DialogID> are composed of two main parts:  
<DialogName> [<OptionalParts>]  
**<DialogName>**  
Meaningful information, mandatory input parameter for the commands:  
[:DISPlay:DIALog:OPEN](#) on page 736  
[:DISPlay:DIALog:CLOSe](#) on page 736  
**<Optional parts>**  
String of \$<X> values, where <X> is a character, interpreted as follows:  
\$q<DialogQualifier>: optional dialog qualifier, usually the letter A or B, as displayed in the dialog title.  
\$i<Instances>: comma-separated list of instance indexes, given in the order h, c, s, d, g, u, 0. Default is zero; the terminating ", 0" can be omitted.  
\$t<TabIds>: comma-separated indexes or tab names; required, if a dialog is composed of several tabs.  
\$x<Left>\$y<Top>\$h<Left>\$w<Top>: position and size; superfluous information.

**Example:** See [Example "Querying the dialog IDs, opening and closing dialogs"](#) on page 732

**Usage:** Query only

**Manual operation:** See ["SCPI"](#) on page 571



---

**:DISPlay:DIALog:OPEN** <DialogId>

Opens the specified dialog.

**Setting parameters:**

<DialogId>                      string  
To find out the dialog identifier, use the query **:DISPlay:DIALog:ID?**.  
The <DialogName> part of the query result is mandatory.

**Example:**                      See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 732

**Usage:**                        Setting only

**Manual operation:**    See ["SCPI"](#) on page 571

---

**:DISPlay:DIALog:CLOSe** <DialogId>

Closes the specified dialog.

**Setting parameters:**

<DialogId>                      string  
To find out the dialog identifier, use the query **:DISPlay:DIALog:ID?**.  
The <DialogName> part of the query result is sufficient.

**Example:**                      See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 732

**Usage:**                        Setting only

---

**:DISPlay:DIALog:CLOSe:ALL**

Closes all open dialogs.

**Example:**                      See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 732

**Usage:**                        Event

---

## 13.11 FORMat subsystem

The commands in the FORMat subsystem determine the format of data returned by the R&S SMBV100B to the controller. This affects all query commands that return a list of numerical data or block data, noted in the descriptions of the commands. The set data format applies to both paths.

<a href="#">:FORMat:BORDER</a> .....	737
<a href="#">:FORMat:SREGister</a> .....	737
<a href="#">:FORMat[:DATA]</a> .....	737



---

**:FORMat:BORDER** <Border>

Determines the sequence of bytes within a binary block. This only affects blocks which use the IEEE754 format internally.

**Parameters:**

<Border>                      NORMal | SWAPped

**NORMal**

Expects/sends the *least* significant byte of each IEEE754 floating-point number first and the *most* significant byte last.

**SWAPped**

Expects/sends the *most* significant byte of each IEEE754 floating-point number first and the *least* significant byte last.

\*RST:                      NORMal

**Example:**

:FORM:BORD SWAP

transfers the data with the most significant bit first.

---

**:FORMat:SREGister** <Format>

Determines the numeric format for responses of the status register.

**Parameters:**

<Format>                      ASCii | BINary | HEXadecimal | OCTal

**ASCii**

Returns the register content as a decimal number.

**BINary|HEXadecimal|OCTal**

Returns the register content either as a binary, hexadecimal or octal number. According to the selected format, the number starts with #B (binary), #H (hexadecimal) or #O (octal).

\*RST:                      ASCii

**Example:**

:FORM:SREG HEX

returns the register content as a hexadecimal number.

---

**:FORMat[:DATA]** <Data>

Determines the data format the instrument uses to return data via the IEC/IEEE bus.

The instrument automatically detects the data format used by the controller, and assigns it accordingly. Data format determined by this SCPI command is in this case irrelevant.

**Parameters:**

<Data>                      ASCii | PACKed

**ASCii**

Transfers numerical data as plain text separated by commas.



**PACKed**

Transfers numerical data as binary block data.

The format within the binary data depends on the command.

The various binary data formats are explained in the description of the parameter types.

\*RST:        ASCii

**Example:**

:FORM ASC

transfers the data as ASCII data.

## 13.12 HCOpy subsystem

The HCOpy subsystem contains the commands to generate and save a hard copy of the display.



To access a stored hard copy file, use the commands of the MEMM subsystem.

**Example: Store a hard copy of the display**

The following example lists commands to configure and execute a hard copy to an automatic named file.

```
:HCOpy:DEVIce:LANGUage PNG
:HCOpy:FILE:NAME:AUTO:STATe 1
// defines the output format
// sets the instrument to automatically create output file names

// *****
// Configure hard copy options, set automatic naming rules
// An automatically generated file name consists of:
// <Prefix><YYYY><MM><DD><Number>.<Format>
// *****
:HCOpy:DEVIce:LANGUage BMP
// defines output format *.bmp
:HCOpy:REGion DIALog
// selects the region to be copied
:HCOpy:FILE:AUTO:DIR "/usb/HCOpy"
// sets destination directory of automatic named file
:HCOpy:FILE:NAME:AUTO:FILE:PREFix:STATe 1
:HCOpy:FILE:NAME:AUTO:FILE:PREFix:"hardcopy"
:HCOpy:FILE:NAME:AUTO:FILE:YEAR:STATe 1
:HCOpy:FILE:NAME:AUTO:FILE:MONTH:STATe 1
// uses automatic naming prefix
// sets automatic naming prefix to "hardcopy"
// uses automatic naming date parameters year and month

// *****
```



```
// Execute and transfer the hard copy
// *****
:HCOPY:EXECute
:HCOPY:DATA
// generates a hard copy
// transfers the hard copy to the remote client
:HCOPY:FILE:AUTO:FILE?
// queries the automatic file name
// "hardcopy1607001.bmp"
:HCOPY:FILE:AUTO:NUMBer?
// queries the number in the automatic file name
// "001"
:HCOPY:FILE:AUTO?
// queries the path and file name of the automatically generated file
// "/usb/HCopy/hardcopy1607001.bmp"
```

13.12.1 Hard copy settings

With the following commands, you can configure the settings of a hard copy.

:HCOPY:DATA?	739
:HCOPY:IMAGe:FORMat	739
:HCOPY:DEVIce:LANGuage	739
:HCOPY:REGion	740
:HCOPY:FILE[:NAME]	740
:HCOPY[:EXECute]	740

:HCOPY:DATA?

Transfers the hard copy data directly as a NByte stream to the remote client.

Return values:	
<Data>	block data
Example:	See <a href="#">Example"Store a hard copy of the display"</a> on page 738
Usage:	Query only

:HCOPY:IMAGe:FORMat <Format>  
:HCOPY:DEVIce:LANGuage <Language>

Selects the graphic format for the hard copy. You can use both commands alternatively.

Parameters:	
<Language>	BMP   JPG   XPM   PNG
*RST:	PNG
Example:	See <a href="#">Example"Store a hard copy of the display"</a> on page 738
Manual operation:	See <a href="#">"Format"</a> on page 543



**:HCOPY:REGion** <Region>

Selects the area to be copied.

You can create a snapshot of the screen or an active dialog.

**Parameters:**

<Region>                    ALL | DIALog  
\*RST:                    ALL

**Example:**                    See [Example"Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["Region"](#) on page 543

**:HCOPY:FILE[:NAME]** <Name>

Determines the file name and path to save the hard copy, provided automatic naming is disabled.

**Note:** If you have enabled automatic naming, the instrument automatically generates the file name and directory, see [Chapter 13.12.2, "Automatic naming"](#), on page 740.

**Parameters:**

<Name>                    string

**Example:**                    See [Example"Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["File..."](#) on page 542

**:HCOPY[:EXECute]**

Generates a hard copy of the current display. The output destination is a file.

**Example:**                    See [Example"Store a hard copy of the display"](#) on page 738

**Usage:**                    Event

**Manual operation:**    See ["Save"](#) on page 543

## 13.12.2 Automatic naming

Use the following commands to automatically assign a file name.

:HCOPY:FILE[:NAME]:AUTO?	741
:HCOPY:FILE[:NAME]:AUTO:DIRectory	741
:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar	741
:HCOPY:FILE[:NAME]:AUTO:FILE?	741
:HCOPY:FILE[:NAME]:AUTO:STATe	742
:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	742
:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	742
:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe	742
:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?	742
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix	743
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe	743



---

**:HCOPY:FILE[:NAME]:AUTO?**

Queries path and file name of the hardcopy file, if you have enabled *Automatic Naming*.

**Return values:**

<Auto>                      string

**Example:**                      See [Example"Store a hard copy of the display"](#) on page 738

**Usage:**                          Query only

---

**:HCOPY:FILE[:NAME]:AUTO:DIRectory <Directory>**

Determines the path to save the hard copy, if you have enabled *Automatic Naming*.

If the directory does not yet exist, the instrument automatically creates a new directory, using the instrument name and `/var/user/` by default.

**Parameters:**

<Directory>                      string  
                                      \*RST:            /var/user/

**Example:**                      See [Example"Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["Path..."](#) on page 544

---

**:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar**

Deletes all files with extensions `*.bmp`, `*.jpg`, `*.png` and `*.xpm` in the directory set for automatic naming.

**Example:**                      See [Example"Store a hard copy of the display"](#) on page 738

**Usage:**                          Event

**Manual operation:**    See ["Clear Path"](#) on page 544

---

**:HCOPY:FILE[:NAME]:AUTO:FILE?**

Queries the name of the automatically named hard copy file.

An automatically generated file name consists of:

<Prefix><YYYY><MM><DD><Number>.<Format>.

You can activate each component separately, to individually design the file name.

**Return values:**

<File>                              string

**Example:**                      See [Example"Store a hard copy of the display"](#) on page 738.

**Usage:**                          Query only



---

**:HCOPY:FILE[:NAME]:AUTO:STATe** <State>

Activates automatic naming of the hard copy files.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
 \*RST:                    1

**Example:**                See [Example"Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["Automatic Naming"](#) on page 542

---

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe** <State>

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe** <State>

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe** <State>

Uses the date parameters (year, month or day) for the automatic naming. You can activate each of the date parameters separately.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
 \*RST:                    1

**Example:**                See [Example"Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["Prefix, Year, Month, Day"](#) on page 544

---

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?**

Queries the number that is used as part of the file name for the next hard copy in automatic mode.

At the beginning, the count starts at 0. The R&S SMBV100B searches the specified output directory for the highest number in the stored files. It increases this number by one to achieve a unique name for the new file.

The resulting auto number is appended to the resulting file name with at least three digits.

**Return values:**

<Number>                  integer  
                               Range:        0 to 999999  
                               \*RST:        0

**Example:**                See [Example"Store a hard copy of the display"](#) on page 738

**Usage:**                    Query only

**Manual operation:**    See ["Current Auto Number"](#) on page 545



---

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX <Prefix>**

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATe <State>**

Uses the prefix for the automatic generation of the file name, provided `PREF:STAT` is activated.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
 \*RST:                    1

**Example:**                See [Example "Store a hard copy of the display"](#) on page 738

**Manual operation:**    See ["Prefix, Year, Month, Day"](#) on page 544

## 13.13 KBOard subsystem

The `KBOard` subsystem contains the commands to set a connected keyboard.

[:KBOard:LAYout](#).....743

---

**:KBOard:LAYout <Layout>**

Selects the language for an external keyboard and assigns the keys accordingly.

**Parameters:**

<Layout>                    CHINese | DANish | DUTCh | DUTBe | ENGLish | ENGUK |  
                               FINNish | FRENch | FREBe | FRECa | GERMan | ITALian |  
                               JAPANese | KORean | NORWegian | PORTuguese | RUSSian |  
                               SPANish | SWEDish | ENGUS  
 \*RST:                    n.a. (factory preset: ENGLish)

**Example:**                :KBOard:LAYout US  
                               // activates American keyboard

**Manual operation:**    See ["USB Keyboard > Layout"](#) on page 550

## 13.14 OUTPut subsystem

In the `OUTPut` subsystem, you can configure the output signals.

The LF output signal is defined with the commands of the [Chapter 13.17.10, "SOURce:LFOutput subsystem"](#), on page 966 system.

**Common suffixes**

The following common suffixes are used in remote commands:



Suffix	Value range	Description
OUTPut<hw>	[1]	Optional suffix

:OUTPut:ALL[:STATe].....	744
:OUTPut<hw>[:STATe].....	744
:OUTPut<hw>[:STATe]:PON.....	744
:OUTPut<hw>:AMODe.....	745
:OUTPut<hw>:IMPedance?.....	745
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	745
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	745
:OUTPut<hw>:PROTection:CLEar.....	746
:OUTPut<hw>:PROTection:TRIPped?.....	746

---

#### :OUTPut:ALL[:STATe] <State>

Activates the RF output signal of the instrument.

##### Parameters:

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:** :OUTPut:ALL:STATe 0

---

#### :OUTPut<hw>[:STATe] <State>

Activates the RF output signal.

##### Parameters:

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** :OUTPut1 ON  
 Activates the RF output.

**Manual operation:** See "RF State/RF ON" on page 299

---

#### :OUTPut<hw>[:STATe]:PON <Pon>

Defines the state of the RF output signal when the instrument is switched on.

##### Parameters:

<Pon> OFF | UNCHanged  
 \*RST: n.a. (factory preset: UNCHanged)

**Example:** :OUTPut1:PON OFF  
 The RF output is deactivated when the instrument is switched on.

**Manual operation:** See "Power-On State" on page 551



---

**:OUTPut<hw>:AMODE <AMode>**

Sets the step attenuator mode at the RF output.

**Parameters:**

<AMode>                      AUTO | FIXEd

**AUTO**

The step attenuator adjusts the level settings automatically, within the full variation range.

**FIXEd**

The step attenuator and amplifier stages are fixed at the current position, providing level settings with constant output VSWR. The resulting variation range is calculated according to the position.

\*RST:                      AUTO

**Example:**

```
:SOURce1:POWer:ALC:STATe 1
:OUTPut1:AMode FIXEd
```

**Manual operation:**    See ["Mode"](#) on page 398

---

**:OUTPut<hw>:IMPedance?**

Queries the impedance of the RF outputs.

**Return values:**

<Impedance>                G1K | G50 | G10K

\*RST:                      G50

**Example:**

```
:OUTPut1:IMP?
queries the impedance of RF output.
Response: 50
the impedance is 50 ohms
```

**Usage:**                      Query only

**Manual operation:**    See ["RF output impedance"](#) on page 299

---

**:OUTPut<hw>:AFIXed:RANGE:LOWer?****:OUTPut<hw>:AFIXed:RANGE:UPPer?**

Queries the settable minimum/maximum value in mode :OUTPut:AMODE FIXEd, i.e. when the attenuator is not being adjusted.

See :OUTPut<hw>:AMODE on page 745

**Return values:**

<Upper>                      float

Increment: 0.01

Default unit: dBm



**Example:**

```
:OUTPut1:AMODE FIXed
:OUTPut1:AFIXed:RANGE:UPPer?
// -27
:OUTPut1:AFIXed:RANGE:LOW?
// -50
```

**Usage:** Query only

**Manual operation:** See ["Level Range"](#) on page 398

#### :OUTPut<hw>:PROTection:CLEAr

Resets the protective circuit after it has been tripped.

To define the output state, use the command `:OUTPut<hw>[:STATe]`.

**Example:**

```
:OUTPut1:PROT:CLE
```

Resets the protective circuit of the RF output.

**Usage:** Event

**Manual operation:** See ["Overload"](#) on page 399

#### :OUTPut<hw>:PROTection:TRIPped?

Queries the state of the protective circuit.

##### Return values:

<Tripped> 1 | ON | 0 | OFF  
\*RST: 0

**Example:**

```
:OUTPut1:PROT:TRIP
```

queries the state of the protective circuit of the RF output.  
Response: 0  
the protective circuit has not tripped.

**Usage:** Query only

**Manual operation:** See ["Overload"](#) on page 399

## 13.15 SENSe, READ, INITiate and SLISt subsystems

These subsystems contain the commands for configuring the power measurements with R&S NRP power sensor connected to the R&S SMBV100B.





The local state is set with the `INIT` command. Switching off the local state enhances the measurement performance. Measurements results can be retrieved in local state on or off.

Sensor parameters are set with the `SENSe` commands.

To start the measurement and retrieve the result, use the `:READ<ch>[:POWer]?` command.

Suffix	Value range	Description
<code>SENSe&lt;ch&gt;</code>	[1] to 4	Indicates the sensor Sensor mapping: <ul style="list-style-type: none"> <li><code>SENSe[1]</code> - default mapping for sensors connected to the [Sensor] connector</li> <li><code>SENSe2</code> - sensor connected to a [USB] connector</li> <li><code>SENSe3 4</code> - further connected sensors to [USB] connectors, in the connection order</li> </ul> Use the <code>:SLISt</code> commands to change the sensor mapping
<code>READ&lt;ch&gt;</code>	[1] to 4	Sensor assignment
<code>INITiate&lt;hw&gt;</code>	[1] to 4	Sensor assignment
<code>ELEMeNt&lt;ch&gt;</code>	[1] to 25	Sensor-mapping list



## Programming examples

### Example: Detecting and assigning a power sensor

```
SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy"
// Lists all automatically detected sensors.

SLISt:SCAN:STATe 1
// Searches for sensors connected in the LAN or via the USBTMC protocol.

SLISt:SCAN:LENSor 'NRQ6',101624 // sensor name, serial number
SLISt:SCAN:LENSor 11.123.1.123, 101624 // IP address, serial number
// Adds sensors to the list, that are connected to LAN.

SLISt:SCAN:USENSor 'NRQ6',101624 //sensor name, serial number
SLISt:SCAN:USENSor #H15b,101624 //device ID (hexadecimal), serial number
SLISt:SCAN:USENSor 347,101624 //device ID (decimal), serial number
// Adds a sensor to the list, that is connected to the USB interface.

SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy",
// "NRP33SN-V-900005-USBTMC","NRP33SN-V-900011-LAN"
// Lists all automatically detected sensors.

SLISt:ELEMent3:MAPPing SENS1
// Maps the third sensor from the list to the first sensor channel.

SLISt:SENSor:MAP "NRPS18S-100654-USB Legacy", SENS3
// Maps the sensor to channel 3.

SLISt:CLEar[ALL]
// Remove all sensors from the list.
SLISt:CLEar:LAN
// Remove all sensors from the list, that are connected over LAN.
SLISt:CLEar:USB
// Remove all sensors from the list, that are connected over USB.
```

### Example: Performing a simple power measurement

**Prerequisite:** The sensor is connected to the instrument and mapped to the first sensor channel.

```
INITiate1:CONTinuous ON
// Switches the continuous power measurement on.

READ1?
// Triggers the measurement and displays the results.
```



**Example: Performing a power measurement with a fixed filter**

**Prerequisite:** The sensor is connected to the instrument and mapped to the first sensor channel.

```
SENSe1:SOURce RF
// Sensor measures the power of the RF signal.

SENSe1:FILTer:TYPE NSRatio
// Selects fixed noise filter mode.

SENSe1:FILTer:NSRatio 0.02 DB
// Sets the maximum noise component in the result to 0.02 DB.

SENSe1:FILTer:NSRatio:MTIME 10
//Limits the settling time to 10 seconds.

SENSe1:APERture:DEFAult:STATe 0
// Deactivates the default aperture time of the sensor.

SENSe1:APERture:TIME 10e-6
// Sets the aperture time to 10 us.

SENSe1:UNIT DBM
// Selects unit dBm for the measured value.

INITiate:CONTinuous ON
// Switches the continous power measurement on.

READ?
// Triggers the measurement and displays the results.
```

:SLISt[:LIST]?.....	750
:SLISt:SCAN[:STATe].....	750
:SLISt:SCAN:LENSor.....	750
:SLISt:SCAN:USENSor.....	751
:SLISt:CLEar:LAN.....	751
:SLISt:CLEar:USB.....	751
:SLISt:CLEar[:ALL].....	752
:SLISt:ELEMent<ch>:MAPPing.....	752
:SLISt:SENSor:MAP.....	752
:INITiate<hw>[:POWer]:CONTinuous.....	752
:READ<ch>[:POWer]?.....	753
:SENSe<ch>:UNIT[:POWer].....	754
:SENSe<ch>[:POWer]:APERture:DEFAult:STATe.....	754
:SENSe<ch>[:POWer]:APERture:TIME.....	754
:SENSe<ch>[:POWer]:CORRection:SPDevice:SELEct.....	755
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe.....	755
:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?.....	755
:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority.....	755
:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe.....	756
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?.....	756



:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	756
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	757
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	757
:SENSe<ch>[:POWer]:FILTer:SONCe.....	757
:SENSe<ch>[:POWer]:FILTer:TYPE.....	758
:SENSe<ch>[:POWer]:FREQuency.....	758
:SENSe<ch>[:POWer]:LOGGing:STATe.....	759
:SENSe<ch>[:POWer]:OFFSet.....	759
:SENSe<ch>[:POWer]:OFFSet:STATe.....	759
:SENSe<ch>[:POWer]:SNUMber?.....	760
:SENSe<ch>[:POWer]:SOURce.....	760
:SENSe<ch>[:POWer]:STATus[:DEVice]?.....	760
:SENSe<ch>[:POWer]:SVERsion?.....	761
:SENSe<ch>[:POWer]:TYPE?.....	761
:SENSe<ch>[:POWer]:ZERO.....	761

---

### :SLISt[:LIST]?

Returns a list of all detected sensors in a comma-separated string.

#### Return values:

<SensorList>                      String of comma-separated entries

Each entry contains information on the sensor type, serial number and interface.

The order of the entries does not correspond to the order the sensors are displayed in the "NRP Sensor Mapping" dialog.

**Example:**                      See [Example "Detecting and assigning a power sensor"](#) on page 748.

**Usage:**                      Query only

**Manual operation:**    See ["Sensor Mapping List"](#) on page 430

---

### :SLISt:SCAN[:STATe] <State>

Starts the search for R&S NRP power sensors, connected in the LAN or via the USBTMC protocol.

#### Parameters:

<State>                      1 | ON | 0 | OFF

\*RST:                      0

**Example:**                      See [Example "Detecting and assigning a power sensor"](#) on page 748.

**Manual operation:**    See ["Scan"](#) on page 431

---

### :SLISt:SCAN:LSENsor <IP>

Scans for R&S NRP power sensors connected in the LAN.



**Setting parameters:**

<IP> string  
 \*RST: 0

**Example:** See [Example](#) "Detecting and assigning a power sensor" on page 748.

**Usage:** Setting only

**Manual operation:** See ["Add LAN Sensor settings"](#) on page 431

**:SLISt:SCAN:USENSor** <DeviceID>, <Serial>

Scans for R&S NRP power sensors connected over a USB interface.

**Parameters:**

<Serial> integer  
 Range: 0 to 999999

**Setting parameters:**

<DeviceID> String or Integer  
 Range: 0 to 999999  
 \*RST: 0

**Example:** See [Example](#) "Detecting and assigning a power sensor" on page 748.

**Usage:** Setting only

**Manual operation:** See ["Add USB Sensor settings"](#) on page 432

**:SLISt:CLEAr:LAN**

Removes all R&S NRP power sensors connected in the LAN from the list.

**Example:** See [Example](#) "Detecting and assigning a power sensor" on page 748.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 431

**:SLISt:CLEAr:USB**

Removes all R&S NRP power sensors connected over USB from the list.

**Example:** See [Example](#) "Detecting and assigning a power sensor" on page 748.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 431



---

**:SLISt:CLEar[:ALL]**

Removes all R&S NRP power sensors from the list.

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 748.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 431

---

**:SLISt:ELEMent<ch>:MAPPING <Mapping>**

Assigns an entry from the `:SLISt[:LIST]?` to one of the four sensor channels.

**Parameters:**

<Mapping>      SENS1 | SENSor1 | SENS2 | SENSor2 | SENS3 | SENSor3 |  
SENS4 | SENSor4 | UNMapped  
Sensor channel.  
\*RST:      UNMapped

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 748.

**Manual operation:** See ["Sensor Mapping List"](#) on page 430

---

**:SLISt:SENSor:MAP <SensorId>, <Mapping>**

Assigns a sensor directly to one of the sensor channels, using the sensor name and serial number.

To find out the the sensor name and ID, you can get it from the label of the R&S NRP, or using the command `:SLISt:SCAN[:STATe]`. This command detects all R&S NRP power sensors connected in the LAN or via 'USBTMC protocol.

**Setting parameters:**

<SensorId>      string  
<Mapping>      enum

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 748.

**Usage:** Setting only

**Manual operation:** See ["Sensor Mapping List"](#) on page 430

---

**:INITiate<hw>[:POWER]:CONTinuous <Continuous>**

Switches the local state of the continuous power measurement by R&S NRP power sensors on and off. Switching off local state enhances the measurement performance during remote control.



The remote measurement is triggered with `:READ<ch>[:POWER]?`. This command also returns the measurement results. The local state is not affected, measurement results can be retrieved with local state on or off.

**Parameters:**

<Continuous>      1 | ON | 0 | OFF  
 \*RST:              0

**Example:**

INIT1:CONT ON  
 Switches on the local state of continuous power measurement.

**Manual operation:** See ["State"](#) on page 426

**:READ<ch>[:POWER]?**

Triggers power measurement and displays the results.

**Note:** This command does not affect the local state, i.e. you can get results with local state on or off. For long measurement times, we recommend that you use an SRQ for command synchronization (MAV bit).

**Suffix:**

<ch>                  1 to 3

**Return values:**

<Power>              float or float,float

The sensor returns the result in the unit set with command `:SENSe<ch>:UNIT[:POWER]`

Certain power sensors, such as the R&S NRP-Z81, return two values, first the value of the average level and - separated by a comma - the peak value.

**Example:**

:SENS1:UNIT DBM  
 Selects unit dBm for presentation of measurement result.  
 :READ1?  
 Queries the measurement result of the sensor.  
 -45.6246576745440230  
 -45.6 dBm were measured at the given frequency.

**Example:**

R&S NRP-Z81  
 :READ1?  
 -55.62403263352178,-22.419472478812476  
 -55.6 dBm is the measured average level, -22.4 dBm is the measured peak level at the given frequency.

**Usage:**

Query only

**Manual operation:**

See ["Measured Level"](#) on page 422  
 See ["Level \(Peak\) / Level \(Average\)"](#) on page 426



---

**:SENSe<ch>:UNIT[:POWER] <Power>**

Selects the unit (Watt, dBm or dBµV) of measurement result display, queried with [:READ<ch>\[:POWER\]?](#).

**Parameters:**

<Power> DBM | DBUV | WATT  
\*RST: DBM

**Example:**

:SENS2:UNIT DBM  
Selects dBm as unit for the measured value returned by command READ.  
:READ2?  
Response: 7.34  
7.34 dBm are measured by sensor 2.

**Manual operation:** See ["Measured Level"](#) on page 422  
See ["Level \(Peak\) / Level \(Average\)"](#) on page 426

---

**:SENSe<ch>[:POWER]:APERTure:DEFault:STATe <UseDefAp>**

Deactivates the default aperture time of the respective sensor.

To specify a user-defined value, use the command [:SENSe<ch>\[:POWER\]:APERTure:TIME](#) on page 754.

**Parameters:**

<UseDefAp> 1 | ON | 0 | OFF  
\*RST: 1

**Example:** See [Example"Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See ["Default Aperture Time"](#) on page 428

---

**:SENSe<ch>[:POWER]:APERTure:TIME <ApTime>**

Defines the aperture time (size of the acquisition interval) for the corresponding sensor.

**Parameters:**

<ApTime> float  
Range: depends on connected power sensor  
Increment: 1E-9  
\*RST: depends on connected power sensor

**Example:** See [Example"Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See ["Aperture Time"](#) on page 428



---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:SElect <Select>**

Several S-parameter tables can be stored in a sensor. The command selects a loaded data set for S-parameter correction for the corresponding sensor.

**Parameters:**

<Select> float  
\*RST: 0

**Manual operation:** See "[S-Parameter](#)" on page 429

---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe <State>**

Activates the use of the S-parameter correction data.

**Note:** If you use power sensors with attenuator, the instrument automatically activates the use of S-parameter data.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** :SENS1:POWer:CORRection:SPDevice:STATe 1  
Activates the use of the S-parameters correction data.

**Manual operation:** See "[S-Parameter](#)" on page 429

---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?**

Queries the list of the S-parameter data sets that have been loaded to the power sensor.

**Return values:**

<List> string list  
\*RST: 0

**Usage:** Query only

**Manual operation:** See "[S-Parameter](#)" on page 429

---

**:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority <Priority>**

Selects average or peak power for permanent display.

**Parameters:**

<Priority> AVERAge | PEAK  
\*RST: AVERAge

**Example:** :SENS1:DISP:PERM:STAT ON  
Turns on the permanent view.  
:SENS1:DISP:PERM:PRI AVER  
Sets the average power for display.

**Manual operation:** See "[Display](#)" on page 426



---

**:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe <State>**

Activates the permanent display of the measured power level results. The instrument also indicates the sensor type, the connection, the measurement source and the offset if set.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** :SENS1:POW:DISP:PERM:STAT ON  
Turns on the permanent view.

**Manual operation:** See ["Permanent"](#) on page 426

---

**:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?**

Queries the current filter length in filter mode AUTO (:SENSe<ch>[:POWer]:FILTer:TYPE)

**Return values:**

<Auto> float  
Range: 1 to 65536

**Example:** :SENS1:FILT:TYPE AUTO  
Selects auto filter.  
:SENS1:FILT:LENG:AUTO?  
Queries the automatically set filter length.  
Response: 1024

**Usage:** Query only

**Manual operation:** See ["Filter Length"](#) on page 428

---

**:SENSe<ch>[:POWer]:FILTer:LENGth[:USER] <User>**

Selects the filter length for SENS:POW:FILT:TYPE USER. As the filter length works as a multiplier for the time window, a constant filter length results in a constant measurement time (see also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 417).

The R&S NRP power sensors provide different resolutions for setting the filter length, depending on the used sensor type:

- Resolution = 1 for R&S NRPxx power sensors
- Resolution =  $2^n$  for sensors of the R&S NRP-Zxx family, with  $n = 1$  to 16

**Parameters:**

<User> float  
Range: 1 to 65536  
\*RST: 1



**Example:**               :SENS1:FILT:TYPE USER  
                               Selects user filter mode.  
                               :SENS1:FILT:LENG 16  
                               Sets a filter length of 16. E.g. using a sensor with 20 ms time window, the resulting measurement time is 640 ms (2x16x20 ms)

**Manual operation:** See ["Filter Length"](#) on page 428

**:SENSe<ch>[:POWer]:FILTer:NSRatio <NSRatio>**

Sets an upper limit for the relative noise content in fixed noise filter mode (:SENSe<ch>[:POWer]:FILTer:TYPE). This value determines the proportion of intrinsic noise in the measurement results.

**Parameters:**

<NSRatio>               float  
                               Range:       0.001 to 1  
                               Increment: 0.001  
                               \*RST:       0.01

**Example:**               See [Example"Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See ["Noise/Signal Ratio"](#) on page 428

**:SENSe<ch>[:POWer]:FILTer:NSRatio:MTime <MTime>**

Sets an upper limit for the settling time of the auto-averaging filter and thus limits the length of the filter.

**Parameters:**

<MTime>                float  
                               Range:       1 to 999.99  
                               Increment: 0.01  
                               \*RST:       4

**Example:**               See [Example"Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See ["Timeout"](#) on page 428

**:SENSe<ch>[:POWer]:FILTer:SONCe**

Starts searching the optimum filter length for the current measurement conditions. You can check the result with command :SENS1:POW:FILT:LENG:USER? in filter mode USER (:SENSe<ch>[:POWer]:FILTer:TYPE).



**Example:**           SENS1:FILT:TYPE USER  
                           Selects user filter mode.  
                           :SENS1:FILT:SONC  
                           Activates the search for the optimum filter length.  
                           :SENS1:FILT:LENG?  
                           Returns the found optimum filter length.  
                           Response: 128

**Usage:**            Event

**Manual operation:** See "Auto Once" on page 428

---

#### :SENSe<ch>[:POWer]:FILTer:TYPE <Type>

Selects the filter mode. The filter length is the multiplier for the time window and thus directly affects the measurement time.

#### Parameters:

<Type>

AUTO | USER | NSRatio

#### AUTO

Automatically selects the filter length, depending on the measured value. The higher the power, the shorter the filter length, and vice versa.

**Note:** To avoid long settling times when the power is low, you can limit the averaging factor limited with the "timeout" parameter (:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME).

#### USER

Allows you to set the filter length manually. As the filter-length takes effect as a multiplier of the measurement time, you can achieve constant measurement times.

#### NSRatio

Selects the filter length (averaging factor) according to the criterion that the intrinsic noise of the sensor (2 standard deviations) does not exceed the specified noise content. You can define the noise content with command :SENSe<ch>[:POWer]:FILTer:NSRatio.

\*RST:            AUTO

**Example:**            See [Example "Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See "Filter" on page 427

---

#### :SENSe<ch>[:POWer]:FREQuency <Frequency>

Sets the RF frequency of the signal, if signal source :SENSe<ch>[:POWer]:SOURce USER is selected.



**Parameters:**

<Frequency> float  
 \*RST: 1 GHz

**Example:**

:SENS1:SOUR USER  
 Selects user-defined source.  
 :SENS1:FREQ 2.44GHz  
 Sets the RF frequency of the source which is 2.44 GHz.

**Manual operation:** See ["Frequency"](#) on page 427

**:SENSe<ch>[:POWer]:LOGGing:STATe <State>**

Activates the recording of the power values, measured by a connected R&S NRP power sensor.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

:SENS:LOGG:STAT ON  
 Activates recording of the power measurement of the first sensor.

**Manual operation:** See ["Enable Logging"](#) on page 429

**:SENSe<ch>[:POWer]:OFFSet <Offset>**

Sets a level offset which is added to the measured level value after activation with command [:SENSe<ch>\[:POWer\]:OFFSet:STATe](#). The level offset allows, e.g. to consider an attenuator in the signal path.

**Parameters:**

<Offset> float  
 Range: -100.0 to 100.0  
 \*RST: 0  
 Default unit: dB

**Example:**

:SENS1:POW:OFFS 10.0  
 Sets a level offset of 10 dB

**Manual operation:** See ["Level Offset State, Level Offset"](#) on page 427

**:SENSe<ch>[:POWer]:OFFSet:STATe <State>**

Activates the addition of the level offset to the measured value. The level offset value is set with command [:SENSe<ch>\[:POWer\]:OFFSet](#).

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0



**Example:** `:SENS1:POW:OFFS 0.4dB`  
 Sets a level offset of 0.4 dB  
`:SENS1:POW:OFFS:STAT ON`  
 A level offset of 0.4 dB is added to the measured value.

**Manual operation:** See ["Level Offset State, Level Offset"](#) on page 427

#### **:SENSe<ch>[:POWer]:SNUMber?**

Queries the serial number of the sensor.

##### **Return values:**

<SNumber> string

**Example:** `:SENS1:SNUM?`  
 Queries the serial number.

**Usage:** Query only

**Manual operation:** See ["Sensor type and serial number"](#) on page 425

#### **:SENSe<ch>[:POWer]:SOURce <Source>**

Determines the signal to be measured.

**Note:** When measuring the RF signal, the sensor considers the corresponding correction factor at that frequency, and uses the level setting of the instrument as reference level.

##### **Parameters:**

<Source> A | USER | RF  
 \*RST: A

**Example:** See [Example "Performing a power measurement with a fixed filter"](#) on page 749.

**Manual operation:** See ["Use Frequency Of"](#) on page 426

#### **:SENSe<ch>[:POWer]:STATus[:DEVice]?**

Queries if a sensor is connected to the instrument.

##### **Return values:**

<Status> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** `:SENS1:STAT?`  
 Response: 1  
 A sensor is connected.

**Usage:** Query only

**Manual operation:** See ["State"](#) on page 426



---

**:SENSe<ch>[:POWer]:SVERsion?**

Queries the software version of the connected R&S NRP power sensor.

**Return values:**

<SVersion>                      string

**Example:**                      :SENS1:POW:SVER?

Queries the software version of the power sensor.

**Usage:**                      Query only

---

**:SENSe<ch>[:POWer]:TYPE?**

Queries the sensor type. The type is automatically detected.

**Return values:**

<Type>                      string

**Example:**                      :SENS1:TYPE?

Queries the type of sensor.

Response: NRP-Z21

The R&S NRP-Z21 sensor is used.

**Usage:**                      Query only

**Manual operation:**    See ["Sensor type and serial number"](#) on page 425

---

**:SENSe<ch>[:POWer]:ZERO**

Performs zeroing of the sensor.

Zeroing is required after warm-up, i.e. after connecting the sensor.

**Note:** Switch off or disconnect the RF power source from the sensor before zeroing.

We recommend that you zero in regular intervals (at least once a day), if:

- The temperature has varied more than about 5 °C.
- The sensor has been replaced.
- You want to measure very low power.

**Example:**                      :SENS1:ZERO

Executes zeroing.

**Usage:**                      Event

**Manual operation:**    See ["Zero"](#) on page 426

---

## 13.16 SCONfiguration subsystem

The SCONfiguration subsystem contains the commands to define the system configuration, stream mapping and baseband configuration.



## Required options

See ["Required options"](#) on page 471.

## Common suffixes

The commands in this chapter use the following common suffixes:

Suffix	Suffix range	Description	Required option
CHANnel<ch0>	[1]	One channel, optional suffix	R&S SMBVB-K19
HSDigital<ch>	[1]	HS Dig I/Q input connector, optional suffix	R&S SMBVB-K19
IQOutput<ch>	[1]	Dig I/Q output connector, optional suffix	R&S SMBVB-K19
STReam<st>	[1]	One IQ stream, optional suffix	-

### Example: Distributing the I/Q streams to the output connectors

The following example lists the commands necessary to fulfill this task.

```
// *****
// Map the I/Q streams to the output connectors.
// *****
SCONfiguration:OUTPut:MAPPING:Rf1:STReam1:STATe ON
SCONfiguration:OUTPut:MAPPING:IQOutput1:STReam3:STATe ON
```

### Example: Connecting and configuring external instruments

The following example lists the commands necessary to fulfill this task.

```
// *****
// Scan interfaces and your network for connected instruments.
// *****
SCONfiguration:EXTErnal:DISPlay ALL
SCONfiguration:EXTErnal:REMOte:CLEan
SCONfiguration:EXTErnal:REMOte:SCAN
SCONfiguration:EXTErnal:REMOte:SCAN:STATe?
// Response: "0"
// The scanning procedure is finished.

// *****
// Specify characteristics at the input and output interfaces.
// *****
SCONfiguration:EXTErnal:IQOutput:DIRection?
// Response: "OUT"
SCONfiguration:EXTErnal:DIGital:IQConnection:STATe?
// Response: "1"
```



```

// *****
// Manage external instruments.
// *****
SCONfiguration:EXternal:REMOte:LIST?
// Response: SMBV100B,SGS_2,SGT100A,SMBV_1
// Add instruments to selection.
SCONfiguration:EXternal:REMOte:ADD "SGS_1","USB","100007"
SCONfiguration:EXternal:REMOte:ADD "SGT100A","LAN","10.112.11.125","1"
SCONfiguration:EXternal:REMOte:LIST?
SCONfiguration:EXternal:REMOte:REName "SGS_2","SGS (102030)"
SCONfiguration:EXternal:REMOte:LIST?
// Response: "SMBV100B,SGS (102030),SGT100A,SMBV_1

// *****
// Detect external instruments and connect them to the R&S SMBV100B.
// *****
SCONfiguration:EXternal:DIGital:REMOte:DETEct?
// Response: "SMBV100B"
SCONfiguration:EXternal:IQOutput:REMOte:ISElect?
// Response: "SGT100A","A"
SCONfiguration:EXternal:IQOutput:REMOte:CONNEct
// Alternatively, combine instrument select and connect.
SCONfiguration:EXternal:IQOutput:REMOte:ICONnect "SGS100A","A"
// Define an external instrument manually.
SCONfiguration:EXternal:IQOutput:REMOte:ISElect "SGS_1","A"
SCONfiguration:EXternal:IQOutput:REMOte:CONNEct
SCONfiguration:EXternal:IQOutput:RCONNECTION:STATE?
// Response: "1"
SCONfiguration:EXternal:IQOutput:INAME?
// Response: "SGS_1 [A]"

// *****
// Specify characteristics of the IQ output signal.
// *****
SCONfiguration:EXternal:IQOutput:RF:COUPLing 0
SCONfiguration:EXternal:IQOutput:RF:FREQuency 2143000000
SCONfiguration:EXternal:IQOutput:RF:POWEr -20
SCONfiguration:EXternal:IQOutput:RF:STATe 1

// *****
// Specify the initialization sequence with a user-defined initialization file.
// *****
MMEMemory:CDIRectory "/var/user/RcExtInstr"
SCONfiguration:EXternal:REMOte:INITialization:CATalog?
// Response: "init_seq_sgs"
SCONfiguration:EXternal:IQOutput:REMOte:INITialization:FILE "init_seq_sgs.iec"
SCONfiguration:EXternal:ACONNEct 1

*RST

```



```
SCONfiguration:EXTErnal:REMOte:PURGe
// Disabling remote control of the external instruments
SCONfiguration:EXTErnal:REMOte:DISConnect[:ALL]
```

### Example: Configuring primary-secondary mode

```
// For the primary instrument:
SOURCE1:ROSCillator:SOURce INT
SCONfiguration:MULTiinstrument:MODE PRIMary
SCONfiguration:MULTiinstrument:STATe 1
SCONfiguration:APPLy

// For the secondary instrument:
SOURCE1:ROSCillator:SOURce EXT
SOURCE1:ROSCillator:EXTErnal:FREQuency 10MHZ
SCONfiguration:MULTiinstrument:MODE SECondary
SCONfiguration:MULTiinstrument:STATe 1

SOURCE1:INPut:USER5:DIRection INP
SOURCE1:INPut:USER4:SIGNal OUTSinc
SOURCE1:INPut:USER5:DIRection OUTP
OUTPut1:USER5:SIGNal INSinc
SCONfiguration:MULTiinstrument:TRIGger:SYNChronization?
// Response: "SYNC"
```

- [Multi-instrument configuration commands](#)..... 764
- [I/Q stream mapper commands](#)..... 765
- [External RF and I/Q instruments commands](#)..... 766

## 13.16.1 Multi-instrument configuration commands

The following commands configure multi-instrument settings.

### Commands:

```
:SCONfiguration:MULTiinstrument:MODE..... 764
:SCONfiguration:MULTiinstrument:STATe..... 765
:SCONfiguration:MULTiinstrument:TRIGger:SYNChronization?..... 765
```

---

### :SCONfiguration:MULTiinstrument:MODE <MSMode>

Sets if the instrument works as a primary or as a secondary instrument.

### Parameters:

```
<MSMode>          PRIMary | SECondary
                  *RST:    PRIMary
```

**Example:** See [Example "Configuring primary-secondary mode"](#) on page 764.

**Manual operation:** See ["Multi Instrument Trigger"](#) on page 458



---

**:SCONfiguration:MULTIinstrument:STATe <TriggerState>**

Activates the selected mode.

**Parameters:**

<TriggerState>      1 | ON | 0 | OFF  
\*RST:                0

**Example:**            See [Example"Configuring primary-secondary mode"](#)  
on page 764.

**Manual operation:**   See ["State"](#) on page 458

---

**:SCONfiguration:MULTIinstrument:TRIGger:SYNChronization?**

Queries if synchronization is achieved.

**Return values:**

<SyncState>           SYNC | NOSync  
\*RST:                NOSync

**Example:**            See [Example"Configuring primary-secondary mode"](#)  
on page 764.

**Usage:**                Query only

**Manual operation:**   See ["Synchronisation State"](#) on page 459

### 13.16.2 I/Q stream mapper commands

The following commands configure the I/Q stream mapper.

:SCONfiguration:OUTPut:MAPPING:HSDigital:CHANnel<di>:STReam<st>:STATe.....	765
:SCONfiguration:OUTPut:MAPPING:DIGital<ch>:STReam<st>:STATe.....	765
:SCONfiguration:OUTPut:MAPPING:RF:STReam<st>:STATe.....	765
:SCONfiguration:OUTPut:MAPPING:IQOutput:STReam<st>:STATe.....	765
:SCONfiguration:OUTPut:MAPPING:STReam<st>:FOFFset.....	766
:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset.....	766

---

**:SCONfiguration:OUTPut:MAPPING:HSDigital:CHANnel<di>:STReam<st>:STATe <State>**

**:SCONfiguration:OUTPut:MAPPING:DIGital<ch>:STReam<st>:STATe <State>**

**:SCONfiguration:OUTPut:MAPPING:RF:STReam<st>:STATe <State>**

**:SCONfiguration:OUTPut:MAPPING:IQOutput:STReam<st>:STATe <State>**

Maps the I/Q output streams to the output connectors.

**Parameters:**

<State>                1 | ON | 0 | OFF  
\*RST:                0

**Example:**            See [Example"Distributing the I/Q streams to the output connectors"](#) on page 762.



**Manual operation:** See ["Map Stream X to Connector"](#) on page 472

---

**:SCONfiguration:OUTPut:MAPPING:STReam<st>:FOFFset <SmFreqOffset>**

Sets an absolute frequency offset.

**Parameters:**

<SmFreqOffset>	float
Range:	depends on the installed options, e.g. -60E6 to +60E6 (base unit)
Increment:	0.01
*RST:	0

**Example:** See [Example" Distributing the I/Q streams to the output connectors"](#) on page 762.

---

**:SCONfiguration:OUTPut:MAPPING:STReam<st>:POFFset <SmPhasOffset>**

Sets the phase offset of the corresponding stream.

**Parameters:**

<SmPhasOffset>	float
Range:	-999.99 to 999.99
Increment:	0.01
*RST:	0

**Example:** See [Example" Distributing the I/Q streams to the output connectors"](#) on page 762.

### 13.16.3 External RF and I/Q instruments commands

:SCONfiguration:EXTeRnal:DISPlay.....	767
:SCONfiguration:EXTeRnal:ACONnect.....	768
:SCONfiguration:EXTeRnal:REMOte:CONNeCt[:ALL].....	768
:SCONfiguration:EXTeRnal:REMOte:DISConnect[:ALL].....	768
:SCONfiguration:EXTeRnal:PBEHaviour.....	768
:SCONfiguration:EXTeRnal:HSDigital<ch>:DIRection?.....	769
:SCONfiguration:EXTeRnal:DIGital<ch>:DIRection?.....	769
:SCONfiguration:EXTeRnal:IQOutput:DIRection?.....	769
:SCONfiguration:EXTeRnal:DIGital<ch>:IQConnection:STATe?.....	769
:SCONfiguration:EXTeRnal:HSDigital<ch>:IQConnection:STATe?.....	769
:SCONfiguration:EXTeRnal:DIGital<ch>:RCONnection:STATe?.....	770
:SCONfiguration:EXTeRnal:HSDigital<ch>:RCONnection:STATe?.....	770
:SCONfiguration:EXTeRnal:IQOutput:RCONnection:STATe?.....	770
:SCONfiguration:EXTeRnal:DIGital<ch>:INAMe?.....	770
:SCONfiguration:EXTeRnal:HSDigital<ch>:INAMe?.....	770
:SCONfiguration:EXTeRnal:IQOutput:INAMe?.....	770
:SCONfiguration:EXTeRnal:DIGital<ch>:RF:COUPling.....	770
:SCONfiguration:EXTeRnal:HSDigital<ch>:RF:COUPling.....	770



:SCONfiguration:EXternal:IQOutput:RF:COUPling.....	770
:SCONfiguration:EXternal:DIGital<ch>:RF:FREQuency.....	771
:SCONfiguration:EXternal:HSDigital<ch>:RF:FREQuency.....	771
:SCONfiguration:EXternal:IQOutput:RF:FREQuency.....	771
:SCONfiguration:EXternal:DIGital<ch>:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXternal:HSDigital<ch>:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXternal:IQOutput:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXternal:DIGital<ch>:RF:POWer.....	772
:SCONfiguration:EXternal:HSDigital<ch>:RF:POWer.....	772
:SCONfiguration:EXternal:IQOutput:RF:POWer.....	772
:SCONfiguration:EXternal:DIGital<ch>:RF:POWer:OFFSet.....	772
:SCONfiguration:EXternal:HSDigital<ch>:RF:POWer:OFFSet.....	772
:SCONfiguration:EXternal:IQOutput:RF:POWer:OFFSet.....	772
:SCONfiguration:EXternal:DIGital<ch>:RF:STATe.....	772
:SCONfiguration:EXternal:HSDigital<ch>:RF:STATe.....	772
:SCONfiguration:EXternal:IQOutput:RF:STATe.....	772
:SCONfiguration:EXternal:REMOte:SCAN.....	773
:SCONfiguration:EXternal:REMOte:SCAN:STATe?.....	773
:SCONfiguration:EXternal:REMOte:LIST?.....	773
:SCONfiguration:EXternal:REMOte:ADD.....	774
:SCONfiguration:EXternal:REMOte:REName.....	774
:SCONfiguration:EXternal:HSDigital:REMOte:DETeCt?.....	775
:SCONfiguration:EXternal:DIGital<ch>:REMOte:DETeCt?.....	775
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:ISELect.....	775
:SCONfiguration:EXternal:DIGital<ch>:REMOte:ISELect.....	775
:SCONfiguration:EXternal:IQOutput:REMOte:ISELect.....	775
:SCONfiguration:EXternal:DIGital<ch>:REMOte:CONNeCt.....	775
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:CONNeCt.....	775
:SCONfiguration:EXternal:IQOutput:REMOte:CONNeCt.....	775
:SCONfiguration:EXternal:DIGital<ch>:REMOte:ICONNeCt.....	776
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:ICONNeCt.....	776
:SCONfiguration:EXternal:IQOutput:REMOte:ICONNeCt.....	776
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:INFO?.....	776
:SCONfiguration:EXternal:DIGital<ch>:REMOte:INFO?.....	776
:SCONfiguration:EXternal:IQOutput:REMOte:INFO?.....	776
:SCONfiguration:EXternal:DIGital<ch>:REMOte:DISConNeCt.....	777
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:DISConNeCt.....	777
:SCONfiguration:EXternal:IQOutput:REMOte:DISConNeCt.....	777
:SCONfiguration:EXternal:REMOte:INITialization:CATalog?.....	777
:SCONfiguration:EXternal:DIGital<ch>:REMOte:INITialization:FILE.....	777
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:INITialization:FILE.....	777
:SCONfiguration:EXternal:IQOutput:REMOte:INITialization:FILE.....	777
:SCONfiguration:EXternal:REMOte:PURGe.....	777
:SCONfiguration:EXternal:REMOte:CLEan.....	778
:SCONfiguration:EXternal:HSDigital<ch>:REMOte:SEND.....	778
:SCONfiguration:EXternal:IQOutput:REMOte:SEND.....	778

---

#### **:SCONfiguration:EXternal:DISPlay <DisplayMode>**

Filters the displayed connectors upon the selected criteria.



**Parameters:**

<DisplayMode> ALL | MAPPEd | INPut | OUTPut  
 \*RST: MAPPEd

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Manual operation:** See ["Display"](#) on page 474

**:SCONfiguration:EXTErnal:ACONnect <State>**

Enables automatic detection and connection setup of connected external instruments.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Distributing the I/Q streams to the output connectors"](#) on page 762.

**Manual operation:** See ["Auto Connect"](#) on page 474

**:SCONfiguration:EXTErnal:REMOte:CONNEct[:ALL]****:SCONfiguration:EXTErnal:REMOte:DISCONNEct[:ALL]**

Triggers the instrument to establish the connections to all configured external instruments or to disconnect all existing connections.

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:** Event

**Manual operation:** See ["Connect/Disconnect All Remote"](#) on page 475

**:SCONfiguration:EXTErnal:PBEHaviour <State>**

If enabled, the connection to the external instruments is retained after preset (\*RST) of the instrument.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)



**Example:**

```

SCONfiguration:EXTeRnal:IQOutput1:RCONnection:STATe?
// 1
SOURce:FREQuency:CW?
// 60000000000
SOURce1:IQ:OUTPup:ANALog:TYPE DIFFerential

SCONfiguration:EXTeRnal:PBEHaviour 1
*RST
SOURce:FREQuency:CW?
// 60000000000
SCONfiguration:EXTeRnal:IQOutput1:RCONnection:STATe?
// 1
SOURce1:IQ:OUTPup:ANALog:TYPE?
// DIFF

SCONfiguration:EXTeRnal:PBEHaviour 0
*RST
SOURce:FREQuency:CW?
// 10000000000
SCONfiguration:EXTeRnal:IQOutput1:RCONnection:STATe?
// 0
SOURce1:IQ:OUTPut:ANALog:TYPE?
// SING

```

**Manual operation:** See ["Preset behavior: Keep connections to external instruments"](#) on page 475

---

**:SCONfiguration:EXTeRnal:HSDigital<ch>:DIRection?**

**:SCONfiguration:EXTeRnal:DIGital<ch>:DIRection?**

**:SCONfiguration:EXTeRnal:IQOutput:DIRection?**

Queries the connector direction.

**Return values:**

<Direction> NONE | IN | OUT

\*RST: IN

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["Direction"](#) on page 475

---

**:SCONfiguration:EXTeRnal:DIGital<ch>:IQConnection:STATe?**

**:SCONfiguration:EXTeRnal:HSDigital<ch>:IQConnection:STATe?**

Queries the status of the I/Q connection of the digital interfaces.

**Return values:**

<IQConnState> 1 | ON | 0 | OFF



**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["I/Q Connection"](#) on page 476

**:SCONfiguration:EXTErnal:DIGital<ch>:RCONnection:STATe?**  
**:SCONfiguration:EXTErnal:HSDigital<ch>:RCONnection:STATe?**  
**:SCONfiguration:EXTErnal:IQOutput:RCONnection:STATe?**

Queries the status of the remote connection.

**Return values:**

<State> 1 | ON | 0 | OFF

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["Remote Connection Status"](#) on page 476

**:SCONfiguration:EXTErnal:DIGital<ch>:INAMe?**  
**:SCONfiguration:EXTErnal:HSDigital<ch>:INAMe?**  
**:SCONfiguration:EXTErnal:IQOutput:INAMe?**

Queries the name of the connected external instrument.

**Return values:**

<InstrName> string

Returns the name of the connected external instrument.

**<InstrmentName> (SerialNumber) <Path>**

the instrument name, as retrieved via the DIG I/Q interface

**<InstrmentName>[, <RfPath>] or <InstrmentName> (Serial-Number)**

the instrument name, as defined in with the "Remote Config" settings or as defined by the command **:SCONfiguration:**

**EXTErnal:REMOte:ADD**

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["Instrument Name"](#) on page 477

**:SCONfiguration:EXTErnal:DIGital<ch>:RF:COUPLing <RfCouplingState>**  
**:SCONfiguration:EXTErnal:HSDigital<ch>:RF:COUPLing <RfCouplingState>**  
**:SCONfiguration:EXTErnal:IQOutput:RF:COUPLing <RfCouplingState>**

Enables/disables coupling all major RF setting (like the frequency, level and RF state) of the external instrument to the R&S SMBV100B.



**Parameters:**

<RfCouplingState> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Manual operation:** See ["RF Couple"](#) on page 477

```
:SCONfiguration:EXTernal:DIGital<ch>:RF:FREQUENCY <Frequency>
:SCONfiguration:EXTernal:HSDigital<ch>:RF:FREQUENCY <Frequency>
:SCONfiguration:EXTernal:IQOutput:RF:FREQUENCY <Frequency>
```

In uncoupled mode, sets the RF frequency of the external instrument.

**Parameters:**

<Frequency> float  
 Range: 100E3 to 3E9  
 Increment: 0.01  
 \*RST: 1E9

**Example:**

```
SCONfiguration:EXTernal:IQOutput:RF:COUPling OFF
SCONfiguration:EXTernal:IQOutput:RF:FREQUENCY 2143E6
// RF frequency of the external instrument is RF = 2.143 GHz
```

**Manual operation:** See ["\(Delta\) RF Frequency/ RF Level"](#) on page 477

```
:SCONfiguration:EXTernal:DIGital<ch>:RF:FREQUENCY:OFFSet <FreqOffset>
:SCONfiguration:EXTernal:HSDigital<ch>:RF:FREQUENCY:OFFSet <FreqOffset>
:SCONfiguration:EXTernal:IQOutput:RF:FREQUENCY:OFFSet <FreqOffset>
```

In coupled mode, offsets the RF frequency of the external instrument with the selected delta value.

**Parameters:**

<FreqOffset> float  
 Range: -3E9 to 3E9  
 Increment: 0.01  
 \*RST: 0

**Example:**

```
SOURce1:FREQUENCY:CW 2143E6
SCONfiguration:EXTernal:IQOutput:RF:COUPling ON
SCONfiguration:EXTernal:IQOutput:RF:FREQUENCY:OFFSet 20E6
// The resulting RF frequency of the external instrument is
// RF = 2143E6 + 20E6 = 2.163 GHz
// Where both the RF frequency and the frequency offset
// are applied at the external instrument
```

**Manual operation:** See ["\(Delta\) RF Frequency/ RF Level"](#) on page 477



---

```
:SCONfiguration:EXTernal:DIGital<ch>:RF:POWer <Power>
:SCONfiguration:EXTernal:HSDigital<ch>:RF:POWer <Power>
:SCONfiguration:EXTernal:IQOutput:RF:POWer <Power>
```

In uncoupled mode, sets the RF level of the external instrument.

**Parameters:**

<Power> float  
 Range: -130 to 20  
 Increment: 0.01  
 \*RST: -30

**Example:**

```
SOURcel:POWer:LEVel:IMMediate:AMPLitude -30
SCONfiguration:EXTernal:IQOutput:RF:COUPling OFF
SCONfiguration:EXTernal:IQOutput:RF:POWer -20
// RF level of the external instrument is -20 dB
```

**Manual operation:** See "(Delta) RF Frequency/ RF Level" on page 477

---

```
:SCONfiguration:EXTernal:DIGital<ch>:RF:POWer:OFFSet <PowerOffset>
:SCONfiguration:EXTernal:HSDigital<ch>:RF:POWer:OFFSet <PowerOffset>
:SCONfiguration:EXTernal:IQOutput:RF:POWer:OFFSet <PowerOffset>
```

In coupled mode, offsets the RF level of the external instrument with the selected delta value.

**Parameters:**

<PowerOffset> float  
 Range: -100 to 100  
 Increment: 0.01  
 \*RST: 0

**Example:**

```
SOURcel:POWer:LEVel:IMMediate:AMPLitude -30
SCONfiguration:EXTernal:IQOutput:RF:COUPling ON
SCONfiguration:EXTernal:IQOutput:RF:POWer:OFFSet -20
// RF level of the external instrument is -50 dB
// Where both the RF level and the level offset
// are applied at the external instrument
```

**Manual operation:** See "(Delta) RF Frequency/ RF Level" on page 477

---

```
:SCONfiguration:EXTernal:DIGital<ch>:RF:STATe <RemConnState>
:SCONfiguration:EXTernal:HSDigital<ch>:RF:STATe <RemConnState>
:SCONfiguration:EXTernal:IQOutput:RF:STATe <RemConnState>
```

Queries/sets the RF output state of the connected external instrument.

**Parameters:**

<RemConnState> 1 | ON | 0 | OFF



**Example:**

```
SCONfiguration:EXternal:IQOutput:RF:COUpling ON
OUTput1:STATe ON
SCONfiguration:EXternal:IQOutput:RF:STATe?
// 1
```

**Example:**

```
SCONfiguration:EXternal:DIGital:RF:COUpling OFF
SCONfiguration:EXternal:DIGital:RF:STATe ON
```

**Manual operation:** See ["RF State"](#) on page 478

### **:SCONfiguration:EXternal:REMOte:SCAN**

Scans the network for connected instruments.

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Event

**Manual operation:** See ["Detect/Scan"](#) on page 480

### **:SCONfiguration:EXternal:REMOte:SCAN:STATe?**

Queries if scanning is performed or not.

To start the scanning process, use the command `:SCONfiguration:EXternal:REMOte:SCAN` on page 773.

**Return values:**

```
<ScanState> 1 | ON | 0 | OFF
1
Scanning process running
0
Not scanning
```

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["Detect/Scan"](#) on page 480

### **:SCONfiguration:EXternal:REMOte:LIST?**

Lists all available instruments.

Instruments found, e.g. by the `:SCONfiguration:EXternal:REMOte:SCAN` command.

**Return values:**

```
<InstrNames> String
String with symbolic names and/or alias names
```



**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["External Instrument"](#) on page 480

---

**:SCONfiguration:EXtErnal:REMoTe:ADD** <InstrName>, <HwChan>,  
<TcpIpOrUsbAddr>[, <RfPathNumber>]

Adds manually an external instrument to the list of available instruments.

**Parameters:**

<HwChan>	String Hardware channel (USB or LAN) used by the remote channel to the external instrument Range: "LAN" to "USB" *RST: "LAN"
<TcpIpOrUsbAddr>	String IP address or hostname of the connected external instrument
<RfPathNumber>	String Determines the number of RF paths the external instrument is equipped with Range: "1" to "2" *RST: "1"

**Setting parameters:**

<InstrName>	String Alias name of the instrument
-------------	--

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Setting only

**Manual operation:** See ["External Instrument"](#) on page 480  
See ["Set Symbolic Name"](#) on page 481  
See ["Remote Channel"](#) on page 481  
See ["Hostname or IP Address"](#) on page 481  
See ["Device ID"](#) on page 481  
See ["RF Path"](#) on page 481

---

**:SCONfiguration:EXtErnal:REMoTe:REName**

Changes the symbolic name of the instrument.

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Setting only



---

**:SCONfiguration:EXTernal:HSDigital:REMOte:DETect?**

**:SCONfiguration:EXTernal:DIGital<ch>:REMOte:DETect?**

Searches for external instruments connected to the particular digital interfaces.

**Return values:**

<DetectedInstr>      string  
                              If the detection fails, the query returns "None".

**Example:**              See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:**                Query only

**Manual operation:**   See ["Detect/Scan"](#) on page 480

---

**:SCONfiguration:EXTernal:HSDigital<ch>:REMOte:ISElect** <InstrName>[, <RfPath>]

**:SCONfiguration:EXTernal:DIGital<ch>:REMOte:ISElect** <InstrName>[, <RfPath>]

**:SCONfiguration:EXTernal:IQOutput:REMOte:ISElect** <InstrName>[, <RfPath>]

Select an external instrument for the selected connector.

**Parameters:**

<InstrName>            String  
                              Instrument alias name, as retrieved with the command : [SCONfiguration:EXTernal:REMOte:LIST?](#) or defined with the command : [SCONfiguration:EXTernal:REMOte:ADD](#).

<RfPath>                String  
                              Determines the used RF output of the external instrument.

**Example:**              See [Example"Connecting and configuring external instruments"](#) on page 762.

**Manual operation:**   See ["External Instrument"](#) on page 480  
                              See ["Apply"](#) on page 482  
                              See ["Apply and Connect"](#) on page 482

---

**:SCONfiguration:EXTernal:DIGital<ch>:REMOte:CONNect**

**:SCONfiguration:EXTernal:HSDigital<ch>:REMOte:CONNect**

**:SCONfiguration:EXTernal:IQOutput:REMOte:CONNect**

Triggers the connection establishment.

**Example:**              See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:**                Event

**Manual operation:**   See ["Apply and Connect"](#) on page 482



---

```
:SCONfiguration:EXTernal:DIGital<ch>:REMote:ICONnect <InstrName>, <RfPath>
:SCONfiguration:EXTernal:HSDigital<ch>:REMote:ICONnect <InstrName>,
    <RfPath>
```

```
:SCONfiguration:EXTernal:IQOutput:REMote:ICONnect <InstrName>, <RfPath>
```

Selects an external instrument for the selected connector and triggers connection.

**Parameters:**

<InstrName>                      string  
Instrument alias name, as retrieved with the command :  
[SCONfiguration:EXTernal:REMote:LIST?](#) or defined with  
the command :[SCONfiguration:EXTernal:REMote:ADD](#).

<RfPath>                      string  
Determines the used RF output of the external instrument.  
For a one-path instrument, the output path is fixed.

**Example:**                      See [Example "Connecting and configuring external instruments"](#)  
on page 762.

**Usage:**                      Setting only

---

```
:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INFO?
:SCONfiguration:EXTernal:DIGital<ch>:REMote:INFO?
:SCONfiguration:EXTernal:IQOutput:REMote:INFO?
```

Queries information on the external instrument.

**Return values:**

<Info>                      string  
Returns information in one of the following formats:  
**"None"**  
An external instrument is not assigned  
<SymbolicName>,<RemoteChannel>,<RemoteAd-  
dress>,<RF Path>  
An external instrument is assigned, but not connected  
<SymbolicName>,<RemoteChannel>,<RemoteAd-  
dress>,<RF Path>[,<\*IDN? String>]  
An external instrument is assigned and connected

**Example:**                      :SCONfiguration:EXTernal:DIGital:REMote:INFO?  
"SGT (101676)", "LAN", "rsgt100a101676", "A",  
"Rohde&Schwarz,SGT100A,1419.4501k02/101676,3.1.19.4-3.18.251.99"

**Usage:**                      Query only

**Manual operation:**        See ["Remote Connection Status"](#) on page 476  
See ["Instrument Name"](#) on page 477  
See ["Set Symbolic Name"](#) on page 481  
See ["Remote Channel"](#) on page 481  
See ["Hostname or IP Address"](#) on page 481  
See ["RF Path"](#) on page 481



---

```
:SCONfiguration:EXTernal:DIGital<ch>:REMote:DISConnect
:SCONfiguration:EXTernal:HSDigital<ch>:REMote:DISConnect
:SCONfiguration:EXTernal:IQOutput:REMote:DISConnect
```

Disconnects the selected remote connection. To disconnect all remote connections at once, use the command `:SCONfiguration:EXTernal:REMote:DISConnect[:ALL]`.

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:** Event

**Manual operation:** See ["Remote Connection Status"](#) on page 476

---

```
:SCONfiguration:EXTernal:REMote:INITialization:CATalog?
```

Queries the names of the existing initialization files in the default directory.

Per default, the instrument saves user-defined files in the `/var/user/` directory. Use the command `:MMEM:CDIRectory` to change the default directory to the currently used one.

Only files with extension `*.iec` are listed.

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:** Query only

**Manual operation:** See ["Initialization Sequence"](#) on page 482

---

```
:SCONfiguration:EXTernal:DIGital<ch>:REMote:INITialization:FILE <Filename>
:SCONfiguration:EXTernal:HSDigital<ch>:REMote:INITialization:FILE <Filename>
:SCONfiguration:EXTernal:IQOutput:REMote:INITialization:FILE <Filename>
```

Queries the currently selected initialization file.

**Parameters:**

<Filename>                      string  
                                   filename with file extension (`*.iec`)

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Manual operation:** See ["Initialization Sequence"](#) on page 482

---

```
:SCONfiguration:EXTernal:REMote:PURGe
```

Removes unused instruments from the pool of external instruments.

**Example:** See [Example"Connecting and configuring external instruments"](#) on page 762.

**Usage:** Event



**Manual operation:** See ["Clean Unused/Clean All"](#) on page 480

---

#### **:SCONfiguration:EXternal:REMOte:CLEan**

Removes all instruments from the pool of external instruments.

**Example:** See [Example "Connecting and configuring external instruments"](#) on page 762.

**Usage:** Event

**Manual operation:** See ["Clean Unused/Clean All"](#) on page 480

---

#### **:SCONfiguration:EXternal:HSDigital<ch>:REMOte:SEND <SendScpiCommand>**

#### **:SCONfiguration:EXternal:IQOutput:REMOte:SEND <SendScpiCommand>**

Allows you to send SCPI commands to the RF instruments connected to the R&S SMBV100B.

#### **Setting parameters:**

<SendScpiCommand>"<SCPI syntax>"

String containing an SCPI command (query or setting)

**Example:** See [Chapter 13.16, "SCONfiguration subsystem"](#), on page 761.

**Usage:** Setting only

**Manual operation:** See ["Command, Send Command"](#) on page 483

## 13.17 SOURce subsystem

The SOURce subsystem contains the commands for configuring signals.

### **Common suffixes**

The following common suffixes are used in remote commands:

Suffix	Value range	Description
SOURce<hw>	[1]	<ul style="list-style-type: none"> <li>SOURce[1] = RF output (optional keyword)</li> <li>LF output = SOURce:LFOutput (SOURce is optional keyword)</li> </ul>
ENTity<ch>	1	Optional keyword, provided for compatibility with R&S®SMW200A ENTity1:SOURce1 = SOURce1
OUTPut<ch>	[1] to 3	Available markers

- [Connector settings](#)..... 779
- [SOURce:BBIN subsystem](#)..... 783
- [Analog modulation subsystems](#)..... 791



• SOURce:BB subsystem.....	817
• SOURce:CORRection subsystem.....	932
• SOURce:FREQuency subsystem.....	942
• SOURce:INPut subsystem.....	950
• SOURce:IQ subsystem.....	952
• SOURce:IQ:OUTPut subsystem.....	954
• SOURce:LFOutput subsystem.....	966
• SOURce:LIST subsystem.....	979
• SOURce:NOISe subsystem.....	992
• SOURce:OCCupy subsystem.....	993
• SOURce:PGEN subsystem.....	995
• SOURce:PHASe subsystem.....	996
• SOURce:POWer subsystem.....	997
• SOURce:ROSCillator subsystem.....	1011
• SOURce:SWEep subsystem.....	1017

### 13.17.1 Connector settings

This section summarizes the commands of the `OUTPut` and `INPut` subsystems, necessary to configure the connectors settings. Listed are the commands for configuring the output signals and the inputs for trigger, data, and control signals.

The `...:USER<ch>:...`  commands determine the global trigger threshold and input impedance values, that affect all trigger and control signal inputs. The connector settings concern to all digital modulations, the generation of waveforms or multi carrier signals, and all digital standards.

Refer to [Chapter 13.17.7, "SOURce:INPut subsystem"](#), on page 950 for description of the commands for configuring the inputs for external modulation signals.

#### Required options

See also [Chapter 11.2, "Configuring global connectors"](#), on page 553.

#### Example: Global connectors settings configuration

```
SOURce1:INPut:USER1:DIRection INP
SOURce1:INPut:USER1:SIGNa1 TRIG1
SOURce1:INPut:USER3:DIRection INP
SOURce1:INPut:USER3:SIGNa1 NSEGM1

SOURce1:INPut:USER5:DIRection INP
SOURce1:INPut:USER5:SIGNa1 TRIG2
SOURce1:INPut:USER:TRIGger:LEVel 1.5
SOURce1:INPut:USER:PULM:LEVel 2

// the signal threshold at USER 1-2 is 1.5 V
// this applies to all input signal, i.e. TRIG1 and NSEGM1
// the signal threshold at USER 3-5 is 2 V
// this applies to all input signal, i.e. TRIG2
```



```
SOURce1:INPut:USER1:TRIGger:IMPedance G1K
SOURce1:INPut:USER1:TRIGger:SLOPe POS
```

```
SOURce1:INPut:USER2:DIRection OUPt
OUTPut1:USER2:SIGNal MARKA2
```

<a href="#">[:SOURce]:INPut:USER&lt;ch&gt;:DIRection</a> .....	780
<a href="#">:OUTPut:USER&lt;ch&gt;:DIRection</a> .....	780
<a href="#">[:SOURce]:INPut:USER&lt;ch&gt;:SIGNal</a> .....	780
<a href="#">:OUTPut:USER&lt;ch&gt;:SIGNal</a> .....	781
<a href="#">:OUTPut:USER&lt;ch&gt;:TRIGger[:IMMediate]</a> .....	782
<a href="#">[:SOURce]:INPut:USER:CLOCK:LEVel</a> .....	782
<a href="#">[:SOURce]:INPut:USER:TRIGger:LEVel</a> .....	782
<a href="#">[:SOURce]:INPut:USER:PULM:LEVel</a> .....	782
<a href="#">[:SOURce]:INPut:USER:CLOCK:IMPedance</a> .....	783
<a href="#">[:SOURce]:INPut:USER:TRIGger:IMPedance</a> .....	783
<a href="#">[:SOURce]:INPut:USER:CLOCK:SLOPe</a> .....	783
<a href="#">[:SOURce]:INPut:USER:TRIGger:SLOPe</a> .....	783

---

**[\[:SOURce\]:INPut:USER<ch>:DIRection](#) <Direction>**  
**[:OUTPut:USER<ch>:DIRection](#) <Direction>**

Sets the direction of the signal at the connector that can be input or an output.

**Suffix:**

USER<ch>                      1 to 5

**Parameters:**

<Direction>                      INPut | OUTPut | UNUSed  
**INPut|OUTPut**  
 Input signal or output signal  
**UNUSed**  
 No signal present at the connector.

**Example:**                      See [Example "Global connectors settings configuration"](#) on page 779.

**Manual operation:**        See ["Direction"](#) on page 561

---

**[\[:SOURce\]:INPut:USER<ch>:SIGNal](#) <Signal>**

Determines the control signal that is input at the selected connector.

To define the connector direction, use the command [\[:SOURce\]:INPut:USER<ch>:DIRection](#).

**Suffix:**

USER<ch>                      1 to 5

**Parameters:**

<Signal>                      TRIG1 | CLOCK1 | NSEGM1 | NONE | SYNCIN | BERDATIN |  
 BERCLKIN | BERDATENIN | BERRESTIN  
 TRIG1 = Global Trigger



CLOCK1 = Global Clock  
 NSEGM1 = Global Next Segment  
 SYNCIN = Baseband Sync In  
 BERDATIN | BERCLKIN | BERDATENIN | BERRESTIN = BER  
 Data, Clock, Data Enable and Restart  
 NONE = none

**Example:** See [Example "Global connectors settings configuration"](#) on page 779.

**Options:** BERDATIN|BERCLKIN|BERDATENIN|BERRESTIN require R&S SMBVB-K80

**Manual operation:** See ["Signal"](#) on page 561

**:OUTPut:USER<ch>:SIGNal <Signal>**

Sets the control signal that is output at the selected connector.

To define the connector direction, use the command **:OUTPut:USER<ch>:DIRection**.

**Suffix:**

USER<ch> 1 to 5

**Parameters:**

<Signal> MARKA1 | MARKA2 | MARKA3 | NONE | SYNCOUT | SCLock | LATTenuation | BGATe | HOP | CWMODulation | TRIGgered | MTRigger | LOW | HIGH | BERRESTOUT | BERDATENOUT | BERCLKOUT | BERDATOUT

MARKA<1 | 2 | 3> = Baseband Marker 1/2/3

MTRigger = Manual Trigger, available for USER5

BERRESTOUT | BERDATENOUT | BERCLKOUT | BERDATOUT = BER  
 TestGen Data, Clock, Data Enable and Restart

SYNCOUT = Baseband Sync Out

SCLock = Symbol Clock

LATTenuation = Lev Att

BGATA = Burst Gate

HOP = HOP

CWMODulation = CW/Mod

TRIGgered = Triggered

MTRigger = Manual Trigger, available for USER5

LOW | HIGH = Always 0/1

NONE = none

\*RST: MARKA1

**Example:** See [Example "Global connectors settings configuration"](#) on page 779

**Options:** BERRESTOUT|BERDATENOUT|BERCLKOUT|BERDATOUT require R&S SMBVB-K80



**Manual operation:** See ["Signal"](#) on page 561

---

### **:OUTPut:USER<ch>:TRIGger[:IMMediate]**

Generates a short pulse signal and outputs it at the User connector.

This signal can serve as a common external trigger signal for triggering of several R&S SMBV100B, see [Example"Triggering several R&S SMBV100B instruments simultaneously"](#) on page 462.

**Suffix:**

USER<ch>                      5

**Example:** See [Example"Global connectors settings configuration"](#) on page 779.

**Usage:** Event

**Manual operation:** See ["Execute Trigger"](#) on page 562

---

### **[:SOURce]:INPut:USER:CLOCK:LEVel <Level>**

### **[:SOURce]:INPut:USER:TRIGger:LEVel <Level>**

Sets the threshold for any input signal at the User1-2 connectors.

**Parameters:**

<Level>                      float  
                                  Range:        0.1 to 2  
                                  Increment: 0.1  
                                  \*RST:        1

**Example:** See [Example"Global connectors settings configuration"](#) on page 779.

**Manual operation:** See ["Threshold User1-2 Input"](#) on page 563

---

### **[:SOURce]:INPut:USER:PULM:LEVel <Level>**

Sets the threshold for any input signal at the User3-5 connectors.

**Parameters:**

<Level>                      float  
                                  Range:        0.1 to 2  
                                  Increment: 0.1  
                                  \*RST:        1  
                                  Default unit: V

**Example:** See [Example"Global connectors settings configuration"](#) on page 779.

**Manual operation:** See ["Threshold User3-5 Input/Threshold Pulse Input"](#) on page 563



---

```
[ :SOURce]:INPut:USER:CLOCK:IMPedance <Impedance>
[ :SOURce]:INPut:USER:TRIGger:IMPedance <Impedance>
```

Selects the input impedance for the external trigger inputs.

**Parameters:**

<Impedance>            G50 | G1K  
                          **G50**  
                          50 Ω per ground  
                          **G1K**  
                          1 kΩ per ground  
                          \*RST:        G1K

**Example:**            See [Example"Global connectors settings configuration"](#) on page 779.

**Manual operation:**   See ["Impedance Clock/Trigger Input"](#) on page 563

---

```
[ :SOURce]:INPut:USER:CLOCK:SLOPe <Slope>
```

Sets the polarity of the active slope of an externally applied clock signal.

**Parameters:**

<Slope>                NEGative | POSitive  
                          \*RST:        POSitive

**Example:**            See [Example"Global connectors settings configuration"](#) on page 779.

**Manual operation:**   See ["Clock Input Slope"](#) on page 563

---

```
[ :SOURce]:INPut:USER:TRIGger:SLOPe <Slope>
```

Sets the polarity of the active slope of an applied instrument trigger.

**Parameters:**

<Slope>                NEGative | POSitive  
                          \*RST:        POSitive

**Example:**            See [Example"Global connectors settings configuration"](#) on page 779

**Manual operation:**   See ["Trigger Input Slope"](#) on page 563

### 13.17.2 SOURce:BBIN subsystem

The SOURce:BBIN subsystem contains the commands for setting the external digital baseband signal.

**Required options**

See ["Required options"](#) on page 486.



See also [Chapter 9.4.2, "Overview of the input and output signals and interfaces"](#), on page 465.

### Example: Applying an external digital baseband signal (Dig I/Q)

An external digital signal must be applied at the Dig I/Q connectors.

```
// Set the sample rate source and query the value.
SOURCE1:BBIN:SRATE:SOURCE DIN
SOURCE1:BBIN:SRATE:ACTual? 100000000
SOURCE1:BBIN:STATE ON

// enable automatic adjustment of the baseband input signal
SOURCE1:BBIN:DIGital:ASETting:STATE ON
SOURCE1:BBIN:MPERiod 10s
SOURCE1:BBIN:ALEvel:EXECute
SOURCE1:BBIN:CFACTOR?
SOURCE1:BBIN:POWER:PEAK?
SOURCE1:BBIN:POWER:RMS?
```

### Example: Applying an external digital baseband signal (HS Dig I/Q)

An external digital signal must be applied at the HS Dig I/Q connectors.

```
SOURCE1:BBIN:STATE 1

SOURCE1:BBIN:DIGital:INTERface HSD
SOURCE1:BBIN:SRATE:SOURCE? HSD
SOURCE1:BBIN:CHANnel0:NAME?
SOURCE1:BBIN:CHANnel0:SRATE?
// 100000000
SOURCE1:BBIN:CHANnel0:POWER:CFACTOR 0.5
SOURCE1:BBIN:CHANnel0:POWER:PEAK 3
SOURCE1:BBIN:CHANnel0:POWER:RMS?
// 2.5
SOURCE1:BBIN:CHANnel0:BB:STATE 1
SOURCE1:BBIN:SRATE:SUM?
// 100000000
SOURCE1:BBIN:SRATE:MAX?
// 1250000000

// Set the sample rate per channel.
SOURCE1:BBIN:SRATE:SOURCE USER
SOURCE1:BBIN:CHANnel0:SRATE 500000000
SOURCE1:BBIN:SRATE:SUM?
// 500000000

SOURCE1:BBIN:MPERiod 2
SOURCE1:BBIN:ALEvel:EXECute
```



[SOURce<hw>]:BBIN:STATe.....	785
[SOURce<hw>]:BBIN:DiGital:INTErface.....	786
[SOURce<hw>]:BBIN:CDEVICE?.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATe.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:NAME.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWEr:CFACTOR.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWEr:PEAK.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWEr:RMS.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:SRATE.....	788
[SOURce<hw>]:BBIN:MODE.....	788
[SOURce<hw>]:BBIN:SRATE:SOURce.....	788
[SOURce<hw>]:BBIN:SRATE:SUM?.....	788
[SOURce<hw>]:BBIN:SRATE:MAX?.....	789
[SOURce<hw>]:BBIN:SRATE[:ACTual]?.....	789
[SOURce<hw>]:BBIN:DiGital:ASETting:STATe.....	789
[SOURce<hw>]:BBIN:MPERiod.....	790
[SOURce<hw>]:BBIN:ALEVel:EXECute.....	790
[SOURce<hw>]:BBIN:POWEr:CFACTOR.....	790
[SOURce<hw>]:BBIN:POWEr:PEAK.....	791
[SOURce<hw>]:BBIN:POWEr:RMS?.....	791

---

#### [SOURce<hw>]:BBIN:STATe <State>

Enables feeding of an external digital signal into the signal path.

#### Note: Interdependencies

The following functions cannot be activated simultaneously. **They deactivate each other.**

- The internal baseband generator ([SOURce<hw>]:BB:<DigStd>:STATe) and the external digital baseband input ([SOURce<hw>]:BBIN:STATe)
- The external digital baseband input ([SOURce<hw>]:BBIN:STATe) and digital output ([SOURce<hw>]:IQ:OUTPut:DiGital:STATe) because they share the same physical connectors (Dig I/Q and the HS Dig I/Q).
- The digital output ([SOURce<hw>]:IQ:OUTPut:DiGital:STATe) and the output of analog I/Q signals:
  - If [SOURce<hw>]:IQ:SOURce BASEband, [SOURce<hw>]:IQ:STATe + :OUTPut<hw>:STATe or
  - [SOURce<hw>]:IQ:OUTPut:ANALog:STATe

#### Parameters:

<State>                    1 | ON | 0 | OFF  
 \*RST:                    0

**Example:**                See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:**    See ["State"](#) on page 488



---

**[ :SOURce<hw>]:BBIN:DIGital:INTERface <BBinDigInterfac>**

Selects the input connector at that the signal is fed.

**Parameters:**

<BBinDigInterfac> DIGital | HSDin | DIGital | HSDin  
**DIN**  
 Dig I/Q  
**HSDin**  
 HS Dig I/Q  
 \*RST: HSDin

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Interface"](#) on page 488

---

**[ :SOURce<hw>]:BBIN:CDEvice?**

Indicates the ID of an externally connected Rohde & Schwarz Instrument or Rohde & Schwarz device.

**Return values:**

<CDevice> string  
 "None" - no device is connected.

**Example:** SOURce:BBIN:CDEvice?  
Queries the connected device ID.

**Usage:** Query only

**Manual operation:** See ["Connected Device"](#) on page 489

---

**[ :SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATe <BbinIqHsChanSta>**

Activates the channel.

**Parameters:**

<BbinIqHsChanSta> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["BB"](#) on page 490

---

**[ :SOURce<hw>]:BBIN:CHANnel<ch0>:NAME <BbinIqHsChanNam>**

Queries the channel name.

**Parameters:**

<BbinIqHsChanNam> string



**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Name"](#) on page 490

**[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWER:CFACtor <BbinIqHsChCrFac>**

Sets the crest factor of the individual channels.

**Parameters:**

<BbinIqHsChCrFac> float  
 Range: 0 to 30  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Crest Factor"](#) on page 490

**[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWER:PEAK <BbinHsChPoPeak>**

Sets the peak level per channel.

**Parameters:**

<BbinHsChPoPeak> float  
 Range: -60 to 3.02  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Peak Level"](#) on page 490

**[[:SOURce<hw>]:BBIN:CHANnel<ch0>:POWER:RMS <BbinIqHsChPoRms>**

Queries the estimated RMS level.

**Parameters:**

<BbinIqHsChPoRms> float  
 Range: -100 to 10  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Level"](#) on page 490



---

**[[:SOURce<hw>]:BBIN:CHANnel<ch0>:SRATe <BbinIqHsChSaRat>**

Queries the sample rate per channel.

**Parameters:**

<BbinIqHsChSaRat> float

Range: 400 to 250E6 ("System Config > Mode = Advanced")/1250E6 ("System Config > Mode = Standard")

Increment: 0.001

\*RST: 100E6

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Sample Rate"](#) on page 490

---

**[[:SOURce<hw>]:BBIN:MODE <Mode>**

Defines that a digital external signal is applied.

**Parameters:**

<Mode> DIGital

\*RST: DIGital

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

---

**[[:SOURce<hw>]:BBIN:SRATe:SOURce <Source>**

Sets the digital interface used to estimate the sample rate.

**Parameters:**

<Source> DIN | HSDin

**DIN**  
Estimates the sample rate based on the digital input signal.

**HSDin**  
Enabled for [\[:SOURce<hw>\]:BBIN:DIGital:INTERface](#) HSDin.

\*RST: HSDin

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Sample Rate Source"](#) on page 488

---

**[[:SOURce<hw>]:BBIN:SRATe:SUM?**

Queries the sum of the sample rates of all active channels.



**Return values:**

&lt;DigIqHsOutSRSum&gt; integer

Range: 0 to depends on settings

\*RST: 0

**Example:**See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.**Usage:**

Query only

**Manual operation:** See ["Aggregated Link Sample Rate"](#) on page 490**[:SOURce<hw>]:BBIN:SRATe:MAX?**

Queries the maximum sample rate.

**Return values:**

&lt;DigIqHsOutSRMax&gt; integer

Range: 400 to 600E6

\*RST: 600E6

**Example:**See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.**Usage:**

Query only

**Manual operation:** See ["Aggregated Link Sample Rate"](#) on page 490**[:SOURce<hw>]:BBIN:SRATe[:ACTual]?**

Queries the sample rate of the external digital baseband signal.

**Return values:**

&lt;Actual&gt; float

Range: 400 to 100E6

Increment: 0.001

\*RST: 100E6

**Example:**See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.**Usage:**

Query only

**Manual operation:** See ["Sample Rate Value"](#) on page 492**[:SOURce<hw>]:BBIN:DIGital:ASETting:STATe <State>**

Activates automatic adjustment of the baseband input signal.

**Parameters:**

&lt;State&gt; 1 | ON | 0 | OFF

\*RST: 1



**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["DIG IQ Auto Setting"](#) on page 491

**[ :SOURce<hw>]:BBIN:MPERiod <MPeriod>**

Sets the recording duration for measuring the baseband input signal by executed [\[ :SOURce<hw>\]:BBIN:ALEVel:EXECute](#).

**Parameters:**

<MPeriod> integer  
 Range: 1 to 32  
 \*RST: 2  
 Default unit: s

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Measurement Period"](#) on page 491

**[ :SOURce<hw>]:BBIN:ALEVel:EXECute**

Starts measuring the input signal. The measurement estimates the crest factor, peak and RMS level.

**Example:** See [Example"Applying an external digital baseband signal \(HS Dig I/Q\)"](#) on page 784.

**Usage:** Event

**Manual operation:** See ["Auto Level Set"](#) on page 491

**[ :SOURce<hw>]:BBIN:POWER:CFACTOR <CFactor>**

Sets the crest factor of the external baseband signal.

**Parameters:**

<CFactor> float  
 Range: 0 to 30  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB

**Example:** See [Example"Applying an external digital baseband signal \(Dig I/Q\)"](#) on page 784.

**Manual operation:** See ["Crest Factor"](#) on page 493



---

**[[:SOURce<hw>]:BBIN:POWER:PEAK <Peak>**

Peak level of the external baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

**Parameters:**

<Peak> float  
 Range: -60 to 3.02  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dBfs

**Example:** See [Example "Applying an external digital baseband signal \(Dig I/Q\)"](#) on page 784

**Manual operation:** See ["Peak Level"](#) on page 494

---

**[[:SOURce<hw>]:BBIN:POWER:RMS?**

Queries the RMS level of the external digital baseband signal.

**Return values:**

<Rms> float  
 Range: -100 to 10  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example "Applying an external digital baseband signal \(Dig I/Q\)"](#) on page 784.

**Usage:** Query only

**Manual operation:** See ["Level"](#) on page 494

### 13.17.3 Analog modulation subsystems

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

The subsystems in this section describe all commands for analog modulation of the RF signal. Divided in separate sections, you can configure amplitude modulation (AM), frequency modulation (FM), phase modulation (PhiM) and pulse modulation (PULM).

You can perform each of the modulations either with an internally generated modulation signal or with an externally applied signal.

To configure the internal signal, use the commands listed in [Chapter 13.17.10, "SOURce:LFOOutput subsystem"](#), on page 966.

For more information:

See [Chapter 7.11, "Analog modulations"](#), on page 359.



### 13.17.3.1 SOURce:MODulation subsystem

The command in this subsystem allows you to disable all active modulations at once, and, vice versa, to restore the last active ones.

**[[:SOURce<hw>]:MODulation[:ALL]][:STATe] <State>**

Activates all modulations that were active before the last switching off.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
 \*RST:                    0

**Example:**

```
SOURce1:AM1:DEPT h 30
SOURce1:AM1:SOURce LF1
SOURce1:AM1:STATe 1
SOURce1:FM1:DEVIation 1000
SOURce1:FM1:STATe 1
// disable both modulation
SOURce1:MODulation:ALL:STATe 0
SOURce1:AM1:STATe?
// 0
SOURce1:FM1:STATe?
// 0
// enable both modulation
SOURce1:MODulation:ALL:STATe 1
SOURce1:AM1:STATe?
// 1
SOURce1:FM1:STATe?
// 1
```

**Manual operation:** See "[Mod on/off]" on page 361

### 13.17.3.2 SOURce:AM subsystem

Option: R&S SMBVB-K720

The AM subsystem contains the commands for setting the amplitude modulation and also the broadband amplitude modulation.



Activation of amplitude modulation deactivates ARB, I/Q modulation, digital modulation and all digital standards.

The following examples show some variants for generating AM signals.

**Example: Creating an amplitude modulated RF signal**

Using the internal LF generator, the following command sequence configures an amplitude modulated signal.

```
// Reset the instrument to start from a defined state
*RST
```



```
// Set RF frequency and amplitude
SOURcel:FREQuency:CW 6000000000
SOURcel:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURcel:LFOutput1:SHAPE SINE
SOURcel:LFOutput1:FREQuency 20000

// Configure the amplitude modulation settings and switch AM on
SOURcel:AM1:SOURce LF1
SOURcel:AM1:DEPTh 30
SOURcel:AM:RATio 40
SOURcel:AM1:DEVIation:MODE UNC
SOURcel:AM1:STATe 1
```

### Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an amplitude modulated signal with determined deviations depths.

```
// Configure the AM modulation settings with combined LF signal sources
SOURcel:AM1:SOURce LF1
SOURcel:AM1:DEPTh 32
// Select the modulation signal source for the second path
SOURcel:AM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:AM1:DEVIation:MODE TOT
SOURcel:AM1:DEPTh:SUM 60

// Query the deviation depth of modulation signal in the second path
SOURcel:AM2:DEPTh?
// Response: 28

// Combine the signals of both paths with fixed ratio
SOURcel:AM1:DEVIation:MODE RAT
SOURcel:AM1:RATio 100
SOURcel:AM2:DEPTh 25

// Query the deviation depth of modulation signal in the first path
SOURcel:AM1:DEPTh?
// Response: 25

SOURcel:AM1:STATe 1
SOURcel:AM2:STATe 1
```

### Example: Using an external signal source

Using an external signal source, you can additionally determine whether you want to use only the AC component of the external modulation signal.



```
// Reset the instrument to start from a defined state
*RST

// Set frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the amplitude modulation settings and turn on AM
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:DEPTh 40

// Query the input sensitivity at the external modulation input
SOURce1:AM1:SENSitivity?
// Response: 40
// Since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 50%/V.
// This value is assigned to the voltage value for full
// modulation of the input.

// Select the coupling mode AC for external amplitude modulation
SOURce1:INPut:MODext:COUPling1 AC

// For external AM signal input, adjust the sensitivity
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:SENSitivity 25
SOURce1:AM1:SENSitivity?
Response: 25

// Switch on AM and RF signal output
SOURce1:AM1:STATe 1
OUTPut1:STATe 1
```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:STATe</a>	794
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:SOURce</a>	795
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;[:DEPTh]</a>	795
<a href="#">[:SOURce&lt;hw&gt;]:AM:DEPTh:SUM</a>	795
<a href="#">[:SOURce&lt;hw&gt;]:AM:DEVIation:MODE</a>	796
<a href="#">[:SOURce&lt;hw&gt;]:AM:RATio</a>	796
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:SENSitivity</a>	796

---

**[\[:SOURce<hw>\]:AM<ch>:STATe <State>](#)**

Activates amplitude modulation.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
                              \*RST:            0



**Example:** See [Example "Creating an amplitude modulated RF signal"](#) on page 792.

**Manual operation:** See ["State"](#) on page 364

**[ :SOURce<hw>]:AM<ch>:SOURce <Source>**

Selects the modulation source for amplitude modulation.

**Parameters:**

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal

**LF1|LF2**

Uses an internally generated LF signal.

**EXT1**

Uses an externally supplied LF signal.

**NOISe**

Uses the internally generated noise signal.

**INTernal**

Uses the internally generated signal of LF1.

**EXTernal**

Uses an external LF signal (EXT1).

**Example:** See [Example "Creating an amplitude modulated RF signal"](#) on page 792.

**Manual operation:** See ["Source"](#) on page 365

**[ :SOURce<hw>]:AM<ch>[:DEPT] <Depth>**

Sets the depth of the amplitude modulation in percent.

**Suffix:**

<ch> 1..2  
Modulation signal channel

**Parameters:**

<Depth> float  
Range: 0 to 100

**Example:** See [Example "Creating an amplitude modulated RF signal"](#) on page 792.

**Manual operation:** See ["Depth"](#) on page 368

**[ :SOURce<hw>]:AM:DEPT:SUM <AmDepthSum>**

Sets the total depth of the LF signal when using combined signal sources in amplitude modulation.



**Parameters:**

<AmDepthSum> float  
 Range: 0 to 100  
 Increment: 0.1  
 \*RST: 30

**Example:** See [Example"Using combined LF signals"](#) on page 793.

**Manual operation:** See ["Total Depth"](#) on page 369

**[SOURce<hw>]:AM:DEVIation:MODE <AmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total depth.

**Parameters:**

<AmDevMode> UNCoupled | TOTal | RATio  
**UNCoupled**  
 Does not couple the LF signals.  
 The deviation depth values of both paths are independent.  
**TOTal**  
 Couples the deviation depth of both paths.  
**RATio**  
 Couples the deviation depth ratio of both paths  
 \*RST: UNCoupled

**Example:** See [Example"Using combined LF signals"](#) on page 793.

**Manual operation:** See ["Deviation Mode"](#) on page 368

**[SOURce<hw>]:AM:RATio <Ratio>**

Sets the deviation ratio (path#2 to path#1) in percent.

**Parameters:**

<Ratio> float  
 Range: 0 to 100  
 Increment: 0.1  
 \*RST: 100

**Example:** See [Example"Creating an amplitude modulated RF signal"](#) on page 792.

**Manual operation:** See ["Ratio Path2/Path1"](#) on page 369

**[SOURce<hw>]:AM<ch>:SENSitivity <Sensitivity>**

Sets the sensitivity of the external signal source for amplitude modulation in %/V.



**Parameters:**

<Sensitivity>            float  
                          Range:        0 to 100  
                          Increment: 0.1  
                          \*RST:        30

**Example:**                See [Example "Using an external signal source"](#) on page 793.

**Manual operation:**    See ["Sensitivity"](#) on page 368

**13.17.3.3 SOURce:FM subsystem**

Option: R&S SMBVB-K720

The FM subsystem contains the commands for setting the frequency modulation.

**Example: Creating a frequency modulated RF signal**

Using the internal LF generator, the following command sequence configures a frequency modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHAPE SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
SOURce1:FM:RATio 40
SOURce1:FM:MODE LNOise
SOURce1:FM1:STATe 1

// Switch on LF and RF signal output
SOURce1:LFOutput1:STATe 1
OUTPut1:STATe 1
```

**Example: Using combined LF signals**

Using the internal LF generators of both paths, the following command sequences configure a frequency modulated signal with determined deviations.

```
// Configure the FM modulation settings with combined LF signal sources
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
// Select the modulation signal source for the second path
```



```

SOURce1:FM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURce1:FM1:DEVIation:MODE TOT
SOURce1:FM1:DEVIation:SUM 5000

// Query the deviation depth of modulation signal in the second path
SOURce1:FM2:DEVIation?
// Response: 4000

// Combine the signals of both paths with fixed ratio
SOURce1:FM1:DEVIation:MODE RAT
SOURce1:FM1:RATio 100
SOURce1:FM2:DEVIation 10000

// Query the deviation depth of modulation signal in the first path
SOURce1:AM1:DEVIation?
// Response: 1000

SOURce1:FM1:STATe 1
SOURce1:FM2:STATe 1

```

### Example: Using an external signal source

Alternatively configure the frequency modulation settings with an external modulation signal.

```

// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce EXT1
SOURce1:FM1:DEVIation 5000

// Query the input sensitivity at the external modulation input
:SOURce1:FM1:SENSitivity?
// Response: 1000
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 5000 Hz/V.

// Switch on FM and RF signal output
SOURce1:FM1:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;:STATe.....</a>	799
<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;[:DEVIation].....</a>	799
<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;:SOURce.....</a>	799



<a href="#">[:SOURce&lt;hw&gt;]:FM:DEVIation:MODE</a> .....	800
<a href="#">[:SOURce&lt;hw&gt;]:FM:DEVIation:SUM</a> .....	800
<a href="#">[:SOURce&lt;hw&gt;]:FM:RATio</a> .....	801
<a href="#">[:SOURce&lt;hw&gt;]:FM:MODE</a> .....	801
<a href="#">[:SOURce&lt;hw&gt;]:FM:SENSitivity?</a> .....	801

---

#### **[\[:SOURce<hw>\]:FM<ch>:STATe](#) <State>**

Activates frequency modulation.

##### **Suffix:**

FM<ch>                      1..2  
determines the modulation signal channel.

##### **Parameters:**

<State>                      1 | ON | 0 | OFF  
\*RST:                      0

**Example:**                      See [Example"Creating a frequency modulated RF signal"](#)  
on page 797.

**Manual operation:**        See ["State"](#) on page 364

---

#### **[\[:SOURce<hw>\]:FM<ch>\[:DEVIation\]](#) <Deviation>**

Sets the modulation deviation of the frequency modulation in Hz.

##### **Suffix:**

FM<ch>                      1|2  
Modulation signal channel

##### **Parameters:**

<Deviation>                      float  
The maximum deviation depends on the RF frequency and the  
selected modulation mode (see data sheet).  
Range:                      0 to max  
Increment:                  0.01  
\*RST:                      1E3

**Example:**                      See [Example"Creating a frequency modulated RF signal"](#)  
on page 797.

**Manual operation:**        See ["Deviation"](#) on page 365

---

#### **[\[:SOURce<hw>\]:FM<ch>:SOURce](#) <Source>**

Selects the modulation source for frequency modulation.



**Suffix:**

FM<ch> 1|2  
Modulation signal channel.

**Parameters:**

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal  
**LF1|LF2**  
Uses an internally generated LF signal.  
**INTernal**  
Uses the internally generated signal of LF1.  
**EXTernal**  
Uses an external LF signal (EXT1).  
**NOISe**  
Uses the internally generated noise signal.  
\*RST: LF1 <FM1>; LF2 <FM2>

**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 797.

**Manual operation:** See ["Source"](#) on page 365

**[:SOURce<hw>]:FM:DEViation:MODE <FmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

**Parameters:**

<FmDevMode> UNCoupled | TOTal | RATio  
**UNCoupled**  
Does not couple the LF signals.  
The deviation values of both paths are independent.  
**TOTal**  
Couples the deviation of both paths.  
**RATio**  
Couples the deviation ratio of both paths  
\*RST: UNCoupled

**Example:** See [Example"Using combined LF signals"](#) on page 797.

**Manual operation:** See ["Deviation Mode"](#) on page 365

**[:SOURce<hw>]:FM:DEViation:SUM <FmDevSum>**

Sets the total deviation of the LF signal when using combined signal sources in frequency modulation.



**Parameters:**

<FmDevSum> float  
 Range: 0 to 40E6  
 Increment: 0.01  
 \*RST: 1E3

**Example:** See [Example"Using combined LF signals"](#) on page 797.

**Manual operation:** See ["Total Deviation"](#) on page 366

**[[:SOURce<hw>]:FM:RATio <Ratio>**

Sets the deviation ratio (path2 to path1) in percent.

**Parameters:**

<Ratio> float  
 Range: 0 to 100  
 Increment: 0.1  
 \*RST: 100

**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 797.

**Manual operation:** See ["Ratio Path2/Path1"](#) on page 366

**[[:SOURce<hw>]:FM:MODE <Mode>**

Selects the mode for the frequency modulation.

**Parameters:**

<Mode> HBANdwidth | LNOise

**HBANdwidth**

Selects maximum range for modulation bandwidth.

**LNOise**

Selects optimized phase noise and spurious characteristics with reduced modulation bandwidth and FM deviation.

\*RST: HBANdwidth

**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 797.

**Manual operation:** See ["Mode"](#) on page 366

**[[:SOURce<hw>]:FM:SENSitivity?**

Queries the sensitivity of the externally supplied signal for frequency modulation. The sensitivity depends on the set modulation deviation.



**Return values:**

&lt;Sensitivity&gt;

float

Sensitivity in Hz/V.

It is assigned to the voltage value for full modulation of the input.

Range: 0 to max

Increment: 0.01

**Example:**See [Example "Using an external signal source"](#) on page 798.**Usage:**

Query only

**13.17.3.4 SOURce:PM subsystem**

Option: R&amp;S SMBVB-K720

The PM subsystem contains the commands for setting the phase modulation. You can configure the internal modulation source (LF generator) with the commands listed in [Chapter 13.17.10, "SOURce:LFOutput subsystem"](#), on page 966 .

**Example: Performing phase modulation**

The following example shows a command sequence to perform phase modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the phase modulation settings
SOURcel:LFOutput1:SHAPE SINE
SOURcel:LFOutput1:FREQuency 1000

// Select the LF signal generated by the internal modulation generator
// or the internally generated noise signal
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SOURce LF1
// SOURcel:PM1:SOURce INTERNAL
// SOURcel:PM1:SOURce NOISE
SOURcel:PM1:RATio 40
SOURcel:PM1:MODE HBAN

// Alternatively configure the phase modulation settings for an
// external modulation source and query the input sensitivity.
SOURcel:PM1:SOURce EXT1
// SOURcel:PM1:SOURce EXTERNAL
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SENSitivity?
// Response: 1
// since the voltage value for full modulation is 1V,
```



```
// the resulting sensitivity is precisely 1RAD/V.
```

```
// Activate the signal output
```

```
SOURce1:PM1:STATe 1
```

```
OUTPut1:STATe 1
```

### Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an phase modulated signal with determined deviations.

```
// Configure the Phase modulation settings with combined LF signal sources
```

```
SOURce1:PM1:SOURce LF1
```

```
SOURce1:PM1:DEVIation 1.5
```

```
// Select the modulation signal source for the second path
```

```
SOURce1:PM2:SOURce LF2
```

```
// Combine the signals of both paths with fixed total deviation depth
```

```
SOURce1:PM1:DEVIation:MODE TOT
```

```
SOURce1:PM1:DEVIation:SUM 2
```

```
// Query the deviation depth of the modulation signal in the second path
```

```
SOURce1:PM2:DEVIation?
```

```
// Response: 0.5
```

```
// Combine the signals of both paths with fixed ratio
```

```
SOURce1:PM1:DEVIation:MODE RAT
```

```
SOURce1:PM1:RATio 80
```

```
SOURce1:PM2:DEVIation?
```

```
// Response: 1.2
```

```
// Query the deviation depth of modulation signal in the first path
```

```
SOURce1:PM1:DEVIation?
```

```
// Response: 1.5
```

```
SOURce1:FM1:STATe 1
```

```
SOURce1:FM2:STATe 1
```

The following commands are available:

[SOURce<hw>]:PM<ch>:STATe.....	803
[SOURce<hw>]:PM<ch>:SOURce.....	804
[SOURce<hw>]:PM:MODE.....	804
[SOURce<hw>]:PM:DEVIation:MODE.....	805
[SOURce<hw>]:PM:DEVIation:SUM.....	805
[SOURce<hw>]:PM:RATio.....	805
[SOURce<hw>]:PM:SENSitivity?.....	806
[SOURce]:PM<ch>[:DEVIation].....	806

---

**[SOURce<hw>]:PM<ch>:STATe <State>**

Activates phase modulation.



Activation of phase modulation deactivates frequency modulation.

**Suffix:**

PM<ch> 1|2  
Sets the modulation signal channel.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Performing phase modulation"](#) on page 802.

**Manual operation:** See ["State"](#) on page 364

**[ :SOURce<hw>]:PM<ch>:SOURce <Source>**

Selects the modulation source for phase modulation signal.

**Suffix:**

PM<ch> 1|2  
Sets the modulation signal channel.

**Parameters:**

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal  
**LF1|LF2**  
Uses an internally generated LF signal.  
**EXT1**  
Uses an externally supplied LF signal.  
**NOISe**  
Uses the internally generated noise signal.  
**INTernal**  
Uses the internally generated signal of LF1.  
**EXTernal**  
Uses an external LF signal (EXT1).

**Example:** See [Example "Performing phase modulation"](#) on page 802.

**Manual operation:** See ["Source"](#) on page 365

**[ :SOURce<hw>]:PM:MODE <Mode>**

Selects the mode for the phase modulation.

**Parameters:**

<Mode> HBANdwidth | HDEViation | LNOise  
**HBANdwidth**  
Sets the maximum available bandwidth.  
**HDEViation**  
Sets the maximum range for  $\Phi$ M deviation.



**LNOise**

Selects a phase modulation mode with phase noise and spurious characteristics close to CW mode.

\*RST: HBANdwidth

**Example:** See [Example"Performing phase modulation"](#) on page 802.

**Manual operation:** See ["Mode"](#) on page 367

**[SOURce<hw>]:PM:DEVIation:MODE <PmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

**Parameters:**

<PmDevMode> UNCOupled | TOTal | RATio

**UNCOupled**

Does not couple the LF signals.

The deviation values of both paths are independent.

**TOTal**

Couples the deviation of both paths.

**RATio**

Couples the deviation ratio of both paths

\*RST: UNCOupled

**Example:** See [Example"Using combined LF signals"](#) on page 803

**Manual operation:** See ["Deviation Mode"](#) on page 367

**[SOURce<hw>]:PM:DEVIation:SUM <PmDevSum>**

Sets the total deviation of the LF signal when using combined signal sources in phase modulation.

**Parameters:**

<PmDevSum> float  
Range: 0 to max  
Increment: 1E-6  
\*RST: 1

**Example:** See [Example"Using combined LF signals"](#) on page 803

**Manual operation:** See ["Total Deviation"](#) on page 367

**[SOURce<hw>]:PM:RATio <Ratio>**

Sets the deviation ratio (path2 to path1) in percent.



**Parameters:**

<Ratio> float  
 Range: 0 to 100  
 Increment: 0.01  
 \*RST: 100

**Example:** See [Example"Performing phase modulation"](#) on page 802.

**Manual operation:** See ["Ratio Path2/Path1"](#) on page 367

**[[:SOURce<hw>]:PM:SENSitivity?**

Queries the sensitivity of the externally applied signal for phase modulation.

The returned value reports the sensitivity in RAD/V. It is assigned to the voltage value for full modulation of the input.

**Return values:**

<Sensitivity> float

**Example:** See [Example"Performing phase modulation"](#) on page 802.

**Usage:** Query only

**[[:SOURce]:PM<ch>[:DEViation] <Deviation>**

Sets the modulation deviation of the phase modulation in RAD.

**Parameters:**

<Deviation> float  
 The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).  
 Range: 0 to max  
 Increment: 1  
 \*RST: 1  
 Default unit: RAD

**Example:** See [Example"Performing phase modulation"](#) on page 802.

**Manual operation:** See ["Deviation"](#) on page 366

**13.17.3.5 SOURce:PULM subsystem**

Option: see [Chapter 7.11.1, "Required options"](#), on page 359.

The PULM subsystem contains the commands for setting the pulse modulation.

- [Pulse modulation settings](#)..... 807
- [Pulse train settings](#)..... 812
- [Pulse train data exchange](#)..... 815



## Pulse modulation settings

With the commands described in this section, you can configure the settings for pulse modulation, select the trigger mode and determine delay times for the pulse modulation signal.

### Example: Perform pulse modulation

The example shows a command sequence to perform pulse modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the pulse modulation settings
// Select the internal modulation generator,
// set trigger mode, select pulse mode, transition type

// Trigger a single pulse

SOURce:PULM:SOURce INT
SOURce:PULM:TRIGger:MODE SING
SOURce:PULM:MODE DOUB
SOURce:PULM:TTYPe SMO

SOURce:PULM:TRIG:IMM

// Alternatively configure the pulse modulation settings for
// external modulation source
// Select the source, set the polarity of the external signal,
// select the impedance for the external pulse modulation input/
// for the external pulse modulation trigger input
SOURce:PULM:SOURce EXT
SOURce:PULM:POLarity NORMal
SOURce:PULM:IMPedance G1K

// Configure the pulse generator settings
// Set pulse period, width, and delay
SOURce:PULM:PERiod 10 us
SOURce:PULM:WIDth 8 us
SOURce:PULM:DOUBle:WIDTh 0.0000012
SOURce:PULM:DOUBle:DELay 0.0000045

// Route the signal to the signal valid output connector
// to use the signal for synchronizing the pulse modulation.
:SOURce:PULM:OUTPut:SYNC ON

// Activate the signal output
SOURce:PGENERator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1
```



The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PULM:MODE</a>	808
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRIGger:MODE</a>	808
<a href="#">[:SOURce]:PULM[:INTernal][:TRain]:TRIGger:IMMediate</a>	809
<a href="#">[:SOURce&lt;hw&gt;]:PULM:PERiod</a>	809
<a href="#">[:SOURce&lt;hw&gt;]:PULM:WIDTh</a>	809
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DELay</a>	809
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:DELay</a>	810
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:WIDTh</a>	810
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:STATe</a>	810
<a href="#">[:SOURce&lt;hw&gt;]:PULM:STATe</a>	810
<a href="#">[:SOURce&lt;hw&gt;]:PULM:SOURce</a>	810
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TTYPe</a>	811
<a href="#">[:SOURce&lt;hw&gt;]:PULM:OUTPut:SYNC[:STATe]</a>	811
<a href="#">[:SOURce&lt;hw&gt;]:PULM:POLarity</a>	811
<a href="#">[:SOURce&lt;hw&gt;]:PULM:IMPedance</a>	812

---

#### **`[:SOURce<hw>]:PULM:MODE <Mode>`**

Selects the mode for the pulse modulation.

##### **Parameters:**

<code>&lt;Mode&gt;</code>	SINGle   DOUBle   PTRain
<b>SINGle</b>	Generates a single pulse.
<b>DOUBle</b>	Generates two pulses within one pulse period.
<b>PTRain</b>	Generates a user-defined pulse train. Specify the pulse sequence with the commands: <a href="#">[:SOURce&lt;hw&gt;]:PULM:TRain:ONTime</a> <a href="#">[:SOURce&lt;hw&gt;]:PULM:TRain:OFFTime</a> <a href="#">[:SOURce&lt;hw&gt;]:PULM:TRain:REPetition</a> <b>*RST:</b> SINGle

**Example:** See [Example "Perform pulse modulation"](#) on page 807.

**Options:** PTRain requires R&S SMBVB-K27

**Manual operation:** See ["Pulse Mode"](#) on page 370

---

#### **`[:SOURce<hw>]:PULM:TRIGger:MODE <Mode>`**

Selects a trigger mode - auto, single, external, external single or external gated - for generating the modulation signal.

##### **Parameters:**

<code>&lt;Mode&gt;</code>	AUTO   EXTeRnal   EGATe   SINGle   ESINGle
<b>*RST:</b>	AUTO

**Example:** See [Example "Perform pulse modulation"](#) on page 807.



**Manual operation:** See ["Trigger Mode"](#) on page 372

---

### **[[:SOURce]:PULM[:INTERNAL][:TRAIN]:TRIGger:IMMediate**

If `[[:SOURce<hw>]:PULM:TRIGger:MODESINGle]`, triggers the pulse generator.

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["Execute Single Trigger"](#) on page 375

---

### **[[:SOURce<hw>]:PULM:PERiod <Period>**

Sets the period of the generated pulse, that means the repetition frequency of the internally generated modulation signal.

**Parameters:**

<Period>	float
	The minimum value depends on the installed options R&S SMBVB-K22 or R&S SMBVB-K23
Range:	20E-9 to 100
Increment:	5E-9
*RST:	10E-6

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["Pulse Period"](#) on page 374

---

### **[[:SOURce<hw>]:PULM:WIDTh <Width>**

Sets the width of the generated pulse, that means the pulse length. It must be at least 20ns less than the set pulse period.

**Parameters:**

<Width>	float
Range:	20E-9 to 100
Increment:	10E-9
*RST:	2E-6

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["Pulse Width"](#) on page 374

---

### **[[:SOURce<hw>]:PULM:DELay <Delay>**

Sets the pulse delay.

**Parameters:**

<Delay>	float
*RST:	1ms

**Example:** See [Example"Perform pulse modulation"](#) on page 807.



**Manual operation:** See ["Pulse Delay"](#) on page 375

---

**[ :SOURce<hw>]:PULM:DOUBle:DELay <Delay>**

Sets the delay from the start of the first pulse to the start of the second pulse.

**Parameters:**

<Delay> float  
\*RST: 1E-6

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["Double Pulse Delay"](#) on page 375

---

**[ :SOURce<hw>]:PULM:DOUBle:WIDTh <Width>**

Sets the width of the second pulse.

**Parameters:**

<Width> float  
Increment: 5E-9

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["Double Pulse Width"](#) on page 375

---

**[ :SOURce<hw>]:PULM:DOUBle:STATe <State>**

Provided for backward compatibility with former Rohde & Schwarz signal generators.

Works like the command [\[ :SOURce<hw>\]:PULM:MODEDOUBle](#).

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

---

**[ :SOURce<hw>]:PULM:STATe <State>**

Activates pulse modulation.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:** See ["State"](#) on page 363

---

**[ :SOURce<hw>]:PULM:SOURce <Source>**

Selects between the internal (pulse generator) or an external pulse signal for the modulation.



**Parameters:**

<Source>                    INTernal | EXTernal  
                               \*RST:            INTernal

**Example:**                See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:**    See ["Source"](#) on page 363

**[[:SOURce<hw>]:PULM:TTYPe <Source>**

Sets the transition mode for the pulse signal.

**Parameters:**

<Source>                    SMOothed | FAST  
                               **SMOothed**  
                               flattens the slew rate, resulting in longer rise/fall times.  
                               **FAST**  
                               enables fast transitions with shortest rise and fall times.  
                               \*RST:            FAST

**Example:**                See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:**    See ["Transition Type"](#) on page 363

**[[:SOURce<hw>]:PULM:OUTPut:SYNC[:STATe] <Sync>**

Routes the pulse modulation signal to the [Signal Valid] connector.

**Parameters:**

<Sync>                      1 | ON | 0 | OFF  
                               \*RST:            OFF

**Options:**                R&S SMBVB-K23 (Pulse Generator)

**Manual operation:**    See ["Pulse Sync Out"](#) on page 375

**[[:SOURce<hw>]:PULM:POLarity <Polarity>**

Sets the polarity of the externally applied modulation signal.

**Parameters:**

<Polarity>                   NORMal | INVerted  
                               **NORMal**  
                               Suppresses the RF signal during the pulse pause.  
                               **INVerted**  
                               Suppresses the RF signal during the pulse.  
                               \*RST:            NORMal

**Example:**                See [Example"Perform pulse modulation"](#) on page 807.

**Manual operation:**    See ["Polarity"](#) on page 383



---

**[[:SOURce<hw>]:PULM:IMPedance <Impedance>**

Sets the impedance for the external pulse trigger and pulse modulation input.

**Parameters:**

<Impedance>            G50 | G10K  
                          \*RST:        G10K

**Example:**            See [Example "Perform pulse modulation"](#) on page 807.

**Manual operation:**   See ["Impedance"](#) on page 383

**Pulse train settings**

Option: R&S SMBVB-K27

This section describes the commands for the pulse train modulation and the associated file handling.

See ["Pulse generator > pulse train settings"](#) on page 376

**Example: Generating a pulse train signal**

The following settings are required to perform pulse train modulation.



Always create and select pulse train data list first before you activate the pulse train mode.

Otherwise, an error is displayed

```
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Create a pulse train data list
// Select the directory
MMEM:CDIR '/var/user/'
SOURcel:PULM:TRain:CATalog?
// my_pt
// Create and/or select the pulse train data file
SOURcel:PULM:TRain:SElect "/var/user/pt"
// Enter the pulse train data
SOURce:PULM:TRain:ONTime 0.0001,0.00025,0.0001
SOURce:PULM:TRain:OFFTime 500us,500us,300us
SOURce:PULM:TRain:REPetition 2,0,3
// the second pulse is ignored

// Select pulse train mode
// Select the internal modulation generator and the pulse mode
SOURcel:PULM:SOURce INT
SOURcel:PULM:MODE PTR
```



```

SOURce1:PULM:TRIGger:MODE EXT
SOURce1:PGENerator:OUTPut:STATe 1
SOURce1:PGENerator:OUTPut:POLarity NORM
SOURce:PGENerator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1

// SOURce1:PULM:TRAIin:CATalog?
// my_pt, pt
// SOURce1:PULM:TRAIin:DEL "/var/user/my_pt"

```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:CATalog?</a>	813
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:DELe</a>	813
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:ONTime</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:OFFTime</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:REPetition:POINts?</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:ONTime:POINts?</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:OFFTime:POINts?</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:REPetition</a>	814
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAIin:SELe</a>	815

---

### **[\[:SOURce<hw>\]:PULM:TRAIin:CATalog?](#)**

Queries the available pulse train files in the specified directory.

#### **Return values:**

<Catalog>                      string  
                                  List of list filenames, separated by commas

**Example:**                      See [Example"Generating a pulse train signal"](#) on page 812.

**Usage:**                        Query only

**Manual operation:**    See ["Pulse Train Data"](#) on page 377

---

### **[\[:SOURce<hw>\]:PULM:TRAIin:DELe](#) <Filename>**

Deletes the specified pulse train file.

#### **Setting parameters:**

<Filename>                      string  
                                  Filename or complete file path; file extension is optional.

**Example:**                      See [Example"Generating a pulse train signal"](#) on page 812.

**Usage:**                        Setting only

**Manual operation:**    See ["Pulse Train Data"](#) on page 377  
                                  See ["Edit Pulse Train Data"](#) on page 378



---

**[ :SOURce<hw>]:PULM:TRAI:n:ONTime <OnTime>**

**[ :SOURce<hw>]:PULM:TRAI:n:OFFTime <OffTime>**

Enters the pulse on/off times values in the selected list.

**Parameters:**

<OffTime>                      Offtime#1{, Offtime#2, ...} | binary block data  
 List of comma-separated numeric values or binary block data, where:  
 The list of numbers can be of any length.  
 In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.  
 See :FORMat [ :DATA] on page 737 for details.  
 The maximum length is 2047 values.  
 Range:                      0 ns to 5 ms

**Example:**                      See [Example"Generating a pulse train signal"](#) on page 812.

**Manual operation:**        See ["Edit Pulse Train Data"](#) on page 378

---

**[ :SOURce<hw>]:PULM:TRAI:n:REPetition:POINts?**

**[ :SOURce<hw>]:PULM:TRAI:n:ONTime:POINts?**

**[ :SOURce<hw>]:PULM:TRAI:n:OFFTime:POINts?**

Queries the number of on and off time entries and repetitions in the selected list.

**Return values:**

<Points>                      integer  
 Range:                      0 to INT\_MAX  
 \*RST:                      0

**Example:**                      See [Example"Generating a pulse train signal"](#) on page 812.

**Usage:**                      Query only

---

**[ :SOURce<hw>]:PULM:TRAI:n:REPetition <Repetition>**

Sets the number of repetitions for each pulse on/off time value pair.

**Parameters:**

<Repetition>                      Repetition#1{, Repetition#2, ...}  
 0 = ignore value pair  
 Set "Repetition = 0" to skip a particular pulse without deleting the pulse on/off time value pair  
 Range:                      0 to 65535

**Example:**                      See [Example"Generating a pulse train signal"](#) on page 812.

**Manual operation:**        See ["Edit Pulse Train Data"](#) on page 378



**[SOURce<hw>]:PULM:TRAI:n:SElect <Filename>**

Selects or creates a data list in pulse train mode.

If the list with the selected name does not exist, a new list is created.

**Parameters:**

<Filename> string  
Filename or complete file path; file extension can be omitted.

**Example:** See [Example "Generating a pulse train signal"](#) on page 812.

**Manual operation:** See ["Pulse Train Data"](#) on page 377  
See ["File Name"](#) on page 382

**Pulse train data exchange**

Option: R&S SMBVB-K27

With the following commands, you can configure pulse trains in ASCII format and export or import them accordingly.

```
SOURce1:PULM:SOURce INT
SOURce1:PULM:MODE PTR
SOURce1:PULM:TRAI:n:SElect "/var/user/pt"
SOURce1:PULM:STATe 1

SOURce1:PULM:TRAI:n:DEXChange:MODE EXP
SOURce1:PULM:TRAI:n:DEXChange:AFILe:EXTension TXT
SOURce1:PULM:TRAI:n:DEXChange:AFILe:SEParator:DECimal DOT
SOURce1:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLumn SEM
SOURce1:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLumn COMM
SOURce1:PULM:TRAI:n:DEXChange:SElect "/var/user/pt.pulstrn"
SOURce1:PULM:TRAI:n:DEXChange:AFILe:SElect "/var/user/pt_script.txt"
SOURce1:PULM:TRAI:n:DEXChange:EXECute
```

The following commands are available:

<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:MODE</a>	815
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:AFILe:EXTension</a>	816
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:AFILe:SEParator:DECimal</a>	816
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLumn</a>	816
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:AFILe:CATalog?</a>	816
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:AFILe:SElect</a>	817
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:SElect</a>	817
<a href="#">[SOURce&lt;hw&gt;]:PULM:TRAI:n:DEXChange:EXECute</a>	817

**[SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE <Mode>**

Determines the import or export of a list.

Specify the source or destination file with the command [\[SOURce<hw>\]:PULM:TRAI:n:DEXChange:SElect](#).



**Parameters:**

<Mode>                   IMPort | EXPort  
                           \*RST:         IMPort

**Example:**               See ["Pulse train data exchange"](#) on page 815.

**Manual operation:**    See ["Mode"](#) on page 352

**[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:EXTension <Extension>**

Determines the extension of the ASCII file for import or export, or to query existing files.

**Parameters:**

<Extension>             TXT | CSV  
                           \*RST:         TXT

**Example:**               See ["Pulse train data exchange"](#) on page 815.

**Manual operation:**    See ["ASCII File Settings"](#) on page 352

**[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

**Parameters:**

<Decimal>               DOT | COMMa  
                           \*RST:         DOT

**Example:**               See ["Pulse train data exchange"](#) on page 815.

**Manual operation:**    See ["ASCII File Settings"](#) on page 352

**[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.

**Parameters:**

<Column>               TABulator | SEMicolon | COMMa | SPACe  
                           \*RST:         COMMa

**Example:**               See ["Pulse train data exchange"](#) on page 815.

**Manual operation:**    See ["ASCII File Settings"](#) on page 352

**[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:CATalog?**

Queries the available ASCII files in the current or specified directory.

**Return values:**

<Catalog>               string  
                           List of ASCII files \*.txt or \*.csv, separated by commas.



<b>Example:</b>	See <a href="#">"Pulse train data exchange"</a> on page 815.
<b>Usage:</b>	Query only
<b>Manual operation:</b>	See <a href="#">"Select (ASCII) Source/Select (ASCII) Destination"</a> on page 353

**[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SELeCt <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename>                      string  
 Filename or complete file path; file extension can be omitted.

<b>Example:</b>	See <a href="#">"Pulse train data exchange"</a> on page 815.
<b>Manual operation:</b>	See <a href="#">"Select (ASCII) Source/Select (ASCII) Destination"</a> on page 353

**[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:SELeCt <Filename>**

Selects the ASCII file for import or export, containing a pulse train list.

**Parameters:**

<Filename>                      string  
 Filename or complete file path; file extension can be omitted.

<b>Example:</b>	See <a href="#">"Pulse train data exchange"</a> on page 815.
<b>Manual operation:</b>	See <a href="#">"Select Source/Select ASCII Destination"</a> on page 353

**[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute**

**Usage:**                      Event

**Manual operation:**    See ["Import / Export"](#) on page 353

Executes the import or export of the selected list file, according to the transfer direction set with command [\[ :SOURce<hw>\]:PULM:TRAI:n:DEXChange:MODE](#).

### 13.17.4 SOURce:BB subsystem

This subsystem contains all commands for digital signal generation. It is divided into several subsystems which are described separately.

- [SOURce:BB subsystem general commands](#)..... 818
- [SOURce:BB:DM subsystem](#)..... 820
- [SOURce:BB:ARbitrary subsystem](#)..... 848
- [SOURce1:BB:MCCW subsystem](#)..... 898
- [SOURce:AWGN subsystem](#)..... 916



- [SOURce:BB:IMPairment subsystem](#).....923
- [SOURce:BB:GRAPhics subsystem](#)..... 928
- [SOURce:BB:PROGress subsystem general commands](#).....931

#### 13.17.4.1 SOURce:BB subsystem general commands

The following section describes the commands for setting the frequency shift and the phase offset for the signal at the output of the "Baseband" and "BB Input" blocks.

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:BBIN:FOFFset</a> .....	818
<a href="#">[:SOURce&lt;hw&gt;]:BB:FOFFset</a> .....	818
<a href="#">[:SOURce&lt;hw&gt;]:BBIN:POFFset</a> .....	818
<a href="#">[:SOURce&lt;hw&gt;]:BB:POFFset</a> .....	819
<a href="#">[:SOURce&lt;hw&gt;]:BB:ROUte</a> .....	819
<a href="#">[:SOURce&lt;hw&gt;]:BBIN:ROUte</a> .....	819
<a href="#">[:SOURce&lt;hw&gt;]:BB:POWer:PEAK?</a> .....	819
<a href="#">[:SOURce&lt;hw&gt;]:BB:CFACTOR?</a> .....	819
<a href="#">[:SOURce&lt;hw&gt;]:BB:POWer:RMS?</a> .....	820

---

**[\[:SOURce<hw>\]:BBIN:FOFFset <FOffset>](#)**

**[\[:SOURce<hw>\]:BB:FOFFset <FOffset>](#)**

Sets a frequency offset for the internal/external baseband signal. The offset affects the generated baseband signal.

**Parameters:**

<b>&lt;FOffset&gt;</b>	float
Range:	depends on the installed options
Increment:	0.01
*RST:	0
Default unit:	Hz
E.g.	-60 MHz to +60 MHz (base unit)

**Example:** `SOURce1:BB:FOFFset 2MHZ`

**Manual operation:** See "[Frequency Offset](#)" on page 265

---

**[\[:SOURce<hw>\]:BBIN:POFFset <POffset>](#)**

Sets the relative phase offset for the external baseband signal.

**Parameters:**

<b>&lt;POffset&gt;</b>	float
Range:	-999.99 to 999.99
Increment:	0.01
*RST:	0
Default unit:	DEG

**Example:** `SOURce1:BBIN:POFFset 0.5`

**Manual operation:** See "[Phase Offset](#)" on page 265



---

**[[:SOURce<hw>]:BB:POFFset <POffset>**

Sets the relative phase offset for the selected baseband signal.

**Parameters:**

<POffset>	float
Range:	0 to 359.9
Increment:	0.01
*RST:	0
Default unit:	DEG

**Example:** SOURce1:BB:POFFset 0.5DEG

**Manual operation:** See ["Phase Offset"](#) on page 265

---

**[[:SOURce<hw>]:BB:ROUTe <Route>****[[:SOURce<hw>]:BBIN:ROUTe <Route>**

Selects the signal route for the internal/external baseband signal.

**Parameters:**

<Route>	A
---------	---

**Example:** SOURce1:BBIN:ROUTe A

---

**[[:SOURce<hw>]:BB:POWer:PEAK?**

Queries the peak level of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

**Return values:**

<Peak>	float
Range:	-145 to 30
Increment:	0.01
*RST:	0
Default unit:	dBfs

**Example:** BB:POW:PEAK  
Queries the peak level of the baseband signal.

**Usage:** Query only

---

**[[:SOURce<hw>]:BB:CFACTOR?**

Queries the crest factor of the baseband signal.

**Return values:**

<CFactor>	float
Range:	0 to 100
Increment:	0.01
*RST:	0
Default unit:	dB



**Example:** `SOURce1:BB:CFACTOR?`  
Queries the crest factor of the baseband signal.

**Usage:** Query only

#### **[SOURce<hw>]:BB:POWER:RMS?**

Queries the RMS level of the baseband signal relative to full scale of 0.5V (in terms of dB full scale).

**Return values:**

<Rms> float  
Range: -145 to 30  
Increment: 0.01  
\*RST: 0  
Default unit: dBfs

**Example:** `BB:POW:RMS?`  
Queries the rms level of the baseband signal.

**Usage:** Query only

### **13.17.4.2 SOURce:BB:DM subsystem**

This section lists the commands of the `SOURce:BB:DM` subsystem. The commands are divided into sections, where the last one describes how to use lists for digital modulation in remote control, and all other sections describe the configuration of the digital modulation.

#### **Required options**

See [Chapter 4.5.1, "Required options"](#), on page 119

The commands are grouped in the following sections:

• <a href="#">Programming examples</a> .....	821
• <a href="#">General commands</a> .....	823
• <a href="#">Save/recall commands</a> .....	825
• <a href="#">Filter commands</a> .....	827
• <a href="#">Modulation and coding commands</a> .....	828
• <a href="#">Power ramping</a> .....	832
• <a href="#">Trigger commands</a> .....	834
• <a href="#">Marker commands</a> .....	839
• <a href="#">Clock commands</a> .....	841
• <a href="#">Handling list files</a> .....	842



## Programming examples

### Example: Performing general tasks

This example shows how to enable custom digital modulation with predefined settings as basis for further customization (e.g. adjusting the data source); intermediate results and configuration are stored with the save/recall function.

```
// *****
// Reset instrument first
// *****

*RST; *CLS

SOURCE1:BB:DM:PRESet
SOURCE1:BB:DM:STANDARD W3GPP
SOURCE1:BB:DM:SRATE?
// 3840000
SOURCE1:BB:DM:CODING?
// WCDMA
SOURCE1:BB:DM:FORMAT?
// QPSK45
SOURCE1:BB:DM:STATE ON
SOURCE1:BB:DM:SETTING:STORE "/var/user/ digMod/CustDM3GPP"

// *****
// Recall settings
// *****
MMEM:CDIR "/var/user/digMod"
SOURCE1:BB:DM:SETTING:CATALOG?
// CusDigMod, cdm3gpp, CustDM3GPP
SOURCE1:BB:DM:SETTING:DELETE "cdm3gpp"
SOURCE1:BB:DM:SETTING:LOAD "CusDigMod"

// *****
// Change the data source
// *****
SOURCE1:BB:DM:SOURCE?
// PRBS
SOURCE1:BB:DM:PRBS:LENGTH?
// 9
SOURCE1:BB:DM:SOURCE DLIST
// Set the default directory and query the existing data lists
MMEM:CDIR "/var/user/DLists"
SOURCE1:BB:DM:DLIST:CATALOG?
// "DList1","DList2"
// delete a list and create a new data list
SOURCE1:BB:DM:DLIST:DELETE "DList1"
SOURCE1:BB:DM:DLIST:SELECT "DList2"
// copy the content of an existing data list to the new data list
SOURCE1:BB:DM:DLIST:COPY "DList3"
// query the content of the new data list and modify it (append data to it)
FORM ASCII
```



```

SOURce1:BB:DM:DList:DATA? 2048,1024
// 1,1,0,0,0, ...
SOURce1:BB:DM:DList:DATA:APPend 1,1,1,0,0,0,1,1,0,1...
SOURce1:BB:DM:DList:SElect "DList3"
// query the free memory and number of bits to be utilized
SOURce1:BB:DM:DList:FREE?
SOURce1:BB:DM:DList:POINTs?

```

### Example: Adjusting clock, marker and trigger settings

The following example lists the provided commands

```

// *****
// Clock settings
// *****
SOURce1:BB:DM:CLOCK:SOURce INTernal

// *****
// Configure and enable standard marker signals
// *****
SOURce1:BB:DM:TRIGger:OUTPut2:MODE PULSe
SOURce1:BB:DM:TRIGger:OUTPut2:PULSe:DIVider 5
SOURce1:BB:DM:TRIGger:OUTPut2:PULSe:FREQuency?
SOURce1:BB:DM:TRIGger:OUTPut3:MODE PATtern
SOURce1:BB:DM:TRIGger:OUTPut3:PATtern #HE0F52,20
SOURce1:BB:DM:TRIGger:OUTPut1:MODE RATio
SOURce1:BB:DM:TRIGger:OUTPut1:ONTime 40
SOURce1:BB:DM:TRIGger:OUTPut1:OFFTime 20

SOURce1:BB:DM:TRIGger:OUTPut2:DElay 16

// *****
// Configure and enable signal generation
// *****
SOURce1:BB:DM:TRIGger:SEquence SINGLE
SOURce1:BB:DM:TRIGger:SLENGth 200
// the first 200 samples will be output after the next trigger event
SOURce1:BB:DM:TRIGger:SEquence ARETrigger
SOURce1:BB:DM:TRIGger:SOURce EGT1
// external trigger signal must be provided at the connector
// configured for the external global trigger 1 signal
SOURce1:BB:DM:TRIGger:EXTernal:SYNChronize:OUTPut ON
SOURce1:BB:DM:TRIGger:EXTernal:DElay 200
SOURce1:BB:DM:TRIGger:EXTernal:INHibit 100

// with internal trigger source
SOURce1:BB:DM:TRIGger:SEquence AAUTO
SOURce1:BB:DM:TRIGger:SOURce INTernal
SOURce1:BB:DM:STAT ON
SOURce1:BB:DM:TRIGger:EXEC

```



**Example: Enable power ramping**

The following example lists the provided commands

```
SOURce1:BB:DM:PRAMP:SOURce INTernal
SOURce1:BB:DM:PRAMP:SHAP COS
SOURce1:BB:DM:PRAMP:TIME 5
SOURce1:BB:DM:PRAMP:RDElay 0
SOURce1:BB:DM:PRAMP:FDElay -1
SOURce1:BB:DM:PRAMP:ATTenuation 10
SOURce1:BB:DM:PRAMP:BBONLY:STATe ON
SOURce1:BB:DM:PRAMP:STATe ON
```

**General commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:STATe</a>	823
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRESet</a>	823
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:SRATe</a>	823
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:STANdard</a>	824
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:SOURce</a>	824
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PATTern</a>	824
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRBS[:LENGth]</a>	825

**[\[:SOURce<hw>\]:BB:DM:STATe <State>](#)**

Enables/disables digital modulation. Switching on digital modulation turns off all the other digital standards in the same signal path.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Performing general tasks"](#) on page 821

**Manual operation:** See ["State"](#) on page 121

**[\[:SOURce<hw>\]:BB:DM:PRESet](#)**

Sets the default settings for digital modulation (\*RST values specified for the commands).

Not affected is the state set with the command `SOURce<hw>:BB:DM:STATe`

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Event

**Manual operation:** See ["Set To Default"](#) on page 121

**[\[:SOURce<hw>\]:BB:DM:SRATe <SRate>](#)**

Sets the symbol rate in Hz/kHz/MHz or sym/s, ksym/s and Msym/s.



**Parameters:**

<SRate> float  
 Range: 400 to depends on the installed options  
 Increment: 0.001  
 \*RST: 270833.333  
 Default unit: Hz or sym/s

**Example:** See [Example "Performing general tasks"](#) on page 821.

**Manual operation:** See ["Symbol Rate"](#) on page 122

**[ :SOURce<hw>]:BB:DM:STANDARD <Standard>**

Selects predefined set of settings according to the selected standard, see [Table 4-6](#).

**Parameters:**

<Standard> USER | BLUetooth | DECT | ETC | GSM | GSMEdge | NADC |  
 PDC | PHS | TETRa | W3GPp | TDSCdma | CFORward |  
 CREVerse | WORLdspace | TFTS | APCOPH1C4fm |  
 APCOPH1CQpsk | APCOPH2HCpm | APCOPH2HDQpsk |  
 APCOPH2HD8PSKW | APCOPH2HD8PSKN | APCOPH1Lsm |  
 APCOPH1Wcqpsk | CWBPsk | SOQPSKTG  
 A query returns the value `USER` if settings deviate from standard-compliant settings.  
 \*RST: GSM

**Example:** See [Example "Performing general tasks"](#) on page 821.

**Manual operation:** See ["Set according to Standard"](#) on page 121

**[ :SOURce<hw>]:BB:DM:SOURce <Source>**

Selects the data source.

**Parameters:**

<Source> ZERO | ONE | PRBS | PATtern | DLISt  
 A sequence of 0 or 1, a pseudo-random sequence with different length, a pattern, or a data list.  
 \*RST: PRBS

**Example:** See [Example "Performing general tasks"](#) on page 821

**Manual operation:** See ["Data Source"](#) on page 123

**[ :SOURce<hw>]:BB:DM:PATtern <Pattern>, <BitCount>**

Selects the data pattern for the internal data source.

**Parameters:**

<Pattern> numeric  
 \*RST: #H0



<BitCount> integer  
 Range: 1 to 64  
 \*RST: 1

**Example:** SOURce:BB:DM:SOURce PATT  
 SOURce:BB:DM:PATtern #B01110111010101010,17  
 Generates the user-defined sequence of 0/1 data.

**Manual operation:** See ["Data Source"](#) on page 123

**[SOURce<hw>]:BB:DM:PRBS[:LENGTH] <Length>**

Defines the length of the pseudo-random sequence in accordance with the following equation:

$$\text{Length} = (2^{\text{Length}}) - 1$$

**Parameters:**

<Length> 9 | 11 | 15 | 16 | 20 | 21 | 23 | PN9 | PN11 | PN15 | PN16 | PN20 |  
 PN21 | PN23  
 \*RST: 9

**Example:** See [Example "Performing general tasks"](#) on page 821

**Manual operation:** See ["Data Source"](#) on page 123

**Save/recall commands**

<a href="#">[SOURce&lt;hw&gt;]:BB:DM:STANdard:ULISt:CATalog?</a>	825
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:SETTing:CATalog?</a>	825
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:STANdard:ULISt:STORe</a>	826
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:SETTing:STORe</a>	826
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:STANdard:ULISt:LOAD</a>	826
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:SETTing:LOAD</a>	826
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:STANdard:ULISt:DELeTe</a>	826
<a href="#">[SOURce&lt;hw&gt;]:BB:DM:SETTing:DELeTe</a>	826

**[SOURce<hw>]:BB:DM:STANdard:ULISt:CATalog?**

**[SOURce<hw>]:BB:DM:SETTing:CATalog?**

Queries the files with digital modulation respectively user standard settings in the default directory. Listed are files with the file extension \*.dm and \*.dm\_stu.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

**Return values:**

<Catalog> "<filename1>,<filename2>,..."  
 Returns a string of file names separated by commas.

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Query only



**Manual operation:** See ["Save/Recall"](#) on page 121

---

```
[ :SOURce<hw>]:BB:DM:STANdard:ULISt:STORe <Filename>
[ :SOURce<hw>]:BB:DM:SETTing:STORe <Filename>
```

Stores the current settings into the selected file; the file extension (\* .dm respectively \* .dm\_stu) is assigned automatically.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

**Setting parameters:**

<Filename> string

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Setting only

**Manual operation:** See ["Save/Recall"](#) on page 121

---

```
[ :SOURce<hw>]:BB:DM:STANdard:ULISt:LOAD <Filename>
[ :SOURce<hw>]:BB:DM:SETTing:LOAD <Filename>
```

Loads the selected file from the default or the specified directory. Loaded are files with extension \* .dm respectively \* .dm\_stu.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

**Setting parameters:**

<Filename> string

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Setting only

**Manual operation:** See ["Save/Recall"](#) on page 121

---

```
[ :SOURce<hw>]:BB:DM:STANdard:ULISt:DELeTe <Filename>
[ :SOURce<hw>]:BB:DM:SETTing:DELeTe <Filename>
```

Deletes the selected file from the default or specified directory. Deleted are files with the file extension \* .dm respectively \* .dm\_stu.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

**Setting parameters:**

<Filename> string

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Setting only



**Manual operation:** See ["Save/Recall"](#) on page 121

### Filter commands

**[ :SOURce<hw>]:BB:DM:FILTER:TYPE <Type>**

Selects the filter type.

If you select a standard (:BB:DM:STAN), the firmware automatically sets the standard-compliant filter type and filter parameter.

**Parameters:**

<Type>                   RCOSine | COSine | GAUSSs | LGAuss | CONE | COF705 |  
COEQUALizer | COFEQUALizer | C2K3x | APCO25 | SPHase |  
RECTangle | USER | PGAuss | LPASSs | DIRac | ENPShape |  
EWPSHape | LTEFilter | LPASSEVM | APCO25Hcpm |  
APCO25Lsm | HRP | SOQPSK  
  
\*RST:                   GAUSSs

**Example:**               See [\[ :SOURce<hw>\]:BB:DM:FILTER:PARAMeter:SPHase](#)  
on page 827.

**Manual operation:** See ["Filter"](#) on page 128

**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25 <Apco25>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25Lsm:GAUSSs <Gauss>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:APCO25Lsm:LOWPass <FiltParm>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:COSine:BANDwidth <Bandwidth>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:COSine[:ROLLoff] <Cosine>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:GAUSSs <Gauss>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:LPASSs <LPass>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:LPASSEVM <LPassEvm>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:PGAuss <PGauss>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:RCOSine <RCosine>**  
**[ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:SPHase <SPHase>**

Sets the filter parameter.

Filter Type	Parameter	Parameter Name	Min	Max	Increment	Default
APCO25	Roll-off factor	<Apco25>	0.05	0.99	0.01	0.2
APCO25Lsm	Cut off frequency for the lowpass/gauss filter ( :LOWPass / :GAUSSs )	<Cosine>	400	25E6	1E-3	270833.333
COSine	Bandwidth	<FiltParm>	400	depends on the installed options <sup>1)</sup>	1E-3	270833.333
COSine	Roll-off factor	<Cosine>	0.05	1	0.01	0.35
GAUSSs	Roll-off factor	<Gauss>	0.15	100000	0.01	0.3
LPASSs	Cut-off frequency	<LPass>	0.05	2	0.01	0.5



Filter Type	Parameter	Parameter Name	Min	Max	Increment	Default
LPASSEVM	Cut-off frequency	<LPassEvm>	0.05	2	0.01	0.5
PGAuss	Roll-off factor	<PGAuss>	0.15	2.5	0.01	0.3
RCOSine	Roll-off factor	<RCosine>	0.05	1	0.001	0.35
SPHase	B x T	<SPHase>	0.15	2.5	0.01	2

<sup>\*)</sup>100E6 (base unit) / 200E6 (R&S SMBVB-K523) / 300E6 (R&S SMBVB-K524)

**Parameters:**

<SPHase> float  
 Range: 0.15 to 2.5  
 Increment: 0.01  
 \*RST: 2

**Example:**

SOURce:BB:DM:FILTER:TYPE SPHase  
 SOURce:BB:DM:FILTER:PARAMeter:SPHase 0.5

**Manual operation:** See "Filter Parameter" on page 128

---

**[ :SOURce<hw>]:DM:FILTER:PARAMeter <Parameter>**

Sets the filter parameter of the currently selected filter type.

To set the filter type, use command [ :SOURce<hw>]:BB:DM:FILTER:TYPE on page 827.

**Parameters:**

<Parameter> float  
 Range: 0.05 to 2.5  
 Increment: 0.01  
 \*RST: 0.35

**Example:**

See [ :SOURce<hw>]:BB:DM:FILTER:PARAMeter:SPHase on page 827

## Modulation and coding commands

---

**[ :SOURce<hw>]:BB:DM:CODing <Coding>**

Selects the modulation coding.

**Parameters:**

<Coding> OFF | DIFF | DPHS | DGRay | GRAY | GSM | NADC | PDC |  
 PHS | TETRa | APCO25 | PWT | TFTS | INMarsat | VDL |  
 EDGE | APCO25FSK | ICO | CDMA2000 | WCDMA |  
 APCO258PSK

**OFF**

The coding is automatically disabled if the selected modulation type is not possible with the coding that has been set



**DPHS**

Phase Difference

**DGRay**

Difference + Gray

\*RST: GSM

**Example:** See [Example "Performing general tasks"](#) on page 821**Manual operation:** See ["Coding"](#) on page 122**[ :SOURce<hw>]:BB:DM:FORMat <Format>**

Sets the modulation type.

When a standard is selected ( `[ :SOURce<hw>]:BB:DM:STANdard` ), the modulation type is set to the default value.**Parameters:**

<Format> ASK | BPSK | P2DBpsk | QPSK | QPSK45 | OQPSk | P4QPSk | P4DQpsk | PSK8 | P8D8psk | P8EDge | QAM16 | QAM32 | QAM64 | QAM256 | QAM1024 | MSK | FSK2 | FSK4 | USER | FSKVar | QAM128 | QEDGe | QAM16EDge | QAM32EDge | AQPSk | QAM4096 | APSK16 | APSK32 | FSK32 | FSK64 | FSK8 | FSK16 | QAM512 | QAM2048

\*RST: MSK

**Example:** See [Example "Performing general tasks"](#) on page 821**Manual operation:** See ["Modulation Type"](#) on page 126**[ :SOURce<hw>]:BB:DM:AQPSk:ANGLE <Angle>**

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

**Parameters:**

<Angle> float

Range: 0 to 180

Increment: 0.01

\*RST: 0

Default unit: Deg

**Example:** BB:DM:FORM AQPS  
BB:DM:AQPS:ANGL 45

**Manual operation:** See ["Angle Alpha"](#) on page 126**[ :SOURce<hw>]:BB:DM:ASK:DEPTH <Depth>**

Sets the ASK modulation depth for modulation type ASK.



**Parameters:**

<Depth> float  
 Range: 0 to 100  
 Increment: 0.1  
 \*RST: 100  
 Default unit: PCT

**Example:**

BB:DM:FORM ASK  
 BB:DM:ASK:DEPT 50 PCT

**Manual operation:** See ["ASK Depth"](#) on page 126

**[[:SOURce<hw>]:BB:DM:FSK:DEVIation <Deviation>**

Sets the frequency deviation when FSK modulation is selected.

**Parameters:**

<Deviation> float  
 The value range depends on the symbol rate.  
 Range: 1 to 40E6  
 Increment: 0.5  
 \*RST: 135416.5

**Example:**

SOURce:BB:DM:FORMat FSK4  
 SOURce:BB:DM:FSK:DEVIation 1MHZ

**Manual operation:** See ["FSK Deviation"](#) on page 126

**[[:SOURce<hw>]:BB:DM:FSK:VARiable:SYMBol<ch0>:DEVIation <Deviation>**

Sets the deviation of the selected symbol for variable FSK modulation mode.

**Parameters:**

<Deviation> float  
 The value range depends on the selected symbol rate (see data sheet).  
 Range: -40E6 to 40E6  
 Increment: 0.5  
 Default unit: Hz

**Example:**

SOURce:BB:DM:FORMat FSKVar  
 SOURce:BB:DM:FSK:VARiable:TYPE FSK4  
 SOURce:BB:DM:FSK:VARiable:SYMBol0:DEVIation 135000

**Manual operation:** See ["Deviation xxxx"](#) on page 127

**[[:SOURce<hw>]:BB:DM:FSK:VARiable:TYPE <Type>**

The command selects the modulation type for Variable FSK.



**Parameters:**

<Type> FSK4 | FSK8 | FSK16  
 \*RST: FSK4

**Example:**

See [:SOURce<hw>]:BB:DM:FSK:VARiable:  
 SYMBol<ch0>:DEViAtion on page 830

**Manual operation:** See "FSK Type" on page 127

**[[:SOURce<hw>]:BB:DM:APSK16:GAMMa <Gamma>**

Sets the gamma function  $\gamma$  for the 16APSK modulation.

**Parameters:**

<Gamma> G2D3 | G3D4 | G4D5 | G5D6 | G8D9 | G9D10  
 GxDy: G = Gamma function, x $\gamma$  = code rate  
 \*RST: G2D3

**Example:**

SOURce1:BB:DM:FORMat APSK16  
 SOURce1:BB:DM:APSK16:GAMMa G9D10

**Manual operation:** See "Gamma/Gamma 1" on page 127

**[[:SOURce<hw>]:BB:DM:APSK32:GAMMa <Gamma>**

Sets the gamma function  $\gamma$  for the 32APSK modulation.

**Parameters:**

<Gamma> G3D4 | G4D5 | G5D6 | G8D9 | G9D10  
 GxDy: G = Gamma function, x $\gamma$  = code rate  
 \*RST: G3D4

**Example:**

SOURce1:BB:DM:FORMat APSK32  
 SOURce1:BB:DM:APSK32:GAMMa G9D10

**Manual operation:** See "Gamma/Gamma 1" on page 127

**[[:SOURce<hw>]:BB:DM:SWITChing:STATe <State>**

Enables switching between a modulated and an unmodulated signal.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

SOURce1:BB:DM:SWITChing:STATe ON

**Manual operation:** See "State Modulation CW Switching" on page 127



**Power ramping**

<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:SOURce</a> .....	832
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:SHAPE</a> .....	832
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:TIME</a> .....	832
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:FDElay</a> .....	833
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:RDElay</a> .....	833
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:ATTenuation</a> .....	833
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP:BBONLY[:STATe]</a> .....	833
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:PRAMP[:STATe]</a> .....	833

**[\[:SOURce<hw>\]:BB:DM:PRAMP:SOURce](#) <Source>**

Sets the source for the power ramp control signals.

**Parameters:**

<Source>                      INTernal  
                                   \*RST:            INTernal

**Example:**                    See [Example"Enable power ramping"](#) on page 823

**Manual operation:**    See ["Source"](#) on page 131

**[\[:SOURce<hw>\]:BB:DM:PRAMP:SHAPE](#) <Shape>**

Sets the edge shape of the ramp envelope.

**Parameters:**

<Shape>                      LINear | COSine  
                                   \*RST:            COSine

**Example:**                    See [Example"Enable power ramping"](#) on page 823

**Manual operation:**    See ["Ramp Function"](#) on page 131

**[\[:SOURce<hw>\]:BB:DM:PRAMP:TIME](#) <Time>**

Sets the power ramping rise time and fall time for a burst.

**Parameters:**

<Time>                        float  
                                   Range:          0.25 to 16  
                                   Increment:    0.01  
                                   \*RST:          1  
                                   Default unit: symbol

**Example:**                    See [Example"Enable power ramping"](#) on page 823

**Manual operation:**    See ["Ramp Time"](#) on page 131



---

**[[:SOURce<hw>]:BB:DM:PRAMP:FDElay <FDelay>**

**[[:SOURce<hw>]:BB:DM:PRAMP:RDElay <RDElay>**

Sets the delay in the rising edge.

**Parameters:**

<RDElay> float  
 Range: 0 to 4  
 Increment: 0.01  
 \*RST: 0  
 Default unit: symbol

**Example:** See [Example"Enable power ramping"](#) on page 823

**Manual operation:** See ["Rise Delay"](#) on page 131

---

**[[:SOURce<hw>]:BB:DM:PRAMP:ATTenuation <Attenuation>**

Sets the level attenuation for signal ranges that are flagged with level attribute *attenuated* by the control signal.

**Parameters:**

<Attenuation> float  
 Range: 0 to 50  
 Increment: 0.1  
 \*RST: 15  
 Default unit: dB

**Example:** See [Example"Enable power ramping"](#) on page 823

**Manual operation:** See ["Attenuation"](#) on page 132

---

**[[:SOURce<hw>]:BB:DM:PRAMP:BBONLY[:STATe] <State>**

Enables power ramping in the baseband only or mixed power ramping in the baseband and the RF section.

The ON setting is mandatory if, with power ramping active, only the baseband signal is output (I/Q outputs).

Only then can a signal with a defined, predictable level be output.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Enable power ramping"](#) on page 823.

**Manual operation:** See ["In Baseband Only"](#) on page 132

---

**[[:SOURce<hw>]:BB:DM:PRAMP[:STATe] <State>**

Enables or disables power ramping.



**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example "Enable power ramping"](#) on page 823

**Manual operation:** See ["State"](#) on page 131

**Trigger commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:DM[:TRIGger]:SEQUence</a> .....	834
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:SOURce</a> .....	834
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:SLENgth</a> .....	835
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:RMODE?</a> .....	835
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:TIME:DATE</a> .....	835
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:TIME:TIME</a> .....	836
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:TIME[:STATe]</a> .....	836
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:EXTErnal:SYNChronize:OUTPut</a> .....	837
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:ARM:EXECute</a> .....	837
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:EXECute</a> .....	837
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:DELAy:UNIT</a> .....	837
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger[:EXTErnal]:DELAy</a> .....	838
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger[:EXTErnal]:TDELAy</a> .....	838
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger[:EXTErnal]:RDELAy?</a> .....	838
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger[:EXTErnal]:INHibit</a> .....	839

**[\[:SOURce<hw>\]:BB:DM\[:TRIGger\]:SEQUence](#) <Sequence>**

Selects the trigger mode. For detailed description of the trigger modes, refer to ["Impact of the trigger modes on the signal generation"](#) on page 94.

**Parameters:**

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGLE  
 \*RST: AUTO

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Mode"](#) on page 109

**[\[:SOURce<hw>\]:BB:DM:TRIGger:SOURce](#) <Source>**

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTernAl)
- External trigger signal via one of the User x connectors  
 EGT1: External global trigger
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- EXTErnAl: Setting only



Provided only for backward compatibility with other Rohde & Schwarz signal generators.

The R&S SMBV100B accepts this value and maps it automatically as follows:

EXTernal = EGT1

**Parameters:**

<Source> INTernal|EGT1|EXTernal|BBSY  
\*RST: INTernal

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Source"](#) on page 110

**[ :SOURce<hw> ]:BB:DM:TRIGger:SLENgth <SLength>**

Defines the length of the signal sequence to be output in the SINGLE trigger mode.

**Parameters:**

<SLength> integer  
Range: 1 to 4294967295  
\*RST: 1000  
Default unit: symbol

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Signal Duration"](#) on page 112

**[ :SOURce<hw> ]:BB:DM:TRIGger:RMODE?**

Queries the status of signal generation.

**Return values:**

<RMode> STOP | RUN

**Example:**  
SOURce1:BB:DM:TRIGger:SOURce ELTRigger  
SOURce1:BB:DM:TRIGger:SEQuence ARETrigger  
SOURce1:BB:DM:TRIGger:RMODE?  
Response: RUN

**Usage:** Query only

**Manual operation:** See ["Running/Stopped"](#) on page 109

**[ :SOURce<hw> ]:BB:DM:TRIGger:TIME:DATE <Year>, <Month>, <Day>**

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.



**Parameters:**

<Year>	integer
	Range: 1980 to 9999
<Month>	integer
	Range: 1 to 12
<Day>	integer
	Range: 1 to 31

**Example:** See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110

**[[:SOURce<hw>]:BB:DM:TRIGger:TIME:TIME <Hour>, <Minute>, <Second>**

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATE

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<Hour>	integer
	Range: 0 to 23
<Minute>	integer
	Range: 0 to 59
<Second>	integer
	Range: 0 to 59

**Example:** See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110

**[[:SOURce<hw>]:BB:DM:TRIGger:TIME[:STATE] <TimeTrigState>**

Activates time-based triggering with a fixed time reference. If activated, the R&S SMBV100B triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.



**Parameters:**

<TimeTrigState> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Time Based Trigger"](#) on page 109

**[ :SOURce<hw>]:BB:DM:TRIGger:EXTErnal:SYNChronize:OUTPut <Output>**

Enables signal output synchronous to the trigger event.

**Parameters:**

<Output> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example"Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 111

**[ :SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute**

Stops signal generation; a subsequent internal or external trigger event restart signal generation.

**Example:** See also [Example"Adjusting clock, marker and trigger settings"](#) on page 822

**Usage:** Event

**Manual operation:** See ["Arm"](#) on page 110

**[ :SOURce<hw>]:BB:DM:TRIGger:EXECute**

Executes a trigger.

**Example:** See [Example"Adjusting clock, marker and trigger settings"](#) on page 822

**Usage:** Event

**Manual operation:** See ["Execute Trigger"](#) on page 110

**[ :SOURce<hw>]:BB:DM:TRIGger:DELaY:UNIT <TrigDelUnit>**

Determines the units the trigger delay is expressed in.

**Parameters:**

<TrigDelUnit> SAMPlE | TIME  
 \*RST: SAMPlE



**Example:** See [Example "To specify delay and inhibit values in time units"](#) on page 850

**Manual operation:** See ["\(External\) Delay Unit"](#) on page 111

**[ :SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:DELay <Delay>**

Specifies the trigger delay in symbols.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<Delay> float  
 Range: 0 to depends on the symbol rate  
 Increment: 0.01  
 \*RST: 0  
 Default unit: symbol

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822.

**Manual operation:** See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 112

**[ :SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:TDELay <ExtTimeDelay>**

Specifies the trigger delay for external triggering. The value affects all external trigger signals.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<ExtTimeDelay> float  
 Range: 0 to 7929.170398682  
 Increment: 0.25E-9  
 \*RST: 0  
 Default unit: s

**Example:** See [Example "To specify delay and inhibit values in time units"](#) on page 850.

**Manual operation:** See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 112

**[ :SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:RDELay?**

Queries the time (in seconds) an external trigger event is delayed for.



**Return values:**

&lt;ResTimeDelaySec&gt; float

Range: 0 to 688

Increment: 0.25E-9

\*RST: 0

**Example:**See [Example "To specify delay and inhibit values in time units"](#) on page 850**Usage:**

Query only

**Manual operation:**See ["Actual Trigger Delay/Actual External Delay"](#) on page 112**[[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:INHibit <Inhibit>**

Specifies the number of symbols, by which a restart is inhibited.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.**Parameters:**

&lt;Inhibit&gt;

integer

Range: 0 to 21.47 \* (symbol rate)

\*RST: 0

Default unit: symbol

**Example:**See [Example "Adjusting clock, marker and trigger settings"](#) on page 822.**Manual operation:**See ["External Inhibit/Trigger Inhibit"](#) on page 111**Marker commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:MODE</a>	839
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:ONTime</a>	840
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:OFFTime</a>	840
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:PATtern</a>	840
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:PULSe:DIVider</a>	840
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:PULSe:FREQuency?</a>	841
<a href="#">[:SOURce&lt;hw&gt;]:BB:DM:TRIGger:OUTPut&lt;ch&gt;:DELay</a>	841

**[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE <Mode>**

Defines the signal for the selected marker output.

For detailed description of the regular marker modes, refer to ["Marker modes"](#) on page 91.



**Parameters:****<Mode>** CLISt | PULSe | PATTeRn | RATio**CLISt**

A marker signal that is defined in the selected control list is generated.

\*RST: RATio

**Example:**

See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Mode"](#) on page 113

**[ :SOURce<hw> ]:BB:DM:TRIGger:OUTPut<ch>:ONTime <OnTime>**

**[ :SOURce<hw> ]:BB:DM:TRIGger:OUTPut<ch>:OFFTime <OffTime>**

Sets the number of symbols in a period (ON time + OFF time) for marker RATio.

**Parameters:****<OffTime>** integer

Range: 1 to 16777215

\*RST: 1

Default unit: symbol

**Example:**

See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Mode"](#) on page 113

**[ :SOURce<hw> ]:BB:DM:TRIGger:OUTPut<ch>:PATTeRn <Pattern>, <BitCount>**

Defines the bit pattern used to generate the marker signal.

**Parameters:****<Pattern>** numeric

\*RST: #H2

**<BitCount>**

integer

0 = marker off, 1 = marker on

Range: 1 to 64

\*RST: 2

**Example:**

See [Example "Adjusting clock, marker and trigger settings"](#) on page 822.

**Manual operation:** See ["Mode"](#) on page 113

**[ :SOURce<hw> ]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>**

Sets the divider for pulse marker mode (PULSe).



**Parameters:**

<Divider> integer  
 Range: 2 to 1024  
 \*RST: 2

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Manual operation:** See ["Mode"](#) on page 113

**[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?**

Queries the pulse frequency of the pulsed marker signal PULSe.

**Return values:**

<Frequency> float

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822

**Usage:** Query only

**Manual operation:** See ["Mode"](#) on page 113

**[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay <Delay>**

Defines the delay between the signal on the marker outputs and the start of the signal, expressed in terms of symbols.

**Parameters:**

<Delay> float  
 Range: 0 to 16777215  
 Increment: 1  
 \*RST: 0

**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822.

**Manual operation:** See ["Delay"](#) on page 114

**Clock commands**

[\[SOURce<hw>\]:BB:DM:CLOCK:SOURce.....](#) 841

**[SOURce<hw>]:BB:DM:CLOCK:SOURce <Source>**

Selects the clock source:

- INTernal: Internal clock reference

**Parameters:**

<Source> INTernal  
 \*RST: INTernal



**Example:** See [Example "Adjusting clock, marker and trigger settings"](#) on page 822.

**Manual operation:** See ["Clock Source"](#) on page 115

### Handling list files

```
[ :SOURce<hw>]:BB:DM:CLIST:CATalog?
[ :SOURce<hw>]:BB:DM:FLIST:CATalog?
[ :SOURce<hw>]:BB:DM:MLIST:CATalog?
[ :SOURce<hw>]:BB:DM:DLIST:CATalog?
```

Reads out the list files present in the default directory (see [:MMEMory:CDIRectory](#)).

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

#### Return values:

<Catalog> "<filename1>,<filename2>,..."  
Returns a string of file names separated by commas.

**Example:** See [Example "Performing general tasks"](#) on page 821.

**Usage:** Query only

**Manual operation:** See ["Data Source"](#) on page 123  
See ["Select Data List"](#) on page 124  
See ["Directory, File List and Filename"](#) on page 520

```
[ :SOURce<hw>]:BB:DM:CLIST:SElect <Filename>
[ :SOURce<hw>]:BB:DM:FLIST:SElect <Filename>
[ :SOURce<hw>]:BB:DM:MLIST:SElect <Filename>
[ :SOURce<hw>]:BB:DM:DLIST:SElect <Select>
```

Selects the specified list file from the default directory (see [:MMEMory:CDIRectory](#)) or in the directory specified with the complete file path.

If a list with the specified name does not yet exist, it is created. The file extension can be omitted.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.



List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User standard	...:ULIST...	*.dm_stu
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

**Parameters:**

&lt;Select&gt;                      &lt;list name&gt;

**Example:**                      See [Example"Performing general tasks"](#) on page 821

**Manual operation:**    See ["Data Source"](#) on page 123  
                               See ["Select Data List"](#) on page 124  
                               See ["Functions for handling of data lists"](#) on page 527

[:SOURce&lt;hw&gt;]:BB:DM:CLIST:DELeTe &lt;Filename&gt;

[:SOURce&lt;hw&gt;]:BB:DM:FLIST:DELeTe &lt;Filename&gt;

[:SOURce&lt;hw&gt;]:BB:DM:MLIST:DELeTe &lt;Filename&gt;

[:SOURce&lt;hw&gt;]:BB:DM:DLIST:DELeTe &lt;Filename&gt;

Deletes the specified list from the default directory (see [:MMEMory:CDIRectory](#)) or from the directory specified with the complete file path.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User standard	...:ULIST...	*.dm_stu
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

**Setting parameters:**

&lt;Filename&gt;                      string

**Example:**                      See [Example"Performing general tasks"](#) on page 821**Usage:**                        Setting only**Manual operation:**    See ["Select Data List"](#) on page 124

[:SOURce&lt;hw&gt;]:BB:DM:CLIST:FREE?

[:SOURce&lt;hw&gt;]:BB:DM:FLIST:FREE?



**[[:SOURce<hw>]:BB:DM:MLIST:FREE?**

**[[:SOURce<hw>]:BB:DM:DLIST:FREE?**

Queries the list free memory.

List type	Command	File extension
Data list	...:DLIST...	*.dm_iqd
Control list	...:CLIST...	*.dm_iqc
User filter files	...:FLIST...	*.vaf
User mapping lists	...:MLIST...	*.vam

**Return values:**

<Free> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Query only

**[[:SOURce<hw>]:BB:DM:CLIST:POINTS?**

Queries the number of lines (2 bytes) in the currently selected list.

**Return values:**

<Points> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:**

```
SOURce:BB:DM:CLIST:SElect "c_list"
SOURce:BB:DM:CLIST:POINTS?
// 20
// the control list consists of 20 lines
```

**Usage:** Query only

**[[:SOURce<hw>]:BB:DM:DLIST:POINTS <Points>**

Defines the number of bits in the selected data list to be utilized. When a list is being filled with block data, this data is only ever sent in multiples of 8 bits. However the exact number of bits to be exploited can be set to a different figure. The superfluous bits in the list are then ignored.

**Parameters:**

<Points> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0



**Example:** `SOURce:BB:DM:DLIST:POINTS 234`  
 Defines the number of bits in the data list to be utilized as 234 bits. If the list was filled with block data, at least the last 6 bits are ignored.

---

**[SOURce<hw>]:BB:DM:FLIST:POINTS?**

**[SOURce<hw>]:BB:DM:MLIST:POINTS?**

Queries the user modulation mapping/user filter list length.

**Return values:**

<Points>                    integer  
                               Range:        max  
                               \*RST:        0

**Example:** `BB:DM:FORM USER`  
`BB:DM:MLIS:POIN?`

**Usage:**                    Query only

---

**[SOURce<hw>]:BB:DM:CLIST:COPY <Filename>**

**[SOURce<hw>]:BB:DM:DLIST:COPY <Filename>**

Copies the selected data list (\* .dm\_iqd)/ control list (\* .dm\_iqc) as a new list with name specified by <Filename>. If a list with the specified name exists, it is overwritten. If it does not yet exist, it is created.

The source file has to be available in the default directory (see [:MMEMory:CDIRectory](#)).

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and a specific directory.

**Setting parameters:**

<Filename>                    string

**Example:**                    See [Example "Performing general tasks"](#) on page 821

**Usage:**                    Setting only

**Manual operation:**        See ["Select Data List"](#) on page 124

---

**[SOURce<hw>]:BB:DM:CLIST:DATA <Data>**

Sends the data to the currently selected control list. If the list already contains data, it is *overwritten*. This command only writes data into the data section of the file.

The values for the control signals are sent, arranged in an 8-bit value as defined in [Table 13-1](#).



Table 13-1: Contents of a control lists

Signal	Order	Decimal value of bits
Marker 1	LSB	1
Marker 2		2
Marker 3		4
Burst	LSB	16
LevAtt1	LSB	32
CWMod	LSB	64
Hop	MSB	128

The data can also be sent as a binary block, each binary block being a 2-byte value in which the 16 bits represent the binary values (16-bit unsigned integer, 2 bytes, LSB first).

When binary data transmission is in use, use the command `:SYSTEM:COMMunicate:GPIB:LTERminator EOI` to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command `...LTER STAN` resets the mode.

According to the specifications, the byte sequence is defined as 'most significant byte first'.

**Tip:** Control lists are created in binary format. You may however need the control list in an ASCII format, e.g for creating a waveform file with R&S WinIQSIM2. Refer to the examples in [Chapter 4.6.4.7, "Creating control lists with tag file format"](#), on page 179 for description on how to create a control list file in ASCII format manually.

\*RST has no effect on data lists.

#### Setting parameters:

<Data> string

#### Example:

```
:MMEMory:CDirectory "/var/user/clists"
:SOURce1:BB:DM:CLIST:SElect "clist_marker3"
:SOURce1:BB:DM:CLIST:DATA 0,0,0,0,4,4,4,0,0,0,0...
// Enters the control values in the selected list.
// In the example, only ramps for Marker 3 are set.
```

**Usage:** Setting only

**Manual operation:** See ["Select Ramp to Edit"](#) on page 136

---

**[ :SOURce<hw> ]:BB:DM:DLIST:DATA <Data>**

**[ :SOURce<hw> ]:BB:DM:DLIST:DATA? [<Start>[, <Count>]]**

The **Setting** command sends the bit data to the selected data list. Any existing content in the list is *overwritten*. This command only writes data into the data section of the file.

Data can be sent as block data in binary or packet format (`:FORMat ASCii | PACKed`), each byte being interpreted as 8 data bits.



When binary data transmission is in use, use the command `:SYSTem:COMMunicate:GPIB:LTERminator EOI` to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command `...LTER STAN` resets the mode.

According to the specifications, the byte sequence is defined as 'most significant byte first'.

The **query** reads out the data part of the list file. If the query is expanded by using the two parameters `<Start>` and `<Count>`, the list is read out in smaller sections. Without the parameters the total length is always read out starting from address 1.

\*RST has no effect on data lists.

**Parameters:**

`<Data>` integer  
bit data

**Query parameters:**

`<Start>` integer  
Range: 1 to 2147483647  
`<Count>` integer  
Range: 1 to 2147483647

**Example:** See [Example "Performing general tasks"](#) on page 821

---

**`[ :SOURce<hw>]:BB:DM:DLIST:DATA:APPend <Bits>`**

Appends the bit data onto the end of the existing data in the selected data list. Existing content in the data list is not overwritten. Hence, you can create long data lists piece-meal.

The command cannot be used with an empty data list, like for example data lists that has just been created. Use the command `[ :SOURce<hw>]:BB:DM:DLIST:DATA` first and enter modulation data in the list.

\*RST has no effect on data lists.

**Setting parameters:**

`<Bits>` 0 | 1 {,0 | 1 } | block data

**Example:** See [Example "Performing general tasks"](#) on page 821

**Usage:** Setting only

---

**`[ :SOURce<hw>]:BB:DM:CLIST:TAG?`**

**`[ :SOURce<hw>]:BB:DM:DLIST:TAG?`**

Queries the content of the specified tag in the selected file.



**Return values:**

<Tag> <control list>,<tag name>  
 Refer to [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182 for description of the available tag formats.

**Example:**

SOURce1:BB:DM:DLIST:TAG? "D\_list","date"  
 Queries the Date tag in list D\_list.

**Usage:**

Query only

**13.17.4.3 SOURce:BB:ARbitrary subsystem**

This section list the commands of the SOURce:BB:ARbitrary subsystem.

**Required options**

See [Chapter 4.6.1, "Required options"](#), on page 152.

The commands are grouped in the following sections:

• <a href="#">Programming examples</a> .....	848
• <a href="#">General commands</a> .....	857
• <a href="#">Test signal commands</a> .....	858
• <a href="#">Waveform commands</a> .....	862
• <a href="#">Multi-segment commands</a> .....	866
• <a href="#">Multi-segment sequencing commands</a> .....	871
• <a href="#">Multicarrier commands</a> .....	874
• <a href="#">Notch filter commands</a> .....	885
• <a href="#">Trigger commands</a> .....	889
• <a href="#">Marker commands</a> .....	895
• <a href="#">Clock commands</a> .....	898

**Programming examples****Example: Creating test signals**

The following example lists commands necessary to configure the different test signals.

```
// *****
// Reset instrument first
// *****
*RST; *CLS
SOURce1:BB:ARbitrary:PRESet

// *****
// Create test signals
// *****
SOURce1:BB:ARbitrary:SIGNAL:TYPE CIQ
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:I -0.5
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:Q -0.33
SOURce1:BB:ARbitrary:TSIGNAL:CIQ:CREate
```



```

SOURCE1:BB:ARbitrary:TSIGnal:SINE:FREQuency 1MHz
SOURCE1:BB:ARbitrary:TSIGnal:SINE:SAMPles 100
SOURCE1:BB:ARbitrary:TSIGnal:SINE:PHASe -90
SOURCE1:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed "/var/user/ARBtestSignals/sineTest"

SOURCE1:BB:ARbitrary:TSIGnal:RECTangle:FREQuency 100KHz
SOURCE1:BB:ARbitrary:TSIGnal:RECTangle:SAMPles 1000
SOURCE1:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude 0.5
SOURCE1:BB:ARbitrary:TSIGnal:RECTangle:OFFSet -0.3
SOURCE1:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed "/var/user/ARBtestSignals/rectTest"

SOURCE1:BB:ARbitrary:STATe ON

```

### Example: Managing waveform files

The following example lists the commands provided for handling of waveform files.

```

// *****
// Reset instrument first
// *****
*RST; *CLS
SOURCE1:BB:ARbitrary:PRESet

// *****
// Set the default directory and list the available waveform files
// *****
MMEM:CDIR "/var/user/ARBtestSigs"
SOURCE1:BB:ARbitrary:WAVEform:CATalog?
// sineTest,rectTest,ciqTestSignal,waveformTest,test2
SOURCE1:BB:ARbitrary:WAVEform:CATalog:LENGth?
// Response is the number of files: "5"
// Optionally query free disk space.
SOURCE1:BB:ARbitrary:WAVEform:FREE?

// *****
// Select a waveform and query information
// *****
SOURCE1:BB:ARbitrary:WAVEform:DELeTe "/var/user/ARBtestSigs/test2"
SOURCE1:BB:ARbitrary:WAVEform:SELeCt "/var/user/ARBtestSigs/wvTest"
SOURCE1:BB:ARbitrary:WAVEform:POINTs?
// 100
SOURCE1:BB:ARbitrary:WAVEform:TAG? "TYPE"
// "SMU-WV"
SOURCE1:BB:ARbitrary:WAVEform:TAG? "COMMENT"
// "Waveform for test purposes"
// alternatively: query the comment tag of the current waveform file
SOURCE1:BB:ARbitrary:WAVEform:DATA?
// Response is the comment: "Waveform for test purposes"
// Query the date tag of a specific waveform file.
SOURCE1:BB:ARbitrary:WAVEform:DATA? "/var/user/ARBtestSigs/waveformTest","date"
// Response: #2192014-04-15;16:19:30

```



```

// *****
// Clock settings
// *****
SOURcel:BB:ARbitrary:CLOCK:SOURce INTernal
SOURcel:BB:ARbitrary:CLOCK?
// Response in Hz: "100000000"
// Or alternatively use the following tag:
SOURcel:BB:ARbitrary:WAVEform:TAG? "CLOCK"

// *****
// Configure and enable standard marker signals
// *****
// Configure marker 1.
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:MODE REStart
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:MODE RATio
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:ONTime 40
SOURcel:BB:ARbitrary:TRIGger:OUTPut1:OFFTime 20
// Configure marker 2.
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:MODE PULSe
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PULSe:DIVider 5
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PULSe:FREQuency?
// Response in Hz: "20000000"
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:DELay 16
// Specify a pattern for marker 2.
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:MODE PATtern
SOURcel:BB:ARbitrary:TRIGger:OUTPut2:PATtern #HE0F52,20

// *****
// Configure and enable signal triggering
// *****
SOURcel:BB:ARbitrary:TRIGger:SEQuence SINGLE
SOURcel:BB:ARbitrary:TRIGger:SLENgth 200
// the first 200 samples of the current waveform will be output after
// the next trigger event
// SOURcel:BB:ARbitrary:TRIGger:SEQuence ARETrigger
// SOURcel:BB:ARbitrary:TRIGger:SOURce EGT1
// external trigger signal must be provided at the USER connector
SOURcel:BB:ARbitrary:TRIGger:EXTernal:SYNChronize:OUTPut ON
SOURcel:BB:ARbitrary:TRIGger:EXTernal:DELay 200
SOURcel:BB:ARbitrary:TRIGger:EXTernal:INHibit 100
// with internal trigger source
SOURcel:BB:ARbitrary:TRIGger:SEQuence AAUTO
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STAT ON
SOURcel:BB:ARbitrary:TRIGger:EXEC

```

### Example: To specify delay and inhibit values in time units

The following example lists the commands necessary to configure the instrument as described in ["Specifying delay and inhibit values"](#) on page 100.



```

SOURcel:BB:ARbitrary:CLOCK 1000000
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUT
SOURcel:BB:ARbitrary:TRIGger:SOURce EGT1
SOURcel:BB:ARbitrary:TRIGger:DELay:UNIT SAMP
SOURcel:BB:ARbitrary:TRIGger:EXTeRnal:DELay 100
SOURcel:BB:ARbitrary:TRIGger:EXTeRnal:RDELay?
// Response: 100
SOURcel:BB:ARbitrary:TRIGger:DELay:UNIT TIME
SOURcel:BB:ARbitrary:TRIGger:EXTeRnal:TDELay 0.00001
SOURcel:BB:ARbitrary:TRIGger:EXTeRnal:RDELay?
// Response: 0.00001
SOURcel:BB:ARbitrary:TRIGger:DELay:UNIT SAMP
SOURcel:BB:ARbitrary:TRIGger:EXTeRnal:DELay 10

```

### Example: Creating a multi-segment waveform

The following example lists the commands necessary to create a multi-segment waveform.

```

// *****
// Reset instrument first
// *****
*RST; *CLS
// SOURcel:BB:ARbitrary:PRESet

// *****
// Set the default directory and list the available waveform files
// *****
MMEM:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARbitrary:WAVEform:CATalog:LENGth?
// 4
SOURcel:BB:ARbitrary:WAVEform:CATalog?
// Seg_0, Seg_1, Seg_2, Seg_3
// *****
// List the available configuration files and select/create file
// *****
SOURcel:BB:ARbitrary:WSEGment:CONFigure:CATalog?
// multi_segment,ms_waveform
// the directory contains the configuration files multi_segment.inf_mswv
// and ms_waveform.inf_mswv
SOURcel:BB:ARbitrary:WSEGment:CONFigure:DELeTe "ms_waveform.inf_mswv"
SOURcel:BB:ARbitrary:WSEGment:CONFigure:SELeCt
"/var/user/ARB/multi_segment/config.inf_mswv"
// Creates an empty configuration file "config.inf_mswv".

// *****
// Append waveforms to the multi segment sequence
// *****
SOURcel:BB:ARbitrary:WSEGment:CONFigure:SEGment:APPend "Seg_0"
// Waveform Seg_0.wv will be the first segment of a
// multi segment waveform created with configuration file config.inf_mswv
SOURcel:BB:ARbitrary:WSEGment:CONFigure:SEGment:APPend "Seg_1"

```



```

SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_2"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:APPend "Seg_3"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:BLANk:APPend 1000,100000000
// adds a blank segment with 1000 samples and 100 MHz clock rate
SOURcel:BB:ARbitrary:WSEgment:CONFigure:LEVel:MODE ERMS
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE HIGHest
// SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE USER
// SOURcel:BB:ARbitrary:WSEgment:CONFigure:CLOCK 30000000
SOURcel:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE TAKE
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect
"/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:COMMeNt "Multi Segment File"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFILe "ms_0to3"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SEgment:CATalog?
// /var/user/ARB/multi_segment/Seg_0.wv,/var/user/ARB/multi_segment/Seg_1.wv,
// /var/user/ARB/multi_segment/Seg_2.wv,/var/user/ARB/multi_segment/Seg_3.wv

// *****
// Create and load the multi segment waveforms
// *****
// The first segment is output depending on the trigger settings.
SOURcel:BB:ARbitrary:WSEgment:CREate "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:WSEgment:CLoad "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUTO
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STAT ON
SOURcel:BB:ARbitrary:TRIGger:EXEC

```

### Example: Configuring the output order of the segments

The following example lists the commands necessary to trigger the output of the segments in desired playback order. The example lists only the relevant commands.

We assume, that the multi-segment sequence `ms_0to3` composed of four segments, `Seg_0`, `Seg_1`, `Seg_2` and `Seg_3` is created and loaded in the ARB (see [Example "Creating a multi-segment waveform"](#) on page 851). The required output order of the segments is `Seg_0`, `Seg_3 [2]`, `Seg_2`.

```

// *****
// Select a multi segment waveform
// *****
MME:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CATalog?
// config
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFILe?
// "/var/user/ARB/multi_segment/ms_0to3"
SOURcel:BB:ARbitrary:WSEgment:CLoad "/var/user/ARB/multi_segment/config.inf_mswv"

// *****
// Adjust trigger settings and enable the ARB
// *****

```



```

SOURcel:BB:ARbitrary:TRIGger:SEquence AAUTO
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STATe ON

// *****
// Select the next segment trigger mode and source
// *****
SOURcel:BB:ARbitrary:TRIGger:SMODE NEXT
// SOURcel:BB:ARbitrary:TRIGger:SMODE NSEam
SOURcel:BB:ARbitrary:WSEgment:NEXT:SOURce INTernal
SOURcel:BB:ARbitrary:WSEgment?
// 0
SOURcel:BB:ARbitrary:WSEgment:NAME?
// "/var/user/ARB/multi_segment/Seg_0.wv"
// Seg_0 is output continuously

// *****
// Trigger a switch over to the next segment
// *****
SOURcel:BB:ARbitrary:WSEgment:NEXT 3
// stops Seg_0 and starts immediatly Seg_3; Seg_3 is output continuously
SOURcel:BB:ARbitrary:TRIGger:EXECute
//restarts Seg_3
SOURcel:BB:ARbitrary:WSEgment:NEXT 2
SOURcel:BB:ARbitrary:WSEgment:NEXT 0

// *****
// Scrolling trough the segments, i.e. shwitch over in incremental order
// *****
SOURcel:BB:ARbitrary:WSEgment:NEXT:EXECute
SOURcel:BB:ARbitrary:WSEgment?
// 1
SOURcel:BB:ARbitrary:WSEgment:NEXT:EXECute
SOURcel:BB:ARbitrary:WSEgment?
// 2

```



Refer to ["To apply a manual segment switch to the output segments in the required order"](#) on page 228 for description of the steps necessary to achieve a similar task via manual operation of the instrument.

### Example: Using the ARB sequencer

The following example lists the commands necessary to configure a play list. The example lists only the relevant commands.

We assume, that the multi-segment sequence `ms_0to3` composed of four segments, `Seg_0`, `Seg_1`, `Seg_2` and `Seg_3` is created and loaded in the ARB (see [Example "Creating a multi-segment waveform"](#) on page 851). The required output order of the segments is `Seg_0`, `Seg_3 [2]`, `Seg_2`.





The ARB sequencer mode requires waveform files with equal clock rate.

```
// *****
// Select a multi segment waveform composed from waveforms with equal clock rates
// *****
MME:CDIR "/var/user/ARB/multi_segment"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CATalog?
// config
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARbitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:OFILe?
// "/var/user/ARB/multi_segment/ms_0to3.wv"

// *****
// Select a sequencing list (*.wvs)
// *****
SOURcel:BB:ARbitrary:WSEgment:SEquence:SElect "play_list"
SOURcel:BB:ARbitrary:WSEgment:SEquence:APPend ON,0,1,NEXT
// adds the segment number 0 as a new (first) segment in the sequencing list
// this segment is activ and will be repeated once followed by the next segment
SOURcel:BB:ARbitrary:WSEgment:SEquence:APPend ON,3,2,NEXT
SOURcel:BB:ARbitrary:WSEgment:SEquence:APPend ON,2,1,SEG0

SOURcel:BB:ARbitrary:TRIGger:SMODE SEQuencer
SOURcel:BB:ARbitrary:TRIGger:SEquence AAUTo
SOURcel:BB:ARbitrary:TRIGger:SOURce INTernal
SOURcel:BB:ARbitrary:STAT ON
SOURcel:BB:ARbitrary:TRIGger:EXEC
```



Refer to ["To apply a manual segment switch to the output segments in the required order"](#) on page 228 for description of the steps necessary to achieve a similar task via manual operation of the instrument.

### Example: Adding extra marker signals

The following example lists the commands necessary to add two marker signals, a sequence restart marker and a segment restart marker, to the multi-segment sequence. The example lists only the relevant commands.

```
// *****
// Select the multi segment file and the corresponding configuration list
// *****
MME:CDIR "/var/lists/ARB/multi_segment"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:CATalog?
// Response: "config"
SOURcel:BB:ARbitrary:WSEgment:CONFigure:SElect "config"
SOURcel:BB:ARbitrary:WSEgment:CLOad "/var/user/ARB/multi_segment/config.inf_mswv"
```



```

SOURCE1:BB:ARbitrary:WSEgment:CONFigure:OFIle?
// "/var/user/ARB/multi_segment/ms_0to3.wv"

// *****
// Enable restart markers on marker trace 1 and 2
// *****
SOURCE1:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE Ignore
SOURCE1:BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment MRK1
SOURCE1:BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment MRK2

SOURCE1:BB:ARbitrary:TRIGger:OUTPut1:MODE UNCHanged
SOURCE1:BB:ARbitrary:TRIGger:OUTPut2:MODE UNCHanged

```

### Example: Generating a multicarrier signal

The following example lists the commands necessary to generate a multicarrier signal.

```

// *****
// Generating a multi carrier signal
// *****
// Load a standardized 3GPP downlink test model, e.g. "Test Model 1 16 Channels"
SOURCE1:BB:W3Gpp:SETTing:TMOdel:BSTation "Test_Model_1_16channels"
// Confirm that the standardized 3GPP downlink test model is currently selected
SOURCE1:BB:W3Gpp:SETTing:TMOdel:BSTation?
// "Test_Model_1_16channels"
// Enable the generation of 3GPP FDD signal
SOURCE1:BB:W3Gpp:STATe ON
// Generate a 3GPP FDD ARB waveform file with name "3gpp_arb"
// store the waveform in the default directory ("/var/user")
SOURCE1:BB:W3Gpp:WAVEform:CREate "3gpp_arb"

// *****
// Configure a multi carrier scenario with 4 carriers
// and carrier spacing of 5 MHz
// Activate the carriers
// *****
SOURCE1:BB:ARbitrary:MCARrier:CARRier:COUNT 4
SOURCE1:BB:ARbitrary:MCARrier:CARRier:SPACing 5 MHz
SOURCE1:BB:ARbitrary:MCARrier:CARRier1:STATe ON
SOURCE1:BB:ARbitrary:MCARrier:CARRier2:STATe ON
SOURCE1:BB:ARbitrary:MCARrier:CARRier3:STATe ON
SOURCE1:BB:ARbitrary:MCARrier:CARRier4:STATe ON

// *****
// Select and load the waveform file "3gpp_arb" to all 4 carriers
// (the file "3gpp_arb" is in default directory)
// *****
SOURCE1:BB:ARbitrary:MCARrier:CARRier1:FILE "3gpp_arb"
SOURCE1:BB:ARbitrary:MCARrier:CARRier2:FILE "3gpp_arb"
SOURCE1:BB:ARbitrary:MCARrier:CARRier3:FILE "3gpp_arb"
SOURCE1:BB:ARbitrary:MCARrier:CARRier4:FILE "3gpp_arb"

```



```
// *****
// Trigger the signal caulation and load the waveform in the ARB generator
// *****
// Define the file name of the multi carrier output file, e.g. "3gpp_mc"
SOURcel:BB:ARBitrary:MCARrier:OFILe "3gpp_mc"
// Create and load the multi carrier waveform file in the ARB generator
SOURcel:BB:ARBitrary:MCARrier:CLOad
// Alternatively: create the multi carrier waveform and
// load it subsequently in the ARB generator
// SOURcel:BB:ARBitrary:MCARrier:CREate
// SOURcel:BB:ARBitrary:WAVEform:SELeCt"3gpp_mc"

// Activate the ARB generator
SOURcel:BB:ARBitrary:STATe ON

// *****
// Use the save/recall function.
// *****
// Query available settings files in a specified directory
MMEM:CDIR "/var/user/waveform"
SOURcel:BB:ARBitrary:MCARrier:SETTing:CATalog?
// mcar1, mcar2
// the directory contains the settings files mcar1.arb_multcarr and mcar2.arb_multcarr
SOURcel:BB:ARBitrary:MCARrier:SETTing:STORe "3gpp_mc"
```

### Example: Generating AWGN test signal

```
SOURcel:BB:ARBitrary:SIGNAL:TYPE AWGN
SOURcel:BB:ARBitrary:TSIGNAL:AWGN:SAMPles 10000000
SOURcel:BB:ARBitrary:TSIGNAL:AWGN:CREate

SOURcel:BB:ARBitrary:STATe 1
```



**Example: Creating notch filter**

```

SOURCE1:BB:ARbitrary:CLOCK 1000000
SOURCE1:BB:ARbitrary:NOTCh:CLOCK?
// 1000000
SOURCE1:BB:ARbitrary:NOTCh1:COUNT 3

SOURCE1:BB:ARbitrary:NOTCh1:STATE 1
SOURCE1:BB:ARbitrary:NOTCh1:FREQuency:OFFSet 0
SOURCE1:BB:ARbitrary:NOTCh1:BWIDth:RELative 3
SOURCE1:BB:ARbitrary:NOTCh1:BWIDth:ABSolute?
// 30000

SOURCE1:BB:ARbitrary:NOTCh2:FREQuency:OFFSet -25000000
SOURCE1:BB:ARbitrary:NOTCh2:BWIDth:ABSolute 20000
SOURCE1:BB:ARbitrary:NOTCh2:BWIDth:RELative?
// 2

SOURCE1:BB:ARbitrary:NOTCh3:FREQuency:OFFSet 25000000
SOURCE1:BB:ARbitrary:NOTCh3:BWIDth:ABSolute 5000
SOURCE1:BB:ARbitrary:NOTCh3:BWIDth:RELative 0.5

SOURCE1:BB:ARbitrary:NOTCh1:APPLY
SOURCE1:BB:ARbitrary:NOTCh 1
SOURCE1:BB:ARbitrary:STATE 1

```

**General commands****[ :SOURCE<hw> ]:BB:ARbitrary:PRESet**

Sets all ARB generator parameters to their default values.

**Example:** See ["Programming examples"](#) on page 848

**Usage:** Event

**Manual operation:** See ["Set To Default"](#) on page 159

**[ :SOURCE<hw> ]:BB:ARbitrary:STATE <State>**

Enables the ARB generator.

A waveform must be selected before the ARB generator is activated.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 848

**Manual operation:** See ["State"](#) on page 159



---

**[[:SOURce<hw>]:BB:ARbitrary:PRAMP[:STATe] <ArbPramState>**

If activated, the burst gate marker signal included in the ARB waveform file is used as marker signal for the pulse modulator.

**Parameters:**

<ArbPramState>      1 | ON | 0 | OFF  
                          \*RST:      0

**Example:**

```
SOURce1:BB:ARbitrary:WAVEform:SElect "/var/user/Pulse_PMod_Burst"
SOURce1:BB:ARbitrary:PRAMP:STATe 1
SOURce1:BB:ARbitrary:STATe 1
```

**Options:**              R&S SMBVB-K22

**Manual operation:**   See ["RF Power Ramping with Burst Marker"](#) on page 161

**Test signal commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:SIGNal:TYPE</a> .....	858
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:CIQ:I</a> .....	859
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:CIQ:Q</a> .....	859
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:AMPLitude</a> .....	859
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:FREQuency</a> .....	859
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:OFFSet</a> .....	859
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:SAMPles</a> .....	860
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:SINE:FREQuency</a> .....	860
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:SINE:PHASe</a> .....	860
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:SINE:SAMPles</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:CIQ:CREate:NAMed</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:CREate:NAMed</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:SINE:CREate:NAMed</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:CIQ:CREate</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:RECTangle:CREate</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:SINE:CREate</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:AWGN:SAMPles</a> .....	861
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TSIGNal:AWGN:CREate</a> .....	862

---

**[[:SOURce<hw>]:BB:ARbitrary:SIGNal:TYPE <ArbSignalType>**

Selects the type of test signal.

**Parameters:**

<ArbSignalType>      SINE | RECT | CIQ  
                          \*RST:      SINE

**Example:**              See [Example"Creating test signals"](#) on page 848.

**Manual operation:**   See ["Test Signal Form"](#) on page 161



---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:I <I>**

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:Q <TSig>**

Sets the value for the I and Q component of the test signal

**Parameters:**

<TSig> float  
 Range: -1 to 1  
 Increment: 0.001  
 \*RST: 0  
 Default unit: FS

**Example:** See [Example"Creating test signals"](#) on page 848

**Manual operation:** See ["I Value, Q Value"](#) on page 165

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude <Amplitude>**

Sets the digital amplitude of the rectangular wave.

**Parameters:**

<Amplitude> float  
 Range: 0 to 1  
 Increment: 0.001  
 \*RST: 0.800  
 Default unit: FS

**Example:** see [Example"Creating test signals"](#) on page 848

**Manual operation:** See ["Amplitude"](#) on page 164

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:FREQuency <Frequency>**

Sets the frequency of the test signal.

**Parameters:**

<Frequency> float  
 Range: 100 to depends on the installed options  
 Increment: 0.01  
 \*RST: 1000  
 Default unit: Hz

**Example:** See [Example"Creating test signals"](#) on page 848.

**Manual operation:** See ["Frequency"](#) on page 163

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:OFFSet <Offset>**

Sets the DC component.



**Parameters:**

<Offset> float  
 Range: -1 to 1  
 Increment: 0.001  
 \*RST: 0  
 Default unit: FS

**Example:** see [Example"Creating test signals"](#) on page 848

**Manual operation:** See ["Offset DC"](#) on page 164

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles <Samples>**

Sets the number of sample values required for the rectangular signal per period.

**Parameters:**

<Samples> integer  
 Range: 4 to 1000  
 \*RST: 100

**Example:** See [Example"Creating test signals"](#) on page 848

**Manual operation:** See ["Samples per Period"](#) on page 164

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:FREQuency <Frequency>**

Sets the frequency of the simple sinusoidal test signal.

**Parameters:**

<Frequency> float  
 Range: 100 to depends on the installed options  
 Increment: 0.01  
 \*RST: 1000  
 Default unit: Hz

**Example:** See [Example"Creating test signals"](#) on page 848.

**Manual operation:** See ["Frequency"](#) on page 162

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:PHASe <Phase>**

Sets the phase offset of the sine wave on the Q channel relative to the sine wave on the I channel.

**Parameters:**

<Phase> float  
 Range: -180 to 180  
 Increment: 0.01  
 \*RST: 90  
 Default unit: DEG

**Example:** see [Example"Creating test signals"](#) on page 848



**Manual operation:** See ["Phase Offset Q"](#) on page 162

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:SAMPles <Samples>**

Sets the sample rate for the sine signal in samples per period.

The resulting clock rate must not exceed the maximum ARB clock rate (see data sheet).

The maximum value is automatically restricted by reference to the set frequency and has to fulfill the rule *Frequency \* Samples ≤ ARB clock rate*.

**Parameters:**

<Samples>                      integer  
                                     Range:        4 to 1000  
                                     \*RST:        100

**Example:**                      see [Example"Creating test signals"](#) on page 848

**Manual operation:**        See ["Samples per Period"](#) on page 162

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed <Filename>**

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed <Filename>**

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed <Filename>**

Generates a signal and saves it to a waveform file.

**Setting parameters:**

<Filename>                      string

**Example:**                      See [Example"Creating test signals"](#) on page 848

**Usage:**                        Setting only

**Manual operation:**        See ["Generate Signal File"](#) on page 163

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate**

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate**

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate**

Generates a signal and uses it as output straight away.

**Example:**                      see [Example"Creating test signals"](#) on page 848

**Usage:**                        Event

**Manual operation:**        See ["Generate Signal RAM"](#) on page 163  
                                     See ["Generate Signal RAM"](#) on page 164

---

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:SAMPles <ParAwgnSamp>**

Sets the number of samples generated for the AWGN waveform.



**Parameters:**

<ParAwgnSamp> integer  
 Range: 1E6 to 1E9  
 \*RST: 1E8

**Example:** See [Example "Generating AWGN test signal"](#) on page 856.

**Options:** R&S SMBVB-K811

**Manual operation:** See ["Samples"](#) on page 205

**[SOURce<hw>]:BB:ARbitrary:TSIGnal:AWGN:CREate**

Generates a signal and uses it as output straight away.

**Example:** See [Example "Generating AWGN test signal"](#) on page 856.

**Usage:** Event

**Options:** R&S SMBVB-K811

**Manual operation:** See ["Generate Signal RAM"](#) on page 205

**Waveform commands**

The following rule applies for all commands described in this section.

By default, the waveform files are saved in the default directory of the instrument that is the `/var/user/` directory or the directory specified with the command `:MMEMory:CDIRectory`. To access the waveform files in this default directory, only the filename is required, without the path and the file extension (\* .wv).

However, to access waveform files located in a directory different to the default one, the complete file path and filename are required.

<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:CATalog?</a>	862
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:CATalog:LENGth?</a>	863
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:SElect</a>	863
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:DELeTe</a>	863
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:FREE?</a>	863
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:POINts?</a>	864
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:DATA</a>	864
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:TAG?</a>	865
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:CLOCK</a>	865
<a href="#">[SOURce&lt;hw&gt;]:BB:ARbitrary:WAVeform:CLOCK</a>	866

**[SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog?**

Reads out the files extension \* .wv in the default directory.



**Return values:**

<Catalog> string  
Returns a list of the file names separated by commas

**Example:** see [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**[[:SOURce<hw>]:BB:ARbitrary:WAVEform:CATalog:LENGth?**

Reads out the files with extension \*.wv in the default directory and returns the number of waveform files in this directory. The default directory is set using command MMEM:CDIRectory.

**Return values:**

<Length> integer  
Number of waveform files in default directory  
Range: 0 to INT\_MAX  
\*RST: 0

**Example:** see [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**[[:SOURce<hw>]:BB:ARbitrary:WAVEform:SElect <Filename>**

Selects an existing waveform file, i.e. file with extension \*.wv.

**Parameters:**

<Filename> string

**Example:** See [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["Load Waveform/File"](#) on page 160

**[[:SOURce<hw>]:BB:ARbitrary:WAVEform:DElete <Filename>**

Deletes the specified waveform file. If the file is not on the default path, the path must be specified at the same time. The file extension may be omitted. Only files with the file extension \*.wv are deleted.

**Setting parameters:**

<Filename> string

**Example:** See [Example "Managing waveform files"](#) on page 849

**Usage:** Setting only

**[[:SOURce<hw>]:BB:ARbitrary:WAVEform:FREE?**

Queries the free disk space on the default path of the instrument's hard disk.



**Return values:**

<Free> integer  
 Range: 0 to INT\_MAX  
 \*RST: 1

**Example:** See [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**[ :SOURce<hw>]:BB:ARbitrary:WAVEform:POINTS?**

Queries the number of samples (the number of I/Q values pairs) in the selected waveform file.

**Return values:**

<Points> <waveform filename>  
 Range: 0 to 1000  
 \*RST: 1

**Example:** see [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**[ :SOURce<hw>]:BB:ARbitrary:WAVEform:DATA <Filename>, <Data>****[ :SOURce<hw>]:BB:ARbitrary:WAVEform:DATA? <Tag>**

The **setting** command writes the binary block data <data> to the file identified by <filename>. The *complete content* of the waveform file (i.e. including all tags) must be specified; the complete content is transmitted as binary data block.

I/Q data and the marker data can also be written to a file with the command :  
[MMEMory:DATA:UNPRotected](#).

**Tip:** To ensure trouble-free data transmission, set the GPIB delimiter to EOI.

The **query** command retrieves the content of the specified tag of the currently selected waveform file or the waveform file specified with the <filename>.

See also [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182.

**Parameters:**

<Filename> string  
 Specifies the name of the waveform file in that the binary data is copied

**Setting parameters:**

<Data> block data  
 Binary block data with the following syntax:  
 #<Digits><Length><Binary data>  
 #  
 Indicates the start of the binary block



**<Digits>**

Decimal value

Gives the number of decimal digits used for the &lt;Length&gt; value

**<Length>**

Decimal value

Number of bytes the follow in the &lt;Binary data&gt; part

**<Binary data>**

Binary data in ASCII format

**Query parameters:**

<Tag> 'comment' | 'copyright' | 'date' | 'lacfiter' | 'marker name' | 'poweroffset'

**Example:****Query**See [Example "Managing waveform files"](#) on page 849**Example:****Setting**

```
SOURce:BB:ARB:WAVEform:DATA "/var/user/test1.wv",#220<binary data>
// Writes the binary block data <binary data> to file test1.wv
// <binary data> contains 20 bytes
// <binary data> is a placeholder;
// the actual ASCII values are not printable
```

**[[:SOURce<hw>]:BB:ARbitrary:WAVEform:TAG?**

Queries the content of the specified tag of the selected waveform file (see also [Chapter 4.6.5, "Tags for waveforms, data and control lists"](#), on page 182).

**Return values:**

<Tag> 'comment' | 'copyright' | 'date' | 'lacfiter' | 'marker name' | 'poweroffset' | 'samples'

**Example:**see [Example "Managing waveform files"](#) on page 849**Usage:**

Query only

**[[:SOURce<hw>]:BB:ARbitrary:CLOCK <Clock>**

Sets the clock frequency.

If you load a waveform, the clock rate is determined as defined with the waveform tag {CLOCK: frequency}. This command subsequently changes the clock rate; see data sheet for value range.

**Parameters:**

<Clock> float  
 Range: depends on the installed options  
 Increment: 0.001  
 \*RST: 1E6  
 Default unit: Hz  
 E.g. 400 Hz to 600 MHz



**Example:** See [Example "Managing waveform files"](#) on page 849.

**Manual operation:** See ["Clock Frequency"](#) on page 160

---

**[ :SOURce<hw>]:BB:ARbitrary:WAVEform:CLOCK <Filename>, <Clock>**

Appends information on the ARB clock rate to specified waveform file. This file must contain I/Q or marker data.

Use the following command to create the data:

[:MMEMory:DATA:UNPRotected](#) on page 712

**Parameters:**

**<Filename>** string  
Complete file path and file name with file extension (\* .wv).  
If the file is in the default directory, the file path can be omitted.

**Setting parameters:**

**<Clock>** float  
Range: 400 to 100E6  
Increment: 1E-3  
\*RST: 1E6

**Example:** see [:MMEMory:DATA:UNPRotected](#) on page 712

## Multi-segment commands

### Required options

See [Chapter 4.9.1, "Required options"](#), on page 206.

<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment?</a>	866
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:NAME?</a>	867
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:NEXT</a>	867
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:NEXT:EXECute</a>	867
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:NEXT:SOURce</a>	868
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:LMODe</a>	868
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:SEGMent:CATalog?</a>	868
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:SEQuence:SElect</a>	868
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:SEQuence:APPend</a>	869
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CREate</a>	869
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CLOad</a>	869
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:MARKer:MODE</a>	870
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:MARKer:ESEGment</a>	870
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:MARKer:FSEGment</a>	870
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:SMODE</a>	870

---

**[ :SOURce<hw>]:BB:ARbitrary:WSEGment?**

Queries the index of the currently processed segment.



**Return values:**

<WSegment> integer  
 Range: 0 to 1023  
 \*RST: 0

**Example:** see [Example"Configuring the output order of the segments"](#) on page 852

**Usage:** Query only

**Manual operation:** See ["Current Segment/Current Segment Index"](#) on page 224

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:NAME?**

Queries the name of the waveform of the currently output segment of the multi-segment waveform.

**Return values:**

<Name> string

**Example:** See [Example"Configuring the output order of the segments"](#) on page 852

**Usage:** Query only

**Manual operation:** See ["Current Segment/Current Segment Index"](#) on page 224

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:NEXT <Next>**

Selects the segment to be output.

**Parameters:**

<Next> integer  
 Range: 0 to 1023  
 \*RST: 0

**Example:** see [Example"Configuring the output order of the segments"](#) on page 852

**Manual operation:** See ["Segment"](#) on page 224

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:NEXT:EXECute**

Triggers manually switchover to the subsequent segment in the multi-segment file.

This command is disabled, if a sequencing play list is enabled.

**Example:** See [Example"Configuring the output order of the segments"](#) on page 852

**Usage:** Event

**Manual operation:** See ["Execute Next Segment"](#) on page 226



---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:NEXT:SOURce <Source>**

Selects the next segment source.

**Parameters:**

<Source>            INTeRnal | NSEGM1 | INTeRnal | NSEGM1  
 \*RST:            INTeRnal

**Example:**            See [Example"Configuring the output order of the segments"](#) on page 852.

**Manual operation:**    See ["Next Segment Source"](#) on page 226

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:LMODe <LevelMode>**

Sets how the segments are leveled.

**Parameters:**

<LevelMode>        HIGHest | UNCHanged  
 \*RST:            HIGHest

**Example:**            :SOURce1:BB:ARbitrary:WSEgment:LMODe HIGHest

**Manual operation:**    See ["Level Mode"](#) on page 226

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SEGMent:CATalog?**

Queries the segments of the currently selected configuration file.

**Return values:**

<Catalog>            string

**Example:**            See [Example"Creating a multi-segment waveform"](#) on page 851.

**Usage:**                Query only

**Manual operation:**    See ["Segment Table"](#) on page 216

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:SEQuence:SElect <Filename>**

Selects the sequencing list (files with extension \*.wvs)

**Parameters:**

<Filename>            string

**Example:**            see [Example"Using the ARB sequencer"](#) on page 853

**Manual operation:**    See ["New/Load Sequencing List"](#) on page 221  
 See ["Append"](#) on page 223  
 See ["Sequencing List"](#) on page 226



---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:SEquence:APPend <State>, <Segment>, <Count>, <Next>**

Appends a new segment to the selected sequencing play list.

**Setting parameters:**

<b>&lt;State&gt;</b>	ON   OFF Activates/deactivates the appended segment *RST: ON
<b>&lt;Segment&gt;</b>	integer Indicates the number of the segment as in the multi-segment waveform file Range: 0 to SegmentCount - 1
<b>&lt;Count&gt;</b>	integer Defines how many times this segment is repeated Range: 1 to 1048575
<b>&lt;Next&gt;</b>	NEXT   BLANK   ENDLess   SEG0   SEG1   ...   SEG31   0...maxSegment Determines the action after completing the current segment, like for instance which segment is processed after the processing of the current one is finished.

**Example:** See [Example"Using the ARB sequencer"](#) on page 853

**Usage:** Setting only

**Manual operation:** See ["Append"](#) on page 223

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CREate <FilenameInput>**

Creates a multi-segment waveform (\*.wv) using the current settings of the specified *configuration file* (\*.inf\_mswv).

**Setting parameters:**

<b>&lt;FilenameInput&gt;</b>	Complete file path, file name of the configuration file and file extension (*.inf_mswv)
------------------------------	---

**Example:** See [Example"Creating a multi-segment waveform"](#) on page 851

**Usage:** Setting only

**Manual operation:** See ["Create/Create and Load"](#) on page 214

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CLOad <FilenameInput>**

Creates a multi-segment waveform using the current entries of the specified *configuration file* (\*.inf\_mswv).

The ARB generator is activated, the new multi-segment waveform (\*.wv) is loaded and the first segment is output in accordance to the trigger settings.



**Setting parameters:**

<FilenameInput> string  
Complete file path, file name of the configuration file and file extension (\*.inf\_mswv)

**Example:** See [Example"Creating a multi-segment waveform"](#) on page 851

**Usage:** Setting only

**Manual operation:** See ["Create/Create and Load"](#) on page 214

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE <Mode>**

Defines the way the marker information within the separate segments is processed.

**Parameters:**

<Mode> IGNore | TAKE  
\*RST: TAKE

**Example:** see [Example"Adding extra marker signals"](#) on page 854

**Manual operation:** See ["Segment Marker"](#) on page 218

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEGment <Mode>**

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEGment <Mode>**

Enables/disables the generation of an additional marker restart signal at the beginning of the first segment (FSEGment) or at the beginning of each segment (ESEGment).

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

**Parameters:**

<Mode> OFF | MRK1 | MRK2 | MRK3 | MRK4  
\*RST: OFF

**Example:** see [Example"Adding extra marker signals"](#) on page 854

**Manual operation:** See ["Sequence Restart"](#) on page 219

**[ :SOURce<hw>]:BB:ARbitrary:TRIGger:SMODE <SMode>**

Selects the extended trigger mode for multi segment waveforms.

**Parameters:**

<SMode> SAME | NEXT | SEQuencer | NSEam  
NSEam = Next Segment Seamless  
\*RST: NEXT

**Example:** See [Example"Configuring the output order of the segments"](#) on page 852.



**Manual operation:** See ["Next Segment Mode"](#) on page 225

## Multi-segment sequencing commands

### Required options

See [Chapter 4.9.1, "Required options"](#), on page 206.

<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend</a> .....	871
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:CATalog?</a> .....	871
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:CLOCK</a> .....	872
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:CLOCK:MODE</a> .....	872
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:LEVel[:MODE]</a> .....	872
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:COMMeNt</a> .....	872
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:DELeTe</a> .....	873
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:OFILe</a> .....	873
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:SEGMeNt:APPend</a> .....	873
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:WSEGment:CONFigure:SELeCt</a> .....	873

---

**[\[:SOURce<hw>\]:BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend](#)**  
 <SampCount>, <Frequency>

Adds a blank segment to the multi-segment file.

### Setting parameters:

<SampCount>	float
	Specifies the number of samples.
	Range: 512 to 1E7
	Increment: 1
	*RST: 1000
<Frequency>	float
	Determines the clock rate.
	Range: 400 Hz to depends on the installed options
	Increment: 0.001
	*RST: 1E8

**Example:** See [Example"Creating a multi-segment waveform"](#) on page 851

**Usage:** Setting only

**Manual operation:** See ["Blank Segment"](#) on page 216

---

**[\[:SOURce<hw>\]:BB:ARbitrary:WSEGment:CONFigure:CATalog?](#)**

Queries the available configuration files in the default directory. See also [Chapter 4.9.2.3, "File concept"](#), on page 207.

### Return values:

<Catalog>	string
-----------	--------

**Example:** see [Example"Creating a multi-segment waveform"](#) on page 851



**Usage:** Query only

**Manual operation:** See ["Load List"](#) on page 213

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK <Clock>**

Defines the clock rate used for multi-segment waveform output, if the clock mode is USER.

**Parameters:**

<Clock> float  
Increment: 1E-3  
\*RST: maximum sample rate

**Example:** See [Example "Creating a multi-segment waveform"](#) on page 851

**Manual operation:** See ["User Clock Rate"](#) on page 218

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE <Mode>**

Selects the clock rate mode for the multi segment waveform. Use the command [\[ :SOURce<hw>\]:BB:ARbitrary:WSEgment:CONFigure:CLOCK](#) to define the clock in clock mode user.

**Parameters:**

<Mode> UNCHanged | HIGHest | USER  
\*RST: UNCHanged

**Example:** See [Example "Creating a multi-segment waveform"](#) on page 851.

**Manual operation:** See ["Clock"](#) on page 218

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:LEVel[:MODE] <Mode>**

Selects the level mode, unchanged or equal RMS, for the multi-segment waveform.

**Parameters:**

<Mode> UNCHanged | ERMS  
\*RST: UNCHanged

**Example:** See [Example "Creating a multi-segment waveform"](#) on page 851.

**Manual operation:** See ["Level"](#) on page 218

**[ :SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:COMMeNt <Comment>**

Enters a comment for the selected configuration file.

**Parameters:**

<Comment> string

**Example:** See [Example "Creating a multi-segment waveform"](#) on page 851

**Manual operation:** See ["Comment"](#) on page 214



---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:DELeTe <Filename>**

Deletes the selected configuration file.

**Setting parameters:**

<Filename>                      string

**Example:**                      See [Example"Creating a multi-segment waveform"](#) on page 851.

**Usage:**                        Setting only

**Manual operation:**    See ["Append/Delete/Shift Seg. Up/Down"](#) on page 216

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:OFILe <OFile>**

Defines the file name of the output multi-segment waveform.

**Parameters:**

<OFile>                        string

**Example:**                      See [Example"Creating a multi-segment waveform"](#) on page 851

**Manual operation:**    See ["Output file"](#) on page 214  
                                  See ["Create/Create and Load"](#) on page 214

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SEGment:APPend  
                                  <Waveform>**

Appends the specified waveform to the configuration file.

**Setting parameters:**

<Waveform>                      string

**Example:**                      see [Example"Creating a multi-segment waveform"](#) on page 851

**Usage:**                        Setting only

**Manual operation:**    See ["Append/Delete/Shift Seg. Up/Down"](#) on page 216

---

**[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SELeCt <Filename>**

Selects a configuration file from the default directory. If a configuration file with the specified name does not yet exist, it is created. The file extension `*.inf_mswv` may be omitted.

**Parameters:**

<Filename>                      string

**Example:**                      see [Example"Creating a multi-segment waveform"](#) on page 851

**Manual operation:**    See ["New List"](#) on page 213  
                                  See ["Load List"](#) on page 213



## Multicarrier commands

### Required options

See [Chapter 4.10.1, "Required options"](#), on page 236.

### Suffixes

Suffix	Value range
CARRier<ch>	1 to 512

[SOURce<hw>]:BB:ARbitrary:MCARrier:PRESet.....	875
[SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:CATalog?.....	875
[SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:LOAD.....	875
[SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:STORE.....	875
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:COUNT.....	876
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:MODE.....	876
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:SPACing.....	876
[SOURce<hw>]:BB:ARbitrary:MCARrier:SAMPles?.....	876
[SOURce<hw>]:BB:ARbitrary:MCARrier:TIME.....	877
[SOURce<hw>]:BB:ARbitrary:MCARrier:CFACtor:MODE.....	877
[SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CFACtor.....	877
[SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUToff.....	878
[SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe].....	878
[SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE.....	878
[SOURce<hw>]:BB:ARbitrary:MCARrier:POWER:REFerence.....	879
[SOURce<hw>]:BB:ARbitrary:MCARrier:OFILe.....	879
[SOURce<hw>]:BB:ARbitrary:MCARrier:CLOad.....	879
[SOURce<hw>]:BB:ARbitrary:MCARrier:CLOCK?.....	879
[SOURce<hw>]:BB:ARbitrary:MCARrier:CREate.....	880
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:STATe.....	880
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency.....	880
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:PHASe.....	881
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:POWER.....	881
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay.....	881
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FILE.....	882
[SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:CONFLict?.....	882
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STATe.....	882
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:START.....	882
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STOP.....	882
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWER:STEP.....	883
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWER[:START].....	883
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe:STEP.....	883
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START].....	884
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP.....	884
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay[:START].....	884
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:FILE.....	885
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute.....	885



---

**[SOURce<hw>]:BB:ARbitrary:MCARrier:PRESet**

Sets all the multi-carrier parameters to their default values.

**Example:** SOURce1:BB:ARbitrary:MCARrier:PRESet

**Usage:** Event

**Manual operation:** See ["Set to Default"](#) on page 240

---

**[SOURce<hw>]:BB:ARbitrary:MCARrier:SETting:CATalog?**

Queries the available settings files in the specified default directory. Only files with the file extension \*.arb\_multcarr are listed.

**Return values:**

<Catalog> string

**Example:** See [Example"Generating a multicarrier signal"](#) on page 855

**Usage:** Query only

**Manual operation:** See ["Save/Recall Frame"](#) on page 240

---

**[SOURce<hw>]:BB:ARbitrary:MCARrier:SETting:LOAD <Filename>**

Loads the selected file from the default or the specified directory. Loaded are files with extension \*.arb\_multcarr.

**Setting parameters:**

<Filename> "<filename>"

Filename or complete file path; file extension can be omitted

**Example:** See [Example"Generating a multicarrier signal"](#) on page 855.

**Usage:** Setting only

**Manual operation:** See ["Save/Recall Frame"](#) on page 240

---

**[SOURce<hw>]:BB:ARbitrary:MCARrier:SETting:STORe <Filename>**

Stores the current settings into the selected file; the file extension (\*.arb\_multcarr) is assigned automatically.

**Setting parameters:**

<Filename> string

Filename or complete file path

**Example:** See [Example"Generating a multicarrier signal"](#) on page 855

**Usage:** Setting only

**Manual operation:** See ["Save/Recall Frame"](#) on page 240



---

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:COUNT <Count>**

Sets the number of carriers in the ARB multi-carrier waveform.

**Parameters:**

<Count>                      integer  
                                  Range:        1 to 512  
                                  \*RST:        1

**Example:**                      See [Example "Generating a multicarrier signal"](#) on page 855

**Manual operation:**        See ["Number of Carriers"](#) on page 240  
                                  See ["Number of Carriers"](#) on page 246

---

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:MODE <Mode>**

The command sets the carrier frequency mode.

**Parameters:**

<Mode>                      EQUidistant | ARbitrary  
                                  \*RST:        EQUidistant

**Example:**                      BB:ARB:MCAR:CARR:MODE EQU  
                                  Sets an equidistant carrier spacing. The carrier frequency cannot be set.

**Manual operation:**        See ["Mode"](#) on page 240

---

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:SPACing <Spacing>**

Sets the frequency spacing between adjacent carriers of the multi-carrier waveform (see [Chapter 4.10.2.1, "Defining the carrier frequency"](#), on page 237).

**Parameters:**

<Spacing>                      float  
                                  Range:        0.0 to depends on the installed options, e.g. 120E6  
                                  Increment: 0.01  
                                  \*RST:        0  
                                  Default unit: Hz

**Example:**                      See [Example "Generating a multicarrier signal"](#) on page 855

**Manual operation:**        See ["Carrier Spacing"](#) on page 241

---

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:SAMPles?**

Queries the resulting file size.



**Return values:**

<Samples> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0  
 Default unit: samples

**Example:**

SOURce1:BB:ARbitrary:MCARrier:SAMPles?  
 Queries the file size of the currently calculated multi-carrier waveform.

**Usage:**

Query only

**Manual operation:** See ["File Size"](#) on page 244

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME <Time>**

Sets the user-defined signal period.

**Parameters:**

<Time> float  
 Range: 0 to 1E9  
 Increment: 1E-9  
 \*RST: 0  
 Default unit: s

**Example:**

SOURce1:BB:ARbitrary:MCARrier:MODE USER  
 Selects signal period mode user.  
 SOURce1:BB:ARbitrary:MCARrier:TIME 10  
 Sets a signal period of 10 seconds

**Manual operation:** See ["Signal Period"](#) on page 242

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CFACTOR:MODE <Mode>**

Sets the mode for optimizing the crest factor by calculating the carrier phases.

**Parameters:**

<Mode> OFF | MIN | MAX  
 \*RST: OFF

**Example:**

SOURce1:BB:ARbitrary:MCARrier:CFACTOR:MODE OFF  
 Switches off automatic crest factor optimization.

**Manual operation:** See ["Crest Factor Mode"](#) on page 241

**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPPING:CFACTOR <CFactor>**

Sets the value of the desired crest factor, if baseband clipping is enabled.

A target crest factor above the crest factor of the unclipped multicarrier signal has no effect.



**Parameters:**

<CFactor> float  
 Range: -50 to 50  
 Increment: 0.01  
 \*RST: 50  
 Default unit: dB

**Example:**

See [:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe] on page 878.

**Manual operation:** See "Target Crest Factor" on page 241

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUTOFF <Cutoff>**

Sets the cutoff frequency of the final low pass filter, if baseband clipping is enabled.

**Parameters:**

<Cutoff> float  
 Range: 0 to 250E6  
 Increment: 0.01  
 \*RST: 75E6

**Example:**

See [:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe] on page 878.

**Manual operation:** See "Filter Cutoff Frequency" on page 241

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe] <State>**

Switches baseband clipping on and off.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

SOURce1:BB:ARbitrary:MCARrier:CLIPping:STATe ON  
 SOURce1:BB:ARbitrary:MCARrier:CLIPping:CFACtor 37  
 SOURce1:BB:ARbitrary:MCARrier:CLIPping:CUTOFF 50

**Manual operation:** See "Clipping" on page 241

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE <Mode>**

Selects the mode for calculating the resulting signal period of the multi-carrier waveform. The resulting period is always calculated for all carriers in the carrier table irrespective of their state (ON/OFF).

**Parameters:**

<Mode> USER | LONG | SHORT | LCM  
 \*RST: LONG



**Example:** BB:ARB:MCAR:TIME:MODE LONG  
 The resulting signal period is defined by the longest I/Q file in the carrier table. Shorter I/Q files are periodically repeated.

**Manual operation:** See ["Signal Period Mode"](#) on page 242

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:POWer:REFeRence <Reference>**

Defines the way the individual carriers in a composed multi carrier signal are leveled.

**Parameters:**

<Reference> RMS | PEAK  
 \*RST: RMS

**Manual operation:** See ["Power Reference"](#) on page 242

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:OFILe <OFile>**

Defines the output file name for the multi-carrier waveform (file extension \*.wv).

This file name is required to calculate the waveform with the commands [ :SOURce<hw>]:BB:ARbitrary:MCARrier:CLOad or [ :SOURce<hw>]:BB:ARbitrary:MCARrier:CREate.

**Parameters:**

<OFile> string

**Example:** See [Example "Generating a multicarrier signal"](#) on page 855

**Manual operation:** See ["Output File"](#) on page 244

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CLOad**

Creates a multi-carrier waveform using the current entries of the carrier table and activates the ARB generator.

Use the command [ :SOURce<hw>]:BB:ARbitrary:MCARrier:OFILe to define the multi-carrier waveform file name. The file extension is \*.wv.

**Example:** See [Example "Generating a multicarrier signal"](#) on page 855

**Usage:** Event

**Manual operation:** See ["Create/Create and Load"](#) on page 244

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CLOCK?**

Queries the resulting sample rate at which the multi-carrier waveform is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers, carrier spacing, and input sample rate of the leftmost or rightmost carriers.



**Return values:**

<Clock> float  
 Range: 400 to Max  
 Increment: 1E-3

**Example:**

BB:ARB:MCAR:CLOC?  
 Queries the ARB multi-carrier output clock rate.

**Usage:**

Query only

**Manual operation:** See ["Clock Rate"](#) on page 244

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CREate**

Creates a multi-carrier waveform using the current settings of the carrier table.

Use the command [\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:OFILe](#) to define the multi-carrier waveform file name. The file extension is \*.wv.

**Example:**

See [Example "Generating a multicarrier signal"](#) on page 855

**Usage:**

Event

**Manual operation:** See ["Create/Create and Load"](#) on page 244

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:STATe <State>**

Enables/disabled the selected carrier.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

See [Example "Generating a multicarrier signal"](#) on page 855

**Manual operation:** See ["State"](#) on page 246

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency <Frequency>**

Sets or indicates the carrier frequency, depending on the selected carrier frequency mode.

**Parameters:**

<Frequency> integer  
 Range: depends on the installed options  
 \*RST: 0  
 E.g. -60 MHz to +60 MHz (base unit)

**Example:**

SOURce1:BB:ARbitrary:MCARrier:CARRier:MODE ARB  
 SOURce1:BB:ARbitrary:MCARrier:CARRier1:  
 FREQuency 5.0  
 Sets 5.0 MHz carrier frequency.

**Manual operation:** See ["Carrier Freq \[MHz\]"](#) on page 246



---

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:PHASe <Phase>**

Sets the start phase of the selected carrier.

**Parameters:**

<Phase> float  
 Range: 0 to 359.99  
 Increment: 0.01  
 \*RST: 0  
 Default unit: DEG

**Example:** SOURce1:BB:ARbitrary:MCARrier:CARRier19:PHASe  
 90  
 Sets a start phase.

**Manual operation:** See ["Phase"](#) on page 246

---

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:POWER <Power>**

Sets the gain of the selected carrier.

**Parameters:**

<Power> float  
 Range: -80 to 0  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB

**Example:** SOURce1:BB:ARbitrary:MCARrier:CARRier15:POWER  
 -50  
 Sets the power of carrier 15 to -50 dB.

**Manual operation:** See ["Gain"](#) on page 246

---

**[ :SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay <Delay>**

Sets the start delay of the selected carrier.

**Parameters:**

<Delay> float  
 Range: 0 to 1  
 Increment: 1E-9  
 \*RST: 0  
 Default unit: s

**Example:** BB:ARB:MCAR:CARR15:DEL 5us  
 sets a start delay of 50 us for carrier 15.

**Manual operation:** See ["Delay"](#) on page 246



---

**[ :SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FILE <File>**

Selects the file with I/Q data to be modulated onto the selected carrier.

**Parameters:**

<File>                      <file name>

**Example:**                      See [Example "Generating a multicarrier signal"](#) on page 855

**Manual operation:**    See ["File"](#) on page 246

---

**[ :SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:CONFlit?**

Queries carrier conflicts. A conflict arises when the carriers overlap.

**Return values:**

<Conflict>                      1 | ON | 0 | OFF

**0**

No conflict

\*RST:                      0

**Example:**                      BB:ARB:MCAR:CARR:CONF?

**Usage:**                      Query only

**Manual operation:**    See ["!?"](#) on page 247

---

**[ :SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STATe <State>**

Switches all the carriers in the selected carrier range on or off.

**Parameters:**

<State>                      1 | ON | 0 | OFF

\*RST:                      1

**Example:**                      BB:ARB:MCAR:EDIT:CARR:STAT ON  
Sets all the carriers in the carrier range to ON.

**Manual operation:**    See ["Carrier State"](#) on page 248

---

**[ :SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STARt <Start>**

**[ :SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STOP <Stop>**

Selects the last carrier in the carrier range to which the settings shall apply.

**Parameters:**

<Stop>                      integer

Range:                      0 to 511

\*RST:                      0

**Example:**                      BB:ARB:MCAR:EDIT:CARR:STOP 4  
The carrier range stops at carrier 4.

**Manual operation:**    See ["Carrier Start/Start"](#) on page 248

---



---

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP <Step>**

Sets the step width by which the starting power of the carriers in the defined carrier range is incremented.

**Parameters:**

<Step> float  
 Range: -80 to 80  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB

**Example:**

BB:ARB:MCAR:EDIT:CARR:POW -80dB

Sets a power of -80 dB for the carriers in the carrier range.

BB:ARB:MCAR:EDIT:CARR:POW:STEP 1 dB

The power is incremented by 1dB for each carrier.

That is, the first carrier has -80 dB, the second -79 dB, and so on.

**Manual operation:** See ["Gain Step"](#) on page 248  
 See ["Phase Step"](#) on page 249

---

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer[:START] <Start>**

Sets the power for the individual carriers in the defined carrier range.

**Parameters:**

<Start> float  
 Range: -80 to 0  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB

**Example:**

BB:ARB:MCAR:EDIT:CARR:POW -50 dB

sets the power of the carriers in the carrier range to -50 dB.

**Manual operation:** See ["Gain Start"](#) on page 248

---

**[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe:STEP <Step>**

Sets the step width by which the start phases of the carriers in the defined carrier range is incremented.

**Parameters:**

<Step> float  
 Range: -359.99 to 359.99  
 Increment: 0.01  
 \*RST: 0  
 Default unit: DEG



**Example:**

```
BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG
```

Sets a start phase of 90° for the carriers in the carrier range.

```
BB:ARB:MCAR:EDIT:CARR:PHAS:STEP 1 DEG
```

The start phase is incremented by 1° for each carrier. That is, the first carrier has a start phase of 90°, the second a start phase of 91°, and so on.

---

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:STARt] <Start>
```

Sets the start phase for the individual carriers in the defined carrier range.

**Parameters:**

<Start> float  
 Range: 0 to 359.99  
 Increment: 0.01  
 \*RST: 0  
 Default unit: DEG

**Example:**

```
BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG
```

sets a start phase of 90° for the carriers in the carrier range.

**Manual operation:** See ["Phase Start"](#) on page 248

---

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP <Step>
```

Sets the step width by which the start delays of the carriers in the defined carrier range is incremented.

**Parameters:**

<Step> float  
 Range: -1 to 1  
 Increment: 1E-9  
 \*RST: 0  
 Default unit: s

**Example:**

```
BB:ARB:MCAR:EDIT:CARR:DEL 5 us
```

Sets a start delay of 5 us for the carriers in the carrier range.

```
BB:ARB:MCAR:EDIT:CARR:DEL:STEP 1 us
```

The start delay is incremented by 1us for each carrier. That is, the first carrier has a start delay of 5 us, the second a start delay of 6 us, and so on.

**Manual operation:** See ["Delay Step"](#) on page 249

---

```
[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay[:STARt] <Start>
```

Sets the start delay for the individual carriers in the defined carrier range.



**Parameters:**

<Start> float  
 Range: 0 to 1  
 Increment: 1E-9  
 \*RST: 0  
 Default unit: s

**Example:**

BB:ARB:MCAR:EDIT:CARR:DEL 5us  
 Sets a start delay of 5 us for the carriers in the carrier range.

**Manual operation:** See ["Delay Start"](#) on page 249

**[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:FILE <File>**

Selects the input file. The data of the file are modulated onto the carriers in the defined carrier range.

**Parameters:**

<File> string

**Example:**

BB:ARB:MCAR:EDIT:CARR:FILE  
 "/var/user/temp/IQ\_wcdma"  
 selects input file IQ\_wcdma.

**Manual operation:** See ["Input Waveform File"](#) on page 249

**[SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute**

Adopts the settings for the selected carrier range.

**Example:**

BB:ARB:MCAR:EDIT:CARR:STAR 4  
 BB:ARB:MCAR:EDIT:CARR:STOP 20  
 BB:ARB:MCAR:EDIT:CARR:STAT ON  
 BB:ARB:MCAR:EDIT:CARR:EXEC

**Usage:** Event

**Manual operation:** See ["Apply Assistant Settings"](#) on page 249

**Notch filter commands**

Option: R&S SMBVB-K811.

See also [Chapter 4.7.1, "Required options"](#), on page 200.

<a href="#">[:SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:OFDM:NOTCh</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:NOTCh</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh:CLOCK?</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:OFDM:NOTCh:CLOCK?</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:NOTCh:CLOCK?</a> .....	886
<a href="#">[:SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh:COUNt</a> .....	887
<a href="#">[:SOURce&lt;hw&gt;]:BB:OFDM:NOTCh:COUNt</a> .....	887
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:NOTCh:COUNt</a> .....	887



<code>[SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh&lt;ch&gt;:STATe</code>	887
<code>[SOURce&lt;hw&gt;]:BB:OFDM:NOTCh&lt;ch&gt;:STATe</code>	887
<code>[SOURce&lt;hw&gt;]:BB:ARBitrary:NOTCh&lt;ch&gt;:STATe</code>	887
<code>[SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh&lt;ch&gt;:FREQuency:OFFSet</code>	887
<code>[SOURce&lt;hw&gt;]:BB:OFDM:NOTCh&lt;ch&gt;:FREQuency:OFFSet</code>	887
<code>[SOURce&lt;hw&gt;]:BB:ARBitrary:NOTCh&lt;ch&gt;:FREQuency:OFFSet</code>	887
<code>[SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh&lt;ch&gt;:BWIDth[:ABSolute]</code>	887
<code>[SOURce&lt;hw&gt;]:BB:OFDM:NOTCh&lt;ch&gt;:BWIDth[:ABSolute]</code>	887
<code>[SOURce&lt;hw&gt;]:BB:ARBitrary:NOTCh&lt;ch&gt;:BWIDth[:ABSolute]</code>	887
<code>[SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh&lt;ch&gt;:BWIDth:RELative</code>	888
<code>[SOURce&lt;hw&gt;]:BB:OFDM:NOTCh&lt;ch&gt;:BWIDth:RELative</code>	888
<code>[SOURce&lt;hw&gt;]:BB:ARBitrary:NOTCh&lt;ch&gt;:BWIDth:RELative</code>	888
<code>[SOURce&lt;hw&gt;]:BB:EUTRa:NOTCh:APPLy</code>	888
<code>[SOURce&lt;hw&gt;]:BB:OFDM:NOTCh:APPLy</code>	888
<code>[SOURce&lt;hw&gt;]:BB:ARBitrary:NOTCh:APPLy</code>	888

---

**`[SOURce<hw>]:BB:EUTRa:NOTCh <NotchState>`**

**`[SOURce<hw>]:BB:OFDM:NOTCh <NotchState>`**

**`[SOURce<hw>]:BB:ARBitrary:NOTCh <NotchState>`**

Enables or disables the notch filter.

**Parameters:**

`<NotchState>` 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example"Creating notch filter"](#) on page 857.

**Manual operation:** See ["State"](#) on page 201

---

**`[SOURce<hw>]:BB:EUTRa:NOTCh:CLOCK?`**

**`[SOURce<hw>]:BB:OFDM:NOTCh:CLOCK?`**

**`[SOURce<hw>]:BB:ARBitrary:NOTCh:CLOCK?`**

Queries the current clock frequency of the waveform signal.

Works like the command `[SOURce<hw>]:BB:ARBitrary:CLOCK`.

**Return values:**

`<ChBw>` integer

Range: 400 to 2000E6

\*RST: 1E6

**Example:** See [Example"Creating notch filter"](#) on page 857.

**Usage:** Query only

**Manual operation:** See ["Clock Frequency"](#) on page 202



---

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh:COUNT <NumOfNotch>
[:SOURce<hw>]:BB:OFDM:NOTCh:COUNT <NumOfNotch>
[:SOURce<hw>]:BB:ARBitrary:NOTCh:COUNT <IdPDbNotchedNum>
```

Sets the number of notches.

**Parameters:**

<IdPDbNotchedNum> integer

Range: 1 to 25

\*RST: 1

**Example:** See [Example"Creating notch filter"](#) on page 857.

**Manual operation:** See ["Number of Notches"](#) on page 202

---

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh<ch>:STATe <NotchState>
[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:STATe <NotchValEnable>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:STATe <ValEnable>
```

Enables the particular notch.

**Parameters:**

<ValEnable> 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example"Creating notch filter"](#) on page 857.

**Manual operation:** See ["State"](#) on page 202

---

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh<ch>:FREQUency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:FREQUency:OFFSet <FreqOffs>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:FREQUency:OFFSet <ChBw>
```

Specifies the center frequency of the notch

**Parameters:**

<ChBw> integer

Range: -2000E6 to 2000E6

Increment: dynamic

\*RST: 0

**Example:** See [Example"Creating notch filter"](#) on page 857.

**Manual operation:** See ["Frequency Offset /MHz"](#) on page 202

---

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute] <BwHz>
[:SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth[:ABSolute] <NoBw>
```

Sets the absolute notch bandwidth.

The value is interdependent with the relative bandwidth value, set with the command  
[\[:SOURce<hw>\]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative](#).



That is, you can set the notch bandwidth in either way.

**Parameters:**

<NoBw> float  
 Range: 0 to dynamic  
 Increment: dynamic  
 \*RST: dynamic

**Example:** See [Example "Creating notch filter"](#) on page 857.

**Manual operation:** See ["Notch Bandwidth /MHz"](#) on page 203

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth:RELative <BwPct>
[ :SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative <NoBwRel>
```

Sets the notch bandwidth relative to current clock frequency ([\[ :SOURce<hw>\]:BB:ARBitrary:NOTCh:CLOCK?](#)).

The value is interdependent with the absolute bandwidth value, set with the command [\[ :SOURce<hw>\]:BB:ARBitrary:NOTCh<ch>:BWIDth\[ :ABSolute\]](#).

That is, you can set the notch bandwidth in either way.

**Parameters:**

<NoBwRel> float  
 Range: 0 to 10  
 Increment: 0.01  
 \*RST: 5

**Example:** See [Example "Creating notch filter"](#) on page 857.

**Manual operation:** See ["Notch Bandwidth /%"](#) on page 203

```
[ :SOURce<hw>]:BB:EUTRa:NOTCh:APPLy
[ :SOURce<hw>]:BB:OFDM:NOTCh:APPLy
[ :SOURce<hw>]:BB:ARBitrary:NOTCh:APPLy
```

Adopt the configured settings.

**Example:** See [Example "Creating notch filter"](#) on page 857.

**Usage:** Event

**Manual operation:** See ["Apply"](#) on page 203



## Trigger commands

### Example: Configure a time-based trigger signal

Configuring a time-based trigger is analogous for all digital standards that support this feature. This example illustrates time-based triggering for the arbitrary waveform generator.

You can use the configuration for other digital standards by replacing the `ARBitrary` mnemonic, for example, replace it with `NR5G` for 5G NR digital standard.

```
// *****
Configure an internal time-based trigger signal.
// *****

SOURcel:BB:ARBitrary:TRIGger:SEQuence SINGLE
SOURcel:BB:ARBitrary:TRIGger:MODE INTernal
// Configure time-based trigger settings.
SOURcel:BB:ARBitrary:TRIGger:TIME:DATE 2023,10,1
// Time-based trigger signal date is 2023-10-01 in format YYYY-MM-DD.
SOURcel:BB:ARBitrary:TRIGger:TIME:TIME 11,0,0
// Time-based trigger signal time is 11 a.m. in format hh:mm:ss.
SOURcel:BB:ARBitrary:TRIGger:TIME:STATe 1
// Activates time-based triggering. That means, trigger signal generation, if
// the operating system time matches date and time of the time-based trigger.
SOURcel:BB:ARBitrary:STATe 1

// Query the operating system date and time of your R&S SMBV100B.
SYSTem:DATE?
// Response: "2023,10,1"
// The date matches the date of the time-based trigger.
SYSTem:TIME?
// Response 10,59,50.
// The system time is 10 seconds before the time of the time-based trigger.
// Query if the trigger is active.
SOURcel:BB:ARBitrary:TRIGger:RMODE?
// Response: "STOP"
// Query system time again.
SYSTem:TIME?
// Response 11,0,50.
// The system time equals the time of the time-based trigger.
// Query if the trigger is active.
SOURcel:BB:ARBitrary:TRIGger:RMODE?
// Response: "RUN"
```

### Commands:

<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary[:TRIGger]:SEQuence</a>	890
<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary:TRIGger:SOURce</a>	890
<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary:TRIGger:RMODE?</a>	890
<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary:TRIGger:TIME:DATE</a>	891
<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary:TRIGger:TIME:TIME</a>	891
<a href="#">[SOURce&lt;hw&gt;]:BB:ARBitrary:TRIGger:TIME[:STATe]</a>	892



[SOURce<hw>]:BB:ARbitrary:TRIGger:SLENgth.....	892
[SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit.....	892
[SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute.....	893
[SOURce<hw>]:BB:ARbitrary:TRIGger:EXECute.....	893
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:SYNChronize:OUTPut.....	893
[SOURce<hw>]:BB:ARbitrary:TRIGger:PTIME?.....	893
[SOURce<hw>]:BB:ARbitrary:TRIGger:DELay:UNIT.....	894
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:DELay.....	894
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:TDELay.....	894
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:RDELay?.....	895
[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTeRnal]:INHibit.....	895

---

### [SOURce<hw>]:BB:ARbitrary[:TRIGger]:SEQUence <Sequence>

The command selects the trigger mode.

#### Parameters:

<Sequence>            AUTO | RETRigger | AAUTo | ARETrigger | SINGLE  
                          \*RST:        AUTO

**Example:**            See [Example "Managing waveform files"](#) on page 849

**Manual operation:**   See ["Mode"](#) on page 109

---

### [SOURce<hw>]:BB:ARbitrary:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed.

Provided are:

- Internal triggering by a command (INTernal)
- External trigger signal via one of the User x connectors  
    EGT1: External global trigger
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- EXTeRnal: Setting only  
    Provided only for backward compatibility with other Rohde & Schwarz signal generators.  
    The R&S SMBV100B accepts this value and maps it automatically as follows:  
    EXTeRnal = EGT1

#### Parameters:

<Source>            INTernal|EGT1|EXTeRnal|BBSY  
                          \*RST:        INTernal

**Example:**            See [Example "Managing waveform files"](#) on page 849

**Manual operation:**   See ["Source"](#) on page 110

---

### [SOURce<hw>]:BB:ARbitrary:TRIGger:RMODE?

Queries the status of waveform output.



**Return values:**

<RMode> STOP | RUN

**Example:** see [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**Manual operation:** See ["Running/Stopped"](#) on page 109

**[ :SOURce<hw> ]:BB:ARbitrary:TRIGger:TIME:DATE <Year>, <Month>, <Day>**

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<Year> integer  
Range: 1980 to 9999

<Month> integer  
Range: 1 to 12

<Day> integer  
Range: 1 to 31

**Example:** See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110

**[ :SOURce<hw> ]:BB:ARbitrary:TRIGger:TIME:TIME <Hour>, <Minute>, <Second>**

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<Hour> integer  
Range: 0 to 23

<Minute> integer  
Range: 0 to 59

<Second> integer  
Range: 0 to 59



**Example:** See [Example"Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:TIME[:STATe] <State>**

Activates time-based triggering with a fixed time reference. If activated, the R&S SMBV100B triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

#### **Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example"Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Time Based Trigger"](#) on page 109

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:SEnGth <SLength>**

Defines the length of the signal sequence that is output in the SINGLE trigger mode.

#### **Parameters:**

<SLength> integer  
Maximun value dependents on the selected units [ :  
SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit as follows:  
SAMPle: Max =  $2^{32}-1$   
SEquence: Max = 1000  
Range: 1 to dynamic  
\*RST: 1

**Example:** See [Example"Managing waveform files"](#) on page 849

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit <SLUnit>**

Defines the unit for the entry of the length of the signal sequence to be output in the Single trigger mode.

#### **Parameters:**

<SLUnit> SEquence | SAMPle  
\*RST: SEquence



**Example:** See [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["Signal Duration"](#) on page 112

#### **[SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute**

Stops (arms) waveform output.

**Example:** See [Example "Managing waveform files"](#) on page 849

**Usage:** Event

**Manual operation:** See ["Arm"](#) on page 110

#### **[SOURce<hw>]:BB:ARbitrary:TRIGger:EXECute**

Executes an internal trigger event.

**Example:** See [Example "Managing waveform files"](#) on page 849

**Usage:** Event

**Manual operation:** See ["Execute Trigger"](#) on page 110

#### **[SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal]:SYNChronize:OUTPut <Output>**

Enables signal output synchronous to the trigger event.

##### **Parameters:**

<Output> 1 | ON | 0 | OFF  
\*RST: 1

**Example:** See [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 111

#### **[SOURce<hw>]:BB:ARbitrary:TRIGger:PTIME?**

Queries the internal processing time.

The processing time is the elapsed time between the input of the external trigger event and the output of the baseband signal.

##### **Return values:**

<ArbTrigProcTime> string

**Example:** SOURce1:BB:ARbitrary:TRIGger:PTIME?  
// Response: "210 µs"  
The processing time is 210 µs.

**Usage:** Query only

**Manual operation:** See ["Processing Time"](#) on page 166



---

**[[:SOURce<hw>]:BB:ARbitrary:TRIGger:DElay:UNIT <TrigDelUnit>**

Sets the units the trigger delay is expressed in.

**Parameters:**

<TrigDelUnit>      SAMPLE | TIME  
                          \*RST:      SAMPLE

**Example:**            See [Example "To specify delay and inhibit values in time units"](#) on page 850

**Manual operation:** See ["\(External\) Delay Unit"](#) on page 111

---

**[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXtErnal]:DElay <Delay>**

Specifies the trigger delay in samples.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<Delay>              float  
                          Range:      0 to depends on the sample rate  
                          Increment: 0.01  
                          \*RST:      0  
                          Default unit: sample

**Example:**            see [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 112

---

**[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXtErnal]:TDElay <ExtTimeDelay>**

Specifies the trigger delay for external triggering. The value affects all external trigger signals.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<ExtTimeDelay>      float  
                          Range:      0 to 2147483647 / (clock frequency)  
                          Increment: 1E-9  
                          \*RST:      0  
                          Default unit: s

**Example:**            See [Example "To specify delay and inhibit values in time units"](#) on page 850.

**Manual operation:** See ["\(Specified\) External Delay/\(Specified\) Trigger Delay"](#) on page 112



**[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:RDElay?**

Queries the time (in seconds) an external trigger event is delayed for.

**Return values:**

<ResTimeDelaySec> float

Range: 0 to 688

Increment: 0.25E-9

\*RST: 0

**Example:** See [Example "To specify delay and inhibit values in time units"](#) on page 850

**Usage:** Query only

**Manual operation:** See ["Actual Trigger Delay/Actual External Delay"](#) on page 112

**[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXternal]:INHibit <Inhibit>**

Specifies the number of samples, by which a restart is inhibited.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<Inhibit> integer

Range: 0 to 21.47 \* (clock frequency)

\*RST: 0

Default unit: samples

**Example:** See [Example "Managing waveform files"](#) on page 849.

**Manual operation:** See ["External Inhibit/Trigger Inhibit"](#) on page 111

**Marker commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:MODE</a>	895
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:ONTime</a>	896
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:OFFTime</a>	896
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:PATtern</a>	896
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:PULSe:DIVider</a>	896
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:PULSe:FREQuency?</a>	897
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:DElay</a>	897
<a href="#">[:SOURce&lt;hw&gt;]:BB:ARbitrary:TRIGger:OUTPut&lt;ch&gt;:DINSec?</a>	897

**[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE <Mode>**

Defines the signal for the selected marker output.

For detailed description of the regular marker modes, refer to ["Marker modes"](#) on page 91.



**Parameters:**

<Mode> UNCHanged | REStart | PULSe | PATtern | RATio

**UNCHanged**

A marker signal as defined in the waveform file (tag 'marker mode x') is generated.

\*RST: UNCHanged

**Example:** See [Example "Managing waveform files"](#) on page 849.

**Manual operation:** See ["Marker Mode"](#) on page 166

**[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime <OnTime>**  
**[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime <OffTime>**

Sets the number of samples in the ON and OFF periods.

**Parameters:**

<OffTime> integer  
 Range: 1 to 14913079  
 \*RST: 1

**Example:** see [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["Marker Mode"](#) on page 166

**[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATtern <Pattern>,  
 <BitCount>**

Defines the bit pattern used to generate the marker signal.

**Parameters:**

<Pattern> numeric  
 \*RST: #H2  
 <BitCount> integer  
 0 = marker off, 1 = marker on  
 Range: 1 to 64  
 \*RST: 2

**Example:** See [Example "Managing waveform files"](#) on page 849.

**Manual operation:** See ["Marker Mode"](#) on page 166

**[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>**

Sets the divider for the pulsed marker signal.

**Parameters:**

<Divider> integer  
 Range: 2 to 1024  
 \*RST: 2



**Example:** See [Example "Managing waveform files"](#) on page 849

**Manual operation:** See ["Marker Mode"](#) on page 166

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?**

Queries the pulse frequency of the pulsed marker signal. The pulse frequency is derived by dividing the symbol rate by the divider.

##### **Return values:**

<Frequency> float  
Increment: 0.001

**Example:** see [Example "Managing waveform files"](#) on page 849

**Usage:** Query only

**Manual operation:** See ["Marker Mode"](#) on page 166

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay <Delay>**

Defines the delay between the signal on the marker outputs and the start of the signals.

##### **Parameters:**

<Delay> integer  
Range: 0 to depends on other values  
Increment: 1  
\*RST: 0  
Default unit: Symbol

**Example:** See [Example "Managing waveform files"](#) on page 849.

**Manual operation:** See ["Delay"](#) on page 114

#### **[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DINSec?**

Queries the marker delay in microseconds.

You can define a marker delay in samples with `[ :SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay`.

##### **Return values:**

<DelayInS> float  
Range: 0 to 16777215  
Increment: 1E-3  
\*RST: 0

**Usage:** Query only

**Manual operation:** See ["Delay \(Time\)"](#) on page 166



## Clock commands

**[[:SOURce<hw>]:BB:ARbitrary:CLOCK:SOURce <Source>**

Selects the clock source:

- **INTernal**: Internal clock reference

### Parameters:

<Source>                      INTernal  
                                  \*RST:            INTernal

**Example:**                      See [Example "Managing waveform files"](#) on page 849.

**Manual operation:**    See ["Clock Source"](#) on page 115

### 13.17.4.4 SOURce1:BB:MCCW subsystem

This subsystem contains the commands for setting the Multi-Carrier CW signals.



The generation of multi-carrier CW signals requires an instrument equipped with the software options R&S SMBVB-K61.

### Common Suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
SOURce<ch>	1	Available baseband signals
OUTPut<ch>	1 to 3	Available markers

### Required options

See [Chapter 4.11.1, "Required options"](#), on page 253

### Programming examples

The following examples illustrate how to generate multi-carrier signals for dedicated applications.

#### Example: Testing the frequency response of a DUT

```
// *****
// Reset the instrument first
// *****
*RST; *CLS

// *****
// Configuring and enabling the multi-carrier signal
// *****
SOURce1:BB:MCCW:CARRIER:COUNt 81
SOURce1:BB:MCCW:CARRIER:SPACing 1E6
```



```
// Set the number of carriers and their distance
// Further settings stay in default state, for example, trigger settings.
SOURcel:BB:MCCW:STATE ON
// Enable signal generation
OUTPut ON
// Enable the signal output

// *****
// Saving the current settings
// *****
MMEMemory:MDIR '/var/user/savrcl'
// Create a new directory "savrcl"
*SAV 4
MMEMemory:STORE:STATE 4,"/var/user/savrcl/mccw_SSB.savrcltxt"
// Save the current settings in an intermediate memory with number 4.
// Save the settings file in the specified directory, also specify the complete
// path and filename.
```

To visualize the configured signal as in [Example "Testing the frequency response of a DUT"](#) on page 898, proceed as follows:

1. Switch to local mode with the following command:  
&NREN
2. To monitor the single carriers, select "Multi-carrier Continuous Wave" > "Carrier Graph".

### Example: Testing the image rejection of an SSB filter

This example generates a multi-carrier single sideband signal as shown in [Figure 13-1](#).

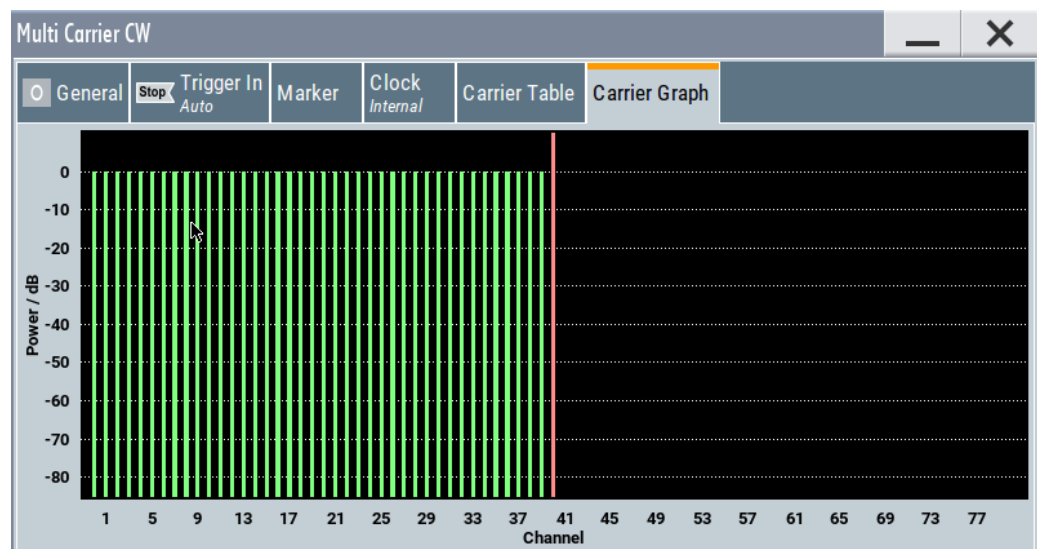


Figure 13-1: Multi-carrier signal to test the image rejection of an SSB filter

```
// *****
// Reset the instrument first
```




```
// *****
*RST; *CLS

// *****
// Configuring and enabling the multi-carrier signal
// *****
SOURcel:BB:MCCW:CARRier:COUNT 81
SOURcel:BB:MCCW:CARRier:SPACing 1E6
// Set the number of carriers and their distance
// Further settings stay in default state, for example, trigger settings.
SOURcel:BB:MCCW:EDIT:CARRier:START 40
SOURcel:BB:MCCW:EDIT:CARRier:STOP 80
SOURcel:BB:MCCW:EDIT:CARRier:STATE OFF
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Configure the carrier table for the single sideband signal:
// Set the carriers no. 40 to 80 to "OFF"
SOURcel:BB:MCCW:STATE ON
// Enable signal generation
OUTPut ON
// Enable signal output.
```

### Example: Generating a composed multi-carrier signal

This example generates a multi-carrier signal as shown in [Figure 13-2](#).

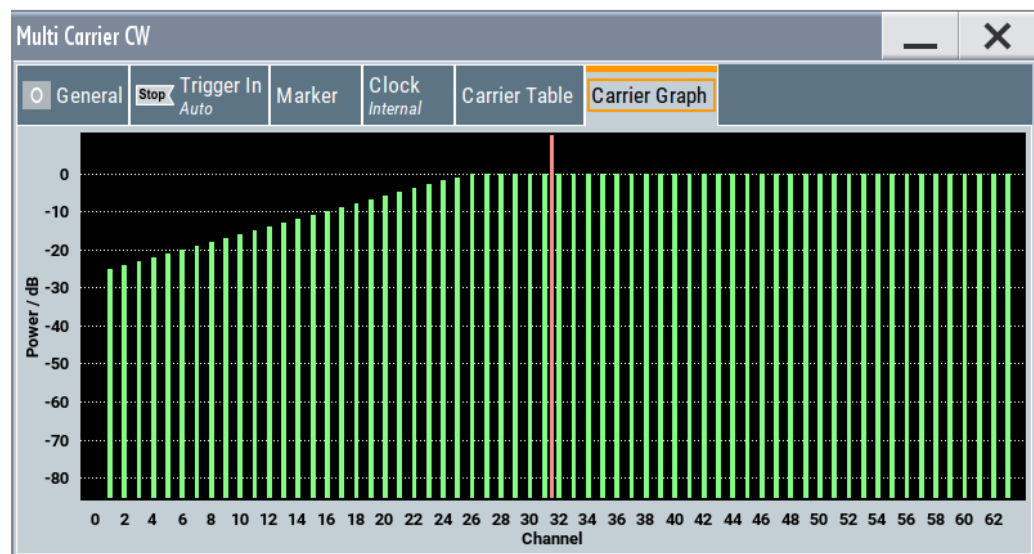

**Figure 13-2: Composed multi-carrier signal**

```
// *****
// Reset the instrument first
// *****
*RST; *CLS

// *****
// Configure the multi-carrier signal
// *****
```



```

SOURcel:BB:MCCW:CARRier:COUNT 100
SOURcel:BB:MCCW:CARRier:SPACing 500000
// Setup 100 carriers with a spacing of 500kHz
SOURcel:BB:MCCW:CLOCK?
// Return value 128000000
SOURcel:BB:MCCW:CFACTOR:MODE SLOW
SOURcel:BB:MCCW:CFACTOR 3
SOURcel:BB:MCCW:CFACTOR:ACTual?
// Response: "3"

// *****
// Adjust the settings of a group of carriers
// *****
SOURcel:BB:MCCW:CARRier:LIST:POWER -6,-12,-18,-12,-6,0
// Set the power levels for carriers no. 0 to 5 to -10dB,-15dB,-20dB,-15dB,-10dB,0dB
SOURcel:BB:MCCW:CARRier:LIST:STATE ON,ON,ON,ON,ON,ON,OFF,ON
// Set the state of the carriers no. 0 to 7
SOURcel:BB:MCCW:EDIT:CARRier:START 15
SOURcel:BB:MCCW:EDIT:CARRier:STOP 35
SOURcel:BB:MCCW:EDIT:CARRier:STATE ON
SOURcel:BB:MCCW:EDIT:CARRier:POWER:STAR -10
SOURcel:BB:MCCW:EDIT:CARRier:POWER:STEP 0.5
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Activates the carriers no. 15 to 35
// Increase the power in 0.5dB steps starting with a power level of -10dB
// Apply the settings
SOURcel:BB:MCCW:CARRier:POWER 38,0
SOURcel:BB:MCCW:CARRier:STATE 38,1
// Set a power level of 0dB for carrier no. 38 and activates it
SOURcel:BB:MCCW:EDIT:CARRier:START 41
SOURcel:BB:MCCW:EDIT:CARRier:STOP 61
SOURcel:BB:MCCW:EDIT:CARRier:STATE ON
SOURcel:BB:MCCW:EDIT:CARRier:POWER:START 0
SOURcel:BB:MCCW:EDIT:CARRier:POWER:STEP -0.5
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Activates the carriers no. 41 to 61
// Decrease the power in 0.5dB steps starting with a power level of 0dB
// Apply the settings.
SOURcel:BB:MCCW:EDIT:CARRier:START 70
SOURcel:BB:MCCW:EDIT:CARRier:STOP 85
SOURcel:BB:MCCW:EDIT:CARRier:STATE ON
SOURcel:BB:MCCW:EDIT:CARRier:EXECute
// Activates the carriers no. 70 to 85.
// Apply the settings.

// *****
// Configuring the clock settings
// *****
SOURcel:BB:MCCW:CLOCK:SOURce INTERNAL

```



```
// *****
// Configuring and enabling marker signals
// *****
SOURcel:BB:MCCW:TRIGger:OUTPut1:MODE REStArt
SOURcel:BB:MCCW:TRIGger:OUTPut2:MODE PULSe
SOURcel:BB:MCCW:TRIGger:OUTPut2:PULSe:DIVider 5
SOURcel:BB:MCCW:TRIGger:OUTPut2:PULSe:FREQuency?
SOURcel:BB:MCCW:TRIGger:OUTPut3:MODE PATtern
SOURcel:BB:MCCW:TRIGger:OUTPut3:PATtern #HE0F52,20
// SOURcel:BB:MCCW:TRIGger:OUTPut1:MODE RATio
// SOURcel:BB:MCCW:TRIGger:OUTPut1:ONTime 40
// SOURcel:BB:MCCW:TRIGger:OUTPut1:OFFTime 20
SOURcel:BB:MCCW:TRIGger:OUTPut2:DELay 16

// *****
// Configuring and enabling signal triggering
// *****
SOURcel:BB:MCCW:TRIGger:SEQuence SINGle
SOURcel:BB:MCCW:TRIGger:SLENgth 200
// The first 200 samples of the current waveform will be output after the next
// trigger event.
SOURcel:BB:MCCW:TRIGger:SEQuence ARETriggeR
SOURcel:BB:MCCW:TRIGger:SOURce INTernal
// SOURcel:BB:MCCW:TRIGger:SOURce EGT1
// Provide an external global trigger signal at the connector that expects
// an external global trigger signal.
// SOURcel:BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut ON
// SOURcel:BB:MCCW:TRIGger:EXTernal:DELay 200
// SOURcel:BB:MCCW:TRIGger:EXTernal:INHibit 100

// *****
// Applying the settings and enabling signal generation
// *****
*TRG
SOURcel:BB:MCCW:STATe ON
// Stop the internal trigger manually.
SOURcel:BB:MCCW:TRIGger:ARM:EXECute
// Execute manual internal trigger, i.e. restarting signal generation
SOURcel:BB:MCCW:TRIGger:EXECute
SOURcel:BB:MCCW:TRIGger:RMODE?
// Response: "RUN"
```

### General commands

[SOURce<hw>]:BB:MCCW:PRESet.....	903
[SOURce<hw>]:BB:MCCW:STATe.....	903
[SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	903
[SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	904
[SOURce<hw>]:BB:MCCW:CLOCK?.....	904
[SOURce<hw>]:BB:MCCW:CFACtor:MODE.....	904
[SOURce<hw>]:BB:MCCW:CFACtor.....	904



[SOURce<hw>]:BB:MCCW:CFACtor:ACTual?	905
[SOURce<hw>]:BB:MCCW:CARRier:STATe	905
[SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe	905
[SOURce<hw>]:BB:MCCW:CARRier:PHASe	906
[SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe	906
[SOURce<hw>]:BB:MCCW:CARRier:POWer	907
[SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer	907
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START]	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START]	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:START	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute	909

---

#### [SOURce<hw>]:BB:MCCW:PRESet

Sets all multi carrier signal parameters to their default values.

**Example:** See ["Programming examples"](#) on page 898

**Usage:** Event

**Manual operation:** See ["Set to Default"](#) on page 255

---

#### [SOURce<hw>]:BB:MCCW:STATe <State>

Enables/disables the multi carrier CW signal.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["State"](#) on page 254

---

#### [SOURce<hw>]:BB:MCCW:CARRier:COUNT <Count>

Sets the number of carriers in the multi carrier CW signal.

**Parameters:**

<Count> integer  
 Range: 1 to 160001  
 \*RST: 64

**Example:** see ["Programming examples"](#) on page 898

**Manual operation:** See ["Number of Carriers"](#) on page 255



---

**[[:SOURce<hw>]:BB:MCCW:CARRier:SPACing <Spacing>**

Sets the carrier spacing.

**Parameters:**

<Spacing> float  
 Value range depends on the available bandwidth and the number of carriers, see ["Cross-reference between total bandwidth, carrier spacing, and number of carriers"](#) on page 255.  
 Range: 0 to depends on the installed options, e.g. 120E6  
 Increment: 0.01  
 \*RST: 10E3

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Spacing"](#) on page 255

---

**[[:SOURce<hw>]:BB:MCCW:CLOCK?**

Queries the output clock rate. The output clock rate depends on the number of carriers and on the selected carrier spacing.

**Return values:**

<Clock> float  
 Range: 0 to Max  
 Increment: 1E-3  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Usage:** Query only

**Manual operation:** See ["Clock Frequency"](#) on page 255

---

**[[:SOURce<hw>]:BB:MCCW:CFACtor:MODE <Mode>**

Sets the mode by which automatic settings minimize the crest factor or hold it at a chosen value.

**Parameters:**

<Mode> OFF | CHIRp | SLOW  
**SLOW**  
 corresponds to the manual control "Target Crest"  
 \*RST: CHIRp

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Optimize Crest Factor Mode"](#) on page 256

---

**[[:SOURce<hw>]:BB:MCCW:CFACtor <CFactor>**

Sets the desired crest factor, if the optimization mode target crest factor is used.



**Parameters:**

<CFactor> float  
 Range: 0 to 30  
 Increment: 0.01  
 \*RST: 3

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Desired Crest Factor"](#) on page 256

**[[:SOURce<hw>]:BB:MCCW:CFACtor:ACTual?**

Queries the actual Crest Factor for optimization mode target crest.

**Return values:**

<Actual> float  
 Range: 0 to 100  
 Increment: 0.01  
 \*RST: 3

**Example:** See ["Programming examples"](#) on page 898

**Usage:** Query only

**[[:SOURce<hw>]:BB:MCCW:CARRier:STATe <CarrierIndex>, <State>**

Switches the selected carrier on or off.

**Parameters:**

<CarrierIndex> integer  
 Range: 0 to lastCarrier  
 <State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Table"](#) on page 258

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe <Stat0[,Stat1..]>]****[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe? <Start>, <Count>**

Switches the carrier on or off with the aid of a value list.

The first value in the list is assigned to the carrier with index 0, the second value to the carrier with index 1, etc. The maximum length corresponds to the maximum number of multi carriers. There is no need to enter all the values every time. Values not set by the value list are set with the default values provided they have already been explicitly set by a previous command. If this is the case, the values continue to apply until overwritten.

**Setting parameters:**

<Stat0[,Stat1..]> ON | OFF



**Query parameters:**

<Start>	integer start carrier index Range: 0 to lastCarrier
<Count>	integer number of carriers in the carrier range, starting from the <Start> carrier Range: 1 to lastCarrier

**Return values:**

<State[,State..]>	select
-------------------	--------

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Table"](#) on page 258

**[[:SOURce<hw>]:BB:MCCW:CARRier:PHASe <CarrierIndex>, <Phase>**

For disabled optimization of the crest factor, sets the start phase of the selected carrier.

**Parameters:**

<CarrierIndex>	integer Range: 0 to lastCarrier
<Phase>	float Range: 0 to 359.99 Increment: 0.01 *RST: 0 Default unit: DEG

**Example:** see ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Table"](#) on page 258

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe <Phas0[,Phas1..]>]**

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe? [<Start>[, <Count>]]**

Sets the start phase of the carrier with the aid of a value list.

**Setting parameters:**

<Phas0[,Phas1..]>	float Range: 0 to 360 Increment: 0.01 *RST: 0 Default unit: DEG
-------------------	---

**Query parameters:**

<Start>	integer start carrier index Range: 0 to lastCarrier
---------	---



<Count> integer  
 number of carriers in the carrier range, starting from the  
 <Start> carrier  
 Range: 1 to max

**Return values:**

<Phas[,Phas..]> float

**Example:** see ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Table"](#) on page 258

**[[:SOURce<hw>]:BB:MCCW:CARRier:POWer <CarrierIndex>, <Power>**

Sets the power of the selected carrier.

**Parameters:**

<CarrierIndex> integer  
 Range: 0 to lastCarrier  
 <Power> float  
 Range: -80 to 0  
 Increment: 0.01  
 \*RST: 0

**Example:** see ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Table"](#) on page 258

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer <Pow0[,Pow1..]>]**

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer? <Start>, <Count>**

Sets the power of the carrier with the aid of a value list.

**Setting parameters:**

<Pow0[,Pow1..]> float  
 Increment: 0.01  
 \*RST: 0 dB

**Query parameters:**

<Start> integer  
 start carrier index  
 Range: 0 to lastCarrier  
 <Count> integer  
 number of carriers in the carrier range, starting from the  
 <Start> carrier  
 Range: 1 to lastCarrier

**Return values:**

<Pow[,Pow..]> float

**Example:** see ["Programming examples"](#) on page 898



**Manual operation:** See ["Carrier Table"](#) on page 258

---

```
[ :SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START] <Start>
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START] <Start>
```

Sets the power/pahse for the starting carrier. The power of the remaining carriers is stepped up or down by the power specified with the [\[ :SOURce<hw>\]:BB:MCCW:EDIT:CARRier:POWer:STEP](#) command.

**Parameters:**

<Start> float  
 Range: -80 to 0  
 Increment: 0.01  
 \*RST: 0

**Example:** see ["Programming examples"](#) on page 898

**Manual operation:** See ["Power Start"](#) on page 258

---

```
[ :SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP <Step>
```

For disabled optimization of the crest factor, sets the step width by which the start phase of the carriers in the defined carrier range is incremented.

**Parameters:**

<Step> float  
 Range: -359.99 to 359.99  
 Increment: 0.01  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Phase Step"](#) on page 258

---

```
[ :SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP <Step>
```

Sets the step width by which the starting power of the carriers in the defined carrier range is incremented.

**Parameters:**

<Step> float  
 Range: -80 to 80  
 Increment: 0.01  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Power Step"](#) on page 258



---

**[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:START <Start>**

**[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP <Stop>**

Defines the first/last carrier in the carrier range to which joint configuration applies.

**Parameters:**

<Stop> integer  
 Range: 0 to 8191  
 \*RST: 0

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier Start/Stop"](#) on page 257

---

**[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe <State>**

Switches all the carriers in the selected carrier range on or off.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Carrier State"](#) on page 257

---

**[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute**

Adopts the settings for the carrier range.

**Example:** See ["Programming examples"](#) on page 898

**Usage:** Event

**Manual operation:** See ["Accept"](#) on page 258

**Trigger commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW[:TRIGger]:SEQUence</a>	910
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:SOURce</a>	910
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:RMODE?</a>	910
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:TIME:DATE</a>	911
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:TIME:TIME</a>	911
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:TIME[:STATe]</a>	912
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:SLENgth</a>	912
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:ARM:EXECute</a>	912
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:EXECute</a>	912
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:EXTErnal:SYNChronize:OUTPut</a>	913
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger[:EXTErnal&lt;ch&gt;]:DELay</a>	913
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger[:EXTErnal&lt;ch&gt;]:INHibit</a>	913



---

**[[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence <Sequence>**

Selects the trigger mode. For detailed description of the trigger modes, refer to ["Impact of the trigger modes on the signal generation"](#) on page 94.

**Parameters:**

<Sequence>            AUTO | RETRigger | AAUTo | ARETrigger | SINGLE  
 \*RST:                AUTO

**Example:**            See ["Programming examples"](#) on page 898

**Manual operation:**   See ["Mode"](#) on page 109

---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce <Source>**

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTernal)
- External trigger signal via one of the User x connectors  
 EGT1: External global trigger
- In primary-secondary instrument mode, the external baseband synchronization signal (BBSY)
- EXTernal: Setting only  
 Provided only for backward compatibility with other Rohde & Schwarz signal generators.  
 The R&S SMBV100B accepts this value and maps it automatically as follows:  
 EXTernal = EGT1

**Parameters:**

<Source>                INTernal|EGT1|EXTernal|BBSY  
 \*RST:                INTernal

**Example:**            See ["Programming examples"](#) on page 898

**Manual operation:**   See ["Source"](#) on page 110

---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?**

Queries the status of signal generation for all trigger mode, if multi-carrier CW generation is on.

**Return values:**

<RMode>                STOP | RUN

**Example:**            See ["Programming examples"](#) on page 898

**Usage:**                Query only

**Manual operation:**   See ["Running/Stopped"](#) on page 109



---

**[ :SOURce<hw>]:BB:MCCW:TRIGger:TIME:DATE** <Year>, <Month>, <Day>

Sets the date for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this date via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<Year>	integer
	Range: 1980 to 9999
<Month>	integer
	Range: 1 to 12
<Day>	integer
	Range: 1 to 31

**Example:** See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110

---

**[ :SOURce<hw>]:BB:MCCW:TRIGger:TIME:TIME** <Hour>, <Minute>, <Second>

Sets the time for a time-based trigger signal. For trigger modes single or armed auto, you can activate triggering at this time via the following command:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:STATe

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<Hour>	integer
	Range: 0 to 23
<Minute>	integer
	Range: 0 to 59
<Second>	integer
	Range: 0 to 59

**Example:** See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:** See ["Trigger Time"](#) on page 110



---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:TIME[:STATe] <State>**

Activates time-based triggering with a fixed time reference. If activated, the R&S SMBV100B triggers signal generation when its operating system time matches a specified time.

Specify the trigger date and trigger time with the following commands:

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:DATE

SOURce<hw>:BB:<DigStd>:TRIGger:TIME:TIME

<DigStd> is the mnemonic for the digital standard, for example, ARB. Time-based triggering behaves analogously for all digital standards that support this feature.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
                              \*RST:            0

**Example:**                See [Example "Configure a time-based trigger signal"](#) on page 889.

**Manual operation:**    See ["Time Based Trigger"](#) on page 109

---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:SLENgth <SLength>**

Defines the length of the signal sequence to be output in the "Single" trigger mode.

**Parameters:**

<SLength>                integer  
                              Range:            1 to 1000  
                              \*RST:            1  
                              Default unit: samples

**Example:**                See ["Programming examples"](#) on page 898

**Manual operation:**    See ["Signal Duration"](#) on page 112

---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute**

Stops signal generation.

**Example:**                See ["Programming examples"](#) on page 898

**Usage:**                    Event

**Manual operation:**    See ["Arm"](#) on page 110

---

**[[:SOURce<hw>]:BB:MCCW:TRIGger:EXECute**

Executes a trigger.

**Example:**                See ["Programming examples"](#) on page 898

**Usage:**                    Event



**Manual operation:** See ["Execute Trigger"](#) on page 110

---

**[SOURce<hw>]:BB:MCCW:TRIGger:EXtErnal:SYNChronize:OUTPut <Output>**

Enables signal output synchronous to the trigger event.

**Parameters:**

<Output> 1 | ON | 0 | OFF  
\*RST: 1

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["Sync. Output to Ext. Trigger/Sync. Output to Trigger"](#) on page 111

---

**[SOURce<hw>]:BB:MCCW:TRIGger[:EXtErnal<ch>]:DELay <Delay>**

Specifies the trigger delay in samples.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<Delay> float  
Range: 0 to 2147483647  
Increment: 0.01  
\*RST: 0  
Default unit: samples

**Example:** See ["Programming examples"](#) on page 898.

**Manual operation:** See ["\(\(Specified\) External Delay/\(\(Specified\) Trigger Delay\)"](#) on page 112

---

**[SOURce<hw>]:BB:MCCW:TRIGger[:EXtErnal<ch>]:INHibit <Inhibit>**

Specifies the number of samples, by which a restart is inhibited following an external trigger event.

Maximum trigger delay and trigger inhibit values depend on the installed options. See ["Specifying delay and inhibit values"](#) on page 100.

**Parameters:**

<Inhibit> integer  
Range: 0 to 21.47 \* (clock frequency)  
\*RST: 0  
Default unit: sample

**Example:** See ["Programming examples"](#) on page 898

**Manual operation:** See ["External Inhibit/Trigger Inhibit"](#) on page 111



**Marker commands**

<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:MODE.....</a>	914
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:ONTime.....</a>	914
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:OFFTime.....</a>	914
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:PATtern.....</a>	914
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:PULSe:DIVider.....</a>	915
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:PULSe:FREQuency?.....</a>	915
<a href="#">[:SOURce&lt;hw&gt;]:BB:MCCW:TRIGger:OUTPut&lt;ch&gt;:DELay.....</a>	915

**[\[:SOURce<hw>\]:BB:MCCW:TRIGger:OUTPut<ch>:MODE <Mode>](#)**

Defines the signal for the selected marker output. For detailed description of the regular marker modes, refer to "[Marker modes](#)" on page 91.

**Parameters:**

<Mode>                      REStart | PULSe | PATtern | RATio  
                               \*RST:        REStart

**Example:**                See "[Programming examples](#)" on page 898

**Manual operation:**    See "[Mode](#)" on page 113

**[\[:SOURce<hw>\]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime <OnTime>](#)****[\[:SOURce<hw>\]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime <OffTime>](#)**

Sets the number of samples in the off period of the corresponding marker signal.

**Parameters:**

<OffTime>                integer  
                               Range:        1 to 16777215  
                               \*RST:        1

**Example:**                see "[Programming examples](#)" on page 898

**Manual operation:**    See "[Mode](#)" on page 113

**[\[:SOURce<hw>\]:BB:MCCW:TRIGger:OUTPut<ch>:PATtern <Pattern>, <BitCount>](#)**

Defines the bit pattern used to generate the marker signal.

**Parameters:**

<Pattern>                numeric  
                               \*RST:        #H2

<BitCount>               integer  
                               0 = marker off, 1 = marker on  
                               Range:        1 to 64  
                               \*RST:        2

**Example:**                See "[Programming examples](#)" on page 898.

**Manual operation:**    See "[Mode](#)" on page 113



---

**[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>**

Sets the divider for pulse marker mode.

**Parameters:**

<Divider>                      integer  
                                     Range:        2 to 1024  
                                     \*RST:        2

**Example:**                      See ["Programming examples"](#) on page 898

**Manual operation:**        See ["Mode"](#) on page 113

---

**[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?**

Queries the pulse frequency of the pulsed marker signal.

**Return values:**

<Frequency>                    float  
                                     Increment: 1E-3

**Example:**                      see ["Programming examples"](#) on page 898

**Usage:**                        Query only

**Manual operation:**        See ["Mode"](#) on page 113

---

**[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay <Delay>**

Defines the delay between the signal on the marker outputs and the start of the signals, expressed as number of samples.

**Parameters:**

<Delay>                        float  
                                     Range:        0 to 16777215  
                                     Increment: 1  
                                     \*RST:        0

**Example:**                      See ["Programming examples"](#) on page 898.

**Manual operation:**        See ["Delay"](#) on page 114

---

**Clock commands**

[\[:SOURce<hw>\]:BB:MCCW:CLOCK:SOURce](#)..... 915

---

**[:SOURce<hw>]:BB:MCCW:CLOCK:SOURce <Source>**

Selects the clock source:

- INTernal: Internal clock reference



**Parameters:**

<Source>                    INTernal  
                               \*RST:        INTernal

**Example:**                See ["Programming examples"](#) on page 898.

**Manual operation:**    See ["Clock Source"](#) on page 115

**13.17.4.5 SOURce:AWGN subsystem**

The SOURce:AWGN subsystem contains the commands for setting the noise generator.

**Required options**

See [Chapter 5.1.1, "Required options"](#), on page 267.

**Programming Examples****Example: Generating a pure noise signal**

The following example generates a pure noise signal with specified bandwidth and noise level.

```
SOURce1:AWGN:MODE ONLY
SOURce1:AWGN:BWIDth 3840000
SOURce1:AWGN:BWIDth:RATio 2
SOURce1:AWGN:STATe ON
SOURce1:AWGN:BWIDth:NOISe?
// Response: 7680000
SOURce1:AWGN:FREQuency:CENTer:OFFSet 1000000
// Shifts the noise signal by 1 MHz relative to the carrier frequency.
SOURce1:AWGN:DISP:MODE RFA
SOURce1:AWGN:POWer:NOISe -80
// SOURce1:POWer:LEVel:IMMediate:AMPlitude?
// Response: -80
SOURce1:AWGN:POWer:NOISe:TOTal?
```

**Example: Generating a CW interferer signal**

The following example generates a CW interferer signal with specified target frequency and level.

```
SOURce1:AWGN:MODE CW
SOURce1:AWGN:FREQuency:TARGet 20000000
SOURce1:AWGN:STATe ON
SOURce1:AWGN:FREQuency:RESult?

SOURce1:AWGN:POWer:RMODE CARRier
SOURce1:AWGN:CNRatio 10
SOURce1:AWGN:POWer:CARRier -80
```



```
// the Level display indicates the PEP of the carrier
// SOURcel:POWer:LEVel:IMMediate:AMPlitude?
// Response: -80
// Query the power of the interfering signal
SOURcel:AWGN:POWer:NOISe?
// Response: -90
SOURcel:AWGN:POWer:SUM?
// Response: -79.5860731484178
SOURcel:AWGN:POWer:SUM:PEP?
// Response: -80
```

### Example: Generating an additive noise signal

The following example shows how to adjust the AWGN settings to generate a signal with the following characteristics:

- The carrier signal is an uplink EUTRA/LTE signal with:
  - "Channel Bandwidth = 1.4 GHz", i.e. "Occupied Bandwidth = 1.080 MHz"
  - "RF Frequency = 1.950 GHz"
  - "RF Level = -76 dBm"
- Required is an SNR of 12.7 dB

```
SOURcel:FREQuency:CW 1950000000
SOURcel:POWer:LEVel:IMMediate:AMPlitude -76

SOURcel:AWGN:MODE ADD
// set the system bandwidht to the occupied bandwidth
SOURcel:AWGN:BWIDth 1080000
SOURcel:AWGN:BWIDth:RATio 1.5
SOURcel:AWGN:STATe ON
SOURcel:AWGN:BWIDth:NOISe?
// Response: 1620000

SOURcel:AWGN:DISP:MODE RFA
SOURcel:AWGN:POWer:MODE CN
SOURcel:AWGN:POWer:RMODE CARRier
SOURcel:AWGN:BRATe?
// Response: 100000
SOURcel:AWGN:CNRatio 12.7
SOURcel:AWGN:ENRatio?
// Response: 23.0342375548695
SOURcel:AWGN:POWer:CARRier?
// Response: -76
// the Level display indicates the PEP of the carrier

// Query the resulting noise power, in the system and total bandwidht
SOURcel:AWGN:POWer:NOISe?
// Response: -88.7
SOURcel:AWGN:POWer:NOISe:TOTal?
```



```
// Response: -88.7
// Query the carrier+noise power and PEP
SOURce1:AWGN:POWer:SUM?
// Response: -75.7728170942726
SOURce1:AWGN:POWer:SUM:PEP?
// Response: -76
```

## General commands

[SOURce<hw>]:AWGN:STATe.....	918
[SOURce<hw>]:AWGN:MODE.....	918
[SOURce<hw>]:AWGN:BWIDth.....	919
[SOURce<hw>]:AWGN:BWIDth:RATio.....	919
[SOURce<hw>]:AWGN:BWIDth:NOISe?.....	919
[SOURce<hw>]:AWGN:DISP:MODE.....	920
[SOURce<hw>]:AWGN:POWer:MODE.....	920
[SOURce<hw>]:AWGN:POWer:RMODE.....	920
[SOURce<hw>]:AWGN:BRATe.....	920
[SOURce<hw>]:AWGN:CNRatio.....	921
[SOURce<hw>]:AWGN:ENRatio.....	921
[SOURce<hw>]:AWGN:POWer:CARRier.....	921
[SOURce<hw>]:AWGN:POWer:NOISe.....	921
[SOURce<hw>]:AWGN:POWer:NOISe:TOTal?.....	922
[SOURce<hw>]:AWGN:POWer:SUM?.....	922
[SOURce<hw>]:AWGN:POWer:SUM:PEP?.....	922
[SOURce<hw>]:AWGN:FREQuency:CENTer:OFFSet.....	923
[SOURce<hw>]:AWGN:FREQuency:TARGet.....	923
[SOURce<hw>]:AWGN:FREQuency:RESult?.....	923

---

### [SOURce<hw>]:AWGN:STATe <State>

Activates or deactivates the AWGN generator.

#### Parameters:

<State>                    1 | ON | 0 | OFF  
                              \*RST:            0

**Example:**                See [Example "Generating a pure noise signal"](#) on page 916.

**Manual operation:**    See ["State"](#) on page 272

---

### [SOURce<hw>]:AWGN:MODE <Mode>

Determines how the interfering signal is generated.

#### Parameters:

<Mode>                    ONLY | ADD | CW

#### **ADD**

The AWGN noise signal is added to the baseband signal.



**ONLY**

The pure AWGN noise signal is modulated to the carrier. The connection to the baseband is interrupted

**CW**

The sine interfering signal is added to the baseband signal.

\*RST: ADD

**Example:** See [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Mode"](#) on page 273

**[:SOURce<hw>]:AWGN:BWIDth <BWidth>**

Sets the system bandwidth.

**Parameters:**

<BWidth> float  
 Range: 1000 to 80E6  
 Increment: 100  
 \*RST: 3.84E6

**Example:** See [Example"Generating an additive noise signal"](#) on page 917.

**Manual operation:** See ["System Bandwidth"](#) on page 273

**[:SOURce<hw>]:AWGN:BWIDth:RATio <Ratio>**

Sets the ratio of minimum real noise bandwidth to system bandwidth, see also ["Signal and noise parameters"](#) on page 268.

**Parameters:**

<Ratio> float  
 Range: 1 to Max  
 Increment: 0.1  
 \*RST: 1

**Example:** see [Example"Generating an additive noise signal"](#) on page 917.

**Manual operation:** See ["Minimum Noise/System Bandwidth Ratio"](#) on page 273

**[:SOURce<hw>]:AWGN:BWIDth:NOISe?**

Queries the real noise bandwidth.

**Return values:**

<Noise> float  
 Range: 0 to 200E6  
 Increment: 100  
 \*RST: 0

**Example:** See [Example"Generating an additive noise signal"](#) on page 917.

**Usage:** Query only



**Manual operation:** See ["Noise Bandwidth"](#) on page 278

**[SOURce<hw>]:AWGN:DISP:MODE <Mode>**

Sets the output to that the AWGN settings are related.

**Parameters:**

<Mode> RFA | IQOUT1  
\*RST: RF

**Example:** See [Example"Generating an additive noise signal"](#) on page 917.

**Manual operation:** See ["Show Powers For Output"](#) on page 275

**[SOURce<hw>]:AWGN:POWer:MODE <Mode>**

Selects the mode for setting the noise level.

**Parameters:**

<Mode> CN | SN | EN  
\*RST: SN

**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Set Noise Power Via"](#) on page 275

**[SOURce<hw>]:AWGN:POWer:RMODE <RMode>**

Determines whether the carrier or the noise level is kept constant when the C/N value or Eb/N0 value is changed.

**Parameters:**

<RMode> CARRier | NOISe  
\*RST: CARRier

**Example:** See [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Reference Mode"](#) on page 275

**[SOURce<hw>]:AWGN:BRATe <BRate>**

Sets the bit rate used for calculation of bit energy to noise power ratio.

Valid units are bps, kbps and mabps as well as b/s, kb/s and mab/s.

**Parameters:**

<BRate> float  
Range: 400 to depends on the installed options  
Increment: 0.001  
\*RST: 100000

**Example:** see [Example"Generating an additive noise signal"](#) on page 917



**Manual operation:** See ["Bit Rate"](#) on page 275

**[SOURce<hw>]:AWGN:CNRatio <CnRatio>**

Sets the carrier/interferer ratio.

**Parameters:**

<CnRatio> float  
 Range: -50 to 45  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Carrier/Noise Ratio, Signal/Noise Ratio"](#) on page 275

**[SOURce<hw>]:AWGN:ENRatio <EnRatio>**

Sets the ratio of bit energy to noise power density.

**Parameters:**

<EnRatio> float  
 Range: -50 to depends on the installed options  
 Increment: 0.01  
 \*RST: 15.84  
 Default unit: dB

**Example:** See [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["E<sub>b</sub>/N<sub>0</sub>"](#) on page 276

**[SOURce<hw>]:AWGN:POWer:CARRier <Carrier>**

Sets the carrier power.

**Parameters:**

<Carrier> float  
 Increment: 0.01  
 \*RST: 0

**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Carrier Power, Signal Power"](#) on page 276

**[SOURce<hw>]:AWGN:POWer:NOISe <Noise>**

Sets the power of the noise signal in the system respectively total bandwidth.

**Parameters:**

<Noise> float  
 Increment: 0.01



**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Manual operation:** See ["Noise Power \(System Bandwidth\), Interferer Power"](#) on page 277

#### **[SOURce<hw>]:AWGN:POWer:NOISe:TOTal?**

Queries the noise level in the total bandwidth.

##### **Return values:**

<Total> float  
 Range: -145 to 20  
 Increment: 0.01  
 \*RST: -30

**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Usage:** Query only

**Manual operation:** See ["Noise Power \(Total Bandwidth\)"](#) on page 278

#### **[SOURce<hw>]:AWGN:POWer:SUM?**

Queries the overall power of the noise/interferer signal plus useful signal

##### **Return values:**

<Sum> float  
 Range: -145 to 20  
 Increment: 0.01  
 \*RST: 0

**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Usage:** Query only

**Manual operation:** See ["Carrier + Noise Power, Signal + Noise Power \(System Bandwidth\), Carrier + Interferer Power, Signal + Interferer Power"](#) on page 278

#### **[SOURce<hw>]:AWGN:POWer:SUM:PEP?**

Queries the peak envelope power of the overall signal comprised of noise signal plus useful signal.

##### **Return values:**

<Pep> float  
 Range: -145 to 20  
 Increment: 0.01  
 \*RST: 0

**Example:** see [Example"Generating an additive noise signal"](#) on page 917

**Usage:** Query only



**Manual operation:** See ["Carrier + Noise PEP, Signal + Noise PEP \(Total Bandwidth\), Carrier + Interferer PEP, Signal + Interferer PEP"](#) on page 278

---

**[:SOURce<hw>]:AWGN:FREQUENCY:CENTer:OFFSet <CenterFreqOffs>**

Defines the frequency offset of the noise signal relative to the carrier center frequency.

**Parameters:**

<CenterFreqOffs>      float  
                              Range:      -40E6 to 40E6  
                              Increment: 0.01  
                              \*RST:      0

**Example:** See [Example"Generating a pure noise signal"](#) on page 916.

**Manual operation:** See ["Center Frequency Offset"](#) on page 273

---

**[:SOURce<hw>]:AWGN:FREQUENCY:TARGET <Target>**

Sets the desired frequency of the sine wave.

**Parameters:**

<Target>                float  
                              Range:      -40E6 to 40E6  
                              Increment: 0.01  
                              \*RST:      0

**Example:** see [Example"Generating a CW interferer signal"](#) on page 916

**Manual operation:** See ["Target CW Frequency Offset"](#) on page 274

---

**[:SOURce<hw>]:AWGN:FREQUENCY:RESult?**

Queries the actual frequency of the sine wave.

**Return values:**

<Result>                float  
                              Range:      -40E6 to 40E6  
                              Increment: 0.01  
                              \*RST:      0

**Example:** see [Example"Generating a CW interferer signal"](#) on page 916

**Usage:** Query only

**Manual operation:** See ["Resulting CW Frequency Offset"](#) on page 278

#### 13.17.4.6 SOURce:BB:IMPairment subsystem

This subsystem contains the commands for the analog and digital I/Q impairments.



## Suffixes

Suffix	Value range	Description
RF<ch>	1	Digital impairments for RF connector
IQOutput<ch>	1	IQ connector

## Required options

See [Chapter 5.2.1, "Required options"](#), on page 281.

## Commands:

<a href="#">[:SOURce]:BB:IMPairment:DIGital:DELay</a>	924
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:DELay</a>	924
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:DELay</a>	924
<a href="#">[:SOURce&lt;hw&gt;]:IQ:IMPairment:IQRatio[:MAGNitude]</a>	925
<a href="#">[:SOURce]:BB:IMPairment:DIGital:IQRatio[:MAGNitude]</a>	925
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:IQRatio[:MAGNitude]</a>	925
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:IQRatio[:MAGNitude]</a>	925
<a href="#">[:SOURce&lt;hw&gt;]:IQ:IMPairment:LEAKage:I</a>	926
<a href="#">[:SOURce&lt;hw&gt;]:IQ:IMPairment:LEAKage:Q</a>	926
<a href="#">[:SOURce]:BB:IMPairment:DIGital:LEAKage:I</a>	926
<a href="#">[:SOURce]:BB:IMPairment:DIGital:LEAKage:Q</a>	926
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:LEAKage:I</a>	926
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:LEAKage:Q</a>	926
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:LEAKage:I</a>	926
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:LEAKage:Q</a>	926
<a href="#">[:SOURce&lt;hw&gt;]:IQ:IMPairment:QUADrature[:ANGLE]</a>	926
<a href="#">[:SOURce]:BB:IMPairment:DIGital:QUADrature[:ANGLE]</a>	926
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:QUADrature[:ANGLE]</a>	926
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:QUADrature[:ANGLE]</a>	926
<a href="#">[:SOURce]:BB:IMPairment:DIGital:SKEW</a>	927
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:SKEW</a>	927
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:SKEW</a>	927
<a href="#">[:SOURce&lt;hw&gt;]:IQ:IMPairment[:STATE]</a>	927
<a href="#">[:SOURce]:BB:IMPairment:DIGital:STATE</a>	927
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:STATE</a>	927
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:STATE</a>	927
<a href="#">[:SOURce]:BB:IMPairment:DIGital:POFFset</a>	927
<a href="#">[:SOURce]:BB:IMPairment:IQOutput&lt;ch&gt;:POFFset</a>	927
<a href="#">[:SOURce]:BB:IMPairment:RF&lt;ch&gt;:POFFset</a>	927
<a href="#">[:SOURce&lt;hw&gt;]:BB:IMPairment:OPTimization:MODE</a>	928

**[\[:SOURce\]:BB:IMPairment:DIGital:DELay <Delay>](#)**

**[\[:SOURce\]:BB:IMPairment:IQOutput<ch>:DELay <Delay>](#)**

**[\[:SOURce\]:BB:IMPairment:RF<ch>:DELay <Delay>](#)**

Defines the time delay of both I and Q vectors between the marker signal at the marker outputs relative to the signal generation start.



A positive value means that the I and Q vectors delay relative to the marker/trigger and vice versa.

**Table 13-2: Value range**

Output	Min /s	Max /s	Increment
RF<ch>	0	10E-6	1E-12
IQOutput<ch>	-500E-9	500E-9	1E-12
DIGital	-500E-9	500E-9	1E-12

**Parameters:**

<Delay> float  
 Range: 0 to 10E-6  
 Increment: 1E-12  
 \*RST: 0

**Example:** SOURce1:BB:IMPairment:RF1:DElay 32.0E-9

**Manual operation:** See ["IQ Delay"](#) on page 286

---

```
[ :SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude] <Magnitude>
[:SOURce]:BB:IMPairment:DIGital:IQRatio[:MAGNitude] <IqRatio>
[:SOURce]:BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude] <IqRatio>
[:SOURce]:BB:IMPairment:RF<ch>:IQRatio[:MAGNitude] <IqRatio>
```

Sets the ratio of I modulation to Q modulation (amplification imbalance) of the corresponding digital channel.

**Table 13-3: Value range**

Impairments	Min /dB	Max /dB	Increment
Digital	-4	4	0.0001
Analog	-1	1	0.0001

**Parameters:**

<IqRatio> float  
 The setting value can be either in dB or %. An input in percent is rounded to the closest valid value in dB.  
 Range: -4 to 4  
 Increment: 1E-4  
 \*RST: 0  
 Default unit: dB | PCT (setting command) / dB (result value)

**Example:**

```
SOURce:BB:IMPairment:RF1:IQRatio:MAGNitude 10 PCT
SOURce:BB:IMPairment:RF1:IQRatio:MAGNitude?
// 0.848
// the value is returned in dB
```

**Manual operation:** See ["Gain Imbalance"](#) on page 285



```

[:SOURce<hw>]:IQ:IMPairment:LEAKage:I <I>
[:SOURce<hw>]:IQ:IMPairment:LEAKage:Q <Q>
[:SOURce]:BB:IMPairment:DIGital:LEAKage:I <I>
[:SOURce]:BB:IMPairment:DIGital:LEAKage:Q <Q>
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:I <I>
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:Q <Q>
[:SOURce]:BB:IMPairment:RF<ch>:LEAKage:I <I>
[:SOURce]:BB:IMPairment:RF<ch>:LEAKage:Q <Q>

```

Determines the leakage amplitude of the I or Q signal component of the corresponding stream

**Parameters:**

<Q> float  
 Range: -10 to 10  
 Increment: 0.01  
 \*RST: 0

**Example:** SOURce:BB:IMPairment:RF1:LEAKage:Q 4 PCT  
 Sets the leakage for the Q-component to 4 percent.

**Manual operation:** See "[I Offset/Q Offset](#)" on page 285

```

[:SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLE] <Angle>
[:SOURce]:BB:IMPairment:DIGital:QUADrature[:ANGLE] <Angle>
[:SOURce]:BB:IMPairment:IQOutput<ch>:QUADrature[:ANGLE] <Angle>
[:SOURce]:BB:IMPairment:RF<ch>:QUADrature[:ANGLE] <Angle>

```

Sets a quadrature offset (phase angle) between the I and Q vectors deviating from the ideal 90 degrees.

A positive quadrature offset results in a phase angle greater than 90 degrees.

*Table 13-4: Value range*

Impairments	Min /dB	Max /dB	Increment
Digital	-30	30	0.01
Analog	-10	10	0.01

**Parameters:**

<Angle> float  
 Range: -30 to 30  
 Increment: 0.01  
 \*RST: 0  
 Default unit: DEG

**Example:** SOURce:BB:IMPairment:RF1:QUADrature:ANGLE -5  
 Sets the quadrature offset to -5 degrees.

**Manual operation:** See "[Quadrature Offset](#)" on page 286



---

```
[ :SOURce]:BB:IMPairment:DIGital:SKEW <Skew>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:SKEW <Skew>
[ :SOURce]:BB:IMPairment:RF<ch>:SKEW <Skew>
```

Sets a delay between the Q vector and the I vector of the corresponding stream.

**Parameters:**

<Skew> float  
 Range: -500E-9 to 500E-9  
 Increment: 1E-12  
 \*RST: 0

**Manual operation:** See "[Skew](#)" on page 286

---

```
[ :SOURce<hw>]:IQ:IMPairment[:STATe] <State>
[ :SOURce]:BB:IMPairment:DIGital:STATe <State>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:STATe <State>
[ :SOURce]:BB:IMPairment:RF<ch>:STATe <State>
```

Activates the impairment or correction values LEAKage, QUADrature and IQRatio for the corresponding stream.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** SOURce1:BB:IMPairment:RF1:STATe ON  
 Activates digital impairment.

**Manual operation:** See "[State](#)" on page 285

---

```
[ :SOURce]:BB:IMPairment:DIGital:POFFset <PhaseOffset>
[ :SOURce]:BB:IMPairment:IQOutput<ch>:POFFset <PhaseOffset>
[ :SOURce]:BB:IMPairment:RF<ch>:POFFset <PhaseOffset>
```

Adds an additional phase offset after the stream mapper.

You can shift the phase at the different stages in the signal generation flow, see:

- [\[ :SOURce<hw> \] :BB:POFFset](#) on page 819

**Parameters:**

<PhaseOffset> float  
 Range: -999.99 to 999.99  
 Increment: 0.01  
 \*RST: 0

**Example:** SOURce:BB:IMPairment:RF1:POFFset 0

**Manual operation:** See "[Phase Offset](#)" on page 287



---

**[[:SOURce<hw>]:BB:IMPairment:OPTimization:MODE <Mode>**

Sets the optimization mode.

**Parameters:**

<Mode> FAST | QHIGH

**FAST**

Optimization by compensation for I/Q skew.

**QHIGH**

Optimization by compensation for I/Q skew and frequency response correction.

This mode interrupts the RF signal. Do not use it in combination with the uninterrupted level settings and strictly monotone modes RF level modes.

(See [[:SOURce<hw>]:POWER:LBEHaviour on page 1002.)

\*RST: FAST

**Example:**

:SOURce1:IQ:SOURce BASEband

:SOURce1:BB:IMPairment:OPTimization:MODE FAST

**Manual operation:** See "Optimization Mode" on page 293

#### 13.17.4.7 SOURce:BB:GRAPhics subsystem

This subsystem contains the commands used to setup the graphical display.

**Required options**

See Chapter 8.1.1, "Required options", on page 436.

[[:SOURce<hw>]:BB:GRAPhics:MODE.....	928
[[:SOURce<hw>]:BB:GRAPhics:SRATe:MODE.....	929
[[:SOURce<hw>]:BB:GRAPhics:SRATe:USER.....	929
[[:SOURce]:BB:GRAPhics:CLOSe.....	929
[[:SOURce]:BB:GRAPhics:ADD.....	929
[[:SOURce]:BB:GRAPhics:SOURce.....	930
[[:SOURce]:BB:GRAPhics:FFTLen.....	930
[[:SOURce]:BB:GRAPhics:FFTFscale.....	931
[[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce.....	931

---

**[[:SOURce<hw>]:BB:GRAPhics:MODE <Mode>**

Selects the graphics mode of the graphical signal display.

**Parameters:**

<Mode> IQ | VECTor | CCDF | PSpectrum | CONSTellation | EYEI | EYEQ

\*RST: IQ

**Example:**

BB:GRAP:MODE VECT

Selects the vector diagram graphics mode.

**Manual operation:** See "Mode" on page 445



---

**[ :SOURce<hw>]:BB:GRAPhics:SRATe:MODE <Mode>**

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a diagram covering the entire signal bandwidth. The higher the resolution is, the shorter the length of the displayed signal segment will be for the specified recording depth.

**Parameters:**

<Mode>                      AUTO | FULL | USER  
                               \*RST:        AUTO

**Example:**                BB:GRAP:SRAT:MODE FULL  
                               Sets the sample rate mode.

**Manual operation:**    See ["Sample Rate Mode"](#) on page 446

---

**[ :SOURce<hw>]:BB:GRAPhics:SRATe:USER <User>**

(Enabled for BB:GRAP:SRAT:MODE USER)

Selects the signal bandwidth for the diagram. The setting range moves between the minimum and maximum bandwidth which is possible for the selected graphical signal display. The selection is made graphically by moving the pointer.

**Parameters:**

<User>                      float  
                               Range:        0.01 to 100  
                               Increment: 0.01  
                               \*RST:        10  
                               Default unit: PCT

**Example:**                BB:GRAP:SRAT:USER 20  
                               sets the sample rate factor.

**Example:**                BB:GRAP:SRAT:MODE USER  
                               sets the sample rate mode.

**Manual operation:**    See ["Sample Rate"](#) on page 446

---

**[ :SOURce]:BB:GRAPhics:CLOSe**

Closes all graphical signal displays.

**Usage:**                    Event

**Manual operation:**    See ["Remove"](#) on page 447

---

**[ :SOURce]:BB:GRAPhics:ADD <Size>**

Adds a graphical signal display (according to the current MODE, SOURce, SRATe: \* and TRIGger: \* settings).



**Setting parameters:**

<Size>                      MAXimized | MINimized

**Usage:**                      Setting only

**Manual operation:**    See ["Add"](#) on page 446

**[:SOURce]:BB:GRAPhics:SOURce <Source>**

Defines the signal acquisition point, that is the location in the signal flow where the displayed signal is tapped from.

See [Chapter 8.1.2.2, "Signal acquisition points"](#), on page 441.

**Parameters:**

<Source>                      STRA | BBA | RFA | BBIA | DO1 | IQO1 | STRA | BBA | RFA | BBIA | IQO1 | DO1

**STRA**

Stream A; input stream of the "IQ Stream Mapper"

**BBA**

Baseband signal

**BBIA**

Digital baseband input signals

**RFA**

RF signal

**IQO1**

Analog I/Q output signal

**DO1**

Digital I/Q output signals; outputs of the "IQ Stream Mapper"

\*RST:                      STRA

**Options:**                      DO1 requires R&S SMBVB-K19

**Manual operation:**    See ["Source"](#) on page 445

**[:SOURce]:BB:GRAPhics:FFTLen <Mode>**

Sets the FFT size.

**Parameters:**

<Mode>                      LEN256 | LEN512 | LEN1024 | LEN2048 | LEN4096

\*RST:                      LEN2048

**Example:**                      SOURce:BB:GRAPhics:FFTLen LEN2048

**Manual operation:**    See ["FFT Length"](#) on page 445



**[[:SOURce]:BB:GRAPhics:FFTFscale <State>**

Defines the normalization of the power values in the power spectrum diagram.

**Parameters:**

<State>                    1 | ON | 0 | OFF  
                               **1**  
                               Normalized power in dBFS  
                               **0**  
                               Shows power distribution in dB/Hz  
                               \*RST:        0

**Example:**

```
SOURce:BB:GRAPhics:FFTFscale PSpectrum
SOURce:BB:GRAPhics:FFTFscale 1
// the power spectrum shows the normalized power in dBFS
```

**Manual operation:** See ["Full Scale \(dBFS\)"](#) on page 445

**[[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce <Source>**

Defines the trigger for the starting time of the graphic recording.

**Parameters:**

<Source>                    SOFTWARE | MARKer  
                               \*RST:        SOFTWARE

**Example:**

```
SOURce1:BB:GRAPhics:TRIGger:SOURce MARKer
Sets the trigger source.
```

**Manual operation:** See ["Trigger Source"](#) on page 445

**13.17.4.8 SOURce:BB:PROGress subsystem general commands**

In the R&S SMBV100B, some calculation processes take longer time. While operating the instrument manually, you can observe the status of an initiated process by the busy indicator. The following commands fulfill the same task in the remote control operation.

**Example: Querying the status of the Create Waveform file process**

The following is an example on how to use these commands to retrieve information about how many percent of the initiated process are completed.

```
[[:SOURce<hw>]:BB:PROGress:MCODer?.....932
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?.....932
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEGment?.....932
```



---

**[ :SOURce<hw>]:BB:PROGress:MCODer?**

**[ :SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?**

**[ :SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEgment?**

Queries the status of an initiated process, like for example the calculation of a signal in accordance to a digital standard, or the calculation of a multi-carrier or multi-segment waveform file.

**Return values:**

<WSegment>                      integer  
                                      Indicates the task progress in percent  
                                      Range:        0 to 100  
                                      \*RST:        100

**Example:**                      See [Example "Querying the status of the Create Waveform file process"](#) on page 931

**Usage:**                        Query only

### 13.17.5 SOURce:CORRection subsystem

The SOURce:CORRection subsystem contains the commands for defining correction values for external test assemblies.

You can acquire the correction values anytime, regardless of the modulation settings of the generator. The correction is performed by adding the correction values to the output level of the respective RF frequency.

Determine the correction values in one of the following ways:

- Measure the RF output level at several frequency points and enter the value pairs manually in a table
- Connect an R&S NRP to the generator output signal and send the command [ :SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe to fill the table automatically.

Correction values can be stored in files with the predefined file extension \*.uco.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and in a specific directory.

#### Programming example

The examples in this section assume that:

- The files are stored in the default directory.
- \*RST does not affect data lists.

#### Example: Create a table with user-defined correction values for the RF level

The following example shows a command sequence to create and activate a list for assigning level correction values to arbitrary RF frequencies. Further hardware settings are not considered.



```

// Reset the instrument to start from an initial state
// Query the available user correction list files in the default directory
// Select a file or create a new one
// *****
*RST; *CLS
SOURCE1:CORRection:CSET:CATalog?
// Response: shows the name of available user correction files (if applicable)
// Select a file
SOURCE1:CORRection:CSET:SElect "/var/user/ucor1"
// Create a new file (if not existing)
SOURCE1:CORRection:CSET:SElect "/var/user/ucor2"

// Enter the frequency/level value pairs in the table;
// existing data is overwritten
// Query the number of frequency/power entries in the selected list
SOURCE1:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURCE1:CORRection:CSET:DATA:POWer -10,-7.5,-5.0,-2.5,0,2.5
SOURCE1:CORRection:CSET:DATA:FREQuency:POINts?
// 6
SOURCE1:CORRection:CSET:DATA:POWer:POINts?
// 6

// Enable user correction mode and RF output
SOURCE1:CORRection:STATe 1
OUTPut1:STATe ON

// Query the currently used correction value
SOURCE1:CORRection:VALue?
// -2.5

// Delete a user correction file
SOURCE1:CORRection:CSET:DELEte "/var/user/ucor1.uco"

```

### Example: Fill user correction data with sensor

The following example shows a command sequence to fill a user correction list automatically supported by a connected R&S NRP.

```

// Fill a user correction list with the level values
// measured by an R&S NRP,
// store the data in a file and enable user correction.

*RST; *CLS

SOURCE1:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURCE1:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURCE1:CORRection:ZERoing:STATe 1
SOURCE1:CORRection:CSET:DATA:SENSor1:POWer:SONCe
// Query the number of automatically filled correction level values
SOURCE1:CORRection:CSET:DATA:POWer:POINts?
// 6

```



```
SOURcel:CORRection:STATe 1
```

```
// Query the correction value at a certain frequency
FREQ 120000000
SOURcel:CORRection:VALue?
// -52.13
```

### Example: User correction data exchange

The following example shows a command sequence to export a user correction list (here the list created with the example before) into an ASCII file. Further hardware settings are not considered.

```
// Select a user correction file for exporting to file in ASCII format
// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOURcel:CORRection:DEXChange:AFILe:CATalog?
// my_ucor
SOURcel:CORRection:CSET:CATalog?
// ucor1,Ucor1_AutoFill
SOURcel:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURcel:CORRection:DEXChange:AFILe:EXTension CSV
SOURcel:CORRection:DEXChange:AFILe:SEParator:DECimal DOT
SOURcel:CORRection:DEXChange:AFILe:SEParator:COLumn COMMa

// Select source and destination
SOURcel:CORRection:DEXChange:AFILe:SElect "/var/user/ucor2ASCII"

// Export the user correction data into the ASCII file
SOURcel:CORRection:DEXChange:MODE EXPort
SOURcel:CORRection:DEXChange:EXECute

// Query the available ASCII files with extension .csv
SOURcel:CORRection:DEXChange:AFILe:CATalog?
// ucor2ASCII,my_ucor

// Import a user correction ASCII file
SOURcel:CORRection:DEXChange:MODE IMPort
SOURcel:CORRection:DEXChange:AFILe:SElect "/var/user/my_ucor"
SOURcel:CORRection:DEXChange:EXECute
```

- [Correction settings](#)..... 935
- [Correction data exchange](#)..... 938
- [Frequency response commands](#)..... 940



### 13.17.5.1 Correction settings

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:FREQuency <Frequency>**

Enters the frequency value in the table selected with [\[ :SOURce<hw>\]:CORRection:CSET \[ :SELection\]](#).

**Parameters:**

<Frequency>                      Frequency#1[, Frequency#2, ...]  
    String of values with default unit Hz.

**Example:**                      See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Manual operation:**    See ["Edit List Mode Data"](#) on page 355

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:POWer <Power>**

Enters the level values to the table selected with [\[ :SOURce<hw>\]:CORRection:CSET \[ :SELection\]](#).

**Parameters:**

<Power>                              Power#1[, Power#2, ...]  
    String of values with default unit dB.  
    \*RST: 0

**Example:**                      See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Manual operation:**    See ["Edit List Mode Data"](#) on page 355

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?**

**[ :SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?**

Queries the number of frequency/level values in the selected table.

**Return values:**

<Points>                              integer  
    Range:              0 to 10000  
    \*RST:              0

**Example:**                      See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Usage:**                              Query only

---

**[ :SOURce<hw>]:CORRection:CSET:DATA[ :SENSor<ch>][ :POWer]:SONCe**

Fills the selected user correction table with the level values measured by the power sensor for the given frequencies.

To select the used power sensor set the suffix in key word `SENSe`.



**Example:** See [Example"Fill user correction data with sensor"](#) on page 933.

**Usage:** Event

**Manual operation:** See ["Fill User Correction Data with Sensor"](#) on page 411

**[[:SOURce<hw>]:CORRection:CSET[:SElect] <Filename>**

Selects or creates a file for the user correction data.

If the file with the selected name does not exist, a new file is created.

**Parameters:**

<Filename>                      string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Manual operation:** See ["UCOR Data"](#) on page 406

**[[:SOURce<hw>]:CORRection:VALue?**

Queries the current value for user correction.

**Return values:**

<Value>                      float  
 Range:                      -100 to 100  
 Increment:                  0.01  
 \*RST:                      0

**Example:** See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Usage:** Query only

**Manual operation:** See ["User Correction"](#) on page 406

**[[:SOURce<hw>]:CORRection:ZERoing:STATe <State>**

Activates the zeroing procedure before filling the user correction data acquired by a sensor.

**Parameters:**

<State>                      1 | ON | 0 | OFF  
 \*RST:                      1

**Example:** See [Example"Fill user correction data with sensor"](#) on page 933.

**Manual operation:** See ["Fill User Correction Data with Sensor"](#) on page 411



---

**[[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>]][:POWer]:SONCe**

Fills the selected user correction list with the level values measured by the power sensor for the given frequencies.

**Suffix:**

SENSor<ch> Defines the used power sensor, i.e. the sensor whose values are used.

**Example:**

See [Example"Fill user correction data with sensor"](#) on page 933.

**Usage:**

Event

---

**[[:SOURce<hw>]:CORRection[:STATe] <State>**

Activates user correction with the currently selected table.

**Parameters:**

<State> 1 | ON | 0 | OFF

\*RST: 0

**Example:**

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Manual operation:**

See ["State"](#) on page 406

---

**[[:SOURce]:CORRection:CSET:CATalog?**

Queries a list of available user correction tables.

**Return values:**

<Catalog> string

List of list filenames, separated by commas

**Example:**

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Usage:**

Query only

**Manual operation:**

See ["UCOR Data"](#) on page 406

See ["Directory, File List and Filename"](#) on page 520

---

**[[:SOURce]:CORRection:CSET:DELeTe <Filename>**

Deletes the specified user correction list file.

**Setting parameters:**

<Filename> string

Filename or complete file path; file extension is optional.

**Example:**

See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Usage:**

Setting only



**Manual operation:** See ["UCOR Data"](#) on page 406

### 13.17.5.2 Correction data exchange

With the following commands, you can configure user correction lists and export or import them accordingly.

---

#### **[SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?**

Queries the available ASCII files for export or import of user correction data in the current or specified directory.

**Return values:**

<Catalog>                      string  
List of ASCII files \*.txt or \*.csv, separated by commas.

**Example:**                      See [Example"Create a table with user-defined correction values for the RF level"](#) on page 932 .

**Usage:**                        Query only

**Manual operation:**    See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 353

---

#### **[SOURce<hw>]:CORRection:DEXChange:AFILe:EXtension <Extension>**

Determines the extension of the ASCII files for file import or export, or to query existing files.

**Parameters:**

<Extension>                    TXT | CSV  
\*RST:                        TXT

**Example:**                      See [Example"User correction data exchange"](#) on page 934 .

**Manual operation:**    See ["ASCII File Settings"](#) on page 352

---

#### **[SOURce<hw>]:CORRection:DEXChange:AFILe:SElect <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename>                    string  
Filename or complete file path; file extension can be omitted.

**Example:**                      See [Example"User correction data exchange"](#) on page 934 .

**Manual operation:**    See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 353

---

#### **[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.



**Parameters:**

<Column> TABulator | SEMicolon | COMMa | SPACe  
 \*RST: COMMa

**Example:** See [Example"User correction data exchange"](#) on page 934 .

**Manual operation:** See ["ASCII File Settings"](#) on page 352

**[ :SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

**Parameters:**

<Decimal> DOT | COMMa  
 \*RST: DOT

**Example:** See [Example"User correction data exchange"](#) on page 934 .

**Manual operation:** See ["ASCII File Settings"](#) on page 352

**[ :SOURce<hw>]:CORRection:DEXChange:EXECute**

Executes the import or export of the selected correction list, according to the previously set transfer direction with command [\[ :SOURce<hw>\]:CORRection:DEXChange:MODE](#).

**Example:** See [Example"User correction data exchange"](#) on page 934 .

**Usage:** Event

**Manual operation:** See ["Import / Export"](#) on page 353

**[ :SOURce<hw>]:CORRection:DEXChange:MODE <Mode>**

Determines import or export of a user correction list.

Specify the source or destination file with the command [\[ :SOURce<hw>\]:CORRection:DEXChange:SElect](#).

**Parameters:**

<Mode> IMPort | EXPort  
 \*RST: IMPort

**Example:** See [Example"User correction data exchange"](#) on page 934 .

**Manual operation:** See ["Mode"](#) on page 352

**[ :SOURce<hw>]:CORRection:DEXChange:SElect <Filename>**

Selects the ASCII file for import or export, containing a user correction list.



**Parameters:**

<Filename> string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example "User correction data exchange"](#) on page 934 .

**Manual operation:** See ["Select Source/Select ASCII Destination"](#) on page 353

**13.17.5.3 Frequency response commands**

This section lists the frequency response commands related to the I/Q modulator.

**Example: Enabling high-quality optimization**

```
SOURce1:CORRection:FRESponse:RF:OPTimization:MODE QHIG
SOURce1:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE AUTO
SOURce1:CORRection:FRESponse:RF:OPTimization:BANDwidth:VALue?
// 160000000
SOURce1:CORRection:FRESponse:RF:OPTimization:LOCal
SOURce1:CORRection:FRESponse:RF:OPTimization:HOLD:STATe 1
```

<a href="#">[:SOURce&lt;hw&gt;]:CORRection:FRESponse:RF:OPTimization:MODE</a>	940
<a href="#">[:SOURce&lt;hw&gt;]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE</a>	941
<a href="#">[:SOURce&lt;hw&gt;]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue]</a>	941
<a href="#">[:SOURce&lt;hw&gt;]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe]</a>	941
<a href="#">[:SOURce&lt;hw&gt;]:CORRection:FRESponse:RF:OPTimization:LOCal</a>	941

---

**[\[:SOURce<hw>\]:CORRection:FRESponse:RF:OPTimization:MODE](#)**  
**<FreqRespOptMode>**

Sets the optimization mode.

The value selected here is used also as optimization mode in the I/Q modulator, and vice versa.

For details, see R&S SMBV100B User Manual.

**Parameters:**

<FreqRespOptMode> FAST | QHIGh

**FAST**

Optimization by compensation for I/Q skew.

**QHIGh**

Optimization by compensation for I/Q skew and frequency response correction.

This mode interrupts the RF signal. Do not use it in combination with the uninterrupted level settings and strictly monotone modes RF level modes. These RF level modes can be set with the following command:

```
[ :SOURce<hw> ] :POWER:LBEHaviour
```

\*RST: FAST

**Example:** See [Example "Enabling high-quality optimization"](#) on page 940.



---

**[ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE**  
**<FreqRespOptBwMo>**

For [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE QHIG|QHT, sets how the signal bandwidth is estimated: automatically or manually with the command [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue].

**Parameters:**

<FreqRespOptBwMo> AUTO | MANual  
 \*RST: AUTO

**Example:** See [Example"Enabling high-quality optimization"](#) on page 940.

---

**[ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue]**  
**<FreqRespOptBwVa>**

Sets the signal compensation bandwidth for [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE MAN.

**Parameters:**

<FreqRespOptBwVa> integer  
 Range: depends on installed baseband extension option  
 \*RST: = max. bandwidth (depending on installed options)  
 \* e.g. for base unit without extensions max = 120 MHz  
 For more information, see data sheet.

**Example:** See [Example"Enabling high-quality optimization"](#) on page 940.

---

**[ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe]**  
**<FreqRespHoldSta>**

For [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE QHIG|QHT, retains the last calculated correction values as long as one of the following is performed:

- SOURce1:CORRection:FRESponse:RF:OPTimization:HOLD:STATe 0
- [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:LOCAL

**Parameters:**

<FreqRespHoldSta> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Enabling high-quality optimization"](#) on page 940.

---

**[ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:LOCAL**

For [ :SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE QHIG, triggers optimization for the current settings.

**Example:** See [Example"Enabling high-quality optimization"](#) on page 940.



Usage: Event

### 13.17.6 SOURce:FREQuency subsystem

The `SOURce:FREQuency` subsystem contains the commands used to define the frequency settings for the RF sources and sweeps.

#### Example: Frequency configuration

```
SOURce1:FREQuency:MODE CW
SOURce1:FREQuency:CW 6000000000
SOURce1:FREQuency:OFFSet 2000000000
SOURce1:FREQuency:MULTiplier 1.5
SOURce1:FREQuency:CW?
// 11000000000

// SOURce1:FREQuency:STEP:MODE USER
// SOURce1:FREQuency:STEP:INCRement 1000000
// SOURce1:FREQuency:CW UP

SOURce1:PHASe 2
SOURce1:PHASe:REFerence
```


#### Example: Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators

This example shows the command sequences for coupling the oscillator signal of three signal generators connected according to the setup on [Figure 13-3](#).

Connect the instruments in a daisy-chain regarding the LO signal:

- Connect the LO Out of the first generator with LO In of the second
- Connect the LO Out of the second generator with LO In of the third.

The frequency is assumed to be 5 GHz.

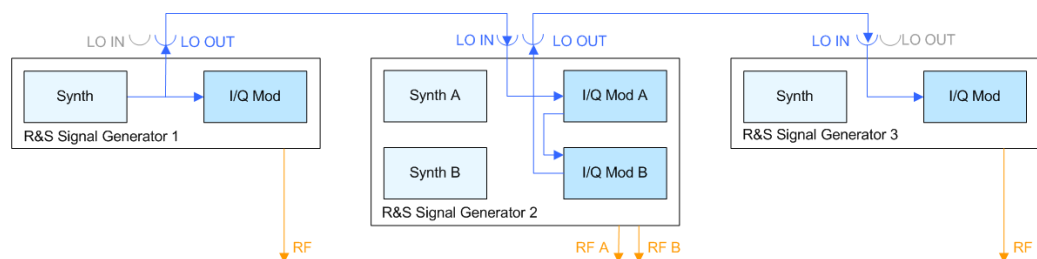

**Figure 13-3: Set up of LO coupling with three Rohde & Schwarz signal generators**

Signal generator#1 = One-path instrument, uses its internal oscillator signal.

Signal generator#1 = Two-paths instrument; receives the LO signal from the first instrument and assigns it to both paths

Signal generator#3 = One-path instrument; receives the LO signal from the second instrument

```
// *****
// Address and reset the first instrument
```



```
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the first instrument
// *****
SOURce:FREQuency 5 GHz
SOURce:FREQuency:LOSCillator:MODE INTernal
SOURce:FREQuency:LOSCillator:OUTPut:STATe ON
SOURce:FREQuency:LOSCillator:OUTPut:FREQuency?
// Response: 1000000000

// *****
// Address and reset the second instrument, e.g. a R&S SMW
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the second instrument
// *****
SOURcel:FREQuency 5 GHz
SOURcel:FREQuency:LOSCillator:MODE ECOupled
SOURcel:FREQuency:LOSCillator:OUTPut:STATe ON

// *****
// If the attenuation between the interconnection LO OUT and LO IN is
// greater than 1 dB at the oscillator frequency,
// we recommend that you perform the LO level adjustment
// *****
:CALibration:LOSCillator:Coupling:LOCAL?

// *****
// Address and reset the third instrument
// *****
*RST; *CLS

// *****
// Configure the oscillator signal of the third next instrument
// *****
SOURce:FREQuency 5 GHz
SOURce:FREQuency:LOSCillator:MODE EXTernal
SOURce:FREQuency:LOSCillator:OUTPut:STATe OFF
```

See also:

- ["To configure LO coupling with cascaded instruments to achieve phase coherence"](#) on page 319

<a href="#">[:SOURce&lt;hw&gt;]:FREQuency:LOSCillator:INPut:FREQuency?</a> .....	944
<a href="#">[:SOURce&lt;hw&gt;]:FREQuency:LOSCillator:MODE</a> .....	944
<a href="#">[:SOURce&lt;hw&gt;]:FREQuency:LOSCillator:OUTPut:FREQuency?</a> .....	944
<a href="#">[:SOURce&lt;hw&gt;]:FREQuency:LOSCillator:OUTPut:STATe</a> .....	945
<a href="#">[:SOURce&lt;hw&gt;]:FREQuency:MODE</a> .....	945



<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY[:CW FIXed].....</a>	946
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY[:CW FIXed]:RCL.....</a>	947
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:MANual.....</a>	947
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:MULTiplier.....</a>	947
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:OFFSet.....</a>	948
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:CENTer.....</a>	948
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:SPAN.....</a>	949
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:STARt.....</a>	949
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:STOP.....</a>	949
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:STEP:MODE.....</a>	950
<a href="#">[:SOURce&lt;hw&gt;]:FREQUENCY:STEP[:INCRement].....</a>	950

---

### **`[:SOURce<hw>]:FREQUENCY:LOSCillator:INPut:FREQUENCY?`**

Queries the required external reference frequency.

#### **Return values:**

<Frequency>                      float  
    Range:        100E3 to 20E9  
    Increment: 0.01  
    \*RST:        0

**Example:**                      See [Example"Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 942.

**Usage:**                              Query only

**Manual operation:**    See ["Mandatory LO IN Frequency"](#) on page 319

---

### **`[:SOURce<hw>]:FREQUENCY:LOSCillator:MODE <Mode>`**

Selects the mode of the local oscillator coupling.

#### **Parameters:**

<Mode>                              INTernal | EXTernal  
    \*RST:        INTernal

**Example:**                      See [Example"Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 942.

**Manual operation:**    See ["Mode"](#) on page 318

---

### **`[:SOURce<hw>]:FREQUENCY:LOSCillator:OUTPut:FREQUENCY?`**

Queries the current frequency of the local oscillator at the [LO Out] connector.

#### **Return values:**

<Frequency>                      float  
    Range:        100E3 to 20E9  
    Increment: 0.01  
    \*RST:        0



**Example:** See [Example "Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 942.

**Usage:** Query only

**Manual operation:** See ["LO OUT Frequency"](#) on page 319

**[ :SOURce<hw> ] :FREQuency:LOSCillator:OUTPut:STATe <State>**

Activates the LO output.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Set up of LO coupling and LO level adjustment with three Rohde & Schwarz signal generators"](#) on page 942.

**Manual operation:** See ["Out State"](#) on page 318

**[ :SOURce<hw> ] :FREQuency:MODE <Mode>**

Sets the frequency mode for generating the RF output signal. The selected mode determines the parameters to be used for further frequency settings.

**Parameters:**

<Mode> CW | FIXed | SWEep | LIST | COMBined

**CW|FIXed**

Sets the fixed frequency mode. CW and FIXed are synonyms. The instrument operates at a defined frequency, set with command [\[ :SOURce<hw> \] :FREQuency \[ :CW|FIXed \]](#).

**SWEep**

Sets sweep mode.

The instrument processes frequency (and level) settings in defined sweep steps.

Set the range and current frequency with the commands:

[\[ :SOURce<hw> \] :FREQuency:START](#) on page 949 and [\[ :SOURce<hw> \] :FREQuency:STOP](#) on page 949,

[\[ :SOURce<hw> \] :FREQuency:CENTer](#) on page 948,

[\[ :SOURce<hw> \] :FREQuency:SPAN](#) on page 949,

[\[ :SOURce<hw> \] :FREQuency:MANual](#) on page 947

**LIST**

Sets list mode.

The instrument processes frequency and level settings by means of values loaded from a list.

To configure list mode settings, use the commands of the [Chapter 13.17.11, "SOURce:LIST subsystem"](#), on page 979.



**COMBined**

Sets the combined RF frequency / level sweep mode.  
The instrument processes frequency and level settings in defined sweep steps.

Set the range and current frequency with the commands:

`[ :SOURce<hw> ] :COMBined:FREQuency:START`  
on page 1025 and `[ :SOURce<hw> ] :COMBined:FREQuency:STOP` on page 1025,

`[ :SOURce<hw> ] :COMBined:POWer:START` on page 1025  
and `[ :SOURce<hw> ] :COMBined:POWer:STOP` on page 1026

\*RST: CW

**Example:** See [Example"Frequency configuration"](#) on page 942,  
and [Example"Setup an RF frequency or power sweep"](#)  
on page 1017

**Manual operation:** See ["State \(RF frequency sweep\)"](#) on page 338  
See ["State \(RF frequency / level sweep\)"](#) on page 338  
See ["State"](#) on page 349

---

**[ :SOURce<hw> ] :FREQuency[ :CW|FIXed ] <Fixed>**

Sets the frequency of the RF output signal in the selected path.

The effect depends on the selected mode:

- In CW mode (`FREQ:MODE CW | FIXED`), the instrument operates at a fixed frequency.
- In sweep mode (`FREQ:MODE SWE`), the value applies to the sweep frequency.  
The instrument processes the frequency settings in defined sweep steps.
- In user mode (`FREQ:STEP:MODE USER`), you can vary the current frequency step by step.

**Parameters:**

<Fixed>

float

The following settings influence the value range:

An offset set with the command `[ :SOURce<hw> ] :FREQuency:OFFSet`

**Numerical value**

Sets the frequency in CW and sweep mode

**UP|DOWN**

Varies the frequency step by step in user mode.

The frequency is increased or decreased by the value set with the command `[ :SOURce<hw> ] :FREQuency:STEP [ :INCRement ]`.

Range: (RFmin + OFFSet) to (RFmax + OFFSet)

\*RST: 100 MHz

**Example:** See [Example"Frequency configuration"](#) on page 942



- Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017
- Options:** RFmax depends on the installed options, for example 3 GHz with R&S SMBVB-B103
- Manual operation:** See ["Frequency"](#) on page 301

### **[ :SOURce<hw> ]:FREQuency[:CW|FIXed]:RCL <Rcl>**

Set whether the RF frequency value is retained or taken from a loaded instrument configuration, when you recall instrument settings with command `*RCL`.

#### **Parameters:**

**<Rcl>** INCLude | EXCLude

**INCLude**  
Takes the frequency value of the loaded settings.

**EXCLude**  
Retains the current frequency when an instrument configuration is loaded.

**\*RST:** INCLude

**Example:** `SOURce1:FREQuency:CW:RCL INCLude`

**Manual operation:** See ["Exclude Frequency"](#) on page 521

### **[ :SOURce<hw> ]:FREQuency:MANual <Manual>**

Sets the frequency and triggers a sweep step manually if `SWEep:MODE MAN`.

#### **Parameters:**

**<Manual>** float

You can select any frequency within the setting range, where:

`START` is set with `[ :SOURce<hw> ]:FREQuency:START`

`STOP` is set with `[ :SOURce<hw> ]:FREQuency:STOP`

`OFFSet` is set with `[ :SOURce<hw> ]:FREQuency:OFFSet`

**Range:** (START + OFFSet) to (STOP + OFFSet)

**Increment:** 0.01Hz

**\*RST:** 100 MHz

**Default unit:** Hz

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Current Frequency"](#) on page 339

### **[ :SOURce<hw> ]:FREQuency:MULTiplier <Multiplier>**

Sets the multiplication factor  $N_{\text{FREQ:MULT}}$  of a subsequent downstream instrument.



The parameters offset  $f_{\text{FREQ:OFFSet}}$  and multiplier  $N_{\text{FREQ:MULT}}$  affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSet}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

**Parameters:**

<Multiplier>	float
Range:	-10000 to 10000
Increment:	0.001
*RST:	1

**Example:** See [Example"Frequency configuration"](#) on page 942

**Manual operation:** See ["Multiplier"](#) on page 302

**[[:SOURce<hw>]:FREQuency:OFFSet <Offset>**

Sets the frequency offset  $f_{\text{FREQ:OFFSet}}$  of a downstream instrument.

The parameters offset  $f_{\text{FREQ:OFFSet}}$  and multiplier  $N_{\text{FREQ:MULT}}$  affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSet}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

**Note:** The offset also affects RF frequency sweep.

**Parameters:**

<Offset>	float
Increment:	0.01
*RST:	0

**Example:** See [Example"Frequency configuration"](#) on page 942

**Manual operation:** See ["Offset"](#) on page 302

**[[:SOURce<hw>]:FREQuency:CENTer <Center>**

Sets the center frequency of the sweep.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Center>	float
Range:	300 kHz to RFmax
Increment:	0.01 Hz
*RST:	300E6
Default unit:	Hz



**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Center Frequency"](#) on page 344

**[:SOURce<hw>]:FREQuency:SPAN <Span>**

Sets the span of the frequency sweep range.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Span> float  
Full frequency range  
Increment: 0.01  
\*RST: 400E6

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Span"](#) on page 344

**[:SOURce<hw>]:FREQuency:START <Start>**

Sets the start frequency for the RF sweep.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Start> float  
Range: 300kHz to RFmax  
Increment: 0.01Hz  
\*RST: 100 MHz

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 344

**[:SOURce<hw>]:FREQuency:STOP <Stop>**

Sets the stop frequency range for the RF sweep.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Stop> float  
Range: 300kHz to RFmax  
Increment: 0.01Hz  
\*RST: 500 MHz  
Default unit: Hz



**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 344

**[ :SOURce<hw>]:FREQuency:STEP:MODE <Mode>**

Defines the type of step size to vary the RF frequency at discrete steps with the commands [FREQ UP](#) or [FREQ DOWN](#).

**Parameters:**

<Mode> DECimal | USER

**DECimal**

Increases or decreases the level in steps of ten.

**USER**

Increases or decreases the level in increments, set with the command [FREQ:STEP\[:INCR\]](#).

\*RST: DECimal

**Example:**

```
// increasing the RF frequency with a step size of 50 KHz
SOURce1:FREQuency:STEP 50E3
SOURce1:FREQuency:STEP:MODE USER
SOURce1:FREQuency:CW UP
```

**Manual operation:** See ["Variation Active"](#) on page 302

**[ :SOURce<hw>]:FREQuency:STEP[:INCRement] <Increment>**

Sets the step width.

You can use this value to vary the RF frequency with command [FREQ UP](#) or [FREQ DOWN](#), if you have activated [FREQ:STEP:MODE USER](#).

**Note:** This value also applies to the step width of the rotary knob on the instrument and, in user-defined step mode, increases or decreases the frequency.

**Parameters:**

<Increment> float

Range: 0 Hz to RFmax - 100 kHz

Increment: 0.01 Hz

\*RST: 1E6

**Example:** See [Example "Frequency configuration"](#) on page 942

**Manual operation:** See ["Variation Step"](#) on page 303

### 13.17.7 SOURce:INPut subsystem

The `SOURce:INPut` subsystem contains the commands for configuring the inputs for external modulation signals. The instrument trigger setting influences all sweeps and is effective in the List mode (Instrument Trigger).



<a href="#">[:SOURce&lt;hw&gt;]:INPut:MODext:COUPling.....</a>	951
<a href="#">[:SOURce&lt;hw&gt;]:INPut:MODext:IMPedance&lt;ch&gt;.....</a>	951
<a href="#">[:SOURce]:INPut:TRIGger:SLOPe.....</a>	951

---

### **`[:SOURce<hw>]:INPut:MODext:COUPling <Coupling>`**

Selects the coupling mode for an externally applied modulation signal.

#### **Parameters:**

<code>&lt;Coupling&gt;</code>	AC   DC
<b>AC</b>	Passes the AC signal component of the modulation signal.
<b>DC</b>	Passes the modulation signal with both components, AC and DC.
<b>*RST:</b>	AC

#### **Example:**

```
SOURce1:INPut:MODext:COUPling AC
SOURce1:INPut:MODext:IMPedance G50
```

**Manual operation:** See ["Coupling \(AC/DC\)"](#) on page 389

---

### **`[:SOURce<hw>]:INPut:MODext:IMPedance<ch> <Impedance>`**

Sets the impedance for the externally supplied modulation signal.

#### **Parameters:**

<code>&lt;Impedance&gt;</code>	G50   G600   HIGH
	G50 = 50 Ohm to ground
	G600 = 600 Ohm to ground
	HIGH = 100 kOhm to ground
<b>*RST:</b>	HIGH

#### **Example:**

See [\[:SOURce<hw>\]:INPut:MODext:COUPling](#) on page 951.

**Manual operation:** See ["Impedance"](#) on page 389

---

### **`[:SOURce]:INPut:TRIGger:SLOPe <Slope>`**

Sets the polarity of the active slope of an applied instrument trigger.

#### **Parameters:**

<code>&lt;Slope&gt;</code>	NEGative   POSitive
<b>*RST:</b>	POSitive

#### **Example:**

```
INP:TRIG:SLOP NEG
```

Activates the falling slope of the external trigger signal at the trigger input.

**Manual operation:** See ["Trigger Slope"](#) on page 342



### 13.17.8 SOURce:IQ subsystem

The SOURce:IQ subsystem contains the commands for configuring the I/Q modulation.

#### Required options

See [Chapter 6.1, "Required options"](#), on page 289.

<a href="#">[:SOURce&lt;hw&gt;]:IQ:SOURce</a> .....	952
<a href="#">[:SOURce&lt;hw&gt;]:IQ:STATe</a> .....	952
<a href="#">[:SOURce&lt;hw&gt;]:IQ:GAIN</a> .....	953
<a href="#">[:SOURce&lt;hw&gt;]:BB:IQGain</a> .....	953
<a href="#">[:SOURce&lt;hw&gt;]:IQ:EMIXer:MODE</a> .....	953
<a href="#">[:SOURce&lt;hw&gt;]:IQ:CRESTfactor</a> .....	953
<a href="#">[:SOURce&lt;hw&gt;]:IQ:SWAP[:STATe]</a> .....	954
<a href="#">[:SOURce&lt;hw&gt;]:IQ:WBSTate</a> .....	954

---

#### **[\[:SOURce<hw>\]:IQ:SOURce](#) <Source>**

Selects the input signal source for the I/Q modulator.

##### Parameters:

<Source>                      BASEband | ANALog  
 External signals disable the amplitude modulation, an enabled custom digital modulation, any configured digital standard or an applied digital baseband input signal.  
 \*RST:                      BASEband

##### Example:

SOURce1:IQ:SOURce ANALog  
 Selects an external analog signal as the input signal. The signal must be applied at the I and Q inputs.

**Manual operation:**    See ["Source"](#) on page 291

---

#### **[\[:SOURce<hw>\]:IQ:STATe](#) <State>**

Enables/disables the I/Q modulation.

##### Note: Interdependencies

The following functions cannot be activated simultaneously. **They deactivate each other.**

- The internal baseband generator ([\[:SOURce<hw>\]:BB:<DigStd>:STATe](#)) and the external digital baseband input ([\[:SOURce<hw>\]:BBIN:STATe](#))
- The external digital baseband input ([\[:SOURce<hw>\]:BBIN:STATe](#)) and digital output ([\[:SOURce<hw>\]:IQ:OUTPut:DIGital:STATe](#)) because they share the same physical connectors (Dig I/Q and the HS Dig I/Q).
- The digital output ([\[:SOURce<hw>\]:IQ:OUTPut:DIGital:STATe](#)) and the output of analog I/Q signals:



- If [:SOURce<hw>]:IQ:SOURce BASeband, [:SOURce<hw>]:IQ:STATe  
+ :OUTPut<hw>:STATe or
- [:SOURce<hw>]:IQ:OUTPut:ANALog:STATe

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:**

IQ:STAT ON  
Activates I/Q modulation.

**Manual operation:** See ["State"](#) on page 291

**[[:SOURce<hw>]:IQ:GAIN <Gain>**

**[[:SOURce<hw>]:BB:IQGain <IqGain>**

Optimizes the modulation of the I/Q modulator for a subset of measurement requirement.

**Parameters:**

<IqGain> DBM4 | DBM2 | DB0 | DB2 | DB4 | DB8 | DB6  
Dynamic range of 16 dB divided into 2 dB steps.  
**DB0|DB2|DB4|DB6|DB8**  
Activates the specified gain of 0 dB, +2 dB, +4 dB, +6 dB, +8 dB  
**DBM2|DBM4**  
Activates the specified gain of -2 dB, -4 dB  
\*RST: DB4

**Example:**

SOURce1:BB:IQGain DB2  
SOURce1:IQGain DB2

**Manual operation:** See ["Baseband Gain"](#) on page 293

**[[:SOURce<hw>]:IQ:EMIXer:MODE <MixerMode>**

If enabled, the upper frequency, until a direct I/Q modulation is used, is shifted to 200 MHz.

For details, see ["Extended Mixer Mode"](#) on page 292.

**Parameters:**

<MixerMode> 1 | ON | 0 | OFF

**Example:**

SOURce1:IQ:EMIXer:MODE 1

**Manual operation:** See ["Extended Mixer Mode"](#) on page 292

**[[:SOURce<hw>]:IQ:CREStfactor <CrestFactor>**

Specifies the crest factor for the external analog signal.



**Parameters:**

<CrestFactor> float  
 Range: 0 to 35  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB

**Example:**

IQ:CRES 10  
 specifies 10 dB crest factor for the external analog signal.

**Manual operation:** See ["Crest Factor"](#) on page 293

**[ :SOURce<hw>]:IQ:SWAP[:STATe] <State>**

Swaps the I and Q channel.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

IQ:SWAP ON  
 swaps the I and Q channel.

**Manual operation:** See ["I/Q Swap"](#) on page 291

**[ :SOURce<hw>]:IQ:WBSTate <WbState>**

Activates I/Q wideband mode.

Activation automatically optimizes the settings for wideband modulation signals with a bandwidth that is higher than 5 MHz.

**Parameters:**

<WbState> 1 | ON | 0 | OFF  
 \*RST:  
 \*RST: 0 (R&S SMBVB-K524) / 1 (R&S SMBVB-K525)

**Example:**

:SOURce1:IQ:WBST 1  
 Activates I/Q wideband mode.

**Manual operation:** See ["I/Q Wideband"](#) on page 292

### 13.17.9 SOURce:IQ:OUTPut subsystem

The SOURce:IQ:OUTPut subsystem contains the commands for configuring analog and digital I/Q output signals.

For information about the required options, see:

- ["Required options"](#) on page 494
- [Chapter 9.8, "I/Q analog output settings"](#), on page 501

For information on the analog and digital IQ connectors and interfaces, see:



Chapter 9.4.2, "Overview of the input and output signals and interfaces", on page 465.

### 13.17.9.1 SOURce:IQ:OUTPut:ANALog commands

This section describes the commands of the output of an analog I/Q signal.

#### Example: Enabling and configuring the analog output

```
SCONfiguration:OUTPut:MAPPING:IQOutput1:STReam1:STATe 1
```

```
SOURce1:IQ:OUTPut:ANALog:PRESet
SOURce1:IQ:OUTPut:ANALog:TYPE DIFF
SOURce1:IQ:OUTPut:ANALog:MODE VAR
SOURce1:IQ:OUTPut:LEVel 2
SOURce1:IQ:OUTPut:ANALog:BIAS:COUPling:STATe 1
SOURce1:IQ:OUTPut:ANALog:BIAS:I 1
SOURce1:IQ:OUTPut:ANALog:BIAS:Q?
// 1
SOURce1:IQ:OUTPut:ANALog:OFFSet:I 2
SOURce1:IQ:OUTPut:ANALog:OFFSet:Q 2.5
SOURce1:IQ:OUTPut:ANALog:STATe 1
```

[SOURce<hw>]:IQ:OUTPut:ANALog:STATe.....	955
[SOURce<hw>]:IQ:OUTPut[:ANALog]:PRESet.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:CATalog?.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:STORE.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:LOAD.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:DELeTe.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE.....	957
[SOURce<hw>]:IQ:OUTPut:LEVel.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe].....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I.....	959
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q.....	959
[SOURce<hw>]:IQ:OUTPut[:ANALog]:POWEr:ATTDigital.....	959

---

#### [SOURce<hw>]:IQ:OUTPut:ANALog:STATe <State>

Activates the specified analog I/Q output.

#### Note: Interdependencies

The following functions cannot be activated simultaneously. **They deactivate each other.**

- The internal baseband generator ([SOURce<hw>]:BB:<DigStd>:STATe) and the external digital baseband input ([SOURce<hw>]:BBIN:STATe)



- The external digital baseband input ([ :SOURce<hw>] :BBIN:STATe) and digital output ([ :SOURce<hw>] :IQ:OUTPut:DIGital:STATe) because they share the same physical connectors (Dig I/Q and the HS Dig I/Q).
- The digital output ([ :SOURce<hw>] :IQ:OUTPut:DIGital:STATe) and the output of analog I/Q signals:
  - If [ :SOURce<hw>] :IQ:SOURce BASEband, [ :SOURce<hw>] :IQ:STATe + :OUTPut<hw>:STATe or
  - [ :SOURce<hw>] :IQ:OUTPut:ANALog:STATe

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

SOURce:IQ:OUTPut:ANALog:STATe ON  
 Activates the output of the analog I/Q signal on the [I/Q Out 1] connectors.

**Manual operation:** See "State" on page 503

**[ :SOURce<hw>] :IQ:OUTPut[:ANALog]:PRESet**

Sets the default settings (\*RST values specified for the commands).

Not affected are:

- The state set with the command [ :SOURce<hw>] :IQ:OUTPut:ANALog:STATe.
- If SCONfiguration:EXternal:PBEHaviour 1, the I/Q output type set with the command [ :SOURce<hw>] :IQ:OUTPut[:ANALog]:TYPE.

**Example:** See [Example "Enabling and configuring the analog output"](#) on page 955.

**Usage:** Event

**Manual operation:** See "Set to Default" on page 503

**[ :SOURce<hw>] :IQ:OUTPut[:ANALog]:SETTing:CATalog?**

Queries the files with I/Q output settings in the default directory. Listed are files with the file extension \*.iqout.

**Return values:**

<Catalog> string

**Usage:** Query only

**Manual operation:** See "Save/Recall" on page 504

**[ :SOURce<hw>] :IQ:OUTPut[:ANALog]:SETTing:STORe <Filename>**

Stores the current settings into the selected file; the file extension (\*.iqout) is assigned automatically.



**Setting parameters:**

<Filename>            "<filename>"  
                           Filename or complete file path

**Usage:**                Setting only

**Manual operation:**   See ["Save/Recall"](#) on page 504

**[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTING:LOAD <Filename>**

Loads the selected file from the default or the specified directory. Loaded are files with extension \*.iqout.

**Setting parameters:**

<Filename>            "<filename>"  
                           Filename or complete file path

**Usage:**                Setting only

**Manual operation:**   See ["Save/Recall"](#) on page 504

**[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTING:DELeTe <Filename>**

Deletes the selected file from the default or specified directory. Deleted are files with the file extension \*.iqout.

**Setting parameters:**

<Filename>            "<filename>"  
                           Filename or complete file path

**Usage:**                Setting only

**Manual operation:**   See ["Save/Recall"](#) on page 504

**[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE <Type>**

Sets the type of the analog signal.

**Example:**                SOURce1:IQ:OUTPup:ANALog:TYPE DIFFerential

**Options:**                DIFFerential requires R&S SMBVB-K17

**Manual operation:**   See ["I/Q Connection"](#) on page 476  
                               See ["I/Q Output Type"](#) on page 504

**[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE <Mode>**

Determines the mode for setting the output parameters.

**Parameters:**

<Mode>                 FIXed | VARiable | VATTenuated  
                               **FIXed**  
                               Locks the I/Q output settings



**VARiable**

Unlocks the settings

**VATTenuated**

Attenuates the signal with the value set with the command [:

SOURce<hw>]:IQ:OUTPut:[ANALog]:POWer:ATTDigital.

\*RST:       FIXed

**Example:** See [Example"Enabling and configuring the analog output"](#) on page 955.

**Manual operation:** See ["Mode"](#) on page 505

**[:SOURce<hw>]:IQ:OUTPut:LEVel <Level>**

Sets the off-load voltage  $V_p$  of the analog I/Q signal output.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

Also, the value range depends on the installed options, see the data sheet.

**Parameters:**

<Level>                      float  
                                  Range:        depends on options to 4  
                                  Increment: 1E-4  
                                  \*RST:        1  
                                  Default unit: V

**Example:** See [Example"Enabling and configuring the analog output"](#) on page 955.

**Options:**                    B10

**Manual operation:** See ["I/Q Level  \$V\_p\$  EMF"](#) on page 505

**[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe] <State>**

Couples the bias setting of the I and Q signal components.

**Parameters:**

<State>                      1 | ON | 0 | OFF  
                                  \*RST:        0

**Example:** See [Example"Enabling and configuring the analog output"](#) on page 955.

**Manual operation:** See ["Couple I/Q Bias"](#) on page 505

**[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I <I>****[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q <Q>**

Specifies the amplifier bias  $V_{bias}$  of the respective I or Q component.



The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

**Parameters:**

<Q> float  
 Range: -3.6V to 3.6V  
 Increment: 1E-4  
 \*RST: 0  
 Default unit: V

**Example:** See [Example "Enabling and configuring the analog output"](#) on page 955.

**Manual operation:** See ["Bias \(EMF\)"](#) on page 506

**[ :SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I <I>**  
**[ :SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q <Q>**

Sets an offset  $V_{\text{offset}}$  between the inverting and non-inverting input of the differential analog I/Q output signal.

The value range is adjusted so that the maximum overall output voltage does not exceed 4V, see ["Maximum overall output voltage"](#) on page 502.

**Parameters:**

<Q> float  
 Range: -0.3V to 0.3V  
 Increment: 1E-4  
 \*RST: 0  
 Default unit: V

**Example:** See [Example "Enabling and configuring the analog output"](#) on page 955.

**Manual operation:** See ["Offset \(EMF\)"](#) on page 506

**[ :SOURce<hw>]:IQ:OUTPut[:ANALog]:POWer:ATTDigital <DAttenuation>**

For **[ :SOURce<hw>]:IQ:OUTPut[:ANALog]:MODEVATTenuated**, set the attenuation with that the signal is attenuated.

**Parameters:**

<DAttenuation> float  
 Range: -3.522 to 80  
 Increment: 1E-3  
 \*RST: 0

**Example:** SOURce1:IQ:OUTPut:ANALog:MODE VATTenuated  
 SOURce1:IQ:OUTPut:ANALog:POWer:ATTDigital 10

**Manual operation:** See ["Digital Attenuation"](#) on page 505



### 13.17.9.2 SOURce:IQ:OUTPut:DIGital commands

This section describes the commands of the output of a digital I/Q signal.

#### Required options

See "Required options" on page 494.

#### Common suffixes

The following common suffixes are used in the remote commands:

Suffix	Value	Description
CHANnel<st0>	0	Option: R&S SMBVB-K19, fixed channel number CHANnel0

#### Example: Enabling and configuring the HS Dig I/Q digital outputs

Option: R&S SMBVB-K19

```
SCONfiguration:OUTPut:MAPPING:DIGital:STReam1:STATe 1
SOURce1:IQ:OUTPut:DIGital:INTErface HSD
SOURce1:IQ:OUTPut:DIGital:STATe 1
SOURce1:IQ:OUTPut:DIGital:CHANnel0:NAME "CH0"
SOURce1:IQ:OUTPut:DIGital:CHANnel0:SRATe?
// Respons in Hz: "100000000"
// Query the peak power level of the channel.
SOURce1:IQ:OUTPut:DIGital:CHANnel0:POWer:PEP?
// Response in dBFS: "0"
SOURce1:IQ:OUTPut:DIGital:CHANnel0:PEP -20
// Query the RMS power level of the channel.
SOURce1:IQ:OUTPut:DIGital:CHANnel0:POWer:LEVel?
// Response in dBFS: "-20"
SOURce1:IQ:OUTPut:DIGital:CHANnel0:STATe 1
```

[SOURce<hw>]:IQ:OUTPut:DIGital:STATe.....	961
[SOURce<hw>]:IQ:OUTPut:DIGital:INTErface.....	961
[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce.....	961
[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe.....	962
[SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?.....	962
[SOURce]:IQ:OUTPut:DIGital:GDElay:CSTate.....	962
[SOURce]:IQ:OUTPut:DIGital:POWer:VIA.....	963
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:PEP.....	963
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP.....	963
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:LEVel.....	963
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel.....	963
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP:MODE.....	964
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement].....	964
[SOURce<hw>]:IQ:OUTPut:DIGital:PON.....	964
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:NAME.....	965
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:SRATe.....	965
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:STATe.....	965



<a href="#">[:SOURce]:IQ:OUTPut:DIGital:SRATe:SUM?</a> .....	965
<a href="#">[:SOURce]:IQ:OUTPut:DIGital:SRATe:MAX?</a> .....	965

---

### **`[:SOURce<hw>]:IQ:OUTPut:DIGital:STATe <State>`**

Activates the digital I/Q signal output.

#### **Note: Interdependencies**

The following functions cannot be activated simultaneously. **They deactivate each other.**

- The internal baseband generator (`[:SOURce<hw>]:BB:<DigStd>:STATe`) and the external digital baseband input (`[:SOURce<hw>]:BBIN:STATe`)
- The external digital baseband input (`[:SOURce<hw>]:BBIN:STATe`) and digital output (`[:SOURce<hw>]:IQ:OUTPut:DIGital:STATe`) because they share the same physical connectors (Dig I/Q and the HS Dig I/Q).
- The digital output (`[:SOURce<hw>]:IQ:OUTPut:DIGital:STATe`) and the output of analog I/Q signals:
  - If `[:SOURce<hw>]:IQ:SOURce BASEband, [:SOURce<hw>]:IQ:STATe + :OUTPut<hw>:STATe` or
  - `[:SOURce<hw>]:IQ:OUTPut:ANALog:STATe`

#### **Parameters:**

`<State>`                      1 | ON | 0 | OFF  
                               \*RST:            0

#### **Example:**

```
SOURce:IQ:OUTPut:DIGital:STATe ON
// activates the output connector
```

**Manual operation:** See ["State"](#) on page 496

---

### **`[:SOURce<hw>]:IQ:OUTPut:DIGital:INTerface <BboutInterfMode>`**

Selects the connector at that the signal is output.

#### **Parameters:**

`<BboutInterfMode>`    HSDin | DIN  
                               **HSDin**  
                               HS Dig I/Q  
                               **DIN**  
                               Dig I/Q  
                               \*RST:            DIN

**Manual operation:** See ["Interface"](#) on page 496

---

### **`[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce <Source>`**

Queries the sample rate source that is a user-defined value.



**Parameters:**

<Source> USER  
 User-defined sample rate source  
 \*RST: USER

**Example:**

SOURce:IQ:OUTPut:DIGital:SRATe:SOURce?  
 \\ Response: "USER"  
 SOURce:IQ:OUTPut:DIGital:SRATe 400  
 \\ Sets a sample rate of 400 Hz.

**Manual operation:** See ["Source"](#) on page 496

**[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe <SRate>**

Sets the sample rate of the digital I/Q output signal.

**Parameters:**

<SRate> float  
 Range: 400 to depends on options  
 Increment: 0.001  
 \*RST: 1E8  
 Default unit: Hz  
 The maximum value depends on the connected receiving device. For more information, see data sheet.

**Manual operation:** See ["Value"](#) on page 496

**[:SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?**

Queries information on the connected device.

**Return values:**

<CDevice> string

**Example:**

SOURce:IQ:OUTPut:DIGital:CDEvice?

**Usage:**

Query only

**Manual operation:** See ["Connected Device"](#) on page 496

**[:SOURce]:IQ:OUTPut:DIGital:GDElay:CSTate <CompState>**

Enables group delay compensation.

**Parameters:**

<CompState> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

SOURce:IQ:OUTPut:DIGital:GDElay:CSTate 1

**Manual operation:** See ["Group Delay Compensation"](#) on page 501



---

**[[:SOURce]:IQ:OUTPut:DIGital:POWer:VIA <Via>**

Selects the respective level entry field for the I/Q output.

**Parameters:**

<Via>                      PEP | LEVel  
                               \*RST:        PEP

**Example:**                      SOURce:IQ:OUTPut:DIGital:POWer:VIA PEP

**Manual operation:**    See ["Set Level Via"](#) on page 499

---

**[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:PEP <Pep>**

**[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:PEP**  
    <BboutPepHs>

Sets the peak level of digital I/Q output signal or of the channel of the HS digital I/Q output signal.

The level is relative to full scale of 0.5 V (in terms of dB full scale).

**Parameters:**

<BboutPepHs>              float  
                                   Range:        -60 to 0  
                                   Increment: 0.01  
                                   \*RST:        0

**Example:**                      See [Example"Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Manual operation:**    See ["Peak Level"](#) on page 498

---

**[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:LEVel <Level>**

**[[:SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWer:LEVel**  
    <BboutHsLevel>

Sets the RMS level of digital I/Q output signal or of the channel of the HS digital I/Q output signal.

The level is relative to full scale of 0.5 V (in terms of dB full scale).

**Parameters:**

<BboutHsLevel>            float  
                                   Range:        -60 to 0  
                                   Increment: 0.01  
                                   \*RST:        0

**Example:**                      See [Example"Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Manual operation:**    See ["Level"](#) on page 498



---

**[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP:MODE <Mode>**

Defines the type of step size to vary the digital output power step by step.

**Parameters:**

<Mode>                      DECimal | USER

**DECimal**

Increases or decreases the level in steps of 10 dB.

**USER**

Increases or decreases the level in increments, determined with the command `[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement]`.

\*RST:                      DECimal

**Example:**

```
SOURce:IQ:OUTPut:DIGital:POWer:STEP:MODE USER
SOURce:IQ:OUTPut:DIGital:POWer:STEP 5
// Activates the step width to vary the level in 5 dB steps.
```

**Manual operation:**    See ["User Variation"](#) on page 500

---

**[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement] <Increment>**

Sets the step width. Use this value to vary the digital I/Q output level step-by-step.

**Parameters:**

<Increment>                float  
                                  Range:        0 to 100  
                                  Increment: 0.01  
                                  \*RST:        1

**Example:**                See `[[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP:MODE` on page 964.

**Manual operation:**    See ["User Variation"](#) on page 500

---

**[[:SOURce<hw>]:IQ:OUTPut:DIGital:PON <Pon>**

Sets the power-on state of the selected digital I/Q output.

**Parameters:**

<Pon>                        OFF | UNCHanged  
                                  \*RST:        OFF

**Example:**

```
SOURce:IQ:OUTPut:DIGital:PON OFF
// Deactivates the output connector,
// when the instrument is switched on.
```

**Manual operation:**    See ["Power-On State"](#) on page 500



---

**[[:SOURce]:IQ:OUTPut:DIgital:CHANnel<st0>:NAME <DigIqHsCHName>**

Sets the channel name.

**Parameters:**

<DigIqHsCHName> string

**Example:** See [Example"Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Options:** R&S SMBVB-K19

**Manual operation:** See ["Name"](#) on page 497

---

**[[:SOURce]:IQ:OUTPut:DIgital:CHANnel<st0>:SRATe <DigIqHsSratChan>**

Sets the sample rate of the channel of the HS digital I/Q output signal.

**Parameters:**

<DigIqHsSratChan> float

Range: 400 to depends on options

Increment: 0.001

\*RST: 100E6

The maximum value depends on the connected receiving device. For more information, see data sheet.

**Example:** See [Example"Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Options:** R&S SMBVB-K19

**Manual operation:** See ["Sample Rate"](#) on page 497

---

**[[:SOURce]:IQ:OUTPut:DIgital:CHANnel<st0>:STATe <DigIqHsOutChSta>**

Activates the channel.

**Parameters:**

<DigIqHsOutChSta> 1 | ON | 0 | OFF

\*RST: 1

**Example:** See [Example"Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Options:** R&S SMBVB-K19

**Manual operation:** See ["Active"](#) on page 498

---

**[[:SOURce]:IQ:OUTPut:DIgital:SRATe:SUM?**

**[[:SOURce]:IQ:OUTPut:DIgital:SRATe:MAX?**

Queries the maximum supported sample rate.



**Return values:**

<DigIqhsInSRMax> integer  
 Range: 400 to depends on options  
 \*RST: depends on options  
 The maximum value depends on the connected receiving device. For more information, see data sheet.

**Example:** See [Example "Enabling and configuring the HS Dig I/Q digital outputs"](#) on page 960.

**Usage:** Query only

**Options:** R&S SMBVB-K19

**Manual operation:** See ["Aggregated Link Sample Rate"](#) on page 498

### 13.17.10 SOURce:LFOutput subsystem

The SOURce:LFOutput subsystem contains the commands for setting the LF signal source in CW and Sweep mode and for analog modulation.

**Example: Setup an LF sweep**

The following example shows a command sequence to set up an LF sweep.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the trigger mode, the sweep mode and the sweep range
TRIGger1:LFFSweep:SOURce SINGLE
SOURce1:LFOutput1:SWEep:FREQuency:MODE AUTO
SOURce1:LFOutput1:FREQuency:START 1 kHz
SOURce1:LFOutput1:FREQuency:STOP 7 kHz

// Select linear spacing
// Select the waveform shape for the frequency sweep cycle
// Set the step width and the dwell time.
SOURce1:LFOutput1:SWEep:FREQuency:SPACing LINear
SOURce1:LFOutput1:SWEep:FREQuency:SHAPE SAWtooth
SOURce1:LFOutput1:SWEep:FREQuency:STEP:LINear 100 Hz
SOURce1:LFOutput1:SWEep:FREQuency:DWELL 150 ms
// Alternatively to the step width set the number of steps
SOURce1:LFOutput1:SWEep:FREQuency:POINTs 61

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
SOURce1:LFOutput:SWEep:FREQuency:RETRace 1

// Activate the LF frequency sweep
SOURce1:LFOutput:FREQuency:MODE SWE
```



```
// Trigger the sweep(depending on the set mode) and query the status
// Perform a one-off LF sweep
SOURcel:LFOutput1:SWEep:FREQuency:EXECute
SOURcel:LFOutput1:SWEep:FREQuency:RUNNing?
// 1
// the sweep is running

// *****
// For manual step LF sweep use the following commands
*RST; *CLS
SOURcel:LFOutput1:SWEep:FREQuency:MODE MANual
// Activate the LF frequency sweep
SOURcel:LFOutput1:FREQuency:MODE SWEep
// Activate LF Output1.
SOURcel:LFOutput1:STATe 1
// Input the frequency manually for each step
SOURcel:LFOutput1:FREQuency:MANual 2 kHz
SOURcel:LFOutput1:FREQuency:MANual 2.1 kHz
// Alternatively use UP or DOWN parameter with set step width.
SOURcel:LFOutput1:SWEep:FREQuency:STEP:LINear 500 Hz
SOURcel:LFOutput1:FREQuency:MANual UP
```

### Example: Configuring the LF generator

The following is a simple example on how to configure the LF generator and output the generated signal.

```
// configure the signal of the LF1 generator
SOURcel:LFOutput1:SHApe SQU
SOURcel:LFOutput1:SHApe:PULSe:PERiod 0.001
SOURcel:LFOutput1:SHApe:PULSe:WIDTh 0.0005
SOURcel:LFOutput1:SHApe:PULSe:DCYCLe 0.5
// configure the signal of the LF1 generator
SOURcel:LFOutput2:SHApe SINE
SOURcel:LFOutput2:FREQuency 1000000
SOURcel:LFOutput2:PERiod?
// 0.000001

// changing the LF signal shape
// SOURcel:LFOutput2:SHApe TRAP
// SOURcel:LFOutput2:SHApe:PULSe:PERiod 0.2
// SOURcel:LFOutput2:SHApe:TRAPeZe:RISE 0.0001
// SOURcel:LFOutput2:SHApe:TRAPeZe:FALL 0.001
// SOURcel:LFOutput2:SHApe:TRAPeZe:FALL 0.0001
// SOURcel:LFOutput2:SHApe:TRAPeZe:HIGH 0.0005
// SOURcel:LFOutput2:SHApe TRI
// SOURcel:LFOutput2:SHApe:PULSe:PERiod 0.1
// SOURcel:LFOutput2:SHApe:TRIangle:RISE 0.0001

// activate the LF output and select the LF1 as signal source
// configure the LF output signal
```



```

SOURce1:LFOutput1:FREQuency:MODE CW
SOURce1:LFOutput1:STATe 1
SOURce1:LFOutput1:SOURce Lf1
SOURce1:LFOutput1:INTernal:VOLTage 1
SOURce1:LFOutput1:OFFSet 0.001

```

- [LF generator settings](#)..... 968
- [LF sweep settings](#)..... 975

### 13.17.10.1 LF generator settings

With the commands described in this section, you can configure the LF signal source.

<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:BANDwidth?</a> .....	968
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:FREQuency</a> .....	969
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:PERiod?</a> .....	969
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:MANual</a> .....	969
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:MODE</a> .....	970
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:STOP</a> .....	970
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:START</a> .....	970
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;[:STATe]</a> .....	971
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:INTernal:VOLTage</a> .....	971
<a href="#">[:SOURce]:LFOutput:OFFSet</a> .....	971
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:SOURce</a> .....	972
<a href="#">[:SOURce]:LFOutput:SIMPedance</a> .....	972
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:SOURce:PATH</a> .....	972
<a href="#">[:SOURce]:LFOutput:VOLTage</a> .....	972
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE</a> .....	973
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:PULSe:DCYCLE</a> .....	973
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:PULSe:PERiod</a> .....	973
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:PULSe:WIDTh</a> .....	974
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRAPeZe:FALL</a> .....	974
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRAPeZe:HIGh</a> .....	974
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRAPeZe:PERiod</a> .....	974
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRAPeZe:RISE</a> .....	975
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRlangle:PERiod</a> .....	975
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHAPE:TRlangle:RISE</a> .....	975

---

#### **`[:SOURce]:LFOutput<ch>:BANDwidth?`**

Queries the bandwidth of the external LF signal.

#### **Return values:**

```

<Bandwidth>      BW0M2 | BW10m
                  *RST:      BW10m

```

#### **Example:**

```

LFO:BAND?
// BW10m
// the bandwidth of the externally supplied LF signal is 10 MHz

```

**Usage:** Query only



**Manual operation:** See ["Bandwidth"](#) on page 389

---

### **[ :SOURce]:LFOutput<ch>:FREQuency <Frequency>**

Sets the frequency of the LF signal in `[ :SOURce<hw>]:LFOutput:FREQuency:MODE` `CW` | `FIXed` mode.

#### **Note**

- If signal source "Internal" is set, the instrument performs the analog modulations (AM/FM/PhiM/PM) with this frequency.
- In sweep mode (`[ :SOURce<hw>]:LFOutput:FREQuency:MODE` `SWE`), the frequency is coupled with the sweep frequency.

#### **Parameters:**

<Frequency>	float
Range:	depends on the installed options
Increment:	0.01
*RST:	1000
Default unit:	Hz

#### **Example:**

```
SOURce1:LFOutput1:FREQuency 5 kHz
// sets the LF frequency
```

**Manual operation:** See ["Frequency"](#) on page 387

---

### **[ :SOURce<hw>]:LFOutput<ch>:PERiod?**

Queries the repetition frequency of the sine signal.

#### **Return values:**

<LfSinePeriod>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	0.001
Default unit:	s

#### **Example:**

See [Example "Configuring the LF generator"](#) on page 967.

#### **Usage:**

Query only

---

### **[ :SOURce<hw>]:LFOutput:FREQuency:MANual <Manual>**

Sets the frequency of the subsequent sweep step if `LFO:SWE:MODE` `MAN`.

Use a separate command for each sweep step.



**Parameters:**

&lt;Manual&gt;

float

You can select any value within the setting range, where:

START is set with `[ :SOURce<hw> ] :LFOutput:FREQuency:START`STOP is set with `[ :SOURce<hw> ] :LFOutput:FREQuency:STOP`

Range: START to STOP

Increment: 0.1

\*RST: 1000

**Example:**See [Example"Setup an LF sweep"](#) on page 966.**Manual operation:**See ["Current Frequency"](#) on page 339**`[ :SOURce<hw> ] :LFOutput:FREQuency:MODE <Mode>`**

Sets the mode for the output of the LF generator frequency, and determines the commands to be used for frequency settings.

**Parameters:**

&lt;Mode&gt;

CW | FIXed | SWEep

**CW|FIXed**

Sets the fixed-frequency mode. CW and FIXed are synonyms.

To set the output frequency, use command `[ :SOURce ] :LFOutput<ch>:FREQuency`**SWEep**

Sets sweep mode.

To set the frequency, use the commands:

`[ :SOURce<hw> ] :LFOutput:FREQuency:START` and `[ :SOURce<hw> ] :LFOutput:FREQuency:STOP`Or `[ :SOURce<hw> ] :LFOutput:FREQuency:MANual`

\*RST: CW

**Example:**See [Example"Setup an LF sweep"](#) on page 966.**Manual operation:**See ["State \(LF frequency sweep\)"](#) on page 339**`[ :SOURce<hw> ] :LFOutput:FREQuency:STOP <Stop>`****`[ :SOURce<hw> ] :LFOutput:FREQuency:START <Start>`**Sets the start/stop frequency for `[ :SOURce<hw> ] :LFOutput:FREQuency:MODE SWEep`.**Parameters:**

&lt;Start&gt;

float

Range: 0.1 Hz to 1 MHz

Increment: 0.1

\*RST: 1 KHz



**Example:** See [Example"Setup an LF sweep"](#) on page 966.

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 344

**[ :SOURce]:LFOutput<ch>[:STATe] <State>**

Activates LF signal output.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["State"](#) on page 391

**[ :SOURce]:LFOutput<ch>:INTernal:VOLTage <Voltage>**

Sets the output voltage for the LF generators.

The sum of both values must not exceed the overall output voltage, set with command [\[:SOURce\]:LFOutput:VOLTage](#).

**Suffix:**

<ch> [1]|2  
LF1 and LF2

**Parameters:**

<Voltage> float  
Range: 0 to 4  
Increment: 0.001  
\*RST: 1

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Output Voltage"](#) on page 391

**[ :SOURce]:LFOutput:OFFSet <Offset>**

Sets a DC offset at the LF Output.

**Parameters:**

<Offset> float  
Range: depends on lfo voltage  
Increment: 0.001  
\*RST: 0

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["DC-Offset"](#) on page 391



---

**[[:SOURce]:LFOutput<ch>:SOURce <Source>**

Determines the LF signal to be synchronized, when monitoring is enabled.

**Parameters:**

<Source>

LF1 | LF2 | NOISe | AM | FMPM | EXT1

**LF1|LF2**

Selects an internally generated LF signal.

**NOISe**

Selects an internally generated noise signal.

**EXT1**

Selects an externally supplied LF signal

**AM**

Selects the AM signal.

**FMPM**

Selects the signal also used by the frequency or phase modulations.

\*RST: LF1

**Example:** See [Example "Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Source"](#) on page 391

---

**[[:SOURce]:LFOutput:SIMPedance <SImpedance>**

Selects the impedance of the LF output.

**Parameters:**

<SImpedance>

G600 | G50

\*RST: G50

**Example:** `SOURce:LFOutput:SIMPedance G600`  
Sets the output impedance of the LF generator to 600 Ohm.

**Manual operation:** See ["Source Impedance"](#) on page 392

---

**[[:SOURce]:LFOutput<ch>:SOURce:PATH <SourPath>**

Determines the path of the LF output source.

**Parameters:**

<SourPath>

A | B

\*RST: A

**Example:** `LFO:SOUR:PATH?`  
Queries the currently set path for the LF output signal source.

---

**[[:SOURce]:LFOutput:VOLTage <Voltage>**

Sets the voltage of the LF output.



**Parameters:**

<Voltage> float  
 Range: dynamic (see data sheet)  
 Increment: 0.001  
 \*RST: 1

**Example:** SOURce:LFOutput:VOLTage 1.5

**[SOURce<hw>]:LFOutput<ch>:SHAPE <Shape>**

Selects the waveform shape of the LF signal.

**Parameters:**

<Shape> SINE | SQUARE | PULSE | TRIangle | TRAPeze  
 \*RST: SINE

**Example:** See [Example "Configuring the LF generator"](#) on page 967.

**Options:** R&S SMBVB-K24

**Manual operation:** See ["Shape"](#) on page 385

**[SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:DCYCLE <DCycle>**

Sets the duty cycle for the shape pulse.

**Parameters:**

<DCycle> float  
 Range: 1E-6 to 100  
 Increment: 1E-6  
 \*RST: 50  
 Default unit: PCT

**Example:** See [Example "Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Pulse Duty Cycle"](#) on page 387

**[SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:PERiod <Period>**

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period> float  
 Range: 1E-6 to 100  
 Increment: 1E-8  
 \*RST: 1E-3

**Example:** See [Example "Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Period"](#) on page 387



---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:WIDTH <Width>**

Sets the pulse width of the generated pulse.

**Parameters:**

<Width> float  
 Range: 1E-6 to 100  
 Increment: 1E-8  
 \*RST: 5E-4

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Pulse Width"](#) on page 387

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:FALL <Fall>**

Selects the fall time for the trapezoid shape of the LF generator.

**Parameters:**

<Fall> float  
 Range: 1E-6 to 100  
 Increment: 10E-9  
 \*RST: 250E-6

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Trapezoid Rise / Fall"](#) on page 388

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:HIGh <High>**

Sets the high time for the trapezoid signal of the LF generator.

**Parameters:**

<High> float  
 Range: 1E-6 to 100  
 Increment: 10E-9  
 \*RST: 250E-6

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Trapezoid High"](#) on page 388

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod <Period>**

Sets the period of the generated trapezoid shape. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period> float  
 Range: 1E-6 to 100  
 Increment: 1E-8  
 \*RST: 1E-3



**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Period"](#) on page 387

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:RISE <Rise>**

Selects the rise time for the trapezoid shape of the LF generator.

**Parameters:**

<Rise>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	250E-6

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Trapezoid Rise / Fall"](#) on page 388

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRIangle:PERiod <Period>**

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	0.001

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Period"](#) on page 387

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRIangle:RISE <Rise>**

Selects the rise time for the triangle single of the LF generator.

**Parameters:**

<Rise>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	0.5E-3

**Example:** See [Example"Configuring the LF generator"](#) on page 967.

**Manual operation:** See ["Triangle Rise"](#) on page 388

### 13.17.10.2 LF sweep settings

With the commands described in this section, you can configure the sweep of the LF signal.



<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:DWELI</a> .....	976
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:EXECute</a> .....	976
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:MODE</a> .....	976
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:POINts</a> .....	977
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:RETRace</a> .....	977
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:RUNNing?</a> .....	977
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:SHAPE</a> .....	978
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:SPACing</a> .....	978
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic</a> .....	978
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:STEP:LINear</a> .....	979

---

### **`[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:DWELI <Dwell>`**

Sets the dwell time for each frequency step of the sweep.

#### **Parameters:**

`<Dwell>` float  
 Range: 0.001 to 100  
 Increment: 100E-6  
 \*RST: 0.01  
 Default unit: s

**Example:** See [Example"Setup an LF sweep"](#) on page 966.

**Manual operation:** See ["Dwell Time"](#) on page 342

---

### **`[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:EXECute`**

Immediately starts an LF sweep.

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:MODE](#) determines which sweep is executed, e.g. `SOURce:LFOutput:SWEep:FREQUENCY:MODE STEP`.

**Example:** See [Example"Setup an LF sweep"](#) on page 966.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 342

---

### **`[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:MODE <Mode>`**

Sets the cycle mode of the LF sweep.

#### **Parameters:**

`<Mode>` AUTO | MANual | STEP

#### **AUTO**

Performs a complete sweep cycle from the start to the end value when a trigger event occurs.

The dwell time determines the time period until the signal switches to the next step.



**MANual**

Performs a single sweep step when a manual trigger event occurs.

The trigger system is not active. To trigger each frequency step of the sweep individually, use the command `[ :SOURce<hw> ] : LFOutput:FREQuency:MANual` on page 969.

**STEP**

Each trigger command triggers one sweep step only.

The frequency increases by the value set with the commands:

`[ :SOURce<hw> ] : LFOutput:SWEep [ :FREQuency ] : STEP [ : LINear ]` (linear spacing)

`[ :SOURce<hw> ] : LFOutput:SWEep [ :FREQuency ] : STEP : LOGarithmic` (logarithmic spacing)

\*RST: AUTO

**Example:** See [Example "Setup an LF sweep"](#) on page 966.

**Manual operation:** See ["Mode"](#) on page 339

**[ :SOURce<hw> ] : LFOutput:SWEep [ :FREQuency ] : POINts <Points>**

Sets the number of steps in an LF sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331

**Parameters:**

<Points> integer  
Range: 2 to POINts  
\*RST: 50

**Example:** See [Example "Setup an LF sweep"](#) on page 966.

**[ :SOURce<hw> ] : LFOutput:SWEep [ :FREQuency ] : RETRace <State>**

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Manual operation:** See ["Retrace"](#) on page 340

**[ :SOURce<hw> ] : LFOutput:SWEep [ :FREQuency ] : RUNNing?**

Queries the current status of the LF frequency sweep mode.



**Return values:**

&lt;State&gt; 1 | ON | 0 | OFF

**Example:** See [Example"Setup an LF sweep"](#) on page 966.**Usage:** Query only**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE <Shape>**

Sets the cycle mode for a sweep sequence (shape).

**Parameters:**

&lt;Shape&gt; SAWTooth | TRIangle

\*RST: SAWTooth

**Example:** See [Example"Setup an LF sweep"](#) on page 966.**Manual operation:** See ["Shape"](#) on page 340**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing <Spacing>**

Selects linear or logarithmic sweep spacing.

**Parameters:**

&lt;Spacing&gt; LINear | LOGarithmic

\*RST: LINear

**Example:** See [Example"Setup an LF sweep"](#) on page 966.**Manual operation:** See ["Spacing"](#) on page 342**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic  
<Logarithmic>**

Sets the step width factor for logarithmic sweeps to calculate the frequencies of the steps.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331**Parameters:**

&lt;Logarithmic&gt; float

The unit is mandatory

Range: 0.01 to 100

Increment: 0.01

\*RST: 1

Default unit: PCT

**Example:** See [Example"Setup an LF sweep"](#) on page 966.**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 345



**[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear] <Linear>**

Sets the step width for the linear sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331

**Parameters:**

<Linear>	float
Range:	0.1 to STOP-START
Increment:	0.1
*RST:	1000

**Example:** See [Example "Setup an LF sweep"](#) on page 966.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 345

### 13.17.11 SOURce:LIST subsystem

The SOURce:LIST subsystem contains all commands for defining lists and for handling of list files.

List files have the predefined file extension \*.lsw.

Refer to [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705 for general information on file handling in the default and in a specific directory.



- \*RST does not affect data lists.
- SCPI refers to the individual lists as segments.

**Example: Create an RF list and activate the list mode**

The following example shows a command sequence to create an RF list and to activate the list mode. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available list files in the default
// directory /var/user
// Select the list file or create it (if not existing)
*RST; *CLS
SOUR1:LIST:CAT?
// Response:- shows the name of available list files (if applicable)
SOUR1:LIST:SEL "/var/user/list1.lsw"

// Write the frequency/level/dwell time values in the selected list file
// existing data is overwritten
// Query the number of frequency/power/dwell time entries in the selected list
// Query the amount of free memory (in bytes) for list mode lists
SOUR1:LIST:FREQ 58 MHz, 61 MHz, 73 MHz, 86 MHz, 91 MHz, 92 MHz, 98 MHz
```



```

SOUR1:LIST:POW 13 dBm, 12 dBm, 5 dBm, 3 dBm, 0 dBm, 4 dBm, 6 dBm
SOUR1:LIST:DWEL:LIST 10000, 100000, 200000, 19000, 10000, 150000, 220000
SOUR1:LIST:FREQ:POIN?
// 7
SOUR1:LIST:POW:POINT?
// 7
SOUR1:LIST:DWEL:LIST:POIN?
// 7
SOUR1:LIST:FREE?
// 2147483647 (bytes of free memory)

// Use dwell times from list
// Configure the list mode parameters
// Enable RF output
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:MODE "LIST"

OUTP1:STAT ON

// Use global dwell time
// Set only a part of the list (value pairs 3 to 5) to be processed
// Configure the list mode parameters using global dwell time
// Enable RF output
SOUR1:LIST:IND:START 2
SOUR1:LIST:IND:STOP 4
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:LIST 500 ms
OUTP1:STAT ON

// Enable the list mode
// Trigger the list (depending on the mode, not needed with trigger
// mode AUTO); query the current index
// Reset the list to the starting point
SOUR1:FREQ:MODE LIST
SOUR1:LIST:TRIG:EXEC
SOUR1:LIST:RUNN?
SOUR1:LIST:IND?
// 3
// value changes when the value is queried again
SOUR1:LIST:RES

// For list mode STEP use the following commands
*RST; *CLS
// Change list mode to STEP
SOUR1:LIST:MODE STEP
// Activate RF Output1
OUTP1:STAT 1
// Activate the list mode
SOUR1:FREQ:MODE LIST

```



```
// For each step: select frequency/powerlevel pair as index from the list
SOUR1:LIST:IND 2
SOUR1:LIST:IND 3
SOUR1:LIST:IND 4

// Use the selected list for path B (with List Mode B default settings)
SOUR2:LIST:SEL "/var/user/list1.lsw"
OUTP2:STAT ON
SOUR2:FREQ:MODE LIST
SOUR2:LIST:IND?
// 2
// value changes when the value is queried again

// Deactivate the list mode
SOUR1:FREQ:MODE CW
```

### Example: List mode data exchange

The following example shows a command sequence to export a list (here the RF list created with the example before) into an ASCII file. Further hardware settings are not considered.

```
*RST; *CLS
LIST:DEXC:MODE EXP

// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOUR1:LIST:DEXC:AFIL:EXT CSV
SOUR1:LIST:DEXC:AFIL:SEP:DEC DOT
SOUR1:LIST:DEXC:AFIL:SEP:COL COMM

// Select source and destination path/directory
// Query available listfiles in default directory "/var/user"
SOUR1:LIST:CAT?
// list1
SOUR1:LIST:DEXC:AFIL:SEL "/var/user/list1ASCII"
SOUR1:LIST:DEXC:SEL "/var/user/list1"

// Export the list file data into the ASCII file
SOUR1:LIST:DEXC:EXEC

// Query the available ASCII files with extension .csv
SOUR1:LIST:DEXC:AFIL:CAT?
// Response: "list1ASCII"

// Deactivate the list mode
SOUR1:FREQ:MODE CW
```



- [List mode settings](#)..... 982
- [List mode file operation](#)..... 987
- [List mode data exchange](#)..... 989

### 13.17.11.1 List mode settings

With the following commands, you can create list mode data, select the trigger mode and determine the dwell time.

<a href="#">[:SOURce&lt;hw&gt;]:LIST:DWELL</a> .....	982
<a href="#">[:SOURce&lt;hw&gt;]:LIST:DWELL:MODE</a> .....	982
<a href="#">[:SOURce&lt;hw&gt;]:LIST:DWELL:LIST</a> .....	983
<a href="#">[:SOURce&lt;hw&gt;]:LIST:DWELL:LIST:POINTS?</a> .....	983
<a href="#">[:SOURce&lt;hw&gt;]:LIST:FREQUENCY</a> .....	983
<a href="#">[:SOURce&lt;hw&gt;]:LIST:FREQUENCY:POINTS?</a> .....	984
<a href="#">[:SOURce&lt;hw&gt;]:LIST:INDEX</a> .....	984
<a href="#">[:SOURce&lt;hw&gt;]:LIST:INDEX:START</a> .....	984
<a href="#">[:SOURce&lt;hw&gt;]:LIST:INDEX:STOP</a> .....	984
<a href="#">[:SOURce&lt;hw&gt;]:LIST:MODE</a> .....	985
<a href="#">[:SOURce&lt;hw&gt;]:LIST:POWER</a> .....	985
<a href="#">[:SOURce&lt;hw&gt;]:LIST:POWER:POINTS?</a> .....	986
<a href="#">[:SOURce&lt;hw&gt;]:LIST:TRIGGER:EXECUTE</a> .....	986
<a href="#">[:SOURce&lt;hw&gt;]:LIST:TRIGGER:SOURce</a> .....	986
<a href="#">[:SOURce&lt;hw&gt;]:LIST:RUNNING?</a> .....	987

---

#### **[\[:SOURce<hw>\]:LIST:DWELL <Dwell>](#)**

Sets the global dwell time. The instrument generates the signal with the frequency / power value pairs of each list entry for that particular period.

See also [Significant parameters and functions](#).

#### **Parameters:**

<Dwell>	float
	Range: 1E-3 to 100
	Increment: 1E-6
	*RST: 0.01

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Global Dwell Time"](#) on page 350

---

#### **[\[:SOURce<hw>\]:LIST:DWELL:MODE <DwellMode>](#)**

Selects the dwell time mode.

#### **Parameters:**

<DwellMode>	LIST   GLOBal
-------------	---------------



**LIST**

Uses the dwell time, specified in the data table for each value pair individually.

**GLOBal**

Uses a constant dwell time, set with command [ :

[SOURce<hw>\]:LIST:DWELL](#).

\*RST: GLOBal

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Dwell Time Mode"](#) on page 349

**[ :SOURce<hw>]:LIST:DWELL:LIST <Dwell>**

Enters the dwell time values in the selected list in µs.

**Parameters:**

<Dwell> <Dwell#1>{, <Dwell#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data. The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy. See also :

[FORMat \[ :DATA\]](#) on page 737 for more details.

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Edit List Mode Data"](#) on page 355

**[ :SOURce<hw>]:LIST:DWELL:LIST:POINTS?**

Queries the number (points) of dwell time entries in the selected list.

**Return values:**

<Points> integer

Range: 0 to INT\_MAX

\*RST: 0

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 979.

**Usage:** Query only

**[ :SOURce<hw>]:LIST:FREQUENCY <Frequency>**

Enters the frequency values in the selected list.

**Parameters:**

<Frequency> <Frequency#1>{, <Frequency#2>, ...} | block data



You can either enter the data as a list of numbers, or as binary block data.

The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also : [FORMat \[ : DATA \]](#).

Range: 300 kHz to RFmax (depends on the installed options)

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Edit List Mode Data"](#) on page 355

### **[ :SOURce<hw> ]:LIST:FREQuency:POINts?**

Queries the number (points) of frequency entries in the selected list.

#### **Return values:**

<Points> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Usage:** Query only

### **[ :SOURce<hw> ]:LIST:INDEx <Index>**

Sets the list index in [LIST:MODE STEP](#).

After the trigger signal, the instrument processes the frequency and level settings of the selected index.

#### **Parameters:**

<Index> integer  
 \*RST: 0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Current Index"](#) on page 349

### **[ :SOURce<hw> ]:LIST:INDEx:STARt <Start>**

### **[ :SOURce<hw> ]:LIST:INDEx:STOP <Stop>**

Sets the start and stop index of the index range which defines a subgroup of frequency/level value pairs in the current list.



**Parameters:**

<Stop> integer  
 Index range  
 Only values inside this range are processed in list mode  
 Range: 0 to list length  
 \*RST: 0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["List Range from/to"](#) on page 351

**[[:SOURce<hw>]:LIST:MODE <Mode>**

Sets the list mode.

The instrument processes the list according to the selected mode and trigger source. See [LIST:TRIG:SOUR AUTO](#), [SING](#) or [EXT](#) for the description of the trigger source settings.

**Parameters:**

<Mode> AUTO | STEP  
**AUTO**  
 Each trigger event triggers a complete list cycle.  
**STEP**  
 Each trigger event triggers only one step in the list processing cycle. The list is processed in ascending order.  
 \*RST: AUTO

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Mode"](#) on page 349

**[[:SOURce<hw>]:LIST:POWer <Power>**

Enters the level values in the selected list. The number of level values must correspond to the number of frequency values. Existing data is overwritten.

**Parameters:**

<Power> <Power#1>{, <Power#2>, ...} | block data  
 You can either enter the data as a list of numbers, or as binary block data.  
 The list of numbers can be of any length, with the list entries separated by commas.  
 In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.  
 See also [:FORMat \[:DATA\]](#).  
 Range: depends on the installed options  
 Default unit: dBm



**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Edit List Mode Data"](#) on page 355

#### **[ :SOURce<hw> ]:LIST:POWer:POINts?**

Queries the number (points) of level entries in the selected list.

##### **Return values:**

<Points>                      integer  
                                  Range:        0 to INT\_MAX  
                                  \*RST:        0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Usage:** Query only

#### **[ :SOURce<hw> ]:LIST:TRIGger:EXECute**

Starts the processing of a list in list mode.

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Usage:** Event

**Manual operation:** See ["Execute Single"](#) on page 350

#### **[ :SOURce<hw> ]:LIST:TRIGger:SOURce <Source>**

Selects the trigger source for processing lists.

The designation of the parameters correspond to those in sweep mode. SCPI standard uses other designations for the parameters, which are also accepted by the instrument. The SCPI designation should be used if compatibility is an important consideration. For an overview, see the following table:

Rohde & Schwarz parameter	SCPI parameter	Applies to the list mode parameters:
AUTO	IMMediate	[ :SOURce<hw> ]:LIST:MODE AUTO
SINGle	BUS	[ :SOURce<hw> ]:LIST:MODE AUTO or [ :SOURce<hw> ]:LIST:MODE STEP
EXTernal	EXTernal	[ :SOURce<hw> ]:LIST:MODE AUTO or [ :SOURce<hw> ]:LIST:MODE STEP

##### **Parameters:**

<Source>                      AUTO | IMMediate | SINGle | BUS | EXTernal



**AUTO|IMMediate**

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. The selected list is restarted as soon as it is finished.

**SINGle|BUS**

The list is triggered by the command `[ :SOURce<hw> ] :LIST:TRIGger:EXECute`. The list is executed once.

**EXternal**

The list is triggered externally and executed once.

\*RST: AUTO

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Manual operation:** See ["Mode"](#) on page 349

---

**[ :SOURce<hw> ] :LIST:RUNning?**

Queries the current state of the list mode.

**Return values:**

<State> 1 | ON | 0 | OFF  
1  
Signal generation based on the list mode is active.

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.

**Usage:** Query only

**13.17.11.2 List mode file operation**

The following section covers basic commands to file handling in list mode.

<code>[ :SOURce&lt;hw&gt; ] :LIST:CATalog?</code> .....	987
<code>[ :SOURce&lt;hw&gt; ] :LIST:DELeTe</code> .....	988
<code>[ :SOURce&lt;hw&gt; ] :LIST:DELeTe:ALL</code> .....	988
<code>[ :SOURce&lt;hw&gt; ] :LIST:FREE?</code> .....	988
<code>[ :SOURce&lt;hw&gt; ] :LIST:RESet</code> .....	989
<code>[ :SOURce&lt;hw&gt; ] :LIST:SElect</code> .....	989

---

**[ :SOURce<hw> ] :LIST:CATalog?**

Queries the available list files in the specified directory.

**Return values:**

<Catalog> string  
List of list filenames, separated by commas

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 979.



**Usage:** Query only  
**Manual operation:** See "List Mode Data" on page 351

#### **[SOURce<hw>]:LIST:DELeTe <Filename>**

Deletes the specified list.

#### **Setting parameters:**

<Filename> string  
 Filename or complete file path; file extension is optional.

**Example:** See [:SOURce<hw>]:LIST:DELeTe:ALL on page 988.

**Usage:** Setting only  
**Manual operation:** See "List Mode Data" on page 351

#### **[SOURce<hw>]:LIST:DELeTe:ALL**

Deletes all lists in the set directory.

This command can only be executed, if:

- No list file is selected.
- List mode is disabled.

**Example:**

```

SOUR1:LIST:CAT?
// list,my_list
SOUR1:LIST:DEL "/var/user/list1"
SOUR1:LIST:CAT?
// my_list
SOUR1:FREQ:MODE?
// LIST
SOUR1:LIST:SEL?
// /var/user/my_list.lsw
//deactivate list mode
SOUR1:FREQ:MODE CW
SOUR1:LIST:DELeTe:ALL
SOUR1:LIST:CAT?
// -
// all list files are deleted
  
```

**Usage:** Event  
**Manual operation:** See "List Mode Data" on page 351

#### **[SOURce<hw>]:LIST:FREE?**

Queries the amount of free memory (in bytes) for list mode lists.



**Return values:**

<Free> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example](#) "Create an RF list and activate the list mode" on page 979.

**Usage:** Query only

**[SOURce<hw>]:LIST:RESet**

Jumps to the beginning of the list.

**Example:** See [Example](#) "Create an RF list and activate the list mode" on page 979.

**Usage:** Event

**Manual operation:** See ["Reset"](#) on page 350

**[SOURce<hw>]:LIST:SElect <Filename>**

Selects or creates a data list in list mode.

If the list with the selected name does not exist, a new list is created.

**Parameters:**

<Filename> string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example](#) "Create an RF list and activate the list mode" on page 979.

**Manual operation:** See ["List Mode Data"](#) on page 351

**13.17.11.3 List mode data exchange**

With the following commands, you can configure lists in ASCII format and export or import them accordingly.

<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:AFILe:CATalog?</a>	990
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:EXECute</a>	990
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:AFILe:EXTension</a>	990
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:AFILe:SElect</a>	990
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:AFILe:SEParator:COLumn</a>	991
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:AFILe:SEParator:DECimal</a>	991
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:MODE</a>	991
<a href="#">[SOURce&lt;hw&gt;]:LIST:DEXChange:SElect</a>	991



---

**[SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?**

Queries the available ASCII files for export or import of list mode data in the current or specified directory.

**Return values:**

<Catalog>                      string  
List of ASCII files \*.txt or \*.csv, separated by commas.

**Example:**                      See [Example"List mode data exchange"](#) on page 981.

**Usage:**                        Query only

**Manual operation:**    See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 353

---

**[SOURce<hw>]:LIST:DEXChange:EXECute**

Executes the import or export of the selected list file, according to the previously set transfer direction with command `[ :SOURce<hw> ] :LIST:DEXChange:MODE`

**Example:**                      See [Example"List mode data exchange"](#) on page 981.

**Usage:**                        Event

**Manual operation:**    See ["Import / Export"](#) on page 353

---

**[SOURce<hw>]:LIST:DEXChange:AFILe:EXTension <Extension>**

Determines the extension of the ASCII file for import or export, or to query existing files.

**Parameters:**

<Extension>                      TXT | CSV  
\*RST:                      TXT

**Example:**                      See [Example"List mode data exchange"](#) on page 981.

**Manual operation:**    See ["ASCII File Settings"](#) on page 352

---

**[SOURce<hw>]:LIST:DEXChange:AFILe:SElect <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename>                      string  
Filename or complete file path; file extension can be omitted.

**Example:**                      See [Example"List mode data exchange"](#) on page 981.

**Manual operation:**    See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 353



---

**[ :SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.

**Parameters:**

<Column> TABulator | SEMicolon | COMMa | SPACe  
 \*RST: COMMa

**Example:** See [Example "List mode data exchange"](#) on page 981.

**Manual operation:** See ["ASCII File Settings"](#) on page 352

---

**[ :SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

**Parameters:**

<Decimal> DOT | COMMa  
 \*RST: DOT

**Example:** See [Example "List mode data exchange"](#) on page 981.

**Manual operation:** See ["ASCII File Settings"](#) on page 352

---

**[ :SOURce<hw>]:LIST:DEXChange:MODE <Mode>**

Determines the import or export of a list.

Specify the source or destination file with the command [\[ :SOURce<hw>\]:LIST:DEXChange:SElect](#).

**Parameters:**

<Mode> IMPort | EXPort  
 \*RST: IMPort

**Example:** See [Example "List mode data exchange"](#) on page 981.

**Manual operation:** See ["Mode"](#) on page 352

---

**[ :SOURce<hw>]:LIST:DEXChange:SElect <Filename>**

Selects the ASCII file for import or export, containing a list.

**Parameters:**

<Filename> string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example "List mode data exchange"](#) on page 981.

**Manual operation:** See ["Select Source/Select ASCII Destination"](#) on page 353



### 13.17.12 SOURce:NOISe subsystem

The SOURce:NOISe subsystem contains the commands for:

- Setting the noise modulation signal. The noise generator is optional.

#### Example: Configuring the noise generator

```
SOURce1:NOISe:DIStributioN GAUSs
SOURce1:NOISe:BANDwidth 10000000

SOURce1:LFOutput1:SOURce NOIS
SOURce1:LFOutput1:STATe 1

SOURce1:NOISe:LEVel:RELative?
// -83.86
SOURce1:NOISe:LEVel:ABSolute?
// -13.86
```

- [Noise generator](#).....992

#### 13.17.12.1 Noise generator

<a href="#">[:SOURce&lt;hw&gt;]:NOISe:BANDwidth BWIDth</a> .....	992
<a href="#">[:SOURce&lt;hw&gt;]:NOISe:DIStributioN</a> .....	992
<a href="#">[:SOURce&lt;hw&gt;]:NOISe:LEVel:RELative?</a> .....	993
<a href="#">[:SOURce&lt;hw&gt;]:NOISe:LEVel[:ABSolute]?</a> .....	993

---

#### **[:SOURce<hw>]:NOISe:BANDwidth|BWIDth <BWidth>**

Sets the noise level in the system bandwidth when bandwidth limitation is enabled.

##### Parameters:

<BWidth>	float
Range:	100E3 to 10E6
Increment:	100E3
*RST:	100E3

**Example:** See [Example"Configuring the noise generator"](#) on page 992.

**Manual operation:** See ["Bandwidth"](#) on page 390

---

#### **[:SOURce<hw>]:NOISe:DIStributioN <Distribution>**

Sets the distribution of the noise power density.

##### Parameters:

<Distribution>	GAUSs   EQUal
*RST:	GAUSs

**Example:** See [Example"Configuring the noise generator"](#) on page 992.

**Manual operation:** See ["Distribution"](#) on page 390



---

**[[:SOURce<hw>]:NOISe:LEVel:RELative?**

Queries the level of the noise signal per Hz in the total bandwidth.

**Return values:**

<Relative>                      float  
Range:                      -149.18 to -52.67  
Increment:                  0.1  
\*RST:                        -69.84

**Example:**                      See [Example"Configuring the noise generator"](#) on page 992.

**Usage:**                        Query only

**Manual operation:**        See ["Noise Density"](#) on page 392

---

**[[:SOURce<hw>]:NOISe:LEVel[:ABSolute]?]**

Queries the level of the noise signal in the system bandwidth within the enabled bandwidth limitation.

**Return values:**

<Absolute>                      float  
Noise level within the bandwidth limitation  
\*RST:                        3.84 MHz

**Example:**                      See [Example"Configuring the noise generator"](#) on page 992.

**Usage:**                        Query only

**Manual operation:**        See ["Noise Level"](#) on page 392

### 13.17.13 SOURce:OCCupy subsystem

The OCCupy subsystem contains the commands for selecting licenses and setting the occupation period.



**Example: Occupying a license and extend the occupation period**

```
// query options available on the connected license servers
[:SOURce]:OCCupy:OPTion:CATalog?

// query the number of occupied options and the time periods
[:SOURce]:OCCupy:OPTion:CATalog?
//Response:
"SMW-K55;LTE Release 8;6d, 3d
SMW-K62;Additive White Gaussian Noise;7d, 23h
SMW-K71;Dynamic Fading;4d
SMW-K72;Enhanced Fading Models"

// query the number of occupied licences for option K55
[:SOURce]:OCCupy:OPTion:CATalog? "SMW-K55"
// Response:
"SMW-K55;LTE Release 8;6d, 3d"

// occupy two licenses of option K55 for 3 days
[:SOURce]:OCCupy:OPTion "R&S SMBV100B-K55",3,2

// extend the occupation period for the first license to 5 days
[:SOURce]:OCCupy:OPTion:RENew<1> "R&S SMBV100B-K55",5
```

<a href="#">[:SOURce]:OCCupy:OPTion</a> .....	994
<a href="#">[:SOURce]:OCCupy:OPTion:CATalog?</a> .....	994
<a href="#">[:SOURce]:OCCupy:OPTion:RENew&lt;ch&gt;</a> .....	995

**[:SOURce]:OCCupy:OPTion**

Occupies the selected option.

You can determine the option string, the time period and the number of licenses for the occupancy.

**Example:** See [Example"Occupying a license and extend the occupation period"](#) on page 994.

**Usage:** Event

**Manual operation:** See ["Occupy"](#) on page 579

**[:SOURce]:OCCupy:OPTion:CATalog?**

Queries the availability of borrowable licenses on all license servers accessible for the R&S SMBV100B.

**Return values:**

<OccLicensesCat> string  
Comma-separated list of strings for available options.



- Example:** See [Example"Occupying a license and extend the occupation period"](#) on page 994.
- Usage:** Query only
- Manual operation:** See ["Occupy Licenses"](#) on page 578

#### **[SOURce]:OCCupy:OPTion:RENew<ch>**

Extends the occupation period of the selected license.

- Example:** See [Example"Occupying a license and extend the occupation period"](#) on page 994.
- Usage:** Event
- Manual operation:** See ["Renew"](#) on page 579

### 13.17.14 SOURce:PGEN subsystem

The PGEN subsystem contains the commands for setting output of the pulse modulation signal.

#### **Example: Using pulse generator as source for pulse modulation**

```
// select pulse generator as source for pulse modulation
// enable pulse modulation
SOURce1:PULM:SOURce INT
SOURce1:PULM:STATe 1
// pulse generator and signal output are also activated
SOURce1:PGENerator:STATe?
// 1
SOURce1:PGENerator:OUTPut:STATe?
// 1
PGENerator:OUTPut:POLarity NORMal
// to disable pulse generator
SOURce1:PGENerator:STATe 0
// activate the pulse modulation of the RF carrier
SOURce1:PULM:STATe 1
```

<a href="#">[SOURce&lt;hw&gt;]:PGENerator:OUTPut:POLarity</a> .....	995
<a href="#">[SOURce&lt;hw&gt;]:PGENerator:OUTPut[:STATe]</a> .....	996
<a href="#">[SOURce&lt;hw&gt;]:PGENerator:STATe</a> .....	996

#### **[SOURce<hw>]:PGENerator:OUTPut:POLarity <Polarity>**

Sets the polarity of the pulse output signal.

- Parameters:**
- <Polarity>                      NORMal | INVerted



**NORMal**

Outputs the pulse signal during the pulse width, that means during the high state.

**INVerted**

Inverts the pulse output signal polarity. The pulse output signal is suppressed during the pulse width, but provided during the low state.

\*RST:        NORMal

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 995.

**Manual operation:**    See ["Pulse Output Polarity"](#) on page 375

**[[:SOURce<hw>]:PGENerator:OUTPut[:STATe] <State>**

Activates the output of the pulse modulation signal.

**Parameters:**

<State>            1 | ON | 0 | OFF

\*RST:            0

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 995.

**Manual operation:**    See ["Pulse Output State"](#) on page 375

**[[:SOURce<hw>]:PGENerator:STATe <State>**

Enables the output of the video/sync signal.

If the pulse generator is the current modulation source, activating the pulse modulation automatically activates the signal output and the pulse generator.

**Parameters:**

<State>            1 | ON | 0 | OFF

\*RST:            0

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 995.

### 13.17.15 SOURce:PHASe subsystem

This subsystem contains the commands for adjusting the phase of the RF output signal relative to a reference signal of the same frequency.

**Example: Programming Example**

```
// change the phase relative to the current phase
SOURce1:PHASe 2 DEG
// adopt the setting as the current phase
SOURce1:PHASe:REFeRence
```



The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PHASe.....</a>	997
<a href="#">[:SOURce&lt;hw&gt;]:PHASe:REfERENCE.....</a>	997

---

#### **[\[:SOURce<hw>\]:PHASe <Phase>](#)**

Sets the phase variation relative to the current phase.

##### **Parameters:**

<Phase>	float
Range:	-36000 to 36000
Increment:	0.001
*RST:	0
Default unit:	DEG

**Example:** See [Example"Programming Example"](#) on page 996.

**Manual operation:** See ["Delta Phase"](#) on page 308

---

#### **[\[:SOURce<hw>\]:PHASe:REfERENCE](#)**

Assigns the value set with command [\[:SOURce<hw>\]:PHASe](#) as the reference phase.

**Example:** See [Example"Programming Example"](#) on page 996.

**Usage:** Event

**Manual operation:** See ["Reset Delta Phase Display"](#) on page 308

### **13.17.16 SOURce:POWer subsystem**

The SOURce:POWer subsystem contains the commands for setting the output level, level control and level correction of the RF signal.

The default units are dBm. To change the units, perform one of the following:

- Enter the unit after the numerical value  
Example: :POW 0.5V
- Set the unit with the command [:UNIT:POWer](#).

#### **Example: Configure the settings for NRP power control**

The example shows a command sequence to configure the parameters for a closed loop power control setup. It is assumed that you have set up the measurement with the amplifier, external coupler, the power sensor and the R&S SMBV100B as described in [Chapter 7.12.4.3, "NRP power control"](#), on page 419.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Select the sensor used for nrp power control
```



```
// that is e.g., connected to a second USB interface
```

```
SOURcel:POWer:SPC:SElect SENS2
```

```
// Configure the nrp power control settings
// use the measured peak power for power control
// set the unit dBm for the target level value
// set the target level, e.g. - 10 dBmM
// use the measured target level as reference level
// select single measurement mode to acquire one level value
// set the capture range for the control loop, e.g. +/- 15 dB
// set a time delay between the sensor readings, e.g. 2 ms
```

```
SOURcel:POWer:SPC:PEAK ON
SENSE1:UNIT:POWer DMB
SOURcel:POWer:SPC:TARGet -10
SOURcel:POWer:SPC:MEASure
SOURcel:POWer:SPC:MODE SINGLE
SOURcel:POWer:SPC:CRANge 15
SOURcel:POWer:SPC:DELay 2 ms
```

```
// Enable NRP power control measurement
// switch on RF output
// start the single measurement manually
```

```
Output1:STATe 1
SOURcel:POWer:SPC:STATe ON
SOURcel:POWer:SPC:SINGLE
```

```
// Query if the power control works properly
:SOURcel:POWer:SPC:WARning?
// Response: 1 -> power control doew not work as expected
```

```
[[:SOURce<hw>]:POWer:ALC:MODE?.....999
[:SOURce<hw>]:POWer:ALC[:STATe]..... 999
[:SOURce<hw>]:POWer:ALC:DSensitivity..... 1000
[:SOURce<hw>]:POWer:ALC:SONCe..... 1000
[:SOURce<hw>]:POWer:ALC:SLEVel..... 1000
[:SOURce<hw>]:POWer:ATTenuation:DIGital..... 1001
[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE..... 1001
[:SOURce<hw>]:POWer:EMF:STATe..... 1001
[:SOURce<hw>]:POWer:LBEHaviour..... 1002
[:SOURce<hw>]:POWer:LIMit[:AMPLitude]..... 1002
[:SOURce<hw>]:POWer:MANual..... 1002
[:SOURce<hw>]:POWer:MODE..... 1003
[:SOURce<hw>]:POWer:PEP?..... 1003
[:SOURce<hw>]:POWer:POWer..... 1004
[:SOURce<hw>]:POWer:STARt..... 1004
[:SOURce<hw>]:POWer:STOP..... 1004
[:SOURce<hw>]:POWer:SPC:CRANge..... 1004
```



<code>[SOURce&lt;hw&gt;]:POWer:SPC:DELAy</code> .....	1005
<code>[SOURce&lt;hw&gt;]:POWer:SPC:MEASure</code> .....	1005
<code>[SOURce&lt;hw&gt;]:POWer:SPC:MODE</code> .....	1005
<code>[SOURce&lt;hw&gt;]:POWer:SPC:PEAK</code> .....	1006
<code>[SOURce&lt;hw&gt;]:POWer:SPC:SELEct</code> .....	1006
<code>[SOURce&lt;hw&gt;]:POWer:SPC:SINGLe</code> .....	1006
<code>[SOURce&lt;hw&gt;]:POWer:SPC:STATe</code> .....	1006
<code>[SOURce&lt;hw&gt;]:POWer:SPC:TARGeT</code> .....	1007
<code>[SOURce&lt;hw&gt;]:POWer:SPC:WARNing?</code> .....	1007
<code>[SOURce&lt;hw&gt;]:POWer:STEP:MODE</code> .....	1007
<code>[SOURce&lt;hw&gt;]:POWer:STEP[:INCRement]</code> .....	1008
<code>[SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:OFFSet</code> .....	1008
<code>[SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:RCL</code> .....	1009
<code>[SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:AMPLitude</code> .....	1009
<code>[SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:REFLevel</code> .....	1010
<code>[SOURce&lt;hw&gt;]:POWer:RANGe:LOWer?</code> .....	1010
<code>[SOURce&lt;hw&gt;]:POWer:RANGe:UPPer?</code> .....	1010
<code>[SOURce]:POWer:WIGNore</code> .....	1011

---

#### **`[SOURce<hw>]:POWer:ALC:MODE?`**

Queries the currently set ALC mode.

See `[SOURce<hw>]:POWer:ALC[:STATe]` on page 999.

#### **Return values:**

`<PowAlcMode>`      0 | AUTO | 1 | PRESet | OFFTable | ON | OFF | ONSample | ONTable

#### **Example:**

`POW:ALC:MODE?`

Response: ONTable"Table and On" is set automatically.

#### **Usage:**

Query only

---

#### **`[SOURce<hw>]:POWer:ALC[:STATe] <State>`**

Activates automatic level control in the selected mode.

How to: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

#### **Parameters:**

`<State>`      AUTO | OFFTable | ON | ONSample | ONTable | OFF

##### **AUTO**

Adjusts the output level to the operating conditions automatically.

##### **OFFTable**

Controls the level with the attenuation values of the internal ALC table.

##### **ON**

Activates internal level control permanently.



**OFF**

Deactivates internal level control, "Sample & Hold" mode is active.

**ONSample**

Starts the internal level control with the first change.

**ONTable**

Starts with the attenuation setting from the table and continues with automatic level control.

\*RST: AUTO

For more details on the individual settings, an overview of the functionality and details on what is to be considered, see ["ALC states and their effects"](#) on page 399.

**Example:**

POW:ALC ON

Activates internal level control.

**Manual operation:** See ["State"](#) on page 401

**[[:SOURce<hw>]:POWER:ALC:DSEnsitivity <Sensitivity>**

Sets the sensitivity of the ALC detector.

**Parameters:**

<Sensitivity>

AUTO | FIXed

**AUTO**

Selects the optimum sensitivity automatically.

**FIXed**

Fixes the internal level detector.

\*RST: AUTO

**Example:**

POW:ALC:DSEN FIX

**Manual operation:** See ["Detector Sensitivity"](#) on page 401

**[[:SOURce<hw>]:POWER:ALC:SONCe**

Activates level control for correction purposes temporarily.

**Example:**

POW:ALC OFF

Deactivates automatic level control at the RF output.

POW:ALC:SONC

Executes level control (once).

**Usage:**

Event

**Manual operation:** See ["Readjust"](#) on page 307

**[[:SOURce<hw>]:POWER:ALC:SLEVel <SampLevel>**

Sets the sample level of automatic level control (ALC).



How To: See [Chapter 7.12.2.2, "How to enable the ALC"](#), on page 402.

**Parameters:**

<SampLevel> FULL | MINimum | ATTenuated  
\*RST: FULL

**Example:**

POW:ALC:SLEV MIN  
Sets the maximum attenuation.

**Manual operation:** See ["Sample Level"](#) on page 402

**[[:SOURce<hw>]:POWER:ATTenuation:DIGital <AttDigital>**

Sets a relative attenuation value for the baseband signal.

**Parameters:**

<AttDigital> float  
Range: -3.522 to 80  
Increment: 1E-3  
\*RST: 0

**Manual operation:** See ["Digital Attenuation"](#) on page 305

**[[:SOURce<hw>]:POWER:ATTenuation:RFOff:MODE <Mode>**

Selects the state the attenuator is to assume if the RF signal is switched off.

**Parameters:**

<Mode> UNCHanged | FATTenuation  
**FATTenuation**  
The step attenuator switches to maximum attenuation  
**UNCHanged**  
Retains the current setting and keeps the output impedance constant during RF off.  
\*RST: n.a. (factory preset: FATTenuation)

**Example:**

SOURce1:POWER:ATTenuation:RFOff:MODE  
FATTenuation  
uses maximum attenuation when the RF output is turned off.

**Manual operation:** See ["RF OFF Mode"](#) on page 398

**[[:SOURce<hw>]:POWER:EMF:STATe <State>**

Displays the signal level as voltage of the EMF. The displayed value represents the voltage over a 50 Ohm load.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 0)



**Example:** `POW:EMF:STAT 1`  
Activates voltage level display.

**Manual operation:** See ["Display Level as Voltage of EMF"](#) on page 551

**[ :SOURce<hw>]:POWER:LBEHaviour <Behaviour>**

Selects the level behavior at the RF output over time.

**Parameters:**

<Behaviour> AUTO | UNINterrupted | MONotone | CVSWr | USER | CPHase  
**UNINterrupted|MONotone**  
Do not use the uninterrupted level settings and strictly monotone modes in combination with the high-quality optimization mode (see [\[ :SOURce<hw>\]:BB:IMPairment:OPTimization:MODE](#) on page 928).

**CWSWr**

Constant VSWR

\*RST: AUTO

**Example:** `SOURce1:POWER:LBEHaviour AUTO`

**Manual operation:** See ["Setting Characteristics"](#) on page 306

**[ :SOURce<hw>]:POWER:LIMit[:AMPLitude] <Amplitude>**

Limits the maximum RF output level in CW and sweep mode.

It does not influence the "Level" display or the response to the query [\[ :SOURce<hw>\]:POWER\[:LEVel\] \[:IMMediate\] \[:AMPLitude\]](#).

**Parameters:**

<Amplitude> float  
Range: depends on the installed options  
Increment: 0.01  
\*RST: n.a. (factory preset: 30)

**Example:** `SOURce1:POWER:LIMit:AMPLitude 10`

**Manual operation:** See ["Limit"](#) on page 305

**[ :SOURce<hw>]:POWER:MANual <Manual>**

Sets the level for the subsequent sweep step if [SWE:POW:MODE MAN](#).

Use a separate command for each sweep step.

**Parameters:**

<Manual> float  
You can select any level within the setting range, where:  
START is set with [\[ :SOURce<hw>\]:POWER:START](#)  
STOP is set with [\[ :SOURce<hw>\]:POWER:STOP](#)



OFFSet is set with `[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet`

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01

Default unit: dBm

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Current Level"](#) on page 339

### `[ :SOURce<hw> ] :POWer:MODE <Mode>`

Selects the operating mode of the instrument to set the output level.

#### **Parameters:**

<Mode>

CW | FIXed | SWEep

#### **CW|FIXed**

Operates at a constant level.

CW and FIXed are synonyms.

To set the output level value, use the command `[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] [ :AMPLitude ]`.

#### **SWEep**

Sets sweep mode.

Set the range and current level with the commands:

`[ :SOURce<hw> ] :POWer:START` and `[ :SOURce<hw> ] :POWer:STOP`,  
`[ :SOURce<hw> ] :POWer:MANual`.

\*RST: CW

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["State \(RF level sweep\)"](#) on page 338  
 See ["State \(RF frequency / level sweep\)"](#) on page 338

### `[ :SOURce<hw> ] :POWer:PEP?`

Queries the PEP (**P**eak **E**nvelope **P**ower) of digital modulation or digital standards at the RF output. This value corresponds to the level specification, displayed in the status bar (header).

#### **Return values:**

<Pep> float

#### **Example:**

POW:PEP?

Response: "4"

The PEP value of digital modulation is 4 dBm at the RF output.

#### **Usage:**

Query only



**Manual operation:** See ["PEP"](#) on page 299

---

**[ :SOURce<hw>]:POWER:POWER <Power>**

Sets the level **at the RF output** connector.

This value does not consider a specified offset.

The command `[ :SOURce<hw>]:POWER[:LEVel] [:IMMediate] [:AMPLitude]` sets the level of the "Level" display, that means the level containing offset.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

**Parameters:**

<Power> float  
 Level at the RF output, without level offset  
 Range: See data sheet  
 Increment: 0.01  
 Default unit: dBm

**Example:** `SOURce1:POWER:POWER 15`  
 Sets the level at RF output

**Manual operation:** See ["Amplitude"](#) on page 304  
 See ["Generator Settings used for Measurement"](#) on page 412

---

**[ :SOURce<hw>]:POWER:START <Start>**

**[ :SOURce<hw>]:POWER:STOP <Stop>**

Sets the RF start/stop level in sweep mode.

**Parameters:**

<Stop> float  
 Sets the setting range calculated as follows:  
 $(Level\_min + OFFSET) \text{ to } (Level\_max + OFFSET)$   
 Where the values are set with the commands:  
`[ :SOURce<hw>]:POWER[:LEVel] [:IMMediate]:OFFSET`  
`[ :SOURce<hw>]:POWER:START`  
`[ :SOURce<hw>]:POWER:STOP`  
 Range: Minimum level to maximum level  
 \*RST: -30 (Start)/ -10 (Stop)  
 Default unit: dBm

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017

**Manual operation:** See ["Start Level / Stop Level"](#) on page 346

---

**[ :SOURce<hw>]:POWER:SPC:CRANge <PowCntrlCRRange>**

Defines the capture range of the power control system.



Within the range:

*Target Level +/- Catch Range*

the power control locks and tries to achieve the target level. Readings outside the range are not considered.

**Parameters:**

<PowCntrlCRange> float  
 Range: 0 to 50  
 Increment: 0.01  
 \*RST: 30

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["Catch Range +/-"](#) on page 422

**[ :SOURce<hw>]:POWER:SPC:DELay <PowCntrlDelay>**

Sets a waiting time for the generator to adjust the output level. After the delay time has elapsed, the power sensor measures the next value.

**Parameters:**

<PowCntrlDelay> integer  
 Range: 0 to 1000  
 \*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["Delay Time"](#) on page 423

**[ :SOURce<hw>]:POWER:SPC:MEASure**

Sets the measured power value as reference level.

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997

**Usage:** Event

**Manual operation:** See ["Take Measurement as Target Level"](#) on page 422

**[ :SOURce<hw>]:POWER:SPC:MODE <ControlMode>**

Selects the measurement mode for the power sensor.

**Parameters:**

<ControlMode> AUTO | SINGLE  
**AUTO**  
 Measures the level values continuously.



**SINGle**

Executes one measurement, triggered by the command `[ : SOURce<hw> ] : POWer : SPC : SINGle` on page 1006.

\*RST: AUTO

**Example:** See [Example "Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["Mode"](#) on page 422

**[ : SOURce<hw> ] : POWer : SPC : PEAK <PowCntrlPeak>**

Activates power control by means of the peak power values, provided the power sensor supports this function.

**Parameters:**

<PowCntrlPeak> 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example "Configure the settings for NRP power control"](#) on page 997

**[ : SOURce<hw> ] : POWer : SPC : SElect <PowCntrlSelect>**

Selects the power sensor used for power control.

**Parameters:**

<PowCntrlSelect> SENS1 | SENS2 | SENS3 | SENS4 | SENSor1 | SENSor2 | SENSor3 | SENSor4

\*RST: SENS1

**Example:** See [Example "Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["Sensor"](#) on page 421

**[ : SOURce<hw> ] : POWer : SPC : SINGle**

Triggers the power sensor to measure the power value once.

**Usage:** Event

**Manual operation:** See ["Execute Single"](#) on page 422

**[ : SOURce<hw> ] : POWer : SPC : STATe <PowCntrlState>**

Starts power control using the selected sensor. The control loop periodically adjusts the output level of the signal generator. After switching off, the running loop is completed.



**Parameters:**

<PowCntrlState> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["State"](#) on page 421

**[[:SOURce<hw>]:POWER:SPC:TARGET <PowCntrlTarget>**

Sets the target level required at the DUT. To define the unit of the power value, use command [:UNIT:Power](#) on page 1072.

**Parameters:**

<PowCntrlTarget> float  
 Range: -50 to 30  
 Increment: 0.01  
 \*RST: -10

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997

**Manual operation:** See ["Target Level"](#) on page 422

**[[:SOURce<hw>]:POWER:SPC:WARNIng?**

Queries if the activated power control works properly.

If the power control does not work, the query returns warning state 1. On the screen, the R&S SMBV100B indicates a warning icon.

**Return values:**

<WarningState> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 997.

**Usage:** Query only

**[[:SOURce<hw>]:POWER:STEP:MODE <Mode>**

Defines the type of step width to vary the RF output power step-by-step with the commands [POW UP](#) or [POW DOWN](#).

**Parameters:**

<Mode> DECimal | USER  
**DECimal**  
 Increases or decreases the level in steps of ten.



**USER**

Increases or decreases the level in increments, determined with the command `[ :SOURce<hw> ] :POWer:STEP [ :INCRement ]`.

\*RST: DECimal

**Example:**

```
SOURce1:POWer:STEP:INCRement 2
SOURce1:POWer:STEP:MODE USER
SOURce1:POWer:LEVel:IMMediate:AMPLitude UP
Increasing the RF level with a step size of 2 dB
```

**Manual operation:** See ["Variation Active"](#) on page 302

**[ :SOURce<hw> ] :POWer:STEP [ :INCRement ] <Increment>**

Specifies the step width in the appropriate path for `POW:STEP:MODE USER`.

To adjust the level step-by-step with this increment value, use the command `POW UP`, or `POW DOWN`.

**Note:** The command also sets "Variation Step" in the manual control, that means the user-defined step width for setting the level with the rotary knob or the [Up/Down] arrow keys.

**Parameters:**

<Increment>	float
Range:	0 to 200
Increment:	0.01
*RST:	1
Default unit:	dB

**Example:** See `[ :SOURce<hw> ] :POWer:STEP:MODE` on page 1007.

**Manual operation:** See ["Variation Step"](#) on page 303

**[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet <Offset>**

Sets the level offset of a downstream instrument.

The level at the RF output is not changed.

To query the resulting level, as it is at the output of the downstream instrument, use the command `[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] [ :AMPLitude ]`.

See ["RF frequency and level display with a downstream instrument"](#) on page 300.

**Note:** The level offset also affects the RF level sweep.



**Parameters:**

<Offset> float  
 Range: -200 to 200  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB  
 Level offset is always expressed in dB; linear units (V, W, etc.) are not supported

**Example:**

POWer:OFFSet 10  
 Sets the RF level offset to 10 dB

**Manual operation:**

See ["Offset"](#) on page 305  
 See ["Generator Settings used for Measurement"](#) on page 412

**[[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL <Rcl>**

Determines whether the current level is retained or if the stored level setting is adopted when an instrument configuration is loaded.

**Parameters:**

<Rcl> INCLUDE | EXCLUDE  
**INCLUDE**  
 Takes the current level when an instrument configuration is loaded.  
**EXCLUDE**  
 Retains the current level when an instrument configuration is loaded.  
 \*RST: INCLUDE

**Example:**

POW:RCL INCL  
 Takes the level value from an instrument configuration loaded with command [\\*RCL](#).

**Manual operation:** See ["Exclude Level"](#) on page 521**[[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:AMPLitude] <Amplitude>**

Sets the RF level applied to the DUT.

To activate the RF output use command [:OUTPut<hw>\[:STATe\]](#) ("RF On"/"RF Off").

The following applies  $POWer = RF \text{ output level} + OFFSet$ , where:

- $POWer$  is the values set with [\[:SOURce<hw>\]:POWer\[:LEVel\]\[:IMMediate\]:AMPLitude\]](#)
- RF output level is set with [\[:SOURce<hw>\]:POWer:POWer](#)
- $OFFSet$  is set with [\[:SOURce<hw>\]:POWer\[:LEVel\]\[:IMMediate\]:OFFSet](#)

**Parameters:**

<Amplitude> float



The following settings influence the value range:

OFFSet set with the command `[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet`

#### Numerical value

Sets the level

#### UP|DOWN

Varies the level step by step.

The level is increased or decreased by the value set with the command `[ :SOURce<hw> ] :POWer :STEP [ :INCRement ]`.

Range: (Level\_min + OFFSet) to (Level\_max + OFFSet)

\*RST: -30

Default unit: dBm

**Example:** `POWer -30`  
Sets the RF level

**Example:** See also `[ :SOURce<hw> ] :POWer :STEP :MODE` on page 1007.

**Manual operation:** See "Amplitude" on page 304

**`[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :REFLevel <ReferenceLevel>`**

Queries the reference level of the user correction.

The reference level is the sum of the amplitude and the level offset, set with the commands `[ :SOURce<hw> ] :POWer :POWer [ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet`.

#### Parameters:

<ReferenceLevel> float  
Range: -245 to 120  
Increment: 0.01  
\*RST: -30

**Manual operation:** See "Generator Settings used for Measurement" on page 412

**`[ :SOURce<hw> ] :POWer :RANGe :LOWer?`**

**`[ :SOURce<hw> ] :POWer :RANGe :UPPer?`**

Queries the current interruption-free range of the level.

#### Return values:

<Upper> float  
Increment: 0.01  
Default unit: dBm

**Example:** `SOURce1:POWer:RANGe:UPPer?`  
// -15  
`SOURce1:POWer:RANGe:LOW?`  
// -50

**Usage:** Query only



**Manual operation:** See "[Level Range](#)" on page 306

---

**[[:SOURce]:POWer:WIGNore <State>**

Ignores level range warnings.

**Parameters:**

<State> 1 | ON | 0 | OFF

\*RST: n.a. (factory preset: 0)

**Example:** SOURce:POWer:WIGNore 1

### 13.17.17 SOURce:ROSCillator subsystem

The SOURce:ROSCillator subsystem contains the commands for setting the external and internal reference frequency.



The commands of this subsystem are not affected by an instrument reset ([\\*RST](#) on page 700).



**Example: Configuring the reference oscillator**

```
// Using 100 MHz external reference source
SOURce:ROSCillator:PRESet
SOURce:ROSCillator:SOURce EXT
SOURce:ROSCillator:EXTErnal:RFOFF:STATe 1
SOURce:ROSCillator:EXTErnal:FREQuency 100MHZ
SOURce:ROSCillator:EXTErnal:SBANDwidth WIDE
// 100 MHz (loop through) and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE LOOP
SOURce:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE DER1G
SOURce:ROSCillator:INTernAl:ADJust:STATe 0

// Variable external reference frequency
// SOURce:ROSCillator:EXTErnal:FREQuency VAR
// SOURce:ROSCillator:EXTErnal:FREQuency:VARiable 100000000

// Using the internal reference frequency
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernAl:TUNing:STATe 1
SOURce:ROSCillator:INTernAl:TUNing:SLOPe LOW
// 10 MHz and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE DER10M
SOURce:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE DER1G

// Query calibration value
CALibration:ROSCillator?
// 32767
// Set an internal source
// Activate user-defined adjustment value of 1000
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernAl:ADJust:STATe 1
SOURce:ROSCillator:INTernAl:ADJust:VALue 1000

// to resume calibrated state
SOURce:ROSCillator:INTernAl:ADJust:VALue 0
SOURce:ROSCillator:INTernAl:ADJust:STATe 0
// or
// SYSTem:FPReSt
```

[SOURce]:ROSCillator:PRESet.....	1013
[SOURce]:ROSCillator:SOURce.....	1013
[SOURce]:ROSCillator:EXTErnal:RFOFF:STATe].....	1013
[SOURce]:ROSCillator:EXTErnal:FREQuency.....	1013
[SOURce]:ROSCillator:EXTErnal:FREQuency:VARiable.....	1014
[SOURce]:ROSCillator:EXTErnal:SBANDwidth.....	1014
[SOURce]:ROSCillator:EXTErnal:MLRange?.....	1014
[SOURce]:ROSCillator:EXTErnal:NSBandwidth?.....	1015
[SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	1015
[SOURce]:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE.....	1015
[SOURce]:ROSCillator[:INTernAl]:ADJust:VALue.....	1016
[SOURce]:ROSCillator[:INTernAl]:ADJust[:STATe].....	1016



---

**[[:SOURce]:ROSCillator:PRESet**

Resets the reference oscillator settings.

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Usage:** Event

**Manual operation:** See ["Set to Default"](#) on page 310

---

**[[:SOURce]:ROSCillator:SOURce <Source>**

Selects between internal or external reference frequency.

**Parameters:**

<Source> INTernal | EXTernal  
\*RST: n.a. (factory preset: INTernal)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Manual operation:** See ["Source"](#) on page 310

---

**[[:SOURce]:ROSCillator:EXTernal:RFOFF[:STATe] <State>**

Determines that the RF output is turned off when the external reference signal is selected, but missing.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 0)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Manual operation:** See ["Deactivate RF Output \(if external reference is missing\)"](#) on page 310

---

**[[:SOURce]:ROSCillator:EXTernal:FREQuency <Frequency>**

Sets the frequency of the external reference.

**Parameters:**

<Frequency> 100MHZ | 1GHZ | VARiable | 10MHZ  
\*RST: n.a. (factory preset: 10MHZ)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Options:** VARiable requires R&S SMBVB-K704  
1GHZ requires R&S SMBVB-B3

**Manual operation:** See ["External Reference Frequency"](#) on page 310



---

**[[:SOURce]:ROSCillator:EXTernal:FREQuency:VARiable <Frequency>**

Specifies the user-defined external reference frequency.

**Parameters:**

<Frequency> float

Range: 1E6 to 100E6

Increment: 0.1

\*RST: n.a. (factory preset: 1E7)

Default unit: Hz

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Options:** R&S SMBVB-K704

**Manual operation:** See ["Variable Reference Frequency"](#) on page 311

---

**[[:SOURce]:ROSCillator:EXTernal:SBANDwidth <SBandwidth>**

Selects the synchronization bandwidth for the external reference signal.

See [\[:SOURce\]:ROSCillator:SOURce > External](#).

Depending on the RF hardware version, and the installed options, the synchronization bandwidth varies.

For more information, see data sheet.

**Parameters:**

<SBandwidth> WIDE | NARRow

**NARRow**

The synchronization bandwidth is a few Hz.

**WIDE**

Uses the widest possible synchronization bandwidth.

\*RST: n.a. (factory preset: WIDE)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Manual operation:** See ["Synchronization Bandwidth"](#) on page 311

---

**[[:SOURce]:ROSCillator:EXTernal:MLRange?**

Queries the minimum locking range for the selected external reference frequency.

Depending on the RF hardware version, and the installed options, the minimum locking range varies.

For more information, see data sheet.

**Return values:**

<MinLockRange> string

**Example:** SOUR:ROSC:EXT:MLR?



**Usage:** Query only

**Manual operation:** See ["Minimum Locking Range"](#) on page 311

#### **[[:SOURce]:ROSCillator:EXTernal:NSBandwidth?**

Queries the nominal synchronization bandwidth for the selected external reference frequency and synchronization bandwidth.

**Return values:**

<NomBandwidth> string

**Example:** SOUR:ROSC:EXT:NSB?

**Usage:** Query only

**Manual operation:** See ["Nominal Synchronization Bandwidth"](#) on page 311

#### **[[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE <OutpFreqMode>**

Selects the mode for the output reference frequency.

**Parameters:**

<OutpFreqMode> DER10M | OFF | LOOPthrough

**OFF**

Disables the output.

**DER10M**

Sets the output reference frequency to 10 MHz.

The reference frequency is derived from the internal reference frequency.

**LOOPthrough**

This setting is unavailable for

ROSCillator:EXTernal:FREQuency 1GHZ.

Forwards the input reference frequency to the reference frequency output.

\*RST: n.a. (factory preset: DER10M)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Manual operation:** See ["Reference Output/1 GHz Reference Output"](#) on page 312

#### **[[:SOURce]:ROSCillator:OUTPut:ALTernate:FREQuency:MODE <OutpFreqMode>**

Sets the output reference frequency.

**Parameters:**

<OutpFreqMode> LOOPthrough | DER1G | OFF

**OFF**

Disables the output.



**DER1G**

Sets the output reference frequency to 1 GHz.

The reference frequency is derived from the internal reference frequency.

**LOOPthrough**

If `[[:SOURce]:ROSCillator:EXternal:FREQuency 1GHZ]`, forwards the input reference frequency to the reference frequency output.

\*RST: n.a. (factory preset: OFF)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Options:** DER1G requires R&S SMBVB-B3

**Manual operation:** See ["Reference Output/1 GHz Reference Output"](#) on page 312

**[[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue <Value>**

Specifies the frequency correction value (adjustment value).

**Parameters:**

<Value> integer

\*RST: 0

**Example:** See `[[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe]]` on page 1016

**Manual operation:** See ["Adjustment Value"](#) on page 313

**[[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe] <State>**

Determines whether the calibrated (off) or a user-defined (on) **adjustment value** is used for fine adjustment of the frequency.

**Parameters:**

<State> 1 | ON | 0 | OFF

**0**

Fine adjustment with the calibrated frequency value

**1**

User-defined adjustment value.

The instrument is no longer in the calibrated state.

The calibration value is, however, not changed. The instrument resumes the calibrated state if you send

`SOURce:ROSCillator:INTernal:ADJust:STATe 0.`

\*RST: n.a. (factory preset: 0)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 1012.

**Manual operation:** See ["Adjustment Active"](#) on page 313



### 13.17.18 SOURce:SWEep subsystem

The SOURce:SWEep subsystem contains the commands for configuring RF sweep signals.



- The keyword [:FREQuency] can be omitted, then the commands are SCPI-compliant.
- To activate an RF sweep mode, use the following commands:
  - RF frequency sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
  - RF level sweep: SOURce:POWEr:MODE SWEep (SOURce:POWEr:MODE CW (off))
  - RF combined sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
- All sweeps, including the LF sweep, can be set independently of each other.
- All sweeps can be set independently of each other.

See [Chapter 7.10.1, "Signal generation and triggering in the sweep and list modes"](#), on page 323.

#### Example: Setup an RF frequency or power sweep

The following example shows a command sequence to set up an RF frequency sweep, triggered by the execute command. For an RF power sweep, replace FREQuency in the SWEep commands with POWEr.

Exceptions are the power spacing (defined with LINear only) and the power step width (defined with LOGarithmic only).

```
// Reset the instrument to start from an initial state
// Switch off display update to improve performance
// (especially with short dwell times)
// Set the sweep mode (first two commands) and the sweep range
// Select linear spacing
// Select the waveform shape for the frequency sweep
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURce1:SWEep:FREQuency:MODE AUTO
SOURce1:FREQuency:SPAN 300 MHz
SOURce1:FREQuency:CENTer 200 MHz
// Alternatively use
// SOURce1:FREQuency:START 50 MHz
// SOURce1:FREQuency:STOP 350 MHz
SOURce1:SWEep:FREQuency:SPACing LINear
SOURce1:SWEep:FREQuency:SHApe SAWTooth

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
```



```

SOURcel:SWEep:FREQuency:RETRace 1
// Alternatively reset all sweeps to their initial value
SOURcel:SWEep:RESet:ALL

// Set the step width and dwell time
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
// Alternatively set the number of steps, then the sweep step width is
// set automatically
SOURcel:SWEep:FREQuency:POINTs 301
SOURcel:SWEep:FREQuency:DWELL 500 ms
// With logarithmic spacing select the step width as follows
// (steps of 10 percent of the previous frequency in each instance)
SOURcel:SWEep:FREQuency:SPACing LOG
SOURcel:SWEep:FREQuency:STEP:LOGarithmic 10PCT

// Activate the sweep
// Trigger the sweep (depending on the set mode) and query the status
SOURcel:FREQuency:MODE SWEep
// Perform a one-off RF frequency sweep
SOURcel:SWEep:FREQuency:EXECute
SOURcel:SWEep:FREQuency:RUNning?
// 1
// the frequency sweep is running

// For manual step RF sweep use the following commands
*RST; *CLS
// Activate manual step RF sweep
SOURcel:SWEep:FREQuency:MODE MANual
// Activate the RF frequency sweep.
SOURcel:FREQuency:MODE SWEep
// Activate RF Output1.
Output1:STATe 1
// Input the frequency manually for each step
SOURcel:FREQuency:MANual 200 MHz
SOURcel:FREQuency:MANual 201 MHz
// Alternatively use the UP or DOWN commands with the set step width.
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
SOURcel:FREQuency:MANual UP

// Activate a combined RF frequency / level sweep
*RST; *CLS
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURcel:SWEep:COMBined:MODE AUTO
SOURcel:SWEep:COMBined:COUNt 200
SOURcel:FREQuency:STARt 1000000000 Hz
SOURcel:FREQuency:STOP 5000000000 Hz
SOURcel:POWer:STARt -30 dBm
SOURcel:POWer:STOP -10 dBm

```



```

SOURce1:SWEep:COMBined:RETRace 1
SOURce1:SWEep:COMBined:SHAPE SAWT
SOURce1:SWEep:COMBined:DWELL 0.01
// Activate combined RF frequency/level sweep
SOURce1:FREQuency:MODE COMB
// Activate RF Output1.
Output1:STATe 1
// Execute combined frequency / level sweep
SOURce1:SWEep:COMBined:EXECute

```

[SOURce<hw>]:SWEep:POWer:DWELL.....	1019
[SOURce<hw>]:SWEep:POWer:MODE.....	1020
[SOURce<hw>]:SWEep:POWer:POINts.....	1020
[SOURce<hw>]:SWEep:POWer:SPACing:MODE?.....	1020
[SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic].....	1021
[SOURce<hw>]:SWEep[:FREQuency]:DWELL.....	1021
[SOURce<hw>]:SWEep[:FREQuency]:MODE.....	1021
[SOURce<hw>]:SWEep[:FREQuency]:POINts.....	1022
[SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	1022
[SOURce<hw>]:SWEep:POWer:SHAPE.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:SHAPE.....	1023
[SOURce<hw>]:SWEep:POWer:EXECute.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	1023
[SOURce<hw>]:SWEep:POWer:RETRace.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	1023
[SOURce<hw>]:SWEep:POWer:RUNNing?.....	1024
[SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	1024
[SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	1024
[SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	1024
[SOURce<hw>]:COMBined:FREQuency:START.....	1025
[SOURce<hw>]:COMBined:FREQuency:STOP.....	1025
[SOURce<hw>]:COMBined:POWer:START.....	1025
[SOURce<hw>]:COMBined:POWer:STOP.....	1026
[SOURce<hw>]:SWEep:COMBined:COUNt.....	1026
[SOURce<hw>]:SWEep:COMBined:DWELL.....	1026
[SOURce<hw>]:SWEep:COMBined:EXECute.....	1026
[SOURce<hw>]:SWEep:COMBined:MODE.....	1027
[SOURce<hw>]:SWEep:COMBined:RETRace.....	1027
[SOURce<hw>]:SWEep:COMBined:SHAPE.....	1028
[SOURce<hw>]:SWEep:RESet[:ALL].....	1028

---

#### [SOURce<hw>]:SWEep:POWer:DWELL <Dwell>

Sets the dwell time for a level sweep step.

##### Parameters:

<Dwell>	float
Range:	0.001 to 100
Increment:	100E-6
*RST:	0.01



**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Dwell Time"](#) on page 342

**[ :SOURce<hw>]:SWEep:POWer:MODE <Mode>**

Sets the cycle mode for the level sweep.

**Parameters:**

<Mode> AUTO | MANual | STEP

**AUTO**

Each trigger triggers exactly one complete sweep.

**MANual**

The trigger system is not active. You can trigger every step individually with the command `[ :SOURce<hw>]:POWer:MANual`.

The level value increases at each step by the value that you define with `[ :SOURce<hw>]:POWer:STEP[:INCRement]`.

Values directly entered with the command `[ :SOURce<hw>]:POWer:MANual` are not taken into account.

**STEP**

Each trigger triggers one sweep step only. The level increases by the value entered with `[ :SOURce<hw>]:POWer:STEP[:INCRement]`.

\*RST: AUTO

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Mode"](#) on page 339

**[ :SOURce<hw>]:SWEep:POWer:POINts <Points>**

Sets the number of steps within the RF level sweep range.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Points> integer

Range: 2 to Max

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**[ :SOURce<hw>]:SWEep:POWer:SPACing:MODE?**

Queries the level sweep spacing. The sweep spacing for level sweeps is always linear.

**Return values:**

<Mode> LINear

\*RST: LINear



**Example:** `SWE:POW:SPAC:MODE?`  
 queries the sweep spacing for a level sweep at RF output.  
 Result: "LIN"  
 linear spacing

**Usage:** Query only

**[[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic] <Logarithmic>**

Sets a logarithmically determined step size for the RF level sweep. The level is increased by a logarithmically calculated fraction of the current level.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Logarithmic> float  
 The unit dB is mandatory.  
 Range: 0.01 to 139 dB  
 Increment: 0.01  
 \*RST: 1  
 Default unit: dB

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Step"](#) on page 346

**[[:SOURce<hw>]:SWEep[:FREQuency]:DWEll <Dwell>**

Sets the dwell time for a frequency sweep step.

**Parameters:**

<Dwell> float  
 Range: 0.001 to 100  
 Increment: 100E-6  
 \*RST: 0.01

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Dwell Time"](#) on page 342

**[[:SOURce<hw>]:SWEep[:FREQuency]:MODE <Mode>**

Sets the cycle mode for the frequency sweep.

**Parameters:**

<Mode> AUTO | MANual | STEP

**AUTO**

Each trigger event triggers exactly one complete sweep.



**MANual**

The trigger system is not active. You can trigger every step individually by input of the frequencies with the command [ :

[SOURce<hw>\]:FREQuency:MANual.](#)

**STEP**

Each trigger event triggers one sweep step. The frequency increases by the value entered with [ :[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP\[:LINear\]](#) (linear spacing) or [ :[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP:LOGarithmic](#) (logarithmic spacing).

\*RST: AUTO

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Mode"](#) on page 339

**[ :SOURce<hw>]:SWEep[:FREQuency]:POINTs <Points>**

Sets the number of steps within the RF frequency sweep range.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Two separate POINTs values are used for linear or logarithmic sweep spacing ( [ :[SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing LIN | LOG](#)). The command always affects the currently set sweep spacing.

**Parameters:**

<Points> integer  
Range: 2 to Max

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**[ :SOURce<hw>]:SWEep[:FREQuency]:SPACing <Spacing>**

Selects the mode for the calculation of the frequency intervals, with which the current frequency at each step is increased or decreased.

The keyword [ :FREQuency] can be omitted; then the command is SCPI-compliant.

**Parameters:**

<Spacing> LINear | LOGarithmic

**LINear**

Sets a fixed frequency value as step width and adds it to the current frequency.

The linear step width is entered in Hz, see [ :[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP\[:LINear\]](#).



**LOGarithmic**

Sets a constant fraction of the current frequency as step width and adds it to the current frequency.

The logarithmic step width is entered in %, see [ :  
SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.

\*RST: LINear

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Spacing"](#) on page 342

[ :SOURce<hw>]:SWEep:POWer:SHAPE <Shape>

[ :SOURce<hw>]:SWEep[:FREQuency]:SHAPE <Shape>

Determines the waveform shape for a frequency sweep sequence.

**Parameters:**

<Shape> SAWTooth | TRlangle

\*RST: SAWTooth

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Shape"](#) on page 340

[ :SOURce<hw>]:SWEep:POWer:EXECute

[ :SOURce<hw>]:SWEep[:FREQuency]:EXECute

Executes an RF frequency sweep.

The command performs a single sweep and is therefore only effective in manual sweep mode.

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 342

[ :SOURce<hw>]:SWEep:POWer:RETRace <State>

[ :SOURce<hw>]:SWEep[:FREQuency]:RETRace <State>

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<State> 1 | ON | 0 | OFF

\*RST: 0



**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Retrace"](#) on page 340

**[ :SOURce<hw>]:SWEep:POWer:RUNNing?**  
**[ :SOURce<hw>]:SWEep[:FREQuency]:RUNNing?**

Queries the current sweep state.

**Return values:**

<State> 1 | ON | 0 | OFF

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Usage:** Query only

**[ :SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic <Logarithmic>**

Sets a logarithmically determined step width for the RF frequency sweep. The value is added at each sweep step to the current frequency.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<Logarithmic> float  
 The unit is mandatory.  
 Range: 0.01 to 100  
 Increment: 1E-3  
 \*RST: 1  
 Default unit: PCT

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 345

**[ :SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear] <Linear>**

Sets the step width for linear sweeps.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

Omit the optional keywords so that the command is SCPI-compliant.

**Parameters:**

<Linear> float  
 Range: 0.001 Hz to (STOP - START)  
 Increment: 0.01

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.



**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 345

---

**[[:SOURce<hw>]:COMBined:FREQUENCY:START <CombFreqStart>**

Sets the start frequency of the combined RF frequency / level sweep.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<CombFreqStart>      float  
                             Range:        -59999E5 to 12E9  
                             Increment: 0.01  
                             \*RST:        100E6

**Example:**                See [Example"Setup an RF frequency or power sweep"](#)  
                                     on page 1017.

**Manual operation:**    See ["Start Frequency/Stop Frequency"](#) on page 344

---

**[[:SOURce<hw>]:COMBined:FREQUENCY:STOP <CombFreqStop>**

Sets the end frequency of the combined RF frequency / level sweep.

**Parameters:**

<CombFreqStop>      float  
                             Range:        -59999E5 to 12E9  
                             Increment: 0.01  
                             \*RST:        500E6

**Example:**                See [Example"Setup an RF frequency or power sweep"](#)  
                                     on page 1017.

**Manual operation:**    See ["Start Frequency/Stop Frequency"](#) on page 344

---

**[[:SOURce<hw>]:COMBined:POWER:START <CombPowStart>**

Sets the start level value of the combined RF frequency / level sweep.

See [Chapter 7.10.2.1, "Correlating parameters in sweep mode"](#), on page 331.

**Parameters:**

<CombPowStart>      float  
                             Range:        -245 to 120  
                             Increment: 0.01  
                             \*RST:        -30

**Example:**                See [Example"Setup an RF frequency or power sweep"](#)  
                                     on page 1017.

**Manual operation:**    See ["Start Level / Stop Level"](#) on page 346



---

**[ :SOURce<hw>]:COMBined:POWER:STOP <CombPowStop>**

Sets the stop level value of the combined RF frequency / level sweep.

**Parameters:**

<CombPowStop>	float
Range:	-245 to 120
Increment:	0.01
*RST:	-10

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Start Level / Stop Level"](#) on page 346

---

**[ :SOURce<hw>]:SWEep:COMBined:COUNT <StepCount>**

Defines the number of sweeps you want to execute.

This parameter applies to `[ :SOURce<hw>]:SWEep:COMBined:MODE > SINGLE`. To start the sweep signal generation, use the command `[ :SOURce<hw>]:SWEep:COMBined:EXECute` on page 1026.

**Parameters:**

<StepCount>	integer
Range:	1 to SeMAX_INT_STEP-1
*RST:	501

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Step Count"](#) on page 346

---

**[ :SOURce<hw>]:SWEep:COMBined:DWELL <Dwell>**

Sets the dwell time for the combined frequency / level sweep.

**Parameters:**

<Dwell>	float
Range:	0.01 to 100
Increment:	100E-6
*RST:	0.01

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Dwell Time"](#) on page 342

---

**[ :SOURce<hw>]:SWEep:COMBined:EXECute**

Executes an RF frequency / level sweep cycle.



The command triggers one single sweep manually. Therefore, you can use it in manual sweep mode, selected with the command `[ :SOURce<hw> ] :SWEep:COMBined:MODE > MANual`.

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 342

**[ :SOURce<hw> ] :SWEep:COMBined:MODE <SweepCombMode>**

Sets the cycle mode for the combined frequency / level sweep.

**Parameters:**

<SweepCombMode> AUTO | MANual | STEP

**AUTO**

Each trigger event triggers exactly one complete sweep.

**MANual**

The trigger system is not active. You can trigger every step individually by input of the frequencies with the commands `[ :SOURce<hw> ] :FREQuency:MANual` and `[ :SOURce<hw> ] :POWER:MANual`.

**STEP**

Each trigger event triggers one sweep step.

\*RST: AUTO

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Mode"](#) on page 339

**[ :SOURce<hw> ] :SWEep:COMBined:RETRace <RetraceState>**

Activates that the signal changes to the start level value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<RetraceState> 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:** See ["Retrace"](#) on page 340



---

**[ :SOURce<hw> ]:SWEep:COMBined:SHApe <Shape>**

Selects the waveform shape for the combined frequency / level sweep sequence.

**Parameters:**

<Shape>                      SAWTooth | TRlangle  
                                  \*RST:            SAWTooth

**Example:**                      See [Example "Setup an RF frequency or power sweep"](#) on page 1017.

**Manual operation:**    See ["Shape"](#) on page 340

---

**[ :SOURce<hw> ]:SWEep:RESet[:ALL]**

Resets all active sweeps to the starting point.

**Usage:**                              Event

**Manual operation:**    See ["Reset Sweep"](#) on page 343

---

## 13.18 SYSTem subsystem

The SYSTem subsystem contains a series of commands for general functions which do not directly affect signal generation.

**Example: Retrieving instrument specification**

**Note:** The following values are merely an example.

```
// Retrieve information on data sheet versions.
// Query all data sheet versions saved on the instrument:
SYSTem:SPECification:VERSion:CATalog?
"04.03,04.02,04.01,04.00,03.04,03.03,03.02,03.01,03.00,02.96,02.95,02.94,
02.02,02.01,02.00,01.03,01.02,01.01,01.00"

// Query the initial data sheet version on delivery
SYSTem:SPECification:VERSion:FACTory?
// Response: "04.00"

// Select a specific data sheet version:
SYSTem:SPECification:VERSion "04.01"

// Retrieve information on parameters that belong to a particular data sheet.
// Query the IDs of all parameters listed in the selected version:
SYSTem:SPECification:VERSion "04.03"
SYSTem:SPECification:IDENtification:CATalog?
"ID_RF_FREQ_SETTING_TIME_ALC_ON_MS,ID_RF_FREQ_SETTING_TIME_MS,..."

// Query data sheet information on a specific parameter by its ID.
```



```
SYSTem:SPECification? "ID_RF_FREQ_SETTING_TIME_ALC_ON_MS"
// Returns the specified value of the parameter.
```

### Example: Retrieving information on network-related settings

```
SYSTem:COMMunicate:NETWork:STATus?
// 1
SYSTem:PROTectioN1:STATe 0,123456

SYSTem:COMMunicate:NETWork:IPAdDress:MODE STAT
SYSTem:COMMunicate:NETWork:IPAdDress "10.113.0.104"
SYSTem:COMMunicate:NETWork:IPAdDress:DNS "10.0.2.166"
SYSTem:COMMunicate:NETWork:COMMon:HOSTname?
// "SMBV100B-102030"
SYSTem:COMMunicate:NETWork:COMMon:WORkgroup "instrument"
SYSTem:COMMunicate:NETWork:COMMon:DOMain "rsint.net"
SYSTem:COMMunicate:NETWork:IPAdDress:GATeway "10.113.0.1"
SYSTem:COMMunicate:NETWork:IPAdDress:SUBNet:MASK "255.255.252.0"
SYSTem:COMMunicate:NETWork:MACAdDress "08 00 27 a3 a1 70"
SYSTem:PROTectioN1:STATe 1
```

### Example: Restarting the network

```
SYSTem:COMMunicate:NETWork:REStArt
// terminates the network connection and sets it up again
```

### Example: Finding out VISA resource strings

```
SYSTem:COMMunicate:NETWork:RESource?
// Response: "TCPIP::10.113.0.104::inst0::INSTR"

SYSTem:COMMunicate:HISLip:RESource?
// Response: "TCPIP::10.113.0.104::hislip0::INSTR"

SYSTem:COMMunicate:SOCKet:RESource?
// Response: "TCPIP::10.113.0.104::5025::SOCKET"

SYSTem:COMMunicate:USB:RESource?
// "USB::0x0AAD::0x01df::100001::INSTR"

SYSTem:COMMunicate:GPIB:RESource?
// Response: "GPIB::28::INSTR"
SYSTem:COMMunicate:GPIB:SELF:AdDress?
// Response: 28
SYSTem:COMMunicate:GPIB:LTERminator?
// Response: STAN

SYSTem:COMMunicate:SERial:RESource?
// Response: "ASRL1::INSTR"
SYSTem:COMMunicate:SERial:SBITs?
// Response: 1
SYSTem:COMMunicate:SERial:BAUD?
// Response: 115200
```



```
SYSTem:COMMunicate:SERial:PARity?
// Response: NONE
```

### Disabling LAN services

- **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "LAN", "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.

Use the commands in [Example "To disable the LAN interface and LAN services"](#) on page 1030 to disable or enable the LAN interface and LAN interface services individually.

- a) For the first parameter of the command, enter the security password of your instrument.  
The default password is 123456.
- b) For the second parameter of the command, enter the state: 1 (ON), 0 (OFF)

### Example: To disable the LAN interface and LAN services

```
// *****
// Disable the LAN interface.
// *****
SYSTem:SECurity:NETWork:STATe "<password>", 0

// *****
// Disable the LAN services individually.
// *****
SYSTem:SECurity:NETWork:RAW:STATe "<password>", 0
// Disables remote access over raw socket.
SYSTem:SECurity:NETWork:SOE:STATe "<password>", 0
// Disables SCPI over Ethernet/LAN communication.
SYSTem:SECurity:NETWork:VNC:STATe "<password>", 0
// Disables remote access over VNC.
SYSTem:SECurity:NETWork:HTTP:STATe "<password>", 0
// Disables remote access over HTTP.
SYSTem:SECurity:NETWork:RPC:STATe "<password>", 0
// Disables remote access over remote procedure call (RPC).
SYSTem:SECurity:NETWork:SSH:STATe "<password>", 0
// Disables SSH network protocol that is used for service purposes.
SYSTem:SECurity:NETWork:FTP:STATe "<password>", 0
// Disables FTP for file transfer.
SYSTem:SECurity:NETWork:SMB:STATe "<password>", 0
// Disables shared access over SMB.
SYSTem:SECurity:NETWork:AVAHi:STATe "<password>", 0
// Disables Avahi service for automatic instrument configuration in the network.
SYSTem:SECurity:NETWork:SWUpdate:STATe "<password>", 0
// Disables software updates over LAN.
```



**Example: Querying the error queue**

```
SYSTem:ERRor:STATic?
// Response: -221,"Settings conflict", 153,"Input voltage out of range", ...
// Returns all static errors that are collected in the error queue.
```

```
SYSTem:ERRor:HISTory:CLear
// Deletes the history entries.
```

**Example: Configuring date and time**

```
// Query the date and time setting of the instrument
// Query the current timezone and setting
SYSTem:DATE?
// Response: 2023,1,16;1
SYSTem:TIME?
// Response: 18,15,17;1
SYSTem:TIME:ZONE?
// Response: "";1 //default UTC setting
SYSTem:TIME:PROTOcol?
// Response: "OFF";1 // no protocol selected
SYSTem:NTP:STATe?
// Response: 0;1 // NTP is disabled

// Setting the timezone and NTP time protocol
SYSTem:TIME:ZONE:CATalog?
// Response: "UTC,leap-seconds.list,leapseconds,Africa/Abidjan,..."
SYSTem:TIME:ZONE "Europe/Berlin"
SYSTem:NTP:HOST "timesource.net" // sets the NTP server address
SYSTem:NTP:STATe?
// Response: 1 // the NTP time server is enabled
```

**Commands**

:SYSTem:ERRor:ALL?	1033
:SYSTem:ERRor:CODE:ALL?	1034
:SYSTem:ERRor:CODE[:NEXT]?	1034
:SYSTem:ERRor:COUNT?	1034
:SYSTem:ERRor[:NEXT]?	1035
:SYSTem:ERRor:GNEXt?	1035
:SYSTem:ERRor:HISTory:CLear	1036
:SYSTem:ERRor:STATic?	1036
:SYSTem:DLOCK	1036
:SYSTem:KLOCK	1036
:SYSTem:NINformation?	1037
:SYSTem:ULOCK	1037
:SYSTem:LOCK:OWNer?	1038
:SYSTem:LOCK:RELease:ALL	1038
:SYSTem:LOCK:REQuest[:EXCLusive]?	1038
:SYSTem:SAV	1038
:SYSTem:RCL	1039



:SYSTem:PROTect<ch>[:STATe].....	1039
:SYSTem:COMMunicate:GPIB:LTERminator.....	1040
:SYSTem:COMMunicate:GPIB:RESource?.....	1040
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess.....	1040
:SYSTem:COMMunicate:HISLip:RESource?.....	1040
:SYSTem:COMMunicate:NETWork:IPADdress.....	1041
:SYSTem:COMMunicate:NETWork:IPADdress:MODE.....	1041
:SYSTem:COMMunicate:NETWork:MACaddress.....	1041
:SYSTem:COMMunicate:NETWork:RESource?.....	1041
:SYSTem:COMMunicate:NETWork:REStart.....	1042
:SYSTem:COMMunicate:NETWork:STATus?.....	1042
:SYSTem:COMMunicate:NETWork[:COMMon]:DOMain.....	1042
:SYSTem:COMMunicate:NETWork[:COMMon]:HOSTname.....	1042
:SYSTem:COMMunicate:NETWork[:COMMon]:WORKgroup.....	1043
:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS.....	1043
:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway.....	1043
:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK.....	1043
:SYSTem:COMMunicate:SERial:BAUD.....	1044
:SYSTem:COMMunicate:SERial:PARity.....	1044
:SYSTem:COMMunicate:SERial:RESource?.....	1044
:SYSTem:COMMunicate:SERial:SBITs.....	1044
:SYSTem:COMMunicate:SOCKet:RESource?.....	1044
:SYSTem:COMMunicate:USB:RESource?.....	1045
:SYSTem:HELP:EXPort.....	1045
:SYSTem:IDENtification.....	1045
:SYSTem:IDENtification:PRESet.....	1046
:SYSTem:IRESponse.....	1046
:SYSTem:ORESponse.....	1046
:SYSTem:LANGuage.....	1047
:SYSTem:INFormation:SCPI.....	1047
:SYSTem:SECurity:NETWork:AVAHI[:STATe].....	1047
:SYSTem:SECurity:NETWork:FTP[:STATe].....	1047
:SYSTem:SECurity:NETWork:HTTP[:STATe].....	1048
:SYSTem:SECurity:NETWork:RAW[:STATe].....	1048
:SYSTem:SECurity:NETWork:REMSupport[:STATe].....	1048
:SYSTem:SECurity:NETWork:RPC[:STATe].....	1048
:SYSTem:SECurity:NETWork:SMB[:STATe].....	1049
:SYSTem:SECurity:NETWork:SOE[:STATe].....	1049
:SYSTem:SECurity:NETWork:SSH[:STATe].....	1049
:SYSTem:SECurity:NETWork:SWUPdate[:STATe].....	1050
:SYSTem:SECurity:NETWork:VNC[:STATe].....	1050
:SYSTem:SECurity:NETWork[:STATe].....	1050
:SYSTem:SECurity:SANitize[:STATe].....	1050
:SYSTem:SECurity:SUPolicy.....	1051
:SYSTem:SECurity:VOLMode[:STATe].....	1051
:SYSTem:SPECification?.....	1051
:SYSTem:SPECification:VERSion.....	1052
:SYSTem:SPECification:IDENtification:CATalog?.....	1052
:SYSTem:SPECification:PARAmeter?.....	1052
:SYSTem:SPECification:VERSion:CATalog?.....	1053



:SYSTem:SPECification:VERSion:FACTory?	1053
:SYSTem:SRData?	1053
:SYSTem:STARtup:COMPLete?	1054
:SYSTem:DATE	1054
:SYSTem:NTP:HOSTname	1054
:SYSTem:NTP:STATe	1055
:SYSTem:TIME	1055
:SYSTem:TIME:ZONE	1055
:SYSTem:TIME:ZONE:CATalog?	1055
:SYSTem:TIME:PROTocol	1056
:SYSTem:UPTime?	1056
:SYSTem:BIOS:VERSion?	1056
:SYSTem:VERSion?	1056
:SYSTem:OSYStem?	1057
:SYSTem:MMEMory:PATH:USER?	1057
:SYSTem:DFPR?	1057
:SYSTem:REBoot	1057
:SYSTem:REStart	1058
:SYSTem:SHUTdown	1058
:SYSTem:WAIT	1058
:SYSTem:FILEs:TEMPorary:DELeTe	1058

---

### :SYSTem:ERRor:ALL?

Queries the error/event queue for all unread items and removes them from the queue.

#### Return values:

<All> string  
 Error/event\_number,"Error/event\_description>[;Device-depend-ent info]"  
 A comma separated list of error number and a short description of the error in FIFO order.  
 If the queue is empty, the response is 0, "No error"  
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.  
 Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

#### Example:

```
SYSTem:ERRor:ALL?
// queries all entries in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

**Manual operation:** See ["Clear History"](#) on page 1078



---

**:SYSTem:ERRor:CODE:ALL?**

Queries the error numbers of all entries in the error queue and then deletes them.

**Return values:**

<All> string  
 Returns the error numbers. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

0  
 "No error", i.e. the error queue is empty

**Positive value**  
 Positive error numbers denote device-specific errors

**Negative value**  
 Negative error numbers denote error messages defined by SCPI.

**Example:**

```
SYSTem:ERRor:CODE:ALL?
// queries all entries in the error queue.
Response: 0
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

---

**:SYSTem:ERRor:CODE[:NEXT]?**

Queries the error number of the oldest entry in the error queue and then deletes it.

**Return values:**

<Next> string  
 Returns the error number. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

0  
 "No error", i.e. the error queue is empty

**Positive value**  
 Positive error numbers denote device-specific errors

**Negative value**  
 Negative error numbers denote error messages defined by SCPI.

**Example:**

```
SYSTem:ERRor:CODE:NEXT?
// queries the oldest entry in the error queue.
Response: 0
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

---

**:SYSTem:ERRor:COUNT?**

Queries the number of entries in the error queue.



**Return values:**

<Count> integer  
**0**  
 The error queue is empty.

**Example:**

```
SYSTem:ERRor:COUNT?
// queries the number of entries in the error queue.
Response: 1
// one error has occurred since the error queue was last read out.
```

**Usage:** Query only

**:SYSTem:ERRor[:NEXT]?**

Queries the error/event queue for the oldest item and removes it from the queue.

**Return values:**

<Next> string  
 Error/event\_number,"Error/event\_description>[;Device-dependent info]"  
 Error number and a short description of the error.  
 If the queue is empty, the response is 0, "No error"  
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.  
 Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

**Example:**

```
SYSTem:ERRor:NEXT?
// queries the oldest entry in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

**Manual operation:** See "[Static Notifications/History](#)" on page 1078

**:SYSTem:ERRor:GNEXT?**

Similar to :SYSTem:ERRor[:NEXT]?, but queries the next entry from the global persistent error/event queue.

**Return values:**

<NextGlobalError> string  
 Error/event number, "Error/event description> [;Device dependent info]"  
 An error number and a short description of the error.  
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.



**Example:** `SYSTem:ERRor:GNEXt?`  
 // queries the next error message from the global error queue.

**Usage:** Query only

### **:SYSTem:ERRor:HISTory:CLEar**

Clears the error history.

**Example:** See [Example "Querying the error queue"](#) on page 1031

**Usage:** Event

**Manual operation:** See ["Clear History"](#) on page 1078

### **:SYSTem:ERRor:STATic?**

Returns a list of all errors existing at the time when the query is started. This list corresponds to the display on the info page under manual control.

**Return values:**

<StaticErrors> string

**Example:** See [Example "Querying the error queue"](#) on page 1031

**Usage:** Query only

**Manual operation:** See ["Static Notifications/History"](#) on page 1078

### **:SYSTem:DLOCK <DispLockStat>**

Disables the manual operation over the display, including the front panel keyboard of the instrument.

**Parameters:**

<DispLockStat> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:** `SYST:DLOC ON`  
 Activates the display lock. The instrument cannot be operated via the display until it has been enabled with `SYST:DLOC OFF`.

**Manual operation:** See ["User Interface"](#) on page 598  
 See ["Enabling a locked user interface for manual operation"](#) on page 600

### **:SYSTem:KLOCK <State>**

Disables the front panel keyboard of the instrument.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)



**Example:** `SYST:KLOC ON`  
 Locks the front panel and external controls.  
 To enable the controls, send `SYST:KLOC OFF`.

**Manual operation:** See ["User Interface"](#) on page 598  
 See ["Enabling a locked user interface for manual operation"](#) on page 600

### **:SYSTem:NINFormation?**

Queries the oldest information message ("Error History > Level > Info") in the error/event queue.

**Return values:**

<NextInfo> string

**Example:**

`:SYSTem:NINFormation?`

Queries the oldest entry in the info message queue.

Response: 90,"Info;=== Instrument startup...  
 ==="

Information message containing error number 90, that states, that the instrument startup is complete.

**Usage:** Query only

### **:SYSTem:ULOCK <Mode>**

Locks or unlocks the user interface of the instrument.

**Parameters:**

<Mode> ENABLEd | DONLy | DISabled | TOFF | VNConly

**ENABLEd**

Unlocks the display, the touchscreen and all controls for the manual operation.

**DONLy**

Locks the touchscreen and controls for the manual operation of the instrument. The display shows the current settings.

**VNConly**

Locks the touchscreen and controls for the manual operation, and enables remote operation over VNC. The display shows the current settings.

**TOFF**

Locks the touchscreen for the manual operation of the instrument. The display shows the current settings.

**DISabled**

Locks the display, the touchscreen and all controls for the manual operation.

\*RST: n.a. (factory preset: ENABLEd)



**Example:** `:SYST:ULOC DIS`  
 Activates the user interface lock, including display and controls.

**Manual operation:** See ["User Interface"](#) on page 598  
 See ["Enabling a locked user interface for manual operation"](#) on page 600

### **:SYSTem:LOCK:OWNer?**

Queries the sessions that have locked the instrument currently.

If an exclusive lock is set, the query returns the owner of this exclusive lock, otherwise it returns `NONE`.

**Return values:**

<Owner> string

**Example:** `SYST:LOCK:OWN?`  
 Returns the owner of locking.  
 Response: `NONE`  
 The instrument is not locked.

**Usage:** Query only

### **:SYSTem:LOCK:RELease:ALL**

Revokes the exclusive access to the instrument.

**Usage:** Setting only

### **:SYSTem:LOCK:REQuest[:EXCLusive]?**

Queries whether a lock for exclusive access to the instrument via ethernet exists. If successful, the query returns a 1, otherwise 0.

**Return values:**

<Success> integer

**Example:** `SYST:LOCK:REQ?`  
 Queries the state of exclusive locking.  
 Response: 1  
 The exclusive locking is active.

**Usage:** Query only

### **:SYSTem:SAV <Pathname>**

Saves the current R&S SMBV100B settings in a file. To determine the file name and storage location, enter the directory and file name with the command. According to the file type, the R&S SMBV100B assigns the extension (`*.savrc1txt`) automatically.

**Setting parameters:**

<Pathname> string



**Example:** `SYSTem:SAV "/var/user/temp/Test"`  
 // saves the file "Test.savrc.txt" in the directory /var/user/temp/.

**Usage:** Setting only

#### **:SYSTem:RCL <Pathname>**

Selects and uploads a \*.savrc.txt file with previously saved R&S SMBV100B settings from the default or a specified directory.

#### **Setting parameters:**

<Pathname> string

**Example:** `SYSTem:RCL "/var/user/temp/Test"`  
 // loads the "Test.savrc.txt" file from the directory /var/user/temp/.

**Usage:** Setting only

#### **:SYSTem:PROTect<ch>[:STATe] <State>[, <Key>]**

Activates and deactivates the specified protection level.

#### **Suffix:**

<ch> Indicates the protection level.  
 See also ["Protection"](#) on page 593

#### **Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 1)

#### **Setting parameters:**

<Key> integer  
 The respective functions are disabled when the protection level is activated. No password is required for activation of a level. A password must be entered to deactivate the protection level. The default password for the first level is 123456. This protection level is required to unlock internal adjustments for example.

**Example:** To activate protection level:  
`SYSTem:PROTect1:STATe 1`  
 Internal adjustments or hostname cannot be changed.  
 To unlock protection level 1:  
`SYSTem:PROTect1:STATe 0,123456`  
 Internal adjustments are accessible.

**Manual operation:** See ["Protection Level/Password"](#) on page 594



---

**:SYSTem:COMMunicate:GPIB:LTERminator <LTerminator>**

Sets the terminator recognition for remote control via GPIB interface.

**Parameters:**

<LTerminator>           STANDARD | EOI

**EOI**

Recognizes an LF (Line Feed) as the terminator only when it is sent with the line message EOI (End of Line). This setting is recommended particularly for binary block transmissions, as binary blocks may coincidentally contain a character with value LF (Line Feed), although it is not determined as a terminator.

**STANDARD**

Recognizes an LF (Line Feed) as the terminator regardless of whether it is sent with or without EOI.

\*RST:           n.a. (factory preset: STANDARD)

**Example:**           See [Example "Finding out VISA resource strings"](#) on page 1029.

---

**:SYSTem:COMMunicate:GPIB:RESource?**

Queries the visa resource string for remote control via the GPIB interface.

To change the GPIB address, use the command `:SYSTem:COMMunicate:GPIB[:SELF]:ADDRESS`.

**Return values:**

<Resource>           string

**Example:**           See [Example "Finding out VISA resource strings"](#) on page 1029.

**Usage:**           Query only

---

**:SYSTem:COMMunicate:GPIB[:SELF]:ADDRESS <Address>**

Sets the GPIB address.

**Parameters:**

<Address>           integer

Range:           0 to 30

\*RST:           n.a. (factory preset: 28)

**Example:**           See [Example "Finding out VISA resource strings"](#) on page 1029.

**Manual operation:** See ["GPIB Channel Address"](#) on page 638

---

**:SYSTem:COMMunicate:HISLip:RESource?**

Queries the VISA resource string. This string is used for remote control of the instrument with HiSLIP protocol.



**Return values:**

<Resource>            string

**Example:**            See [Example "Finding out VISA resource strings"](#) on page 1029.

**Usage:**              Query only

**Manual operation:** See ["HISLIP"](#) on page 637  
See ["GPIB"](#) on page 637

**:SYSTem:COMMunicate:NETWork:IPADdress <IpAddress>**

Sets the IP address.

**Parameters:**

<IpAddress>            string  
Range:                0.0.0.0. to ff.ff.ff.ff

**Example:**            See [Example "Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["IP Address"](#) on page 634

**:SYSTem:COMMunicate:NETWork:IPADdress:MODE <Mode>**

Selects manual or automatic setting of the IP address.

**Parameters:**

<Mode>                AUTO | STATic  
\*RST:                n.a. (factory preset: AUTO)

**Example:**            See [Example "Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["Address Mode"](#) on page 634

**:SYSTem:COMMunicate:NETWork:MACaddress <MacAddress>**

Queries the MAC address of the network adapter.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<MacAddress>            string

**Example:**            See [Example "Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["MAC Address"](#) on page 636

**:SYSTem:COMMunicate:NETWork:RESource?**

Queries the visa resource string for Ethernet instruments.



**Return values:**

&lt;Resource&gt; string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.**Usage:** Query only**Manual operation:** See ["VXI11"](#) on page 637**:SYSTem:COMMunicate:NETWork:REStart**

Restarts the network.

**Example:** See [Example "Restarting the network"](#) on page 1029.**Usage:** Event**Manual operation:** See ["Restart Network"](#) on page 633**:SYSTem:COMMunicate:NETWork:STATus?**

Queries the network configuration state.

**Return values:**

&lt;State&gt; 1 | ON | 0 | OFF

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 1029.**Usage:** Query only**Manual operation:** See ["Network Status"](#) on page 633**:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain <Domain>**

Determines the primary suffix of the network domain.

**Parameters:**

&lt;Domain&gt; string

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 1029.**Manual operation:** See ["DNS Suffix"](#) on page 635**:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTName <Hostname>**

Sets an individual hostname for the vector signal generator.

**Note:** We recommend that you do not change the hostname to avoid problems with the network connection. If you change the hostname, be sure to use a unique name.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

&lt;Hostname&gt; string



**Example:** See [Example"Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["Hostname"](#) on page 634

**:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup** <Workgroup>

Sets an individual workgroup name for the instrument.

**Parameters:**

<Workgroup>                      string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["Workgroup"](#) on page 634

**:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS** <DNS>

Determines or queries the network DNS server to resolve the name.

**Parameters:**

<DNS>                                string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["DNS Server"](#) on page 636

**:SYSTem:COMMunicate:NETWork[:IPAdDress]:GATeway** <Gateway>

Sets the IP address of the default gateway.

**Parameters:**

<Gateway>                            string  
Range:                      0.0.0.0 to ff.ff.ff.ff

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["Default Gateway"](#) on page 635

**:SYSTem:COMMunicate:NETWork[:IPAdDress]:SUBNet:MASK** <Mask>

Sets the subnet mask.

**Parameters:**

<Mask>                                string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 1029.

**Manual operation:** See ["Subnet Mask"](#) on page 635



---

**:SYSTem:COMMunicate:SERial:BAUD <Baud>**

Defines the baudrate for the serial remote control interface.

**Parameters:**

<Baud> 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200  
\*RST: n.a. (factory preset: 115200)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.

**Manual operation:** See ["Baud Rate"](#) on page 639

---

**:SYSTem:COMMunicate:SERial:PARity <Parity>**

Enters the parity for the serial remote control interface.

**Parameters:**

<Parity> NONE | ODD | EVEN  
\*RST: n.a. (factory preset: NONE)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.

**Manual operation:** See ["Parity"](#) on page 639

---

**:SYSTem:COMMunicate:SERial:RESource?**

Queries the visa resource string for the serial remote control interface. This string is used for remote control of the instrument.

**Return values:**

<Resource> string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.

**Usage:** Query only

**Manual operation:** See ["SERIAL"](#) on page 637

---

**:SYSTem:COMMunicate:SERial:SBITs <SBits>**

Defines the number of stop bits for the serial remote control interface.

**Parameters:**

<SBits> 1 | 2  
\*RST: n.a. (factory preset: 1)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.

**Manual operation:** See ["Stop Bits"](#) on page 639

---

**:SYSTem:COMMunicate:SOCKet:RESource?**

Queries the visa resource string for remote control via LAN interface, using TCP/IP socket protocol.



**Return values:**

&lt;Resource&gt; string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.**Usage:** Query only**Manual operation:** See ["Socket"](#) on page 637**:SYSTem:COMMunicate:USB:RESource?**

Queries the visa resource string for remote control via the USB interface.

**Return values:**

&lt;Resource&gt; string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 1029.**Usage:** Query only**Manual operation:** See ["USB"](#) on page 637**:SYSTem:HELP:EXPort**

Saves the online help as zip archive in the user directory.

**Example:**

```
:SYSTem:HELP:EXPort
MMEM:CDIR?
// "/var/user"
MMEM:CAT?
// .., "Log,DIR,4096", "help.tgz,BIN,69836600"
// confirms that help zip archive is saved.
```

**Usage:** Event**Manual operation::** "Setup > Help > Export Help to User Path"**:SYSTem:IDENtification <Identification>**Selects the mode to determine the "IDN String" and the "OPT String" for the instrument, selected with command [:SYSTem:LANGuage](#).**Note:** While working in an emulation mode, the R&S SMBV100B specific command set is disabled, that is, the SCPI command `SYST:IDEN` is discarded.**Parameters:**

&lt;Identification&gt; AUTO | USER

**AUTO**

Automatically determines the strings.

**USER**

User-defined strings can be selected.

**\*RST:** n.a. (factory preset: AUTO)



**Example:** `SYST:IDEN AUTO`  
Automatically assigns the OPT and IDN strings according to the selected instrument language.

**Manual operation:** See ["Mode"](#) on page 640

### **:SYSTem:IDENtification:PRESet**

Sets the \*IDN and \*OPT strings in user defined mode to default values.

**Example:** `SYST:IDEN USER`  
`SYST:IDEN:PRES`

**Usage:** Event

**Manual operation:** See ["Set to Default"](#) on page 640

### **:SYSTem:IRESpone <IdnResponse>**

Defines the user defined identification string for \*IDN.

**Note:** While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command `SYST:IRES` is discarded.

#### **Parameters:**

<IdnResponse> string

**Example:** `SYST:IDEN USER`  
`// Selects a user-defined identification`  
`SYST:IRES "Test Device"`  
`// Defines identification string 'test device'`  
`*IDN?`  
`// Response: 'test device'`

**Manual operation:** See ["IDN String"](#) on page 640

### **:SYSTem:ORESpone <OResponse>**

Defines the user defined response string for \*OPT.

**Note:** While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command `SYST:ORES` is discarded.

#### **Parameters:**

<OResponse> string

**Example:** `SYST:IDEN USER`  
`// Selects a user-defined identification`  
`SYST:ORES "Test Option"`  
`// Defines the OPT string 'test option'`  
`*OPT?`  
`// Response: 'test option'`

**Manual operation:** See ["OPT String"](#) on page 640



---

**:SYSTem:LANGuage <Language>**

Sets the remote control command set.

**Parameters:**

<Language>                      string

**Example:**

```
SYSTem:LANGuage "SCPI"  
// selects SCPI command set
```

**Manual operation:**    See ["Language"](#) on page 640

---

**:SYSTem:INFormation:SCPI <InfoString>**

Inserts system information in recorded SCPI command lists, for example information on a missing command.

**Parameters:**

<InfoString>                      string

**Example:**

```
SYST:INF:SCPI "missing command"  
enters the information into a recorded SCPI command list.
```

---

**:SYSTem:SECurity:NETWork:AVAHI[:STATE] <SecPassWord>, <AvahiState>**

Disables the Avahi service for automatic configuration of the instrument in a network.

**Parameters:**

<AvahiState>                      1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord>                      string  
Current security password.

**Example:**                      See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:**    See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:FTP[:STATE] <SecPassWord>, <FtpState>**

Disables FTP protocol for file transfer between the instrument and host.

**Parameters:**

<FtpState>                      1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord>                      string  
Current security password.

**Example:**                      See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:**    See ["LAN Services"](#) on page 601



---

**:SYSTem:SECurity:NETWork:HTTP[:STATe]** <SecPassWord>, <HttpState>

Disables control of the instrument over HTTP, the protocol for hypermedia information systems.

**Parameters:**

<HttpState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:RAW[:STATe]** <SecPassWord>, <RawState>

Disables the LAN interface for remote control of the instrument over raw socket port.

**Parameters:**

<RawState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

---

**:SYSTem:SECurity:NETWork:REMSupport[:STATe]** <NetRemSupport>

Disables communication over SSH (SCP) for service purposes.

**Parameters:**

<NetRemSupport> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 1)

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:RPC[:STATe]** <SecPassWord>, <RpcState>

Enables the LAN interface for remote control of the instrument via remote procedure calls (RPC).

**Parameters:**

<RpcState> 1 | ON | 0 | OFF



**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

---

**:SYSTem:SECurity:NETWork:SMB[:STATe]** <SecPassWord>, <SmbState>

Disables access to the file system, printers and serial ports in a network over SMB.

**Parameters:**

<SmbState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:SOE[:STATe]** <SecPassWord>, <SoeState>

Disables control of the instrument over LAN using SCPI commands.

**Parameters:**

<SoeState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:SSH[:STATe]** <SecPassWord>, <SshState>

Disables control of the instrument over LAN using the SSH network protocol.

**Parameters:**

<SshState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601



---

**:SYSTem:SECurity:NETWork:SWUPdate[:STATe] <SecPassWord>, <SwUpdateState>**

Disables software update over LAN.

**Parameters:**

<SwUpdateState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork:VNC[:STATe] <SecPassWord>, <VncState>**

Disables the VNC interface for remote control of the instrument.

**Parameters:**

<VncState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030.

**Manual operation:** See ["LAN Services"](#) on page 601

---

**:SYSTem:SECurity:NETWork[:STATe] <SecPassWord>, <LanStorState>**

Disables the LAN interface in general, including all services.

**Parameters:**

<LanStorState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.  
The default password is 123456.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 1030

**Manual operation:** See ["LAN"](#) on page 601

---

**:SYSTem:SECurity:SANitize[:STATe] <SecPassWord>, <MmemProtState>**

Sanitizes the internal memory.



**Parameters:**

<MmemProtState> 0 | 1 | OFF | ON  
 \*RST: 0

**Setting parameters:**

<SecPassWord> string

**Example:**

SYSTem:SECurity:SANitize[:STATe] 1

**Manual operation:** See "[Sanitize](#)" on page 597

**:SYSTem:SECurity:SUPolicy** <SecPassWord>, <UpdatePolicy>

Configures the automatic signature verification for firmware installation.

**Parameters:**

<UpdatePolicy> STRict | CONFirm | IGNore  
 \*RST: n.a. (factory preset: CONFirm)

**Setting parameters:**

<SecPassWord> string

**Manual operation:** See "[Secure Update Policy](#)" on page 596

**:SYSTem:SECurity:VOLMode[:STATe]** <SecPassWord>, <MmemProtState>

Activates volatile mode, so that no user data can be written to the internal memory permanently.

To enable volatile mode, reboot the instrument. Otherwise the change has no effect.

**Parameters:**

<MmemProtState> 0 | 1 | OFF | ON  
 \*RST: 0

**Setting parameters:**

<SecPassWord> string  
 Current security password  
 The default password is 123456.

**Example:**

SYSTem:SECurity:VOLMode:STATe "123456", 1  
 SYSTem:REBoot

**Manual operation:** See "[Volatile Mode](#)" on page 597

**:SYSTem:SPECification?** <Id>

Retrieves data sheet information for a specific parameter.



**Setting parameters:**

**<Id>** string  
Identifies the name of the entry in the data sheet, as queried with the command `:SYSTem:SPECification:IDENTification:CATalog?` on page 1052

**Return values:**

**<ValList>** float  
Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet. See also [Chapter 12.6.2.3, "Datasheet"](#), on page 661.

**Example:** See [Example "Retrieving instrument specification"](#) on page 1028.

**Usage:** Query only

**:SYSTem:SPECification:VERSion <Version>**

Selects a data sheet version from the data sheets saved on the instrument.

Further queries regarding the data sheet parameters (**<Id>**) and their values refer to the selected data sheet.

To query the list of data sheet versions, use the command `:SYSTem:SPECification:VERSion:CATalog?` on page 1053.

**Parameters:**

**<Version>** string

**Example:** See `:SYSTem:SPECification?` on page 1051.

**:SYSTem:SPECification:IDENTification:CATalog?**

Queries the parameter identifiers (**<Id>**) available in the data sheet.

**Return values:**

**<IdList>** string  
Comma-separated string of the parameter identifiers (**<Id>**)

**Example:** See `:SYSTem:SPECification?` on page 1051.

**Usage:** Query only

**:SYSTem:SPECification:PARAmeter? <Id>[, <Parameter>]**

Retrieves data sheet information for a specific parameter.

**Setting parameters:**

**<Id>** string  
Identifies the name of the entry in the data sheet.  
Query the data sheet parameters with the command `:SYSTem:SPECification:IDENTification:CATalog?`.



<Parameter>	float
	An additional value the result (ValList) depends on.
<b>Return values:</b>	
<ValList>	float
	Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet.
<b>Example:</b>	<p><b>Note:</b> The following values are merely an example. Your instrument may not support the same parameters.</p> <pre>SYST:SPEC:PAR? "ID_RF_FREQ_SETTING_TIME_MS",0.1 SYST:SPEC:PAR? "ID_RF_LEVEL_MAX_GENERAL_DBM", 0.1</pre>
<b>Usage:</b>	Query only

---

#### :SYSTem:SPECification:VERSion:CATalog?

Queries all data sheet versions stored in the instrument.

**Return values:**

<VersCatalog>      string

**Example:**      See [:SYSTem:SPECification?](#) on page 1051.

**Usage:**      Query only

---

#### :SYSTem:SPECification:VERSion:FACTory?

Queries the data sheet version of the factory setting.

**Return values:**

<Version>      string

**Example:**      See [:SYSTem:SPECification?](#) on page 1051.

**Usage:**      Query only

**Manual operation:**      See ["Versions"](#) on page 1084

---

#### :SYSTem:SRData?

Queries the SCPI recording data from the internal file.

This feature enables you to transfer an instrument configuration to other test environments, as e.g. laboratory virtual instruments.

**Return values:**

<FileData>      block data



**Example:**

```
SYSTem:SRData?
// #3118:SOURce1:ROSCillator:SOURce EXT
// :SOURce1:FREQuency:CW 4000000000
// :SOURce1:FREQuency:OFFSet 1000000
// :SOURce1:AM1:STATe 1
// :OUTPut1:STATe 1
```

**Usage:** Query only

### :SYSTem:STARtup:COMPlete?

Queries if the startup of the instrument is completed.

**Return values:**

<Complete> 1 | ON | 0 | OFF  
\*RST: 0

**Example:**

```
SYSTem:STARtup:COMPlate?
Response: 1
// the instrument has started and is ready for operation.
```

**Usage:** Query only

### :SYSTem:DATE <Year>, <Month>, <Day>

Queries or sets the date for the instrument-internal calendar.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<Year> integer  
 <Month> integer  
 Range: 1 to 12  
 <Day> integer  
 Range: 1 to 31

**Example:** See [Example"Configuring date and time"](#) on page 1031.

**Manual operation:** See ["Date"](#) on page 1092

### :SYSTem:NTP:HOSTname <NTPName>

Sets the address of the NTP server. You can enter the IP address, or the hostname of the time server, or even set up an own vendor zone. See the Internet for more information on NTP.

**Parameters:**

<NTPName> string

**Manual operation:** See ["NTP Address"](#) on page 1092



---

**:SYSTem:NTP:STATe** <UseNtpState>

Activates clock synchronization via NTP.

**Parameters:**

<UseNtpState>      1 | ON | 0 | OFF  
\*RST:              n.a. (factory preset: 0)

**Example:**              See [Example"Configuring date and time"](#) on page 1031.

**Manual operation:**    See ["NTP Address"](#) on page 1092

---

**:SYSTem:TIME** <Hour>, <Minute>, <Second>

Queries or sets the time for the instrument-internal clock.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<Hour>                  integer  
Range:              0 to 23  
  
<Minute>               integer  
Range:              0 to 59  
  
<Second>               integer  
Range:              0 to 59

**Example:**              See [Example"Configuring date and time"](#) on page 1031.

**Manual operation:**    See ["Time"](#) on page 1092

---

**:SYSTem:TIME:ZONE** <TimeZone>

Sets the timezone. You can query the list of the available timezones with [:SYSTem:TIME:ZONE:CATalog?](#).

**Parameters:**

<TimeZone>            string

**Example:**              See [Example"Configuring date and time"](#) on page 1031.

**Manual operation:**    See ["Timezone"](#) on page 1092

---

**:SYSTem:TIME:ZONE:CATalog?**

Querys the list of available timezones.

**Return values:**

<Catalog>

**Example:**              See [Example"Configuring date and time"](#) on page 1031.

**Usage:**                Query only



**Manual operation:** See ["Timezone"](#) on page 1092

---

### **:SYSTem:TIME:PROTocol** <TimeProtocol>

Sets the date and time of the operating system.

#### **Parameters:**

<TimeProtocol> OFF | NONE | 0 | NTP | ON | 1

#### **NONE**

Sets the date and time according to the selected timezone, see [:SYSTem:TIME:ZONE:CATalog?](#) on page 1055 and [:SYSTem:TIME:ZONE](#) on page 1055.

#### **NTP**

Sets the date and time derived from the network time protocol. To select the NTP time server, use the commands [:SYSTem:NTP:HOSTname](#) on page 1054 and [:SYSTem:NTP:STATe](#) on page 1055.

\*RST: n.a. (factory preset: NONE)

**Example:** See [Example"Configuring date and time"](#) on page 1031.

**Manual operation:** See ["Time Protocol"](#) on page 1092

---

### **:SYSTem:UPTime?**

Queries the up time of the operating system.

#### **Return values:**

<UpTime> "<ddd.hh:mm:ss>"

#### **Example:**

SYSTem:UPTime?

Response: "0.08:11:00"

**Usage:** Query only

---

### **:SYSTem:BIOS:VERSion?**

Queries the BIOS version of the instrument.

#### **Return values:**

<Version> string

#### **Example:**

SYST:BIOS:VERS?

queries the BIOS version.

Response: 123456

**Usage:** Query only

---

### **:SYSTem:VERSion?**

Queries the SCPI version the instrument's command set complies with.



**Return values:**

<Version> string

**Example:**

```
SYSTem:VERSIon
// queries the SCPI version.
Response: "1996"
// the instrument complies with the SCPI version from 1996.
```

**Usage:** Query only

---

**:SYSTem:OSYSstem?**

Queries the operating system of the instrument.

**Return values:**

<OperSystem> string

**Example:**

```
SYSTem:OSYSstem?
Response: "Linux"
```

**Usage:** Query only

---

**:SYSTem:MMEMory:PATH:USER?**

Queries the user directory, that means the directory the R&S SMBV100B stores user files on.

**Return values:**

<PathUser> string

**Example:**

```
SYSTem:MMEMory:PATH:USER?
Response: ""/var/user/"
```

**Usage:** Query only

---

**:SYSTem:DFPR?**

Queries the device footprint of the instrument. The retrieved information is in machine-readable form suitable for automatic further processing.

**Return values:**

<DeviceFootprint> string  
Information on the instrument type, device identification and details on the installed FW version, hardware and software options.

**Example:** :SYSTem:DFPR?

**Usage:** Query only

---

**:SYSTem:REBoot**

Reboots the instrument including the operating system.



**Usage:** Event

---

### **:SYSTem:REStart**

Restarts the instrument without restarting the operating system.

**Usage:** Event

---

### **:SYSTem:SHUTdown**

Shuts down the instrument.

**Usage:** Event

**Manual operation:** See ["Shut down"](#) on page 1107

---

### **:SYSTem:WAIT <TimeMs>**

Delays the execution of the subsequent remote command by the specified time.

This function is useful, for example to execute an SCPI sequence automatically but with a defined time delay between some commands.

See [Chapter 11.4.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 571.

#### **Setting parameters:**

<TimeMs>	integer
	Wait time in ms
Range:	0 to 10000
*RST:	0

**Example:**

```
SYSTem:WAIT 10000
// Waits 10s before resetting the instrument.
*RST
```

**Usage:** Setting only

---

### **:SYSTem:FILEs:TEMPorary:DElete**

Deletes the temporary files from the internal memory or, if installed, from the Non-Volatile Memory.

**Example:**

```
:SYSTem:FILEs:TEMPorary:DElete
// temporary files are removed
```

**Usage:** Event



## 13.19 STATus subsystem

This system contains the commands for the status reporting system. See also [Chapter 12.4, "Status reporting system"](#), on page 622 for detailed information.

\*RST on page 700 has no effect on the status registers.

### Value ranges

- Queries return the current value of the respective register, which permits a check of the device status.  
Return values: A decimal value in the range 0 to 32767 ( $=2^{15}-1$ )
- The configuration commands set the respective register thus determining which status changes of the R&S SMBV100B cause the status registers to be changed.  
Setting values: A decimal value in the range 0 to 32767 ( $=2^{15}-1$ )

:STATus:OPERation:CONDition?	1059
:STATus:OPERation:ENABle	1059
:STATus:OPERation[:EVENT]	1060
:STATus:OPERation:NTRansition	1060
:STATus:OPERation:PTRansition	1060
:STATus:PRESet	1060
:STATus:QUEStionable:CONDition	1061
:STATus:QUEStionable:ENABle	1061
:STATus:QUEStionable[:EVENT]	1061
:STATus:QUEStionable:NTRansition	1061
:STATus:QUEStionable:PTRansition	1062
:STATus:QUEue[:NEXT]?	1062

---

### :STATus:OPERation:CONDition?

Queries the content of the CONDition part of the STATus:OPERation register.

This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out because it indicates the current hardware status.

#### Return values:

<Condition>                      string

**Example:**                                :STATus:OPERation:CONDition?

**Usage:**                                      Query only

---

### :STATus:OPERation:ENABle <Enable>

Sets the bits of the ENABle part of the STATus:OPERation register. This setting determines which events of the Status-Event part are forwarded to the sum bit in the status byte. These events can be used for a service request.

#### Parameters:

<Enable>                                string



**Example:**                   :STAT:OPER:ENAB 32767  
all events are forwarded to the sum bit of the status byte.

---

**:STATus:OPERation[:EVENT] <Event>**

Queries the content of the EVENT part of the STATus:OPERation register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

**Parameters:**

<Event>                   string

**Example:**                   :STAT:OPER:EVEN?  
queries the STATus:OPERation:EVENT register.

---

**:STATus:OPERation:NTRansition <Ntransition>**

Sets the bits of the NTRansition part of the STATus:OPERation register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register. The disappearance of an event in the hardware is thus registered, for example the end of an adjustment.

**Parameters:**

<Ntransition>           string

**Example:**                   :STAT:OPER:NTR 0  
a transition from 1 to 0 in the condition part of the Status:Operation register does not cause an entry to be made in the EVENT part.

---

**:STATus:OPERation:PTRansition <Ptransition>**

Sets the bits of the PTRansition part of the STATus:OPERation register. If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the EVENT part of the register. A new event in the hardware is thus registered, for example the start of an adjustment.

**Parameters:**

<Ptransition>           string

**Example:**                   :STAT:OPER:PTR 32767  
all transitions from 0 to 1 in the condition part of the Status:Operation register cause an entry to be made in the EVENT part.

---

**:STATus:PRESet <Preset>**

Resets the status registers. All PTRansition parts are set to FFFFh (32767), i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE parts of STATus:OPERation and STATus:QUESTionable are set to 0, i.e. all events in these registers are not passed on.



**Parameters:**

<Preset> string

**Example:**

STAT: PRES  
resets the status registers.

---

**:STATus:QUESTionable:CONDition <Condition>**

Queries the content of the CONDition part of the STATus:QUESTionable register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out since it indicates the current hardware status.

**Parameters:**

<Condition> string

**Example:**

:STATus:QUESTionable:CONDition?  
queries the Status:Questionable:Condition register.

---

**:STATus:QUESTionable:ENABle <Enable>**

Sets the bits of the ENABle part of the STATus:QUESTionable register. The enable part determines which events of the STATus:EVENT part are enabled for the summary bit in the status byte. These events can be used for a service request.

If a bit in the ENABle part is 1, and the corresponding EVENT bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

**Parameters:**

<Enable> string

**Example:**

STAT:QUES:ENAB 1  
Problems when performing an adjustment cause an entry to be made in the sum bit.

---

**:STATus:QUESTionable[:EVENT] <Event>**

Queries the content of the EVENT part of the STATus:QUESTionable register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

**Parameters:**

<Event> string

**Example:**

STAT:QUES:EVENT?  
queries the Status:Questionable:Event register.

---

**:STATus:QUESTionable:NTRansition <Ntransition>**

Sets the bits of the NTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.



**Parameters:****<Ntransition>** string**Example:**

STAT:QUES:NTR 0

a transition from 1 to 0 in the condition part of the STATUS:QUESTIONable register does not cause an entry to be made in the EVENT part

**:STATUS:QUESTIONable:PTRansition <PTransition>**

Sets the bits of the NTRansition part of the STATUS:QUESTIONable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

**Parameters:****<PTransition>** string**Example:**

STAT:QUES:PTR 32767

all transitions from 0 to 1 in the condition part of the STATUS:QUESTIONable register cause an entry to be made in the EVENT part

**:STATUS:QUEue[:NEXT]?**

Queries the oldest entry in the error queue and then deletes it. Positive error numbers denote device-specific errors, and negative error numbers denote error messages defined by SCPI. If the error queue is empty, 0 ("No error") is returned.

The command is identical to :SYSTEM:ERROR[:NEXT]? on page 1035.

**Return values:****<Next>** string**Example:**

:STATUS:QUEue?

queries the oldest entry in the error queue.

Response: 0, 'no error'

no errors have occurred since the error queue was last read out

**Usage:**

Query only

## 13.20 TEST subsystem

The TEST subsystem contains the commands for performing test routines directly at the hardware assemblies.

The selftest responses with a 0 if the test is performed successfully, otherwise a value other than 0 is returned. None of the commands of this system has a \*RST value.



**Example: Testing the screen display**

```
// show the check screen
:TEST:PIXel:WINDow 1
// select the color for the display, e.g. blue
TEST:PIXel:COLor BLUE
// select the sequence for changing the color automatically
TEST:PIXel:COLor AUTO //(~3s per color)
// select a specific RGB color, e.g. black
TEST:PIXel:RGBA 0,0,0,255
// turn on the gradient
TEST:PIXel:GRADient 1
// switch to text mode
:TEST:PIXel:TEXT 1
// set the point size of the text
:TEST:PIXel:POINTsize 600
// exit the check screen
:TEST:PIXel:WINDow 0
```

:TEST:BASEband?	1063
:TEST:BASEband:LOG?	1064
:TEST:BB:BNC:CONNection?	1064
:TEST:BB:BNC:SOURce	1064
:TEST:BB:BNC:DESTination	1065
:TEST:BB:BNC:LOG?	1065
:TEST:BB:BNC:SOURce	1065
:TEST:BB:GENerator:ARBitrary	1065
:TEST:BB:GENerator:FREQuency<ch>	1066
:TEST:BB:GENerator:GAIN	1066
:TEST:BB:GENerator:SOURce	1066
:TEST:BB:GENerator:STATe	1067
:TEST<hw>:ALL:START	1067
:TEST<hw>:ALL:RESult?	1067
:TEST:PIXel:COLor	1067
:TEST:PIXel:GRADient	1068
:TEST:PIXel:POINTsize	1068
:TEST:PIXel:RGBA	1068
:TEST:PIXel:TEXT	1068
:TEST:PIXel:WINDow	1068

**:TEST:BASEband?**

Queries the result of the baseband selftest.

**Return values:**

<TestBbError>      0 | 1 | RUNning | STOPped

**Example:**

```
:TEST:BASEband?
// 0
// the test succeeded
```



**Usage:** Query only

**Manual operation:** See ["Execute Baseband Selftest"](#) on page 1103

#### **:TEST:BASEband:LOG?**

Queries the log message reported during the baseband test.

This is a password-protected function. Unlock the protection level 1 to access it.

#### **Return values:**

<TestBasebandLog> string

#### **Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BASEband:LOG?
// queries the reported message
```

**Usage:** Query only

**Manual operation:** See ["Log Message"](#) on page 1104

#### **:TEST:BB:BNC:CONNection?**

Queries the BNC connection test result.

This is a password-protected function. Unlock the protection level 1 to access it.

#### **Return values:**

<TestStatus> 0 | 1 | RUNning | STOPped

#### **Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:CONNection?
// RUN
// test is running
```

**Usage:** Query only

**Manual operation:** See ["Execute BNC Connection Test"](#) on page 1103

#### **:TEST:BB:BNC:SOURce <BncSource>**

Selects the BNC connection test source.

This is a password-protected function. Unlock the protection level 1 to access it.

#### **Parameters:**

<BncSource> AUTO | USER1 | USER2 | USER3 | USER4 | USER5

\*RST: USER1

#### **Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:SOURce AUTO
// detects the connectors at that signal is assigned
// and performs the connecton test
```

**Manual operation:** See ["Source"](#) on page 1102



---

**:TEST:BB:BNC:DESTination <BncDestination>**

Selects the BNC connection test destination.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<BncDestination>    AUTO | USER1 | USER2 | USER3 | USER4 | USER5  
\*RST:                USER2

**Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:DESTination USER1
```

**Manual operation:**    See "[Destination](#)" on page 1103

---

**:TEST:BB:BNC:LOG?**

Queries the log message reported during the BNC connector test.

This is a password-protected function. Unlock the protection level 1 to access it.

**Return values:**

<Log>                string

**Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:LOG?
// queries the reported message
```

**Usage:**                Query only

**Manual operation:**    See "[Log Message](#)" on page 1103

---

**:TEST:BB:BNC:SOURce <BncSource>**

Selects the BNC connection test source.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<BncSource>            AUTO | USER1 | USER2 | USER3 | USER4 | USER5 | USER6 |  
                         TRGA | TRGB | C1TMC1 | C1TM2 | C1TM3 | C2TMC4 |  
                         C2TM5 | C2TM6 | F1TMC1 | F1TM2 | F1TM3 | F2TMC4 |  
                         F2TM5 | F2TM6 | F3TMC1 | F3TM2 | F3TM3 | F4TMC4 |  
                         F4TM5 | F4TM6  
\*RST:                USER1

**Example:**

```
SYSTem:PROTect1 0,123456
TEST:BB:BNC:SOURce AUTO
// detects the connectors at that signal is assigned
// and performs the connecton test
```

---

**:TEST:BB:GENerator:ARBitary <Filename>**

Selects the ARB waveform to be tested.



**Parameters:****<Filename>** string**Example:**

```
TEST:BB:GENerator:ARbitrary "3gpp.wv"
// Tests the loaded waveform, generating a 3GPP signal
```

**Manual operation:** See ["Select ARB File"](#) on page 1105**:TEST:BB:GENerator:FREQuency<ch> <Frequency>**

Sets the frequency of the test sine or constant I/Q test signal.

**Parameters:**

**<Frequency>** float

Range: -250E6 to 250E6  
 Increment: 1E-3  
 \*RST: 1E6

**Example:**

```
TEST:BB:GENerator:FREQuency 50 MHz
```

**Manual operation:** See ["Frequency"](#) on page 1105**:TEST:BB:GENerator:GAIN <Gain>**

Sets the gain for a sine or constant I/Q test signal.

**Parameters:**

**<Gain>** float

Range: -1 to 1  
 Increment: 1E-6  
 \*RST: 1

**Example:**

```
TEST:BB:GENerator:GAIN 0.5
// amplifies the test signal by a factor of 0.5
```

**Manual operation:** See ["Gain"](#) on page 1105**:TEST:BB:GENerator:SOURce <lqSource>**

Selects the test signal source.

**Parameters:****<lqSource>** SINE | CONStant | ARB | TTONE**SINE**

Generates a sine waveform. To determine the frequency, use command [:TEST:BB:GENerator:FREQuency<ch>](#) on page 1066.

**CONStant**

Uses a constant I/Q test signal.

**ARB**

Selects a signal generated generated by the ARB.



\*RST: SINE

**Example:** :TEST:BB:GENerator:SOURce SINE

**Manual operation:** See ["IQ Source"](#) on page 1104

**:TEST:BB:GENerator:STATe** <State>

Starts the test generator.

**Parameters:**

<State> 1 | ON | 0 | OFF

\*RST: 0

**Example:** TEST:BB:GENerator:STATe ON  
// activates the test generator

**Manual operation:** See ["State"](#) on page 1104

**:TEST<hw>:ALL:START**

**Usage:** Event

Starts the selftest. Use the command :TEST<hw>:ALL:RESult? to query the result.

**:TEST<hw>:ALL:RESult?**

Queries the result of the performed selftest. Start the selftest with :TEST<hw>:ALL:START.

**Return values:**

<Result> 0 | 1 | RUNning | STOPped

\*RST: STOPped

**Usage:** Query only

**:TEST:PIXel:COLor** <PixTestColor>

Selects the color of the screen.

"AUTO" switches from one color to the next in time intervals of approximately 3 s per color.

**Setting parameters:**

<PixTestColor> RED | BLUE | WHITE | GREEN | AUTO | GR25 | GR50 | GR75 | BLACK

\*RST: RED

**Example:** See [Example "Testing the screen display"](#) on page 1063.

**Usage:** Setting only



---

**:TEST:PIXel:GRADient** <PixTestGradStat>

Activates the gradient for display screen test.

**Parameters:**

<PixTestGradStat> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 1063.

---

**:TEST:PIXel:POINTsize** <PixTestGradStat>

Sets the point size of the test text.

**Parameters:**

<PixTestGradStat> integer  
Range: 0 to 999  
\*RST: n.a. (no preset. default: 0)

**Example:** See [Example "Testing the screen display"](#) on page 1063.

---

**:TEST:PIXel:RGBA**

Sets a specific RGBA color for the screen.

**Example:** See [Example "Testing the screen display"](#) on page 1063.

---

**:TEST:PIXel:TEXT** <PixTestGradStat>

Activats the test text mode.

**Parameters:**

<PixTestGradStat> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 1063.

---

**:TEST:PIXel:WINDow** <PixTestWindow>

Activates the check display screen.

**Setting parameters:**

<PixTestWindow> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 1063.

**Usage:** Setting only



## 13.21 TRIGger subsystem

The TRIGger system contains the commands for selecting the trigger source for the RF and LF sweep.

You can work with an internal or with an externally applied trigger signal. In this case, use the commands in the SOURce:INPut subsystem to configure the signal.

The trigger system of the R&S SMBV100B is a simplified implementation of the SCPI trigger system. The TRIGger system differs from the SCPI system as follows:

- No INITiate command; the instrument behaves as if INITiate:CONTinuous ON were set.
- Under TRIGger several sweep subsystems exist.
- The trigger source names correspond directly to the various settings of manual control. SCPI uses different names which are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

In addition to these commands, see more trigger-related commands in the modulation and RF signal subsystems.

**Table 13-5: Cross-reference between the manual and remote control**

R&S proprietary value name	SCPI conform value name	Parameter in manual control
AUTO	IMMediate	"Auto" mode
SINGle	BUS	"Single" mode.
EXTernal	EXTernal	"Ext Single" and "Ext Step" mode. Use command LFO:SWEep:MODE to select between the two sweep modes.
EAUTo	-	"Ext Start/Stop" mode.

:TRIGger<hw>:FSWeep:SOURce.....	1069
:TRIGger<hw>:LFFSweep:SOURce.....	1069
:TRIGger<hw>:PSWeep:SOURce.....	1069
:TRIGger<hw>[:SWEep]:SOURce.....	1069
:TRIGger<hw>:FPSWeep:SOURce.....	1071
:TRIGger<hw>:FSWeep[:IMMediate].....	1071
:TRIGger<hw>:LFFSweep:IMMediate.....	1071
:TRIGger<hw>:PSWeep[:IMMediate].....	1071
:TRIGger<hw>[:SWEep][:IMMediate].....	1071
:TRIGger<hw>:LFFSweep.....	1072

---

```

:TRIGger<hw>:FSWeep:SOURce <Source>
:TRIGger<hw>:LFFSweep:SOURce <Source>
:TRIGger<hw>:PSWeep:SOURce <Source>
:TRIGger<hw>[:SWEep]:SOURce <Source>

```

Selects the trigger source for the corresponding sweeps:

- FSWeep - RF frequency



- LFFSweep - LF frequency
- PSweep - RF level
- SWEEP - all sweeps

The source names of the parameters correspond to the values provided in manual control of the instrument. They differ from the SCPI-compliant names, but the instrument accepts both variants.

Use the SCPI name, if compatibility is an important issue. Find the corresponding SCPI-compliant commands in [Cross-reference between the manual and remote control](#).

#### Setting parameters:

<Source> AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

##### **AUTO [IMMEDIATE]**

Executes a sweep automatically.

In this free-running mode, the trigger condition is met continuously. I.e. when a sweep is completed, the next one starts immediately.

##### **SINGLE [BUS]**

Executes one complete sweep cycle.

The following commands initiate a trigger event:

\*TRG on page 701

`[ :SOURCE<hw> ] :SWEep:POWer:EXECute`

`[ :SOURCE<hw> ] :SWEep [ :FREQuency ] :EXECute`

`:TRIGger<hw> [ :SWEep [ :IMMEDIATE ], :TRIGger<hw> :`

`PSweep [ :IMMEDIATE ] and :TRIGger<hw>:FSweep [ :`

`IMMEDIATE ]`.

Set the sweep mode with the commands:

`[ :SOURCE<hw> ] :SWEep:POWer:MODEAUTO | STEP`

`[ :SOURCE<hw> ] :SWEep [ :FREQuency ] :MODEAUTO | STEP`

`[ :SOURCE<hw> ] :LFOutput:SWEep [ :FREQuency ] :MODE  
AUTO | STEP`

In step mode (STEP), the instrument executes only one step.

##### **EXTERNAL**

An external signal triggers the sweep.

##### **EAUTO**

An external signal triggers the sweep. When one sweep is finished, the next sweep starts.

A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

\*RST: AUTO

**Example:** See [Example"Setup an LF sweep"](#) on page 966

**Usage:** Setting only



---

**:TRIGger<hw>:FPSweep:SOURce <FpTrigSource>**

Selects the trigger source for the combined RF frequency / level sweep.

The parameter names correspond to the manual control. If needed, see table [Table 13-5](#) for selecting the trigger source with SCPI compliant parameter names.

**Parameters:**

<FpTrigSource>      AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

**AUTO|IMMEDIATE**

Executes the combined RF sweep automatically. In this free-running mode, the trigger condition is met continuously. I.e. as soon as a sweep is completed, the next one starts immediately.

**SINGLE|BUS**

Executes one complete sweep cycle triggered by the GPIB commands `[ :SOURce<hw> ] :SWEep:COMBined:EXECute` or `*TRG`. The mode has to be set to `[ :SOURce<hw> ] :SWEep:COMBined:MODE > AUTO`.

**EXTERNAL**

An external signal triggers the sweep.

**EAUTO**

An external signal triggers the sweep. As soon as one sweep is finished, the next sweep starts. A second trigger event stops the sweep at the current frequency and level value pairs, a third trigger event starts the trigger at the start values, and so on.

\*RST:            No enum range assigned!

**Manual operation:**    See "[Mode](#)" on page 339

---

**:TRIGger<hw>:FSweep[:IMMEDIATE]**

**:TRIGger<hw>:LFFSweep:IMMEDIATE**

**:TRIGger<hw>:PSweep[:IMMEDIATE]**

**:TRIGger<hw>[:SWEep]:IMMEDIATE**

Performs a single sweep and immediately starts the activated, corresponding sweep:

- FSWep - RF frequency
- PSweep - RF level
- LFFSweep - LF frequency
- SWEep - all sweeps

Effective in the following configuration:

- TRIG:FSW|LFFS|PSW| [ :SWE ] : SOUR **SING**
- SOUR:SWE:FREQ|POW:MODE **AUTO** or SOUR:LFO:SWE: [ FREQ: ] MODE **AUTO**

Alternatively, you can use the IMMEDIATE command instead of the respective SWEep: [ FREQ: ] | POW:EXECute command.

**Example:**

TRIG

Starts all active sweeps.



**Usage:** Event

**Manual operation:** See "Execute Single Sweep" on page 342

---

#### **:TRIGger<hw>:LFFSweep**

Executes an LF frequency sweep in the following configuration:

- TRIG:LFFS:SOUR SING
- LFO:SWE:MODE AUTO

**Example:**

```
LFO:SWE:MODE AUTO
TRIG:LFFS:SOUR SING
TRIG:LFFSweep
```

**Usage:** Event

## 13.22 UNIT subsystem

The UNIT subsystem is used to set default units for parameters if no unit is indicated in a command. These settings are valid for the entire instrument.

#### **Example: Setting default units for remote control**

```
UNIT:POW V
UNIT:ANGL DEG
```

Sets V (volts) as unit of all power parameters, DEG (degrees) for the phase modulation angle and KMH for the speed.

:UNIT:ANGLE.....	1072
:UNIT:POWer.....	1072
:UNIT:VELocity.....	1073

---

#### **:UNIT:ANGLE <Angle>**

Sets the default unit for phase modulation angle. The command affects no other parameters, such as RF phase, or the manual control or display.

##### **Parameters:**

<Angle>                   DEGree | DEGRee | RADian  
 \*RST:                   RADian

---

#### **:UNIT:POWer <Power>**

Sets the default unit for all power parameters. This setting affects the GUI, as well as all remote control commands that determine power values.

##### **Parameters:**

<Power>                   V | DBUV | DBM  
 \*RST:                   DBM



---

**:UNIT:VELOCITY** <Velocity>

Sets the default unit for the velocity of the wave.

**Parameters:**

<Velocity>                   MPS | KMH | MPH | NMPH  
\*RST:                   MPS



# 14 Troubleshooting and notifications

## Handling R&S SMBV100B start-up issues

If the product does not start, a blown fuse in the power supply can be the cause. Contact the Rohde & Schwarz customer service to confirm the fault symptoms. If the power supply has a blown fuse, you must return the product to the Rohde & Schwarz customer service to have the power supply replaced. Follow the instructions from the Rohde & Schwarz customer service.

If you need to transport or ship the instrument, see [Chapter 15, "Transporting"](#), on page 1089.

## Understanding R&S SMBV100B notifications

The R&S SMBV100B distinguishes between various notifications caused by events or functions. It displays a notification in the "Info" line on the screen temporarily, and saves all notifications in a history list. In addition, an event initiates an entry in the event/error queue of the status reporting system.

See:

- [Chapter 12.4, "Status reporting system"](#), on page 622
- [Chapter 14.4, "Querying notifications"](#), on page 1077

## 14.1 Notifications

Notifications inform about operation states of the instrument, and point out deviations, deficiencies or imperfection of functions that initiate an event in the instrument. The instrument distinguishes the notifications according to the significance of the events by different icons.



Some events require that you eliminate the deviation to make sure that the instrument operates correctly.

To access the notifications and history list dialog, see [Chapter 14.4, "Querying notifications"](#), on page 1077. In remote control mode, you can query the notifications using the command `:SYSTem:ERRor:ALL?` on page 1033.

### 14.1.1 Volatile notifications

Volatile notifications report automatic settings in the instrument (e.g. switching off incompatible types of modulation) or on entries that are not accepted by the instrument (e.g. range violations).

Volatile notifications do not normally demand user actions and disappear automatically after a short period of time. They are saved in the history list, however.



Remote command:

```
:SYSTem:ERRor:ALL? or  
:SYSTem:ERRor:CODE[:NEXT]?
```

### 14.1.2 Permanent notifications

Permanent notifications are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signaled by a permanent notification must be eliminated before correct instrument operation can be continued.

The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

Remote command:

```
:SYSTem:ERRor:STATic?
```

## 14.2 SCPI notifications

The SCPI notifications are similar for all SCPI instruments. Detailed information and an overview of all notifications as defined in SCPI standard can be found in the corresponding documentation.

SCPI notifications have negative codes (numbers). The error text being entered into the error/event queue or being displayed is printed in bold face on the left together with the error code. Below the error text, there is an explanation to the respective error.

## 14.3 Device-specific notifications

The following table contains all error messages specific for the instrument, marked by positive error codes in numerical order and an explanation of the error situation.

The device-specific error messages set bit 3 in the ESR register.



The index provides a list of the error messages sorted according to their error codes.



Error code	Error	Description	Remedy
50	Extern reference out of range or disconnected	External reference is selected but no external signal is applied or the signal is out of range.	<ul style="list-style-type: none"> <li>Check the selected reference signal source (internal or external) in the "Setup &gt; Reference Oscillator" dialog.</li> <li>Change setting to 'internal' if no appropriate external source is available.</li> </ul>
140	This modulation forces other modulations off	<p>A modulation has been switched on which cannot be used at the same time as an already active modulation. The previous modulation has been switched off.</p> <p>Example: Enabling modulation GSM/EDGE switches off any active digital modulation.</p>	
180	Adjustment failed	Adjustment could not be executed.	Generate the adjustment data and load it into the device
182	Adjustment data missing	Adjustment data is missing.	Generate the adjustment data and load it into the device
183	Adjustment data invalid	Adjustment data is invalid and must be restored.	Generate the adjustment data and load it into the device
200	Cannot access hardware	The data transmission to a module was unsuccessful.	The module is not installed, not properly installed or missing.
201	Hardware revision out of date	A later version of certain parts of the instrument is necessary to execute the function selected.	The driver does not support the installed version of a module.
202	Cannot access the EEPROM	An error occurs when writing or reading a EEPROM.	The EEPROM is possibly defect. Replace it.
203	Invalid EEPROM data	Reading a EEPROM is possible, however the data are inconsistent.	
204	Driver initialization failed	Initialization of a driver fails when booting the instrument firmware.	The driver is not compatible with the hardware or software configuration of the instrument.
241	No current list	There is no list selected. To execute the required operation, a list has to be selected in the related dialog. If no list is available, a new list must be created.	
242	Unknown list type specified	<p>The list type selected is not valid for the required operation.</p> <p>For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when selecting a list.</p>	Check the selected list type.
261	Waveform protected	The selected waveform file cannot be transferred to a controller. The waveform is produced with simulation software R&S WinIQSIM2 and is protected.	
460	Cannot open the file	The selected file cannot be opened.	Check the path and file name.
461	Cannot write file	The file cannot be written.	Check if the file is read-only.



Error code	Error	Description	Remedy
462	Cannot read file	The file cannot be read.	Check if the file contents are compatible with the file type.
463	Filename missing	The required operation cannot be executed because the file name is not specified.	Enter file name when creating list.
464	Invalid filename extension	The file extension is not valid for the required operation.	Check the file extension. For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when storing a list.
465	File contains invalid data	The selected file contains data that is not valid for the file type.  The file extension determines the data that is valid for this file type. If the file extension is changed, the lists are no longer recognized and the data is therefore invalid.  Example: the extension of a waveform file (= *.wv) was changed to *.txt	Check the file extension.

## 14.4 Querying notifications

The R&S SMBV100B monitors the functions performed and automatically detects irregularities. The instrument displays corresponding notifications in the "Info" line and collects all notifications in a history with a detailed description.


Find details to the system notifications in [Chapter 14, "Troubleshooting and notifications"](#), on page 1074.

### To display information on static notifications and history

1. In the taskbar, select the "System Config > Info/Notifications".
2. For some notifications, the information line appears briefly on the block diagram.




Selecting the info line also opens the dialog.

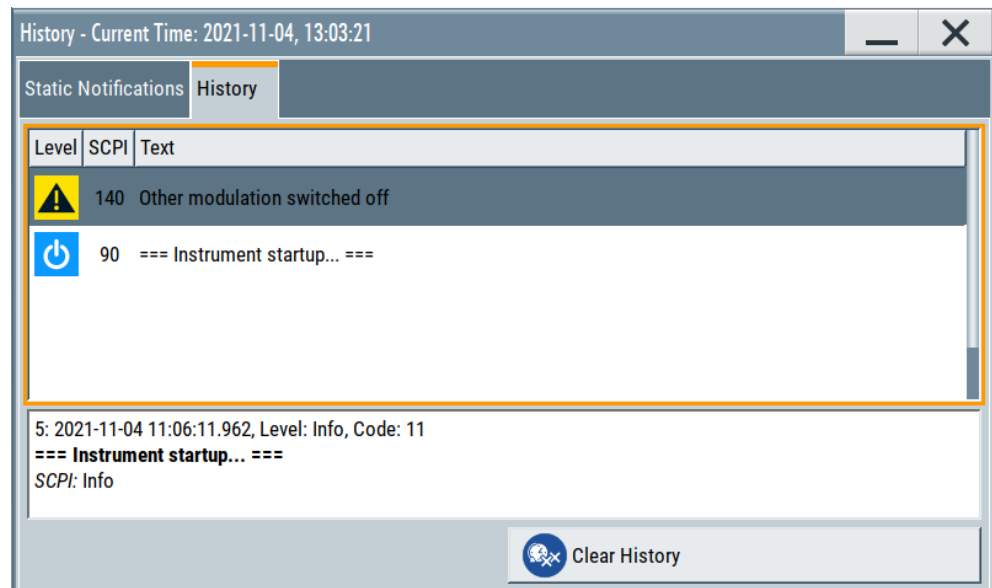

- The "Static Notifications" dialog lists the recently monitored notifications chronologically and displays additional information on the highlighted message.
- The "History" dialog lists the accumulated messages with a short description. Volatile notifications are reported once. If identical errors occur subsequently, they are not reported repeatedly. In the "Info" line, identical errors are displayed repeatedly only if the original error has already disappeared from the display. If queried by SCPI command, identical errors are only reported if the original error has already been retrieved from (and hence not any more present in) the error queue.



### Indication and handling of permanent notifications

If any critical error occurs, the R&S SMBV100B automatically shows the  icon in the taskbar. Select the icon to obtain information on the error and the number of occurrences.

The icon is assigned to permanent notifications. The notification and icon are displayed until the error is eliminated.

### Static Notifications/History

Toggles between "Static Notifications" and the "History" tab in the info dialog.

Remote command:

`:SYSTem:ERRor[:NEXT]?` on page 1035

Each time a `SYST:ERR:NEXT?` query is sent, the eldest entry in the error queue is returned and at the same time cleared in the list.

`:SYSTem:ERRor:STATic?` on page 1036

Queries the list of all errors.

### Clear History

Clears all messages in the "History" tab.



Remote command:

[:SYSTem:ERRor:ALL?](#) on page 1033

Each time a `SYST:ERR:ALL?` query is sent, the error queue is returned and at the same time cleared.

[:SYSTem:ERRor:HISTory:CLEar](#) on page 1036

Clears the messages in the "History" view.

## 14.5 Resolving network connection failures

Several issues may cause failures in the network connection to the instrument. This section lists the most likely reasons and the recommended solutions.

### Common reasons for network connection failures

- Network connecting cables and cable connectors of poor quality
- Incompatibility between the network interface of the R&S SMBV100B and certain switches or routers available on the market
- An invalid IP address assigned to the instrument

### Possible solutions to network connection failures

1. **NOTICE!** Risk of network failure. Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Try out the following to resolve network connection failures:

- Check the network infrastructure. Exchange connecting cables, if obvious damage is visible.  
See also ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 29.
- Observe the link status LED on the R&S SMBV100B or the connected network device. The link status LED is located next to the LAN connector.  
If a link failure is detected, connect the instrument to a different device port or to a different network device.
- Check whether the LAN interface and the required LAN services are enabled.  
See [Chapter 11.6.3, "Configuring LAN services"](#), on page 600.
- If the IP address is set manually (no DHCP) or obtained with the Zeroconf (Avahi) protocol:
  - Check whether the IP address of the instrument is within the network's address range.
  - Check whether the IP address is valid.

See also ["IP Address"](#) on page 634.



## 14.6 Resolving errors during internal adjustments

Internal adjustments can fail for various reasons, e.g. if the adjustment data is invalid or missing, or if any error causes process to abort.

To resolve a failed adjustment process, you have the following options:

- Abort on error (default setting), see ["To resolve aborted internal adjustments"](#) on page 1080
- Continue on error, see ["To continue internal adjustments on error"](#) on page 1080

### To resolve aborted internal adjustments

If an error occurs, the R&S SMBV100B displays a notification in the "Information" field and saves the notification in the history list.

1. Select "System Config > Info / Notifications".
2. Look up the error code of the notification in the overview of device-specific notifications, see [Chapter 14.3, "Device-specific notifications"](#), on page 1075.  
The overview provides a brief explanation of all notifications and information on how to fix an error.
3. To resolve an adjustment failure, generate adjustment data and load it into the instrument.
4. Restart internal adjustments as described in ["Running internal adjustments"](#) on page 1100

If the error persists:

Contact the Rohde & Schwarz customer support, see [Chapter 14.9, "Collecting information for technical support"](#), on page 1086.

### To continue internal adjustments on error

If the failed internal adjustments has no significant effect on your application, you can skip it and continue the calibration despite the error message. This function is password-protected.

1. Select "System Config > Setup > Security > Protection".
2. Unlock protection level 1, see ["Protection Level/Password"](#) on page 594.
3. Select "System Config > Setup > Internal Adjustment > Configuration > Continue Adjustment on Error > On".
4. Proceed as described in ["Running internal adjustments"](#) on page 1100.

## 14.7 Measuring USB cable quality

To check the quality of the USB cable, see the service manual of the R&S SMBV100B.



## 14.8 Requesting instrument configuration and specifications

The R&S SMBV100B is equipped with various hardware and software components. To get an overview of what your instrument is equipped with, you can request the assemblies, hardware and software options, and the firmware version. The components are structured according to the hardware configuration, software options, including the license management, and externally used Rohde & Schwarz equipment, like R&S NRP power sensors.



Software options purchased at a later stage can be activated with a keycode. The activation code is supplied with the software option. How to install options is described in chapter 4 of the R&S SMBV100B service manual.

The installation of hardware options purchased at a later stage is also described in chapter 4 of the service manual. Most of the hardware options have to be installed at an authorized Rohde & Schwarz service center.

### 14.8.1 Hardware configuration settings

Access:

- Select "System Config > Setup > Instrument Assembly > Hardware Config".

General	RF Assembly	Baseband Assembly	Counter	
Assembly	Part Number	Serial Number	Revision	Slot
SMBV100B	1423.1003k02	0		
FRONT.BV	1423.6105.02	100000	01.00	PCI-E slot
MB300	1422.4750.02	100000	01.00	PCI-E slot
PSU300	2118.2067.01	100000	01.00	Not detected, but inserted
IFB.BV	1422.4550.02	100000	01.00	
GPIB-FPGA			01.00	
IPM24	1206.3116.00	100000	01.00	PCI-E slot
BIOS				

The "Hardware Config" dialog lists all installed assemblies and externally connected instruments with information on their part and serial numbers, and revision states. The BIOS version is also listed; firmware updates do not update the BIOS version.

The dialog is divided in tabs, according to the hardware components of the signal domains. The "Counter" tab provides information on the operation time and number of times the instrument was powered on.

The remote commands required to query the hardware configuration are described in [Chapter 13.8, "DIAGnostic subsystem"](#), on page 721.



**Assembly**

The tables in the tabs show characteristics of the installed assemblies.

"Assembly"	Assembly designation.
"Part Number"	Part number of the assembly.
"Serial Number"	Serial number of the assembly.
"Revision"	Revision state of the assembly.
"Slot"	Indicates whether the assembly is connected to the serial bus or PCI bus.

Remote command:

[:DIAGnostic<hw>:BGInfo?](#) on page 722

**Counter**

Displays information on the operation times of the R&S SMBV100B.

**Operation Time / h ← Counter**

Displays the operation time in hours so far.

Remote command:

[:DIAGnostic:INFO:OTIME?](#) on page 723

**Power On Count ← Counter**

Displays the number the instrument has been turned on.

Remote command:

[:DIAGnostic:INFO:POCount?](#) on page 723

**Last Factory Calibration ← Counter**

Displays the date of the last factory calibration.

Remote command:

[:CALibration:DATA:FACTory:DATE?](#) on page 719

**14.8.2 Versions/options settings**

Access:

- Select "System Config > Setup > Instrument Assembly > Versions / Options".



Firmware	Hardware Options	Software Options	Versions	Conan Packages	
Package	Version				
FW	5.00.113				
Service Pack	not installed				
BIOS Version	VirtualBox				

Downgrade Info				
Package	Version			
Factory Version	5.00.113			
Min. Version	4.30.005.26			

The Min. Version is the first version supporting all hardware modules installed in this instrument.  
Please read release notes carefully before downgrading, some software options and features may get lost.

Show Open Source Acknowledgments

LucasFonts  
RSCorpid EULA

The "Versions/Options" dialog shows the version of the installed instrument firmware, the hardware and software options, the data sheet and the software components of the firmware. The BIOS version is also listed; firmware updates do not update the BIOS version.

The remote commands required to query the hardware configuration are described in [Chapter 13.8, "DIAGnostic subsystem"](#), on page 721.

### Firmware

Shows the firmware version and the version of the software platform.

**Note:** Your instrument is delivered with the latest firmware version available. You can download firmware updates and the "Release Notes" that describe the modifications and the firmware update procedure.

See [www.rohde-schwarz.com/firmware/smbv100b](http://www.rohde-schwarz.com/firmware/smbv100b)

Remote command:

n.a.

### Downgrade Info

Shows downgrade information, like factory firmware version and minimum firmware version to that the instrument can be downgraded.

Remote command:

n.a.

### Show Open Source Acknowledgments

Accesses the list of the used open-source software packages and the corresponding verbatim license texts.

### LucasFonts RSCorpid EULA

Accesses copyright information on LucasFonts font type RSCorpid EULA.

### Hardware Options/Software Options

The tables in the "Hardware" and "Software" tabs list the installed hardware and software options.



"Option"	Short name of option
"Designation"	Name of option
"Licenses"	(optional) Number of licenses.
"Expiration Date"	For regular options, "Permanent" is indicated in this column. For options with floating licenses, the expiration date indicates, how long the option is enabled on the instrument. When the time has elapsed, the R&S SMBV100B blocks further use of the option.

Remote command:

\*[OPT?](#) on page 699

\*[IDN?](#) on page 699

### Versions

The "Versions" tab shows the versions of the technical specification of the R&S SMBV100B and of the software components that comprise the firmware.

"Package"	Name of the component.
"Version"	Current issue of the component. E.g. the data sheet covers the technical data of the hardware components of the factory settings. See also <a href="#">Chapter 12.6.2.3, "Datasheet"</a> , on page 661.

Remote command:

:[SYSTem:SPECification:VERSion:FACTory?](#) on page 1053

## 14.8.3 How to query instrument configuration

To get information on the components and installed options of the R&S SMBV100B, proceed as described in the following examples.

### Checking the installed hardware options

To find out the installed options:

1. Select "System Config > Setup > Instrument Assembly > Versions/Options".



2. Select "Hardware Options".

Versions / Options			
Firmware	Hardware Options	Software Options	Versions
Option	Designation		
SMBVB-B1	Reference Oscillator		
SMBVB-B3	1 GHz Reference		
SMBVB-B32	High Output Power		
SMBVB-B80	Removable mass memory		
SMBVB-B103	RF option 9 KHz to 3 GHz		

The dialog lists all hardware options that are installed on the R&S SMBV100B.

Proceed the same way to get information for instance on the firmware, or the installed software options in the corresponding tab.

### Checking the RF hardware assembly

To find out the installed RF hardware:

1. Select "System Config > Setup > Instrument Assembly > Hardware Config".
2. Select "RF Assembly".

Hardware Config				
General	RF Assembly	Baseband Assembly	Counter	
Assembly	Part Number	Serial Number	Revision	Slot
OCX10M	1416.2508.02	100000	04.00	
HP6	1422.4180.02	100000	01.00	
HP6-CPLD (Hw)			00.00	
RFBB	1422.4009.02	100000	01.00	
MOD-FPGA			01.00	
SMBB_MOD (Hw)			00.00	
SMBB_MOD (Fw)			00.00.00.00	
IQB.BV	1423.5450.02	100000	01.00	
IQBBV-CPLD (Hw)			00.00	

The dialog lists the RF hardware components that are installed on the R&S SMBV100B.



Proceed the same way to get information for instance on general or baseband hardware modules, or on the operating times of the R&S SMBV100B in the corresponding tab.

#### 14.8.4 How to request the data sheet

You can access data sheet-related information via the LXI web browser, see [Chapter 12.6.2.3, "Datasheet"](#), on page 661.

### 14.9 Collecting information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support). Our support center staff is optimally trained to assist you in solving problems.

The support center finds solutions more quickly and efficiently if you provide them with information on the instrument and an error description.

- The following dialog boxes in the "Setup > Instrument Assembly" menu provide useful information:
  - **Hardware Configuration:** hardware assemblies
  - **Software and Options:** the status of all software and hardware options installed on your instrument
- **System Messages:** displayed in the "Info" line and provide information on any errors that have occurred
- **Support file:** a special file (\*.tar.gz file) with important support information that can be created automatically.  
The support \*.tar.gz file has a user-definable name and contains the following files and information:
  - SgErrors.txt: chronological record of errors
  - SystemRestorationSMBV100B.savrc1.txt: instrument settings at the last correct shutdown of the instrument
  - UndoHistSuppInfo.xml: list of the last user interactions
  - DeviceFootprint\_<SerialNumber>\_<Date>\_<Time>.xml: service-related information on the instrument's configuration.
  - crashlog.txt, coredump: Postmortem debug info
  - Several files with information on the last performed adjustment and self-test.


See also the description of error messages [Chapter 14.1, "Notifications"](#), on page 1074.

#### To collect error information in a support file

1. Connect a USB device to the R&S SMBV100B.
2. Select "System Config > Setup > Maintenance > Create R&S Support Information".



3. In the "Create R&S Support Information" dialog, navigate to the `/usb` directory. Enter the support filename, for example `RSSupport_DeviceInfo`.

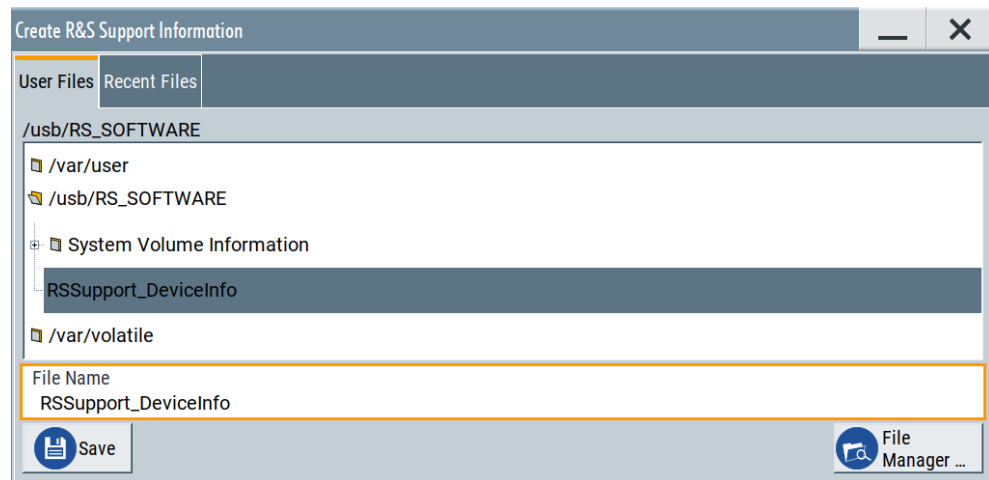

The error information and further required data are collected automatically.

The support file `RSSupport_DeviceInfo.tar.gz` is created and stored in the `/usb` directory.

Collect the error information and attach it to an email in which you describe the problem. Send the email to the customer support address as listed on the Internet ([www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support)).

#### To remove sensitive data

- For information on how to handle or remove the sensitive data from your instrument, refer to the description "R&S SMBV100B Instrument Security Procedures".

#### To pack and transport the instrument

- If you need to transport or ship the instrument, see [Chapter 15, "Transporting"](#), on page 1089.

## 14.10 Contacting customer support

### Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

### Contact information

Contact our customer support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support), or follow this QR code:





*Figure 14-1: QR code to the Rohde & Schwarz support page*



# 15 Transporting

## Lifting and carrying

See:

- ["Lifting and carrying the product"](#) on page 18
- [Chapter 3.1.1, "Lifting and carrying"](#), on page 26

## Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

## Securing

When moving the R&S SMBV100B in a vehicle or using transporting equipment, make sure that the R&S SMBV100B is properly secured. Only use items intended for securing objects.

## Transport altitude

The maximum transport altitude without pressure compensation is specified in the data sheet.



## 16 Maintenance, storage and disposal

The product does not require regular maintenance. It only requires occasional cleaning. It is however advisable to check the nominal data from time to time.

### 16.1 Cleaning

How to clean the product is described in "[Cleaning the product](#)" on page 19.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

### 16.2 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the data sheet.

### 16.3 Performing maintenance tasks

The R&S SMBV100B is accurate due to integrated adjustment procedures and the following additional capabilities that assure correct functioning:

- **Internal adjustments**  
Internal adjustments are integrated self-calibration routines, which you can execute directly on the instrument.  
How to: See [Chapter 16.3.4.3, "How to use the internal adjustments"](#), on page 1100.  
Self-calibration routines that require additional equipment are performed at an authorized Rohde & Schwarz service center. For description, see the R&S SMBV100B service manual.
- **Self-test**  
A self-test is provided for service purposes.  
We recommend that you perform a selftest, if the instrument does not respond as expected.  
How to: See [Chapter 16.3.5.4, "How to set up the R&S SMBV100B for BNC connections tests"](#), on page 1105.
- **Test points**  
If necessary for service purposes, internal test points can be queried. For description, see the R&S SMBV100B service manual.
- [Date and time](#).....1091
- [Check front panel](#).....1093
- [Check display screen](#).....1096
- [Internal adjustments](#).....1097



- [Selftest](#)..... 1101
- [FPGA/uC update settings](#)..... 1105
- [Delete temporary files](#)..... 1107

### 16.3.1 Date and time

The R&S SMBV100B uses an internal real-time clock to determine the date and time. It adjusts the time and date to the timezone of your location automatically, by providing a selection list of continents and cities.

The instrument records the time whenever you create or modify files on your instrument or you use timed licenses. By default, the instrument is set to the UTC timezone, but you can select the timezone according to your location.

Moreover, the instrument supports [NTP](#) protocol for synchronizing all connected instruments and computer systems to minimize time delays in the network.

#### 16.3.1.1 Date and time settings

Access:

- Select "System Config > Setup > Maintenance > Date / Time".

The "Date / Time" dialog contains the time and data settings of the operating system.

This function is password-protected. Unlock the protection level 1 to access it.

You can also set the time zone for your location, and select a time protocol controlled by a time server for synchronization.

The required remote commands are described in [Chapter 13.18, "SYSTem subsystem"](#), on page 1028.



**Settings:**

Date.....	1092
Time.....	1092
Timezone.....	1092
Time Protocol.....	1092
NTP Address.....	1092

**Date**

Displays the date set in the operating system in the format [yyyy.mm.dd].

Remote command:

:SYSTem:DATE on page 1054

**Time**

Displays the time set in the operating system in the format [hh.mm.ss].

The time setting corresponds to the selected [Timezone](#).

Remote command:

:SYSTem:TIME on page 1055

**Timezone**

Selects the timezone in the date and time settings of the operating system.

You can select the timezone according to the major cities on the respective continents.

**Tip:** By typing the first letter, you can quickly navigate through the lists to find the desired destination.

Remote command:

:SYSTem:TIME:ZONE on page 1055

:SYSTem:TIME:ZONE:CATalog? on page 1055

**Time Protocol**

Enables the instrument to refer to a network time protocol.

A network time protocol synchronizes the system clocks of all participating devices in a computer network (Ethernet). A time server in the network provides the time base for the connected devices that refer to this time to synchronize events.

You can select a high-precision time protocol to achieve high clock accuracy and thus reduce the impact of varying network delays.

"None" Refers to the selected timezone, see [Timezone](#).

"NTP" Uses the network time protocol (NTP).

Remote command:

:SYSTem:TIME:PROTOcol on page 1056

**NTP Address**

Sets the IP address or host name of the NTP server.

When the server is detected and verified, the instrument enables the connection automatically.



Remote command:

:SYSTem:NTP:HOSTname on page 1054

:SYSTem:NTP:STATe on page 1055

### 16.3.1.2 How to set date and time

#### To select the timezone

1. Press the [Setup] key.
2. Select "Maintenance > Date /Time > Timezone".
3. Select continent and city of your location.  
**Tip:** By typing the first letter, you can quickly navigate through the lists to find the desired destination.
4. Close the dialogs.

The instrument adjusts the time according to the selected location.

#### To set the date and time

1. **NOTICE!**  
This function is password-protected. Unlock the protection level 1 to access it.  
Since the date and time settings affect time-based options, changing the date and time can therefore lead to loss of access to the function of the options. We recommend that you only change the system time in urgent cases.  
If the time is not displayed correctly, the internal CMOS battery can be discharged. To change the battery, contact your Rohde & Schwarz support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support).  
Press the [Setup] key.
2. Select "Security > Protection".
3. Enable the "Protection Level 1".  
The default password is 123456.
4. Select "Setup > Maintenance > Date / Time".
5. Adjust the settings.
6. Close the dialogs.

The instrument sets the new date and time.

### 16.3.2 Check front panel

Within this dialog, you can verify the functionality of the control keys.

How To: See [Chapter 16.3.2.2, "How to test the front panel"](#), on page 1094



### 16.3.2.1 Check front panel settings

Access:

- ▶ Select "System Config > Setup > Maintenance > Check Front Panel".



Reflecting the front panel, the "Check Front Panel" dialog contains all functions to test the operating elements of the instrument.

In addition, you can check the touch-sensitive functionality by dragging one or more lines across the screen with your finger.

#### Touchscreen Test

Enables you to perform a touchscreen test. This test checks whether the touchscreen area has gaps in the response.

See ["Testing the touchscreen"](#) on page 1095

### 16.3.2.2 How to test the front panel

See:

- ["Testing the key panel"](#) on page 1094
- ["Testing the touchscreen"](#) on page 1095
- ["Terminating the test"](#) on page 1096
- ["Debugging"](#) on page 1096

#### Testing the key panel

To perform the key panel test, you operate the keys at the front panel, and check the response of the instrument in the "Check Front Panel" dialog. To perform this test properly, check each key of the front panel. The test is only completed, when you have verified all keys.


During the test, the actual functions of the keys are disabled.



1. Press the [Setup] key.
2. Select "Maintenance > Check Front Panel"  
The "Check Front Panel" dialog opens.
3. Press a key on the front panel.  
Check if the corresponding key in the "Check Front Panel" dialog turns green.
4. Press the same key a second time.  
Check that the key in the dialog turns red.  
**Note:** Pressing the same key again has no further effect, except for the [Esc] key.  
Pressing this key a third time, terminates the test procedure.
5. Continue with the next key on the front panel and repeat [step 3](#) to [step 5](#) until all keys are tested.  
  
The test is completed, when each key is verified successfully, confirmed by a "Test passed" message.

### Testing the touchscreen

1. Press the [Setup] key.
2. Select "Maintenance > Check Touch Panel"  
The "Finger Paint" test window opens.

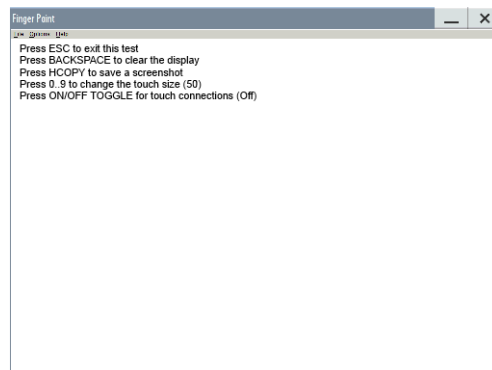


3. Drag with your finger one or more lines, for example diagonally across the screen.  
The test traces the movements of your finger on the screen.


The following results are expected:

- If the lines are uninterrupted, the touchscreen works properly.



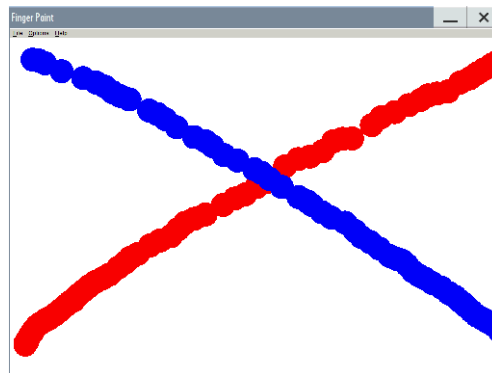

- If there are any gaps, the touch-sensitive functionality is damaged.

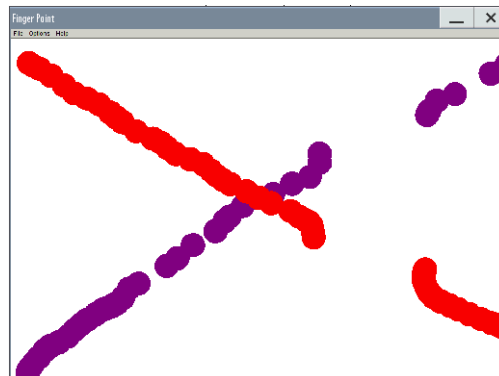

- To return to the "Check Front Panel" dialog, press [Esc].

#### Terminating the test

- Press the [Esc] key.  
Exits the "Check Front Panel" dialog.

#### Debugging

1. If you detect a malfunction, for example, when you press the front panel key for the first time, and the color of the button in the dialog turns red (instead of green), the front panel key has probably stuck.
2. Contact the Rohde & Schwarz customer support, see [Chapter 14.9, "Collecting information for technical support"](#), on page 1086.

### 16.3.3 Check display screen

Using this function, you can verify the color depth and gradient, pixels and the text display of the screen.

Access:


- Select "System Config > Setup > Maintenance > Check Display Screen".  
The R&S SMBV100B fades out the current display and indicates the screen in red. Short instructions on the screen explain how to execute the test.



The remote commands required to define these settings are described in [Chapter 13.20, "TEST subsystem"](#), on page 1062.

### Testing the display screen

1. Press the [Setup] key.
2. Select "Maintenance > Check Display Screen"  
The "Check Display Screen" window opens.
3. Test the color and gradient of the display screen:

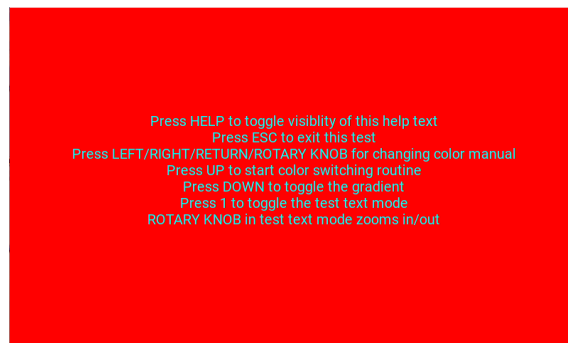

- a) Use the [Help] key to hide the indicated text.
  - b) To toggle between the provided colors manually, use the navigation controls [Left/Right] or the rotary knob.  
The R&S SMBV100B provides the colors red, green, blue, white, three levels of gray shades and black.
  - c) To switch between the screen colors automatically, use the [Up] key.
  - d) To toggle the gradient, use the [Down] key.
4. Check if the R&S SMBV100B indicates the text correctly:
    - a) Press [1] on the numeric keypad.  
The R&S SMBV100B displays a test text over the entire screen.
    - b) To inspect the text in detail, you can use the rotary knob to zoom it out.
  5. To exit the test, press the [Esc] key.

### 16.3.4 Internal adjustments

Using the integrated adjustment procedures, you can start the calibration directly on the instrument.



### 16.3.4.1 Internal adjustment settings

Access:

- Select "System Config > Setup > General > Internal Adjustments".

Internal Adjustments	
Adjust All	Instrument should be warmed up (about 30 min)
Last Full Adjustment	
Since Last Full Adjustment	
Time	Temperature Offset
4 days	0.0 K
Information:	

In this dialog, you can perform internal calibration routines, and get information on the last performed calibration.

The "Temperature Offset" indicates the deviation of the current temperature of the instrument, compared to the temperature of the last adjustment.

The remote commands required to define these settings are described in [Chapter 13.7, "CALibration subsystem"](#), on page 716.

How to: See [Chapter 16.3.4.3, "How to use the internal adjustments"](#), on page 1100.

#### Settings

##### Adjust All

Executes all available internal calibration routines of the instrument.

**Note:** Before you start the internal adjustment, make sure that you have connected a termination resistor, if necessary.

Remote command:

`:CALibration:ALL[:MEASure]?` on page 717

##### Last Full Adjustment

Displays the date of the last fully performed adjustment.

Remote command:

`:CALibration<hw>:ALL:DATE?` on page 717

##### Time

Displays the elapsed time since the last full adjustment.



Remote command:

`:CALibration<hw>:ALL:TIME?` on page 718

### Temperature Offset

Displays the temperature difference, comparing the temperature of the last adjustment to the current instrument temperature.

A green checkmark indicates that the offset is within the permitted range. If the temperature deviates more than  $\pm 5$  K, the instrument indicates a warning icon.

Remote command:

`:CALibration<hw>:ALL:TEMP?` on page 718

### Information

Displays information to the current adjustment state.

Remote command:

`:CALibration<hw>:ALL:INformation?` on page 718

### Continue Adjustment on Error

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

This function is password-protected. Unlock the protection level 1 to access it.


Remote command:

`:CALibration<hw>:CONTinueonerror` on page 719

## 16.3.4.2 Delayed adjustment settings

Access:

- Select "System Config > Setup > General > Delayed Adjustment".

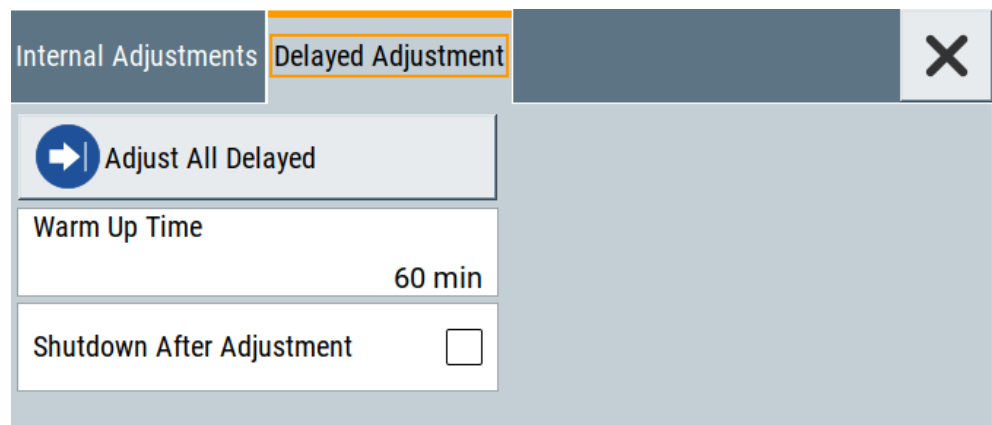

In this dialog, you can set the internal adjustments to start automatically after the selected warm up time and to switch off the instrument after calibration.

The remote commands required to define these settings are described in [Chapter 13.7, "CALibration subsystem"](#), on page 716.



**Settings**

<a href="#">Adjust All Delayed</a> .....	1100
<a href="#">Warm Up Time</a> .....	1100
<a href="#">Shutdown After Adjustment</a> .....	1100

**Adjust All Delayed**

Performs all available internal calibration routines of the instrument.

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay[:MEASure]?` on page 720

**Warm Up Time**

Sets the time for warming up the instrument before the calibration starts automatically.

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay:MINutes` on page 719

**Shutdown After Adjustment**

Enables the automatic shutdown after internal adjustments.

How to: See [Starting internal adjustments automatically](#).

Remote command:

`:CALibration:DElay:SHUTdown[:STATe]` on page 720

**16.3.4.3 How to use the internal adjustments****Deciding whether to run internal adjustments**

1. Select "System Config > Setup > Internal Adjustment".
2. Check the status and color indication in the section "Since Last Full Adjustment".  
Green: internal adjustments are not required.  
Red: internal adjustments are required. Observe also the indication in the "Information" field.
3. We recommend that you run internal adjustments in the following cases:
  - Before starting any application that requires a maximum of level accuracy.
  - When a long period of time has passed since the last adjustments.
  - If the ambient temperature of the instrument significantly differs from the one of the last adjustments.
4. Proceed as described in ["Running internal adjustments"](#) on page 1100.

**Running internal adjustments**

1. After switching on, the R&S SMBV100B requires up to 30 minutes to warm up. Wait until the instrument has reached operating temperature to achieve accurate adjustments.



2. Select "System Config > Setup > Internal Adjustment > Adjust All".
3. Confirm with "Ok".

The adjustment process starts.

The adjustment process takes some time depending on the equipment of the instrument.

It can last up to 2 hours.

A status dialog shows progress of the current adjustment step. If necessary, you can stop the adjustments after a completed step.

If any error occurs, the process aborts. To resolve adjustment issues, see [Chapter 14.6, "Resolving errors during internal adjustments"](#), on page 1080.

### Starting internal adjustments automatically

The delayed adjustment function executes the adjustments automatically. You can set the warm-up time and shut down after the adjustment process finishes. Using this function, you can execute adjustments without being on-site and start measurements directly when back.

1. If necessary, terminate the RF output. See ["Running internal adjustments"](#) on page 1100.
2. Select "System Config > Setup > General > Internal Adjustment".
3. Select "Delayed Adjustment".
4. Set the "Warm Up Time", e.g. *40 min*.  
The R&S SMBV100B requires a warm-up time of at least 30 min.
5. Enable "Shut Down After Adjustment"
6. Select "Adjust All Delayed".

The process starts with warming up the instrument, indicating the progress in a status dialog. In this dialog, you can abort the process again, if necessary.

After warming up, the R&S SMBV100B executes the internal adjustments and shuts down when finished.

### 16.3.5 Selftest

Self-test is provided for service purposes.



16.3.5.1 Selftest connections settings

- Access:
- Select "System Config > Setup > Maintenance > Selftest > Connections".

Connections

Baseband

DAC

Execute Baseband Connections Test

---

BNC Connections Test

Source

USER 1 (Front)

Destination

USER 2 (Front)

Execute BNC Connections Test

---

Log Message:

The "Connections" dialog contains the parameters for testing the signal flow at the connectors.

The remote commands required to define these settings are described in [Chapter 13.20, "TEST subsystem"](#), on page 1062.

Execute Baseband Connections Test.....	1102
BNC Connections Test.....	1102
L Source.....	1102
L Destination.....	1103
L Execute BNC Connection Test.....	1103
L Log Message.....	1103

**Execute Baseband Connections Test**  
Performs a connection test on each of the internal digital baseband links.  
The test implies to all installed options as baseband inputs, motherboard, universal coding generators, and baseband outputs.  
The result (succeeded or failed) is displayed in the status field on the right.  
Remote command:  
n.a.

**BNC Connections Test**  
This function is password-protected. Unlock the protection level 1 to access it.

**Source ← BNC Connections Test**  
Selects the BNC connector source to be tested.  
Remote command:  
:TEST:BB:BNC:SOURce on page 1064



**Destination ← BNC Connections Test**

Selects the BNC connector destination to be tested.

Remote command:

`:TEST:BB:BNC:DESTination` on page 1065

**Execute BNC Connection Test ← BNC Connections Test**

Performs the BNC connection test at the selected connectors.

Remote command:

`:TEST:BB:BNC:CONNECTION?` on page 1064

**Log Message ← BNC Connections Test**

Displays the log message reported during the BNC connections test.


Remote command:

`:TEST:BB:BNC:LOG?` on page 1065

**16.3.5.2 Selftest baseband settings**

Access:

- Select "System Config > Setup > Maintenance > Selftest > Baseband".

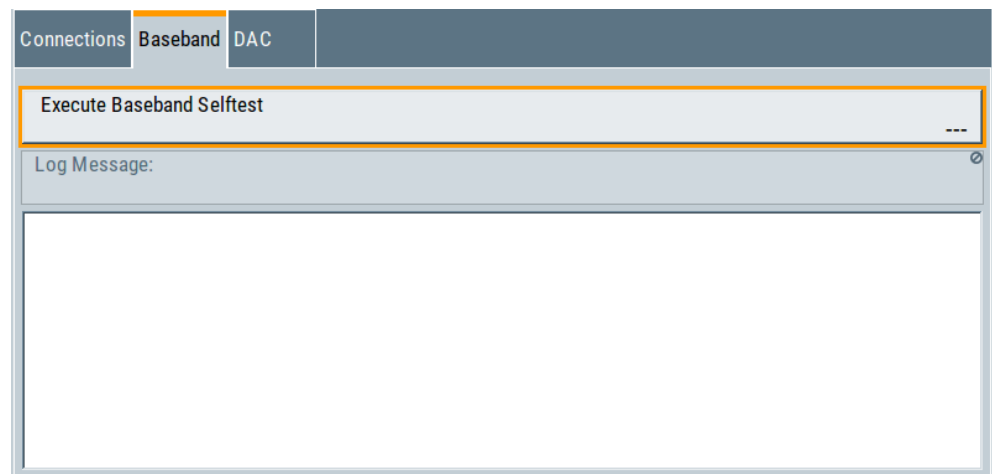

In the "Baseband" dialog you can execute the baseband selftest.

The remote command required to start the test is described in [Chapter 13.20, "TEST subsystem"](#), on page 1062.

**Execute Baseband Selftest**

Performs a baseband selftest.

The result (succeeded or failed) is displayed in the status field on the right.

Remote command:

`:TEST:BASeband?` on page 1063



Log Message

Displays the log message reported during the baseband test.

Remote command:  
:TEST:BASeband:LOG? on page 1064

16.3.5.3 Selftest test generator settings (DAC)

Access:

- 1. This function is password-protected. Unlock the protection level 1 to access it.
- 2. Select "System Config > Setup > Maintenance > Selftest > DAC".

Connections	Baseband	DAC
Test Generator		
State		
On		
IQ Source		Sine
Gain		1.000 000
Frequency		1.000 000 000 MHz

The "DAC" dialog contains the parameters for testing the IQ signal source.

The remote commands required to define these settings are described in [Chapter 13.20, "TEST subsystem"](#), on page 1062.

State.....	1104
IQ Source.....	1104
Gain.....	1105
Frequency.....	1105
Select ARB File.....	1105

State

Starts the test generator.

Remote command:  
:TEST:BB:GENerator:STATe on page 1067

IQ Source

Selects the test signal source.

- "Sine" Generates a sine waveform with frequency as set with the parameter [Frequency](#).
- "Constant I/Q" Uses a constant I/Q test signal.  
For more details, see [Chapter 4.6.3.4, "Constant IQ test signal"](#), on page 164.
- "ARB" Selects a signal generated by the ARB. Select the waveform file with the parameter [Select ARB File](#).



Remote command:

`:TEST:BB:GENerator:SOURce` on page 1066

### Gain

Sets the gain for a sine or a constant I/Q test signal.

Remote command:

`:TEST:BB:GENerator:GAIN` on page 1066

### Frequency

If "IQ Source = Sine", sets the frequency of the test signal.

Remote command:

`:TEST:BB:GENerator:FREQuency<ch>` on page 1066

### Select ARB File

Provides access to the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

See also, chapter "File and Data Management" in the R&S SMBV100B User Manual.

Remote command:

`:TEST:BB:GENerator:ARBitrary` on page 1065

#### 16.3.5.4 How to set up the R&S SMBV100B for BNC connections tests


1. This function is password-protected. Unlock the protection level 1 to access it.
2. Select "System Config > Setup > Maintenance > Selftest > Connections".
3. Select the BNC **Source** (signal output).
4. Select the BNC **Destination** (signal input).
5. On the instrument, connect the selected "Source" connector with the "Destination" connector.  
The selection list in the dialog shows you where to find the associated connector on the instrument.
6. Select "Execute BNC Connections Test".

#### 16.3.6 FPGA/uC update settings

Access:

- Select "System Config > Setup > Maintenance > FPGA/uC Update".



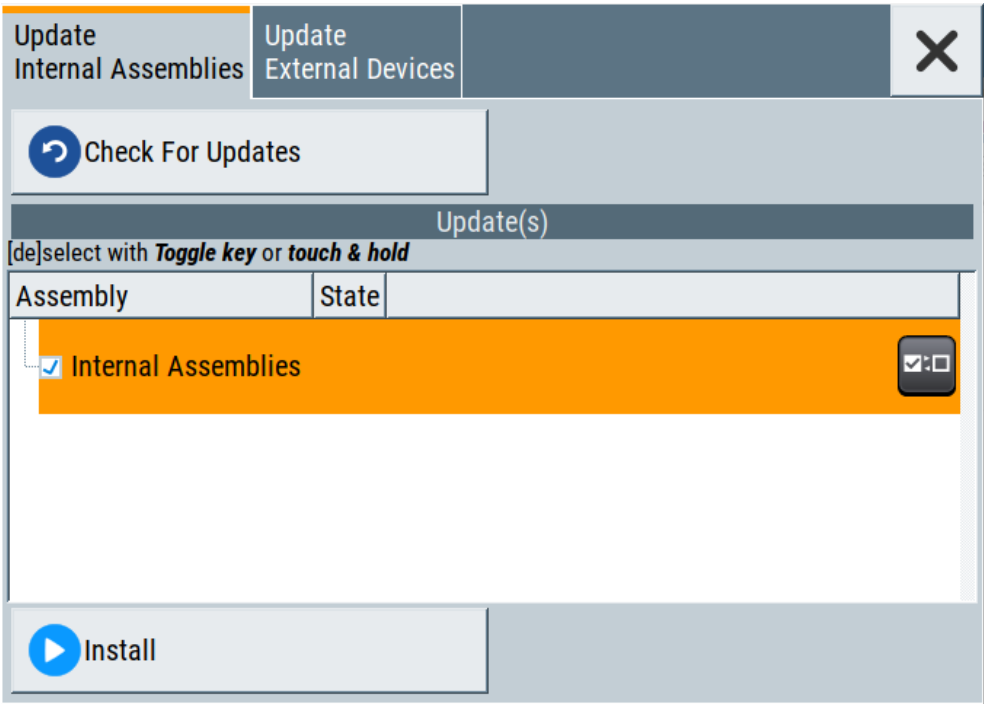

This dialog enables you to check for internal assembly updates and perform updates.

Settings:

Check For Updates.....	1106
Assembly.....	1106
Install.....	1106
Shut down.....	1107
Update External Devices.....	1107
L Check For Updates.....	1107

Check For Updates

Check for updates of the FPGA/μC.  
Remote command:  
n.a.

Assembly

The table shows the installed assemblies and their states.  
"Assembly"      Assembly designation.  
"State"          Indicates the current state of installed assemblies.

Install

Install all available updates for the FPGA/μC.  
Remote command:  
n.a.



**Shut down**

For at least one assembly "State = Done" and no pending assemblies, shuts the instrument down to apply installed updates.

Remote command:

[:SYSTem:SHUTdown](#) on page 1058

**Update External Devices**

This dialog shows the update options of external devices connected to the instrument.

**Check For Updates ← Update External Devices**

Check for updates of external devices.

Remote command:


n.a.

### 16.3.7 Delete temporary files

During signal processing, the R&S SMBV100B creates and saves different temporary files, such as the waveform files (\*.wv) of all ARB standards. The instrument saves these temporary files on a predefined directory on its internal memory, if available on the Non-Volatile Memory. This predefined directory is a protected system directory that is not accessible in the "File Manager", but you can delete all temporary files saved there.

**To achieve more free disc space on the internal memory**

1. Select "System Config > Setup > Maintenance > Delete Temporary Files".

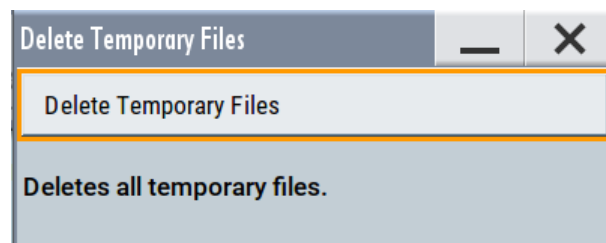

2. Select "Delete Temporary Files".

Deletes the content of the predefined directory.



Another way to achieve more free disc space on the internal memory is to use the [Execute Factory Preset](#).

This function removes all temporary files, too, but also resets several parameters to their factory preset values.

Remote command:

[:SYSTem:FILEs:TEMPorary:DElete](#) on page 1058



## 16.4 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

### Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



*Figure 16-1: Labeling in line with EU directive WEEE*

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.



# Annex

## A Reference information for remote control

### A.1 Telnet program examples

The following program example shows a simple `TcpClient` class that is intended to explain on how to get started with programming of sockets.

The example sets up a socket communication to R&S SMBV100B and opens a simple user interface, very similar to the telnet, which allows input of commands. To enable real automation, further development of the program is required.

#### **TcpClient.h**

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent      HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};
```

#### **TcpClient.cpp**

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
```



```

using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent     HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};

#include <netdb.h>
#include <netinet/in.h>
#include <unistd.h>
#include "TcpClient.h"
TcpClient::TcpClient()
: currentHostName( "" )
, currentPort( 0 )
, currentSocketDescr( 0 )
, serverAddress ( )
, currentHostInfo( NULL )
, clientIsConnected( false )
, receiveBufferSize( 1024 )
{
}
TcpClient::~~TcpClient()
{
    currentHostInfo = NULL;
}

void TcpClient::connectToServer( string &hostname, int port )
{
    currentHostInfo = gethostbyname( hostname.c_str( ) );
    if( currentHostInfo == NULL )
    {
        currentHostName = "";
        currentPort      = 0;
    }
}

```



```

        currentHostInfo    = NULL;
        clientIsConnected = false;
        printf("error connecting host\n" );
    }
    currentHostName = hostname;
    currentPort     = port;
    currentSocketDescr = socket(AF_INET, SOCK_STREAM, 0);
    if( currentSocketDescr == 0 )
    {
        currentHostName    = "";
        currentPort        = 0;
        currentHostInfo    = NULL;
        clientIsConnected = false;
        printf("can't create socket\n" );
    }
    serverAddress.sin_family = currentHostInfo->h_addrtype;
    serverAddress.sin_port   = htons( currentPort );
    memcpy( (char *) &serverAddress.sin_addr.s_addr,
        currentHostInfo->h_addr_list[0], currentHostInfo->h_length );
    if( connect( currentSocketDescr, ( struct sockaddr *) &serverAddress,
        sizeof( serverAddress ) ) < 0 )
    {
        throw string("can't connect server\n" );
    }
    clientIsConnected = true;
}
void TcpClient::disconnect( )
{
    if( clientIsConnected )
    {
        close( currentSocketDescr );
    }
    currentSocketDescr = 0;
    currentHostName    = "";
    currentPort        = 0;
    currentHostInfo    = NULL;
    clientIsConnected = false;
}
void TcpClient::transmit( string &txString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be sent\n");
    }
    char * transmitBuffer = new char[txString.length() +1];
    memcpy( transmitBuffer, txString.c_str(), txString.length() );
    transmitBuffer[txString.length()] = '\n'; //newline is needed!
    if( send( currentSocketDescr, transmitBuffer, txString.length() + 1, 0 ) < 0 )
    {
        throw string("can't transmit data\n");
    }
}

```



```

    }
    delete [] transmitBuffer;
}
void TcpClient::receive( string &rxString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be received\n");
    }
    char * receiveBuffer = new char[receiveBufferSize];
    memset( receiveBuffer, 0, receiveBufferSize );
    bool receiving = true;
    while( receiving )
    {
        int receivedByteCount = recv( currentSocketDescr,
            receiveBuffer, receiveBufferSize, 0 );
        if( receivedByteCount < 0 )
        {
            throw string("error while receiving data\n");
        }
        rxString += string( receiveBuffer );
        receiving = ( receivedByteCount == receiveBufferSize );
    }
    delete [] receiveBuffer;
}
string TcpClient::getCurrentHostName( ) const
{
    return currentHostName;
}
int TcpClient::getCurrentPort( ) const
{
    return currentPort;
}

```

### TelnetClient.cpp

```

#include <iostream>
#include "TcpClient.h"
void printUsage()
{
    cout<<"usage: EthernetRawCommand <server-ip> [scpi-command]"<<endl;
}
int main( int argc, char *argv[] )
{
    int errorCode          = 0; //no error
    bool useSingleCommand = false;
    string singleCommand   = "";
    string hostname        = "";
    int    port            = 5025;
    string input           = "";
}

```



```
TcpClient client;
switch( argc )
{
    case 3:
        useSingleCommand = true;
        singleCommand     = argv[2];
    case 2:
        hostname          = argv[1];
        break;
    default:
        printUsage();
        return(-1);
}
try
{
    client.connectToServer( hostname, port );
    bool terminate = false;
    while( !terminate )
    {
        char buffer[1024];
        if( useSingleCommand )
        {
            input = singleCommand; //send string
        }
        else
        {
            cin.getline( buffer, 1024 );
            input = buffer;
            if( input == "end" )
            {
                terminate = true;
            }
        }
        if( !terminate)
        {
            client.transmit( input ); //send string
            int qPos = input.find( "?", 0 );
            //receive string only when needed
            if( qPos > 0 )
            {
                string rcStr = "";
                client.receive( rcStr );
                cout << rcStr << endl;
            }
        }
        if( useSingleCommand )
        {
            terminate = true;
        }
    }
}
```



```

    }catch( const string errorString )
    {
        cout<<errorString<<endl;
    }
    client.disconnect( );
    return errorCode;
}

```

## A.2 Extensions for user files

The [Table A-1](#) lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

**Table A-1: List of the automatically assigned file extensions in the instrument**

Function	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrc.txt
User Menu	Settings	User-defined favorite settings	*.user_menu
License Key		License Key	*.xml
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw
	Settings	Response file	*.txt
"Pulse Train"	Settings	Pulse train data	*.pulstrn
"NRP Settings"	Settings	R&S NRP Settings	*.nrp, *.rsu
SCPI command list	List	Export file containing list of SCPIs	*.iee
SCPI command script		SCPI script file formats: Plain SCPI, MATLAB, NICVI, Python3	*.txt, *.m, *.c, *.py
R&S Support Info Archive	Support File	Automatically collected support information	*.tar.gz
Tutorials	Tutorial files	Lists containing SCPIs and explanations	*.tut
	Waveform	ARB waveforms ARB multi-segment waveforms	*.wv
	Waveform	ARB multi-carrier settings	*.arb_multicarr
	Configuration data	Configuration file for creation of multisegment ARB waveforms	*.inf_mswv
	Play List	ARB Sequencing List	*.wvs
	Data List	Digital modulation data	*.dm_iqd *.tdm
	Control List	Data to control digital modulation	*.dm_iqc
	Settings	Digital modulation settings	*.dm



Function	List type	Contents	File suffix
	User Standard	Digital modulation user standard	*.dm_stu
	User Mapping	Digital modulation user mapping	*.vam
	User Filter	Digital modulation user filter	*.vaf
	Setting	Envelope shaping function (shaping table)	*.iq_lut *.iq_lutpv
	Settings	Envelope shaping function (polynomial coefficients)	*.iq_poly
	Settings	DPD Settings	*.dpd
	Setting	Predistortion function (AM/AM and AM/PM shaping table)	*.dpd_magn *.dpd_phase
	Settings	Predistortion function (polynomial coefficients)	*.dpd_poly
	Settings	Fading data	*.fad
	Settings	Vehicle description file	*.xvd
	Settings	Trajectory description file	*.xtd
	Settings	User defined dynamic	*.fad_udyn
	Settings	Antenna pattern	*.ant_pat
	Settings	Complete setting of the REG dialog	*.reg
	Settings	REG Object settings	*.reg_obj
	Settings	Complete settings of the GSM/EDGE dialog	*.gsm
	Slot	User-defined slot data	*.gsm_slu
	Frame	User-defined frame data	*.gsm_fu
	Slot	Higher symbol rate slot	*.gsm_hslu
	Frame	Higher symbol rate frame	*.gsm_hfu
	Bluetooth Settings	Complete setting of the Bluetooth dialog	*.bto
	TETRA Settings	Complete setting of the TETRA dialog	*.tetra
	Settings	Complete setting of the 3GPP FDD dialog	*.3g
	Settings	Channel coding enhanced DPCH channels (downlink)	*.3g_ccod_dl
	Settings	Channel coding enhanced DPDCH channels (uplink)	*.3g_ccod_ul
	Settings	User scheduling	*.3g_sch
	Settings	Complete setting of the CDMA2000 dialog	*.cdma2k
	Settings	Complete setting of the TD-SCDMA2000 dialog	*.tdscdma
	Settings	Test Model for TD-SCDMA2000	*.tdtmd



Function	List type	Contents	File suffix
	Settings	Complete setting of the 1xEV-DO dialog	*.1xevdo
	Settings	Complete setting of the IEEE 802.11 WLAN dialog	*.wlann
	Settings	Beamforming data	*.bmf
	Settings	Complete setting of the EUTRA/LTE dialog	*.eutra *.lte
	Settings	TDD Settings	*.lte_tdd
	Settings	User-defined IQ-File	*.iqw
	Settings	Complete setting of the 5G dialog	*.c5g
	Settings	User Filter	*.dat
	Settings	Complete setting of the DVB dialog	*.dvb
	Settings	Complete setting of the NFC dialog	*.nfc



## B Hardware interfaces

This section covers hardware-related topics, like pin assignment of the IEC 625/IEEE 488 interface.

The remote control interfaces are described in details in [Chapter 12, "Network operation and remote control"](#), on page 612.

All other interfaces are described in [Chapter 3.2, "Instrument tour"](#), on page 36.

For more information, see data sheet.

### B.1 GPIB-Bus interface

#### Pin assignment

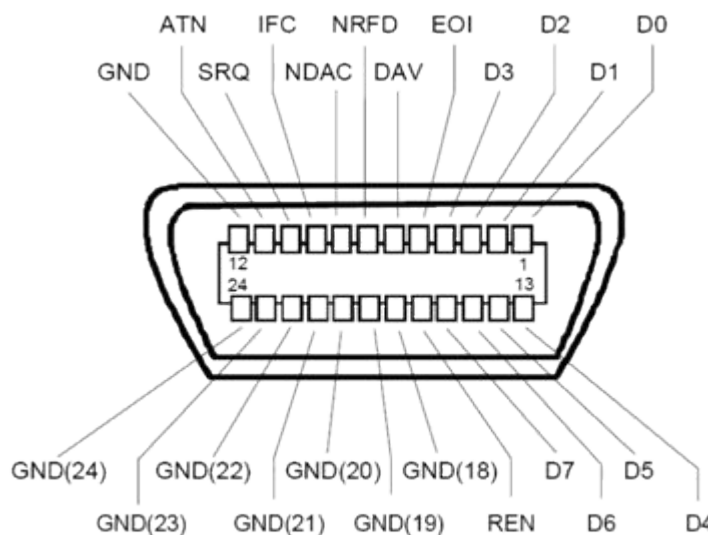


Figure B-1: Pin assignment of GPIB-bus (IEEE 488) interface

#### Bus lines

- Data bus with 8 lines D0 to D7:  
The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.
- Control bus with five lines:  
**IFC** (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.  
**ATN** (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.



**SRQ** (Service Request): active LOW enables the connected device to send a service request to the controller.

**REN** (Remote Enable): active LOW permits switchover to remote control.

**EOI** (End or Identify): has two functions in connection with ATN:

- ATN=HIGH active LOW marks the end of data transmission.
- ATN=LOW active LOW triggers a parallel poll.

- Handshake bus with three lines:

**DAV** (Data Valid): active LOW signals a valid data byte on the data bus.

**NRFD** (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

**NDAC** (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

### Interface functions

Instruments which can be controlled via GPIB-bus interface can be equipped with different interface functions. [Table B-1](#) lists the interface functions for the R&S SMBV100B.

**Table B-1: GPIB-bus interface functions**

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, deaddressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability



## C Unit shortcuts

When specifying units or quantities during data entry, the R&S SMBV100B provides the following shortcuts for simplified input.

Shortcut	Designation	Context	Unit
a, A	ampere	Current	A
	atto-	Area, surface	am <sup>2</sup>
c, C	centi-	Distance, length	cm
d, D	deci-	Distance, length	dm
		Level, power	dB, dBFS, dBm, dBu, dBW
	degree	Phase, polar/spherical coordinates	deg
e, E	exa-	Area, surface	em <sup>2</sup>
f, F	femto-	Area, surface	fm <sup>2</sup>
g, G	giga-	Area, surface	Gm <sup>2</sup>
		Data rate, sample rate, symbol rate	Gbit/s, Gsample/s, Gsymbol/s, Gchip/s
		Frequency	GHz
		Impedance, resistance	GΩ
h, H	hertz	Frequency	Hz
k, K	kilo-	Area, surface	km <sup>2</sup>
		Data rate, sample rate, symbol rate	kbit/s, ksample/s, ksymbol/s, kchip/s
		Distance, length	km
		Frequency	kHz
		Impedance, resistance	kΩ
		Velocity	km/h
m, M	milli-	Area, surface	mm <sup>2</sup>
		Current	mA
		Distance, length	mm
		Electromagnetic force, level	mV
		Power	mW
		Time, period, etc.	ms
	mega-	Area, surface	Mm <sup>2</sup>
		Data rate, sample rate, symbol rate	Mbit/s, Msample/s, Msym/s, Mchip/s
		Frequency	MHz
		Impedance, resistance	MΩ



Shortcut	Designation	Context	Unit
n, N	nano-	Area, surface Current Distance, length Electromagnetic force, level Power Time, period, etc.	nm <sup>2</sup> nA nm nV nW ns
o, O	ohm	Impedance, resistance	Ω
p, P	peta-	Area, surface	pm <sup>2</sup>
	percent	Level, ratio	%
	pico-	Area, surface Current Electromagnetic force, level Power Time, period, etc.	pm <sup>2</sup> pA pV pW ps
r, R	radiant	Phase, polar/spherical coordinates	rad
s, S	second	Time, period, etc.	s
t, T	terra-	Area, surface Data rate, sample rate, symbol rate Frequency Impedance, resistance	Tm <sup>2</sup> Tbit/s, Tsample/s, Tsym/s, Tchip/s THz TΩ
u, U	micro-	Current Distance, length Electromagnetic force, level Power Time, period, etc.	μA μm μV μW μs
v, V	volt	Level, voltage	V
w, W	watt	Level, power	W



# Glossary: Terms and abbreviations

## Symbols

**/hdd:** Provided for backward compatibility with R&S SMBV in remote control; internally mapped to /var/user/.

## A

**Avahi:** A licensed [Zeroconf](#) networking feature, including DNS service. The feature enables a device to self-configure an IP address and subnet mask automatically, when a [DHCP](#) server in the LAN is not available.

## B

**Base unit:** This term describes a R&S SMBV100B equipped with baseband generator and R&S SMBVB-B103.

**Baseband:** The baseband signal, i.e. the I/Q stream at the output of the "Baseband" block.

In rear cases, the term Baseband is used as abbreviation of a "Baseband" block itself.

**Baseband domain:** A common term for signal processing up to the I/Q modulation. The signal in the baseband domain of the R&S SMBV100B is digital.

**Baseband(s) Signal:** [Baseband](#)

**BS:** Base station

## C

**CFast card:** CFast card is a type of removable memory storage, that can hold files with user data.

Support of this memory type is optional and requires option R&S SMBVB-B80.

Throughout this description, the CFast card is referred as a removable memory.

This memory cannot be installed if the [mSata](#) card is installed.

See also [System drive](#).

**Channel (Digital Input, Digital Output):** The signal provided at a digital interface connector or the output stream at the digital output interface may consist of several multiplexed channels. Do not mistake the term *channel* used here with the term signal path. A digital channel is a part of an I/Q stream.

**Clock:** A mandatory reference clock signal for generating the timing pulse in the instrument.

**Complete file path:** The complete file path specifies the root directory and all subdirectories that contain a file or folder.

Synonyms to this expression are "full file path" and "absolute file path".



See also [Chapter 13.6.2, "Accessing files in the default or in a specified directory"](#), on page 705.

**Computer name:** [Hostname](#)

**Continuous Wave Mode:** [CW/Mod](#)

**CW/Mod:** An internally generated control signal that turns off/on digital modulation, i.e. the signal is generated in unmodulated form.

## D

**daisy chain:** A connection scheme in which instruments are connected together in sequence, i.e. an output of the first one is connected to an input of the second one, etc.

**DHCP:** Dynamic Host Configuration Protocol

**DNS:** Domain Name System server

## E

**e.g.:** For example

## F

**File transfer:** The transmission of files from or to the instrument by a remote client. The instrument supports the standard methods File Transfer Protocol (FTP) and file sharing according to Server Message Protocol (SAMBA/SMB).

## G

**Glossary:** List of the often used terms and abbreviations

**GUI:** Graphical User Interface

## H

**Hostname:** An unambiguous indication of the instrument in a LAN that uses a [DNS](#) server.

The default hostname follows the syntax `SMBV100B-<serial number>`, e.g.

`SMBV100B-102030`.

See [Serial number](#).

Synonym: [Computer name](#)

**HUMS:** Health and utilization monitoring system.

## I

**i.e.:** That is

**I/Q Stream:** [Stream](#)



**L**

**Level:** In the Baseband domain, a term describing the signal level of the independent I and Q signals during signal processing (e.g. baseband signal leveling, modulation, etc.).

**LSB:** Least significant bit

**M**

**Marker:** User-defined digital signal for synchronizing external devices to the generated data stream.

Do not mistake the term *marker (signal)* used here with the term [Marker \(graphical signal display\)](#).

**Marker (graphical signal display):** Markers are tools for numerical readout of measured data in diagrams.

**Marker signal:** [Marker](#)

**MIMO:** Multiple Input Multiple Outputs

**mSata:** Memory that holds the operating system, the firmware, and used data.

Throughout this description, this memory is referred as an internal memory.

This memory cannot be installed if the [CFast card \(removable memory\)](#) is installed.

**MSB:** Most significant bit

**MxN:** Representation of a [MIMO](#) system, where M is the number of the transmitting Tx antennas and N the number of the receiving Rx antennas.

**N**

**NTP:** (Network Time Protocol)

A networking protocol for highly accurate clock synchronization between computer systems and instruments in local area networks, or over the public Internet.

**P**

**PC:** Personal computer

**PN sequence:** [PRBS generator](#)

**Power:** A term describing the signal level in the RF domain or defining the length of the I/Q vector in the Baseband domain.

**PRBS generator:** Delivers pseudo-random binary sequences of differing length and duration. They are known as maximum length sequences, and are generated with the aid of ring shift registers with feedback points determined by the polynomial.



**primary-secondary instrument mode:** Setup with two or more R&S SMBV100B or one R&S SMBV100B and several other signal generators such as R&S SGT or R&S SMBV that generates synchronous and time aligned signals.

The primary instrument generates and outputs a dedicated synchronization signal (Sync Out), that has to be fed into the secondary instruments.

See [Chapter 9.3.1, "Connecting multiple instruments in primary-secondary instrument mode"](#), on page 457.

**product page:** A designation of the R&S SMBV100B product page <https://www.rohde-schwarz.com/product/SMBV100B.html>

## R

**Remote access:** [Remote operation](#)

**Remote control:** The operation of the R&S SMBV100B by remote control commands or programs to perform automated tests. The instrument is connected to a system controller via LAN/VXI-11, GPIB or USB using Virtual Instrument Software Architecture (VISA). The instrument is controlled either directly, or supported by instrument drivers.

**Remote device:** External device controls the R&S SMBV100B in remote operation mode, see [Remote operation](#).

Synonyms: External controller, Client device,

**Remote operation:** Allows you to operate the R&S SMBV100B from a remote device via VNC.

Both the R&S SMBV100B and the remote device are connected in a LAN.

Synonym: Remote access

**removable memory:** General term describing mass memory that can be unmounted from the instrument.

See also [CFast card](#).

**RF:** Radio Frequency

## S

**Serial number:** Unique instrument identification, provided on the rear panel of the instrument and required to build the [Computer name](#).

The serial number are the last 6 digits in the string `<stock no.>-<serial number>`, e.g. SMBV100B-102030

See [Figure 3-4](#).

**SISO:** Single Input Single Output

**Smart device:** A mobile, cordless device, such as a smartphone or tablet, capable of Internet browsing.

Synonyms: Smartphone, Tablet



**Star configuration:** A connection scheme for several instruments that consists of one central instrument and several other instruments, all connected to the central one.

**Stream:** An I/Q stream describes the signal at the input of the "I/Q Stream Mapper" up to the output connectors of the instrument.

**Symbol Clock:** Represents the frequency and exact timing of the transmission of the individual symbols

**Symbol Rate:** Calculated as follows:

"Symbol Rate" = "Bit Rate" / Number of bits transmitted with each symbol

**Sync signal:** In master-slave mode, this term describes the signal generated by the master instrument and fed to the slaved.

The synchronization signal is precise signal that facilitates the time alignment between the instruments and acts as trigger signal.

**System drive:** The system drive is a µSD card that holds the operating system, the firmware, and the user data.

Throughout this description, the system drive is referred as an internal memory.

## T

**Trigger:** Internally generated or externally supplied signal which starts signal generation at a particular point in time.

**Trigger event:** A trigger event is caused by the received trigger signal or executed manual trigger.

## U

**UE:** User equipment

**USBTMC:** (USB Test & Measurement Class)

A protocol built on top of USB for communication with USB devices. Using VISA library, it supports service request, triggers, and other specific operations, similar to GPIB.

**User directory:** Describes the default file storage location for user data.

In the file system, user directory is indicated as `/var/user/`

It is physically located on the internal memory or on the [removable memory](#), if option R&S SMBVB-B80 is installed.

## W

**Waveform:** A file with settings provided for repeatable tests with the same test signal.

## Z

**Zeroconf:** Zero-configuration, see [Avahi](#).



# Glossary: Publications and references

## Symbols

**1EF85:** Rohde & Schwarz application note [1EF85](#) "Recording and Converting of R&S I/Q Data Files"

**1GP88:** Rohde & Schwarz application note [1GP88](#) "R&S®ARB Toolbox PC Software"

**1GP121:** Rohde & Schwarz application note [1GP121](#) "Remote Emulation with the R&S®SMBV100B Vector Signal Generator"

**1GP141:** Rohde & Schwarz application note [1GP141](#) "Using R&S® Power Sensors with R&S®Signal Generators"

**1MA074:** Rohde & Schwarz application note [1MA074](#) "RSCommander"

**1MA99:** Rohde & Schwarz application note [1MA99](#) "Guidance on Selecting and Handling Coaxial RF Connectors used with Rohde & Schwarz Test Equipment"

**1MA100:** Rohde & Schwarz application note [1MA100](#) "Test Port Adapter, R&S Interchangeable Port Connector"

**1MA196:** Rohde & Schwarz application note [1MA196](#) "R&S®Forum Application for Remote Control of Rohde & Schwarz Instruments"

## G

**GFM312:** Rohde & Schwarz application note [GFM312](#) "Next generation eCall conformance testing"



# List of commands

:CALibration:ALL[:MEASure]?	717
:CALibration:DATA:EXPort	719
:CALibration:DATA:FACTory:DATE?	719
:CALibration:DElay:MINutes	719
:CALibration:DElay:SHUTdown[:STATe]	720
:CALibration:DElay[:MEASure]?	720
:CALibration<hw>:ALL:DATE?	717
:CALibration<hw>:ALL:INformation?	718
:CALibration<hw>:ALL:TEMP?	718
:CALibration<hw>:ALL:TIME?	718
:CALibration<hw>:CONTInueonerror	719
:CALibration<hw>:IQModulator:LOCAL?	720
:DEVice:PRESet	703
:DIAGnostic:INFO:OTIME?	723
:DIAGnostic:INFO:POCount?	723
:DIAGnostic<hw>:BGInfo:CATalog?	722
:DIAGnostic<hw>:BGInfo?	722
:DIAGnostic<hw>:POINT:CATalog?	724
:DIAGnostic<hw>[:MEASure]:POINT?	724
:DISPlay:ANNotation:AMPLitude	734
:DISPlay:ANNotation:FREQuency	734
:DISPlay:ANNotation[:ALL]	735
:DISPlay:BRIGhtness	733
:DISPlay:BUTTon:BRIGhtness	734
:DISPlay:DIALog:CLOSe	736
:DISPlay:DIALog:CLOSe:ALL	736
:DISPlay:DIALog:ID?	735
:DISPlay:DIALog:OPEN	736
:DISPlay:PSAVe:HOLDOff	733
:DISPlay:PSAVe[:STATe]	733
:DISPlay:UPDate[:STATe]	734
:FORMat:BORDER	737
:FORMat:SREGister	737
:FORMat[:DATA]	737
:HCOPy:DATA?	739
:HCOPy:DEVice:LANGuage	739
:HCOPy:FILE[:NAME]	740
:HCOPy:FILE[:NAME]:AUTO:DIRectory	741
:HCOPy:FILE[:NAME]:AUTO:DIRectory:CLEar	741
:HCOPy:FILE[:NAME]:AUTO:FILE?	741
:HCOPy:FILE[:NAME]:AUTO:STATe	742
:HCOPy:FILE[:NAME]:AUTO?	741
:HCOPy:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	742
:HCOPy:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	742
:HCOPy:FILE[:NAME]:AUTO[:FILE]:NUMBer?	742
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix	743
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe	743



:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe.....	742
:HCOPY:IMAGe:FORMat.....	739
:HCOPY:REGion.....	740
:HCOPY[:EXECute].....	740
:INITiate<hw>[:POWer]:CONTinuous.....	752
:KBOard:LAYout.....	743
:MEMory:HFRee?.....	716
:MMEMory:CATalog:LENGth?.....	710
:MMEMory:CATalog?.....	709
:MMEMory:CDIRectory.....	710
:MMEMory:COPIY.....	710
:MMEMory:DATA.....	711
:MMEMory:DATA:UNPRotected.....	712
:MMEMory:DCATalog:LENGth?.....	713
:MMEMory:DCATalog?.....	713
:MMEMory:DELeTe.....	714
:MMEMory:LOAD:STATe.....	714
:MMEMory:MDIRectory.....	714
:MMEMory:MOVE.....	715
:MMEMory:MSIS.....	715
:MMEMory:RDIRectory.....	715
:MMEMory:RDIRectory:RECURSive.....	715
:MMEMory:STORe:STATe.....	716
:OUTPut:ALL[:STATe].....	744
:OUTPut:USER<ch>:DIRectiOn.....	780
:OUTPut:USER<ch>:SIGNal.....	781
:OUTPut:USER<ch>:TRIGger[:IMMediate].....	782
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	745
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	745
:OUTPut<hw>:AMODE.....	745
:OUTPut<hw>:IMPedance?.....	745
:OUTPut<hw>:PROTection:CLEar.....	746
:OUTPut<hw>:PROTection:TRIPped?.....	746
:OUTPut<hw>[:STATe].....	744
:OUTPut<hw>[:STATe]:PON.....	744
:READ<ch>[:POWer]?.....	753
:SCONfiguration:EXTErnal:ACONnect.....	768
:SCONfiguration:EXTErnal:DIGital<ch>:DIRectiOn?.....	769
:SCONfiguration:EXTErnal:DIGital<ch>:INAMe?.....	770
:SCONfiguration:EXTErnal:DIGital<ch>:IQConnection:STATe?.....	769
:SCONfiguration:EXTErnal:DIGital<ch>:RCONnection:STATe?.....	770
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:CONNect.....	775
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:DETeCt?.....	775
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:DISConnect.....	777
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:ICONnect.....	776
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:INFO?.....	776
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:INITialization:FILE.....	777
:SCONfiguration:EXTErnal:DIGital<ch>:REMote:ISElect.....	775
:SCONfiguration:EXTErnal:DIGital<ch>:RF:COUPLing.....	770
:SCONfiguration:EXTErnal:DIGital<ch>:RF:FREQUency.....	771



:SCONfiguration:EXTErnal:DIGital<ch>:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXTErnal:DIGital<ch>:RF:POWer.....	772
:SCONfiguration:EXTErnal:DIGital<ch>:RF:POWer:OFFSet.....	772
:SCONfiguration:EXTErnal:DIGital<ch>:RF:STATe.....	772
:SCONfiguration:EXTErnal:DISPlay.....	767
:SCONfiguration:EXTErnal:HSDigital:REMOte:DETEct?.....	775
:SCONfiguration:EXTErnal:HSDigital<ch>:DIRectiOn?.....	769
:SCONfiguration:EXTErnal:HSDigital<ch>:INAMe?.....	770
:SCONfiguration:EXTErnal:HSDigital<ch>:IQConneCtion:STATe?.....	769
:SCONfiguration:EXTErnal:HSDigital<ch>:RCONneCtion:STATe?.....	770
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:CONNEct.....	775
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:DISConNEct.....	777
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:ICONNEct.....	776
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:INFO?.....	776
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:INITialization:FILE.....	777
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:ISELect.....	775
:SCONfiguration:EXTErnal:HSDigital<ch>:REMOte:SEND.....	778
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:COUPLing.....	770
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:FREQuency.....	771
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:POWer.....	772
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:POWer:OFFSet.....	772
:SCONfiguration:EXTErnal:HSDigital<ch>:RF:STATe.....	772
:SCONfiguration:EXTErnal:IQOutput:DIRectiOn?.....	769
:SCONfiguration:EXTErnal:IQOutput:INAMe?.....	770
:SCONfiguration:EXTErnal:IQOutput:RCONneCtion:STATe?.....	770
:SCONfiguration:EXTErnal:IQOutput:REMOte:CONNEct.....	775
:SCONfiguration:EXTErnal:IQOutput:REMOte:DISConNEct.....	777
:SCONfiguration:EXTErnal:IQOutput:REMOte:ICONNEct.....	776
:SCONfiguration:EXTErnal:IQOutput:REMOte:INFO?.....	776
:SCONfiguration:EXTErnal:IQOutput:REMOte:INITialization:FILE.....	777
:SCONfiguration:EXTErnal:IQOutput:REMOte:ISELect.....	775
:SCONfiguration:EXTErnal:IQOutput:REMOte:SEND.....	778
:SCONfiguration:EXTErnal:IQOutput:RF:COUPLing.....	770
:SCONfiguration:EXTErnal:IQOutput:RF:FREQuency.....	771
:SCONfiguration:EXTErnal:IQOutput:RF:FREQuency:OFFSet.....	771
:SCONfiguration:EXTErnal:IQOutput:RF:POWer.....	772
:SCONfiguration:EXTErnal:IQOutput:RF:POWer:OFFSet.....	772
:SCONfiguration:EXTErnal:IQOutput:RF:STATe.....	772
:SCONfiguration:EXTErnal:PBEHaviour.....	768
:SCONfiguration:EXTErnal:REMOte:ADD.....	774
:SCONfiguration:EXTErnal:REMOte:CLEan.....	778
:SCONfiguration:EXTErnal:REMOte:CONNEct[:ALL].....	768
:SCONfiguration:EXTErnal:REMOte:DISConNEct[:ALL].....	768
:SCONfiguration:EXTErnal:REMOte:INITialization:CATalog?.....	777
:SCONfiguration:EXTErnal:REMOte:LIST?.....	773
:SCONfiguration:EXTErnal:REMOte:PURGe.....	777
:SCONfiguration:EXTErnal:REMOte:REName.....	774
:SCONfiguration:EXTErnal:REMOte:SCAN.....	773
:SCONfiguration:EXTErnal:REMOte:SCAN:STATe?.....	773



:SCONfiguration:MULTIinstrument:MODE.....	764
:SCONfiguration:MULTIinstrument:STATE.....	765
:SCONfiguration:MULTIinstrument:TRIGger:SYNChronization?.....	765
:SCONfiguration:OUTPut:MAPPing:DIGital<ch>:STReam<st>:STATE.....	765
:SCONfiguration:OUTPut:MAPPing:HSDigital:CHANnel<di>:STReam<st>:STATE.....	765
:SCONfiguration:OUTPut:MAPPing:IQOutput:STReam<st>:STATE.....	765
:SCONfiguration:OUTPut:MAPPing:RF:STReam<st>:STATE.....	765
:SCONfiguration:OUTPut:MAPPing:STReam<st>:FOFFset.....	766
:SCONfiguration:OUTPut:MAPPing:STReam<st>:POFFset.....	766
:SENSe<ch>:UNIT[:POWER].....	754
:SENSe<ch>[:POWER]:APERTure:DEFault:STATE.....	754
:SENSe<ch>[:POWER]:APERTure:TIME.....	754
:SENSe<ch>[:POWER]:CORRection:SPDevice:LIST?.....	755
:SENSe<ch>[:POWER]:CORRection:SPDevice:SElect.....	755
:SENSe<ch>[:POWER]:CORRection:SPDevice:STATE.....	755
:SENSe<ch>[:POWER]:DISPlay:PERManent:PRiority.....	755
:SENSe<ch>[:POWER]:DISPlay:PERManent:STATE.....	756
:SENSe<ch>[:POWER]:FILTer:LENGth:AUTO?.....	756
:SENSe<ch>[:POWER]:FILTer:LENGth[:USER].....	756
:SENSe<ch>[:POWER]:FILTer:NSRatio.....	757
:SENSe<ch>[:POWER]:FILTer:NSRatio:MTIME.....	757
:SENSe<ch>[:POWER]:FILTer:SONCe.....	757
:SENSe<ch>[:POWER]:FILTer:TYPE.....	758
:SENSe<ch>[:POWER]:FREQuency.....	758
:SENSe<ch>[:POWER]:LOGGing:STATE.....	759
:SENSe<ch>[:POWER]:OFFSet.....	759
:SENSe<ch>[:POWER]:OFFSet:STATE.....	759
:SENSe<ch>[:POWER]:SNUMber?.....	760
:SENSe<ch>[:POWER]:SOURce.....	760
:SENSe<ch>[:POWER]:STATus[:DEVice]?.....	760
:SENSe<ch>[:POWER]:SVERsion?.....	761
:SENSe<ch>[:POWER]:TYPE?.....	761
:SENSe<ch>[:POWER]:ZERO.....	761
:SLIST:CLEar:LAN.....	751
:SLIST:CLEar:USB.....	751
:SLIST:CLEar[:ALL].....	752
:SLIST:ELEMeNt<ch>:MAPPing.....	752
:SLIST:SCAN:LSENSor.....	750
:SLIST:SCAN:USENSor.....	751
:SLIST:SCAN[:STATE].....	750
:SLIST:SENSor:MAP.....	752
:SLIST[:LIST]?.....	750
:SOURce<hw>:PRESet.....	703
:STATus:OPERation:CONDition?.....	1059
:STATus:OPERation:ENABLE.....	1059
:STATus:OPERation:NTRansition.....	1060
:STATus:OPERation:PTRansition.....	1060
:STATus:OPERation[:EVENT].....	1060
:STATus:PRESet.....	1060
:STATus:QUEStionable:CONDition.....	1061



:STATus:QUESTionable:ENABLE.....	1061
:STATus:QUESTionable:NTRansition.....	1061
:STATus:QUESTionable:PTRansition.....	1062
:STATus:QUESTionable[:EVENT].....	1061
:STATus:QUEue[:NEXT]?.....	1062
:SYSTem:BIOS:VERSion?.....	1056
:SYSTem:COMMunicate:GPIB:LTERminator.....	1040
:SYSTem:COMMunicate:GPIB:RESource?.....	1040
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess.....	1040
:SYSTem:COMMunicate:HISLip:RESource?.....	1040
:SYSTem:COMMunicate:NETWork:IPADDRess.....	1041
:SYSTem:COMMunicate:NETWork:IPADDRess:MODE.....	1041
:SYSTem:COMMunicate:NETWork:MACAddress.....	1041
:SYSTem:COMMunicate:NETWork:RESource?.....	1041
:SYSTem:COMMunicate:NETWork:REStart.....	1042
:SYSTem:COMMunicate:NETWork:STATus?.....	1042
:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain.....	1042
:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTName.....	1042
:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup.....	1043
:SYSTem:COMMunicate:NETWork[:IPADDRess]:DNS.....	1043
:SYSTem:COMMunicate:NETWork[:IPADDRess]:GATeway.....	1043
:SYSTem:COMMunicate:NETWork[:IPADDRess]:SUBNet:MASK.....	1043
:SYSTem:COMMunicate:SERial:BAUD.....	1044
:SYSTem:COMMunicate:SERial:PARity.....	1044
:SYSTem:COMMunicate:SERial:RESource?.....	1044
:SYSTem:COMMunicate:SERial:SBITs.....	1044
:SYSTem:COMMunicate:SOCKet:RESource?.....	1044
:SYSTem:COMMunicate:USB:RESource?.....	1045
:SYSTem:DATE.....	1054
:SYSTem:DFPR?.....	1057
:SYSTem:DLOCK.....	1036
:SYSTem:ERRor:ALL?.....	1033
:SYSTem:ERRor:CODE:ALL?.....	1034
:SYSTem:ERRor:CODE[:NEXT]?.....	1034
:SYSTem:ERRor:COUNT?.....	1034
:SYSTem:ERRor:GNEXt?.....	1035
:SYSTem:ERRor:HISTory:CLEar.....	1036
:SYSTem:ERRor:STATic?.....	1036
:SYSTem:ERRor[:NEXT]?.....	1035
:SYSTem:FILEs:TEMPorary:DELeTe.....	1058
:SYSTem:FPRReset.....	703
:SYSTem:HELP:EXPort.....	1045
:SYSTem:IDENtification.....	1045
:SYSTem:IDENtification:PRESet.....	1046
:SYSTem:INFormation:SCPI.....	1047
:SYSTem:IRESPonse.....	1046
:SYSTem:KLOCK.....	1036
:SYSTem:LANGuage.....	1047
:SYSTem:LOCK:OWNer?.....	1038
:SYSTem:LOCK:RELease:ALL.....	1038



:SYSTem:LOCK:REQuest[:EXCLusive]?	1038
:SYSTem:MMEMory:PATH:USER?	1057
:SYSTem:NINformation?	1037
:SYSTem:NTP:HOSTname	1054
:SYSTem:NTP:STATe	1055
:SYSTem:ORESpone	1046
:SYSTem:OSYSem?	1057
:SYSTem:PRESet	703
:SYSTem:PROTect<ch>[:STATe]	1039
:SYSTem:RCL	1039
:SYSTem:REBoot	1057
:SYSTem:REStart	1058
:SYSTem:SAV	1038
:SYSTem:SECurity:NETWork:AVAHi[:STATe]	1047
:SYSTem:SECurity:NETWork:FTP[:STATe]	1047
:SYSTem:SECurity:NETWork:HTTP[:STATe]	1048
:SYSTem:SECurity:NETWork:RAW[:STATe]	1048
:SYSTem:SECurity:NETWork:REMSupport[:STATe]	1048
:SYSTem:SECurity:NETWork:RPC[:STATe]	1048
:SYSTem:SECurity:NETWork:SMB[:STATe]	1049
:SYSTem:SECurity:NETWork:SOE[:STATe]	1049
:SYSTem:SECurity:NETWork:SSH[:STATe]	1049
:SYSTem:SECurity:NETWork:SWUPdate[:STATe]	1050
:SYSTem:SECurity:NETWork:VNC[:STATe]	1050
:SYSTem:SECurity:NETWork[:STATe]	1050
:SYSTem:SECurity:SANitize[:STATe]	1050
:SYSTem:SECurity:SUPolicy	1051
:SYSTem:SECurity:VOLMode[:STATe]	1051
:SYSTem:SHUTdown	1058
:SYSTem:SPECification:IDENtification:CATalog?	1052
:SYSTem:SPECification:PARAmeter?	1052
:SYSTem:SPECification:VERSion	1052
:SYSTem:SPECification:VERSion:CATalog?	1053
:SYSTem:SPECification:VERSion:FACtory?	1053
:SYSTem:SPECification?	1051
:SYSTem:SRData?	1053
:SYSTem:STARtup:COMPLete?	1054
:SYSTem:TIME	1055
:SYSTem:TIME:PROTocol	1056
:SYSTem:TIME:ZONE	1055
:SYSTem:TIME:ZONE:CATalog?	1055
:SYSTem:ULOCK	1037
:SYSTem:UPTime?	1056
:SYSTem:VERSion?	1056
:SYSTem:WAIT	1058
:TEST:BASeband:LOG?	1064
:TEST:BASeband?	1063
:TEST:BB:BNC:CONNection?	1064
:TEST:BB:BNC:DESTination	1065
:TEST:BB:BNC:LOG?	1065



:TEST:BB:BNC:SOURce.....	1064
:TEST:BB:BNC:SOURce.....	1065
:TEST:BB:GENerator:ARBitrary.....	1065
:TEST:BB:GENerator:FREQuency<ch>.....	1066
:TEST:BB:GENerator:GAIN.....	1066
:TEST:BB:GENerator:SOURce.....	1066
:TEST:BB:GENerator:STATe.....	1067
:TEST:PIXel:COLor.....	1067
:TEST:PIXel:GRADient.....	1068
:TEST:PIXel:POINTsize.....	1068
:TEST:PIXel:RGBA.....	1068
:TEST:PIXel:TEXT.....	1068
:TEST:PIXel:WINDow.....	1068
:TEST<hw>:ALL:RESult?.....	1067
:TEST<hw>:ALL:START.....	1067
:TRIGger<hw>:FPSWeep:SOURce.....	1071
:TRIGger<hw>:FSWeep:SOURce.....	1069
:TRIGger<hw>:FSWeep[:IMMediate].....	1071
:TRIGger<hw>:LFFSweep.....	1072
:TRIGger<hw>:LFFSweep:IMMediate.....	1071
:TRIGger<hw>:LFFSweep:SOURce.....	1069
:TRIGger<hw>:PSWeep:SOURce.....	1069
:TRIGger<hw>:PSWeep[:IMMediate].....	1071
:TRIGger<hw>[:SWEEP]:SOURce.....	1069
:TRIGger<hw>[:SWEEP][:IMMediate].....	1071
:UNIT:ANGLE.....	1072
:UNIT:POWer.....	1072
:UNIT:VELocity.....	1073
[:SOURce]:BB:GRAPhics:ADD.....	929
[:SOURce]:BB:GRAPhics:CLOSe.....	929
[:SOURce]:BB:GRAPhics:FFTFscale.....	931
[:SOURce]:BB:GRAPhics:FFTLen.....	930
[:SOURce]:BB:GRAPhics:SOURce.....	930
[:SOURce]:BB:IMPairment:DIGital:DELay.....	924
[:SOURce]:BB:IMPairment:DIGital:IQRatio[:MAGNitude].....	925
[:SOURce]:BB:IMPairment:DIGital:LEAKage:I.....	926
[:SOURce]:BB:IMPairment:DIGital:LEAKage:Q.....	926
[:SOURce]:BB:IMPairment:DIGital:POFFset.....	927
[:SOURce]:BB:IMPairment:DIGital:QUADrature[:ANGLE].....	926
[:SOURce]:BB:IMPairment:DIGital:SKEW.....	927
[:SOURce]:BB:IMPairment:DIGital:STATe.....	927
[:SOURce]:BB:IMPairment:IQOutput<ch>:DELay.....	924
[:SOURce]:BB:IMPairment:IQOutput<ch>:IQRatio[:MAGNitude].....	925
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:I.....	926
[:SOURce]:BB:IMPairment:IQOutput<ch>:LEAKage:Q.....	926
[:SOURce]:BB:IMPairment:IQOutput<ch>:POFFset.....	927
[:SOURce]:BB:IMPairment:IQOutput<ch>:QUADrature[:ANGLE].....	926
[:SOURce]:BB:IMPairment:IQOutput<ch>:SKEW.....	927
[:SOURce]:BB:IMPairment:IQOutput<ch>:STATe.....	927
[:SOURce]:BB:IMPairment:RF<ch>:DELay.....	924



[SOURce]:BB:IMPairment:RF<ch>:IQRatio[:MAGNitude].....	925
[SOURce]:BB:IMPairment:RF<ch>:LEAKage:I.....	926
[SOURce]:BB:IMPairment:RF<ch>:LEAKage:Q.....	926
[SOURce]:BB:IMPairment:RF<ch>:POFFset.....	927
[SOURce]:BB:IMPairment:RF<ch>:QUADrature[:ANGLE].....	926
[SOURce]:BB:IMPairment:RF<ch>:SKEW.....	927
[SOURce]:BB:IMPairment:RF<ch>:STATe.....	927
[SOURce]:CORRection:CSET:CATalog?.....	937
[SOURce]:CORRection:CSET:DELeTe.....	937
[SOURce]:INPut:TRIGger:SLOPe.....	951
[SOURce]:INPut:USER:CLOCK:IMPedance.....	783
[SOURce]:INPut:USER:CLOCK:LEVel.....	782
[SOURce]:INPut:USER:CLOCK:SLOPe.....	783
[SOURce]:INPut:USER:PULM:LEVel.....	782
[SOURce]:INPut:USER:TRIGger:IMPedance.....	783
[SOURce]:INPut:USER:TRIGger:LEVel.....	782
[SOURce]:INPut:USER:TRIGger:SLOPe.....	783
[SOURce]:INPut:USER<ch>:DIRection.....	780
[SOURce]:INPut:USER<ch>:SIGNal.....	780
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWER:LEVel.....	963
[SOURce]:IQ:OUTPut:DIGital:BBMM<ch>:CHANnel<st0>:POWER:PEP.....	963
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:NAME.....	965
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:SRATe.....	965
[SOURce]:IQ:OUTPut:DIGital:CHANnel<st0>:STATe.....	965
[SOURce]:IQ:OUTPut:DIGital:GDELay:CSTate.....	962
[SOURce]:IQ:OUTPut:DIGital:POWER:VIA.....	963
[SOURce]:IQ:OUTPut:DIGital:SRATe:MAX?.....	965
[SOURce]:IQ:OUTPut:DIGital:SRATe:SUM?.....	965
[SOURce]:LFOutput:OFFSet.....	971
[SOURce]:LFOutput:SIMPedance.....	972
[SOURce]:LFOutput:VOLTagE.....	972
[SOURce]:LFOutput<ch>:BANDwidth?.....	968
[SOURce]:LFOutput<ch>:FREQuency.....	969
[SOURce]:LFOutput<ch>:INTErnal:VOLTagE.....	971
[SOURce]:LFOutput<ch>:SOURce.....	972
[SOURce]:LFOutput<ch>:SOURce:PATH.....	972
[SOURce]:LFOutput<ch>[:STATe].....	971
[SOURce]:OCCupy:OPTion.....	994
[SOURce]:OCCupy:OPTion:CATalog?.....	994
[SOURce]:OCCupy:OPTion:RENew<ch>.....	995
[SOURce]:PM<ch>[:DEViation].....	806
[SOURce]:POWER:WIGNore.....	1011
[SOURce]:PULM[:INTErnal][:TRAIIn]:TRIGger:IMMediate.....	809
[SOURce]:ROSCillator:EXTernal:FREQuency.....	1013
[SOURce]:ROSCillator:EXTernal:FREQuency:VARiable.....	1014
[SOURce]:ROSCillator:EXTernal:MLRange?.....	1014
[SOURce]:ROSCillator:EXTernal:NSBandwidth?.....	1015
[SOURce]:ROSCillator:EXTernal:RFOF[:STATe].....	1013
[SOURce]:ROSCillator:EXTernal:SBANDwidth.....	1014
[SOURce]:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE.....	1015



[SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	1015
[SOURce]:ROSCillator:PRESet.....	1013
[SOURce]:ROSCillator:SOURce.....	1013
[SOURce]:ROSCillator[:INteRnal]:ADJust:VALue.....	1016
[SOURce]:ROSCillator[:INteRnal]:ADJust[:STATe].....	1016
[SOURce<hw>]:AM:DEPTTh:SUM.....	795
[SOURce<hw>]:AM:DEVIation:MODE.....	796
[SOURce<hw>]:AM:RATio.....	796
[SOURce<hw>]:AM<ch>:SENSitivity.....	796
[SOURce<hw>]:AM<ch>:SOURce.....	795
[SOURce<hw>]:AM<ch>:STATe.....	794
[SOURce<hw>]:AM<ch>[:DEPTTh].....	795
[SOURce<hw>]:AWGN:BRATe.....	920
[SOURce<hw>]:AWGN:BWIDth.....	919
[SOURce<hw>]:AWGN:BWIDth:NOISe?.....	919
[SOURce<hw>]:AWGN:BWIDth:RATio.....	919
[SOURce<hw>]:AWGN:CNRatio.....	921
[SOURce<hw>]:AWGN:DISP:MODE.....	920
[SOURce<hw>]:AWGN:ENRatio.....	921
[SOURce<hw>]:AWGN:FREQuency:CENTer:OFFSet.....	923
[SOURce<hw>]:AWGN:FREQuency:RESult?.....	923
[SOURce<hw>]:AWGN:FREQuency:TARGet.....	923
[SOURce<hw>]:AWGN:MODE.....	918
[SOURce<hw>]:AWGN:POWer:CARRier.....	921
[SOURce<hw>]:AWGN:POWer:MODE.....	920
[SOURce<hw>]:AWGN:POWer:NOISe.....	921
[SOURce<hw>]:AWGN:POWer:NOISe:TOTal?.....	922
[SOURce<hw>]:AWGN:POWer:RMODE.....	920
[SOURce<hw>]:AWGN:POWer:SUM:PEP?.....	922
[SOURce<hw>]:AWGN:POWer:SUM?.....	922
[SOURce<hw>]:AWGN:STATe.....	918
[SOURce<hw>]:BB:ARBitrary:CLOCK.....	865
[SOURce<hw>]:BB:ARBitrary:CLOCK:SOURce.....	898
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:COUNT.....	876
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:MODE.....	876
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:SPACing.....	876
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:CONFLict?.....	882
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:DELay.....	881
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FILE.....	882
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FREQuency.....	880
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:PHASe.....	881
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:POWer.....	881
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:STATe.....	880
[SOURce<hw>]:BB:ARBitrary:MCARrier:CFACTOR:MODE.....	877
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CFACTOR.....	877
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CUTOFF.....	878
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping[:STATe].....	878
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOAD.....	879
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOCK?.....	879
[SOURce<hw>]:BB:ARBitrary:MCARrier:CREate.....	880



[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELAy:STEP.....	884
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELAy[:STARt].....	884
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:EXECute.....	885
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:FILE.....	885
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe:STEP.....	883
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe[:STARt].....	884
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWEr:STEP.....	883
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWEr[:STARt].....	883
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STARt.....	882
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STATe.....	882
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STOP.....	882
[SOURce<hw>]:BB:ARBitrary:MCARrier:OFILe.....	879
[SOURce<hw>]:BB:ARBitrary:MCARrier:POWEr:REFerence.....	879
[SOURce<hw>]:BB:ARBitrary:MCARrier:PRESet.....	875
[SOURce<hw>]:BB:ARBitrary:MCARrier:SAMPles?.....	876
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:CATalog?.....	875
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:LOAD.....	875
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE.....	875
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME.....	877
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME:MODE.....	878
[SOURce<hw>]:BB:ARBitrary:NOTCh.....	886
[SOURce<hw>]:BB:ARBitrary:NOTCh:APPLy.....	888
[SOURce<hw>]:BB:ARBitrary:NOTCh:CLOCK?.....	886
[SOURce<hw>]:BB:ARBitrary:NOTCh:COUNt.....	887
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth:RELative.....	888
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:BWIDth[:ABSolute].....	887
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:FREQuency:OFFSet.....	887
[SOURce<hw>]:BB:ARBitrary:NOTCh<ch>:STATe.....	887
[SOURce<hw>]:BB:ARBitrary:PRAMP[:STATe].....	858
[SOURce<hw>]:BB:ARBitrary:PRESet.....	857
[SOURce<hw>]:BB:ARBitrary:SIGNAL:TYPE.....	858
[SOURce<hw>]:BB:ARBitrary:STATe.....	857
[SOURce<hw>]:BB:ARBitrary:TRIGger:ARM:EXECute.....	893
[SOURce<hw>]:BB:ARBitrary:TRIGger:DELAy:UNIT.....	894
[SOURce<hw>]:BB:ARBitrary:TRIGger:EXECute.....	893
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DELAy.....	897
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DINSec?.....	897
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:MODE.....	895
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:OFFTime.....	896
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:ONTTime.....	896
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PATtern.....	896
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:DIVider.....	896
[SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	897
[SOURce<hw>]:BB:ARBitrary:TRIGger:PTIME?.....	893
[SOURce<hw>]:BB:ARBitrary:TRIGger:RMODE?.....	890
[SOURce<hw>]:BB:ARBitrary:TRIGger:SLENGth.....	892
[SOURce<hw>]:BB:ARBitrary:TRIGger:SLUNit.....	892
[SOURce<hw>]:BB:ARBitrary:TRIGger:SMODE.....	870
[SOURce<hw>]:BB:ARBitrary:TRIGger:SOURce.....	890
[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:DATE.....	891



[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME:TIME.....	891
[SOURce<hw>]:BB:ARBitrary:TRIGger:TIME[:STATE].....	892
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXternal]:DELay.....	894
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXternal]:INHibit.....	895
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXternal]:RDELay?.....	895
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXternal]:SYNChronize:OUTPut.....	893
[SOURce<hw>]:BB:ARBitrary:TRIGger[:EXternal]:TDELay.....	894
[SOURce<hw>]:BB:ARBitrary:TSIGnal:AWGN:CREate.....	862
[SOURce<hw>]:BB:ARBitrary:TSIGnal:AWGN:SAMPles.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:CREate.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:CREate:NAMed.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:I.....	859
[SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:Q.....	859
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:AMPLitude.....	859
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:CREate.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:CREate:NAMed.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:FREQuency.....	859
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:OFFSet.....	859
[SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:SAMPles.....	860
[SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:CREate.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:CREate:NAMed.....	861
[SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:FREQuency.....	860
[SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:PHASe.....	860
[SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:SAMPles.....	861
[SOURce<hw>]:BB:ARBitrary:WAVEform:CATalog:LENGth?.....	863
[SOURce<hw>]:BB:ARBitrary:WAVEform:CATalog?.....	862
[SOURce<hw>]:BB:ARBitrary:WAVEform:CLOCK.....	866
[SOURce<hw>]:BB:ARBitrary:WAVEform:DATA.....	864
[SOURce<hw>]:BB:ARBitrary:WAVEform:DELeTe.....	863
[SOURce<hw>]:BB:ARBitrary:WAVEform:FREe?.....	863
[SOURce<hw>]:BB:ARBitrary:WAVEform:POINts?.....	864
[SOURce<hw>]:BB:ARBitrary:WAVEform:SELeCt.....	863
[SOURce<hw>]:BB:ARBitrary:WAVEform:TAG?.....	865
[SOURce<hw>]:BB:ARBitrary:WSEGment:CLOAd.....	869
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:BLANk:APPend.....	871
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:CATalog?.....	871
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:CLOCK.....	872
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:CLOCK:MODE.....	872
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:COMMeNt.....	872
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:DELeTe.....	873
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:LEVel[:MODE].....	872
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:MARKer:ESEGment.....	870
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:MARKer:FSEGment.....	870
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:MARKer:MODE.....	870
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:OFILe.....	873
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:SEGMeNt:APPend.....	873
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:SEGMeNt:CATalog?.....	868
[SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:SELeCt.....	873
[SOURce<hw>]:BB:ARBitrary:WSEGment:CREate.....	869
[SOURce<hw>]:BB:ARBitrary:WSEGment:LMODE.....	868



[SOURce<hw>]:BB:ARBitrary:WSEgment:NAME?	867
[SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT	867
[SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT:EXECute	867
[SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT:SOURce	868
[SOURce<hw>]:BB:ARBitrary:WSEgment:SEquence:APPend	869
[SOURce<hw>]:BB:ARBitrary:WSEgment:SEquence:SElect	868
[SOURce<hw>]:BB:ARBitrary:WSEgment?	866
[SOURce<hw>]:BB:ARBitrary[:TRIGger]:SEquence	890
[SOURce<hw>]:BB:CFACtor?	819
[SOURce<hw>]:BB:DM:APSK16:GAMMa	831
[SOURce<hw>]:BB:DM:APSK32:GAMMa	831
[SOURce<hw>]:BB:DM:AQPSk:ANGLE	829
[SOURce<hw>]:BB:DM:ASK:DEPTH	829
[SOURce<hw>]:BB:DM:CLISt:CATalog?	842
[SOURce<hw>]:BB:DM:CLISt:CoPY	845
[SOURce<hw>]:BB:DM:CLISt:DATA	845
[SOURce<hw>]:BB:DM:CLISt:DELeTe	843
[SOURce<hw>]:BB:DM:CLISt:FREE?	843
[SOURce<hw>]:BB:DM:CLISt:POINts?	844
[SOURce<hw>]:BB:DM:CLISt:SElect	842
[SOURce<hw>]:BB:DM:CLISt:TAg?	847
[SOURce<hw>]:BB:DM:CLOCK:SOURce	841
[SOURce<hw>]:BB:DM:CODing	828
[SOURce<hw>]:BB:DM:DLISt:CATalog?	842
[SOURce<hw>]:BB:DM:DLISt:CoPY	845
[SOURce<hw>]:BB:DM:DLISt:DATA	846
[SOURce<hw>]:BB:DM:DLISt:DATA:APPend	847
[SOURce<hw>]:BB:DM:DLISt:DELeTe	843
[SOURce<hw>]:BB:DM:DLISt:FREE?	844
[SOURce<hw>]:BB:DM:DLISt:POINts	844
[SOURce<hw>]:BB:DM:DLISt:SElect	842
[SOURce<hw>]:BB:DM:DLISt:TAg?	847
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:GAUSSs	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:LOWPass	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:CoSine:BANDwidth	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:CoSine[:ROLLoff]	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:GAUSSs	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASSs	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASSEVM	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:PGAuss	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:RCOSine	827
[SOURce<hw>]:BB:DM:FILTer:PARAmeter:SPHase	827
[SOURce<hw>]:BB:DM:FILTer:TYPE	827
[SOURce<hw>]:BB:DM:FLISt:CATalog?	842
[SOURce<hw>]:BB:DM:FLISt:DELeTe	843
[SOURce<hw>]:BB:DM:FLISt:FREE?	843
[SOURce<hw>]:BB:DM:FLISt:POINts?	845
[SOURce<hw>]:BB:DM:FLISt:SElect	842
[SOURce<hw>]:BB:DM:FORMat	829



[SOURce<hw>]:BB:DM:FSK:DEViation.....	830
[SOURce<hw>]:BB:DM:FSK:VARIABLE:SYMBOL<ch0>:DEViation.....	830
[SOURce<hw>]:BB:DM:FSK:VARIABLE:TYPE.....	830
[SOURce<hw>]:BB:DM:MLIST:CATalog?.....	842
[SOURce<hw>]:BB:DM:MLIST:DElete.....	843
[SOURce<hw>]:BB:DM:MLIST:FREE?.....	844
[SOURce<hw>]:BB:DM:MLIST:POINTs?.....	845
[SOURce<hw>]:BB:DM:MLIST:SElect.....	842
[SOURce<hw>]:BB:DM:PATtern.....	824
[SOURce<hw>]:BB:DM:PRAMP:ATTenuation.....	833
[SOURce<hw>]:BB:DM:PRAMP:BBONLY[:STATe].....	833
[SOURce<hw>]:BB:DM:PRAMP:FDElay.....	833
[SOURce<hw>]:BB:DM:PRAMP:RDElay.....	833
[SOURce<hw>]:BB:DM:PRAMP:SHApe.....	832
[SOURce<hw>]:BB:DM:PRAMP:SOURce.....	832
[SOURce<hw>]:BB:DM:PRAMP:TIME.....	832
[SOURce<hw>]:BB:DM:PRAMP[:STATe].....	833
[SOURce<hw>]:BB:DM:PRBS[:LENGth].....	825
[SOURce<hw>]:BB:DM:PRESet.....	823
[SOURce<hw>]:BB:DM:SETTing:CATalog?.....	825
[SOURce<hw>]:BB:DM:SETTing:DElete.....	826
[SOURce<hw>]:BB:DM:SETTing:LOAD.....	826
[SOURce<hw>]:BB:DM:SETTing:STORe.....	826
[SOURce<hw>]:BB:DM:SOURce.....	824
[SOURce<hw>]:BB:DM:SRATe.....	823
[SOURce<hw>]:BB:DM:STANdard.....	824
[SOURce<hw>]:BB:DM:STANdard:ULIST:CATalog?.....	825
[SOURce<hw>]:BB:DM:STANdard:ULIST:DElete.....	826
[SOURce<hw>]:BB:DM:STANdard:ULIST:LOAD.....	826
[SOURce<hw>]:BB:DM:STANdard:ULIST:STORe.....	826
[SOURce<hw>]:BB:DM:STATe.....	823
[SOURce<hw>]:BB:DM:SWITChing:STATe.....	831
[SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute.....	837
[SOURce<hw>]:BB:DM:TRIGger:DElay:UNIT.....	837
[SOURce<hw>]:BB:DM:TRIGger:EXECute.....	837
[SOURce<hw>]:BB:DM:TRIGger:EXTeRnal:SYNChronize:OUTPut.....	837
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DElay.....	841
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE.....	839
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime.....	840
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime.....	840
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATtern.....	840
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider.....	840
[SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	841
[SOURce<hw>]:BB:DM:TRIGger:RMODE?.....	835
[SOURce<hw>]:BB:DM:TRIGger:SENGth.....	835
[SOURce<hw>]:BB:DM:TRIGger:SOURce.....	834
[SOURce<hw>]:BB:DM:TRIGger:TIME:DATE.....	835
[SOURce<hw>]:BB:DM:TRIGger:TIME:TIME.....	836
[SOURce<hw>]:BB:DM:TRIGger:TIME[:STATe].....	836
[SOURce<hw>]:BB:DM:TRIGger[:EXTeRnal]:DElay.....	838



[SOURce<hw>]:BB:DM:TRIGger[:EXternal]:INHibit.....	839
[SOURce<hw>]:BB:DM:TRIGger[:EXternal]:RDElay?.....	838
[SOURce<hw>]:BB:DM:TRIGger[:EXternal]:TDElay.....	838
[SOURce<hw>]:BB:DM[:TRIGger]:SEQuence.....	834
[SOURce<hw>]:BB:EUTRa:NOTCh.....	886
[SOURce<hw>]:BB:EUTRa:NOTCh:APPLy.....	888
[SOURce<hw>]:BB:EUTRa:NOTCh:CLOCK?.....	886
[SOURce<hw>]:BB:EUTRa:NOTCh:COUNT.....	887
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth:RELative.....	888
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:BWIDth[:ABSolute].....	887
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:FREQuency:OFFSet.....	887
[SOURce<hw>]:BB:EUTRa:NOTCh<ch>:STATe.....	887
[SOURce<hw>]:BB:FOFFset.....	818
[SOURce<hw>]:BB:GRAPhics:MODE.....	928
[SOURce<hw>]:BB:GRAPhics:SRATe:MODE.....	929
[SOURce<hw>]:BB:GRAPhics:SRATe:USER.....	929
[SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce.....	931
[SOURce<hw>]:BB:IMPairment:OPTimization:MODE.....	928
[SOURce<hw>]:BB:IQGain.....	953
[SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	903
[SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe.....	906
[SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer.....	907
[SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe.....	905
[SOURce<hw>]:BB:MCCW:CARRier:PHASe.....	906
[SOURce<hw>]:BB:MCCW:CARRier:POWer.....	907
[SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	904
[SOURce<hw>]:BB:MCCW:CARRier:STATe.....	905
[SOURce<hw>]:BB:MCCW:CFACTOR.....	904
[SOURce<hw>]:BB:MCCW:CFACTOR:ACTual?.....	905
[SOURce<hw>]:BB:MCCW:CFACTOR:MODE.....	904
[SOURce<hw>]:BB:MCCW:CLOCK:SOURce.....	915
[SOURce<hw>]:BB:MCCW:CLOCK?.....	904
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute.....	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP.....	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START].....	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP.....	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START].....	908
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:START.....	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe.....	909
[SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP.....	909
[SOURce<hw>]:BB:MCCW:PRESet.....	903
[SOURce<hw>]:BB:MCCW:STATe.....	903
[SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute.....	912
[SOURce<hw>]:BB:MCCW:TRIGger:EXECute.....	912
[SOURce<hw>]:BB:MCCW:TRIGger:EXTeRnal:SYNChronize:OUTPut.....	913
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DElay.....	915
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE.....	914
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime.....	914
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime.....	914
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATTeRn.....	914



[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider.....	915
[SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	915
[SOURce<hw>]:BB:MCCW:TRIGger:RMODE?.....	910
[SOURce<hw>]:BB:MCCW:TRIGger:SLENgth.....	912
[SOURce<hw>]:BB:MCCW:TRIGger:SOURce.....	910
[SOURce<hw>]:BB:MCCW:TRIGger:TIME:DATE.....	911
[SOURce<hw>]:BB:MCCW:TRIGger:TIME:TIME.....	911
[SOURce<hw>]:BB:MCCW:TRIGger:TIME[:STATE].....	912
[SOURce<hw>]:BB:MCCW:TRIGger[:EXTerナル<ch>]:DELay.....	913
[SOURce<hw>]:BB:MCCW:TRIGger[:EXTerナル<ch>]:INHibit.....	913
[SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence.....	910
[SOURce<hw>]:BB:OFDM:NOTCh.....	886
[SOURce<hw>]:BB:OFDM:NOTCh:APPLy.....	888
[SOURce<hw>]:BB:OFDM:NOTCh:CLOCK?.....	886
[SOURce<hw>]:BB:OFDM:NOTCh:COUNt.....	887
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth:RELative.....	888
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:BWIDth[:ABSolute].....	887
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:FREQuency:OFFSet.....	887
[SOURce<hw>]:BB:OFDM:NOTCh<ch>:STATe.....	887
[SOURce<hw>]:BB:POFFset.....	819
[SOURce<hw>]:BB:POWer:PEAK?.....	819
[SOURce<hw>]:BB:POWer:RMS?.....	820
[SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?.....	932
[SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEgment?.....	932
[SOURce<hw>]:BB:PROGress:MCODer?.....	932
[SOURce<hw>]:BB:ROUte.....	819
[SOURce<hw>]:BBIN:ALEVel:EXECute.....	790
[SOURce<hw>]:BBIN:CDEvice?.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:BB:STATe.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:NAME.....	786
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:CFACTOR.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:PEAK.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:POWer:RMS.....	787
[SOURce<hw>]:BBIN:CHANnel<ch0>:SRATe.....	788
[SOURce<hw>]:BBIN:DIGital:ASETting:STATe.....	789
[SOURce<hw>]:BBIN:DIGital:INTerface.....	786
[SOURce<hw>]:BBIN:FOFFset.....	818
[SOURce<hw>]:BBIN:MODE.....	788
[SOURce<hw>]:BBIN:MPERiod.....	790
[SOURce<hw>]:BBIN:POFFset.....	818
[SOURce<hw>]:BBIN:POWer:CFACTOR.....	790
[SOURce<hw>]:BBIN:POWer:PEAK.....	791
[SOURce<hw>]:BBIN:POWer:RMS?.....	791
[SOURce<hw>]:BBIN:ROUte.....	819
[SOURce<hw>]:BBIN:SRATe:MAX?.....	789
[SOURce<hw>]:BBIN:SRATe:SOURce.....	788
[SOURce<hw>]:BBIN:SRATe:SUM?.....	788
[SOURce<hw>]:BBIN:SRATe[:ACTual]?.....	789
[SOURce<hw>]:BBIN:STATe.....	785
[SOURce<hw>]:COMBined:FREQuency:START.....	1025



[SOURce<hw>]:COMBined:FREQuency:STOP.....	1025
[SOURce<hw>]:COMBined:POWer:START.....	1025
[SOURce<hw>]:COMBined:POWer:STOP.....	1026
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency.....	935
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?.....	935
[SOURce<hw>]:CORRection:CSET:DATA:POWer.....	935
[SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?.....	935
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe.....	935
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe.....	937
[SOURce<hw>]:CORRection:CSET[:SElect].....	936
[SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?.....	938
[SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension.....	938
[SOURce<hw>]:CORRection:DEXChange:AFILe:SElect.....	938
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn.....	938
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal.....	939
[SOURce<hw>]:CORRection:DEXChange:EXECute.....	939
[SOURce<hw>]:CORRection:DEXChange:MODE.....	939
[SOURce<hw>]:CORRection:DEXChange:SElect.....	939
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth:MODE.....	941
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:BANDwidth[:VALue].....	941
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:HOLD[:STATe].....	941
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:LOCAl.....	941
[SOURce<hw>]:CORRection:FRESponse:RF:OPTimization:MODE.....	940
[SOURce<hw>]:CORRection:VALue?.....	936
[SOURce<hw>]:CORRection:ZERoing:STATe.....	936
[SOURce<hw>]:CORRection[:STATe].....	937
[SOURce<hw>]:DM:FILTer:PARAmeter.....	828
[SOURce<hw>]:FM:DEViation:MODE.....	800
[SOURce<hw>]:FM:DEViation:SUM.....	800
[SOURce<hw>]:FM:MODE.....	801
[SOURce<hw>]:FM:RATIo.....	801
[SOURce<hw>]:FM:SENSitivity?.....	801
[SOURce<hw>]:FM<ch>:SOURce.....	799
[SOURce<hw>]:FM<ch>:STATe.....	799
[SOURce<hw>]:FM<ch>[:DEViation].....	799
[SOURce<hw>]:FREQuency:CENTer.....	948
[SOURce<hw>]:FREQuency:LOSCillator:INPut:FREQuency?.....	944
[SOURce<hw>]:FREQuency:LOSCillator:MODE.....	944
[SOURce<hw>]:FREQuency:LOSCillator:OUTPut:FREQuency?.....	944
[SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe.....	945
[SOURce<hw>]:FREQuency:MANual.....	947
[SOURce<hw>]:FREQuency:MODE.....	945
[SOURce<hw>]:FREQuency:MULTiplier.....	947
[SOURce<hw>]:FREQuency:OFFSet.....	948
[SOURce<hw>]:FREQuency:SPAN.....	949
[SOURce<hw>]:FREQuency:START.....	949
[SOURce<hw>]:FREQuency:STEP:MODE.....	950
[SOURce<hw>]:FREQuency:STEP[:INCRement].....	950
[SOURce<hw>]:FREQuency:STOP.....	949
[SOURce<hw>]:FREQuency[:CW FIXed].....	946



[SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	947
[SOURce<hw>]:INPut:MODext:COUPling.....	951
[SOURce<hw>]:INPut:MODext:IMPedance<ch>.....	951
[SOURce<hw>]:IQ:CREStfactor.....	953
[SOURce<hw>]:IQ:EMIXer:MODE.....	953
[SOURce<hw>]:IQ:GAIN.....	953
[SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude].....	925
[SOURce<hw>]:IQ:IMPairment:LEAKage:I.....	926
[SOURce<hw>]:IQ:IMPairment:LEAKage:Q.....	926
[SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLe].....	926
[SOURce<hw>]:IQ:IMPairment[:STATe].....	927
[SOURce<hw>]:IQ:OUTPut[:ANALog]:POWer:ATTDigital.....	959
[SOURce<hw>]:IQ:OUTPut:ANALog:STATe.....	955
[SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?.....	962
[SOURce<hw>]:IQ:OUTPut:DIGital:INTERface.....	961
[SOURce<hw>]:IQ:OUTPut:DIGital:PON.....	964
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:LEVel.....	963
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:PEP.....	963
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP:MODE.....	964
[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement].....	964
[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe.....	962
[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce.....	961
[SOURce<hw>]:IQ:OUTPut:DIGital:STATe.....	961
[SOURce<hw>]:IQ:OUTPut:LEVel.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe].....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q.....	958
[SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I.....	959
[SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q.....	959
[SOURce<hw>]:IQ:OUTPut[:ANALog]:PRESet.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:CATalog?.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:DELeTe.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:LOAD.....	957
[SOURce<hw>]:IQ:OUTPut[:ANALog]:SETTing:STORe.....	956
[SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE.....	957
[SOURce<hw>]:IQ:SOURce.....	952
[SOURce<hw>]:IQ:STATe.....	952
[SOURce<hw>]:IQ:SWAP[:STATe].....	954
[SOURce<hw>]:IQ:WBSTate.....	954
[SOURce<hw>]:LFOutput:FREQuency:MANual.....	969
[SOURce<hw>]:LFOutput:FREQuency:MODE.....	970
[SOURce<hw>]:LFOutput:FREQuency:START.....	970
[SOURce<hw>]:LFOutput:FREQuency:STOP.....	970
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELl.....	976
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXEcute.....	976
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE.....	976
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts.....	977
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace.....	977
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNing?.....	977



[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHApe.....	978
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	978
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	978
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear].....	979
[SOURce<hw>]:LFOutput<ch>:PERiod?.....	969
[SOURce<hw>]:LFOutput<ch>:SHApe.....	973
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYCLe.....	973
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod.....	973
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTh.....	974
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:FALL.....	974
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:HIGH.....	974
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:PERiod.....	974
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:RISE.....	975
[SOURce<hw>]:LFOutput<ch>:SHApe:TRLangle:PERiod.....	975
[SOURce<hw>]:LFOutput<ch>:SHApe:TRLangle:RISE.....	975
[SOURce<hw>]:LIST:CATalog?.....	987
[SOURce<hw>]:LIST:DELeTe.....	988
[SOURce<hw>]:LIST:DELeTe:ALL.....	988
[SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?.....	990
[SOURce<hw>]:LIST:DEXChange:AFILe:EXTension.....	990
[SOURce<hw>]:LIST:DEXChange:AFILe:SELeCt.....	990
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn.....	991
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal.....	991
[SOURce<hw>]:LIST:DEXChange:EXECute.....	990
[SOURce<hw>]:LIST:DEXChange:MODE.....	991
[SOURce<hw>]:LIST:DEXChange:SELeCt.....	991
[SOURce<hw>]:LIST:DWELI.....	982
[SOURce<hw>]:LIST:DWELI:LIST.....	983
[SOURce<hw>]:LIST:DWELI:LIST:POINts?.....	983
[SOURce<hw>]:LIST:DWELI:MODE.....	982
[SOURce<hw>]:LIST:FREE?.....	988
[SOURce<hw>]:LIST:FREQuency.....	983
[SOURce<hw>]:LIST:FREQuency:POINts?.....	984
[SOURce<hw>]:LIST:INDeX.....	984
[SOURce<hw>]:LIST:INDeX:STARt.....	984
[SOURce<hw>]:LIST:INDeX:STOP.....	984
[SOURce<hw>]:LIST:MODE.....	985
[SOURce<hw>]:LIST:POWer.....	985
[SOURce<hw>]:LIST:POWer:POINts?.....	986
[SOURce<hw>]:LIST:RESeT.....	989
[SOURce<hw>]:LIST:RUINg?.....	987
[SOURce<hw>]:LIST:SELeCt.....	989
[SOURce<hw>]:LIST:TRIGGer:EXECute.....	986
[SOURce<hw>]:LIST:TRIGGer:SOURce.....	986
[SOURce<hw>]:MODulation[:ALL][:STATe].....	792
[SOURce<hw>]:NOISe:BANDwidth BWIDTh.....	992
[SOURce<hw>]:NOISe:DISTriBution.....	992
[SOURce<hw>]:NOISe:LEVel:RELative?.....	993
[SOURce<hw>]:NOISe:LEVel[:ABSolute]?.....	993
[SOURce<hw>]:PGENerator:OUTPut:POLarity.....	995



[SOURce<hw>]:PGeNerator:OUTPut[:STATe].....	996
[SOURce<hw>]:PGeNerator:STATe.....	996
[SOURce<hw>]:PHASe.....	997
[SOURce<hw>]:PHASe:REFerence.....	997
[SOURce<hw>]:PM:DEVIation:MODE.....	805
[SOURce<hw>]:PM:DEVIation:SUM.....	805
[SOURce<hw>]:PM:MODE.....	804
[SOURce<hw>]:PM:RATio.....	805
[SOURce<hw>]:PM:SENSitivity?.....	806
[SOURce<hw>]:PM<ch>:SOURce.....	804
[SOURce<hw>]:PM<ch>:STATe.....	803
[SOURce<hw>]:POWer:ALC:DSensitivity.....	1000
[SOURce<hw>]:POWer:ALC:MODE?.....	999
[SOURce<hw>]:POWer:ALC:SLEVel.....	1000
[SOURce<hw>]:POWer:ALC:SONCe.....	1000
[SOURce<hw>]:POWer:ALC[:STATe].....	999
[SOURce<hw>]:POWer:ATTenuation:DIGital.....	1001
[SOURce<hw>]:POWer:ATTenuation:RFOff:MODE.....	1001
[SOURce<hw>]:POWer:EMF:STATe.....	1001
[SOURce<hw>]:POWer:LBEHaviour.....	1002
[SOURce<hw>]:POWer:LIMit[:AMPLitude].....	1002
[SOURce<hw>]:POWer:MANual.....	1002
[SOURce<hw>]:POWer:MODE.....	1003
[SOURce<hw>]:POWer:PEP?.....	1003
[SOURce<hw>]:POWer:POWer.....	1004
[SOURce<hw>]:POWer:RANGe:LOWer?.....	1010
[SOURce<hw>]:POWer:RANGe:UPPer?.....	1010
[SOURce<hw>]:POWer:SPC:CRANGe.....	1004
[SOURce<hw>]:POWer:SPC:DELay.....	1005
[SOURce<hw>]:POWer:SPC:MEASure.....	1005
[SOURce<hw>]:POWer:SPC:MODE.....	1005
[SOURce<hw>]:POWer:SPC:PEAK.....	1006
[SOURce<hw>]:POWer:SPC:SElect.....	1006
[SOURce<hw>]:POWer:SPC:SINGle.....	1006
[SOURce<hw>]:POWer:SPC:STATe.....	1006
[SOURce<hw>]:POWer:SPC:TARGet.....	1007
[SOURce<hw>]:POWer:SPC:WARning?.....	1007
[SOURce<hw>]:POWer:STARt.....	1004
[SOURce<hw>]:POWer:STEP:MODE.....	1007
[SOURce<hw>]:POWer:STEP[:INCRement].....	1008
[SOURce<hw>]:POWer:STOP.....	1004
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet.....	1008
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL.....	1009
[SOURce<hw>]:POWer[:LEVel][:IMMediate]:REFLevel.....	1010
[SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude].....	1009
[SOURce<hw>]:PULM:DELay.....	809
[SOURce<hw>]:PULM:DOUBle:DELay.....	810
[SOURce<hw>]:PULM:DOUBle:STATe.....	810
[SOURce<hw>]:PULM:DOUBle:WIDTh.....	810
[SOURce<hw>]:PULM:IMPedance.....	812



[SOURce<hw>]:PULM:MODE.....	808
[SOURce<hw>]:PULM:OUTPut:SYNC[:STATe].....	811
[SOURce<hw>]:PULM:PERiod.....	809
[SOURce<hw>]:PULM:POLarity.....	811
[SOURce<hw>]:PULM:SOURce.....	810
[SOURce<hw>]:PULM:STATe.....	810
[SOURce<hw>]:PULM:TRAIIn:CATalog?.....	813
[SOURce<hw>]:PULM:TRAIIn:DELeTe.....	813
[SOURce<hw>]:PULM:TRAIIn:DEXChange:AFILe:CATalog?.....	816
[SOURce<hw>]:PULM:TRAIIn:DEXChange:AFILe:EXTension.....	816
[SOURce<hw>]:PULM:TRAIIn:DEXChange:AFILe:SELeCt.....	817
[SOURce<hw>]:PULM:TRAIIn:DEXChange:AFILe:SEParator:COLUMn.....	816
[SOURce<hw>]:PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal.....	816
[SOURce<hw>]:PULM:TRAIIn:DEXChange:EXECute.....	817
[SOURce<hw>]:PULM:TRAIIn:DEXChange:MODE.....	815
[SOURce<hw>]:PULM:TRAIIn:DEXChange:SELeCt.....	817
[SOURce<hw>]:PULM:TRAIIn:OFFTime.....	814
[SOURce<hw>]:PULM:TRAIIn:OFFTime:POINts?.....	814
[SOURce<hw>]:PULM:TRAIIn:ONTime.....	814
[SOURce<hw>]:PULM:TRAIIn:ONTime:POINts?.....	814
[SOURce<hw>]:PULM:TRAIIn:REPetition.....	814
[SOURce<hw>]:PULM:TRAIIn:REPetition:POINts?.....	814
[SOURce<hw>]:PULM:TRAIIn:SELeCt.....	815
[SOURce<hw>]:PULM:TRIGger:MODE.....	808
[SOURce<hw>]:PULM:TTYPe.....	811
[SOURce<hw>]:PULM:WIDTh.....	809
[SOURce<hw>]:SWEep:COMBined:COUNT.....	1026
[SOURce<hw>]:SWEep:COMBined:DWELI.....	1026
[SOURce<hw>]:SWEep:COMBined:EXECute.....	1026
[SOURce<hw>]:SWEep:COMBined:MODE.....	1027
[SOURce<hw>]:SWEep:COMBined:RETRace.....	1027
[SOURce<hw>]:SWEep:COMBined:SHAPE.....	1028
[SOURce<hw>]:SWEep:POWer:DWELI.....	1019
[SOURce<hw>]:SWEep:POWer:EXECute.....	1023
[SOURce<hw>]:SWEep:POWer:MODE.....	1020
[SOURce<hw>]:SWEep:POWer:POINts.....	1020
[SOURce<hw>]:SWEep:POWer:RETRace.....	1023
[SOURce<hw>]:SWEep:POWer:RUNNing?.....	1024
[SOURce<hw>]:SWEep:POWer:SHAPE.....	1023
[SOURce<hw>]:SWEep:POWer:SPACing:MODE?.....	1020
[SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic].....	1021
[SOURce<hw>]:SWEep:RESeT[:ALL].....	1028
[SOURce<hw>]:SWEep[:FREQuency]:DWELI.....	1021
[SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:MODE.....	1021
[SOURce<hw>]:SWEep[:FREQuency]:POINts.....	1022
[SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	1024
[SOURce<hw>]:SWEep[:FREQuency]:SHAPE.....	1023
[SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	1022



[SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	1024
[SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	1024
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{BURST LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{CLOCK: frequency}.....	186
{COMMENT: string}.....	184
{CONTROL LENGTH: ControlLength}.....	186
{CONTROL LENGTH: ControlLength}.....	197
{CONTROL LIST WIDTH4-Length: #m0m1...mx...mM-1}.....	195
{COPYRIGHT: string}.....	184
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{CW MODE LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{DATA BITLENGTH: BitLength}.....	196
{DATA LIST-Length: #d0d1...dx...dN-1...}.....	197
{DATE: yyyy-mm-dd;hh:mm:ss}.....	185
{EMPTYTAG-Length: #EmptySequence}.....	187
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{HOP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{LEVATT LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}.....	188
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{MAP LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	190
{MARKER LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	198
{MARKER MODE [#]: GENERATOR}.....	189
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	193
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	193
{MWV_SEGMENT_COUNT: NumOfSeg}.....	192
{MWV_SEGMENT_DURATION: SegDur0, SegDur1, ..., SegDurN-1}.....	192
{MWV_SEGMENT_FILES: "FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	195
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	192
{MWV_SEGMENT_LEVEL_MODE: Mode}.....	194
{MWV_SEGMENT_LEVEL_OFFS: RMSOffs_dBSg0,PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	194
{MWV_SEGMENT_SETTINGS_FILE: SegSettingFilePath}.....	195
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	193
{MWV_SEGMENTx_COMMENT: text}.....	195
{SAMPLES: Samples}.....	189
{TYPE: magic, xxxxxxxx}.....	183
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	191
*CLS.....	698
*ESE.....	698
*ESR?.....	698
*IDN?.....	699
*IST?.....	699
*OPC.....	699



*OPT?	699
*PRE	700
*PSC	700
*RCL	700
*RST	700
*SAV	701
*SRE	701
*STB?	701
*TRG	701
*TST?	702
*WAI	702
DIAGnostic:HUMS:DELeTe:ALL	725
DIAGnostic:HUMS:DEViCe:HISTory:DELeTe:ALL	726
DIAGnostic:HUMS:DEViCe:HISTory?	725
DIAGnostic:HUMS:FORMat	726
DIAGnostic:HUMS:SAVE	726
DIAGnostic:HUMS:STATe	727
DIAGnostic:HUMS:TAGS:ALL?	727
DIAGnostic:HUMS:TAGS:DELeTe	727
DIAGnostic:HUMS:TAGS:DELeTe:ALL	728
DIAGnostic:HUMS:TAGS[:VALue]	728
SYSTem:COMMunicate:REST:ENABle	728
SYSTem:COMMunicate:SNMP:COMMunity:RO	728
SYSTem:COMMunicate:SNMP:COMMunity:RW	729
SYSTem:COMMunicate:SNMP:CONtact	729
SYSTem:COMMunicate:SNMP:LOCation	729
SYSTem:COMMunicate:SNMP:USM:USER	730
SYSTem:COMMunicate:SNMP:USM:USER:ALL?	730
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe	731
SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL	731
SYSTem:COMMunicate:SNMP:VERSion	731



# Index

## Symbols

/var/user directory .....	704
/var/volatile directory .....	704
&GTL .....	676
&LLO .....	676
&NREN .....	676
1xEV-DO .....	84
3GPP FDD .....	84
50 - Extern reference out of range or disconnected .....	1076
140 - This modulation forces other modulations off .....	1076
180 - Adjustment failed .....	1076
182 - Adjustment data missing .....	1076
183 - Adjustment data invalid .....	1076
200 - Cannot access hardware .....	1076
201 - Hardware revision out of date .....	1076
202 - Cannot access the EEPROM .....	1076
203 - Invalid EEPROM data .....	1076
204 - river initialization failed .....	1076
241 - No current list .....	1076
242 - Unknown list type specified .....	1076
261 - Waveform Protected .....	1076
460 - Cannot open the file .....	1076
461 - Cannot write file .....	1076
462 - Cannot read file .....	1077
463 - Filename missing .....	1077
464 - Invalid filename extension .....	1077
465 - File contains invalid data .....	1077

## A

About	
ALC states and their effects .....	399
Attenuator .....	397
Local oscillator .....	316
Power-On/EMF .....	551
Reference oscillator .....	308
UCOR .....	402, 403
Accept	
MCCW .....	258
Security settings .....	603
Accept carrier table .....	258
Access configuration menu	
Graphics .....	447
Accidental trigger	
Avoiding .....	98
Accurate level measurement	
Measurement period .....	468
Active connections	
Remote access .....	640
Active elements .....	73
Add LAN sensor	
NRP sensor mapping .....	431
Add sensor	
NRP sensor mapping .....	431
Add USBTMC sensor	
NRP sensor mapping .....	432
Add, change, delete	
User key action .....	571
Additive noise .....	273
Address	
GPIO interface .....	638

Adjust	
BB input signal .....	491, 493
Display and keyboard .....	548
Display settings .....	547
I/Q modulator .....	294
Keyboard settings .....	547
Adjustment frequency	
Reference oscillator .....	313
Adjustments	
All .....	1098
All delayed .....	1100
Continue .....	1099
Delay settings .....	1099
Information .....	1099
Last full adjustment .....	1098
Settings .....	1098
Shutdown .....	1100
Warm up time .....	1100
Advanced configuration	
LXI .....	657
ALC	
About .....	399
Detector sensitivity .....	401
Sample level .....	402
Settings .....	400
State .....	401
ALC states and their effects .....	399
All packages	
Secure update policy .....	596
Alphanumeric parameters .....	77
AM .....	359
Deviation mode .....	368
Overview .....	393
Ratio .....	369
Subsystem .....	792
Total deviation .....	369
Amplitude modulation .....	368
Depth .....	368
Deviation mode .....	368
Ratio .....	369
Sensitivity .....	368
State .....	364
Subsystem .....	792
Analog modulation	
Options .....	359
Overview .....	392
Signal source .....	360
Analog wideband I/Q input .....	291
Angle alpha	
AQPSK .....	126
Annotation	
Disable amplitude display .....	598
Disable frequency display .....	598
Disable level .....	598
Aperture time	
Power sensors .....	428
Appearance	
Settings .....	550
Setup .....	547
Append	
Blank segment .....	216
Sequencing play list .....	223
Waveform .....	216



Application  
     External digital signal ..... 466  
 Application cards ..... 24  
 Application notes ..... 24  
 Apply  
     Assistant settings ..... 249  
     External analog signal ..... 466  
     External digital signal ..... 466  
     Settings of external RF and I/Q instrument ..... 482  
 Apply and connect  
     Settings of external RF and I/Q instrument ..... 482  
 APSK  
     Code rate ..... 127  
     Gamma ..... 127  
 ARB ..... 66  
     Play list ..... 206  
     Sequencer mode ..... 206  
     Subsystem ..... 848  
     Test generator selftest file ..... 1105  
 ARB multi-carrier  
     Conflict ..... 247  
     Mode ..... 240  
 ARB sequencer mode ..... 207, 219  
 ARbitrary waveform generator ..... 152  
 Arm trigger  
     DM ..... 110  
 Armed\_Auto  
     Common settings ..... 109  
     DM ..... 109  
 Armed\_Retrigger  
     Common settings ..... 109  
     DM ..... 109  
 Arrow keys ..... 41  
 ASK depth ..... 126  
 ATN ..... 1117  
 Attention ..... 1117  
 Attenuation ..... 132  
 Attenuator  
     About ..... 397  
     RF signal ..... 397  
     Settings ..... 397  
 Attenuator settings  
     Level range ..... 398  
     Mode ..... 398  
     RF OFF mode ..... 398  
 Auto  
     Common settings ..... 109  
     DM ..... 109  
 Auto level set ..... 491, 493  
 Auto once  
     Power sensors ..... 428  
     Power viewer ..... 428  
 Automatic level control  
     Detector sensitivity ..... 401  
     Readjust internal switch position ..... 307  
     RF signal ..... 399  
     Sample level ..... 402  
     Settings ..... 400  
     State ..... 401  
 Automation ..... 612  
 Autonegotiation  
     Failed ..... 1079  
 Avahi  
     LAN services ..... 601  
 Average level  
     Power viewer ..... 426  
 Avoiding signal gaps ..... 210

Avoiding wrap-around ..... 210  
 AWGN  
     Additive white Gaussian noise ..... 267  
     Subsystem ..... 916  
 AWGN mode ..... 273  
 AWGN test signal ..... 154  
**B**  
 B x T  
     DM ..... 128  
 Bandwidth  
     Cosine filter ..... 129  
     Modulation input ..... 389  
     Noise generator ..... 390  
 Baseband  
     Channel ..... 490  
     Input ..... 66  
     Output ..... 66  
     Selftest ..... 1103  
 Baseband connection selftest ..... 1102  
 Baseband gain (I/Q)  
     I/Q modulation ..... 293  
 Baseband generator ..... 66  
 Baseband input  
     see BB input ..... 486  
 Baseband only  
     Mandatory setting ..... 132  
 Baseband selftest ..... 1103  
 Baseband signal  
     Shifting quickly in RF domain ..... 265  
 Basic workflow  
     Multi-segment waveform ..... 227  
 Basics  
     Editor ..... 356, 378, 409  
     Export list files ..... 379, 412  
     Fill with sensor list files ..... 411  
     Import list files ..... 379, 412  
 Baud rate  
     RS232 interface ..... 639  
 BB Input ..... 66  
 BB Output ..... 66  
 BBIN ..... 486  
 Bench top, placing ..... 27  
 Bias  
     I/Q OUT ..... 506  
 Binary data  
     Edit, rules ..... 181  
 Bit energy to noise power density ..... 276  
 Bit rate ..... 275  
 Block diagram  
     Display ..... 71  
 Blue LED  
     State indication (active) ..... 494  
 Bluetooth®  
     5.x ..... 83  
     EDR ..... 83  
 Brochures ..... 24  
 Browser settings  
     LXI ..... 655  
 Burst gate ..... 89  
 Bytes order  
     Definition ..... 737



**C**

- C-List
  - See control list ..... 134, 138, 179
- Calibrate RF output level with power sensor ..... 432
- CALibration subsystem ..... 716
- Carrier
  - Delay ..... 246
  - Frequency ..... 246
  - Gain ..... 246
  - Index ..... 246
  - State ..... 246
  - State start/stop ..... 248
- Carrier + Interferer
  - PEP ..... 278
- Carrier + Noise
  - PEP ..... 278
- Carrier graph ..... 249, 259
- Carrier leakage ..... 282
  - Impairments ..... 285
- Carrier power ..... 276
- Carrier range ..... 257
- Carrier spacing ..... 241, 255
- Carrier table ..... 258
- Carrier table assistant
  - Carrier range ..... 257
  - First carrier ..... 257
- Carrier/Noise ratio ..... 275
- Carrying the instrument ..... 26
- Cascading
  - LO ..... 456
  - Reference frequency ..... 456
- Catch range
  - NRP power control ..... 422
- CCDF diagram ..... 440
- CCDF display ..... 440
- CDMA2000 ..... 84
- Center frequency
  - Changing without adjusting the RF ..... 265
- Center frequency offset ..... 273
- Central storage
  - Accessing ..... 540
- Cfast card ..... 44
- Change
  - GPIO address ..... 666, 674
- Change password
  - Setup (security) ..... 606
- Change user password
  - Setup (security) ..... 605
- Channel
  - Name ..... 490, 497
  - State ..... 498
  - Stream ..... 497
- Check display screen
  - Display screen test ..... 1097
- Check front panel
  - Key panel test ..... 1094
  - Performing ..... 1094
  - Settings ..... 1094
- Check touch panel
  - Touchscreen test ..... 1095
- Checking the instrument ..... 26
- Clean
  - List of external RF and I/Q instrument ..... 480
- Cleaning ..... 1090
- Clear
  - NRP sensor mapping ..... 431
  - RF output protection ..... 399
  - User menu ..... 567
- Clear history
  - Undo/Redo ..... 610
- Clear status
  - Remote ..... 698
- Clipping ..... 241
- CList
  - See control list ..... 138, 179
- Clock
  - Connectors ..... 88
  - Frequency ..... 160
  - Rate ..... 160
- Clock rate
  - Blank segment ..... 216
- Clock rate mode
  - Multi-segment waveform ..... 218
- Clock signal
  - Internal ..... 88
- Clock source ..... 115
  - Internal ..... 88
- Close
  - Show SCPI command ..... 679
- Coding
  - DM ..... 122
- Combined RF frequency / level sweep
  - Step count ..... 346
- Combined sweep
  - Spacing ..... 342, 344
- Command sequence
  - Remote ..... 702
- Commands of all settings
  - SCPI list ..... 521
- Comment ..... 214
- Compensation
  - Group delay, filter effect ..... 501
- Complementary cumulative distribution function ..... 440
- Computer name
  - see hostname ..... 663
- CONDition ..... 625
- Configuration
  - Restoring ..... 522
  - Restoring instrument settings ..... 518
- Configuration list
  - Multi-segment waveform ..... 207
- Configure
  - Control signal ..... 136
- Configuring
  - GUI appearance ..... 550
- Configuring LAN services ..... 600
- Confirm unsigned
  - Secure update policy ..... 596
- Confirm user password
  - Setup (security) ..... 605, 606
- Conflict ..... 247
- Connect
  - External RF and I/Q instrument ..... 482
- Connect all remote ..... 475
- Connect remote instruments
  - Keep connection on preset ..... 475
  - On start-up ..... 474
- Connected device ..... 489, 496
- Connecting
  - Keyboard ..... 31
  - LAN ..... 30



Memory stick .....	31	Continue on error .....	
Mouse .....	31	Failed internal adjustments .....	1080
Power .....	30	Control bus .....	1117
To HS Dig I/Q .....	34	Control list .....	
To LO In/LO Out .....	33	ASCII format .....	138, 179
To Ref In/Ref Out .....	34	Binary format .....	180
To RF .....	33	Edit, rules .....	181
To RF coaxial connectors .....	32	How to assign .....	139, 180
USB devices .....	31	Manually (Control data editor) .....	138
Connecting to RF coaxial connectors .....		Select .....	124
To connect to pluggable connectors .....	33	Select, edit, new .....	527
To connect to screwable connectors .....	32	Tags .....	179
To prepare for connecting .....	32	Control signal .....	89
Connection fault .....		Copy .....	
169.254.*.* .....	1079	Instrument settings .....	531
Connector .....		Several files .....	529, 537, 538
AC power supply .....	45	Show SCPI command .....	679
Control signal .....	45	Counter .....	1082
Data .....	45	Couple I/Q bias .....	505
DIFF I/Q .....	44	Coupling mode .....	
Differential output .....	44	AM, FM, PhiM .....	389
Digital IQ .....	44	External modulation input .....	389
Direction .....	561	Create .....	214, 244
Find .....	484	Multi-carrier waveforms .....	235
Global .....	554, 561	New directory .....	531
GPIO .....	44	Create and load .....	214, 244
High-speed digital IQ .....	45	Crest factor .....	
I .....	44, 45	BB Input .....	493
I Bar .....	44	Channel .....	490
Identify .....	484	Desired value .....	256
IEC/IEEE .....	44	External analog signal .....	293
Inst Trig .....	46	Match .....	467
LAN .....	44	Optimize (MCCW) .....	256
LF .....	45	Where to find the value .....	468
LO In .....	45	Crest factor mode .....	241
LO Out .....	45	Current frequency .....	
Mapping .....	553	Adjust .....	294
Mod Ext .....	45	Sweep .....	339
Pulse Ext .....	46	Current index .....	
Pulse Video .....	46	List mode .....	349
Q .....	44, 45	Current level .....	
Q Bar .....	44	Sweep .....	339
Ref In .....	45	Current segment .....	224
Ref Out .....	45	Custom Digital Modulation .....	66
RF .....	41	Customer support .....	1087
Sensor .....	42	Cut .....	
Shared .....	554	Instrument settings .....	531
Show .....	484	Cut off frequency factor .....	128
Signal .....	561	CW .....	
Signal Valid .....	46	Frequency .....	301
Single-ended output .....	44	CW (continuous wave) .....	89
USB .....	42, 43	CW frequency .....	274, 278
USB In .....	43	CW interferer .....	273
User .....	41, 554, 561	CW mode .....	
USER .....	44	Output level .....	304
Connector direction .....		CW signal .....	
Settings .....	475	Generate in baseband .....	121
Connector local, global .....		Settings .....	299
Signal, how to define .....	563	CW/Mod .....	89
Connectors .....	42	<b>D</b> .....	
Constant I/Q test signal .....	154	D-List .....	
Settings .....	164	See data list .....	180
Constellation diagram .....	438	Data entry .....	75
Context-sensitive menu .....	73	Data format .....	
Continue .....		Definition .....	737
Internal adjustments .....	1099		



- Data list ..... 123
  - Access ..... 524
  - Binary format ..... 181
  - Edit, rules ..... 181
  - Editor ..... 132
  - How to access ..... 705
  - How to assign ..... 141, 181
  - How to create ..... 140, 527
  - Manually (data list editor) ..... 140
  - Select ..... 124
  - Select, edit, new ..... 527
  - Standard modulation data source ..... 87
  - Tags ..... 180
- Data sheets ..... 24
- Data source
  - Data list ..... 87
  - DM ..... 123
  - Extern serial data ..... 123
  - Pattern ..... 87
  - PRBS generator ..... 87
- Data valid ..... 1117
- Datasheet
  - LXI ..... 661
- Date ..... 1092
- DAV ..... 1117
- DC carrier leakage
  - Eliminating ..... 265
  - How to shift baseband signal ..... 265
- Deactivate RF output ..... 310
- Deactivated licenses ..... 577
- Declassification ..... 597
- Default directory
  - Mass memory ..... 704
  - User data ..... 510, 704
- Default settings ..... 240
  - ARB ..... 159
  - DM ..... 121
  - I/Q output analog ..... 503
  - MCCW ..... 255
- Default values
  - Remote ..... 700
- Define
  - User key action ..... 571
- Defining the level setting with the rotary knob ..... 500
- Delay
  - Double pulse (PULM) ..... 375
  - Falling edge of ramp envelope ..... 131
  - Marker ..... 114
  - PULM ..... 375
  - Rising edge of ramp envelope ..... 131
  - Trigger ..... 112
- Delay start ..... 249
- Delay step ..... 249
- Delay time
  - NRP power control ..... 423
- Delete
  - Instrument settings ..... 531
  - List mode file ..... 351
  - Sequencing list ..... 223
  - Waveform ..... 216
- Delete instrument settings ..... 714
- Delete temporary files ..... 1107
- Delta frequency
  - External RF and I/Q instrument ..... 477
- Delta phase
  - RF frequency ..... 308
- Destination
  - Connection selftest (BNC) ..... 1103
- Detect
  - External RF and I/Q instrument ..... 480
- Detector sensitivity
  - Automatic level control ..... 401
- Deviation
  - Fixed total deviation ..... 366, 367
  - FSK modulation ..... 126
  - PhiM ..... 366
  - Variable FSK ..... 127
- Deviation mode
  - AM ..... 368
  - Amplitude modulation ..... 368
  - FM ..... 365
  - Frequency modulation ..... 365
  - Phase modulation ..... 367
  - PhiM ..... 367
- Device ID ..... 576, 1057
  - NRP sensor mapping ..... 432
- Device reset ..... 703
- Device-specific notifications ..... 1075
- DHCP ..... 662
- Dialog
  - Snapshots ..... 550
- Dialog boxes ..... 74
- DIFF I/Q
  - see I/Q BAR ..... 466
- Differential coding
  - DM ..... 122
- DIG IQ auto setting ..... 491, 493
- Digital attenuation ..... 505
  - RF level ..... 305
- Digital Attenuation
  - RF level sweep ..... 346
- Digital I/Q
  - Input ..... 486
- Digital inputs
  - Connector type ..... 488
- Digital modulation
  - See DM ..... 119
- Digital output
  - Connector type ..... 496
  - State ..... 494
- Digital standard ..... 66
  - Supported ..... 83
- Direction
  - Connector ..... 475
- Directory
  - Temporary data ..... 704
  - User data ..... 704
- Disable
  - Frequency display ..... 598
  - Level display ..... 598
- Disconnect all remote ..... 475
- Display
  - Active elements ..... 73
  - Block diagram ..... 71
  - Brightness ..... 549
  - Context-sensitive menu ..... 73
  - Info line ..... 73
  - Information ..... 70
  - Keyboard layout ..... 550
  - Lock ..... 598
  - Mapped connectors ..... 474
  - On-screen keypad ..... 73
  - Power sensors ..... 426



SCPI list .....	679	Emulation .....	
Screen saver .....	549	IDN string .....	640
Settings .....	548	Language .....	640
Setup .....	548	Mode .....	640
Status bar .....	70	Set IDN and OPT to default .....	640
Tab labels .....	73	EMV .....	86
Taskbar .....	72	Enable .....	
Wait time (screen saver) .....	549	LAN interface .....	601
Display correction file data .....		ENABLE .....	625
UCOR .....	407	Enable registers .....	
Display correction value .....		Remote .....	700
UCOR .....	406	Enhanced features TD-SCDMA .....	84
Display screen .....		Enter license key .....	576
Checking .....	1096	Enter password .....	
Display screen test .....		Setup (security) .....	603
Perform .....	1097	Envelope tracking power amplifiers tests .....	504
DISPlay subsystem .....	732	EOI .....	1117
Display unit .....	448	Error log .....	1086
Disposal .....	1090	Error message .....	
Distortion-free range .....		Missing burst gate marker in waveform file, please dis-	
Max bandwidth .....	156	able RF power ramping. ....	159
Resampling .....	156	No or empty waveform file .....	159
Distribution .....		Error messages .....	1077
Noise generator .....	390	Adjustment data invalid (183) .....	1076
DList .....		Adjustment data missing (182) .....	1076
See data list .....	180	Adjustment failed (180) .....	1076
DME .....	86	Cannot access hardware (200) .....	1076
DNS server .....	636	Cannot access the EEPROM (202) .....	1076
DNS suffix .....	635	Cannot open file (460) .....	1076
Documentation overview .....	23	Cannot read file (462) .....	1077
Double pulse delay .....		Cannot write file (461) .....	1076
PULM .....	375	Driver initialization failed (204) .....	1076
Double pulse width .....		Extern reference out of range or disconnected (50) .....	1076
PULM .....	375	File contains invalid data (465) .....	1077
Downgrade information .....	1083	Filename missing (463) .....	1077
Factory version .....	1083	Hardware revision out of date (201) .....	1076
Min. version .....	1083	Invalid EEPROM data (203) .....	1076
Duration .....		Invalid filename extension (464) .....	1077
Measurement period external digital signal .....	468	No current list (241) .....	1076
Dwell time .....		SCPI .....	1075
Sweep .....	342	See notifications .....	1074
Dwell time mode .....		This modulation forces other modulations off (140) .....	1076
List mode .....	349	Unknown list type specified (242) .....	1076
<b>E</b> .....		Waveform Protected (261) .....	1076
EDGE Evolution .....	83	Error queue .....	626
Edge form of ramp envelope .....	131	ESE (event status enable register) .....	627
Edge slope of ramp envelope .....	131	ESR .....	623
Edit .....		ESR (event status register) .....	627
Binary data .....	181	EUTRA/LTE .....	85
Data list .....	132	EVENTt .....	625
Editor .....	356, 378, 410	Event status enable register (ESE) .....	627
List mode data .....	351	Remote .....	698
Ramp in control list .....	136	Event status register (ESR) .....	627
UCOR data .....	407	Remote .....	698
Editor .....		Exclude frequency .....	521
Basics .....	356, 378, 409	Exclude level .....	521
Edit .....	356, 378, 410	Execute .....	
Fill with sensor .....	356, 410	Baseband selftest .....	1103
Goto .....	356, 378, 409	Next segment .....	226
Save .....	356, 378, 410	Occupation .....	579
Save as .....	356, 378, 410	Single sweep .....	342
EMF display .....		Trigger (list mode) .....	350
RF level .....	551	Execute single .....	
Emulating front panel keys .....	79	NRP power control .....	422
		Expiration date of option .....	1084



Export	
Execute .....	353, 381, 414
SCPI .....	528
SCPI export .....	681
SCPI list .....	680
SCPI settings .....	680
Export deactivation response .....	576
Export license key .....	577
Export list files	
Basics .....	379, 412
Express level in	
Volts .....	997
Extended mixer mode .....	292
External analog signal	
Apply .....	466
Feed to the instrument .....	466
External digital signal	
Application fields .....	466
Apply .....	466, 486
Baseband input .....	486
Feed to the instrument .....	466
Interface type .....	488, 496
Possible applications .....	466
Required if .....	466
External frequency	
Reference oscillator .....	310
External instrument	
Settings .....	476, 478
External RF and I/Q	
Alias name .....	481
Settings .....	472
External RF and I/Q instruments	
Control .....	464
External trigger	
Common source .....	462
Configuring .....	462
Providing the instrument with .....	462
External Trigger Delay	
DM .....	112
Eye diagram .....	439
<b>F</b>	
Factory	
Preset .....	514
Factory preset	
Change GPIB address .....	666
GPIB address .....	674
Factory version	
Firmware .....	1083
Fall delay .....	131
Feedback	
Connector .....	561
Signal .....	561
Feeding	
External analog signal .....	466
External digital signal .....	466, 486
File	
Multi-carrier table .....	246
SCPI export .....	681
Waveform .....	160
File catalog	
List mode .....	351
File contents	
Multi-segment waveform .....	215
File handling .....	510
File list .....	709

File manager .....	529
File name .....	542
File select	
Dialog .....	524
File server	
Data exchange .....	540
File sharing .....	535
File storage location .....	704
File system .....	508
Accessing .....	535
File transfer .....	510
From file server .....	540
FTP/SAMBA .....	612
How to .....	535
File type selection .....	530
Filename	
Pulse graph .....	382
Files	
User data .....	508
Fill	
User correction data .....	356, 378, 410
Fill table	
Automatically .....	356, 378, 410
UCOR .....	407
Fill with sensor	
Basics .....	411
Editor .....	356, 410
Filter	
DM .....	128
Power sensors .....	427
Filter cut off frequency .....	241
Filter effects	
Compensation .....	501
Filter length	
Auto .....	428
User-defiend .....	428
Filter parameter	
B x T .....	128
Cut off frequency factor .....	128
Impact .....	103
Roll off factor .....	128
Finding out the default directory .....	510, 704
Firmware	
Factory version .....	1083
Min. version .....	1083
Version .....	1083
Firmware options	
see Software options .....	66
Fixed	
Frequency .....	301
Fixed mode	
I/Q Out .....	505
Flexible dynamic switch over .....	228, 229
Without signal interruptions .....	229
Floating	
License server .....	579
Floating licenses .....	1083, 1084
FM .....	359
Deviation .....	365
Deviation mode .....	365
Ratio .....	366
Subsystem .....	797
Total deviation .....	366
Format	
SCPI Export .....	681
FORMat subsystem .....	733



FPGA/μC	
Check for updates .....	1106
Check for updates of external .....	1107
Shut down after update internal .....	1107
Update installation internal assembly .....	1106
Update table .....	1106
Free space	
internal memory .....	1107
Frequency	
Annotation disable .....	598
CW, fixed .....	301
LF generator .....	387
LF sweep .....	387
Multiplier .....	302
Offset .....	302
Power sensors .....	427
RF signal .....	301
Test generator selftest .....	1105
Test signal ARB .....	162
UCOR .....	407
Frequency modulation .....	365
Deviation mode .....	365
Ratio .....	366
State .....	364
Subsystem .....	797
Frequency offset	
Between the I/Q streams .....	472
External signal .....	265
Internal signal .....	265
Frequency, internal	
AM .....	387
FM .....	387
Front panel	
Checking .....	1093
Front panel test	
Performing .....	1094
FSK deviation .....	126
FSK type	
Variable FSK .....	127
FTP	
How to access the instrument .....	535
LAN services .....	601
Function keys	
Overview .....	39

## G

Gain	
Impairment .....	282
Test generator selftest .....	1105
Gain Imbalance .....	282
Gain start .....	248
Gain step .....	248
Gateway .....	635
General configuration of instrument .....	547
General instrument functions	
Checking parameters and dependencies .....	564
User key .....	566
User menu .....	566
General instrument settings .....	547
General workflow	
Multi-segment waveform .....	227
Generate test signal	
HD .....	163, 164, 165
RAM .....	163, 164, 165
Generating	
Time aligned signals .....	459

Generating an unmodulated signal .....	299
Generating short sequences .....	98
Getting started .....	23
Global dwell time	
List mode .....	350
GLONASS .....	85
GNSS .....	85
Goto	
Editor .....	356, 378, 409
GPIO	
Address .....	638
Change address .....	666, 674
Channel address .....	638
Characteristics .....	618
Interface .....	618
Set up remote control .....	674
Visa resource string .....	637
GPIO address	
Factory preset .....	674
GPS .....	85
Graphical signal monitoring .....	436
Graphics	
Number of samples .....	445
Grey LED	
State indication (inactive) .....	494
Group delay	
Compensation .....	501
GSM/EDGE .....	83
GUI	
Setting .....	552
GUI update	
Setup .....	547

## H

Hard copy	
Create, how to .....	545
File format .....	543
Print, how to .....	545
Hard disk	
Deleting temp files .....	1107
Hardcopy .....	541
Options .....	543
Hardware channel	
External RF and I/Q .....	481
Head panel	
See Status bar .....	38
Header	
See Status bar .....	38
Help .....	23, 77
High-speed switch over	
How to .....	230
HiSLIP	
Visa resource string .....	637
HiSLIP	
Resource string .....	616
History	
Undo/Redo .....	610
Host name	
NRP sensor mapping .....	431
see hostname .....	663
Hostname .....	634
Changing .....	663
External RF and I/Q .....	481
LXI .....	654
Syntax .....	663
Use instead of IP address .....	663



- Hotspot ..... 71
- How to
  - Access RF settings ..... 298
  - Activate RF signal output ..... 298
  - Calibrate RF output level with power sensor ..... 432
  - Change the default directory ..... 705
  - Internal adjustments ..... 1100
  - Query hardware options ..... 1084
  - Query RF assembly ..... 1085
  - Resolve adjustments errors ..... 1080
  - Run delayed adjustments ..... 1101
  - Set RF frequency and level ..... 299
  - Use an complete file path ..... 705
  - Use the hostname instead of IP address ..... 663
  - User key ..... 571
  - User menu ..... 568
- HRP UWB 802.15.4 ..... 84
- HSPA ..... 84
- HSPA+ ..... 84
- HTTP
  - LAN services ..... 601
- HUMS ..... 642
  - About ..... 631
  - Add device tags ..... 653
  - Delete device tag entry ..... 652
  - Delete device tags ..... 653
  - Delete history ..... 643
  - Device ID ..... 652
  - Device tag key ..... 652
  - Device tag value ..... 652
  - Device tags ..... 651
  - Enhanced settings ..... 643, 644
  - Export history ..... 644
  - Protocol settings ..... 645
  - REST ..... 645
  - SNMP protocol ..... 645
  - SNMPv2 access ..... 646
  - SNMPv2 community ..... 646
  - SNMPv2 configuration ..... 645
  - SNMPv3 user ..... 646
  - State ..... 643
- I**
- I offset ..... 282
- I/Q
  - External RF and I/Q settings ..... 475
- I/Q connection
  - Status ..... 476
- I/Q delay
  - Impairments, digital ..... 286
- I/Q diagram ..... 437
- I/Q Impairments
  - Linear ..... 281
- I/Q mod
  - Input signal ..... 291
- I/Q modulation ..... 289, 290
  - Gain ..... 293
  - Performance optimization ..... 293
- I/Q output
  - RF envelope ..... 504
- I/Q output analog
  - Settings ..... 501
- I/Q output digital
  - Settings ..... 494
- I/Q output type
  - Differential ..... 504
  - Envelope, E ..... 504
  - Inverted envelope, E BAR ..... 504
  - Single ended ..... 504
- I/Q skew
  - Impairments, digital ..... 286
- I/Q stream mapper
  - Settings ..... 471
- I/Q swap ..... 291
- I/Q wideband ..... 292
- Identification
  - Emulation mode ..... 640
  - Remote ..... 699
- Identify
  - Connector ..... 484
- Identify connector
  - Setting ..... 484
- IDN string
  - Emulation mode ..... 640
- IEC/IEEE bus interface
  - Channel address ..... 638
- IEEE 802.11a/b/g/n ..... 84
- IEEE 802.11ac ..... 84
- IEEE 802.11ax ..... 84
- IEEE 802.11be ..... 84
- IEEE 802.11p/j ..... 84
- IFC ..... 1117
- ILS ..... 86
- Image rejection
  - Test signal ..... 260
- Imbalance
  - Impairments ..... 285
- Impairment
  - Analog ..... 281
  - Digital ..... 281
  - Linear ..... 281
- Impairments
  - Analog ..... 283
  - Digital ..... 283
- Impedance
  - External modulation source ..... 389
- Import
  - Execute ..... 353, 381, 414
  - SCPI ..... 528
- Import license key ..... 576
- Import list files
  - Basics ..... 379, 412
- Import/Export
  - Lists ..... 352
  - Select file ..... 353, 381, 414
- Inactive licenses ..... 576
- Index
  - List mode ..... 349
- Info line ..... 73, 1077
- Information
  - Internal adjustments ..... 1099
- Inhibit trigger ..... 99
- Input
  - Clock slope ..... 563
  - Impedance Clock/Trigger ..... 563
  - Impedance external modulations ..... 389
  - Pulse polarity ..... 383
  - Pulse threshold ..... 563
  - Threshold Clock/Trigger ..... 563
  - Trigger impedance ..... 383
  - Trigger slope ..... 563



Input connector .....	41, 44, 45, 46
Input waveform file .....	249
Input/output signals and interfaces	
Overview .....	465
Installed assembly .....	1082
Instrument	
Carrying .....	26
Checking .....	26
Lifting .....	26
Operating site .....	26, 27
Unpacking .....	26
Instrument configuration	
External .....	478
Instrument control .....	68
Instrument emulations .....	631, 639
Instrument help .....	23
Instrument name	
External RF and I/Q instrument .....	477
Instrument security procedures .....	24
Instrument settings	
Recall .....	700, 714
Save .....	701, 716
Interface	
functions (GPIB bus) .....	1118
GPIB .....	618
Interface clear .....	1117
Interfaces	
GPIB .....	618
RS232 .....	617
USB .....	617
Interferer	
CW, generation .....	267
Interfering signal	
Use an external digital signal .....	466
Internal	
Clock reference .....	88
Internal adjustments	
How to .....	1100
Internal adjustment	
Continue on error .....	1080
Internal adjustments	
Abort on error .....	1080
About .....	1090
Troubleshooting .....	1080
internal memory	
Deleting temp files .....	1107
Interrupt .....	629
IoT	
eMTC .....	85
NB-IoT .....	85
IP address .....	616
Changing .....	663
Dynamic .....	634
External RF and I/Q .....	481
LXI .....	654
Not recognized .....	1079
NRP sensor mapping .....	431
Zeroconf .....	634
IP address mode .....	634
IP configuration	
LXI .....	657
IQ subsystem .....	952
IST .....	623
IST flag	
Remote .....	699

## J

Joint carrier configuration .....	257
-----------------------------------	-----

## K

Key .....	40, 41
★ (User) .....	39
Access on a remote computer .....	79
Backspace .....	40
Down .....	41
Emulation .....	79
Enter .....	40
Esc .....	40
Freq .....	39
Help .....	39
Home .....	39
Left .....	41
Level .....	39
Local .....	39
Mod on/off .....	39, 361
Next window .....	41
On/Off Toggle .....	39, 41
On/Standby .....	39
Preset .....	39
Resize window .....	41
RF on/off .....	39
Right .....	41
Save/Rcl .....	39, 518, 519
Setup .....	39
Up .....	41
Key panel test	
Check front panel .....	1094
Keyboard	
On-screen .....	75
Setting .....	552
Settings .....	548
Setup .....	548
Subsystem .....	743
Usage .....	69
Keypad	
On-screen .....	75
Overview .....	39

## L

LAN	
Connecting .....	30
Environment .....	30
Interface .....	615
IP address .....	616
Main services .....	601
Reset .....	655
Samba services .....	603
Services .....	600
LAN configuration .....	661
LXI .....	656
LAN interface	
Avahi .....	601
Enable .....	601
FTP .....	601
HTTP .....	601
LAN over SCPI .....	601
SMB (Samba) .....	601
SSH .....	601
VNC .....	601



- LAN status
  - LXI ..... 654
- Language
  - Emulation ..... 640
- Last factory calibration ..... 1082
- Last full adjustment
  - Internal adjustments ..... 1098
- Layout
  - Keyboard ..... 550
- Length
  - Control list ..... 136
- Lev Att
  - see Level attenuation ..... 89
- LEV\_ATT ..... 132
- Level
  - Annotation disable ..... 598
  - BB Input ..... 494
  - Behavior (RF) ..... 306, 347, 423
  - I/Q output signal ..... 505
  - Noise generator ..... 392
- Level attenuation ..... 89
  - DM ..... 132
- Level default unit
  - Change ..... 997
- Level in SCPI in V ..... 997
- Level limit ..... 305, 423
- Level mode
  - Multi-segment waveform ..... 218
- Level offset
  - Power sensors ..... 427
  - RF level ..... 305
  - State (power sensors) ..... 427
- Level range
  - Attenuator settings ..... 398
- Level settings
  - On start-up ..... 551
- LF frequency sweep
  - State ..... 339, 385
- LF generator
  - Shape ..... 385
- LF out
  - Connector ..... 44
- LF Out
  - Overview ..... 393
- LF output ..... 390
  - Offset ..... 391
  - Period ..... 387
  - Pulse duty cycle ..... 387
  - Pulse width ..... 387
  - Shape ..... 385
  - Source ..... 391, 393
  - Source impedance ..... 392
  - Sweep reset ..... 343
  - Trapezoid high ..... 388
  - Trapezoid rise, fall ..... 388
  - Triangle rise ..... 388
  - Voltage ..... 391
- LF sweep
  - Frequency ..... 387
- License
  - Keys ..... 573
- License for software option ..... 1084
- Infos ..... 1083
- License info
  - Occupy / renew license ..... 578
- License server
  - Add remote connection ..... 589
  - Enable connection restrictions ..... 588
  - Restrict remote connection ..... 586
- Licenses ..... 573
  - Server ..... 579
  - Settings ..... 574
- Lifting the instrument ..... 26
- Limit
  - RF level ..... 305, 423
- List
  - Define ..... 351
  - Range ..... 351
  - State ..... 349
  - Values, defining ..... 355, 409
- List file
  - Catalog ..... 351
- List mode
  - Create list automatically ..... 356, 378, 410
  - Current index ..... 349
  - Dwell time mode ..... 349
  - Edit ..... 351
  - Execute trigger ..... 350
  - Export user data ..... 353, 381, 414
  - File settings, import/export ..... 352, 380, 413
  - Global dwell time ..... 350
  - Import/export ..... 352, 380, 413
  - Load from file ..... 353, 381, 414
  - Load user data ..... 352
  - Reset ..... 350
  - Select file ..... 351
  - Settings ..... 348
  - State ..... 349
  - Trigger execute ..... 350
  - Trigger source ..... 349
- LO OUT Frequency
  - Display ..... 319
- Load
  - See recall ..... 519
  - User filter ..... 129
  - Waveform ..... 160
- Load instrument settings ..... 700, 714
- Load list ..... 213
- Load user mapping ..... 126
- Loading
  - Trying out ..... 60
- Local oscillator
  - About ..... 316
  - Mandatory LO in frequency ..... 319
  - Options ..... 317
  - Out state ..... 318
  - Settings ..... 318
- Local to remote switch over ..... 676
- Lock
  - Display ..... 598
- LSB/MSB order
  - Definition ..... 737
- LTE advanced ..... 85
- LTE Rel. 8/Rel. 9/Rel. 10/Rel. 11/Rel. 12/Rel. 13/Rel. 14 ..... 85
- LTE-A ..... 85
- LucasFonts
  - RSCorpid EULA ..... 1083
- LVD-M transporting MAN altitude TEMPLATE ..... 1089
- LXI
  - Advanced configuration ..... 657
  - Browser settings ..... 655
  - Configuration ..... 692



Datasheet .....	661
Hostname .....	654
IP address .....	654
IP configuration .....	657
LAN configuration .....	656
LAN status .....	654
MAC address .....	654
Ping .....	658
Remote trace (SCPI) .....	659
Reset (LXI) .....	655
Status settings .....	654
Tracing .....	675
LXI settings .....	654

## M

Mac address .....	636
MAC address	
LXI .....	654
Maintenance .....	1090
Managing license keys .....	573
Managing licenses .....	573
Mandatory LO in frequency	
Local oscillator .....	319
Manual interaction .....	69
Map network share	
Settings .....	530, 531
Map stream X to connector	
Settings .....	472
Mapping network drives/folders	
How to .....	533
Marker .....	91
Marker Delay .....	114
MARKER LIST .....	190, 198
Marker output signals .....	91
Marker positions .....	137
Marker trace	
Periodical .....	186, 197
Mass storage	
Removable .....	44
Mass storage location .....	704
Matching	
Crest factor .....	467
Maximal deviation	
Frequency modulation .....	365
PhiM .....	366
Maximum overall output voltage .....	470, 502
Measured level	
NRP level control .....	422
Measurement period .....	491, 493
How long .....	468
Min. version	
Firmware .....	1083
Minimum locking range .....	311
Mode	
Attenuator settings .....	398
Emulation .....	640
Frequency modulation .....	366
Graphics .....	445
I/Q Out .....	505
IP address .....	634
List .....	349
Local oscillator .....	318
NRP power control .....	422
PhiM .....	367
PULM .....	370
Pulse modulation .....	370
Sweep .....	339
User variation .....	302, 307
Modulation	
AM .....	362
Analog .....	359
Bandwidth, external input .....	389
External coupling .....	389
FM .....	362
Input impedance .....	389
Overview .....	392
Phase .....	362
PhiM .....	362
PM .....	362
Pulse .....	362
Source .....	365
State (AM, FM, PhiM) .....	364
Modulation data	
Source internal .....	87
Modulation depth	
AM .....	368
Modulation sensitivity	
AM .....	368
Modulation type .....	126
Modulations state	
Toggle .....	361
Monitoring	
Signal parameter .....	436
More free disc space	
Deleting temp files .....	1107
Mount network drive	
How to .....	533
Mounting, in a rack .....	28
Mouse	
Usage .....	69
Multi carrier signal	
General principle .....	237
Multi-carrier CW .....	252
Subsystem .....	898
Multi-carrier waveforms .....	235
Multi-instrument setup	
Simultaneous signal generation start .....	459
Synchronous signals .....	459
Time aligned signals .....	459
Multi-segment	
Crest factor .....	226
Multi-segment table .....	216
Multi-segment waveform	
File contents .....	215
Multi-segment waveform sequencing .....	207
Multiple files	
Copy .....	529, 537, 538
Multiplier	
Frequency .....	302

## N

Naming conventions	
Allowed file names .....	508
Navigation keys .....	41
NDAC .....	1117
Near field communication .....	86
Network	
Connection fails .....	1079
Environment .....	30
Settings .....	633



Network share		
Mapping	531	
Mapping, how to	533	
Network status	633	
New list	213	
New password		
Setup (security)	606	
New user password		
Setup (security)	605	
Next segment	224	
Mode	225	
Source	226	
NFC A/B/F	86	
Noise		
Additive, generation	267	
Distribution	390	
Pure, generation	267	
Noise bandwidth		
3 dB noise bandwidth	203	
AWGN	278	
To generate an AWGN test signal	203	
Noise bandwidth limitation		
System bandwidth	390	
Noise generator		
Bandwidth	390	
Noise level		
Absolute system bandwidth	392	
Relative system bandwidth	392	
Noise only	273	
Noise power		
System bandwidth	277	
Total bandwidth	278	
Noise ratio		
Power sensors	428	
Non-dedicated connectors	553	
Notifications	1074, 1077	
Device-specific	1075	
NR Rel. 15	85	
NRFD	1117	
NRP level control		
Measured level	422	
NRP power control	419	
Catch range	422	
Delay time	423	
Execute single	422	
Mode	422	
Reference level	422	
Remote command sequence	997	
Select sensor	421	
Settings	420	
State	421	
Take measured level as reference	422	
Target level	422	
NRP power viewer	417	
Settings	419	
Use S-Parameter	429	
NRP sensor configuration	424	
NRP sensor mapping	429	
Add LAN sensor	431	
Add sensor	431	
Add USBTMC sensor	432	
Clear	431	
Connector	430	
Device ID	432	
Host name	431	
IP address	431	
Protocol	430	
Scan	431	
Sensor name	430, 432	
Serial number	432	
Settings	430	
NTP		
Address	1092	
NTRansition	625	
Number of carriers	240, 255	
Number of licenses	1084	
Numeric data entry	75	
Numeric parameters	76	
<b>O</b>		
Occupation		
Execute	579	
Free licenses	579	
Period	579	
Renew	579	
Occupy		
License info	578	
Occupy license		
Subsystem	993	
OFDM	85	
Offset		
Envelope, E	506	
Frequency	302	
I/Q OUT	506	
Inverted envelope, E BAR	506	
Offset I/Q		
Impairments	285	
Old password		
Setup (security)	605	
Old user password		
Setup	605	
On-screen keyboard	77	
On-screen keypad	73	
On/Off ratio marker	93	
Open source acknowledgment (OSA)	24	
Open-source acknowledgments	1083	
Operating site		
Choosing	26	
Setting up the instrument	27	
Operation		
Manual	69	
Operation complete		
Remote	699	
Operation hours	1082	
Operation mode	519	
Optimization mode	293	
I/Q	293	
RF	293	
Optimize crest factor		
Multi-carrier	241	
Option		
Expiration date	1083	
R&S SMBVB-K16	44	
R&S SMBVB-K19	44, 45	
Option: expiration date	1084	
Options		
Analog modulation	359	
Identification (remote)	699	
Local oscillator	317	
see User Manual	66	



- Oscillator
  - Mandatory LO in frequency ..... 319
  - Mode (local) ..... 318
  - Reference ..... 308
- Output
  - LF ..... 391
  - SCPI list (select file) ..... 681
  - Source (LF output) ..... 393
  - State (LO coupling) ..... 318
- OUTPut
  - Subsystem ..... 743
- Output connector ..... 41, 44, 45, 46
- Output connectors
  - RF ..... 41
- Output file ..... 214, 244
  - Multi-segment waveform ..... 207
- Output queue ..... 623
- Output voltage, max
  - I/Q OUT ..... 470, 502
- Output, LF
  - Offset ..... 391
  - Voltage ..... 391
- Overflow
  - Avoid ..... 468
  - External signal ..... 468
- Oversampling factor ..... 156
- Overview
  - AM ..... 393
  - External RF and I/Q ..... 485
  - LF Out ..... 393
- P**
- Parallel poll register enable
  - Remote ..... 700
- Parameters
  - Entering ..... 76, 77
- Parity
  - RS232 interface ..... 639
- Password
  - Change (security password) ..... 606
  - Change (user password (security)) ..... 605
  - Confirm (security password) ..... 606
  - Confirm (user password (security)) ..... 605
  - Enter (security password) ..... 603
  - New (security password) ..... 606
  - New (user password (security)) ..... 605
  - Old (security password) ..... 605
  - Old user password ..... 605
  - Protection level ..... 594
- Password management
  - Security ..... 603
- Paste
  - Instrument settings ..... 531
- Pattern
  - Data source ..... 123
  - Standard modulation data source ..... 87
- PCI bus ..... 1082
- Peak power
  - BB Input ..... 494
  - Channel ..... 490
  - Digital output ..... 498, 499
- PEP
  - Carrier + Noise ..... 278
- Percentage of signal bandwidth
  - Graphics ..... 446
- Performance
  - I/Q modulation ..... 293
- Period
  - Blank segment ..... 216
- Periodical
  - Marker trace ..... 186, 197
- Periodical markers ..... 177
- Phase
  - First carrier ..... 258
  - Subsystem ..... 996
- Phase fluctuations between RF signals
  - How to minimize ..... 456
- Phase modulation ..... 366
  - Deviation ..... 366
  - Deviation mode ..... 367
  - Mode ..... 367
  - Ratio ..... 367
  - State ..... 364
  - Subsystem ..... 802
- Phase offset ..... 265
  - Between the I/Q streams ..... 472
- Phase reference ..... 308
- Phase start ..... 248
- Phase step ..... 249, 258
- Phase-aligned RF signals
  - How to ..... 456
- Phase-coherent RF signals
  - How to ..... 456
- PhiM
  - Deviation mode ..... 367
  - Mode ..... 367
  - Ratio ..... 367
  - see Phase modulation ..... 366
  - Total deviation ..... 367
- Ping
  - LXI ..... 658
- Placing, on a bench top ..... 27
- Play list ..... 207, 214, 221, 226
- Play list file
  - Sequencing list file ..... 207
- Playlist
  - See play list ..... 207
- PM ..... 359
  - Subsystem ..... 802
- PN sequence
  - See PRBS ..... 87
- Polarity
  - Pulse generator output ..... 375
  - Pulse modulation ..... 383
- Position
  - Cursor in graphical display ..... 137
- Power
  - Carrier + Interferer ..... 278
  - Carrier + Noise ..... 278
  - Connecting the instrument ..... 30
  - First carrier ..... 258
  - Signal + Interferer ..... 278
  - Signal + Noise ..... 278
  - UCOR ..... 407
- Power amplifiers testing
  - Envelope ..... 504
- Power of starting carrier ..... 248
- Power on
  - Key ..... 39
- Power ramp
  - Restrict to baseband ..... 132
- Power ramping ..... 89, 131



Power reference .....	242	Factory only .....	593
Power sensors .....		Protection level .....	594
Activation .....	426	Service department .....	593
Aperture time .....	428	PTRansition .....	625
Auto once .....	428	PULM .....	
Filter .....	427	Delay .....	375
Filter length .....	428	Double pulse delay .....	375
Frequency .....	427	Double pulse width .....	375
Level (average) .....	426	Impedance (trigger input) .....	383
Level (peak) .....	426	Mode .....	370
Level offset .....	427	Period .....	374
Noise ratio .....	428	Pulse polarity (input) .....	383
NRP power control .....	419	Source .....	363
Serial number .....	425	State .....	363
Source .....	426	Subsystem .....	806
State .....	426	Threshold (pulse input) .....	563
State (level offset) .....	427	Transition type .....	363
Timeout .....	428	Width .....	374
Unit .....	426	Pulse .....	
Update .....	419	Duty cycle .....	387
Use default aperture time .....	428	Length (PULM) .....	374
Zero .....	426	Period .....	387
Power Sensors .....		Width .....	387
Display .....	426	Width (PULM) .....	374
Power spectrum .....	441	Pulse divider marker .....	92
Power step .....	258	Pulse frequency marker .....	92
Power supply .....		Pulse generator .....	
Connector .....	45	Delay .....	375
Power viewer .....		Output polarity .....	375
Auto once .....	428	Output state .....	375
Power-On .....		Pulse sync signal output .....	375
Settings .....	551	Single Trigger .....	375
Power-On count .....	1082	Subsystem .....	995
Power-On state .....		Width .....	374
I/Q digital output .....	500	Pulse graph .....	
RF level .....	551	Filename .....	382
Power-On/EMF .....		Zoom In/Out .....	382
About .....	551	Zoom position .....	382
RF signal .....	551	Zooming .....	382
PPE .....	623	Pulse modulation .....	362
PRBS generator .....		Double pulse delay .....	375
Standard modulation data source .....	87	Double pulse width .....	375
PRBS type .....	123	Mode .....	370
Prefix, year, month, Day .....	544	Period .....	374
Preparing for use .....	26	Pulse input threshold .....	563
Preset .....		Pulse polarity (input) .....	383
Factory preset .....	514	Repetition frequency .....	374
Ramp .....	136	see PM .....	362
Primary-secondary .....		Select pulse train file .....	377
Sync signal state .....	459	Source .....	363
Primary-secondary instrument mode .....		State .....	363
Assign signal .....	459	Subsystem .....	806
Mode .....	458	Trigger input impedance .....	383
State .....	458	Trigger mode .....	372
Print .....		Pulse sync out .....	
Hard copy .....	545	Pulse generator .....	375
Processing time .....	98	Pulse train .....	
ARB .....	166	File catalog .....	377
Protection .....		Import/export .....	352, 380, 413
Settings .....	594	On/off time .....	378
Setup .....	593	Repetition .....	378
Protection level .....		Select .....	377
1 .....	593	Purge .....	
2 .....	593	List of external RF and I/Q instrument .....	480
3, 4, 5 .....	593		
Adjustments .....	593		
Calibration .....	593		



**Q**

Q offset .....	282
QR code .....	653
Quadrature offset	
Impairments .....	286
Quadrature Offset .....	283
Quantified Licenses .....	577
Queries	
Status .....	629
Questionable status register .....	628
Quick shift of the baseband signal	
How to .....	265

**R**

R&S signed packages	
Secure update policy .....	596
R&S SMBVB-K200 .....	577
Rack, mounting .....	28
Ramp	
All up or all down .....	136
Low to high and vice versa .....	136
Ramp function .....	131
Ramp time .....	131
Ratio	
AM .....	369
Amplitude modulation .....	369
FM .....	366
Frequency modulation .....	366
Phase modulation .....	367
PhiM .....	367
Ratio noise/system bandwidth	
Minimum .....	273
Readjust	
Automatic level control .....	307
Recall	
Instrument settings .....	521
User menu .....	567
Recall instrument settings .....	700, 714
Recall intermediate .....	522, 700
Recorded SCPI commands	
SCPI list .....	680
Rectangular test signal .....	154
Rectangular test signals	
Settings .....	163
Redo .....	609
Clear history .....	610
History .....	610
Settings .....	610
State .....	610
Reference curve	
Show, hide, assign .....	448
Reference frequency output	
1 GHz .....	312
Loop through .....	312
Reference oscillator .....	308
Adjustment .....	313
Adjustment frequency .....	313
External frequency .....	310
Output frequency .....	312
Preset .....	310
Reference frequency, variable .....	311
RF off state .....	310
Source .....	310
Synchronization bandwidth .....	311
Registers .....	623

Release notes .....	24
Reload	
SCPI list .....	681
Remote access .....	612
Active connections .....	640
DNS server .....	636
DNS suffix .....	635
GPIB address .....	638
GPIB resource (VISA resource string) .....	637
HISLIP resource (VISA resource string) .....	637
HUMS .....	642
Identification .....	640
IDN string .....	640
IEC/ IEEE bus address .....	638
Instrument emulations .....	639
IP address mode .....	634
Language .....	640
Network gateway .....	635
Network hostname .....	634
Network IP address .....	634
Network Mac address .....	636
Network resource (Ethernet resource string) .....	637
Network settings .....	633
Network status .....	633
OPT string .....	640
QR code .....	653
RS232 .....	638
see Remote operation from a computer .....	68
Serial resource (VISA resource string) .....	637
Set IDN and OPT to default .....	640
Settings .....	631
Socket resource (VISA resource string) .....	637
Subnet mask .....	635
USB resource (VISA resource string) .....	637
Visa resource strings .....	636
VXI11 resource (VISA resource string) .....	637
Workgroup name .....	634
Remote connection	
Add floating license server .....	589
Configure license server restrictions .....	586, 588
Status .....	476
Remote control .....	79
Access modes .....	613
Command .....	483
Command sequence .....	484
GPIB .....	674
GPIB interface .....	618
History .....	484
IQ analog .....	954
IQ digital .....	954
Mode .....	483
Programming examples .....	697
RF envelope .....	954
SCPI .....	612
Source subsystem .....	778
Trace .....	484
Remote operation .....	79
VNC .....	612
Remote trace	
LXI .....	659
Removable	
Mass storage .....	44
Non-Volatile Memory .....	44
Removing sensitive data .....	1086
REN .....	1117



Rename  
     File ..... 715  
     Instrument settings ..... 531  
 Renew  
     Occupation ..... 579  
 Resampling  
     External baseband signal ..... 468  
 Reset  
     List mode ..... 350  
     RF frequency (delta phase) ..... 308  
     Sweep ..... 343  
 Reset device parameters ..... 703  
 Reset values  
     Remote ..... 700  
 Resolution  
     Graphics ..... 446  
 Resolving internal adjustment failures ..... 1080  
 Resource string  
     RS232 ..... 618  
     USB ..... 618  
     VISA ..... 616  
 Restart marker ..... 219  
 Restoring configuration ..... 513  
 Result  
     Connection selftest (BNC) ..... 1103  
 Resulting file name ..... 544  
 Retrace  
     Sweep ..... 340  
 Retrigger  
     Common settings ..... 109  
     DM ..... 109  
 Rev. A / Rev. B 1xEV-DO ..... 84  
 RF  
     Signal ..... 297  
 RF combined sweep  
     State ..... 338  
 RF connector ..... 41  
 RF couple  
     External RF and I/Q instrument ..... 477  
 RF envelope ..... 504  
 RF frequency  
     Configuring ..... 299  
     External RF and I/Q instrument ..... 477  
 RF frequency sweep  
     State ..... 338  
 RF level  
     Configuring ..... 299  
     Digital attenuation ..... 305  
     EMF display ..... 551  
     External RF and I/Q instrument ..... 477  
     Offset ..... 305  
     PEP ..... 299  
     Power-On state ..... 551  
     Setting characteristics ..... 306, 347, 423  
     Settings ..... 303  
 RF level sweep  
     State ..... 338  
 RF OFF mode  
     Attenuator settings ..... 398  
 RF off state  
     Reference oscillator ..... 310  
 RF ON, RF OFF, RF ON/OFF ..... 298  
 RF output  
     Amplitude ..... 304  
     Impedance ..... 298  
     PEP ..... 299

    Protection ..... 399  
     State ..... 298  
 RF Output  
     Level range ..... 306, 347  
 RF output signal  
     Phase ..... 308  
     Phase reference ..... 308  
 RF path  
     External RF and I/Q ..... 481  
 RF phase  
     Configuring ..... 299  
 RF signal  
     Analog modulation ..... 359  
     Attenuator ..... 397  
     Automatic level control ..... 399  
     Frequency ..... 301  
     Power-On/EMF ..... 551  
     User correction ..... 402  
 RF state  
     External RF and I/Q instrument ..... 478  
 Rise delay ..... 131  
 RMS  
     Digital output ..... 498, 500  
 RMS power  
     BB Input ..... 494  
     Channel ..... 490  
 Roll off factor  
     DM ..... 128  
 Rotary knob ..... 40  
     User variation ..... 302, 307  
 RS232  
     Baud rate ..... 639  
     Interfaces ..... 617  
     Parity ..... 639  
     Remote access ..... 638  
     Resource string ..... 618  
     Serial (VISA resource string) ..... 637  
     Stop bits ..... 639

## S

S-Parameter  
     Activate corrections ..... 429  
 Safety instructions ..... 17, 24  
 Samba services  
     SMB client ..... 603  
     SMB server ..... 603  
 SAMBA/SMB  
     How to access the instrument ..... 535  
 Sample level  
     ALC ..... 402  
     Automatic level control ..... 402  
 Sample rate  
     Aggregated ..... 490, 498  
     Channel ..... 490, 497  
     Link ..... 490, 498  
     Source ..... 488, 492, 496  
     Value ..... 492  
     Where to find the value ..... 468  
 Samples  
     Blank segment ..... 216  
 Samples per period ..... 162  
 Sanitize ..... 597  
 save  
     Save ..... 519



- Save
  - Control list ..... 138
  - Editor ..... 356, 378, 410
  - Instrument settings ..... 521
  - Sequencing list ..... 221
  - User menu ..... 567
- Save and load ..... 518
- Save as
  - Editor ..... 356, 378, 410
- Save hard copy as
  - bmp, jpg, png ..... 543
- Save immediate ..... 521
- Save instrument settings ..... 701, 716
- Save intermediate ..... 701
- Save list ..... 214
- Save/Recall ..... 240, 518
  - Dialog ..... 519
  - Digital standard ..... 519
  - DM ..... 121
  - Firmware option settings ..... 519
  - How to ..... 522
  - I/Q output analog ..... 504
  - SCPI-Export ..... 683
- Saving
  - Trying out ..... 59
- Saving files ..... 705
- SBAS ..... 85
- Scan
  - NRP sensor mapping ..... 431
- Scan for
  - External RF and I/Q instrument ..... 480
- SCONfiguration subsystem ..... 761
- SCPI
  - Error messages ..... 1075
  - Export ..... 528
  - Export settings ..... 680
  - Import ..... 528
  - LAN services ..... 601
  - Output file ..... 681
- SCPI export ..... 681
  - Select file ..... 681
  - Show file content ..... 681
- SCPI Export
  - Format ..... 681
- SCPI list
  - Commands of all settings ..... 521
  - Display ..... 679
  - Export ..... 680
  - Recorded SCPI commands ..... 680
  - Show all commands ..... 521
- SCPI remote trace
  - LXI ..... 659
- SCPI script
  - Select ..... 570
- SCPI-Export
  - Save/Recall ..... 683
- Screen saver
  - Activate ..... 552
  - State ..... 549
  - Wait time ..... 549
- Secure update policy
  - All packages ..... 596
  - Confirm unsigned ..... 596
  - R&S signed packages ..... 596
- Security
  - Accept settings ..... 603
  - Change password (setup) ..... 606
  - Change user password (setup) ..... 605
  - Confirm password (setup) ..... 606
  - Confirm user password (setup) ..... 605
  - Display lock ..... 598
  - Enter password (setup) ..... 603
  - New password (setup) ..... 606
  - New user password (setup) ..... 605
  - Old password (setup) ..... 605
  - Old user password ..... 605
  - Password management ..... 603
  - Sanitize ..... 597
  - Secure update policy ..... 596
  - Security password ..... 605
  - Settings ..... 595
  - Setup ..... 593
  - USB storage (setup) ..... 597
  - User name (setup) ..... 604
  - User password ..... 605
  - Volatile memory ..... 597
- Security password
  - Security ..... 605
  - Setup ..... 605
- Security procedures ..... 24
- Security settings ..... 593
- Segment # ..... 216
- Segment down ..... 216, 223
- Segment marker ..... 218
- Segment up ..... 216, 223
- Select
  - List mode data file ..... 351
  - Setup file ..... 570
  - User correction data file ..... 406
- Select file ..... 527
- Select free licenses
  - Occupation ..... 579
- Select instrument
  - External RF and I/Q ..... 480
- Select period
  - Occupation ..... 579
- Self-calibration routines
  - About ..... 1090
- Self-test
  - About ..... 1090
  - Remote ..... 702
- Selftest
  - ARB file (test generator) ..... 1105
  - Connection selftest (BNC) ..... 1102
  - Destination ..... 1103
  - Execute (baseband) ..... 1103
  - Frequency (test generator) ..... 1105
  - Gain (test generator) ..... 1105
  - Result ..... 1103
  - Source ..... 1102
  - Source (test generator) ..... 1104
  - State (test generator) ..... 1104
- Sensitive information
  - Protecting ..... 509, 517
- Sensor
  - NRP power control ..... 421
- Sensor name
  - NRP sensor mapping ..... 432
- Sequencing graph ..... 223
- Sequencing list ..... 214, 221, 226
  - Load ..... 221
  - New ..... 221
- Serial
  - Visa resource string ..... 637



Serial bus .....	1082	Layout (keyboard) .....	550
Serial number .....	43, 664	New password .....	605
NRP sensor mapping .....	432	New password (security) .....	606
Power sensors .....	425	Old password (security) .....	605
Service manual .....	23	Password (protection) .....	594
Service request (SRQ) .....	626, 629	Performing the front panel test .....	1094
Service request enable register (SRE) .....	626	Protection level .....	594
Remote .....	701	Screen saver .....	549
Services .....		Secure update policy .....	596
LAN .....	600	Security password .....	605
Set according to .....	121	Test (touchscreen) .....	1094
Set IDN and OPT to default .....		USB storage (security) .....	597
Emulation mode .....	640	User name (security) .....	604
Set level via .....		User password .....	605
Digital output .....	499	Wait time .....	549
Set noise level via .....	275	Setup files .....	
Set to default .....	240	Data exchange .....	540
ARB .....	159	Setup key .....	547
DM .....	121	Shape .....	
MCCW .....	255	LF generator .....	385
Set up remote control .....		LF output .....	385
GPIB .....	674	Period .....	387
Settings .....		Pulse duty cycle .....	387
Active connections .....	640	Pulse width .....	387
AM .....	368	Sweep .....	340
Appearance .....	550	Trapeze high .....	388
Attenuator .....	397	Trapezoid rise, fall .....	388
Automatic level control .....	400	Triangle rise .....	388
Check front panel .....	1094	Shared connectors .....	
Delayed adjustment .....	1099	Global connectors .....	554
Display .....	548	Shifting the baseband signal .....	262
FM .....	365	Shortcut to a network drives .....	
Instrument emulations .....	639	How to .....	533
Internal adjustments .....	1098	Show .....	
Keyboard .....	548	SCPI list .....	521
Licenses .....	574	Show file content .....	
List mode .....	348	SCPI export .....	681
Local oscillator .....	318	Show powers for output .....	
Managing .....	508	AWGN .....	275
NRP power control .....	420	Show SCPI command .....	679
NRP power viewer .....	419	Close .....	679
NRP sensor mapping .....	430	Copy .....	679
On power-on .....	551	Signal + Interferer .....	
PhiM .....	366	PEP .....	278
Protection .....	594	Signal + Noise .....	
Remote access .....	631	PEP .....	278
RF level .....	303	Signal duration .....	242
SCPI export .....	680	Signal generation status .....	109
Security .....	595	Signal monitoring .....	
UCOR .....	405	Graphical display .....	436
Undo/Redo .....	610	Signal output .....	
User key .....	570	LF .....	390
Setup .....		Signal period mode .....	242
Accept security settings .....	603	Signal power .....	276
Adjusting display .....	547	Signal source .....	
Adjusting keyboard .....	547	Analog modulation .....	360
Annotation frequency .....	598	Signal to connector mapping .....	
Annotation level .....	598	How to .....	563
Appearance settings .....	550	Signal/Noise ratio .....	275
Change password .....	605	Simultaneous signal generation start .....	
Change password (security) .....	606	Several instruments .....	459
Confirm password .....	605	Sine test signal .....	154
Confirm password (security) .....	606	Sine test signals .....	
Display lock .....	598	Settings .....	161
Enter password (security) .....	603		
GUI update .....	547		
Keyboard settings .....	548		



Single				BB Input	488
Common settings	109			Carrier (MCCW)	257
DM	109			DM	121
Execute (list mode)	350			I/Q digital output	496
Single sideband signal				I/Q modulation	291
Generation	260			Impairments	285
SMB (Samba)				LF frequency sweep	339, 385
LAN services	601			List mode	349
Snapshots				MCCW	254
Dialog	550			NRP power control	421
Socket				Power sensors	426
Visa resource string	637			Pulse generator output	375
Softkey bar				Pulse modulation	363
See Taskbar	72			RF frequency / level sweep	338
Software options	66			RF frequency sweep	338
Source				RF level sweep	338
AM, FM, $\Phi$ M	365			RF output	298
Analog modulation	360			RF output protection	399
Connection selftest (BNC)	1102			Screen saver	549
Graphics	445			Test generator selftest	1104
Impedance	392			UCOR	406
LF output	391, 393			Undo/Redo	610
Power ramp control	131			Status	
Power sensors	426			Queries	629
Pulse modulation	363			Remote connection to external RF and I/Q	476
Reference oscillator	310			Status bar	
Sweep trigger	339			Display	70
Test generator selftest	1104			Status byte	
Source points for graphic display	441			Remote	698, 701
Source subsystem				Status byte (STB)	626
Remote control commands	778			Status information	576
Spacing				Status register	
Frequency sweep	342, 344			Response format deinition	737
RF frequency / level sweep	342, 344			Status registers	623
RF level sweep	346			CONDITION	625
Span				ENABLE	625
Frequency sweep	344			EVENT	625
Specified trigger delay	112			Model	625
Spectrum display	441			NTRansition	625
SRE	623			Parts	625
SRE (service request enable register)	626			PTRansition	625
SRQ	1117			Status reporting system	622
SRQ (service request)	626, 629			Application	629
SSB				Common commands	698
Generation	260			Status settings	
SSH				LXI	654
LAN services	601			STB	623
Standard	121			Step	
Standard settings	240, 255			Frequency sweep	345
DM	121			Linear (frequency sweep)	345
Standard-compliant signals	83			Logarithmic (frequency sweep)	345
Standby				RF level sweep	346
Key	39			Step count	
Start				Combined RF frequency / level sweep	346
Frequency sweep	344			Step width	
RF level sweep	346			User variation	302, 307
Start delay	249			Stop	
Start phase	248			Frequency sweep	344
Start/stop carrier index	248			RF level sweep	346
Starting gain	248			Stop bits	
Starting the signal generation with the first sample	98			RS232 interface	639
State				Storage	1090
Adjustment (reference oscillator)	313			Storage location	
AM, FM, $\Phi$ M	364			/usb/	508
ARB	159			/var/user	508
Automatic level control	401			/var/volatile	508
AWGN	272			Mass memory	704



Stream distributing	
Settings	472
Stream mapping	
Settings	472
Subnet mask	635
Subsystem	
AM	792
FM	797
Keyboard	743
Occupy license	993
OUTPut	779
Phase	996
PM	802
Power	997
PULM	806
Pulse generator	995
SOURce:INPut	779
Sum signal	
How to shift basebands	265
Support	1086
Suppressing	
Carrier leakage	265
Surveillance	
Signal generation	436
Sweep	
Center frequency	344
Current frequency	339
Current level	339
Dwell time	342
Execute single	342
Frequency span	344
Mode	339
Reset	343
Retrace	340
Shape	340
Spacing	342, 344, 346
Start/stop frequency	344
Start/stop level	346
State (LF frequency)	339, 385
State (RF combined)	338
State (RF frequency)	338
State (RF level)	338
Step	345, 346
Trigger manually	342
Switch over	
Flexible	229
High speed	230
Switching	
Modulation to CW	127
On or off	35
Symbol rate	
DM	122
Symbolic name	
External RF and I/Q	481
Sync. Output to external trigger	111
Sync. Output to trigger	111
Synchronization	
Assign signal	459
Mode	458
State	458
Sync signal state	459
Synchronization bandwidth	
Reference oscillator	311
Synchronize	
External RF and I/Q instrument	477

Synchronizing	
Several instruments	457
Signal generation	462
Synchronizing instruments	
How to	456
Synchronous generation start	94
System	
Factory preset	514
System bandwidth	
AWGN	273
Noise level (absolute)	392
Noise level (relative)	392

## T

Tab labels	73
Tag type	193
Clock	186
Comment	184
Control length	186, 197
Control list width4	195
Copyright	184
Data bit length	196
Data list	197
Date	185
Emptytag length	187
Level offset	188
Magic	183
Marker mode	189
Samples	189
Segment clock mode	193
Segment comment	195
Segment count	192
Segment duration	192
Segment files	195
Segment length	192
Segment level mode	194
Segment level offset	194
Segment start	193
Settings file	195
Trace list	190, 198
Waveform length	191
Take measured level as reference	
NRP power control	422
Tapping points	441
Target crest factor	241
Target level	
NRP power control	422
TD-SCDMA	84
Temperature offset	
Internal adjustments	1099
Temporary files	509, 517
Test	
Check front panel	1094
Test signal	
Amplitude of test signal	164
ARB generator	154
Frequency	162, 163
Offset DC	164
Phase offset Q	162
Samples per period	162, 164
Value I, Q	165
Testing	
High-power amplifiers	250
Text entry	75
Threshold	
Pulse modulation	563



Time	
UTC .....	1092
Time protocol	
Settings .....	1092
Time-based trigger	
State .....	109, 110
Timeout	
Filter (power sensors) .....	428
Tooltips	
Show .....	77
Touchscreen	
Compared with mouse .....	69
Overview .....	37
Test .....	1094
Usage .....	69
Touchscreen test	
Perform .....	1095
Trace	
Enable in graphic .....	448
Tracing	
Messages .....	675
SCPI commands .....	675
Tracking	
Signal parameter .....	436
Transition	
PULM .....	363
Pulse modulation .....	363
Transmitter test	
Generating multi carrier signal .....	250
Trapezoid	
High (LF generator) .....	388
Rise, fall .....	388
Triangle	
Rise .....	388
Trigger	
Event (remote) .....	701
Execute (list mode) .....	350
Generate signal manually .....	561
Manual execute .....	562
Manually .....	561
Sweep, manually .....	342
Trigger box .....	463
Trigger delay	
Actual .....	112
Expressed in seconds .....	112
Expressed in time .....	111
Resulting .....	112
Unit .....	111
Trigger Delay	
DM .....	112
Trigger event .....	94
Delay .....	99
Suppress .....	99
Trigger example .....	227
Trigger Mode	
Common settings .....	109
DM .....	109
Trigger signal duration .....	112
Trigger signals	
Baseband .....	93
Trigger source	
Graphics .....	445
List mode .....	349
Sweep .....	339
Trigger Source	
DM .....	110

Trigger, accidental	
Avoiding .....	98
Triggering	
Multi-segment waveform .....	209
Segment .....	209
Time-based .....	115
Triggering synchronous .....	463
Tripped	
RF output protection .....	399

## U

UCOR	
About .....	403
Calibrate RF output level with power sensor .....	432
Data .....	406
Display correction file data .....	407
Display correction value .....	406
Edit data .....	407
Export user data .....	353, 381, 414
File catalog .....	406
File settings, import/export .....	352, 380, 413
Fill with sensor .....	411
Import/export .....	352, 380, 413
Load from file .....	353, 381, 414
RF signal .....	402
Select file .....	406
Settings .....	405
State .....	406
Values, defining .....	355, 409
Undo .....	609
Clear history .....	610
History .....	610
Settings .....	610
State .....	610
Units X-axis	
Change .....	448
Unmodulated signal .....	89
Unpacking the instrument .....	26
Up-conversion	
Important parameters .....	467
USB	
Interfaces .....	617
Resource string .....	618
Storage (security) .....	597
Visa resource string .....	637
Use default aperture time	
Power sensors .....	428
User clock .....	218
User correction	
see UCOR .....	402
User data	
Access .....	524
Load from a specific directory .....	706
User files .....	508
User filter	
Catalog .....	129
Delete .....	129
User interface	
Lock .....	598
User key .....	566
Action name .....	570
Add, change, delete action .....	571
Assign actions .....	571
Define action .....	570, 571
SCPI command .....	571
Select dialog ID .....	570



Settings .....	570
Toggle between define and execute mode .....	571
User manual .....	23
User mapping	
Catalog .....	126
Delete .....	126
User menu .....	566
Access .....	568
Clear .....	567
Create .....	568
Recall .....	567
Save .....	567
Settings .....	567
User name	
Setup (security) .....	604
User password	
Security .....	605
Setup .....	605
User preset .....	513
User variation	
Activating .....	302, 307
Digital I/Q out .....	500
Level .....	302, 307
RF .....	302, 307
User-definable preset	
Recall .....	567
Utility keys	
Overview .....	38

## V

Value	
Sample rate .....	496
Variable FSK	
Deviation .....	127
Selecting .....	127
Variable reference frequency .....	311
Varying	
RF frequency and level .....	302, 307
Vector diagram .....	437
Vector modulation .....	289, 290
Verifying	
Signal parameter .....	436
Version	
Firmware .....	1083
Videos .....	24
VISA .....	615
Resource string .....	616
Visa resource string	
Ethernet .....	637
GPIB .....	637
HISLIP .....	637
Serial .....	637
Socket .....	637
USB .....	637
VXI11 .....	637
Visa resource strings .....	636
VNC	
LAN services .....	601
Using in a LAN .....	79
Volatile memory .....	509, 517
Volatile mode	
Activate .....	597
VOR .....	86
VXI11	
Visa resource string .....	637

## W

Wait	
Remote .....	702
Wait time	
Screen saver .....	549
Wanted signal	
Use an external digital signal .....	466
Warnings .....	1074, 1077
Waveform	
Edit, rules .....	181
Info .....	160, 216
Load file .....	160
Maximum length .....	157
Optimizing .....	156
Waveform file	
Corrupted, reasons .....	181
What's new .....	22
White papers .....	24
Wi-Fi	
WLAN .....	689
Width	
Double pulse (PULM) .....	375
PULM .....	374
Pulse modulation .....	374
Wireless LAN standards .....	84
WLAN standards .....	84
Workflow	
Multi-segment waveform .....	227
Workgroup name .....	634
Wrap-around	
Avoiding problems .....	237
Overcome problem .....	229

## Z

Zero	
Power Sensors .....	426
Zeroconf	
IP address .....	1079
Zeroconf (Avahi) protocol .....	662
Zoom	
Control list display .....	137
Zoom In/Out	
Pulse graph .....	382
Zoom position	
Pulse graph .....	382
Zooming	
Pulse graph .....	382