R&S[®]FSMR Measuring Receiver All-in-one calibration of signal generators and attenuators





Product Brochure | Version 04.00

R&S[®]FSMR Measuring Receiver At a glance

The R&S[®]FSMR measuring receiver has been specially designed to handle the measurement tasks involved in the calibration of signal generators and fixed or adjustable attenuators. The R&S[®]FSMR combines the functionality of several instruments in one and is capable of calibrating all vital parameters of a signal generator.

The R&S[®]FSMR offers full spectrum analyzer functionality, e.g. for measuring harmonics or phase noise. The base unit does not provide for image frequency rejection in the range above 3.6 GHz since the YIG filters normally used for this would impair level linearity. The optional YIG preselection filter makes the R&S[®]FSMR a full-featured spectrum analyzer, also in the microwave range. The tracking YIG filter can be switched off for accurate level calibration.

Key facts

- Frequency range from 20 Hz to 3/26.5/43/50 GHz
- Highly accurate level calibrator with wide level measurement range from +30 dBm to -140 dBm
 Modulation analyzer
- Audio analyzer with THD and SINAD measurement functionality
- Power meter for connection of R&S®NRP-Zxx power sensors
- I High-performance spectrum analyzer

Models	
R&S [®] FSMR3	20 Hz to 3.6 GHz
R&S [®] FSMR26	20 Hz to 26.5 GHz
R&S [®] FSMR43	20 Hz to 43 GHz
R&S [®] FSMR50	20 Hz to 50 GHz



R&S[®]FSMR Measuring Receiver Benefits and key features

Level calibration – precise, repeatable and easy

- I Excellent linearity and level stability
- I High tolerance with respect to frequency drift and residual FM
- Easy operation for level calibration over a wide level range
- ⊳ page 4

Direct connection of power sensors for accurate power measurements

- I Power sensor module with integrated power splitter
- Control of all functions incl. power meter from front panel or via IEC/IEEE bus or LAN
- I Many supported power meters
- Automatic VSWR correction
- ⊳ page 6

Modulation and audio analysis made easy


- I Measurement of modulation depth, frequency deviation and phase deviation with < 1% measurement uncertainty</p>
- Audio analysis with automatic measurement of modulation frequency, THD and SINAD
- Display of audio signals and demodulated signals in frequency and time domain
- Audio input for calibration of modulation generators
- ⊳ page 7

Versatile, high-performance spectrum analysis

- I Full-featured spectrum analyzer
- I Full choice of detectors
- Versatile resolution filter characteristics and large bandwidth
- I Full range of analysis functions
- ⊳ page 8

Level calibration – precise, repeatable and easy

Typical linearity versus specified values dB 0.1 0.08 0.06 0.04 0.02 Ω -0.02 -0.04 -0.06 -0.08 -0.1 L 40 50 30 60 70 80 100 110 20 90 120 dB below reference ·

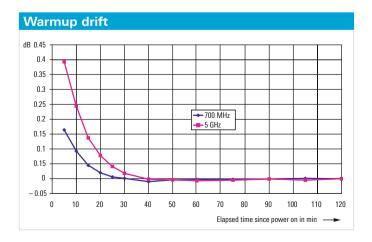

Excellent linearity and level stability

The linearity of the R&S[®]FSMR is almost exclusively determined by its high-quality A/D converter and the limits of traceability of calibration. Modules and components on which drift (YIG filter) or nonlinear level response (crystal filter) may occur are switched off during level calibration. As a result, the R&S[®]FSMR features linearity values equal to or even better than those of the present industry standard.

After warmup, the R&S[®]FSMR offers excellent level stability. This allows measurements to be performed with high accuracy over extended periods of time, for example during manual calibration.

High tolerance with respect to frequency drift and residual FM

The R&S[®]FSMR measures the signal level within the selectable measurement bandwidth. For signals within the measurement bandwidth, level measurement is not affected by frequency drift, frequency deviation or residual FM. Featuring a large, selectable measurement bandwidth from 100 Hz to 10 MHz, the R&S[®]FSMR is insensitive to frequency offset or residual FM of the generator to be calibrated. Very small levels are measured using the narrow detector, which determines the signal power within the measurement bandwidth with FFT at a reduced noise bandwidth. This yields an improved signal-to-noise ratio without increasing the effect of frequency offset or residual FM.

Easy operation for level calibration over a wide level range

To perform measurements over the full level range of conventional RF generators, e.g. from –130 dBm to +10 dBm, it is necessary to switch the built-in RF attenuator of the R&S°FSMR or the IF gain as required. The R&S°FSMR eliminates any level errors that may occur as a result of range switching by calibrating the adjacent range prior to switchover. As a result, the user can benefit from the instrument's high linearity of 0.01 dB + 0.005 dB deviation per 10 dB across the entire level range. Level calibration is carried out in just a few steps. The complete setup, including the power meter connected to the measuring receiver, is operated via the R&S°FSMR front panel.

The optional R&S°FSU-B25, R&S°FSU-B24, R&S°FSMR-B23 and R&S°FSMR-B223 preamplifiers expand the level range down to lower levels. In addition, they improve the measurement accuracy and measurement speed for low signal levels. The procedure is as follows:


Step 1: Set the measurement frequency (manually or with the AUTO TUNE function). The R&S[®]FSMR measurement range is then automatically set to the level of the incoming signal (AUTORANGE function)

Step 2: Perform a reference measurement with the power meter by means of CAL ABS POWER. The R&S[®]FSMR is now ready for level calibration, which is indicated by the CAL field turning green

Step 3: Reduce the level of the device to be calibrated in the required steps and verify the level. If the test signal is outside the usable measurement range of the R&S[®]FSMR, a prompt is issued to calibrate the adjacent range

Step 4: Calibrate the adjacent range with the RECAL key. The R&S[®]FSMR automatically switches the measurement range

Att 1	IFB 10/11Hz 0/dB AQT 4000 ms		RECEIVER
FREQUENCY Carrier Offset	1.0000000000 (-45.60 Hz	GHz 🔒	CAL ABS
RF LEVEL Ref Value	-20.679 dBm dBm		RECAL
SPLIT	UNCORR	20 -10	adjust Range

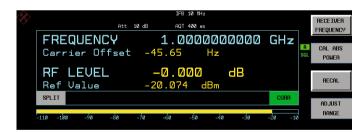





Step 1: Set the measurement frequency.

Step 2: Perform a reference measurement.

Step 3: Reduce the level of the device to be calibrated and verify the level.

Step 4: Calibrate the adjacent range with the RECAL key.

Direct connection of power sensors for accurate power measurements

Power sensor module with integrated power splitter

The absolute power and the reference power are measured with high accuracy by a power meter. The power meter can be connected to the generator output or operated in parallel with the analyzer input via a power splitter. The R&S[®]FSMR automatically corrects the power splitter's frequency response and insertion loss based on an internally stored correction table.

Control of all functions incl. power meter from front panel or via IEC/IEEE bus or LAN

The R&S[®]FSMR controls the power meter via its second IEC/IEEE bus connector. The power meter is operated from the front panel. This means that operation is just as easy for power meters of other makes as it is for Rohde&Schwarz power meters. Remote control via the IEC/IEEE bus is still only via the R&S[®]FSMR. Calibration labs can therefore continue to use their existing power meters.

Many supported power meters

The following power meters – also of other makes – are additionally supported:

- I R&S®NRVS, R&S®NRVD
- I ML2438A
- I 438A
- **4**37B
- ∎ E4417A

Automatic VSWR correction

If a power sensor with a power splitter is used, the analyzer's input VSWR affects the display and the measurement uncertainty of the power sensor. For this reason, the R&S®NRP-Z27/-Z37 power sensor modules with built-in power splitter provide automatic VSWR correction as well as an attenuator in the signal path to the analyzer input. The automatic VSWR correction in the R&S®FSMR and the R&S®NRP-Z27/-Z37 considerably reduces loading, allowing users to profit from the overall measurement accuracy of the thermoelectric sensors in the power sensor modules.

Power sensors of the R&S [®] NRP family suitable for use with the R&S [®] FSMR measuring receiver					
Туре	Frequency range	Level range	Connector	Remarks	
R&S®NRP-Z27	DC to 18 GHz	-24 dBm to +26 dBm	N (male)	thermoelectric with integrated splitter	
R&S®NRP-Z37	DC to 26.5 GHz	-24 dBm to +26 dBm	3.5 mm (male)	thermoelectric with integrated splitter	
R&S®NRP40T1)	DC to 40 GHz	–35 dBm to +20 dBm	2.92 mm (male)	thermoelectric	
R&S®NRP50T1)	DC to 50 GHz	–35 dBm to +20 dBm	2.40 mm (male)	thermoelectric	
R&S®NRP67T1)	DC to 67 GHz	-35 dBm to +20 dBm	1.85 mm (male)	thermoelectric	
Other power sensors					
R&S®NRP8S ¹⁾	10 MHz to 8 GHz	-70 dBm to +23 dBm	N (male)	diode sensor	
R&S®NRP18S ¹⁾	10 MHz to 18 GHz	–70 dBm to +23 dBm	N (male)	diode sensor	
R&S®NRP18S-101)	10 MHz to 18 GHz	-60 dBm to +33 dBm	N (male)	diode sensor with integrated attenuator	
R&S®NRP18S-201)	10 MHz to 18 GHz	–50 dBm to +42 dBm	N (male)	diode sensor with integrated attenuator	
R&S®NRP18S-251)	10 MHz to 18 GHz	–45 dBm to +45 dBm	N (male)	diode sensor with integrated attenuator	
R&S [®] NRP18T ¹⁾	DC to 18 GHz	–35 dBm to +20 dBm	N (male)	thermoelectric	
R&S®NRP33T1)	DC to 33 GHz	-35 dBm to +20 dBm	3.5 mm (male)	thermoelectric	
R&S®NRP6A ¹⁾	8 kHz to 6 GHz	-70 dBm to +23 dBm	N (male)	diode sensor	

¹⁾ Requires installation package "NRP_Update_1.0.exe", operating system Windows Embedded Standard SP 3 and Firmware revision 4.76. More information under https://www.rohde-schwarz.com/software/fsmr/

Modulation and audio analysis made easy

The R&S[®]FSMR features a complete, integrated modulation and audio analyzer for the AM, FM and ϕ M analog modulation modes. Audio parameters are measured either on the demodulated signal or on the signal applied to the audio input.


This means that no extra instrument is required for calibrating modulation settings and the modulation generator.

Various audio filters, deemphasis functions and detectors are available for audio analysis. This makes it easy to perform residual FM measurements, for example.

Measurement of modulation depth of an amplitude-modulated signal: The R&S°FSMR measures the modulation depth and modulation frequency, and optionally also indicates the averaged modulation values. The demodulated audio signal is displayed in the time domain.



The R&S[®]FSMR not only displays the demodulated signal or the audio signal in the time domain, the signal is also displayed selectively as an RF spectrum, generated by means of an FFT, with harmonics and any spurious modulation, such as hum. For THD and SINAD measurements, the instrument is automatically tuned to the fundamental. The THD function selectively measures all harmonics within the FFT spectrum. The SINAD function additionally weights noise and nonharmonic spurious.

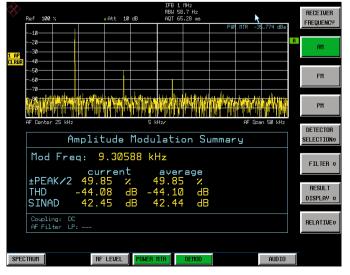

Versatile, highperformance spectrum analysis

Full-featured spectrum analyzer

Calibration labs handle a variety of measurement tasks. These tasks often require a spectrum analyzer featuring a wide range of functions and excellent allround performance. The R&S[®]FSMR includes as standard a spectrum analyzer that meets these requirements and, with the YIG filter option fitted, provides image frequency rejection up into the microwave range. The built-in spectrum analyzer of the R&S[®]FSMR offers functionality and performance equivalent to that of the R&S[®]FSU spectrum analyzer.

Full choice of detectors

For adaptation of the R&S[®]FSMR to a wide range of signal types, a full choice of detectors is included:

- I RMS I Auto peak
- Max. peak
- Min. peak
- I Sample
- I Average
- QPK (Quasi-peak)

Versatile resolution filter characteristics and large bandwidth

The R&S[®]FSMR offers the most versatile resolution filter characteristics and largest bandwidth found in a spectrum analyzer:

- Standard resolution filters from 10 Hz to 50 MHz in steps of 1/2/3/5 (R&S[®]FSMR43: max. 10 MHz)
- I FFT filters from 1 Hz to 30 kHz
- I 39 channel filters with bandwidths from 100 Hz to 5 MHz
- RRC filters for NADC and TETRA
- I EMI filters: 200 Hz, 9 kHz, 120 kHz

Full range of analysis functions

The R&S®FSMR provides a full range of analysis functions:

- Time-domain power in conjunction with channel or RRC filters turn the R&S[®]FSMR into a full-featured channel power meter
- I TOI marker
- I Noise/phase noise marker
- Versatile channel/adjacent-channel power measurement functions with wide user-configurable selection of standards
- I CCDF measurement function
- I Split-screen mode with selectable settings
- Peak list marker for fast search of all peaks within the set frequency range (search for spurious)

Attenuation calibration kit

The R&S[®]FSMR-Z2 attenuation calibration kit is used to calibrate the level linearity of the R&S[®]FSMR as described in the R&S[®]FSMR performance test (included in the manual). The attenuation calibration kit enables calibration laboratories to recalibrate the level linearity of the R&S[®]FSMR by themselves. The kit is PTB-calibrated and consists of the following:

- **I** 3 × 6 dB attenuators
- I 2 × 10 dB attenuators
- ∎ 2 × 20 dB attenuators
- I PTB calibration certificate

Attenuation calibration kit with case

Attenuation calibration kit for verifying the R&S®FSMR linearity.





Important options

Measurement applications/ technology	Measurement functions	Spectrum measurements	Miscellaneous	Special features
R&S®FS-K15 VOR/ILS measurements	 ILS measurement functions: DDM SDM Modulation depth and frequency VOR measurement functions: VOR phase Modulation depth and frequency for 30 Hz subcarrier identifier 9.96 kHz subcarrier deviation Modulation depth and frequency of subcarrier 	 ILS: THD VOR: THD – phase between 90 Hz and 150 Hz signal 	 VOR phase measurement range: 0° to 360°, 0.1° resolution VOR phase measurement uncertainty: 0.003° 	
R&S*FSMR-B73 vector signal analysis for: I BPSK, QPSK, OQPSK I π/4 DQPSK I 8PSK, D8PSK, 3π/8 8PSK I (G)MSK I 2, 4, (G)FSK I 16/32/64/128/256(D)QAM I 2FSK, 4FSK I 8VSB	 In-phase and quadrature signals versus time Magnitude and phase versus time Eye diagram Vector diagram Constellation diagram Demodulated bit stream Statistical evaluation of modulation parameters 	 Spectral evaluation Amplifier distortion measurements 	 Trigger modes: external, burst, IF power 	25 MHz symbol rate 28 MHz I/Q demodulation bandwidth
R&S®FS-K40 I phase noise measurement	I SSB phase noise versus carrier offset	-	 Determination of residual FM and jitter from a phase noise trace within a selectable offset range 	

Specifications in brief

	R&S [®] FSMR3	R&S [®] FSMR26	R&S [®] FSMR43	R&S [®] FSMR50		
Frequency range	20 Hz to 3.6 GHz	20 Hz to 26.5 GHz	20 Hz to 43 GHz	20 Hz to 50 GHz		
Reference frequency	aging: 1 × 10 ⁻⁷ /year, op	aging: 1×10^{-7} /year, optionally 2×10^{-8} /year				
Absolute power measurement	using R&S®NRP-Zxx power sensor or external power meters					
Uncertainty	with R&S [®] NRP-Z27/-Z37: 0.083 dB (up to 4.2 GHz, +15 °C to +35 °C)					
Relative level measurement						
Measurement range	+30 dBm to –140 dBm	, depending on frequency				
Linearity (+20 dBm to –140 dBm)	±0.01 dB ± 0.005 dB p	er 10 dB step				
AM modulation measuremen	nts					
Modulation depth	0% to 100%					
Measurement uncertainty	1% of reading, 50 Hz to 0.4% of reading, 90 Hz	o 50 kHz; to 150 Hz, in range from 5%	to 99%			
Modulation frequency	10 Hz to 100 kHz	_				
Inherent distortion	0.3%					
FM modulation measuremen	its					
Frequency deviation	max. 500 kHz					
Measurement uncertainty	1% of reading, 50 Hz to	o 100 kHz				
Modulation frequency	10 Hz to 200 kHz					
Inherent distortion	0.1%					
φM modulation measuremen	nts					
Phase deviation	max. 10000 rad					
Measurement uncertainty	1% of reading, 50 Hz to	o 100 kHz				
Modulation frequency	10 Hz to 100 kHz					
Inherent distortion	0.1%					
Audio measurements						
Frequency range	DC, 20 Hz to 1 MHz					
Level ranges	0.4 V, 4 V					
Measurement uncertainty	1% of reading, 20 Hz to	o 100 kHz				
Spectrum analyzer						
Frequency range	20 Hz to 3.6 GHz	20 Hz to 26.5 GHz	20 Hz to 43 GHz	20 Hz to 50 GHz		
Resolution bandwidths	10 Hz to 50 MHz; FFT f	ilters: 1 Hz to 30 kHz; channel	filters; EMI bandwidths			
Video bandwidths	1 Hz to 10 MHz					
Displayed average noise leve	I (RBW 1 Hz)					
1 GHz	typ. –158 dBm	typ. –156 dBm	typ. –156 dBm	typ. –156 dBm		
26 GHz	-	typ. –151 dB	typ. –151 dBm	typ. –151 dBm		
43 GHz	_	-	typ. –140 dBm	typ. –140 dBm		
50 GHz	_	-	-	typ. –133 dBm		
Trace detectors	Max. peak, min. peak,	Max. peak, min. peak, auto peak, sample, RMS, average, quasi-peak				
Phase noise	typ. –133 dBc (1 Hz) at 10 kHz from carrier, 640 MHz carrier frequency					
Sweep time						
Span > 10 Hz	2.5 ms to 16000 s					
Span 0 Hz (zero span)	1 µs to 16000 s					
Image frequency rejection						
f < 3.6 GHz	typ. 110 dB					
f > 3.6 GHz	-	0 dB				
f > 3.6 GHz, with R&S°FSMR-B2 option	-	typ. 100 dB				

Ordering information

Designation	Туре	Order No.	Retrofittable	Remarks
Measuring Receiver, 20 Hz to 3.6 GHz	R&S®FSMR3	1313.9200.03		
Measuring Receiver, 20 Hz to 26.5 GHz	R&S [®] FSMR26	1313.9200.26		
Measuring Receiver, 20 Hz to 43 GHz	R&S®FSMR43	1313.9200.43		
Measuring Receiver, 20 Hz to 50 GHz	R&S [®] FSMR50	1313.9200.50		
Hardware options				
YIG Preselection, 3.6 GHz to 26.5 GHz	R&S [®] FSMR-B2	1157.1903.26	no	not with R&S®FSMR-B23 and R&S®FSMR-B223, for R&S®FSMR26
YIG Preselection, 3.6 GHz to 26.5 GHz	R&S®FSMR-B2	1157.1903.43	no	not with R&S°FSMR-B23 and R&S°FSMR-B223, for R&S°FSMR26
YIG Preselection with 20 dB Preamplifier, 3.6 GHz to 26.5 GHz	R&S [®] FSMR-B223	1157.1955.26	no	not with R&S [®] FSMR-B23 and R&S [®] FSMR-B2, for R&S [®] FSMR26
YIG Preselection, 3.6 GHz to 50 GHz	R&S®FSMR-B2	1157.1903.50	no	for R&S [®] FSMR50 only
Low-Aging OXCO	R&S [®] FSU-B4	1144.9000.02	yes	
Tracking Generator, 100 kHz to 3.6 GHz	R&S [®] FSU-B9	1142.8994.02	yes	
Attenuator for Tracking Generator	R&S®FSU-B12	1142.9349.02	yes	
Removable Hard Disk	R&S®FSMR-B18	1303.0400.14	no	
Second Hard Disk	R&S®FSMR-B19	1303.0600.04		requires R&S [®] FSMR-B18
RF Preamplifier, 3.6 GHz to 26 GHz	R&S [®] FSMR-B23	1157.0907.05	no	requires R&S [®] FSU-B25, not with R&S [®] FSMR-B2 and R&S [®] FSMR-B223, for R&S [®] FSMR26 only
Vector Signal Analyzer	R&S®FSMR-B73	1169.5696.02		
20 dB RF Preamplifier and Electronic Attenuator, 100 kHz to 3.6 GHz	R&S [®] FSU-B24	1157.2100.50	yes	excludes R&S°FSU-B25, not with R&S°FSMR-B25 and R&S°FSMR-B223, not for R&S°FSMR3
20 dB RF Preamplifier and Electronic Attenuator, 100 kHz to 3.6 GHz	R&S [®] FSU-B25	1144.9298.02	yes	
Attenuation Calibration Kit	R&S [®] FSMR-Z2	1169.4954.02	yes	
N-Type Adapter for R&S®RT-Zxx Probes	R&S®RT-ZA9	1417.0909.02	yes	
Software options				
VOR/ILS Measurement Demodulator	R&S®FS-K15	1302.0936.02		
Application Firmware for Noise Figure and Gain Measurements	R&S [®] FS-K30	1300.6508.02		retrofittable only for serial no. > 200000; preamplifier (e.g. R&S°FSU-B25) recommended
Application Firmware for Phase Noise Measurement	R&S®FS-K40	1161.8138.02		
GSM/EDGE Application Firmware	R&S®FS-K5	1141.1496.02		
3GPP BTS/NodeB FDD Application Firmware	R&S®FS-K72	1154.7000.02		
3GPP UE FDD Application Firmware	R&S®FS-K73	1154.7252.02		
3GPP HSDPA BTS Application Firmware	R&S®FS-K74	1300.7156.02		requires R&S [®] FS-K72
3GPP TD-SCDMA BTS Application Firmware	R&S®FS-K76	1300.7291.02		
3GPP TD-SCDMA UE Application Firmware	R&S [®] FS-K77	1300.8100.02		
CDMA2000 [®] BTS Application Firmware	R&S®FS-K82	1157.2316.02		
CDMA2000 [®] MS Application Firmware (incl. 1xEV-DV)	R&S®FS-K83	1157.2416.02		
CDMA2000 [®] 1xEV-DO BTS Application Firmware	R&S®FS-K84	1157.2851.02		
CDMA2000 [®] 1xEV-DO MS Application Firmware	R&S®FS-K85	1300.6689.02		

Warranty				
Base unit		3 years		
All other items ¹⁾	1 year			
Options				
Extended Warranty, one year	R&S®WE1	Please contact your local Rohde&Schwarz sales office.		
Extended Warranty, two years	R&S®WE2			
Extended Warranty with Calibration Coverage, one year	R&S [®] CW1			
Extended Warranty with Calibration Coverage, two years	R&S°CW2			
Extended Warranty with Accredited Calibration Coverage, one year	R&S®AW1			
Extended Warranty with Accredited Calibration Coverage, two years	R&S®AW2			

¹⁾ For options that are installed, the remaining base unit warranty applies if longer than 1 year. Exception: all batteries have a 1 year warranty.

Service that adds value

- Worldwide
- Local and perso
- Customized and flexible
- Uncompromising quality
- Long-term dependability

Rohde & Schwarz

The Rohde&Schwarz electronics group offers innovative solutions in the following business fields: test and measurement, broadcast and media, secure communications, cybersecurity, monitoring and network testing. Founded more than 80 years ago, the independent company which is headquartered in Munich, Germany, has an extensive sales and service network with locations in more than 70 countries.

Sustainable product design

- I Environmental compatibility and eco-footprint
- I Energy efficiency and low emissions
- Longevity and optimized total cost of ownership



Rohde&Schwarz GmbH&Co. KG

www.rohde-schwarz.com

Rohde & Schwarz training

www.training.rohde-schwarz.com

Regional contact

- Europe, Africa, Middle East | +49 89 4129 12345 customersupport@rohde-schwarz.com
- North America | 1 888 TEST RSA (1 888 837 87 72) customer.support@rsa.rohde-schwarz.com
- Latin America | +1 410 910 79 88 customersupport.la@rohde-schwarz.com
- Asia Pacific | +65 65 13 04 88 customersupport.asia@rohde-schwarz.com
- L China | +86 800 810 82 28 | +86 400 650 58 96 customersupport.china@rohde-schwarz.com

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG Trade names are trademarks of the owners PD 0758.2319.12 | Version 04.00 | May 2017 (as) R&S®FSMR Measuring Receiver

Data without tolerance limits is not binding | Subject to change © 2005 - 2017 Rohde&Schwarz GmbH&Co. KG | 81671 Munich, Germany

