

R&S®RT-ZD10/20/30 Active Differential Probe R&S®RT-ZA15 External Attenuator User Manual



1410455002

Version 06

ROHDE & SCHWARZ

Make ideas real



This user manual describes the following R&S®RT-ZD models and external attenuators:

- R&S®RT-ZD10 (1410.4715.02)
- R&S®RT-ZD20 (1410.4409.02)
- R&S®RT-ZD30 (1410.4609.02)
- R&S®RT-ZA15 (1410.4744.02)

© 2023 Rohde & Schwarz GmbH & Co. KG
Muehldorfstr. 15, 81671 Muenchen, Germany
Phone: +49 89 41 29 - 0
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1410.4550.02 | Version 06 | R&S®RT-ZD10/20/30

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol and without product type numbers, e.g. R&S®RT-ZD10/20/30 is indicated as R&S RT-ZD10/20/30, and R&S®ProbeMeter is indicated as R&S ProbeMeter.

Contents

1 Safety and regulatory information.....	5
1.1 Safety instructions.....	5
1.2 Labels on the product.....	7
1.3 Warning messages in the documentation.....	8
2 Product description.....	9
2.1 Key features and key characteristics.....	9
2.2 Unpacking and checking.....	11
2.3 Description of the probe.....	12
2.4 Accessories and items.....	13
3 Connecting the probe.....	20
3.1 Handling the probe.....	20
3.2 Connecting the probe to the oscilloscope.....	20
3.3 Identification of the probe.....	21
3.4 Connecting the probe to the DUT.....	22
4 R&S RT-ZA15 external attenuator.....	28
4.1 Key characteristics.....	28
4.2 Description.....	28
4.3 Inserting the probe.....	29
4.4 Adjusting.....	30
5 Features and characteristics of R&S RT-ZD10/20/30 probes.....	35
5.1 Zero adjustment.....	35
5.2 Micro button.....	36
5.3 R&S ProbeMeter.....	36

5.4 Offset compensation.....	37
5.5 Characteristics of differential probes.....	40
5.6 Measurement principles.....	44
6 Maintenance and service.....	55
6.1 Cleaning.....	55
6.2 Contacting customer support.....	55
6.3 Returning for servicing.....	56
6.4 Calibration interval.....	56
6.5 Storage and transport.....	57
6.6 Disposal.....	57
6.7 Spare parts.....	57
7 Functional check.....	61

1 Safety and regulatory information

The product documentation helps you to use the product safely and efficiently. Follow the instructions provided here and throughout the manual.

Intended use

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the data sheet.

The R&S RT-ZD10/20/30 differential probe is designed for measurements on circuits that are only indirectly connected to the mains or not connected at all. It is not rated for any measurement category.

The probe is designed for usage with oscilloscopes that have a Rohde & Schwarz probe interface. Supported Rohde & Schwarz oscilloscopes are listed in the probe's data sheet.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 5. The same information is provided in many languages as printed "Safety Instructions". The printed "Safety Instructions" are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the data

sheet, manuals and the printed "Safety Instructions for Oscilloscopes and Accessories" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer service.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the data sheet. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer service at <https://www.rohde-schwarz.com/support>.

In these safety instructions, the term "product" covers instruments (oscilloscopes), probes and their accessories.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing. If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

Unless otherwise specified in the data sheet, you can operate the product up to an altitude of 2000 m above sea level.

The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the data sheet.

Performing measurements

Take the following measures for your safety:

- To ascertain voltage-free state, use an appropriate voltage tester. Any measurement setup including an oscilloscope is not suitable for this purpose.
- The maximum input voltage on channel inputs and the external trigger input must not exceed the value specified in the data sheet.
- Observe all voltage and current ratings of the instrument, the probes, and the accessories. Exceeding the allowed voltages can lead to an electric shock. Limits and ratings are marked on the products and listed in the data sheets.

Labels on the product

Consider that the rated voltage depends on the frequency. The voltage limitation curves or values are provided in the data sheet.


- Never cause any short circuits when measuring sources with high output currents.
- Use only probes and accessories that comply with the measurement category (CAT) of your measurement task. If the product is rated for any measurement category, the permitted category is indicated on the product and in the data sheet. If you use other than Rohde & Schwarz accessories, make sure that they are suitable for the instrument and the measurement task.
- Set the correct attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries. When transporting the accessories, always use the box supplied with the probe.
- Prevent the probe from receiving mechanical shock. Avoid putting excessive strain on the probe cable or exposing it to sharp bends. Touching a broken cable during measurements can cause injuries.
- Set up all probe connections to the instrument before applying power.

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety
- Product and environment safety
- Identification of the product

Table 1-1: Meaning of safety labels

	<p>Potential hazard Read the product documentation to avoid personal injury or product damage.</p>
---	--

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

2 Product description

2.1 Key features and key characteristics

The R&S RT-ZD10/20/30 is a differential probe with high input impedance. It is used for differential voltage measurements from DC to 1.0 GHz, 1.5 GHz, and 3 GHz, respectively.

Differential probes can be used for single-ended and differential applications. They are equipped with two high-impedance inputs and can measure the voltage between any two test points. Unlike using single-ended probes, there is no need to ensure that one of the test points is always at ground potential.

The comprehensive accessory set allows this probe to be connected to a wide variety of devices under test (DUT). Provided with special features such as the R&S ProbeMeter and the micro button, the R&S RT-ZD10/20/30 is designed to meet tomorrow's challenges in probing.

The external attenuator R&S RT-ZA15 can be used to extend the input voltage range of the R&S RT-ZD10/20/30. It is supplied with the R&S RT-ZD10 and is available as optional accessory for the R&S RT-ZD20 and R&S RT-ZD30.

The probe is equipped with the Rohde & Schwarz probe interface. It can be connected to any Rohde & Schwarz instrument that is compatible with this interface. When connected to the front panel, the probe is controlled by the oscilloscope's software. Supported oscilloscopes are listed in the data sheet.

Using a special adapter, the probe can also be connected to any other base unit (see [Chapter 2.4.2, "Optional accessories"](#), on page 17).

2.1.1 Key characteristics

The key characteristics of the probe are the following:

Bandwidth	DC to 1.0 GHz (R&S RT-ZD10) DC to 1.5 GHz (R&S RT-ZD20) DC to 3.0 GHz (R&S RT-ZD30)
Dynamic range (differential input)	± 5 V with ± 5 V offset capability 10 V AC (V _{pp})

Key features and key characteristics

Operating voltage window (each pin to GND)	±8 V with ±22 V common mode offset capability Available for R&S RT-ZD10/20/30 probes with serial number ≥ 200000
Maximum non-destructive input voltage	±30 V Between each signal pin and ground
Diff. input resistance	1 MΩ
Diff. input capacitance	0.6 pF
R&S ProbeMeter, measurement error	<0.1 %
Extremely low zero and gain errors throughout the entire temperature range, no significant temperature drift	
Micro button	
Rohde & Schwarz probe interface	

2.1.2 Key features

Micro button

The micro button remotely controls important functions of the Rohde & Schwarz oscilloscope. The function is assigned at the oscilloscope.

For details, see [Chapter 5.2, "Micro button"](#), on page 36.

R&S ProbeMeter

The R&S ProbeMeter measures the DC voltage of the input signal directly at the probe tip. It provides a continuous high-precision DC voltage measurement that is independent of the settings of the oscilloscope and runs in parallel to the time domain measurement. If activated on the base unit, the measured value is displayed on the screen of the Rohde & Schwarz oscilloscope.

The R&S ProbeMeter simultaneously measures both differential and common mode DC voltages.

For details, see [Chapter 5.3, "R&S ProbeMeter"](#), on page 36.

Data memory

The probe has an integrated data memory, containing the individual probe correction parameters (e.g. gain, delay, offset). These parameters are read out and pro-

Unpacking and checking

cessed by the Rohde & Schwarz oscilloscope. As a result, the probe offers a high degree of accuracy, and additional calibration procedures are not required.


2.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

Delivery notes

The delivery contains the following items:

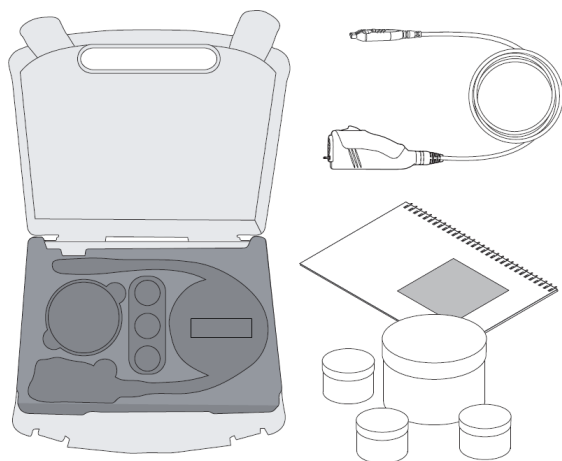


- R&S RT-ZD10/20/30 differential probe
- Carrying case
- Accessory boxes
- R&S RT-ZA15 external attenuator (only with R&S RT-ZD10)
- User manual
- Data sheet
- Calibration certificate
- Documentation of calibration values (if ordered)
- Safety instructions for oscilloscopes and accessories (multilingual)

Accessories supplied with the probe are listed in [Chapter 2.4.1, "Accessories supplied"](#), on page 14.


2.3 Description of the probe

The probe consists of the probe head for connection to the DUT, the probe box for connection to the oscilloscope, and the probe cable.

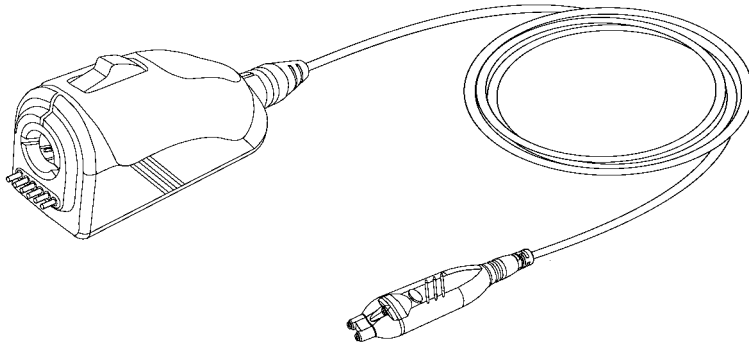

2.3.1 Probe head

The small and lightweight probe head is designed for easy handling and high-performance measurements. The probe head is used for connecting the probe and the DUT. Different accessories for the signal and ground sockets allow the probe head to be connected to a wide range of DUTs.

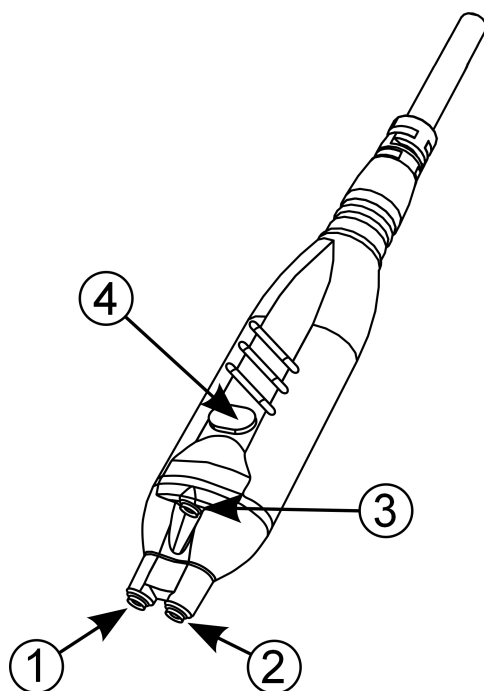

- (1) Positive signal socket
- (2) Negative signal socket
- (3) Ground socket
- (4) Micro button

The accessories supplied for the probe head sockets are listed in [Chapter 2.4.1, "Accessories supplied"](#), on page 14.

Signal and ground sockets are compatible with 0.64 mm (25 mil) square pins and 0.6 mm to 0.8 mm (24 mil to 35 mil) round pins.


Spacing of signal sockets: 5.08 mm (200 mil).

2.3.2 Probe box

The probe box connects the probe and the oscilloscope via the Rohde & Schwarz probe interface. The Rohde & Schwarz probe interface contains a male precision 7 mm (276 mil) BNC connector and six pogo pin connectors. This interface provides the required supply voltage and is also used to transmit analog signals and digital data simultaneously. All the analog voltages required by the probe are generated in the probe box.

The BNC connector is a precision component designed to reach a much higher frequency limit when connected to an instrument with Rohde & Schwarz probe interface.

Connect the probe only to an instrument with Rohde & Schwarz probe interface. Never connect it to a usual BNC jack, because this can damage the probe interface.

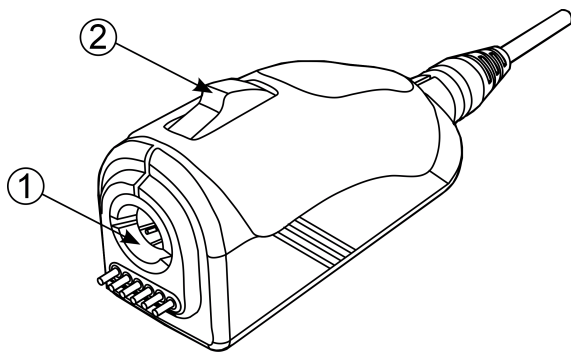

- (1) Rohde & Schwarz probe interface with 7 mm (276 mil) coaxial connector and 6 pogo pins
- (2) Release knob

2.4 Accessories and items

The figure below shows all accessories that are available for the R&S RT-ZD10/20/30 differential probe.

Accessories and items

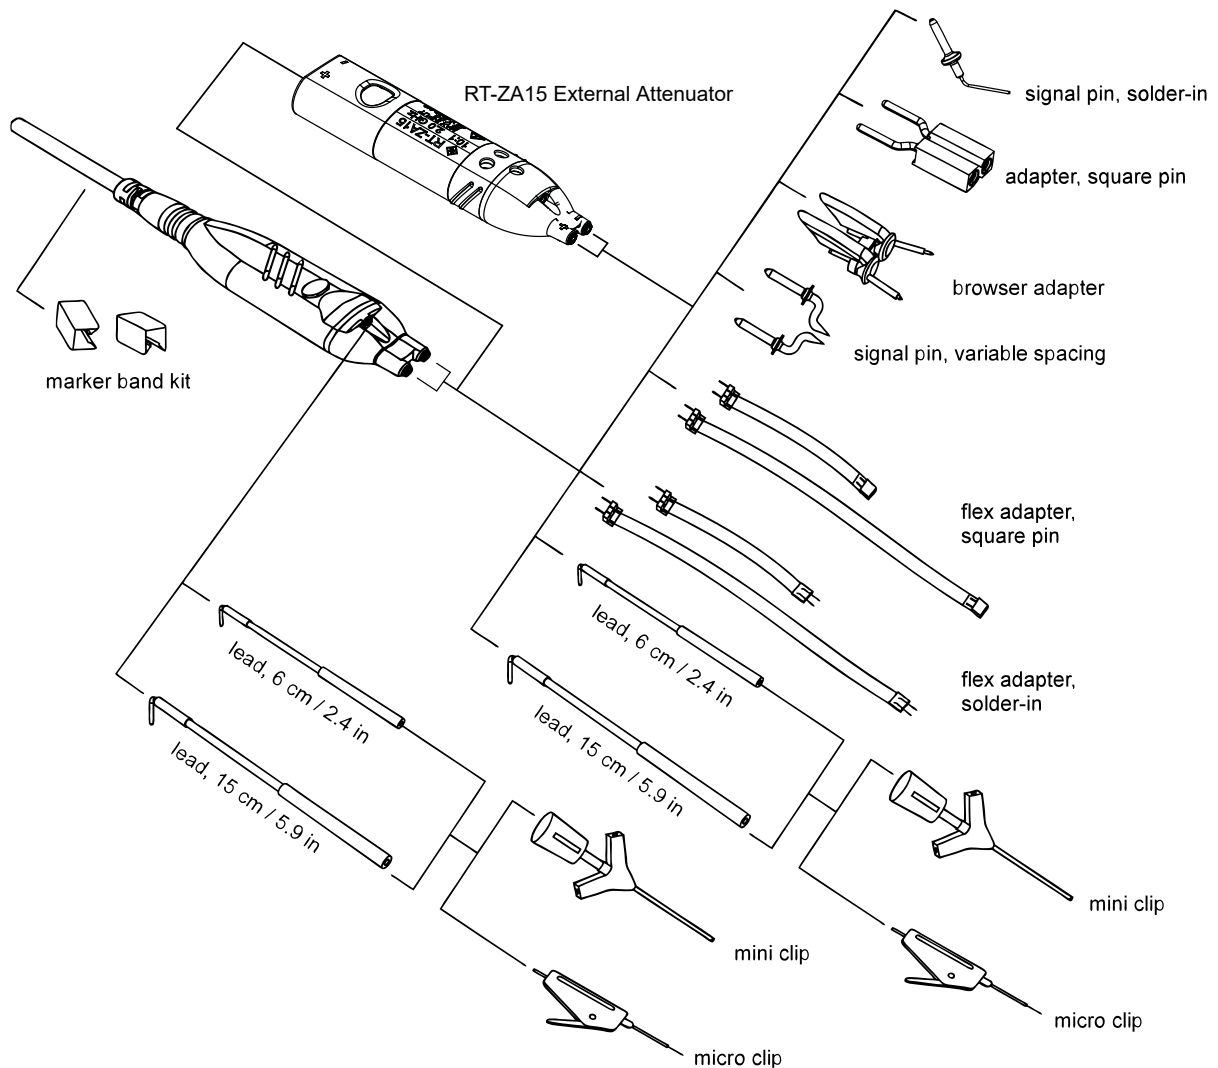
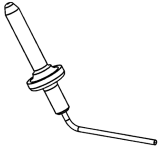
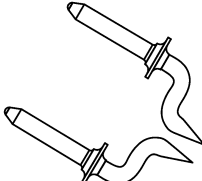
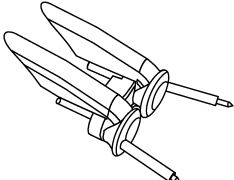
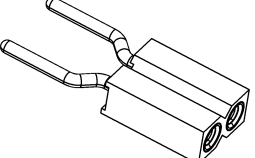
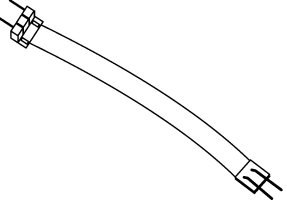
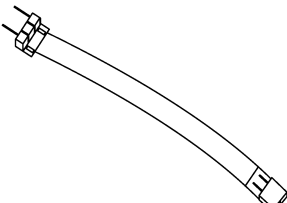
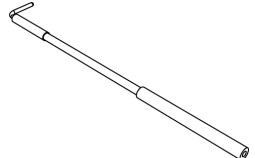


Figure 2-1: Available accessories








2.4.1 Accessories supplied

The following table shows the accessories supplied with the R&S RT-ZD10/20/30 differential probe.

Table 2-1: Accessories supplied

Item	Quantity	Description
	10	Signal pin, solder-in
	4	Signal pin, variable spacing
	1	Browser adapter
	2	Adapter, square pin
	1 1	Flex adapter, solder-in, 4 cm / 1.6 in 10 cm / 3.9 in
	1 1	Flex adapter, square pin, 4 cm / 1.6 in 10 cm / 3.9 in
	2	Lead, 6 cm / 2.4 in

Accessories and items

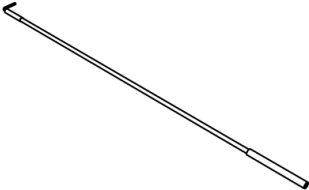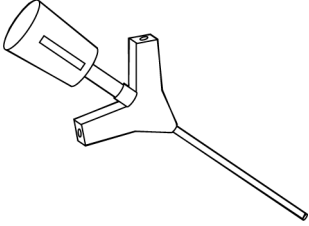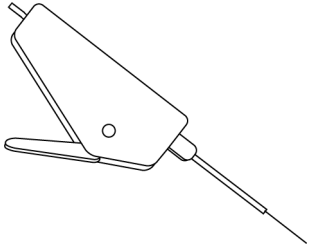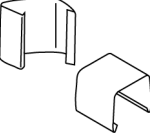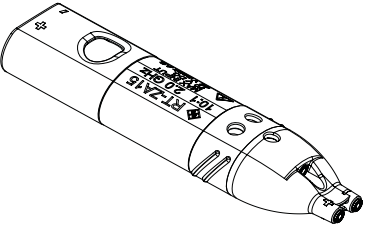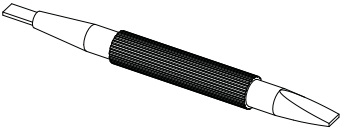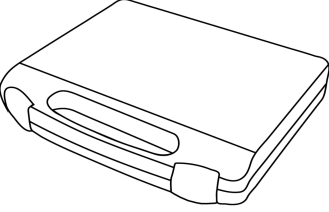Item	Quantity	Description
	1	Lead, 15 cm / 5.9 in
	2	Mini clip
	2	Micro clip
	1	Marker band kit
	1 (only with R&S RT-ZD10)	External attenuator
	1 (only with R&S RT-ZD10)	Adjustment tool
	1	Carrying case with foam inlay

For a list of spare parts, see [Chapter 6.7, "Spare parts"](#), on page 57.

2.4.2 Optional accessories

If the delivered accessories do not meet individual customer requirements, Rohde & Schwarz offers different accessory sets for sale. The order numbers are provided in the data sheet.

Table 2-2: R&S RT-ZA15 external attenuator (optional for R&S RT-ZD20/30)

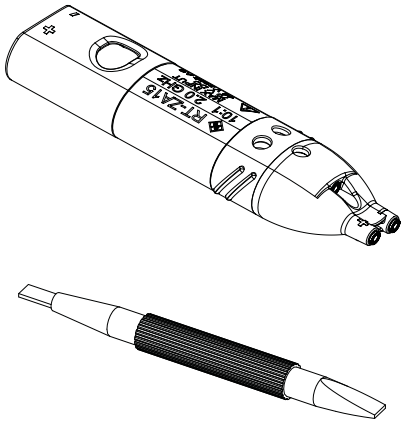
Accessories	Items	Quantity
	External attenuator	1
	Adjustment tool	1




Table 2-3: Optional clips and leads

Accessories	Items	Quantity
R&S RT-ZA4 mini clips	Mini clip	10
R&S RT-ZA5 micro clips	Micro clip	4
R&S RT-ZA6 lead set	Lead, 6 cm / 2.4 in	5
	Lead, 15 cm / 5.9 in	5

Table 2-4: Optional pins

Accessories	Items	Quantity
R&S RT-ZA7 differential pin set	Signal pin, solder-in	20
	Signal pin, variable spacing	10
	Browser adapter, pogo / pogo	1
	Browser adapter, rigid / pogo	1
	Adapter, square pin	2

Table 2-5: Optional adapters

Accessories	Items	Quantity
	<p>R&S RT-ZA9 probe box to N / USB adapter</p> <p>The adapter connects the R&S RT-ZD10/20/30 differential probe to any other oscilloscope or any other measurement instrument (e.g. a network or spectrum analyzer).</p> <p>Using the USB interface of the adapter, the probe can be powered and controlled from any conventional PC. However, full software functionality is only provided by the supported oscilloscopes (see data sheet).</p>	1
	<p>R&S RT-ZA50 probe interface extender</p> <p>The adapter is a breakout box that leads out the R&S probe interface to the following standard connectors: USB-C for power and control, SMA for signal and DC jack for auxiliary supply.</p> <p>Together with the R&S RT-ZA51 probe to 3.5 mm adapter, it moves the R&S probe interface closer to your test setup.</p>	1
	<p>R&S RT-ZA51 probe to 3.5 mm adapter</p> <p>The probe adapter has an R&S probe interface and standard connectors USB-C, 3.5 mm and DC jack. Using this adapter, you can power and control your Rohde & Schwarz probe without an appropriate Rohde & Schwarz oscilloscope.</p> <p>Together with the R&S RT-ZA50 probe to 3.5 mm adapter, it moves the R&S probe interface closer to your test setup.</p>	1

2.4.3 Service accessories

To order accessories for servicing the probe, contact your Rohde & Schwarz service center. The following accessories are available:

Table 2-6: Service accessories

Item	Description
R&S RT-ZK2	The service kit is used to calibrate the probe, to do performance tests, and for servicing. The service kit includes all adapters and accessories to connect the probe to the required measuring instruments.
R&S RT-ZD10/20/30 Service Manual	The service manual contains a detailed description of the performance test to verify the specifications, and other important service procedures.

3 Connecting the probe

3.1 Handling the probe

The R&S RT-ZD10/20/30 can withstand a moderate amount of physical and electrical stress. To avoid damage, treat the probe with care:

- Handle the probe by the probe head or probe box.
- Prevent the probe from receiving mechanical shock.
- Avoid strain on the probe cable and route it carefully.
- Do not spill liquids on the probe.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- ▶ **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

Discharge cables and probe clips before you connect them.

3.2 Connecting the probe to the oscilloscope

The probe is designed for usage with oscilloscopes that have a Rohde & Schwarz probe interface. Supported Rohde & Schwarz oscilloscopes are listed in the probe's data sheet.

- ▶ **NOTICE!** Risk of damaging the probe.
Connect the probe only to an instrument with Rohde & Schwarz probe interface. Never connect it to a usual BNC jack, because this can damage the probe interface.

Identification of the probe

Connect the probe box (1) to the Rohde & Schwarz probe interface of the oscilloscope (2).

The probe snaps in when connected properly to the port.

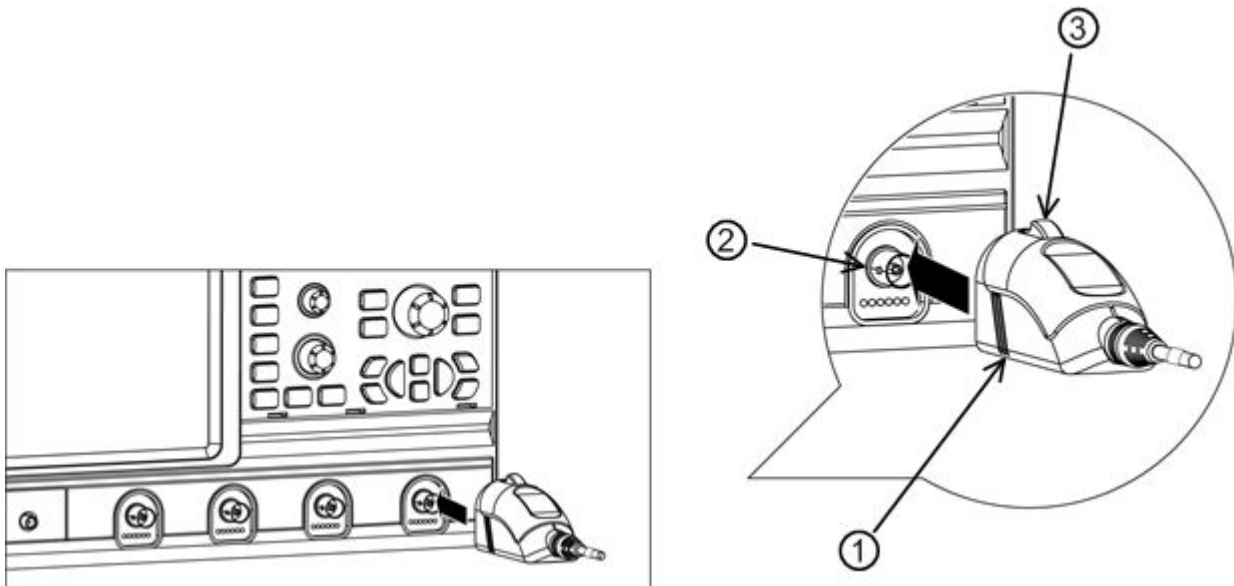


Figure 3-1: Connecting the probe to the Rohde & Schwarz oscilloscope

- ▶ To disconnect the probe:
 - a) Press and hold the release button (3).
 - b) Pull the probe box away from the oscilloscope.

During usage, the probe slightly heats up. Warming is normal behavior and not a sign of malfunction.

3.3 Identification of the probe

When the probe is connected to the oscilloscope, the oscilloscope recognizes the probe and reads out the probe-specific parameters.

The oscilloscope settings for attenuation and offset are automatically adjusted. After the probe is connected to the oscilloscope and the settings are adjusted, the waveform is shown for the channel to which the probe is connected.

Connecting the probe to the DUT

The complete probe information is shown in the probe settings dialog. For more information, refer to the user manual of your oscilloscope.

3.4 Connecting the probe to the DUT

This chapter describes the different ways of connecting the probe to the DUT. In addition, the usage of the supplied accessories is explained.

Handling the accessories

- The maximum non-destructive input voltage is ± 30 V. A higher input voltage can destroy the probe and the accessories.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries.
- Always keep the connections as short as possible for best performance and signal integrity.
- When transporting the accessories, use the boxes supplied with the probe.

The R&S RT-ZA15 external attenuator has the same tip - and the same signal and ground sockets - as the R&S RT-ZD10/20/30 probe head. All accessories for the probe can be used with the external attenuator.


Considerations for soldering

- Do not leave the soldering iron in contact with the probe tip for more than a few seconds at a time. Excess heat can damage the probe.
- Some solder-in accessories are very fine and sensitive. Stabilize the probe using appropriate means (e.g. adhesive pads, probe positioner) to protect the solder joint from excessive mechanical stress.

Connecting the probe to the DUT

Pins

Signal pin, solder-in

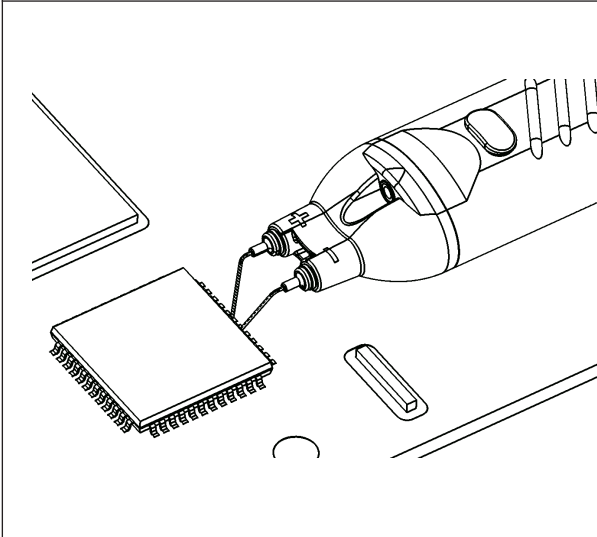


The fine wires on the pins are best suited to making secure contact with small contact points, such as SMT components or IC pins.

The wires have an insulating finish to prevent unwanted shorts. There is no need to strip the wires because the finish dissolves during soldering.

- Use tweezers to insert the solder-in pins into the signal sockets on the probe.
- Cut the wires to the appropriate length. Try to keep them as short as possible.
- Stabilize the probe, for example, by using adhesive tape.

Distance range: 0 mm to 25 mm (0 mil to 1000 mil)

Signal pin, variable spacing

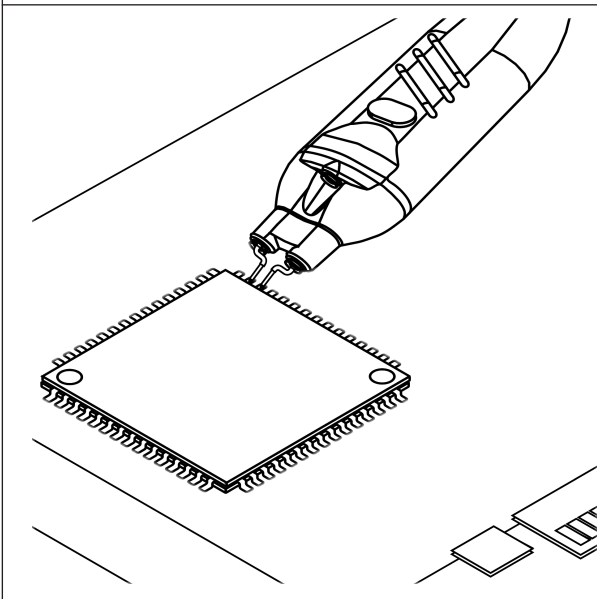


The signal pins are held to the DUT to tap off the measurement signal. They are designed for various applications, e.g. measurements on SMT resistors, IC pins, conductors or vias.

- Rotate the pins to adjust the distance between the probe tips.

Distance range: 0 mm to 10 mm (0 mil to 400 mil)

Adapters


Adapter, square pin

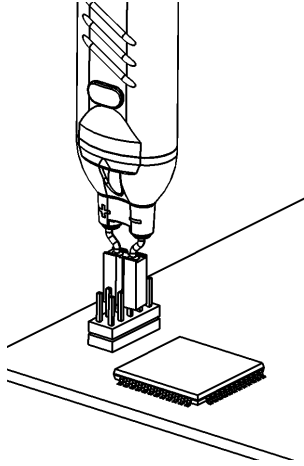

The square pin adapter is used for plugging the probe onto pin strips with a pitch of 2.54 mm (100 mil).

Distance range: 2.54 mm (100 mil)

Browser adapter

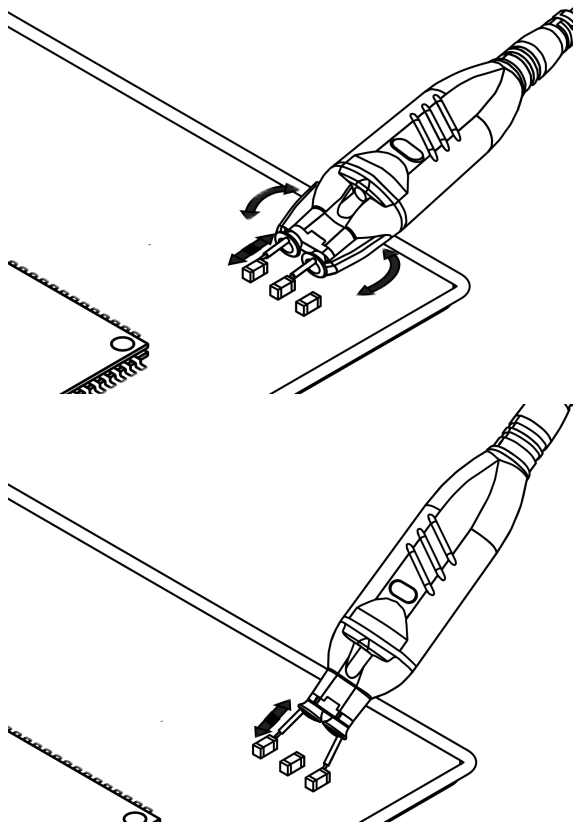


The spring-loaded browser adapter allows handheld probing with maximum convenience. It can establish a firm contact to the test point because it compensates for minor unevenness and movements.

- Turn the levers to set the pin distance. A built-in stop prevents unwanted turning of the signal pins when probing.

Distance range: 0 mm to 10 mm (0 mil to 400 mil)

Connecting the probe to the DUT

Flex adapter, solder-in

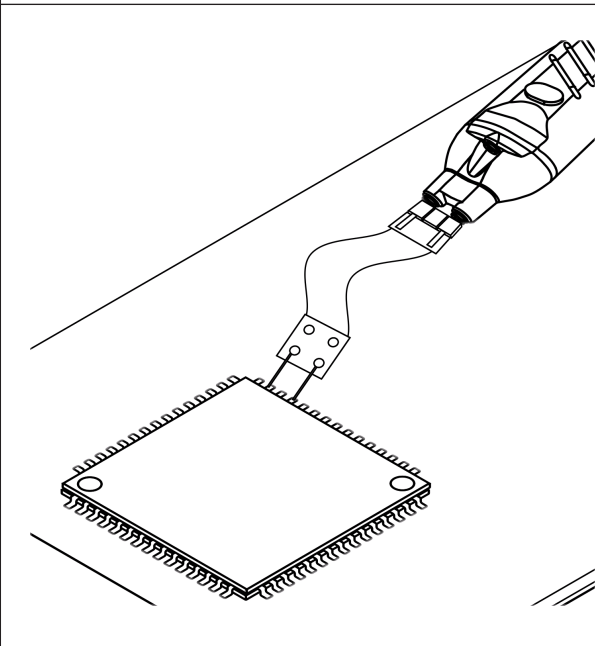

The flex adapter well suited for creating solid contact with test points that are hard to reach (e.g. between two inserted boards).


The flex adapter reduces the probe rise time, but is designed to ensure optimum settling. The lines on the flex adapter are implemented as a twisted pair to minimize unwanted coupling. Flex adapters are preferred over leads or clips.

- Solder the two wires at the tip of the flexible line to the contact points.
- Insert the pins on the other end of the adapter in the signal receptacles of the probe.

Two different flex adapters are included: 4 cm (1.6 in) and 10 cm (3.9 in).

Distance range: 0 mm to 12 mm (0 mil to 470 mil)

Flex adapter, square pin

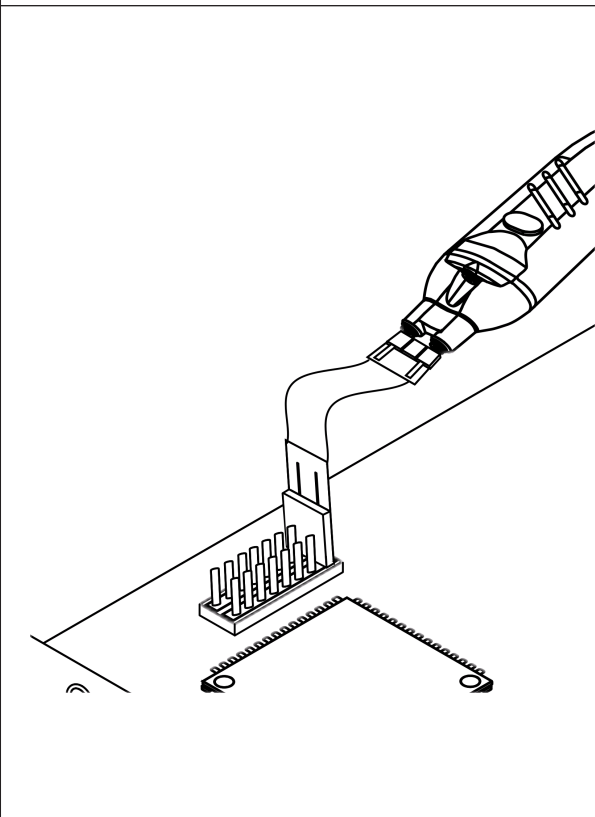

The flex adapter is used for plugging the probe onto pin strips with a pitch of 2.54 mm (100 mil) that are hard to reach, e.g. between two inserted boards. The flexible line makes it possible to connect two or more probes to adjacent pins without the probes blocking each other.

The flex adapter reduces the probe rise time, but is designed to ensure optimum settling. The conductors on the flex adapter are implemented as a twisted pair to minimize unwanted coupling. Flex adapters are preferred over leads or clips.

- Plug the adapter on the pin strip on the DUT.
- Insert the pins on the other end of the adapter in the signal receptacles of the probe.

Two different flex adapters are included: 4 cm (1.6 in) and 10 cm (3.9 in).

Distance range: 2.54 mm (100 mil)

Do *not* use the flex adapter at voltages beyond ± 30 V.

Leads and clips

Short and long lead


The lead provides a flexible connection to the DUT. It is plugged onto a pin on the DUT and connected to the signal sockets or the ground socket. In addition, you can use micro and mini clips with the leads.

Length:

Short lead: 60 mm (236 mil)

Long lead: 150 mm (591 mil)

Mini clip

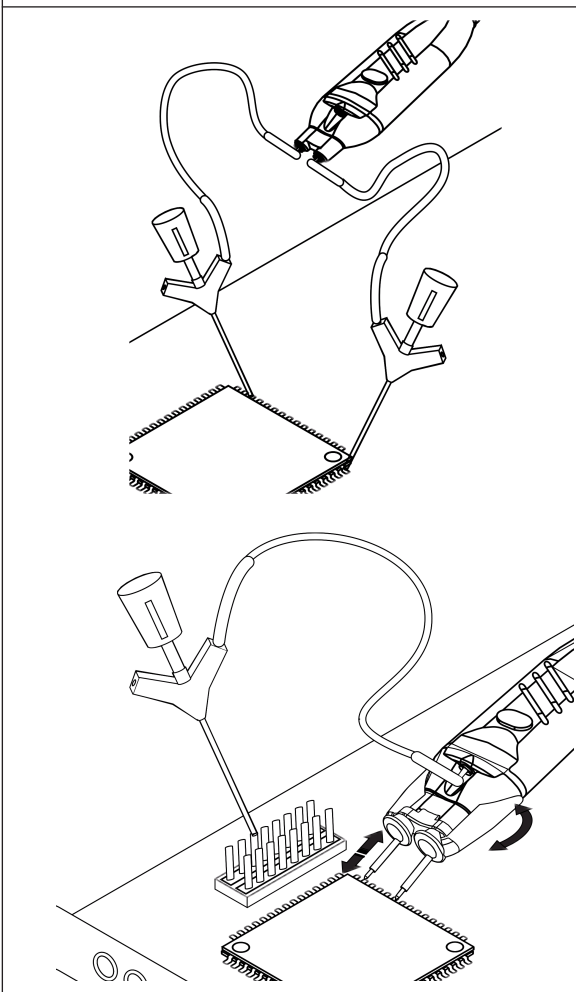


The mini clip is designed for probing large IC pins, wires and through-hole components.

- Clamp the mini clip to a pin.
- Connect it to the signal socket or the ground socket using a lead.

Connecting the probe to the DUT

Micro clip

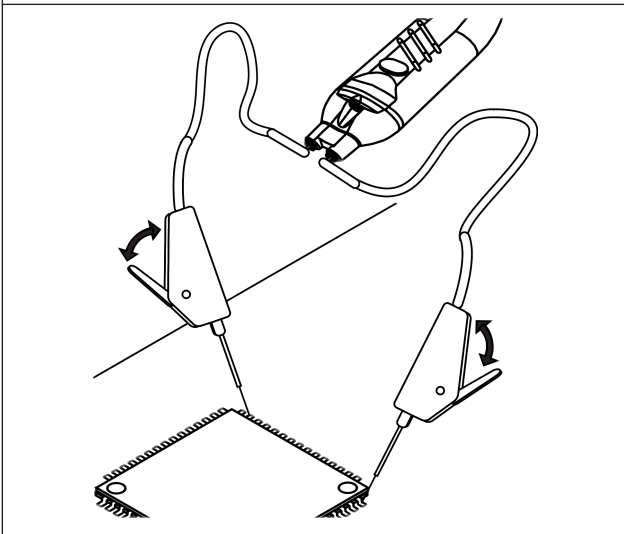

The micro clip is designed for probing IC pins and thin wires in fine-pitch applications.

- Clamp the micro clip to a pin.
- Connect it directly to the signal socket, or use a lead to connect it to the signal socket or the ground socket.

4 R&S RT-ZA15 external attenuator

The R&S RT-ZA15 is an external 10:1 attenuator for the R&S RT-ZD10/20/30 differential probe. It extends the input voltage range of the R&S RT-ZD10/20/30 probe. Both dynamic range and operating voltage window are increased.

4.1 Key characteristics

The combination of R&S RT-ZA15 external attenuator and R&S RT-ZD10/20/30 differential probe has the following key characteristics:

Attenuation	100:1
Bandwidth	DC to 1.0 GHz (with R&S RT-ZD10) DC to 1.5 GHz (with R&S RT-ZD20) DC to 2.0 GHz (with R&S RT-ZD30)
Dynamic range (differential input)	±50 V with ±50 V offset capability
Differential input resistance	1 MΩ
Differential input capacitance	1.3 pF
Maximum input voltage for DC signals	±60 V between each signal socket and the ground socket
Maximum effective input voltage for AC signals	30 V (eff) between each signal socket and the ground socket
Maximum transient peak voltage	±42.4 V

The maximum input voltage is derated for higher frequencies. Refer to the "R&S®RT-Zxx High Bandwidth Probes" data sheet for further information.

4.2 Description

The R&S RT-ZA15 external attenuator with inserted R&S RT-ZD10/20/30 is shown in [Figure 4-1](#).

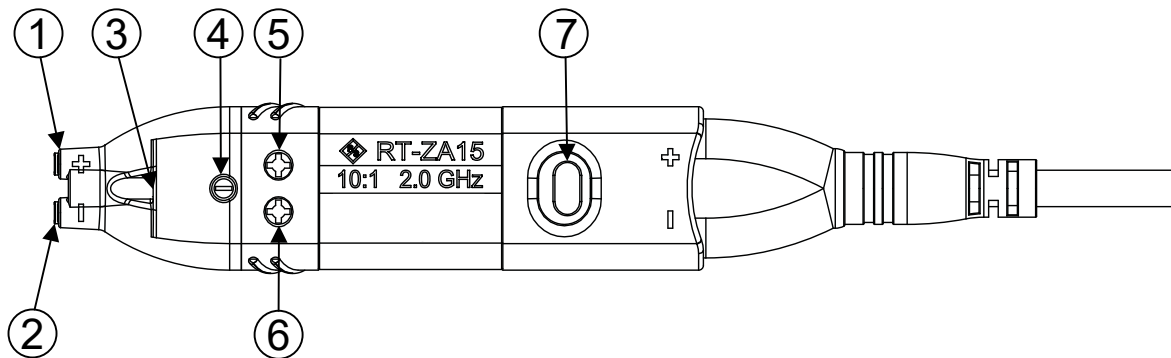


Figure 4-1: R&S RT-ZA15 external attenuator with inserted R&S RT-ZD10/20/30


- 1 = Positive signal socket
- 2 = Negative signal socket
- 3 = Ground socket
- 4 = Trimmer for DC common mode rejection
- 5 = Trimmer for pulse response of positive input
- 6 = Trimmer for pulse response of negative input
- 7 = Notch for micro button

The R&S RT-ZA15 external attenuator has the same tip - and the same signal and ground sockets - as the R&S RT-ZD10/20/30 probe head. All accessories for the probe can be used with the external attenuator.

4.3 Inserting the probe


To insert the probe in the R&S RT-ZA15 external attenuator and enable it on the oscilloscope, proceed as follows.

1. Remove all accessories from the R&S RT-ZD10/20/30 probe head.
2. Insert the probe into the rear opening of the attenuator with correct polarity. Make sure that the "+" and "-" marks on the probe and the attenuator match, and the notch for the micro button is on the same side as the micro button.

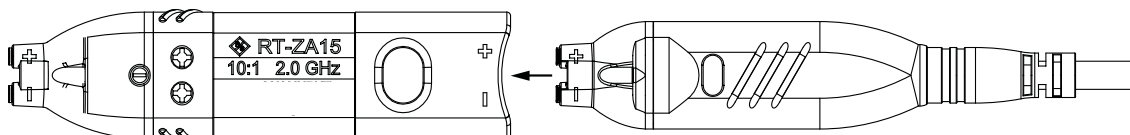

Attaching the attenuator with wrong polarity can damage the probe and the external attenuator.

3. Press the probe gently into the attenuator until the micro button matches the notch on the attenuator in a central position.

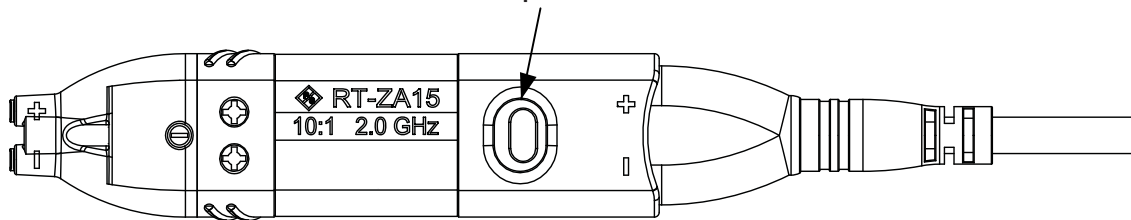

4. The oscilloscope does not detect the external attenuator automatically. To adjust the scaling for display, R&S ProbeMeter and offsets, select the attenuator in the probe setup of the oscilloscope. For more information, refer to the user manual of your oscilloscope.
5. When you use the probe together with the external attenuator, hold them at the gripping section of the attenuator to ensure optimal mechanical stability.

4.4 Adjusting

The R&S RT-ZA15 external attenuator is factory-adjusted. For usual measurements, further adjustment is not necessary. For use cases with specific requirements to common mode rejection, you can adjust the external attenuator when you use it together with a specific R&S RT-ZD10/20/30 probe. Therefore, the external attenuator has 3 trimmers to adjust the common mode rejection at DC and to adjust the pulse responses of the positive and negative inputs.


4.4.1 Adjusting the DC common mode rejection

Equipment:

- Rohde & Schwarz oscilloscope
- DC voltage source, max. output voltage 30 V, floating output, e.g. HMP4040
- BNC to 4 mm dual banana adapter
- BNC to grabber adapter, e.g. Pomona mod. 3789
- 2 mini clips
- 2 leads, 6 cm/2.4 in
- 1 lead, 15 cm/5.9 in
- Small screwdriver

During the following procedure, both signal sockets (positive and negative) are connected to the Hi output of the DC voltage source. The ground socket is connected to the Lo output of the DC voltage source.

1. Connect the probe to C1 of the Rohde & Schwarz oscilloscope.
2. Plug the BNC to 4 mm dual banana adapter onto the OUTPUT HI/LO of the DC voltage source. Ensure that the BNC shield is connected to LO.
3. Connect the BNC to grabber adapter to the BNC to 4 mm dual banana adapter.
4. Using a mini clip and 2 leads, 6 cm/2.4 in, connect both signal inputs of the external attenuator to the grabber. Use both inputs of the mini clip.
5. Using a mini clip and a lead, 15 cm/5.9 in, connect the ground input of the external attenuator to the shield of the BNC to 4 mm dual banana adapter.

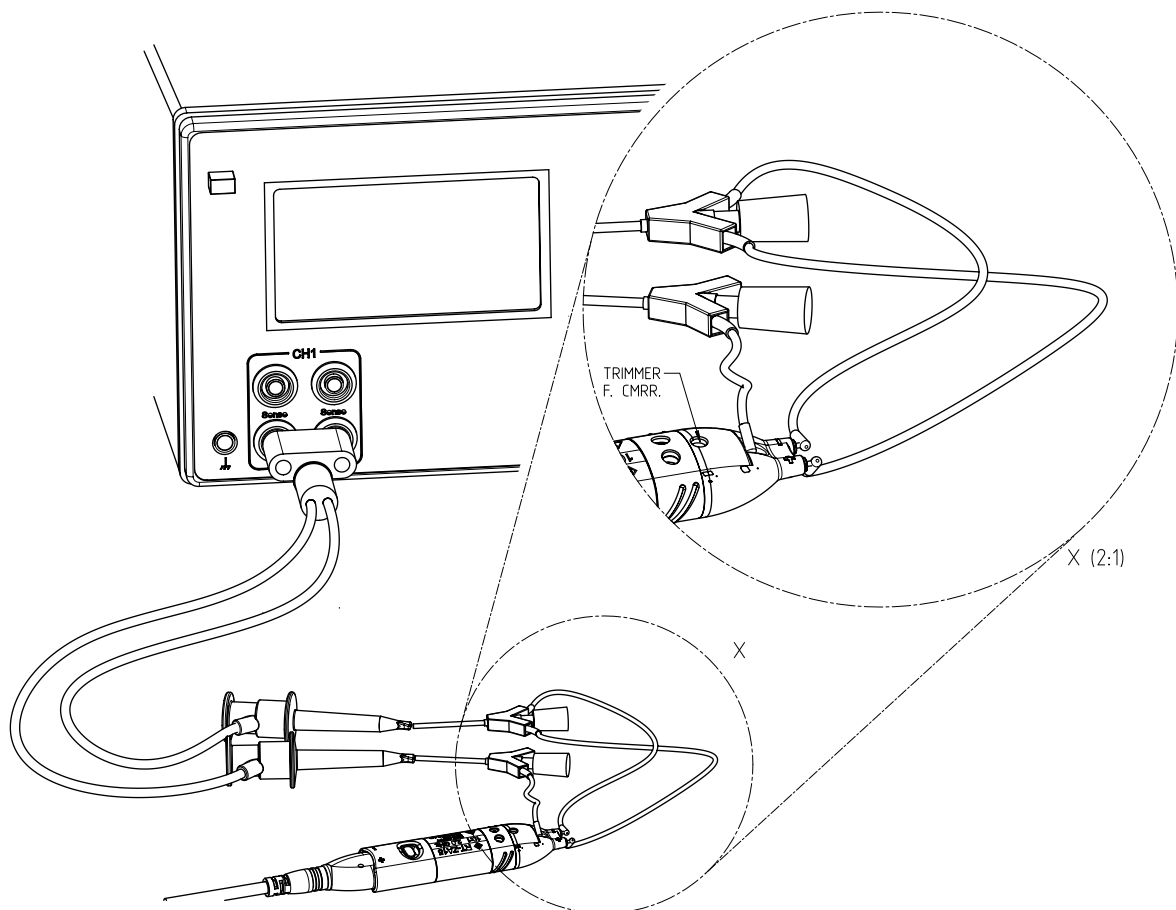

6. Set up the oscilloscope:
 - Horizontal scale = 1 ms/div
 - Bandwidth = 20 MHz

- Vertical scale = 100 mV/div
- Trigger source = C1, Trigger mode = Auto, Run cont
- Acquisition mode: Decimation = High res, Arithmetic = Average, Average count/N-single count = 10
- Measurement setup: Source = C1, Measurement = Mean, State = On
- Probe setup for C1: select "Attenuator RT-ZA15"
- Vertical setup of C1: Offset = 0 V, Position = 0 div

7. Adjust the voltages:

- a) Set the voltage of the DC voltage source to 0 V.
- b) Check the displayed value in the results table: Mean = V1.
- c) Set the voltage of the DC voltage source to 30 V.
- d) Check the displayed value in the results table: Mean = V2.
- e) Using the small screwdriver, turn the trimmer for DC common mode rejection on the external attenuator until $V2 = V1$.

4.4.2 Adjusting the pulse response of the positive and negative inputs


Keep the adjustment of the positive and negative input as symmetric as possible to ensure a good common mode rejection for AC signals.

Equipment:


- Rohde & Schwarz oscilloscope
- 1 mini clip
- 1 lead 6 cm/2.4 in

Adjusting the pulse response of the positive input:

1. Connect the probe to C1 of the oscilloscope.
2. Using the lead and a mini clip, connect the negative input of the external attenuator to the ground clamp of the oscilloscope.
3. Press the positive input of the external attenuator directly to the square wave signal clamp.

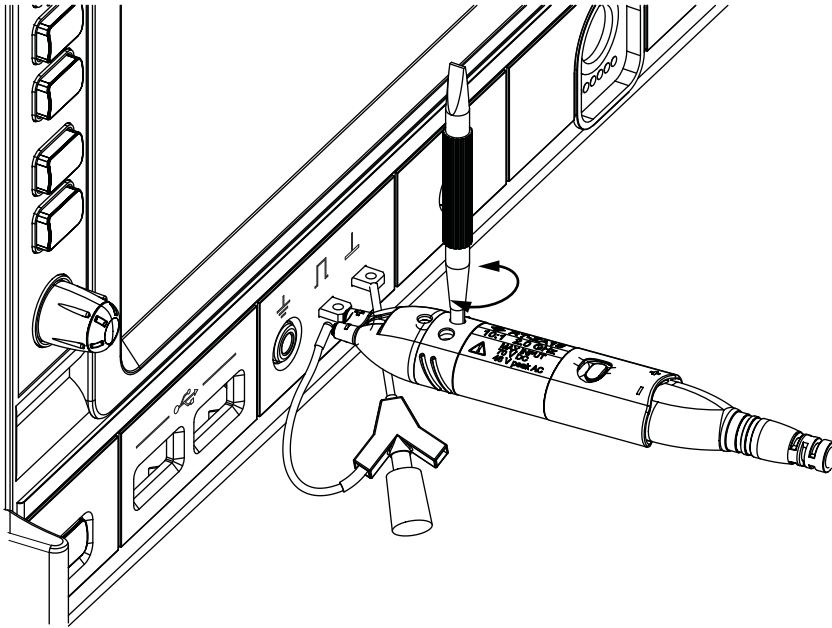

4. Set up the oscilloscope:
 - Horizontal scale = 1 μ s/div
 - Bandwidth = 20 MHz
 - Trigger source = C1, Trigger mode = Auto, Run cont
 - Trigger level = 500 mV, Trigger slope = Positive
 - Acquisition mode: Decimation = High res, Arithmetic = Average, Average count/N-single count = 10
 - Probe setup for C1: select "Attenuator RT-ZA15"
5. Using the adjustment tool, turn the trimmer for pulse response of the positive input on the external attenuator until an optimum square wave response is visible on the oscilloscope screen.

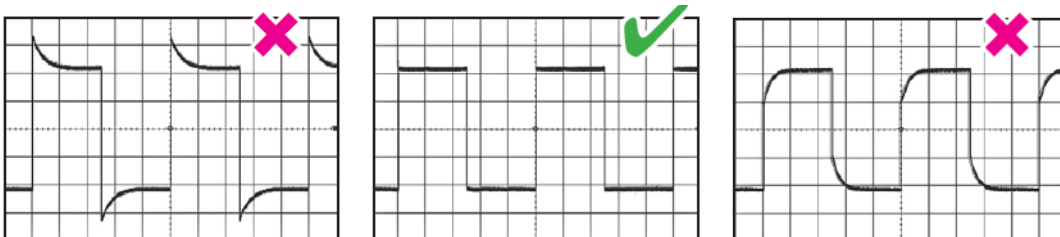


Repeat the upper procedure to adjust the pulse response of the negative input:

1. Using the lead, connect the positive input of the external attenuator to the ground clamp of the oscilloscope.
2. Press the negative input directly to the square wave signal clamp.
3. Set the Trigger level = -500 mV, Trigger slope = Negative

Adjusting

- Using the adjustment tool, turn the trimmer for pulse response of the negative input until an optimum square wave response is visible on the oscilloscope screen.

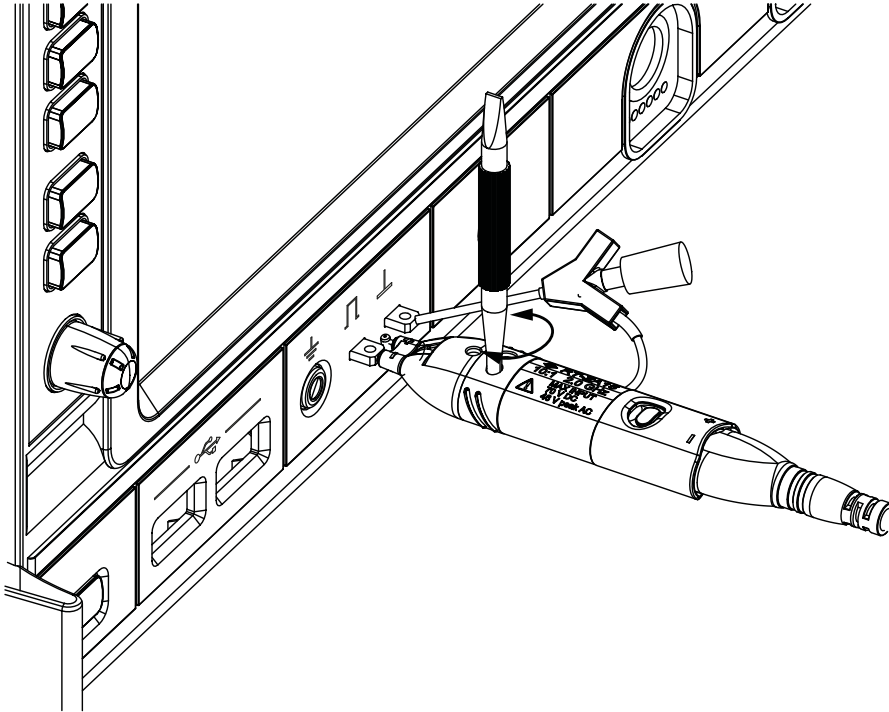

5 Features and characteristics of R&S RT-ZD10/20/30 probes


5.1 Zero adjustment

The zero error can impair the measurement results, therefore, correct the zero error if necessary. The zero error of the probe itself is very small.

However, differences in DUT and oscilloscope ground levels can cause larger zero errors visible on the oscilloscope's screen. If the DUT is not floating but ground-referenced, an zero adjustment improves the measurement results.

The zero error is corrected at the oscilloscope. Depending on the type of the used oscilloscope, correction is done automatically using the AutoZero function, or manually ("Zero Adjust" or similar setting). Refer to the oscilloscope's user manual for available functionality and its usage.

1. Connect the probe to the oscilloscope.
2. Set the oscilloscope to the smallest vertical scale.
3. Short the signal pins and the ground pin together.

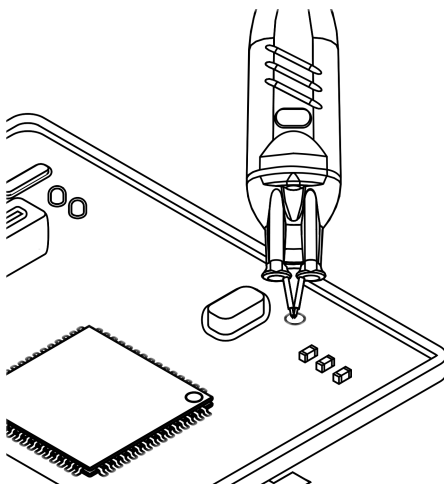

4. Adjust the zero position of the waveform using the appropriate function of the oscilloscope ("AutoZero", "Zero Adjust" or similar).

The waveform is set to 0 V on the horizontal centerline of the oscilloscope.

5.2 Micro button

The micro button provides easy and quick access to important functions of the Rohde & Schwarz oscilloscope. After a function has been assigned, pressing the micro button remotely controls this specific function on the base unit. For example, "Run continuous" or "Run single" are often assigned to the micro button.

The configuration of the micro button is part of the probe settings of the channel to which the probe is connected. For more details, see the oscilloscope's user manual.

5.3 R&S ProbeMeter

The R&S ProbeMeter is an integrated voltmeter that measures DC voltages with higher precision compared to the oscilloscope's DC accuracy. The DC voltage is measured continuously and runs parallel to the time domain measurement of the oscilloscope.

High-precision measurements are achieved by immediate digitization of the measured DC voltage at the probe tip.

The R&S ProbeMeter measures the differential and common mode DC voltages simultaneously and without reconnecting the probe. For a definition of differential and common mode input voltages, see [Chapter 5.5, "Characteristics of differential probes"](#), on page 40.

When the R&S ProbeMeter is active, the measured values are displayed on the oscilloscope. The R&S ProbeMeter state is part of the probe settings of the channel to which the probe is connected. For details, refer to the user manual of the Rohde & Schwarz oscilloscope.

Advantages of the R&S ProbeMeter:

- Measures DC voltages of different levels, no need to adjust the measurement range of the oscilloscope.
- True DC measurement (integration time > 100 ms), not mathematical average of displayed waveform.
- High measurement accuracy and low temperature sensitivity.
- Simple means of setting the oscilloscope's trigger level and vertical scaling if a waveform is not visible.

- Independent of oscilloscope settings for position, vertical scale, horizontal scale, and trigger.
- Unique way to detect unexpected or inadmissible common mode voltages, e.g. bias points - measurement of common mode DC voltages without reconnecting the probe.
- Differential measurement range ± 5 V + offset compensation setting.
Common mode measurement range ± 8 V + common mode offset compensation setting.

The R&S ProbeMeter enables the ground-referenced measurement of voltages. A difference in the ground levels of oscilloscope and DUT can cause an unwanted zero error. In this case, correct the zero error, see [Chapter 5.1, "Zero adjustment"](#), on page 35.

5.4 Offset compensation

The R&S RT-ZD10/20/30 features two offset compensation functions: a differential offset compensation and a common mode offset compensation. Each function compensates a particular DC component of the input signal, even in front of the active amplifier in the probe tip. For a definition of differential and common mode input voltages, see [Chapter 5.5, "Characteristics of differential probes"](#), on page 40.

5.4.1 Differential offset

The differential offset compensation is often referred to as *offset compensation*.

The differential offset function can compensate a DC voltage applied between the positive and the negative input socket. This is particularly helpful if a small single-ended signal with a large DC offset is measured with a differential probe, for example, with the negative input socket connected to ground. As the R&S RT-ZD10/20/30 measures differential voltages, setting a differential offset compensation is directly visible on the oscilloscope screen as a voltage offset of the measured waveform.

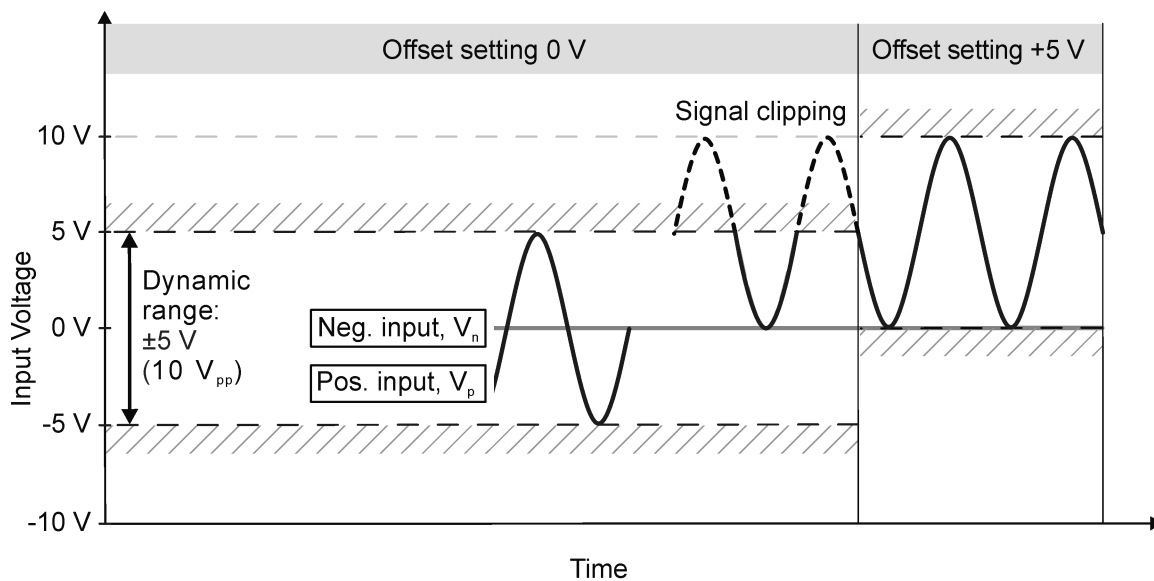


Figure 5-1: Differential offset compensation for a single-ended measurement (negative input connected to ground) using an R&S RT-ZD10/20/30

There are several ways to set the offset compensation:

- Use the vertical knob at the oscilloscope if its function is set to offset.
- Enter the offset value in the channel settings or probe settings on the Rohde & Schwarz oscilloscope.
- Use the micro button to measure input signals with different DC offsets: assign "Offset to mean" to the micro button. See also [Chapter 5.2, "Micro button"](#), on page 36.

For more details, see the oscilloscope's user manual.

5.4.2 Common mode offset

Common mode offset compensation is available for R&S RT-ZD probes with serial number $\geq 200\,000$. It can compensate a common DC voltage applied to both input sockets (referenced to the ground socket). This is particularly helpful for measurements on differential signals with high common mode levels, for example, current measurements using a shunt resistor.

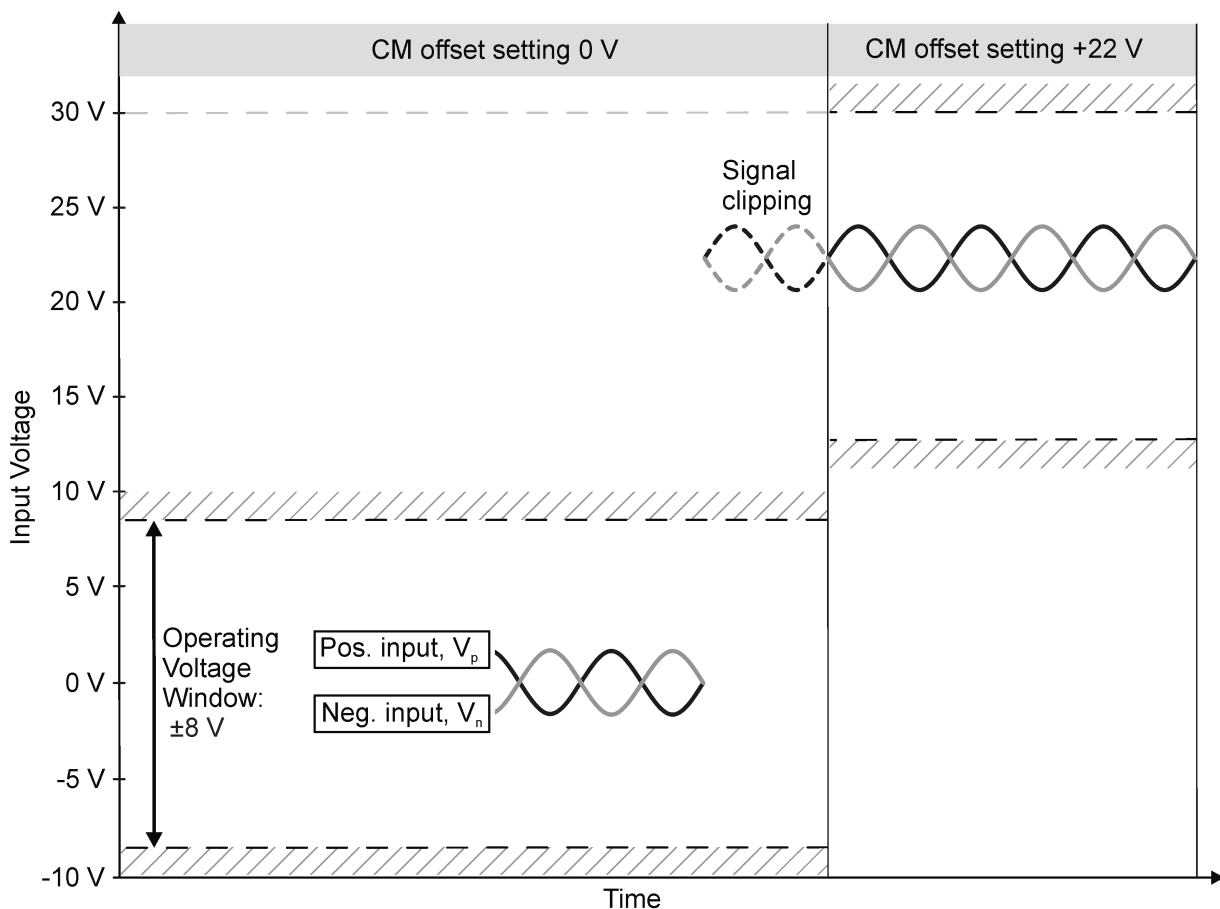


Figure 5-2: Common mode (CM) offset compensation for a differential measurement

If the input signals fit into the operating voltage window of the R&S RT-ZD10/20/30, it is not necessary to set a common mode offset compensation.

i The R&S RT-ZD10/20/30 measures only differential input signals. Common mode signals are suppressed by the probe. Therefore, the common mode offset compensation is not directly visible on the oscilloscope screen, see also [Chapter 5.5.2, "Dynamic range and operating voltage window"](#), on page 42. An incorrect common mode offset compensation can lead to unwanted clipping effects. Measuring the common mode input voltage using the R&S ProbeMeter is a convenient way to detect breaches of the operating voltage window.

If supported by the Rohde & Schwarz oscilloscope, you can set the "CM offset" in the probe settings on the instrument. For more details, see the oscilloscope's user manual.

5.5 Characteristics of differential probes

A differential probe has three sockets: the positive signal socket (+), the negative signal socket (-), and the ground socket.

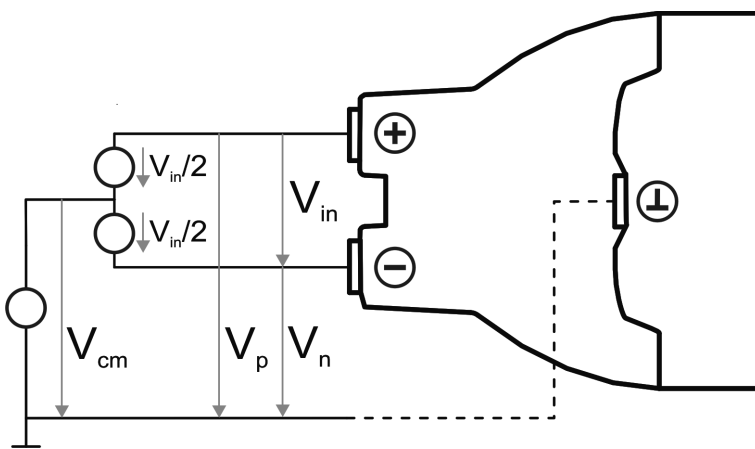


Figure 5-3: Input voltages on a differential probe

Multiple input voltages can be defined for a differential probe:

- Differential mode input voltage (V_{in} , V_{dm})
Voltage between the positive and negative signal sockets
- Positive single-ended input voltage (V_p)
Voltage between the positive signal socket and the ground socket
- Negative single-ended input voltage (V_n)
Voltage between the negative signal socket and the ground socket
- Common mode input voltage (V_{cm})
Mean voltage of positive and negative signal sockets referred to the ground socket, respectively

Two of these voltages are independent values, the other two can be calculated:

$$V_{in} = V_p - V_n$$

$$V_{cm} = \frac{V_p + V_n}{2}$$

Typically, the differential and the common mode input voltages are used to describe the behavior of a differential probe.

The output voltage V_{out} , which is displayed on the base unit, is obtained by superimposing the voltages generated from the differential mode input voltage and from the common mode input voltage:

$$V_{out} = A_{vdm} V_{in} + A_{vcm} V_{cm}$$

In this equation, A_{vdm} is the amplification of the differential mode input voltage and A_{vcm} is the amplification of the common mode input voltage.

An ideal differential probe is expressed as $A_{vdm} = 1$ and $A_{vcm} = 0$. In this case, the displayed voltage exactly equals to the differential input voltage V_{in} between the two signal sockets, and the common mode input voltage is suppressed.

5.5.1 Common mode rejection ratio (CMRR)

An *ideal* differential probe outputs a voltage that depends only on the differential input voltage V_{in} between positive and negative input, and suppresses the common mode voltages. This is equivalent to an infinite common mode rejection ratio (CMRR).

In contrast, real probes have a finite CMRR, resulting in a small part of the common mode voltage visible in the output signal. The CMRR is defined as the ratio of the amplifications of differential and common mode input signals:

$$CMRR = \frac{A_{vdm}}{A_{vcm}}$$

Example:

If a differential input voltage of 1 V yields an output voltage of 100 mV ($A_{vdm} = 0.1$) and a common mode input voltage of 1 V an output voltage of 1 mV ($A_{vcm} = 0.001$), the CMRR is 100 (40 dB).

A high CMRR is important if significant common mode signals are encountered at the probe input, for example:

- DC voltages for setting the operating points of active DUTs
- Different ground levels of probe and DUT, e.g. floating DUTs
- An interference that couples equally to both conductors of a differential transmission line
- Probing on ground-referenced signals. In this case, the common mode component is always equal to half of the input voltage.

5.5.2 Dynamic range and operating voltage window

Two separate specifications are necessary to characterize the permissible input voltage range of a differential voltage probe:

- The dynamic range (or "differential mode range") designates the maximum differential voltage V_{in} that can occur between the positive and negative signal pin.
- At the same time, the two voltage values at each of the two signal pins V_p and V_n referenced to the common ground must not exceed a specific limit value. This limitation is referred to as the operating voltage window (some manufacturers also use the less precise term "common mode range" for the same parameter).

If one of these ranges is exceeded, an unwanted signal clipping can occur.

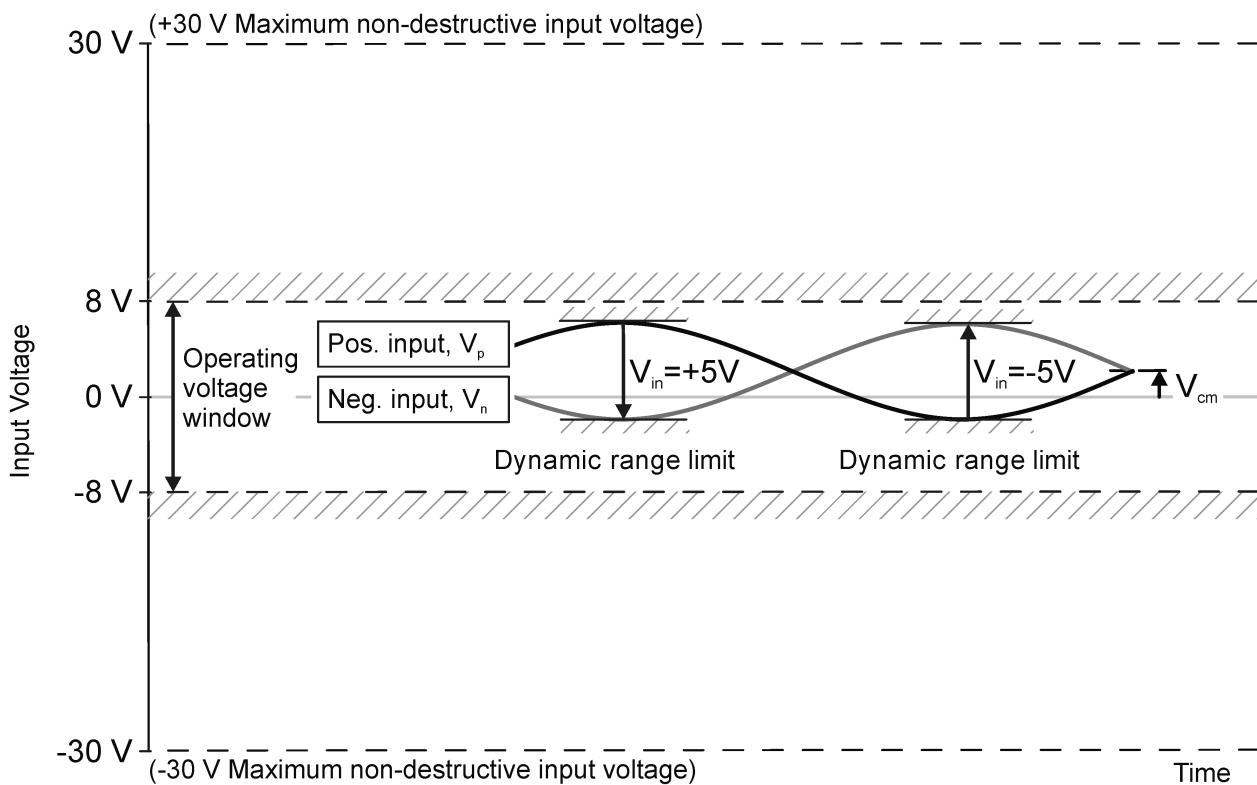


Figure 5-4: Operating voltage window

Signal clipping

Only differential input signals are detected by the probe and displayed by the base unit. Common mode signals are suppressed by the probe. Therefore, the user does not initially recognize that the operating voltage window is exceeded owing to inadmissible common mode voltages. If unexpected clipping occurs, check the positive or negative input voltage relative to ground.

Measuring the common mode input voltage using the R&S ProbeMeter is a convenient way to detect breaches of the operating voltage window owing to excess DC common mode voltages.

5.5.3 Ground connection

It is typically not necessary to connect the ground socket of the probe to the ground of the DUT, as long as the DUT itself is grounded. If the ground of the DUT is floating, e.g. in the case of battery operation, high static potentials between the DUT ground and the probe ground can result in the operating voltage window being exceeded. In this case, connect the probe ground to the DUT ground.

The ground connection can also affect the CMRR of the probe. Problems with unwanted common mode signals can often be improved by adding a ground connection.

5.6 Measurement principles

The R&S RT-ZD10/20/30 differential probe provides an electrical connection between the DUT and the oscilloscope. The probe transfers the voltage of the electrical signal tapped off the DUT to the oscilloscope, where it is displayed graphically. Although a probe has a wide variety of specifications, these specifications can be grouped into two classes of basic requirements:

- High signal integrity of the transferred signal:
With an ideal probe, the output signal that is transferred to the base unit is identical to the input signal between the probe tips, and signal integrity is extremely high. Every real probe, however, transfers the input signal in altered form. A good probe causes only minimum alterations.
How the probe can fulfill this requirement is mainly determined by its bandwidth and CMRR.
- Low loading of the input signal:
Every probe is a load for the signal to be measured. The signal to be measured changes when the probe is connected. A good probe causes only a minimum change to the signal, so that the function of the DUT is not adversely affected.
How the probe can fulfill this requirement is mainly determined by its input impedance.

The parameters of a probe are usually specified for a minimally short connection between the probe and the DUT. With longer connections, the connection inductance has a significant effect on the measurement.

The high-frequency behavior of differential probes is typically characterized in the following environment. The probe is connected to a differential 100 Ω line that is fed by a source with 100 Ω internal impedance and that is terminated into 100 Ω . The voltages at both inputs of the probe are always oppositely equal. The [Figure 5-5](#) shows the equivalent circuit model of a probe that is connected to the DUT.

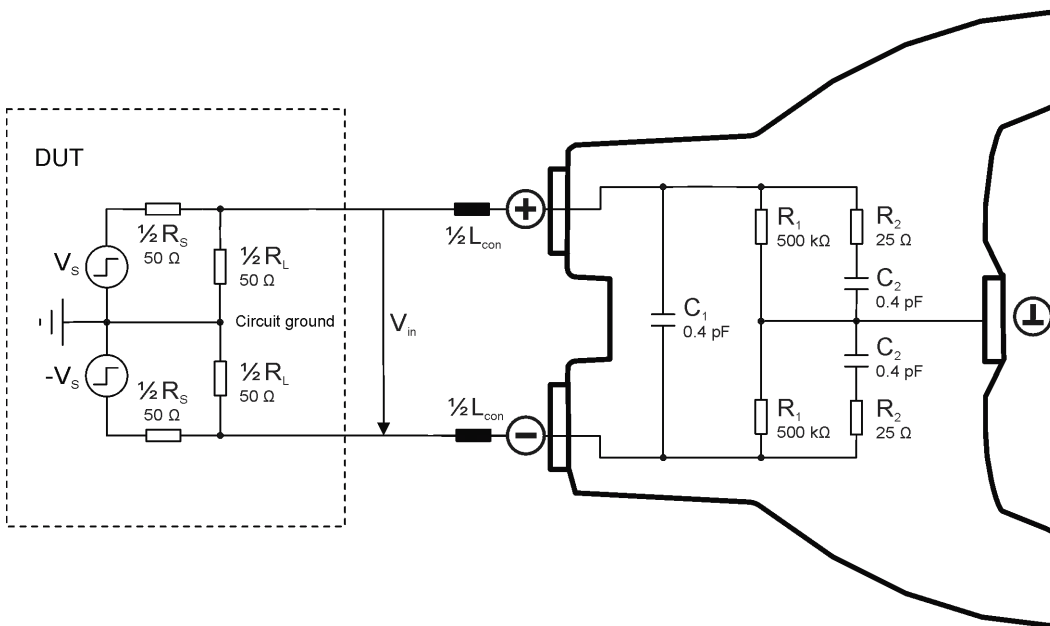


Figure 5-5: Equivalent circuit model of the R&S RT-ZD10/20/30 probe

Table 5-1: Designations

Abbreviation	Description
V_s	Differential voltage between the test point without probe connected
V_{in}	Differential voltage at the test point with probe connected, corresponds to the input voltage of the probe
R_s	Differential source resistance of the DUT
R_L	Differential load resistance of the DUT
R_1, R_2	Probe-specific input resistance
C_1, C_2	Probe-specific input capacitance
L_{con}	Parasitic inductance of the probe connection

5.6.1 Signal integrity of the transferred signal

The following sections describe the effect that bandwidth, connection inductance and common mode rejection ratio have on signal integrity.

5.6.1.1 Bandwidth

The bandwidth BW of a probe is one of its specific parameters. The bandwidth of the probe and the bandwidth of the base unit together form the system band-

width. The following explanations refer to the probe itself, but can also be applied to the entire system.

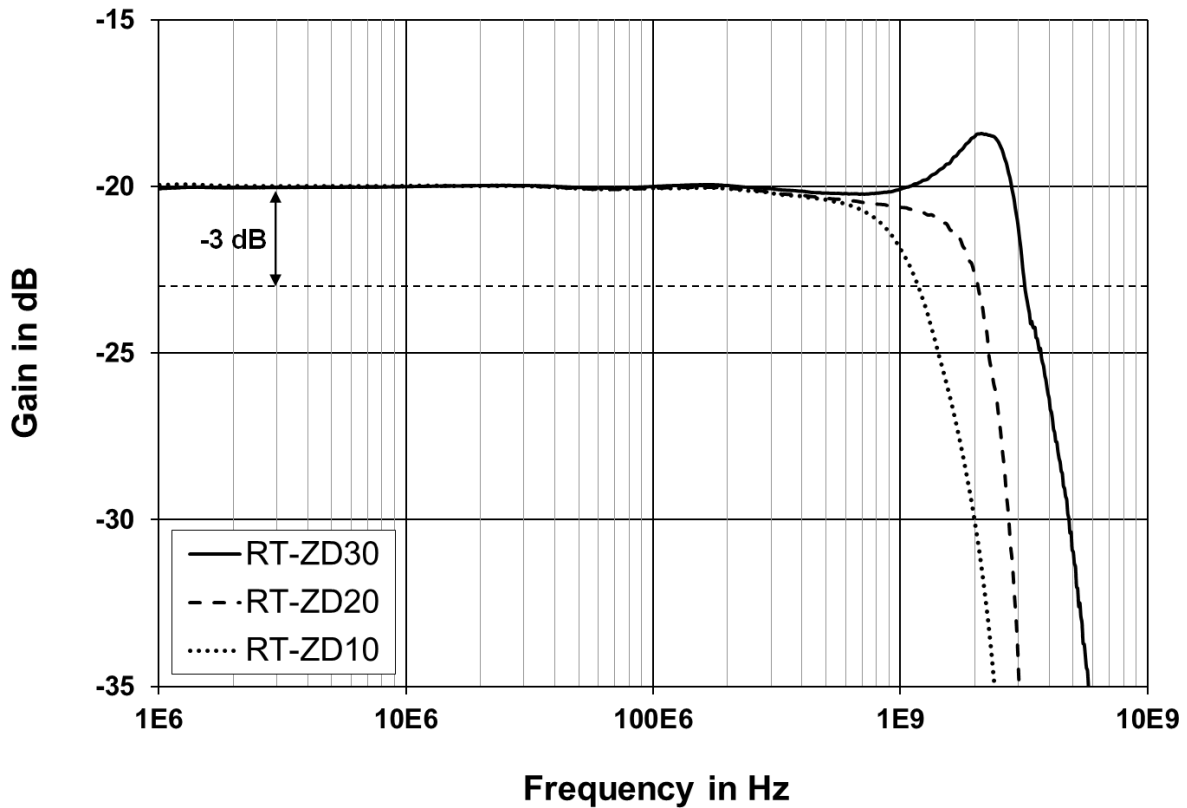


Figure 5-6: Amplitude frequency response of the R&S RT-ZD10/20/30

The bandwidth:

- Specifies the maximum frequency at which a purely sinusoidal signal is still transferred at 70 % (–3 dB) of its amplitude.
- Specifies the transferable spectrum for other waveforms. E.g., with square wave signals, the fifth harmonic should still be within the bandwidth for a high signal integrity.
- Determines the minimum measurable signal rise time. The rise time t_{rise} of the probe is inversely proportional to its bandwidth. The following approximation applies:

$$t_{rise} \approx \frac{0.4}{BW}$$

The [Figure 5-7](#) shows a typical step response of an R&S RT-ZD10/20/30 differential probe.

In addition to bandwidth, a constant amplitude frequency response of the probe is decisive for high signal integrity. The [Figure 5-6](#) shows the typical amplitude frequency response of an R&S RT-ZD10/20/30 differential probe. All frequency components are transferred with the same gain so that the input signal is displayed without distortion.

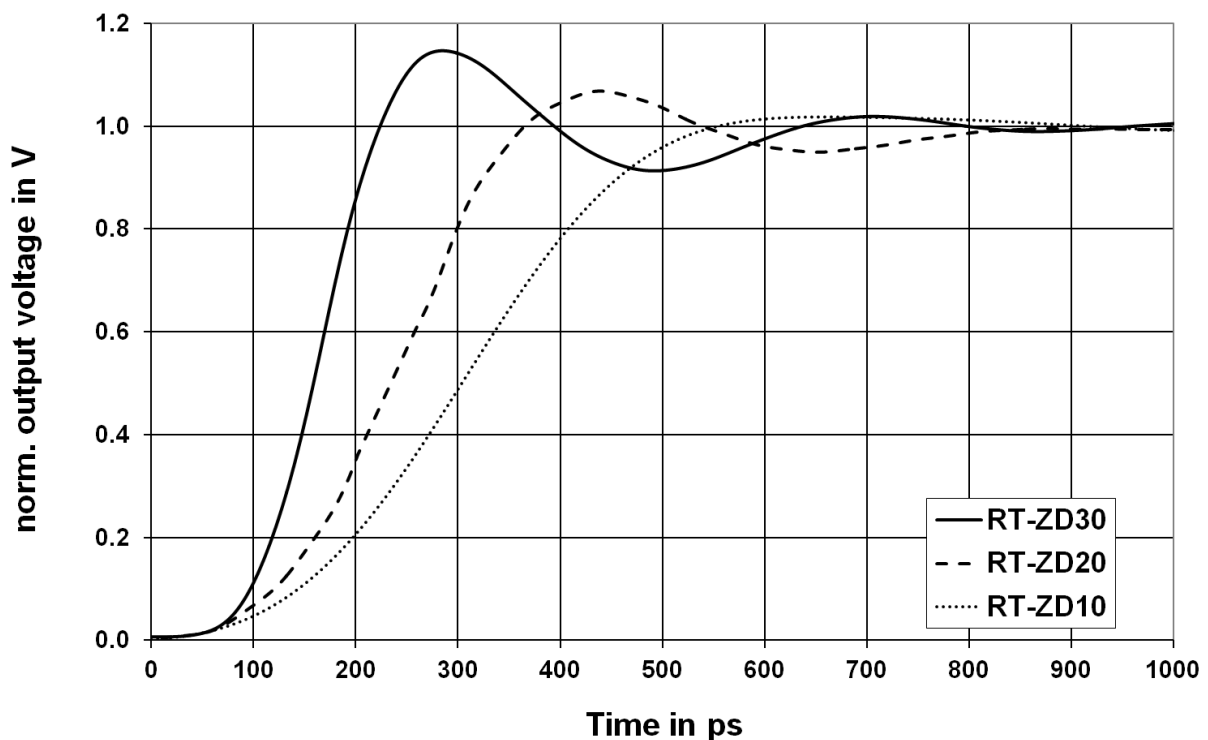


Figure 5-7: Step response of the R&S RT-ZD10/20/30

5.6.1.2 Connection inductance

The connection inductance L_{con} is caused by connecting the probe to the DUT. In contrast to the probe-specific bandwidth, the connection inductance mainly depends on the selected type.

The connection inductance:

- Increases with the length of the connection and the size of the resulting loop area A .
See [Figure 5-8](#).
- Reduces the usable bandwidth and causes ringing with signals having a short rise time, due to a series resonance with the input capacitance.

- Must be as small as possible (short lead length) to maintain high signal integrity.

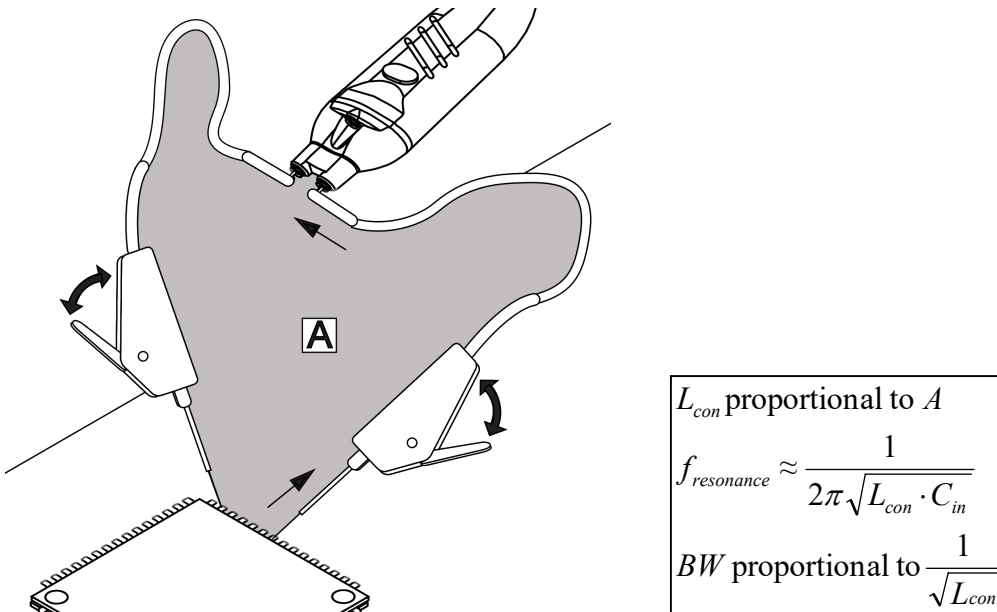


Figure 5-8: Ground connection and connection inductance using the example of R&S RT-ZD10/20/30

The [Table 5-2](#) shows different types of connections between the probe and DUT and the associated connection inductance L_{con} . The table also includes typical bandwidth values, rise time values, and the step responses for each connection in conjunction with an R&S RT-ZD30. For an R&S RT-ZD20, typical bandwidth and rise time values are smaller and limited to 1.5 GHz or 250 ps, respectively. For an R&S RT-ZD10, typical bandwidth and rise time values are also smaller and limited to 1.0 GHz or 350 ps, respectively.

Table 5-2: Connection inductance L_{con} , typical bandwidth, rise time and step response for a R&S RT-ZD30 with different types of connection

Type of connection	Connection inductance L_{con}	Typ. bandwidth and rise time RT-ZD30	Step response
Very short signal pins, solder-in, variable spacing Short browser adapters adapters, square pin	~4 nH	3.2 GHz 110 ps	
	~8 nH	3.0 GHz 120 ps	
Long flex adapters (4.8 cm)	~20 nH	700 MHz 10 - 90%: 800 ps 20 - 80%: 300 ps	
	~60 nH	500 MHz very long settling time	
Very long leads micro clips mini clips			

5.6.1.3 CMRR

The CMRR is very good for low-frequency signals, but it continuously decreases for higher frequencies. Therefore, the CMRR is usually specified as a function of frequency.

The [Figure 5-9](#) shows a typical CMRR for an R&S RT-ZD10/20/30 differential probe with a very symmetrical connection to the DUT. An asymmetrical connection to the test point can decrease the CMRR. To achieve the best possible CMRR, the connection to the DUT should always be as symmetrical as possible.

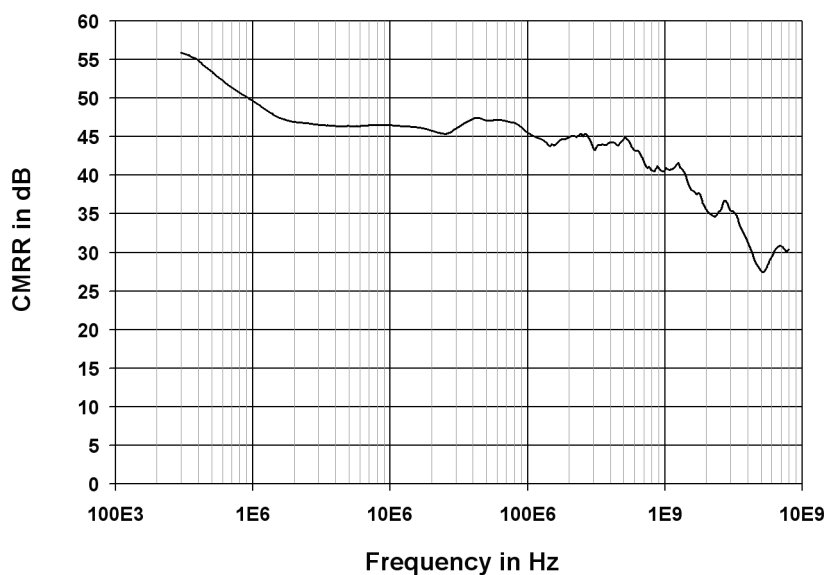


Figure 5-9: Typical CMRR of the R&S RT-ZD10/20/30 probe as a function of frequency

5.6.2 Signal loading of the input signal

The previous section explained the transfer function and step response of the probe. This section describes how the probe influences the input signal. The input signal loading caused by the probe is determined by its input impedance. In general, the probe causes only low signal loading because its input impedance is usually much greater than the source impedance of the test circuit.

5.6.2.1 Signal loading for differential input signals

The [Figure 5-5](#) presents an equivalent circuit model of an R&S RT-ZD10/20/30 differential probe. The differential input impedance of the probe is equal to the

impedance between its positive (+) and the negative (-) signal socket. The resulting input impedance versus frequency is indicated in [Figure 5-10](#).

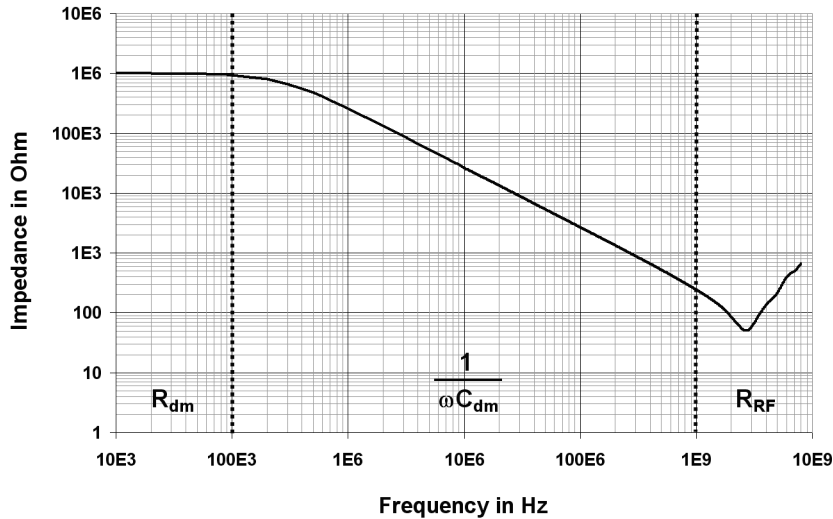


Figure 5-10: Magnitude of the differential input impedance of the R&S RT-ZD10/20/30 probe as a function of frequency

The differential input impedance varies greatly versus the frequency and is defined by the following values:

- Differential input resistance $R_{dm} = 2 R_1$
- Differential input capacitance $C_{dm} = C_1 + C_2 / 2$
- Differential RF resistance $R_{RF} = 2 R_2$

Input resistance R_{dm}

The input resistance determines the loading of the DUT at DC and very low frequencies (< 100 kHz). A low input resistance can disturb measurements of high-frequency signals because influences the DC operating point of active components. This effect is negligible for most applications involving the R&S RT-ZD10/20/30 probe due to the very high input resistance of the probe (1 MΩ).

Input capacitance C_{dm}

The input capacitance C_{dm} causes the input impedance to decrease in the medium-frequency range (100 kHz to 1.0 GHz). It affects the settling time of the input voltage in the case of fast transients.

RF resistance R_{RF}

The RF resistance R_{RF} determines the minimum input impedance and thus the maximum loading at very high frequencies above 1.0 GHz. Thus, the measurement result depends on the source impedance of the DUT. The RF resistance R_{RF} prevents the input voltage from rising immediately to its final value in the case of fast transients.

The resulting loading of a step signal at the input of the probe is shown in [Figure 5-11](#).

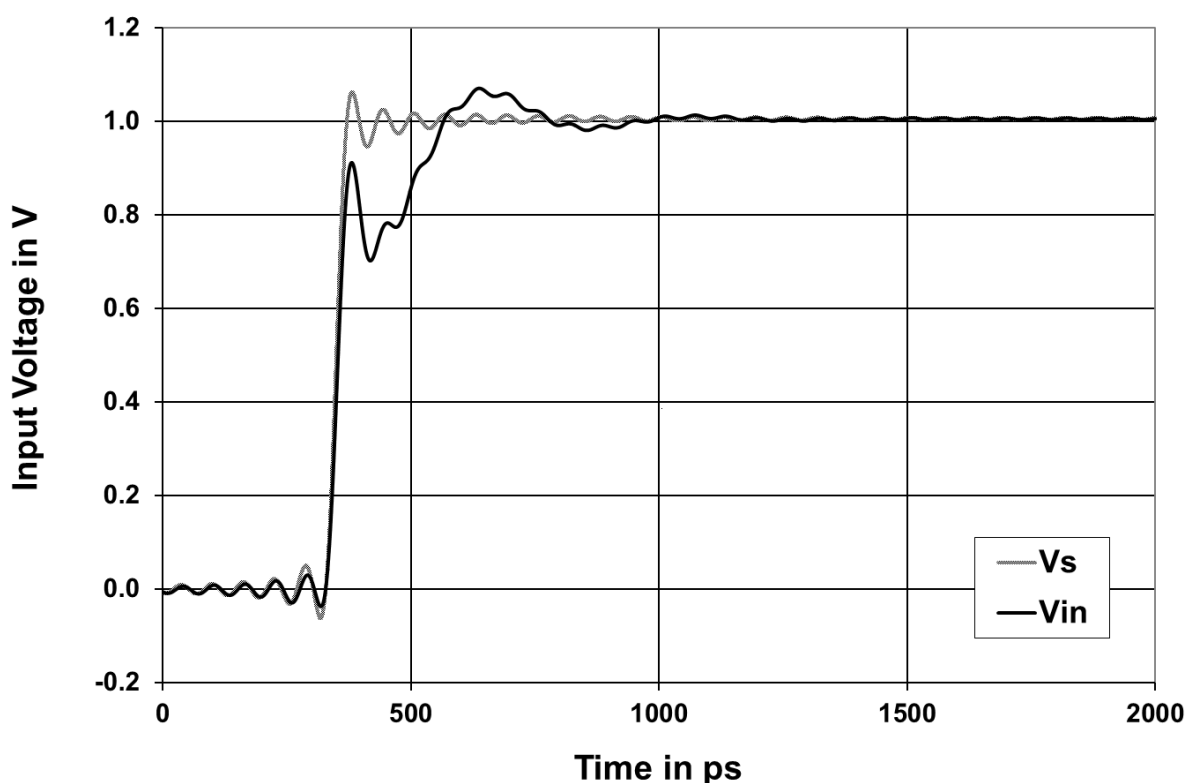


Figure 5-11: Signal loading caused by the R&S RT-ZD10/20/30 probe

5.6.2.2 Signal loading for non-differential input signals

As described in [Chapter 5.5, "Characteristics of differential probes"](#), on page 40, various types of input signals can be measured with a differential probe. Every type of input signal has an associated input impedance.

- For differential input signals, the input impedance of the probe is the impedance between its positive and negative signal sockets.

- For single-ended input signals, the input impedance is the impedance between the positive or negative signal socket and the ground socket.
- For common mode input signals, the input impedance is the impedance between the parallel connection of the positive and negative signal sockets and the ground socket.

The equivalent circuit diagram in [Figure 5-5](#) can be used to determine the associated input impedance. The [Table 5-3](#) provides as an example the DC input resistance for several input signals.

Table 5-3: DC Input Resistance for Various Input Signals

Type of input signal	Differential	Single-ended	Common mode
Input Resistance	1 MΩ	500 kΩ	250 kΩ

This table shows that common mode signals suffer the highest loading. This characteristic of all differential probes is particularly bothersome because common mode signals frequently have a very high source resistance (e.g. 10 kΩ for conventional fail-safe circuits). While the input resistance achieved for common mode voltages with the R&S RT-ZD10/20/30 differential probe remains sufficiently high, probes with lower input resistances can lead to unfavorable loading effects.

5.6.3 Probing philosophy

The previous sections explained that probes exert a load on the signal to be measured and change its characteristic. The signal at the test point where the probe makes contact (V_{in}) is therefore different from the signal that was present before the probe was connected (V_S). This effect cannot be avoided and occurs with all real probes – independent of type and manufacturer.

As a result, there are different opinions which signal is the better output of the probe:

- The initial signal that is not loaded by the probe (V_S), and that corresponds to the signal at the test point without the probe being connected.
- The input signal that is loaded with the input impedance of the probe (V_{in}) and that is present between the probe tips.

Both approaches are physically correct and have their individual advantages and disadvantages. In theory, it is even possible to convert mathematically the two measurement results into each other, but conversion is a complex transformation

to and from the frequency domain. Probe manufacturers use one or the other of these two approaches.

Rohde & Schwarz has decided in favor of the user-friendly approach. In our opinion, most users want to know the signal present in the DUT before it was altered by the influence of the probe. Their goal is to characterize the DUTs, not the probe.

If measurements are carried out in a $100\ \Omega$ (or a comparable) environment, the signal displayed on the oscilloscope is always a direct representation of the unloaded signal V_S , see [Figure 5-12](#).

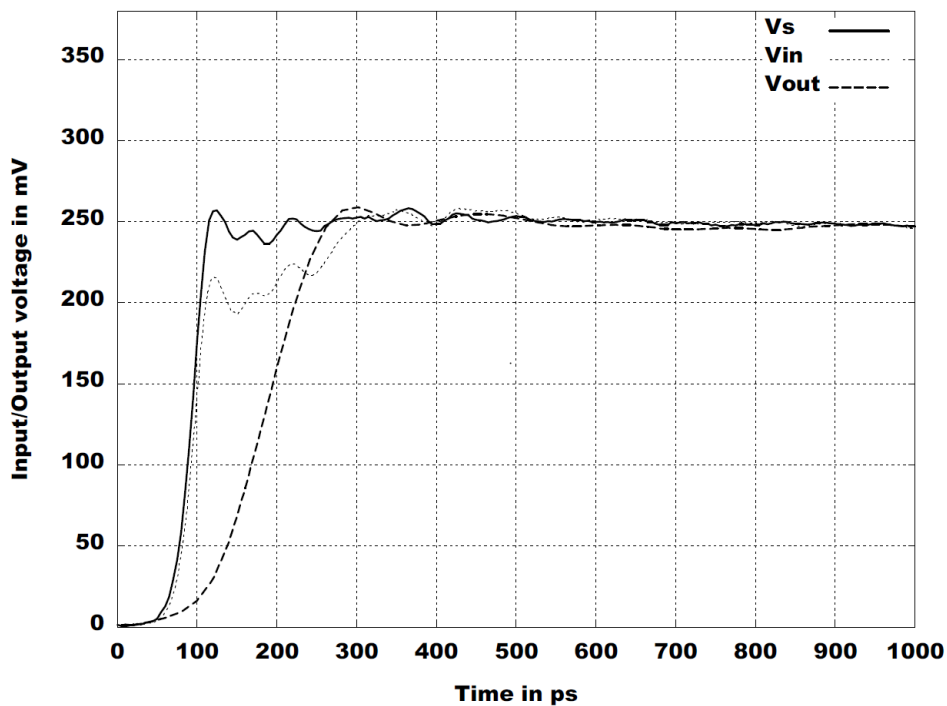


Figure 5-12: Unloaded and loaded input signal and step response (for RT-ZS30)

6 Maintenance and service

Like all Rohde & Schwarz products, Rohde & Schwarz probes and adapters are of high quality and require only minimum service and repair. However, if service or calibration is needed, contact your Rohde & Schwarz service center. Return a defective product to the Rohde & Schwarz service center for diagnosis and exchange.

6.1 Cleaning

1. Clean the outside of the product using a soft cloth moistened with either distilled water or isopropyl alcohol. Keep in mind that the casing is not waterproof.
Note: Do not use cleaning agents. Solvents (thinners, acetone), acids and bases can damage the labeling or plastic parts.
2. Dry the product completely before using it.

6.2 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 6-1: QR code to the Rohde & Schwarz support page

6.3 Returning for servicing

Use the original packaging to return your R&S RT-ZD10/20/30 to your Rohde & Schwarz service center. A list of all service centers is available on:

www.services.rohde-schwarz.com

If you cannot use the original packaging, consider the following:

1. Use a sufficiently sized box.
2. Protect the product from damage and moisture (e.g. with bubble wrap).
3. Use some kind of protective material (e.g. crumpled newspaper) to stabilize the product inside the box.
4. Seal the box with tape.
5. Address the package to your nearest Rohde & Schwarz service center.

6.4 Calibration interval

The recommended calibration interval for R&S RT-ZD10/20/30 differential probe is two years. For servicing, send the probe to your nearest Rohde & Schwarz service center (see [Chapter 6.3, "Returning for servicing"](#), on page 56).

6.5 Storage and transport

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the data sheet.

Store the product in a shock-resistant case, e.g. in the shipping case.

Unless otherwise specified in the data sheet, the maximum transport altitude without pressure compensation is 4500 m above sea level.

6.6 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its service life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.









Figure 6-2: Labeling in line with EU directive WEEE








Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

6.7 Spare parts

You can order the following accessories from the Rohde & Schwarz service center. Use the order numbers provided in the following table.

Table 6-1: Accessories spare parts

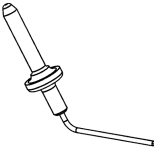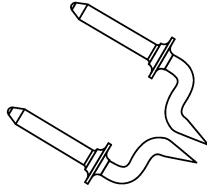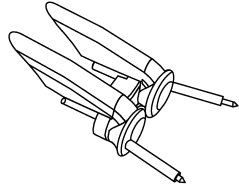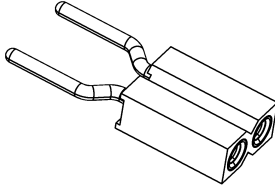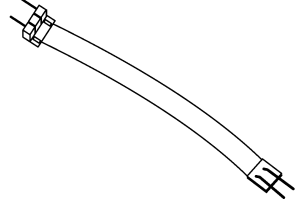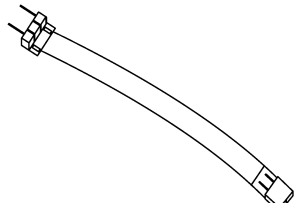Pos	Item	Description	Material Number
1		Signal pin, solder-in	1417.0538.00
2		Signal pin, variable spacing	1417.0550.00
3		Browser adapter	1417.0509.00
4		Adapter, square pin	1417.0573.00
5		Flex adapter, solder-in, 4 cm / 1.6 in 10 cm / 3.9 in	1417.0596.00
6		Flex adapter, square pin, 4 cm / 1.6 in 10 cm / 3.9 in	1417.0580.00

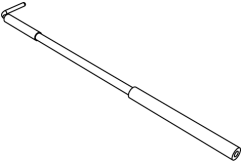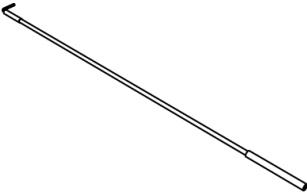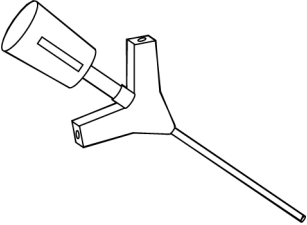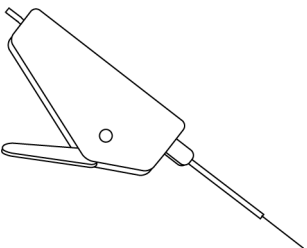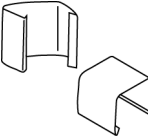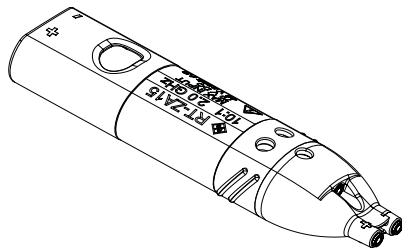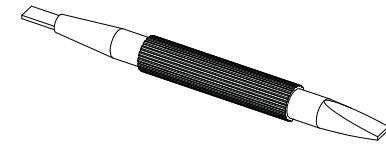Pos	Item	Description	Material Number
7		Lead, 6 cm / 2.4 in	1416.0128.00
8		Lead, 15 cm / 5.9 in	1416.0134.00
9		Mini clip	1416.0105.00
10		Micro clip	1416.0111.00
11		Marker band kit	1416.0205.00
12		External attenuator	1410.4744.02
13		Adjustment tool	1416.0057.00

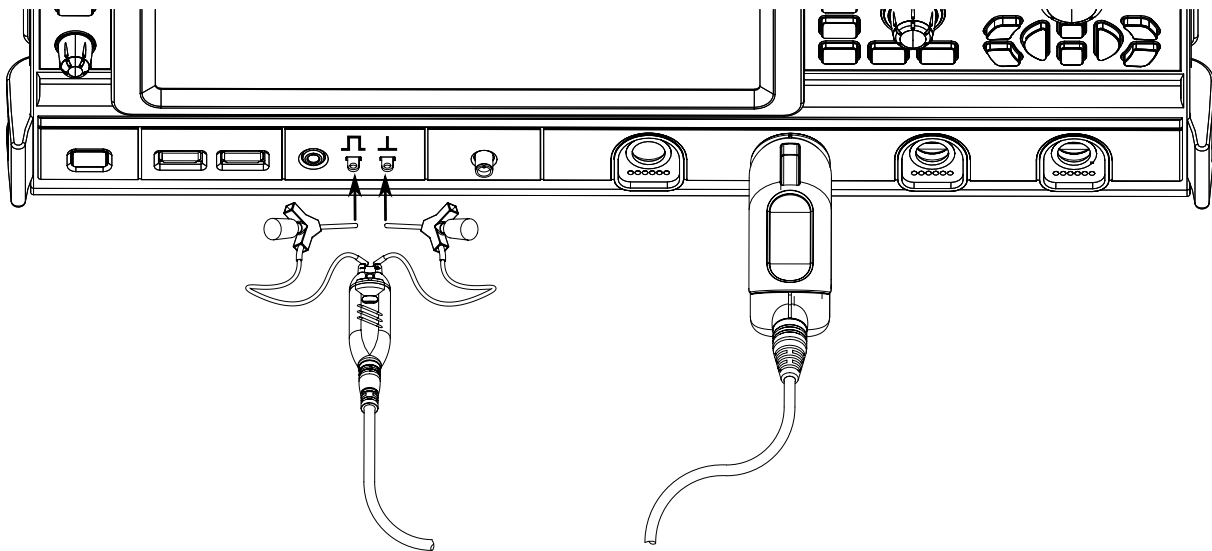
Pos	Item	Description	Material Number
14	Pogo pin	Pogo pin connector, 6 pins	3584.6396.00
15	R&S RT-ZK2	R&S RT-ZK2 service kit	1410.5305.02



Table 6-2: Parts for ESD prevention

Pos.	Item	Material number
1	ESD wrist strap	0008.9959.00
2	ESD grounding cable	1043.4962.00

7 Functional check

The functional check confirms the basic operation of the R&S RT-ZD10/20/30 differential probe. The functional check is not suitable for verifying compliance with the probe specifications.



1. Connect the R&S RT-ZD10/20/30 to a Rohde & Schwarz oscilloscope as described in [Chapter 3.2, "Connecting the probe to the oscilloscope"](#), on page 20.
2. Using a short lead and a mini clip, connect one of the signal sockets to the square wave output  of the oscilloscope.
3. Using a short lead and a mini clip, connect the other signal socket to the probe ground connector  of the oscilloscope.
4. Press the [Preset] key and then the [Autoset] key on the oscilloscope.
A square wave with 1 V amplitude between 0 V and 1 V is displayed on the display.
5. Reverse the pins at the probe and repeat [step 4](#).