

R&S® FSV3-K30

Noise Figure Measurements

User Manual



1178943202
Version 11



This manual applies to the following R&S®FSV3000 and R&S®FSVA3000 models with firmware version 2.20 and higher:

- R&S®FSV3004 (1330.5000K04) / R&S®FSVA3004 (1330.5000K05)
- R&S®FSV3007 (1330.5000K07) / R&S®FSVA3007 (1330.5000K08)
- R&S®FSV3013 (1330.5000K13) / R&S®FSVA3013 (1330.5000K14)
- R&S®FSV3030 (1330.5000K30) / R&S®FSVA3030 (1330.5000K31)
- R&S®FSV3044 (1330.5000K43) / R&S®FSVA3044 (1330.5000K44)
- R&S®FSV3050 (1330.5000K50) / R&S®FSVA3050 (1330.5000K51)

The following firmware options are described:

- R&S FSV/A-K30 (1330.5045.02)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1178.9432.02 | Version 11 | R&S®FSV3-K30

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol , e.g. R&S®FSV3 is indicated as R&S FSV3.

Contents

1	Preface	7
1.1	About this manual.....	7
1.2	Conventions used in the documentation.....	8
1.2.1	Typographical conventions.....	8
1.2.2	Conventions for procedure descriptions.....	8
1.2.3	Notes on screenshots.....	8
2	Welcome to the noise figure measurement application	9
2.1	Starting the noise application.....	9
2.2	Understanding the display information.....	10
3	Measurements and result displays	13
4	Measurement basics	24
4.1	Tuning modes.....	24
4.1.1	Swept measurements.....	25
4.1.2	Frequency table measurements.....	25
4.1.3	Single frequency measurements.....	25
4.2	Measurement modes.....	26
4.3	DUT types.....	28
4.3.1	Measurements on linear DUTs (direct measurement).....	28
4.3.2	Measurements on frequency converting DUTs.....	28
4.4	External generator control.....	29
4.5	Image frequency rejection.....	31
4.6	Calibration (2nd stage correction).....	33
4.7	Using smart noise sources.....	36
4.8	Separating signals by selecting an appropriate resolution bandwidth.....	37
4.9	Analyzing several traces - trace mode.....	38
4.10	Using markers.....	39
5	Configuration	42
5.1	Configuration overview.....	42
5.2	Defining the measurement frequency.....	44
5.2.1	Defining a frequency set.....	44

5.2.2	Configuring single frequency measurements.....	47
5.2.3	Using a frequency table.....	48
5.3	Selecting DUT characteristics.....	51
5.4	Configuring the noise source.....	52
5.4.1	Defining the noise source characteristics.....	52
5.4.2	Using an ENR or temperature table.....	56
5.5	Configuring additional loss.....	60
5.5.1	Defining loss.....	60
5.5.2	Using a loss table.....	63
5.6	Configuring the analyzer.....	65
5.7	Using the uncertainty calculator.....	69
5.7.1	Configuring noise source characteristics.....	70
5.7.2	Configuring DUT characteristics.....	72
5.7.3	Configuring analyzer characteristics.....	73
5.7.4	Guidelines and results.....	74
5.8	Performing measurements.....	75
5.9	Configuring inputs and outputs of the R&S FSV/A.....	77
5.9.1	Radio frequency (RF) input.....	77
5.9.2	External generator.....	79
5.9.2.1	Interface configuration settings.....	79
5.9.2.2	Measurement configuration.....	80
6	Analysis.....	84
6.1	Configuring the display.....	84
6.1.1	Configuring graphical results.....	84
6.1.2	Configuring numerical results.....	86
6.2	Working with traces.....	87
6.3	Trace / data export configuration.....	89
6.4	Using markers.....	92
6.4.1	Marker configuration.....	92
6.4.2	Marker positioning.....	95
6.5	Limit line settings and functions.....	97
6.5.1	Limit line management.....	97
6.5.2	Limit line details.....	99

7	Remote control commands for noise figure measurements.....	102
7.1	Common suffixes.....	103
7.2	Introduction.....	103
7.2.1	Conventions used in descriptions.....	104
7.2.2	Long and short form.....	104
7.2.3	Numeric suffixes.....	105
7.2.4	Optional keywords.....	105
7.2.5	Alternative keywords.....	105
7.2.6	SCPI parameters.....	106
7.2.6.1	Numeric values.....	106
7.2.6.2	Boolean.....	107
7.2.6.3	Character data.....	107
7.2.6.4	Character strings.....	108
7.2.6.5	Block data.....	108
7.3	Controlling the noise figure measurement channel.....	108
7.4	Working with windows in the display.....	112
7.5	General window commands.....	119
7.6	Retrieving measurement results.....	120
7.7	Defining the measurement frequency.....	121
7.8	Selecting DUT characteristics.....	126
7.9	Configuring the noise source.....	129
7.10	Configuring additional loss.....	136
7.11	Configuring the analyzer.....	143
7.12	Using the uncertainty calculator.....	150
7.13	Performing measurements.....	160
7.14	Configuring the inputs and outputs.....	165
7.14.1	Radio frequency (RF) input.....	165
7.14.2	External generator.....	167
7.15	Configuring the display.....	170
7.16	Working with traces.....	173
7.17	Working with limit lines.....	178
7.17.1	Defining general characteristics of a limit line.....	179
7.17.2	Defining horizontal data points.....	181

7.17.3	Controlling lower limit lines.....	182
7.17.4	Controlling upper limit lines.....	183
7.17.5	Managing limit lines.....	184
7.17.6	Controlling limit checks.....	185
7.18	Working with markers.....	188
7.18.1	Using markers.....	188
7.18.2	Using delta markers.....	191
7.18.3	Configuring markers.....	194
7.18.4	Positioning markers.....	194
7.18.5	Positioning delta markers.....	197
7.19	Using the status register.....	199
7.19.1	Status registers for noise figure measurements.....	199
7.19.1.1	STATus:OPERation register.....	201
7.19.1.2	STATus:QUESTionable register.....	201
7.19.1.3	STATus:QUESTionable:LIMit register.....	202
7.19.1.4	STATus:QUESTionable:CORRection register.....	202
7.19.1.5	Status register remote commands.....	203
7.20	Deprecated remote commands for noise figure measurements.....	205
7.21	Programming example: measuring a noise figure.....	206
	Annex.....	207
A	Reference: frequency table file format.....	207
	List of Commands (Noise Figure).....	208
	Index.....	213

1 Preface

1.1 About this manual

This User Manual provides all the information **specific to the application**. All general instrument functions and settings common to all applications and operating modes are described in the main R&S FSV/A User Manual.

The main focus in this manual is on the measurement results and the tasks required to obtain them. The following topics are included:

- **Welcome to the "Noise Figure" Application**
Introduction to and getting familiar with the application
- **Typical applications**
Example measurement scenarios in which the application is frequently used.
- **Measurements and Result Displays**
Details on supported measurements and their result types
- **"Noise Figure" Measurement Basics**
Background information on basic terms and principles in the context of the measurement
- **"Noise Figure" Measurement Configuration + Analysis**
A concise description of all functions and settings available to configure measurements and analyze results with their corresponding remote control command
- **How to Perform Measurements with the "Noise Figure" Application**
The basic procedure to perform each measurement and step-by-step instructions for more complex tasks or alternative methods
- **Measurement Examples**
Detailed measurement examples to guide you through typical measurement scenarios and allow you to try out the application immediately
- **Optimizing and Troubleshooting the Measurement**
Hints and tips on how to handle errors and optimize the test setup
- **Remote Commands for "Noise Figure" Measurements**
Remote commands required to configure and perform "noise figure" measurements in a remote environment, sorted by tasks
(Commands required to set up the environment or to perform common tasks on the instrument are provided in the main R&S FSV/A User Manual)
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes
- **Annex**
Reference material
- **List of remote commands**
Alphabetical list of all remote commands described in the manual
- **Index**

1.2 Conventions used in the documentation

1.2.1 Typographical conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
Filenames, commands, program code	Filenames, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for procedure descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.2.3 Notes on screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

2 Welcome to the noise figure measurement application

The R&S FSV3-K30 is a firmware application that adds functionality to perform "noise figure" measurements to the R&S FSV/A.



Noise Source Control

The Noise Source Control connector on the R&S FSV/A is a prerequisite for the R&S FSV3 Noise measurements application.

This user manual contains a description of the functionality that the application provides, including remote control operation.

Functions that are not discussed in this manual are the same as in the Spectrum application and are described in the R&S FSV/A user manual.

The latest versions of the manuals are available for download at the product homepage.

<http://www.rohde-schwarz.com/product/FSV3000.html>.

Installation

Find detailed installing instructions in the getting started or the release notes of the R&S FSV/A.


- [Starting the noise application](#).....9
- [Understanding the display information](#).....10

2.1 Starting the noise application

The "noise figure" measurement application adds a new type of measurement to the R&S FSV/A.

To activate the R&S FSV3 Noise measurements application

1. Select [MODE].
A dialog box opens that contains all operating modes and applications currently available on your R&S FSV/A.
2. Select the "Noise Figure" item.



The R&S FSV/A opens a new measurement channel for the "noise figure" measurement application.


All settings specific to "noise figure" measurements are in their default state.

Multiple Channels and Sequencer Function

When you activate an application, a new channel is created which determines the measurement settings for that application ("Channel"). The same application can be activated with different measurement settings by creating several "Channel"s for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel. However, to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently defined "Channel"s are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label.

The result displays of the individual channels are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function, see the R&S FSV/A user manual.

2.2 Understanding the display information

The following figure shows the display as it looks for "noise figure" measurements. All different information areas are labeled. They are explained in more detail in the following sections.



Figure 2-1: Screen layout of the noise figure measurement application

- 1 = Toolbar
- 2 = Channel bar
- 3 = Diagram header
- 4 = Result display
- 5 = Softkey bar
- 6 = Status bar

Channel bar information

In the R&S FSV3 Noise measurements application, the R&S FSV/A shows the following settings:

Ref Level	Reference level of the R&S FSV/A.
Att	Attenuation of the R&S FSV/A.
RBW	Resolution bandwidth
SWT	Sweep time
AVG	Number of averages
ENR	Excess noise ratio For smart noise sources: also the provided temperature
2nd Stage Corr	State of the 2nd stage correction.
Calibration Data	Date and time of the current calibration data.
Mode	Currently selected measurement mode.

Window title bar information

For each diagram, the header provides the following information:



Figure 2-2: Window title bar information for the R&S FSV3 Noise measurements application

- 1 = Window number
- 2 = Window type
- 3 = Trace color and number
- 4 = Trace mode

Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.

NOTICE**Risk of damaging the instrument**

Make sure not to overload the input mixer during calibration and the measurement. An overload condition can damage or destroy the input mixer.


If an overload condition occurs, the R&S FSV/A shows a corresponding message in the status line ("RF OVLD" or "IF OVLD").

To avoid an overload during calibration or measurement, do one or more of the following:

- Check and adjust the DUT "gain" settings
 - Check and adjust the ENR settings
 - Increase the reference level.
-

3 Measurements and result displays

The R&S FSV3-K30 measures the "Noise Figure" of a DUT and displays the results graphically and numerically. Each graphical result display shows the "Noise Figure" from a different perspective. In the default configuration, the application shows the "Noise Figure" of the DUT, the "Gain" of the DUT and the corresponding "Y-Factor". In addition, it shows the numerical results of the measurement.

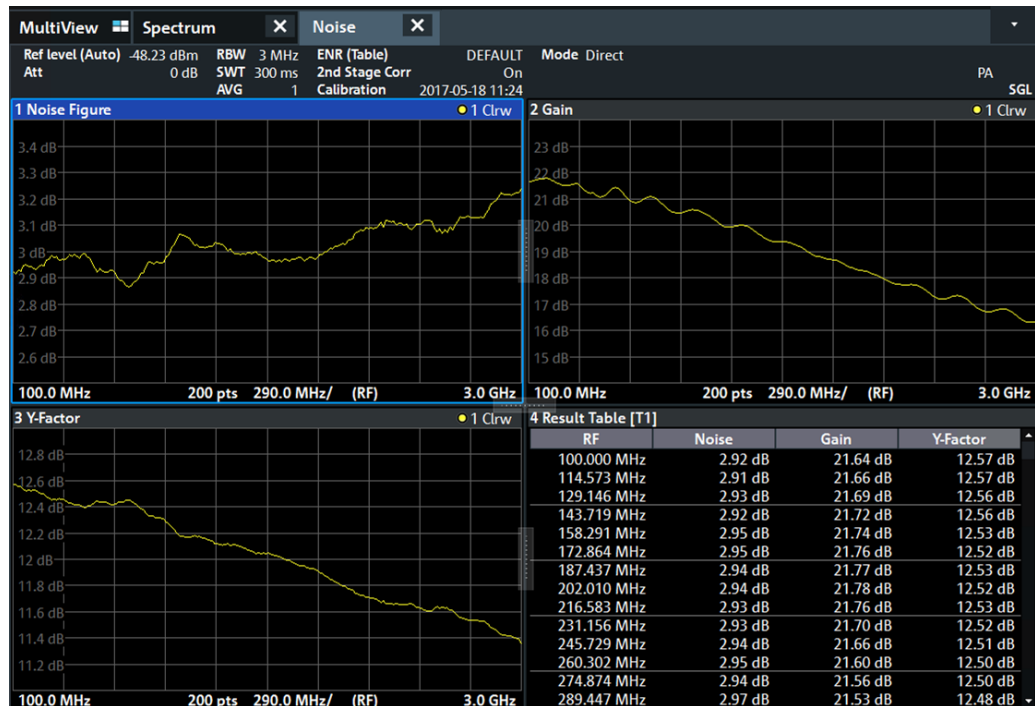

The scale of the horizontal axis depends on the tuning mode.

Frequency list and swept measurements

In all graphical result displays, the horizontal axis represents the frequency. The displayed frequency is either the RF (radio frequency) or the IF (intermediate frequency). The range depends on the frequency set you have currently defined. Because the application only measures selected frequencies, it connects the results to draw a trace.



Negative "Noise Figure" and "Temperature"

From a physical point of view, the "Noise Figure" and the "Temperature" levels have a positive range (including zero).

Due to the mathematical operations the application performs, the results can be negative. Sometimes this happens due to incorrect calibration or variance of measurement values.

Single frequency measurements

In all graphical result displays, the horizontal axis represents a chronological order of measurement results for the frequency you are testing. The axis has no unit, but is made up out of several index values that represent time. Each index value represents one measurement point and therefore one measurement on the single frequency you are analyzing. The size of the index (and thus number of results) depends on the number of **(Measurement) Points** that you have defined. Because the application only measures at certain points in time, it connects the results to draw a trace.

The right diagram border represents the present (index = 0), values to the left represent past measurement results (index = -<x>). As soon as the application finishes a single measurement, the measurement points are moved to the left, the new result is added on the right. All other measurement points are moved down one position with the most obsolete result falling out of the diagram (like in the roll mode of an oscilloscope).

Selecting the result display

- ▶ Select the  icon in the toolbar or press [MEAS].

The application enters the SmartGrid configuration mode.

For more information on the SmartGrid functionality, see the R&S FSV/A Getting Started.

Noise Figure.....	14
Gain.....	15
Temperature.....	15
Y-Factor.....	16
ENR Measured.....	17
Level (Hot).....	18
Level (Cold).....	18
Cal Y-Factor.....	19
Cal Level (Hot).....	20
Cal Level (Cold).....	20
P Hot.....	21
P Cold.....	21
Result Table.....	22
Current Values.....	22
Marker Table.....	22


Noise Figure

Shows the "Noise Figure" of the DUT.

The "Noise Figure" is the ratio of the signal-to-noise ratio at the DUT input to the signal-to-noise ratio at the DUT output.

$$\text{Noise Figure} = \frac{SNR_{in}}{SNR_{out}}$$

The vertical axis shows the level of the "Noise Figure" in dB. The scale depends on the settings in the "Display Configuration" dialog box.

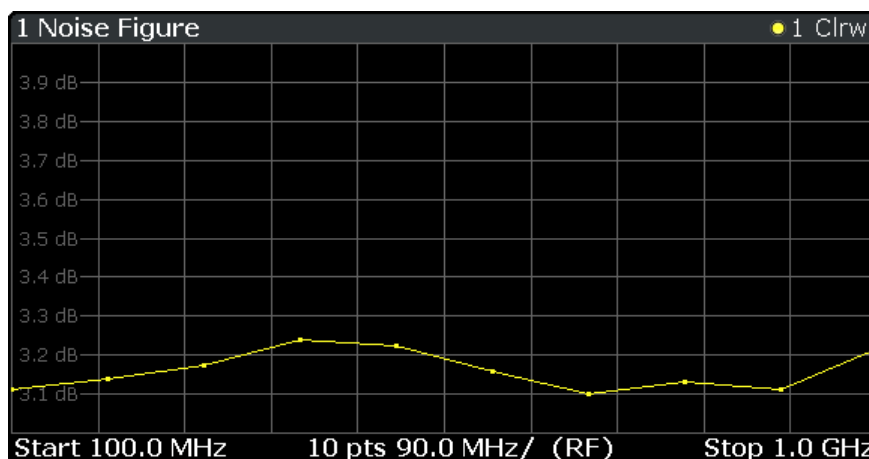

Remote command:


LAY:ADD:WIND? '2',RIGH,NOIS see [LAYout:ADD\[:WINDOW\]?](#) on page 112

Results:TRACe<t>[:DATA]? <Trace>,NOISe

Gain

Shows the "Gain" characteristics of the DUT.

The vertical axis shows the level of the "Gain" in dB. The scale depends on the settings in the "Display Configuration" dialog box.

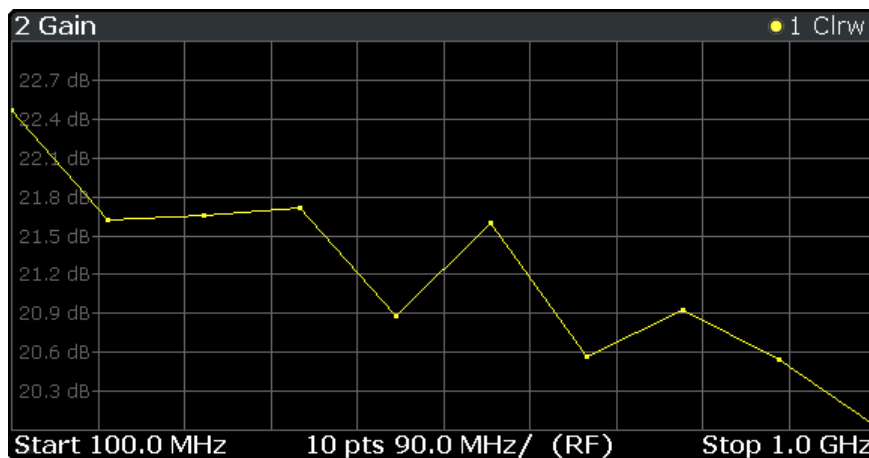

Remote command:

LAY:ADD:WIND? '2',RIGH,GAIN see [LAYout:ADD\[:WINDOW\]?](#) on page 112

Results:TRACe<t>[:DATA]? <Trace>,GAIN

Temperature

Shows the "Temperature" characteristics of the DUT.

$$\text{Noise Temperature} = \frac{P}{B \cdot k}$$


with

P = Power

B = Bandwidth

k = Boltzmann constant

The vertical axis shows the "Temperature" in Kelvin. The scale depends on the settings in the "Display Configuration" dialog box.

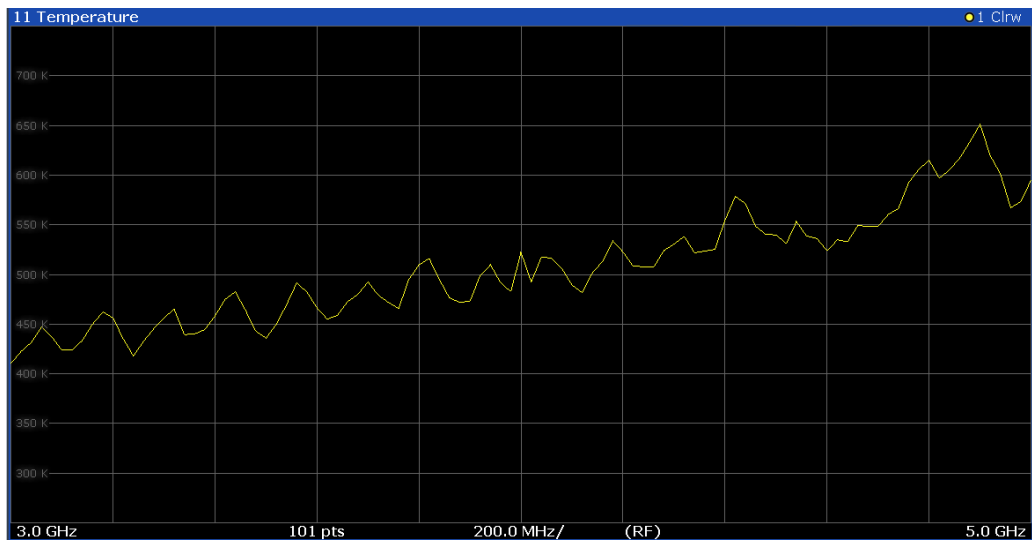

Remote command:

LAY:ADD:WIND? '2', RIGH, TEMP see [LAYout:ADD\[:WINDow\]?](#) on page 112

Results: [TRACe<t>\[:DATA\]? <Trace>, TEMPerature](#)

Y-Factor

Shows the ratio of the hot and the cold power of the DUT.

The "Y-factor" indicates the quality of measurement tolerances and uncertainties. To get the result, the application measures the DUT power with the noise source turned on (hot power) and the noise source turned off (cold power).


$$\text{Y-Factor} = \frac{N_{on}}{N_{off}}$$

with

N_{on} = Noise power [dB] with noise source on

N_{off} = Noise power [dB] with noise source off

The vertical axis shows the linear relation. The scale depends on the settings in the "Display Configuration" dialog box.

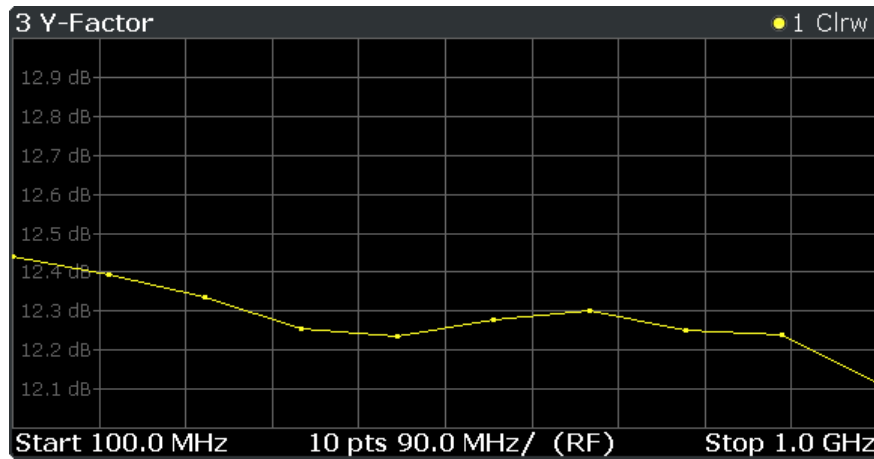

Remote command:


LAY:ADD:WIND? '2',RIGH,YFAC see [LAYout:ADD\[:WINDow\]?](#) on page 112

Results: [TRACe<t>\[:DATA\]?](#) <Trace>, YFACTOR

ENR Measured

Shows the results of the ENR measurement.

To measure the ENR of a noise source, first attach a noise source with known ENR to the device, enter the ENR of this noise source to the calibration ENR table and calibrate using this one. Then, attach the unknown noise source to the device and perform a measurement ("Run Single") with this one. The graph shown in the ENR Measured display and the results for ENR Measured in the Result Summary will be the ENR of the noise source at the measured frequencies. The vertical axis shows the level of the measured ENR in dB. The scale depends on the settings in the "Display Configuration" dialog box.

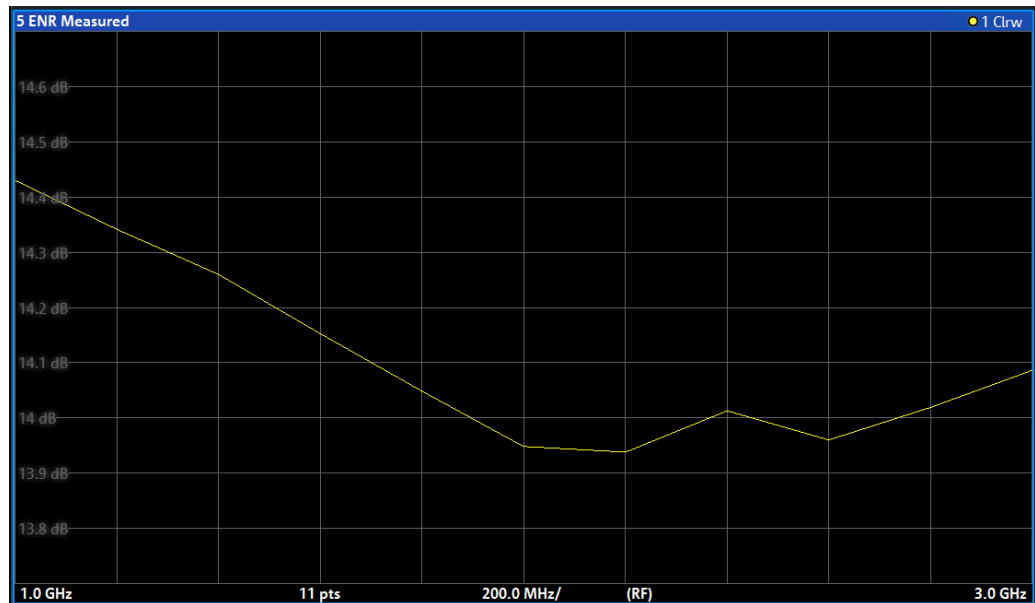

Remote command:


LAY:ADD:WIND? '2', RIGH, ENR see LAYout:ADD[:WINDOW]? on page 112

Results: TRACe<t>[:DATA]? <Trace>, ENR

Level (Hot)

Shows the absolute power characteristics at the instrument input. The noise source is turned on.

The vertical axis shows the power in dBm. The scale depends on the settings in the "Display Configuration" dialog box.

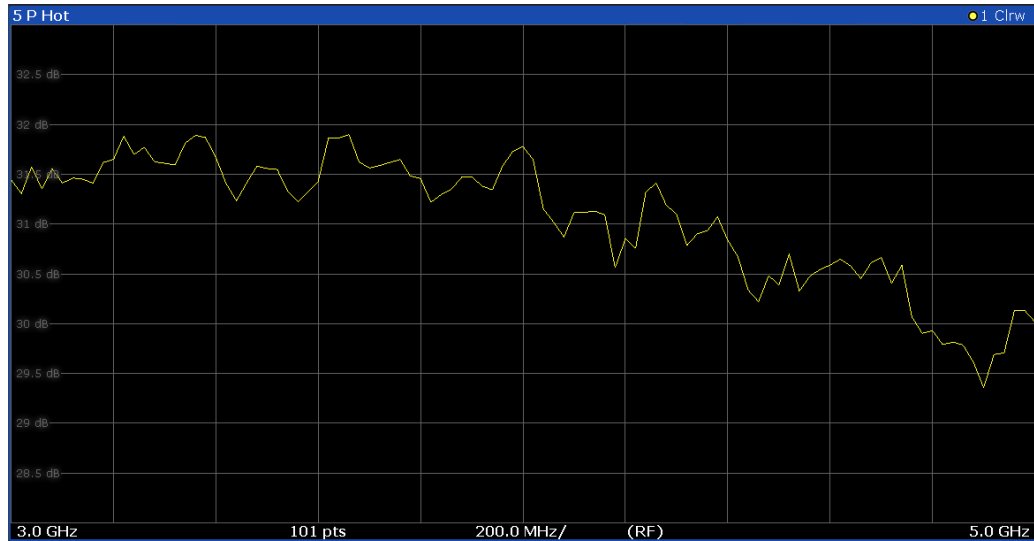

Remote command:

LAY:ADD:WIND? '2', RIGH, PHOT see LAYout:ADD[:WINDOW]? on page 112

Results: TRACe<t>[:DATA]? <Trace>, PHOT

Level (Cold)

Shows the absolute power characteristics at the instrument input. The noise source is turned off.

The vertical axis shows the power in dBm. The scale depends on the settings in the "Display Configuration" dialog box.




Remote command:

LAY:ADD:WIND? '2', RIGH, PCOL see [LAYout:ADD\[:WINDOW\]?](#) on page 112

Results: [TRACe<t>\[:DATA\]? <Trace>, PCOLd](#)

Cal Y-Factor

Shows the ratio of the hot and the cold power measured during calibration.

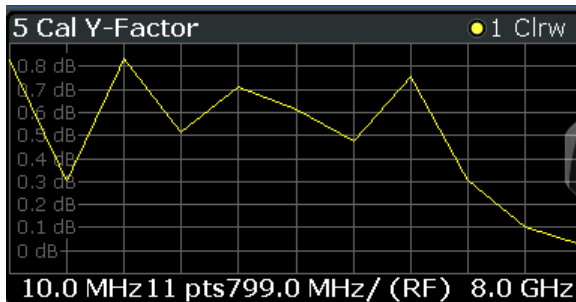

The "Y-factor" indicates the quality of measurement tolerances and uncertainties. To get the result, the application measures the power with the noise source turned on (hot power) and the noise source turned off (cold power), but without the DUT inserted.

$$Y\text{-Factor} = \frac{N_{on}}{N_{off}}$$

with

N_{on} = Noise power [dB] with noise source on

N_{off} = Noise power [dB] with noise source off

The vertical axis shows the linear relation. The scale depends on the settings in the "Display Configuration" dialog box.


Remote command:

LAY:ADD:WIND? '2', RIGH, CYF see [LAYout:ADD\[:WINDOW\]?](#) on page 112

Results: [TRACe<t>\[:DATA\]? <Trace>, CYFactor](#)

Cal Level (Hot)

Shows the absolute power characteristics at the instrument input during the calibration measurement. The noise source is turned on, the DUT is not inserted.

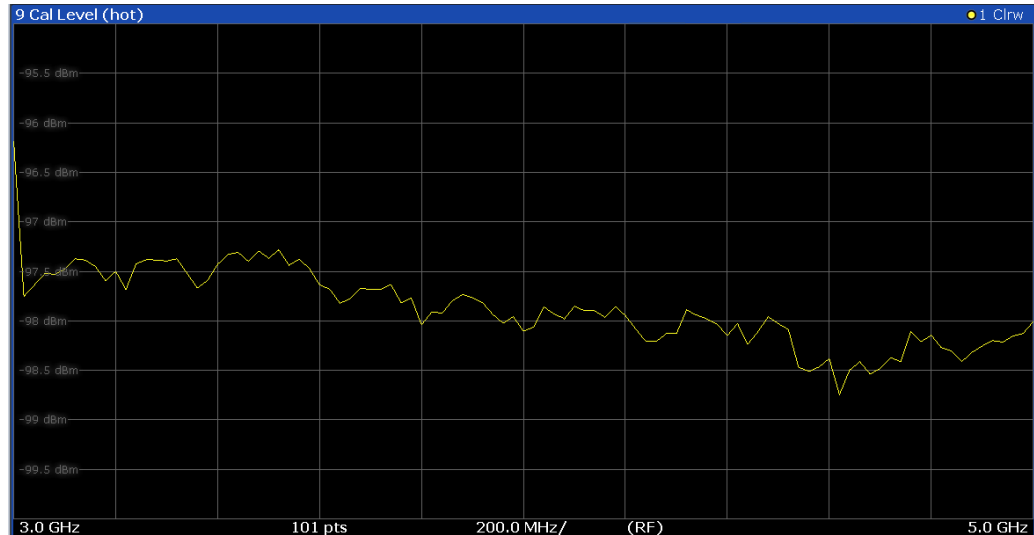

The vertical axis shows the power in dBm. The scale depends on the settings in the "Display Configuration" dialog box.


Remote command:

LAY:ADD:WIND? '2',RIGH,CPH see [LAYout:ADD\[:WINDow\]?](#) on page 112

Results: [TRACe<t>\[:DATA\]? <Trace>,CPHot](#)

Cal Level (Cold)

Shows the absolute power characteristics at the instrument input during the calibration measurement. The noise source is turned off, the DUT is not inserted.

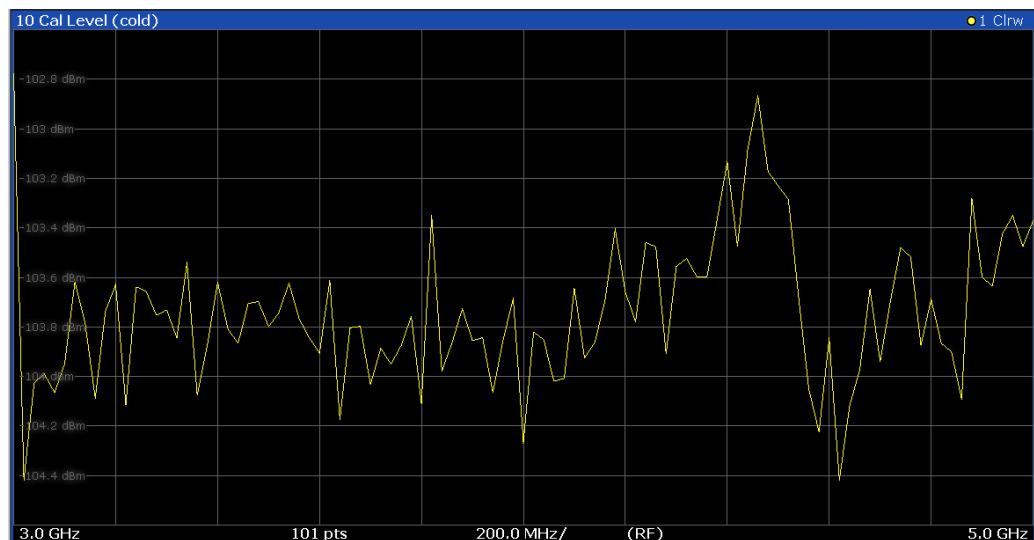

The vertical axis shows the power in dBm. The scale depends on the settings in the "Display Configuration" dialog box.

Remote command:


LAY:ADD:WIND? '2',RIGH,CPC see LAYout:ADD[:WINDow]? on page 112

Results: TRACe<t>[:DATA]? <Trace>,CPCold

P Hot

Shows the relative power with a hot noise source in dB.

The scale depends on the settings in the "Display Configuration" dialog box.

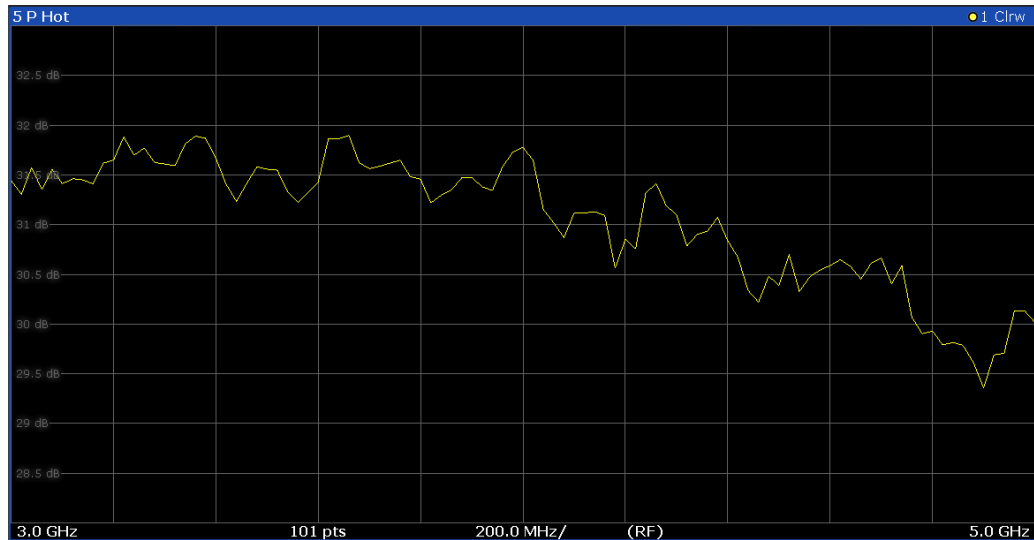

Remote command:

LAY:ADD? '1',RIGH,DPH, see LAYout:ADD[:WINDow]? on page 112

Results: TRACe<t>[:DATA]? <Trace>,DPHot

P Cold

Shows the relative power with a cold noise source in dB.

The scale depends on the settings in the "Display Configuration" dialog box.



Remote command:

LAY:ADD? '1', RIGH, DPC, see LAYout:ADD[:WINDow]? on page 112

Results: TRACe<t>[:DATA]? <Trace>, DPCold

Result Table

Shows the measurement results in numerical form in a table.

The contents of the table depend on the "Display Settings". By default it shows the "Noise Figure", "Gain" and "Y-Factor" results. Each row represents one measurement point. Each column represents one result type. The first column shows the measurement frequency.

If you display the uncertainty result, it is displayed in the "Noise" column next to the "Noise Figure" result. Note that the uncertainty is displayed only after you have turned on the uncertainty calculation and also include the result in the display.

The result table shows either the RF or the IF, depending on your selection.

For more information, see [Chapter 6.1.2, "Configuring numerical results"](#), on page 86.

4 Result Table [T1]					
RF Freq	Noise Figure	Gain	Y-Factor		
3.000 GHz	3.83 dB	17.00 dB	10.39 dB		
3.020 GHz	3.91 dB	16.85 dB	10.33 dB		
3.040 GHz	3.96 dB	17.11 dB	10.28 dB		
3.060 GHz	4.05 dB	16.88 dB	10.20 dB		
3.080 GHz	3.99 dB	17.08 dB	10.27 dB		
3.100 GHz	3.91 dB	16.94 dB	10.33 dB		
3.120 GHz	3.91 dB	16.98 dB	10.32 dB		
3.140 GHz	3.97 dB	16.96 dB	10.29 dB		
3.160 GHz	4.07 dB	16.91 dB	10.22 dB		
3.180 GHz	4.14 dB	17.11 dB	10.14 dB		
3.200 GHz	4.11 dB	17.14 dB	10.17 dB		
3.220 GHz	3.98 dB	17.38 dB	10.31 dB		
3.240 GHz	3.88 dB	17.20 dB	10.38 dB		
3.260 GHz	3.97 dB	17.26 dB	10.32 dB		
3.280 GHz	4.04 dB	17.10 dB	10.26 dB		

Remote command:

LAY:ADD:WIND? '2', RIGH, RES see LAYout:ADD[:WINDow]? on page 112

Results: TRACe<n>[:DATA]? on page 120

Table items: DISPlay[:WINDow<n>]:TABLE:ITEM on page 170

Current Values

Shows the result at the current measurement point.

The contents of the "Current" result display are updated as soon as a new measurement point is analyzed.

The result types shown in the table depend on the "Display Settings". By default it shows the results for the "Noise Figure", "Gain" and "Y-Factor" result type. Each row represents one result type. The first column shows the result type, the second column shows the result.

For more information, see [Chapter 6.1.2, "Configuring numerical results"](#), on page 86.

Marker Table

Shows the marker characteristics in numerical form in a table.

The size of the table depends on the number of active markers and the way you have configured the table in the "Result Config" dialog box. For more information, see [Chapter 6.4, "Using markers"](#), on page 92 and [Chapter 6.1.2, "Configuring numerical results"](#), on page 86.

Type	Ref	Trc	Stimulus	Noise	Gain
N1		1	400.00 MHz	3.24 dB	21.72 dB
D2	N1	1	100.00 MHz	-0.01 dB	-0.84 dB
D3	N1	1	200.00 MHz	-0.08 dB	-0.12 dB

The first four columns of the table are fix.

- Type
Shows the marker type. 'M' represents a normal marker, 'D' represents a delta marker.
- Ref
Shows the reference marker for relative delta markers.
- Trc
Shows the trace that the marker is positioned on.
- X-value
Shows the horizontal position (frequency) of the marker.
For normal markers, the position is an absolute value. The position of delta markers is relative to another marker.
- <Result>
Shows the measurement result at the marker position.
For normal markers, the result is an absolute value. Results for delta markers are relative to another marker.

Remote command:

LAY:ADD:WIND? '2', RIGH, MTAB see [LAYout:ADD\[:WINDow\]?](#) on page 112

Results:

[CALCulate<n>:MARKer<m>:Y?](#) on page 190

[CALCulate<n>:DELTAmarker<m>:Y?](#) on page 193

4 Measurement basics

The measurement basics contain background information on the terminology and principles of "noise figure" measurements.


"Noise figure" measurements determine the noise that a device under test (DUT) adds to a signal as that signal passes through the DUT.

- [Tuning modes](#)..... 24
- [Measurement modes](#)..... 26
- [DUT types](#)..... 28
- [External generator control](#)..... 29
- [Image frequency rejection](#)..... 31
- [Calibration \(2nd stage correction\)](#)..... 33
- [Using smart noise sources](#)..... 36
- [Separating signals by selecting an appropriate resolution bandwidth](#)..... 37
- [Analyzing several traces - trace mode](#)..... 38
- [Using markers](#)..... 39

4.1 Tuning modes

Basically, the application calculates the "noise figure" of a DUT based on the characteristics of the DUT that have been measured and a noise source whose properties are known. Therefore, the Noise Source Control connector on the R&S FSV/A is a prerequisite for the R&S FSV3 Noise measurements application.

In addition to the noise characteristics of a DUT, the application is also able to determine several more DUT characteristics like its "gain" or its "noise temperature" characteristics.

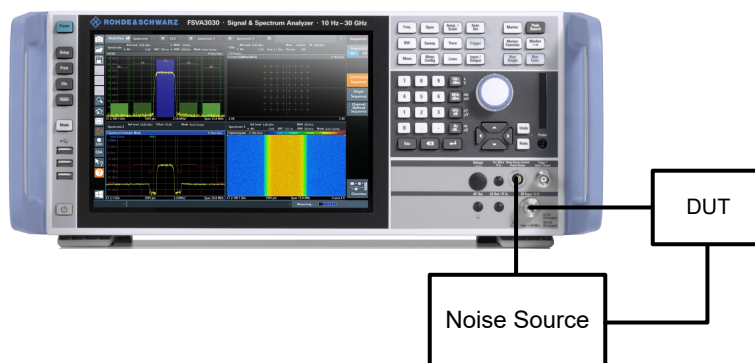

The application provides several measurement modes or **tuning modes**.

- [Swept measurements](#)..... 25
- [Frequency table measurements](#)..... 25
- [Single frequency measurements](#)..... 25

4.1.1 Swept measurements

The **sweep** tuning mode performs measurements on a set of discrete frequencies based on the frequency parameters. Each measurement analyzes the noise characteristics of the corresponding frequency or measurement point.

For swept measurements, the application automatically determines the measurement frequencies and combines them in a frequency list.

Such a frequency set is the result of the frequency and span information that you have provided. The frequency and span information is made up out of the center frequency, the span, the start and the stop frequency. In combination with the measurement points or the frequency table step size, the application calculates the contents of the frequency table.

The **center frequency** is the frequency in the center of the frequency band that you are measuring. Thus, it is defined either by the span, or the start and stop frequencies.

The **measurement points** is the number of entries in a frequency list and thus the number of measurements that the application performs during a "noise figure" measurement.

The **stepsize** defines the distance between two measurement points. It is constant for all measurement points.



If the stepsize is larger than the distance between start and stop frequency, the frequency table consists of the start and stop frequencies only.

4.1.2 Frequency table measurements

The **frequency table** tuning mode also performs measurements on a set of frequencies based on the contents of a frequency list. Each measurement analyzes the noise characteristics of the corresponding frequency.

Compared to a swept measurement, you can customize the contents of the frequency list. Thus, you can add frequencies that are independent of the frequency stepsize and the number of measurement points.

Frequency tables also allow you to define a variable RBW and sweep time, depending on the current frequency of the sweep point (see ["Variable RBW and sweep time for low-frequency measurements"](#) on page 38 and [Chapter 5.2.3, "Using a frequency table"](#), on page 48).

4.1.3 Single frequency measurements

The **single frequency** tuning mode performs one or several consecutive measurements on a single frequency. You can perform the measurement on any frequency that is supported by the hardware you are using.

Single frequency measurements are a way to facilitate manual adjustments for "noise figure" measurements. They also allow you to get an idea about how the "noise figure" at a particular frequency change over time.

Note that sweep lists or frequency tables are not considered in this measurement mode.

Single frequency measurement results

For single frequency measurements, the same set of graphical result displays is available as for frequency list measurements ("Noise Figure", "Gain" etc.). Note, however, that the x-axis has no unit, but shows a series of results taken for a single frequency. The number of displayed results depends on the number of measurement points you have defined.

For more information, see [Chapter 3, "Measurements and result displays"](#), on page 13.

In addition, you can also view the results in the Result Table in numerical form.

Single frequency measurements are not available when you are using a resistor as a noise source.

4.2 Measurement modes

In some cases, the "Level (Hot)" and "Level (Cold)" results require two different noise sources with different temperature characteristics (cold and hot). Measurements with a resistor noise source are such a case.

Usually, noise sources with diode characteristics are used for "Noise Figure" measurements. These noise sources have two states, on and off. When they are supplied with power (state = on), the application measures the hot power, when they are not supplied with power (state = off), it measures the cold power. Turning the noise source on and off is automatically done by the application, so that you can get the hot and cold power characteristics in a single step.


This **automatic measurement mode** is the default measurement mode of the R&S FSV3 Noise measurements application.

A resistor noise source, however, requires two resistors, one hot and one cold. You have to substitute the hot resistor by the cold resistor to measure first the hot and then the cold power. For these cases, the application provides a **manual measurement mode**. This measurement mode is automatically selected when you select a ["Noise Source"](#) on page 54 with resistor characteristics, but is not restricted to those cases.

The manual measurement mode is available for measurements and the calibration stage.

Performing a manual measurement

In manual measurement mode, you have to measure (or calibrate) the hot and cold power characteristics of the DUT separately. When you start the measurement, the application opens a dialog box that allows you to select the type of measurement to perform next.

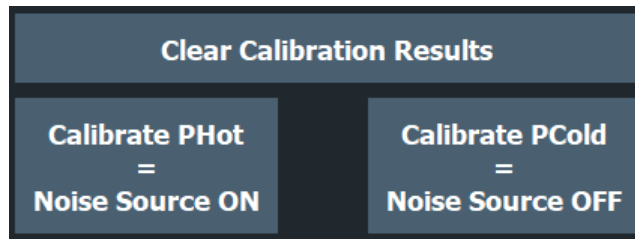


Recommended order of measurements

Note that it is recommended that you begin with the hot power measurement.


Furthermore, calibration always begins with the hot power measurement.

In case the hot power has to be measured first, the cold power measurement is unavailable:

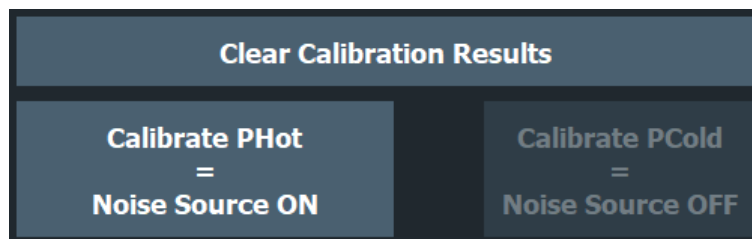

When the first measurement is done, you can change the test setup by connecting the other resistor. Then start the second measurement.

In the dialog box, the measurement stage that is already done is labeled green.

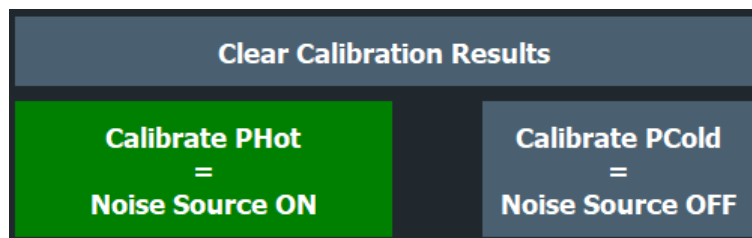

In addition, the application shows the missing calibration and measurement steps in the channel bar.

Noise		X	
ENR (THot, TCold)	296.50 K, 77.00 K	Mode	Direct
2nd Stage Corr	On (No Cal)		
Calibration	PCold required	Meas	PHot & PCold required

Clearing results

To replace the previous calibration or measurement results, clear the currently stored data using the "Clear Calibration Results" or "Clear Measurement Results" function.



Returning to automatic measurement mode

When you are in automatic measurement mode and select a noise source with resistor characteristics, the application automatically selects the manual measurement mode.

When you are in manual measurement mode and select a noise source with diode characteristics, you have to select the automatic measurement mode deliberately in the "Sweep" menu.

4.3 DUT types

"Noise figure" measurements are possible on DUTs with a wide variety of characteristics. The DUT characteristics not only affect the test setup, but also determine the way the application populates the frequency list for swept measurements.

The R&S FSV3 Noise measurements application supports measurements on DUTs that work on a fixed frequency as well as measurements on frequency-converting DUTs.

- [Measurements on linear DUTs \(direct measurement\)](#).....28
- [Measurements on frequency converting DUTs](#)..... 28

4.3.1 Measurements on linear DUTs (direct measurement)

For a linear DUT, the RF frequency remains the same between its input and output. For measurements on such DUTs, it is sufficient to measure the signal's RF frequency without any additional equipment (like a local oscillator). A typical linear DUT is an amplifier, for example.

The test setup for measurements on such DUTs usually consists of the noise source, the DUT and an analyzer. If necessary, the measurement also considers loss that occurs somewhere in the measurement path.

For linear DUTs, the contents and layout of the "Overview" dialog box represents the configuration of a typical test setup.




4.3.2 Measurements on frequency converting DUTs

A frequency converting DUT converts the RF frequency to an intermediate frequency (IF) using the local oscillator (LO). A frequency-converting DUT either converts the RF frequency to a lower IF (down-conversion) or a higher IF (up-conversion).

The conversion process requires a local oscillator in the test setup. You can generate the LO signal in two ways.

- An external generator controlled by the analyzer via IEC bus.
- A VCO controlled by a voltage source.

If you have selected a frequency-converting DUT measurement mode, the layout of the "Overview" dialog box adds the local oscillator to the test setup.

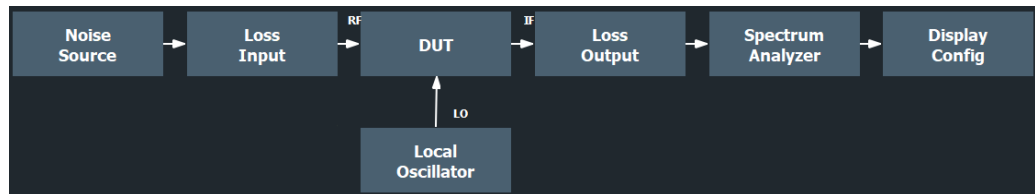

The local oscillator can have a fixed or a variable frequency. If the LO frequency is fixed, the intermediate frequency (IF) resulting from the conversion process is variable (depending on the input signal). If the LO frequency is variable, the IF has to be fixed.

The R&S FSV3 Noise measurements application provides measurement for both measurement scenarios.

Fixed intermediate frequency

If you select one of the fixed IF measurement modes, the IF is the same for all entries in the frequency list. The LO frequency for each entry is variable and is the result of the equation the selected mode is based on.

- $f_{RF} - f_{IF}$ for up-converters
- $f_{RF} + f_{IF}$ for down-converters

The fixed IF measurement modes are, for example, useful for measurements on mixers.

Note that fixed IF measurements are only possible if the R&S FSV/A is equipped with the optional External Generator Control hardware. For more information, see [Chapter 4.4, "External generator control"](#), on page 29.

Fixed LO frequency

If you select one of the fixed LO measurement modes, the LO frequency is the same for all entries in the frequency list. The IF frequency for each entry is variable and is the result of the equation the selected mode is based on.

- $f_{RF} + f_{LO}$ for up-converters
- $f_{RF} - f_{LO}$ for down-converters

The fixed LO measurement modes are, for example, required for measurements on satellite converters.

4.4 External generator control

To perform fixed IF measurements with the R&S FSV3 Noise measurements application, you have to install the optional External Generator Control hardware. This option allows you to control an external generator and the type of signal it generates.

The typical measurement setup for such measurements includes the R&S FSV/A equipped with the optional R&S FSV3 Noise measurements application, a signal generator and the DUT. The signal generator is controlled via the LAN connection.

To enhance the measurement accuracy, it is recommended to use a common reference frequency for both R&S FSV/A and signal generator in the measurement setup.

If you have no 10 MHz reference frequency on hand, you can use the internal reference signal of the R&S FSV/A or signal generator. For more information, see the documentation of the R&S FSV/A or the signal generator.

Signal generator support

The R&S FSV/A-B10 supports various signal generators. A list is available in the user interface (see [Generator Type](#)) and in the documentation of the R&S FSV/A.

Note that you have to select the generator specifically for the R&S FSV3 Noise measurements application. It does not inherit the generator settings from other applications.

It is also possible to add new signal generators to that list. To do so, you have to copy a custom signal generator setup file with the file extension `.gen` to the R&S FSV/A. The setup file defines the frequency and power ranges supported by the generator, as well as information required for communication. You can use a setup file of the signal generators already supported as a template. After you copy it to the R&S FSV/A, the new generator model is added to the dropdown menu.

The existing setup files can be displayed in an editor in read-only mode directly from the [Interface Configuration](#) dialog box.

Make sure to adhere to the required syntax and commands and only change the values of the parameters. Errors are only detected and displayed when you try to use the custom generator.

Error and status messages

The following status and error messages can occur during external generator control.

Message	Description
"Ext. Generator TCP/IP Handshake Error!" / "Ext. Generator TTL Handshake Error!"	Connection to the generator is not possible, e.g. due to a cable damage or loose connection or wrong address.
"Ext. Generator Limits Exceeded!"	The allowed frequency or power ranges for the generator were exceeded.
"Reverse Sweep via min. Ext. Generator Frequency!"	Reverse sweep is performed; frequencies are reduced to the minimum frequency, then increased again.
"Ext. Generator File Syntax Error!"	Syntax error in the generator setup file.
"Ext. Generator Command Error!"	Missing or wrong command in the generator setup file.
"Ext. Generator Visa Error!!"	Error with Visa driver provided with installation (very unlikely).

NOTICE**Risk of damage to the instrument**

To allow for highest sensitivity during the measurement, the R&S FSV3 Noise measurements application automatically sets the input attenuation to 0 dB.

Because this configuration minimizes the overrange reserve, make sure that the signal you apply does not cause an overload condition. In particular, consider the LO feedthrough. An overload condition can damage or destroy the input mixer.

The R&S FSV/A shows a corresponding message in the status line if an overload occurs ("RF OVLD" or "IF OVLD").

To avoid an overload, do one of the following:

- Reduce the LO feedthrough of the mixer device.
- Increase the reference level.

4.5 Image frequency rejection

Frequency converting DUTs convert a radio frequency (RF) to an intermediate frequency (IF). The IF is lower than the RF for down-converting DUTs, and higher than the RF for up-converting DUTs.

In a basic test setup, the image frequency of the RF signal is also converted to the IF. Depending on the DUT, this effect can be wanted or even necessary, or not. To avoid measurement errors of the "noise figure" and "gain" of up to 3 dB, make sure to use the appropriate measurement configuration.


Basically, you can distinguish between single sideband (SSB) mixers, double sideband (DSB) mixers, and mixers that partly suppress a sideband. If a sideband is not needed or only partly needed, you can reject the image frequency. If you do so, the application activates a filter that suppresses the image frequency to a certain extent.

The following illustrations help you configure the measurement correctly.

For more information on how to configure image rejection, see ["Image Rejection"](#) on page 52.

Double sideband measurements

Double sideband mixers use both sidebands to the same extent. Both RF and image frequency are converted. In that case, turn off image rejection.

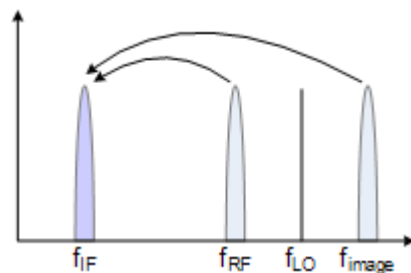


f_{LO} = frequency of the local oscillator
 f_{IF} = intermediate frequency = $f_{RF} \pm f_{LO}$
 f_{RF} = lower sideband = $f_{LO} - f_{IF}$
 f_{image} = upper sideband = $f_{LO} + f_{IF}$

If image rejection is on, the results have a 3 dB error. That means "noise figure" results are 3 dB lower than they should be. "Gain" results are 3 dB higher.

Single sideband measurements

Single sideband mixers use a single sideband only. In that case, you have to suppress the sideband that is not required. If you do so, the measurement is like on an amplifier.

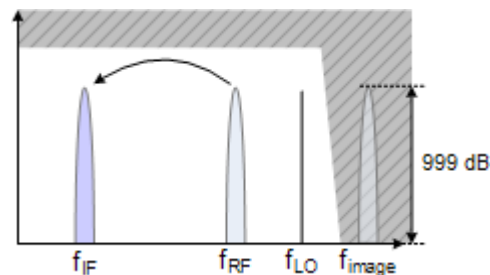


To suppress a sideband completely, it is best to set the image rejection to the maximum amount possible (999.99 dB).

Partial sideband suppression


For measurements on mixers with a low image frequency rejection, there are two test scenarios.

- Mixers whose image rejection is known.
- Mixers whose image rejection is unknown.

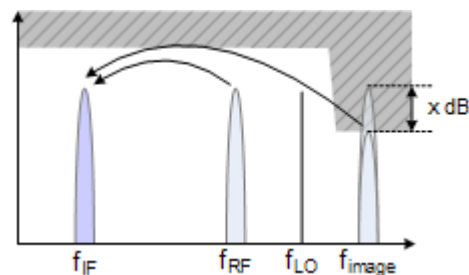

For mixers whose image rejection is known, define the magnitude of image rejection in dB as accurately as possible. Otherwise, measurement results ("noise figure" and "gain") deviate between 0 dB to 3 dB.

If you do not know the image rejection characteristics of a mixer, use a custom test setup including an additional filter. You also have to know the "gain" characteristics of the DUT.

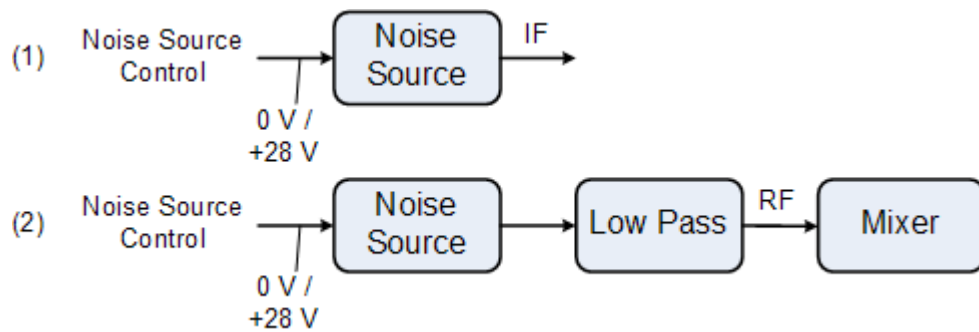

- (1) = Test setup for calibration
 (2) = Test setup for "noise figure" measurement

In the test setup shown above, a lowpass filter prevents unwanted noise from being fed in at the image frequency.

Depending on the position of the frequency bands, you might need a highpass or bandpass filter for the RF frequency instead of the lowpass filter. The important point is that unwanted noise is not converted by a further receive path of the mixer. The unwanted noise at the received frequency must not be reduced. The insertion loss must be considered, if applicable.

With this test setup, the measurement on a mixer without sideband suppression is the same as SSB measurements.

To take the characteristics of the filter into account, include the insertion loss of the filter at the RF. To consider the actual filter suppression at the image frequency, include the actual attenuation for the image rejection.

Harmonics mixer measurement

For a harmonics mixer, the input signals are not only converted to the IF by the wanted harmonic. The harmonic of the LO signal produced in the mixer is also converted. Often, the mixer even features a lower conversion loss for unwanted harmonics. For measurements on this type of mixer, you have to use a bandpass filter. The filter ensures that there is only noise at the desired frequency at the input of the DUT. This measurement is similar to measurements on a mixer with an average sideband suppression.

4.6 Calibration (2nd stage correction)

The calibration procedure of the application measures the inherent noise of the R&S FSV/A you are using. Performing calibration is therefore recommended, as it increases the accuracy of measurement results. The results get more accurate because the application takes the inherent noise of the analyzer into account while it calculates the results.

Calibration for "noise figure" measurements is also known as 2nd stage correction. This term is used because in a typical "noise figure" test setup, the DUT represents the first stage and the analyzer the second stage in the test setup.



The 2nd stage correction is a calibration that is specific to "noise figure" measurements. It is independent of the overall calibration state of the analyzer and does not calibrate the analyzer.

For successful calibration, you need additional equipment.

- Noise source
The noise source is like a calibration standard. It provides a reference with known noise characteristics that allows the application to determine the inherent noise of the analyzer you are using.

During the calibration, the application measures the inherent noise characteristics of the analyzer at the set of measurement frequencies.

Thus, the 2nd stage correction is valid for a particular instrument configuration, the room temperature and the instrument temperature. As long as this configuration stays the same, calibration data remains valid.



Calibrating single frequency measurements

Like for all other measurements of the R&S FSV3 Noise measurements application, perform a calibration before a single frequency measurement for increased accuracy.

There is an easy way to calibrate single frequency measurements, if you already calibrated the application for swept or list measurements. If the single frequency is part of the frequency list, the measurement is already calibrated for that frequency and no further steps are necessary. The application recalls the last calibration values when you switch back to sweep mode or frequency table mode.

Only if you use a single frequency that is not part of the frequency list, you must calibrate this frequency point first.

- Interpolation
If you change the frequency, while the frequency span stays the same or is reduced, the application interpolates the correction data for the new measurement points. A new calibration is not required.
However, measurements based on interpolated data can result in an increased measurement uncertainty. Highly accurate measurements that conform to the values specified in the specifications document are only possible at calibrated measurement points.
Note that useful interpolation is possible only if essential calibration parameters (e.g. impedance or attenuation) change only slightly. This is the case if the distance between the original calibration points is sufficiently small.
If the span increases compared to the span during calibration, a new calibration is necessary.
If the application interpolates the calibration data, it shows a corresponding label in the channel bar and a warning message in the status bar.
- Invalid calibration
If you change one of the amplitude parameters (e.g. the attenuation), calibration is labeled invalid. In that case, calibration is not accurate, because the settings are not in line with the settings at the time the R&S FSV/A has been calibrated. If cali-

bration is invalid, repeat the calibration or restore the settings as they were during the calibration.



Saving calibration data

If you save the current configuration or measurement results to a data set, calibration data is part of that data set.

For more information on saving and restoring data sets, see the "Storing and Recalling Instrument Settings and Measurement Data" chapter in the R&S FSV/A user manual.

The picture below shows a typical calibration setup that includes a noise source.

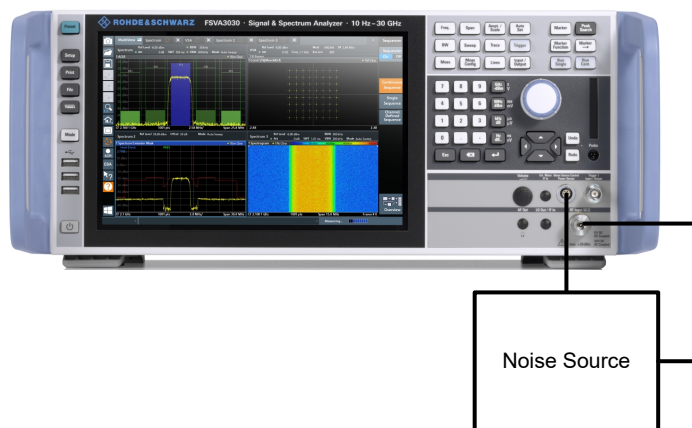


Figure 4-1: Noise figure calibration setup

1. Connect the noise source directly and without a cable to the RF input of the analyzer.
2. Connect the noise source to the +28 V voltage supply (Noise Source Control connector) on the back of the R&S FSV/A.
To connect the noise source to the voltage supply, you need a coaxial cable.

After you have set up calibration, there are several ways to start calibration.

- In the "Noise Overview" dialog box, press "Calibrate".
- In the "Sweep" menu, press "Calibrate".

Calibration Save



If the user has performed a valid calibration on the instrument, the calibration results can be saved by using "Calibration Save" in the "Export" dialog. This provides the possibility to use once stored calibration results at a later point.

Remote command:

`[SENSe:]CORRection:SAVE` on page 146

Calibration Recall



Calibration results that have been stored once on the instrument can be recalled by using "Calibration Recall" in the "Import" dialog.

To achieve a valid calibration by importing a saved one, all parameters of R&S FSV/A-K30 must match exactly to the ones that have been used for the calibration. At the import of a calibration, a preview dialog is shown which contains all relevant parameters of the calibration to be imported and an indication (green / red) if they match to the current instrument and option settings. Only if the calibration context summary is green, the calibration import can be done. If the calibration context summary is red, importing the calibration results would lead to an invalid calibration status for the current settings. Thus the calibration results cannot be imported in this case. If the calibration context summary is green but some of the individual entries are red (i.e. they differ from the current settings), the calibration results still can be imported. The import will then overwrite the red marked settings with the ones from the stored calibration to ensure the settings match.



Remote command:

`[SENSe:]CORRection:RECall` on page 145

4.7 Using smart noise sources

A smart noise source (SNS) provides its own ENR and uncertainty tables and a temperature value from an internal measurement. Thus, accuracy is improved and less configuration efforts are required.

Separating signals by selecting an appropriate resolution bandwidth

When you connect a smart noise source, the R&S FSV/A automatically loads its ENR table and stores it for future measurements. The ENR table remains stored on the instrument even after the noise source is disconnected. If the table already exists on the R&S FSV/A, the contents are updated, if necessary. The contents of the most recently loaded SNS ENR table are also stored as the "default" ENR table. Thus, they remain available even if the noise source type is changed, for example to "noise diode". The ENR tables for smart noise sources are shown for reference only and cannot be edited in the R&S FSV3 Noise measurements application. The name of each ENR table contains the serial number of the SNS.

For smart noise sources, use the lemosa female connector on the front panel. To connect a noise source with a BNC connector, use the noise source control female connector on the rear panel (requires the R&S R&S FSV/A-B28V option). The R&S R&S FSV/A-B28V option allows the use of conventional noise sources without the additional features such as temperature correction and automatic transfer of the ENR table. For more information, refer to the R&S FSV/A Getting Started User Manual.

Test Setup

Connect the smart noise source to the Lemos Power Sensor / Noise Source Control connector on the R&S FSV/A. (For models without a Lemos connector, connect the SNS to the BNC Noise source control connector and a USB connector on the R&S FSV/A.) Then connect the SNS output to the DUT or the RF Input connector on the R&S FSV/A. Only one SNS can be active on the R&S FSV/A at any time.

The identification and setup procedure after connecting the FS-SNS may take up to 10 seconds.

4.8 Separating signals by selecting an appropriate resolution bandwidth

The resolution bandwidth defines the 3 dB bandwidth of the resolution filter to be used. An RF sinusoidal signal is displayed according to the passband characteristic of the resolution filter (RBW), i.e. the signal display reflects the shape of the filter.

The highest sensitivity is obtained at the smallest bandwidth (1 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

The higher spectral resolution with smaller bandwidths is won by longer sweep times for the same span. The sweep time has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

If the RBW is too large, signal parts that are very far away (e.g. from a different signal) are considered in the measurement and distort the results. The displayed noise increases.

If the RBW is too small, the measurement time increases.

Variable RBW and sweep time for low-frequency measurements

Usually, a constant RBW and sweep time is used for the entire measurement. However, for low-frequency measurements (under 10 MHz), smaller bandwidths and longer sweep times are required to improve accuracy of the results. Using a small RBW and long sweep time for the entire span would increase measurement time significantly. In this case, a variable RBW and sweep time can be defined for lower frequencies, depending on the current frequency of the sweep point. The variable RBW and sweep times are defined in the frequency table (see [Chapter 5.2.3, "Using a frequency table"](#), on page 48). The defined RBW and sweep times are also included in a table export. In the channel bar, the bandwidth and sweep time range of the variable values is indicated.

4.9 Analyzing several traces - trace mode

The trace mode determines the way the data is processed and displayed. The application provides the following trace modes.

Table 4-1: Overview of available trace modes


Trace Mode	Description
Blank	Hides the selected trace.
Clear Write	Overwrite mode: the trace is overwritten by each sweep. This is the default setting.
View	The current contents of the trace memory are frozen and displayed.



Each time the trace mode is changed, the selected trace memory is cleared.

The default trace mode for the first trace is Clear/Write. For trace 2-4, the default trace mode is "Blank". If you require another mode, you have to set it manually.

As you can have up to four traces simultaneously, you can compare the results with different measurement configurations. For example, freeze a trace and use it as a reference trace.

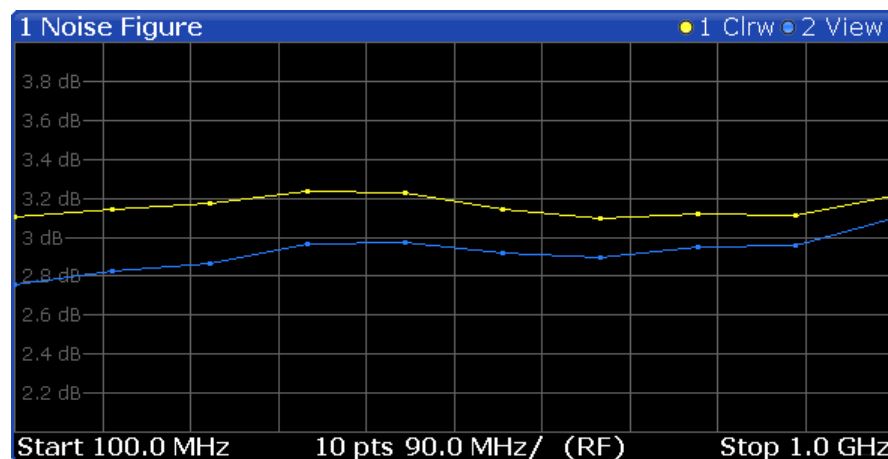

If you change the scaling of the y-axis, the R&S FSV/A automatically adapts the trace data to the changed display range. Thus, you can perform an amplitude zoom after the measurement to show details of the trace.

4.10 Using markers

Markers are used to mark points on traces, to read out the results of a particular measurement point or compare results of different traces. The noise application provides four markers.

When you activate a marker, the application automatically positions it on the first measurement point (left border of the diagram) of trace 1, regardless of how many traces are active. A marker is always positioned on the same horizontal position in all active measurement windows. If you change the position of a marker in one window, the application adjusts the position of that marker in all other measurement windows. Thus, the marker results for a specific marker are always for the same frequency, which makes it easier to compare results.




Markers in single frequency mode

When you use a marker for single frequency measurements, the marker is positioned on a particular index value and not a particular measurement point. This means that during continuous measurements, the marker remains on the index value you have put it on. It does not move down the line with the results.


To move a marker, you can use several methods.

- Enter a particular measurement frequency in the input field that opens when you activate a marker.
- Move the marker around with the rotary knob or the cursor keys.
- Drag the marker around using the touchscreen.

All markers can be used either as normal markers or delta markers. A normal marker indicates the absolute signal value at the defined position in the diagram. A delta marker indicates the value of the marker relative to the specified reference marker (by default marker 1).

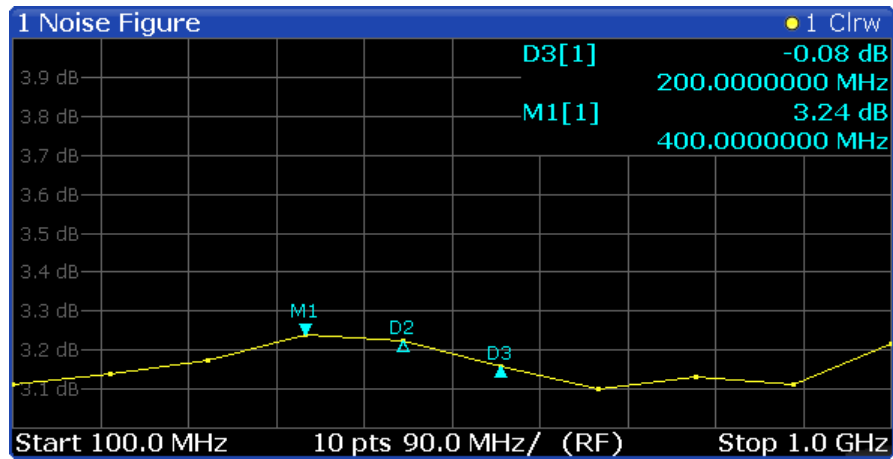

The application always positions the marker on the trace with the lowest number that is in Clear/Write trace mode. To set the marker on another trace, use the "Marker to Trace" function. With this function, you can also position a marker on a trace that is in "View" trace mode, e.g. to compare measurement results. Note that at least one active marker has to be a normal marker.

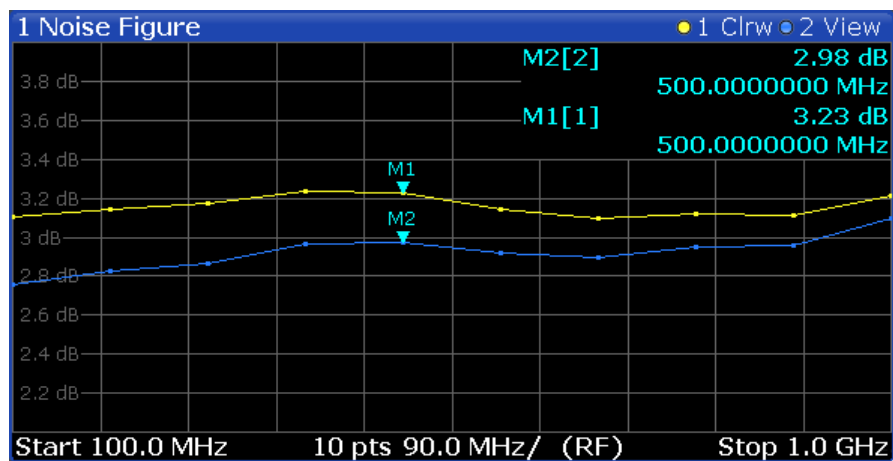

The application shows the results at the marker position directly in the diagram area (up to two markers) or in the marker table (if you use more than two markers).

Marker information in diagram area

By default, the results of the last two markers or delta markers that were activated are displayed in the diagram area.



The following information is displayed there:

- The marker type (M for normal, D for delta, or special function name)
- The marker number (1 to 4)

- The assigned trace number in square brackets []
- The marker value on the y-axis
- The marker position on the x-axis

Marker information in marker table

In addition to the marker information displayed within the diagram area, a marker table can be displayed in a separate window. For more information on the contents of the marker table, see "[Marker Table](#)" on page 22.

5 Configuration

"Noise figure" measurements require a special application on the R&S FSV/A, which you activate using [MODE].



The Noise Source Control connector on the R&S FSV/A is also a prerequisite for the R&S FSV3 Noise measurements application. Without this connector, no measurement can be performed.

When you activate a measurement channel in the R&S FSV3 Noise measurements application, a measurement for the input signal is defined with the default configuration. The "Noise Figure" menu is displayed and provides access to the most important configuration functions.



Unavailable hardkeys


Note that the [AMPT], [AUTO SET], [BW], [TRIG] and [MKR FUNC] keys have no contents and no function in the R&S FSV3 Noise measurements application.

- [Configuration overview](#).....42
- [Defining the measurement frequency](#)..... 44
- [Selecting DUT characteristics](#).....51
- [Configuring the noise source](#)..... 52
- [Configuring additional loss](#).....60
- [Configuring the analyzer](#).....65
- [Using the uncertainty calculator](#).....69
- [Performing measurements](#).....75
- [Configuring inputs and outputs of the R&S FSV/A](#).....77

5.1 Configuration overview



Throughout the measurement channel configuration, an overview of the most important currently defined settings is provided in the "Overview". The "Overview" is displayed when you select the "Overview" icon, which is available at the bottom of all softkey menus.

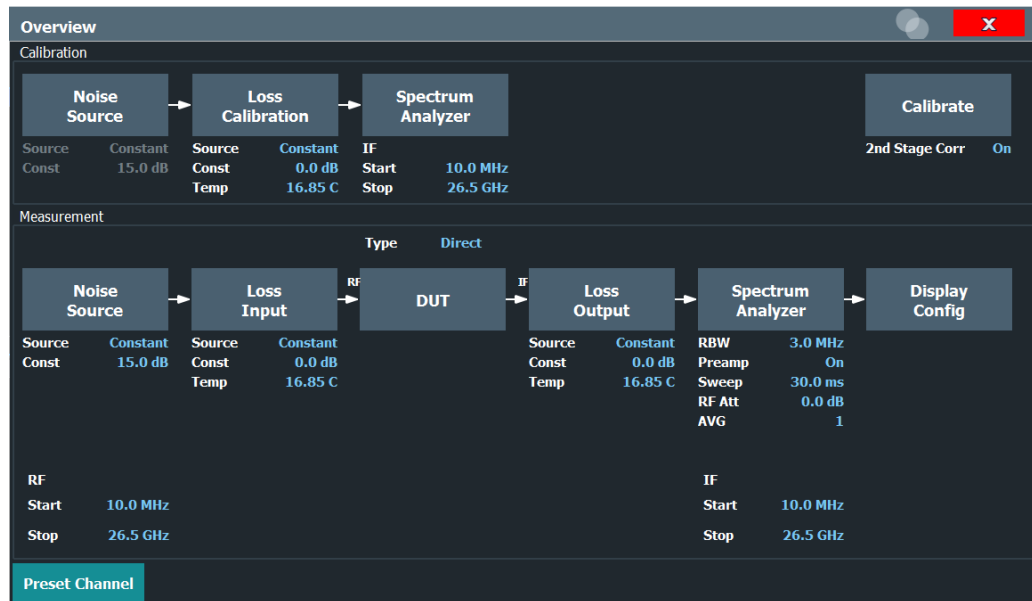

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. Thus, you can easily configure an entire measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview".

In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

To perform a calibration

1. Noise Source
See [Chapter 5.4, "Configuring the noise source"](#), on page 52.
2. Calibration Loss
See [Chapter 5.5, "Configuring additional loss"](#), on page 60
3. Spectrum Analyzer
See [Chapter 5.6, "Configuring the analyzer"](#), on page 65.
4. Calibration
See ["Calibrate"](#) on page 76

To perform a measurement

1. Noise Source
See [Chapter 5.4, "Configuring the noise source"](#), on page 52.
2. Input and output losses
See [Chapter 5.5, "Configuring additional loss"](#), on page 60.
3. DUT configuration
See [Chapter 5.3, "Selecting DUT characteristics"](#), on page 51
4. Spectrum Analyzer

See [Chapter 5.6, "Configuring the analyzer"](#), on page 65.

5. Display Configuration

See [Chapter 6.1, "Configuring the display"](#), on page 84

To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box. Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

Preset Channel

Select "Preset Channel" in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel* to their default values.

Note: Do not confuse "Preset Channel" with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channels* on the R&S FSV/A (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel[:EXEC]` on page 112

Specific Settings for

The channel can contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specific Settings for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

5.2 Defining the measurement frequency

- [Defining a frequency set](#)..... 44
- [Configuring single frequency measurements](#).....47
- [Using a frequency table](#)..... 48

5.2.1 Defining a frequency set

Access: "Overview" > "DUT" > "Frequency Config"

These settings define the frequency characteristics for the measurement.

The information in this tab is also the basis for an automatic population of the frequency table. All parameters of this dialog are interdependent. If you change one parameter, at least one other parameter is changed by the application.




If you change a frequency set, perform a new calibration to ensure accurate results.



Preamplifier

If a preamplifier is used, make sure the defined (and possibly upconverted) IF frequencies for the measurement stay below the maximum frequency the preamplifier supports. For the R&S FSV/A-B22 option, the maximum frequency is 7 GHz. However, the preamplifier can be activated or deactivated individually for different tuning modes. For example, for a sweep mode which requires a span above 7 GHz it is deactivated, while for a single frequency measurement at 1 GHz it can be activated.

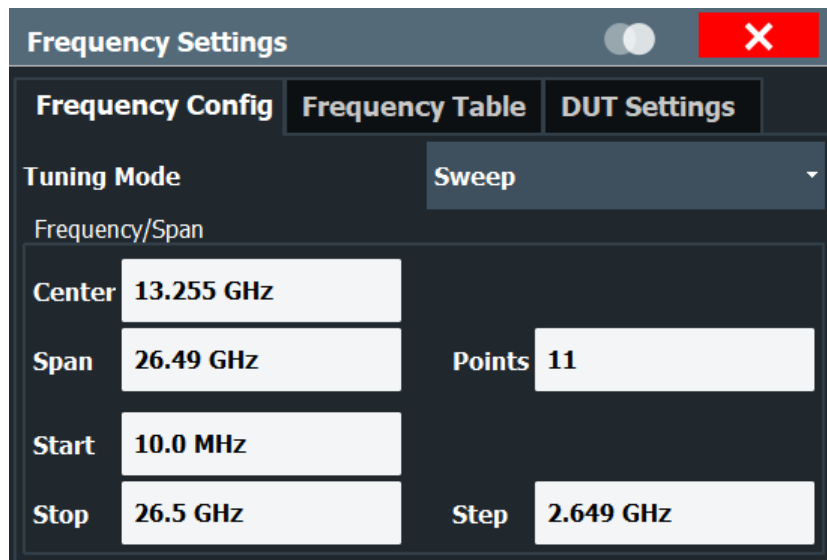

Tuning Mode..... 45
 Center..... 46
 Span..... 46
 Start and Stop Frequency..... 46
 (Measurement) Points..... 47
 Step..... 47

Tuning Mode

Selects the tuning or measurement mode.

For more information, see [Chapter 4.1, "Tuning modes"](#), on page 24.

Tuning mode selection is also available via softkeys ("Sweep Mode", "Frequency Table Mode", "Single Frequency Mode") in the "Sweep" menu.

Note: A preamplifier can be activated or deactivated individually for different tuning modes. When you switch tuning modes, the defined preamplifier state is adapted.

"Sweep" The measurement is based on an automatically generated frequency set.

"Frequency Table"	The measurement is based on a customized frequency table. For more information, see Chapter 5.2.3, "Using a frequency table" , on page 48.
"Single Frequency"	The measurement measures a single frequency only. For more information, see Chapter 5.2.2, "Configuring single frequency measurements" , on page 47.

Remote command:

Frequency sweep measurement:

[\[SENSe:\]CONFigure:LIST:CONTInuous](#) on page 122

[\[SENSe:\]CONFigure:LIST:SINGle](#) on page 123

[INITiate<n>\[:IMMediate\]](#) on page 162

Single frequency measurement:

[\[SENSe:\]CONFigure:FREQuency:CONTInuous](#) on page 122

[\[SENSe:\]CONFigure:FREQuency:SINGle](#) on page 122

[INITiate<n>\[:IMMediate\]](#) on page 162

Center

Defines the center of the measurement frequency range.

If you change the center frequency, the application changes the start and stop frequency according to the span you have set.

The "Center" setting is also available via [FREQ].

Remote command:

Frequency list measurement:

[\[SENSe:\]FREQuency:CENTer](#) on page 123

Single frequency measurement:

[\[SENSe:\]FREQuency:SINGle](#) on page 125

Span

Defines the measurement span.

If you change the span, the application changes the start frequency, the stop frequency and the stepsize according to the center frequency and the measurement points.

The "Span" setting is also available via [SPAN].

Remote command:

[\[SENSe:\]FREQuency:SPAN](#) on page 125

Start and Stop Frequency

Defines the start and stop frequencies.

If you change the start or stop frequency, the application changes the center frequency, the span and the measurement points according to the new values and the stepsize.

The "Start" and "Stop" settings are also available via [FREQ].

Remote command:

Start frequency:

[\[SENSe:\]FREQuency:START](#) on page 125

Stop frequency:

[\[SENSe:\]FREQuency:STOP](#) on page 126

(Measurement) Points

Defines the measurement points.

For frequency list measurements, the number of measurement points corresponds to the number of entries in the frequency table. The number of points displayed in the graphical results is also the same.

If you change the measurement points, the application changes the stepsize according to the span.

The "Points" setting is also available via [SPAN].

Remote command:

[SENSe:] FREQuency: POINTs on page 124

Step

Defines the frequency step size in the frequency table.

The stepsize corresponds to the distance between two consecutive measurement points.

If you change the stepsize, the application changes the measurement point according to the span.

The "Stepsize" setting is also available via [FREQ].

Remote command:

[SENSe:] FREQuency: STEP on page 126


5.2.2 Configuring single frequency measurements

Access: "Overview" > "DUT" > "Frequency Config" > "Tuning Mode: Single Frequency"

These settings define the frequency characteristics for the measurement.



If you change the frequency, perform a new calibration to ensure accurate results.

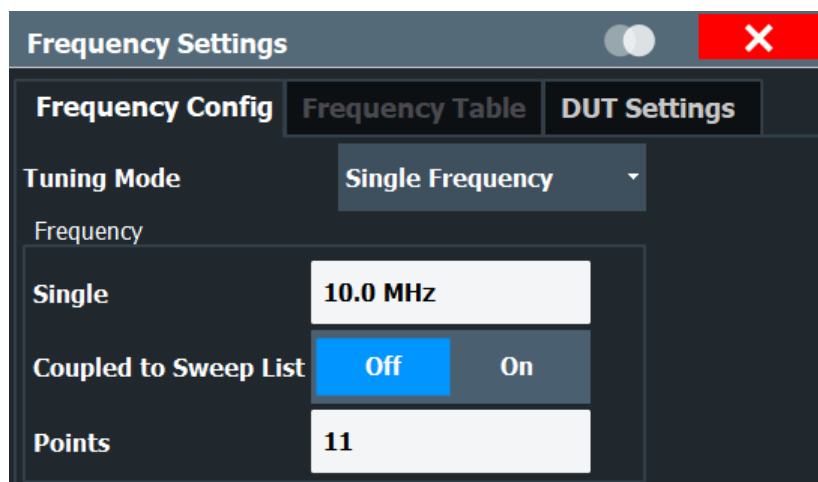

Single (Frequency).....	48
Coupled to Sweep List.....	48
(Measurement) Points.....	48

Single (Frequency)

Defines the frequency that the single frequency measurement is performed on.

The "Single" setting is also available via [FREQ].

Remote command:

[SENSe:]FREQuency:SINGle on page 125

Coupled to Sweep List

Couples or decouples frequency selection to the contents of a sweep list.

If you couple the frequency to the sweep list, the application allows you to select only the frequencies currently part of the frequency list. If you enter another frequency, the application automatically selects the nearest frequency of the frequency list. If the frequency list has been calibrated previously, calibration remains valid for those frequencies when you change the tuning mode.

If you turn off the coupling, you can define any frequency for single frequency measurements. Note, however, that you have to calibrate the measurement for that frequency.

Remote command:

[SENSe:]FREQuency:SINGle:COUPled on page 125

(Measurement) Points

Defines the number of measurement points for single frequency measurements.

For single frequency measurements, the number of measurement points corresponds to the number of measurements (index values) performed on a single frequency.

For more information, see "Single frequency measurements" on page 14.

The "Points" setting is also available via [SPAN].

Remote command:

[SENSe:]FREQuency:POINTs on page 124


5.2.3 Using a frequency table

Access: "Overview" > "DUT" > "Frequency Config" > "Frequency Table"

The "Frequency Table" tab in the "Frequency Settings" dialog box contains functionality to manage the measurement frequencies.

The application populates the table according to the information you entered in the "Frequency Config" tab when you select "Populate Table".

Note that changes to the frequency table take effect only if you select the "Frequency Table" tuning mode.

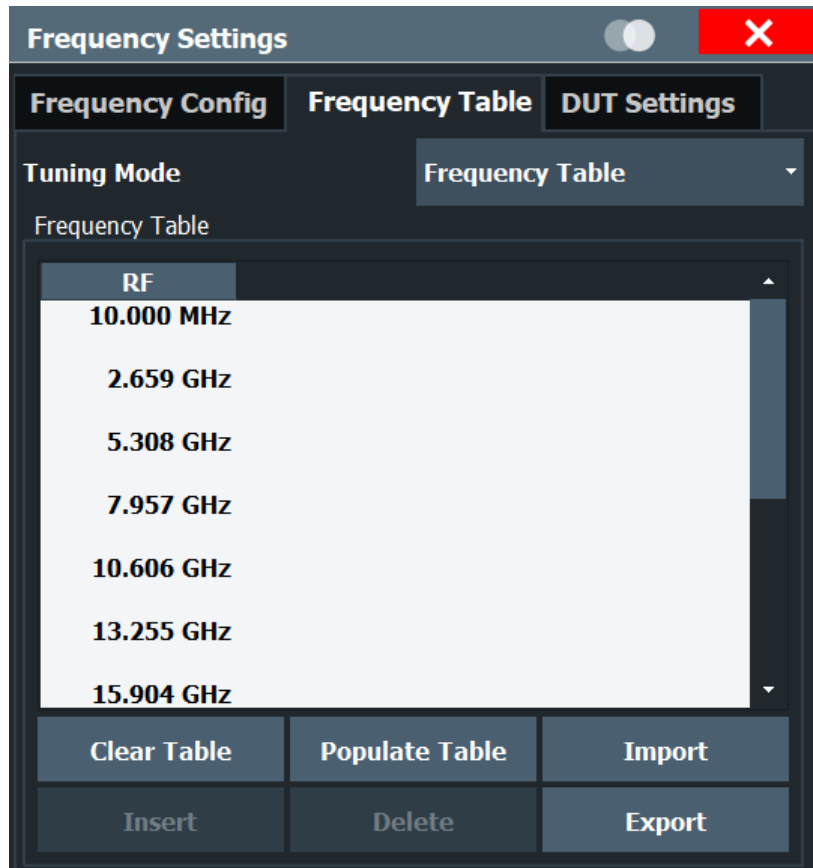

Frequency Table.....	49
Clear Table.....	50
Populate Table.....	50
Insert.....	50
Delete.....	50
Import / Export.....	50

Frequency Table

Shows the current measurement points.

The table is made up of one column that represents the measurement frequency. Each frequency corresponds to one measurement point. The length of the table is variable (up to a maximum of 10001 points).

When you perform measurements in "Sweep" or "Single Frequency" tuning mode, the contents of the table have no effect on the measurement.

When you select a table entry in "Frequency Table" tuning mode, you can edit it or add a new frequency below the selected frequency. A new frequency has to be higher than the last table entry and lower than the next table entry.

Note: If a [Preamplifier](#) is used, make sure the defined (and possibly upconverted) frequencies for the measurement stay below the maximum frequency the preamplifier supports.

If the RBW and sweep time settings are set to "variable" in the measurement settings (see [Resolution Bandwidth \(RBW\)](#) and ["Sweep Time"](#) on page 66), you can also define those values in the frequency table.

Select [Populate Table](#) to predefine the RBW and sweep times to be used. For each sweep point with a frequency under 10 MHz in the table, suitable settings are defined. For higher frequencies, the values provided in the measurement settings are used (indicated by "--" as they are automatically updated if the measurement settings change.) All predefined values in the table can be overwritten manually.

The defined RBW and sweep times are also included in a table export.

See also ["Variable RBW and sweep time for low-frequency measurements"](#) on page 38.

Clear Table

Deletes the contents of the table.

Populate Table

Populates or restores the measurement frequencies based on the center frequency, the start and stop frequencies, the span, the stepsize and the number of measurement points.

If the RBW and sweep time settings are set to "variable" in the measurement settings (see [Resolution Bandwidth \(RBW\)](#) and ["Sweep Time"](#) on page 66), those values are also predefined. For each sweep point with a frequency under 10 MHz in the table, suitable settings are defined. For higher frequencies, the values provided in the measurement settings are used (indicated by "--" as they are automatically updated if the measurement settings change.) All predefined values in the table can be overwritten manually.

See also ["Variable RBW and sweep time for low-frequency measurements"](#) on page 38.

Remote command:

[\[SENSe:\] FREQuency: TABLE: DATA](#) on page 123

[\[SENSe:\] FREQuency: LIST: DATA](#) on page 124

RBW and sweep time set to variable: [\[SENSe:\] BANDwidth: LIST: DATA](#) on page 124

Insert

Inserts a new measurement point above the one you have selected.

Delete

Deletes the currently selected measurement point.

Import / Export

Opens a dialog box to select a frequency table to import or export.

An import copies the frequency table into the default frequency table directory. An export copies the table to a location outside the default frequency table directory, e.g. a memory stick. The file extension has to be *.freq.


If variable RBW and sweep times are enabled, they are also included in a table export (see ["Frequency Table"](#) on page 49).

For details on the required file format, see [Chapter A, "Reference: frequency table file format"](#), on page 207.

5.3 Selecting DUT characteristics

Access: "Overview" > "DUT" > "DUT Settings"

The "DUT" button opens a dialog box to configure the characteristics of the DUT you are testing. The dialog box contains a schematic overview of the DUT input and output characteristics and the way it is integrated into the test setup.

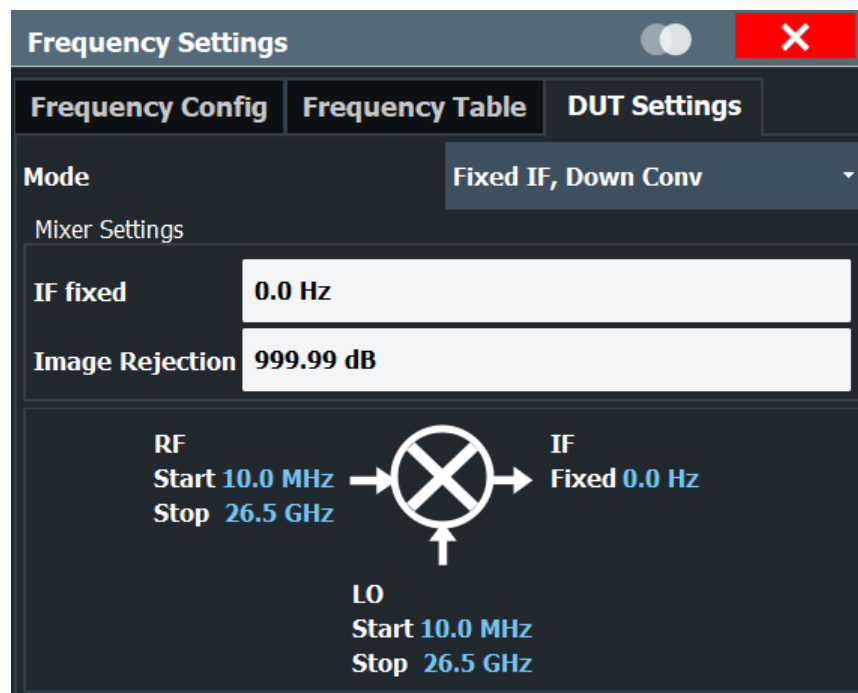

Mode	51
LO Fixed	52
IF Fixed	52
Image Rejection	52

Mode

Selects the measurement mode.

The required measurement mode depends on the type of DUT you are testing. For more information, see [Chapter 4.3, "DUT types"](#), on page 28.

Note: For upconverting measurements, if a preamplifier is used, make sure the upconverted frequencies for the measurement stay below the maximum frequency the preamplifier supports.

Remote command:

DUT type: `[SENSe:]CONFigure:MODE:DUT` on page 128

LO type: `[SENSe:]CONFigure:MODE:SYSTem:LO` on page 127

LO Fixed

Defines a fixed LO frequency for measurements on frequency-converting DUTs with a fixed LO.

After you have defined the LO frequency, the application updates the frequency list accordingly.

The "LO" setting is also available via [FREQ].

Remote command:

[\[SENSe:\]CONFigure:MODE:SYSTem:LO:FREQuency](#) on page 127

IF Fixed

Defines a fixed intermediary frequency (IF) for measurements on frequency-converting DUTs with a fixed IF.

After you have defined the intermediary frequency, the application updates the frequency list accordingly.

The "IF" setting is also available via [FREQ].

Remote command:

[\[SENSe:\]CONFigure:MODE:SYSTem:IF:FREQuency](#) on page 127

Image Rejection

Turns image rejection of the DUT on and off.

If you set an image rejection of 0 dB, the image frequency passes completely. If you set a high image rejection (up to 999.99 dB), the image frequency is suppressed completely. For DUTs that have a partial image rejection, define the amount of suppression.

For more information, see [Chapter 4.5, "Image frequency rejection"](#), on page 31.

Remote command:

[\[SENSe:\]CORRection:IREJection](#) on page 128

5.4 Configuring the noise source

The noise source characteristics are used to calculate the effective noise temperature of the noise source. The more accurate the specified characteristics of the noise source you are using, the more accurate the measurement results. The noise source characteristics must be supplied by its manufacturer.


- [Defining the noise source characteristics](#).....52
- [Using an ENR or temperature table](#).....56

5.4.1 Defining the noise source characteristics

Access: "Overview" > "Noise Source" > "ENR / Temp Settings"

The noise characteristics of noise sources with diode characteristics are usually defined by their ENR (Excess Noise Ratio). The noise characteristics of noise sources with resistor characteristics are defined by their noise (or ambient) temperatures (T_{hot} and T_{cold}). T_{cold} is typically at a very low temperature of liquid nitrogen or liquid helium.

Both noise source types can have different ENR values during the calibration and the measurement stage. You can use either the same type of noise source for both calibration and measurement, or use different types of noise sources for calibration and measurement.

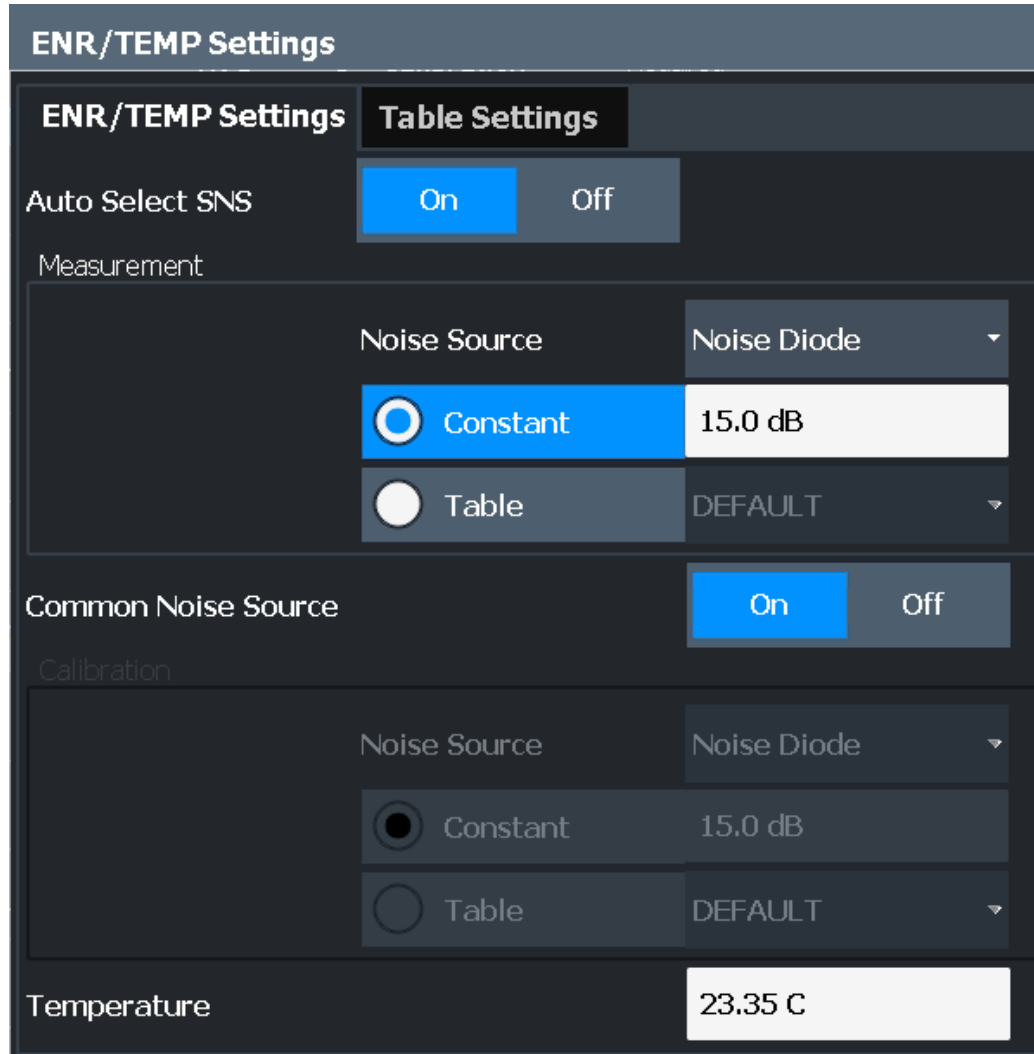

Auto Select SNS..... 53
 Noise Source..... 54
 Measurement..... 54
 Common Noise Source..... 55
 Calibration..... 55
 Temperature..... 56


Auto Select SNS

If enabled (default), the R&S FSV3 Noise measurements application automatically recognizes a connected smart noise source and uses it for the noise measurement. The provided ENR and uncertainty tables and temperature are loaded and used for the measurement. The recognized serial number of the SNS is indicated in the channel bar and dialogs of the R&S FSV3 Noise measurements application.

If "Auto Select SNS" is ON and a SNS is connected, a green message with information about the connected SNS is displayed:



If no SNS is connected, a red "No SNS connected" warning is displayed:



If "Auto Select SNS" is disabled, you must manually change the noise source to SNS and select the required tables, if necessary (see "Frequency Table" on page 49).

Noise Source

Access: "Overview" > "Noise Source" > "ENR / Temp Settings" > "Noise Source"

You can select the type of noise source and its characteristics independently for the [Calibration](#) and the [Measurement](#).

- | | |
|----------------------|--|
| "Diode" | Selects a noise source with diode characteristics. The frequency characteristics of the noise source are defined by the Excess Noise ratio (ENR). |
| "Resistor" | Selects a test setup that uses two resistors which act as a noise source. One of the resistors has a low noise or ambient temperature (a cold resistor), the other has a high noise or ambient temperature (a hot resistor). The noise characteristics of the resistor are defined by its noise temperatures T_{hot} and T_{cold} .
When you select the resistor noise source, the application automatically starts the manual measurement mode, which is indicated in a message at the bottom of the dialog box. |
| "Smart Noise Source" | Selects a smart noise source, which provides its own ENR and uncertainty tables. The serial number of the connected noise source is automatically recognized and indicated. Otherwise, enter the number of a noise source to continue preconfiguring the measurement. |

Remote command:

Measurement: `[SENSe:]CORRection:ENR[:MEASurement]:TYPE` on page 135

`[SENSe:]CORRection:ENR[:MEASurement]:SNS:SRNumber` on page 136

Calibration: `[SENSe:]CORRection:ENR:CALibration:TYPE` on page 131

`[SENSe:]CORRection:ENR:CALibration:SNS:SRNumber` on page 136

Measurement

Selects the source of the ENR or temperature values.

The frequency characteristics can be approximated by a constant or be based on an ENR or temperature table.

If the ENR or temperature is a constant, the same values are used for all frequencies in the frequency table. If you have selected a constant ENR, you have to define its magnitude in the input field next to the radio button. If you have selected a constant temperature, you have to define the temperatures of the resistor in the input fields next to the radio button. T_{hot} is the temperature of a resistor with a low noise or ambient temperature; T_{cold} is the temperature of a resistor with a high noise or ambient temperature.

If the noise characteristics are based on a table, the ENR level and temperatures typically depend on the measurement frequency. You can select an existing table from the dropdown menu next to the radio button, if it is active. For more information on ENR and temperature tables, see [Chapter 5.4.2, "Using an ENR or temperature table"](#), on page 56.

When "Common Noise Source" is on, the ENR is used for both measurement and calibration.

Remote command:

ENR mode: `[SENSe:]CORRection:ENR[:MEASurement]:MODE` on page 134

Constant ENR: `[SENSe:]CORRection:ENR[:MEASurement]:SPOT` on page 134

Select table: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect`
on page 133

Constant temperature: `[SENSe:]CORRection:ENR[:MEASurement]:SPOT:COLD`
on page 135

Constant temperature: `[SENSe:]CORRection:ENR[:MEASurement]:SPOT:HOT`
on page 135

Common Noise Source

Turns the use of a common ENR on and off.

Common ENRs have the same characteristics for the measurement and calibration. If you turn off common ENR, you can define an additional ENR to be used during calibration.

Define additional ENR for measurements on frequency converting DUTs, if one noise source does not cover the frequency range at the DUT input (RF) and for calibration (IF).

Remote command:

`[SENSe:]CORRection:ENR:COMMon` on page 131

Calibration

Selects the source of the ENR or temperature values used during calibration.

The frequency characteristics can be a constant or be based on an ENR or temperature table.

If the ENR or temperature is a constant, the same value is used for all frequencies in the frequency table. If you have selected a constant ENR, you can also define its value in the input field next to the radio button. If you have selected a constant temperature, you have to define the temperatures of the resistor in the input fields next to the radio button. T_{hot} is the temperature of a resistor with a low noise or ambient temperature; T_{cold} is the temperature of a resistor with a high noise or ambient temperature.

If the noise source characteristics are based on a table, the ENR level and temperature depend on the measurement frequency. In that case, the values are interpolated to the measurement points. You can select a table from the dropdown menu next to the radio button, if it is active. For more information on ENR tables, see [Chapter 5.4.2, "Using an ENR or temperature table"](#), on page 56.

The calibration settings are available if the "Common Noise Source" is off.

Remote command:

ENR mode: `[SENSe:]CORRection:ENR:CALibration:MODE` on page 130

Constant ENR: `[SENSe:]CORRection:ENR:CALibration:SPOT` on page 130

Select table: `[SENSe:]CORRection:ENR:CALibration:TABLE:SElect`
on page 131

Constant temperature: `[SENSe:]CORRection:ENR:CALibration:SPOT:COLD`
on page 129

Constant temperature: `[SENSe:]CORRection:ENR:CALibration:SPOT:HOT`
on page 129

Temperature

Defines the absolute room temperature in degree Celsius or Fahrenheit.

The room temperature is required for the calculation of the real ENR of the noise source, because an ENR table is based on a temperature of 290K.

For smart noise sources, the temperature is provided automatically by the connected SNS itself. If no SNS is connected, the most recently loaded value is indicated. The provided temperature is used for all noise sources throughout the measurement.

To change the unit of the temperature from Celsius to Fahrenheit, change the date format from "DE" to "US" in the "General" display settings.

- Press [SETUP].
- Select "Display".
- Select the "General" tab.
- Select "DE" for Celsius or "US" for Fahrenheit.

Note: If you define the temperature via remote control, the unit is degree Kelvin.

Remote command:

`[SENSe:]CORRection:TEMPerature` on page 136

5.4.2 Using an ENR or temperature table

Access: "Overview" > "Noise Source" > "Table Settings"

The "Table Settings" tab in the "ENR/TEMP Settings" dialog box contains the functionality to create and edit ENR or temperature tables.

ENR or temperature tables contain the noise source characteristics for particular frequencies. If the table does not contain ENR or temperature values for one of the measurement frequencies, the application interpolates between the values.

The "Table Settings" tab contains a list of ENR and temperature tables currently available on the R&S FSV/A and shows the table currently in use if the "ENR/TEMP Settings" are enabled.

In addition, the tab contains functionality to create new tables and modify existing ones.

Noise Source.....	57
New.....	57
Edit.....	57
Delete.....	58
Copy To.....	58
Import / Export Table.....	58
Edit Table.....	58

Noise Source

Selects the type of noise source you are using for the measurement. The type of noise source selected in the "ENR/TEMP Settings" > "Noise Source" dialog is adopted automatically.

The noise source type affects the data type that the table contains. For a "Noise Diode", the table contains the ENR values of the noise source you are using. For a "Resistor", the table contains the noise temperatures of the resistors (T_{hot} and T_{cold}).

For a smart noise source, the table contains the provided ENR and uncertainty table. The table for the connected noise source is automatically recognized and highlighted. The name of the ENR table contains the serial number of the SNS. The "default" table also contains the data for the most recently connected smart noise source. The tables for all previously connected noise sources, whose ENR tables remain stored on the instrument, are also listed. Smart noise source tables are for reference only and cannot be edited.

For more information on the noise source types, see "Noise Source" on page 54.

Remote command:

`[SENSe:]CORRection:ENR[:MEASurement]:TYPE` on page 135

New

Opens the [Edit Table](#) dialog box to create a new table.

The contents of the dialog box are empty.

Smart noise source tables are shown for reference only and cannot be edited. A message indicates whether the SNS with the selected serial number is currently connected to the R&S FSV/A or not. If it is connected, the table data reflects the most recent data provided by the SNS.

Remote command:

Table selection: `[SENSe:]CORRection:ENR:CALibration:TABLE:SElect`
on page 131

and: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect` on page 133

Diode: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA]` on page 132

Resistor: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA]` on page 133

Edit

Opens the [Edit Table](#) dialog box to modify the selected table.

Smart noise source tables are for reference only and cannot be edited.

Remote command:

Table selection: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect`
on page 133

and: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect` on page 133

Diode: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA]` on page 132

Resistor: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA]`
on page 133

Delete

Deletes the selected table.

Smart noise source tables cannot be deleted.

Remote command:

Diode: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:DElete` on page 132

Resistor: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:DElete`
on page 133

Copy To

Opens the [Edit Table](#) dialog box to modify the selected table and save it under a new name.

Import / Export Table

Opens a dialog box to select a table to import or export.

Smart noise source tables can be exported, but not re-imported. Tables for smart noise sources are always loaded directly from the SNS itself. However, you can edit and use the SNS tables for other noise sources, such as noise diodes.

Edit Table

Defines the noise source characteristics or the loss characteristics of additional measurement equipment.

The noise source and loss tables are made up of up to 10001 data points. A data point consists of a frequency and its corresponding ENR, temperature or loss value. The ENR and temperature values must be supplied by the manufacturer of the noise source or resistor. The loss characteristics of measurement equipment must also be supplied by the manufacturer.

Frequency	Value
1.00000000 MHz	1.00 dB
10.00000000 MHz	10.00 dB

"Name"	Name of the ENR, temperature or loss table.
"Comment"	Comment for the ENR, temperature or loss table.
"Frequency"	Frequency of a particular ENR, temperature or loss value.
"Value"	ENR value or loss in dB. For a resistor, the characteristics of the resistor are defined by the noise temperatures T_{hot} and T_{cold} instead of a single value. The unit in that case is Kelvin (degrees).
"Clear Table"	Deletes the contents of the table (frequencies and values) or the loss table.
"Insert"	Inserts a new data point above the selected one.
"Delete"	Deletes the selected data point.
"Save"	Saves the table.
"Cancel"	Exits the "Edit Table" dialog box and returns to the result diagram.

Remote command:

Edit ENR table: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA]`
on page 132

Edit temperature table: `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA]`
on page 133

Edit input loss table: [\[SENSe:\]CORRection:LOSS:INPut:TABLE\[:DATA\]](#)
on page 140

Edit output loss table: [\[SENSe:\]CORRection:LOSS:OUTPut:TABLE\[:DATA\]](#)
on page 142

5.5 Configuring additional loss

These settings configure the loss characteristics of additional equipment in the test setup, such as cables or attenuators at the DUT input or output. The characteristics of such equipment must be supplied by the manufacturer.

Note that loss is only considered during the measurement and not during calibration because the noise source is connected directly to the analyzer input.



Treatment of losses in resistor noise sources

For resistor noise sources, it is not possible to change the loss characteristics.

When you change back to using a diode as a noise source, the previous loss settings are **not** restored. In that case, store loss settings in a loss table for later use.


- [Defining loss](#).....60
- [Using a loss table](#).....63

5.5.1 Defining loss

Access: "Overview" > "Loss Input" / "Loss Output" > "Loss Settings"

The "Loss Settings" tab in the "Loss Settings" dialog box contains settings to define the loss characteristics of miscellaneous equipment in the test setup.

You can define the loss characteristics of the signal path to the DUT input and the signal path from the DUT output to the analyzer.

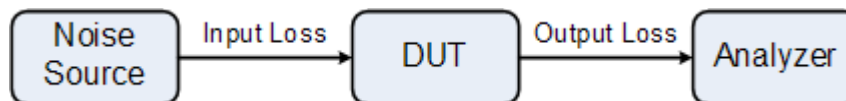

Furthermore, you can define the loss characteristics of the signal path from the noise source directly to the analyzer for the calibration measurement.

Input Loss	61
Output Loss	62
Calibration Loss	62

Input Loss

Defines losses between the noise source and the DUT input.

The input loss is the sum of all losses caused by the measurement equipment. The loss can be constant or based on a loss table.

If the loss is constant, the same loss is used for all frequencies in the frequency table. If you have selected a constant loss, you can also define its value in the input field next to the radio button.

If the loss is based on a table, the loss values are interpolated to the measurement frequencies. You can select a table from the dropdown menu next to the radio button, if it is active. For more information on loss tables, see [Chapter 5.5.2, "Using a loss table"](#), on page 63.

The specified temperature at the time of measurement can be considered in the loss calculation.

Remote command:

Loss mode:

[\[SENSe:\]CORRection:LOSS:INPut:MODE](#) on page 139

Constant loss:

[\[SENSe:\]CORRection:LOSS:INPut:SPOT](#) on page 139

Select loss table:

[\[SENSe:\]CORRection:LOSS:INPut:TABLE:SElect](#) on page 141

Temperature:

[\[SENSe:\]CORRection:LOSS:INPut:TEMPerature](#) on page 141

Output Loss

Selects the loss between the DUT output and the RF input of the analyzer.

The output loss is the sum of all losses caused by the measurement equipment (e.g. connectors, cables or attenuators). The loss can be constant or be based on a loss table.

If the loss is constant, the same loss is used for all frequencies in the frequency table.

If you have selected a constant loss, you can also define its value in the input field next to the radio button.

If the loss is based on a table, the loss values are interpolated to the measurement frequencies. You can select a table from the dropdown menu next to the radio button, if it is active. For more information on loss tables, see [Chapter 5.5.2, "Using a loss table"](#), on page 63.

The current temperature at the time of measurement can be considered in the loss calculation.

Remote command:

Loss mode:

[\[SENSe:\]CORRection:LOSS:OUTPut:MODE](#) on page 141

Constant loss:

[\[SENSe:\]CORRection:LOSS:OUTPut:SPOT](#) on page 142

Select loss table:

[\[SENSe:\]CORRection:LOSS:OUTPut:TABLE:SElect](#) on page 143

Temperature:

[\[SENSe:\]CORRection:LOSS:OUTPut:TEMPerature](#) on page 143

Calibration Loss

Selects the loss between the noise source and the RF input of the analyzer for the calibration measurement.

The loss is the sum of all losses caused by the measurement equipment (e.g. connectors, cables or attenuators). The loss can be constant or be based on a loss table.

If the loss is constant, the same loss is used for all frequencies in the frequency table. If you have selected a constant loss, you can also define its value in the input field next to the radio button.

If the loss is based on a table, the loss values are interpolated to the measurement frequencies. You can select a table from the dropdown menu next to the radio button, if it is active. For more information on loss tables, see [Chapter 5.5.2, "Using a loss table"](#), on page 63.

The current temperature at the time of measurement can be considered in the loss calculation.

Remote command:

Loss mode:

[\[SENSe:\]CORRection:LOSS:CALibration:MODE](#) on page 137

Constant loss:

[\[SENSe:\]CORRection:LOSS:CALibration:SPOT](#) on page 137

Select loss table:

[\[SENSe:\]CORRection:LOSS:CALibration:TABLE:SElect](#) on page 138


Temperature:

[\[SENSe:\]CORRection:LOSS:CALibration:TEMPerature](#) on page 139

5.5.2 Using a loss table

Access: "Overview" > "Loss Input" / "Loss Output" > "Table Settings"

The "Table Settings" tab in the "Loss Settings" dialog box contains the functionality to create and edit loss tables.

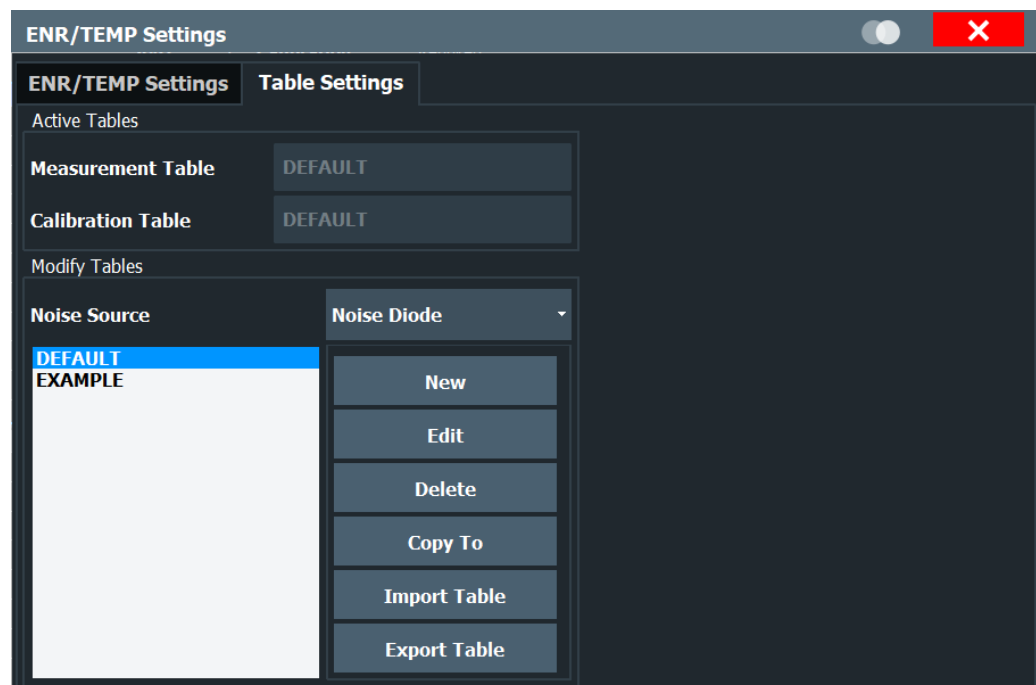

Loss tables contain the loss characteristics of additional frequency-dependent equipment in the test setup. If you are using a loss table, the loss values can be different on

each frequency that is measured. If the table does not contain a loss for one of the measurement frequencies, the application interpolates between values.

The "Table Settings" tab contains a list of loss tables currently available on the R&S FSV/A. It shows the table currently selected in the "Loss Settings" tab.

In addition, the tab contains functionality to create new tables and modify existing ones.

New	64
Edit	64
Delete	64
Copy To	64
Import / Export Table	65

New

Opens the [Edit Table](#) dialog box to create a new loss table.

The contents of the dialog box are empty.

Remote command:

Create input loss table:

[\[SENSe:\]CORRection:LOSS:INPut:TABLE\[:DATA\]](#) on page 140

Create output loss table:

[\[SENSe:\]CORRection:LOSS:OUTPut:TABLE\[:DATA\]](#) on page 142

Create calibration loss table:

[\[SENSe:\]CORRection:LOSS:CALibration:TABLE\[:DATA\]](#) on page 138

Edit

Opens the [Edit Table](#) dialog box to modify the selected table.

Remote command:

Edit input loss table:

[\[SENSe:\]CORRection:LOSS:INPut:TABLE\[:DATA\]](#) on page 140

Edit output loss table:

[\[SENSe:\]CORRection:LOSS:OUTPut:TABLE\[:DATA\]](#) on page 142

Edit calibration loss table:

[\[SENSe:\]CORRection:LOSS:CALibration:TABLE\[:DATA\]](#) on page 138

Delete

Deletes the selected table.

Remote command:

Delete input loss table:

[\[SENSe:\]CORRection:LOSS:INPut:TABLE:DELeTe](#) on page 140

Delete output loss table:

[\[SENSe:\]CORRection:LOSS:OUTPut:TABLE:DELeTe](#) on page 142

Delete calibration loss table:

[\[SENSe:\]CORRection:LOSS:CALibration:TABLE:DELeTe](#) on page 138

Copy To

Opens the [Edit Table](#) dialog box to modify the selected table and save it under a new name.

Import / Export Table

Opens a dialog box to select a loss table to import or export.

An import copies the loss table into the default loss table directory. The file extension can be *.loss or *.s2p. In case the file extension is *.s2p, the S21 vector is parsed out of the *.s2p file. The magnitude of this vector is written to a file with ending *.loss into the default loss directory. This file then can be used like conventional loss files.

An export copies the table to a location outside the default loss table directory, e.g. a memory stick. The file extension will be *.loss.

5.6 Configuring the analyzer

Access: "Overview" > "Spectrum Analyzer"

Or: [MEAS CONFIG] > "Meas Settings"

The measurement settings include parameters related to the second stage correction measurement.

2nd Stage Correction.....	66
Resolution Bandwidth (RBW).....	66
Sweep Time.....	66
Settling Time.....	67
Average.....	67
Ref Level.....	67

Auto Level Range.....	68
RF Attenuation.....	68
Preamplifier.....	68

2nd Stage Correction

Turns 2nd stage correction on and off.

If enabled, the application uses the calibration data to compensate for the inherent noise of the analyzer when calculating the measurement results.

If disabled, the application does not correct the measurement results, even if a valid calibration has been performed. Note that correction data is not deleted if you turn off the 2nd stage correction.

For more information, see [Chapter 4.6, "Calibration \(2nd stage correction\)"](#), on page 33.

Remote command:

State: `[SENSe:]CORRection[:STATe]` on page 145

Calibration measurement selection: `[SENSe:]CONFigure:CORRection` on page 144

Resolution Bandwidth (RBW)

Defines the resolution bandwidth for the measurement.

For more information on the resolution bandwidth, see [Chapter 4.8, "Separating signals by selecting an appropriate resolution bandwidth"](#), on page 37.

"Constant"	Uses a constant RBW for the entire measurement span
"Variable"	Uses a variable RBW, depending on the current frequency of the sweep point, as defined in the frequency table (see Chapter 5.2.3, "Using a frequency table" , on page 48); In the channel bar, the bandwidth and sweep time range of the variable values is indicated.

Remote command:

`[SENSe:]BANDwidth:RESolution:AUTO` on page 144

`[SENSe:]BANDwidth[:RESolution]` on page 144

Sweep Time

Defines the sweep time for the measurement.

The sweep time is the time it takes the analyzer to perform a measurement at one measurement frequency.

Note that "noise figure" measurements perform two measurements during one sweep. One with the noise source turned on, one with the noise source turned off.

Frequency tables allow you to define a variable RBW and sweep time, depending on the current frequency of the sweep point (see ["Variable RBW and sweep time for low-frequency measurements"](#) on page 38 and [Chapter 5.2.3, "Using a frequency table"](#), on page 48).

"Constant"	Uses a constant sweep time for the entire measurement span
------------	--

"Variable" Uses a variable sweep time, depending on the current frequency of the sweep point, as defined in the frequency table (see [Chapter 5.2.3, "Using a frequency table"](#), on page 48); In the channel bar, the bandwidth and sweep time range of the variable values is indicated.

Remote command:

[\[SENSe:\] SWEEp:TIME:AUTO](#) on page 147

[\[SENSe:\] SWEEp:TIME](#) on page 146

Settling Time

Defines the settling time of the DUT and the noise source.

Most noise sources need a certain amount of time to settle after you turn them on. Low-frequency DUTs can require a certain time until their coupling capacitors have been charged or discharged. Both are defined as the settling time. For details on the settling time, refer to the datasheet of the noise source.

Remote command:

[SYSTem:CONFigure:DUT:STIME](#) on page 150

Average

Defines the number of measurements that are used to average the results.

The more measurements you include in the averaging, the more accurate and stable the results are. However, accuracy and stability come at the price of measurement speed.

Remote command:

[\[SENSe:\] SWEEp:COUNT](#) on page 146

Ref Level

Turns automatic determination of the reference level on and off.

The reference level is the power level the R&S FSV/A expects at the RF input. Keep in mind that the noise signal has a high crest factor. To avoid an instrument overload, set the reference level to the peak envelope power of the noise signal, not to the mean power.

Set the reference level to approximately 5 dB to 15 dB above the noise display that occurs with the DUT connected and the noise source activated.

To get the best dynamic range, set the reference level as low as possible. At the same time, make sure that the maximum signal level does not exceed the reference level. If it does, it can overload the RF and IF stages of the analyzer, regardless of the signal power. Measurement results can deteriorate.

Note that the signal level at the A/D converter can be stronger than the level the R&S FSV/A displays because the resolution bandwidths are implemented digitally after the A/D converter.

If automatic detection of the reference level is on, the application performs a measurement to determine the ideal reference level. The time of this measurement depends on the state of the "2nd Stage Correction".

- "2nd Stage Correction" is enabled

The application determines the reference level before the calibration starts. The reference level is based on several test measurements on the start frequency. For more information, see ["Auto Level Range"](#) on page 68.

- "2nd Stage Correction" is disabled
The application determines the reference level before the measurement begins. The reference level is based on the measurement of the first frequency that is measured. After this measurement is done, the application resumes the measurement.

If manual selection of the reference level is on, you can define the reference level in the corresponding input field.

Note: Reference level. Even for DUTs with a high-ripple frequency response it can be useful to define the reference level manually. Determining the reference level automatically does not always result in optimal settings.

Remote command:

Manual reference level:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 147

Automatic reference level:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:AUTO` on page 147

Auto Level Range

Defines the maximum expected "gain" of the DUT.

The application uses the auto level range to determine the reference level automatically if the 2nd stage correction is on.

Make sure the range does not exceed the actual "gain" of the DUT by more than 10 dB.

Remote command:

`SYSTem:CONFIgure:DUT:GAIN` on page 150

RF Attenuation

Defines the RF attenuation of the analyzer.

The attenuation is applied to the signal at the RF input.

Attenuation affects the quality of the "noise figure" measurement results. For a low "noise figure" of the analyzer (and thus more accurate measurement results), keep the attenuation as low as possible. No attenuation is best. However, some high-power DUTs require attenuation to avoid an overload of the analyzer. An attenuation of 10 dB provides a better input VSWR of the analyzer, but results in a deteriorating "noise figure".

Remote command:

`INPut:ATTenuation` on page 148

Preamplifier

If the (optional) internal preamplifier hardware is installed on the R&S FSV/A, a preamplifier can be activated for the RF input signal.

Turn on the preamplifier for a low inherent noise of the analyzer.

For R&S FSV/A, the following settings are available:

"Off" Deactivates the preamplifier.

"15 dB"	The RF input signal is amplified by about 15 dB.
"30 dB"	The RF input signal is amplified by about 30 dB.
"On"	Using the preamplifier with the option number 1330.3465.02: the input signal is amplified by 30 dB if the preamplifier is activated.

For R&S FSV/A3044 models, the preamplifier is only available under the following conditions:

- In zero span, the maximum center frequency is 43.5 GHz
- For frequency spans, the maximum stop frequency is 43.5 GHz
- For I/Q measurements, the maximum center frequency depends on the analysis bandwidth:

$$f_{center} \leq 43.5 \text{ GHz} - (<Analysis_bw> / 2)$$

If any of the conditions no longer apply after you change a setting, the preamplifier is automatically deactivated.

Remote command:

`INPut:GAIN:STATe` on page 149

`INPut:GAIN[:VALue]` on page 149

5.7 Using the uncertainty calculator

Access: [MEAS CONFIG] > "Uncertainty Calculation"

"Noise figure" measurements are subject to uncertainty. The "noise figure" measurement is meaningless if the measurement uncertainty is too large. Knowing the uncertainty of the "noise figure" measurement adds value especially when comparing measurement results.

Note that the "noise figure" uncertainty is not calculated for frequencies above 67 GHz because input VSWR values are not specified.

Measurement Noise Source		DUT		Analyzer	
Output Match		Input Match		SA Input Match (Typical)	
Use SNS Values	On Off	VSWR RL	1.0	VSWR RL	1.87
VSWR RL	1.15	Use Meas Values	On Off	SA NF Uncert	0.05 dB
ENR Uncert	0.1 dB	DUT NF	0.0 dB	SA Gain Uncert	0.15 dB
		DUT Gain	0.0 dB	SA NF	11.22 dB
		Frequency (IF)	1.0 GHz	Ext PA	On Off
				PA NF	5.0 dB
				PA Gain	20.0 dB
				Net SA NF	11.22 dB
Guidelines (repeatability)	ENR - SA NF	[> 3 dB]	3.78 dB	NF Uncert +/-	1.91 dB
	ENR - DUT NF	[> 5 dB]	15.0 dB	Meas Offset	
	DUT (NF+Gain) - SA NF	[> 1 dB]	-11.22 dB		



Uncertainty values and systematic error recognition

Note that the uncertainty calculation only takes systematic measurement inaccuracies into account.

The most significant inaccuracies are:

- Uncertainties of the noise source and the analyzer
- Input and output matching
- "Noise figure" and "gain" of the DUT
- "Noise figure" of the analyzer

The accuracy of the measurement can also be affected by insufficient repeatability during calibration or measurement.

The repeatability is mainly affected by:

- Signal-to-noise ratio during calibration and measurement
- Measurement time (if it is too short)
- Environmental conditions (e.g. a change in the temperature between measurements)
- Mechanical stability of the test setup

For more background information on "noise figure" measurement uncertainty, refer to the application note "The "Y-Factor" Technique for "Noise Figure" Measurement" available for download on the Rohde & Schwarz homepage (http://www.rohde-schwarz.com/en/applications/the-y-factor-technique-for-noise-figure-measurements-application-note_56280-15484.html).

In addition to the parameters described here, the application also considers several parameters from the general measurement configuration when calculating the uncertainty.

- [Measurement mode](#)
- [2nd Stage Correction](#)
If 2nd stage correction is on, but no calibration data is available, uncertainty is calculated without the 2nd stage correction data.
- [Internal preamplification](#)
- [RF Attenuation](#)
- [Temperature](#)
- [ENR values](#)

5.7.1 Configuring noise source characteristics

Access: [MEAS CONFIG] > "Uncertainty Calculation"

The Uncertainty Calculator supports individual characteristics for a noise source used during calibration and the measurement.

If you are using a Common ENR, the application assumes that the [Output Match](#) and [ENR Uncert\(ainty\)](#) are the same during calibration and measurement. Only the "Measurement Noise Source" parameters are displayed.

If you are using a different noise source during calibration and measurement, the Uncertainty Calculator adds an **Output Match** and **ENR Uncert(ainty)** required for uncertainty calculation during calibration.

Note that you have to turn off the **Common Noise Source** if you have to define the values of the noise source used during calibration.

Common Source for Meas and Cal	71
Use SNS Values	71
Output Match	71
ENR Uncert(ainty)	71
Temperature Uncert(ainty)	72

Common Source for Meas and Cal

Controls the way the application calculates the uncertainty for the noise source.

Turn on the switch when you use the same noise source during calibration and measurement. Only one set of fields to define the noise source characteristics is available. The application calculates the uncertainty according to the values you have entered in there.

Turn the switch off when you use different noise sources during calibration and measurement. The application shows an additional set of fields to define the noise source characteristics. The uncertainty calculation also includes these values.

The switch is available if you have turned on **Common Noise Source**.

Remote command:

`CALCulate<n>:UNCertainty:COMMON` on page 151

Use SNS Values

If enabled, the values from the uncertainty table provided by the (most recently) connected smart noise source are used.

Output Match

Defines the output match of the noise source you are using.

You can define the output match either as the VSWR or as the return loss (RL).

Refer to the datasheet of the noise source for these values.

If a smart noise source is used, the VSWR / RL values defined in the SNS table are used.

Remote command:

`CALCulate<n>:UNCertainty:MATCH:SOURce:CALibration:RL` on page 157

`CALCulate<n>:UNCertainty:MATCH:SOURce:RL` on page 158

`CALCulate<n>:UNCertainty:MATCH:SOURce:CALibration[:VSWR]`
on page 157

`CALCulate<n>:UNCertainty:MATCH:SOURce:CALibration:RL` on page 157

ENR Uncert(ainty)

Defines the uncertainty of the excess noise ratio of the noise source you are using.

Refer to the datasheet of the noise source for this value.

Available for noise sources with diode characteristics.

If a smart noise source is used, the ENR uncertainty values defined in the SNS table are used.

Remote command:

`CALCulate<n>:UNCertainty:ENR:UNCertainty` on page 154

`CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty` on page 153

Temperature Uncert(ainty)

Defines the uncertainty of the hot and cold temperatures of the noise source you are using.

Refer to the datasheet of the noise source for these values.

Available for resistor noise sources.

Remote command:

`CALCulate<n>:UNCertainty:ENR:UNCertainty:COLD` on page 154

`CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:HOT`
on page 154

`CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:COLD`
on page 153

`CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:HOT`
on page 154

5.7.2 Configuring DUT characteristics

Access: [MEAS CONFIG] > "Uncertainty Calculation"

Input / Output Match	72
Use Measurement Values	72

Input / Output Match

Defines the match at the DUT input and output.

You can define the match either as the VSWR or as the return loss (RL). If you define the VSWR or the return loss, the application automatically calculates the other.

If these values are not defined in the DUT datasheet, determine these values, for example, with a network analyzer.

Remote command:

`CALCulate<n>:UNCertainty:MATCh:DUT:IN[:VSWR]` on page 155

`CALCulate<n>:UNCertainty:MATCh:DUT:IN:RL` on page 155

`CALCulate<n>:UNCertainty:MATCh:DUT:OUT[:VSWR]` on page 156

`CALCulate<n>:UNCertainty:MATCh:DUT:OUT:RL` on page 156

Use Measurement Values

Turns automatic determination of the DUT characteristics used for the uncertainty calculation on and off.

If on, the application calculates the uncertainty with the DUT characteristics ("noise figure", "gain" and frequency) resulting from the "noise figure" measurement. For this method, the application calculates the uncertainty for each measurement point (or frequency) based on the "noise figure" and "gain" results of the last measurement.

If you have selected automatic determination of the DUT characteristics, the application does not show a result in the "NF Uncertainty +/-" field in the dialog box. Instead, to view the uncertainty at all measurement points, use the "Result Table".

If off, define the "gain", "noise figure" and frequency of the DUT manually for a single frequency. With this manual determination of the DUT characteristics, the application only calculates the uncertainty for that frequency and shows the result in the "NF Uncertainty +/-" field in the dialog box.

- "Noise Figure" of the DUT
- "Gain" of the DUT
- Frequency of the DUT

Remote command:

Control automatic DUT characteristics determination:

[CALCulate<n>:UNCertainty\[:RESult\]? on page 159](#)

Manual definition of DUT characteristics:

[CALCulate<n>:UNCertainty:DATA:NOISe on page 152](#)

[CALCulate<n>:UNCertainty:DATA:GAIN on page 152](#)

[CALCulate<n>:UNCertainty:DATA:FREQuency on page 151](#)

5.7.3 Configuring analyzer characteristics

Access: [MEAS CONFIG] > "Uncertainty Calculation"

For the analyzer characteristics, the application always uses the data specified in the datasheet of the R&S FSV/A model you are using. Thus, it is not possible to change or adjust the analyzer characteristics in any way. The uncertainty calculation takes several analyzer characteristics into account, of which the following are shown as read-only fields in the user interface.

- "SA Input Match:" Input match (VSWR or return loss) of the analyzer
- "SA NF Uncert:" Noise figure uncertainty of the analyzer
- "SA Gain Uncert:" Gain uncertainty of the analyzer
- "SA NF:" Noise figure of the analyzer

However, if you are using an external preamplifier in the test setup, you have to specify its characteristics to get a valid uncertainty result.

Remote commands:

[CALCulate<n>:UNCertainty:SANalyzer:GAIN:UNCertainty? on page 160](#)

[CALCulate<n>:UNCertainty:SANalyzer:NOISe:UNCertainty? on page 160](#)

External Preamplifier (Ext PA).....	73
L Preamplifier noise figure (PA NF).....	74
L Preamplifier Gain (PA Gain).....	74
L Net spectrum analyzer noise figure (Net SA NF).....	74

External Preamplifier (Ext PA)

If enabled, the application automatically calculates and updates the analyzer characteristics based on the characteristics of the external preamplifier defined here.

Refer to the datasheet of the preamplifier you are using for the values you have to enter.

Remote command:

`CALCulate<n>:UNCertainty:PREamp:STATe` on page 159

Preamplifier noise figure (PA NF) ← External Preamplifier (Ext PA)

Defines the "noise figure" of the preamplifier.

Remote command:

`CALCulate<n>:UNCertainty:PREamp:NOISe` on page 159

Preamplifier Gain (PA Gain) ← External Preamplifier (Ext PA)

Defines the "gain" of the preamplifier.

Remote command:

`CALCulate<n>:UNCertainty:PREamp:GAIN` on page 158

Net spectrum analyzer noise figure (Net SA NF) ← External Preamplifier (Ext PA)

Shows the "noise figure" of the analyzer.

If you are using an external preamplifier, the application calculates the "noise figure" of the analyzer including the "noise figure" of the preamplifier and shows the result here.

If you do not use an external preamplifier, this value is the same as the "noise figure" of the analyzer shown in the "SA NF" field.

5.7.4 Guidelines and results

Access: [MEAS CONFIG] > "Uncertainty Calculation"

The lower part of the dialog box contains measurement guidelines that provide information on the quality of measurement and the actual "noise figure" uncertainty.




Guidelines

The guidelines are an indicator of the quality of the measurement and an indicator the repeatability of the measurement.

The three guidelines are:

- Make sure that the "noise figure" of the DUT and the "gain" of the DUT is greater than the "noise figure" of the analyzer plus 1 dB.
- Make sure that the ENR of the noise source is greater than the "noise figure" of the DUT plus 5 dB.
- Make sure that the ENR of the noise source is greater than the "noise figure" of the analyzer plus 3 dB.

A short form of these guidelines is indicated in the "Uncertainty Calculation" dialog box. The dialog box also indicates if the guidelines have been met or not by a colored dot.

- Green light : guideline condition met.
- Yellow light : guideline condition not met, but within 1 dB of being met.
- Red light : guideline condition not met.

Note that the guidelines have no effect on the actual uncertainty that has been calculated and that they are only considered for measurements with 2nd Stage Correction.

Uncertainty

The "Uncertainty" result is shown only if you define the "noise figure" and "gain" characteristics of the DUT manually on a single frequency. In that case, the uncertainty shown in the "Uncertainty Calculation" dialog box is valid only for the DUT frequency you have defined.

The "Measurement Offset" evaluates the internal noise of the R&S FSV/A that is added to the "noise figure" results. The measurement offset result is displayed when 2nd stage correction is turned off. When you turn on 2nd stage correction, the internal noise is automatically removed from the uncertainty results, so the measurement offset is not shown.

If you are using the "noise figure" and "gain" that has been determined during a measurement, the uncertainty is displayed only in the result table.

For more information, see ["Use Measurement Values"](#) on page 72.

SCPI command:

[CALCulate<n>:UNCertainty\[:RESult\]?](#) on page 159

5.8 Performing measurements

Access: [SWEEP]

Access (calibration): "Overview" > "Calibrate"

This chapter contains all functionality necessary to control and perform "noise figure" measurements.

Continuous Sweep / Run Cont	75
Single Sweep / Run Single	76
Calibrate	76
Sweep Time	76
Meas Mode (Auto Manual)	77

Continuous Sweep / Run Cont

After triggering, starts the measurement and repeats it continuously until stopped. This is the default setting.

Initiates a measurement and repeats it continuously until stopped. If necessary, the application automatically determines the reference level before starting the actual measurement.

While the measurement is running, "Continuous Sweep" and [RUN CONT] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes

effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>:CONTInuous` on page 161

Single Sweep / Run Single

Initiates a single measurement. The measurement is finished after all frequencies in the frequency list have been measured. If necessary, the application automatically determines the reference level before starting the actual measurement.

After triggering, initiates a single measurement. The measurement is finished after all frequencies in the frequency list have been measured. If necessary, the application automatically determines the reference level before starting the actual measurement.

While the measurement is running, "Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>[:IMMEDIATE]` on page 162

Calibrate

Initiates a calibration measurement.

For interpolation purposes, R&S FSV/A-K30 will internally add additional measurement points at the band switching frequencies. This may increase the time needed to complete the calibration.

For more information see [Chapter 4.6, "Calibration \(2nd stage correction\)"](#), on page 33.

Remote command:

`INITiate<n>[:IMMEDIATE]` on page 162

when `[SENSe:]CONFigure:CORRection` is on.

Sweep Time

Defines the sweep time.

For more information see ["Sweep Time"](#) on page 66.

Meas Mode (Auto Manual)

Selects the measurement mode for the hot and cold power measurements.

For more information about the measurement modes see [Chapter 4.2, "Measurement modes"](#), on page 26.

In manual measurement mode, the application opens a dialog box when you start a measurement. For more information about its contents see ["Performing a manual measurement"](#) on page 26.

Remote command:

[SENSe:]CONFigure:CONTrol on page 163

[SENSe:]CONFigure:MEASurement on page 164

5.9 Configuring inputs and outputs of the R&S FSV/A

**Further input sources**

The R&S FSV3 Noise measurements application application can also process input from the following optional sources:

- Active modular probes

For details, see the R&S FSV/A I/Q Analyzer and I/Q Input User Manual.

- [Radio frequency \(RF\) input](#).....77
- [External generator](#).....79

5.9.1 Radio frequency (RF) input

Access: [INPUT/OUTPUT] > "Input Source Config" > "Input Source" > "Radio Frequency"

The RF input is the default input of the R&S FSV/A.

Input Coupling	77
Impedance	78
Direct Path	78
High Pass Filter 1 to 3 GHz	78
YIG-Preselector	78

Input Coupling

The RF input of the R&S FSV/A can be coupled by alternating current (AC) or direct current (DC).

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the specifications document.

Remote command:

[INPut:COUPling](#) on page 165

Impedance

For some measurements, the reference impedance for the measured levels of the R&S FSV/A can be set to 50 Ω or 75 Ω .

Select 75 Ω if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type. (That corresponds to 25 Ω in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

Remote command:

[INPut:IMPedance](#) on page 165

Direct Path

Enables or disables the use of the direct path for small frequencies.

In spectrum analyzers, passive analog mixers are used for the first conversion of the input signal. In such mixers, the LO signal is coupled into the IF path due to its limited isolation. The coupled LO signal becomes visible at the RF frequency 0 Hz. This effect is referred to as LO feedthrough.

To avoid the LO feedthrough the spectrum analyzer provides an alternative signal path to the A/D converter, referred to as the *direct path*. By default, the direct path is selected automatically for RF frequencies close to zero. However, this behavior can be disabled. If "Direct Path" is set to "Off", the spectrum analyzer always uses the analog mixer path.

"Auto" (Default) The direct path is used automatically for frequencies close to zero.

"Off" The analog mixer path is always used.

Remote command:

[INPut:DPATH](#) on page 166

High Pass Filter 1 to 3 GHz

Activates an additional internal highpass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the analyzer to measure the harmonics for a DUT, for example.

Note: For RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

Remote command:

[INPut:FILTer:HPASs\[:STATe\]](#) on page 166

YIG-Preselector

Enables or disables the YIG-preselector.

This setting requires an additional option on the R&S FSV/A.

An internal YIG-preselector at the input of the R&S FSV/A ensures that image frequencies are rejected. However, image rejection is only possible for a restricted bandwidth. To use the maximum bandwidth for signal analysis you can disable the YIG-preselector at the input of the R&S FSV/A, which can lead to image-frequency display.

Note: Note that the YIG-preselector is active only on frequencies greater than 7.5 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

To use the optional 54 GHz frequency extension (R&S FSV3-B54G), the YIG-preselector must be disabled.

Remote command:

`INPut:FILTer:YIG[:STATe]` on page 166

5.9.2 External generator

Access: [INPUT/OUTPUT] > "Input Source Config" > "External Generator"

- [Interface configuration settings](#)..... 79
- [Measurement configuration](#).....80

5.9.2.1 Interface configuration settings

Access: "Overview" > "Local Oscillator" > "External Generator" > "Measurement Configuration"

Input			
Input Source	Power Sensor	External Generator	Probes
Measurement Configuration	Interface Settings		Source Capabilities
	Generator Type	SMU02	Frequency Min 100.0 kHz
Interface Configuration	Interface	GPIB	Frequency Max 2.2 GHz
	TTL Handshake	<input type="checkbox"/>	Level Min -145.0 dBm
Source Calibration	GPIB Address	28	Level Max 13.0 dBm
	Reference	Internal	
Edit Generator Setup File			

Generator Type	80
Interface	80
TTL Handshake	80
TCPIP Address / Computer Name	80
Reference	80
Edit Generator Setup File	80
Frequency Min/ Frequency Max	80
Level Min/ Level Max	80

Generator Type

Selects the generator type and thus defines the generator setup file to use.

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE` on page 168

Interface

Type of interface connection used.

For details on which signal generators support which interfaces, see the documentation of the corresponding signal generator.

- TCP/IP

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTERface` on page 168

TTL Handshake

Turning the TTL handshake on and off has no effect for "Noise Figure" measurements.

TCPIP Address / Computer Name

TCP/IP address of the signal generator

Remote command:

`SYSTem:COMMunicate:TCPIP:RDEvice:GENerator<gen>:ADDRESS`
on page 169

Reference

Selects the internal R&S FSV/A or an external frequency reference to synchronize the R&S FSV/A with the generator (default: internal).

Remote command:

`SOURCE<si>:EXTERNAL<gen>:ROSCillator[:SOURCE]` on page 168

Edit Generator Setup File

Displays the setup file for the currently selected [Generator Type](#) in read-only mode in an editor.

Although the existing setup files are displayed in read-only mode in the editor, they can be saved under a different name (using "File > SaveAs").

For more information, see [Chapter 4.4, "External generator control"](#), on page 29.

Frequency Min/ Frequency Max


For reference only: Lower and upper frequency limit for the generator.

Level Min/ Level Max

For reference only: Lower and upper power limit for the generator.

5.9.2.2 Measurement configuration

Access: "Overview" > "Local Oscillator" > "External Generator" > "Measurement Configuration"

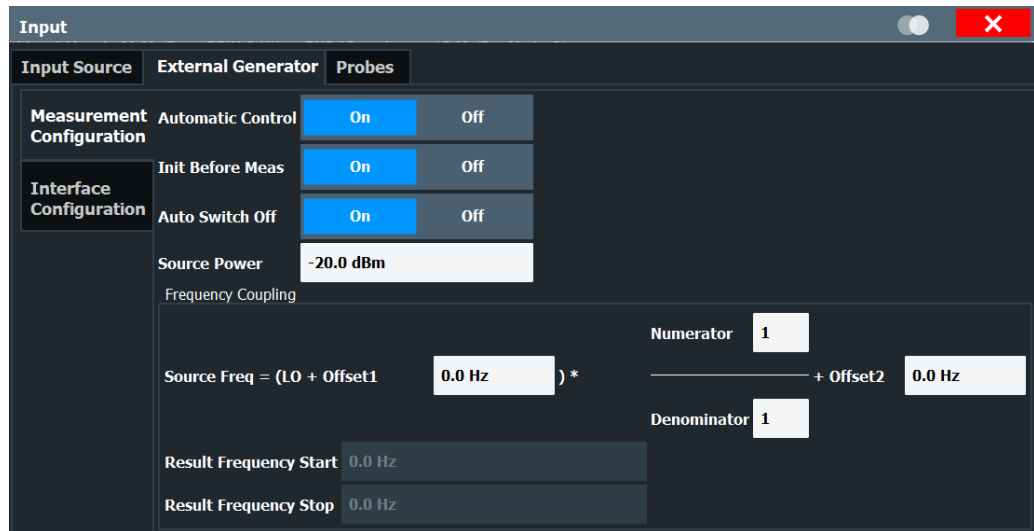

Automatic Control.....81
 Init Before Meas..... 81
 Auto Switch Off.....82
 Source Power.....82
 Frequency Coupling.....82
 Init External Generator..... 83

Automatic Control

Turns automatic control of the external generator on and off.

If on, the application controls the configuration of the external generator during measurements by transmitting the required remote commands. The connection is established automatically before a measurement if **Init Before Meas** is on. To establish the connection manually at any time, use the **Init External Generator** function.

Otherwise, you have to control the generator manually. The application assumes that the generator is configured correctly for the measurement. The remote connection to the generator is automatically terminated.

Turn on automatic control to perform Fixed IF measurements with the LO frequency tuned to the current measurement (RF) frequency. Manual control is recommended only for measurements whose generator settings remain the same during the measurement.

Remote command:

[SYSTem:CONFigure:GENerator:CONTRol:STATe](#) on page 169

Init Before Meas

Turns automatic transmission of the external generator configuration on and off.

If enabled, the application transmits a sequence of remote commands that configures the generator and turns on its RF output before each measurement. Thus, the generator runs with the required configuration and can still receive remote control commands during a measurement. Automatic initialization requires a slightly longer measurement time because of the time required to transmit the commands and configure the generator.

If disabled, you have to initialize the generator manually with [Init External Generator](#).

Note that you have to establish the connection before you can perform a measurement with the external generator.

Remote command:

`SYSTem:CONFIgure:GENerator:INITialise:AUTO` on page 169

Auto Switch Off

Turns automatic deactivation of the generator's RF output on and off.

If enabled, the application transmits a sequence of remote commands to turn off the RF output of the generator when a measurement is over. A measurement is over after a single sweep or if the measurement is aborted. The sequence of commands also ends the remote control session.

If disabled, you have to turn off the RF output and remote control session manually.

Note that when you close the R&S FSV3 Noise measurements application, the generator's RF output is turned off and the remote session is terminated.

Remote command:

`SYSTem:CONFIgure:GENerator:SWITCh:AUTO` on page 170

Source Power

Defines the output power of the external generator.

The range depends on the generator you are using and is defined in its specifications document.

Remote command:

`SOURce<si>:EXTernal<gen>:POWER[:LEVel]` on page 167

Frequency Coupling

Defines frequency correction characteristics.

The generator frequency is calculated as follows.

$$f_{\text{Generator}} = \left[(f_{\text{LO}} + \text{Offset} < 1 >) * \frac{\text{Numerator}}{\text{Denominator}} \right] + \text{Offset} < 2 >$$

With:

- $f_{\text{Generator}}$ = generator frequency
- f_{LO} = frequency of the analyzer's LO
- $f_{\text{offset}<1>}$ = offset frequency of the analyzer
- $f_{\text{offset}<2>}$ = offset frequency of other components

Use the factors and offsets to compensate one or more components in the test setup which change the frequency between the generator and the DUT. Make sure, however, that the result does not exceed the frequency range of the generator.

The application calculates the resulting start and stop frequency based on the values you apply and displays them below the equation.

Remote command:

[SOURCE:EXTERNAL:FREQUENCY\[:FACTOR\]:DENOMINATOR](#) on page 167

[SOURCE:EXTERNAL:FREQUENCY\[:FACTOR\]:NUMERATOR](#) on page 167

[SOURCE:EXTERNAL:FREQUENCY:OFFSET<of>](#) on page 167

Init External Generator

Establishes a connection to generator and turns on its RF output.

You can establish the connection automatically before a measurement if [Init Before Meas](#) is on.

Note that you have to establish the connection before you can perform a measurement with the external generator.

Remote command:

[SYSTEM:CONFIGURE:GENERATOR:INITIALISE\[:IMMEDIATE\]](#) on page 169

6 Analysis

This chapter contains all settings and parameters that the application provides to analyze and evaluate measurement results.

- [Configuring the display](#).....84
- [Working with traces](#).....87
- [Trace / data export configuration](#)..... 89
- [Using markers](#).....92
- [Limit line settings and functions](#)..... 97

6.1 Configuring the display

Access: [MEAS CONFIG] > "Result Config"

Display configuration settings configure the way the results are displayed in the diagram.

The contents depend on whether you want to configure a graphical result display or a numerical result display.

Specifics for


The settings you make apply to the results you have selected in the "Specifics for" dropdown menu. If more than one window is active, "Specifics for" also puts the focus on the corresponding window.

- [Configuring graphical results](#).....84
- [Configuring numerical results](#).....86

6.1.1 Configuring graphical results

Access: [MEAS CONFIG] > "Result Config" > "Graph"

When configuring graphical results, the dialog box contains functionality to scale and set up the diagram axes.

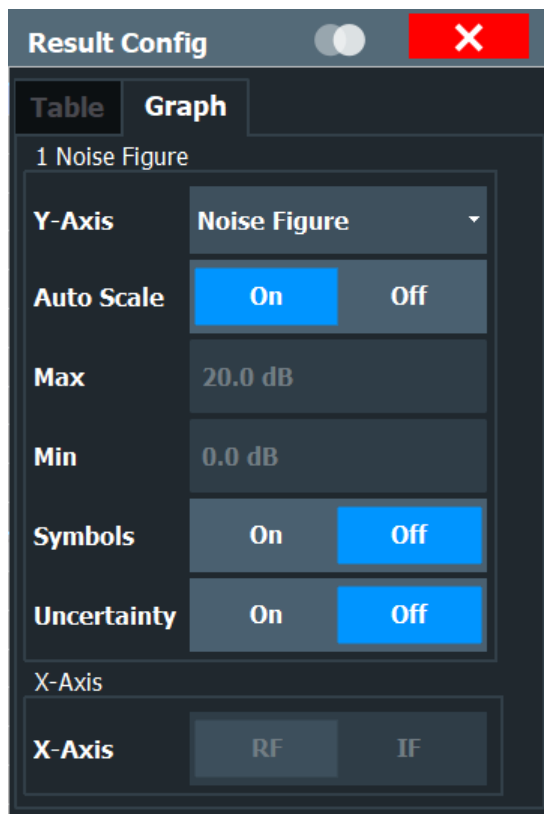

Y-Axis..... 85
 Auto Scale / Min / Max..... 85
 Symbols..... 86
 Uncertainty..... 86
 X-Axis..... 86

Y-Axis

Selects the result display and thus the scaling of the vertical axis.

For more information, see [Chapter 3, "Measurements and result displays"](#), on page 13.

Auto Scale / Min / Max

Turns automatic scaling of the vertical axis on and off.

If on, the application optimizes the scaling of the vertical axis after each measurement for ideal viewing of the results.

If off, you can define the scaling manually. The "Min" and "Max" input fields become available. These two input fields define the values at the top and bottom of the vertical axis.

Remote command:

Automatic scaling:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO` on page 172

Manual minimum value:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTom` on page 172

Manual maximum value

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:TOP` on page 173

Symbols


Turns symbols that represent a measurement point on the trace on and off.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:SYMBOLs` on page 171

Uncertainty

Displays an additional trace indicating the measured trace values \pm the uncertainty values determined by the uncertainty calculator. Thus, you obtain a range of minimum and maximum result values. This trace is only useful for "noise figure" measurements.

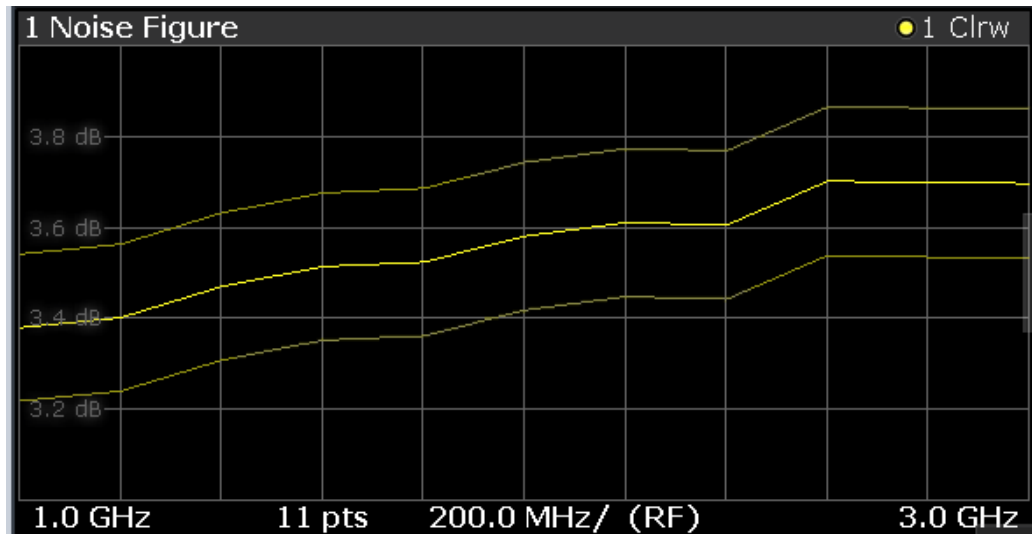

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:UNCertainty` on page 171

X-Axis

Selects the frequency data that is displayed on the x-axis.

For measurements on frequency converting DUTs with a variable intermediate frequency, you can display either the RF frequency or the IF frequency.

Note that a change of the x-axis scale applies to all result displays, and also determines which value is output for trace export.

The "Frequency Axis" scale is also available via [FREQ].

Remote command:


`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]` on page 171

6.1.2 Configuring numerical results

When configuring numerical results, the dialog box selects the type of results you want to display in the result table. The results in the table are based on a particular trace that you can select in the corresponding input field.

You can add an aspect of the measurement by placing a checkmark in front of the corresponding result on and remove it by removing the checkmark.

For more information on each result, see [Chapter 3, "Measurements and result displays"](#), on page 13.

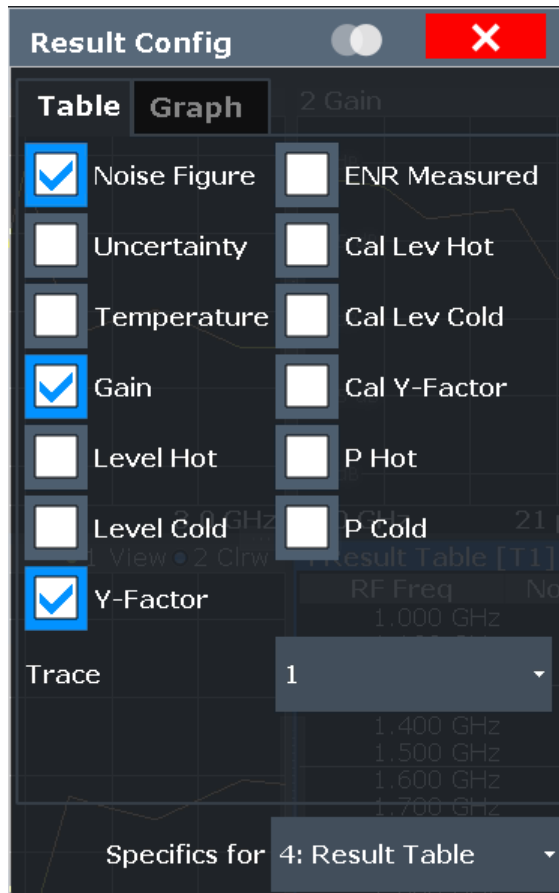

Remote command:

`DISPlay[:WINDow<n>]:TABLE:ITEM` on page 170


6.2 Working with traces

Access (trace configuration): [TRACE] > "Trace Config" > "Traces"

Access (trace export): [TRACE] > "Trace Config" > "Trace / Data Export"

Access (copy trace): [TRACE] > "Trace Config" > "Trace Copy"

A trace is the graphical representation of a set of measurement results in a diagram. Each measurement window that contains graphical results supports up to four individual traces. Each trace has a different color. Trace settings determine how the measured data is analyzed and displayed on the screen. The trace information, including a color map and trace mode is summarized in the diagram header.

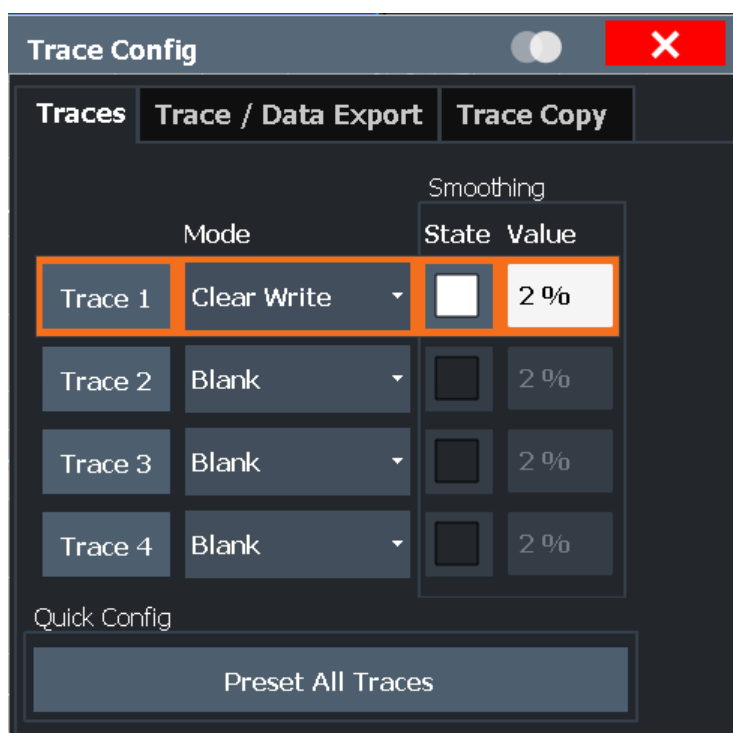

Traces.....	88
Smoothing.....	88
Preset Traces.....	89
Copy Trace.....	89

Traces

The "Trace 1 to 4" softkeys open the "Traces" tab of the "Trace Configuration" dialog box.

The "Traces" tab contains functionality to configure a trace.

"Trace Selection" The "Trace 1" to "Trace 4" buttons select a trace. If a trace is selected, it is highlighted orange.
Note that you cannot select a trace if its trace mode is "Blank".

"Trace Mode" Selects the trace mode for the corresponding trace.
For more information, see [Chapter 4, "Measurement basics"](#), on page 24.

Remote command:

Trace mode:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE` on page 174

Smoothing

If enabled, the trace is smoothed by the specified value (between 1 % and 50 %). The smoothing value is defined as a percentage of the display width. The larger the smoothing value, the greater the smoothing effect.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing[:STATe]`
on page 175

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture`
on page 175

Preset Traces

Restores the default configuration for all traces in a window.

Copy Trace

Access: "Overview" > "Analysis" > "Traces" > "Copy Trace"

Copies trace data to another trace.

The first group of buttons (labeled "Trace 1" to "Trace 4") selects the source trace. The second group of buttons (labeled "Copy to Trace 1" to "Copy to Trace 4") selects the destination.

Remote command:

`TRACe<n>:COPY` on page 178

6.3 Trace / data export configuration




Access: "Save" > "Export" > "Export Configuration"

Or: [TRACE] > "Trace Config" > "Trace / Data Export"



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FSV/A applications are not described here.

See the R&S FSV3000/ FSVA3000 base unit user manual for a description of the standard functions.

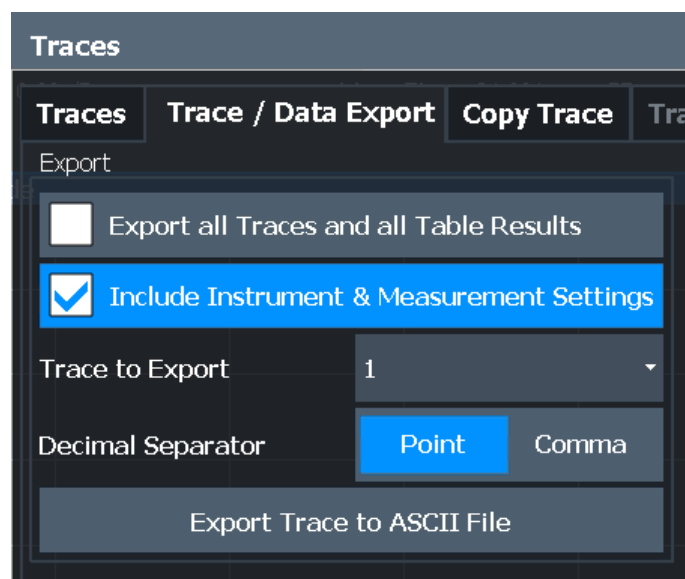

Export all Traces and all Table Results.....	90
Include Instrument & Measurement Settings.....	90
Trace to Export.....	90
Decimal Separator.....	90
Export Trace to ASCII File.....	90
L File Type.....	91
L Decimal Separator.....	92
L File Explorer.....	92
Export Trace to ASCII File.....	92

Export all Traces and all Table Results

Selects all displayed traces and result tables (e.g. "Result Summary", marker table etc.) in the current application for export to an ASCII file.

Alternatively, you can select one specific trace only for export (see [Trace to Export](#)).

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

`FORMat:DEXPort:TRACes` on page 177

Include Instrument & Measurement Settings

Includes additional instrument and measurement settings in the header of the export file for result data.

Remote command:

`FORMat:DEXPort:HEADer` on page 177

Trace to Export

Defines an individual trace to be exported to a file.

This setting is not available if [Export all Traces and all Table Results](#) is selected.

Decimal Separator

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.


Remote command:

`FORMat:DEXPort:DSEParator` on page 176

Export Trace to ASCII File

Saves the selected trace or all traces in the currently active result display to the specified file and directory in the selected ASCII format.

"File Explorer": Instead of using the file manager of the R&S FSV/A firmware, you can also use the Microsoft Windows File Explorer to manage files.

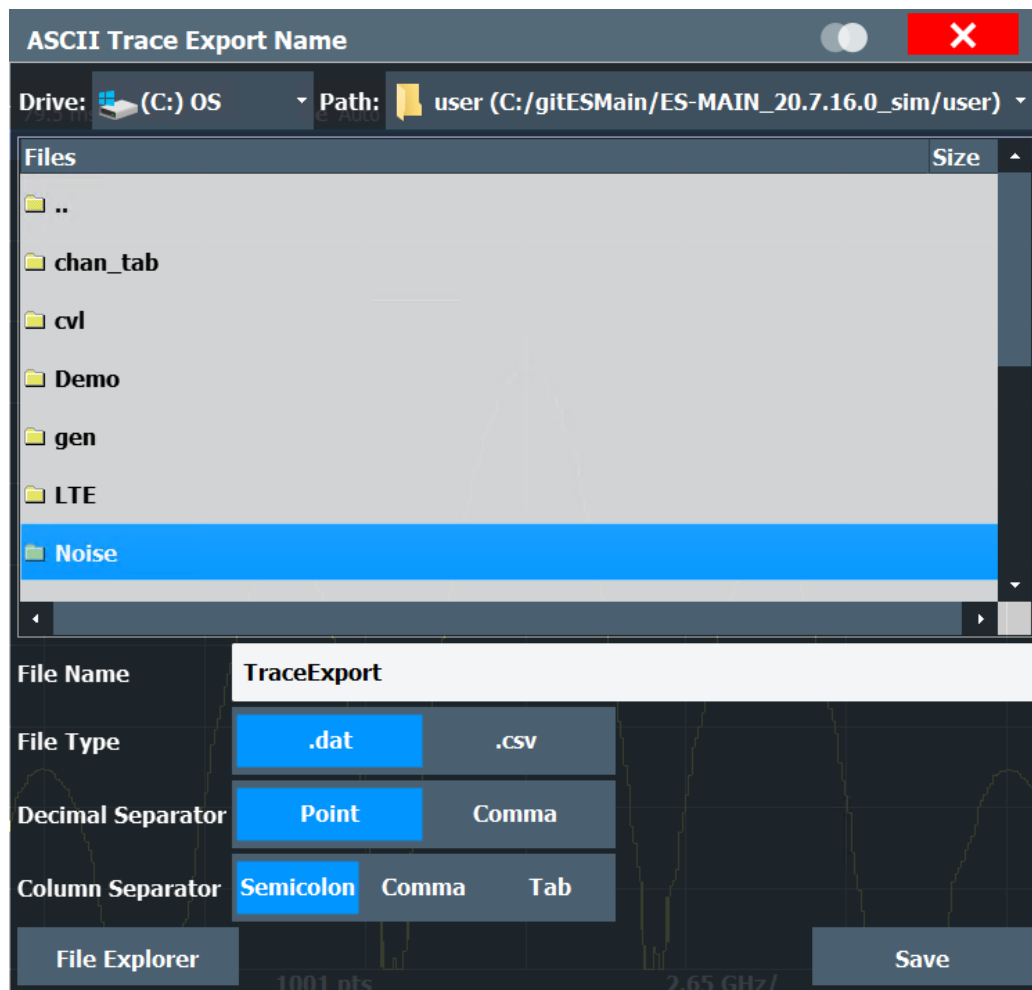

Note: Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Remote command:

[MMEMory:STORe<n>:TRACe](#) on page 177

File Type ← Export Trace to ASCII File

Determines the format of the ASCII file to be imported or exported.

Depending on the external program in which the data file was created or is evaluated, a comma-separated list (CSV) or a plain data format (DAT) file is required.

Remote command:

[FORMat:DEXPort:FORMat](#) on page 177

Decimal Separator ← Export Trace to ASCII File

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 176

File Explorer ← Export Trace to ASCII File

Opens the Microsoft Windows File Explorer.

Remote command:

not supported

Export Trace to ASCII File

Opens a file selection dialog box and saves the selected trace in ASCII format (.dat) to the specified file and directory.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

The column headers are provided as the first row. Whether the frequency value represents the RF or IF frequency depends on the [X-Axis](#) setting.

Note: Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Remote command:

[MMEMory:STORe<n>:TRACe](#) on page 177

6.4 Using markers

Markers help you to read out measurement results for particular frequencies or mark a particular point on a trace. The "noise figure" application features four markers. Markers in the "noise figure" application are linked. If you use more than one measurement window and activate a marker in one window, it also appears in all other measurement windows on the same horizontal position.

- [Marker configuration](#)..... 92
- [Marker positioning](#).....95

6.4.1 Marker configuration


Access (marker configuration): [MKR] > "Marker Config" > "Marker"

Access (marker settings): [MKR] > "Marker Config" > "Marker Settings"


The "Marker Configuration" dialog box and the "Marker" menu contain all functionality necessary to control markers.

The "Marker Configuration" dialog box consists of two tabs.

The "Markers" tab contains functionality to define characteristics for each marker.

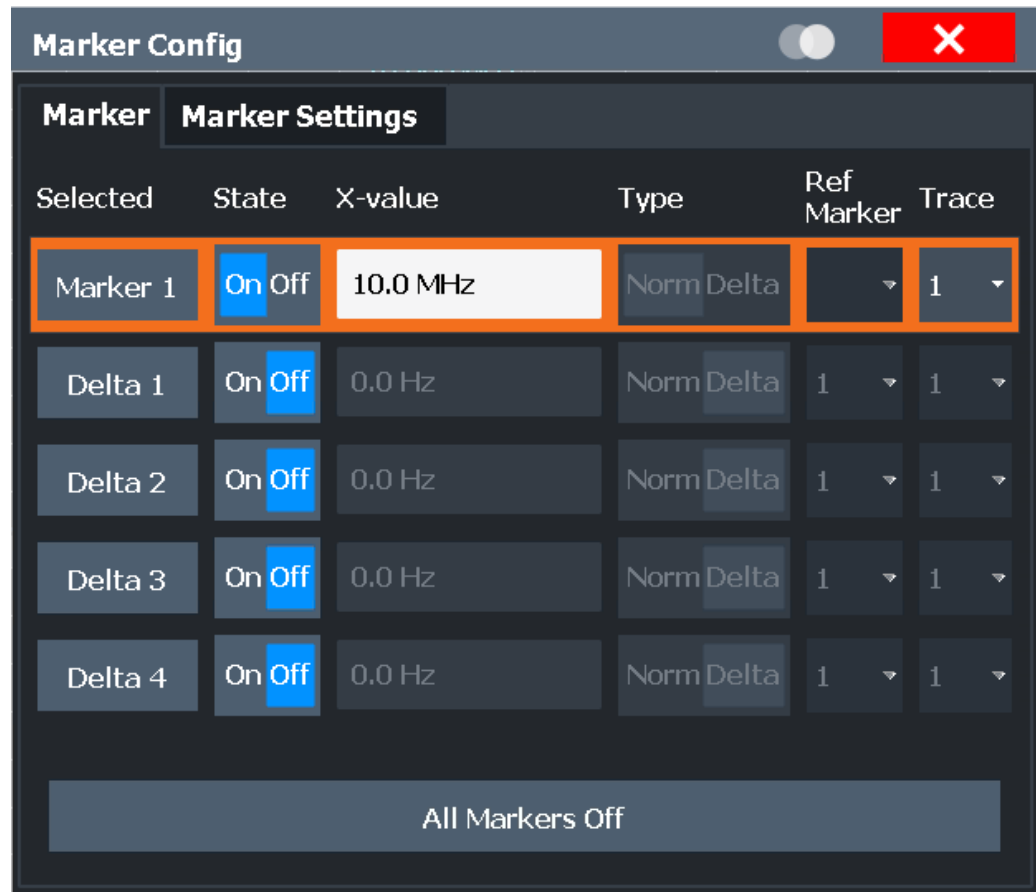

The "Marker Settings" tab contains general marker functionality.

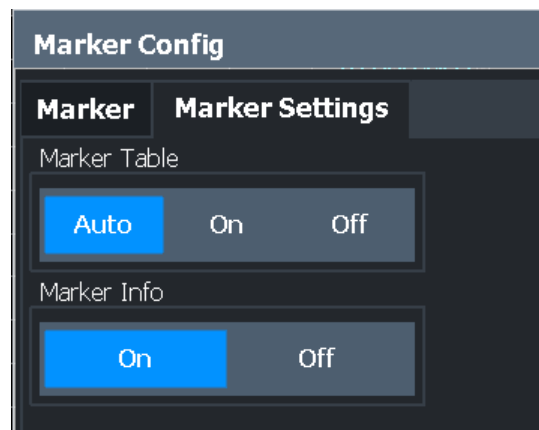

Marker (1...4).....	94
Marker Type.....	94
Marker to Trace.....	94
All Markers Off.....	94
Marker Config.....	94
Marker Table Display.....	95
Marker Info.....	95

Marker (1...4)

Selects or turns the corresponding marker on and off.

Turning on a marker also opens an input field to define the horizontal position of the marker.

By default, the first marker you turn on is a normal marker, all others are delta markers.

Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position in the diagram.

"Delta" A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 189

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 191

Marker to Trace

Opens an input field to assign the marker to a particular trace if you are using more than one trace.

All Markers Off

Deactivates all markers in one step.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 188

Marker Config

Opens the "Marker Configuration" dialog box.

The "Marker Configuration" dialog box contains all marker functions necessary to set up the four markers supported by the application.

- Selected
Highlights the currently selected marker.
- State
Turns a marker on and off.
- X-value

Defines the marker position on the horizontal axis.

- Type
Selects the marker type. For more information see "[Marker Type](#)" on page 94.
- Trace
Selects the trace the marker is positioned on.

Marker Table Display

Defines how the marker information is displayed.

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" No separate marker table is displayed.
If [Marker Info](#) is active, the marker information is displayed within the diagram area.

Remote command:

`DISPlay[:WINDow<n>]:MTABLE` on page 194

Marker Info

Turns the marker information displayed in the diagram on and off.

1AP Clrw	
M1[1]	81.13 dBµV 177.610 MHz
D2[1]	-22.18 dB -28.980 MHz

Remote command:

`DISPlay[:WINDow<n>]:MINFo[:STATe]` on page 194

6.4.2 Marker positioning

If you are using more than one measurement window, the application performs the peak search in the currently selected measurement window. The currently selected measurement window has a blue border. Because the markers are linked in the "noise figure" application, the frequency position of the marker in the other window is updated accordingly, even if it means that the marker is on a peak in one window only.

Select Marker <x>.....	95
Peak Search.....	96
Search Next Peak.....	96
Search Minimum.....	96
Search Next Minimum.....	97
Marker to Single Frequency.....	97

Select Marker <x>

Opens a dialog box to select and activate or deactivate one or more markers.

The number in the softkey label (<x>) shows the number of the currently selected marker.



Remote command:

Marker selected via suffix <m> in remote commands.

Peak Search

Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 195

[CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) on page 197

Search Next Peak

Sets the selected marker/delta marker to the next (lower) maximum of the assigned trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 195

[CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 195

[CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 195

[CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) on page 197

[CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT](#) on page 198

[CALCulate<n>:DELTamarker<m>:MAXimum:LEFT](#) on page 197

Search Minimum

Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 196

[CALCulate<n>:DELTamarker<m>:MINimum\[:PEAK\]](#) on page 198

Search Next Minimum

Sets the selected marker/delta marker to the next (higher) minimum of the selected trace. If no marker is active, marker 1 is activated.

Remote command:

`CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 196
`CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 196
`CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 196
`CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 198
`CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 198
`CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 199

Marker to Single Frequency

Starts a single frequency measurement on the current marker position.

When you use this function, the application changes the tuning mode and automatically adjusts the single frequency to that of the current marker position.

For more information see [Chapter 4.1.3, "Single frequency measurements"](#), on page 25.

6.5 Limit line settings and functions

Access: [LINES]

The "noise figure" measurement application supports up to eight active limit lines in each active measurement window.

**Stored limit line settings**

When storing and recalling limit line settings, consider the information provided in the Data Management chapter of the R&S FSV/A User Manual.

- [Limit line management](#).....97
- [Limit line details](#).....99

6.5.1 Limit line management

Access: "Overview" > "Analysis" > "Lines" > "Limit Lines"

or: [LINES] > "Line Config" > "Limit Lines"

For the limit line overview, the R&S FSV/A searches for all stored limit lines with the file extension `.LIN` in the `limits` subfolder of the main installation folder. The overview allows you to determine which limit lines are available and can be used for the current measurement.

For details on settings for individual lines see [Chapter 6.5.2, "Limit line details"](#), on page 99.

Name.....	98
Unit.....	98
Compatibility.....	98
Visibility.....	98
Traces to be Checked.....	98
Comment.....	98
Show Compatible Limit Lines.....	98
Show Lines for Noise.....	99
Create New Line.....	99
Edit Line.....	99
Copy Line.....	99
Delete Line.....	99
Disable All Lines.....	99

Name

The name of the stored limit line.

Unit

The unit in which the y-values of the data points of the limit line are defined.

Compatibility

Indicates whether the limit line definition is compatible with the current measurement settings.

Visibility

Displays or hides the limit line in the diagram. Up to 8 limit lines can be visible at the same time. Inactive limit lines can also be displayed in the diagram.

Remote command:

`CALCulate<n>:LIMit:LOWer:STATe` on page 183

`CALCulate<n>:LIMit:UPPer:STATe` on page 184

`CALCulate<n>:LIMit:ACTive?` on page 184

Traces to be Checked

Defines which traces are automatically checked for conformance with the limit lines. As soon as a trace to be checked is defined, the assigned limit line is active. One limit line can be activated for several traces simultaneously. If any of the "Traces to be Checked" violate any of the active limit lines, a message is indicated in the diagram.

Remote command:

`CALCulate<n>:LIMit:TRACe<t>:CHECK` on page 187

Comment

An optional description of the limit line.

Show Compatible Limit Lines

Defines which of the stored limit lines are included in the overview.

If active, only limit lines that are compatible to the result display currently in focus are displayed.

Show Lines for Noise

If activated (default), only limit lines created for "noise figure" measurements are displayed. Otherwise, all limit lines are displayed.

Create New Line

Creates a new limit line.

Edit Line

Edit an existing limit line configuration.

Copy Line

Copy the selected limit line configuration to create a new line.

Remote command:

[CALCulate<n>:LIMit:COPY](#) on page 185

Delete Line

Delete the selected limit line configuration.

Remote command:

[CALCulate<n>:LIMit:DELete](#) on page 185

Disable All Lines

Disable all limit lines in one step.

Remote command:

[CALCulate<n>:LIMit:STATe](#) on page 186

6.5.2 Limit line details

Access: "Overview" > "Analysis" > "Lines" > "Limit Lines" > "New" / "Edit" / "Copy To"

or: [LINES] > "Line Config" > "Limit Lines" > "New" / "Edit" / "Copy To"

Name.....	100
Comment.....	100
Y-Axis.....	100
Data Points.....	101
Insert Value.....	101
Delete Value.....	101
Shift x.....	101
Shift y.....	101
Save.....	101

Name

Defines the limit line name. All names must be compatible with Windows conventions for file names. The limit line data is stored under this name (with a .LIN extension).

Remote command:

[CALCulate<n>:LIMit:NAME](#) on page 180

Comment

Defines an optional comment for the limit line.

Remote command:

[CALCulate<n>:LIMit:COMMENT](#) on page 180

Y-Axis

Describes the vertical axis on which the data points of the limit line are defined.

You can select the type of limit line (upper or lower) for each type of result. From that information, the application sets the level unit and y-axis scaling. Both are then fix parameters because the unit depends on the result and the scaling is always absolute in case of "noise figure" measurements.

Data Points

Each limit line is defined by a minimum of 2 and a maximum of 200 data points. Each data point is defined by its position (x-axis) and value (y-value). Data points must be defined in ascending order. The same position can have two different values.

Remote command:

`CALCulate<n>:LIMit:CONTRol[:DATA]` on page 181

`CALCulate<n>:LIMit:LOWer[:DATA]` on page 182

`CALCulate<n>:LIMit:UPPer[:DATA]` on page 183

Insert Value

Inserts a data point in the limit line above the selected one in the "Edit Limit Line" dialog box.

Delete Value

Deletes the selected data point in the "Edit Limit Line" dialog box.

Shift x

Shifts the x-value of each data point horizontally by the defined shift width.

Remote command:

`CALCulate<n>:LIMit:CONTRol:SHIFt` on page 181

Shift y

Shifts the y-value of each data point vertically by the defined shift width.

Remote command:

`CALCulate<n>:LIMit:LOWer:SHIFt` on page 182

`CALCulate<n>:LIMit:UPPer:SHIFt` on page 184

Save

Saves the currently edited limit line under the name defined in the "Name" field.

7 Remote control commands for noise figure measurements

The following remote control commands are required to configure and perform "noise figure" measurements in a remote environment. The R&S FSV/A must already be set up for remote operation in a network as described in the base unit manual.



Common functionality

Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the R&S FSV/A User Manual.

In particular, this includes:

- Managing Settings and Results, i.e. storing and loading settings and result data.
- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation.
- Using the common status registers (specific status registers for Pulse measurements are not used).



SCPI Recorder - automating tasks with remote command scripts

The R&S FSV3 Noise measurements application also supports the SCPI Recorder functionality.

Using the SCPI Recorder functions, you can create a SCPI script directly on the instrument and then export the script for use on the controller. You can also edit or write a script manually, using a suitable editor on the controller. For manual creation, the instrument supports you by showing the corresponding command syntax for the current setting value.

For details see the "Network and Remote Operation" chapter in the R&S FSV/A User Manual.

Channel-specific commands

Apart from a few general commands on the R&S FSV/A, most commands refer to the currently active channel. Thus, always remember to activate a "Noise Figure" channel before starting a remote program for a "noise figure" measurement.

- [Common suffixes](#)..... 103
- [Introduction](#)..... 103
- [Controlling the noise figure measurement channel](#)..... 108
- [Working with windows in the display](#)..... 112
- [General window commands](#)..... 119
- [Retrieving measurement results](#)..... 120
- [Defining the measurement frequency](#)..... 121
- [Selecting DUT characteristics](#)..... 126
- [Configuring the noise source](#)..... 129
- [Configuring additional loss](#)..... 136
- [Configuring the analyzer](#)..... 143

• Using the uncertainty calculator.....	150
• Performing measurements.....	160
• Configuring the inputs and outputs.....	165
• Configuring the display.....	170
• Working with traces.....	173
• Working with limit lines.....	178
• Working with markers.....	188
• Using the status register.....	199
• Deprecated remote commands for noise figure measurements.....	205
• Programming example: measuring a noise figure.....	206

7.1 Common suffixes

In the R&S FSV3 Noise measurements application, the following common suffixes are used in remote commands:

Table 7-1: Common suffixes used in remote commands in the R&S FSV3 Noise measurements application

Suffix	Value range	Description
<m>	1 to 4	Marker
<n>	1 to 16	Window (in the currently selected channel)
<t>	1 to 4	Trace
	1 to 8	Limit line

7.2 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the R&S FSV/A.



Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

7.2.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FSV/A follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (*RST)**

Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as ***RST** values, if available.

- **Default unit**

The default unit is used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

7.2.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

Example:

SENSe:FREQuency:CENTer is the same as SENS:FREQ:CENT.

7.2.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you do not quote a suffix for keywords that support one, a 1 is assumed.

Example:

DISPlay[:WINDow<1...4>]:ZOOM:STATe enables the zoom in a particular measurement window, selected by the suffix at WINDow.

DISPlay:WINDow4:ZOOM:STATe ON refers to window 4.

7.2.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

Example:

Without a numeric suffix in the optional keyword:

[SENSe:]FREQuency:CENTer is the same as FREQuency:CENTer

With a numeric suffix in the optional keyword:

DISPlay[:WINDow<1...4>]:ZOOM:STATe

DISPlay:ZOOM:STATe ON enables the zoom in window 1 (no suffix).

DISPlay:WINDow4:ZOOM:STATe ON enables the zoom in window 4.

7.2.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

Example:

```
[SENSe:]BANDwidth|BWIDth[:RESolution]
```

In the short form without optional keywords, `BAND 1MHZ` would have the same effect as `BWID 1MHZ`.

7.2.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

Example:

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABLE
```

Parameters can have different forms of values.

- [Numeric values](#)..... 106
- [Boolean](#)..... 107
- [Character data](#)..... 107
- [Character strings](#)..... 108
- [Block data](#)..... 108

7.2.6.1 Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

Example:

With unit: `SENSe:FREQuency:CENTer 1GHZ`

Without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**
Defines the minimum or maximum numeric value that is supported.
- **DEF**
Defines the default value.
- **UP/DOWN**
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

Querying numeric values

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- `INF/NINF`
Infinity or negative infinity. Represents the numeric values `9.9E37` or `-9.9E37`.
- `NAN`
Not a number. Represents the numeric value `9.91E37`. `NAN` is returned if errors occur.

7.2.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by `"ON"` or the numeric value `1`. The "off" state (logically untrue) is represented by `"OFF"` or the numeric value `0`.

Querying Boolean parameters

When you query Boolean parameters, the system returns either the value `1` (`"ON"`) or the value `0` (`"OFF"`).

Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return `1`

7.2.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 7.2.2, "Long and short form"](#), on page 104.

Querying text parameters

When you query text parameters, the system returns its short form.

Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMal`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return `NORM`

7.2.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark (') or a double quotation mark (").

Example:

```
INSTRument:DELeTe 'Spectrum'
```

7.2.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

7.3 Controlling the noise figure measurement channel

The following commands are necessary to control the measurement channel.

<code>INSTRument:CREate:DUPLicate</code>	108
<code>INSTRument:CREate[:NEW]</code>	109
<code>INSTRument:CREate:REPLace</code>	109
<code>INSTRument:DELeTe</code>	109
<code>INSTRument:LIST?</code>	110
<code>INSTRument:REName</code>	111
<code>INSTRument[:SELeCt]</code>	111
<code>SYSTem:PRESet:CHANnel[:EXEC]</code>	112

`INSTRument:CREate:DUPLicate`

Duplicates the currently selected channel, i.e. creates a new channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

Example:

```
INST:SEL 'IQAnalyzer'
INST:CRE:DUPL
```

Duplicates the channel named 'IQAnalyzer' and creates a new channel named 'IQAnalyzer2'.

Usage:

Event

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

Adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

Parameters:

- <ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 110.
- <ChannelName> String containing the name of the channel.
Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

Example: `INST:CRE SAN, 'Spectrum 2'`
Adds a spectrum display named "Spectrum 2".

INSTrument:CREate:REPLace <ChannelName1>, <ChannelType>,
<ChannelName2>

Replaces a channel with another one.

Setting parameters:

- <ChannelName1> String containing the name of the channel you want to replace.
- <ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 110.
- <ChannelName2> String containing the name of the new channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 110).
Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example: `INST:CRE:REPL 'IQAnalyzer2', IQ, 'IQAnalyzer'`
Replaces the channel named "IQAnalyzer2" by a new channel of type "IQ Analyzer" named "IQAnalyzer".

Usage: Setting only

INSTrument:DELeTe <ChannelName>

Deletes a channel.

Setting parameters:

- <ChannelName> String containing the name of the channel you want to delete.
A channel must exist to delete it.

Usage: Setting only

INSTrument:LIST?

Queries all active channels. The query is useful to obtain the names of the existing channels, which are required to replace or delete the channels.

Return values:

<ChannelType>, For each channel, the command returns the channel type and
<ChannelName> channel name (see tables below).
Tip: to change the channel name, use the [INSTrument:REName](#) command.

Example:

```
INST:LIST?
Result for 3 channels:
'ADEM', 'Analog Demod', 'IQ', 'IQ
Analyzer', 'IQ', 'IQ Analyzer2'
```

Usage:

Query only

Table 7-2: Available channel types and default channel names

Application	<ChannelType> Parameter	Default Channel Name*)
Spectrum	SANALYZER	Spectrum
5G NR (R&S FSV3-K144)	NR5G	5G NR
3GPP FDD BTS (R&S FSV3-K72)	BWCD	3G FDD BTS
3GPP FDD UE (R&S FSV3-K73)	MWCD	3G FDD UE
Amplifier Measurements (R&S FSV3-K18)	AMPLifier	Amplifier
AM/FM/PM Modulation Analysis	ADEM	Analog Demod
Bluetooth (R&S FSV3-K8)	BTO	Bluetooth
GSM (R&S FSV3-K10)	GSM	GSM
I/Q Analyzer	IQ	IQ Analyzer
LTE (R&S FSV3-K10x)	LTE	LTE
NB-IoT (R&S FSV3-K106)	NIOT	NB-IoT
Noise Figure Measure- ments	NOISE	Noise
OFDM VSA (R&S FSV3- K96)	OFDMVSA	OFDM VSA
Phase Noise (R&S FSV3- K40)	PNOISE	Phase Noise
Pulse (R&S FSV3-K6)	PULSE	Pulse

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

Application	<ChannelType> Parameter	Default Channel Name*)
Vector Signal Analysis (VSA, R&S FSV3-K70)	DDEM	VSA
WLAN (R&S FSV3-K91)	WLAN	WLAN

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

INSTrument:REName <ChannelName1>, <ChannelName2>

Renames a channel.

Setting parameters:

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.
 Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example: `INST:REN 'IQAnalyzer2', 'IQAnalyzer3'`
 Renames the channel with the name 'IQAnalyzer2' to 'IQAnalyzer3'.

Usage: Setting only

INSTrument[:SElect] <ChannelType> | <ChannelName>

Activates a new channel with the defined channel type, or selects an existing channel with the specified name.

Also see

- [INSTrument:CREate\[:NEW\]](#) on page 109

Parameters:

<ChannelType> Channel type of the new channel.
 For a list of available channel types see [INSTrument:LIST?](#) on page 110.

<ChannelName> String containing the name of the channel.

Example: `INST IQ`
`INST 'MyIQSpectrum'`
 Selects the channel named 'MyIQSpectrum' (for example before executing further commands for that channel).

SYSTem:PRESet:CHANnel[:EXEC]

Restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

Example: `INST:SEL 'Spectrum2'`
 Selects the channel for "Spectrum2".
 `SYST:PRES:CHAN:EXEC`
 Restores the factory default settings to the "Spectrum2" channel.

Usage: Event

Manual operation: See "[Preset Channel](#)" on page 44

7.4 Working with windows in the display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel.

Note that the suffix `<n>` always refers to the window *in the currently selected channel*.

LAYout:ADD[:WINDow]?	112
LAYout:CATalog[:WINDow]?	114
LAYout:IDENtify[:WINDow]?	114
LAYout:MOVE[:WINDow]	115
LAYout:REMOve[:WINDow]	115
LAYout:REPLace[:WINDow]	115
LAYout:SPLitter	116
LAYout:WINDow<n>:ADD?	117
LAYout:WINDow<n>:IDENtify?	118
LAYout:WINDow<n>:REMOve	118
LAYout:WINDow<n>:REPLace	118

LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

Adds a window to the display in the active channel.

Is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the [LAYout:REPLace\[:WINDow\]](#) command.

Query parameters:

<WindowName> String containing the name of the existing window the new window is inserted next to.
 By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<Direction>	LEFT RIGHT ABOVE BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example:

```
LAY:ADD? '1', LEFT, MTAB
```

Result:

```
'2'
```

Adds a new window named '2' with a marker table to the left of window 1.

Usage:

Query only

Manual operation:

See ["Noise Figure"](#) on page 14
 See ["Gain"](#) on page 15
 See ["Temperature"](#) on page 15
 See ["Y-Factor"](#) on page 16
 See ["ENR Measured"](#) on page 17
 See ["Level \(Hot\)"](#) on page 18
 See ["Level \(Cold\)"](#) on page 18
 See ["Cal Y-Factor"](#) on page 19
 See ["Cal Level \(Hot\)"](#) on page 20
 See ["Cal Level \(Cold\)"](#) on page 20
 See ["P Hot"](#) on page 21
 See ["P Cold"](#) on page 21
 See ["Result Table"](#) on page 22
 See ["Marker Table"](#) on page 22

Table 7-3: <WindowType> parameter values for Noise Figure application

Parameter value	Window type
CPCold	"Cal Level (Cold)"
CPHot	"Cal Level (Hot)"
CYFactor	"Cal Y-Factor"
DPC	"P Cold"
DPH	"P Hot"
ENR	"ENR Measured"
GAIN	"Gain"
MTABle	"Marker table"
NOISe	"Noise figure"
PCOLd	"Level (cold)"

Parameter value	Window type
PHOT	"Level (hot)"
RESults	"Result table"
TEMPerature	"Temperature"
YFACTor	"Y-Factor"

LAYout:CATalog[:WINDow]?

Queries the name and index of all active windows in the active channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName_1>,<WindowIndex_1>..<WindowName_n>,<WindowIndex_n>

Return values:

<WindowName> string
 Name of the window.
 In the default state, the name of the window is its index.

<WindowIndex> **numeric value**
 Index of the window.

Example:

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

Usage: Query only

LAYout:IDENTify[:WINDow]? <WindowName>

Queries the **index** of a particular display window in the active channel.

Note: to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENTify?](#) query.

Query parameters:

<WindowName> String containing the name of a window.

Return values:

<WindowIndex> Index number of the window.

Example:

LAY:IDEN:WIND? '2'

Queries the index of the result display named '2'.

Response:

2

Usage: Query only

LAYout:MOVE[:WINDow] <WindowName>, <WindowName>, <Direction>

Setting parameters:

<WindowName>	String containing the name of an existing window that is to be moved. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the LAYout:CATalog[:WINDow]? query.
<WindowName>	String containing the name of an existing window the selected window is placed next to or replaces. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the LAYout:CATalog[:WINDow]? query.
<Direction>	LEFT RIGHT ABOVE BELOW REPLACE Destination the selected window is moved to, relative to the reference window.

Example: `LAY:MOVE '4', '1', LEFT`
Moves the window named '4' to the left of window 1.

Example: `LAY:MOVE '1', '3', REPL`
Replaces the window named '3' by window 1. Window 3 is deleted.

Usage: Setting only

LAYout:REMOve[:WINDow] <WindowName>

Removes a window from the display in the active channel.

Setting parameters:

<WindowName>	String containing the name of the window. In the default state, the name of the window is its index.
--------------	--

Example: `LAY:REM '2'`
Removes the result display in the window named '2'.

Usage: Setting only

LAYout:REPLace[:WINDow] <WindowName>, <WindowType>

Replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel while keeping its position, index and window name.

To add a new window, use the [LAYout:ADD\[:WINDow\]?](#) command.

Setting parameters:

<WindowName>	String containing the name of the existing window. By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the LAYout:CATalog[:WINDow]? query.
--------------	---

<WindowType> Type of result display you want to use in the existing window. See [LAYout:ADD\[:WINDow\]?](#) on page 112 for a list of available window types.

Example: LAY:REPL:WIND '1',MTAB
Replaces the result display in window 1 with a marker table.

Usage: Setting only

LAYout:SPLitter <Index1>, <Index2>, <Position>

Changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

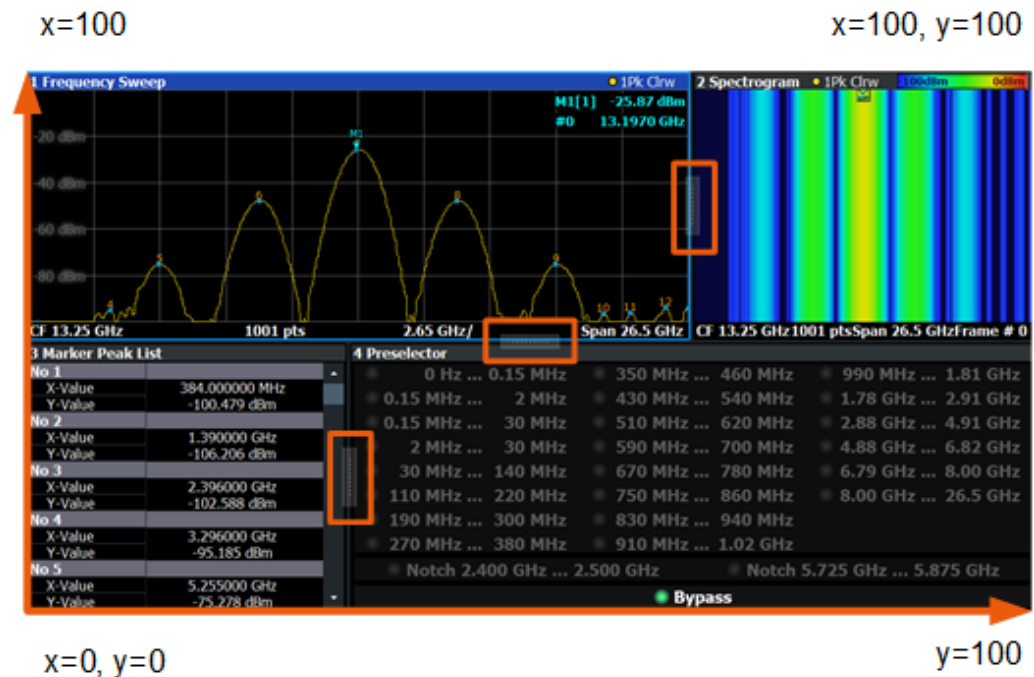


Figure 7-1: SmartGrid coordinates for remote control of the splitters

Setting parameters:

<Index1> The index of one window the splitter controls.

<Index2> The index of a window on the other side of the splitter.

<Position>	<p>New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).</p> <p>The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right corner of the screen. (See Figure 7-1.)</p> <p>The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.</p> <p>Range: 0 to 100</p>
Example:	<pre>LAY:SPL 1,3,50</pre> <p>Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Table') to the center (50%) of the screen, i.e. in the figure above, to the left.</p>
Example:	<pre>LAY:SPL 1,4,70</pre> <p>Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.</p> <pre>LAY:SPL 3,2,70 LAY:SPL 4,1,70 LAY:SPL 2,1,70</pre>
Usage:	Setting only

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

Adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

Is always used as a query so that you immediately obtain the name of the new window as a result.

Suffix:

<n> [Window](#)

Query parameters:

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.
See [LAYout:ADD\[:WINDow\]?](#) on page 112 for a list of available window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:WIND1:ADD? LEFT,MTAB`
Result:
 '2'
 Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

LAYout:WINDow<n>:IDENtify?

Queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel.

Note: to query the **index** of a particular window, use the `LAYout:IDENtify[:WINDow]?` command.

Suffix:
 <n> [Window](#)

Return values:
 <WindowName> String containing the name of a window.
 In the default state, the name of the window is its index.

Example: `LAY:WIND2:IDEN?`
 Queries the name of the result display in window 2.
Response:
 '2'

Usage: Query only

LAYout:WINDow<n>:REMOve

Removes the window specified by the suffix <n> from the display in the active channel.

The result of this command is identical to the `LAYout:REMOve[:WINDow]` command.

Suffix:
 <n> [Window](#)

Example: `LAY:WIND2:REM`
 Removes the result display in window 2.

Usage: Event

LAYout:WINDow<n>:REPLace <WindowType>

Changes the window type of an existing window (specified by the suffix <n>) in the active channel.

The effect of this command is identical to the `LAYout:REPLace[:WINDow]` command.

To add a new window, use the `LAYout:WINDow<n>:ADD?` command.

Suffix:	
<n>	Window
Setting parameters:	
<WindowType>	Type of measurement window you want to replace another one with. See LAYout:ADD[:WINDow]? on page 112 for a list of available window types.
Example:	LAY:WIND2:REPL MTAB Replaces the result display in window 2 with a marker table.
Usage:	Setting only

7.5 General window commands

The following commands are required to configure general window layout, independent of the application.

DISPlay:FORMat	119
DISPlay[:WINDow<n>]:SIZE	119

DISPlay:FORMat <Format>

Determines which tab is displayed.

Parameters:

<Format>	SPLit Displays the MultiView tab with an overview of all active channels
	SINGle Displays the measurement channel that was previously focused.
*RST:	SING

Example: DISP:FORM SPL

DISPlay[:WINDow<n>]:SIZE <Size>

Maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the [LAY:SPL](#) command (see [LAYout:SPLitter](#) on page 116).

Suffix:

<n> [Window](#)

Parameters:

<Size>	LARGE Maximizes the selected window to full screen. Other windows are still active in the background.
--------	--

SMALI

Reduces the size of the selected window to its original size.
If more than one measurement window was displayed originally,
these are visible again.

*RST: SMALI

Example:

DISP:WIND2:SIZE LARG

7.6 Retrieving measurement results

The following commands are necessary to query measurement results.

TRACe<n>[:DATA]?..... 120

TRACe<n>[:DATA]? <Trace>[, <Result>]

Queries the "Noise Figure" measurement results.

Suffix:

<n> 1..n
Window

Query parameters:

<Trace> TRACe1 | TRACe2 | TRACe3 | TRACe4

Selects the trace to be read out.

TRACE1

TRACE2

TRACE3

TRACE4

<Result> NOISe | GAIN | TEMPerature | YFACTor | ENR | PHOT |
PCOLd | CYFactor | CPHot | CPCold | DPHot | DPCold |
NUNCertainty | X | ALL

Selects the result display to be read out.

ALL

Queries all available results for the measurement.

CPCold

Queries "Cal Level (cold)" results.

CPHot

Queries "Cal Level (hot)" results.

CYFactor

Queries calibration "Y-Factor" results.

DPC

Queries "P Cold" results

DPH

Queries "P Hot" results

ENR

Queries "ENR" measured results.

GAIN

Queries "Gain" results.

NOISe

Queries "Noise Figure" results.

NUNCertainty

Queries "Noise Figure" uncertainty results.

PCOLd

Queries "Level (cold)" results.

PHOT

Queries "Level (hot)" results.

TEMPerature

Queries "Temperature" results.

X

Queries the x-values (frequency).

YFACTOR

Queries "Y-Factor" results.

Return values:

<TraceData>

For any graphical result display, the command returns one result for each measurement point.

The unit depends on the result you are querying.

Example:

TRAC? TRACE1, GAIN

Queries the "gain" results for the first trace.

Usage:

Query only

Manual operation:

See ["Noise Figure"](#) on page 14

See ["Gain"](#) on page 15

See ["Temperature"](#) on page 15

See ["Y-Factor"](#) on page 16

See ["ENR Measured"](#) on page 17

See ["Level \(Hot\)"](#) on page 18

See ["Level \(Cold\)"](#) on page 18

See ["Cal Y-Factor"](#) on page 19

See ["Cal Level \(Hot\)"](#) on page 20

See ["Cal Level \(Cold\)"](#) on page 20

See ["P Hot"](#) on page 21

See ["P Cold"](#) on page 21

See ["Result Table"](#) on page 22

7.7 Defining the measurement frequency

The following commands are necessary to define the frequency characteristics of the "noise figure" measurement.

[SENSe:]CONFigure:FREQuency:CONTInuous.....	122
[SENSe:]CONFigure:FREQuency:SINGle.....	122
[SENSe:]CONFigure:LIST:CONTInuous.....	122
[SENSe:]CONFigure:LIST:SINGle.....	123
[SENSe:]FREQuency:CENTer.....	123
[SENSe:]FREQuency:TABLE:DATA.....	123
[SENSe:]FREQuency:LIST:DATA.....	124
[SENSe:]BANDwidth:LIST:DATA.....	124
[SENSe:]FREQuency:POINts.....	124
[SENSe:]FREQuency:SINGle.....	125
[SENSe:]FREQuency:SINGle:COUPlEd.....	125
[SENSe:]FREQuency:SPAN.....	125
[SENSe:]FREQuency:STARt.....	125
[SENSe:]FREQuency:STEP.....	126
[SENSe:]FREQuency:STOP.....	126

[SENSe:]CONFigure:FREQuency:CONTInuous

Configures the software to perform a single frequency measurement in continuous sweep mode.

Example:

```
FREQ:SING 20MHz
      Defines a measurement frequency of 20 MHz.
CONF:FREQ:CONT
      INIT
      Selects and initiates a single frequency measurement.
```

Usage: Event

Manual operation: See "[Tuning Mode](#)" on page 45

[SENSe:]CONFigure:FREQuency:SINGle

Configures the software to perform a single frequency measurement in single sweep mode.

Example:

```
FREQ:SING 20MHz
      Defines a measurement frequency of 20 MHz.
CONF:FREQ:SING
      INIT
      Selects and initiates a single frequency measurement.
```

Usage: Event

Manual operation: See "[Tuning Mode](#)" on page 45

[SENSe:]CONFigure:LIST:CONTInuous

Configures the software to perform a frequency list measurement in continuous sweep mode.

Example: CONF:LIST:CONT
 INIT
 Selects and initiates a frequency list measurement.

Usage: Event

Manual operation: See "[Tuning Mode](#)" on page 45

[SENSe:]CONFigure:LIST:SINGle

Configures the software to perform a measurement in single frequency tuning mode.

Example: CONF:LIST:SING
 INIT
 Selects and initiates a single frequency measurement.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Usage: Event

Manual operation: See "[Tuning Mode](#)" on page 45

[SENSe:]FREQuency:CENTer <Frequency>

Defines the center frequency.

Parameters:

<Frequency> For the allowed range and f_{max} , refer to the specifications document.

*RST: fmax/2

Default unit: Hz

Example: FREQ:CENT 100 MHz
 FREQ:CENT:STEP 10 MHz
 FREQ:CENT UP
 Sets the center frequency to 110 MHz.

Manual operation: See "[Center](#)" on page 46

[SENSe:]FREQuency:TABLE:DATA <Frequency>...

Defines the contents of the frequency table.

The command overwrites the current contents of the frequency table.

Parameters:

<Frequency> Defines a frequency for each entry in the frequency table. A frequency table can contain up to 10001 entries.

Range: 0 Hz to fmax

Default unit: HZ

Example: `FREQ:TABL:DATA 100MHZ,200MHZ,300MHZ,400MHZ,500MHZ`
Creates a frequency table with five entries.

Manual operation: See ["Populate Table"](#) on page 50

[SENSe:]FREQuency:LIST:DATA {<RFFrequency>, <LOFrequency>, <IFFrequency>}...

Queries the RF, LO and IF frequency.

Parameters:

<RFFrequency> Default unit: Hz

<LOFrequency> Default unit: Hz

<IFFrequency> Default unit: Hz

Example: `SENS:FREQ:LIST:DATA?`

Manual operation: See ["Populate Table"](#) on page 50

[SENSe:]BANDwidth:LIST:DATA {<Frequency>, <Bandwidth>, <SweepTime>}...

Queries the RF, RBW and sweep time.

Parameters:

<Frequency> <numeric value>
Default unit: Hz

<Bandwidth> <numeric value>
Default unit: Hz

<SweepTime> <numeric value>
Default unit: s

Example: `SENS:BAND:LIST:DATA?`

Manual operation: See ["Populate Table"](#) on page 50

[SENSe:]FREQuency:POINts <SweepPoints>

Defines the number of measurement points analyzed during a sweep.

Parameters:

<SweepPoints> Range: 1 to 10001
*RST: 20

Example: `SWE:POIN 100`
Defines 100 measurement points.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See "[\(Measurement\) Points](#)" on page 47
See "[\(Measurement\) Points](#)" on page 48

[SENSe:]FREQuency:SINGle <Frequency>

Defines the frequency for single frequency measurements.

Parameters:

<Frequency> The minimum and maximum frequency depend on the hardware. Refer to the datasheet for details.

*RST: 100 MHz

Default unit: HZ

Example:

FREQ: SING 200MHZ

Defines a measurement frequency of 200 MHz.

Manual operation: See "[Center](#)" on page 46
See "[Single \(Frequency\)](#)" on page 48

[SENSe:]FREQuency:SINGle:COUPlEd <State>

Couples or decouples frequency selection to the contents of a sweep list.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Decouples frequency selection

ON | 1

Couples frequency selection

*RST: 0

Example:

SENS: FREQ: SING: COUP ON

Manual operation: See "[Coupled to Sweep List](#)" on page 48

**[SENSe:]FREQuency:SPAN **

Defines the frequency span.

If you change the span, the application creates a new frequency list.

Parameters:

 Default unit: Hz

Example:

FREQ: SPAN 500MHZ

Defines a span of 500 MHz.

Manual operation: See "[Span](#)" on page 46

[SENSe:]FREQuency:STARt <Frequency>

Defines the start frequency.

If you change the start frequency, the application creates a new frequency list.

Parameters:

<Frequency> *RST: RST value
Default unit: HZ

Example: FREQ:STAR 900MHZ
Defines a start frequency of 900 MHz.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See ["Start and Stop Frequency"](#) on page 46

[SENSe:]FREQuency:STEP <Stepsize>

Defines the frequency stepsize in the frequency table.

The stepsize corresponds to the distance from one measurement point to another.

If you change the stepsize, the application creates a new frequency list.

Parameters:

<Stepsize> Range: 0 Hz to span
*RST: 100 MHz
Default unit: HZ

Example: FREQ:STEP 100MHZ
Defines a stepsize of 100 MHz.

Manual operation: See ["Step"](#) on page 47

[SENSe:]FREQuency:STOP <Frequency>

Defines the stop frequency.

If you change the stop frequency, the application creates a new frequency list.

Parameters:

<Frequency> *RST: RST value
Default unit: HZ

Example: FREQ:STOP 900MHZ
Defines a stop frequency of 900 MHz.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See ["Start and Stop Frequency"](#) on page 46

7.8 Selecting DUT characteristics

The following commands are necessary to define DUT characteristics.

[SENSe:]CONFigure:MODE:SYSTem:IF:FREQuency.....	127
[SENSe:]CONFigure:MODE:SYSTem:LO.....	127
[SENSe:]CONFigure:MODE:SYSTem:LO:FREQuency.....	127
[SENSe:]CONFigure:MODE:DUT.....	128
[SENSe:]CORRection:IREJection.....	128

[SENSe:]CONFigure:MODE:SYSTem:IF:FREQuency <Frequency>

Defines the frequency for DUTs with a fixed IF.

Parameters:

<Frequency>	Range:	0 Hz to 100 GHz
	*RST:	10 MHz, if frequency converting mode has been selected
	Default unit:	HZ

Example: CONF:MODE:SYST:IF:FREQ 1GHZ
 Defines a fixed IF of 1 GHz.

Manual operation: See "IF Fixed" on page 52

[SENSe:]CONFigure:MODE:SYSTem:LO <LOType>

Selects the type of local oscillator you are using.

The command is available for measurements on frequency converting DUTs [SENSe:]CONFigure:MODE:DUT().

Parameters:

<LOType>	FIXed VARiable
----------	------------------

FIXed
 The local oscillator is used as a fixed frequency source.
 The IF is variable.

VARiable
 The local oscillator is used as a variable frequency source.
 The IF is fixed.

Example: CONF:MODE:DUT DOWN
 CONF:MODE:SYST:LO FIX
 CONF:MODE:SYST:LO:FREQ 1GHZ
 Selects a fixed LO frequency (= 1 GHz) on a down converting DUT.

Manual operation: See "Mode" on page 51

[SENSe:]CONFigure:MODE:SYSTem:LO:FREQuency <LOFrequency>

Defines the frequency for DUTs with a fixed LO.

Parameters:

<LOFrequency> Range: 0 Hz to 100 GHz
 *RST: 10 MHz, if frequency converting mode has been selected
 Default unit: HZ

Example:

CONF:MODE:SYST:LO:FREQ 1GHZ
 Defines a fixed LO frequency of 1 GHz.

Manual operation: See "[LO Fixed](#)" on page 52

[SENSe:]CONFigure:MODE:DUT <DUTType>

Selects the type of DUT you are testing.

Note that you have to use [[SENSe:](#)] [CONFigure:MODE:SYSTem:LO](#) to select if the LO or IF are fixed.

Parameters:

<DUTType> AMPLifier | DDOWnconv | DOWNconv | SDConverter |
 UPConv | SDConverter

AMPLifier

Measurements on fixed frequency DUTs.

DOWNconv

Measurements on down-converting DUTs.

SDConv

Measurement on system downconverting DUTs.

UPConv

Measurements on up-converting DUTs.

*RST: AMPLifier

Example:

CONF:MODE:DUT DOWN
 Selects the measurement mode for a down-converting DUT.

Manual operation: See "[Mode](#)" on page 51

[SENSe:]CORRection:IREJection <ImageRejection>

Defines the image frequency rejection for the DUT.

Parameters:

<ImageRejection> Range: 0 to 999.99
 *RST: 999.99
 Default unit: DB

Example:

CORR:IREJ 0
 Turns image rejection off.

Manual operation: See "[Image Rejection](#)" on page 52

7.9 Configuring the noise source

The following commands are necessary to define the noise source characteristics.

[SENSe:]CORRection:ENR:CALibration:SPOT:COLD.....	129
[SENSe:]CORRection:ENR:CALibration:SPOT:HOT.....	129
[SENSe:]CORRection:ENR:CALibration:MODE.....	130
[SENSe:]CORRection:ENR:CALibration:SPOT.....	130
[SENSe:]CORRection:ENR:CALibration:TABLE:SElect.....	131
[SENSe:]CORRection:ENR:CALibration:TYPE.....	131
[SENSe:]CORRection:ENR:COMMon.....	131
[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA].....	132
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:DELeTe.....	132
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:LIST?.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA].....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:DELeTe.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:LIST?.....	134
[SENSe:]CORRection:ENR[:MEASurement]:MODE.....	134
[SENSe:]CORRection:ENR[:MEASurement]:SPOT.....	134
[SENSe:]CORRection:ENR[:MEASurement]:TYPE.....	135
[SENSe:]CORRection:ENR[:MEASurement]:SPOT:COLD.....	135
[SENSe:]CORRection:ENR[:MEASurement]:SPOT:HOT.....	135
[SENSe:]CORRection:TEMPerature.....	136
[SENSe:]CORRection:ENR[:MEASurement]:SNS:SRNumber.....	136
[SENSe:]CORRection:ENR:CALibration:SNS:SRNumber.....	136

[SENSe:]CORRection:ENR:CALibration:SPOT:COLD <Temperature>

Defines a constant temperature of a resistor not supplied with power (T_{cold}) used during calibration.

The command is available when you have selected a noise source with resistor characteristics with [SENSe:]CORRection:ENR:CALibration:TYPE.

Parameters:

<Temperature> Temperature in degrees Kelvin.
 *RST: 77 K
 Default unit: K

Example:

```
CORR:ENR:CAL:TYPE RES
CORR:ENR:CAL:SPOT:COLD 100
Defines a cold temperature of 100 K.
```

Manual operation: See "Calibration" on page 55

[SENSe:]CORRection:ENR:CALibration:SPOT:HOT <Temperature>

Defines a constant temperature of a resistor supplied with power (T_{hot}) used during calibration.

The command is available when you have selected a noise source with resistor characteristics with `[SENSe:]CORRection:ENR:CALibration:TYPE`.

Parameters:

<Temperature> Temperature in degrees Kelvin.
 *RST: 77 K
 Default unit: K

Example:

```
CORR:ENR:TYPE RES
CORR:ENR:CAL:SPOT:HOT 300
```

Defines a cold temperature of 300 K.

Manual operation: See "[Calibration](#)" on page 55

[SENSe:]CORRection:ENR:CALibration:MODE <Mode>

Selects the ENR mode for the calibration.

Is available when you use different noise sources for calibration and measurement (`[SENSe:]CORRection:ENR:COMMON OFF`).

Parameters:

<Mode> SPOT | TABLE
SPOT
 Uses a constant ENR value for all measurement points (see `[SENSe:]CORRection:ENR:CALibration:SPOT`).
TABLE
 Uses the contents of the ENR table.
 *RST: SPOT

Example:

```
CORR:ENR:CAL:MODE SPOT
```

Uses a constant ENR value for all measurement points.

Manual operation: See "[Calibration](#)" on page 55

[SENSe:]CORRection:ENR:CALibration:SPOT <ENR>

Defines the constant ENR for all measurement points during calibration.

Is available when you use different noise sources for calibration and measurement (`[SENSe:]CORRection:ENR:COMMON OFF`).

Parameters:

<ENR> Range: -999.99 to 999.99
 *RST: 15
 Default unit: DB

Example:

```
CORR:ENR:CAL:MODE SPOT
CORR:ENR:CAL:SPOT 30
```

Selects constant ENR value mode and defines an ENR of 30 dB for all measurement points.

Manual operation: See "[Calibration](#)" on page 55

[SENSe:]CORRection:ENR:CALibration:TABLE:SElect <TableName>

Selects an ENR or temperature table for calibration.

Note that the contents of the table are independent of whether you use it for calibration or the actual measurement. When you want to edit a table, regardless if you want to use it later for a measurement or for calibration, you have to use `[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect`. This command only selects a table for calibration.

Is available when you use different noise sources for calibration and measurement (`[SENSe:]CORRection:ENR:COMMON OFF`).

Parameters:

<TableName> String containing the table name.

Example:

```
CORR:ENR:MEAS:TABL:SEL 'ENRTable'
```

Selects a table called 'ENRTable'.

Manual operation:

See "Calibration" on page 55

See "New" on page 57

[SENSe:]CORRection:ENR:CALibration:TYPE <Type>

Selects the type of noise source you are using for the calibration.

Parameters:

<Type>

DIODE

Selects a noise source with diode characteristics.

RESistor

Selects a noise source with resistor characteristics.

When you select this noise source type, the application automatically selects the manual measurement mode (see `[SENSe:]CONFigure:CONTRol`).

SMART

Selects a smart noise source.

```
*RST: DIODE
```

Example:

```
CORR:ENR:CAL:TYPE RES
```

Selects a noise source with resistor characteristics.

Manual operation:

See "Noise Source" on page 54

[SENSe:]CORRection:ENR:COMMON <State>

Turns the use of a common ENR on or off.

For more information see "Common Noise Source" on page 55.

Parameters:

<State> ON | OFF | 1 | 0

Example: `CORR:ENR:COMM ON`
Turns the use of a common ENR on.

Manual operation: See ["Common Noise Source"](#) on page 55

[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA] {<FrequencyENR>, <ENR>}...

Defines the contents of the currently selected ENR table.

Define an ENR for all measurement points.

Each entry of the ENR table consists of one measurement point and the corresponding ENR. The individual values are separated by commas or spaces. The table can contain up to 10001 entries.

If you create a new table with this command, it overwrites the current entries of the frequency list.

To select the ENR table to edit, use `[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA]`.

Parameters:

<FrequencyENR> Frequency of the measurement point.
Range: 0 Hz to 999.99 GHz
Default unit: HZ

<ENR> Default unit: DB

Example: `CORR:ENR:MEAS:TABL:DATA 1MHZ,10,2MHZ,12`
Defines a new ENR table with two measurement points.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See ["New"](#) on page 57
See ["Edit"](#) on page 57
See ["Edit Table"](#) on page 58

[SENSe:]CORRection:ENR[:MEASurement]:TABLE:DELeTe <TableName>

Deletes a temperature table.

Setting parameters:

<TableName> String containing the name of the table.

Example: `CORR:ENR:MEAS:TABL:TEMP:DEL 'TemperatureTable'`
Deletes the table with the name 'TemperatureTable'.

Usage: Setting only

Manual operation: See ["Delete"](#) on page 58

[SENSe:]CORRection:ENR[:MEASurement]:TABLE:LIST?**Return values:**

<Tables> <list>

Usage: Query only

[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect <TableName>

Selects an ENR or temperature table for the actual measurement.

When you want to edit a table, regardless if you want to use it later for a measurement or for calibration, you have to use this command. [\[SENSe:\]CORRection:ENR:CALibration:TABLE:SElect](#) only selects a table for calibration.

Parameters:

<TableName>

Manual operation: See ["Measurement"](#) on page 54
 See ["New"](#) on page 57
 See ["Edit"](#) on page 57

[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA]
{<Frequency>, <Thot>, <Tcold>}...**Parameters:**

<Frequency> Default unit: HZ

<Thot> Default unit: K

<Tcold> Default unit: K

Manual operation: See ["New"](#) on page 57
 See ["Edit"](#) on page 57
 See ["Edit Table"](#) on page 58

[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:DElete
<TableName>

Deletes a temperature table.

Setting parameters:

<TableName> String containing the name of the table.

Example: CORR:ENR:MEAS:TABL:TEMP:DEL 'TemperatureTable'
 Deletes the table with the name 'TemperatureTable'.

Usage: Setting only**Manual operation:** See ["Delete"](#) on page 58

[SENSe:]CORRection:ENR[:MEASurement]:TABLe:TEMPerature:LIST?

Queries all temperature tables available in the application.

Return values:

<Tables> <list>
String containing the names of the tables as a comma separated list.

Example: CORR:ENR:TABL:TEMP:LIST
would return, e.g.
'Table1,Table2,Table3'

Usage: Query only

[SENSe:]CORRection:ENR[:MEASurement]:MODE <Mode>

Selects the ENR mode for the actual measurement.

Parameters:

<Mode> SPOT | TABLe
SPOT
Uses a constant ENR value for all measurement points (see [\[SENSe:\]CORRection:ENR\[:MEASurement\]:SPOT](#)).
TABLe
Uses the contents of the ENR table.
*RST: SPOT

Example: CORR:ENR:MODE SPOT
Uses a constant ENR value for all measurement points.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See "[Measurement](#)" on page 54

[SENSe:]CORRection:ENR[:MEASurement]:SPOT <ENR>

Defines the constant ENR for all measurement points during the actual measurement.

Parameters:

<ENR> *RST: 15
Default unit: DB

Example: CORR:ENR:MODE SPOT
CORR:ENR:SPOT 30
Selects constant ENR value mode and defines an ENR of 30 dB for all measurement points.

Manual operation: See "[Measurement](#)" on page 54

[SENSe:]CORRection:ENR[:MEASurement]:TYPE <Type>

Selects the type of noise source you are using for the measurement.

Parameters:

<Type>

DIODe

Selects a noise source with diode characteristics.

RESistor

Selects a noise source with resistor characteristics.

When you select this noise source type, the application automatically selects the manual measurement mode (see [SENSe:]CONFigure:CONTRol).

SMART

Selects a smart noise source.

*RST: DIODe

Example:

CORR:ENR:TYPE RES

Selects a noise source with resistor characteristics.

Manual operation: See "Noise Source" on page 54
See "Noise Source" on page 57

[SENSe:]CORRection:ENR[:MEASurement]:SPOT:COLD <Temperature>

Defines a constant temperature of a resistor not supplied with power (T_{cold}) used during measurements.

The command is available when you have selected a noise source with resistor characteristics with [SENSe:]CORRection:ENR[:MEASurement]:TYPE.

Parameters:

<Temperature>

Temperature in degrees Kelvin.

*RST: 77 K

Default unit: K

Example:

CORR:ENR:TYPE RES

CORR:ENR:SPOT:COLD 100

Defines a cold temperature of 100 K.

Manual operation: See "Measurement" on page 54

[SENSe:]CORRection:ENR[:MEASurement]:SPOT:HOT <Temperature>

Defines a constant temperature of a resistor supplied with power (T_{hot}) used during measurements.

The command is available when you have selected a noise source with resistor characteristics with [SENSe:]CORRection:ENR[:MEASurement]:TYPE.

Parameters:

<Temperature> Temperature in degrees Kelvin.
 *RST: 77 K
 Default unit: K

Example:

CORR:ENR:TYPE RES
 CORR:ENR:SPOT:HOT 300
 Defines a cold temperature of 300 K.

Manual operation: See "[Measurement](#)" on page 54

[SENSe:]CORRection:TEMPerature <Temperature>

Defines the room temperature of the measurement environment. The temperature is taken into account when calculating noise results.

Parameters:

<Temperature> Range: 278.15 to 318.15
 *RST: 293
 Default unit: K

Example:

CORR:TEMP 291.50
 Specifies a room temperature of 291.50 Kelvin (18.5 C).

Manual operation: See "[Temperature](#)" on page 56

[SENSe:]CORRection:ENR[:MEASurement]:SNS:SRNumber <SerialNumber>

Sets and queries the measurement noise source smart noise source serial number.

Parameters:

<SerialNumber>

Manual operation: See "[Noise Source](#)" on page 54

[SENSe:]CORRection:ENR:CALibration:SNS:SRNumber <SerialNumber>

Sets and queries the calibration noise source smart noise source serial number.

Parameters:

<SerialNumber>

Manual operation: See "[Noise Source](#)" on page 54

7.10 Configuring additional loss

The following commands are necessary to define loss resulting from equipment in the measurement setup.

[SENSe:]CORRection:LOSS:CALibration:MODE.....	137
[SENSe:]CORRection:LOSS:CALibration:SPOT.....	137
[SENSe:]CORRection:LOSS:CALibration:TABLE:DELeTe.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE:LIST?.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE:SELeCt.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE[:DATA].....	138
[SENSe:]CORRection:LOSS:CALibration:TEMPerature.....	139
[SENSe:]CORRection:LOSS:INPut:MODE.....	139
[SENSe:]CORRection:LOSS:INPut:SPOT.....	139
[SENSe:]CORRection:LOSS:INPut:TABLE[:DATA].....	140
[SENSe:]CORRection:LOSS:INPut:TABLE:DELeTe.....	140
[SENSe:]CORRection:LOSS:INPut:TABLE:LIST?.....	141
[SENSe:]CORRection:LOSS:INPut:TABLE:SELeCt.....	141
[SENSe:]CORRection:LOSS:INPut:TEMPerature.....	141
[SENSe:]CORRection:LOSS:OUTPut:MODE.....	141
[SENSe:]CORRection:LOSS:OUTPut:SPOT.....	142
[SENSe:]CORRection:LOSS:OUTPut:TABLE[:DATA].....	142
[SENSe:]CORRection:LOSS:OUTPut:TABLE:DELeTe.....	142
[SENSe:]CORRection:LOSS:OUTPut:TABLE:LIST?.....	143
[SENSe:]CORRection:LOSS:OUTPut:TABLE:SELeCt.....	143
[SENSe:]CORRection:LOSS:OUTPut:TEMPerature.....	143

[SENSe:]CORRection:LOSS:CALibration:MODE <Mode>

Selects the input loss mode.

Parameters:

<Mode>

SPOT | TABLE

SPOT

Uses a constant calibration loss value for all measurement points (see [SENSe:]CORRection:LOSS:CALibration:SPOT on page 137).

TABLE

Uses the contents of the calibration loss table.

*RST: SPOT

Example:

```
CORR:LOSS:INP:MODE SPOT
```

```
CORR:LOSS:INP:SPOT 10
```

Selects constant calibration loss mode and defines an input loss of 10 dB for all measurement points.

Manual operation: See "Calibration Loss" on page 62

[SENSe:]CORRection:LOSS:CALibration:SPOT <Loss>

Defines a constant calibration loss for all measurement points.

Parameters:

<Loss>

Range: -999.99 to 999.99

*RST: 0 dB

Default unit: dB

Example: CORR:LOSS:INP:MODE SPOT
 CORR:LOSS:INP:SPOT 10
 Selects constant calibration loss mode and defines an input loss of 10 dB for all measurement points.

Manual operation: See "[Calibration Loss](#)" on page 62

[SENSe:]CORRection:LOSS:CALibration:TABLE:DELeTe <TableName>

Deletes a calibration loss table.

Setting parameters:

<TableName> String containing the name of the table.

Example: CORR:LOSS:CAL:TABL:DEL 'CalibrationLoss'
 Deletes the table with the name 'CalibrationLoss'.

Usage: Setting only

Manual operation: See "[Delete](#)" on page 64

[SENSe:]CORRection:LOSS:CALibration:TABLE:LIST?

Queries all calibration loss tables available in the application.

Example: CORR:LOSS:CAL:TABL:LIST?
Result:
 'Table1, Table2, Table3'

Usage: Query only

[SENSe:]CORRection:LOSS:CALibration:TABLE:SELeCt <TableName>

Selects a calibration loss table.

Parameters:

<TableName> String containing the table name.

Example: CORR:LOSS:CAL:TABL:SEL 'CalibrationLoss'
 Selects a table called CalibrationLoss'.

Manual operation: See "[Calibration Loss](#)" on page 62

[SENSe:]CORRection:LOSS:CALibration:TABLE[:DATA] {<Frequency>, <Loss>}...

Defines the contents of the currently selected calibration loss table.

Each entry of the loss table consists of one measurement point and the corresponding loss. The table can contain up to 10001 entries.

If you create a new table with this command, it overwrites the current entries of the loss table.

Parameters:

<Frequency> Frequency of the measurement point.

Range: 0 Hz to 999.99 GHz

Default unit: HZ

<Loss> Loss of the measurement point.

Range: -999.99 GHz to 999.99 GHz

Default unit: DB

Example:

`CORR:LOSS:CAL:TABL 1MHz,10,2MHz,12`

Defines a new calibration loss table with two measurement points.

Manual operation: See "New" on page 64

See "Edit" on page 64

[SENSe:]CORRection:LOSS:CALibration:TEMPerature <Temperature>

The specified temperature at the time of measurement is considered in the loss calculation.

Parameters:

<Temperature> Default unit: K

Example:

`SENS:CORR:LOSS:CAL:TEMP 296.5`

Calibration loss is corrected for a temperature of 296.5 K (23.35° C).

Manual operation: See "Calibration Loss" on page 62

[SENSe:]CORRection:LOSS:INPut:MODE <Mode>

Selects the input loss mode.

Parameters:

<Mode> SPOT | TABLE

SPOT

Uses a constant input loss value for all measurement points (see `[SENSe:]CORRection:LOSS:INPut:SPOT` on page 139).

TABLE

Uses the contents of the input loss table.

*RST: SPOT

Example:

`CORR:LOSS:INP:MODE SPOT`

Selects constant input loss.

Manual operation: See "Input Loss" on page 61

[SENSe:]CORRection:LOSS:INPut:SPOT <Loss>

Defines a constant input loss for all measurement points.

Parameters:

<Loss> Range: -999.99 to 999.99
 *RST: 0 dB
 Default unit: DB

Example:

```
CORR:LOSS:INP:MODE SPOT
CORR:LOSS:INP:SPOT 10
```

Selects constant input loss mode and defines an input loss of 10 dB for all measurement points.

Manual operation: See ["Input Loss"](#) on page 61

[SENSe:]CORRection:LOSS:INPut:TABLE[:DATA] {<Frequency>, <Loss>}...

Defines the contents of the currently selected input loss table.

Each entry of the loss table consists of one measurement point and the corresponding loss. The table can contain up to 10001 entries.

The table should contain an input loss for all measurement points.

If you create a new table with this command, it will overwrite the current entries of the loss table.

Parameters:

<Frequency> Frequency of the measurement point.
 Range: 0 dB to 999.99 dB
 Default unit: HZ

<Loss> Loss of the measurement point.
 Range: -999.99 dB to 999.99 dB
 Default unit: DB

Example:

```
CORR:LOSS:INP:TABL 1MHz,10,2MHz,12
```

Defines a new input loss table with two measurement points.

Manual operation: See ["Edit Table"](#) on page 58
 See ["New"](#) on page 64
 See ["Edit"](#) on page 64

[SENSe:]CORRection:LOSS:INPut:TABLE:DELEte <TableName>

Deletes an input loss table.

Setting parameters:

<TableName> String containing the name of the table.

Example:

```
CORR:LOSS:INP:TABL:DEL 'InputLoss'
```

Deletes the table with the name 'InputLoss'.

Usage: Setting only

Manual operation: See ["Delete"](#) on page 64

[SENSe:]CORRection:LOSS:INPut:TABLE:LIST?

Queries all input loss tables available in the application.

Example: CORR:LOSS:INP:TABL:LIST?
Result:
 'Table1, Table2, Table3'

Usage: Query only

[SENSe:]CORRection:LOSS:INPut:TABLE:SElect <TableName>

Selects an input loss table.

Parameters:

<TableName> String containing the table name.

Example: CORR:LOSS:INP:TABL:SEL 'InputLoss'
 Selects a table called 'InputLoss'.

Manual operation: See ["Input Loss"](#) on page 61

[SENSe:]CORRection:LOSS:INPut:TEMPerature <Temperature>

The specified temperature at the time of measurement is considered in the loss calculation.

Parameters:

<Temperature> Default unit: K

Example: SENS:CORR:LOSS:INP:TEMP 296.5
 Input loss is corrected for a temperature of 296.5 K (23.35° C).

Manual operation: See ["Input Loss"](#) on page 61

[SENSe:]CORRection:LOSS:OUTPut:MODE <Mode>

Selects the output loss mode.

Parameters:

<Mode> SPOT | TABLE

SPOT

Uses a constant output loss value for all measurement points (see [\[SENSe:\]CORRection:LOSS:OUTPut:SPOT](#) on page 142).

TABLE

Uses the contents of the output loss table.

*RST: SPOT

Example: CORR:LOSS:OUTP:MODE SPOT
 Selects constant output loss.

Manual operation: See ["Output Loss"](#) on page 62

[SENSe:]CORRection:LOSS:OUTPut:SPOT <Loss>

Defines a constant output loss for all measurement points.

Parameters:

<Loss> Range: -999.99 to 999.99
 *RST: 0 dB
 Default unit: DB

Example:

CORR:LOSS:OUTP:MODE SPOT
 CORR:LOSS:OUTP:SPOT 10

Selects constant output loss mode and defines an output loss of 10 dB for all measurement points.

Manual operation: See "[Output Loss](#)" on page 62

[SENSe:]CORRection:LOSS:OUTPut:TABLE[:DATA] {<Frequency>, <Loss>}...

Defines the contents of the currently selected output loss table.

The table should contain an output loss for all measurement points.

Each entry of the loss table consists of one measurement point and the corresponding loss. The table can contain up to 10001 entries.

If you create a new table with this command, it will overwrite the current entries of the frequency list.

Parameters:

<Frequency> Frequency of the measurement point.
 Range: 0 dB to 999.99 dB
 Default unit: HZ

<Loss> Loss of the measurement point.
 Range: -999.99 dB to 999.99 dB
 Default unit: DB

Example:

CORR:LOSS:OUTP:TABL 1MHz,10,2MHz,12

Defines a new output loss table with two measurement points.

Manual operation: See "[Edit Table](#)" on page 58

See "[New](#)" on page 64

See "[Edit](#)" on page 64

[SENSe:]CORRection:LOSS:OUTPut:TABLE:DELeTe <TableName>

Setting parameters:

<TableName>

Usage: Setting only

Manual operation: See "[Delete](#)" on page 64

[SENSe:]CORRection:LOSS:OUTPut:TABLE:LIST?

Queries all output loss tables available in the application.

Example: CORR:LOSS:OUTP:TABL:LIST?
Result:
 'Table1,Table2,Table3'

Usage: Query only

[SENSe:]CORRection:LOSS:OUTPut:TABLE:SElect <TableName>**Parameters:**

<TableName>

Manual operation: See "Output Loss" on page 62

[SENSe:]CORRection:LOSS:OUTPut:TEMPerature <Temperature>

The specified temperature at the time of measurement is considered in the loss calculation.

Parameters:

<Temperature> numeric value
 Default unit: K

Example: SENS:CORR:LOSS:OUTP:TEMP 296.5
 Output loss is corrected for a temperature of 296.5 K (23.35° C).

Manual operation: See "Output Loss" on page 62

7.11 Configuring the analyzer

The following commands are necessary to configure the analyzer.

[SENSe:]BWIDth[:RESolution].....	144
[SENSe:]BANDwidth[:RESolution].....	144
[SENSe:]BWIDth:RESolution:AUTO.....	144
[SENSe:]BANDwidth:RESolution:AUTO.....	144
[SENSe:]CONFigure:CORRection.....	144
[SENSe:]CORRection[:STATE].....	145
[SENSe:]CORRection:RECall.....	145
[SENSe:]CORRection:SAVE.....	146
[SENSe:]SWEep:COUNT.....	146
[SENSe:]SWEep:TIME.....	146
[SENSe:]SWEep:TIME:AUTO.....	147
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel.....	147
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel:AUTO.....	147
INPut:ATTenuation.....	148
INPut:SElect.....	148

INPut:TYPE.....	148
INPut:EGAIN[:STATE].....	149
INPut:GAIN:STATE.....	149
INPut:GAIN[:VALue].....	149
SYSTem:CONFigure:DUT:GAIN.....	150
SYSTem:CONFigure:DUT:STIMe.....	150

[SENSe:]BWIDth[:RESolution] <Bandwidth>

[SENSe:]BANDwidth[:RESolution] <Bandwidth>

Defines the resolution bandwidth and decouples the resolution bandwidth from the span.

The 6 MHz Gaussian filter is provided for special measurements, such as 5G NR spurious emissions measurements. It is only available if you enter the value manually, not using the `BAND:RES MAX` command. It is not supported by all applications.

Example: `BAND 1 MHz`
 Sets the resolution bandwidth to 1 MHz

Manual operation: See "[Resolution Bandwidth \(RBW\)](#)" on page 66

[SENSe:]BWIDth:RESolution:AUTO <State>

[SENSe:]BANDwidth:RESolution:AUTO <State>

If enabled, the resolution bandwidth is selected automatically, depending on the current frequency of the sweep point, as defined in the frequency table (see [Chapter 5.2.3, "Using a frequency table"](#), on page 48).

If disabled, the RBW defined by `[SENSe:]BANDwidth[:RESolution]` is used.

Parameters:

<State> `ON | OFF | 0 | 1`
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example: `SENS:BAND:RES:AUTO ON`

Manual operation: See "[Resolution Bandwidth \(RBW\)](#)" on page 66

[SENSe:]CONFigure:CORRection

Configures the software to perform calibration measurements.

Using `INITiate<n>[:IMMediate]` then initiates a calibration instead of the actual measurement, until you deliberately select one of the normal measurements again with one of the following commands.

- `[SENSe:]CONFigure:FREQuency:CONTinuous`
- `[SENSe:]CONFigure:FREQuency:SINGLE`

- `[SENSe:]CONFigure:LIST:CONTinuous`
- `[SENSe:]CONFigure:LIST:SINGle`

Note that calibration data is used only when the second stage correction mode has been turned on with `[SENSe:]CORRection[:STATe]`.

Example:

```
//Turn on second stage correction
CORR ON
//Configure application to run calibration measurement
CONF:CORR
//Initiate calibration with synchronization to end of measurement
INIT;*OPC
//Return to normal measurement (single sweep list mode)
CONF:LIST:SING
//Initiate a calibrated measurement with synchronization to end
of measurement
INIT;*OPC
```

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Usage: Event

Manual operation: See ["2nd Stage Correction"](#) on page 66
See ["Calibrate"](#) on page 76

`[SENSe:]CORRection[:STATe] <State>`

Includes or excludes calibration data in the actual measurement (see ["2nd Stage Correction"](#) on page 66 for more information).

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Example: CORR ON
Includes calibration data in the measurement.

Example: See [Chapter 7.21, "Programming example: measuring a noise figure"](#), on page 206

Manual operation: See ["2nd Stage Correction"](#) on page 66

`[SENSe:]CORRection:RECall <recallfilepath>`

Sets the calibration results recall filepath and recalls the calibration results.

Setting parameters:

<recallfilepath>

Example: SENS:CORR:REC 'filepath'
This command will recall the calibration results from a selected file with extension `.df1`.

- Usage:** Setting only
- Manual operation:** See "[Calibration Recall](#)" on page 36

[SENSe:]CORRection:SAVE <savefilepath>

Queries and sets the calibration results save filepath and if set saves the calibration results.

Parameters:
<savefilepath>

- Example:** `SENS:CORR:SAVE?`
This will report an error -221 if calibration results are not available for saving. If calibration results are available the command will report a suggested filepath which includes the calibration results timestamp.
- `SENS:CORR:SAVE 'filepath'`
This will report an error if calibration results are not available for saving. The command will save the calibration results to a filename with extension `.df1`.

- Manual operation:** See "[Calibration Save](#)" on page 35

[SENSe:]SWEep:COUNT <Averages>

Defines the number of measurements that are used to average the results.

- Parameters:**
<Averages> Number of measurements that are performed at a single frequency before average results are displayed.
If you set an average of 0 or 1, the application performs a single measurement at each frequency.
- Range: 0 to 32767
*RST: 1

- Example:** `SWE:COUN 10`
The application averages 10 measurements before it displays the results.

- Manual operation:** See "[Average](#)" on page 67

[SENSe:]SWEep:TIME <Time>

Defines the sweep time. It automatically decouples the time from any other settings.

- Parameters:**
<Time> refer to specifications document
- *RST: depends on current settings (determined automatically)
- Default unit: S

Manual operation: See "Sweep Time" on page 66

[SENSe:]SWEep:TIME:AUTO <State>

If enabled, the sweep time is automatically selected, depending on the current frequency of the sweep point, as defined in the frequency table (see [Chapter 5.2.3, "Using a frequency table"](#), on page 48).

If disabled, the value defined by [SENSe:]SWEep:TIME is used.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Manual operation: See "Sweep Time" on page 66

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

Defines the reference level (for all traces in all windows).

Suffix:

<n> irrelevant
 <t> irrelevant

Parameters:

<ReferenceLevel> Range: see datasheet
 *RST: -30 dBm
 Default unit: DBM

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "Ref Level" on page 67

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:AUTO <State>

Turns automatic determination of the reference level on and off.

Suffix:

<n> 1..n
 <t> 1..n
 irrelevant

Parameters:

<State> ON | OFF | 1 | 0

Example: DISP:TRAC:Y:RLEV:AUTO ON
 Turns on automatic level detection.

Manual operation: See ["Ref Level"](#) on page 67

INPut:ATTenuation <Attenuation>

Defines the total attenuation for RF input.

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Parameters:

<Attenuation> Range: see specifications document
 Increment: 5 dB (with optional electr. attenuator: 1 dB)
 *RST: 10 dB (AUTO is set to ON)
 Default unit: DB

Example:

```
INP:ATT 30dB
```

Defines a 30 dB attenuation and decouples the attenuation from the reference level.

Manual operation: See ["RF Attenuation"](#) on page 68

INPut:SElect <Source>

Selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FSV/A.

If no additional input options are installed, only RF input is supported.

Parameters:

<Source> **RF**
 Radio Frequency ("RF INPUT" connector)
 *RST: RF

INPut:TYPE <Input>

The command selects the input path.

Parameters:

<Input> **INPUT1**
 Selects RF input 1.
 INPUT2
 Selects RF input 2.
 *RST: INPUT1

Example:

```
//Select input path
INP:TYPE INPUT1
```

INPut:EGain[:STATe] <State>

Before this command can be used, the external preamplifier must be connected to the R&S FSV/A. See the preamplifier's documentation for details.

When activated, the R&S FSV/A automatically compensates the magnitude and phase characteristics of the external preamplifier in the measurement results.

Note that when an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

When deactivated, no compensation is performed even if an external preamplifier remains connected.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 No data correction is performed based on the external preamplifier
ON | 1
 Performs data corrections based on the external preamplifier
 *RST: 0

Example: INP:EGA ON

INPut:GAIN:STATe <State>

Turns the internal preamplifier on and off. It requires the optional preamplifier hardware.

For R&S FSV/A44 models, note the restrictions described in "[Preamplifier](#)" on page 68.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

Example: INP:GAIN:STAT ON
 INP:GAIN:VAL 15
 Switches on 15 dB preamplification.

Manual operation: See "[Preamplifier](#)" on page 68

INPut:GAIN[:VALue] <Gain>

Selects the "gain" if the preamplifier is activated (INP:GAIN:STAT ON, see [INPut:GAIN:STATe](#) on page 149).

The command requires the additional preamplifier hardware option.

For R&S FSV/A44 or higher models, note the restrictions described in ["Preamplifier"](#) on page 68.

Parameters:

<Gain> The following settings are available:
 15 dB and 30 dB
 All other values are rounded to the nearest of these two.
 Default unit: DB

Example:

```
INP:GAIN:STAT ON
INP:GAIN:VAL 30
```

Switches on 30 dB preamplification.

Manual operation: See ["Preamplifier"](#) on page 68

SYSTem:CONFigure:DUT:GAIN <Gain>

Defines the expected "gain" of the DUT.

The application uses the "gain" for automatic reference level detection.

Parameters:

<Gain> Range: 10 to 1000
 *RST: 30
 Default unit: DB

Example:

```
SYST:CONF:DUT:GAIN 25
```

Defines "gain" of 25 dB.

Manual operation: See ["Auto Level Range"](#) on page 68

SYSTem:CONFigure:DUT:STIMe <SettlingTime>

Defines the settling time of the noise source.

Parameters:

<SettlingTime> Range: 0 s to 20 s
 *RST: 50 ms
 Default unit: S

Example:

```
SYST:CONF:DUT:STIM 1 s
```

Defines a settling time of 1 second.

Manual operation: See ["Settling Time"](#) on page 67

7.12 Using the uncertainty calculator

The following commands are necessary to work with the measurement uncertainty calculator.

CALCulate<n>:UNCertainty:COMMON.....	151
CALCulate<n>:UNCertainty:DATA:FREQUENCY.....	151
CALCulate<n>:UNCertainty:DATA:GAIN.....	152
CALCulate<n>:UNCertainty:DATA:NOISE.....	152
CALCulate<n>:UNCertainty:DATA:RESULTS.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:COLD.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:HOT.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty:COLD.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty:HOT.....	155
CALCulate<n>:UNCertainty:MATCh:DUT:IN:RL.....	155
CALCulate<n>:UNCertainty:MATCh:DUT:IN[:VSWR].....	155
CALCulate<n>:UNCertainty:MATCh:DUT:OUT:RL.....	156
CALCulate<n>:UNCertainty:MATCh:DUT:OUT[:VSWR].....	156
CALCulate<n>:UNCertainty:MATCh:PREamp:RL.....	156
CALCulate<n>:UNCertainty:MATCh:PREamp[:VSWR].....	157
CALCulate<n>:UNCertainty:MATCh:SOURce:CALibration[:VSWR].....	157
CALCulate<n>:UNCertainty:MATCh:SOURce:CALibration:RL.....	157
CALCulate<n>:UNCertainty:MATCh:SOURce:RL.....	158
CALCulate<n>:UNCertainty:MATCh:SOURce[:VSWR].....	158
CALCulate<n>:UNCertainty:PREamp:GAIN.....	158
CALCulate<n>:UNCertainty:PREamp:NOISE.....	159
CALCulate<n>:UNCertainty:PREamp:STATe.....	159
CALCulate<n>:UNCertainty[:RESult]?.....	159
CALCulate<n>:UNCertainty:SANalyzer:GAIN:UNCertainty?.....	160
CALCulate<n>:UNCertainty:SANalyzer:NOISE:UNCertainty?.....	160

CALCulate<n>:UNCertainty:COMMON <State>

Turns matching of the noise source characteristics used during calibration and measurement on and off.

Is available when you use different noise sources for calibration and measurement ([SENSE:]CORRection:ENR:COMMON OFF).

Suffix:

<n> 1..n

Parameters:

<State> ON | OFF | 1 | 0

*RST: unavailable

Example:

CALC:UNC:COMM ON

Applies the values of the calibration noise source to those of the measurement noise source.

Manual operation: See "Common Source for Meas and Cal" on page 71

CALCulate<n>:UNCertainty:DATA:FREQUENCY <Frequency>

Defines the frequency for which the uncertainty should be calculated.

Is available if you have turned automatic determination of the DUT characteristics off with `CALCulate<n>:UNCertainty:DATA:FREQuency` .

Suffix:

<n> 1..n

Parameters:

<Frequency> Frequency of the DUT.
 *RST: 1 GHz
 Default unit: HZ

Example:

`CALC:UNC:DATA:FREQ 100MHZ`
 Defines a frequency of 100 MHz.

Manual operation: See "[Use Measurement Values](#)" on page 72

CALCulate<n>:UNCertainty:DATA:GAIN <Gain>

Defines the "gain" of the DUT.

Is available if you have turned automatic determination of the DUT characteristics off with `CALCulate<n>:UNCertainty:DATA:GAIN`.

Suffix:

<n> 1..n

Parameters:

<Gain> "Gain" of the DUT.
 *RST: 0 dB
 Default unit: DB

Example:

`CALC:UNC:DATA:GAIN -5DB`
 Defines a DUT "gain" of -5 dB.

Manual operation: See "[Use Measurement Values](#)" on page 72

CALCulate<n>:UNCertainty:DATA:NOISe <NoiseLevel>

Defines the noise level of the DUT.

Is available if you have turned automatic determination of the DUT characteristics off with `CALCulate<n>:UNCertainty:DATA:RESults`.

Suffix:

<n> 1..n

Parameters:

<NoiseLevel> Noise level of the DUT.
 *RST: 0 dB
 Default unit: DB

Example:

`CALC:UNC:DATA:NOIS 10DB`
 Defines a DUT noise level of 10 dB.

Manual operation: See "[Use Measurement Values](#)" on page 72

CALCulate<n>:UNCertainty:DATA:RESults <State>

Turns automatic determination of the DUT characteristics for the calculation of the uncertainty on and off.

Suffix:

<n> 1..n

Parameters:

<State>

ON | 1

The application calculates the uncertainty with the DUT characteristics ("noise figure", "gain" and frequency) resulting from the "noise figure" measurement.

OFF | 0

The application calculates the uncertainty with the DUT characteristics ("noise figure", "gain" and frequency) based on the values you have defined manually.

Example:

CALC:UNC:DATA:RES ON

Includes the uncertainty in the results displays.

CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty <Uncertainty>

Defines the uncertainty of a calibration noise source.

Is available when [SENSe:]CORRection:ENR:COMMon and [SENSe:]CORRection:ENR:COMMon are off.

If a smart noise source is used for calibration, the uncertainty values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<Uncertainty>

Uncertainty value of the noise source.

Refer to the specifications document of the noise source to determine its uncertainty.

*RST: 0.1 dB

Default unit: DB

Example:

CALC:UNC:ENR:CAL:UNC 0.05

Defines an uncertainty of 0.05 dB.

Manual operation: See "ENR Uncert(ainty)" on page 71

CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:COLD <Uncertainty>**Suffix:**

<n> 1..n

Parameters:

<Uncertainty>

Manual operation: See "[Temperature Uncert\(ainty\)](#)" on page 72

CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:HOT <Uncertainty>

Defines the uncertainty of a calibration noise source.

Is available when [\[SENSe:\]CORRection:ENR:COMMon](#) and [CALCulate<n>:UNCertainty:COMMon](#) are off.

Suffix:

<n> 1..n

Parameters:

<Uncertainty> Hot temperature uncertainty value of the noise source.
Refer to the specifications document of the noise source to determine its uncertainty.

*RST: 0 K

Example: `CALC:UNC:ENR:CAL:UNC:COLD 5 K`
Defines a high temperature uncertainty of 5 K.

Manual operation: See "[Temperature Uncert\(ainty\)](#)" on page 72

CALCulate<n>:UNCertainty:ENR:UNCertainty <Uncertainty>

Defines the uncertainty of a noise source.

If the noise sources during calibration and measurement are different, the command defines the uncertainty of the measurement noise source.

If a smart noise source is used, the uncertainty values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<Uncertainty> Uncertainty value of the noise source.
Refer to the specifications document of the noise source to determine its uncertainty.

*RST: 0.1 dB

Default unit: DB

Example: `CALC:UNC:ENR:UNC 0.05`
Defines an uncertainty of 0.05 dB.

Manual operation: See "[ENR Uncert\(ainty\)](#)" on page 71

CALCulate<n>:UNCertainty:ENR:UNCertainty:COLD <Uncertainty>

Defines the uncertainty of a resistor.

If the noise sources during calibration and measurement are different, the command defines the uncertainty of the measurement noise source.

Suffix:

<n> 1..n

Parameters:

<Uncertainty> Cold temperature uncertainty value of the noise source.
Refer to the specifications document of the noise source to determine its uncertainty.

*RST: 0 K

Example:

CALC:UNC:ENR:UNC:COLD 10

Defines an low temperature uncertainty of 10 K.

Manual operation: See "[Temperature Uncert\(ainty\)](#)" on page 72**CALCulate<n>:UNCertainty:ENR:UNCertainty:HOT <Uncertainty>**

Defines the uncertainty of a resistor.

If the noise sources during calibration and measurement are different, the command defines the uncertainty of the measurement noise source.

Suffix:

<n> 1..n

Parameters:

<Uncertainty> Hot temperature uncertainty value of the noise source.
Refer to the specifications document of the noise source to determine its uncertainty.

*RST: 0 K

Example:

CALC:UNC:ENR:UNC:HOT 10

Defines an high temperature uncertainty of 10 K.

CALCulate<n>:UNCertainty:MATCH:DUT:IN:RL <ReturnLoss>

Defines the return loss at the DUT input.

Suffix:

<n> 1..n

Parameters:

<ReturnLoss> *RST: 50.0 dB
Default unit: DB

Example:

CALC:UNC:MATC:DUT:IN:RL 25DB

Defines a return loss of 25 dB.

Manual operation: See "[Input / Output Match](#)" on page 72**CALCulate<n>:UNCertainty:MATCH:DUT:IN[:VSWR] <VSWR>**

Defines the VSWR at the DUT input.

Suffix:
 <n> 1..n

Parameters:
 <VSWR> *RST: 1.0

Example: CALC:UNC:MATC:DUT:IN 1.1
 Defines a VSWR of 1.1 at the DUT input.

Manual operation: See ["Input / Output Match"](#) on page 72

CALCulate<n>:UNCertainty:MATCh:DUT:OUT:RL <ReturnLoss>

Defines the returns loss at the DUT output.

Suffix:
 <n> 1..n

Parameters:
 <ReturnLoss> *RST: 50.0 dB
 Default unit: DB

Example: CALC:UNC:MATC:DUT:OUT:RL 40DB
 Defines a return loss of 40 dB at the DUT output.

Manual operation: See ["Input / Output Match"](#) on page 72

CALCulate<n>:UNCertainty:MATCh:DUT:OUT[:VSWR] <VSWR>

Defines the VSWR at the DUT output.

Suffix:
 <n> 1..n

Parameters:
 <VSWR> *RST: 1.0

Example: CALC:UNC:MATC:DUT:OUT 2.0
 Defines a VSWR of 2.0 at the DUT output.

Manual operation: See ["Input / Output Match"](#) on page 72

CALCulate<n>:UNCertainty:MATCh:PREamp:RL <ReturnLoss>

Defines the return loss at the input of the preamplifier.

Suffix:
 <n> 1..n

Parameters:
 <ReturnLoss> *RST: 13.98 dB
 Default unit: DB

Example: CALC:UNC:MATC:PRE:RL 14.5DB
 Defines a return loss of 14.5 dB.

CALCulate<n>:UNCertainty:MATCh:PREamp[:VSWR] <VSWR>

Defines the VSWR at the input of the preamplifier.

The command is available if you have turned on the preamplifier with [CALCulate<n>:UNCertainty:PREamp:STaTe](#) on page 159.

Suffix:

<n> 1..n

Parameters:

<VSWR> *RST: 1.5

Example:

CALC:UNC:MATC:PRE 1.8
Defines a VSWR of 1.8.

CALCulate<n>:UNCertainty:MATCh:SOURce:CALibration[:VSWR] <VSWR>

Defines the VSWR at the calibration noise source output.

Is available when [\[SENSe:\]CORRection:ENR:COMMon](#) and [CALCulate<n>:UNCertainty:COMMon](#) are off.

If a smart noise source is used, the VSWR values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<VSWR> *RST: 1.15

Example:

CALC:UNC:MATC:SOUR:CAL 1.4
Defines a VSWR of 1.4.

Manual operation: See ["Output Match"](#) on page 71

CALCulate<n>:UNCertainty:MATCh:SOURce:CALibration:RL <ReturnLoss>

Defines the return loss at the calibration noise source output.

Is available when [\[SENSe:\]CORRection:ENR:COMMon](#) and [CALCulate<n>:UNCertainty:COMMon](#) are off.

If a smart noise source is used, the return loss values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<ReturnLoss> *RST: 23.13 dB
Default unit: DB

Example:

CALC:UNC:MATC:SOUR:CAL:RL 20DB
Defines a return loss of 20 dB.

Manual operation: See ["Output Match"](#) on page 71

CALCulate<n>:UNCertainty:MATCh:SOURce:RL <ReturnLoss>

Defines the return loss at the noise source output.

If the noise sources during calibration and measurement are different, the command defines the uncertainty of the measurement noise source.

If a smart noise source is used, the return loss values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<ReturnLoss> *RST: 23.13 dB
Default unit: DB

Example:

CALC:UNC:MATC:SOUR:RL 20DB
Defines a return loss of 20 dB.

Manual operation: See "Output Match" on page 71

CALCulate<n>:UNCertainty:MATCh:SOURce[:VSWR] <VSWR>

Defines the VSWR at the noise source output.

If the noise sources during calibration and measurement are different, the command defines the uncertainty of the measurement noise source.

If a smart noise source is used, the VSWR values defined in the SNS table are used.

Suffix:

<n> 1..n

Parameters:

<VSWR> *RST: 1.15

Example:

CALC:UNC:MATC:SOUR 1.4
Defines a VSWR of 1.4.

CALCulate<n>:UNCertainty:PREamp:GAIN <Gain>

Define the "gain" of an external preamplifier that may be part of the test setup.

Suffix:

<n> 1..n

Parameters:

<Gain> **Gain of the preamplifier.**
Refer to the specifications document of the preamplifier to determine its "gain".
*RST: 20 dB
Default unit: DB

Example:

CALC:UNC:PRE:GAIN 15DB
Defines a gain of 15 dB.

Manual operation: See ["Preamplifier Gain \(PA Gain\)"](#) on page 74

CALCulate<n>:UNCertainty:PREamp:NOISe <NoiseLevel>

Defines the noise level of an external preamplifier that may be part of the test setup.

Suffix:

<n> 1..n

Parameters:

<NoiseLevel> Noise level of the preamplifier.
Refer to the specifications document of the preamplifier to determine its noise level.

*RST: 5 dB

Default unit: DB

Example:

CALC:UNC:PRE:NOIS 10DB

Defines a noise level of 10 dB.

Manual operation: See ["Preamplifier noise figure \(PA NF\)"](#) on page 74

CALCulate<n>:UNCertainty:PREamp:STATe <State>

Includes or excludes an external preamplifier from the uncertainty calculation.

If the test setup uses an external preamplifier, you also have to define its "noise figure" and "gain" values.

Suffix:

<n> 1..n

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example:

CALC:UNC:PRE:STAT ON

Turns the preamplifier on.

Manual operation: See ["External Preamplifier \(Ext PA\)"](#) on page 73

CALCulate<n>:UNCertainty[:RESult]?

Queries the uncertainty of "noise figure" results.

Suffix:

<n> 1..n

Return values:

<Uncertainty> Measurement uncertainty in dB.

Example:

CALC:UNC?

Queries the uncertainty.

Usage:

Query only

Manual operation: See ["Use Measurement Values"](#) on page 72

CALCulate<n>:UNCertainty:SANalyzer:GAIN:UNCertainty? <Uncertainty>

Queries the uncertainty value of the spectrum analyzer's internal "gain".

Suffix:

<n> 1..n

Query parameters:

<Uncertainty> "Gain" uncertainty of the spectrum analyzer in dB.
Default unit: DB

Example: CALC:UNC:SAN:GAIN:UNC?
Queries the "gain" uncertainty.

CALCulate<n>:UNCertainty:SANalyzer:NOISe:UNCertainty? <Uncertainty>

Queries the uncertainty value of the spectrum analyzer's internal noise.

Suffix:

<n> 1..n

Query parameters:

<Uncertainty> "Noise figure" uncertainty of the spectrum analyzer in dB.
Default unit: DB

Example: CALC:UNC:SAN:NOIS:UNC?
Queries the "noise figure" uncertainty.

7.13 Performing measurements

The following commands are necessary to perform "noise figure" measurements.

Example: perform calibration and subsequent single sweep measurement

```
//Perform calibration:
CONF:CORR
INIT;*OPC?
//Perform single sweep measurement and use 2nd stage correction:
CORR:STAT ON
CONF:LIST:SING
INIT
```



You can also perform a sequence of measurements using the Sequencer (see ["Multiple Channels and Sequencer Function"](#) on page 10).

ABORt.....	161
INITiate<n>:CONTInuous.....	161
INITiate<n>[:IMMEDIATE].....	162
INITiate:SEQuencer:ABORt.....	162
INITiate:SEQuencer:IMMEDIATE.....	163
INITiate:SEQuencer:MODE.....	163
[SENSe:]CONFigure:CONTRol.....	163
[SENSe:]CONFigure:MEASurement.....	164
SYSTem:SEQuencer.....	164

ABORt

Aborts the measurement in the current channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the *OPC? or *WAI command after ABOR and before the next command.

For details on overlapping execution see [Remote control via SCPI](#).

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FSV/A is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FSV/A on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** viClear()

Now you can send the ABORt command on the remote channel performing the measurement.

Example: ABOR; :INIT:IMM
Aborts the current measurement and immediately starts a new one.

Example: ABOR; *WAI
 INIT:IMM
Aborts the current measurement and starts a new one once abortion has been completed.

Usage: Event

INITiate<n>:CONTInuous <State>

Controls the sweep mode for an individual channel.

Note that in single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

For details on synchronization see [Remote control via SCPI](#).

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

Continuous sweep

OFF | 0

Single sweep

*RST: 1 (some applications can differ)

Example:

INIT:CONT OFF

Switches the sweep mode to single sweep.

INIT:CONT ON

Switches the sweep mode to continuous sweep.

Manual operation: See "[Continuous Sweep / Run Cont](#)" on page 75

INITiate<n>[:IMMEDIATE]

Starts a (single) new measurement.

You can synchronize to the end of the measurement with *OPC, *OPC? or *WAI.

For details on synchronization see [Remote control via SCPI](#).

Suffix:

<n> irrelevant

Usage:

Asynchronous command

Manual operation: See "[Tuning Mode](#)" on page 45
See "[Single Sweep / Run Single](#)" on page 76
See "[Calibrate](#)" on page 76

INITiate:SEQuencer:ABORt

Stops the currently active sequence of measurements.

You can start a new sequence any time using [INITiate:SEQuencer:IMMEDIATE](#) on page 163.

Usage:

Event

INITiate:SEQuencer:IMMediate

Starts a new sequence of measurements by the Sequencer.

Before this command can be executed, the Sequencer must be activated (see [SYSTem:SEQuencer](#) on page 164).

Example:

```
SYST:SEQ ON
Activates the Sequencer.
INIT:SEQ:MODE SING
Sets single sequence mode so each active measurement is performed once.
INIT:SEQ:IMM
Starts the sequential measurements.
```

INITiate:SEQuencer:MODE <Mode>

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

Note: To synchronize to the end of a measurement sequence using *OPC, *OPC? or *WAI, use `SINGLE` Sequencer mode.

Parameters:

<Mode>

SINGLE

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

CONTInuous

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

*RST: CONTInuous

[SENSe:]CONFigure:CONTRol <Mode>

Selects the measurement mode for the "Level (Hot)" and "Level (Cold)" measurements.

Note that selecting a noise source with resistor characteristics with [\[SENSe:\]CORRection:ENR:CALibration:TYPE](#) or [\[SENSe:\]CORRection:ENR\[:MEASurement\]:TYPE](#) automatically selects manual measurement mode.

Parameters:

<Mode>

AUTO | MANual

AUTO

Performs the "Level (Hot)" and "Level (Cold)" measurement in one step.

MANual

Performs the "Level (Hot)" and "Level (Cold)" measurement in two separate steps.

Example:

```
CONF:CONT AUTO
```

Selects the automatic measurement mode.

Manual operation: See ["Meas Mode \(Auto Manual\)"](#) on page 77

[SENSe:]CONFigure:MEASurement <Measurement>

Selects the type of power measurement to perform next.

The command is available for manual measurements (see [\[SENSe:\]CONFigure:CONTrol](#)).

Parameters:

<Measurement> HOT | COLD

COLD

Performs the "Level (Cold)" measurement next.

HOT

Performs the "Level (Hot)" measurement next.

Example:

```
CONF:CONT MAN
```

```
CONF:MEAS HOT
```

Performs the "Level (Hot)" measurement.

Manual operation: See ["Meas Mode \(Auto Manual\)"](#) on page 77

SYSTem:SEQuencer <State>

Turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSV/A User Manual.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

The Sequencer is activated and a sequential measurement is started immediately.

OFF | 0

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.

```
*RST: 0
```

Example:

```

SYST:SEQ ON
Activates the Sequencer.
INIT:SEQ:MODE SING
Sets single Sequencer mode so each active measurement is
performed once.
INIT:SEQ:IMM
Starts the sequential measurements.
SYST:SEQ OFF

```

7.14 Configuring the inputs and outputs

- [Radio frequency \(RF\) input](#)..... 165
- [External generator](#)..... 167

7.14.1 Radio frequency (RF) input

INPut:COUPling	165
INPut:IMPedance	165
INPut:FILTer:HPASs[:STATe]	166
INPut:FILTer:YIG[:STATe]	166
INPut:DPATh	166

INPut:COUPling <CouplingType>

Selects the coupling type of the RF input.

Parameters:

<CouplingType> AC | DC

AC
AC coupling

DC
DC coupling

*RST: AC

Example: INP:COUP DC

Manual operation: See "[Input Coupling](#)" on page 77

INPut:IMPedance <Impedance>

Selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

Parameters:

<Impedance> 50 | 75

*RST: 50 Ω

Default unit: OHM

Example: `INP:IMP 75`

Manual operation: See "[Impedance](#)" on page 78

INPut:FILTer:HPASs[:STATe] <State>

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the R&S FSV/A to measure the harmonics for a DUT, for example.

Requires an additional high-pass filter hardware option.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

Parameters:

<State> `ON | OFF | 0 | 1`
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: `0`

Example: `INP:FILT:HPAS ON`
 Turns on the filter.

Manual operation: See "[High Pass Filter 1 to 3 GHz](#)" on page 78

INPut:FILTer:YIG[:STATe] <State>

Enables or disables the YIG filter.

Parameters:

<State> `ON | OFF | 0 | 1`

Example: `INP:FILT:YIG OFF`
 Deactivates the YIG-preselector.

Manual operation: See "[YIG-Preselector](#)" on page 78

INPut:DPATH <DirectPath>

Enables or disables the use of the direct path for frequencies close to 0 Hz.

Parameters:

<DirectPath> `AUTO | OFF`
 AUTO | 1
 (Default) the direct path is used automatically for frequencies close to 0 Hz.
 OFF | 0
 The analog mixer path is always used.

Example: INP:DPAT OFF

Manual operation: See "Direct Path" on page 78

7.14.2 External generator

SOURce:EXTernal:FREQUency[:FACTor]:DENominator.....	167
SOURce:EXTernal:FREQUency[:FACTor]:NUMerator.....	167
SOURce:EXTernal:FREQUency:OFFSet<of>.....	167
SOURce<si>:EXTernal<gen>:POWer[:LEVel].....	167
SOURce<si>:EXTernal<gen>:ROSCillator[:SOURce].....	168
SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTerface.....	168
SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE.....	168
SYSTem:COMMunicate:TCPip:RDEvice:GENerator<gen>:ADDRess.....	169
SYSTem:CONFigure:GENerator:CONTRol:STATe.....	169
SYSTem:CONFigure:GENerator:INITialise:AUTO.....	169
SYSTem:CONFigure:GENerator:INITialise[:IMMEDIATE].....	169
SYSTem:CONFigure:GENerator:SWITCh:AUTO.....	170

SOURce:EXTernal:FREQUency[:FACTor]:DENominator <Denominator>

SOURce:EXTernal:FREQUency[:FACTor]:NUMerator <Numerator>

SOURce:EXTernal:FREQUency:OFFSet<of> <Denominator>

Suffix:

<of> 1..n

Parameters:

<Denominator> Default unit: HZ

Manual operation: See "Frequency Coupling" on page 82

SOURce<si>:EXTernal<gen>:POWer[:LEVel] <Level>

Sets the output power of the selected generator.

Suffix:

<si> irrelevant

<gen>

Parameters:

<Level> <numeric value>
 *RST: -20 dBm
 Default unit: DBM

Example: //Define generator output level

SOUR:EXT:POW -30dBm

Manual operation: See "Source Power" on page 82

SOURce<si>:EXTernal<gen>:ROSCillator[:SOURce] <Source>

Controls selection of the reference oscillator for the external generator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Suffix:

<si> irrelevant

<gen> irrelevant

Parameters:

<Source>

INTernal

Uses the internal reference.

EXTernal

Uses the external reference; if none is available, an error flag is displayed in the status bar.

*RST: INT

Example:

```
//Select an external reference oscillator
SOUR:EXT:ROSC EXT
```

Manual operation: See "[Reference](#)" on page 80

SYSTem:COMMunicate:RDEVice:GENerator<gen>:INTerface <Type>

Defines the interface used for the connection to the external generator.

Suffix:

<gen>

Parameters:

<Type>

TCPip**Example:**

```
SYST:COMM:RDEV:GEN:INT TCP
```

Manual operation: See "[Interface](#)" on page 80

SYSTem:COMMunicate:RDEVice:GENerator<gen>:TYPE <Type>

Selects the type of external generator.

For a list of the available generator types, see the specifications document.

Suffix:

<gen>

Parameters:

<Name>

<Generator name as string value>

*RST: SMU02

Example:

```
//Select an external generator
SYST:COMM:RDEV:GEN:TYPE 'SMW06'
```

Manual operation: See "[Generator Type](#)" on page 80

SYSTem:COMMunicate:TCPIp:RDEvice:GENerator<gen>:ADDRess <Address>

Configures the TCP/IP address for the external generator.

Suffix:

<gen>

Parameters:

<Address> TCP/IP address between 0.0.0.0 and 0.255.255.255
*RST: 0.0.0.0

Example: SYST:COMM:TCP:RDEV:GEN:ADDR 130.094.122.195

Manual operation: See "[TCPIP Address / Computer Name](#)" on page 80

SYSTem:CONFigure:GENerator:CONTRol:STATe <State>

Turns automatic control of an external generator on and off.

The command is available with option R&S FSV/A-B10.

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Example: SYST:CONF:GEN:CONT:STAT ON
Turns on automatic generator control.

Manual operation: See "[Automatic Control](#)" on page 81

SYSTem:CONFigure:GENerator:INITialise:AUTO <State>

Turns automatic connection to the generator on and off.

If on, the application automatically configures the generator before each measurement and turns on its RF output. Note that you have to establish a connection to the generator before you can perform the measurement.

The command is available with option R&S FSV/A-B10.

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Example: SYST:CONF:GEN:INIT:AUTO ON
Turns automatic generator configuration on.

Manual operation: See "[Init Before Meas](#)" on page 81

SYSTem:CONFigure:GENerator:INITialise[:IMMEDIATE]

Establishes a connection to the external generator.

When you send the command, the application configures the generator once and turns on its RF output. Note that you have to establish a connection to the generator before you can perform the measurement.

The command is available with option R&S FSV/A-B10.

Usage: Event

Manual operation: See ["Init External Generator"](#) on page 83

SYSTem:CONFigure:GENerator:SWITCh:AUTO <State>

Parameters:

<State>

Manual operation: See ["Auto Switch Off"](#) on page 82

7.15 Configuring the display

The following commands are necessary to configure and scale the result displays.

DISPlay[:WINDow<n>]:TABLe:ITEM	170
DISPlay[:WINDow<n>]:TRACe<t>:SYMBOLs	171
DISPlay[:WINDow<n>]:TRACe<t>:UNCertainty	171
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]	171
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTom	172
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO	172
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:TOP	173

DISPlay[:WINDow<n>]:TABLe:ITEM <Items>, <State>

Selects the items displayed in the Result Table.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<Items> NOISe | GAIN | TEMPerature | YFACTor | ENR | PHOT |
PCOLd | CYFactor | CPHot | CPCold | DPHot | DPCold |
NUNCertainty

For a list of possible parameter values (table items) see the parameter description of the [TRACe<n>\[:DATA\]?](#) command.

<State> ON | OFF | 1 | 0

Example:

DISP:WIND2:TABL:ITEM NOIS,OFF

Removes the "Noise" result from the "Result Table".

Manual operation: See ["Result Table"](#) on page 22

DISPlay[:WINDow<n>]:TRACe<t>:SYMBols <State>

Turns symbols that represent the measurement points on a trace on and off.

Suffix:

<n> 1..n
Window

<t> 1..n

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Example: DISP:WIND2:TRAC:SYMB ON
Switches on the display of symbols in window 2..

Manual operation: See "Symbols" on page 86

DISPlay[:WINDow<n>]:TRACe<t>:UNCertainty <State>

If enabled, an additional trace is displayed indicating the measured trace values \pm the uncertainty values determined by the uncertainty calculator. This result is only useful for "noise figure" measurements.

Suffix:

<n> 1..n
Window

<t> 1..n
Trace

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on
*RST: 0

Example: DISP:WIND:TRAC:UNC ON

Manual operation: See "Uncertainty" on page 86

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe] <Frequency>

Selects the type of frequency displayed on the x-axis.

Suffix:

<n> 1..n
Window

<t> 1..n

Parameters:

<Frequency>

RF | IF | LO

IF

Intermediary frequency, e.g. for measurements on frequency converting DUTs.

RF

Radio frequency.

*RST: RF

Example:

CONF:MODE:DUT DOWN

The DUT converts the input frequency to a lower output frequency.

DISP:TRAC:X RF

Shows the RF frequency on the x-axis.

Manual operation: See "[X-Axis](#)" on page 86

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:BOTTom <Level>

Defines the bottom value of the y-axis.

Suffix:

<n> 1..n
[Window](#)

<t> 1..n
[Trace](#)

Parameters:

<Level>

The value ranges depend on the result display.

Noise figure, Gain

-75 dB to 75 dB

Temperature

-999990000 K to 999990000 K

all others

-200 dB to 200 dB

Default unit: DB

Example:

DISP:WIND2:TRAC:Y:SCAL:AUTO OFF

DISP:WIND2:TRAC:Y:BOT

Manual operation: See "[Auto Scale / Min / Max](#)" on page 85

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO <State>

Turns automatic scaling of the y-axis on and off.

Suffix:

<n> 1..n
[Window](#)

<t> 1..n

Parameters:

<State> ON | OFF | 1 | 0
*RST: 1

Example: DISP:WIND2:TRAC:Y:AUTO ON
Turns on automatic scaling for measurement window 2.

Manual operation: See "Auto Scale / Min / Max" on page 85

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:TOP <Level>

Defines the top value of the y-axis.

Suffix:

<n> 1..n
Window

<t> 1..n
Trace

Parameters:

<Level> The value ranges depend on the result display.

Noise figure, Gain

-75 dB to 75 dB

Temperature

-999990000 K to 999990000 K

all others

-200 dB to 200 dB

Default unit: DB

Example: DISP:WIND2:TRAC:Y:SCAL:AUTO OFF
DISP:WIND2:TRAC:Y:TOP

Manual operation: See "Auto Scale / Min / Max" on page 85

7.16 Working with traces

The following commands are necessary to define trace characteristics.

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE.....	174
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe].....	174
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture.....	175
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing[:STATe].....	175
FORMat[:DATA].....	175
FORMat:DEXPort:DSEParator.....	176
FORMat:DEXPort:FORMat.....	177
FORMat:DEXPort:HEADer.....	177

FORMat:DEXPort:TRACes.....	177
MMEMory:STORe<n>:TRACe.....	177
TRACe<n>:COPY.....	178

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE <Mode>

Selects the trace mode. If necessary, the selected trace is also activated.

Suffix:

<n>	Window
<w>	subwindow Not supported by all applications
<t>	Trace

Parameters:

<Mode>	BLANK VIEW WRITe *RST: Trace 1: WRITe, Trace 2-4: BLANK
--------	--

Example:

```
INIT:CONT OFF
Switching to single sweep mode.
SWE:COUN 16
Sets the number of measurements to 16.
DISP:TRAC3:MODE WRIT
Selects clear/write mode for trace 3.
INIT;*WAI
Starts the measurement and waits for the end of the measurement.
```

Manual operation: See "Traces" on page 88

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe] <State>

Turns a trace on and off.

The measurement continues in the background.

Suffix:

<n>	Window
<w>	subwindow Not supported by all applications
<t>	Trace

Parameters:

<State>	ON OFF 0 1 OFF 0 Switches the function off ON 1 Switches the function on
---------	--

Example:

```
DISP:TRAC3 ON
```

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture
 <Aperture>

Defines the degree (aperture) of the trace smoothing, if [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:SMOothing\[:STATE\]](#) TRUE.

Suffix:

<n> [Window](#)
 <w> subwindow
 <t> [Trace](#)

Parameters:

<Aperture> Range: 1 to 50
 *RST: 2
 Default unit: PCT

Example:

DISP3:TRAC2:SMO:APER 5
 Defines an aperture of 5% for trace 2 in window 3

Manual operation: See "[Smoothing](#)" on page 88

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing[:STATE] <State>

Turns trace smoothing for a particular trace on and off.

If enabled, the trace is smoothed by the value specified using [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:SMOothing:APERture](#) on page 175.

Suffix:

<n> [Window](#)
 <w> subwindow
 <t> [Trace](#)

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on

Example:

DISP3:TRAC2:SMO ON
 Turns on trace smoothing for trace 2 in window 3

Manual operation: See "[Smoothing](#)" on page 88

FORMat[:DATA] <Format>[, <BitLength>]

Selects the data format that is used for transmission of trace data from the R&S FSV/A to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSV/A. The R&S FSV/A automatically recognizes the data it receives, regardless of the format.

Parameters:

<Format>

ASCIi

ASCIi format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats can be.

REAL

Floating-point numbers (according to IEEE 754) in the "definite length block format".

<BitLength>

Length in bits for floating-point results

16

16-bit floating-point numbers.

Compared to `REAL, 32` format, half as many numbers are returned.

32

32-bit floating-point numbers

For I/Q data, 8 bytes per sample are returned for this format setting.

64

64-bit floating-point numbers

Compared to `REAL, 32` format, twice as many numbers are returned.

Example:

```
FORM REAL, 32
```

FORMat:DEXPort:DSEParator <Separator>

Selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator>

POINT | COMMa

COMMa

Uses a comma as decimal separator, e.g. `4,05`.

POINT

Uses a point as decimal separator, e.g. `4.05`.

*RST: *RST has no effect on the decimal separator.
Default is POINT.

Example:

```
FORM:DEXP:DSEP POIN
```

Sets the decimal point as separator.

Manual operation:

See "[Decimal Separator](#)" on page 90

FORMat:DEXPort:FORMat <FileFormat>

Determines the format of the ASCII file to be imported or exported. Depending on the external program that creates the data file or evaluates it, a comma-separated list (CSV) or a plain data format (DAT) file is required.

Parameters:

<FileFormat> CSV | DAT
 *RST: DAT

Example: FORM:DEXP:FORM CSV

Manual operation: See "[File Type](#)" on page 91

FORMat:DEXPort:HEADer <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

Parameters:

<State> ON | OFF | 0 | 1
 *RST: 1

Manual operation: See "[Include Instrument & Measurement Settings](#)" on page 90

FORMat:DEXPort:TRACes <Selection>

Selects the data to be included in a data export file (see [MMEMory:STORe<n>:TRACe](#) on page 177).

Parameters:

<Selection> SINGle | ALL

SINGle

Only a single trace is selected for export, namely the one specified by the [MMEMory:STORe<n>:TRACe](#) command.

ALL

Selects all active traces and result tables (e.g. "Result Summary", marker peak list etc.) in the current application for export to an ASCII file.

The <trace> parameter for the [MMEMory:STORe<n>:TRACe](#) command is ignored.

*RST: SINGle

Manual operation: See "[Export all Traces and all Table Results](#)" on page 90

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

Exports trace data from the specified window to an ASCII file.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Suffix:

<n> [Window](#)

Parameters:

<Trace> Number of the trace to be stored

<FileName> String containing the path and name of the target file.

Example:

```
M MEM:STOR1:TRAC 1, 'C:\TEST.ASC'
```

Stores trace 1 from window 1 in the file TEST.ASC.

Manual operation:

See ["Export Trace to ASCII File"](#) on page 90

See ["Export Trace to ASCII File"](#) on page 92

TRACe<n>:COPY <TraceNumber>, <TraceNumber>

Copies data from one trace to another.

Suffix:

<n> [Window](#)

Parameters:

<TraceNumber> **TRACE1 | TRACE2 | TRACE3 | TRACE4**

The first parameter is the destination trace, the second parameter is the source.

(Note the 'e' in the parameter is required!)

Example:

```
TRAC: COPY TRACE1, TRACE2
```

Copies the data from trace 2 to trace 1.

Manual operation:

See ["Copy Trace"](#) on page 89

7.17 Working with limit lines

The following commands are necessary to set up limit lines and checks.

When configuring limit lines for the "noise figure" application via remote control, you have to send some commands in a defined order.

1. Select the limit line you want to configure by name or create a new limit line name.
2. Select the result type you want to apply the limit line to.

The application automatically selects the unit and scale to make the line compatible to the result type.

3. Define the horizontal data points of the limit line.
4. Define the vertical data points of the limit line. Depending on the command syntax you are using, the shape also defines if the limit line is an upper or lower limit line (CALCulate:LIMit:UPPer:... or CALCulate:LIMit:LOWer:...).

Example: Configure an upper limit line for the Noise Figure result type

```
//Select or create the limit line by name.
CALC:LIM:NAME 'NoiseFigure'
//Comment on the limit line.
CALC:LIM:COMM 'Limit line to test noise figure results'
//Select the result type (here: Noise Figure) to apply the limit line to.
CALC:LIM:TYPE NOIS
//Define the horizontal data points of the limit line.
CALC:LIM:CONT 100MHZ,850MHZ
//Shift the limit line 50 MHz to the left.
CALC:LIM:CONT:SHIF -50MHZ
//Define the vertical data points of an (upper) limit line.
//The unit is fix according to the result type you have selected.
CALC:LIM:UPP 10,10
//Shift the limit line 5 dB down.
CALC:LIM:UPP:SHIF -5
//Turn the limit line on.
CALC:LIM:UPP:STAT ON
//Select the trace to check.
CALC:LIM:TRAC 1
//Turn on the limit check.
CALC:LIM:STAT ON
//Query the limit check results.
CALC:LIM:FAIL?
```

- [Defining general characteristics of a limit line](#)..... 179
- [Defining horizontal data points](#)..... 181
- [Controlling lower limit lines](#)..... 182
- [Controlling upper limit lines](#)..... 183
- [Managing limit lines](#)..... 184
- [Controlling limit checks](#)..... 185

7.17.1 Defining general characteristics of a limit line

CALCulate<n>:LIMit:COMMENT	180
CALCulate<n>:LIMit:NAME	180
CALCulate<n>:LIMit:TYPE	180

CALCulate<n>:LIMit:COMMeNt <Comment>

Defines a comment for a limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Comment> String containing the description of the limit line.

Manual operation: See "[Comment](#)" on page 100

CALCulate<n>:LIMit:NAME <Name>

Selects a limit line that already exists or defines a name for a new limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Name> String containing the limit line name.

*RST: REM1 to REM8 for lines 1 to 8

Manual operation: See "[Name](#)" on page 100

CALCulate<n>:LIMit:TYPE <Result>

Configures a limit line for a particular result type.

Suffix:

<n> 1..n

 1..n
[Limit line](#)

Parameters:

<Result> NOISe | GAIN | TEMPerature | YFACTOR | ENR | PHOT | PCOLd

GAIN

Assigns the limit line to "Gain" results.

NOISe

Assigns the limit line to "Noise Figure" results.

PCOLd

Assigns the limit line to "Level (cold)" results.

PHOT

Assigns the limit line to "Level (hot)" results.

TEMPerature

Assigns the limit line to "Temperature" results.

YFACTOR

Assigns the limit line to "Y-Factor" results.

Example: `CALC:LIM2:TYPE GAIN`
 Assigns limit line 2 to the "gain" result display.

7.17.2 Defining horizontal data points

Note that the number of data points on the horizontal axis should be the same as the number of data points on the vertical axis. Otherwise the limit line may take on an unintended shape.

Example: Number of vertical data points < number of horizontal data points

`CALC:LIM:CONT 100MHZ,200MHZ,300MHZ,400MHZ,500MHZ`

`CALC:LIM:UPP 0,5,0`

⇒ the application dumps 400 and 500 MHz.

Example: Number of vertical data points > number of horizontal data points

`CALC:LIM:CONT 100MHZ,200MHZ,300MHZ,400MHZ,500MHZ`

`CALC:LIM:UPP 0,5,0,5,0,5,0`

⇒ the application adds new horizontal data points (500.00000100 MHz and 500.00000200 MHz).

`CALCulate<n>:LIMit:CONTrol[:DATA]`..... 181

`CALCulate<n>:LIMit:CONTrol:SHIFt`..... 181

`CALCulate<n>:LIMit:CONTrol[:DATA]` <LimitLinePoints>...

Defines the horizontal definition points of a limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<LimitLinePoints> Variable number of x-axis values.

Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:`

`LIMit:LOWer[:DATA]` or `CALCulate<n>:LIMit:UPPPer[:DATA]`. If not, the R&S FSV/A either adds missing values or ignores surplus values.

*RST: -

Default unit: HZ

Manual operation: See "[Data Points](#)" on page 101

`CALCulate<n>:LIMit:CONTrol:SHIFt` <Distance>

Moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Distance> Numeric value.
The unit depends on the scale of the x-axis.
Default unit: HZ

Manual operation: See "[Shift x](#)" on page 101

7.17.3 Controlling lower limit lines

CALCulate<n>:LIMit:LOWer[:DATA]	182
CALCulate<n>:LIMit:LOWer:SHIFt	182
CALCulate<n>:LIMit:LOWer:STATe	183

CALCulate<n>:LIMit:LOWer[:DATA] <LimitLinePoints>...

Defines the vertical definition points of a lower limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<LimitLinePoints> Variable number of level values.
Note that the number of vertical values has to be the same as the number of horizontal values set with [CALCulate<n>:LIMit:CONTRol\[:DATA\]](#). If not, the R&S FSV/A either adds missing values or ignores surplus values.
*RST: Limit line state is OFF
Default unit: DBM

Manual operation: See "[Data Points](#)" on page 101

CALCulate<n>:LIMit:LOWer:SHIFt <Distance>

Moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Distance> Defines the distance that the limit line moves.
Default unit: DB

Manual operation: See "Shift y" on page 101

CALCulate<n>:LIMit:LOWer:STATe <State>

Turns a lower limit line on and off.

Before you can use the command, you have to select a limit line with [CALCulate<n>:LIMit:NAME](#) on page 180.

Suffix:

<n> irrelevant
 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on

Manual operation: See "Visibility" on page 98

7.17.4 Controlling upper limit lines

CALCulate<n>:LIMit:UPPer[:DATA]	183
CALCulate<n>:LIMit:UPPer:SHIFt	184
CALCulate<n>:LIMit:UPPer:STATe	184

CALCulate<n>:LIMit:UPPer[:DATA] <LimitLinePoints>...

Defines the vertical definition points of an upper limit line.

Suffix:

<n> irrelevant
 [Limit line](#)

Parameters:

<LimitLinePoints> Variable number of level values.
Note that the number of vertical values has to be the same as the number of horizontal values set with [CALCulate<n>:LIMit:CONTRol\[:DATA\]](#). If not, the R&S FSV/A either adds missing values or ignores surplus values.
*RST: Limit line state is OFF
Default unit: DBM

Manual operation: See "Data Points" on page 101

CALCulate<n>:LIMit:UPPer:SHIFt <Distance>

Moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Distance> Defines the distance that the limit line moves.

Manual operation: See "[Shift y](#)" on page 101

CALCulate<n>:LIMit:UPPer:STATe <State>

Turns an upper limit line on and off.

Before you can use the command, you have to select a limit line with [CALCulate<n>:LIMit:NAME](#) on page 180.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Manual operation: See "[Visibility](#)" on page 98

7.17.5 Managing limit lines

CALCulate<n>:LIMit:ACTive?	184
CALCulate<n>:LIMit:COPY	185
CALCulate<n>:LIMit:DELeTe	185

CALCulate<n>:LIMit:ACTive?

Queries the names of *all* active limit lines.

Suffix:

<n> irrelevant

 irrelevant

Return values:

<LimitLines> String containing the names of all active limit lines in alphabetical order.

Example:

CALC:LIM:ACT?

Queries the names of all active limit lines.

Usage:

Query only

Manual operation: See "[Visibility](#)" on page 98

CALCulate<n>:LIMit:COPY <Line>

Copies a limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Line> **1 to 8**
number of the new limit line

<name>

String containing the name of the limit line.

Example:

CALC:LIM1:COPY 2

Copies limit line 1 to line 2.

CALC:LIM1:COPY 'FM2'

Copies limit line 1 to a new line named FM2.

Manual operation: See "[Copy Line](#)" on page 99

CALCulate<n>:LIMit:DELeTe

Deletes a limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

Manual operation: See "[Delete Line](#)" on page 99

7.17.6 Controlling limit checks

CALCulate<n>:LIMit:CLEar[:IMMEDIATE]	186
CALCulate<n>:LIMit:FAIL?	186
CALCulate<n>:LIMit:STATe	186
CALCulate<n>:LIMit:TRACe<t>	187
CALCulate<n>:LIMit:TRACe<t>:CHECK	187

CALCulate<n>:LIMit:CLEar[:IMMEDIATE]

Deletes the result of the current limit check.

The command works on *all* limit lines in *all* measurement windows at the same time.

Suffix:

<n> [Window](#)

 irrelevant

Example:

CALC:LIM:CLE

Deletes the result of the limit check.

CALCulate<n>:LIMit:FAIL?

Queries the result of a limit check in the specified window.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 161.

Suffix:

<n> [Window](#)

 [Limit line](#)

Return values:

<Result> **0**
 PASS
 1
 FAIL

Example:

INIT;*WAI

Starts a new sweep and waits for its end.

CALC2:LIM3:FAIL?

Queries the result of the check for limit line 3 in window 2.

Usage:

Query only

CALCulate<n>:LIMit:STATe <State>

Turns the limit check for a specific limit line on and off.

To query the limit check result, use [CALCulate<n>:LIMit:FAIL?](#).

Note that a new command exists to activate the limit check and define the trace to be checked in one step (see [CALCulate<n>:LIMit:TRACe<t>:CHECK](#) on page 187).

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: CALC:LIM:STAT ON
 Switches on the limit check for limit line 1.

Manual operation: See "[Disable All Lines](#)" on page 99

CALCulate<n>:LIMit:TRACe<t> <TraceNumber>

Links a limit line to one or more traces.

Note that this command is maintained for compatibility reasons only. Limit lines no longer need to be assigned to a trace explicitly. The trace to be checked can be defined directly (as a suffix) in the new command to activate the limit check (see [CALCulate<n>:LIMit:TRACe<t>:CHECK](#) on page 187).

Suffix:

<n> [Window](#)
 [Limit line](#)
 <t> irrelevant

Parameters:

<TraceNumber> 1 to 4
 *RST: 1

Example: CALC:LIM2:TRAC 3
 Assigns limit line 2 to trace 3.

CALCulate<n>:LIMit:TRACe<t>:CHECK <State>

Turns the limit check for a specific trace on and off.

To query the limit check result, use [CALCulate<n>:LIMit:FAIL?](#).

Note that this command replaces the two commands from previous signal and spectrum analyzers (which are still supported, however):

- [CALCulate<n>:LIMit:TRACe<t>](#) on page 187
- [CALCulate<n>:LIMit:STATe](#) on page 186

Suffix:

<n> [Window](#)
 [Limit line](#)

<t>	Trace
Parameters:	
<State>	ON OFF 0 1 OFF 0 Switches the function off ON 1 Switches the function on
Example:	CALC:LIM3:TRAC2:CHEC ON Switches on the limit check for limit line 3 on trace 2.
Manual operation:	See "Traces to be Checked" on page 98

7.18 Working with markers

The following commands are necessary to work with markers.

• Using markers.....	188
• Using delta markers.....	191
• Configuring markers.....	194
• Positioning markers.....	194
• Positioning delta markers.....	197

7.18.1 Using markers

Note that the suffix at CALCulate has an effect only if you query the characteristics of a marker. If you set a marker, you can ignore the suffix because the markers are linked to each other over all measurement windows and will always be on the same frequency.

CALCulate<n>:MARKer<m>:AOFF.....	188
CALCulate<n>:MARKer<m>[:STATE].	189
CALCulate<n>:MARKer<m>:TRACe.....	189
CALCulate<n>:MARKer<m>:X.....	189
CALCulate<n>:MARKer<m>:Y?.....	190

CALCulate<n>:MARKer<m>:AOFF

Turns off all markers.

Suffix:

<n>	Window
<m>	Marker

Example: CALC:MARK:AOFF
Switches off all markers.

Manual operation: See "All Markers Off" on page 94

CALCulate<n>:MARKer<m>[:STATe] <State>

Turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: `CALC:MARK3 ON`
 Switches on marker 3.

Manual operation: See "[Marker Type](#)" on page 94

CALCulate<n>:MARKer<m>:TRACe <Trace>

Selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Trace> **1 to 4**
 Trace number the marker is assigned to.

Example: `//Assign marker to trace 1`
`CALC:MARK3:TRAC 2`

CALCulate<n>:MARKer<m>:X <Position>

Moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Note that markers have to be positioned on a discrete frequency that is part of the frequency list. If you set the marker on a frequency not included in the frequency list, the application positions the marker to the nearest frequency in the list (rounding up or down).

Suffix:

<n> Window

<m> Marker

Parameters:<Position> Numeric value that defines the marker position on the x-axis.
The unit depends on the result display.Range: The range depends on the current x-axis range.
Default unit: Hz**Example:**

CALC:MARK2:X 1.7MHz

Positions marker 2 to frequency 1.7 MHz.

CALCulate<n>:MARKer<m>:Y? <Result>

Queries the result at the position of the specified marker.

Suffix:

<n> 1..n

<m> 1..n

Query parameters:

<Result> Selects the result.

CPCold

Queries "Cal level (cold)" results.

CPHot

Queries "Cal level (hot)" results.

CYFactor

Queries calibration "Y-Factor" results.

DPCold

Queries "P Cold" results.

DPHot

Queries "P Hot" results.

GAIN

Queries "Gain" results.

NOISe

Queries "Noise Figure" results.

NUNCertainty

Queries the "Noise Figure" uncertainty results.

PCOLd

Queries "Level (cold)" results.

PHOT

Queries "Level (hot)" results.

TEMPerature

Queries "Temperature" results.

YFACtor

Queries "Y-Factor" results.

Return values:

<Result> Default unit: DBM

Usage: Query only

Manual operation: See "[Marker Table](#)" on page 22

7.18.2 Using delta markers

Note that the suffix at `CALCulate` has an effect only if you query the characteristics of a marker. If you set a marker, you can ignore the suffix because the markers are linked to each other over all measurement windows and will always be on the same frequency.

<code>CALCulate<n>:DELTamarker<m>:AOFF</code>	191
<code>CALCulate<n>:DELTamarker<m>:MREFerence</code>	191
<code>CALCulate<n>:DELTamarker<m>[:STATe]</code>	191
<code>CALCulate<n>:DELTamarker<m>:TRACe</code>	192
<code>CALCulate<n>:DELTamarker<m>:X</code>	192
<code>CALCulate<n>:DELTamarker<m>:Y?</code>	193

`CALCulate<n>:DELTamarker<m>:AOFF`

Turns off *all* delta markers.

Suffix:

<n> [Window](#)

<m> irrelevant

Example:

`CALC:DELT:AOFF`

Turns off all delta markers.

`CALCulate<n>:DELTamarker<m>:MREFerence <Reference>`

Selects a reference marker for a delta marker other than marker 1.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Reference> **1 to 16**

Selects markers 1 to 16 as the reference.

Example:

`CALC:DELT3:MREF 2`

Specifies that the values of delta marker 3 are relative to marker 2.

`CALCulate<n>:DELTamarker<m>[:STATe] <State>`

Turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:DELT2 ON

Turns on delta marker 2.

Manual operation: See "[Marker Type](#)" on page 94

CALCulate<n>:DELTmarker<m>:TRACe <Trace>

Selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Trace> Trace number the marker is assigned to.

Example:

CALC:DELT2:TRAC 2

Positions delta marker 2 on trace 2.

CALCulate<n>:DELTmarker<m>:X <Position>

Moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.

Range: The value range and unit depend on the measurement and scale of the x-axis.

Example: `CALC:DELT:X?`
 Outputs the absolute x-value of delta marker 1.

CALCulate<n>:DELTamarker<m>:Y? <Trace>

Queries the result at the position of the specified delta marker.

Suffix:

<n> 1..n

<m> 1..n

Parameters:

<Trace>

CPCold

Queries "Cal level (cold)" results.

CPHot

Queries "Cal level (hot)" results.

CYFactor

Queries calibration "Y-Factor" results.

DPCold

Queries "P Cold" results.

DPHot

Queries "P Hot" results.

GAIN

Queries "Gain" results.

NOISe

Queries "Noise Figure" results.

NUNCertainty

Queries the "Noise Figure" uncertainty results.

PCOLd

Queries "Level (cold)" results.

PHOT

Queries "Level (hot)" results.

TEMPerature

Queries "Temperature" results.

YFACTOR

Queries "Y-Factor" results.

Return values:

<Result>

Result at the position of the delta marker.

The unit is variable and depends on the one you have currently set.

Default unit: DBM

Usage:

Query only

Manual operation: See "[Marker Table](#)" on page 22

7.18.3 Configuring markers

DISPlay[:WINDow<n>]:MINFo[:STATe].....	194
DISPlay[:WINDow<n>]:MTABLE.....	194

DISPlay[:WINDow<n>]:MINFo[:STATe] <State>

Turns the marker information in all diagrams on and off.

Suffix:

<n> irrelevant

Parameters:

<State> **ON | 1**
Displays the marker information in the diagrams.

OFF | 0
Hides the marker information in the diagrams.

*RST: 1

Example: DISP:MINF OFF
Hides the marker information.

Manual operation: See "[Marker Info](#)" on page 95

DISPlay[:WINDow<n>]:MTABLE <DisplayMode>

Turns the marker table on and off.

Suffix:

<n> irrelevant

Parameters:

<DisplayMode> **ON | 1**
Turns on the marker table.

OFF | 0
Turns off the marker table.

AUTO
Turns on the marker table if 3 or more markers are active.

*RST: AUTO

Example: DISP:MTAB ON
Activates the marker table.

Manual operation: See "[Marker Table Display](#)" on page 95

7.18.4 Positioning markers

If you are using more than one window, the application performs the peak search in the window that you have selected with the suffix at `CALCulate` only. Because the markers are linked, the frequency position of the marker in the other windows is adjusted accordingly, even if it means that the marker is on a peak in the selected window only.

CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	195
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	195
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	195
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	195
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	196
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	196
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	196
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	196

CALCulate<n>:MARKer<m>:MAXimum:LEFT

Moves a marker to the next positive peak.

The search includes only measurement values to the left of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 96

CALCulate<n>:MARKer<m>:MAXimum:NEXT

Moves a marker to the next positive peak.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 96

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

Moves a marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Peak Search](#)" on page 96

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

Moves a marker to the next positive peak.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Peak](#)" on page 96

CALCulate<n>:MARKer<m>:MINimum:NEXT

Moves a marker to the next minimum peak value.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 97

CALCulate<n>:MARKer<m>:MINimum:LEFT

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 97

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

Moves a marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Minimum](#)" on page 96

CALCulate<n>:MARKer<m>:MINimum:RIGHT

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 97

7.18.5 Positioning delta markers

If you are using more than one window, the application performs the peak search in the window that you have selected with the suffix at `CALCulate` only. Because the markers are linked, the frequency position of the marker in the other windows is adjusted accordingly, even if it means that the marker is on a peak in the selected window only.

<code>CALCulate<n>:DELTamarker<m>:MAXimum:LEFT</code>	197
<code>CALCulate<n>:DELTamarker<m>:MAXimum:NEXT</code>	197
<code>CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]</code>	197
<code>CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT</code>	198
<code>CALCulate<n>:DELTamarker<m>:MINimum:LEFT</code>	198
<code>CALCulate<n>:DELTamarker<m>:MINimum:NEXT</code>	198
<code>CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]</code>	198
<code>CALCulate<n>:DELTamarker<m>:MINimum:RIGHT</code>	199

`CALCulate<n>:DELTamarker<m>:MAXimum:LEFT`

Moves a delta marker to the next positive peak value.

The search includes only measurement values to the left of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 96

`CALCulate<n>:DELTamarker<m>:MAXimum:NEXT`

Moves a marker to the next positive peak value.

Suffix:

<n> 1..n
 [Window](#)

<m> 1..n
 [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 96

`CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]`

Moves a delta marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Peak Search](#)" on page 96

CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT

Moves a delta marker to the next positive peak value on the trace.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 96

CALCulate<n>:DELTaMarker<m>:MINimum:LEFT

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Minimum](#)" on page 97

CALCulate<n>:DELTaMarker<m>:MINimum:NEXT

Moves a marker to the next minimum peak value.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Minimum](#)" on page 97

CALCulate<n>:DELTaMarker<m>:MINimum[:PEAK]

Moves a delta marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Minimum](#)" on page 96

CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Minimum](#)" on page 97

7.19 Using the status register

The status reporting system stores information about the current state of the R&S FSV/A. This includes, for example, information about errors during operation or information about limit checks. The R&S FSV/A stores this information in the status registers and in the error queue. You can query the status register and error queue via IEC bus.

The R&S FSV3-K30 features several status registers that are specific to "noise figure" measurements. This chapter describes the application-specific registers, including the corresponding remote commands.

- [Status registers for noise figure measurements](#).....199

7.19.1 Status registers for noise figure measurements

The figure below shows the status registers of the "noise figure" application.

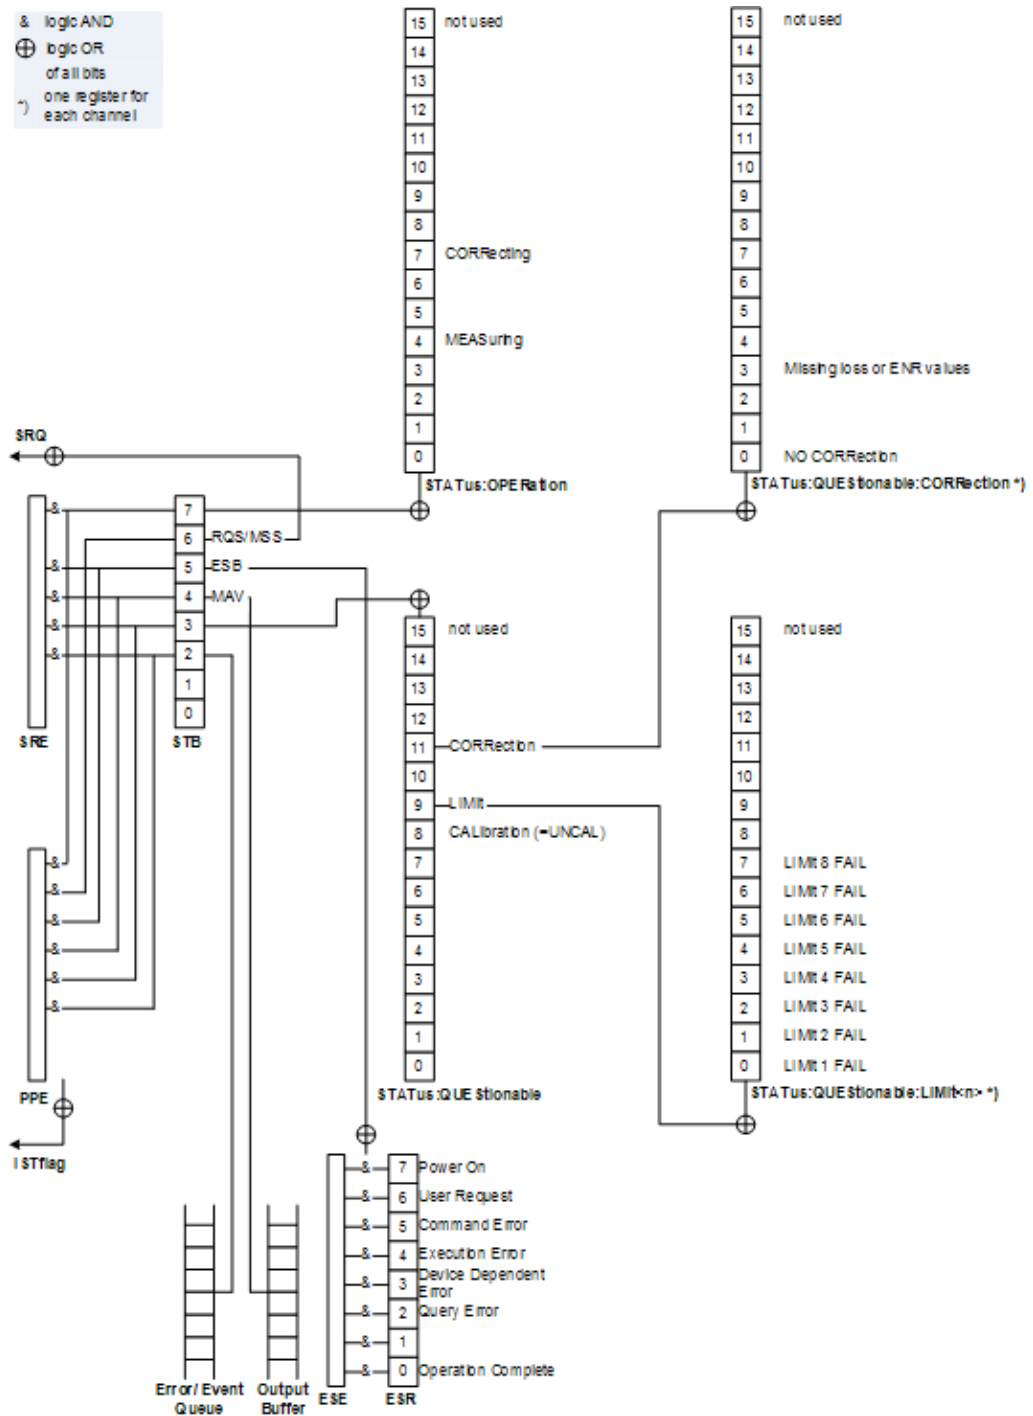


Figure 7-2: Status registers for noise figure measurements

The R&S FSV/A structures the information hierarchically, with the Status Byte register (STB) and the Service Request Enable mask register (SRE) being on the highest level. The STB gets its information from the standard Event Status Register (ESR) and the Event Status Enable mask register (ESE). The STB and ESR are both defined by IEEE 488.2. In addition to the ESR, the STB also gets information from the STATUS:OPERation and STATUS:QUESTIONable registers. These registers are the link to the lower lev-

els of the status register and are defined by SCPI. They contain information about the state of the instrument.

For a more comprehensive description of the status registers not mentioned here, and status register functionality in general, see the manual of the base unit.

7.19.1.1 STATus:OPERation register

The STATus:OPERation register contains information on current activities of the R&S FSV/A. It also contains information on activities that have been executed since the last read out.

Bit no	Meaning
0 to 3	Unavailable for "noise figure" measurements.
4	MEASuring This bit is set if a measurement is in progress.
5 to 6	Unavailable for "noise figure" measurements.
7	CORRecting This bit is set if a 2nd stage correction is in progress.
8	HCOPy This bit is set if a hardcopy is created.
9 - 14	Unavailable for "noise figure" measurements.
15	This bit is always 0.

7.19.1.2 STATus:QUESTionable register

The STATus:QUESTionable register contains information about indefinite states which can occur if the unit is operated without meeting the specifications.

Bit no	Meaning
0 to 7	Unavailable for "noise figure" measurements.
8	CALibration This bit is set if the R&S FSV/A is not calibrated.
9	LIMit This bit is set if a limit line is violated.
10	Unavailable for "noise figure" measurements.
11	CORRection This bit is set if the "noise figure" calibration is questionable.
14	Unavailable for "noise figure" measurements.
15	This bit is always 0.

7.19.1.3 STATus:QUEStionable:LIMit register

The STATus:QUEStionable:LIMit register contains information about limit lines and the results of a limit checks.

The number of LIMit registers depends on the number of measurement windows available in any application.

Bit no	Meaning
0	LIMit 1 FAIL This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL This bit is set if limit line 2 is violated.
2	LIMit 3 FAIL This bit is set if limit line 3 is violated.
3	LIMit 4 FAIL This bit is set if limit line 4 is violated.
4	LIMit 5 FAIL This bit is set if limit line 5 is violated.
5	LIMit 6 FAIL This bit is set if limit line 6 is violated.
6	LIMit 7 FAIL This bit is set if limit line 7 is violated.
7	LIMit 8 FAIL This bit is set if limit line 8 is violated.
8 to 14	Unavailable for "noise figure" measurements.
15	This bit is always 0.

7.19.1.4 STATus:QUEStionable:CORRection register

The STATus:QUEStionable:CORRection register contains information about the calibration status of "noise figure" measurements.

Bit no	Meaning
0	NO CORRection This bit is set if calibration is required.
1 to 2	Unavailable for "noise figure" measurements.
3	Missing Loss or ENR values This bit is set if loss or ENR values are missing for one or more measurement frequencies.

Bit no	Meaning
4 to 14	Unavailable for "noise figure" measurements.
15	This bit is always 0.

7.19.1.5 Status register remote commands

STATus:OPERation[:EVENT]?.....	203
STATus:QUESTionable[:EVENT]?.....	203
STATus:QUESTionable:CORRection[:EVENT]?.....	203
STATus:QUESTionable:LIMit[:EVENT]?.....	203
STATus:OPERation:CONDition?.....	203
STATus:QUESTionable:CONDition?.....	203
STATus:QUESTionable:CORRection:CONDition?.....	203
STATus:QUESTionable:LIMit:CONDition?.....	203
STATus:OPERation:ENABle.....	204
STATus:QUESTionable:ENABle.....	204
STATus:QUESTionable:CORRection:ENABle.....	204
STATus:QUESTionable:LIMit:ENABle.....	204
STATus:OPERation:NTRansition.....	204
STATus:QUESTionable:NTRansition.....	204
STATus:QUESTionable:CORRection:NTRansition.....	204
STATus:QUESTionable:LIMit:NTRansition.....	204
STATus:OPERation:PTRansition.....	204
STATus:QUESTionable:PTRansition.....	204
STATus:QUESTionable:CORRection:PTRansition.....	204
STATus:QUESTionable:LIMit:PTRansition.....	204

STATus:OPERation[:EVENT]?

STATus:QUESTionable[:EVENT]?

STATus:QUESTionable:CORRection[:EVENT]? <ChannelName>

STATus:QUESTionable:LIMit[:EVENT]? <ChannelName>

These commands read out the EVENT section of the status register.

The commands at the same time delete the contents of the EVENT section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

STATus:OPERation:CONDition?

STATus:QUESTionable:CONDition?

STATus:QUESTionable:CORRection:CONDition? <ChannelName>

STATus:QUESTionable:LIMit:CONDition? <ChannelName>

These commands read out the CONDition section of the status register.

The commands do not delete the contents of the EVENT section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

STATus:OPERation:ENABLE <SumBit>,<ChannelName>

STATus:QUESTionable:ENABLE <SumBit>,<ChannelName>

STATus:QUESTionable:CORRection:ENABLE <SumBit>,<ChannelName>

STATus:QUESTionable:LIMit:ENABLE <SumBit>,<ChannelName>

These commands control the ENABLE part of a register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition occurs in the summary bit reported to the next higher level.

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:OPERation:NTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:NTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:CORRection:NTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:LIMit:NTRansition <SumBit>,<ChannelName>

These commands control the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:OPERation:PTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:PTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:CORRection:PTRansition <SumBit>,<ChannelName>

STATus:QUESTionable:LIMit:PTRansition <SumBit>,<ChannelName>

These commands control the Positive TRansition part of a register.

Deprecated remote commands for noise figure measurements

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

7.20 Deprecated remote commands for noise figure measurements

Following is a list of deprecated remote commands. The remote commands are still supported to maintain compatibility to previous versions of "noise figure" measurements (like the R&S FSV-K30), but it is strongly recommended to use the command system in the way it is meant to be used in the R&S FSV3-K30.

Legacy command	Replaced by	Comment
CALCulate:LIMit:TRACe	CALCulate:LIMit:TYPE	Parameters NFIGure, TEFFective and GAIN were supported to assign a limit line to a result and thus the trace because trace and result type were fix. CALCulate:LIMit:TRACe now assigns the limit line to a trace (1 to 4).
CALCulate:MARKer:TRACe CALCulate:DELTaMarker:TRACe		The parameters NOISe, GAIN, NMEM1-3 and GMEM1-3 have been replaced by 1 2 3 4 because no distinction is made between memory and live trace.
CONFigure:ARRay:MEMory	TRACe:COpy	No more distinction between memory and live traces.
CONFigure:SINGle	CONFigure:FREQuency:SINGle	
DISPlay:ARRay:MEMory:STATe DISPlay:CURREnt:DATA:STATe	DISPlay:WINDow:TRACe:STATe	No more distinction between memory and live traces.
DISPlay:DATA:TRACe	LAYout system	
DISPlay:FORMat	---	Functionality not supported any more.
DISPlay:WINDow:TABLe	LAYout:WINDow:REPLace / LAYout:REPLace:WINDow	
FETCH: command system	TRACe:DATA	
SENSe:SWEp:POINTs	SENSe:FREQuency:POINTs	
SENSe:FREQuency:CW:FIXed	SENSe:FREQuency:SINGle	
SENSe:FREQuency:LIST:DATA	SENSe:FREQuency:TABLe:DATA	Frequency table only requires RF frequencies on R&S FSV/A.

Legacy command	Replaced by	Comment
SENSe:CONFigure:MODE:SYSTem: LOSCillator	SENSe:CONFigure:MODE: SYSTem:LO	
SENSe:CONFigure:MODE:SYSTem: LOSCillator:FREQuency	SENSe:CONFigure:MODE: SYSTem:LO:FREQuency	

7.21 Programming example: measuring a noise figure

```

// Preset and start option K30
*RST
INSTRument:SElect NOISE

// Set frequencies
SENSe:FREQuency:START 100000
SENSe:FREQuency:STOP 3000000000
SENSe:FREQuency:POINTs 201

// ENR settings
SENSe:CORRection:ENR:MODE TABLE
// Set the ENR values of your noise source here
SENSe:CORRection:ENR:MEASurement:TABLE:DATA 100e3, 15.77, 10e6, 15.77, 100e6, 15.35,
1e9, 15.12, 2e9, 14.70, 3e9, 14.57

// Set meas time
SENSe:SWEep:TIME 300ms

// Configure and start calibration
SENSe:CONFigure:CORRection
INITiate:IMMEDIATE
*OPC
SENSe:CORRection:STATe ON

// Configure and start measurement
// --> don't forget to add the DUT to the signal path here
// Configure a frequency list measurement with the settings above in single sweep
SENSe:CONFigure:LIST:SINGLE
INITiate:IMMEDIATE
*OPC

```

Annex

A Reference: frequency table file format

Frequency tables can be exported to a file in xml format for further evaluation in other applications. Transducer factors stored in the specified xml format can also be imported to the R&S FSV/A for other measurements (see ["Import / Export"](#) on page 50). This reference describes in detail the format of the export/import files for frequency tables.

```
<?xml version="1.0" encoding="UTF-8"?>
<TableAttributes>
  <Header comment=""/>
  <Data freq="" value=""/>
  ...
</TableAttributes>
```

Example: Import file for a frequency table

```
<?xml version="1.0" encoding="UTF-8"?>
<TableAttributes>
  <Header comment="Frequency values for NC364B (example)"/>
  <Data freq="10000000" value="13.14"/>
  <Data freq="100000000" value="13.21"/>
  <Data freq="1000000000" value="13.22"/>
  <Data freq="2000000000" value="13.17"/>
  <Data freq="3000000000" value="13.26"/>
  <Data freq="4000000000" value="13.38"/>
  <Data freq="5000000000" value="13.53"/>
  <Data freq="6000000000" value="13.63"/>
  <Data freq="7000000000" value="13.81"/>
</TableAttributes>
```

List of Commands (Noise Figure)

[SENSe:]BANDwidth:LIST:DATA.....	124
[SENSe:]BANDwidth:RESolution:AUTO.....	144
[SENSe:]BANDwidth[:RESolution].....	144
[SENSe:]BWIDth:RESolution:AUTO.....	144
[SENSe:]BWIDth[:RESolution].....	144
[SENSe:]CONFigure:CONTRol.....	163
[SENSe:]CONFigure:CORRection.....	144
[SENSe:]CONFigure:FREQuency:CONTInuous.....	122
[SENSe:]CONFigure:FREQuency:SINGLE.....	122
[SENSe:]CONFigure:LIST:CONTInuous.....	122
[SENSe:]CONFigure:LIST:SINGLE.....	123
[SENSe:]CONFigure:MEASurement.....	164
[SENSe:]CONFigure:MODE:DUT.....	128
[SENSe:]CONFigure:MODE:SYSTem:IF:FREQuency.....	127
[SENSe:]CONFigure:MODE:SYSTem:LO.....	127
[SENSe:]CONFigure:MODE:SYSTem:LO:FREQuency.....	127
[SENSe:]CORRection:ENR:CALibration:MODE.....	130
[SENSe:]CORRection:ENR:CALibration:SNS:SRNumber.....	136
[SENSe:]CORRection:ENR:CALibration:SPOT.....	130
[SENSe:]CORRection:ENR:CALibration:SPOT:COLD.....	129
[SENSe:]CORRection:ENR:CALibration:SPOT:HOT.....	129
[SENSe:]CORRection:ENR:CALibration:TABLE:SElect.....	131
[SENSe:]CORRection:ENR:CALibration:TYPE.....	131
[SENSe:]CORRection:ENR:COMMOn.....	131
[SENSe:]CORRection:ENR[:MEASurement]:MODE.....	134
[SENSe:]CORRection:ENR[:MEASurement]:SNS:SRNumber.....	136
[SENSe:]CORRection:ENR[:MEASurement]:SPOT.....	134
[SENSe:]CORRection:ENR[:MEASurement]:SPOT:COLD.....	135
[SENSe:]CORRection:ENR[:MEASurement]:SPOT:HOT.....	135
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:DELeTe.....	132
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:LIST?.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:SElect.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:DELeTe.....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature:LIST?.....	134
[SENSe:]CORRection:ENR[:MEASurement]:TABLE:TEMPerature[:DATA].....	133
[SENSe:]CORRection:ENR[:MEASurement]:TABLE[:DATA].....	132
[SENSe:]CORRection:ENR[:MEASurement]:TYPE.....	135
[SENSe:]CORRection:IREJection.....	128
[SENSe:]CORRection:LOSS:CALibration:MODE.....	137
[SENSe:]CORRection:LOSS:CALibration:SPOT.....	137
[SENSe:]CORRection:LOSS:CALibration:TABLE:DELeTe.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE:LIST?.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE:SElect.....	138
[SENSe:]CORRection:LOSS:CALibration:TABLE[:DATA].....	138
[SENSe:]CORRection:LOSS:CALibration:TEMPerature.....	139
[SENSe:]CORRection:LOSS:INPut:MODE.....	139
[SENSe:]CORRection:LOSS:INPut:SPOT.....	139

[SENSe:]CORRection:LOSS:INPut:TABLE:DELeTe.....	140
[SENSe:]CORRection:LOSS:INPut:TABLE:LIST?.....	141
[SENSe:]CORRection:LOSS:INPut:TABLE:SELeCt.....	141
[SENSe:]CORRection:LOSS:INPut:TABLE[:DATA].....	140
[SENSe:]CORRection:LOSS:INPut:TEMPerature.....	141
[SENSe:]CORRection:LOSS:OUTPut:MODE.....	141
[SENSe:]CORRection:LOSS:OUTPut:SPOT.....	142
[SENSe:]CORRection:LOSS:OUTPut:TABLE:DELeTe.....	142
[SENSe:]CORRection:LOSS:OUTPut:TABLE:LIST?.....	143
[SENSe:]CORRection:LOSS:OUTPut:TABLE:SELeCt.....	143
[SENSe:]CORRection:LOSS:OUTPut:TABLE[:DATA].....	142
[SENSe:]CORRection:LOSS:OUTPut:TEMPerature.....	143
[SENSe:]CORRection:RECall.....	145
[SENSe:]CORRection:SAVE.....	146
[SENSe:]CORRection:TEMPerature.....	136
[SENSe:]CORRection[:STATe].....	145
[SENSe:]FREQuency:CENTer.....	123
[SENSe:]FREQuency:LIST:DATA.....	124
[SENSe:]FREQuency:POINts.....	124
[SENSe:]FREQuency:SINGle.....	125
[SENSe:]FREQuency:SINGle:COUPled.....	125
[SENSe:]FREQuency:SPAN.....	125
[SENSe:]FREQuency:STARt.....	125
[SENSe:]FREQuency:STEP.....	126
[SENSe:]FREQuency:STOP.....	126
[SENSe:]FREQuency:TABLE:DATA.....	123
[SENSe:]SWEep:COUNT.....	146
[SENSe:]SWEep:TIME.....	146
[SENSe:]SWEep:TIME:AUTO.....	147
ABORt.....	161
CALCulate<n>:DELtAmarker<m>:AOFF.....	191
CALCulate<n>:DELtAmarker<m>:MAXimum:LEFT.....	197
CALCulate<n>:DELtAmarker<m>:MAXimum:NEXT.....	197
CALCulate<n>:DELtAmarker<m>:MAXimum:RIGHT.....	198
CALCulate<n>:DELtAmarker<m>:MAXimum[:PEAK].....	197
CALCulate<n>:DELtAmarker<m>:MINimum:LEFT.....	198
CALCulate<n>:DELtAmarker<m>:MINimum:NEXT.....	198
CALCulate<n>:DELtAmarker<m>:MINimum:RIGHT.....	199
CALCulate<n>:DELtAmarker<m>:MINimum[:PEAK].....	198
CALCulate<n>:DELtAmarker<m>:MREFerence.....	191
CALCulate<n>:DELtAmarker<m>:TRACe.....	192
CALCulate<n>:DELtAmarker<m>:X.....	192
CALCulate<n>:DELtAmarker<m>:Y?.....	193
CALCulate<n>:DELtAmarker<m>[:STATe].....	191
CALCulate<n>:LIMit:ACTive?.....	184
CALCulate<n>:LIMit:CLEAr[:IMMediate].....	186
CALCulate<n>:LIMit:COMMENT.....	180
CALCulate<n>:LIMit:CONTRol:SHIFt.....	181
CALCulate<n>:LIMit:CONTRol[:DATA].....	181
CALCulate<n>:LIMit:COPY.....	185

CALCulate<n>:LIMit:DELeTe.....	185
CALCulate<n>:LIMit:FAIL?.....	186
CALCulate<n>:LIMit:LOWer:SHIFt.....	182
CALCulate<n>:LIMit:LOWer:STATe.....	183
CALCulate<n>:LIMit:LOWer[:DATA].....	182
CALCulate<n>:LIMit:NAME.....	180
CALCulate<n>:LIMit:STATe.....	186
CALCulate<n>:LIMit:TRACe<t>.....	187
CALCulate<n>:LIMit:TRACe<t>:CHECk.....	187
CALCulate<n>:LIMit:TYPE.....	180
CALCulate<n>:LIMit:UPPer:SHIFt.....	184
CALCulate<n>:LIMit:UPPer:STATe.....	184
CALCulate<n>:LIMit:UPPer[:DATA].....	183
CALCulate<n>:MARKer<m>:AOFF.....	188
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	195
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	195
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	195
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	195
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	196
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	196
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	196
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	196
CALCulate<n>:MARKer<m>:TRACe.....	189
CALCulate<n>:MARKer<m>:X.....	189
CALCulate<n>:MARKer<m>:Y?.....	190
CALCulate<n>:MARKer<m>[:STATe].....	189
CALCulate<n>:UNCertainty:COMMon.....	151
CALCulate<n>:UNCertainty:DATA:FREQuency.....	151
CALCulate<n>:UNCertainty:DATA:GAIN.....	152
CALCulate<n>:UNCertainty:DATA:NOISe.....	152
CALCulate<n>:UNCertainty:DATA:RESuLts.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:COLD.....	153
CALCulate<n>:UNCertainty:ENR:CALibration:UNCertainty:HOT.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty:COLD.....	154
CALCulate<n>:UNCertainty:ENR:UNCertainty:HOT.....	155
CALCulate<n>:UNCertainty:MATCH:DUT:IN:RL.....	155
CALCulate<n>:UNCertainty:MATCH:DUT:IN[:VSWR].....	155
CALCulate<n>:UNCertainty:MATCH:DUT:OUT:RL.....	156
CALCulate<n>:UNCertainty:MATCH:DUT:OUT[:VSWR].....	156
CALCulate<n>:UNCertainty:MATCH:PREamp:RL.....	156
CALCulate<n>:UNCertainty:MATCH:PREamp[:VSWR].....	157
CALCulate<n>:UNCertainty:MATCH:SOURce:CALibration:RL.....	157
CALCulate<n>:UNCertainty:MATCH:SOURce:CALibration[:VSWR].....	157
CALCulate<n>:UNCertainty:MATCH:SOURce:RL.....	158
CALCulate<n>:UNCertainty:MATCH:SOURce[:VSWR].....	158
CALCulate<n>:UNCertainty:PREamp:GAIN.....	158
CALCulate<n>:UNCertainty:PREamp:NOISe.....	159
CALCulate<n>:UNCertainty:PREamp:STATe.....	159

CALCulate<n>:UNCertainty:SANalyzer:GAIN:UNCertainty?	160
CALCulate<n>:UNCertainty:SANalyzer:NOISE:UNCertainty?	160
CALCulate<n>:UNCertainty[:RESult]?	159
DISPlay:FORMat	119
DISPlay[:WINDow<n>]:MINFo[:STATe]	194
DISPlay[:WINDow<n>]:MTABLE	194
DISPlay[:WINDow<n>]:SIZE	119
DISPlay[:WINDow<n>]:TABLE:ITEM	170
DISPlay[:WINDow<n>]:TRACe<t>:SYMBOLs	171
DISPlay[:WINDow<n>]:TRACe<t>:UNCertainty	171
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]	171
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO	172
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:BOTTOm	172
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVEL	147
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVEL:AUTO	147
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:TOP	173
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE	174
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing:APERture	175
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SMOothing[:STATe]	175
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]	174
FORMat:DEXPort:DSEParator	176
FORMat:DEXPort:FORMat	177
FORMat:DEXPort:HEADer	177
FORMat:DEXPort:TRACes	177
FORMat[:DATA]	175
INITiate:SEQuencer:ABORT	162
INITiate:SEQuencer:IMMediate	163
INITiate:SEQuencer:MODE	163
INITiate<n>:CONTInuous	161
INITiate<n>[:IMMediate]	162
INPut:ATTenuation	148
INPut:COUPling	165
INPut:DPATH	166
INPut:EGAIN[:STATe]	149
INPut:FILTer:HPASS[:STATe]	166
INPut:FILTer:YIG[:STATe]	166
INPut:GAIN:STATe	149
INPut:GAIN[:VALue]	149
INPut:IMPedance	165
INPut:SElect	148
INPut:TYPE	148
INSTRument:CREate:DUPLicate	108
INSTRument:CREate:REPLace	109
INSTRument:CREate[:NEW]	109
INSTRument:DELeTe	109
INSTRument:LIST?	110
INSTRument:REName	111
INSTRument[:SElect]	111
LAYout:ADD[:WINDow]?	112
LAYout:CATalog[:WINDow]?	114

LAYout:IDENtify[:WINDow]?	114
LAYout:MOVE[:WINDow]	115
LAYout:REMOve[:WINDow]	115
LAYout:REPLace[:WINDow]	115
LAYout:SPLitter	116
LAYout:WINDow<n>:ADD?	117
LAYout:WINDow<n>:IDENtify?	118
LAYout:WINDow<n>:REMOve	118
LAYout:WINDow<n>:REPLace	118
MMEMory:STORe<n>:TRACe	177
SOURce:EXTErnal:FREQUency:OFFSet<of>	167
SOURce:EXTErnal:FREQUency[:FACTor]:DENominator	167
SOURce:EXTErnal:FREQUency[:FACTor]:NUMerator	167
SOURce<si>:EXTErnal<gen>:POWEr[:LEVEl]	167
SOURce<si>:EXTErnal<gen>:ROSCillator[:SOURce]	168
STATus:OPERation:CONDition?	203
STATus:OPERation:ENABle	204
STATus:OPERation:NTRansition	204
STATus:OPERation:PTRansition	204
STATus:OPERation[:EVENT]?	203
STATus:QUEStionable:CONDition?	203
STATus:QUEStionable:CORRection:CONDition?	203
STATus:QUEStionable:CORRection:ENABle	204
STATus:QUEStionable:CORRection:NTRansition	204
STATus:QUEStionable:CORRection:PTRansition	204
STATus:QUEStionable:CORRection[:EVENT]?	203
STATus:QUEStionable:ENABle	204
STATus:QUEStionable:LIMit:CONDition?	203
STATus:QUEStionable:LIMit:ENABle	204
STATus:QUEStionable:LIMit:NTRansition	204
STATus:QUEStionable:LIMit:PTRansition	204
STATus:QUEStionable:LIMit[:EVENT]?	203
STATus:QUEStionable:NTRansition	204
STATus:QUEStionable:PTRansition	204
STATus:QUEStionable[:EVENT]?	203
SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTerface	168
SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE	168
SYSTem:COMMunicate:TCPIP:RDEvice:GENerator<gen>:ADDResS	169
SYSTem:CONFIgure:DUT:GAIN	150
SYSTem:CONFIgure:DUT:STIME	150
SYSTem:CONFIgure:GENerator:CONTRol:STATe	169
SYSTem:CONFIgure:GENerator:INITialise:AUTO	169
SYSTem:CONFIgure:GENerator:INITialise[:IMMediate]	169
SYSTem:CONFIgure:GENerator:SWITCh:AUTO	170
SYSTem:PRESet:CHANnel[:EXEC]	112
SYSTem:SEQuencer	164
TRACe<n>:COPY	178
TRACe<n>[:DATA]?	120

Index

Symbols

2nd stage correction 33, 66

A

Aborting
 Sweep 75, 76
 AC/DC coupling 77
 Attenuation 68
 Auto level range 68
 Averaging 67

B

Bandwidth
 Resolution 37, 66

C

Calibration 33, 66, 76
 Recall 36
 Save 35
 Capture time
 see also Measurement time 146
 Center frequency 46
 Channel
 Creating (remote) 109, 111
 Deleting (remote) 109
 Duplicating (remote) 108
 Querying (remote) 110
 Renaming (remote) 111
 Replacing (remote) 109
 Selecting (remote) 111
 Clear 50
 Closing
 Channels (remote) 109
 Windows (remote) 118
 Comment
 Limit lines 100
 Compatibility
 Limit lines 98
 Continuous sweep
 Softkey 75
 Conventions
 SCPI commands 104
 Copying
 Channel (remote) 108
 Traces 89

D

Data format
 Remote 177
 Decimal separator
 Trace export 90, 92
 Deleting
 Limit line values 101
 Delta markers
 Defining 94
 Direct measurement 51
 Direct measurements 28
 Direct path
 Input configuration 78

Duplicating
 Channel (remote) 108
 DUT characteristics 51

E

ENR 52
 ENR source 54
 ENR table 56
 Delete 58
 Edit 57, 58
 Evaluation methods
 Remote 112
 Excess noise ratio (ENR) 52
 Exporting
 Measurement settings 90
 Traces 89, 90, 92
 External generator
 Interface 80
 Interface settings 79
 External reference
 External generator control 80

F

Filters
 High-pass (RF input) 78
 RBW 37
 YIG (remote) 166
 Fixed LO 52
 Format
 Data (remote) 177
 Frequency
 Center 46
 Span 46
 Start 46
 Stepsize 47
 Stop 46
 Frequency conversion 51
 Frequency conversion measurements 28
 Frequency list 25, 49
 Frequency set 44
 Frequency table 49, 50

G

Generator type
 External generator 80
 Generators
 Frequency range, external generator 80
 Power range, external generator 80
 Setup files, external generator 80
 Group delay
 Smoothing 88

H

Hardware settings
 Displayed 11
 High-pass filter
 RF input 78

I	
Image rejection	52
Impedance	
Setting	78
Input	
Coupling	77
Input loss	60
Inserting	
Limit line values	101
Installation	9
K	
Keys	
Peak Search	96
RUN CONT	75
RUN SINGLE	76
L	
Limit lines	97
Activating/Deactivating	98
Comment	100
Compatibility	98
Copying	99
Creating	99
Data points	101
Deactivating	99
Deleting	99
Deleting values	101
Details	99
Editing	99
Inserting values	101
Managing	97
Name	100
Saving	101
Selecting	99
Shifting	101
Traces	98
View filter	98
Visibility	98
Y-axis	100
Lines	
Configuration	97
Limit, see Limit lines	97
LO feedthrough	78
Loss	
Input	60
Output	60
Loss table	63
Delete	64
Edit	64
Losses	60
M	
Marker	39
Markers	
Deactivating	94
Delta markers	94
Minimum	96
Next minimum	97
Next peak	96
Peak	96
Table	95
Type	94
Maximizing	
Windows (remote)	119
Measurement	
Frequency list	25
Performing	75
Measurement point	
Delete	50
Insert	50
Measurement points	47
Measurement time	
Remote	146
Minimum	96
Marker positioning	96
Next	97
Multiple	
Measurement channels	10
N	
Name	
Limit lines	100
Next Minimum	97
Marker positioning	97
Next Peak	96
Marker positioning	96
Noise source	33
Noise source characteristics	52
Noise Source Control	9
O	
Options	
High-pass filter	78
Preamplifier	68
Output loss	60
Overview	
Configuration	42
P	
Peak search	
Key	96
Peaks	
Marker positioning	96
Next	96
Softkey	96
Populate	50
Position	
Limit line values	101
Preamplifier	
Setting	68
Softkey	68
Presetting	
Channels	44
R	
RBW	66
see Resolution Bandwidth	37
Reference frequency	
External generator	80
Reference level	67
Remote commands	
Basics on syntax	103
Boolean values	107
Capitalization	104
Character data	107

- Data blocks 108
- Numeric values 106
- Optional keywords 105
- Parameters 106
- Strings 108
- Suffixes 105
- Resolution bandwidth 66
 - Impact 37
- Restoring
 - Channel settings 44
- Results
 - Data format (remote) 177
 - Exporting 90
- RF attenuation 68
- Room temperature 56
- RUN CONT
 - Key 75
- RUN SINGLE
 - Key 76
- S**
- Saving
 - Limit lines 101
- Sensitivity
 - RBW 37
- Sequencer 10
 - Activating (remote) 163
 - Remote 161
- Sequences
 - Aborting (remote) 162
 - Mode (remote) 163
- Settling time 67
- Setup files
 - External generator 80
- Shift x
 - Limit lines 101
- Shift y
 - Limit lines 101
- Signal capturing
 - Duration (remote) 146
- Single sweep
 - Softkey 76
- Smoothing
 - Traces (group delay) 88
- Softkeys
 - Continuous Sweep 75
 - Line Config 97
 - Min 96
 - Next Min 97
 - Next Peak 96
 - Norm/Delta 94
 - Peak 96
 - Preamp 68
 - Single Sweep 76
- Span 46
- Specifics for
 - Configuration 44
- Start frequency 46
- Step(size) 47
- Stop frequency 46
- Suffixes
 - Common 103
 - Remote commands 105
- Sweep
 - Aborting 75, 76
 - Time (remote) 146
- Sweep time 66
- T**
- TCP/IP
 - Address, External generator 80
 - External generator 80
- Temperature 56
- Trace 87
 - Mode 38
 - Preset 89
 - Selection 88
- Traces
 - Copying 89
 - Copying (remote control) 178
 - Export format 90, 92
 - Exporting 89, 90, 92
 - Mode (remote) 174
- Traces to be Checked
 - Limit lines 98
- TTL handshake
 - see TTL synchronization 80
- TTL synchronization
 - External generator 80
- Tuning mode 24, 45
- V**
- View filter
 - Limit lines 98
- Visible
 - Limit lines 98
- W**
- Window title bar information 11
- Windows
 - Adding (remote) 112
 - Closing (remote) 118
 - Configuring 44
 - Layout (remote) 116
 - Maximizing (remote) 119
 - Querying (remote) 114
 - Replacing (remote) 115
 - Splitting (remote) 119
 - Types (remote) 112
- Y**
- Y-axis
 - Limit lines 100
- YIG-preselector
 - Activating/Deactivating 78
 - Activating/Deactivating (remote) 166