

R&S® TSM A6

Autonomous Mobile Network Scanner Getting Started



4900804002

Version 13

ROHDE & SCHWARZ

Make ideas real



This manual describes the following R&S®TSMA6 models:

- R&S®TSMA6 (4900.8005.02)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Rohde & Schwarz is under license.

CDMA2000® is a registered trademark of the Telecommunications Industry Association (TIA-USA).

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

"WiMAX", "Mobile WiMAX", "Fixed WiMAX", "WiMAX Forum", "WiMAX Certified", "WiMAX Forum Certified", "WiGRID", the WiMAX Forum logo, the WiMAX Forum Certified logo and the WiGRID logo are trademarks or registered trademarks of the WiMAX Forum.

All other trademarks are the properties of their respective owners.

4900.8040.02 | Version 13 | R&S®TSMA6

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information.....	5
1.1 Safety instructions.....	5
1.2 Labels on the product.....	8
1.3 WLAN/Bluetooth adapter.....	9
1.4 Warning messages in the documentation.....	11
1.5 Korea certification class A.....	11
2 Welcome.....	12
2.1 Documentation overview.....	12
2.1.1 Getting started manual.....	12
2.1.2 User manuals and help.....	12
2.1.3 Videos.....	12
2.1.4 Printed safety instructions.....	13
2.1.5 Specifications and product brochures.....	13
2.1.6 Release notes and open source acknowledgment (OSA).....	13
2.1.7 Application notes, application cards, white papers, etc.....	13
2.2 Key features.....	13
3 Preparing for use.....	15
3.1 Unpacking and checking.....	15
3.2 Preparing for walk test.....	15
3.3 Setting up indoors.....	15
3.3.1 Placing the product on a bench top.....	15
3.3.2 Mounting the product in a rack.....	16
3.4 Considerations for test setup.....	16
3.5 Connecting antennas.....	17

3.6	Connecting devices for local operation (mouse, keyboard, monitor) (optional).....	18
3.7	Connecting LAN.....	18
3.8	Connecting USB to LAN adapter (optional).....	18
3.9	Connecting test mobile phones (optional).....	19
3.10	Connecting to power.....	19
3.10.1	Connecting to a vehicle DC power supply via a cigarette lighter.....	19
3.10.2	Connecting to the vehicle power supply via a terminal.....	20
3.10.3	Connecting to an AC power supply.....	20
3.10.4	Connecting to a battery pack.....	21
3.11	Switching on or off R&S TSM6.....	24
3.12	Calibrating GPS for dead reckoning.....	25
4	Instrument tour.....	27
4.1	Front panel tour.....	27
4.2	Rear panel tour.....	27
4.3	Built-in GPS receiver.....	32
4.4	Built-in WLAN / Bluetooth adapter.....	33
5	Transporting.....	34
6	Maintenance, storage and disposal.....	35
7	Contacting customer support.....	37
	Index.....	38

1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following sections.

Intended use

The R&S TSM A6 is intended as an integrated solution for efficient drive and walk testing. It offers maximum performance, autonomy and connectivity with an integrated high-performance PC and a mobile network scanner to comply with the latest requirements for state-of-the-art mobile network testing. Together with optional equipment (battery pack, transport bag) it is the ideal companion for remote or unattended operation during drive and walk test campaigns.

The R&S TSM A6 is intended to enhance the R&S TSMx scanner family via a vibration-proof mechanical connection to allow mobile operation. It contains two easily accessible, rechargeable and hot-swappable batteries.

Observe the operating conditions and performance limits stated in the specifications document.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 5. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "DC-Powered Products for Mobile Use" (document number 1171.2049.99) are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at <https://www.rohde-schwarz.com/support>.

Connecting the product

Before connecting the interfaces and measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Operating the product

The product is intended for mobile use. The maximum weight of the product is provided in the specifications document. If the product casing is not waterproof, use an adequate weather protection to carry the product outdoors with you.

When operating the product on a mobile platform, such as a vehicle, aircraft or drone, make sure that the product is properly secured. Refer to the instructions provided by the manufacturer of the mobile platform. If stacking is possible, secure the whole stack of products so that they cannot fall over and cause injury.

Observe the ambient conditions such as altitude, operating temperature and climatic loads; see the specifications document.

Due to their exposed location, mobile communications systems are at risk of damage from lightning. This also poses a risk to persons nearby. When the risk of

lightning is present, remove antennas from exposed locations, e.g. vehicle roofs. Do not operate the product until the lightning risk has passed.

Connecting to power

The product runs on DC voltage. For the specifications of the supply voltage for the product, refer to the specifications document. Only connect the product to a power source that provides a protection against electric shock.

Take the following measures for your safety:

- If you connect the product to an external power supply, use one recommended in the product documentation.
- If you connect the product to a battery, observe the safety information delivered with the battery.
- Before switching on the product, ensure that the voltage and polarity indicated on the product matches the available power source.
- Only use intact cables and route them carefully so that they cannot be damaged. Also ensure that nobody can trip over loose cables.

Handling batteries safely

The product contains exchangeable or built-in lithium polymer or lithium ion cells or batteries. The use of the word battery in the following always means all types. Only the battery contents are potentially hazardous. As long as a battery is undamaged and the seals remain intact, there is no danger.

Impact, shock or heat can cause damage such as dents, punctures and other deformations. A damaged battery poses a risk of personal injury. Handle a damaged or leaking battery with extreme care. Immediately ventilate the area since the battery releases harmful gases. If you come into contact with the battery fluid, immediately remove all contaminated clothing. Irritation can occur if the battery fluid comes in contact with your skin or eyes. Immediately and thoroughly rinse your skin or eyes with water and seek medical aid.

For safe handling, follow these rules:

- Do not short-circuit the battery.
- Do not mechanically damage the battery. Do not open or disassemble the battery.
- Do not expose the battery to high temperatures such as open flames, hot surfaces and sunlight.
- Only use the battery with the designated Rohde & Schwarz product.

Labels on the product


- Only use the appropriate Rohde & Schwarz charger to charge the batteries. If the batteries are improperly charged, there is a risk of explosion. For charging and discharging temperature ranges, see the product documentation.
- Replace exchangeable batteries only with the same battery type.
- Store the battery in the product or use the product packaging.
- Dispose of exchangeable batteries separately from normal household waste as specified by the local waste disposal agency.


If you disregard these rules, you risk serious personal injury or even death due to explosion, fire or hazardous chemical substances. The product documentation provides further details.

If exchangeable batteries or products with built-in batteries are defective, contact the Rohde & Schwarz customer service. Rohde & Schwarz classifies the severity of the defect. When returning batteries or Rohde & Schwarz products containing batteries, use a carrier qualified to transport dangerous goods and notify the carrier of this classification. Follow the carrier's transport stipulations in line with IATA-DGR, IMDG-Code, ADR or RID.

Meaning of safety labels

Safety labels on the product warn against potential hazards.

	<p>Potential hazard Read the product documentation to avoid personal injury or product damage.</p>
---	--

	<p>DC - direct current Connect to a DC power supply of the specified voltage range.</p>
---	---

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see "[Meaning of safety labels](#)" on page 8
- Product and environment safety, see "[Labels regarding product and environment safety](#)" on page 9.
- Identification of the product, see bottom label of the R&S TSMA6.

Labels regarding product and environment safety



Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life.



Labeling in line with directive 2006/66/EC for disposal of batteries after they have come to the end of their life.

1.3 WLAN/Bluetooth adapter

The R&S TSM A6 has built-in WLAN/Bluetooth module.

This wireless adapter complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standards. Operation of the device is subject to the following two conditions:

- This device may not cause harmful interference.
Cet appareil ne peut pas causer d'interférences.
- This device must accept any interference that may cause undesired operation.
Cet appareil doit accepter des interférences, y compris des interférences qui peuvent causer des opérations non désirées de l'appareil.

Radio frequency interference requirements

This wireless adapter is restricted to indoor use due to its operation in the 5.15 GHz to 5.25 GHz frequency range. The wireless adapter requires to be used indoors for the frequency range 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference to co-channel Mobile Satellite systems. High power radars are allocated as primary users of the 5.25 GHz to 5.35 GHz and 5.65 GHz to 5.85 GHz bands. These radar stations can cause interference with and /or damage this device.

Canada-specific enhancement

When using IEEE 802.11a wireless LAN, this product is restricted to indoor use due to its operation in the 5.15 GHz to 5.25 GHz frequency range. Industry Canada requires this product to be used indoors for the frequency range of 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference to co-channel mobile satellite systems. High power radar is allocated as the primary user of the

5.25 GHz to 5.35 GHz and 5.65 GHz to 5.85 GHz bands. These radar stations can cause interference with and/or damage to this device.

L'utilisation d'un réseau sans fil IEEE802.11a est restreinte à une utilisation en intérieur à cause du fonctionnement dans la bande de fréquence 5.15 GHz to 5.25 GHz. Industry Canada requiert que ce produit soit utilisé à l'intérieur des bâtiments pour la bande de fréquence 5.15 GHz - 5.25 GHz afin de réduire les possibilités d'interférences nuisibles aux canaux co-existants des systèmes de transmission satellites. Les radars de puissances ont fait l'objet d'une allocation primaire de fréquences dans les bandes 5.25 GHz-5.35 GHz et 5.65 GHz to 5.85 GHz. Ces stations radar peuvent créer des interférences avec ce produit et/ou lui être nuisible.

Usage in specific environments

- The use of wireless adapters in hazardous locations is limited by the constraints posed by the safety directors of such environments.
- The use of wireless adapters in hospitals is restricted to the limits set forth by each hospital.

Usage on aircraft

Regulations of the FCC, FAA and individual airlines prohibit airborne operation of some radio-frequency wireless devices (wireless adapters) because their signals could interfere with critical aircraft instruments.

Local restrictions on 802.11a, 802.11b, 802.11g, 802.11n, and 802.16e radio usage

Due to the fact that the frequencies used by 802.11a, 802.11b, 802.11g, 802.11n, and 802.16e wireless LAN devices may not yet be harmonized in all countries, 802.11a, 802.11b, 802.11g, 802.11n, and 802.16e products are designed for use only in specific countries, and are not allowed to be operated in countries other than those of designated use.

As a user of these products, you are responsible for ensuring that the products are used only in the countries for which they were intended and for verifying that they are configured with the correct selection of frequency and channel for the country of use. The device transmit power control (TPC) interface is part of the Intel® PROSet/Wireless Wi-Fi Connection Utility Software. Operational restrictions for Equivalent Isotropic Radiated Power (EIRP) are provided by the system manufacturer.

Any deviation from the permissible power and frequency settings for the country of use is an infringement of national law and may be punished as such.

1.4 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.5 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Welcome

2.1 Documentation overview

This section provides an overview of the R&S TSMA6 user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/tsmx

2.1.1 Getting started manual

Introduces the R&S TSMA6 and describes how to set up and start working with the product. It includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the product.

2.1.2 User manuals and help

The user manual contains the description of all instrument modes and functions. It also describes information on maintenance, instrument interfaces and error messages. It includes the contents of the getting started manual.

The user manual also describes the usage of options and extras (downconverter R&S TSMExxDC and battery pack R&S TSMA6-BP).

The contents of the user manual are available as help in the R&S TSMA6. The help offers quick, context-sensitive access to the complete information for the instrument and its firmware.

The user manual is also available for download or for immediate display on the Internet.

2.1.3 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>

2.1.4 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

2.1.5 Specifications and product brochures

The specifications document, also known as the data sheet, contains the technical specifications of the R&S TSM A6. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/tsmx.

2.1.6 Release notes and open source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current software version, and describe the software installation.

The software uses several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/tsmx.

2.1.7 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/tsmx.

2.2 Key features

As in-building traffic in cellular networks grows, there is an increased need for indoor measurements. While traditional drive test systems consist of a laptop with

test mobile phones and scanners, there are also walk test solutions that use tablets and smartphones.

The R&S TSMA6 enhances such solutions, providing the user with accurate insight into the RF environment.

The R&S TSMA6 combines the technology of the R&S TSME6 ultra-compact drive test scanner with a high-performance Intel processor. The scanner can run PC-based drive test software, and smartphones can be connected via USB.

With its ultra-broadband frontend, the integrated scanner measures all supported technologies 350 MHz to 6000 MHz simultaneously. The future-ready architecture and the in-field upgradeability for both hardware and software, allow up to 4x4 MIMO measurements and pave the way for the upcoming 5G technology.

Outstanding key features are:

- No limitation in 3GPP (LTE, WCDMA, GSM, NB-IoT...) frequency bands up to 6 GHz incl. a Multi-GNSS receiver for uninterrupted location tracking
- More than 10 technologies simultaneously in one system
- Future-ready for upcoming 5G related measurements
- Compact and lightweight design with customized mechanical concept for cascading multiple scanner hardware
- Maximum connectivity supporting additional scanner hardware, Windows-based PCs, Android-based UEs or tablets using wireless and wired connections
- Integrated high-performance Intel i7 CPU-based PC

3 Preparing for use

Here, you can find basic information about setting up the product for the first time.

3.1 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.2 Preparing for walk test

If you want to perform a walk test, the R&S TSM A6 needs weather protection. The R&S TSM A6-ZCB2 transport bag is especially designed for this purpose. See also "[Operating the product](#)" on page 6.

3.3 Setting up indoors

3.3.1 Placing the product on a bench top

If you want to set up the R&S TSM A6 on a benchtop or prepare the R&S TSM A6 for mobile use, proceed as follows.

To place the product on a bench top

1. Place the R&S TSMx6 on a stable, flat and level surface.
2. If you want to stack R&S TSMx, proceed as described in the R&S TSMx6 user manual.
3. If you want to stack the R&S TSMx6 together with other products:
 - a) Follow the instructions given for the other products.
 - b) Place the R&S TSMx6 on top.

3.3.2 Mounting the product in a rack**To mount the product in a rack**

1. Use an adapter kit to prepare the product for rack mounting.
 - a) Order the rack adapter kit designed for the product. For the order number, see specifications document.
 - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the product to shelf height. If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws on the rack brackets with a tightening torque of 1.2 Nm to secure the product in the rack.

3.4 Considerations for test setup

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Signal input and output levels

Information on signal levels is provided in the specifications document. Keep the signal levels within the specified ranges to avoid damage to the product and connected devices.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
 - Residential environments
 - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.5 Connecting antennas



The SMA connector is sensitive to mechanical stress. Use the following handling precautions.

- Always use a torque wrench and mount the cable end with 60 Ncm.
- Do not stack adapters directly at the SMA connector. If you need to use adapters (e.g: SMA to N), then always use a specific adapter cable (Rohde & Schwarz order no. 4900.1700.00).

To connect RF and GPS antenna

1. Connect the RF antenna to the RF IN connector (see [Figure 4-2 - 14](#)).
2. Connect the GPS antenna to the GPS ANT port (see [Figure 4-2 - 4](#)).

3.6 Connecting devices for local operation (mouse, keyboard, monitor) (optional)

To connect devices

- ▶ Connect a mouse and a keyboard a free USB 2.0 port (see [Figure 4-2 - 11](#)) and a monitor to the appropriate monitor port (HDMI, USB-C), (see [Figure 4-2 - 13, 9](#)).

3.7 Connecting LAN

The R&S TSM A6 provides two different LAN interfaces.

- SCAN port:
It is a GBit LAN interface with a fixed IP address as the default setting. It used to connect a second scanner.
- LAN port:
It is a GBit LAN interface with auto IP address as the default setting. It is used to connect the R&S TSM A6 to a LAN and allows the remote control of the R&S TSM A6.

3.8 Connecting USB to LAN adapter (optional)

To extend the available number of Gbit LAN ports, various optional USB to LAN adapters are available:

- R&S TSPC-U2L (Single Gbit LAN port adapter)
- R&S TSPC-U2L2 (Dual Gbit LAN port adapter)
- R&S TSPC-U2L4 (USB-C to 4-port Ethernet)

For R&S TSPC-U2L4, no driver needs to be loaded. The firmware automatically configures the port (see "Configuration" > "Connectivity" > "LAN EXT2 / EXT3 / EXT5 / EXT6").

For R&S TSPC-U2L and R&S TSPCU2L2, check if driver updates are required.

For information how to connect an additional adapter, see <https://www.rohde-schwarz.com/driver/tsma6/>.

3.9 Connecting test mobile phones (optional)

When you connect a test mobile phone to a USB port for the first time, the installation of the appropriate drivers is mandatory.

Currently the following driver is available.

- Samsung USB driver

For information on how to connect Qualcomm-based mobiles and required driver updates, see <https://www.rohde-schwarz.com/driver/tsma6/>.

To connect test mobile phones

- ▶ Connect test mobile phones to USB 3.0 / USB-C ports (see [Figure 4-2 - 2, 14](#)).

For information on how to connect other test mobile phones and install appropriate drivers, refer to related manuals (e.g. R&S SmartONE user manual).

3.10 Connecting to power

This section describes how to connect the R&S TSM6 to a power supply unit.

3.10.1 Connecting to a vehicle DC power supply via a cigarette lighter

The R&S TSM6 is delivered with a 12 V DC power supply cable with a cigarette lighter connector.

1. Check the rating of the vehicle DC power supply.
2. Connect the 7-pin connector to DC IN.
3. Connect the cigarette lighter adapter to the 12 V outlet of the vehicle.

3.10.2 Connecting to the vehicle power supply via a terminal

1. Ensure that the rating of the DC power supply network matches the requirements printed on the casing next to the DC input (see (8) in [Figure 4-2](#)).
2. Demount the cigarette lighter adapter from the cable.
3. Connect the open ends of the cable to the DC power supply. Ensure that the polarity is correct (see [Figure 3-1](#)).

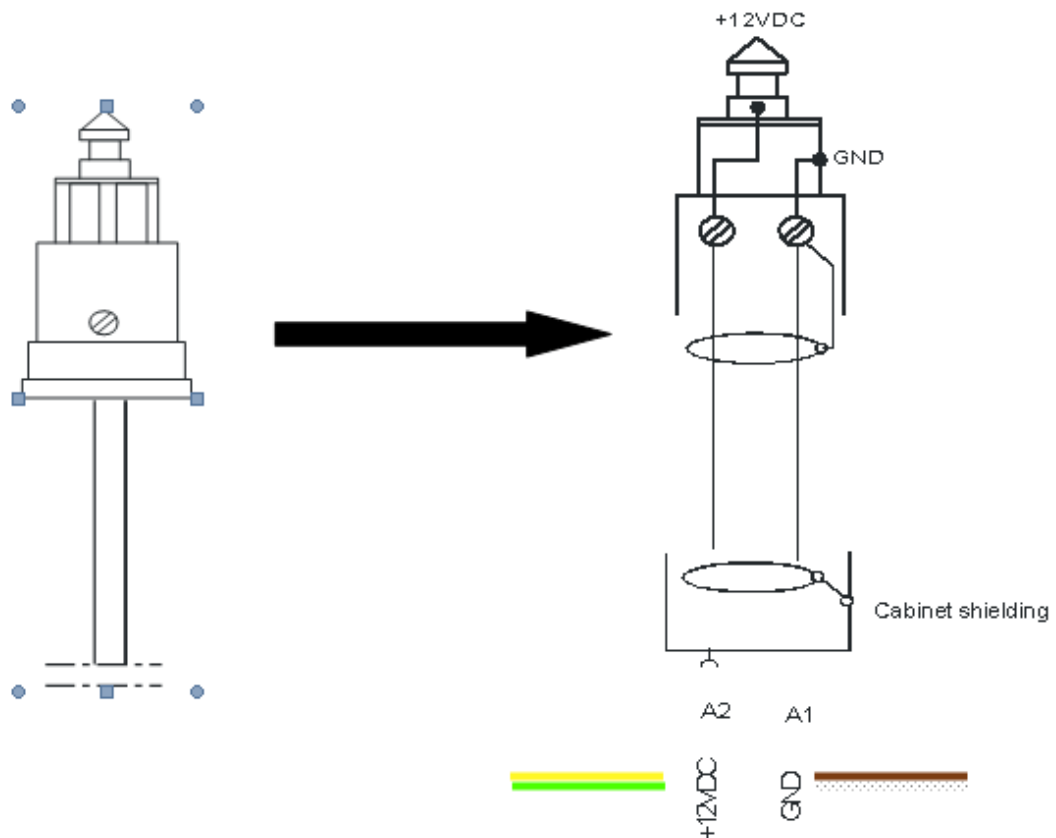


Figure 3-1: Supplied power cable with cigarette lighter adapter

+12 V DC = green/yellow cabling
 GND = brown/white cabling

3.10.3 Connecting to an AC power supply

If you operate the product with an external power supply, you can use it indoors only in pollution degree 2 environments where nonconductive contamination can occur. Suitable AC power supplies are listed in the specifications document. They differ in the output power:

Connecting to power

- R&S TSMa6-Z1 has an output power of 105 W and is suitable for multiple R&S TSMx products.
1. Ensure that the required ratings listed in the specifications document are matched.
 2. Connect the round connector to DC IN.

Note:

If you connect the R&S TSMa6 with an R&S TSMa6-BP, connect the DC power to the R&S TSMa6-BP (1).

Do not connect the DC power to the R&S TSMa6 (2).



Figure 3-2: DC IN connectors

- 1 = DC IN connector R&S TSMa6-BP
2 = DC IN connector R&S TSMa6

3. Insert the AC power plug into a power outlet with ground contact.

3.10.4 Connecting to a battery pack


You can use the R&S TSMa6-BP battery pack as a power supply.

- i** If you use an R&S TSMa6 together with an R&S TSMa6-BP, connect the DC power to the DC IN connector of the R&S TSMa6-BP (see [Figure 3-2](#)).

- i** If the R&S TSMA6 is not used for more than one day, remove the batteries from R&S TSMA6-BP to prevent discharge. For details, see the manual of the R&S TSMA6-BP battery pack.

To connect a battery pack

1. Remove the cover cap from the docking connector of the R&S TSMA6/6B.

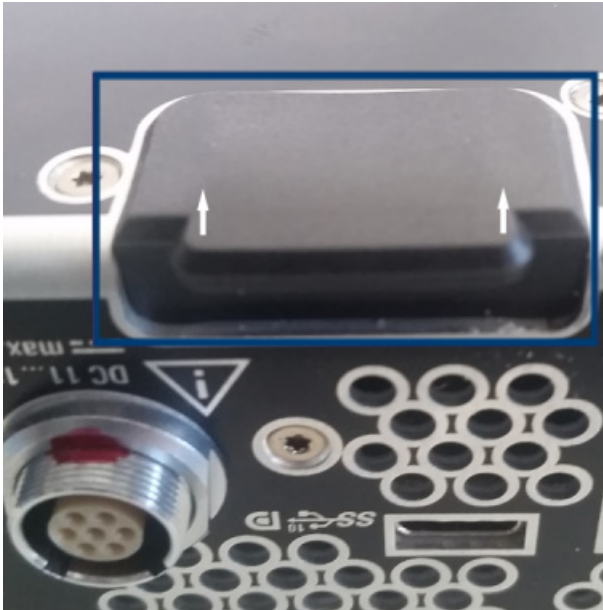

2. Screw the collar screws (standard accessory of R&S TSMA6-BP) on the top of the R&S TSMA6 with a Torx 8 screw driver.
 - Torque: 0.66 Nm \pm 0.05 Nm

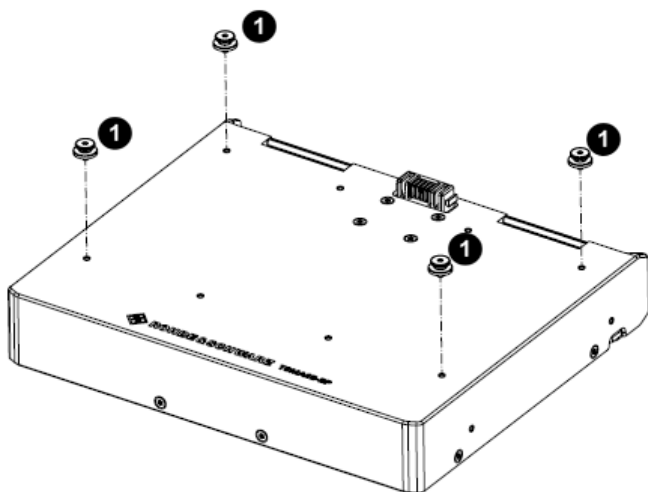


Figure 3-3: Collar screws

1 = Collar screws

- Align the collar screws with the snap-in holes on the bottom of an R&S TSM6/6B.

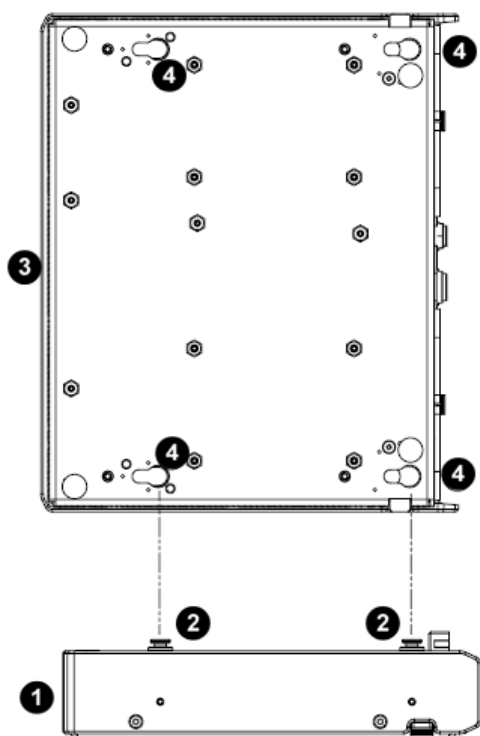


Figure 3-4: Aligning R&S TSM6-BP and R&S TSM6/6B

Switching on or off R&S TSM6

- 1 = R&S TSM6-BP
- 2 = Collar screws
- 3 = R&S TSM6/6B
- 4 = Snap in holes on the bottom pane of R&S TSM6/6B

4. Press the device down.
5. Move the R&S TSM6/6B to the rear side (2) until you hear a click when locking in the collar screws.



Figure 3-5: Connected R&S TSM6/6B and R&S TSM6-BP

- 1 = Attach R&S TSM6 to R&S TSM6-BP
- 2 = Move R&S TSM6/6B to the rear side
- 3 = Power connection established (snapped in docking connector)

3.11 Switching on or off R&S TSM6

The behavior depends on the configured "Startup Settings".

- "Auto Power ON"
The R&S TSM6 starts automatically.
- "Remember Last State"
If you have powered down the R&S TSM6 in the previous measurement session, you have to switch on the device next time manually.

To switch on the device

The device is off but connected to power.

- ▶ Press the power on/off button.

The Pwr LED starts green blinking. After booting, the color changes to green resp. blue continuous depending on the state of the WLAN access point (see "[Status LEDs - Scanner Pwr / State](#)" on page 31).

To shut down the device

- ▶ Press the power on/off button.

The Pwr LED starts blinking green. The operating system shuts down and the Pwr LED is switched off.



Figure 3-6: Power button

For the power state LEDs, see "[Status LEDs - Mode, Meas](#)" on page 29.

For a cold start, hold the power on/off button at least 5 s.

3.12 Calibrating GPS for dead reckoning

The following steps are necessary to enable untethered dead reckoning with the integrated receiver (see [Chapter 4, "Instrument tour"](#), on page 27) of the R&S TSM A6.

1. Mount the R&S TSM A6 device fixed to the frame of a car.
2. Power on the R&S TSM A6 device.
3. Activate "Dead Reckoning" in the used software.

Calibrating GPS for dead reckoning

For details, refer to R&S ROMES, R&S NESTOR or R&S ViCom documentation.

4. Wait until the used software reports a "3D fix" (time can vary depending on the configured GNSS).
5. To calibrate the instrument, perform the following driving procedures in a safe environment.
 - a) 720 degrees right turn
 - b) 720 degrees left turn
 - c) Drive in a straight line with a velocity exceeding 40 km/h.

After finishing the calibration, the used software should report a fix state "GPS +DR" or "3D+DR", in case satellite reception is lost the fix state will change to "DR only".



If using "DR only", the accuracy of the reported position will decrease over time. If it falls below a certain threshold, the receiver reports the state "No Fix".



The GPS calibration is saved in the module. Whenever the device is switched off, the calibration procedure must be repeated for the next usage of dead reckoning.

4 Instrument tour

The meanings of the labels on the product are described in [Chapter 1.2, "Labels on the product"](#), on page 8.

4.1 Front panel tour

The front panel of the R&S TSM A6 does not provide any connectors or control elements for operation. The black caps on the left and right contain the WLAN antennas.

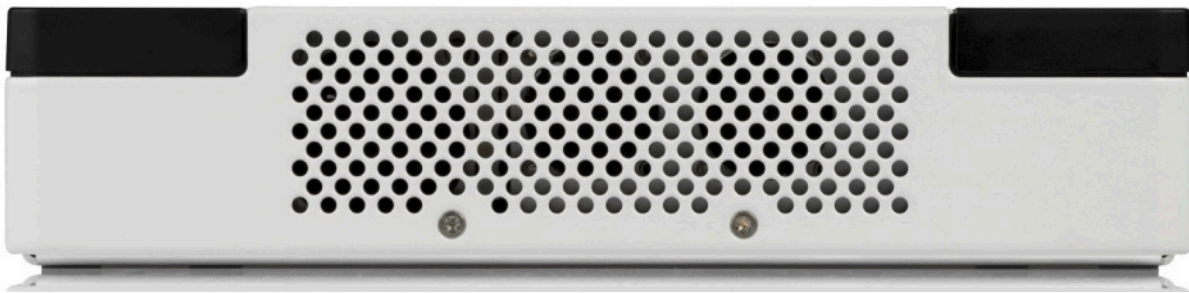


Figure 4-1: R&S TSM A6 - Front Panel

4.2 Rear panel tour

The following figure provides an overview of the control elements and the connectors on the rear panel of the instrument.

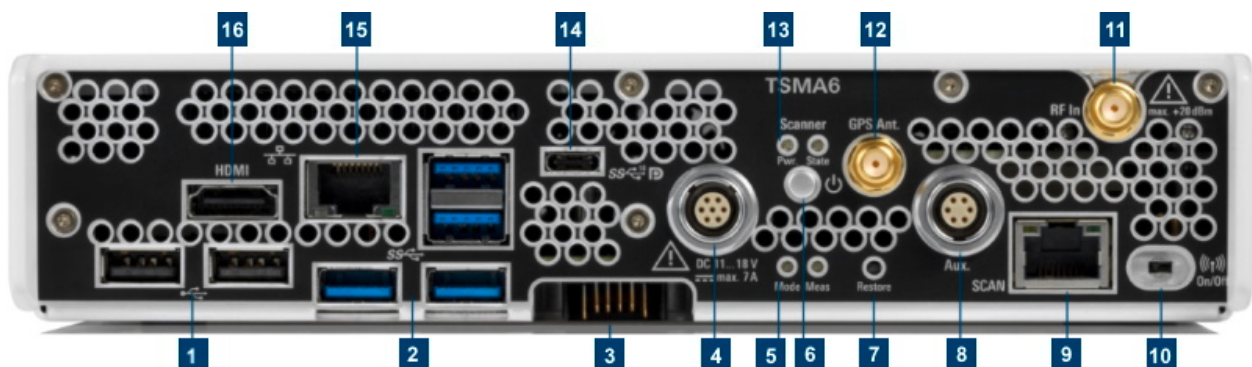


Figure 4-2: R&S TSM A6 - Rear Panel

- 1 = "USB 2.0 (2x, Type A)" on page 28
- 2 = "USB 3.0 (4x, Type A)" on page 28
- 3 = "Docking connector" on page 28
- 4 = "DC IN connector" on page 28
- 5 = "Status LEDs - Mode, Meas" on page 29
- 6 = "Power on/off" on page 29
- 7 = "Restore button" on page 30
- 8 = "AUX connector (SMA) - synchronization R&S TSME4/6 / R&S TSMExxDC" on page 30
- 9 = "SCAN port - GBit LAN interface - external R&S TSME4/6 (RJ-45 connector)" on page 30
- 10 = "WLAN/Bluetooth on/off" on page 30
- 11 = "RF IN connector (SMA)" on page 30
- 12 = "GPS Ant. connector (SMA) - GPS antenna input" on page 31
- 13 = "Status LEDs - Scanner Pwr / State" on page 31
- 14 = "USB-C (multiport for Thunderbolt, display and standard USB-C 3.1)" on page 31
- 15 = "LAN Port - remote control (RJ-45 connector)" on page 32
- 16 = "HDMI connector" on page 32

USB 2.0 (2x, Type A)

See (1) in [Figure 4-2](#).

Connecting external devices, e.g. keyboard, mouse or software dongle.

Power limit: max. 500 mA / port

Overall USB current (USB-C, USB 3.0 and USB 2.0): max. 3 A

USB 3.0 (4x, Type A)

See (2) in [Figure 4-2](#).

Connecting external storage devices, data sticks and test mobile phones.

Power limit: max. 900 mA / port

Overall USB current (USB-C, USB 3.0 and USB 2.0): max. 3 A

Docking connector

See (3) in [Figure 4-2](#).

Connector for the battery pack unit R&S TSM6/B-BP.

DC IN connector

See (4) in [Figure 4-2](#).

Connecting external DC power supply.

Ensure that the voltage and current indicated on the R&S TSM6 match the available power source.

Input voltage range: 11 V to 18 V

Input current: max. 8.5 A

Status LEDs - Mode, Meas

See (5) in [Figure 4-2](#).

Table 4-1: Power states

Device	
Mode LED	State
---	Power off
Green (BLINKING, 1/s)	Power on / power down (in progress)
Green (CONT.)	Power on (finished) / WLAN access point off
Blue (CONT.)	Power on (finished) / WLAN access point on
Blue (BLINKING, 1/s)	Restore/Backup/FW, SW installation (in progress)
Green (BLINKING, 1/5s)	Delayed start activated
Blue (BLINKING, 1/2s)	Scanner mode
Blue (BLINKING rapidly)	Self-test failed/scanner interface not accessible

Table 4-2: Measurement states (R&S SmartONE only)

Device	
Meas LED	State
Yellow (CONT.)	SW loading
Green (CONT.)	SW ready
Green (BLINKING, 1/2s)	SW measuring
Green (BLINKING rapidly)	SW recording
Yellow (BLINKING, 2/s)	SW warning
Red (BLINKING rapidly)	SW error

Power on/off

See (6) in [Figure 4-2](#).

Turns the device on and off.

Cold start: holding the button > 5 sec.

For details, see [Chapter 3.11, "Switching on or off R&S TSM6"](#), on page 24.

Restore button

See (7) in [Figure 4-2](#).

System recovery to factory or user default.

Use a slim, dull object for pressing the button.

Min button hold time for detection: 20 sec

AUX connector (SMA) - synchronization R&S TSME4/6 / R&S TSMExxDC

See (8) in [Figure 4-2](#).

The AUX connector has two functions.

- Input/output: Synchronization with up to 4 connected R&S TSME6 resp. R&S TSMExxDC (requires sync cable R&S TSME6-ZC2, R&S no. 4900.1800.02 or R&S TSME6-ZC4, R&S no. 4900.1817.02)
- Input: Synchronization of R&S TSM6 with an external 10 MHz reference (requires a dedicated sync cable)

SCAN port - GBit LAN interface - external R&S TSME4/6 (RJ-45 connector)

See (9) in [Figure 4-2](#).

The SCAN port provides a high-speed 1 Gbit Ethernet interface with an RJ-45 connector. It is used to connect the R&S TSM6 to a separate R&S TSME6 as a second scanner. It can be used for MIMO scenarios and for increasing bandwidth and measurement rate.

WLAN/Bluetooth on/off

See (10) in [Figure 4-2](#).

Switches WLAN and Bluetooth on and off.

RF IN connector (SMA)

See (11) in [Figure 4-2](#).

RF input of the device.

The maximum input power is +20 dBm/10 V DC.

Do not overload the maximum-allowed input of +20 dBm.

Non-compliance destroys the input mixer.

GPS Ant. connector (SMA) - GPS antenna input

See (12) in [Figure 4-2](#).

Active GPS antenna port (output voltage 3V, max 25 mA).

Status LEDs - Scanner Pwr / State

See (13) in [Figure 4-2](#).

The status LEDs Scanner State and Scanner Pwr indicate different states of the R&S TSM6.

Scanner		
Pwr LED	State LED	State
Green (BLINKING rapidly => ON)	Red (Off-On < 5s => Off)	Scanner configuration ongoing
Green	Green	Connected
Green	Green (BLINKING rapidly)	Measuring
Green	Red (BLINKING, 2/s)	Temperature warning
Green	Red	Temperature error
n.a.	Red (BLINKING, 2/s)	Scanner error Temperature warning
n.a.	Red	Scanner error Temperature error

USB-C (multiport for Thunderbolt, display and standard USB-C 3.1)

See (14) in [Figure 4-2](#).

Connecting external storage devices, tablets and test mobile phones.

Total power (USB-C): max. 3 A

Overall USB current (USB-C, USB 3.0 and USB 2.0): max. 3 A

LAN Port - remote control (RJ-45 connector)

See (15) in [Figure 4-2](#).

The LAN port provides a high-speed 1 Gbit Ethernet interface with an RJ-45 connector. It is used to connect the R&S TSMA6 to a LAN/WAN.

The LAN interface can be used for the following scenarios.

- Remote Control via web-GUI
- Remote Control via Remote Desktop Connection
- LAN interface in NESTOR Probe Mode

Table 4-3: LAN port LEDs

Status	LED
Link status	● yellow
Activity status	● green

HDMI connector

See (16) in [Figure 4-2](#).

Connecting an external monitor. (max. resolution: 2560 x 1600 pixel).

4.3 Built-in GPS receiver


The integrated multi-GNSS (GPS / BeiDou / Galileo / GLONASS) receiver allows to use three satellite systems in parallel. It offers an accuracy improvement of 30 % to 50 % by using a second constellation of satellites.

The following combinations are allowed:

- GPS only
- GPS / GLONASS / Galileo
- GPS / BeiDou

The R&S TSMA6 can perform dead reckoning in tunnels to provide position information even if no satellites are available. The dead reckoning is performed by the device with its built-in electronic gyroscopes.

For enabling untethered dead reckoning, see [Chapter 3.12, "Calibrating GPS for dead reckoning"](#), on page 25.

 Depending on the intended use, the respective valid regulations regarding lightning protection of the antennas and regarding vehicle installation must be observed during installation.

4.4 Built-in WLAN / Bluetooth adapter

The R&S TSMA6 has built-in WLAN/Bluetooth module (Intel® Wireless AC 8265).

The R&S TSMA6 WLAN / Bluetooth adapter allows the following modes.

- Client connection to a distant WLAN network
- Serving as a WLAN access point

Per default, the R&S TSMA6 WLAN access point is switched on. The login credentials are found on the bottom label of the device. The WLAN / Bluetooth can be switched off (flight mode) via a rear panel switch.

Configure the WLAN and Bluetooth settings via web-GUI.

5 Transporting

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the product in a vehicle or using transporting equipment, make sure that the product is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the data sheet, the maximum transport altitude without pressure compensation is 4500 m above sea level.

6 Maintenance, storage and disposal

The product does not require regular maintenance. It only requires occasional cleaning. It is however advisable to check the nominal data from time to time.

Do not use any liquids for cleaning. Cleaning agents, solvents (thinners, acetone), acids and bases can damage the front panel labeling, plastic parts and display.

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 6-1: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

Disposing of batteries

A product that contains a battery cannot be disposed of in the normal household waste after it has come to the end of its service life. It is labeled as follows:



Figure 6-2: Disposal information in line with EU battery directive

Dispose of batteries as specified by the local waste disposal agency. Alternatively, you can contact the Rohde & Schwarz local service representative.

For information on returning batteries to Rohde & Schwarz subsidiaries, see ["Handling batteries safely"](#) on page 7.

7 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 7-1: QR code to the Rohde & Schwarz support page

Index

A

Application cards	13
Application notes	13

B

Brochures	13
-----------------	----

C

Casing	
Labels	8
Customer support	37

D

Data sheets	13
Dead reckoning	32

G

Getting started	12
-----------------------	----

H

HDMI connector	32
Help	12

L

Labels on casing	8
LED	
LAN Connector	32

M

Multi-GNSS	32
------------------	----

O

Open source acknowledgment (OSA)	13
--	----

R

Release notes	13
---------------------	----

S

Safety instructions	5, 13
Warning messages	11
Specification	13

U

User manual	12
-------------------	----

V

Videos	12
--------------	----

W

Warning messages	11
White papers	13