

R&S®FSV3-K7

AM/FM/PM Modulation Analysis

Option

User Manual



1178904902
Version 10



This manual applies to the following R&S®FSV3000 and R&S®FSVA3000 models with firmware version 2.20 and higher:

- R&S®FSV3004 (1330.5000K04) / R&S®FSVA3004 (1330.5000K05)
- R&S®FSV3007 (1330.5000K07) / R&S®FSVA3007 (1330.5000K08)
- R&S®FSV3013 (1330.5000K13) / R&S®FSVA3013 (1330.5000K14)
- R&S®FSV3030 (1330.5000K30) / R&S®FSVA3030 (1330.5000K31)
- R&S®FSV3044 (1330.5000K43) / R&S®FSVA3044 (1330.5000K44)
- R&S®FSV3050 (1330.5000K50) / R&S®FSVA3050 (1330.5000K51)

The following firmware options are described:

- R&S FSV/A-K7 (1330.5022.02)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1178.9049.02 | Version 10 | R&S®FSV3-K7

The following abbreviations are used throughout this manual: R&S®FSVA3000 is abbreviated as R&S FSVA3000. R&S®FSV3000 is abbreviated as R&S FSV3000. R&S®FSV/A refers to both the R&S FSV3000 and the R&S FSVA3000. Products of the R&S®SMW family, e.g. R&S®SMW200A, are abbreviated as R&S SMW.

Contents

1	Documentation overview.....	9
1.1	Getting started manual.....	9
1.2	User manuals and help.....	9
1.3	Service manual.....	10
1.4	Instrument security procedures.....	10
1.5	Printed safety instructions.....	10
1.6	Specifications and brochures.....	10
1.7	Release notes and open-source acknowledgment (OSA).....	10
1.8	Application notes, application cards, white papers, etc.....	11
1.9	Videos.....	11
2	Welcome to the R&S FSV3 AM/FM/PM Modulation Analysis applica- tion.....	12
2.1	Starting AM/FM/PM Modulation Analysis.....	12
2.2	Understanding the display information.....	13
3	Measurements and result displays.....	16
4	Measurement basics.....	27
4.1	Demodulation process.....	27
4.2	Demodulation bandwidth.....	29
4.3	Sample rate and demodulation bandwidth.....	30
4.4	AF triggers.....	31
4.5	AF filters.....	32
4.6	Time domain zoom.....	32
4.7	I/Q data import and export.....	33
5	Configuration.....	35
5.1	Configuration overview.....	35
5.2	Configuration according to standards.....	37
5.3	Input and frontend settings.....	39
5.3.1	Input source settings.....	39
5.3.1.1	Radio frequency input.....	39
5.3.1.2	Settings for input from I/Q data files.....	42

5.3.2	Amplitude settings.....	43
5.3.3	Frequency.....	47
5.4	Trigger configuration.....	48
5.4.1	Trigger source settings.....	48
5.4.2	Trigger input and output settings.....	52
5.5	Data acquisition.....	54
5.5.1	Bandwidth settings.....	54
5.5.2	Sweep settings.....	55
5.6	Demodulation display.....	59
5.7	Demodulation.....	59
5.7.1	Basic demodulation measurement parameters (Demod).....	59
5.7.2	Demodulation spectrum.....	63
5.7.2.1	AF evaluation.....	63
5.7.2.2	RF evaluation.....	64
5.7.3	AF filter.....	65
5.7.4	Scaling.....	69
5.7.4.1	AF evaluation.....	69
5.7.4.2	RF evaluation.....	71
5.7.5	Units.....	73
5.7.6	Result table settings.....	74
5.7.7	Settling time.....	77
5.8	Output settings.....	79
5.8.1	Output settings.....	79
5.8.2	Analog demod output settings.....	80
5.9	Adjusting settings automatically.....	82
6	Analysis.....	86
6.1	Trace settings.....	86
6.2	Spectrogram settings.....	90
6.2.1	General spectrogram settings.....	90
6.2.2	Color map settings.....	94
6.3	Trace / data export configuration.....	95
6.4	Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application.....	99

6.4.1	Marker settings.....	99
6.4.1.1	Individual marker setup.....	99
6.4.1.2	General marker settings.....	102
6.4.2	Marker search settings and positioning functions.....	104
6.4.2.1	Marker search settings.....	104
6.4.2.2	Positioning functions.....	105
6.4.3	Marker search settings for spectrograms.....	106
6.4.4	Marker function configuration.....	109
6.4.4.1	Measuring characteristic bandwidths (n db down marker).....	110
6.4.4.2	Phase noise measurement marker.....	112
6.4.4.3	Marker peak list.....	114
6.4.4.4	Measuring the power in a channel (band power marker).....	118
6.4.4.5	AF phase marker.....	121
6.4.4.6	Deactivating all marker functions.....	122
7	How to perform measurements in the R&S FSV3 AM/FM/PM Modulation Analysis application.....	123
7.1	How to export trace data and numerical results.....	124
8	Measurement example: demodulating an FM signal.....	126
9	Optimizing and troubleshooting the measurement.....	131
10	Remote commands for AM/FM/PM Modulation Analysis.....	132
10.1	Introduction.....	133
10.1.1	Conventions used in descriptions.....	134
10.1.2	Long and short form.....	134
10.1.3	Numeric suffixes.....	135
10.1.4	Optional keywords.....	135
10.1.5	Alternative keywords.....	135
10.1.6	SCPI parameters.....	136
10.1.6.1	Numeric values.....	136
10.1.6.2	Boolean.....	137
10.1.6.3	Character data.....	137
10.1.6.4	Character strings.....	138
10.1.6.5	Block data.....	138

10.2	Common suffixes.....	138
10.3	Activating analog modulation analysis.....	138
10.4	Configuring the measurement.....	142
10.4.1	Managing standard settings.....	142
10.4.2	Configuring the input.....	143
10.4.2.1	RF input.....	144
10.4.2.2	Configuring file input.....	146
10.4.2.3	Using external mixers.....	147
	Basic settings.....	147
	Mixer settings.....	150
	Conversion loss table settings.....	155
	Programming example: working with an external mixer.....	159
10.4.2.4	Setting up probes.....	161
10.4.2.5	Working with power sensors.....	166
	Configuring power sensors.....	166
	Configuring power sensor measurements.....	167
	Triggering with power sensors.....	174
10.4.2.6	External generator control.....	176
	Measurement configuration.....	176
	Interface configuration.....	180
	Source calibration.....	181
10.4.3	Configuring the output.....	183
10.4.4	Frequency settings.....	186
10.4.5	Configuring the vertical axis (amplitude, scaling).....	188
10.4.5.1	Amplitude settings.....	188
10.4.5.2	Configuring the attenuation.....	190
10.4.5.3	Configuring a preamplifier.....	192
10.4.5.4	Scaling the Y-axis.....	193
10.4.6	Configuring data acquisition.....	196
10.4.7	Triggering.....	200
10.4.7.1	Configuring the triggering conditions.....	200
10.4.7.2	Configuring the trigger output.....	206
10.4.8	Configuring demodulation.....	209

10.4.8.1	Basic demodulation settings.....	209
10.4.8.2	Time domain zoom settings.....	212
10.4.8.3	Configuring the demodulation spectrum.....	214
	AF evaluation.....	214
	RF evaluation.....	215
10.4.8.4	(Post-processing) AF filters.....	216
10.4.8.5	Defining the scaling and units.....	221
10.4.8.6	Scaling for AF evaluation.....	221
10.4.8.7	Scaling for RF evaluation.....	222
10.4.8.8	Units.....	222
10.4.8.9	Relative demodulation results.....	223
10.4.8.10	Settling time.....	226
10.4.9	Adjusting settings automatically.....	228
10.5	Capturing data and performing sweeps.....	232
10.6	Configuring the result display.....	235
10.6.1	General window commands.....	236
10.6.2	Working with windows in the display.....	236
10.7	Retrieving results.....	244
10.7.1	Retrieving trace results.....	244
10.7.2	Exporting trace results.....	247
10.7.3	Retrieving result summary values.....	250
10.7.4	Formats for returned values: ASCII format and binary format.....	255
10.7.5	Reference: ASCII file export format.....	255
10.8	Analyzing results.....	256
10.8.1	Configuring spectrograms.....	256
10.8.1.1	Configuring a spectrogram measurement.....	256
10.8.1.2	Configuring the color map.....	261
10.8.2	Configuring standard traces.....	263
10.8.3	Working with markers remotely.....	270
10.8.3.1	Setting up individual markers.....	270
10.8.3.2	General marker settings.....	277
10.8.3.3	Marker search (spectrograms).....	278
	Using markers.....	279

Using delta markers.....	283
10.8.3.4 Marker search settings.....	287
10.8.3.5 Positioning the marker.....	288
Positioning normal markers.....	288
Positioning delta markers.....	290
10.8.3.6 Configuring special marker functions.....	292
Fixed reference marker settings.....	293
Marker peak lists.....	295
N db down marker.....	299
Phase noise measurement marker.....	303
Band power marker.....	304
Configuring and retrieving AF phase marker values.....	308
10.8.4 Marker search (spectrograms).....	309
10.8.4.1 Using markers.....	309
10.8.4.2 Using delta markers.....	314
10.8.5 Defining limit checks.....	318
10.8.5.1 Configuring limit lines.....	318
10.8.5.2 Managing limit lines.....	327
10.8.5.3 Checking the results of a limit check.....	330
10.8.5.4 Programming example: using limit lines.....	331
Example: configuring limit lines.....	331
Example: performing a limit check.....	332
10.9 Importing and exporting I/Q data and results.....	334
10.10 Deprecated commands.....	335
10.11 Programming example.....	336
Annex.....	339
A Reference.....	339
A.1 Predefined standards and settings.....	339
List of Remote Commands (AnalogModAnalysis).....	342
Index.....	354

1 Documentation overview

This section provides an overview of the R&S FSV/A user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/FSVA3000

www.rohde-schwarz.com/manual/FSV3000

Further documents are available at:

www.rohde-schwarz.com/product/FSVA3000

www.rohde-schwarz.com/product/FSV3000

1.1 Getting started manual

Introduces the R&S FSV/A and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

1.2 User manuals and help

Separate user manuals are provided for the base unit and the firmware applications:

- **Base unit manual**
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- **Firmware application manual**
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the R&S FSV/A is not included.

The contents of the user manuals are available as help in the R&S FSV/A. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

1.3 Service manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

[R&S®FSVA3000/FSV3000 Service manual](#)

1.4 Instrument security procedures

Deals with security issues when working with the R&S FSV/A in secure areas. It is available for download on the internet.

1.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

1.6 Specifications and brochures

The specifications document, also known as the data sheet, contains the technical specifications of the R&S FSV/A. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/FSV3000 /

www.rohde-schwarz.com/brochure-datasheet/FSVA3000

1.7 Release notes and open-source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current software version, and describe the software installation.

The software uses several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/FSV3000 /
www.rohde-schwarz.com/firmware/FSVA3000

1.8 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/FSV3000 /
www.rohde-schwarz.com/application/FSVA3000

1.9 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>

2 Welcome to the R&S FSV3 AM/FM/PM Modulation Analysis application

The R&S FSV3 AM/FM/PM Modulation Analysis application converts the R&S FSV/A into an analog modulation analyzer for amplitude-, frequency- or phase-modulated signals. It measures not only characteristics of the useful modulation, but also factors such as residual FM or synchronous modulation.

The digital signal processing in the R&S FSV/A, used in the Spectrum application for digital IF filters, is also ideally suited for demodulating AM, FM, or PM signals.

The firmware option R&S FSV3-K7 provides the necessary measurement functions.

The R&S FSV3 AM/FM/PM Modulation Analysis application features:

- AM, FM, and PM demodulation, with various result displays:
 - Modulation signal versus time
 - Spectrum of the modulation signal (FFT)
 - RF signal power versus time
 - Spectrum of the RF signal
- Determining maximum, minimum and average or current values in parallel over a selected number of measurements
- Maximum accuracy and temperature stability due to sampling (digitization) already at the IF and digital down-conversion to the baseband (I/Q)
- Error-free AM to FM conversion and vice versa, without deviation errors, frequency response or frequency drift at DC coupling
- Relative demodulation, in relation to a user-defined or measured reference value

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S FSV/A User Manual. The latest version is available for download at the product homepage <http://www.rohde-schwarz.com/product/FSVA3000>.

Installation

You can find detailed installation instructions in the R&S FSV/A Getting Started manual or in the Release Notes.

2.1 Starting AM/FM/PM Modulation Analysis

AM/FM/PM Modulation Analysis is a separate application on the R&S FSV/A.

To activate AM/FM/PM Modulation Analysis

1. Select the [MODE] key.

A dialog box opens that contains all operating modes and applications currently available on your R&S FSV/A.

2. Select the "AM FM PM Analog Demod" item.



The R&S FSV/A opens a new channel for the application for analog modulation analysis.


The measurement is started immediately with the default settings. It can be configured in the analog modulation analysis "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu (see [Chapter 5.1, "Configuration overview"](#), on page 35).

Multiple Channels and Sequencer Function

When you activate an application, a new channel is created which determines the measurement settings for that application ("Channel"). The same application can be activated with different measurement settings by creating several "Channel"s for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel. However, to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently defined "Channel"s are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label.

The result displays of the individual channels are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function, see the R&S FSV/A User Manual.

2.2 Understanding the display information

The following figure shows a measurement diagram during analog modulation analysis. All different information areas are labeled. They are explained in more detail in the following sections.



- 1 = Channel bar for firmware and measurement settings
- 2 = Diagram area
- 3 = Window title bar with diagram-specific (trace) information
- 4 = Diagram footer with diagram-specific information, depending on result display
- 5 = Instrument status bar with error messages and date/time display

Channel bar information

In the Analog Modulation Analysis application, the R&S FSV/A shows the following settings:

Table 2-1: Information displayed in the channel bar in the application for analog modulation analysis

Ref Level	Reference level
m.+el.Att	Mechanical and electronic RF attenuation
Offset	Reference level offset
AQT	Measurement time for data acquisition.
RBW	Resolution bandwidth
DBW	Demodulation bandwidth
Freq	Center frequency for the RF signal

Window title bar information

For each diagram, the header provides the following information:



Figure 2-1: Window title bar information in the application for analog modulation analysis

- 1 = Window number
- 2 = Window type
- 3 = Trace color
- 4 = Trace number
- 5 = Detector
- 6 = Trace mode
- 7 = Reference value (at the defined reference position)
- 8 = AF coupling (AC/DC), only in AF time domains, if applicable
- 9 = Results are selected for demodulation output

Diagram footer information

The diagram footer (beneath the diagram) contains the following information, depending on the evaluation:

"RF Spectrum"		
CF: Center frequency of input signal	Sweep points	Span: measured span

RF Time domain		
CF: Center frequency of input signal	Sweep points	Time per division

AF Spectrum		
AF CF: center frequency of demodulated signal	Sweep points	AF Span: evaluated span

AF Time domain		
CF: Center frequency of input signal	Sweep points	Time per division

For most modes, the number of sweep points shown in the display are indicated in the diagram footer. In zoom mode, the (rounded) number of currently displayed points are indicated.

Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram.

Furthermore, the progress of the current operation is displayed in the status bar.

3 Measurements and result displays

Access: "Overview" > "Display Config"

Or: [MEAS] > "Display Config"

The data that was measured by the R&S FSV/A can be evaluated using various different methods. In the Analog Modulation Analysis application, up to six evaluation methods can be displayed simultaneously in separate windows. The results can be displayed as absolute deviations or relative to a reference value or level.



The abbreviation "AF" (for Audio Frequency) refers to the demodulated AM, FM or PM signal.


Basis for evaluation

All evaluations are based on the I/Q data set acquired during the measurement. The spectrum of the modulated signal to be evaluated is determined by the demodulation bandwidth. However, it can be restricted to a limited span ("AF Span") if only part of the signal is of interest. Furthermore, the time base for evaluations in the time domain can be restricted to analyze a smaller extract in more detail, see [Chapter 4.6, "Time domain zoom"](#), on page 32.

AM Time Domain	16
FM Time Domain	17
PM Time Domain	18
AM Spectrum	19
FM Spectrum	20
PM Spectrum	21
RF Time Domain	22
RF Spectrum	23
Result Summary	24
Marker Table	26
Marker Peak List	26

AM Time Domain

Displays the modulation depth of the demodulated AM signal (in %) versus time.

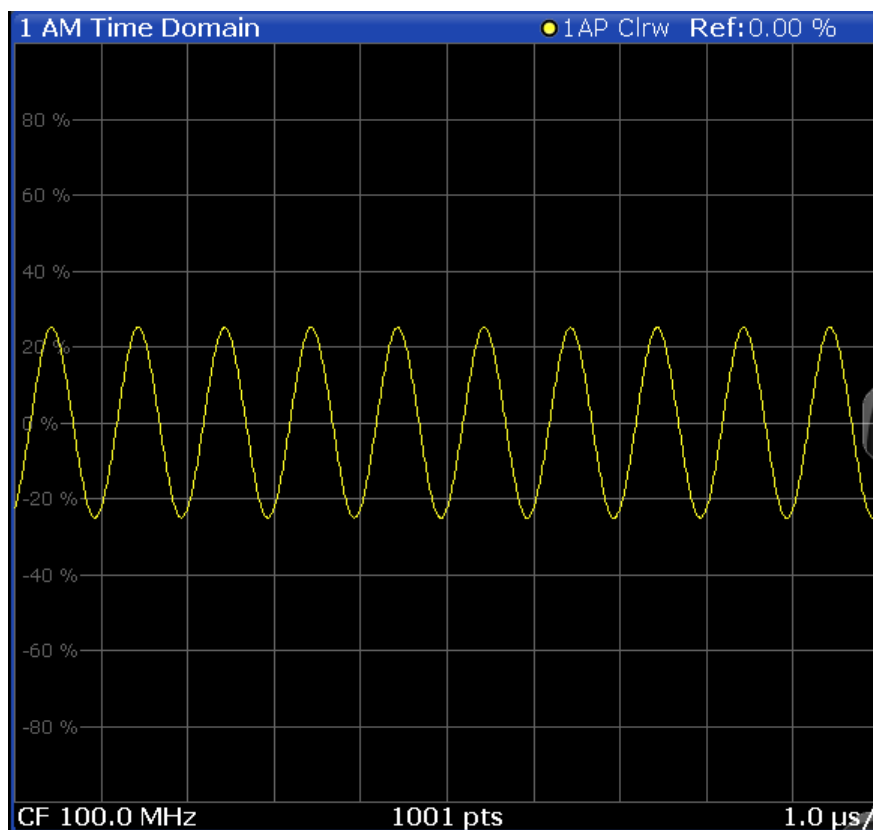

Optionally, the settling time can be evaluated and displayed, see [Chapter 5.7.7, "Settling time"](#), on page 77.


Remote command:

```
LAY:ADD? '1',RIGHT,'XTIM:AM:REL'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 237)

FM Time Domain

Displays the frequency spectrum of the demodulated FM signal versus time.

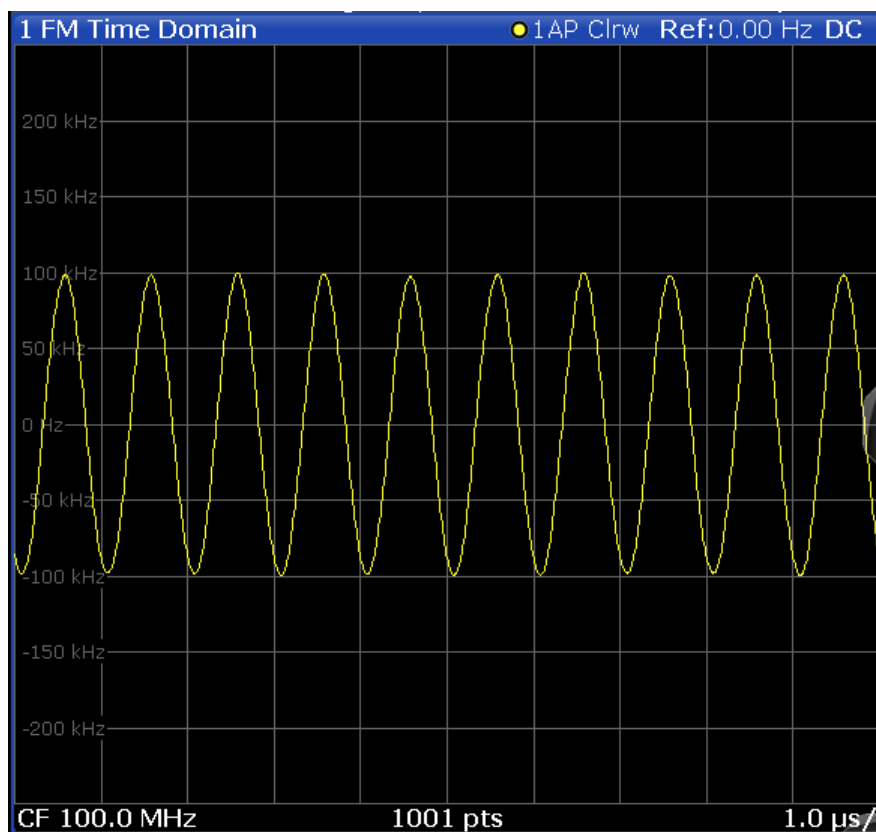

Optionally, the settling time can be evaluated and displayed, see [Chapter 5.7.7, "Settling time"](#), on page 77.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:FM'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 237)

PM Time Domain

Displays the phase deviations of the demodulated PM signal (in rad or °) versus time.

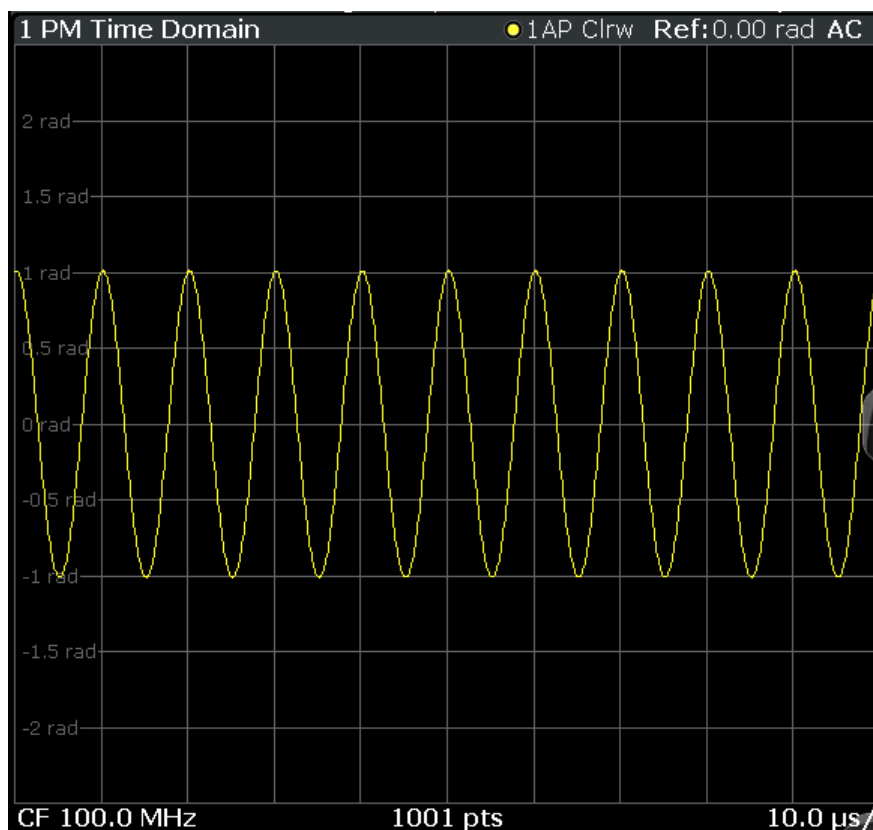

Optionally, the settling time can be evaluated and displayed, see [Chapter 5.7.7, "Settling time"](#), on page 77.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:PM'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 237)

AM Spectrum

Displays the modulation depth of the demodulated AM signal (in % or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.

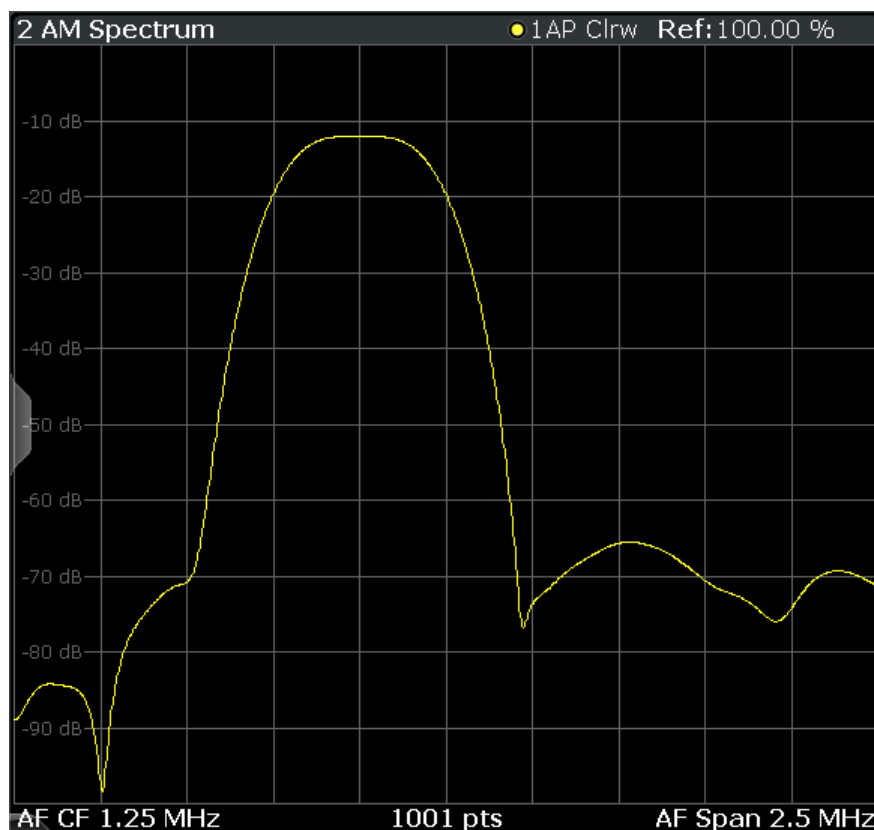

Note: If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIME:AM:REL:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 237)

FM Spectrum

Displays the frequency deviations of the demodulated FM signal (in Hz or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.

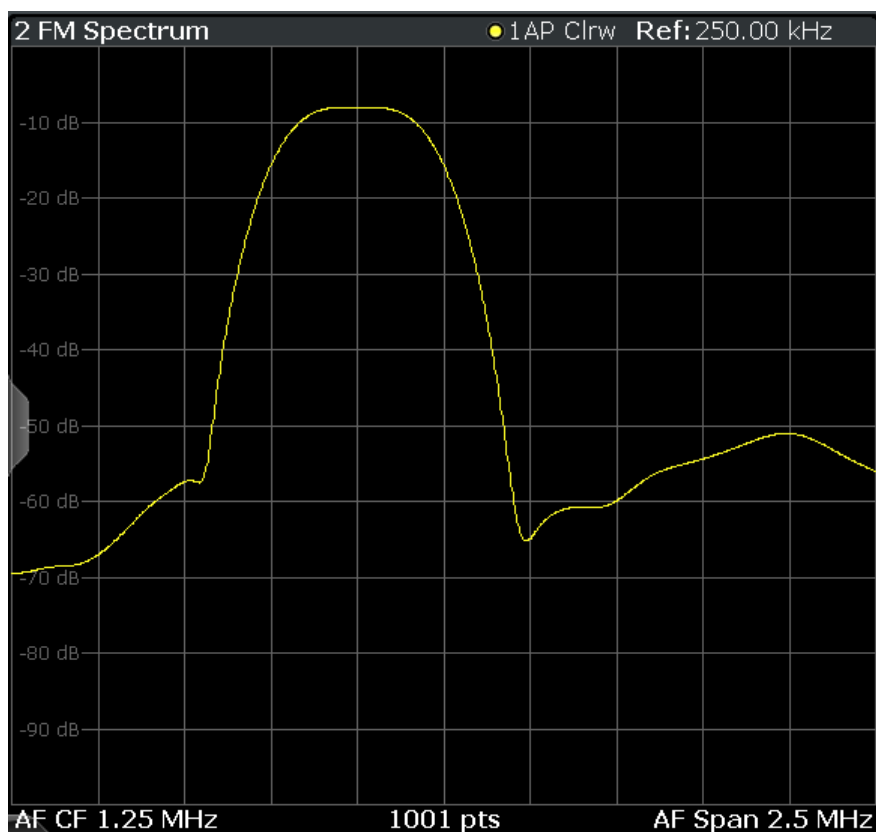

Note: If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIME:FM:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 237)

PM Spectrum

Displays the phase deviations of the demodulated PM signal (in rad, ° or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.

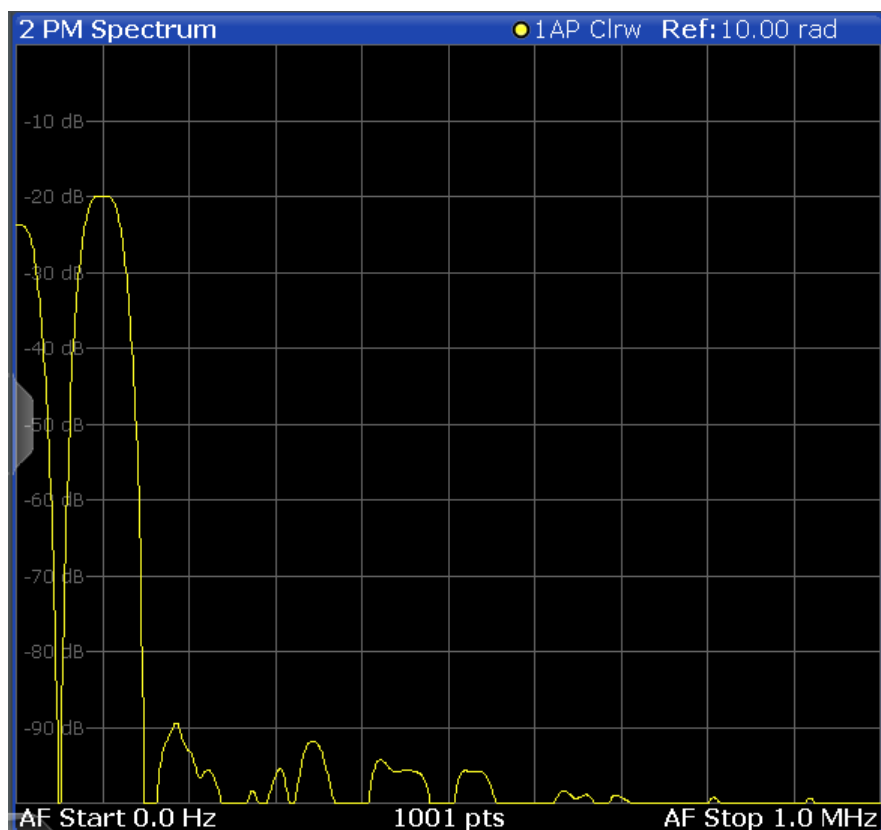

Note: If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIME:PM:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 237)

RF Time Domain

Displays the RF power of the input signal versus time. The level values represent the magnitude of the I/Q data set.

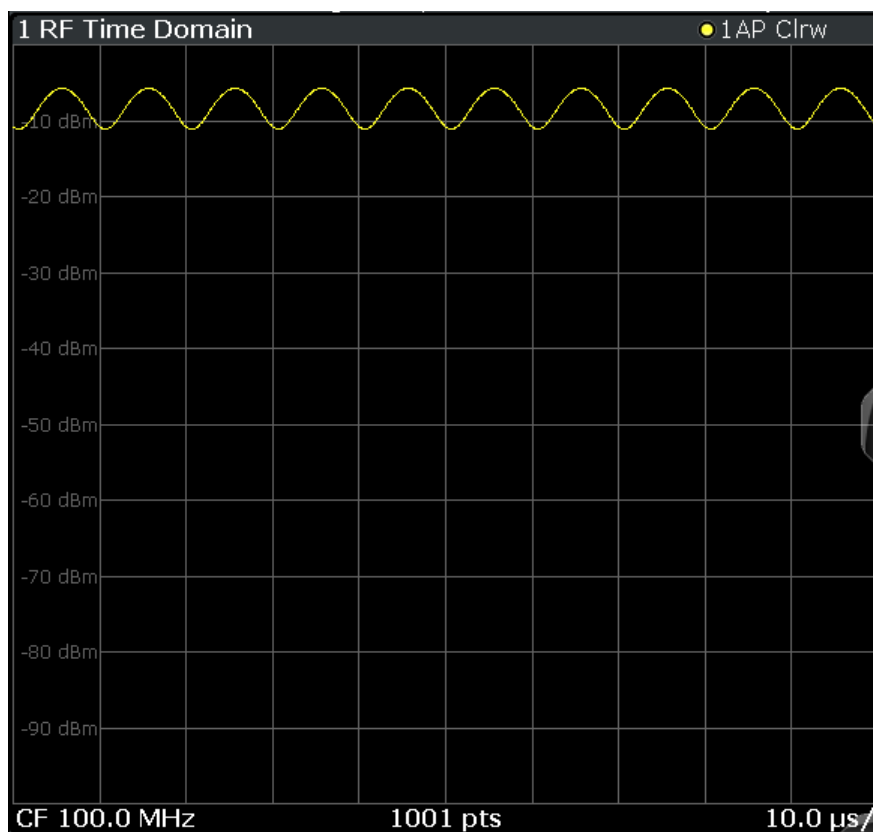

Optionally, the settling time can be evaluated and displayed, see [Chapter 5.7.7, "Settling time"](#), on page 77.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:AM'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 237)

RF Spectrum

Displays the spectrum of the input signal. In contrast to the Spectrum application, the frequency values are determined using FFT from the recorded I/Q data set.

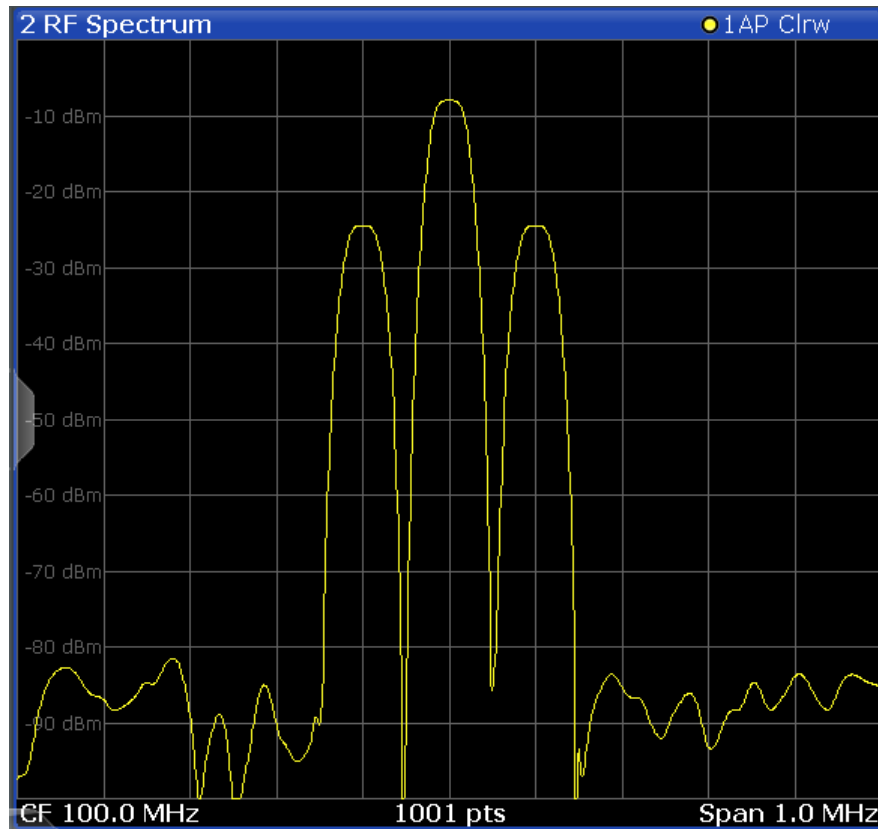

Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:SPECTRUM'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 237)

Result Summary

The "result summary" displays the results of the demodulation functions for all windows in a table.

4 Result Summary									
	Carrier Power -20.69 dBm				Carrier Offset 390.56 Hz				
	Settling Time	+Peak	-Peak	±Peak/2	RMS	Mod. Freq.	SINAD	DISTORT	THD
FM	1.022 µs	4.8423 MHz	-1.8343 MHz	3.3383 MHz	1.1283 MHz	---	---	---	---

The following general results are provided:

For each demodulation, the following results are provided:

Label	Description
"Carr Power"	Measured carrier power
"Carr Offset"	Carrier offset to nominal center frequency
"Mod. Depth"	Modulation depth

Table 3-1: Result summary description

Label	Description
"Settling Time"	Time after which signal remains in a specified value range. Only evaluated and displayed if enabled, see Chapter 5.7.7, "Settling time" , on page 77.
"Peak"	Positive peak (maximum)
"-Peak"	Negative peak (minimum)
"Peak/2"	Average of positive and negative peaks
"RMS"	Root Mean Square value
"Mod Freq"	Modulation frequency
"SINAD"	Signal-to-noise-and-distortion (Calculated only if AF Spectrum is displayed) Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation. $SINAD[dB] = 20 \cdot \log \left[\frac{P_{total}}{P_{Noise} + P_{distortion}} \right]$
"DISTORT"	Modulation distortion in % (Calculated only if "SINAD" is also calculated) Measures the distortion of the modulation in relation to the total power of the signal inside the AF spectrum span. Indicates the quality of the modulation. $Modulation\ distortion = \frac{\sqrt{P_{total} - P_{signal}}}{\sqrt{P_{total}}} * 100\%$
"THD"	Total harmonic distortion The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic. (Calculated only if AF Spectrum is displayed) $THD[dB] = 20 \cdot \log \left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}} \right]$

Note: Relative demodulation results. Optionally, the demodulation results in relation to user-defined or measured reference values are determined. See [Chapter 5.7.6, "Result table settings"](#), on page 74.

In addition, the following general information for the input signal is provided:

- "Carrier Power": the power of the carrier without modulation
- "Carrier Offset": the deviation of the calculated carrier frequency to the ideal carrier frequency
- "Modulation Depth" (AM or "RF Time Domain" only): the difference in amplitude the carrier signal is modulated with

Remote command:

LAY:ADD? '1', RIGH, RSUM, see LAYout:ADD[:WINDow]? on page 237

Results:

[Chapter 10.7.3, "Retrieving result summary values"](#), on page 250

Marker Table

Displays a table with the current marker values for the active markers.

This table is displayed automatically if configured accordingly.

1 Marker Table							
Wnd	Type	Ref	Trc	X-Value	Y-Value	Function	Function Result
2	M1		1	2.1725 ms	-6.80 dBm		
2	D2	M1	1	13.859 ms	-0.00 dB		
2	D3	M1	1	4.6259 ms	-0.00 dB		
2	D4	M1	1	9.2331 ms	-0.00 dB		

Tip: To navigate within long marker tables, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, MTAB, see LAYout:ADD[:WINDow]? on page 237

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 272

[CALCulate<n>:MARKer<m>:Y?](#) on page 272

Marker Peak List

The marker peak list determines the frequencies and levels of peaks in the spectrum or time domain. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

3 Marker Peak List				
Wnd	No	X-Value	Y-Value	
2	1	1.086245 ms	-75.810 dBm	
2	2	2.172490 ms	-6.797 dBm	
2	3	3.258736 ms	-76.448 dBm	
2	4	4.831918 ms	-76.676 dBm	
2	5	6.255274 ms	-76.482 dBm	
2	6	6.798397 ms	-6.800 dBm	
2	7	9.233084 ms	-76.519 dBm	
2	8	10.075861 ms	-76.172 dBm	
2	9	11.405574 ms	-6.801 dBm	

Tip: To navigate within long marker peak lists, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, PEAK, see LAYout:ADD[:WINDow]? on page 237

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 272

[CALCulate<n>:MARKer<m>:Y?](#) on page 272

4 Measurement basics

Some background knowledge on basic terms and principles used in Analog Modulation Analysis measurements is provided here for a better understanding of the required configuration settings.

• Demodulation process	27
• Demodulation bandwidth	29
• Sample rate and demodulation bandwidth	30
• AF triggers	31
• AF filters	32
• Time domain zoom	32
• I/Q data import and export	33

4.1 Demodulation process

The demodulation process is shown in [Figure 4-1](#). All calculations are performed simultaneously with the same I/Q data set. Magnitude (= amplitude) and phase of the complex I/Q pairs are determined. The frequency result is obtained from the differential phase.

For details on general I/Q data processing in the R&S FSV/A, refer to the reference part of the I/Q Analysis remote control description in the R&S FSV/A User Manual.

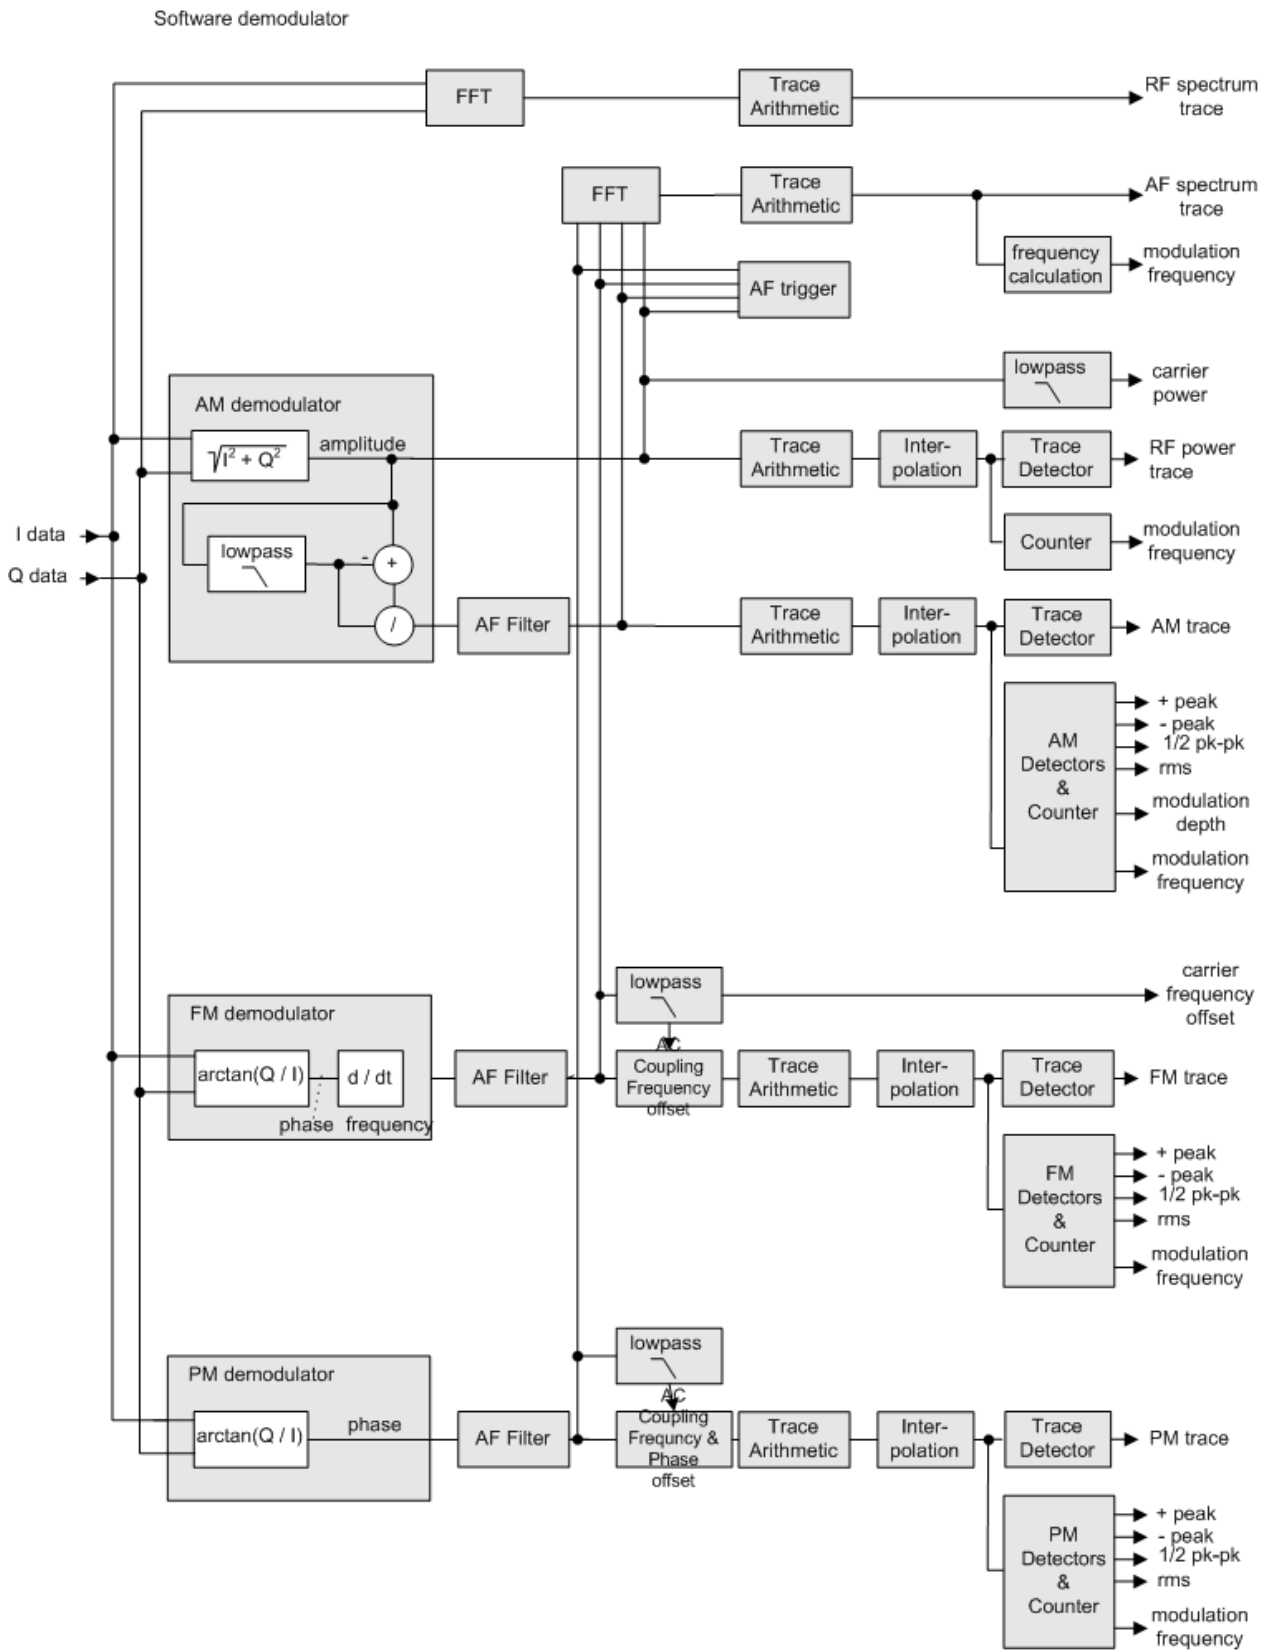


Figure 4-1: Block diagram of software demodulator

The AM DC, FM DC and PM DC raw data of the demodulators is fed into the "Trace Arithmetic" block that combines consecutive data sets. Possible trace modes are: Clear Write, Max Hold, Min Hold and Average. The output data of the "Trace Arithmetic" block can be read via remote control ([SENS:]ADEM:<evaluation>:RES?, see [SENSe:]ADEMod:AM[:ABSolute] [:TDOMain]:RESult? on page 245.

The collected measured values are evaluated by the selected detector. The result is displayed on the screen and can be read out via remote control.

In addition, important parameters are calculated:

- A counter determines the modulation frequency for AM, FM, and PM.
- average power = carrier power (RF power)
- average frequency = carrier frequency offset (FM)
- The modulation depth or the frequency or phase deviation; the deviations are determined from the trace data

AC coupling is possible with FM and PM display.

4.2 Demodulation bandwidth

The demodulation bandwidth determines the span of the signal that is demodulated. It is not the 3-dB bandwidth of the filter, but the useful bandwidth which is distortion-free regarding phase and amplitude.

Therefore the following formulas apply:

- AM: demodulation bandwidth $\geq 2 \times$ modulation frequency
- FM: demodulation bandwidth $\geq 2 \times$ (frequency deviation + modulation frequency)
- PM: demodulation bandwidth $\geq 2 \times$ modulation frequency \times (1 + phase deviation)



If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be increased by the carrier offset, in addition to the requirement described above. The bandwidth must also be increased if FM or PM AC coupling is selected.

In general, select the demodulation bandwidth as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM.

For help on determining the adequate demodulation bandwidth, see "[Determining the demodulation bandwidth](#)" on page 131.

A practical example is described in [Chapter 8, "Measurement example: demodulating an FM signal"](#), on page 126.

4.3 Sample rate and demodulation bandwidth

The maximum demodulation bandwidths that can be obtained during the measurement, depending on the sample rate, are listed in the tables below for different demodulation filter types. The allowed value range of the measurement time and trigger offset depends on the selected demodulation bandwidth and demodulation filter. If the AF filter or the AF trigger are not active, the measurement time increases by 20 %.



A maximum of 24 million samples can be captured, assuming sufficient memory is available; thus the maximum measurement time can be determined according to the following formula:

$$\text{Meas.time}_{\text{max}} = \text{Sample count}_{\text{max}} / \text{sample rate}$$

The minimum trigger offset is $(-\text{Meas.time}_{\text{max}})$

Table 4-1: Available demodulation bandwidths and corresponding sample rates

Demodulation BW	Sample Rate (Flat Top)	Sample Rate (Gaussian Top)
100 Hz	122.0703125 Hz	400 Hz
200 Hz	244.140625 Hz	800 Hz
400 Hz	488.28125 Hz	1.6 kHz
800 Hz	976.5625 Hz	3.2 kHz
1.6 kHz	1.953125 kHz	6.4 kHz
3.2 kHz	3.90625 kHz	12.8 kHz
6.4 kHz	7.8125 kHz	25.6 kHz
12.5 kHz	15.625 kHz	50 kHz
25 kHz	31.25 kHz	100 kHz
50 kHz	62.5 kHz	200 kHz
100 kHz	125 kHz	400 kHz
200 kHz	250 kHz	800 kHz
400 kHz	500 kHz	1.6 MHz
800 kHz	1 MHz	3.2 MHz
1.6 MHz	2 MHz	6.4 MHz
3 MHz	4 MHz	12 MHz
5 MHz	8 MHz	20 MHz
8 MHz	16 MHz	32 MHz
10 MHz	32 MHz	40 MHz
18 MHz	32 MHz	72 MHz
28 MHz	64 MHz	112 MHz

Demodulation BW	Sample Rate (Flat Top)	Sample Rate (Gaussian Top)
40 MHz	64 MHz	160 MHz
80 MHz	128 MHz	320 MHz



Flat top filters require an I/Q bandwidth at least the size of the demodulation bandwidth on the R&S FSV/A. Gauss filters require at least twice the size of the demodulation bandwidth on the R&S FSV/A. If necessary, install optional bandwidth extensions on the R&S FSV/A to use the required demodulation filter.

Example:

For example, a 500 MHz flat top filter requires a bandwidth extension of 500 MHz or larger (e.g. B512). A 500 MHz Gauss filter requires a bandwidth extension of 1000 MHz or larger (e.g. B1200).

Large numbers of samples

Principally, the R&S FSV/A can handle up to 24 million samples. However, when 480001 samples are exceeded, all traces that are not currently being displayed in a window are deactivated to improve performance. The traces can only be activated again when the samples are reduced.



Effects of measurement time on the stability of measurement results

Despite amplitude and frequency modulation, the display of carrier power and carrier frequency offset is stable.

Stability is achieved by a digital filter which sufficiently suppresses the modulation. As a prerequisite, the measurement time must be $\geq 3 \times 1 / \text{modulation frequency}$, i.e. at least three periods of the AF signal are recorded.

The mean carrier power for calculating the AM is also calculated with a digital filter. The filter returns stable results after a measurement time of $\geq 3 \times 1 / \text{modulation frequency}$, i.e. at least three cycles of the AF signal must be recorded before a stable AM can be shown.

4.4 AF triggers

The Analog Modulation Analysis application allows triggering to the demodulated signal. The display is stable if a minimum of five modulation periods are within the recording time.

Triggering is always DC-coupled. Therefore triggering is possible directly to the point where a specific carrier level, phase or frequency is exceeded or not attained.

4.5 AF filters

Additional filters applied after demodulation help filter out unwanted signals, or correct pre-emphasized input signals. A CCITT filter allows you to evaluate the signal by simulating the characteristics of human hearing.

4.6 Time domain zoom

For evaluations in the time domain, the demodulated data for a particular time span can be extracted and displayed in more detail using the "Time Domain Zoom" function. Zooming is useful if the measurement time is very large and thus each sweep point represents a large time span. The time domain zoom function distributes the available sweep points only among the time span defined by the zoom area length. The time span displayed per division of the diagram is decreased. Thus, the display of the extracted time span becomes more precise.

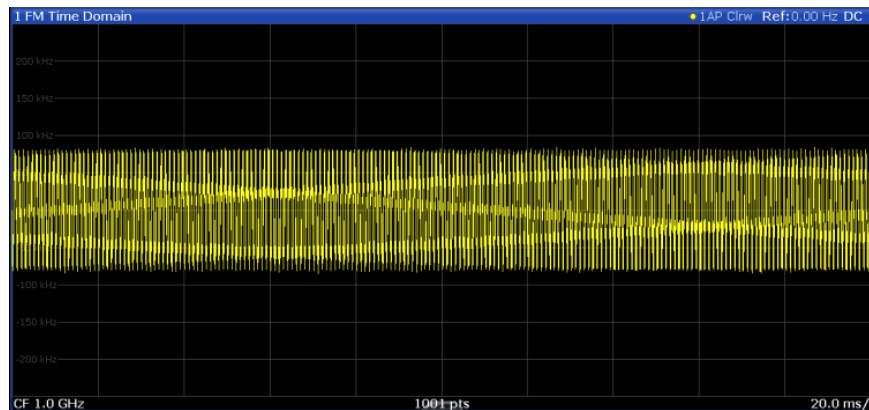


Figure 4-2: FM time domain measurement with a very long measurement time (200 ms)


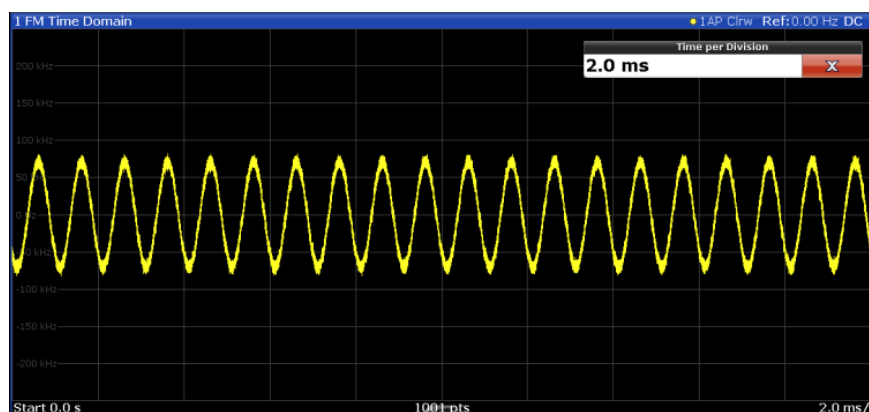


Figure 4-3: FM time domain measurement with time domain zoom (2.0 ms per division)

The time domain zoom area affects not only the diagram display, but the entire evaluation for the current window.

In contrast to the time domain zoom, the graphical zoom is available for all diagram evaluations. However, the graphical zoom is useful only if more measured values than trace points are available. The (time) span represented by each measurement point remains the same.

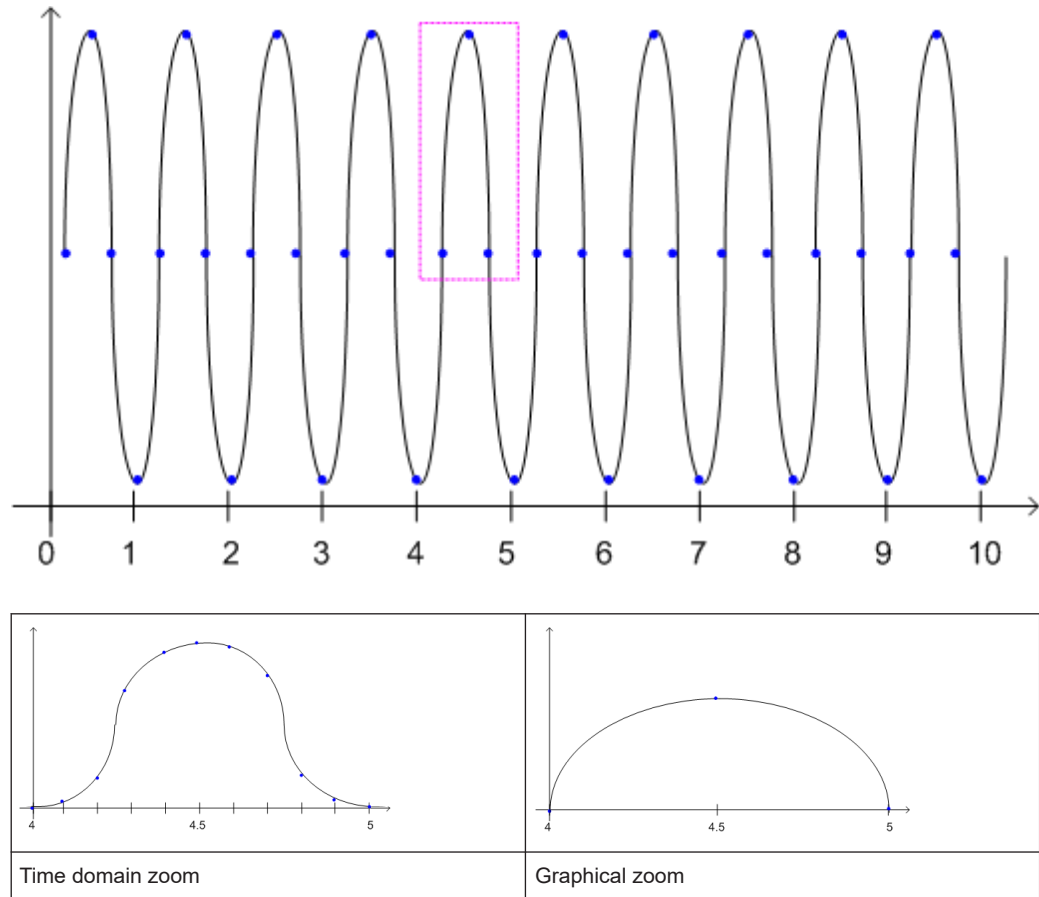

4.7 I/Q data import and export

Baseband signals mostly occur as so-called complex baseband signals, i.e. a signal representation that consists of two channels; the inphase (I) and the quadrature (Q) channel. Such signals are referred to as I/Q signals. The complete modulation information and even distortion that originates from the RF, IF or baseband domains can be analyzed in the I/Q baseband.

Importing and exporting I/Q signals is useful for various applications:

- Generating and saving I/Q signals in an RF or baseband signal generator or in external software tools to analyze them with the R&S FSV/A later
- Capturing and saving I/Q signals with the R&S FSV/A to analyze them with the R&S FSV/A or an external software tool later

As opposed to storing trace data, which can be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. Multi-channel data is not supported.

The data is stored as complex values in 32-bit floating-point format. By default, the I/Q data is stored in a format with the file extension `.iq.tar`.

For a detailed description, see the R&S FSV/A I/Q Analyzer and I/Q Input User Manual.

For example, you can capture I/Q data using the I/Q Analyzer application, if available, and then analyze that data later using the R&S FSV3 AM/FM/PM Modulation Analysis application.



An application note on converting Rohde & Schwarz I/Q data files is available from the Rohde & Schwarz website:

[1EF85: Converting R&S I/Q data files](#)

For details on import and export functions, see the R&S FSV/A I/Q Analyzer and I/Q Input User Manual.

5 Configuration

Access: [MODE] > "AM FM PM Analog Demod"

Analog Modulation Analysis requires a special application on the R&S FSV/A.

When you activate an R&S FSV3 AM/FM/PM Modulation Analysis application the first time, a set of parameters is passed on from the currently active application. After initial setup, the parameters for the channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

When you activate the R&S FSV3 AM/FM/PM Modulation Analysis application, Analog Modulation Analysis for the input signal is started automatically with the default configuration. The "AM FM PM Analog Demod" menu is displayed and provides access to the most important configuration functions.

The remote commands required to perform these tasks are described in [Chapter 10, "Remote commands for AM/FM/PM Modulation Analysis"](#), on page 132.

Predefined settings

For commonly performed measurements, standard setup files are provided for quick and easy configuration. Simply load an existing standard settings file and, if necessary, adapt the measurement settings to your specific requirements.

For an overview of predefined standards and settings see [Chapter A.1, "Predefined standards and settings"](#), on page 339.

• Configuration overview	35
• Configuration according to standards	37
• Input and frontend settings	39
• Trigger configuration	48
• Data acquisition	54
• Demodulation display	59
• Demodulation	59
• Output settings	79
• Adjusting settings automatically	82

5.1 Configuration overview



Access: "Meas Config" > "Overview"

Using the R&S FSV3 AM/FM/PM Modulation Analysis application you can perform Analog Modulation Analysis using predefined standard setting files, or independently of standards using user-defined measurement settings. Such settings can be stored for recurrent use.


Thus, configuring AM/FM/PM Modulation Analysis measurements requires one of the following tasks:

- Selecting an existing standard settings file and, if necessary, adapting the measurement settings to your specific requirements.

- Configuring the measurement settings and, if necessary, storing the settings in a file.

"Overview" window

Throughout the channel configuration, an overview of the most important currently defined settings is provided in the "Overview".

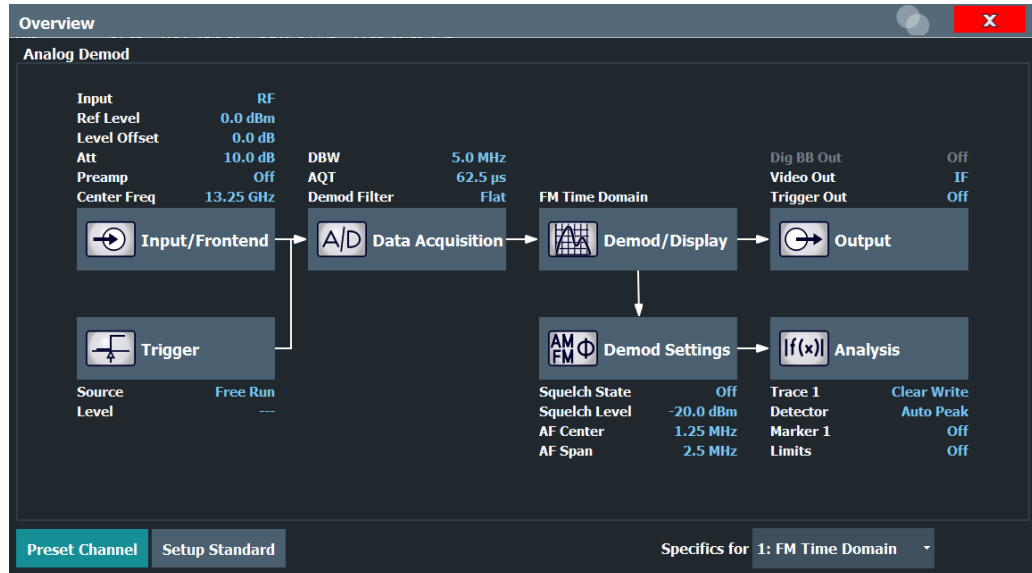

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Input/Frontend
See [Chapter 5.3, "Input and frontend settings"](#), on page 39
2. Trigger
See [Chapter 5.4, "Trigger configuration"](#), on page 48
3. Data Acquisition
See [Chapter 5.5, "Data acquisition"](#), on page 54
4. Demod/Display
See [Chapter 5.6, "Demodulation display"](#), on page 59
5. Demodulation Settings
See [Chapter 5.7, "Demodulation"](#), on page 59
6. Analysis
See [Chapter 6, "Analysis"](#), on page 86
7. (Optionally:) Outputs
See [Chapter 5.8.1, "Output settings"](#), on page 79

To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box.
Select a setting in the channel bar (at the top of the channel tab) to change a specific setting.

Preset Channel

Select "Preset Channel" in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel* to their default values.

Note: Do not confuse "Preset Channel" with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channels* on the R&S FSV/A (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel[:EXEC]` on page 142

Setup Standard

Opens a file selection dialog box to select a predefined setup file. See "[Setup Standard](#)" on page 38.

Specific Settings for

The channel can contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specific Settings for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

5.2 Configuration according to standards

Access: "Overview" > "Setup Standard"

Various predefined settings files for common standards are provided for use with the R&S FSV3 AM/FM/PM Modulation Analysis application. In addition, you can create your own settings files for user-specific measurements.

For details on which settings are defined and an overview of predefined standards see [Chapter A.1, "Predefined standards and settings"](#), on page 339.

Setup Standard.....	38
L Selecting Storage Location - Drive/ Path/ Files	38
L File Name	38
L Load Standard	38
L Save Standard	38
L Delete Standard	38
L Restore Standard Files	38

Setup Standard

Opens a file selection dialog box to select a predefined setup file. The predefined settings are configured in the R&S FSV3 AM/FM/PM Modulation Analysis application, which allows for quick and easy configuration for commonly performed measurements.

Selecting Storage Location - Drive/ Path/ Files ← Setup Standard

Select the storage location of the file on the instrument or an external drive.

The default storage location for the settings files is:

C:\R_S\INSTR\USER\predefined\AdemodPredefined.

Note: Saving instrument settings in secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSV3000 base unit user manual.

File Name ← Setup Standard

Contains the name of the data file without the path or extension.

File names must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

For details on the filename and location, see the "Data Management" topic in the R&S FSV/A User Manual.

Load Standard ← Setup Standard

Loads the selected measurement settings file.

Remote command:

[SENSe:]ADEMod:PRESet[:STANdard] on page 143

Save Standard ← Setup Standard

Saves the current measurement settings for a specific standard as a file with the defined name.

Remote command:

[SENSe:]ADEMod:PRESet:STORe on page 143

Delete Standard ← Setup Standard

Deletes the selected standard. Standards predefined by Rohde & Schwarz can also be deleted. A confirmation query is displayed to avoid unintentional deletion of the standard.

Note: Restoring predefined standard files. The standards predefined by Rohde & Schwarz available at the time of delivery can be restored using the "Restore Standard Files" function (see "Restore Standard Files" on page 38).

Restore Standard Files ← Setup Standard

Restores the standards predefined by Rohde & Schwarz available at the time of delivery.

Note that this function overwrites customized standards that have the same name as predefined standards.

Remote command:

[SENSe:]ADEMod:PRESet:REStore on page 143

5.3 Input and frontend settings

Access: "Overview" > "Input/Frontend"

The source and characteristics of the input signal to be demodulated are configured in the "Input/Frontend Settings" dialog box.

- [Input source settings](#)..... 39
- [Amplitude settings](#)..... 43
- [Frequency](#)..... 47

5.3.1 Input source settings

Access: "Overview" > "Input/Frontend" > "Input Source"

The input source determines which data the R&S FSV/A analyzes.

The default input source for the R&S FSV/A is "Radio Frequency", i.e. the signal at the "RF Input" connector of the R&S FSV/A. If no additional options are installed, this is the only available input source.

- [Radio frequency input](#)..... 39
- [Settings for input from I/Q data files](#)..... 42

5.3.1.1 Radio frequency input

Access: "Overview" > "Input/Frontend" > "Input Source" > "Radio Frequency"

Input Source	Power Sensor	External Generator	Amplitude	Frequency	Probes
Radio Frequency	On	Off			
I/Q File	Input Coupling	AC	DC		
	Impedance	50Ω	75Ω		
	Direct Path	Auto	Off		
	YIG-Preselector	On	Off		



RF Input Protection

The RF input connector of the R&S FSV/A must be protected against signal levels that exceed the ranges specified in the specifications document. Therefore, the R&S FSV/A is equipped with an overload protection mechanism for DC and signal frequencies up to 30 MHz. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF input was disconnected. Furthermore, a status bit (bit 3) in the `STAT:QUES:POW` status register is set. In this case, you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command `INPut:ATTenuation:PROtection:RESet`.

Radio Frequency State.....	40
Input Coupling.....	40
Impedance.....	40
Direct Path.....	41
YIG-Preselector.....	41
Input Connector.....	41

Radio Frequency State

Activates input from the "RF Input" connector.

Remote command:

`INPut:SELEct` on page 145

Input Coupling

The RF input of the R&S FSV/A can be coupled by alternating current (AC) or direct current (DC).

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the specifications document.

Remote command:

`INPut:COUPling` on page 144

Impedance

For some measurements, the reference impedance for the measured levels of the R&S FSV/A can be set to 50 Ω or 75 Ω .

Select 75 Ω if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type. (That corresponds to 25 Ω in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = $10 \log(75\Omega/50\Omega)$.

This value also affects the unit conversion (see "Reference Level" on page 44).

Remote command:

[INPut:IMPedance](#) on page 145

Direct Path

Enables or disables the use of the direct path for small frequencies.

In spectrum analyzers, passive analog mixers are used for the first conversion of the input signal. In such mixers, the LO signal is coupled into the IF path due to its limited isolation. The coupled LO signal becomes visible at the RF frequency 0 Hz. This effect is referred to as LO feedthrough.

To avoid the LO feedthrough the spectrum analyzer provides an alternative signal path to the A/D converter, referred to as the *direct path*. By default, the direct path is selected automatically for RF frequencies close to zero. However, this behavior can be disabled. If "Direct Path" is set to "Off", the spectrum analyzer always uses the analog mixer path.

"Auto" (Default) The direct path is used automatically for frequencies close to zero.

"Off" The analog mixer path is always used.

Remote command:

[INPut:DPATH](#) on page 145

YIG-Preselector

Enables or disables the YIG-preselector.

This setting requires an additional option R&S FSV3-B11 on the R&S FSV/A.

An internal YIG-preselector at the input of the R&S FSV/A ensures that image frequencies are rejected. However, image rejection is only possible for a restricted bandwidth. To use the maximum bandwidth for signal analysis, you can disable the YIG-preselector at the input of the R&S FSV/A, which can lead to image-frequency display.

Note: Note that the YIG-preselector is active only on frequencies greater than 7.5 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

For frequencies above 50 GHz (requires option R&S FSV3-B54G, for R&S FSVA3050 only), the YIG-preselector is automatically switched off (internally, not indicated in the display). In this case, image frequencies can occur, as specified in the specifications document.

Remote command:

[INPut:FILTer:YIG\[:STATe\]](#) on page 145

Input Connector

Determines which connector the input data for the measurement is taken from.

"RF" (Default:) The "RF Input" connector

"RF Probe" The "RF Input" connector with an adapter for a modular probe
This setting is only available if a probe is connected to the "RF Input" connector.


Remote command:

[INPut:CONNector](#) on page 144

5.3.1.2 Settings for input from I/Q data files

Access: "Overview" > "Input/Frontend" > "Input Source" > "I/Q File"

Or: [INPUT/OUTPUT] > "Input Source Config" > "Input Source" > "I/Q File"

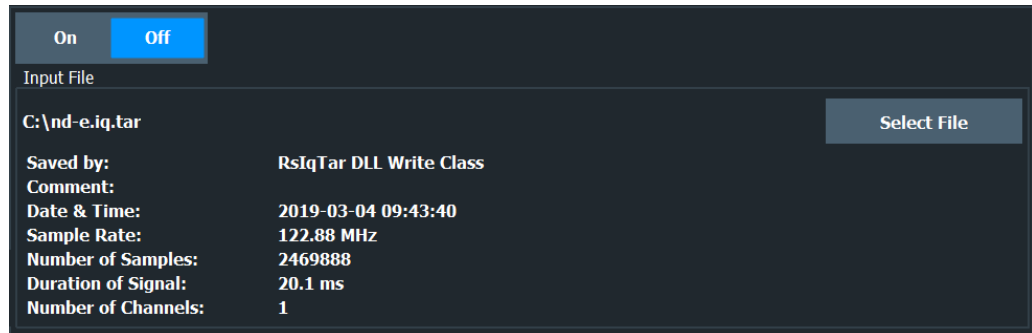

I/Q Input File State.....	42
Select I/Q data file.....	42

I/Q Input File State

Enables input from the selected I/Q input file.

If enabled, the application performs measurements on the data from this file. Thus, most measurement settings related to data acquisition (attenuation, center frequency, measurement bandwidth, sample rate) cannot be changed. The measurement time can only be decreased to perform measurements on an extract of the available data only.

Note: Even when the file input is disabled, the input file remains selected and can be enabled again quickly by changing the state.

Remote command:

[INPut:SElect](#) on page 145

Select I/Q data file

Opens a file selection dialog box to select an input file that contains I/Q data.

The I/Q data file must be in one of the following supported formats:

- .iq.tar
- .iqw
- .csv
- .mat
- .wv
- .aid

For details on formats, see the R&S FSV/A I/Q Analyzer and I/Q Input user manual.

The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be .iq.tar. For .mat files, Matlab® v4 is assumed.

Note: Only a single data stream or channel can be used as input, even if multiple streams or channels are stored in the file.

Note: For some file formats that do not provide the sample rate and measurement time or record length, you must define these parameters manually. Otherwise the traces are not visible in the result displays.

The default storage location for I/Q data files is `C:\R_S\INSTR\USER`.

Remote command:

`INPut:FILE:PATH` on page 146


5.3.2 Amplitude settings

Access: "Overview" > "Input/Frontend" > "Amplitude"

Amplitude settings determine how the R&S FSV/A must process or display the expected input power levels.

Configuring amplitude settings allows you to:

- Adapt the instrument hardware to the expected maximum signal level by setting the **Reference Level** to this maximum
- Consider an external attenuator or preamplifier (using the "Offset").
- Optimize the SNR of the measurement for low signal levels by configuring the **Reference Level** as high as possible without introducing compression, clipping or overload. Use early amplification by the preamplifier and a low attenuation.
- Optimize the SNR for high signal levels and ensure that the instrument hardware is not damaged, using high attenuation and AC coupling (for DC input voltage).
- Adapt the reference impedance for power results when measuring in a 75-Ohm system by connecting an external matching pad to the RF input.

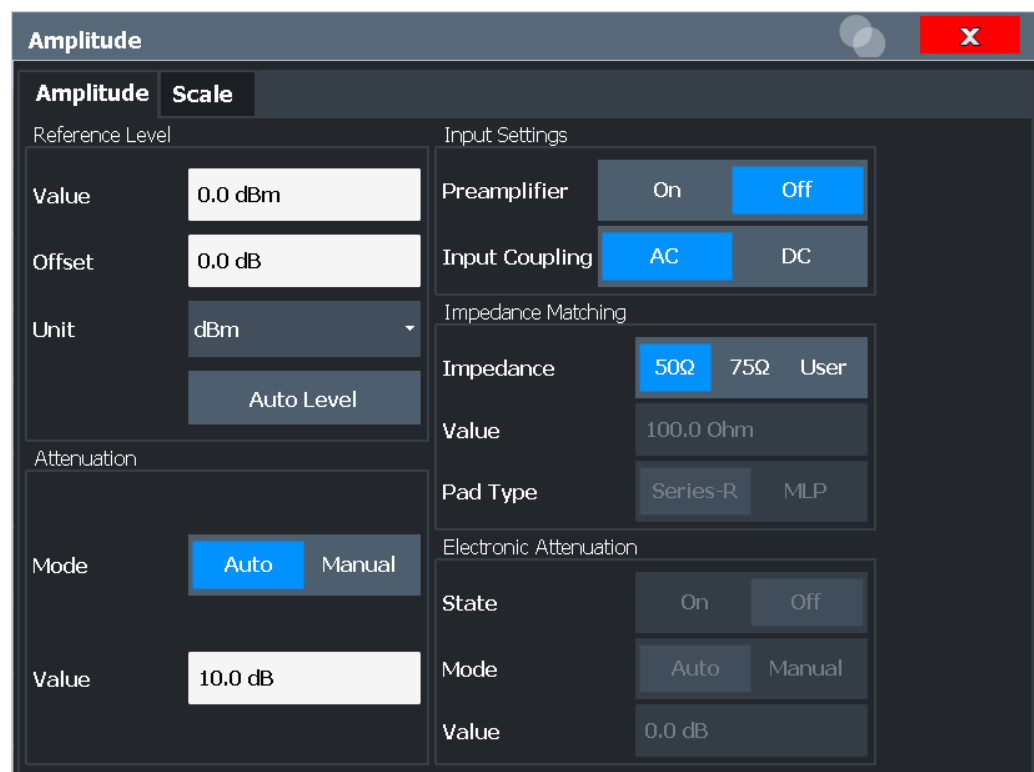

Reference Level.....	44
L Shifting the Display (Offset).....	44
L Unit.....	44
L Setting the Reference Level Automatically (Auto Level).....	45
Attenuation Mode / Value.....	45
Using Electronic Attenuation.....	45
Input Settings.....	46
L Preamplifier.....	46

Reference Level

Defines the expected maximum reference level. Signal levels above this value are possibly not measured correctly. Signals above the reference level are indicated by an "IF Overload" or "OVL" status display.

The reference level can also be used to scale power diagrams; the reference level is then used for the calculation of the maximum on the y-axis.

Since the hardware of the R&S FSV/A is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level. Thus you ensure an optimal measurement (no compression, good signal-to-noise ratio).

Note that for input from the External Mixer (R&S FSV3-B21) the maximum reference level also depends on the conversion loss; see the R&S FSV3000/ FSV3000 base unit user manual for details.

Remote command:

```
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel
```

on page 189

Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FSV/A so the application shows correct power results. All displayed power level results are shifted by this value.

The setting range is ± 200 dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S FSV/A must handle. Do not rely on the displayed reference level (internal reference level = displayed reference level - offset).

Remote command:

```
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet
```

on page 189

Unit ← Reference Level

The R&S FSV/A measures the signal voltage at the RF input.

In the default state, the level is displayed at a power level of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω , see "Impedance" on page 40), conversion to other units is possible.

Remote command:

[INPut:IMPedance](#) on page 145

[CALCulate<n>:UNIT:POWer](#) on page 188

Setting the Reference Level Automatically (Auto Level) ← Reference Level

To determine the required reference level, a level measurement is performed on the R&S FSV/A.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 84).

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 231

Attenuation Mode / Value

Defines the attenuation applied to the RF input of the R&S FSV/A.

The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). Automatic attenuation ensures that no overload occurs at the RF Input connector for the current reference level. It is the default setting.

By default and when no (optional) [electronic attenuation](#) is available, mechanical attenuation is applied.

In "Manual" mode, you can set the RF attenuation in 1 dB steps (down to 0 dB). Other entries are rounded to the next integer value. The range is specified in the specifications document. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed.

NOTICE! Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload can lead to hardware damage.

Remote command:

[INPut:ATTenuation](#) on page 190

[INPut:ATTenuation:AUTO](#) on page 190

Using Electronic Attenuation

If the (optional) Electronic Attenuation hardware is installed on the R&S FSV/A, you can also activate an electronic attenuator.

In "Auto" mode, the settings are defined automatically; in "Manual" mode, you can define the mechanical and electronic attenuation separately.

Note: Electronic attenuation is not available for stop frequencies (or center frequencies in zero span) above 7 GHz.

In "Auto" mode, RF attenuation is provided by the electronic attenuator as much as possible to reduce the amount of mechanical switching required. Mechanical attenuation can provide a better signal-to-noise ratio, however.

When you switch off electronic attenuation, the RF attenuation is automatically set to the same mode (auto/manual) as the electronic attenuation was set to. Thus, the RF attenuation can be set to automatic mode, and the full attenuation is provided by the mechanical attenuator, if possible.

The electronic attenuation can be varied in 1 dB steps. If the electronic attenuation is on, the mechanical attenuation can be varied in 5 dB steps. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed in the status bar.

Remote command:

`INPut:EATT:STATe` on page 192

`INPut:EATT:AUTO` on page 191

`INPut:EATT` on page 191

Input Settings

Some input settings affect the measured amplitude of the signal, as well.

The parameters "Input Coupling" and "Impedance" are identical to those in the "Input" settings.

Preamplifier ← Input Settings

If the (optional) internal preamplifier hardware is installed on the R&S FSV/A, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low output power.

For R&S FSV/A, the following settings are available:

"Off"	Deactivates the preamplifier.
"15 dB"	The RF input signal is amplified by about 15 dB.
"30 dB"	The RF input signal is amplified by about 30 dB.
"On"	Using the preamplifier with the option number 1330.3465.02: the input signal is amplified by 30 dB if the preamplifier is activated.

For R&S FSV/A3044 models, the preamplifier is only available under the following conditions:

- In zero span, the maximum center frequency is 43.5 GHz
- For frequency spans, the maximum stop frequency is 43.5 GHz
- For I/Q measurements, the maximum center frequency depends on the analysis bandwidth:

$$f_{center} \leq 43.5 \text{ GHz} - (<Analysis_bw> / 2)$$

If any of the conditions no longer apply after you change a setting, the preamplifier is automatically deactivated.

Remote command:

`INPut:GAIN:STATe` on page 193

`INPut:GAIN[:VALue]` on page 193

5.3.3 Frequency

Access: "Overview" > "Input/Frontend" > "Frequency" tab

The screenshot shows the 'Input' configuration window with the 'Frequency' tab selected. The 'Center' field is set to 3.75 GHz. The 'Stepsize' dropdown menu is open, showing '0.1 * Demod BW' as the selected option. The 'X-Factor' field is set to 10.0 %.

Center Frequency.....	47
Center Frequency Stepsize.....	47

Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

f_{max} and span_{\min} depend on the instrument and are specified in the specifications document.

Remote command:

[SENSe:] FREQuency:CENTer on page 186

Center Frequency Stepsize

Defines the step size of the center frequency. The step size can be coupled to the demodulation bandwidth, or you can set it to a fixed value manually.

"0.1 * Demod BW"	(default:) Sets the step size for the center frequency to 10 % of the demodulation bandwidth.
"0.5 * Demod BW"	Sets the step size for the center frequency to 50 % of the demodulation bandwidth.
"X * Demod BW"	Sets the step size for the center frequency to a manually defined factor of the demodulation bandwidth. The "X-Factor" defines the percentage of the demodulation bandwidth. Values between 1 % and 100 % in steps of 1 % are allowed. The default setting is 10 %.
"= Center"	Sets the step size to the value of the center frequency and removes the coupling of the step size to the demodulation bandwidth. The used value is indicated in the "Value" field.
"Manual"	Defines a fixed step size for the center frequency. Enter the step size in the "Value" field.

Remote command:

[SENSe:] FREQuency:CENTer:STEP:LINK on page 187

[SENSe:] FREQuency:CENTer:STEP:LINK:FACTor on page 187

[SENSe:] FREQuency:CENTer:STEP on page 186

5.4 Trigger configuration


Access: "Overview" > "Trigger"

Triggering means to capture the interesting part of the signal. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in your demodulated signals.

Optionally, the trigger signal used by the R&S FSV/A can be output to a connected device, and an external trigger signal from a connected device can be used by the R&S FSV/A.

Trigger settings are identical to the base unit, except for the available trigger sources. Gating is not available for Analog Modulation Analysis.

For background information on trigger settings, trigger output and working with external triggers, see the R&S FSV/A User Manual.

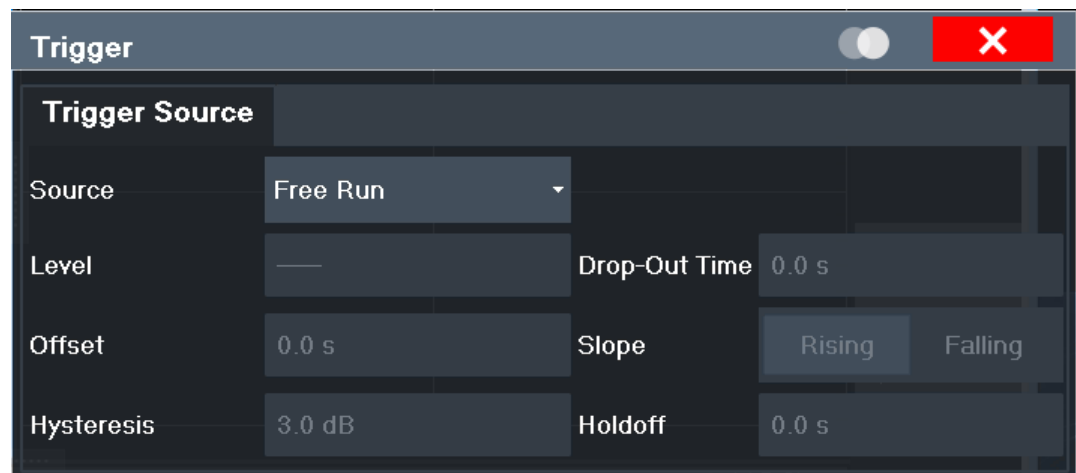

- [Trigger source settings](#).....48
- [Trigger input and output settings](#).....52

5.4.1 Trigger source settings

Access: "Overview" > "Trigger" > "Trigger Source" tab

Trigger Source.....	49
L Free Run.....	49
L External Trigger 1/2.....	49
L IF Power.....	49
L FM (Offline) / AM (Offline) / PM (Offline) / RF (Offline).....	50

L Time.....	50
L Power Sensor.....	50
Trigger Level.....	50
Repetition Interval.....	51
Trigger Offset.....	51
Hysteresis.....	51
Drop-Out Time.....	51
Slope.....	51
Trigger Holdoff.....	52

Trigger Source

In the R&S FSV3 AM/FM/PM Modulation Analysis application, the next measurement can be triggered if the selected input signal exceeds the threshold specified using the "Trigger Level" setting (see "Trigger Level" on page 50). Thus, a periodic signal modulated onto the carrier frequency can be displayed. It is recommended that the measurement time covers at least five periods of the audio signal.

Remote command:

TRIGger [:SEquence] :SOURce on page 205

Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

Remote command:

TRIG:SOUR IMM, see TRIGger [:SEquence] :SOURce on page 205

External Trigger 1/2 ← Trigger Source

Data acquisition starts when the TTL signal fed into the specified input connector meets or exceeds the specified trigger level.

(See "Trigger Level" on page 50).

Note: "External Trigger 1" automatically selects the trigger signal from the "Trigger 1 Input / Output" connector on the front panel.

For details, see the "Instrument Tour" chapter in the R&S FSV/A Getting Started manual.

"External Trigger 1"

Trigger signal from the "Trigger 1 Input / Output" connector.

"External Trigger 2"

Trigger signal from the "Trigger 2 Input / Output" connector.

Note: Connector must be configured for "Input" in the "Output" configuration

(See the R&S FSV/A user manual).

Remote command:

TRIG:SOUR EXT, TRIG:SOUR EXT2

See TRIGger [:SEquence] :SOURce on page 205

IF Power ← Trigger Source

The R&S FSV/A starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger threshold depends on the defined trigger level, as well as on the RF attenuation and preamplification. A reference level offset, if defined, is also considered. The trigger bandwidth at the intermediate frequency depends on the RBW and sweep type. For details on available trigger levels and trigger bandwidths, see the instrument specifications document. For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

This trigger source is only available for RF input.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths, see the specifications document.

Remote command:

TRIG:SOUR IFP, see [TRIGger\[:SEquence\]:SOURce](#) on page 205

FM (Offline) / AM (Offline) / PM (Offline) / RF (Offline) ← Trigger Source

Triggers when the demodulated input signal exceeds the trigger level.

Remote command:

[TRIGger\[:SEquence\]:SOURce](#) on page 205

Time ← Trigger Source

Triggers in a specified repetition interval.

See "[Repetition Interval](#)" on page 51.

Remote command:

TRIG:SOUR TIME, see [TRIGger\[:SEquence\]:SOURce](#) on page 205

Power Sensor ← Trigger Source

Uses an external power sensor as a trigger source. This option is only available if a power sensor is connected and configured.

Note: For Rohde & Schwarz power sensors, the "Gate Mode" *Lvl* is not supported. The signal sent by these sensors merely reflects the instant the level is first exceeded, rather than a time period. However, only time periods can be used for gating in level mode. Thus, the trigger impulse from the sensors is not long enough for a fully gated measurement; the measurement cannot be completed.

Remote command:

TRIG:SOUR PSE, see [TRIGger\[:SEquence\]:SOURce](#) on page 205

Trigger Level

Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the instrument specifications document.

Remote command:

[TRIGger\[:SEquence\]:LEVel:IFPower](#) on page 203

[TRIGger\[:SEquence\]:LEVel:IQPower](#) on page 203

[TRIGger\[:SEquence\]:LEVel\[:EXternal<port>\]](#) on page 202

[TRIGger\[:SEquence\]:LEVel:AM:RELative](#) on page 203

[TRIGger\[:SEquence\]:LEVel:AM\[:ABSolute\]](#) on page 203

[TRIGger\[:SEQuence\]:LEVel:FM](#) on page 204

[TRIGger\[:SEQuence\]:LEVel:PM](#) on page 204

Repetition Interval

Defines the repetition interval for a time trigger.

The shortest interval is 1 μ s. The granularity of the repetition interval is 1/256 MHz.

Set the repetition interval to the exact pulse period, burst length, frame length or other repetitive signal characteristic. If the required interval cannot be set with the available granularity, configure a multiple of the interval that can be set. Thus, the trigger remains synchronized to the signal.

Remote command:

[TRIGger\[:SEQuence\]:TIME:RINTerval](#) on page 206

Trigger Offset

Defines the time offset between the trigger event and the start of the sweep.

Offset > 0:	Start of the sweep is delayed
Offset < 0:	Sweep starts earlier (pretrigger)

For the "Time" trigger source in swept measurements, this function is not available.

Remote command:

[TRIGger\[:SEQuence\]:HOLDoff\[:TIME\]](#) on page 201

Hysteresis

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

(For details see the R&S FSV/A I/Q Analyzer and I/Q Input User Manual.)

Remote command:

[TRIGger\[:SEQuence\]:IFPower:HYSteresis](#) on page 202

Drop-Out Time

Defines the time that the input signal must stay below the trigger level before triggering again.

Remote command:

[TRIGger\[:SEQuence\]:DTIME](#) on page 201

Slope

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Remote command:

[TRIGger\[:SEQuence\]:SLOPe](#) on page 204

Trigger Holdoff

Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

Remote command:

[TRIGGER\[:SEQUENCE\]:IFPower:HOLDoff](#) on page 201


5.4.2 Trigger input and output settings

Access: "Overview" > "Trigger" > "Trigger In/Out" tab

Trigger 1/2..... 52

- L Output Type..... 53
 - L Level..... 53
 - L Pulse Length..... 53
 - L Send Trigger..... 54

Trigger 1/2

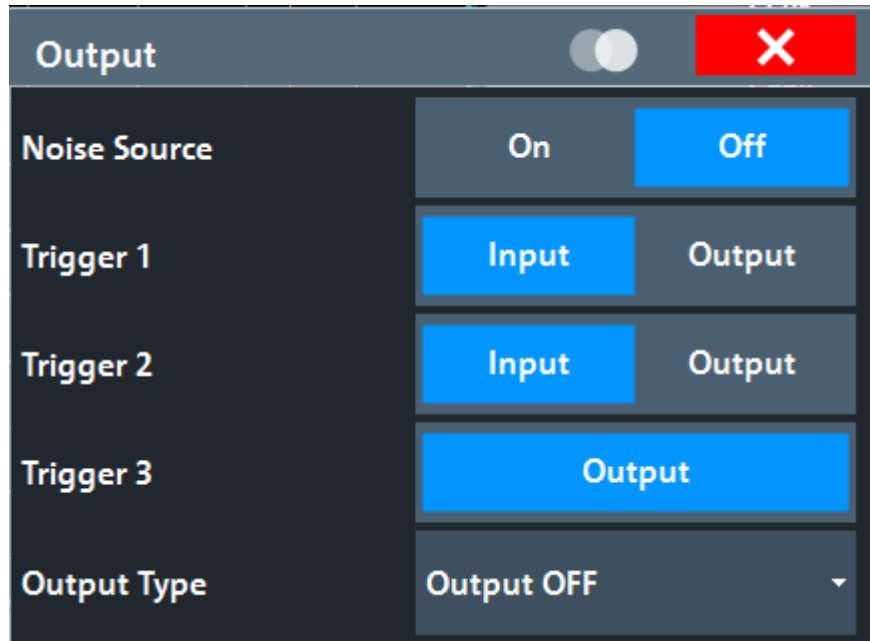

The trigger input and output functionality depends on how the variable "Trigger Input/Output" connectors are used.

Note: Providing trigger signals as output is described in detail in the R&S FSV/A User Manual.

- "Trigger 1" "Trigger 1" is input only.
- "Trigger 2" Defines the usage of the variable "Trigger Input/Output" connector on the front panel
- "Trigger 3" Defines the usage of the variable "Trigger 3 Input/Output" connector on the rear panel

- "Input" The signal at the connector is used as an external trigger source by the R&S FSV/A. Trigger input parameters are available in the "Trigger" dialog box.
- "Output" The R&S FSV/A sends a trigger signal to the output connector to be used by connected devices.
Further trigger parameters are available for the connector.
- Note:** For offline AF or RF triggers, no output signal is provided.

Remote command:

[OUTPut:TRIGger<tp>:DIRection](#) on page 207

Output Type ← Trigger 1/2

Type of signal to be sent to the output

- "Output Off" Deactivates the output. (Only for "Trigger 3", for which only output is supported.)
- "Device Triggered" (Default) Sends a trigger when the R&S FSV/A triggers.
- "Trigger Armed" Sends a (high level) trigger when the R&S FSV/A is in "Ready for trigger" state.
This state is indicated by a status bit in the `STATUS:OPERation` register (bit 5), as well as by a low-level signal at the "AUX" port (pin 9). For details, see the description of the `STATUS:OPERation` register in the R&S FSV/A User Manual and the description of the "AUX" port in the R&S FSV/A Getting Started manual.
- "User Defined" Sends a trigger when you select "Send Trigger".
In this case, further parameters are available for the output signal.


Remote command:

[OUTPut:TRIGger<tp>:OTYPe](#) on page 207

Level ← Output Type ← Trigger 1/2

Defines whether a high (1) or low (0) constant signal is sent to the trigger output connector (for "Output Type": "User Defined").

The trigger pulse level is always opposite to the constant signal level defined here. For example, for "Level" = "High", a constant high signal is output to the connector until you select the [Send Trigger](#) function. Then, a low pulse is provided.

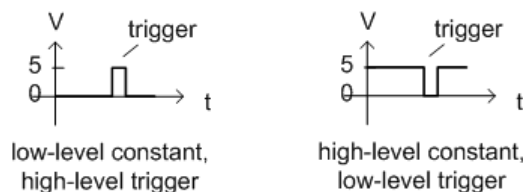

Remote command:

[OUTPut:TRIGger<tp>:LEVel](#) on page 207

Pulse Length ← Output Type ← Trigger 1/2

Defines the duration of the pulse (pulse width) sent as a trigger to the output connector.

Remote command:

`OUTPut:TRIGger<tp>:PULSe:LENGth` on page 208

Send Trigger ← Output Type ← Trigger 1/2

Sends a user-defined trigger to the output connector immediately.

Note that the trigger pulse level is always opposite to the constant signal level defined by the output [Level](#) setting. For example, for "Level" = "High", a constant high signal is output to the connector until you select the "Send Trigger" function. Then, a low pulse is sent.

Which pulse level is sent is indicated by a graphic on the button.

Remote command:

`OUTPut:TRIGger<tp>:PULSe:IMMediate` on page 208

5.5 Data acquisition

Access: "Overview" > "Data Acquisition"


You configure how data is acquired and then demodulated in the "Data Acquisition" dialog box.

- [Bandwidth settings](#)..... 54
- [Sweep settings](#)..... 55

5.5.1 Bandwidth settings

Access: "Overview" > "Data Acquisition" > "Bandwidth" tab

The bandwidth settings define which parts of the input signal are acquired and then demodulated.

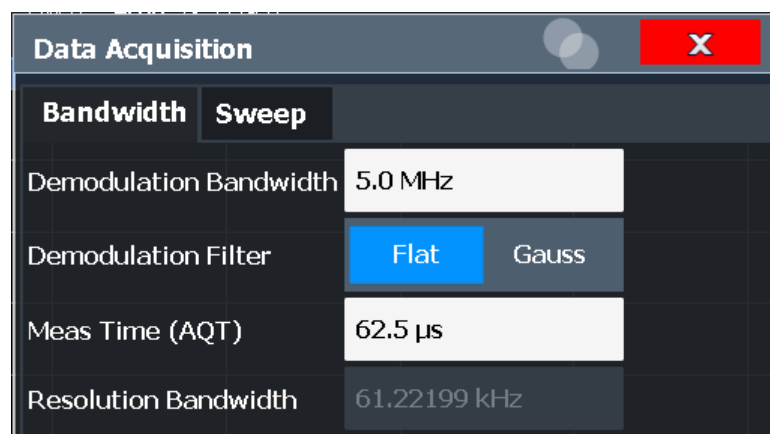

- [Demodulation Bandwidth](#)..... 55
- [Demodulation Filter](#)..... 55
- [Measurement Time \(AQT\)](#)..... 55
- [Resolution Bandwidth](#)..... 55

Demodulation Bandwidth

Defines the demodulation bandwidth of the measurement. The demodulation bandwidth determines the sample rate with which the input signal is captured and analyzed.

For recommendations on finding the correct demodulation bandwidth, see [Chapter 4.2, "Demodulation bandwidth"](#), on page 29.

Remote command:

[\[SENSe:\] BWIDth:DEMod](#) on page 198

Demodulation Filter

Defines the filter to be used for demodulation.

For details on sample rates, measurement times and trigger offsets for various demodulation bandwidths when using a Gaussian filter, see [Chapter 4.3, "Sample rate and demodulation bandwidth"](#), on page 30.

"Flat" Default

"Gauss" Optimizes the settling behavior of the filter

Remote command:

[\[SENSe:\] BWIDth:DEMod:TYPE](#) on page 199

Measurement Time (AQT)

Defines how long data is acquired for demodulation.

Remote command:

[\[SENSe:\] ADEMod:MTIME](#) on page 197

Resolution Bandwidth

Defines the resolution bandwidth for data acquisition. The available range is defined in the specifications document.


Remote command:

[\[SENSe:\] BANDwidth\[:RESolution\]](#) on page 199

5.5.2 Sweep settings

Access: "Overview" > "Data Acquisition" > "Sweep" tab

The sweep settings define how often data from the input signal is acquired and then demodulated.

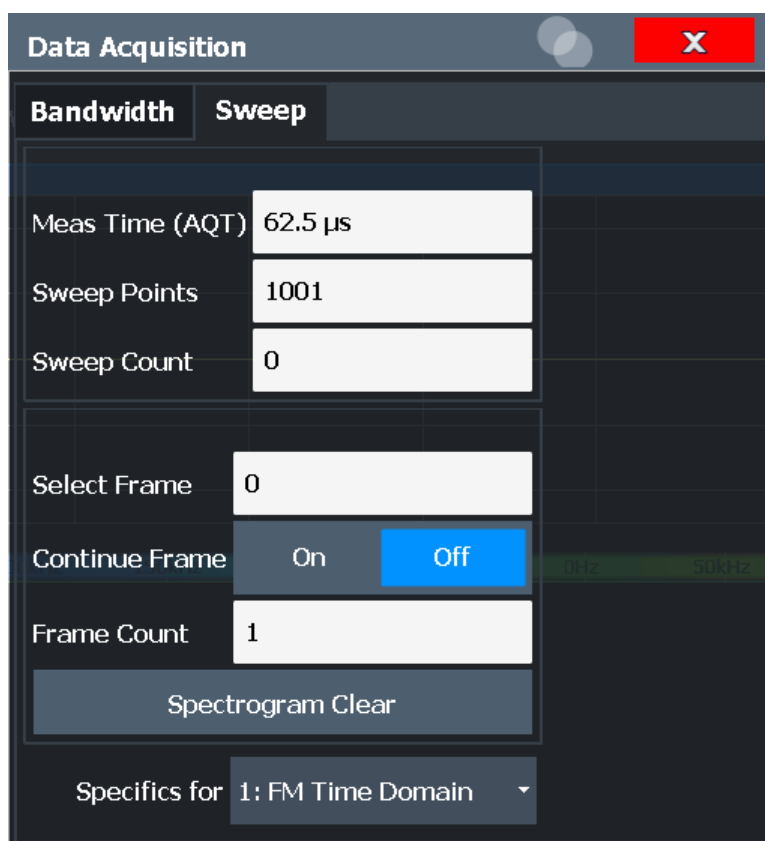

Continuous Sweep / Run Cont.....	56
Single Sweep / Run Single.....	57
Continue Single Sweep.....	57
Measurement Time (AQT).....	57
Sweep Points.....	57
Sweep/Average Count.....	58
Select Frame.....	58
Continue Frame.....	58
Frame Count.....	58
Clear Spectrogram.....	59

Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, "Continuous Sweep" and [RUN CONT] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

If the Sequencer is active in MSRT mode, the "Continuous Sweep" function does not start data capturing. It merely affects trace averaging over multiple sequences. In this case, trace averaging is performed.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>:CONTinuous` on page 233

Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, "Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>[:IMMediate]` on page 233

Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.

While the measurement is running, "Continue Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

`INITiate<n>:CONMeas` on page 233

Measurement Time (AQT)

Defines how long data is acquired for demodulation.

Remote command:

`[SENSe:]ADEMod:MTIME` on page 197

Sweep Points

Defines the number of measured values to be collected during one sweep.

All values from 101 to 100001 can be set. The default value is 1001 sweep points.

Remote command:

[\[SENSe:\] SWEep\[:WINDow<n>\]:POINTs](#) on page 200

Sweep/Average Count

Defines the number of sweeps to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed.

The sweep count is applied to all the traces in all diagrams.

If the trace modes "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if "Sweep Count" = 0 (default), averaging is performed over 10 sweeps. For "Sweep Count" = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

[\[SENSe:\] SWEep:COUNT](#) on page 199

Select Frame

Selects a specific frame, loads the corresponding trace from the memory, and displays it in the Spectrum window.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This function is only available in single sweep mode or if the sweep is stopped, and only if a spectrogram is selected.

The most recent frame is number 0, all previous frames have a negative number.

Remote command:

[CALCulate<n>:SPECTrogram:FRAMe:SElect](#) on page 258

Continue Frame

Determines whether the results of the previous sweeps are included in the analysis of the next sweeps for trace modes "Max Hold", "Min Hold", and "Average".

This function is available in single sweep mode only.

- **On**
When the average or peak values are determined for the new sweep, the results of the previous sweeps in the spectrogram are also considered.
- **Off**
The average or peak values are determined from the results of the newly swept frames only.

Remote command:

[CALCulate<n>:SPECTrogram:CONTInuous](#) on page 257

Frame Count

Determines how many frames are plotted during a single sweep (as opposed to a continuous sweep). The maximum number of possible frames depends on the history depth (see ["History Depth"](#) on page 92).

Remote command:

[CALCulate<n>:SPECTrogram:FRAMe:COUNT](#) on page 258

Clear Spectrogram

Resets the spectrogram result display and clears the history buffer.

This function is only available if a spectrogram is selected.

Remote command:

`CALCulate<n>:SPECTrogram:CLEar[:IMMEDIATE]` on page 257

5.6 Demodulation display



Access: "Overview" > "Demod/Display"

The demodulated signal can be displayed using various evaluation methods. All evaluation methods available for the Analog Modulation Analysis application are displayed in the evaluation bar in SmartGrid mode when you do one of the following:

Up to six evaluation methods can be displayed simultaneously in separate windows.

The Analog Modulation Analysis evaluation methods are described in [Chapter 3, "Measurements and result displays"](#), on page 16.



For details on working with the SmartGrid, see the R&S FSV/A Getting Started manual.

5.7 Demodulation

Access: "Overview" > "Demod Settings"

Or: "Meas Setup" > "Demod"


- [Basic demodulation measurement parameters \(Demod\)](#).....59
- [Demodulation spectrum](#).....63
- [AF filter](#).....65
- [Scaling](#).....69
- [Units](#).....73
- [Result table settings](#).....74
- [Settling time](#).....77

5.7.1 Basic demodulation measurement parameters (Demod)

Access: "Overview" > "Demod Settings" > "Demod"

Or: "Meas Setup" > "Demod" > "Demod" tab

The basic demodulation measurement parameters define how the measurement is performed.

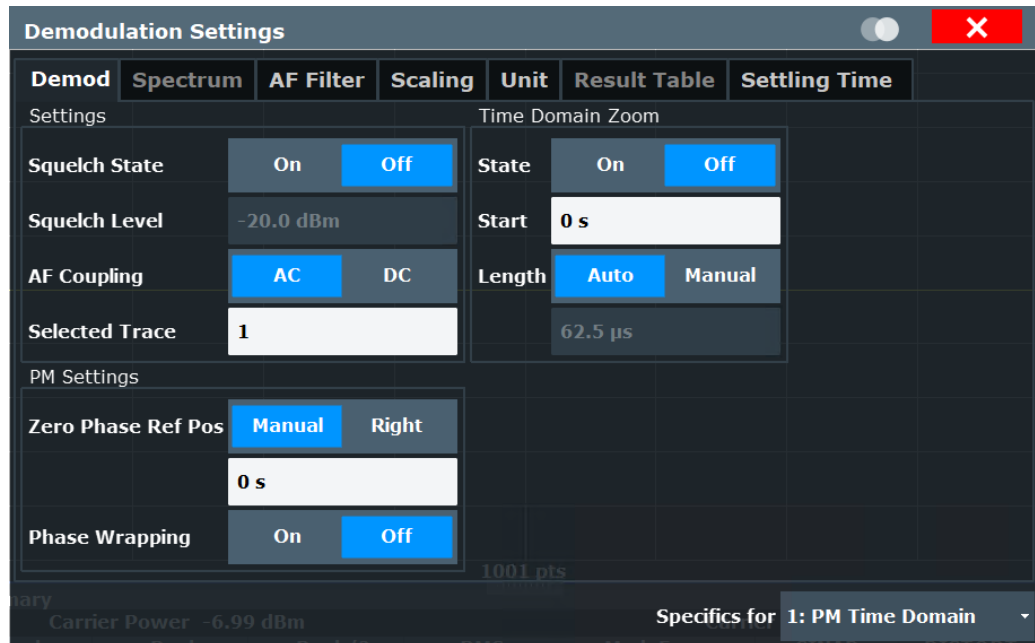

Squelch State.....	60
Squelch Level.....	60
AF Coupling.....	61
Selected Trace.....	61
Time Domain Zoom.....	61
L State.....	61
L Start.....	62
L Length.....	62
L Time per Division.....	62
Zero Phase Reference Position (PM Time Domain only).....	62
Phase Wrap On/Off (PM Time Domain only).....	62

Squelch State

Activates the squelch function, that is: if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

Note that the squelch settings for demodulation only apply to the online output at the headphones connector. The VIDEO does not consider the threshold.

This function is only available for FM demodulation.

Remote command:

[\[SENSe:\]ADEMod:SQUelch\[:STATe\]](#) on page 210

Squelch Level

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

Remote command:

[\[SENSe:\]ADEMod:SQUelch:LEVel](#) on page 211

AF Coupling

Controls the automatic correction of the frequency offset and phase offset of the input signal:

This function is only available for FM or PM time domain evaluations.

- FM time evaluation
 - If DC is selected, the absolute frequency is displayed. That means, an input signal with an offset relative to the center frequency is not displayed symmetrically to the zero line.
 - If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric to the zero line.
- PM time evaluation
 - If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.
 - If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric to the zero line.

Remote command:

[\[SENSe:\]ADEMod<n>:AF:COUPling](#) on page 209

Selected Trace

Defines the trace used to determine the results in the "Result Summary".

Time Domain Zoom

Using the time domain zoom, the demodulated data for a particular time span is extracted and displayed in more detail. Time domain zoom is useful if the measurement time is very large and thus each sweep point represents a large time span. The time domain zoom function distributes the available sweep points only among the time span defined by the zoom area length. The time span displayed per division of the diagram is decreased. Thus, the display of the extracted time span becomes more precise. Note that the time domain zoom area affects not only the diagram display, but the entire evaluation for the current window.

This function is only available for evaluations in the time domain.

Tip: In addition to the Time Domain Zoom, a graphical zoom is available for all diagram evaluations. However, the graphical zoom is useful only if more measured values than trace points are available. The (time) span represented by each measurement point remains the same.

State ← Time Domain Zoom

Activates or deactivates the time domain zoom mode.

- | | |
|-------|--|
| "On" | Activates the time domain zoom. |
| "Off" | Deactivates the time domain zoom and restores the original display. If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector. |

Remote command:

[\[SENSe:\]ADEMod<n>:ZOOM\[:STATe\]](#) on page 213

Start ← Time Domain Zoom

Defines the start time for the time domain zoom area. For spectrum evaluations, the start time is always 0.

Remote command:

[SENSe:]ADEMod<n>:ZOOM:START on page 213

Length ← Time Domain Zoom

Defines the length of the time domain zoom area. Enter the length as a time value manually, or use the "Auto" setting to set the length to the current number of sweep points automatically.

Remote command:

[SENSe:]ADEMod<n>:ZOOM:LENGTH on page 212

[SENSe:]ADEMod<n>:ZOOM:LENGTH:MODE on page 212

Time per Division ← Time Domain Zoom

Enables the "Time Domain Zoom" function and defines the zoom area length in one step. The width of the zoom display is divided into 10 divisions; thus, by entering the time that is displayed in each division, you indirectly define the zoom area length ("Time per Division" * 10). The starting point of the zoom area is determined automatically. To specify the starting point manually, use the [Start](#) setting.

"Time per Division" is available from the main "AM FM PM Analog Demod" menu.

Zero Phase Reference Position (PM Time Domain only)

Defines the position in time at which the phase of the PM-demodulated signal is set to 0 rad.

In the default setting, the time of the first measured value is set to 0 rad. You can define a different position manually, or select the time of the last measured value (i.e. the furthest to the right in the diagram) as the reference position. The time of the last measured value corresponds to the total acquisition time, considering the trigger event and trigger offset, if applicable. If the acquisition time or the trigger values are changed, the reference position is automatically adapted.

This setting is only available for PM time domain displays with DC coupling.

Remote command:

[SENSe:]ADEMod:PM:RPOINT[:X] on page 210

[SENSe:]ADEMod:PM:RPOINT[:X]:MODE on page 210

Phase Wrap On/Off (PM Time Domain only)

Activates/deactivates the phase wrap.

On	The phase is displayed in the range $\pm 180^\circ$ ($\pm \Pi$). For example, if the phase exceeds $+180^\circ$, 360° is subtracted from the phase value, with the display thus showing $>-180^\circ$.
Off	The phase is not wrapped.

This setting is only available for PM time domain displays with DC coupling.

Remote command:

CALC:FORM PHAS/CALC:FORM UPH, see [CALCulate<n>:FORMat](#) on page 211

5.7.2 Demodulation spectrum

Access: "Overview" > "Demod Settings" > "Spectrum"

Or: "Meas Setup" > "Demod" > "Spectrum" tab

The demodulation spectrum defines which span of the demodulated data is evaluated.

Depending on the evaluation (AF or RF display), the settings vary.


- [AF evaluation](#)..... 63
- [RF evaluation](#)..... 64

5.7.2.1 AF evaluation

Access: "Overview" > "Demod Settings" > "Spectrum"

Or: "Meas Setup" > "Demod" > "Spectrum" tab

These settings are only available for AF Spectrum evaluations, not in the time domain.

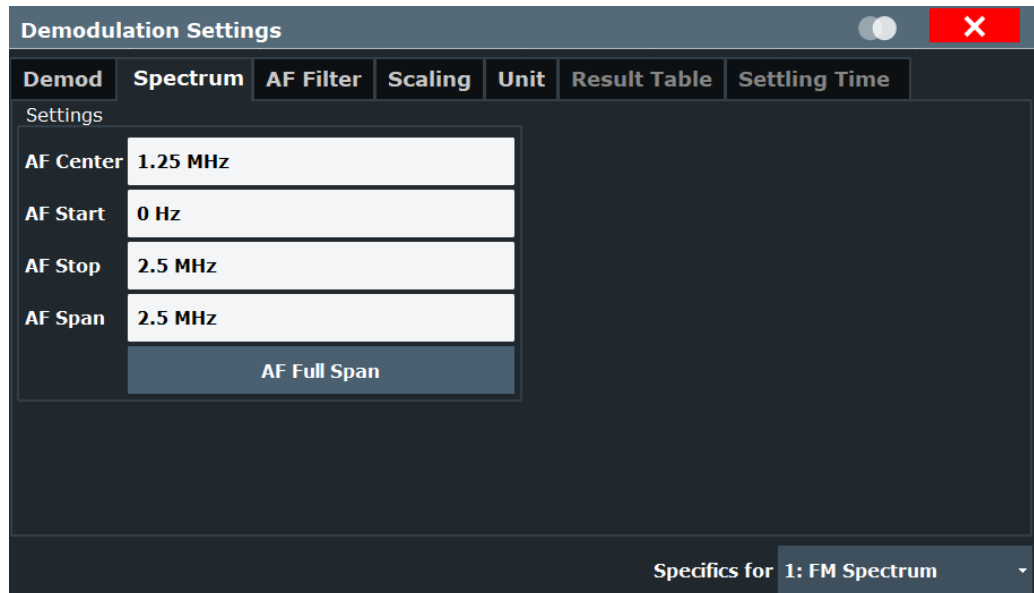

- [AF Center](#)..... 63
- [AF Start](#)..... 63
- [AF Stop](#)..... 64
- [AF Span](#)..... 64
- [AF Full Span](#)..... 64

AF Center

Defines the center frequency of the demodulated data to evaluate.

Remote command:

[SENSe:]ADEMod:AF:CENTer on page 214

AF Start

Defines the start frequency of the demodulated data to evaluate.

Remote command:

[SENSe:] ADEMod:AF:START on page 215

AF Stop

Defines the stop frequency of the demodulated data to evaluate.

The maximum AF stop frequency corresponds to half the demodulation bandwidth.

Remote command:

[SENSe:] ADEMod:AF:STOP on page 215

AF Span

Defines the span (around the center frequency) of the demodulated data to evaluate.

The maximum span is DBW/2.

Remote command:

[SENSe:] ADEMod:AF:SPAN on page 214

AF Full Span

Sets the span (around the center frequency) of the demodulated data to the maximum of DBW/2.

Remote command:


[SENSe:] ADEMod:AF:SPAN:FULL on page 214

5.7.2.2 RF evaluation

Access: "Overview" > "Demod Settings" > "Spectrum"

Or: "Meas Setup" > "Demod" > "Spectrum" tab

These settings are only available for RF evaluation, both in time and frequency domain. Note that for RF data the center frequency and demodulation bandwidth correspond to the settings defined in the "Input" and "Data Acquisition" configuration.

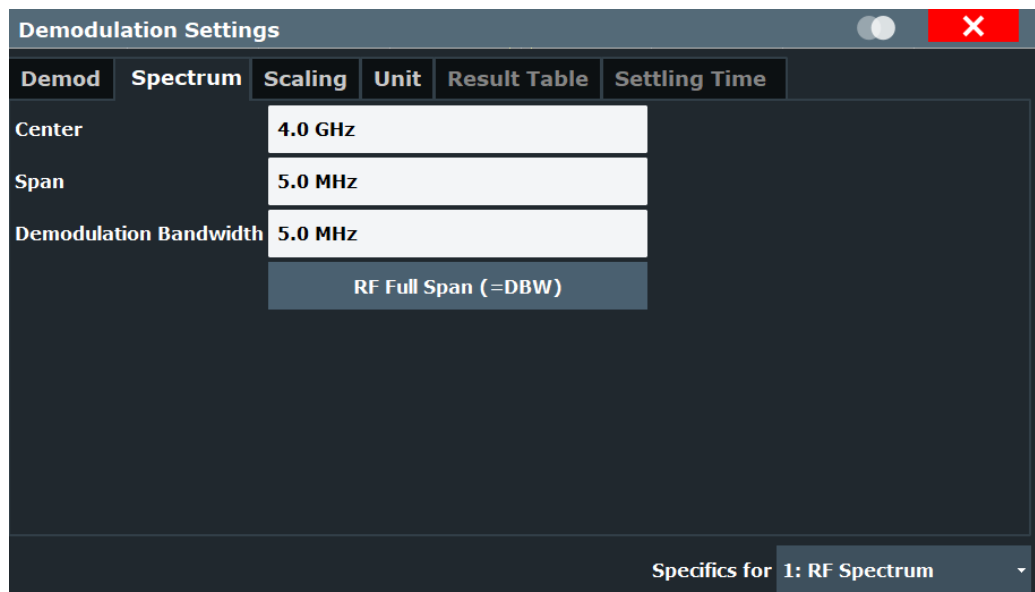

Center Frequency.....	65
Span.....	65
Demodulation Bandwidth.....	65
RF Full Span.....	65

Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

f_{max} and span_{\min} depend on the instrument and are specified in the specifications document.

Remote command:

[SENSe:] FREQuency:CENTer on page 186

Span

Defines the frequency span. The center frequency is kept constant. The following range is allowed:

span = 0: 0 Hz

span >0:

$$\text{span}_{\min} \leq f_{\text{span}} \leq f_{\text{max}}$$

and $f_{\text{max}} = \text{DBW}/2$

f_{max} and span_{\min} are specified in the specifications document.

Remote command:

[SENSe:] ADEMod:SPECTrum:SPAN[:MAXimum] on page 216

[SENSe:] ADEMod:SPECTrum:SPAN:ZOOM on page 215

Demodulation Bandwidth

Defines the demodulation bandwidth of the measurement. The demodulation bandwidth determines the sample rate with which the input signal is captured and analyzed.

For recommendations on finding the correct demodulation bandwidth, see [Chapter 4.2, "Demodulation bandwidth"](#), on page 29.

Remote command:

[SENSe:] BWIDth:DEMod on page 198

RF Full Span

Sets the span (around the center frequency) of the RF data to be evaluated to the demodulation bandwidth.

Remote command:

[SENSe:] ADEMod:SPECTrum:SPAN[:MAXimum] on page 216

5.7.3 AF filter

Access: "Overview" > "Demod Settings" > "AF Filter"


Or: "Meas Setup" > "Demod" > "AF Filter" tab

The AF filter reduces the evaluated bandwidth of the demodulated signal and can define a weighting function.



AF filters are only available for AF evaluations, not for RF evaluation.

Note that the audio frequency (AF) filter settings used for demodulation only apply to the online output at the headphones connector. The VIDEO provides the unfiltered data. A maximum of two high pass, low pass or deemphasis filters can be active at the same time if "Analog Demod" output is active.

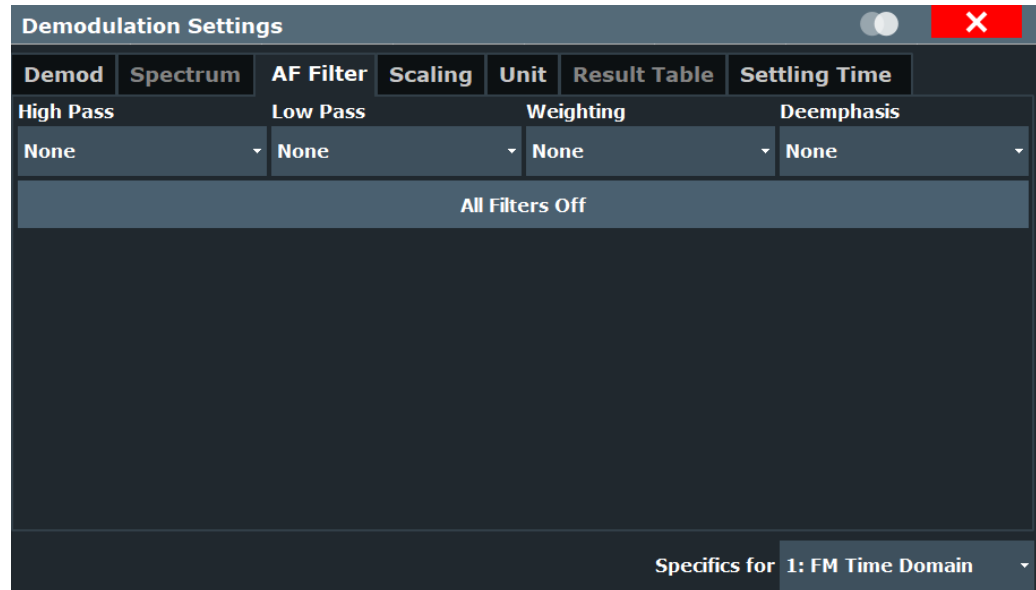

High Pass.....	66
Low Pass.....	67
Weighting.....	68
Deemphasis.....	68
Deactivating all AF Filters.....	69

High Pass

Defines a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

The high pass filters are active in the following demodulation bandwidth range:

None	No AF Filter used (default)
20 Hz	$100 \text{ Hz} \leq \text{demodulation bandwidth} \leq 1.6 \text{ MHz}$
50 Hz:	$200 \text{ Hz} \leq \text{demodulation bandwidth} \leq 3 \text{ MHz}$
300 Hz:	$800 \text{ Hz} \leq \text{demodulation bandwidth} \leq 8 \text{ MHz}$
Manual:	A high pass filter with the manually defined frequency is used.

Note: If online demodulation output is active, the predefined (fixed) filters are not available. In this case, you must define the frequency for the high pass filter manually. A maximum of two high pass, low pass or deemphasis filters can be active at the same time if "Analog Demod" output is active.

(See also [Chapter 5.8.2, "Analog demod output settings"](#), on page 80).

If a filter was already configured when online demodulation output is activated, it is replaced by a manual filter that provides corresponding results, if possible.

Remote command:

[SENSe:] FILTer<n>:HPASs[:STATe] on page 219

[SENSe:] FILTer<n>:HPASs:FREQuency[:ABSolute] on page 219

[SENSe:] FILTer<n>:HPASs:FREQuency:MANual on page 219

Low Pass

Defines a low pass filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:
Absolute filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).
The absolute low pass filters are active in the following demodulation bandwidth range:

Filter type	Demodulation bandwidth
3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz:	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Manual:	A low pass filter with the manually defined frequency is used.

Note: If online demodulation output is active, the predefined (fixed) filters are not available. In this case, you must define the frequency for the low pass filter manually (see also ["AC Cutoff Frequency"](#) on page 81).

If a filter was already configured when online demodulation output is activated, it is replaced by a manual filter that provides corresponding results, if possible.

A maximum of two high pass, low pass or deemphasis filters can be active at the same time if "Analog Demod" output is active.

- Relative low pass filters:
Relative filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "NONE" deactivates the AF low pass filter (default).

Remote command:

[SENSe:] FILTer<n>:LPASs[:STATe] on page 221

[SENSe:] FILTer<n>:LPASs:FREQuency[:ABSolute] on page 220

[SENSe:] FILTer<n>:LPASs:FREQuency:RELative on page 220

[SENSe:] FILTer<n>:LPASs:FREQuency:MANual on page 220

Weighting

Selects a weighting AF filter. By default, no weighting filter is active.

"A weighted"	Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range: $100 \text{ kHz} \leq \text{demodulation bandwidth} \leq 800 \text{ kHz}$
"CCITT"	Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range: $20 \text{ kHz} \leq \text{demodulation bandwidth} \leq 3 \text{ MHz}$
"CCIR weighted"	Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range: $100 \text{ kHz} \leq \text{demodulation bandwidth} \leq 3.0 \text{ MHz}$
"CCIR unweighted"	Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range: $50 \text{ kHz} \leq \text{demodulation bandwidth} \leq 1.6 \text{ MHz}$

Remote command:

[\[SENSe:\]FILTer<n>:CCITt\[:STATe\]](#) on page 218

[\[SENSe:\]FILTer<n>:CCIR\[:UNWeighted\]\[:STATe\]](#) on page 217

[\[SENSe:\]FILTer<n>:CCIR:WEIGhted\[:STATe\]](#) on page 217

[\[SENSe:\]FILTer<n>:AWEighteD\[:STATe\]](#) on page 216

Deemphasis

Activates a deemphasis filter with the given time constant.

Sometimes a modulated signal is extorted by a pre-emphasis filter before transmission, for example to eliminate frequencies that are more prone to interferences. In this case, the emphasis function must be reversed after demodulation, which is done by the deemphasis filter.

The deemphasis filter is active in the following demodulation bandwidth range:

25 μs :	$25 \text{ kHz} \leq \text{demodulation bandwidth} \leq 40 \text{ MHz}$
50 μs :	$6.4 \text{ kHz} \leq \text{demodulation bandwidth} \leq 18 \text{ MHz}$
75 μs :	$6.4 \text{ kHz} \leq \text{demodulation bandwidth} \leq 18 \text{ MHz}$
750 μs :	$800 \text{ Hz} \leq \text{demodulation bandwidth} \leq 3 \text{ MHz}$

Depending on the deemphasis filter, a minimum demodulation bandwidth is required for an error less than 0.5 dB, up to a maximum AF frequency. The following table shows the dependencies.

Deemphasis [μs]	25 μs	50 μs	75 μs	750 μs
Max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
Required demodulation bandwidth	$\geq 200 \text{ kHz}$	$\geq 100 \text{ kHz}$	$\geq 50 \text{ kHz}$	$\geq 6.4 \text{ kHz}$

For higher AF frequencies, you must increase the demodulation bandwidth.

A maximum of two high pass, low pass or deemphasis filters can be active at the same time if "Analog Demod" output is active.

Remote command:

[SENSe:] FILTer<n>:DEMPHasis[:STATe] on page 218

[SENSe:] FILTer<n>:DEMPHasis:TCONstant on page 218

Deactivating all AF Filters

"All Filter Off" deactivates all AF filters for the selected evaluation.

Remote command:

[SENSe:] FILTer<n>:AOFF on page 217

5.7.4 Scaling

Access: "Overview" > "Demod Settings" > "Scaling"

Or: "Meas Setup" > "Demod" > "Scaling" tab

The scaling parameters define the range of the demodulated data to be displayed.


- [AF evaluation](#)..... 69
- [RF evaluation](#)..... 71

5.7.4.1 AF evaluation

Access: "Overview" > "Demod Settings" > "Scaling"

Or: "Meas Setup" > "Demod" > "Scaling" tab

These settings are only available for AF evaluations.

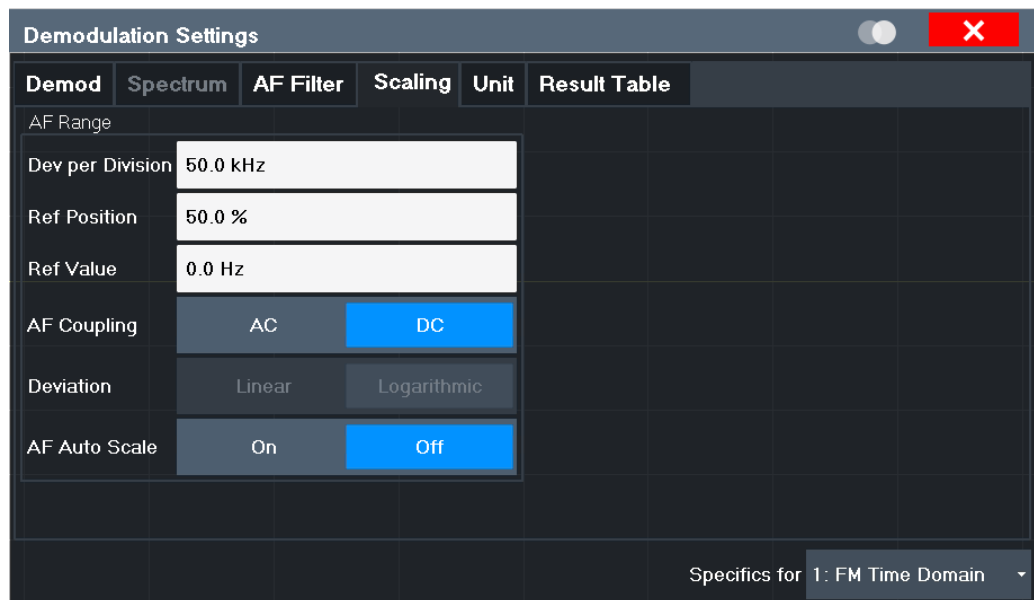

[Dev per Division/ dB per Division](#)..... 70

[Reference Value Position](#)..... 70

[Reference Value](#)..... 70

AF Coupling.....	71
Deviation.....	71
AF Auto Scale.....	71

Dev per Division/ dB per Division

Defines the modulation depth or the phase deviation or frequency deviation per division (logarithmic: 0.1 dB to 20 dB):

AM display:	0.0001 % to 1000 %
FM display:	10 mHz/div to 500 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

Note: The value defined per division refers to the default display of 10 divisions on the y-axis. If fewer divisions are displayed (e.g. because the window is reduced in height), the range per division is increased. Thus, the same result range is displayed in the smaller window. In this case, the per division value does not correspond to the actual display.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision`
on page 195

Reference Value Position

Determines the position of the reference value for the modulation depth or the phase deviation or frequency deviation on the y-axis of the diagram.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the AF time evaluations and 100 % (upper diagram border) for the AF spectrum evaluations.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition`
on page 195

Reference Value

Determines the modulation depth or the phase deviation or the frequency deviation at the reference line of the y-axis. The reference value can be set specifically for each evaluation.

- AF time display
The trace display takes individual frequency/phase offsets into account (in contrast, the **AF Coupling** setting permits automatic correction by the average frequency/phase offset of the signal, and therefore cannot be activated simultaneously).
- AF spectrum display
In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.

Possible values:

- AM: 0 and ± 10000 %
- FM: 0 and ± 10 MHz
- PM: 0 and ± 10000 rad

Note: The reference value for the AF range in the **window title bar** is displayed with respect to the defined reference *position*. The position can vary for different windows. For time domain and frequency domain windows, for example, a different reference value can be displayed, although the same reference is actually used (but the positions vary).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue`
on page 222

AF Coupling

Controls the automatic correction of the frequency offset and phase offset of the input signal:

This function is only available for FM or PM time domain evaluations.

- FM time evaluation
If DC is selected, the absolute frequency is displayed. That means, an input signal with an offset relative to the center frequency is not displayed symmetrically to the zero line.
If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric to the zero line.
- PM time evaluation
If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.
If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric to the zero line.

Remote command:

`[SENSe:]ADEMod<n>:AF:COUPLing` on page 209

Deviation

Switches between logarithmic and linear display of the modulation depth or the phase deviation or the frequency deviation.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing` on page 196

AF Auto Scale

Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Remote command:


`[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTinuous]` on page 231

5.7.4.2 RF evaluation

Access: "Overview" > "Demod Settings" > "Scaling"

Or: "Meas Setup" > "Demod" > "Scaling" tab

These settings are only available for RF evaluations and the "result summary".

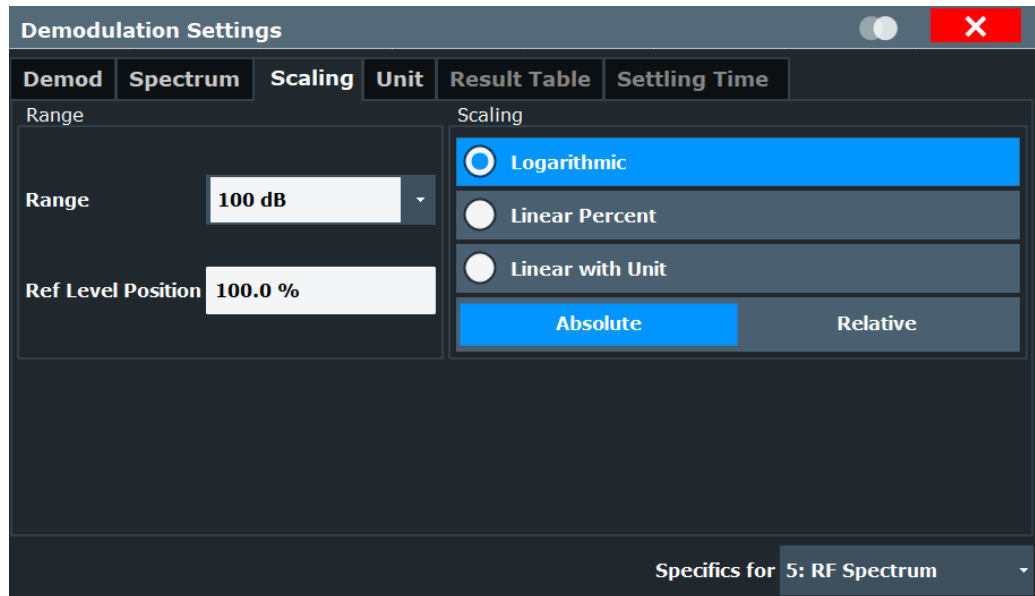

Range.....	72
Ref Level Position.....	72
Auto Scale Once.....	72
Scaling.....	73

Range

Defines the displayed y-axis range in dB.

The default value is 100 dB.

For Analog Modulation Analysis measurements, time domain scaling is defined in Hz (default: 500 kHz).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]` on page 194

Ref Level Position

Defines the reference level position, i.e. the position of the maximum AD converter value on the level axis in %.

0 % corresponds to the lower and 100 % to the upper limit of the diagram.

Values from -120 % to +280 % are available.

Larger values are useful for small scales, such as a power range of 10 dB or 20 dB, and low signal levels, for example 60 dB below the reference level. In this case, large reference level position values allow you to see the trace again.

Only available for RF measurements.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RPOsition` on page 195

Auto Scale Once

Automatically determines the optimal range and reference level position to be displayed for the current measurement settings.

The display is only set once; it is not adapted further if the measurement settings are changed again.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE`
on page 194

Scaling

Defines the scaling method for the y-axis.

"Logarithmic"	Logarithmic scaling (only available for logarithmic units - dB..., and A, V, Watt)
"Linear with Unit"	Linear scaling in the unit of the measured signal
"Linear Percent"	Linear scaling in percentages from 0 to 100
"Absolute"	The labeling of the level lines refers to the absolute value of the reference level (not available for "Linear Percent")
"Relative"	The scaling is in dB, relative to the reference level (only available for logarithmic units - dB...). The upper line of the grid (reference level) is always at 0 dB.

Remote command:


`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing` on page 196
`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE`
on page 194

5.7.5 Units

Access: "Overview" > "Demod Settings" > "Unit"

Or: "Meas Setup" > "Demod" > "Unit" tab

The units define how the demodulated data is displayed.

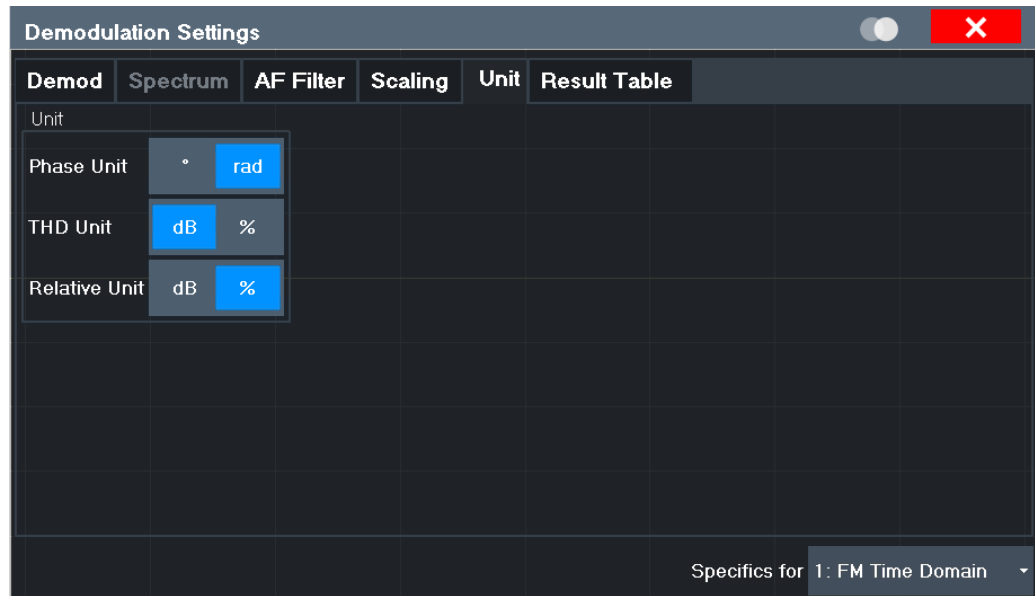

Phase Unit (Rad/Deg).....	74
THD Unit (%/ DB).....	74
Relative Unit.....	74

Phase Unit (Rad/Deg)

Sets the phase unit to rad or deg for displaying PM signals.

Remote command:

`UNIT<n>:ANGLE` on page 223

THD Unit (%/ DB)

Sets the unit to percent or DB for the calculation of the THD (in the "Result Summary").

Remote command:

`UNIT<n>:THD` on page 223

Relative Unit

Defines the unit for relative demodulation results (see [Chapter 5.7.6, "Result table settings"](#), on page 74).


Remote command:

`CONFigure:ADEMod:RESults:UNIT` on page 226

5.7.6 Result table settings

Access: "Overview" > "Demod Settings" > "Result Table"

Or: "Meas Setup" > "Demod" > "Result Table" tab

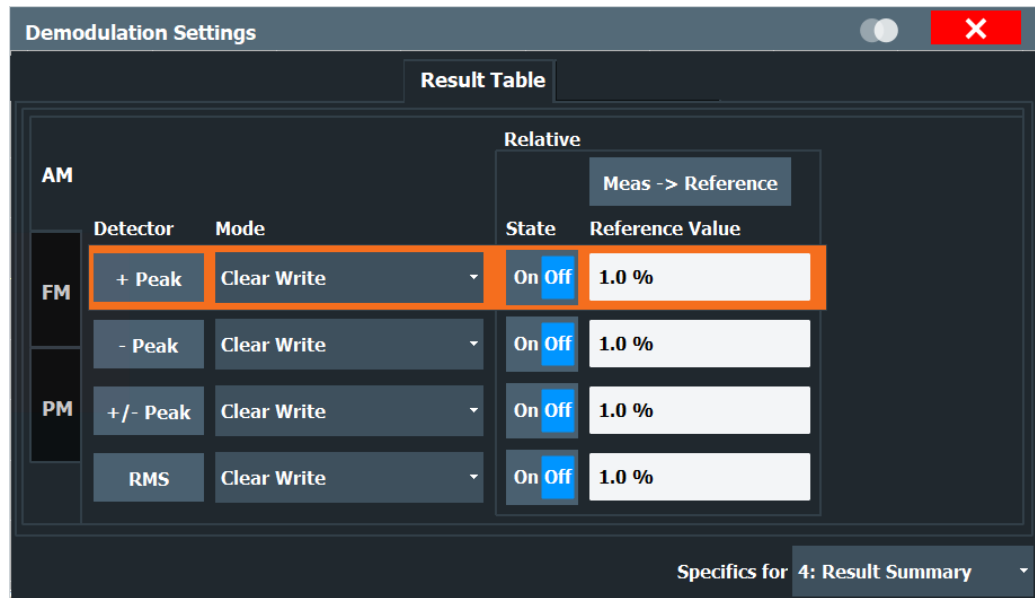

The demodulation results are displayed in the "Result Summary" table (see also "Result Summary" on page 24). The detectors used to determine the results can be configured.

In addition to common absolute demodulation, the R&S FSV3 AM/FM/PM Modulation Analysis application also provides demodulation results relative to user-defined or measured reference values in the "Result Summary".

The settings for the "Result Summary" can be defined individually for the different modulation types (FM, AM, PM). For each modulation type, a separate tab is provided in the dialog box.

Detector.....	75
Mode.....	75
State.....	76
Reference Value.....	76
Meas -> Reference.....	76

Detector

Detector type for demodulation results

"+ Peak"	Positive peak
"- Peak"	Negative peak
"+/- Peak"	Autoppeak
"RMS"	Root mean square

Remote command:

The detector is specified by the `DETECTOR<det>` suffix in `CONFIGURE:RELATIVE:AM|FM|PM:DETECTOR<det>... commands.`

Mode

Defines the mode with which the demodulation result is determined.

- "Clear Write" Overwrite mode: the detector value is overwritten by each sweep. This is the default setting.
- "Max Hold" The maximum value is determined over several sweeps and displayed. The R&S FSV/A saves each result only if the new value is greater than the previous one.
- "Average" The average result is determined over all sweeps.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:MODE](#) on page 225

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:MODE](#) on page 225

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:MODE](#) on page 225

State

Activates relative demodulation for the selected detector. If activated, the demodulated result is set in relation to the [Reference Value](#).

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATE](#) on page 224

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATE](#) on page 224

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 224

Reference Value

Defines the reference value to be used for relative demodulation results and recalculates the results. If necessary, the detector is activated.

Note: A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence](#) on page 224

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence](#) on page 224

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence](#) on page 224

Meas -> Reference

Sets the [Reference Value](#) to be used for relative demodulation results to the currently measured value *for all relative detectors*.

Note: A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

If necessary, the detectors are activated.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>](#)
on page 225

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>](#)
on page 225


[CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>](#)
on page 225

5.7.7 Settling time

Access: "Overview" > "Demod Settings" > "Settling Time"


Or: "Meas Setup" > "Demod" > "Settling Time" tab

The settling time defines when the signal remains within a specified target corridor. The corridor is defined by the upper and lower settling limit. The function is available for all time domain displays.

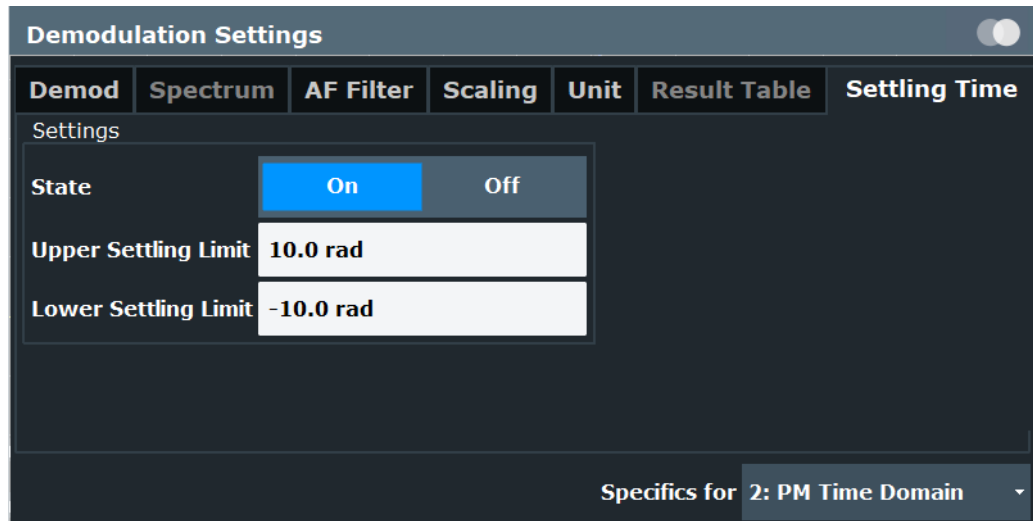

If enabled, the time is determined by evaluating the signal values from the end of the measurement. The last position at which the signal exceeds the corridor is the settling time. The settling time is defined with reference to the start of the data acquisition or the trigger event. A possible trigger offset is not considered.

The settling time is indicated by a temporary marker in the time domain diagram. The result is also indicated in the "result summary". The settling time is evaluated for each time domain window for the selected trace (see "[Selected Trace](#)" on page 61).

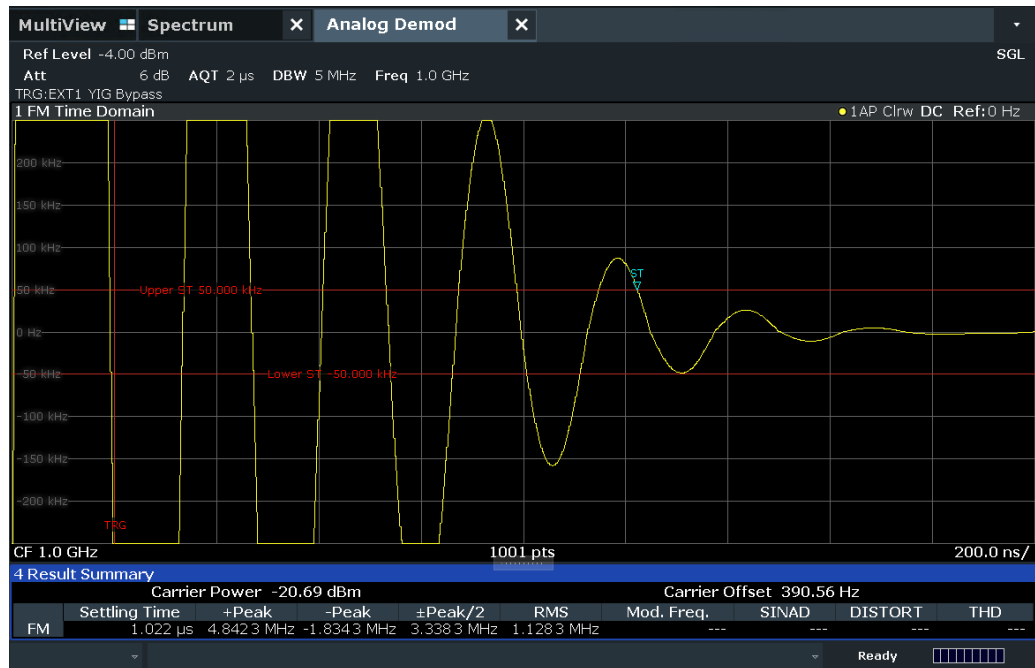

State.....	78
Upper Settling Limit.....	78
Lower Settling Limit.....	78

State

Enables or disables the calculation and display of the settling time.

Remote command:

[SENSe:]ADEMod:SETTling:TIME:STATE on page 227

Result: [SENSe:]ADEMod:SETTling:TIME:RESult<t>? on page 254

Upper Settling Limit

Defines the upper limit of the settling time corridor. The value is defined with reference to the reference value, see also "Reference Value" on page 70 and "Zero Phase Reference Position (PM Time Domain only)" on page 62.

Remote command:

[SENSe:]ADEMod:SETTling:TIME:LIMit:UPPer on page 227

Lower Settling Limit

Defines the lower limit of the settling time corridor. The value is defined with reference to the reference value, see also "Reference Value" on page 70 and "Zero Phase Reference Position (PM Time Domain only)" on page 62.

Remote command:

[SENSe:]ADEMod:SETTling:TIME:LIMit:LOWer on page 226

5.8 Output settings

- [Output settings](#).....79
- [Analog demod output settings](#).....80

5.8.1 Output settings


Access: [Input/Output] > "Output"

The R&S FSV/A can provide output to special connectors for other devices.

For details on connectors, refer to the R&S FSV/A Getting Started manual, "Front / Rear Panel View" chapters.



How to provide trigger signals as output is described in detail in the R&S FSV/A User Manual.

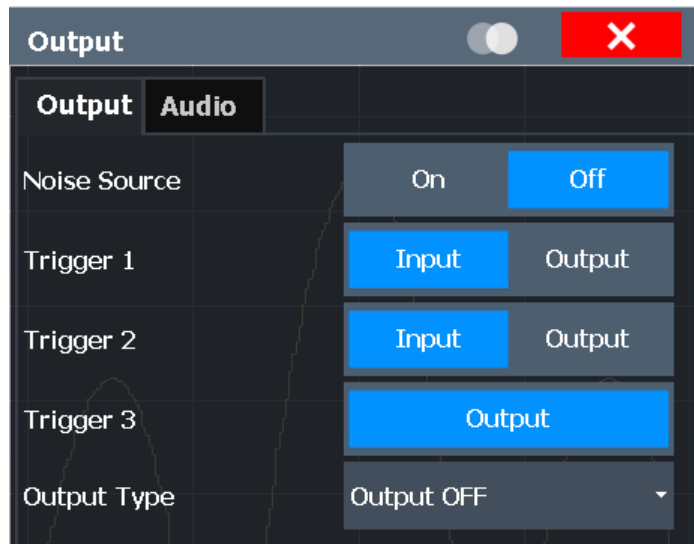

- [Noise Source Control](#).....79

Noise Source Control

Enables or disables the 28 V voltage supply for an external noise source connected to the "Noise source control / Power sensor") connector. By switching the supply voltage for an external noise source on or off in the firmware, you can enable or disable the device as required.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FSV/A itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the R&S FSV/A and measure the total noise power. From this value, you can determine the noise power of the R&S FSV/A. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

Remote command:

`DIAGnostic:SERVice:NSource` on page 184

5.8.2 Analog demod output settings

Access: "Overview" ≥ "Output" > "Analog Demod"

The demodulated signal in time domain results can be output to the "VIDEO" output connector on the R&S FSV/A.


The "VIDEO" connector requires option R&S FSV3-B5.

Optionally, you can output the demodulated signal to the internal loudspeaker or the headphone connector on the R&S FSV/A (see "Phones Output" on page 82).

The following settings and functions are available to configure the output in the R&S FSV3 AM/FM/PM Modulation Analysis application.

Note that the audio frequency (AF) filter settings used for demodulation only apply to the online output at the headphones connector. The "VIDEO" provides the unfiltered data. A maximum of two high pass, low pass or deemphasis filters can be active at the same time if "Analog Demod" output is active.

(See [Chapter 5.7.3, "AF filter"](#), on page 65)

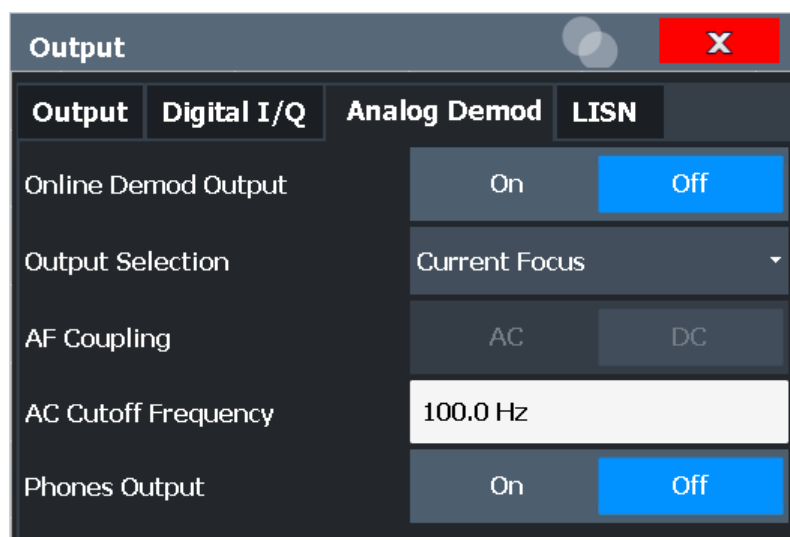

Online Demodulation Output State	81
Output Selection	81
AF Coupling	81
AC Cutoff Frequency	81
Phones Output	82

Online Demodulation Output State

Enables or disables online demodulation output. If enabled, the demodulated audio frequencies are output to the "VIDEO" output connector. Optionally, the output can also be provided to the internal loudspeaker or the "AF Out" connector of the R&S FSV/A (see "Phones Output" on page 82).

Remote command:

`OUTPut:ADEMod[:ONLine][:STATe]` on page 184

Output Selection

Selects the result display whose results are output. Only time domain results can be selected. All currently active time domain result displays are listed.

"Current Focus" dynamically switches to the currently selected window. Thus you can easily change the output signal simply by selecting the windows in the display. If a window is selected that does not contain a time-domain result display, the selection is ignored and the previous setting is maintained.

The result display currently used for output is indicated by a "Demod Out" label in the window title bar.

Remote command:

`OUTPut:ADEMod[:ONLine]:SOURce` on page 184

AF Coupling

Controls the automatic correction of the frequency offset and phase offset of the input signal:

This function is only available for FM or PM time domain evaluations.

- FM time evaluation
 - If DC is selected, the absolute frequency is displayed. That means, an input signal with an offset relative to the center frequency is not displayed symmetrically to the zero line.
 - If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric to the zero line.
- PM time evaluation
 - If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.
 - If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric to the zero line.

Remote command:

`[SENSe:]ADEMod<n>:AF:COUPling` on page 209

AC Cutoff Frequency

Defines the cutoff frequency for the AC highpass filter (for AC coupling only, see [AF Coupling](#)).

Note that the audio frequency (AF) filter settings used for demodulation also apply to the online output.

(See [Chapter 5.7.3, "AF filter"](#), on page 65)

Remote command:

`OUTPut:ADEMod[:ONLine]:AF[:CFrequency]` on page 185

Phones Output

If enabled, the demodulated audio signal is also output to the internal loudspeaker or the "AF Out" connector of the R&S FSV/A, in addition to the "VIDEO" connector.

CAUTION! Risk of hearing damage. Before putting on the headphones, make sure that the volume setting is not too high to protect your hearing.

Note that the audio output is only provided to one of the additional outputs at a time. If headphones are connected to the "AF Out" connector, the loudspeaker is deactivated. If no headphones are connected to the "AF Out" connector, the output is provided via the internal loudspeaker.


Note: If you do not hear output on the connected headphones despite having enabled both general online demodulation output (see "[Online Demodulation Output State](#)" on page 81) and "Phones Output", adjust the volume setting using the volume control.

Remote command:

[OUTPut:ADEMod\[:ONLine\]:PHONes](#) on page 185

5.9 Adjusting settings automatically

Access: [AUTO SET]

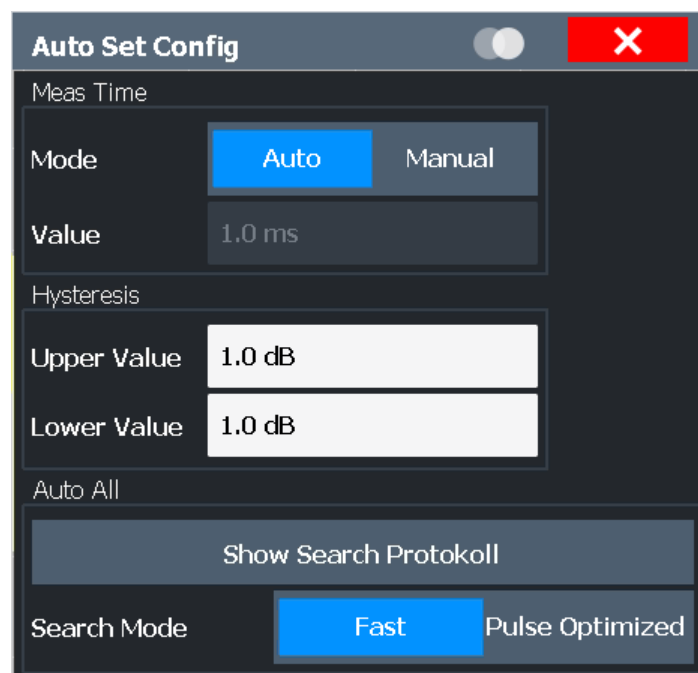

Some settings can be adjusted by the R&S FSV/A automatically according to the current measurement settings. To do so, a measurement is performed. You can configure this measurement.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function, a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you are asked how the R&S FSV/A should behave:

- (Default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger. The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows for "IF Power" and "RF Power" triggers:
Trigger level = Reference level - 15 dB

Remote command:

[SENSe:]ADJust:CONFigure:TRIGger on page 230

Adjusting all Determinable Settings Automatically (Auto All).....	83
Adjusting the Center Frequency Automatically (Auto Frequency).....	83
AF Auto Scale.....	84
Setting the Reference Level Automatically (Auto Level).....	84
Resetting the Automatic Measurement Time (Meas Time Auto).....	84
Changing the Automatic Measurement Time (Meas Time Manual).....	84
Upper Level Hysteresis.....	84
Lower Level Hysteresis.....	85
Show Search Protocol.....	85
Search Mode.....	85

Adjusting all Determinable Settings Automatically (Auto All)

Activates all automatic adjustment functions for the current measurement settings, including:

- [Auto Frequency](#)
- [Auto Level](#)
- ["AF Auto Scale"](#) on page 71

Note: Auto measurement. For some measurements, the "Auto All" function determines the required measurement parameters automatically. In this case, the progress of the auto measurement is indicated in a message box. See the R&S FSV3000/ FSVA3000 base unit user manual.

Remote command:

[SENSe:]ADJust:ALL on page 228

Adjusting the Center Frequency Automatically (Auto Frequency)

The R&S FSV/A adjusts the center frequency automatically.

The optimum center frequency is the frequency with the highest S/N ratio in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

At the same time, the optimal reference level is also set (see ["Setting the Reference Level Automatically \(Auto Level\)"](#) on page 45).

Remote command:

[SENSe:]ADJust:FREQuency on page 231

AF Auto Scale

Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Remote command:

`[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTinuous]` on page 231

Setting the Reference Level Automatically (Auto Level)

To determine the required reference level, a level measurement is performed on the R&S FSV/A.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see "[Changing the Automatic Measurement Time \(Meas Time Manual\)](#)" on page 84).

Remote command:

`[SENSe:]ADJust:LEVel` on page 231

Resetting the Automatic Measurement Time (Meas Time Auto)

Resets the measurement duration for automatic settings to the default value.

(Spectrum and AM/FM/PM modulation analysis application: 1 ms)

Remote command:

`[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE` on page 229

Changing the Automatic Measurement Time (Meas Time Manual)

This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

Note: The maximum measurement duration depends on the currently selected measurement and the installed (optional) hardware. Thus, the measurement duration actually used to determine the automatic settings can be shorter than the value you define here.

Remote command:

`[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE` on page 229

`[SENSe:]ADJust:CONFigure:LEVel:DURation` on page 229

Upper Level Hysteresis

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold that the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

`[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer` on page 230

Lower Level Hysteresis


When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold that the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[\[SENSe:\]ADJust:CONFigure:HYSTeresis:LOWer](#) on page 229

Show Search Protocol

Displays the results of the automatic measurement performed to determine the optimal measurement configuration.

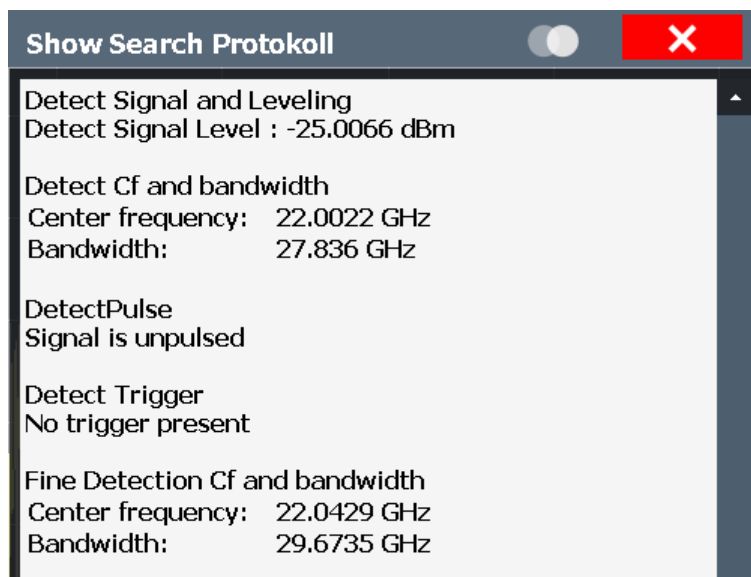

Search Mode

Determines the search mode for the automatic measurement performed to determine the optimal measurement configuration.

"Fast" The measurement is optimized for speed.

"Pulse opti- The measurement is optimized to analyze pulse signals adequately.
mized"

Remote command:

[\[SENSe:\]ADJust:CONFigure:SMODE](#) on page 230

6 Analysis

Access: "Overview" > "Analysis"

General result analysis settings concerning the trace, markers, lines etc. are identical to the analysis functions in the base unit except for the special marker functions.

For a description of the lines functionality, see the R&S FSV/A User Manual.

The remote commands required to perform these tasks are described in [Chapter 10, "Remote commands for AM/FM/PM Modulation Analysis"](#), on page 132.

- [Trace settings](#).....86
- [Spectrogram settings](#).....90
- [Trace / data export configuration](#).....95
- [Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application](#).....99

6.1 Trace settings

Access: "Overview" > "Analysis" > "Traces"

Or: [TRACE] > "Trace Config"


You can configure the settings for up to 6 individual traces in the same result display. Each trace is displayed in a different color, indicated in the window title bar and the trace settings.



In the R&S FSV3 AM/FM/PM Modulation Analysis application, when you configure the traces for a window with a specific evaluation (e.g. AM time domain), the traces in all windows with the same evaluation are configured identically.



Trace data can also be exported to an ASCII file for further analysis. For details see [Chapter 6.3, "Trace / data export configuration"](#), on page 95.

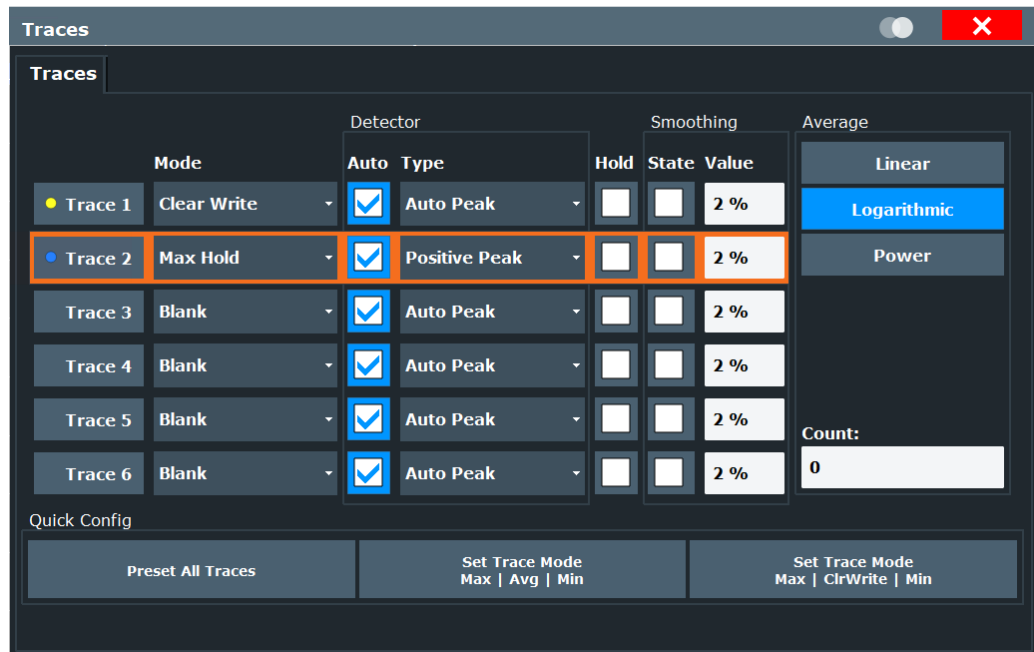

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6.....87

Trace Mode..... 87

Detector.....88

Hold.....89

Average Mode..... 89

Average Count..... 89

Predefined Trace Settings - Quick Config.....90

Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys).....90

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the corresponding trace for configuration. The currently selected trace is highlighted.

Remote command:

Selected via numeric suffix of:TRACe<1... 6> commands

DISPlay[:WINDow<n>] [:SUBWindow<w>]:TRACe<t>[:STATe] on page 266

Trace Mode

Defines the update mode for subsequent traces.

- "Clear/ Write" Overwrite mode (default): the trace is overwritten by each sweep. All available detectors can be selected.
- "Max Hold" The maximum value is determined over several measurements and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is greater than the previous one. This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope. This mode is not available for statistics measurements.

"Min Hold"	<p>The minimum value is determined from several measurements and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is lower than the previous one.</p> <p>This mode is useful for example for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed, whereas a CW signal is recognized by its constant level.</p> <p>This mode is not available for statistics measurements.</p>
"Average"	<p>The average is formed over several sweeps.</p> <p>The Sweep/Average Count determines the number of averaging procedures.</p> <p>This mode is not available for statistics measurements.</p>
"View"	<p>The current contents of the trace memory are frozen and displayed.</p> <p>Note: If a trace is frozen, you can change the measurement settings, apart from scaling settings, without impact on the displayed trace. The fact that the displayed trace no longer matches the current measurement settings is indicated by a yellow asterisk * on the tab label. If you change any parameters that affect the scaling of the diagram axes, the R&S FSV/A automatically adapts the trace data to the changed display range. Thus, you can zoom into the diagram after the measurement to show details of the trace.</p>
"Blank"	Removes the selected trace from the display.

Remote command:

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:MODE](#) on page 264

Detector

Defines the trace detector to be used for trace analysis.

"Auto"	(default:) Selects the optimum detector for the selected trace and filter mode
"Type"	<p>Defines the selected detector type.</p> <p>Note: If the EMI (R&S FSV3-K54) measurement option is installed, additional detectors are available, even if EMI measurement is not active. If you select a CISPR trace detector, the RBW filter type is automatically also set to CISPR.</p> <p>CISPR detectors are only available under the following conditions:</p> <ul style="list-style-type: none"> • Time domain measurements and frequency measurements in sweep mode (not FFT mode, not power measurements, emission measurements, or statistics measurements) • Trigger mode "Free Run" or "External" (trigger offset ≥ 0 only for "External") • Gate mode: "Off"

Remote command:

[\[SENSe:\] \[WINDow<n>:\] DETector<t>\[:FUNCTION\]](#) on page 269

[\[SENSe:\] \[WINDow<n>:\] DETector<t>\[:FUNCTION\]:AUTO](#) on page 269

Hold

If activated, traces in "Min Hold", "Max Hold" and "Average" mode are not reset after specific parameter changes have been made.

Normally, the measurement is started again after parameter changes, before the measurement results are analyzed (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

The default setting is off.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONTinuous`
on page 265

Average Mode

Defines the mode with which the trace is averaged over several sweeps.

This setting is generally applicable if trace mode "Average" is selected.

For FFT sweeps, the setting also affects the VBW (regardless of whether the trace is averaged).

(See the chapter on ACLR power measurements in the R&S FSV/A User Manual.)

How many sweeps are averaged is defined by the "Average Count" on page 89.

"Linear"	The power level values are converted into linear units before averaging. After the averaging, the data is converted back into its original unit.
"Logarithmic"	For logarithmic scaling, the values are averaged in dBm. For linear scaling, the behavior is the same as with linear averaging.
"Power"	Activates linear power averaging. The power level values are converted into unit Watt before averaging. After the averaging, the data is converted back into its original unit. Use this mode to average power values in Volts or Amperes correctly. In particular, for small VBW values (smaller than the RBW), use power averaging mode for correct power measurements in FFT sweep mode.

Remote command:

`[SENSe:]AVERAge<n>:TYPE` on page 268

Average Count

Determines the number of averaging or maximum search procedures if the trace modes "Average", "Max Hold" or "Min Hold" are set.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, Max Hold or Min Hold operations are performed.

Remote command:

`[SENSe:]AVERAge<n>:COUNT` on page 268

Predefined Trace Settings - Quick Config

Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

Function	Trace Settings	
Preset All Traces	Trace 1:	Clear Write
	Traces 2-6:	Blank
Set Trace Mode Max Avg Min	Trace 1:	Max Hold
	Trace 2:	Average
	Trace 3:	Min Hold
	Traces 4-6:	Blank
Set Trace Mode Max ClrWrite Min	Trace 1:	Max Hold
	Trace 2:	Clear Write
	Trace 3:	Min Hold
	Traces 4-6:	Blank

Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys)

Displays the "Traces" settings and focuses the "Mode" list for the selected trace.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]` on page 266

6.2 Spectrogram settings

Access: [TRACE] > "Spectrogram Config"

The individual settings available for spectrogram display are described here. For settings on color mapping, see [Chapter 6.2.2, "Color map settings"](#), on page 94.

Settings concerning the frames and how they are handled during a sweep are provided as additional sweep settings for spectrogram display.

See [Chapter 5.5, "Data acquisition"](#), on page 54.


Search functions for spectrogram markers are described in [Chapter 6.4.3, "Marker search settings for spectrograms"](#), on page 106.

- [General spectrogram settings](#)..... 90
- [Color map settings](#)..... 94

6.2.1 General spectrogram settings

Access: [TRACE] > "Spectrogram Config"

This section describes general settings for spectrogram display.

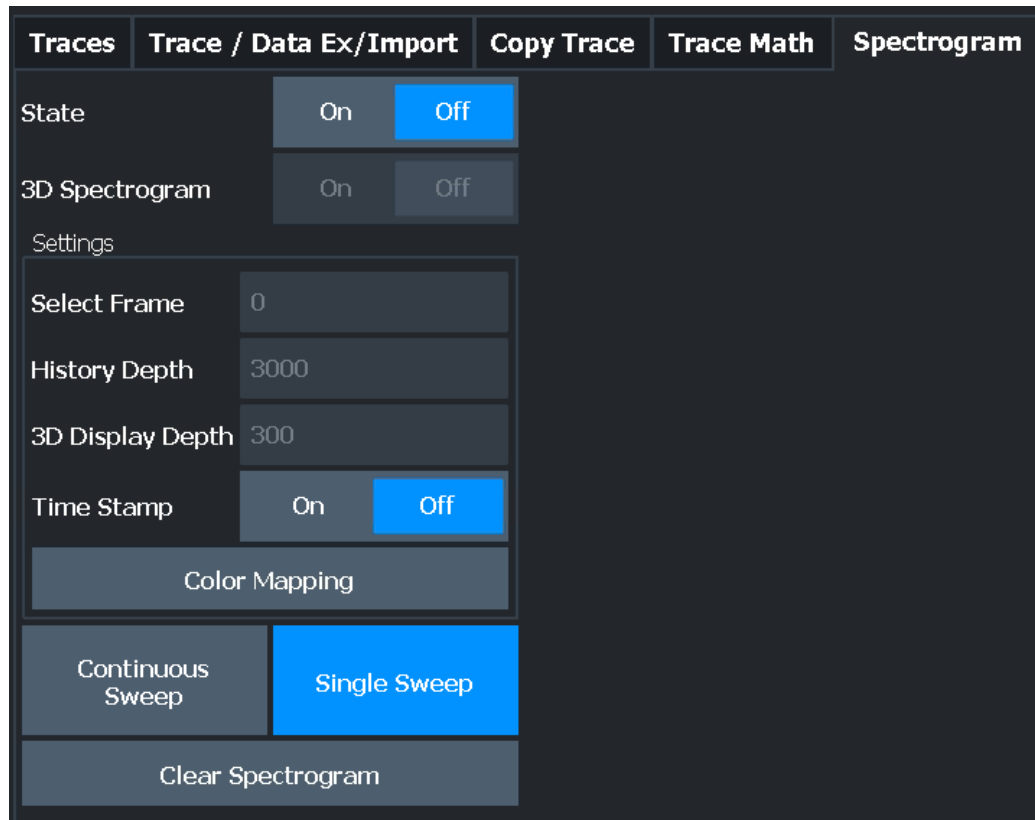

State.....	91
3D Spectrogram State.....	91
Select Frame.....	92
History Depth.....	92
3-D Display Depth.....	92
Trace.....	92
Time Stamp.....	92
Color Mapping.....	92
Continuous Sweep / Run Cont.....	93
Single Sweep / Run Single.....	93
Clear Spectrogram.....	93

State

Activates and deactivates a Spectrogram subwindow.

"Off" Closes the Spectrogram subwindow.

Remote command:

[CALCulate<n>:SPECTrogram:LAYout](#) on page 259

3D Spectrogram State

Activates and deactivates a 3-dimensional spectrogram. As opposed to the common 2-dimensional spectrogram, the power is not only indicated by a color mapping, but also in a third dimension, the z-axis.

For details see the R&S FSV/A User Manual.

Remote command:

[CALCulate<n>:SPECTrogram:THReedim\[:STATe\]](#) on page 259

Select Frame

Selects a specific frame, loads the corresponding trace from the memory, and displays it in the Spectrum window.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This function is only available in single sweep mode or if the sweep is stopped, and only if a spectrogram is selected.

The most recent frame is number 0, all previous frames have a negative number.

Remote command:

[CALCulate<n>:SPECTrogram:FRAMe:SELeCt](#) on page 258

History Depth

Sets the number of frames that the R&S FSV/A stores in its memory.

The maximum number of frames depends on the [Sweep Points](#).

For an overview of the maximum number of frames depending on the number of sweep points, see the R&S FSV/A User Manual.

If the memory is full, the R&S FSV/A deletes the oldest frames stored in the memory and replaces them with the new data.

Remote command:

[CALCulate<n>:SPECTrogram:HDEPth](#) on page 258

3-D Display Depth

Defines the number of frames displayed in a 3-dimensional spectrogram.

For details see the R&S FSV/A User Manual.

Trace

Selects the diagram trace on which the spectrogram is based.

Remote command:

[CALCulate<n>:SGRam:TRACe](#) on page 260

Time Stamp

Activates and deactivates the timestamp. The timestamp shows the system time while the measurement is running. In single sweep mode or if the sweep is stopped, the timestamp shows the time and date of the end of the sweep.

When active, the timestamp replaces the display of the frame number.

Remote command:

[CALCulate<n>:SPECTrogram:TSTamp\[:STATe\]](#) on page 261

[CALCulate<n>:SPECTrogram:TSTamp:DATA?](#) on page 260

Color Mapping

Opens the "Color Mapping" dialog.

For details see the R&S FSV/A User Manual.

Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, "Continuous Sweep" and [RUN CONT] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

If the Sequencer is active in MSRT mode, the "Continuous Sweep" function does not start data capturing. It merely affects trace averaging over multiple sequences. In this case, trace averaging is performed.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>:CONTinuous` on page 233

Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, "Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

For details on the Sequencer, see the R&S FSV/A User Manual.

Remote command:

`INITiate<n>[:IMMediate]` on page 233

Clear Spectrogram

Resets the spectrogram result display and clears the history buffer.

This function is only available if a spectrogram is selected.

Remote command:

`CALCulate<n>:SPECTrogram:CLEar[:IMMediate]` on page 257

6.2.2 Color map settings

Access: "Overview" > "Analysis" > "Traces" > "Spectrogram" > "Color Mapping"

or: [TRACE] > "Spectrogram Config" > "Color Mapping"

In addition to the available color settings, the dialog box displays the current color map and provides a preview of the display with the current settings.

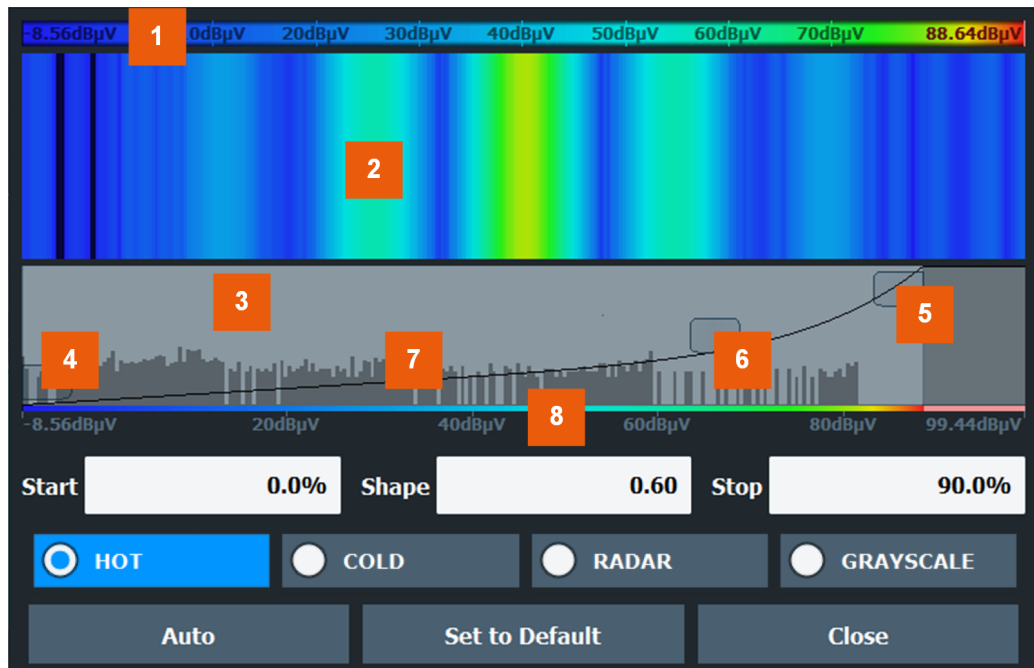


Figure 6-1: Color Mapping dialog box

- 1 = Color map: shows the current color distribution
- 2 = Preview pane: shows a preview of the spectrogram with any changes that you make to the color scheme
- 3 = Color curve pane: graphical representation of all settings available to customize the color scheme
- 4/5 = Color range start and stop sliders: define the range of the color map or amplitudes for the spectrogram
- 6 = Color curve slider: adjusts the focus of the color curve
- 7 = Histogram: shows the distribution of measured values
- 8 = Scale of the horizontal axis (value range)

Start / Stop.....	94
Shape.....	95
Hot/Cold/Radar/Grayscale.....	95
Auto.....	95
Set to Default.....	95
Close.....	95

Start / Stop

Defines the lower and upper boundaries of the value range of the spectrogram.

Remote command:

`DISPlay[:WINDow<n>]:SPECTrogram:COLor:LOWer` on page 262

`DISPlay[:WINDow<n>]:SPECTrogram:COLor:UPPer` on page 263

Shape

Defines the shape and focus of the color curve for the spectrogram result display.

"-1 to <0"	More colors are distributed among the lower values
"0"	Colors are distributed linearly among the values
">0 to 1"	More colors are distributed among the higher values

Remote command:

[DISPlay\[:WINDow<n>\]:SPECTrogram:COLor:SHAPE](#) on page 262

Hot/Cold/Radar/Grayscale

Sets the color scheme for the spectrogram.

Remote command:

[DISPlay\[:WINDow<n>\]:SPECTrogram:COLor\[:STYLE\]](#) on page 263

Auto

Defines the color range automatically according to the existing measured values for optimized display.

Set to Default

Sets the color mapping to the default settings.

Remote command:

[DISPlay\[:WINDow<n>\]:SPECTrogram:COLor:DEFAULT](#) on page 262

Close

Saves the changes and closes the dialog box.

6.3 Trace / data export configuration




Access: "Save" > "Export" > "Export Configuration"

Or: [TRACE] > "Trace Config" > "Trace / Data Export"



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FSV/A applications are not described here.

See the R&S FSV3000/ FSVA3000 base unit user manual for a description of the standard functions.

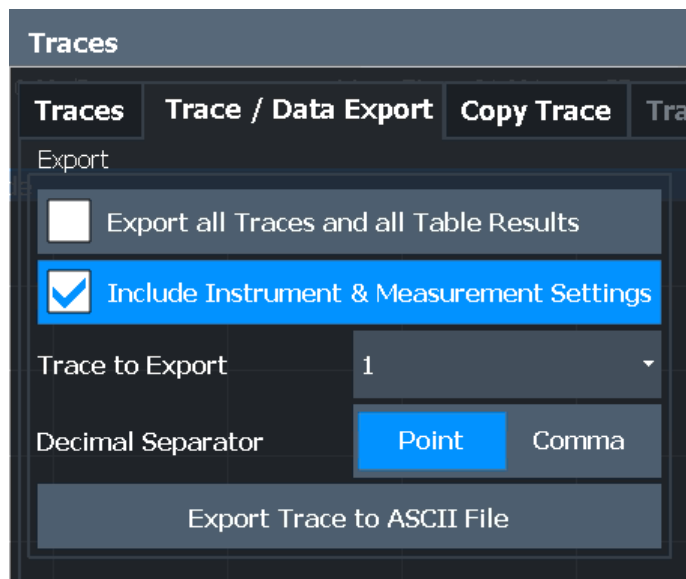

Export all Traces and all Table Results.....	96
Include Instrument & Measurement Settings.....	96
Trace to Export.....	96
Decimal Separator.....	97
Export Trace to ASCII File.....	97
L File Type.....	98
L Decimal Separator.....	98
L Column Separator.....	98
L File Explorer.....	98
Export Spectrogram to ASCII File.....	98

Export all Traces and all Table Results

Selects all displayed traces and result tables (e.g. "Result Summary", marker table etc.) in the current application for export to an ASCII file.

Alternatively, you can select one specific trace only for export (see [Trace to Export](#)).

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

`FORMat:DEXPort:TRACes` on page 249

Include Instrument & Measurement Settings

Includes additional instrument and measurement settings in the header of the export file for result data.

See the R&S FSV3000/ FSVA3000 base unit user manual for details.

Remote command:

`FORMat:DEXPort:HEADer` on page 248

Trace to Export

Defines an individual trace to be exported to a file.

This setting is not available if [Export all Traces and all Table Results](#) is selected.

Decimal Separator

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.


Remote command:

[FORMat:DEXPort:DSEParator](#) on page 248

Export Trace to ASCII File

Saves the selected trace or all traces in the currently active result display to the specified file and directory in the selected ASCII format.

"File Explorer": Instead of using the file manager of the R&S FSV/A firmware, you can also use the Microsoft Windows File Explorer to manage files.

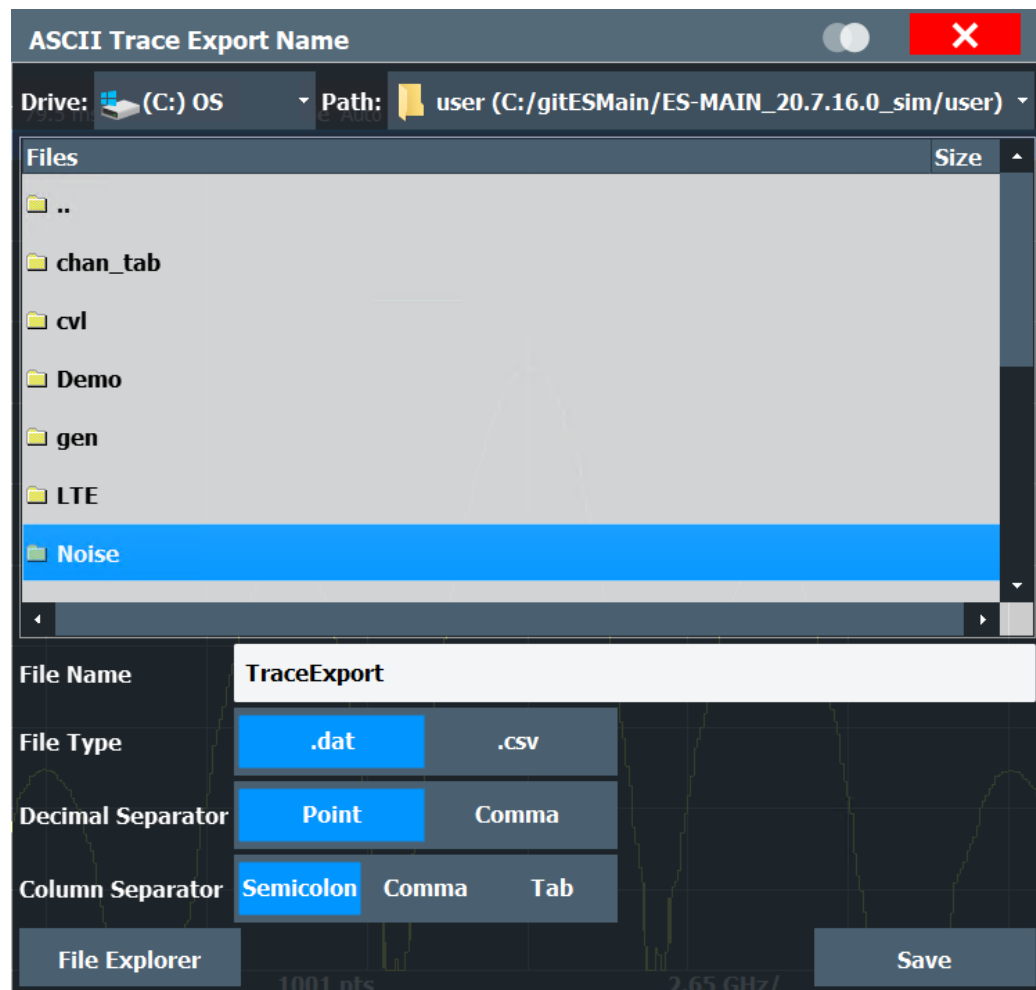

Note: Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Remote command:

`MMEMemory:STORE<n>:TRACe` on page 250

File Type ← Export Trace to ASCII File

Determines the format of the ASCII file to be imported or exported.

Depending on the external program in which the data file was created or is evaluated, a comma-separated list (CSV) or a plain data format (DAT) file is required.

Remote command:

`FORMat:DEXPort:FORMat` on page 247

Decimal Separator ← Export Trace to ASCII File

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

`FORMat:DEXPort:DSEParator` on page 248

Column Separator ← Export Trace to ASCII File

Selects the character that separates columns in the exported ASCII file. The character can be either a semicolon, a comma or a tabulator (tab).

Example for semicolon:

```
Type;FSV3007;Version;1.00;Date;01.Jan 3000;
```

Example for comma:

```
Type,FSV3007,
Version,1.00,
Date,01.Jan 3000,
```

Example for tabulator (tab after the last column is not visible):

```
Type      FSV3007
Version   1.00
Date      01.Jan 3000
```

The selected column separator setting remains the same, even after a preset.

Remote command:

`FORMat:DEXPort:CSEParator` on page 248

File Explorer ← Export Trace to ASCII File

Opens the Microsoft Windows File Explorer.

Remote command:

not supported

Export Spectrogram to ASCII File

Opens a file selection dialog box and saves the selected spectrogram in ASCII format (.dat) to the specified file and directory.

For details on the file format, see the R&S FSV3000/ FSVA3000 base unit user manual.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Remote command:

[MMEMory:STORe<n>:SPECTrogram](#) on page 249

6.4 Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Access: "Overview" > "Analysis"

Basically, markers in the R&S FSV3 AM/FM/PM Modulation Analysis application are very similar to those in the Spectrum application. However, some additional functions are available.

- [Marker settings](#).....99
- [Marker search settings and positioning functions](#)..... 104
- [Marker search settings for spectrograms](#)..... 106
- [Marker function configuration](#)..... 109

6.4.1 Marker settings

Access: "Overview" > "Analysis" > "Marker" > "Markers"

Or: "Marker" > "Markers"

- [Individual marker setup](#).....99
- [General marker settings](#)..... 102


6.4.1.1 Individual marker setup

Access: "Overview" > "Analysis" > "Marker" > "Markers"

Or: "Marker" > "Markers" tab

In the R&S FSV3 AM/FM/PM Modulation Analysis application, up to 17 markers or delta markers can be activated for each window simultaneously.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

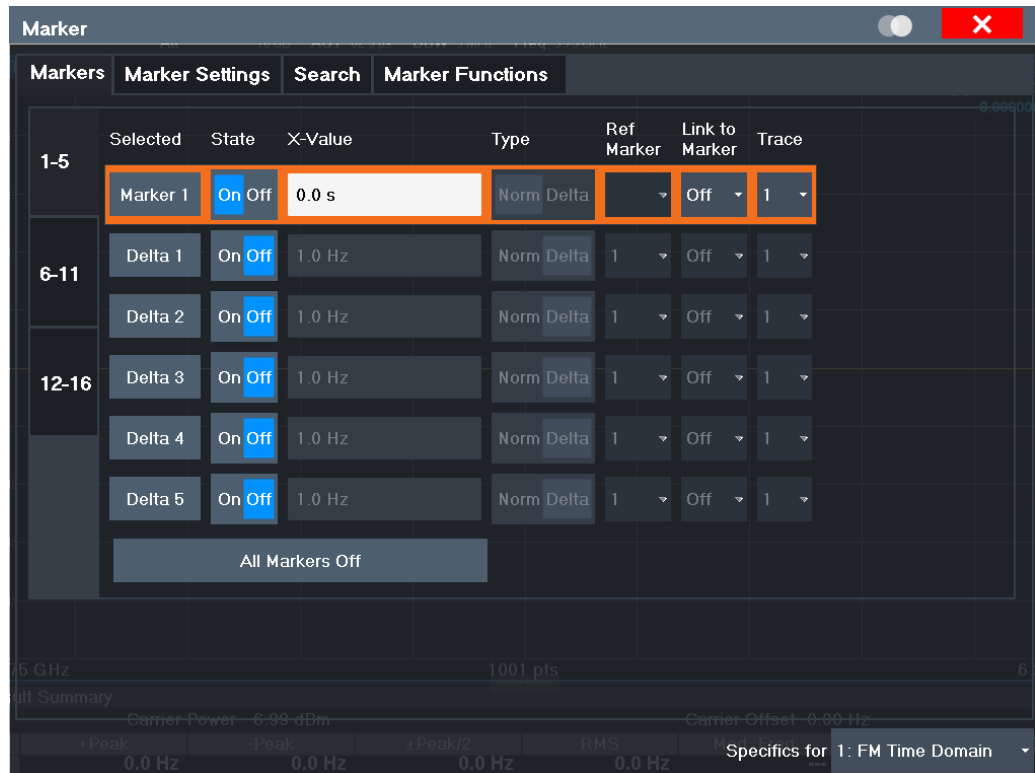

The markers are distributed among 3 tabs for a better overview. By default, the first marker is defined as a normal marker, whereas all others are defined as delta markers with reference to the first marker. All markers are assigned to trace 1, but only the first marker is active.

Selected Marker.....	100
Marker State.....	100
Marker Position X-value.....	101
Marker Type.....	101
Reference Marker.....	101
Linking to Another Marker.....	101
Assigning the Marker to a Trace.....	101
All Markers Off.....	102

Selected Marker

Marker name. The marker which is currently selected for editing is highlighted orange.

Remote command:

Marker selected via suffix <m> in remote commands.

Marker State

Activates or deactivates the marker in the diagram.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 271

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 275

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Marker Position X-value

Defines the position (x-value) of the marker in the diagram. For normal markers, the absolute position is indicated. For delta markers, the position relative to the reference marker is provided.

Remote command:

`CALCulate<n>:MARKer<m>:X` on page 272

`CALCulate<n>:DELTamarker<m>:X` on page 275

Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position in the diagram.

"Delta" A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 271

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 275

Reference Marker

Defines a marker as the reference marker which is used to determine relative analysis results (delta marker values).

Remote command:

`CALCulate<n>:DELTamarker<m>:MREference` on page 274

Linking to Another Marker

Links the current marker to the marker selected from the list of active markers. If the x-axis value of the initial marker is changed, the linked marker follows to the same position on the x-axis. Linking is off by default.

Using this function you can set two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:

`CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md>` on page 271

`CALCulate<n>:DELTamarker<ms>:LINK:TO:MARKer<md>` on page 273

`CALCulate<n>:DELTamarker<m>:LINK` on page 273

Assigning the Marker to a Trace

The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:

`CALCulate<n>:MARKer<m>:TRACe` on page 271

All Markers Off

Deactivates all markers in one step.

Remote command:


`CALCulate<n>:MARKer<m>:AOFF` on page 270

6.4.1.2 General marker settings

Access: "Overview" > "Analysis" > "Marker" > "Marker Settings"

Or: "Marker" > "Marker Settings" tab

Some general marker settings allow you to influence the marker behavior for all markers.

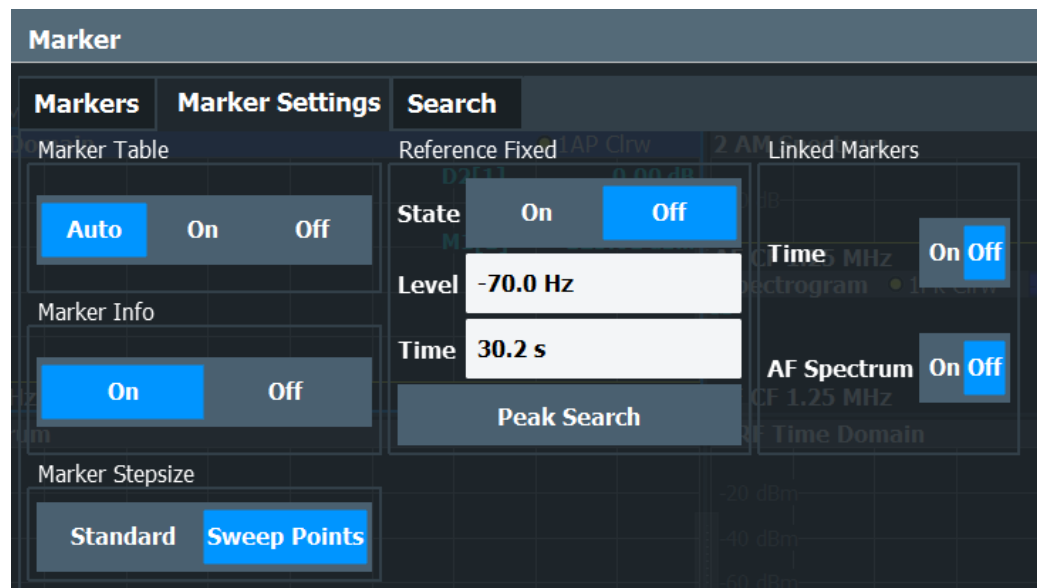

Marker Table Display.....	102
Marker Info.....	103
Marker Stepsize.....	103
Defining a Fixed Reference.....	103
Link Time Marker.....	104
Link AF Spectrum Marker.....	104

Marker Table Display

Defines how the marker information is displayed.

"On" Displays the marker information in a table in a separate area beneath the diagram.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

"Off"	No separate marker table is displayed. If Marker Info is active, the marker information is displayed within the diagram area.
"Auto"	(Default) If more than two markers are active, the marker table is displayed automatically. If Marker Info is active, the marker information for up to two markers is displayed in the diagram area.

Remote command:

`DISPlay[:WINDow<n>]:MTABLE` on page 278

Marker Info

Turns the marker information displayed in the diagram on and off.

1AP Clrw	
M1[1]	81.13 dBµV 177.610 MHz
D2[1]	-22.18 dB -28.980 MHz

Remote command:

`DISPlay[:WINDow<n>]:MINFo[:STATe]` on page 278

Marker Stepsize

Defines the size of the steps that the marker position is moved using the rotary knob.

"Standard"	The marker position is moved in steps of (Span/1000), which corresponds approximately to the number of pixels for the default display of 1001 sweep points. This setting is most suitable to move the marker over a larger distance.
"Sweep Points"	The marker position is moved from one sweep point to the next. This setting is required for a very precise positioning if more sweep points are collected than the number of pixels that can be displayed on the screen. It is the default mode.

Remote command:

`CALCulate<n>:MARKer<m>:X:SSIZE` on page 277

Defining a Fixed Reference

Instead of using a reference marker whose position can vary depending on the measurement results, you can define a fixed reference marker for trace analysis.

Note that this function is not available in all result displays.

For "State" = "On", a vertical and a horizontal red display line are displayed, marked as "FXD". The normal marker 1 is activated and set to the peak value of the trace assigned to marker 1, and a delta marker to the next peak. The fixed reference marker is set to the position of marker 1 at the peak value. The delta marker refers to the fixed reference marker.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

The "Level" and "Frequency" or "Time" settings define the position and value of the reference marker. To move the fixed reference, move the red display lines marked "FXD" in the diagram, or change the position settings in the "Marker Settings" tab of the "Marker" dialog box.

Peak Search sets the fixed reference marker to the current maximum value of the trace assigned to marker 1.

If activated, the fixed reference marker ("FXD") can also be selected as a [Reference Marker](#) instead of another marker.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed[:STATe]` on page 294

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:Y` on page 294

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:X` on page 293

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK]` on page 293

Link Time Marker

Links the markers in all time domain diagrams.

Remote command:

`CALCulate<n>:MARKer<m>:LINK` on page 277

Link AF Spectrum Marker

Links the markers in all AF spectrum displays.

Remote command:

`CALCulate<n>:MARKer<m>:LINK` on page 277

6.4.2 Marker search settings and positioning functions

Access: "Overview" > "Analysis" > "Marker" > "Search"

or: "Marker" > "Search"

Several functions are available to set the marker to a specific position very quickly and easily, or to use the current marker position to define another characteristic value. To determine the required marker position, searches are performed. You can influence the search results using special settings.

The remote commands required to define these settings are described in [Chapter 10.8.3, "Working with markers remotely"](#), on page 270.

- [Marker search settings](#)..... 104
- [Positioning functions](#)..... 105

6.4.2.1 Marker search settings

Access: "Overview" > "Analysis" > "Marker" > "Search"

or: "Marker" > "Search"

Markers are commonly used to determine peak values, i.e. maximum or minimum values, in the measured signal. Configuration settings allow you to influence the peak search results.

[Peak Excursion](#)..... 105

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For Analog Modulation Analysis, the unit and value range depend on the selected result display type.

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 287

6.4.2.2 Positioning functions

The following functions set the currently selected marker to the result of a peak search or set other characteristic values to the current marker value.

[Select Marker](#)..... 105
[Peak Search](#)..... 106
[Search Next Peak](#)..... 106
[Search Minimum](#)..... 106
[Search Next Minimum](#)..... 106

Select Marker

The "Select Marker" function opens a dialog box to select and activate or deactivate one or more markers quickly.



Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 271

[CALCulate<n>:DELTamarker<m>\[:STATe\]](#) on page 275

Peak Search

Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 289

[CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) on page 291

Search Next Peak

Sets the selected marker/delta marker to the next (lower) maximum of the assigned trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 289

[CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 289

[CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 288

[CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) on page 291

[CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT](#) on page 291

[CALCulate<n>:DELTamarker<m>:MAXimum:LEFT](#) on page 290

Search Minimum

Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 290

[CALCulate<n>:DELTamarker<m>:MINimum\[:PEAK\]](#) on page 292

Search Next Minimum

Sets the selected marker/delta marker to the next (higher) minimum of the selected trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 289

[CALCulate<n>:MARKer<m>:MINimum:LEFT](#) on page 289

[CALCulate<n>:MARKer<m>:MINimum:RIGHT](#) on page 290

[CALCulate<n>:DELTamarker<m>:MINimum:NEXT](#) on page 292

[CALCulate<n>:DELTamarker<m>:MINimum:LEFT](#) on page 291

[CALCulate<n>:DELTamarker<m>:MINimum:RIGHT](#) on page 292

6.4.3 Marker search settings for spectrograms


Access: "Overview" > "Analysis" > "Markers" > "Search"

or: [MKR TO] > "Search Config"

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Spectrograms show not only the current sweep results, but also the sweep history. Thus, when searching for peaks, you must define the search settings within a single time frame (x-direction) and within several time frames (y-direction).

These settings are only available for spectrogram displays.

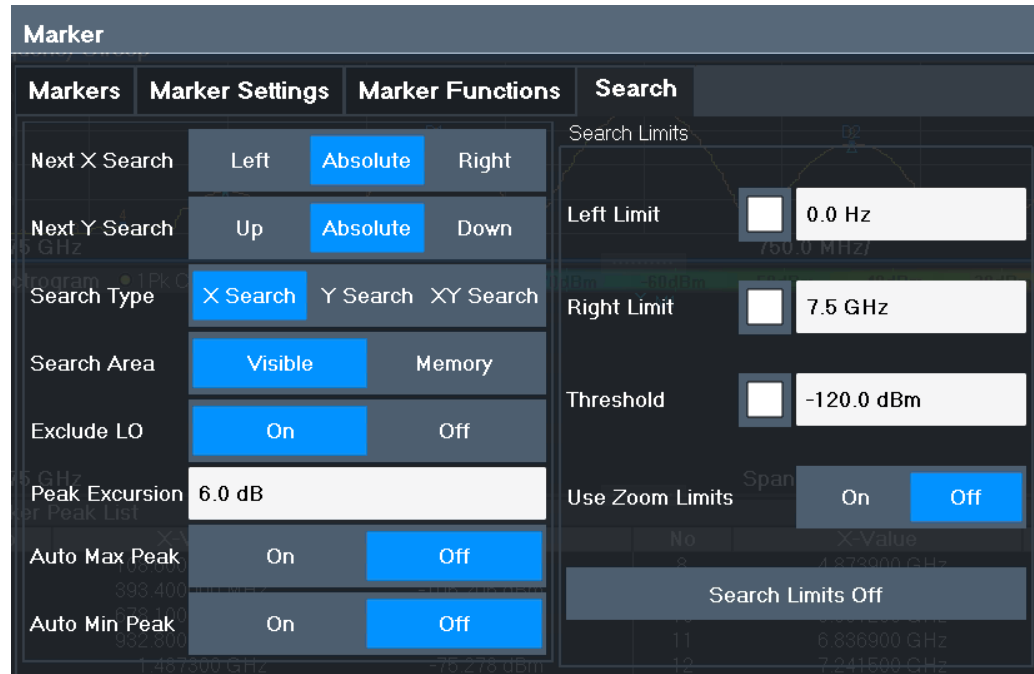

Search Mode for Next Peak in X-Direction.....	107
Search Mode for Next Peak in Y-Direction.....	107
Marker Search Type.....	108
Marker Search Area.....	108
Peak Excursion.....	108

Search Mode for Next Peak in X-Direction

Selects the search mode for the next peak search within the currently selected frame.

- "Left" Determines the next maximum/minimum to the left of the current peak.
- "Absolute" Determines the next maximum/minimum to either side of the current peak.
- "Right" Determines the next maximum/minimum to the right of the current peak.

Remote command:

[Chapter 10.8.3.5, "Positioning the marker"](#), on page 288

Search Mode for Next Peak in Y-Direction

Selects the search mode for the next peak search within all frames at the current marker position.

- "Up" Determines the next maximum/minimum above the current peak (in more recent frames).

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

"Absolute"	Determines the next maximum/minimum above or below the current peak (in all frames).
"Down"	Determines the next maximum/minimum below the current peak (in older frames).

Remote command:

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVE` on page 281

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:ABOVE`
on page 285

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW` on page 281

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:BELOW`
on page 285

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT` on page 281

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:NEXT` on page 285

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVE` on page 282

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVE`
on page 286

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW` on page 282

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELOW`
on page 286

`CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT` on page 282

`CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:NEXT` on page 287

Marker Search Type

Defines the type of search to be performed in the spectrogram.

"X-Search"	Searches only within the currently selected frame.
"Y-Search"	Searches within all frames but only at the current frequency position.
"XY-Search"	Searches in all frames at all positions.

Remote command:

Defined by the search function, see [Chapter 10.8.3.3, "Marker search \(spectrograms\)"](#), on page 278

Marker Search Area

Defines which frames the search is performed in.

"Visible"	Only the visible frames are searched.
"Memory"	All frames stored in the memory are searched.

Remote command:

`CALCulate<n>:MARKer<m>:SPECTrogram:SARea` on page 280

`CALCulate<n>:DELTamarker<m>:SPECTrogram:SARea` on page 284

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For Analog Modulation Analysis, the unit and value range depend on the selected result display type.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 287

6.4.4 Marker function configuration


Access: "Overview" > "Analysis" > "Marker Functions" > "Phase Noise"

Or: [MKR FUNC] > "Select Marker Function"

Special marker functions can be selected via the "Marker Function" dialog box.



The fixed reference marker is described under ["Defining a Fixed Reference"](#) on page 103.

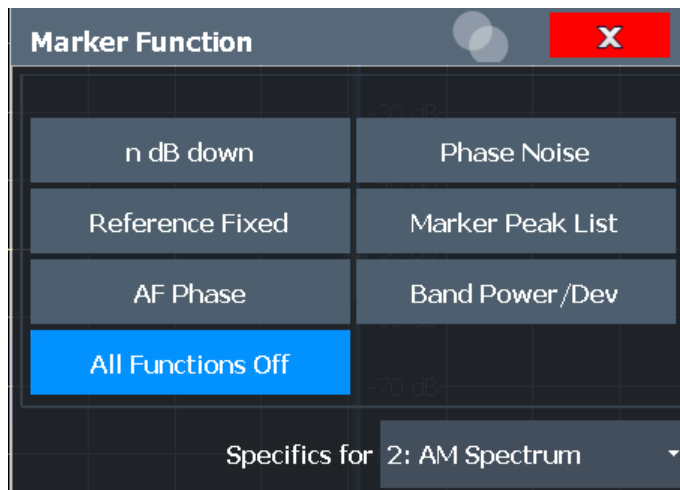

Not all marker functions are available for all evaluations. The following table indicates which functions are available for which evaluations.

Evaluation	n dB down	Phase Noise	Reference Fixed	"Marker Peak List"	AF Phase	Band Power / Dev
AM/FM/PM time	-	-	X	X	-	-
AF/FM/PM spectrum	X	X	X	X	X	X
RF time	X	-	X	X	-	-
RF spectrum	X	X	X	X	-	X

For details on the special marker functions, see the R&S FSV/A User Manual.

The remote commands required to define these settings are described in [Chapter 10.8.3.6, "Configuring special marker functions"](#), on page 292.



The Fixed Reference Marker settings are described in ["Defining a Fixed Reference"](#) on page 103.

- [Measuring characteristic bandwidths \(n db down marker\)](#)..... 110
- [Phase noise measurement marker](#)..... 112
- [Marker peak list](#)..... 114
- [Measuring the power in a channel \(band power marker\)](#)..... 118
- [AF phase marker](#)..... 121
- [Deactivating all marker functions](#)..... 122

6.4.4.1 Measuring characteristic bandwidths (n db down marker)

Access: "Overview" > "Analysis" > "Marker Functions" > "n dB down" > "n dB Down Config"

Or: [MKR FUNC] > "Select Marker Function" > "n dB down" > "n dB Down Config"

When characterizing the shape of a signal, the bandwidth at a specified offset from its peak level is often of interest. The offset is specified as a relative decrease in amplitude of n dB. To measure this bandwidth, you could use several markers and delta markers and determine the bandwidth manually. However, using the n dB down marker function makes the task very simple and quick.

The n dB down marker function uses the current value of marker 1 as the reference point. It activates two temporary markers T1 and T2 located on the signal, whose level is n dB below the level of the reference point. Marker T1 is placed to the left and marker T2 to the right of the reference marker. The default setting for n is 3 dB, but it can be changed.

If a positive offset is entered, the markers T1 and T2 are placed below the active reference point. If a negative value is entered (for example for notch filter measurements), the markers T1 and T2 are placed above the active reference point.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

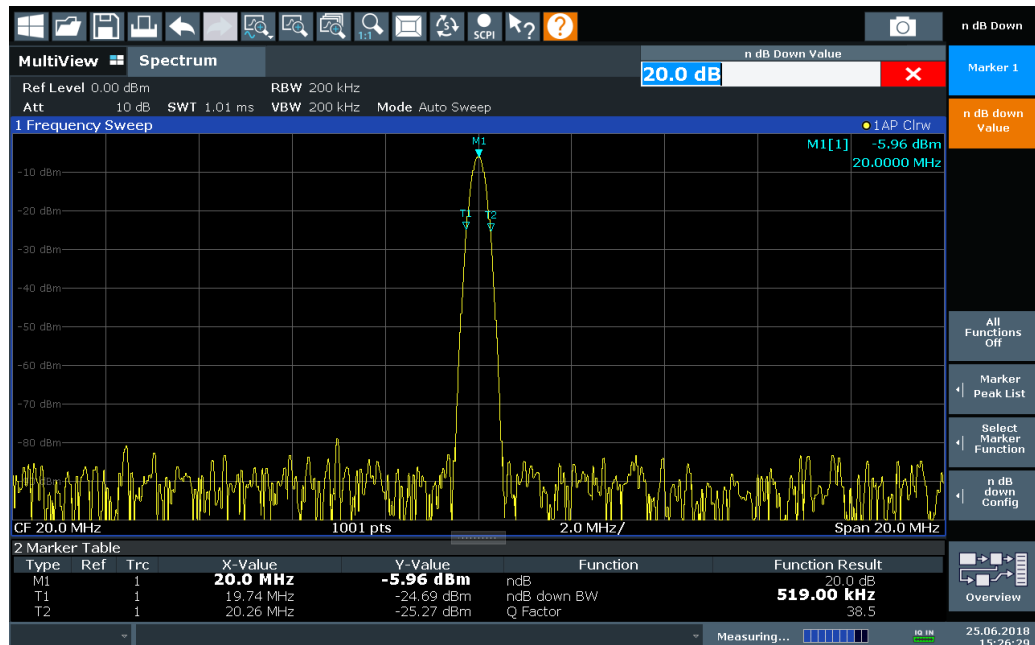



Figure 6-2: n dB down marker function

The following marker function results are displayed:

Table 6-1: n dB down marker function results

Label	Description
M1	Current position and level of marker 1
ndB	Offset value (n dB down)
ndB down Bw / PWid	Determined bandwidth or pulse width (zero span) at the offset
Q-factor	Center frequency / n-dB-down-bandwidth Quality factor of the determined bandwidth (characteristic of damping or resonance)
T1, T2	Current position and level of the temporary markers

If the required position for the temporary markers cannot be determined uniquely, for example due to noise, dashes are displayed as a result.

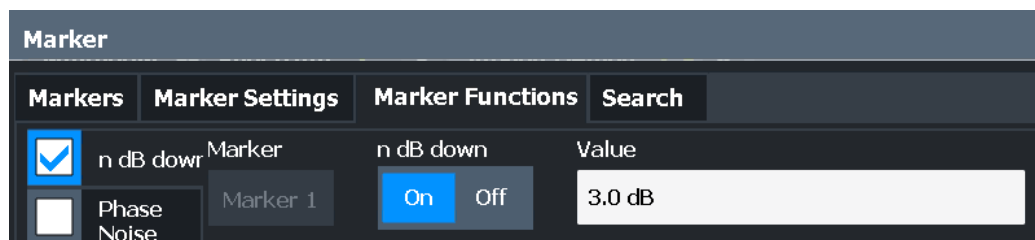

Remote commands:

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATe on page 301

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

[CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?](#) on page 301

[n dB down Marker State](#)..... 112

[n dB down Value](#)..... 112

n dB down Marker State

Activates or deactivates the special n dB down marker function.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:NDBDown:STATe](#) on page 301

[CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?](#) on page 301

n dB down Value

Defines the delta level from the reference marker 1 used to determine the bandwidth or time span.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREQuency?](#) on page 300

[CALCulate<n>:MARKer<m>:FUNction:NDBDown:TIME?](#) on page 302

6.4.4.2 Phase noise measurement marker

Access: "Overview" > "Analysis" > "Marker Functions" > "Phase Noise" > "Phase Noise Config"

Or: [MKR FUNC] > "Select Marker Function" > "Phase Noise" > "Phase Noise Config"

For each of the 16 markers, you can activate a phase noise measurement.

Note that phase noise markers are available:

- for spectrum results
- for normal markers
- not for time domain results

Phase noise is unintentional modulation of a carrier; it creates frequencies next to the carrier frequency. A phase noise measurement consists of noise density measurements at defined offsets from the carrier; the results are given in relation to the carrier level (dBc). The phase noise marker function measures the noise power at the delta markers referred to 1 Hz bandwidth. Marker 1 is used as the reference for the phase noise measurement. By default, the current frequency and level of marker 1 are used as the fixed reference marker. However, you can start a peak search to use the current signal peak as the reference point, or you can define a reference point manually.

The reference point for the phase noise measurement is fixed. After phase noise measurement is started, you can set the reference level or the center frequency so that the carrier is outside the displayed frequency range. You can also activate a notch filter to suppress the carrier.

Alternatively, the reference point can be determined automatically by a peak search after each sweep. Use this function to track a drifting source during a phase noise measurement. The delta marker 2, which shows the phase noise measurement result, keeps the delta frequency value. Thus, the phase noise measurement leads to reliable results in a certain offset although the source is drifting. Only if the marker 2 reaches

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

the border of the span, the delta marker value is adjusted to be within the span. In these cases, select a larger span.

The result of the phase noise measurement is the difference in level between the reference point and the noise power density. It is indicated as the function result of the phase noise marker in the "marker table".

The sample detector is automatically used and the video bandwidth set to 0.1 times the resolution bandwidth (RBW). The two settings are considered in the correction values used for the noise power measurement. To obtain stable results, two pixels on the right and the left of the delta marker position are taken for the measurement.

The individual marker settings correspond to those defined in the "Marker" dialog box. Any settings to the marker state or type changed in the "Marker Function" dialog box are also changed in the "Marker" dialog box and vice versa.

Marker

Markers **Marker Settings** **Marker Functions** **Search**

n dB down

Phase Noise

Reference Fixed

Marker Peak List

1-5 6-11 12-16

Marker	State	Type	Phase Noise
Marker 1	On Off	Norm Delta	On Off
Delta 1	On Off	Norm Delta	On Off
Marker 2	On Off	Norm Delta	On Off
Delta 3	On Off	Norm Delta	On Off
Delta 4	On Off	Norm Delta	On Off
Delta 5	On Off	Norm Delta	On Off

All Phase Noise Markers Off

All Functions Off

Remote commands:

`CALCulate<n>:MARKer<m>:FUNCTION:PNOise[:STATe]` on page 303

`CALCulate<n>:MARKer<m>:FUNCTION:PNOise:RESult?` on page 303

Phase Noise Measurement State	114
Switching All Phase Noise Measurements Off	114

Phase Noise Measurement State

Activates or deactivates phase noise measurement at the marker position in the diagram.

In the R&S FSV3 AM/FM/PM Modulation Analysis application, this function is only available for normal markers.

If activated, the normal markers display the phase noise measured at their current position in the "marker table".

For details see [Chapter 6.4.4.2, "Phase noise measurement marker"](#), on page 112.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:PNOise[:STATe]` on page 303

`CALCulate<n>:MARKer<m>:FUNCTION:PNOise:RESult?` on page 303

Switching All Phase Noise Measurements Off

Deactivates phase noise measurement for all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:PNOise[:STATe]` on page 303

6.4.4.3 Marker peak list

Access: "Overview" > "Analysis" > "Marker Functions" > "Marker Peak List"

Or: [MKR FUNC] > "Marker Peak List"

A common measurement task is to determine peak values, i.e. maximum or minimum signal levels. The R&S FSV/A provides various peak search functions and applications:

- Setting a marker to a peak value once (Peak Search)
- Searching for a peak value within a restricted search area (Search Limits)
- Creating a "marker table" with all or a defined number of peak values for one sweep ("Marker Peak List")
- Updating the marker position to the current peak value automatically after each sweep (Auto Peak Search)
- Creating a fixed reference marker at the current peak value of a trace (Fixed Reference)

Peak search limits

The peak search can be restricted to a search area. The search area is defined by limit lines which are also indicated in the diagram. In addition, a minimum value (threshold) can be defined as a further search condition.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

When is a peak a peak? - Peak excursion

During a peak search, noise values are detected as a peak if the signal is very flat or does not contain many peaks. Therefore, you can define a relative threshold ("Peak Excursion"). The signal level must increase by the threshold value before falling again before a peak is detected. To avoid identifying noise peaks as maxima or minima, enter a peak excursion value that is higher than the difference between the highest and the lowest value measured for the displayed inherent noise.

Effect of peak excursion settings (example)

The following figure shows a trace to be analyzed.

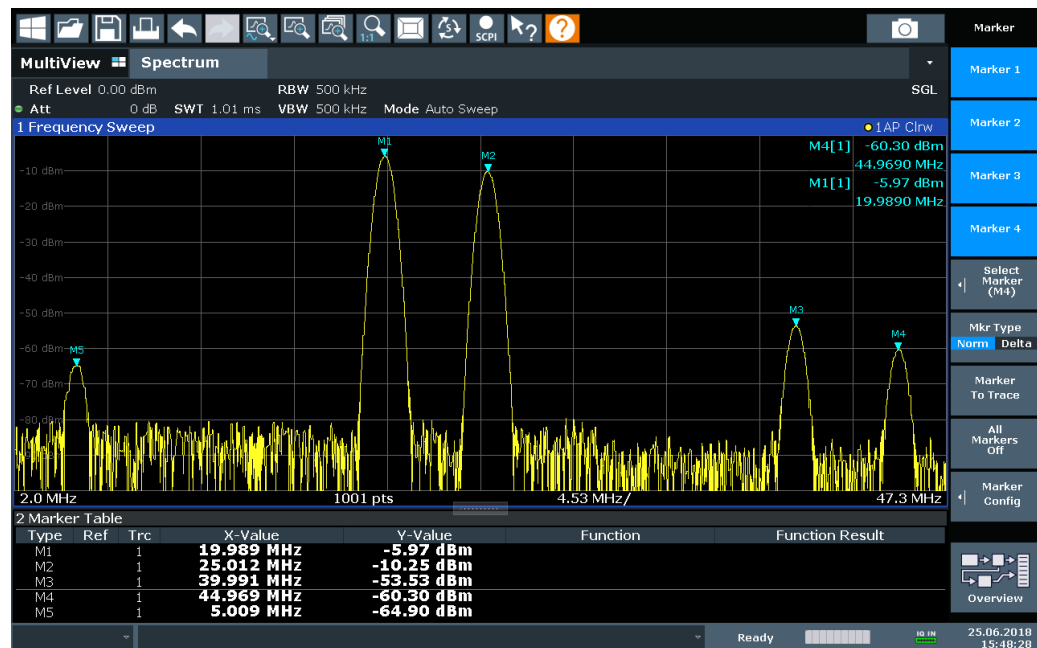


Figure 6-3: Trace example

The following table lists the peaks as indicated by the marker numbers in the diagram above, as well as the minimum decrease in amplitude to either side of the peak:

Marker #	Min. amplitude decrease to either side of the signal
1	80 dB
2	80 dB
3	55 dB
4	39 dB
5	32 dB

To eliminate the smaller peaks M3, M4 and M5 in the example above, a peak excursion of at least 60 dB is required. In this case, the amplitude must rise at least 60 dB before falling again before a peak is detected.

Marker peak list

The marker peak list determines the frequencies and levels of peaks in the spectrum. It is updated automatically after each sweep. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.


Automatic peak search

A peak search can be repeated automatically after each sweep to keep the maximum value as the reference point for a phase noise measurement. Automatic peak search is useful to track a drifting source. The delta marker 2, which shows the phase noise measurement result, keeps the delta frequency value. Therefore, the phase noise measurement leads to reliable results in a certain offset although the source is drifting.

Using a peak as a fixed reference marker

Some results are analyzed in relation to a peak value, for example a carrier frequency level. In this case, the maximum level can be determined by an initial peak search and then be used as a reference point for further measurement results.

In the R&S FSV3 AM/FM/PM Modulation Analysis application, the search limits are not available.

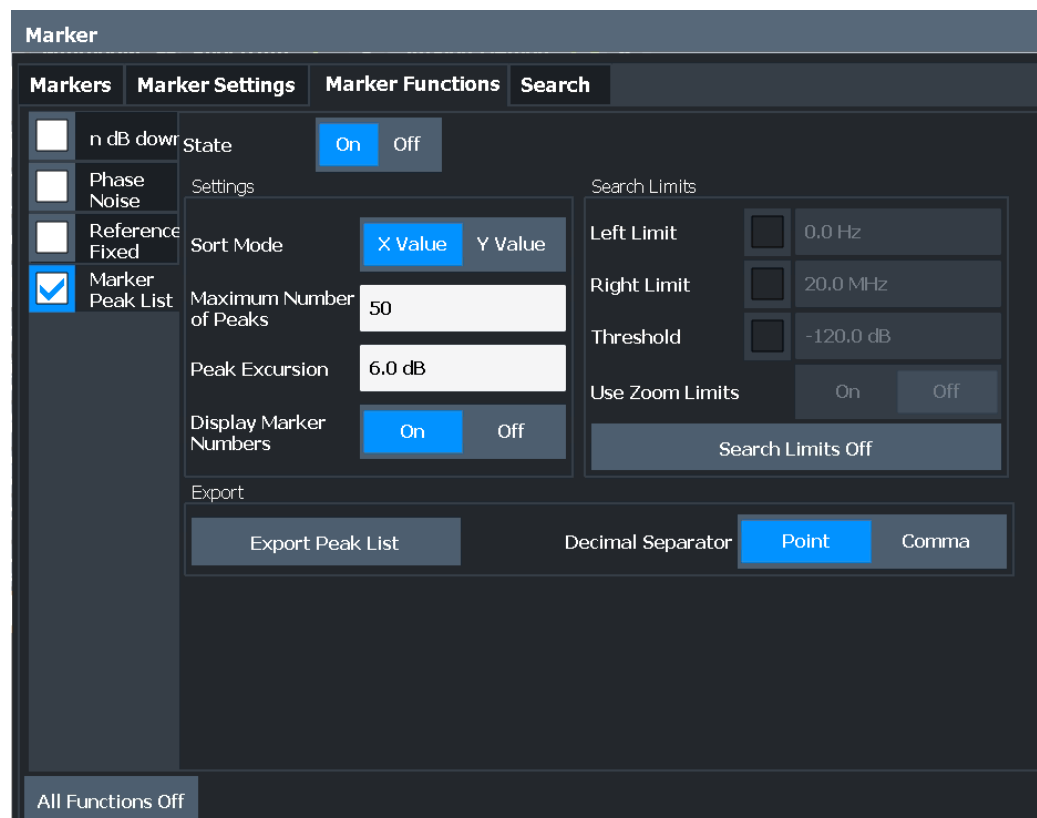

Remote commands:

[CALCulate<n>:MARKer<m>:FUNction:FPEaks:STATe](#) on page 297

TRAC? LIST,

Peak List State	117
Sort Mode	117
Maximum Number of Peaks	117
Peak Excursion	117
Display Marker Numbers	117
Export Peak List	118

Peak List State

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

For each listed peak, the frequency/time ("X-value") and level ("Y-Value") values are given.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:FPEaks:STATe](#) on page 297

Sort Mode

Defines whether the peak list is sorted according to the x-values or y-values. In either case, the values are sorted in ascending order.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT](#) on page 297

Maximum Number of Peaks

Defines the maximum number of peaks to be determined and displayed.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:FPEaks:LIST:SIZE](#) on page 296

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For Analog Modulation Analysis, the unit and value range depend on the selected result display type.

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 287

Display Marker Numbers

By default, the marker numbers are indicated in the diagram so you can find the peaks from the list. However, for large numbers of peaks, the marker numbers can decrease readability; in this case, deactivate the marker number display.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANNotation:LABel[:STATe]`
on page 295

Export Peak List

The peak list can be exported to an ASCII file (.DAT) for analysis in an external application.

Remote command:

`MMEMory:STORe<n>:PEAK` on page 299

`FORMat:DEXPort:DSEParator` on page 248

6.4.4.4 Measuring the power in a channel (band power marker)

Access: "Overview" > "Analysis" > "Marker Functions" > "Band Power" > "Band Power Config"

or: [MKR FUNC] > "Select Marker Function" > "Band Power"

To determine the noise power in a transmission channel, you can use a noise marker and multiply the result with the channel bandwidth. However, the results are only accurate for flat noise.

Band power markers allow you to measure the integrated power for a defined span (band) around a marker (similar to ACP measurements). By default, 5 % of the current span is used. The span is indicated by limit lines in the diagram. You can easily change the span by moving the limit lines in the diagram. They are automatically aligned symmetrically to the marker frequency. They are also moved automatically if you move the marker on the screen.

The results can be displayed either as a power (dBm) or density (dBm/Hz) value and are indicated in the "marker table" for each band power marker.



Relative band power markers

The results for band power markers which are defined as *delta* markers and thus have a reference value can also be calculated as reference power values (in dB).

For Analog Modulation Analysis, relative band power markers are not available.

In this case, the result of the band power deltamarker is the difference between the absolute power in the band around the delta marker and the absolute power for the reference marker. The powers are subtracted logarithmically, so the result is a dB value.

[Relative band power (Delta2) in dB] = [absolute band power (Delta2) in dBm] - [absolute (band) power of reference marker in dBm]

The measured power for the reference marker may be an absolute power at a single point (if the reference marker is not a band power marker), or the power in a band (if the reference marker is a band power marker itself).


If the reference marker for the band power marker is also a delta marker, the absolute power level for the reference marker is used for calculation.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application



Band power markers are only available for standard frequency measurements (not zero span) in the Spectrum and R&S FSV3 AM/FM/PM Modulation Analysis application. In Analog Modulation Analysis with AM, FM, or PM spectrum results, this marker function does not determine a power value, but rather the deviation within the specified span.

The entire band must lie within the display. If it is moved out of the display, the result cannot be calculated (indicated by "- -" as the "Function Result"). However, the width of the band is maintained so that the band power can be calculated again when it returns to the display.

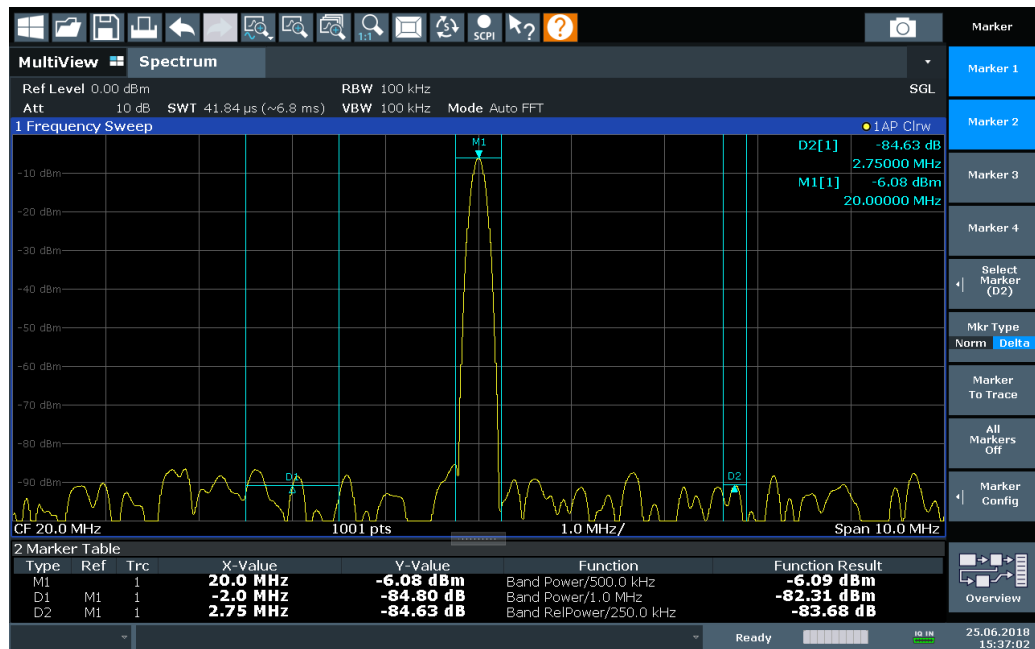


All markers can be defined as band power markers, each with a different span. When a band power marker is activated, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated).

If the detector mode for the marker trace is set to "Auto", the RMS detector is used.

The individual marker settings correspond to those defined in the "Marker" dialog box (see [Chapter 6.4.1.1, "Individual marker setup"](#), on page 99). Any settings to the marker state or type changed in the "Marker Function" dialog box are also changed in the "Marker" dialog box and vice versa.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

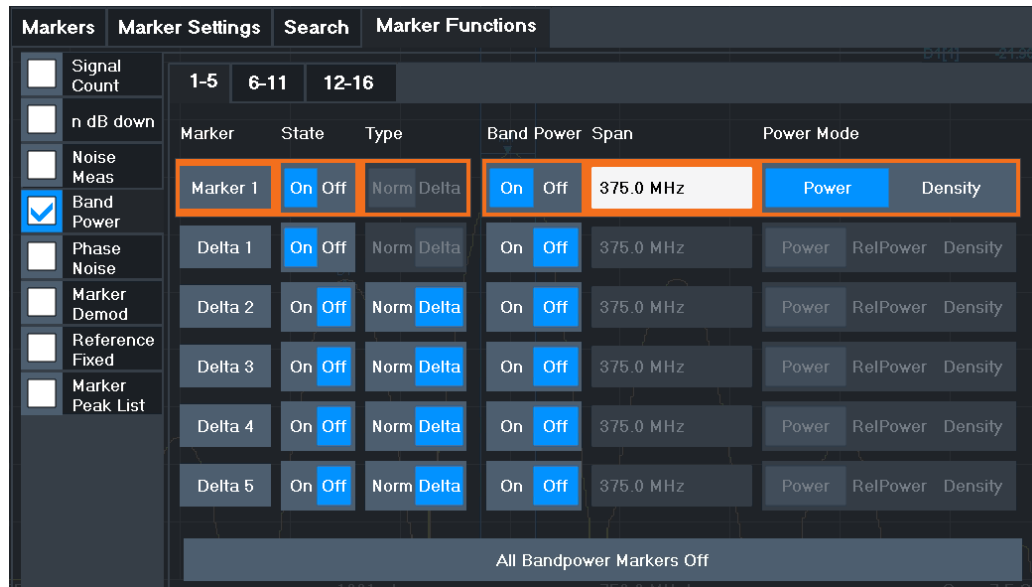**Remote commands:**

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWER\[:STATe\]](#) on page 305

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:RESult?](#) on page 305

Band Power Measurement State	120
Span	120
Power Mode	121
Switching All Band Power Measurements Off	121

Band Power Measurement State

Activates or deactivates band power measurement for the marker in the diagram.

Band power markers are only available for standard frequency measurements (not zero span) in the Spectrum application.

If activated, the markers display the power or density measured in the band around the current marker position.

For details see [Chapter 6.4.4.4, "Measuring the power in a channel \(band power marker\)"](#), on page 118.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWER\[:STATe\]](#) on page 305

[CALCulate<n>:DELTAmarker<m>:FUNCTION:BPOWER\[:STATe\]](#) on page 307

Span

Defines the span (band) around the marker for which the power is measured.

The span is indicated by lines in the diagram. You can easily change the span by moving the limit lines in the diagram. They are automatically aligned symmetrically to the marker frequency. They are also moved automatically if you move the marker on the screen.

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:SPAN` on page 305

`CALCulate<n>:DELTAmarker<m>:FUNCTION:BPOWER:SPAN` on page 307

Power Mode

Defines the mode of the power measurement result.

For Analog Modulation Analysis, the power mode is not editable for AM, FM, or PM spectrum results. In this case, the marker function does not determine a power value, but rather the deviation within the specified span.

"Power"	The result is an absolute power level. The power unit depends on the Units setting.
"Relative Power"	This setting is only available for a delta band power marker. The result is the difference between the absolute power in the band around the delta marker and the absolute power for the reference marker (see "Reference Marker" on page 101). The powers are subtracted logarithmically, so the result is a dB value. <i>[Relative band power (Delta2) in dB] = [absolute band power (Delta2) in dBm] - [absolute (band) power of reference marker in dBm]</i> For details see "Relative band power markers" on page 118
"Density"	The result is a power level in relation to the bandwidth, displayed in dBm/Hz.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:MODE` on page 304

`CALCulate<n>:DELTAmarker<m>:FUNCTION:BPOWER:MODE` on page 306

Switching All Band Power Measurements Off

Deactivates band power measurement for all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:BPOWER[:STATe]` on page 305

`CALCulate<n>:DELTAmarker<m>:FUNCTION:BPOWER[:STATe]` on page 307

6.4.4.5 AF phase marker

Access: "Overview" > "Analysis" > "Marker Functions" > "AF Phase"

or: [MKR FUNC] > "Select Marker Function" > "AF Phase"

This marker function is only available for AF spectrum result displays. If enabled, the phase value at each marker position is included in the "marker table". The function is always enabled for all active markers in the selected display, it cannot be disabled for individual markers. Note that the phase value is always wrapped, and always absolute, also for delta markers. The unit depends on the phase unit setting (see ["Phase Unit \(Rad/Deg\)"](#) on page 74).

4 Marker Table						
Wnd	Type	Ref	Trc	X-Value	Y-Value	Function
1	M1		1	96.2 kHz	30.00 %	Phase-Value
1	D1	M1	1	354.67 kHz	-54.93 dB	Phase-Value
2	M1		1	96.2 kHz	440.08 µrad	Phase-Value
2	D1	M1	1	354.7 kHz	-8.22 dB	Phase-Value

Working with markers in the R&S FSV3 AM/FM/PM Modulation Analysis application

Remote commands:

`CALCulate<n>:MARKer<m>:FUNction:AFPHase[:STATe]` on page 309

`CALCulate<n>:MARKer<m>:FUNction:AFPHase:RESult?` on page 309

`CALCulate<n>:DELTamarker<m>:FUNction:AFPHase[:STATe]` on page 308

`CALCulate<n>:DELTamarker<m>:FUNction:AFPHase:RESult?` on page 308

6.4.4.6 Deactivating all marker functions

Access: "Overview" > "Analysis" > "Marker Functions" > "All Functions Off"

All special marker functions can be deactivated in one step.

Remote command:

7 How to perform measurements in the R&S FSV3 AM/FM/PM Modulation Analysis application

The following step-by-step instructions demonstrate how to perform AM/FM/PM Modulation Analysis with the optional R&S FSV3 AM/FM/PM Modulation Analysis application.

1. Press [MODE].
2. Select the "AM/FM/PM Modulation Analysis" application.
3. Select "Overview" to display the "Overview" for AM/FM/PM Modulation Analysis.
4. Select "Input/Frontend" > "Frequency" tab to define the input signal's center frequency.
5. Select "Data Acquisition" and define the bandwidth parameters for the input signal:
 - "Demodulation Bandwidth": the span of the input signal to demodulate
 - "Measurement Time": how long the input signal is measured
 - "Resolution Bandwidth": how precise the signal is demodulated
 - "Capture Offset" (multistandard mode only): the offset of the analysis interval from the start of the capture buffer
6. Optionally, select "Trigger" and define a trigger for data acquisition, for example an offline demodulation trigger to start capturing data only when a useful signal is transmitted.
7. Select "Demod/Display" and select the demodulation displays that are of interest to you (up to 6).
Arrange them on the display to suit your preferences.
8. Exit the SmartGrid mode and select "Overview" to display the "Overview" again.
9. Select "Demodulation Settings" to define demodulation parameters for each evaluation:
 - Configure the "Squelch" function (on the "Demod" tab) to suppress noise during demodulation.
 - For time domain evaluations, zoom into the areas of interest by defining a zoom area (on the "Demod" tab).
 - For AF evaluations, use special filters to eliminate certain effects of demodulation or to correct pre-emphasized modulated signals (on the "AF Filters" tab).
 - Adapt the diagram scaling to the displayed data (on the "Scaling" tab).
10. Select "Overview" > "Analysis" to use the advanced analysis functions in the demodulation displays.

- Configure a trace to display the average over a series of sweeps (on the "Trace" tab. If necessary, increase the "Sweep Count" in the "Data Acquisition" settings).
 - Configure markers and delta markers to determine deviations and offsets within the demodulated signal (on the "Marker" tab).
 - Use special marker functions to calculate phase noise or an n-dB-down bandwidth (on the "Marker Config" tab).
 - Configure a limit check to detect excessive deviations (on the "Lines" tab).
11. Start a new sweep with the defined settings.
In multistandard mode, to stop the continuous measurement mode by the Sequencer and perform a single data acquisition:
 - a) Select the Sequencer (🔴) from the toolbar.
 - b) Set the Sequencer state to "Off".
 - c) Press [RUN SINGLE].
 12. Optionally, export the trace data of the demodulated signal to a file.
 - a) In the "Traces" tab of the "Analysis" dialog box, switch to the "Trace Export" tab.
 - b) Select "Export Trace to ASCII File".
 - c) Define a file name and storage location and select "OK".

7.1 How to export trace data and numerical results

The measured trace data and numerical measurement results in tables can be exported to an ASCII file. For each sweep point, the measured trace position and value are output.

The file is stored with a `.DAT` or `.CSV` extension. For details on the storage format, see [Chapter 10.7.5, "Reference: ASCII file export format"](#), on page 255.

To export trace data and table results

1. Select [TRACE] > "Trace Config" > "Trace / Data Export" tab.
2. Select "Export all Traces and all Table Results" to export all available measurement result data for the current application, or select a specific "Trace to Export".
3. Optionally, select "Include Instrument & Measurement Settings" to insert additional information in the export file header.
4. Select "Export Trace to ASCII File".
5. In the file selection dialog box, select the storage location and file name for the export file.
6. If necessary, change the decimal separator for the ASCII export file.
7. Select the data format of the ASCII file.

8. Select "Save" to close the dialog box and export the data to the file.

8 Measurement example: demodulating an FM signal

A practical example for a basic Analog Modulation Analysis measurement is provided here. It demonstrates how operating and measurement errors can be avoided using correct configuration settings.

The measurement is performed using the following devices:

- An R&S FSV/A with application firmware R&S FSV3-K7: Analog Modulation Analysis
- A vector signal generator, e.g. R&S SMW



Figure 8-1: Test setup

Signal generator settings (e.g. R&S SMW):

Frequency:	500 MHz
Level:	-10 dBm
Modulation:	FM
Modulation frequency:	10 kHz
Frequency deviation:	50 kHz

Procedure:

1. Preset the R&S FSV/A.
2. Set the center frequency to *500 MHz*.
3. Set the reference level to *0 dBm*.
4. Select [MODE] and then "AM FM PM Analog Demod".

By default, the "FM Time Domain" result display and a "Result Summary" are shown.

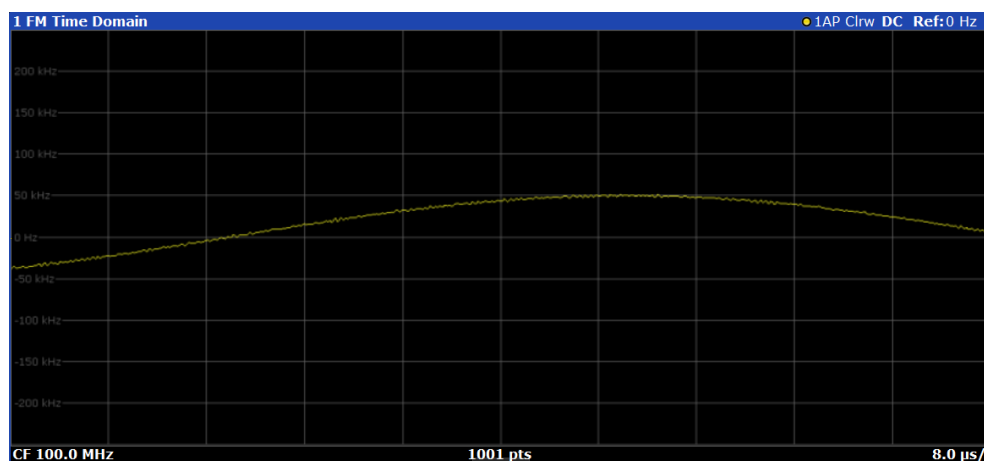


Figure 8-2: Default Analog Modulation Analysis measurement result display

5. Set the measurement time (AQT) to 1 ms to measure 10 periods of the signal.
6. Adjust the y-axis scaling to the measured frequency deviation automatically by selecting "Scale Config" > "Scaling" tab > "AF Auto Scale": "On".

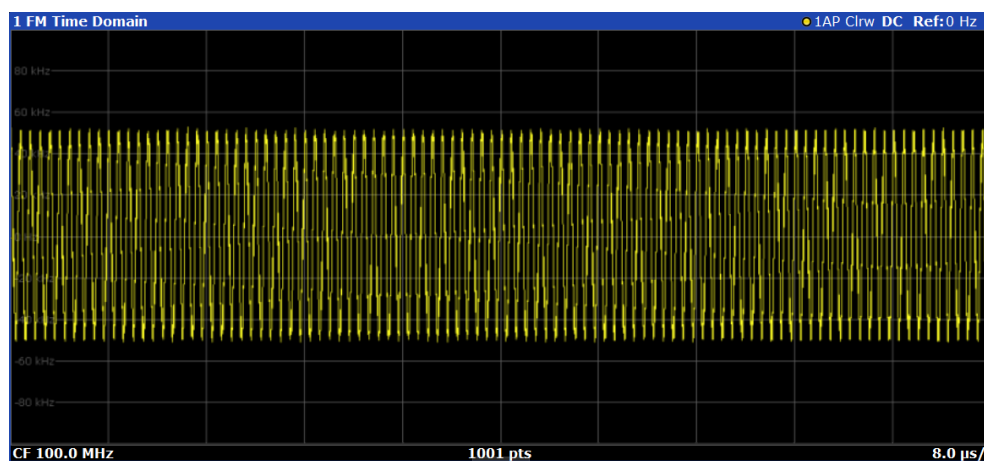


Figure 8-3: Auto-scaled measurement of 10 signal periods (continuous)

7. Display the RF spectrum of the measured signal to determine the required demodulation bandwidth. Select "Display Config" and add an "RF Spectrum" window to the display.

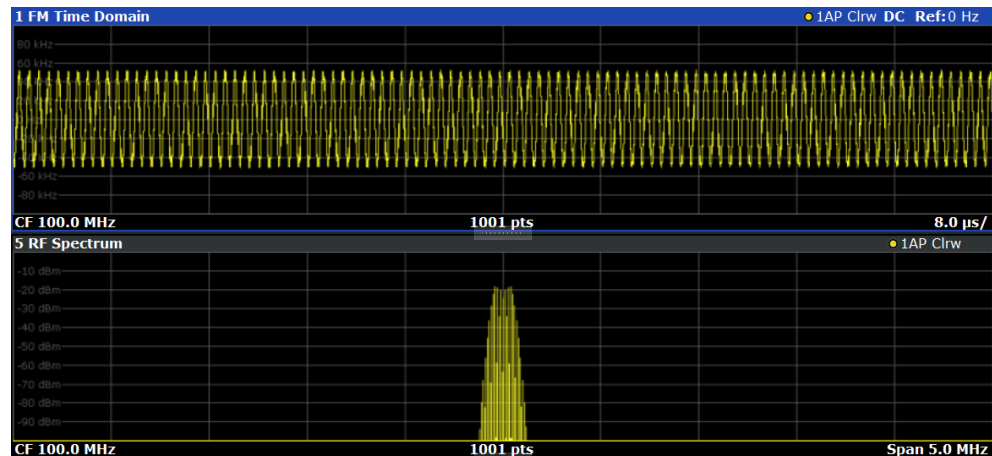


Figure 8-4: RF spectrum of FM signal with default demodulation bandwidth = 5 MHz

8. As you can see in [Figure 8-4](#), the default demodulation bandwidth of 5 MHz is much too large - the actual signal takes up only a small part of the displayed range. That means that any noise or additional signals apart from the FM signal of interest may be included in the measured results. Select "Demod BW" and reduce the value to 200 kHz.

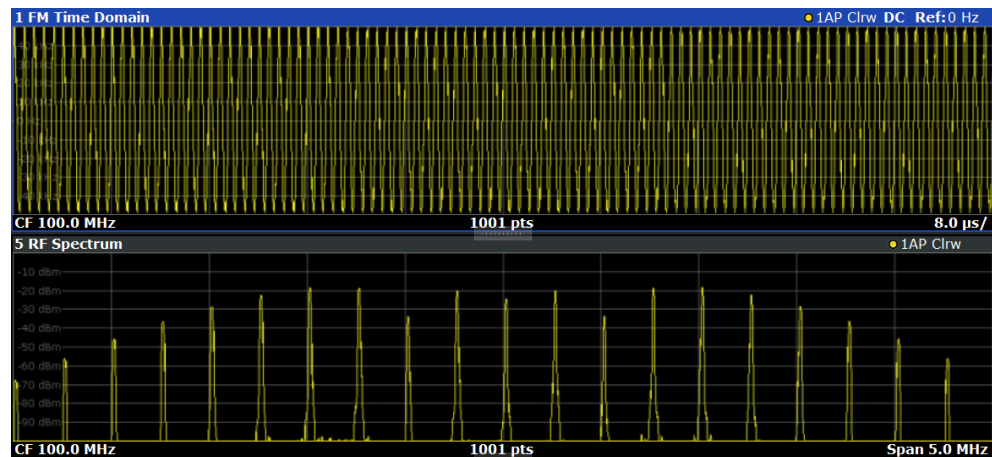


Figure 8-5: RF spectrum with demodulation bandwidth = 200 kHz

The span is automatically reduced to 200 kHz as well, as only the demodulated range can be displayed.

9. Now the RF spectrum shows that part of the FM signal is cut off. The missing signal parts are not included in the calculated results. Increase the demodulation bandwidth to 400 kHz to include the entire signal, but no interfering frequencies.

The span is not automatically increased for the wider DBW since it may be useful to display only a small range from the demodulated bandwidth. However, this means the RF spectrum will still not show the entire signal.

10. Increase the span manually to show the entire demodulated bandwidth:
- Select the "RF Spectrum" window.

- b) Press [SPAN].
- c) Select "Full Span".

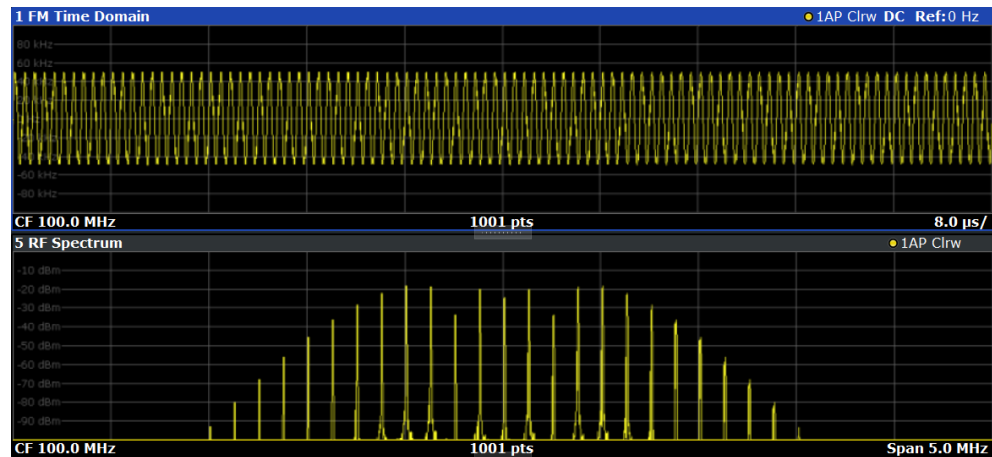


Figure 8-6: RF spectrum with demodulation bandwidth = 400 kHz

11. Once the correct DBW has been determined, you can replace the RF spectrum by the FM spectrum result display to analyze the spectrum of the FM signal. Select "Display Config" and move an "FM Spectrum" window over the "RF Spectrum" window in the display.


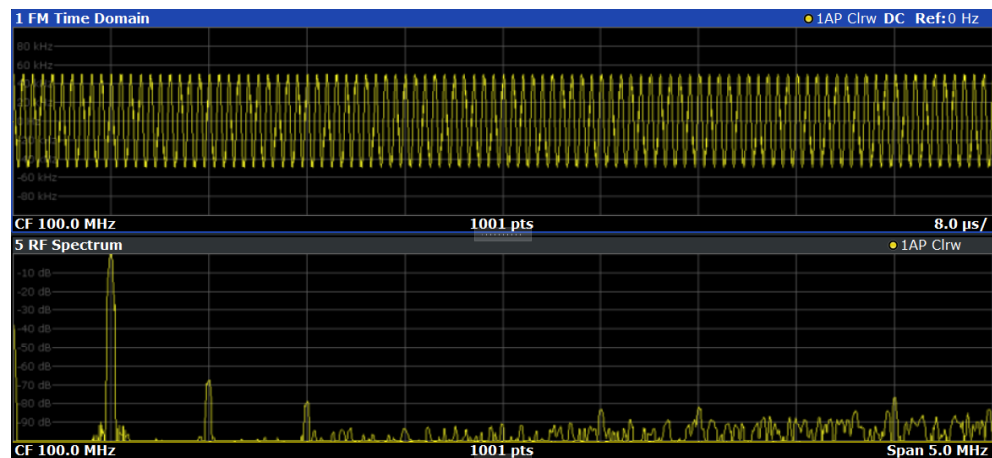


Figure 8-7: FM spectrum and Result Summary including SINAD and THD values

From the FM spectrum, the SINAD and THD are also calculated and displayed in the "Result Summary".

12. Since the "AF Auto Scale" function is enabled, the "FM Spectrum" diagram is scaled according to the current measurement automatically. Each diagram is scaled individually, so that the reference values at the top of the two diagrams can differ (100 kHz in the "FM Time Domain" versus 50 kHz in the "FM Spectrum"). However, you can adjust the values manually.
 - a) Select the "FM Spectrum" window to set the focus in it.
 - b) Press [AMPT].

- c) Select "Scale Config".
- d) Disable the "AF Auto Scale" function.
- e) Define the new reference value (at 100% = top of the diagram) as *100 kHz*.

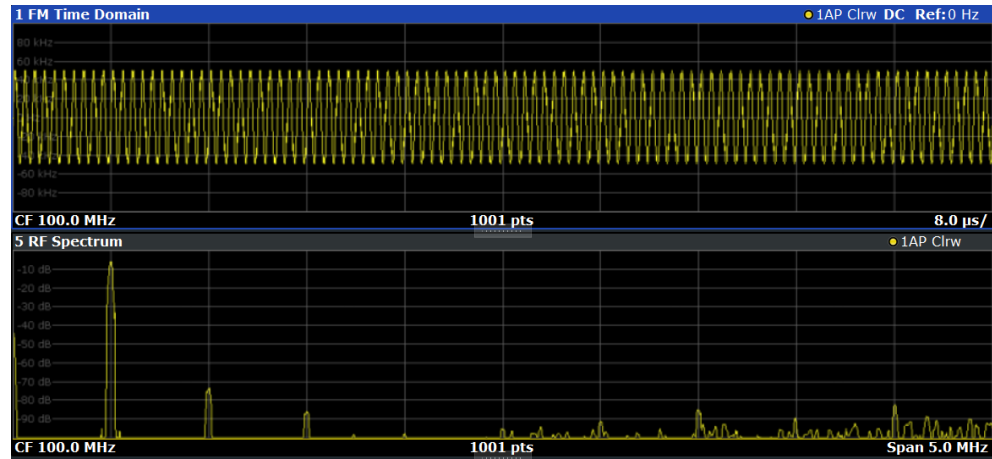

Note that while the reference values at the top of both y-axes are now identical, the reference values indicated in the window title bars are not. This is due to the fact that, by default, in AF time domain displays the reference value is defined at the reference position 50 % (=center of diagram), while in AF frequency domains it is defined at the position 100 % (= top of diagram).

9 Optimizing and troubleshooting the measurement

If the results do not meet your expectations, consider the following notes and tips to optimize the measurement.

Determining the demodulation bandwidth

A frequent cause for measurement errors and false results is an **incorrectly defined demodulation bandwidth (DBW)**.

If the DBW is too large, the actual signal takes up only a small part of the demodulated range. That means that any noise or additional signal parts can be included in the measured results, which are then false.

On the other hand, if the DBW is too small, part of the signal is cut off and thus not included in the calculation of the results.

An easy way to determine the required DBW is to display the RF spectrum of the input signal. If the entire signal is displayed there and takes up most of the diagram width, the DBW is probably appropriate.

This procedure is demonstrated in the measurement example described in [Chapter 8, "Measurement example: demodulating an FM signal"](#), on page 126.

For further recommendations on finding the correct demodulation bandwidth, see [Chapter 4.2, "Demodulation bandwidth"](#), on page 29.

Adjusting the displayed span

Be aware that the span of the "RF Spectrum" display is not automatically increased for a wider DBW. Sometimes, it can be useful to display only a small range from the demodulated bandwidth. Thus, if the RF spectrum does not show the entire demodulated bandwidth, you must increase the span manually to show the entire signal.

Determining the SINAD and THD

The signal-to-noise-and-distortion ratio (SINAD) and the total harmonic distortion (THD) of the demodulated signal are a good indicator of the signal quality sent by the DUT. Both values are calculated inside the AF spectrum span and thus only if an AF spectrum window is displayed. If either value deviates strongly from the expected result, make sure that the demodulation bandwidth is defined correctly (see [Determining the demodulation bandwidth](#)).

10 Remote commands for AM/FM/PM Modulation Analysis

The commands required to perform measurements in the R&S FSV3 AM/FM/PM Modulation Analysis application in a remote environment are described here.

It is assumed that the R&S FSV/A has already been set up for remote control in a network as described in the R&S FSV/A User Manual.



A programming example at the end of the remote commands description demonstrates the most important commands in a typical application scenario, see [Chapter 10.11, "Programming example"](#), on page 336.



Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the R&S FSV/A User Manual.

In particular:

- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation
- Using the common status registers



Status registers

The R&S FSV3-K7 option uses the status registers of the base unit (except for the `STATus:QUESTionable:ACPLimit` register).

For a description, see the R&S FSV/A User Manual.

General R&S FSV/A Remote Commands

The application-independent remote commands for general tasks on the R&S FSV/A are also available for AM/FM/PM Modulation Analysis and are described in the R&S FSV/A User Manual. In particular:

- Managing settings and results
- Setting up the instrument
- Using the status register



SCPI Recorder - automating tasks with remote command scripts

The R&S FSV3 AM/FM/PM Modulation Analysis application also supports the SCPI Recorder functionality.

Using the SCPI Recorder functions, you can create a SCPI script directly on the instrument and then export the script for use on the controller. You can also edit or write a script manually, using a suitable editor on the controller. For manual creation, the instrument supports you by showing the corresponding command syntax for the current setting value.

For details see the "Network and Remote Operation" chapter in the R&S FSV/A User Manual.

Channel-specific commands

Apart from a few general commands on the R&S FSV/A, most commands refer to the currently active channel. Thus, always remember to activate an Analog Modulation Analysis channel before starting a remote program for an Analog Modulation Analysis.

• Introduction	133
• Common suffixes	138
• Activating analog modulation analysis	138
• Configuring the measurement	142
• Capturing data and performing sweeps	232
• Configuring the result display	235
• Retrieving results	244
• Analyzing results	256
• Importing and exporting I/Q data and results	334
• Deprecated commands	335
• Programming example	336

10.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the R&S FSV/A.



Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

10.1.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FSV/A follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (*RST)**

Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as *RST values, if available.

- **Default unit**

The default unit is used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

10.1.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

Example:

SENSe:FREQuency:CENTer is the same as SENS:FREQ:CENT.

10.1.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you do not quote a suffix for keywords that support one, a 1 is assumed.

Example:

DISPlay[:WINDow<1...4>]:ZOOM:STATe enables the zoom in a particular measurement window, selected by the suffix at WINDow.

DISPlay:WINDow4:ZOOM:STATe ON refers to window 4.

10.1.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

Example:

Without a numeric suffix in the optional keyword:

[SENSe:]FREQuency:CENTer is the same as FREQuency:CENTer

With a numeric suffix in the optional keyword:

DISPlay[:WINDow<1...4>]:ZOOM:STATe

DISPlay:ZOOM:STATe ON enables the zoom in window 1 (no suffix).

DISPlay:WINDow4:ZOOM:STATe ON enables the zoom in window 4.

10.1.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

Example:

```
[SENSe:]BANDwidth|BWIDth[:RESolution]
```

In the short form without optional keywords, `BAND 1MHZ` would have the same effect as `BWID 1MHZ`.

10.1.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

Example:

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABLE
```

Parameters can have different forms of values.

- [Numeric values](#)..... 136
- [Boolean](#)..... 137
- [Character data](#)..... 137
- [Character strings](#)..... 138
- [Block data](#)..... 138

10.1.6.1 Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

Example:

With unit: `SENSe:FREQuency:CENTer 1GHZ`

Without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**
Defines the minimum or maximum numeric value that is supported.
- **DEF**
Defines the default value.
- **UP/DOWN**
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

Querying numeric values

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- `INF/NINF`
Infinity or negative infinity. Represents the numeric values `9.9E37` or `-9.9E37`.
- `NAN`
Not a number. Represents the numeric value `9.91E37`. `NAN` is returned if errors occur.

10.1.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by `"ON"` or the numeric value `1`. The "off" state (logically untrue) is represented by `"OFF"` or the numeric value `0`.

Querying Boolean parameters

When you query Boolean parameters, the system returns either the value `1` (`"ON"`) or the value `0` (`"OFF"`).

Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return `1`

10.1.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 10.1.2, "Long and short form"](#), on page 134.

Querying text parameters

When you query text parameters, the system returns its short form.

Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMal`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return `NORM`

10.1.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark (') or a double quotation mark (").

Example:

```
INSTRument:DELeTe 'Spectrum'
```

10.1.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

10.2 Common suffixes

In the R&S FSV3 AM/FM/PM Modulation Analysis application, the following common suffixes are used in remote commands:

Table 10-1: Common suffixes used in remote commands in the R&S FSV3 AM/FM/PM Modulation Analysis application

Suffix	Value range	Description
<m>	1 to 16	Marker
<n>	1 to 6	Window (in the currently selected channel)
<t>	1 to 6	Trace
	1 to 8	Limit line

10.3 Activating analog modulation analysis

Analog Modulation Analysis require a special application on the R&S FSV/A. The measurement is started immediately with the default settings.

INSTRument:CREate:DUPLicate.....	139
INSTRument:CREate:NEW].....	139
INSTRument:CREate:REPLace.....	139
INSTRument:DELeTe.....	140
INSTRument:LIST?.....	140

INSTrument:REName	141
INSTrument[:SElect]	142
SYSTem:PRESet:CHANnel[:EXEC]	142

INSTrument:CREate:DUPLicate

Duplicates the currently selected channel, i.e creates a new channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

Example:

```
INST:SEL 'IQAnalyzer'
```

```
INST:CRE:DUPL
```

Duplicates the channel named 'IQAnalyzer' and creates a new channel named 'IQAnalyzer2'.

Usage: Event

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

Adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

Parameters:

<ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 140.

<ChannelName> String containing the name of the channel.
Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

Example:

```
INST:CRE SAN, 'Spectrum 2'
```

Adds a spectrum display named "Spectrum 2".

INSTrument:CREate:REPLace <ChannelName1>, <ChannelType>, <ChannelName2>

Replaces a channel with another one.

Setting parameters:

<ChannelName1> String containing the name of the channel you want to replace.

<ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 140.

<ChannelName2> String containing the name of the new channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 140).
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example: `INST:CRE:REPL 'IQAnalyzer2', IQ, 'IQAnalyzer'`
 Replaces the channel named "IQAnalyzer2" by a new channel of type "IQ Analyzer" named "IQAnalyzer".

Usage: Setting only

INSTrument:DELeTe <ChannelName>

Deletes a channel.

Setting parameters:

<ChannelName> String containing the name of the channel you want to delete.
 A channel must exist to delete it.

Usage: Setting only

INSTrument:LIST?

Queries all active channels. The query is useful to obtain the names of the existing channels, which are required to replace or delete the channels.

Return values:

<ChannelType>,
 <ChannelName> For each channel, the command returns the channel type and channel name (see tables below).
 Tip: to change the channel name, use the [INSTrument:REName](#) command.

Example: `INST:LIST?`
 Result for 3 channels:
 'ADEM', 'Analog Demod', 'IQ', 'IQ Analyzer', 'IQ', 'IQ Analyzer2'

Usage: Query only

Table 10-2: Available channel types and default channel names

Application	<ChannelType> Parameter	Default Channel Name*)
Spectrum	SANALYZER	Spectrum
5G NR (R&S FSV3-K144)	NR5G	5G NR
3GPP FDD BTS (R&S FSV3-K72)	BWCD	3G FDD BTS

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

Application	<ChannelType> Parameter	Default Channel Name*)
3GPP FDD UE (R&S FSV3-K73)	MWCD	3G FDD UE
Amplifier Measurements (R&S FSV3-K18)	AMPLifier	Amplifier
AM/FM/PM Modulation Analysis	ADEM	Analog Demod
Bluetooth (R&S FSV3-K8)	BTO	Bluetooth
GSM (R&S FSV3-K10)	GSM	GSM
I/Q Analyzer	IQ	IQ Analyzer
LTE (R&S FSV3-K10x)	LTE	LTE
NB-IoT (R&S FSV3-K106)	NIOT	NB-IoT
Noise Figure Measurements	NOISE	Noise
OFDM VSA (R&S FSV3-K96)	OFDMVSA	OFDM VSA
Phase Noise (R&S FSV3-K40)	PNOISE	Phase Noise
Pulse (R&S FSV3-K6)	PULSE	Pulse
Vector Signal Analysis (VSA, R&S FSV3-K70)	DDEM	VSA
WLAN (R&S FSV3-K91)	WLAN	WLAN

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

INSTRument:REName <ChannelName1>, <ChannelName2>

Renames a channel.

Setting parameters:

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.

Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example:

```
INST:REN 'IQAnalyzer2', 'IQAnalyzer3'
```

Renames the channel with the name 'IQAnalyzer2' to 'IQAnalyzer3'.

Usage:

Setting only

INSTrument[:SElect] <ChannelType>

Selects the channel type for the current channel.

See also [INSTrument:CREate\[:NEW\]](#) on page 139.

For a list of available channel types, see [INSTrument:LIST?](#) on page 140.

Parameters:

<ChannelType> **ADEMod**
Optional Analog Modulation Analysis application.

SYSTem:PRESet:CHANnel[:EXEC]

Restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

Example:

```
INST:SEL 'Spectrum2'
```

Selects the channel for "Spectrum2".

```
SYST:PRESet:CHAN:EXEC
```

Restores the factory default settings to the "Spectrum2" channel.

Usage: Event

Manual operation: See ["Preset Channel"](#) on page 37

10.4 Configuring the measurement

The following remote commands are required to configure an Analog Modulation Analysis.

Specific commands:

- [Managing standard settings](#)..... 142
- [Configuring the input](#)..... 143
- [Configuring the output](#)..... 183
- [Frequency settings](#)..... 186
- [Configuring the vertical axis \(amplitude, scaling\)](#)..... 188
- [Configuring data acquisition](#)..... 196
- [Triggering](#)..... 200
- [Configuring demodulation](#)..... 209
- [Adjusting settings automatically](#)..... 228

10.4.1 Managing standard settings

You can configure the R&S FSV3 AM/FM/PM Modulation Analysis application using predefined standard settings, allowing for quick and easy configuration for commonly performed measurements.

For details, see [Chapter 5.2, "Configuration according to standards"](#), on page 37.

For an overview of predefined standards and settings, see [Chapter A.1, "Predefined standards and settings"](#), on page 339.

[SENSe:]ADEMod:PRESet[:STANdard]	143
[SENSe:]ADEMod:PRESet:RESTore	143
[SENSe:]ADEMod:PRESet:STORE	143

[SENSe:]ADEMod:PRESet[:STANdard] <Standard>

Loads a measurement configuration.

Standard definitions are stored in an xml file. The default directory for Analog Modulation Analysis standards is C :

`\R_S\INSTR\USER\predefined\AdemodPredefined.`

Parameters:

<Standard> String containing the file name.
If you have stored the file in a subdirectory of the directory mentioned above, you have to include the relative path to the file.

Manual operation: See "[Load Standard](#)" on page 38

[SENSe:]ADEMod:PRESet:RESTore

Manual operation: See "[Restore Standard Files](#)" on page 38

[SENSe:]ADEMod:PRESet:STORE <Standard>

Saves the current Analog Modulation Analysis measurement configuration.

Standard definitions are stored in an XML file. The default directory for Analog Modulation Analysis standards is C :

`\R_S\INSTR\USER\predefined\AdemodPredefined.`

Parameters:

<Standard> String containing the file name.
You can save the file in a subdirectory of the directory mentioned above. In that case, you have to include the relative path to the file.

Manual operation: See "[Save Standard](#)" on page 38

10.4.2 Configuring the input

• RF input	144
• Configuring file input	146
• Using external mixers	147
• Setting up probes	161
• Working with power sensors	166
• External generator control	176

10.4.2.1 RF input

INPut:ATTenuation:PROTection:RESet.....	144
INPut:CONNector.....	144
INPut:COUPling.....	144
INPut:DPATH.....	145
INPut:FILTer:YIG[:STATe].....	145
INPut:IMPedance.....	145
INPut:SELEct.....	145

INPut:ATTenuation:PROTection:RESet

Resets the attenuator and reconnects the RF input with the input mixer for the R&S FSV/A after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVLD` message in the status bar are cleared.

(For details on the status register see the R&S FSV3000/ FSVA3000 base unit user manual).

The command works only if the overload condition has been eliminated first.

Example: `INP:ATT:PROT:RES`

INPut:CONNector <ConnType>

Determines which connector the input for the measurement is taken from.

Parameters:

<ConnType>	RF RF input connector
	RFProbe Active RF probe
	*RST: RF

Example: `INP:CONN RF`
Selects input from the RF input connector.

Manual operation: See "[Input Connector](#)" on page 41

INPut:COUPling <CouplingType>

Selects the coupling type of the RF input.

Parameters:

<CouplingType>	AC DC
	AC AC coupling
	DC DC coupling
	*RST: AC

Example: `INP:COUP DC`

Manual operation: See "[Input Coupling](#)" on page 40

INPut:DPATH <DirectPath>

Enables or disables the use of the direct path for frequencies close to 0 Hz.

Parameters:

<DirectPath> AUTO | OFF

AUTO | 1

(Default) the direct path is used automatically for frequencies close to 0 Hz.

OFF | 0

The analog mixer path is always used.

Example: `INP:DPAT OFF`

Manual operation: See "[Direct Path](#)" on page 41

INPut:FILTer:YIG[:STATe] <State>

Enables or disables the YIG filter.

Parameters:

<State> ON | OFF | 0 | 1

Example: `INP:FILT:YIG OFF`

Deactivates the YIG-preselector.

Manual operation: See "[YIG-Preselector](#)" on page 41

INPut:IMPedance <Impedance>

Selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

Parameters:

<Impedance> 50 | 75

*RST: 50 Ω

Default unit: OHM

Example: `INP:IMP 75`

Manual operation: See "[Impedance](#)" on page 40

See "[Unit](#)" on page 44

INPut:SElect <Source>

Selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FSV/A.

If no additional input options are installed, only RF input is supported.

Tip: The I/Q data to be analyzed for AM/FM/PM Modulation Analysis cannot only be measured by the R&S FSV3 AM/FM/PM Modulation Analysis application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the analyzed I/Q data from the R&S FSV3 AM/FM/PM Modulation Analysis application can be exported for further analysis in external applications.

For details, see the R&S FSV/A I/Q Analyzer and I/Q Input User Manual.

Parameters:

<Source> **RF**
Radio Frequency ("RF INPUT" connector)

FIQ
I/Q data file

*RST: RF

Manual operation: See "Radio Frequency State" on page 40
 See "I/Q Input File State" on page 42

10.4.2.2 Configuring file input

The following commands are required to define input from a file.

Useful commands for configuring file input described elsewhere:

- [INPut:SElect](#) on page 145

Remote commands exclusive to configuring input from files:

[INPut:FILE:PATH](#)..... 146

INPut:FILE:PATH <FileName>[, <AnalysisBW>]

Selects the I/Q data file to be used as input for further measurements.

The I/Q data file must be in one of the following supported formats:

- .iq.tar
- .iqw
- .csv
- .mat
- .wv
- .aid

Only a single data stream or channel can be used as input, even if multiple streams or channels are stored in the file.

For some file formats that do not provide the sample rate and measurement time or record length, you must define these parameters manually. Otherwise the traces are not visible in the result displays.

Parameters:

<FileName>	String containing the path and name of the source file. The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be <code>.iq.tar</code> . For <code>.mat</code> files, Matlab® v4 is assumed.
<AnalysisBW>	Optionally: The analysis bandwidth to be used by the measurement. The bandwidth must be smaller than or equal to the bandwidth of the data that was stored in the file. Default unit: HZ

Example:

```
INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar'
```

Uses I/Q data from the specified file as input.

Example:

```
//Load an IQW file
INP:SEL:FIQ
INP:FILE:PATH 'C:\R_S\Instr\user\data.iqw'
//Define the sample rate
TRAC:IQ:SRAT 10MHz
//Define the measurement time
SENSe:SWEEp:TIME 0.001001
//Start the measurement
INIT:IMM
```

Manual operation: See ["Select I/Q data file"](#) on page 42

10.4.2.3 Using external mixers

The commands required to work with external mixers in a remote environment are described here. Note that these commands require the R&S FSV/A to have an external mixer option installed and an external mixer to be connected to the R&S FSV/A.

For details on working with external mixers see the R&S FSV/A User Manual.

- [Basic settings](#)..... 147
- [Mixer settings](#)..... 150
- [Conversion loss table settings](#)..... 155
- [Programming example: working with an external mixer](#)..... 159

Basic settings

The basic settings concern general usage of an external mixer.

[SENSe:]MIXer<x>[:STATe]	148
[SENSe:]MIXer<x>:BIAS:HIGH	148
[SENSe:]MIXer<x>:BIAS[:LOW]	148
[SENSe:]MIXer<x>:LOPower	148
[SENSe:]MIXer<x>:SIGNal	149
[SENSe:]MIXer<x>:THReshold	149

[SENSe:]MIXer<x>[:STATe] <State>

Activates or deactivates the use of a connected external mixer as input for the measurement. This command is only available if the optional External Mixer is installed and an external mixer is connected.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Example: MIX ON

[SENSe:]MIXer<x>:BIAS:HIGH <BiasSetting>

Defines the bias current for the high (last) range.

Is only available if the external mixer is active (see [\[SENSe:\]MIXer<x>\[:STATe\]](#) on page 148).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

[SENSe:]MIXer<x>:BIAS[:LOW] <BiasSetting>

Defines the bias current for the low (first) range.

Is only available if the external mixer is active (see [\[SENSe:\]MIXer<x>\[:STATe\]](#) on page 148).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

[SENSe:]MIXer<x>:LOPower <Level>

Specifies the LO level of the external mixer's LO port.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Level> Range: 13.0 dBm to 17.0 dBm
 Increment: 0.1 dB
 *RST: 15.5 dBm
 Default unit: DBM

Example: MIX:LOP 16.0dBm

[SENSe:]MIXer<x>:SIGNal <State>

Specifies whether automatic signal detection is active or not.

Note that automatic signal identification is only available for measurements that perform frequency sweeps (not in vector signal analysis or the I/Q Analyzer, for instance).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<State> OFF | ON | AUTO | ALL
OFF | ON | AUTO | ALL
OFF
 No automatic signal detection is active.
ON
 Automatic signal detection (Signal ID) is active.
AUTO
 Automatic signal detection (Auto ID) is active.
ALL
 Both automatic signal detection functions (Signal ID+Auto ID) are active.
 *RST: OFF

[SENSe:]MIXer<x>:THReshold <Value>

Defines the maximum permissible level difference between test sweep and reference sweep to be corrected during automatic comparison (see [\[SENSe:\]MIXer<x>:SIGNal](#) on page 149).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Value> <numeric value>
 Range: 0.1 dB to 100 dB
 *RST: 10 dB
 Default unit: DB

Example: MIX:PORT 3

Mixer settings

The following commands are required to configure the band and specific mixer settings.

[SENSe:]MIXer<x>:FREQUency:HANdOver.....	150
[SENSe:]MIXer<x>:FREQUency:STARt.....	150
[SENSe:]MIXer<x>:FREQUency:STOP.....	151
[SENSe:]MIXer<x>:HARMonic:BAND:PRESet.....	151
[SENSe:]MIXer<x>:HARMonic:BAND.....	151
[SENSe:]MIXer<x>:HARMonic:HIGH:STATe.....	152
[SENSe:]MIXer<x>:HARMonic:HIGH[:VALue].....	152
[SENSe:]MIXer<x>:HARMonic:TYPE.....	152
[SENSe:]MIXer<x>:HARMonic[:LOW].....	153
[SENSe:]MIXer<x>:IF?.....	153
[SENSe:]MIXer<x>:LOSS:HIGH.....	153
[SENSe:]MIXer<x>:LOSS:TABLE:HIGH.....	154
[SENSe:]MIXer<x>:LOSS:TABLE[:LOW].....	154
[SENSe:]MIXer<x>:LOSS[:LOW].....	154
[SENSe:]MIXer<x>:PORTs.....	155
[SENSe:]MIXer<x>:RFOVerrange[:STATe].....	155

[SENSe:]MIXer<x>:FREQUency:HANdOver <Frequency>

Defines the frequency at which the mixer switches from one range to the next (if two different ranges are selected). The handover frequency for each band can be selected freely within the overlapping frequency range.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 148).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Frequency> Default unit: HZ

Example:

```
MIX ON
Activates the external mixer.
MIX:FREQ:HAND 78.0299GHZ
Sets the handover frequency to 78.0299 GHz.
```

[SENSe:]MIXer<x>:FREQUency:STARt

Sets or queries the frequency at which the external mixer band starts.

Suffix:

<x> 1..n
 irrelevant

Example:

```
MIX:FREQ:STAR?
Queries the start frequency of the band.
```

[SENSe:]MIXer<x>:FREQuency:STOP

Sets or queries the frequency at which the external mixer band stops.

Suffix:

<x> 1..n
 irrelevant

Example:

MIX:FREQ:STOP?
Queries the stop frequency of the band.

[SENSe:]MIXer<x>:HARMonic:BAND:PRESet

Restores the preset frequency ranges for the selected standard waveguide band.

Note: Changes to the band and mixer settings are maintained even after using the [PRESET] function. Use this command to restore the predefined band ranges.

Suffix:

<x> 1..n
 irrelevant

Example:

MIX:HARM:BAND:PRESet
Prests the selected waveguide band.

[SENSe:]MIXer<x>:HARMonic:BAND <Band>

Selects the external mixer band. The query returns the currently selected band.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 148).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Band> KA|Q|U|V|E|W|F|D|G|Y|J|USER
Standard waveguide band or user-defined band.

Table 10-3: Frequency ranges for pre-defined bands

Band	Frequency start [GHz]	Frequency stop [GHz]
KA (A) *)	26.5	40.0
Q	33.0	50.0
U	40.0	60.0
V	50.0	75.0
E	60.0	90.0
W	75.0	110.0

*) The band formerly referred to as "A" is now named "KA".

Band	Frequency start [GHz]	Frequency stop [GHz]
F	90.0	140.0
D	110.0	170.0
G	140.0	220.0
J	220.0	325.0
Y	325.0	500.0
USER	32.18 (default)	68.22 (default)

*) The band formerly referred to as "A" is now named "KA".

[SENSe:]MIXer<x>:HARMonic:HIGH:STATe <State>

Specifies whether a second (high) harmonic is to be used to cover the band's frequency range.

Suffix:

<x> 1..n

Parameters:

<State> ON | OFF
*RST: ON

Example: MIX:HARM:HIGH:STAT ON

[SENSe:]MIXer<x>:HARMonic:HIGH[:VALue] <HarmOrder>

Specifies the harmonic order to be used for the high (second) range.

Suffix:

<x> 1..n
irrelevant

Parameters:

<HarmOrder> Range: 3 to 128 (USER band); for other bands: see band definition

Example: MIX:HARM:HIGH:STAT ON
MIX:HARM:HIGH 3

[SENSe:]MIXer<x>:HARMonic:TYPE <OddEven>

Specifies whether the harmonic order to be used should be odd, even, or both.

Which harmonics are supported depends on the mixer type.

Suffix:

<x> 1..n
irrelevant

Parameters:

<OddEven> ODD | EVEN | EODD

ODD | EVEN | EODD

*RST: EVEN

Example:

MIX:HARM:TYPE ODD

[SENSe:]MIXer<x>:HARMonic[:LOW] <HarmOrder>

Specifies the harmonic order to be used for the low (first) range.

Suffix:<x> 1..n
irrelevant**Parameters:**

<HarmOrder> Range: 3 to 128 (USER band); for other bands: see band definition

*RST: 4 (for band U)

Example:

MIX:HARM 3

[SENSe:]MIXer<x>:IF?

Queries the intermediate frequency currently used by the external mixer.

Suffix:<x> 1..n
irrelevant**Example:**

MIX:IF?

Example:See "[Programming example: working with an external mixer](#)" on page 159.**Usage:**

Query only

[SENSe:]MIXer<x>:LOSS:HIGH <Average>

Defines the average conversion loss to be used for the entire high (second) range.

Suffix:<x> 1..n
irrelevant**Parameters:**

<Average> Range: 0 to 100

*RST: 24.0 dB

Default unit: dB

Example:

MIX:LOSS:HIGH 20dB

[SENSe:]MIXer<x>:LOSS:TABLE:HIGH <FileName>

Defines the conversion loss table to be used for the high (second) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<FileName> String containing the path and name of the file, or the serial number of the external mixer whose file is required. The R&S FSV/A automatically selects the correct cvl file for the current IF. As an alternative, you can also select a user-defined conversion loss table (.ac1 file).

[SENSe:]MIXer<x>:LOSS:TABLE[:LOW] <FileName>

Defines the file name of the conversion loss table to be used for the low (first) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<FileName> String containing the path and name of the file, or the serial number of the external mixer whose file is required. The R&S FSV/A automatically selects the correct cvl file for the current IF. As an alternative, you can also select a user-defined conversion loss table (.ac1 file).

Example:

```
MIX:LOSS:TABLE '101567'
MIX:LOSS:TABLE?
//Result:
'101567_MAG_6_B5000_3G5.B5G'
```

[SENSe:]MIXer<x>:LOSS[:LOW] <Average>

Defines the average conversion loss to be used for the entire low (first) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Average> Range: 0 to 100
 *RST: 24.0 dB
 Default unit: dB

Example:

```
MIX:LOSS 20dB
```

[SENSe:]MIXer<x>:PORTs <PortType>

Selects the mixer type.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<PortType> **2 | 3**
 2
 Two-port mixer.
 3
 Three-port mixer.
*RST: 2

Example: MIX:PORT 3

[SENSe:]MIXer<x>:RFOVerrange[:STATe] <State>

If enabled, the band limits are extended beyond "RF Start" and "RF Stop" due to the capabilities of the used harmonics.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Conversion loss table settings

The following settings are required to configure and manage conversion loss tables.

[SENSe:]CORRection:CVL:BAND.....	156
[SENSe:]CORRection:CVL:BIAS.....	156
[SENSe:]CORRection:CVL:CATalog?.....	156
[SENSe:]CORRection:CVL:CLEar.....	157
[SENSe:]CORRection:CVL:COMMeNt.....	157
[SENSe:]CORRection:CVL:DATA.....	157
[SENSe:]CORRection:CVL:HARMonic.....	157
[SENSe:]CORRection:CVL:MIXer.....	158
[SENSe:]CORRection:CVL:PORTs.....	158
[SENSe:]CORRection:CVL:SElect.....	158
[SENSe:]CORRection:CVL:SNUMber.....	159

[SENSe:]CORRection:CVL:BAND <Band>

Defines the waveguide band for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Band> K | KA | Q | U | V | E | W | F | D | G | Y | J | USER
 Standard waveguide band or user-defined band.
 For a definition of the frequency range for the pre-defined bands, see Table 10-3).
 *RST: F (90 GHz - 140 GHz)

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:BAND KA
Sets the band to KA (26.5 GHz - 40 GHz).
```

[SENSe:]CORRection:CVL:BIAS <BiasSetting>

Defines the bias setting to be used with the conversion loss table.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:BIAS 3A
```

[SENSe:]CORRection:CVL:CATalog?

Queries all available conversion loss tables saved in the C:\R_S\INSTR\USER\cv1\ directory on the instrument.

Is only available with option B21 (External Mixer) installed.

Return values:

<Files> 'string'
 Comma-separated list of strings containing the file names.

Example: CORR:CVL:CAT?

Usage: Query only

[SENSe:]CORRection:CVL:CLEar

Deletes the selected conversion loss table. Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 158).

Is only available with option B21 (External Mixer) installed.

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:CLE
```

[SENSe:]CORRection:CVL:COMMent <Text>

Defines a comment for the conversion loss table. Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Text>

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:COMM 'Conversion loss table for
FS_Z60'
```

[SENSe:]CORRection:CVL:DATA {<Freq>, <Level>}...

Defines the reference values of the selected conversion loss tables. The values are entered as a set of frequency/level pairs. You can define a maximum of 500 frequency/level pairs. Before this command can be performed, you must select the conversion loss table (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Freq> The frequencies have to be sent in ascending order.

Default unit: HZ

<Level> Default unit: DB

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:DATA 1MHZ, -30DB, 2MHZ, -40DB
```

[SENSe:]CORRection:CVL:HARMonic <HarmOrder>

Defines the harmonic order for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<HarmOrder> Range: 2 to 65

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:HARM 3
```

[SENSe:]CORRection:CVL:MIXer <Type>

Defines the mixer name in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Type> string
Name of mixer with a maximum of 16 characters

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:MIX 'FS_Z60'
```

[SENSe:]CORRection:CVL:PORTs <PortType>

Defines the mixer type in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<PortType> 2 | 3
*RST: 2

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:PORT 3
```

[SENSe:]CORRection:CVL:SElect <FileName>

Selects the conversion loss table with the specified file name. If <file_name> is not available, a new conversion loss table is created.

Is only available with option B21 (External Mixer) installed.

Parameters:

<FileName> String containing the path and name of the file.

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
```

[SENSe:]CORRection:CVL:SNUMber <SerialNo>

Defines the serial number of the mixer for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 158).

Is only available with option B21 (External Mixer) installed.

Parameters:

<SerialNo> Serial number with a maximum of 16 characters

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:MIX '123.4567'
```

Programming example: working with an external mixer

This example demonstrates how to work with an external mixer in a remote environment. It is performed in the Spectrum application in the default layout configuration. Note that without a real input signal and connected mixer, this measurement will not return useful results.

```
//-----Preparing the instrument -----
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
//----- Configuring basic mixer behavior -----
//Set the LO level of the mixer's LO port to 15 dBm.
SENS:MIX:LOP 15dBm
//Set the bias current to -1 mA .
SENS:MIX:BIAS:LOW -1mA
//----- Configuring the mixer and band settings -----
//Use band "V" to full possible range extent for assigned harmonic (6).
SENS:MIX:HARM:BAND V
SENS:MIX:RFOV ON
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 47480000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 138020000000 (138.02 GHz)
//Use a 3-port mixer type
SENS:MIX:PORT 3
//Split the frequency range into two ranges;
```

```

//range 1 covers 47.48 GHz to 80 GHz; harmonic 6, average conv. loss of 20 dB
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:LOW 20dB
SENS:MIX:HARM:HIGH 8
SENS:MIX:LOSS:HIGH 30dB
//----- Activating automatic signal identification functions -----
//Activate both automatic signal identification functions.
SENS:MIX:SIGN ALL
//Use auto ID threshold of 8 dB.
SENS:MIX:THR 8dB

//-----Performing the Measurement-----
//Select single sweep mode.
INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//-----Retrieving Results-----
//Return the trace data for the input signal without distortions
//(default screen configuration)
TRAC:DATA? TRACE3

```

Configuring a conversion loss table for a user-defined band

```

//-----Preparing the instrument -----
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
//-----Configuring a new conversion loss table -----
//Define cvl table for range 1 of band as described in previous example
// (extended V band)
SENS:CORR:CVL:SEL 'UserTable'
SENS:CORR:CVL:COMM 'User-defined conversion loss table for USER band'
SENS:CORR:CVL:BAND USER
SENS:CORR:CVL:HARM 6
SENS:CORR:CVL:BIAS -1mA
SENS:CORR:CVL:MIX 'FS_Z60'
SENS:CORR:CVL:SNUM '123.4567'
SENS:CORR:CVL:PORT 3
//Conversion loss is linear from 55 GHz to 75 GHz
SENS:CORR:CVL:DATA 55GHZ,-20DB,75GHZ,-30DB
//----- Configuring the mixer and band settings -----
//Use user-defined band and assign new cvl table.
SENS:MIX:HARM:BAND USER
//Define band by two ranges;

```



```

//range 1 covers 47.48 GHz to 80 GHz; harmonic 6, cvl table 'UserTable'
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:TABL:LOW 'UserTable'
SENS:MIX:HARM:HIGH 8

SENS:MIX:LOSS:HIGH 30dB
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 47480000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 138020000000 (138.02 GHz)

//-----Performing the Measurement-----
//Select single sweep mode.
INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//-----Retrieving Results-----
//Return the trace data (default screen configuration)
TRAC:DATA? TRACel

```

10.4.2.4 Setting up probes

Modular probes can be connected to the RF input connector of the R&S FSV/A.

For details see the R&S FSV/A User Manual.

[SENSe:]PROBe<pb>:ID:PARTnumber?	161
[SENSe:]PROBe<pb>:ID:SRNumber?	162
[SENSe:]PROBe<pb>:SETup:ATTRatio	162
[SENSe:]PROBe<pb>:SETup:CMOOffset	162
[SENSe:]PROBe<pb>:SETup:DMOOffset	163
[SENSe:]PROBe<pb>:SETup:MODE	163
[SENSe:]PROBe<pb>:SETup:NAME?	164
[SENSe:]PROBe<pb>:SETup:NMOOffset	164
[SENSe:]PROBe<pb>:SETup:PMODE	164
[SENSe:]PROBe<pb>:SETup:PMOOffset	165
[SENSe:]PROBe<pb>:SETup:STATE?	165
[SENSe:]PROBe<pb>:SETup:TYPE?	166

[SENSe:]PROBe<pb>:ID:PARTnumber?

Queries the R&S part number of the probe.

Suffix:
 <pb> 1..n
 Selects the connector:
 3 = RF

Return values:
 <PartNumber>

Example: //Query part number
 PROB3:ID:PART?

Usage: Query only

[SENSe:]PROBe<pb>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
 <pb> 1..n
 Selects the connector:
 3 = RF

Return values:
 <SerialNo>

Example: //Query serial number
 PROB3:ID:SRN?

Usage: Query only

[SENSe:]PROBe<pb>:SETup:ATTRatio <AttenuationRatio>

Defines the attenuation applied to the input at the probe. This setting is only available for modular probes.

Suffix:
 <pb> 1..n
 Selects the connector:
 3 = RF

Parameters:
 <AttenuationRatio> **10**
 Attenuation by 20 dB (ratio= 10:1)
2
 Attenuation by 6 dB (ratio= 2:1)
 *RST: 10
 Default unit: DB

[SENSe:]PROBe<pb>:SETup:CMOffset <CMOffset>

Sets the common mode offset. The setting is only available if a differential probe in CM-mode is connected to the R&S FSV/A.

If the probe is disconnected, the common mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the R&S FSV/A User Manual.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<CMOffset> Offset of the mean voltage between the positive and negative input terminal vs. ground
Range: -16 V to +16 V
Default unit: V

[SENSe:]PROBe<pb>:SETup:DMOffset <DMOffset>

Sets the DM-mode offset. The setting is only available if a modular probe in DM-mode is connected to the R&S FSV/A.

If the probe is disconnected, the DM-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the R&S FSV/A User Manual.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<DMOffset> Voltage offset between the positive and negative input terminal
Default unit: V

[SENSe:]PROBe<pb>:SETup:MODE <Mode>

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<Mode> RSINgle | NOActIon
RSINgle
Run single: starts one data acquisition.
NOActIon
Nothing is started on pressing the micro button.

[SENSe:]PROBe<pb>:SETup:NAME?

Queries the name of the probe.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Return values:

<Name> String containing the name of the probe.

Example:

```
//Query name of the probe
PROB3:SET:NAME?
```

Usage:

Query only

[SENSe:]PROBe<pb>:SETup:NMOffset <NMOffset>

Sets the N-mode offset. The setting is only available if a modular probe in N-mode is connected to the R&S FSV/A. The maximum voltage difference between the positive and negative input terminals is 16 V.

If the probe is disconnected, the N-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the R&S FSV/A User Manual.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<NMOffset> The voltage offset between the negative input terminal and ground.
Default unit: V

[SENSe:]PROBe<pb>:SETup:PMODE <Mode>

Determines the mode of a multi-mode modular probe.

For details see the R&S FSV/A User Manual.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<Mode> CM | DM | PM | NM

DM

Voltage between the positive and negative input terminal

CM

Mean voltage between the positive and negative input terminal vs. ground

PM

Voltage between the positive input terminal and ground

NM

Voltage between the negative input terminal and ground

Example:

```
SENS:PROB:SETU:PMOD PM
```

Sets the probe to P-mode.

[SENSe:]PROBe<pb>:SETup:PMOffset <PMOffset>

Sets the P-mode offset. The setting is only available if a modular probe in P-mode is connected to the R&S FSV/A. The maximum voltage difference between the positive and negative input terminals is 16 V.

If the probe is disconnected, the P-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the R&S FSV/A User Manual.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Parameters:

<PMOffset> The voltage offset between the positive input terminal and ground.
Default unit: V

[SENSe:]PROBe<pb>:SETup:STATe?

Queries if the probe at the specified connector is active (detected) or not active (not detected).

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Return values:

<State> DETected | NDETECTED

Example:

```
//Query connector state
PROB3:SET:STAT?
```

Usage:

Query only

[SENSe:]PROBe<pb>:SETup:TYPE?

Queries the type of the probe.

Suffix:

<pb> 1..n
Selects the connector:
3 = RF

Return values:

<Type> String containing one of the following values:
–"None" (no probe detected)
–"active differential"
–"active single-ended"
–"active modular"

Example: //Query probe type
PROB3:SET:TYPE?

Usage: Query only

10.4.2.5 Working with power sensors

The following commands describe how to work with power sensors.

These commands require the use of a Rohde & Schwarz power sensor. For a list of supported sensors, see the specifications document.

Using power sensors requires the option R&S FSV3-K9.

- [Configuring power sensors](#)..... 166
- [Configuring power sensor measurements](#)..... 167
- [Triggering with power sensors](#)..... 174

Configuring power sensors

[SYSTem:COMMunicate:RDEvice:PMETer<p>:CONFigure:AUTO\[:STATe\]](#)..... 166
[SYSTem:COMMunicate:RDEvice:PMETer<p>:COUNT?](#)..... 167
[SYSTem:COMMunicate:RDEvice:PMETer<p>:DEFine](#)..... 167

SYSTem:COMMunicate:RDEvice:PMETer<p>:CONFigure:AUTO[:STATe] <State>

Turns automatic assignment of a power sensor to the power sensor index on and off.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1
*RST: 1

Example: SYST:COMM:RDEV:PMET:CONF:AUTO OFF

SYSTem:COMMunicate:RDEvice:PMETer<p>:COUNT?

Queries the number of power sensors currently connected to the R&S FSV/A.

Suffix:

<p> Power sensor index

Return values:

<NumberSensors> Number of connected power sensors.

Example:

SYST:COMM:RDEV:PMET:COUN?

Usage:

Query only

SYSTem:COMMunicate:RDEvice:PMETer<p>:DEFine <Placeholder>, <Type>, <Interface>, <SerialNo>

Assigns the power sensor with the specified serial number to the selected power sensor index (configuration).

The query returns the power sensor type and serial number of the sensor assigned to the specified index.

Suffix:

<p> Power sensor index

Parameters:

<Placeholder> Currently not used

<Type> Detected power sensor type, e.g. "NRP-Z81".

<Interface> Interface the power sensor is connected to; always "USB"

<SerialNo> Serial number of the power sensor assigned to the specified index

Example:

```
SYST:COMM:RDEV:PMET2:DEF ' ', 'NRP-Z81', ' ', '123456'
```

Assigns the power sensor with the serial number '123456' to the configuration "Power Sensor 2".

```
SYST:COMM:RDEV:PMET2:DEF?
```

Queries the sensor assigned to "Power Sensor 2".

Result:

```
' ', 'NRP-Z81', 'USB', '123456'
```

The NRP-Z81 power sensor with the serial number '123456' is assigned to the "Power Sensor 2".

Configuring power sensor measurements

CALibration:PMETer<p>:ZERO:AUTO ONCE.....	168
CALCulate<n>:PMETer<p>:RELative[:MAGNitude].....	168
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE.....	168
CALCulate<n>:PMETer<p>:RELative:STATe.....	169
FETCH:PMETer<p>?.....	169
READ:PMETer<p>?.....	169

[SENSe:]PMETer<p>:DCYClE[:STATe].....	169
[SENSe:]PMETer<p>:DCYClE:VALue.....	170
[SENSe:]PMETer<p>:FREQuency.....	170
[SENSe:]PMETer<p>:FREQuency:LINK.....	170
[SENSe:]PMETer<p>:MTIME.....	171
[SENSe:]PMETer<p>:MTIME:AVERAge:COUNT.....	171
[SENSe:]PMETer<p>:MTIME:AVERAge[:STATe].....	172
[SENSe:]PMETer<p>:ROFFset[:STATe].....	172
[SENSe:]PMETer<p>:SOFFset.....	172
[SENSe:]PMETer<p>[:STATe].....	172
[SENSe:]PMETer<p>:UPDate[:STATe].....	173
UNIT<n>:PMETer<p>:POWer.....	173
UNIT<n>:PMETer<p>:POWer:RATIo.....	173

CALibration:PMETer<p>:ZERO:AUTO ONCE

Zeroes the power sensor.

Note that you have to disconnect the signals from the power sensor input before you start to zero the power sensor. Otherwise, results are invalid.

Suffix:

<p> Power sensor index

Example:

CAL:PMET2:ZERO:AUTO ONCE;*WAI

Starts zeroing the power sensor 2 and delays the execution of further commands until zeroing is concluded.

Usage:

Event

CALCulate<n>:PMETer<p>:RELative[:MAGNitude] <RefValue>

Defines the reference value for relative measurements.

Suffix:

<n> [Window](#)

<p> Power sensor index

Parameters:

<RefValue> Range: -200 dBm to 200 dBm
*RST: 0
Default unit: DBM

Example:

CALC:PMET2:REL -30

Sets the reference value for relative measurements to -30 dBm for power sensor 2.

CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE

Sets the current measurement result as the reference level for relative measurements.

Suffix:

<n> [Window](#)

<p> Power sensor index

Example:

```
CALC:PMET2:REL:AUTO ONCE
```

Takes the current measurement value as reference value for relative measurements for power sensor 2.

Usage:

Event

CALCulate<n>:PMETer<p>:RELative:STATe <State>

Turns relative power sensor measurements on and off.

Suffix:

<n> [Window](#)

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

```
CALC:PMET2:REL:STAT ON
```

Activates the relative display of the measured value for power sensor 2.

FETCh:PMETer<p>?

Queries the results of power sensor measurements.

Suffix:

<p> Power sensor index

Usage:

Query only

READ:PMETer<p>?

Initiates a power sensor measurement and queries the results.

Suffix:

<p> Power sensor index

Usage:

Query only

[SENSe:]PMETer<p>:DCYClE[:STATe] <State>

Turns the duty cycle correction on and off.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

PMET2:DCYC:STAT ON

[SENSe:]PMETer<p>:DCYClE:VALue <Percentage>

Defines the duty cycle for the correction of pulse signals.

The power sensor uses the duty cycle in combination with the mean power to calculate the power of the pulse.

Suffix:

<p> Power sensor

Parameters:

<Percentage> Range: 0.001 to 99.999
 *RST: 99.999
 Default unit: %

Example:

PMET2:DCYC:STAT ON
 Activates the duty cycle correction.
 PMET2:DCYC:VAL 0.5
 Sets the correction value to 0.5%.

[SENSe:]PMETer<p>:FREQUency <Frequency>

Defines the frequency of the power sensor.

Suffix:

<p> Power sensor index

Parameters:

<Frequency> The available value range is specified in the specifications document of the power sensor in use.
 *RST: 50 MHz
 Default unit: HZ

Example:

PMET2:FREQ 1GHZ
 Sets the frequency of the power sensor to 1 GHz.

[SENSe:]PMETer<p>:FREQUency:LINK <Coupling>

Selects the frequency coupling for power sensor measurements.

Suffix:
<p> Power sensor index

Parameters:
<Coupling> **CENTer**
Couples the frequency to the center frequency of the analyzer
MARKer1
Couples the frequency to the position of marker 1
OFF
Switches the frequency coupling off
*RST: CENTer

Example: PMET2:FREQ:LINK CENT
Couples the frequency to the center frequency of the analyzer

[SENSe:]PMETer<p>:MTIMe <Duration>

Selects the duration of power sensor measurements.

Suffix:
<p> Power sensor index

Parameters:
<Duration> SHORt | NORMAl | LONG
*RST: NORMAl

Example: PMET2:MTIM SHOR
Sets a short measurement duration for measurements of stationary high power signals for the selected power sensor.

[SENSe:]PMETer<p>:MTIMe:AVERAge:COUNT <NumberReadings>

Sets the number of power readings included in the averaging process of power sensor measurements.

Extended averaging yields more stable results for power sensor measurements, especially for measurements on signals with a low power, because it minimizes the effects of noise.

Suffix:
<p> Power sensor index

Parameters:
<NumberReadings> An average count of 0 or 1 performs one power reading.
Range: 0 to 256
Increment: binary steps (1, 2, 4, 8, ...)

Example: PMET2:MTIM:AVER ON
Activates manual averaging.
PMET2:MTIM:AVER:COUN 8
Sets the number of readings to 8.

[SENSe:]PMETer<p>:MTIMe:AVERage[:STATe] <State>

Turns averaging for power sensor measurements on and off.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

PMET2:MTIM:AVER ON
Activates manual averaging.

[SENSe:]PMETer<p>:ROFFset[:STATe] <State>

Includes or excludes the reference level offset of the analyzer for power sensor measurements.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

PMET2:ROFF OFF
Takes no offset into account for the measured power.

[SENSe:]PMETer<p>:SOFFset <SensorOffset>

Takes the specified offset into account for the measured power. Only available if [\[SENSe:\]PMETer<p>:ROFFset\[:STATe\]](#) is disabled.

Suffix:

<p> Power sensor index

Parameters:

<SensorOffset> Default unit: DB

Example:

PMET2:SOFF 0.001

[SENSe:]PMETer<p>[:STATe] <State>

Turns a power sensor on and off.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

PMET1 ON
 Switches the power sensor measurements on.

[SENSe:]PMETer<p>:UPDate[:STATe] <State>

Turns continuous update of power sensor measurements on and off.

If on, the results are updated even if a single sweep is complete.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

PMET1:UPD ON
 The data from power sensor 1 is updated continuously.

UNIT<n>:PMETer<p>:POWer <Unit>

Selects the unit for absolute power sensor measurements.

Suffix:

<n> irrelevant

<p> Power sensor index

Parameters:

<Unit> DBM | WATT | W | DB | PCT
 *RST: DBM

Example:

UNIT:PMET:POW DBM

UNIT<n>:PMETer<p>:POWer:RATio <Unit>

Selects the unit for relative power sensor measurements.

Suffix:

<n> irrelevant

<p> Power sensor index

Parameters:

<Unit> DB | PCT

*RST: DB

Example: UNIT:PMET:POW:RAT DB

Triggering with power sensors

[SENSe:]PMETer<p>:TRIGger:DTIME.....	174
[SENSe:]PMETer<p>:TRIGger:HOLDoff.....	174
[SENSe:]PMETer<p>:TRIGger:HYSTeresis.....	175
[SENSe:]PMETer<p>:TRIGger:LEVel.....	175
[SENSe:]PMETer<p>:TRIGger:SLOPe.....	175
[SENSe:]PMETer<p>:TRIGger[:STATe].....	176

[SENSe:]PMETer<p>:TRIGger:DTIME <Time>

Defines the time period that the input signal has to stay below the IF power trigger level before the measurement starts.

Suffix:

<p> Power sensor index

Parameters:

<Time> Range: 0 s to 1 s
 Increment: 100 ns
 *RST: 100 µs
 Default unit: S

Example: PMET2:TRIG:DTIME 0.001

[SENSe:]PMETer<p>:TRIGger:HOLDoff <Holdoff>

Defines the trigger holdoff for external power triggers.

Suffix:

<p> Power sensor index

Parameters:

<Holdoff> Time period that has to pass between the trigger event and the start of the measurement, in case another trigger event occurs.
 Range: 0 s to 1 s
 Increment: 100 ns
 *RST: 0 s
 Default unit: S

Example: PMET2:TRIG:HOLD 0.1
 Sets the holdoff time of the trigger to 100 ms

[SENSe:]PMETer<p>:TRIGger:HYSTeresis <Hysteresis>

Defines the trigger hysteresis for external power triggers.

The hysteresis in dB is the value the input signal must stay below the IF power trigger level to allow a trigger to start the measurement.

Suffix:

<p> Power sensor index

Parameters:

<Hysteresis> Range: 3 dB to 50 dB
Increment: 1 dB
*RST: 0 dB
Default unit: DB

Example:

PMET2:TRIG:HYST 10
Sets the hysteresis of the trigger to 10 dB.

[SENSe:]PMETer<p>:TRIGger:LEVel <Level>

Defines the trigger level for external power triggers.

Suffix:

<p> Power sensor index

Parameters:

<Level> -20 to +20 dBm
Range: -20 dBm to 20 dBm
*RST: -10 dBm
Default unit: DBM

Example:

PMET2:TRIG:LEV -10 dBm
Sets the level of the trigger

[SENSe:]PMETer<p>:TRIGger:SLOPe <Edge>

Selects the trigger condition for external power triggers.

Suffix:

<p> Power sensor index

Parameters:

<Edge> **POSitive**
The measurement starts in case the trigger signal shows a positive edge.
NEGative
The measurement starts in case the trigger signal shows a negative edge.
*RST: POSitive

Example:

PMET2:TRIG:SLOP NEG

[SENSe:]PMETer<p>:TRIGger[:STATe] <State>

Turns the external power trigger on and off.

Suffix:

<p> Power sensor index

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

PMET2:TRIG ON
 Switches the external power trigger on

10.4.2.6 External generator control

External generator control commands are available if the R&S FSV/A External Generator Control option (R&S FSV3-B10) is installed.

For each measurement channel, you can configure one external generator. To switch between different configurations, define multiple measurement channels.

For more information on external generator control, see the R&S FSV/A User Manual.

- [Measurement configuration](#).....176
- [Interface configuration](#).....180
- [Source calibration](#).....181

Measurement configuration

The following commands are required to activate external generator control and to configure a calibration measurement with an external tracking generator.

SOURce<si>:EXTernal<gen>:FREQuency	176
SOURce<si>:EXTernal<gen>:FREQuency:COUPling[:STATe]	177
SOURce<si>:EXTernal<gen>:FREQuency[:FACTor]:DENominator	177
SOURce<si>:EXTernal<gen>:FREQuency[:FACTor]:NUMerator	178
SOURce<si>:EXTernal<gen>:FREQuency:OFFSet	178
SOURce<si>:EXTernal<gen>:POWer[:LEVel]	179
SOURce<si>:EXTernal<gen>[:STATe]	179
SOURce<si>:POWer[:LEVel][:IMMediate]:OFFSet	179

SOURce<si>:EXTernal<gen>:FREQuency <Frequency>

Defines a fixed source frequency for the external generator.

Suffix:

<si> irrelevant

<gen>

Parameters:

<Frequency> Source frequency of the external generator.
 *RST: 1100050000
 Default unit: HZ

Example:

```
//Define frequency of the generator
SOUR:EXT:FREQ 10MHz
```

SOURce<si>:EXTernal<gen>:FREQuency:COUPling[:STATe] <State>

Couples the frequency of the external generator output to the R&S FSV/A.

Suffix:

<si> irrelevant

<gen>

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

Default setting: a series of frequencies is defined (one for each sweep point), based on the current frequency at the RF input of the R&S FSV/A. The RF frequency range covers the currently defined span of the R&S FSV/A (unless limited by the range of the signal generator).

OFF | 0

The generator uses a single fixed frequency, defined by [SOURce<si>:EXTernal<gen>:FREQuency](#).

*RST: 1

Example:

```
SOUR:EXT:FREQ:COUP ON
```

SOURce<si>:EXTernal<gen>:FREQuency[:FACTor]:DENominator <Value>

Defines the denominator of the factor with which the analyzer frequency is multiplied to obtain the transmit frequency of the selected generator.

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{Generator} = \left| F_{Analyzer} * \frac{Numerator}{Denominator} + F_{Offset} \right|$$

Suffix:

<si> irrelevant

<gen>

Parameters:

<Value> <numeric value>
 *RST: 1

Example:

//Define multiplication factor of 4/3; the transmit frequency of the generator is 4/3 times the analyzer frequency
 SOUR:EXT:FREQ:NUM 4
 SOUR:EXT:FREQ:DEN 3

SOURce<si>:EXTernal<gen>:FREQuency[:FACTor]:NUMerator <Value>

Defines the numerator of the factor with which the analyzer frequency is multiplied to obtain the transmit frequency of the selected generator.

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{Generator} = \left| F_{Analyzer} * \frac{Numerator}{Denominator} + F_{Offset} \right|$$

Suffix:

<si> irrelevant

<gen>

Parameters:

<Value> <numeric value>
 *RST: 1

Example:

//Define multiplication factor of 4/3; the transmit frequency of the generator is 4/3 times the analyzer frequency
 SOUR:EXT:FREQ:NUM 4
 SOUR:EXT:FREQ:DEN 3

SOURce<si>:EXTernal<gen>:FREQuency:OFFSet <Offset>

Defines the frequency offset of the generator with reference to the analyzer frequency.

Select the offset such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{Generator} = \left| F_{Analyzer} * \frac{Numerator}{Denominator} + F_{Offset} \right|$$

Suffix:

<si> irrelevant

<gen>

Parameters:

<Offset> <numeric value>, specified in Hz, kHz, MHz or GHz, rounded to the nearest Hz

*RST: 0 Hz

Default unit: HZ

Example:

//Define an offset between generator output frequency and analyzer frequency

SOUR:EXT:FREQ:OFFS 10HZ

SOURce<si>:EXTErnal<gen>:POWer[:LEVel] <Level>

Sets the output power of the selected generator.

Suffix:

<si> irrelevant

<gen>

Parameters:

<Level> <numeric value>

*RST: -20 dBm

Default unit: DBM

Example:

//Define generator output level

SOUR:EXT:POW -30dBm

SOURce<si>:EXTErnal<gen>[:STATe] <State>

Activates or deactivates the connected external generator.

Suffix:

<si> irrelevant

<gen>

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

SOURce<si>:POWer[:LEVel][:IMMEDIATE]:OFFSet <Offset>**Suffix:**

<si> irrelevant

Parameters:

<Offset> Range: -200 dB to +200 dB

*RST: 0dB

Default unit: DB

Example: `SOUR:POW:OFFS -10dB`

Interface configuration

The following commands are required to configure the interface for the connection to the external generator.

<code>SOURce<si>:EXTernal<gen>:ROSCillator[:SOURce]</code>	180
<code>SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTerface</code>	180
<code>SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE</code>	180
<code>SYSTem:COMMunicate:TCPIP:RDEvice:GENerator<gen>:ADDRess</code>	181

`SOURce<si>:EXTernal<gen>:ROSCillator[:SOURce]` <Source>

Controls selection of the reference oscillator for the external generator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Suffix:

<si>	irrelevant
<gen>	irrelevant

Parameters:

<Source>	INTernal Uses the internal reference.
	EXTernal Uses the external reference; if none is available, an error flag is displayed in the status bar.
*RST:	INT

Example: `//Select an external reference oscillator`
`SOUR:EXT:ROSC EXT`

`SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTerface` <Type>

Defines the interface used for the connection to the external generator.

Is only available if external generator control is active (see `SOURce<si>:EXTernal<gen>[:STATe]` on page 179).

Suffix:

<gen>

Parameters:

<Type> **TCPIP**

Example: `SYST:COMM:RDEV:GEN:INT TCP`

`SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE` <Type>

Selects the type of external generator.

For a list of the available generator types, see the specifications document.

Suffix:

<gen>

Parameters:

<Name> <Generator name as string value>
*RST: SMU02

Example:

```
//Select an external generator
SYST:COMM:RDEV:GEN:TYPE 'SMW06'
```

SYSTem:COMMunicate:TCPIP:RDEvice:GENerator<gen>:ADDRess <Address>

Configures the TCP/IP address for the external generator.

Suffix:

<gen>

Parameters:

<Address> TCP/IP address between 0.0.0.0 and 0.255.255.255
*RST: 0.0.0.0

Example:

```
SYST:COMM:TCP:RDEV:GEN:ADDR 130.094.122.195
```

Source calibration

The following commands are required to activate the calibration functions of the external tracking generator. However, they are only available if external generator control is active (see [SOURCE<si>:EXTernal<gen>\[:STATE\]](#) on page 179).

Useful commands for source calibration described elsewhere:

- [DISPlay\[:WINDOW<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:RPOSITION](#) on page 195
- [DISPlay\[:WINDOW<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:RVALue](#) on page 222

Remote commands exclusive to source calibration:

[SENSe:]CORRection:COLLEct[:ACQUIRE]	181
[SENSe:]CORRection:METHod	182
[SENSe:]CORRection:RECall	182
[SENSe:]CORRection[:STATE]	183
[SENSe:]CORRection:TRANsducer:GENerate	183

[SENSe:]CORRection:COLLEct[:ACQUIRE] <MeasType>

Initiates a reference measurement (calibration). The reference measurement is the basis for the measurement normalization. The result depends on whether a reflection measurement or transmission measurement is performed (see [\[SENSe:\]CORRection:METHod](#) on page 182).

To obtain a correct reference measurement, a complete sweep with synchronization to the end of the sweep must have been carried out. This is only possible in the single sweep mode.

Is only available if external generator control is active (see [SOURCE<si>:EXTERNAL<gen>\[:STATE\]](#) on page 179).

Setting parameters:

<MeasType> THROugh | OPEN

THROugh
"TRANsmission" mode: calibration with direct connection between generator and device input
"REFLection" mode: calibration with short circuit at the input

OPEN
only allowed in "REFLection" mode: calibration with open input

Example:

```
INIT:CONT OFF
Selects single sweep operation
CORR:METH TRAN
Selects a transmission measurement.
CORR:COLL THR;*WAI
Starts the measurement of reference data using direct connection between generator and device input and waits for the sweep end.
```

Usage: Setting only

[SENSe:]CORRection:METHod <Type>

Selects the type of measurement to be performed with the generator.

Is only available if external generator control is active (see [SOURCE<si>:EXTERNAL<gen>\[:STATE\]](#) on page 179).

Parameters:

<Type> **REFLection**
Selects reflection measurements.

TRANsmission
Selects transmission measurements.

*RST: TRANsmission

Example:

```
CORR:METH TRAN
Sets the type of measurement to "transmission".
```

[SENSe:]CORRection:RECall

Restores the measurement configuration used for calibration.

Is only available if external generator control is active (see [SOURCE<si>:EXTERNAL<gen>\[:STATE\]](#) on page 179).

Example: CORR:REC

[SENSe:]CORRection[:STATe] <State>

Turns correction of measurement results (normalization) on and off.

The command is available after you have created a reference trace for the selected measurement type with `[SENSe:]CORRection:COLLect[:ACQuire]` on page 181.

Is only available if external generator control is active (see `SOURce<si>:EXTernal<gen>[:STATe]` on page 179).

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 1

Example:

CORR ON
 Activates normalization.

[SENSe:]CORRection:TRANsducer:GENerate <Name>

Uses the normalized measurement data to generate a transducer factor with up to 1001 points. The trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix `.trd` under

`C:\Program Files\Rohde-Schwarz\FSV3000\<version>\trd`. The frequency points are allocated in equidistant steps between start and stop frequency.

The generated transducer factor can be further adapted using the commands described in the "Remote Commands > Configuring the R&S FSV/A > Working with Transducers" section in the R&S FSV/A User Manual.

Parameters:

<Name> '<name>'

Example:

CORR:TRAN:GEN 'MyGenerator'
 Creates the transducer file
`C:\r_s\instr\trd\MyGenerator.trd`.

10.4.3 Configuring the output

The following commands configure signal output.



Configuring trigger output is described in [Chapter 10.4.7.2, "Configuring the trigger output"](#), on page 206.

<code>DIAGnostic:SERVice:NSource</code>	184
<code>OUTPut:ADEMod[:ONLine][:STATe]</code>	184
<code>OUTPut:ADEMod[:ONLine]:SOURce</code>	184

OUTPut:ADEMod[:ONLine]:AF[:CFRequency]	185
OUTPut:ADEMod[:ONLine]:PHONes	185
SYSTem:SPEaker:VOLume	186

DIAGnostic:SERVice:NSOource <State>

Turns the 28 V supply of the BNC connector labeled [noise source control] on the R&S FSV/A on and off.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: DIAG:SERV:NSO ON

Manual operation: See "[Noise Source Control](#)" on page 79

OUTPut:ADEMod[:ONLine][:STATe] <State>

Enables or disables online demodulation output to the IF output connector on the rear panel of the R&S FSV/A.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: OUTP:ADEM ON

Manual operation: See "[Online Demodulation Output State](#)" on page 81

OUTPut:ADEMod[:ONLine]:SOURce <WindowName>

Selects the result display whose results are output. Only active time domain results can be selected.

Parameters:

<WindowName> <string>
 String containing the name of the window.
 By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the [LAYout:CATalog\[:WINDow\]? query](#).

FOCUS

Dynamically switches to the currently selected window. If a window is selected that does not contain a time-domain result display, the selection is ignored and the previous setting is maintained.

Example: `OUTP:ADEM:ONL:SOUR 'AnalogDemod'`
 `OR:`
 `DISP:WIND1:SEL`
 `OUTP:ADEM:SOUR FOC`

Manual operation: See "[Output Selection](#)" on page 81

OUTPut:ADEMod[:ONLine]:AF[:CFrequency] <Frequency>

Defines the cutoff frequency for the AC highpass filter (for AC coupling only, see [\[SENSe:\]ADEMod<n>:AF:COUPLing](#) on page 209).

Parameters:

<Frequency> numeric value
 Range: 10 Hz to DemodBW/10 (= 300 kHz for active demodulation output)
 *RST: 100 Hz
 Default unit: HZ

Example: `OUTP:ADEM:ONL:AF:CFR 100Hz`

Manual operation: See "[AC Cutoff Frequency](#)" on page 81

OUTPut:ADEMod[:ONLine]:PHONes <State>

In addition to sending the output to the IF output connector (on the rear panel of the R&S FSV/A), it can also be output to headphones connected on the front panel ([Phones] connector).

CAUTION: To protect your hearing, make sure that the volume setting is not too high before putting on the headphones.

If you do not hear output on the connected headphones despite having enabled both general online demod output [OUTPut:ADEMod\[:ONLine\] \[:STATe\]](#) on page 184 and this command, adjust the volume setting.

Parameters:

<State> `ON | OFF | 0 | 1`
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on

Example: `OUTP:ADEM:PHON ON`

Manual operation: See "[Phones Output](#)" on page 82

SYSTem:SPEaker:VOLume <Volume>

Defines the volume of the built-in loudspeaker for demodulated signals. This setting is maintained for all applications.

The command is available in the time domain in Spectrum mode and in Analog Modulation Analysis mode.

Parameters:

<Volume> Percentage of the maximum possible volume.
 Range: 0 to 1
 *RST: 0.5

Example:

SYST:SPE:VOL 0
 Switches the loudspeaker to mute.

10.4.4 Frequency settings

[SENSe:]FREQUENCY:CENTer.....	186
[SENSe:]FREQUENCY:CENTer:STEP.....	186
[SENSe:]FREQUENCY:CENTer:STEP:LINK.....	187
[SENSe:]FREQUENCY:CENTer:STEP:LINK:FACTor.....	187

[SENSe:]FREQUENCY:CENTer <Frequency>

Defines the center frequency.

Parameters:

<Frequency> For the allowed range and f_{max} , refer to the specifications document.
 *RST: $f_{max}/2$
 Default unit: Hz

Example:

FREQ:CENT 100 MHz
 FREQ:CENT:STEP 10 MHz
 FREQ:CENT UP
 Sets the center frequency to 110 MHz.

Manual operation: See "[Center Frequency](#)" on page 47

[SENSe:]FREQUENCY:CENTer:STEP <StepSize>

Defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the `SENS:FREQ UP` AND `SENS:FREQ DOWN` commands, see [\[SENSe:\]FREQUENCY:CENTer](#) on page 186.

Parameters:

<StepSize> For f_{max} , refer to the specifications document.
 Range: 1 to fMAX
 *RST: 0.1 x span
 Default unit: Hz

Example:

```
//Set the center frequency to 110 MHz.
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```

Manual operation: See "[Center Frequency Stepsize](#)" on page 47

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingType>

Couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType> SPAN | RBW | OFF

SPAN
 Couples the step size to the span. Available for measurements in the frequency domain.
 (for RF spectrum result display)

RBW
 Couples the step size to the resolution bandwidth. Available for measurements in the time domain.
 (for all result displays except RF spectrum)

OFF
 Decouples the step size.
 *RST: SPAN

Example:

```
//Couple step size to span
FREQ:CENT:STEP:LINK SPAN
```

Manual operation: See "[Center Frequency Stepsize](#)" on page 47

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <Factor>

Defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor> 1 to 100 PCT
 *RST: 10
 Default unit: PCT

Example:

```
//Couple frequency step size to span and define a step size factor
FREQ:CENT:STEP:LINK SPAN
FREQ:CENT:STEP:LINK:FACT 20PCT
```

Manual operation: See "Center Frequency Stepsize" on page 47

10.4.5 Configuring the vertical axis (amplitude, scaling)

The following commands are required to configure the amplitude and vertical axis settings in a remote environment.

- [Amplitude settings](#)..... 188
- [Configuring the attenuation](#)..... 190
- [Configuring a preamplifier](#)..... 192
- [Scaling the Y-axis](#)..... 193

10.4.5.1 Amplitude settings

Useful commands for amplitude configuration described elsewhere:

- [\[SENSe:\]ADJust:LEVel](#) on page 231

Remote commands exclusive to amplitude configuration:

CALCulate<n>:MARKer<m>:FUNction:REFerence	188
UNIT<n>:POWer	188
CALCulate<n>:UNIT:POWer	188
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel	189
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet	189

CALCulate<n>:MARKer<m>:FUNction:REFerence

Matches the reference level to the power level of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

`CALC:MARK2:FUNC:REF`

Sets the reference level to the level of marker 2.

UNIT<n>:POWer <Unit>

CALCulate<n>:UNIT:POWer <Unit>

Selects the power unit.

The unit applies to all power-based measurement windows with absolute values.

In addition, the unit of the reference level is adapted to the same unit.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
 DBUA | AMPere
 *RST: dBm

Example:

CALC:UNIT:POW DBM
 Sets the power unit to dBm.

Manual operation: See "[Unit](#)" on page 44

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel
 <ReferenceLevel>

Defines the reference level (for all traces in all windows).

With a reference level offset $\neq 0$, the value range of the reference level is modified by the offset.

Suffix:

<n> irrelevant
 <w> subwindow
 Not supported by all applications
 <t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.
 Range: see specifications document
 *RST: 0 dBm
 Default unit: DBM

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "[Reference Level](#)" on page 44

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet
 <Offset>

Defines a reference level offset (for all traces in all windows).

Suffix:

<n> irrelevant
 <w> subwindow
 Not supported by all applications
 <t> irrelevant

Parameters:

<Offset> Range: -200 dB to 200 dB
 *RST: 0dB
 Default unit: DB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Manual operation: See ["Shifting the Display \(Offset\)"](#) on page 44

10.4.5.2 Configuring the attenuation

INPut:ATTenuation	190
INPut:ATTenuation:AUTO	190
INPut:ATTenuation:AUTO:MODE	191
INPut:EATT	191
INPut:EATT:AUTO	191
INPut:EATT:STATe	192

INPut:ATTenuation <Attenuation>

Defines the total attenuation for RF input.

If an electronic attenuator is available and active, the command defines a mechanical attenuation (see [INPut:EATT:STATe](#) on page 192).

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Parameters:

<Attenuation>	Range: see specifications document
	Increment: 5 dB (with optional electr. attenuator: 1 dB)
	*RST: 10 dB (AUTO is set to ON)
	Default unit: DB

Example:

```
INP:ATT 30dB
```

Defines a 30 dB attenuation and decouples the attenuation from the reference level.

Manual operation: See ["Attenuation Mode / Value"](#) on page 45

INPut:ATTenuation:AUTO <State>

Couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the R&S FSV/A determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

Parameters:

<State>	ON OFF 0 1
	*RST: 1

Example:

```
INP:ATT:AUTO ON
```

Couples the attenuation to the reference level.

Manual operation: See ["Attenuation Mode / Value"](#) on page 45

INPut:ATTenuation:AUTO:MODE <OptMode>

Selects the priority for signal processing *after* the RF attenuation has been applied.

Parameters:

<OptMode> LNOise | LDISTortion

LNOise

Optimized for high sensitivity and low noise levels

LDISTortion

Optimized for low distortion by avoiding intermodulation

*RST: LDISTortion (WLAN application: LNOise)

Example:

INP:ATT:AUTO:MODE LNO

INPut:EATT <Attenuation>

Defines an electronic attenuation manually. Automatic mode must be switched off (INP:EATT:AUTO OFF, see [INPut:EATT:AUTO](#) on page 191).

If the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Requires the electronic attenuation hardware option.

Parameters:

<Attenuation> attenuation in dB

Range: see specifications document

Increment: 1 dB

*RST: 0 dB (OFF)

Default unit: DB

Example:

INP:EATT:AUTO OFF

INP:EATT 10 dB

Manual operation: See "[Using Electronic Attenuation](#)" on page 45

INPut:EATT:AUTO <State>

Turns automatic selection of the electronic attenuation on and off.

If on, electronic attenuation reduces the mechanical attenuation whenever possible.

Requires the electronic attenuation hardware option.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 1

Example:

INP:EATT:AUTO OFF

Manual operation: See ["Using Electronic Attenuation"](#) on page 45

INPut:EATT:STATe <State>

Turns the electronic attenuator on and off.

Requires the electronic attenuation hardware option.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example: INP:EATT:STAT ON
 Switches the electronic attenuator into the signal path.

Manual operation: See ["Using Electronic Attenuation"](#) on page 45

10.4.5.3 Configuring a preamplifier

INPut:EGAIN[:STATe].....	192
INPut:GAIN:STATe.....	193
INPut:GAIN[:VALue].....	193

INPut:EGAIN[:STATe] <State>

Before this command can be used, the external preamplifier must be connected to the R&S FSV/A. See the preamplifier's documentation for details.

When activated, the R&S FSV/A automatically compensates the magnitude and phase characteristics of the external preamplifier in the measurement results.

Note that when an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

When deactivated, no compensation is performed even if an external preamplifier remains connected.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 No data correction is performed based on the external preamplifier
 ON | 1
 Performs data corrections based on the external preamplifier
 *RST: 0

Example: INP:EGA ON

INPut:GAIN:STATe <State>

Turns the internal preamplifier on and off. It requires the optional preamplifier hardware.

For R&S FSV/A44 models, note the restrictions described in "Preamplifier" on page 46.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example: INP:GAIN:STAT ON
 INP:GAIN:VAL 15
 Switches on 15 dB preamplification.

Manual operation: See "Preamplifier" on page 46

INPut:GAIN[:VALue] <Gain>

Selects the "gain" if the preamplifier is activated (INP:GAIN:STAT ON, see INPut:GAIN:STATe on page 193).

The command requires the additional preamplifier hardware option.

For R&S FSV/A44 or higher models, note the restrictions described in "Preamplifier" on page 46.

Parameters:

<Gain> The following settings are available:
 15 dB and 30 dB
 All other values are rounded to the nearest of these two.
 Default unit: DB

Example: INP:GAIN:STAT ON
 INP:GAIN:VAL 30
 Switches on 30 dB preamplification.

Manual operation: See "Preamplifier" on page 46

10.4.5.4 Scaling the Y-axis

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe].....	194
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE.....	194
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE.....	194
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision.....	195
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition.....	195
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing.....	196

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe] <Range>

Defines the display range of the y-axis (for all traces).

Suffix:

<n>	Window
<w>	subwindow Not supported by all applications
<t>	irrelevant

Parameters:

<Range>	If the y-axis shows the power, the unit is dB with a range from 10 dB to 200 dB. If the y-axis shows the frequency, the unit is Hz with a variable range. *RST: 100 dB (frequency domain), 500 kHz (time domain)
---------	--

Example: DISP:TRAC:Y 110dB

Manual operation: See "Range" on page 72

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE

Automatic scaling of the y-axis is performed once, then switched off again (for all traces).

Suffix:

<n>	Window
<t>	irrelevant

Manual operation: See "Auto Scale Once" on page 72

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

Selects the type of scaling of the y-axis (for all traces).

When the display update during remote control is off, this command has no immediate effect.

Suffix:

<n>	Window
<w>	subwindow
<t>	irrelevant

Parameters:

<Mode>	ABSolute absolute scaling of the y-axis RELative relative scaling of the y-axis *RST: ABSolute
--------	--

Example: `DISP:TRAC:Y:MODE REL`

Manual operation: See "[Scaling](#)" on page 73

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision
<Value>

This remote command determines the grid spacing on the Y-axis for all diagrams, where possible.

In spectrum displays, for example, this command is not available.

Suffix:

<n> [Window](#)
 <w> subwindow
 Not supported by all applications
 <t> irrelevant

Parameters:

<Value> numeric value WITHOUT UNIT (unit according to the result display)
 Defines the range per division (total range = 10*[Value](#))
 *RST: depends on the result display
 Default unit: DBM

Example: `DISP:TRAC:Y:PDIV 10`
 Sets the grid spacing to 10 units (e.g. dB) per division

Manual operation: See "[Dev per Division/ dB per Division](#)" on page 70

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSITION
<Position>

Defines the vertical position of the reference level on the display grid (for all traces).

The R&S FSV/A adjusts the scaling of the y-axis accordingly.

For measurements with the optional external generator control, the command defines the position of the reference value.

Suffix:

<n> [Window](#)
 <w> subwindow
 Not supported by all applications
 <t> irrelevant

Parameters:

<Position> *RST: 100 PCT = AF spectrum display; 50 PCT = time display

Example: `DISP:TRAC:Y:RPOS 50PCT`

Manual operation: See "Reference Value Position" on page 70
See "Ref Level Position" on page 72

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing <ScalingType>

Selects the scaling of the y-axis (for all traces, <t> is irrelevant).

For AF spectrum displays, only the parameters "LINear" and "LOGarithmic" are permitted.

Suffix:

<n> Window
<w> subwindow
<t> Trace

Parameters:

<ScalingType> **LOGarithmic**
 Logarithmic scaling.
 LINear
 Linear scaling in %.
 LDB
 Linear scaling in the specified unit.
 PERCent
 Linear scaling in %.
 *RST: LOGarithmic

Example: DISP:TRAC:Y:SPAC LIN
 Selects linear scaling in %.

Manual operation: See "Deviation" on page 71
See "Scaling" on page 73

10.4.6 Configuring data acquisition

The following remote commands are required to configure which data is to be acquired and then demodulated in a remote environment.

[SENSe:]ADEMod:MTIME.....	197
[SENSe:]ADEMod:RLENgth.....	197
[SENSe:]ADEMod:SET.....	197
[SENSe:]ADEMod<n>:SPECtrum:Bandwidth[:RESolution].....	198
[SENSe:]ADEMod:SPECtrum:BWIDth[:RESolution].....	198
[SENSe:]ADEMod:SRATE.....	198
[SENSe:]BANDwidth:DEMod.....	198
[SENSe:]BWIDth:DEMod.....	198
[SENSe:]BANDwidth:DEMod:TYPE.....	199
[SENSe:]BWIDth:DEMod:TYPE.....	199

[SENSe:]BANDwidth[:RESolution].....	199
[SENSe:]SWEep:COUnt.....	199
[SENSe:]SWEep[:WINDow<n>]:POINts.....	200

[SENSe:]ADEMod:MTIME <Time>

Defines the measurement time for Analog Modulation Analysis.

Parameters:

<Time> *RST: 62.5us
 Default unit: S

Example: ADEM:MTIM 62.5us
 Sets the measurement time to 62.5 µs.

Manual operation: See "[Measurement Time \(AQT\)](#)" on page 55

[SENSe:]ADEMod:RLENGth

[SENSe:]ADEMod:SET <SampleRate>, <RecordLength>, <TriggerSource>,
 <TriggerSlope>, <OffsetSamples>, <NoOfMeas>

Configures the analog demodulator of the instrument.

Parameters:

<SampleRate> **numeric value**
 The frequency at which measurement values are taken from the A/D-converter and stored in I/Q memory.
 *RST: 8 MHz
 Default unit: HZ

<RecordLength> Number of samples to be stored in I/Q memory.
 Range: 1 to 400001 with AF filter or AF trigger active, 1 to 480001 with both AF filter and AF trigger deactive
 *RST: 501)

<TriggerSource> **Note:** After selecting IF Power, the trigger threshold can be set with the [TRIGger\[:SEQuence\]:LEVel:IFPower](#) command.
 *RST: IMMEDIATE

<TriggerSlope> POSitive | NEGative
 Used slope of the trigger signal.
 The value indicated here will be ignored for <trigger source> = IMMEDIATE.
 *RST: POSitive

<OffsetSamples> Number of samples to be used as an offset to the trigger signal.
 The value indicated here is ignored for <trigger source> = "IMMEDIATE".
 *RST: 0

<NoOfMeas> Number of repetitions of the measurement to be executed. The value indicated here is especially necessary for the average/maxhold/minhold function.

Range: 0 to 32767

*RST: 0

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30

Performs a measurement at:

sample rate = 8 MHz

record length = 32000

trigger source = EXTERNAL

trigger slope = POSITIVE

offset samples = -500 (500 samples before trigger occurred)

of meas = 30

[SENSe:]ADEMod<n>:SPECtrum:BANDwidth[:RESolution] <Bandwidth>

[SENSe:]ADEMod:SPECtrum:BWIDth[:RESolution] <Bandwidth>

Defines the resolution bandwidth for data acquisition.

From the specified RBW and the demodulation span set by [SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum] on page 216 or [SENSe:]BWIDth:DEMod on page 198, the required measurement time is calculated. If the available measurement time is not sufficient for the given bandwidth, the measurement time is set to its maximum and the resolution bandwidth is increased to the resulting bandwidth.

Is identical to SENS:BAND:RES, see the R&S FSV/A User Manual.

Parameters:

<Bandwidth> Refer to specifications document.

*RST: 61.2 kHz

Default unit: HZ

Example:

ADEM:SPEC:BAND 61.2kHz

Sets the resolution bandwidth to 61.2 kHz.

[SENSe:]ADEMod:SRATe

[SENSe:]BANDwidth:DEMod <Bandwidth>

[SENSe:]BWIDth:DEMod <Bandwidth>

Sets the bandwidth for Analog Modulation Analysis. Depending on the selected demodulation bandwidth, the instrument selects the required sample rate.

Is identical to SENS:ADEM:BAND:DEM.

Parameters:

<Bandwidth> *RST: 5 MHz

Default unit: HZ

Example:

BAND:DEM 1MHz

Sets demodulation bandwidth to 1 MHz

Manual operation: See "[Demodulation Bandwidth](#)" on page 55

[SENSe:]BANDwidth:DEMod:TYPE <FilterType>

[SENSe:]BWIDth:DEMod:TYPE <FilterType>

Defines the type of demodulation filter to be used.

Is identical to `SENS:ADEM:BAND:DEM:TYPE`:

Parameters:

<FilterType>

FLAT

Standard flat demodulation filter

GAUSS

Gaussian filter for optimized settling behavior

*RST: FLAT

Manual operation: See "[Demodulation Filter](#)" on page 55

[SENSe:]BANDwidth[:RESolution] <Bandwidth>

Defines the resolution bandwidth and decouples the resolution bandwidth from the span.

For statistics measurements, this command defines the **demodulation** bandwidth.

The 6 MHz Gaussian filter is provided for special measurements, such as 5G NR spurious emissions measurements. It is only available if you enter the value manually, not using the `BAND:RES MAX` command. It is not supported by all applications.

Parameters:

<Bandwidth>

refer to specifications document

*RST: RBW: AUTO is set to ON; DBW: 3MHz

Default unit: Hz

Example:

`BAND 1 MHz`

Sets the resolution bandwidth to 1 MHz

Manual operation: See "[Resolution Bandwidth](#)" on page 55

[SENSe:]SWEep:COUNT <SweepCount>

Defines the number of sweeps that the application uses to average traces.

In continuous sweep mode, the application calculates the moving average over the average count.

In single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

Parameters:

<SweepCount>

When you set a sweep count of 0 or 1, the R&S FSV/A performs one single sweep in single sweep mode.

In continuous sweep mode, if the sweep count is set to 0, a moving average over 10 sweeps is performed.

Range: 0 to 200000

*RST: 0

Example:

SWE:COUN 64

Sets the number of sweeps to 64.

INIT:CONT OFF

Switches to single sweep mode.

INIT;*WAI

Starts a sweep and waits for its end.

Manual operation: See "[Sweep/Average Count](#)" on page 58**[SENSe:]SWEep[:WINDow<n>]:POINTs**

This command defines the number of sweep points to analyze after a sweep.

Suffix:

<n>

Example:

SWE:POIN 251

Manual operation: See "[Sweep Points](#)" on page 57

10.4.7 Triggering

The following remote commands are required to configure a triggered measurement in a remote environment.



*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

- [Configuring the triggering conditions](#).....200
- [Configuring the trigger output](#).....206

10.4.7.1 Configuring the triggering conditions

The following commands are required to configure a triggered measurement.

TRIGger[:SEQuence]:DTIME	201
TRIGger[:SEQuence]:HOLDoff[:TIME]	201
TRIGger[:SEQuence]:IFPower:HOLDoff	201
TRIGger[:SEQuence]:IFPower:HYSTeresis	202
TRIGger[:SEQuence]:LEVel[:EXTernal<port>]	202
TRIGger[:SEQuence]:LEVel:IFPower	203

TRIGger[:SEquence]:LEVel:IQPower.....	203
TRIGger[:SEquence]:LEVel:AM:RELative.....	203
TRIGger[:SEquence]:LEVel:AM[:ABSolute].....	203
TRIGger[:SEquence]:LEVel:FM.....	204
TRIGger[:SEquence]:LEVel:PM.....	204
TRIGger[:SEquence]:SLOPe.....	204
TRIGger[:SEquence]:SOURce.....	205
TRIGger[:SEquence]:TIME:RINTerval.....	206

TRIGger[:SEquence]:DTIME <DropoutTime>

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

Parameters:

<DropoutTime> Dropout time of the trigger.
 Range: 0 s to 10.0 s
 *RST: 0 s
 Default unit: S

Manual operation: See "[Drop-Out Time](#)" on page 51

TRIGger[:SEquence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the sweep.

Parameters:

<Offset> *RST: 0 s
 Default unit: S

Example: TRIG:HOLD 500us

Manual operation: See "[Trigger Offset](#)" on page 51

TRIGger[:SEquence]:IFPower:HOLDoff <Period>

Defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FSV/A ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

Parameters:

<Period> Range: 0 s to 10 s
 *RST: 0 s
 Default unit: S

Example: TRIG:SOUR EXT
Sets an external trigger source.
TRIG:IFP:HOLD 200 ns
Sets the holding time to 200 ns.

Manual operation: See ["Trigger Holdoff"](#) on page 52

TRIGger[:SEQuence]:IFPower:HYSTeresis <Hysteresis>

Defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

Parameters:

<Hysteresis> Range: 3 dB to 50 dB
 *RST: 3 dB
 Default unit: DB

Example: TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.

Manual operation: See ["Hysteresis"](#) on page 51

TRIGger[:SEQuence]:LEVel[:EXTernal<port>] <TriggerLevel>

Defines the level the external signal must exceed to cause a trigger event.

Note that the variable "Input/Output" connectors (ports 2+3) must be set for use as input using the [OUTPut:TRIGger<tp>:DIRection](#) command.

Suffix:

<port> Selects the trigger port.
 1 = trigger port 1 (TRIGGER INPUT connector on front panel)
 2 = trigger port 2 (TRIGGER INPUT/OUTPUT connector on front panel)
 3 = trigger port 3 (TRIGGER3 INPUT/OUTPUT connector on rear panel)

<port> Selects the trigger port.
 1 = trigger port 1 (TRIG IN connector on rear panel)
 2 = trigger port 2 (TRIG AUX connector on rear panel)

Parameters:

<TriggerLevel> Range: 0.5 V to 3.5 V
 *RST: 1.4 V
 Default unit: V

Example: TRIG:LEV 2V

Manual operation: See ["Trigger Level"](#) on page 50

TRIGger[:SEQuence]:LEVel:IFPower <TriggerLevel>

Defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths, see the specifications document.

*RST: -20 dBm

Default unit: DBM

Example: TRIG:LEV:IFP -30DBM

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQuence]:LEVel:IQPower <TriggerLevel>

Defines the magnitude the I/Q data must exceed to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> Range: -130 dBm to 30 dBm

*RST: -20 dBm

Default unit: DBM

Example: TRIG:LEV:IQP -30DBM

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQuence]:LEVel:AM:RELative <Level>

The command sets the level when AM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

Parameters:

<Level> Range: -100 to +100

*RST: 0 %

Default unit: %

Example: TRIG:LEV:AM:REL -20 %

Sets the AM trigger threshold to -20 %

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQuence]:LEVel:AM[:ABSolute] <Level>

The command sets the level when RF power signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

Parameters:

<Level> Range: -100 to +30
 *RST: -20 dBm
 Default unit: dBm

Example:

TRIG:LEV:AM -30 dBm
 Sets the RF power signal trigger threshold to -30 dBm

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQUence]:LEVEL:FM <Level>

The command sets the level when FM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

Parameters:

<Level> Range: -10 to +10
 *RST: 0 Hz
 Default unit: MHz

Example:

TRIG:LEV:FM 10 kHz
 Sets the FM trigger threshold to 10 kHz

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQUence]:LEVEL:PM <Level>

The command sets the level when PM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

Parameters:

<Level> Range: -1000 to +1000
 *RST: 0 RAD
 Default unit: RAD | DEG

Example:

TRIG:LEV:PM 1.2 RAD
 Sets the PM trigger threshold to 1.2 rad

Manual operation: See "[Trigger Level](#)" on page 50

TRIGger[:SEQUence]:SLOPe <Type>

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Parameters:

<Type> POSitive | NEGative

POSitive

Triggers when the signal rises to the trigger level (rising edge).

NEGative

Triggers when the signal drops to the trigger level (falling edge).

*RST: POSitive

Example: TRIG:SLOP NEG

Manual operation: See "[Slope](#)" on page 51

TRIGger[:SEquence]:SOURce <Source>

Selects the trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal. For details on trigger sources, see "[Trigger Source](#)" on page 49.

Note on external triggers:

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure that this situation is avoided in your remote control programs.

Parameters:

<Source>

IMMediate

Free Run

EXTernal

Trigger signal from the "Trigger Input" connector.

Trigger signal from the "Trigger In" connector.

If power splitter mode is active, this parameter activates the "EXT TRIGGER INPUT" connector on the oscilloscope. Then the R&S FSV/A triggers when the signal fed into the "EXT TRIGGER INPUT" connector on the oscilloscope meets or exceeds the specified trigger level.

EXT2

Trigger signal from the "Trigger Input/Output" connector.

Note: Connector must be configured for "Input".

Trigger signal from the "Trigger AUX" connector.

RFPower

First intermediate frequency

(Frequency and time domain measurements only.)

IFPower

Second intermediate frequency

IQPower

Magnitude of sampled I/Q data

For applications that process I/Q data, such as the I/Q Analyzer or optional applications.

TIME

Time interval

PSEN

External power sensor

AF

AF power signal

FM

FM power signal

AM

corresponds to the RF power signal

AMRelative

corresponds to the AM signal

PM

PM power signal

*RST: IMMEDIATE

Example:

TRIG:SOUR EXT

Selects the external trigger input as source of the trigger signal

Manual operation:See ["Trigger Source"](#) on page 49See ["Free Run"](#) on page 49See ["External Trigger 1/2"](#) on page 49See ["IF Power"](#) on page 49See ["FM \(Offline\) / AM \(Offline\) / PM \(Offline\) / RF \(Offline\)"](#)
on page 50See ["Time"](#) on page 50See ["Power Sensor"](#) on page 50**TRIGger[:SEQUence]:TIME:RINTerval <Interval>**

Defines the repetition interval for the time trigger.

Parameters:

<Interval>

numeric value

Range: 1 us to 15 s

*RST: 10 ms

Default unit: S

Example:

TRIG:SOUR TIME

Selects the time trigger input for triggering.

TRIG:TIME:RINT 5

The sweep starts every 5 s.

Manual operation:See ["Repetition Interval"](#) on page 51**10.4.7.2 Configuring the trigger output**

The following commands are required to send the trigger signal to one of the variable "TRIGGER INPUT/OUTPUT" connectors on the R&S FSV/A.

<code>OUTPut:TRIGger<tp>:DIRection</code>	207
<code>OUTPut:TRIGger<tp>:LEVel</code>	207
<code>OUTPut:TRIGger<tp>:OTYPe</code>	207
<code>OUTPut:TRIGger<tp>:PULSe:IMMediate</code>	208
<code>OUTPut:TRIGger<tp>:PULSe:LENGth</code>	208

`OUTPut:TRIGger<tp>:DIRection` <Direction>

Selects the trigger direction for trigger ports that serve as an input as well as an output.

Suffix:

<tp>

Parameters:

<Direction> INPut | OUTPut

INPut

Port works as an input.

OUTPut

Port works as an output.

*RST: INPut

Manual operation: See "[Trigger 1/2](#)" on page 52

`OUTPut:TRIGger<tp>:LEVel` <Level>

Defines the level of the (TTL compatible) signal generated at the trigger output.

Works only if you have selected a user-defined output with `OUTPut:TRIGger<tp>:OTYPe`.

Suffix:

<tp>

1..n

Selects the trigger port to which the output is sent.

2 = trigger port 2 (front)

3 = trigger port 3 (rear)

2 = Trigger 2 Input / Output

Parameters:

<Level>

HIGH

5 V

LOW

0 V

*RST: LOW

Example: `OUTP:TRIG2:LEV HIGH`

Manual operation: See "[Level](#)" on page 53

`OUTPut:TRIGger<tp>:OTYPe` <OutputType>

Selects the type of signal generated at the trigger output.

Note: For offline AF or RF triggers, no output signal is provided.

Suffix:

<tp> 1..n
 Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 3 = trigger port 3 (rear)
 2 = Trigger 2 Input / Output

Parameters:

<OutputType>

DEvice

Sends a trigger signal when the R&S FSV/A has triggered internally.

TARMed

Sends a trigger signal when the trigger is armed and ready for an external trigger event.

UDEFined

Sends a user-defined trigger signal. For more information, see [OUTPut:TRIGger<tp>:LEVel](#).

*RST: DEvice

Manual operation: See "[Output Type](#)" on page 53

OUTPut:TRIGger<tp>:PULSe:IMMediate

Generates a pulse at the trigger output.

Suffix:

<tp> 1..n
 Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 3 = trigger port 3 (rear)
 2 = Trigger 2 Input / Output

Manual operation: See "[Send Trigger](#)" on page 54

OUTPut:TRIGger<tp>:PULSe:LENGth <Length>

Defines the length of the pulse generated at the trigger output.

Suffix:

<tp> Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 3 = trigger port 3 (rear)
 2 = Trigger 2 Input / Output

Parameters:

<Length> Pulse length in seconds.
 Default unit: S

Example: `OUTP:TRIG2:PULS:LENG 0.02`

Manual operation: See "Pulse Length" on page 53

10.4.8 Configuring demodulation

The following remote commands are required to configure the demodulation parameters in a remote environment. The tasks for manual operation are described in [Chapter 5.7, "Demodulation"](#), on page 59.

• Basic demodulation settings	209
• Time domain zoom settings	212
• Configuring the demodulation spectrum	214
• (Post-processing) AF filters	216
• Defining the scaling and units	221
• Scaling for AF evaluation	221
• Scaling for RF evaluation	222
• Units	222
• Relative demodulation results	223
• Settling time	226

10.4.8.1 Basic demodulation settings

The basic demodulation measurement parameters define how the measurement is performed.

Useful commands described elsewhere:

- [Chapter 10.4.8.2, "Time domain zoom settings"](#), on page 212

Basic demodulation commands:

[SENSe:]ADEMod<n>:AF:COUPling	209
[SENSe:]ADEMod:PM:RPOint[:X]	210
[SENSe:]ADEMod:PM:RPOint[:X]:MODE	210
[SENSe:]ADEMod:SQUelch[:STATe]	210
[SENSe:]ADEMod:SQUelch:LEVel	211
CALCulate<n>:FORMat	211

[SENSe:]ADEMod<n>:AF:COUPling <Coupling>

Selects the coupling of the AF path of the analyzer in the specified window.

Suffix:

<n> irrelevant

Parameters:

<Coupling> AC | DC
*RST: AC (PM); DC (FM)

Example:

ADEM:AF:COUP DC
Switches on DC coupling.

Manual operation: See "AF Coupling" on page 61

[SENSe:]ADEMod:PM:RPOint[:X] <Time>

Determines the position where the phase of the PM-demodulated signal is set to 0 rad. The maximum value depends on the measurement time selected in the instrument; this value is output in response to the query `ADEMod:PM:RPO:X? MAX`.

Parameters:

<Time> 0 s to measurement time
 *RST: 0 s
 Default unit: S

Example:

`ADEMod:PM:RPO 500us`

Sets the position where the phase to 0 rad setting to 500 µs.

Manual operation:

See "[Zero Phase Reference Position \(PM Time Domain only\)](#)" on page 62

[SENSe:]ADEMod:PM:RPOint[:X]:MODE <Mode>

Defines how the reference position in time for 0 rad is determined.

Parameters:

<Mode> MANual | RIGHT

MANual

The time is defined using `[SENSe:]ADEMod:PM:RPOint[:X]` on page 210.

RIGHT

The time of the last measured value is used as the reference position. The time of the last measured value corresponds to the acquisition time, regarding the trigger event and trigger offset, if applicable. If the acquisition time or the trigger values are changed, the reference position is automatically adapted.

*RST: MANual

Example:

`ADEMod:MTIM 500us`

`ADEMod:PM:RPO:MODE RIGHT`

Sets the position of the 0 rad phase setting to 500 µs.

Manual operation:

See "[Zero Phase Reference Position \(PM Time Domain only\)](#)" on page 62

[SENSe:]ADEMod:SQUelch[:STATe] <State>

Activates the squelch function, i.e. if the signal falls below a defined threshold (see `[SENSe:]ADEMod:SQUelch:LEVel` on page 211), the demodulated data is automatically set to 0.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: DEM:SQU ON
Signals below the level threshold are squelched.

Manual operation: See "[Squelch State](#)" on page 60

[SENSe:]ADEMod:SQUelch:LEVel <Threshold>

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled (see [\[SENSe:\]ADEMod:SQUelch\[:STATe\]](#) on page 210).

Parameters:

<Threshold> numeric value
The absolute threshold level
Range: -150 dBm to 30 dBm
*RST: -40 dBm

Example: DEM:SQU:LEV -80
If the signal drops below -80 dBm, the demodulated data is set to 0.

Manual operation: See "[Squelch Level](#)" on page 60

CALCulate<n>:FORMat <Evaluation>

This command activates/deactivates the phase wrap for the specified PM time domain display with DC coupling.

Suffix:

<n> 1..n

Parameters:

<Evaluation> **PHAS**
The phase is wrapped.
UPH
The phase is not wrapped.
*RST: UPH

Example: LAY:ADD? '1',BEL,'XTIM:PM'
Activates PM time domain display. Result: window '2'
INP:COUP DC
Selects DC coupling.
CALC2:FORM PHAS
Selects a wrapped phase display in the PM time domain window.

Manual operation: See "[Phase Wrap On/Off \(PM Time Domain only\)](#)" on page 62

10.4.8.2 Time domain zoom settings

Using the time domain zoom, the demodulated data for a particular time span is extracted and displayed in more detail.

[SENSe:]ADEMod<n>:ZOOM:LENGth.....	212
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE.....	212
[SENSe:]ADEMod<n>:ZOOM:START.....	213
[SENSe:]ADEMod<n>:ZOOM[:STATe].....	213

[SENSe:]ADEMod<n>:ZOOM:LENGth <Length>

The command allows you to define the length of the time domain zoom area for the analog-demodulated measurement data in the specified window manually. If the length is defined manually using this command, the zoom mode is also set to manual.

Suffix:

<n> [Window](#)

Parameters:

<Length> *RST: sweep time
 Default unit: S
 Length of the zoom area in seconds.

Example:

ADEM:ZOOM:LENG 2s
 Zoom mode is set to manual and the zoom length to 2 seconds.

Manual operation: See "[Length](#)" on page 62

[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE <Mode>

The command defines whether the length of the zoom area for the analog-demodulated measurement data is defined automatically or manually in the specified window.

Suffix:

<n> [Window](#)

Parameters:

<Mode> AUTO | MAN
AUTO
 (Default:) The number of sweep points is used as the zoom length.
MAN
 The zoom length is defined manually using [SENSe:]ADEMod<n>:ZOOM:LENGth.
 *RST: AUTO

Example:

ADEM:ZOOM:LENG:MODE MAN
 Zoom function uses the length defined manually.

Manual operation: See "[Length](#)" on page 62

[SENSe:]ADEMod<n>:ZOOM:STARt <Time>

The command selects the start time for the zoomed display of analog-demodulated measurements in the specified window. The maximum value depends on the measurement time, which is set and can be queried with the [\[SENSe:\]ADEMod:MTIME](#) command.

If the zoom function is enabled, the defined number of sweep points are displayed from the start time specified with this command.

Suffix:

<n> [Window](#)

Parameters:

<Time> Range: 0 s to (measurement time – zoom length)
 *RST: 0 s
 Default unit: S

Example:

```
ADEM:ZOOM:STAT ON
Switches on the zoom function
ADEM:ZOOM:STAR 500us
Sets the starting point of the display to 500 µs.
```

Manual operation: See ["Start"](#) on page 62

[SENSe:]ADEMod<n>:ZOOM[:STATe] <State>

The command enables or disables the time domain zoom function for the analog-demodulated measurement data in the specified window.

If the zoom function is enabled, the defined number of sweep points are displayed from the start time specified with [\[SENSe:\]ADEMod<n>:ZOOM:STARt](#) on page 213.

If the zoom function is disabled, data reduction is used to adapt the measurement points to the number of points available on the display.

Suffix:

<n> [Window](#)

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on

Example:

```
ADEM:ZOOM ON
Switches on the zoom function
```

Manual operation: See ["State"](#) on page 61

10.4.8.3 Configuring the demodulation spectrum

The demodulation spectrum defines which span of the demodulated data is evaluated.

- [AF evaluation](#).....214
- [RF evaluation](#).....215

AF evaluation

These settings are only available for AF Spectrum evaluations, not in the time domain.

[SENSe:]ADEMod:AF:CENTer	214
[SENSe:]ADEMod:AF:SPAN	214
[SENSe:]ADEMod:AF:SPAN:FULL	214
[SENSe:]ADEMod:AF:START	215
[SENSe:]ADEMod:AF:STOP	215

[SENSe:]ADEMod:AF:CENTer <Frequency>

Sets the center frequency for AF spectrum result display.

Parameters:

<Frequency> *RST: 1.25 MHz
 Default unit: HZ

Manual operation: See "[AF Center](#)" on page 63

[SENSe:]ADEMod:AF:SPAN

Sets the span (around the center frequency) for AF spectrum result display.

The span is limited to DBW/2 (see [\[SENSe:\]BWIDth:DEMod](#) on page 198).

Parameters:

 *RST: 9 MHz
 Default unit: HZ

Example: ADEM:AF:SPAN 200 kHz
 Sets the AF span to 200 kHz

Manual operation: See "[AF Span](#)" on page 64

[SENSe:]ADEMod:AF:SPAN:FULL

Sets the maximum span for AF spectrum result display.

The maximum span corresponds to DBW/2 (see [\[SENSe:\]BWIDth:DEMod](#) on page 198).

Example:

ADEM:BAND 5 MHz
Sets the demodulation bandwidth to 5 MHz
ADEM:AF:SPAN:FULL
Sets the AF span to 2.5 MHz

Manual operation: See "[AF Full Span](#)" on page 64

[SENSe:]ADEMod:AF:STARt <Frequency>

Sets the start frequency for AF spectrum result display.

Parameters:

<Frequency> *RST: 0 MHz
 Default unit: HZ

Example:

ADEM:AF:STAR 0 kHz
 Sets the AF start frequency to 0 kHz
 ADEM:AF:STOP 500 kHz
 Sets the AF stop frequency to 500 kHz

Manual operation: See "[AF Start](#)" on page 63

[SENSe:]ADEMod:AF:STOP <Frequency>

Sets the stop frequency for AF spectrum result display.

Parameters:

<Frequency> *RST: 9 MHz
 Default unit: HZ

Example:

ADEM:AF:STAR 0 kHz
 Sets the AF start frequency to 0 kHz
 ADEM:AF:STOP 500 kHz
 Sets the AF stop frequency to 500 kHz

Manual operation: See "[AF Stop](#)" on page 64

RF evaluation

These settings are only available for RF evaluation, both in time and frequency domain.

Useful commands described elsewhere

- [\[SENSe:\]FREQuency:CENTer](#) on page 186
- [\[SENSe:\]BWIDth:DEMod](#) on page 198

Specific commands:

[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM	215
[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum]	216

[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM

Sets the span (around the center frequency) for RF spectrum result display.

The span is limited to the demodulation bandwidth (see [\[SENSe:\]BWIDth:DEMod](#) on page 198).

Parameters:

 *RST: 5 MHz
 Default unit: HZ

Example: ADEM:SPEC:SPAN:ZOOM 200 kHz
Sets the rF span to 200 kHz

Manual operation: See "[Span](#)" on page 65

[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum] <FreqRange>

Sets the DBW to the specified value and the span (around the center frequency) of the RF data to be evaluated to its new maximum (the demodulation bandwidth).

Parameters:

<FreqRange> *RST: 5 MHz
Default unit: Hz

Manual operation: See "[Span](#)" on page 65
See "[RF Full Span](#)" on page 65

10.4.8.4 (Post-processing) AF filters

The AF filter reduces the evaluated bandwidth of the demodulated signal and can define a weighting function. AF filters are only available for AM or FM time domain evaluations.

[SENSe:]FILTer<n>:AWEighted[:STATe].....	216
[SENSe:]FILTer<n>:AOFF.....	217
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe].....	217
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe].....	217
[SENSe:]FILTer<n>:CCIT[:STATe].....	218
[SENSe:]FILTer<n>:DEMPHasis:TCONstant.....	218
[SENSe:]FILTer<n>:DEMPHasis[:STATe].....	218
[SENSe:]FILTer<n>:HPASs:FREQuency[:ABSolute].....	219
[SENSe:]FILTer<n>:HPASs:FREQuency:MANual.....	219
[SENSe:]FILTer<n>:HPASs[:STATe].....	219
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute].....	220
[SENSe:]FILTer<n>:LPASs:FREQuency:MANual.....	220
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative.....	220
[SENSe:]FILTer<n>:LPASs[:STATe].....	221

[SENSe:]FILTer<n>:AWEighted[:STATe] <State>

Activates/deactivates the "A" weighting filter for the specified evaluation.

For details on weighting filters, see "[Weighting](#)" on page 68.

Suffix:

<n> [Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off

ON | 1

Switches the function on

Example:

FILT:AWE ON

Activates the A weighting filter.

Manual operation: See ["Weighting"](#) on page 68**[SENSe:]FILTer<n>:AOFF****Suffix:**

<n> 1..n

Manual operation: See ["Deactivating all AF Filters"](#) on page 69**[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATE] <State>**

Activates/deactivates the weighted CCIR filter for the specified evaluation.

For details on weighting filters, see ["Weighting"](#) on page 68.**Suffix:**<n> [Window](#)**Parameters:**

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

FILT:CCIR:WEIG ON

Activates the weighted CCIR filter.

Manual operation: See ["Weighting"](#) on page 68**[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATE] <State>**

Activates/deactivates the unweighted CCIR filter in the specified window.

For details on weighting filters, see ["Weighting"](#) on page 68.**Suffix:**<n> [Window](#)**Parameters:**

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: `FILT:CCIR:UNW ON`
Activates the unweighted CCIR filter.

Manual operation: See ["Weighting"](#) on page 68

[SENSe:]FILTer<n>:CCITt[:STATe] <State>

Suffix:
<n> 1..n

Parameters:
<State>

Manual operation: See ["Weighting"](#) on page 68

[SENSe:]FILTer<n>:DEMPHasis:TCONstant <Value>

Selects the deemphasis for the specified evaluation.

For details on deemphasis refer to ["Deemphasis"](#) on page 68.

Suffix:
<n> [Window](#)

Parameters:
<Value> 25 us | 50 us | 75 us | 750 us
*RST: 50 us
Default unit: S

Example: `FILT:DEMP:TCON 750us`
Selects the deemphasis for the demodulation bandwidth range from 800 Hz to 4 MHz with a time constant of 750 µs.

Manual operation: See ["Deemphasis"](#) on page 68

[SENSe:]FILTer<n>:DEMPHasis[:STATe] <State>

Activates/deactivates the selected deemphasis for the specified evaluation.

For details about deemphasis refer to ["Deemphasis"](#) on page 68.

Suffix:
<n> [Window](#)

Parameters:
<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on

Example: `FILT:DEMP ON`
Activates the selected deemphasis.

Manual operation: See ["Deemphasis"](#) on page 68

[SENSe:]FILTeR<n>:HPASs:FREQuency[:ABSolute] <Frequency>

Selects the high pass filter type for the specified evaluation.

For details on the high pass filters, refer to ["High Pass"](#) on page 66.

Suffix:

<n> [Window](#)

Parameters:

<Frequency> 20 Hz | 50 Hz | 300 Hz
 *RST: 300Hz
 Default unit: Hz

Example:

`FILT:HPAS:FREQ 300Hz`

Selects the high pass filter for the demodulation bandwidth range from 800 Hz to 8 MHz.

Manual operation: See ["High Pass"](#) on page 66

[SENSe:]FILTeR<n>:HPASs:FREQuency:MANual <Frequency>

Selects the cutoff frequency of the high pass filter for the specified evaluation.

For details on the high pass filters, refer to ["High Pass"](#) on page 66.

Suffix:

<n> [Window](#)

Parameters:

<Frequency> numeric value
 Range: 0 to 3 MHz
 *RST: 15kHz
 Default unit: HZ

Example:

`FILT:HPAS:FREQ:MAN 3MHz`

The AF results are restricted to frequencies lower than 3 MHz.

Manual operation: See ["High Pass"](#) on page 66

[SENSe:]FILTeR<n>:HPASs[:STATe] <State>

Activates/deactivates the selected high pass filter for the specified evaluation.

For details on the high pass filter, refer to ["High Pass"](#) on page 66.

Suffix:

<n> [Window](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: `FILT:HPAS ON`
Activates the selected high pass filter.

Manual operation: See "[High Pass](#)" on page 66

[SENSe:]FILTer<n>:LPASs:FREQUency[:ABSolute] <Frequency>

Selects the absolute low pass filter type for the specified evaluation

For details on the low pass filter, refer to "[Low Pass](#)" on page 67.**Suffix:**<n> [Window](#)**Parameters:**

<Frequency> 3kHz | 15kHz | 150kHz
*RST: 15kHz
Default unit: HZ

Example: `FILT:LPAS:FREQ 150kHz`
Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

Manual operation: See "[Low Pass](#)" on page 67

[SENSe:]FILTer<n>:LPASs:FREQUency:MANual <Frequency>

Selects the cutoff frequency of the low pass filter for the specified evaluation.

For details on the low pass filter, refer to "[Low Pass](#)" on page 67.**Suffix:**<n> [Window](#)**Parameters:**

<Frequency> numeric value
Range: 0 to 3 MHz
*RST: 15kHz
Default unit: HZ

Example: `FILT:LPAS:FREQ:MAN 150kHz`
The AF results are restricted to frequencies lower than 150 kHz.

Manual operation: See "[Low Pass](#)" on page 67

[SENSe:]FILTer<n>:LPASs:FREQUency:RELative <Frequency>

Selects the relative low pass filter type for the specified evaluation

For details on the low pass filter, refer to "Low Pass" on page 67.

Suffix:

<n> [Window](#)

Parameters:

<Frequency> 5PCT | 10PCT | 25PCT
 *RST: 25PCT
 Default unit: PCT

Example:

```
FILT:LPAS:FREQ:REL 25PCT
```

Selects the low pass filter as 25 % of the demodulation bandwidth.

Manual operation: See "Low Pass" on page 67

[SENSe:]FILTER<n>:LPASs[:STATe] <State>

Activates/deactivates the selected low pass filter for the specified evaluation.

For details on the low pass filter, refer to "Low Pass" on page 67.

Suffix:

<n> [Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

```
FILT:LPAS ON
```

Activates the selected low pass filter.

Manual operation: See "Low Pass" on page 67

10.4.8.5 Defining the scaling and units

The scaling parameters define the range of the demodulated data to be displayed.

10.4.8.6 Scaling for AF evaluation

These settings are only available for AF evaluations.

Useful commands described elsewhere:

- [\[SENSe:\]ADJust:SCALE\[:Y\]:AUTO\[:CONTinuous\]](#) on page 231
- [\[SENSe:\]ADEMod<n>:AF:COUPling](#) on page 209
- [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:RPOStion](#) on page 195

- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing`
on page 196

Specific commands:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue.....222`

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

Defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

Suffix:

<n>	Window
<w>	subwindow
<t>	irrelevant

Parameters:

<Value> Default unit: DB

Example:

`DISP:TRAC:Y:RVAL 0`

Sets the value assigned to the reference position to 0 Hz

Manual operation: See "Reference Value" on page 70

10.4.8.7 Scaling for RF evaluation

These commands are required for RF evaluations and the "result summary".

- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSITION` on page 195
- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing`
on page 196
- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]`
on page 194
- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE`
on page 194

10.4.8.8 Units

The units define how the demodulated data is displayed.

<code>CALCulate<n>:UNIT:ANGLE.....</code>	223
<code>UNIT<n>:ANGLE.....</code>	223
<code>CALCulate<n>:UNIT:THD.....</code>	223
<code>UNIT<n>:THD.....</code>	223

CALCulate<n>:UNIT:ANGLE <Unit>

UNIT<n>:ANGLE <Unit>

Selects the unit for angles (for PM display, <n> is irrelevant).

Is identical to CALC:UNIT:ANGL

Suffix:

<n> [Window](#)

Parameters:

<Unit> DEG | RAD
*RST: RAD

Example: UNIT:ANGL DEG

Manual operation: See "[Phase Unit \(Rad/Deg\)](#)" on page 74

CALCulate<n>:UNIT:THD <Unit>

UNIT<n>:THD <Mode>

Selects the unit for THD measurements (<n> is irrelevant).

Is identical to CALC:UNIT:THD

Suffix:

<n> [Window](#)

Parameters:

<Mode> DB | PCT
*RST: DB

Example: UNIT:THD PCT

Manual operation: See "[THD Unit \(%/ DB\)](#)" on page 74

10.4.8.9 Relative demodulation results

The following commands are required to obtain relative demodulation results.

CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATE.....	224
CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATE.....	224
CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE.....	224
CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:AM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:FM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:PM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:UNIT.....	226

CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence <RefValue>

CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence <RefValue>

CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence <RefValue>

Defines the reference value to be used for relative demodulation results and recalculates the results. If necessary, the detector is activated.

A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

Suffix:

<det> Detector function used for relative demodulation

Parameters:

<RefValue> double value
 The unit depends on the demodulation type:
 ACV: V
 AM: %
 FM: Hz
 PM: depends on [UNIT<n>:ANGLE](#) setting
 *RST: 1.0
 Default unit: RAD

Example: See [CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 224

Manual operation: See "[Reference Value](#)" on page 76

CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATE <State>

CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATE <State>

CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE <State>

Activates relative demodulation for the selected detector. If activated, the demodulated result is set in relation to the reference value defined by [CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence](#).

Suffix:

<det> Detector function used for relative demodulation

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

```
CONF:ADEM:RES:PM:DET2:STAT ON
```

Activates relative demodulation for the negative peak detector.

```
CONF:ADEM:RES:UNIT PCT
```

Defines the unit for relative values as percent.

```
CONF:ADEM:RES:PM:DET2:REF 1.415%
```

Sets the reference value for the negative peak detector to 1.415 %.

```
CONF:ADEM:RES:PM:DET2:MODE AVER
```

Sets the negative peak detector to average mode.

```
CONF:ADEM:RES:PM:DET2:REF:MEAS2
```

Sets the reference value for the negative peak detector to the average of the currently calculated value and the previous reference value on trace 2.

Manual operation: See ["State"](#) on page 76

```
CONF:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>
```

```
CONF:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>
```

```
CONF:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>
```

Sets the reference value to be used for relative demodulation results to the currently measured value on the specified trace *for all relative detectors*.

If necessary, the detectors are activated.

A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

Suffix:

<det> irrelevant

<t> 1..n
[Trace](#)

Example: See [CONF:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 224

Manual operation: See ["Meas -> Reference"](#) on page 76

```
CONF:ADEMod:RESults:AM:DETEctor<det>:MODE <Mode>
```

```
CONF:ADEMod:RESults:FM:DETEctor<det>:MODE <Mode>
```

```
CONF:ADEMod:RESults:PM:DETEctor<det>:MODE <Mode>
```

Defines the mode with which the demodulation result is determined.

Suffix:

<det> Detector function used for relative demodulation

Parameters:

<Mode> **WRITE**

Overwrite mode: the detector value is overwritten by each sweep. This is the default setting.

AVERage

The average result is determined over all sweeps.

MAXHold

The maximum value is determined over several sweeps and displayed. The R&S FSV/A saves each result only if the new value is greater than the previous one.

*RST: WRITe

Example: See [CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATe](#) on page 224

Manual operation: See ["Mode"](#) on page 75

CONFigure:ADEMod:RESults:UNIT <Unit>

Selects the unit for relative demodulation results.

Parameters:

<Unit> PCT | DB
*RST: PCT

Example: CONF:ADEM:RES:AM:DET2:STAT ON
Activates relative demodulation for the negative peak detector.
CONF:ADEM:RES:AM:DET2:MODE AVER
Sets the negative peak detector to average mode.
CONF:ADEM:RES:UNIT PCT
Defines the unit for relative values as percent.
CONF:ADEM:RES:AM:DET2:REF 1.415%
Sets the reference value for relative results to 1.415 %.

Manual operation: See ["Relative Unit"](#) on page 74

10.4.8.10 Settling time

Optionally, the settling time can be evaluated for time domain measurements.

Useful commands for the settling time described elsewhere:

- [\[SENSe:\]ADEMod:SETTling:TIME:RESult<t>?](#) on page 254

Remote commands exclusive to configuring the settling time:

[\[SENSe:\]ADEMod:SETTling:TIME:LIMit:LOWer](#).....226
[\[SENSe:\]ADEMod:SETTling:TIME:LIMit:UPPer](#).....227
[\[SENSe:\]ADEMod:SETTling:TIME:STATe](#).....227

[SENSe:]ADEMod:SETTling:TIME:LIMit:LOWer <Position>

Defines the upper limit of the settling time corridor. The value is defined with reference to the reference value, see also [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:RVALue](#) on page 222 and [\[SENSe:\]ADEMod:PM:RPOint\[:X\]](#) on page 210.

For details, see [Chapter 5.7.7, "Settling time"](#), on page 77.

Parameters:

<Position> Default unit: depends on result type

Example:

ADEM:SETT:TIME:LIM:LOW -10 RAD

Manual operation: See "[Lower Settling Limit](#)" on page 78

[SENSe:]ADEMod:SETTling:TIME:LIMit:UPPer <Position>

Defines the upper limit of the settling time corridor. The value is defined with reference to the reference value, see also [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:RVALue](#) on page 222 and [\[SENSe:\]ADEMod:PM:RPOint\[:X\]](#) on page 210.

For details, see [Chapter 5.7.7, "Settling time"](#), on page 77.

Parameters:

<Position> Default unit: depends on result type

Example:

ADEM:SETT:TIME:LIM:UPP 10 RAD

Manual operation: See "[Upper Settling Limit](#)" on page 78

[SENSe:]ADEMod:SETTling:TIME:STATe <State>

Enables or disables the calculation and display of the settling time. The function is available for all time domain displays.

For details, see [Chapter 5.7.7, "Settling time"](#), on page 77.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example:

```
//Define a PM time domain result display
LAY:ADD? '1',RIGH,'XTIM:PM'
//Define a second maxhold trace
DISP:WIND2:TRAC2:MODE MAXH
//Enable settling time calculation
ADEM:SETT:TIME:STAT ON
//Define the settling limit corridor as +/-10 RAD
ADEM:SETT:TIME:LIM:UPP 10 RAD
ADEM:SETT:TIME:LIM:LOW -10 RAD
//Set the zero RAD reference to the last measurement value
ADEM:PM:RPO:MODE LAST
//Perform the measurement
INIT;*WAI
//Query the settling time
ADEM:SETT:TIME:RES2?
//Result: 29.950000us
//After 29.95 us the signal is settled.
```

Manual operation: See ["State"](#) on page 78

10.4.9 Adjusting settings automatically

The following remote commands are required to adjust settings automatically in a remote environment. The tasks for manual operation are described in [Chapter 5.9, "Adjusting settings automatically"](#), on page 82.

[SENSe:]ADJust:ALL.....	228
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	229
[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE.....	229
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer.....	229
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer.....	230
[SENSe:]ADJust:CONFigure:SMODE.....	230
[SENSe:]ADJust:CONFigure:TRIGger.....	230
[SENSe:]ADJust:FREQuency.....	231
[SENSe:]ADJust:LEVel.....	231
[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTInuous].....	231

[SENSe:]ADJust:ALL

Initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Center frequency
- Reference level
- Scaling

Example: ADJ:ALL

Manual operation: See ["Adjusting all Determinable Settings Automatically \(Auto All\)"](#) on page 83

[SENSe:]ADJust:CONFigure:LEVel:DURation <Duration>

To determine the ideal reference level, the R&S FSV/A performs a measurement on the current input data. This command defines the length of the measurement if [\[SENSe:\]ADJust:CONFigure:LEVel:DURation:MODE](#) is set to `MANual`.

Parameters:

<Duration> Numeric value in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example:

```
ADJ:CONF:DUR:MODE MAN
Selects manual definition of the measurement length.
ADJ:CONF:LEV:DUR 5ms
Length of the measurement is 5 ms.
```

Manual operation: See ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 84

[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE <Mode>

To determine the ideal reference level, the R&S FSV/A performs a measurement on the current input data. This command selects the way the R&S FSV/A determines the length of the measurement .

Parameters:

<Mode> **AUTO**
 The R&S FSV/A determines the measurement length automatically according to the current input data.
MANual
 The R&S FSV/A uses the measurement length defined by [\[SENSe:\]ADJust:CONFigure:LEVel:DURation](#) on page 229.
 *RST: AUTO

Manual operation: See ["Resetting the Automatic Measurement Time \(Meas Time Auto\)"](#) on page 84
 See ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 84

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>

Parameters:

<Threshold> Range: 0 dB to 200 dB
 *RST: +1 dB
 Default unit: dB

Example: `SENS:ADJ:CONF:HYST:LOW 2`
 For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level falls below 18 dBm.

Manual operation: See "[Lower Level Hysteresis](#)" on page 85

[SENSe:]ADJJust:CONFigure:HYSteresis:UPPer <Threshold>

Parameters:

<Threshold> Range: 0 dB to 200 dB
 *RST: +1 dB
 Default unit: dB

Example: `SENS:ADJ:CONF:HYST:UPP 2`

Example: For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level rises above 22 dBm.

Manual operation: See "[Upper Level Hysteresis](#)" on page 84

[SENSe:]ADJJust:CONFigure:SMODe <Search Mode>

Determines the search mode for the automatic measurement performed to determine the optimal measurement configuration.

Parameters:

<Search Mode> FAST | POPTimized
FAST
 The measurement is optimized for speed.
POPTimized
 The measurement is optimized to analyze pulse signals adequately.

Example: `ADJ:CONF:SMOD POPT`

Manual operation: See "[Search Mode](#)" on page 85

[SENSe:]ADJJust:CONFigure:TRIGger <State>

Defines the behavior of a triggered measurement when adjusting a setting automatically (using `SENS:ADJ:LEV ON`, for example).

See "[Adjusting settings automatically during triggered measurements](#)" on page 83.

Parameters:

<State> ON | OFF | 0 | 1
ON | 1
 (default:) The measurement for adjustment waits for the next trigger.
OFF | 0
 The measurement for adjustment is performed without waiting for a trigger (corresponds to "Continue" in manual operation).

```

Example:
          *RST:      0
          //Use default ref level at 0.00 dBm.
          //Define an RF power trigger at -20 dBm
          :TRIG:SEQ:SOUR RFP
          :TRIG:SEQ:LEV:RFP -20
          //Perform adjustment measurement without waiting for trigger
          SENS:ADJ:CONF:TRIG OFF
          //Perform auto level adjustment
          :SENS:ADJ:LEV;*WAI

```

[SENSe:]ADJust:FREQuency

Sets the center frequency to the frequency with the highest signal level in the current frequency range.

Example: ADJ:FREQ

Manual operation: See ["Adjusting the Center Frequency Automatically \(Auto Frequency\)"](#) on page 83

[SENSe:]ADJust:LEVel

Initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. Thus, the settings of the RF attenuation and the reference level are optimized for the signal level. The R&S FSV/A is not overloaded and the dynamic range is not limited by an S/N ratio that is too small.

Example: ADJ:LEV

Manual operation: See ["Setting the Reference Level Automatically \(Auto Level\)"](#) on page 45

[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTInuous] <State>

Activates automatic scaling of the y-axis in all diagrams according to the current measurement results. Currently auto-scaling is only available for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: SENS:ADJ:SCAL:Y:AUTO ON

Manual operation: See ["AF Auto Scale"](#) on page 71

10.5 Capturing data and performing sweeps

The following commands are required to capture data.

ABORt.....	232
INITiate<n>:CONMeas.....	233
INITiate<n>:CONTinuous.....	233
INITiate<n>[:IMMEDIATE].....	233
INITiate:SEQuencer:ABORt.....	234
INITiate:SEQuencer:IMMEDIATE.....	234
INITiate:SEQuencer:MODE.....	234
SYSTem:SEQuencer.....	235

ABORt

Aborts the measurement in the current channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the *OPC? or *WAI command after ABOR and before the next command.

For details on overlapping execution see [Remote control via SCPI](#).

To abort a sequence of measurements by the Sequencer, use the `INITiate:SEQuencer:ABORt` command.

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FSV/A is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FSV/A on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** `viClear()`

Now you can send the `ABORt` command on the remote channel performing the measurement.

Example: `ABOR; :INIT:IMM`
Aborts the current measurement and immediately starts a new one.

Example: `ABOR; *WAI`
`INIT:IMM`
Aborts the current measurement and starts a new one once abortion has been completed.

Usage: Event

INITiate<n>:CONMeas

Restarts a (single) measurement that has been stopped (using `ABORT`) or finished in single sweep mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

Suffix:

<n> irrelevant

Usage:

Asynchronous command

Manual operation: See "[Continue Single Sweep](#)" on page 57

INITiate<n>:CONTInuous <State>

Controls the sweep mode for an individual channel.

Note that in single sweep mode, you can synchronize to the end of the measurement with `*OPC`, `*OPC?` or `*WAI`. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

For details on synchronization see [Remote control via SCPI](#).

If the sweep mode is changed for a channel while the Sequencer is active (see [INITiate:SEQuencer:IMMediate](#) on page 234), the mode is only considered the next time the measurement in that channel is activated by the Sequencer.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 0 | 1
ON | 1
 Continuous sweep
OFF | 0
 Single sweep
 *RST: 1 (some applications can differ)

Example:

```
INIT:CONT OFF
Switches the sweep mode to single sweep.
INIT:CONT ON
Switches the sweep mode to continuous sweep.
```

Manual operation: See "[Continuous Sweep / Run Cont](#)" on page 56

INITiate<n>[:IMMediate]

Starts a (single) new measurement.

With sweep count or average count > 0, this means a restart of the corresponding number of measurements. With trace mode MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

You can synchronize to the end of the measurement with *OPC, *OPC? or *WAI.

For details on synchronization see [Remote control via SCPI](#).

Suffix:

<n> irrelevant

Usage: Asynchronous command

Manual operation: See "[Single Sweep / Run Single](#)" on page 57

INITiate:SEQuencer:ABORt

Stops the currently active sequence of measurements.

You can start a new sequence any time using [INITiate:SEQuencer:IMMediate](#) on page 234.

Usage: Event

INITiate:SEQuencer:IMMediate

Starts a new sequence of measurements by the Sequencer.

Before this command can be executed, the Sequencer must be activated (see [SYSTem:SEQuencer](#) on page 235).

Example:

SYST:SEQ ON

Activates the Sequencer.

INIT:SEQ:MODE SING

Sets single sequence mode so each active measurement is performed once.

INIT:SEQ:IMM

Starts the sequential measurements.

INITiate:SEQuencer:MODE <Mode>

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

Note: To synchronize to the end of a measurement sequence using *OPC, *OPC? or *WAI, use SINGle Sequencer mode.

Parameters:

<Mode>

SINGle

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

CONTInuous

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

*RST: CONTInuous

SYSTem:SEQuencer <State>

Turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSV/A User Manual.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

The Sequencer is activated and a sequential measurement is started immediately.

OFF | 0

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.

*RST: 0

Example:

`SYST:SEQ ON`

Activates the Sequencer.

`INIT:SEQ:MODE SING`

Sets single Sequencer mode so each active measurement is performed once.

`INIT:SEQ:IMM`

Starts the sequential measurements.

`SYST:SEQ OFF`

10.6 Configuring the result display

The following remote commands are required to configure the screen display in a remote environment.

- [General window commands](#).....236
- [Working with windows in the display](#).....236

10.6.1 General window commands

The following commands are required to configure general window layout, independent of the application.

Note that the suffix <n> always refers to the window *in the currently selected channel* (see [INSTrument\[:SELEct\]](#) on page 142).

DISPlay:FORMat	236
DISPlay[:WINDow<n>]:SIZE	236

DISPlay:FORMat <Format>

Determines which tab is displayed.

Parameters:

<Format>

SPLit

Displays the MultiView tab with an overview of all active channels

SINGle

Displays the measurement channel that was previously focused.

*RST: SING

Example:

DISP:FORM SPL

DISPlay[:WINDow<n>]:SIZE <Size>

Maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the [LAY:SPL](#) command (see [LAYout:SPLitter](#) on page 240).

Suffix:

<n>

[Window](#)

Parameters:

<Size>

LARGE

Maximizes the selected window to full screen. Other windows are still active in the background.

SMALI

Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.

*RST: SMALI

Example:

DISP:WIND2:SIZE LARG

10.6.2 Working with windows in the display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel as you do using the SmartGrid in manual operation. Since

the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel.

Note that the suffix <n> always refers to the window *in the currently selected channel*.

(See `INSTrument[:SElect]` on page 142).

<code>LAYout:ADD[:WINDow]?</code>	237
<code>LAYout:CATalog[:WINDow]?</code>	238
<code>LAYout:IDENtify[:WINDow]?</code>	239
<code>LAYout:MOVE[:WINDow]</code>	239
<code>LAYout:REMOve[:WINDow]</code>	240
<code>LAYout:REPLace[:WINDow]</code>	240
<code>LAYout:SPLitter</code>	240
<code>LAYout:WINDow<n>:ADD?</code>	242
<code>LAYout:WINDow<n>:IDENtify?</code>	242
<code>LAYout:WINDow<n>:REMOve</code>	243
<code>LAYout:WINDow<n>:REPLace</code>	243
<code>LAYout:WINDow<n>:TYPE</code>	244

LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

Adds a window to the display in the active channel.

Is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

Query parameters:

<WindowName>	String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the <code>LAYout:CATalog[:WINDow]?</code> query.
<Direction>	LEFT RIGHT ABOVE BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:ADD? '1',BEL,'XTIM:AM:RELative[:TDOMain]'`
Adds an "AM Time Domain" display below window 1.

Usage: Query only

Manual operation: See "AM Time Domain" on page 16
 See "FM Time Domain" on page 17
 See "PM Time Domain" on page 18
 See "AM Spectrum" on page 19
 See "FM Spectrum" on page 20
 See "PM Spectrum" on page 21
 See "RF Time Domain" on page 22
 See "RF Spectrum" on page 23
 See "Result Summary" on page 24
 See "Marker Table" on page 26
 See "Marker Peak List" on page 26

Table 10-4: <WindowType> parameter values for AnalogDemod application

Parameter value	Window type
MTABle	"Marker table"
PEAKlist	"Marker peak list"
RSUMmary	"Result summary"
'XTIM:AM'	"RF Time Domain" (= RF power)
'XTIM:AM:RELative'	"AM Time Domain"
'XTIM:AM:RELative:AFSPec- trum'	"AM Spectrum"
'XTIM:FM'	"FM Time Domain"
'XTIM:FM:AFSPpectrum'	"FM Spectrum"
'XTIM:PM'	"PM Time Domain"
'XTIM:PM:AFSPpectrum'	"PM Spectrum"
'XTIM:SPECTrum'	"RF Spectrum"

LAYout:CATalog[:WINDow]?

Queries the name and index of all active windows in the active channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName_1>,<WindowIndex_1>..<WindowName_n>,<WindowIndex_n>

Return values:

<WindowName> string
 Name of the window.
 In the default state, the name of the window is its index.

<WindowIndex> **numeric value**
 Index of the window.

Example: LAY:CAT?
 Result:
 '2',2,'1',1
 Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

Usage: Query only

LAYout:IDENTify[:WINDow]? <WindowName>

Queries the **index** of a particular display window in the active channel.

Note: to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENTify?](#) query.

Query parameters:

<WindowName> String containing the name of a window.

Return values:

<WindowIndex> Index number of the window.

Example: LAY:IDEN:WIND? '2'
 Queries the index of the result display named '2'.
 Response:
 2

Usage: Query only

LAYout:MOVE[:WINDow] <WindowName>, <WindowName>, <Direction>

Setting parameters:

<WindowName> String containing the name of an existing window that is to be moved.
 By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<WindowName> String containing the name of an existing window the selected window is placed next to or replaces.
 By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<Direction> LEFT | RIGHT | ABOVE | BELOW | REPLACE
 Destination the selected window is moved to, relative to the reference window.

Example: LAY:MOVE '4','1',LEFT
 Moves the window named '4' to the left of window 1.

Example: LAY:MOVE '1','3',REPL
 Replaces the window named '3' by window 1. Window 3 is deleted.

Usage: Setting only

LAYout:REMOve[:WINDow] <WindowName>

Removes a window from the display in the active channel.

Setting parameters:

<WindowName> String containing the name of the window. In the default state, the name of the window is its index.

Example: `LAY:REM '2'`
Removes the result display in the window named '2'.

Usage: Setting only

LAYout:REPLace[:WINDow] <WindowName>, <WindowType>

Replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel while keeping its position, index and window name.

To add a new window, use the `LAYout:ADD[:WINDow]?` command.

Setting parameters:

<WindowName> String containing the name of the existing window.
By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the `LAYout:CATalog[:WINDow]?` query.

<WindowType> Type of result display you want to use in the existing window.
See `LAYout:ADD[:WINDow]?` on page 237 for a list of available window types.

Example: `LAY:REPL:WIND '1',MTAB`
Replaces the result display in window 1 with a marker table.

Usage: Setting only

LAYout:SPLitter <Index1>, <Index2>, <Position>

Changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

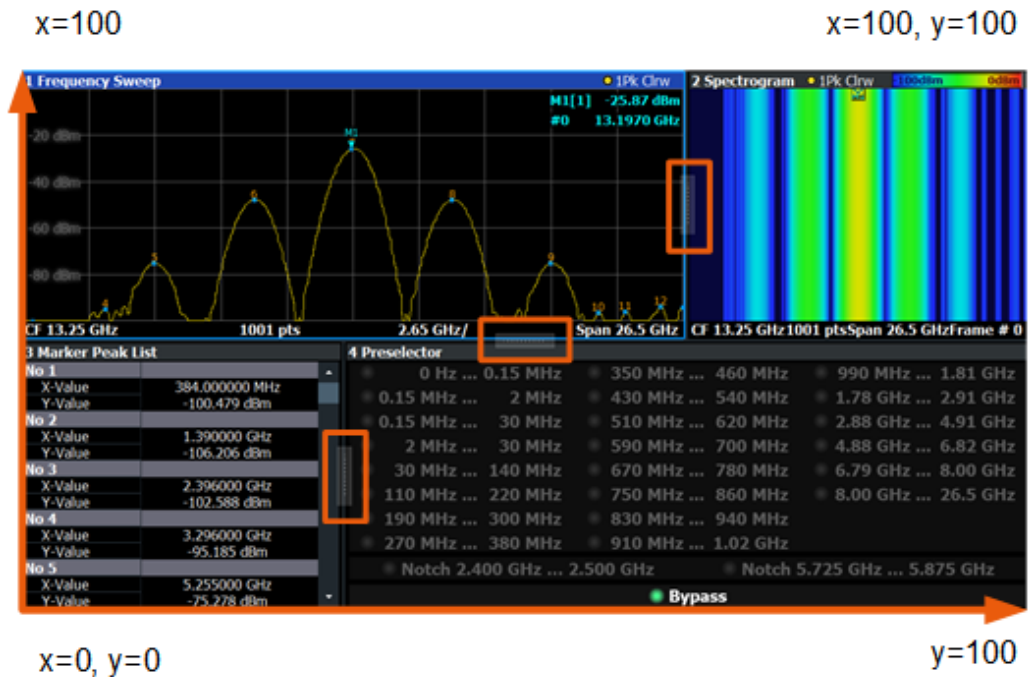


Figure 10-1: SmartGrid coordinates for remote control of the splitters

Setting parameters:

- <Index1> The index of one window the splitter controls.
- <Index2> The index of a window on the other side of the splitter.
- <Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).
The point of origin ($x = 0$, $y = 0$) is in the lower left corner of the screen. The end point ($x = 100$, $y = 100$) is in the upper right corner of the screen. (See Figure 10-1.)
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.

Range: 0 to 100

Example:

LAY:SPL 1,3,50

Moves the splitter between window 1 ("Frequency Sweep") and 3 ("Marker Table") to the center (50%) of the screen, i.e. in the figure above, to the left.

Example: `LAY:SPL 1,4,70`
 Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.
`LAY:SPL 3,2,70`
`LAY:SPL 4,1,70`
`LAY:SPL 2,1,70`

Usage: Setting only

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

Adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

Is always used as a query so that you immediately obtain the name of the new window as a result.

Suffix:

<n> [Window](#)

Query parameters:

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.
 See [LAYout:ADD\[:WINDow\]?](#) on page 237 for a list of available window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:WIND1:ADD? LEFT,MTAB`
Result:
 '2'
 Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

LAYout:WINDow<n>:IDENTify?

Queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel.

Note: to query the **index** of a particular window, use the [LAYout:IDENTify\[:WINDow\]?](#) command.

Suffix:	
<n>	Window
Return values:	
<WindowName>	String containing the name of a window. In the default state, the name of the window is its index.
Example:	LAY:WIND2:IDEN? Queries the name of the result display in window 2. Response: '2'
Usage:	Query only

LAYout:WINDow<n>:REMove

Removes the window specified by the suffix <n> from the display in the active channel.
The result of this command is identical to the [LAYout:REMove\[:WINDow\]](#) command.

Suffix:	
<n>	Window
Example:	LAY:WIND2:REM Removes the result display in window 2.
Usage:	Event

LAYout:WINDow<n>:REPLace <WindowType>

Changes the window type of an existing window (specified by the suffix <n>) in the active channel.

The effect of this command is identical to the [LAYout:REPLace\[:WINDow\]](#) command.

To add a new window, use the [LAYout:WINDow<n>:ADD?](#) command.

Suffix:	
<n>	Window
Setting parameters:	
<WindowType>	Type of measurement window you want to replace another one with. See LAYout:ADD[:WINDow]? on page 237 for a list of available window types.
Example:	LAY:WIND2:REPL MTAB Replaces the result display in window 2 with a marker table.
Usage:	Setting only

LAYout:WINDow<n>:TYPE <WindowType>

Queries or defines the window type of the window specified by the index <n>. The window type determines which results are displayed. For a list of possible window types, see [LAYout:ADD\[:WINDow\]?](#) on page 237.

Note that this command is not available in all applications and measurements.

Suffix:

<n> 1..n
Window

Parameters:

<WindowType>

Example: LAY:WIND2:TYPE?

10.7 Retrieving results

The following remote commands are required to retrieve the results from an Analog Modulation Analysis in a remote environment.



In the Analog Modulation Analysis when you configure the traces for a window with a specific evaluation (e.g. AM time domain), the traces in all windows with the same evaluation are configured identically.

Specific commands:

- [Retrieving trace results](#)..... 244
- [Exporting trace results](#)..... 247
- [Retrieving result summary values](#)..... 250
- [Formats for returned values: ASCII format and binary format](#)..... 255
- [Reference: ASCII file export format](#)..... 255

10.7.1 Retrieving trace results

The following remote commands are required to retrieve the trace results in a remote environment.

[SENSe:]ADEMod:ACV:AFSPectrum:RESult?	245
[SENSe:]ADEMod:ACV[:TDOMain]:RESult?	245
[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum:RESult?	245
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?	245
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?	245
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?	245
[SENSe:]ADEMod:FM:AFSPectrum:RESult?	245
[SENSe:]ADEMod:FM[:TDOMain]:RESult?	245
[SENSe:]ADEMod:PM:AFSPectrum:RESult?	245
[SENSe:]ADEMod:PM[:TDOMain]:RESult?	245

[SENSe:]ADEMod:SPECTrum:RESult?.....	245
FORMat[:DATA].....	246
FORMat:DEXPort:FORMat.....	247
TRACe<n>[:DATA].....	247

[SENSe:]ADEMod:ACV:AFSPectrum:RESult? <TraceMode>
[SENSe:]ADEMod:ACV[:TDOMain]:RESult? <TraceMode>
[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum:RESult? <TraceMode>
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult? <TraceMode>
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult? <TraceMode>
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult? <TraceMode>
[SENSe:]ADEMod:FM:AFSPectrum:RESult? <TraceMode>
[SENSe:]ADEMod:FM[:TDOMain]:RESult? <TraceMode>
[SENSe:]ADEMod:PM:AFSPectrum:RESult? <TraceMode>
[SENSe:]ADEMod:PM[:TDOMain]:RESult? <TraceMode>
[SENSe:]ADEMod:SPECTrum:RESult? <TraceMode>

Reads the result data of the evaluated signal in the specified trace mode. The data format of the output data block is defined by the FORMat command (see FORMat [: DATA] on page 246).

The trace results are configured for a specific evaluation. The following table indicates which command syntax refers to which evaluation method, as well as the output unit of the results.

Command syntax	Evaluation method	Output unit
ACV[:TDOMain]	AC-Video time domain	V
ACV:AFSPectrum	AC-Video spectrum	V
AM[:ABSolute][:TDOMain]	RF time domain	dBm
AM:RELative[:TDOMain]	AM time domain	%
AM:RELative:AFSPectrum	AM spectrum	%
FM[:TDOMain]	FM time domain	kHz
FM:AFSPectrum	FM spectrum	kHz
PM[:TDOMain]	PM time domain	rad or °
PM:AFSPectrum	PM spectrum	rad or °
SPECTrum	RF spectrum	dBm (logarithmic display) or V (linear display).

Query parameters:

<TraceMode> WRITe | AVERage | MAXHold | MINHold

Return values:

<TraceModeResult> The specified trace mode must be one of those configured by SENS:ADEM:<Evaluation>:TYPE, see [SENSe:]ADEMod:SPECTrum[:TYPE] on page 267. Otherwise a query error is generated.

Example: ADEM:AM AVER,MAXH,MINH
 Sets up RF time domain results to be measured
 INIT; *WAI
 Starts measurement and waits for sync
 FORM ASC
 Selects output format
 ADEM:AM:RES? AVER
 Reads RF time domain average results
 ADEM:AM:RES? MAXH
 Reads RF time domain max hold results
 ADEM:AM:RES? MINH
 Reads RF time domain min hold results

Usage: Query only

FORMat[:DATA] <Format>[, <BitLength>]

Selects the data format that is used for transmission of trace data from the R&S FSV/A to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSV/A. The R&S FSV/A automatically recognizes the data it receives, regardless of the format.

Parameters:

<Format>

ASCii

ASCII format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats can be.

REAL

Floating-point numbers (according to IEEE 754) in the "definite length block format".

<BitLength>

Length in bits for floating-point results

16

16-bit floating-point numbers.

Compared to **REAL, 32** format, half as many numbers are returned.

32

32-bit floating-point numbers

For I/Q data, 8 bytes per sample are returned for this format setting.

64

64-bit floating-point numbers

Compared to **REAL, 32** format, twice as many numbers are returned.

Example: FORM REAL, 32

FORMat:DEXPort:FORMat <FileFormat>

Determines the format of the ASCII file to be imported or exported. Depending on the external program that creates the data file or evaluates it, a comma-separated list (CSV) or a plain data format (DAT) file is required.

Parameters:

<FileFormat> CSV | DAT
 *RST: DAT

Example: FORM:DEXP:FORM CSV

Manual operation: See "File Type" on page 98

TRACe<n>[:DATA]

This command queries current trace data and measurement results.

The data format depends on [FORMat \[:DATA\]](#) on page 246.

Suffix:

<n> [Window](#)

Query parameters:

<ResultType> Selects the type of result to be returned.

TRACE1 | ... | TRACE6

Returns the trace data for the corresponding trace.

The trace data consists of a list of measured power levels. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the configured unit.

For the auto peak detector, the command returns positive peak values only. (To retrieve negative peak values, define a second trace with a negative peak detector.)

Example: TRAC? TRACE3
 Queries the data of trace 3.

10.7.2 Exporting trace results

Trace results can be exported to a file.

For more commands concerning data and results storage, see the R&S FSV/A User Manual.

FORMat:DEXPort:CSEParator	248
FORMat:DEXPort:DSEParator	248
FORMat:DEXPort:HEADer	248
FORMat:DEXPort:TRACes	249
MMEMory:STORe<n>:SPECTrogram	249
MMEMory:STORe<n>:TRACe	250

FORMat:DEXPort:CSEParator <Separator>

Selects the column separator for exported trace data.

The selected value is not affected by a preset. The command therefore has no reset value.

Parameters:

<Separator>

COMMa

Selects a comma as a separator.

SEMicolon

Selects a semicolon as a separator.

TAB

Selects a tabulator as a separator.

*RST: n/a

Example:

```
//Select column separator
FORM:DEXP:CSEP TAB
```

Manual operation: See ["Column Separator"](#) on page 98

FORMat:DEXPort:DSEParator <Separator>

Selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator>

POINT | COMMa

COMMa

Uses a comma as decimal separator, e.g. *4,05*.

POINT

Uses a point as decimal separator, e.g. *4.05*.

*RST: *RST has no effect on the decimal separator.
Default is POINT.

Example:

```
FORM:DEXP:DSEP POIN
Sets the decimal point as separator.
```

Manual operation: See ["Decimal Separator"](#) on page 97
See ["Export Peak List"](#) on page 118

FORMat:DEXPort:HEADer <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

See [Chapter 10.7.5, "Reference: ASCII file export format"](#), on page 255 for details.

Parameters:

<State>

ON | OFF | 0 | 1

*RST: 1

Manual operation: See ["Include Instrument & Measurement Settings"](#) on page 96

FORMat:DEXPort:TRACes <Selection>

Selects the data to be included in a data export file (see [MMEMory:STORe<n>:TRACe](#) on page 250).

Parameters:

<Selection>

SINGle | ALL

SINGle

Only a single trace is selected for export, namely the one specified by the [MMEMory:STORe<n>:TRACe](#) command.

ALL

Selects all active traces and result tables (e.g. "Result Summary", marker peak list etc.) in the current application for export to an ASCII file.

The <trace> parameter for the [MMEMory:STORe<n>:TRACe](#) command is ignored.

*RST: SINGle

Manual operation: See ["Export all Traces and all Table Results"](#) on page 96

MMEMory:STORe<n>:SPECTrogram <FileName>

Exports spectrogram data to an ASCII file.

The file contains the data for every frame in the history buffer. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded.

Note that, depending on the size of the history buffer, the process of exporting the data can take a while.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Suffix:

<n>

[Window](#)

Parameters:

<FileName>

String containing the path and name of the target file.

Example:

MMEM:STOR:SGR 'Spectrogram'

Copies the spectrogram data to a file.

Manual operation: See ["Export Spectrogram to ASCII File"](#) on page 98

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

Exports trace data from the specified window to an ASCII file.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Suffix:

<n> [Window](#)

Parameters:

<Trace> Number of the trace to be stored
(This parameter is ignored if the option "Export all Traces and all Table Results" is activated in the Export configuration settings, see [FORMat:DEXPort:TRACes](#) on page 249).

<FileName> String containing the path and name of the target file.

Example: `MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'`
Stores trace 1 from window 1 in the file TEST.ASC.

Manual operation: See ["Export Trace to ASCII File"](#) on page 97

10.7.3 Retrieving result summary values

The result summary contains measurement values that are calculated from the trace data.

For details see ["Result Summary"](#) on page 24.

CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AFRequency[:RESult<t>]?	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AM[:RESult<t>]?	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FM[:RESult<t>]?	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:PM[:RESult<t>]?	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AM[:RESult<t>]:RELative?	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FM[:RESult<t>]:RELative?	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:PM[:RESult<t>]:RELative?	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:CARRier[:RESult<t>]?	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:DISTortion[:WRITe]:RESult<t>?	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FERRor[:RESult<t>]?	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:SINad:RESult<t>?	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:THD:RESult<t>?	254
[SENSe:]ADEMod:SETTling:TIME:RESult<t>?	254

CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:AFRequency[:RESult<t>]?

Queries the modulation (audio) frequency for the demodulation method in the specified window.

Suffix:

<n> [Window](#)

<m> irrelevant

<t> [Trace](#)

Return values:

<ModFreq> Modulation frequency in Hz.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:AM[:RESult<t>]? <MeasType>**CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:FM[:RESult<t>]?** <MeasType>**CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:PM[:RESult<t>]?** <MeasType>

Queries the current value of the demodulated signal for the specified trace (as displayed in the "Result Summary" in manual operation).

Note that all windows with the same evaluation method have the same traces, thus the window is irrelevant.

Suffix:

<n> [Window](#)

<m> irrelevant

<t> [Trace](#)

Query parameters:

<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak

Postive peak (+PK)

MPEak | NPEak

Negative peak (-PK)

MIDDLE

Average of positive and negative peaks $\pm PK/2$

RMS

Root mean square value

Return values:

<MeasTypeResult>

Example:

```
CALC:FEED 'XTIM:PM:TDOM'
```

Switches on the PM time domain result display.

```
DISP:TRAC ON
```

Switches on the trace.

```
CALC:MARK:FUNC:ADEM:PM? PPE
```

Queries the peak value of the demodulated PM trace.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:ADEMod:AM[:RESult<t>]:RELative?
<MeasType>

CALCulate<n>:MARKer<m>:FUNction:ADEMod:FM[:RESult<t>]:RELative?
<MeasType>

CALCulate<n>:MARKer<m>:FUNction:ADEMod:PM[:RESult<t>]:RELative?
<MeasType>

Queries the current *relative* value of the demodulated signal for the specified trace (as displayed in the "Result Summary" in manual operation).

Note that all windows with the same evaluation method have the same traces.

The unit of the results depends on the [CONFigure:ADEMod:RESults:UNIT](#) setting.

Suffix:

<n> irrelevant

<m> irrelevant

<t> [Trace](#)

Query parameters:

<MeasType>

PPEak

Positive peak (+PK)

MPEak | NPEak

Negative peak (-PK)

MIDDLE

Average of positive and negative peaks $\pm PK/2$

RMS

Root mean square value

Return values:

<MeasTypeResult>

Example:

`CALC:FEED 'XTIM:PM:TDOM'`

Switches on the PM time domain result display.

`DISP:TRAC ON`

Switches on the trace.

`CALC:MARK:FUNC:ADEM:PM? PPE`

Queries the peak value of the demodulated PM trace.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:ADEMod:CARRier[:RESult<t>]?

Queries the carrier power, which is determined from the Clr/Write data.

Suffix:

<n> [Window](#)

<m> irrelevant

<t> [Trace](#)

Return values:

<CPower> Power of the carrier without modulation in dBm.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:ADEMod:DISToRTion[:WRITe]:RESult<t>?

Queries the result of the modulation distortion measurement in the specified window for the specified trace.

Note that this value is only calculated if an AF Spectrum window is displayed.

Suffix:

<n> [Window](#)

<m> irrelevant

<t> [Trace](#)

Return values:

<DISTORT> numeric value
Modulation distortion in percent.
Default unit: %

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:ADEMod:FERRor[:RESult<t>]?

Queries the carrier offset (= frequency error) for FM and PM demodulation. The carrier offset is determined from the current measurement data (CLR/WRITE). The modulation is removed using low pass filtering.

Suffix:

<n> [Window](#)

<m> irrelevant

<t> [Trace](#)

Return values:

<CarrOffset> The deviation of the calculated carrier frequency to the ideal carrier frequency in Hz.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:ADEMod:SINad:RESult<t>?

Queries the result of the signal-to-noise-and-distortion (SINAD) measurement in the specified window for the specified trace.

Note that this value is only calculated if an AF Spectrum window is displayed.

Suffix:<n> [Window](#)

<m> irrelevant

<t> [Trace](#)**Return values:**

<SINAD> The signal-to-noise-and-distortion ratio in dB.

Usage: Query only**CALCulate<n>:MARKer<m>:FUNction:ADEMod:THD:RESult<t>?**

Queries the result of the total harmonic distortion (THD) measurement in the specified window.

Note that this value is only calculated if an AF Spectrum window is displayed.

Suffix:<n> [Window](#)

<m> irrelevant

<t> [Trace](#)**Return values:**

<THD> Total harmonic distortion of the demodulated signal in dB.

Usage: Query only**[SENSe:]ADEMod:SETTling:TIME:RESult<t>?**

Returns the settling time after which the signal remains within a specified target corridor. The settling time is evaluated for the selected trace in each time domain window. The value is only determined for `[SENSe:]ADEMod:SETTling:TIME:STATeON`.

For details, see [Chapter 5.7.7, "Settling time"](#), on page 77.

Suffix:<t> 1..n
[Trace](#)**Return values:**

<Time> Default unit: s

Example:

```
ADEM:SETT:TIME:RES2?
//Result: 29.950000us
After 29.95 us, the signal is settled.
```

Usage: Query only**Manual operation:** See ["State"](#) on page 78

10.7.4 Formats for returned values: ASCII format and binary format

When trace data is retrieved using the `TRAC:DATA` or `TRAC:IQ:DATA` command, the data is returned in the format defined using the `FORMat[:DATA]` on page 246. The possible formats are described here.

- **ASCII Format (FORMat ASCII):**
The data is stored as a list of comma-separated values (CSV) of the measured values in floating point format.
- **Binary Format (FORMat REAL,16/32/64):**
The data is stored as binary data (definite length block data according to IEEE 488.2), each measurement value being formatted in 16-bit/32-bit/64-bit IEEE 754 floating-point-format.
The schema of the result string is as follows:
#<Length of length><Length of data><value1><value2>...<value n>
with:

<Length of length>	Number of digits of the following number of data bytes
<Length of data>	Number of following data bytes
<Value>	2-byte/4-byte/8-byte floating point value

Example: #41024<Data>... contains 1024 data bytes

Data blocks larger than 999,999,999 bytes

According to SCPI, the header of the block data format allows for a maximum of 9 characters to describe the data length. Thus, the maximum REAL 32 data that can be represented is 999,999,999 bytes. However, the R&S FSV/A is able to send larger data blocks. In this case, the length of the data block is placed in brackets, e.g.

#(1234567890)<value1><value2>...



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

10.7.5 Reference: ASCII file export format

Trace data can be exported to a file in ASCII format for further evaluation in other applications. This reference describes in detail the format of the export files for result data.

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace). The measured data follows in one or several columns (depending on the measurement), which are also separated by a semicolon.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

10.8 Analyzing results

The following remote commands are required to configure general result analysis settings concerning the trace, markers, lines etc. in a remote environment. They are identical to the analysis functions in the base unit except for some special marker functions and spectrograms, which are not available in the R&S FSV3 AM/FM/PM Modulation Analysis application.

More details are described for manual operation in [Chapter 6, "Analysis"](#), on page 86.

- [Configuring spectrograms](#)..... 256
- [Configuring standard traces](#)..... 263
- [Working with markers remotely](#)..... 270
- [Marker search \(spectrograms\)](#)..... 309
- [Defining limit checks](#)..... 318

10.8.1 Configuring spectrograms

In addition to the standard "level versus frequency" or "level versus time" spectrum traces, the R&S FSV/A also provides a spectrogram display of the measured data. A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency, the y-axis shows the time. The commands required to configure spectrograms in a remote environment are described here. For details and manual operation see [Chapter 6.2, "Spectrogram settings"](#), on page 90.



When configuring spectrograms, the window suffix is irrelevant. The settings are always applied to the spectrogram window, or to all spectrogram windows, if several are active for the same channel.

For commands to set markers in spectrograms, see [Chapter 10.8.3.3, "Marker search \(spectrograms\)"](#), on page 278.

- 10.8.1.1 [Configuring a spectrogram measurement](#)..... 256
- 10.8.1.2 [Configuring the color map](#)..... 261

10.8.1.1 Configuring a spectrogram measurement

CALCulate<n>:SGRam:CLEar[:IMMediate]	257
CALCulate<n>:SPECtrogram:CLEar[:IMMediate]	257
CALCulate<n>:SGRam:CONTinuous	257
CALCulate<n>:SPECtrogram:CONTinuous	257
CALCulate<n>:SGRam:FRAMe:COUNT	258
CALCulate<n>:SPECtrogram:FRAMe:COUNT	258
CALCulate<n>:SGRam:FRAMe:SElect	258
CALCulate<n>:SPECtrogram:FRAMe:SElect	258
CALCulate<n>:SGRam:HDEPth	258
CALCulate<n>:SPECtrogram:HDEPth	258
CALCulate<n>:SGRam:LAYout	259

CALCulate<n>:SPECtrogram:LAYout.....	259
CALCulate<n>:SGRam[:STATe].....	259
CALCulate<n>:SPECtrogram[:STATe].....	259
CALCulate<n>:SGRam:THReedim[:STATe].....	259
CALCulate<n>:SPECtrogram:THReedim[:STATe].....	259
CALCulate<n>:SGRam:TRACe.....	260
CALCulate<n>:SPECtrogram:TRACe.....	260
CALCulate<n>:SGRam:TSTamp:DATA?.....	260
CALCulate<n>:SPECtrogram:TSTamp:DATA?.....	260
CALCulate<n>:SGRam:TSTamp[:STATe].....	261
CALCulate<n>:SPECtrogram:TSTamp[:STATe].....	261

CALCulate<n>:SGRam:CLEar[:IMMediate]**CALCulate<n>:SPECtrogram:CLEar[:IMMediate]**

Resets the spectrogram and clears the history buffer.

Suffix:

<n> [Window](#)

Example:

```
//Reset the result display and clear the memory
CALC:SGR:CLE
```

Manual operation: See ["Clear Spectrogram"](#) on page 59

CALCulate<n>:SGRam:CONTinuous <State>**CALCulate<n>:SPECtrogram:CONTinuous <State>**

Determines whether the results of the last measurement are deleted before starting a new measurement in single sweep mode.

This setting applies to all spectrograms in the channel.

Suffix:

<n> [Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

```
INIT:CONT OFF
Selects single sweep mode.
INIT;*WAI
Starts the sweep and waits for the end of the sweep.
CALC:SGR:CONT ON
Repeats the single sweep measurement without deleting the
results of the last measurement.
```

Manual operation: See ["Continue Frame"](#) on page 58

CALCulate<n>:SGRam:FRAMe:COUNt <Frames>

CALCulate<n>:SPEctrogram:FRAMe:COUNt <Frames>

Defines the number of frames to be recorded in a single sweep.

This value applies to all spectrograms in the channel.

Suffix:

<n> [Window](#)

Parameters:

<Frames> The maximum number of frames depends on the history depth.

Range: 1 to history depth

Increment: 1

*RST: 1

Example:

//Select single sweep mode

INIT:CONT OFF

//Set the number of frames to 200

CALC:SGR:FRAM:COUN 200

Manual operation: See "[Frame Count](#)" on page 58

CALCulate<n>:SGRam:FRAMe:SElect <Frame> | <Time>

CALCulate<n>:SPEctrogram:FRAMe:SElect <Frame> | <Time>

Selects a specific frame for further analysis.

The command is available if no measurement is running or after a single sweep has ended.

Suffix:

<n> [Window](#)

Parameters:

<Frame> Selects a frame directly by the frame number. Valid if the time stamp is off.

The range depends on the history depth.

Default unit: S

<Time> Selects a frame via its time stamp. Valid if the time stamp is on.

The number is the distance to frame 0 in seconds. The range depends on the history depth.

Example:

INIT:CONT OFF

Stop the continuous sweep.

CALC:SGR:FRAM:SEL -25

Selects frame number -25.

Manual operation: See "[Select Frame](#)" on page 58

CALCulate<n>:SGRam:HDEPth <History>

CALCulate<n>:SPEctrogram:HDEPth <History>

Defines the number of frames to be stored in the R&S FSV/A memory.

Suffix:<n> [Window](#)**Parameters:**

<History> The maximum number of frames depends on the number of sweep points.

Range: 781 to 20000

Increment: 1

*RST: 3000

Example://Set the history depth to 1500
CALC:SGR:SPEC 1500**Manual operation:** See "[History Depth](#)" on page 92**CALCulate<n>:SGRam:LAYout <State>****CALCulate<n>:SPECtrogram:LAYout <State>**

This command selects the state and size of spectrograms.

The command is available for result displays that support spectrograms.

Suffix:<n> [Window](#)**Example:**

CALC4:SPEC:LAY FULL

Shows the spectrogram in window 4. The corresponding trace diagram is hidden.

Manual operation: See "[State](#)" on page 91**CALCulate<n>:SGRam[:STATe] <State>****CALCulate<n>:SPECtrogram[:STATe] <State>**

Turns the spectrogram on and off.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:SGR ON

Activates the Spectrogram result display.

CALCulate<n>:SGRam:THReedim[:STATe] <State>**CALCulate<n>:SPECtrogram:THReedim[:STATe] <State>**

Activates or deactivates a 3-dimensional spectrogram for the selected result display.

Suffix:<n> [Window](#)**Parameters:**

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

Example:

CALC:SPEC:THR:STAT ON

Manual operation: See "[3D Spectrogram State](#)" on page 91**CALCulate<n>:SGRam:TRACe <Trace>****CALCulate<n>:SPECtrogram:TRACe <Trace>**

This command determines the trace in the result display the Spectrogram is based on.

Suffix:<n> [Window](#)**Parameters:**

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
 How many traces are available depends on the selected result display.

Example:

CALC2:SPEC:TRAC TRACE3

CALCulate<n>:SGRam:TSTamp:DATA? <Frames>**CALCulate<n>:SPECtrogram:TSTamp:DATA? <Frames>**

Queries the starting time of the frames.

The return values consist of four values for each frame. If the "Spectrogram" is empty, the command returns '0,0,0,0'. The times are given as delta values, which simplifies evaluating relative results; however, you can also calculate the absolute date and time as displayed on the screen.

The frame results themselves are returned with TRAC:DATA? SGR

Suffix:<n> [Window](#)**Query parameters:**

<Frames> **CURRENT**
 Returns the starting time of the current frame.
ALL
 Returns the starting time for all frames. The results are sorted in descending order, beginning with the current frame.

Return values:

<Seconds>	Number of seconds that have passed since 01.01.1970 until the frame start
<Nanoseconds>	Number of nanoseconds that have passed <i>in addition to the</i> <Seconds> since 01.01.1970 until the frame start.
<Reserved>	The third value is reserved for future uses.
<Reserved>	The fourth value is reserved for future uses.

Example:

```
CALC:SGR:TST:DATA? ALL
```

Returns the starting times of all frames sorted in a descending order.

Usage:

Query only

Manual operation: See "Time Stamp" on page 92

CALCulate<n>:SGRam:TSTamp[:STATE] <State>

CALCulate<n>:SPECTrogram:TSTamp[:STATE] <State>

Activates and deactivates the time stamp.

If the time stamp is active, some commands do not address frames as numbers, but as (relative) time values:

- [CALCulate<n>:DELTaMarker<m>:SPECTrogram:FRAME](#) on page 284
- [CALCulate<n>:MARKer<m>:SPECTrogram:FRAME](#) on page 279
- [CALCulate<n>:SPECTrogram:FRAME:SElect](#) on page 258

Suffix:

<n> 1..n
[Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on

Example:

```
//Activates the time stamp
```

```
CALC:SGR:TST ON
```

Manual operation: See "Time Stamp" on page 92

10.8.1.2 Configuring the color map

DISPlay[:WINDow<n>]:SGRam:COLor:DEFault	262
DISPlay[:WINDow<n>]:SPECTrogram:COLor:DEFault	262
DISPlay[:WINDow<n>]:SGRam:COLor:LOWer	262
DISPlay[:WINDow<n>]:SPECTrogram:COLor:LOWer	262
DISPlay[:WINDow<n>]:SGRam:COLor:SHAPE	262

DISPlay[:WINDow<n>]:SPECtrogram:COLor:SHAPE.....	262
DISPlay[:WINDow<n>]:SGRam:COLor:UPPer.....	263
DISPlay[:WINDow<n>]:SPECtrogram:COLor:UPPer.....	263
DISPlay[:WINDow<n>]:SGRam:COLor[:STYLe].....	263
DISPlay[:WINDow<n>]:SPECtrogram:COLor[:STYLe].....	263

DISPlay[:WINDow<n>]:SGRam:COLor:DEFault
DISPlay[:WINDow<n>]:SPECtrogram:COLor:DEFault

Restores the original color map.

Suffix:

<n> [Window](#)

Manual operation: See "[Set to Default](#)" on page 95

DISPlay[:WINDow<n>]:SGRam:COLor:LOWer <Percentage>
DISPlay[:WINDow<n>]:SPECtrogram:COLor:LOWer <Percentage>

Defines the starting point of the color map.

Suffix:

<n> [Window](#)

Parameters:

<Percentage> Statistical frequency percentage.
 Range: 0 to 66
 *RST: 0
 Default unit: %

Example: DISP:WIND:SGR:COL:LOW 10
 Sets the start of the color map to 10%.

Manual operation: See "[Start / Stop](#)" on page 94

DISPlay[:WINDow<n>]:SGRam:COLor:SHAPE <Shape>
DISPlay[:WINDow<n>]:SPECtrogram:COLor:SHAPE <Shape>

Defines the shape and focus of the color curve for the spectrogram result display.

Suffix:

<n> [Window](#)

Parameters:

<Shape> Shape of the color curve.
 Range: -1 to 1
 *RST: 0

Manual operation: See "[Shape](#)" on page 95

DISPlay[:WINDow<n>]:SGRam:COLor:UPPer <Percentage>
DISPlay[:WINDow<n>]:SPEctrogram:COLor:UPPer <Percentage>

Defines the end point of the color map.

Suffix:

<n> [Window](#)

Parameters:

<Percentage> Statistical frequency percentage.
 Range: 0 to 66
 *RST: 0
 Default unit: %

Example:

DISP:WIND:SGR:COL:UPP 95
 Sets the start of the color map to 95%.

Manual operation: See ["Start / Stop"](#) on page 94

DISPlay[:WINDow<n>]:SGRam:COLor[:STYLE] <ColorScheme>
DISPlay[:WINDow<n>]:SPEctrogram:COLor[:STYLE] <ColorScheme>

Selects the color scheme.

Parameters:

<ColorScheme>

HOT

Uses a color range from blue to red. Blue colors indicate low levels, red colors indicate high ones.

COLD

Uses a color range from red to blue. Red colors indicate low levels, blue colors indicate high ones.

RADar

Uses a color range from black over green to light turquoise with shades of green in between.

GRAYscale

Shows the results in shades of gray.

*RST: HOT

Example:

DISP:WIND:SPEC:COL GRAY
 Changes the color scheme of the spectrogram to black and white.

Manual operation: See ["Hot/Cold/Radar/Grayscale"](#) on page 95

10.8.2 Configuring standard traces

Useful commands for trace configuration described elsewhere

- [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y:SPACing](#) on page 196

- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]`
on page 194

Remote commands exclusive to trace configuration

<code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE</code>	264
<code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONtinuous</code>	265
<code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SElect</code>	266
<code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]</code>	266
<code>[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]</code>	266
<code>[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]</code>	266
<code>[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum[:TYPE]</code>	266
<code>[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]</code>	267
<code>[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]</code>	267
<code>[SENSe:]ADEMod:FM[:TDOMain][:TYPE]</code>	267
<code>[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]</code>	267
<code>[SENSe:]ADEMod:PM[:TDOMain][:TYPE]</code>	267
<code>[SENSe:]ADEMod:SPECtrum[:TYPE]</code>	267
<code>[SENSe:]AVERage<n>:COUNT</code>	268
<code>[SENSe:]AVERage<n>[:STATe<t>]</code>	268
<code>[SENSe:]AVERage<n>:TYPE</code>	268
<code>[SENSe:][:WINDow<n>]:DETector<t>[:FUNCTION]</code>	269
<code>[SENSe:][:WINDow<n>]:DETector<t>[:FUNCTION]:AUTO</code>	269

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE <Mode>`

Selects the trace mode. If necessary, the selected trace is also activated.

For max hold, min hold or average trace mode, you can set the number of single measurements with `[SENSe:]SWEep:COUNT`. Note that synchronization to the end of the measurement is possible only in single sweep mode.

In the R&S FSV3 AM/FM/PM Modulation Analysis application, when you configure the traces for a window with a specific evaluation (e.g. AM time domain), the traces in all windows with the same evaluation are configured identically.

Suffix:

<n>	Window
<w>	subwindow Not supported by all applications
<t>	Trace

Parameters:

<Mode>	WRITE (default:) Overwrite mode: the trace is overwritten by each sweep.
	AVERage The average is formed over several sweeps. The "Sweep/Average Count" determines the number of averaging procedures.

MAXHold

The maximum value is determined over several sweeps and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is greater than the previous one.

MINHold

The minimum value is determined from several measurements and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is lower than the previous one.

VIEW

The current contents of the trace memory are frozen and displayed.

BLANK

Hides the selected trace.

*RST: Trace 1: WRITe, Trace 2-6: BLANK

Example:

```
INIT:CONT OFF
```

Switching to single sweep mode.

```
SWE:COUN 16
```

Sets the number of measurements to 16.

```
DISP:TRAC3:MODE WRIT
```

Selects clear/write mode for trace 3.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the measurement.

Manual operation: See ["Trace Mode"](#) on page 87

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONtinuous
<State>**

Turns an automatic reset of a trace on and off after a parameter has changed.

The reset works for trace modes min hold, max hold and average.

Note that the command has no effect if critical parameters like the span have been changed to avoid invalid measurement results

Suffix:

<n> [Window](#)

<w> subwindow

<t> [Trace](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: `DISP:WIND:TRAC3:MODE:HCON ON`
Switches off the reset function.

Manual operation: See "[Hold](#)" on page 89

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:SELEct

Selects the trace specified by the index <t> in the window specified by the index <n>. Only traces that are active in the specified result display can be selected. The selected trace is used to determine the "Result Summary" for the corresponding result display.

The query returns the number of the currently selected trace in the window specified by the index <n> (trace index is ignored). Traces can only be queried for graphical result displays (not "Result Summary", "Marker Table" or Peak Marker List).

Suffix:

<n> [Window](#)
<w> subwindow
<t> irrelevant

Example: `DISP:TRAC3:SEL`

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe] <State>

Turns a trace on and off.

The measurement continues in the background.

Suffix:

<n> [Window](#)
<w> subwindow
Not supported by all applications
<t> [Trace](#)

Parameters:

<State> `ON | OFF | 0 | 1`
OFF | 0
Switches the function off
ON | 1
Switches the function on

Example: `DISP:TRAC3 ON`

Manual operation: See "[Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6](#)" on page 87
See "[Trace 1/ Trace 2/ Trace 3/ Trace 4 \(Softkeys\)](#)" on page 90

`[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE] <TraceMode>...`

`[SENSe:]ADEMod:AM:RELative:TDOMain[:TYPE] <TraceMode>...`

`[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum[:TYPE] <TraceMode>...`

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE] <TraceMode>...
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE] <TraceMode>...
[SENSe:]ADEMod:FM[:TDOMain][:TYPE] <TraceMode>...
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE] <TraceMode>...
[SENSe:]ADEMod:PM[:TDOMain][:TYPE] <TraceMode>...
[SENSe:]ADEMod:SPECTrum[:TYPE] <TraceMode>...

Selects the trace modes of the evaluated signal to be measured simultaneously. For each of the six available traces a mode can be defined.

The trace modes are configured identically for all windows with a specific evaluation. The following table indicates which command syntax refers to which evaluation method.

Command syntax	Evaluation method
AM[:ABSolute][:TDOMain]	RF time domain
AM:RELative[:TDOMain]	AM time domain
AM:RELative:AFSPectrum	AM spectrum (relative)
FM[:TDOMain]	FM time domain
FM:AFSPectrum	FM spectrum
PM[:TDOMain]	PM time domain
PM:AFSPectrum	PM spectrum
SPECTrum	RF spectrum

Parameters:

<TraceMode>

WRITE | AVERage | MAXHold | MINHold | VIEW | OFF

WRITE

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

AVERage

The average is formed over several sweeps.

MAXHold

The maximum value is determined over several sweeps and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is greater than the previous one.

MINHold

The minimum value is determined from several measurements and displayed. The R&S FSV/A saves the sweep result in the trace memory only if the new value is lower than the previous one.

VIEW

The current contents of the trace memory are frozen and displayed.

OFF

Hides the selected trace.

*RST: WRITe,OFF,OFF,OFF,OFF,OFF

Example:

ADEM:AM AVER,MAXH,MINH,OFF,OFF,OFF

Determines average, max hold and min hold values simultaneously for the traces 1-3 of the RF time domain evaluation.

ADEM:AM WRIT,OFF,OFF,OFF,OFF,OFF

Determines only the current measurement values for trace 1.

ADEM:AM OFF,OFF,OFF,OFF,OFF,OFF

Switches AM demodulation off.

[SENSe:]AVERage<n>:COUNT <AverageCount>

Defines the number of sweeps that the application uses to average traces.

In case of continuous sweep mode, the application calculates the moving average over the average count.

In case of single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

Suffix:

<n> irrelevant

Parameters:

<AverageCount> If you set an average count of 0 or 1, the application performs one single sweep in single sweep mode.
In continuous sweep mode, if the average count is set to 0, a moving average over 10 sweeps is performed.

Range: 0 to 200000

*RST: 0

Manual operation: See "[Average Count](#)" on page 89

[SENSe:]AVERage<n>[:STATe<t>] <State>

Turns averaging for a particular trace in a particular window on and off.

Suffix:

<n> [Window](#)

<t> [Trace](#)

Parameters:

<State> ON | OFF | 1 | 0

[SENSe:]AVERage<n>:TYPE <Mode>

Selects the trace averaging mode.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<Mode> **LOGarithmic**
 The logarithmic power values are averaged.

LINear
 The power values are averaged before they are converted to logarithmic values.

POWER
 The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

Example:

AVER:TYPE LIN
 Switches to linear average calculation.

Manual operation: See "[Average Mode](#)" on page 89

[SENSe:][WINDow<n>:]DETEctor<t>[:FUNction] <Detector>

Defines the trace detector to be used for trace analysis.

Suffix:

<n> [Window](#)

<t> [Trace](#)

Example:

DET POS
 Sets the detector to "positive peak".

Manual operation: See "[Detector](#)" on page 88

[SENSe:][WINDow<n>:]DETEctor<t>[:FUNction]:AUTO <State>

Couples and decouples the detector to the trace mode.

Suffix:

<n> [Window](#)

<t> [Trace](#)

Parameters:

<State> ON | OFF | 0 | 1
 *RST: 1

Example:

DET:AUTO OFF
 The selection of the detector is not coupled to the trace mode.

Manual operation: See "[Detector](#)" on page 88

10.8.3 Working with markers remotely

In the R&S FSV3 AM/FM/PM Modulation Analysis application, up to 16 markers or delta markers can be activated for each window simultaneously.

More details are described for manual operation in [Chapter 6.4.4, "Marker function configuration"](#), on page 109.

- [Setting up individual markers](#).....270
- [General marker settings](#).....277
- [Marker search \(spectrograms\)](#).....278
- [Marker search settings](#).....287
- [Positioning the marker](#).....288
- [Configuring special marker functions](#).....292

10.8.3.1 Setting up individual markers

The following commands define the position of markers in the diagram.

CALCulate<n>:MARKer<m>:AOFF	270
CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md>	271
CALCulate<n>:MARKer<m>[:STATe]	271
CALCulate<n>:MARKer<m>:TRACe	271
CALCulate<n>:MARKer<m>:X	272
CALCulate<n>:MARKer<m>:Y?	272
CALCulate<n>:DELTamarker<m>:AOFF	273
CALCulate<n>:DELTamarker<m>:LINK	273
CALCulate<n>:DELTamarker<ms>:LINK:TO:MARKer<md>	273
CALCulate<n>:DELTamarker<m>:MODE	274
CALCulate<n>:DELTamarker<m>:MREFerence	274
CALCulate<n>:DELTamarker<m>[:STATe]	275
CALCulate<n>:DELTamarker<m>:TRACe	275
CALCulate<n>:DELTamarker<m>:X	275
CALCulate<n>:DELTamarker<m>:X:RELative?	276
CALCulate<n>:DELTamarker<m>:Y?	276

CALCulate<n>:MARKer<m>:AOFF

Turns off all markers.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

CALC:MARK:AOFF

Switches off all markers.

Manual operation: See ["All Markers Off"](#) on page 102

CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md> <State>

Links the normal source marker <ms> to any active destination marker <md> (normal or delta marker).

If you change the horizontal position of marker <md>, marker <ms> changes its horizontal position to the same value.

Suffix:

<n>	Window
<ms>	source marker, see Marker
<md>	destination marker, see Marker

Parameters:

<State>	ON OFF 0 1
	OFF 0
	Switches the function off
	ON 1
	Switches the function on

Example: `CALC:MARK4:LINK:TO:MARK2 ON`
Links marker 4 to marker 2.

Manual operation: See "[Linking to Another Marker](#)" on page 101

CALCulate<n>:MARKer<m>[:STATe] <State>

Turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.

Suffix:

<n>	Window
<m>	Marker

Parameters:

<State>	ON OFF 0 1
	OFF 0
	Switches the function off
	ON 1
	Switches the function on

Example: `CALC:MARK3 ON`
Switches on marker 3.

Manual operation: See "[Marker State](#)" on page 100
See "[Marker Type](#)" on page 101
See "[Select Marker](#)" on page 105

CALCulate<n>:MARKer<m>:TRACe <Trace>

Selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Trace> **1 to 6**
Trace number the marker is assigned to.

Example:

```
//Assign marker to trace 1
CALC:MARK3:TRAC 2
```

Manual operation: See ["Assigning the Marker to a Trace"](#) on page 101

CALCulate<n>:MARKer<m>:X <Position>

Moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.
The unit depends on the result display.
Range: The range depends on the current x-axis range.
Default unit: Hz

Example:

```
CALC:MARK2:X 1.7MHz
Positions marker 2 to frequency 1.7 MHz.
```

Manual operation: See ["Marker Table"](#) on page 26
See ["Marker Peak List"](#) on page 26
See ["Marker Position X-value"](#) on page 101

CALCulate<n>:MARKer<m>:Y?

Queries the result at the position of the specified marker.

Suffix:

<n> 1..n

<m> 1..n

Return values:

<Result> Default unit: DBM

Usage: Query only

Manual operation: See "[Marker Table](#)" on page 26
See "[Marker Peak List](#)" on page 26

CALCulate<n>:DELTamarker<m>:AOFF

Turns off *all* delta markers.

Suffix:

<n> [Window](#)

<m> irrelevant

Example:

CALC:DELT:AOff

Turns off all delta markers.

CALCulate<n>:DELTamarker<m>:LINK <State>

Links delta marker <m> to marker 1.

If you change the horizontal position (x-value) of marker 1, delta marker <m> changes its horizontal position to the same value.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:DELT2:LINK ON

Manual operation: See "[Linking to Another Marker](#)" on page 101

CALCulate<n>:DELTamarker<ms>:LINK:TO:MARKer<md> <State>

Links the delta source marker <ms> to any active destination marker <md> (normal or delta marker).

Suffix:

<n> [Window](#)

<ms> source marker, see [Marker](#)

<md> destination marker, see [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: `CALC:DELT4:LINK:TO:MARK2 ON`
Links the delta marker 4 to the marker 2.

Manual operation: See "[Linking to Another Marker](#)" on page 101

CALCulate<n>:DELTaMarker<m>:MODE <Mode>

Defines whether the position of a delta marker is provided as an absolute value or relative to a reference marker. Note that this setting applies to *all* windows.

Note that when the position of a delta marker is *queried*, the result is always an absolute value (see `CALCulate<n>:DELTaMarker<m>:X` on page 275)!

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Mode>

ABSolute

Delta marker position in absolute terms.

RELative

Delta marker position in relation to a reference marker.

*RST: RELative

Example: `CALC:DELT:MODE ABS`
Absolute delta marker position.

CALCulate<n>:DELTaMarker<m>:MREFerence <Reference>

Selects a reference marker for a delta marker other than marker 1.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Reference>

1 to 16

Selects markers 1 to 16 as the reference.

Example: `CALC:DELT3:MREF 2`
Specifies that the values of delta marker 3 are relative to marker 2.

Manual operation: See "[Reference Marker](#)" on page 101

CALCulate<n>:DELTamarker<m>[:STATe] <State>

Turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:DELT2 ON

Turns on delta marker 2.

Manual operation: See ["Marker State"](#) on page 100
 See ["Marker Type"](#) on page 101
 See ["Select Marker"](#) on page 105

CALCulate<n>:DELTamarker<m>:TRACe <Trace>

Selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Trace> Trace number the marker is assigned to.

Example:

CALC:DELT2:TRAC 2

Positions delta marker 2 on trace 2.

CALCulate<n>:DELTamarker<m>:X <Position>

Moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Position> Numeric value that defines the marker position on the x-axis. The position is relative to the reference marker. To select an absolute position you have to change the delta marker mode with `CALCulate<n>:DELTAmarker<m>:MODE` on page 274. A query returns the absolute position of the delta marker.
 Range: The value range and unit depend on the measurement and scale of the x-axis.
 Default unit: HZ

Example: `CALC:DELT:1:X?`
 Outputs the absolute x-value of delta marker 1.

Manual operation: See "[Marker Position X-value](#)" on page 101

CALCulate<n>:DELTAmarker<m>:X:RELative?

Queries the relative position of a delta marker on the x-axis. If necessary, the command activates the delta marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Return values:

<Position> Position of the delta marker in relation to the reference marker.

Example: `CALC:DELT3:X:REL?`
 Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Usage: Query only

CALCulate<n>:DELTAmarker<m>:Y?

Queries the result at the position of the specified delta marker.

Suffix:

<n> 1..n

<m> 1..n

Return values:

<Result> Result at the position of the delta marker. The unit is variable and depends on the one you have currently set.
 Default unit: DBM

Usage: Query only

10.8.3.2 General marker settings

The following commands control general marker functionality.

See also "[Fixed reference marker settings](#)" on page 293

CALCulate<n>:MARKer<m>:X:SSize	277
CALCulate<n>:MARKer<m>:LINK	277
DISPlay[:WINDow<n>]:MINFo[:STATe]	278
DISPlay[:WINDow<n>]:MTABle	278

CALCulate<n>:MARKer<m>:X:SSize <StepSize>

Selects the marker step size mode for *all* markers in *all* windows.

It therefore takes effect in manual operation only.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<StepSize>

STANDARD

the marker moves from one pixel to the next

POINTS

the marker moves from one sweep point to the next

*RST: POINTs

Example:

`CALC:MARK:X:SSIZ STAN`

Sets the marker step size to one pixel.

Manual operation: See "[Marker Stepsize](#)" on page 103

CALCulate<n>:MARKer<m>:LINK <DisplayType>

Links the specified marker in all displays of the specified type.

Suffix:

<n> irrelevant

<m> [Marker](#)

Parameters:

<DisplayType>

TIME | SPECtrum | BOTH | NONE

TIME

Links the markers in all time domain diagrams

SPECtrum

Links the markers in all AF Spectrum displays

BOTH

Links the markers both in the time domain diagrams and in the AF Spectrum displays

NONE

Markers are not linked.

*RST: NONE

Manual operation: See ["Link Time Marker"](#) on page 104
See ["Link AF Spectrum Marker"](#) on page 104

DISPlay[:WINDow<n>]:MINFo[:STATe] <State>

Turns the marker information in all diagrams on and off.

Suffix:

<n> irrelevant

Parameters:

<State>

ON | 1

Displays the marker information in the diagrams.

OFF | 0

Hides the marker information in the diagrams.

*RST: 1

Example:

DISP:MINF OFF

Hides the marker information.

Manual operation: See ["Marker Info"](#) on page 103

DISPlay[:WINDow<n>]:MTABle <DisplayMode>

Turns the marker table on and off.

Suffix:

<n> irrelevant

Parameters:

<DisplayMode>

ON | 1

Turns on the marker table.

OFF | 0

Turns off the marker table.

AUTO

Turns on the marker table if 3 or more markers are active.

*RST: AUTO

Example:

DISP:MTAB ON

Activates the marker table.

Manual operation: See ["Marker Table Display"](#) on page 102

10.8.3.3 Marker search (spectrograms)

The following commands automatically define the marker and delta marker position in the spectrogram.

Using markers

The following commands control spectrogram markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the markers.

- `CALCulate<n>:MARKer<m>:MAXimum:LEFT` on page 288
- `CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 289
- `CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 289
- `CALCulate<n>:MARKer<m>:MAXimum:RIGHT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 290
- `CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 290

Remote commands exclusive to spectrogram markers

<code>CALCulate<n>:MARKer<m>:SGRam:FRAME</code>	279
<code>CALCulate<n>:MARKer<m>:SPEctrogram:FRAME</code>	279
<code>CALCulate<n>:MARKer<m>:SGRam:SARea</code>	280
<code>CALCulate<n>:MARKer<m>:SPEctrogram:SARea</code>	280
<code>CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]</code>	280
<code>CALCulate<n>:MARKer<m>:SPEctrogram:XY:MAXimum[:PEAK]</code>	280
<code>CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]</code>	280
<code>CALCulate<n>:MARKer<m>:SPEctrogram:XY:MINimum[:PEAK]</code>	280
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE</code>	281
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MAXimum:ABOVE</code>	281
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW</code>	281
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MAXimum:BELOW</code>	281
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT</code>	281
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MAXimum:NEXT</code>	281
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]</code>	281
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MAXimum[:PEAK]</code>	281
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE</code>	282
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MINimum:ABOVE</code>	282
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW</code>	282
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MINimum:BELOW</code>	282
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT</code>	282
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MINimum:NEXT</code>	282
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]</code>	283
<code>CALCulate<n>:MARKer<m>:SPEctrogram:Y:MINimum[:PEAK]</code>	283

`CALCulate<n>:MARKer<m>:SGRam:FRAME` <Frame>

`CALCulate<n>:MARKer<m>:SPEctrogram:FRAME` <Frame> | <Time>

Positions a marker on a particular frame.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**

<Frame> Selects a frame directly by the frame number. Valid if the time stamp is off.
The range depends on the history depth.
Default unit: S

<Time> Selects a frame via its time stamp. Valid if the time stamp is on.
The number is the (negative) distance to frame 0 in seconds.
The range depends on the history depth.

Example:

```
CALC:MARK:SGR:FRAM -20
```

Sets the marker on the 20th frame before the present.

```
CALC:MARK2:SGR:FRAM -2s
```

Sets second marker on the frame 2 seconds ago.

```
CALCulate<n>:MARKer<m>:SGRam:SARea <SearchArea>
```

```
CALCulate<n>:MARKer<m>:SPECTrogram:SARea <SearchArea>
```

Defines the marker search area for all spectrogram markers in the channel.

Parameters:

<SearchArea>

VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

```
*RST: VISible
```

Manual operation: See "[Marker Search Area](#)" on page 108

```
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]
```

```
CALCulate<n>:MARKer<m>:SPECTrogram:XY:MAXimum[:PEAK]
```

Moves a marker to the highest level of the spectrogram.

Suffix:<n> [Window](#)<m> [Marker](#)

```
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]
```

```
CALCulate<n>:MARKer<m>:SPECTrogram:XY:MINimum[:PEAK]
```

Moves a marker to the minimum level of the spectrogram.

Suffix:<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVE

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum[:PEAK]

Moves a marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE**CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVE**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Mode for Next Peak in Y-Direction"](#) on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW**CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Mode for Next Peak in Y-Direction"](#) on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT**CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Mode for Next Peak in Y-Direction"](#) on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]

CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum[:PEAK]

Moves a marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level for all frequencies and moves the marker vertically to the minimum level.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Using delta markers

The following commands control spectrogram delta markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the delta markers.

- [CALCulate<n>:DELTaMarker<m>:MAXimum:LEFT](#) on page 290
- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) on page 291
- [CALCulate<n>:DELTaMarker<m>:MAXimum\[:PEAK\]](#) on page 291
- [CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT](#) on page 291
- [CALCulate<n>:DELTaMarker<m>:MINimum:LEFT](#) on page 291
- [CALCulate<n>:DELTaMarker<m>:MINimum:NEXT](#) on page 292
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) on page 292
- [CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT](#) on page 292

Remote commands exclusive to spectrogram markers

CALCulate<n>:DELTaMarker<m>:SGRam:FRAMe	284
CALCulate<n>:DELTaMarker<m>:SPECTrogram:FRAMe	284
CALCulate<n>:DELTaMarker<m>:SGRam:SARea	284
CALCulate<n>:DELTaMarker<m>:SPECTrogram:SARea	284
CALCulate<n>:DELTaMarker<m>:SGRam:XY:MAXimum[:PEAK]	285
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MAXimum[:PEAK]	285
CALCulate<n>:DELTaMarker<m>:SGRam:XY:MINimum[:PEAK]	285
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MINimum[:PEAK]	285
CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:ABOVe	285
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:ABOVe	285
CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:BELow	285
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:BELow	285
CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:NEXT	285
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:NEXT	285
CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum[:PEAK]	286
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum[:PEAK]	286

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe.....	286
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVe.....	286
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELow.....	286
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELow.....	286
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT.....	287
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:NEXT.....	287
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK].....	287
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum[:PEAK].....	287

CALCulate<n>:DELTamarker<m>:SGRam:FRAME <Frame>

CALCulate<n>:DELTamarker<m>:SPECTrogram:FRAME <Frame>

Positions a delta marker on a particular frame. The frame is relative to the position of marker 1.

The command is available for the spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Frame> Selects a frame either by its frame number or time stamp.
The frame number is available if the time stamp is off. The range depends on the history depth.
The time stamp is available if the time stamp is on. The number is the distance to frame 0 in seconds. The range depends on the history depth.

Default unit: S

Example:

`CALC:DELT4:SGR:FRAM -20`

Sets fourth deltamarker 20 frames below marker 1.

`CALC:DELT4:SGR:FRAM 2 s`

Sets fourth deltamarker 2 seconds above the position of marker 1.

CALCulate<n>:DELTamarker<m>:SGRam:SARea <SearchArea>

CALCulate<n>:DELTamarker<m>:SPECTrogram:SARea <SearchArea>

Defines the marker search area for *all* spectrogram markers in the channel.

Parameters:

<SearchArea>

VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

*RST: VISible

Manual operation: See "[Marker Search Area](#)" on page 108

CALCulate<n>:DELTaMarker<m>:SGRam:XY:MAXimum[:PEAK]
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MAXimum[:PEAK]

Moves a marker to the highest level of the spectrogram over all frequencies.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTaMarker<m>:SGRam:XY:MINimum[:PEAK]
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MINimum[:PEAK]

Moves a delta marker to the minimum level of the spectrogram over all frequencies.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:ABOVE
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:ABOVE

Moves a marker vertically to the next higher level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:BELOW
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:BELOW

Moves a marker vertically to the next higher level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:NEXT
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:NEXT

Moves a delta marker vertically to the next higher level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum[:PEAK]

Moves a delta marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVE

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELOW

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum:NEXT
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MINimum:NEXT

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum[:PEAK]
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MINimum[:PEAK]

Moves a delta marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level in the whole spectrogram and moves the marker vertically to the minimum level.

Suffix:

<n> [Window](#)

<m> [Marker](#)

10.8.3.4 Marker search settings

The following commands define criteria for searches.

[CALCulate<n>:MARKer<m>:PEXCursion](#).....287

CALCulate<n>:MARKer<m>:PEXCursion <Excursion>

Defines the peak excursion (for *all* markers in *all* windows).

The peak excursion sets the requirements for a peak to be detected during a peak search.

The unit depends on the measurement.

Application/Result display	Unit
Spectrum	dB
ADEMOD, RF	dB
ADEMOD, AM	PCT
ADEMOD, FM	kHz
ADEMOD, PM	RAD

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Excursion> The excursion is the distance to a trace maximum that must be attained before a new maximum is recognized, or the distance to a trace minimum that must be attained before a new minimum is recognized

*RST: 5 PCT in AM displays, 50 kHz in FM displays, (0.5 RAD in PM displays)

Example:

CALC:MARK:PEXC 10dB

Defines peak excursion as 10 dB.

Manual operation: See "[Peak Excursion](#)" on page 105

10.8.3.5 Positioning the marker

This chapter contains remote commands necessary to position the marker on a trace.

- [Positioning normal markers](#).....288
- [Positioning delta markers](#).....290

Positioning normal markers

The following commands position markers on the trace.

CALCulate<n>:MARKer<m>:MAXimum:LEFT	288
CALCulate<n>:MARKer<m>:MAXimum:NEXT	289
CALCulate<n>:MARKer<m>:MAXimum[:PEAK]	289
CALCulate<n>:MARKer<m>:MAXimum:RIGHT	289
CALCulate<n>:MARKer<m>:MINimum:LEFT	289
CALCulate<n>:MARKer<m>:MINimum:NEXT	289
CALCulate<n>:MARKer<m>:MINimum[:PEAK]	290
CALCulate<n>:MARKer<m>:MINimum:RIGHT	290

CALCulate<n>:MARKer<m>:MAXimum:LEFT

Moves a marker to the next positive peak.

The search includes only measurement values to the left of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 106

CALCulate<n>:MARKer<m>:MAXimum:NEXT

Moves a marker to the next positive peak.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 106

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

Moves a marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Peak Search"](#) on page 106

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

Moves a marker to the next positive peak.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 106

CALCulate<n>:MARKer<m>:MINimum:LEFT

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 106

CALCulate<n>:MARKer<m>:MINimum:NEXT

Moves a marker to the next minimum peak value.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 106**CALCulate<n>:MARKer<m>:MINimum[:PEAK]**

Moves a marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Minimum](#)" on page 106**CALCulate<n>:MARKer<m>:MINimum:RIGHT**

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 106**Positioning delta markers**

The following commands position delta markers on the trace.

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT	290
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT	291
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]	291
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT	291
CALCulate<n>:DELTamarker<m>:MINimum:LEFT	291
CALCulate<n>:DELTamarker<m>:MINimum:NEXT	292
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]	292
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT	292

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

Moves a delta marker to the next positive peak value.

The search includes only measurement values to the left of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Peak](#)" on page 106**CALCulate<n>:DELTamarker<m>:MAXimum:NEXT**

Moves a marker to the next positive peak value.

Suffix:<n> 1..n
[Window](#)<m> 1..n
[Marker](#)**Manual operation:** See "[Search Next Peak](#)" on page 106**CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]**

Moves a delta marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Peak Search](#)" on page 106**CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT**

Moves a delta marker to the next positive peak value on the trace.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Peak](#)" on page 106**CALCulate<n>:DELTamarker<m>:MINimum:LEFT**

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 106**CALCulate<n>:DELTamarker<m>:MINimum:NEXT**

Moves a marker to the next minimum peak value.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 106**CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]**

Moves a delta marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Minimum](#)" on page 106**CALCulate<n>:DELTamarker<m>:MINimum:RIGHT**

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 106**10.8.3.6 Configuring special marker functions**

The following commands are required to configure the special marker functions that are available in the R&S FSV3 AM/FM/PM Modulation Analysis application.

- [Fixed reference marker settings](#).....293
- [Marker peak lists](#).....295
- [N db down marker](#).....299

- [Phase noise measurement marker](#)..... 303
- [Band power marker](#).....304
- [Configuring and retrieving AF phase marker values](#)..... 308

Fixed reference marker settings

The following commands configure a fixed reference marker.

CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]	293
CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X	293
CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y	294
CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y:OFFSet	294
CALCulate<n>:DELTamarker<m>:FUNction:FIXed[:STATE]	294

CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]

Moves the fixed reference marker to the peak power.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

`CALC:DELT:FUNC:FIX:RPO:MAX`

Sets the reference point level for delta markers to the peak of the selected trace.

Manual operation: See ["Defining a Fixed Reference"](#) on page 103

CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X <RefPoint>

Defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<RefPoint> Numeric value that defines the horizontal position of the reference.

For frequency domain measurements, it is a frequency in Hz.

For time domain measurements, it is a point in time in s.

*RST: Fixed Reference: OFF

Default unit: HZ

Example:

`CALC:DELT:FUNC:FIX:RPO:X 128 MHz`

Sets the frequency reference to 128 MHz.

Manual operation: See ["Defining a Fixed Reference"](#) on page 103

CALCulate<n>:DELTaMarker<m>:FUNction:FIXed:RPOint:Y <RefPointLevel>

Defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<RefPoint> Numeric value that defines the vertical position of the reference. The unit and value range is variable.

*RST: Fixed Reference: OFF

Default unit: DBM

Example:

CALC:DELT:FUNC:FIX:RPO:Y -10dBm

Sets the reference point level for delta markers to -10 dBm.

Manual operation: See ["Defining a Fixed Reference"](#) on page 103

CALCulate<n>:DELTaMarker<m>:FUNction:FIXed:RPOint:Y:OFFSet <Offset>

Defines a level offset for the fixed delta marker reference point.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Offset> Numeric value

*RST: 0

Default unit: dB

CALCulate<n>:DELTaMarker<m>:FUNction:FIXed[:STATe] <State>

Activates or deactivates a marker that defines a fixed reference point for relative marker analysis.

If necessary, the command activates a marker and positions it on the peak power.

Subsequently, you can change the coordinates of the fixed reference independent of the marker. The fixed reference is independent of the trace and is applied to all active delta markers.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:DELT:FUNC:FIX ON

Switches on the measurement with fixed reference value for all delta markers.

CALC:DELT:FUNC:FIX:RPO:X 128 MHZ

Sets the frequency reference to 128 MHz.

CALC:DELT:FUNC:FIX:RPO:Y 30 DBM

Sets the reference level to +30 dBm.

Manual operation: See ["Defining a Fixed Reference"](#) on page 103**Marker peak lists****Useful commands for peak lists described elsewhere**

- [CALCulate<n>:MARKer<m>:PEXCursion](#) on page 287
- [MMEMory:STORe<n>:PEAK](#) on page 299
- [Chapter 10.8.3.4, "Marker search settings"](#), on page 287

Remote commands exclusive to peak lists

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANNOtation:LABel[:STATe]	295
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNt?	296
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks[:IMMEDIATE]	296
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE	296
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT	297
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STATe	297
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X?	298
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?	298
MMEMory:STORe<n>:LIST	298
MMEMory:STORe<n>:PEAK	299

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANNOtation:LABel[:STATe]
<State>

Turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**

<State> ON | OFF | 0 | 1

*RST: 1

Example:

CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF

Removes the peak labels from the diagram

Manual operation: See "[Display Marker Numbers](#)" on page 117

CALCulate<n>:MARKer<m>:FUNction:FPEaks:COUNT?

Queries the number of peaks that have been found during a peak search.

The actual number of peaks that have been found may differ from the number of peaks you have set to be found because of the peak excursion.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<NumberOfPeaks>

Example: `CALC:MARK:FUNC:FPE:COUN?`
 Queries the number of peaks.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:FPEaks[:IMMEDIATE] <Peaks>

Initiates a peak search.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Peaks> This parameter defines the number of peaks to find during the search.

Note that the actual number of peaks found during the search also depends on the peak excursion you have set with [CALCulate<n>:MARKer<m>:PEXCursion](#).

Range: 1 to 200

Example: `CALC:MARK:PEXC 5`
 Defines a peak excursion of 5 dB, i.e. peaks must be at least 5 dB apart to be detected as a peak.
`CALC:MARK:FUNC:FPE 10`
 Initiates a search for 10 peaks on the current trace.

CALCulate<n>:MARKer<m>:FUNction:FPEaks:LIST:SIZE <MaxNoPeaks>

Defines the maximum number of peaks that the R&S FSV/A looks for during a peak search.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.
 Range: 1 to 500
 *RST: 50

Example:

CALC:MARK:FUNC:FPE:LIST:SIZE 10
 The marker peak list will contain a maximum of 10 peaks.

Manual operation: See "[Maximum Number of Peaks](#)" on page 117

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT <SortMode>

Selects the order in which the results of a peak search are returned.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<SortMode> **X**
 Sorts the peaks according to increasing position on the x-axis.
Y
 Sorts the peaks according to decreasing position on the y-axis.
 *RST: X

Example:

CALC:MARK:FUNC:FPE:SORT Y
 Sets the sort mode to decreasing y values

Manual operation: See "[Sort Mode](#)" on page 117

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:STATe <State>

Turns a peak search on and off.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

CALC:MARK:FUNC:FPE:STAT ON
 Activates marker peak search

Manual operation: See "[Peak List State](#)" on page 117

CALCulate<n>:MARKer<m>:FUNction:FPEaks:X?

Queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with [CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT](#).

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:FPEaks:Y?

Queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with [CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT](#).

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Usage: Query only

MMEMory:STORe<n>:LIST <FileName>

Exports the SEM and spurious emission list evaluation to a file.

The file format is *.dat.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Suffix:

<n> [Window](#)

Parameters:

<FileName> String containing the path and name of the target file.

Example:

```
MMEM:STOR:LIST 'test'
```

Stores the current list evaluation results in the `test.dat` file.

MMEMory:STORe<n>:PEAK <FileName>

Exports the marker peak list to a file.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSV3000/ FSVA3000 base unit user manual.

Suffix:

<n> [Window](#)

Parameters:

<FileName> String containing the path, name and extension of the target file.

Example:

```
MMEM:STOR:PEAK 'test.dat'
```

Saves the current marker peak list in the file `test.dat`.

Manual operation: See ["Export Peak List"](#) on page 118

N db down marker

The following commands control the n dB down markers.

CALCulate<n>:MARKer<m>:FUNCTion:NDBDown	299
CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:FREQuency?	300
CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:QFACTOR?	301
CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:RESult?	301
CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:STATE	301
CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:TIME?	302

CALCulate<n>:MARKer<m>:FUNCTion:NDBDown <Distance>

Defines the distance of the n dB down markers to the reference marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Distance> Distance of the temporary markers to the reference marker in dB.
 For a positive offset, the markers T1 and T2 are placed *below* the active reference point.
 For a negative offset (for example for notch filter measurements), the markers T1 and T2 are placed *above* the active reference point.
***RST:** 6dB
 Default unit: DB

Example:

```
CALC:MARK:FUNC:NDBD 3dB
```

Sets the distance to the reference marker to 3 dB.

CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREQuency?

Queries the position of the n dB down markers on the x-axis when measuring in the frequency domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 233.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<Frequency> **<frequency 1>**
 absolute frequency of the n dB marker to the left of the reference marker in Hz
<frequency 2>
 absolute frequency of the n dB marker to the right of the reference marker in Hz.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:FREQ?
```

This command would return, for example, 100000000, 200000000, meaning that the first marker position is at 100 MHz, the second marker position is at 200 MHz

Usage: Query only

Manual operation: See "[n dB down Value](#)" on page 112

CALCulate<n>:MARKer<m>:FUNction:NDBDown:QFActor?

Queries the Q factor of n dB down measurements.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<QFactor>

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?

Queries the distance of the n dB down markers from each other.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 233.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<Distance> The result depends on the span.
In case of frequency domain measurements, the command returns the bandwidth between the two n dB down markers in Hz.
In case of time domain measurements, the command returns the pulse width between the two n dB down markers in seconds.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:RES?
```

Outputs the measured value.

Usage: Query only

Manual operation: See "[n dB down Marker State](#)" on page 112

CALCulate<n>:MARKer<m>:FUNction:NDBDown:STATe <State>

Turns the n dB Down marker function on and off.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

```
CALC:MARK:FUNC:NDBD:STAT ON
```

Turns the n dB Down marker on.

Manual operation: See "[n dB down Marker State](#)" on page 112

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?

Queries the position of the n dB down markers on the x-axis when measuring in the time domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 233.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<TimeX1> absolute position in time of the n dB marker to the left of the reference marker in seconds

<TimeX2> absolute position in time of the n dB marker to the right of the reference marker in seconds

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:TIME?
```

Outputs the time values of the temporary markers.

Usage:

Query only

Manual operation: See "[n dB down Value](#)" on page 112

Phase noise measurement marker

The following commands control the phase noise measurement marker function.

CALCulate<n>:MARKer<m>:FUNction:PNOise:AOff.....	303
CALCulate<n>:MARKer<m>:FUNction:PNOise[:STATe].....	303
CALCulate<n>:MARKer<m>:FUNction:PNOise:RESult?.....	303

CALCulate<n>:MARKer<m>:FUNction:PNOise:AOff

Removes all phase noise markers in the specified window.

Suffix:

<n> Window

<m> irrelevant

Example: CALC:MARK:FUNC:PNO:AOff

CALCulate<n>:MARKer<m>:FUNction:PNOise[:STATe] <State>

Turns the phase noise measurement at the marker position on and off.

Suffix:

<n> Window

<m> Marker

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: CALC:MARK2:FUNC:PNO ON

Switches on the phase-noise measurement for the marker 2.

Manual operation: See "[Phase Noise Measurement State](#)" on page 114
 See "[Switching All Phase Noise Measurements Off](#)"
 on page 114

CALCulate<n>:MARKer<m>:FUNction:PNOise:RESult?

Queries the result of a phase noise measurement.

If necessary, the command activates the measurement first.

Suffix:

<n> Window

<m> Marker

Return values:

<PhaseNoise> numeric value
The difference between the measured carrier power and the noise power at the position of the specified (normal) marker.

Example:

```
CALC:MARK2:FUNC:PNO:RES?
```

Outputs the result of phase-noise measurement of the marker 2.

Usage:

Query only

Manual operation: See "[Phase Noise Measurement State](#)" on page 114

Band power marker

The following commands control the marker for band power measurements.

Using markers

CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:AOFF	304
CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:MODE	304
CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:RESult?	305
CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:SPAN	305
CALCulate<n>:MARKer<m>:FUNCTION:BPOWER[:STATE]	305

CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:AOFF

Removes all band power markers in the specified window.

Suffix:

<n> [Window](#)

<m> irrelevant

Example:

```
CALC:MARK:FUNC:BPOW:AOFF
```

CALCulate<n>:MARKer<m>:FUNCTION:BPOWER:MODE <Mode>

Selects the way the results for a band power marker are displayed.

(Note: relative power results are only available for delta markers, see [.CALCulate<n>:DELTAmarker<m>:FUNCTION:BPOWER:MODE](#) on page 306)

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Mode>

POWER

Result is displayed as an absolute power. The power unit depends on the [CALCulate<n>:UNIT:POWER](#) setting.

DENSITY

Result is displayed as a density in dBm/Hz.

*RST: POWER

Example: `CALC:MARK4:FUNC:BPOW:MODE DENS`
Configures marker 4 to show the measurement results in dBm/Hz.

Manual operation: See "[Power Mode](#)" on page 121

CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:RESult?

Queries the results of the band power measurement.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Return values:

<Power> Signal power over the marker bandwidth.

Example:

Activate the band power marker:

`CALC:MARK:FUNC:BPOW:STAT ON`

Select the density mode for the result:

`CALC:MARK:FUNC:BPOW:MODE DENS`

Query the result:

`CALC:MARK:FUNC:BPOW:RES?`

Response:

20dBm/Hz

Usage: Query only

**CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:SPAN **

Defines the bandwidth around the marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

 Frequency. The maximum span depends on the marker position and R&S FSV/A model.

*RST: 5% of current span

Default unit: Hz

Example:

`CALC:MARK:FUNC:BPOW:SPAN 2MHz`

Measures the band power over 2 MHz around the marker.

Manual operation: See "[Span](#)" on page 120

CALCulate<n>:MARKer<m>:FUNCTion:BPOWer[:STATe] <State>

Turns markers for band power measurements on and off.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:MARK4:FUNC:BPOW:STAT ON

Activates or turns marker 4 into a band power marker.

Manual operation:See ["Band Power Measurement State"](#) on page 120See ["Switching All Band Power Measurements Off"](#) on page 121**Using delta markers**

CALCulate<n>:DELTamarker<m>:FUNCTion:BPOWer:MODE	306
CALCulate<n>:DELTamarker<m>:FUNCTion:BPOWer:RESult?	307
CALCulate<n>:DELTamarker<m>:FUNCTion:BPOWer:SPAN	307
CALCulate<n>:DELTamarker<m>:FUNCTion:BPOWer[:STATe]	307

CALCulate<n>:DELTamarker<m>:FUNCTion:BPOWer:MODE <Mode>

Selects the way the results for a band power delta marker are displayed.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**

<Mode>

POWERResult is displayed as an absolute power. The power unit depends on the [CALCulate<n>:UNIT:POWER](#) setting.**DENSITY**

Result is displayed as a density in dBm/Hz.

RPOWER

This setting is only available for a delta band power marker. The result is the difference between the absolute power in the band around the delta marker and the absolute power for the reference marker. The powers are subtracted logarithmically, so the result is a dB value.

$$[\text{Relative band power (Delta2) in dB}] = [\text{absolute band power (Delta2) in dBm}] - [\text{absolute (band) power of reference marker in dBm}]$$
For details see ["Relative band power markers"](#) on page 118.

*RST: POWER

Manual operation:See ["Power Mode"](#) on page 121

CALCulate<n>:DELTamarker<m>:FUNCTioN:BPOWer:RESult?

Queries the results of the band power measurement.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Return values:

<Power> Signal power over the delta marker bandwidth.

Usage: Query only

**CALCulate<n>:DELTamarker<m>:FUNCTioN:BPOWer:SPAN **

Defines the bandwidth around the delta marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

 Frequency. The maximum span depends on the marker position and R&S FSV/A model.

*RST: 5% of current span

Default unit: Hz

Manual operation: See "[Span](#)" on page 120

CALCulate<n>:DELTamarker<m>:FUNCTioN:BPOWer[:STATe] <State>

Turns delta markers for band power measurements on and off.

If necessary, the command also turns on a reference marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Manual operation: See "[Band Power Measurement State](#)" on page 120
See "[Switching All Band Power Measurements Off](#)" on page 121

Configuring and retrieving AF phase marker values

CALCulate<n>:DELTaMarker<m>:FUNction:AFPHase:RESult?.....	308
CALCulate<n>:DELTaMarker<m>:FUNction:AFPHase[:STATe].....	308
CALCulate<n>:MARKer<m>:FUNction:AFPHase:RESult?.....	309
CALCulate<n>:MARKer<m>:FUNction:AFPHase[:STATe].....	309

CALCulate<n>:DELTaMarker<m>:FUNction:AFPHase:RESult?

Returns the phase value at the selected marker position. If necessary, the function is activated for the selected window first.

Suffix:

<n>	1..n Window
<m>	1..n Marker

Return values:

<AfPhase>

Example:

CALC3:DELT2:FUNC:AFPH:RES?

Enables the phase marker for deltamarker 2 in window 3 and returns the phase value for that marker.

Usage:

Query only

CALCulate<n>:DELTaMarker<m>:FUNction:AFPHase[:STATe] <State>

Is only available for AF spectrum result displays. If enabled, the phase value at each marker position is included in the marker table. The function is always enabled for all active markers in the selected display, it cannot be disabled for individual markers.

Suffix:

<n>	1..n Window
<m>	1..n irrelevant

Parameters:

<State>	ON OFF 0 1 OFF 0 Switches the function off ON 1 Switches the function on *RST: 0
---------	---

Example:

CALC:DELT:FUNC:AFPH:STAT ON

CALCulate<n>:MARKer<m>:FUNction:AFPHase:RESult?

Returns the phase value at the selected marker position. If necessary, the function is activated for the selected window first.

Suffix:

<n> 1..n
Window

<m> 1..n
Marker

Return values:

<AfPhase>

Example:

CALC3:MARK2:FUNC:AFPH:RES?

Enables the phase marker for marker 2 in window 3 and returns the phase value for that marker.

Usage:

Query only

CALCulate<n>:MARKer<m>:FUNction:AFPHase[:STATe] <State>

Is only available for AF spectrum result displays. If enabled, the phase value at each marker position is included in the marker table. The function is always enabled for all active markers in the selected display, it cannot be disabled for individual markers.

Suffix:

<n> 1..n
Window

<m> 1..n
irrelevant

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on
*RST: 0

Example:

CALC3:MARK:FUNC:AFPH:STAT ON

10.8.4 Marker search (spectrograms)

The following commands automatically define the marker and delta marker position in the spectrogram.

10.8.4.1 Using markers

The following commands control spectrogram markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the markers.

- `CALCulate<n>:MARKer<m>:MAXimum:LEFT` on page 288
- `CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 289
- `CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 289
- `CALCulate<n>:MARKer<m>:MAXimum:RIGHT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 289
- `CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 290
- `CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 290

Remote commands exclusive to spectrogram markers

<code>CALCulate<n>:MARKer<m>:SGRam:FRAME</code>	310
<code>CALCulate<n>:MARKer<m>:SPECTrogram:FRAME</code>	310
<code>CALCulate<n>:MARKer<m>:SGRam:SARea</code>	311
<code>CALCulate<n>:MARKer<m>:SPECTrogram:SARea</code>	311
<code>CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]</code>	311
<code>CALCulate<n>:MARKer<m>:SPECTrogram:XY:MAXimum[:PEAK]</code>	311
<code>CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]</code>	311
<code>CALCulate<n>:MARKer<m>:SPECTrogram:XY:MINimum[:PEAK]</code>	311
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE</code>	312
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVE</code>	312
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW</code>	312
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW</code>	312
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT</code>	312
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT</code>	312
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]</code>	312
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum[:PEAK]</code>	312
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE</code>	313
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVE</code>	313
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW</code>	313
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW</code>	313
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT</code>	313
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT</code>	313
<code>CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]</code>	313
<code>CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum[:PEAK]</code>	313

`CALCulate<n>:MARKer<m>:SGRam:FRAME` <Frame>

`CALCulate<n>:MARKer<m>:SPECTrogram:FRAME` <Frame> | <Time>

Positions a marker on a particular frame.

Suffix:

<n>	Window
<m>	Marker

Parameters:

<Frame> Selects a frame directly by the frame number. Valid if the time stamp is off.

The range depends on the history depth.

Default unit: S

<Time> Selects a frame via its time stamp. Valid if the time stamp is on. The number is the (negative) distance to frame 0 in seconds. The range depends on the history depth.

Example:

```
CALC:MARK:SGR:FRAM -20
```

Sets the marker on the 20th frame before the present.

```
CALC:MARK2:SGR:FRAM -2s
```

Sets second marker on the frame 2 seconds ago.

CALCulate<n>:MARKer<m>:SGRam:SARea <SearchArea>

CALCulate<n>:MARKer<m>:SPECTrogram:SARea <SearchArea>

Defines the marker search area for all spectrogram markers in the channel.

Parameters:

<SearchArea>

VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

*RST: VISible

Manual operation: See "[Marker Search Area](#)" on page 108

CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]

CALCulate<n>:MARKer<m>:SPECTrogram:XY:MAXimum[:PEAK]

Moves a marker to the highest level of the spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]

CALCulate<n>:MARKer<m>:SPECTrogram:XY:MINimum[:PEAK]

Moves a marker to the minimum level of the spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVE

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT

Moves a marker vertically to the next lower peak level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum[:PEAK]

Moves a marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Suffix:<n> [Window](#)<m> [Marker](#)**CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE****CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVE**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See ["Search Mode for Next Peak in Y-Direction"](#) on page 107**CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW****CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See ["Search Mode for Next Peak in Y-Direction"](#) on page 107**CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT****CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT**

Moves a marker vertically to the next higher minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See ["Search Mode for Next Peak in Y-Direction"](#) on page 107**CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]****CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum[:PEAK]**

Moves a marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level for all frequencies and moves the marker vertically to the minimum level.

Suffix:

<n> Window

<m> Marker

10.8.4.2 Using delta markers

The following commands control spectrogram delta markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the delta markers.

- `CALCulate<n>:DELTamarker<m>:MAXimum:LEFT` on page 290
- `CALCulate<n>:DELTamarker<m>:MAXimum:NEXT` on page 291
- `CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]` on page 291
- `CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT` on page 291
- `CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 291
- `CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 292
- `CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 292
- `CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 292

Remote commands exclusive to spectrogram markers

<code>CALCulate<n>:DELTamarker<m>:SGRam:FRAMe</code>	315
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:FRAMe</code>	315
<code>CALCulate<n>:DELTamarker<m>:SGRam:SARea</code>	315
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:SARea</code>	315
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]</code>	316
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MAXimum[:PEAK]</code>	316
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]</code>	316
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MINimum[:PEAK]</code>	316
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe</code>	316
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:ABOVe</code>	316
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW</code>	316
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:BELOW</code>	316
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT</code>	316
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:NEXT</code>	316
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]</code>	317
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum[:PEAK]</code>	317
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe</code>	317
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVe</code>	317
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW</code>	317
<code>CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELOW</code>	317

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum:NEXT.....	318
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MINimum:NEXT.....	318
CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum[:PEAK].....	318
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MINimum[:PEAK].....	318

CALCulate<n>:DELTaMarker<m>:SGRam:FRAME <Frame>

CALCulate<n>:DELTaMarker<m>:SPECTrogram:FRAME <Frame>

Positions a delta marker on a particular frame. The frame is relative to the position of marker 1.

The command is available for the spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Frame> Selects a frame either by its frame number or time stamp. The frame number is available if the time stamp is off. The range depends on the history depth. The time stamp is available if the time stamp is on. The number is the distance to frame 0 in seconds. The range depends on the history depth. Default unit: S

Example:

`CALC:DELT4:SGR:FRAM -20`

Sets fourth deltamarker 20 frames below marker 1.

`CALC:DELT4:SGR:FRAM 2 s`

Sets fourth deltamarker 2 seconds above the position of marker 1.

CALCulate<n>:DELTaMarker<m>:SGRam:SARea <SearchArea>

CALCulate<n>:DELTaMarker<m>:SPECTrogram:SARea <SearchArea>

Defines the marker search area for *all* spectrogram markers in the channel.

Parameters:

<SearchArea>

VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

*RST: VISible

Manual operation: See "[Marker Search Area](#)" on page 108

CALCulate<n>:DELTaMarker<m>:SGRam:XY:MAXimum[:PEAK]
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MAXimum[:PEAK]

Moves a marker to the highest level of the spectrogram over all frequencies.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTaMarker<m>:SGRam:XY:MINimum[:PEAK]
CALCulate<n>:DELTaMarker<m>:SPECTrogram:XY:MINimum[:PEAK]

Moves a delta marker to the minimum level of the spectrogram over all frequencies.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:ABOVE
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:ABOVE

Moves a marker vertically to the next higher level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:BELOW
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:BELOW

Moves a marker vertically to the next higher level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MAXimum:NEXT
CALCulate<n>:DELTaMarker<m>:SPECTrogram:Y:MAXimum:NEXT

Moves a delta marker vertically to the next higher level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum[:PEAK]

Moves a delta marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Suffix:

<n> [Window](#)

<m> [Marker](#)

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVE

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELOW

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:NEXT

Moves a delta marker vertically to the next minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Mode for Next Peak in Y-Direction](#)" on page 107

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]

CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum[:PEAK]

Moves a delta marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level in the whole spectrogram and moves the marker vertically to the minimum level.

Suffix:

<n> [Window](#)

<m> [Marker](#)

10.8.5 Defining limit checks

Note that in remote control, upper and lower limit lines are configured using separate commands. Thus, you must decide in advance which you want to configure. The x-values for both upper and lower limit lines are defined as a common control line. This control line is the reference for the y-values for both upper and lower limit lines.

- [Configuring limit lines](#)..... 318
- [Managing limit lines](#)..... 327
- [Checking the results of a limit check](#)..... 330
- [Programming example: using limit lines](#)..... 331

10.8.5.1 Configuring limit lines

CALCulate<n>:LIMit:COMMeNt	319
CALCulate<n>:LIMit:CONTRol[:DATA]	319
CALCulate<n>:LIMit:CONTRol:DOMain	320
CALCulate<n>:LIMit:CONTRol:MODE	320
CALCulate<n>:LIMit:CONTRol:OFFSet	320
CALCulate<n>:LIMit:CONTRol:SHIFt	321
CALCulate<n>:LIMit:CONTRol:SPACing	321
CALCulate<n>:LIMit:LOWer[:DATA]	321

CALCulate<n>:LIMit:LOWer:MARGin.....	322
CALCulate<n>:LIMit:LOWer:MODE.....	322
CALCulate<n>:LIMit:LOWer:OFFSet.....	322
CALCulate<n>:LIMit:LOWer:SHIFt.....	323
CALCulate<n>:LIMit:LOWer:SPACing.....	323
CALCulate<n>:LIMit:LOWer:STATe.....	323
CALCulate<n>:LIMit:LOWer:THReshold.....	324
CALCulate<n>:LIMit:NAME.....	324
CALCulate<n>:LIMit:UNIT.....	324
CALCulate<n>:LIMit:UPPer[:DATA].....	325
CALCulate<n>:LIMit:UPPer:MARGin.....	325
CALCulate<n>:LIMit:UPPer:MODE.....	325
CALCulate<n>:LIMit:UPPer:OFFSet.....	326
CALCulate<n>:LIMit:UPPer:SHIFt.....	326
CALCulate<n>:LIMit:UPPer:SPACing.....	326
CALCulate<n>:LIMit:UPPer:STATe.....	327
CALCulate<n>:LIMit:UPPer:THReshold.....	327

CALCulate<n>:LIMit:COMMeNt <Comment>

Defines a comment for a limit line.

Suffix:

<n>	irrelevant
	Limit line

Parameters:

<Comment>	String containing the description of the limit line.
-----------	--

CALCulate<n>:LIMit:CONTRol[:DATA] <LimitLinePoints>...

Defines the horizontal definition points of a limit line.

Suffix:

<n>	irrelevant
	Limit line

Parameters:

<LimitLinePoints>	Variable number of x-axis values. Note that the number of horizontal values has to be the same as the number of vertical values set with <code>CALCulate<n>:LIMit:LOWer[:DATA]</code> or <code>CALCulate<n>:LIMit:UPPer[:DATA]</code> . If not, the R&S FSV/A either adds missing values or ignores surplus values. The unit is Hz or s. *RST: - Default unit: HZ
-------------------	---

CALCulate<n>:LIMit:CONTrol:DOMain <SpanSetting>

Selects the domain of the limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<SpanSetting> FREQUENCY | TIME

FREQUENCY

For limit lines that apply to a range of frequencies.

TIME

For limit lines that apply to a period of time.

*RST: FREQUENCY

Example:

```
CALC:LIM:CONT:DOM FREQ
```

Select a limit line in the frequency domain.

CALCulate<n>:LIMit:CONTrol:MODE <Mode>

Selects the horizontal limit line scaling.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values (Hz or s).

RELative

Limit line is defined by relative values related to the center frequency (frequency domain) or the left diagram border (time domain).

*RST: ABSolute

CALCulate<n>:LIMit:CONTrol:OFFSet <Offset>

Defines an offset for a complete limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Offset> Numeric value.
 The unit depends on the scale of the x-axis.
 *RST: 0
 Default unit: HZ

CALCulate<n>:LIMit:CONTrol:SHIFt <Distance>

Moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant
 [Limit line](#)

Parameters:

<Distance> Numeric value.
 The unit depends on the scale of the x-axis.
 Default unit: HZ

CALCulate<n>:LIMit:CONTrol:SPACing <InterpolMode>

Selects linear or logarithmic interpolation for the calculation of limit lines from one horizontal point to the next.

Suffix:

<n> [Window](#)
 [Limit line](#)

Parameters:

<InterpolMode> LINear | LOGarithmic
 *RST: LIN

Example: CALC:LIM:CONT:SPAC LIN

CALCulate<n>:LIMit:LOWer[:DATA] <LimitLinePoints>...

Defines the vertical definition points of a lower limit line.

Suffix:

<n> irrelevant
 [Limit line](#)

Parameters:

<LimitLinePoints> Variable number of level values.
 Note that the number of vertical values has to be the same as the number of horizontal values set with `CALCulate<n>:LIMit:CONTRol[:DATA]`. If not, the R&S FSV/A either adds missing values or ignores surplus values.
 The unit depends on `CALCulate<n>:LIMit:UNIT` on page 324.
 *RST: Limit line state is OFF
 Default unit: DBM

CALCulate<n>:LIMit:LOWer:MARGin <Margin>

Defines an area around a lower limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Margin> **numeric value**
 *RST: 0
 Default unit: dB

CALCulate<n>:LIMit:LOWer:MODE <Mode>

Selects the vertical limit line scaling.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Mode> **ABSolute**
 Limit line is defined by absolute physical values.
 The unit is variable.

RELative
 Limit line is defined by relative values related to the reference level (dB).
 *RST: ABSolute

CALCulate<n>:LIMit:LOWer:OFFSet <Offset>

Defines an offset for a complete lower limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:<n> [Window](#) [Limit line](#)**Parameters:**

<Offset> Numeric value.

*RST: 0

Default unit: dB

CALCulate<n>:LIMit:LOWer:SHIFt <Distance>

Moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:<n> [Window](#) [Limit line](#)**Parameters:**

<Distance> Defines the distance that the limit line moves.

The unit depends on [CALCulate<n>:LIMit:UNIT](#) on page 324.

Default unit: DB

CALCulate<n>:LIMit:LOWer:SPACing <InterpolType>

Selects linear or logarithmic interpolation for the calculation of a lower limit line from one horizontal point to the next.

Suffix:<n> [Window](#) [Limit line](#)**Parameters:**

<InterpolType> LINear | LOGarithmic

*RST: LIN

CALCulate<n>:LIMit:LOWer:STATe <State>

Turns a lower limit line on and off.

Before you can use the command, you have to select a limit line with [CALCulate<n>:LIMit:NAME](#) on page 324.**Suffix:**

<n> irrelevant

 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

CALCulate<n>:LIMit:LOWer:THReshold <Threshold>

Defines a threshold for relative limit lines.

The R&S FSV/A uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Threshold> Numeric value.
 The unit depends on [CALCulate<n>:LIMit:UNIT](#) on page 324.
 *RST: -200 dBm
 Default unit: DBM

CALCulate<n>:LIMit:NAME <Name>

Selects a limit line that already exists or defines a name for a new limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Name> String containing the limit line name.
 *RST: REM1 to REM8 for lines 1 to 8

CALCulate<n>:LIMit:UNIT <Unit>

Defines the unit of a limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Unit> If you select a dB-based unit for the limit line, the command automatically turns the limit line into a relative limit line.

*RST: DBM

CALCulate<n>:LIMit:UPPer[:DATA] <LimitLinePoints>...

Defines the vertical definition points of an upper limit line.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<LimitLinePoints> Variable number of level values.
 Note that the number of vertical values has to be the same as the number of horizontal values set with [CALCulate<n>:LIMit:CONTRol\[:DATA\]](#). If not, the R&S FSV/A either adds missing values or ignores surplus values.
 The unit depends on [CALCulate<n>:LIMit:UNIT](#) on page 324.

*RST: Limit line state is OFF
 Default unit: DBM

CALCulate<n>:LIMit:UPPer:MARGIN <Margin>

Defines an area around an upper limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Margin> **numeric value**

*RST: 0
 Default unit: dB

CALCulate<n>:LIMit:UPPer:MODE <Mode>

Selects the vertical limit line scaling.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values.

The unit is variable.

RELative

Limit line is defined by relative values related to the reference level (dB).

*RST: ABSolute

CALCulate<n>:LIMit:UPPer:OFFSet <Offset>

Defines an offset for a complete upper limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Offset>

Numeric value.

*RST: 0

Default unit: dB

CALCulate<n>:LIMit:UPPer:SHIFt <Distance>

Moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Distance>

Defines the distance that the limit line moves.

The unit depends on [CALCulate<n>:LIMit:UNIT](#) on page 324.

CALCulate<n>:LIMit:UPPer:SPACing <InterpolType>

Selects linear or logarithmic interpolation for the calculation of an upper limit line from one horizontal point to the next.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<InterpolType> LINear | LOGarithmic
 *RST: LIN

CALCulate<n>:LIMit:UPPer:STATe <State>

Turns an upper limit line on and off.

Before you can use the command, you have to select a limit line with [CALCulate<n>:LIMit:NAME](#) on page 324.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

CALCulate<n>:LIMit:UPPer:THReshold <Limit>

Defines an absolute limit for limit lines with a relative scale.

The R&S FSV/A uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<Limit> Numeric value.
 The unit depends on [CALCulate<n>:LIMit:UNIT](#) on page 324.
 *RST: -200
 Default unit: dBm

10.8.5.2 Managing limit lines

Useful commands for managing limit lines described in the R&S FSV/A User Manual:

- MMEM:SEL[:ITEM]:LIN:ALL
- MMEM:STOR:TYPE
- MMEM:LOAD:TYPE

Remote commands exclusive to managing limit lines:

CALCulate<n>:LIMit:ACTive?	328
CALCulate<n>:LIMit:COPY	328
CALCulate<n>:LIMit:DELete	328
CALCulate<n>:LIMit:STATe	329
CALCulate<n>:LIMit:TRACe<t>:CHECK	329
MMEMory:LOAD<n>:LIMit	330
MMEMory:STORe<n>:LIMit	330

CALCulate<n>:LIMit:ACTive?

Queries the names of *all* active limit lines.

Suffix:

<n> irrelevant

 irrelevant

Return values:

<LimitLines> String containing the names of all active limit lines in alphabetical order.

Example: CALC:LIM:ACT?
Queries the names of all active limit lines.

Usage: Query only

CALCulate<n>:LIMit:COPY <Line>

Copies a limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

Parameters:

<Line> **1 to 8**
number of the new limit line

<name>
String containing the name of the limit line.

Example: CALC:LIM1:COPY 2
Copies limit line 1 to line 2.
CALC:LIM1:COPY 'FM2'
Copies limit line 1 to a new line named FM2.

CALCulate<n>:LIMit:DELete

Deletes a limit line.

Suffix:

<n> [Window](#)

 [Limit line](#)

CALCulate<n>:LIMit:STATe <State>

Turns the limit check for a specific limit line on and off.

To query the limit check result, use [CALCulate<n>:LIMit:FAIL?](#).

Note that a new command exists to activate the limit check and define the trace to be checked in one step (see [CALCulate<n>:LIMit:TRACe<t>:CHECK](#) on page 329).

Suffix:

<n> irrelevant

 [Limit line](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example:

`CALC:LIM:STAT ON`
 Switches on the limit check for limit line 1.

CALCulate<n>:LIMit:TRACe<t>:CHECK <State>

Turns the limit check for a specific trace on and off.

To query the limit check result, use [CALCulate<n>:LIMit:FAIL?](#).

Note that this command replaces the two commands from previous signal and spectrum analyzers (which are still supported, however):

- `CALC:LIM:TRAC`; see the description of commands for compatibility in the R&S FSV/A User Manual
- [CALCulate<n>:LIMit:STATe](#) on page 329

Suffix:

<n> [Window](#)

 [Limit line](#)

<t> [Trace](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: `CALC:LIM3:TRAC2:CHEC ON`
Switches on the limit check for limit line 3 on trace 2.

MMEMory:LOAD<n>:LIMit <FileName>

Loads the limit line from the selected file in .CSV format.

Suffix:
<n> irrelevant

Parameters:
<FileName> String containing the path and name of the CSV import file.

Example: `MMEM:LOAD:LIM 'C:\TEST.CSV'`

MMEMory:STORe<n>:LIMit <FileName>, <LimitLineName>

Exports limit line data to an ASCII (CSV) file.

For details on the file format see the R&S FSV/A User Manual.

Suffix:
<n> irrelevant

Parameters:
<FileName> String containing the path and name of the target file.

<LimitLineName> Name of the limit line to be exported.

Example: `MMEM:STOR:LIM 'C:\TEST', 'UpperLimitLine'`
Stores the limit line named "UpperLimitLine" in the file TEST.CSV.

10.8.5.3 Checking the results of a limit check

CALCulate<n>:LIMit:CLEar[:IMMediate]	330
CALCulate<n>:LIMit:FAIL?	331

CALCulate<n>:LIMit:CLEar[:IMMediate]

Deletes the result of the current limit check.

The command works on *all* limit lines in *all* measurement windows at the same time.

Suffix:
<n> [Window](#)
 irrelevant

Example: `CALC:LIM:CLE`
Deletes the result of the limit check.

CALCulate<n>:LIMit:FAIL?

Queries the result of a limit check in the specified window.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also [INITiate<n>:CONTinuous](#) on page 233.

Suffix:

<n> [Window](#)

 [Limit line](#)

Return values:

<Result> **0**
 PASS

 1
 FAIL

Example:

```
INIT;*WAI
Starts a new sweep and waits for its end.
CALC2:LIM3:FAIL?
Queries the result of the check for limit line 3 in window 2.
```

Usage:

Query only

10.8.5.4 Programming example: using limit lines

The following examples demonstrate how to work with limit lines in a remote environment.

- [Example: configuring limit lines](#).....331
- [Example: performing a limit check](#)..... 332

Example: configuring limit lines

This example demonstrates how to configure 2 limit lines - an upper and a lower limit - for a measurement in a remote environment.

```
//----- Configuring the limit lines -----
CALC:LIM1:NAME 'FM1'
//Names limit line 1 'FM1'.

CALC:LIM1:CONT:MODE ABS
//Selects absolute scaling for the horizontal axis.
CALC:LIM1:CONT 1 MHz,50MHz,100 MHz,150MHz,200MHz
//Defines 5 horizontal definition points for limit line 1.
CALC:LIM1:UPP:MODE ABS
//Selects an absolute vertical scale for limit line 1.
CALC:LIM1:UNIT DBM
//Selects the unit dBm for limit line 1.
CALC:LIM1:UPP -10,-5,0,-5,-10
```

```

//Defines 5 definition points for limit line 1.

CALC:LIM1:UPP:MARG 5dB
//Defines an area of 5 dB around limit line 1 where limit check violations
//are still tolerated.

CALC:LIM1:UPP:SHIF -10DB
//Shifts the limit line 1 by -10 dB.
CALC:LIM1:UPP:OFFS -3dB
//Defines an additional -3 dB offset for limit line 1.

CALC:LIM3:NAME 'FM3'
//Names limit line 3 'FM3'.

CALC:LIM3:LOW:MODE REL
//Selects a relative vertical scale for limit line 3.
CALC:LIM3:UNIT DB

CALC:LIM3:CONT 1 MHz,50MHz,100 MHz,150MHz,200MHz
//Defines 5 horizontal definition points for limit line 3.
CALC:LIM3:LOW -90,-60,-40,-60,-90
//Defines 5 definition points relative to the reference level for limit line 3.

CALC:LIM3:LOW:SHIF 2
//Shifts the limit line 3 by 2dB.
CALC:LIM3:LOW:OFFS 3
//Defines an additional 3 dB offset for limit line 3.

CALC:LIM3:LOW:THR -200DBM
//Defines a power threshold of -200dBm that must be exceeded for limit to be checked

CALC:LIM3:LOW:MARG 5dB
//Defines an area of 5dB around limit line 3 where limit check violations
//are still tolerated.

//----- Storing the limit lines -----
MMEM:SEL:CHAN:LIN:ALL ON
MMEM:STOR:TYPE CHAN
MMEM:STOR:STAT 1,'LimitLines_FM1_FM3'

```

Example: performing a limit check

This example demonstrates how to perform a limit check during a basic frequency sweep measurement in a remote environment. The limit lines configured in ["Example: configuring limit lines"](#) on page 331 are assumed to exist and be active.

```

//-----Preparing the instrument -----
*RST
//Resets the instrument
INIT:CONT OFF
//Selects single sweep mode.

```

```

//-----Configuring the measurement -----
FREQ:CENT 100MHz
//Defines the center frequency
FREQ:SPAN 200MHz
//Sets the span to 100 MHz on either side of the center frequency.
SENS:SWE:COUN 10
//Defines 10 sweeps to be performed in each measurement.
DISP:TRAC1:Y:RLEV 0dBm
//Sets the reference level to 0 dBm.
TRIG:SOUR IFP
TRIG:LEV:IFP -10dBm
//Defines triggering when the second intermediate frequency rises to a level
//of -10 dBm.

//-----Configuring the Trace-----
DISP:TRAC2 ON
DISP:TRAC2:MODE AVER
DISP:TRAC3 ON
DISP:TRAC3:MODE MAXH
//Configures 3 traces: 1 (default): clear/write; 2: average; 3: max hold

//----- Configuring the limit check -----
MMEM:LOAD:TYPE REPL
MMEM:LOAD:STAT 1, 'LimitLines_FM1_FM3'
//Loads the limit lines stored in 'LimitLines_FM1_FM3'
CALC:LIM1:NAME 'FM1'
CALC:LIM1:UPP:STAT ON
//Activates upper limit FM1 as line 1.
CALC:LIM3:NAME 'FM3'
CALC:LIM3:LOW:STAT ON
//Activates lower limit line FM3 as line 3.
CALC:LIM:ACT?
//Queries the names of all active limit lines
//Result: 'FM1,FM3'
CALC:LIM1:TRAC3:CHEC ON
//Activates the upper limit to be checked against trace3 (maxhold trace)
CALC:LIM3:TRAC2:CHEC ON
//Activates the upper limit to be checked against trace2 (average trace)
CALC:LIM:CLE
//Clears the previous limit check results

//----- Performing the measurement-----
INIT;*WAI
//Initiates a new measurement and waits until the last sweep has finished.

//----- Retrieving limit check results-----

CALC:LIM1:FAIL?
//Queries the result of the upper limit line check

```

```
CALC:LIM3:FAIL?
//Queries the result of the lower limit line check
```

10.9 Importing and exporting I/Q data and results

The I/Q data to be evaluated in the AM/FM/PM Modulation Analysis application can not only be measured by the AM/FM/PM Modulation Analysis application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the evaluated I/Q data from the AM/FM/PM Modulation Analysis application can be exported for further analysis in external applications.

MMEMory:STORe<n>:IQ:COMMeNt.....	334
MMEMory:STORe<n>:IQ:FORMat.....	334
MMEMory:STORe<n>:IQ:STATe.....	335

MMEMory:STORe<n>:IQ:COMMeNt <Comment>

Adds a comment to a file that contains I/Q data.

Suffix:

<n> irrelevant

Parameters:

<Comment> String containing the comment.

Example:

```
MMEM:STOR:IQ:COMM 'Device test 1b'
Creates a description for the export file.
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores I/Q data and the comment to the specified file.
```

MMEMory:STORe<n>:IQ:FORMat <Format>,<DataFormat>

Sets or queries the format of the I/Q data to be stored.

Suffix:

<n> irrelevant

Parameters:

<Format> **FLOat32**
32-bit floating point format.

INT32
32-bit integer format.

*RST: FLOat32

<DataFormat> **COMPLex**
Exports complex data.

REAL
Exports real data.

*RST: COMPLex

Example: `M MEM:STOR:IQ:FORM INT32,REAL`

MMEMory:STORe<n>:IQ:STATe <1>, <FileName>

Writes the captured I/Q data to a file.

By default, the contents of the file are in 32-bit floating point format.

Suffix:

<n> 1..n

Parameters:

<1>

<FileName> String containing the path and name of the target file.
The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be `.iq.tar`.
For `.mat` files, Matlab® v4 is assumed.

Example: `M MEM:STOR:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'`
Stores the captured I/Q data to the specified file.

Usage: Asynchronous command

10.10 Deprecated commands

The following commands are provided for compatibility to other signal analyzers only. For new remote control programs use the specified alternative commands.

[CALCulate<n>:FEED](#)..... 335

CALCulate<n>:FEED <Evaluation>

Selects the evaluation method of the measured data that is to be displayed in the specified window.

Note that this command is maintained for compatibility reasons only. Use the `LAYout` commands for new remote control programs (see [Chapter 10.6.2, "Working with windows in the display"](#), on page 236).

Suffix:

<n> [Window](#)

Parameters:

<Evaluation> Type of evaluation you want to display.
See the table below for available parameter values.

Example: `INST:SEL ADEM`
Activates Analog Modulation Analysis.
`CALC:FEED 'XTIM:FM'`
Selects the display of the FM signal.

Table 10-5: <Evaluation> parameter values for the R&S FSV3 AM/FM/PM Modulation Analysis application

Parameter	Evaluation
'XTIM:AM:RELative'	"AM Time Domain"
'XTIM:AM:RELative:AFSPectrum'	"AM Spectrum"
'XTIM:FM'	"FM Time Domain"
'XTIM:FM:AFSPectrum'	"FM Spectrum"
'XTIM:PM'	"PM Time Domain"
'XTIM:PM:AFSPectrum'	"PM Spectrum"
'XTIM:SPECTrum'	"RF Spectrum"
'XTIM:AM' 'XTIM:RFPower'	"RF Time Domain" (= RF power)
'XTIM:AMSummary' 'XTIM:AMSummary:RELative' 'XTIM:FMSummary' 'XTIM:FMSummary:RELative' 'XTIM:PMSummary' 'XTIM:PMSummary:RELative' 'XTIM:SUMMARY'	Result summary

10.11 Programming example

In this example we will configure and perform an Analog Modulation Analysis measurement to demonstrate the remote control commands.

Signal generator settings (e.g. R&S SMW):

Frequency:	500 MHz
Level:	-10 dBm
Modulation:	FM
Modulation frequency:	10 kHz
Frequency deviation:	50 kHz

```
//-----Preparing the measurement -----
//Reset the instrument
*RST

//Set the center frequency to 500 MHz
FREQ:CENT 500 MHz
//Set the reference level to 0 dBm
DISP:TRAC:Y:SCAL:RLEV 0
```



```

//----- Activating an Analog Modulation Analysis measurement channel -----
//Activate an Analog Modulation Analysis measurement channel named "FMDemodulation"
INST:CRE:NEW ADEM,'FMDemodulation'

//----- Configuring data acquisition -----
//Set the measurement time to 1 ms (=10 periods)
ADEM:MTIM 1ms
//Optimize the scaling of the y-axis for the current measurement (continuously)
SENS:ADJ:SCAL:Y:AUTO ON
//Set the demodulation bandwidth to 400 kHz
BAND:DEM 400 kHz
//Trigger when magnitude of I/Q data reaches -50dBm
TRIG:SOUR IQP
TRIG:LEV:IQP -50

//----- Configuring the result display -----

//Add an FM Spectrum result display below FM Time Domain
LAY:ADD:WIND? '1',BEL,'XTIM:FM:AFSP'
//Define two traces in the FM Spectrum: 1: Clear/write, 2: average
ADEM:FM:AFSP WRIT,AVER,OFF,OFF,OFF,OFF
//Set analog demodulator to execute 30 sweeps with 32000 samples each
//at a sample rate of 8 MHz; use IQ trigger, trigger on positive slope
//with a pretrigger offset of 500 samples
ADEM:SET 8MHz,32000,IQP,POS,-500,30

//-----Performing the Measurement-----

//Stop continuous sweep
INIT:CONT OFF

//Start a new measurement with 30 sweeps and wait for the end
INIT;*WAI

//-----Retrieving Results-----
//Query the carrier power
CALC:MARK:FUNC:ADEM:CARR?
//Result: -10.37 [dBm]

//Query the signal-to-noise-and-distortion ratio from the FM Spectrum
CALC2:MARK:FUNC:ADEM:SIN:RES?
//Result: 65.026 [dB]

//Query the total harmonic distortion of the demodulated signal

```

```
//from the FM Spectrum
CALC2:MARK:FUNC:ADEM:THD:RES?
//Result: -66.413 [dB]

//Query the FM carrier offset (=frequency error) for the most recent
//measurement (trace 1)
CALC:MARK:FUNC:ADEM:FERR?
//Result: 649.07 [Hz]

//Query FM carrier offset averaged over 30 measurements
ADEM:FM:OFFS? AVER
//Result: 600 [Hz]

//Retrieve the trace data of the most recent measurement (trace 1)
TRAC:DATA? TRACE1
//Result: -1.201362252,-1.173495054,-1.187217355,-1.186594367,-1.171583891,
//-1.188250422,-1.204138160,-1.181404829,-1.186317205,-1.197872400, [...]

//Retrieve the averaged trace data for all 30 measurements (trace 2)
TRAC:DATA? TRACE2//Result: -1.201362252,-1.173495054,-1.187217355,-1.186594367,-1.171583891,
//-1.188250422,-1.204138160,-1.181404829,-1.186317205,-1.197872400, [...]
```

Annex

A Reference

A.1 Predefined standards and settings

You can configure the Analog Modulation Analysis application using predefined standard settings. This allows for quick and easy configuration for commonly performed measurements.

For details see [Chapter 5.2, "Configuration according to standards"](#), on page 37.

Provided standard files

The instrument comes prepared with the following standard settings:

- AM Broadcast
- FM Narrowband
- FM Broadcast
- Frequency Settling
- None (default settings)

The default storage location for the settings files is:

```
C:\R_S\INSTR\USER\predefined\AdemodPredefined.
```

Predefined settings

The following parameters can be stored in a standard settings file. Any parameters that are not included in the xml file are set to their default values when the standard is loaded.

Measurement settings:

- DBW
- AQT
- Demod Filter
- Sweep Points
- Squelch (State, Level)
- Units (Phase, THD)
- RF Span
- Settling Time (Time domain only)

Window display settings:

- Position
- State
- Window number

Predefined standards and settings

- Window type (all evaluation methods supported by the Analog Modulation Analysis application; see [Chapter 3, "Measurements and result displays"](#), on page 16)
- Scaling (Ref Position, Dev per Division)
- Time Domain Zoom (State, Start, Length)

AF specific settings:

- AF Center
- AF Span
- AF Filters (Lowpass, Highpass, Deemphasis, Weighting)
- Scaling for Spectrum (Ref Value, Deviation)
- Scaling for Time Domain (Ref Value, AF Coupling (FM/PM only))

Table A-1: List of predefined standards and settings

Setting	AM Broadcast	FM Narrowband	FM Broadcast	Frequency Settling *)	None (Default)
Demod. bandwidth	100 kHz	100 kHz	400 kHz	5 MHz	5 MHz
Aquisition time	100 ms	100 ms	100 ms	10 ms	62.5 µs
Input coupling	AC	AC	AC		AC
Squelch level				-30 dBm	-20 dBm
Windows	"RF Spectrum" "AM Time Domain" "AM Spectrum" "Result Summary"	"RF Spectrum" "FM Time Domain" "FM Spectrum" "Result Summary"	"RF Spectrum" "FM Time Domain" "FM Spectrum" "Result Summary"	"FM Time Domain" "RF Time Domain" "Result Summary"	"FM Time Domain" "Result Summary"
AF filter - High-pass	20 kHz	50 Hz			-
AF filter - Low-pass	15 kHz	3 kHz	150 kHz		-
RF Spectrum					
Span	50 kHz	25 kHz	400 kHz		
AM/FM Time Domain					
Time domain zoom	10 ms	10 ms	10 ms		-
Dev per division		1 kHz	20 kHz	100 kHz	50 kHz
Time domain					
Settling Time State				ON	
AM/FM Spectrum					
Start freq.	0 Hz	0 Hz	0 Hz		
*) The Frequency Settling scenario requires a manually defined trigger					

Predefined standards and settings

Setting	AM Broadcast	FM Narrowband	FM Broadcast	Frequency Settling *)	None (Default)
Stop freq.	15 kHz	5 kHz	63.33 kHz		
Ref. value		5 kHz	75 kHz		

*) The Frequency Settling scenario requires a manually defined trigger

List of Remote Commands (AnalogModAnalysis)

[SENSe:][WINDow<n>:]DETEctor<t>[:FUNction].....	269
[SENSe:][WINDow<n>:]DETEctor<t>[:FUNction]:AUTO.....	269
[SENSe:]ADEMod:ACV:AFSPectrum:RESult?.....	245
[SENSe:]ADEMod:ACV[:TDOMain]:RESult?.....	245
[SENSe:]ADEMod:AF:CENter.....	214
[SENSe:]ADEMod:AF:SPAN.....	214
[SENSe:]ADEMod:AF:SPAN:FULL.....	214
[SENSe:]ADEMod:AF:STARt.....	215
[SENSe:]ADEMod:AF:STOP.....	215
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?.....	245
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE].....	266
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?.....	245
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE].....	266
[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum:RESult?.....	245
[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum[:TYPE].....	266
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?.....	245
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE].....	267
[SENSe:]ADEMod:FM:AFSPectrum:RESult?.....	245
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE].....	267
[SENSe:]ADEMod:FM[:TDOMain]:RESult?.....	245
[SENSe:]ADEMod:FM[:TDOMain][:TYPE].....	267
[SENSe:]ADEMod:MTIME.....	197
[SENSe:]ADEMod:PM:AFSPectrum:RESult?.....	245
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE].....	267
[SENSe:]ADEMod:PM:RPOint[:X].....	210
[SENSe:]ADEMod:PM:RPOint[:X]:MODE.....	210
[SENSe:]ADEMod:PM[:TDOMain]:RESult?.....	245
[SENSe:]ADEMod:PM[:TDOMain][:TYPE].....	267
[SENSe:]ADEMod:PRESet:REStore.....	143
[SENSe:]ADEMod:PRESet:StORe.....	143
[SENSe:]ADEMod:PRESet[:STANdard].....	143
[SENSe:]ADEMod:RELEngth.....	197
[SENSe:]ADEMod:SEt.....	197
[SENSe:]ADEMod:SEtTLing:TIME:LIMit:LOWer.....	226
[SENSe:]ADEMod:SEtTLing:TIME:LIMit:UPPer.....	227
[SENSe:]ADEMod:SEtTLing:TIME:RESult<t>?.....	254
[SENSe:]ADEMod:SEtTLing:TIME:StATe.....	227
[SENSe:]ADEMod:SPeCtrum:BWIDth[:RESolution].....	198
[SENSe:]ADEMod:SPeCtrum:RESult?.....	245
[SENSe:]ADEMod:SPeCtrum:SPAN:ZOOM.....	215
[SENSe:]ADEMod:SPeCtrum:SPAN[:MAXimum].....	216
[SENSe:]ADEMod:SPeCtrum[:TYPE].....	267
[SENSe:]ADEMod:SQUelch:LEVel.....	211
[SENSe:]ADEMod:SQUelch[:StATe].....	210
[SENSe:]ADEMod:SRATe.....	198

[SENSe:]ADEMod<n>:AF:COUPling.....	209
[SENSe:]ADEMod<n>:SPEctrum:BANDwidth[:RESolution].....	198
[SENSe:]ADEMod<n>:ZOOM:LENGth.....	212
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE.....	212
[SENSe:]ADEMod<n>:ZOOM:STARt.....	213
[SENSe:]ADEMod<n>:ZOOM[:STATe].....	213
[SENSe:]ADJust:ALL.....	228
[SENSe:]ADJust:CONFigure:HYSteresis:LOWer.....	229
[SENSe:]ADJust:CONFigure:HYSteresis:UPPer.....	230
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	229
[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE.....	229
[SENSe:]ADJust:CONFigure:SMODE.....	230
[SENSe:]ADJust:CONFigure:TRIGger.....	230
[SENSe:]ADJust:FREQuency.....	231
[SENSe:]ADJust:LEVel.....	231
[SENSe:]ADJust:SCALE[:Y]:AUTO[:CONTinuous].....	231
[SENSe:]AVERAge<n>:COUNT.....	268
[SENSe:]AVERAge<n>:TYPE.....	268
[SENSe:]AVERAge<n>[:STATe<t>].....	268
[SENSe:]BANDwidth:DEMod.....	198
[SENSe:]BANDwidth:DEMod:TYPE.....	199
[SENSe:]BANDwidth[:RESolution].....	199
[SENSe:]BWIDth:DEMod.....	198
[SENSe:]BWIDth:DEMod:TYPE.....	199
[SENSe:]CORRection:COLLect[:ACQuire].....	181
[SENSe:]CORRection:CVL:BAND.....	156
[SENSe:]CORRection:CVL:BIAS.....	156
[SENSe:]CORRection:CVL:CATalog?.....	156
[SENSe:]CORRection:CVL:CLEar.....	157
[SENSe:]CORRection:CVL:COMMeNt.....	157
[SENSe:]CORRection:CVL:DATA.....	157
[SENSe:]CORRection:CVL:HARMonic.....	157
[SENSe:]CORRection:CVL:MIXer.....	158
[SENSe:]CORRection:CVL:PORTs.....	158
[SENSe:]CORRection:CVL:SELEct.....	158
[SENSe:]CORRection:CVL:SNUMber.....	159
[SENSe:]CORRection:METhod.....	182
[SENSe:]CORRection:RECall.....	182
[SENSe:]CORRection:TRANsdUCer:GENerate.....	183
[SENSe:]CORRection[:STATe].....	183
[SENSe:]FILTer<n>:AOFF.....	217
[SENSe:]FILTer<n>:AWEighted[:STATe].....	216
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe].....	217
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe].....	217
[SENSe:]FILTer<n>:CCIT[:STATe].....	218
[SENSe:]FILTer<n>:DEMPHasis:TCONstant.....	218
[SENSe:]FILTer<n>:DEMPHasis[:STATe].....	218
[SENSe:]FILTer<n>:HPASs:FREQuency:MANual.....	219
[SENSe:]FILTer<n>:HPASs:FREQuency[:ABSolute].....	219
[SENSe:]FILTer<n>:HPASs[:STATe].....	219

[SENSe:]FILTer<n>:LPASs:FREQuency:MANual.....	220
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative.....	220
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute].....	220
[SENSe:]FILTer<n>:LPASs[:STATe].....	221
[SENSe:]FREQuency:CENTer.....	186
[SENSe:]FREQuency:CENTer:STEP.....	186
[SENSe:]FREQuency:CENTer:STEP:LINK.....	187
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor.....	187
[SENSe:]MIXer<x>:BIAS:HIGH.....	148
[SENSe:]MIXer<x>:BIAS[:LOW].....	148
[SENSe:]MIXer<x>:FREQuency:HANDover.....	150
[SENSe:]MIXer<x>:FREQuency:STARt.....	150
[SENSe:]MIXer<x>:FREQuency:STOP.....	151
[SENSe:]MIXer<x>:HARMonic:BAND.....	151
[SENSe:]MIXer<x>:HARMonic:BAND:PRESet.....	151
[SENSe:]MIXer<x>:HARMonic:HIGH:STATe.....	152
[SENSe:]MIXer<x>:HARMonic:HIGH[:VALue].....	152
[SENSe:]MIXer<x>:HARMonic:TYPE.....	152
[SENSe:]MIXer<x>:HARMonic[:LOW].....	153
[SENSe:]MIXer<x>:IF?.....	153
[SENSe:]MIXer<x>:LOPower.....	148
[SENSe:]MIXer<x>:LOSS:HIGH.....	153
[SENSe:]MIXer<x>:LOSS:TABLE:HIGH.....	154
[SENSe:]MIXer<x>:LOSS:TABLE[:LOW].....	154
[SENSe:]MIXer<x>:LOSS[:LOW].....	154
[SENSe:]MIXer<x>:PORTs.....	155
[SENSe:]MIXer<x>:RFOVerrange[:STATe].....	155
[SENSe:]MIXer<x>:SIGNal.....	149
[SENSe:]MIXer<x>:THReshold.....	149
[SENSe:]MIXer<x>[:STATe].....	148
[SENSe:]PMETer<p>:DCYCLe:VALue.....	170
[SENSe:]PMETer<p>:DCYCLe[:STATe].....	169
[SENSe:]PMETer<p>:FREQuency.....	170
[SENSe:]PMETer<p>:FREQuency:LINK.....	170
[SENSe:]PMETer<p>:MTIME.....	171
[SENSe:]PMETer<p>:MTIME:AVERAge:COUNT.....	171
[SENSe:]PMETer<p>:MTIME:AVERAge[:STATe].....	172
[SENSe:]PMETer<p>:ROFFset[:STATe].....	172
[SENSe:]PMETer<p>:SOFFset.....	172
[SENSe:]PMETer<p>:TRIGger:DTIME.....	174
[SENSe:]PMETer<p>:TRIGger:HOLDoff.....	174
[SENSe:]PMETer<p>:TRIGger:HYSTeresis.....	175
[SENSe:]PMETer<p>:TRIGger:LEVel.....	175
[SENSe:]PMETer<p>:TRIGger:SLOPe.....	175
[SENSe:]PMETer<p>:TRIGger[:STATe].....	176
[SENSe:]PMETer<p>:UPDate[:STATe].....	173
[SENSe:]PMETer<p>[:STATe].....	172
[SENSe:]PROBe<pb>:ID:PARTnumber?.....	161
[SENSe:]PROBe<pb>:ID:SRNumber?.....	162
[SENSe:]PROBe<pb>:SETup:ATTRatio.....	162

[SENSe:]PROBe<pb>:SETup:CMOFfset.....	162
[SENSe:]PROBe<pb>:SETup:DMOFfset.....	163
[SENSe:]PROBe<pb>:SETup:MODE.....	163
[SENSe:]PROBe<pb>:SETup:NAME?.....	164
[SENSe:]PROBe<pb>:SETup:NMOFfset.....	164
[SENSe:]PROBe<pb>:SETup:PMODE.....	164
[SENSe:]PROBe<pb>:SETup:PMOFfset.....	165
[SENSe:]PROBe<pb>:SETup:STATe?.....	165
[SENSe:]PROBe<pb>:SETup:TYPE?.....	166
[SENSe:]SWEep:COUNT.....	199
[SENSe:]SWEep[:WINDow<n>]:POINts.....	200
ABORT.....	232
CALCulate<n>:DELtAmarker<m>:AOFF.....	273
CALCulate<n>:DELtAmarker<m>:FUNctIon:AFPHase:RESult?.....	308
CALCulate<n>:DELtAmarker<m>:FUNctIon:AFPHase[:STATe].....	308
CALCulate<n>:DELtAmarker<m>:FUNctIon:BPOwer:MODE.....	306
CALCulate<n>:DELtAmarker<m>:FUNctIon:BPOwer:RESult?.....	307
CALCulate<n>:DELtAmarker<m>:FUNctIon:BPOwer:SPAN.....	307
CALCulate<n>:DELtAmarker<m>:FUNctIon:BPOwer[:STATe].....	307
CALCulate<n>:DELtAmarker<m>:FUNctIon:FIXed:RPOint:MAXimum[:PEAK].....	293
CALCulate<n>:DELtAmarker<m>:FUNctIon:FIXed:RPOint:X.....	293
CALCulate<n>:DELtAmarker<m>:FUNctIon:FIXed:RPOint:Y.....	294
CALCulate<n>:DELtAmarker<m>:FUNctIon:FIXed:RPOint:Y:OFFSet.....	294
CALCulate<n>:DELtAmarker<m>:FUNctIon:FIXed[:STATe].....	294
CALCulate<n>:DELtAmarker<m>:LINK.....	273
CALCulate<n>:DELtAmarker<m>:MAXimum:LEFT.....	290
CALCulate<n>:DELtAmarker<m>:MAXimum:NEXT.....	291
CALCulate<n>:DELtAmarker<m>:MAXimum:RIGHT.....	291
CALCulate<n>:DELtAmarker<m>:MAXimum[:PEAK].....	291
CALCulate<n>:DELtAmarker<m>:MINimum:LEFT.....	291
CALCulate<n>:DELtAmarker<m>:MINimum:NEXT.....	292
CALCulate<n>:DELtAmarker<m>:MINimum:RIGHT.....	292
CALCulate<n>:DELtAmarker<m>:MINimum[:PEAK].....	292
CALCulate<n>:DELtAmarker<m>:MODE.....	274
CALCulate<n>:DELtAmarker<m>:MREFerence.....	274
CALCulate<n>:DELtAmarker<m>:SGRam:FRAMe.....	284
CALCulate<n>:DELtAmarker<m>:SGRam:FRAMe.....	315
CALCulate<n>:DELtAmarker<m>:SGRam:SARea.....	284
CALCulate<n>:DELtAmarker<m>:SGRam:SARea.....	315
CALCulate<n>:DELtAmarker<m>:SGRam:XY:MAXimum[:PEAK].....	285
CALCulate<n>:DELtAmarker<m>:SGRam:XY:MAXimum[:PEAK].....	316
CALCulate<n>:DELtAmarker<m>:SGRam:XY:MINimum[:PEAK].....	285
CALCulate<n>:DELtAmarker<m>:SGRam:XY:MINimum[:PEAK].....	316
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:ABOVe.....	285
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:ABOVe.....	316
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:BELow.....	285
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:BELow.....	316
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:NEXT.....	285
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum:NEXT.....	316
CALCulate<n>:DELtAmarker<m>:SGRam:Y:MAXimum[:PEAK].....	286

CALCulate<n>:DELTamarker<m>:SGRaM:Y:MAXimum[:PEAK].....	317
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:ABOVe.....	286
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:ABOVe.....	317
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:BELow.....	286
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:BELow.....	317
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:NEXT.....	287
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum:NEXT.....	318
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum[:PEAK].....	287
CALCulate<n>:DELTamarker<m>:SGRaM:Y:MINimum[:PEAK].....	318
CALCulate<n>:DELTamarker<m>:SPECTrogram:FRAMe.....	284
CALCulate<n>:DELTamarker<m>:SPECTrogram:FRAMe.....	315
CALCulate<n>:DELTamarker<m>:SPECTrogram:SARea.....	284
CALCulate<n>:DELTamarker<m>:SPECTrogram:SARea.....	315
CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MAXimum[:PEAK].....	285
CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MAXimum[:PEAK].....	316
CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MINimum[:PEAK].....	285
CALCulate<n>:DELTamarker<m>:SPECTrogram:XY:MINimum[:PEAK].....	316
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:ABOVe.....	285
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:ABOVe.....	316
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:BELow.....	285
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:BELow.....	316
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:NEXT.....	285
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum:NEXT.....	316
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum[:PEAK].....	286
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MAXimum[:PEAK].....	317
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVe.....	286
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:ABOVe.....	317
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELow.....	286
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:BELow.....	317
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:NEXT.....	287
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum:NEXT.....	318
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum[:PEAK].....	287
CALCulate<n>:DELTamarker<m>:SPECTrogram:Y:MINimum[:PEAK].....	318
CALCulate<n>:DELTamarker<m>:TRACe.....	275
CALCulate<n>:DELTamarker<m>:X.....	275
CALCulate<n>:DELTamarker<m>:X:RELative?.....	276
CALCulate<n>:DELTamarker<m>:Y?.....	276
CALCulate<n>:DELTamarker<m>[:STATe].....	275
CALCulate<n>:DELTamarker<ms>:LINK:TO:MARKer<md>.....	273
CALCulate<n>:FEED.....	335
CALCulate<n>:FORMat.....	211
CALCulate<n>:LIMit:ACTive?.....	328
CALCulate<n>:LIMit:CLEAr[:IMMediate].....	330
CALCulate<n>:LIMit:COMMeNt.....	319
CALCulate<n>:LIMit:CONTRol:DOMain.....	320
CALCulate<n>:LIMit:CONTRol:MODE.....	320
CALCulate<n>:LIMit:CONTRol:OFFSet.....	320
CALCulate<n>:LIMit:CONTRol:SHIFt.....	321
CALCulate<n>:LIMit:CONTRol:SPACing.....	321
CALCulate<n>:LIMit:CONTRol[:DATA].....	319

CALCulate<n>:LIMit:COPY.....	328
CALCulate<n>:LIMit:DELeTe.....	328
CALCulate<n>:LIMit:FAIl?.....	331
CALCulate<n>:LIMit:LOWer:MARGIn.....	322
CALCulate<n>:LIMit:LOWer:MODE.....	322
CALCulate<n>:LIMit:LOWer:OFFSet.....	322
CALCulate<n>:LIMit:LOWer:SHIFt.....	323
CALCulate<n>:LIMit:LOWer:SPACIng.....	323
CALCulate<n>:LIMit:LOWer:STATe.....	323
CALCulate<n>:LIMit:LOWer:THReshold.....	324
CALCulate<n>:LIMit:LOWer[:DATA].....	321
CALCulate<n>:LIMit:NAME.....	324
CALCulate<n>:LIMit:STATe.....	329
CALCulate<n>:LIMit:TRACe<t>:CHECK.....	329
CALCulate<n>:LIMit:UNIT.....	324
CALCulate<n>:LIMit:UPPer:MARGIn.....	325
CALCulate<n>:LIMit:UPPer:MODE.....	325
CALCulate<n>:LIMit:UPPer:OFFSet.....	326
CALCulate<n>:LIMit:UPPer:SHIFt.....	326
CALCulate<n>:LIMit:UPPer:SPACIng.....	326
CALCulate<n>:LIMit:UPPer:STATe.....	327
CALCulate<n>:LIMit:UPPer:THReshold.....	327
CALCulate<n>:LIMit:UPPer[:DATA].....	325
CALCulate<n>:MARKer<m>:AOFF.....	270
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AFRequency[:RESult<t>]?.....	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AM[:RESult<t>]:RELAtive?.....	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:AM[:RESult<t>]?.....	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:CARRIer[:RESult<t>]?.....	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:DISTortion[:WRITe]:RESult<t>?.....	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FERRor[:RESult<t>]?.....	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FM[:RESult<t>]:RELAtive?.....	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:FM[:RESult<t>]?.....	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:PM[:RESult<t>]:RELAtive?.....	252
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:PM[:RESult<t>]?.....	251
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:SINad:RESult<t>?.....	253
CALCulate<n>:MARKer<m>:FUNCTion:ADEMod:THD:RESult<t>?.....	254
CALCulate<n>:MARKer<m>:FUNCTion:AFPHase:RESult?.....	309
CALCulate<n>:MARKer<m>:FUNCTion:AFPHase[:STATe].....	309
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:AOFF.....	304
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:MODE.....	304
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:RESult?.....	305
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:SPAN.....	305
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer[:STATe].....	305
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:ANNOtation:LABel[:STATe].....	295
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:COUNt?.....	296
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:LIST:SIZE.....	296
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT.....	297
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:STATe.....	297
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:X?.....	298
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:Y?.....	298

CALCulate<n>:MARKer<m>:FUNction:FPEaks[:IMMediate].....	296
CALCulate<n>:MARKer<m>:FUNction:NDBDown.....	299
CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREquency?.....	300
CALCulate<n>:MARKer<m>:FUNction:NDBDown:QFACtor?.....	301
CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?.....	301
CALCulate<n>:MARKer<m>:FUNction:NDBDown:STATE.....	301
CALCulate<n>:MARKer<m>:FUNction:NDBDown:TIME?.....	302
CALCulate<n>:MARKer<m>:FUNction:PNOise:AOff.....	303
CALCulate<n>:MARKer<m>:FUNction:PNOise:RESult?.....	303
CALCulate<n>:MARKer<m>:FUNction:PNOise[:STATE].....	303
CALCulate<n>:MARKer<m>:FUNction:REFerence.....	188
CALCulate<n>:MARKer<m>:LINK.....	277
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	288
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	289
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	289
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	289
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	289
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	289
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	290
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	290
CALCulate<n>:MARKer<m>:PEXCursion.....	287
CALCulate<n>:MARKer<m>:SGRam:FRAMe.....	279
CALCulate<n>:MARKer<m>:SGRam:FRAMe.....	310
CALCulate<n>:MARKer<m>:SGRam:SARea.....	280
CALCulate<n>:MARKer<m>:SGRam:SARea.....	311
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK].....	280
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK].....	311
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK].....	280
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK].....	311
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe.....	281
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe.....	312
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELow.....	281
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELow.....	312
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT.....	281
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT.....	312
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK].....	281
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK].....	312
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVe.....	282
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVe.....	313
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELow.....	282
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELow.....	313
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT.....	282
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT.....	313
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK].....	283
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK].....	313
CALCulate<n>:MARKer<m>:SPECTrogram:FRAMe.....	279
CALCulate<n>:MARKer<m>:SPECTrogram:FRAMe.....	310
CALCulate<n>:MARKer<m>:SPECTrogram:SARea.....	280
CALCulate<n>:MARKer<m>:SPECTrogram:SARea.....	311
CALCulate<n>:MARKer<m>:SPECTrogram:XY:MAXimum[:PEAK].....	280

CALCulate<n>:MARKer<m>:SPECTrogram:XY:MAXimum[:PEAK].....	311
CALCulate<n>:MARKer<m>:SPECTrogram:XY:MINimum[:PEAK].....	280
CALCulate<n>:MARKer<m>:SPECTrogram:XY:MINimum[:PEAK].....	311
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVe.....	281
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:ABOVe.....	312
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW.....	281
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:BELOW.....	312
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT.....	281
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum:NEXT.....	312
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum[:PEAK].....	281
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MAXimum[:PEAK].....	312
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVe.....	282
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:ABOVe.....	313
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW.....	282
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:BELOW.....	313
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT.....	282
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum:NEXT.....	313
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum[:PEAK].....	283
CALCulate<n>:MARKer<m>:SPECTrogram:Y:MINimum[:PEAK].....	313
CALCulate<n>:MARKer<m>:TRACe.....	271
CALCulate<n>:MARKer<m>:X.....	272
CALCulate<n>:MARKer<m>:X:SSIZe.....	277
CALCulate<n>:MARKer<m>:Y?.....	272
CALCulate<n>:MARKer<m>[:STATe].....	271
CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md>.....	271
CALCulate<n>:PMETer<p>:RELative:STATe.....	169
CALCulate<n>:PMETer<p>:RELative[:MAGNitude].....	168
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE.....	168
CALCulate<n>:SGRam:CLear[:IMMEdiate].....	257
CALCulate<n>:SGRam:CONTInuous.....	257
CALCulate<n>:SGRam:FRAMe:COUNt.....	258
CALCulate<n>:SGRam:FRAMe:SElect.....	258
CALCulate<n>:SGRam:HDEPth.....	258
CALCulate<n>:SGRam:LAYout.....	259
CALCulate<n>:SGRam:THReedim[:STATe].....	259
CALCulate<n>:SGRam:TRACe.....	260
CALCulate<n>:SGRam:TSTamp:DATA?.....	260
CALCulate<n>:SGRam:TSTamp[:STATe].....	261
CALCulate<n>:SGRam[:STATe].....	259
CALCulate<n>:SPECTrogram:CLear[:IMMEdiate].....	257
CALCulate<n>:SPECTrogram:CONTInuous.....	257
CALCulate<n>:SPECTrogram:FRAMe:COUNt.....	258
CALCulate<n>:SPECTrogram:FRAMe:SElect.....	258
CALCulate<n>:SPECTrogram:HDEPth.....	258
CALCulate<n>:SPECTrogram:LAYout.....	259
CALCulate<n>:SPECTrogram:THReedim[:STATe].....	259
CALCulate<n>:SPECTrogram:TRACe.....	260
CALCulate<n>:SPECTrogram:TSTamp:DATA?.....	260
CALCulate<n>:SPECTrogram:TSTamp[:STATe].....	261
CALCulate<n>:SPECTrogram[:STATe].....	259

CALCulate<n>:UNIT:ANGLE.....	223
CALCulate<n>:UNIT:POWER.....	188
CALCulate<n>:UNIT:THD.....	223
CALibration:PMETer<p>:ZERO:AUTO ONCE.....	168
CONFigure:ADEMod:RESults:AM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATe.....	224
CONFigure:ADEMod:RESults:FM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATe.....	224
CONFigure:ADEMod:RESults:PM:DETEctor<det>:MODE.....	225
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence.....	224
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>.....	225
CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATe.....	224
CONFigure:ADEMod:RESults:UNIT.....	226
DIAGnostic:SERVice:NSource.....	184
DISPlay:FORMat.....	236
DISPlay[:WINDow<n>]:MINFo[:STATe].....	278
DISPlay[:WINDow<n>]:MTABLE.....	278
DISPlay[:WINDow<n>]:SGRam:COLor:DEFault.....	262
DISPlay[:WINDow<n>]:SGRam:COLor:LOWer.....	262
DISPlay[:WINDow<n>]:SGRam:COLor:SHAPE.....	262
DISPlay[:WINDow<n>]:SGRam:COLor:UPPer.....	263
DISPlay[:WINDow<n>]:SGRam:COLor[:STYLe].....	263
DISPlay[:WINDow<n>]:SIZE.....	236
DISPlay[:WINDow<n>]:SPECTrogram:COLor:DEFault.....	262
DISPlay[:WINDow<n>]:SPECTrogram:COLor:LOWer.....	262
DISPlay[:WINDow<n>]:SPECTrogram:COLor:SHAPE.....	262
DISPlay[:WINDow<n>]:SPECTrogram:COLor:UPPer.....	263
DISPlay[:WINDow<n>]:SPECTrogram:COLor[:STYLe].....	263
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:MODE.....	264
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:MODE:HCONTinuous.....	265
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:SElect.....	266
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y:SPACing.....	196
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe].....	194
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE.....	194
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:MODE.....	194
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:PDIVisIon.....	195
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RLEVel.....	189
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	189
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RPOSition.....	195
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RVALue.....	222
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>[:STATe].....	266
FETCh:PMETer<p>?.....	169
FORMat:DEXPort:CSEParator.....	248
FORMat:DEXPort:DSEParator.....	248
FORMat:DEXPort:FORMat.....	247
FORMat:DEXPort:HEADer.....	248

FORMat:DEXPort:TRACes.....	249
FORMat[:DATA].....	246
INITiate:SEQuencer:ABORT.....	234
INITiate:SEQuencer:IMMediate.....	234
INITiate:SEQuencer:MODE.....	234
INITiate<n>:CONMeas.....	233
INITiate<n>:CONTinuous.....	233
INITiate<n>[:IMMediate].....	233
INPut:ATTenuation.....	190
INPut:ATTenuation:AUTO.....	190
INPut:ATTenuation:AUTO:MODE.....	191
INPut:ATTenuation:PROTection:RESet.....	144
INPut:CONNector.....	144
INPut:COUPling.....	144
INPut:DPATH.....	145
INPut:EATT.....	191
INPut:EATT:AUTO.....	191
INPut:EATT:STATe.....	192
INPut:EGain[:STATe].....	192
INPut:FILE:PATH.....	146
INPut:FILTer:YIG[:STATe].....	145
INPut:GAIN:STATe.....	193
INPut:GAIN[:VALue].....	193
INPut:IMPedance.....	145
INPut:SElect.....	145
INSTrument:CREate:DUPLicate.....	139
INSTrument:CREate:REPLace.....	139
INSTrument:CREate[:NEW].....	139
INSTrument:DElete.....	140
INSTrument:LIST?.....	140
INSTrument:REName.....	141
INSTrument[:SElect].....	142
LAYout:ADD[:WINDow]?.....	237
LAYout:CATalog[:WINDow]?.....	238
LAYout:IDENtify[:WINDow]?.....	239
LAYout:MOVE[:WINDow].....	239
LAYout:REMove[:WINDow].....	240
LAYout:REPLace[:WINDow].....	240
LAYout:SPLitter.....	240
LAYout:WINDow<n>:ADD?.....	242
LAYout:WINDow<n>:IDENtify?.....	242
LAYout:WINDow<n>:REMove.....	243
LAYout:WINDow<n>:REPLace.....	243
LAYout:WINDow<n>:TYPE.....	244
MMEMory:LOAD<n>:LIMit.....	330
MMEMory:STORe<n>:IQ:COMMeNt.....	334
MMEMory:STORe<n>:IQ:FORMat.....	334
MMEMory:STORe<n>:IQ:STATe.....	335
MMEMory:STORe<n>:LIMit.....	330
MMEMory:STORe<n>:LIST.....	298

MMEMory:STORe<n>:PEAK.....	299
MMEMory:STORe<n>:SPECTrogram.....	249
MMEMory:STORe<n>:TRACe.....	250
OUTPut:ADEMod[:ONLine]:AF[:CFRequency].....	185
OUTPut:ADEMod[:ONLine]:PHONes.....	185
OUTPut:ADEMod[:ONLine]:SOURce.....	184
OUTPut:ADEMod[:ONLine]:STATe].....	184
OUTPut:TRIGger<tp>:DIRectioN.....	207
OUTPut:TRIGger<tp>:LEVel.....	207
OUTPut:TRIGger<tp>:OTYPe.....	207
OUTPut:TRIGger<tp>:PULSe:IMMediate.....	208
OUTPut:TRIGger<tp>:PULSe:LENGth.....	208
READ:PMETer<p>?.....	169
SOURce<si>:EXTErnal<gen>:FREQuency.....	176
SOURce<si>:EXTErnal<gen>:FREQuency:COUPling[:STATe].....	177
SOURce<si>:EXTErnal<gen>:FREQuency:OFFSet.....	178
SOURce<si>:EXTErnal<gen>:FREQuency[:FACTor]:DENominator.....	177
SOURce<si>:EXTErnal<gen>:FREQuency[:FACTor]:NUMerator.....	178
SOURce<si>:EXTErnal<gen>:POWer[:LEVel].....	179
SOURce<si>:EXTErnal<gen>:ROSCillator[:SOURce].....	180
SOURce<si>:EXTErnal<gen>[:STATe].....	179
SOURce<si>:POWer[:LEVel][:IMMediate]:OFFSet.....	179
SYSTem:COMMunicate:RDEvice:GENerator<gen>:INTerface.....	180
SYSTem:COMMunicate:RDEvice:GENerator<gen>:TYPE.....	180
SYSTem:COMMunicate:RDEvice:PMETer<p>:CONFigure:AUTO[:STATe].....	166
SYSTem:COMMunicate:RDEvice:PMETer<p>:COUNT?.....	167
SYSTem:COMMunicate:RDEvice:PMETer<p>:DEFine.....	167
SYSTem:COMMunicate:TCPip:RDEvice:GENerator<gen>:ADDResS.....	181
SYSTem:PRESet:CHANnel[:EXEC].....	142
SYSTem:SEQuencer.....	235
SYSTem:SPEaker:VOLume.....	186
TRACe<n>[:DATA].....	247
TRIGger[:SEQuence]:DTIME.....	201
TRIGger[:SEQuence]:HOLDoff[:TIME].....	201
TRIGger[:SEQuence]:IFPower:HOLDoff.....	201
TRIGger[:SEQuence]:IFPower:HYSTeresis.....	202
TRIGger[:SEQuence]:LEVel:AM:RELative.....	203
TRIGger[:SEQuence]:LEVel:AM[:ABSolute].....	203
TRIGger[:SEQuence]:LEVel:FM.....	204
TRIGger[:SEQuence]:LEVel:IFPower.....	203
TRIGger[:SEQuence]:LEVel:IQPower.....	203
TRIGger[:SEQuence]:LEVel:PM.....	204
TRIGger[:SEQuence]:LEVel[:EXTErnal<port>].....	202
TRIGger[:SEQuence]:SLOPe.....	204
TRIGger[:SEQuence]:SOURce.....	205
TRIGger[:SEQuence]:TIME:RINTerval.....	206
UNIT<n>:ANGLE.....	223
UNIT<n>:PMETer<p>:POWer.....	173
UNIT<n>:PMETer<p>:POWer:RATIo.....	173
UNIT<n>:POWer.....	188

UNIT<n>:THD.....223

Index

Symbols

*OPC 200

A

A weighted filter
 AF filters 68

Aborting
 Sweep 56, 57, 93

AC/DC coupling 29, 40, 61, 71, 81

Activating
 Analog Modulation Analysis (remote) 138

AF 16

AF Auto Scale
 Y-axis 71, 84

AF center
 Demodulation spectrum 63

AF CF 15

AF coupling 61, 71, 81

AF filters 30
 A weighted 68
 CCIR 68
 CCITT 68
 Configuration 65
 Deactivating 69
 Deemphasis 68
 High pass 66
 Low pass 67
 Weighting 68

AF full span
 Demodulation spectrum 64

AF span
 Demodulation spectrum 64
 Displayed 15
 Remote control 214

AF spectrum 63

AF start
 Demodulation spectrum 63

AF stop
 Demodulation spectrum 64

AF trigger 30, 31

All Functions Off 122

AM (Offline)
 Softkey 50

AM Spectrum
 Evaluation method 19

AM Time Domain
 Evaluation method 16

Amplitude
 Configuration 43
 Scaling 73
 Settings 43

Analog Modulation Analysis
 Measurement examples 126
 Output 81
 Output settings 80

Analysis
 Marker functions 109
 Remote control 256
 Settings 86

Application cards 11

Application notes 11

AQT
 see Measurement time 14

ASCII trace export 255

Attenuation
 Auto 45
 Displayed 14
 Electronic 45
 Manual 45
 Option 45
 Protective (remote) 144

Audio demodulation
 Volume (remote control) 186

Audio frequency
 see AF 16

Auto adjustment
 Triggered measurement 230

Auto all 83

Auto frequency 83

Auto ID
 External Mixer (remote) 149
 Threshold (External Mixer, remote control) 149

Auto level
 Hysteresis 84, 85
 Reference level 45, 84
 Softkey 45, 84

Auto scaling 71, 72, 84

Auto settings
 MeasTime Auto 84
 MeasTime Manual 84

Average count 58, 89

Average mode
 Traces 89

Averaging
 Traces (remote control) 268

B

Band
 External Mixer (remote) 151

Band power measurement
 Activating/Deactivating 120
 Deactivating 121
 Power mode 121
 Span 120

Band power measurement (remote control) 304

Bandwidth settings 54

Bias
 External Mixer (remote) 148

Brochures 10

C

Calibration
 External generator, remote 181

Capturing
 I/Q data (remote) 232

Carrier
 Offset 25, 29
 Power 25

CCIR filter
 AF filters 68

CCITT filter
 AF filters 68

- Center frequency 47, 65
 - Automatic configuration 83
 - Displayed 14, 15
 - Softkey 47, 65
 - Step size 47
- Channel
 - Creating (remote) 139
 - Deleting (remote) 140
 - Duplicating (remote) 139
 - Querying (remote) 140
 - Renaming (remote) 141
 - Replacing (remote) 139
- Closing
 - Channels (remote) 140
 - Windows (remote) 243
- Color curve
 - Shape 95
- Color mapping
 - Color curve 95
 - Color range 94, 95
 - Color scheme 95
 - Softkey 92
 - Spectrograms 92, 94
- Color scheme
 - Spectrogram 95
- Conditions
 - Measurement 27
- Configuration
 - Measurement (remote) 142
 - Procedure 36
- Continue single sweep
 - Softkey 57
- Continuous sweep
 - Softkey 56, 93
- Conventions
 - SCPI commands 134
- Conversion loss
 - External Mixer (remote) 153, 154
- Conversion loss tables
 - Available (remote) 156
 - Band (remote) 156
 - Bias (remote) 156
 - Deleting (remote) 157
 - External Mixer (remote) 154
 - Harmonic order (remote) 157
 - Mixer type (remote) 158
 - Selecting (remote) 158
- Copying
 - Channel (remote) 139
- D**
- Data acquisition
 - Remote control 196
 - Settings 54
- Data format
 - ASCII 255
 - Binary 255
 - Remote 248, 249
- Data sheets 10
- DB per division
 - Scaling 70
- DBW
 - see Demodulation bandwidth 14
- Decimal separator
 - Trace export 97, 98
- Deemphasis filter
 - AF filters 68
 - Remote control 218
- Deleting
 - Settings files 38
 - Standards 38
- Delta markers 101
 - Defining 101
- Demodulation
 - AF spectrum 63
 - Configuration 59
 - Display 59
 - Filter types 30, 55
 - Process 27
 - Relative (remote control) 225
 - Relative (remote) 224
 - RF spectrum 64
 - Scaling 65, 69
 - Settings 59
 - Spectrum 63
 - Spectrum (Result Summary) 64
 - Units 73
- Demodulation bandwidth 55, 65
 - Conditions 29
 - Deemphasis filter 68
 - Displayed 14
 - Maximum 30
 - Remote control 198
 - Troubleshooting 131
- Detectors
 - Relative demodulation 225
 - Relative demodulation (remote) 224
 - Remote control 224, 269
 - Trace 88
- Dev per division
 - Scaling 70
- Deviation
 - Scaling 71
- Diagram footer information 15
- Direct path
 - Input configuration 41
- Display configuration
 - Softkey 59
- Drop-out time
 - Trigger 51
- Duplicating
 - Channel (remote) 139
- E**
- Electronic input attenuation 45
- Errors
 - IF OVLD 44
- Evaluation
 - Data basis 16
 - Methods 16
- Evaluation methods
 - Remote 237
- Examples
 - Remote control 336
- Export format
 - Traces 255
- Exporting
 - I/Q data 33
 - I/Q data (remote) 334
 - Measurement settings 96
 - Peak list 118

- Trace data 124
- Traces 95, 97, 98
- External generator
 - Remote control 176
- External Mixer
 - Activating (remote) 148
 - Band 150, 151
 - Programming example 159
 - RF overrange 155
 - Type 155
- External trigger 49
 - Level (remote) 202
- F**
- File format
 - Export Files 255
 - Trace export 255
- filename
 - Settings 38
- Files
 - I/Q data input 42
- Filters
 - A weighted (AF) 68
 - AF 65
 - CCIR (AF) 68
 - CCITT (AF) 68
 - Demodulation 29, 30, 55
 - High pass (AF) 66
 - Low pass (AF) 67
 - Weighting (AF) 68
 - YIG (remote) 145
- Fixed reference
 - Defining 103
 - Remote control 293
- FM (Offline)
 - Softkey 50
- FM Spectrum
 - Evaluation method 20
- FM Time Domain
 - Evaluation method 17
- Format
 - Data 255
 - Data (remote) 248, 249
 - see also File format 255
- Frame count
 - Softkey 58
- Free Run
 - Trigger 49
- Frequency
 - Configuration 63
 - Deemphasis filter 68
 - Deviation 29
 - Deviation, scaling 70
 - Remote control 186
 - Settings 47
 - Span 65
- Frontend settings 39
- G**
- Getting started 9
- H**
- Handover frequency
 - External Mixer (remote) 150
- Hardware settings
 - Displayed 14
- Harmonics
 - External Mixer (remote) 152, 153
- High pass filter
 - AF filters 66
- History
 - Spectrograms 92
- History Depth
 - Softkey 92
- Hold
 - Trace setting 89
- Hysteresis
 - Lower (Auto level) 85
 - Trigger 51
 - Upper (Auto level) 84
- I**
- I/Q data
 - Exporting (remote) 334
 - Importing (remote) 334
 - Importing/Exporting 33
 - Input file 42
 - Input files 42
- I/Q Power
 - Trigger level (remote) 203
- IF Power
 - Trigger 49
 - Trigger level (remote) 203
- Impedance
 - Setting 40
- Importing
 - I/Q data 33
 - I/Q data (remote) 334
- Input
 - Coupling 40
 - I/Q data files 42
 - Overload (remote) 144
 - RF 40
 - Settings 39, 46
 - Source Configuration (softkey) 39
 - Source, Radio frequency (RF) 39
- Input sources
 - I/Q data file 42
 - I/Q data files 42
- Installation 12
- Instrument security procedures 10
- K**
- Keys
 - MKR -> 105
 - MKR FUNCT 109
 - Peak Search 106
 - RUN CONT 56, 93
 - RUN SINGLE 57, 93
- L**
- Limit check
 - Remote control 318
- Limit lines
 - Remote control 318
- Linking
 - Markers 101, 104
- LO feedthrough 41

- Loading
 - Settings files 38
- Low pass filter
 - AF filters 67
- Lower Level Hysteresis 85
- M**
- Marker
 - Search area (softkey) 108
 - Search type (softkey) 108
- Marker functions
 - Deactivating 122
 - Remote control 292
- Marker peak list
 - see Peak list 117
- Marker table
 - Evaluation method 26
- Marker to Trace 101
- Markers
 - Assigned trace 101
 - Band power (remote control) 304
 - Basic settings 99
 - Configuration 99, 102
 - Configuration (remote control) 270
 - Deactivating 102
 - Delta markers 101
 - Fixed reference (remote control) 277, 293
 - Function configuration 109
 - Linked in AF spectrum display 104
 - Linked in time domain 104
 - Linking 101
 - Minimum 106
 - Minimum (remote control) 288
 - n dB down 112
 - n dB down (remote control) 299
 - Next minimum 106
 - Next minimum (remote control) 288
 - Next peak 106
 - Next peak (remote control) 288
 - Peak 106
 - Peak (remote control) 288
 - Peak list (remote control) 295
 - Phase noise measurement 112
 - Phase noise measurement (remote control) 303
 - Position 101
 - Positioning 105
 - Positioning (remote control) 270
 - Remote control 270
 - Search settings (remote) 287
 - Setting up (remote control) 270
 - Spectrograms (remote control) 278, 309
 - State 100
 - Step size 103
 - Step size (remote control) 277
 - Table 102
 - Table (evaluation method) 26
 - Table (remote control) 277
 - Type 101
 - X-value 101
- Maximizing
 - Windows (remote) 236, 260
- Measurement examples
 - Analog Modulation Analysis 126
- Measurement time 55, 57
 - Auto settings 84
 - Displayed 14
- Effects 31
 - Value range 30
- Minimum 106
 - Marker positioning 106
 - Next 106
- MKR ->
 - Key 105
- MKR FUNCT
 - Key 109
- Modulation
 - Depth 25
 - Depth, scaling 70
 - Frequency 25, 29
- Multiple
 - Channels 13
- N**
- n dB down
 - Delta value 112
 - Marker 112
 - Remote control 299
- Next Minimum 106
 - Marker positioning 106
- Next Mode X
 - Softkey 107
- Next Mode Y
 - Softkey 107
- Next Peak 106
 - Marker positioning 106
- Noise
 - Source 79
- O**
- Offset
 - Reference level 44
- Options
 - Electronic attenuation 45
 - Preamplifier 46
- Output
 - Analog Modulation Analysis 80, 81
 - Analog Modulation Analysis (remote) 184, 185
 - Configuration 79
 - Noise source 79
 - Settings 79
 - Trigger 52
- Overload
 - RF input (remote) 144
- Overview
 - Configuration K7 35
 - Softkey 35
- P**
- Peak excursion 105, 108, 115, 117
- Peak list 116
 - Configuring 114
 - Displaying 114
 - Evaluation method 26
 - Exporting 118
 - Marker numbers 117
 - Maximum number of peaks 117
 - Remote control 295
 - Sort mode 117
 - State 117

- Peak search
 - Area (spectrograms) 108
 - Automatic 116
 - Excursion 115
 - Key 106
 - Limits 114
 - List 116
 - Mode 107
 - Mode (spectrograms) 106, 107
 - Reference marker 103
 - Type (spectrograms) 108
- Peaks
 - Marker positioning 106
 - Next 106
 - Softkey 106
- Performance
 - Improving 31
- Performing
 - AM/FM/PM Modulation Analysis 123
- Phase
 - Deviation 29
 - Deviation, scaling 70
 - Unit 74
- Phase noise measurement
 - Activating/Deactivating 114
 - Deactivating 114
 - Marker 112
 - Remote control 303
- Phase Wrap
 - Activating 62
- PM (Offline)
 - Softkey 50
- PM Spectrum
 - Evaluation method 21
- PM Time Domain
 - Evaluation method 18
- Ports
 - External Mixer (remote) 155
- Power mode
 - Band power measurement 121
- Power sensors 39
 - Trigger mode 50
- Preamplifier
 - Setting 46
 - Softkey 46
- Preset
 - Bands (External Mixer, remote) 151
- Presetting
 - Channels 37
- Pretrigger 51
- Programming examples
 - External Mixer 159
 - Statistics 331, 332
- Protection
 - RF input (remote) 144
- Q**
- Quick Config
 - Traces 90
- R**
- Range 72
 - Scaling 72
- RBW 55
 - Displayed 14
 - Remote control 198
- Reference
 - Fixed 103
 - Marker 103
- Reference level 44
 - Auto level 45, 84
 - Displayed 14
 - Offset 44
 - Offset, displayed 14
 - Position 72
 - Unit 44
 - Value 44
- Reference marker 101
- Reference value 70
 - Position 70
- Release notes 10
- Remote commands
 - Basics on syntax 133
 - Boolean values 137
 - Capitalization 134
 - Character data 137
 - Data blocks 138
 - Deprecated 335
 - Numeric values 136
 - Optional keywords 135
 - Parameters 136
 - Strings 138
 - Suffixes 135
- Repetition interval 51
- Res BW
 - see RBW 55
- Resetting
 - RF input protection 144
- Residual FM 29
- Resolution bandwidth
 - see RBW 55
- Restoring
 - Channel settings 37
 - Standard files 38
- Result Display 13
- Result displays
 - Marker table 26
 - Peak list 26
- Result Summary
 - Demodulation spectrum 64
 - Evaluation method 24
 - Retrieving values (remote) 250
- Results 16
 - Analyzing 86
 - Data format (remote) 248, 249
 - Exporting 96
 - Retrieving (remote control) 244
 - Stability 31
- RF (Offline)
 - Softkey 50
- RF attenuation
 - Auto 45
 - Manual 45
- RF full span 65
- RF input 39
 - Overload protection (remote) 144
 - Remote 144
- RF overrange
 - External Mixer 155

- RF Spectrum
 - Evaluation method 23
 - Troubleshooting 131
- RF Time Domain
 - Evaluation method 22
- RUN CONT
 - Key 56, 93
- RUN SINGLE
 - Key 57, 93
- S**
- Safety instructions 10
- Sample rate 30
- Samples
 - Performance 31
- Saving
 - Settings 38
- Scaling
 - AF 69
 - Amplitude range, automatically 72
 - Automatic 71, 84
 - Configuration 69
 - Result Summary 71
 - RF 71
 - Y-axis 73
 - Y-axis (remote control) 196
- Screen layout 13
- Search Configuration (softkey) 104
- Search Mode
 - Spectrogram markers 106
- Search settings
 - Markers (remote) 287
- Searching
 - Configuration (softkey) 106
- Secure user mode
 - Storage location 38
- Security procedures 10
- Select Frame
 - Softkey 58, 92
- Select Marker 105
- Sequencer 13
 - Activating (remote) 234
 - Remote 233
- Sequences
 - Aborting (remote) 234
 - Mode (remote) 234
- Service manual 10
- Settings
 - Displayed 35
 - filename 38
 - Restoring files 38
 - Storage location 38
- Settings files
 - Deleting 38
 - Loading 38
 - Predefined 339
 - Saving 38
- Signal ID
 - External Mixer (remote) 149
- Signal-to-noise ratio 29
- Signal-to-noise-and-distortion
 - see SINAD 25
- SINAD 25
 - Querying (remote) 253
 - Troubleshooting 131
- Single sweep
 - Softkey 57, 93
- Slope
 - Trigger 51, 204
- Softkey
 - Calibrate Reflection Open (remote control) 182
 - Calibrate Reflection Short (remote control) 182
 - Calibrate Transmission (remote control) 182
- Softkeys
 - AM (Offline) 50
 - Amplitude Config 43
 - Auto All 83
 - Auto Freq 83
 - Auto Level 45, 84
 - Center 47, 65
 - Clear Spectrogram 59, 93
 - Color Mapping 92
 - Continue Single Sweep 57
 - Continuous Sweep 56, 93
 - Display Config 59
 - External 49
 - FM (Offline) 50
 - Frame count 58
 - Free Run 49
 - History Depth 92
 - IF Power 49
 - Input Source Config 39
 - Lower Level Hysteresis 85
 - Marker Search Area 108
 - Marker Search Type 108
 - Marker to Trace 101
 - Meastime Auto 84
 - Meastime Manual 84
 - Min 106
 - Next Min 106
 - Next Mode X 107
 - Next Mode Y 107
 - Next Peak 106
 - Norm/Delta 101
 - Outputs Config 79
 - Overview 35
 - Peak 106
 - PM (Offline) 50
 - Power Sensor 50
 - Preamp 46
 - Ref Level 44
 - Ref Level Offset 44
 - RF (Offline) 50
 - RF Atten Auto 45
 - RF Atten Manual 45
 - Search Config 104, 106
 - Select Frame 58, 92
 - Single Sweep 57, 93
 - Time 50
 - Timestamp 92
 - Trace 1/2/3/4 90
 - Trace Config 86
 - Trigger Offset 51
 - Upper Level Hysteresis 84
- Sort mode
 - Peak list 117
- Span 65
 - Band power measurement 120
 - Displayed 15
 - Manual 65
- Speaker
 - Remote control 186

- Specifications 10
- Specifics for
 - Configuration 37
- Spectrograms
 - 3-dimensional 91, 92
 - Activating/Deactivating 91
 - Clearing 59, 93
 - Color curve 95
 - Color mapping 92, 94
 - Color mapping (remote control) 261
 - Color scheme 95
 - Configuring (remote control) 256
 - Display depth (3-D) 92
 - Frames (remote control) 256
 - History depth 92
 - Markers (remote control) 278, 309
 - Selecting frames see THD 58, 92
 - Settings 90
 - Size 91
 - Timestamps 92
- Spectrum
 - Demodulation 63
- Squelch
 - AF 60
 - Level 60
 - Remote control 210
 - State 60
- Standards
 - Configuration 37
 - Predefined 339
 - Presetting 38
 - VSA measurements 37
- Statistics
 - Programming example 331, 332
- Status registers
 - STAT:QUES:POW 144
- Step size
 - Markers 103
 - Markers (remote control) 277
- Storage location
 - Secure user mode 38
 - Settings 38
- Subwindows
 - Spectrogram 91
- Suffixes
 - Common 138
 - Remote commands 135
- Sweep
 - Aborting 56, 57, 93
 - Settings 55
- Sweep Count 58
- Sweep points
 - Displayed 15
- Sweep Points 57
- Sweeps
 - Performing (remote) 232
- T**
- THD 25
 - Querying (remote) 254
 - Troubleshooting 131
 - Unit 74
- Time domain zoom 32, 61
 - Length 62
 - Start 62
 - State 61
 - Time per division 62
- Time frames
 - Continuing 58
 - per sweep 58
 - Selecting 58, 92
- Time per division
 - Displayed 15
 - Time domain zoom 62
- Time trigger
 - Repetition interval 51
 - Softkey 50
- Timestamps
 - Softkey (Spectrogram) 92
 - Spectrograms 92
- Total harmonic distortion
 - see THD 25
- Traces 90
 - Average mode 89
 - Averaging (remote control) 268
 - Configuration 86
 - Configuring (remote control) 263
 - Detector 88
 - Detector (remote control) 224, 269
 - Export format 97, 98
 - Exporting 95, 96, 97, 98, 124
 - Hold 89
 - Mode 87
 - Mode (remote) 264
 - Remote control 244
 - Retrieving results (remote) 244
 - Settings (remote control) 263
 - Settings, predefined 90
- Trigger
 - Drop-out time 51
 - External (remote) 205
 - Holdoff 52
 - Hysteresis 51
 - Offset 51
 - Offset, value range 30
 - Output 52
 - Remote control 200
 - Settings 48
 - Slope 51, 204
- Trigger level 50
 - External trigger (remote) 202
 - I/Q Power (remote) 203
 - IF Power (remote) 203
- Trigger source 49
 - AF 31
 - AM (Offline) 50
 - External 49
 - FM (Offline) 50
 - Free Run 49
 - IF Power 49
 - PM (Offline) 50
 - Power Sensor 50
 - RF (Offline) 50
 - Settings 48
 - Time 50
- Troubleshooting 131
 - Demodulation bandwidth 131
 - Input overload 144
 - RF Spectrum 131
 - SINAD 131
 - THD 131

U

Units	73
Reference level	44
Upper Level Hysteresis	84

V

Videos	11
Volume	
Remote control	186

W

Weighting filter	
AF filters	68
White papers	11
Window title bar information	14
Windows	
Adding (remote)	237
Closing (remote)	243
Configuring	37
Layout (remote)	240
Maximizing (remote)	236, 260
Querying (remote)	238, 239
Replacing (remote)	240
Splitting (remote)	236, 260
Types (remote)	237

X

X-value	
Marker	101

Y

Y-axis	
Scaling	73
YIG-preselector	
Activating/Deactivating	41
Activating/Deactivating (remote)	145

Z

Zero Phase	
Reference Position	62
Reference Position (remote)	210
Zooming	
Time domain	32, 61