


# R&S® FPL1-K7

## AM/FM/PM Modulation Analysis

### Option

### User Manual

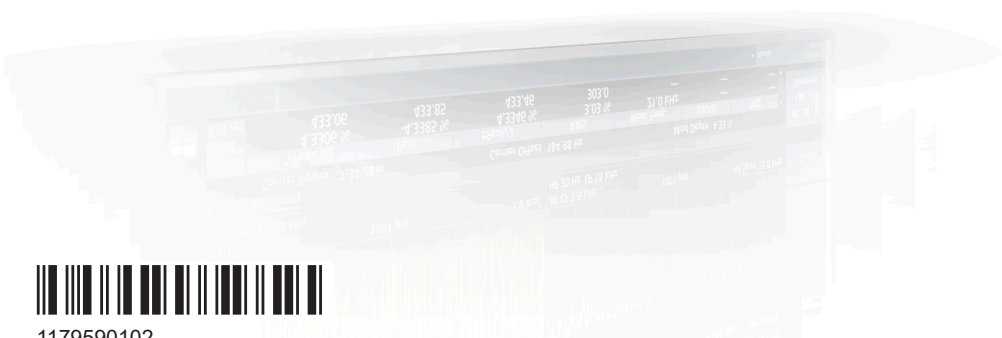

1179590102  
Version 02



This manual applies to the following R&S®EPL1000 models with firmware version 1.10 and higher:

- R&S®EPL1000 (1350.4444K10)

The following firmware options are described:

- R&S®FPL1-K7 (1323.1731.02)

© 2023 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

1179.5901.02 | Version 02 | R&S®FPL1-K7

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®EPL1000 is indicated as R&S EPL1000.

# Contents

<b>1</b>	<b>Preface</b> .....	<b>9</b>
<b>1.1</b>	<b>Documentation overview</b> .....	<b>9</b>
1.1.1	Getting started manual.....	9
1.1.2	User manuals and help.....	9
1.1.3	Service manual.....	9
1.1.4	Instrument security procedures.....	10
1.1.5	Printed safety instructions.....	10
1.1.6	Data sheets and brochures.....	10
1.1.7	Release notes and open source acknowledgment (OSA).....	10
1.1.8	Application notes, application cards, white papers, etc.....	10
1.1.9	Video tutorials.....	10
1.1.10	Calibration certificate.....	11
<b>1.2</b>	<b>Conventions used in the documentation</b> .....	<b>11</b>
1.2.1	Typographical conventions.....	11
1.2.2	Conventions for procedure descriptions.....	11
1.2.3	Notes on screenshots.....	12
<b>2</b>	<b>Welcome to the R&amp;S FPL1-K7 AM/FM/PM Modulation Analysis application</b> .....	<b>13</b>
<b>2.1</b>	<b>Starting AM/FM/PM Modulation Analysis</b> .....	<b>14</b>
<b>2.2</b>	<b>Understanding the display information</b> .....	<b>15</b>
<b>3</b>	<b>Measurement basics</b> .....	<b>18</b>
<b>3.1</b>	<b>Demodulation process</b> .....	<b>18</b>
<b>3.2</b>	<b>Demodulation bandwidth</b> .....	<b>20</b>
<b>3.3</b>	<b>Sample rate and demodulation bandwidth</b> .....	<b>21</b>
<b>3.4</b>	<b>AF triggers</b> .....	<b>22</b>
<b>3.5</b>	<b>AF filters</b> .....	<b>22</b>
<b>3.6</b>	<b>Time domain zoom</b> .....	<b>22</b>
<b>3.7</b>	<b>Receiving data input and providing data output</b> .....	<b>24</b>
3.7.1	Increasing measurement sensitivity (or avoiding an input mixer overload).....	24
3.7.1.1	Using the RF attenuator.....	25
3.7.1.2	Using the preamplifier.....	26

3.7.1.3	Using the preselector.....	26
<b>4</b>	<b>Measurements and result displays.....</b>	<b>28</b>
<b>5</b>	<b>Configuration.....</b>	<b>39</b>
<b>5.1</b>	<b>Configuration according to digital standards.....</b>	<b>39</b>
<b>5.2</b>	<b>Configuration overview.....</b>	<b>41</b>
<b>5.3</b>	<b>Data input and output.....</b>	<b>43</b>
5.3.1	Configuring the RF input.....	43
5.3.2	Settings for input from I/Q data files.....	44
5.3.3	Configuring the preselector.....	45
5.3.4	Configuring outputs (IF / video / demodulation).....	45
5.3.5	Configuring line impedance stabilization networks (LISN).....	46
5.3.6	Configuring additional outputs.....	46
<b>5.4</b>	<b>Amplitude.....</b>	<b>47</b>
<b>5.5</b>	<b>Frequency.....</b>	<b>49</b>
<b>5.6</b>	<b>Trigger configuration.....</b>	<b>51</b>
<b>5.7</b>	<b>Bandwidth settings.....</b>	<b>54</b>
<b>5.8</b>	<b>Sweep settings.....</b>	<b>55</b>
<b>5.9</b>	<b>Demodulation.....</b>	<b>57</b>
5.9.1	Basic demodulation measurement parameters (Demod).....	57
5.9.2	Demodulation spectrum.....	60
5.9.2.1	AF evaluation.....	60
5.9.2.2	RF evaluation.....	61
5.9.3	AF filter.....	63
5.9.4	Scaling.....	66
5.9.4.1	AF evaluation.....	66
5.9.4.2	RF evaluation.....	68
5.9.5	Units.....	70
5.9.6	Result table settings.....	70
<b>5.10</b>	<b>Demodulation display.....</b>	<b>73</b>
<b>5.11</b>	<b>Automatic settings.....</b>	<b>73</b>
<b>6</b>	<b>Analysis.....</b>	<b>76</b>
<b>6.1</b>	<b>Trace configuration.....</b>	<b>76</b>

6.2	Marker settings.....	77
6.3	Display lines and limit lines.....	77
7	<b>How to perform measurements in the R&amp;S FPL1-K7 AM/FM/PM Modulation Analysis application.....</b>	<b>78</b>
7.1	How to export trace data and numerical results.....	79
8	<b>Measurement example: demodulating an FM signal.....</b>	<b>81</b>
9	<b>Optimizing and troubleshooting the measurement.....</b>	<b>86</b>
10	<b>Remote commands for analog demodulation.....</b>	<b>87</b>
10.1	<b>Introduction.....</b>	<b>87</b>
10.1.1	Conventions used in descriptions.....	87
10.1.2	Long and short form.....	88
10.1.3	Numeric suffixes.....	88
10.1.4	Optional keywords.....	89
10.1.5	Alternative keywords.....	89
10.1.6	SCPI parameters.....	89
10.1.6.1	Numeric values.....	90
10.1.6.2	Boolean.....	91
10.1.6.3	Character data.....	91
10.1.6.4	Character strings.....	91
10.1.6.5	Block data.....	91
10.2	<b>Common suffixes.....</b>	<b>92</b>
10.3	<b>Application selection.....</b>	<b>92</b>
10.4	<b>Measurement configuration.....</b>	<b>96</b>
10.4.1	Standard selection.....	96
10.4.2	Input configuration.....	97
10.4.2.1	RF input.....	97
10.4.2.2	Preselector configuration.....	100
10.4.2.3	LISN configuration.....	100
10.4.3	Output configuration.....	100
10.4.4	Amplitude configuration.....	100
10.4.5	Frequency configuration.....	104
10.4.6	Trigger configuration.....	105

10.4.7	Automatic configuration.....	111
10.4.8	Data acquisition.....	114
10.4.9	Demodulation settings.....	122
10.4.9.1	Basic demodulation settings.....	122
10.4.9.2	Time domain zoom settings.....	124
10.4.9.3	Demodulation spectrum configuration.....	126
	AF evaluation.....	126
	RF evaluation.....	129
10.4.9.4	AF filters (post-processing).....	130
10.4.9.5	AF evaluation scaling.....	136
10.4.9.6	RF evaluation scale.....	136
10.4.9.7	Units.....	138
10.4.9.8	Relative demodulation results.....	138
<b>10.5</b>	<b>Result display configuration.....</b>	<b>141</b>
10.5.1	General window commands.....	141
10.5.2	Screen layout.....	142
<b>10.6</b>	<b>Measurement results.....</b>	<b>149</b>
10.6.1	Result retrieval.....	149
10.6.2	Retrieving result summary values.....	155
10.6.3	Trace export.....	159
<b>10.7</b>	<b>Analysis.....</b>	<b>160</b>
<b>10.8</b>	<b>Data import and export.....</b>	<b>161</b>
<b>10.9</b>	<b>Programming example.....</b>	<b>162</b>
	<b>Annex.....</b>	<b>165</b>
<b>A</b>	<b>Predefined standards and settings.....</b>	<b>165</b>
<b>B</b>	<b>Formats for returned values: ASCII format and binary format.....</b>	<b>167</b>
<b>C</b>	<b>Reference: ASCII file export format.....</b>	<b>168</b>
<b>D</b>	<b>I/Q data file format (iq-tar).....</b>	<b>169</b>
<b>D.1</b>	<b>I/Q parameter XML file specification.....</b>	<b>170</b>
D.1.1	Minimum data elements.....	170
D.1.2	Example.....	172

<b>D.2 I/Q data binary file.....</b>	<b>174</b>
<b>List of commands (Analog Modulation Analysis).....</b>	<b>177</b>
<b>Index.....</b>	<b>181</b>





# 1 Preface

This chapter provides safety-related information, an overview of the user documentation and the conventions used in the documentation.

## 1.1 Documentation overview

This section provides an overview of the R&S EPL1000 user documentation. Unless specified otherwise, you find the documents at:

[www.rohde-schwarz.com/manual/EPL](http://www.rohde-schwarz.com/manual/EPL)

### 1.1.1 Getting started manual

Introduces the R&S EPL1000 and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

### 1.1.2 User manuals and help

Separate user manuals are provided for the base unit and the firmware applications:

- **Base unit manual**  
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- **Firmware application manual**  
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the R&S EPL1000 is not included.

The contents of the user manuals are available as help in the R&S EPL1000. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

### 1.1.3 Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

#### **1.1.4 Instrument security procedures**

Deals with security issues when working with the R&S EPL1000 in secure areas. It is available for download on the internet.

#### **1.1.5 Printed safety instructions**

Provides safety information in many languages. The printed document is delivered with the product.

#### **1.1.6 Data sheets and brochures**

The data sheet contains the technical specifications of the R&S EPL1000. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/EPL](http://www.rohde-schwarz.com/brochure-datasheet/EPL)

#### **1.1.7 Release notes and open source acknowledgment (OSA)**

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The software makes use of several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

See [www.rohde-schwarz.com/firmware/EPL](http://www.rohde-schwarz.com/firmware/EPL)

#### **1.1.8 Application notes, application cards, white papers, etc.**

These documents deal with special applications or background information on particular topics.

See [www.rohde-schwarz.com/application/EPL](http://www.rohde-schwarz.com/application/EPL)

#### **1.1.9 Video tutorials**

Video tutorials that show you how to get started and perform basic tasks with the R&S EPL1000 are available on the Rohde & Schwarz internet site:

[https://www.rohde-schwarz.com/manual/r-s-fpl1000-trying-out-basic-measurement-tasks-manuals\\_78701-567115.html](https://www.rohde-schwarz.com/manual/r-s-fpl1000-trying-out-basic-measurement-tasks-manuals_78701-567115.html)

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>

### 1.1.10 Calibration certificate

The document is available on <https://gloris.rohde-schwarz.com/calcert>. You need the device ID of your instrument, which you can find on a label on the rear panel.

## 1.2 Conventions used in the documentation

### 1.2.1 Typographical conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
Filenames, commands, program code	Filenames, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
<a href="#">Links</a>	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

### 1.2.2 Conventions for procedure descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

### 1.2.3 Notes on screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

## 2 Welcome to the R&S FPL1-K7 AM/FM/PM Modulation Analysis application

The R&S FPL1-K7 AM/FM/PM Modulation Analysis application converts the R&S EPL1000 into an analog modulation analyzer for amplitude-, frequency- or phase-modulated signals. It measures not only characteristics of the useful modulation, but also factors such as residual FM or synchronous modulation.

The digital signal processing in the R&S EPL1000, used in the Spectrum application for digital IF filters, is also ideally suited for demodulating AM, FM, or PM signals.

The firmware option R&S FPL1-K7 provides the necessary measurement functions.

The R&S FPL1-K7 AM/FM/PM Modulation Analysis application features:

- AM, FM, and PM demodulation, with various result displays:
  - Modulation signal versus time
  - Spectrum of the modulation signal (FFT)
  - RF signal power versus time
  - Spectrum of the RF signal
- Determining maximum, minimum and average or current values in parallel over a selected number of measurements
- Maximum accuracy and temperature stability due to sampling (digitization) already at the IF and digital down-conversion to the baseband (I/Q)
- Error-free AM to FM conversion and vice versa, without deviation errors, frequency response or frequency drift at DC coupling
- Relative demodulation, in relation to a user-defined or measured reference value



### **Availability of the R&S FPL1-K7 AM/FM/PM Modulation Analysis application**

Using the R&S FPL1-K7 AM/FM/PM Modulation Analysis application requires the optional AM/FM/PM Modulation Analysis firmware.

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S EPL1000 User Manual. The latest version is available for download at the product homepage <http://www.rohde-schwarz.com/product/EPL1000>.

### **Installation**

You can find detailed installation instructions in the R&S EPL1000 Getting Started manual or in the Release Notes.

## 2.1 Starting AM/FM/PM Modulation Analysis

AM/FM/PM Modulation Analysis is a separate application on the R&S EPL1000.

### To activate AM/FM/PM Modulation Analysis

1. Select [MODE].  
A dialog box opens that contains all operating modes and applications currently available on your R&S EPL1000.
2. Select the "AM FM PM Analog Demod" item.



The R&S EPL1000 opens a new channel setup for the application for analog modulation analysis.


The measurement is started immediately with the default settings. It can be configured in the analog modulation analysis [Configuration overview](#) dialog box, which is displayed when you select "Overview" from any menu.

### Multiple Channel setups and Sequencer Function

When you activate an application, a new channel setup is created which determines the measurement settings for that application ("Channel"). The same application can be activated with different measurement settings by creating several "Channel"s for the same application.

The number of channel setups that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel setup. However, to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently defined "Channel"s are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label.

The result displays of the individual channel setups are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function, see the R&S EPL1000 User Manual.

## 2.2 Understanding the display information

The following figure shows a measurement diagram during analog modulation analysis. All different information areas are labeled. They are explained in more detail in the following sections.



- 1 = Channel setup bar for firmware and measurement settings
- 2 = Window title bar with diagram-specific (trace) information
- 3 = Diagram area
- 4 = Diagram footer with diagram-specific information, depending on result display
- 5 = Instrument status bar with error messages and date/time display

### Channel setup bar information

In the Analog Modulation Analysis application, the R&S EPL1000 shows the following settings:

**Table 2-1: Information displayed in the channel setup bar in the application for analog modulation analysis**

<b>Ref Level</b>	Reference level
<b>Att</b>	RF attenuation applied to input
<b>Offset</b>	Reference level offset
<b>AQT</b>	Measurement time for data acquisition.
<b>RBW</b>	Resolution bandwidth
<b>DBW</b>	Demodulation bandwidth
<b>Freq</b>	Center frequency for the RF signal
<b>10 dB min</b>	State of the attenuation limit
<b>Out</b>	Output type

### Window title bar information

For each diagram, the header provides the following information:



**Figure 2-1: Window title bar information in the application for analog modulation analysis**

- 1 = Window number
- 2 = Window type
- 3 = Trace color
- 4 = Trace number
- 5 = Detector
- 6 = Trace mode
- 7 = Reference value (at the defined reference position)
- 8 = AF coupling (AC/DC), only in AF time domains, if applicable
- 9 = Results are selected for demodulation output

### Diagram footer information

The diagram footer (beneath the diagram) contains the following information, depending on the evaluation:

"RF Spectrum"		
CF: Center frequency of input signal	Sweep points	Span: measured span

RF Time domain		
CF: Center frequency of input signal	Sweep points	Time per division

AF Spectrum		
AF CF: center frequency of demodulated signal	Sweep points	AF Span: evaluated span

AF Time domain		
CF: Center frequency of input signal	Sweep points	Time per division

For most modes, the number of sweep points shown in the display are indicated in the diagram footer. In zoom mode, the (rounded) number of currently displayed points are indicated.



**Status bar information**

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram.

## 3 Measurement basics

Some background knowledge on basic terms and principles used in Analog Modulation Analysis measurements is provided here for a better understanding of the required configuration settings.

- [Demodulation process](#)..... 18
- [Demodulation bandwidth](#).....20
- [Sample rate and demodulation bandwidth](#).....21
- [AF triggers](#).....22
- [AF filters](#).....22
- [Time domain zoom](#).....22
- [Receiving data input and providing data output](#).....24

### 3.1 Demodulation process

The demodulation process is shown in [Figure 3-1](#). All calculations are performed simultaneously with the same I/Q data set. Magnitude (= amplitude) and phase of the complex I/Q pairs are determined. The frequency result is obtained from the differential phase.

For details on general I/Q data processing in the R&S EPL1000, refer to the reference part of the I/Q Analysis remote control description in the R&S EPL1000 User Manual.

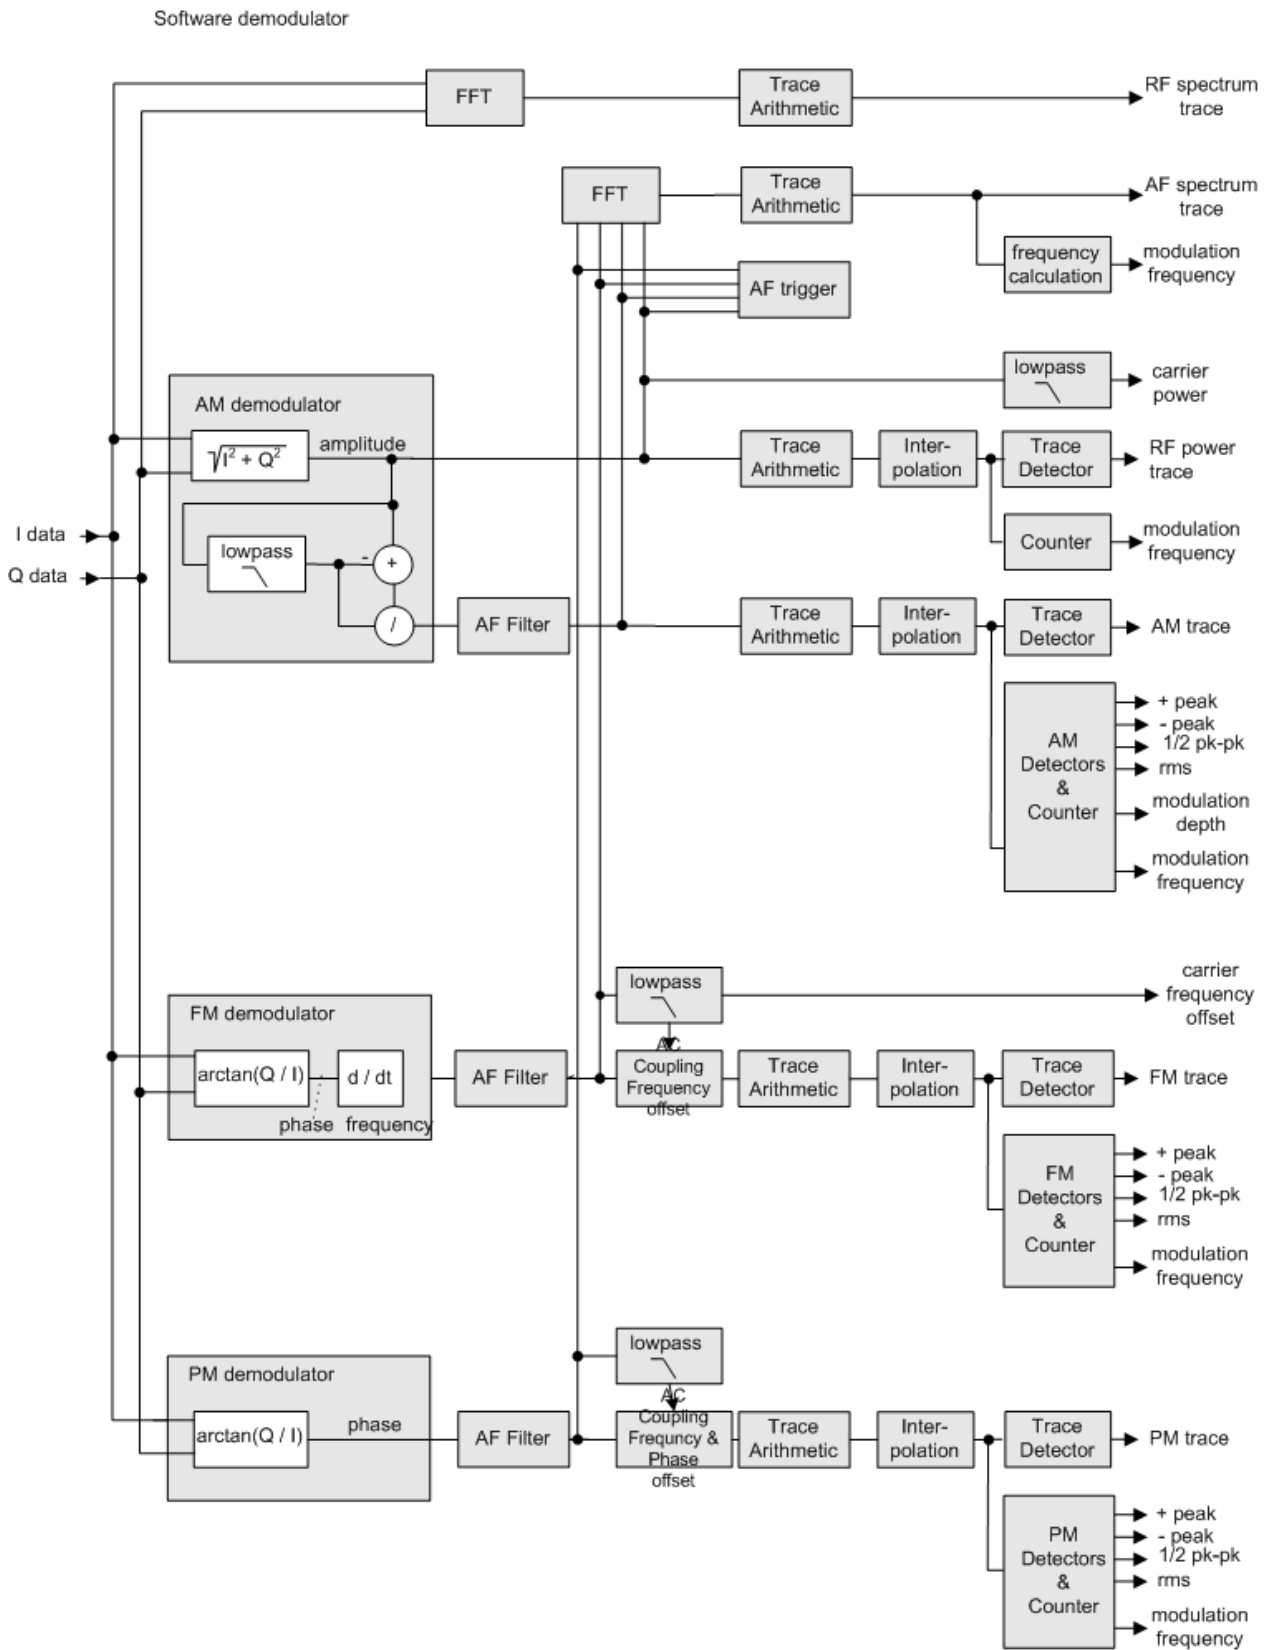


Figure 3-1: Block diagram of software demodulator

The AM DC, FM DC and PM DC raw data of the demodulators is fed into the "Trace Arithmetic" block that combines consecutive data sets. Possible trace modes are: Clear Write, Max Hold, Min Hold and Average. The output data of the "Trace Arithmetic" block can be read via remote control ([SENS:]ADEM:<evaluation>:RES?, see [SENSe:]ADEMod:AM[:ABSolute] [:TDOMain]:RESult? on page 150.

The collected measured values are evaluated by the selected detector. The result is displayed on the screen and can be read out via remote control.

In addition, important parameters are calculated:

- A counter determines the modulation frequency for AM, FM, and PM.
- average power = carrier power (RF power)
- average frequency = carrier frequency offset (FM)
- The modulation depth or the frequency or phase deviation; the deviations are determined from the trace data

AC coupling is possible with FM and PM display.

## 3.2 Demodulation bandwidth

The demodulation bandwidth determines the span of the signal that is demodulated. It is not the 3-dB bandwidth of the filter, but the useful bandwidth which is distortion-free regarding phase and amplitude.

Therefore the following formulas apply:

- AM: demodulation bandwidth  $\geq 2 \times$  modulation frequency
- FM: demodulation bandwidth  $\geq 2 \times$  (frequency deviation + modulation frequency)
- PM: demodulation bandwidth  $\geq 2 \times$  modulation frequency  $\times$  (1 + phase deviation)



If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be increased by the carrier offset, in addition to the requirement described above. The bandwidth must also be increased if FM or PM AC coupling is selected.

In general, select the demodulation bandwidth as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM.

For help on determining the adequate demodulation bandwidth, see "[Determining the demodulation bandwidth](#)" on page 86.

A practical example is described in [Chapter 8, "Measurement example: demodulating an FM signal"](#), on page 81.

### 3.3 Sample rate and demodulation bandwidth

The maximum demodulation bandwidths that can be obtained during the measurement, depending on the sample rate, are listed in the tables below for different demodulation filter types. The allowed value range of the measurement time and trigger offset depends on the selected demodulation bandwidth and demodulation filter. If the AF filter or the AF trigger are not active, the measurement time increases by 20 %.



A maximum of 24 million samples can be captured, assuming sufficient memory is available; thus the maximum measurement time can be determined according to the following formula:

$$\text{Meas.time}_{max} = \text{Sample count}_{max} / \text{sample rate}$$

The minimum trigger offset is  $(-\text{Meas.time}_{max})$

**Table 3-1: Available demodulation bandwidths and corresponding sample rates**

Demodulation BW	Sample Rate (Flat Top)	Sample Rate (Gaussian Top)
100 Hz	122.0703125 Hz	400 Hz
200 Hz	244.140625 Hz	800 Hz
400 Hz	488.28125 Hz	1.6 kHz
800 Hz	976.5625 Hz	3.2 kHz
1.6 kHz	1.953125 kHz	6.4 kHz
3.2 kHz	3.90625 kHz	12.8 kHz
6.4 kHz	7.8125 kHz	25.6 kHz
12.5 kHz	15.625 kHz	50 kHz
25 kHz	31.25 kHz	100 kHz
50 kHz	62.5 kHz	200 kHz
100 kHz	125 kHz	400 kHz
200 kHz	250 kHz	800 kHz
400 kHz	500 kHz	1.6 MHz
800 kHz	1 MHz	3.2 MHz
1.6 MHz	2 MHz	6.4 MHz
3 MHz	4 MHz	12 MHz
5 MHz	8 MHz	20 MHz
8 MHz	16 MHz	n/a
10 MHz	32 MHz	n/a

### Large numbers of samples

Principally, the R&S EPL1000 can handle up to 24 million samples. However, when 480001 samples are exceeded, all traces that are not currently being displayed in a window are deactivated to improve performance. The traces can only be activated again when the samples are reduced.



### Effects of measurement time on the stability of measurement results

Despite amplitude and frequency modulation, the display of carrier power and carrier frequency offset is stable.

Stability is achieved by a digital filter which sufficiently suppresses the modulation. As a prerequisite, the measurement time must be  $\geq 3 \times 1 / \text{modulation frequency}$ , i.e. at least three periods of the AF signal are recorded.

The mean carrier power for calculating the AM is also calculated with a digital filter. The filter returns stable results after a measurement time of  $\geq 3 \times 1 / \text{modulation frequency}$ , i.e. at least three cycles of the AF signal must be recorded before a stable AM can be shown.

## 3.4 AF triggers

The Analog Modulation Analysis application allows triggering to the demodulated signal. The display is stable if a minimum of five modulation periods are within the recording time.

Triggering is always DC-coupled. Therefore triggering is possible directly to the point where a specific carrier level, phase or frequency is exceeded or not attained.

## 3.5 AF filters

Additional filters applied after demodulation help filter out unwanted signals, or correct pre-emphasized input signals. A CCITT filter allows you to evaluate the signal by simulating the characteristics of human hearing.

## 3.6 Time domain zoom

For evaluations in the time domain, the demodulated data for a particular time span can be extracted and displayed in more detail using the "Time Domain Zoom" function. Zooming is useful if the measurement time is very large and thus each sweep point represents a large time span. The time domain zoom function distributes the available sweep points only among the time span defined by the zoom area length. The time span displayed per division of the diagram is decreased. Thus, the display of the extracted time span becomes more precise.

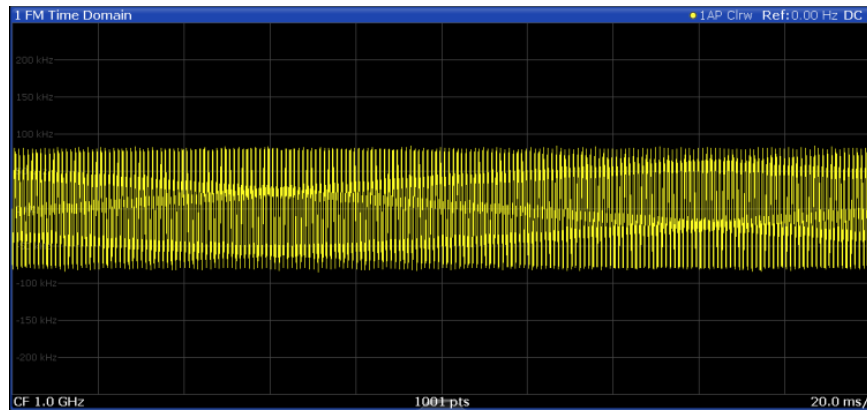


Figure 3-2: FM time domain measurement with a very long measurement time (200 ms)


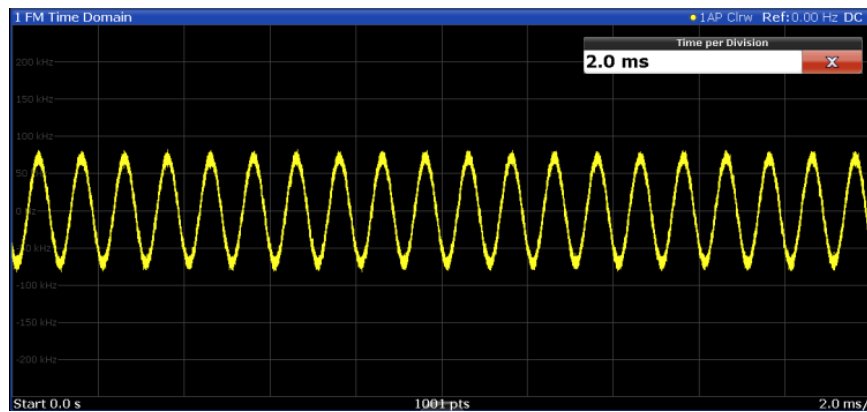


Figure 3-3: FM time domain measurement with time domain zoom (2.0 ms per division)

The time domain zoom area affects not only the diagram display, but the entire evaluation for the current window.

In contrast to the time domain zoom, the graphical zoom is available for all diagram evaluations. However, the graphical zoom is useful only if more measured values than trace points are available. The (time) span represented by each measurement point remains the same.

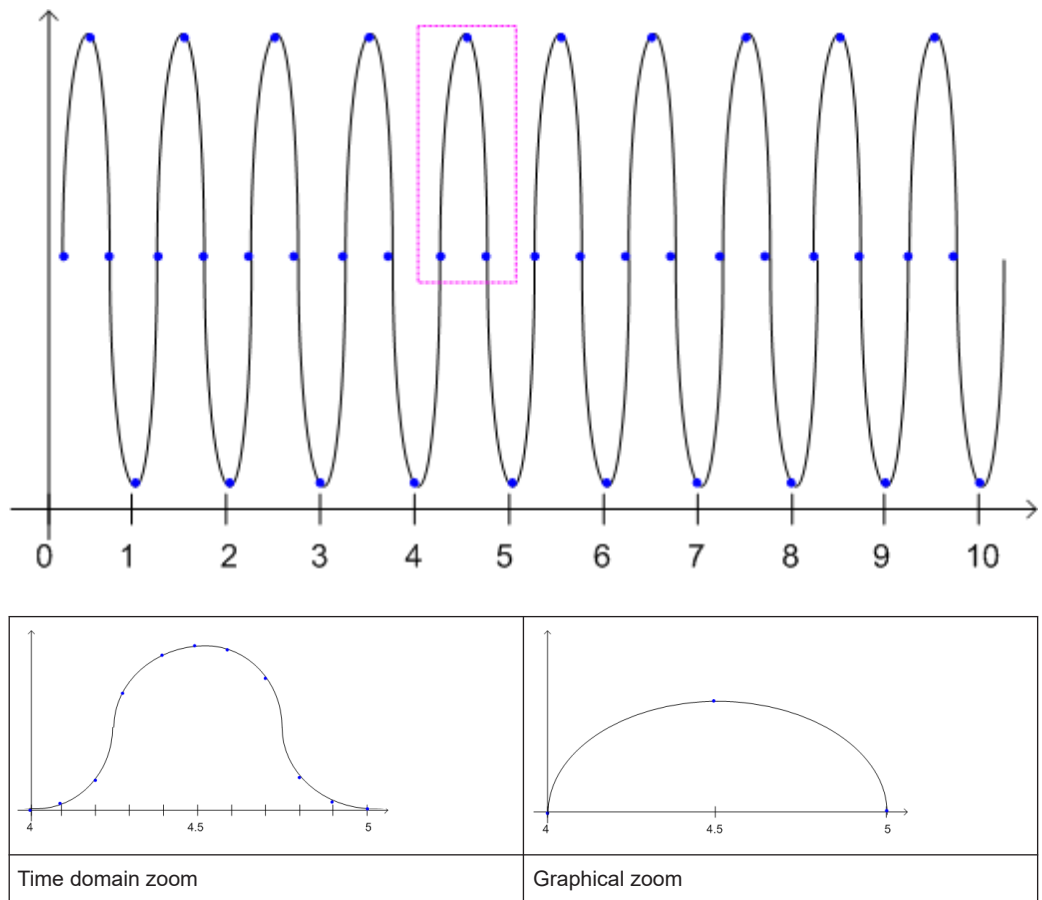

### 3.7 Receiving data input and providing data output

The R&S EPL1000 can analyze signals from different input sources and provide various types of output.

- [Increasing measurement sensitivity \(or avoiding an input mixer overload\).....24](#)

#### 3.7.1 Increasing measurement sensitivity (or avoiding an input mixer overload)

Measurements often confront you with unknown or unintentional signals with unknown signal levels (and often with pulse characteristics). Such signals can either have very weak signal levels, in which case you might miss them during the measurement. Or they can have very strong signal levels, in which case they can damage the input mixer.



### Protecting the input mixer

Always consider how to protect the input mixer from damage when setting up a measurement.

- ▶ **NOTICE!** EMC measurements often measure unknown signals that contain pulses with possibly strong signal levels. Strong signal levels can damage the input mixer. Read the following topics carefully before you apply a signal to learn more about protecting the input mixer and avoid an overload.

Note that pulses have different level characteristics. Refer to the data sheet for more information on the allowed maximum pulse energy.

The signal level at the input mixer is calculated as follows.

Mixer Level = Input Level - attenuation + gain



The R&S EPL1000 is equipped with an overload protection mechanism. This mechanism becomes active as soon as the signal level at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

In this case, you must decrease the level at the RF input connector and then close the message box. Then measurements are possible again.

- [Using the RF attenuator](#).....25
- [Using the preamplifier](#).....26
- [Using the preselector](#).....26

#### 3.7.1.1 Using the RF attenuator

The first tool provided by the R&S EPL1000 to control measurement sensitivity is the RF attenuator.

The RF attenuator is available in all hardware configurations of the R&S EPL1000.

Attenuation has the following effects on the measurement:

- High attenuation protects the input mixer: the main purpose of the attenuator is to protect the input mixer.
- High attenuation makes sure that the measurement results are reliable (signals that are stronger than allowed can distort the results)
- High attenuation helps you to avoid intermodulation
- High attenuation increases inherent noise (i.e. the noise floor) and thus decreases measurement sensitivity: if you increase attenuation by 10 dB, the sensitivity is reduced by 10 dB (in other words: the displayed noise increases by 10 dB)

Depending on the required test setup, you must find a compromise between a high sensitivity, low intermodulation and input mixer protection. We recommend to let the R&S EPL1000 determine the ideal attenuation automatically.

You can determine the attenuation automatically with the auto ranging feature in the receiver application and the auto attenuation feature in the other applications. Deter-

mining the attenuation automatically might not necessarily utilize the maximum dynamic range, but still yields valid and reliable results.

When you select the attenuation manually and are measuring unknown signals, especially DUTs with a high RFI voltage, always select the highest possible attenuation level before you apply the signal.

If you need a better sensitivity or signal-to-noise ratio, make sure that the applied signal does not exceed the specified limits, before you lower the attenuation.

For further protection of the input mixer, the R&S EPL1000 does not allow you to select attenuation levels of less than 10 dB unless you explicitly turn on this feature ("[10 dB Minimum Attenuation](#)").

### Protecting the input mixer

1. **NOTICE!** EMC measurements often measure unknown signals that contain pulses with possibly strong signal levels. Strong signal levels can damage the input mixer. Select an appropriate attenuation when you measure unknown signals or RFI voltage in combination with an artificial network (LISN). Do not apply a 0 dB attenuation for such measurements. During phase switching, such test setups generate very strong pulses which can damage the input mixer.
2. Make sure that the signal level at the RF input does not exceed the allowed limits when you allow attenuation of less than 10 dB in combination with auto ranging. Exceeding the limits can damage the input mixer.

#### 3.7.1.2 Using the preamplifier

The second tool that allows you to control measurement sensitivity is the preamplifier.

Signal gain has the following effects on the measurement:

- The preamplifier allows you to detect even weak signals.
- The preamplifier reduces the noise figure of the R&S EPL1000 and thus increases its sensitivity. Thus, it is recommended to use the preamplifier for measurements that require maximum sensitivity.
- The preamplifier reduces the dynamic range. To perform a measurement using the maximum dynamic range, turn off the preamplifier.
- The preamplifier is located after the preselection filters, reducing the risk of overloading the input mixer by strong out-of-band signals.

The gain of the preamplifier is automatically considered in the level display. The disadvantage of a lower large-signal immunity (intermodulation) is reduced by the "preselector".

#### 3.7.1.3 Using the preselector

The "preselector" is another tool to control measurement sensitivity.

Preselection has the following effects on the measurement:

- Preselection rejects most of the spectral energy which helps to protect the input mixer and thus makes sure that the measurement results are valid and reliable.
- Preselection filters out signals that you do not want to be displayed (selectivity) and thus allows you to analyze only the frequency range you are interested in.

The preselector of the R&S EPL1000 consists of several filters which are automatically applied during measurements. The filter that is used depends on the frequency that is currently measured. You can see the list of filters and the progress in the "Preselector" result display. The currently applied filter is indicated by a green LED, filters that are outside the scan range are ignored.

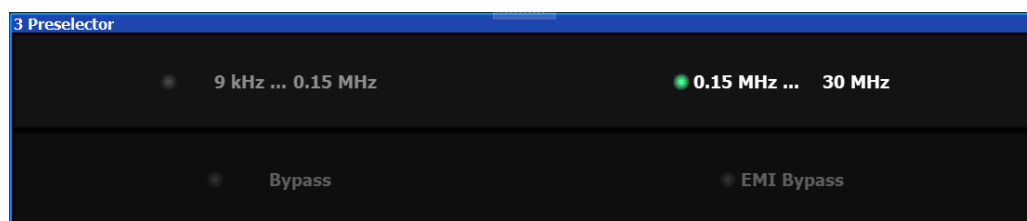


Figure 3-4: Preselector result display. The green LED indicates the currently applied filter.



#### Using the preselector

Switching the filters is a mechanical process. Avoid excessive filters switches, because the hardware can wear out.

Note that results in a frequency band are only displayed if there is at least one valid measurement point in the corresponding range. If a particular measurement point is captured by more than one filter, the R&S EPL1000 displays the combined results.

## 4 Measurements and result displays

**Access:** "Overview" > "Display Config"

**Or:** [MEAS] > "Display Config"

The data that was measured by the R&S EPL1000 can be evaluated using various different methods. In the Analog Modulation Analysis application, up to six evaluation methods can be displayed simultaneously in separate windows. The results can be displayed as absolute deviations or relative to a reference value or level.



The abbreviation "AF" (for Audio Frequency) refers to the demodulated AM, FM or PM signal.


### Basis for evaluation

All evaluations are based on the I/Q data set acquired during the measurement. The spectrum of the modulated signal to be evaluated is determined by the demodulation bandwidth. However, it can be restricted to a limited span ("AF Span") if only part of the signal is of interest. Furthermore, the time base for evaluations in the time domain can be restricted to analyze a smaller extract in more detail, see [Chapter 3.6, "Time domain zoom"](#), on page 22.

<a href="#">AM Time Domain</a> .....	28
<a href="#">FM Time Domain</a> .....	29
<a href="#">PM Time Domain</a> .....	30
<a href="#">AM Spectrum</a> .....	31
<a href="#">FM Spectrum</a> .....	32
<a href="#">PM Spectrum</a> .....	33
<a href="#">RF Time Domain</a> .....	34
<a href="#">RF Spectrum</a> .....	35
<a href="#">Result Summary</a> .....	36
<a href="#">Marker Table</a> .....	38
<a href="#">Marker Peak List</a> .....	38

### AM Time Domain

Displays the modulation depth of the demodulated AM signal (in %) versus time.

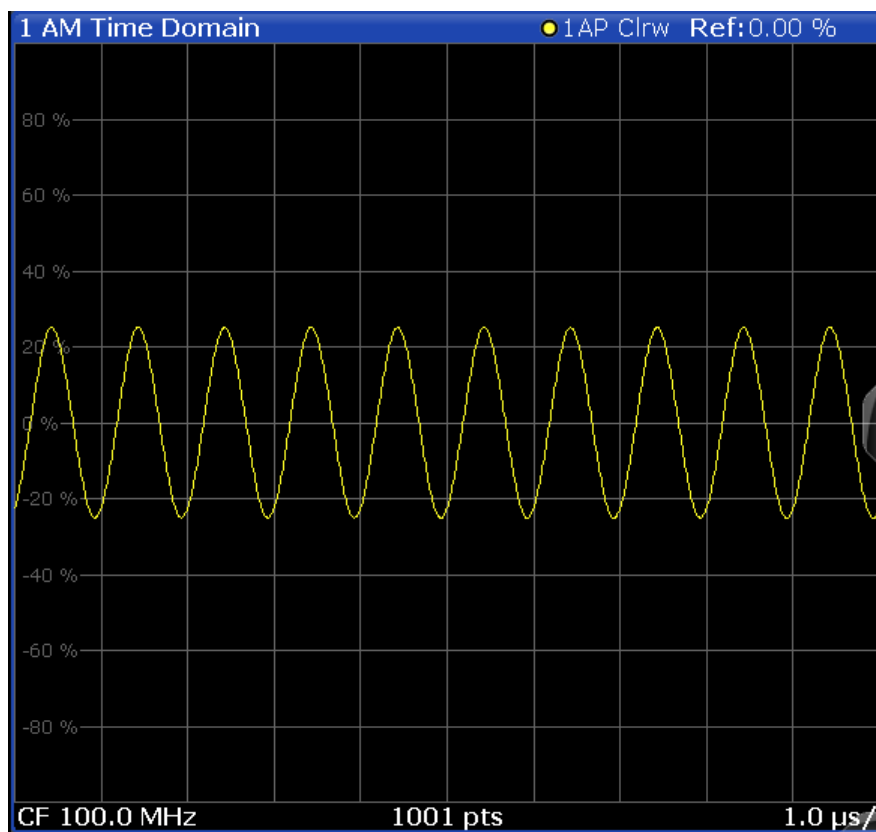


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:AM:REL'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 143)

### FM Time Domain

Displays the frequency spectrum of the demodulated FM signal versus time.

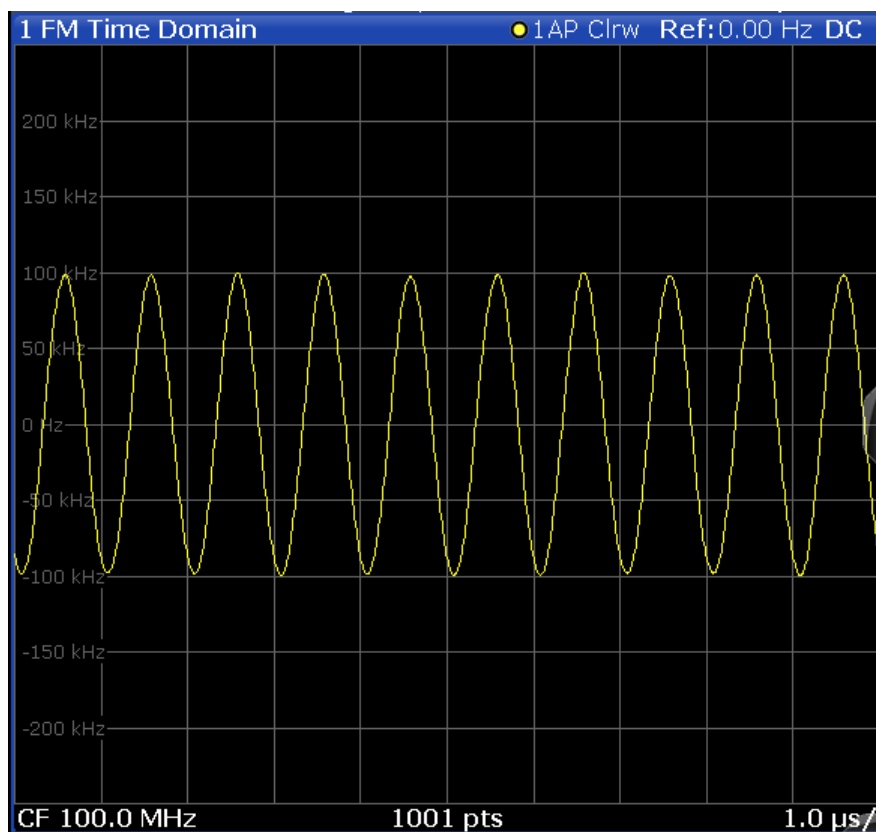


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:FM'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 143)

### PM Time Domain

Displays the phase deviations of the demodulated PM signal (in rad or °) versus time.

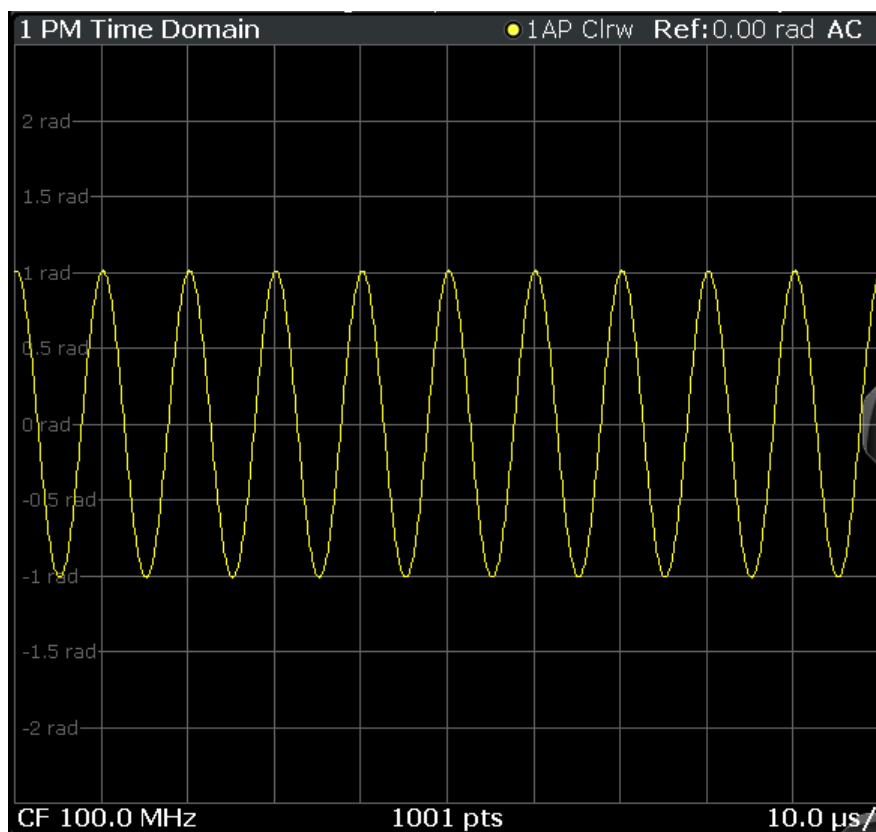


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:PM'
```

(See [LAYout:ADD\[:WINDow\]?](#) on page 143)

### AM Spectrum

Displays the modulation depth of the demodulated AM signal (in % or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.

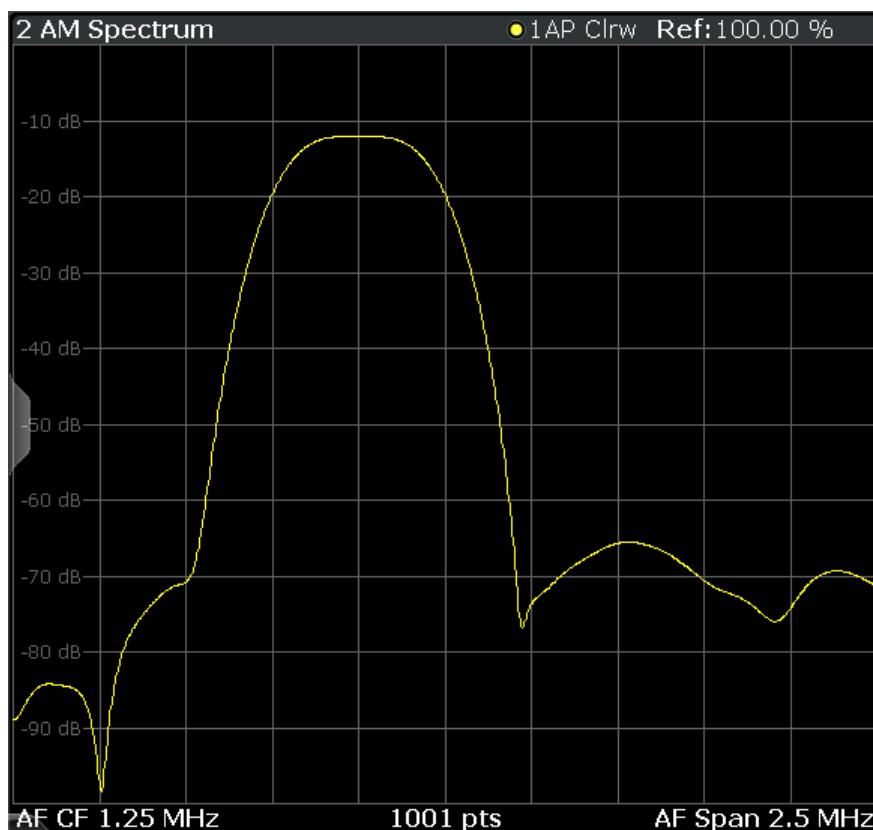

**Note:** If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.

Remote command:


```
LAY:ADD? '1',RIGH,'XTIME:AM:REL:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 143)

### FM Spectrum

Displays the frequency deviations of the demodulated FM signal (in Hz or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.



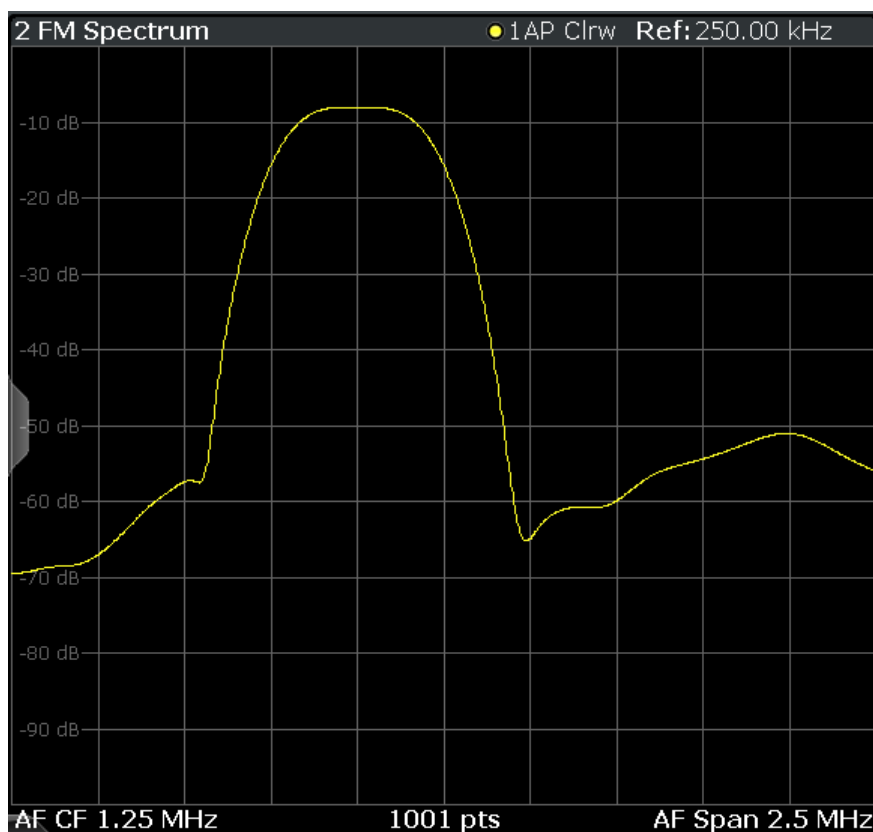

**Note:** If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIME:FM:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 143)

### PM Spectrum

Displays the phase deviations of the demodulated PM signal (in rad, ° or dB) versus AF span. The spectrum is calculated from the demodulated AM signal in the time domain via FFT.

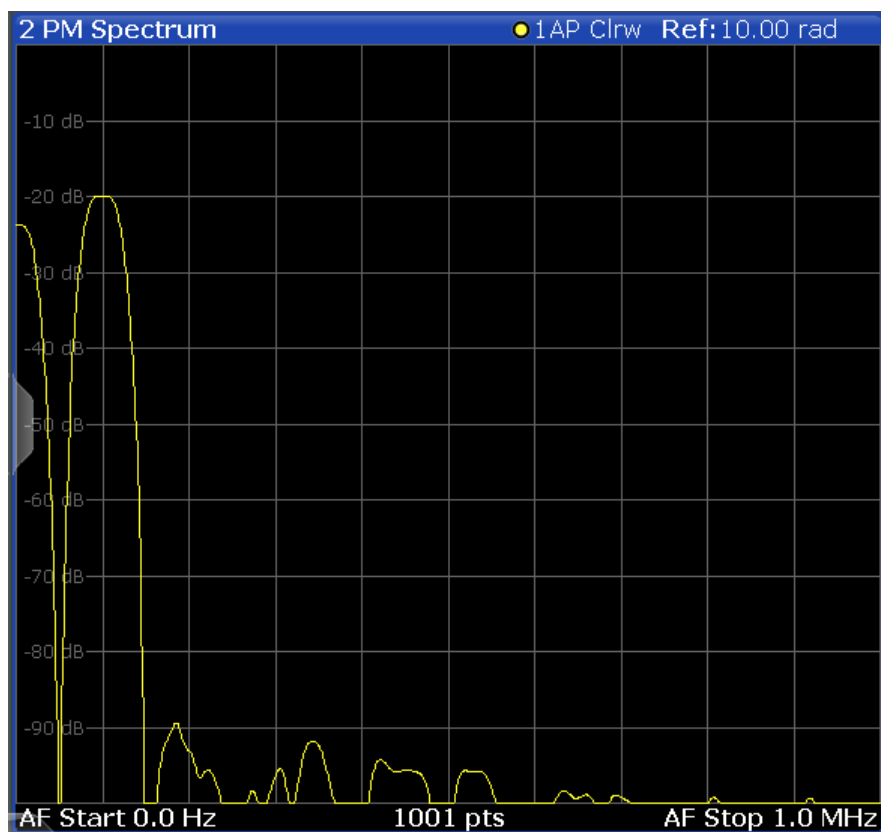

**Note:** If a high pass or low pass AF filter is defined, the filter is indicated by a vertical red line in the spectrum display.


Remote command:

```
LAY:ADD? '1',RIGH,'XTIME:PM:AFSPpectrum1'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 143)

### RF Time Domain

Displays the RF power of the input signal versus time. The level values represent the magnitude of the I/Q data set.

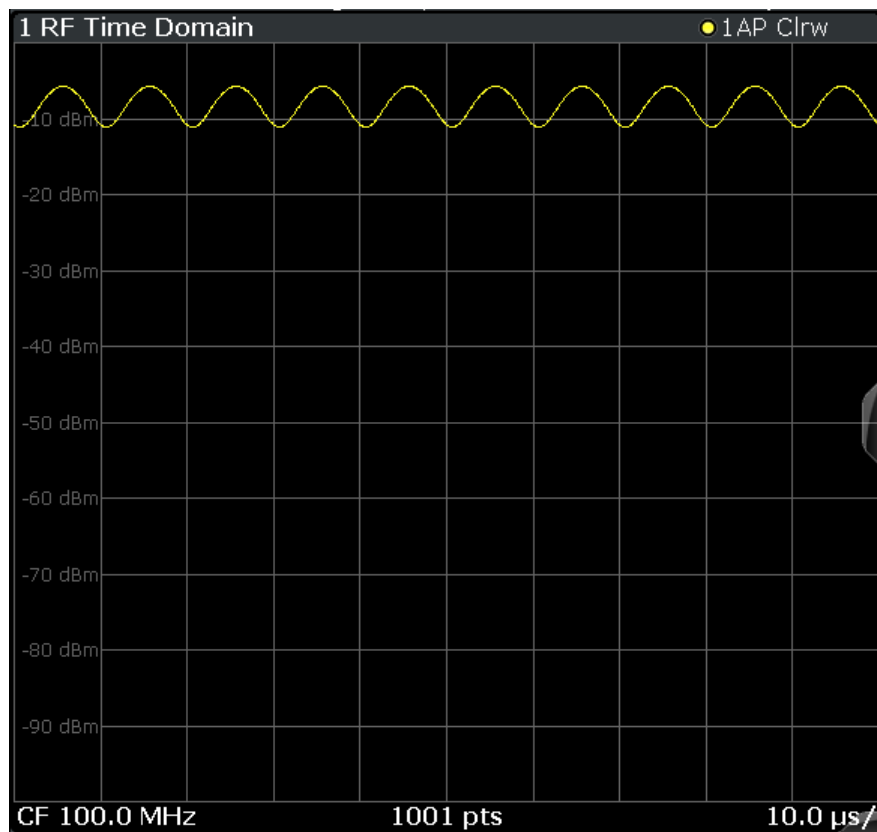


Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:AM'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 143)

### RF Spectrum

Displays the spectrum of the input signal. In contrast to the Spectrum application, the frequency values are determined using FFT from the recorded I/Q data set.

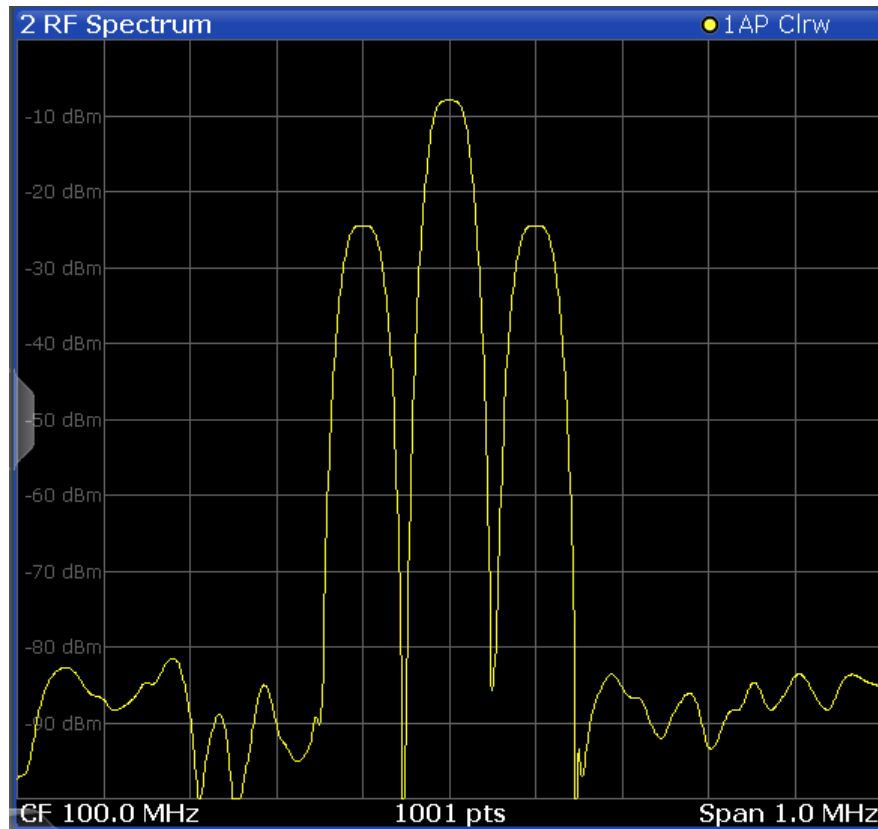

Remote command:

```
LAY:ADD? '1',RIGH,'XTIM:SPECTRUM'
```

(see [LAYout:ADD\[:WINDow\]?](#) on page 143)

### Result Summary

The "result summary" displays the results of the demodulation functions for all windows in a table.

4 Result Summary	
Carr Power	-33.57 dBm
Carr Offset	-3.077124 kHz
<b>AM</b>	
+Peak	4.58 %
-Peak	0.678 %
±Peak/2	1.13 %
RMS	7.036 %
Mod. Freq.	---
Mod. Depth	9.82 %
SINAD	---
DISTORT	---
THD	---

The following general results are provided:

For each demodulation, the following results are provided:

Label	Description
"Carr Power"	Measured carrier power
"Carr Offset"	Carrier offset to nominal center frequency
"Mod. Depth"	Modulation depth

Table 4-1: Result summary description

Label	Description
" +Peak"	Positive peak (maximum)
" -Peak"	Negative peak (minimum)
" +/-Peak/2"	Average of positive and negative peaks
"RMS"	Root Mean Square value
"Mod Freq"	Modulation frequency
"SINAD"	<p>Signal-to-noise-and-distortion (Calculated only if AF Spectrum is displayed)</p> <p>Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation.</p> $SINAD[dB] = 20 \cdot \log\left[\frac{P_{total}}{P_{Noise} + P_{distortion}}\right]$
"DISTORT"	<p>Modulation distortion in % (Calculated only if "SINAD" is also calculated)</p> <p>Measures the distortion of the modulation in relation to the total power of the signal inside the AF spectrum span. Indicates the quality of the modulation.</p> $Modulation\ distortion = \frac{\sqrt{P_{total} - P_{signal}}}{\sqrt{P_{total}}} * 100\%$
"THD"	<p>Total harmonic distortion</p> <p>The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic. (Calculated only if AF Spectrum is displayed)</p> $THD[dB] = 20 \cdot \log\left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}}\right]$

**Note:** Relative demodulation results. Optionally, the demodulation results in relation to user-defined or measured reference values are determined. See [Chapter 5.9.6, "Result table settings"](#), on page 70.

In addition, the following general information for the input signal is provided:

- "Carrier Power": the power of the carrier without modulation
- "Carrier Offset": the deviation of the calculated carrier frequency to the ideal carrier frequency
- "Modulation Depth" (AM or "RF Time Domain" only): the difference in amplitude the carrier signal is modulated with

Remote command:

LAY:ADD? '1', RIGH, RSUM, see LAYout:ADD[:WINDow]? on page 143

Results:

[Chapter 10.6.2, "Retrieving result summary values"](#), on page 155

### Marker Table

Displays a table with the current marker values for the active markers.

This table is displayed automatically if configured accordingly.

1 Marker Table							
Wnd	Type	Ref	Trc	X-Value	Y-Value	Function	Function Result
2	M1		1	2.1725 ms	-6.80 dBm		
2	D2	M1	1	13.859 ms	-0.00 dB		
2	D3	M1	1	4.6259 ms	-0.00 dB		
2	D4	M1	1	9.2331 ms	-0.00 dB		

**Tip:** To navigate within long marker tables, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, MTAB, see LAYout:ADD[:WINDow]? on page 143

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 154

[CALCulate<n>:MARKer<m>:Y?](#) on page 154

### Marker Peak List

The marker peak list determines the frequencies and levels of peaks in the spectrum or time domain. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

3 Marker Peak List				
Wnd	No	X-Value	Y-Value	
2	1	1.086245 ms	-75.810 dBm	
2	2	2.172490 ms	-6.797 dBm	
2	3	3.258736 ms	-76.448 dBm	
2	4	4.831918 ms	-76.676 dBm	
2	5	6.255274 ms	-76.482 dBm	
2	6	6.798397 ms	-6.800 dBm	
2	7	9.233084 ms	-76.519 dBm	
2	8	10.075861 ms	-76.172 dBm	
2	9	11.405574 ms	-6.801 dBm	

**Tip:** To navigate within long marker peak lists, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, PEAK, see LAYout:ADD[:WINDow]? on page 143

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 154

[CALCulate<n>:MARKer<m>:Y?](#) on page 154

## 5 Configuration

**Access:** [MODE] > "Analog Demod"

When you activate the Analog Demodulation application, a Analog Demodulation measurement for the input signal is started automatically with the default configuration. It can be configured in the Analog Demodulation "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu.



The main configuration settings and dialog boxes are also available via the "Analog Demod" menu which is displayed when you press the [MEAS CONFIG] key.

### Predefined settings

For commonly performed measurements, standard setup files are provided for quick and easy configuration. Simply load an existing standard settings file and, if necessary, adapt the measurement settings to your specific requirements.

For an overview of predefined standards and settings see [Chapter 10.4.1, "Standard selection"](#), on page 96.

• <a href="#">Configuration according to digital standards</a> .....	39
• <a href="#">Configuration overview</a> .....	41
• <a href="#">Data input and output</a> .....	43
• <a href="#">Amplitude</a> .....	47
• <a href="#">Frequency</a> .....	49
• <a href="#">Trigger configuration</a> .....	51
• <a href="#">Bandwidth settings</a> .....	54
• <a href="#">Sweep settings</a> .....	55
• <a href="#">Demodulation</a> .....	57
• <a href="#">Demodulation display</a> .....	73
• <a href="#">Automatic settings</a> .....	73

### 5.1 Configuration according to digital standards

**Access:** "Overview" > "Setup Standard"

Various predefined settings files for common digital standards are provided for use with the Analog Demodulation application. In addition, you can create your own settings files for user-specific measurements.

For details on which settings are defined and an overview of predefined standards see [Chapter A, "Predefined standards and settings"](#), on page 165.


The remote commands required to configure digital standards are described in [Chapter 10.4.1, "Standard selection"](#), on page 96.

<a href="#">Setup Standard</a> .....	40
L <a href="#">Selecting Storage Location - Drive/ Path/ Files</a> .....	40
L <a href="#">File Name</a> .....	40

L Load Standard.....	41
L Save Standard.....	41
L Delete Standard.....	41
L Restore Standard Files.....	41

### Setup Standard

Opens a file selection dialog box to select a predefined setup file. The predefined settings are configured in the R&S FPL1-K7 AM/FM/PM Modulation Analysis application, which allows for quick and easy configuration for commonly performed measurements.

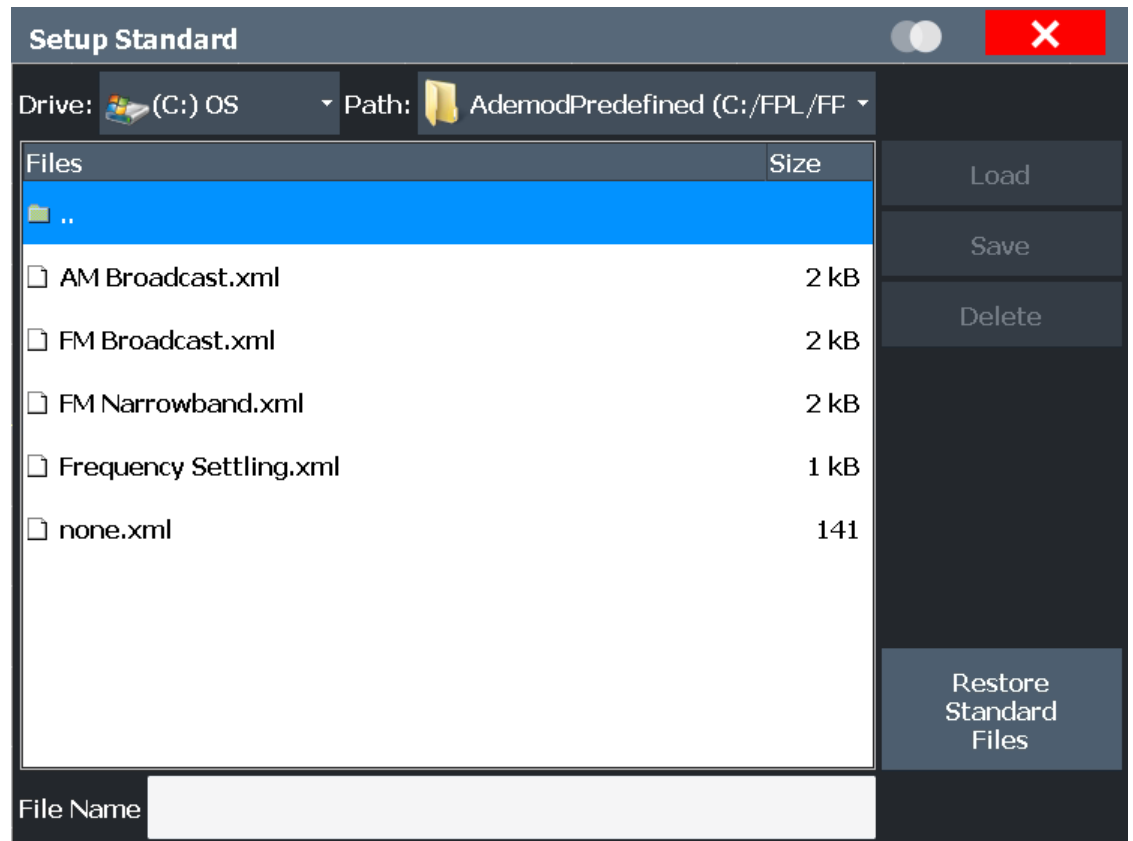

### Selecting Storage Location - Drive/ Path/ Files ← Setup Standard

Select the storage location of the file on the instrument or an external drive.

The default storage location for the settings files is:

```
C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
predefined\AdemodPredefined.
```

### File Name ← Setup Standard

Contains the name of the data file without the path or extension.

File names must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

For details on the filename and location, see the "Data Management" topic in the R&S EPL1000 User Manual.



**Load Standard ← Setup Standard**

Loads the selected measurement settings file.

Remote command:

[\[SENSe:\]ADEMod:PRESet\[:STANdard\]](#) on page 96

**Save Standard ← Setup Standard**

Saves the current measurement settings for a specific standard as a file with the defined name.

Remote command:

[\[SENSe:\]ADEMod:PRESet:STORe](#) on page 97

**Delete Standard ← Setup Standard**

Deletes the selected standard. Standards predefined by Rohde & Schwarz can also be deleted. A confirmation query is displayed to avoid unintentional deletion of the standard.

**Note:** Restoring predefined standard files. The standards predefined by Rohde & Schwarz available at the time of delivery can be restored using the "Restore Standard Files" function (see "[Restore Standard Files](#)" on page 41).

**Restore Standard Files ← Setup Standard**

Restores the standards predefined by Rohde & Schwarz available at the time of delivery.

Note that this function overwrites customized standards that have the same name as predefined standards.


Remote command:

[\[SENSe:\]ADEMod:PRESet:RESTore](#) on page 97

## 5.2 Configuration overview



Throughout the measurement configuration, an overview of the most important currently defined settings is provided in the "Overview". The "Overview" is displayed when you select the "Overview" icon, which is available at the bottom of all softkey menus.

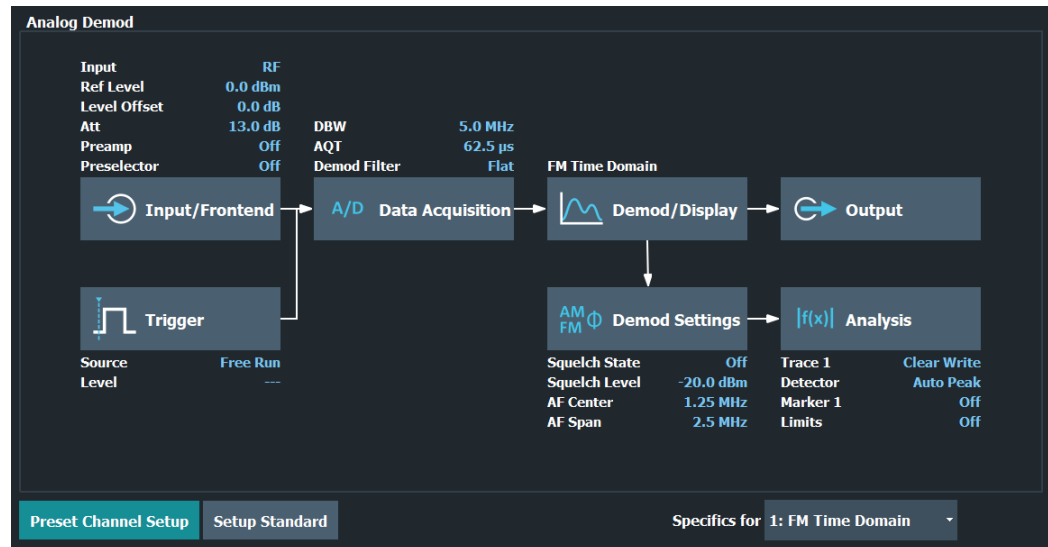

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. Thus, you can easily configure an entire Analog Demodulation measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview".

Functions in the "Overview" dialog box described elsewhere:

- "Setup Standard" on page 40

<a href="#">Preset Channel setup</a> .....	42
<a href="#">Specific Settings for</a> .....	42

### Preset Channel setup

Select "Preset Channel" in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel setup* to their default values.

**Note:** Do not confuse the "Preset Channel" button with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channel setups* on the R&S EPL1000 (except for the default channel setup)!

Remote command:

`SYSTEM:PRESet:CHANnel [:EXEC]` on page 96

### Specific Settings for

The channel setup can contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specific Settings for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

## 5.3 Data input and output

**Access:** "Overview" > "Input"

**Access:** "Overview" > "Output"

The R&S EPL1000 can analyze signals from different input sources and provide various types of output (such as video signals).

### I/Q data import and export

You can also analyze I/Q data that you have previously recorded.


For a comprehensive description about I/Q data import and export, refer to the user manual of the R&S EPL1000.

- [Configuring the RF input](#)..... 43
- [Settings for input from I/Q data files](#)..... 44
- [Configuring the preselector](#)..... 45
- [Configuring outputs \(IF / video / demodulation\)](#)..... 45
- [Configuring line impedance stabilization networks \(LISN\)](#)..... 46
- [Configuring additional outputs](#)..... 46

### 5.3.1 Configuring the RF input

**Access:** "Overview" > "Input" > "Input Source" > "Radio Frequency"

The R&S EPL1000 supports various signal input sources. The default input source is the RF input.

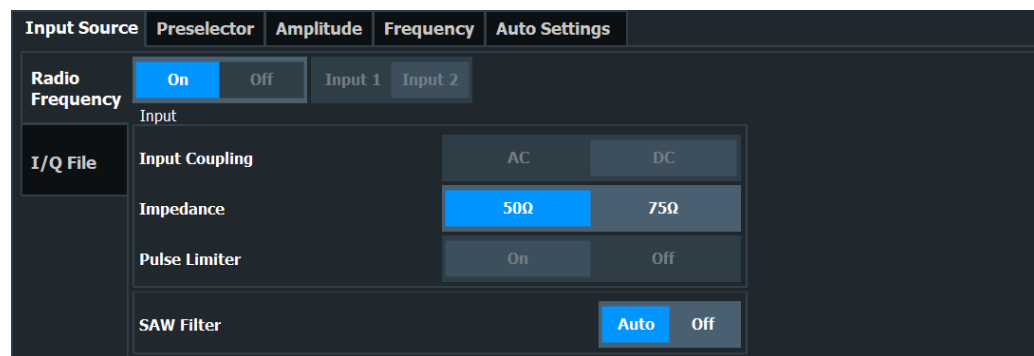

The remote commands required to configure the RF input are described in [Chapter 10.4.2, "Input configuration"](#), on page 97.

- [Input Coupling](#)..... 43
- [Impedance](#)..... 44
- [Pulse Limiter](#)..... 44
- [SAW filter](#)..... 44

#### Input Coupling

The RF input is coupled by direct current (DC).

Make sure to protect the instrument from damaging DC input voltages. For details, refer to the data sheet.

Remote command:

n/a

### Impedance

For some measurements, the reference impedance for the measured levels of the R&S EPL1000 can be set to 50  $\Omega$  or 75  $\Omega$ .

Select 75  $\Omega$  if the 50  $\Omega$  input impedance is transformed to a higher impedance using a 75  $\Omega$  adapter of the RAZ type. (That corresponds to 25 $\Omega$  in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 $\Omega$ /50 $\Omega$ ).

This value also affects the unit conversion.

Remote command:

[INPut<ip>:IMPedance](#) on page 99

### Pulse Limiter

The pulse limiter, available for the second RF input, is a protection mechanism against high level pulses or signals (which can damage the input mixer).

When you turn on the pulse limiter, the attenuation is always at least 10 dB. Attenuation smaller than 10 dB is only available when you turn off the pulse limiter.

Remote command:

[INPut<ip>:ATTenuation:LIMiter\[:STATe\]](#) on page 97

### SAW filter

The R&S EPL1000 hardware contains both a wide and a narrow IF path. Depending on the used analysis bandwidth, the R&S EPL1000 determines which IF path to use automatically. The wide IF path allows for a smoother signal at the center frequency, while the narrow IF path suppresses possibly distorting signals further away from the center frequency. Using this setting, you can affect which IF path is used.

"Auto"            The R&S EPL1000 determines which IF path to use automatically, depending on the used analysis bandwidth.

"Off"             The wide IF path is always used.


Remote command:

[INPut:FILTer:SAW](#) on page 98

## 5.3.2 Settings for input from I/Q data files

**Access:** "Overview" > "Input/Frontend" > "Input Source" > "I/Q File"

**Or:** [INPUT/OUTPUT] > "Input Source Config" > "Input Source" > "I/Q File"

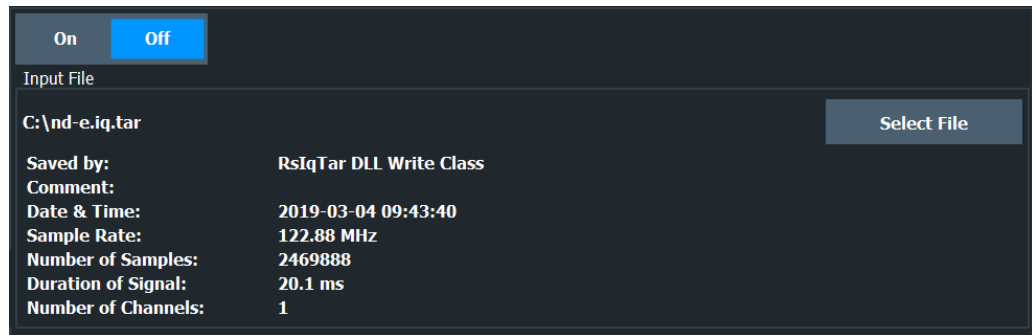

I/Q Input File State.....	45
Select I/Q data file.....	45

### I/Q Input File State

Enables input from the selected I/Q input file.

If enabled, the application performs measurements on the data from this file. Thus, most measurement settings related to data acquisition (attenuation, center frequency, measurement bandwidth, sample rate) cannot be changed. The measurement time can only be decreased to perform measurements on an extract of the available data only.

**Note:** Even when the file input is disabled, the input file remains selected and can be enabled again quickly by changing the state.

Remote command:

[INPut<ip>:SElect](#) on page 99

### Select I/Q data file

Opens a file selection dialog box to select an input file that contains I/Q data.

The I/Q data must have a specific format (.iq.tar) as described in R&S EPL1000 I/Q Analyzer and I/Q Input user manual.

The default storage location for I/Q data files is

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user.

Remote command:

[INPut:FILE:PATH](#) on page 98

## 5.3.3 Configuring the preselector

**Access:** "Overview" > "Input" > "Preselector"

The preselector works the same as in the Receiver application.

For more information refer to the user manual of the R&S EPL1000.

## 5.3.4 Configuring outputs (IF / video / demodulation)

**Access:** "Overview" > "Output" > "Output Config"

The R&S EPL1000 supports several analog demodulation outputs. The functionality is the same as in the receiver application.



#### **Output squelch**

Output squelch is unavailable in the analog demodulation application.

For more information refer to the user manual of the R&S EPL1000.

### **5.3.5 Configuring line impedance stabilization networks (LISN)**

**Access:** "Overview" > "Output" > "LISN"

The R&S EPL1000 supports several LISN models and provides functionality to control these devices. The functionality is the same as in the receiver application.

For more information refer to the user manual of the R&S EPL1000.

### **5.3.6 Configuring additional outputs**

**Access:** "Overview" > "Output" > "IF / Video"

The R&S EPL1000 provides additional outputs that you can use for various tasks.

The remote commands required to configure the outputs are described in [Chapter 10.4.3, "Output configuration"](#), on page 100.

[Noise Source Control](#)..... 46

#### **Noise Source Control**

Enables or disables the 28 V voltage supply for an external noise source connected to the "Noise source control / Power sensor") connector. By switching the supply voltage for an external noise source on or off in the firmware, you can enable or disable the device as required.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S EPL1000 itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the R&S EPL1000 and measure the total noise power. From this value, you can determine the noise power of the R&S EPL1000. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

Remote command:

[DIAGnostic:SERVice:NSource](#) on page 100

## 5.4 Amplitude

**Access:** "Overview" > "Input / Frontend" > "Amplitude"

The amplitude is configured in the "Amplitude" tab of the "Input" dialog box.

For background information on amplitude settings see the R&S EPL1000 User Manual.

The remote commands required to define these settings are described in [Chapter 10.4.4, "Amplitude configuration"](#), on page 100.

Functions to configure level characteristics described elsewhere:

- ["Impedance"](#) on page 44

<a href="#">Reference Level</a> .....	47
L <a href="#">Shifting the Display (Offset)</a> .....	47
L <a href="#">Unit</a> .....	48
L <a href="#">Setting the Reference Level Automatically (Auto Level)</a> .....	48
<a href="#">Attenuation</a> .....	49
<a href="#">10 dB Minimum Attenuation</a> .....	49
<a href="#">Preamplifier</a> .....	49

### Reference Level

Defines the expected maximum reference level. Signal levels above this value are possibly not measured correctly. Signals above the reference level are indicated by an "IF Overload" status display.

The reference level can also be used to scale power diagrams; the reference level is then used for the calculation of the maximum on the y-axis.

Since the hardware of the R&S EPL1000 is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level. Thus you ensure an optimal measurement (no compression, good signal-to-noise ratio).

Remote command:

```
DISPlay[:WINDow<n>] [:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RLEVEL
```

on page 101

### Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S EPL1000 so the application shows correct power results. All displayed power level results are shifted by this value.

The setting range is  $\pm 200$  dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S EPL1000 must handle. Do not rely on the displayed reference level (internal reference level = displayed reference level - offset).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 101

### Unit ← Reference Level

The R&S EPL1000 measures the signal voltage at the RF input.

In the default state, the level is displayed at a power level of 1 mW (= dBm). Via the known input impedance (50  $\Omega$  or 75  $\Omega$ , see "[Impedance](#)" on page 44), conversion to other units is possible.

The following units are available and directly convertible:

- dBm
- dBmV
- dB $\mu$ V
- dB $\mu$ A
- dBpW
- Volt
- Ampere
- Watt

Remote command:

`INPut<ip>:IMPedance` on page 99  
`CALCulate<n>:UNIT:POWer` on page 101

### Setting the Reference Level Automatically (Auto Level) ← Reference Level

Automatically determines a reference level which ensures that no overload occurs at the R&S EPL1000 for the current input data. At the same time, the internal attenuators are adjusted. As a result, the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S EPL1000.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see "[Changing the Automatic Measurement Time \(Meas Time Manual\)](#)" on page 74).

Remote command:

`[SENSe:]ADJust:LEVel` on page 103



### Attenuation

Defines the attenuation of the signal.

You can attenuate the signal in 1 dB steps. The range is specified in the datasheet. Attenuation of less than 10 dB is only possible if you turn off [10 dB Minimum Attenuation](#).

For more information, see the Preamplifier description in the R&S EPL1000 base unit user manual.

The auto ranging feature in the receiver remains active even if you change the attenuation and preamplifier properties in other measurement channels and then return to the receiver application.

The R&S EPL1000 also allows you to determine the best attenuation automatically.

- In the receiver application, turn on the "Auto Ranging" feature.
- In the other applications, select attenuation "Mode" → "Auto"

Remote command:

Global: `INPut<ip>:ATTenuation[:VALue]` on page 102

Attenuation mode: `INPut<ip>:ATTenuation:AUTO` on page 102

### 10 dB Minimum Attenuation

Turns the availability of attenuation levels of less than 10 dB on and off.

When you turn on this feature, the attenuation is always at least 10 dB. This minimum attenuation protects the input mixer and avoids accidental setting of 0 dB, especially if you measure EUTs with high RFI voltage.

When you turn it off, you can also select attenuation levels of less than 10 dB.

The setting applies to a manual selection of the attenuation as well as the automatic selection of the attenuation.

Remote command:

`INPut<ip>:ATTenuation:PROTection[:STATe]` on page 103

### Preamplifier

Configures the preamplifier.

The preamplifier amplifies the signal by 20 dB.

[More information.](#)

Remote command:

State (global): `INPut<ip>:GAIN:STATe` on page 103

`INPut<ip>:GAIN:STATe` on page 103

## 5.5 Frequency

**Access:** "Overview" > "Input / Frontend" > "Frequency"

The center frequency of the input signal is configured in the "Frequency" tab of the "Input/Frontend" dialog box.

Input Source	Preselector	External Generator	Amplitude	Frequency
Frequency				
Center	13.25 GHz			
Center Frequency Stepsize				
Stepsize	0.1 * Demod BW	X-Factor	10.0 %	

The remote commands required to configure the frequency are described in [Chapter 10.4.5, "Frequency configuration"](#), on page 104.

<a href="#">Center Frequency</a> .....	50
<a href="#">Center Frequency Stepsize</a> .....	50

### Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

$f_{\text{max}}$  and  $\text{span}_{\min}$  depend on the instrument and are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:CENTer](#) on page 104

### Center Frequency Stepsize

Defines the step size of the center frequency. The step size can be coupled to the demodulation bandwidth, or you can set it to a fixed value manually.

"0.1 * Demod BW"	(default:) Sets the step size for the center frequency to 10 % of the demodulation bandwidth.
"0.5 * Demod BW"	Sets the step size for the center frequency to 50 % of the demodulation bandwidth.
"X * Demod BW"	Sets the step size for the center frequency to a manually defined factor of the demodulation bandwidth. The "X-Factor" defines the percentage of the demodulation bandwidth. Values between 1 % and 100 % in steps of 1 % are allowed. The default setting is 10 %.
"= Center"	Sets the step size to the value of the center frequency and removes the coupling of the step size to the demodulation bandwidth. The used value is indicated in the "Value" field.
"Manual"	Defines a fixed step size for the center frequency. Enter the step size in the "Value" field.

Remote command:

[\[SENSe:\] FREQuency:CENTer:STEP:LINK](#) on page 104

[\[SENSe:\] FREQuency:CENTer:STEP:LINK:FACTOR](#) on page 105

[\[SENSe:\] FREQuency:CENTer:STEP](#) on page 104

## 5.6 Trigger configuration

**Access:** "Overview" > "Trigger"

Triggering means to capture the interesting part of the signal. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in your demodulated signals.

Optionally, the trigger signal used by the R&S EPL1000 can be output to a connected device, and an external trigger signal from a connected device can be used by the R&S EPL1000.

Trigger Source			
Source	IF Power		
Level	-20.0 dBm	Drop-Out Time	0 s
Offset	0 s	Slope	Rising Falling
Hysteresis	3.0 dB	Holdoff	0 s

For more information, refer to the description of the Spectrum application in User Manual of the R&S EPL1000.

Trigger Source.....	51
L Free Run.....	51
L External Trigger 1.....	52
L I/Q Power.....	52
L IF Power.....	52
L FM / AM / PM / RF (Offline).....	52
L Time.....	52
L Repetition Interval.....	53
Trigger Level.....	53
Trigger Offset.....	53
Hysteresis.....	53
Drop-Out Time.....	53
Trigger Slope.....	54
Trigger Holdoff.....	54

### Trigger Source

In the Analog Modulation Analysis application, the next measurement can be triggered if the selected input signal exceeds the threshold specified using the "Trigger Level" setting (see "Trigger Level" on page 53). Thus, a periodic signal modulated onto the carrier frequency can be displayed. It is recommended that the measurement time covers at least five periods of the audio signal.

Remote command:

TRIGger<tp>[:SEquence]:SOURce on page 106

### Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

Remote command:

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

#### **External Trigger 1 ← Trigger Source**

Data acquisition starts when the TTL signal fed into the specified input connector meets or exceeds the specified trigger level.

For details, see the "Instrument Tour" chapter in the R&S EPL1000 Getting Started manual.

Remote command:

TRIG:SOUR EXT

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

#### **I/Q Power ← Trigger Source**

Triggers the measurement when the magnitude of the sampled I/Q data exceeds the trigger threshold.

The trigger bandwidth corresponds to the resolution bandwidth setting for data acquisition (see "[Resolution Bandwidth](#)" on page 55).

Remote command:

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

#### **IF Power ← Trigger Source**

The R&S EPL1000 starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger threshold depends on the defined trigger level, as well as on the RF attenuation and preamplification. A reference level offset, if defined, is also considered. The trigger bandwidth at the intermediate frequency depends on the RBW and sweep type. For details on available trigger levels and trigger bandwidths, see the instrument data sheet.

For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

This trigger source is only available for RF input.

For details on available trigger levels and trigger bandwidths, see the data sheet.

Remote command:

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

#### **FM / AM / PM / RF (Offline) ← Trigger Source**

Triggers when the demodulated input signal exceeds the trigger level.

Remote command:

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

#### **Time ← Trigger Source**

Triggers in a specified repetition interval.

See "[Repetition Interval](#)" on page 53.

Remote command:

[TRIGger<tp>\[:SEquence\]:SOURce](#) on page 106

**Repetition Interval ← Trigger Source**

Defines the repetition interval for a time trigger.

The shortest interval is 2 ms.

Set the repetition interval to the exact pulse period, burst length, frame length or other repetitive signal characteristic. If the required interval cannot be set with the available granularity, configure a multiple of the interval that can be set. Thus, the trigger remains synchronized to the signal.

Remote command:

[TRIGger\[:SEquence\]:TIME:RINterval](#) on page 110

**Trigger Level**

Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the instrument data sheet.

Remote command:

[TRIGger\[:SEquence\]:LEVel:IFPower](#) on page 109

[TRIGger\[:SEquence\]:LEVel:AM:RELative](#) on page 108

[TRIGger\[:SEquence\]:LEVel:AM\[:ABSolute\]](#) on page 108

[TRIGger\[:SEquence\]:LEVel:FM](#) on page 108

[TRIGger\[:SEquence\]:LEVel:PM](#) on page 109

**Trigger Offset**

Defines the time offset between the trigger event and the start of the sweep.

Offset > 0:	Start of the sweep is delayed
Offset < 0:	Sweep starts earlier (pretrigger)

For the "Time" trigger source, this function is not available.

Remote command:

[TRIGger<tp>\[:SEquence\]:HOLDoFF\[:TIME\]](#) on page 107

**Hysteresis**

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

[TRIGger\[:SEquence\]:IFPower:HYSteresis](#) on page 107

**Drop-Out Time**

Defines the time that the input signal must stay below the trigger level before triggering again.

Remote command:

[TRIGger\[:SEquence\]:DTIME](#) on page 106

**Trigger Slope**

Selects the polarity of the trigger source.

The trigger slope is unavailable for the free run trigger.

"Rising"            The measurement starts when the signal rises to the trigger level.

"Falling"           The measurement starts when the signal falls down to the trigger level.

Remote command:

[TRIGger<tp>\[:SEquence\]:SLOPe](#) on page 110

**Trigger Holdoff**

Defines the minimum time (in seconds) that must pass between two trigger events.

Trigger events that occur during the holdoff time are ignored.


Remote command:

[TRIGger\[:SEquence\]:IFPower:HOLDoff](#) on page 107

## 5.7 Bandwidth settings

**Access:** "Overview" > "Data Acquisition" > "Bandwidth" tab

The bandwidth settings define which parts of the input signal are acquired and then demodulated.

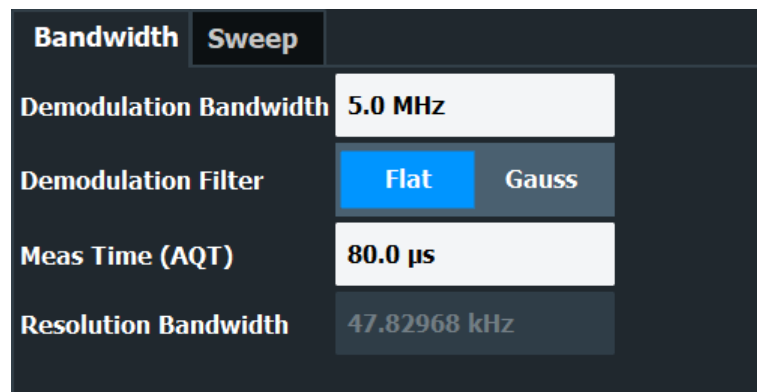

<a href="#">Demodulation Bandwidth</a> .....	54
<a href="#">Demodulation Filter</a> .....	55
<a href="#">Measurement Time (AQT)</a> .....	55
<a href="#">Resolution Bandwidth</a> .....	55

**Demodulation Bandwidth**

Defines the demodulation bandwidth of the measurement. The demodulation bandwidth determines the sample rate with which the input signal is captured and analyzed.

For recommendations on finding the correct demodulation bandwidth, see [Chapter 3.2, "Demodulation bandwidth"](#), on page 20.

For details on the relation between demodulation bandwidth and sample rate, refer to [Chapter 3.3, "Sample rate and demodulation bandwidth"](#), on page 21.

Remote command:

[SENSe:] BWIDth:DEMod on page 120

### Demodulation Filter

Defines the filter to be used for demodulation.

For details on sample rates, measurement times and trigger offsets for various demodulation bandwidths when using a Gaussian filter, see [Chapter 3.3, "Sample rate and demodulation bandwidth"](#), on page 21.

"Flat"                    Default

"Gauss"                 Optimizes the settling behavior of the filter

Remote command:

[SENSe:] BWIDth:DEMod:TYPE on page 120

### Measurement Time (AQT)

Defines how long data is acquired for demodulation.

Remote command:

[SENSe:] ADEMod:MTIME on page 118

### Resolution Bandwidth

Defines the resolution bandwidth for data acquisition. The available range is specified in the data sheet.

Remote command:

[SENSe:] BANDwidth[:RESolution] on page 120

## 5.8 Sweep settings

**Access:** "Overview" > "Data Acquisition" > "Sweep" tab

The sweep settings define how often data from the input signal is acquired and then demodulated.

Bandwidth	Sweep
Meas Time (AQT)	80.0 µs
Sweep Points	1001
Sweep Count	0
Specifics for	1: FM Time Domain

<a href="#">Continuous Sweep / Run Cont.....</a>	56
<a href="#">Single Sweep / Run Single.....</a>	56
<a href="#">Continue Single Sweep.....</a>	56

Measurement Time (AQT).....	57
Sweep Points.....	57
Sweep/Average Count.....	57

### Continuous Sweep / Run Cont

After triggering, starts the measurement and repeats it continuously until stopped.

While the measurement is running, the "Continuous Sweep" softkey and the [RUN CONT] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

**Note:** Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, a channel setup in continuous sweep mode is swept repeatedly.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the R&S EPL1000 User Manual.

Remote command:

Measurement mode: `INITiate<n>:CONTinuous` on page 115

Run measurement: `INITiate<n>[:IMMediate]` on page 117

### Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

**Note:** Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel setup in single sweep mode only once.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel setup is updated.

For details on the Sequencer, see the R&S EPL1000 User Manual.

Remote command:

Measurement mode: `INITiate<n>:CONTinuous` on page 115

Run measurement: `INITiate<n>[:IMMediate]` on page 117

### Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.



While the measurement is running, the "Continue Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

[INITiate<n>:CONMeas](#) on page 115

#### Measurement Time (AQT)

Defines how long data is acquired for demodulation.

Remote command:

[\[SENSe:\]ADEMod:MTIME](#) on page 118

#### Sweep Points

Defines the number of measured values to be collected during one sweep.

All values from 101 to 100001 can be set. The default value is 1001 sweep points.

Remote command:

[\[SENSe:\]SWEep\[:WINDow<n>\]:POINts](#) on page 121

#### Sweep/Average Count

Defines the number of sweeps to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed.

The sweep count is applied to all the traces in all diagrams.

If the trace modes "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if "Sweep Count" = 0 (default), averaging is performed over 10 sweeps. For "Sweep Count" = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

[\[SENSe:\]SWEep:COUNT](#) on page 121

## 5.9 Demodulation

**Access:** "Overview" > "Demod Settings"

**Or:** "Meas Setup" > "Demod"

- [Basic demodulation measurement parameters \(Demod\)](#).....57
- [Demodulation spectrum](#).....60
- [AF filter](#).....63
- [Scaling](#).....66
- [Units](#).....70
- [Result table settings](#).....70

### 5.9.1 Basic demodulation measurement parameters (Demod)

**Access:** "Overview" > "Demod Settings" > "Demod"

Or: "Meas Setup" > "Demod" > "Demod" tab

The basic demodulation measurement parameters define how the measurement is performed.

Demod	Spectrum	AF Filter	Scaling	Unit	Result Table
Settings			Time Domain Zoom		
Squelch State	<input checked="" type="button" value="On"/>	<input type="button" value="Off"/>	State	<input checked="" type="button" value="On"/>	<input type="button" value="Off"/>
Squelch Level	-20.0 dBm		Start	0 s	
AF Coupling	<input checked="" type="button" value="AC"/>	<input type="button" value="DC"/>	Length	<input checked="" type="button" value="Auto"/>	<input type="button" value="Manual"/>
Selected Trace	1		125.0 μs		
PM Settings					
Zero Phase Ref Pos	0 s				
Phase Wrapping	<input type="button" value="On"/>	<input checked="" type="button" value="Off"/>			

Squelch State.....	58
Squelch Level.....	58
AF Coupling.....	58
Selected Trace.....	59
Time Domain Zoom.....	59
L State.....	59
L Start.....	59
L Length.....	60
Phase Wrap On/Off (PM Time Domain only).....	60

### Squelch State

Activates the squelch function, that is: if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

This function is only available for FM demodulation.

Remote command:

`[SENSe:]ADEMod:SQUelch[:STATe]` on page 123

### Squelch Level

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

Remote command:

`[SENSe:]ADEMod:SQUelch:LEVel` on page 123

### AF Coupling

Controls the automatic correction of the frequency offset and phase offset of the input signal:

This function is only available for FM or PM time domain evaluations.

- FM time evaluation

If DC is selected, the absolute frequency is displayed. That means, an input signal with an offset relative to the center frequency is not displayed symmetrically to the zero line.

If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric to the zero line.

- **PM time evaluation**

If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of  $\pm \pi$ .

If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric to the zero line.

Remote command:

[\[SENSe:\]ADEMod<n>:AF:COUPling](#) on page 122

### Selected Trace

Defines the trace used to determine the results in the "Result Summary".

### Time Domain Zoom

Using the time domain zoom, the demodulated data for a particular time span is extracted and displayed in more detail. Time domain zoom is useful if the measurement time is very large and thus each sweep point represents a large time span. The time domain zoom function distributes the available sweep points only among the time span defined by the zoom area length. The time span displayed per division of the diagram is decreased. Thus, the display of the extracted time span becomes more precise. Note that the time domain zoom area affects not only the diagram display, but the entire evaluation for the current window.

This function is only available for evaluations in the time domain.

**Tip:** In addition to the Time Domain Zoom, a graphical zoom is available for all diagram evaluations. However, the graphical zoom is useful only if more measured values than trace points are available. The (time) span represented by each measurement point remains the same.

For details see the R&S EPL1000 User Manual.

### State ← Time Domain Zoom

Activates or deactivates the time domain zoom mode.

"On"                      Activates the time domain zoom.

"Off"                      Deactivates the time domain zoom and restores the original display. If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector.

For details on detectors refer to the R&S EPL1000 User Manual.

Remote command:

[\[SENSe:\]ADEMod<n>:ZOOM\[:STATe\]](#) on page 126

### Start ← Time Domain Zoom

Defines the start time for the time domain zoom area. For spectrum evaluations, the start time is always 0.

Remote command:

[SENSe:] ADEMod<n>: ZOOM: START on page 125

### Length ← Time Domain Zoom

Defines the length of the time domain zoom area. Enter the length as a time value manually, or use the "Auto" setting to set the length to the current number of sweep points automatically.

Remote command:

[SENSe:] ADEMod<n>: ZOOM: LENGTH on page 124

[SENSe:] ADEMod<n>: ZOOM: LENGTH: MODE on page 125

### Phase Wrap On/Off (PM Time Domain only)

Activates/deactivates the phase wrap.

On	The phase is displayed in the range $\pm 180^\circ$ ( $\pm \Pi$ ). For example, if the phase exceeds $+180^\circ$ , $360^\circ$ is subtracted from the phase value, with the display thus showing $>-180^\circ$ .
Off	The phase is not wrapped.

This setting is only available for PM time domain displays with DC coupling.

Remote command:

CALC:FORM PHAS/CALC:FORM UPH, see CALCulate<n>:FORMat on page 124

## 5.9.2 Demodulation spectrum

**Access:** "Overview" > "Demod Settings" > "Spectrum"

**Or:** "Meas Setup" > "Demod" > "Spectrum" tab

The demodulation spectrum defines which span of the demodulated data is evaluated.

Depending on the evaluation (AF or RF display), the settings vary.

- [AF evaluation](#)..... 60
- [RF evaluation](#)..... 61

### 5.9.2.1 AF evaluation

**Access:** "Overview" > "Demod Settings" > "Spectrum"

**Or:** "Meas Setup" > "Demod" > "Spectrum" tab

These settings are only available for AF Spectrum evaluations, not in the time domain.

Demod	Spectrum	AF Filter	Scaling	Unit	Result Table
Settings					
AF Center	1.25 MHz				
AF Start	0 Hz				
AF Stop	2.5 MHz				
AF Span	2.5 MHz				
AF Full Span					

AF Center.....	61
AF Start.....	61
AF Stop.....	61
AF Span.....	61
AF Full Span.....	61

### AF Center

Defines the center frequency of the demodulated data to evaluate.

Remote command:

[\[SENSe:\]ADEMod:AF:CENTer](#) on page 128

### AF Start

Defines the start frequency of the demodulated data to evaluate.

Remote command:

[\[SENSe:\]ADEMod:AF:START](#) on page 129

### AF Stop

Defines the stop frequency of the demodulated data to evaluate.

The maximum AF stop frequency corresponds to half the demodulation bandwidth.

Remote command:

[\[SENSe:\]ADEMod:AF:STOP](#) on page 129

### AF Span

Defines the span (around the center frequency) of the demodulated data to evaluate.

The maximum span is  $DBW/2$ .

Remote command:

[\[SENSe:\]ADEMod:AF:SPAN](#) on page 128

### AF Full Span

Sets the span (around the center frequency) of the demodulated data to the maximum of  $DBW/2$ .

Remote command:

[\[SENSe:\]ADEMod:AF:SPAN:FULL](#) on page 129

## 5.9.2.2 RF evaluation

**Access:** "Overview" > "Demod Settings" > "Spectrum"

Or: "Meas Setup" > "Demod" > "Spectrum" tab

These settings are only available for RF evaluation, both in time and frequency domain. Note that for RF data the center frequency and demodulation bandwidth correspond to the settings defined in the "Input" and "Data Acquisition" configuration.

Demod	Spectrum	Scaling	Unit	Result Table
Center	15.0 MHz			
Span	5.0 MHz			
Demodulation Bandwidth	5.0 MHz			
	RF Full Span (=DBW)			

Center Frequency.....	62
Span.....	62
Demodulation Bandwidth.....	62
RF Full Span.....	63

### Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

$f_{\text{max}}$  and  $\text{span}_{\min}$  depend on the instrument and are specified in the data sheet.

Remote command:

[SENSe:]FREQuency:CENTer on page 104

### Span

Defines the frequency span. The center frequency is kept constant. The following range is allowed:

$$\text{span} = 0: 0 \text{ Hz}$$

span >0:

$$\text{span}_{\min} \leq f_{\text{span}} \leq f_{\text{max}}$$

$$\text{and } f_{\text{max}} = \text{DBW}/2$$

$f_{\text{max}}$  and  $\text{span}_{\min}$  are specified in the data sheet.

Remote command:

[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum] on page 130

[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM on page 130

### Demodulation Bandwidth

Defines the demodulation bandwidth of the measurement. The demodulation bandwidth determines the sample rate with which the input signal is captured and analyzed.

For recommendations on finding the correct demodulation bandwidth, see [Chapter 3.2, "Demodulation bandwidth"](#), on page 20.

For details on the relation between demodulation bandwidth and sample rate, refer to [Chapter 3.3, "Sample rate and demodulation bandwidth"](#), on page 21.

Remote command:

[SENSe:] BWIDth: DEMod on page 120

### RF Full Span

Sets the span (around the center frequency) of the RF data to be evaluated to the demodulation bandwidth.

Remote command:

[SENSe:] ADEMod: SPECTrum: SPAN[:MAXimum] on page 130

## 5.9.3 AF filter

**Access:** "Overview" > "Demod Settings" > "AF Filter"

**Or:** "Meas Setup" > "Demod" > "AF Filter" tab

The AF filter reduces the evaluated bandwidth of the demodulated signal and can define a weighting function.



AF filters are only available for AF evaluations, not for RF evaluation.

Demod	Spectrum	AF Filter	Scaling	Unit	Result Table
High Pass	Low Pass	Weighting	Deemphasis		
None	None	None	None		
All Filters Off					

<a href="#">High Pass</a> .....	63
<a href="#">Low Pass</a> .....	64
<a href="#">Weighting</a> .....	64
<a href="#">Deemphasis</a> .....	65
<a href="#">Deactivating all AF Filters</a> .....	65

### High Pass

Defines a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

The high pass filters are active in the following demodulation bandwidth range:

None	No AF Filter used (default)
20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz

300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Manual:	A high pass filter with the manually defined frequency is used.

**Note:** When you are using one of the [signal outputs](#), selecting the high pass filter is not possible.

Remote command:

[SENSe:] FILTer<n>:HPASs[:STATe] on page 134

[SENSe:] FILTer<n>:HPASs:FREQuency[:ABSolute] on page 133

[SENSe:] FILTer<n>:HPASs:FREQuency:MANual on page 133

### Low Pass

Defines a low pass filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:  
Absolute filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).  
The absolute low pass filters are active in the following demodulation bandwidth range:

Filter type	Demodulation bandwidth
3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz:	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Manual:	A low pass filter with the manually defined frequency is used.

**Note:** When you are using one of the [signal outputs](#), you can only select the low pass filter. High pass filters are not available in that case.

- Relative low pass filters:  
Relative filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "NONE" deactivates the AF low pass filter (default).

Remote command:

[SENSe:] FILTer<n>:LPASs[:STATe] on page 135

[SENSe:] FILTer<n>:LPASs:FREQuency[:ABSolute] on page 134

[SENSe:] FILTer<n>:LPASs:FREQuency:RELative on page 135

[SENSe:] FILTer<n>:LPASs:FREQuency:MANual on page 134

### Weighting

Selects a weighting AF filter. By default, no weighting filter is active.

- "A weighted" Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:  
100 kHz ≤ demodulation bandwidth ≤ 800 kHz



"CCITT"	Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range: 20 kHz ≤ demodulation bandwidth ≤ 3 MHz
"CCIR weighted"	Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range: 100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz
"CCIR unweighted"	Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range: 50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

Remote command:

[\[SENSe:\] FILTER<n>:CCITt\[:STATe\]](#) on page 132

[\[SENSe:\] FILTER<n>:CCIR\[:UNWeighted\]\[:STATe\]](#) on page 131

[\[SENSe:\] FILTER<n>:CCIR:WEIGhted\[:STATe\]](#) on page 131

[\[SENSe:\] FILTER<n>:AWEighteD\[:STATe\]](#) on page 131

### Deemphasis

Activates a deemphasis filter with the given time constant.

Sometimes a modulated signal is extorted by a pre-emphasis filter before transmission, for example to eliminate frequencies that are more prone to interferences. In this case, the emphasis function must be reversed after demodulation, which is done by the deemphasis filter.

The deemphasis filter is active in the following demodulation bandwidth range:

25 μs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 μs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 μs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 μs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

Depending on the deemphasis filter, a minimum demodulation bandwidth is required for an error less than 0.5 dB, up to a maximum AF frequency. The following table shows the dependencies.

Deemphasis [us]	25 μs	50 μs	75 μs	750 μs
Max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
Required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies, you must increase the demodulation bandwidth.

Remote command:

[\[SENSe:\] FILTER<n>:DEMPHasis\[:STATe\]](#) on page 132

[\[SENSe:\] FILTER<n>:DEMPHasis:TCONstant](#) on page 132

### Deactivating all AF Filters

"All Filter Off" deactivates all AF filters for the selected evaluation.

Remote command:

[SENSe:] FILTer<n>:AOFF on page 131

### 5.9.4 Scaling

**Access:** "Overview" > "Demod Settings" > "Scaling"

**Or:** "Meas Setup" > "Demod" > "Scaling" tab

The scaling parameters define the range of the demodulated data to be displayed.


- [AF evaluation](#)..... 66
- [RF evaluation](#)..... 68

#### 5.9.4.1 AF evaluation

**Access:** "Overview" > "Demod Settings" > "Scaling"

**Or:** "Meas Setup" > "Demod" > "Scaling" tab

These settings are only available for AF evaluations.

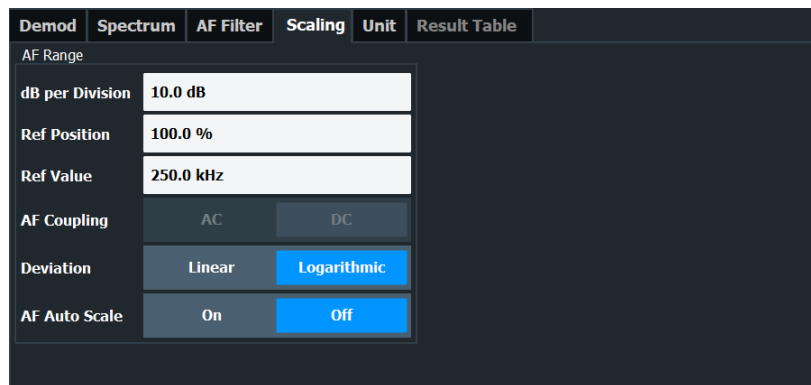

- [Dev per Division/ dB per Division](#)..... 66
- [Reference Value Position](#)..... 67
- [Reference Value](#)..... 67
- [AF Coupling](#)..... 67
- [Deviation](#)..... 68
- [AF Auto Scale](#)..... 68

#### Dev per Division/ dB per Division

Defines the modulation depth or the phase deviation or frequency deviation per division (logarithmic: 0.1 dB to 20 dB):

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 500 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

**Note:** The value defined per division refers to the default display of 10 divisions on the y-axis. If fewer divisions are displayed (e.g. because the window is reduced in height), the range per division is increased. Thus, the same result range is displayed in the smaller window. In this case, the per division value does not correspond to the actual display.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision`  
on page 127

### Reference Value Position

Determines the position of the reference value for the modulation depth or the phase deviation or frequency deviation on the y-axis of the diagram.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the AF time evaluations and 100 % (upper diagram border) for the AF spectrum evaluations.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition`  
on page 127

### Reference Value

Determines the modulation depth or the phase deviation or the frequency deviation at the reference line of the y-axis. The reference value can be set specifically for each evaluation.

- AF time display  
The trace display takes individual frequency/phase offsets into account (in contrast, the **AF Coupling** setting permits automatic correction by the average frequency/phase offset of the signal, and therefore cannot be activated simultaneously).
- AF spectrum display  
In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.

Possible values:

- AM: 0 and  $\pm 10000$  %
- FM: 0 and  $\pm 10$  MHz
- PM: 0 and  $\pm 10000$  rad

**Note:** The reference value for the AF range in the **window title bar** is displayed with respect to the defined reference *position*. The position can vary for different windows. For time domain and frequency domain windows, for example, a different reference value can be displayed, although the same reference is actually used (but the positions vary).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue`  
on page 136

### AF Coupling

Controls the automatic correction of the frequency offset and phase offset of the input signal:

This function is only available for FM or PM time domain evaluations.

- FM time evaluation  
If DC is selected, the absolute frequency is displayed. That means, an input signal with an offset relative to the center frequency is not displayed symmetrically to the zero line.  
If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric to the zero line.
- PM time evaluation  
If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of  $\pm \pi$ .  
If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric to the zero line.

Remote command:

[\[SENSe:\]ADEMod<n>:AF:COUPling](#) on page 122

### Deviation

Switches between logarithmic and linear display of the modulation depth or the phase deviation or the frequency deviation.

Remote command:

[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y:SPACing](#) on page 128

### AF Auto Scale

Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Remote command:


[\[SENSe:\]ADJust:SCALE\[:Y\]:AUTO\[:CONTinuous\]](#) on page 114

## 5.9.4.2 RF evaluation

**Access:** "Overview" > "Demod Settings" > "Scaling"

**Or:** "Meas Setup" > "Demod" > "Scaling" tab

These settings are only available for RF evaluations and the "result summary".

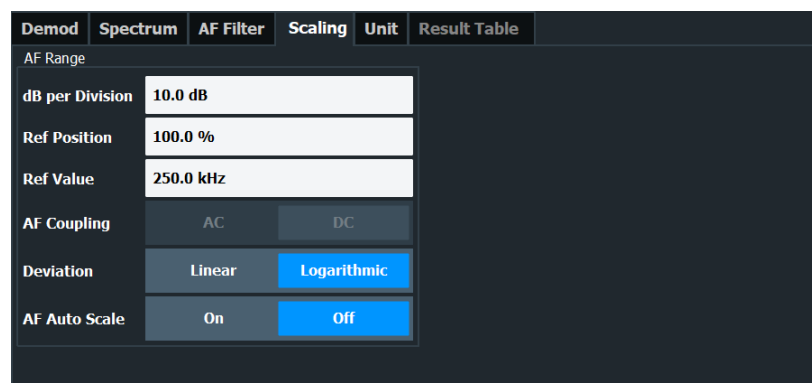

Range.....	69
Ref Level Position.....	69
Auto Scale Once.....	69
Scaling.....	69

### Range

Defines the displayed y-axis range in dB.

The default value is 100 dB.

For Analog Modulation Analysis measurements, time domain scaling is defined in Hz (default: 500 kHz).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]` on page 137

### Ref Level Position

Defines the reference level position, i.e. the position of the maximum AD converter value on the level axis in %.

0 % corresponds to the lower and 100 % to the upper limit of the diagram.

Values from -120 % to +280 % are available.

Larger values are useful for small scales, such as a power range of 10 dB or 20 dB, and low signal levels, for example 60 dB below the reference level. In this case, large reference level position values allow you to see the trace again.

Only available for RF measurements.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOStion` on page 127

### Auto Scale Once

Automatically determines the optimal range and reference level position to be displayed for the current measurement settings.

The display is only set once; it is not adapted further if the measurement settings are changed again.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE` on page 137

### Scaling

Defines the scaling method for the y-axis.

"Logarithmic"	Logarithmic scaling (only available for logarithmic units - dB..., and A, V, Watt)
"Linear with Unit"	Linear scaling in the unit of the measured signal
"Linear Percent"	Linear scaling in percentages from 0 to 100
"Absolute"	The labeling of the level lines refers to the absolute value of the reference level (not available for "Linear Percent")

"Relative" The scaling is in dB, relative to the reference level (only available for logarithmic units - dB...). The upper line of the grid (reference level) is always at 0 dB.

Remote command:


`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing` on page 128  
`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:MODE`  
 on page 137

## 5.9.5 Units

**Access:** "Overview" > "Demod Settings" > "Unit"

**Or:** "Meas Setup" > "Demod" > "Unit" tab

The units define how the demodulated data is displayed.

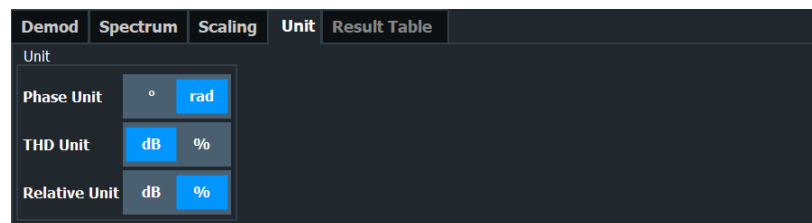

Phase Unit (Rad/Deg).....	70
THD Unit (%/ DB).....	70
Relative Unit.....	70

### Phase Unit (Rad/Deg)

Sets the phase unit to rad or deg for displaying PM signals.

Remote command:

`UNIT<n>:ANGLE` on page 138

### THD Unit (%/ DB)

Sets the unit to percent or DB for the calculation of the THD (in the "Result Summary").

Remote command:

`UNIT<n>:THD` on page 138

### Relative Unit

Defines the unit for relative demodulation results (see [Chapter 5.9.6, "Result table settings"](#), on page 70).


Remote command:

`CONFigure:ADEMod:RESults:UNIT` on page 141

## 5.9.6 Result table settings

**Access:** "Overview" > "Demod Settings" > "Result Table"

**Or:** "Meas Setup" > "Demod" > "Result Table" tab

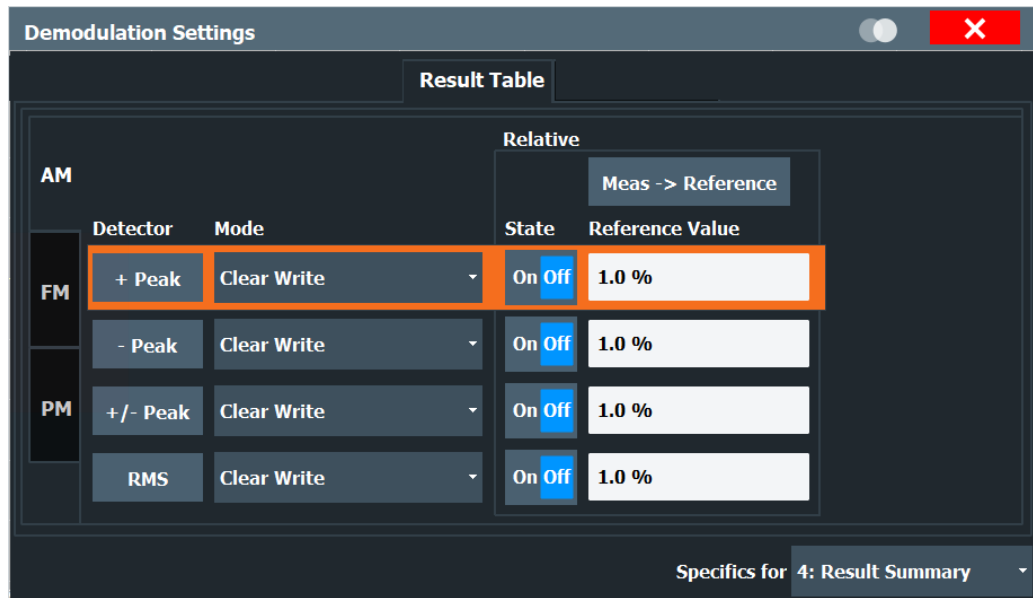

The demodulation results are displayed in the "Result Summary" table (see also "Result Summary" on page 36). The detectors used to determine the results can be configured.

In addition to common absolute demodulation, the R&S FPL1-K7 AM/FM/PM Modulation Analysis application also provides demodulation results relative to user-defined or measured reference values in the "Result Summary".

The settings for the "Result Summary" can be defined individually for the different modulation types (FM, AM, PM). For each modulation type, a separate tab is provided in the dialog box.

Detector.....71  
 Mode.....71  
 State.....72  
 Reference Value.....72  
 Meas -> Reference.....72

**Detector**

Detector type for demodulation results

- "+ Peak" Positive peak
- "- Peak" Negative peak
- "+/- Peak" Autopeak
- "RMS" Root mean square

Remote command:

The detector is specified by the DETector<det> suffix in CONFIGure:RELative:AM|FM|PM:DETector<det>... commands.

**Mode**

Defines the mode with which the demodulation result is determined.

- "Clear Write"      Overwrite mode: the detector value is overwritten by each sweep. This is the default setting.
- "Max Hold"        The maximum value is determined over several sweeps and displayed. The R&S EPL1000 saves each result only if the new value is greater than the previous one.
- "Average"         The average result is determined over all sweeps.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:MODE](#) on page 140

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:MODE](#) on page 140

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:MODE](#) on page 140

### State

Activates relative demodulation for the selected detector. If activated, the demodulated result is set in relation to the [Reference Value](#).

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATE](#) on page 139

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATE](#) on page 139

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 139

### Reference Value

Defines the reference value to be used for relative demodulation results and recalculates the results. If necessary, the detector is activated.

**Note:** A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence](#) on page 139

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence](#) on page 139

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence](#) on page 139

### Meas -> Reference

Sets the [Reference Value](#) to be used for relative demodulation results to the currently measured value *for all relative detectors*.

**Note:** A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

If necessary, the detectors are activated.

Remote command:

[CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>](#)  
on page 140

[CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>](#)  
on page 140

[CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>](#)  
on page 140



## 5.10 Demodulation display



**Access:** "Overview" > "Demod/Display"

The demodulated signal can be displayed using various evaluation methods. All evaluation methods available for the Analog Modulation Analysis application are displayed in the evaluation bar in SmartGrid mode when you do one of the following:

Up to six evaluation methods can be displayed simultaneously in separate windows. The Analog Modulation Analysis evaluation methods are described in [Chapter 4, "Measurements and result displays"](#), on page 28.



For details on working with the SmartGrid, see the R&S EPL1000 Getting Started manual.

## 5.11 Automatic settings

**Access:** "Overview" > "Input / Frontend" > "Auto Settings"

Some settings can be adjusted by the R&S EPL1000 automatically according to the current measurement settings.

Input Source	Preselector	Amplitude	Frequency	Auto Settings
Settings Configuration				
Auto All	Meas Time	Auto	Manual	
Auto Level	Value	1.0 ms		
Auto Frequency	Upper Level Hysteresis	1.0 dB		
AF Auto Scale	Lower Level Hysteresis	1.0 dB		

The remote commands required for automatic configuration are described in [Chapter 10.4.7, "Automatic configuration"](#), on page 111.

<a href="#">Adjusting all Determinable Settings Automatically (Auto All)</a> .....	73
<a href="#">Adjusting the Center Frequency Automatically (Auto Frequency)</a> .....	74
<a href="#">Setting the Reference Level Automatically (Auto Level)</a> .....	74
<a href="#">Resetting the Automatic Measurement Time (Meas Time Auto)</a> .....	74
<a href="#">Changing the Automatic Measurement Time (Meas Time Manual)</a> .....	74
<a href="#">Upper Level Hysteresis</a> .....	75
<a href="#">Lower Level Hysteresis</a> .....	75
<a href="#">AF Auto Scale</a> .....	75

### Adjusting all Determinable Settings Automatically (Auto All)

Activates all automatic adjustment functions for the current measurement settings, including:

- [Auto Frequency](#)
- [Auto Level](#)
- ["AF Auto Scale"](#) on page 68

Remote command:

[\[SENSe:\]ADJust:ALL](#) on page 111

### Adjusting the Center Frequency Automatically (Auto Frequency)

The R&S EPL1000 adjusts the center frequency automatically.

The optimum center frequency is the frequency with the highest S/N ratio in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

Remote command:

[\[SENSe:\]ADJust:FREQuency](#) on page 113

### Setting the Reference Level Automatically (Auto Level)

Automatically determines a reference level which ensures that no overload occurs at the R&S EPL1000 for the current input data. At the same time, the internal attenuators are adjusted. As a result, the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S EPL1000.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see "[Changing the Automatic Measurement Time \(Meas Time Manual\)](#)" on page 74).

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 103

### Resetting the Automatic Measurement Time (Meas Time Auto)

Resets the measurement duration for automatic settings to the default value.

(Spectrum and AM/FM/PM modulation analysis application: 1 ms)

Remote command:

[\[SENSe:\]ADJust:CONFigure:LEVel:DURation:MODE](#) on page 112

### Changing the Automatic Measurement Time (Meas Time Manual)

This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

**Note:** The maximum measurement duration depends on the currently selected measurement and the installed (optional) hardware. Thus, the measurement duration actually used to determine the automatic settings can be shorter than the value you define here.

Remote command:

[\[SENSe:\]ADJust:CONFigure:LEVel:DURation:MODE](#) on page 112

[\[SENSe:\]ADJust:CONFigure:LEVel:DURation](#) on page 111

**Upper Level Hysteresis**

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold that the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[\[SENSe:\]ADJust:CONFigure:HYSTeresis:UPPer](#) on page 112

**Lower Level Hysteresis**

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold that the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[\[SENSe:\]ADJust:CONFigure:HYSTeresis:LOWer](#) on page 112

**AF Auto Scale**

Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Remote command:

[\[SENSe:\]ADJust:SCALE\[:Y\]:AUTO\[:CONTinuous\]](#) on page 114

## 6 Analysis

### Access

- "Overview" > "Analysis"

General result analysis settings concerning the trace, markers, lines etc. are similar to the analysis functions in the Spectrum application, except for the features described here.

For more information, refer to the R&S EPL1000 User Manual.

- [Trace configuration](#)..... 76
- [Marker settings](#).....77
- [Display lines and limit lines](#)..... 77

### 6.1 Trace configuration

#### Access

- "Overview" > "Analysis" > "Trace"

For more information, refer to the user manual of the R&S EPL1000.

#### Spectrograms in the Analog Modulation Analysis application

Basically, spectrograms work the same as in the Receiver application.

However, in the Analog Demodulator, they have the following distinctive features.

- Not all result displays support spectrograms.
- Compared to the Receiver or Spectrum application, a spectrogram can not be added as an independent result display. Instead, spectrograms relate to a certain measurement window (or result display). Result diagram and spectrogram are a single entity in that case and can not be divided.

To view results in a spectrogram, select a window (indicated by a blue frame), then select [TRACE] > "Spectrogram Config".

Spectrograms are either displayed in "Split" mode (spectrogram is displayed below the trace diagram), in "Full" mode (trace diagram is not displayed), or not displayed at all ("Off").

When the "Spectrogram Config" softkey is greyed out, spectrograms are not supported by the selected result display.

[State](#).....76

#### State

Activates and deactivates a Spectrogram subwindow.

"Split"                      Displays the Spectrogram as a subwindow in the original result display.

"Full" Displays the Spectrogram in a subwindow in the full size of the original result display.

"Off" Closes the Spectrogram subwindow.

Remote command:

[CALCulate<n>:SPECTrogram:LAYout](#) on page 161

## 6.2 Marker settings

### Access

- "Overview" > "Analysis" > "Marker"
- "Overview" > "Analysis" > "Marker" > "Marker Function"

For more information, refer to the user manual of the R&S EPL1000.

<a href="#">Link AF Spectrum Marker</a> .....	77
<a href="#">Link Time Marker</a> .....	77

### Link AF Spectrum Marker

Links the markers in all AF spectrum displays.

Remote command:

[CALCulate<n>:MARKer<m>:LINK](#) on page 160

### Link Time Marker

Links the markers in all time domain diagrams.

Remote command:

[CALCulate<n>:MARKer<m>:LINK](#) on page 160

## 6.3 Display lines and limit lines

**Access** (limit lines): "Overview" > "Analysis" > "Lines" > "Limit Lines"

**Access** (display lines): "Overview" > "Analysis" > "Lines" > "Display Lines"

For more information, refer to the user manual of the R&S EPL1000.

## 7 How to perform measurements in the R&S FPL1-K7 AM/FM/PM Modulation Analysis application

The following step-by-step instructions demonstrate how to perform AM/FM/PM Modulation Analysis with the optional R&S FPL1-K7 AM/FM/PM Modulation Analysis application.

1. Press [MODE].
2. Select the "AM/FM/PM Modulation Analysis" application.
3. Select "Overview" to display the "Overview" for AM/FM/PM Modulation Analysis.
4. Select "Input/Frontend" > "Frequency" tab to define the input signal's center frequency.
5. Select "Data Acquisition" and define the bandwidth parameters for the input signal:
  - "Demodulation Bandwidth": the span of the input signal to demodulate
  - "Measurement Time": how long the input signal is measured
  - "Resolution Bandwidth": how precise the signal is demodulated
  - "Capture Offset" (multistandard mode only): the offset of the analysis interval from the start of the capture buffer
6. Optionally, select "Trigger" and define a trigger for data acquisition, for example an offline demodulation trigger to start capturing data only when a useful signal is transmitted.
7. Select "Demod/Display" and select the demodulation displays that are of interest to you (up to 6).  
Arrange them on the display to suit your preferences.
8. Exit the SmartGrid mode and select "Overview" to display the "Overview" again.
9. Select "Demodulation Settings" to define demodulation parameters for each evaluation:
  - Configure the "Squelch" function (on the "Demod" tab) to suppress noise during demodulation.
  - For time domain evaluations, zoom into the areas of interest by defining a zoom area (on the "Demod" tab).
  - For AF evaluations, use special filters to eliminate certain effects of demodulation or to correct pre-emphasized modulated signals (on the "AF Filters" tab).
  - Adapt the diagram scaling to the displayed data (on the "Scaling" tab).
10. Select "Overview" > "Analysis" to use the advanced analysis functions in the demodulation displays.

- Configure a trace to display the average over a series of sweeps (on the "Trace" tab. If necessary, increase the "Sweep Count" in the "Data Acquisition" settings).
  - Configure markers and delta markers to determine deviations and offsets within the demodulated signal (on the "Marker" tab).
  - Use special marker functions to calculate phase noise or an n-dB-down bandwidth (on the "Marker Config" tab).
  - Configure a limit check to detect excessive deviations (on the "Lines" tab).
11. Start a new sweep with the defined settings.  
In multistandard mode, to stop the continuous measurement mode by the Sequencer and perform a single data acquisition:
    - a) Select the Sequencer (🔌) from the toolbar.
    - b) Set the Sequencer state to "Off".
    - c) Press [RUN SINGLE].
  12. Optionally, export the trace data of the demodulated signal to a file.
    - a) In the "Traces" tab of the "Analysis" dialog box, switch to the "Trace Export" tab.
    - b) Select "Export Trace to ASCII File".
    - c) Define a file name and storage location and select "OK".

## 7.1 How to export trace data and numerical results

The measured trace data and numerical measurement results in tables can be exported to an ASCII file. For each sweep point, the measured trace position and value are output.

The file is stored with a `.DAT` or `.CSV` extension. For details on the storage format, see [Chapter C, "Reference: ASCII file export format"](#), on page 168.

### To export trace data and table results

1. Select [TRACE] > "Trace Config" > "Trace / Data Export" tab.
2. Select "Export all Traces and all Table Results" to export all available measurement result data for the current application, or select a specific "Trace to Export".
3. Optionally, select "Include Instrument & Measurement Settings" to insert additional information in the export file header.
4. Select "Export Trace to ASCII File".
5. In the file selection dialog box, select the storage location and file name for the export file.
6. If necessary, change the decimal separator for the ASCII export file.
7. Select the data format of the ASCII file.

8. Select "Save" to close the dialog box and export the data to the file.



## 8 Measurement example: demodulating an FM signal

A practical example for a basic Analog Modulation Analysis measurement is provided here. It demonstrates how operating and measurement errors can be avoided using correct configuration settings.

The measurement is performed using the following devices:

- An R&S EPL1000 with application firmware R&S FPL1-K7: Analog Modulation Analysis
- A vector signal generator, e.g. R&S SMW



**Figure 8-1: Test setup**

### Signal generator settings (e.g. R&S SMW):

Frequency:	500 MHz
Level:	-10 dBm
Modulation:	FM
Modulation frequency:	10 kHz
Frequency deviation:	50 kHz

### Procedure:

1. Preset the R&S EPL1000.
2. Set the center frequency to *500 MHz*.
3. Set the reference level to *0 dBm*.
4. Select [MODE] and then "AM FM PM Analog Demod".

By default, the "FM Time Domain" result display and a "Result Summary" are shown.

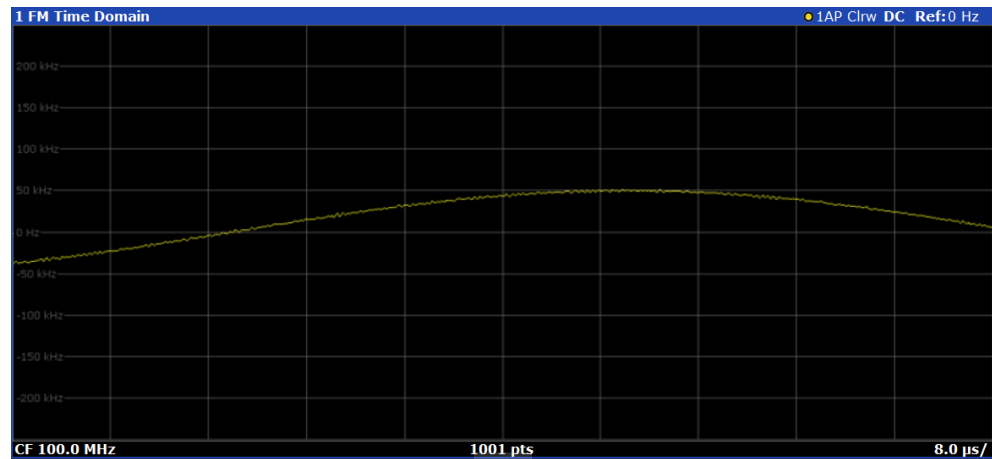


Figure 8-2: Default Analog Modulation Analysis measurement result display

5. Set the measurement time (AQT) to 1 ms to measure 10 periods of the signal.
6. Adjust the y-axis scaling to the measured frequency deviation automatically by selecting "Scale Config" > "Scaling" tab > "AF Auto Scale": "On".

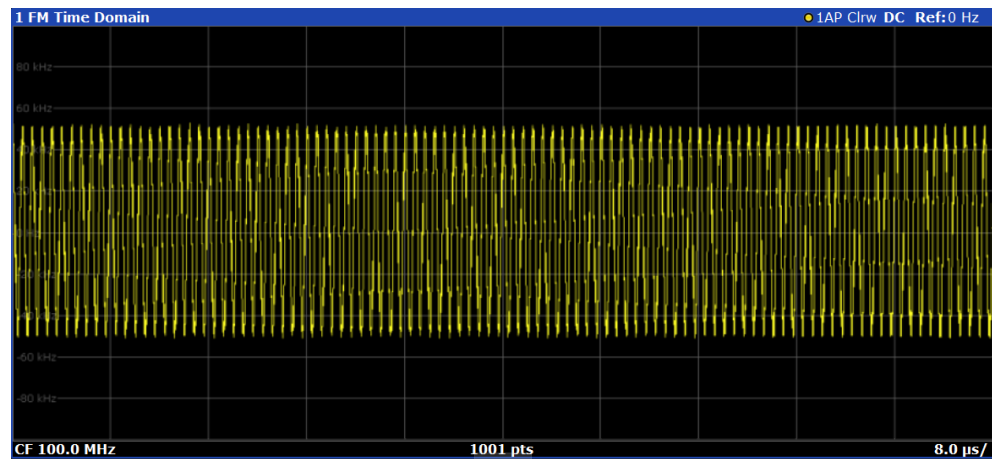


Figure 8-3: Auto-scaled measurement of 10 signal periods (continuous)

7. Display the RF spectrum of the measured signal to determine the required demodulation bandwidth. Select "Display Config" and add an "RF Spectrum" window to the display.

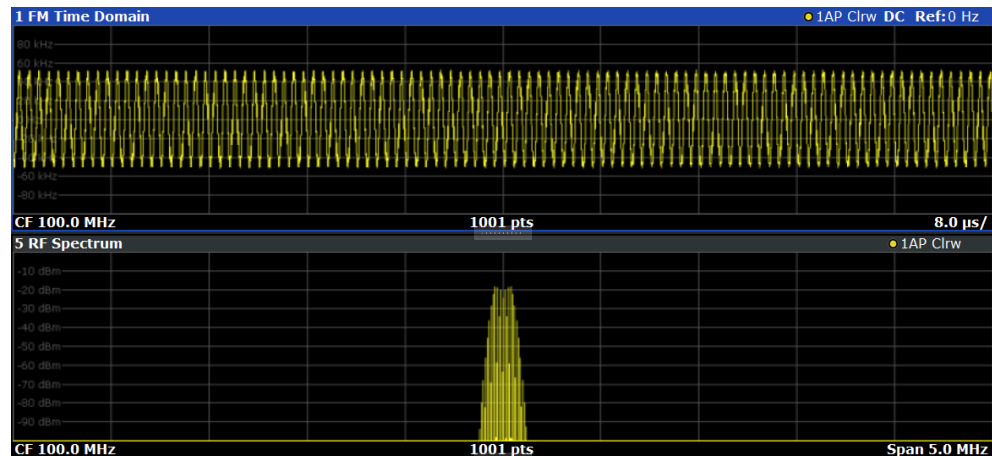


Figure 8-4: RF spectrum of FM signal with default demodulation bandwidth = 5 MHz

8. As you can see in Figure 8-4, the default demodulation bandwidth of 5 MHz is much too large - the actual signal takes up only a small part of the displayed range. That means that any noise or additional signals apart from the FM signal of interest may be included in the measured results. Select "Demod BW" and reduce the value to 200 kHz.

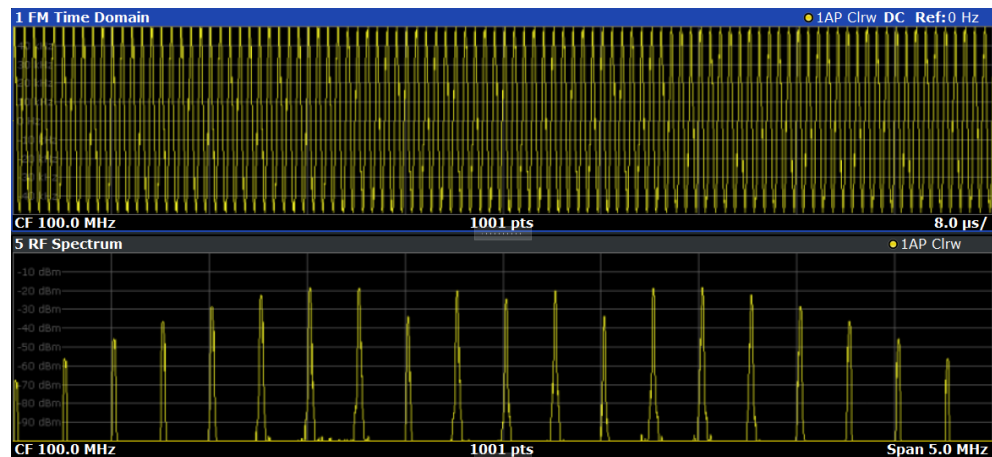


Figure 8-5: RF spectrum with demodulation bandwidth = 200 kHz

The span is automatically reduced to 200 kHz as well, as only the demodulated range can be displayed.

9. Now the RF spectrum shows that part of the FM signal is cut off. The missing signal parts are not included in the calculated results. Increase the demodulation bandwidth to 400 kHz to include the entire signal, but no interfering frequencies.
- The span is not automatically increased for the wider DBW since it may be useful to display only a small range from the demodulated bandwidth. However, this means the RF spectrum will still not show the entire signal.
10. Increase the span manually to show the entire demodulated bandwidth:
- Select the "RF Spectrum" window.

- b) Press [SPAN].
- c) Select "Full Span".

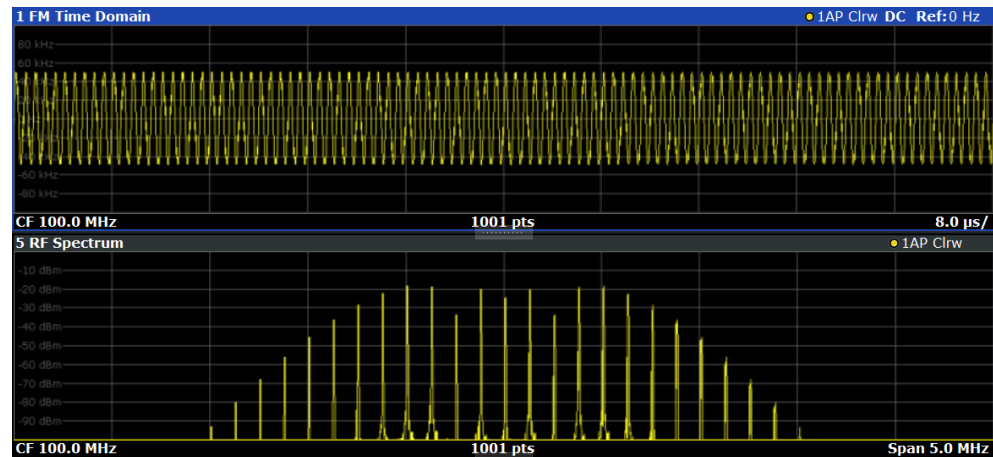


Figure 8-6: RF spectrum with demodulation bandwidth = 400 kHz

11. Once the correct DBW has been determined, you can replace the RF spectrum by the FM spectrum result display to analyze the spectrum of the FM signal. Select "Display Config" and move an "FM Spectrum" window over the "RF Spectrum" window in the display.


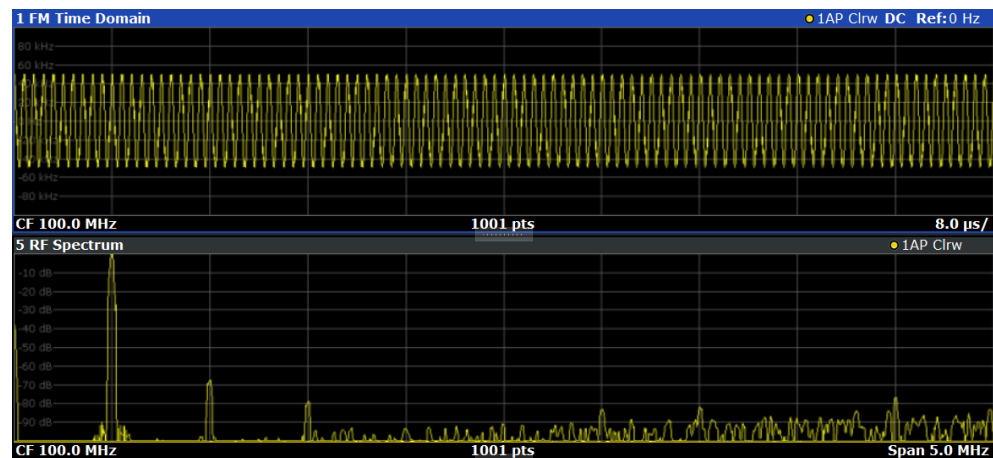


Figure 8-7: FM spectrum and Result Summary including SINAD and THD values

From the FM spectrum, the SINAD and THD are also calculated and displayed in the "Result Summary".

12. Since the "AF Auto Scale" function is enabled, the "FM Spectrum" diagram is scaled according to the current measurement automatically. Each diagram is scaled individually, so that the reference values at the top of the two diagrams can differ (100 kHz in the "FM Time Domain" versus 50 kHz in the "FM Spectrum". However, you can adjust the values manually.
  - a) Select the "FM Spectrum" window to set the focus in it.
  - b) Press [AMPT].

- c) Select "Scale Config".
- d) Disable the "AF Auto Scale" function.
- e) Define the new reference value (at 100% = top of the diagram) as *100 kHz*.

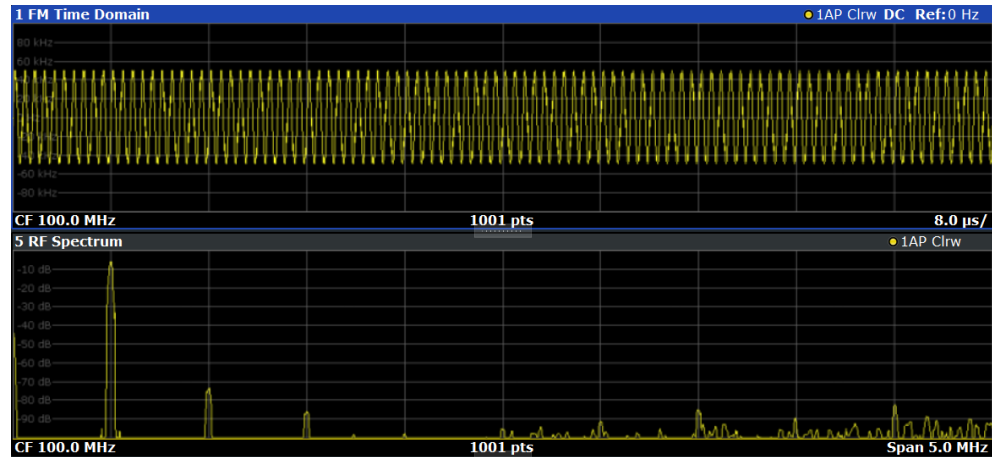

Note that while the reference values at the top of both y-axes are now identical, the reference values indicated in the window title bars are not. This is due to the fact that, by default, in AF time domain displays the reference value is defined at the reference position 50 % (=center of diagram), while in AF frequency domains it is defined at the position 100 % (= top of diagram).

## 9 Optimizing and troubleshooting the measurement

If the results do not meet your expectations, consider the following notes and tips to optimize the measurement.

### Determining the demodulation bandwidth

A frequent cause for measurement errors and false results is an **incorrectly defined demodulation bandwidth (DBW)**.

If the DBW is too large, the actual signal takes up only a small part of the demodulated range. That means that any noise or additional signal parts can be included in the measured results, which are then false.

On the other hand, if the DBW is too small, part of the signal is cut off and thus not included in the calculation of the results.

An easy way to determine the required DBW is to display the RF spectrum of the input signal. If the entire signal is displayed there and takes up most of the diagram width, the DBW is probably appropriate.

This procedure is demonstrated in the measurement example described in [Chapter 8, "Measurement example: demodulating an FM signal"](#), on page 81.

For further recommendations on finding the correct demodulation bandwidth, see [Chapter 3.2, "Demodulation bandwidth"](#), on page 20.

### Adjusting the displayed span

Be aware that the span of the "RF Spectrum" display is not automatically increased for a wider DBW. Sometimes, it can be useful to display only a small range from the demodulated bandwidth. Thus, if the RF spectrum does not show the entire demodulated bandwidth, you must increase the span manually to show the entire signal.

### Determining the SINAD and THD

The signal-to-noise-and-distortion ratio (SINAD) and the total harmonic distortion (THD) of the demodulated signal are a good indicator of the signal quality sent by the DUT. Both values are calculated inside the AF spectrum span and thus only if an AF spectrum window is displayed. If either value deviates strongly from the expected result, make sure that the demodulation bandwidth is defined correctly (see [Determining the demodulation bandwidth](#)).

# 10 Remote commands for analog demodulation

The following commands are specific to performing measurements in the Analog Demodulation application in a remote environment. The R&S EPL1000 must already be set up for remote operation in a network as described in the base unit manual.

• <a href="#">Introduction</a> .....	87
• <a href="#">Common suffixes</a> .....	92
• <a href="#">Application selection</a> .....	92
• <a href="#">Measurement configuration</a> .....	96
• <a href="#">Result display configuration</a> .....	141
• <a href="#">Measurement results</a> .....	149
• <a href="#">Analysis</a> .....	160
• <a href="#">Data import and export</a> .....	161
• <a href="#">Programming example</a> .....	162

## 10.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the R&S EPL1000.



### Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

### 10.1.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S EPL1000 follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (\*RST)**

Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as **\*RST** values, if available.

- **Default unit**

The default unit is used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

### 10.1.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

**Example:**

SENSe:FREQuency:CENTer is the same as SENS:FREQ:CENT.

### 10.1.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.



If you do not quote a suffix for keywords that support one, a 1 is assumed.

**Example:**

`DISPlay[:WINDow<1...4>]:ZOOM:STATe` enables the zoom in a particular measurement window, selected by the suffix at `WINDow`.

`DISPlay:WINDow4:ZOOM:STATe ON` refers to window 4.

### 10.1.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

**Example:**

Without a numeric suffix in the optional keyword:

`[SENSe:]FREQuency:CENTer` is the same as `FREQuency:CENTer`

With a numeric suffix in the optional keyword:

`DISPlay[:WINDow<1...4>]:ZOOM:STATe`

`DISPlay:ZOOM:STATe ON` enables the zoom in window 1 (no suffix).

`DISPlay:WINDow4:ZOOM:STATe ON` enables the zoom in window 4.

### 10.1.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

**Example:**

`[SENSe:]BANDwidth|BWIDth[:RESolution]`

In the short form without optional keywords, `BAND 1MHZ` would have the same effect as `BWID 1MHZ`.

### 10.1.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

**Example:**

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABLE
```

Parameters can have different forms of values.

- [Numeric values](#)..... 90
- [Boolean](#)..... 91
- [Character data](#)..... 91
- [Character strings](#)..... 91
- [Block data](#)..... 91

**10.1.6.1 Numeric values**

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

**Example:**

With unit: `SENSe:FREQuency:CENTer 1GHZ`

Without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**  
Defines the minimum or maximum numeric value that is supported.
- **DEF**  
Defines the default value.
- **UP/DOWN**  
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

**Querying numeric values**

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

**Example:**

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- **INF/NINF**  
Infinity or negative infinity. Represents the numeric values 9.9E37 or -9.9E37.
- **NAN**  
Not a number. Represents the numeric value 9.91E37. NAN is returned if errors occur.

#### 10.1.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by "ON" or the numeric value 1. The "off" state (logically untrue) is represented by "OFF" or the numeric value 0.

##### Querying Boolean parameters

When you query Boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

##### Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return 1

#### 10.1.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 10.1.2, "Long and short form"](#), on page 88.

##### Querying text parameters

When you query text parameters, the system returns its short form.

##### Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMAL`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return NORM

#### 10.1.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark ( ' ) or a double quotation mark ( " ).

##### Example:

`INSTRument:DELeTe 'Spectrum'`

#### 10.1.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

## 10.2 Common suffixes

In the R&S FPL1-K7 AM/FM/PM Modulation Analysis application, the following common suffixes are used in remote commands:

**Table 10-1: Common suffixes used in remote commands in the R&S FPL1-K7 AM/FM/PM Modulation Analysis application**

Suffix	Value range	Description
<m>	1 to 16	Marker
<n>	1 to 6	Window (in the currently selected channel setup)
<t>	1 to 6	Trace
<li>	1 to 8	Limit line
<k>	1..8 (Limit line) 1   2 (Display line)	Selects a limit or display line.
<pk>	1..3000	Selects a peak.
<ou>	irrelevant	



### Selecting windows in multiple channel setups

Note that the suffix <n> always refers to a window in the currently selected channel setup.

## 10.3 Application selection

<a href="#">INSTrument:CREate:DUPLicate</a> .....	93
<a href="#">INSTrument:CREate[:NEW]</a> .....	93
<a href="#">INSTrument:CREate:REPLace</a> .....	93
<a href="#">INSTrument:DELeTe</a> .....	94
<a href="#">INSTrument:LIST?</a> .....	94
<a href="#">INSTrument:REName</a> .....	95
<a href="#">INSTrument[:SELeCt]</a> .....	95
<a href="#">SYSTem:PRESet:CHANnel[:EXEC]</a> .....	96

**INSTrument:CREate:DUPLicate**

Duplicates the currently selected channel setup, i.e. creates a new channel setup of the same type and with the identical measurement settings. The name of the new channel setup is the same as the copied channel setup, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel setup to be duplicated must be selected first using the `INST:SEL` command.

**Example:** `INST:SEL 'Receiver'`  
`INST:CRE:DUPL`  
 Duplicates the channel setup named 'Receiver' and creates a new channel setup named 'Receiver 2'.

**Usage:** Event

**INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>**

Adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

**Parameters:**

<ChannelType> Channel type of the new channel.  
 For a list of available channel types, see [INSTrument:LIST?](#) on page 94.

<ChannelName> String containing the name of the channel.  
 Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

**Example:** `INST:CRE SAN, 'Spectrum 2'`  
 Adds a spectrum display named "Spectrum 2".

**INSTrument:CREate:REPLace <ChannelName1>, <ChannelType>, <ChannelName2>**

Replaces a channel setup with another one.

**Setting parameters:**

<ChannelName1> String containing the name of the channel setup you want to replace.

<ChannelType> Channel type of the new channel setup.  
 For a list of available channel setup types, see [INSTrument:LIST?](#) on page 94.

<ChannelName2> String containing the name of the new channel setup.  
**Note:** If the specified name for a new channel setup already exists, the default name, extended by a sequential number, is used for the new channel setup (see [INSTrument:LIST?](#) on page 94).

Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:** `INST:CRE:REPL 'Receiver',REC,'REC2'`  
 Replaces the channel setup named "Receiver" by a new channel setup of type "Receiver" named "REC2".

**Usage:** Setting only

#### **INSTrument:DELeTe** <ChannelName>

Deletes a channel setup.

If you delete the last channel setup, the default "Receiver" channel setup is activated.

##### **Setting parameters:**

<ChannelName> String containing the name of the channel setup you want to delete.  
 A channel setup must exist to delete it.

**Example:** `INST:DEL 'Receiver'`  
 Deletes the channel setup with the name 'Receiver'.

**Usage:** Setting only

#### **INSTrument:LIST?**

Queries all active channel setups. The query is useful to obtain the names of the existing channel setups, which are required to replace or delete the channel setups.

##### **Return values:**

<ChannelType>,  
 <ChannelName> For each channel setup, the command returns the channel setup type and channel setup name (see tables below).  
 Tip: to change the channel setup name, use the [INSTrument:REName](#) command.

**Example:** `INST:LIST?`  
 Result for 2 channel setups:  
 'REC','Receiver','REC','Receiver 2'

**Usage:** Query only

**Table 10-2: Available channel setup types and default channel setup names**

Application	<ChannelType> Parameter	Default Channel setup Name*)
Receiver	RECeiver	Receiver
Spectrum	SANalyzer	Spectrum
I/Q Analyzer	IQ	IQ Analyzer
Analog Modulation Analysis	ADEMod	Analog Demod
Click Rate Analyzer	CRANalyzer	Click Rate Analyzer

Note: the default channel setup name is also listed in the table. If the specified name for a new channel setup already exists, the default name, extended by a sequential number, is used for the new channel setup.

**INSTrument:REName** <ChannelName1>, <ChannelName2>

Renames a channel setup.

**Setting parameters:**

<ChannelName1> String containing the name of the channel setup you want to rename.

<ChannelName2> String containing the new channel setup name.  
 Note that you cannot assign an existing channel setup name to a new channel setup. If you do, an error occurs.  
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:** `INST:REN 'Receiver', 'REC'`  
 Renames the channel setup with the name 'Receiver' to 'REC'.

**Usage:** Setting only

**INSTrument[:SElect]** <ChannelType> | <ChannelName>

Activates a new channel setup with the defined channel setup type, or selects an existing channel setup with the specified name.

Also see

- [INSTrument:CREate\[:NEW\]](#) on page 93

**Parameters:**

<ChannelType> Channel type of the new channel setup.  
 For a list of available channel setup types see [INSTrument:LIST?](#) on page 94.

<ChannelName> String containing the name of the channel setup.

**Example:** `INST IQ`  
 Activates a channel setup for the I/Q Analyzer application (evaluation mode).  
`INST 'MyIQSpectrum'`  
 Selects the channel setup named 'MyIQSpectrum' (for example before executing further commands for that channel setup).

---

### **SYSTem:PRESet:CHANnel[:EXEC]**

Restores the default instrument settings in the current channel setup.

Use `INST:SEL` to select the channel setup.

**Example:** `INST:SEL 'Spectrum2'`  
 Selects the channel setup for "Spectrum2".  
`SYST:PRESet:CHAN:EXEC`  
 Restores the factory default settings to the "Spectrum2" channel setup.

**Usage:** Event

**Manual operation:** See "[Preset Channel setup](#)" on page 42

## 10.4 Measurement configuration

• <a href="#">Standard selection</a> .....	96
• <a href="#">Input configuration</a> .....	97
• <a href="#">Output configuration</a> .....	100
• <a href="#">Amplitude configuration</a> .....	100
• <a href="#">Frequency configuration</a> .....	104
• <a href="#">Trigger configuration</a> .....	105
• <a href="#">Automatic configuration</a> .....	111
• <a href="#">Data acquisition</a> .....	114
• <a href="#">Demodulation settings</a> .....	122

### 10.4.1 Standard selection

<a href="#">[SENSe:]ADEMod:PRESet[:STANdard]</a> .....	96
<a href="#">[SENSe:]ADEMod:PRESet:REStore</a> .....	97
<a href="#">[SENSe:]ADEMod:PRESet:StORe</a> .....	97

---

#### **[SENSe:]ADEMod:PRESet[:STANdard] <Standard>**

Loads a measurement configuration.

Standard definitions are stored in an xml file. The default directory for Analog Modulation Analysis standards is C:

`\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\predefined\AdemodPredefi`



**Parameters:**

<Standard> String containing the file name.  
If you have stored the file in a subdirectory of the directory mentioned above, you have to include the relative path to the file.

**Manual operation:** See "[Load Standard](#)" on page 41

**[SENSe:]ADEMod:PRESet:RESTore**

**Manual operation:** See "[Restore Standard Files](#)" on page 41

**[SENSe:]ADEMod:PRESet:STORe** <Standard>

Saves the current Analog Modulation Analysis measurement configuration.

Standard definitions are stored in an XML file. The default directory for Analog Modulation Analysis standards is C :

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\predefined\AdemodPredef

**Parameters:**

<Standard> String containing the file name.  
You can save the file in a subdirectory of the directory mentioned above. In that case, you have to include the relative path to the file.

**Manual operation:** See "[Save Standard](#)" on page 41

**10.4.2 Input configuration**

- [RF input](#).....97
- [Preselector configuration](#)..... 100
- [LISN configuration](#).....100

**10.4.2.1 RF input**

<a href="#">INPut&lt;ip&gt;:ATTenuation:LIMiter[:STATe]</a> .....	97
<a href="#">INPut:ATTenuation:PROTection:RESet</a> .....	98
<a href="#">INPut:FILE:PATH</a> .....	98
<a href="#">INPut:FILTer:SAW</a> .....	98
<a href="#">INPut&lt;ip&gt;:IMPedance</a> .....	99
<a href="#">INPut&lt;ip&gt;:SElect</a> .....	99

**INPut<ip>:ATTenuation:LIMiter[:STATe]** <State>

This command turns the pulse limiter on and off.

The pulse limiter is an additional protection mechanism for the second RF input that attenuates high level pulses.

**Suffix:**

&lt;ip&gt; irrelevant

**Parameters:**<State> ON | OFF | 1 | 0  
\*RST: ON**Example:**//Turn on pulse limiter  
INP:ATT:LIM ON**Manual operation:** See "[Pulse Limiter](#)" on page 44**INPut:ATTenuation:PROTection:RESet**

Resets the attenuator and reconnects the RF input with the input mixer for the R&S EPL1000 after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVLD` message in the status bar are cleared.

(For details on the status register see the R&S EPL1000 base unit user manual).

The command works only if the overload condition has been eliminated first.

**Example:**

INP:ATT:PROT:RES

**INPut:FILE:PATH <FileName>[, <AnalysisBW>]**

Selects the I/Q data file to be used as input for further measurements.

**Parameters:**<FileName> String containing the path and name of the source file.  
The file extension is \*.iq.tar.

&lt;AnalysisBW&gt; Optionally: The analysis bandwidth to be used by the measurement. The bandwidth must be smaller than or equal to the bandwidth of the data that was stored in the file.

Default unit: HZ

**Example:**INP:FILE:PATH 'C:\R\_S\Instr\user\data.iq.tar'  
Uses I/Q data from the specified file as input.**Manual operation:** See "[Select I/Q data file](#)" on page 45**INPut:FILTer:SAW <State>**

Determines which IF path the R&S EPL1000 hardware uses.

**Parameters:**

&lt;State&gt; AUTO | OFF

**AUTO**

The R&S EPL1000 determines which IF path to use automatically, depending on the used analysis bandwidth.

**OFF**

The wide IF path is always used.

\*RST: I/Q Analyzer: AUTO; VSA: OFF

**Example:** INP:FILT:SAW AUTO

**Manual operation:** See "[SAW filter](#)" on page 44

**INPut<ip>:IMPedance <Impedance>**

Selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<Impedance> 50 | 75  
\*RST: 50 Ω  
Default unit: OHM

**Example:** INP:IMP 75

**Manual operation:** See "[Impedance](#)" on page 44

**INPut<ip>:SElect <Source>**

Selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S EPL1000.

Tip: The I/Q data to be analyzed for AM/FM/PM Modulation Analysis cannot only be measured by the R&S FPL1-K7 AM/FM/PM Modulation Analysis application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the analyzed I/Q data from the R&S FPL1-K7 AM/FM/PM Modulation Analysis application can be exported for further analysis in external applications.

For details, see the R&S EPL1000 I/Q Analyzer and I/Q Input User Manual.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<Source> **RF**  
Radio Frequency ("RF INPUT" connector)  
\*RST: RF

**Manual operation:** See "[I/Q Input File State](#)" on page 45

### 10.4.2.2 Preselector configuration

The remote commands to configure the preselector are the same as in the Receiver application.

For a comprehensive list of commands, refer to the user manual of the R&S EPL1000.

### 10.4.2.3 LISN configuration

The remote commands to configure LISNs are the same as in the Receiver application.

For a comprehensive list of commands, refer to the user manual of the R&S EPL1000.

## 10.4.3 Output configuration

For a list of commands required to configure analog demodulation output and LISNs, refer to the R&S EPL1000 user manual.

[DIAGnostic:SERVice:NSource](#)..... 100

---

### **DIAGnostic:SERVice:NSource** <State>

Turns the 28 V supply of the BNC connector labeled [noise source control] on the R&S EPL1000 on and off.

#### Parameters:

<State>                    ON | OFF | 0 | 1  
                               **OFF | 0**  
                               Switches the function off  
                               **ON | 1**  
                               Switches the function on

**Example:**                `DIAG:SERV:NSO ON`

**Manual operation:**    See "[Noise Source Control](#)" on page 46

## 10.4.4 Amplitude configuration

Commands to configure the amplitude described elsewhere.

- [INPut<ip>:IMPedance](#) on page 99

[CALCulate<n>:UNIT:POWer](#)..... 101  
[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#)..... 101  
[DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#)..... 101  
[INPut<ip>:ATTenuation\[:VALue\]](#)..... 102  
[INPut<ip>:ATTenuation:AUTO](#)..... 102  
[INPut<ip>:ATTenuation:PROTection\[:STATe\]](#)..... 103  
[INPut<ip>:GAIN:STATe](#)..... 103  
[\[SENSe:\]ADJust:LEVel](#)..... 103

**CALCulate<n>:UNIT:POWER <Unit>**

Selects the unit of the y-axis.

The unit applies to all power-based measurement windows with absolute values.

**Suffix:**

<n> irrelevant

**Parameters:**

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |  
DBUA | AMPere | DBM\_mhz | DBM\_hz | DBUa\_mhz |  
DBUV\_mhz | DBmV\_mhz | DBpW\_mhz

\*RST: dBm

**Example:**

CALC:UNIT:POW DBM

Sets the power unit to dBm.

**Manual operation:** See ["Unit"](#) on page 48

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel  
<ReferenceLevel>**

Defines the reference level (for all traces in all windows).

With a reference level offset  $\neq 0$ , the value range of the reference level is modified by the offset.

**Suffix:**

<n> irrelevant

<w> subwindow  
Not supported by all applications

<t> irrelevant

**Parameters:**

<ReferenceLevel> The unit is variable.

Range: see datasheet

\*RST: 0 dBm

Default unit: DBM

**Example:**

DISP:TRAC:Y:RLEV -60dBm

**Manual operation:** See ["Reference Level"](#) on page 47

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet  
<Offset>**

Defines a reference level offset (for all traces in all windows).

**Suffix:**

<n> irrelevant

<w> subwindow  
Not supported by all applications

<↳> irrelevant

**Parameters:**

<Offset> Range: -200 dB to 200 dB  
\*RST: 0dB  
Default unit: DB

**Example:** DISP:TRAC:Y:RLEV:OFFS -10dB

**Manual operation:** See "[Shifting the Display \(Offset\)](#)" on page 47

**INPut<ip>:ATTenuation[:VALue] <Attenuation>**

This command defines the attenuation at the RF input.

To protect the input mixer, attenuation levels of 10 dB or less are possible only if you have turned off the input protection with [INPut<ip>:ATTenuation:PROTection\[:STATe\]](#) on page 103.

**Suffix:**

<ip> irrelevant

**Parameters:**

<Attenuation> Range: 0 dB to 55 dB  
\*RST: 10 dB  
Default unit: dB

**Example:** //Define attenuation  
INP:ATT 40dB

**Manual operation:** See "[Attenuation](#)" on page 49

**INPut<ip>:ATTenuation:AUTO <State>**

This command turns automatic determination of the attenuation level on and off.

When you turn it on, the R&S EPL1000 selects an attenuation that results in a good signal-to-noise ratio without overloading the RF input.

**Suffix:**

<ip> irrelevant

**Parameters:**

<State> ON | OFF  
**ON**  
Selects automatic attenuation mode.  
**OFF**  
Selects manual attenuation mode.  
\*RST: ON

**Example:** //Turn on auto ranging  
INP:ATT:AUTO ON

**Manual operation:** See ["Attenuation"](#) on page 49

---

#### INPut<ip>:ATTenuation:PROTection[:STATe] <State>

This command turns the availability of attenuation levels of 10 dB or less on and off.

**Suffix:**

<ip> irrelevant

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Example:** //Turn on input protection  
INP:ATT:PROT ON

**Manual operation:** See ["10 dB Minimum Attenuation"](#) on page 49

---

#### INPut<ip>:GAIN:STATe <State>

This command turns the preamplifier on and off.

**Suffix:**

<ip> irrelevant

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: OFF

**Example:** //Turn on preamplifier  
INP:GAIN:STAT ON

**Manual operation:** See ["Preamplifier"](#) on page 49

---

#### [SENSe:]ADJust:LEVel

Initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. Thus, the settings of the RF attenuation and the reference level are optimized for the signal level. The R&S EPL1000 is not overloaded and the dynamic range is not limited by an S/N ratio that is too small.

**Example:** ADJ:LEV

**Manual operation:** See ["Setting the Reference Level Automatically \(Auto Level\)"](#) on page 48

## 10.4.5 Frequency configuration

[SENSe:]FREQUency:CENTer.....	104
[SENSe:]FREQUency:CENTer:STEP.....	104
[SENSe:]FREQUency:CENTer:STEP:LINK.....	104
[SENSe:]FREQUency:CENTer:STEP:LINK:FACTor.....	105

---

### [SENSe:]FREQUency:CENTer <Frequency>

Defines the center frequency.

**Parameters:**

<Frequency>            The allowed range and  $f_{\max}$  is specified in the data sheet.  
                               \*RST:             $f_{\max}/2$   
                               Default unit: Hz

**Example:**

```
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
Sets the center frequency to 110 MHz.
```

**Manual operation:** See "[Center Frequency](#)" on page 50

---

### [SENSe:]FREQUency:CENTer:STEP <StepSize>

Defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the SENS:FREQ UP AND SENS:FREQ DOWN commands, see [SENSe:]FREQUency:CENTer on page 104.

**Parameters:**

<StepSize>             $f_{\max}$  is specified in the data sheet.  
                               Range:            1 to  $f_{\max}$   
                               \*RST:            0.1 x span  
                               Default unit: Hz

**Example:**

```
//Set the center frequency to 110 MHz.
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```

**Manual operation:** See "[Center Frequency Stepsize](#)" on page 50

---

### [SENSe:]FREQUency:CENTer:STEP:LINK <CouplingType>

Couples and decouples the center frequency step size to the span or the resolution bandwidth.

**Parameters:**

<CouplingType>        SPAN | RBW | OFF



**SPAN**

Couples the step size to the span. Available for measurements in the frequency domain.  
(for RF spectrum result display)

**RBW**

Couples the step size to the resolution bandwidth. Available for measurements in the time domain.  
(for all result displays except RF spectrum)

**OFF**

Decouples the step size.

\*RST: SPAN

**Example:** //Couple step size to span  
FREQ:CENT:STEP:LINK SPAN

**Manual operation:** See "[Center Frequency Stepsize](#)" on page 50

**[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <Factor>**

Defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

**Parameters:**

<Factor> 1 to 100 PCT  
\*RST: 10  
Default unit: PCT

**Example:** //Couple frequency step size to span and define a step size factor  
FREQ:CENT:STEP:LINK SPAN  
FREQ:CENT:STEP:LINK:FACT 20PCT

**Manual operation:** See "[Center Frequency Stepsize](#)" on page 50

**10.4.6 Trigger configuration**

TRIGger<tp>[:SEQuence]:SOURce.....	106
TRIGger[:SEQuence]:DTIME.....	106
TRIGger<tp>[:SEQuence]:HOLDoff[:TIME].....	107
TRIGger[:SEQuence]:IFPower:HOLDoff.....	107
TRIGger[:SEQuence]:IFPower:HYSteresis.....	107
TRIGger[:SEQuence]:LEVel:AM[:ABSolute].....	108
TRIGger[:SEQuence]:LEVel:AM:RELative.....	108
TRIGger[:SEQuence]:LEVel:FM.....	108
TRIGger[:SEQuence]:LEVel:IFPower.....	109
TRIGger[:SEQuence]:LEVel:IQPower.....	109
TRIGger[:SEQuence]:LEVel:PM.....	109
TRIGger[:SEQuence]:LEVel:RFPower.....	110
TRIGger<tp>[:SEQuence]:SLOPe.....	110
TRIGger[:SEQuence]:TIME:RINTerval.....	110

**TRIGger<tp>[:SEQuence]:SOURce <Source>**

Selects the trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal. For details on trigger sources, see [Chapter 5.6, "Trigger configuration"](#), on page 51.

**Note on external triggers:**

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure that this situation is avoided in your remote control programs.

**Suffix:**

<tp>                      irrelevant

**Parameters:**

<Source>                      See table below.

\*RST:                      IMMEDIATE

**Example:**

```
//Select external trigger input as source of the trigger signal
TRIG:SOUR EXT
```

**Manual operation:** See ["Trigger Source"](#) on page 51

**Table 10-3: Available trigger sources**

SCPI parameter	Trigger source
AF	AF power signal
AM	Corresponds to the RF power signal
EXTernal	Trigger signal from the [Trigger Input] connector.
FM	FM power signal
IFPower	Second intermediate frequency.
IMMEDIATE	Free Run trigger.
IQPower	Magnitude of sampled I/Q data.
PM	PM power signal
TIME	Time interval

**TRIGger[:SEQuence]:DTIME <DropoutTime>**

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

**Parameters:**

<DropoutTime>                      Dropout time of the trigger.

Range:                      0 s to 10.0 s

\*RST:                      0 s

Default unit: S

**Manual operation:** See ["Drop-Out Time"](#) on page 53

---

### TRIGger<tp>[:SEQuence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the sweep (data capturing).

A negative offset is possible for time domain measurements.

For the trigger sources "External" or "IF Power", a common input signal is used for both trigger and gate. Therefore, changes to the gate delay affect the trigger offset as well.

#### Suffix:

<tp>                      irrelevant

#### Parameters:

<Offset>                      Range for measurements in the frequency domain:  
0 s to 10 s  
Range for measurements in the time domain:  
negative sweep time to 10 s  
\*RST:                      0 s  
Default unit: s

**Example:**                      //Define a trigger offset  
TRIG:HOLD 500us

**Manual operation:** See ["Trigger Offset"](#) on page 53

---

### TRIGger[:SEQuence]:IFPower:HOLDoff <Period>

Defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

**Note:** If you perform gated measurements in combination with the IF Power trigger, the R&S EPL1000 ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

#### Parameters:

<Period>                      Range:                      0 s to 10 s  
\*RST:                      0 s  
Default unit: S

**Example:**                      TRIG:SOUR EXT  
Sets an external trigger source.  
TRIG:IFP:HOLD 200 ns  
Sets the holding time to 200 ns.

**Manual operation:** See ["Trigger Holdoff"](#) on page 54

---

### TRIGger[:SEQuence]:IFPower:HYSTeresis <Hysteresis>

Defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

**Parameters:**

<Hysteresis>            Range:     3 dB to 50 dB  
                              \*RST:     3 dB  
                              Default unit: DB

**Example:**

TRIG:SOUR IFP  
 Sets the IF power trigger source.  
 TRIG:IFP:HYST 10DB  
 Sets the hysteresis limit value.

**Manual operation:** See "[Hysteresis](#)" on page 53

**TRIGger[:SEquence]:LEVel:AM[:ABSolute] <Level>**

The command sets the level when RF power signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Parameters:**

<Level>                 Range:     -100 to +30  
                              \*RST:     -20 dBm  
                              Default unit: dBm

**Example:**

TRIG:LEV:AM -30 dBm  
 Sets the RF power signal trigger threshold to -30 dBm

**Manual operation:** See "[Trigger Level](#)" on page 53

**TRIGger[:SEquence]:LEVel:AM:RELative <Level>**

The command sets the level when AM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Parameters:**

<Level>                 Range:     -100 to +100  
                              \*RST:     0 %  
                              Default unit: %

**Example:**

TRIG:LEV:AM:REL -20 %  
 Sets the AM trigger threshold to -20 %

**Manual operation:** See "[Trigger Level](#)" on page 53

**TRIGger[:SEquence]:LEVel:FM <Level>**

The command sets the level when FM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Parameters:**

<Level>                   Range:     -10 to +10  
                               \*RST:       0 Hz  
                               Default unit: MHz

**Example:**

TRIG:LEV:FM 10 kHz  
 Sets the FM trigger threshold to 10 kHz

**Manual operation:** See "[Trigger Level](#)" on page 53

**TRIGger[:SEQuence]:LEVel:IFPower <TriggerLevel>**

Defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

**Parameters:**

<TriggerLevel>           For details on available trigger levels and trigger bandwidths, see the data sheet.  
                               \*RST:       -20 dBm  
                               Default unit: DBM

**Example:**

TRIG:LEV:IFP -30DBM

**Manual operation:** See "[Trigger Level](#)" on page 53

**TRIGger[:SEQuence]:LEVel:IQPower <TriggerLevel>**

Defines the magnitude the I/Q data must exceed to cause a trigger event.

**Parameters:**

<TriggerLevel>           Range:     -130 dBm to 30 dBm  
                               \*RST:       -20 dBm  
                               Default unit: DBM

**Example:**

TRIG:LEV:IQP -30DBM

**TRIGger[:SEQuence]:LEVel:PM <Level>**

The command sets the level when PM-modulated signals are used as trigger source.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Parameters:**

<Level>                   Range:     -1000 to +1000  
                               \*RST:       0 RAD  
                               Default unit: RAD | DEG

**Example:**

TRIG:LEV:PM 1.2 RAD  
 Sets the PM trigger threshold to 1.2 rad

**Manual operation:** See ["Trigger Level"](#) on page 53

---

### TRIGger[:SEQuence]:LEVel:RFPower <TriggerLevel>

Defines the power level the RF input must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

The input signal must be between 500 MHz and 8 GHz.

#### Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths, see the data sheet.

\*RST: -20 dBm

Default unit: DBM

**Example:** TRIG:LEV:RFP -30dBm

---

### TRIGger<tp>[:SEQuence]:SLOPe <Type>

Selects the trigger slope.

#### Suffix:

<tp> irrelevant

#### Parameters:

<Type>

##### POSitive

Triggers when the signal rises to the trigger level (rising edge).

##### NEGative

Triggers when the signal drops to the trigger level (falling edge).

\*RST: POSitive

**Example:** //Select trigger slope  
TRIG:SLOP NEG

**Manual operation:** See ["Trigger Slope"](#) on page 54

---

### TRIGger[:SEQuence]:TIME:RINTerval <Interval>

Defines the repetition interval for the time trigger.

#### Parameters:

<Interval> numeric value

Range: 2 ms to 5000 s

\*RST: 1.0 s

Default unit: S

**Example:** TRIG:SOUR TIME  
Selects the time trigger input for triggering.  
TRIG:TIME:RINT 5  
The sweep starts every 5 s.

**Manual operation:** See ["Repetition Interval"](#) on page 53

## 10.4.7 Automatic configuration

Commands for automatic configuration described elsewhere.

- [\[SENSe:\]ADJust:LEVel](#) on page 103

<a href="#">[SENSe:]ADJust:ALL</a> .....	111
<a href="#">[SENSe:]ADJust:CONFigure:LEVel:DURation</a> .....	111
<a href="#">[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE</a> .....	112
<a href="#">[SENSe:]ADJust:CONFigure:HYSteresis:LOWer</a> .....	112
<a href="#">[SENSe:]ADJust:CONFigure:HYSteresis:UPPer</a> .....	112
<a href="#">[SENSe:]ADJust:CONFigure:TRIGger</a> .....	113
<a href="#">[SENSe:]ADJust:FREQuency</a> .....	113
<a href="#">[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTinuous]</a> .....	114

---

### **[SENSe:]ADJust:ALL**

Initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Center frequency
- Reference level
- Scaling

**Example:** `ADJ:ALL`

**Manual operation:** See ["Adjusting all Determinable Settings Automatically \(Auto All\)"](#) on page 73

---

### **[SENSe:]ADJust:CONFigure:LEVel:DURation <Duration>**

To determine the ideal reference level, the R&S EPL1000 performs a measurement on the current input data. This command defines the length of the measurement if [\[SENSe:\]ADJust:CONFigure:LEVel:DURation:MODE](#) is set to `MANual`.

**Parameters:**

<Duration>                      Numeric value in seconds  
 Range:                      0.001 to 16000.0  
 \*RST:                      0.001  
 Default unit: s

**Example:** `ADJ:CONF:DUR:MODE MAN`  
 Selects manual definition of the measurement length.  
`ADJ:CONF:LEV:DUR 5ms`  
 Length of the measurement is 5 ms.

**Manual operation:** See ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 74

**[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE <Mode>**

To determine the ideal reference level, the R&S EPL1000 performs a measurement on the current input data. This command selects the way the R&S EPL1000 determines the length of the measurement .

**Parameters:**

&lt;Mode&gt;

**AUTO**

The R&S EPL1000 determines the measurement length automatically according to the current input data.

**MANual**

The R&S EPL1000 uses the measurement length defined by [\[SENSe:\]ADJust:CONFigure:LEVel:DURation](#) on page 111.

\*RST: AUTO

**Manual operation:** See "[Resetting the Automatic Measurement Time \(Meas Time Auto\)](#)" on page 74

**[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>**

When the reference level is adjusted automatically using the [\[SENSe:\]ADJust:LEVel](#) on page 103 command, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

**Parameters:**

&lt;Threshold&gt;

Range: 0 dB to 200 dB

\*RST: +1 dB

Default unit: dB

**Example:**

SENS:ADJ:CONF:HYST:LOW 2

For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level falls below 18 dBm.

**Manual operation:** See "[Lower Level Hysteresis](#)" on page 75

**[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer <Threshold>**

When the reference level is adjusted automatically using the [\[SENSe:\]ADJust:LEVel](#) on page 103 command, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.



**Parameters:**

<Threshold>            Range:     0 dB to 200 dB  
                              \*RST:     +1 dB  
                              Default unit: dB

**Example:**                SENS:ADJ:CONF:HYST:UPP 2

**Example:**                For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level rises above 22 dBm.

**Manual operation:**    See "[Upper Level Hysteresis](#)" on page 75

**[SENSe:]ADJust:CONFigure:TRIGger <State>**

Defines the behavior of a triggered measurement when adjusting a setting automatically (using SENS:ADJ:LEV ON, for example).

**Parameters:**

<State>                    ON | OFF | 0 | 1  
                              **OFF | 0**  
                              (default:) The measurement for adjustment waits for the next trigger.  
                              **ON | 1**  
                              The measurement for adjustment is performed without waiting for a trigger (corresponds to "Continue" in manual operation).  
                              \*RST:            0

**Example:**                //Use default ref level at 0.00 dBm.  
                              //Define an RF power trigger at -20 dBm  
                              :TRIG:SEQ:SOUR RFP  
                              :TRIG:SEQ:LEV:RFP -20  
                              //Perform adjustment measurement without waiting for trigger  
                              SENS:ADJ:CONF:TRIG ON  
                              //Perform auto level adjustment  
                              :SENS:ADJ:LEV;\*WAI

**[SENSe:]ADJust:FREQuency**

Sets the center frequency to the frequency with the highest signal level in the current frequency range.

**Example:**                ADJ:FREQ

**Manual operation:**    See "[Adjusting the Center Frequency Automatically \(Auto Frequency\)](#)" on page 74

**[SENSe:]ADJ:SCALe[:Y]:AUTO[:CONTinuous] <State>**

Activates automatic scaling of the y-axis in all diagrams according to the current measurement results. Currently auto-scaling is only available for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

**Parameters:**

<State>                    ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:**                    SENS:ADJ:SCAL:Y:AUTO ON

**Manual operation:**    See "AF Auto Scale" on page 68

## 10.4.8 Data acquisition

ABORT.....	114
INITiate<n>:CONMeas.....	115
INITiate<n>:CONTinuous.....	115
INITiate:SEQuencer:ABORT.....	116
INITiate:SEQuencer:IMMediate.....	116
INITiate:SEQuencer:MODE.....	116
INITiate<n>[:IMMediate].....	117
[SENSe:]ADEMod:MTIME.....	118
[SENSe:]ADEMod:RENgth.....	118
[SENSe:]ADEMod:SET.....	118
[SENSe:]ADEMod:SPECtrum:BWIDth[:RESolution].....	119
[SENSe:]ADEMod:SRATe.....	119
[SENSe:]AVERAge<n>:COUNT.....	119
[SENSe:]BWIDth:DEMod.....	120
[SENSe:]BWIDth:DEMod:TYPE.....	120
[SENSe:]BANDwidth[:RESolution].....	120
[SENSe:]SWEep:COUNT.....	121
[SENSe:]SWEep[:WINDow<n>]:POINTs.....	121
SYSTem:SEQuencer.....	121

**ABORT**

This command aborts the measurement in the current measurement channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the \*OPC or \*WAI command after ABORT and before the next command.

For details, see the "Remote Basics" chapter in the R&S EPL1000 User Manual.

To abort a sequence of measurements by the Sequencer, use the `INITiate:SEQuencer:ABORt` command.

**Note on blocked remote control programs:**

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish. The remote channel to the R&S EPL1000 is blocked for further commands. In this case, you must interrupt processing on the remote channel first to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S EPL1000 on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** `viClear()`
- **GPIB:** `ibclr()`
- **RSIB:** `RSDLLibclr()`

Now you can send the `ABORt` command on the remote channel that runs the measurement.

**Example:** `ABOR; INIT: IMM`  
Aborts the measurement and restarts it.

**Usage:** Event

### INITiate<n>:CONMeas

Restarts a (single) measurement that has been stopped (using `ABORt`) or finished in single sweep mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

**Suffix:**  
<n> irrelevant

**Usage:** Asynchronous command

**Manual operation:** See "[Continue Single Sweep](#)" on page 56

### INITiate<n>:CONTInuous <State>

Controls the sweep mode for an individual channel setup.

Note that in single sweep mode, you can synchronize to the end of the measurement with `*OPC`, `*OPC?` or `*WAI`. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

For details on synchronization see [Remote control via SCPI](#).

**Suffix:**

<n> irrelevant

**Parameters:**

<State> ON | OFF | 0 | 1  
**ON | 1**  
 Continuous sweep  
**OFF | 0**  
 Single sweep  
 \*RST: 0

**Example:**

```
INIT:CONT OFF
Switches the sweep mode to single sweep.
INIT:CONT ON
Switches the sweep mode to continuous sweep.
```

**Manual operation:** See "[Continuous Sweep / Run Cont](#)" on page 56

**INITiate:SEQuencer:ABORt**

Stops the currently active sequence of measurements.

You can start a new sequence any time using [INITiate:SEQuencer:IMMediate](#) on page 116.

**Usage:** Event

**INITiate:SEQuencer:IMMediate**

Starts a new sequence of measurements by the Sequencer.

Before this command can be executed, the Sequencer must be activated (see [SYSTem:SEQuencer](#) on page 121).

**Example:**

```
SYST:SEQ ON
Activates the Sequencer.
INIT:SEQ:MODE SING
Sets single sequence mode so each active measurement is performed once.
INIT:SEQ:IMM
Starts the sequential measurements.
```

**INITiate:SEQuencer:MODE <Mode>**

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

**Note:** To synchronize to the end of a measurement sequence using \*OPC, \*OPC? or \*WAI, use `SINGLE` Sequencer mode.

**Parameters:**

<Mode>

**SINGLE**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

**CONTInuous**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

\*RST:       CONTInuous

---

**INITiate<n>[:IMMediate]**

The command initiates a new sweep.

For a single sweep, the R&S EPL1000 stops measuring when it has reached the end frequency. When you start a continuous measurement, it stops only if you abort it deliberately.

If you are using trace modes MAXHold, MINHold and AVERage, previous results are reset when you restart the measurement.

- **Single measurements**

Synchronization to the end of the measurement is possible with \*OPC, \*OPC? or \*WAI.

- **Continuous measurements**

Synchronization to the end of the measurement is not possible.

It is thus recommended to use a single measurement for remote controlled measurements, because results like trace data or markers are only valid after synchronization.

**Suffix:**

<mt>

INITiate1 initiates a bargraph measurement.  
INITiate2 initiates a scan.

**Example:**

```
//Start a single scan (with a scan count = 20), and wait until the
measurement is done
INIT2:CONT OFF
SWE:COUN 20
INIT2;*WAI
```

**Usage:**

Event

**Manual operation:**

See "[Continuous Sweep / Run Cont](#)" on page 56

**[SENSe:]ADEMod:MTIME <Time>**

Defines the measurement time for Analog Modulation Analysis.

**Parameters:**

<Time> \*RST: 62.5us  
Default unit: S

**Example:** ADEM:MTIM 62.5us  
Sets the measurement time to 62.5 µs.

**Manual operation:** See "[Measurement Time \(AQT\)](#)" on page 55

**[SENSe:]ADEMod:RLENGth****[SENSe:]ADEMod:SET <SampleRate>, <RecordLength>, <TriggerSource>, <TriggerSlope>, <OffsetSamples>, <NoOfMeas>**

Configures the analog demodulator of the instrument.

**Parameters:**

<SampleRate>	<p><b>numeric value</b> The frequency at which measurement values are taken from the A/D-converter and stored in I/Q memory. *RST: 8 MHz Default unit: HZ</p>
<RecordLength>	<p>Number of samples to be stored in I/Q memory. Range: 1 to 400001 with AF filter or AF trigger active, 1 to 480001 with both AF filter and AF trigger deactive *RST: 501)</p>
<TriggerSource>	<p><b>Note:</b> After selecting IF Power, the trigger threshold can be set with the <a href="#">TRIGger[:SEquence]:LEVel:IFPower</a> command. *RST: IMMEDIATE</p>
<TriggerSlope>	<p>POSitive   NEGative Used slope of the trigger signal. The value indicated here will be ignored for &lt;trigger source&gt; = IMMEDIATE. *RST: POSitive</p>
<OffsetSamples>	<p>Number of samples to be used as an offset to the trigger signal. The value indicated here is ignored for &lt;trigger source&gt; = "IMMEDIATE". *RST: 0</p>

<NoOfMeas> Number of repetitions of the measurement to be executed. The value indicated here is especially necessary for the average/maxhold/minhold function.

Range: 0 to 32767

\*RST: 0

**Example:**

ADEM:SET 8MHz,32000,EXT,POS,-500,30

Performs a measurement at:

sample rate = 8 MHz

record length = 32000

trigger source = EXternal

trigger slope = POSitive

offset samples = -500 (500 samples before trigger occurred)

# of meas = 30

**[SENSe:]ADEMod:SPECTrum:BWIDth[:RESolution] <Bandwidth>**

Defines the resolution bandwidth for data acquisition.

From the specified RBW and the demodulation span set by [SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum] on page 130 or [SENSe:]BWIDth:DEMod on page 120, the required measurement time is calculated. If the available measurement time is not sufficient for the given bandwidth, the measurement time is set to its maximum and the resolution bandwidth is increased to the resulting bandwidth.

Is identical to SENS:BAND:RES, see the R&S EPL1000 User Manual.

**Parameters:**

<Bandwidth> refer to data sheet

\*RST: 61.2 kHz

Default unit: HZ

**Example:**

ADEM:SPEC:BAND 61.2kHz

Sets the resolution bandwidth to 61.2 kHz.

**[SENSe:]ADEMod:SRATe**

**[SENSe:]AVERage<n>:COUNT <AverageCount>**

Defines the number of sweeps that the application uses to average traces.

In case of continuous sweep mode, the application calculates the moving average over the average count.

In case of single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

**Suffix:**

<n> irrelevant

**Parameters:**

<AverageCount> If you set an average count of 0 or 1, the application performs one single sweep in single sweep mode.  
In continuous sweep mode, if the average count is set to 0, a moving average over 10 sweeps is performed.

Range: 0 to 200000  
\*RST: 0

**[SENSe:]BWIDth:DEMod <Bandwidth>**

Sets the bandwidth for Analog Modulation Analysis. Depending on the selected demodulation bandwidth, the instrument selects the required sample rate.

Is identical to `SENS:ADEM:BAND:DEM`.

**Parameters:**

<Bandwidth> \*RST: 5 MHz  
Default unit: HZ

**Example:**

`BAND:DEM 1MHz`  
Sets demodulation bandwidth to 1 MHz

**Manual operation:** See "[Demodulation Bandwidth](#)" on page 54

**[SENSe:]BWIDth:DEMod:TYPE <FilterType>**

Defines the type of demodulation filter to be used.

Is identical to `SENS:ADEM:BAND:DEM:TYPE`:

**Parameters:**

<FilterType> **FLAT**  
Standard flat demodulation filter

**GAUSS**  
Gaussian filter for optimized settling behavior

\*RST: FLAT

**Manual operation:** See "[Demodulation Filter](#)" on page 55

**[SENSe:]BANDwidth[:RESolution] <Bandwidth>**

Defines the resolution bandwidth and decouples the resolution bandwidth from the span.

For statistics measurements, this command defines the **demodulation** bandwidth.

**Parameters:**

<Bandwidth> refer to data sheet

\*RST: RBW: AUTO is set to ON; DBW: 3MHz  
Default unit: Hz



**Example:** BAND 1 MHz  
Sets the resolution bandwidth to 1 MHz

**Manual operation:** See ["Resolution Bandwidth"](#) on page 55

**[SENSe:]SWEep:COUNT <SweepCount>**

Defines the number of sweeps that the application uses to average traces.

In continuous sweep mode, the application calculates the moving average over the average count.

In single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

**Parameters:**

<SweepCount> When you set a sweep count of 0 or 1, the R&S EPL1000 performs one single sweep in single sweep mode.  
In continuous sweep mode, if the sweep count is set to 0, a moving average over 10 sweeps is performed.  
Range: 0 to 200000  
\*RST: 0

**Example:** SWE:COUN 64  
Sets the number of sweeps to 64.  
INIT:CONT OFF  
Switches to single sweep mode.  
INIT;\*WAI  
Starts a sweep and waits for its end.

**Manual operation:** See ["Sweep/Average Count"](#) on page 57

**[SENSe:]SWEep[:WINDow<n>]:POINTs <SweepPoints>**

This command defines the number of sweep points to analyze after a sweep.

**Suffix:**

<n>

**Parameters:**

<SweepPoints> Range: 101 to 100001  
\*RST: 1001

**Example:** SWE:POIN 251

**Manual operation:** See ["Sweep Points"](#) on page 57

**SYSTem:SEQuencer <State>**

Turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (INIT:SEQ. . .) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S EPL1000 User Manual.

**Parameters:**

<State> ON | OFF | 0 | 1

**ON | 1**

The Sequencer is activated and a sequential measurement is started immediately.

**OFF | 0**

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (INIT:SEQ...) are not available.

\*RST: 0

**Example:**

SYST:SEQ ON

Activates the Sequencer.

INIT:SEQ:MODE SING

Sets single Sequencer mode so each active measurement is performed once.

INIT:SEQ:IMM

Starts the sequential measurements.

SYST:SEQ OFF

## 10.4.9 Demodulation settings

- [Basic demodulation settings](#)..... 122
- [Time domain zoom settings](#)..... 124
- [Demodulation spectrum configuration](#)..... 126
- [AF filters \(post-processing\)](#)..... 130
- [AF evaluation scaling](#)..... 136
- [RF evaluation scale](#)..... 136
- [Units](#)..... 138
- [Relative demodulation results](#)..... 138

### 10.4.9.1 Basic demodulation settings

Commands to configure the demodulation described elsewhere.

- [Chapter 10.4.9.2, "Time domain zoom settings"](#), on page 124

[SENSe:]ADEMod<n>:AF:COUPling..... 122

[SENSe:]ADEMod:PM:RPOint[:X]..... 123

[SENSe:]ADEMod:SQUelch[:STATe]..... 123

[SENSe:]ADEMod:SQUelch:LEVel..... 123

CALCulate<n>:FORMat..... 124

---

**[SENSe:]ADEMod<n>:AF:COUPling <Coupling>**

Selects the coupling of the AF path of the analyzer in the specified window.

<b>Suffix:</b>	
<n>	irrelevant
<b>Parameters:</b>	
<Coupling>	AC   DC
*RST:	AC (PM); DC (FM)
<b>Example:</b>	ADEM:AF:COUP DC Switches on DC coupling.
<b>Manual operation:</b>	See " <a href="#">AF Coupling</a> " on page 58

#### [SENSe:]ADEMod:PM:RPOint[:X] <Time>

Determines the position where the phase of the PM-demodulated signal is set to 0 rad. The maximum value depends on the measurement time selected in the instrument; this value is output in response to the query ADEM:PM:RPO:X? MAX.

<b>Parameters:</b>	
<Time>	0 s to measurement time
*RST:	0 s
	Default unit: S

<b>Example:</b>	ADEM:PM:RPO 500us Sets the position where the phase to 0 rad setting to 500 µs.
-----------------	------------------------------------------------------------------------------------

#### [SENSe:]ADEMod:SQUelch[:STATe] <State>

Activates the squelch function, i.e. if the signal falls below a defined threshold (see [\[SENSe:\]ADEMod:SQUelch:LEVel](#) on page 123), the demodulated data is automatically set to 0.

<b>Parameters:</b>	
<State>	ON   OFF   0   1
	<b>OFF   0</b> Switches the function off
	<b>ON   1</b> Switches the function on

<b>Example:</b>	DEM:SQU ON Signals below the level threshold are squelched.
-----------------	----------------------------------------------------------------

**Manual operation:** See "[Squelch State](#)" on page 58

#### [SENSe:]ADEMod:SQUelch:LEVel <Threshold>

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled (see [\[SENSe:\]ADEMod:SQUelch\[:STATe\]](#) on page 123).

**Parameters:**

<Threshold> numeric value  
 The absolute threshold level  
 Range: -150 dBm to 30 dBm  
 \*RST: -40 dBm

**Example:**

DEM:SQU:LEV -80  
 If the signal drops below -80 dBm, the demodulated data is set to 0.

**Manual operation:** See "[Squelch Level](#)" on page 58

**CALCulate<n>:FORMat <Evaluation>**

This command activates/deactivates the phase wrap for the specified PM time domain display with DC coupling.

**Suffix:**

<n> 1..n

**Parameters:**

<Evaluation> **PHAS**  
 The phase is wrapped.  
**UPH**  
 The phase is not wrapped.  
 \*RST: UPH

**Example:**

LAY:ADD? '1',BEL,'XTIM:PM'  
 Activates PM time domain display. Result: window '2'  
 INP:COUP DC  
 Selects DC coupling.  
 CALC2:FORM PHAS  
 Selects a wrapped phase display in the PM time domain window.

**Manual operation:** See "[Phase Wrap On/Off \(PM Time Domain only\)](#)" on page 60

**10.4.9.2 Time domain zoom settings**

[SENSe:]ADEMod<n>:ZOOM:LENGth.....	124
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE.....	125
[SENSe:]ADEMod<n>:ZOOM:START.....	125
[SENSe:]ADEMod<n>:ZOOM[:STATe].....	126

**[SENSe:]ADEMod<n>:ZOOM:LENGth <Length>**

The command allows you to define the length of the time domain zoom area for the analog-demodulated measurement data in the specified window manually. If the length is defined manually using this command, the zoom mode is also set to manual.

**Suffix:**<n> [Window](#)**Parameters:**

<Length> \*RST: sweep time  
 Default unit: S  
 Length of the zoom area in seconds.

**Example:**

ADEM:ZOOM:LENG 2s  
 Zoom mode is set to manual and the zoom length to 2 seconds.

**Manual operation:** See "[Length](#)" on page 60

**[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE <Mode>**

The command defines whether the length of the zoom area for the analog-demodulated measurement data is defined automatically or manually in the specified window.

**Suffix:**<n> [Window](#)**Parameters:**

<Mode> AUTO | MAN  
**AUTO**  
 (Default:) The number of sweep points is used as the zoom length.  
**MAN**  
 The zoom length is defined manually using [\[SENSe:\]ADEMod<n>:ZOOM:LENGth](#).  
 \*RST: AUTO

**Example:**

ADEM:ZOOM:LENG:MODE MAN  
 Zoom function uses the length defined manually.

**Manual operation:** See "[Length](#)" on page 60

**[SENSe:]ADEMod<n>:ZOOM:STARt <Time>**

The command selects the start time for the zoomed display of analog-demodulated measurements in the specified window. The maximum value depends on the measurement time, which is set and can be queried with the [\[SENSe:\]ADEMod:MTIME](#) command.

If the zoom function is enabled, the defined number of sweep points are displayed from the start time specified with this command.

**Suffix:**<n> [Window](#)**Parameters:**

<Time> Range: 0 s to (measurement time – zoom length)  
 \*RST: 0 s  
 Default unit: S

**Example:**           ADEM:ZOOM:STAT ON  
                           Switches on the zoom function  
                           ADEM:ZOOM:STAR 500us  
                           Sets the starting point of the display to 500 µs.

**Manual operation:** See "[Start](#)" on page 59

#### [SENSe:]ADEMod<n>:ZOOM[:STATe] <State>

The command enables or disables the time domain zoom function for the analog-demodulated measurement data in the specified window.

If the zoom function is enabled, the defined number of sweep points are displayed from the start time specified with [[SENSe:](#)]ADEMod<n>:ZOOM:STARt on page 125.

If the zoom function is disabled, data reduction is used to adapt the measurement points to the number of points available on the display.

#### Suffix:

<n>                    [Window](#)

#### Parameters:

<State>              ON | OFF | 0 | 1  
                           **OFF | 0**  
                           Switches the function off  
                           **ON | 1**  
                           Switches the function on

**Example:**           ADEM:ZOOM ON  
                           Switches on the zoom function

**Manual operation:** See "[State](#)" on page 59

### 10.4.9.3 Demodulation spectrum configuration

- [AF evaluation](#)..... 126
- [RF evaluation](#)..... 129

#### AF evaluation

These settings are only available for AF Spectrum evaluations, not in the time domain.

<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:PDIVision</a> .....	127
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:RPOSition</a> .....	127
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y:SPACing</a> .....	128
<a href="#">[SENSe:]ADEMod:AF:CENTer</a> .....	128
<a href="#">[SENSe:]ADEMod:AF:SPAN</a> .....	128
<a href="#">[SENSe:]ADEMod:AF:SPAN:FULL</a> .....	129
<a href="#">[SENSe:]ADEMod:AF:STARt</a> .....	129
<a href="#">[SENSe:]ADEMod:AF:STOP</a> .....	129

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision**  
<Value>

This remote command determines the grid spacing on the Y-axis for all diagrams, where possible.

In spectrum displays, for example, this command is not available.

**Suffix:**

<n>	Window
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters:**

<Value>	numeric value WITHOUT UNIT (unit according to the result display) Defines the range per division (total range = 10*<Value>) *RST: depends on the result display Default unit: DBM
---------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Example:** `DISP:TRAC:Y:PDIV 10`  
Sets the grid spacing to 10 units (e.g. dB) per division

**Manual operation:** See "[Dev per Division/ dB per Division](#)" on page 66

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition**  
<Position>

Defines the vertical position of the reference level on the display grid (for all traces).

The R&S EPL1000 adjusts the scaling of the y-axis accordingly.

**Suffix:**

<n>	Window
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters:**

<Position>	0 PCT corresponds to the lower display border, 100 percent corresponds to the upper display border. *RST: frequency display: 90 PCT; time display: 50 PCT; AF spectrum display (K7): 100 PCT; Default unit: PCT
------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Example:** `DISP:TRAC:Y:RPOS 50PCT`

**Manual operation:** See "[Reference Value Position](#)" on page 67

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing <ScalingType>**

Selects the scaling of the y-axis (for all traces, <t> is irrelevant).

For AF spectrum displays, only the parameters "LINear" and "LOGarithmic" are permitted.

**Suffix:**

<n> [Window](#)

<w> subwindow

<t> [Trace](#)

**Parameters:**

<ScalingType> **LOGarithmic**  
Logarithmic scaling.

**LINear**  
Linear scaling in %.

**LDB**  
Linear scaling in the specified unit.

**PERCent**  
Linear scaling in %.

\*RST: LOGarithmic

**Example:** `DISP:TRAC:Y:SPAC LIN`  
Selects linear scaling in %.

**Manual operation:** See "[Deviation](#)" on page 68

---

**[SENSe:]ADEMod:AF:CENTer <Frequency>**

Sets the center frequency for AF spectrum result display.

**Parameters:**

<Frequency> \*RST: 1.25 MHz  
Default unit: HZ

**Manual operation:** See "[AF Center](#)" on page 61

---

**[SENSe:]ADEMod:AF:SPAN <Span>**

Sets the span (around the center frequency) for AF spectrum result display.

The span is limited to DBW/2 (see [\[SENSe:\]BWIDth:DEMod](#) on page 120).

**Parameters:**

<Span> \*RST: 9 MHz  
Default unit: HZ

**Example:** `ADEM:AF:SPAN 200 kHz`  
Sets the AF span to 200 kHz

**Manual operation:** See "[AF Span](#)" on page 61



**[SENSe:]ADEMod:AF:SPAN:FULL**

Sets the maximum span for AF spectrum result display.

The maximum span corresponds to DBW/2 (see [\[SENSe:\]BWiDth:DEMod](#) on page 120).

**Example:**

```
ADEM:BAND 5 MHz
Sets the demodulation bandwidth to 5 MHz
ADEM:AF:SPAN:FULL
Sets the AF span to 2.5 MHz
```

**Manual operation:** See ["AF Full Span"](#) on page 61

**[SENSe:]ADEMod:AF:START <Frequency>**

Sets the start frequency for AF spectrum result display.

**Parameters:**

```
<Frequency> *RST: 0 MHz
Default unit: HZ
```

**Example:**

```
ADEM:AF:STAR 0 kHz
Sets the AF start frequency to 0 kHz
ADEM:AF:STOP 500 kHz
Sets the AF stop frequency to 500 kHz
```

**Manual operation:** See ["AF Start"](#) on page 61

**[SENSe:]ADEMod:AF:STOP <Frequency>**

Sets the stop frequency for AF spectrum result display.

**Parameters:**

```
<Frequency> *RST: 9 MHz
Default unit: HZ
```

**Example:**

```
ADEM:AF:STAR 0 kHz
Sets the AF start frequency to 0 kHz
ADEM:AF:STOP 500 kHz
Sets the AF stop frequency to 500 kHz
```

**Manual operation:** See ["AF Stop"](#) on page 61

**RF evaluation**

These settings are only available for RF evaluation, both in time and frequency domain.

Commands to configure the RF evaluation described elsewhere.

- [\[SENSe:\]FREQuency:CENTer](#) on page 104

- [SENSe:]BWIDth:DEMod on page 120

[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM.....	130
[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum].....	130

---

#### [SENSe:]ADEMod:SPECTrum:SPAN:ZOOM <Span>

Sets the span (around the center frequency) for RF spectrum result display.

The span is limited to the demodulation bandwidth (see [SENSe:]BWIDth:DEMod on page 120).

##### Parameters:

<Span>                    \*RST:        5 MHz  
                               Default unit: HZ

**Example:**                ADEM:SPEC:SPAN:ZOOM 200 kHz  
                               Sets the rF span to 200 kHz

**Manual operation:**    See "Span" on page 62

---

#### [SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum] <FreqRange>

Sets the DBW to the specified value and the span (around the center frequency) of the RF data to be evaluated to its new maximum (the demodulation bandwidth).

##### Parameters:

<FreqRange>            \*RST:        5 MHz  
                               Default unit: Hz

**Manual operation:**    See "Span" on page 62

### 10.4.9.4 AF filters (post-processing)

The AF filter reduces the evaluated bandwidth of the demodulated signal and can define a weighting function. AF filters are only available for AM or FM time domain evaluations.

[SENSe:]FILTer<n>:AWEighted[:STATE].....	131
[SENSe:]FILTer<n>:AOFF.....	131
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATE].....	131
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATE].....	131
[SENSe:]FILTer<n>:CCIT[:STATE].....	132
[SENSe:]FILTer<n>:DEMPHasis:TCONstant.....	132
[SENSe:]FILTer<n>:DEMPHasis[:STATE].....	132
[SENSe:]FILTer<n>:HPASs:FREQuency[:ABSolute].....	133
[SENSe:]FILTer<n>:HPASs:FREQuency:MANual.....	133
[SENSe:]FILTer<n>:HPASs[:STATE].....	134
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute].....	134
[SENSe:]FILTer<n>:LPASs:FREQuency:MANual.....	134
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative.....	135
[SENSe:]FILTer<n>:LPASs[:STATE].....	135

---

**[SENSe:]FILTer<n>:AWEighted[:STATe] <State>**

Activates/deactivates the "A" weighting filter for the specified evaluation.

For details on weighting filters, see ["Weighting"](#) on page 64.

**Suffix:**

<n> [Window](#)

**Parameters:**

<State> ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

FILT:AWE ON

Activates the A weighting filter.

**Manual operation:** See ["Weighting"](#) on page 64

---

**[SENSe:]FILTer<n>:AOFF**

**Suffix:**

<n> 1..n

**Manual operation:** See ["Deactivating all AF Filters"](#) on page 65

---

**[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe] <State>**

Activates/deactivates the weighted CCIR filter for the specified evaluation.

For details on weighting filters, see ["Weighting"](#) on page 64.

**Suffix:**

<n> [Window](#)

**Parameters:**

<State> ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

FILT:CCIR:WEIG ON

Activates the weighted CCIR filter.

**Manual operation:** See ["Weighting"](#) on page 64

---

**[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe] <State>**

Activates/deactivates the unweighted CCIR filter in the specified window.

For details on weighting filters, see ["Weighting"](#) on page 64.

**Suffix:**<n> [Window](#)**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:**

FILT:CCIR:UNW ON  
 Activates the unweighted CCIR filter.

**Manual operation:** See "[Weighting](#)" on page 64

[SENSe:]FILTer<n>:CCITt[:STATe] <State>

**Suffix:**

&lt;n&gt; 1..n

**Parameters:**

&lt;State&gt;

**Manual operation:** See "[Weighting](#)" on page 64

[SENSe:]FILTer<n>:DEMPHasis:TCONstant <Value>

Selects the deemphasis for the specified evaluation.

For details on deemphasis refer to "[Deemphasis](#)" on page 65.

**Suffix:**<n> [Window](#)**Parameters:**

<Value> 25 us | 50 us | 75 us | 750 us  
 \*RST: 50 us  
 Default unit: S

**Example:**

FILT:DEMP:TCON 750us  
 Selects the deemphasis for the demodulation bandwidth range from 800 Hz to 4 MHz with a time constant of 750 µs.

**Manual operation:** See "[Deemphasis](#)" on page 65

[SENSe:]FILTer<n>:DEMPHasis[:STATe] <State>

Activates/deactivates the selected deemphasis for the specified evaluation.

For details about deemphasis refer to "[Deemphasis](#)" on page 65.

**Suffix:**<n> [Window](#)**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:**

FILT:DEMP ON  
 Activates the selected deemphasis.

**Manual operation:** See "[Deemphasis](#)" on page 65

**[SENSe:]FILTer<n>:HPASs:FREQuency[:ABSolute]** <Frequency>

Selects the high pass filter type for the specified evaluation.

For details on the high pass filters, refer to "[High Pass](#)" on page 63.

**Suffix:**<n> [Window](#)**Parameters:**

<Frequency> 20 Hz | 50 Hz | 300 Hz  
 \*RST: 300Hz  
 Default unit: Hz

**Example:**

FILT:HPAS:FREQ 300Hz  
 Selects the high pass filter for the demodulation bandwidth range from 800 Hz to 8 MHz.

**Manual operation:** See "[High Pass](#)" on page 63

**[SENSe:]FILTer<n>:HPASs:FREQuency:MANual** <Frequency>

Selects the cutoff frequency of the high pass filter for the specified evaluation.

For details on the high pass filters, refer to "[High Pass](#)" on page 63.

**Suffix:**<n> [Window](#)**Parameters:**

<Frequency> numeric value  
 Range: 0 to 3 MHz  
 \*RST: 15kHz  
 Default unit: HZ

**Example:**

FILT:HPAS:FREQ:MAN 3MHz  
 The AF results are restricted to frequencies lower than 3 MHz.

**Manual operation:** See "[High Pass](#)" on page 63

---

**[SENSe:]FILTer<n>:HPASs[:STATe] <State>**

Activates/deactivates the selected high pass filter for the specified evaluation.

For details on the high pass filter, refer to "High Pass" on page 63.

**Suffix:**

<n> [Window](#)

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:** `FILT:HPAS ON`  
 Activates the selected high pass filter.

**Manual operation:** See "High Pass" on page 63

---

**[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute] <Frequency>**

Selects the absolute low pass filter type for the specified evaluation

For details on the low pass filter, refer to "Low Pass" on page 64.

**Suffix:**

<n> [Window](#)

**Parameters:**

<Frequency> 3kHz | 15kHz | 150kHz  
 \*RST: 15kHz  
 Default unit: HZ

**Example:** `FILT:LPAS:FREQ 150kHz`  
 Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

**Manual operation:** See "Low Pass" on page 64

---

**[SENSe:]FILTer<n>:LPASs:FREQuency:MANual <Frequency>**

Selects the cutoff frequency of the low pass filter for the specified evaluation.

For details on the low pass filter, refer to "Low Pass" on page 64.

**Suffix:**

<n> [Window](#)

**Parameters:**

<Frequency>            numeric value  
 Range:            0 to 3 MHz  
 \*RST:            15kHz  
 Default unit: HZ

**Example:**

`FILT:LPAS:FREQ:MAN 150kHz`

The AF results are restricted to frequencies lower than 150 kHz.

**Manual operation:** See "[Low Pass](#)" on page 64

**[SENSe:]FILTeR<n>:LPASs:FREQuency:RELative** <Frequency>

Selects the relative low pass filter type for the specified evaluation

For details on the low pass filter, refer to "[Low Pass](#)" on page 64.

**Suffix:**

<n>                      [Window](#)

**Parameters:**

<Frequency>            5PCT | 10PCT | 25PCT  
 \*RST:            25PCT  
 Default unit: PCT

**Example:**

`FILT:LPAS:FREQ:REL 25PCT`

Selects the low pass filter as 25 % of the demodulation bandwidth.

**Manual operation:** See "[Low Pass](#)" on page 64

**[SENSe:]FILTeR<n>:LPASs[:STATe]** <State>

Activates/deactivates the selected low pass filter for the specified evaluation.

For details on the low pass filter, refer to "[Low Pass](#)" on page 64.

**Suffix:**

<n>                      [Window](#)

**Parameters:**

<State>                    ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:**

`FILT:LPAS ON`

Activates the selected low pass filter.

**Manual operation:** See "[Low Pass](#)" on page 64

#### 10.4.9.5 AF evaluation scaling

These settings are only available for AF evaluations.

Commands to configure the scale of AF evaluation described elsewhere.

- [SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTinuous] on page 114
- [SENSe:]ADEMod<n>:AF:COUPling on page 122
- DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition on page 127
- DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing on page 128

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue..... 136

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue <Value>**

Defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

**Suffix:**

<n>	Window
<w>	subwindow
<t>	irrelevant

**Parameters:**

<Value> Default unit: DB

**Example:**

DISP:TRAC:Y:RVAL 0

Sets the value assigned to the reference position to 0 Hz

**Manual operation:** See "Reference Value" on page 67

#### 10.4.9.6 RF evaluation scale

These commands are required for RF evaluations and the result summary.

Commands to configure the scale of RF evaluation described elsewhere.

- DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition on page 127
- DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing on page 128
- DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE on page 137

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]..... 137

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE..... 137

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE..... 137



---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe] <Range>**

Defines the display range of the y-axis (for all traces).

**Suffix:**

<n>	<a href="#">Window</a>
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters:**

<Range>	If the y-axis shows the power, the unit is dB with a range from 10 dB to 200 dB. If the y-axis shows the frequency, the unit is Hz with a variable range.  *RST: 100 dB (frequency domain), 500 kHz (time domain)
---------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Example:** DISP:TRAC:Y 110dB

**Manual operation:** See "[Range](#)" on page 69

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE**

Automatic scaling of the y-axis is performed once, then switched off again (for all traces).

**Suffix:**

<n>	<a href="#">Window</a>
<t>	irrelevant

**Manual operation:** See "[Auto Scale Once](#)" on page 69

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE <Mode>**

Selects the type of scaling of the y-axis (for all traces).

When the display update during remote control is off, this command has no immediate effect.

**Suffix:**

<n>	<a href="#">Window</a>
<w>	subwindow
<t>	irrelevant

**Parameters:**

<Mode>	<b>ABSolute</b> absolute scaling of the y-axis  <b>RELative</b> relative scaling of the y-axis  *RST: ABSolute
--------	----------------------------------------------------------------------------------------------------------------------------------

**Example:** DISP:TRAC:Y:MODE REL

**Manual operation:** See "Scaling" on page 69

#### 10.4.9.7 Units

UNIT<n>:ANGLE.....	138
UNIT<n>:THD.....	138

---

##### UNIT<n>:ANGLE <Unit>

Selects the unit for angles (for PM display, <n> is irrelevant).

Is identical to CALC:UNIT:ANGL

**Suffix:**

<n> [Window](#)

**Parameters:**

<Unit> DEG | RAD  
\*RST: RAD

**Example:** UNIT:ANGL DEG

**Manual operation:** See "Phase Unit (Rad/Deg)" on page 70

---

##### UNIT<n>:THD <Mode>

Selects the unit for THD measurements (<n> is irrelevant).

Is identical to CALC:UNIT:THD

**Suffix:**

<n> [Window](#)

**Parameters:**

<Mode> DB | PCT  
\*RST: DB

**Example:** UNIT:THD PCT

**Manual operation:** See "THD Unit (%/ DB)" on page 70

#### 10.4.9.8 Relative demodulation results

CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>.....	140
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>.....	140

<a href="#">CONFigure:ADEMod:RESults:PM:DETEctor&lt;det&gt;:REFerence:MEASStoref&lt;t&gt;</a> .....	140
<a href="#">CONFigure:ADEMod:RESults:AM:DETEctor&lt;det&gt;:MODE</a> .....	140
<a href="#">CONFigure:ADEMod:RESults:FM:DETEctor&lt;det&gt;:MODE</a> .....	140
<a href="#">CONFigure:ADEMod:RESults:PM:DETEctor&lt;det&gt;:MODE</a> .....	140
<a href="#">CONFigure:ADEMod:RESults:UNIT</a> .....	141

---

**CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence** <RefValue>

**CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence** <RefValue>

**CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence** <RefValue>

Defines the reference value to be used for relative demodulation results and recalculates the results. If necessary, the detector is activated.

A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

**Suffix:**

<det>                      Detector function used for relative demodulation

**Parameters:**

<RefValue>                double value

The unit depends on the demodulation type:

ACV: V

AM: %

FM: Hz

PM: depends on [UNIT<n>:ANGLE](#) setting

\*RST:            1.0

Default unit: RAD

**Example:**                See [CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 139

**Manual operation:**    See "[Reference Value](#)" on page 72

---

**CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATE** <State>

**CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATE** <State>

**CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATE** <State>

Activates relative demodulation for the selected detector. If activated, the demodulated result is set in relation to the reference value defined by [CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence](#).

**Suffix:**

<det>                      Detector function used for relative demodulation

**Parameters:**

<State>                    ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**

```
CONF:ADEM:RES:PM:DET2:STAT ON
```

Activates relative demodulation for the negative peak detector.

```
CONF:ADEM:RES:UNIT PCT
```

Defines the unit for relative values as percent.

```
CONF:ADEM:RES:PM:DET2:REF 1.415%
```

Sets the reference value for the negative peak detector to 1.415 %.

```
CONF:ADEM:RES:PM:DET2:MODE AVER
```

Sets the negative peak detector to average mode.

```
CONF:ADEM:RES:PM:DET2:REF:MEAS2
```

Sets the reference value for the negative peak detector to the average of the currently calculated value and the previous reference value on trace 2.

**Manual operation:** See ["State"](#) on page 72

```
CONF:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEASStoref<t>
```

```
CONF:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEASStoref<t>
```

```
CONF:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEASStoref<t>
```

Sets the reference value to be used for relative demodulation results to the currently measured value on the specified trace *for all relative detectors*.

If necessary, the detectors are activated.

A reference value 0 would provide infinite results and is thus automatically corrected to 0.1.

**Suffix:**

<det> irrelevant

<t> 1..n  
[Trace](#)

**Example:** See [CONF:ADEMod:RESults:PM:DETEctor<det>:STATE](#) on page 139

**Manual operation:** See ["Meas -> Reference"](#) on page 72

```
CONF:ADEMod:RESults:AM:DETEctor<det>:MODE <Mode>
```

```
CONF:ADEMod:RESults:FM:DETEctor<det>:MODE <Mode>
```

```
CONF:ADEMod:RESults:PM:DETEctor<det>:MODE <Mode>
```

Defines the mode with which the demodulation result is determined.

**Suffix:**

<det> Detector function used for relative demodulation

**Parameters:**

<Mode> **WRITE**

Overwrite mode: the detector value is overwritten by each sweep. This is the default setting.

**AVERage**

The average result is determined over all sweeps.

**MAXHold**

The maximum value is determined over several sweeps and displayed. The R&S EPL1000 saves each result only if the new value is greater than the previous one.

\*RST: WRITe

**Example:** See [CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATe](#) on page 139

**Manual operation:** See ["Mode"](#) on page 71

**CONFigure:ADEMod:RESults:UNIT <Unit>**

Selects the unit for relative demodulation results.

**Parameters:**

<Unit> PCT | DB  
\*RST: PCT

**Example:** CONF:ADEM:RES:AM:DET2:STAT ON  
Activates relative demodulation for the negative peak detector.  
CONF:ADEM:RES:AM:DET2:MODE AVER  
Sets the negative peak detector to average mode.  
CONF:ADEM:RES:UNIT PCT  
Defines the unit for relative values as percent.  
CONF:ADEM:RES:AM:DET2:REF 1.415%  
Sets the reference value for relative results to 1.415 %.

**Manual operation:** See ["Relative Unit"](#) on page 70

## 10.5 Result display configuration

- [General window commands](#)..... 141
- [Screen layout](#)..... 142

### 10.5.1 General window commands

Note that the suffix <n> always refers to the window in the **currently selected measurement channel**.

[DISPlay:FORMat](#)..... 142  
[DISPlay:WINDow<n>:SIZE](#)..... 142

**DISPlay:FORMat** <Format>

Determines which tab is displayed.

**Parameters:**

&lt;Format&gt;

**SPLit**

Displays the MultiView tab with an overview of all active channels

**SINGle**

Displays the measurement channel that was previously focused.

\*RST: SING

**Example:**

```
DISP:FORM SPL
```

**DISPlay[:WINDow<n>]:SIZE** <Size>

Maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the `LAY:SPL` command (see [LAYout:SPLitter](#) on page 145).

**Suffix:**

&lt;n&gt;

Window

**Parameters:**

&lt;Size&gt;

**LARGE**

Maximizes the selected window to full screen. Other windows are still active in the background.

**SMALI**

Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.

\*RST: SMALI

**Example:**

```
DISP:WIND2:SIZE LARG
```

## 10.5.2 Screen layout

The following commands are required to change the evaluation type and rearrange the screen layout for a measurement channel as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected measurement channel.

Note that the suffix <n> always refers to the window in the **currently selected measurement channel**.

<a href="#">LAYout:ADD[:WINDow]?</a> .....	143
<a href="#">LAYout:CATalog[:WINDow]?</a> .....	144
<a href="#">LAYout:IDENtify[:WINDow]?</a> .....	144
<a href="#">LAYout:REMove[:WINDow]</a> .....	145
<a href="#">LAYout:REPLace[:WINDow]</a> .....	145

LAYout:SPliTter.....	145
LAYout:WINDow<n>:ADD?	147
LAYout:WINDow<n>:IDENtify?	147
LAYout:WINDow<n>:REMOve.....	148
LAYout:WINDow<n>:REPLace.....	148

---

### LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

Adds a window to the display in the active channel setup.

Is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

#### Query parameters:

<WindowName>	String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the <code>LAYout:CATalog[:WINDow]?</code> query.
<Direction>	LEFT   RIGHT   ABOVE   BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

#### Return values:

<NewWindowName>	When adding a new window, the command returns its name (by default the same as its number) as a result.
-----------------	---------------------------------------------------------------------------------------------------------

**Example:** `LAY:ADD? '1',BEL,'XTIM:AM:RELative[:TDOMain]'`  
Adds an "AM Time Domain" display below window 1.

**Usage:** Query only

**Manual operation:** See "AM Time Domain" on page 28

*Table 10-4: <WindowType> parameter values for AnalogDemod application*

Parameter value	Window type
MTABLE	"Marker table"
PEAKlist	"Marker peak list"
RSUMmary	"Result summary"
'XTIM:AM'	"RF Time Domain" (= RF power)
'XTIM:AM:RELative'	"AM Time Domain"
'XTIM:AM:RELative:AFSPec-trum'	"AM Spectrum"

Parameter value	Window type
'XTIM:FM'	"FM Time Domain"
'XTIM:FM:AFSPpectrum'	"FM Spectrum"
'XTIM:PM'	"PM Time Domain"
'XTIM:PM:AFSPpectrum'	"PM Spectrum"
'XTIM:SPECTrum'	"RF Spectrum"

---

### LAYout:CATalog[:WINDow]?

Queries the name and index of all active windows in the active channel setup from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName\_1>,<WindowIndex\_1>..<WindowName\_n>,<WindowIndex\_n>

#### Return values:

<WindowName>      string  
Name of the window.  
In the default state, the name of the window is its index.

<WindowIndex>    **numeric value**  
Index of the window.

#### Example:

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

**Usage:**            Query only

---

### LAYout:IDENTify[:WINDow]? <WindowName>

Queries the **index** of a particular display window in the active channel setup.

**Note:** to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENTify?](#) query.

#### Query parameters:

<WindowName>      String containing the name of a window.

#### Return values:

<WindowIndex>    Index number of the window.

#### Example:

LAY:IDEN:WIND? '2'

Queries the index of the result display named '2'.

Response:

2

**Usage:**            Query only



---

**LAYout:REMOve[:WINDow]** <WindowName>

Removes a window from the display in the active channel.

**Setting parameters:**

<WindowName> String containing the name of the window. In the default state, the name of the window is its index.

**Example:** `LAY:REM '2'`  
Removes the result display in the window named '2'.

**Usage:** Setting only

---

**LAYout:REPLace[:WINDow]** <WindowName>, <WindowType>

Replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel setup while keeping its position, index and window name.

To add a new window, use the `LAYout:ADD[:WINDow]?` command.

**Setting parameters:**

<WindowName> String containing the name of the existing window.  
By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel setup, use the `LAYout:CATalog[:WINDow]?` query.

<WindowType> Type of result display you want to use in the existing window.  
See `LAYout:ADD[:WINDow]?` on page 143 for a list of available window types.

**Example:** `LAY:REPL:WIND '1',MTAB`  
Replaces the result display in window 1 with a marker table.

**Usage:** Setting only

---

**LAYout:SPLitter** <Index1>, <Index2>, <Position>

Changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

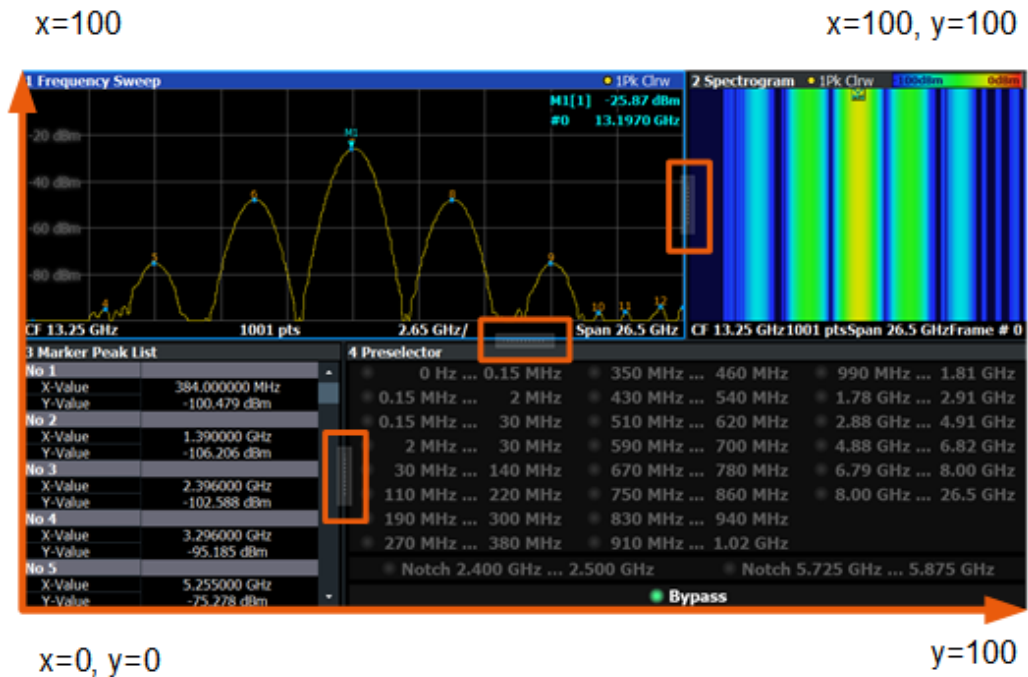


Figure 10-1: SmartGrid coordinates for remote control of the splitters

#### Setting parameters:

- <Index1> The index of one window the splitter controls.
- <Index2> The index of a window on the other side of the splitter.
- <Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).  
The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right corner of the screen. (See Figure 10-1.)  
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.

Range: 0 to 100

#### Example:

LAY:SPL 1,3,50

Moves the splitter between window 1 ("Frequency Sweep") and 3 ("Marker Table") to the center (50%) of the screen, i.e. in the figure above, to the left.

**Example:** `LAY:SPL 1,4,70`  
 Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.  
`LAY:SPL 3,2,70`  
`LAY:SPL 4,1,70`  
`LAY:SPL 2,1,70`

**Usage:** Setting only

### **LAYout:WINDow<n>:ADD? <Direction>,<WindowType>**

Adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

Is always used as a query so that you immediately obtain the name of the new window as a result.

**Suffix:**

<n> [Window](#)

**Query parameters:**

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.  
 See [LAYout:ADD\[:WINDow\]?](#) on page 143 for a list of available window types.

**Return values:**

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

**Example:** `LAY:WIND1:ADD? LEFT,MTAB`

Result:

'2'

Adds a new window named '2' with a marker table to the left of window 1.

**Usage:** Query only

### **LAYout:WINDow<n>:IDENTify?**

Queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel setup.

**Note:** to query the **index** of a particular window, use the [LAYout:IDENTify\[:WINDow\]?](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Return values:</b>	
<WindowName>	String containing the name of a window. In the default state, the name of the window is its index.
<b>Example:</b>	LAY:WIND2:IDEN? Queries the name of the result display in window 2. Response: '2'
<b>Usage:</b>	Query only

---

#### LAYout:WINDow<n>:REMove

Removes the window specified by the suffix <n> from the display in the active channel setup.

The result of this command is identical to the [LAYout:REMove\[:WINDow\]](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Example:</b>	LAY:WIND2:REM Removes the result display in window 2.
<b>Usage:</b>	Event

---

#### LAYout:WINDow<n>:REPLace <WindowType>

Changes the window type of an existing window (specified by the suffix <n>) in the active channel setup.

The effect of this command is identical to the [LAYout:REPLace\[:WINDow\]](#) command.

To add a new window, use the [LAYout:WINDow<n>:ADD?](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Setting parameters:</b>	
<WindowType>	Type of measurement window you want to replace another one with. See <a href="#">LAYout:ADD[:WINDow]?</a> on page 143 for a list of available window types.
<b>Example:</b>	LAY:WIND2:REPL MTAB Replaces the result display in window 2 with a marker table.
<b>Usage:</b>	Setting only

## 10.6 Measurement results

- [Result retrieval](#)..... 149
- [Retrieving result summary values](#)..... 155
- [Trace export](#)..... 159

### 10.6.1 Result retrieval

Commands to retrieve results described elsewhere.

- [\[SENSe:\]ADEMod:PM:RPoint\[:X\]](#) on page 123

<a href="#">[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:FM[:TDOMain][:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:PM[:TDOMain][:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]?</a> .....	149
<a href="#">[SENSe:]ADEMod:SPECtrum[:TYPE]</a> .....	149
<a href="#">[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?</a> .....	150
<a href="#">[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?</a> .....	150
<a href="#">[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?</a> .....	151
<a href="#">[SENSe:]ADEMod:FM[:TDOMain]:RESult?</a> .....	151
<a href="#">[SENSe:]ADEMod:FM:AFSPectrum:RESult?</a> .....	151
<a href="#">[SENSe:]ADEMod:PM[:TDOMain]:RESult?</a> .....	151
<a href="#">[SENSe:]ADEMod:PM:AFSPectrum:RESult?</a> .....	151
<a href="#">[SENSe:]ADEMod:SPECtrum:RESult?</a> .....	151
<a href="#">FORMat[:DATA]</a> .....	152
<a href="#">TRACe&lt;n&gt;[:DATA]</a> .....	153
<a href="#">CALCulate&lt;n&gt;:DELTaMarker&lt;m&gt;:X</a> .....	153
<a href="#">CALCulate&lt;n&gt;:DELTaMarker&lt;m&gt;:Y?</a> .....	153
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:X</a> .....	154
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:Y?</a> .....	154

---

```

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]? <TraceMode>
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]? <TraceMode>
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]? <TraceMode>
[SENSe:]ADEMod:FM[:TDOMain][:TYPE]? <TraceMode>
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]? <TraceMode>
[SENSe:]ADEMod:PM[:TDOMain][:TYPE]? <TraceMode>
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]? <TraceMode>
[SENSe:]ADEMod:SPECtrum[:TYPE] <TraceMode>...

```

Selects the trace modes of the evaluated signal to be measured simultaneously. For each of the six available traces a mode can be defined.

The trace modes are configured identically for all windows with a specific evaluation. The following table indicates which command syntax refers to which evaluation method.

Command syntax	Evaluation method
AM[:ABSolute][:TDOMain]	RF time domain
AM:RELative[:TDOMain]	AM time domain
AM:RELative:AFSPectrum	AM spectrum (relative)
FM[:TDOMain]	FM time domain
FM:AFSPectrum	FM spectrum
PM[:TDOMain]	PM time domain
PM:AFSPectrum	PM spectrum
SPECtrum	RF spectrum

**Parameters:**

&lt;TraceMode&gt;

WRITE | AVERage | MAXHold | MINHold | VIEW | OFF

**WRITE**

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

**AVERage**

The average is formed over several sweeps.

**MAXHold**

The maximum value is determined over several sweeps and displayed. The R&S EPL1000 saves the sweep result in the trace memory only if the new value is greater than the previous one.

**MINHold**

The minimum value is determined from several measurements and displayed. The R&S EPL1000 saves the sweep result in the trace memory only if the new value is lower than the previous one.

**VIEW**

The current contents of the trace memory are frozen and displayed.

**OFF**

Hides the selected trace.

\*RST:       WRITE,OFF,OFF,OFF,OFF,OFF

**Example:**

ADEM:AM AVER,MAXH,MINH,OFF,OFF,OFF

Determines average, max hold and min hold values simultaneously for the traces 1-3 of the RF time domain evaluation.

ADEM:AM WRIT,OFF,OFF,OFF,OFF,OFF

Determines only the current measurement values for trace 1.

ADEM:AM OFF,OFF,OFF,OFF,OFF,OFF

Switches AM demodulation off.

---

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult? <TraceMode>

[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult? <TraceMode>

**[SENSe:]ADEMod:AM:RELative:AFSPepectrum:RESult? <TraceMode>**  
**[SENSe:]ADEMod:FM[:TDOMain]:RESult? <TraceMode>**  
**[SENSe:]ADEMod:FM:AFSPepectrum:RESult? <TraceMode>**  
**[SENSe:]ADEMod:PM[:TDOMain]:RESult? <TraceMode>**  
**[SENSe:]ADEMod:PM:AFSPepectrum:RESult? <TraceMode>**  
**[SENSe:]ADEMod:SPECTrum:RESult? <TraceMode>**

Reads the result data of the evaluated signal in the specified trace mode. The data format of the output data block is defined by the **FORMat [ : DATA ]** on page 152).

The trace results are configured for a specific evaluation. The following table indicates which command syntax refers to which evaluation method, as well as the output unit of the results.

Command syntax	Evaluation method	Output unit
ACV[:TDOMain]	AC-Video time domain	V
ACV:AFSPepectrum	AC-Video spectrum	V
AM[:ABSolute][:TDOMain]	RF time domain	dBm
AM:RELative[:TDOMain]	AM time domain	%
AM:RELative:AFSPepectrum	AM spectrum	%
FM[:TDOMain]	FM time domain	kHz
FM:AFSPepectrum	FM spectrum	kHz
PM[:TDOMain]	PM time domain	rad or °
PM:AFSPepectrum	PM spectrum	rad or °
SPECTrum	RF spectrum	dBm (logarithmic display) or V (linear display).

#### Query parameters:

<TraceMode>      WRITe | AVERage | MAXHold | MINHold

#### Return values:

<TraceModeResult>      The specified trace mode must be one of those configured by **SENS:ADEM:<Evaluation>:TYPE**, see **[SENSe:]ADEMod:SPECTrum[:TYPE]** on page 149. Otherwise a query error is generated.

**Example:**

```

ADEM:AM AVER,MAXH,MINH
Sets up RF time domain results to be measured
INIT; *WAI
Starts measurement and waits for sync
FORM ASC
Selects output format
ADEM:AM:RES? AVER
Reads RF time domain average results
ADEM:AM:RES? MAXH
Reads RF time domain max hold results
ADEM:AM:RES? MINH
Reads RF time domain min hold results

```

**Usage:** Query only

---

### **FORMat[:DATA] <Format>[, <BitLength>]**

Selects the data format that is used for transmission of trace data from the R&S EPL1000 to the controlling computer.

Note that the command has no effect for data that you send to the R&S EPL1000. The R&S EPL1000 automatically recognizes the data it receives, regardless of the format.

#### **Parameters:**

<Format>

#### **ASCii**

ASCII format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats can be.

#### **REAL**

Floating-point numbers (according to IEEE 754) in the "definite length block format".

The format setting **REAL** is used for the binary transmission of trace data.

<BitLength>

Length in bits for floating-point results

#### **16**

16-bit floating-point numbers.

Compared to **REAL, 32** format, half as many numbers are returned.

#### **32**

32-bit floating-point numbers

For I/Q data, 8 bytes per sample are returned for this format setting.

#### **64**

64-bit floating-point numbers

Compared to **REAL, 32** format, twice as many numbers are returned.

**Example:** FORM REAL, 32



**TRACe<n>[:DATA]**

This command queries current trace data and measurement results.

The data format depends on `FORMat[:DATA]` on page 152.

**Suffix:**

<n> [Window](#)

**Query parameters:**

<ResultType> Selects the type of result to be returned.

**TRACE1 | ... | TRACE6**

Returns the trace data for the corresponding trace.

The trace data consists of a list of measured power levels. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the configured unit.

For the auto peak detector, the command returns positive peak values only. (To retrieve negative peak values, define a second trace with a negative peak detector.)

**Example:**

`TRAC? TRACE3`

Queries the data of trace 3.

**CALCulate<n>:DELTamarker<m>:X <Position>**

Moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Position> Numeric value that defines the marker position on the x-axis. The position is relative to the reference marker.

A query returns the absolute position of the delta marker.

Range: The value range and unit depend on the measurement and scale of the x-axis.

Default unit: HZ

**Example:**

`CALC:DELT:X?`

Outputs the absolute x-value of delta marker 1.

**CALCulate<n>:DELTamarker<m>:Y?**

Queries the result at the position of the specified delta marker.

**Suffix:**

<n> 1..n

<m> 1..n

**Return values:**

<Result> Result at the position of the delta marker.  
The unit is variable and depends on the one you have currently set.  
Default unit: DBM

**Usage:** Query only

**CALCulate<n>:MARKer<m>:X <Position>**

Moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Position> Numeric value that defines the marker position on the x-axis.  
The unit depends on the result display.  
Range: The range depends on the current x-axis range.  
Default unit: Hz

**Example:** `CALC:MARK2:X 1.7MHz`  
Positions marker 2 to frequency 1.7 MHz.

**Manual operation:** See "[Marker Table](#)" on page 38

**CALCulate<n>:MARKer<m>:Y?**

Queries the result at the position of the specified marker.

**Suffix:**

<n> 1..n

<m> 1..n

**Return values:**

<Result> Default unit: DBM

**Usage:** Query only

**Manual operation:** See "[Marker Table](#)" on page 38

## 10.6.2 Retrieving result summary values

The result summary contains measurement values that are calculated from the trace data.

For details see "Result Summary" on page 36.

CALCulate<n>:MARKer<m>:FUNction:ADEMod:AFRequency[:RESult<t>]?	155
CALCulate<n>:MARKer<m>:FUNction:ADEMod:AM[:RESult<t>]?	155
CALCulate<n>:MARKer<m>:FUNction:ADEMod:FM[:RESult<t>]?	155
CALCulate<n>:MARKer<m>:FUNction:ADEMod:PM[:RESult<t>]?	155
CALCulate<n>:MARKer<m>:FUNction:ADEMod:AM[:RESult<t>]:RELative?	156
CALCulate<n>:MARKer<m>:FUNction:ADEMod:FM[:RESult<t>]:RELative?	156
CALCulate<n>:MARKer<m>:FUNction:ADEMod:PM[:RESult<t>]:RELative?	156
CALCulate<n>:MARKer<m>:FUNction:ADEMod:CARRier[:RESult<t>]?	157
CALCulate<n>:MARKer<m>:FUNction:ADEMod:DISTortion[:WRITe]:RESult<t>?	157
CALCulate<n>:MARKer<m>:FUNction:ADEMod:FERRor[:RESult<t>]?	157
CALCulate<n>:MARKer<m>:FUNction:ADEMod:SINad:RESult<t>?	158
CALCulate<n>:MARKer<m>:FUNction:ADEMod:THD:RESult<t>?	158

---

### CALCulate<n>:MARKer<m>:FUNction:ADEMod:AFRequency[:RESult<t>]?

Queries the modulation (audio) frequency for the demodulation method in the specified window.

**Suffix:**

<n>	Window
<m>	irrelevant
<t>	Trace

**Return values:**

<ModFreq> Modulation frequency in Hz.

**Usage:** Query only

---

**CALCulate<n>:MARKer<m>:FUNction:ADEMod:AM[:RESult<t>]?** <MeasType>  
**CALCulate<n>:MARKer<m>:FUNction:ADEMod:FM[:RESult<t>]?** <MeasType>  
**CALCulate<n>:MARKer<m>:FUNction:ADEMod:PM[:RESult<t>]?** <MeasType>

Queries the current value of the demodulated signal for the specified trace (as displayed in the "Result Summary" in manual operation).

Note that all windows with the same evaluation method have the same traces, thus the window is irrelevant.

**Suffix:**

<n>	Window
<m>	irrelevant
<t>	Trace

**Query parameters:**

<MeasType> PPEak | MPEak | MIDDLE | RMS

**PPEak**

Positive peak (+PK)

**MPEak | NPEak**

Negative peak (-PK)

**MIDDLE**Average of positive and negative peaks  $\pm PK/2$ **RMS**

Root mean square value

**Return values:**

&lt;MeasTypeResult&gt;

**Example:**`CALC:FEED 'XTIM:PM:TDOM'`

Switches on the PM time domain result display.

`DISP:TRAC ON`

Switches on the trace.

`CALC:MARK:FUNC:ADEM:PM? PPE`

Queries the peak value of the demodulated PM trace.

**Usage:**

Query only

**CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:AM[:RESult<t>]:RELative?**

&lt;MeasType&gt;

**CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:FM[:RESult<t>]:RELative?**

&lt;MeasType&gt;

**CALCulate<n>:MARKer<m>:FUNCTION:ADEMod:PM[:RESult<t>]:RELative?**

&lt;MeasType&gt;

Queries the current *relative* value of the demodulated signal for the specified trace (as displayed in the "Result Summary" in manual operation).

Note that all windows with the same evaluation method have the same traces.

The unit of the results depends on the `CONFigure:ADEMod:RESults:UNIT` setting.**Suffix:**

&lt;n&gt; irrelevant

&lt;m&gt; irrelevant

<t> [Trace](#)**Query parameters:**

&lt;MeasType&gt;

**PPEak**

Positive peak (+PK)

**MPEak | NPEak**

Negative peak (-PK)

**MIDDLE**Average of positive and negative peaks  $\pm PK/2$ **RMS**

Root mean square value

**Return values:**

&lt;MeasTypeResult&gt;

**Example:**

CALC:FEED 'XTIM:PM:TDOM'

Switches on the PM time domain result display.

DISP:TRAC ON

Switches on the trace.

CALC:MARK:FUNC:ADEM:PM? PPE

Queries the peak value of the demodulated PM trace.

**Usage:**

Query only

**CALCulate<n>:MARKer<m>:FUNction:ADEMod:CARRier[:RESult<t>]?**

Queries the carrier power, which is determined from the Clr/Write data.

**Suffix:**<n> [Window](#)

&lt;m&gt; irrelevant

<t> [Trace](#)**Return values:**

&lt;CPower&gt; Power of the carrier without modulation in dBm.

**Usage:**

Query only

**CALCulate<n>:MARKer<m>:FUNction:ADEMod:DISTortion[:WRITe]:RESult<t>?**

Queries the result of the modulation distortion measurement in the specified window for the specified trace.

Note that this value is only calculated if an AF Spectrum window is displayed.

**Suffix:**<n> [Window](#)

&lt;m&gt; irrelevant

<t> [Trace](#)**Return values:**

<DISTORT> numeric value  
 Modulation distortion in percent.  
 Default unit: %

**Usage:**

Query only

**CALCulate<n>:MARKer<m>:FUNction:ADEMod:FERRor[:RESult<t>]?**

Queries the carrier offset (= frequency error) for FM and PM demodulation. The carrier offset is determined from the current measurement data (CLR/WRITE). The modulation is removed using low pass filtering.

**Suffix:**<n> [Window](#)

&lt;m&gt; irrelevant

<t> [Trace](#)**Return values:**

&lt;CarrOffset&gt; The deviation of the calculated carrier frequency to the ideal carrier frequency in Hz.

**Usage:** Query only**CALCulate<n>:MARKer<m>:FUNction:ADEMod:SINad:RESult<t>?**

Queries the result of the signal-to-noise-and-distortion (SINAD) measurement in the specified window for the specified trace.

Note that this value is only calculated if an AF Spectrum window is displayed.

**Suffix:**<n> [Window](#)

&lt;m&gt; irrelevant

<t> [Trace](#)**Return values:**

&lt;SINAD&gt; The signal-to-noise-and-distortion ratio in dB.

**Usage:** Query only**CALCulate<n>:MARKer<m>:FUNction:ADEMod:THD:RESult<t>?**

Queries the result of the total harmonic distortion (THD) measurement in the specified window.

Note that this value is only calculated if an AF Spectrum window is displayed.

**Suffix:**<n> [Window](#)

&lt;m&gt; irrelevant

<t> [Trace](#)**Return values:**

&lt;THD&gt; Total harmonic distortion of the demodulated signal in dB.

**Usage:** Query only

### 10.6.3 Trace export

MMEMory:STORe<n>:TRACe.....	159
FORMat:DEXPort:DSEParator.....	159
FORMat:DEXPort:HEADer.....	159
FORMat:DEXPort:TRACes.....	160

---

#### MMEMory:STORe<n>:TRACe <Trace>, <FileName>

Exports trace data from the specified window to an ASCII file.

##### Suffix:

<n>                      [Window](#)

##### Parameters:

<Trace>                      Number of the trace to be stored  
(This parameter is ignored if the option "Export all Traces and all Table Results" is activated in the Export configuration settings, see [FORMat:DEXPort:TRACes](#) on page 160).

<FileName>                      String containing the path and name of the target file.

##### Example:

```
MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'
```

Stores trace 1 from window 1 in the file TEST.ASC.

---

#### FORMat:DEXPort:DSEParator <Separator>

Selects the decimal separator for data exported in ASCII format.

##### Parameters:

<Separator>                      **COMMa**  
Uses a comma as decimal separator, e.g. 4,05.

**POINT**  
Uses a point as decimal separator, e.g. 4.05.

\*RST:                      \*RST has no effect on the decimal separator.  
Default is POINT.

##### Example:

```
FORM:DEXP:DSEP POIN
```

Sets the decimal point as separator.

---

#### FORMat:DEXPort:HEADer <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

See [Chapter C, "Reference: ASCII file export format"](#), on page 168 for details.

##### Parameters:

<State>                      ON | OFF | 0 | 1

\*RST:                      1

**FORMat:DEXPort:TRACes** <Selection>

Selects the data to be included in a data export file (see [MMEMoRY:STORe<n>:TRACe](#) on page 159).

**Parameters:**

<Selection>                    SINGle | ALL

**SINGle**

Only a single trace is selected for export, namely the one specified by the [MMEMoRY:STORe<n>:TRACe](#) command.

**ALL**

Selects all active traces and result tables (e.g. "Result Summary", marker peak list etc.) in the current application for export to an ASCII file.

The <trace> parameter for the [MMEMoRY:STORe<n>:TRACe](#) command is ignored.

\*RST:                    SINGle

## 10.7 Analysis

The functionality to analyze measurement results is the same as that of the Spectrum application.

For a comprehensive list and description of remote commands, refer to the corresponding topics in the user manual of the R&S EPL1000.

<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:LINK</a> .....	160
<a href="#">CALCulate&lt;n&gt;:SGRam:LAYout</a> .....	161
<a href="#">CALCulate&lt;n&gt;:SPECTrogram:LAYout</a> .....	161

**CALCulate<n>:MARKer<m>:LINK** <DisplayType>

Links the specified marker in all displays of the specified type.

**Suffix:**

<n>                                irrelevant

<m>                                [Marker](#)

**Parameters:**

<DisplayType>                    TIME | SPECTrum | BOTH | NONE

**TIME**

Links the markers in all time domain diagrams

**SPECTrum**

Links the markers in all AF Spectrum displays

**BOTH**

Links the markers both in the time domain diagrams and in the AF Spectrum displays



**NONE**

Markers are not linked.

\*RST: NONE

**Manual operation:** See "[Link AF Spectrum Marker](#)" on page 77**CALCulate<n>:SGRam:LAYout <State>****CALCulate<n>:SPECtrogram:LAYout <State>**

This command selects the state and size of spectrograms.

The command is available for result displays that support spectrograms.

**Suffix:**<n> [Window](#)**Parameters:**

&lt;State&gt;

**FULL**

Only the spectrogram is displayed, the trace diagram is not.

**SPLIT**

Spectrogram and trace diagram share a window.

**OFF**

Only the trace diagram is displayed, the spectrogram is not.

\*RST: OFF

**Example:**

CALC4:SPEC:LAY FULL

Shows the spectrogram in window 4. The corresponding trace diagram is hidden.

**Manual operation:** See "[State](#)" on page 76

## 10.8 Data import and export

<a href="#">MMEMory:LOAD:IQ:STATe</a> .....	161
<a href="#">MMEMory:STORe&lt;n&gt;:IQ:COMMeNt</a> .....	162
<a href="#">MMEMory:STORe&lt;n&gt;:IQ:STATe</a> .....	162

**MMEMory:LOAD:IQ:STATe 1, <FileName>**

Restores I/Q data from a file.

**Setting parameters:**

<FileName> string  
String containing the path and name of the source file.

**Example:** Loads IQ data from the specified file.**Usage:** Setting only

**MMEMory:STORe<n>:IQ:COMMent <Comment>**

Adds a comment to a file that contains I/Q data.

**Suffix:**

<n> irrelevant

**Parameters:**

<Comment> String containing the comment.

**Example:**

```
MMEM:STOR:IQ:COMM 'Device test 1b'
Creates a description for the export file.
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores I/Q data and the comment to the specified file.
```

**MMEMory:STORe<n>:IQ:STATe <1>, <FileName>**

Writes the captured I/Q data to a file.

The file extension is \*.iq.tar. By default, the contents of the file are in 32-bit floating point format.

**Suffix:**

<n> 1..n

**Parameters:**

<1>

<FileName> String containing the path and name of the target file.

**Example:**

```
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores the captured I/Q data to the specified file.
```

**Usage:**

Asynchronous command

## 10.9 Programming example

In this example we will configure and perform an Analog Modulation Analysis measurement to demonstrate the remote control commands.

**Signal generator settings (e.g. R&S SMW):**

Frequency:	500 MHz
Level:	-10 dBm
Modulation:	FM
Modulation frequency:	10 kHz
Frequency deviation:	50 kHz

```

//-----Preparing the measurement -----
//Reset the instrument
*RST

//Set the center frequency to 500 MHz
FREQ:CENT 500 MHz
//Set the reference level to 0 dBm
DISP:TRAC:Y:SCAL:RLEV 0

//----- Activating an Analog Modulation Analysis measurement channel -----
//Activate an Analog Modulation Analysis measurement channel named "FMDemodulation"
INST:CRE:NEW ADEM,'FMDemodulation'

//----- Configuring data acquisition -----
//Set the measurement time to 1 ms (=10 periods)
ADEM:MTIM 1ms
//Optimize the scaling of the y-axis for the current measurement (continuously)
SENS:ADJ:SCAL:Y:AUTO ON
//Set the demodulation bandwidth to 400 kHz
BAND:DEM 400 kHz
//Trigger when magnitude of I/Q data reaches -50dBm
TRIG:SOUR IQP
TRIG:LEV:IQP -50

//----- Configuring the result display -----

//Add an FM Spectrum result display below FM Time Domain
LAY:ADD:WIND? '1',BEL,'XTIM:FM:AFSP'
//Define two traces in the FM Spectrum: 1: Clear/write, 2: average
ADEM:FM:AFSP WRIT,AVER,OFF,OFF,OFF,OFF
//Set analog demodulator to execute 30 sweeps with 32000 samples each
//at a sample rate of 8 MHz; use IQ trigger, trigger on positive slope
//with a pretrigger offset of 500 samples
ADEM:SET 8MHz,32000,IQP,POS,-500,30

//-----Performing the Measurement-----

//Stop continuous sweep
INIT:CONT OFF

//Start a new measurement with 30 sweeps and wait for the end
INIT;*WAI

//-----Retrieving Results-----
//Query the carrier power

```

```
CALC:MARK:FUNC:ADEM:CARR?
//Result: -10.37 [dBm]

//Query the signal-to-noise-and-distortion ratio from the FM Spectrum
CALC2:MARK:FUNC:ADEM:SIN:RES?
//Result: 65.026 [dB]

//Query the total harmonic distortion of the demodulated signal
//from the FM Spectrum
CALC2:MARK:FUNC:ADEM:THD:RES?
//Result: -66.413 [dB]

//Query the FM carrier offset (=frequency error) for the most recent
//measurement (trace 1)
CALC:MARK:FUNC:ADEM:FERR?
//Result: 649.07 [Hz]

//Query FM carrier offset averaged over 30 measurements
ADEM:FM:OFFS? AVER
//Result: 600 [Hz]

//Retrieve the trace data of the most recent measurement (trace 1)
TRAC:DATA? TRACE1
//Result: -1.201362252,-1.173495054,-1.187217355,-1.186594367,-1.171583891,
//-1.188250422,-1.204138160,-1.181404829,-1.186317205,-1.197872400, [...]

//Retrieve the averaged trace data for all 30 measurements (trace 2)
TRAC:DATA? TRACE2//Result: -1.201362252,-1.173495054,-1.187217355,-1.186594367,-1.171583891,
//-1.188250422,-1.204138160,-1.181404829,-1.186317205,-1.197872400, [...]
```

# Annex

## A Predefined standards and settings

You can configure the Analog Modulation Analysis application using predefined standard settings. This allows for quick and easy configuration for commonly performed measurements.

For details see [Chapter 5.1, "Configuration according to digital standards"](#), on page 39.

### Provided standard files

The instrument comes prepared with the following standard settings:

- AM Broadcast
- FM Narrowband
- FM Broadcast
- Frequency Settling
- None (default settings)

The default storage location for the settings files is:

```
C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\predefined\AdemodPredefined.
```

### Predefined settings

The following parameters can be stored in a standard settings file. Any parameters that are not included in the xml file are set to their default values when the standard is loaded.

#### Measurement settings:

- DBW
- AQT
- Demod Filter
- Sweep Points
- Squelch (State, Level)
- Units (Phase, THD)
- RF Span

#### Window display settings:

- Position
- State
- Window number
- Window type (all evaluation methods supported by the Analog Modulation Analysis application; see [Chapter 4, "Measurements and result displays"](#), on page 28)
- Scaling (Ref Position, Dev per Division)
- Time Domain Zoom (State, Start, Length)

**AF specific settings:**

- AF Center
- AF Span
- AF Filters (Lowpass, Highpass, Deemphasis, Weighting)
- Scaling for Spectrum (Ref Value, Deviation)
- Scaling for Time Domain (Ref Value, AF Coupling (FM/PM only))

**Table A-1: List of predefined standards and settings**

Setting	AM Broadcast	FM Narrowband	FM Broadcast	Frequency Settling *)	None (Default)
<b>Demod. bandwidth</b>	100 kHz	100 kHz	400 kHz	5 MHz	5 MHz
<b>Aquisition time</b>	100 ms	100 ms	100 ms	10 ms	62.5 µs
<b>Input coupling</b>	AC	AC	AC		AC
<b>Squelch level</b>				-30 dBm	-20 dBm
<b>Windows</b>	"RF Spectrum" "AM Time Domain" "AM Spectrum" "Result Summary"	"RF Spectrum" "FM Time Domain" "FM Spectrum" "Result Summary"	"RF Spectrum" "FM Time Domain" "FM Spectrum" "Result Summary"	"FM Time Domain" "RF Time Domain" "Result Summary"	"FM Time Domain" "Result Summary"
<b>AF filter - High-pass</b>	20 kHz	50 Hz			-
<b>AF filter - Low-pass</b>	15 kHz	3 kHz	150 kHz		-
<b>RF Spectrum</b>					
<b>Span</b>	50 kHz	25 kHz	400 kHz		
<b>AM/FM Time Domain</b>					
<b>Time domain zoom</b>	10 ms	10 ms	10 ms		-
<b>Dev per division</b>		1 kHz	20 kHz	100 kHz	50 kHz
<b>Time domain</b>					
<b>Settling Time State</b>				ON	
<b>AM/FM Spectrum</b>					
<b>Start freq.</b>	0 Hz	0 Hz	0 Hz		
<b>Stop freq.</b>	15 kHz	5 kHz	63.33 kHz		
<b>Ref. value</b>		5 kHz	75 kHz		
*) The Frequency Settling scenario requires a manually defined trigger					

## B Formats for returned values: ASCII format and binary format

When trace data is retrieved using the `TRAC:DATA` or `TRAC:IQ:DATA` command, the data is returned in the format defined using the `FORMat[:DATA]` on page 152. The possible formats are described here.

- **ASCII Format (FORMat ASCII):**  
The data is stored as a list of comma-separated values (CSV) of the measured values in floating point format.
- **Binary Format (FORMat REAL,16/32/64):**  
The data is stored as binary data (definite length block data according to IEEE 488.2), each measurement value being formatted in 16-bit/32-bit/64-bit IEEE 754 floating-point-format.  
The schema of the result string is as follows:  
`#<Length of length><Length of data><value1><value2>...<value n>`  
with:

<Length of length>	Number of digits of the following number of data bytes
<Length of data>	Number of following data bytes
<Value>	2-byte/4-byte/8-byte floating point value

**Example:** `#41024<Data>...` contains 1024 data bytes

### Data blocks larger than 999,999,999 bytes

According to SCPI, the header of the block data format allows for a maximum of 9 characters to describe the data length. Thus, the maximum REAL 32 data that can be represented is 999,999,999 bytes. However, the R&S EPL1000 is able to send larger data blocks. In this case, the length of the data block is placed in brackets, e.g.  
`#(1234567890)<value1><value2>...`



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

## C Reference: ASCII file export format

Trace data can be exported to a file in ASCII format for further evaluation in other applications. This reference describes in detail the format of the export files for result data.

The file consists of the header information (general configuration of the measurement) and the measurement results. Optionally, the header can be excluded from the file.

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace). The measured data follows in one or several columns (depending on the measurement), which are also separated by a semicolon.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Generally, the format of this ASCII file can be processed by spreadsheet calculation programs, e.g. MS Excel. Different language versions of evaluation programs can require a different handling of the decimal point. Thus, you can define the decimal separator to use (decimal point or comma).



## D I/Q data file format (iq-tar)

I/Q data is packed in a file with the extension `.iq.tar`. An `iq-tar` file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the `iq-tar` file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to include user-specific data and to preview the I/Q data in a web browser (not supported by all web browsers).

The `iq-tar` container packs several files into a single `.tar` archive file. Files in `.tar` format can be unpacked using standard archive tools (see [http://en.wikipedia.org/wiki/Comparison\\_of\\_file\\_archivers](http://en.wikipedia.org/wiki/Comparison_of_file_archivers)) available for most operating systems. The advantage of `.tar` files is that the archived files inside the `.tar` file are not changed (not compressed) and thus it is possible to read the I/Q data directly within the archive without the need to unpack (`untar`) the `.tar` file first.



### Sample iq-tar files

Some sample `iq-tar` files are provided in the `C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\Demo\` directory on the R&S EPL1000.



An application note on converting Rohde & Schwarz I/Q data files is available from the Rohde & Schwarz website:

[1EF85: Converting R&S I/Q data files](#)

### Contained files

An `iq-tar` file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`  
Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an `iq-tar` file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`  
Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an `iq-tar` file.

Optionally, an `iq-tar` file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`  
Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser (not supported by all web browsers).  
A sample stylesheet is available at [http://www.rohde-schwarz.com/file/open\\_IqTar\\_xml\\_file\\_in\\_web\\_browser.xslt](http://www.rohde-schwarz.com/file/open_IqTar_xml_file_in_web_browser.xslt).
- [I/Q parameter XML file specification](#)..... 170
- [I/Q data binary file](#)..... 174

## D.1 I/Q parameter XML file specification



The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: <http://www.rohde-schwarz.com/file/RsIqTar.xsd>.

In particular, the order of the XML elements must be respected, i.e. `iq-tar` uses an "ordered XML schema". For your own implementation of the `iq-tar` file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

### Sample I/Q parameter XML file: xyz.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>R&S EPL1000</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
  <DataFilename>xyz.complex.float32</DataFilename>
  <UserData>
    <UserDefinedElement>Example</UserDefinedElement>
  </UserData>
  <PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>
```

### D.1.1 Minimum data elements


The following data elements are the minimum required for a valid `iq-tar` file. They are always provided by an `iq-tar` file export from a Rohde & Schwarz product. If not specified otherwise, it must be available in all `iq-tar` files used to import data to a Rohde & Schwarz product.

Element	Possible Values	Description
<RS_IQ_TAR_FileFormat>	-	The root element of the XML file. It must contain the attribute <code>fileFormatVersion</code> that contains the number of the file format definition.
<Name>	string	Optional: describes the device or application that created the file.
<Comment>	string	Optional: contains text that further describes the contents of the file.
<DateTime>	yyyy-mm-ddThh:mm:ss	Contains the date and time of the creation of the file. Its type is <code>xs:dateTime</code> (see <code>RsIqTar.xsd</code> ).
<Samples>	integer	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: <ul style="list-style-type: none"> <li>• A complex number represented as a pair of I and Q values</li> <li>• A complex number represented as a pair of magnitude and phase values</li> <li>• A real number represented as a single real value</li> </ul> See also <Format> element.
<Clock>	double	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute <code>unit</code> must be set to "Hz".
<Format>	complex   real   polar	Specifies how the binary data is saved in the I/Q data binary file (see <DataFilename> element). Every sample must be in the same format. The format can be one of the following: <ul style="list-style-type: none"> <li>• <code>complex</code>: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless</li> <li>• <code>real</code>: Real number (unitless)</li> <li>• <code>polar</code>: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires <code>DataType = float32 or float64</code></li> </ul>
<DataType>	int8   int16   int32   float32   float64	Specifies the binary format used for samples in the I/Q data binary file (see <DataFilename> element and <a href="#">Chapter D.2, "I/Q data binary file"</a> , on page 174). The following data types are allowed: <ul style="list-style-type: none"> <li>• <code>int8</code>: 8 bit signed integer data</li> <li>• <code>int16</code>: 16 bit signed integer data</li> <li>• <code>int32</code>: 32 bit signed integer data</li> <li>• <code>float32</code>: 32 bit floating point data (IEEE 754)</li> <li>• <code>float64</code>: 64 bit floating point data (IEEE 754)</li> </ul>
<ScalingFactor>	double	Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the <ScalingFactor>. For polar data only the magnitude value has to be multiplied. For multi-channel signals the <ScalingFactor> must be applied to all channels. The attribute <code>unit</code> must be set to "v".  The <ScalingFactor> must be > 0. If the <ScalingFactor> element is not defined, a value of 1 V is assumed.

Element	Possible Values	Description
<NumberOfChannels>	integer	Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see <a href="#">Chapter D.2, "I/Q data binary file"</a> , on page 174). If the <NumberOfChannels> element is not defined, one channel is assumed.
<DataFilename>		Contains the filename of the I/Q data binary file that is part of the iq-tar file.  It is recommended that the filename uses the following convention: <xyz>.<Format>.<Channels>ch.<Type> <ul style="list-style-type: none"> <li>• &lt;xyz&gt; = a valid Windows file name</li> <li>• &lt;Format&gt; = complex, polar or real (see <a href="#">Format</a> element)</li> <li>• &lt;Channels&gt; = Number of channels (see <a href="#">NumberOfChannels</a> element)</li> <li>• &lt;Type&gt; = float32, float64, int8, int16, int32 or int64 (see <a href="#">DataType</a> element)</li> </ul> Examples: <ul style="list-style-type: none"> <li>• xyz.complex.1ch.float32</li> <li>• xyz.polar.1ch.float64</li> <li>• xyz.real.1ch.int16</li> <li>• xyz.complex.16ch.int8</li> </ul>
<UserData>	xml	Optional: contains user, application or device-specific XML data which is not part of the iq-tar specification. This element can be used to store additional information, e.g. the hardware configuration. User data must be valid XML content.
<PreviewData>	xml	Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an iq-tar file (e.g. R&S EPL1000). For the definition of this element refer to the <a href="#">RsIqTar.xsd</a> schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet <a href="#">open_IqTar_xml_file_in_web_browser.xslt</a> is available.

## D.1.2 Example

The following example demonstrates the XML description inside the iq-tar file. Note that this preview is not supported by all web browsers.

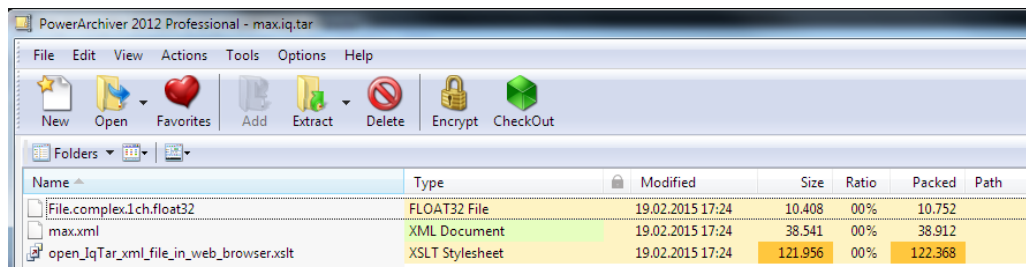

Open the xml file in a web browser. If the stylesheet [open\\_IqTar\\_xml\\_file\\_in\\_web\\_browser.xslt](#) is in the same directory, the web browser displays the xml file in a readable format.

**max.xml (of .iq.tar file)**

Description	
Saved by	VSE_1.10
Date & Time	2014-11-24 14:34:06
Sample rate	32 MHz
Number of samples	3200300
Duration of signal	100.009 ms
Data format	complex, float32
Data filename	File.complex.1ch.float32
Scaling factor	1 V

**IQ Analyzer**

**Power vs time**  
y-axis: 10 dB /div  
x-axis: 10 ms /div

**Spectrum**  
y-axis: 10 dB /div  
x-axis: 5 MHz /div

**I/Q**

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl" href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1" xsi:noNamespaceSchemaLocation=
"http://www.rohde-schwarz.com/file/RsIqTar.xsd" xmlns:xsi=
"http://www.w3.org/2001/XMLSchema-instance">
  <Name>VSE_1.10a 29 Beta</Name>
  <Comment></Comment>
  <DateTime>2015-02-19T15:24:58</DateTime>
  <Samples>1301</Samples>
  <Clock unit="Hz">32000000</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
```

```

<ScalingFactor unit="V">1</ScalingFactor>
<NumberOfChannels>1</NumberOfChannels>
<DataFilename>File.complex.1ch.float32</DataFilename>

<UserData>
  <RohdeSchwarz>
    <DataImportExport_MandatoryData>
      <ChannelNames>
        <ChannelName>IQ Analyzer</ChannelName>
      </ChannelNames>
      <CenterFrequency unit="Hz">0</CenterFrequency>
    </DataImportExport_MandatoryData>
    <DataImportExport_OptionalData>
      <Key name="Ch1_NumberOfPostSamples">150</Key>
      <Key name="Ch1_NumberOfPreSamples">150</Key>
    </DataImportExport_OptionalData>
  </RohdeSchwarz>
</UserData>

</RS_IQ_TAR_FileFormat>

```

**Example: ScalingFactor**

Data stored as int16 and a desired full scale voltage of 1 V

ScalingFactor = 1 V / maximum int16 value = 1 V / 2<sup>15</sup> = 3.0517578125e-5 V

Scaling Factor	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	- 2 <sup>15</sup> = - 32768	-1 V
Maximum (positive) int16 value	2 <sup>15</sup> -1= 32767	0.999969482421875 V

## D.2 I/Q data binary file

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see <Format> element and <DataType> element). To allow reading and writing of streamed I/Q data, all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 0, channel 1, channel 2 etc. If the <NumberOfChannels> element is not defined, one channel is presumed.

**Example: Element order for real data (1 channel)**

```

I[0],           // Real sample 0
I[1],           // Real sample 1
I[2],           // Real sample 2
...

```

**Example: Element order for complex cartesian data (1 channel)**

```
I[0], Q[0],           // Real and imaginary part of complex sample 0
I[1], Q[1],           // Real and imaginary part of complex sample 1
I[2], Q[2],           // Real and imaginary part of complex sample 2
...
```

**Example: Element order for complex polar data (1 channel)**

```
Mag[0], Phi[0],      // Magnitude and phase part of complex sample 0
Mag[1], Phi[1],      // Magnitude and phase part of complex sample 1
Mag[2], Phi[2],      // Magnitude and phase part of complex sample 2
...
```

**Example: Element order for complex cartesian data (3 channels)**

Complex data: I[channel no][time index], Q[channel no][time index]

```
I[0][0], Q[0][0],      // Channel 0, Complex sample 0
I[1][0], Q[1][0],      // Channel 1, Complex sample 0
I[2][0], Q[2][0],      // Channel 2, Complex sample 0

I[0][1], Q[0][1],      // Channel 0, Complex sample 1
I[1][1], Q[1][1],      // Channel 1, Complex sample 1
I[2][1], Q[2][1],      // Channel 2, Complex sample 1

I[0][2], Q[0][2],      // Channel 0, Complex sample 2
I[1][2], Q[1][2],      // Channel 1, Complex sample 2
I[2][2], Q[2][2],      // Channel 2, Complex sample 2
...
```

**Example: Element order for complex cartesian data (1 channel)**

This example demonstrates how to store complex cartesian data in float32 format using MATLAB®.

```
% Save vector of complex cartesian I/Q data, i.e. iqiqiq...
N = 100
iq = randn(1,N)+1j*randn(1,N)
fid = fopen('xyz.complex.float32','w');
for k=1:length(iq)
    fwrite(fid, single(real(iq(k))), 'float32');
    fwrite(fid, single(imag(iq(k))), 'float32');
end
fclose(fid)
```

**Example: PreviewData in XML**

```
<PreviewData>
  <ArrayOfChannel length="1">
    <Channel>
      <PowerVsTime>
        <Min>
```

```

    <ArrayOfFloat length="256">
      <float>-134</float>
      <float>-142</float>
      ...
      <float>-140</float>
    </ArrayOfFloat>
  </Min>
  <Max>
    <ArrayOfFloat length="256">
      <float>-70</float>
      <float>-71</float>
      ...
      <float>-69</float>
    </ArrayOfFloat>
  </Max>
</PowerVsTime>
<Spectrum>
  <Min>
    <ArrayOfFloat length="256">
      <float>-133</float>
      <float>-111</float>
      ...
      <float>-111</float>
    </ArrayOfFloat>
  </Min>
  <Max>
    <ArrayOfFloat length="256">
      <float>-67</float>
      <float>-69</float>
      ...
      <float>-70</float>
      <float>-69</float>
    </ArrayOfFloat>
  </Max>
</Spectrum>
<IQ>
  <Histogram width="64" height="64">0123456789...0</Histogram>
</IQ>
</Channel>
</ArrayOfChannel>
</PreviewData>

```



# List of commands (Analog Modulation Analysis)

[SENSe:]ADEMod:AF:CENTer.....	128
[SENSe:]ADEMod:AF:SPAN.....	128
[SENSe:]ADEMod:AF:SPAN:FULL.....	129
[SENSe:]ADEMod:AF:START.....	129
[SENSe:]ADEMod:AF:STOP.....	129
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?.....	151
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]?.....	149
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?.....	150
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]?.....	149
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?.....	150
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]?.....	149
[SENSe:]ADEMod:FM:AFSPectrum:RESult?.....	151
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]?.....	149
[SENSe:]ADEMod:FM[:TDOMain]:RESult?.....	151
[SENSe:]ADEMod:FM[:TDOMain][:TYPE]?.....	149
[SENSe:]ADEMod:MTIME.....	118
[SENSe:]ADEMod:PM:AFSPectrum:RESult?.....	151
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]?.....	149
[SENSe:]ADEMod:PM:RPOint[:X].....	123
[SENSe:]ADEMod:PM[:TDOMain]:RESult?.....	151
[SENSe:]ADEMod:PM[:TDOMain][:TYPE]?.....	149
[SENSe:]ADEMod:PRESet:RESTore.....	97
[SENSe:]ADEMod:PRESet:STORe.....	97
[SENSe:]ADEMod:PRESet[:STANdard].....	96
[SENSe:]ADEMod:RLENgth.....	118
[SENSe:]ADEMod:SET.....	118
[SENSe:]ADEMod:SPECTrum:BWIDth[:RESolution].....	119
[SENSe:]ADEMod:SPECTrum:RESult?.....	151
[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM.....	130
[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum].....	130
[SENSe:]ADEMod:SPECTrum[:TYPE].....	149
[SENSe:]ADEMod:SQUelch:LEVel.....	123
[SENSe:]ADEMod:SQUelch[:STATe].....	123
[SENSe:]ADEMod:SRATe.....	119
[SENSe:]ADEMod<n>:AF:COUPling.....	122
[SENSe:]ADEMod<n>:ZOOM:LENgth.....	124
[SENSe:]ADEMod<n>:ZOOM:LENgth:MODE.....	125
[SENSe:]ADEMod<n>:ZOOM:START.....	125
[SENSe:]ADEMod<n>:ZOOM[:STATe].....	126
[SENSe:]ADJust:ALL.....	111
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer.....	112
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer.....	112
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	111
[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE.....	112
[SENSe:]ADJust:CONFigure:TRIGger.....	113

[SENSe:]ADJust:FREQuency.....	113
[SENSe:]ADJust:LEVel.....	103
[SENSe:]ADJust:SCALe[:Y]:AUTO[:CONTinuous].....	114
[SENSe:]AVERAge<n>:COUNT.....	119
[SENSe:]BANDwidth[:RESolution].....	120
[SENSe:]BWIDth:DEMod.....	120
[SENSe:]BWIDth:DEMod:TYPE.....	120
[SENSe:]FILTer<n>:AOFF.....	131
[SENSe:]FILTer<n>:AWEighted[:STATe].....	131
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe].....	131
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe].....	131
[SENSe:]FILTer<n>:CCITt[:STATe].....	132
[SENSe:]FILTer<n>:DEMPHasis:TCONstant.....	132
[SENSe:]FILTer<n>:DEMPHasis[:STATe].....	132
[SENSe:]FILTer<n>:HPASs:FREQuency:MANual.....	133
[SENSe:]FILTer<n>:HPASs:FREQuency[:ABSolute].....	133
[SENSe:]FILTer<n>:HPASs[:STATe].....	134
[SENSe:]FILTer<n>:LPASs:FREQuency:MANual.....	134
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative.....	135
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute].....	134
[SENSe:]FILTer<n>:LPASs[:STATe].....	135
[SENSe:]FREQuency:CENTer.....	104
[SENSe:]FREQuency:CENTer:STEP.....	104
[SENSe:]FREQuency:CENTer:STEP:LINK.....	104
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor.....	105
[SENSe:]SWEep:COUNT.....	121
[SENSe:]SWEep[:WINDow<n>]:POINTs.....	121
ABORT.....	114
CALCulate<n>:DELTaMarker<m>:X.....	153
CALCulate<n>:DELTaMarker<m>:Y?.....	153
CALCulate<n>:FORMat.....	124
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:AFREquency[:RESult<t>]?.....	155
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:AM[:RESult<t>]:RELative?.....	156
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:AM[:RESult<t>]?.....	155
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:CARRier[:RESult<t>]?.....	157
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:DISTortion[:WRITe]:RESult<t>?.....	157
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:FERRor[:RESult<t>]?.....	157
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:FM[:RESult<t>]:RELative?.....	156
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:FM[:RESult<t>]?.....	155
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:PM[:RESult<t>]:RELative?.....	156
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:PM[:RESult<t>]?.....	155
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:SINad:RESult<t>?.....	158
CALCulate<n>:MARKer<m>:FUNCTion:AEMod:THD:RESult<t>?.....	158
CALCulate<n>:MARKer<m>:LINK.....	160
CALCulate<n>:MARKer<m>:X.....	154
CALCulate<n>:MARKer<m>:Y?.....	154
CALCulate<n>:SGRam:LAYout.....	161
CALCulate<n>:SPECTrogram:LAYout.....	161
CALCulate<n>:UNIT:POWEr.....	101
CONFigure:AEMod:RESults:AM:DETEctor<det>:MODE.....	140

CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:AM:DETEctor<det>:REFerence:MEAStoref<t>.....	140
CONFigure:ADEMod:RESults:AM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:FM:DETEctor<det>:MODE.....	140
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:FM:DETEctor<det>:REFerence:MEAStoref<t>.....	140
CONFigure:ADEMod:RESults:FM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:PM:DETEctor<det>:MODE.....	140
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence.....	139
CONFigure:ADEMod:RESults:PM:DETEctor<det>:REFerence:MEAStoref<t>.....	140
CONFigure:ADEMod:RESults:PM:DETEctor<det>:STATe.....	139
CONFigure:ADEMod:RESults:UNIT.....	141
DIAGnostic:SERVice:NSOURce.....	100
DISPlay:FORMat.....	142
DISPlay[:WINDow<n>]:SIZE.....	142
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y:SPACing.....	128
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe].....	137
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE.....	137
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:MODE.....	137
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:PDIVision.....	127
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RLEVel.....	101
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	101
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RPOStion.....	127
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe]:RVALue.....	136
FORMat:DEXPort:DSEParator.....	159
FORMat:DEXPort:HEADer.....	159
FORMat:DEXPort:TRACes.....	160
FORMat[:DATA].....	152
INITiate:SEQuencer:ABORT.....	116
INITiate:SEQuencer:IMMediate.....	116
INITiate:SEQuencer:MODE.....	116
INITiate<n>:CONMeas.....	115
INITiate<n>:CONTinuous.....	115
INITiate<n>[:IMMediate].....	117
INPut:ATTenuation:PROTection:RESet.....	98
INPut:FILE:PATH.....	98
INPut:FILTer:SAW.....	98
INPut<ip>:ATTenuation:AUTO.....	102
INPut<ip>:ATTenuation:LIMiter[:STATe].....	97
INPut<ip>:ATTenuation:PROTection[:STATe].....	103
INPut<ip>:ATTenuation[:VALue].....	102
INPut<ip>:GAIN:STATe.....	103
INPut<ip>:IMPedance.....	99
INPut<ip>:SELEct.....	99
INSTRument:CREate:DUPLicate.....	93
INSTRument:CREate:REPLace.....	93
INSTRument:CREate[:NEW].....	93
INSTRument:DELEte.....	94
INSTRument:LIST?.....	94
INSTRument:REName.....	95

INSTrument[:SElect].....	95
LAYout:ADD[:WINDow]?	143
LAYout:CATalog[:WINDow]?	144
LAYout:IDENtify[:WINDow]?	144
LAYout:REMOve[:WINDow]	145
LAYout:REPLace[:WINDow]	145
LAYout:SPLitter.....	145
LAYout:WINDow<n>:ADD?	147
LAYout:WINDow<n>:IDENtify?	147
LAYout:WINDow<n>:REMOve.....	148
LAYout:WINDow<n>:REPLace.....	148
MMEMory:LOAD:IQ:STATe.....	161
MMEMory:STORe<n>:IQ:COMMeNt.....	162
MMEMory:STORe<n>:IQ:STATe.....	162
MMEMory:STORe<n>:TRACe.....	159
SYSTem:PRESet:CHANnel[:EXEC].....	96
SYSTem:SEQuencer.....	121
TRACe<n>[:DATA].....	153
TRIGger[:SEQuence]:DTIME.....	106
TRIGger[:SEQuence]:IFPower:HOLDoff.....	107
TRIGger[:SEQuence]:IFPower:HYSterEsis.....	107
TRIGger[:SEQuence]:LEVel:AM:RELative.....	108
TRIGger[:SEQuence]:LEVel:AM[:ABSolute].....	108
TRIGger[:SEQuence]:LEVel:FM.....	108
TRIGger[:SEQuence]:LEVel:IFPower.....	109
TRIGger[:SEQuence]:LEVel:IQPower.....	109
TRIGger[:SEQuence]:LEVel:PM.....	109
TRIGger[:SEQuence]:LEVel:RFPower.....	110
TRIGger[:SEQuence]:TIME:RINTerval.....	110
TRIGger<tp>[:SEQuence]:HOLDoff[:TIME].....	107
TRIGger<tp>[:SEQuence]:SLOPe.....	110
TRIGger<tp>[:SEQuence]:SOURce.....	106
UNIT<n>:ANGLE.....	138
UNIT<n>:THD.....	138

# Index

## A

A weighted filter	
AF filters	64
Aborting	
Sweep	56
AC/DC coupling	20, 58, 67
AF	28
AF Auto Scale	
Y-axis	68, 75
AF center	
Demodulation spectrum	61
AF CF	16
AF coupling	58, 67
AF filters	21
A weighted	64
CCIR	64
CCITT	64
Configuration	63
Deactivating	65
Deemphasis	65
High pass	63
Low pass	64
Weighting	64
AF full span	
Demodulation spectrum	61
AF span	
Demodulation spectrum	61
Displayed	16
Remote control	128
AF spectrum	60
AF start	
Demodulation spectrum	61
AF stop	
Demodulation spectrum	61
AF trigger	21, 22
AM (Offline)	
Softkey	52
AM Spectrum	
Evaluation method	31
AM Time Domain	
Evaluation method	28
Amplitude	
Scaling	69
Settings	47
Analog Modulation Analysis	
Measurement examples	81
Analysis	
Settings	76
Application cards	10
Application notes	10
AQT	
see Measurement time	15
ASCII trace export	168
Att (channel setup)	15
Attenuation	49
Displayed	15
Protective (remote)	98
Audio frequency	
see AF	28
Auto adjustment	
Triggered measurement	113
Auto all	73

Auto frequency	74
Auto level	
Hysteresis	75
Reference level	48, 74
Softkey	48, 74
Auto scaling	68, 69, 75
Auto settings	73
Meastime Auto	74
Meastime Manual	74
Average count	57

## B

Bandwidth settings	54
Basic Measurement Examples	
see User Manual	9
Brochures	10

## C

Calibration certificate	11
Carrier	
Offset	20, 37
Power	37
CCIR filter	
AF filters	64
CCITT filter	
AF filters	64
Center frequency	50, 62
Automatic configuration	74
Displayed	15, 16
Step size	50
Channel setup	
Creating (remote)	93, 95
Deleting (remote)	94
Duplicating (remote)	93
Querying (remote)	94
Renaming (remote)	95
Replacing (remote)	93
Selecting (remote)	95
Closing	
Channel setups (remote)	94
Windows (remote)	148
Conditions	
Measurement	18
Continue single sweep	
Softkey	56
Continuous sweep	
Softkey	56
Conventions	
SCPI commands	87
Copying	
Channel setup (remote)	93

## D

Data format	
ASCII	167
Binary	167
Remote	159, 160
Data sheets	10
DB per division	
Scaling	66

- DBW
  - see Demodulation bandwidth ..... 15
- Deemphasis filter
  - AF filters ..... 65
  - Remote control ..... 132
- Deleting
  - Settings files ..... 41
  - Standards ..... 41
- Demodulation
  - AF spectrum ..... 60
  - Configuration ..... 57
  - Display ..... 73
  - Filter types ..... 21, 55
  - Process ..... 18
  - Relative (remote control) ..... 140
  - Relative (remote) ..... 139
  - RF spectrum ..... 61
  - Scaling ..... 63, 66
  - Settings ..... 57
  - Spectrum ..... 60
  - Spectrum (Result Summary) ..... 61
  - Units ..... 70
- Demodulation bandwidth ..... 54, 62
  - Conditions ..... 20
  - Deemphasis filter ..... 65
  - Displayed ..... 15
  - Maximum ..... 21
  - Remote control ..... 120
  - Troubleshooting ..... 86
- Detectors
  - Relative demodulation ..... 140
  - Relative demodulation (remote) ..... 139
  - Remote control ..... 139
- Dev per division
  - Scaling ..... 66
- Deviation
  - Scaling ..... 68
- Diagram footer information ..... 16
- Digital standards
  - Configuration ..... 39
- Display configuration
  - Softkey ..... 73
- Drop-out time
  - Trigger ..... 53
- Duplicating
  - Channel setup (remote) ..... 93
- E**
- ENV216 (LISN) ..... 46
- ENV4200 (LISN) ..... 46
- Errors
  - IF OVLD ..... 47
- ESH2-Z5 (LISN) ..... 46
- ESH3-Z5 (LISN) ..... 46
- Evaluation
  - Data basis ..... 28
  - Methods ..... 28
- Evaluation methods
  - Remote ..... 143
- Examples
  - Remote control ..... 162
- Export format
  - Traces ..... 168
- Exporting
  - I/Q data ..... 169, 174
  - Trace data ..... 79
- External trigger ..... 52
- EZ-27 (LISN adapter) ..... 46
- F**
- File format
  - Export Files ..... 168
  - Trace export ..... 168
- filename
  - Settings ..... 40
- Files
  - Format, I/Q data ..... 169
  - I/Q data binary XML ..... 174
  - I/Q data input ..... 44
  - I/Q parameter XML ..... 170
- Filters
  - A weighted (AF) ..... 64
  - AF ..... 63
  - CCIR (AF) ..... 64
  - CCITT (AF) ..... 64
  - Demodulation ..... 20, 21, 55
  - High pass (AF) ..... 63
  - Low pass (AF) ..... 64
  - Weighting (AF) ..... 64
- FM (Offline)
  - Softkey ..... 52
- FM Spectrum
  - Evaluation method ..... 32
- FM Time Domain
  - Evaluation method ..... 29
- Format
  - Data ..... 167
  - Data (remote) ..... 159, 160
  - see also File format ..... 168
- Free Run
  - Trigger ..... 51
- Frequency
  - Configuration ..... 60
  - Deemphasis filter ..... 65
  - Deviation ..... 20
  - Deviation, scaling ..... 66
  - Settings ..... 49
  - Span ..... 62
- Frontend settings ..... 43
- G**
- Gain level ..... 49
- Getting started ..... 9
- H**
- Hardware settings
  - Displayed ..... 15
- High pass filter
  - AF filters ..... 63
- Hysteresis
  - Lower (Auto level) ..... 75
  - Trigger ..... 53
  - Upper (Auto level) ..... 75
- I**
- I/Q data
  - Export file binary data description ..... 174
  - Export file parameter description ..... 170

Input file .....	45
Input files .....	44
I/Q Power	
Trigger .....	52
Trigger level (remote) .....	109
IF Power	
Trigger .....	52
Trigger level (remote) .....	109
Impedance	
Setting .....	44
Importing	
I/Q data .....	170
Input	
I/Q data files .....	45
Overload (remote) .....	98
Settings .....	43
Signal, parameters .....	24
Input sources .....	43
I/Q data file .....	45
I/Q data files .....	44
Installation .....	13
Instrument security procedures .....	10
iq-tar	
Example file .....	172
Mandatory data elements .....	170
<b>K</b>	
Keys	
RUN CONT .....	56
RUN SINGLE .....	56
<b>L</b>	
Linking	
Markers .....	77
LISN .....	46
Loading	
Settings files .....	41
Low pass filter	
AF filters .....	64
Lower Level Hysteresis .....	75
<b>M</b>	
Marker table	
Evaluation method .....	38
Markers	
Linked in AF spectrum display .....	77
Linked in time domain .....	77
Table (evaluation method) .....	38
Maximizing	
Windows (remote) .....	142
Measurement examples	
Analog Modulation Analysis .....	81
Measurement time .....	55, 57
Auto settings .....	74
Displayed .....	15
Effects .....	22
Value range .....	21
Minimum attenuation .....	49
Modulation	
Depth .....	37
Depth, scaling .....	66
Frequency .....	20, 37
Multiple	
Channel setups .....	14

<b>N</b>	
Noise	
Source .....	46
<b>O</b>	
Offset	
Reference level .....	47
Output	
Configuration (softkey) .....	45
Noise source .....	46
Parameters .....	24
Probe power .....	46
Settings .....	45
Trigger .....	46
Overload	
RF input (remote) .....	98
Overview	
Softkey .....	41
<b>P</b>	
Parameters	
Input signal .....	24
Output .....	24
Peak list	
Evaluation method .....	38
Performance	
Improving .....	22
Performing	
AM/FM/PM Modulation Analysis .....	78
Phase	
Deviation .....	20
Deviation, scaling .....	66
Unit .....	70
Phase Wrap	
Activating .....	60
PM (Offline)	
Softkey .....	52
PM Spectrum	
Evaluation method .....	33
PM Time Domain	
Evaluation method .....	30
Preamplifier .....	49
Presetting	
Channels .....	42
Pretrigger .....	53
Probe power supply .....	46
Protection	
RF input (remote) .....	98
<b>R</b>	
Range .....	69
Scaling .....	69
RBW .....	55
Displayed .....	15
Remote control .....	119
Reference level .....	47
Auto level .....	48, 74
Displayed .....	15
Offset .....	47
Offset, displayed .....	15
Position .....	69
Unit .....	47, 48
Value .....	47

- Reference value ..... 67
  - Position ..... 67
- Release notes ..... 10
- Remote commands
  - Basics on syntax ..... 87
  - Boolean values ..... 91
  - Capitalization ..... 88
  - Character data ..... 91
  - Data blocks ..... 91
  - Numeric values ..... 90
  - Optional keywords ..... 89
  - Parameters ..... 89
  - Strings ..... 91
  - Suffixes ..... 88
- Repetition interval ..... 53
- Res BW
  - see RBW ..... 55
- Resetting
  - RF input protection ..... 98
- Residual FM ..... 20
- Resolution bandwidth
  - see RBW ..... 55
- Restoring
  - Channel settings ..... 42
  - Standard files ..... 41
- Result Display ..... 15
- Result displays
  - Marker table ..... 38
  - Peak list ..... 38
- Result Summary
  - Demodulation spectrum ..... 61
  - Evaluation method ..... 36
  - Retrieving values (remote) ..... 155
- Results ..... 28
  - Analyzing ..... 76
  - Data format (remote) ..... 159, 160
  - Stability ..... 22
- RF (Offline)
  - Softkey ..... 52
- RF attenuation ..... 49
- RF full span ..... 63
- RF input
  - Overload protection (remote) ..... 98
- RF Power
  - Trigger level (remote) ..... 110
- RF Spectrum
  - Evaluation method ..... 35
  - Troubleshooting ..... 86
- RF Time Domain
  - Evaluation method ..... 34
- RUN CONT
  - Key ..... 56
- RUN SINGLE
  - Key ..... 56
- S**
- Safety instructions ..... 10
- Sample rate ..... 21
- Samples
  - Performance ..... 22
- Saving
  - Settings ..... 41
- Scaling
  - AF ..... 66
  - Amplitude range, automatically ..... 69
  - Automatic ..... 68, 75
  - Configuration ..... 66
  - Result Summary ..... 68
  - RF ..... 68
  - Y-axis ..... 69
  - Y-axis (remote control) ..... 128
- Screen layout ..... 15
- Security procedures ..... 10
- Sequencer ..... 14
  - Activating (remote) ..... 116
  - Remote ..... 115
- Sequences
  - Aborting (remote) ..... 116
  - Mode (remote) ..... 116
- Service manual ..... 9
- Settings
  - Displayed ..... 41
  - filename ..... 40
  - Restoring files ..... 41
  - Storage location ..... 40
- Settings files
  - Deleting ..... 41
  - Loading ..... 41
  - Predefined ..... 165
  - Saving ..... 41
- Signal-to-noise ratio ..... 20
- Signal-to-noise-and-distortion
  - see SINAD ..... 37
- SINAD ..... 37
  - Querying (remote) ..... 158
  - Troubleshooting ..... 86
- Single sweep
  - Softkey ..... 56
- Softkeys
  - AM (Offline) ..... 52
  - Auto Level ..... 48, 74
  - Continue Single Sweep ..... 56
  - Continuous Sweep ..... 56
  - Display Config ..... 73
  - External ..... 52
  - FM (Offline) ..... 52
  - Outputs Config ..... 45
  - Overview ..... 41
  - PM (Offline) ..... 52
  - RF (Offline) ..... 52
  - Single Sweep ..... 56
- Span ..... 62
  - Displayed ..... 16
  - Manual ..... 62
- Specifics for
  - Configuration ..... 42
- Spectrograms
  - Activating/Deactivating ..... 76
  - Size ..... 76
- Spectrum
  - Demodulation ..... 60
- Squelch
  - AF ..... 58
  - Level ..... 58
  - Remote control ..... 123
  - State ..... 58
- Standards
  - Predefined ..... 165
  - Presetting ..... 40
  - see Digital standards ..... 39
- Status registers
  - STAT:QUES:POW ..... 98



Storage location	
Settings .....	40
Subwindows	
Spectrogram .....	76
Suffixes	
Common .....	92
Remote commands .....	88
Sweep	
Aborting .....	56
Settings .....	55
Sweep Count .....	57
Sweep points	
Displayed .....	16
Sweep Points .....	57
<b>T</b>	
THD .....	37
Querying (remote) .....	158
Troubleshooting .....	86
Unit .....	70
Time domain zoom .....	22, 59
Length .....	60
Start .....	59
State .....	59
Time per division	
Displayed .....	16
Time trigger	
Repetition interval .....	53
Total harmonic distortion	
see THD .....	37
Traces	
Detector (remote control) .....	139
Exporting .....	79
Trigger	
Drop-out time .....	53
Holdoff .....	54
Hysteresis .....	53
Offset .....	53
Offset, value range .....	21
Settings .....	51
Slope .....	54
Trigger level .....	53
I/Q Power (remote) .....	109
IF Power (remote) .....	109
RF Power (remote) .....	110
Trigger output .....	46
Trigger source .....	51
AF .....	22
AM (Offline) .....	52
External .....	52
FM (Offline) .....	52
Free Run .....	51
I/Q Power .....	52
IF Power .....	52
PM (Offline) .....	52
RF (Offline) .....	52
Time .....	52
Troubleshooting .....	86
Demodulation bandwidth .....	86
Input overload .....	98
RF Spectrum .....	86
SINAD .....	86
THD .....	86
<b>U</b>	
Units .....	70
Reference level .....	47, 48
Upper Level Hysteresis .....	75
<b>V</b>	
Videos .....	11
<b>W</b>	
Weighting filter	
AF filters .....	64
White papers .....	10
Window title bar information .....	16
Windows	
Adding (remote) .....	143
Closing (remote) .....	148
Configuring .....	42
Layout (remote) .....	145
Maximizing (remote) .....	142
Querying (remote) .....	144
Replacing (remote) .....	145
Splitting (remote) .....	142
Types (remote) .....	143
<b>Y</b>	
Y-axis	
Scaling .....	69
<b>Z</b>	
Zero Phase	
Reference Position (remote) .....	123
Zooming	
Time domain .....	22, 59